
XSR 1800 Series DIMM Upgrade Installation Guide

The standard XSR 1800 Series Dual In-line Memory Module (DIMM) of 32 or 64 MB (XSR-1805/1850) can easily be upgraded to 64 or 128 MB simply by disassembling the chassis, removing the existing DIMM, and installing the new DIMM. Refer to the XSR-1850 instructions below or the XSR-1805 instructions on [page 3](#).



Electrical Hazard: Only qualified personnel should perform installation procedures.

Riesgo Electrico: Solamente personal calificado debe realizar procedimientos de instalacion.

Elektrischer Gefahrenhinweis: Installationen sollten nur durch ausgebildetes und qualifiziertes Personal vorgenommen werden.

Before You Begin

To complete this installation, you need only a Phillips-head screwdriver and an antistatic wrist strap.



Caution: To prevent component damage from electrostatic discharge, use an antistatic wrist strap, and observe all electrostatic precautions during this procedure. Failure to do so could damage the DIMM, the XSR, or both.

XSR-1850 DIMM Upgrade Instructions

To upgrade the XSR-1850, follow the procedure described below:

1. Attach an antistatic wrist strap to your wrist.
2. Unplug the XSR-1850.




Electrical Hazard: Because you are removing the chassis cover and exposing electrical connections, the device must be disconnected from its power source to prevent electric shock.

Riesgo Electrico: Ya que se esta removiendo la cubierta del chassis y se esta expuesto a conexiones electricas, el dispositivo debe estar desconectado de la electricidad para prevenir un choque electrico.

Elektrischer Gefahrenhinweis: Da die Chassis-Abdeckung entfernt wird und somit die elektrischen Verbindungen freiliegen, muss das Gerät von der Stromzufuhr getrennt sein, um den Schutz vor Stromschlägen zu gewährleisten.

3. Unfasten the 15 screws holding the top cover of the chassis to the base, as shown in [Figure 1](#), then carefully pull the cover free of the base.

Figure 1 Removing Top Cover of Chassis

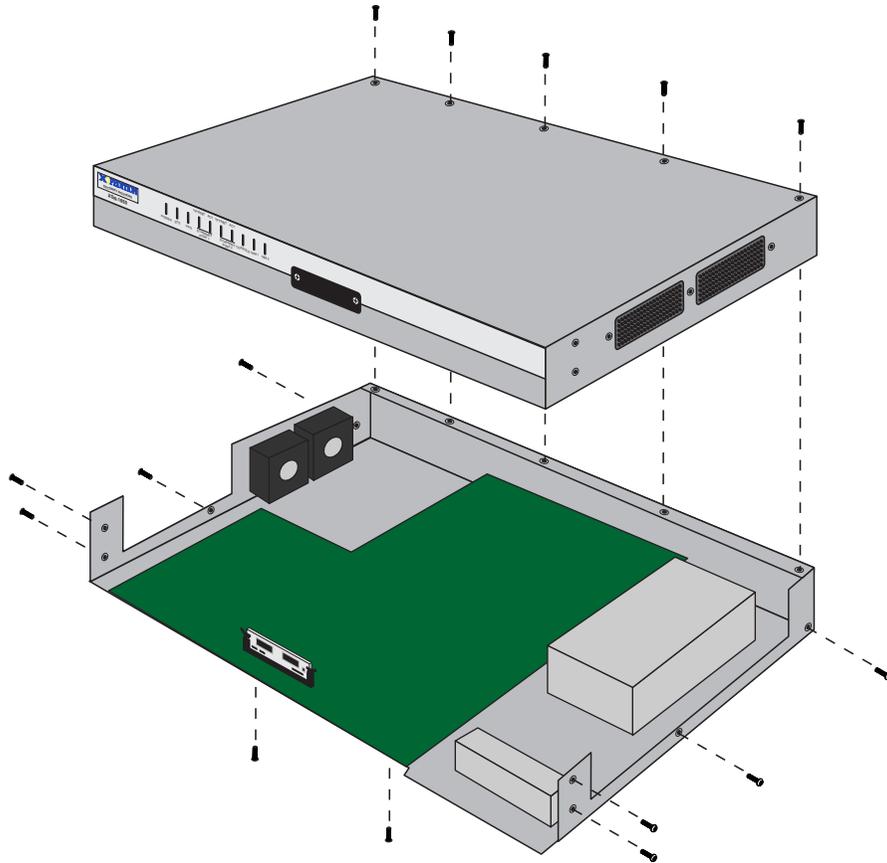


4. On the motherboard, gently pull the two beige handle clasps downward to release the DIMM card from its connector and remove, as shown in [Figure 2](#).

Figure 2 Removing the DIMM Card



5. Remove the new DIMM card from its package and insert in the 100-pin female DIMM connector, making sure that its notched lip lines up correctly with the connector. As you gently press the DIMM down into the connector, shown in [Figure 3](#), the handle clasps will partially close. Push the handle clasps in to firmly seat the card.

Figure 3 Installing new DIMM Card

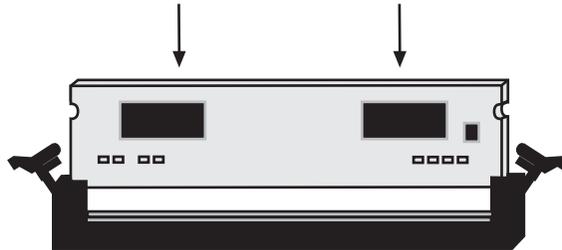

6. Reattach the top cover of the chassis to the base.

XSR-1805 DIMM Upgrade Instructions

To upgrade the XSR-1805, follow the procedure described below:

1. Attach an antistatic wrist strap to your wrist.



Caution: To prevent component damage from electrostatic discharge, use an antistatic wrist strap, and observe all electrostatic precautions during this procedure. Failure to do so could damage the DIMM, the XSR, or both.

2. Unplug the XSR-1805.




Electrical Hazard: Because you are removing the chassis cover and exposing electrical connections, the device must be disconnected from its power source to prevent electric shock.

Riesgo Electrico: Ya que se esta removiendo la cubierta del chassis y se esta expuesto a conexiones electricas, el dispositivo debe estar desconectado de la electricidad para prevenir un choque electrico.

Elektrischer Gefahrenhinweis: Da die Chassis-Abdeckung entfernt wird und somit die elektrischen Verbindungen freiliegen, muss das Gerat von der Stromzufuhr getrennt sein, um den Schutz vor Stromschlagen zu gewahrleisten.


- Unfasten the four screws holding the end caps to the chassis and unsnap them, as shown in [Figure 4](#). Also, carefully pull the front panel free of the chassis.

Figure 4 Removing End Caps and Front Panel

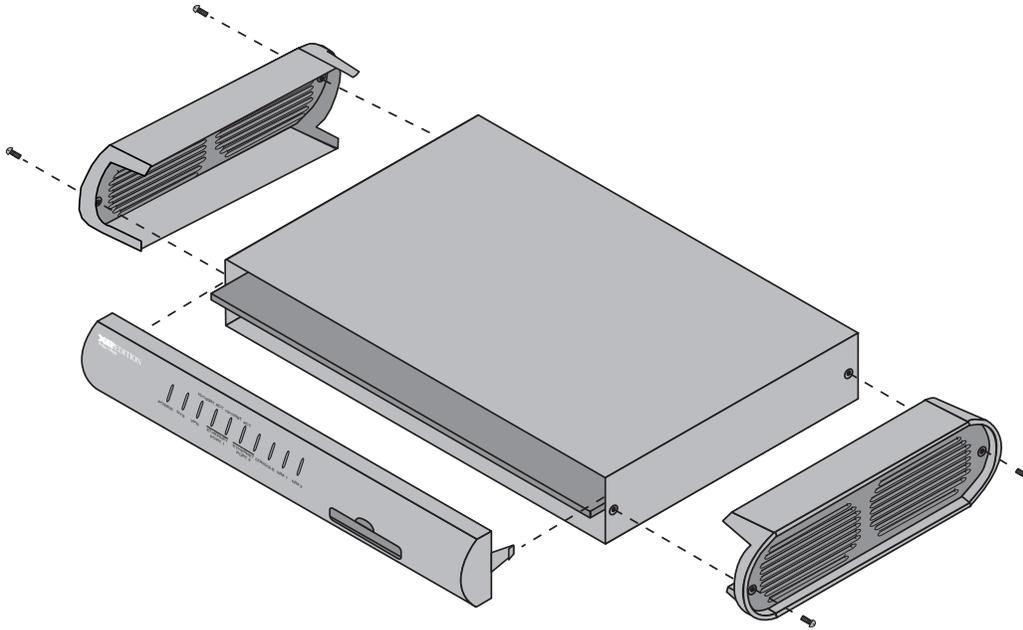


- Unfasten the four screws holding the chassis to the base plate and remove the chassis, as shown in [Figure 5](#).

Figure 5 Disassembling the Chassis

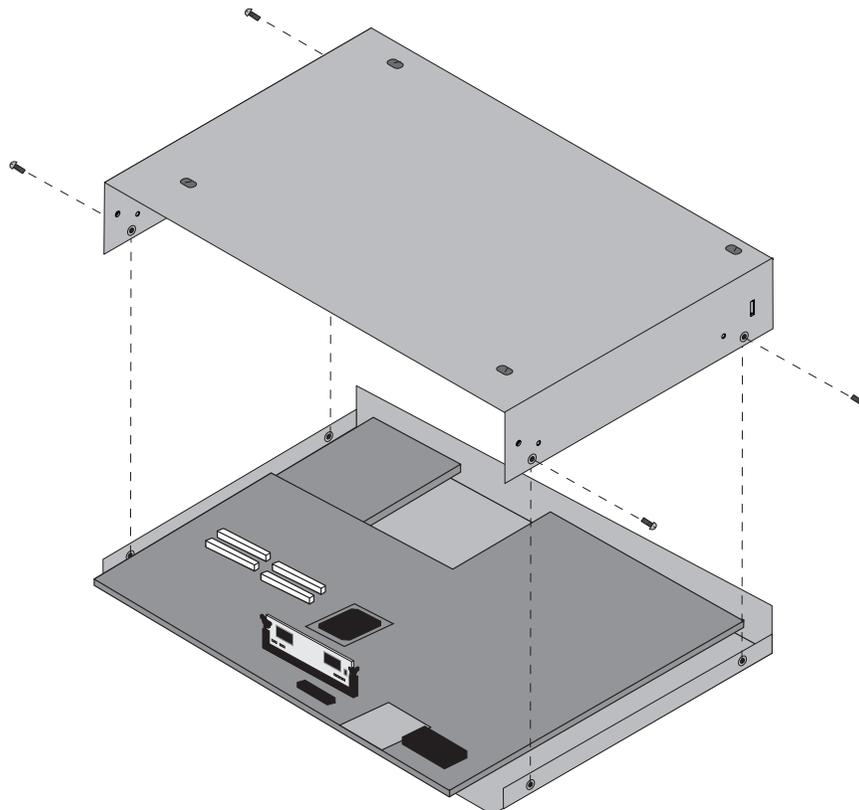


5. On the motherboard, gently pull the two beige handle clasps downward to release the DIMM card from its connector and remove, as shown in [Figure 6](#).

Figure 6 Removing the DIMM Card

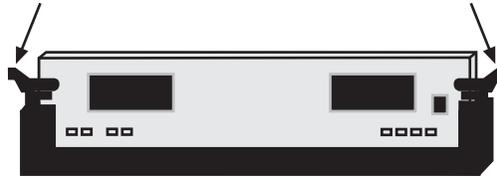


6. Remove the new DIMM card from its package and insert in the 100-pin female DIMM connector, making sure that its notched lip lines up correctly with the connector. As you gently press the DIMM down into the connector, shown in [Figure 7](#), the handle clasps will partially close. Push the handle clasps in to firmly seat the card.

Figure 7 Installing the DIMM Card

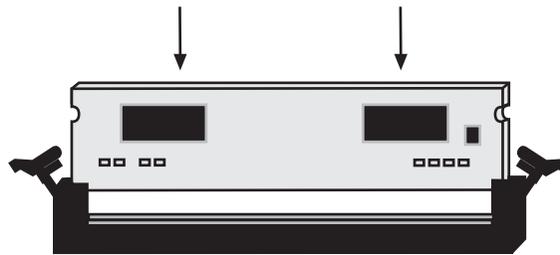

7. Reattach the chassis to the base plate and insert the front panel flanges into the chassis, as shown in [Figure 8](#). Be careful to align the XSR-1805's LED light pipes with the slots of the panel before firmly pushing it in. Finally, refasten the end caps with the four screws.

Figure 8 Reassembling the Chassis, End Caps, and Front Panel

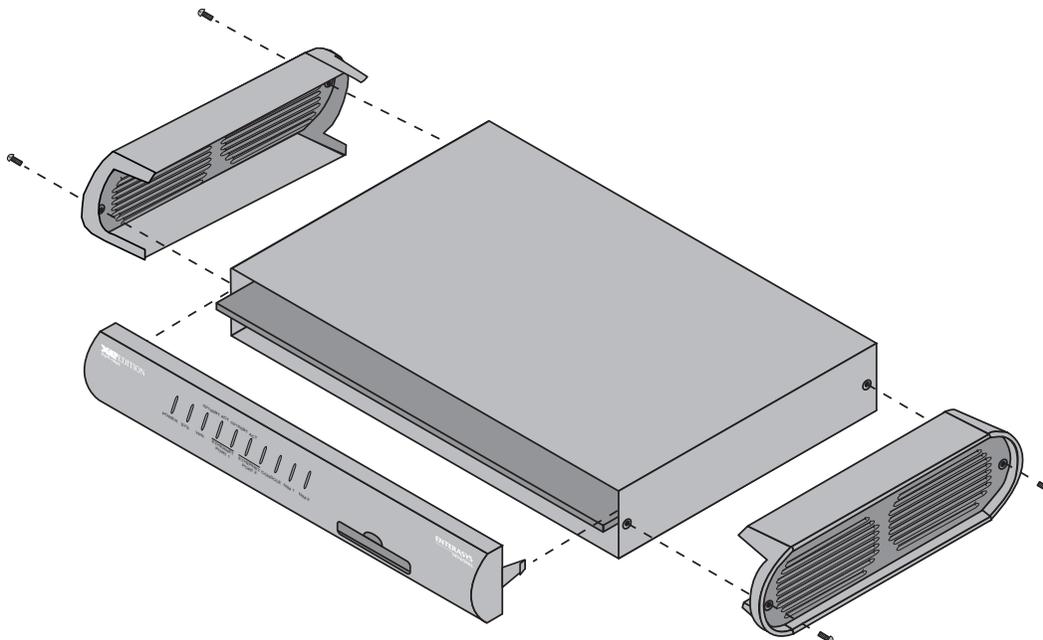

Contacting Enterasys Networks

For more information about Enterasys Networks, consult the following table:

U.S. office address	50 Minuteman Road Andover, MA 01810
Phone	603-332-9400 1-800-872-8440 (toll-free in U.S. and Canada) For the Enterasys Networks Support toll-free number in your country: http://www.enterasys.com/support/gtac-all.html
Internet mail	support@enterasys.com To expedite your message, please type [route] in the subject line.
FTP	
Login	anonymous
Password	your email address
Acquire the latest image and Release Notes	http://www.enterasys.com/download
Additional documentation	http://www.enterasys.com/support/manuals
Forward comments or suggestions	To send comments or suggestions concerning this document to the Technical Writing Department: techwriting@enterasys.com To expedite your message, please type [techwriting] in the subject line, and include the document Part Number in the email message.

Enterasys Networks reserves the right to make changes in specifications and other information contained in this document and its Web site without prior notice. The reader should in all cases consult Enterasys Networks to determine whether any such changes have been made. The hardware, firmware, or software described in this document is subject to change without notice.

IN NO EVENT SHALL ENTERASYS NETWORKS BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING BUT NOT LIMITED TO LOST PROFITS) ARISING OUT OF OR RELATED TO THIS DOCUMENT, WEB SITE, OR THE INFORMATION CONTAINED IN THEM, EVEN IF ENTERASYS NETWORKS HAS BEEN ADVISED OF, KNEW OF, OR SHOULD HAVE KNOWN OF, THE POSSIBILITY OF SUCH DAMAGES.

Enterasys Networks, Inc.
50 Minuteman Road
Andover, MA 01810

©2004 Enterasys Networks, Inc.
All Rights Reserved
Printed in the United States of America

Part Number: 9033929-02 July 2004

ENTERASYS NETWORKS, ENTERASYS XSR and any logos associated therewith, are trademarks or registered trademarks of Enterasys Networks, Inc. in the United States and other countries. All other product names mentioned in this manual may be trademarks or registered trademarks of their respective owners.

Documentation URL: <http://www.enterasys.com/support/manuals>

Documentacion URL: <http://www.enterasys.com/support/manuals>

Dokumentation <http://www.enterasys.com/support/manuals>