

53-1003456-02  
24 November 2014



# Network OS

---

## Command Reference

Supporting Network OS v5.0.1a

**BROCADE**

**© 2014, Brocade Communications Systems, Inc. All Rights Reserved.**

Brocade, the B-wing symbol, Brocade Assurance, ADX, AnyIO, DCX, Fabric OS, FastIron, HyperEdge, ICX, MLX, MyBrocade, NetIron, OpenScript, VCS, VDX, and Vyatta are registered trademarks, and The Effortless Network and the On-Demand Data Center are trademarks of Brocade Communications Systems, Inc., in the United States and in other countries. Other brands and product names mentioned may be trademarks of others.

Notice: This document is for informational purposes only and does not set forth any warranty, expressed or implied, concerning any equipment, equipment feature, or service offered or to be offered by Brocade. Brocade reserves the right to make changes to this document at any time, without notice, and assumes no responsibility for its use. This informational document describes features that may not be currently available. Contact a Brocade sales office for information on feature and product availability. Export of technical data contained in this document may require an export license from the United States government.

The authors and Brocade Communications Systems, Inc. assume no liability or responsibility to any person or entity with respect to the accuracy of this document or any loss, cost, liability, or damages arising from the information contained herein or the computer programs that accompany it.

The product described by this document may contain open source software covered by the GNU General Public License or other open source license agreements. To find out which open source software is included in Brocade products, view the licensing terms applicable to the open source software, and obtain a copy of the programming source code, please visit <http://www.brocade.com/support/oscd>.

# Contents

---

<b>Preface.....</b>	<b>29</b>
Document conventions.....	29
Text formatting conventions.....	29
Command syntax conventions.....	29
Notes, cautions, and warnings.....	30
Brocade resources.....	31
Contacting Brocade Technical Support.....	31
Document feedback.....	32
<b>About This Document.....</b>	<b>33</b>
Supported hardware and software.....	33
What's new in this document.....	33
<b>Using the Network OS CLI.....</b>	<b>35</b>
DCB command line interface.....	35
Saving your configuration changes.....	35
RBAC permissions .....	36
Default roles.....	36
Accessing the Network OS CLI through Telnet .....	36
Network OS CLI command modes.....	36
Network OS CLI keyboard shortcuts.....	41
Using the do command as a shortcut.....	42
Displaying Network OS CLI commands and command syntax.....	42
Completing Network OS CLI commands.....	43
Using Network OS CLI command output modifiers.....	43
Considerations for show command output .....	44
User-configurable VLAN IDs.....	44
<b>Commands A through E.....</b>	<b>47</b>
aaa authentication .....	47
accept-unicast-arp-request.....	49
access-group .....	50
access-list .....	51
activate (NSX Controller connection profile).....	52
activate (protected VLAG).....	53
activate (VXLAN gateway).....	54
address-family (BGP).....	55
address-family (Fabric-Virtual-Gateway).....	56
address-family (VRF).....	57
advertise dcbx-fcoe-app-tlv .....	58
advertise dcbx-fcoe-logical-link-tlv .....	59
advertise dcbx-iscsi-app-tlv .....	60
advertise dcbx-tlv .....	61
advertise dot1-tlv .....	62
advertise dot3-tlv .....	63
advertise optional-tlv .....	64
advertise-backup .....	65

advertisement interval (fabric-map).....	66
advertisement-interval (VRRP).....	67
advertisement-interval-scale .....	68
ag .....	69
ag enable .....	70
aggregate-address (BGP).....	71
alias .....	73
alias-config .....	74
allow non-profiled-macs .....	75
always-compare-med .....	76
always-propagate (BGP).....	77
area authentication (OSPFv3).....	78
area nssa (OSPF).....	80
area nssa (OSPFv3).....	81
area range (OSPF).....	83
area stub (OSPF).....	85
area virtual-link (OSPF).....	86
area virtual-link (OSPFv3).....	88
area virtual-link authentication (OSPFv3).....	90
arp .....	92
as-path-ignore .....	93
attach rbridge-id .....	94
attach rbridge-id (Fabric-Virtual-Gateway).....	95
attach vlan .....	96
auto-cost reference-bandwidth (OSPF).....	97
auto-cost reference-bandwidth (OSPFv3).....	98
backup-advertisement-interval .....	100
banner incoming .....	101
banner login .....	102
banner motd .....	103
bgp-redistribute-internal .....	104
bind .....	105
bpdu-drop enable .....	106
bridge-priority .....	107
capability as4 .....	108
capture packet interface .....	109
cbs .....	111
cee .....	112
cee-map (configuration).....	113
cee-map (FCoE).....	114
certutil import ldapca .....	115
certutil import sshkey .....	117
certutil import syslogca .....	119
channel-group .....	120
chassis .....	122
chassis beacon .....	123
chassis disable .....	124
chassis enable .....	125
chassis fan airflow-direction .....	126
cidrecov .....	127
cipherset .....	130
cisco-interoperability .....	131
class .....	132
class-map .....	134
clear ag nport-utilization.....	135
clear arp .....	136
clear counters .....	137
clear counters (IP).....	138

clear counters (MAC).....	140
clear counters access-list .....	142
clear counters interface .....	144
clear counters slot-id .....	146
clear counters storm-control .....	147
clear dot1x statistics .....	149
clear dot1x statistics interface .....	150
clear edge-loop-detection .....	151
clear fcoe login .....	152
clear ip bgp dampening .....	153
clear ip bgp flap-statistics .....	154
clear ip bgp local routes .....	155
clear ip bgp neighbor .....	156
clear ip bgp routes .....	157
clear ip bgp traffic .....	158
clear ip dhcp relay statistics .....	159
clear ip fabric-virtual-gateway.....	160
clear ip igmp groups .....	161
clear ip igmp statistics interface .....	162
clear ip ospf .....	163
clear ip pim mcache .....	165
clear ip pim rp-map .....	166
clear ip pim traffic .....	167
clear ip route .....	168
clear ipv6 bgp dampening .....	169
clear ipv6 bgp flap-statistics .....	170
clear ipv6 bgp local routes .....	171
clear ipv6 bgp neighbor.....	172
clear ipv6 bgp routes.....	174
clear ipv6 bgp traffic.....	175
clear ipv6 counters .....	176
clear ipv6 dhcp relay statistics .....	177
clear ipv6 fabric-virtual-gateway.....	178
clear ipv6 mld groups .....	179
clear ipv6 mld statistics .....	180
clear ipv6 neighbor .....	181
clear ipv6 ospf .....	182
clear ipv6 route .....	184
clear ipv6 vrrp statistics .....	185
clear lacp .....	186
clear lacp counters .....	187
clear lldp neighbors .....	188
clear lldp statistics .....	189
clear logging auditlog .....	190
clear logging raslog .....	191
clear mac-address-table conversational.....	192
clear mac-address-table dynamic .....	193
clear nas statistics .....	194
clear overlay-gateway .....	195
clear policy-map-counters .....	196
clear sessions .....	197
clear sflow statistics .....	198
clear spanning-tree counter .....	199
clear spanning-tree detected-protocols .....	200
clear support .....	201
clear udd statistics .....	202
clear vrrp statistics .....	203
client-to-client-reflection .....	204

clock set .....	205
clock timezone (Privileged EXEC mode) .....	206
clock timezone (RBridge ID configuration mode).....	207
cluster-id .....	208
compare-med-empty-aspath .....	209
compare-routerid .....	210
confederation identifier.....	211
confederation peers.....	212
configure terminal .....	213
conform-set-dscp .....	214
conform-set-prec .....	215
conform-set-tc .....	216
connector-group.....	217
connector .....	218
continue .....	219
copy .....	220
copy default-config startup-config .....	222
copy running-config startup-config .....	223
copy snapshot (logical chassis cluster mode).....	224
copy support .....	225
copy support-interactive .....	227
cos-mutation .....	228
counter reliability .....	229
dampening .....	230
database-overflow-interval (OSPF).....	232
database-overflow-interval (OSPFv3).....	233
debug access-list-log buffer .....	234
debug dhcp packet buffer clear .....	235
debug dhcp packet buffer .....	236
debug dhcp packet buffer interface .....	237
debug fcoe show swcfg .....	239
debug ip .....	240
debug ip bgp .....	241
debug ip bgp address-family ipv4 unicast .....	243
debug ip bgp neighbor .....	244
debug ip fabric-virtual-gateway.....	245
debug ip igmp .....	246
debug ip ospf .....	247
debug ip pim .....	249
debug ip rtm .....	250
debug ip vrf .....	252
debug ipv6 dhcpv6 packet buffer.....	253
debug ipv6 mld.....	254
debug ipv6 nd.....	256
debug ipv6 ospf .....	257
debug ipv6 packet buffer.....	259
debug lACP .....	261
debug lldp dump .....	263
debug lldp packet .....	265
debug show qos drop-reason.....	266
debug spanning-tree .....	268
debug udld packet .....	270
debug vrrp .....	271
default-information-originate (BGP).....	273
default-information-originate (OSPF).....	274
default-local-preference .....	275
default-metric (BGP).....	276
default-metric (OSPF).....	277

default-passive-interface .....	278
delete .....	279
description (interfaces).....	280
description (LLDP).....	281
description (Port Mirroring).....	282
description (VRRP).....	283
destination .....	284
dhcp auto-deployment enable .....	285
diag burninerrclear .....	286
diag clearerror .....	287
diag portledtest .....	288
diag portloopbacktest .....	290
diag post enable .....	292
diag prbstest .....	293
diag setcycle .....	294
diag systemverification .....	296
diag turboramtest .....	297
dir .....	298
disable (Fabric-Virtual-Gateway).....	299
distance (BGP).....	300
distance (OSPF).....	301
distribute-list route-map .....	302
distribute-list prefix-list (OSPFv3).....	303
dot1x authentication .....	304
dot1x enable .....	305
dot1x port-control .....	306
dot1x quiet-period .....	307
dot1x reauthenticate interface .....	308
dot1x reauthentication .....	309
dot1x reauthMax .....	310
dot1x test eapol-capable .....	311
dot1x test timeout .....	312
dot1x timeout re-authperiod .....	313
dot1x timeout server-timeout .....	314
dot1x timeout supp-timeout .....	315
dot1x timeout tx-period .....	316
dpod .....	317
dscp-cos .....	318
dscp-mutation .....	319
dscp-traffic-class .....	320
ebs .....	321
edge-loop-detection port-priority .....	322
edge-loop-detection vlan .....	323
eir .....	324
enable .....	325
enable (Fabric-Virtual-Gateway).....	326
enable statistics direction .....	327
end .....	328
enforce-first-as .....	329
error-disable-timeout enable .....	330
error-disable-timeout interval .....	331
exceed-set-dscp .....	332
exceed-set-prec .....	333
exceed-set-tc .....	334
exit .....	335
extend vlan .....	336
external-lsdb-limit (OSPF).....	337
external-lsdb-limit (OSPFv3).....	338

<b>Commands F through O.....</b>	<b>339</b>
fabric ecmp load-balance .....	339
fabric ecmp load-balance-hash-swap .....	340
fabric isl enable .....	341
fabric neighbor-discovery disable .....	342
fabric port-channel.....	343
fabric route mcast .....	344
fabric trunk enable .....	345
fabric-map .....	346
fast-external-falover .....	347
fastboot .....	348
fcmap .....	349
fcoe .....	350
fcoe-enodes .....	351
fcoe-profile (AMPP).....	352
fcoeport .....	353
fcsp auth .....	354
fcsp auth-secret dhchap .....	356
fec-enable.....	357
fill-word .....	358
filter-change-update-delay .....	359
fips root disable .....	360
fips selftests .....	361
fips zeroize .....	362
firmware activate .....	363
firmware commit .....	364
firmware download .....	365
firmware download ftp .....	368
firmware download interactive .....	370
firmware download logical-chassis .....	371
firmware download scp .....	373
firmware download sftp .....	375
firmware download usb .....	377
firmware install .....	379
firmware recover .....	381
firmware restore .....	382
firmware sync .....	383
flexport.....	384
forward-delay .....	385
gateway-address.....	386
gateway-mac-address.....	387
graceful-restart (BGP).....	388
graceful-restart (OSPF).....	390
graceful-restart helper (OSPFv3).....	391
gratuitous-arp timer.....	392
ha chassisreboot .....	393
ha disable .....	394
ha enable .....	395
ha failover .....	396
ha sync start .....	397
ha sync stop .....	398
hardware .....	399
hardware-profile.....	400
hello-interval (ELD).....	402
hello (LLDP).....	403
hello (UDLD).....	404



hello-interval .....	405
hello-time .....	406
hello-timer .....	407
hold-time .....	408
hold-time (Fabric-Virtual-Gateway).....	409
http server shutdown .....	410
inactivity-timer .....	411
install-igp-cost .....	412
instance .....	413
interface .....	414
interface (range specification).....	416
interface loopback .....	419
interface management .....	420
interface ve .....	422
interface vlan .....	423
ip access-group .....	424
ip access-list .....	426
ip address .....	427
ip address (NSX controller configuration).....	428
ip address (VXLAN).....	429
ip arp-aging-timeout .....	430
ip as-path access-list .....	431
ip community-list extended .....	432
ip community-list standard .....	433
ip dhcp relay address .....	434
ip directed-broadcast .....	435
ip dns .....	436
ip echo-reply .....	437
ip extcommunity-list.....	438
ip fabric-virtual-gateway.....	439
ip http-server enable .....	440
ip icmp rate-limit .....	441
ip igmp immediate-leave .....	442
ip igmp last-member-query-interval .....	443
ip igmp query-interval .....	444
ip igmp query-max-response-time .....	445
ip igmp snooping enable (global version).....	446
ip igmp snooping enable .....	447
ip igmp snooping fast-leave .....	448
ip igmp snooping mrouter .....	449
ip igmp snooping mrouter-timeout .....	450
ip igmp snooping querier enable .....	451
ip igmp snooping restrict-unknown-multicast .....	452
ip igmp static-group .....	453
ip import routes (IPv4 VRF address-family configuration mode).....	454
ip import routes (RBridge ID configuration mode).....	455
ip interface .....	456
ip mtu .....	458
ip multicast-boundary .....	459
ip ospf active .....	460
ip ospf area .....	461
ip ospf auth-change-wait-time .....	462
ip ospf authentication-key .....	463
ip ospf cost .....	464
ip ospf database-filter .....	465
ip ospf dead-interval .....	467
ip ospf hello-interval .....	468
ip ospf md5-authentication .....	469

ip ospf mtu-ignore .....	471
ip ospf network .....	472
ip ospf passive .....	473
ip ospf priority .....	474
ip ospf retransmit-interval .....	475
ip ospf transmit-delay .....	476
ip pim dr-priority .....	477
ip pim-sparse .....	478
ip policy route-map .....	479
ip prefix-list .....	480
ip proxy-arp .....	481
ip route .....	482
ip route next-hop-vrf .....	484
ip router-id .....	485
ip unreachable .....	486
ipv6 access-group .....	487
ipv6 access-list .....	489
ipv6 address .....	490
ipv6 address anycast .....	491
ipv6 address eui-64 .....	492
ipv6 address link-local .....	493
ipv6 address use-link-local-only .....	494
ipv6 dhcp relay address .....	495
ipv6 echo-reply .....	497
ipv6 fabric-virtual-gateway~ .....	498
ipv6 icmp rate-limit .....	499
ipv6 import routes (IPv6 VRF address-family configuration mode).....	500
ipv6 import routes(RBridge ID configuration mode).....	501
ipv6 mld last-member-query-count .....	502
ipv6 mld last-member-query-interval .....	503
ipv6 mld query-interval .....	504
ipv6 mld query-max-response-time .....	505
ipv6 mld snooping enable .....	506
ipv6 mld snooping fast-leave .....	507
ipv6 mld snooping mrouter interface .....	508
ipv6 mld snooping querier enable .....	509
ipv6 mld snooping restrict-unknown-multicast .....	510
ipv6 mld snooping robustness-variable .....	511
ipv6 mld startup-query-count .....	512
ipv6 mld startup-query-interval .....	513
ipv6 mld static-group interface .....	514
ipv6 mtu .....	515
ipv6 nd cache expire .....	516
ipv6 nd dad attempts .....	517
ipv6 nd dad time .....	518
ipv6 nd hoplimit .....	519
ipv6 nd managed-config-flag .....	520
ipv6 nd mtu .....	521
ipv6 nd ns-interval .....	522
ipv6 nd other-config-flag .....	523
ipv6 nd prefix .....	524
ipv6 nd ra-interval .....	525
ipv6 nd ra-lifetime .....	526
ipv6 nd reachable-time .....	527
ipv6 nd retrans-timer .....	528
ipv6 nd suppress-ra .....	529
ipv6 neighbor .....	530
ipv6 ospf active .....	531

ipv6 ospf area .....	532
ipv6 ospf authentication ipsec .....	533
ipv6 ospf authentication ipsec disable .....	534
ipv6 ospf authentication spi.....	535
ipv6 ospf cost .....	537
ipv6 ospf dead-interval .....	538
ipv6 ospf hello-interval .....	539
ipv6 ospf hello-jitter .....	540
ipv6 ospf instance .....	541
ipv6 ospf mtu-ignore .....	542
ipv6 ospf network .....	543
ipv6 ospf passive .....	544
ipv6 ospf priority .....	545
ipv6 ospf retransmit-interval .....	546
ipv6 ospf suppress-linklsa .....	547
ipv6 ospf transmit-delay .....	548
ipv6 prefix-list.....	549
ipv6 protocol vrrp .....	551
ipv6 protocol vrrp-extended .....	552
ipv6 route .....	553
ipv6 router ospf .....	555
ipv6 unreachable .....	556
ipv6 vrrp-extended-group .....	557
ipv6 vrrp-group .....	558
ipv6 vrrp-suppress-ra .....	559
iscsi-priority .....	560
isl-r_rdy .....	561
keep-alive timeout (fabric-map).....	562
key-add-remove-interval.....	563
key-rollover-interval.....	564
l2traceroute .....	565
lACP default-up .....	567
lACP port-priority .....	568
lACP system-priority .....	569
lACP timeout .....	570
LDAP-server host .....	571
LDAP-server maprole .....	573
license add .....	574
license remove .....	575
line vty exec-timeout .....	576
linecard .....	577
lldp dcbx-version .....	579
lldp disable .....	580
lldp iscsi-priority .....	581
lldp profile .....	582
load-balance .....	583
load-balancing.....	584
load-balancing-disable.....	585
local-as (BGP).....	586
log-dampening-debug .....	587
log-status-change .....	588
logging auditlog class .....	589
logging raslog console .....	590
logging syslog-facility local .....	591
logging syslog-server .....	592
logical-chassis principal-priority .....	593
logical-chassis principal-switchover .....	594
long-distance-isl .....	595

mac .....	598
mac access-group .....	599
mac access-list extended .....	600
mac access-list standard .....	601
mac-address-reduction .....	602
mac-address-table .....	603
mac-group .....	605
mac-learning disable vlan.....	606
mac-rebalance .....	608
mac-refresh.....	609
management .....	610
map fport interface fcoe .....	611
map qos .....	612
map sflow .....	613
map vlan .....	614
match .....	616
match (route map).....	617
match access-list .....	619
match as-path .....	620
match community .....	621
match extcommunity.....	622
match interface .....	623
match ip address .....	624
match ip next-hop .....	625
match ipv6 address .....	626
match metric .....	627
match protocol bgp .....	628
match route-type .....	629
match tag .....	630
max-age .....	631
max-hops .....	632
max-mcache .....	633
max-metric router-lsa .....	634
max-route .....	636
maxas-limit .....	637
maximum-paths (BGP).....	638
maximum-paths ebgp ibgp (BGP).....	639
med-missing-as-worst .....	640
message-interval .....	641
metric-type .....	642
minimum-links .....	643
mode .....	644
mode (27x40 GbE line card).....	645
modes .....	646
monitor session .....	647
monitor session (VXLAN).....	648
mtu .....	650
multipath (BGP).....	651
multiplier (LLDP).....	652
multiplier (UDLD).....	653
name (VLAN interfaces).....	654
nas auto-qos.....	655
nas server-ip.....	656
nbr-timeout .....	657
neighbor (BGP).....	658
neighbor (OSPF).....	661
neighbor activate.....	662
neighbor advertisement-interval .....	663

neighbor allowas-in .....	664
neighbor as-override .....	665
neighbor capability as4 .....	666
neighbor capability orf prefixlist.....	667
neighbor default-originate .....	668
neighbor description .....	669
neighbor ebgp-multihop .....	670
neighbor enforce-first-as (BGP).....	671
neighbor filter-list .....	672
neighbor local-as .....	673
neighbor maxas-limit in .....	674
neighbor maximum-prefix .....	675
neighbor next-hop-self .....	676
neighbor password .....	677
neighbor peer-group .....	678
neighbor prefix-list .....	679
neighbor remote-as .....	680
neighbor remove-private-as.....	681
neighbor route-map .....	682
neighbor route-reflector-client .....	683
neighbor send-community .....	684
neighbor shutdown .....	685
neighbor soft-reconfiguration inbound .....	686
neighbor timers .....	687
neighbor unsuppress-map .....	688
neighbor update-source .....	689
neighbor weight .....	690
network (BGP).....	691
next-hop-enable-default .....	692
next-hop-recursion .....	693
nonstop-routing .....	694
nport .....	695
nport interface Fibrechannel .....	696
nssa-translator .....	697
nsx-controller client-cert .....	698
nsx-controller name .....	699
nsx-controller name reconnect .....	700
ntp authentication-key .....	701
ntp server .....	702
oscmd .....	703
overlay-gateway .....	705

**Commands P through short-path-forwarding..... 707**

password-attributes .....	707
password-attributes admin-lockout enable .....	709
pdu-rx-limit .....	710
pg .....	711
ping .....	712
police cir .....	714
police-priority-map .....	715
policy-map .....	717
port-channel .....	718
port-channel-redundancy-group .....	719
port-channel path-cost .....	720
port-group .....	721
port-profile (global configuration mode).....	722
port-profile (port-profile-domain configuration mode).....	723

port-profile-domain .....	724
port-profile-port .....	725
power-off .....	727
power-off linecard .....	728
power-on .....	729
power-on linecard .....	730
precedence .....	731
preempt-mode .....	732
priority .....	733
priority-group-table .....	734
priority-tag .....	736
private-vlan .....	737
private-vlan association .....	738
profile .....	739
prom-access disable .....	740
protect-mode enable .....	741
protocol edge-loop-detection .....	742
protocol lldp .....	743
protocol spanning-tree .....	744
protocol udld .....	745
protocol vrrp .....	746
protocol vrrp-extended .....	747
pwd .....	748
qos.....	749
qos cos .....	750
qos cos-mutation .....	751
qos cos-traffic-class .....	752
qos dscp-cos .....	753
qos dscp-mutation .....	754
qos dscp-traffic-class .....	755
qos flowcontrol .....	756
qos flowcontrol pfc .....	757
qos map cos-mutation .....	758
qos map cos-traffic-class .....	760
qos map dscp-cos .....	762
qos map dscp-mutation .....	763
qos map dscp-traffic-class .....	765
qos queue multicast scheduler .....	766
qos queue scheduler .....	768
qos random-detect traffic-class .....	770
qos rcv-queue cos-threshold .....	771
qos rcv-queue limit.....	773
qos rcv-queue multicast rate-limit .....	774
qos rcv-queue multicast threshold .....	775
qos red profile .....	777
qos service-policy.....	778
qos trust cos .....	779
qos trust dscp .....	780
qos tx-queue limit.....	782
qos-profile (AMPP).....	783
radius-server .....	784
rasman .....	786
rate-limit-delay get netconf .....	788
rate-limit-delay set netconf .....	789
rbridge-id .....	790
rd (route distinguisher).....	791
reconnect-interval .....	792
redistribute (BGP).....	793

redistribute (OSPF).....	795
region .....	796
reload .....	797
remap fabric-priority .....	799
remap lossless-priority .....	800
rename .....	801
rename (Access Gateway mode).....	802
resequence access-list .....	803
reserved-vlan .....	805
restrict-flooding .....	806
revision .....	807
rfc1583-compatibility (OSPF).....	808
rfc1587-compatibility (OSPF).....	809
rib-route-limit (BGP).....	810
rmon alarm .....	811
rmon collection history .....	812
rmon collection stats .....	813
rmon event .....	814
role name .....	815
root access console.....	816
root enable.....	817
route-map .....	818
router bgp .....	819
router fabric-virtual-gateway.....	820
router ospf .....	821
router pim .....	822
route-target .....	823
rp-address .....	824
rspan-vlan .....	825
rule .....	826
scheduler .....	827
script reload.....	828
secpolicy activate .....	829
secpolicy defined-policy .....	830
security-profile (AMPP).....	832
seq (IPv4 extended ACLs).....	833
seq (IPv6 extended ACLs).....	837
seq (IPv4 standard ACLs).....	841
seq (IPv6 standard ACLs).....	843
seq (MAC extended ACLs).....	845
seq (MAC standard ACLs).....	848
service password-encryption .....	850
service-policy .....	851
set as-path .....	852
set as-path prepend .....	853
set automatic-tag .....	856
set comm-list .....	857
set community .....	858
set cos traffic-class .....	859
set dampening .....	860
set distance .....	861
set dscp .....	862
set extcommunity.....	863
set ip interface null0 .....	864
set ip next-hop .....	865
set ipv6 next-hop .....	866
set local-preference .....	867
set metric .....	868

set metric-type .....	869
set origin .....	870
set-priority .....	871
set route-type .....	872
set tag .....	873
set weight .....	874
sflow collector .....	875
sflow enable (global version).....	876
sflow enable (interface version).....	877
sflow polling-interval (global version).....	878
sflow polling-interval (interface version).....	879
sflow sample-rate (global version).....	880
sflow sample-rate (interface version).....	881
sflow-profile .....	882
sflow profile-map.....	883
sflow (VXLAN).....	884
sfp breakout .....	885
shape .....	886
short-path-forwarding .....	887
<b>Show commands.....</b>	<b>889</b>
show access-list .....	889
show access-list-log buffer .....	892
show access-list-log buffer config.....	893
show ag .....	894
show ag map .....	895
show ag nport-utilization.....	897
show ag pg .....	898
show arp .....	899
show bpdu-drop .....	900
show capture packet interface .....	901
show cee maps .....	902
show cert-util ldapca .....	903
show cert-util sshkey .....	904
show cert-util syslogca .....	905
show chassis .....	906
show cipherset .....	910
show class-maps .....	911
show cli .....	912
show cli history .....	913
show clock .....	914
show config snapshot .....	915
show copy-support status .....	916
show dadstatus .....	917
show debug dhcp packet .....	918
show debug dhcp packet buffer .....	919
show debug ip bgp all .....	922
show debug ip igmp .....	923
show debug ip pim .....	924
show debug ipv6 packet.....	925
show debug lacp .....	926
show debug lldp .....	927
show debug spanning-tree .....	928
show debug udd .....	929
show debug vrrp .....	930
show defaults threshold .....	931
show default-vlan .....	933



show dpod .....	934
show diag burninerrshow .....	936
show diag burninerrshowerrLog .....	937
show diag burninstatus .....	938
show diag post results .....	939
show diag setcycle .....	940
show diag status .....	941
show dot1x .....	942
show dot1x all .....	943
show dot1x diagnostics interface .....	944
show dot1x interface .....	945
show dot1x session-info interface .....	946
show dot1x statistics interface .....	947
show dpod .....	948
show edge-loop-detection detail .....	949
show edge-loop-detection globals .....	950
show edge-loop-detection interface .....	951
show edge-loop-detection rbridge-id .....	953
show environment fan .....	954
show environment history .....	955
show environment power .....	957
show environment sensor .....	958
show environment temp .....	959
show fabric all .....	960
show fabric ecmp group.....	961
show fabric ecmp load-balance .....	963
show fabric isl .....	964
show fabric islports .....	968
show fabric port-channel .....	972
show fabric route linkinfo .....	973
show fabric route multicast .....	977
show fabric route neighbor-state .....	979
show fabric route pathinfo .....	982
show fabric route topology .....	990
show fabric trunk .....	992
show fcoe fabric-map .....	994
show fcoe fcoe-enodes.....	995
show fcoe interface .....	996
show fcoe login .....	997
show fcoe map .....	998
show fcsp auth-secret dh-chap .....	999
show fibrechannel login .....	1000
show file .....	1001
show fips .....	1002
show firmwaredownloadhistory .....	1003
show firmwaredownloadstatus .....	1004
show global-running-config .....	1006
show ha .....	1009
show hardware connector-group.....	1011
show hardware-profile.....	1012
show history .....	1014
show interface .....	1015
show interface description .....	1018
show interface FibreChannel .....	1019
show interface management .....	1025
show interface stats .....	1027
show interface status .....	1029
show interface trunk .....	1030

show inventory .....	1031
show ip bgp .....	1032
show ip bgp attribute-entries .....	1033
show ip bgp dampened-paths .....	1034
show ip bgp filtered-routes .....	1035
show ip bgp flap-statistics .....	1036
show ip bgp neighbors .....	1037
show ip bgp neighbors advertised-routes .....	1038
show ip bgp neighbors flap-statistics .....	1039
show ip bgp neighbors received .....	1040
show ip bgp neighbors received-routes .....	1041
show ip bgp neighbors routes .....	1042
show ip bgp neighbors routes-summary .....	1043
show ip bgp peer-group .....	1044
show ip bgp routes .....	1045
show ip bgp routes age .....	1046
show ip bgp routes as-path-access-list .....	1047
show ip bgp routes community .....	1048
show ip bgp routes community-access-list .....	1049
show ip bgp routes community-reg-expression .....	1050
show ip bgp routes longer-prefixes .....	1051
show ip bgp routes neighbor nexthop local unreachable .....	1052
show ip bgp routes prefix-list regular-expression route-map .....	1053
show ip bgp routes summary detail .....	1054
show ip dhcp relay address interface .....	1055
show ip dhcp relay address rbridge-id .....	1057
show ip dhcp relay statistics .....	1059
show ip fabric-virtual-gateway.....	1061
show ip igmp groups .....	1062
show ip igmp interface .....	1064
show ip igmp snooping .....	1066
show ip igmp statistics .....	1067
show ip interface .....	1068
show ip interface loopback .....	1071
show ip interface ve .....	1072
show ip ospf .....	1073
show ip ospf area .....	1074
show ip ospf border-routers .....	1076
show ip ospf config .....	1077
show ip ospf database .....	1078
show ip ospf interface .....	1081
show ip ospf neighbor .....	1083
show ip ospf redistribute route .....	1085
show ip ospf routes .....	1086
show ip ospf summary .....	1087
show ip ospf traffic .....	1088
show ip ospf virtual .....	1089
show ip pim bsr .....	1090
show ip pim group .....	1091
show ip pim mcache .....	1092
show ip pim neighbor .....	1093
show ip pim rpf .....	1094
show ip pim rp-hash .....	1095
show ip pim rp-map .....	1096
show ip pim rp-set .....	1097
show ip pim-sparse .....	1098
show ip pim traffic .....	1099
show ip route .....	1100

show ip route import.....	1104
show ip route system-summary .....	1105
show ipv6 bgp attribute-entries.....	1106
show ipv6 bgp dampened-paths.....	1107
show ipv6 bgp filtered-routes.....	1108
show ipv6 bgp flap-statistics.....	1111
show ipv6 bgp neighbors.....	1113
show ipv6 bgp neighbors advertised-routes.....	1115
show ipv6 bgp neighbors flap-statistics.....	1118
show ipv6 bgp neighbors last-packet-with-error.....	1119
show ipv6 bgp neighbors received.....	1120
show ipv6 bgp neighbors received-routes.....	1121
show ipv6 bgp neighbors rib-out-routes.....	1123
show ipv6 bgp neighbors routes.....	1125
show ipv6 bgp neighbors routes-summary.....	1126
show ipv6 bgp peer-group.....	1129
show ipv6 bgp routes.....	1130
show ipv6 bgp summary.....	1134
show ipv6 counters interface .....	1137
show ipv6 dhcp relay address interface .....	1138
show ipv6 dhcp relay address rbridge-id .....	1140
show ipv6 dhcp relay statistics .....	1142
show ipv6 fabric-virtual-gateway.....	1144
show ipv6 interface .....	1145
show ipv6 mld groups .....	1147
show ipv6 mld interface.....	1148
show ipv6 mld snooping .....	1149
show ipv6 mld statistics .....	1150
show ipv6 nd interface .....	1151
show ipv6 neighbor .....	1153
show ipv6 ospf area .....	1155
show ipv6 ospf database .....	1156
show ipv6 ospf interface .....	1162
show ipv6 ospf memory .....	1164
show ipv6 ospf neighbor .....	1165
show ipv6 ospf redistribute route .....	1167
show ipv6 ospf routes .....	1168
show ipv6 ospf spf .....	1169
show ipv6 ospf summary .....	1171
show ipv6 ospf virtual-links .....	1172
show ipv6 ospf virtual-neighbor .....	1174
show ipv6 prefix-list .....	1175
show ipv6 route .....	1176
show ipv6 route import.....	1178
show ipv6 route system-summary .....	1179
show ipv6 static route .....	1180
show ipv6 vrrp .....	1181
show lacp .....	1183
show lacp sys-id .....	1184
show license .....	1185
show license id .....	1186
show linecard .....	1187
show lldp interface .....	1188
show lldp neighbors .....	1189
show lldp statistics .....	1191
show logging auditlog .....	1192
show logging raslog .....	1193
show mac-address-table .....	1195

show media .....	1197
show media interface .....	1198
show media linecard .....	1200
show mm .....	1202
show monitor .....	1203
show name-server brief .....	1204
show name-server detail .....	1205
show name-server nodefind .....	1207
show name-server zonemember .....	1208
show nas statistics.....	1210
show netconf client-capabilities .....	1211
show netconf-state capabilities .....	1212
show netconf-state datastores .....	1213
show netconf-state schemas .....	1214
show netconf-state sessions .....	1215
show netconf-state statistics .....	1216
show notification stream .....	1217
show nsx controller .....	1218
show ntp status .....	1220
show overlapping-vlan-resource usage .....	1221
show overlay-gateway .....	1222
show policymap .....	1224
show port port-channel .....	1226
show port-channel .....	1227
show port-channel-redundancy-group .....	1228
show port-profile .....	1229
show port-profile domain .....	1230
show port-profile interface .....	1231
show port-profile name .....	1232
show port-security .....	1233
show port-security addresses .....	1234
show port-security interface .....	1235
show port-security oui interface .....	1236
show port-security sticky interface .....	1237
show process cpu .....	1238
show process info .....	1239
show process memory .....	1240
show prom-access .....	1242
show qos flowcontrol interface .....	1243
show qos interface .....	1244
show qos maps .....	1246
show qos maps dscp-cos .....	1247
show qos maps dscp-mutation .....	1248
show qos maps dscp-traffic-class .....	1249
show qos queue interface .....	1250
show qos rcv-queue interface .....	1251
show qos rcv-queue multicast .....	1252
show qos red profiles .....	1253
show qos red statistics interface .....	1254
show qos tx-queue interface .....	1255
show rbridge-id .....	1256
show rbridge-running config .....	1257
show rbridge-local-running-config .....	1258
show redundancy .....	1261
show rmon .....	1262
show rmon history .....	1264
show route-map .....	1265
show route-map interface .....	1267

show running reserved-vlan .....	1269
show running-config .....	1270
show running-config aaa .....	1271
show running-config aaa accounting .....	1272
show running-config access-list .....	1273
show running-config ag .....	1274
show running-config banner .....	1276
show running-config cee-map .....	1277
show running-config class-map .....	1278
show running-config diag post .....	1279
show running-config dot1x .....	1280
show running-config dpod .....	1281
show running-config fabric route mcast .....	1282
show running-config fcoe .....	1283
show running-config fcsp auth .....	1284
show running-config hardware.....	1285
show running-config hardware connector .....	1286
show running-config interface fcoe .....	1287
show running-config interface FibreChannel .....	1288
show running-config interface fortygigabitethernet .....	1290
show running-config interface fortygigabitethernet bpdu-drop .....	1291
show running-config interface fortygigabitethernet cee .....	1292
show running-config interface fortygigabitethernet channel-group .....	1293
show running-config interface fortygigabitethernet description .....	1294
show running-config interface fortygigabitethernet dot1x .....	1295
show running-config interface fortygigabitethernet fabric .....	1297
show running-config interface fortygigabitethernet fcoeport .....	1298
show running-config interface fortygigabitethernet lacp .....	1299
show running-config interface fortygigabitethernet lldp .....	1300
show running-config interface fortygigabitethernet mac .....	1301
show running-config interface fortygigabitethernet mtu .....	1302
show running-config interface fortygigabitethernet port-profile-port .....	1303
show running-config interface fortygigabitethernet priority-tag .....	1304
show running-config interface fortygigabitethernet qos .....	1305
show running-config interface fortygigabitethernet rmon .....	1306
show running-config interface fortygigabitethernet sflow .....	1307
show running-config interface fortygigabitethernet shutdown .....	1308
show running-config interface fortygigabitethernet switchport .....	1309
show running-config interface fortygigabitethernet udd .....	1310
show running-config interface fortygigabitethernet vlan .....	1311
show running-config interface gigabitethernet .....	1312
show running-config interface gigabitethernet bpdu-drop .....	1313
show running-config interface gigabitethernet channel-group .....	1314
show running-config interface gigabitethernet description .....	1315
show running-config interface gigabitethernet dot1x .....	1316
show running-config interface gigabitethernet lacp .....	1318
show running-config interface gigabitethernet lldp .....	1319
show running-config interface gigabitethernet mac .....	1320
show running-config interface gigabitethernet mtu .....	1321
show running-config interface gigabitethernet port-profile-port .....	1322
show running-config interface gigabitethernet priority-tag .....	1323
show running-config interface gigabitethernet qos .....	1324
show running-config interface gigabitethernet rmon .....	1325
show running-config interface gigabitethernet sflow .....	1326
show running-config interface gigabitethernet shutdown .....	1327
show running-config interface gigabitethernet switchport .....	1328
show running-config interface gigabitethernet udd .....	1329
show running-config interface gigabitethernet vlan .....	1330

show running-config interface management .....	1331
show running-config interface port-channel .....	1332
show running-config interface tengigabitethernet .....	1333
show running-config interface tengigabitethernet bpdudrop .....	1334
show running-config interface tengigabitethernet cee .....	1335
show running-config interface tengigabitethernet channel-group .....	1336
show running-config interface tengigabitethernet description .....	1337
show running-config interface tengigabitethernet dot1x .....	1338
show running-config interface tengigabitethernet fabric .....	1340
show running-config interface tengigabitethernet fcoeport .....	1341
show running-config interface tengigabitethernet lacp .....	1342
show running-config interface tengigabitethernet lldp .....	1343
show running-config interface tengigabitethernet mac .....	1344
show running-config interface tengigabitethernet mtu .....	1345
show running-config interface tengigabitethernet port-profile-port .....	1346
show running-config interface tengigabitethernet priority-tag .....	1347
show running-config interface tengigabitethernet qos .....	1348
show running-config interface tengigabitethernet rmon .....	1349
show running-config interface tengigabitethernet sflow .....	1350
show running-config interface tengigabitethernet shutdown .....	1351
show running-config interface tengigabitethernet switchport .....	1352
show running-config interface tengigabitethernet udld .....	1353
show running-config interface tengigabitethernet vlan .....	1354
show running-config interface vlan .....	1355
show running-config interface vlan ip .....	1356
show running-config ip access-list .....	1358
show running-config ip dns .....	1359
show running-config ip igmp .....	1360
show running-config ip route .....	1361
show running-config ldap-server .....	1362
show running-config line .....	1363
show running-config logging .....	1364
show running-config logging auditlog class .....	1365
show running-config logging raslog .....	1366
show running-config logging syslog-facility .....	1367
show running-config logging syslog-server .....	1368
show running-config mac-address-table .....	1369
show running-config monitor .....	1370
show running-config nas server-ip .....	1371
show running-config ntp .....	1372
show running-config overlay-gateway .....	1373
show running-config password-attributes .....	1375
show running-config police-priority-map .....	1376
show running-config policy-map .....	1377
show running-config port-profile .....	1378
show running-config port-profile activate .....	1379
show running-config port-profile fcoe-profile .....	1380
show running-config port-profile qos-profile .....	1381
show running-config port-profile security-profile .....	1382
show running-config port-profile static .....	1383
show running-config port-profile vlan-profile .....	1384
show running-config port-profile-domain .....	1386
show running-config protocol cdp .....	1387
show running-config protocol edge .....	1388
show running-config protocol lldp .....	1389
show running-config protocol spanning-tree mstp .....	1390
show running-config protocol spanning-tree pvst .....	1391
show running-config protocol spanning-tree rpvst .....	1392

show running-config protocol spanning-tree rstp .....	1393
show running-config protocol spanning-tree stp .....	1394
show running-config protocol udld .....	1395
show running-config radius-server .....	1396
show running-config rbridge-id .....	1397
show running-config rbridge-id hardware-profile.....	1398
show running-config rbridge-id linecard .....	1400
show running-config rbridge-id ssh .....	1401
show running-config rmon .....	1402
show running-config role .....	1403
show running-config route-map .....	1404
show running-config rule .....	1405
show running-config secpolicy .....	1407
show running-config sflow .....	1409
show running-config sflow-policy .....	1410
show running-config sflow-profile .....	1411
show running-config snmp-server .....	1412
show running-config snmp-server engineid .....	1413
show running-config ssh .....	1414
show running-config ssh server .....	1415
show running-config ssh server key-exchange .....	1416
show running-config support .....	1417
show running-config support autoupload-param .....	1418
show running-config support support-param.....	1419
show running-config switch-attributes .....	1420
show running-config system-monitor .....	1421
show running-config system-monitor-mail .....	1422
show running-config tacacs-server .....	1423
show running-config telnet server .....	1424
show running-config threshold-monitor .....	1425
show running-config threshold-monitor interface .....	1426
show running-config threshold-monitor security .....	1427
show running-config threshold-monitor sfp .....	1428
show running-config username .....	1429
show running-config vcs .....	1430
show running-config zoning .....	1431
show running-config zoning defined-configuration .....	1432
show running-config zoning enabled-configuration .....	1433
show secpolicy .....	1434
show sflow .....	1435
show sflow-profile .....	1437
show sfm .....	1438
show sfp .....	1439
show slots .....	1440
show span path .....	1442
show spanning-tree .....	1443
show spanning-tree brief .....	1444
show spanning-tree interface .....	1446
show spanning-tree mst brief .....	1447
show spanning-tree mst detail .....	1448
show spanning-tree mst instance .....	1451
show spanning-tree mst interface .....	1452
show ssh server status .....	1453
show ssh server rekey-interval status .....	1454
show startup-config .....	1455
show startup-db .....	1456
show statistics access-list .....	1457
show storm-control .....	1460

show support .....	1462
show system .....	1463
show system internal nas .....	1464
show system monitor .....	1465
show telnet server status .....	1466
show threshold monitor .....	1467
show tunnel .....	1468
show udd .....	1470
show udd interface .....	1471
show udd statistics .....	1473
show users .....	1474
show vcs .....	1475
show version .....	1478
show virtual-fabric status .....	1480
show vlan .....	1481
show vlan brief.....	1483
show vlan classifier .....	1484
show vlan private-vlan .....	1485
show vlan rspan-vlan .....	1486
show vnetwork .....	1487
show vrf .....	1491
show vrrp.....	1492
show zoning enabled-configuration .....	1494
show zoning operation-info .....	1495

**Commands shutdown through Z..... 1497**

shutdown .....	1497
shutdown (STP).....	1498
shutdown (UDLD).....	1499
shutdown (VXLAN).....	1500
shutdown-time .....	1501
site .....	1502
slot .....	1503
snmp-server community .....	1504
snmp-server contact .....	1505
snmp-server context .....	1506
snmp-server enable trap.....	1507
snmp-server engineid local .....	1508
snmp-server group .....	1509
snmp-server host .....	1511
snmp-server location .....	1513
snmp-server sys-descr .....	1514
snmp-server user .....	1515
snmp-server v3host .....	1517
snmp-server view .....	1519
source .....	1520
span session .....	1521
spanning-tree autoedge .....	1522
spanning-tree bpdu-mac .....	1523
spanning-tree cost .....	1524
spanning-tree edgeport .....	1525
spanning-tree guard root .....	1526
spanning-tree hello-time .....	1527
spanning-tree instance .....	1528
spanning-tree link-type .....	1529
spanning-tree portfast .....	1530
spanning-tree priority .....	1531



spanning-tree restricted-role .....	1532
spanning-tree restricted-tcn .....	1533
spanning-tree shutdown .....	1534
spanning-tree vlan .....	1535
speed (Ethernet).....	1536
speed (Fibre Channel).....	1537
speed (FlexPort).....	1538
speed (LAG).....	1539
speed (port-channel).....	1540
spt-threshold .....	1541
ssh .....	1542
ssh client cipher non-cbc.....	1544
ssh server cipher non-cbc.....	1545
ssh server key.....	1546
ssh server key-exchange dh-group-14 .....	1547
ssh server rekey-interval .....	1548
ssh server shutdown .....	1549
ssh server standby enable.....	1550
ssh server status .....	1551
static-network .....	1552
storm-control ingress .....	1553
summary-address (OSPF).....	1555
summary-address (OSPFv3).....	1556
support .....	1557
support autoupload enable .....	1558
support autoupload-param .....	1559
support support-param.....	1560
switch-attributes .....	1561
switchport .....	1562
switchport access .....	1563
switchport mode .....	1565
switchport mode private-vlan .....	1566
switchport mode trunk-no-default-native .....	1567
switchport port-security .....	1568
switchport port-security mac-address .....	1569
switchport port-security max .....	1570
switchport port-security oui .....	1571
switchport port-security shutdown-time .....	1572
switchport port-security sticky .....	1573
switchport port-security violation .....	1574
switchport private-vlan association trunk .....	1575
switchport private-vlan host-association .....	1576
switchport private-vlan mapping .....	1577
switchport private-vlan trunk allowed vlan .....	1578
switchport private-vlan trunk native-vlan .....	1579
switchport trunk allowed vlan rspan-vlan .....	1580
switchport trunk default-vlan .....	1582
switchport trunk native-vlan .....	1583
switchport trunk native-vlan-untagged .....	1585
switchport trunk native-vlan-xtagged .....	1586
switchport trunk tag native-vlan .....	1588
system-description .....	1589
system-max .....	1590
system-monitor .....	1591
system-monitor-mail .....	1593
system-name .....	1595
table-map .....	1596
tacacs-server .....	1598

tagged-ieee-bpdu-enabled .....	1600
tcp burstrate .....	1601
telnet .....	1602
telnet server shutdown .....	1604
telnet server standby enable.....	1605
terminal .....	1606
threshold-monitor cpu .....	1607
threshold-monitor interface .....	1608
threshold-monitor memory .....	1611
threshold-monitor security .....	1613
threshold-monitor sfp .....	1616
timeout frm .....	1619
timers .....	1620
timers (BGP).....	1621
timers (OSPFv3).....	1622
traceroute .....	1623
track .....	1625
track (Fabric-Virtual-Gateway).....	1626
transmit-holdcount .....	1628
transport-service .....	1629
trunk-enable .....	1630
type .....	1631
type (FlexPort).....	1632
udld enable .....	1633
unhide built-in-self-test.....	1634
unhide fips .....	1635
unlock username .....	1636
update-time (BGP).....	1637
usb .....	1638
usb dir .....	1639
usb remove .....	1640
user (alias configuration).....	1641
username .....	1642
username admin enable false .....	1644
username user enable false .....	1645
use-v2-checksum.....	1646
vcenter .....	1647
vcenter discovery (ignore delete responses).....	1648
vc-link-init .....	1649
vcs (logical chassis cluster mode).....	1650
vcs config snapshot (logical chassis cluster mode).....	1652
vcs logical-chassis enable (fabric cluster mode).....	1653
vcs rbridge-id (fabric cluster mode).....	1654
vcs vcsid (fabric cluster mode).....	1655
vcs virtual-fabric enable .....	1656
vcs replace rbridge-id .....	1657
vcs virtual ip .....	1658
virtual-fabric .....	1659
virtual-ip .....	1660
virtual-mac .....	1661
vlag ignore-split .....	1662
vlan classifier activate group .....	1663
vlan classifier group .....	1664
vlan classifier rule .....	1665
vlan dot1q tag native .....	1667
vlan-profile (AMPP).....	1668
vnetwork vcenter discover .....	1669
vrf .....	1670

vrf forwarding.....	1671
vrf-lite-capability .....	1672
vrf mgmt-vrf.....	1673
vrrp-extended-group .....	1674
vrrp-group .....	1675
write erase.....	1676
zoning defined-configuration alias .....	1677
zoning defined-configuration cfg .....	1679
zoning defined-configuration zone .....	1681
zoning enabled-configuration cfg-action cfg-clear .....	1683
zoning enabled-configuration cfg-action cfg-save .....	1684
zoning enabled-configuration cfg-action cfg-transaction-abort .....	1685
zoning enabled-configuration cfg-name .....	1686
zoning enabled-configuration default-zone-access .....	1687



# Preface

---

- [Document conventions](#).....29
- [Brocade resources](#)..... 31
- [Contacting Brocade Technical Support](#).....31
- [Document feedback](#)..... 32

## Document conventions

The document conventions describe text formatting conventions, command syntax conventions, and important notice formats used in Brocade technical documentation.

### Text formatting conventions

Text formatting conventions such as boldface, italic, or Courier font may be used in the flow of the text to highlight specific words or phrases.

Format	Description
<b>bold text</b>	Identifies command names Identifies keywords and operands Identifies the names of user-manipulated GUI elements Identifies text to enter at the GUI
<i>italic text</i>	Identifies emphasis Identifies variables and modifiers Identifies paths and Internet addresses Identifies document titles
<code>Courier font</code>	Identifies CLI output Identifies command syntax examples

### Command syntax conventions

Bold and italic text identify command syntax components. Delimiters and operators define groupings of parameters and their logical relationships.

Convention	Description
<b>bold text</b>	Identifies command names, keywords, and command options.
<i>italic text</i>	Identifies a variable.

Convention	Description
value	In Fibre Channel products, a fixed value provided as input to a command option is printed in plain text, for example, <b>--show WWN</b> .
[ ]	Syntax components displayed within square brackets are optional. Default responses to system prompts are enclosed in square brackets.
{ x   y   z }	A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options. In Fibre Channel products, square brackets may be used instead for this purpose.
x   y	A vertical bar separates mutually exclusive elements.
< >	Nonprinting characters, for example, passwords, are enclosed in angle brackets.
...	Repeat the previous element, for example, <i>member[member...]</i> .
\	Indicates a "soft" line break in command examples. If a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash.

## Notes, cautions, and warnings

Notes, cautions, and warning statements may be used in this document. They are listed in the order of increasing severity of potential hazards.

---

### NOTE

A Note provides a tip, guidance, or advice, emphasizes important information, or provides a reference to related information.

---

---

### ATTENTION

An Attention statement indicates a stronger note, for example, to alert you when traffic might be interrupted or the device might reboot.

---



---

### CAUTION

A Caution statement alerts you to situations that can be potentially hazardous to you or cause damage to hardware, firmware, software, or data.

---



---

### DANGER

A Danger statement indicates conditions or situations that can be potentially lethal or extremely hazardous to you. Safety labels are also attached directly to products to warn of these conditions or situations.

---

## Brocade resources

Visit the Brocade website to locate related documentation for your product and additional Brocade resources.

You can download additional publications supporting your product at [www.brocade.com](http://www.brocade.com). Select the Brocade Products tab to locate your product, then click the Brocade product name or image to open the individual product page. The user manuals are available in the resources module at the bottom of the page under the Documentation category.

To get up-to-the-minute information on Brocade products and resources, go to [MyBrocade](#). You can register at no cost to obtain a user ID and password.

Release notes are available on [MyBrocade](#) under Product Downloads.

White papers, online demonstrations, and data sheets are available through the [Brocade website](#).

## Contacting Brocade Technical Support

As a Brocade customer, you can contact Brocade Technical Support 24x7 online, by telephone, or by e-mail. Brocade OEM customers contact their OEM/Solutions provider.

### Brocade customers

For product support information and the latest information on contacting the Technical Assistance Center, go to <http://www.brocade.com/services-support/index.html>.

If you have purchased Brocade product support directly from Brocade, use one of the following methods to contact the Brocade Technical Assistance Center 24x7.

Online	Telephone	E-mail
<p>Preferred method of contact for non-urgent issues:</p> <ul style="list-style-type: none"> <li>• <a href="#">My Cases</a> through MyBrocade</li> <li>• <a href="#">Software downloads</a> and licensing tools</li> <li>• <a href="#">Knowledge Base</a></li> </ul>	<p>Required for Sev 1-Critical and Sev 2-High issues:</p> <ul style="list-style-type: none"> <li>• Continental US: 1-800-752-8061</li> <li>• Europe, Middle East, Africa, and Asia Pacific: +800-AT FIBREE (+800 28 34 27 33)</li> <li>• For areas unable to access toll free number: +1-408-333-6061</li> <li>• <a href="#">Toll-free numbers</a> are available in many countries.</li> </ul>	<p><a href="mailto:support@brocade.com">support@brocade.com</a></p> <p>Please include:</p> <ul style="list-style-type: none"> <li>• Problem summary</li> <li>• Serial number</li> <li>• Installation details</li> <li>• Environment description</li> </ul>

### Brocade OEM customers

If you have purchased Brocade product support from a Brocade OEM/Solution Provider, contact your OEM/Solution Provider for all of your product support needs.

- OEM/Solution Providers are trained and certified by Brocade to support Brocade® products.
- Brocade provides backline support for issues that cannot be resolved by the OEM/Solution Provider.

- Brocade Supplemental Support augments your existing OEM support contract, providing direct access to Brocade expertise. For more information, contact Brocade or your OEM.
- For questions regarding service levels and response times, contact your OEM/Solution Provider.

## Document feedback

To send feedback and report errors in the documentation you can use the feedback form posted with the document or you can e-mail the documentation team.

Quality is our first concern at Brocade and we have made every effort to ensure the accuracy and completeness of this document. However, if you find an error or an omission, or you think that a topic needs further development, we want to hear from you. You can provide feedback in two ways:

- Through the online feedback form in the HTML documents posted on [www.brocade.com](http://www.brocade.com).
- By sending your feedback to [documentation@brocade.com](mailto:documentation@brocade.com).

Provide the publication title, part number, and as much detail as possible, including the topic heading and page number if applicable, as well as your suggestions for improvement.



# About This Document

---

- [Supported hardware and software](#)..... 33
- [What's new in this document](#)..... 33

## Supported hardware and software

In those instances in which procedures or parts of procedures documented here apply to some switches but not to others, this guide identifies exactly which switches are supported and which are not.

Although many different software and hardware configurations are tested and supported by Brocade Communications Systems, Inc. for Network OS 5.0.1, documenting all possible configurations and scenarios is beyond the scope of this document.

The following hardware platforms are supported by this release of Network OS:

- Brocade VDX 2740 embedded switch
- Brocade VDX 6740
  - Brocade VDX 6740-48
  - Brocade VDX 6740-64
- Brocade VDX 6740T
  - Brocade VDX 6740T-48
  - Brocade VDX 6740T-64
  - Brocade VDX 6740T-1G
- Brocade VDX 8770
  - Brocade VDX 8770-4
  - Brocade VDX 8770-8

To obtain information about an OS version other than Network OS v5.0.1, refer to the documentation specific to that OS version.

## What's new in this document

A listing of changes made since the Network OS Command Reference was last released.

### New and modified commands

New and modified commands in Network OS v5.0.0 include commands from the following areas:

- BGP4+
- FlexPort
- FIPS
- IPv6 support (dual stack)
- Management VRF

- OSPFv3
- sFlow for VXLAN
- VRRPv3

## New and modified commands

New and modified commands in Network OS v5.0.1 include commands from the following areas:

- DHCPv6 relay
- Fabric-Virtual-Gateway
- VLAN support

## Deprecated commands

The following commands have been removed in Network OS v5.0.1:

- ip route next-hop bgp
- ip route next-hop ospf
- ip route next-hop-enable-default
- ip route next-hop-recursion

## New and modified commands

New and modified commands in Network OS v5.0.1a include commands from the following areas:

- IPsec for OSPFv3
- SNMP enhancements for Joint Interoperability Test Command (JITC) certification

## Heading changes

Headings used in command pages have changed in an effort toward standardization. The changes are:

- The **Parameters** heading replaces **Operands**.
- The **Command Default** heading replaces **Defaults**.
- The **Modes** heading replaces **Command Modes**.

# Using the Network OS CLI

---

- DCB command line interface..... 35
- Saving your configuration changes..... 35
- RBAC permissions ..... 36
- Default roles..... 36
- Accessing the Network OS CLI through Telnet ..... 36
- Network OS CLI command modes..... 36
- Network OS CLI keyboard shortcuts..... 41
- Using the do command as a shortcut..... 42
- Displaying Network OS CLI commands and command syntax..... 42
- Completing Network OS CLI commands..... 43
- Using Network OS CLI command output modifiers..... 43
- Considerations for show command output ..... 44
- User-configurable VLAN IDs..... 44

## DCB command line interface

The Brocade Data Center Bridging (DCB) CLI is designed to support the management of DCB and Layer 2 Ethernet switching functionality. The Network OS CLI uses an industry-standard hierarchical shell familiar to Ethernet/IP networking administrators.

The system starts up with the default Network OS configuration and the DCB startup configuration. After logging in, you are in the Network OS shell. For information on accessing the DCB commands from the Network OS shell, refer to [Network OS CLI command modes](#) on page 36.

## Saving your configuration changes

Any configuration changes made to the switch are written into the *running-config* file. This is a dynamic file that is lost when the switch reboots. During the boot sequence, the switch resets all configuration settings to the values in the *startup-config* file.

To make your changes permanent, use the **copy** command to commit the *running-config* file to the *startup-config* file, as shown below.

The following example illustrates the use of the **copy running-config** in privileged EXEC mode to save configuration changes:

```
switch# copy running-config startup-config
```

## RBAC permissions

Role-Based Access Control (RBAC) defines the capabilities that a user account has based on the role the account has been assigned.

A role is an entity that defines the access privileges of the user accounts on the switch. A user is associated with one role. Refer to the *Network OS Administration Guide* for more information about RBAC.

## Default roles

Attributes of default roles cannot be modified; however, the default roles can be assigned to non-default user accounts. The following roles are default roles:

- The admin role has the highest privileges. All CLIs are accessible to the user associated with the admin role. By default, the admin role has read and write access.
- The user role has limited privileges that are mostly restricted to show commands in privileged EXEC mode. User accounts associated with the user role cannot access configuration CLIs that are in global configuration mode. By default, the user role has read-only access.

## Accessing the Network OS CLI through Telnet

---

### NOTE

While this example uses the admin role to log in to the switch, both the admin and the user role can be used.

---

The procedure to access the Network OS CLI is the same through either the console interface or through a Telnet session; both access methods bring you to the login prompt.

```
switch login: admin
Password:*****
switch#
```

---

### NOTE

Multiple users can open Telnet sessions and issue commands by using privileged EXEC mode. Network OS supports up to 32 Telnet sessions with the admin login.

---

## Network OS CLI command modes

The following lists the major Network OS CLI command modes and describes how to access them.

---

### NOTE

Use the **pwd** command to view the mode of the current working directory. This command function sin global configuration mode and the modes accessed from global configuration mode.

---

**NOTE**

Pressing Ctrl+Z or entering the end command in any mode returns you to privileged EXEC mode. Entering exit in any mode returns you to the previous mode.

**TABLE 1** Network OS CLI command modes

Command mode	Prompt	How to access the command mode	Description
Privileged EXEC	switch#	This is the default mode for the switch.	Display and change system parameters. Note that this is the administrative mode and includes the basic configuration commands.
Global configuration	switch(config)#	From privileged EXEC mode, enter the <b>configure terminal</b> command.	Configure features that affect the entire switch.
line vty	switch(config)#line vty exec-timeout 60 switch(config-line-vty)#	From global configuration mode, enter the <b>line vty</b> command.	Specify the amount of time a CLI session can be idle before it logs you out.
RBridge ID configuration mode	RBridge ID: switch (config)# rbridge-id 1 switch (config-rbridge-id-1)#	From global configuration mode, specify a node by entering the <b>rbridge-id rbridge_id</b> command, where <i>rbridge_id</i> is the RBridge ID of the selected node.	Configure features and issue show commands specific to an individual node in a Virtual Cluster Switching (VCS) environment. This includes both fabric cluster and management cluster scenarios.
Interface subtype	Port-channel: switch (config-Port-channel-63) #  10-Gigabit Ethernet (DCB port): switch (conf-if-te-0/1) #  VLAN: : switch (config-Vlan-1) #  VE: switch (config) # rbridge-id 11 switch (config-rbridge-id-11) # int ve 56 switch (config-Ve-56) #  Management switch (config) # interface management 3/1 switch (config-Management-3/1)	From global configuration mode, specify an interface by entering one of the following commands:  <ul style="list-style-type: none"> <li>• <b>interface fcoe</b></li> <li>• <b>interface fortygigabitethernet</b></li> <li>• <b>interface gigabitethernet</b></li> <li>• <b>interface hundredgigabitethernet</b></li> <li>• <b>interface loopback</b></li> <li>• <b>interface management</b></li> <li>• <b>interface port-channel</b></li> <li>• <b>interface tengigabitethernet</b></li> <li>• <b>interface ve</b></li> <li>• <b>interface vlan</b></li> </ul>	Access and configure individual interface subtypes.  Enter ? at a command prompt to see what interface subtypes are available for that command.
Protocol configuration	LLDP: switch (conf-lldp) #  Spanning-tree: switch (config-mstp) # switch (config-rstp) # switch (config-stp) # switch (config-pvst) # switch (config-rpvst) # switch (conf-udld) #	From global configuration mode, specify a protocol by entering one of the following commands:  <ul style="list-style-type: none"> <li>• <b>protocol lldp</b></li> <li>• <b>protocol spanning-tree mstp</b></li> <li>• <b>protocol spanning-tree rstp</b></li> <li>• <b>protocol spanning-tree stp</b></li> <li>• <b>protocol spanning-tree pvst</b></li> <li>• <b>protocol spanning-tree rapid-pvst</b></li> <li>• <b>protocol udld</b></li> </ul>	Access and configure protocols.

**TABLE 1** Network OS CLI command modes (Continued)

Command mode	Prompt	How to access the command mode	Description
FCoE configuration	FCoE: <code>switch(config-fcoe) #</code>  FCoE fabric-map sub-mode: <code>switch(config-fcoe-fabric-map) #</code>  FCoE map sub-mode: <code>switch(config-fcoe-map) #</code>	From global configuration mode, use the <b>fcoe</b> command to enter FCoE configuration mode.  From FCoE configuration mode, specify an FCoE sub-mode by entering one of the following commands: <ul style="list-style-type: none"> <li>• <b>fabric-map default</b></li> <li>• <b>map default</b></li> </ul>	Access and configure FCoE features.
Access Gateway (AG) configuration	AG configuration mode: <code>switch(config-rbridge-12-ag) #</code>  N_Port configuration mode: <code>switch(config-rbridge-12-ag-nport-if-fi- port ) #</code>  Port Grouping configuration mode: <code>switch(config-rbridge-12-ag-pg-pgid ) #</code>	From RBridge-ID configuration mode, enter the <b>ag</b> command.  From AG configuration mode, enter the <b>nport port</b> command where port is an N_Port number supported by the hardware platform.  From AG configuration mode, enter <b>pg pgid</b> where <i>pgid</i> is the port group identification number.	Access and configure Access Gateway features.
AMPP port-profile mode	AMPP port-profile: <code>switch(config-port-profile-name) #</code>  VLAN-profile sub-mode: <code>switch(config-vlan-profile) #</code>  QoS-profile sub-mode: <code>switch(config-qos-profile) #</code>  FCoE-profile sub-mode: <code>switch(config-fcoe-profile) #</code>  Security-profile sub-mode: <code>switch(config-security-profile) #</code>	From the global configuration mode, enter the <b>port-profile</b> command to enter port-profile configuration mode.  From port-profile configuration mode, specify an AMPP sub-mode by entering one of the following commands: <ul style="list-style-type: none"> <li>• <b>vlan-profile</b></li> <li>• <b>qos-profile</b></li> <li>• <b>fcoe-profile</b></li> <li>• <b>security-profile</b></li> </ul>	Access and configure AMPP features.
Routing protocol configuration	BGP: <code>switch(config) #</code> <code>switch(config-rbridge-id-1) #</code> <code>switch(config-bgp-router) #</code>  BGP route-map configuration mode: <code>switch(config-rbridge-id-1) #</code> <code>switch(config-route-map-myroutemap/permit/1) #</code>  BGP address-family IPv4-unicast mode: <code>switch(config-bgp-router) #</code> <code>switch(config-bgp-ipv4u) #</code>	From global configuration mode, specify an RBridge ID to enter RBridge ID configuration mode.  From RBridge ID configuration mode, use the <b>router bgp</b> command to enter BGP configuration mode.  From RBridge ID configuration mode, use the <b>route-map</b> command with a <b>permit</b> or <b>deny</b> statement and an instance number to enter BGP route-map configuration mode.,.  From BGP configuration mode, use the <b>address-family ipv4 unicast</b> command to enter BGP address-family IPv4 unicast configuration mode.	Configure Border Gateway Protocol routing protocol

**TABLE 1** Network OS CLI command modes (Continued)

Command mode	Prompt	How to access the command mode	Description
	OSPF VRF: switch(config)# rbridge-id 5 switch(config-rbridge-id-5)# router ospf switch(config-router-ospf-vrf- default-vrf)#	From RBridge ID configuration mode, use the <b>router ospf</b> command to enter OSPF VRF configuration mode.	Configure Open Short Path First routing protocol
	PIM: switch(config)# rbridge-id 5 switch(config-rbridge-id-5)# router pim switch(conf-pim-router)#	From Bridge ID configuration mode, use the <b>router pim</b> command to enter PIM configuration mode.	Configure Protocol Independent Multicast routing protocol
Virtual-router-group configuration mode	switch(config)# rbridge-id 101 switch(config-rbridge-id-101)# int ve 25 switch(config-ve-25)# vrrp- extended-group 1 switch(config-vrrp-extended- group-1)#	From RBridge ID configuration mode, use the <b>int ve</b> command to enter VE configuration mode. Then use the <b>vrrp-extended-group</b> command to enter virtual-router-group configuration mode.	
ACL configuration mode	Standard ACL: switch(config-macl-std)# switch(config-ipacl-std)# switch(config-ip6acl-std)#  Extended ACL: switch(config-macl-ext)# switch(config-ipacl-ext)# switch(config-ip6acl-ext)#	From global configuration mode, enter one of the following commands:  <ul style="list-style-type: none"> <li>• <b>mac access-list standard</b></li> <li>• <b>mac access-list extended</b></li> <li>• <b>ip access-list standard</b></li> <li>• <b>ip access-list extended</b></li> <li>• <b>ipv6 access-list standard</b></li> <li>• <b>ipv6 access-list extended</b></li> </ul>	Access ACL configuration mode to manage access control lists (ACLs) .
CEE map configuration mode	CEE map: switch(config-cee-map-default)#	From global configuration mode, enter the <b>cee-map default</b> command.	Access and configure CEE map features.
ELD configuration mode	switch(config)# protocol edge- loop-detection switch(config-eld)#	From global configuration mode, enter the <b>protocol edge-loop-detection</b> command.	Configure edge loop detection.
Hardware configuration	switch(config)# hardware	From global configuration mode, specify the hardware mode by entering the <b>hardware</b> command.	This mode is a prerequisite for entering connector and port-group mode.
Connector mode	switch# hardware connector switch(config-connector [n]/n/n)#	From hardware mode, specify the connector node and [ <i>rbridge-id</i> ]/ <i>slot/port</i> information.	Connector mode is used to enable breakout on ports. When breakout is enabled, ports are appended in the output with a colon(:) followed by values 1-4.
DSCP mutation mapping	DSCP Mutation Map: switch(dscp-mutation-mapname)#	From global configuration mode, remap incoming DSCP values by entering the <b>qos map dscp-mutation mapname</b> command:	

**TABLE 1** Network OS CLI command modes (Continued)

Command mode	Prompt	How to access the command mode	Description
DSCP to CoS priority mapping	DSCP to CoS Map: switch(dscp-cos-mapname) #	From global configuration mode, create a DSCP to CoS priority map by entering the <b>qos map dscp-cos mapname</b> command.	
DSCP to traffic class mapping	DSCP to Traffic Class Map: switch(dscp-traffic-class-mapname) #	From global configuration mode, create a DSCP to traffic class map by entering the <b>qos map dscp-traffic-class mapname</b> command:	
Port-group configuration	switch(config-port-group-1/3/9) #	From hardware configuration mode, enter the <b>port-group</b> command followed by a port group identification:  <b>port-group rbridge-id/slot/port-group-id</b>  The port-group-id is specific to the Brocade VDX 8770 switch 27x40 GbE line card.	This mode allows you to enable Performance or Density operating modes on a specific port group on the 27x40 GbE line card only.
QoS Policer configuration	Police Priority Map switch(config-policemap) #  Class Map: switch(config-classmap) #  Policy Map: switch(config-policymap) #  Policy-class-map submode: switch(config-policymap-class) #  Policy-class-map-policer attributes submode: switch(config-policymap-class-policer) #	From global configuration mode, specify a Policer configuration mode by entering one of these command:  <ul style="list-style-type: none"> <li>• <b>police-priority-map mapname</b></li> <li>• <b>class-map mapname</b></li> <li>• <b>policy-map mapname</b></li> </ul> To enter the policy-class-map submode from policy-map mode, enter <b>class classmapname</b>  To enter the policy-class-map-policer attributes sub-mode from policy-map-class mode, enter <b>police</b> followed by the policing attributes.	
Alias configuration	switch(config-alias-config) #	From global configuration mode, enter the <b>alias-config</b> command.  Use the <b>alias string</b> expansion command to create aliases.	Access configure alias features.
User alias configuration	switch(config-alias-config-user) #	From alias configuration mode, enter the <b>user name</b> command.	Access configure user alias features.
Policymap configuration	switch(config-policymap) #	From global configuration mode, enter the <b>policy-map name</b> command.	
Policymap class map configuration	switch(config-policymap-class) #	From policymap configuration mode, enter the <b>class name</b> command.	



**TABLE 1** Network OS CLI command modes (Continued)

Command mode	Prompt	How to access the command mode	Description
Polycmap class police configuration	switch(config-polycmap-class-police)#	From polycmap class configuration mode, enter the <b>police cir value</b> command.	
VCS configuration mode	switch(config-vcs)#	From privileged EXEC mode, enter the <b>vcs vcsid id-number logical-chassis enable</b> command	
VRF configuration mode	(config-rbridge-12-vrf-vrf_name)#	From RBridge ID configuration mode, enter the <b>vrf name</b> command.	

## Network OS CLI keyboard shortcuts

The following lists Network OS CLI keyboard shortcuts.

**TABLE 2** Network OS CLI keyboard shortcuts

Keystroke	Description
<b>Ctrl+B</b> (or the left arrow key)	Moves the cursor back one character.
<b>Ctrl+F</b> (or the right arrow key)	Moves the cursor forward one character.
<b>Ctrl+A</b>	Moves the cursor to the beginning of the command line.
<b>Ctrl+E</b>	Moves the cursor to the end of the command line.
<b>Esc B</b>	Moves the cursor back one word.
<b>Esc F</b>	Moves the cursor forward one word.
<b>Ctrl+Z</b>	Returns to privileged EXEC mode.
<b>Ctrl+P</b> (or the up arrow key)	Displays commands in the history buffer with the most recent command displayed first.
<b>Ctrl+N</b> (or the down arrow key)	Displays commands in the history buffer with the most recent command displayed last.

### NOTE

In privileged EXEC mode, use the **show history** command to list the commands most recently entered. The switch retains the history of the last 1000 commands entered for the current session.

## Using the do command as a shortcut

You can use the **do** command to save time when you are working in any configuration mode and you want to run a command in privileged EXEC mode.

For example, if you are configuring LLDP and you want to execute a privileged EXEC mode command, such as the **dir** command, you would first have to exit the LLDP configuration mode. By using the **do** command with the **dir** command, you can ignore the need to change configuration modes, as shown in the following example.

```
switch(conf-lldp)# do dir
Contents of flash://
-rw-r----- 1276 Wed Feb 4 07:08:49 2009 startup_rmon_config
-rw-r----- 1276 Wed Feb 4 07:10:30 2009 rmon_config
-rw-r----- 1276 Wed Feb 4 07:12:33 2009 rmon_configuration
-rw-r----- 1276 Wed Feb 4 10:48:59 2009 startup-config
```

## Displaying Network OS CLI commands and command syntax

Enter a question mark (?) in any command mode to display the list of commands available in that mode.

```
switch(conf-lldp)# ?
Possible completions:
advertise      The Advertise TLV configuration.
description    The User description
disable        Disable LLDP
do             Run an operational-mode command
exit           Exit from current mode
hello          The Hello Transmit interval.
help           Provide help information
iscsi-priority Configure the Ethernet priority to advertise for iSCSI
mode           The LLDP mode.
multiplier     The Timeout Multiplier
no             Negate a command or set its defaults
profile        The LLDP Profile table.
pwd            Display current mode path
system-description The System Description.
system-name    The System Name
top            Exit to top level and optionally run command
```

To display a list of commands that start with the same characters, type the characters followed by the question mark (?).

```
switch# e?
Possible completions:
exit  Exit the management session
```

To display the keywords and arguments associated with a command, enter the keyword followed by the question mark (?).

```
switch# terminal ?
Possible completions:
length  Sets Terminal Length for this session
monitor Enables terminal monitoring for this session
no      Sets Terminal Length for this session to default :24.
timeout Sets the interval that the EXEC command interpreter wait for user input.
```

If the question mark (?) is typed within an incomplete keyword, and the keyword is the only keyword starting with those characters, the CLI displays help for that keyword only.

```
switch# show d?
Possible completions:
debug  Debug
diag   Show diag related information
```

```
dot1x 802.1x configuration
dpod  Provides DPOD license information.
```

If the question mark (?) is typed within an incomplete keyword but the keyword matches several keywords, the CLI displays help for all the matching keywords.

```
switch# show i?
interface Interface status and configuration
ip      Internet Protocol (IP)
```

The Network OS CLI accepts abbreviations for commands. This example is the abbreviation for the **show qos interface all** command.

```
switch# sh q i a
```

If the switch does not recognize a command after **Enter** is pressed, an error message displays.

```
switch# hookup
syntax error: unknown argument.
```

If an incomplete command is entered, an error message displays.

```
switch# show
syntax error: unknown argument.
```

## Completing Network OS CLI commands

To complete the spelling of commands or keywords automatically, begin typing the command or keyword and then press **Tab**. For example, at the CLI command prompt, type `te` and press **Tab**:

```
switch# te
```

The CLI displays the following command.

```
switch# terminal
```

If there is more than one command or keyword associated with the characters typed, the Network OS CLI displays all choices. For example, at the CLI command prompt, type `show l` and press **Tab**.

```
switch# show l
```

The CLI displays the following command.

```
Possible completions:
lACP      LACP commands
license   Display license keys installed on the switch.
lldp     Link Layer Discovery Protocol (LLDP).
logging   Show logging
```

## Using Network OS CLI command output modifiers

You can filter the output of the Network OS CLI **show** commands by using the output modifiers described below.

**TABLE 3** Network OS CLI command output modifiers

Output modifier	Description
<b>append</b>	Appends the output to a file.

**TABLE 3** Network OS CLI command output modifiers (Continued)

Output modifier	Description
<b>redirect</b>	Redirects the command output to the specified file.
<b>include</b>	Displays the command output that includes the specified expression.
<b>exclude</b>	Displays the command output that excludes the specified expression.
<b>begin</b>	Displays the command output that begins with the specified expression.
<b>last</b>	Displays only the last few lines of the command output.
<b>tee</b>	Redirects the command output to the specified file. Notice that this modifier also displays the command output.
<b>until <i>string</i></b>	Ends the output when the output text matches the string.
<b>count</b>	Counts the number of lines in the output.
<b>linnum</b>	Enumerates the lines in the output.
<b>more</b>	Paginates the output.
<b>nomore</b>	Suppresses the pagination of the output.
<b>FLASH</b>	Redirects the output to flash memory.

## Considerations for show command output

Network OS contains many versions of the **show** command. The output of the **show** command changes depending on your configuration and situation. However, in general terms the **show** command falls into one of two categories:

- Any **show** commands that are fabric (global configuration) in nature, such as VLAN, MAC Address table, AMPP, Zoning, and so on, should display or clear the information for all nodes in a logical chassis.
- Any **show** commands that are local to a switch, such as Layer 3 or Layer 2 functionality (for example, sFlow, SPAN, and so on), should display the local information by default, and display different switch information specific to an RBridge ID.

## User-configurable VLAN IDs

On the Brocade VDX family of switches, VLANs are treated as interfaces from a configuration point of view. By default, all the DCB ports are assigned to VLAN 1 (VLAN ID equals 1). VLAN 1002 is reserved for FCoE VLAN functionality on all VDX switches. Valid VLAN IDs (those configurable by the user), as well as VLAN IDs reserved for system functionality, are shown in the following table.

**TABLE 4** User-configurable and reserved VLAN IDs for Brocade VDX 8770 series, VDX 6740 series, and VDX 2740 switches

<b>802.1Q VLANs</b>	<b>Classified VLANs (for Virtual Fabrics)</b>
VLAN IDs 1 through 4086 (VLAN IDs 4087 through 4095 are reserved on these switches)	VLAN IDs 4096 through 8191 for service or transport VFs in a Virtual Fabrics context



# Commands A through E

---

## aaa authentication

Configures the AAA login sequence.

**Syntax** `aaa authentication login { default | ldap | local | radius { local | local-auth-failback } | tacacs+ { local | local-auth-failback } }`

`no aaa authentication login`

**Command Default** The default server is Local.

**Parameters** `login`

Specifies the type of server that will be used for authentication, authorization, and accounting (AAA) on the switch. The local server is the default. Specify one of the following options:

**default**

Specifies the default mode (local server). Authenticates the user against the local database only. If the password does not match or the user is not defined, the login fails.

**ldap**

Specifies the Lightweight Directory Access Protocol (LDAP) servers.

**local**

Specifies to use the local switch database if prior authentication methods are inactive.

**local-auth-failback**

Specifies to use the local switch database if prior authentication methods are not active or if authentication fails.

**local**

Specifies the local switch database.

**radius**

Specifies the RADIUS servers.

**local**

Specifies to use the local switch database if prior authentication methods are inactive.

**local-auth-failback**

Specifies to use the local switch database if prior authentication methods are not active or if authentication fails.

**tacacs+**

Specifies the TACACS+ servers.

**local**

Specifies to use the local switch database if prior authentication methods are inactive.

**local-auth-failback**

Specifies to use the local switch database if prior authentication methods are not active or if authentication fails.

- Modes** Global configuration mode
- Usage Guidelines** This command selects the order of authentication sources to be used for user authentication during the login process. Two sources are supported: primary and secondary. The secondary source of authentication is optional and will be used if the primary source fails or is not available.
- The authentication mode can only be set and cannot be added or deleted. For example, to change a configuration from "radius local" to radius only, execute the **no aaa authentication login** command to resets the configuration to the default mode, and then reconfigure the AAA mode with the desired setting.
- In a configuration with primary and secondary sources of authentication, the primary mode cannot be modified alone. For example, you cannot change from "radius local" or "radius local-auth-fallback" to "tacacs+ local" or "tacacs+ local-auth-fallback" respectively. First remove the existing configuration and then configure it to the required configuration.
- Beginning with Network OS v4.0.0, when the local option is specified as a secondary authentication service, local authentication is tried only when the primary AAA authentication service (TACACS+/Radius/LDAP) is either unreachable or not available. Local authentication will not be attempted if the authentication with the primary service fails.
- Examples** To change the AAA server to TACACS+ using the local switch database as a secondary source of authentication:

```
switch(config)# aaa authentication login tacacs+ local
Broadcast message from root (pts/0) Tue Apr  5 16:34:12 2011...
```

To change the AAA server from TACACS+ and local to TACACS+ only (no secondary source):

```
switch(config)# no aaa authentication login tacacs+ local
switch(config)# aaa authentication login tacacs+
switch(config)# do show running-config aaa
aaa authentication login tacacs+
```



# accept-unicast-arp-request

Configures the IPv4 fabric-virtual-gateway active sessions to respond to unicast ARP requests.

**Syntax** **accept-unicast-arp-request**

**no accept-unicast-arp-request**

**Modes** IPv4 address-family configuration mode

**Usage Guidelines** The **no accept-unicast-arp-request** command configures the active sessions to ignore ARP requests. This command functions for IPv4 traffic only.

**Examples** The following example shows how to configure the gateway MAC address for an IPv4 Fabric-Virtual-Gateway session to respond to unicast ARP requests.

```
switch(config)# router fabric-virtual-gateway
switch(conf-router-fabric-virtual-gateway)# address-family ipv4
switch(conf-address-family-ipv4)# accept-unicast-arp-request
```

## History

Release version	Command history
5.0.1	This command was introduced.

## Related Commands

[address-family \(Fabric-Virtual-Gateway\)](#), [router fabric-virtual-gateway](#)

## access-group

Applies rules specified in an access control list (ACL) to traffic entering or exiting an interface. You can use the **no** form of this command to remove an ACL from an interface.

<b>Syntax</b>	<b>{ ip   ipv6   mac } access-group ACLname { in   out }</b>  <b>no { ip   ipv6   mac } access-group ACLname { in   out }</b>
<b>Parameters</b>	<p><b>ip</b> Specifies the Layer 2 or Layer 3 ACL to bind to an interface.</p> <p><b>ipv6</b> Specifies the Layer 2 or Layer 3 ACL to bind to an interface.</p> <p><b>mac</b> Specifies the Layer 2 or Layer 3 ACL to bind to an interface.</p> <p><b>in</b> Specifies the ACL binding direction as ingress.</p> <p><b>out</b> Specifies the ACL binding direction as egress.</p> <p><b>ACLname</b> Specifies the ACL name.</p>
<b>Modes</b>	Interface subtype configuration mode
<b>Usage Guidelines</b>	<p>You can apply a maximum of six ACLs to a user interface, as follows:</p> <ul style="list-style-type: none"> <li>• One ingress MAC ACL</li> <li>• One egress MAC ACL</li> <li>• One ingress IPv4 ACL</li> <li>• One egress IPv4 ACL</li> <li>• One ingress IPv6 ACL</li> <li>• One egress IPv6 ACL</li> </ul>

---

### NOTE

You can apply an ACL to multiple interfaces. And you can apply an extended ACL twice—ingress and egress—to a given user interface.

---

To remove an IPv4 ACL from an interface, enter the **no** form of this command.

### Examples

```
switch# configure
Entering configuration mode terminal
switch(config)# int ten 122/5/34
switch(conf-if-te-122/5/34)# ip access-group ag1 in
```

### Related Commands

[access-list](#), [interface](#), [ip access-group](#), [ipv6 access-group](#), [mac access-group](#), [show access-list](#)

# access-list

Creates a standard or extended access control list (ACL). In ACLs, you can define rules that permit or deny network traffic based on criteria that you specify.

**Syntax** `{ ip| ipv6 | mac } access-list { standard | extended } ACLname`  
`no { ip| ipv6 | mac } access-list { standard | extended } ACLname`

<b>Parameters</b>	<b>ip</b>	Specifies the Layer 2 or Layer 3 ACL type.
	<b>ipv6</b>	Specifies the Layer 2 or Layer 3 ACL type.
	<b>mac</b>	Specifies the Layer 2 or Layer 3 ACL type.
	<b>standard</b>	Contains rules that permit or deny traffic based on source addresses that you specify. The rules are applicable to all ports of the specified addresses.
	<b>extended</b>	Contains rules that permit or deny traffic according to source and destination addresses, as well as other parameters.
	<b>ACLname</b>	Specifies a unique ACL name. The name can be up to 63 characters in length, and must begin with an alphanumeric character. No special characters are allowed, except for the underscore and hyphen.

**Modes** Global configuration mode

**Usage Guidelines** An ACL name can be up to 63 characters long, and must begin with a–z, A–Z or 0–9. You can also use underscore ( `_` ) or hyphen ( `-` ) in an ACL name, but not as the first character.

On any given switch, an ACL name must be unique among all ACL types (MAC/IPv4/IPv6; standard or extended).

After you create an ACL, use the **seq** command to create filtering rules for that ACL.

An ACL starts functioning only after it is applied to an interface, using the **access-group** command.

To delete an ACL, use the **no access-list** command. You can delete an ACL only after you first remove it from all interfaces to which it is applied, using the **no access-group** command.

**Examples** The following example creates a standard IPv6 ACL:

```
switch # configure
switch(config)# ipv6 access-list standard stdV6ACL1
```

The following example creates an extended IPv6 ACL:

```
switch # configure
switch(config)# ipv6 access-list extended extdACL5
```

**Related Commands** [access-group](#), [interface](#), [ip access-list](#), [ipv6 access-list](#), [mac access-list extended](#), [mac access-list standard](#), [seq \(IPv4 extended ACLs\)](#), [seq \(IPv4 standard ACLs\)](#), [seq \(IPv6 extended ACLs\)](#), [seq \(IPv6 standard ACLs\)](#), [seq \(MAC extended ACLs\)](#), [seq \(MAC standard ACLs\)](#), [show access-list](#), [show running-config access-list](#)

## activate (NSX Controller connection profile)

Activates an NSX controller connection profile, thereby initiating the connection between the NSX controller and the VCS fabric.

**Syntax**    **activate**

**no activate**

**Command Default**    Profile is inactive.

**Modes**            NSX Controller configuration mode

**Usage Guidelines**    This command is allowed for a switch that is in logical chassis cluster mode only.  
You must configure the NSX Controller IP address before executing this command.  
You must configure the VCS virtual IP address of the cluster before executing this command.  
Use the **no** form of the command to mark the connection profile inactive. Any existing connection is closed. However, all tunnels already created by the NSX controller remain open.

**Examples**            To activate an NSX controller connection profile that you have created and named profile1:

```
switch# configuration
switch(config)# nsx-controller profile1
switch(config-nsx-controller-profile1)# activate
```

## activate (protected VLAG)

Activates the port-channel redundancy group.

**Syntax**    **activate**

**no activate**

**Modes**     Global configuration mode

**Usage Guidelines**    Use this command to activate the port-channel redundancy group to activate the protected VLAG. Once activated, no configuration changes are allowed on the protected VLAG and members.

The **no activate** command deactivates the protected VLAG.

**Examples**    Typical command execution example:

```
switch(config-port-channel-redundancy-group-32)# activate
```

**Related Commands**    [port-channel](#), [port-channel-redundancy-group](#)

## activate (VXLAN gateway)

Activates a VXLAN overlay gateway instance.

**Syntax**    **activate**

**no activate**

**Command Default**    By default, a gateway is not activated during initial configuration.

**Modes**    VXLAN overlay gateway configuration mode

**Usage Guidelines**    It is recommended that you configure all gateway parameters before activating the gateway. This operation enables all tunnels that are associated with this gateway. VXLAN tunnels are not user configurable.

The following conditions that must be in place before you can execute the **activate** command:

- Loopback interfaces must be configured on all R Bridges that have been attached by means of the **attach** command. Refer to the **interface loopback** command,
- All loopback interfaces must be configured with the same IPv4 address and the same VRF instance.
- The IP address of the VXLAN gateway must be configured. Refer to the **ip interface** command.
- If attached R Bridges are configured for a VXLAN gateway, the VE, VRID and VRF configurations must match on all attached R Bridges.

**Draft comment:**

This does not belong here. It is part of the interface loopback command. Be sure to include all referenced commands in the relationship table..

Use the **no activate** command in VXLAN overlay gateway configuration mode to deactivate the gateway. All associated tunnels are also deactivated.

**Examples**

**Draft comment:**

Should the overlay gateway command be mentioned under the pre-requisites?

The following example activates a VXLAN gateway named "gateway1". The gateway was previously configured by means of the **overlay-gateway** command:

```
switch# configure terminal
switch(config)# overlay-gateway gateway1
switch(config-overlay-gw-gateway1)# activate
```

**Related Commands**

[attach vlan](#), [interface loopback](#), [ip interface](#), [overlay-gateway](#)

## address-family (BGP)

Enables the IPv4 or IPv6 address-family configuration mode to configure a variety of BGP4 unicast routing options.

**Syntax** **address-family { ipv4 | ipv6 } unicast**

**no address-family { ipv4 | ipv6 } unicast**

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of this command to remove IPv4 or IPv6 address-family configurations from the device.

**Examples** To enable BGP IPv4 address-family configuration mode:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)#
```

To enable BGP IPv6 address-family configuration mode:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# router bgp
device(config-bgp-router)# address-family ipv6 unicast
device(config-bgp-ipv6u)#
```

### History

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.

## address-family (Fabric-Virtual-Gateway)

Enables IPv4 or IPv6 address family for the Fabric-Virtual-Gateway at VCS global level.

**Syntax** `address-family { ipv4 | ipv6 }`

`no address-family { ipv4 | ipv6 }`

**Command Default** Both IPv4 and IPv6 address families are enabled when global router Fabric-Virtual-Gateway configuration is created.

**Parameters** `ipv4`

Enables IPv4 address family.

`ipv6`

Enables IPv6 address family.

**Modes** Router Fabric-Virtual-Gateway configuration mode

**Usage Guidelines** Use the **no** form of the command to disable the specific IPv4 or IPv6 address family.

**Examples** The following example shows how to configure the IPv4 address family for the Fabric-Virtual-Gateway.

```
switch(config)# router fabric-virtual-gateway
switch(conf-router-fabric-virtual-gateway)# address-family ipv4
```

The following example shows how to configure the IPv6 address family for the Fabric-Virtual-Gateway.

```
switch(config)# router fabric-virtual-gateway
switch(conf-router-fabric-virtual-gateway)# address-family ipv6
```

**History**

Release version	Command history
5.0.1	This command was introduced.



## address-family (VRF)

Enables the IPv4 or IPv6 address-family configuration mode to configure a variety of VRF unicast routing options.

**Syntax** **address-family { ipv4 | ipv6 } unicast**

**no address-family { ipv4 | ipv6 } unicast**

**Modes** VRF configuration mode

**Usage Guidelines** Use the **no** form of this command to remove IPv4 or IPv6 address-family configurations from the device.

**Examples** To enable IPv4 address-family configuration mode for VRF routing:

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# vrf orange
switch(config-vrf-orange)# address-family ipv4 unicast
switch(config-ipv4-unicast)#
```

To enable IPv6 address-family configuration mode for VRF routing:

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# vrf red
switch(config-vrf-red)# address-family ipv6 unicast
switch(config-ipv6-unicast)#
```

## advertise dcbx-fcoe-app-tlv

Advertises application Type, Length, Values (TLVs) to ensure interoperability of traffic over the Data Center Bridging eXchange protocol (DCBX), which runs over LLDP to negotiate an FCoE application TLV.

**Syntax** **advertise dcbx-fcoe-app-tlv**

**no advertise dcbx-fcoe-app-tlv**

**Command Default** Advertisement is disabled.

**Modes** Protocol LLDP configuration mode

**Usage Guidelines** Converged Enhanced Ethernet (CEE) parameters related to FCoE must be negotiated before FCoE traffic can begin on a CEE link. An FCoE application TLV is exchanged over LLDP, which negotiates information such as FCoE priority, and Priority Flow Control (PFC) pause.

Enter **no advertise dcbx-fcoe-app-tlv** to return to the default setting.

**Related Commands** [advertise dot1-tlv](#), [advertise dot3-tlv](#), [advertise optional-tlv](#)

## advertise dcbx-fcoe-logical-link-tlv

Advertises to any attached device the FCoE status of the logical link.

**Syntax**    **advertise dcbx-fcoe-logical-link-tlv**  
              **no advertise dcbx-fcoe-logical-link-tlv**

**Command Default**    Advertisement is disabled.

**Modes**            Protocol LLDP configuration mode

**Usage Guidelines**    Enter **no advertise dcbx-fcoe-logical-link-tlv** to return to the default setting.

**Related  
Commands**        [advertise dcbx-fcoe-app-tlv](#)

## advertise dcbx-iscsi-app-tlv

Advertises the iSCSI traffic configuration parameters for Type, Length, Values (TLV) values.

**Syntax**    **advertise dcbx-iscsi-app-tlv**

**no advertise dcbx-iscsi-app-tlv**

**Command Default**    Advertisement is enabled.

**Modes**    Protocol LLDP configuration mode

**Usage Guidelines**    No verification or enforcement of the usage of the advertised parameters by the iSCSI server or target is done by the switch.

Enter **no advertise dcbx-iscsi-app-tlv** to return to the default setting.

**Related  
Commands**    [advertise dcbx-fcoe-app-tlv](#)

## advertise dcbx-tlv

Advertises to any attached device mandatory Data Center Bridging eXchange protocol (DCBX) Type, Length, Values (TLV) values.

**Syntax**     **advertise dcbx-tlv**

**no advertise dcbx-tlv**

**Command Default**     Advertisement is enabled.

**Modes**                Protocol LLDP configuration mode

**Usage Guidelines**     Enter **no advertise dcbx-tlv** to return to the default setting.

**Related  
Commands**            [advertise dot1-tlv](#), [advertise dot3-tlv](#), [advertise optional-tlv](#)

## advertise dot1-tlv

Advertises to any attached device IEEE 802.1 organizationally specific Type, Length, Values (TLV) values.

**Syntax** **advertise dot1-tlv**

**no advertise dot1-tlv**

**Command Default** Advertisement is disabled.

**Modes** Protocol LLDP configuration mode

**Usage Guidelines** Enter **no advertise dot1-tlv** to return to the default setting.

**Related Commands** [advertise dcbx-tlv](#), [advertise dot3-tlv](#), [advertise optional-tlv](#)

## advertise dot3-tlv

Advertises to any attached device IEEE 802.3 organizationally specific Type, Length, Values (TLV) values.

**Syntax**     **advertise dot3-tlv**

**no advertise dot3-tlv**

**Command Default**     Advertisement is disabled.

**Modes**     Protocol LLDP configuration mode

**Usage Guidelines**     Enter **no advertise dot3-tlv** to return to the default setting.

**Related Commands**     [advertise dcbx-tlv](#), [advertise dot1-tlv](#), [advertise optional-tlv](#)

## advertise optional-tlv

Advertises the optional Type, Length, and Values (TLV) values.

**Syntax** `advertise optional-tlv { management-address | port-description | system-capabilities | system-description | system-name }`

`no advertise optional-tlv`

**Command Default** Advertisement is disabled.

**Parameters** **management-address**

Advertises the management address of the system.

**port-description**

Advertises the user-configured port.

**system-capabilities**

Advertises the capabilities of the system.

**system-description**

Advertises the system firmware version and the current image running on the system.

**system-name**

Advertises the name of the system.

**Modes** Protocol LLDP configuration mode

**Usage Guidelines** Enter `no advertise optional-tlv` to return to the default setting.

**Related Commands** [advertise dcbx-tlv](#), [advertise dot1-tlv](#), [advertise dot3-tlv](#)



# advertise-backup

Enables a backup VRRP router to send advertisement frames to the master VRRP router.

**Syntax**    **advertise-backup**

**no advertise backup**

**Command Default**    Advertisement is disabled.

**Modes**            Virtual-router-group configuration mode

**Usage Guidelines**    If a backup router is enabled to send advertisement frames, the frames are sent every 60 seconds. This command can be used for VRRP-E, but not for VRRP. Enter **no advertise backup** to return to the default setting (no periodic transmission).

**Examples**          To enable the backup VRRP routers to send advertisement frames to the master VRRP router:

```
switch(config)# rbridge-id 101
switch(config-rbridge-id-101)# int ve 25
switch(config-ve-25)# vrrp-extended-group 1
switch(config-vrrp-extended-group-1)# advertise-backup
```

**Related Commands**    [advertisement-interval \(VRRP\)](#), [backup-advertisement-interval](#), [vrrp-extended-group](#)

## advertisement interval (fabric-map)

Configures the FIP advertisement interval for the FCoE fabric-map mode.

**Syntax** `advertisement interval milliseconds`

`no advertisement interval`

**Command Default** 8000 milliseconds

**Parameters** *milliseconds*

The interval value in milliseconds. Valid values range from 250 through 90000 milliseconds.

**Modes** FCoE fabric-map configuration mode

**Usage Guidelines** You must be in the feature configuration mode for FCoE fabric-map for this command to function. Enter **no advertisement interval** return to the default setting.

**Examples**

```
switch(config)# fcoe
switch(config-fcoe)# fabric-map default
switch(config-fcoe-fabric-map)# advertisement interval 8000
```

**Related  
Commands** [fcoe](#)

## advertisement-interval (VRRP)

Configures the interval at which the master VRRP router advertises its existence to the backup routers.

**Syntax** `advertisement-interval range`

**Command Default** 1 second for version 2, 1000 milliseconds for version 3.

**Parameters** `range`

Interval at which the master VRRP router advertises its existence to the backup routers. Valid values range from 1 through 255 seconds for VRRPv2 and from 100 through 40900 milliseconds for VRRPv3.

**Modes** Virtual-router-group configuration mode

**Usage Guidelines** This interval is the length of time, in seconds, between each advertisement sent from the master to its backup VRRP routers. The advertisement notifies the backup routers that the master is still active. If the backup routers do not receive an advertisement from the master in a designated amount of time, the backup with the highest priority can assume the role of master.

This command can be used for either VRRP or VRRP-E and for VRRPv3 and VRRP-Ev3.

**Examples** To set the advertisement interval to 30 seconds for VRRP-E group 10:

```
switch(config)# rbridge-id 101
switch(config-rbridge-id-101)# int ve 25
switch(config-ve-25)# vrrp-extended-group 10
switch(config-vrrp-extended-group-10)# advertisement-interval 30
```

To set the advertisement interval to 3000 milliseconds for VRRP-Ev3 group 19:

```
switch(config)# rbridge-id 122
switch(config-rbridge-id-122)# interface ve 2019
switch(config-ve-2019)# ipv6 vrrp-extended-group 19
switch(config-vrrp-extended-group-19)# advertisement-interval 3000
```

**Related Commands** [backup-advertisement-interval](#), [vrrp-extended-group](#), [vrrp-group](#)

## advertisement-interval-scale

Configures subsecond intervals at which the master VRRP-Ev3 device advertises its existence to the backup routers.

<b>Syntax</b>	<b>advertisement-interval-scale</b> <i>scale</i>
<b>Command Default</b>	1
<b>Parameters</b>	<p><b>scale</b></p> <p>Number representing the scale of the division of a configured interval at which the master VRRP-Ev3 device advertises its existence to the backup devices. Valid values are 1, 2, 5 and 10.</p>
<b>Modes</b>	Virtual-router-group configuration mode
<b>Usage Guidelines</b>	<p>This command scales the advertisement interval of the master VRRP-Ev3 device as configured by the <b>advertisement-interval</b> command. A value of 1, 2, 5, or 10 can be set and the existing advertisement interval value is divided by the scaling value, for example, if the advertisement interval is set to 1 second and the scaling value is set to 10, the new advertisement interval is 100 milliseconds. When all the advertisement intervals in a VRRP-Ev3 session are scaled, subsecond VRRP-Ev3 convergence is possible if a master fails. The advertisement notifies the backup devices that the master is still active. If the backup devices do not receive an advertisement from the master in a designated amount of time, the backup device with the highest priority can assume the role of master. Using subsecond advertising intervals, subsecond device redundancy can be achieved.</p> <p>This command is only supported by VRRP-Ev3.</p>
<b>Examples</b>	<p>To set the scaling of the advertisement interval to 500 milliseconds for VRRP-Ev3 group 19:</p> <pre>switch(config)# rbridge-id 122 switch(config-rbridge-id-122)# interface ve 2019 switch(config-ve-25)# ipv6 vrrp-extended-group 19 switch(config-vrrp-extended-group-10)# advertisement-interval 1 switch(config-vrrp-extended-group-10)# advertisement-interval-scale 2</pre>
<b>Related Commands</b>	<a href="#">advertisement-interval (VRRP)</a>

# ag

Enables Access Gateway (AG) configuration mode.

**Syntax** **ag**

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use this command while in RBridge ID configuration mode for a specific RBridge ID. This command enables Access Gateway (AG) configuration mode on a specific switch. In this mode, you can configure Access Gateway features such as Access Gateway policies, VF\_Port to N\_Port mapping, Port Grouping, N\_Port Monitoring reliability counters, and Modified Managed Fabric Name Monitoring (N-MFNM) mode timeout values.

**Examples** Enabling AG configuration mode while in RBridge ID configuration mode.

```
sw0(config-rbridge-id-2)# ag
sw0(config-rbridge-id-2-ag)#
```

**Related Commands** [show ag](#), [clear ag nport-utilization](#)

## ag enable

Enables Access Gateway mode on a switch as follows: Enables FC ports, configures them as N\_Ports, and then maps them to VF\_Ports.

<b>Syntax</b>	<b>ag enable</b> <b>no ag enable</b>				
<b>Modes</b>	Privileged EXEC mode				
<b>Usage Guidelines</b>	Enabling Access Gateway mode reboots the switch. The initial mapping of N_Ports to VF_Ports implements the current default mapping configuration. To disable Access Gateway mode, enter the <b>no ag enable</b> command.				
<b>Examples</b>	The following example enables AG mode on a local switch: switch# ag enable  The following example disables AG mode on a local switch: switch# no ag enable				
<b>History</b>	<table border="1"> <thead> <tr> <th>Release version</th> <th>Command history</th> </tr> </thead> <tbody> <tr> <td>5.0.0</td> <td>The <b>rbridge-id</b> and <b>vcs-id</b> parameters are no longer supported for this command.</td> </tr> </tbody> </table>	Release version	Command history	5.0.0	The <b>rbridge-id</b> and <b>vcs-id</b> parameters are no longer supported for this command.
Release version	Command history				
5.0.0	The <b>rbridge-id</b> and <b>vcs-id</b> parameters are no longer supported for this command.				
<b>Related Commands</b>	<a href="#">show ag</a> , <a href="#">show ag map</a> , <a href="#">show ag nport-utilization</a> , <a href="#">show ag pg</a>				

## aggregate-address (BGP)

Configures the device to aggregate routes from a range of networks into a single network prefix.

<b>Syntax</b>	<b>aggregate-address</b> { <i>ip-addr ip-mask</i>   <i>ipv6-addr ipv6-mask</i> } [ <b>as-set</b> ] [ <b>summary-only</b> ] [ <b>suppress-map</b> <i>map-name</i> ] [ <b>advertise-map</b> <i>map-name</i> [ <b>attribute-map</b> <i>map-name</i> ] ]
	<b>no aggregate-address</b>
<b>Command Default</b>	The address aggregation feature is disabled. By default, the device advertises individual routes for all networks.
<b>Parameters</b>	<p><b><i>ip-addr</i></b> IPv4 address.</p> <p><b><i>ip-mask</i></b> IPv4 mask.</p> <p><b><i>ipv6-addr</i></b> IPv6 address.</p> <p><b><i>ipv6-mask</i></b> IPv6 mask.</p> <p><b>as-set</b> IPv6 mask.</p> <p><b>summary-only</b> Causes the device to aggregate AS-path information for all routes in the aggregate routes from a range of networks into a single network prefix.</p> <p><b>suppress-map</b> Prevents the device from advertising more-specific routes contained within the aggregate route.</p> <p><b>advertise-map</b> Prevents the more-specific routes contained in the specified route map from being advertised.</p> <p><b>attribute-map</b> Causes the device to advertise the more-specific routes in the specified route map.</p> <p><b><i>map-name</i></b> Causes the device to set attributes for the aggregate routes according to the specified route map.</p> <p><b><i>map-name</i></b> Specifies a route map to be consulted.</p>
<b>Modes</b>	BGP address-family IPv4 unicast configuration mode BGP address-family IPv6 unicast configuration mode
<b>Usage Guidelines</b>	Use the <b>no</b> form of this command to restore the defaults.
<b>Examples</b>	<p>To aggregate routes from a range of networks into a single network prefix and prevent the device from advertising more-specific routes:</p> <pre>device# configure terminal device(config)# rbridge-id 10 device(config-rbridge-id-10)# router bgp device(config-bgp-router)# address-family ipv4 unicast device(config-bgp-ipv4u)# aggregate-address 10.11.12.0 summary-only</pre>

To aggregate routes from a range of networks into a single network prefix under the IPv6 address family and advertise the paths for this route as AS\_SET:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# router bgp
device(config-bgp-router)# address-family ipv6 unicast
device(config-bgp-ipv6u)# aggregate-address 2001:DB8:12D:1300::/64 as-set
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.

**Related Commands**

[route-map](#)



# alias

Configures the global or user-level alias for switch commands.

**Syntax** **alias** *string expansion*

**no alias** *string expansion*

**Parameters** **string**

Alias name string. The number of characters can be from 1 through 64.

**expansion**

Commands for the alias name. Multiple commands can be separated with a semicolon (;).

**Modes** Alias configuration mode

User-alias configuration mode

**Usage Guidelines** The global alias is visible to all users. When the global alias name is called, the configured alias expansion commands are executed on the prompt.

The user-level alias is accessible only when the respective user logs in.

Use the **no** form of this command to remove the alias. You must be in the correct configuration mode in order to remove the global or user alias.

**Examples** The following example sets both a switch alias and a user alias.

```
switch(config)# alias-config
switch(config-alias-config)# alias user-alias "show clock"
switch(config-alias-config)# alias company Brocade
switch(config-alias-config)# alias redwood engineering
switch(config-alias-config)# user john smith
switch(config-alias-config-user)# alias manager engineering
```

**Related Commands** [alias-config, user \(alias configuration\)](#)

## alias-config

Launches the alias configuration mode, allowing you to configure the switch alias.

**Syntax** **alias-config**

**Modes** Global configuration mode

**Examples** Example of setting a switch alias and a user alias.

```
switch(config)# alias-config
switch(config-alias-config)# alias user-alias "show clock"
switch(config-alias-config)# alias company Brocade
switch(config-alias-config)# alias redwood engineering
switch(config-alias-config)# user john smith
switch(config-alias-config-user)# alias manager engineering
```

**Related  
Commands** [alias](#), [user \(alias configuration\)](#)

## allow non-profiled-macs

Specifies whether non-profiled MAC addresses on the profiled port are dropped.

**Syntax**    **allow non-profiled-macs**

**no allow non-profiled-macs**

**Command Default**    Non-profiled MAC addresses are not dropped.

**Modes**            Port-profile mode

**Usage Guidelines**    This configuration is allowed on the default profile only.  
                          Enter **no allow non-profiled-macs** to return to the default setting.

**Examples**

```
switch(config)# port-profile default
switch(config-port-profile-default)# allow non-profiled-macs
```

## always-compare-med

Configures the device always to compare the Multi-Exit Discriminators (MEDs), regardless of the autonomous system (AS) information in the paths.

**Syntax** **always-compare-med**

**no always-compare-med**

**Command Default** This feature is disabled.

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of this command to restore the default.

**Examples** To configure the device always to compare the MEDs:

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router bgp
switch(config-bgp-router)# always-compare-med
```

## always-propagate (BGP)

Enables the device to reflect routes even though they are not installed in the Routing Table Manager (RTM).

**Syntax** **always-propagate**

**no always-propagate**

**Command Default** This feature is disabled.

**Modes** BGP address-family IPv4 unicast configuration mode

BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** Use the **no** form of this command to restore the default.

**Examples** To configure the device to reflect routes that are not installed in the RTM:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# always-propagate
```

### History

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.

## area authentication (OSPFv3)

Enables authentication for an Open Shortest Path First (OSPF) area.

**Syntax** `area { A.B.C.D | decimal } authentication spi spi { ah | esp null } { hmac-md5 | hmac-sha1 } key [ no-encrypt ] key`

`no area { A.B.C.D | decimal } authentication spi spi`

**Command Default** Authentication is not enabled on an area.

If the **no-encrypt** keyword is not used, the key is stored in encrypted format by default.

**Parameters** *A.B.C.D*

Area address in dotted decimal format.

*decimal*

Area address in decimal format.

**spi**

Specifies the Security Policy Index (SPI) value. Valid values range from decimal numbers 512 through 4294967295

**ah**

Specifies authentication header (ah) as the protocol to provide packet-level security.

**esp**

Specifies Encapsulating Security Payload (ESP) as the protocol to provide packet-level security.

**null**

Specifies that the ESP payload is not encrypted.

**hmac-md5**

Enables Hashed Message Authentication Code (HMAC) Message Digest 5 (MD5) authentication on the OSPF area.

**hmac-sha1**

Enables HMAC Secure Hash Algorithm 1 (SHA-1) authentication on the OSPF area.

**key**

Number used in the calculation of the message digest. The 40 hexadecimal character key is stored in encrypted format by default.

**no-encrypt**

The 40-character key is not encrypted upon either its entry or its display.

**key**

The 40 hexadecimal character key.

**Modes** OSPFv3 VRF router configuration mode

**Usage Guidelines** Enter **no area authentication spi** to remove an authentication specification for an area from the configuration.

The 40 hexadecimal character key is encrypted by default. Use the **no-encrypt** parameter to disable encryption.

**Examples** To enable ah and MD5 authentication for an OSPF area, setting a SPI value of 750:

```
device# configure
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ip router-id 10.1.2.3
device(config-rbridge-id-122)# ipv6 router ospf
device(config-ipv6-router-ospf-vrf-default-vrf)# area 0 authentication spi 750 ah
  hmac-md5 key abcef12345678901234fedcba098765432109876
```

To enable esp and SHA-1 authentication for an OSPF area, setting a SPI value of 900:

```
device# configure
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ip router-id 10.1.2.3
device(config-rbridge-id-122)# ipv6 router ospf
device(config-ipv6-router-ospf-vrf-default-vrf)# area 0 authentication spi 750 esp
  null hmac-md5 sha1 abcef12345678901234fedcba098765432109876
```

#### History

Release version	Command history
5.0.1a	This command was introduced.

## area nssa (OSPF)

Creates a not-so-stubby area (NSSA) or modifies its parameters.

**Syntax** `area { A.B.C.D | decimal } nssa { metric [ no-summary ] | default-information-originate }`

**no area nssa**

**Command Default** No areas are created.

**Parameters** *A.B.C.D*

Area address in dotted decimal format.

**decimal**

Area address In decimal format.

**metric**

Additional cost for using a route to or from this area.

**no-summary**

When configured on the NSSA area border router (ABR), this parameter prevents any Type 3 and Type 4 summary link-state advertisement (LSA) from being injected into the area. The only exception is that a default route is injected into the NSSA by the ABR, and strictly as a Type 3 LSA (not a Type 7, because that could cause intra-AS traffic to get routed out the AS). This makes the NSSA an NSSA totally stubby area, which can only have Type 1, 2 and 7 LSAs. **Note:** This parameter is disabled by default, which means the default route must use a Type 7 LSA.

**default-information-originate**

When configured on the ABR, this parameter injects a Type 7 default route into the NSSA area. As a result, the other NSSA routers install the default route through the advertising NSSA ABR. By default the NSSA ABR does not originate a default route to the NSSA.

**Modes** OSPF VRF router configuration mode

**Usage Guidelines** NSSAs are typically needed when one-way transmission of Type-5 LSAs (out of the area) is desired but injection of the same LSAs into the area is not acceptable.

Once created, the type of the area cannot be changed. The only exception to this rule is that an NSSA or stub area can be changed to a totally NSSA or a totally stub area, respectively.

Enter **no area nssa** to delete an NSSA.

**Examples** To set an additional cost of 5 on an NSAA identified as 2 (in decimal format), and include the no-summary parameter:

```
device# configure terminal
device(config)# rbridge-id 5
device(config-rbridge-id-5)#router ospf
device(config-router-ospf-vrf-default-vrf)# area 2 nssa 5 no-summary
```



## area nssa (OSPFv3)

Creates a not-so-stubby area (NSSA) or modifies its parameters.

**Syntax** `area { A.B.C.D | decimal } nssa [ metric ] [ default-information-originate [ metric num | metric-type { type-1 | type-2 } ] ] [ no-redistribution ] [ no-summary ] [ translator-always ] [ translator-interval interval ]`

**no area nssa**

**Command Default** No areas are created.

**Parameters** ***A.B.C.D***

Area address in dotted decimal format.

***decimal***

Area address in decimal format.

***metric***

Additional cost for using a route to or from this area. Valid values range from 1 through 1048575.

**default-information-originate**

When configured on the ABR, this parameter injects a Type 7 default route into the NSSA area. As a result, the other NSSA routers install the default route through the advertising NSSA ABR. By default the NSSA ABR does not originate a default route to the NSSA.

**metric-type**

Specifies how the cost of a neighbor metric is determined. The default is type-1.

**type-1**

The metric of a neighbor is the cost between itself and the router plus the cost of using this router for routing to the rest of the world.

**type-2**

The metric of a neighbor is the total cost from the redistributing routing to the rest of the world.

**no-redistribution**

The no-redistribution parameter prevents an NSSA ABR from generating external (type-7) LSA into an NSSA area. This is used in the case where an ASBR should generate type-5 LSA into normal areas and should not generate type-7 LSA into NSSA area. By default, redistribution is enabled in a NSSA.

**no-summary**

When configured on the NSSA area border router (ABR), this parameter prevents any Type 3 and Type 4 summary link-state advertisement (LSA) from being injected into the area. The only exception is that a default route is injected into the NSSA by the ABR, and strictly as a Type 3 LSA (not a Type 7, because that could cause intra-AS traffic to get routed out the AS). This makes the NSSA an NSSA totally stubby area, which can only have Type 1, 2 and 7 LSAs. **Note:** This parameter is disabled by default, which means the default route must use a Type 7 LSA.

**translator-always**

Configures the translator-role. When configured on an ABR, this causes the router to unconditionally assume the role of an NSSA translator. By default, translator-always is not set, the translator role by default is candidate.

**translator-interval** *interval*

Configures the time interval for which an elected NSSA translator continues to perform its duties even after its NSSA translator role has been disposed by another router. By default the stability-interval is 40 seconds and its range is 10 to 60 seconds.

- Modes** OSPFv3 VRF router configuration mode
- Usage Guidelines** NSSAs are typically needed when one-way transmission of Type-5 LSAs (out of the area) is desired but injection of the same LSAs into the area is not acceptable.  
Once created, the type of the area cannot be changed. The only exception to this rule is that an NSSA or stub area can be changed to a totally NSSA or a totally stub area, respectively.  
Enter **no area nssa** to delete an NSSA.
- Examples** To set an additional cost of 4 on an NSAA identified as 8 (in decimal format), and prevent any Type 3 or Type 4 summary LSAs from being injected into the area:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)#ipv6 router ospf
device(config-ipv6-router-ospf-vrf-default-vrf)# area 8 nssa 4 no-summary
```

History	Release version	Command history
	5.0.0	This command was introduced.

## area range (OSPF)

Specifies area range parameters on an Area Border Router (ABR).

**Syntax** `area { A.B.C.D | decimal } range E.F.G.H I.J.K.L { advertise | not-advertise } [ cost cost_value ]`  
**no area range**

**Parameters** **A.B.C.D**

Area address in dotted decimal format.

**decimal**

Area address in decimal format.

**E.F.G.H I.J.K.L**

Specifies the IPv6 address and mask portion of the range. All network addresses that match this network are summarized in a single route and advertised by the ABR.

**advertise**

Sets the address range status to *advertise* and generates a Type 3 summary LSA.

**cost cost\_value**

Sets the cost value for the area range. This value is used as the generated summary LSA cost. The range for *cost\_value* is 1 to 6777214. If this value is not specified, the cost value is the default range metric calculation for the generated summary LSA cost.

**not-advertise**

Sets the address range status to DoNotAdvertise; the Type 3 LSA is suppressed, and the component networks remain hidden from other networks. This setting is used to temporarily pause route summarization from the area.

**Modes** OSPF/OSPFv3 VRF router configuration mode

**Usage Guidelines** Use this command only on ABRs to specify route summarization for an existing area. The result is that a single summary route is advertised to other areas by the ABR, in the form of a Type 3 LSA. Routing information is condensed at area boundaries and external to the area, and only a single route is advertised for each address range.

An example of when you might want to use this command is if you have many small networks advertised from area 0 to any other area, or from any non-backbone area into the backbone. This command gives you a summary route instead of many smaller routes. In an area, the OSPF database on each router must be an exact copy of the databases of the other routers. This means that no summarization is allowed within the area.

Enter **no area range** to disable the specification of range parameters on an ABR

**Examples** To advertise to Area 3 all the addresses on the network 1.1.1.0 255.255.255.0 in the ABR you are signed into:

```
device# configure terminal
device(config)# rbridge-id 5
device(config-rbridge-id-5)# router ospf
device(config-router-ospf-vrf-default-vrf)# area 3 range 1.1.1.0 255.255.255.0
advertise
```

History	Release version	Command history
	5.0.0	Support was added for OSPFv3.

## area stub (OSPF)

Creates or deletes a stub area or modifies its parameters.

**Syntax** `area { A.B.C.D | decimal } stub metric [ no-summary ]`

`no area stub`

**Command Default** No areas are created.

**Parameters** *A.B.C.D*

Area address in dotted decimal format.

*decimal*

Area address in decimal format.

*metric*

Additional cost for using a route to or from this area. Valid values range from 3 through 1048575.

**no-summary**

When configured on the ABR, prevents any Type 3 and Type 4 summary LSAs from being injected into the area. The only exception is that a default route is injected into the stub/totally stubby area by the ABR as a Type 3 LSA. Enabling this parameter makes the area a so-called totally stubby area, which can only have Types 1 and 2. This parameter is disabled by default.

**Modes** OSPF/OSPFv3 VRF router configuration mode

**Usage Guidelines** Once created, the type of the area cannot be changed. The only exception to this rule is that an NSSA or stub area can be changed to a totally NSSA or a totally stub area, respectively.

Enter **no area stub** to delete a stub area.

**Examples** To set an additional cost of 5 on a stub area called 2 (in decimal format):

```
device# configure terminal
device(config)# rbridge-id 5
device(config-rbridge-id-5)# router ospf
device(config-router-ospf-vrf-default-vrf)# area 2 stub 5
```

**History**

**Release version**

**Command history**

5.0.0

Support was added for OSPFv3.

## area virtual-link (OSPF)

Creates or modifies virtual links for an area.

**Syntax** `area { A.B.C.D | decimal } virtual-link E.F.G.H [ authentication-key { 0 | 2 | 255 } password ] [ dead-interval time ] [ hello-interval time ] [ md5-authentication { key-activation-wait-time time | key-id num key } ] [ retransmit-interval time ] [ transmit-delay time ]`

**no area virtual-link**

**Command Default** No virtual links are created.

**Parameters** **A.B.C.D**

Area address in dotted decimal format.

**decimal**

Area address in decimal format.

**E.F.G.H**

ID of the OSPF router at the remote end of the virtual link.

**authentication-key**

Sets the password and encryption method. Only one encryption method can be active on an interface at a time. All OSPF packets transmitted on the interface contain this password. All OSPF packets received on the interface are checked for this password. If the password is not present, then the packet is dropped.

**0**

Does not encrypt the password you enter.

**2**

Encrypts the password you enter.

**255**

Encrypts a plain-text password that you enter.

**password**

OSPF password. The password can be up to eight alphanumeric characters.

**dead-interval time**

How long a neighbor router waits for a hello packet from the current router before declaring the router down. This value must be the same for all routers and access servers that are attached to a common network. Valid values range from 3 through 65535 seconds. The default is 40 seconds.

**hello-interval**

Time between hello packets that the router sends on an interface. The value must be the same for all routers and access servers that are attached to a common network. Valid values range from 1 through 65535 seconds. The default is 10 seconds.

**md5-authentication**

Sets either MD5 key-activation wait time or key identifier.

**key-activation-wait-time time**

Time before a newly configured MD5 authentication key is valid. This parameter provides a graceful transition from one MD5 key to another without disturbing the network. All new packets transmitted after the wait time ends will use the newly configured MD5 Key. OSPF packets that contain the old MD5 key are accepted for up to five minutes (300 seconds)

after the new MD5 key is in operation. Valid values range from 0 through 14400 seconds. The default is 300 seconds.

**key-id *num* key**

The *num* is a number between 1 and 255 which identifies the MD5 key being used. This parameter is required to differentiate among multiple keys defined on a router. When MD5 is enabled, the key is an alphanumeric password of up to 16 characters that is later encrypted and included in each OSPF packet transmitted. You must enter a password in this field when the system is configured to operate with either simple or MD5 authentication. By default, the MD5 authentication key is encrypted.

**retransmit-interval *time***

Time between Link State Advertisement (LSA) retransmissions for adjacencies belonging to the interface. Set this interval to a value larger than the expected round-trip delay between any two routers on the attached network. Valid values range from 0 through 3600 seconds. The default is 5 seconds.

**transmit-delay *time***

Estimated time required to send an LSA on the interface. This value must be an integer greater than zero. The age of each LSA in the update packet is incremented by the value of this parameter before transmission occurs. Valid values range from 0 through 3600 seconds. The default is 1 second.

**Modes** OSPF VRF router configuration mode

**Usage Guidelines** Enter **no area virtual-link** to remove a virtual link.

**Examples** To create a virtual link for an area whose decimal address is 1, and where the ID of the OSPF router at the remote end of the virtual link is 10.1.2.3:

```
device# configure terminal
device(config)# rbridge-id 5
device(config-rbridge-id-5)# router ospf
device(config-router-ospf-vrf-default-vrf)# area 1 virtual-link 10.1.2.3
```

## area virtual-link (OSPFv3)

Creates or modifies virtual links for an area.

**Syntax** `area { A.B.C.D | decimal } virtual-link E.F.G.H [ dead-interval time ] [ hello-interval time ] [ hello-jitter interval ] [ retransmit-interval time ] [ transmit-delay time ]`

**no area virtual-link**

**Command Default** No virtual links are created.

**Parameters** **A.B.C.D**

Area address in dotted decimal format.

***decimal***

Area address in decimal format.

***E.F.G.H***

ID of the OSPFv3 router at the remote end of the virtual link.

***dead-interval time***

How long a neighbor router waits for a hello packet from the current router before declaring the router down. This value must be the same for all routers and access servers that are attached to a common network. Valid values range from 3 through 65535 seconds. The default is 40 seconds.

***hello-interval***

Time between hello packets that the router sends on an interface. The value must be the same for all routers and access servers that are attached to a common network. Valid values range from 1 through 65535 seconds. The default is 10 seconds.

***hello-jitter***

Sets the allowed jitter between hello packets. Valid values range from 1 through 50 percent (%). The default value is 10%.

***retransmit-interval time***

Time between Link State Advertisement (LSA) retransmissions for adjacencies belonging to the interface. Set this interval to a value larger than the expected round-trip delay between any two routers on the attached network. Valid values range from 0 through 3600 seconds. The default is 5 seconds.

***transmit-delay time***

Estimated time required to send an LSA on the interface. This value must be an integer greater than zero. The age of each LSA in the update packet is incremented by the value of this parameter before transmission occurs. Valid values range from 0 through 3600 seconds. The default is 1 second..

**Modes** OSPFv3 VRF router configuration mode

**Usage Guidelines** Enter **no area virtual-link** to remove a virtual link.

**Examples** To create a virtual link for an area whose decimal address is 1, and where the ID of the OSPFv3 router at the remote end of the virtual link is 209.157.22.1:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ipv6 router ospf
device(config-ipv6-router-ospf-vrf-default-vrf)# area 1 virtual-link 209.157.22.1
```



History	Release version	Command history
	5.0.0	This command was introduced.

## area virtual-link authentication (OSPFv3)

Enables authentication for virtual links in an OSPF area.

**Syntax** `area { A.B.C.D | decimal } virtual-link authentication spi spi { ah | esp null } { hmac-md5 | hmac-sha1 } key [ no-encrypt ] key`

`no area { A.B.C.D | decimal } virtual-link authentication spi spi`

**Command Default** Authentication is not enabled on a virtual-link.

The 40 hexadecimal character key is encrypted by default. Use the **no-encrypt** parameter to disable encryption.

**Parameters** **A.B.C.D**

Area address in dotted decimal format.

**decimal**

Area address in decimal format.

**spi**

Specifies the security policy index (SPI) value. Valid values range from decimal numbers 512 through 4294967295

**ah**

Specifies authentication header (ah) as the protocol to provide packet-level security.

**esp**

Specifies Encapsulating Security Payload (ESP) as the protocol to provide packet-level security.

**null**

Specifies that the ESP payload is not encrypted.

**hmac-md5**

Enables Hashed Message Authentication Code (HMAC) Message Digest 5 (MD5) authentication on the OSPF area.

**hmac-sha1**

Enables HMAC Secure Hash Algorithm 1 (SHA-1) authentication on the OSPF area.

**key**

Number used in the calculation of the message digest. The 40 hexadecimal character key is stored in encrypted format by default.

**no-encrypt**

The 40-character key is not encrypted upon either its entry or its display.

**key**

The 40 hexadecimal character key.

**Modes** OSPFv3 VRF router configuration mode

**Usage Guidelines** Enter `no area { A.B.C.D | decimal } virtual-link authentication spi spi` to remove authentication from the virtual-links in the area.

**Examples** To configure IPsec on a virtual link in an OSPF area:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ip router-id 10.1.2.2
device(config-rbridge-id-122)# ipv6 router ospf
device(config-ipv6-router-ospf-vrf-default-vrf)# area 2 virtual-link 10.1.2.2
authentication spi 600 ah hmac-sha1 no-encrypt key
1134567890223456789012345678901234567890
```

**History**

Release version	Command history
5.0.1a	This command was introduced.

# arp

Enables specification of an IPv4 address for an Address Resolution Protocol (ARP) entry.

**Syntax** `arp A.B.C.D mac_address [ ve vlan_id | <N>gigabitethernet rbridge-id/slot/port ]`

**Parameters** *A.B.C.D*

A valid IP address.

*mac\_address*

A valid MAC address.

*<N>gigabitethernet*

Represents a valid, physical Ethernet subtype for all available Ethernet speeds.

Enter ? to see which interface subtypes are available. Replace

*<N>gigabitethernet* with the desired operand (for example,

**tengigabitethernet** specifies a 10-Gb Ethernet port). The use of

**gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

*rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

*ve vlan\_id*

Specifies the corresponding VLAN interface that must already be configured before the VE interface can be created. Refer to the Usage Guidelines.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Before you can configure a VE interface, you must configure a VLAN interface. The corresponding VE interface must use the same VLAN ID you used to configure the VLAN.

Enter **no interface ve vlan\_id** to remove the VE interface. This will not remove the corresponding VLAN interface.



## CAUTION

If no RBridge ID is configured on the switch, deleting the VE interface will cause a spike in CPU usage. To prevent this, configure an RBridge ID before deleting the VE interface.

## as-path-ignore

Disables the comparison of the autonomous system (AS) path lengths of otherwise equal paths.

**Syntax** **as-path-ignore**

**no as-path-ignore**

**Command Default** This feature is disabled.

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of this command to restore the default.

**Examples** To configure the device always to disable the comparison of AS path lengths:

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router bgp
switch(config-bgp-router)# as-path-ignore
```

## attach rbridge-id

Assigns a range of RBridge IDs to a VXLAN gateway instance.

<b>Syntax</b>	<b>attach rbridge-id</b> { <b>add</b>   <b>remove</b> } <i>rb-range</i>
<b>Parameters</b>	<p><b>add</b></p> <p>Attaches a specified range of RBridge IDs to a VXLAN gateway.</p> <p><b>remove</b></p> <p>Un-attaches a specified range of RBridge IDs from a VXLAN gateway.</p> <p><b>rb-range</b></p> <p>Specifies a range of RBridge IDs to attach to the VXLAN gateway, up to a maximum of four RBridge IDs. (You can also specify just one RBridge ID.) Ranges can be specified by hyphens, separated by commas, or contain a mixture of both.</p>
<b>Modes</b>	VXLAN overlay gateway configuration mode
<b>Usage Guidelines</b>	<p>This command is allowed for a switch that is in logical chassis cluster mode only.</p> <p>Use the <b>add</b> form of the command to attach RBridge IDs to the VXLAN gateway, and use the <b>remove</b> form of the command to unattach RBridge IDs from the VXLAN gateway. The maximum number of RBridge IDs that can be attached is four.</p> <p>When unattaching RBridge IDs, gateway and tunnel configurations on the specified RBridge IDs are deleted.</p> <p>You can configure other properties for the gateway instance while in VXLAN overlay gateway configuration mode, but the gateway instance is not created until you enter the <b>attach rbridge-id</b> command. Do not use a space after a comma when specifying a range of RBridge IDs. For example, to specify RBridge 5 through 7 and RBridge 9, enter the following: 5-7,9.</p> <p>The RBridge IDs that you specify must already be known to the cluster. (RBridge IDs that have been removed from the cluster by means of the <b>no vcs enable rbridge-id</b> command cannot be used to attach to the VXLAN gateway.)</p> <p>The RBridge IDs that you specify must be on a VXLAN-capable gateway (either the Brocade VDX 6740 or VDX 6740-T).</p>
<b>Examples</b>	<p>To add an RBridge ID range of 10 through 12 on a VXLAN overlay gateway instance named "gateway1":</p> <pre>switch# configure switch(config)# overlay-gateway gateway1 switch(config-overlay-gw-gateway1)# attach rbridge-id add 10-12</pre>
<b>Related Commands</b>	<a href="#">overlay-gateway</a> , <a href="#">rbridge-id</a>

## attach rbridge-id (Fabric-Virtual-Gateway)

Assigns a range of RBridge IDs to the global VE interface.

<b>Syntax</b>	<b>attach rbridge-id</b> { <b>add</b>   <b>remove</b> } <i>rb-range</i>	
<b>Command Default</b>	None	
<b>Parameters</b>	<b>add</b>	Attaches a specified range of RBridge IDs to the VE interface.
	<b>remove</b>	Removes a specified range of RBridge IDs from the VE interface.
	<b>rb-range</b>	Specifies a range of RBridge IDs to attach to the VE interface, up to a maximum of four RBridge IDs. (You can also specify a single RBridge ID.) Ranges can be specified by hyphens, separated by commas, or contain a mixture of both.
<b>Modes</b>	Fabric-Virtual-Gateway global VE interface configuration mode	
<b>Usage Guidelines</b>	Use the <b>add</b> form of the command to attach RBridge IDs to the VE interface, and use the <b>remove</b> form of the command to unattach RBridge IDs from the VE interface. The maximum number of RBridge IDs that can be attached is four.	
<b>Examples</b>	The following example shows how to attach an RBridge-ID to the VE interface.	
	<pre>switch(config)# interface ve 2000 switch(config-Ve-2000)# attach rbridge-id add 54,55</pre>	
<b>History</b>	<b>Release version</b>	<b>Command history</b>
	5.0.1	This command was introduced.

## attach vlan

Identifies exported VLANs in VXLAN gateway configurations.

<b>Syntax</b>	<p><b>attach vlan</b> <i>vlan_ID</i> [ <b>mac</b> <i>mac_address</i> ]</p> <p><b>no attach vlan</b> <i>vlan_ID</i></p>
<b>Parameters</b>	<p><b>vlan</b> <i>vlan_ID</i></p> <p>Specifies the VLAN ID of the VXLAN gateway. This can be a range, such as 5, 10, 20-25.</p> <p><b>mac</b> <i>mac_address</i></p> <p>Specifies the MAC address of a VXLAN gateway, in <i>HHHH.HHHH.HHHH</i> format.</p>
<b>Modes</b>	VXLAN overlay gateway configuration mode
<b>Usage Guidelines</b>	<p>Exported VLANs are VLANs that can be mapped to VXLAN domains. All the MAC addresses that the VXLAN gateway learns on these VLANs are shared with the NSX controller.</p> <p>This command is applicable only when the gateway type is <b>nsx</b>, as configured by means of the <b>overlay-gateway</b> command.</p> <p>This command can optionally accept specific MAC addresses, which can be shared with the NSX Controller. If the user specifies MAC addresses, only the specified MAC addresses are shared with the NSX Controller for the specified VLAN. The specified VLAN must already be configured.</p> <p>You cannot run two forms of this command that use the same VLAN IDs. For example, the commands <b>attach vlan x</b> and <b>attach vlan xmac y</b> cannot coexist. If one form of the configuration exists, the other form of the configuration that uses the same VLAN ID is rejected.</p> <p>Also, you cannot specify a VLAN range and a MAC address on the same command line. You can, however, specify a single VLAN ID and a MAC address on the same command line.</p> <p>The <b>no</b> form of this command stops the MAC addresses behind the specified VLANs from being shared with the NSX Controller.</p> <p>The deletion of a VLAN specified by this command is not allowed. For example, if you enter the <b>attach vlan x</b> command, you cannot delete the exported VLAN called x by running the <b>no interface vlan x</b> command.</p>
<b>Examples</b>	<p>To specify an exported VLAN ID and a MAC address for a VXLAN gateway named "gateway1" that is already configured:</p> <pre>switch# configure switch(config)# overlay-gateway gateway1 switch(config-overlay-gw-gateway1)# attach vlan 5 mac 00:05:1e:c5:96:a4</pre>
<b>Related Commands</b>	<a href="#">overlay-gateway</a>



## auto-cost reference-bandwidth (OSPF)

Configures reference bandwidth.

**Syntax** `auto-cost reference-bandwidth { ref-bw | use-active-ports }`

`no auto-cost reference-bandwidth`

**Command Default** Reference bandwidth is 100 Mbps.

**Parameters** *ref-bw*

Reference bandwidth in Mbps. Valid values range from 1 through 4294967.

**use-active-ports**

When set, any dynamic change in bandwidth immediately affects the cost of OSPF routes. This parameter enables cost calculation for currently active ports only.

**Modes** OSPF VRF router configuration mode

**Usage Guidelines** OSPF calculates the cost of a route as the ratio of the reference bandwidth to the bandwidth of the egress interface. An increase in the reference bandwidth results in an increased cost. If the resulting cost is less than 1, the software rounds the cost up to 1.

The bandwidth for interfaces that consist of more than one physical port is calculated as follows:

- LAG group — The combined bandwidth of all the ports.
- Virtual interface — The combined bandwidth of all the ports in the port-based VLAN that contains the virtual interface.

If a change to the reference bandwidth results in a cost change to an interface, the device sends a link-state update to update the costs of interfaces advertised by the device.

---

### NOTE

If you specify the cost for an individual interface (by using the `ip ospf cost` command), the cost you specify overrides the cost calculated by the software.

---

Enter `no auto-cost reference-bandwidth` to disable bandwidth configuration.

**Examples** To change a reference bandwidth of 500:

```
switch# configure
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)#router ospf
switch(config-router-ospf-vrf-default-vrf)# auto-cost reference-bandwidth 500
```

The reference bandwidth specified in this example results in the following costs:

- 10 Mbps port's cost =  $500/10 = 50$ .
- 100 Mbps port's cost =  $500/100 = 5$ .
- 1000 Mbps port's cost =  $500/1000 = 0.5$ , which is rounded up to 1.

The costs for 10 Mbps and 100 Mbps ports change as a result of the changed reference bandwidth. Costs for higher-speed interfaces remain the same.

**Related Commands** [ip ospf cost](#)

## auto-cost reference-bandwidth (OSPFv3)

Configures reference bandwidth.

**Syntax** `auto-cost reference-bandwidth { ref-bw }`

**no auto-cost reference-bandwidth**

**Command Default** Reference bandwidth is 100 Mbps.

**Parameters** *ref-bw*

Reference bandwidth in Mbps. Valid values range from 1 through 4294967.

**Modes** OSPFv3 VRF router configuration mode

**Usage Guidelines** OSPFv3 calculates the cost of a route as the ratio of the reference bandwidth to the bandwidth of the egress interface. An increase in the reference bandwidth results in an increased cost. If the resulting cost is less than 1, the software rounds the cost up to 1.

The bandwidth for interfaces that consist of more than one physical port is calculated as follows:

- LAG group — The combined bandwidth of all the ports.
- Virtual interface — The combined bandwidth of all the ports in the port-based VLAN that contains the virtual interface.

If a change to the reference bandwidth results in a cost change to an interface, the device sends a link-state update to update the costs of interfaces advertised by the device.

---

### NOTE

If you specify the cost for an individual interface (by using the **ipv6 ospf cost** command), the cost you specify overrides the cost calculated by the software.

---

Enter **no auto-cost reference-bandwidth** to disable bandwidth configuration.

**Examples** To change a reference bandwidth to 500:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-5)# ipv6 router ospf
device(config-ipv6-router-ospf-vrf-default-vrf)# auto-cost reference-bandwidth 500
```

- The reference bandwidth specified in this example results in the following costs: 10 Mbps port's cost =  $500/10 = 50$ .
- 100 Mbps port's cost =  $500/100 = 5$ .
- 1000 Mbps port's cost =  $500/1000 = 0.5$ , which is rounded up to 1.
- 155 Mbps port cost =  $500/155 = 3.23$ , which is rounded up to 4
- 622 Mbps port cost =  $500/622 = 0.80$ , which is rounded up to 1
- 2488 Mbps port cost =  $500/2488 = 0.20$ , which is rounded up to 1

The costs for 10 Mbps, 100 Mbps, and 155 Mbps ports change as a result of the changed reference bandwidth. Costs for higher-speed interfaces remain the same.

### History

Release version	Command history
5.0.0	This command was introduced.

**Related  
Commands** [ipv6 ospf cost](#)

## backup-advertisement-interval

Configures the interval at which backup VRRP routers advertise their existence to the master router.

<b>Syntax</b>	<b>backup-advertisement-interval</b> <i>interval</i>
<b>Command Default</b>	60 seconds
<b>Parameters</b>	<b><i>interval</i></b>  Interval at which a backup VRRP router advertises its existence to the master router. Valid values range from 60 through 3600 seconds.
<b>Modes</b>	Virtual-router-group configuration mode
<b>Usage Guidelines</b>	The interval is the length of time, in seconds, between each advertisement sent from the backup routers to the master router. The advertisement notifies the master router that the backup is still active. If the master router does not receive an advertisement from the backup in a designated amount of time, the backup with the highest priority can assume the role of master.  This command can be used for either VRRP or VRRP-E.
<b>Examples</b>	To set the backup advertisement interval to 120 seconds for VRRP-E group 10:  <pre>switch(config)# rbridge-id 101 switch(config-rbridge-id-101)# int ve 25 switch(config-ve-25)# vrrp-extended-group 10 switch(config-vrrp-extended-group-10)# backup-advertisement-interval 120</pre>
<b>Related Commands</b>	<a href="#">vrrp-extended-group</a> , <a href="#">vrrp-group</a>

# banner incoming

Sets the incoming banner message.

**Syntax** **banner incoming** *message*

**no banner incoming**

**Parameters** *message*

The message string to be displayed on the switch console.

**Modes** Global configuration mode

**Usage Guidelines** A banner is a text message that displays on the console. The banner can include information about the switch for a user to know when accessing the switch.

The banner must be from 1 through 2048 characters in length. The banner can appear on multiple lines if you enter multiline mode using **ESC+M** and using **CTRL+D** to exit.

## banner login

Sets the switch banner.

**Syntax** `banner login message`

`no banner login`

**Parameters** `message`

The message string to be displayed on the switch console.

**Modes** Global configuration mode

**Usage Guidelines** A banner is a text message that displays on the console. The banner can include information about the switch that a user wants another user to know when accessing the switch.

The banner must be from 1 through 2048 characters in length.

The banner can appear on multiple lines if you enter multiline mode using **ESC-M** and using **CTRL-D** to exit.

**Examples** To create a banner with multiple lines:

```
switch(config)# banner login [Esc-m]

[Entering multiline mode, exit with ctrl-D.]
> banner login Hello
> and
> welcome
> to
> the
> switch
[Ctrl-D]
switch(config)# do show running-config banner

banner login "Hello\and\welcome\to\the\switch"

switch(config)# exit

Network OS (switch)
NOS Version 3.0.0
switch login: admin

Password: *****

Hello and welcome to the switch
```

To create a banner with a single line:

```
switch(config)# banner login "Please do not disturb the setup on this switch"

switch(config)# exit

Login: user

Password: *****

The cluster contains 5 switches
-----
Welcome to NOS CLI
user connected from ::FFFF:10.103.8.61 using ssh on abc.com
switch#
```

**Related Commands** [show running-config banner](#)

## banner motd

Sets the message of the day (MOTD) banner.

**Syntax** **banner motd** *message*

**no banner motd**

**Parameters** *message*

The message string to be displayed on the switch console.

**Modes** Global configuration mode

**Usage Guidelines** A banner is a text message that displays on the console. The banner can include information about the switch for a user to know when accessing the switch.

The banner must be from 1 through 2048 characters in length. The banner can appear on multiple lines if you enter multiline mode by using **ESC+M** and exit by using **CTRL+D** .

# bgp-redistribute-internal

Causes the device to allow the redistribution of IBGP routes from BGP4 and BGP4+ into RIP, OSPF, or IS-IS.

**Syntax** **bgp-redistribute-internal**

**no bgp-redistribute-internal**

**Command Default** This feature is disabled.

**Modes** BGP address-family IPv4 unicast configuration mode  
 BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** By default, with default VRF instances, the device does not allow the redistribution of IBGP routes from BGP4 and BGP4+ into RIP, OSPF, or IS-IS. This helps to eliminate routing loops. In non-default VRF instances, the device does allow the redistribution of IBGP routes from BGP4 and BGP4+ into RIP and OSPF.

Use the **no** form of the command to restore the defaults.

**Examples** To configure a static network and change the administrative distance:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# bgp-redistribute-internal
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.



# bind

Creates a persistent binding between the logical FCoE port and the ten/forty gigabit or LAG port.

**Syntax** `bind { <N>gigabitethernet rbridge-id/slot/port | port-channel number | mac-address address }`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**port-channel number**

Specifies a port-channel interface.

**mac-address address**

Specifies a MAC address. The valid format is HH:HH:HH:HH:HH:HH.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The configuration will be stored in the configuration and retained across reboots.

When the FCoE logical port is automatically bound to a TE/FO LAG port, it is referred as dynamic binding. This binding is valid only till the FLOGI session is valid. The binding is automatically removed when CNA logs out.

---

## ATTENTION

Only one type of binding can be used for each physical port, so the ten/forty gigabit Ethernet or LAG (MAC) binding configurations overwrite each other.

---

## Examples

```
switch(config)# interface fcoe 1/1/55
switch(config-Fcoe-1/1/55)# bind tengigabitethernet 1/0/1
switch(config)# interface fcoe 1/1/56
switch(config-Fcoe-1/1/56)# bind mac-address 00:05:1e:c5:96:a4
```

## bpdu-drop enable

Drops STP, RSTP, MSTP, and PVST and RPVST bridge protocol data units (BPDUs), disabling the tunneling of those protocols on an interface.

<b>Syntax</b>	<p><b>bpdu-drop enable [ rx   tx   all ]</b></p> <p><b>no bpdu-drop enable [ rx   tx   all ]</b></p>
<b>Command Default</b>	BPDU-drop is disabled.
<b>Parameters</b>	<p><b>tx</b> Disables tunneling in the transmit direction.</p> <p><b>rx</b> Disables tunneling in the receive direction.</p> <p><b>all</b> Disables tunneling in both the transmit and receive directions.</p>
<b>Modes</b>	Interface subtype configuration mode
<b>Usage Guidelines</b>	<p>This command prevent reception of any STP or PVST BPDUs on a interface. If such a BPDU is received on a interface that is BPDU-drop enabled, the interface drops the BPDU frames, but does not shut down.</p> <p>Enter <b>bpdu-drop enable</b> with the <b>tx</b>, <b>rx</b>, or <b>all</b> options. Without an optional keyword, the action applies to the ingress direction only.</p> <p>Enter <b>no bpdu-drop enable</b> with the <b>tx</b>, <b>rx</b>, or <b>all</b> options to disable BPDU drop in one or more directions.</p> <p>Enter <b>no bpdu-drop enable</b> to disable BPDU-drop completely.</p>
<b>Examples</b>	<p>To enable BPDU-drop on a specific 10-gigabit Ethernet interface:</p> <pre>switch(config)# interface tengigabitethernet178/0/9 switch(conf-if-te-178/0/9)# bpdu-drop enable</pre> <p>To disable BPDU-drop on a specific port-channel interface:</p> <pre>switch(config)# interface port-channel 62 switch(conf-port-channel-62)# no bpdu-drop enable</pre> <p>To disable BPDU-drop on a specific port-channel interface in the transmit direction:</p> <pre>switch(config)# interface port-channel 62 switch(conf-port-channel-62)# no bpdu-drop enable tx</pre>
<b>Related Commands</b>	<a href="#">interface</a>

# bridge-priority

Specifies the bridge priority for the common instance.

**Syntax** `bridge-priority priority`

`no bridge-priority`

**Command Default** Priority is 32768.

**Parameters** *priority*

Specifies the bridge priority. Valid values range from 0 through 61440 in increments of 4096.

**Modes** Protocol Spanning Tree mode

**Usage Guidelines** The priority values can be set only in increments of 4096.

Using a lower priority value indicates that the bridge might become root.

If xSTP is enabled over VCS, this command must be executed on all RBridge nodes.

Enter **no bridge-priority** to return to the default priority.

**Examples** To specify the bridge priority:

```
switch# configure terminal
switch(config)# protocol spanning-tree stp
switch(conf-stp)# bridge-priority 8192
switch# configure terminal
switch(config)# protocol spanning-tree rstp
switch(conf-rstp)# bridge-priority 8192
switch# configure terminal
switch(config)# protocol spanning-tree mstp
switch(conf-mstp)# bridge-priority 8192
```

**Related Commands** [protocol spanning-tree](#)

## capability as4

Enables 4-byte autonomous system number (ASN) capability at the BGP global level.

**Syntax**    **capability as4 enable**

**no capability as4**

**Command Default**    This feature is disabled.

**Parameters**    **enable**

Enables 4-byte ASN capability at the BGP global level.

**Modes**    BGP configuration mode

**Usage Guidelines**    Use the **no** form of this command to disable this functionality.

**Examples**    To enable 4-byte ASN capability:

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# capability as4 enable
```

# capture packet interface

Enables the capture of packet information on an interface, for display on the switch itself or for storage in an automatically generated file.

**Syntax** `capture packet { interface } { all | <N>gigabitethernet rbridge-id/slot/port } { direction { both | rx | tx } } { filter { l2 | l3 | all } }`

<b>Parameters</b>	<b>interface</b>	Selects an interface (required).
	<b>all</b>	Selects all interfaces.
	<b>&lt;N&gt;gigabitethernet</b>	Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>Ngigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.
	<b>rbridge-id</b>	Specifies an RBridge ID.
	<b>slot</b>	Specifies a valid slot number.
	<b>port</b>	Specifies a valid port number.
	<b>direction</b>	Selects a direction (required).
	<b>both</b>	Selects traffic in both transmit and receive directions.
	<b>rx</b>	Selects received traffic.
	<b>tx</b>	Selects transmitted traffic.
	<b>filter</b>	Selects the packet types to be filtered (required).
	<b>l2</b>	Filters only Layer 2 packets to the CPU.
	<b>l3</b>	Filters only Layer 3 packets to the CPU.
	<b>all</b>	Filters all packets to the CPU, including transit packets if an access control list (ACL) is enabled (Refer to the Usage Guidelines.)

**Modes** Privileged EXEC mode

**Usage Guidelines** Capturing packet information on an interface can provide significant help in debugging, especially for Layer 2 TRILL and Layer 3 packets. Captured packets are stored in a circular buffer, and they are also written to an automatically generated "pktcapture.pcap" file, which can store up to 1500 K of data in flash memory (the equivalent of approximately 10k packets, each having an average size of 100 bytes). Once this file is full, it is saved at \*\_old.pcap and data are written to a new pktcapture.pcap file. These files can be exported and viewed through a packet analyzer such as Wireshark.

---

**NOTE**

Up to 100 packets per interface can be captured. Once the buffer is filled, the oldest packets are replaced with the most recent.

---

This command can be entered on any RBridge in a Brocade VCS Fabric.

To disable packet capture globally, use the **no capture packet all** command.

---

**NOTE**

The **all** option is not supported for enabling packet capture.

---

To view the captured information on the switch, use the **show capture packet interface** command.

Note the following limitations:

- Support is provided only on physical (Ethernet) interfaces, not on logical interfaces. To see packets on logical interfaces, first enable the capture on the corresponding physical interfaces.
- In the initial release, support for capturing transit traffic requires ACL logging.
- Packets that are dropped in the ASIC cannot be captured.



**CAUTION**

---

**Capturing packets over multiple sessions and over long durations can affect system performance.**

---

**Examples**

```
switch# capture packet interface tengigabitethernet 166/0/1 direction both filter all
```

**Related  
Commands**

[show capture packet interface](#)

# cbs

Mandatory command for configuring the controlled burst size for a class-map.

**Syntax** **cbs** *cbs-size*

**no cbs** *cbs-size*

**Parameters** **cbs-size**

Controlled burst size. Valid values range from 1250 through 5000000000 bytes in increments of 1 byte. This is a mandatory parameter for configuring a class-map.

**Modes** Polycymap class police configuration mode

**Usage Guidelines** Only the **police cir** and **cbs** commands are mandatory for configuring a class-map.

If the optional parameters for a class-map are not set, they are treated as disabled. To delete parameters for a class-map, you must delete all policer parameters while in the policy-map class configuration mode using the **no police cir** command.

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

Use the **no** version of this command to remove the parameter from the class-map.

**Examples** This example configures a class-map called "default" within a policy-map.

```
switch# configure terminal
switch(config)# policy-map policymap1
switch(config-policymap)# class default
switch (config-policymap-class)# police cir 40000
switch(config-policymap-class-police)# cbs 50000
```

**Related Commands** [conform-set-dscp](#), [conform-set-prec](#), [conform-set-tc](#), [ebs](#), [eir](#), [exceed-set-dscp](#), [exceed-set-prec](#), [exceed-set-tc](#), [police cir](#), [police-priority-map](#), [policy-map](#), [qos cos](#), [service-policy](#), [set-priority](#)

## cee

Applies a Converged Enhanced Ethernet (CEE) provisioning map on an interface.

**Syntax** `cee default`

`no cee`

**Command Default** There is no CEE provisioning applied on an interface. The only map name allowed is "default."

**Modes** Interface subtype configuration mode

**Usage Guidelines** The CEE map applied on an interface should already exist on the switch.  
Enter **no cee** to remove the CEE provisioning map.

**Examples** To apply a CEE map to a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# cee default
```

**Related Commands** [interface](#), [cee-map \(configuration\)](#), [channel-group](#), [dot1x authentication](#), [dot1x port-control](#), [dot1x quiet-period](#), [dot1x reauthentication](#), [dot1x reauthMax](#), [dot1x timeout re-authperiod](#), [dot1x timeout server-timeout](#), [dot1x timeout supp-timeout](#), [dot1x timeout tx-period](#), [edge-loop-detection vlan](#), [edge-loop-detection port-priority](#)



## cee-map (configuration)

Enters the CEE map configuration mode.

**Syntax** `cee-map default`

**Command Default** The only map name allowed is "default."

**Modes** Global configuration mode

**Usage Guidelines** Only a single CEE map is allowed, named "default." It is created when system starts up. The initial configuration of the default CEE map is:

```
Precedence 1
Priority Group Table
 1: Weight 40, PFC Enabled, BW% 40
 2: Weight 60, PFC Disabled, BW% 60
15.0: PFC Disabled
15.1: PFC Disabled
15.2: PFC Disabled
15.3: PFC Disabled
15.4: PFC Disabled
15.5: PFC Disabled
15.6: PFC Disabled
15.7: PFC Disabled
Priority Table
  CoS:    0    1    2    3    4    5    6    7
-----
 PGID:   2    2    2    1    2    2    2    2
Enabled on the following interfaces
```

**Related Commands** [cee](#), [fcoeport](#), [priority-group-table](#)

## cee-map (FCoE)

Assigns a CEE map to the FCoE Fabric-Map.

**Syntax**    **cee-map default**

**no cee-map default**

**Command Default**    The only map name allowed is "default."

**Modes**    FCoE map configuration mode

**Usage Guidelines**    You must be in the feature configuration mode for FCoE map for this command to function.  
Enter **no cee-map** to revert to the default values for the map.

**Examples**

```
switch(config)# fcoe
switch(config-fcoe)# map default
switch(config-fcoe-map)# cee-map default
```

**Related Commands**    [fabric-map](#), [fcoe](#)

## certutil import ldapca

Imports a Lightweight Directory Access Protocol (LDAP) Certification Authority (CA) certificate from a remote server

**Syntax** `certutil import ldapca directory path file filename protocol { FTP | SCP } host remote_ip user user_acct password password ssh`

`certutil import ldapca | syslogca directory ca certificatepath protocol { FTP | SCP } host remote_ip user user_acct password password [ rbridge-id { rbridge_id | all } ]`

`no certutil ldapca [ rbridge-id { rbridge-id | all } ]`

**Parameters** `directory path`

Specifies the path to the certificate.

`file filename`

Specifies the filename for the certificate.

`host remote_ip`

Specifies the IP address of the remote host.

`password password`

Specifies the password to access the remote host.

`protocol FTP | SCP`

Specifies the protocol used to access the remote server.

`rbridge-id rbridge-id`

Specifies an RBridge ID.

`all`

Specifies all RBridges.

`user user_acct`

Specifies the user name to access the remote host.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command supports FTP and SCP.

Enter `no certutil ldapca` to delete the LDAP CA certificates of all Active Directory (AD) servers.

**Examples** To import the SSH public key for user "admin" from the remote host:

```
switch# certutil import sshkey user admin host 10.70.4.106 directory /users/home40/
bmeenaks/.ssh file id_rsa.pub login fvt
Password: *****
switch# 2012/11/14-10:28:58, [SEC-3050], 75,, INFO, VDX6720-60, Event: sshutil,
Status: success, Info: Imported SSH public key from 10.70.4.106 for user 'admin'.
switch#
```

To delete all LDAP CA certificates:

```
switch# no certutil ldapca
```

In VCS mode

To import a certificate for LDAP:

```
switch# certutil import ldapca directory /usr/ldapcert/ file cacert.pem protocol
SCP host 10.23.24.56 user admin password rbridge-id 3
password:
switch#
```

To delete LDAP certificates on rbridge-id 3:

```
switch# no certutil syslogca rbridge-id 3
Do you want to delete syslogca certificate? [y/n]:y
Warning: All the syslog CA certificates are deleted.
switch
```

**Related Commands** [ldap-server host](#), [ldap-server maprole](#), [show cert-util ldapca](#), [show running-config ldap-server](#), [username](#)

## certutil import sshkey

Imports the SSH public key for an SSH user from the remote host using the mentioned login credentials and path name.

**Syntax** `certutil import sshkey host remote_ip_address directory ssh_public_key_path user user_acct password password login login_id [ rbridge-id { rbridge-id | all } ]`

`no certutil sshkey [ rbridge-id { rbridge-id | all } ]`

**Parameters** `directory path`

Specifies the path to the certificate.

`file filename`

Specifies the SSH public key with a .pub extension.

`host remote_ip`

Specifies the IP address of the remote host.

`login login_id`

Specifies the login name in the remote host.

`password password`

Specifies the password to access the remote host.

`rbridge-id`

Specifies an RBridge or all RBridges.

`rbridge-id`

Specifies an RBridge ID.

`all`

Specifies all RBridges.

`user user_acct`

Specifies the user name to access the remote host.

**Modes** Privileged EXEC mode

**Usage Guidelines** Enter `no certutil sshkey user` to delete the SSH public key a specified user.

**Examples** The following command deletes the SSH public key for "testuser."

```
switch# no certutil sshkey user testuser
Do you want to delete the SSH public key file? [y/n]:y
switch# 2012/11/11-13:46:05, [SEC-3050], 3295,, INFO, VDX6720-24, Event: sshutil,
Status: success, Info: Deleted SSH public keys associated to user 'testuser'.
```

In VCS mode

The following command imports a public CA certificate:

```
switch# certutil import sshkey user admin host 10.70.4.106 directory /users/home40/
bmeenaks/.ssh file id_rsa.pub login fvt rbridge-id 3
Password: *****
switch# 2012/11/14-10:28:58, [SEC-3050], 75,, INFO, VDX6720-60, Event: sshutil,
Status: success, Info: Imported SSH public key from 10.70.4.106 for user 'admin'.
```

The following command deletes the SSH public key for "testuser."

```
switch# no certutil sshkey user testuser rbridge-id 3
Do you want to delete the SSH public key file? [y/n]:y
switch# 2012/11/11-13:46:05, [SEC-3050], 3295,, INFO, VDX6720-24, Event: sshutil,
Status: success, Info: Deleted SSH public keys associated to user 'testuser'.
```

**Related  
Commands**    [show cert-util sshkey](#)

## certutil import syslogca

Imports a syslog CA certificate.

**Syntax** `certutil import syslogca directory path file filename protocol { FTP | SCP } host remote_ip user user_acct password password [ rbridge-id { rbridge-id | all } ]`

`no certutil syslogca`

**Parameters** `directory path`

Specifies the path to the certificate.

`file filename`

Specifies the filename for the certificate.

`host remote_ip`

Specifies the IP address of the remote host.c

`password password`

Specifies the password to access the remote host.

`protocol FTP | SCP`

Specifies the protocol used to access the remote server.

`rbridge-id`

Specifies an RBridge or all RBridges.

`rbridge-id`

Specifies an RBridge ID.

`all`

Specifies all RBridges.

`user user_acct`

Specifies the user name to access the remote host.

**Modes** Privileged EXEC mode

**Usage Guidelines** Enter `no certutil syslogca` to delete the syslog CA certificates of all Active Directory servers.

**Examples** The following command deletes a syslog CA certificate:

```
switch# no certutil syslogca
Do you want to delete syslog CA certificate? [y/n]:
In VCS mode
```

The following command imports a syslog CA certificate:

```
switch# certutil import syslogca directory /usr/ldapcert/ file cacert.pem protocol
SCP host 10.23.24.56 user admin password rbridge-id 3
password:
switch#
```

The following command deletes a syslog CA certificate:

```
switch# no certutil syslogca rbridge-id 5
Do you want to delete syslog CA certificate? [y/n]:
```

# channel-group

Enables Link Aggregation on an interface.

**Syntax** `channel-group number mode { active | passive | on } [ type { standard | brocade } ]`

`no channel-group`

**Command Default** The value for **type** is set to **standard**.

**Parameters** *number*

Specifies a Link Aggregation Group (LAG) port channel-group number to which this link should administratively belong to. Valid values range from 1 through 6144.

**mode**

Specifies the mode of Link Aggregation.

**active**

Enables the initiation of LACP negotiation on an interface.

**passive**

Disables LACP on an interface.

**on**

Enables static link aggregation on an interface.

**type**

Specifies the type of LAG.

**standard**

Specifies the 802.3ad standard-based LAG.

**brocade**

Specifies the Brocade proprietary hardware-based trunking.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command adds an interface to a port-channel specified by the channel-group number. This command enables link aggregation on an interface, so that it may be selected for aggregation by the local system.

Only a maximum of 24 LAGs can be created. Be aware of the following:

- A maximum of four link aggregation groups can be created per switch when the **type** is set to **brocade**.
- A maximum of four links can become part of a single aggregation group when the **type** is set to **brocade** and they must be on the same port-channel.
- Links 0 through 7 belong to port-channel 1; links 8 through 15 belong to port-channel 2, and links 16 through 23 belong to port-channel 3.
- For the **standard** type, a maximum of 16 links can be aggregated per aggregation group and they can be members of any port-channel.
- Enter **no channel-group** to remove the port-channel members.

---

## NOTE

For additional discussion of using the **channel-group** command,

---



**Examples** To set the channel-group number to 4 and the mode to *active* on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# channel-group 4 mode active
```

To set the channel-group number to 10, the mode to *passive*, and the type to *brocade* on a specific 1-gigabit Ethernet interface:

```
switch(config)# interface gigabitethernet 170/0/1
switch(conf-if-gi-170/0/1)# channel-group 10 mode passive brocade
```

#### History

Release version	Command history
5.0.1	This command was updated with a reference to the <i>Network OS Layer 2 Switching Configuration Guide</i> .

#### Related Commands

[interface](#)

# chassis

Sets the IPv4 or IPv6 address of a switch chassis.

<b>Syntax</b>	<b>chassis { virtual-ip   virtual-ipv6 }</b>  <b>no chassis { virtual-ip   virtual-ipv6 }</b>
<b>Parameters</b>	<b>virtual-ip</b> Sets an IPv4 address in dotted-decimal notation with a CIDR prefix (mask).  <b>virtual-ipv6</b> Sets an IPv6 address in colon-separated hexadecimal notation with a CIDR prefix.
<b>Modes</b>	RBridge ID configuration mode
<b>Usage Guidelines</b>	<p>This command changes the default chassis IPv4 or IPv6 address. The default is the initial address of the switch chassis.</p> <p>This is the address that is used to access devices through their RBridge ID. Use this command to change the IP address to facilitate management, for example, if a switch is moved to a different subnet. The IP address of the management platform should be in the same subnet as the devices it manages.</p> <p>This command applies only to chassis switches, for example, the Brocade VDX 8770.</p> <p>Use the <b>no</b> form of this command to revert to the default address.</p>
<b>Examples</b>	<p>IPv4:</p> <pre>switch(config)# rbridge-id 4 switch(config-rbridge-id-4)# chassis virtual-ip 10.11.12.13/20</pre> <p>IPv6:</p> <pre>switch(config)# rbridge-id 4 switch(config-rbridge-id-4)# chassis virtual-ipv6 2001:db8:8086:6502/64</pre>
<b>Related Commands</b>	<a href="#">show rbridge-id</a> , <a href="#">show running-config</a>

## chassis beacon

Controls the flashing LED beacon on the switch which makes finding the desired switch easier in large data centers.

**Syntax** `chassis beacon { enable | disable }`

**Parameters** **enable**

Enables the chassis beacon LED.

**disable**

Disables the chassis beacon LED.

**Modes** Privileged EXEC mode

**Examples** To enable the chassis beacon:

```
switch# chassis beacon enable
Chassis Beacon has been enabled
```

To disable the chassis beacon:

```
switch# chassis beacon disable
Chassis Beacon has been disabled
```

## chassis disable

Disables all interfaces in the chassis.

**Syntax** **chassis disable**

**Modes** Privileged EXEC mode

**Usage Guidelines** All interfaces will be taken offline

This command is supported only on the local switch.

Enter **chassis disable** before making configuration changes or running offline diagnostics.

You must execute the **chassis enable** command after running offline diagnostics, or the switch will not boot correctly.

**Examples** To disable all interfaces on the local switch:

```
switch# chassis disable
```

**Related  
Commands** [chassis enable](#)

# chassis enable

Enables all interfaces in the chassis.

**Syntax** **chassis enable**

**Modes** Privileged EXEC mode

**Usage Guidelines** All interfaces that passed the power-on self-test (POST) are enabled. They may come online if connected to a device, or remain offline if disconnected. Enter **chassis enable** to re-enable the chassis after making configuration changes or running offline diagnostics.

This command is supported only on the local switch.

You must execute the **chassis enable** command after running offline diagnostics, or the switch will not boot correctly.

**Examples** To enable all interfaces on the local switch:

```
switch# chassis enable
```

**Related Commands** [chassis disable](#)

## chassis fan airflow-direction

Specifies the direction of airflow through the chassis based on physical PSU and fans.

<b>Syntax</b>	<b>chassis fan airflow-direction [ port-side-intake   port-side-exhaust ]</b>
<b>Parameters</b>	<p><b>port-side-intake</b> Specifies the airflow to enter the switch.</p> <p><b>port-side-exhaust</b> Specifies the airflow to exit the switch.</p>
<b>Modes</b>	Global configuration mode
<b>Usage Guidelines</b>	<p>This command must only be used after you purchase and install the appropriate fan/power supply that provides the desired airflow direction in the switch. Please contact your Brocade Sales Representative to obtain the correct part numbers and pricing.</p> <p>When the <b>chassis fan airflow-direction</b> command is issued, the switch will not recognize the configuration change until the switch is rebooted.</p> <p>Only one (1) configuration change is accepted per reboot. This means that even if this command is entered multiple times, only the first configuration change entered will be effective after rebooting.</p> <p>The switch serial number is registered with Brocade and the information recorded in the Brocade database about that switch includes the airflow orientation at the time of shipment. Any subsequent change in airflow direction is not recorded in the Brocade database. This means that if you request a Return Merchandise Authentication (RMA) for the switch, the replacement switch will be sent with the original orientation.</p>
<b>Examples</b>	<p>To specify the fan airflow-direction:</p> <pre>switch# chassis fan airflow-direction port-side-exhaust</pre> <pre>Previous configuration : port-side-intake Current configuration : port-side-exhaust System fan airflow-direction changes will be effective after reboot!!</pre>

## cidrecov

Recovers data from Chassis ID cards if possible.

**Syntax** `cidrecov`

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command if you receive an error or warning RASLog message that instructs you to run this command.

Two chassis ID (CID) cards contain data necessary for system operation. Each CID contains two Serial Electronically Erasable Programmable Read Only Memory (SEEPROM) devices. If data on either card becomes corrupt or mismatched, a regularly run CID audit writes messages to the RASLog. Follow the instructions in the messages. Mismatched data can be reset, and corrupt data can sometimes be recovered if the corrupt data is on the non-critical SEEPROM.

This command is supported only on Brocade VDX 8770-4 and Brocade VDX 8770-8 switches.

**Examples** Example 1: Noncritical SEEPROM is inaccessible or corrupt, but recovery becomes possible:

```

switch# cidrecov

CID 1 Non-Critical Seeprom is Inaccessible or Corrupted.
  CID Non-Critical Seeprom Problem Details
CID 1 Non-Critical Seeprom IP address Control Data Checksum Bad !!!!
CID 1 IP address Control Data:
Version: 0xa
Checksum: 0x0
Size: 0x3
CID 2 IP address Control Data:
Version: 0xa
Checksum: 0x7
Size: 0x3
***WARNING: Recovering IP Data May Affect Both IP Control and IP Records ***
Backup Current Data Displayed Below If Needed.
CID 1 Chassis Name: VDX8770-4
CID 2 Chassis Name: VDX8770-4
CID 1 IP address Control Data:
Version: 0xa
Checksum: 0x0
Size: 0x3
CID 2 IP address Control Data:
Version: 0xa
Checksum: 0x7
Size: 0x3
IP address Record 1 on CID 1
1st IP Address: 10.17.19.53
1st IP Mask: 255.255.240.0
2nd IP Address: 10.17.19.54
2nd IP Mask: 255.255.240.0
Gateway Address: 10.17.16.1
IP address Record 1 on CID 2
1st IP Address: 10.17.19.53
1st IP Mask: 255.255.240.0
2nd IP Address: 10.17.19.54
2nd IP Mask: 255.255.240.0
Gateway Address: 10.17.16.1
IP address Record 2 on CID 1
1st IP Address: 10.17.19.52
1st IP Mask: 255.255.240.0
2nd IP Address: 0.0.0.0
2nd IP Mask: 0.0.0.0
Gateway Address: 0.0.0.0
IP address Record 2 on CID 2
1st IP Address: 10.17.19.52
1st IP Mask: 255.255.240.0
2nd IP Address: 0.0.0.0
2nd IP Mask: 0.0.0.0
Gateway Address: 0.0.0.0
  CID Recovery Options
0. Exit
1. Recover with default values
2. Recover BAD from GOOD
Enter Selection > 2

Copy IP Data table...
  Copy 384 bytes from CID 2 to CID 1, num blks 1 resid 128
  Read block 1 from CID 2 succeeded
  Write block 1 to CID 1 succeeded
  Read last block from CID 2 succeeded
  Write last block to CID 1 succeeded
  copy successful
Copy succeeded for all data types attempted
IP Address CID Recovery completed.

```

**Example 2: Non-critical SEEPROM is inaccessible or corrupt, but recovery is not possible:**

```

switch# cidrecov

CID 1 Non-Critical Seeprom is Inaccessible or Corrupted.
  CID Non-Critical Seeprom Problem Details
CID 1 Non-Critical Seeprom Read Failed.
Recovery is not possible. Please contact Brocade Technical Support for replacement of
the inaccessible CID(s).

```



**Example 3: Critical SEEPROM data is mismatched, recovery is not possible:**

```
switch# cidrecov
```

```
CID 1 and CID 2 Critical Seeprom Data is Mismatched.
```

```
  CID Seeprom Problem Details
```

```
CID Seeprom Chassis Serial Number Mismatch.
```

```
CID 1 Serial Number: BYP3G15G00N
```

```
CID 2 Serial Number: BYP3G17H00P
```

```
Recovery is not possible. Please contact Brocade Technical Support for replacement of  
the corrupted CID(s).
```

# cipherset

Configures FIPS-compliant ciphers for the Lightweight Directory Access Protocol (LDAP) and Secure Shell (SSH) for LDAP and SSH protocols.

<b>Syntax</b>	<b>cipherset { ldap   ssh   radius}</b>
<b>Command Default</b>	There are no restrictions on LDAP and SSH ciphers.
<b>Parameters</b>	<p><b>radius</b> Specifies secure RADIUS ciphers.</p> <p><b>ldap</b> Specifies secure LDAP ciphers.</p> <p><b>ssh</b> Specifies secure SSH ciphers.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>A switch must be configured with secure ciphers for SSH before that switch can be FIPS compliant. If LDAP authentication is to be used, the LDAP ciphers are also required before a switch can be FIPS compliant.</p> <p>The secure LDAP ciphers are AES256-SHA, EAS128-SHA, and DES-CBC3-SHA. The secure SSH ciphers are HMAC-SHA1 (mac), 3DES-CBC, AES128-CBC, AES192-CBC, and AES256-CBC.</p> <p>This command can be entered only from a user account with the admin role assigned.</p>
<b>Examples</b>	<p>To configure secure RADIUS ciphers:</p> <pre>switch# cipherset radius RADIUS cipher list configured successfully</pre> <p>To configure secure LDAP ciphers:</p> <pre>switch# cipherset ldap ldap cipher list configured successfully</pre> <p>To configure secure SSH ciphers:</p> <pre>switch# cipherset ssh ssh cipher list configured successfully</pre>
<b>Related Commands</b>	<a href="#">fips selftests</a> , <a href="#">fips zeroize</a> , <a href="#">prom-access disable</a> , <a href="#">show prom-access</a>

## cisco-interopability

Configures the switch to interoperate with some legacy Cisco switches.

**Syntax** `cisco-interopability { disable | enable }`

**Command Default** Cisco interoperability is disabled.

**Parameters** **disable**

Disables Cisco interoperability for the Multiple Spanning Tree Protocol (MSTP) switch.

**enable**

Enables Cisco interoperability for the MSTP switch.

**Modes** Protocol Spanning Tree MSTP mode

**Usage Guidelines** For some switches, the MSTP field, Version 3 Length, does not adhere to the current standards.

If Cisco interoperability is required on any switch in the network, then all switches in the network must be compatible, and therefore enabled using this command for interoperability with a Cisco switch.

If xSTP is enabled over VCS, this command must be executed on all RBridge nodes.

**Examples** To enable Cisco interoperability on a switch:

```
switch# configure terminal
switch(config)# protocol spanning-tree mstp
switch(conf-mstp)# cisco-interopability enable
```

To disable Cisco interoperability on a switch:

```
switch# configure terminal
switch(config)# protocol spanning-tree mstp
switch(conf-mstp)# cisco-interopability disable
```

## class

Creates a class-map in a policy-map and enters the class-map configuration mode.

<b>Syntax</b>	<b>class</b> <i>class-mapname</i>  <b>no class</b> <i>class-mapname</i>
<b>Command Default</b>	A policy-map is not created.
<b>Parameters</b>	<b>class-mapname</b> The designated name for the class-map.
<b>Modes</b>	Global configuration mode
<b>Usage Guidelines</b>	<p>Use this command to configure a class-map for a police policy-map with QoS and policing parameters for inbound or outbound traffic. The class-map must have been created and associated with match criteria using the <b>class-map</b> command. (Refer to the <b>qos cos</b> command.) When you launch the <b>class</b> command while in config-policymap mode (refer to <b>policy-map</b>) for a policy, the system is placed in "configure policy-map classification" (config-policymap-class) mode. Once this is done you can configure QoS and policing parameters for the class-map using the commands for the specific parameters. The commands that set the parameters for a class-map are:</p> <ul style="list-style-type: none"> <li>• <b>cbs</b></li> <li>• <b>eir</b></li> <li>• <b>ebs</b></li> <li>• <b>conform-set-dscp</b></li> <li>• <b>conform-set-prec</b></li> <li>• <b>conform-set-tc</b></li> <li>• <b>exceed-set-dscp</b></li> <li>• <b>exceed-set-prec</b></li> <li>• <b>exceed-set-dscp</b></li> <li>• <b>police cir</b></li> <li>• <b>set-priority</b></li> </ul> <p>The QoS and policing parameters define the cir, cbs, ebr, and eir rates and the actions that must occur when traffic conforms or exceeds designated rates. For more details on these parameters, refer to the "Port-based Policer" section in the "QoS Configuration" chapter of the <i>Network OS Administrator's Guide</i>. Each policy-map can contain one class-map.</p> <p>Enter the <b>no policy-mapname</b> command to remove the policy-map. Associate the policy-map to the interface for inbound or outbound direction with the <b>service-policy</b> command (refer to <b>service-policy</b> ).</p> <p>Enter <b>no police</b> while in config-policymap-class mode to remove all policing parameters for the class-map.</p> <p>Enter <b>no police</b> command followed by a policing parameter name to remove a specific parameter.</p>

---

### NOTE

The **cir** and **cbs** parameters are the mandatory for configuring a class-map. Other parameters are optional. If optional parameters are not set then they will be treated as disabled. To delete the mandatory cir or cbs parameters, you must delete all Policer parameters while in the policy-map class configuration mode using the **no police** command.

---

---

**NOTE**

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

---

**Examples** This example configures a class-map called "default" within a policy-map.

```
switch# configure terminal
switch(config)# policy-map policymap1
switch(config-policymap)# class default
switch (config-policymap-class)# police cir 40000
switch(config-policymap-class-police)# cbs 50000
switch(config-policymap-class-police)# eir 800000
switch(config-policymap-class-police)# ebs 400000
switch(config-policymap-class-police)# conform-set-tc 3
switch(config-policymap-class-police)# exceed-set-prec 4
```

**Related Commands** [cbs](#), [conform-set-dscp](#), [conform-set-prec](#), [conform-set-tc](#), [ebs](#), [eir](#), [exceed-set-dscp](#), [exceed-set-prec](#), [exceed-set-tc](#), [police cir](#), [police-priority-map](#), [policy-map](#), [qos cos](#), [service-policy](#), [set-priority](#)

## class-map

Enters class-map configuration mode.

**Syntax** `class-map class-map-name`

`no class-map class-map-name`

**Command Default** The class-name "class-default" is reserved and cannot be created by users.

**Parameters** *class-map-name*

Name of classification map. The map name is restricted to 64 characters.

**Modes** Global configuration mode

**Usage Guidelines** Enter **no map class-map***class-map-name* while in global configuration mode to remove the classification map.

Only 128 class maps are allowed.

---

### NOTE

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

---

**Examples** To create a classification map and place system into config-classmap mode:

```
switch(config)# class-map default
switch(config-classmap)#
```

---

### NOTE

The class map created using **class map** becomes the default class-map and cannot be removed using the **no class-map** command. You can remove a class-map from a policy map however.

---

**Related Commands** [show running-config class-map](#), [match interface](#), [police-priority-map](#), [policy-map](#), [qos cos](#), [service-policy](#)

# clear ag nport-utilization

Clears Access Gateway N\_Port utilization information.

**Syntax** `clear ag nport-utilization [ rbridge-id { rbridge-id | all } ]`

**Parameters** **rbridge-id**

You can clear N\_Port utilization information either for a specific RBridge or for all.

**rbridge-id**

Specify an RBridge ID.

**all**

Clear N\_Port utilization information for N\_Ports on all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** Enabling a port also clears the information

There is a **show** form of this command, which shows Access Gateway N\_Port utilization information.

**Examples** The following command clears utilization information for Access Gateway N\_Ports on RBridge 1:

```
switch# clear ag nport-utilization rbridge-ID 1
```

The following command clears Access Gateway utilization information for all N\_Ports on the switch:

```
switch# clear ag nport-utilization rbridge-ID all
```

**History**

Release version	Command history
5.0.0	This command was introduced.

**Related Commands**

[ag](#), [ag enable](#), [show ag](#), [show ag nport-utilization](#)

## clear arp

Clears the ARP statistics cache on the host.

**Syntax** `clear arp [ <N>gigabitethernet rbridge-id/slot/port [ no-refresh ] | [ ip ip-address [ no-refresh ] [ vrf {vrf-name | all } ] | [ rbridge-id { rbridge-id | all } ] | [ no-refresh [ vrf {vrf-name | all } ] [ rbridge-id { rbridge-id | all } ] | [ rbridge-id { rbridge-id | all } ] | [ vrf {vrf_name | all } ] [ rbridge-id { rbridge-id | all } ] ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**no-refresh**

Deletes the ARP entries.

**ip**

Clears the statistics on all interfaces.

**ip-address**

Clears the ARP for this next-hop IP address.

**no-refresh**

Deletes the ARP entries.

**vrf**

Specifies a VRF instance or all instances.

**vrf\_name**

Specifies a VRF instance.

**all**

Specifies all VRF instances.

**Modes** Privileged EXEC mode



# clear counters

Clears the IP counter statistics on the switch.

<b>Syntax</b>	<b>clear counters</b> [ <b>access-list</b> { <b>ip</b>   <b>ipv6</b>   <b>mac</b> } [ <b>all</b>   <b>interface</b> { <b>fcoe</b> [ <i>vn-number</i>   <b>all</b> ]   <b>port-channel</b> <i>number</i>   <b>fibrechannel</b> <i>rbridge-id/slot/port</i>   <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i> }   <b>slot-id</b> <i>number</i>   <b>vlan</b> <i>vlan_id</i> }   <b>storm-control</b> ]
<b>Parameters</b>	<p><b>access-list</b> Clears the IP counter statistics on all interfaces on the switch.</p> <p><b>all</b> Clears all IP counter statistics on the switch or selected interface.</p> <p><b>interface</b> Specifies an interface.</p> <p><b>port-channel</b> <i>number</i> Specifies a port-channel. The number of available channels range from 1 through 6144.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>vlan</b> <i>vlan_id</i> Specifies the VLAN interface to which the ACL is bound.</p> <p><b>slot-id</b> Clears the IP counter statistics on a specified slot in the chassis.</p> <p><b>storm-control</b> Clears counters about traffic controlled by configured rate limits.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Related Commands</b>	<a href="#">clear counters access-list</a> , <a href="#">clear counters storm-control</a> , <a href="#">clear counters interface</a> , <a href="#">clear counters slot-id</a> , <a href="#">clear counters (IP)</a> , <a href="#">clear counters (MAC)</a> , <a href="#">clear counters interface</a>

## clear counters (IP)

Clears the IP counter statistics on all interfaces on the switch.

<b>Syntax</b>	<b>clear counters</b> { <b>all</b>   <b>access-list ip</b> <i>access_list_name</i>   <b>interface</b> { <b>port-channel</b> <i>number</i>   <b>fibrechannel</b> { <i>rbridge-id/slot/port</i> }   <N> <b>gigabitethernet</b> { <i>rbridge-id/slot/port</i> }   <b>slot-id</b> <i>number</i>   <b>ve</b> <i>vlan_id</i> } { <b>in</b>   <b>out</b> }
<b>Parameters</b>	<p><b>all</b> Clears statistics on all interfaces.</p> <p><b>access-list ip</b> <i>access_list_name</i> Specifies the name of the IP access list.</p> <p><b>in   out</b> Specifies the binding direction (ingress or egress). In and out parameters are used for access-list ip only.</p> <p><b>interface</b> Specifies n interface.</p> <p><b>port-channel</b> <i>number</i> Specifies the interface is a port-channel. The number of available channels range from 1 through 6144.</p> <p><b>fibrechannel</b> <i>rbridge-id/slot/port</i> Specifies a valid Fibre Channel interface.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>slot-id</b> <i>number</i> Specifies the slot number of the linecard.</p> <p><b>ve</b> <i>vlan_id</i> Specifies the virtual Ethernet (VE) interface to which the ACL is bound. (Refer to the Usage Guidelines.)</p> <p><b>rbridge-id</b> Specifies RBridge ID for node-specific ACL interface details.</p> <p><b>rbridge-id   all</b> Specifies the unique identifier for a switch. All refers to all rbridge-ids in the cluster.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	The <b>clear counters all</b> command does not clear counters for any of the protocol daemon stats like LLDP, LACP, MSTP, and so on.

For Brocade VDX switches, the slot number is always 0 (zero).

**Examples** To clear the statistics for the 10-gigabit Ethernet interface 5/0/1:

```
switch# clear counters interface tengigabitethernet 5/0/1
```

To clear the statistics for all the interfaces on the linecard in slot 0 (zero):

```
switch# clear counters slot-id 0
```

**Related  
Commands** [show ip igmp groups](#)

## clear counters (MAC)

Clears the MAC counter statistics on all interfaces on the switch.

<b>Syntax</b>	<b>clear counters</b> { <b>all</b>   <b>access-list mac</b> <i>access_list_name</i>   <b>interface</b> { <b>port-channel</b> <i>number</i> }   <b>fibrechannel</b> { <i>rbridge-id/slot/port</i> }   <N> <b>gigabitethernet</b> { <i>rbridge-id/slot/port</i> }   <b>slot-id</b> <i>number</i>   <b>vlan</b> <i>vlan_id</i> }
<b>Parameters</b>	<p><b>all</b> Clears statistics on all interfaces.</p> <p><b>access-list mac</b> <i>access_list_name</i> Specifies the name of the MAC access list.</p> <p><b>in out</b> Specifies the binding direction (ingress or egress). In and out parameters are used for access-list ip only.</p> <p><b>interface</b> Specifies the use of the <i>port-channel</i> , <i>fibrechannel</i> , <i>gigabitethernet</i> or <i>tengigabitethernet</i> keyword.</p> <p><b>port-channel</b> <i>number</i> Specifies the interface is a port-channel. The number of available channels range from 1 through 6144.</p> <p><b>fibrechannel</b> <i>rbridge-id/slot/port</i> Specifies a valid Fibre Channel interface.</p> <p><b>rbridge-id</b> Specifies the RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>vlan</b> <i>vlan_id</i> Specifies the VLAN interface to which the ACL is bound. (Refer to the Usage Guidelines.)</p> <p><b>slot-id</b> <i>number</i> Specifies the slot number of the linecard.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>The <b>clear counters all</b> command does not clear counters for any of the protocol daemon stats like LLDP, LACP, MSTP, and so on.</p> <p>For Brocade VDX switches, the slot number is always 0 (zero).</p>
<b>Examples</b>	<p>To clear the statistics for the 10-gigabit Ethernet interface 5/0/1:</p> <pre>switch# clear counters interface tengigabitethernet 5/0/1</pre>

To clear the statistics for all the interfaces on the linecard in slot 0 zero):

```
switch# clear counters slot-id 0
```

**Related  
Commands**

[show ip igmp groups](#)

## clear counters access-list

For a given network protocol and inbound/outbound direction, clears ACL statistical information. You can clear all statistics for a specified ACL or only for that ACL on a specified interface. You can also clear statistical information for all ACLs bound to a specified switch interface, VLAN, VE, or VXLAN overlay gateway.

<b>Syntax</b>	<b>clear counters access-list</b> [{ <b>ip</b>   <b>ipv6</b>   <b>mac</b> <i>name</i> } ( <b>interface</b> < <i>N</i> > <b>gigabitethernet</b> <i>rbridge_id/slot/port</i>   <b>port-channel</b> <i>index</i>   <b>vlan</b> <i>vlan_id</i>   <b>all</b> )] { <b>in</b>   <b>out</b> }
<b>Parameters</b>	<p><b>ip</b>   <b>ipv6</b>   <b>mac</b> Specifies the network protocol.</p> <p><b>name</b> Specifies the ACL name. To clear statistics on all counters of an ACL-type, do not specify <i>name</i>.</p> <p><b>interface</b> Filter by interface.</p> <p>&lt;<i>N</i>&gt;<b>gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;<i>N</i>&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge_id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>port-channel number</b> Specifies a port-channel. Available channels range from 1 through 6144.</p> <p><b>vlan</b> <i>vlan_id</i> (Available only on Layer 2) Specifies a VLAN.</p> <p><b>ve</b> <i>vlan_id</i> (Available only on Layer 3) Specifies a virtual Ethernet (VE) interface.</p> <p><b>rbridge-id</b> (for a VE interface) To display ACLs beyond the local node, include this keyword and the relevant of the following:</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>all</b> Specifies all RBridges.</p> <p><b>overlay-gateway</b> <i>overlay_gateway_name</i> Specifies a VXLAN overlay-gateway.</p> <p><b>in</b>   <b>out</b> Specifies the binding direction (incoming or outgoing).</p>
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	The following example clears ACL statistics for the 10-gigabit Ethernet interface 5/0/1: switch# clear counters access-list interface tengigabitethernet 5/0/1

The following example clears counters for the configured MAC access list named test on an interface:  
 switch# clear counters access-list mac test interface tengigabitethernet 5/0/1

The following example clears counters for the configured MAC access list named test on all interfaces on which this ACL is applied:

```
switch# clear counters access-list mac test
```

The following example clears counters for the configured IPv4 access list named test on an interface:  
 switch# clear counters access-list ip test interface tengigabitethernet 6/0/1

The following example clears counters for the configured IPv4 access list named test on all interfaces on which this ACL is applied:

```
switch# clear counters access-list ip test
```

The following example clears the incoming statistics for an IPv6 ACL on RBridge 122 on a virtual Ethernet (VE) interface:

```
switch# clear counters access-list ipv6 ip_acl_3 interface ve 10 in rbridge-id 122
```

The following example clears the (incoming) statistics for all ACLs applied to a specified overlay gateway:

```
switch# clear counters access-list overlay-gateway gw121 in
```

**Related Commands** [access-list, seq \(IPv4 extended ACLs\), seq \(IPv4 standard ACLs\), seq \(IPv6 extended ACLs\), seq \(IPv6 standard ACLs\), seq \(MAC extended ACLs\), seq \(MAC standard ACLs\), show statistics access-list](#)

## clear counters interface

Clears the IP counter statistics on a specified interface on the switch.

<b>Syntax</b>	<b>clear counters interface</b> { <b>fcoe</b> { <i>vn-number/rbridge-id/port</i>   <b>all</b> }   <b>fibrenchannel</b> { <i>rbridge-id/slot/port</i> }   <b>port-channel</b> <i>number</i>   [ <N> <b>gigabitethernet</b> { <i>rbridge-id/slot/port</i>   <b>all</b> } }   <b>vlan</b> { <i>vlan_id</i> } }
<b>Parameters</b>	<b>interface</b> Specifies the use of the <i>fcoe</i> , <i>port-channel</i> , <i>fibrenchannel</i> , <i>fortygigabitethernet</i> , <i>gigabitethernet</i> , <i>tengigabitethernet</i> , or <i>vlan</i> keyword.
	<b>vn-number</b> Specifies the FCOE interface name.
	<b>rbridge-id</b> Specifies the VN number for FCoE.
	<b>port</b> Specifies the RBridge ID.
	<b>all</b> Specifies a valid port number.
	<b>rbridge-id</b> Clears counters for all FCoE interfaces.
	<b>rbridge-id</b> Specifies a valid Fibre Channel interface.
	<b>slot</b> Specifies the RBridge ID.
	<b>port</b> Specifies a valid slot number.
	<b>&lt;N&gt;gigabitethernet</b> Specifies a valid port number.
	<b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N> <b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.
	<b>rbridge-id</b> Specifies an RBridge ID.
	<b>slot</b> Specifies a valid slot number.
	<b>port</b> Specifies a valid port number.
	<b>port-channel number</b> Specifies the interface is a port-channel. The number of available channels range from 1 through 6144.
	<b>vlan vlan_id</b> Specifies a VLAN interface. (Refer to the Usage Guidelines.)
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	The <b>clear counters all</b> command does not clear counters for any of the protocol daemon stats such as LLDP, LACP, MSTP, and so on.



For Brocade VDX switches, the slot number is always 0 (zero).

## clear counters slot-id

Clears the IP counter statistics on a specified slot in the chassis.

**Syntax** `clear counters slot-id num`

**Parameters** *num*  
Specifies a valid integer.

**Modes** Privileged EXEC mode

**Usage Guidelines** The **clear counters all** command does not clear counters for any of the protocol daemon statistics such as LLDP, LACP, MSTP, and so on.

For Brocade VDX switches, the slot number is always 0 (zero).

# clear counters storm-control

Clears counters related to traffic controlled by configured rate limits.

**Syntax** **clear counters storm-control**

**clear counters storm-control broadcast** [ **interface** { <N>**gigabitethernet** *rbridge-id/slot/port* ]

**clear counters storm-control interface** { <N>**gigabitethernet** *rbridge-id/slot/port* }

**clear counters storm-control multicast** [ **interface** { <N>**gigabitethernet** *rbridge-id/slot/port* }

**clear counters storm-control unknown-unicast** [ **interface** { <N>**gigabitethernet** *rbridge-id/slot/port* }

**Parameters** **clear counters storm-control**

Clears all BUM (Broadcast, Unknown unicast and Multicast)-related counters in the system.

**clear counters storm-control broadcast**

Clears all BUM-related counters in the system for the broadcast traffic type.

**clear counters storm-control interface** *type rbridge-id/slot/port*

Clears all BUM-related counters in the system for the specified interface. You must specify an interface type, followed by the RBridge ID/slot/port.

**show storm-control multicast**

Clears all BUM-related counters in the system for the multicast traffic type.

**clear counters storm-control unknown-unicast**

Clears all BUM-related counters in the system for the unknown-unicast traffic type.

**interface** <N>**gigabitethernet** *rbridge-id/slot/port*

Specifies an interface type, followed by the RBridge ID/slot/port, for which to clear all BUM-related counters in the system for the specified traffic type. Use this parameter to clear counters on a per-port basis.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace *N* **gigabitethernet** <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command clears the counters for Broadcast, Unicast, and unknown-Multicast (BUM) traffic for the entire system, for specified traffic types, for specified interfaces, or for specified traffic types on specified interfaces.

**Examples** To clear counters for broadcast traffic on the 10-gigabit Ethernet interface 102/4/1:

```
switch# clear counters storm-control broadcast interface tengigabitethernet 102/4/1
```

To clear counters for all traffic types enabled on the 10-gigabit Ethernet interface 102/4/1:

```
switch# clear counters storm-control interface tengigabitethernet 102/4/1
```

To clear counters for all multicast traffic in the system:

```
switch# clear counters storm-control multicast
```

To clear all BUM-related counters in the system:

```
switch# clear counters storm-control
```

## clear dot1x statistics

Clears all accumulated dot1x port authentication statistics on all ports.

**Syntax** `clear dot1x statistics`

**Modes** Privileged EXEC mode

**Examples** To clear dot1x statistics:

```
switch# clear dot1x statistics
```

**Related  
Commands** [clear dot1x statistics interface](#)

## clear dot1x statistics interface

Clears all dot1x statistics for a specified interface port.

**Syntax** `clear dot1x statistics interface [ <N>gigabitethernet rbridge-id/slot/port ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace ***N*gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

***rbridge-id***

Specifies an RBridge ID.

***slot***

Specifies a valid slot number.

***port***

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples** To clear dot1x statistics on a port:

```
switch# clear dot1x statistics interface tengigabitethernet 0/16
```

**Related Commands** [clear dot1x statistics](#)

# clear edge-loop-detection

Re-enables all ports disabled by ELD and clears all ELD statistics.

**Syntax** `clear edge-loop-detection [ rbridge-id rbridge-id ]`

`clear edge-loop-detection interface { <N>gigabitethernet { rbridge-id/slot/port } | port-channel num }`

**Parameters** *rbridge-id*

A unique identifier for the switch. Values are from 1 through 239.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace **Ngigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

*rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**port-channel num**

Specifies the interface is a port-channel. The number of available channels range from 1 through 6144.

**Modes** ELD configuration mode

**Usage Guidelines** This operation is typically performed after correcting a configuration error that caused ELD to disable ports.

This command applies to Brocade VCS Fabric mode only.

This functionality detects Layer 2 loops only.

If the rbridge-id is specified, it clears edge-loop-detection from the specific node. Otherwise, it clears edge-loop-detection from all nodes in the VCS cluster.

**Related Commands** [protocol edge-loop-detection](#), [show edge-loop-detection rbridge-id](#), [show edge-loop-detection interface](#)

## clear fcoe login

Clears the FCoE login for a given FCoE interface, VLAN, virtual fabric ID, or device World Wide Name (WWN).

**Syntax** **clear fcoe login** [ **interface fcoe** *vn-number/rbridge-id/front-port-number* ] | [ **interface** { *<N>gigabitethernet rbridge-id/slot/port* } | [ **port-channel** *port-channel-num* ] [ **vlan** *vlan\_id* ] ] | [ **vfid** *vfid* ] | [ **device** *device-wwn* ]

**Parameters** **interface fcoe** *vn-number/rbridge-id/front-port-number*  
 Specifies a virtual network number, as well as an RBridge ID and front port number for the virtual fabric. The value for *vn-number* is 1. The *front-port-number* is a logical FCoE port number in the RBridge ID.

**vlan** *vlan\_id*  
 Specifies a VLAN ID for the device.

**<N>gigabitethernet**  
 Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace *<N>gigabitethernet* with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**  
 Specifies an RBridge ID.

**slot**  
 Specifies a valid slot number.

**port**  
 Specifies a valid port number.

**port-channel** *number*  
 Specifies a port-channel.

**vfid** *vfid*  
 Specifies the virtual fabric ID for the device.

**device** *device-wwn*  
 Specifies the WWN of the device.

**Modes** Privileged EXEC mode

### Examples

```
switch# clear fcoe login interface fcoe 1/1/1
switch# clear fcoe login device 10:00:00:05:1e:8e:be:40
switch# clear fcoe login interface tengigabitethernet 1/0/1
switch# clear fcoe login vlan 1002
switch# clear fcoe login vfid 1
```



## clear ip bgp dampening

Reactivates all suppressed BGP4 routes.

**Syntax** `clear ip bgp dampening [ ip-addr { / mask } ]`

**Parameters** *ip-addr*

IPv4 address of a specified route in dotted-decimal notation.

*mask*

(Optional) IPv4 mask of a specified route in CIDR notation.

**Modes** Privileged EXEC mode

**Examples** To unsuppress all suppressed BGP4 routes:

```
switch# clear ip bgp dampening
```

## clear ip bgp flap-statistics

Clears the dampening statistics for a BGP4 route without changing the dampening status of the route.

<b>Syntax</b>	<b>clear ip bgp flap-statistics</b> [ <i>ip-addr</i> { / <i>mask</i> }   <b>neighbor</b> <i>ip-addr</i>   <b>regular-expression</b> <i>string</i> ]
<b>Parameters</b>	
<b><i>ip-addr</i></b>	IPv4 address of a specified route in dotted-decimal notation.
<b><i>mask</i></b>	(Optional) IPv4 mask of a specified route in CIDR notation.
<b>neighbor</b>	Clears dampening statistics only for routes learned from the specified neighbor.
<b><i>ip-addr</i></b>	IPv4 address of the neighbor.
<b>regular-expression</b>	Specifies a regular expression.
<b><i>string</i></b>	Regular expression.

**Modes** Privileged EXEC mode

**Examples** To clear the dampening statistics for a BGP4 route:

```
switch# clear ip bgp flap-statistics 10.0.0.0/16
```

## clear ip bgp local routes

Clears all BGP4 local routes from the IP route table and resets the routes.

**Syntax** `clear ip bgp local routes`

**Modes** Privileged EXEC mode

**Examples** To clear all BGP4 local routes:

```
switch# clear ip bgp local routes
```

## clear ip bgp neighbor

Requests a dynamic refresh of BGP4 connections or routes from a neighbor, with a variety of options.

<b>Syntax</b>	<b>clear ip bgp neighbor</b> [ <b>all</b>   <i>as-num</i>   <i>peer-group-name</i>   <i>ip-addr</i> ] [ <b>last-packet-with-error</b>   <b>notification-errors</b>   <b>soft</b> [ <b>in</b>   <b>out</b> ]   <b>soft-outbound</b>   <b>traffic</b> ] [ <b>rbridge-id</b> <i>rbridge-id</i> ]
<b>Parameters</b>	<b>all</b> Resets and clears all BGP4 connections to all neighbors.
	<b>as-num</b> Clears all BGP4 connections within this autonomous system. Range is from 1 through 4294967295.
	<b>peer-group-name</b> Clears all BGP4 connections in this peer group. Range is from 1 through 63 characters.
	<b>ip-addr</b> Clears all BGP4 connections with this IPv4 address, in dotted-decimal notation.
	<b>last-packet-with-error</b> Clears all BGP4 connections identified as having the last packet received with an error.
	<b>notification-errors</b> Clears all BGP4 connections identified as having notification errors.
	<b>soft</b> Refreshes routes received from or sent to the neighbor.
	<b>in</b> Refreshes received routes.
	<b>out</b> Refreshes sent routes.
	<b>soft-outbound</b> Refreshes all outbound routes by applying new or changed filters, but sends only the existing routes affected by the new or changed filters to the neighbor.
	<hr/> <b>NOTE</b> Use <b>soft-outbound</b> only if the outbound policy is changed. This operand updates all outbound routes by applying the new or changed filters. However, the device sends to the neighbor only the existing routes that are affected by the new or changed filters. The <b>soft out</b> operand updates all outbound routes and then sends the entire BGP4 route table on the device to the neighbor after the device changes or excludes the routes affected by the filters. <hr/>
	<b>traffic</b> Clears the counters (resets them to 0) for BGP4 messages.
	<b>rbridge-id</b> <i>rbridge-id</i> Specifies an RBridge ID.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	To refresh all BGP4 neighbor connections:  switch# clear ip bgp neighbor all

## clear ip bgp routes

Clears BGP4 routes from the IP route table and resets the routes.

**Syntax** `clear ip bgp routes [ ip-addr { / mask } ]`

**Parameters** *ip-addr*

IPv4 address of a specified route in dotted-decimal notation.

*mask*

(Optional) IPv4 mask of a specified route in CIDR notation.

**Modes** Privileged EXEC mode

**Examples** To clear BGP4 routes:

```
switch# clear ip bgp routes 10.0.0.0/16
```

clear ip bgp traffic

## clear ip bgp traffic

Clears the BGP4 message counter for all neighbors.

**Syntax** `clear ip bgp traffic`

**Modes** Privileged EXEC mode

**Examples** To clear the BGP4 message counters:

```
switch# clear ip bgp traffic
```

# clear ip dhcp relay statistics

Clears IP DHCP Relay statistics

**Syntax** `clear ip dhcp relay statistics`

`clear ip dhcp relay statistics ip-address ip-address`

`clear ip dhcp relay statistics [ip-address ip-address] rbridge-id { rbridge-id | all | range }`

**Command Default** DHCP Relay statistics are present on the DHCP server.

**Parameters** `ip-address ip-address`

IPv4 address of DHCP server where client requests are to be forwarded.

**rbridge-id**

Specifies an RBridge or all RBridges.

`rbridge-id`

Specifies an RBridge ID.

`all`

Specifies all RBridges.

**range**

Specifies multiple RBridge IDs. You can specify a range (for example, 3-5), a comma-separated list (for example, 1, 3, 5, 6), or you can combine a range with a list (for example, 1-5, 6, 8).

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to clear IP DHCP Relay statistics for a specific IP DHCP Relay address or all addresses on a local switch, specific switches, or all nodes in a logical chassis cluster.

If the **rbridge-id** parameter is omitted, statistics are cleared for the local switch. If the **ip\_address** parameter is omitted, statistics are cleared for all configured addresses on defined switches.

No spaces are allowed in the range string. The range does not need to be contiguous (for example, 1-2,5). You can also specify **all** for all RBridge IDs in a logical chassis cluster.

**Examples** The following example clears statistics for IP DHCP Relay addresses on RBridge IDs 1, 3, and 5.

```
switch# clear ip dhcp relay statistics rbridge-id 1,3,5
```

The following example clears statistics for IP DHCP Relay address 10.1.0.1 configured on RBridge IDs 1, 3, and 5.

```
switch# clear ip dhcp relay statistics ip-address 10.1.0.1 rbridge-id 1,3,5
```

**Related Commands** [show ip dhcp relay statistics](#)

## clear ip fabric-virtual-gateway

Clears IP Fabric-Virtual-Gateway protocol statistics globally or for a Virtual Ethernet (VE) interface.

**Syntax** `clear ip fabric-virtual-gateway { all | interface ve vlan-id }`

**Command Default** None

**Parameters** **all**

Retrigger the election of ARP responders for all sessions.

**interface ve *vlan-id***

Clears IP Fabric-Virtual-Gateway configurations for the specified VE interface. The range is from 1 through 8191.

**Modes** Privileged EXEC mode

**Usage Guidelines** A **clear** command must be issued to retrigger the election of a new ARP responder.

**Examples** The following example clears the IP Fabric-Virtual-Gateway protocol globally.

```
switch# clear ip fabric-virtual-gateway all
```

The following example clears the IP Fabric-Virtual-Gateway protocol for a specific VE interface.

```
switch# clear ip fabric-virtual-gateway interface ve 2000
```

**History**

Release version	Command history
5.0.1	This command was introduced.



## clear ip igmp groups

Clears information related to learned groups in the IGMP module.

<b>Syntax</b>	<b>clear ip igmp groups</b> [ <i>A.B.C.D</i> ] [ <b>interface</b> { <b>port-channel</b> <i>number</i>   <b>vlan</b> <i>vlan_id</i> }   <b>&lt;N&gt;gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>port-channel</b> <i>number</i>   <b>vlan</b> <i>vlan_id</i>   <b>ve</b> <i>vlan_id</i> } ] [ <b>rbridge</b> <i>rbridge-id</i> ]
<b>Parameters</b>	<p><b>A.B.C.D</b></p> <p>Specifies the group address, as a subnet number in dotted decimal format (for example, 10.0.0.1), as the allowable range of addresses included in the multicast group.</p> <p><b>interface</b></p> <p>Specifies an interface.</p> <p><b>&lt;N&gt; gigabitethernet</b></p> <p>Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>&lt;N&gt;gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b></p> <p>Specifies an RBridge ID.</p> <p><b>slot</b></p> <p>Specifies a valid slot number.</p> <p><b>port</b></p> <p>Specifies a valid port number.</p> <p><b>port-channel number</b></p> <p>Specifies a port-channel. The number of available channels range from 1 through 6144.</p> <p><b>vlan vlan_id</b></p> <p>Specifies a VLAN. Refer to "Usage Guidelines" below.</p> <p><b>ve vlan_id</b></p> <p>Specifies groups on the specified virtual Ethernet (VE) interface. (Refer to the Usage Guidelines.)</p> <p><b>rbridge rbridge-id</b></p> <p>Specifies an RBridge ID.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	<p>To clear information for all groups in the IGMP protocol:</p> <pre>switch# clear ip igmp groups</pre>

## clear ip igmp statistics interface

Clears statistical information related to the IGMP database.

<b>Syntax</b>	<b>clear ip igmp statistics interface</b> { <i>&lt;N&gt;</i> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>port-channel</b> <i>number</i>   <b>ve</b> <i>vlan_id</i>   <b>vlan</b> <i>vlan_id</i> [ <b>rbridge</b> <i>rbridge-id</i> ]   <b>rbridge</b> <i>rbridge-id</i> }
<b>Parameters</b>	<p><b>&lt;N&gt;</b><b>gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>&lt;N&gt;</b><b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>port-channel number</b> Specifies the interface is a port-channel. The number of available channels range from 1 through 6144.</p> <p><b>rbridge-id</b> Specifies the RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>ve vlan_id</b> Specifies a virtual Ethernet (VE) interface. (Refer to the Usage Guidelines.)</p> <p><b>vlan vlan_id</b> Specifies a VLAN interface. (Refer to the Usage Guidelines.)</p> <p><b>rbridge rbridge-id</b> Specifies an RBridge ID.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>This command can be used with User-configurable VLAN IDs.</p> <p>In logical chassis mode:</p> <ul style="list-style-type: none"> <li>• When the <b>rbridge-id</b> option is specified, details for the ve interface on that particular rbridge are cleared.</li> <li>• If <b>rbridge-id</b> is not specified, details for the ve interface on the node on which the command is executed are cleared.</li> <li>• When <b>rbridge-idall</b> is specified, all ve interfaces with that <b>rbridge-id</b> from all the nodes in the cluster are cleared.</li> </ul>
<b>Examples</b>	<p>To clear statistics information for a VLAN in the IGMP protocol:</p> <pre>switch# clear ip igmp statistics interface vlan 11</pre>

## clear ip ospf

Clears OSPF process, counters, neighbors, or routes.

<b>Syntax</b>	<pre>clear ip ospf all  clear ip ospf counters { all   &lt;N&gt;gigabitethernet rbridge-id/slot/port   loopback number   port-channel number   ve vlan_id } [ vrf name [ rbridge rbridge-id ] ] [ [ rbridge-id rbridge-id ] ]  clear ip ospf neighbor { A.B.C.D   all }  clear ip ospf routes { A.B.C.D   all }</pre>
<b>Parameters</b>	<p><b>all</b> Clears all counters.</p> <p><b>counters</b> Clears all counters or clears the counters of an interface that you specify.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;gigabitethernet with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>loopback number</b> Specifies a loopback port number in the range of 1 to 255.</p> <p><b>port-channel number</b> Specifies the interface is a port-channel. The number of available channels range from 1 through 6144.</p> <p><b>ve vlan_id</b> Specifies a virtual Ethernet (VE) interface. (Refer to the Usage Guidelines.)</p> <p><b>rbridge rbridge-id</b> Specifies an RBridge ID.</p> <p><b>vrf name</b> Clears the specified VRF.</p> <p><b>neighbor</b> Clears the specified neighbor, or clears all neighbors.</p> <p><b>A.B.C.D</b> Specifies the IP address of the neighbor to clear.</p> <p><b>all</b> Clears all neighbors.</p> <p><b>routes</b> Clears matching routes or clears all routes.</p> <p><b>A.B.C.D</b> Clears all routes that match the prefix and mask that you specify.</p>

**all**

Clears all routes.

**Modes** Privileged EXEC mode

**Usage Guidelines** If the physical interface type and name are specified, the **rbridge-id**/*rbridge-id* option is not available.

**Examples** To restart the OSPF processes:

```
switch# clear ip ospf all
```

## clear ip pim mcache

Clears the Protocol Independent Multicast forwarding cache.

**Syntax** `clear ip pim mcache [ IP-addr [ IP-addr ] ]`

**Parameters** *IP-addr*

Group or source IPv4 address. One or two IP addresses (unicast or multicast) can be specified.

**Modes** Privileged EXEC mode

**Related  
Commands** [clear ip pim rp-map](#), [clear ip pim traffic](#)

## clear ip pim rp-map

Clears the static multicast forwarding table.

**Syntax** `clear ip pim rp-map`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command should be used after the static Rendezvous Point configuration has been changed. This allows Protocol Independent Multicast to immediately start using the new Rendezvous Point, rather than waiting for the old information to expire.

**Related Commands** [clear ip pim mcache](#), [clear ip pim traffic](#)

## clear ip pim traffic

Clears the Protocol Independent Multicast (PIM) traffic counters.

**Syntax**    **clear ip pim traffic**

**Modes**    Privileged EXEC mode

**Related  
Commands**    [clear ip pim rp-map](#), [clear ip pim mcache](#)

## clear ip route

Clears a specified route or all IP routes in the IP routing tables.

**Syntax** `clear ip route { A.B.C.D/M | all | slot line_card_number | vrf name }`

**Parameters** *A.B.C.D/M*

Clears the route specified by this IPv4 address/length.

**all**

Clears all routes from the routing table in IP route management.

**slot** *line\_card\_number*

Clears the route specified by this line card number.

**vrf** *name*

Clears the specified VRF.

**Modes** Privileged EXEC mode

**Examples** To clear the IP route specified by the prefix 192.158.1.1/24:

```
switch# clear ip route 192.158.1.1/24
```



## clear ipv6 bgp dampening

Reactivates all suppressed BGP4+ routes.

**Syntax** `clear ipv6 bgp dampening [ ipv6-addr { / mask } ]`

**Parameters** *ipv6-addr* IPv6 address of a specified route in dotted-decimal notation.  
*mask* (Optional) IPv6 mask of a specified route in CIDR notation.

**Modes** Privileged EXEC mode

**Examples** To unsuppress all suppressed BGP4+ routes:

```
device# clear ipv6 bgp dampening
```

### History

Release version	Command history
5.0.0	This command was introduced.

## clear ipv6 bgp flap-statistics

Reactivates all suppressed BGP4+ routes.

**Syntax** `clear ipv6 bgp flap-statistics [ ipv6-addr { / mask } | neighbor ipv6-addr | regular-expression string ]`

**Parameters** *ipv6-addr*

IPv6 address of a specified route in dotted-decimal notation.

*mask*

(Optional) IPv6 mask of a specified route in CIDR notation.

**neighbor**

Clears dampening statistics only for routes learned from the specified neighbor.

*ipv6-addr*

IPv6 address of the neighbor.

**regular-expression**

Specifies a regular expression.

*string*

Regular expression.

**Modes** Privileged EXEC mode

**Examples** To clear the dampening statistics for a BGP4+ route:

```
device# clear ipv6 bgp flap-statistics
```

**History**

---

Release version	Command history
5.0.0	This command was introduced.

---

## clear ipv6 bgp local routes

Clears all BGP4+ local routes from the IP route table and resets the routes.

**Syntax** `clear ipv6 bgp local routes`

**Modes** Privileged EXEC mode

**Examples** To clear all BGP4+ local routes:

```
device# clear ipv6 bgp local routes
```

### History

Release version	Command history
5.0.0	This command was introduced.

## clear ipv6 bgp neighbor

Requests a dynamic refresh of BGP4+ connections or routes from a neighbor, with a variety of options.

<b>Syntax</b>	<b>clear ipv6 bgp neighbor</b> [ <b>all</b>   <i>as-num</i>   <i>peer-group-name</i>   <i>ipv6-addr</i> ] [ <b>last-packet-with-error</b>   <b>notification-errors</b>   <b>soft</b> [ <b>in</b>   <b>out</b> ]   <b>soft-outbound</b>   <b>traffic</b> ] [ <b>rbridge-id</b> <i>rbridge-id</i> ]
<b>Parameters</b>	<b>all</b> Resets and clears all BGP4+ connections to all neighbors.
	<b>as-num</b> Clears all BGP4+ connections within this autonomous system. Range is from 1 through 4294967295.
	<b>peer-group-name</b> Clears all BGP4+ connections in this peer group. Range is from 1 through 63 characters.
	<b>ipv6-addr</b> Clears all BGP4+ connections with this IPv6 address, in dotted-decimal notation.
	<b>last-packet-with-error</b> Clears all BGP4+ connections identified as having the last packet received with an error.
	<b>notification-errors</b> Clears all BGP4+ connections identified as having notification errors.
	<b>soft</b> Refreshes routes received from or sent to the neighbor.
	<b>in</b> Refreshes received routes.
	<b>out</b> Refreshes sent routes.
	<b>soft-outbound</b> Refreshes all outbound routes by applying new or changed filters, but sends only the existing routes affected by the new or changed filters to the neighbor.
	<hr/> <b>NOTE</b> Use <b>soft-outbound</b> only if the outbound policy is changed. This operand updates all outbound routes by applying the new or changed filters. However, the device sends to the neighbor only the existing routes that are affected by the new or changed filters. The <b>soft out</b> operand updates all outbound routes and then sends the entire BGP4+ route table on the device to the neighbor after the device changes or excludes the routes affected by the filters. <hr/>
	<b>traffic</b> Clears the counters (resets them to 0) for BGP4+ messages.
	<b>rbridge-id</b> <i>rbridge-id</i> Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples** To refresh all BGP4 neighbor connections:

```
device# clear ipv6 bgp neighbor all
```

To reset the counters for BGP4+ messages:

```
device# clear ipv6 bgp neighbor all traffic
```

To clear all BGP4+ connections with a specified IPv6 address:

```
device# clear ipv6 bgp neighbor 2001::1
```

To clear all BGP4+ connections with a specified peer group:

```
device# clear ipv6 bgp neighbor P1
```

**History**

<b>Release version</b>	<b>Command history</b>
5.0.0	This command was introduced.

## clear ipv6 bgp routes

Clears BGP4+ routes from the IP route table and resets the routes.

**Syntax** `clear ipv6 bgp routes [ ipv6-addr { / mask } ]`

**Parameters** *ipv6-addr* IPv6 address of a specified route in dotted-decimal notation.  
*mask* (Optional) IPv6 mask of a specified route in CIDR notation.

**Modes** Privileged EXEC mode

**Examples** To clear BGP4+ routes:

```
device# clear ipv6 bgp routes 2000::/64
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## clear ipv6 bgp traffic

Clears the BGP4+ message counter for all neighbors.

**Syntax** `clear ipv6 bgp traffic`

**Modes** Privileged EXEC mode

**Examples** To clear the BGP4+ message counters:

```
device# clear ipv6 bgp traffic
```

### History

Release version	Command history
5.0.0	This command was introduced.

## clear ipv6 counters

Clears IPv6 counters on on all interfaces or on a specified interface.

**Syntax** `clear ipv6 counters [ all | interface { <N>gigabitethernet rbridge-id/slot/port | loopback port_number | ve vlan_id [ rbridge-id [ all | rbridge-id ] } ]`

**Parameters** **all**

Specifies all interfaces.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**loopback**

Specifies a loopback interface.

**port\_number**

Port number of the loopback interface. The range is from 1 through 255.

**ve**

Specifies a virtual Ethernet (VE) interface.

**vlan\_id**

VLAN ID of the VE interface.

**rbridge-id rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges in the cluster.

**Modes** Privileged EXEC mode



## clear ipv6 dhcp relay statistics

Clears IPv6 DHCP Relay statistics

**Syntax** `clear ipv6 dhcp relay statistics [ ipv6-address ipv6-address ] [ rbridge-id { rbridge-id | all } | range ]`

**Command Default** If the **rbridge-id** parameter is omitted, statistics clear for the local switch. If the **ip\_address** parameter is omitted, statistics clear for all configured addresses on defined switches.

**Parameters** **ip-address** *ip-addr*

IPv6 address of DHCP server where client requests are to be forwarded.

**rbridge-id**

Specifies an RBridge or all RBridges.

*rbridge-id*

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**range**

A range of RBridge IDs separated by a dash or commas, for example:

1-3 - RBridge ID 1 through 3  
1-3, 5 - RBridge ID 1 through 3 and RBridge ID 5  
1, 3, 5, 6 - RBridge ID 1, 3, 5, and 6

**Modes** Privileged EXEC mode

**Usage Guidelines** Clears IPv6 DHCP Relay statistics for a specific IP DHCP Relay address or all addresses on a local switch, specific switches, or all nodes in a logical chassis cluster.

No spaces are allowed in the range string. The range does not need to be contiguous (for example, 1-2,5). You can also specify **all** for all RBridge IDs in a logical chassis cluster.

**Examples** Clear statistics for IPv6 DHCP Relay addresses on RBridge IDs 1, 3, and 5.

```
switch# clear ipv6 dhcp relay statistics rbridge-id 1,3,5
```

**History**

Release version	Command history
5.0.1	This command was introduced.

## clear ipv6 fabric-virtual-gateway

Clears IPv6 Fabric-Virtual-Gateway protocol statistics globally or for a Virtual Ethernet (VE) interface.

**Syntax** `clear ipv6 fabric-virtual-gateway { all | interface ve vlan-id }`

**Command Default** None

**Parameters** **all**  
Specifies all statistics.

**interface ve *vlan-id***  
Clears IPv6 Fabric-Virtual-Gateway configurations for the specified VE interface. The range is from 1 through 4090 if Virtual Fabrics is disabled, and from 1 through 8191 if Virtual Fabrics is enabled.

**Modes** Privileged EXEC mode

**Usage Guidelines** None

**Examples** Clears the IPv6 Fabric-Virtual-Gateway protocol statistics on VE 2000.  
`switch# clear ipv6 fabric-virtual-gateway interface ve 2000`

**History**

Release version	Command history
5.0.1	This command was introduced.

## clear ipv6 mld groups

Clears IPv6 MLDv1 group cache entries for a multicast group address or a VLAN.

**Syntax** `clear ipv6 mld groups [ ipv6address ] [ interface vlan vlan_id ]`

**Parameters** **ipv6address**

Specifies the IPv6 address for the group.

**interface vlan**

Specifies a VLAN ID.

**vlan\_id**

A VLAN ID. Range is from 1 through 4090 if Virtual Fabrics is disabled, and from 1 through 8191 if Virtual Fabrics is enabled.

**Modes** Privileged EXEC mode

**Examples** To clear all IPv6 MLDv1 group cache entries:

```
switch# clear ipv6 mld groups
```

To clear IPv6 MLDv1 group cache entries on a sp[ecific VLAN]:

```
switch# clear ipv6 mld groups interface vlan 2000
```

## clear ipv6 mld statistics

Clears IPv6 MLDv1 snooping statistics for a VLAN.

**Syntax** `clear ipv6 mld statistics [ interface vlan vlan_id ]`

**Parameters** `interface vlan`

Specifies a VLAN ID.

*vlan\_id*

A VLAN ID. Range is from 1 through 4090 if Virtual Fabrics is disabled, and from 1 through 8191 if Virtual Fabrics is enabled.

**Modes** Privileged EXEC mode

**Examples** To clear IPv6 MLDv1 snooping statistics for a specific VLAN:

```
switch# clear ipv6 mld statistics interface vlan 2000
```

## clear ipv6 neighbor

Clears the IPv6 Neighbor Discovery cache on an interface.

**Syntax** **clear ipv6 neighbor** [ *ipv6address* ] [ **force-delete** [ **rbridge-id** *rbridge-id* ] | **interface** [ **<N>gigabitethernet** *rbridge-id/slot/port* | **ve** *vlan\_id* ] | **no-refresh** [ **rbridge-id** *rbridge-id* ] | **slot** *slot* | **ve** *vlan\_id* | **vrf** [ *vrf-name* | **all** | **default-vrf** ] [ **force-delete** | **no-refresh** ] [ **rbridge-id** *rbridge-id* ]

**Parameters** **ipv6address**

IPv6 address of a neighbor in A:B::C:D format.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace **<N>gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**force-delete**

Forcibly clears the cache.

**no-refresh**

Prevents the cache from being refreshed.

**slot**

Specifies a slot.

**slot**

Line card number.

**ve**

Specifies a virtual Ethernet (VE) interface.

**vlan\_id**

VLAN ID of the VE interface. Range is from 1 through 4090 if Virtual Fabrics is disabled, and from 1 through 8191 if Virtual Fabrics is enabled.

**vrf** *vrf-name*

Specifies a VRF instance.

**Modes** Privileged EXEC mode

## clear ipv6 ospf

Clears OSPFv3 data processes, counts, force-spf, neighbors, redistribution, routes, and traffic.

**Syntax** `clear ipv6 ospf { all | force-spf | redistribution | traffic } [ all-vrfs ] [ rbridge-id rbridge-id ] [ vrf vrfname ]`

`clear ipv6 ospf counts neighbor { A.B.C.D [ all-vrfs ] [ rbridge-id rbridge-id ] [ vrf vrfname ] } | interface { <N>gigabitethernet rbridge-id/slot/port } [ loopback number | ve vlan_id number [ A.B.C.D | rbridge-id rbridge-id ] ] }`

`clear ipv6 ospf neighbor { all [ all-vrfs ] [ rbridge-id rbridge-id ] [ vrf vrfname ] } | { interface { <N>gigabitethernet rbridge-id/slot/port } [ loopback number | ve vlan_id number [ A.B.C.D | rbridge-id rbridge-id ] ] }`

`clear ipv6 ospf routes { IPv6addr | all } [ all-vrfs ] [ rbridge-id rbridge-id ] [ vrf vrfname ]`

**Command Default** OSPFv3 properties are cleared for the default VRF if the VRF is not specified.

### Parameters

**all**

Clears all OSPFv3 data.

**force-spf**

Performs the shortest path first (SPF) calculation without clearing the OSPFv3 database.

**redistribution**

Clears OSPFv3 redistributed routes.

**traffic**

Clears OSPFv3 traffic statistics.

**all-vrfs**

Specifies all VRFs.

**vrf vrfname**

Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.

**rbridge-id rbridge-id**

Displays the information for the physical, loopback, and SVI interfaces specific to the selected RBridge. Applicable only in case of loopback and ve interfaces.

**counts**

Clears OSPFv3 counters.

**neighbor**

Clears all OSPF counters for a specified neighbor.

**A.B.C.D**

Specifies a destination IPv6 address.

**interface**

Specifies an interface.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>gigabitethernet with the desired operand (for example, tengigabitethernet specifies a 10-Gb Ethernet port). The use of gigabitethernet without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

- slot** Specifies an RBridge ID.
- port** Specifies a valid slot number.
- loopback number** Specifies a valid port number.
- ve vlan\_id** Specifies a loopback port number in the range from 1 through 255.
- neighbor** Specifies a virtual Ethernet (VE) interface. Refer to the Usage Guidelines.
- routes** Clears OSPFv3 neighbors.
- routes** Clears OSPFv3 routes.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use the **force-spf** keyword to perform the shortest path first (SPF) calculation without clearing the OSPFv3 database.

If the physical interface type and name are specified, the **rbridge-id rbridge-id** option is not available.

On the Brocade VDX family of switches, VLANs are treated as interfaces from a configuration point of view. By default, all the DCB ports are assigned to VLAN 1 (VLAN ID equals 1). Valid VLAN IDs are as follows:

On Brocade VDX 8770 switches: 1 through 4086 for 802.1Q VLANs (VLAN IDs 4087 through 4095 are reserved on these switches), and 4096 through 8191 for service or transport VFs in a Virtual Fabrics context.

On all other Brocade VDX switches: 1 through 3962 for 802.1Q VLANs (VLAN IDs 3963 through 4095 are reserved on these switches), and 4096 through 8191 for service or transport VFs in a Virtual Fabrics context.

**Examples** To restart the OSPFv3 processes:

```
device# clear ipv6 ospf all
```

The following example clears all OSPFv3 counters for a specified neighbor:

```
device# clear ipv6 ospf counts neighbor 10.10.10.1
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## clear ipv6 route

Clears IPv6 routing tables on an interface or line card and reloads the current information.

**Syntax** `clear ipv6 route [ all | slot slot [ ipv6address | ipv6prefix ] [ rbridge-id { all | rbridge-id } | vrf vrf-name ] ] ]`

**Parameters**

- all** Clears all IPv6 routes.
- slot** Clears IPv6 routes on the specified line card.
  - slot** Slot number.
  - ipv6address** IPv6 address.
  - ipv6prefix** IPv6 prefix in *A:B::C:D/length* format.
  - rbridge-id rbridge-id** Specifies an RBridge ID.
    - all** Specifies all RBridges in the cluster.
  - vrf vrf-name** Specifies a VRF instance.

**Modes** Privileged EXEC mode



## clear ipv6 vrrp statistics

Clears IPv6 VRRPv3 session statistics for all virtual groups, for a specified interface or RBridge ID, or for a specified virtual group.

**Syntax** `clear ipv6 vrrp statistics [ all ] [ session VRID | all ] [ rbridge { rbridge-id | all } ]`

`clear ipv6 vrrp statistics [ interface { <N>gigabitethernet [ rbridge-id ]/slot/port | ve vlan_id } ]`

**Parameters** **all**

Clears all IPv6 VRRP statistics.

**session *VRID***

Specifies the virtual group ID on which to clear statistics. Valid values range from 1 through 128.

**rbridge-id { *rbridge-id* | all }**

Clears all IPv6 VRRP statistics for the specified RBridge ID. If **all** is specified for the *rbridge-id* variable, information for all RBridge IDs is displayed.

**interface**

Specifies an interface.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

***rbridge-id***

Specifies an optional RBridge ID.

***slot***

Specifies a valid slot number.

***port***

Specifies a valid port number.

***ve vlan\_id***

Specifies the VE VLAN number.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported in IPv6 VRRPv3 and VRRP-E-v3.

**Examples** To clear all IPv6 VRRPv3 statistics for all virtual groups:

```
switch# clear ipv6 vrrp statistics all
```

To clear statistics for an IPv6 VRRPv3 session of a virtual group named 25.

```
switch# clear ipv6 vrrp statistics session 25
```

## clear lacp

Clears the Link Aggregation Group Control Protocol (LACP) counters on a specific port-channel.

**Syntax** `clear lacp number counters`

**Parameters** *number*

Specifies the port channel-group number. Valid values range from 1 through 6144.

**counters**

Clears traffic counters.

**Modes** Privileged EXEC mode

**Examples** To clear the LACP counters for a specific port-channel:

```
switch# clear lacp 10 counters
```

**Related  
Commands** [show lacp](#)

## clear lacp counters

Clears the Link Aggregation Group Control Protocol (LACP) counters on all port-channels.

**Syntax** `clear lacp counters`

**Modes** Privileged EXEC mode

**Examples** To clear the counters for all port-channels:

```
switch# clear lacp counters
```

**Related  
Commands** [show lacp](#)

## clear lldp neighbors

Clears the Link Layer Discovery Protocol (LLDP) neighbor information on all or specified interfaces.

<b>Syntax</b>	<b>clear lldp neighbors interface</b> [ <i>&lt;N&gt;</i> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i> ]
<b>Parameters</b>	<b>interface</b> Use this parameter followed by the slot or port number to identify the interface. <b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>Ngigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port. <b>rbridge-id</b> Specifies an RBridge ID. <b>slot</b> Specifies a valid slot number. <b>port</b> Specifies a valid port number.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	If the <b>interface</b> parameter is not specified, this command clears the LLDP neighbor information received on all the interfaces.
<b>Examples</b>	To clear the LLDP neighbor information for all interfaces:  switch# clear lldp neighbors
<b>Related Commands</b>	<a href="#">show lldp neighbors</a>

## clear lldp statistics

Clears LLDP statistics for all interfaces or a specified interface.

**Syntax** `clear lldp statistics interface [ <N>gigabitethernet rbridge-id/slot/port ]`

**Parameters** **interface**

Use this parameter followed by the slot or port number to identify the interface.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace **Ngigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** If the **interface** parameter is not specified, this command clears all the LLDP statistics on all interfaces.

**Examples** To clear all the LLDP statistics for all interfaces:

```
switch# clear lldp statistics
```

**Related Commands** [show lldp statistics](#)

## clear logging auditlog

Clears the audit log system messages.

**Syntax** `clear logging auditlog [ rbridge-id { rbridge-id | all } ]`

**Command Default** This command is executed on the local switch.

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

*rbridge-id*

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

**Examples** To clear the audit log messages on the local switch:

```
switch# clear logging auditlog
```

**Related Commands** [clear logging raslog](#), [log-dampening-debug](#), [show logging auditlog](#)

# clear logging raslog

Clears RASLog messages from the switch.

**Syntax** `clear logging raslog [ message-type { DCE | SYSTEM } ] [ rbridge-id { rbridge-id | all } ]`

**Command Default** Clear all RASLog messages on the local switch.

**Parameters** **message-type**

Clears RASLog messages of the specified type.

**SYSTEM**

Clears system messages.

**DCE**

Clears DCE application messages.

**rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

The **rbridge-id** operand is supported in VCS mode only.

This command is not supported on the standby management module.

**Examples** To clear all RASLog messages on the local switch:

```
switch# clear logging raslog
```

```
DCE Raslogs are cleared
SYSTEM Raslogs are cleared
```

To clear all DCE messages on the local switch:

```
switch# clear logging raslog message-type DCE
```

```
DCE Raslogs are cleared
```

To clear all SYSTEM messages on the local switch:

```
switch# clear logging raslog message-type SYSTEM
```

```
SYSTEM Raslogs are cleared
```

**Related  
Commands**

[logging raslog console](#), [show logging raslog](#), [show running-config logging](#)

## clear mac-address-table conversational

Clears the conversational MAC interface status and configuration information.

**Syntax** **clear mac-address-table conversational** [ **address** *mac\_address* | **interface** *<N>gigabitethernet rbridge-id/slot/port* | **linecard** *linecard\_number* [**rbridge-id** *rbridge-id*] | **vlan** *vlan\_id* ]

**Parameters** **address** *mac\_address*

Specifies a MAC address in HHHH.HHHH.HHHH format.

**interface**

Specifies an interface.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace **<N>gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**linecard** *linecard\_number*

Specifies a line card on the local RBridge.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**vlan** *vlan\_id*

Specifies a VLAN interface.

**Modes** Privileged EXEC mode

**History**

Release version	Command history
5.0.0	This command was introduced.



## clear mac-address-table dynamic

Clears the dynamic MAC interface status and configuration information.

**Syntax** `clear mac-address-table dynamic [ address mac_address | interface <N>gigabitethernet rbridge-id/  
slot/port | vlan vlan_id ]`

**Parameters** **address** *mac\_address*

Specifies a MAC address in HHHH.HHHH.HHHH format.

**interface**

Specifies an interface.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds.

Enter ? to see which interface subtypes are available. Replace

<N>**gigabitethernet** with the desired operand (for example,

**tengigabitethernet** specifies a 10-Gb Ethernet port). The use of

**gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

***rbridge-id***

Specifies an RBridge ID.

***slot***

Specifies a valid slot number.

***port***

Specifies a valid port number.

**vlan** *vlan\_id*

Specifies a VLAN interface.

**Modes** Privileged EXEC mode

**History**

**Release version**

**Command history**

5.0.0

This command description was modified to distinguish it from the form with the **conversational** keyword, and new keywords were added.

## clear nas statistics

Clears automatic network attached storage (NAS) statistics.

<b>Syntax</b>	<b>clear nas statistics all</b>   <b>server-ip</b> <i>ip_addr/prefix</i> [ <b>vlan</b> <i>vlan_id</i>   <b>vrf</b> <i>VRF_name</i> ] [ <b>rbridge-id</b> <i>rbridge-id</i> ]
<b>Parameters</b>	<p><b>all</b> Shows all gathered statistics.</p> <p><b>server-ip</b> IP address for which to clear Auto-NAS statistics.</p> <p><b>ip_addr/prefix</b> IPv4 address/prefix of a specified <b>Auto-</b> NAS port.</p> <p><b>vlan vlan_id</b> Specifies a VLAN interface for which to clear the statistics.</p> <p><b>vrf VRF_name</b> Specifies an OSPF VRF interface for which to clear the statistics.</p> <p><b>rbridge-id rbridge-id</b> Specifies an RBridge ID for which to clear the statistics.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	switch# clear nas statistics all server-ip 1.1.1.0/24
<b>Related Commands</b>	<a href="#">nas auto-qos</a> , <a href="#">nas server-ip</a> , <a href="#">show cee maps</a> , <a href="#">show nas statistics</a> , <a href="#">show running-config nas server-ip</a> , <a href="#">show system internal nas</a>

## clear overlay-gateway

Clear counters for the specified gateway.

**Syntax** `clear overlay-gateway name { statistics | vlan statistics }`

**Parameters** *name*

Specifies the name of the VXLAN gateway profile.

**statistics**

Clears all statistics for the VXLAN gateway.

**vlan statistics**

Clears per-VLAN statistics for the VXLAN gateway.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is available only for a switch that is in logical chassis cluster mode.

If you specify the VXLAN gateway name, the gateway must already be configured.

If you specify VLAN IDs, these VLANs must already be configured as exported VLANs for the gateway.

**Examples** To clear all counters for the already configured VXLAN gateway named gateway1:

```
switch# clear overlay-gateway gateway1 statistics
```

## clear policy-map-counters

Provides a mechanism for clearing the policy map counters.

**Syntax** `clear policy-map-counters [ interface <N>gigabitethernet rbridge-id/slot/port | port-channel number ]`

**Parameters** **interface**

Specifies an interface.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**port-channel number**

Specifies the interface is a port-channel. The number of available channels range from 1 through 6144.

**Modes** Privileged EXEC mode

## clear sessions

Logs out the user sessions connected to the switch.

**Syntax** `clear sessions [ rbridge-id { rbridge-id | all } ]`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

*rbridge-id*

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is not distributed across the cluster. The RBridge ID of the node should be used to log out users connected to the individual nodes.

The **rbridge-id** operand is supported in VCS mode only.

**Examples**

```
switch# clear sessions rbridge-id 3
This operation will logout all the user sessions. Do you want to continue (yes/no)? : y
```

## clear sflow statistics

Clears sFlow statistics from all ports or from a specified port..

<b>Syntax</b>	<b>clear sflow statistics interface</b> [ <i>&lt;N&gt;gigabitethernet rbridge-id/slot/port</i>   <b>tunnel</b> ]
<b>Parameters</b>	<p><b>interface</b></p> <p>Specifies an interface.</p> <p><b>&lt;N&gt;gigabitethernet</b></p> <p>Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <i>&lt;N&gt;gigabitethernet</i> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b></p> <p>Specifies an RBridge ID.</p> <p><b>slot</b></p> <p>Specifies a valid slot number.</p> <p><b>port</b></p> <p>Specifies a valid port number.</p> <p><b>tunnel</b></p> <p>Specifies the tunnel interface.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	To clear sFlow statistics:
	<pre>switch# clear sflow statistics</pre>

## clear spanning-tree counter

Clears all spanning-tree counters on the interface.

**Syntax** `clear spanning-tree counter [ interface | port-channel number | <N>gigabitethernet rbridge-id/slot/port ]`

<b>Parameters</b>	<b>interface</b>	Specifies an interface.
	<b>port-channel <i>number</i></b>	Specifies the interface is a port-channel. The number of available channels ranges from 1 through 6144.
	<b>&lt;N&gt;gigabitethernet</b>	Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace \ <b>Ngigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.
	<b><i>rbridge-id</i></b>	Specifies an RBridge ID.
	<b><i>slot</i></b>	Specifies a valid slot number.
	<b><i>port</i></b>	Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** If the **interface** parameter is not specified, spanning-tree counters are cleared for all interfaces. If xSTP is enabled over VCS, this command must be executed on all RBridge nodes.

**Examples** To clear spanning-tree counters for all interfaces:

```
switch# clear spanning-tree counter
```

To clear spanning-tree counters for a 10-gigabit Ethernet interface:

```
switch# clear spanning-tree counter interface tengigabitethernet 0/1
```

To clear spanning-tree counters for port-channel 23:

```
switch# clear spanning-tree counter interface port-channel 23
```

**Related Commands** [show spanning-tree](#)

## clear spanning-tree detected-protocols

Clears all spanning-tree detected protocols on the interface.

<b>Syntax</b>	<b>clear spanning-tree detected-protocols</b> [ <b>interface</b>   <b>port-channel</b> <i>number</i>   <b>&lt;N&gt;gigabitethernet</b> <i>rbridge-id/slot/port</i> ]
<b>Parameters</b>	<p><b>interface</b> Specifies an interface.</p> <p><b>port-channel</b> <i>number</i> Specifies the interface is a port-channel. The number of available channels ranges from 1 through 6144.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>Ngigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	If the <b>interface</b> parameter is not specified, spanning-tree detected protocols are cleared for all interfaces.
<b>Examples</b>	<p>To clear detected protocols for all interfaces:</p> <pre>switch# clear spanning-tree detected-protocols</pre> <p>To clear detected protocols for a 10-gigabit Ethernet interface:</p> <pre>switch# clear spanning-tree detected-protocols interface tengigabitethernet 0/1</pre> <p>To clear detected protocols for port-channel 23:</p> <pre>switch# clear spanning-tree detected-protocols interface port-channel 23</pre>
<b>Related Commands</b>	<a href="#">show spanning-tree</a>



# clear support

Removes support data such as core files and RAS FFDC files from the switch.

**Syntax** `clear support [ rbridge-id { rbridge-id | all } ]`

**Command Default** This command is executed on the local switch.

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

***rbridge-id***

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

The **rbridge-id** operand is supported in VCS mode only.

**Examples** To remove core files from the local switch:

```
switch# clear support
```

**Related Commands** [copy support](#), [show support](#)

## clear udd statistics

Clears UDLD statistics.

<b>Syntax</b>	<b>clear udd statistics</b> [ <b>interface</b> { <i>&lt;N&gt;gigabitethernet rbridge-id/slot/port</i> } ]
<b>Parameters</b>	<p><b>interface</b> Specifies an interface.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <i>&lt;N&gt;gigabitethernet</i> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Clears either all unidirectional link detection (UDLD) protocol statistics or clears the statistics on a specified port.
<b>Examples</b>	<p>To clear UDLD statistics on a specific tengigabitethernet interface:</p> <pre>switch# clear udd statistics interface te 5/0/1</pre>
<b>Related Commands</b>	<a href="#">protocol udd</a> , <a href="#">show udd</a> , <a href="#">udd enable</a>

## clear vrrp statistics

Clears VRRP statistics.

**Syntax** `clear vrrp statistics`

`clear vrrp statistics [ interface { <N>gigabitethernet [ rbridge-id/ slot/ port } | ve vlan_id ]`

`clear vrrp statistics [ session VRID ]`

**Parameters** `interface`

Specifies an interface.

`<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

`rbridge-id`

Specifies an optional RBridge ID.

`slot`

Specifies a valid slot number.

`port`

Specifies a valid port number.

`ve vlan_id`

Specifies the VE VLAN number.

`session VRID`

Specifies the virtual group ID on which to clear statistics. Valid values range from 1 through 128.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command clears VRRP session statistics for all virtual groups, for a specified interface or for a specified virtual group.

This command is for VRRP and VRRP-E. VRRP-E supports only the `vevlan_id` type.

To clear all statistics, use the `clear vrrp statistics` command with no operands.

**Examples** To clear all VRRP statistics for all virtual groups:

```
switch# clear vrrp statistics
```

To clear statistics for a 10-gigabit Ethernet interface that has an rbridge-id/slot/port of 121/0/50:

```
switch# clear vrrp stastistics interface tengigabitethernet 121/0/50
```

To clear statistics for a session for a VRRP virtual group called "vrrp-group-25":

```
switch# clear vrrp session 25
```

## client-to-client-reflection

Enables routes from one client to be reflected to other clients by the host device on which it is configured.

**Syntax** `client-to-client-reflection`

`no client-to-client-reflection`

**Command Default** This feature is enabled.

**Modes** BGP address-family IPv4 unicast configuration mode  
BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** The host device on which it is configured becomes the route-reflector server.  
Use the **no** form of this command to restore the default.

**Examples** To configure client-to-client reflection on the host device:

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# client-to-client-reflection
```

To disable client-to-client reflection on the host device:

```
device(config)# rbridge-id 122
device(config-rbridge-id-122)# router bgp
device(config-bgp-router)# address-family ipv6 unicast
device(config-bgp-ipv6u)# no client-to-client-reflection
```

### History

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.

# clock set

Sets the local clock date and time.

**Syntax** `clock set CCYY-MM-DDTHH:MM:SS [ rbridge-id { rbridge-id | all } ]`

**Parameters** `CCYY-MM-DDTHH:MM:SS`

Specifies the local clock date and time in year, month, day, hours, minutes, and seconds. Valid date and time settings range from January 1, 1970 to January 19, 2038.

**rbridge-id**

Specifies an RBridge or all RBridges.

*rbridge-id*

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** An active NTP server, if configured, automatically updates and overrides the local clock time. The RBridge ID of the node should be used to set the clock.

The rbridge-id parameter is supported in Logical chassis cluster mode only.

**Examples** To set the date and time to March 17, 2010, 15 minutes past noon in Logical chassis cluster mode for all switches in the cluster:

```
switch# clock set rbridge-id all 2010-03-17T12:15:00
```

**Related Commands** [clock timezone \(Privileged EXEC mode\)](#), [ntp server](#), [show clock](#)

## clock timezone (Privileged EXEC mode)

Sets the time zone based on region and longitudinal city.

**Syntax** `clock timezone region/city [ rbridge-id { rbridge-Id | all } ]`

`no clock timezone [ rbridge-id rbridge-Id ]`

**Parameters** *region*

Specifies the region's time zone.

*city*

Specifies the city's time zone.

*rbridge-id*

Specifies an RBridge or all RBridges.

*rbridge-Id*

Specifies an RBridge ID.

*all*

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** Sets the local clock time zone.

Regions include the following countries: Africa, America, Pacific, Europe, Antarctica, Asia, Australia, Atlantic, Indian, and longitudinal city. For a complete listing of supported regions and cities, refer to time zone appendix in the *Network OS Administrator's Guide* .

By default, all switches are in the Greenwich Mean Time (GMT) time zone. The **no** operand removes the time zone setting for the local clock. When using the **no** operand, you do not need to reference a time zone setting.

The **no** operand is not distributed across the cluster. The RBridge ID of the node should be used.

Network Time Protocol (NTP) commands must be configured on each individual switch.

The region name and city name must be separated by a slash (/).

After upgrading your switch to a new Network OS version, you might need to reset the time zone information.

This command can also be run in RBridge ID configuration mode.

**Examples** To set the time zone to Pacific Standard Time in North America on all nodes in the cluster:

```
switch# clock timezone America/Los_Angeles rbridge-id all
```

To remove the time zone setting:

```
switch# no clock timezone rbridge-id 5
```

**Related Commands** [clock set](#), [ntp server](#), [show clock](#)

## clock timezone (RBridge ID configuration mode)

Sets the time zone based on region and longitudinal city.

**Syntax** `clock timezone region/city`

`no clock timezone`

**Parameters** *region*

Specifies the region's time zone.

*city*

Specifies the city's time zone.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Sets the local clock time zone.

Regions include the following countries: Africa, America, Pacific, Europe, Antarctica, Asia, Australia, Atlantic, Indian, and longitudinal city. For a complete listing of supported regions and cities, refer to Appendix C in the *Network OS Administrator's Guide*.

By default, all switches are in the Greenwich Mean Time (GMT) time zone. The **no** operand removes the timezone setting for the local clock. When using the **no** operand, you do not need to reference a timezone setting.

The **no** operand is not distributed across the cluster.

Network Time Protocol (NTP) commands must be configured on each individual switch.

The region name and city name must be separated by a slash (/).

Upgrade considerations: Existing timezone of system is retained after firmware upgrade, and it will be updated in configuration settings.

Downgrade considerations: Existing timezone of system will be retained after firmware downgrade and the respective entry will be removed from configuration settings.

This command can also be run in Privileged EXEC configuration mode.

**Examples** To set the time zone to Pacific Standard Time in North America on all nodes in the cluster:

```
switch# configure
switch(config)# rbridge-10
switch(config-rbridge-id-10# clock timezone America/Los_Angeles
```

To remove the timezone setting:

```
switch# configure
switch(config)# rbridge-10
switch(config-rbridge-id-10# no clock timezone
```

## cluster-id

Configures a cluster ID for the route reflector.

**Syntax** **cluster-id** [ *num* | **ipv4-address** *ip-addr* ]

**no cluster-id**

**Command Default** The default cluster ID is the device ID.

**Parameters** *num*

Integer value for cluster ID. Range is from 1 through 65535.

*ip-addr*

IPv4 address in dotted-decimal notation.

**Modes** BGP configuration mode

**Usage Guidelines** When configuring multiple route reflectors in a cluster, use the same cluster ID to avoid loops within the cluster.

Use the **no** form of this command to restore the default.

**Examples** To configure a cluster ID for the route reflector:

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router bgp
switch(config-bgp-router)# cluster-id 1234
```



## compare-med-empty-aspath

Enables comparison of Multi-Exit Discriminators (MEDs) for internal routes that originate within the local autonomous system (AS) or confederation.

**Syntax**    **compare-med-empty-aspath**

**no compare-med-empty-aspath**

**Modes**    BGP configuration mode

**Usage Guidelines**    Use the **no** form of this command to restore the default.

**Examples**    To configure the device to compare MEDs:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# compare-med-empty-aspath
```

## compare-routerid

Enables comparison of device IDs, so that the path-comparison algorithm compares the device IDs of neighbors that sent otherwise equal-length paths.

- Syntax**    **compare-routerid**  
**no compare-routerid**
- Modes**    BGP configuration mode
- Usage Guidelines**    Use the **no** form of this command to restore the default.
- Examples**    To configure the device always to compare device IDs:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# compare-routerid
```

# confederation identifier

Configures a BGP confederation identifier.

**Syntax** **confederation identifier** *autonomous-system number*  
**no confederation identifier** *autonomous-system number*

**Command Default** No BGP confederation identifier is identified.

**Parameters** **autonomous-system number**  
 Specifies an autonomous system (AS) number. The configurable range of values is from 1 to 4294967295.

**Modes** BGP configuration mode

**Usage Guidelines** Use the no form of this command to remove a BGP confederation identifier.  
 Use this command to configure a single AS number to identify a group of smaller ASs as a single confederation.

**Examples** To specify that confederation 65220 belongs to autonomous system 100.

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# local-as 65220
device(config-bgp-router)# confederation identifier 100
```

History	Release version	Command history
	5.0.0	This command was introduced.

## confederation peers

Configures subautonomous systems (sub-ASs) to belong to a single confederation.

**Syntax** `confederation peers autonomous-system number [ ...autonomous-system number ]`

`no confederation peers autonomous-system number [ ...autonomous-system number ]`

**Command Default** No BGP peers are configured to be members of a BGP confederation.

**Parameters** `autonomous-system number`

Autonomous system (AS) numbers for BGP peers that will belong to the confederation. The configurable range of values is from 1 to 4294967295.

**Modes** BGP configuration mode.

**Usage Guidelines** Use the no form of this command to remove an autonomous system from the confederation.

**Examples** To configure autonomous systems 65520, 65521, and 65522 to belong to a single confederation under the identifier 100.

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# local-as 65020
device(config-bgp-router)# confederation identifier 100
device(config-bgp-router)# confederation peers 65520 65521 65522
```

### History

Release version	Command history
5.0.0	This command was introduced.

# configure terminal

Enters global configuration mode.

**Syntax** `configure terminal`

**Modes** Privileged EXEC mode

**Related  
Commands** [exit](#)

## conform-set-dscp

Configures the packet DSCP priority of a class-map.

**Syntax** `conform-set-dscp dscp-num`

`no conform-set-dscp dscp-num`

**Parameters** *dscp-num*

Specifies that traffic with bandwidth requirements within the rate configured for CIR that has the packet DSCP priority set to the value specified by the `dscp-num` variable. Valid values are 0 through 63.

**Modes** Policy-map class police configuration mode

**Usage Guidelines** Only the **police cir** and **cls** commands are mandatory for configuring a class-map.

If the optional parameters for a class-map are not set, they are treated as disabled. To delete parameters for a class-map, you must delete all policer parameters while in the policy-map class configuration mode using the **no police cir** command.

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

Use the **no** version of this command to remove the parameter from the class-map.

**Examples** Example of setting this parameter.

```
switch(config-policymap)# class default
switch (config-policymap-class)# police cir 40000
switch(config-policymap-class-police)# conform-set-dscp 3
```

**Related Commands** [cbs](#), [conform-set-prec](#), [conform-set-tc](#), [ebs](#), [eir](#), [exceed-set-dscp](#), [exceed-set-prec](#), [exceed-set-tc](#), [police cir](#), [policy-map](#), [police-priority-map](#), [qos cos](#), [service-policy](#), [set-priority](#)

## conform-set-prec

Configures the packet IP precedence value of a class-map.

**Syntax** `conform-set-prec prec-num`

**Parameters** *prec-num*

Specifies that traffic with bandwidth requirements within the rate configured for CIR will have packet IP precedence value (first 3 bits of DSCP) set to the value in the prec-num variable. Valid values are 0 through 7.

**Modes** Policy-map class police configuration mode

**Usage Guidelines** Only the **police cir** and **cbs** commands are mandatory for configuring a class-map.

If the optional parameters for a class-map are not set, they are treated as disabled. To delete parameters for a class-map, you must delete all policer parameters while in the policy-map class configuration mode using the **no police cir** command.

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

Use the **no** version of this command to remove the parameter from the class-map.

**Examples** Example of setting this parameter.

```
switch(config-policymap)# class default
switch (config-policymap-class)# police cir 40000
switch(config-policymap-class-police)# conform-set-prec 3
```

**Related Commands** [cbs](#), [conform-set-dscp](#), [conform-set-tc](#), [ebs](#), [eir](#), [exceed-set-dscp](#), [exceed-set-prec](#), [exceed-set-tc](#), [police cir](#), [police-priority-map](#), [policy-map](#), [qos cos](#), [set-priority](#), [service-policy](#)

## conform-set-tc

Configures the CIR internal queue assignment of a class-map.

**Syntax** `conform-set-tc trafficclass`

`no conform-set-tc trafficclass`

**Parameters** *trafficclass*

Specifies that traffic with bandwidth requirements within the rate configured for CIR will have traffic class (internal queue assignment) set to the value in the trafficclass variable. Valid values are 0 through 7.

**Modes** Policy-map class police configuration mode

**Usage Guidelines** Only the **police cir** and **cb**s commands are mandatory for configuring a class-map.

If the optional parameters for a class-map are not set, they are treated as disabled. To delete parameters for a class-map, you must delete all policer parameters while in the policy-map class configuration mode using the **no police cir** command.

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

Use the **no** version of this command to remove the parameter from the class-map.

**Examples** Example of setting this parameter.

```
switch(config-policymap)# class default
switch (config-policymap-class)# police cir 40000
switch(config-policymap-class-police)# conform-set-tc 3
```

**Related Commands** [cbs](#), [conform-set-dscp](#), [conform-set-prec](#), [ebs](#), [eir](#), [exceed-set-dscp](#), [exceed-set-prec](#), [exceed-set-tc](#), [police cir](#), [police-priority-map](#), [policy-map](#), [qos cos](#), [service-policy](#), [set-priority](#)



# connector-group

Designates which connector group that FlexPort is allowed to access on the switch.

**Syntax** `connector-group rbridge-id/slot/group`

**Command Default** The default connector group is undefined.

**Parameters** `rbridge-id/slot/port`

Specifies a valid Fibre Channel port interface

**rbridge-id**

Specifies the RBridge ID.

**slot**

Specifies a valid slot number.

**group**

Specifies a connector group on the switch. The connector-group numbers range from 1 through 8.

**Modes** Hardware configuration mode

**Usage Guidelines** This command is supported only on the Brocade VDX 6740 and VDX 2740.

The connector-group numbers are related directly to the ports as numbered on each platform. The connector-group numbers that are allowed to be changed and their associated port numbers are shown in the table below. For example, on a Brocade VDX 6740, ports 1 through 8 belong to connector group 1. Not every connector group is supported on a switch.

**TABLE 5** Flexport supported hardware

Platform	Port number range	Connector group
Brocade VDX 6740	1-8	1
	17-24	3
	33-40	5
	41-48	6
Brocade VDX 2740T	43-50	1
	51-56 (6 ports only)	2

**Examples** This example sets the connector group for Rbridge-ID 1 to group 1.

```
switch# configure terminal
switch(config)# hardware
switch(config-hw)# connector-group 1/0/1
```

**History**

Release version	Command history
5.0.0	This command was introduced.

**Related Commands** [flexport](#), [hardware](#), [speed \(FlexPort\)](#)

## connector

Executes connector mode for the purpose of configuring breakout mode on Quad SFPs (QSFPs).

<b>Syntax</b>	<b>connector</b> [ <b>rbridge-id</b> <i>rbridge-id</i> ] <i>slot/port</i> <b>no connector</b> [ <b>rbridge-id</b> <i>rbridge-id</i> ] <i>slot/port</i>
<b>Parameters</b>	<b>rbridge-id</b> <i>rbridge-id</i> Specifies an RBridge ID.  <b>slot</b> Specifies a valid slot number.  <b>port</b> Specifies a valid port number.
<b>Modes</b>	Hardware configuration mode
<b>Examples</b>	<pre>switch(config-hardware)# connector 2/0/1 switch(config-connector-2/0/1)#</pre>
<b>Related Commands</b>	<a href="#">sfp breakout</a> , <a href="#">power-off linecard</a> , <a href="#">power-on linecard</a> , <a href="#">show running-config hardware connector</a>

# continue

Configures a route-map instance number that goes in a continue statement in a route-map instance.

**Syntax** `continue number`

`no continue number`

**Parameters** *number*

Route-map instance number. Range is from 1 through 4294967295.

**Modes** Route map configuration mode

**Related  
Commands** [route-map](#)

# copy

Copies configuration data.

**Syntax** `copy source_file destination_file`

**Parameters** `source_file`

The source file to be copied. Specify one of the following parameters:

**default-config**

The default configuration.

**global-running-config**

Global data of the running configuration. (Available in both fabric cluster mode and logical chassis cluster mode.)

**local-running-configuration**

Local data of the running configuration. (Available in fabric cluster mode only.)

**rbridge-running-configuration rbridge-id**

Running configuration of a specified RBridge. (Available in logical chassis cluster mode only.)

**running-config**

The running configuration.

**startup-config**

The startup configuration.

**flash://filename**

A file in the local flash memory.

**ftp://username:password@host\_ip\_address/path**

A file on a remote host. Transfer protocol is FTP.

**scp://username:password@host\_ip\_address/path**

A file on a remote host. Transfer protocol is SCP.

**sftp://username:password@host\_ip\_address/path**

A file on a remote host. Transfer protocol is SFTP.

**tftp://username:password@host\_ip\_address/path**

A file on a remote host. Transfer protocol is TFTP.

**usb://path**

A file on an attached USB device.

**destination\_file**

The destination file. Specify one of the following parameters:

**default-config**

The default configuration.

**global-running-config**

Global data of the running configuration. (Available in both fabric cluster mode and logical chassis cluster mode.)

**local-running-configuration**

Local data of the running configuration. (Available in fabric cluster mode only.)

**rbridge-running-configuration rbridge-id**

Running configuration of a specified RBridge. (Available in logical chassis cluster mode only.)

**running-config**

The running configuration.

**startup-config**

The startup configuration.

**flash://filename**

A file in the local flash memory.

**ftp://username:password@host\_ip\_address/path**

A file on a remote host. Transfer protocol is FTP.

**scp://username:password@host\_ip\_address/path**

A file on a remote host. Transfer protocol is SCP.

**sftp://username:password@host\_ip\_address/path**

A file on a remote host. Transfer protocol is SFTP.

**tftp://username:password@host\_ip\_address/path**

A file on a remote host. Transfer protocol is TFTP.

**usb://path**

A file on an attached USB device.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to back up and restore configuration files with various protocols. This command is supported only on the local switch. IPv4 and IPv6 addresses are supported.

**Examples** To save the running configuration to a file:

```
switch# copy running-config flash://myconfig
```

To overwrite the startup configuration with a locally saved configuration file:

```
switch# copy flash://myconfig running-config
```

To overwrite the startup configuration with a remotely archived configuration file:

```
switch# copy scp://user:password@10.10.10.10//myconfig startup-config
```

To overwrite the startup configuration with a configuration file saved on an attached USB device:

```
switch# copy usb://myconfig startup-config
```

**Related Commands** [copy default-config startup-config](#), [copy running-config startup-config](#), [delete](#), [dir](#), [rename](#), [show file](#), [show running-config](#), [show startup-config](#)

## copy default-config startup-config

Restores the startup configuration to the default configuration.

<b>Syntax</b>	<b>copy default-config startup-config</b>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>This command is supported only on the local switch.</p> <p>This command copies the default configuration to the current startup configuration. The copy operation effectively resets the startup configuration to factory defaults. It prompts for confirmation because it overwrites the saved startup configuration.</p> <p>In VCS Fabric mode, all interfaces remain online. The restored default configuration is applied with the exception of the following parameters:</p> <ul style="list-style-type: none"><li>• Interface management IP address</li><li>• Software feature licenses installed on the switch</li><li>• VCS mode configuration</li><li>• Virtual IP address</li></ul>
<b>Examples</b>	<p>To restore the default configuration:</p> <pre>switch# copy default-config startup-config</pre> <p>This operation will modify your startup configuration. Do you want to continue? [Y/N]: Y</p>
<b>Related Commands</b>	<a href="#">copy</a> , <a href="#">copy running-config startup-config</a> , <a href="#">delete</a> , <a href="#">dir</a> , <a href="#">rename</a> , <a href="#">show file</a> , <a href="#">show running-config</a> , <a href="#">show startup-config</a>

## copy running-config startup-config

Copies the running configuration to the startup configuration.

**Syntax** `copy running-config startup-config [ display-command ]`

**Parameters** **display-command**  
Displays the configuration commands during the copy operation

**Modes** Privileged EXEC mode

**Usage Guidelines** This command effectively saves the configuration changes you made to be applied after the switch reboots.

This command prompts for confirmation because it overwrites the startup configuration with the currently active running configuration. When the switch reboots and comes back up, the modified configuration is used.

This command is supported only on the local switch.

Use this command after you have made changes to the configuration.

The running configuration is nonpersistent across reboots.

**Examples** To save configuration changes:

```
switch# copy running-config startup-config
```

```
This operation will modify your startup configuration. Do you want to continue? [Y/  
N]: Y
```

**Related Commands** [copy](#), [copy default-config startup-config](#), [delete](#), [dir](#), [rename](#), [show file](#), [show running-config](#)

## copy snapshot (logical chassis cluster mode)

Uploads and downloads configuration snapshot files to and from an FTP or SCP server.

**Syntax** `copy snapshot rbridge-id rbridge-id snapshot-id snapshot-id ftp://directory_path`  
`copy snapshot rbridge-id rbridge-id snapshot-id snapshot-id scp://directory_path`  
`copy snapshot ftp:// directory_path rbridge-id rbridge-id snapshot-id snapshot-id`  
`copy snapshot scp:// directory_path rbridge-id rbridge-id snapshot-id snapshot-id`

**Parameters** **rbridge-id** *rbridge-id*  
Specifies the RBridge ID whose configuration snapshot has been captured.  
**snapshot-id** *snapshot-id*  
Specifies the name of the snapshot that has been captured.  
**directory\_path**  
Specifies the FTP or SCP directory path to which you are uploading the snapshot or from which you are downloading the snapshot.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command applies only to nodes that are members of a logical chassis cluster, not a fabric cluster.  
If a snapshot was taken on a node that had been disconnected from the cluster, the cluster will not have the snapshot. Therefore, you can use these commands to upload the snapshot from the disconnected RBridge ID to an ftp or scp server, then download it to an RBridge ID on the cluster.

---

### NOTE

The uploaded snapshot configuration file is stored as a tar file (of the form *rbridgeid-snapshotID*) on the FTP or SCP server.

---

**Examples** To upload a snapshot configuration file called node4configuration to an FTP server:

```
switch# copy snapshot rbridge-id 11 snapshot-id node4configuration ftp://  
backupdir_path
```

**Related Commands** [vcs config snapshot \(logical chassis cluster mode\)](#)



## copy support

Copies support data to a remote host or a USB device.

**Syntax** `copy support { ftp | scp | support-param | usb } user user_name group group_name password password host ip_address linecard linecard_string directory dir [ sub-directory dir ] [ timeout multiplier ] [ rbridge-id { rbridge-id | all } ]`

<b>Parameters</b>	<b>ftp   scp   usb</b>	Specifies the File Transfer Protocol (ftp), the Secure Copy Protocol (scp), or the USB directory.
	<b>support-param</b>	Enables specification of an optional subdirectory for uploading copy support files.
	<b>user user_name</b>	Specifies the user login name for the server.
	<b>group group_name</b>	Specifies the group login name for the server. As many as four group names, separated by commas, can be specified.
	<b>password password</b>	Specifies the account password.
	<b>host host_ip</b>	Specifies the host IP address in IPv4 or IPv6 format.
	<b>linecard linecard_string</b>	Specifies the line card to upload support data. Lx <x=1-4 on M4 platforms, x=1-8 on M8 platforms>.
	<b>directory dir</b>	<i>Specifies a fully qualified path</i> to the directory where the support data will be stored.
	<b>subdirectory dir</b>	<i>Specifies a fully qualified path</i> to the subdirectory where the support data will be stored. (Refer to the Usage Guidelines.)
	<b>timeout multiplier</b>	Specifies a timeout multiplier. Valid multipliers are 1 through 5. When a timeout multiplier is specified, the default timeout value for each module is multiplied by the specified timeout value.
	<b>rbridge-id</b>	Specifies an RBridge or all RBridges.
	<b>rbridge-id</b>	Specifies an RBridge ID.
	<b>all</b>	Specifies all RBridges.
	<b>all</b>	Specifies all switches in the fabric.
<b>Modes</b>	Privileged EXEC mode	
<b>Usage Guidelines</b>	The support data is saved in the following format:	
	<code>switchname-IPaddress-slotnumber-cputype-timestamp.modulename.txt.ss.gz</code>	
	Example: <code>sw0-10.123.10.5-S5cp-201204081630.OS.txt.ss.gz</code>	

Pagination is not supported with this command. Use the "more" parameter to display the output one page at a time.

The subdirectory is appended to the copy support main directory, which is stored as a Distributed Configuration Manager (DCM) configuration item. DCM supports the configuration management of multinode cluster applications and clustering for VCS.

**Examples** To save support data on an attached USB device:

```
switch# usb on
USB storage enabled
switch# copy support usb directory support
```

To copy support data to a subdirectory:

```
switch# copy support support-param sub-directory M8 timeout 3
```

**Related  
Commands**

[clear logging raslog](#), [copy support-interactive](#), [show support](#)

## copy support-interactive

Copies support data interactively.

**Syntax** `copy support-interactive`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is functionally equivalent to the **copy support** command.

Answering **Y** to the Brocade VCS Fabric support prompt indicates that your switch is in Brocade VCS Fabric mode. Support data will be copied from all nodes in the fabric.

The interactive command interface prompts you for the following information:

- Server Name or IP Address (IPv4 only)
- Protocol (FTP or SCP)
- User login name
- Password
- Directory
- Rbridge ID
- Module timeout multiplier

**Examples** To upload support data interactively:

```
switch# copy support-interactive

Save to USB device [y/n]: n
Server Name or IP Address: 10.30.33.131
Protocol (ftp, scp): ftp
User: admin
Password: *****
Directory: /home/admin/support
Enter 'all' for all nodes or specify the rbridgeId(s) of the node(s) [Default: Local
Node]: all
Module timeout multiplier[Range:1 to 5.Default:1]: 2
Rbridge-id 195: Saving support information for chassis:sw0, module:RAS...
(output truncated)
```

**Related Commands** [clear support](#), [show copy-support status](#)

## cos-mutation

Specifies the mutation-map to be used on the port.

<b>Syntax</b>	<b>cos-mutation</b> <i>map_name</i>
<b>Parameters</b>	<b>map_name</b> The user-defined map-name.
<b>Modes</b>	Policy-map configuration mode
<b>Usage Guidelines</b>	This command is allowed only for the Ingress direction. This command can only be configured in for the <b>class class-default</b> command. This command can lead to a possible contradiction if there are other user-defined classes used in the same policy-map which has a set CoS action configured. In this case, the defined CoS takes priority over the mutation map.
<b>Examples</b>	Typical command example:  <pre>switch(config)#policy-map mutation switch(config-policymap)#class class-default switch(config-policyclass)# cos-mutation plsmap</pre>
<b>Related Commands</b>	<a href="#">class</a> , <a href="#">policy-map</a>

## counter reliability

Sets and displays the reliability counter for the Access Gateway N\_Port Monitoring feature.

**Syntax** `counter reliability value`

**Command Default** 25 SCNs per 5-minute period.

**Parameters** *value*

A value from 10 through 100 static change notifications (SCNs) per 5-minute period.

**Modes** Access Gateway (AG) configuration

**Usage Guidelines** Use this command while in Access Gateway (AG) mode for a specific RBridge ID. Entering the counter reliability command without a value displays the current counter setting. You can set a value from 10 through 100 SCNs per 5-minute period.

The command sets and displays the reliability count of online and offline SCNs counted during a 5-minute period before the link between an N\_Port on a VDX switch in Access mode and an F\_Port on an FC fabric is considered unreliable.

**Examples** Set the reliability counter value.

```
sw0(config-rbridge-id-3-ag)# counter reliability 50
```

Displays the current reliability counter value.

```
sw0(config-rbridge-id-3-ag)# counter reliability
```

# dampening

Sets dampening parameters for the route in BGP address-family mode.

<b>Syntax</b>	<b>dampening</b> { <i>half-life reuse suppressmax-suppress-time</i>   <b>route-map</b> <i>route-map</i> }
	<b>no dampening</b>
<b>Parameters</b>	<p><b>half-life</b> Number of minutes after which the route penalty becomes half its value. Range is from 1 through 45. Default is 15.</p> <p><b>reuse</b> Minimum penalty below which the route becomes usable again. Range is from 1 through 20000. Default is 750.</p> <p><b>suppress</b> Maximum penalty above which the route is suppressed by the device. Range is from 1 through 20000. Default is 2000.</p> <p><b>max-suppress-time</b> Maximum number of minutes a route can be suppressed by the device.</p> <p><b>route-map</b> Enables selection of dampening values established in a route map by means of the <b>route-map</b> command.</p> <p><b>route-map</b> Name of the configured route map.</p>
<b>Modes</b>	BGP address-family IPv4 unicast configuration mode BGP address-family IPv6 unicast configuration mode
<b>Usage Guidelines</b>	<p>Use <b>dampening</b> without operands to set default values for all dampening parameters.</p> <p>To use the dampening values established in a route map, configure the route map first, and then enter <b>route-map</b> followed by the name of the configured route map.</p> <p>A full range of dampening values (<i>half-life, reuse, suppress, max-suppress-time</i>) can also be set by means of the <b>set as-path prepend</b> command.</p> <p>Use the <b>no</b> form of this command to disable dampening.</p>
<b>Examples</b>	<p>To enable default dampening as an address-family function:</p> <pre>device(config)# rbridge-id 10 device(config-rbridge-id-10)# router bgp device(config-bgp-router)# address-family ipv4 unicast device(config-bgp-ipv4u)# dampening</pre> <p>To change the all dampening values as an IPv6 address-family function:</p> <pre>device(config)# rbridge-id 10 device(config-rbridge-id-10)# router bgp device(config-bgp-router)# address-family ipv6 unicast device(config-bgp-ipv6u)# dampening 20 200 2500 40</pre>

To apply the dampening half-life established in a route map, configure the route map and then use the `set dampening` command:

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# route-map myroutemap permit 1
device(config-route-map-myroutemap/permit/1)# set dampening 20
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.

**Related  
Commands**

[route-map](#), [set as-path](#), [set dampening](#)

## database-overflow-interval (OSPF)

Configures frequency for monitoring database overflow.

**Syntax** `database-overflow-interval interval`

`no database-overflow-interval`

**Command Default** 0 seconds. If the router enters OverflowState, you must reboot before the router leaves this state.

**Parameters** *interval*

Time interval at which the device checks to see if the overflow condition has been eliminated. Valid values range from 0 through 86400 seconds.

**Modes** OSPF VRF router configuration mode

**Usage Guidelines** This command specifies how long after a router that has entered the OverflowState before it can resume normal operation of external LSAs. However, if the external link state database (LSDB) is still full, the router lapses back into OverflowState.

When the maximum size of the LSDB is reached (this is a configurable value in the *external-lsdb-limit* CLI), the router enters OverflowState. In this state, the router flushes all non-default AS-external-LSAs that the router had originated. The router also stops originating any non-default external LSAs. Non-default external LSAs are still accepted if there is space in the database after flushing. If no space exists, the Non-default external LSAs are dropped and not acknowledged.

For more information, refer to RFC 1765.

Enter `no database-overflow-interval` to disable the overflow interval configuration.

**Examples** To configure a database-overflow interval of 60 seconds:

```
switch# configure
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)# router ospf
switch(config-router-ospf-vrf-default-vrf)# database-overflow-interval 60
```

**Related Commands** [external-lsdb-limit \(OSPF\)](#)



## database-overflow-interval (OSPFv3)

Configures frequency for monitoring database overflow.

**Syntax** `database-overflow-interval interval`

`no database-overflow-interval`

**Command Default** 10 seconds. If the router enters OverflowState, you must reboot before the router leaves this state.

**Parameters** *interval*

Time interval at which the device checks to see if the overflow condition has been eliminated. Valid values range from 0 through 86400 seconds (24 hours).

**Modes** OSPFv3 VRF router configuration mode

**Usage Guidelines** This command specifies how long after a router that has entered the OverflowState before it can resume normal operation of external LSAs. However, if the external link state database (LSDB) is still full, the router lapses back into OverflowState.

When the maximum size of the LSDB is reached (this is a configurable value in the *external-lsdb-limit* CLI), the router enters OverflowState. In this state, the router flushes all non-default AS-external-LSAs that the router had originated. The router also stops originating any non-default external LSAs. Non-default external LSAs are still accepted if there is space in the database after flushing. If no space exists, the Non-default external LSAs are dropped and not acknowledged.

Enter **no database-overflow-interval** to disable the overflow interval configuration.

**Examples** To configure a database-overflow interval of 120 seconds:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ipv6 router ospf
device(config-ipv6-router-ospf-vrf-default-vrf)# database-overflow-interval 120
```

### History

Release version	Command history
5.0.0	This command was introduced.

### Related Commands

[external-lsdb-limit \(OSPFv3\)](#)

## debug access-list-log buffer

Configures ACL buffer characteristics.

**Syntax** Configure the ACL buffer:

**debug access-list-log buffer { circular | linear } packet-count *count\_value***

Clear the ACL buffer:

**debug access-list-log buffer clear**

**Parameters** **circular | linear**

Specifies the buffer type.

**packet-count *count\_value***

Specifies a value from 64 through 2056.

**clear**

Clears the buffer contents.

**Modes** Privileged EXEC mode

**Related Commands** [access-list](#), [seq \(IPv4 extended ACLs\)](#), [seq \(IPv4 standard ACLs\)](#), [seq \(IPv6 extended ACLs\)](#), [seq \(IPv6 standard ACLs\)](#), [seq \(MAC extended ACLs\)](#), [seq \(MAC standard ACLs\)](#), [show access-list-log buffer config](#)

## debug dhcp packet buffer clear

Clears buffer content from DHCP packet capture.

**Syntax** `debug dhcp packet buffer clear [ vrf vrf-name ]`

**Parameters** `vrf vrf-name`

VRF name mapped to the VRF ID for which the buffer will be cleared. If this operand is not specified, the buffer for the default VRF ID is cleared.

**Modes** Privileged EXEC mode

**Usage Guidelines** Clears buffer content created from use of the **debug dhcp packet buffer interface** command to enable DHCP packet capture. If the DHCP packet capture is currently enabled, the buffer may fill again.

**Examples** The following example clears the buffer content of DHCP packets for the VRF titled "blue".

```
switch# debug dhcp packet buffer clear blue
```

**Related Commands** [debug dhcp packet buffer interface](#)

## debug dhcp packet buffer

Configures a buffer to capture DHCP packets.

<b>Syntax</b>	<b>debug dhcp packet buffer</b> [ <b>circular</b>   <b>linear</b> ] [ <b>packet-count</b> 64-2056 ] [ <b>vrf</b> <i>vrf-name</i> ] [ <b>interface</b> <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i> ]
<b>Command Default</b>	The buffer wraps around to overwrite earlier captures (circular).
<b>Parameters</b>	<p><b>circular</b></p> <p><b>linear</b> Buffer wraps around to overwrite earlier captures.</p> <p><b>clear</b> Buffer stops capture when the packet-count value is reached.</p> <p><b>all</b> Clears the packet buffer.</p> <p><b>&lt;N&gt;gigabitethernet</b> Captures DHCP packets on all interfaces.</p> <p>Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	This command configures the capturing buffer behavior by allowing captures to wrap and overwrite earlier captures or stop capturing when a packet-count limit is reached. The current buffer content is cleared when the configuration changes.
<b>Examples</b>	The following example configures a buffer to capture 510 maximum packets in a circular fashion. <pre>switch# debug dhcp packet buffer circular packet-count 510</pre>
<b>Related Commands</b>	<a href="#">debug dhcp packet buffer interface</a> , <a href="#">debug dhcp packet buffer clear</a> , <a href="#">show debug dhcp packet buffer</a>

# debug dhcp packet buffer interface

Enables and disables DHCP packet capture on a specific interface.

**Syntax** **debug dhcp packet buffer interface** [ <N>**gigabitethernet** *rbridge-id/slot/port* ] [ **rx** | **tx** ]  
**no debug dhcp packet buffer interface** [ <N>**gigabitethernet** *rbridge-id/slot/port* [ **rx** | **tx** ]  
**debug dhcp packet buffer all**  
**no debug dhcp packet buffer all**

**Parameters** **all**  
 Enables DHCP packet capture on all switch interfaces.

**<N>gigabitethernet**  
 Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**  
 Specifies an RBridge ID.

**slot**  
 Specifies a valid slot number.

**port**  
 Specifies a valid port number.

**rx | tx**  
 Specifies whether to capture transmitted or received packets. If not specified, both are captured.

**Modes** Privileged EXEC mode

**Usage Guidelines** The **all** operand replaces the *interface* operand.

Use the **no** form of this command to disable DHCP packet capture on a specific switch interface when used with **debug dhcp packet buffer interface** [*interface specifications*]

Use the **no** form of this command to disable the DHCP packet capture on all switch interfaces when used with **debug dhcp packet buffer all** .

You can specify a VLAN or physical port for capturing packets. If an interface is not specified, packets are captured on all interfaces.

**Examples** The following command enables DHCP packet capture for transmitting data on forty-gigabit Ethernet interface 1/0/1.

```
switch# debug dhcp packet buffer interface te 1/0/1 tx
```

The following command enables DHCP packet capture for receiving data on 10-gigabit Ethernet interface 1/0/1.

```
switch# no debug dhcp packet buffer interface te 1/0/1 rx
```

The following command enables DHCP packet capture on all switch interfaces of switch 0.

```
switch# debug dhcp packet buffer all
```

The following command disables DHCP packet capture on all switch interfaces of switch 0.

```
switch# no debug dhcp packet buffer all
```

**Related Commands** [debug dhcp packet buffer clear](#), [debug dhcp packet buffer](#), [debug fcoe show swcfg](#), [show debug dhcp packet](#)

## debug fcoe show swcfg

Displays information related to FCoE classified VLAN configuration in a Virtual Fabrics context, as well as other parameters.

**Syntax** `debug fcoe show swcfg`

**Modes** Privileged EXEC mode

**Examples** The following example shows typical output of this command.

```
switch# debug fcoe show swcfg
sw# vlan ivid      ctag      Dom  fcmap      Pri Intvl Tout
=====
0   1002 0x3ea      0x0       10  0x0efc00  3   8000  0
0   0     0x0       0x0       10  0x000000  0    0    0
0   0     0x0       0x0       10  0x000000  0    0    0
0   0     0x0       0x0       10  0x000000  0    0    0
0   0     0x0       0x0       10  0x000000  0    0    0
0   0     0x0       0x0       10  0x000000  0    0    0
0   0     0x0       0x0       10  0x000000  0    0    0
0   0     0x0       0x0       10  0x000000  0    0    0
```

## debug ip

Enables debugging for the IGMP and ICMP traffic on the switch.

<b>Syntax</b>	<b>debug ip packet</b> [ <b>interface</b> <i>interface-type interface-number</i> [ <b>vlan</b> <i>vlan_id</i> ]   <b>count</b> { <b>tx</b>   <b>rx</b> }   <b>icmp</b> [ <b>interface</b> <i>interface-type interface-number</i> ]   <b>count</b> <i>value</i>   <b>tx</b>   <b>rx</b>   <b>igmp</b> [ <b>interface</b> <i>interface-type interface-number</i> ]   <b>all</b>   <b>group</b> <i>multicast-grp-address</i> ]
	<b>no debug ip packet</b>
<b>Parameters</b>	<p><b>packet</b> Enables IP packet debugging.</p> <p><b>interface</b> Displays the IP traffic for the specified interface only.</p> <p><b><i>interface-type</i></b> Network interface type (external Ethernet interface, port-channel, or VLAN).</p> <p><b><i>interface-number</i></b> Layer 2 or Layer 3 interface number.</p> <p><b>vlan <i>vlan_id</i></b> Specifies a VLAN.</p> <p><b>count <i>value</i></b> Stops display after display count packets. Valid values range from 1 through 32256.</p> <p><b>tx</b> Counts only transmitted packets.</p> <p><b>rx</b> Counts only received packets.</p> <p><b>icmp</b> Displays the ICMP packets.</p> <p><b>igmp</b> Displays the IGMP packets.</p> <p><b>all</b> Enables all IGMP debugging.</p> <p><b>group</b> Enables IGMP debugging for multicast group.</p> <p><b><i>multicast-grp-address</i></b> Multicast group address.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	When this feature is enabled, all IGMP or ICMP packets received or transmitted are displayed. Debugging can be enabled globally, per interface, or on a multicast group. Use the <b>no</b> form of this command to disable debugging.



## debug ip bgp

Displays information related to the processing of BGP4, with a variety of options.

<b>Syntax</b>	<b>debug ip bgp</b> [ <b>cli</b>   <b>dampening</b>   <b>events</b>   <b>general</b>   <b>graceful-restart</b>   <b>ip-prefix</b> <i>ip-addr/mask-len</i>   <b>ip-prefix-list</b> <i>name</i>   <b>keepalives</b>   <b>neighbor</b>   <b>route-map</b> <b>route-selection</b>   <b>traces</b>   <b>updates</b> [ <b>rx</b>   <b>tx</b> ] ]
	<b>no debug ip bgp</b>
<b>Parameters</b>	<b>address-family</b>
	<b>cli</b> Displays information about address-family mode.
	<b>dampening</b> Displays information about BGP CLI
	<b>events</b> Displays BGP4 dampening.
	<b>general</b> Displays all BGP4 events.
	<b>graceful-restart</b> Displays BGP4 common events.
	<b>ip-prefix</b> Displays BGP graceful restart events.
	<b>ip-prefix</b> Displays information filtered by IP prefix.
	<b>ip-addr</b> IPv4 address in dotted-decimal notation.
	<b>mask-len</b> IPv4 mask length in CIDR notation.
	<b>ip-prefix-list</b> Displays information filtered by IP prefix list.
	<b>name</b> Name of IP prefix list.
	<b>keepalives</b> Displays BGP4 keepalives.
	<b>neighbor</b> Displays BGP information for specified neighbor router.
	<b>packet</b> Displays BGP4 packets.
	<b>route-map</b> Displays information about BGP route map tags.
	<b>route-selection</b> Displays BGP4 route selection.
	<b>traces</b> Displays BGP traces.
	<b>updates</b> Displays BGP4 updates.
	<b>rx</b> Displays BGP4 received updates.
	<b>tx</b> Displays BGP4 transmitted updates.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use the **no** form of this command to disable debugging.

**Examples** To view all BGP4 events:

```
switch# debug ip bgp events
```

To view all BGP4 Graceful restart events:

```
switch# debug ip bgp graceful-restart
```

## debug ip bgp address-family ipv4 unicast

Displays information related to the processing of IPv4 address-family support in BGP4.

**Syntax** **debug ip bgp address-family ipv4 unicast**

**no debug ip bgp address-family ipv4 unicast**

**Modes** Privileged EXEC mode

**Usage Guidelines** Use the **no** form of this command to disable debugging.

**Examples** Example of typical command.

```
switch# debug ip bgp address-family ipv4 unicast
```

## debug ip bgp neighbor

Displays information related to the processing of BGP4 for a specific neighbor.

**Syntax** `debug ip bgp neighbor ip-addr`

`no debug ip bgp neighbor ip-addr`

**Parameters** *ip-addr*

IPv4 address in dotted-decimal notation.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use the **no** form of this command to disable debugging.

**Examples** Typical command structure.

```
switch# debug ip bgp neighbor 10.11.12.13
```

## debug ip fabric-virtual-gateway

Enables debugging of the Fabric-Virtual-Gateway protocol.

**Syntax** `debug ip fabric-virtual-gateway { all | fabric | nsm | cli | garp | interface ve vlan-id | ipv4 | ipv6 }`  
`no debug ip fabric-virtual-gateway {all | fabric | nsm | cli | garp | interface ve vlan-id | ipv4 | ipv6 }`

**Command Default** None

**Parameters** **all**

Debugs all that follows the debug option.

**fabric**

Debugs fabric related events like fabric up or down.

**nsm**

Debug NSM related events line interface up or down or add or delete.

**cli**

Debugs CLI related executions or arguments.

**garp**

Debugs sent gratuitous ARP.

**interface ve *vlan-id***

Debugs session level events specified by VLAN ID.

**ipv4**

Debugs all IPv4 session events.

**ipv6**

Debugs all IPv6 session events.

**Modes** Privileged EXEC mode

**Usage Guidelines** Enter the **no** form of the command to disable debugging for the Fabric-Virtual-Gateway protocol.

**Examples** The following example enables debugging for all Fabric-Virtual-Gateway protocols.

```
debug ip fabric-virtual-gateway all
```

The following example enables debugging of the fabric for the Fabric-Virtual-Gateway protocol.

```
debug ip fabric-virtual-gateway fabric
```

The following example enables debugging of interface VE 2000 for the Fabric-Virtual-Gateway protocol.

```
debug ip fabric-virtual-gateway interface ve 2000
```

**History**

Release version	Command history
5.0.1	This command was introduced.

## debug ip igmp

Enables or disables debugging for IGMP information.

<b>Syntax</b>	<b>debug ip igmp</b> { <b>all</b>   <b>group</b> <i>A.B.C.D</i>   <b>interface</b> { <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>port-channel</b> <i>number</i>   <b>vlan</b> <i>vlan_id</i> } }
	<b>no debug ip igmp</b>
<b>Parameters</b>	<p><b>all</b> Displays all values.</p> <p><b>group</b> <i>A.B.C.D</i> Specifies the group address, as a subnet number in dotted decimal format (for example, 10.0.0.1), as the allowable range of addresses included in the multicast group.</p> <p><b>interface</b> Specifies the interface to be monitored.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>port-channel</b> <i>number</i> Specifies the interface is a port-channel. The number of available channels range from 1 through 6144.</p> <p><b>vlan</b> <i>vlan_id</i> Specifies which VLAN interface to display the snooping configuration related information. Refer to the Usage Guidelines.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>When debugging is enabled all of the IGMP packets received and sent, and IGMP-host related events are displayed.</p> <p>Use the <b>no</b> form of this command to disable debugging.</p>

## debug ip ospf

Enables debugging for the IP Open Shortest Path First (OSPF) protocol.

**Syntax** `debug ip ospf { adj | all-vrfs | dev | error | events | flood | log-debug-message | log-empty-lsa | ls-id A.B.C.D | lsa-generation | max-metric | neighbor A.B.C.D | packet | retransmission | route A.B.C.D | spf | vrf name }`

**no debug ip ospf**

**Command Default** IP OPSF debugging is disabled.

**Parameters**

- adj** Adjacency related debugs.
- all-vrfs** Information for all VRFs instances in a cluster.
- dev** Developer debug options.
- error** Displays possible errors encountered during time.
- events** Events-related debugs.
- flood** Flooding-related debugs.
- log-debug-message** Debugs message logging.
- log-empty-lsa** Empties LSA logging.
- ls-id A.B.C.D** Link state ID (LSID) debugging for the link-state ID that you specify.
- lsa-generation** LSA generation-related debugging.
- max-metric** Stub Router Advertisement.
- neighbor A.B.C.D** Neighbor debugging for the neighbor that you specify.
- packet** Packet debugs.
- retransmission** Retransmission events.
- route A.B.C.D** Route debugs for the router that you specify.
- spf** SPF trace.
- vrf name** Debug information for VRF.

**Modes** Privileged EXEC mode

**Usage Guidelines** Enter `no debug ip ospf` to disable IP OPSF debugging.

**Examples** To enable adjacency-related debugs:

```
switch# debug ip ospf adj
```



## debug ip pim

Enables debugging for IP Protocol Independent Multicast.

**Syntax** `debug ip pim { add-del-oif | bootstrap | group | join-prune | nbr-change | packets | parent | regproc | route-change | rp | source | state | all }`

`no debug ip pim all`

**Command Default** All flags are disabled.

**Parameters**

- add-del-oif**
- bootstrap** Controls the OIF change flag.
- group** Controls the bootstrap processing flag.
- join-prune** Controls the processing for a group flag.
- nbr-change** Controls the Join/Prune processing flag.
- packets** Controls the neighbor changes flag.
- parent** Controls the packet processing flag.
- regproc** Controls the parent change processing flag.
- route-change** Controls the register processing flag.
- rp** Controls the route changes flag.
- source** Controls the Rendezvous Point (RP) processing flag.
- state** Controls the processing for a source flag.
- all** Controls the state processing flag.
- all** Controls all of the states.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use the `no debug ip pim all` command to disable debugging.

## debug ip rtm

Enables debugging for IP RTM.

**Syntax** `debug ip rtm { A.B.C.D | all | counters { clear | show } dump | errors | fib-comm | nexthop | port | vrf }`

**Command Default** IP RTM debugging is disabled.

**Parameters** *A.B.C.D*

<b>all</b>	Debugs the route specified by this IP address.
<b>counters</b>	Enables all debugs.
<b>clear</b>	Enables debug counters.
<b>show</b>	Clears debug counters.
<b>dump</b>	Shows debug counters.
<b>errors</b>	Shows database dump.
<b>fib-comm</b>	Enables internal error debugs.
<b>nexthop</b>	Debugs communications between the forwarding information base and the routing table manager.
<b>port</b>	Enables next-hop debugs.
<b>vrf</b>	Enables port database debugs.
	Enables VRF debugs.

**Modes** Privileged EXEC mode

**Examples** To debug the route specified by the IP address 192.145.12.1:

```
switch# debug ip rtm 192.145.12.1
```

To show a database dump:

```
switch# debug ip rtm dump

Interface      IP-Address    OK?  Method Status    Protocol VRF
Gi 190/0/1     0xbe2a640c    YES  manual up      up      default-vrf
Ve 128         0xa52a800c    YES  manual admin/down up      default-vrf
Ve 1001        0x0a010101    YES  manual admin/down up      default-vrf
Ve 1001        0x65010101    YES  manual admin/down up      default-vrf
Lo 1           0xa02a0c0c    YES  manual up      up      default-vrf
mgmt 1         0x0a14eabe    YES  manual up      up      default-vrf
IP Static Routing Table - 1 entries:
addr: 0x1021f4b8, top 0x1021f590, count 1, default 0 ffffffff
    Type 2
Route_pool:
pool: 101e3bd0, unit_size: 32, initial_number:128, upper_limit:200000000
    total_number:128, allocated_number:1, alloc_failure 0
    flag: 0, pool_index:1, avail_data:102207b8
Route Entry Pool:
pool: 101e3c80, unit_size: 432, initial_number:128, upper_limit:200000000
    total_number:128, allocated_number:1, alloc_failure 0
    flag: 0, pool_index:1, avail_data:10221950
NextHop Settings
Update: no, Update-always no, Update-Timer 0 Check-Nexthops no
Recur: yes, Levels 3, Default-enable no
vrf-count 0, vrf-resolved yes
Protocols: < connected>
Nexthops List
 [7] 0xa14e801 hash 7 paths 1 upd last-update-time 0 -> 0xa14e801 mgmt 1
NextHop List End
```

## debug ip vrf

Displays information related to VRF.

**Syntax** `debug ip vrf ip-addr`

`no debug ip vrf`

**Parameters** *ip-addr*

IPv4 address in dotted-decimal notation.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use the **no** form of this command to disable debugging.

**Examples** Typical command structure.

```
switch# debug ip vrf
```

# debug ipv6 dhcpv6 packet buffer

Enables IPv6 DHCPv6 packet capture on an interface or all interfaces.

**Syntax** `debug ipv6 dhcpv6 packet buffer { all | [ interface [<N> gigabitethernet rbridge-id/slot/port] ve vlan_id ] [ rx | tx ] }`

`no debug ipv6 dhcpv6 packet buffer { all | interface [<N> gigabitethernet rbridge-id/slot/port] ve vlan_id ] [ rx | tx ] }`

**Command Default** None

**Parameters** **all**

Specifies all buffer packets.

**<N> gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**rx**

Specifies the receive direction.

**tx**

Specifies the receive direction.

**vevlan\_id**

Specifies a virtual Ethernet interface.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use the **no** form of this command with the appropriate keywords to disable packet capture.

**Examples** To enable ICMPv6 packet capture on all interfaces:

```
switch# debug ipv6 dhcpv6 packet buffer all
```

To disable Neighbor Discovery packet capture on an interface in the transmit direction:

```
switch# no debug ipv6 dhcpv6 packet buffer int te 54/0/22 tx
```

**History**

Release version	Command history
5.0.1	This command was introduced.

## debug ipv6 mld

Displays information related to IPv6 Multicast Listener Discovery (MLD), with a variety of options.

**Syntax** `debug ipv6 mld { all | errors } | group | interface [ vlanvlan_id ] I2-port [ <N> gigabitethernet | port-channel ] | packet [ query | report ] | rx | tx }`

`no debug ipv6 mld { all | errors } | group | interface [ vlanvlan_id ] I2-port [ <N> gigabitethernet | port-channel ] | packet [ query | report ] | rx | tx }`

**Command Default** None

**Parameters** **all**

Displays all information.

**errors**

Displays error conditions.

**group**

Displays information for a match group.

**interface**

Displays information for a specified interface.

**vlanvlan\_id**

Specifies a VLAN. Range is from 1 through 4090 if Virtual Fabrics is disabled, and from 1 through 8191 if Virtual Fabrics is enabled.

**I2-port**

Displays information for a physical or LAG port.

**N gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port).

**port-channel**

Specifies a port-channel interface.

**packet**

Displays information related to MLD packets.

**query**

Displays information for MLD query packets.

**report**

Displays information for MLD report packets.

**rx**

Displays information for incoming MLD packets.

**tx**

Displays information for outgoing MLD packets.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use the **no** form of this command to disable debugging.

**Examples** To view all IPv6 MLD information:

```
switch# debug ipv6 mld all
```

History	Release version	Command history
	5.0.0	This command was introduced.

## debug ipv6 nd

Displays information related to IPv6 Neighbor Discovery (ND)

**Syntax**    **debug ipv6 nd**

**no debug ipv6 nd**

**Command Default**    None

**Modes**            Privileged EXEC mode

**Usage Guidelines**    Use the **no** form of this command to disable debugging.

**Examples**            To display information related to IPv6 ND:

```
switch# debug ipv6 nd
```

**History**

---

Release version	Command history
-----------------	-----------------

5.0.0	This command was introduced.
-------	------------------------------

---



## debug ipv6 ospf

Enables debugging for the IPv6 Open Shortest Path First (OSPF) protocol.

**Syntax** `debug ipv6 ospf { ism | ism-events | ism-status | lsa | lsa-flooding | lsa-generation | lsa-install | lsa-inter-area | lsa-maxage | lsa-refresh | nsm | nsm-events | nsm-status | packet | packet-dd | packet-hello | packet-lsa-ack | packet-lsa-req | packet-lsa-update | route | route-calc-external | route-calc-inter-area | route-calc-intra-area | route-calc-spf | route-calc-transit | route-install | virtual-link [ all-vrfs | rbridge-id { rbridge-id } | vrf vrfname ] }`

`debug ipv6 ospf { match-prefix { ipv6-addr | all [ all-vrfs | rbridge-id { rbridge-id } | vrf vrfname ] }`

`no debug ip ospf`

**Command Default** IPv6 OPSF debugging is disabled.

<b>Parameters</b>	<b>ism</b>	Interface State Machine.
	<b>ism-events</b>	Interface State Machine events.
	<b>ism-status</b>	Interface State Machine status.
	<b>lsa</b>	Link State Advertisements.
	<b>lsa-flooding</b>	Link State Advertisements flooding.
	<b>lsa-generation</b>	Link State Advertisements generation.
	<b>lsa-install</b>	Link State Advertisements install.
	<b>lsa-inter-area</b>	Inter-area Link State Advertisements.
	<b>lsa-maxage</b>	Link State Advertisements max aging.
	<b>lsa-refresh</b>	Link State Advertisements refreshing.
	<b>nsm</b>	Neighbor state machine.
	<b>nsm-events</b>	Neighbor state machine events.
	<b>nsm-status</b>	Neighbor state machine status.
	<b>packet</b>	OSPFv3 packets.
	<b>packet-dd</b>	OSPFv3 data description packets.
	<b>packet-hello</b>	OSPFv3 hello packets.
	<b>packet-lsa-ack</b>	OSPFv3 LSA ack packets.
	<b>packet-lsa-req</b>	

OSPFv3 LSA Request packets.  
**packet-lsa-update**  
 OSPFv3 LSA Update packets.  
**route**  
 OSPFv3 routes.  
**route-calc-external**  
 OSPFv3 external route calculation.  
**route-calc-inter-area**  
 OSPFv3 inter area route calculation.  
**route-calc-intra-area**  
 OSPFv3 intra area route calculation.  
**route-calc-spf**  
 OSPFv3 spf route calculation.  
**route-calc-transit**  
 OSPFv3 transit route calculation.  
**route-install**  
 OSPFv3 route install.  
**virtual-link**  
 OSPFv3 virtual links.  
**all-vrfs**  
 Information for all VRFs instances in a cluster.  
**vrf name**  
 Debug information for VRF.  
**rbridge-id rbridge-id**  
 The physical, loopback, and SVI interfaces specific to the selected RBridge.  
**match-prefix**  
 Enables match prefix in debug output.

**Modes** Privileged EXEC mode

**Usage Guidelines** Enter **no debug ip ospf** to disable IP OPSF debugging.

**Examples** To enable OSPFv3 graceful restart helper debugs:

```
device# debug ipv6 ospf gr-helper
OSPFv3: gr-helper debugging is on
```

History	Release version	Command history
	5.0.0	This command was introduced.

# debug ipv6 packet buffer

Enables IPv6 packet capture on an interface or all interfaces.

**Syntax** `debug ipv6 packet buffer { all | circular packet-count count | clear | interface [<N> gigabitethernet rbridge-id/slot/port | ve vlan_id] [ rx | tx ] | linear packet-count count }`

`no debug ipv6 packet buffer { all | circular packet-count count | clear | interface [<N> gigabitethernet rbridge-id/slot/port | ve vlan_id] [ rx | tx ] | linear packet-count count }`

**Command Default** None

**Parameters** **all**

Specifies all buffer packets.

**circular packet-count**

Specifies the number of packets in a circular buffer. Range is from 64 through 2056.

**clear**

Clears contents of the buffer.

**<N> gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace *<N>***gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**rx**

Specifies the receive direction.

**tx**

Specifies the receive direction.

**vevlan\_id**

Specifies a virtual Ethernet interface.

**linear packet-count**

Specifies the number of packets in a linear buffer. Range is from 64 through 2056.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use the **no** form of this command with the appropriate keywords to disable packet capture.

**Examples** To enable ICMPv6 packet capture on all interfaces:

```
switch# debug ipv6 packet buffer all
```

To disable Neighbor Discovery packet capture on an interface in the transmit direction:

```
switch# no debug ipv6 packet buffer int te 54/0/22 tx
```

History	Release version	Command history
	5.0.0	This command was introduced.

# debug lacp

Enables or disables debugging for the Link Aggregation Control Protocol (LACP).

**Syntax** `debug lacp { all | cli | event | ha | pdu [ rx { all | interface <N>gigabitethernet rbridge-id/slot/port | tx { all | sync | timer | trace level number }`

`no debug lacp`

**Command Default** LACP debugging is disabled.

**Parameters**

**all**

Turns on all debugging.

**cli**

Turns on command line interface debugging.

**event**

Turns on event debugging.

**ha**

Echo HA events to the console.

**pdu**

Echo PDU content to the console.

**rx all**

Turns on debugging for received LACP packets on all interfaces.

**rx interface**

Turns on debugging for received LACP packets on the specified interface.

**interface**

Specifies the interface to be monitored.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>gigabitethernet with the desired operand (for example, tengigabitethernet specifies a 10-Gb Ethernet port). The use of gigabitethernet without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**tx all**

Turns on debugging for transmitted LACP packets on all interfaces.

**tx interface**

Turns on debugging for transmitted LACP packets on the specified interface.

**sync**

Echo synchronization to consoles.

**timer**

Echo timer expiration to console.

**trace level number**

Specifies the trace level number. Valid values range from 1 through 7.

**Modes** Privileged EXEC mode

**Usage Guidelines** Enter **terminal monitor** to display debugging outputs on a particular cmsh session.  
Enter **no debug lacp** to disable LACP debugging.

**Examples** To enable debugging of LACP PDUs for transmitted and received packets on all interfaces:

```
switch# debug lacp pdu tx all  
  
switch# debug lacp pdu rx all  
switch# show debug lacp  
LACP rx debugging is on  
LACP tx debugging is on
```

**Related  
Commands** [show debug lacp](#)

# debug lldp dump

Dumps debugging information for the Link Layer Discovery Protocol (LLDP) to the console.

**Syntax** `debug lldp dump { all | [ <N> gigabitethernet rbridge-id/slot/port ] [ both ] } [ detail [ both | rx | tx ] }`

**Command Default** LLDP debugging is disabled.

**Parameters** **all**

Dumps all information to the console.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**both**

Turns on debugging for both transmit and receive packets.

**detail**

Turns on debugging with detailed information.

**both**

Turns on detailed debugging for both transmit and receive packets.

**rx**

Turns on detailed debugging for only received LLDP packets.

**tx**

Turns on detailed debugging for only transmitted LLDP packets.

**Modes** Privileged EXEC mode

**Examples** Typical use of this command.

```
switch# debug lldp dump all
LLDP Interface Debug Information for Fo 2/0/49
Admin Status:  RX_TX
Associated Profile:
Link-level FCoE Priority: 0x08 (Configured: No)
Link-level iSCSI Priority: 0x10 (Configured: No)
Link Properties:
  CEE Incapable
  FCoE LLS not Ready
  FCF-Forward Disabled
Sending TLVs:
  CHASSIS_ID: 0x50e1a173ff1 (MAC)
  PORT_ID: Fo 2/0/49 (IF Name)
  TTL: Hold (4) x Interval (30)
  SYSTEM_NAME
  IEEE_DCBX
  DCBX_FCOE_APP
  DCBX_FCOE_LOGICAL_LINK
  Configured FCoE App
  Configured FCoE Link
  DCBX_CTRL
<truncated>
```

Commands A through E

**Related  
Commands**    [show debug lldp](#)



# debug lldp packet

Enables or disables debugging for the Link Layer Discovery Protocol (LLDP).

**Syntax** `debug lldp packet { all | [ <N>gigabitethernet rbridge-id/slot/port ] [ both ] } [ detail [ both | rx | tx ] }`  
`no debug lldp packet { all | interface <N>gigabitethernet rbridge-id/slot/port }`

**Command Default** LLDP debugging is disabled.

**Parameters** **all**

Turns on LLDP packet debugging on all interfaces.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**both**

Turns on debugging for both transmit and receive packets.

**detail**

Turns on debugging with detailed information.

**both**

Turns on detailed debugging for both transmit and receive packets.

**rx**

Turns on detailed debugging for only received LLDP packets.

**tx**

Turns on detailed debugging for only transmitted LLDP packets.

**Modes** Privileged EXEC mode

**Usage Guidelines** Enter **terminal monitor** to display debugging outputs on a particular cmsh session.  
 Enter **no debug lldp packet** to disable LLDP debugging.

**Examples** To enable debugging of LLDP for both received and transmitted packets on the 10-gigabit Ethernet interface 0/1:

```
switch# debug lldp packet interface tengigabitethernet 0/1 both
switch# show debug lldp
LLDP debugging status:
Interface te0/1      : Transmit Receive
```

**Related Commands** [show debug lldp](#)

## debug show qos drop-reason

Displays the QoS drop reason for one or all interfaces.

<b>Syntax</b>	<b>debug show qos drop-reason interface</b> { [ <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i> ] [ <b>all</b> ] }
<b>Parameters</b>	<b>all</b> Displays drop-reason information for all interfaces. This option includes all interfaces in a logical chassis that span multiple Rbridges.
	<b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N> <b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.
	<b>rbridge-id</b> Specifies an RBridge ID.
	<b>slot</b> Specifies a valid slot number.
	<b>port</b> Specifies a valid port number.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	None

**Examples** This example displays information the TenGigabitEthernet Interface 1/0/2:

```
switch# debug show qos drop-reason interface tengigabitethernet 1/0/2
Drop Reason Statistics for Interface Te 1/0/2
=====
Lookup indicates drop: 0000000000
Lookup not enabled: 0000000000
pause or pfc frame: 0000000000
non-TRILL port gets all-rbr MAC DA: 0000000000
MAC SA is bcast/mcast/chassis address: 0000000000
type or len err after SNAP: 0000000000
non-TRILL frame w/o ctrl MAC DA at TRILL: 0000000000
TRILL outer DA/SA/VLAN mismatch: 0000000000
TRILL version/mc flag/header error: 0000000000
TRILL hop count error: 0000000000
TRILL SA matches TRILL address of chip: 0000000000
Source filtered: 0000000000
pre mature EOF: 0000000000
IPv4/IPv6 error: 0000000000
TTL is less than or equal to 1: 0000000000
IP DA mcast addr mismatches MAC DA: 0000000000
IP SA is mcast address: 0000000000
IP PIM error: 0000000000
IPv4/PIM checksum error: 0000000000
IPv4 IHL is greater than 5: 0000000000
IP Routing not enabled: 0000000000
Reserved: 0000000000
FCoE header error: 0000000000
FCoE VSAN hop count error: 0000000000
FCoE routing not enabled: 0000000000
Tail Drop: 0000000000
Drop due to local MAC bit set: 0000000000
Reserved: 0000000000
TRILL RPF drops: 0000000000
Reserved: 0000000000
Parity error: 0000000000
IPv6 max len error: 0000000000
Forward enable error: 0000000000
Policer drops: 0000000000
IPv4/IPv6 RPF check fail: 0000000000
Unknown: 0000000000
Unknown: 0000000000
```

(output truncated)

**History**

Release version	Command history
5.0.0	This command was introduced.

## debug spanning-tree

Enables debugging for the Spanning Tree Protocol (STP).

<b>Syntax</b>	<pre>debug spanning-tree { all   bpdu [ rx   tx [ all   interface port-channel <i>number</i>   &lt;N&gt;gigabitethernet slot/port ] }</pre> <pre>no debug spanning-tree { all   bpdu [ rx   tx [ all   interface port-channel <i>number</i>   &lt;N&gt;gigabitethernet slot/portport ] }</pre>
<b>Command Default</b>	STP debugging is disabled.
<b>Parameters</b>	<p><b>all</b> Turns on spanning tree packet debugging on all interfaces.</p> <p><b>bpdu</b> Turns on Bridge Protocol Data Unit debugging.</p> <p><b>rx</b> Turns on debugging for only received spanning-tree packets.</p> <p><b>tx</b> Turns on debugging for only transmitted spanning-tree packets.</p> <p><b>interface</b> Specifies the interface to be monitored.</p> <p><b>port-channel <i>number</i></b> Specifies the port-channel interface. Valid values range from 1 through 6144.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Enter <b>terminal monitor</b> to display debugging outputs.</p> <p>Enter <b>no debug spanning-tree</b> to disable debugging.</p>

**Examples** To enable debugging of spanning-tree for both Rx and Tx on the 10-gigabit Ethernet interface 0/1:

```
switch# debug spanning-tree bpdu rx interface tengigabitethernet 0/1
switch# debug spanning-tree bpdu tx interface tengigabitethernet 0/1
switch# show debug spanning-tree

MSTP debugging status:
Spanning-tree rx debugging is off
Te 0/1 rx is on
Spanning-tree tx debugging is off
Te 0/1 tx is on
```

**Related  
Commands** [show debug spanning-tree](#)

## debug udd packet

Enables debugging for the UniDirectional Link Detection (UDLD) protocol.

**Syntax** `debug udd packet [ all | { interface [ <N>gigabitethernet rbridge-id/slot/port ] } { both | rx | tx }  
no debug udd packet`

**Command Default** UDLD debugging is disabled.

**Parameters** **all**

Activates UDLD debugging on all ports on the switch.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds.

Enter ? to see which interface subtypes are available. Replace

<N>**gigabitethernet** with the desired operand (for example,

**tengigabitethernet** specifies a 10-Gb Ethernet port). The use of

**gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**both**

Sets debugging for both received and transmitted packets.

**rx**

Sets debugging for received packets only.

**tx**

Sets debugging for transmitted packets only.

**Modes** Privileged EXEC mode

**Usage Guidelines** When debugging is enabled UDLD PDUs are written to the console as they are transmitted and/or received on one or all ports.

Use the **show debug udd** command to view your current debug settings.

Use the **no** form of this command to turn off either all dumping of UDLD PDUs or dumping on a specific port.

**Examples** To turn on debugging of transmitted packets on a specific tengigabitethernet interface:

```
switch# debug udd packet interface te 5/0/1 tx
```

**Related Commands** [show debug udd](#)

# debug vrrp

Enables debugging for the Virtual Router Redundancy Protocol (VRRP).

<b>Syntax</b>	<p><b>debug vrrp all</b></p> <p><b>debug vrrp events</b></p> <p><b>debug vrrp packets</b> { <b>interface</b> { <i>&lt;N&gt;</i><b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>ve</b> <i>vlan_id</i> }   <b>recv</b>   <b>sent</b> }</p> <p><b>debug vrrp session</b> <i>VRID</i></p> <p><b>no debug vrrp all</b></p> <p><b>no debug vrrp events</b></p> <p><b>no debug vrrp packets</b> { <b>interface</b> { <i>&lt;N&gt;</i><b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>ve</b> <i>vlan_id</i> }   <b>recv</b>   <b>sent</b> }</p> <p><b>no debug vrrp session</b> <i>VRID</i></p>
<b>Parameters</b>	<p><b>all</b> Debugs all VRRP events, packets, and sessions.</p> <p><b>events</b> Debugs all VRRP events.</p> <p><b>packets interface</b> Debugs packets for an interface that you specify. Also enables the <i>recv</i> and <i>sent</i> parameters.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <i>&lt;N&gt;gigabitethernet</i> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>ve vlan_id</b> Specifies the VLAN number for a virtual Ethernet (VE) interface.</p> <p><b>packets recv</b> Debugs packets received.</p> <p><b>packets sent</b> Debugs packets sent.</p> <p><b>session VRID</b> Specifies the virtual group ID to debug. Valid values range from 1 through 128.</p>
<b>Modes</b>	Privileged EXEC mode

**Usage Guidelines** When debugging is enabled, event and packet information for all virtual groups or for a specific interface are captured..

This command is for VRRP and VRRP-E. VRRP-E supports only the VE interface type.

Enter **no debug vrrp all** with to disable all VRRP debugging.

Enter **no debug vrrp** followed by specific events or packet parameters to remove a specific VRRP debugging configuration.

**Examples** To set debugging on sent and received packets for a 10-gigabit Ethernet interface that has an *rbridge-id/slot/port* of 121/0/50:

```
switch# debug vrrp packets interface tengigabitethernet 121/0/50
```

To set debugging for a session for a VRRP virtual group called *vrrp-group-25* :

```
switch# debug vrrp session 25
```

**Related Commands** [show debug vrrp](#)



## default-information-originate (BGP)

Configures the device to originate and advertise a default BGP4 or BGP4+ route.

**Syntax** **default-information-originate**

**no default-information-originate**

**Modes** BGP address-family IPv4 unicast configuration mode

BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** Use the **no** form of this command to restore the default.

**Examples** To originate and advertise a default BGP4 route:

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router bgp
switch(config-bgp-router)# address-family ipv4 unicast
switch(config-bgp-ipv4u)# default-information-originate
```

### History

Release version	Command history
NOS v5.0.0	This command was modified to add support for the IPv6 address family.

## default-information-originate (OSPF)

Controls distribution of default information to an OSPF router.

**Syntax** `default-information-originate [ always ] [ metric metric ] [ metric-type { type-1 | type-2 } ]`

`no default-information-originate`

**Command Default** The default values vary depending on the Operands settings.

**Parameters** **always**

Always advertises the default route. If the route table manager does not have a default route, the router advertises the route as pointing to itself.

**metric *metric***

Used for generating the default route, this parameter specifies the cost for reaching the rest of the world through this route. If you omit this parameter and do not specify a value using the `default-metric` router configuration command, a default metric value of 1 is used. Valid values range from 1 through 65535. The default is 10.

**metric-type**

Specifies how the cost of a neighbor metric is determined. The default is **type-1**. However, this default can be changed with the **metric-type** command.

**type-1**

The metric of a neighbor is the cost between itself and the router plus the cost of using this router for routing to the rest of the world.

**type-2**

The metric of a neighbor is the total cost from the redistributing routing to the rest of the world.

**Modes** OSPF/OSPFv3 VRF router configuration mode

**Usage Guidelines** This configuration provides criteria for the redistribution of any default routes found in the route table manager (whether static or learned from another protocol) to its neighbors.

Enter **no default-information-originate** to disable this command.

**Examples** To always advertise the default route using a metric value of 20:

```
device# configure terminal
device(config)# rbridge-id 5
device(config-rbridge-id-5)#router ospf
device(config-router-ospf-vrf-default-vrf)# default-information-originate always
metric 20
```

**History**

Release version	Command history
5.0.0	Support was added for OSPFv3.

**Related Commands**

[default-metric \(OSPF\)](#), [metric-type](#)

# default-local-preference

Enables setting of a local preference value to indicate a degree of preference for a route relative to that of other routes.

**Syntax** `default-local-preference num`

`no default-local-preference num`

**Command Default** The default local preference is 100.

**Parameters** *num*

Local preference value. Range is from 0 through 65535.

**Modes** BGP configuration mode

**Usage Guidelines** Use this command to change the local preference value.

Local preference indicates a degree of preference for a route relative to that of other routes. BGP4 neighbors can send the local preference value as an attribute of a route in an UPDATE message.

Use the **no** form of this command to restore the default.

**Examples**

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# default-local-preference 200
```

## default-metric (BGP)

Changes the default metric used for redistribution.

**Syntax** `default-metric value`

`no default-metric`

**Command Default** The default metric value is 1.

**Parameters** *value*

Metric value. Range is from 0 through 65535.

**Modes** BGP address-family IPv4 unicast configuration mode  
BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** When routes are selected, lower metric values are preferred over higher ones. The default, the BGP4 Multi-Exit Discriminator (MED) value, is not assigned. .

Use the **no** form of this command to restore the default.

**Examples** To configure the device to compare MEDs:

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# default-metric 100
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.

## default-metric (OSPF)

Sets the default metric value for the OSPF or OSPFv3 routing protocol.

**Syntax** `default-metric metric`

`no default-metric`

**Command Default** The default metric value for the OSPF or OSPFv3 routing protocol is 10.

**Parameters** *metric*

OSPF routing protocol metric value. Valid values range from 1 through 65535.

**Modes** OSPF/OSPFv3 VRF router configuration mode

**Usage Guidelines** This command overwrites any incompatible metrics that may exist when OSPF or OSPFv3 redistributes routes. Therefore, setting the default metric ensures that neighbors will use correct cost and router computation.

Enter **no default-metric** to return to the default setting.

**Examples** To set the default metric to 20:

```
device# configure terminal
device(config)# rbridge-id 5
device(config-rbridge-id-5)# router ospf
device(config-router-ospf-vrf-default-vrf)# default-metric 20
```

**History**

Release version	Command history
5.0.0	Support was added for OSPFv3.

**Related  
Commands**

[default-information-originate \(OSPF\)](#)

## default-passive-interface

Marks all OSPF and OSPFv3 interfaces passive by default.

- Syntax** **default-passive-interface**
- no default-passive-interface**
- Modes** OSPF/OSPFv3 VRF router configuration mode
- Usage Guidelines** When you configure the interfaces as passive, the interfaces drop all the OSPF and OSPFv3 control packets.
- You can use the **ip ospf active** and **ip ospf passive** commands in interface subconfiguration mode to change active/passive state on specific OSPF interfaces. You can use the **ipv6 ospf active** and **ipv6 ospf passive** commands in interface subconfiguration mode to change the active and passive state on specific OSPFv3 interfaces. Use the **no** form of this command to disable it.

**Examples** To mark all OSPF interfaces as passive for a specified RBridge:

```
device# configure terminal
device(config)# rbridge-id 1
device(config-rbridge-id-1)# router ospf
device(config-router-ospf-vrf-default-vrf)# default-passive-interface
```

History	Release version	Command history
	5.0.0	Support was added for OSPFv3.

# delete

Deletes a user-generated file from the flash memory.

**Syntax** `delete file`

**Parameters** `file`

The name of the file to be deleted.

**Modes** Privileged EXEC mode

**Usage Guidelines** The delete operation is final; there is no mechanism to restore the file. This command is supported only on the local switch.

System configuration files cannot be deleted. If you try to delete a system configuration file, an appropriate message is displayed.

**Examples** To delete a user-generated copy of a configuration file:

```
switch# dir
total 24
drwxr-xr-x  2 root    sys      4096 Feb 13 00:39 .
drwxr-xr-x  3 root    root     4096 Jan  1 1970 ..
-rwxr-xr-x  1 root    sys       417 Oct 12 2010 myconfig
-rwxr-xr-x  1 root    sys       417 Oct 12 2010 defaultconfig.novcs
-rwxr-xr-x  1 root    sys       697 Oct 12 2010 defaultconfig.vcs
-rw-r--r--  1 root    root     6800 Feb 13 00:37 startup-config
switch# delete myconfig

% Warning: File will be deleted (from flash:)!
Continue?(y/n): y
```

**Related Commands** [copy](#), [dir](#), [rename](#), [show file](#)

## description (interfaces)

Specify a string that contains the description of a specified interface..

**Syntax** `description line`

`no description`

**Parameters** *line*

Specifies characters describing the interface. The string must be between 1 and 63 ASCII characters in length.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no description** to remove the interface description.

**Examples** To set the string describing internal 10-gigabit Ethernet interface 101/0/1:

```
switch(config)# interface tengigabitethernet 101/0/1
switch(conf-if-te-101/0/1)# description converged_101
```

**Related Commands** [interface](#), [interface ve](#), [name \(VLAN interfaces\)](#), [show vlan brief](#)



## description (LLDP)

Specifies a string that contains the LLDP description.

**Syntax** **description** *line*

**no description**

**Parameters** *line*

Characters describing LLDP. The string must be between 1 and 50 ASCII characters in length.

**Modes** Protocol LLDP configuration mode

**Usage Guidelines** Enter **no description** to remove the LLDP description.

**Examples** To set the strings describing LLDP:

```
switch(conf-lldp)# description Brocade-LLDP
```

## description (Port Mirroring)

Specifies a string that contains the description of the Port Mirroring session.

**Syntax** `description line`

`no description`

**Parameters** *line*

Specifies string that contains the description of the Port Mirroring session. The string must be between 1 and 64 ASCII characters in length.

**Modes** Monitor session configuration mode

**Usage Guidelines** The string displayed in the running-config file to describe the Port Mirroring session.

Enter **no description** to remove the port mirroring description.

**Examples** To set the string describing monitor session 1:

```
switch(config)# monitor session 1
switch(config-mon-sess-1)# description server group 1 switch-cmsh
```

**Related  
Commands** [monitor session](#)

## description (VRRP)

Describes a VRRP-E interface.

**Syntax** **description** *description*

**no description**

**Parameters** **description**

Characters describing the VRRP-E interface. The string must be between 1 and 64 ASCII characters in length.

**Modes** Virtual-router-group configuration mode

**Usage Guidelines** Enter **no description** to remove the description.

**Examples** To describe VRRP-E group 10 interface:

```
switch(config)# rbridge-id 101
switch(config-rbridge-id-101)# int ve 25
switch(config-ve-25)# vrrp-extended-group 10
switch(config-vrrp-extended-group-10)# description vrrpe_group_10
```

**Related Commands** [vrrp-group](#), [vrrp-extended-group](#)

## destination

Designates the destination interface for the snooping data for flow-based SPAN.

**Syntax** `destination dest_ifname`

`no destination dest_ifname`

**Parameters** `dest_ifname`

The name of the destination interface.

**Modes** Monitor session mode

**Usage Guidelines** Use the `no destination dest_ifname` command to delete the destination interface.

**Related  
Commands** [span session](#)

# dhcp auto-deployment enable

Enables DHCP auto-deployment on the switch.

**Syntax** `dhcp auto-deployment enable`

**Command Default** Disabled

**Modes** Privileged EXEC mode

**Usage Guidelines** This command will cause a cold/disruptive reboot and will require that Telnet, secure Telnet, or SSH sessions be restarted.

Scenario 1: When you enable DHCP auto-deployment and the system starts to reboot, the DAD process is triggered after configuration replay is complete.

In the case of dual Management Moddule (MM) chassis, the DAD process waits for the dual MMs to be in sync before starting the requested firmware download. However, if you manually issue **firmwaredownload -sb** during this period (after DAD is triggered and before the MM is in sync), DHCP auto-deployment will fail because the previous firmware download takes precedence. If you manually issue **firmwaredownload -sb** before DAD is triggered, DHCP auto-deployment will fail for the same reason.

Scenario 2: You issue the command to enable DAD (answer "Yes" when prompted), but before the system reboot, there is an HA failover. DAD will be cancelled. You must enable DHCP auto-deployment from the new active switch.

Scenario 3: You issue the command to enable DAD, but after the system reboot is invoked, takeover occurs (the previous standby switch becomes the new active switch), DHCP auto-deployment will proceed.

Scenario 4: You manually issue the **firmwaredownload** command, but before the firmware download is completed, you enable DAD from the CLI and answer "Yes" when prompted to reboot the switch. When the switch boots up, even if the DAD process detects that the firmware download is needed, it will fail during the sanity check because the previous incomplete firmware download takes precedence. DHCP auto-deployment will fail.

**Related Commands** [show dadstatus](#)

## diag burninerrclear

Clears the error logs that are stored in the nonvolatile memory. These error logs are stored during POST and systemVerification failures. Error logs are automatically cleared during system verification.

**Syntax** **diag burninerrclear**

**Modes** Privileged EXEC mode

**Examples** Typical output for this command.

```
switch# diag burninerrclear  
  
Clearing errLog for slot M2  
Clearing errLog for slot S1  
Clearing errLog for slot S2  
Clearing errLog for slot S3  
Clearing errLog for slot L4
```

**Related Commands** [diag clearerror](#), [show diag burninerrshow](#), [show diag burninstatus](#)

# diag clearerror

Clears the diagnostic errors encountered during offline diagnostic tests.

**Syntax** `diag clearerror`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is valid only on fixed-configuration switches.

**Examples** To clear the diagnostic failure status:

```
switch# diag clearerror
```

**Related Commands** [diag burninerrclear](#), [show diag burninerrshow](#), [show diag burninstatus](#)

## diag portledtest

Runs various action modes on the port LED tests and validates the functionality on a given slot-based switch or fixed-configuration switch.

**Syntax** **diag portledtest** [ **action** *pattern* ] [ **ethernet** *rbridgeid/slot/port* ] [ **fibrenchannel** *rbridgeid/slot/port* ] [ **npass** *count* ] [ **slot** *slot\_id* ]

**Command Default** All the ports are tested in a switch.  
The default number of times to perform the test is 1.  
The default **action** is `cycle_all`

**Parameters** **action** *pattern*

Specifies the LED pattern. Action choices are as follows:

***blink-amber***

Blink Port status LED amber

***blink-green***

Blink Port status LED green

***cycle-all***

Cycle all Port LEDs

***status-amber***

Turn Port status LED amber

***status-green***

Turn Port status LED green

***turn-off***

Turn Port status LED off

**ethernet**

The logical Ethernet interface name, which is mutually exclusive from the Fibre Channel parameter. By default, all ports are tested.

***rbridge-id***

Specifies an RBridge ID.

***slot***

Specifies a valid slot number.

***port***

Specifies a valid port number

**fibrenchannel**

The logical Fibre Channel interface name, which is mutually exclusive from the Ethernet parameter. By default, all ports are tested.

***rbridge-id***

Specifies an RBridge ID.

***slot***

Specifies a valid slot number.

***port***

Specifies a valid port number.

**npass** *count*

Specifies the number of times to perform this test. Valid values range from 1 through 10. The default value is 1.

**slot** *slot\_id*

Specifies the slot identifiers for slot-based systems only.



**Modes** Privileged EXEC mode (with the chassis disabled in offline mode)

**Usage Guidelines** This test can be run on a single port or on all ports in the blade (slot-based switches) or the switch (fixed-configuration switches).

During abnormal termination, the system might be in unusable state. Perform reload to reboot the chassis or switch to recover.

In slot-based systems, the blade under test undergoes a reset and/or a reinitialization sequence as part of cleanup.

The *rbridge-id* is an optional parameter. If the *rbridge-id* is not specified, the test is assigned to the local RBridge ID.



### **CAUTION**

**This is a disruptive command. You must disable the switch and chassis before running the test. In addition, you must reload or fastboot the switch or chassis after the test has completed running.**

**Examples** The following commands allow you to run various action modes on the LEDs and validate the functionality.

In slot-based switches:

```
switch# diag portledtest action cycle-all slot L1

% Info: This test should be run to completion. Please do not abort while it is
executing.
Running portledtest...
Turning Port Status LEDs OFF...
Turning Port Status LEDs AMBER...
Turning Port Status LEDs GREEN...
Turning Port Status LEDs BLINK GREEN...
Turning Port Status LEDs BLINK AMBER...
portLedTest on slot L1 PASSED
% Info: Resetting the blade. Please wait till it gets initialized...
switch#
```

In fixed-configuration switches:

```
switch# diag portledtest

% Info: This test should be run to completion. Please do not abort while it is
executing.
Running portledtest ...
Testing Ethernet ports..
STATUS LED OFF test
STATUS LED GREEN test
STATUS LED AMBER test
STATUS LED BLINK GREEN test
STATUS LED BLINK AMBER test
Testing FC ports..
STATUS LED OFF test
STATUS LED GREEN test
STATUS LED AMBER test
STATUS LED BLINK GREEN test
STATUS LED BLINK AMBER test
PASSED.
```

**Related Commands** [diag portloopbacktest](#), [diag post enable](#), [diag turboramtest](#)

## diag portloopbacktest

Runs the port loopback test on a given slot-based switch or fixed-configuration switch. You can run this test on a single port or on all ports in the blade (slot-based switches) or switch (fixed-configuration switches). This functional test verifies the ability of each port to transmit and receive frames by setting up the loopback at various levels and speed modes.

**Syntax** **diag portloopbacktest** [ **ethernet** *rbridgeid/slot/port* ] [ **fibrechannel** *rbridgeid/slot/port* ] [ **lbmode** *loopback\_mode* ] [ **nframes** *count* ] [ **slot** *slot\_id* ] [ **spdmode** *mode* ]

**Command Default** Number of frames (**nframes**) is 16.

Loopback mode (**lbmode**) is 2.

Speed mode (**spdmode**) depends on the platform. On a 10 Gbps port, the default speed mode is 10.

**Parameters** **ethernet**

The logical Ethernet interface name, which is mutually exclusive from the Fibre Channel parameter. By default, all ports are tested.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number

**fibrechannel**

The logical Fibre Channel interface name, which is mutually exclusive from the Ethernet parameter. By default, all ports are tested.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**lbmode mode**

Specifies the loopback point for the test. Valid values are 1 (external) or 2 (internal). The default is 2.

**nframes count**

Specifies the number of frames to send. Valid values range from 1 through 16. The default is 16.

**slot slot\_id**

Specifies the slot identifiers for slot-based systems only.

**spdmode mode**

Specifies the speed mode for the test. This parameter controls the speed at which each port operates during the test. Valid parameters are as follows: 1 Gbps 2 Gbps 4 Gbps 8 Gbps 10 Gbps 16 Gbps 40 Gbps 100 Gbps

**Modes** Privileged EXEC mode (with the chassis disabled, in offline mode)

**Usage Guidelines** During abnormal termination, the system might be in unusable state. Perform reload to reboot the chassis or switch to recover.

In slot-based systems, the blade under test undergoes a reset or a reinitialization sequence as part of cleanup.

The *rbridge-id* is an optional parameter. If the *rbridge-id* is not specified, the test is assigned to the local RBridge ID.



### CAUTION

---

**This is a disruptive command. You must disable the chassis and switch before running the test. In addition, you must reload or fastboot the switch or chassis after the test has completed running.**

---

#### Examples In slot-based switches:

```
switch# diag portloopbacktest slot S1

% Info: This test should be run to completion. Please do not abort while it is
executing.
Running portloopbacktest...
<..cut..>
portLoopbackTest on ports 0-143 PASSED
portLoopbackTest on slot S1 PASSED
% Info: Resetting the blade. Please wait till it gets initialized...
```

#### In fixed-configuration switches:

```
switch# diag portloopbacktest

% Info: This test should be run to completion. Please do not abort while it is
executing.
Running portloopbacktest .....
PASSED.
```

#### Related Commands

[diag portledtest](#), [diag post enable](#), [diag turboramtest](#)

## diag post enable

Enables and disables the power-on self-test (POST).

**Syntax** **diag post** [ *rbridge-id* ] **enable**

**no diag post** [ *rbridge-id* ] **enable**

**Command Default** POST is enabled.

**Parameters** **rbridge-id**

Specifies an RBridge ID on which POST is run.

**enable**

Enables the power-on self-test on the specified switch.

**Modes** Global configuration mode

**Usage Guidelines** Following the **diag post enable** command, update the startup-config by copying the running-config to the start-up config, which takes effect during reboot or a power cycle.

Enter **no diag post [rbridge-id] enable** to disable the POST for that RBridge.

**Examples** To enable the POST for a RBridge:

```
switch# config
```

```
Entering configuration mode terminal
switch(config)# diag post rbridge-id 1 enable
```

```
switch(config)# exit
```

```
switch# copy running-config startup-config
```

```
This operation will modify your startup configuration. Do you want to continue? [y/n]: y
```

```
1970/01/01-09:09:49, [DCM-1101], 2086, M2, INFO, VDX8770-4, Copy running-config to startup-config operation successful on this node.
```

To disable the POST for an RBridge ID:

```
switch(config)# no diag post rbridge-id 1 enable
```

**Related Commands** [show running-config diag post](#)

# diag prbstest

Runs the Pseudo Random Bit Sequence (PRBS) test on a given slot to verify the back end connections between the line card (LC) and switch fabric module (SFM).

This command also verifies the internal blade connections when executed in LC.

<b>Syntax</b>	<b>diag prbstest slot</b> { L1   L2   S1   S2 ... } <b>pattern</b> { <i>pattern</i> }
<b>Command Default</b>	The default PRBS pattern is PRBS7.
<b>Parameters</b>	<p><b>slot</b> <i>slot</i></p> <p>Specifies the slot ID, from 1 through 6. This test is applicable for slot-based systems only.</p> <p><b>pattern</b> <i>pattern</i></p> <p>Specifies the PRBS pattern, from 1 through 8. Valid values are <b>PRBS7</b> , <b>PRBS23</b> , and <b>PRBS31</b> . The default is PRBS7, which is the least stressful pattern, whereas PRBS31 is the most stressful pattern.</p>
<b>Modes</b>	Privileged EXEC mode (with the chassis disabled, in offline mode)
<b>Usage Guidelines</b>	<p>This test is not supported on fixed-configuration switches, nor can it be run on a per-port basis</p> <p>During abnormal termination, the system might be in unusable state. Perform reload to reboot the chassis or switch to recover.</p> <p>In slot-based systems, the blade under test undergoes a reset and/or a reinitialization sequence as part of the cleanup process.</p>



## CAUTION

**This is a disruptive command. You must disable the chassis and switch before running the test. In addition, you must reload or fastboot the switch or chassis after the test has completed running.**

**Examples** In slot-based switches:

```
switch# diag prbstest slot L6 pattern PRBS7

% Info: This test should be run to completion. Please do not abort while it is
executing.
Running prbstest...
Initializing ASICs & Ports...
Performing Link Training from L6 to S1
Performing Link Training from L6 to S2
Performing Link Training from L6 to S3
Performing Link Training from L6 to S4
Performing Link Training from L6 to S5
<..cut..>
slot S6 ASIC 1 Port 15 Tap0: 0x08 Tap1: 0x33 Tap2: 0x20
Performing Link Testing from L6 to S1
Performing Link Testing from L6 to S2
Performing Link Testing from L6 to S3
Performing Link Testing from L6 to S4
Performing Link Testing from L6 to S5
Performing Link Testing from L6 to S6
prbsTest on slot L6 PASSED
```

**Related Commands** [diag portledtest](#), [diag portloopbacktest](#), [diag turboramtest](#)

## diag setcycle

Configures the user-defined parameters required for the system verification test.

<b>Syntax</b>	<b>diag setcycle</b>
<b>Command Default</b>	Referto the Usage Guidelines.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>If, after you enter the <b>diag setcycle</b> command, you respond with <b>yes</b> , the following settings are the default values:</p> <ul style="list-style-type: none"> <li>• <i>num_of_runs</i> : 1. Valid values for number of runs are 1 through 25.</li> <li>• <i>min_lb_mode</i> : 2. Valid values for minimum loopback mode are 1 (external) or 2 (internal). If set to 1, all the external user ports must be connected with small form-factor pluggable devices (SFPs) and loopback plugs.</li> <li>• <i>pled_passes</i> : 1. Valid values for the number of portLedTest loops are 1 through 10.</li> <li>• <i>tbr_passes</i> : 1. Valid values for the number of turboRamTest loops are 1 through 10. This parameter is not supported on fixed configuration switches.</li> <li>• <i>plb_nframes</i> :16. Valid values for the number of portLoopbackTests are 4 through 16.</li> </ul> <p>If you respond with <b>no</b> , the system prompts you for these values.</p>
<b>Examples</b>	To change the value of num_of_runs parameter to 3:

```
switch# diag setcycle num_of_runs 3
Setting number_of_runs to 3.
Committing changes to configuration
```

## In slot-based switches:

```
0 is not a valid number of passes. See sample below.
ronteel28# diag setcycle num_of_runs 0
```

```
-----^
syntax error: "0" is out of range.
switch# diag setcycle
Do you want use default values [Y/N]?      : y

DEFAULT - KEYWORD      : COMMENT
replacing 2 with default 1
  1 - number_of_runs    : number of passes of verify
  2 - min_lb_mode       : Limits -lb_mode of tests
VERIFY - label : Label for run start and stop messages
  1 - tbr_passes        : turboramtest number of passes
replacing 8 with default 16
  16 - plb_nframes      : portloopbacktest number of frames default speed
  1 - pled_passes       : portledtest number of passes
  1 - prbs_p7           : LC Backplane test with pattern PRBS7+
  16 - cplb_nframes     : portloopbacktest in Core Blade number of frames
Committing changes to configuration
switch# diag setcycle
```

```
Do you want use default values [Y/N]?      : y
```

```
DEFAULT - KEYWORD      : COMMENT
  1 - number_of_runs    : number of passes of verify (0=infinite)
  2 - min_lb_mode       : Limits -lb_mode of tests
  0 - sof               : Enable stop testing on first fail
VERIFY - label : Label for run start and stop messages
  1 - tbr_passes        : turboramtest number of passes
  16 - plb_nframes      : portloopbacktest number of frames default speed
  0 - plb5_nframes     : portloopbacktest (lb_mode 5) number of frames default speed
  0 - plb7_nframes     : portloopbacktest (lb_mode 7) number of frames
  0 - pled_action       : portledtest action for glowing all led's
  1 - pled_passes       : portledtest number of passes
  1 - prbs_p7           : LC Backplane test with pattern PRBS7+
  0 - prbs_p23          : LC Backplane test with pattern PRBS23+
  0 - prbs_p31          : LC Backplane test with pattern PRBS31+
  0 - cprbs_p7          : SFM Backplane test with pattern PRBS7+
  0 - cprbs_p23         : SFM Backplane test with pattern PRBS23+
  0 - cprbs_p31         : SFM Backplane test with pattern PRBS31+
  16 - cplb_nframes     : portloopbacktest in Core Blade number of frames
  0 - cplb7_nframes    : portloopbacktest in Core Blades (lb_mode 7) number of
frames
```

## In fixed-configuration switches:

```
switch# diag setcycle
```

```
Do you want use default values [Y/N]? : y
```

```
DEFAULT - KEYWORD : COMMENT
replacing 3 with default 1
1 - number_of_runs : number of passes of verify (0=infinite)
2 - min_lb_mode   : Limits -lb_mode of tests
1 - tbr_passes    : turboramtest number of passes
16 - plb_nframes  : portloopbacktest number of frames default speed
Committing changes to configuration
```

**Related Commands**    [show diag setcycle](#)

## diag systemverification

Runs a combination of various hardware diagnostic tests based on the parameters set using the diag setcycle command.

<b>Syntax</b>	<b>diag systemverification [ short ] [ stop ]</b>
<b>Command Default</b>	If <i>short</i> is not specified, all the burn-in parameters that control the number of frames are run.
<b>Parameters</b>	<p><b>short</b></p> <p>Sets the burn-in parameters that control the number of frames to one for a quick run.</p> <p><b>stop</b></p> <p>Stops the current systemVerification run.</p>
<b>Modes</b>	Privileged EXEC mode (with the chassis disabled in offline mode)
<b>Usage Guidelines</b>	The primary use for this command is software regression testing, or a quick validation that all hardware is operational.



### CAUTION

**This is a disruptive command. You must disable the chassis and switch before running the test. In addition, you must reload or fastboot the switch or chassis after the test has completed running.**

Error logs are cleared automatically during system verification.

To check the current run status, enter the **show diag burninstatus** command.

All errors are stored in the non-volatile memory. You can check the error status using the **show diag burninerrshow** command.

During abnormal termination or when terminated by using the stop parameter, the system might be in unusable state. Perform a reload to reboot the chassis or switch to recover.

In slot-based systems, the blade under test undergoes a reset and/or a reinitialization sequence as part of the cleanup process.

**Examples** To run various tests, such as the memory and portloopback tests, with various combinations:

```
switch# diag systemverification

% Info: This test should be run to completion. Please do not abort while it is
executing.
systemverification: burnin parameters.
CURRENT - KEYWORD : DEFAULT
1 - number_of_runs : 1
2 - min_lb_mode : 2
1 - tbr_passes : 1
16 - plb_nframes : 16
<..cut..>
```



# diag turboramtest

This test performs a series of low-level structural tests to determine the basic health of the PCI or PCIe bus and the memories inside the switch ASIC.

<b>Syntax</b>	<b>diag turboramtest</b> [ <b>passcnt count</b> ] [ <b>slot slot_id</b> ]
<b>Command Default</b>	The pass count ( <b>passcnt</b> ) is 1.
<b>Parameters</b>	<p><b>passcnt count</b> Specifies the number of test repetitions. By default, the test runs once. Valid values range from 1 through 10.</p> <p><b>slot slot_id</b> Specifies the slot ID. This is mandatory for slot-based systems only.</p>
<b>Modes</b>	Privileged EXEC mode (with the chassis disabled in offline mode).
<b>Usage Guidelines</b>	<p>During abnormal termination, the system might be in unusable state. Perform reload to reboot the chassis or switch to recover.</p> <p>In slot-based systems, the blade under test undergoes a reset and/or a reinitialization sequence as part of the cleanup process.</p>



## CAUTION

**This is a disruptive command. You must disable the chassis and switch before running the test. In addition, you must reload or fastboot the switch or chassis after the test has completed running.**

## Examples

In slot-based switches:

```
switch# diag turboramtest slot S2

% Info: This test should be run to completion. Please do not abort while it is
executing.
Running turboramtest...
Initializing ASIC 0 for BIST
Initializing ASIC 1 for BIST
Initializing ASIC 2 for BIST
turboRamTest on ASIC 0 PASSED
turboRamTest on ASIC 1 PASSED
turboRamTest on ASIC 2 PASSED
turboRamTest on slot S2 PASSED
% Info: Resetting the blade. Please wait till it gets initialized...
completed.
```

## In fixed-configuration switches:

```
switch# diag turboramtest

% Info: This test should be run to completion. Please do not abort while it is
executing.
Running turboramtest .....
PASSED.
```

## dir

Lists the contents of the switch flash memory.

**Syntax** **dir**

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

**Examples** To list the contents of the flash memory:

```
switch# dir
total 24
drwxr-xr-x  2 root    sys      4096 Feb 13 00:39 .
drwxr-xr-x  3 root    root     4096 Jan  1 1970 ..
-rwxr-xr-x  1 root    sys       417 Oct 12 2010 myconfig.vcs
-rwxr-xr-x  1 root    sys       417 Oct 12 2010 defaultconfig.novcs
-rwxr-xr-x  1 root    sys       697 Oct 12 2010 defaultconfig.vcs
-rw-r--r--  1 root    root     6800 Feb 13 00:37 startup-config
```

**Related Commands** [copy](#), [delete](#), [rename](#), [show file](#)

## disable (Fabric-Virtual-Gateway)

Disables the Fabric-Virtual-Gateway session on the VE interface.

**Syntax**    **disable**  
               **no disable**

**Command Default**    None

**Modes**    Fabric-Virtual-Gateway on an RBridge VE interface IPv4 or IPv6 configuration mode

**Usage Guidelines**    The **no** form of the command inherits the interface VE state from the global configuration.  
 The session can be disabled at the RBridge level even if it is enabled at the global level.

**Examples**    The following example shows how to disable a session on a VE interface.

```
switch(config)# rbridge-id 55
switch(config-rbridge-id-55)# interface ve 2000
switch(config-rbridge-ve-2000)# ipv6 fabric-virtual-gateway
switch(config-ipv6-fabric-virtual-gw)# disable
```

### History

Release version	Command history
5.0.1	This command was introduced.

## distance (BGP)

Changes the default administrative distances for EBGp, IBGP, and local BGP4 and BGP4+.

<b>Syntax</b>	<b>distance</b> <i>external-distance internal-distance local-distance</i> <b>no distance</b> <i>external-distance internal-distance local-distance</i>
<b>Parameters</b>	<b>external-distance</b> EBGP distance. Range is from 1 through 255. <b>internal-distance</b> IBGP distance. Range is from 1 through 255. <b>local-distance</b> Local BGP4 and BGP4+ distance. Range is from 1 through 255.
<b>Modes</b>	BGP configuration mode
<b>Usage Guidelines</b>	Enter values in the order corresponding to the values in Parameters.  To select one route over another according to the source of the route information, the device can use the administrative distances assigned to the sources. The administrative distance is a protocol-independent metric that IP devices use to compare routes from different sources. Lower administrative distances are preferred over higher ones.  Use the <b>no</b> form of this command to restore the defaults.
<b>Examples</b>	To configure the device to change the administrative distance:  <pre>device# configure terminal device(config)# rbridge-id 10 device(config-rbridge-id-10)# router bgp device(config-bgp-router)# distance 100 150 200</pre>

# distance (OSPF)

Configures an administrative distance value for OSPF and OSPFv3 routes.

**Syntax** `distance { external | inter-area | intra-area } distance`  
**no distance**

**Command Default** The administrative distance value for OSPF and OSPFv3 routes is 110.

**Parameters**

- external** Sets the distance for routes learned by redistribution from other routing domains.
- inter-area** Sets the distance for all routes from one area to another area.
- intra-area** Sets the distance for all routes within an area.
- distance** Administrative distance value assigned to OSPF routes. Valid values range from 1 through 255. The default is 110.

**Modes** OSPF/OSPFv3 VRF router configuration mode

**Usage Guidelines** You can configure a unique administrative distance for each type of OSPF route.

The distances you specify influence the choice of routes when the device has multiple routes from different protocols for the same network. The device prefers the route with the lower administrative distance. However, an OSPF or OSPFv3 intra-area route is always preferred over an OSPF or OSPFv3 inter-area route, even if the intra-area route's distance is greater than the inter-area route's distance.

Enter **no distance** to return to the default setting.

**Examples** To set the distance value for all external routes to 125:

```
device# configure terminal
device(config)# rbridge-id 5
device(config-rbridge-id-5)# router ospf
device(config-router-ospf-vrf-default-vrf)# distance external 125
```

## History

Release version	Command history
5.0.0	Support was added for OSPFv3.

# distribute-list route-map

Creates a route-map distribution list.

**Syntax** `distribute-list route-map map in`

`no distribute-list route-map`

**Parameters** *map*

Name of a route map.

**in**

Creates a distribution list for an inbound route map.

**Modes** OSPF/OSPFv3 VRF router configuration mode

**Usage Guidelines** The distribution list can filter Link State Advertisements (LSAs) received from other OSPF routers and OSPFv3 before adding the corresponding routes to the routing table.

Enter **no distribute-list route-map** to remove the distribution list.

**Examples** To create a distribution list using a route map named filter1 that has already been configured:

```
device# configure terminal
device(config)# rbridge-id 5
device(config-rbridge-id-5)# router ospf
device(config-router-ospf-vrf-default-vrf)# distribute-list route-map filter1 in
```

**History**

Release version	Command history
5.0.0	Support was added for OSPFv3.

## distribute-list prefix-list (OSPFv3)

Applies a prefix list to OSPF for IPv6 routing updates. Only routes permitted by the prefix-list can go into the routing table

**Syntax** **distribute-list prefix-list** *list-name* **in**

**no distribute-list prefix-list**

**Command Default** Prefix lists are not applied to OSPFv3 for IPv6 routing updates.

**Parameters** ***list-name***

Name of a prefix-list. The list defines which OSPFv3 networks are to be accepted in incoming routing updates.

**in**

Applies the prefix list to incoming routing updates on the specified interface.

**Modes** OSPFv3 VRF router configuration mode

**Usage Guidelines** Enter **no distribute-list prefix-list** to remove the prefix list.

**Examples** To configure a distribution list that applies the filterOspfRoutes prefix list globally:

```
device# configure terminal
device(config)# rbridge-id 5
device(config-rbridge-id-5)# router ospf
device(config-router-ospf-vrf-default-vrf)# distribute-list prefix-list
filterOspfRoutes in
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## dot1x authentication

Enables 802.1X authentication on a port.

**Syntax** **dot1x authentication**

**no dot1x authentication**

**Command Default** 802.1X authentication is disabled for ports.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no dot1x authentication** to disable dot1x on the port and remove the configuration from 802.1X management.

**Examples** To enable 802.1X authentication on a specific 10-gigabit Ethernet interface port:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# dot1x authentication
```

To disable 802.1X authentication on a specific 40-gigabit Ethernet interface port and remove the configuration from 802.1X management:

```
switch(config)# interface fortygigabitethernet 180/0/6
switch(conf-if-fo-180/0/6)# no dot1x authentication
```

**Related Commands** [dot1x port-control](#), [dot1x quiet-period](#), [dot1x reauthentication](#), [dot1x reauthMax](#), [dot1x timeout re-authperiod](#), [dot1x timeout server-timeout](#), [dot1x timeout supp-timeout](#), [dot1x timeout tx-period](#), [interface](#)



## dot1x enable

Enables 802.1X authentication globally.

**Syntax**    **dot1x enable**

**no dot1x enable**

**Command Default**    Authentication is disabled globally.

**Modes**            Global configuration mode

**Usage Guidelines**    Enter **no dot1x enable** to disable 802.1X authentication globally.

**Examples**          To enable 802.1X authentication globally:

```
switch(config)# dot1x enable
```

## dot1x port-control

Controls port-state authorization.

**Syntax** `dot1x port-control { auto | force-authorized | force-unauthorized }`

`no dot1x port-control`

**Command Default** The default port state is **auto**.

**Parameters** **auto**

Enables authentication on a port. The controlled port is unauthorized until authentication takes place between the client and authentication server. Once the client passes authentication, the port becomes authorized. This has the effect of activating authentication on an 802.1x-enabled interface.

**force-authorized**

Forces a port to remain in an authorized state. This also allows connection from multiple clients.

**force-unauthorized**

Forces a port to remain in an unauthorized state.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no dot1x port-control` to return to the default setting.

**Examples** To enable the port state to auto on a specific 10-gigabit Ethernet interface port:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# dot1x port-control auto
```

To enable the port state to force-authorized on a specific 40-gigabit Ethernet interface port:

```
switch(config)# interface fortygigabitethernet 180/0/1
switch(conf-if-fo-180/0/1)# dot1x port-control force-authorized
```

**Related Commands** [dot1x authentication](#), [dot1x quiet-period](#), [dot1x reauthentication](#), [dot1x reauthMax](#), [dot1x timeout re-authperiod](#), [dot1x timeout server-timeout](#), [dot1x timeout supp-timeout](#), [dot1x timeout tx-period](#), [interface](#)

## dot1x quiet-period

Sets the number of seconds that a switch remains quiet between a failed authentication and an attempt to retry authentication.

**Syntax** **dot1x quiet-period** *seconds*

**no dot1x quiet-period**

**Command Default** 60 seconds

**Parameters** **seconds**

Specifies the time between attempts at authentication. Valid values range from 1 through 65535 seconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** When a switch cannot authenticate a client, the switch remains idle for the quiet-period interval of time, then attempts the operation again.

Changing the quiet-period interval time to a number lower than the default can result in a faster response time.

Enter **no dot1x quiet-period** to return to the default setting.

**Examples** To change the interval time to 200 seconds on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/9)# dot1x quiet-period 200
```

To set the interval time to the default value on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 180/0/6
switch(conf-if-fo-180/0/6)# no dot1x quiet-period
```

**Related Commands** [dot1x authentication](#), [dot1x port-control](#), [dot1x reauthentication](#), [dot1x reauthMax](#), [dot1x timeout re-authperiod](#), [dot1x timeout server-timeout](#), [dot1x timeout supp-timeout](#), [dot1x timeout tx-period](#), [interface](#)

## dot1x reauthenticate interface

Initiates 802.1X reauthentication on a specified interface.

<b>Syntax</b>	<b>dot1x reauthenticate interface</b> [ <i>&lt;N&gt;</i> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i> ]
<b>Parameters</b>	<p><b>&lt;N&gt;</b><b>gigabitethernet</b></p> <p>Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>&lt;N&gt;</b><b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b></p> <p>Specifies an RBridge ID.</p> <p><b>slot</b></p> <p>Specifies a valid slot number.</p> <p><b>port</b></p> <p>Specifies a valid port number.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	To initiate reauthentication on 10-gigabit Ethernet interface 0/16:
	<pre>switch# dot1x reauthenticate interface tengigabitethernet 0/16</pre>

# dot1x reauthentication

Enables 802.1X port reauthentication.

**Syntax** **dot1x reauthentication**

**no dot1x reauthentication**

**Command Default** Reauthentication is disabled.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no dot1x reauthentication** to return to the default setting.

**Examples** To enable 802.1X reauthentication on a specific 10-gigabit Ethernet interface port:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# dot1x reauthentication
```

To disable 802.1X reauthentication on a specific 1-gigabit Ethernet interface port:

```
switch(config)# interface gigabitethernet 178/2/9
switch(conf-if-gi-178/2/9)# no dot1x reauthentication
```

**Related Commands** [dot1x authentication](#), [dot1x port-control](#), [dot1x quiet-period](#), [dot1x reauthMax](#), [dot1x timeout re-authperiod](#), [dot1x timeout server-timeout](#), [dot1x timeout supp-timeout](#), [dot1x timeout tx-period](#), [interface](#)

## dot1x reauthMax

Sets the maximum number of times that a port attempts 802.1X reauthentication before the port changes to the unauthorized state..

**Syntax** **dot1x reauthMax** *number*

**no dot1x reauthMax**

**Command Default** The number of times that a port attempts 802.1X authentication is 2.

**Parameters** *number*

Specifies the maximum number of reauthentication attempts before the port goes to the unauthorized state. Valid values range from 1 through 10.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no dot1x reauthMax** to return to the default setting.

**Examples** To set the maximum number of reauthentication attempts to 5 on a specific 10-gigabit Ethernet interface port:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# dot1x reauthMax 5
```

To set the reauthentication maximum to the default value on a specific 40-gigabit Ethernet interface port:

```
switch(config)# interface fortygigabitethernet 180/1/9
switch(conf-if-fo-180/1/9)# no dot1x reauthMax
```

**Related Commands** [dot1x authentication](#), [dot1x port-control](#), [dot1x quiet-period](#), [dot1x reauthentication](#), [dot1x timeout re-authperiod](#), [dot1x timeout server-timeout](#), [dot1x timeout supp-timeout](#), [dot1x timeout tx-period](#), [interface](#)

# dot1x test eapol-capable

Executes the 802.1x readiness check on the switch.

**Syntax** `dot1x test eapol-capable interface [ <N>gigabitethernet rbridge-id/slot/port ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command monitors 802.1x activity on all the switch ports and displays information about the devices connected to the ports that support 802.1x. You can use this feature to determine if the devices connected to the switch ports are 802.1x-capable. When you configure the **dot1x test eapol-capable** command on an 802.1x-enabled port, and the link comes up, the port queries the connected client about its 802.1x capability. When the client responds with a notification packet, it is designated as 802.1x-capable.

If you omit the optional interface keyword, all interfaces on the switch are tested. The readiness check can be sent on a port that handles multiple hosts (for example, a PC that is connected to an IP phone). The readiness check is not available on a port that is configured with the command **dot1x force-unauthorized**.

**Examples** An example of configuring the readiness check:

```
switch# dot1x test eapol-capable interface tengigabitethernet 1/0/13
```

```
DOT1X_PORT_EAPOL_CAPABLE:DOT1X: MAC 00-01-02-4b-f1-a3 on Ten Gigabit Ethernet1/0/13
is EAPOL capable.
```

## dot1x test timeout

Sets the 802.1X readiness test timeout.

**Syntax** `dot1x test timeout timeout`

**Command Default** 10 seconds

**Parameters** *timeout*

Specifies the interval value in seconds. Valid values range from 1 through 65535.

**Modes** Global configuration mode

**Examples** To set the test timeout to 30 seconds:

```
switch(config)# dot1x test timeout 30
```

**Related Commands** [dot1x test eapol-capable](#)



# dot1x timeout re-authperiod

Sets the number of seconds between reauthorization attempts on a specified interface.

**Syntax** `dot1x timeout re-authperiod seconds`

`no dot1x timeout re-authperiod`

**Command Default** 3600 seconds

**Parameters** *seconds*

Specifies the seconds between reauthorization attempts. Valid values range from 1 through 4294967295 seconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no dot1x timeout re-authperiod` to return to the default setting.

**Examples** To set 25 seconds as the amount of time between reauthorization attempts on a specific 1-gigabit Ethernet interface:

```
switch(config)# interface gigabitethernet 190/0/9
switch(conf-if-gi-190/0/9)# dot1x timeout re-authperiod 25
```

To set the time between reauthorization attempts to the default value on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 180/0/5
switch(conf-if-fo-180/0/5)# no dot1x timeout re-authperiod
```

**Related Commands** [dot1x timeout server-timeout](#), [dot1x timeout supp-timeout](#), [dot1x timeout tx-period](#), [interface](#)

## dot1x timeout server-timeout

Sets the 802.1X authentication-server response timeout for a specified interface.

**Syntax** **dot1x timeout server-timeout** *seconds*

**no dot1x timeout server-timeout**

**Command Default** 30 seconds

**Parameters** **seconds**

Specifies the number of seconds that a switch waits for the response from the 802.1X authentication server. Valid values range from 1 through 65535.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no dot1x timeout server-timeout** to return to the default setting.

**Examples** To set 40 seconds as the switch-to-authentication server transmission time on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# dot1x timeout server-timeout 40
```

To set the switch-to-authentication server transmission time to the default value on a specific 1-gigabit Ethernet interface:

```
switch(config)# interface gigabitethernet 170/4/2
switch(conf-if-gi-170/4/2)# no dot1x timeout server-timeout
```

**Related Commands** [dot1x timeout re-authperiod](#), [dot1x timeout supp-timeout](#), [dot1x timeout tx-period](#), [interface](#)

# dot1x timeout supp-timeout

Specifies the EAP response timeout for 802.1X authentication.

**Syntax** `dot1x timeout supp-timeout seconds`

`no dot1x timeout supp-timeout`

**Command Default** 30 seconds

**Parameters** *seconds*

Specifies the number of seconds that the switch waits for a response to the EAP frame. Valid values range from 1 through 65535.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command sets the time in seconds that a switch waits for a response to an Extensible Authentication Protocol (EAP) request frame from the client before resending the request.

Enter **no dot1x timeout supp-timeout** to return to the default setting.

**Examples** To set 45 seconds as the switch-to-client retransmission time for the EAP request frame on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/8
switch(conf-if-te-178/0/8)# dot1x timeout supp-timeout 45
```

To set the switch-to-client retransmission time for the EAP request frame to the default value on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 190/0/16
switch(conf-if-fo-190/0/16)# no dot1x timeout supp-timeout
```

**Related Commands** [dot1x timeout re-authperiod](#), [dot1x timeout server-timeout](#), [dot1x timeout tx-period](#), [interface](#)

## dot1x timeout tx-period

Sets the time the switch waits for a response to an Extensible Authentication Protocol (EAP) request or identity frame.

**Syntax** `dot1x timeout tx-period seconds`

`no dot1x timeout tx-period`

**Command Default** 30 seconds

**Parameters** *seconds*

Specifies the time between successive request ID attempts. Valid values range from 1 through 65535 seconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command sets the interval between successive attempts to request an ID (EAP ID Req) or identity frame from the client.

Enter **no dot1x timeout tx-period** to return to the default settings.

**Examples** To set 34 as the number of seconds to wait for a response to an EAP-request or identity frame from the client before retransmitting the request on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 190/0/16
switch(conf-if-te-190/0/16)# dot1x timeout tx-period 34
```

To set the interval between successive attempts to request an ID (EAP ID Req) to the default value on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 180/0/8
switch(conf-if-fo-180/0/8)# no dot1x timeout tx-period
```

**Related Commands** [dot1x timeout re-authperiod](#), [dot1x timeout server-timeout](#), [dot1x timeout supp-timeout](#), [interface](#)

# dpod

Manages Dynamic Ports on Demand (POD) assignments.

**Syntax** `dpod rbridge-id/slot/port { reserve | release }`

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a slot number.

*port*

Specifies a port number.

**reserve**

Reserves a POD assignment for a port that is currently not able to come online but is expected to be viable in the future. A port license assignment that is reserved will be associated with the first port set that has a vacancy.

**release**

Removes a port from the port set to which it is currently assigned.

**Modes** Global configuration mode

**Usage Guidelines** A port POD assignment can only be released if the port is currently offline. Enter **shutdown** to take the port offline.

Do not release a port unless you plan to disconnect the optical link or disable the port persistently. If the link (server or optical) is left in a state where the port could be brought online, the Dynamic POD mechanism will detect this unassigned port and attempt to reassign it to a port set.

This command has no effect on Brocade VDX 8770 switches.

In the Network OS v3.0.0 release this command is supported only on the local switch.

**Examples** To reserve a POD assignment:

```
switch(config)# dpod 0/10 reserve
switch(config-dpod-0/10)# exit
switch(config)# dpod 0/11 reserve
switch0(config-dpod-0/11)# exit
```

To remove a port from a POD port set:

```
switch(config)# dpod 5/0/10 release
switch(config-dpod-5/0/10)# exit
switch(config)# dpod 5/0/11 release
switch(config-dpod-5/0/11)# exit
```

**Related Commands** [show dpod](#), [show running-config dpod](#)

## dscp-cos

Specifies a user-defined mutation-map to be used on the port.

<b>Syntax</b>	<b>dscp-cos</b> <i>map_name</i>
<b>Parameters</b>	<i>map_name</i> The user-defined map-name.
<b>Modes</b>	Policy-map configuration mode
<b>Usage Guidelines</b>	This command is allowed only for the Ingress direction. This command can only be configured in for the <b>class class-default</b> command. This command can lead to a possible contradiction if there are other user-defined classes used in the same policy-map which has a set CoS action configured. In this case, defined CoS takes priority over the mutation map.
<b>Examples</b>	Typical command example:  <pre>switch(config)# policy-map mutation switch(config-policymap)# class class-default switch(config-policyclass)# dscp-cos plsmap</pre>
<b>Related Commands</b>	<a href="#">class</a> , <a href="#">policy-map</a>

# dscp-mutation

Specifies the dscp-mutation mutation-map to be used on the port.

**Syntax** `dscp-mutation map_name`

**Parameters** `map_name`  
The user-defined map-name.

**Modes** Policy-map configuration mode-

**Usage Guidelines** This command is allowed only for the ingress direction.  
This command can only be configured in for the **class class-default** command.  
This command can lead to a possible contradiction if there are other user-defined classes used in the same policy-map which has a set cos action configured. In this case-defined cos takes priority over the mutation map.

**Examples** Typical command example:

```
switch(config)#policy-map mutation
switch(config-policymap)#class class-default
switch(config-policyclass)# dscp-mutation plsmap
```

**Related Commands** [class](#), [policy-map](#)

## dscp-traffic-class

Specifies the traffic-class mutation-map to be used on the port.

<b>Syntax</b>	<b>dscp-traffic-class</b> <i>map_name</i>
<b>Parameters</b>	<b>map_name</b> The user-defined map-name.
<b>Modes</b>	Policy-map configuration mode
<b>Usage Guidelines</b>	This command is allowed only for the ingress direction. This command can only be configured in for the <b>class class-default</b> command. This command can lead to a possible contradiction if there are other user-defined classes used in the same policy-map which has a set cos action configured. In this case-defined cos takes priority over the mutation map.
<b>Examples</b>	Typical command example:  <pre>switch(config)#policy-map mutation switch(config-policymap)#class class-default switch(config-policyclass)# dscp-traffic-class plsmap</pre>
<b>Related Commands</b>	<a href="#">class</a> , <a href="#">policy-map</a>



# ebs

Configures the excess burst size of a class-map.

**Syntax** **ebs** *ebs-size*

**no ebs** *ebs-size*

**Parameters** **ebs-size**

Excess burst size. Valid values range from 1250 through 5000000000 bytes in increments of 1 byte.

**Modes** Policy-map class police configuration mode

**Usage Guidelines** Only the **police cir** and **cbs** commands are mandatory for configuring a class-map.

If the optional parameters for a class-map are not set, they are treated as disabled. To delete parameters for a class-map, you must delete all policer parameters while in the policy-map class configuration mode using the **no police cir** command.

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

Use the **no** version of this command to remove the parameter from the class-map.

**Examples** This example configures a class-map called "default" within a policy-map.

```
switch# configure terminal
switch(config)# policy-map policymap1
switch(config-policymap)# class default
switch (config-policymap-class)# police cir 40000
switch(config-policymap-class-police)# ebs 400000
```

**Related Commands** [cbs](#), [conform-set-dscp](#), [conform-set-prec](#), [conform-set-tc](#), [eir](#), [exceed-set-dscp](#), [exceed-set-prec](#), [exceed-set-tc](#), [police cir](#), [police-priority-map](#), [policy-map](#), [qos cos](#), [service-policy](#), [set-priority](#)

## edge-loop-detection port-priority

Sets the ELD priority for a port.

**Syntax** `edge-loop-detection port-priority eld-priority`

`no edge-loop-detection port-priority`

**Command Default** ELD priority is 128.

**Parameters** *eld-priority*

Specifies the port priority. Valid values range from 0 through 256; a higher number indicates a lower priority.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The ELD priority determines which of the ports involved in a loop will be disabled when the pdu-rx-limit for the Brocade VCS Fabric cluster is reached. The port with the lower priority (higher ELD-priority setting) is the port that is selected to be disabled.

---

### NOTE

If ELD must select between two ports with the same priority, ELD selects the port with the higher port ID to be disabled.

---

This command applies only in Brocade VCS Fabric mode.

You must use **edge-loop-detection** to enable edge-loop detection separately on the port for the ELD priority to be effective.

Enter **no edge-loop-detection port-priority** to return to the default setting.

**Examples** To set the ELD priority of a specific 10-gigabit Ethernet interface port:

```
switch(config)# interface tengigabitethernet 5/0/10
switch(cfg-if-te-5/0/10)# edge-loop-detection port-priority 5
```

To restore the default ELD priority of 128 to a specific 40-gigabit Ethernet interface port:

```
switch(config)# interface fortygigabitethernet 8/1/12
switch(cfg-if-fo-8/1/12)# no edge-loop-detection port-priority
```

**Related Commands** [clear edge-loop-detection](#), [edge-loop-detection vlan](#), [hello-interval](#), [interface](#), [pdu-rx-limit](#), [show edge-loop-detection globals](#), [show edge-loop-detection interface](#), [show edge-loop-detection rbridge-id](#), [shutdown-time](#)

## edge-loop-detection vlan

Enables edge-loop detection (ELD) on a port and VLAN.

**Syntax** `edge-loop-detection vlan vlan-ID`  
`no edge-loop-detection vlan vlan-ID`

**Command Default** Edge-loop detection is disabled.

**Parameters** `vlan vlan-ID`  
 Specifies a VLAN. (Refer to the Usage Guidelines.)t.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use the VLAN parameter to specify a VLAN and port on which to enable edge-loop detection. The port must be a member of the specified VLAN or the command returns an error.

This command applies to Brocade VCS Fabric mode only.

This functionality detects Layer 2 loops only.

Enter **no edge-loop-detectionvlan *vlan\_id*** to disable edge-loop detection on the specified VLAN.

**Examples** To enable edge-loop detection on VLAN 10 for a specific 10-gigabit Ethernet interface port:

```
switch(config)# interface tengigabitethernet 1/0/7
switch(conf-if-te-1/0/7)# edge-loop-detection vlan 10
```

To disable edge-loop detection on a specific 1-gigabit Ethernet interface port and a VLAN whose ID is 20:

```
switch(config)# interface gigabitethernet 170/1/9
switch(conf-if-gi-170/1/9)# no edge-loop-detection vlan 20
```

**Related Commands** [clear edge-loop-detection](#), [edge-loop-detection port-priority](#), [hello-interval](#), [interface](#), [show edge-loop-detection globals](#), [shutdown-time](#)

## eir

Configures the excess information rate for a class-map.

<b>Syntax</b>	<b>eir</b> <i>eir-rate</i>  <b>no eir</b> <i>eir-rate</i>
<b>Parameters</b>	<b>eir-rate</b>  Excess information rate. Valid values range from 0 through 40000000000 bps in multiples of 40000.
<b>Modes</b>	Policy-map class police configuration mode
<b>Usage Guidelines</b>	Only the <b>police cir</b> and <b>cbs</b> commands are mandatory for configuring a class-map.  If the optional parameters for a class-map are not set, they are treated as disabled. To delete parameters for a class-map, you must delete all policer parameters while in the policy-map class configuration mode using the <b>no police cir</b> command.  This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.  Use the <b>no</b> version of this command to remove the parameter from the class-map.
<b>Examples</b>	This example configures a class-map called "default" within a policy-map.  <pre>switch# configure terminal switch(config)# policy-map policymap1 switch(config-policymap)# class default switch (config-policymap-class)# police cir 40000 switch(config-policymap-class-police)# eir 800000</pre>
<b>Related Commands</b>	<a href="#">cbs</a> , <a href="#">conform-set-dscp</a> , <a href="#">conform-set-prec</a> , <a href="#">conform-set-tc</a> , <a href="#">ebs</a> , <a href="#">exceed-set-dscp</a> , <a href="#">exceed-set-dscp</a> , <a href="#">exceed-set-tc</a> , <a href="#">police cir</a> , <a href="#">police-priority-map</a> , <a href="#">policy-map</a> , <a href="#">qos cos</a> , <a href="#">service-policy</a> , <a href="#">set-priority</a>

# enable

Enables a VRRP-E session.

**Syntax**    **enable**  
**no enable**

**Modes**    Virtual-router-group configuration mode

**Usage Guidelines**    Use the **no** form of this command to disable a VRRP-E session.

**Examples**    To enable a VRRP-E session on VRRP-E group 10 on interface Ve 25:

```
switch(config)# rbridge-id 101
switch(config-rbridge-id-101)# int ve 25
switch(config-ve-25)# vrrp-extended-group 10
switch(config-vrrp-extended-group-10)# enable
```

**Related Commands**    [vrrp-extended-group](#), [vrrp-group](#)

## enable (Fabric-Virtual-Gateway)

Enables IPv4 or IPv6 Fabric-Virtual-Gateway sessions in VCS.

<b>Syntax</b>	<b>enable</b>  <b>no enable</b>				
<b>Command Default</b>	A session under the global VE interface is enabled.				
<b>Modes</b>	Fabric-Virtual-Gateway address-family configuration mode Fabric-Virtual-Gateway under VE interface IPv4 or IPv6 configuration mode Fabric-Virtual-Gateway on an RBridge VE interface IPv4 or IPv6 configuration mode				
<b>Usage Guidelines</b>	Enter the <b>no</b> form of the command to disable a specific IPv4 or IPv6 Fabric-Virtual-Gateway session. The session can be enabled at the RBridge-level even if it is disabled at global level.				
<b>Examples</b>	<p>The following example shows how to enable a Fabric-Virtual-Gateway session in Fabric-Virtual-Gateway address-family configuration mode.</p> <pre>switch(config)# router fabric-virtual-gateway switch(config-router-fabric-virtual-gateway)# address-family ipv4 switch(config-address-family-ipv4)# enable</pre> <p>The following example shows how to enable a Fabric-Virtual-Gateway session in Fabric-Virtual-Gateway in VE interface IPv4 configuration mode.</p> <pre>switch(config)# interface ve 2000 switch(config-ve-2000)# ip fabric-virtual-gateway switch(config-ip-fabric-virtual-gw)# enable</pre> <p>The following example shows how to enable a Fabric-Virtual-Gateway session in Fabric-Virtual-Gateway on an RBridge VE interface IPv6 configuration mode.</p> <pre>switch(config)# rbridge-id 55 switch(config-rbridge-id-55)# interface ve 2000 switch(config-rbridge-ve-2000)# ipv6 fabric-virtual-gateway switch(config-ipv6-fabric-virtual-gw)# enable</pre>				
<b>History</b>	<table border="1"> <thead> <tr> <th>Release version</th> <th>Command history</th> </tr> </thead> <tbody> <tr> <td>5.0.1</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release version	Command history	5.0.1	This command was introduced.
Release version	Command history				
5.0.1	This command was introduced.				

# enable statistics direction

Enables the collection of per-VLAN statistics for VXLAN overlay gateway tunnels.

**Syntax** `enable statistics direction { both | tx | rx } vlan [ add | remove ] vlan_id`

**no enable statistics**

**Parameters** **both**

Specifies the collection of statistics for both the receive and transmit directions.

**rx**

Specifies the collection of statistics for the receive direction.

**tx**

Specifies the collection of statistics for the transmit direction.

**vlan**

Specifies a VLAN or range of VLANs to be added or removed for statistics collection.

**add**

Enables statistics collection on a VLAN ID or range of VLAN IDs. You can use this option if you have disabled specific VLAN IDs and now want to re-enable them.

**remove**

Disables statistics collection on a VLAN ID or range of VLAN IDs.

**vlan\_id**

A VLAN ID or range of VLAN IDs. The range is from 1 through 4090. See the Usage Guidelines.

**Modes** VXLAN overlay gateway configuration mode

**Usage Guidelines** This configuration enables per-VLAN statistics collection for the packets sent and received over the tunnels associated with this gateway instance.

The specified VLAN IDs must already be configured.

If you remove all VLAN IDs from statistics collection, statistics collection becomes disabled and the **remove** option does not appear in the command line interface of the running configuration.

The only way to change the direction once you have executed this command is to enter the **no enable statistics** command, then re-enter the **enable statistics direction** command

The **no** form of this command disables per-VLAN statistics collection for this gateway.

You cannot delete an attached VLAN if statistics collection is enabled on that VLAN.

**Examples** To enable statistics collection for all VXLAN tunnels in both directions for VLAN IDs 10 and 20 through 30:

```
switch# configure
switch(config)# overlay-gateway gateway1
switch(config-overlay-gw-gateway1)# enable statistics direction both vlan 10, 20-30
```

**Related Commands** [overlay-gateway](#)

end

## end

Returns to the Privileged EXEC command mode from all configuration modes.

**Syntax** `end`

**Modes** All configuration modes

**Examples** To return to the Privileged EXEC mode from interface configuration mode:

```
switch(config)# interface tengigabitethernet 0/0
switch(conf-if-te-0/0)# end
```

**Related  
Commands** [exit](#), [interface](#)



## enforce-first-as

Enforces the use of the first autonomous system (AS) path for external BGP (EBGP) routes.

**Syntax**    **enforce-first-as**

**no enforce-first-as**

**Command Default**    This option is disabled.

**Modes**            BGP configuration mode

**Usage Guidelines**    This command causes the router to discard updates received from EGBP peers that do not list their AS number as the first AS path segment in the AS\_PATH attribute of the incoming route.

Use the **no** form of this command to restore the default.

**Examples**          To configure the device to enforce the use of the first AS path:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# enforce-first-as
```

## error-disable-timeout enable

Enables the timer to bring the interface out of the error-disabled state.

<b>Syntax</b>	<b>error-disable-timeout enable</b>
<b>Modes</b>	Protocol Spanning Tree configuration mode
<b>Usage Guidelines</b>	<p>When the Spanning Tree Protocol (STP) Bridge Protocol Data Unit (BPDU) guard disables a port, the port remains in the disabled state unless the port is enabled manually. This command allows you to enable the interface from the disabled state.</p> <p>If xSTP is enabled over VCS, this command must be executed on all the RBridge nodes.</p>
<b>Examples</b>	<p>To bring the interface out of the disabled state:</p> <pre>switch(conf-rstp)# error-disable-timeout enable</pre>
<b>Related Commands</b>	<a href="#">error-disable-timeout interval</a>

## error-disable-timeout interval

Sets the timeout for errors on an interface.

**Syntax** `error-disable-timeout interval seconds`

`no error-disable-timeout interval`

**Command Default** 300 seconds

The timeout feature is disabled.

**Parameters** *seconds*

Specifies the time for the interface to time out. Valid values range from 10 through 1000000 seconds.

**Modes** Protocol Spanning Tree configuration mode

**Usage Guidelines** If xSTP is enabled over VCS, this command must be executed on all the RBridge nodes.

Enter `no error-disable-timeout interval` to return to the default setting.

**Examples** To set the timeout value to 10 seconds:

```
switch(conf-rstp)# error-disable-timeout interval 10
```

**Related Commands** [error-disable-timeout enable](#)

## exceed-set-dscp

Configures the CIR packet IP precedence of a class-map.

**Syntax** `exceed-set-dscp dscp-num`

`no exceed-set-dscp dscp-num`

**Parameters** `dscp-num`

Specifies that traffic with bandwidth requirements that exceed the rate configured for CIR and sent to the EIR bucket will have packet IP precedence set to the value in the dscp-num variable. Valid values are 0 through 7.

**Modes** Policy-map class police configuration mode

**Usage Guidelines** Only the **police cir** and **cbs** commands are mandatory for configuring a class-map.

If the optional parameters for a class-map are not set, they are treated as disabled. To delete parameters for a class-map, you must delete all policer parameters while in the policy-map class configuration mode using the **no police cir** command.

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

Use the **no** version of this command to remove the parameter from the class-map.

**Examples** Example of setting this parameter.

```
switch(config-policymap)# class default
switch (config-policymap-class)# police cir 40000
switch(config-policymap-class-police)# exceed-set-dscpc 4
```

**Related Commands** [cbs](#), [conform-set-dscp](#), [conform-set-prec](#), [conform-set-tc](#), [ebs](#), [eir](#), [exceed-set-prec](#), [exceed-set-tc](#), [police cir](#), [police-priority-map](#), [policy-map](#), [qos cos](#), [service-policy](#), [set-priority](#)

## exceed-set-prec

Configures the CIR packet IP precedence of a class-map.

**Syntax** `exceed-set-prec prec-num`

`no exceed-set-prec prec-num`

**Parameters** `prec-num`

Specifies that traffic with bandwidth requirements that exceed the rate configured for CIR and sent to the EIR bucket will have packet IP precedence set to the value in the `prec-num` variable. Valid values are 0 through 7.

**Modes** Policy-map class police configuration mode

**Usage Guidelines** Only the **police cir** and **cbs** commands are mandatory for configuring a class-map.

If the optional parameters for a class-map are not set, they are treated as disabled. To delete parameters for a class-map, you must delete all policer parameters while in the policy-map class configuration mode using the **no police cir** command.

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

Use the **no** version of this command to remove the parameter from the class-map.

**Examples** Example of setting this parameter.

```
switch(config-policymap)# class default
switch (config-policymap-class)# police cir 40000
switch(config-policymap-class-police)# exceed-set-prec 4
```

**Related Commands** [cbs](#), [conform-set-dscp](#), [conform-set-prec](#), [conform-set-tc](#), [ebs](#), [eir](#), [exceed-set-dscp](#), [exceed-set-tc](#), [police cir](#), [police-priority-map](#), [policy-map](#), [qos cos](#), [service-policy](#), [set-priority](#)

## exceed-set-tc

Configures the queue assignment of the *trafficclass* variable for a class-map.

**Syntax** `exceed-set-tc trafficclass`

`no exceed-set-tc trafficclass`

**Parameters** *trafficclass*

Specifies that traffic with bandwidth requirements that exceed the rate configured for CIR and is in the limit of what is configured for EIR will have its traffic class (internal queue assignment) set to the value in the *trafficclass* variable. Valid values are 0 through 7.

**Modes** Policy-map class police configuration mode

**Usage Guidelines** Only the **police cir** and **cbs** commands are mandatory for configuring a class-map.

If the optional parameters for a class-map are not set, they are treated as disabled. To delete parameters for a class-map, you must delete all policer parameters while in the policy-map class configuration mode using the **no police cir** command.

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

Use the **no** version of this command to remove the parameter from the class-map.

**Examples** Example of setting this parameter.

```
switch(config-policymap)# class default
switch (config-policymap-class)# police cir 40000
switch(config-policymap-class-police)# exceed-set-tc 4
```

**Related Commands** [cbs](#), [conform-set-dscp](#), [conform-set-prec](#), [conform-set-tc](#), [ebs](#), [eir](#), [exceed-set-dscp](#), [exceed-set-prec](#), [police cir](#), [police-priority-map](#), [policy-map](#), [qos cos](#), [service-policy](#), [set-priority](#)

# exit

Exits the current mode and returns to the previous mode.

**Syntax** `exit`

**Modes** All command modes

**Usage Guidelines** When used in EXEC and Privileged EXEC modes, the **exit** command terminates the session.

**Examples** To exit the Interface configuration mode, and return to the global configuration mode:

```
switch(config)# interface tengigabitethernet 0/1
switch(conf-if-te-0/1)# exit
switch(config)# exit
```

**Related  
Commands** [enable](#), [interface](#)

## extend vlan

Configures switchport VLANs for the tunnels to the containing site in VXLAN overlay gateway configurations.

<b>Syntax</b>	<b>extend vlan { add   remove } <i>vlan_id</i></b>  <b>no extend vlan</b>
<b>Parameters</b>	<p><b>add</b> Specifies a VLAN ID or range of VLAN IDs to be added to a tunnel.</p> <p><b>remove</b> Specifies a VLAN ID or range of VLAN IDs to be removed from a tunnel.</p> <p><b><i>vlan_id</i></b> A VLAN ID or range of VLAN IDs. See the Usage Guidelines.</p>
<b>Modes</b>	VXLAN overlay gateway site configuration mode
<b>Usage Guidelines</b>	<p>The VXLAN Network Identifier (VNI) classification is derived from the "map vlan" configuration of the parent overlay gateway. This command results in the provisioning or unprovisioning of the VLANs. Use the <b>no extend vlan <i>vlan_id</i></b> command to unprovision a VLAN.</p> <p>All of the VLAN IDs that are specified must be VLANs that have been mapped by means of the <b>map vlan <i>vlan_id</i> vni <i>vni</i></b> command on the parent overlay gateway, unless automatic VNI mapping has been enabled by means of the <b>map vlan vni auto</b> command.</p> <p>Use the <b>no attach vlan <i>vlan_id</i></b> command to remove all switchport configurations from the tunnels to the containing site.</p>
<b>Examples</b>	<p>Use the <b>no attach vlan <i>vlan_id</i></b> command to remove all switchport configurations from the tunnels to the containing</p> <p>To configure a switchport VLAN and range of VLANs:</p> <pre>switch(config)# overlay-gateway gateway1 switch(config-overlay-gw-gateway1)# site mysite switch(config-overlay-gw-gateway1-site-mysite)# extend vlan add 10,20-30</pre>
<b>Related Commands</b>	<a href="#">interface vlan</a> , <a href="#">map vlan</a> , <a href="#">overlay-gateway</a> , <a href="#">site</a>



## external-lsdb-limit (OSPF)

Configures the maximum size of the external link state database (LSDB).

**Syntax** `external-lsdb-limit value`

`no external-lsdb-limit`

**Command Default** 14913080

**Parameters** *value*

Maximum size of the external LSDB. The maximum allowed value is 14913080.

**Modes** OSPF VRF router configuration mode

**Usage Guidelines** If you change the value, make sure to save the running-config file and reload the software. The change does not take effect until you reload or reboot the software.

Enter **no external-lsdb-limit** to return to the default setting.

**Examples** To set the limit of the LSDB to 20000:

```
switch# configure
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)#router ospf
switch(config-router-ospf-vrf-default-vrf)# external-lsdb-limit 20000
```

**Related Commands** [database-overflow-interval \(OSPF\)](#)

## external-lsdb-limit (OSPFv3)

Configures the maximum size of the external link state database (LSDB).

**Syntax** `external-lsdb-limit value`

`no external-lsdb-limit`

**Command Default** 250000

**Parameters** *value*

Maximum size of the external LSDB. The maximum allowed value is 250000.

**Modes** OSPFv3 VRF router configuration mode

**Usage Guidelines** If you change the value, you must save the running-config file and reload the software. The change does not take effect until you reload or reboot the software.

Enter **no external-lsdb-limit** to return to the default setting.

**Examples** To set the limit of the LSDB to 15000:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ipv6 router ospf
device(config-ipv6-router-ospf-vrf-default-vrf)# external-lsdb-limit 15000
```

### History

Release version	Command history
5.0.0	This command was introduced.

### Related Commands

[database-overflow-interval \(OSPFv3\)](#)

# Commands F through O

---

## fabric ecmp load-balance

Configures the list of hashing fields.

**Syntax** `fabric ecmp load-balance [ dst-mac-vid | src-dst-ip | src-dst-ip-mac-vid | src-dst-ip-mac-vid-port | src-dst-ip-port | src-dst-mac-vid | src-mac-vid ]`

**Parameters** `dst-mac-vid`

Configures the command to use destination MAC address and VID-based load balancing.

`src-dst-ip`

Configures the command to use source and destination IP address-based load balancing.

`src-dst-ip-mac-vid`

Configures the command to use source and destination IP and MAC address and VID-based load balancing.

`src-dst-ip-mac-vid-port`

Configures the command to use source and destination IP, MAC address, VID and TCP/UDP port-based load balancing.

`src-dst-ip-port`

Configures the command to use source and destination IP and TCP/UDP port-based load balancing.

`src-dst-mac-vid`

Configures the command to use source and destination MAC address and VID-based load balancing.

`src-mac-vid`

Configures the command to use source MAC address and VID-based load balancing.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use this command to configure the list of fields (in the incoming packets), used for hashing.

**Examples** To set the ECMP load balance to use source and destination IP address-based load balancing:

```
switch(config)# rbridge-id 2
switch(config-rbridge-id-2)# fabric ecmp load-balance src-dst-ip
```

## fabric ecmp load-balance-hash-swap

Configures how to swap the input fields for load balancing.

**Syntax** `fabric ecmp load-balance-hash-swap value`

**Parameters** *value*

The control value. Valid values range from 0x0 through 0xFFFFFFFF.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use this command to swap the input fields before feeding them to the hash function.

The variable value for this command is interpreted as the bitwise control of the 212-bit key. Each bit controls whether 2 adjacent bits of the key are to be swapped. This 32-bit control value is written to all four hash swap control registers. This means that this value is replicated in a 32-bit block to form a 106-bit value. A value of 0x0 does not swap any input fields, while a value of 0xffffffff swaps all 106 input bit-pairs.

**Related Commands** [fabric ecmp load-balance](#)

# fabric isl enable

Enables and disables the administration and operational state of an Inter-Switch Link (ISL).

**Syntax** **fabric isl enable**

**no fabric isl enable**

**Command Default** ISL ports are enabled persistently.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command functions in Brocade VCS Fabric mode only.

No edge port configuration is allowed on an ISL. If the port is connected to another switch when this command is issued, the fabric may reconfigure.

Enter **no fabric isl enable command** to disable the administration and operational state of an inter-switch link (ISL).

When an RBridge is rejoining the logical chassis cluster, the interface-level configuration is reset to the default values.

**Examples** To enable the administration and operational state of an ISL on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 1/0/18
switch(config-if-te-1/0/18)# fabric isl enable
```

To disable the administration and operational state of an ISL on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 1/1/15
switch(config-if-fo-1/1/15)# no fabric isl enable
```

**Related Commands** [interface](#), [diag setcycle](#), [show diag burninstatus](#)

## fabric neighbor-discovery disable

Disables neighbor discovery for Brocade devices on a per-interface basis.

**Syntax**    **fabric neighbor-discovery disable**

**no fabric neighbor-discovery**

**Command Default**    Neighbor discovery is enabled by default.

**Modes**            Interface subtype configuration mode

**Usage Guidelines**    This command functions in Brocade VCS Fabric mode only.  
                          Use the **no** form of this command to reenable neighbor discovery on this interface.

**Examples**          To disable neighbor discovery on a specified tengigabitethernet interface:

```
switch# configure
switch(config)# interface tengigabitethernet 1/0/18
switch(config-if-te-1/0/18)# fabric neighbor-discovery disable
```

# fabric port-channel

Configures the list of hashing fields for balancing the data load on port-channels.

**Syntax** `fabric port-channel port_channel_value load-balance [ dst-mac-vid | src-dst-ip | src-dst-ip-mac-vid | src-dst-ip-mac-vid-port | src-dst-ip-port | src-dst-mac-vid | src-mac-vid ]`

**Parameters** `port_channel_value`

Configures the command to use destination MAC address and VID-based load balancing.

**load-balance**

Configures the command to use destination MAC address and VID-based load balancing.

**dst-mac-vid**

Configures the command to use destination MAC address and VID-based load balancing.

**src-dst-ip**

Configures the command to use source and destination IP address-based load balancing.

**src-dst-ip-mac-vid**

Configures the command to use source and destination IP and MAC address and VID-based load balancing.

**src-dst-ip-mac-vid-port**

Configures the command to use source and destination IP, MAC address, VID and TCP/UDP port-based load balancing.

**src-dst-ip-port**

Configures the command to use source and destination IP and TCP/UDP port-based load balancing.

**src-dst-mac-vid**

Configures the command to use source and destination MAC address and VID-based load balancing.

**src-mac-vid**

Configures the command to use source MAC address and VID-based load balancing.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use this command to configure the list of fields (in the incoming packets), used for balancing the load on port-channels.

**Examples** To set the port-channel load balance to use both source and destination IP address-based load balancing:

```
switch(config)# rbridge-id 2
switch(config-rbridge-id-2)# fabric port-channel 10 load-balance src-dst-ip
```

**History**

**Release version**

**Command history**

4.0.0

This command was introduced.

## fabric route mcast

Sets the multicast priority for the local RBridge in the fabric.

**Syntax** **fabric route mcast rbridge-id** *rbridge-id* **priority** *priority*

**Command Default** Priority is 1.

**Parameters** **rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**priority**

Sets a priority. The highest priority overrides the lowest RBridge ID and becomes the root.

**priority**

Specifies the priority number of the RBridge.

**Modes** Global configuration mode

**Usage Guidelines** The multicast routing information indicates all ports that are members of the multicast distribution tree: ports that are able to send and receive multicast frames. The root of the tree is auto-selected as the switch with the lowest RBridge ID.

**Examples** To change an RBridge multicast priority:

```
switch(config)# fabric route mcast rbridge-id 45 priority 5
switch(config)# exit
switch# show running-config fabric route mcast rbridge-id 45 priority
fabric route mcast rbridge-id 45 priority 5
```

**Related Commands** [show fabric route multicast](#), [show fabric route topology](#), [show running-config fabric route mcast](#)



# fabric trunk enable

Enables and disables trunking on a port.

**Syntax** **fabric trunk enable**

**no fabric trunk enable**

**Command Default** Fabric trunking is enabled.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enabling trunking requires an ISL trunking license. You can disable trunking without a license.

This command functions in Brocade VCS Fabric mode only.

ISLs are not allowed on breakout ports.

When the command is executed to update the trunking configuration, the port to which the configuration applies is disabled and subsequently re-enabled with the new trunking configuration. Traffic through the ports may be temporarily disrupted. Enter **no fabric trunk enable** command to disable trunking on a port.

When an RBridge is rejoining the logical chassis cluster, the interface-level configuration is reset to the default values.

---

## NOTE

Trunks are not supported between Brocade 8000 and Brocade VDX 8770 switches.

---

**Examples** To enable a port for trunking on a specific 10-gigabit Ethernet interface port:

```
switch(config)# interface tengigabitethernet 1/0/18
switch(config-if-te-1/0/18)# fabric trunk enable
```

To disable a port for trunking on a specific 40-gigabit Ethernet interface port:

```
switch(config)# interface fortygigabitethernet 8/10/15
switch(config-if-fo-8/10/15)# no fabric trunk enable
```

**Related Commands** [interface](#), [show fabric trunk](#)

## fabric-map

Enables FCoE fabric-map configuration mode. An FCOE fabric-map is equivalent to an FC Virtual-Fabric.

**Syntax** **fabric-map default**

**Modes** FCoE configuration mode

**Usage Guidelines** The only map name allowed is "default."

You must be in the feature configuration mode for FCoE for this command to function.

**Examples**

```
switch(config)# fcoe
switch(config-fcoe)# fabric-map default
switch(config-fcoe-fabric-map)#
```

**Related  
Commands** [fcoe](#)

# fast-external-fallover

Resets the session if a link to an EBGP peer goes down.

**Syntax**    **fast-external-fallover**  
**no fast-external-fallover**

**Command Default**    This option is disabled.

**Modes**    BGP configuration mode

**Usage Guidelines**    Use this command to terminate and reset external BGP sessions of an directly adjacent peer if the link to the peer goes down, without waiting for the timer, set by the BGP **timers** command, to expire. This can improve BGP convergence time, but can also lead to instability in the BGP routing table as a result of a flapping interface.

Use the **no** form of this command to restore the default.

**Examples**    To configure the device to reset the session if a link to an EBGP peer goes down:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# fast-external-fallover
```

**Related  
Commands**    [timers \(BGP\)](#)

# fastboot

Reboots the control processor (CP), bypassing the power-on self-tests (POST).

**Syntax** **fastboot**

**Modes** Privileged EXEC mode

**Usage Guidelines** This command performs a "cold reboot" (power off and restart) of the control processor, bypassing POST when the system comes back up. Bypassing POST can reduce boot time significantly.

The **fastboot** operation is disruptive, and the command prompts for confirmation before executing. When you reboot a switch connected to a fabric, all traffic to and from that switch stops. All ports on that switch remain inactive until the switch comes back online.

On a modular chassis, the **fastboot** commands only reboots the management module on which the command is executed. If you log in to the switch IP address and execute the fastboot command, only the active management module reboots and POST is bypassed.

**Examples** To perform a cold reboot on the switch:

```
switch# fastboot
Are you sure you want to fastboot the switch [y/n]?: y
```

**Related  
Commands** [reload](#)

# fcmap

Configures the FPMA FCMAP value for an FCoE fabric-map.

**Syntax** `fcmap hh:hh:hh`

**Command Default** The FPMA FCMAP value is 0E:FC:00.

**Parameters** `hh:hh:hh`

A valid FPMA FCMAP value. Valid values range from 0E:FC:00 through 0E:FC:FF.

**Modes** FCoE fabric-map configuration mode

**Usage Guidelines** You must be in the feature configuration mode for FCoE fabric-map for this command to function.

**Examples**

```
switch# configuration terminal
switch(config)# fcoe
switch(config-fcoe)# fabric-map default
switch(config-fcoe-fabric-map)# fcmap 0E:FC:00
```

**Related Commands** [fcoe, fabric-map](#)

## fcoe

Enables the FCoE configuration mode.

**Syntax** **fcoe**

**Modes** Global configuration mode

**Examples**

```
switch(config)# fcoe
switch(config-fcoe)#
```

**Related  
Commands** [fabric-map](#)

## fcoe-enodes

Sets the number of FCoE ENodes that are to be created on a switch.

**Syntax** `fcoe-enodes number`

`no fcoe-enodes`

**Command Default** The default value is 64.

**Parameters** *number*

The number of FCoE interfaces. The range is from 0 through 1000.

**Modes** RBridge ID configuration mode

FCoE configuration mode

**Usage Guidelines** This feature requires an FCoE license. If that license is not present, the number of FCoE ENodes created is 0. When that license is removed, it is recommended that the switch be rebooted. The number of FCoE ENodes created is set to 0 and all interfaces are deleted.

**Examples** To set the number of FCoE ENodes to be created to 67:

```
switch(config)# rbridge-id 10
sw0(config-rbridge-id-10)# fcoe
sw0(config-rbridge-fcoe)# fcoe-enodes 67
2013/08/16-09:59:11, [FCOE-1035], 9267, DCE, INFO, sw0, Virtual FCoE port 1/19/65 is
online.
2013/08/16-09:59:11, [FCOE-1035], 9268, DCE, INFO, sw0, Virtual FCoE port 1/19/66 is
online.
2013/08/16-09:59:11, [FCOE-1035], 9269, DCE, INFO, sw0, Virtual FCoE port 1/19/67 is
online.
sw0(config-rbridge-fcoe)#
```

## fcoe-profile (AMPP)

Activates the FCoE profile configuration mode for AMPP.

**Syntax** **fcoe-profile**

**Modes** Port-profile configuration mode

**Usage Guidelines** The only fcoe-profile name allowed is "default".

The FCoE profile configuration mode for AMPP allows configuration of the FCoE attributes of a port-profile.

**Examples**

```
switch(config)# port-profile default
switch(config-port-profile-default)# fcoe-profile
switch(config-fcoe-profile)# fcoeport default
```



# fcoeport

Provisions a port with the default FCoE map.

**Syntax** **fcoeport** *map*

**no fcoeport**

**Parameters** *map*

This must be **default** .

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use this command to configure a specific port to be an FCoE port with the assigned map name **default**. The only map name allowed is **default**.

Enter **no fcoeport** to remove the FCoE port configuration from the applicable port.

**Examples** To provision a specific 10-gigabit Ethernet interface port with the default FCoE map:

```
switch(config)# interface tengigabitethernet 101/0/1
switch(conf-if-te-101/0/1)# fcoeport default
```

**Related  
Commands** [interface](#)

## fcsp auth

Configures the protocol specific parameters.

<b>Syntax</b>	<b>fcsp auth auth-type dh-chap group { 0   1   2   3   4   * } hash { sha1   md5   all } policy switch { on   off   active   passive }</b>
<b>Parameters</b>	<p><b>auth-type dh-chap</b> Authentication type is DH-CHAP.</p> <p><b>group</b> Specifies the DH group value. This parameter sets the strength of the secret. Values are 0, 1, 2, 3, 4 or *. The asterisk (*) indicates all values (0 through 4). The default value is *.</p> <p><b>hash</b> Specifies the hash type used for authentication. Possible values are <b>sha1</b>, <b>md5</b>, or <b>all</b> (sha1 and md5). The default option is <b>all</b>.</p> <p><b>policy switch</b> Configures the switch authentication policy attribute. Values are <b>on</b>, <b>off</b>, <b>passive</b>, or <b>active</b>. The default switch policy is <b>passive</b>.</p>
<b>Modes</b>	<p>Global configuration mode</p> <p>RBridge ID configuration mode</p>
<b>Usage Guidelines</b>	<p>This command configures the authentication policy attributes and controls the policy behavior. The policy configuration includes protocol specific parameters such as authentication type, DH-group value, and hash type. It also defines whether the policy is enabled or disabled and how strictly it is enforced.</p> <p>The authentication policy can be set to any of these values:</p> <ul style="list-style-type: none"> <li>• ON — Strict authentication is enforced on all E-ports. The ISL goes down (port disable) if the connecting switch does not support the authentication or the policy is OFF. During switch initialization, authentication is initiated on all E-ports automatically. The authentication is initiated automatically during the E-port bring-up by fabric module. The authentication handshaking is completed before the switches exchange the fabric parameters (EFP) for E-port bring-up.</li> <li>• ACTIVE — In this policy, the switch is more tolerant and can be connected to a switch with any type of policy. During switch initialization, authentication is initiated on all E-ports, but the port is not disabled if the connecting switch does not support authentication or the authentication policy is OFF. The authentication is initiated automatically during the E_Port bring-up.</li> <li>• PASSIVE (default) — The switch does not initiate authentication, but participates in authentication if the connecting switch initiates authentication. The switch does not start authentication on E_Ports, but accepts the incoming authentication requests, and will not disable if the connecting switch does not support authentication or the policy is OFF.</li> <li>• OFF — The switch does not support authentication and rejects any authentication negotiation request from neighbor switch. A switch with the policy OFF should not be connected to a switch with policy ON, since the ON policy is strict and disables the port if any switch rejects the authentication. DH-CHAP shared secrets should be configured before switching on the policy from OFF state.</li> </ul> <p>After the authentication negotiation succeeds, the DH-CHAP authentication is initiated. If DH-CHAP authentication fails, the port is disabled. This behavior applies to all modes of the policy.</p> <p>Authentication policy configuration is not distributed across the cluster. The rbridge-id of the node should be used to configure protocol and policy configurations.</p>

## Examples

---

**NOTE**

This command is not distributed across the cluster. The RBridge ID of the node should be used to configure protocol and policy configurations.

---

To set only the authentication type:

```
switch(config)# rbridge-id 3
switch(config-rbridge-id-3)# fcsp auth auth-type dh-chap
```

To set only the hash type:

```
switch(config)# rbridge-id 2
switch(config-rbridge-id-2)# fcsp authhashsha1
```

To activate the device authentication policy:

```
switch(config)# rbridge-id 2
switch(config-rbridge-id-2)# fcsp authpolicy switch active
```

**Related  
Commands**

[fcsp auth-secret dhchap](#), [show fcsp auth-secret dh-chap](#), [show running-config fcsp auth](#)

## fcsp auth-secret dhchap

Sets the shared secret for DH CHAP authentication.

<b>Syntax</b>	<b>fcsp auth-secret dhchap node</b> <i>switch_wwn</i> <b>peer-secret</b> <i>secret_key</i> <b>local-secret</b> <i>secret_key</i> <b>no fcsp auth-secret dhchap node</b> <i>switch_wwn</i>
<b>Parameters</b>	<b>node</b> <i>switch_wwn</i> Specifies the world wide name (WWN) of the peer. <b>peer-secret</b> <i>secret_key</i> Specifies the secret of the peer that authenticates the peer to the local switch. <b>local-secret</b> <i>secret_key</i> Specifies the local secret that authenticates the local switch to the peer.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	The local and peer secret keys must be between 8 and 40 characters long. Only the following non-alphanumeric characters are valid for the secret key: @ \$ % ^ & * ( ) _ + - < > { } [ ] ; ' : This command is supported on the Brocade VDX 6740 and Brocade VDX 2740. Enter <b>no fcsp auth-secret dhchap node</b> <i>switch_wwn</i> to remove the DHCHAP authentication secrets from the data base, so that the switch with the given WWN cannot connect to the local switch.
<b>Examples</b>	To set the shared secret for DH-CHAP authentication: <pre>switch# fcsp auth-secret dhchap node 50:00:51:ed:2d:c0:1e:64 \peer-secret 12345678 local-secret 87654321</pre> To remove the DH-CHAP authentication secrets from the database: <pre>switch# no fcsp auth-secret dh-chap node 50:00:51:ed:2d:c0:1e:64 Shared secret successfully removed</pre>
<b>Related Commands</b>	<a href="#">fcsp auth</a> , <a href="#">show fcsp auth-secret dh-chap</a> , <a href="#">show running-config fcsp auth</a>

# fec-enable

Configures the state of the Forward Error Correction (FEC) on an interface port.

**Syntax**    **fec-enable**

**no fec-enable**

**Modes**    Interface configuration mode

**Usage Guidelines**    Use the no form of the command to disable FEC.

**Examples**    To configure FEC for an interface port.

```
switch(config)# interface fibre-channel 1/0/1
switch(conf-if-fi-1/0/1)# fec-enable
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## fill-word

Configures the link initialization and fill word primitives for an 8-Gbps Fibre Channel port.

<b>Syntax</b>	<b>fill-word { idle-idle   arbff-arbff   idle-arbff   aa-then-ia }</b>
<b>Command Default</b>	The <b>fill-word</b> value is <b>idle-idle</b> .
<b>Parameters</b>	<p><b>idle-idle</b> Sets IDLE mode for the link initialization and IDLE as the fill word.</p> <p><b>arbff-arbff</b> Sets ARB(ff) for the link initialization and ARB(ff) as the fill word,</p> <p><b>idle-arbff</b> Sets IDLE mode for the link initialization and ARB(ff) as the fill word,</p> <p><b>aa-then-ia</b> Attempts <b>arbff-arbff</b> first. If the attempt fails, goes into <b>idle-arbff</b> mode. The <b>aa-then-ia</b> mode is preferable as it captures more cases.</p>
<b>Modes</b>	Interface Fibre Channel configuration mode
<b>Usage Guidelines</b>	<p>By default, this command disables and re-enables the port and the port comes online with the new fill word setting.</p> <p>This command can be used only on Network OS platforms with Fibre Channel ports (Brocade VDX 6740), in Brocade VCS Fabric mode, and with the FCoE license installed.</p> <p>This command should be left at the default setting unless the remote port requires a specific setting for fill word.</p>
<b>Examples</b>	<p>To set the fill word Fibre Channel port attribute:</p> <pre>switch(config)# interface FibreChannel 7/0/2 switch(config-FibreChannel-7/0/2)# fill-word arbff-arbff</pre>
<b>Related Commands</b>	<a href="#">interface</a> , <a href="#">isl-r_rdy</a> , <a href="#">show running-config interface FibreChannel</a> , <a href="#">shutdown</a> , <a href="#">speed (Fibre Channel)</a> , <a href="#">trunk-enable</a> , <a href="#">vc-link-init</a>

## filter-change-update-delay

Sets a delay to change the delay in the filter-change status prompt from the default.

**Syntax** **filter-change-update-delay** *delay\_time*

**no filter-change-update-delay**

**Command Default** The default value is 10.

**Parameters** ***delay\_time***

The delay, in seconds, in the filter-change status prompt. Range is from 0 through 600.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Enter 0 (zero) or use the **no** form of this command to disable the timer.

## fips root disable

Permanently disables root access to a switch for compliance with Federal Information Processing Standards (FIPS).

<b>Syntax</b>	<b>fips root disable</b>
<b>Command Default</b>	Root access is enabled.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Use this command to disable root access to a switch permanently when preparing the switch for FIPS compliance. Refer to the <i>Network OS Administrator's Guide</i> for details about preparing a switch for FIPS compliance.</p> <p>Under normal operation, this command is hidden to prevent accidental use. Enter the <b>unhide fips</b> command with password "fibranne" to make the command available.</p> <p>This command applies only in fabric cluster mode. It can be issued only from a user account with the admin role assigned.</p>



### **CAUTION**

---

**Once root access is disabled, it cannot be re-enabled.**

---

**Examples** To disable root access to a switch:

```
switch# unhide fips
Password: *****
switch# fips root disable
This operation disables root account. Do you want to continue? [yes,NO] yes
```



## fips selftests

Enables Federal Information Processing Standards (FIPS) self tests which will be performed when the switch boots. If the tests run successfully, the switch comes up in the FIPS compliant state.

**Syntax** **fips selftests**

**Command Default** The switch operates in the non-FIPS compliant state.

**Modes** Privileged EXEC mode

**Usage Guidelines** The FIPS self tests include known answer tests (KATs) that exercise various features of FIPS algorithms and conditional tests that test the randomness of random number generators and check for signed firmware. These tests run when the switch boots. Successful completion of these tests places the switch into the FIPS-compliant state. If any test returns an error, the switch reboots and runs the tests again. Whether tests succeed or fail, you cannot return the switch to the non-FIPS compliant state.

Under normal operation, this command is hidden to prevent accidental use. Enter the **unhide fips** command with password "fibranne" to make the command available.

You typically use this command after disabling non-FIPS compliant features on the switch and configuring secure ciphers, but before zeroizing the switch with the **fips zeroize** command. These non-FIPS compliant features that must be disabled include Brocade VCS Fabric mode, the Boot PROM, root access, TACACS+ authentication, and the dot1x feature. Secure ciphers that must be configured are for the SSH protocol and (optionally) for the Lightweight Directory Access Protocol (LDAP) protocol. The **fips zeroize** command erases all critical security parameters and reboots the switch. Refer to *Network OS Administrator's Guide* for details about preparing a switch for FIPS compliance.

This command applies only in fabric cluster mode. It can be entered only from a user account with the admin role assigned.



### CAUTION

**This command should be used only by qualified personnel. Once a switch is in the FIPS-compliant state, you cannot return it to the non-FIPS compliant state.**

**Examples** To enable the FIPS self tests:

```
switch# unhide fips
Password: *****
switch# fips selftests
Self tests enabled
```

**Related Commands** [fips zeroize](#), [prom-access disable](#), [show prom-access](#), [unhide fips](#)

## fips zeroize

Removes all critical security parameters from a switch in readiness for compliance with Federal Information Processing Standards (FIPS) and reboots the switch.

<b>Syntax</b>	<b>fips zeroize</b>
<b>Command Default</b>	The switch operates in the non-FIPS compliant state.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>This command erases all critical security parameters from the switch in readiness for FIPS compliance including passwords, shared secrets, and private keys. This command also reboots the switch. If FIPS self tests are enabled and they run successfully during reboot, then the switch comes up in the FIPS-compliant mode. If the FIPS self tests return errors, the switch reboots and runs the tests again.</p> <p>Under normal operation, this command is hidden to prevent accidental use. Enter the <b>unhide fips</b> command with password "fibranne" to make the command available.</p> <p>Typical use of this command is after disabling non-FIPS compliant features, configuring secure ciphers, and enabling FIPS self tests with the <b>fips selftests</b> command. These non-FIPS compliant features that must be disabled include Brocade VCS Fabric mode, the Boot PROM, root access, TACACS+ authentication, and the dot1x feature. Secure ciphers that must be configured are for the SSH protocol and (optionally) for the Lightweight Directory Access Protocol (LDAP) protocol. Refer to the <i>Network OS Administrator's Guide</i> for details about preparing a switch for FIPS compliance.</p> <p>This command applies only in fabric cluster mode. This command can be entered only from a user account with the admin role assigned.</p>



### CAUTION

**This command should be used only by qualified personnel. Once a switch is in the FIPS-compliant state, you cannot return it to the non-FIPS compliant state.**

**Examples** To erase all critical security parameters from a switch:

```
switch# unhide fips
Password: *****
switch(config)# fips zeroize

This operation erases all passwords, shared secrets, private keys etc. on the switch.
Do you want to continue? [yes,NO] yes
```

### Related Commands

[fips selftests](#), [prom-access disable](#), [show prom-access](#), [unhide fips](#)

# firmware activate

Activates the firmware in the local or remote nodes after installing the firmware that was downloaded with firmware download noactivate command.

**Syntax** `firmware activate [ rbridge-id { rbridge-id } | all ]`

**Command Default** Activation of the firmware is performed manually by default after a download.

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**noactivate**

Downloads the firmware without activating it.

**Modes** Privileged EXEC mode

**Usage Guidelines** By default, the **firmware download** command downloads the firmware to the system, reboots the system, and commits the firmware automatically. You can specify the **noactivate** parameter to download the firmware to the system without activating it (the node is not rebooted). The user can run the **firmware activate** command later to activate the firmware.

**Examples** To activate firmware on switch nodes 1, 2, 3, and 5:

```
switch# firmware activate rbridge-id rid1-rid3,rid5
```

**Related Commands** [firmware download](#), [firmware restore](#), [show version](#), [show firmwaredownloadstatus](#)

## firmware commit

Commits a firmware upgrade.

<b>Syntax</b>	<b>firmware commit</b>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>The <b>firmware download</b> command updates the secondary partitions only. When the <b>firmware download</b> command completes successfully and the switch reboots, the system swaps partitions. The primary partition (with the previous firmware) becomes the secondary partition, and the secondary partition (with the new firmware) becomes the primary partition.</p> <p>By default, <b>firmware download</b> automatically commits the firmware after the switch reboots. If you disable auto-commit mode when running <b>firmware download</b>, you must execute <b>firmware commit</b> to commit the new firmware to the secondary partition.</p> <p>This command is supported only on the local management modules.</p> <p>You must run the <b>firmware download</b> command with the <b>nocommit</b> parameter set for the following firmware commit operation to succeed.</p>
<b>Examples</b>	<p>To commit the firmware:</p> <pre>switch# firmware commit  Validating primary partition... Doing firmwarecommit now. Please wait ... Replicating kernel image ..... FirmwareCommit completes successfully.</pre>
<b>Related Commands</b>	<a href="#">firmware download</a> , <a href="#">show versionshow version</a>

# firmware download

Downloads the firmware on the local switch.

**Syntax** `firmware download { default-config | ftp | scp | sftp | usb | interactive } [ manual ] [ nocommit ] [ noreboot ] [ noactivate ] [ coldboot ] host { hostname | host_ip_address } user username password password directory directory [ file file_name ] [ vcs-mode vcsmode ] [ vcs-id vcsID ] [ rbridge-id rbridge-id ] ]`

**Command Default** By default, **firmware download** downloads the firmware to the system, reboots the system, and commits the firmware automatically. The user can specify **noactivate** to download the firmware to the system without activating it (the node is not rebooted). The user can run **firmware activate** later to activate the firmware.

**Parameters** **default-config**

Sets the configuration back to default except for the following parameters: VCS mode, VCS ID, and RBridge ID. These three parameters are retained except when the options to change their values are specified.

**ftp | scp | sftp | usb**

Valid protocols are **ftp** (File Transfer Protocol) or **scp** (Secure Copy), **sftp** (SSH File Transfer Protocol), **usb** (universal serial bus). The values are not case-sensitive.

**interactive**

Runs firmware download in interactive mode. You are prompted for input.

**manual**

Updates a single management module in a chassis with two management modules. You must log in to the management module through its dedicated management IP address. This parameter is ignored when issued on a Top-of-Rack (ToR) switch or in a chassis with only one management module.

**nocommit**

Disables auto-commit mode. When auto-commit mode is disabled, firmware is downloaded only to the primary partition. You must execute the firmware **commit** command manually to propagate the new image to the secondary partition.

**noreboot**

Disables auto-reboot mode. When auto-reboot mode is disabled, you must reboot the switch manually.

**noactivate**

Downloads the firmware to the system without activating it.

**coldboot**

Downloads the firmware to the system and reboots both the active and standby MMs. **Caution:** Do not use this option unless instructed to do so by Brocade Technical Support.

**host**

Specifies the host by DNS name or IP address.

**hostname**

Specifies an IPv4 DNS host name.

**host\_ip\_address**

Specifies the host IP address. IPv4 and IPv6 addresses are supported.

**directory directory**

Specifies a fully qualified path to the directory where the firmware is located.

**file *file\_name***

Specifies the firmware .plist file. This parameter is optional; if unspecified, the default file, release.plist, is used.

**user *username***

Specifies the user login name for the host.

**password *password***

Specifies the account password.

**vcs-mode *vcsmode***

Specifies the new VCS mode. If not set, the existing VCS mode is used. It is only available in local firmware download.

**vcs-id *vcsID***

Specifies the new VCS ID. If not set, the existing VCS ID is used. It is only available in local firmware download.

**rbridge-id *rbridge-id***

Specifies the new RBridge ID. If not set, the existing RBridge ID is used. It is only available in local firmware download. ,

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to download firmware from an external host or from an attached USB device. You can run this command interactively or provide the parameters on the command line.

The device components supported by this command have two partitions of nonvolatile storage (primary and secondary) to store two firmware images. This command always downloads the new image to the secondary partition and then swaps partitions, so the secondary partition becomes the primary partition.

By default, the **firmware download** process reboots the system and activates the new image. Finally, the process performs a **firmware commit** operation to copy the new image to the other partition. This command supports firmware upgrades on the local switch only.

If the **firmware download** is interrupted because of an unexpected reboot as a result of a software error or power failure, the command automatically recovers the corrupted secondary partition. Wait for the recovery to complete before starting another firmware download.

In a dual-MM system, if you specify the **manual** option with the **default-config** option, make sure you execute the same command on both MMs. After firmware download is completed on both MMs, you must reboot them at the same time. Otherwise, the MMs may run into configuration mismatch issues.

**Examples** In logical chassis cluster mode, you have the option to download firmware to multiple nodes:

```
switch# firmware download interactive
Do you want to download to multiple nodes in the cluster? [y/n]: y
Server name or IP address:
```

To perform a manual firmware download to a single management module:

```
switch# firmware download interactive
Server name or IP address: 10.31.2.25
File name: /users/home50/dist/NOSv5.0.0
Protocol (ftp, scp): ftp
User: admin
Password: *****
Do manual download [y/n]: y
Reboot system after download? [y/n]: y
Do Auto-Commit after Reboot? [y/n]: y

System sanity check passed.
You are running a firmware download on dual MM system with 'manual' option. This will
upgrade the firmware only on the local MM.
This command will cause a cold/disruptive reboot and will require that existing
telnet, secure telnet or SSH sessions be restarted.
Do you want to continue? [y/n]: y

(Output truncated)
```

To download firmware to a local node:

```
switch# firmware download protocol ftp host 10.1.2.30 user fvt password pray4green
path /dist file release.plist
This command will download the firmware to the local node. You will need to run
firmware activate to activate the firmware after this command completes.
Do you want to continue? [y/n]: y
2010/01/29-23:48:35, [HAM-1004], 226, switchid 1, CHASSIS | VCS, INFO,
Brocade_switch,
Firmwaredownload has started on the switch.
```

To download firmware using the **default-config** option with VCS mode 1, VCS ID 7, and RBridge 10, use the following command:

```
sw0# firmware download default-config ftp host 10.20.1.3 user fvt password pray4green
directory dist file release.plist vcs-mode 1 vcs-id 7 rbridge-id 10
Performing system sanity check...
This command will set the configuration to default and set the following parameters:
vcs-mode, vcs-id and rbridge-id.
This command will cause Cold reboot on both MMs at the same time and will require
that existing telnet, secure telnet or SSH sessions be restarted.
Do you want to continue? [y/n]: y
host 10.20.1.3 user fvt password pray4green directory dist file release.plist
Performing system sanity check...
This command will set the configuration to default and set the following parameters:
vcs-mode, vcs-id and rbridge-id.
This command will cause Cold reboot on both MMs at the same time and will require
that existing telnet, secure telnet or SSH sessions be restarted.
Do you want to continue? [y/n]: y
```

#### Related Commands

[firmware commit](#), [firmware restore](#), [show firmwaredownloadstatus](#), [show versionshow version](#)

## firmware download ftp

Specifies FTP as the protocol used to perform a firmware download.

<b>Syntax</b>	<b>firmware download ftp</b> [ <b>coldboot</b> ] [ <b>manual</b> ] [ <b>nocommit</b> ] [ <b>noreboot</b> ] <b>host</b> { <i>hostname</i>   <i>host_ip_address</i> } <b>user</b> <i>username</i> <b>password</b> <i>password</i> <b>directory</b> <i>directory</i> [ <b>file</b> <i>file_name</i> ]
<b>Command Default</b>	By default, downloads the firmware to the system, reboots the system, and commits the firmware automatically. The user can specify <b>noactivatefirmware download</b> to download the firmware to the system without activating it (the node is not rebooted). The user can run <b>firmware activate</b> later to activate the firmware.
<b>Parameters</b>	<p><b>coldboot</b> Downloads the firmware to the system and reboots both the active and standby MMs. <b>Caution:</b> Do not use this option unless instructed to do so by Brocade Technical Support.</p> <p><b>directory</b> <i>directory</i> Specifies a fully qualified path to the directory where the firmware is located.</p> <p><b>file</b> <i>file_name</i> Specifies the firmware .plist file. This parameter is optional; if unspecified, the default file, release.plist, is used.</p> <p><b>host</b> Specifies the host by DNS name or IP address.</p> <p><b>hostname</b> Specifies an IPv4 DNS host name.</p> <p><b>host_ip_address</b> Specifies the host IP address. IPv4 and IPv6 addresses are supported.</p> <p><b>manual</b> Updates a single management module in a chassis with two management modules. You must log in to the management module through its dedicated management IP address. This parameter is ignored when issued on a compact switch or in a chassis with only one management module.</p> <p><b>noactivate</b> Performs a firmware download without activation on the local switch.</p> <p><b>nocommit</b> Disables auto-commit mode. When auto-commit mode is disabled, firmware is downloaded only to the primary partition. You must execute the firmware <b>commit</b> command manually to propagate the new image to the secondary partition.</p> <p><b>noreboot</b> Disables auto-reboot mode. When auto-reboot mode is disabled, you must reboot the switch manually. If auto-commit mode was disabled, you must perform a manual firmware <b>commit</b> operation after the switch comes back up.</p> <p><b>password</b> <i>password</i> Specifies the account password.</p> <p><b>user</b> <i>username</i> Specifies the user login name for the host.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Use this command to download firmware from an external host.



The device components supported by this command have two partitions of nonvolatile storage (primary and secondary) to store two firmware images. This command always downloads the new image to the secondary partition and then swaps partitions, so the secondary partition becomes the primary partition.

By default, the **firmware download** process reboots the system and activates the new image. Finally, the process performs a **firmware commit** operation to copy the new image to the other partition. This command supports firmware upgrades on the local switch only.

This command does not support pagination.

If the **firmware download** is interrupted because of an unexpected reboot as a result of a software error or power failure, the command automatically recovers the corrupted secondary partition. Wait for the recovery to complete before starting another firmware download.

**Related Commands** [firmware commit](#), [firmware restore](#), [firmware download](#), [show firmwaredownloadstatus](#), [show version](#)

## firmware download interactive

Allows the user to select firmware download parameters interactively before starting a firmware download.

**Syntax** `firmware download interactive`

**Command Default** By default, **firmware download** downloads the firmware to the system, reboots the system, and commits the firmware automatically.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to download firmware from an external host or from an attached USB device. You can run this command interactively or provide the parameters on the command line.

The device components supported by this command have two partitions of nonvolatile storage (primary and secondary) to store two firmware images. This command always downloads the new image to the secondary partition and then swaps partitions, so the secondary partition becomes the primary partition.

By default, the **firmware download** process reboots the system and activates the new image. Finally, the process performs a **firmware commit** operation to copy the new image to the other partition. This command does not support pagination.

If the **firmware download** is interrupted because of an unexpected reboot as a result of a software error or power failure, the command automatically recovers the corrupted secondary partition. Wait for the recovery to complete before starting another firmware download.

**Examples** To perform a firmware download in interactive mode using default parameters:

```
switch# firmware download interactive
firmware download interactive
Server name or IP address: 10.31.2.25
File name: /users/home40/Builds/NOS_v5.0.0
Protocol (ftp, scp, sftp): ftp
User: fvt
Password: *****
Do manual download [y/n]: n
System sanity check passed.
Do you want to continue? [y/n]: y
```

**Related Commands** [firmware commit](#), [firmware restore](#), [firmware download](#), [show firmwaredownloadstatus](#), [show version](#)

# firmware download logical-chassis

Downloads the firmware onto the switches.

**Syntax** `firmware download logical-chassis default-config { ftp | scp | sftp } host host_ip user username password password path path [ rbridge-id { rbridge-id | all } ] [ auto-activate ]`

**Command Default** After firmware is downloaded to the nodes, the command returns without rebooting the nodes. You will need to run **firmware activate** to activate the new firmware on the nodes.

**Parameters** **default-config**

Sets the configuration back to default except the following parameters: VCS mode, VCS ID, and RBridge ID. These three parameters are retained.

**ftp**

Specifies FTP as the protocol used to download the firmware.

**scp**

Specifies SCP as the protocol used to download the firmware.

**sftp**

Specifies SFTP as the protocol used to download the firmware.

**host *host\_ip***

Specifies the host IP address.

**user *username***

Specifies the username.

**password *password***

Specifies the password.

**path *path***

Specifies the filename path where the firmware is located.

**auto-activate**

Specifies to automatically activate the firmware on the switches after installing the firmware.

**coldboot**

Downloads the firmware to the system and reboots both the active and standby MMs. **Caution:** Do not use this option unless instructed to do so by Brocade Technical Support.

**rbridge-id**

Specifies an RBridge or all RBridges.

***rbridge-id***

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is controlled by a principal node (coordinator) and executed on individual nodes in the VCS cluster. All sanity check error and warning messages are displayed on the coordinator user session. If an error results during the Installation, the firmware download request is aborted.

**Examples** To activate firmware on switch nodes 1, 2, 3, and 5:

```
switch# firmware activate rbridge-id rid1-rid3,rid5
```

To perform a firmware recovery on all switch nodes:

```
switch# firmware recover rbridge-id all
```

To automatically activate firmware on switch nodes rbridge-id 161 and 62 when in logical chassis cluster mode:

```
switch# firmware download logical-chassis scp host 10.31.2.25 user release user
password releaseuser directory /pub/sre/SQA/nos/nos5.0.0/nos5.0.0_bld42 auto-activate
rbridge-id 161,62
```

To reboot switches in a specific order, which can be done from any node:

```
switch# firmware download logical-chassis rbridge-id all
path
path.
firmware activate rbridge-id 2

firmware activate rbridge-id 3
firmware activate rbridge-id 4
firmware activate rbridge-id 1
```

To download firmware using the **default-config** option, use the following command:

```
sw0# firmware download logical-chassis default-config ftp host 10.1.2.30 user fvt
password brocade directory /dist/nos/5.0.0bld26 file release.plist rbridge-id 1,2-3
Rbridge-id      Sanity Result      Current Version
-----
1                Disruptive      5.0.0
2                Disruptive      5.0.0
3                Disruptive      5.0.0
You are invoking firmware download with the provision option. This command will
download the new firmware to the specified nodes, default their configuration, and
reboot them automatically.
Do you want to continue? [y/n]: y
```

**Related  
Commands**

[firmware activate](#), [firmware recover](#), [show firmwaredownloadstatus](#), [show version](#)

## firmware download scp

Specifies SCP as the protocol used to perform a firmware download.

**Syntax** `firmware download scp [ coldboot ] [ manual ] [ nocommit ] [ noreboot ] host { hostname | host_ip_address } user username password password directory directory [ file file_name ] [ noactivate ]`

**Command Default** A filename is optional. If no filename is specified, release.plist, is used.

**Parameters**

**coldboot**  
Downloads the firmware to the system and reboots both the active and standby MMs. **Caution:** Do not use this option unless instructed to do so by Brocade Technical Support.

**manual**  
Performs a firmware download on the local switch.

**nocommit**  
Disables auto-commit mode. When auto-commit mode is disabled, firmware is downloaded only to the primary partition. You must execute the firmware **commit** command manually to propagate the new image to the secondary partition. (Skips auto-commit after firmware download.)

**noreboot**  
Disables auto-reboot mode. When auto-reboot mode is disabled, you must reboot the switch manually. If auto-commit mode was disabled, you must perform a manual firmware **commit** operation after the switch comes back up.

**host**  
Specifies the host by DNS name or IP address.

**hostname**  
Specifies an IPv4 DNS host name.

**host\_ip\_address**  
Specifies the host IP address. IPv4 and IPv6 addresses are supported.

**user username**  
Specifies the user login name for the host.

**password password**  
Specifies the account password.

**directory directory**  
Specifies a fully qualified path to the directory where the firmware is located.

**file file\_name**  
Specifies the firmware .plist file. This parameter is optional.

**noactivate**  
Performs a firmware download without activation on the local switch.

**Modes** Privileged EXEC mode.

**Usage Guidelines** Use this command to download firmware from an external host or from an attached USB device. You can run this command interactively or provide the parameters on the command line.

The device components supported by this command have two partitions of nonvolatile storage (primary and secondary) to store two firmware images. This command always downloads the new image to the secondary partition and then swaps partitions, so the secondary partition becomes the primary partition.

By default, the **firmware download** process reboots the system and activates the new image. Finally, the process performs a **firmware commit** operation to copy the new image to the other partition. This command supports firmware upgrades on the local switch only.

This command does not support pagination.

If the **firmware download** is interrupted because of an unexpected reboot as a result of a software error or power failure, the command automatically recovers the corrupted secondary partition. Wait for the recovery to complete before starting another firmware download.

**Related  
Commands**

[firmware commit](#), [firmware restore](#), [show firmwaredownloadstatus](#), [show version](#)

# firmware download sftp

Specifies SFTP as the protocol used to perform a firmware download.

**Syntax** `firmware download sftp [ coldboot ] directory directory [ manual ] [ nocommit ] [ noreboot ] host { hostname | host_ip_address } user username password password directory directory [ file file_name ] [ noactivate ]`

<b>Parameters</b>	<b>coldboot</b>	Downloads the firmware to the system and reboots both the active and standby MMs. <b>Caution:</b> Do not use this option unless instructed to do so by Brocade Technical Support.
	<b>directory <i>directory</i></b>	Specifies a fully qualified path to the directory where the firmware is located.
	<b>file <i>filename</i></b>	Specifies the firmware .plist file. This parameter is optional; if unspecified, the default file, release.plist, is used.
	<b>host</b>	Specifies the host by DNS name or IP address.
	<b><i>hostname</i></b>	Specifies an IPv4 DNS host name.
	<b><i>host_ip_address</i></b>	Specifies the host IP address. IPv4 and IPv6 addresses are supported.
	<b>manual</b>	Performs a firmware download on the local switch.
	<b>no activate</b>	Performs a firmware download without activation on the local switch.
	<b>nocommit</b>	Disables auto-commit mode. When auto-commit mode is disabled, firmware is downloaded only to the primary partition. You must execute the firmware <b>commit</b> command manually to propagate the new image to the secondary partition. (Skips auto-commit after firmware download.)
	<b>noreboot</b>	Disables auto-reboot mode. When auto-reboot mode is disabled, you must reboot the switch manually. If auto-commit mode was disabled, you must perform a manual firmware <b>commit</b> operation after the switch comes back up.
	<b>password <i>password</i></b>	Specifies the account password.
	<b>user <i>username</i></b>	Specifies the user login name for the host.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to download firmware from an external host or from an attached USB device. You can run this command interactively or provide the parameters on the command line.

The device components supported by this command have two partitions of nonvolatile storage (primary and secondary) to store two firmware images. This command always downloads the new image to the secondary partition and then swaps partitions, so the secondary partition becomes the primary partition.

By default, the **firmware download** process reboots the system and activates the new image. Finally, the process performs a **firmware commit** operation to copy the new image to the other partition. This command supports firmware upgrades on the local switch only.

This command does not support pagination.

If the **firmware download** is interrupted because of an unexpected reboot as a result of a software error or power failure, the command automatically recovers the corrupted secondary partition. Wait for the recovery to complete before starting another firmware download.

**Related  
Commands**

**[firmware commit](#), [firmware restore](#), [show firmwaredownloadstatus](#), [show version](#)**



# firmware download usb

Specifies USB as the protocol used to perform a firmware download.

**Syntax** `firmware download usb [ coldboot ] [ noactivate ] [ nocommit ] [ noreboot ] [ manual ] directory`  
*directory*

**Command Default** By default, the **firmware download** process reboots the system and activates the new image. Finally, the process performs a **firmware commit** operation to copy the new image to the other partition.

**Parameters** **coldboot**  
 Downloads the firmware to the system and reboots both the active and standby MMs. **Caution:** Do not use this option unless instructed to do so by Brocade Technical Support.

**directory** *directory*  
 Specifies a fully qualified path to the directory where the firmware is located.

**manual**  
 Updates a single management module in a chassis with two management modules. You must log in to the management module through its dedicated management IP address. This parameter is ignored when issued on a Top-of-Rack (ToR) switch or in a chassis with only one management module.

**noactivate**  
 Performs a firmware download without activation on the local switch.

**nocommit**  
 Disables auto-commit mode. When auto-commit mode is disabled, firmware is downloaded only to the primary partition. You must execute the **firmware commit** command manually to propagate the new image to the secondary partition.

**noreboot**  
 Disables auto-reboot mode. When auto-reboot mode is disabled, you must reboot the switch manually. If auto-commit mode was disabled, you must perform a manual **firmware commit** operation after the switch comes back up.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to download firmware from an external host or from an attached USB device. You can run this command interactively or provide the parameters on the command line.  
 The device components supported by this command have two partitions of nonvolatile storage (primary and secondary) to store two firmware images. This command always downloads the new image to the secondary partition and then swaps partitions, so the secondary partition becomes the primary partition. This command supports firmware upgrades on the local switch only.

This command does not support pagination.

If the **firmware download** is interrupted because of an unexpected reboot as a result of a software error or power failure, the command automatically recovers the corrupted secondary partition. Wait for the recovery to complete before starting another firmware download.

**Examples** To download firmware from an attached USB device using the command line:

```
switch# firmware download usb directory NOS_v5.0.0
```

**Related  
Commands** [firmware commit](#), [firmware restore](#), [show firmwaredownloadstatus](#), [show version](#)

# firmware install

Installs new software but deletes all configuration in the system.

<b>Parameters</b>	<p><b>ftp</b> Specifies FTP as the protocol used to install the firmware.</p> <p><b>scp</b> Specifies SCP as the protocol used to install the firmware.</p> <p><b>host</b> Specifies the host by DNS name or IP address.</p> <p><b>host_ip_address</b> Specifies the host IP address. IPv4 and IPv6 addresses are supported.</p> <p><b>user username</b> Specifies the user login name for the host.</p> <p><b>password password</b> Specifies the account password.</p> <p><b>directory directory</b> Specifies a fully qualified path to the directory where the firmware is located.</p> <p><b>file filename</b> Specifies the firmware .plist file. This parameter is optional; if unspecified, the default file, release.plist, is used.</p> <p><b>[ vcs-mode { 0   1   2 }</b> Specifies the VCS mode for the switch when the new firmware has been installed. If not set, the platform-dependent default VCS mode is used. Values you can select are: <b>0</b> (fabric cluster mode), <b>1</b> (logical chassis cluster mode), or <b>2</b> (standalone mode).</p> <p><b>vcs-id vcs_id</b> Specifies the new VCS ID when the new firmware has been installed. If not set, the platform-dependent default VCS ID is used. Range is 1 to 8192.</p> <p><b>rbridge-id rbridge-id</b> Specifies the new RBridge ID when the new firmware has been installed. If not set, the platform-dependent default RBridge ID is used. Range is 1 to 239.</p> <p><b>manual</b> In a dual-MM system, if the manual option is used, after firmware install is completed on both MMs, reboot them at the same time. Otherwise, the MMs may run into configuration mismatch issue.</p>
-------------------	--

**Modes** Privileged EXEC mode

**Usage Guidelines** This command cleans the existing firmware on the system before installing the new firmware. All configurations in the system is completely lost.

By default, **firmware install** installs the firmware on both the active and standby modules. If the manual option is specified, then the firmware is installed on the local module only.



## CAUTION

**Do not use this command unless instructed by Brocade Technical Support.**

**Examples** To install new firmware, delete all existing configurations, and to specify the vcs mode, vcs ID and RBridge ID you want the switch to come up in:

```
switch# firmware install scp host 10.70.4.109 user fvt pass pray4green directory /  
buildsjc/sre/SQA/nos/nos5.0.0/nos5.0.0_bld26 vcs-mode 1 vcs-id 6 rbridgeid 10
```

## firmware recover

Recovers the previous firmware version on the switch nodes if a firmware upgrade was unsuccessful.

**Syntax** `firmware recover [ rbridge-id { rbridge-id | all } ]`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command undoes the operation that was performed using the firmware download "noactivate" option.

If you invoke a noactivate firmware download, the firmware is loaded to the secondary node without swapping partitions. If firmware recover is executed, it will perform a forceful commit in that node. This CLI does not reboot the node.

The **rbridge-id** operand is supported in VCS mode only.

**Examples** To recover firmware on switch nodes 1, 2, 3, and 5:

```
switch# firmware recover rbridge-id rid1-rid3,rid5
```

To perform a firmware recovery on all switch nodes:

```
switch# firmware recover rbridge-id all
```

**Related Commands** [firmware activate](#), [show firmwaredownloadstatus](#), [show version](#)

## firmware restore

Swaps the partition and reboots the node.

**Syntax** `firmware restore`

**Modes** Privileged EXEC mode

Usage Guide



### CAUTION

**Do not use this command unless instructed by Brocade Technical Support.**

Use this command to restore the previously active firmware image. You can run this command only if auto-commit mode was disabled during the firmware download. After a firmware download and a reboot (with auto-commit mode disabled), the downloaded firmware becomes active. If you do not want to commit the firmware, use the **firmware restore** command.

This command reboots the system and reactivates the previous firmware. After reboot, all primary and secondary partitions restore the previous firmware image.

This command causes the node to boot up with its older firmware. Later, the image in the primary partition is automatically committed to the secondary partition.

This command is supported only on the local management module.

The **firmware download** command must have been run with the **nocommit** parameter for the **firmware restore** operation to succeed.

**Examples** To restore the previous firmware:

```
switch# firmware restore

Restore old image to be active ...
Restore both primary and secondary image after reboot.
The system is going down for reboot NOW !!
Broadcast message from root (ttyS0) Fri Oct 26 23:48:54 2001...
Doing firmwarecommit now.
Please wait ...
```

**Related Commands** [firmware commit](#), [firmware download](#), [show version](#)

## firmware sync

Synchronizes the firmware on the current switch to the standby Management Module (MM).

**Syntax** `firmware sync`

**Modes** Privileged EXEC mode

**Examples** To install new firmware, delete all existing configurations, and to specify the vcs mode, vcs ID and RBridge ID you want the switch to come up in:

```
switch# firmware sync
```

This command will approximately take 15 minutes to complete.

It will cause the standby MM to reboot during the process. All CLIs on active MM in this login session will be blocked until the process is complete.

```
Do you want to continue? [y/n]:y
```

# flexport

Used in conjunction with the **hardware** command to set the switch into FlexPort configuration mode.

<b>Syntax</b>	<b>flexport</b> <i>rbridge-id/slot/port</i>
<b>Parameters</b>	<b><i>rbridge-id/slot/port</i></b> Specifies a valid Fibre Channel port interface.
	<b><i>rbridge-id</i></b> Specifies the RBridge ID.
	<b><i>slot</i></b> Specifies a valid slot number.
	<b><i>port</i></b> Specifies which port to modify.
<b>Usage Guidelines</b>	Refer to <a href="#">hardware</a> on page 399.

**Modes** Hardware configuration mode

**Examples** This command configures connector group 5 on Rbridge ID 1.

```
switch# configure terminal
switch(config)# hardware
switch(config-hw)# flexport 1/0/5
switch(conf-hw-flex-1/0/5)#
```

History	Release version	Command history
	5.0.0	This command was introduced.

**Related Commands** [connector-group](#), [hardware](#), [speed \(FlexPort\)](#)



# forward-delay

Specifies the time an interface spends in each of the listening and learning states.

**Syntax** **forward-delay** *seconds*

**no forward-delay**

**Command Default** 15 seconds

**Parameters** **seconds**

Specifies the time that an interface spends in the Spanning Tree Protocol (STP) learning and listening states. Valid values range from 4 through 30 seconds.

**Modes** Protocol Spanning Tree configuration mode

**Usage Guidelines** This command specifies how long the listening and learning states last before the interface begins the forwarding of all spanning-tree instances.

STP interface states:

- Listening - The interface processes the Bridge Protocol Data Units (BPDUs) and awaits possible new information that might cause it to return to the blocking state.
- Learning - The interface does not yet forward frames (packets), instead it learns source addresses from frames received and adds them to the filtering database (switching database).
- Forwarding - An interface receiving and sending data, normal operation. STP still monitors incoming BPDUs that can indicate it should return to the blocking state to prevent a loop.
- Blocking - An interface that can cause a switching loop, no user data is sent or received, but it might go to the forwarding state if the other links in use fail and the STP determines that the interface may transition to the forwarding state. BPDU data continues to be received in the blocking state.

When you change the spanning-tree forward-delay time, it affects all spanning-tree instances. When configuring the forward-delay, the following relationship should be kept:

$$2*(\text{forward-delay} - 1) \geq \text{max-age} \geq 2*(\text{hello-time} + 1)$$

If xSTP is enabled over VCS, this command must be executed on all the RBridge nodes.

Enter **no forward-delay** to return to the default settings.

**Examples** To configure the forward-delay time to 18 seconds:

```
switch(conf-mstp)# forward-delay 18
```

**Related Commands** [hello-time](#), [max-age](#)

# gateway-address

Configures the gateway IP address for IPv4 or IPv6 Fabric-Virtual-Gateway sessions.

**Syntax** `gateway-address gateway-address`

`no gateway-address gateway-address`

**Command Default** None

**Parameters** `gateway-address`

IPv4 or IPv6 address in the format A.B.C.D/L or x:x:x::x/L.

**Modes** IPv4 or IPv6 Fabric-Virtual-Gateway on a VE interface configuration mode

**Usage Guidelines** Enter the **no** form of the command to remove the gateway IP address for the IPv4 or IPv6 Fabric-Virtual-Gateway from the RBridge VE interface mode.

**Examples** The following example shows how to configure the the gateway IP address for IPv4 Fabric-Virtual-Gateway on the VE interface.

```
switch(config)# interface ve 2000
switch(config-ve-2000)# ip fabric-virtual-gateway
switch(config-ip-fabric-virtual-gw)# gateway-address 192.128.2.1/24
```

The following example shows how to configure the gateway IP address for IPv6 Fabric-Virtual-Gateway on the VE interface.

```
switch(config)# interface ve 2000
switch(config-ve-2000)# ipv6 fabric-virtual-gateway
switch(config-ipv6-fabric-virtual-gw)# gateway-address 2001:1:0:1::1/64
```

## History

Release version	Command history
5.0.1	This command was introduced.

# gateway-mac-address

Configures the gateway MAC address for IPv4 or IPv6 Fabric-Virtual-Gateway sessions.

**Syntax** `gateway-mac-address mac-address`

`no gateway-mac-address`

**Command Default** Default gateway MAC address for IPv4 is **02e0.5200.010f** and for IPv6 is **02e0.5200.020e**.

**Parameters** *mac-address*

Gateway MAC address in HHHH.HHHH.HHHH format.

**Modes** Address-family configuration mode

**Usage Guidelines** Enter the **no** form of the command to remove a gateway MAC address for the IPv4 or IPv6 Fabric-Virtual-Gateway session.

**Examples** The following example shows how to configure the gateway MAC address for an IPv4 Fabric-Virtual-Gateway session.

```
switch(config)# router fabric-virtual-gateway
switch(conf-router-fabric-virtual-gateway)# address-family ipv4
switch(conf-address-family-ipv4)# gateway-mac-address 0011.2222.2233
```

**History**

Release version	Command history
5.0.1	This command was introduced.

**Related  
Commands**

[accept-unicast-arp-request](#), [address-family \(Fabric-Virtual-Gateway\)](#), [router fabric-virtual-gateway](#)

## graceful-restart (BGP)

Enables the BGP graceful restart capability.

<b>Syntax</b>	<b>graceful-restart</b> [ <b>purge-time</b> <i>seconds</i>   <b>restart-time</b> <i>seconds</i>   <b>stale-routes-time</b> <i>seconds</i> ] <b>no graceful-restart</b>
<b>Command Default</b>	Disabled
<b>Parameters</b>	<p><b>purge-time</b> Specifies the maximum period of time, in seconds, for which a restarting device maintains stale routes in the BGP routing table before purging them. The default value is 600 seconds. The configurable range of values is from 1 to 3600 seconds.</p> <p><b>restart-time</b> Specifies the restart-time, in seconds, advertised to graceful restart-capable neighbors. The default value is 120 seconds. The configurable range of values is from 1 to 3600 seconds.</p> <p><b>stale-routes-time</b> stale-routes-time Specifies the maximum period of time, in seconds, that a helper device will wait for an EOR message from a peer. All stale paths are deleted when this time period expires. The default value is 360 seconds. The configurable range of values is from 1 to 3600 seconds.</p>
<b>Modes</b>	BGP address-family IPv4 unicast configuration mode. BGP address-family IPv6 unicast configuration mode.
<b>Usage Guidelines</b>	<p>Use the no form of this command to disable the BGP graceful restart capability globally for all BGP neighbors.</p> <p>Use this command to enable or disable the graceful restart capability globally for all BGP neighbors in a BGP network. If the graceful restart capability is enabled after a BGP session has been established, the neighbor session must be cleared for GR to take effect.</p> <p>The <b>purge-time</b> parameter is applicable for both restarting and helper devices. The timer starts when a BGP connection is closed. The timer ends when an EOR is received from all nodes, downloaded into BGP and an EOR sent to all neighbors. The configured purge-time timer value is effective only on the configured node.</p> <p>The <b>restart-time</b> parameter is applicable only for helper devices. The timer starts at the time the BGP Connection is closed by the remote peer and ends when the Peer connection is established. The configured restart-time timer value is effective only on the peer node, and not in the configured node. During negotiation time, the timer value is exchanged.</p> <p>The <b>stale-routes-time</b> parameter is applicable only for helper devices. The timer starts when the peer connection is established once the ha-failover peer node has been established. The timer ends at the time an EOR is received from the peer. The configured stale-time timer value is effective only on the configured node.</p> <p>Use the <b>clear ip bgp neighbor</b> command with the <b>all</b> parameter for the changes to the GR parameters to take effect immediately.</p>

**Examples** To enable the BGP graceful restart capability.

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# local-as 1
device(config-bgp-router)# neighbor 1.1.1.1 remote-as 2
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# graceful-restart
```

To set the purge time to 240 seconds.

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# local-as 1
device(config-bgp-router)# neighbor 1.1.1.1 remote-as 2
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# graceful-restart
%Warning: Please clear the neighbor session for the parameter change to take effect!
device(config-bgp-ipv4u)# graceful-restart purge-time 240
```

To set the restart time to 60 seconds.

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# local-as 1
device(config-bgp-router)# neighbor 1.1.1.1 remote-as 2
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# graceful-restart
%Warning: Please clear the neighbor session for the parameter change to take effect!
device(config-bgp-ipv4u)# graceful-restart restart-time 60
%Warning: Please clear the neighbor session for the parameter change to take effect!
```

To set the stale-routes time to 180 seconds.

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# router bgp
device(config-bgp-router)# local-as 1
device(config-bgp-router)# neighbor 1000::1 remote-as 2
device(config-bgp-router)# address-family ipv6 unicast
device(config-bgp-ipv6u)# neighbor 1000::1 activate
device(config-bgp-ipv6u)# graceful-restart
%Warning: Please clear the neighbor session for the parameter change to take effect!
device(config-bgp-ipv6u)# graceful-restart stale-routes-time 180
%Warning: Please clear the neighbor session for the parameter change to take effect!
```

## History

Release version	Command history
5.0.0	This command was introduced.

## graceful-restart (OSPF)

Enables the OSPF Graceful Restart (GR) capability.

**Syntax** `graceful-restart [ helper-disable | restart-time seconds ]`

**no graceful-restart**

**Command Default** Graceful restart and graceful restart helper capabilities are enabled.

**Parameters** **helper-disable**

Disables the GR helper capability.

**restart-time**

Specifies the maximum restart wait time, in seconds, advertised to neighbors. The default value is 120 seconds. The configurable range of values is from 10 to 1800 seconds.

**Modes** OSPF VRF router configuration mode.

**Usage Guidelines** Use **no graceful-restart** to disable the graceful restart capability.

Use **no graceful-restart helper-disable** to re-enable the GR helper capability.

**Examples** To disable the GR capability.

```
switch# configure
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router ospf
switch(config-router-ospf-vrf-default-vrf)# no graceful-restart
```

To disable the GR helper capability.

```
switch# configure
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router ospf
switch(config-router-ospf-vrf-default-vrf)# graceful-restart helper-disable
```

To re-enable the GR helper capability.

```
switch# configure
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router ospf
switch(config-router-ospf-vrf-default-vrf)# no graceful-restart helper-disable
```

To re-enable the GR capability.

```
switch# configure
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router ospf
switch(config-router-ospf-vrf-default-vrf)# graceful-restart
```

To re-enable the GR capability and change the maximum restart wait time from the default value to 240 seconds.

```
switch# configure
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router ospf
switch(config-router-ospf-vrf-default-vrf)# graceful-restart restart-time 240
```

### History

Release version	Command history
5.0.0	This command was introduced.

### Related Commands

[graceful-restart helper \(OSPFv3\), nonstop-routing](#)

## graceful-restart helper (OSPFv3)

Enables the OSPFv3 graceful restart (GR) helper capability.

**Syntax** `graceful-restart helper { disable | strict-lsa-checking }`

`no graceful-restart helper`

**Command Default** GR helper is enabled.

**Parameters** **disable**

Disables the OSPFv3 GR helper capability.

**strict-lsa-checking**

Enables the OSPFv3 GR helper mode with strict link-state advertisement (LSA) checking.

**Modes** OSPFv3 VRF router configuration mode

**Usage Guidelines** Enter `no graceful-restart helper` to disable the GR helper capability on a device.

**Examples** To enable GR helper and set strict LSA checking:

```
switch# configure
switch(config)# rbridge-id 122
switch(config-rbridge-id-122)# ipv6 router ospf
switch(config-ipv6-router-ospf-vrf-default-vrf)# graceful-restart helper strict-lsa-checking
```

**History**

Release version	Command history
5.0.0	This command was introduced.

**Related Commands**

[graceful-restart \(OSPF\), nonstop-routing](#)

## gratuitous-arp timer

Configures the global gratuitous ARP timer in VCS.

**Syntax** `gratuitous-arp timer value`

`no gratuitous-arp timer`

**Command Default** The gratuitous ARP timer is disabled.

**Parameters** *value*

Gratuitous ARP timer in seconds. The range is from 0 through 360.

**Modes** Fabric-Virtual-Gateway address-family IPv4 or IPv6 configuration mode

Fabric-Virtual-Gateway global interface VE IPv4 or IPv6 configuration mode

**Usage Guidelines** Enter the **no** form of the command to remove the configured gratuitous ARP timer value.

**Examples** The following example shows how to configure the gratuitous ARP timer in Fabric-Virtual-Gateway address-family IPv4 configuration mode.

```
switch(config)# router fabric-virtual-gateway
switch(conf-router-fabric-virtual-gateway)# address-family ipv4
switch(conf-address-family-ipv4)# gratuitous-arp timer 15
```

The following example shows how to configure the gratuitous ARP timer in Fabric-Virtual-Gateway under VE interface IPv4 configuration mode.

```
switch(config)# interface ve 2000
switch(config-ve-2000)# ip fabric-virtual-gateway
switch(config-ip-fabric-virtual-gw)# gratuitous-arp timer 15
```

The following example shows how to configure the gratuitous ARP timer in Fabric-Virtual-Gateway address-family IPv6 configuration mode.

```
switch(config)# router fabric-virtual-gateway
switch(conf-router-fabric-virtual-gateway)# address-family ipv6
switch(conf-address-family-ipv6)# gratuitous-arp timer 60
```

The following example shows how to configure the gratuitous ARP timer in Fabric-Virtual-Gateway under VE interface IPv6 configuration mode.

```
switch(config)# interface ve 3000
switch(config-ve-3000)# ipv6 fabric-virtual-gateway
switch(config-ipv6-fabric-virtual-gw)# gratuitous-arp timer 60
```

### History

Release version	Command history
5.0.1	This command was introduced.



# ha chassisreboot

Performs a reboot of the chassis.

**Syntax** **ha chassisreboot**

**Modes** Privileged EXEC mode

**Usage Guidelines** This command reboots the entire chassis. Both the active and the standby management module reboot. Both management modules retain their original high-availability (HA) role after the system comes back up. If the power-on self test (POST) is enabled, it is executed when the system comes back up.

This command is supported only on the active management module. This command is not supported on the standby management module. Both management modules must be in sync for the HA reboot operation to succeed. Failover and reboots can be disruptive.

**Examples** To perform an HA reboot:

```
switch# ha chassisreboot
```

**Related Commands** [ha failover](#), [ha enable](#), [reload](#), [show ha](#)

## ha disable

Disables the High Availability (HA) feature on a switch.

**Syntax** `ha disable`

**Command Default** HA is disabled.

**Modes** Privileged EXEC mode

**Usage Guidelines** If the HA feature is already disabled, this command has no effect.

This command is supported only on the active management module.

This command is not supported on the standby management module.

Do not use this command unless instructed by Brocade Technical Support.

---

### NOTE

With the introduction of Network OS 4.0, failover is no longer disruptive for Layer 2.

---

**Examples** To display the syslog daemon IP addresses configured on a switch:

```
switch# ha disable
```

```
Service instances out of sync  
1970/01/01-00:06:30, [HASM-1101], 111, MM1, WARNING, chassis, HA State out of sync.  
HA is disabled
```

**Related Commands** [ha enable](#), [reload](#), [show ha](#)

# ha enable

Enables the High Availability (HA) feature on a switch.

<b>Syntax</b>	<b>ha enable</b>
<b>Command Default</b>	HA is disabled.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>If the HA feature is already enabled, this command has no effect. If the HA feature is disabled, this command enables it. The standby management process reboots as part of the process</p> <p>Running the command displays a warning message and prompts for confirmation before rebooting the management module.</p> <p>You can also use this command to display the servers that are running the syslogd daemon and those that system messages are sent to. Servers are specified in the configuration database by IP address.</p> <p>This command is supported only on the local management module.</p> <p>This command is not supported on the standby management module.</p> <p>Do not use this command unless instructed by Brocade Support.</p>

---

## NOTE

With the introduction of Network OS 4.0, failover is no longer disruptive for all Layer 2.

---

**Examples** To display the syslog daemon IP addresses configured on a switch:

```
switch# ha enable

Warning: This command will enable the HA. It will reboot the standby CP and
require all telnet, secure telnet, and SSH sessions to the standby CP to be
restarted.
Are you sure you want to go ahead [y/n]? y

1970/01/01-00:07:18, [EM-1047], 113, MM1, INFO, chassis, CP in slot 2 not faulty, CP
ERROR deasserted.
HTBT hit a threshold: 2
HTBT hit a threshold: 2
Heartbeat to 2 Down!
  resetting peer
  resetting peer 127.2.1.2
HA is enabled
```

**Related Commands** [ha disable](#), [ha failover](#), [reload](#), [show ha](#)

## ha failover

Initiates a failover from the active to the standby management module (MM).

**Syntax** **ha failover**

**Modes** Privileged EXEC mode

**Usage Guidelines** With the introduction of Network OS 4.0, failover is no longer disruptive for all Layer 2.

This command forces a failover from the active to the standby MM. When the process completes, the former standby takes over as the active MM. If the active and standby MMs are not synchronized, the command aborts.

**Examples** To perform a failover:

```
switch# ha failover
```

**Related Commands** [ha enable](#), [ha sync start](#), [ha sync stop](#), [reload](#), [show ha](#)

## ha sync start

This command is used to enable the high availability (HA) state synchronization.

**Syntax** `ha sync start`

**Modes** Privileged EXEC mode

**Examples** To enable HA synchronization:

```
switch# ha sync start
Are you sure you want to start sync [y/n]
All service instances in sync
2012/10/06-16:10:36, [HASM-1100], 630, M2, INFO, VDX8770-4, HA State is in sync.
```

**Related Commands** [ha failover](#), [ha enable](#), [ha disable](#), [ha sync stop](#), [show ha](#)

## ha sync stop

Disables high availability state synchronization on a switch.

**Syntax** **ha sync stop**

**Command Default** Synchronization is enabled.

**Modes** Privileged EXEC mode

**Examples** To disable state synchronization:

```
switch# ha sync stop
Are you sure you want to stop sync [y/n]? y
Service instances out of sync
2012/10/06-16:06:13, [HASM-1101], 619, M2, WARNING, VDX8770-4, HA State out of sync.
```

**Related Commands** [ha failover](#), [ha enable](#), [ha sync start](#)

# hardware

Enters hardware configuration mode to enter FlexPort and port-group configuration mode.

**Syntax** **hardware**

**Modes** Global configuration mode

**Usage Guidelines** Use this command to enter hardware configuration mode. While in this mode you can enter connector configuration mode for the purpose of configuring breakout mode. You can also enter port-group configuration mode on Brocade 27x40 GbE line cards.

**Examples** Typical command usage:

```
switch# configure terminal
switch(config)# hardware
switch(config-hw)#
```

**Related Commands** [connector-group](#), [flexport](#), [speed \(FlexPort\)](#)

# hardware-profile

Optimizes hardware resources for route profiles or ternary content-addressable memory (TCAM) profiles.

**Syntax** `hardware-profile { route-table { default | ipv4-max-route | ipv4-max-arp | ipv4-min-v6 | ipv6-max-route | ipv6-max-nd } | tcam { default | ipv4-max-route | ipv4-max-arp | ipv4-min-v6 | ipv6-max-route | ipv6-max-nd }}`

**Command Default** The default hardware profiles are enabled.

**Parameters** **route-table**

Optimizes hardware resources for route profiles.

**default**

Optimizes IPv4/IPv6 resources for dual-stack operations.

**ipv4-max-route**

Optimizes resources for the maximum number of IPv4 routes.

**ipv4-max-arp**

Optimizes resources for the maximum number of IPv4 ARP entries.

**ipv4-min-v6**

Optimizes resources for IPv4 routes in dual-stack configurations.

**ipv6-max-route**

Optimizes resources for the maximum number of IPv6 routes.

**ipv6-max-nd**

Optimizes resources for the maximum number of IPv6 Neighbor Discovery entries.

**tcam**

Optimizes hardware resources for TCAM profiles.

**default**

Optimizes resources with basic support for all applications.

**l2-ipv4-acl**

Optimizes resources for Layer 2 and IPv4 ACLs.

**ipv4-v6-pbr**

Optimizes resources for IPv4 and IPv6 ACLs and policy-based routing tables.

**ipv4-v6-qos**

Optimizes resources for IPv4 and IPv6 ACLs and QoS.

**ipv4-v6-mcast**

Optimizes resources for multicast.

**l2-acl-qos**

Optimizes resources for Layer 2 ACLs and QoS.

**Modes** RBridge ID configuration mode

**Usage Guidelines**

---

**ATTENTION**

This is a disruptive command. You must reload (reboot) the switch before the most recent profile takes effect. Once a profile is activated, it persists across chassis reboots. However, once a switch profile is changed, a reboot is required.

---



There is no **"no"** form of this command.

**Examples** To optimize route profiles for IPv4/IPv6 dual-stack operations:

```
switch(config)# rbridge-id 3
switch(config-rbridge-id-3)# hardware-profile route-table default
```

To optimize TCAM resources for multicast:

```
switch(config)# rbridge-id 3
switch(config-rbridge-id-3)# hardware-profile tcam ipv4-v6-mcast
```

**History**

Release version	Command history
Network OS v5.0.0	This command was introduced.

## hello-interval (ELD)

This global level configuration defines the interval for sending edge-loop detection (ELD) PDUs.

**Syntax** **hello-interval** *milliseconds*

**no hello-interval** *milliseconds*

**Command Default** The default value is 1000 ms (one second)

**Parameters** **milliseconds**

Interval time in milliseconds. The range is from 100 ms through 5 seconds.

**Modes** ELD configuration mode

**Usage Guidelines** This command applies only in Brocade VCS Fabric mode.

It is the user's responsibility to make sure that the hello interval is set to the same value across the various VCS clouds. Otherwise, the ELD port shutdown will be non-deterministic.

Extreme caution must be taken when setting the hello-interval value to anything less than 1 second, as it will heavily increase the cpu load due to the amount of packets transmitted and received (depending on the number of ELD instances and other system configuration), and might cause undesirable performance and scalability results.

Enter **no hello-interval** *milliseconds* to return to the default setting.

**Examples** To set the PDU hello-interval to 5 seconds:

```
switch(config)# protocol edge-loop-detection
switch(config-eld)# hello-interval 5000
```

To return the PDU hello-interval to the default value (1000 ms):

```
switch(config-eld)# no hello-interval 5000
```

**Related Commands** [interface](#), [clear edge-loop-detection](#), [edge-loop-detection vlan](#), [hello-interval](#), [pdu-rx-limit](#), [show edge-loop-detection globals](#), [show edge-loop-detection interface](#), [show edge-loop-detection rbridge-id](#), [shutdown-time](#)

## hello (LLDP)

Sets the interval between LLDP hello messages

**Syntax** **hello** *seconds*

**no hello**

**Command Default** 30 seconds

**Parameters** **seconds**

Valid values range from 4 through 180 seconds.

**Modes** LLDP protocol configuration mode

**Usage Guidelines** Enter **no hello** to return to the default setting.

**Examples** To set the time interval to 10 seconds between the transmissions:

```
switch# configure terminal
switch (config)# protocol lldp
switch(conf-lldp)# hello 10
```

## hello (UDLD)

Sets the hello transmit interval.

**Syntax** **hello** *hundred\_milliseconds*

**no hello**

**Command Default** 5 is the default value (500 milliseconds).

**Parameters** *hundred\_milliseconds*

Valid values range from 1 through 60 (in counts of 100 milliseconds).

**Modes** Unidirectional link detection (UDLD) protocol configuration mode

**Usage Guidelines** Use this command to set the time interval between the transmission of hello UDLD PDUs from UDLD-enabled ports.

Enter **no hello** to return to the default setting.

**Examples** To set the time interval to 2,000 milliseconds between hello UDLD PDU transmissions:

```
switch# configure
switch (config)# protocol udld
switch(config-udld)# hello 20
```

**Related Commands** [multiplier \(UDLD\)](#), [protocol udld](#)

# hello-interval

Sets the interval between PDU packets sent from the ELD-enabled edge ports of a Brocade VCS Fabric cluster.

**Syntax** `hello-interval interval`

`no hello-interval`

**Command Default** 1000 (one second)

**Parameters** *interval*

Number of periods between each PDU. For example, a value of 2000 causes a PDU to be sent every two seconds. Valid values range from 100 through 5000 milliseconds (100 ms through 5 seconds).

**Modes** ELD configuration mode

**Usage Guidelines** Use this command with the `pdu-rx-limit` command to determine the time taken to detect a loop. The time taken to detect a loop is the product of the pdu-rx-limit and the hello interval.

The hello interval must be set to the same value on all Brocade VCS Fabric clusters that have ELD enabled, otherwise it cannot be predicted which Brocade VCS Fabric cluster will reach its limit first. The Brocade VCS Fabric cluster in the loop with the lowest pdu-rx-limit is the cluster where the loop gets broken, assuming that the hello interval is correctly set to the same value on all clusters.

This command applies only in Brocade VCS Fabric mode.

This functionality detects Layer 2 loops only.

Enter `no hello-interval` to return to the default setting.



## CAUTION

**Use extreme caution when setting the hello interval value to less than 1 second because it heavily increases the CPU load due to the number of packets transmitted and received. This load depends on the number of ELD instances and other system configuration parameters. Undesirable performance and scalability might occur.**

**Examples** To set the PDU interval to 5 seconds:

```
switch(config)# protocol edge-loop-detection
switch(config-eld)# hello-interval 5000
```

To reset the PDU interval to its default value of 1 second:

```
switch(cfg-eld)# no hello-interval 5000
```

**Related Commands** [pdu-rx-limit](#), [protocol edge-loop-detection](#), [show edge-loop-detection globals](#)

# hello-time

Sets the interval between the hello Bridge Protocol Data Units (BPDUs) sent on an interface.

**Syntax** **hello-time** *seconds*

**no hello-time**

**Command Default** 2 seconds

**Parameters** **seconds**

Specifies the time interval between the hello BPDUs sent on an interface. Valid values range from 1 through 10 seconds.

**Modes** Protocol Spanning Tree configuration mode

**Usage Guidelines** This command configures the spanning-tree bridge hello time, which determines how often the device broadcasts hello messages to other devices.

If the VLAN parameter is not provided, the hello-time value is applied globally for all per-VLAN instances. But for the VLANs which have been configured explicitly, the per-VLAN configuration takes precedence over the global configuration. When configuring the **hello-time**, the **max-age** command setting must be greater than the **hello-time** setting. The following relationship should be kept:

$$2 * (\text{forward-delay} - 1) \geq \text{max-age} \geq 2 * (\text{hello-time} + 1)$$

If xSTP is enabled over VCS, this command must be executed on all the RBridge nodes.

Enter **no hello-time** to return to the default settings.

To configure spanning-tree bridge hello time to 5 seconds:

```
switch(conf-stp)# hello-time 5
```

**Related Commands** [forward-delay, max-age](#)

# hello-timer

Configures the Hello message periodic interval.

**Syntax** **hello-timer** *num*

**no hello-timer**

**Command Default** 30 seconds

**Parameters** *num*

The interval value in seconds. Valid values range from 10 through 3600 seconds.

**Modes** PIM router configuration mode

**Usage Guidelines** This command specifies the interval between Protocol Independent Multicast (PIM) "Hello" messages. Enter **no hello-timer** to return to the default settings.

**Examples** Setting the hello-timer to 60 seconds.

```
switch(conf-pim-router)# hello-timer 60
```

**Related Commands** [router pim](#)

## hold-time

Sets the time that a previously down backup VRRP router, which also must have a higher priority than the current master VRRP router, will wait before assuming mastership of the virtual router.

<b>Syntax</b>	<b>hold-time</b> <i>range</i>
<b>Command Default</b>	0 seconds
<b>Parameters</b>	<b><i>range</i></b>  A value between 1 and 3600 seconds that specifies the time a formerly down backup router waits before assuming mastership of the virtual router.
<b>Modes</b>	Virtual-router-group configuration mode
<b>Usage Guidelines</b>	The hold-time must be set to a number greater than the default of 0 seconds for this command to take effect.  This command can be used for both VRRP and VRRP-E.
<b>Examples</b>	To set the hold time to 60 seconds for backup routers in a specific virtual router:  <pre>switch(config)# rbridge-id 101 switch(config-rbridge-id-101)# int ve 25 switch(config-ve-25)# vrrp-extended-group 1 switch(config-vrrp-extended-group-1)# hold-time 60</pre>
<b>Related Commands</b>	<a href="#">vrrp-group</a>



## hold-time (Fabric-Virtual-Gateway)

Configures the duration for which the Fabric-Virtual-Gateway session will remain idle before activating the configuration on the system.

**Syntax** **hold-time** *hold-time*

**no hold-time**

**Command Default** None

**Parameters** ***hold-time***

The hold time in seconds.

**Modes** Fabric-Virtual-Gateway under VE interface IPv4 or IPv6 configuration mode

**Usage Guidelines** Enter the **no** form of the command to remove the hold-time duration for the IPv4 or IPv6 Fabric-Virtual-Gateway configuration.

**Examples** The following example shows how to configure the hold time.

```
switch(config)# interface ve 2000
switch(config-ve-2000)# ip fabric-virtual-gateway
switch(config-ip-fabric-virtual-gw)# hold-time 30
```

**History**

Release version	Command history
5.0.1	This command was introduced.

## http server shutdown

Disables or enables an HTTP server.

- Syntax**    **http server shutdown**
- no http server shutdown**
- Modes**     Global configuration mode
- Usage Guidelines**    Use the **http server shutdown** command to disable an HTTP server. All active connections are closed and the Apache httpd server process does not run.
- Use the **no http server shutdown** command to enable an HTTP server. This restarts the Apache httpd server process, which starts listening for HTTP requests.

---

### ATTENTION

You cannot downgrade directly to a previous Network OS release with the HTTP server disabled. You must first execute the **no http server shutdown** command and then downgrade.

---

- Examples**    To disable an HTTP server:
- ```
switch(config)# http server shutdown
```
- To enable an HTTP server:
- ```
switch(config)# no http server shutdown
```

# inactivity-timer

Configures the forwarding entry inactivity timer.

**Syntax** `inactivity-timer num`

`no inactivity-timer`

**Command Default** 180 seconds

**Parameters** *num*

The entry inactivity timer interval. Valid values range from 60 through 3600 seconds.

**Modes** PIM router configuration mode

**Usage Guidelines** This command specifies the delay interval until a forwarding entry is considered to be active. At the expiration of this timer, the router deletes a forwarding entry.

Enter **no inactivity-timer** to return to the default setting.

**Examples** To set the timer to 600 seconds.

```
switch(conf-pim-router)# inactivity-timer 600
```

**Related Commands** [router pim](#)

## install-igp-cost

Configures the device to use the IGP cost instead of the default BGP4or BGP4+ Multi-Exit Discriminator (MED) value as the route cost when the route is added to the Routing Table Manager (RTM).

**Syntax** **install-igp-cost**

**no install-igp-cost**

**Command Default** This option is disabled.

**Modes** BGP configuration mode

**Usage Guidelines** By default, BGP4or BGP4+ use the BGP MED value as the route cost when the route is added to the RTM. Use this command to change the default to the IGP cost

Use the **no** form of this command to restore the default.

**Examples** To configure the device to compare MEDs:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# install-igp-cost
```

# instance

Maps a VLAN to a Multiple Spanning Tree Protocol (MSTP) instance. You can group a set of VLANs to an instance.

**Syntax** `instance instance_id [ vlan vlan_id | priority priority_id ]`

`no instance`

**Command Default** The priority value is 32768.

**Parameters** `instance_id`

Specifies the MSTP instance. Valid values range from 1 through 31.

`vlan vlan_id`

Specifies the VLAN to map an MSTP instance. Refer to the Usage Guidelines.

`priority priority_id`

Specifies the priority for the specified instance. Valid values range from 0 through 61440. The priority values can be set only in increments of 4096.

**Modes** Protocol Spanning Tree MSTP configuration mode

**Usage Guidelines** If xSTP is enabled over VCS, this command must be executed on all RBridge nodes.

See "User-configurable VLAN IDs" on page 11.

The following rules apply:

- VLANs must be created before mapping to instances.
- VLAN instance mapping is removed from the configuration if the underlying VLANs are deleted.

Enter **no instance** to un-map the VLAN from the MSTP instance.



## CAUTION

**This command can be used only after the VLAN is defined.**

**Examples** To map a VLAN to an MTSP instance:

```
switch(conf-mstp)# instance 1 vlan 2,3
switch(conf-mstp)# instance 2 vlan 4-6
switch(conf-mstp)# instance 1 priority 4096
```

**Related Commands** [show spanning-tree](#)

# interface

Enters the interface configuration mode to configure an interface.

<b>Syntax</b>	<b>interface</b> [ <b>fibrenchannel</b> <i>rbridge-id/slot/port</i>   <b>fcoe</b> <i>vn-number/rbridge-id/front-port-number</i>   <b>&lt;N&gt;gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>port-channel</b> <i>number</i>   <b>vlan</b> <i>vlan_id</i> ]  <b>no interface</b> [ <b>port-channel</b> <i>number</i>   <b>vlan</b> <i>vlan_id</i>   <b>fcoe</b> <i>vn-number/rbridge-id/front-port-number</i> ]
<b>Parameters</b>	<p><b>fibrenchannel</b> <i>rbridge-id/slot/port</i> Specifies a valid Fibre Channel port interface (Brocade VDX 6740 switches only in Brocade VCS Fabric mode).</p> <p><b>rbridge-id</b> Specifies the RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>fcoe</b> <i>vn-number/rbridge-id/front-port-number</i> Specifies a valid FCoE port interface.</p> <p><b>vn-number</b> Specifies the VN number for FCoE.</p> <p><b>rbridge-id</b> Specifies the routing bridge ID.</p> <p><b>front-port-number</b> Specifies the front port number.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>&lt;N&gt;gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>port-channel</b> <i>number</i> Specifies the port-channel number. The number of available channels ranges from 1 through 6144.</p> <p><b>vlan</b> <i>vlan_id</i> Specifies the VLAN number. Refer to the Usage Guidelines.</p>
<b>Modes</b>	Global configuration mode
<b>Usage Guidelines</b>	Enter <b>no interface</b> followed by the appropriate interface identification parameters to disable that interface.

**Examples** To configure a Fibre Channel port on a Brocade VDX 6740 switch:

```
switch(config)# interface FibreChannel 66/0/1
switch(config-FibreChannel-66/0/1)#
```

To enter FCoE configuration mode for an interface:

```
switch(config)# interface fcoe 1/0/1
switch(config-Fcoe-1/0/1)#
```

To enter configuration mode on a 1 Gbps interface on a Brocade VDX switch:

```
switch(config)# interface gigabitethernet 1/0/1
switch(config-if-gi-1/0/1)#
```

**Related Commands** [interface management](#), [interface ve](#), [interface vlan](#), [show interface](#)

## interface (range specification)

Allows a range of values to be entered for some interface configurations.

<b>Syntax</b>	<pre><b>interface</b> { <b>fibrenchannel</b> <i>rbridge-id/slot/port</i>   <b>fcoe</b> <i>vn-number/rbridge-id/front-port-number</i>   &lt;N&gt;<b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>port-channel</b> <i>number</i>   <b>vlan</b> <i>vlan_id</i>   <b>loopback</b> <i>port_number</i>   <b>ve</b> <i>vlan_id</i> }</pre> <pre><b>no interface</b> { <b>port-channel</b> <i>number</i>   <b>vlan</b> <i>vlan_id</i>   <b>fcoe</b> <i>vn-number/rbridge-id/front-port-number</i> }</pre>
<b>Parameters</b>	<p><b>fibrenchannel</b> <i>rbridge-id/slot/port</i> Specifies a valid Fibre Channel port interface (Brocade VDX 6740 switches only in Brocade VCS Fabric mode).</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>fcoe</b> <i>vn-number/rbridge-id/front-port-number</i> Specifies a valid FCoE port interface.</p> <p><b>vn-number</b> Specifies the VN number for FCoE.</p> <p><b>rbridge-id</b> Specifies the routing bridge ID.</p> <p><b>front-port-number</b> Specifies the front port number.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>port-channel</b> <i>number</i> Specifies the port-channel number. The number of available channels range from 1 through 6144.</p> <p><b>vlan</b> <i>vlan_id</i> Specifies the VLAN number. (Refer to the Usage Guidelines.)</p> <p><b>loopback</b> <i>port_number</i> Specifies the port number for the loopback interface. The range is 1 through 255.</p> <p><b>ve</b> <i>vlan_id</i> Specifies the corresponding VLAN interface that must already be configured before the VE interface can be created. (Refer to the Usage Guidelines.)</p>



**Modes** Global configuration mode (Refer to the Usage Guidelines.)

**Usage Guidelines** Use this command to create or enter the interface configuration mode for an interface or range of interfaces.

Loopback and VE configurations are node specific (local) in fabric cluster and logical chassis cluster modes. The other interfaces that support the use of ranges work the same as shown for VLAN in the examples, except for the following differences:

VE and loopback interfaces also support ranges in RBridge configuration mode.

For example, if you want to create and/or enter VLAN interface configuration mode for VLAN IDs 3 through 8 and VLAN 10 and 12, you would enter the following command in global configuration mode:

```
switch(config)# interface vlan 3-8,10,12
```

---

**NOTE**

Do not use a space after a comma or you will receive a syntax error.

---

You then receive the following prompt:

```
switch(config-Vlan-3-8,10,12)#
```

Any command you run from this prompt takes effect on all VLANs that you have specified.

You can use the **no** form of commands on ranges in the same way. For example, if you want to remove the description on VLANS 10 through 15 and VLAN 19 all at the same time, you would enter the following commands in global configuration mode:

```
switch(config)# interface vlan 10-15,19
switch(config-vlan-10-15,19)# no description
```

---

**NOTE**

The **no** form of the command for deleting interfaces should not be given from the range sub-mode. Exit the range sub-mode before deleting interfaces.

---

The three gigabit interface types have the following restrictions for range specification in VCS mode:

- Ranges cannot be used for interfaces that belong to multiple slots. However, you can configure a range of interfaces if each interface in the range belongs to the same slot.
- Ranges can be applied only to interfaces that belong to the same RBridge.

Fibrechannel interfaces have the following restrictions for range specification in VCS mode:

- Ranges cannot be used for interfaces that belong to multiple slots. However, you can configure a range of interfaces if each interface in the range belongs to the same slot.
- Ranges can be applied only to interfaces that belong to the same RBridge.

For the fibre channel interface, ranges can be applied only to interfaces that belong to the same RBridge.

An FCoE interface from one node cannot be combined with a bind configuration of a physical port/port-channel that belongs to another node in the cluster. Refer to the Examples.

A set of FCoE ports cannot be bound to the same MAC address.

**Examples FCoE example**

To configure binding between a range of FCoE ports (0 to 20 in this example) to the tengigabitethernet port 10/0/1:

```
switch# configure
switch(config)# interface Fcoe 1/10/0 - 1/10/20
sw0(conf-Fcoe-1/10/0-20) bind te 10/0/1
```

The FCoE interfaces and the bind configuration of the physical port/port-channel must belong to the same node in the cluster. An example of an unsupported configuration is:

```
switch# configure
switch(config)# interface Fcoe 1/10/0 - 1/10/20
sw0(conf-Fcoe-1/10/0-20)# bind te 20/0/1
```

**TenGigabitEthernet example for VCS mode**

To enter interface subtype configuration mode on a tengigabitethernet interface with an RBridge ID of 25 and a slot of 0, with a port range of 1 through 10, 17 through 21, and 24:

```
sw0(config)# interface TenGigabitEthernet 25/0/1-10,17-21,24
sw0(conf-if-te-25/0/1-10,17-21,24)#
```

**Related Commands**

[interface management](#), [interface ve](#), [interface vlan](#), [show interface](#)

# interface loopback

Configures a loopback interface.

**Syntax** `interface loopback port_number`

`no interface loopback port_number`

**Command Default** A loopback interface is not configured.

**Parameters** *port\_number*

Specifies the port number for the loopback interface. The range is 1 through 255.

**Modes** RBridge ID configuration mode (for VCS)

**Usage Guidelines** A loopback is a logical interface traditionally used to ensure stable routing operations.

The following restrictions apply when the loopback interface is part of an active VXLAN overlay gateway. These restrictions are enforced to maintain consistency across the gateway.

- The loopback interface cannot be deleted.
- The IPv4 address cannot be changed.
- The VRF instance cannot be changed.

You must first use the **no activate** command in VXLAN overlay gateway configuration mode to modify the loopback interfaces. .

Use the no form of this command with a port parameter to remove the specified loopback interface.

**Examples** The following example creates a loopback interface with a port number of 25 for RBridge ID 11. The command is executed in a VCS environment.

```
switch(config)# rbridge-id 11
switch(config-rbridge-id-11)# interface loopback 25
```

**Related Commands** [activate \(VXLAN gateway\)](#), [interface ve](#), [interface vlan](#), [overlay-gateway](#)

## interface management

Enters configuration mode for the management interface. Also used for binding ACLs to a management interface.

<b>Syntax</b>	<b>interface management</b> <i>rbridge-id/port</i>
<b>Command Default</b>	DHCP is disabled. IPv6 stateless auto-configuration is disabled. The speed setting is <b>auto</b> .
<b>Parameters</b>	<p><b><i>rbridge-id/port</i></b></p> <p>Specifies the management interface to be configured as the <i>rbridge-id</i> followed by a slash (/) and the port number.</p> <p><b><i>port</i></b></p> <p>On Top-of-Rack (ToR) switches, the port number for the management port is always 0. On a modular switches with two redundant management modules, can configure two management ports: 1 and 2.</p>
<b>Modes</b>	Global configuration mode
<b>Usage Guidelines</b>	<p>This command supports IP addresses in IPv6 and IPv4 format. This command enters a management interface configuration mode where you can choose configuration parameters for IPv4 and IPv6 addresses.</p> <p>Once you have executed this command, the following commands become available to configure the management interface:</p> <ul style="list-style-type: none"> <li>• <b>ip address</b></li> <li>• <b>ip access-group</b></li> <li>• <b>ip gateway-address</b></li> <li>• <b>ip route</b></li> <li>• <b>ipv6 address</b></li> <li>• <b>ipv6 access-group</b></li> <li>• <b>speed</b></li> </ul> <p>The <b>ip gateway-address</b> command will not be available on the Brocade VDX series if the Layer 3 or Advanced Services license is installed. In that case, use the following command sequence:</p> <pre>switch(config)# rbridge-id 1 switch(config-rbridge-id-1)# ip route 0000/0 &lt;default_gateway_address&gt;</pre> <p>Setting a static IPv4 address and DHCP are mutually exclusive. If DHCP is enabled, you must disable DHCP before you can configure a static IPv4 address.</p> <p>A static IPv6 address and stateless auto-configuration can coexist.</p> <p>Auto-configuration is configured chassis-wide and you configure it always under <b>interface management</b> <i>rbridge-id/1</i>. Once the feature is configured under <b>interface management</b> <i>rbridge-id/1</i> it is configured for both management interfaces.</p> <p>Enter <b>no ip address</b> <i>ipv4_address/prefix_len dhcp</i> to disable DHCP. For other operands, use the <b>no</b> form of the command to remove the corresponding configuration.</p> <p>Enter <b>no speed</b> to restore speed parameters to their defaults.</p>

**Examples** To configure a management interface with an IPv6 IP address:

```
switch(config)# interface management 1/0
switch(config-Management-1/0)# ipv6 address fd00:60:69bc:832:e61f:13ff:fe67:4b94/64
```

To set the interface to 100-Mbps Full Duplex

```
switch(config-Management-1/0)# speed 100
```

To apply an ACL to the management interfaces on a Brocade VDX 8770-4:

```
switch(config)# interface Management 1/1
switch(config-Management-1/1)# ip access-group stdACL3 in
switch(config-Management-1/1)# ipv6 access-group stdV6ACL1 in
switch(config-Management-1/1)# exit
switch(config)# interface Management 1/2
switch(config-Management-1/2)# ip access-group extdACL5 in
switch(config-Management-1/2)# exit
```

To enable DHCP for IPv4 addresses:

```
switch(config)# interface Management 1/1
switch(config-Management-1/1)# ip address dhcp
```

To enable DHCP for IPv6 addresses:

```
switch(config)# interface Management 1/1
switch(config-Management-1/1)# ipv6 address dhcp
```

Applying an ACL on management interface 1/1:

```
switch(config)# interface management
switch(config)# interface management 1/1
Entering configuration mode terminal
switch(config-Management-1/1)# ip access-group stdACL1 in
```

**Related Commands** [interface](#), [show interface management](#), [show running-config interface management](#)

## interface ve

Configures a Virtual Ethernet (VE) interface.

**Syntax** `interface ve vlan_id`

`no interface ve vlan_id`

**Parameters** *vlan\_id*

Specifies the corresponding VLAN interface that must already be configured before the VE interface can be created. Refer to the Usage Guidelines.

**Modes** RBridge ID configuration mode (for VCS)

Global configuration mode

**Usage Guidelines** Before you can configure a VE interface, you must configure a VLAN interface. The corresponding VE interface must use the same VLAN ID you used to configure the VLAN.

Use the **no** form of the command to remove the VE interface.



### CAUTION

**If no RBridge ID is configured on the switch, deleting the VE interface will cause a spike in CPU usage. To prevent this, configure an RBridge ID before deleting the VE interface.**

**Examples** The following example shows the steps needed to create a VE interface with the VLAN ID of 56 for RBridge ID 11. This example is for a VCS environment, and assumes that the VLAN 56 interface has already been created.

```
switch(config)# rbridge-id 11
switch(config-rbridge-id-11)# interface ve 56
```

The following example shows the steps needed to create a VE interface with the VLAN ID of 4093.

```
switch# configure
switch(config)# interface ve 4093
```

**Related Commands** [interface](#), [interface vlan](#)

# interface vlan

Allows the user to create 802.1Q VLANs, as well as service or transport VFs in a Virtual Fabrics context.

**Syntax** `interface vlan vlan_id`

`no interface vlan vlan_id`

**Command Default** VLAN 1 is predefined on the switch.

**Parameters** `vlan_id`

Specifies the VLAN interface to configure. The range is from 1 through 8191. (Refer to the Usage Guidelines.)

**Modes** Global configuration mode

**Usage Guidelines** Use this command to configure a VLAN interface. This command applies to both 802.1Q VLANs (whose VLAN IDs range from 1 through 4095) and service or transport VFs (whose VLAN IDs range from 4096 through 8191). To support multitenancy, assigning VLAN IDs from 4096 through 8191 creates service or transport VFs that are unique within a local VCS Fabric but that cannot extend to another VCS Fabric.

All of the ports on the switch are a part of the default VLAN 1.

Make sure your converged mode interface is not configured to classify untagged packets to the same VLAN as the incoming VLAN-tagged packets. By configuring a converged interface to classify untagged packets (by using classifiers or the default port `vlan_id`) to the same VLAN as VLAN-tagged packets coming into the interface, the FCoE hardware sends out untagged packets to the CNA. These packets may be dropped, disrupting communications.

For service or transport VFs to be implemented in a Virtual Fabrics context, the user must execute the **vcs virtual-fabric enable** command in global configuration mode.

Enter **no interface vlan *vlan\_id*** to delete a VLAN interface. This will also delete the corresponding virtual Ethernet (VE) interface.

**Examples** To create a VLAN with an ID of 56:

```
switch(config)# interface vlan 56
switch(conf-if-vl-56)#
```

To create a classified VLAN (with an ID from 4096 through 8191):

```
switch(config)# interface vlan 5000
switch(conf-if-vl-5000)#
```

**Related Commands** [interface](#), [interface ve](#), [fcmmap](#), [shutdown \(STP\)](#), [switchport](#), [vcs virtual-fabric enable](#)

## ip access-group

Applies rules specified in an IPv4 access control list (ACL) to traffic entering or exiting an interface.

<b>Syntax</b>	<b>ip access-group</b> <i>ACLname</i> { <b>in</b>   <b>out</b> }
	<b>no ip access-group</b> <i>ACLname</i> { <b>in</b>   <b>out</b> }
<b>Parameters</b>	<b>ACLname</b> Specifies the name of the standard or extended IP access list.
	<b>in   out</b> Specifies the binding direction (ingress or egress).
<b>Modes</b>	Interface subtype configuration mode
<b>Usage Guidelines</b>	Use this command to apply an IPv4 ACL to one of the following interface types: <ul style="list-style-type: none"> <li>• User interfaces <ul style="list-style-type: none"> <li>- Physical interfaces (&lt;N&gt;-gigabit Ethernet)</li> <li>- Logical interfaces (LAGs)</li> <li>- Virtual Ethernet interfaces (VEs)</li> </ul> </li> <li>• All supported management interfaces</li> <li>• Overlay gateways</li> </ul> <p>You can apply a maximum of six ACLs to a user interface, as follows:</p> <ul style="list-style-type: none"> <li>• One ingress MAC ACL</li> <li>• One egress MAC ACL</li> <li>• One ingress IPv4 ACL</li> <li>• One egress IPv4 ACL</li> <li>• One ingress IPv6 ACL</li> <li>• One egress IPv6 ACL</li> </ul> <p>You can apply a maximum of two ACLs to a management interface, as follows:</p> <ul style="list-style-type: none"> <li>• One ingress IPv4 ACL</li> <li>• One ingress IPv6 ACL</li> </ul> <p>You can apply a maximum of three ACLs to an overlay gateway, as follows:</p> <ul style="list-style-type: none"> <li>• One ingress MAC ACL</li> <li>• One ingress IPv4 ACL</li> <li>• One ingress IPv6 ACL</li> </ul>

---

### NOTE

You can apply an ACL to multiple interfaces, and you can apply an extended ACL twice—ingress and egress—to a given user interface.

---

To remove an IPv4 ACL from an interface, enter **no ip access-group** *ACLname*

To remove an ACL from an interface, use the **no** form of this command.

**Examples** To apply an ingress IP ACL named ipacl2 on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# ip access-group ipacl2 in
```



To remove an ingress IP ACL named ipacl2 from a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9  
switch(conf-if-te-178/0/9)# no ip access-group ipacl2 in
```

**Related Commands**    [interface](#), [interface ve](#), [ip access-list](#), [resequence access-list](#)

## ip access-list

Creates a standard or extended IPv4 access control list (ACL). In ACLs, you can define rules that permit or deny network traffic based on criteria that you specify.

<b>Syntax</b>	<p><b>ip access-list { standard   extended } ACLname</b></p> <p><b>no ip access-list { standard   extended } ACLname</b></p>
<b>Parameters</b>	<p><b>standard   extended</b> Specifies one of the following types of access lists:</p> <p><b>standard</b> Contains rules that permit or deny traffic based on source addresses that you specify. The rules are applicable to all ports of the specified addresses.</p> <p><b>extended</b> Contains rules that permit or deny traffic according to source and destination addresses, as well as other parameters. For example, you can also filter by port, protocol (TCP or UDP), and TCP flags.</p> <p><b>ACLname</b> Specifies a unique ACL name. The name can be up to 63 characters in length, and must begin with an alphanumeric character. No special characters are allowed, except for the underscore and hyphen.</p>
<b>Modes</b>	Global configuration mode
<b>Usage Guidelines</b>	<p>An ACL name can be up to 63 characters long, and must begin with a–z, A–Z or 0–9. You can also use underscore ( <code>_</code> ) or hyphen ( <code>-</code> ) in an ACL name, but not as the first character.</p> <p>On any given switch, an ACL name must be unique among all ACL types (MAC/IPv4/IPv6; standard or extended).</p> <p>After you create an ACL, use the <b>seq</b> command to create filtering rules for that ACL.</p> <p>An ACL starts functioning only after it is applied to an interface, using the <b>access-group</b> command.</p> <p>To delete an ACL, use the <b>no access-list</b> command. You can delete an ACL only after you first remove it from all interfaces to which it is applied, using the <b>no access-group</b> command.</p>
<b>Examples</b>	<p>The following example creates an IPv4 standard ACL:</p> <pre>switch# configure switch(config)# ip access-list standard stdACL3</pre> <p>The following example creates an IPv4 extended ACL:</p> <pre>switch# configure switch(config)# ip access-list extended extdACL5</pre> <p>The following example creates rules on an IPv4 standard ACL:</p> <pre>switch# configure switch(config)# ip access-list standard stdACL3 switch(config-ipacl-std)# seq 5 permit host 10.20.33.4 switch(config-ipacl-std)# seq 15 deny any</pre> <p>The following example deletes an IPv4 ACL:</p> <pre>switch# configure switch(config)# no ip access-list standard stdACL3</pre>
<b>Related Commands</b>	<p><a href="#">interface management</a>, <a href="#">seq (IPv4 extended ACLs)</a>, <a href="#">seq (IPv4 standard ACLs)</a>, <a href="#">show running-config interface management</a>, <a href="#">show running-config ip access-list</a></p>

# ip address

Configures an IP address.

**Syntax** `ip address ip-address/mask [ secondary ] [ { ospf-ignore | ospf-active } ]`

`no ip address`

**Parameters** *ip-address*

IP address.

*mask*

Mask for the associated IP subnet. Valid values range from integers from 1 through 31. Dotted-decimal is not supported.

**secondary**

Specifies that the configured address is a secondary IP address. If this keyword is omitted, the configured address is the primary IP address.

**ospf-ignore**

Disables adjacency formation with OSPF neighbors and advertisement of the interface to OSPF.

**ospf-passive**

Disables adjacency formation with OSPF neighbors but does not disable advertisement of the interface to OSPF.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use this command to configure a primary or secondary IP address for a specific interface. You can also use this command to prevent OSPF from running on specified subnets. Multiple primary IP addresses are supported on an interface.

A primary IP address cannot overlap with a previously configured IP subnet.

A primary IP address must be configured before you configure a secondary IP address in the same subnet.

Enter **no ip address** to remove the configured static or DHCP address, resetting the address to 0.0.0.0/0.

**Examples** To configure a primary IP address on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
```

```
switch(conf-if-te-178/0/9)# ip address 1.1.1.1/24
```

To configure a secondary IP address on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 1/3/1
```

```
switch(conf-if-fo-1/3/1)# ip address 1.1.1.1/28 secondary
```

**Related Commands** [interface \(range specification\)](#), [interface ve](#)

## ip address (NSX controller configuration)

Configures the IP address, port and connection method settings for an NSX controller connection profile.

- Syntax** `ip address ip-address [ method { ssl | tcp } ] [ port port_number ]`
- Parameters**
- ip address ip-address**  
IP address of the NSX Controller cluster. Only IPv4 addresses are allowed. This address is used to open a connection to the NSX Controller for Open vSwitch Database Management Protocol (OVSDB) exchange.
  - method**  
Specifies the connection method for this profile.
    - ssl**  
Specifies that a Secure Sockets Layer connection will be used. This is the default connection method.
    - tcp**  
Specifies that a transmission control protocol will be used.
  - port port\_number**  
Specifies the port number for the NSX controller. The range is 1-65535. The default 6632.
- Modes** NSX controller configuration mode
- Usage Guidelines** This command is allowed for a switch that is in logical chassis cluster mode only. The VXLAN gateway must be in shutdown state.
- Examples** The following example shows how to enter NSX controller configuration mode for the already created NSX controller connection profile called profile1, then how to create the IP address, set the method to TCP, and designate the port of 25:

```
switch# configuration
switch(config)# nsx-controller profile1
switch(config-nsx-controller-profile1)# ip address 10.21.83.188 method tcp port 25
```

## ip address (VXLAN)

Specifies the destination IPv4 address of a tunnel in VXLAN overlay gateway configurations.

**Syntax** `ip address IPv4_address`

`no ip address [ IPv4_address ]`

**Parameters** `IPv4_address`

IPv4 address of the destination tunnel.

**Modes** VXLAN overlay gateway site configuration mode

**Usage Guidelines** This command creates a tunnel when the parent overlay gateway is attached to one or more RBridges. The tunnel mode and the source IP address are derived from the parent overlay gateway.

To change an IP addresses, you must first remove the existing address, by means of the **no ip address IPv4\_address** or the **no ip address** commands. This also deletes all tunnels to the site.

Only one IPv4 address is allowed. The following IPv4 addresses are not allowed:

- Broadcast addresses (0.0.0.0 through 0.255.255.255)
- Localhost loopback addresses (127.0.0.0 through 127.255.255.255)
- Multicast addresses (224.0.0.0 through 239.255.255.255)
- Reserved addresses (240.0.0.0 through 255.255.,255.255)

**Examples** To specify an IPv4 address of a destination tunnel:

```
switch(config)# overlay-gateway gateway1
switch(config-overlay-gw-gateway1)# site mysite
switch(config-overlay-gw-gateway1-site-mysite)# ip address 10.11.12.13
```

**Related Commands** [overlay-gateway](#), [site](#)

## ip arp-aging-timeout

Sets how long an ARP entry stays in cache before the cache refreshes.

**Syntax** `ip arp-aging-timeout value`

`no ip arp-aging-timeout`

**Command Default** `ip arp-aging-timeout` is enabled and set to 240 minutes.

**Parameters** *value*

Determines how long an ARP entry stays in cache. For 1-gigabit, 10-gigabit, 40-gigabit, and Virtual Ethernet interfaces, the range of valid values is from 0 through 240 minutes.

**Modes** Interface subtype configuration mode

**Usage Guidelines** When a Brocade device places an entry in the ARP cache, the device also starts an aging timer for the entry. The aging timer ensures that the ARP cache does not retain learned entries that are no longer valid. An entry can become invalid when the device with the MAC address of the entry is no longer on the network.

The ARP age affects dynamic (learned) entries only, not static entries.

Enter **no ip arp-aging-timeout** command to disable aging so that entries do not age out.

Entering **ip arp-aging-timeout 0** also disables aging.

**Examples** To set the IP ARP aging timeout value to 100 minutes for a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# ip arp-aging-timeout 100
```

To disable IP ARP aging for a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 1/3/1
switch(conf-if-fo-1/3/1)# no ip arp-aging-timeout
```

**Related Commands** [interface](#), [interface ve](#)

## ip as-path access-list

Configures an AS-path access control list (ACL), specifies the community name, and whether to permit or deny traffic.

**Syntax** `ip as-path access-list string [ seq seq-value ] [ deny regular-expression | permit regular-expression ]`

`no ip as-path access-list string [ seq seq-value ] [ deny regular-expression | permit regular-expression ]`

**Command Default** This option is disabled.

**Parameters** *string*

ACL name.

*seq-value*

Sequence number as defined by the **seq** command.

*regular-expression*

A string inside quotes.

**Modes** RBridge ID configuration mode

**Usage Guidelines** This command accepts a regular expression that must be enclosed in quotes.

Use the **no** form of this command to restore the default.

**Examples** To create an AS-path ACL:

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# ip as-path access-list seq 10 permit "myaspath"
```

**Related Commands** [seq \(IPv6 extended ACLs\)](#), [seq \(IPv6 standard ACLs\)](#)

## ip community-list extended

Configures a community access control list (ACL), specifies the community name, and whether to permit or deny traffic, including through the use of a regular expression.

<b>Syntax</b>	<p><b>ip community-list extended</b> <i>community-list-name</i> { <b>deny</b> <i>string</i>   <b>permit</b> <i>string</i> } [ <b>seq</b> <i>seq</i> ] [ <b>internet</b>   <b>local-as</b>   <b>no-advertise</b>   <b>no-export</b> ]</p> <p><b>no ip community-list extended</b> <i>community-list-name</i></p>
<b>Command Default</b>	This option is disabled.
<b>Parameters</b>	<p><b>community-list-name</b> Range is from 1 through 32 ASCII characters.</p> <p><b>string</b> An ordered community-list regular expression.</p> <p><b>seq</b> Sequence number. Range is from 1 through 65535.</p> <p><b>internet</b> The Internet community.</p> <p><b>no-export</b> Community of sub-ASs within a confederation. Routes with this community can be exported to other sub-ASs in the same confederation but not outside the confederation to other ASs or otherwise sent to EBGP neighbors.</p> <p><b>local-as</b> Local sub-AS within the confederation. Routes with this community can be advertised only within the local sub-AS.</p> <p><b>no-advertise</b> Routes with this community cannot be advertised to any other BGP4 devices at all.</p> <p><b>regular-expression</b> A string enclosed in quotes.</p>
<b>Modes</b>	RBridge ID configuration mode
<b>Usage Guidelines</b>	<p>Unlike a standard community list, this command does accept a regular expression as long as the string is enclosed in quotes.</p> <p>Use the <b>no</b> form of this command to restore the default.</p>
<b>Examples</b>	<p>To create an extended community list:</p> <pre>switch(config)# rbridge-id 10 switch(config-rbridge-id-10)# ip community-list extended seq 10 permit "mycommunity"</pre>
<b>Related Commands</b>	<a href="#">ip community-list standard, seq (IPv6 extended ACLs)</a>



# ip community-list standard

Configures a community access control list (ACL), specifies the community number or type, and whether to permit or deny traffic.

**Syntax** `ip community-list standard community-list-name { deny [ community-number | AA:NN ] | permit community-number } [ seq seq-value ] [ internet | local-as | no-advertise | no-export ]`

`no ip community-list standard community-list-name`

**Command Default** This option is disabled.

**Parameters** *community-list-name*

Range is from 1 through 32 ASCII characters.

*community-number*

A community number. Range is from 1 through 4294967295.

*AA : NN*

Autonomous system number and network number, configured as 2-byte numbers separated by a colon.

*seq*

Sequence number. Range is from 1 through 65535.

*internet*

The Internet community.

*no-export*

Community of sub-ASs within a confederation. Routes with this community can be exported to other sub-ASs in the same confederation but not outside the confederation to other ASs or otherwise sent to EBGp neighbors.

*local-as*

Local sub-AS within the confederation. Routes with this community can be advertised only within the local sub-AS.

*no-advertise*

Routes with this community cannot be advertised to any other BGP4 devices at all.

**Modes** RBridge ID configuration mode

**Usage Guidelines** A standard community list does not accept a regular expression.

Use the **no** form of this command to restore the default.

**Examples** To create a standard community list:

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# ip community-list standard seq 10 permit local-as
```

**Related Commands** [ip community-list extended, seq \(IPv6 standard ACLs\)](#)

## ip dhcp relay address

Configures the IP DHCP Relay on a Layer 3 interface.

<b>Syntax</b>	<b>ip dhcp relay address</b> <i>ip-addr</i> [ <b>use-vrf</b> <i>vrf-name</i> ]
<b>Parameters</b>	<p><b>ip-addr</b> IPv4 address of the DHCP server where the DHCP client requests are to be forwarded.</p> <p><b>use-vrf</b> Use this option if the VRF where the DHCP server is located is different from the VRF of the interface where the client is connected.</p> <p><b>vrf-name</b> VRF name.</p>
<b>Modes</b>	Interface configuration mode
<b>Usage Guidelines</b>	<p>This command uses the IPv4 address of the DHCP server where the DHCP client requests are to be forwarded. You can configure the address on a virtual Ethernet (VE) or a physical GigabitEthernet, TENGigabitEthernet, or FortyGigabitEthernet interface</p> <p>Enter the command while in interface configuration mode for a VE or physical interface where you want to configure the IP DHCP Relay. Configure up to four DHCP server IP addresses per interface. Use the <b>no</b> version of this command to remove the IP DHCP Relay from the interface. If the <b>use-vrf</b> option is not used, it is assumed that the DHCP server and interface where the client is connected are on the same VRF.</p>
<b>Examples</b>	<p>To configure an IP DHCP Relay address on a VE interface::</p> <pre>switch(config)# rbridge-id 1 switch(config-rbridge-id-1)interface ve 101 switch(config-Ve-101)# ip dhcp relay address 100.1.1.2 switch(config-Ve-101)# ip dhcp relay address 12.3.4.6</pre> <p>To configure an IP DHCP Relay address on an interface if the DHCP server is on a different VRF than the interface where the client connects:</p> <pre>switch# config Entering configuration mode terminal switch(config)# rbridge-id 2 switch(config-rbridge-id-2)# interface ve 103 switch(config-Ve-103)# ip dhcp relay address 3.1.2.255 use-vrf blue</pre>
<b>Related Commands</b>	<a href="#">show ip dhcp relay address interface</a>

# ip directed-broadcast

Enables IP directed broadcasts on an interface. A directed broadcast is an IP broadcast to all devices within a single directly attached network or subnet.

**Syntax** **ip directed-broadcast**

**no ip directed-broadcast**

**Command Default** **ip directed broadcast** is disabled.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no ip directed-broadcast** to disable IP directed broadcasts on a specific interface.

**Examples** To enable IP directed broadcasts on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# ip directed-broadcast
```

To disable IP directed broadcasts on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 1/3/1
switch(conf-if-fo-1/3/1)# no ip directed-broadcast
```

**Related  
Commands** [interface](#), [interface ve](#)

## ip dns

Sets the domain name service (DNS) parameters.

This command configures the DNS domain name and name-server IP address. The DNS parameters are the domain name and the name server IP address for primary and secondary name servers

<b>Syntax</b>	<b>ip dns</b> { <b>domain-name</b> <i>domain_name</i>   <b>name-server</b> <i>ip_address_of_name_server</i> }
	<b>no ip dns</b> { <b>domain-name</b> <i>domain_name</i>   <b>name-server</b> <i>ip_address_of_name_server</i> }
<b>Parameters</b>	<p><b>domain-name</b> <i>domain_name</i> The domain name for the primary and secondary name servers.</p> <p><b>name-server</b> <i>ip_address_of_name_server</i> The IP address of the primary and secondary name servers. IPv6 and IPv4 addresses are supported.</p>
<b>Modes</b>	Global configuration mode
<b>Usage Guidelines</b>	<p>You can enter only two name server IP addresses.</p> <p>Name servers can only be entered or removed one at a time. The newly entered name server will append to the existing name server.</p>

---

### NOTE

If a domain name is not configured by means of the **domain-name** operand, DNS configuration will not work and a warning message will appear.

---

Enter **no ip dns domain-name** *domain\_name* to disable IP directed broadcasts for a specific domain.

Enter **no ip dns name-server** *ip\_address\_of\_name\_server* to disable IP directed broadcasts for a specific name server.

**Examples** To configure DNS:

```
switch(config)# ip dns domain-name brocade.com
switch(config)# ip dns name-server 10.70.20.1
switch(config)# ip dns name-server 10.70.20.10
```

**Related Commands** [show running-config ip dns](#)

## ip echo-reply

Enables the generation of an Internet Control Message Protocol (ICMP) Echo Reply message.

**Syntax** `ip echo-reply`

`no ip echo-reply`

**Modes** Global configuration mode

**Usage Guidelines** This is an interface-specific configuration. The configuration is persistent across a switch reload.

# ip extcommunity-list

Sets a BGP extended community filter.

**Syntax** `ip extcommunity-list number { deny | permit [ rt value ] [ soo value ] }`

`ip extcommunity-list number`

**Command Default** No BGP extended community filter is set.

**Parameters** *number*

Specifies an Extended Community list Instance number.

**deny**

Denies access for a matching condition.

**permit**

Permits access for a matching condition.

**rt**

Specifies the route target (RT) extended community.

*value*

Specifies the RT extended community value. This value can be entered in one of the following formats:

- autonomous-system-number : network-number
- ip-address : network-number

**soo**

Specifies the site of origin (SOO) extended community.

*value*

Specifies the SOO extended community value. This value can be entered in one of the following formats:

- autonomous-system-number : network-number
- ip-address : network-number

**Modes** Rbridge-ID configuration mode

**Usage Guidelines** Use the no form of this command to delete a BGP extended community filter.

**Examples**

```
device# configure
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ip extcommunity-list 1 permit rt 123:2
device(config-rbridge-id-122)# ip extcommunity-list 1 deny soo 124:1
```

**History**

Release version	Command history
5.0.0	This command was introduced.

# ip fabric-virtual-gateway

Enables IPv4 Fabric-Virtual-Gateway configurations.

**Syntax** `ip fabric-virtual-gateway`

`no ip fabric-virtual-gateway`

**Command Default** None

**Modes** Fabric-Virtual-Gateway global interface VE IPv4 configuration mode.

**Usage Guidelines** Enter the **no** form of the command to disable IPv4 Fabric-Virtual-Gateway configurations.

**Examples** The following example shows how to enable IPv4 Fabric-Virtual-Gateway on global VE interface.

```
switch(config)# interface ve 2000
switch(config-Ve-2000)# ip fabric-virtual-gateway
```

## History

Release version	Command history
5.0.1	This command was introduced.

## ip http-server enable

Enables the HTTP server. Once enabled, the HTTP daemon starts without the need to reboot.

**Syntax** **ip http-server enable**

**no ip http-server enable**

**Command Default** The HTTP server is disabled by default.

**Modes** Global configuration mode

**Usage Guidelines** Use the **no ip http-server enable** command to disable the HTTP server. All active HTTP connections are closed, followed by a restart of the Apache server.



## ip icmp rate-limit

Limits the rate at which Internet Control Message Protocol (ICMP) messages are sent on an IPv4 network.

**Syntax** `ip icmp rate-limit milliseconds`

`no ip icmp rate-limit`

**Command Default** The default value is 1000 milliseconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The configuration is persistent across a switch reload. Once it is enabled, all outbound ICMP message types are rate limited.

## ip igmp immediate-leave

Removes a group from the IGMP table immediately when receiving a Leave Group request.

This command treats the interface as if it had one multicast client, so receipt of a Leave Group request on the interface causes the group to be immediately removed from the multicast database.

**Syntax**    **ip igmp immediate-leave**

**no ip igmp immediate-leave**

**Command Default**    This command is disabled.

**Modes**            Interface subtype configuration mode

**Usage Guidelines**    Enter **no ip igmp immediate-leave** to restore the default setting.

# ip igmp last-member-query-interval

Sets the last-member query interval for a VLAN.

**Syntax** `ip igmp last-member-query-interval milliseconds`

`no ip igmp last-member-query-interval`

**Command Default** 1000 milliseconds

**Parameters** *milliseconds*

Response time in milliseconds. Valid values range from 100 through 25500 milliseconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The last-member query interval is the time in seconds that the IGMP router waits to receive a response to a group-specific query message, including messages sent in response to a host-leave message.

Enter **no ip igmp last-member-query-interval** to remove the last-member query interval on a specific interface.

**Examples** To set the last-member query interval to 1500 milliseconds on a specific VLAN interface:

```
switch(config)# interface vlan 100
switch(conf-Vlan-100)# ip igmp last-member-query-interval 1500
```

**Related Commands** [interface](#), [interface ve](#), [ip igmp query-interval](#), [ip igmp query-max-response-time](#), [ip igmp static-group](#)

## ip igmp query-interval

Sets the query interval for a VLAN. The query interval is the amount of time between IGMP query messages sent by the switch.

**Syntax** `ip igmp query-interval seconds`

`no ip igmp query-interval`

**Command Default** 125 seconds

**Parameters** *seconds*

Response time in seconds. Valid values range from 1 through 18000 seconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no ip igmp query-interval` to remove the query interval on a specific VLAN interface.

**Examples** To set the query interval to 500 seconds on a specific VLAN interface:

```
switch(config)# interface vlan 100
switch(conf-Vlan-100)# ip igmp query-interval 500
```

To remove the query interval from a specific VLAN interface:

```
switch(config)# interface vlan 100
switch(conf-Vlan-100)# no ip igmp query-interval
```

**Related Commands** [interface](#), [ip igmp last-member-query-interval](#), [ip igmp query-max-response-time](#), [ip igmp static-group](#)

## ip igmp query-max-response-time

Sets the maximum response time for IGMP queries for a VLAN.

**Syntax** `ip igmp query-max-response-time seconds`

`no ip igmp query-max-response-time`

**Command Default** 10 seconds

**Parameters** *seconds*

Response time in seconds. Valid values range from 1 through 25 seconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** When a host receives the query packet, it starts counting to a random value, less than the maximum response time. When this timer expires, the switch (host) replies with a report, provided that no other host from the same group has responded yet.

Enter **no ip igmp query-max-response-time** to restore the default maximum response time for IGMP queries.

**Examples** To set the maximum response time to 20 seconds on a specific VLAN interface:

```
switch(config)# interface vlan 100
switch(conf-vlan-100)# ip igmp query-max-response-time 20
```

To remove the maximum response time from a specific VLAN interface:

```
switch(config)# interface vlan 100
switch(conf-vlan-100)# no ip igmp query-max-response-time
```

**Related Commands** [interface](#), [ip igmp last-member-query-interval](#), [ip igmp query-interval](#), [ip igmp static-group](#)

## ip igmp snooping enable (global version)

Enables Internet Group Management Protocol (IGMP) snooping for all VLAN interfaces.

**Syntax** **ip igmp snooping enable**

**no ip igmp snooping enable**

**Command Default** IGMP snooping is globally disabled.

**Modes** Global configuration mode

**Usage Guidelines** This command enables IGMP snooping at the global level causing feature to be automatically enabled at all the already configured VLANs. In presence of this command, later if a VLAN is created, IGMP snooping will get enabled for that VLAN as well.

Enter **no ip igmp snooping enable** to return to the default setting.

**Examples** To enable IGMP globally:

```
switch(config)# ip igmp snooping enable
```

**Related Commands** [ip igmp snooping enable](#), [show ip igmp snooping](#)

# ip igmp snooping enable

Enables Internet Group Management Protocol (IGMP) snooping for a specific VLAN interface.

**Syntax** `ip igmp snooping enable`

`no ip igmp snooping enable`

**Command Default** When snooping is enabled globally, IGMP snooping is enabled on all VLAN interfaces.

**Modes** Interface subtype configuration mode

**Usage Guidelines** IGMP snooping allows a network switch to listen in on the IGMP conversation between hosts and routers. By listening to these conversations, the switch maintains a map of which links need which IP multicast streams. Multicasts may be filtered from the links which do not need them.

Enter **no ip igmp snooping enable** to disable snooping for a specific VLAN interface.

**Examples** To enable IGMP for a specific VLAN interface:

```
switch(config)# interface vlan 1
switch(config-Vlan-1)# ip igmp snooping enable
```

To disable IGMP for a specific VLAN interface:

```
switch(config)# interface vlan 1
switch(config-Vlan-1)# no ip igmp snooping enable
```

**Related Commands** [interface](#), [interface ve](#), [ip igmp snooping enable \(global version\)](#), [ip igmp snooping fast-leave](#), [ip igmp snooping mrouter](#), [ip igmp snooping mrouter-timeout](#), [ip igmp snooping querier enable](#), [show ip igmp snooping](#)

## ip igmp snooping fast-leave

Enables Internet Group Management Protocol (IGMP) snooping fast-leave processing for a VLAN. This allows the removal of an interface from the forwarding table without sending out group-specific queries to the interface

**Syntax** **ip igmp snooping fast-leave**

**no ip igmp snooping fast-leave**

**Command Default** This command is disabled.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no ip igmp snooping fast-leave** to disable this function.

**Examples** To enable snooping fast-leave for a specific VLAN interface:

```
switch(config)# interface vlan 1
switch(config-Vlan-1)# ip igmp snooping fast-leave
```

To disable snooping fast-leave for a specific VLAN interface:

```
switch(config)# interface vlan 1
switch(config-Vlan-1)# no ip igmp snooping fast-leave
```

**Related Commands** [interface](#), [interface ve](#), [ip igmp snooping enable \(global version\)](#), [ip igmp snooping enable](#), [ip igmp snooping mrouter](#), [ip igmp snooping mrouter-timeout](#), [ip igmp snooping querier enable](#), [show ip igmp snooping](#)



## ip igmp snooping mrouter

Configures a VLAN port member to be a multicast router interface. A multicast router interface faces toward a multicast router or other Internet Group Management Protocol (IGMP) querier.

**Syntax** `ip igmp snooping mrouter { <N>gigabitethernet rbridge-id/slot/port | port-channel number }`

`no ip igmp snooping mrouter { <N>gigabitethernet rbridge-id/slot/port | port-channel number }`

**Parameters** **interface**

Specifies an interface.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>gigabitethernet with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**port-channel number**

Specifies the interface is a port-channel. Valid values range from 1 through 6144.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no ip igmp snooping mrouter** to remove the configured mrouter.

This command is mutually exclusive of **ip igmp snooping querier enable**.

**Examples** To configure a VLAN port member to be a multicast router interface.

```
switch(config)# interface vlan 100
switch(config-Vlan-100)# ip igmp snooping mrouter interface tengigabitethernet 101/0/1
```

**Related Commands** [interface](#), [ip igmp snooping enable \(global version\)](#), [ip igmp snooping enable](#), [ip igmp snooping fast-leave](#), [ip igmp snooping mrouter-timeout](#), [ip igmp snooping querier enable](#), [show ip igmp snooping](#)

## ip igmp snooping mrouter-timeout

Configures the mrouter timeout value for Internet Group Management Protocol (IGMP) snooping on a VLAN. The timeout range determines when multicast router ports are automatically learned on a specific VLAN interface.

**Syntax** **ip igmp snooping mrouter-timeout** *seconds*

**no ip igmp snooping mrouter-timeout**

**Command Default** 300 seconds

**Parameters** **seconds**

Timeout time in seconds. Valid range is from 1 through 60000 seconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no ip igmp snooping mrouter-timeout** to restore the default mrouter value of 300 seconds on the VLAN interface.

**Examples** To configure the mrouter timeout value to 600 seconds on a VLAN interface:

```
switch(config)# interface vlan 100
switch(config-Vlan-100)# ip igmp snooping mrouter-timeout 600
```

**Related Commands** [interface](#), [ip igmp snooping enable \(global version\)](#), [ip igmp snooping enable](#), [ip igmp snooping fast-leave](#), [ip igmp snooping mrouter](#), [ip igmp snooping querier enable](#), [show ip igmp snooping](#)

## ip igmp snooping querier enable

Activates or deactivates the Internet Group Management Protocol (IGMP) snooping querier on a VLAN.

**Syntax** **ip igmp snooping querier enable**  
**no ip igmp snooping querier enable**

**Command Default** IGMP snooping querier is disabled.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no ip igmp snooping querier enable** to disable the IGMP snooping querier. This command is mutually exclusive of **ip igmp snooping mrouter interface** .

**Examples** To enable the IGMP snooping querier feature for the VLAN interface:

```
switch(config)# interface vlan 100
switch(config-Vlan-100)# ip igmp snooping querier enable
```

**Related Commands** [interface](#), [ip igmp snooping enable \(global version\)](#), [ip igmp snooping enable](#), [ip igmp snooping fast-leave](#), [ip igmp snooping mrouter](#), [ip igmp snooping mrouter-timeout](#), [show ip igmp snooping](#)

## ip igmp snooping restrict-unknown-multicast

Activates or deactivates the Internet Group Management Protocol (IGMP) snooping hello-based mrouter detection functionality.

**Syntax** **ip igmp snooping restrict-unknown-multicast**

**no ip igmp snooping restrict-unknown-multicast**

**Command Default** IGMP snooping restrict-unknown-multicast is enabled.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The PIM hello-based multicast router presence detection feature scans the network traffic for incoming PIM hellos. When a PIM hello is detected, that port is marked for the presence of a multicast router and the information is saved. This prevents unnecessary flooding if the PIM designated router (DR) goes offline, as IGMP reports are forwarded to the multicast routers and not only the snooping enabled router.

Enter **no ip igmp snooping restrict-unknown-multicast** to disable the hello-based mrouter detection functionality.

**Examples** To enable the IGMP snooping hello-based mrouter detection functionality feature for the VLAN interface:

```
switch(config)# interface vlan 100
switch(config-Vlan-100)# ip igmp snooping restrict-unknown-multicast
```

**Related Commands** [interface](#), [ip igmp snooping enable \(global version\)](#), [ip igmp snooping enable](#), [ip igmp snooping fast-leave](#), [ip igmp snooping mrouter](#), [ip igmp snooping mrouter-timeout](#), [show ip igmp snooping](#)

# ip igmp static-group

Configures the static group membership entries for a specific interface.

**Syntax** `ip igmp static-group A.B.C.D`

`no ip igmp static-group A.B.C.D`

**Parameters** `A.B.C.D`

Specifies the group address, as a subnet number in dotted decimal format (for example, 10.0.0.1), as the allowable range of addresses included in the multicast group.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command to creates IGMP static group membership to test multicast forwarding without a receiver host.

When you enable IGMP static group membership, data is forwarded to an interface without receiving membership reports from host members. Using `ip igmp static-group`, packets to the group are fast-switched out of a specific interface. Static group membership entries are automatically added to the IGMP cache and PIMmcache table. Enter `no ip igmp static-group A.B.C.D` to restore the default setting for the specified group address.

**Examples** To create a static port-channel group for a specific VLAN interface:

```
switch(config)# interface vlan 100
switch(config-Vlan-100)# ip igmp static-group 225.1.1.1 interface port-channel 60
```

To reset a static group on a specific VLAN interface to the default settings:

```
switch(config)# interface vlan 100
switch(config-Vlan-100)# no ip igmp static-group 225.1.1.1
```

**Related Commands** [interface](#), [ip igmp last-member-query-interval](#), [ip igmp query-interval](#), [ip igmp query-max-response-time](#)

## ip import routes (IPv4 VRF address-family configuration mode)

Leaks IPv4 routes from one VRF to the VRF you are configuring, based on match criteria defined in route-map.

<b>Syntax</b>	<b>ip import routes</b> <i>VRF_name</i> <b>map</b> <i>rmap_name</i> <b>no ip import routes</b>				
<b>Parameters</b>	<b><i>VRF_name</i></b> Specifies the VRF instance from which to leak routes to the VRF you are configuring. <b><i>rmap_name</i></b> Specifies the map name to use for route-leaking match criteria.				
<b>Modes</b>	IPv4 VRF address-family configuration mode				
<b>Usage Guidelines</b>	Use the <b>no</b> form of the command to remove routes from being leaked to the VRF you are configuring.				
<b>Examples</b>	To leak IPv4 routes from a VRF named "red" to the VRF named "orange," based on match criteria from a route map named "import-map," with an example RBridge ID of 10: <pre>switch# configure switch(config)# rbridge-id 10 switch(config-rbridge-id-10)# vrf orange switch(config-vrf-orange)# address-family ipv4 unicast switch(config-ipv4-unicast)# ip import routes red route-map import-map</pre>				
<b>History</b>	<table><thead><tr><th>Release version</th><th>Command history</th></tr></thead><tbody><tr><td>5.0.0</td><td>This command was introduced.</td></tr></tbody></table>	Release version	Command history	5.0.0	This command was introduced.
Release version	Command history				
5.0.0	This command was introduced.				

## ip import routes (RBridge ID configuration mode)

Leaks IPv4 routes from the specified VRF to the default VRF, based on match criteria defined in route-map.

**Syntax** `ip import routes VRF_name map rmap_name`

`no ip import routes`

**Parameters** *VRF\_name*

Specifies the VRF instance from which to leak routes to the default VRF.

*rmap\_name*

Specifies the map name to use for route-leaking match criteria.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use the `no` form of the command to remove routes from being leaked to the default VRF.

**Examples** To leak IPv4 routes from a VRF named "red" to the default VRF, based on match criteria from a route map named "import-map" :

```
switch# configure
switch(config)# rbridge-id 54
switch(config-rbridge-id-54)# ip import routes red map import-map
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## ip interface

Sets the IP address of the VXLAN overlay gateway instance.

**Syntax** `ip interface { ve veid vrrp-extended-group group-ID | loopback ifid }`

**no ip interface**

**Parameters** `ve veid`

Specifies the ID of the virtual Ethernet (VE) interface (which must already be configured) through which you are configuring the IP address of the VXLAN gateway.

**vrrp-extended-group *group-ID***

Specifies the virtual router group (which must already be configured) through which you are configuring the IP address of the VXLAN gateway.

**loopback *ifid***

Specifies an IPv4 loopback interface ID (IPv6 addresses are ignored). The range is from 1 through 255.

**Modes** VXLAN overlay gateway configuration mode

**Usage Guidelines** The VXLAN overlay gateway IP address is also the source IP address for all the tunnels associated with the gateway. The command accepts the VE interface ID and VRRP-E group ID, then sets the overlay gateway IP address to be identical to the already configured Virtual Redundancy Router Protocol-Extended (VRRP-E) virtual IP address.

Ensure that the VXLAN gateway is in the inactive state when you issue this command. Use the **no activate** command in VXLAN overlay gateway configuration mode to deactivate the gateway.

If a specified loopback ID does not exist, or if the loopback interface is not fully configured, the **activate** command is rejected.

If you have already added RBridge attachments to the VXLAN gateway overlay, the VE and VRRP-E group IDs must exist for the attached RBridge IDs.

Changing the VE interface ID or VRRP-E group ID requires an update of all tunnel source addresses.

Use the **no** form of this command to delete the IP address configuration for this gateway.

Some commands cannot be used if they would affect an active VXLAN gateway address configuration. For example, consider the following configuration:

```
switch# configure
switch(config)# overlay-gateway xx
switch(config-overlay-gw-xx)# attach rbridge-id add 1
switch(config-overlay-gw-xx)# ip interface ve 1000 vrrp-extended-group 100
switch(config-overlay-gw-xx)# activate
```

Examples of operations that would not be allowed based on this configuration are:

- Deleting VLAN 1000 (because this implicitly deletes VE 1000)
- Deleting VE 1000 on Rbridge 1
- Deleting VRRP-E group 100 for VE 1000 on Rbridge 1
- Changing virtual IP configuration for VE 1000, VRRPE group 100 on Rbridge 1
- Changing VRF on VE 1000 on Rbridge 1



**Examples** To set the IP address of a VXLAN gateway overlay named "gateway1" (using the already configured Ve interface ID 10 and the vrrp-extended group ID 25):

```
switch# configure
switch(config)# overlay-gateway gateway1
switch(config-overlay-gw-gateway1)# ip interface ve 10 vrrp-extended-group 25
```

**Related Commands** [activate \(VXLAN gateway\)](#), [attach rbridge-id](#), [interface loopback](#), [interface ve](#), [overlay-gateway](#)

## ip mtu

Sets the MTU on a specified interface.

**Syntax** `ip mtu size`

`no ip mtu`

**Command Default** MTU size is 1500 bytes.

**Parameters** *size*

Specifies the size of the maximum transmission unit (MTU) of an interface.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The entire fabric acts like a single switch. Therefore, MTU is applicable only on edge ports and not on an ISL.

The allowed MTU size is from 576 to 9018 bytes.

Enter **no ip mtu** to reset the MTU size to the default.

**Examples** To set the MTU size to 2000 bytes on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# ip mtu 2000
```

**Related  
Commands** [interface](#)

## ip multicast-boundary

Configures a multicast boundary on an interface.

**Syntax** **ip multicast-boundary**

**no ip multicast-boundary**

**Command Default** No multicast boundaries are defined on an interface.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Since there is no support for a prefix-list, this command applies the boundary for the entire multicast range on the interface.

Enter **no ip multicast-boundary** to disable this feature.

## ip ospf active

Sets a specific OSPF interface to active.

**Syntax** `ip ospf active`

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use the **ip ospf active** command on each interface participating in adjacency formation. This command overrides the global passive setting on that interface, and enables transmission of OSPF control packets.

**Examples** To set a specific OSPF virtual Ethernet (VE) interface to active:

```
switch# configure
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)# int ve 100
sw0(config-Ve-100)# ip ospf active
```

**Related  
Commands** [ip ospf passive](#)

# ip ospf area

Enables OSPF on an interface.

**Syntax** `ip ospf area area-id`

`no ip ospf area`

**Command Default** OSPF is disabled.

**Parameters** *area-id*

Area address in dotted decimal or decimal format.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use this command to enable an OSPF area on the interface to which you are connected. Enter **no ip ospf area** to disable OSPF on this interface.

**Examples** To enable a configured OSPF area named 0 on a specific OSPF 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 190/0/49
switch(conf-if-te-190/0/49)# ip ospf area 0
```

To enable a configured OSPF area named 0 on a specific OSPF virtual Ethernet (VE) interface:

```
switch(config)# rbridge-id 178
switch(config-rbridge-id-178)# interface ve 12
switch(config-ve-12)# ip ospf area 0
```

**Related Commands** [interface](#), [interface ve](#), [ip ospf auth-change-wait-time](#), [ip ospf authentication-key](#), [ip ospf cost](#), [ip ospf database-filter](#), [ip ospf dead-interval](#), [ip ospf hello-interval](#), [ip ospf md5-authentication](#), [ip ospf mtu-ignore](#), [ip ospf network](#), [ip ospf passive](#), [ip ospf priority](#), [ip ospf retransmit-interval](#), [ip ospf transmit-delay](#)

## ip ospf auth-change-wait-time

Configures authentication-change hold time.

**Syntax** `ip ospf auth-change-wait-time wait-time`

`no ip ospf auth-change-wait-time`

**Command Default** Wait time is 300 seconds

**Parameters** *wait-time*

Time before an authentication change takes place. Valid values range from 0 to 14400 seconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use this command to set or reset the authentication change hold time for the interface to which you are connected.

OSPF provides graceful authentication change for the following types of authentication changes:

Changing authentication methods from one of the following to another of the following:

- Simple text password
- MD5 authentication
- No authentication

Configuring a new simple text password or MD5 authentication key.

Changing an existing simple text password or MD5 authentication key

Enter **no ip ospf auth-change-wait-time** to reset the wait time to the default of 300 seconds.

**Examples** To set the wait time to 600 seconds on a specific OSPF 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 190/0/49
switch(conf-if-te-190/0/49)# ip ospf auth-change-wait-time 600
```

To set the wait time to 400 seconds on a specific OSPF virtual Ethernet (VE) interface:

```
switch(config)# rbridge-id 178
switch(config-rbridge-id-178)# interface ve 12
switch(config-ve-12)# ip ospf auth-change-wait-time 400
```

**Related Commands** [interface](#), [interface ve](#), [ip ospf area](#), [ip ospf authentication-key](#), [ip ospf cost](#), [ip ospf database-filter](#), [ip ospf dead-interval](#), [ip ospf hello-interval](#), [ip ospf md5-authentication](#), [ip ospf mtu-ignore](#), [ip ospf network](#), [ip ospf passive](#), [ip ospf priority](#), [ip ospf retransmit-interval](#), [ip ospf transmit-delay](#)

# ip ospf authentication-key

Configures simple password-based authentication for OSPF.

<b>Syntax</b>	<b>ip ospf authentication-key</b> { <b>0 password</b>   <b>2 password</b>   <b>255 password</b>   <b>password</b> }
	<b>no ip ospf authentication-key</b>
<b>Command Default</b>	No authentication.
<b>Parameters</b>	<p><b>0 password</b></p> <p>No encryption. OSPF processes <i>password</i> as a plain text password and shows the unencrypted password in the <b>show running</b> command output as follows: key 0 passwd</p> <p><b>2 password</b></p> <p>Expects the user to provide the encrypted password, preceded by a dollar sign (\$) sign, and shows the encrypted password in the <b>show running</b> command output as follows: key 2 \$ci1pVT0=</p> <p><b>255 password</b></p> <p>Expects the user to provide the encrypted password, and <b>255</b> internally maps to <b>2</b> . OSPF shows the encrypted password in the <b>show running</b> command output as follows: key 2 \$ci1pVT0=</p> <p><b>password</b></p> <p>OSPF processes <i>password</i> as a plain text password. OSPF internally encrypts this password as if encryption key 2 was specified and shows the encrypted password in the <b>show running</b> command output as follows: key 2 \$ci1pVT0=</p>
<b>Modes</b>	Interface subtype configuration mode
<b>Usage Guidelines</b>	Use this command to sets or reset simple password-based authentication on the OSPF interface to which you are connected. Enter <b>no ip ospf authentication-key</b> to disable OSPF authentication.
<b>Examples</b>	<p>The following command sets authentication only on the OSPF 10-gigabit Ethernet interface 190/0/49. To enter a plain text password called brocade that OSPF will encrypt as if encryption key 2 was specified:</p> <pre>switch(config)# interface tengigabitethernet 190/0/49 switch(conf-if-te-190/0/49)# ip ospf authentication-key brocade</pre> <p>The following example sets authentication on the OSPF virtual Ethernet (VE) interface 12, with a plain text password called brocade that OSPF will encrypt as if encryption key 2 was specified:</p> <pre>switch(config)# rbridge-id 178 switch(config-rbridge-id-178)# interface ve 12 switch(config-ve-12)# ip ospf authentication-key brocade</pre>
<b>Related Commands</b>	<a href="#">interface</a> , <a href="#">interface ve</a> , <a href="#">ip ospf area</a> , <a href="#">ip ospf auth-change-wait-time</a> , <a href="#">ip ospf cost</a> , <a href="#">ip ospf database-filter</a> , <a href="#">ip ospf dead-interval</a> , <a href="#">ip ospf hello-interval</a> , <a href="#">ip ospf md5-authentication</a> , <a href="#">ip ospf mtu-ignore</a> , <a href="#">ip ospf network</a> , <a href="#">ip ospf passive</a> , <a href="#">ip ospf priority</a> , <a href="#">ip ospf retransmit-interval</a> , <a href="#">ip ospf transmit-delay</a>

## ip ospf cost

Configures cost for a specific interface.

**Syntax** `ip ospf cost value`

`no ip ospf cost`

**Command Default** Cost value is 1.

**Parameters** *value*

Cost value. Valid values range from 1 through 65535.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use this command to set or reset the OSPF cost on the interface. If the cost is not configured with this command, OSPF calculates the value from the reference and interface bandwidths.

Enter **no ip ospf cost** to disable this configuration.

**Examples** To set the cost to 600 on a specific OSPF 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 190/0/49
switch(conf-if-te-190/0/49)# ip ospf cost 600
```

To set the cost to 520 on a specific OSPF virtual Ethernet (VE) interface:

```
switch(config)# rbridge-id 178
switch(config-rbridge-id-178)# interface ve 12
switch(config-ve-12)# ip ospf cost 520
```

**Related Commands** [auto-cost reference-bandwidth \(OSPF\)](#), [interface](#), [interface ve](#), [ip ospf area](#), [ip ospf auth-change-wait-time](#), [ip ospf authentication-key](#), [ip ospf database-filter](#), [ip ospf dead-interval](#), [ip ospf hello-interval](#), [ip ospf md5-authentication](#), [ip ospf mtu-ignore](#), [ip ospf network](#), [ip ospf passive](#), [ip ospf priority](#), [ip ospf retransmit-interval](#), [ip ospf transmit-delay](#)



# ip ospf database-filter

Configures filters for different types of outgoing Link State Advertisements (LSAs).

**Syntax** `ip ospf database-filter { all-external { allow-default-and-type-4 | allow-default-out | out } | all-out | all-summary-external { allow-default-and-type-4 | allow-default-out | out } }`

`no ip ospf database-filter all-external`

`no ip ospf database-filter all-out`

`no ip ospf database-filter all-summary-external`

**Command Default** All filters are disabled.

**Parameters** `all-external`

Blocks all external LSAs.

`allow-default-and-type-4`

Allows default-route LSAs and Type 4 LSAs, but block all other LSAs.

`allow-default-out`

Allows default-route LSAs, but block all other LSAs.

`out`

Filters outgoing LSAs.

`all-out`

Blocks all LSAs.

`all-summary-external`

Blocks all summary (Type 3) and external (type 5) LSAs.

**Modes** Interface subtype configuration mode

**Usage Guidelines** By default, the device floods all outbound LSAs on all the OSPF interfaces within an area. You can configure a filter to block outbound LSAs on an OSPF interface. This feature is particularly useful when you want to block LSAs from some, but not all, of the interfaces attached to the area. When enabled, this command blocks the specified outgoing LSAs on the interface. Some cases where you might want to enable filters are:

- To control the information being advertised to the network.
- To use a passive router for debugging only.

Enter `no ip ospf database-filter` followed by the appropriate operands to disable this configuration.

---

## NOTE

You cannot block LSAs on virtual links.

---

**Examples** To apply a filter to block flooding of all LSAs on a specific OSPF 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 101/0/10
switch(conf-if-fo-101/0/10)# ip ospf database-filter all-out
```

To apply a filter to block flooding of all LSAs on a specific OSPF virtual Ethernet (VE) interface:

```
switch(config)# rbridge-id 178
switch(config-rbridge-id-178)# interface ve 24
switch(config-ve-24)# ip ospf database-filter all-out
```

**Related  
Commands**    [interface](#), [interface ve](#), [ip ospf area](#), [ip ospf auth-change-wait-time](#), [ip ospf authentication-key](#), [ip ospf cost](#), [ip ospf dead-interval](#), [ip ospf hello-interval](#), [ip ospf md5-authentication](#), [ip ospf mtu-ignore](#), [ip ospf network](#), [ip ospf passive](#), [ip ospf priority](#), [ip ospf retransmit-interval](#), [ip ospf transmit-delay](#)

# ip ospf dead-interval

Configures the neighbor dead interval, which is the number of seconds that a neighbor router waits for a hello packet from the device before declaring the router down.

**Syntax** `ip ospf dead-interval interval`

`no ip ospf dead-interval`

**Command Default** The default value is 40 seconds.

**Parameters** *interval*

Dead interval in seconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** If you change the dead interval, the hello interval is changed to be one fourth the new dead interval, unless the hello interval is also explicitly configured by using the `ip ospf hello-interval` command. Also, **running-config** displays only explicitly configured values of the hello interval, which means that a value that got automatically changed as the result of a dead-interval change would not be displayed.

Enter `no ip ospf dead-interval` to use the default value.

**Examples** To set the dead interval to 80 on a specific OSPF 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 101/0/10
switch(config-if-fo-101/0/10)# ip ospf dead-interval 80
```

To set the dead interval to 70 on a specific OSPF virtual Ethernet (VE) interface:

```
switch(config)# rbridge-id 178
switch(config-rbridge-id-178)# interface ve 24
switch(config-ve-24)# ip ospf dead-interval 70
```

**Related Commands** [interface](#), [interface ve](#), [ip ospf area](#), [ip ospf auth-change-wait-time](#), [ip ospf authentication-key](#), [ip ospf cost](#), [ip ospf database-filter](#), [ip ospf hello-interval](#), [ip ospf md5-authentication](#), [ip ospf mtu-ignore](#), [ip ospf network](#), [ip ospf passive](#), [ip ospf priority](#), [ip ospf retransmit-interval](#), [ip ospf transmit-delay](#)

## ip ospf hello-interval

Configures the hello interval, which is the length of time between the transmission of hello packets that this interface sends to neighbor routers.

**Syntax** `ip ospf hello-interval interval`

`no ospf hello-interval`

**Command Default** The default value is 10 seconds.

**Parameters** *interval*

Hello interval in seconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** If you change the hello interval, the dead interval is changed to be four times the new hello interval, unless the dead interval is also explicitly configured using the **ip ospf dead-interval** command. Also, **running-config** displays only explicitly configured values of the dead interval, which means that a value that got automatically changed as the result of a hello-interval change would not be displayed.

Enter **no ospf hello-interval** to use the default value.

**Examples** To set the hello interval to 200 on a specific OSPF 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 101/0/10
switch(conf-if-fo-101/0/10)# ip ospf hello-interval 200
```

To set the hello interval to 180 on a specific OSPF virtual Ethernet (VE) interface:

```
switch(config)# rbridge-id 178
switch(config-rbridge-id-178)# interface ve 24
switch(config-ve-24)# ip ospf hello-interval 180
```

**Related Commands** [interface](#), [interface ve](#), [ip ospf area](#), [ip ospf auth-change-wait-time](#), [ip ospf authentication-key](#), [ip ospf cost](#), [ip ospf database-filter](#), [ip ospf dead-interval](#), [ip ospf md5-authentication](#), [ip ospf mtu-ignore](#), [ip ospf network](#), [ip ospf passive](#), [ip ospf priority](#), [ip ospf retransmit-interval](#), [ip ospf transmit-delay](#)

# ip ospf md5-authentication

Configures MD5 password and authentication change hold time.

**Syntax** `ip ospf md5-authentication { key-activation-wait-time wait-time | key-id id MD5_key { 0 | 2 | 255 } ospf_password }`

`no ip ospf md5-authentication key-id`

**Command Default** No authentication.

**Parameters** **key-activation-wait-time**

Sets the time that OSPF waits before activating a new key.

***wait-time***

Time OSPF waits before activating a new MD5 key. This parameter provides a graceful transition from one MD5 key to another without disturbing the network. All new packets transmitted after the wait time ends will use the newly configured MD5 Key. OSPF packets that contain the old MD5 key are accepted for up to five minutes after the new MD5 key is in operation. Valid values range from 0 to 14400 seconds. The default value is 300 seconds.

**key-id**

Sets MD5 key and OSPF password.

***id* MD5\_key**

The *num* is a number between 1 and 255 and identifies the MD5 key that is being used. This parameter is required to differentiate among multiple keys defined on a router. When MD5 is enabled, the *key* is an alphanumeric password of up to 16 characters that is later encrypted and included in each OSPF packet transmitted. You must enter a password in this field when the system is configured to operate with either simple or MD5 authentication. By default, the MD5 authentication key is encrypted.

**0 password**

No encryption. OSPF processes **password** as a plain text password and shows the unencrypted password in the **show running** command output as follows: `key 0 passwd`

**2 password**

Expects the user to provide the encrypted password, preceded by a dollar sign (\$), and shows the encrypted password in the **show running** command output as follows: `key 2 $ci1pVT0=`

**255 password**

Expects the user to provide the encrypted password, and **255** internally maps to **2**. OSPF shows the encrypted password in the **show running** command output as follows: `key 2 $ci1pVT0=`

**ospf\_password**

OSPF processes *password* as a plain text password. OSPF internally encrypts this password as if encryption key 2 was specified and shows the encrypted password in the **show running** command output as follows: `key 2 $ci1pVT0=`

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use this command to set or reset the MD5 password and/or authentication change hold time on the interface to which you are connected.

Enter **no ip ospf md5-authentication key-id** to disable this configuration.

**Examples** The following command sets authentication only on the OSPF 40-gigabit Ethernet interface 100/0/1. To enter an MD5 ID/key of **255 key** and a plain text OSPF password called brocade that OSPF will encrypt as if encryption key **2** was specified:

```
switch(config)# interface fortygigabitethernet 100/0/1
switch(conf-if-fo-100/0/1)# ip ospf md5 key-id 255 key brocade
```

The following command sets authentication only on the OSPF virtual Ethernet (VE) interface 24. To enter an MD5 id/key of **255 key** and a plain text OSPF password called brocade that OSPF will encrypt as if encryption key **2** was specified:

```
switch(config)# rbridge-id 178
switch(config-rbridge-id-178)# interface ve 24
switch(config-ve-24)# ip ospf md5 key-id 255 key brocade
```

**Related Commands** [interface](#), [interface ve](#), [ip ospf area](#), [ip ospf auth-change-wait-time](#), [ip ospf authentication-key](#), [ip ospf cost](#), [ip ospf database-filter](#), [ip ospf dead-interval](#), [ip ospf hello-interval](#), [ip ospf mtu-ignore](#), [ip ospf network](#), [ip ospf passive](#), [ip ospf priority](#), [ip ospf retransmit-interval](#), [ip ospf transmit-delay](#)

## ip ospf mtu-ignore

Enables or disables MTU-match checking. In default operation, the IP MTU on both sides of an OSPF link must be the same, and a check of the MTU is performed when Hello packets are first exchanged.

**Syntax** **ip ospf mtu-ignore**  
**no ip ospf mtu-ignore**

**Command Default** Enabled

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no ip ospf mtu-ignore** to disable MTU-match checking on a specific interface.

**Examples** To disable MTU-match checking on a specific OSPF 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 101/0/10
switch(config-if-fo-101/0/10)# no ip ospf mtu-ignore
```

To disable MTU-match checking on a specific OSPF virtual Ethernet (VE) interface:

```
switch(config)# rbridge-id 178
switch(config-rbridge-id-178)# interface ve 24
switch(config-ve-24)# no ip ospf mtu-ignore
```

**Related Commands** [interface](#), [interface ve](#), [ip ospf area](#), [ip ospf auth-change-wait-time](#), [ip ospf authentication-key](#), [ip ospf cost](#), [ip ospf database-filter](#), [ip ospf dead-interval](#), [ip ospf hello-interval](#), [ip ospf md5-authentication](#), [ip ospf network](#), [ip ospf passive](#), [ip ospf priority](#), [ip ospf retransmit-interval](#), [ip ospf transmit-delay](#)

## ip ospf network

Configures the network type for the interface. Point-to-point can support unnumbered links, which requires less processing by OSPF.

<b>Syntax</b>	<b>ip ospf network { broadcast   point-to-point }</b>  <b>no ip ospf network</b>
<b>Parameters</b>	<b>broadcast</b> Network type is broadcast, such as Ethernet. <b>point-to-point</b> Network type is point-to-point.
<b>Modes</b>	Interface subtype configuration mode
<b>Usage Guidelines</b>	Enter <b>no ip ospf network</b> to remove the network-type configuration.

---

### NOTE

The network type non-broadcast is not supported at this time.

---

**Examples** To configure an OSPF point-to-point link on the OSPF 10-gigabit Ethernet interface whose rbridge-ID/slot/port format is 190/0/49:

```
switch(config)# interface tengigabitethernet 190/0/49
switch(conf-if-te-190/0/49)# ip ospf network point-to-point
```

To configure an OSPF broadcast link on the OSPF virtual Ethernet (VE) interface 24:

```
switch(config)# rbridge-id 178
switch(config-rbridge-id-178)# interface ve 24
switch(config-ve-24)# ip ospf network broadcast
```

**Related Commands** [interface](#), [interface ve](#), [ip ospf area](#), [ip ospf auth-change-wait-time](#), [ip ospf authentication-key](#), [ip ospf cost](#), [ip ospf database-filter](#), [ip ospf dead-interval](#), [ip ospf hello-interval](#), [ip ospf md5-authentication](#), [ip ospf mtu-ignore](#), [ip ospf passive](#), [ip ospf priority](#), [ip ospf retransmit-interval](#), [ip ospf transmit-delay](#)



# ip ospf passive

Configures an OSPF interface as passive.

**Syntax** **ip ospf passive**  
**no ip ospf passive**

**Command Default** All OSPF interfaces are active.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Passive interfaces accept and process all OSPF protocol traffic, but they do not send any traffic.

You might want to set an interface to passive mode if:

- You are planning to use the router mostly for debugging purposes.
- The router is a stub and does not route traffic.

Enter **no ip ospf passive** to set an interface back to active.

**Examples** To set a specific OSPF 10-gigabit Ethernet interface to passive state:

```
switch(config)# interface tengigabitethernet 190/0/49
switch(conf-if-te-190/0/49)# ip ospf passive
```

To set a specific OSPF virtual Ethernet (VE) interface to passive state:

```
switch(config)# rbridge-id 178
switch(config-rbridge-id-178)# interface ve 24
switch(config-ve-24)# ip ospf passive
```

**Related Commands** [ip ospf activeinterface](#), [interface ve](#), [ip ospf area](#), [ip ospf auth-change-wait-time](#), [ip ospf authentication-key](#), [ip ospf cost](#), [ip ospf database-filter](#), [ip ospf dead-interval](#), [ip ospf hello-interval](#), [ip ospf md5-authentication](#), [ip ospf mtu-ignore](#), [ip ospf network](#), [ip ospf priority](#), [ip ospf retransmit-interval](#), [ip ospf transmit-delay](#)

## ip ospf priority

Configures priority for designated router (DR) election.

<b>Syntax</b>	<b>ip ospf priority</b> <i>value</i>  <b>no ip ospf priority</b>
<b>Command Default</b>	The default value is 1.
<b>Parameters</b>	<b>value</b>  Priority value. Valid values range from 0 through 255.
<b>Modes</b>	Interface subtype configuration mode
<b>Usage Guidelines</b>	Use this command to set priority for DR election and backup-router election on the interface you are connected to. The OSPF router assigned the highest priority becomes the designated router, and the OSPF router with the second-highest priority becomes the backup router.  Enter <b>no ip ospf priority</b> to use the default value.
<b>Examples</b>	To set a priority of 10 for the OSPF router that is connected to an OSPF 10-gigabit Ethernet interface 190/0/49:  <pre>switch(config)# interface tengigabitethernet 190/0/49 switch(conf-if-te-190/0/49)# ip ospf priority 10</pre> To set a priority of 10 for the OSPF router that is connected to an OSPF virtual Ethernet (VE) interface 24:  <pre>switch(config)# rbridge-id 178 switch(config-rbridge-id-178)# interface ve 24 switch(config-ve-24)# ip ospf priority 10</pre>
<b>Related Commands</b>	<a href="#">interface</a> , <a href="#">interface ve</a> , <a href="#">ip ospf area</a> , <a href="#">ip ospf auth-change-wait-time</a> , <a href="#">ip ospf authentication-key</a> , <a href="#">ip ospf cost</a> , <a href="#">ip ospf database-filter</a> , <a href="#">ip ospf dead-interval</a> , <a href="#">ip ospf hello-interval</a> , <a href="#">ip ospf md5-authentication</a> , <a href="#">ip ospf mtu-ignore</a> , <a href="#">ip ospf network</a> , <a href="#">ip ospf passive</a> , <a href="#">ip ospf retransmit-interval</a> , <a href="#">ip ospf transmit-delay</a>

# ip ospf retransmit-interval

Configures retransmit interval. The interval is the time between Link-State Advertisement (LSA) retransmissions to adjacent routers for this interface.

**Syntax** `ip ospf retransmit-interval rtx-int`

`no ip ospf retransmit-interval`

**Command Default** 5 seconds.

**Parameters** *rtx-int*

Retransmit interval in seconds. Valid values range from 0 through 3600 seconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no ip ospf retransmit-interval` to reset the retransmit interval to its default.

**Examples** To set the retransmit interval to 10 for all OSPF routers on the OS-gigabit Ethernet interface 190/0/49:

```
switch(config)# interface tengigabitethernet 190/0/49
switch(conf-if-te-190/0/49)# ip ospf retransmit 10
```

To set the retransmit interval to 50 for all OSPF routers on the OSPF virtual Ethernet (VE) interface 24:

```
switch(config)# rbridge-id 178
switch(config-rbridge-id-178)# interface ve 24
switch(config-ve-24)# ip ospf retransmit 50
```

**Related Commands** [interface](#), [interface ve](#), [ip ospf area](#), [ip ospf auth-change-wait-time](#), [ip ospf authentication-key](#), [ip ospf cost](#), [ip ospf database-filter](#), [ip ospf dead-interval](#), [ip ospf hello-interval](#), [ip ospf md5-authentication](#), [ip ospf mtu-ignore](#), [ip ospf network](#), [ip ospf passive](#), [ip ospf priority](#), [ip ospf transmit-delay](#)

## ip ospf transmit-delay

Configures the transmit delay for link-update packets, which is the estimated time required for OSPF to send link-state update packets on the interface to which you are connected.

<b>Syntax</b>	<b>ip ospf transmit-delay</b> <i>tx-delay</i>  <b>no ip ospf transmit-delay</b>
<b>Command Default</b>	1 second.
<b>Parameters</b>	<b><i>tx-delay</i></b>  Transmit delay in seconds. Valid values range from 0 through 3600 seconds.
<b>Modes</b>	Interface subtype configuration mode
<b>Usage Guidelines</b>	Enter <b>no ip ospf transmit-delay</b> to use the default value.
<b>Examples</b>	To set a transmit delay of 10 seconds for routers on the OSPF 10-gigabit Ethernet interface 190/0/49:  <pre>switch(config)# interface tengigabitethernet 190/0/49 switch(conf-if-te-190/0/49)# ip ospf transmit-delay 10</pre> To set a transmit delay of 30 seconds for routers on the OSPF virtual Ethernet (VE) interface 24:  <pre>switch(config)# rbridge-id 178 switch(config-rbridge-id-178)# interface ve 24 switch(config-ve-24)# ip ospf transmit-delay 30</pre>
<b>Related Commands</b>	<a href="#">interface</a> , <a href="#">interface ve</a> , <a href="#">ip ospf area</a> , <a href="#">ip ospf auth-change-wait-time</a> , <a href="#">ip ospf authentication-key</a> , <a href="#">ip ospf cost</a> , <a href="#">ip ospf database-filter</a> , <a href="#">ip ospf dead-interval</a> , <a href="#">ip ospf hello-interval</a> , <a href="#">ip ospf md5-authentication</a> , <a href="#">ip ospf mtu-ignore</a> , <a href="#">ip ospf network</a> , <a href="#">ip ospf passive</a> , <a href="#">ip ospf priority</a> , <a href="#">ip ospf retransmit-interval</a>

## ip pim dr-priority

Configures the designated router (DR) priority of a protocol Independent Multicast (PIM) enabled interface.

**Syntax** `ip pim dr-priority priority-value`

`no ip pim dr-priority`

**Command Default** DR priority value is 1.

**Parameters** *priority-value*

The DR priority value. Valid values range from 0 through 65535.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no ip pim dr-priority` to disable this feature.

**Examples** Setting the priority to 100.

```
switch(conf-if-ext-0/15)# ip pim dr-priority 100
```

**Related Commands** [router pim](#)

## ip pim-sparse

Enables or disables Protocol Independent Multicast Sparse Mode on a physical or a VE interface.

**Syntax** **ip pim-sparse**

**no ip pim-sparse**

**Command Default** Protocol Independent Multicast (PIM) is not enabled on an interface.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no ip pim-sparse** to disable this feature.

**Examples** Enabling sparse PIM on an interface

```
switch(conf-if-ext-0/15)# ip pim-sparse
```

**Related  
Commands** [router pim](#)

## ip policy route-map

Enables policy-based routing (PBR) on any Layer 3 interface after ACLs and route map entries are configured.

**Syntax** `ip policy route-map map-tag`

`no ip policy route-map map-tag`

**Parameters** *map-tag*

The name of the route-map when it was created.

**Modes** Privileged EXEC mode

**Usage Guidelines** Enter `no ip policy route-map` to disable this feature.

**Related Commands** [show route-map](#), [show route-map interface](#)

## ip prefix-list

Configures the IP prefix-list instance.

**Syntax** `ip prefix-list nameinstance [ permit | deny ] A.B.C.D/MLEN ge value le value`  
`no ip prefix-list nameinstance [ permit | deny ] A.B.C.D/MLEN ge value le value`

**Parameters** *instance*

**Modes** Privileged EXEC mode

**Usage Guidelines** Enter `no ip prefix-list` to disable this feature.



**DANGER**

---

*Cleanup item: This command has no parameter descriptions*

---

**Related Commands** [match interface](#), [match ip address](#), [match ip next-hop](#), [match metric](#), [match route-type](#), [match tag](#), [route-map](#), [set distance](#), [set ip next-hop](#), [set metric](#), [set tag](#)



# ip proxy-arp

Enables proxy ARP on an interface.

**Syntax** **ip proxy-arp**

**no ip proxy-arp**

**Command Default** Proxy ARP is disabled.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Proxy ARP allows a Brocade device to answer ARP requests from devices on one network on behalf of devices in another network. Because ARP requests are MAC-layer broadcasts, they reach only the devices that are directly connected to the sender of the ARP request. Therefore, ARP requests do not cross routers.

Enter **no ip proxy-arp** to disable proxy ARP on a specific interface.

**Examples** To enable proxy ARP on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# ip proxy-arp
```

To disable proxy ARP on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 1/3/1
switch(conf-if-fo-1/3/1)# no ip proxy-arp
```

**Related Commands** [interface](#), [interface ve](#)

# ip route

Adds a static route to the IP routing tables.

**Syntax** `ip route A.B.C.D/L A.B.C.D [ metric ] [ distance distance ] [ tag tag ]`

`ip route A.B.C.D/L { <N>gigabitethernet slot/port ve vlan_id } [ metric ] [ distance distance ] [ tag tag ]`

`ip route A.B.C.D/L null slot/port [ metric ] [ distance distance ] [ tag tag ]`

`no ip route A.B.C.D/L A.B.C.D`

`no ip route A.B.C.D/L { <N>gigabitethernet slot/port | ve vlan_id }`

`no ip route A.B.C.D/L null rbridge-id/slot/port`

**Command Default** Refer to the Parameters descriptions for specific defaults.

**Parameters** `A.B.C.D/L`

Specifies the destination IPv4 address and mask.

`A.B.C.D`

Specifies the IPv4 address of the next hop.

`<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

`slot`

Specifies a valid slot number.

`port`

Specifies a valid port number.

`ve vlan_id`

Specifies the VLAN number. (Refer to the Usage Guidelines.)

`null slot/port`

Drops packets with this destination.

`slot`

Specifies a valid slot number.

`port`

Specifies a valid port number.

`metric`

Cost metric of the route. Valid values range from 1 through 16. The default is 1.

`distance distance`

Specifies the administrative distance of the route. When comparing otherwise equal routes to a destination, a Brocade device prefers lower administrative distances over higher ones. Valid values range from 1 through 255. The default is 1.

`tag tag`

Tag value of the route to use for route filtering with a route map. Valid values range from 0 through 4294967295.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Enter **no ip route** followed by the route identifier to remove a static route.

**Examples** To configure a static route to 10.95.7.0, using 10.95.6.157 as the next-hop gateway:

```
switch (config)# rbridge-id 30
switch (config-rbridge-id-30)# ip route 10.95.7.0/24 10.95.6.157
```

## ip route next-hop-vrf

Enables the leaking of static routes from one VRF instance to another.

**Syntax** **ip route** *ip\_addr/mask* **next-hop-vrf vrf** *VRF\_name* *next\_hop\_ip\_addr*  
**no route** *ip\_addr/mask* **next-hop-vrf vrf** *VRF\_name* *next\_hop\_ip\_addr*

**Command Default** Disabled

**Parameters** **ip\_addr/mask**  
 IPv4 address in dotted-decimal notation with a CIDR notation mask.

**vrf VRF\_name**  
 Specifies the name of the target VRF instance to which route leaking is enabled.

**ip\_addr**  
 Next-hop IP address in the target VRF instance.

**Modes** RBridge ID configuration mode  
 VRF address-family IPv4 configuration mode

**Usage Guidelines** Enter **no ip route ip\_addr mask next-hop-vrf** to disable the leaking of static routes.

**Examples** To enable static route leaking from the default VRF to VRF "brown":

```
switch# config
switch (config)# rbridge-id 2
switch (config-rbridge-id-2)# ip route 1.1.1.0/24 next-hop-vrf brown 10.1.1.10
```

This example shows the static route leaking enabled from the default VRF to VRF "brown":

```
switch# show running rbridge
rbridge-id 2
ip route 0.0.0.0/0 10.24.64.1
ip route 1.1.1.0/24 next-hop-vrf brown 10.1.1.10
```

# ip router-id

Configures router ID.

**Syntax** `ip router-id A.B.C.D`

`no ip router-id A.B.C.D`

**Parameters** `A.B.C.D`

Specifies the IPv4 address that you want as the router ID.

**Modes** RBridge ID configuration mode

**Usage Guidelines** The router ID is a 32-bit number that uniquely identifies the device. By default, the router ID is the numerically lowest IP interface configured on the device, but you can explicitly set the router ID to any valid IP address that is not in use on another device in the network.

Enter **no ip router-id A.B.C.D** to remove the router ID and use the default router ID.

**Examples** To specify a router ID of 192.158.1.2:

```
switch (config)# rbridge-id 30
switch (config-rbridge-id-30)# ip router-id 192.158.1.2
```

## ip unreachable

Prohibits routers from forwarding an Internet Control Message Protocol (ICMP) Destination Unreachable Code 3 (port unreachable) message on a point-to-point link back onto the ingress port.

**Syntax** **ip unreachable**

**no ip unreachable**

**Command Default** This command is enabled by default.

**Modes** Global configuration mode

**Usage Guidelines** By default, ICMP Destination Unreachable Code 3 messages are sent for a discarded IP packet.

Use the **no ip unreachable** command to disable the sending of these messages.

This is an interface-specific configuration. The configuration is persistent across a switch reload.

**Related Commands** [ipv6 unreachable](#)

# ipv6 access-group

Applies rules specified in an IPv6 access control list (ACL) to traffic entering or exiting an interface.

**Syntax** `ipv6 access-group ACLname { in | out }`

`no ipv6 access-group ACLname { in | out }`

**Parameters** *ACLname*

Specifies the name of the standard or extended IP access list.

**in | out**

Specifies the binding direction (ingress or egress).

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use this command to apply an IPv6 ACL to one of the following interface types:

- User interfaces
  - Physical interfaces (<N>-gigabit Ethernet)
  - Logical interfaces (LAGs)
  - Virtual Ethernet interfaces (VEs)
- All supported management interfaces
- Overlay gateways

You can apply a maximum of six ACLs to a user interface, as follows:

- One ingress MAC ACL
- One egress MAC ACL
- One ingress IPv4 ACL
- One egress IPv4 ACL
- One ingress IPv6 ACL
- One egress IPv6 ACL

You can apply a maximum of two ACLs to a management interface, as follows:

- One ingress IPv4 ACL
- One ingress IPv6 ACL

You can apply a maximum of three ACLs to an overlay gateway, as follows:

- One ingress MAC ACL
- One ingress IPv4 ACL
- One ingress IPv6 ACL

---

## NOTE

You can apply an ACL to multiple interfaces. And you can apply an extended ACL twice—ingress and egress—to a given user interface.

---

To remove an IPv6 ACL from an interface, enter the **no ipv6 access-group *ACLname***

**Examples** The following example applies an ingress IPv6 ACL named ip6\_acl\_7 on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# ipv6 access-group ip6_acl_7 in
```

The following example removes an ingress IPv6 ACL named ip6\_acl\_7 from a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# no ipv6 access-group ip6_acl_7 in
```

**Related Commands**    [interface, ipv6 access-list, show access-list](#)



# ipv6 access-list

Creates a standard or extended IPv6 access control list (ACL). In ACLs, you can define rules that permit or deny network traffic based on criteria that you specify.

**Syntax** `ipv6 access-list { standard | extended } ACLname`

`no ipv6 access-list { standard | extended } ACLname`

**Parameters** `standard | extended`

Specifies one of the following types of access lists:

**standard**

Contains rules that permit or deny traffic based on source addresses that you specify. The rules are applicable to all ports of the specified addresses.

**extended**

Contains rules that permit or deny traffic according to source and destination addresses, as well as other parameters. For example, you can also filter by port, protocol (TCP or UDP), and TCP flags.

**ACLname**

Specifies a unique ACL name. The name can be up to 63 characters in length, and must begin with an alphanumeric character. No special characters are allowed, except for the underscore and hyphen.

**Modes** Global configuration mode

**Usage Guidelines** An ACL name can be up to 63 characters long, and must begin with a–z, A–Z or 0–9. You can also use underscore ( `_` ) or hyphen ( `-` ) in an ACL name, but not as the first character.

On any given switch, an ACL name must be unique among all ACL types (MAC/IPv4/IPv6; standard or extended).

After you create an ACL, use the **seq** command to create filtering rules for that ACL.

An ACL starts functioning only after it is applied to an interface, using the **access-group** command.

To delete an ACL, use the **no access-list** command. You can delete an ACL only after you first remove it from all interfaces to which it is applied, using the **no access-group** command.

**Examples** The following example creates an IPv6 standard ACL:

```
switch# configure
switch(config)# ipv6 access-list standard stdV6ACL1
```

The following example creates an IPv6 extended ACL:

```
switch# configure
switch(config)# ipv6 access-list extended ipv6_acl_1
```

The following example creates rules on an IPv6 standard ACL:

```
switch# configure
switch(config)# ipv6 access-list standard stdV6ACL1
switch(config-ipv6-std)# seq 10 permit 2001:db8:85a3:0:0:8a2e:370:7334
switch(config-ipv6-std)# seq 11 deny any
```

The following example deletes an IPv6 ACL:

```
switch# configure
switch(config)# no ipv6 access-list standard stdV6ACL1
```

**Related Commands** [interface, ipv6 access-group, seq \(IPv6 extended ACLs\), seq \(IPv6 standard ACLs\), show access-list](#)

## ipv6 address

Configures a primary or secondary global or unique local IPv6 unicast address, including a manually configured interface ID.

**Syntax** `ipv6 address ipv6-prefix/prefix-length [ secondary ]`

`no ipv6 address ipv6-prefix/prefix-length [ secondary ]`

**Command Default** If the **secondary** keyword is not used, the address is a primary address.

**Parameters** *ipv6-prefix*

IPv6 prefix in hexadecimal with 16-bit values between colons, as specified in RFC 2373.

*prefix-length*

A decimal value specifying the length of the IPv6 prefix.

**secondary**

Specifies that the address is a secondary address. A maximum of 256 secondary addresses can be configured.

**Modes** Interface subtype configuration mode

**Usage Guidelines** A secondary address cannot be configured on an interface unless the primary address is configured first.

Use the **no** form of this command to remove the configuration.

The primary address cannot be deleted on an interface unless the secondary addresses are deleted first.

This command is not supported on loopback or management interfaces.

**Examples** To configure a global prefix and the interface ID on an Ethernet interface:

```
switch(config)# int te 3/1/1
switch(config-if-te-3/1/1)# ipv6 address 2001:db8:12d:1300:240z:d0ff:fe48:4672/64
```

To configure the above as a secondary address:

```
switch(config)# int te 3/1/1
switch(config-if-te-3/1/1)# ipv6 address 2001:db8:12d:1300:240z:d0ff:fe48:4672/64
secondary
```

# ipv6 address anycast

Configures an anycast address for a set of interfaces that belong to different nodes.

**Syntax** `ipv6 address ipv6-prefix/prefix-length anycast`

`no ipv6 address ipv6-prefix/prefix-length anycast`

**Parameters** *ipv6-prefix*

IPv6 prefix in hexadecimal with 16-bit values between colons, as specified in RFC 2373.

*prefix-length*

A decimal value specifying the length of the IPv6 prefix.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Sending a packet to an anycast address results in the delivery of the packet to the closest interface that has an anycast address. An anycast address looks similar to a unicast address, because it is allocated from the unicast address space. If you assign an IPv6 unicast address to multiple interfaces, it is an anycast address. On the device, you configure an interface assigned an anycast address to recognize the address as an anycast address

If you assign an IPv6 unicast address to multiple interfaces, it is an anycast address. On the device, you configure an interface assigned an anycast address to recognize the address as an anycast address.

Use the **no** form of this command to remove the configuration.

---

## NOTE

IPv6 anycast addresses are described in detail in RFC 1884. See RFC 2461 for a description of how the Neighbor Discovery mechanism handles anycast addresses.

---

**Examples** To configure an anycast address on an Ethernet interface:

```
switch(config)# int te 3/1/1
switch(config-if-te-3/1/1)# ipv6 address 2001:db8:12d:1300:240z:d0ff:fe48:4672/64
anycast
```

## ipv6 address eui-64

Configures a global or unique local IPv6 unicast address with an automatically computed EUI-64 interface ID.

**Syntax** `ipv6 address ipv6-prefix/prefix-length eui-64`

`no ipv6 address ipv6-prefix/prefix-length eui-64`

**Parameters** *ipv6-prefix*

IPv6 prefix in hexadecimal with 16-bit values between colons, as specified in RFC 2373.

*prefix-length*

A decimal value specifying the length of the IPv6 prefix.

*eui-64*

Configures the global or unique local unicast address with a 64-bit Extended Unique Identifier, using the MAC address of the interface to construct the interface ID automatically.

**Modes** Interface subtype configuration mode

**Examples** To configure a global prefix and an automatically computed EUI-64 interface ID on a TenGigabitEthernet interface:

```
switch(config)# int te 3/1/1
switch(config-if-te-3/1/1)# ipv6 address 2001:db8:12d:1300::/64 eui-64
```

# ipv6 address link-local

Configures an explicit link-local address on an interface.

**Syntax** `ipv6 address ipv6-address link-local`

`no address ipv6-address link-local`

**Parameters** *ipv6-address*

Explicit IPv6 address for the interface. Format can be xxxx.xxxx or  
xxxx.xxxx.xxxx.xxxx.xxxx.xxxx.

**Modes** Interface subtype configuration mode

**Usage Guidelines** By default, when IPv6 is enabled, link-local addresses are computed automatically.

When configuring VLANs that share a common tagged interface with a virtual Ethernet (VE) interface, it is recommended that you override the automatically computed link-local address with a manually configured unique address for the interface. If the interface uses the automatically computed address, which in the case of VE interfaces is derived from a global MAC address, all VE interfaces will have the same MAC address.

**Examples** To configure a unique link-local address on an Ethernet interface:

```
switch(config)# int te 3/0/1
switch(config-if-te-3/0/1)# ipv6 address fe80::240:d0ff:fe48:4672 link-local
```

**Related Commands** [ipv6 address use-link-local-only](#)

## ipv6 address use-link-local-only

Enables IPv6 on an interface and configures an automatically computed link-local address.

**Syntax** `ipv6 address use-link-local-only`

`no ipv6 address use-link-local-only`

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use the **no** form of this command to disable IPv6 on an interface and consequently the automatic computing of a link-local address.

**Examples** To enable IPv6 on an interface and configure an automatically computed link-local address:

```
switch(config)# int te 3/1/1
switch(config-if-te-3/1/1)# ipv6 address use-link-local-only
```

**Related Commands** [ipv6 address link-local](#)

# ipv6 dhcp relay address

Configures the IPv6 DHCP Relay on a Layer 3 interface.

**Syntax** `ipv6 dhcp relay address ipv6-addr [interface interface-type interface-name] [use-vrf vrf-name ]`

`no ipv6 dhcp relay address ipv6-addr [interface interface-type interface-name] [use-vrf vrf-name ]`

**Parameters** *ipv6-addr*

IPv6 address of the DHCP server where the DHCP client requests are to be forwarded.

**interface**

This parameter specifies the outgoing interface, used when the relay address is a link-local or multicast address

**interface-type**

The type of interface, such as gigabitEthernet, TengigabitEthernet, FortygigabitEthernet, HundredgigabitEthernet, or Ve interface.

**interface-name**

The interface number or VLAN ID.

**use-vrf**

Use this option if the VRF where the DHCP server is located is different from the VRF of the interface where the client is connected.

**vrf-name**

VRF name.

**Modes** Interface configuration mode

**Usage Guidelines** This command uses the IPv6 address of the DHCP server where the DHCP client requests are to be forwarded. You can configure the address on a virtual Ethernet (VE) or a physical GigabitEthernet, TengigabitEthernet, or FortyGigabitEthernet interface. You can configure up to 16 relay destination addresses on an interface.

Enter the command while in interface configuration mode for a VE or physical interface where you want to configure the IPv6 DHCP Relay. Configure up to four DHCP server IP addresses per interface. Use the **no** version of this command to remove the IPv6 DHCP Relay from the interface. If the **use-vrf** option is not used, it is assumed that the DHCP server and interface where the client is connected are on the same VRF.

If the relay address is a link local address or a multicast address, an outgoing interface must be configured for IPv6 relay to function. In instances where the server address is relayed to a different VRF compared to a client connected interface VRF, in addition to the relay address, you must also specify the user-vrf, otherwise IPv6 relay may not function correctly. IPv6 route leaking is also required for IPv6 reachability.

The **no** form of the command deletes the ipv6 dhcp relay from an L3 interface.

**Examples** To configure an IPv6 DHCP Relay address on a TenGigabitEthernet interface in standalone mode:

```
sw0(config)# interface TenGiga 2/3/1
sw0(conf-if-te-2/3/1)# ipv6 dhcp relay address 2001::1122:AABB:CCDD:3344
```

To configure an IPv6 DHCP Relay address on a VE interface in VCS mode:

```
switch(config)# rbridge-id 1
switch(config-rbridge-id-1)interface ve 101
switch(config-Ve-101)# ipv6 dhcp relay address fe80::224:38ff:febb:e3c0 interface ve
201
```

To configure an IPv6 DHCP Relay address on an interface if the DHCP server is on a different VRF than the interface where the client connects:

```
switch# config
Entering configuration mode terminal
switch(config)# rbridge-id 2
switch(config-rbridge-id-2)# interface ve 103
switch(config-Ve-103)# ipv6 dhcp relay address fe80::224:38ff:febb:e3c0 use-vrf blue
```

---

**NOTE**

For the relay configurations to be successful, you must specify an outgoing interface for any link local IPv6 relay addresses.

---

**History**

Release version	Command history
5.0.1	This command was introduced.



## ipv6 echo-reply

Enables the generation of an Internet Control Message Protocol version 6 (ICMPv6) Echo Reply message.

**Syntax**    **ipv6 echo-reply**

**no ipv6 echo-reply**

**Modes**    Global configuration mode

**Usage Guidelines**    This is an interface-specific configuration. The configuration is persistent across a switch reload.

## ipv6 fabric-virtual-gateway~

Enables IPv6 Fabric-Virtual-Gateway configurations.

**Syntax** `ipv6 fabric-virtual-gateway~`

`no ipv6 fabric-virtual-gateway~`

**Command Default** None

**Modes** Fabric-Virtual-Gateway global interface VE IPv6 configuration mode.

**Usage Guidelines** Enter the **no** form of the command to disable IPv6 Fabric-Virtual- Gateway configurations.

**Examples** The following example shows how to enable IPv6 Fabric-Virtual-Gateway on global VE interface.

```
switch(config)# interface ve 4000
switch(config-Ve-4000)# ipv6 fabric-virtual-gateway
```

**History**

Release version	Command history
5.0.1	This command was introduced.

# ipv6 icmp rate-limit

Limits the rate at which Internet Control Message Protocol (ICMP) messages are sent on an IPv6 network.

**Syntax** `ipv6 icmp rate-limit milliseconds`

`no ipv6 icmp rate-limit`

**Command Default** The default value is 1000 milliseconds.

**Parameters** *milliseconds*

Number of milliseconds between packets. The range is from 1 through 4294967295.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The configuration is persistent across switch reload. Once it is enabled, all outbound ICMP message types are rate limited.

**Examples** Typical command example.

```
switch(conf-if-te-12/2/1)# ipv6 icmp rate-limit 3000
```

**Related Commands** [ip icmp rate-limit](#)

## ipv6 import routes (IPv6 VRF address-family configuration mode)

Leaks IPv6 routes from one VRF to the VRF you are configuring, based on match criteria defined in route-map.

**Syntax** `ipv6 import routes VRF_name map rmap_name`

**no ipv6 import routes**

**Parameters** *VRF\_name*

Specifies the VRF instance from which to leak routes to the VRF you are configuring.

*rmap\_name*

Specifies the map name to use for route-leaking match criteria.

**Modes** IPv6 VRF address-family configuration mode

**Usage Guidelines** Use the **no** form of the command to remove routes from being leaked to the VRF you are configuring.

**Examples** To leak IPv6 routes from a VRF named "red" to the VRF named "orange," based on match criteria from a route map named "import-map," with an example RBridge ID of 10:

```
switch# configure
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# vrf orange
switch(config-vrf-orange)# address-family ipv6 unicast
switch(config-ipv6-unicast)# ipv6 import routes red route-map import-map
```

### History

---

Release version	Command history
5.0.0	This command was introduced.

---

## ipv6 import routes(RBridge ID configuration mode)

Leaks IPv6 routes from the specified VRF to the default VRF, based on match criteria defined in route-map.

**Syntax** `ipv6 import routes VRF_name map rmap_name`

`no ipv6 import routes`

**Parameters** *VRF\_name*

Specifies the VRF instance from which to leak routes to the default VRF.

*rmap\_name*

Specifies the map name to use for route-leaking match criteria.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use the **no** form of the command to remove routes from being leaked to the default VRF.

**Examples** To leak IPv6 routes from a VRF named **red** to the default VRF, based on match criteria from a route map named **import-map**:

```
switch# configure
switch(config)# rbridge-id 54
switch(config-rbridge-id-54)# ipv6 import routes red map import-map
```

**History**

Release version	Command history
	This command was introduced.

## ipv6 mld last-member-query-count

Configures the IPv6 MLDv1 snooping last-member query count on a specific VLAN interface.

<b>Syntax</b>	<b>ipv6 mld last-member-query-count</b> <i>value</i>  <b>no ipv6 mld last-member-query-count</b>
<b>Parameters</b>	<b>value</b>  The range is from 1 through 10. The default is 2.
<b>Modes</b>	Interface subtype configuration mode
<b>Usage Guidelines</b>	The last-member query count is the number of times, separated by the last-member query-response interval, that an MLD query is sent in response to a host leave message from the last known active host on the subnet.  Use the <b>no</b> form of this command to restore the default.
<b>Examples</b>	To change the IPv6 MLDv1 snooping last-member query count from the default on a VLAN interface:  <pre>switch(config)# int vlan 2000 switch(config-Vlan-2000)# ipv6 mld last-member-query-count 3</pre>
<b>Related Commands</b>	<a href="#">ipv6 mld last-member-query-interval</a>

# ipv6 mld last-member-query-interval

Configures the IPv6 MLDv1 snooping last-member query interval on a specific VLAN interface.

**Syntax** `ipv6 mld last-member-query-interval msec`

`no ipv6 mld last-member-query-interval`

**Parameters** `msec`

The range is from 100 through 2500 milliseconds. The default is 1000.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The last-member query interval is the interval for the response to a query sent after a host leave message is received from the last known active host on the subnet. The group is deleted if no reports are received in this interval. This interval adjusts the speed at which messages are transmitted on the subnet. Smaller values detect the loss of a group member faster.

Use the **no** form of this command to restore the default.

**Examples** To configure IPv6 MLDv1 snooping last-member query interval on a VLAN interface:

```
switch(config)# int vlan 2000
switch(config Vlan-2000)# ipv6 mld last-member-query-interval 25
```

**Related Commands** [ipv6 mld last-member-query-count](#)

## ipv6 mld query-interval

Configures the maximum interval for IPv6 MLDv1 snooping queries for a specific VLAN interface.

<b>Syntax</b>	<p><b>ipv6 mld query-interval</b> <i>sec</i></p> <p><b>no ipv6 mld query-interval</b></p>
<b>Parameters</b>	<p><b>sec</b></p> <p>The range is from 1 through 18000 seconds. The default is 125.</p>
<b>Modes</b>	Interface subtype configuration mode
<b>Usage Guidelines</b>	<p>The value set by the <b>ipv6 mld query-interval</b> command must be greater than the value set by the <b>ipv6 mld query-max-response-time</b> command.</p> <p>A larger value means that queries are sent less often.</p> <p>Use the <b>no</b> form of this command to restore the default.</p>
<b>Examples</b>	<p>To configure the maximum interval for IPv6 MLDv1 snooping queries on a VLAN interface:</p> <pre>switch(config)# int vlan 2000 switch(config Vlan-2000)# ipv6 mld query-interval 1200</pre>
<b>Related Commands</b>	<a href="#">ipv6 mld query-max-response-time</a>



## ipv6 mld query-max-response-time

Configures the maximum response time for IPv6 MLDv1 snooping queries for a specific VLAN interface.

**Syntax** `ipv6 mld query-max-response-time sec`

`no ipv6 mld last-member-query-interval`

**Parameters** `sec`

The range is 1 through 25 seconds. The default is 10.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The maximum response delay is inserted into the periodic general query interval. This is useful when snooping querier functionality is enabled. Larger values spread out host responses over a longer time.

The value set by the `ipv6 mld query-max-response-time` command must be less than the value of the general query interval that is set by the `ipv6 mld query-interval` command.

Use the `no` form of this command to restore the default.

**Examples** To configure IPv6 MLDv1 query maximum response time on a VLAN interface:

```
switch(config)# int vlan 2000
switch(config Vlan-2000)# ipv6 mld query-max-response-time 15
```

**Related Commands** [ipv6 mld query-interval](#)

## ipv6 mld snooping enable

Enables IPv6 MLDv1 Layer 2 snooping globally or on a specific VLAN.

**Syntax** `ipv6 mld snooping enable`

`no ipv6 mld snooping enable`

**Command Default** IPv6 MLDv1 snooping is disabled.

**Modes** Global configuration mode

VLAN configuration mode

**Usage Guidelines** MLD snooping must be enabled globally first, after which it must be enabled on a VLAN  
Use the **no** form of this command to disable IPv6 MLDv1 snooping globally or on a specific VLAN.

---

### NOTE

When MLD snooping is disabled globally, the snooping configuration remains in the running configuration and snooping is disabled on all VLANs.

---

**Examples** To enable IPv6 MLDv1 snooping globally:

```
switch(config)# ipv6 mld snooping enable
```

To enable IPv6 MLDv1 snooping on a specific VLAN:

```
switch(config)# int vlan 10  
switch(config-Vlan-10)# ipv6 mld snooping enable
```

## ipv6 mld snooping fast-leave

Configures the immediate-leave feature for the groups on a specific VLAN.

**Syntax**    **ipv6 mld snooping fast-leave**  
**no ipv6 mld snooping fast-leave**

**Command Default**    This feature is disabled.

**Modes**    Interface subtype configuration mode

**Usage Guidelines**    This command minimizes the leave latency of group memberships on an interface, as the device does not send group-specific queries. As a result, the group entry is removed from the multicast routing table as soon as a group leave message is received.

Use the **no** form of this command to restore the default.

**Examples**    To configure the immediate-leave feature on a VLAN:

```
switch(config)# int vlan 2000
switch(config-Vlan-2000)# ipv6 mld snooping fast-leave
```

## ipv6 mld snooping mrouter interface

Configures a VLAN port member to be a multicast router (mrouter) port.

<b>Syntax</b>	<b>ipv6 mld snooping mrouter interface</b> { <N> <b>gigabitethernet</b>   <b>port-channel</b> <i>number</i> }
	<b>no ipv6 mld snooping mrouter interface</b> { <N> <b>gigabitethernet</b>   <b>port-channel</b> <i>number</i> }
<b>Parameters</b>	<p><b>&lt;N&gt;gigabitethernet</b></p> <p>Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>port-channel number</b> Specifies the port-channel number. The number of available channels ranges from 1 through 6144.</p>
<b>Modes</b>	Interface subtype configuration mode
<b>Usage Guidelines</b>	Use the <b>no</b> form of this command to disable the VLAN port member from being an mrouter port.
<b>Examples</b>	<p>To configure a VLAN port member to be an mrouter port:</p> <pre>switch(config)# int vlan 2000 switch(config-Vlan-2000)# ipv6 mld snooping interface te 54/0/1</pre>

## ipv6 mld snooping querier enable

Activates or deactivates IPv6 MLDv1 Layer 2 multicast snooping querier functionality for a VLAN.

**Syntax**    **ipv6 mld snooping querier enable**  
**no ipv6 mld snooping querier enable**

**Modes**     Interface subtype configuration mode

**Usage Guidelines**    Use the **no** form of this command to deactivate this functionality.

**Examples**    To enable MLD snooping querier functionality on a VLAN:

```
switch(config)# int vlan 2000
switch(config-Vlan-2000)# ipv6 mld snooping querier enable
```

## ipv6 mld snooping restrict-unknown-multicast

Deactivates or reactivates on a VLAN the flooding of unregistered multicast data traffic on IPv6 MLDv1 snooping-enabled VLANs.

**Syntax** `ipv6 mld snooping restrict-unknown-multicast`  
`no ipv6 mld snooping restrict-unknown-multicast`

**Command Default** This feature is disabled.

**Modes** Interface subtype configuration mode

**Usage Guidelines** MLD snooping must be enabled globally first, after which it must be enabled on a VLAN.  
Use the **no** form of this command to reactivate the flooding of unregistered multicast data traffic on all IPv6 MLDv1 snooping-enabled VLANs.

---

### NOTE

When MLD snooping is disabled globally, the snooping configuration remains in the running configuration and snooping is disabled on all VLANs.

---

**Examples** To deactivate on a VLAN the flooding of unregistered multicast data traffic:

```
switch(config-Vlan-2000)# ipv6 mld snooping restrict-unknown-multicast
```

To reactivate on a VLAN the flooding of unregistered multicast data traffic :

```
switch(config-Vlan-2000)# no ipv6 mld snooping restrict-unknown-multicast
```

## ipv6 mld snooping robustness-variable

Configures a value to compensate for packet loss in congested networks.

**Syntax** `ipv6 mld snooping robustness-variable value`  
`no ipv6 mld snooping robustness-variable value`

**Command Default** This feature is disabled.

**Parameters** **value**  
The range is from 2 through 10. The default is 2.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This value determines the number of general MLD snooping queries that are sent before a multicast address is aged out for lack of a response.  
Use the **no** form of this command to restore the default.

**Examples** To change the robustness variable from the default on a VLAN:

```
switch(config-Vlan-2000)# ipv6 mld snooping robustness-variable 7
```

## ipv6 mld startup-query-count

Configures the IPv6 MLDv1 number of queries that are separated by the startup query interval.

**Syntax** `ipv6 mld startup-query-count value`

`no ipv6 mld startup-query-count value`

**Command Default** This feature is disabled.

**Parameters** *value*

The range is from 1 through 10. The default is 1.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use the **no** form of this command to restore the default.

**Examples** To change the startup query count on a VLAN:

```
switch(config-Vlan-2000)# ipv6 mld startup-query-count 5
```

**Related Commands** [ipv6 mld startup-query-interval](#)



## ipv6 mld startup-query-interval

Configures the IPv6 MLDv1 startup query interval.

**Syntax** `ipv6 mld startup-query-interval value`  
`no ipv6 mld startup-query-interval value`

**Command Default** This feature is disabled.

**Parameters** *value*  
The range is from 1 through 450. The default is 1.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use the **no** form of this command to restore the default.

**Examples** To change the startup query interval on a VLAN:

```
switch(config-Vlan-2000)# ipv6 mld startup-query-interval 4
```

**Related Commands** [ipv6 mld startup-query-count](#)

## ipv6 mld static-group interface

Configures IPv6 MLDv1 Layer 2 multicast static IPv6 groups on an interface for a VLAN.

**Syntax** `ipv6 mld static-group group-IPv6-address interface interface`

`no ipv6 mld static-group group-IPv6-address interface interface`

**Parameters** *group-IPv6-address*

A multicast address to be joined, in the format `xxxx:xxxx/ml`, `xxxx:xxxx::/ml`

*interface*

An Ethernet or port-channel interface.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use the **no** form of this command to remove the static-group configuration on an interface for a VLAN.

**Examples** To configure multicast static IPv6 groups on an Ethernet interface for a VLAN:

```
switch(config)# int vlan 2000
switch(config-Vlan-2000)# ipv6 mld static-group ffile::1 interface te 54/0/1
```

# ipv6 mtu

Configures a maximum size for IPv6 MTU packets to be sent on an interface.

**Syntax** `ipv6 mtu bytes`

`no ipv6 mtu`

**Parameters** `bytes`

IPv6 MTU in bytes. Range is from 576 through 9018. The default is 1500.

**Modes** RBridge ID configuration mode

Interface subtype configuration mode

**Usage Guidelines** To route packets larger than 2500 bytes (the default for an Ethernet interface), you must also use the **mtu** command to set the same MTU value on the interface as that set by the **ipv6 mtu** command. Otherwise packets will be dropped. The range for the **mtu** command is from 1522 through 9219 bytes.

Use the **no** form of this command to restore the default.

**Examples** To configure a maximum MTU size of 1800 on an Ethernet interface:

```
switch(config)# rbridge-id 3
switch(config-rbridge-id-3)# int te 3/0/1
switch(config-if-int-te-3/0/1)# ipv6 mtu 1800
```

## ipv6 nd cache expire

Configures the time interval after which the IPv6 Neighbor Discovery cache is deleted or refreshed.

- Syntax** `ipv6 nd cache expire minutes`  
`no ipv6 nd cache expire minutes`
- Parameters** *minutes*  
Interval in minutes. The range is from 1 through 240. The default is 240.
- Modes** RBridge ID configuration mode  
Interface subtype configuration mode
- Usage Guidelines** Cache entries expire and are deleted if they remain in a "stale" state as defined by *minutes*.  
Use the **no** version of this command to restore the default interval at which the cache is deleted.
- Examples** To set the Neighbor Discovery cache deletion or refresh interval to 180 minutes on an Ethernet interface:
- ```
switch(config)# rbridge-id 54
switch(config-rbridge-id-54)# int te 54/0/3
switch(config-if-te-54/0/3)# ipv6 nd cache expire 180
```

## ipv6 nd dad attempts

Configures the number of IPv6 Neighbor Discovery Neighbor Solicitation (NS) messages to be sent as part of duplicate address detection (DAD).

**Syntax** `ipv6 nd dad attempts number`

`no ipv6 nd dad attempts number`

**Parameters** *number*

Number of solicitations. The range is from 0 through 10. The default is 2.

**Modes** RBridge ID configuration mode

Interface subtype configuration mode

**Usage Guidelines** To restore the number of neighbor solicitation messages to be sent to the default value, use the **no** form of this command.

**Examples** To set the number of Neighbor Discovery NS messages to be sent on an Ethernet interface to 5:

```
switch(config)# rbridge-id 54
switch(config-rbridge-id-54)# int te 54/0/3
switch(config-if-te-54/0/3)# ipv6 nd dad attempts 5
```

To disable DAD on an Ethernet interface:

```
switch(config)# rbridge-id 54
switch(config-rbridge-id-54)# int te 54/0/3
switch(config-if-te-54/0/3)# ipv6 nd dad attempts 0
```

## ipv6 nd dad time

Configures the retransmit time interval for IPv6 Neighbor Discovery Neighbor Solicitation (NS) messages that are sent as part of duplicate address detection (DAD).

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>ipv6 nd dad time</b> <i>seconds</i><br><br><b>no ipv6 nd dad time</b>                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Parameters</b>       | <b>seconds</b><br><br>Time in seconds. The range is from 1 through 5. The default is 1.                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Modes</b>            | Interface subtype configuration mode                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Usage Guidelines</b> | To restore the default NS message retransmit interval for DAD, use the <b>no</b> form of this command.<br>Use the <b>ipv6 nd ns-interval</b> command to configure the interval for NS address resolution.                                                                                                                                                                                                                                                                   |
| <b>Examples</b>         | To set the retransmit time interval globally for Neighbor Discovery NS messages to be sent on a specified RBridge to 3 seconds:<br><pre>switch(config-rbridge-id-122)# ipv6 nd dad time 3</pre><br>To set the retransmit time interval for Neighbor Discovery NS messages to be sent on an Ethernet interface to 3 seconds:<br><pre>switch(config)# rbridge-id 54<br/>switch(config-rbridge-id-54)# int te 54/0/3<br/>switch(config-if-te-54/0/3)# ipv6 nd dad time 3</pre> |
| <b>Related Commands</b> | <a href="#">ipv6 nd ns-interval</a>                                                                                                                                                                                                                                                                                                                                                                                                                                         |

## ipv6 nd hoplimit

Configures the number of hops to be advertised in IPv6 Neighbor Discovery Router Advertisement (RA) messages.

**Syntax** `ipv6 nd hoplimit number`

`no ipv6 nd hoplimit`

**Parameters** *number*

The number of hops to be advertised. The range is from 0 through 255. The default is 64.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use the `no` form of this command to restore the default.

**Examples** To set the number of hops to be advertised in Neighbor Discovery RA messages sent on an Ethernet interface to 32:

```
switch(config-if-te-54/0/3)# ipv6 nd hoplimit 32
```

## ipv6 nd managed-config-flag

In IPv6 Neighbor Discovery, indicates to hosts on a local link that they must use the stateful autoconfiguration feature to obtain IPv6 addresses for their interfaces.

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <p><b>ipv6 nd managed-config-flag</b></p> <p><b>no ipv6 nd managed-config-flag</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Modes</b>            | Interface subtype configuration mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Usage Guidelines</b> | <p>If the <b>ipv6 nd managed-config-flag</b> command is configured, hosts use stateful autoconfiguration to obtain IPv6 address information.</p> <ul style="list-style-type: none"> <li>• If the <b>ipv6 nd managed-config-flag</b> command is configured, it overrides an existing configuration set by the <b>ipv6 nd other-config-flag</b> command.</li> <li>• If the <b>ipv6 nd managed-config-flag</b> command is not configured, whether hosts can obtain IPv6 addresses by means of the stateful autoconfiguration feature is determined by means of the <b>ipv6 nd other-config-flag</b> command.</li> </ul> <p>Use the <b>no</b> form of this command to remove the configuration.</p> |
| <b>Examples</b>         | <p>To indicate to hosts on a local link to an Ethernet interface that they must use the stateful autoconfiguration feature to obtain IPv6 addresses for their interfaces:</p> <pre>switch(config-if-te-54/0/3)# ipv6 nd managed-config-flag</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Related Commands</b> | <a href="#">ipv6 nd other-config-flag</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |



## ipv6 nd mtu

Sets the size of the maximum transmission unit (MTU) that is advertised in Neighbor Discovery Router Advertisement (RA) messages.

**Syntax** `ipv6 nd mtu number`

`no ipv6 nd mtu`

**Parameters** *number*

Size, in bytes, of the MTU that is advertised. The range is from 1280 through 65535. The default is 1500.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use the `no` form of this command to restore the default.

**Examples** To set the maximum IPv6 MTU packet size to 2400 bytes on an Ethernet interface:

```
switch(config)# rbridge-id 3
switch(config-rbridge-id-3)# int te 3/1/1
switch(config-if-te-3/1/1)# ipv6 nd mtu 2400
```

## ipv6 nd ns-interval

Sets the interval for address resolution between IPv6 Neighbor Discovery Neighbor Solicitation (NS) messages.

|                         |                                                                                                                                                                                                                                                                                                  |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>ipv6 nd ns-interval</b> <i>seconds</i><br><br><b>no ipv6 nd ns-interval</b>                                                                                                                                                                                                                   |
| <b>Parameters</b>       | <b>seconds</b><br><br>Number of seconds between neighbor solicitation messages. The range is from 1 through 5. The default is 1.                                                                                                                                                                 |
| <b>Modes</b>            | Interface subtype configuration mode                                                                                                                                                                                                                                                             |
| <b>Usage Guidelines</b> | This command sets the interval for address resolution only. Use the <b>ipv6 nd dad time</b> command to configure the retransmit time interval for NS messages that are sent as part of duplicate address detection (DAD) .<br><br>Use the <b>no</b> form of this command to restore the default. |
| <b>Examples</b>         | To set the interval between Neighbor Discovery NS messages sent on an Ethernet interface to 3 seconds:<br><br><pre>switch(config-if-te-54/0/3)# ipv6 nd ns-interval 3</pre>                                                                                                                      |
| <b>Related Commands</b> | <a href="#">ipv6 nd dad time</a>                                                                                                                                                                                                                                                                 |

## ipv6 nd other-config-flag

In IPv6 Neighbor Discovery, indicates to hosts on a local link that they can use the stateful autoconfiguration feature to obtain configuration settings other than IPv6 address information for their interfaces.

**Syntax**    **ipv6 nd other-config-flag**

**no ipv6 nd other-config-flag**

**Modes**    Interface subtype configuration mode

**Usage Guidelines**    If the **ipv6 nd managed-config-flag** command is configured, local hosts use stateful autoconfiguration to obtain IPv6 addresses for their interfaces.

- If the **ipv6 nd managed-config-flag** command is configured, it overrides an existing configuration set by the **ipv6 nd other-config-flag** command.
- If the **ipv6 nd managed-config-flag** command is not configured, whether hosts can obtain IPv6 address information by means of the stateful autoconfiguration feature is determined by means of the **ipv6 nd other-config-flag** command.

Use the **no** form of this command to remove the configuration.

**Examples**    To indicate to local hosts on an Ethernet interface that they must use the stateful autoconfiguration feature to obtain configuration settings other than IPv6 address information for their interfaces:

```
switch(config-if-te-54/0/3)# ipv6 nd other-config-flag
```

**Related Commands**    [ipv6 nd managed-config-flag](#)

## ipv6 nd prefix

Configures which IPv6 prefixes are included in IPv6 Neighbor Discovery Router Advertisement (RA) messages.

|                         |                                                                                                                                                                                                                  |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>ipv6 nd prefix</b> <i>ipv6-prefix/prefix-length</i><br><b>no ipv6 nd prefix</b> <i>ipv6-prefix/prefix-length</i>                                                                                              |
| <b>Parameters</b>       | <b><i>ipv6-prefix</i></b><br>IPv6 prefix in hexadecimal with 16-bit values between colons, as specified in RFC 2373.<br><b><i>prefix-length</i></b><br>A decimal value specifying the length of the IPv6 prefix. |
| <b>Modes</b>            | Interface subtype configuration mode                                                                                                                                                                             |
| <b>Usage Guidelines</b> | Use the <b>no</b> form of this command to remove the IPv6 prefixes.<br>Valid and preferred lifetimes are default values, which are 2592000 and 604800, respectively.                                             |
| <b>Examples</b>         | To include an IPv6 prefix in router advertisement messages sent out an Ethernet interface:<br><br><pre>switch(config-if-te-54/0/3)# ipv6 nd prefix 2ffe:1111::/64</pre>                                          |

## ipv6 nd ra-interval

Configures the maximum interval range and minimum interval at which IPv6 Neighbor Discovery Router Advertisement (RA) messages are sent.

**Syntax** `ipv6 nd ra-interval max-value min min-value`

`no ipv6 nd ra-interval`

**Parameters** *max-value*

Maximum interval range in seconds. The range is from 4 through 1800. The default interval is 200 through 600, with messages sent randomly within that interval.

**min**

Specifies a minimum interval in seconds.

*min-value*

The range is from 0 through 1800. The default is 200.

**Modes** Interface subtype configuration mode

**Usage Guidelines** It is recommended that the interval set by this command be less than or equal to the device lifetime value set by the `ipv6 nd ra-lifetime` command if the device is advertised as a default device.

Use the `no` form of this command to restore the default.

**Examples** To set a maximum interval range and minimum interval for RA messages on an Ethernet interface:

```
switch(config-if-te-54/0/3)# ipv6 nd ra-interval 1200 min 400
```

**Related Commands** [ipv6 nd ra-lifetime](#)

## ipv6 nd ra-lifetime

Configures the amount of time in IPv6 Neighbor Discovery that a router is considered a valid default router.

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>ipv6 nd ra-lifetime</b> <i>seconds</i><br><br><b>no ipv6 nd ra-lifetime</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Parameters</b>       | <b>seconds</b><br><br>Time in seconds. The range is from 0 through 9000. The default is 1800.                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Modes</b>            | Interface subtype configuration mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Usage Guidelines</b> | Note the following behavior: <ul style="list-style-type: none"><li>• If the value set by this command is 0, the router is not advertised as a default router on the interface.</li><li>• If the value set by this command is not 0, the router is considered a default router on the interface.</li></ul> It is recommended that the interval set by this command be greater than or equal to the value set by the <b>ipv6 nd ra-interval</b> command if the device is advertised as a default device.<br>Use the <b>no</b> form of this command to restore the default. |
| <b>Examples</b>         | To set the time that a router is considered a valid default router on an Ethernet interface:<br><pre>switch(config-if-te-54/0/3)# ipv6 nd ra-lifetime 2400</pre>                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Related Commands</b> | <a href="#">ipv6 nd ra-interval</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

## ipv6 nd reachable-time

Configures the amount of time in IPv6 Neighbor Discovery that a device considers a removed IPv6 node reachable.

**Syntax** `ipv6 nd reachable-time milli seconds`

`no ipv6 nd reachable-time`

**Parameters** *milliseconds*

Time in milliseconds. The range is from 0 through 3600000. The default is 0.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Setting the reachable time to a nonzero value ensures that all nodes on the same link share the same value. The default of 0 means that no reachable time is specified.

Use the **no** form of this command to restore the default.

**Examples** To set the amount of time that a device considers a removed IPv6 node reachable on an Ethernet interface:

```
switch(config-if-te-54/0/3)# ipv6 nd reachable-time 1800000
```

## ipv6 nd retrans-timer

Configures the time advertised between IPv6 Neighbor Discovery Neighbor Solicitation (NS) messages.

**Syntax** `ipv6 nd retrans-timer milliseconds`

`no ipv6 nd retrans-timer`

**Parameters** *milliseconds*

Interval, in milliseconds, at which NS messages are sent. The range is from 0 through 4294967295. The default is 0.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use the **no** form of this command to restore the default.

**Examples** To set the time advertised between NS messages on an interface:

```
switch(config-if-te-54/0/3)# ipv6 nd retrans-timer 4500000
```



## ipv6 nd suppress-ra

Disables the sending of ICMPv6 Router Advertisement (RA) messages, including those sent in response to a solicitation as well as MTUs.

**Syntax** `ipv6 nd suppress-ra [ all | mtu ]`

`no ipv6 nd suppress-ra [ all | mtu ]`

**Parameters** **all**

Disables the sending of all RA messages, including those sent in response to a solicitation.

**mtu**

Disables the sending of MTUs in RA messages.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use the **no** form of this command to enable the sending of RA messages.

**Examples** To disable the sending of RA messages on an Ethernet interface, but allowing those sent in response to a solicitation:

```
switch(config-if-te-54/0/3)# ipv6 nd suppress-ra
```

To disable the sending of RA messages, as well as those sent in response to a solicitation:

```
switch(config-if-te-54/0/3)# ipv6 nd suppress-ra all
```

To disable the sending of RA messages, allowing those sent in response to a solicitation, but also disabling the sending of MTUs:

```
switch(config-if-te-54/0/3)# ipv6 nd suppress-ra mtu
```

## ipv6 neighbor

Configures the IPv6 and MAC addresses of a neighbor as static entries for IPv6 Neighbor Discovery.

|                         |                                                                                                                                                                                                                               |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>ipv6 neighbor</b> <i>ipv6address</i> <i>MACaddress</i><br><br><b>no ipv6 neighbor</b>                                                                                                                                      |
| <b>Parameters</b>       | <b>ipv6address</b><br>IPv6 address of a neighbor in <i>A:B:C:D</i> format.<br><b>MACaddress</b><br>MAC address of the neighbor in <i>HHHH.HHHH.HHHH</i> format.                                                               |
| <b>Modes</b>            | RBridge ID configuration mode.                                                                                                                                                                                                |
| <b>Usage Guidelines</b> | Use the <b>no</b> form of this command to remove the IPv6 and MAC addresses.                                                                                                                                                  |
| <b>Examples</b>         | The following configures an IPv6 and MAC address on an Ethernet interface for a neighbor:<br><br><pre>switch(config)# rbridge-id 54 switch(config-rbridge-id-54)# ipv6 neighbor 2001:0db8:8086:6501::/32 abcd.abcd.abcd</pre> |

# ipv6 ospf active

Sets a specific OSPFv3 interface to active.

**Syntax** `ipv6 ospf active`

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use the `ipv6 ospf active` command on each interface participating in adjacency formation. This command overrides the global passive setting on that interface, and enables transmission of OSPFv3 control packets.

**Examples** To set a specific OSPFv3 virtual Ethernet (VE) interface to active:

```
device# configure
device(config)# rbridge-id 122
device(config-rbridge-id-122)# interface ve 95
device(config-Ve-95)# ipv6 ospf active
```

## History

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

## Related Commands

[ipv6 ospf passive](#)

# ipv6 ospf area

Enables OSPFv3 on an interface.

**Syntax** `ipv6 ospf area area-id | ipv6-addr`

**no ipv6 ospf area**

**Command Default** OSPFv3 is disabled.

**Parameters** *area-id*

Area address in dotted decimal or decimal format.

*ipv6-addr*

IPv6 address.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command enables an OSPFv3 area on the interface to which you are connected.

Enter **no ipv6 ospf area** to disable OSPFv3 on this interface.

**Examples** To enable a configured OSPFv3 area named 0 on a specific OSPFv3 10-gigabit Ethernet interface:

```
device# configure terminal
device(config)# interface tengigabitethernet 190/0/49
device(config-if-te-190/0/49)# ipv6 ospf area 0
```

To enable a configured OSPFv3 area named 0 on a specific OSPFv3 virtual Ethernet (VE) interface:

```
device(config)# rbridge-id 177
device(config-rbridge-id-177)# interface ve 12
device(config-ve-12)# ipv6 ospf area 0
```

**History**

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

**Related Commands**

[interface](#), [interface ve](#), [ipv6 ospf cost](#), [ipv6 ospf dead-interval](#), [ipv6 ospf hello-interval](#), [ipv6 ospf mtu-ignore](#), [ipv6 ospf network](#), [ipv6 ospf passive](#), [ipv6 ospf priority](#), [ipv6 ospf retransmit-interval](#), [ipv6 ospf transmit-delay](#)

# ipv6 ospf authentication ipsec

Specifies IPsec as the authentication type for an OSPFv3 interface.

**Syntax** **ipv6 ospf authentication ipsec key-add-remove-interval *interval***  
**no ipv6 ospf authentication ipsec key-add-remove-interval *interval***

**Command Default** Authentication is disabled.

**Parameters** **key-add-remove-interval *interval***  
 Specifies the OSPFv3 authentication key add-remove interval. Valid values range from decimal numbers 0 through 14400. The default is 300.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no ipv6 ospf authentication ipsec** to remove IPsec authentication from the interface.

**Examples** To enable IPsec on a specified OSPFv3 10-gigabit interface:

```
device# configure
device(config)# interface te 1/0/1
device(config-if-te-1/0/1)# ipv6 ospf area 0
device(config-if-te-1/0/1)# ipv6 ospf authentication ipsec
```

To set the OSPFv3 authentication key add-remove interval to 480:

```
device# configure
device(config)# interface te 1/0/1
device(config-if-te-1/0/1)# ipv6 ospf area 0
device(config-if-te-1/0/1)# ipv6 ospf authentication ipsec key-add-remove-interval 480
```

| History | Release version | Command history              |
|---------|-----------------|------------------------------|
|         | 5.0.1a          | This command was introduced. |

## ipv6 ospf authentication ipsec disable

Disables IP security (IPsec) services on an OSPFv3 interface.

**Syntax** `ipv6 ospf authentication ipsec disable`

`no ipv6 ospf authentication ipsec disable`

**Command Default** Authentication is disabled.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no ipv6 ospf authentication ipsec` to re-enable IPsec on the interface if IPsec is already configured on the interface.

Use this command to disable IPsec if it is enabled on the interface. Packets that are sent out will not be IPsec encapsulated and the received packets which are IPsec encapsulated will be dropped.

**Examples** To disable IPsec on a specific OSPFv3 10-gigabit Ethernet interface where IPsec is already enabled:

```
device# configure
device(config)# interface tengigabitethernet 190/0/49
device(conf-if-te-190/0/49)# ipv6 ospf authentication ipsec disable
```

### History

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.1a          | This command was introduced. |

## ipv6 ospf authentication spi

Specifies the security policy index (SPI) value for an OSPFv3 interface.

**Syntax** `ipv6 ospf authentication spi spi { ah | esp null } { hmac-md5 | hmac-sha1 } key [ no-encrypt ] key }`  
`no ipv6 ospf authentication spi`

**Command Default** Authentication is disabled.

The 40 hexadecimal character key is encrypted by default. Use the **no-encrypt** parameter to disable encryption.

**Parameters**

- spi** SPI value. Valid values range from decimal numbers 512 through 4294967295.
- ah** Specifies Authentication Header (ah) as the protocol to provide packet-level security.
- esp** Specifies Encapsulating Security Payload (ESP) as the protocol to provide packet-level security.
- null** Specifies that the ESP payload is not encrypted.
- hmac-md5** Enables Hashed Message Authentication Code (HMAC) Message Digest 5 (MD5) authentication on the OSPF interface.
- hmac-sha1** Enables HMAC Secure Hash Algorithm 1 (SHA-1) authentication on the OSPF interface.
- key** Number used in the calculation of the message digest. The 40 hexadecimal character key is stored in encrypted format by default.
- no-encrypt** The 40-character key is not encrypted upon either its entry or its display.
- key** The 40 hexadecimal character key.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no ipv6 ospf authentication spi spi` to remove the SPI value from the interface.

**Examples** To enable ESP and HMAC-SHA-1 on a specified OSPFv3 10-gigabit interface:

```
device# configure
device(config)# interface Te 1/0/1
device(config-if-te-1/0/1)# ipv6 ospf area 0
device(config-if-te-1/0/1)# ipv6 ospf authentication spi 512 esp null hmac-sha1 key
abcef12345678901234fedcba098765432109876
```

To enable HA and HMAC-MD5 on a specified OSPFv3 10-gigabit interface:

```
device# configure
device(config)# interface Te 1/0/1
device(config-if-te-1/0/1)# ipv6 ospf area 0
device(config-if-te-1/0/1)# ipv6 ospf authentication spi 750 ha hmac-md5 key
abcef12345678901234fedcba098765432109876
```

**History**

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.1a          | This command was introduced. |



# ipv6 ospf cost

Configures cost for a specific interface.

**Syntax** `ipv6 ospf cost value`

`no ipv6 ospf cost`

**Command Default** Cost value is 1.

**Parameters** *value*

Cost value. Valid values range from 1 through 65535.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use this command to set or reset the OSPFv3 cost on the interface. If the cost is not configured with this command, OSPFv3 calculates the value from the reference and interface bandwidths.

For more information, refer to the **auto-cost reference-bandwidth** command.

Enter **no ipv6 ospf cost** to disable this configuration.

**Examples** To set the cost to 550 on a specific OSPFv3 10-gigabit Ethernet interface:

```
device# configure terminal
device(config)# interface tengigabitethernet 190/0/49
device(conf-if-te-190/0/49)# ipv6 ospf cost 550
```

To set the cost to 620 on a specific IPv6 OSPF Virtual Ethernet (VE) interface:

```
device# configure terminal
device(config)# rbridge-id 177
device(config-rbridge-id-177)# interface ve 14
device(config-ve-14)# ipv6 ospf cost 620
```

**History**

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

**Related Commands**

[auto-cost reference-bandwidth \(OSPFv3\)](#), [interface](#), [interface ve](#), [ipv6 ospf area](#), [ipv6 ospf dead-interval](#), [ipv6 ospf hello-interval](#), [ipv6 ospf mtu-ignore](#), [ipv6 ospf network](#), [ipv6 ospf passive](#), [ipv6 ospf priority](#), [ipv6 ospf retransmit-interval](#), [ipv6 ospf transmit-delay](#)

# ipv6 ospf dead-interval

Specifies the time period for which a neighbor router waits for a hello packet from the device before declaring the router down.

**Syntax** `ipv6 ospf dead-interval interval`

`no ipv6 ospf dead-interval`

**Command Default** 40 seconds.

**Parameters** *interval*

Dead interval in seconds. Valid values range from 3 through 65535 seconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** If you change the dead interval, the hello interval is automatically changed to be one fourth of the new dead interval, unless the hello interval is also explicitly configured using the **ipv6 ospf hello-interval** command. The **running-config** command displays only explicitly configured values of the hello interval, which means that a value that is automatically changed as the result of a dead-interval change is not displayed.

Enter **no ipv6 ospf dead-interval** to use the default value.

**Examples** To set the dead interval to 60 on a specific IPv6 OSPF 40-gigabit Ethernet interface:

```
device# configure terminal
device(config)# interface fortygigabitethernet 101/0/10
device(conf-if-fo-101/0/10)# ipv6 ospf dead-interval 60
```

To set the dead interval to 80 on a specific IPv6 OSPF virtual Ethernet (VE) interface:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# interface ve 24
device(config-ve-24)# ipv6 ospf dead-interval 80
```

**History**

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

**Related Commands**

[interface](#), [interface ve](#), [ipv6 ospf area](#), [ipv6 ospf cost](#), [ipv6 ospf hello-interval](#), [ipv6 ospf mtu-ignore](#), [ipv6 ospf network](#), [ipv6 ospf passive](#), [ipv6 ospf priority](#), [ipv6 ospf retransmit-interval](#), [ipv6 ospf transmit-delay](#)

# ipv6 ospf hello-interval

Sets the length of time between the transmission of hello packets that an interface sends to neighbor routers.

**Syntax** `ipv6 ospf hello-interval interval`

`no ipv6 ospf hello-interval`

**Command Default** 10 seconds.

**Parameters** *interval*

Hello interval in seconds. Valid values range from 1 through 65535 seconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** If you change the hello interval, the dead interval is automatically changed to be four times the new hello interval, unless the dead interval is also explicitly configured using the `ipv6 ospf dead-interval` command. The **running-config** command displays only explicitly configured values of the dead interval, which means that a value that is automatically changed as the result of a hello-interval change is not displayed.

Enter `no ipv6 ospf hello-interval` to use the default value.

**Examples** To set the hello interval to 150 on a specific OSPFv3 40-gigabit Ethernet interface:

```
device# configure terminal
device(config)# interface fortygigabitethernet 101/0/10
device(conf-if-fo-101/0/10)# ipv6 ospf hello-interval 150
```

To set the hello interval to 220 on a specific OSPFv3 virtual Ethernet (VE) interface:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# interface ve 24
device(config-ve-24)# ipv6 ospf hello-interval 220
```

**History**

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

**Related Commands**

[interface](#), [interface ve](#), [ipv6 ospf area](#), [ipv6 ospf cost](#), [ipv6 ospf dead-interval](#), [ipv6 ospf mtu-ignore](#), [ipv6 ospf network](#), [ipv6 ospf passive](#), [ipv6 ospf priority](#), [ipv6 ospf retransmit-interval](#), [ipv6 ospf transmit-delay](#)

# ipv6 ospf hello-jitter

Sets the allowed jitter between HELLO packets.

**Syntax** `ipv6 ospf hello-jitter interval`

`no ipv6 ospf hello-jitter`

**Parameters** *jitter*

Allowed interval between hello packets. Valid values range from 1 through 50 percent (%).

**Modes** Interface subtype configuration mode

**Usage Guidelines** The hello interval can vary from the configured hello-interval to a maximum of percentage value of configured jitter.

**Examples** To set the hello jitter to 20 on a specific OSPFv3 40-gigabit Ethernet interface:

```
device# configure terminal
device(config)# interface fortygigabitethernet 101/0/20
device(conf-if-fo-101/0/10)# ipv6 ospf hello-jitter 20
```

**History**

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

**Related Commands**

[interface](#), [interface ve](#), [ipv6 ospf area](#), [ipv6 ospf cost](#), [ipv6 ospf dead-interval](#), [ipv6 ospf hello-interval](#), [ipv6 ospf mtu-ignore](#), [ipv6 ospf network](#), [ipv6 ospf passive](#), [ipv6 ospf priority](#), [ipv6 ospf retransmit-interval](#), [ipv6 ospf transmit-delay](#)

# ipv6 ospf instance

Specifies the number of OSPFv3 instances running on an interface.

**Syntax** `ipv6 ospf instance instanceID`

`no ipv6 ospf instance`

**Parameters** *instanceID*

Instance identification number. Valid values range from 0 through 255.

**Modes** Interface subtype configuration mode .

**Usage Guidelines** Enter `no ipv6 ospf instance` to use the default value.

**Examples** To set the number of IPv6 OSPF instances to 35 on a specific OSPFv3 40-gigabit Ethernet interface:

```
device# configure terminal
device(config)# interface fortygigabitethernet 101/0/20
device(conf-if-fo-101/0/10)# ipv6 ospf instance 35
```

**History**

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

**Related  
Commands**

[interface](#), [interface ve](#), [ipv6 ospf area](#), [ipv6 ospf cost](#), [ipv6 ospf dead-interval](#), [ipv6 ospf hello-interval](#), [ipv6 ospf mtu-ignore](#), [ipv6 ospf network](#), [ipv6 ospf passive](#), [ipv6 ospf priority](#), [ipv6 ospf retransmit-interval](#), [ipv6 ospf transmit-delay](#)

# ipv6 ospf mtu-ignore

Enables or disables maximum transmission unit (MTU) match checking.

**Syntax** `ipv6 ospf mtu-ignore`  
`no ipv6 ospf mtu-ignore`

**Command Default** Enabled

**Modes** Interface subtype configuration mode

**Usage Guidelines** In default operation, the IP MTU on both sides of an OSPFv3 link must be the same, and a check of the MTU is performed when Hello packets are first exchanged.

Enter **no ipv6 ospf mtu-ignore** to disable MTU-match checking on a specific interface.

**Examples** To disable MTU-match checking on a specific IPv6 OSPF 40-gigabit Ethernet interface:

```
device# configure terminal
device(config)# interface fortygigabitethernet 101/0/10
device(conf-if-fo-101/0/10)# no ipv6 ospf mtu-ignore
```

To disable MTU-match checking on a specific IPv6 OSPF virtual Ethernet (VE) interface:

```
device# configure terminal
device(config)# rbridge-id 177
device(config-rbridge-id-171778)# interface ve 24
device(config-ve-24)# no ipv6 ospf mtu-ignore
```

| History | Release version | Command history              |
|---------|-----------------|------------------------------|
|         | 5.0.0           | This command was introduced. |

**Related Commands** [interface](#), [interface ve](#), [ipv6 ospf area](#), [ipv6 ospf cost](#), [ipv6 ospf dead-interval](#), [ipv6 ospf network](#), [ipv6 ospf passive](#), [ipv6 ospf priority](#), [ipv6 ospf retransmit-interval](#), [ipv6 ospf transmit-delay](#)

# ipv6 ospf network

Configures network type.

**Syntax** `ipv6 ospf network { broadcast | point-to-point }`  
`no ipv6 ospf network`

**Command Default** Network type is broadcast.

**Parameters** **broadcast**  
 Network type is broadcast, such as Ethernet.  
**point-to-point**  
 Network type is point-to-point.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Point-to-point can support unnumbered links, which requires less processing by OSPFv3.  
 Enter **no ipv6 ospf network** to remove the network-type configuration.

---

**NOTE**

The network type non-broadcast is not supported at this time.

---

**Examples** To configure an OSPFv3 point-to-point link on the OSPFv3 10-gigabit Ethernet interface whose rbridge-ID/slot/port format is 190/0/49:

```
device# configure terminal
device(config)# interface tengigabitethernet 190/0/49
device(config-if-te-190/0/49)# ipv6 ospf network point-to-point
```

To configure an OSPFv3 broadcast link on the OSPFv3 virtual Ethernet (VE) interface 20:

```
device# configure terminal
device(config)# rbridge-id 178
device(config-rbridge-id-178)# interface ve 20
device(config-ve-20)# ipv6 ospf network broadcast
```

**History**

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

**Related Commands**

[interface](#), [interface ve](#), [ipv6 ospf area](#), [ipv6 ospf cost](#), [ipv6 ospf dead-interval](#), [ipv6 ospf mtu-ignore](#), [ipv6 ospf passive](#), [ipv6 ospf priority](#), [ipv6 ospf retransmit-interval](#), [ipv6 ospf transmit-delay](#)

## ipv6 ospf passive

Sets a specific OSPFv3 interface to passive.

- Syntax** **ipv6 ospf passive**
- no ipv6 ospf passive**
- Modes** Interface subtype configuration mode
- Usage Guidelines** The **ipv6 ospf passive** command disables transmission of OSPFv3 control packets on that interface. OSPFv3 control packets received on a passive interface are discarded.
- Examples** To set a specific OSPFv3 virtual Ethernet (VE) interface to passive:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# int ve 200
device(config-Ve-200)# ipv6 ospf passive
```

### History

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

### Related Commands

[ipv6 ospf active](#)



## ipv6 ospf priority

Configures priority for designated router (DR) election and backup designated routers (BDRs) on the interface you are connected to.

**Syntax** `ipv6 ospf priority value`

`no ipv6 ospf priority`

**Command Default** The default value is 1.

**Parameters** *value*

Priority value. Valid values range from 0 through 255.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The OSPFv3 router assigned the highest priority becomes the designated router, and the OSPFv3 router with the second-highest priority becomes the backup router.

Enter **no ipv6 ospf priority** to use the default value.

**Examples** To set a priority of 4 for the OSPFv3 router that is connected to an OSPFv3 10-gigabit Ethernet interface 190/0/49:

```
device# configure terminal
device(config)# interface tengigabitethernet 190/0/49
device(conf-if-te-190/0/49)# ipv6 ospf priority 4
```

To set a priority of 4 for the OSPFv3 router that is connected to an OSPFv3 virtual Ethernet (VE) interface 27:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# interface ve 27
device(config-ve-27)# ipv6 ospf priority 4
```

### History

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

### Related Commands

[interface](#), [interface ve](#), [ipv6 ospf area](#), [ipv6 ospf cost](#), [ipv6 ospf dead-interval](#), [ipv6 ospf hello-interval](#), [ipv6 ospf mtu-ignore](#), [ipv6 ospf network](#), [ipv6 ospf passive](#), [ipv6 ospf retransmit-interval](#), [ipv6 ospf transmit-delay](#)

## ipv6 ospf retransmit-interval

Configures retransmit interval. The retransmit interval is the time between Link-State Advertisement (LSA) retransmissions to adjacent routers for a given interface

**Syntax** `ipv6 ospf retransmit-interval rtx-int`

`no ipv6 ospf retransmit-interval`

**Command Default** 5 seconds.

**Parameters** *rtx-int*

Retransmit interval in seconds. Valid values range from 0 through 3600 seconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no ip ospf retransmit-interval` to reset the retransmit interval to its default.

**Examples** To set the retransmit interval to 8 for all OSPFv3 routers on the OS-gigabit Ethernet interface 190/0/49:

```
device# configure terminal
device(config)# interface tengigabitethernet 190/0/49
device(config-if-te-190/0/49)# ipv6 ospf retransmit-interval 8
```

To set the retransmit interval to 26 for all OSPFv3 routers on the OSPFv3 virtual Ethernet (VE) interface 22:

```
device# configure terminal
device(config)# rbridge-id 178
device(config-rbridge-id-178)# interface ve 22
device(config-ve-22)# ipv6 ospf retransmit-interval 26
```

### History

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

### Related Commands

[interface](#), [interface ve](#), [ipv6 ospf area](#), [ipv6 ospf dead-interval](#), [ipv6 ospf hello-interval](#), [ipv6 ospf mtu-ignore](#), [ipv6 ospf network](#), [ipv6 ospf passive](#), [ipv6 ospf priority](#), [ipv6 ospf transmit-delay](#)

# ipv6 ospf suppress-linklsa

Suppresses link LSA advertisements.

**Syntax** `ipv6 ospf suppress-linklsa`

`no ipv6 ospf suppress-linklsa`

**Modes** Interface subtype configuration mode

**Examples** To suppress link LSAs from being advertised on routers on the OSPFv3 40-gigabit Ethernet interface 190/0/49:

```
device# configure terminal
device(config)# interface fortygigabitethernet 190/0/49
device(conf-if-te-190/0/49)# ipv6 ospf suppress-linklsa
```

**History**

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

**Related Commands**

[interface](#), [interface ve](#), [ipv6 ospf area](#), [ipv6 ospf dead-interval](#), [ipv6 ospf hello-interval](#), [ipv6 ospf mtu-ignore](#), [ipv6 ospf network](#), [ipv6 ospf passive](#), [ipv6 ospf priority](#), [ipv6 ospf retransmit-interval](#), [ipv6 ospf transmit-delay](#)

# ipv6 ospf transmit-delay

Configures transmit delay for link-update packets. The transmit delay is the estimated time required for OSPFv3 to send link-state update packets on the interface to which you are connected.

**Syntax** `ipv6 ospf transmit-delay tx-delay`

`no ipv6 ospf transmit-delay`

**Command Default** 1 second.

**Parameters** *tx-delay*

Transmit delay in seconds. Valid values range from 0 through 3600 seconds.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no ipv6 ospf transmit-delay` to use the default value.

**Examples** To set a transmit delay of 25 seconds for routers on the OSPFv3 40-gigabit Ethernet interface 190/0/49:

```
device# configure terminal
device(config)# interface fortygigabitethernet 190/0/49
device(conf-if-te-190/0/49)# ipv6 ospf transmit-delay 25
```

To set a transmit delay of 45 seconds for routers on the OSPFv3 virtual Ethernet (VE) interface 22:

```
device# configure terminal
device(config)# rbridge-id 177
device(config-rbridge-id-177)# interface ve 22
device(config-ve-22)# ipv6 ospf transmit-delay 43
```

**History**

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

**Related Commands**

[interface](#), [interface ve](#), [ipv6 ospf area](#), [ipv6 ospf dead-interval](#), [ipv6 ospf hello-interval](#), [ipv6 ospf mtu-ignore](#), [ipv6 ospf network](#), [ipv6 ospf passive](#), [ipv6 ospf priority](#), [ipv6 ospf suppress-linklsa](#), [ipv6 ospf retransmit-interval](#)

# ipv6 prefix-list

Configures IPv6 prefix lists for use in basic traffic filtering.

**Syntax** `ipv6 prefix-list name [ seq sequence-number ] deny ipv6-prefix/prefix-length | permit ipv6-prefix/prefix-length | description string [ ge ge-value ] [ le le-value ]`

`no ipv6 prefix-list name`

**Parameters** *name*

Specifies the prefix list name. You use this name when using the prefix list as input to command or route map.

**seq sequence-number**

Specifies the IPv6 prefix list's sequence number. If you do not specify a sequence number, the software numbers them in increments of 5, beginning with prefix list entry 5. The Brocade device interprets the prefix list entries in numerical order, beginning with the lowest sequence number.

**deny ipv6-prefix/prefix-length**

This parameter denies a packet if the packet contains a route specified in the prefix list. The prefix list matches only on the specified *ipv6-prefix/prefix-length* unless you use the **ge ge-value** or **le le-value** parameters.

**permit ipv6-prefix/prefix-length**

This parameter permits a packet if the packet contains a route specified in the prefix list. The prefix list matches only on the specified prefix/prefix length unless you use the **ge ge-value** or **le le-value** parameters.

**description string**

This parameter is a text string describing the prefix list.

**ge ge-value**

If you specify only **ge ge-value**, then the range is from ge-value to 128.

**le le-value**

If you specify only **le le-value**, then the range is from *le-value* to the *prefix-length* parameter.

**Modes** Global configuration mode

**Usage Guidelines**

An IPv6 prefix list is composed of one or more conditional statements that execute a permit or deny action if a packet matches a specified prefix. In prefix lists with multiple statements, you can specify a sequence number for each statement. The specified sequence number determines the order in which the statement appears in the prefix.

You can configure an IPv6 prefix list on a global basis, then use it as input to other commands or processes, such as route aggregation, route redistribution, route distribution, route maps, and so on. When a Brocade device interface sends or receives an IPv6 packet, it applies the statements within the IPv6 prefix list in their order of appearance to the packet. As soon as a match occurs, the device takes the specified action (permit or deny the packet) and stops further comparison for that packet.

You can use permit statements in the prefix list to specify the traffic that you want to send to the other feature. If you use deny statements, the traffic specified by the deny statements is not supplied to the other feature. You can configure up to one hundred IPv6 prefix lists.

Use the `no ipv6 prefix-list name` command to delete a prefix list.

You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 4291. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The *ge-value* or *le-value* you specify must meet the following condition for the prefix-length:

```
ge-value <= le-value <= 128
```

If you do not specify **ge** *ge-value* or **le** *le-value*, the prefix list matches only on the exact prefix you specify with the *ipv6-prefix/prefix-length* parameter.

**Examples**

**Draft comment:**  
confirm interface example tuple

To configure an IPv6 prefix list and use it as input to the RIPng **distribute-list** command, enter the following commands.

```
switch(config)# ipv6 prefix-list routesfor2001 permit 2001::/16
switch(config)# ipv6 router rip
switch(config-ripng-router)# distribute-list prefix-list routesfor2001 out ethernet
3/1
```

These commands permit the inclusion of routes with the IPv6 prefix 2001::/16 in RIPng routing updates sent from Ethernet interface 3/1.

**Related  
Commands**

[ipv6 address](#), [distribute-list route-map](#)

# ipv6 protocol vrrp

Globally enables IPv6 VRRPv3.

**Syntax** `ipv6 protocol vrrp`

`no ipv6 protocol vrrp`

**Command Default** Disabled

**Modes** RBridge ID configuration mode

**Usage Guidelines** The `no ipv6 protocol vrrp` command globally disables VRRPv3.

**Examples** To enable IPv6 VRRPv3 globally:

```
switch# configure
switch(config)# rbridge-id 122
switch(config-rbridge-id-122)# ipv6 protocol vrrp
```

**Related Commands** [ipv6 protocol vrrp-extended](#)

## ipv6 protocol vrrp-extended

Globally enables IPv6 VRRP-Ev3.

**Syntax** `ipv6 protocol vrrp-extended`

`no ipv6 protocol vrrp-extended`

**Command Default** Disabled

**Modes** RBridge ID configuration mode

**Usage Guidelines** The `no ipv6 protocol vrrp-extended` command globally disables IPv6 VRRP-Ev3.

**Examples** To enable IPv6 VRRP-Ev3 globally:

```
switch# configure
switch (config)# rbridge-id 122
switch(config-rbridge-id-122)# ipv6 protocol vrrp-extended
```

**Related  
Commands** [ipv6 protocol vrrp](#)



# ipv6 route

Configures a static IPv6 route for an interface, with a destination network, a next-hop gateway, and an optional administrative distance.

**Syntax** **ipv6 route** *dest-ipv6-prefix/prefix-length* [*next-hop-ipv6-address* | *link-local-next-hop-ipv6-address*] [*<N>gigabitethernet slot/port* | **null 0** | **ve** *vlan\_id*] [*metric*] [**distance** *number*] [**tag** *tag*]

**ipv6 route** *ipv6-prefix/prefix-length next-hop-vrf vrf\_name next-hop-ipv6-address*

**no ipv6 route** *dest-ipv6-prefix/prefix-length* [*next-hop-ipv6-address* | *link-local-next-hop-ipv6-address*] [*metric*] [**distance** *number*] [**tag** *tag*]

**no ipv6 route** *dest-ipv6-prefix/prefix-length* [*next-hop-ipv6-address* | *link-local-next-hop-ipv6-address*] [*<N>gigabitethernet rbridge-id/slot/port* | **null 0** | **ve** *vlan\_id*] [*metric*] [**distance** *number*] [**tag** *tag*]

**no ipv6 route** *ipv6-prefix/prefix-length next-hop-vrf vrf\_name next-hop-ipv6-address*

**Command Default** See Parameter defaults.

**Parameters** **dest-ipv6-prefix**  
Destination IPv6 prefix in hexadecimal with 16-bit values between colons, as specified in RFC 2373.

**prefix-length**  
A decimal value specifying the length of the IPv6 prefix.

**next-hop-ipv6-address**  
IPv6 address of the next-hop gateway.

**link-local-next-hop-ipv6-address**  
IPv6 address of the link-local next-hop gateway.

**next-hop-vrf vrf\_name next-hop-ipv6-address**  
Specifies a VRF instance and a next-hop IPv6 address.

**<N>gigabitethernet**  
Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace **<N>gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**slot**  
Specifies a valid slot number.

**port**  
Specifies a valid port number.

**null 0**  
Causes packets to the selected destination to be dropped by shunting them to the "null0" interface. (This is the only available option.)

**ve vlan\_id**  
Specifies the VLAN ID of a virtual Ethernet (VE) interface.

**metric**  
Specifies a value that the Layer 3 switch uses to compare this route to other static routes in the IPv6 static route table that have the same destination. The metric applies only to routes that the Layer 3 switch has number already placed in the IPv6 static route table. Two or more routes to the same destination with

the same metric will load share (as in ECMP load sharing). The range is from 1 through 16. The default is 1.

**distance**

Specifies an administrative distance. This is a value that the Layer 3 switch uses to compare this route with routes from other route sources that have the same destination. By default, static routes take precedence over routes learned by routing protocols. To choose a dynamic route over a static route, configure the static route with a higher administrative distance than the dynamic route.

**number**

The range is from 1 through 255. The default is 1.

**tag**

Specifies a tag value for the route. The route tag can be used for route redistribution to routing protocols by means of route maps (as in IPv4 static route redistribution).

**tag**

A number from 0 through 4294967295. The default is 0.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use this command to configure a static IPv6 route for an interface, with a destination network, a next-hop gateway, and an optional administrative distance.

**Examples** To configure a static IPv6 route to a destination network with the prefix 2001:db8::0/32, a next-hop gateway with the global address 2001:db8:0:ee44::1, and an administrative distance of 110:

```
switch(rbridge-id-54)# ipv6 route 2001:db8::0/32 2001:db:0:ee44::1 distance 110
```

---

**NOTE**

See the Brocade Network OS Administration Guide for additional examples and details.

---

# ipv6 router ospf

Enables and configures the Open Shortest Path First version 3 (OSPFv3) routing protocol over VRF.

**Syntax** `ipv6 router ospf [ vrf name ]`

`no ipv6 router ospf`

**Command Default** This command is disabled by default.

**Parameters** `vrf name`

The name of the non-default VRF to connect.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use this command to enable the OSPFv3 routing protocol and enter OSPFv3 VRF router configuration mode. OSPFv3 maintains multiple instances of the routing protocol to exchange route information among various VRF instances.

Enter **no ipv6 router ospf** to delete all current OSPFv3 configuration and to block any further OSPFv3 configuration. If you save the configuration to the startup-config file after disabling OSPFv3, all OSPFv3 configuration information is removed from the startup-config file.

**Examples** To enable OSPFv3 on a default VRF and to enter IPv6 OSPF VRF router configuration mode:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)#ipv6 router ospf
device(config-ipv6-router-ospf-vrf-default-vrf)#
```

## History

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

## ipv6 unreachable

Prohibits routers from forwarding an Internet Control Message Protocol version 6 (ICMPv6) Destination Unreachable Code 3 (port unreachable) message on a point-to-point link back onto the ingress port.

**Syntax** `ipv6 unreachable`

`no ipv6 unreachable`

**Command Default** This command is enabled by default.

**Modes** Global configuration mode

**Usage Guidelines** By default, ICMPv6 Destination Unreachable Code 3 messages are sent for a discarded IP packet. You can disable the sending of these messages. Use the **no ipv6 unreachable** command to disable the sending of these messages.

This is an interface-specific configuration The configuration is persistent across a switch reload.

**Related  
Commands** [ip unreachable](#)

## ipv6 vrrp-extended-group

Configures an IPv6 VRRP-Ev3 group and enters into the VRRP-E configuration mode.

**Syntax** `ipv6 vrrp-extended-group group-ID`

`no ipv6 vrrp-extended-group group-ID`

**Parameters** *group-ID*

A number from 1 through 128 that you assign to the VRRP-Ev3 group.

**Modes** Virtual Ethernet (VE) interface configuration mode

**Usage Guidelines** Enter `no ipv6 vrrp-extended-group group-ID` to remove the specific IPv6 VRRP-Ev3 group. If you remove a group, you cannot retrieve it. You would have to redo the configuration procedure.

This configuration is for virtual Ethernet (VE) interfaces only. IPv6 VRRP-Ev3 must be enabled on the device before the IPv6 VRRP-E group is configured.

**Examples** The following example shows how to assign the VE interface with a VLAN number of 2019 to the VRRP-Ev3 group with the ID of 19.

```
switch(config)# rbridge-id 122
switch(config-rbridge-id-122)# ipv6 protocol vrrp-extended
switch(config-rbridge-id-122)# interface ve 2019
switch(config-Ve-2019)# ipv6 address 2001:2019:8192::122/64
switch(config-Ve-2019)# ipv6 vrrp-extended-group 19
switch(config-vrrp-extended-group-19)#
```

**Related Commands** [ipv6 protocol vrrp-extended](#)

## ipv6 vrrp-group

Configures an IPv6 VRRPv3 group and enters into the virtual router configuration mode.

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>ipv6 vrrp-group</b> <i>group-ID</i><br><b>no ipv6 vrrp-group</b> <i>group-ID</i>                                                                                                                                                                                                                                                                                                                                                            |
| <b>Parameters</b>       | <b>group-ID</b><br>A value from 1 through 128 that you assign to the VRRPv3 group.                                                                                                                                                                                                                                                                                                                                                             |
| <b>Modes</b>            | Interface subtype configuration mode                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Usage Guidelines</b> | Enter <b>no ipv6 vrrp-group</b> <i>group-ID</i> to remove a specific IPv6 VRRPv3 group. If you remove a group, you cannot retrieve it. You would have to redo the configuration procedure.<br>IPv6 VRRPv3 must be enabled on the device before the IPv6 VRRP group is configured.                                                                                                                                                              |
| <b>Examples</b>         | The following example shows how to assign the 10-gigabit Ethernet interface 101/1/6 to the VRRPv3 group with the ID of 18.<br><pre>switch(config)# rbridge-id 125 switch(config-rbridge-id-125)# ipv6 protocol vrrp switch(config-rbridge-id-125)# interface tengigabitethernet 101/1/6 switch(config-if-te-101/1/6)# ipv6 address 2001:2019:8192::125/64 switch(config-if-te-101/1/6)# ipv6 vrrp-group 18 switch(config-vrrp-group-18)#</pre> |
| <b>Related Commands</b> | <a href="#">ipv6 protocol vrrp</a>                                                                                                                                                                                                                                                                                                                                                                                                             |

## ipv6 vrrp-suppress-ra

Suppresses interface router advertisement (RA) when VRRPv3 is configured on the interface.

**Syntax** `ipv6 vrrp-suppress-ra`

`no ipv6 vrrp-suppress-ra`

**Command Default** Disabled

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no ipv6 vrrp-suppress-ra` to remove the suppression of interface RA.

Router advertisements are sent by the VRRP master device and contain the link-local virtual IP address and the virtual MAC address. For network security reasons, if you do not want the MAC addresses of interfaces to be viewed, you can disable RA messages.

**Examples** The following example shows how to suppress interface RA for the virtual interface 2019.

```
switch(config)# rbridge-id 122
switch(config-rbridge-id-122)# ipv6 protocol vrrp
switch(config-rbridge-id-122)# interface ve 2019
switch(config-ve-2019)# ipv6 vrrp-suppress-ra
```

## iscsi-priority

Sets the iSCSI priority bitmap for use in the DCBX iSCSI TLV.

**Syntax** **iscsi-priority** *value*

**no iscsi-priority**

**Command Default** Priority bitmap value is 4.

**Parameters** *value*

The priority bitmap value. Valid values range from 0 through 7.

**Modes** Protocol LLDP configuration mode

**Usage Guidelines** Enter **no iscsi-priority** to return to the default value.



## isl-r\_rdy

Sets the flow control primitive used to prevent frame drop to ISL R\_RDY mode.

**Syntax** **isl-r\_rdy**

**no isl-r\_rdy**

**Command Default** **no isl-r\_rdy** or VC\_RDY flow control mode.

**Modes** Interface Fibre Channel configuration mode

**Usage Guidelines** ISL R\_RDY mode can be enabled only for a port configured for long distance operation with long distance modes LE, LD, or LS.

In ISL R\_RDY mode, the port sends the R\_RDY primitive signal that the port is ready to receive frames. The port sends an exchange link parameter (ELP) with flow control mode 02. If a port is ISL R\_RDY enabled, it can only receive an ELP with flow control mode 02. A received ELP with flow control mode 01 will segment the fabric.

Brocade recommends disabling ISL R\_RDY.

This command can be used only on Network OS platforms with Fibre Channel ports (Brocade VDX 6740 switches), in Brocade VCS Fabric mode, and with the FCoE license installed.

A Fibre Channel port configured as a trunk port cannot have the ISL R\_RDY flow control enabled.

Enter **no isl-r\_rdy** to disable ISL R\_RDY mode on a port, and instead establish VC\_RDY flow control.

**Examples** To enable ISL R\_RDY mode on a port:

```
switch(config)# interface FibreChannel 7/0/2
switch(conf-FibreChannel-7/0/2)# isl-r_rdy
```

To disable ISL R\_RDY mode on a port:

```
switch(config)# interface FibreChannel 7/0/2
switch(conf-FibreChannel-7/0/2)# no isl-r_rdy
```

**Related Commands** [fill-word](#), [interface](#), [show running-config interface FibreChannel](#), [shutdown](#), [speed \(Fibre Channel\)](#), [trunk-enable](#), [vc-link-init](#)

## keep-alive timeout (fabric-map)

Enables or disables the keep-alive timeout.

**Syntax**    **keep-alive timeout**

**no keep-alive timeout**

**Modes**    FCoE fabric-map configuration mode

**Usage Guidelines**    You must be in the feature configuration mode for FCoE fabric-map for this command to function.  
                          Enter **no keep-alive timeout** to disable the keep-alive timeout.

**Related  
Commands**    [fabric-map](#), [fcoe](#)

# key-add-remove-interval

Alters the timing of the authentication key add-remove interval.

**Syntax** **key-add-remove-interval** *interval*  
**no key-add-remove-interval** *interval*

**Command Default** The interval is 300 seconds.

**Parameters** *interval*  
 Specifies the add-remove interval in seconds. Valid values range from 0 through 14400. The default is 300.

**Modes** OSPFv3 VRF router configuration mode

**Usage Guidelines** Enter **no key-add-remove-interval** to set the add-remove interval to the default value of 300 seconds.

**Examples** To set the key add-remove interval to 240 seconds:

```
device# configure
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ipv6 router ospf
device(config-ipv6-router-ospf-vrf-default-vrf)# key-add-remove-interval 240
```

To set the key add-remove interval to 210 seconds in a nondefault VRF instance:

```
device# configure
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ipv6 router ospf vrf vrf_1
device(config-ipv6-router-ospf-vrf-vrf_1)# key-add-remove-interval 240
```

## History

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.1a          | This command was introduced. |

# key-rollover-interval

Alters the timing of the existing configuration changeover.

**Syntax** `key-rollover-interval interval`

`no key-rollover-interval interval`

**Command Default** The interval is 300 seconds.

**Parameters** *interval*

Specifies the key-rollover-interval in seconds. Valid values range from 0 through 14400. The default is 300.

**Modes** OSPFv3 VRF router configuration mode

**Usage Guidelines** Enter **no key-rollover-interval** to set the rollover interval to the default value of 300 seconds. In order to have consistent security parameters, rekeying should be done on all nodes at the same time. Use the **key-rollover-interval** command to facilitate this. The key rollover timer waits for a specified period of time before switching to the new set of keys. Use this command to ensure that all the nodes switch to the new set of keys at the same time.

**Examples** To set the key rollover interval to 420 seconds:

```
device# configure
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ipv6 router ospf
device(config-ipv6-router-ospf-vrf-default-vrf)# key-rollover-interval 420
```

To re-set the key rollover interval to the default value:

```
device# configure
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ipv6 router ospf
device(config-ipv6-router-ospf-vrf-default-vrf)# no key-rollover-interval
```

To re-set the key rollover interval to the default value in a nondefault VRF instance:

```
device# configure
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ipv6 router ospf vrf vrf_1
device(config-ipv6-router-ospf-vrf-vrf_1)# no key-rollover-interval
```

## History

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.1a          | This command was introduced. |

# I2traceroute

This command sends a simple traceroute from the source MAC address to the destination MAC address.

**Syntax** **I2traceroute**

**Modes** Privileged EXEC mode

**Usage Guidelines** This command does not support command-line parameters. You are prompted for the required information after you enter the **I2traceroute** command.

This command sends a plain Layer 2 traceroute, hop by hop, from the switch that learned the source MAC address to the switch that learned the destination MAC address. The IP parameters included in the **I2traceroute** command allow for generating frames with similar properties as the ones generated from a connected device, thus traversing the same path through the fabric.

Configuration results depend on the configuration parameters specified. The following fields display when you enter the **I2traceroute** command:

- Source MAC address—Enter the source MAC address. The MAC address must be a valid MAC address that exists in the mac-address-table.
- Destination MAC address—Enter the destination MAC address. The MAC address must be a valid MAC address that exists in the mac-address-table.
- Vlan—Enter the VLAN number. On the Brocade VDX family of switches, VLANs are treated as interfaces from a configuration point of view. By default, all the DCB ports are assigned to VLAN 1 (VLAN ID equals 1). Valid VLAN IDs are as follows:
  - On Brocade VDX 8770 switches: 1 through 4086 for 802.1Q VLANs (VLAN IDs 4087 through 4095 are reserved on these switches), and 4096 through 8191 for service or transport VFs in a Virtual Fabrics context.
  - On all other Brocade VDX switches: 1 through 3962 for 802.1Q VLANs (VLAN IDs 3963 through 4095 are reserved on these switches), and 4096 through 8191 for service or transport VFs in a Virtual Fabrics context.
- Edge rbridge-id—Enter the edge RBridge ID on which the **I2traceroute** command is to run.
- Extended commands—Enter **Y** to enable extended commands, which include protocol type (IP or FCoE), source IP address, destination IP address, IP protocol type (TCP or UDP), source port number, and destination port number.

Based on the input for Extended commands, if you enter **Y**, the parameters branch as follows:

- Protocol Type [IP]—Enter the protocol type. You must select the IP including.
  - Source IP address—Enter the source IP address.
  - Destination IP address—Enter the destination IP address.
- IP Protocol Type [ **TCP** | **UDP** | **0-255** ]—Enter the IP protocol type including:
  - TCP (Transmission Control Protocol) is a connection-oriented protocol, which means that it requires handshaking to set up end-to-end communications.
  - UDP (User Datagram Protocol) is a message-based connectionless protocol. Communication occurs by transmitting information in one direction, from the source to the destination, without verifying the readiness of the receiver.
  - 0-255 is the numeric protocol value. to use as filter.
- The source port number. The valid port range is 0 through 65535. This is an optional field.
- The destination port number. The valid port range is 0 through 65535. This is an optional field.

**Examples** This example shows extended commands, IP protocol type, and TCP as the IP protocol type.

```

switch# l2traceroute
Source mac address           : 0050.564f.549f
Destination mac address     : 0005.1ea0.8dd8
Vlan [1-3583]               : 1
Edge rbridge-id [1-239]    : 1
Extended commands [Y/N]?   : Y
Protocol Type [IP/FCoE]    : IP
Source IP address           : 192.85.1.2
Destination IP address      : 192.0.2.2
IP Protocol Type [TCP/UDP/0-255] : TCP
Source port number [0-65535] : 58
Dest port number [0-65535]  : 67
switch# l2traceroute

Source mac address           : 0000.0000.1111
Destination mac address     : 0000.0000.2222
Vlan [1-3583]               : 1
Edge rbridge-id [1-239]    : 50
Extended commands [Y/N]?   : n
Rbridge      Ingress      Egress      Rtt (usec)
-----
50           Te 50/0/15          Te 50/0/38(isl)  0
40           Te 40/0/38(isl)      Te 40/0/2(isl)  60322
10           Te 10/0/2(isl)         Te 10/0/4(isl)  1274
20           Te 20/0/4(isl)         Te 20/0/10(isl) 1119
30           Te 30/0/10(isl)      Te 30/0/19          1787

```

# lACP default-up

Activates an LACP link in the absence of PDUs.

**Syntax** **lACP default-up**

**no lACP default-up**

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command forces the port to activate an LACP link if there are no PDUs available on the interface port.

This command is supported on all physical interfaces.

This command is visible only if the interface is a dynamic and standard member of a port-channel.

This command is not supported on Static LAGs.

This command is not supported on static or dynamic Brocade Trunks.

This command is not supported on any other types of interfaces, such as port-channel or VLAN.

Enter **no lACP default-up** to disable this feature.

**Examples**

```
switch# (conf-if-te-1/0/9)# lACP default-up
```

## lACP port-priority

Sets the priority of the physical interface for LACP.

**Syntax** `lACP port-priority value`

`no lACP port-priority`

**Command Default** The default value is 32768.

**Parameters** *value*

Specifies the priority. Valid values range from 1 through 65535. A lower number takes priority over a higher number.

**Modes** Interface subtype configuration mode.

**Usage Guidelines** An LACP port priority is configured on each port using LACP. The port priority determines which ports should be put in standby mode when there is a hardware limitation that prevents all compatible ports from aggregating.

A link with higher priority (smaller in value) gets preference over a link with lower priority (greater in value).

Enter `no lACP port-priority` to return to the default value.

**Examples** To set the LACP port priority to 1000 for a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# lACP port-priority 1000
```

**Related Commands** [interface](#)



## lACP system-priority

Sets the Link Aggregation Control Protocol (LACP) system priority. The LACP priority determines which system is responsible for resolving conflicts in the choice of aggregation groups.

**Syntax** **lACP system-priority** *value*

**no lACP system-priority**

**Command Default** The default value is 32768.

**Parameters** **value**

Specifies the value of the LACP system priority. Valid values range from 1 through 65535.

**Modes** Global configuration mode

**Usage Guidelines** Lower numerical values have higher priorities.

Enter **no lACP system-priority** to reset the system priority to the default value.

**Examples** To set the LACP system-priority to 68:

```
switch(config)# lACP system-priority 68
```

To clear the configured LACP system-priority:

```
switch(config)# no lACP system-priority
```

## lACP timeout

Sets the timeout value used by the Link Aggregation Control Protocol (LACP) to exchange packets on an interface before invalidating a received data unit (DU).

**Syntax** `lACP timeout { long | short }`

`no lACP timeout`

**Command Default** For Brocade trunks, the default value is the **short** timeout.  
For standard LAGs, the default value is the **long** timeout.

**Parameters** **long**

Specifies that a long-timeout value of 30 seconds will be used. With this value, the port waits three times this long (90 seconds) before invalidating the information received earlier on this PDU.

**short**

Specifies that a short-timeout value of one second will be used. With this value, the port waits three times this long (three seconds) before invalidating the information received earlier on this PDU.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use this command to set the timeout value based on how frequently you think the switch will receive LACP PDUs from the partner switch.  
Enter **no lACP timeout** to return to the default values.

**Examples** To use the LACP long-timeout value on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# lACP timeout long
```

**Related Commands** [interface](#)

# ldap-server host

Configures an LDAP-server host.

**Syntax** **ldap-server host** { *ipaddr* | *FQDN* } [ **port** *portnum* ] [ **domain** *basedn* ] [ **timeout** *secs* ] [ **retries** *num* ]

**no ldap-server host** { *ipaddr* | *FQDN* }

**Command Default**

- Timeout: 5 seconds
- Port: 389
- Retries: 5

**Parameters** ***ipaddr* | *FQDN***

Specifies the IPv4 address or Fully Qualified Domain name of the Active Directory (AD) server. IPv6 is supported for Windows 2008 AD server only. The maximum supported length for the LDAP host name is 40 characters.

**port** ***portnum***

Specifies the TCP port used to connect the AD server for authentication. The port range is from 1024 through 65535.

**domain** ***basedn***

Describes the base domain name of the host.

**timeout** ***secs***

Specifies the wait time for a server to respond. The range is 1 through 60 seconds.

**retries** ***num***

Specifies the number of retries for the server connection. The range is 0 through 100.

**Modes** Global configuration mode

**Usage Guidelines** Use this command to sets up a connection to the Lightweight Directory Access Protocol (LDAP) server host, or modifies an existing configuration. A maximum of 5 LDAP servers can be configured on a switch. Executing "no" on an attribute sets it with its default value.

Enter **no ldap-server host** to delete the server configuration.

Enter **no ldap-server host** with a parameter to restore the default value for that parameter.

Invoking **no** on an attribute sets the attribute with its default value.

**Examples** To add an LDAP server on port 3890 with retries set to three:

```
switch(config)# ldap-server host 10.24.65.6 domain sec.brocade.com port 3890 retries 3
```

To change the domain in an existing configuration:

```
switch(config)# ldap-server host 10.24.65.6
switch(config-host-10.24.65.6)# domain security.brocade.com
```

To delete an LDAP server:

```
switch(config)# no ldap-server host 10.24.65.6
```

To reset the number of retries to the default value:

```
switch(config)# ldap-server host 10.24.65.6 retries
```

Executing **no** on an attribute sets it with its default value.

```
switch(config)# no ldap-server host 10.24.65.6 retries
```

Attributes holding default values will not be displayed.

```
switch# show running-config ldap-server host 10.24.65.6
```

```
ldap-server host 10.24.65.6
  port          3890
  domain        security.brocade.com
```

**Related  
Commands**

[certutil import ldapca](#), [ldap-server maprole](#), [show running-config ldap-server](#)

# ldap-server maprole

Maps an Active Directory (AD) group to a switch role.

**Syntax** `ldap-server maprole group group_name role role_name`

`no ldap-server maprole group group_name`

**Parameters** `group group_name`

The name of the AD group.

`role role_name`

The name of the switch role.

**Modes** Global configuration mode

**Usage Guidelines** Enter `no ldap-server maprole group group_name` without the `role role_name` parameter to remove the mapping of the AD group to a role.

**Examples** To map the AD group "Administrator" to the switch role "admin":

```
switch(config)# ldap-server maprole group Administrator role admin
```

To remove the mapping:

```
switch(config)# no ldap-server maprole group Administrator
```

**Related Commands** [certutil import ldapca](#), [ldap-server host](#), [show running-config ldap-server](#)

# license add

Adds a license key to a switch.

**Syntax** `license add { licstr licenseString | FTP-URL ftpPath | SCP-URL scpPath } [ rbridge-id rbridge-id ]`

**Command Default** This command is executed on the local switch.

**Parameters** **licstr *licenseString***

Specifies the license string to be added to the switch. The license string must be enclosed in double quotation marks. A maximum of 256 characters is allowed.

**FTP-URL *ftpPath***

Specifies a URL from which to transfer license information using FTP. `ftp://username:password@hostname filepath`

**SCP-URL *scpPath***

Specifies a URL from which to transfer license information using SCP. `scp://username:password@hostname/ filepath`

**rbridge-id *rbridge-id***

Executes the command on the remote switch specified by the RBridge ID.

**Modes** Privileged EXEC mode

**Usage Guidelines** Depending on the feature being added, you may need to disable and re-enable the affected ports for this command to take effect. Follow the instructions in the command output.

If you install a license on an unsupported platform, the operation succeeds, but the **show license** output indicates that the license is not supported.

In the Network OS v3.0.0 release, this command is supported only on the local RBridge.

**Examples** To add a license on the local switch:

```
switch# license add licstr "*B
r84pNRtHKdRZujmwAUT63GORXIpBhBZK0ckRq6Bvv13Strvw1:fUjANF
av5W:gWx3hH2:9RsMv3BHfeCRFM2gj9NlkrdIiBPBOa4xfSD2jf,Xx1RwksliX8fH6gpx7,73t#"
```

```
Adding license [*B r84pNRtHKdRZujmwAUT63GORXIpBhBZK0ckRq6Bvv13Strvw1:fUjANF
av5W:gWx3hH2:9RsMv3BHfeCRFM2gSLj9NlkrdIiBPBOa4xfSD2jf,Xx1RwksliX8fH6gpx7,73t#]
```

To add a Dynamic Ports on Demand (DPOD) license on a switch that does not support the feature:

```
switch# license add licstr "*B
a6q3zwcUaNkWHPOfVf8afFZqHYype6sQxaEr5HIeFD3nba74i43BnRt6T8b2sDPtVMKuMfUPwV8NvHDXxFgbB3
f2w3pJNlujxLVdIVkXdoNHf6i4SzwuvimIj0ORN:JOojLU#"
```

```
License Added [*B
a6q3zwcUaNkWHPOfVf8afFZqHYype6sQxaEr5HIeFD3nba74i43BnRt6T8b2sDPtVMKuMfUPwV8NvHDXxFgbB3
f2w3pJNlujxLVdIVkXdoNHf6i4SzwuvimIj0ORN:JOojLU#]
switch# show license
```

```
xx
Ports on Demand license - not applicable on this platform license
Feature name:PORTS_ON_DEMAND_1
License is valid
xx
```

**Related Commands** [license remove](#), [show license](#), [show license id](#)

# license remove

Removes a license key from a switch or deactivates a temporary license that cannot be removed..

**Syntax** `license remove licstr { licenseString | feature } [ rbridge-id ID ]`

**Command Default** This command is executed on the local switch.

**Parameters** `licstr licenseString`

Removes the specified license string and associated feature. The license string must be enclosed in double quotation marks.

`licstr feature`

Removes the license string associated with the specified feature from the license database of the local switch. The feature name must be enclosed in double quotation marks. Supported licensed features include the following: FCOE\_BASE, PORTS\_ON\_DEMAND\_1, PORTS\_ON\_DEMAND\_2, VCS\_FABRIC, ADVANCED\_SERVICES, LAYER\_3, PORT\_10G\_UPGRADE and PORT\_0G\_UPGRADE.

`rbridge-id ID`

Executes the command on the remote switch specified by the RBridge ID.

**Modes** Privileged EXEC mode

**Usage Guidelines** You cannot display the license string once you install it. If you do not remember the string, use the feature name displayed in the **show license** command output to remove the license.

Depending on the feature being removed you must first clear all license-related configurations, and possibly disable and re-enable selected ports for this command to take effect. Follow the instructions in the command output.

This command deactivates but does not permanently remove time-based trial licenses.

You must disable or remove all configurations related to a licensed feature before you can remove the license for that feature. To remove the 10G and 40G Port Upgrade licenses, you must remove all non-Base-allowance port reservations for the respective license type.

In the Network OS v3.0.0 release this command is supported only on the local RBridge.

**Examples** To remove a license string from the local switch:

```
switch# license remove licstr "*B
r84pNRtHKdRZujmwAUT63GORXIpBhBZK0ckRq6Bvvl3Strvw1:fUjANF
av5W:gWx3hH2:9RsMv3BHfeCRFM2gSLj9NlkrdIiBPBOa4xfSD2jF,Xx1RwksliX8fH6gpx7,73t#
```

```
Removing license for rbridge-id 2 [*B
r84pNRtHKdRZujmwAUT63GORXIpBhBZK0ckRq6Bvvl3Strvw1:fUjANF
av5W:gWx3hH2:9RsMv3BHfeCRFM2gSLj9NlkrdIiBPBOa4xfSD2jF,Xx1RwksliX8fH6gpx7,73t#]
```

To remove a license based on the feature name from the local switch:

```
switch# license remove licstr "FCOE_BASE"
removing license feature name [FCOE_BASE]
```

**Related Commands** [license add](#), [show license](#), [show license id](#)

## line vty exec-timeout

Sets the CLI session timeout.

**Syntax** `line vty exec-timeout timeout`

`no line vty exec-timeout`

**Command Default** The default timeout value is 10 minutes.

**Parameters** *timeout*

Specifies the CLI session timeout period in minutes. The timeout value specifies the amount of time a CLI session can be idle before it logs you out. Valid values range from 0 through 136.

**Modes** Global configuration mode

**Usage Guidelines** The `line vty exec timeout` command is a configuration command and the timeout value set by this command holds for subsequent login sessions, unless it is overwritten for a single session with the `terminal timeout` command. The terminal timeout command is not a configuration command and the timeout value set by this command controls only the current session. After the current session times out, the `line vty exec timeout` value applies for subsequent sessions.

This command is supported only on the local switch.

This command is not available on the standby management module.

Enter `no line vty exec-timeout` to disable auto-logout and delete the timeout value.

**Examples** To set the terminal timeout to 60 minutes:

```
switch(config)# line vty exec-timeout 60
switch(config-line-vty)# exit
switch(config)# exit
switch# show running-config line vty

line vty
exec-timeout 60
!
```

**Related Commands** [terminal](#)



# linecard

Configures a line card (interface module).

**Syntax** `linecard slot_number linecard_type`

`no linecard slot_number`

**Parameters** `slot_number`

Specifies the slot number to be configured. Line card slots are slots 1 through 4 on a Brocade VDX 8770-4 and slots 1 through 8 on a Brocade VDX 8770-8.

`linecard_type`

Specifies the type of line card. Enter `linecard slot_number linecard_type ?` to display currently supported types.

**Modes** Global configuration mode

RBridge ID configuration mode

**Usage Guidelines** Use this command to configure the specified slot for an line card of a given type.

The command is executed in the context of the given RBridge. You must first enter the rbridge-id context for the specific line card. Once you are in the rbridge-id context, enter `linecard slot_number linecard_type` to configure the slot. If you replace a given line card with another one of a different type, you must remove the configuration and then reconfigure the slot.

The line card must be powered off before you can remove the slot configuration.

The LC72x1G type displayed under "possible completion" is not supported.



## CAUTION

**Enter no linecard to remove the slot configuration. When hot-swapping line cards of different types, copy the running-config file to the startup-config file before rebooting. This ensures that the desired changes are persistent in case there are any hardware or software incompatibilities.**

**Examples** To configure a slot for an line card on a switch in VCS mode and to verify the configuration:

```
switch# configure
Entering configuration mode terminal
switch(config)# rbridge-id 1
switch(config-rbridge-id-1)# linecard 1 ?
Possible completions:
  LC12x40G  12X40G linecard
  LC48x1G   48X1G linecard
  LC48x10G  48X10G linecard
  LC72x1G   72X1G linecard
switch(config-rbridge-id-1)# linecard 1 LC48x10G
Creating new linecard configuration was successful.
switch(config-rbridge-id-1)# do show running-config rbridge-id 1 linecard
rbridge-id 1
  linecard 1 LC48x10G
  linecard 4 LC48x10G
```

**Related  
Commands**    [show running-config rbridge-id linecard](#)

# lldp dcbx-version

Specifies which version of the Data Center Bridging Exchange (DCBX) protocol to use.

**Syntax** `lldp dcbx-version { auto | cee }`

`no lldp dcbx-version`

**Command Default** The default setting is **auto**.

**Parameters** **auto**

Specifies to auto-adjust the DCBX protocol version to accommodate the difference when a switch interacts with different vendors using a different version of the DCBX protocol.

**cee**

Specifies to use the Converged Enhanced Ethernet (CEE) DCBX version.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Devices enabled for data center bridging can use the DCBX protocol to discover and exchange information about their administratively configured capabilities. DCBX eliminates the need to configure a large number of switches in the network.

Enter **no lldp dcbx-version** to return to the default setting.

**Examples** To specify that the CEE version be used on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# lldp dcbx-version cee
```

**Related Commands** [interface](#), [lldp disable](#), [lldp iscsi-priority](#), [lldp profile](#)

## Ildp disable

Disables the Link Layer Discovery Protocol (LLDP) on the interface.

**Syntax** **lldp disable**

**no lldp disable**

**Command Default** LLDP is enabled at both the global and interface levels.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no lldp disable** to enable LLDP on a specific interface.

**Examples** To disable LLDP on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# lldp disable
```

To enable LLDP on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 1/3/1
switch(conf-if-fo-1/3/1)# no lldp disable
```

**Related Commands** [interface](#), [lldp dcbx-version](#), [lldp iscsi-priority](#), [lldp profile](#)

## lldp iscsi-priority

Sets the priority that will be advertised in the DCBX iSCSI TLV for a specified interface.

**Syntax** `lldp iscsi-priority value`

`no lldp iscsi-priority`

**Command Default** Priority value is 4.

**Parameters** *value*

Specifies the priority value. Valid values range from 0 through 7.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no lldp iscsi-priority` to return to the default setting.

**Examples** To set the iSCSI priority value to 5 on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# lldp iscsi-priority 5
```

**Related Commands** [interface](#), [lldp dcbx-version](#), [lldp disable](#), [lldp profile](#)

## Ildp profile

Applies a Link Layer Discovery Protocol (LLDP) profile to an interface.

**Syntax** **lldp profile** *name*

**no lldp profile**

**Command Default** LLDP profile name.

**Parameters** *name*

Specifies the profile name. Valid profile name length is between 1 and 32 characters.

**Modes** Interface subtype configuration mode

**Usage Guidelines** You must use the **lldp profile** command to create an LLDP profile before you can apply the profile to the interface. Only one LLDP profile can exist at any time for a particular interface. When this command is not present, the parameters defined in the global LLDP configuration are used.

Enter **no lldp profile** to delete the profile from the interface.

**Examples** To apply an LLDP profile called *test* on an specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# lldp profile test
```

**Related Commands** [interface](#), [lldp dcbx-version](#), [lldp disable](#), [lldp iscsi-priority](#)

# load-balance

Configures load balancing settings.

**Syntax** `load-balance [ dst-mac-vid | src-dst-ip | src-dst-ip-mac-vid | src-dst-ip-mac-vid-port | src-dst-ip-port | src-dst-mac-vid | src-mac-vid ]`

`no load-balance`

**Command Default** The default setting is the operand *src-dst-ip-mac-vid-port*, which means that source and destination IP, MAC address, VID and TCP/UDP port-based load balancing are used.

**Parameters** **dst-mac-vid**

Specifies that destination MAC address and VID-based load balancing will be used.

**src-dst-ip**

Specifies that source and destination IP address-based load balancing will be used.

**src-dst-ip-mac-vid**

Specifies that source and destination IP and MAC address and VID-based load balancing will be used.

**src-dst-ip-mac-vid-port**

Specifies that source and destination IP, MAC address, VID and TCP/UDP port-based load balancing will be used. This is the default.

**src-dst-ip-port**

Specifies that source and destination IP and TCP/UDP port-based load balancing will be used.

**src-dst-mac-vid**

Specifies that source and destination MAC address and VID-based load balancing will be used.

**src-mac-vid**

Specifies that source MAC address and VID-based load balancing will be used.

**Modes** Port-channel configuration mode

**Usage Guidelines** Use the **no** form of this command to return to the default setting.

When configuring load balancing on a Brocade VDX 6740, it should be configured consistently for all port-channels on the switch. These switches support one load-balancing scheme at a time, and apply the last loaded load-balancing scheme to all port-channels on the switch. This is not required for the Brocade VDX 8770 platform, as it supports multiple port-channel load-balancing schemes.

**Examples** To set load balancing to use the destination MAC address and VID-based load balancing:

```
switch# configure
switch(config)# interface port-channel 10
switch(config-Port-channel-10)# load balance dst-mac-vid
```

# load-balancing

Configures load balancing.

**Syntax** `load-balancing threshold-priority threshold-priority-value`

`no load-balancing`

**Command Default** None

**Parameters** `threshold-priority threshold-priority-value`

The load balancing threshold priority. The range is from 1 through 254.

**Modes** Fabric-Virtual-Gateway on an RBridge VE interface IPv4 or IPv6 configuration mode

**Usage Guidelines** Enter the **no** form of the command to remove the threshold priority value.

**Examples** The following example shows how to configure load balancing.

```
switch(config)# rbridge-id 1
switch(config-rbridge-id-1)# interface ve 2000
switch(config-rbridge-Ve-2000)# ip fabric-virtual-gateway 23
switch(config-ip-fabric-virtual-gw)# load-balancing threshold-priority 100
```

## History

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.1           | This command was introduced. |



# load-balancing-disable

Disables load balancing.

**Syntax**    **load-balancing-disable**  
**no load-balancing-disable**

**Command Default**    Load balancing is enabled.

**Modes**    Fabric-Virtual-Gateway in VE interface IPv4 or IPv6 configuration mode

**Usage Guidelines**    Enter the **no** form of the command to re-enable load balancing.

**Examples**    The following example shows how to disable load balancing.

```
switch(config)# interface ve 2000
switch(config-Ve-2000)# ip fabric-virtual-gateway
switch(config-ip-fabric-virtual-gw)# load-balancing-disable
```

## History

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.1           | This command was introduced. |

## local-as (BGP)

Specifies the autonomous system number (ASN) where the device resides.

**Syntax** `local-as num`

`no local-as`

**Parameters** *num*

The local ASN. The range is from 1 through 4294967295.

**Modes** BGP configuration mode

**Usage Guidelines** The ASN for associates a given device it with other devices in its autonomous system.

ASNs in the range from 64512 through 65535 are private numbers that are not advertised to the external community.

Use the **no** form of this command to remove the ASN from the device.

**Examples**

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router bgp
switch(config-bgp-router)# local-as 777
```

# log-dampening-debug

Logs dampening debug messages.

**Syntax** **log-dampening-debug**

**no log-dampening-debug**

**Command Default** This option is disabled.

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of this command to restore the default.

**Examples**

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router bgp
switch(config-bgp-router)# log-dampening-debug
```

## log-status-change

Controls the generation of all OSPFv3 logs.

- Syntax** **log-status-change**
- no log-status-change**
- Modes** OSPFv3 VRF router configuration mode
- Usage Guidelines** Use this command to disable or re-enable the logging of events related to OSPFv3, such as neighbor state changes and database overflow conditions.
- Use the **no** form of this command to restore the default.

**Examples** To disable the logging of events:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ipv6 router ospf
device(config-ipv6-router-ospf-vrf-default-vrf)# no log-status-change
```

To enable the logging of events:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ipv6 router ospf
device(config-ipv6-router-ospf-vrf-default-vrf)# log-status-change
```

### History

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

## logging auditlog class

Sets the severity levels (class) for the audit log class.

**Syntax**    **logging auditlog class** *class*

**no logging auditlog class** *class*

**Command Default**    CONFIGURATION, FIRMWARE, and SECURITY audit log classes are enabled.

**Parameters**    **class**

Specifies the class name of the audit log. Valid classes are CONFIGURATION, FIRMWARE, and SECURITY.

**Modes**    Global configuration mode

**Usage Guidelines**    This command is supported only on the local switch.

This command is not supported on the standby management module.

The total message storage available is 2048 messages.

Enter **no logging auditlog class** *class* to remove the audit logging for the specified class.

**Related Commands**    [clear logging auditlog](#), [clear logging raslog](#)

## logging raslog console

Sets the severity levels for the RASLog console and allows users to temporarily stop showing RASLog messages on the console.

**Syntax** `logging raslog console severity`

`no logging raslog console severity`

`logging raslog console stop [ minutes ]`

**Command Default** Severity level is INFO.

**Parameters** **severity**

Specifies the minimum severity level of the message to pass through the filter. Valid values consist of one of the following: INFO, WARNING, ERROR, or CRITICAL. Input values are case-sensitive.

**start**

Initiates RASLog messages.

**stop**

Stops RASLog messages.

**Modes** Global configuration mode

**Usage Guidelines** This command is supported only on the local switch.

This command is not supported on the standby management module.

The total message storage available is 2048 messages.

When stopping or starting RASLog messages, the commands are not persistent and therefore are not configuration commands.

If the command `logging raslog console stop minutes` is invoked before the previous time value expires, the latest CLI duration applies.

**Examples** To reset the RASLog severity levels to the default value.

```
switch(config)# no logging raslog console
```

To stop RASLog messages for 1 minute:

```
switch# logging raslog console stop 1
Logging message have been blocked on console for 1 minutes
```

To start RASLog messages:

```
switch# logging raslog console start
```

```
2013/11/14-08:42:57, [RAS-3008], 5348, M2 | Active, INFO, VDX8770-4, Logging messages
to console has been reset by user.
```

**Related Commands** [clear logging raslog](#), [show running-config logging](#)

# logging syslog-facility local

Configures the syslog facility.

**Syntax** `logging syslog-facility local log_level`

**Command Default** Syslog level is LOG\_LOCAL7.

**Parameters** *log\_level*

Specifies the syslog facility level. Valid log levels include the following:  
LOG\_LOCAL0, LOG\_LOCAL1, LOG\_LOCAL2, LOG\_LOCAL3, LOG\_LOCAL4,  
LOG\_LOCAL5, LOG\_LOCAL6, LOG\_LOCAL7

**Modes** Global configuration mode

**Usage Guidelines** Use this command to configure the log level for all error log entries to forward to one or more specified servers. You can configure up to four servers.

When used without a log level parameter, use this command to display the current value.

This command is supported only on the local switch.

This command is not supported on the standby management module.

**Examples** To configure the syslog facility level:

```
switch(config)# logging syslog-facility local LOG_LOCAL5
```

**Related Commands** [logging syslog-server](#), [show running-config logging syslog-server](#)

## logging syslog-server

Configures a switch to forward system messages to specified servers.

**Syntax** `logging syslog-server ip_address [ secure { true | false } ] [ port [ value ] ]`

`no logging syslog-server ip_address`

**Command Default** If the secure parameter is set to **true** and the port number is not specified, the default port number of 6514 is used.

The default value for the secure parameter is **false**.

**Parameters** *ip\_address*

Specifies the IP address of the syslog server in IPv4 or IPv6 format.

**secure{true|false}**

} Configures a secure syslog server. A secure port number with default values is not shown in the Brocade Network OS database.

**portvalue**

Configures the port for the syslog server.

**Modes** Global configuration mode

**Usage Guidelines** Use this command to configure a switch to forward all error log entries to the one or more specified servers. You can configure up to four servers.

The **certutil import syslogca** command is required for secure syslog to be fully functional. You can configure up to four syslog servers. You must execute the command for each server.

This command is not supported on the standby management module.

In a Brocade VCS Fabric, the syslog configuration is distributed to all switches in the fabric.

If the secure parameter is set to **false**, you are not able to set the port number.

Enter **no logging syslog-server** to remove the specified IP address.

**Examples** To configure a server to which system messages are sent:

```
switch(config)# logging syslog-server 192.168.163.233
```

To remove a configured syslog server:

```
switch(config)# no logging syslog-server 192.168.163.233
```

To remove a syslog server port:

```
switch(config)# no logging syslog-server 10.17.17.203 secure port 1999
switch(config)# do show running-config logging syslog-server
logging syslog-server 10.17.17.203
secure
```

**Related Commands** [certutil import syslogca](#), [logging syslog-facility local](#), [show running-config logging syslog-facility](#), [show running-config logging syslog-server](#)



# logical-chassis principal-priority

Sets the priority of a switch to assign a specific RBridge ID the role of principal node in a logical chassis cluster.

**Syntax** `logical-chassis principal-priority priority-value`

`no logical-chassis principal-priority`

**Parameters** *priority-value*

Sets the priority for the switch. A lower number means a higher priority. Values range from 1 through 128.

**Modes** RBridge ID configuration mode

**Usage Guidelines** If all switches boot up at the same time, the default priority is the same and all switches will compare their mutual intents. The switch with the lowest switch WWN becomes the principal switch. However, you can use this command to select the principal switch in a logical chassis cluster. For this command to take effect, you need to issue the **logical-chassis principal-switchover** command.

This command can be used only on nodes that are part of a logical chassis cluster. The node, however, can be disconnected from the cluster when you issue the command.

Use the **no** form of this command to remove a priority value from this node.

You can view the principal priority in both the **show running config** (using the **rbridge-id** operand) and **show vcs detail** command outputs (both are run in Privileged EXEC mode).

**Examples** To set the principal priority to 5 for switch that is in logical chassis cluster:

```
switch# configure
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)# logical-chassis principal-priority 5
```

**Related Commands** [logical-chassis principal-switchover](#)

## logical-chassis principal-switchover

Triggers a fabric reformation and elects a principal node based on the principal priority value.

- Syntax** **logical-chassis principal-switchover**
- Modes** Privileged EXEC mode
- Usage Guidelines** Issue this command after you have used the **logical-chassis principal-priority** *priority-value* command so that the priority you set takes effect and a new principal node is selected on the cluster.
- Examples**
- ```
switch# configure
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)# logical-chassis principal-priority 1
switch(config-rbridge-id-5)# end
switch# logical-chassis principal-switchover
```
- Related Commands** [logical-chassis principal-priority](#)

# long-distance-isl

Extends an ISL link up to 30 km.

**Syntax** `long-distance-isl { 2000 | 5000 | 10000 | 30000 }`

`no long-distance-isl`

**Command Default** The default is 2 km.

**Parameters** **2000**

Specifies a 2 km distant link.

**5000**

Specifies a 5 km distant link.

**10000**

Specifies a 10 km distant link.

**30000**

Specifies a 30 km distant link. DCB/FCoE capabilities are not supported with this setting.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Metro VCS supports long-distance ISL ports up to 30 km on the Brocade VDX platforms listed below. Links up to 10 km are lossless. You can have eight 1-km links forming a Brocade trunk. You can also have mixed length cables forming the ISL. For ECMP purposes, you can have eight 8-link ECMP trunks.

**TABLE 6** Limitations for long-distance Metro VCS

Supported hardware	Extended ISL up to 2 km	Extended ISL up to 5 km	Extended ISL up to 10 km	Extended ISL up to 30 km
Brocade VDX 6740	yes	yes	yes	yes
Brocade VDX 8770 - VDX LC48x10G line card	yes	yes	yes	yes

The following displays the limitations on extended ISL for Network OS hardware.

**TABLE 7** Conditions for long distance Metro VCS

Condition	Extended ISL up to 2 km	Extended ISL up to 5 km	Extended ISL up to 10 km	Extended ISL up to 30 km
Support for lossless FCoE/iSCSI traffic on the Metro VCS port-group	yes	yes	yes	no
Layer 2/IP Lossy Traffic support	yes	yes	yes	yes

**TABLE 7** Conditions for long distance Metro VCS (Continued)

Condition	Extended ISL up to 2 km	Extended ISL up to 5 km	Extended ISL up to 10 km	Extended ISL up to 30 km
Number of Metro VCS long distance ports supported per port group	1	1	1	1
Number of regular ISLs supported on a port group configured for long distance	1	1	0	0
Trunking support between multiple LD ISLs	no	no	no	no
CEE map or FCoE port allowed in same port-group	no	no	no	no
eNS Sync (MAC address table sync)	yes	yes	yes	yes
Zoning	yes	yes	yes	yes
HA failover	yes	yes	yes	yes
Node redundancy check	yes	yes	yes	yes
vMotion	yes	yes	yes	yes
Maximum PFCs Supported	3 (2 on the Brocade VDX 6740)	3(2 on the Brocade VDX 6740)	3 (2 on the Brocade VDX 6740)	3 (2 on the Brocade VDX 6740)
Long-distance ISL on 40G to 4x10G breakout interfaces	no	no	no	no
Long-distance ISL on 1G and 10G copper interfaces	no	no	no	no

The following displays the port groups and number of port groups available on each platform for long distance Metro VCS.

**TABLE 8** Long distance Metro VCS port-group schema

Platform	Port groups	Number of port groups on platform
Brocade VDX 6740	1-32, 33-48 (49-50 do not support long distance)	2*
Brocade VDX 8770 (VDX LC48x10G linecard)	1-8, 9-16, 17-24, 25-32, 33-40, 41-48	6 per LCX10G blade

\*Not a valid deployment scenario at distances longer than 5 km, as no normal ISLs are allowed if both port-groups are configured with long-distance ISLs for 10 km and 30 km. For a 10 km ISL link, no other ISL links are allowed on the same ASIC.

For 2 km and 5 km ISL links, another short distance ISL link can be configured.

A maximum of three PFCs can be supported on a long distance ISL link.

Enter **no long-distance-isl** to revert to the default value.

**Examples** To extend the support of an ISL port with PFC by a distance of 5 km on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# long-distance-isl 5000
```

**Related  
Commands** [interface, isl-r\\_rdy](#)

## mac

Allows the user to add a MAC address to a MAC address group in a service or transport VF configuration supporting multitenancy in a Virtual Fabrics context.

<b>Syntax</b>	<b>mac</b> <i>mac_address</i>
	<b>no mac</b> <i>mac_address</i>
<b>Parameters</b>	<b>mac_address</b> Specifies a MAC address in dot-separated hexadecimal notation.
<b>Modes</b>	MAC group configuration mode
<b>Usage Guidelines</b>	Use this command in MAC group configuration mode to add a MAC address to a MAC address group in a service or transport VF configuration supporting multitenancy in a Virtual Fabrics context.  Enter the MAC group configuration mode by using the <b>mac group</b> <i>mac-group-id</i> global configuration command.  Enter <b>no mac</b> <i>mac_address</i> to remove a MAC addresses from the group.

---

### NOTE

You can add or remove only one MAC address per line.

---

**Examples** To enter MAC group configuration mode and add a MAC address to the group:

```
switch(config)# mac-group 1
switch(config-mac-group 1)# mac abc1.abc2.abc3
```

To remove a MAC address from the group:

```
switch(config-mac-group 1)# no mac abc1.abc2.abc3
```

**Related Commands** [mac-group](#), [vcs virtual-fabric enable](#)

## mac access-group

Applies rules specified in a MAC access control list (ACL) to traffic entering or exiting an interface.

**Syntax** `mac access-group ACLname { in | out }`

`no mac access-group ACLname { in | out }`

**Parameters** *ACLname*

Specifies the name of the standard or extended MAC access list.

**in**

Specifies to filter inbound packets only.

**out**

Specifies to filter outbound packets only.

**Modes** Interface-subtype configuration mode

**Usage Guidelines** You can apply a maximum of two Layer 2 ACLs to a user interface, as follows:

- One ingress MAC ACL
- One egress MAC ACL

---

### NOTE

You can apply an ACL to multiple interfaces. And you can apply an extended ACL twice—ingress and egress—to a given user interface.

---

To remove a MAC ACL from an interface, enter the **no** form of this command.

**Examples** The following example applies an ingress MAC ACL named macacl2, and to filter inbound packets only, on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# mac access-group macacl2 in
```

The following example removes an ingress MAC ACL named macacl2 from a specific port-channel interface:

```
switch(config)# interface port-channel 62
switch(conf-port-channel-62)# no mac access-group macacl2 in
```

**Related Commands** [interface](#), [mac access-list extended](#), [mac access-list standard](#)

## mac access-list extended

Creates an extended MAC access control list (ACL). An extended ACL contains rules that permit or deny traffic according to source and destination addresses, as well as other parameters.

<b>Syntax</b>	<p><b>mac access-list extended</b> <i>ACLname</i></p> <p><b>no mac access-list extended</b> <i>ACLname</i></p>
<b>Parameters</b>	<p><b><i>ACLname</i></b></p> <p>Specifies a unique ACL name. The name can be up to 63 characters in length, and must begin with an alphanumeric character. No special characters are allowed, except for the underscore and hyphen.</p>
<b>Modes</b>	Global configuration mode
<b>Usage Guidelines</b>	<p>Use this command to create an extended MAC access list. If the ACL is already created, this command puts the switch in the extended MAC access-list configuration mode.</p> <p>Extended ACLs allow you to filter traffic based on the following:</p> <ul style="list-style-type: none"> <li>• Source MAC address</li> <li>• Destination MAC address</li> <li>• EtherType</li> </ul> <p>You can apply named MAC extended ACLs to VLANs and to Layer 2 interfaces.</p> <p>Standard and extended MAC ACLs cannot share the same name.</p> <p>To remove a MAC ACL from an interface, enter the <b>no</b> form of this command.</p>
<b>Examples</b>	<p>The following example creates a MAC extended ACL named mac1:</p> <pre>switch(config)# mac access-list extended mac1 switch(conf-macl-ext)#</pre> <p>The following example deletes a MAC extended ACL named mac1:</p> <pre>switch(conf-macl-ext)# no mac access-list extended mac1</pre>
<b>Related Commands</b>	<a href="#">interface</a> , <a href="#">mac access-group</a> , <a href="#">mac access-list standard</a> , <a href="#">seq (MAC extended ACLs)</a> , <a href="#">show access-list</a> , <a href="#">show running-config access-list</a>



## mac access-list standard

Creates a standard MAC access control list (ACL). Standard ACLs contain rules that permit or deny traffic based on source addresses that you specify.

**Syntax** `mac access-list standard ACLname`

`no mac access-list standard ACLname`

**Parameters** *ACLname*

Specifies a unique ACL name. The name can be up to 63 characters in length, and must begin with an alphanumeric character. No special characters are allowed, except for the underscore and hyphen.

**Modes** Global configuration mode

**Usage Guidelines** Use this command to create a standard MAC access list. If ACL is already created, this command puts the switch in the standard MAC access-list configuration mode.

Standard and extended MAC ACLs cannot share the same name.

To remove a MAC ACL from an interface, enter the **no** form of this command.

**Examples** The following example creates a MAC standard ACL named mac1:

```
switch(config)# mac access-list standard mac1
switch(conf-macl-std)#
```

The following example deletes a MAC standard ACL named mac1:

```
switch(conf-macl-std)# no mac access-list standard mac1
```

**Related Commands** [interface](#), [mac access-group](#), [mac access-list extended](#), [seq \(MAC standard ACLs\)](#), [show access-list](#), [show running-config access-list](#)

## mac-address-reduction

Enables or disables the MAC address reduction feature.

**Syntax** `mac-address-reduction [ enable | disable ]`

**Parameters** **enable**

Enables the MAC address reduction feature.

**disable**

Disables the MAC address reduction feature.

**Modes** Protocol Spanning Tree configuration mode

## mac-address-table

Sets the aging time or adds static addresses to the MAC address table, and enables conversational MAC (address) learning.

<b>Syntax</b>	<p><b>mac-address-table</b> { <b>aging-time</b> <i>seconds</i>   <b>conversational</b> <i>aging_time</i>   <b>learning-mode conversational</b> }</p> <p><b>mac-address-table static</b> <i>mac-addr</i> <b>forward</b> { <i>&lt;N&gt;</i><b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>port-channel</b> <i>number</i>   <b>vlan</b> <i>vlan_id</i> }</p> <p><b>no mac-address-table</b></p> <p><b>no mac-address-table learning-mode</b></p> <p><b>no mac-address-table static</b></p>
<b>Command Default</b>	<p>Default aging time is 300 seconds.</p> <p>Conversational MAC learning is disabled.</p>
<b>Parameters</b>	<p><b>aging-time</b> <i>seconds</i></p> <p>Specifies the time in seconds that a learned MAC address will persist after the last update. If the aging time is set to zero (0), it means that aging is disabled. For Brocade VCS Fabric mode, values range from 60 through 100000.</p> <p><b>conversational</b> <i>aging_time</i></p> <p>Configures an aging time for conversational MAC addresses learned by destination address (DA) on an RBridge. If the aging time is set to zero (0), it means that aging is disabled. For Brocade VCS Fabric mode, values range from 60 through 100000.</p> <p><b>learning-mode conversational</b></p> <p>Enables conversational MAC learning on an RBridge.</p> <p><b>static</b> <i>mac-addr</i> <b>forward</b></p> <p>Specifies the Media Access Control (MAC) address (unicast or multicast) to add to the address table. Packets with this destination address received in the specified VLAN are forwarded to the specified interface.</p> <p><b>forward</b></p> <p>Forwards the MAC address to the interface.</p> <p><b>&lt;N&gt;gigabitethernet</b></p> <p>Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <i>&lt;N&gt;gigabitethernet</i> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b></p> <p>Specifies an RBridge ID.</p> <p><b>slot</b></p> <p>Specifies a valid slot number.</p> <p><b>port</b></p> <p>Specifies a valid port number.</p> <p><b>port-channel</b> <i>number</i></p> <p>Specifies the port-channel number. Valid values range from 1 through 63.</p> <p><b>vlan</b> <i>vlan_id</i></p>

Specifies an active VLAN. Range is from 1 through 4090 if Virtual Fabrics is disabled, and 1 through 8191 if Virtual Fabrics is enabled.

- Modes** Global configuration mode
- Usage Guidelines** The **vlan** keyword is mandatory because the switch only supports independent VLAN learning (IVL).  
Enter **no mac-address-table** to reset the values to their defaults.  
Enter **no mac-address-table learning-mode** to disable conversational MAC learning on an RBridge.

**Examples** To add the static address 0011.2222.3333 to the MAC address table with a packet received on VLAN 100:

```
switch(config)# mac-address-table static 0011.2222.3333 forward tengigabitethernet
0/1 vlan 100
```

To set the aging time to 10 minutes:

```
switch(config)# mac-address-table aging-time 600
```

To set the aging time to 10 minutes for conversational MAC addresses:

```
switch(config)# mac-address-table aging-time conversational 600
```

To enable conversational MAC learning:

```
switch(config)# mac-address-table learning-mode conversational
```

To disable the static aging time:

```
switch(config)# no mac-address-table aging-time static
```

To disable the conversational aging time:

```
switch(config)# no mac-address-table aging-time conversational
```

To disable static MAC address forwarding on an Ethernet interface:

```
switch(config)# no mac-address-table static aaaa.bbbb.cccc forward tengigabitethernet
1/0/1
```

To disable the aging time by setting its value to 0:

```
switch(config)# mac-address-table aging-time 0
```

**Related Commands** [show mac-address-table](#)

# mac-group

Creates a MAC address group into which one or more end-station MAC addresses are defined, supporting service or transport VFs in a Virtual Fabrics context. The group is used in MAC-based VLAN classification at the access port.

**Syntax** `mac-group mac-group-id`

`no mac-group mac-group-id`

**Parameters** `mac-group-id`

A fabric-wide ID. Values range from 1 through 500.

**Modes** Global configuration mode

**Usage Guidelines** Use this command to enter MAC group configuration mode. In that mode, use the `mac` command to enter one or more MAC addresses that become members of the group.

Enter `no mac-group mac-group-id` to delete the group and all MAC addresses associated with it.

---

**NOTE**

You can add or remove only one MAC address per line.

---

**Examples** To enter MAC group configuration mode and add a MAC address to the group:

```
switch(config)# mac-group 1
switch(config-mac-group 1)# mac abc2.abc2.abc2
```

To remove a MAC address from the MAC group:

```
switch(config-mac-group 1)# no mac abc1.abc2.abc3
```

To remove a MAC group and its associated MAC addresses:

```
switch(config)# no mac-group 1
```

**Related Commands** [mac](#), [vcs virtual-fabric enable](#)

## mac-learning disable vlan

Disables MAC address learning on an interface for specified VLANs.

**Syntax** `mac-learning disable vlan { add | remove } { vlan vlan_id }`

`no mac-learning disable vlan`

**Command Default** Dynamic MAC address learning is enabled.

**Parameters** **add**

Adds a VLAN or range of VLANs to the list of VLANs for which dynamic MAC address learning is disabled.

**remove**

Adds a VLAN or range of VLANs to the list of VLANs for which dynamic MAC address learning is disabled.

**vlan***vlan\_id*

Specifies a VLAN or range of VLANs. 802.1Q VLANs range from 1 through 4090. Extended VLANs in a Virtual Fabrics context range from 4096 through 8191.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use the `no mac-learning disable vlan` command to enable dynamic MAC address learning for all VLANs on an interface .

Note the following supported configurations and limitations:

- This command is available on all switch ports.
- This command is not available on router ports or virtual routing interfaces. Appropriate error messages will be displayed.
- If this command is configured on a port channel (vLAG), dynamic MAC address learning is disabled on all the member ports. The configuration of this command on the members of the vLAG must be done individually, consistently, and uniformly.
- This command is not available on Inter-Switch Links (ISLs). MAC address learning is always disabled on ISLs. Appropriate error messages will be displayed.
- Source MAC address learning is not supported on VXLAN tunnel interfaces.
- This command is not allowed on a switch port that is attached to a switched virtual interface (SVI). The creation of the SVI will fail if MAC address learning is disabled on any interface that is part of the respective VLAN. Also, ARP resolution is affected if dynamic MAC learning is disabled on a switch port that is associated with a virtual routing interface (SVI).
- This command is disabled for the following VLANs, and appropriate error messages are displayed:
  - 1002 (FCoE VLAN)
  - 4093 (IP over TRILLVLAN)
  - 4095 (control VLAN)
- With CML support, destination MAC address learning is enabled on the switch. Disabling source MAC address learning does not have an effect on destination MAC address learning; however, the same MAC address appearing as a destination MAC address on other ports will trigger flooding.

**Examples** To disable dynamic MAC learning on VLAN 10:

```
switch(conf-if-te-4/0/5)# mac-learning disable vlan add 10
```

To disable dynamic MAC learning on VLANs 10 through 20:

```
switch(conf-if-te-4/0/5)# mac-learning disable vlan add 10-20
```

To enable dynamic MAC learning on VLAN 10:

```
switch(config-if-te-4/0/5)# mac-learning disable vlan remove 10
```

To enable dynamic MAC learning on all VLANs:

```
switch(config-if-te-4/0/5)# no mac-learning disable
```

**History**

<b>Release version</b>	<b>Command history</b>
5.0.0	This command was introduced.

## mac-rebalance

Forces the rebalancing of EXM entries for the MAC tables.

**Syntax** `mac-rebalance port-channel number { rbridge-id rbridge-id }`

**Parameters** `port-channel number`

Specifies the port-channel interface number. Valid values range from 1 through 6144.

`rbridge-id rbridge-id`

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Usage Guidelines** Run this command on all remote (non-vLAG) nodes.

To achieve complete utilization of the entire vLAG member links, MAC entries learnt on vLAG need to be equally distributed among the vLAG member nodes. There are some scenarios, in which the EXM entries may not be balanced equally among the vLAG member nodes.

This command is applicable to remote RBridge nodes, such as non-vLAG member nodes. However there are not any restrictions on the usage of this command in vLAG member nodes.

Currently, EXM entries are balanced among the member nodes during RBridge membership changes (add or delete). MACs learned on vLAG are not rebalanced when the link updates (such as during LAG member additions or deletions), to avoid traffic disruption. However, when there are many link updates, the EXM mapping can become unbalanced and eventually overload the link capacity leading to frame drops. The `mac-rebalance` command corrects this scenario.

In Fabric Cluster mode, RBridge IDs other than the current node's ID are not allowed.

**Examples** This example rebalances the EXM entries on RBridge 1 (for vLAG 10):

```
switch# mac-rebalance port-channel 10 rbridge-id 1
```



# mac-refresh

Flushes MAC addresses on either the entire cluster or the partner edge loop-detection port.

**Syntax** `mac-refresh interval { all | port }`

`no mac-refresh`

**Command Default** MAC flushing is disabled by default.

**Parameters** *interval*

**all** Specifies the number of seconds between MAC-addresss flushing.

**all**

Flushes MAC addresses from the entire cluster.

**port**

Flushes MAC addresses from the partner edge-loop-detection port.

**Modes** Edge loop detection mode.

**Usage Guidelines** Use the no form of this command to disable MAC-address flushing.

Use this command to remove any MAC inconsistencies in your system. If two interfaces are present in a layer-2 loop, each interface learns the same set of MAC addresses. When ELD detects the layer-2 loop, it puts the participating interface into an operationally down state. Consequently, MAC addresses learned on that interface get flushed. However, the same MAC addresses are present at the interface at the other end of the already detected loop, thereby creating this MAC inconsistency.

To remove this inconsistency, you can run the mac-refresh command to perform a MAC-flush on either the entire cluster or on the partner port at the other end of the loop.

**Examples** To flush all MAC addresses in the cluster every 150 seconds:

```
switch# configure
switch (config)# protocol edge-loop-detection
switch (conf-eld)# mac-refresh 150 all
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## management

Enables a variety of Dynamic Host Configuration Protocol (DHCP) management options.

**Syntax** `management [ interface { autoconfig { dhcp | dhcpv6 } ]`

`no management`

**Parameters** `interface`

Enables management options.

`autoconfig`

Enables automatic configuration of DHCP.

`dhcp`

Enables DHCP for IPv4.

`dhcpv6`

Enables DHCP for IPv6.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use the **no** version of this command to disable this feature.

## map fport interface fcoe

Maps VF\_Ports to N\_Ports in Access Gateway (AG) mode and removes VF\_Port to N\_Port mapping.

**Syntax** `map fport interface fcoe port`

**Parameters** *port*  
VF\_Port number

**Modes** N\_Port configuration mode

**Usage Guidelines** Use this command to specify a route that AG will use to direct traffic from a device (host or target) on a VF\_Port to a fabric switch port connected to an Access Gateway N\_Port. The process of specifying routes is called "mapping." Default mapping is enabled for the switch when enabling AG for the first time. You can use the **map** command to change the default mapping.

You must be in the configuration mode for the specific N\_Port where you want to map a VF\_Port (refer to [nport](#) on page 695). N\_Ports are designated by the format *rbridge-id/port group/N\_Port*, such as 3/0/4 for RBridge 3. Use this format to correctly identify the N\_Port in N\_Port configuration mode. VF\_Ports are identified by the format *domain/rbridge-id/VF\_Port*, such as 1/2/26.

**Examples** Map VF\_Port 1/2/26 to N\_Port 2/0/4.

```
sw0(config-rbridge-id-2-ag-nport-if-fi-2/0/4)# map fport interface fcoe 1/2/26
```

Remove map from VF\_Port 1/2/26 to N\_Port 2/0/4.

```
w0(config-rbridge-id-2-ag-nport-if-fi-2/0/4)# no map fport interface fcoe 1/2/26
```

**Related Commands** [nport](#), [show ag map](#)

## map qos

Adds the QoS profile name as an action to the policy map.

**Syntax** `map qos profile_name`

**Parameters** *profile\_name*  
Designates the name of the QoS profile to be added.

**Modes** Policy-map configuration mode

**Related  
Commands** [class](#), [policy-map](#)

# map sflow

Adds the sFlow profile name as an action to the policy map.

**Syntax** `map sflow profile_name`

**Parameters** *profile\_name*

Designates the name of the sFlow profile to be added.

**Modes** Policy-map configuration mode

**Examples** Typical command usage:

```
switch(config)# policy-map p1
switch(config-policy-map)# class c1
switch(config-policy-class)# map sflow mysflowmap
```

**Related Commands** [class](#), [policy-map](#)

## map vlan

In a VXLAN overlay gateway configuration that uses Layer 2 extension, associates VLANs with VXLAN Network Identifiers (VNIs).

<b>Syntax</b>	<pre>map vlan [ <i>vlan_id</i> ] { <b>vni</b> } [ <i>vni</i> ] [ <b>auto</b> ]</pre> <pre>no map vlan <i>vlan_id</i></pre> <pre>no map vlan <b>vni</b></pre>
<b>Parameters</b>	<p><b><i>vlan_id</i></b></p> <p>A single VLAN ID or range of VLAN IDs. The range is from 1 through 8191. See the Usage Guidelines.</p> <p><b>vni</b></p> <p>Specifies the VNI (VXLAN Network Identifier) token.</p> <p><b><i>vni</i></b></p> <p>A single VXLAN VNI or range of VXLAN VNIs. The range is from 1 through 16777215. See the Usage Guidelines.</p> <p><b>auto</b></p> <p>Enables automatic VLAN-to-VNI mapping for every VLAN associated with the tunnel.</p>
<b>Modes</b>	VXLAN overlay gateway configuration mode
<b>Usage Guidelines</b>	<p>Note the following conditions:</p> <ul style="list-style-type: none"> <li>• Before using this command, you must first set the VXLAN overlay gateway to layer2-extension, by means of the <b>type</b> command.</li> <li>• Before using this command, you must first configure the appropriate VLANs to be used by the gateway.</li> <li>• Before mapping VLANs to VNIs manually, you cannot have automatic mapping configured (by means of the <b>map vlan vni auto</b> command).</li> <li>• You cannot map one VLAN to multiple VNIs. Similarly, you cannot map a single VNI to multiple VLANs. For example, vlan to vni mapping should be one to one.</li> <li>• A single VLAN ID and a range of VLAN IDs can both be specified in a single command as follows: <i>x,y-z</i>. The same applies to VNIs.</li> <li>• When using ranges, you must ensure that the number of values in a VLAN ID range corresponds to the number of values in a VNI range.</li> <li>• The <b>no</b> forms of this command are allowed only if no VLANs are referenced by means of the <b>extend vlan</b> command (under a submode of the <b>site</b> command). For example, VLANs extended to a site should have a vni mapping.</li> <li>• The <b>no map vlan vni auto</b> command disables the automatic assignment of VNIs. It is not allowed if manual VLAN-to-VNI mappings have been configured. For example, "auto" vlan to vni mapping and "explicit" vlan to vni mapping are mutually exclusive.</li> <li>• The <b>no map vlan <i>vlan_id</i></b> command removes the VNI mappings for one or more VLANs.</li> <li>• You cannot delete a VLAN (by means of the <b>no interface vlan</b> command) that is referenced by means of the <b>map vlan vni</b> command.</li> <li>• This command does not trigger VLAN provisioning, unlike the behavior of the <b>attach vlan</b> command.</li> </ul>

**Examples** To configure a manual mapping of VLANs to VNIs in "gateway1":

```
switch(config)# overlay-gateway gateway1
switch(config-overlay-gw-gateway1)# map vlan 10,20-22 vni 5000-5002,6000
```

This results in the following in the running configuration:

```
overlay-gateway gateway1
  type layer2-extension mode vxlan-ipv4
  map vlan 10 vni 5000
  map vlan 20 vni 5001
  map vlan 21 vni 5002
  map vlan 22 vni 6000
```

To configure an automatic mapping of VLANs to VNIs in "gateway1":

```
switch(config)# overlay-gateway gateway1
switch(config-overlay-gw-gateway1)# map vlan vni auto
```

**Related Commands** [extend vlan](#), [interface vlan](#), [overlay-gateway](#), [site](#), [type](#)

# match

Creates a classification map or "class-map" to classify traffic based on configured match criteria.

<b>Syntax</b>	<b>match</b> <i>criteria</i>
<b>Command Default</b>	The only available match criteria at this time is "match any."
<b>Parameters</b>	<b><i>criteria</i></b> Used while in config-classmap mode to configure the match criteria for the class.
<b>Modes</b>	Class-map configuration mode
<b>Usage Guidelines</b>	Use this command to classify traffic based on match criteria. When you launch the <b>class-map</b> command, the system is placed in config-classmap mode for the configured map. At this point, you can provide match criteria for the class. The only available match criteria at this time is "match any."  This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.
<b>Examples</b>	To configure "match any" match criteria for the class while in config-classmap mode: <pre>switch(config-classmap)# match any</pre>
<b>Related Commands</b>	<a href="#">class-map</a> , <a href="#">show running-config class-map</a>



## match (route map)

Defines a variety of match conditions for a route map.

**Syntax** `match { [ as-path name ] | [ community acl exact-match ] | [ ip address acl | prefix-list string ] | [ ip route-source acl | prefix name ] | [ metric num ] | [ next-hop address-filter-list ] | [ route-type [ internal | external-type1 | external-type2 ] ] | [ level-1 | level-2 | level-1-2 ] [ tag tag-value ] | interface interface interface interface . . . interface | [ protocol bgp static-network | protocol bgp external | protocol bgp internal ] } { ip address acl acl-name }`

**no match**

**no match** { **ip address** *acl acl-name* }

**Command Default** This option is disabled.

**Parameters** **as-path**

Specifies an AS-path ACL that is configured by the **ip as-path access-list** command.

**name**

Name of the ACL.

**community *acl exact-match***

Matches a route if and only if the route community attributes field contains the same community numbers specified in the **match** statement.

**ip address**

Specifies an IP ACL or prefix list.

***acl***

*ACL that is configured by the ip as-path access-list command.*

**prefix-list**

Specifies an IP prefix list.

***string***

Name of the prefix list.

**ip route-source**

Specifies an IP route source ACL or prefix list.

***acl***

*ACL that is configured by the ip as-path access-list command.*

**prefix**

IP prefix.

***name***

Name of the prefix.

**metric**

Compares the route MED (metric) to the value specified by *num* .

***num***

BGP4 route metric.

**next-hop**

Compares the IPv4 address of the route next hop to the specified IP address filters. The filters must be already configured by means of the **distribute-list** command.

***address-filter-list***

	Number of the address filter list configured by means of the <b>neighbor distribute-list</b> command.
<b>route-type</b>	Compares a route type to a specified value. Applies to OSPF routes only.
<b>internal</b>	Specifies an internal route.
<b>external-type1</b>	Specifies an External Type 1 route.
<b>external-type2</b>	Specifies an External Type 2 route.
<b>level-1</b>	Compares IS-IS routes only with routes in the same area.
<b>level-2</b>	Compares IS-IS routes only with routes in different areas, but within a domain.
<b>level-1-2</b>	Compares IS-IS routes with routes in the same and in different areas, but within a domain.
<b>tag</b>	Compares the route tag with the specified tag value.
<b>tag-value</b>	Tag value.
<b>interface</b>	Specifies an interface.
<b>interface</b>	Interface type.
<b>protocol bgp static-network</b>	Matches on BGP4 static network routes.
<b>protocol bgp external</b>	Matches on EBGP routes.
<b>protocol bgp internal</b>	Matches on IBGP routes.
<b>ip address acl</b>	Distributes any routes that have a destination network number address that is permitted by a standard or extended access list, and performs policy routing on packets.
<b>acl-name</b>	The name of the ACL in which matching criteria are specified.

**Modes** Route-map configuration mode

**Usage Guidelines** Use the **no** form of this command to restore the default.

**Examples** To match AS-path ACL 1:

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# route-map myroutes
switch(config-route-map myroutes)# match as-path 1
```

**Related Commands** [ip as-path access-list](#), [route-map](#)

## match access-list

Configures the access control list to be used with the class map for flow-based QoS.

**Syntax** `match access-list acl_name`

**Parameters** `acl_name`  
Any valid Layer 2 or Layer 3 ACL access list name.

**Modes** Class-map configuration mode

**Examples** Example command:

```
switch(config-classmap)#match access-list engineeringACL
```

**Related  
Commands** [class-map](#)

## match as-path

Matches an AS-path access list name in a route-map instance.

**Syntax** `match as-path name`

`no match as-path`

**Parameters** *name*

Name of an AS-path access list. Range is from 1 through 32 ASCII characters.

**Modes** Route-map configuration mode

**Related  
Commands** [route-map](#)

# match community

Matches a BGP community access list name in a route-map instance.

**Syntax** `match community name`

`no match community`

**Parameters** *name*

Name of a BGP community access list. Values range from 1 through 32 ASCII characters.

**Modes** Route-map configuration mode

**Related  
Commands** [route-map](#)

## match extcommunity

Matches a BGP extended community list in a route-map instance.

**Syntax** `match extcommunity number`

`no match extcommunity`

**Command Default** BGP extended community access list names are not matched.

**Parameters** *name*

Extended community list number. Values range from 1 through 99.

**Modes** Route-map configuration mode.

**Usage Guidelines** Enter `no match extcommunity` to remove the community match statement from the configuration file.

**Examples** To configure a route map that matches on extended community ACL 1.

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ip extcommunity-list 1 permit 123:2
device(config-rbridge-id-122)# route-map extComRmap permit 10
device(config-route-map-extComRmap/permit/10)# match extcommunity 1
```

### History

Release version	Command history
5.0.0	This command was introduced.

# match interface

Matches interface conditions in a route-map instance.

**Syntax** `match interface [ <N>gigabitethernet rbridge-id/slot/port | loopback | ve rbridge-id/slot/port ]`  
`no match interface`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

*rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**loopback**

Specifies a loopback port. Values range from 1 through 255.

**ve**

Specifies a virtual Ethernet port. Range is from 2 through 4090.

*rbridge-id*

Specifies the RBridge ID.

*slot*

Specifies the slot number.

*port*

Specifies the port number.

**Modes** Route-map configuration mode

**Usage Guidelines** Use this command to configure the interface match clause in a route-map instance. A maximum of three interfaces is supported.

**Related Commands** [route-map](#)

## match ip address

Matches IP address conditions in a route-map instance.

**Syntax** `match ip address acl name`

`no match ip address acl name`

**Parameters** `acl name`

Name of the access list. Range is from 1 through 32 ASCII characters.

**Modes** Route-map configuration mode

**Usage Guidelines** Use this command to specify an IP prefix match clause in a route-map instance.

**Related Commands** [ip prefix-list](#), [match interface](#), [match ip next-hop](#), [match metric](#), [match route-type](#), [match tag](#), [route-map](#), [set distance](#), [set ip next-hop](#), [set metric](#), [set tag](#)



## match ip next-hop

Matches IP next-hop match conditions in a route-map instance.

**Syntax** `match ip next-hop prefix-list name`

`no match ip next-hop`

**Parameters** `prefix-list name`

Specifies a prefix list. Values range from 1 through 32 ASCII characters.

**Modes** Route-map configuration mode

**Usage Guidelines** Use this command to specify an IP next-hop match clause in a route-map instance.

**Related Commands** [ip prefix-list](#), [match ip address](#), [match interface](#), [match metric](#), [match tag](#), [match route-type](#), [route-map](#), [set distance](#), [set ip next-hop](#), [set metric](#), [set tag](#)

## match ipv6 address

Matches IPv6 address conditions in a route-map instance.

**Syntax** `match ipv6 address { prefix-list prefix-list-name }`

**no match ipv6 address**

**Command Default** No routes are distributed based on destination network number.

**Parameters** `prefix-list prefix-list-name`  
Specifies the name of an IPv6 prefix list.

**Modes** Route-map configuration

**Usage Guidelines** Use the no form of this command to disable the BGP graceful restart capability globally for all BGP neighbors.  
Use this command to enable or disable the graceful restart capability globally for all BGP neighbors in a BGP network. .

**Examples** To match IPv6 routes that have addresses specified by the prefix list named “myprefixlist”.

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# route-map extComRmap
device(config-route-map-sendExtComRmap)# match ipv6 address prefix-list myprefixlist
```

### History

Release version	Command history
5.0.0	This command was introduced.

## match metric

Matches a route metric in a route-map instance.

**Syntax** `match metric value`

`no match metric`

**Parameters** *value*

Route metric. Values range from 0 through 4294967295.

**Modes** Route-map configuration mode

**Usage Guidelines** Use this command to specify a route-map metric in route-map instance.

**Related Commands** [ip prefix-list](#), [match interface](#), [match ip address](#), [match ip next-hop](#), [match route-type](#), [match tag](#), [route-map](#), [set distance](#), [set ip next-hop](#), [set metric](#), [set tag](#)

## match protocol bgp

Matches BGP routes on protocol types and subtypes in a route-map instance.

**Syntax** `match protocol bgp [ external | internal | static-network ]`

`no match protocol bgp`

**Parameters** `external`

Matches EBGP routes.

`internal`

Matches IBGP routes.

`static-network`

Matches BGP static routes. This is applicable only for BGP outbound policy.

**Modes** Route-map configuration mode

**Related  
Commands** [route-map](#)

## match route-type

Matches a route type in a route-map instance.

**Syntax** `match route-type [ internal | type-1 | type-2 ]`

`no match route-type`

**Parameters**

<b>internal</b>	Internal route type
<b>type-1</b>	OSPF external route type 1
<b>type-2</b>	OSPF external route type 2

**Modes** Route-map configuration mode

**Related  
Commands** [route-map](#)

## match tag

Matches a route tag in a route-map instance.

**Syntax** `match tag value`

`no match tag`

**Parameters** *value*

The range of valid values is from 0 through 4294967295.

**Modes** Route-map configuration mode

**Related  
Commands** [route-map](#)

## max-age

Sets the interval time in seconds between messages that the spanning tree receives from the interface.

**Syntax** **max-age** *seconds*

**no max-age**

**Command Default** 20 seconds.

**Parameters** **seconds**

Configures the Spanning Tree Protocol interface maximum age. Valid values range from 6 through 40.

**Modes** Protocol Spanning Tree configuration mode

**Usage Guidelines** Use this command to control the maximum length of time that passes before an interface saves its configuration Bridge Protocol Data Unit (BPDU) information.

If the **VLAN** parameter is not provided, the *seconds* value is applied globally for all per-VLAN instances. However, for VLANs that have been configured explicitly, the per-VLAN configuration takes precedence over the global configuration.

When configuring the maximum age, the **max-age** command setting must be greater than the **hello-time** command setting. The following relationship should be kept:

$$2 * (\text{forward-delay} - 1) \geq \text{max-age} \geq 2 * (\text{hello-time} + 1)$$

If xSTP is enabled over VCS, this command must be executed on all RBridges.

Enter **no max-age** to return to the default configuration.

**Examples** To configure the maximum-age to 10 seconds:

```
switch(conf-rstp) # max-age 10
```

**Related Commands** [forward-delay](#), [hello-time](#)

## max-hops

Configures the maximum number of hops for a Bridge Protocol Data Unit (BPDU) in an MSTP region.

**Syntax** `max-hops hop_count`

`no max-hops`

**Command Default** 20 hops

**Parameters** `hop_count`

Specifies the maximum number of hops for which the BPDU will be valid. Valid values range from 1 through 40.

**Modes** Protocol Spanning Tree MSTP configuration mode

**Usage Guidelines** Specifying the maximum hops for a BPDU prevents the messages from looping indefinitely on the interface. When you change the number of hops, it affects all spanning-tree instances.

Enter **no max-hops** to return to the default value.

**Examples** To set the number of maximum hops to 25 for all MSTPs:

```
switch(config)# protocol spanning-tree mstp
switch(conf-mstp)# max-hops 25
```

**Related Commands** [show spanning-tree mst brief](#)



# max-mcache

Configures the maximum multicast cache size.

**Syntax** **max-mcache** *num*

**no max-mcache**

**Command Default** Multicast cache size is 2048 entries.

**Parameters** *num*

Number of entries in the multicast cache. Valid values range from 1 through 2048.

**Modes** PIM router configuration mode

**Usage Guidelines** Enter **no max-mcache** to disable this feature.

**Examples** Setting the multicast cache to 500 entries.

```
switch(conf-pim-router) # max-mcache 500
```

**Related Commands** [ip multicast-boundary](#), [router pim](#), [show ip pim mcache](#), [show ip pim-sparse](#)

## max-metric router-lsa

Advertises the maximum metric value in different Link State Advertisements (LSAs).

<b>Syntax</b>	<pre>max-metric router-lsa [ all-vrfs ] [ all-lsas   summary-lsa metric-value   external-lsa metric-value   link { ptp   stub   transit   all }   on-startup { time   wait-for-bgp } [ all-lsas   summary-lsa metric- value   external-lsa metric-value   link { ptp   stub   transit   all } ] ]  no max-metric router-lsa [ all-vrfs ] [ all-lsas   summary-lsa metric-value   external-lsa metric-value   link { ptp   stub   transit   all }   on-startup { time   wait-for-bgp } [ all-lsas   summary-lsa metric- value   external-lsa metric-value   link { ptp   stub   transit   all } ] ]</pre>
<b>Parameters</b>	<p><b>all-vrfs</b></p> <p>Applies the configuration change to all instances of OSPF.</p> <p><b>on-startup</b></p> <p>Applies the configuration change at the next OSPF startup.</p> <p><b>time</b></p> <p>Sets the time (in seconds) for which the specified links in Router LSAs are advertised when the metric is set to the maximum value of 0xFFFF. The range for <i>time</i> is 5 to 86,400.</p> <p><b>wait-for-bgp</b></p> <p>Indicates that OSPF should wait for either 600 seconds or until BGP has finished route table convergence, whichever happens first, before advertising the links with the normal metric.</p> <p><b>summary-lsa metric-value</b></p> <p>Modifies the metric of all summary type 3 and type 4 LSAs to equal the specified value or a default value. The range for metric value is 1 to 16777214 (0x00001 - 0x00FFFFE), and the default is 16711680 (0x00FF0000).</p> <p><b>external-lsa metric-value</b></p> <p>Modifies the metric of all external type 5 LSAs to equal the specified value or a default value. The range for metric value is 1 to 16777214 (0x00001 - 0x00FFFFE), and the default is 16711680 (0x00FF0000).</p> <p><b>all-lsas</b></p> <p>Sets the <b>summary-lsa</b> and <b>external-lsa</b> optional parameters to the corresponding default max-metric value. For a non-default instance of OSPF, only the summary-lsa and external-lsa parameters are set.</p> <p><b>link</b></p> <p>Specifies the types of links for which the maximum metric is advertised. By default, the maximum metric is advertised only for transit links.</p> <p><b>all</b></p> <p>Advertises the maximum metric in Router LSAs for all supported link types.</p> <p><b>ptp</b></p> <p>Advertises the maximum metric in Router LSAs for point-to-point links.</p> <p><b>stub</b></p> <p>Advertises the maximum metric in Router LSAs for stub links.</p> <p><b>transit</b></p> <p>Advertises the maximum metric in Router LSAs for transit links. This is the default link type.</p>
<b>Modes</b>	OSPF VRF router configuration mode

**Usage Guidelines** Use this command to set the maximum metric value advertised in different Link State Advertisements (LSAs). When enabled, the router configures the maximum value of the metric for routes and links advertised in various types of LSAs. Because the route metric is set to its maximum value, neighbors will not route traffic through this router except to directly connected networks. Thus, the device becomes a stub router, which is desirable when you want:

- Graceful removal of the router from the network for maintenance.
- Graceful introduction of a new router into the network.
- To avoid forwarding traffic through a router that is in critical condition.

Enter **no max-metric router-lsa all-lsas** to disable advertising the maximum metric value in different LSAs.

**Examples** To advertise the maximum metric value using the **all-lsas** option:

```
switch# configure
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)#router ospf
switch(config-router-ospf-vrf-default-vrf)# max-metric router-lsa all-lsas
```

## max-route

Sets the maximum number of routes for VRF.

**Syntax** `max-route value`

**Parameters** `value`  
The maximum number of routes.

**Modes** VRF configuration mode

**Related  
Commands** [vrf](#)

# maxas-limit

Imposes a limit on the number of autonomous systems in the AS-PATH attribute.

**Syntax** **maxas-limit** { **in** } *num*

**no maxas-limit** { **in** } *num*

**Command Default** This option is disabled.

**Parameters** **in**

Allows an AS-PATH attribute from any neighbor imposing a limit on the number of autonomous systems.

*num*

Valid range is from 0 through 300.

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of this command to restore the default.

**Examples** The following example sets the limit on the number of autonomous systems in the AS-PATH attribute to 100.

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router bgp
switch(config-bgp-router)# maxas-limit 100
```

## maximum-paths (BGP)

Changes the maximum number of BGP4 and BGP4+ shared paths.

<b>Syntax</b>	<b>maximum-paths</b> <i>num</i>   <b>use-load-sharing</b>  <b>no maximum-paths</b>				
<b>Command Default</b>	This option is disabled.				
<b>Parameters</b>	<p><b>num</b> Maximum number of paths across which the device balances traffic to a given BGP4 destination. Valid values range from 2 through 8. The default is 1.</p> <p><b>use-load-sharing</b> Uses the maximum IP ECMP path value that is configured by means of the <b>ip load-sharing</b> command.</p>				
<b>Modes</b>	BGP address-family IPv4 unicast configuration mode BGP address-family IPv6 unicast configuration mode				
<b>Usage Guidelines</b>	Use this command to change the maximum number of BGP4 shared paths, either by setting a value or using the value configured by the <b>ip load-sharing</b> command.  Use the <b>no</b> form of this command to restore the default.				
<b>Examples</b>	<p>The following example sets the maximum number of BGP4 shared paths to 8.</p> <pre>switch(config)# rbridge-id 10 switch(config-rbridge-id-10)# router bgp switch(config-bgp-router)# address-family ipv4 unicast switch(config-bgp-ipv4u)# maximum-paths 8</pre> <p>The following example sets the maximum number of BGP4+ shared paths to that of the value already configured using the <b>ip load-sharing</b> command.</p> <pre>switch(config)# rbridge-id 10 switch(config-rbridge-id-10)# router bgp switch(config-bgp-router)# address-family ipv6 unicast switch(config-bgp-ipv6u)# maximum-paths use-load-sharing</pre>				
<b>History</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Release version</th> <th style="text-align: left;">Command history</th> </tr> </thead> <tbody> <tr> <td>NOS v5.0.0</td> <td>This command was modified to add support for the IPv6 address family.</td> </tr> </tbody> </table>	Release version	Command history	NOS v5.0.0	This command was modified to add support for the IPv6 address family.
Release version	Command history				
NOS v5.0.0	This command was modified to add support for the IPv6 address family.				
<b>Related Commands</b>	<a href="#">maximum-paths ebgp ibgp (BGP)</a>				

## maximum-paths ebgp ibgp (BGP)

Specifies the number of equal-cost multipath EBGP or IBGP routes or paths that are selected.

**Syntax** `maximum-paths { ebgp num | ibgp num }`

`no maximum-paths`

**Command Default** This option is disabled.

**Parameters** `ebgp`

Specifies EBGP routes or paths.

`ibgp`

Specifies IBGP routes or paths.

`num`

The number of equal-cost multipath routes or paths that are selected. Range is from 1 through 8. 1 disables equal-cost multipath.

**Modes** BGP address-family IPv4 unicast configuration mode

BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** Enhancements to BGP4 load sharing support the load sharing of BGP4 and BGP4+ routes in IP Equal-Cost Multipath (ECMP, even if the BGP4 multipath load-sharing feature is not enabled by means of the **use-load-sharing** option to the **maximum-paths** command. You can set separate values for IGMP and ECMP load sharing. Use this command to specify the number of equal-cost multipath EBGP or IBGP routes or paths that are selected.

Use the **no** form of this command to restore the default.

**Examples** The following example sets the number of equal-cost multipath EBGP routes or paths that will be selected to 6.

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router bgp
switch(config-bgp-router)# address-family ipv4 unicast
switch(config-bgp-ipv4u)# maximum-paths ebgp 6
```

The following example sets the number of equal-cost multipath IBGP routes or paths that will be selected to 4.

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router bgp
switch(config-bgp-router)# address-family ipv6 unicast
switch(config-bgp-ipv6u)# maximum-paths ibgp 4
```

**History**

**Release version**

**Command history**

NOS v5.0.0

This command was modified to add support for the IPv6 address family.

## med-missing-as-worst

Configures the device to favor a route that has a Multi-Exit Discriminator (MED) over a route that does not have one.

**Syntax** `med-missing-as-worst`

`no med-missing-as-worst`

**Command Default** This option is disabled.

**Modes** BGP configuration mode

**Usage Guidelines** When MEDs are compared, by default the device favors a low MED over a higher one. Because the device assigns a value of 0 to a route path MED if the MED value is missing, the default MED comparison results in the device favoring the route paths that do not have MEDs. Use this command to configure the device to favor a route that has a Multi-Exit Discriminator (MED) over a route that does not have one.

Use the **no** form of this command to restore the default.

**Examples** Typical example of this command:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# med-missing-as-worst
```



# message-interval

Configures the Protocol Independent Multicast (PIM) Join/Prune message interval.

**Syntax** `message-interval num`

`no message-interval`

**Command Default** 60 seconds

**Parameters** *num*

The interval value in seconds. Valid values range from 10 through 65535 seconds.

**Modes** PIM router configuration mode

**Usage Guidelines** Use this command to specify the interval at which the periodic PIM Join/Prune messages must be sent out.

Enter **no message-interval** to disable this feature.

**Examples** Setting the interval to one hour.

```
switch(conf-pim-router)# message-interval 3600
```

**Related Commands** [router pim](#)

## metric-type

Configures the default metric type for external routes.

**Syntax** `metric-type { type1 | type2 }`

`no metric-type { type1 | type2 }`

**Command Default** `type1`

**Parameters** `type1`

The metric of a neighbor is the cost between itself and the router plus the cost of using this router for routing to the rest of the world.

`type2`

The metric of a neighbor is the total cost from the redistributing routing to the rest of the world.

**Modes** OSPF/OSPFv3 VRF router configuration mode

**Usage Guidelines** The **no** form of this command returns to the default setting. You must specify a type parameter when using the **no** form.

**Examples** To set the default metric type for external routes to type2:

```
device# configure terminal
device(config)# rbridge-id 5
device(config-rbridge-id-5)# router ospf
device(config-router-ospf-vrf-default-vrf)# metric-type type2
```

### History

Release version	Command history
5.0.0	Support was added for OSPFv3.

### Related Commands

[default-information-originate \(OSPF\)](#)

# minimum-links

Sets the minimum bandwidth.

**Syntax** `minimum-links num-of-links`

`no minimum-links`

**Command Default** Number of links is 1.

**Parameters** *num-of-links*

Number of links. Valid values range from 1 through 32.

**Modes** Port-channel interface configuration mode

**Usage Guidelines** Use this command to allow a port-channel to operate at a certain minimum bandwidth all the time. If the bandwidth of the port-channel drops below that minimum number, then the port-channel is declared operationally DOWN even though it has operationally UP members.

Enter **no minimum-links** to restore the default value.

**Examples** To set the minimum number of links to 16 on a specific port-channel interface:

```
switch(config)# interface port-channel 33
switch(config-port-channel-33)# minimum-links 16
```

## mode

Sets the LLDP mode on the switch.

**Syntax** `mode { tx | rx }`

**Command Default** Both transmit and receive modes are enabled.

**Parameters**

**tx** Specifies to enable only the transmit mode.

**rx** Specifies to enable only the receive mode.

**Modes** Protocol LLDP configuration mode

**Examples** To enable only the transmit mode:

```
switch(conf-lldp)# mode tx
```

To enable only the receive mode:

```
switch(conf-lldp)# mode rx
```

**Related  
Commands** [show lldp interface](#)

## mode (27x40 GbE line card)

Sets Performance or Density operating modes on the 27x40 GbE line card installed in the 8770 Switch.

**Syntax**    **mode performance**  
               **no mode performance**

**Command Default**    Density mode (**no mode performance** ) is enabled.

**Modes**            port-group

**Usage Guidelines**    Use this command to set Performance or Density (default) operating modes for port groups 1-9 on the 27x40 GbE line card. When a port group is configured In Performance mode, the third port in the port group is persistently disabled, but the remaining two ports operate at up to 40 Gbps in Performance mode to achieve the 80 Gbps maximum rate for the port group. QSFP breakout mode is only supported on ports configured in Performance mode.

If Density mode (default) is configured for a port group, all three ports in the group are enabled in Density mode, so cannot support the 40 Gbps maximum rate. If this mode is configured on all port groups, 27 total ports are available for use.

For more information on port groups and the Performance and Density operating modes on the line card, refer to the "Overview" chapter in the Brocade 8770-4 and 8770-8 Hardware Reference Manuals.

Enter **no performance mode** to restore the default value. Power off the line card before configuring operating modes.

**Examples**            To enable Performance mode on port group 9 of the line card in slot 3 of switch with RBridge ID 1.

```
switch# configure terminal
Entering configuration mode terminal
switch(config)# hardware
switch(config-hardware)# port-group 1/3/9
switch(config-port-group-1/3/9)# mode performance
%Warning: port-group mode performance is a disruptive command.
Please save the running-config to startup-config and a power-cycle for the
changes to take place.
```

**Related Commands**    [hardware](#), [port-group](#)

## modes

Enables and disables operating modes for port groups for Access Gateway mode.

**Syntax** `modes mode_name`

`no modes mode_name`

**Command Default** `lb`

**Parameters** `mode_name`

`lb` (Automatic Login Balancing)

**Modes** Port Grouping configuration mode

**Usage Guidelines** Login Balancing (LB) is the only mode that you can enable. Automatic Login Balancing is enabled by default for a port group when the port group is created. If LB mode is enabled for a port group and a VF\_Port goes offline, logins in the port group are redistributed among the remaining VF\_Ports. Similarly, if an N\_Port comes online, port logins in the port group are redistributed to maintain a balanced N\_Port-to-VF\_Port ratio.

You must be in Port Grouping configuration mode for a specific port group to use this command. Entering `no modes mode_name` disables the mode.

Consider the following when using LB mode with `show running-config ag` and `show ag` commands:

- The only Port Grouping mode that you can enable or disable is LB mode.
- When LB mode is disabled in a port group, the `show running-config ag`, `show ag map`, and `show ag` commands display the configured VF\_Port to N\_Port mapping. This is because configured and active mapping are the same.
- When LB mode is enabled in a port group, `show ag`, and `show ag map` displays the active mapping only because VF\_Port to N\_Port mapping is based on the current distributed load across all N\_Ports. The `show running-config ag` command displays the configured mapping only.

**Examples** Enable Automatic Login Balancing mode on port group 8.

```
sw0(config-rbridge-id-3-ag-pg-8)# modes lb
```

Disable Automatic Login Balancing mode on port group 8.

```
sw0(config-rbridge-id-3-ag-pg-8)# no modes lb
```



## monitor session (VXLAN)

Enables switched port analyzer (SPAN) on one or all tunnels of a VXLAN overlay gateway.

<b>Syntax</b>	<pre><b>monitor session</b> <i>session_number</i> <b>direction</b> { <b>tx</b>   <b>rx</b>   <b>both</b> } [ <b>remote-endpoint</b> { <i>ip_address</i>   <b>any</b> } ] <b>vlan</b> [ <b>add</b>   <b>remove</b> ] <i>VLAN_ID_range</i></pre> <pre><b>no monitor session</b> <i>session_number</i></pre>
<b>Parameters</b>	<p><b><i>session_number</i></b> Specifies the SPAN session ID that was configured with the global <b>monitor session</b> command.</p> <p><b>tx</b> Enables SPAN for the transmitting tunnels.</p> <p><b>rx</b> Enables SPAN for the receiving tunnels.</p> <p><b>both</b> Enables SPAN for both the transmitting and receiving tunnels.</p> <p><b><i>ip_address</i></b> Enables SPAN for the specified the IPv4 address of the remote Hypervisor for the NSX Controller to VXLAN termination endpoint (VTEP).</p> <p><b>any</b> Enables SPAN for all tunnels on the gateway.</p> <p><b>add</b> Enables SPAN on specified VLAN IDs. You can use this option if you have disabled SPAN on specific VLAN IDs and now want to re-enable SPAN on these IDs.</p> <p><b>remove</b> Disables SPAN on specified VLAN IDs.</p> <p><b><i>VLAN_ID_range</i></b> Specifies the VLAN IDs for enabling SPAN.</p>
<b>Modes</b>	VXLAN overlay gateway configuration mode
<b>Usage Guidelines</b>	<p>Use this command to enable SPAN on one or all tunnels of this gateway for specified VLANs. You can use the <b>remote-endpoint</b> option to choose all tunnels or specific tunnels of this gateway. You choose a specific tunnel by specifying the remote Hypervisor 's VTEP IP address. This address is matched with the destination IP address of the tunnels.</p> <p>The <b>remove</b> option can be used to exclude VLANs from a previously configured list. If all the VLANs are removed, the entire SPAN configuration is deleted (this is the same behavior as that resulting from the <b>no monitor session session_number</b> command).</p> <p>The only way to change the direction once you have run this command is to remove the SPAN configuration, then rerun the <b>monitor session</b> command. Specified VLANs must already be configured as exported through this gateway.</p> <p>The SPAN session number must already be configured, and the SPAN destination must already be specified and cannot be a tunnel.</p> <p>The SPAN session must not include source port configuration for this gateway.</p> <p>The deletion of an attached VLAN (by using the <b>no attach vlan</b> command) is blocked if SPAN has been enabled for the VLAN you are trying to delete.</p> <p>The <b>no</b> form of this command removes SPAN configuration for the gateway.</p>



**Examples** To enable SPAN for all tunnels in both directions for "gateway1" on VLAN IDs 1 through 10 and SPAN session ID 3:

```
switch# configure
switch(config)# overlay-gateway gateway1
switch(config-overlay-gw-gateway1)# monitor session 3 direction both remote-endpoint
any vlan add 1-10
```

**Related  
Commands** [overlay-gateway](#)

## mtu

Specifies the size of the maximum transmission unit (MTU) on an interface.

**Syntax** `mtu size`

**Command Default** 10-Gbps Ethernet interfaces have a default MTU of 2500 bytes.

**Parameters** *size*

Size, in bytes, of the MTU. Range is from 1522 through 9216.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Configuring an MTU on a VLAN interface is not valid.

If you use the **ipv6 mtu** command to change the MTU value for IPv6 functionality, you must set the same value on the interface by using the **mtu** command. Otherwise packets will be dropped.

## multipath (BGP)

Changes load sharing to apply to only IBGP or EBGP paths, or to support load sharing among paths from different neighboring autonomous systems (ASs).

<b>Syntax</b>	<b>multipath [ ebgp   ibgp   multi-as ]</b>  <b>no multipath</b>				
<b>Command Default</b>	This option is disabled.				
<b>Parameters</b>	<p><b>ebgp</b> Enables load sharing of EBGP paths only.</p> <p><b>ibgp</b> Enables load sharing of IBGP paths only.</p> <p><b>multi-as</b> Enables load sharing of paths from different neighboring autonomous systems.</p>				
<b>Modes</b>	BGP address-family IPv4 unicast configuration mode BGP address-family IPv6 unicast configuration mode				
<b>Usage Guidelines</b>	<p>By default, when BGP4 load sharing is enabled, both IBGP and EBGP paths are eligible for load sharing, while paths from different neighboring autonomous systems are not. Use this command to change load sharing to apply to only IBGP or EBGP paths, or to support load sharing among paths from different neighboring autonomous systems.</p> <p>Use the <b>no</b> form of this command to restore the default.</p>				
<b>Examples</b>	<p>To change load sharing to apply to IBGP paths:</p> <pre>switch(config)# rbridge-id 10 switch(config-rbridge-id-10)# router bgp switch(config-bgp-router)# address-family ipv4 unicast switch(config-bgp-ipv4u)# multipath ibgp</pre> <p>To enable load sharing of paths from different neighboring autonomous systems:</p> <pre>switch(config)# rbridge-id 122 switch(config-rbridge-id-122)# router bgp switch(config-bgp-router)# address-family ipv6 unicast switch(config-bgp-ipv6u)# multipath multi-as</pre>				
<b>History</b>	<table border="1"> <thead> <tr> <th>Release version</th> <th>Command history</th> </tr> </thead> <tbody> <tr> <td>NOS v5.0.0</td> <td>This command was modified to add support for the IPv6 address family.</td> </tr> </tbody> </table>	Release version	Command history	NOS v5.0.0	This command was modified to add support for the IPv6 address family.
Release version	Command history				
NOS v5.0.0	This command was modified to add support for the IPv6 address family.				

## multiplier (LLDP)

Sets the number of consecutive misses of hello messages before LLDP declares the neighbor as dead.

**Syntax** `multiplier value`

`no multiplier`

**Command Default** Multiplier default value is 4.

**Parameters** *value*

Specifies a multiplier value to use. Valid values range from 2 through 10.

**Modes** Protocol LLDP configuration mode

**Usage Guidelines** Enter `no multiplier` to return to the default setting.

**Examples** To set the number of consecutive misses:

```
switch(conf-lldp)# multiplier 2
```

**Related Commands** [hello-interval \(ELD\)](#)

## multiplier (UDLD)

Sets timeout multiplier for missed UDLD PDUs.

**Syntax** **multiplier** *value*

**no multiplier**

**Command Default** Multiplier default value is 5.

**Parameters** **value**

Specifies a multiplier value to use. Valid values range from 3 through 10.

**Modes** Protocol UDLD configuration mode

**Usage Guidelines** When the device at one end is a Brocade IP product, the timeout interval is the product of the "hello" time interval at the other end and the "multiplier" value.

When the UDLD protocol times out waiting for UDLD PDUs, it will block the port.

Enter **no multiplier** to return to the default setting.

**Examples** To set the multiplier to 8:

```
switch(config)# protocol udld
switch(config-udld)# multiplier 8
```

**Related Commands** [hello \(UDLD\)](#)

## name (VLAN interfaces)

Assigns a descriptive name to a VLAN. Although this name cannot be used in place of the *vlan\_ID*, it is displayed in response to the **show vlan brief** command.

<b>Syntax</b>	<b>name</b> <i>vlan_name</i>  <b>no name</b>				
<b>Parameters</b>	<b>vlan_name</b>  Specifies the characters of the name. The string must be between 1 and 32 characters.				
<b>Modes</b>	VLAN interface sub-type				
<b>Usage Guidelines</b>	If no name is assigned to a VLAN, a default name is automatically assigned, composed of "VLAN" and the <i>vlan_ID</i> . For example, if the <i>vlan_ID</i> is 1000, the default name is VLAN1000.  To revert from an assigned name to the default name, enter <b>no name</b> .				
<b>Examples</b>	Assign the name "marketing" to VLAN 1000:  <pre>device# configure device(config)# interface vlan 1000 device(config-Vlan-1000)# name marketing device(config-Vlan-1000)</pre>				
<b>History</b>	<table border="1"><thead><tr><th>Release version</th><th>Command history</th></tr></thead><tbody><tr><td>5.0.1</td><td>This command was introduced.</td></tr></tbody></table>	Release version	Command history	5.0.1	This command was introduced.
Release version	Command history				
5.0.1	This command was introduced.				
<b>Related Commands</b>	<a href="#">show vlan brief</a>				

## nas auto-qos

Enables the Quality of Service (QoS) functionality for the Auto-NAS (automatic network attached storage) feature.

**Syntax**    **nas auto-qos**

**no nas auto-qos**

**Modes**    Global configuration mode

**Usage Guidelines**    This command is supported only on Brocade VDX 8770-4, VDX 8770-8, VDX 6740, and VDX 6740T switches.

Use the **no** form of this command to disable the Auto-NAS feature.

**Related Commands**    [clear nas statistics](#), [nas server-ip](#), [show cee maps](#), [show nas statistics](#), [show running-config nas server-ip](#), [show system internal nas](#)

## nas server-ip

Identifies the port that is to receive Auto NAS (automatic network attached storage) traffic.

**Syntax** `nas server-ip address/prefix [ vlan vlan_ID | vrf vrf_name ]`

`no nas server-ip address`

**Parameters** `address/prefix`

IP address/prefix to receive NAS traffic.

`vlan vlan_ID`

VLAN ID.

`vrf vrf_name`

VRF name.

**Modes** Global configuration mode

**Usage Guidelines** This command is supported only on Brocade VDX 8770-4, VDX 8770-8, VDX 6740, and VDX 6740T switches.

Use the **no** form of this command to remove a nas server-ip prefix.

**Examples** To identify an IP address/prefix of 2.2.2.2/32 to receive NAS traffic over VLAN 10:

```
switch# configure
switch(config)# nas server-ip 2.2.2.2/32 vlan 10
```

**Related Commands** [clear nas statistics](#), [nas auto-qos](#), [show cee maps](#), [show nas statistics](#), [show running-config nas server-ip](#), [show system internal nas](#)



# nbr-timeout

Configures the neighbor timeout interval after which a neighbor is considered to be absent.

**Syntax** `nbr-timeout num`

`no nbr-timeout`

**Command Default** The default is 105.

**Parameters** *num*

Interval value in seconds. Valid values range from 35 through 12600 seconds.

**Modes** PIM router configuration mode

**Usage Guidelines** Enter `no nbr-timeout` to disable this feature.

**Examples** Setting the timeout to 600 seconds.

```
switch(conf-pim-router) # nbr-timeout 600
```

**Related  
Commands** [router pim](#)

## neighbor (BGP)

Assigns a neighbor to a specified IPv4 address or peer group to provide a variety of configuration options.

**Syntax** `neighbor { ip-address | ipv6-address | peer-group-name } { advertisement-interval | as-override | capability | description | ebgp-multihop | enforce-first-as | local-as | maxas-limit | next-hop-self | password | peer-group | remote-as | remove-private-as | shutdown | soft-reconfiguration | static-network-edge | timers | update-source }`

`no neighbor { ip-address | ipv6-address | peer-group-name } { advertisement-interval | as-override | capability | description | ebgp-multihop | enforce-first-as | local-as | maxas-limit | next-hop-self | password | peer-group | remote-as | remove-private-as | shutdown | soft-reconfiguration | static-network-edge | timers | update-source }`

<b>Parameters</b>	<b><i>ip-address</i></b>	IPv4 address of the neighbor
	<b><i>ipv6-address</i></b>	IPv6 address of the neighbor
	<b><i>peer-group-name</i></b>	Alphanumeric characters. Range is from 1 through 63.
	<b>advertisement-interval</b>	See <a href="#">neighbor advertisement-interval (BGP)</a> .
	<b>as-override</b>	See <a href="#">neighbor as-override (BGP)</a> .
	<b>capability</b>	See <a href="#">neighbor capability as4 (BGP)</a> .
	<b>description</b>	See <a href="#">neighbor description (BGP)</a> .
	<b>ebgp-multihop</b>	See <a href="#">neighbor ebgp-multihop (BGP)</a> .
	<b>enforce-first-as</b>	See <a href="#">neighbor enforce-first-as (BGP)</a> .
	<b>local-as</b>	See <a href="#">neighbor local-as (BGP)</a> .
	<b>maxas-limit</b>	See <a href="#">neighbor maxas-limit in (BGP)</a> .
	<b>next-hop-self</b>	See <a href="#">neighbor next-hop-self (BGP)</a> .
	<b>password</b>	See <a href="#">neighbor password (BGP)</a> .
	<b>peer-group</b>	See <a href="#">neighbor peer-group (BGP)</a> .
	<b>remote-as</b>	See <a href="#">neighbor remote-as (BGP)</a> .
	<b>remote-private-as</b>	See <a href="#">neighbor remove-private-as (BGP)</a> .
	<b>shutdown</b>	See <a href="#">neighbor shutdown (BGP)</a> .
	<b>soft-reconfiguration</b>	See <a href="#">neighbor soft-reconfiguration inbound (BGP)</a> .

**static-network-edge**See **neighbor static-network-edge (BGP)**.**timers**See **neighbor timers (BGP)**.**update-source**See **neighbor update-source (BGP)**.

**Modes** BGP configuration mode  
 BGP address-family IPv4 unicast configuration mode  
 BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** Neighbor configuration appears in both BGP global and BGP Address-Family command modes. The neighbor parameters/attributes that are common to all of the address families appear in the global mode, making support available for IPv6 address families in the future. The neighbor parameters/attributes that are specific to the address-family appear within the address-family submode.

Use the **no** form of this command to remove the neighbor from the specified peer group or remove an option.

**Examples** To assign a neighbor to a specified peer group and view available options:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 ?
Possible completions:
  advertisement-interval  Minimum interval between sending BGP routing updates
  as-override             Override matching AS-number while sending update
  capability              Advertise capability to the peer
  description             Neighbor by description
  ebgp-multihop           Allow EBGp neighbors not on directly connected
                        networks
  enforce-first-as        Enforce the first AS for EBGp routes
  local-as                Assign local-as number to neighbor
  maxas-limit             Impose limit on number of ASes in AS-PATH attribute
  next-hop-self           Disable the next hop calculation for this neighbor
  password                Enable TCP-MD5 password protection
  peer-group              Create Peer Group
  remote-as               Specify a BGP neighbor
  remove-private-as       Remove private AS number from outbound updates
  shutdown                Administratively shut down this neighbor
  soft-reconfiguration    Per neighbor soft reconfiguration
  timers                  BGP per neighbor timers
  update-source           Source of routing updates
```

To assign a neighbor to a specified peer group in BGP address-family IPv6 unicast configuration mode and view available options:

```

device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv6 unicast
device(config-bgp-ipv6u)# neighbor 2001:700:122:57::57 ?
Possible completions:
  activate                Allow exchange of route in the current family mode
  allowas-in              Disables the AS_PATH check of the routes learned
                          from the AS
  capability              Advertise capability to the peer
  default-originate       Originate default route to peer
  filter-list             Establish BGP filters
  maximum-prefix          Maximum number of prefix accept from this peer
  prefix-list             Prefix List for filtering routes
  route-map               Apply route map to neighbor
  route-reflector-client  Configure a neighbor as Route Reflector client
  send-community          Send community attribute to this neighbor
  unsuppress-map          Route-map to selectively unsuppress suppressed
                          routes
  weight                  Set default weight for routes from this neighbor
    
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.

## neighbor (OSPF)

Manually configures a neighbor.

**Syntax** `neighbor A.B.C.D`

`no neighbor`

**Command Default** Neighbors are not configured.

**Parameters** *A.B.C.D*

IPv4 address of the neighbor.

**Modes** OSPF VRF router configuration mode

**Usage Guidelines** This command is typically used in point-to-point networks.

OSPF Hellos must use a unicast address, not broadcast or multicast packets.

Enter **no neighbor***A.B.C.D* to remove the specified neighbor.

**Examples** To configure a neighbor whose IPv4 address is 1.1.1.1:

```
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)# router ospf
switch(config-router-ospf-vrf-default-vrf)# neighbor 1.1.1.1
```

## neighbor activate

Enables the exchange of information with BGP neighbors and peer groups.

**Syntax** **neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **activate**

**no neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **activate**

**Command Default** Disabled.

**Parameters** ***ip-address***

Specifies the IPv4 address of the neighbor

***ipv6-address***

Specifies the IPv6 address of the neighbor

***peer-group-name***

Specifies a peer group.

**Modes** BGP address-family IPv4 unicast configuration mode.

BGP address-family IPv6 unicast configuration mode.

**Usage Guidelines** Use the **no** form of this command to disable the exchange of an address with a BGP neighbor or peer group.

**Examples** To establish a BGP session with a BGP neighbor with the IPv6 address 2001:2018:8192::125.

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv6 unicast
device(config-bgp-ipv6u)# neighbor 2001:2018:8192::125 neighbor activate
```

**History**

Release version	Command history
5.0.0	This command was introduced.

# neighbor advertisement-interval

Enables changes to interval over which a specified neighbor or peer-group holds route updates before forwarding them.

**Syntax** **neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **advertisement-interval** *seconds*  
**no neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **advertisement-interval** *seconds*

**Command Default** The default is 0.

**Parameters**

- ip-address*** IPv4 address of the neighbor
- ipv6-address*** IPv6 address of the neighbor
- peer-group-name*** Peer group name configured by the **neighbor** *peer-group-name* command.
- seconds*** Range is from 0 through 3600.

**Modes** BGP configuration mode

**Examples**

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 advertisement-interval 60
```

History	Release version	Command history
	5.0.0	This command was modified to add support for IPv6.

## neighbor allowas-in

Disables the AS\_PATH check function for routes learned from a specified location so that BGP does not reject routes that contain the recipient BGP speaker's AS number.

**Syntax** `neighbor {ip-address | ipv6-address | peer-group-name } neighbor allowas-in number`

`no neighbor allowas-in`

**Command Default** The AS\_PATH check function is enabled and any route whose path contains the speaker's AS number is rejected as a loop.

**Parameters** *ip-address*

Specifies the IP address of the neighbor

*ipv6-address*

Specifies the IPv6 address of the neighbor

*peer-group-name*

Specifies a peer group.

*number*

Specifies the number of times that the AS path of a received route may contain the recipient BGP speaker's AS number and still be accepted. Valid values are one through ten.

**Modes** BGP address-family IPv4 unicast configuration mode.

BGP address-family IPv6 unicast configuration mode.

**Usage Guidelines** Use the **no** form of this command to re-enable the AS\_PATH check function.

**Examples** To specify that the AS path of a received route may contain the recipient BGP speaker's AS number three times and still be accepted.

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv6 unicast
device(config-bgp-ipv6u)# neighbor 2001:2018:8192::125 allowas-in 3
```

**History**

Release version	Command history
5.0.0	This command was introduced.



# neighbor as-override

Replaces the autonomous system number (ASN) of the originating router with the ASN of the sending BGP router.

**Syntax** `neighbor { ip-address | ipv6-address | peer-group-name } as-override`

`no neighbor as-override`

**Parameters** *ip-address*

IPv4 address of the neighbor

*ipv6-address*

IPv6 address of the neighbor

*peer-group-name*

Peer group name configured by the `neighbor peer-group-name` command.

**Modes** BGP configuration mode

**Usage Guidelines** Use this command to replace the ASN of the originating router with the ASN of the sending BGP router.

BGP loop prevention verifies the ASN in the AS path. If the receiving router sees its own ASN in the AS path of the received BGP packet, the packet is dropped. The receiving router assumes that the packet originated from its own AS and has reached the place of origination. This can be a significant problem if the same ASN is used among various sites, preventing sites with identical ASNs from being linked by another ASN. In this case, routing updates are dropped when another site receives them.

Use the **no** form of this command to disable this feature.

**Examples** To change an advertisement interval:

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 as-override
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for IPv6.

## neighbor capability as4

Enables or disables support for 4-byte autonomous system numbers (ASNs) at the neighbor or peer-group level.

**Syntax** `neighbor { ip-address | ipv6-address | peer-group-name } capability as4 [ enable | disable ]`

`no neighbor capability as4`

**Command Default** Four-byte ASNs are disabled by default.

**Parameters** *ip-address*

IPv4 address of the neighbor

*ipv6-address*

IPv6 address of the neighbor

*peer-group-name*

Peer group name configured by the `neighbor peer-group-name` command.

*enable*

Enables 4-byte numbering.

*disable*

Disables 4-byte numbering.

**Modes** BGP configuration mode

**Usage Guidelines** 4-byte ASNs are first considered at the neighbor, then at the peer group, and finally at the global level. Use the **disable** keyword or the **no** form of this command to remove all neighbor capability for AS4.

**Examples**

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 capability as4 enable
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for IPv6.

# neighbor capability orf prefixlist

Advertises outbound route filter (ORF) capabilities to peer routers.

**Syntax** `neighbor { ip_address | ipv6_address | peer-group-name } capability orf prefixlist [ receive | send ]`  
**no neighbor capability orf prefixlist**

**Command Default** ORF capabilities are not advertised to a peer router.

**Parameters**

- ip\_address** Specifies the IPv4 address of the neighbor
- ipv6\_address** Specifies the IPv6 address of the neighbor
- peer-group-name** Specifies a peer group.
- receive** Enables the ORF prefix list capability in receive mode.
- send** Enables the ORF prefix list capability in send mode.

**Modes** BGP address-family IPv4 unicast configuration mode.  
 BGP address-family IPv6 unicast configuration mode.

**Usage Guidelines** 4-byte ASNs are first considered at the neighbor, then at the peer group, and finally at the global level.  
 Use the **no** form of this command to disable ORF capabilities.

**Examples** To advertise the ORF send capability to a neighbor with the IP address 10.11.12.13.

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# neighbor 10.11.12.13 capability orf prefixlist send
```

To advertise the ORF receive capability to a neighbor with the IPv6 address 2001:2018:8192::125.

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv6 unicast
device(config-bgp-ipv6u)# neighbor 2001:2018:8192::125 capability orf prefixlist
receive
```

## History

Release version	Command history
5.0.0	This command was introduced.

## neighbor default-originate

Configures the device to send the default route 0.0.0.0 to a neighbor.

<b>Syntax</b>	<b>neighbor</b> { <i>ip-address</i>   <i>ipv6-address</i>   <i>peer-group-name</i> } <b>default-originate</b> [ <b>route-map</b> <i>map-name</i> ]  <b>no neighbor</b>				
<b>Parameters</b>	<p><b><i>ip-address</i></b> IPv4 address of the neighbor</p> <p><b><i>ipv6-address</i></b> IPv6 address of the neighbor</p> <p><b><i>peer-group-name</i></b> Peer group name configured by the <b>neighbor</b> <i>peer-group-name</i> command.</p> <p><b>route-map</b> Optionally injects the default route conditionally, depending on the match conditions in the route map.</p> <p><b><i>map-name</i></b> Name of the route map.</p>				
<b>Modes</b>	BGP address-family IPv4 unicast configuration mode BGP address-family IPv6 unicast configuration mode				
<b>Usage Guidelines</b>	Use the <b>no</b> form of the command to restore the defaults.				
<b>Examples</b>	<pre>device(config)# rbridge-id 10 device(config-rbridge-id-10)# router bgp device(config-bgp-router)# address-family ipv4 unicast device(config-bgp-ipv4u)# neighbor 10.11.12.13 default-originate route-map myroutemap</pre>				
<b>History</b>	<table border="1"> <thead> <tr> <th>Release version</th> <th>Command history</th> </tr> </thead> <tbody> <tr> <td>5.0.0</td> <td>This command was modified to add support for the IPv6 address family.</td> </tr> </tbody> </table>	Release version	Command history	5.0.0	This command was modified to add support for the IPv6 address family.
Release version	Command history				
5.0.0	This command was modified to add support for the IPv6 address family.				
<b>Related Commands</b>	<a href="#">route-map</a>				

# neighbor description

Specifies a name for a neighbor.

**Syntax** `neighbor { ip-address | ipv6-address | peer-group-name } description string`  
`no neighbor { ip-address | peer-group-name } description string`

**Parameters**

- ip-address** IPv4 address of the neighbor
- ipv6-address** IPv6 address of the neighbor
- peer-group-name** Peer group name configured by the `neighbor peer-group-name` command.
- description string** Specifies the name of the neighbor, an alphanumeric string up to 220 characters long.

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of this command to remove the name.

**Examples**

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 description mygoodneighbor
```

History	Release version	Command history
	5.0.0	This command was modified to add support for IPv6.

## neighbor ebgp-multihop

Allows EBGP neighbors that are not on directly connected networks and sets an optional maximum hop count.

**Syntax** `neighbor { ip-address | ipv6-address | peer-group-name } ebgp-multihop [ max-hop-count ]`

`no neighbor { ip-address | ipv6-address | peer-group-name } ebgp-multihop`

**Parameters** *ip-address*

IPv4 address of the neighbor

*ipv6-address*

IPv6 address of the neighbor

*peer-group-name*

Peer group name configured by the `neighbor peer-group-name` command.

*max-hop-count*

Maximum hop count (optional). Range is from 1 through 255.

**Modes** BGP configuration mode

**Usage Guidelines** Use the `no` form of this command to disable this feature.

**Examples**

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 ebgp-multihop 20
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for IPv6.

## neighbor enforce-first-as (BGP)

Ensures that a device requires the first ASN listed in the AS\_SEQUENCE field of an AS path-update message from EBGP neighbors to be the ASN of the neighbor that sent the update.

**Syntax** **neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **enforce-first-as** [ **enable** | **disable** ]

**no neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **enforce-first-as** [ **enable** | **disable** ]

**Command Default** This feature is disabled: A device does not require the first ASN listed in the AS\_SEQUENCE field of an AS path-update message from EBGP neighbors to be the ASN of the neighbor that sent the update.

**Parameters**

- ip-address*** IPv4 address of the neighbor
- ipv6-address*** IPv6 address of the neighbor
- peer-group-name*** Peer group name configured by the **neighbor** *peer-group-name* command.
- enable** Enables this feature.
- disable** Disables this feature.

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of this command to disable this requirement globally for the device.

**Examples**

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 enforce-first-as enable
```

History	Release version	Command history
	5.0.0	This command was modified to add support for IPv6.

## neighbor filter-list

Specifies a filter list to be applied to updates from or to the specified neighbor.

**Syntax** `neighbor { ip-address | ipv6-address | peer-group-name } filter-list ip-prefix-list-name [ in | out ]`

`no neighbor { ip-address | ipv6-address | peer-group-name } filter-list ip-prefix-list-name [ in | out ]`

**Parameters** *ip-address*

IPv4 address of the neighbor

*ipv6-address*

IPv6 address of the neighbor

*peer-group-name*

Peer group name configured by the `neighbor peer-group-name` command.

*ip-prefix-list-name*

Name of the filter list.

**in**

Specifies that the list is applied on updates received from the neighbor.

**out**

Specifies that the list is applied on updates sent to the neighbor.

**Modes** BGP address-family IPv4 unicast configuration mode

BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** Use the **no** form of the command to restore the defaults.

**Examples**

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# neighbor 10.11.12.13 filter-list myfilterlist out
```

To specify that filter list “2” be applied to updates from a neighbor with the IPv6 address 2001:2018:8192::125

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv6 unicast
device(config-bgp-ipv6u)# neighbor 2001:2018:8192::125 filter-list 2 in
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.



## neighbor local-as

Causes the device to prepend the local autonomous system number (ASN) automatically to routes received from an EBGP peer.

**Syntax** `neighbor { ip-address | ipv6-address | peer-group-name } local-as num [ no-prepend ]`  
`no neighbor { ip-address | ipv6-address | peer-group-name } local-as num [ no-prepend ]`

**Parameters**

- ip-address** IPv4 address of the neighbor
- ipv6-address** IPv6 address of the neighbor
- peer-group-name** Peer group name configured by the `neighbor peer-group-name` command.
- num** Local ASN. Range is from 1 through 4294967295.
- no-prepend** Causes the device to stop pre-pending the selected ASN.

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of this command to remove the local ASN.

**Examples** To ensure that a device prepends the local ASN:

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 local-as 100
```

To stop the device from pre-pending the selected ASN:

```
device(config-bgp-router)# neighbor 10.11.12.13 local-as 100 no-prepend
```

### History

Release version	Command history
5.0.0	This command was modified to add support for IPv6.

## neighbor maxas-limit in

Causes the device to discard routes received in UPDATE messages if those routes exceed a maximum AS path length.

**Syntax** `neighbor { ip-address | ipv6-address | peer-group-name } maxas-limit in { num | disable }`

`no neighbor { ip-address | ipv6-address | peer-group-name } maxas-limit in { num | disable }`

**Command Default** Disabled.

**Parameters** *ip-address*

IPv4 address of the neighbor

*ipv6-address*

IPv6 address of the neighbor

*peer-group-name*

Peer group name configured by the `neighbor peer-group-name` command.

*num*

Maximum length of the AS path. Range is from 0 through 300. The default is 300.

**disable**

Prevents a neighbor from inheriting the configuration from the peer group or global configuration and instead uses the default system value.

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of this command to remove this configuration at the global level.

**Examples** To change the length of the maximum allowed AS path length from the default:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 maxas-limit in 200
```

To prevent a neighbor from inheriting the configuration from the peer group or global configuration and instead use the default system value:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 2001:2018:8192::125 maxas-limit in disable
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for IPv6.

# neighbor maximum-prefix

Specifies the maximum number of IP network prefixes (routes) that can be learned from a specified neighbor or peer group.

**Syntax** **neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **maximum-prefix** *num* [ *threshold* ] [ **teardown** ]

**no neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **maximum-prefix** *num* [ *threshold* ] [ **teardown** ]

**Parameters**

***ip-address*** IPv4 address of the neighbor

***ipv6-address*** IPv6 address of the neighbor

***peer-group-name*** Peer group name configured by the **neighbor peer-group-name** command.

***num*** Maximum number of IP prefixes that can be learned. Range is from 0 through 4294967295. Default is 0 (unlimited).

***threshold*** Specifies the percentage of the value specified by *num* that causes a syslog message to be generated. Range is from 1 through 100. Default is 100.

**teardown** Tears down the neighbor session if the maximum number of IP prefixes is exceeded.

**Modes** BGP address-family IPv4 unicast configuration mode  
BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** Use the **no** form of the command to restore the defaults.

**Examples**

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# neighbor 10.11.12.13 maximum-prefix 100000 threshold 80
```

History	Release version	Command history
	5.0.0	This command was modified to add support for the IPv6 address family.

## neighbor next-hop-self

Causes the device to list itself as the next hop in updates that are sent to the specified neighbor.

**Syntax** `neighbor { ip-address | ipv6-address | peer-group-name } next-hop-self [ always ]`

`no neighbor { ip-address | ipv6-address | peer-group-name } next-hop-self [ always ]`

**Parameters** *ip-address*

IPv4 address of the neighbor

*ipv6-address*

IPv6 address of the neighbor

*peer-group-name*

Peer group name configured by the `neighbor peer-group-name` command.

*always*

Enables this feature for route reflector (RR) routes.

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of this command to remove this configuration at the global level.

**Examples**

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 next-hop-self
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for IPv6.

# neighbor password

Specifies an MD5 password for securing sessions between the device and a neighbor.

**Syntax** **neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **password** *string*  
**no neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **password** *string*

**Parameters** ***ip-address*** IPv4 address of the neighbor  
***ipv6-address*** IPv6 address of the neighbor  
***peer-group-name*** Peer group name configured by the **neighbor** *peer-group-name* command.  
***string*** Alphanumeric characters. Range is from 1 through 63.

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of this command to remove this configuration at the global level.

**Examples**

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 password s0M3P@55W0Rd
```

History	Release version	Command history
	5.0.0	This command was modified to add support for IPv6.

## neighbor peer-group

Enables the creation of a BGP peer group.

**Syntax** **neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **peer-group** *string*  
**no neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **peer-group** *string*

**Parameters**

- ip-address*** IPv4 address of the neighbor
- ipv6-address*** IPv6 address of the neighbor
- peer-group-name*** Peer group name configured by the **neighbor** *peer-group-name* command.
- string*** Alphanumeric characters. Range is from 1 through 63.

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of this command to remove the peer group.

### Examples

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 peer-group mypeergroup1
```

### History

Release version	Command history
5.0.0	This command was modified to add support for IPv6.

# neighbor prefix-list

Filters the outgoing and incoming route updates to or from a particular BGP neighbor according to IP address and mask length.

**Syntax** `neighbor { ip-address | ipv6-address | peer-group-name } prefix-list string { in | out }`  
`no neighbor { ip-address | ipv6-address | peer-group-name } prefix-list string { in | out }`

**Parameters**

- ip-address** IPv4 address of the neighbor
- ipv6-address** IPv6 address of the neighbor
- peer-group-name** Peer group name configured by the `neighbor peer-group-name` command.
- string** Name of the prefix list.
- in** Applies the filter in incoming routes.
- out** Applies the filter in outgoing routes.

**Modes** BGP address-family IPv4 unicast configuration mode  
 BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** Use the `no` form of the command to restore the defaults.

## Examples

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# neighbor 10.11.12.13 prefix-list myprefixlist in
```

To apply the prefix list myprefixlist to outgoing advertisements to neighbor 2001:2018:8192::125.

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# address-family ipv6 unicast
device(config-bgp-ipv6u)# neighbor 2001:2018:8192::125 prefix-list myprefixlist out
```

## History

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.

## neighbor remote-as

Specifies the autonomous system (AS) in which a remote neighbor resides.

**Syntax** **neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **remote-as** *num*

**no neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **remote-as** *num*

**Parameters** ***ip-address***

IPv4 address of the neighbor

***ipv6-address***

IPv6 address of the neighbor

***peer-group-name***

Peer group name configured by the **neighbor** *peer-group-name* command.

***num***

Remote AS number (ASN). Range is from 1 through 4294967295.

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of this command to remove the neighbor from the AS.

**Examples**

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 remote-as 100
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for IPv6.



## neighbor remove-private-as

Configures a device to remove private autonomous system numbers (ASNs) from UPDATE messages that the device sends to a neighbor.

**Syntax** **neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **remove-private-as**

**no neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **remove-private-as**

**Parameters** ***ip-address***

IPv4 address of the neighbor

***ipv6-address***

IPv6 address of the neighbor

***peer-group-name***

Peer group name configured by the **neighbor** *peer-group-name* command.

**Modes** BGP configuration mode

**Usage Guidelines** The device will remove ASNs 64512 through 65535 (the well-known BGP4 private ASNs) from the AS-path attribute in UPDATE messages that the device sends to a neighbor.

Use the **no** form of this command to restore the default.

**Examples**

```
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 remove-private-as
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for IPv6.

## neighbor route-map

Filters the outgoing and incoming route updates to or from a particular BGP neighbor according to a set of attributes defined in a route map.

<b>Syntax</b>	<b>neighbor</b> { <i>ip-address</i>   <i>ipv6-address</i>   <i>peer-group-name</i> } <b>route-map</b> { <i>in string</i>   <i>out string</i> }
	<b>no neighbor</b> { <i>ip-address</i>   <i>ipv6-address</i>   <i>peer-group-name</i> } <b>route-map</b> { <i>in string</i>   <i>out string</i> }
<b>Parameters</b>	
<b><i>ip-address</i></b>	IPv4 address of the neighbor
<b><i>ipv6-address</i></b>	IPv6 address of the neighbor
<b><i>peer-group-name</i></b>	Peer group name configured by the <b>neighbor</b> <i>peer-group-name</i> command.
<b>in</b>	Applies the filter on incoming routes.
<b><i>string</i></b>	Name of the route map.
<b>out</b>	Applies the filter on outgoing routes.
<b>Modes</b>	BGP address-family IPv4 unicast configuration mode BGP address-family IPv6 unicast configuration mode
<b>Usage Guidelines</b>	Use the <b>no</b> form of the command to restore the defaults.

### Examples

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# neighbor 10.11.12.13 route-map myroutemap out
```

To apply a route map named myroutemap to a BGP incoming route from 2001:2018:8192::125

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# address-family ipv6 unicast
device(config-bgp-ipv6u)# neighbor 2001:2018:8192::125 route-map myroutemap in
```

### History

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.

### Related Commands

[route-map](#)

# neighbor route-reflector-client

Configures a neighbor to be a route-reflector client.

**Syntax** **neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **route-reflector-client**  
**no neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **route-reflector-client**

**Parameters** ***ip-address***  
 IPv4 address of the neighbor  
***ipv6-address***  
 IPv6 address of the neighbor  
***peer-group-name***  
 Peer group name configured by the **neighbor** *peer-group-name* command.

**Modes** BGP address-family IPv4 unicast configuration mode  
 BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** Use this command on a host device to configure a neighbor to be a route-reflector client. Once configured, the host device from which the configuration is made acts as a route-reflector server.  
 Use the **no** form of this command to restore the default.

**Examples**

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# neighbor 10.11.12.13 route-reflector-client
```

History	Release version	Command history
	5.0.0	This command was modified to add support for the IPv6 address family.

## neighbor send-community

Enables sending the community attribute in updates to the specified BGP neighbor.

<b>Syntax</b>	<b>neighbor</b> { <i>ip-address</i>   <i>ipv6-address</i>   <i>peer-group-name</i> } <b>send-community</b> [ <b>both</b>   <b>extended</b>   <b>standard</b> ]
	<b>no neighbor</b> { <i>ip-address</i>   <i>ipv6-address</i>   <i>peer-group-name</i> } <b>send-community</b> [ <b>both</b>   <b>extended</b>   <b>standard</b> ]
<b>Command Default</b>	The device does not send community attributes.
<b>Parameters</b>	<p><b><i>ip-address</i></b> IPv4 address of the neighbor</p> <p><b><i>ipv6-address</i></b> IPv6 address of the neighbor</p> <p><b><i>peer-group-name</i></b> Peer group name configured by the <b>neighbor</b> <i>peer-group-name</i> command.</p> <p><b>both</b> Sends both standard and extended attributes.</p> <p><b>extended</b> Sends extended attributes.</p> <p><b>standard</b> Sends standard attributes.</p>
<b>Modes</b>	BGP address-family IPv4 unicast configuration mode BGP address-family IPv6 unicast configuration mode
<b>Usage Guidelines</b>	Use the <b>no</b> form of the command to restore the defaults.

### Examples

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# neighbor 10.11.12.13 send-community standard
```

To send extended communities attributes to a BGP neighbor at IPv6 address 2001:2018:8192::125.

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# address-family ipv6 unicast
device(config-bgp-ipv6u)# neighbor 2001:2018:8192::125 send-community extended
```

### History

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.

### Related Commands

[route-map](#)

# neighbor shutdown

Causes a device to shut down the session administratively with its neighbor.

**Syntax** `neighbor { ip-address | ipv6-address | peer-group-name } shutdown { generate-rib-out }`  
`no neighbor { ip-address | ipv6-address | peer-group-name } shutdown { generate-rib-out }`

**Parameters**

- ip-address** IPv4 address of the neighbor
- ipv6-address** IPv6 address of the neighbor
- peer-group-name** Peer group name configured by the `neighbor peer-group-name` command.
- generate-rib-out** When a peer is put into shutdown state, Routing Information Base (RIB) outbound routes are not produced for that peer. Use this option to produce those routes.

**Modes** BGP configuration mode

**Usage Guidelines** Shutting down a session lets you configure the neighbor and save the configuration without the need to establish a session with that neighbor.

Use the **no** form of this command to restore the defaults.

**Examples** To cause a device to shut down the session administratively with its neighbor:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 shutdown
```

To cause a device to shut down the session administratively with its neighbor and generate RIB outbound routes:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 shutdown generate-rib-out
```

## History

Release version	Command history
5.0.0	This command was modified to add support for IPv6.

## neighbor soft-reconfiguration inbound

Stores all the route updates received from a neighbor.

**Syntax** `neighbor { ip-address | ipv6-address | peer-group-name } soft-reconfiguration inbound`

`no neighbor { ip-address | ipv6-address | peer-group-name } soft-reconfiguration inbound`

**Parameters** *ip-address*

IPv4 address of the neighbor

*ipv6-address*

IPv6 address of the neighbor

*peer-group-name*

Peer group name configured by the `neighbor peer-group-name` command.

**Modes** BGP configuration mode

**Usage Guidelines** Soft reconfiguration stores all the route updates received from a neighbor. If you request a soft reset of inbound routes, the software compares the policies against the stored route updates, instead of requesting the neighbor's BGP4 or BGP4+ route table or resetting the session with the neighbor.

Use the **no** form of the command to disable this feature.

**Examples**

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 soft-configuration inbound
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for IPv6.

# neighbor timers

Specifies how frequently a device sends KEEPALIVE messages to its BGP neighbors, as well as how long the device waits for KEEPALIVE or UPDATE messages before concluding that a neighbor is dead.

**Syntax** **neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **timers keep-alive** *value* **hold-time** *value*  
**no neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **timers keep-alive** *value* **hold-time** *value*

**Command Default** Refer to the Parameters section for specific defaults.

**Parameters**

- ip-address*** IPv4 address of the neighbor
- ipv6-address*** IPv6 address of the neighbor
- peer-group-name*** Peer group name configured by the **neighbor** *peer-group-name* command.
- value*** Keep-alive timer. Range is from 0 through 65535 seconds. The default is 60.
- value*** Hold timer. Range is from 0 through 65535 seconds. The default is 180.

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of the command to restore the defaults.

**Examples**

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 timers keep-alive 120 hold-time 360
```

History	Release version	Command history
	5.0.0	This command was modified to add support for IPv6.

## neighbor unsuppress-map

Removes route suppression from neighbor routes when those routes have been suppressed as a result of aggregation. All routes matching route-map rules are unsuppressed.

<b>Syntax</b>	<b>neighbor</b> { <i>ip-address</i>   <i>ipv6-address</i>   <i>peer-group-name</i> } <b>unsuppress-map</b> <i>string</i> <b>no neighbor</b> { <i>ip-address</i>   <i>ipv6-address</i>   <i>peer-group-name</i> } <b>unsuppress-map</b> <i>string</i>				
<b>Parameters</b>	<p><b><i>ip-address</i></b> IPv4 address of the neighbor.</p> <p><b><i>ipv6-address</i></b> IPv6 address of the neighbor</p> <p><b><i>peer-group-name</i></b> Peer group name configured by the <b>neighbor</b> <i>peer-group-name</i> command.</p> <p><b><i>string</i></b> Name of the route map.</p>				
<b>Modes</b>	BGP address-family IPv4 unicast configuration mode BGP address-family IPv6 unicast configuration mode				
<b>Usage Guidelines</b>	Use the <b>no</b> form of the command to restore the defaults.				
<b>Examples</b>	<pre>device# configure terminal device(config)# rbridge-id 10 device(config-rbridge-id-10)# router bgp device(config-bgp-router)# address-family ipv4 unicast device(config-bgp-ipv4u)# neighbor 10.11.12.13 unsuppress-map myroutemap</pre>				
<b>History</b>	<table border="1"> <thead> <tr> <th>Release version</th> <th>Command history</th> </tr> </thead> <tbody> <tr> <td>5.0.0</td> <td>This command was modified to add support for the IPv6 address family.</td> </tr> </tbody> </table>	Release version	Command history	5.0.0	This command was modified to add support for the IPv6 address family.
Release version	Command history				
5.0.0	This command was modified to add support for the IPv6 address family.				
<b>Related Commands</b>	<a href="#">route-map</a>				



# neighbor update-source

Configures the device to communicate with a neighbor through a specified interface.

**Syntax** `neighbor { ip-address | ipv6-address | peer-group-name } update-source { ip-address | <N> gigabitethernet | loopback num | ve-interface vlan_id }`

`no neighbor { ip-address | ipv6-address | peer-group-name } update-source { ip-address | <N> gigabitethernet | loopback num | ve-interface vlan_id }`

<b>Parameters</b>	<b>ip-address</b>	IPv4 address of the neighbor
	<b>ipv6-address</b>	IPv6 address of the neighbor
	<b>peer-group-name</b>	Peer group name configured by the <code>neighbor peer-group-name</code> command.
	<b>ip-address</b>	IP address of the update source.
	<b>&lt;N&gt;gigabitethernet</b>	Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N> <b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.
	<b>rbridge-id</b>	Specifies an RBridge ID.
	<b>slot</b>	Specifies a valid slot number.
	<b>port</b>	Specifies a valid port number.
	<b>loopback num</b>	Specifies a loopback interface.
	<b>ve-interface vlan_id</b>	Specifies a virtual Ethernet VLAN interface.

**Modes** BGP configuration mode

**Usage Guidelines** Use the **no** form of the command to restore the defaults.

## Examples

```
device#configure terminal
device#(config)# rbridge-id 10
device#(config-rbridge-id-10)# router bgp
device(config-bgp-router)# neighbor 10.11.12.13 update-source tengigabitethernet
15/1/1
```

## History

Release version	Command history
5.0.0	This command was modified to add support for IPv6.

## neighbor weight

Specifies a weight that the device will add to routes that are received from the specified BGP neighbor.

**Syntax** **neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **weight** *num*  
**no neighbor** { *ip-address* | *ipv6-address* | *peer-group-name* } **weight** *num*

**Command Default** The default for *num* is 0.

**Parameters**

- ip-address***  
IPv4 address of the neighbor.
- ipv6-address***  
IPv6 address of the neighbor
- peer-group-name***  
Name of the peer group.
- num***  
Value from 1 through 65535.

**Modes** BGP address-family IPv4 unicast configuration mode  
 BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** BGP4 prefers larger weights over smaller weights.  
 Use the **no** form of the command to restore the defaults.

### Examples

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# neighbor 10.11.12.13 weight 100
```

### History

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.

# network (BGP)

Configures the device to advertise a network.

**Syntax** `network network/mask [ route-map map-name ] [ weight num ] [ backdoor ]`

`no network network/mask [ route-map map-name ] [ weight num ] [ backdoor ]`

**Command Default** No network is advertised.

**Parameters** *network/mask*

Network and mask in CIDR notation.

*map-name*

Name of the route map with which to set or change BGP4 attributes for the network to be advertised.

*num*

Weight to be added to routes to this network. Range is 0 through 65535. The default is 0.

*backdoor*

Changes administrative distance of the route to this network from the EBGp administrative distance (the default is 20) to the local BGP4 weight (the default is 200), tagging the route as a backdoor route.

**Modes** BGP address-family IPv4 unicast configuration mode

BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** BGP4 prefers larger weights over smaller weights.

Use the **no** form of the command to restore the defaults.

## Examples

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router bgp
switch(config-bgp-router)# address-family ipv4 unicast
switch(config-bgp-ipv4u)# network 10.11.12.13/30 route-map myroutemap
```

To import the IPv6 prefix 2001:db8::/32 into the BGP4+ database and set a weight of 300:

```
switch# config
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# address-family ipv6 unicast
switch(config-bgp-ipv4u)# network 2001:db8::/32 weight 300
```

## History

Release version	Command history
NOS v5.0.0	This command was modified to add support for the IPv6 address family.

## Related Commands

[route-map](#)

## next-hop-enable-default

Configures the device to use the default route as the next hop.

**Syntax** **next-hop-enable-default**

**no next-hop-enable-default**

**Modes** BGP address-family IPv4 unicast configuration mode  
BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** Use the **no** form of this command to restore the default.

**Examples**

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# next-hop-enable-default
```

**History**

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.

# next-hop-recursion

Enables recursive next-hop lookups.

**Syntax**    **next-hop-recursion**

**no next-hop-recursion**

**Modes**    BGP address-family IPv4 unicast configuration mode

BGP address-family IPv6 unicast configuration mode

**Usage Guidelines**    If the BGP next hop is not the immediate next hop, a recursive route lookup in the IP routing information base (RIB) is needed. With recursion, a second routing lookup is required to resolve the exit path for destination traffic. Use this command to enable recursive next-hop lookups.

Use the **no** form of this command to restore the default.

## Examples

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# next-hop-recursion
```

## History

Release version	Command history
5.0.0	This command was modified to add support for the IPv6 address family.

## nonstop-routing

Enables nonstop-routing (NSR) for OSPFv3.

**Syntax** **nonstop-routing**

**no nonstop-routing**

**Command Default** Enabled

**Modes** OSPFv3 VRF router configuration mode

**Usage Guidelines** Use the **no** form of this command to disable non-stop routing.

**Examples** To enable NSR on a device:

```
switch# config
switch(config)# rbridge-id 122
switch(config-rbridge-id-122)# ipv6 router ospf
switch(config-ipv6-router-ospf-vrf-default-vrf)# nonstop-routing
```

### History

Release version	Command history
5.0.0	This command was introduced.

### Related Commands

[graceful-restart helper \(OSPFv3\)](#)

# nport

Enables N\_Port configuration mode for a specific N\_Port ID for Access Gateway mode.

**Syntax** `nport port`

`no nport port`

**Parameters** `port`

N\_Port number supported by hardware platform.

**Modes** Access Gateway (AG) configuration

**Usage Guidelines** This command enables N\_Port configuration mode for a specific N\_Port number so that you can map VF\_Ports to the N\_Port (Port Mapping).

To use this command, you must be in Access Gateway (AG) configuration mode. This command enables N\_Port configuration mode for the specific N\_Port. While in this mode, you can map VF\_Ports to the N\_Port. Enter the N\_Port in RBridge ID/port group ID/N\_Port ID format, such as 3/0/4 for Rbridge 3, port group 0 (default port group), and N\_Port 4.

**Examples** Enabling N\_Port configuration mode for N\_Port 4 while in AG configuration mode.

```
sw0(config-rbridge-id-2-ag)# nport 2/0/4
sw0(config-rbridge-id-2-ag-nport-if-fi-2/0/4)#
```

**Related Commands** [map fport interface fcoe](#), [show ag](#)

## nport interface Fibrechannel

Adds or deletes N\_Ports in a specified port group for Access Gateway mode.

**Syntax** `nport interface Fibrechannel port`

`no nport interface Fibrechannel port`

**Parameters** *port*

N\_Port number supported by switch model.

**Modes** Port Grouping configuration mode

**Usage Guidelines** To use this command, you must be in Port Grouping configuration mode for a specific port group. Before adding an N\_Port to a port group, you must remove the N\_Port from its current port group unless the port resides in default port group 0 (pg 0). N\_Ports are identified by the format *rbridge-id/slot/N\_Port*, such as 3/0/4 for RBridge 3, slot 0, and N\_Port 4.

**Examples** Adding N\_Port 3/0/3 to port group 2 (pg 2):

```
sw0(config-rbridge-id-3-ag-pg-2)# nport interface Fibrechannel 3/0/3
```

Removing N\_Port 3/0/3 from port group 3 (pg 3)

```
sw0(config-rbridge-id-3-ag-pg-3)# nport interface Fibrechannel 3/0/3
```

**Related Commands** [pg](#), [show ag pg](#)



# nssa-translator

Configures Not So Stubby Area (NSSA) Type 7-to-Type 5 Link State Advertisement (LSA) translation.

**Syntax** **nssa-translator**

**no nssa-translator**

**Modes** OSPF VRF router configuration mode

**Usage Guidelines** Use this command to enable or disable NSSA Type 7-to-Type 5 LSA translation on the NSSA Area Border Router (ABR). Translation may be needed if routers within the NSSA need to know about external routes. However, disabling this translation can be useful when the router is an area border router with many NSSA areas, and does not need to export the NSSA external routes into the backbone

Enter **no nssa-translator** to disable NSSA Type 7-to-Type 5 translation.

**Examples** To disable NSAA Type 7-to-Type 5 LSA translation:

```
switch# configure
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)#router ospf
switch(config-router-ospf-vrf-default-vrf)# no nssa-translator
```

## nsx-controller client-cert

Generates or deletes a self-signed certificate for the VXLAN gateway.

**Syntax** `nsx-controller client-cert { generate | delete }`

**Parameters** **generate**

Generates a self-signed certificate for the VXLAN gateway.

**delete**

Deletes the certificate.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported in logical chassis cluster mode only.

**Examples** To generate a self-signed certificate for the VXLAN gateway:

```
switch# nsx-controller client-cert generate
```

## nsx-controller name

Creates an NSX controller connection profile or enters NSX controller configuration mode for an existing NSX controller connection profile.

**Syntax** `nsx-controller name`

`no nsx-controller name`

**Parameters** *name*

Specifies a name for the NSX controller. The name is an alphanumeric, 32-character-maximum string that can also contain hyphens and underscores.

**Modes** Global configuration mode

**Usage Guidelines** Only one NSX Controller connection profile can be configured.

This command is supported in logical chassis cluster mode only.

Use the **no** form of the command to delete an NSX controller connection profile. All active connections are closed, and all tunnels related to this NSX controller are deleted.

By default, a connection profile is inactive. To activate a profile, run the **activate** command in NSX controller configuration mode.

**Examples** To create an NSX controller profile named profile1:

```
switch# configure
switch(config)# nsx-controller profile1
```

## nsx-controller name reconnect

Reconnects the NSX controller.

<b>Syntax</b>	<b>nsx-controller name <i>name</i> reconnect</b>
<b>Parameters</b>	<b><i>name</i></b> Specifies the name for the NSX controller. The name is an alphanumeric, 32-character-maximum string that can also contain hyphens and underscores.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Use this command to reinitiate a connection to the specified NSX controller if the connection was broken. If the connection is already active, this command has no effect.  This command is available only for a switch that is in logical chassis cluster mode.  The specified NSX controller connection profile name must already exist.
<b>Examples</b>	To reconnect an NSX controller named nsx1:  <pre>sw0# nsx-controller name nsx1 reconnect</pre>

# ntp authentication-key

Creates an authentication key to associate with the NTP server.

**Syntax** `ntp authentication-key key-id md5 md5-string encryption-level enc_value`  
`no ntp authentication-key key-id`

**Command Default** The default encryption-level is 7.

**Parameters** *key-id*

Specifies an ID for an authentication key. The range is from 1 through 65535.

**md5 *md5-string***

Specifies a string for the MD5 message-digest algorithm. The string can be a maximum of 15 alphanumeric characters.

**encryption-level *enc\_value***

Defines the level of encryption for the NTP authentication key. The valid values are 0 and 7. The value 0 is clear text format and the value 7 is fully encrypted format.

**Modes** Global configuration mode

**Usage Guidelines** This command adds an NTP authentication key (made up of a ID and an MD5 string) to a list of authentication keys in the database.

The maximum number of configurable NTP authentication keys is five. You cannot configure a duplicate key ID with a different key string. Use the **no ntp authentication-key *key-id*** command to remove the specified authentication key.

Before downgrading the firmware to a version that does not support the encryption-level option, the encryption-level should be set to 0.

**Examples** To create an authentication key with an ID of 33 and an MD5 string called check:

```
switch# configure
switch(config)# ntp authentication-key 33 md5 check encryption-level 0
```

**Related Commands** [ntp server](#)

## ntp server

Specifies or adds an NTP server IP address and associates an authentication key to the server.

**Syntax** `ntp server ip-address [ key key-id ]`

`no ntp server ip-address [ key key-id ]`

**Command Default** The NTP server list is LOCL (no NTP server configured).

**Parameters** *ip-address*

Specifies the NTP server IPv4 IP address (dot-decimal notation) or the IPv6 IP address (hexadecimal colon-separated notation).

**key key-id**

Associates a key from the key list to the specified server. The range for a key ID is from 1 through 65535.

**Modes** Global configuration mode

**Usage Guidelines** Use this command to add an NTP server IPv4 or IPv6 address to a list of server IP addresses, or to associate an existing authentication key with an NTP server IP address.

The maximum number of NTP servers allowed is five.

Network Time Protocol (NTP) commands must be configured on each individual switch.

Use the `no ntp server ip-address` command to remove the specified NTP server IP address. Removing the current active NTP server resets the NTPstatus to "LOCL" until a new, active server is selected.

Use the `no ntp server ip-address key key-id` command to remove the key from the specified NTP IP address.

**Examples** To associate a configured key ID of 15 to an NTP server:

```
switch(config)# ntp server 192.168.10.1 key 15
```

To remove an NTP server from the current list of NTP servers:

```
switch(config)# no ntp server 192.168.10.1
```

**Related Commands** [ntp authentication-key](#), [show clock](#), [show ntp status](#)

# oscmd

Provides a command shell for selected Linux commands.

**Syntax** `oscmd Linuxcommand`

**Parameters** `Linuxcommand`

The following Linux commands are supported with **oscmd** :

<b>arp</b> [ -a ]	Displays the Address Resolution Protocol (ARP) tables.
<b>cat</b>	Concatenates files and displays to standard output.
<b>cp</b>	Copies files and directories in a file system.
<b>ftp</b>	Transfers files to and from a remote server.
<b>ifconfig</b> [ <i>netmask</i> ] [ <i>up</i> ]	Configures the active network interface.
<b>ls</b> [ -al ] [ <i>path</i> ]	Lists files and directories on the switch.
<b>mkdir</b> <i>dir</i>	Creates a directory.
<b>mv</b> [ <i>i</i> ] <i>file1 file2</i>	Renames a file or directory.
<b>rm</b> [ -rf ] <i>file</i>	Removes a file or directory.
<b>rmdir</b>	Removes a directory.
<b>tcpdump</b>	Analyzes network traffic. The following parameters are supported with the Network OS implementation. Refer to the Linux documentation for more information on how to use this command. <b>-AbdDeflKILnNOPqRStuUvxX</b> <ul style="list-style-type: none"> <li>• <b>-B</b> <i>buffer_size</i></li> <li>• <b>-c</b> <i>count</i></li> <li>• <b>-C</b> <i>file_size</i></li> <li>• <b>-G</b> <i>rotate_seconds</i></li> <li>• <b>-F</b> <i>file</i></li> <li>• <b>-i</b> <i>interface</i></li> <li>• <b>-m</b> <i>module</i></li> <li>• <b>-M</b> <i>secret</i></li> <li>• <b>-r</b> <i>file</i></li> <li>• <b>-s</b> <i>snaplen</i></li> <li>• <b>-T</b> <i>type</i></li> <li>• <b>-w</b> <i>file</i></li> <li>• <b>-W</b> <i>filecount</i></li> <li>• <b>-E</b> <i>spi@ipaddr</i></li> <li>• <b>-y</b> <i>datalinktype</i></li> <li>• <b>-z</b> <i>postrotate-command</i></li> <li>• <b>-Z</b> <i>user</i> [ <i>expression</i> ]</li> </ul>

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to execute selected Linux commands on the switch. Refer to the Linux man pages for more information on the supported commands.

The **oscmd** command is disabled under FIPS mode.

**Examples** To display the ARP table:

```
switch# oscmd arp -a
? (127.2.1.9) at ac:de:48:02:09:07 [ether] on eth2
? (127.2.1.7) at ac:de:48:02:07:07 [ether] on eth2
? (10.17.16.3) at 00:1b:ed:0b:90:00 [ether] on eth0
? (10.17.16.1) at 02:e0:52:5a:36:5c [ether] on eth0
? (10.17.19.14) at 00:14:22:20:5c:3c [ether] on eth0
? (127.2.2.9) at ac:de:48:02:09:08 [ether] on eth2
```

To copy a file to a remote server:

```
switch# oscmd rcp file root@127.2.1.8:
```

```
switch#
switch:FID128:root# telnet 127.2.1.8
```

```
Trying 127.2.1.8...
Connected to 127.2.1.8.
Escape character is '^]'.
Linux 2.6.34.6 (sw0) (0)
sw0 login: root
```

```
Password:
sw0:L2/0: >ls
```

```
.profile .rhosts file
```

To copy a file using secure copy:

```
switch# oscmd scp file file1 hegdes@10.31.2.27:
```

```
hegdes@10.31.2.27's password: file
100% 0 0.0KB/s 00:00 file1
100% 0 0.0KB/s 00:00
```



# overlay-gateway

Creates a VXLAN overlay gateway instance and enables VXLAN overlay gateway configuration mode.

**Syntax** `overlay-gateway name`

`no overlay-gateway name`

**Command Default** The default VXLAN overlay gateway setting for **type** is **nsx**.

**Parameters** *name*

Specifies a name for the VXLAN overlay gateway. Only one gateway instance can be configured. The name is an alphanumeric, 32-character-maximum string that can also contain hyphens and underscores.

**Modes** Global configuration mode

**Usage Guidelines** Use this command to create a VXLAN overlay gateway instance with the given name. An overlay network is a virtual network that is built on top of existing network Layer 2 and Layer 3 technologies. The objectives of setting up a gateway are:

- Configuring the source IP address
- Configuring the VLAN or VLANs
- Configuring MAC addresses to export to the VXLAN domain
- Enabling statistics collection for VLAN domains
- Enabling SPAN.

One you create the gateway instance, you enter VXLAN overlay gateway configuration mode, where you can configure other properties for this gateway. The key commands available in this mode are summarized below:

**TABLE 9** Key commands available in VXLAN overlay gateway configuration mode

Command	Description
<b>activate</b>	Activates a VXLAN overlay gateway instance.
<b>attach rbridge-id</b>	Assigns a range of RBridge IDs to a VXLAN overlay gateway instance.
<b>attach vlan</b>	Specifies exported VLANs or MAC addresses in VXLAN overlay gateway configurations
<b>enable statistics direction</b>	Enables per-VLAN statistics collection for a VXLAN overlay gateway instance.
<b>ip access-group</b>	Sets an IPv4 ACL for the gateway.
<b>ip interface loopback</b>	Sets the loopback port number for the overlay gateway instance.
<b>ip interface Ve</b>	Sets the IP address of a VXLAN overlay gateway instance.
<b>ipv6 access-group</b>	Sets an IPv6 ACL for the gateway.
<b>mac access-group</b>	Sets a MAC ACL for the gateway.

**TABLE 9** Key commands available in VXLAN overlay gateway configuration mode (Continued)

Command	Description
<b>map vlan vni</b>	In a VXLAN overlay gateway configuration that uses Layer 2 extension, associates VLANs with VXLAN Network Identifiers (VNIs).
<b>monitor session</b>	Enables switched port analyzer (SPAN) on one or all tunnels of a VXLAN gateway.
<b>sflow</b>	Enables sFlow monitoring of the tunnel endpoints for a VXLAN overlay gateway.
<b>site</b>	Configures a remote Layer 2 extension site in a VXLAN overlay gateway context.
<b>type</b>	Specifies whether a VXLAN overlay gateway uses NSX Controller integration or Layer 2 extension.

This command is allowed for a switch that is in logical chassis cluster mode only.

Only one VXLAN overlay gateway instance can be configured.

Use the **no overlay-gateway** command to delete the VXLAN overlay gateway instance from the cluster. All tunnels for the gateway are also deleted. There are no other **no** forms of this command.

By default, a VXLAN overlay gateway instance is inactive. To activate an instance, first configure its other properties (such as which R Bridges it attaches to), and then enter the **activate** command.

Note the following conditions related to changing the VXLAN gateway type:

- Before changing **type**, ensure that no R Bridge is attached to the gateway.
- If changing **type** from **nsx** to **layer2-extension**, ensure that there are no "attach vlan" configurations.
- If changing **type** from **layer2-extension** to **nsx**, ensure that no "map vlan" configurations are present.

#### NOTE

The running configuration always shows the setting for **type**, even the default value (**nsx**). This means that when an overlay gateway is created, "type nsx" automatically appears in the running configuration.

Note the following conditions for related commands:

- The **attach vlan** command is valid only when **type** is **nsx**.
- The **map vlan vni** command is valid only when **type** is **layer2-extension**.

**Examples** To create a VXLAN overlay gateway instance named "gateway1" and enter VXLAN overlay gateway configuration mode:

```
switch# config
switch(config)# overlay-gateway gateway1
switch(config-overlay-gw-gateway1)#
```

# Commands P through short-path-forwarding

---

## password-attributes

Configures global password attributes.

**Syntax** **password-attributes** [ **min-length** *minlen* ] [ **max-retry** *maxretry* ] [ **character-restriction** [ **upper** *numupper* ] [ **lower** *numlower* ] ] [ **numeric** *numdigits* ] [ **special-char** *numsplchars* ] ]

**no password-attributes** [ **min-length** *minlen* ] [ **max-retry** *maxretry* ] [ **character-restriction** ]

**Command Default** The default for *minlen* is 8. All other defaults are 0.

**Parameters** **min-length** *minlen*

Specifies the minimum length of the password. Valid values range from 8 through 32 characters. The default is 8 characters.

**max-retry** *maxretry*

Specifies the number of failed password logins permitted before a user is locked out. The lockout threshold range is 0 through 16. The default value is 0.

**character-restriction**

Configures the restriction on various types of characters.

**upper** *numupper*

Specifies the minimum number of uppercase alphabetic characters that must occur in the password. The default is 0, which means there is no restriction of uppercase characters.

**lower** *numlower*

Specifies the minimum number of lowercase alphabetic characters that must occur in the password. The default is 0, which means there is no restriction of lowercase characters.

**numeric** *numdigits*

Specifies the minimum number of numeric characters that must occur in the password. The number of numeric characters range is 0 through 32 characters. The default is 0.

**special-char** *numsplchars*

Specifies the number of punctuation characters that must occur in the password. All printable, nonalphanumeric punctuation characters, except colon (:) are allowed. The default value is 0.

**Modes** Global configuration mode

**Usage Guidelines** Enter **no password-attributes** *parameters* to set the specified password attributes to their default values.

**Examples** To configure global password attributes and to verify the configuration:

```
switch(config)# password-attributes max-retry 4
switch(config)# password-attributes character-restriction lower 2
switch(config)# password-attributes character-restriction upper 1 numeric 1 special-
char 1
switch(config)# exit
switch# show running-config password-attributes

password-attributes max-retry 4
password-attributes character-restriction upper 1
password-attributes character-restriction lower 2
password-attributes character-restriction numeric 1
password-attributes character-restriction special-char 1
```

To reset the character restriction attributes and to verify the configuration:

```
switch(config)# no password-attributes character-restriction lower
switch(config)# no password-attributes character-restriction upper
switch(config)# exit
switch# show running-config password-attributes

password-attributes max-retry 4
password-attributes character-restriction numeric 0
password-attributes character-restriction special-char 0
```

To clear the global password attributes:

```
switch(config)# no password-attributes
switch(config)# exit
switch# show running-config password-attributes

% No entries found.
```

## password-attributes admin-lockout enable

Enables the lockout policy for admin role accounts.

**Syntax**    **password-attributes admin-lockout enable**  
**no password-attributes admin-lockout enable**

**Modes**    Global configuration mode

**Usage Guidelines**    Lockout policy locks admin role accounts when the user exceeds the configured number of maximum failed login attempts.

In fabric cluster mode, when the **password-attributes admin-lockout enable** command is run on one switch of the cluster, it results in the configuration being applied to all switches of the cluster.

The **no password-attributes admin-lockout enable** command disables lockout policy for admin role accounts.

## pdu-rx-limit

Sets the number of PDU packets received on an ELD-enabled port before detecting and breaking a loop.

**Syntax** `pdu-rx-limit limit`

`no pdu-rx-limit limit`

**Command Default** The default is 1.

**Parameters** *limit*

The number of PDU packets. The valid range is 1 through 5.

**Modes** ELD configuration mode

**Usage Guidelines** This command sets the same value for every RBridge in the Brocade VCS Fabric cluster.

Use this command with the **hello-interval** command to determine the time taken to detect a loop. The time taken to detect a loop is the product of the pdu-rx-limit and the hello interval. The Brocade VCS Fabric cluster in the loop with the lowest pdu-rx-limit is the cluster where the loop gets broken, assuming that the hello limit is correctly set to the same value on all RBridges. This command applies only in Brocade VCS Fabric mode.

This functionality detects Layer 2 loops only.

Enter **no pdu-rx-limit** to reset the limit to its default value.

**Examples** To set the limit on the number of PDU packets received to 4:

```
switch(config)# protocol edge-loop-detection
switch(config-eld)# pdu-rx-limit 4
```

**Related Commands** [edge-loop-detection vlan](#), [edge-loop-detection port-priority](#), [hello-interval](#), [protocol edge-loop-detection](#), [show edge-loop-detection globals](#)

# pg

Creates an N\_Port group in Access Gateway mode.

**Syntax** `pg pgid`

`no pg pgid`

**Parameters** `pgid`

Port group identifier.

**Modes** Access Gateway (AG) configuration mode

**Usage Guidelines** You must be in Access Gateway (AG) mode to use this command.

This command configures a port group with a unique ID (*pgid*). The *pgid* cannot exceed 64 characters. Once configured, you can access the port group in Port Grouping configuration mode to perform configuration tasks, such as adding and removing N\_Ports, enabling port group modes, and renaming the group.

**Examples** The following command creates port group 1 and enables Port Grouping configuration mode for the port group.

```
sw0(config-rbridge-id-3-ag)# pg 1
sw0(config-rbridge-id-3-ag-pg-1)#
```

The following command removes port group 1.

```
sw0(config-rbridge-id-3-ag)# no pg 1
```

**Related  
Commands** [show ag pg](#)

# ping

Verifies network connectivity between a source and a destination on a TCP/IP network.

**Syntax** `ping dest-IPv4_addr [ ipv6 dest-ipv6-addr ] [ host-name ] [ count [ number ] [ interface { <N> gigabitethernet rbridge-id/slot/port | management | ve vlan_id } ] ] [ timeout seconds ] [ datagram-size bytes ] [ quiet ] [ numeric ] [ vrf vrf-name ]`

**Command Default** The default for count is 5. The default for timeout is 1. The default for datagram-size is 56.

**Parameters** **dest-IPv4\_addr**

Specifies the IPv4 address of the destination device.

**ipv6 dest-ipv6-addr**

Specifies the IPv6 address of the destination device.

**host-name**

Destination host name. The default value is 1.

**count number**

Specifies the number of transmissions (pings). The range is from 1 through 7200.

**interface<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port. The interface option is only available for the **ipv6 link-local address ping** command.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**interface management**

Specifies the management interface.

**interface Ve vlan\_id**

Specifies the interface is a virtual Ethernet, and specifies the VLAN ID of the interface.

**timeout seconds**

Specifies the time (in seconds) to wait for a response. The range is from 1 through 60. The default value is 1.

**datagram-size bytes**

Specifies the datagram size (also known as the maximum transmission unit, or MTU) in bytes. The range is from 36 through 9100. The default value is 56.

**quiet**

Prints only the first and last line of the command output.

**numeric**

Does not lookup hostnames.

**vrf vrf-name**

Pings the specified VRF instance. If no VRF is specified, the default-vrf is pinged. See the Usage Guidelines.



**Modes** Privileged EXEC mode

**Usage Guidelines** This command sends a specified number of pings with configured parameters to the specified destination device.

---

**ATTENTION**

Beginning with release 5.0.0, support is provided for the management VRF. The default VRF and other user-configured (nondefault) VRFs can no longer be used for router management.

---

To ping management routes, use the **ping vrf** or **ping ipv6 vrf** command and enter **mgmt-vrf** as follows. You must enter the name of the management VRF manually.

```
switch# ping vrf mgmt-vrf
```

```
switch# ping ipv6 vrf mgmt-vrf
```

**Examples** To ping an IPv4 destination address:

```
switch# ping 172.16.4.80
Type Control-c to abort
PING 172.16.4.80 (172.16.4.80): 56 data bytes
64 bytes from 172.16.4.80: icmp_seq=0 ttl=120 time=101.466 ms
64 bytes from 172.16.4.80: icmp_seq=1 ttl=120 time=122.914 ms
64 bytes from 172.16.4.80: icmp_seq=2 ttl=120 time=145.637 ms
64 bytes from 172.16.4.80: icmp_seq=3 ttl=120 time=170.032 ms
64 bytes from 172.16.4.80: icmp_seq=4 ttl=120 time=103.036 ms
--- 172.16.4.80 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max/stddev = 101.466/128.617/170.032/26.188 ms
```

To ping an IPv4 destination address in quiet mode:

```
switch# ping 172.16.4.80 quiet
Type Control-c to abort
PING 172.16.4.80 (172.16.4.80): 56 data bytes
--- 172.16.4.80 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max/stddev = 100.605/146.372/192.552/32.505 ms
```

To ping an IPv6 destination address in numeric mode with a datagram size:

```
switch# ping ipv6 fec0:60:69bc:92:218:8bff:fe40:1470 count 3 datagram-size 48
numeric timeout 3
Type Control-c to abort
PING fec0:60:69bc:92:218:8bff:fe40:1470 (fec0:60:69bc:92:218:8bff:fe40:1470): 48
data bytes
56 bytes from fec0:60:69bc:92:218:8bff:fe40:1470: icmp_seq=0 ttl=64 time=6.356 ms
56 bytes from fec0:60:69bc:92:218:8bff:fe40:1470: icmp_seq=1 ttl=64 time=0.170 ms
56 bytes from fec0:60:69bc:92:218:8bff:fe40:1470: icmp_seq=2 ttl=64 time=0.171 ms
--- fec0:60:69bc:92:218:8bff:fe40:1470 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.170/2.232/6.356/2.916 ms
```

---

**ATTENTION**

Beginning with release 5.0.0, support is provided for the management VRF. The default VRF and other user-configured (nondefault) VRFs can no longer be used for router management. This feature is allowed only on management VRF ports.

---

To ping management routes, use the **ping vrf** or **ping ipv6 vrf** command and enter **mgmt-vrf** as follows. You must enter the name of the management VRF manually.

```
switch# ping vrf mgmt-vrf
```

```
switch# ping ipv6 vrf mgmt-vrf
```

**Related Commands** [traceroute](#)

## police cir

Sets the committed information rate for a class-map.

<b>Syntax</b>	<b>police cir</b> <i>cir-rate</i>  <b>no police cir</b>
<b>Parameters</b>	<b><i>cir-rate</i></b>  Committed information rate. Valid values range from 40000 through 40000000000 bps in multiples of 40000.
<b>Modes</b>	Policy-map class configuration mode
<b>Usage Guidelines</b>	<p>When you are in config-policymap-class mode launching the <b>police cir cir-rate</b> command places the system in config-policymap-class-police mode for the configured class-map. At this point, you can add or remove additional policing parameters for the class-map.</p> <p>Only the <b>police cir</b> and <b>cbs</b> commands are mandatory for configuring a class-map.</p> <p>If the optional parameters for a class-map are not set, they are treated as disabled. To delete parameters for a class-map, you must delete all policer parameters while in the policy-map class configuration mode using the <b>no police cir</b> command.</p> <p>This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.</p> <p>Use the <b>no</b> version of this command to remove the parameter from the class-map.</p>
<b>Examples</b>	<p>This example configures a class-map called "default" within a policy-map.</p> <pre>switch# configure terminal switch(config)# policy-map policymap1 switch(config-policymap)# class default switch (config-policymap-class)# police cir 40000 switch(config-policymap-class-police)#</pre>
<b>Related Commands</b>	<a href="#">cbs</a> , <a href="#">conform-set-dscp</a> , <a href="#">conform-set-prec</a> , <a href="#">conform-set-tc</a> , <a href="#">ebs</a> , <a href="#">eir</a> , <a href="#">exceed-set-dscp</a> , <a href="#">exceed-set-prec</a> , <a href="#">police-priority-map</a> , <a href="#">policy-map</a> , <a href="#">qos cos</a> , <a href="#">service-policy</a> , <a href="#">set-priority</a>

# police-priority-map

Creates color-based priority CoS mapping. A police-priority-map remaps frame CoS values to conform or exceed color values when rates conform or exceed limits set in a classification map.

<b>Syntax</b>	<p><b>police-priority-map</b> <i>name</i></p> <p><b>no police-priority-map</b> <i>name</i></p> <p><b>conform</b> <i>CoSvalues</i></p> <p><b>exceed</b> <i>CoSvalues</i></p>
<b>Command Default</b>	If you do not define priority mapping for a color (conform or exceed), the map defaults to priorities 0, 1, 2, 3, 4, 5, 6, and 7.
<b>Parameters</b>	<p><b>name</b> Name of police-priority-map</p> <p><b>CoSvalues</b> CoS priority values (0, 1, 2, 3, 4, 5, 6, 7)</p>
<b>Modes</b>	<p>Global configuration mode</p> <p>Police-priority-map configuration mode</p>
<b>Usage Guidelines</b>	<p>This command creates a police-priority-map.</p> <p>When you launch the <b>police-priority-map</b> command, the system is placed in config-policepmap mode for the configured map. At this point, you can remap CoS values to conform or exceed color values.</p> <p>Enter <b>conform</b> <i>CoSvalues</i> or <b>exceed</b> <i>CoSvalues</i> while in config-policepmap mode to remap 802.1p CoS values that are conforming to CIR values set in the policy-map or exceeding CIR values, but conforming to EIR values set in the policy-map.</p> <p>Enter <b>no police-priority-map</b> <i>name</i> while in global configuration mode to remove the police-priority-map.</p> <p>Enter <b>no conform</b> command or the <b>exceed</b> <i>CoSvalues</i> while in config-policepmap mode to remove CoS remapping.</p>

---

## NOTE

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

---

**Examples** To create a priority-map and place system into config-policepmap mode to configure conform and exceed color mapping:

```
switch(config)# police-priority-map pmap1
switch(config-policepmap)# conform 0 1 1 2 1 2 1 1
switch(config-policepmap)# exceed 3 3 3 3 4 5 6 7
```

To remove the conform class mapping while in config-policepmap mode:

```
switch(config-policepmap)# no conform
```

To remove the class-map while in global configuration mode:

```
switch(config)# no police-priority-map pmap1
```

**Related  
Commands**    [show running-config police-priority-map](#)

# policy-map

Configures a policy-map containing a class-map so that you can apply Policer and QoS attributes to a particular interface.

**Syntax** **policy-map** *policy-mapname*

**no policy-map** *policy-mapname*

**Command Default** No policy-map is created.

**Parameters** **policy-mapname**

Name of police policy-map

**Modes** Global configuration mode

**Usage Guidelines** When you launch the **policy-map** command, the system is placed in config-policymap mode for the configured map. At this point, you can add a class-map containing policing parameters to the policy-map. (Refer to the description of the **class** command.)

This command creates a Policer policy-map to apply Policer and QoS attributes to a particular interface. Each policy-map can contain up to 32 class-maps. The class-map can be associated with specific policing and QoS parameters.

Maximum number of policy-map creations are 128

Associate the policy-map to the interface for inbound or outbound direction with the **service-policy** command.

Enter **no policy-map** *policy-mapname* while in global configuration mode to remove the policy-map.

---

## NOTE

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

---

**Examples** To create a policy-map and place system into config-policymap mode so that you can add a class-map:

```
switch(config)# policy-map policymap1
switch(config-policymap)#
```

To remove the policy-map while in global configuration mode:

```
switch(config)# no policy-map policymap1
```

**Related  
Commands**

[class](#), [qos cos](#), [show policymap](#), [show running-config class-map](#), [show running-config policy-map](#)

## port-channel

Adds the port-channel as a member of a port-channel redundancy group.

**Syntax** `port-channel po-id [ active ]`

`no port-channel po-id`

**Modes** Port-channel-redundancy-group configuration mode

**Usage Guidelines** Port-channel redundancy groups must have two port-channels as members and these port-channels can be from the same or different RBridges of a cluster.

You can specify which port-channel become active port-channel when this group gets activated. This is optional, if user doesn't provided active member, system will automatically select port-channel which comes up first as active.

The **no port-channel** command deletes the designated group.

**Examples** Typical command execution example:

```
switch(config-port-channel-redundancy-group-32)# port-channel 3 active
```

**Related Commands** [port-channel-redundancy-group](#)

# port-channel-redundancy-group

Enables the port-channel-redundancy-group configuration mode.

**Syntax** `port-channel-redundancy-group group-id`

`no port-channel-redundancy-group group-id`

**Modes** Global configuration mode

**Usage Guidelines** In this configuration mode, the **port-channel** command can add port-channels as members to the port-channel redundancy-group, and specify which port-channel becomes the active port-channel when the group is activated .

A port-channel redundancy group must have two port-channels as members. These port-channels can be from the same or different R Bridges in a cluster. In the case of FC mode, the group configuration needs to be performed on all R Bridges where any one of the vLAG members is configured.

Also in this configuration mode, the **activate** command activates this group.

The **no port-channel-redundancy-group command** deletes the designated group.

**Examples** Typical command execution example:

```
switch(config)#port-channel-redundancy-group 27
switch(config-port-channel-redundancy-group-27) #
```

**Related  
Commands** [port-channel](#)

## port-channel path-cost

Sets the path-cost behavior.

**Syntax** `port-channel path-cost [ custom | standard ]`

**Command Default** Path-cost is standard.

**Parameters** **custom**

Specifies to use the custom behavior, which sets the path-cost changes according to the port-channel's bandwidth.

**standard**

Specifies to use the standard behavior, which sets that the path-cost does not change according to port-channel's bandwidth.

**Modes** Protocol Spanning Tree configuration mode

**Usage Guidelines** If xSTP is enabled over VCS, this command must be executed on all RBridges.

**Examples** To set the behavior for the path-cost to custom:

```
switch(conf-mstp)# port-channel path-cost custom
```

To set the behavior for the path-cost to standard:

```
switch(conf-mstp)# port-channel path-cost standard
```



# port-group

Enables port-group configuration mode for VDX 8770 Switch 27x40 GbE line cards. The mode is a prerequisite reserved for configuring Performance and Density operating modes on these line cards.

**Syntax** `port-group rbridge-id/slot/port-group-id`

**Parameters** `rbridge-id`

A unique identifier for the switch. Values are from 1 through 239.

`slot`

Specifies a valid slot number.

`port-group-id`

A port group number (1-9) specific to the Brocade VDX 8770 switch 27x40 GbE line card.

**Modes** Hardware configuration mode

**Usage Guidelines**

When you launch the **port-group** command, the system is placed in configuration mode for the port group. At this point, you can configure Performance or Density operating modes for the port group.

Port groups on the 27x40 GbE line card are sequentially numbered starting with 1 for ports 1-3 and ending with 9 for ports 25-27. Refer to the *Brocade 8770-4 Hardware Reference Manual* or **8770-8 Hardware Reference Manual** "Overview" chapter for more information on these port groups and configuring operating modes for this line card.

---

## NOTE

This command is only supported on 27x40 GbE line cards installed on Brocade VDX 8770-4, VDX 8770-8, and later switches.

---

**Examples**

To enable port-group configuration mode for port group 9 on a line card located in slot 3 on a switch with RBridge ID 1:

```
switch(config-hardware)# port-group 1/3/9
switch(config-port-group-1/3/9)
```

**Related Commands**

[hardware, port-group, mode \(27x40 GbE line card\)](#)

## port-profile (global configuration mode)

Creates a new Automatic Migration of Port Profiles (AMPP) port-profile in the fabric.

**Syntax** `port-profile profile-name [ activate | qos-profile | security-profile | vlan-profile | static mac-address ]`  
`no port-profile profile-name`

**Parameters**

- profile-name** A fabric-wide unique name of a port-profile.
- activate** Activates the specified profile
- qos-profile** Enters directly into edit mode for the QoS sub-profile.
- security-profile** Enters directly into edit mode for the security sub-profile.
- vlan-profile** Enters directly into edit mode for the VLAN sub-profile.
- static mac-address** Statically associates the profile VM MAC address.

**Modes** Global configuration mode

**Usage Guidelines** If the port-profile name already exists, the switch enters port-profile mode and edits the existing profile. A system-generated fabric-wide unique port-profile ID is assigned by default.

You can directly access the submodes for the profile, and assign the profile statically to a MAC address.

Security profiles are applied to the ACLs based on the profile or PolicyID. Therefore, multiple security profiles can be applied to the same profiled port.

Enter **no port-profile profile-name** to de-activate the port-profile.

## port-profile (port-profile-domain configuration mode)

Adds an Automatic Migration of Port Profiles (AMPP) port-profile into a specific domain in a Virtual Fabrics context.

**Syntax** `port-profile port-profile-name`

`no port-profile port-profile-name`

**Parameters** `port-profile-name`

A fabric-wide unique name of a port-profile. Range is from 1 through 128 ASCII characters.

**Modes** Port-profile-domain configuration mode

**Usage Guidelines** You must first issue the **port-profile-domain** command to enter port-profile-domain configuration mode.

In a Virtual Fabrics context, use the **port-profile-port** command to associate a profiled port to a single port-profile or a port-profile domain.

**Examples** Creating a port-profile in global configuration mode:

```
switch(config)# port-profile PP_Tenant_A
```

Creating a VLAN profile and enabling 802.1Q VLAN access on a trunk:

```
switch(config-port-profile-PP_Tenant_A)# vlan-profile
switch(config-vlan-profile)# switchport mode trunk allow vlan add 10
```

In a Virtual Fabrics context, creating extended VLAN profiles (VLAN IDs > 4095) to include service or transport VFs and C-TAGs.:

```
switch(config)# port-profile PP_Tenant_B
switch(config-vlan-profile)# switchport mode trunk allow vlan add 5000 ctag 20
switch(config-vlan-profile)# switchport mode trunk allow vlan add 6000 ctag 30
```

In a Virtual Fabrics context, adding port-profiles to a port-profile domain.

```
switch(config)# port-profile-domain vCenter1
switch(configport-profile-domain-vCenter1)# port-profile PP_Tenant_A
switch(configport-profile-domain-vCenter1)# port-profile PP_Tenant_B
```

**Related Commands** [port-profile-domain, vlan-profile \(AMPP\)](#)

## port-profile-domain

Creates an Automatic Migration of Port Profiles (AMPP) port-profile domain that contains all of the port-profiles that can be applied to a profiled port in a Virtual Fabrics context.

<b>Syntax</b>	<p><b>port-profile-domain</b> <i>port-profile-domain-name</i></p> <p><b>no port-profile-domain</b> <i>port-profile-domain-name</i></p>
<b>Parameters</b>	<p><b>port-profile-domain-name</b></p> <p>A fabric-wide unique name of a port-profile domain. The range is from 1 through 128 ASCII characters.</p>
<b>Modes</b>	Global configuration mode
<b>Usage Guidelines</b>	<p>Within this domain, a service or transport VF (VLAN ID &gt; 4095) must not have overlapping 802.1Q classification tags.</p> <p>The <b>no</b> form of this command deletes a port-profile domain.</p> <p>Use the <b>port-profile-port</b> command to associate a profiled port to a port-profile domain.</p>
<b>Examples</b>	<p>Creating a port-profile domain:</p> <pre>switch(config)# port-profile-domain my_PP_domain</pre> <p>Adding profiles to the above domain:</p> <pre>switch(config-port-profile-domain-my_PP_domain)# port-profile my_PP_domain 2 switch(config-port-profile-domain-my_PP_domain)# port-profile my_PP_domain 3</pre>
<b>Related Commands</b>	<a href="#">port-profile (global configuration mode)</a> , <a href="#">vlan-profile (AMPP)</a>

# port-profile-port

Activates the Automatic Migration of Port Profiles (AMPP) port-profile configuration mode on a port.

**Syntax** **port-profile-port** [ **domain** *port-profile-domain-name* ]

**no port-profile-port** [ **domain** *port-profile-domain-name* ]

**Command Default** When the **domain** keyword is not used, the port-profiles in the default profile domain are used.

**Parameters** **domain**

Selects a port-profile domain.

***port-profile-domain-name***

Name of a port-profile domain.

**Modes** Interface subtype configuration mode

**Usage Guidelines** To apply multiple port-profiles to the interface, create and add the profiles to the default domain or to a user-created domain and apply it to the interface.

AMPP management allows you to associate AMPP port-profiles with VMware port groups, and provides a port-profile comparison tool to facilitate comparing port-profiles within or across fabrics for robust VM migration.

In a Virtual Fabrics context, use this command with the **domain** keyword to associate a profiled port to a port-profile domain. The result is that all service or transport VFs (VLAN ID > 4095) so specified are configured on the port.

- If multiple port-profiles are added to the default domain, use the **port-profile-port** command without the **domain** keyword.
- If multiple port-profiles are added to a user-created domain (for example, domain\_d1), use the **domain** keyword as in the following example: **port-profile-port domain domain\_d1**

When the **port-profile-port** command is issued without the **domain** keyword, the domain referred to is identified by "default." The default domain is automatically created by the system during a firmware upgrade from releases prior to Network OS release 4.1.0. When the upgrade is complete, this domain contains the set of port-profiles that were created before the upgrade.

Enter the **no port-profile-port** and **no shutdown** commands to remove the complete AMPP configuration from the selected port.

Enter **no port-profile-port domain port-profile-domain-name** to dissociate the profiled port from the port-profile domain.

---

## NOTE

In VF-enabled mode only, the user can manage port-profiles in a default domain as in any other domain.

---

**Examples** The following examples illustrate activating AMPP port-profile configuration mode on a specific 10-gigabit Ethernet interface port.

To associate the default port-profile domain to an interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# port-profile-port
```

To associate a profiled port with a user-specified port-profile domain:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# port-profile-port domain vDC1
```

**Related  
Commands**

[interface, port-profile \(global configuration mode\), port-profile-domain, shutdown](#)

## power-off

Deactivates a line card or Switch Fabric Module (SFM).

**Syntax** `power-off { linecard | sfm } { m4_value | m8_value }`

**Parameters** **linecard**

Selects a line card to deactivate.

**sfm**

Selects an SFM to deactivate.

**m4\_value**

The slot number. If you are using a Brocade VDX 8770-4 switch, the range of values is from 1 through 3.

**m8\_value**

The slot number. If you are using a Brocade VDX 8770-8 switch, the range of values is from 1 through 6.

**Modes** Global configuration mode

## power-off linecard

Powers off a line card.

<b>Syntax</b>	<b>power-off linecard</b> <i>slot_number</i>
<b>Parameters</b>	<b><i>slot_number</i></b> Specifies the slot number to be powered-off. Line card slots are 1 through 4 on a Brocade VDX 8770-4 and 1 through 8 on a Brocade VDX 8770-8.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	A line card must be powered off before you can change the slot configuration.
<b>Examples</b>	To power off a line card in slot 4:  <pre>switch# power-off linecard 4</pre>
<b>Related Commands</b>	<a href="#">linecard</a> , <a href="#">power-on linecard</a> , <a href="#">show running-config rbridge-id linecard</a>



## power-on

Activates a line card or Switch Fabric Module (SFM).

**Syntax** `power-on { linecard | sfm } { m4_value | m8_value }`

**Parameters** **linecard**

Selects a line card to activate

**sfm**

Selects an SFM to activate.

**m4\_value**

The slot number. If you are using a Brocade VDX 8770-4 switch, the range of values is from 1 through 3.

**m8\_value**

The slot number. If you are using a Brocade VDX 8770-8 switch, the range of values is from 1 through 6.

**Modes** Global configuration mode

## power-on linecard

Powers on a line card.

<b>Syntax</b>	<b>power-on linecard</b> <i>slot_number</i>
<b>Parameters</b>	<b><i>slot_number</i></b> Specifies the slot number to be powered-on. Line card slots are 1 through 4 on a Brocade VDX 8770-4 and 1 through 8 on a Brocade VDX 8770-8.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	To power on a line card in slot 4:  <pre>switch# power-on linecard 4</pre>
<b>Related Commands</b>	<a href="#">linecard</a> , <a href="#">power-off linecard</a> , <a href="#">show running-config rbridge-id linecard</a>

# precedence

Sets the precedence of the CEE map.

**Syntax** `precedence value`

**Command Default** The default is 1.

**Parameters** *value*

The precedence value. Valid values range from 1 through 100.

**Modes** CEE map configuration mode

**Examples** To set the precedence to 1:

```
switch(config-cee-map-default)# precedence 1
```

## preempt-mode

Enables or disables preempt mode for a VRRP router session.

**Syntax** **preempt-mode**

**no preempt-mode**

**Command Default** Enabled for VRRP; Disabled for VRRP-E.

**Modes** Virtual-router-group configuration mode

**Usage Guidelines** This command is for VRRP and VRRP-E.

For VRRP-E, the interface must be **ve**.

When set, the highest-priority backup router will always be the master if the owner is not available. If not set, a higher priority backup will not preempt a lower-priority master.

Enter **no preempt-mode** to turn off preempt mode.

**Examples** To turn on preempt mode for a virtual-router-group-1 session:

```
switch(config)# rbridge-id 101
switch(config-rbridge-id-101)# protocol vrrp
switch(config-rbridge-id-101)# int te 101/1/6
switch(conf-if-te-101/1/6)# vrrp-group 1
switch(config-vrrp-group-1)# preempt-mode
```

**Related Commands** [vrrp-extended-group](#), [vrrp-group](#)

# priority

Sets the priority of a physical router in a VRRP router group.

**Syntax** `priority range`

**Command Default** The default is 1.

**Parameters** `range`

The priority of a physical router in a virtual router group. Higher numbers have priority over lower numbers. Valid values range from 1 to 254.

**Modes** Virtual-router-group configuration mode

**Usage Guidelines** You can perform this command for VRRP or VRRP-E.

When set, the highest priority backup router will always be the master. (For VRRP, however, the owner is always the master if it is available.) If not set, a higher priority backup will not preempt a lower priority backup that is acting as master.

For an owner router in VRRP, the priority automatically becomes 255 if the virtual IP address of the virtual router and the real IP address of the owner are the same.

**Examples** To set the priority to 110 for the VRRP virtual group 1:

```
switch(config)# rbridge-id 101
switch(config-rbridge-id-101)# protocol vrrp
switch(config-rbridge-id-101)# int te 101/1/6
switch(config-if-te-101/1/6)# vrrp-group 1
switch(config-vrrp-group-1)# priority 110
```

To set the priority to 110 for the VRRP-E virtual group 1:

```
switch(config)# rbridge-id 101
switch(config-rbridge-id-101)# protocol vrrp-extended
switch(config-rbridge-id-101)# int ve 25
switch(config-ve-25)# vrrp-group-extended 1
switch(config-vrrp-extended-group-1)# priority 110
```

**Related Commands** [vrrp-extended-group](#), [vrrp-group](#)

## priority-group-table

Configures the bandwidth for each priority group.

**Syntax** `priority-group-table pgid [ weight weight ] [ pfc { on | off } ]`

`no priority-group-table pgid`

**Command Default** There is no default value for the weight. PFC is disabled.

**Parameters** *pgid*

Specifies the priority group ID (PGID) assigned to a priority group. Valid values range from 15.0 through 15.7 for the eight reserved Strict Priority PGIDs.

*weight weight*

Maps a weight to a Deficit Weighted Round Robin (DWRR) scheduler queue. This parameter is only valid for the DWRR Priority Group. The sum of all DWRR Priority Group weight values must equal 100 percent. Valid values range from 1 through 100.

**pfc**

Enables the Priority-based Flow Control (PFC) for each priority that gets mapped to the priority group.

**on**

Enables PFC.

**off**

Disables PFC.

**Modes** CEE map configuration mode

**Usage Guidelines** Enter `priority-group-table` to configure the bandwidth for each priority group, to associate a weight to a DWRR scheduler queue, and to enable the PFC.

You can define up to eight additional DWRR Priority Groups with the PGID values in the range from 0 through 7. Strict Priority Groups take priority in order from the lowest PGID value to the highest PGID value; for example, a PGID of 15.0 is a higher priority than a PGID of 15.1 and a PGID of 15.1 is higher priority than a PGID of 15.2.

Enter `no priority-group-table pgid` to return the priority group to the default values. For the Strict Priority Group, the PGID is still valid, but the PFC is disabled. For the DWRR Priority Group, the PGID is no longer valid and is deleted; the PGID can only be deleted when it is not bound to any Priority-to-Priority Group Table entry. The following lists the bandwidth allocation to user priority groups.

**TABLE 10** Bandwidth allocation to user priority groups

PGID	PG%	PFC	Description
0	50	Y	SAN
1	50	N	LAN

A PGID value of 15 is a special value, which allows you to configure priorities with no bandwidth limit. The priority groups of 15.0 to 15.7 are predefined in the switch.

**Examples** To define the CEE map and configure the bandwidth with the priority group, use the values in [Table 10](#) .

```
switch(config)# cee-map test
switch(conf-ceemap)# priority-group-table 0 weight 50 pfc on
switch(conf-ceemap)# priority-group-table 1 weight 50
```

**Related Commands** [cee-map \(FCoE\)](#), [show qos maps](#), [show running-config cee-map](#)

## priority-tag

Toggles the priority-tagging support on a specific interface.

**Syntax**    **priority-tag**

**no priority-tag**

**Command Default**    The priority-tag is disabled for all supported interfaces.

**Modes**            Interface subtype configuration mode

**Usage Guidelines**    This command is the only method for toggling priority-tagging.  
                          Enter **no priority-tag** to disable priority-tagging support.

**Examples**            To enable priority-tagging support on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# priority-tag
```

**Related  
Commands**            [interface](#), [cee-map \(FCoE\)](#)



# private-vlan

Configures a VLAN as a private VLAN (PVLAN).

**Syntax** `private-vlan [ isolated | community | primary ]`

`no private-vlan [ isolated | community | primary ]`

**Parameters** `isolated`

The PVLAN is configured as an Isolated VLAN.

`community`

The PVLAN is configured as a Community VLAN.

`primary`

The PVLAN is configured as a Primary VLAN.

**Modes** Interface subtype configuration mode

**Related  
Commands** [private-vlan association](#)

## private-vlan association

Associates a secondary VLAN to a primary VLAN.

**Syntax** `private-vlan association [ add vlan_id | remove vlan_id ]`

`no private-vlan association [ add vlan_id | remove vlan_id ]`

**Parameters** `add vlan_id`

Adds the association.

`remove vlan_id`

Removes the association.

**Modes** Interface subtype configuration mode

**Related  
Commands** [private-vlan](#)

# profile

Creates an LLDP profile.

**Syntax** **profile** *name*

**no profile** *name*

**Parameters** **name**

Assigns a name to the profile. The name must be between 1 and 63 ASCII characters in length.

**Modes** Protocol LLDP configuration mode

**Usage Guidelines** When you apply an LLDP profile on an interface using the **lldp profile** command, it overrides the global configuration. If a profile is not present, then the default global profile is used until you create a valid profile. Up to 64 profiles can be created.

Enter **no profile** *name* to remove the named profile.

**Examples** To create a profile named test:

```
switch(conf-lddp)# profile test
```

To delete a profile named test:

```
switch(conf-lddp)# no profile test
```

**Related  
Commands** [lldp profile](#)

## prom-access disable

Disables access to the Boot PROM for FIPS compliance.

- Syntax** `prom-access disable`
- Command Default** The Boot PROM is accessible.
- Modes** Privileged EXEC mode
- Usage Guidelines** In non-FIPS compliant mode, you can access the Boot PROM by holding down the ESC key during the 4-second period when the switch is booting up. In FIPS compliant state, PROM access is disabled to prevent users from net-installing firmware.
- Under normal operating conditions, this command is hidden to prevent accidental use. Enter **unhide fips** with the password "fibranne" to make the command available.

---

### ATTENTION

Use this command only when preparing a switch for FIPS compliance.

---



### CAUTION

Once Boot PROM access is disabled, you cannot re-enable it.

---

**Examples** To disable access to the Boot PROM:

```
switch# unhide fips
Password: *****
switch# prom-access disable
You are disabling PROM access. Do you want to continue? [yes/no] (no): yes
switch# PROM access Disabled
```

**Related Commands** [cipherset](#), [fips selftests](#), [fips zeroize](#), [show prom-access](#), [unhide fips](#)

## protect-mode enable

Enables protect mode.

**Syntax**    **protect-mode enable**  
**no protect-mode enable**

**Modes**     Privileged EXEC mode

**Usage Guidelines**    In the Blade Center Chassis environment, the Advanced Management Module (AMM) controls the operation of the switch by configuring and initializing it. Protect mode of operation is a special mode which needs to be supported by both the switch and the AMM. Protect mode results in the AMM ceding control to the switch. The AMM loses its ability to perform some or all of the operations on the AMM. Once the AMM cedes control to the switch, the control can be given back to the AMM only by disabling protect mode on the switch.

Once the switch enters protect mode, AMM's requests to perform any operations are ignored until the Network Administrator permits them. This behavior is preserved through power cycles, even after it is inserted into a different bay or chassis.

Enter **no protect-mode enable** to disable this command.

## protocol edge-loop-detection

Sets the edge-loop detection (ELD) configuration mode.

**Syntax** `protocol edge-loop-detection`

**Command Default** ELD configuration mode is not set.

**Modes** Global configuration mode

**Usage Guidelines** This functionality detects Layer 2 loops only.

**Examples** To enter the ELD configuration mode:

```
switch(config)# protocol edge-loop-detection
switch(config-eld)#
```

**Related Commands** [hello-interval](#), [pdu-rx-limit](#), [shutdown-time](#)

# protocol lldp

Enters the Link Layer Discovery Protocol (LLDP) configuration mode.

**Syntax**    **protocol lldp**

**no protocol lldp**

**Command Default**    The LLDP and DCBX protocols are enabled.

**Modes**            Global configuration mode

**Usage Guidelines**    Enter **no protocol lldp** to restore the default settings.

**Examples**          To reset all LLDP configurations:

```
switch(config)# no protocol lldp
```

## protocol spanning-tree

Designates the context for spanning tree.

**Syntax** `protocol spanning-tree { mstp | rstp | stp | pvst | rpvt }`

`no protocol spanning-tree`

**Command Default** STP is not enabled. STP is not required in a loop-free topology.

**Parameters** `mstp`

Specifies the Multiple Spanning Tree Protocol (MSTP).

`rstp`

Specifies the Rapid Spanning Tree (RSTP).

`stp`

Specifies the Spanning Tree Protocol (STP).

`pvst`

Specifies Per-VLAN Spanning Tree Protocol Plus (PVST+).

`rpvt`

Specifies Rapid Per-VLAN Spanning Tree Protocol Plus (R-PVST+).

**Modes** Global configuration mode

**Usage Guidelines** Consider enabling STP to detect or avoid loops. You must turn off one form of STP before turning on another form.

Packet drops or packet flooding may occur if you do not enable xSTP on all devices connected on both sides of parallel links.

If xSTP is enabled over VCS, this command must be executed on all RBridge nodes.

Brocade Network OS supports PVST+ and R-PVST+ only. The PVST and R-PVST protocols are proprietary to Cisco and are not supported.

Enter **no protocol spanning-tree** to delete the context and all the configurations defined within the context or protocol for the interface.

**Examples** To enable the Spanning Tree Protocol:

```
switch(config)# protocol spanning-tree stp
```

**Related Commands** [show spanning-tree](#)



# protocol udd

Enables and/or enters unidirectional link detection (UDLD) protocol configuration mode.

**Syntax**    **protocol udd**

**no protocol udd**

**Command Default**    This protocol is disabled by default.

**Modes**            Global configuration mode

**Usage Guidelines**    UDLD detects and blocks a physical link that becomes unidirectional. A unidirectional link can cause traffic in a network to loop endlessly. When the link becomes bidirectional again, UDLD unblocks the link.

This protocol applies only to physical ports. In addition to running this command, you must also enable each desired port for UDLD in interface subconfiguration mode.

Use the **no protocol udd** command to disable the UDLD protocol and revert all UDLD configuration to defaults.

**Examples**            To enable the unidirectional link detection (UDLD) protocol:

```
switch# configure
switch(config)# protocol udd
```

**Related Commands**    [hello \(UDLD\)](#), [udld enable](#), [shutdown \(UDLD\)](#)

## protocol vrrp

Globally enables VRRP (and VRRP-E on some platforms).

**Syntax**    **protocol vrrp**

**no protocol vrrp**

**Command Default**    Disabled

**Modes**            RBridge ID configuration mode

**Usage Guidelines**    Enables both the VRRP and VRRP-Extended protocols on the Brocade VDX switch.  
                          The **no protocol vrrp** command globally disables only VRRP but not VRRP-E.

**Examples**            To enable VRRP and VRRP-E:

```
switch# configure
switch(config)# rbridge-id 101
switch(config-rbridge-id-101)# protocol vrrp
```

**Related  
Commands**            [protocol vrrp-extended](#)

# protocol vrrp-extended

Globally enables VRRP-Extended.

**Syntax**    **protocol vrrp-extended**  
**no protocol vrrp-extended**

**Command Default**    Disabled

**Modes**    RBridge ID configuration mode

**Usage Guidelines**    The **no protocol vrrp-extended** command globally disables VRRP-Extended.

**Examples**    To enable VRRP-Extended:

```
switch# configure
switch (config)# rbridge-id 101
switch(config-rbridge-id-101)# protocol vrrp-extended
```

**Related  
Commands**    [protocol vrrp](#)

## pwd

Displays the mode of the current working directory.

**Syntax** **pwd**

**Modes** Functions in all modes except privileged EXEC mode.

**Examples** To view the current working directory:

```
switch2# pwd
-----^
syntax error: unknown argument.
switch# configure terminal

Entering configuration mode terminal
switch(config)# pwd

At top level
switch(config)#
```

# qos

If there is bursty, lossy traffic for certain flows in the system, you can borrow the buffers from less bursty flows, in order to reduce the traffic loss. The **qos** command is used to configure the egress or ingress queue limit (depth), such as the maximum number of kilobytes of data that can be queued in the egress or ingress queue. This configuration is applied on individual RBridges.

**Syntax** **qos** { **tx-queue** | **rcv-queue** } [ **limit** *limitInKBytes* ]

**no qos**

**Command Default** The range of queue limit values is from 128 KB through 8 MB. While any value within this range is valid, recommended values are 128, 256, 512, 1024, and 2048.

The default ingress queue limit is 285 kilobytes.

The default egress queue limit is 512 kilobytes.

**Parameters** **tx-queue**

Designates the egress queue.

**rcv-queue**

Designates the ingress queue.

**limit** *limitInKBytes*

Configures the limit of the queue in kilobytes.

**Modes** RBridge ID configuration mode

**Usage Guidelines** The **no qos** command removes both queue limits and the default queue limits are restored.

This command only functions on the Brocade VDX 6740 and the Brocade VDX 6740-T

**Examples** This example defines the egress queue to 512 kilobytes.

```
(config-rbridge-id-154)# qos tx-queue limit 512
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## qos cos

Specifies the interface Class of Service (CoS) value.

**Syntax** `qos cos value`

`no qos cos`

**Command Default** The default is 0.

**Parameters** *value*

Specifies the CoS value. Valid values range from 0 through 7.

**Modes** Interface subtype configuration mode

**Usage Guidelines** When Interface ingress QoS Trust is in the un-trusted mode, then the Interface Default CoS value is applied to all ingress traffic for user priority mapping. When the interface ingress QoS Trust is in the CoS mode, then the Interface Default CoS value is applied to all nonpriority tagged ingress traffic for user priority mapping.

If the interface is QoS trusted, the CoS value of the interface is used to assign a CoS value to all untagged packets entering the interface.

QoS Trust is implicitly turned on when the QoS CoS-Mutation map is applied to interfaces, and is implicitly turned off when the QoS CoS-Mutation map is removed.

Enter `no qos cos` to return the CoS value to the default.

**Examples** To set the CoS value to 2 on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 1/3/1
switch(conf-if-fo-1/3/1)# qos cos 2
```

To return the CoS value to the default on a specific port-channel interface:

```
switch(config)# interface port-channel 22
switch(config-port-channel-22)# no qos cos
```

**Related Commands** [interface](#), [qos map cos-traffic-class](#), [qos trust cos](#), [show qos interface](#)

## qos cos-mutation

Applies a CoS-to-CoS mutation quality of Service (QoS) map on an interface.

**Syntax** `qos cos-mutation name`

`no qos cos-mutation`

**Command Default** No explicit CoS-to-CoS mutation QoS map is applied; the inbound CoS equals the outbound CoS.

**Parameters** *name*

Specifies the name of the CoS mutation map.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Mutation mapping is a method of modifying a QoS field in all packets on an interface. On ingress, mutation mapping occurs before traffic classification and all other actions. On egress, mutation mapping occurs after traffic classification and before all other actions.

The `qos cos-mutation` command is not available if the interface is in CEE Provisioning mode.

Enter `no qos cos-mutation` to remove the CoS-to-CoS mutation map.

**Examples** To activate a CoS-to-CoS mutation QoS map named *test* on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 1/3/1
switch(conf-if-fo-1/3/1)# qos cos-mutation test
```

To remove a CoS-to-CoS mutation QoS map from a specific port-channel interface:

```
switch(config)# interface port-channel 22
switch(config-port-channel-22)# no qos cos-mutation
```

**Related Commands** [interface](#), [qos map cos-mutation](#), [show qos maps](#)

## qos cos-traffic-class

Applies a CoS-to-Traffic Class QoS map on an interface.

**Syntax** `qos cos-traffic-class name`

`no qos cos-traffic-class`

**Command Default** No explicit CoS-to-Traffic Class QoS map is applied; the implicit behavior is to match the IEEE 802.1Q recommendations for systems supporting 8 Traffic Classes.

**Parameters** *name*

Specifies the name of a previously created CoS-to-Traffic Class QoS map. Only one CoS-to-Traffic Class QoS map can exist at a time. An existing CoS-to-Traffic Class QoS map must be removed before a new one can be applied.

**Modes** Interface subconfiguration mode (fo, gi, port-channel, te)

**Usage Guidelines** This command is not available when the interface is in the CEE provisioning mode.  
Enter **no qos cos-traffic-class** to remove the CoS-to-Traffic Class mapping.

**Examples** To apply a CoS-to-Traffic Class QoS map named 'test' to a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# qos cos-traffic-class test
```

To remove CoS-to-Traffic Class QoS mapping from a specific port-channel interface:

```
switch(config)# interface port-channel 22
switch(config-port-channel-22)# no qos cos-traffic-class
```

**Related  
Commands**

[interface](#), [qos cos-mutation](#), [qos map cos-traffic-class](#), [qos trust cos](#), [show qos maps](#)



## qos dscp-cos

Applies a defined DSCP-CoS map to an interface.

**Syntax** **qos dscp-cos** *name*

**no qos dscp-cos**

**Command Default** DSCP-to-CoS mutation is not enabled on interface.

**Parameters** *name*

Name of DSCP-to-COS mutation map

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no qos dscp-cos** while in the interface mode to remove the DSCP-CoS map from the interface.

**Examples** To apply a configured QoS dscp-mutation map named 'test' to a specific interface, enter the **qos dscp-cos** *name* command while in the interface subconfiguration mode:

```
switch(config)# interface tengigabitethernet 16/2/2
switch(conf-if-te-16/2/2)# qos dscp-cos test
```

To remove a configured QoS dscp-mutation map named 'test' from a specific interface, enter the **no qos dscp-cos** command while in the interface subconfiguration mode:

```
switch(config)# interface tengigabitethernet 16/2/2
switch(conf-if-te-16/2/2)# no qos dscp-cos
```

**Related Commands** [interface](#), [qos dscp-mutation](#), [qos map dscp-cos](#), [qos dscp-cos](#), [show qos maps dscp-cos](#)

## qos dscp-mutation

Applies a defined DSCP mutation map to an interface.

**Syntax** **qos dscp-mutation** *name*

**no qos dscp-mutation**

**Command Default** DSCP mutation map is not enabled on interface.

**Parameters** *name*  
Name of DSCP mutation map

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no qos dscp-mutation** while in the interface mode to remove the DSCP mutation map from the interface.

**Examples** To apply a configured QoS dscp-mutation map named 'test' to a specific interface, enter the **qos dscp-mutation** *name* command while in the interface mode:

```
switch(config)# interface tengigabitethernet 16/2/2
switch(conf-if-te-16/2/2)# qos dscp-mutation test
```

To remove a configured QoS dscp-mutation map named 'test' from a specific interface, enter the **no qos dscp-mutation** *name* command while in the interface mode:

```
switch(config)# interface tengigabitethernet 16/2/2
switch(conf-if-te-16/2/2)# no qos dscp-mutation
```

**Related Commands** [interface](#), [qos map dscp-mutation](#), [show qos maps dscp-mutation](#)

## qos dscp-traffic-class

Applies a defined DSCP-to-Traffic-Class map to an interface.

**Syntax** **qos dscp-traffic-class** *name*

**no qos dscp-traffic-class**

**Command Default** DSCP-to-Traffic-Class map is not enabled on the interface.

**Parameters** *name*

Name of DSCP-to-Traffic-Class map

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no qos dscp-traffic-class** while in the interface mode to remove the DSCP-to-Traffic-Class map from the interface.

**Examples** To apply a configured DSCP-Traffic-Class map named 'test' to a specific interface, enter **qos dscp-traffic-class** *name* while in the interface configuration mode:

```
switch(config)# interface tengigabitethernet 16/2/2
switch(conf-if-te-16/2/2)# qos dscp-traffic-class test
```

To remove a configured DSCP-Traffic-Class map named 'test' from a specific interface, enter **no qos dscp-traffic-class** while in the interface configuration mode:

```
switch(config)# interface tengigabitethernet 16/2/2
switch(conf-if-te-16/2/2)# no qos dscp-traffic-class
```

**Related Commands** [interface](#), [qos map dscp-traffic-class](#), [show qos maps dscp-traffic-class](#)

# qos flowcontrol

Activates and configures QoS flow control.

<b>Syntax</b>	<b>qos flowcontrol tx [ on   off ] rx [ on   off ]</b> <b>no qos flowcontrol</b>
<b>Parameters</b>	<b>tx [ on   off ]</b> Activates or deactivates the transmission portion of flow control. <b>rx [ on   off ]</b> Activates or deactivates the receiving portion of flow control.
<b>Modes</b>	Interface subtype configuration mode
<b>Usage Guidelines</b>	When a 1-Gbps local port is already online, and the <b>qos flowcontrol</b> command is issued, the pause settings take effect immediately on that local port. However, when the link is toggled, pause is renegotiated. The local port will advertise the most recent <b>qos flowcontrol</b> settings. After auto completes, the local port pause settings may change, depending on the outcome of the pause negotiation, per 802.3 Clause 28B, as shown below.

**TABLE 11** Pause negotiation results

Advertised LOCAL cfg	Advertised REMOTE cfg	Negotiated result
Rx=off Tx=on	Rx=on Tx=on	asymmetrical: LOCAL Tx=on --> pause --> REMOTE Rx=on
Rx=on Tx=on	Rx=off Tx=on	asymmetrical: LOCAL Rx=on <-- pause <-- REMOTE Tx=on
Rx=on Tx=n/a	Rx=on Tx=n/a	symmetrical : LOCAL Tx/Rx=on <-- pause --> REMOTE Tx/Rx=on
Rx=n/a Tx=n/a	Rx=off Tx=off	disable pause both sides

Enter **no qos flowcontrol** to deactivate flow control on a specific interface.

**Examples** To activate both the transmitting and receiving portions of flow control on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 1/3/1
switch(conf-fo-1/3/1)# qos flowcontrol tx on rx on
```

To deactivate flow control on a specific port-channel interface:

```
switch(config)# interface port-channel 33
switch(config-port-channel-33)# no qos flowcontrol
```

**Related Commands** [interface](#)

## qos flowcontrol pfc

Activates and configures flow control for a Class of Service (CoS).

**Syntax** `qos flowcontrol pfc cos_value tx [ on | off ] rx [ on | off ]`

`no qos flowcontrol pfc cos_value`

**Parameters** `cos_value`

The CoS value.

`tx [ on | off ]`

Activates or deactivates the transmission portion of flow control.

`rx [ on | off ]`

Activates the receiving portion of flow control.

**Modes** Interface subtype configuration mode

**Usage Guidelines** In Brocade VCS Fabric mode, this command:

- Only takes effect on the interface. In order to have PFC functionality through the Brocade VCS Fabric cluster, use the CEE map configuration.
- Only affects per-interface pause behavior. To use flow control in Brocade VCS Fabric mode, use the CEE map configuration.

Enter `no qos flowcontrol pfc cos_value` to deactivate CoS flow control on a specific interface.

**Examples** To activate both the transmitting and receiving portions of a Class of Service (with a value of 7 in this example) flow control on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 1/3/1
switch(conf-fo-1/3/1)# qos flowcontrol pfc 7 tx on rx on
```

To deactivate both the transmitting and receiving portions of a Class of Service (with a value of 4 in this example) flow control on a specific port-channel interface:

```
switch(config)# interface port-channel 33
switch(config-port-channel-33)# no flowcontrol pfc 4
```

**Related Commands** [interface](#)

## qos map cos-mutation

Creates a QoS map for performing CoS-to-CoS mutation.

**Syntax** `qos map cos-mutation name cos0 cos1 cos2 cos3 cos4 cos5 cos6cos7`

`no qos map cos-mutation name`

**Command Default** No CoS-to-CoS mutation QoS maps are defined.

**Parameters** *name*

Specifies a unique name across all CoS-to-CoS mutation QoS maps defined within the system. If the named CoS-to-CoS mutation QoS map does not exist, then it is created. If the named CoS-to-CoS mutation QoS map already exists, then it is updated and new mapping is automatically propagated to all interfaces bound to the QoS map.

*cos0*

Sets the outbound CoS value for all packets with inbound CoS 0.

*cos1*

Sets the outbound CoS value for all packets with inbound CoS 1.

*cos2*

Sets the outbound CoS value for all packets with inbound CoS 2

*cos3*

Sets the outbound CoS value for all packets with inbound CoS 3.

*cos4*

Sets the outbound CoS value for all packets with inbound CoS 4.

*cos5*

Sets the outbound CoS value for all packets with inbound CoS 5.

*cos6*

Sets the outbound CoS value for all packets with inbound CoS 6.

*cos7*

Sets the outbound CoS value for all packets with inbound CoS 7.

**Modes** Global configuration mode

**Usage Guidelines** A CoS-to-CoS mutation takes an inbound CoS value and maps it to an outbound CoS value. The inbound CoS value is the user priority after any interface ingress QoS trust and Interface default CoS policy have been applied. The outbound CoS value is used in selecting Traffic Class and egress packet marking.

Enter `no qos map cos-mutation name` command to delete the named CoS-to-CoS mutation QoS map. A QoS map can only be deleted if it is not bound to any interface.

**Examples** To create a CoS-to-CoS mutation QoS map to swap CoS 4 and CoS 5 and apply it on an interface, for example having inbound CoS 4 mapped to outbound CoS 5 and inbound CoS 5 mapped to outbound CoS 4; but all other CoS values go through unchanged:

```
switch(config)# qos map cos-mutation test 0 1 2 3 5 4 6 7
switch(config)# interface tengigabitethernet 0/1
switch(conf-if-te-0/1)# qos cos-mutation test
```

To delete a CoS-to-CoS mutation QoS map:

```
switch(config)# no qos map cos-mutation test
```

**Related  
Commands**    [qos cos-mutation, show qos maps](#)

## qos map cos-traffic-class

Creates a QoS map for performing CoS-to-Traffic Class mapping.

**Syntax** `qos map cos-traffic-class name tc0 tc1 tc2 tc3 tc4 tc5 tc6tc7`

`no qos map cos-traffic-class`

**Command Default** No CoS-to-Traffic Class QoS maps are defined.

**Parameters** *name*

Specifies the CoS-to-Traffic Class QoS map name. If the named CoS-to-Traffic Class QoS map does not exist, then it is created. If the named CoS-to-Traffic Class QoS map already exists, then it is updated and new mappings are automatically propagated to all interfaces bound to the QoS map.

*tc0*

Sets the Traffic Class value for all packets with outbound CoS 0.

*tc1*

Sets the Traffic Class value for all packets with outbound CoS 1.

*tc2*

Sets the Traffic Class value for all packets with outbound CoS 2.

*tc3*

Sets the Traffic Class value for all packets with outbound CoS 3.

*tc4*

Sets the Traffic Class value for all packets with outbound CoS 4.

*tc5*

Sets the Traffic Class value for all packets with outbound CoS 5.

*tc6*

Sets the Traffic Class value for all packets with outbound CoS 6.

*tc7*

Sets the Traffic Class value for all packets with outbound CoS 7.

**Modes** Global configuration mode

**Usage Guidelines** A CoS-to-Traffic Class QoS map takes an outbound CoS value and maps it to a Traffic Class. The outbound CoS value is used as the packet user priority after applying the configured interface QoS trust, interface default CoS, and CoS-to-CoS mutation policies. Traffic Class is a reference to a scheduler queue and packet servicing policy.

Enter `no qos map cos-traffic-class name` to delete the CoS-to-Traffic Class QoS map specified by *name*. The CoS-to-Traffic Class QoS map can only be deleted when it is not bound to any interface. All other CoS values go through unchanged. This mapping matches the default behavior recommended in IEEE 802.1Q for systems supporting 8 Traffic Classes.

**Examples** To create a CoS-to-Traffic Class QoS map to map CoS 0 to Traffic Class 1 and CoS 1 to Traffic Class 0:

```
switch(config)# qos map cos-traffic-class test 1 0 2 3 4 5 6 7
```

To delete a CoS-to-Traffic Class QoS map:

```
switch(config)# no qos map cos-traffic-class test
```



**Related  
Commands**    [qos map cos-mutation](#), [qos trust cos](#)

## qos map dscp-cos

Creates a QoS map for performing DSCP-to-CoS mapping. This configures a DSCP-to-CoS map on the ingress interface.

<b>Syntax</b>	<p><b>qos map dscp-cos</b> <i>name</i></p> <p><b>no qos map dscp-cos</b> <i>name</i></p> <p><b>mark</b> <i>ingress dscp values to egress cos value</i></p>
<b>Command Default</b>	DSCP-to-CoS mutation is not enabled.
<b>Parameters</b>	<p><b>name</b> Name of dscp-cos map</p> <p><b>ingress dscp values</b> Range of input DSCP values</p> <p><b>egress dscp values</b> Output CoS value</p>
<b>Modes</b>	<p>dscp-cos mode for the QoS map</p> <p>Global configuration mode</p>
<b>Usage Guidelines</b>	<p>This command remaps the incoming DSCP values of the ingress packet to egress CoS 802.1P values.</p> <p>When you enter <b>qos map dscp-cos</b>, the system is placed in dscp-cos mode for the configured map. At this point, you can map ingress DSCP values to egress CoS values using the <b>mark</b> command.</p> <p>Enter <b>qos dscp-cos name</b> while in configuration mode for a specific interface to apply the DSCP-CoS map to that interface.</p> <p>Enter <b>no qos dscp-cos name</b> while in the interface configuration mode to remove the map from the interface.</p> <p>Enter <b>no map dscp-cos name</b> while in global configuration mode to remove the DSCP-CoS map.</p>
<b>Examples</b>	<p>To create a QoS DSCP-CoS map and place system into dscp-cos mode:</p> <pre>switch(config)# qos map dscp-cos test switch(dscp-cos-test)#</pre> <p>To map an ingress DSCP value to egress CoS values while in dscp-cos mode:</p> <pre>switch(dscp-cos-test)# mark 1,3,5,7 to 3</pre> <p>To map multiple ingress DSCP values to egress CoS values while in dscp-cos mode:</p> <pre>switch(dscp-mutation-test)# mark 1,3,5,7 to 9 switch(dscp-mutation-test)# mark 11,13,15,17 to 5 switch(dscp-mutation-test)# mark 12,14,16,18 to 6 switch(dscp-mutation-test)# mark 2,4,6,8 to 7</pre> <p>To remove a QoS DSCP-CoS map while in global configuration mode:</p> <pre>switch(config)# no qos map dscp-cos test</pre>
<b>Related Commands</b>	<a href="#">qos map dscp-traffic-class</a> , <a href="#">qos dscp-cos</a> , <a href="#">show qos maps dscp-cos</a>

## qos map dscp-mutation

Creates a DSCP mutation by remapping the incoming DSCP value of the ingress packet to outgoing DSCP values.

**Syntax** **qos map dscp-mutation** *name*  
**no map qos dscp-mutation** *name*  
**mark** *ingress dscp values to egress dscp value*

**Command Default** DSCP mutation is not enabled.

**Parameters** **name**  
 Name of dscp-mutation map  
**ingress dscp values**  
 Range of input DSCP values  
**egress dscp values**  
 Output DSCP value

**Modes** dscp-mutation mode for the dscp-mutation map  
 Global configuration mode

**Usage Guidelines** Enter **qos dscp-mutation** *name* while in configuration mode for a specific interface to apply the dscp-mutation map to that interface. When you enter **qos map dscp-mutation**, the system is placed in dscp-mutation mode for the configured map. At this point, you can map ingress DSCP values to egress DSCP values using the **mark** command.

Enter **no qos dscp-mutation** *name* while in interface configuration mode to remove the map from that interface.

Enter **no map dscp-mutation** *name* while in global configuration mode to remove the dscp-mutation map.

---

### NOTE

This command is only supported on VDX 8770-4, VDX 8770-8, and later switches.

---

**Examples** To create a QoS DSCP-mutation map and place system into dscp-mutation mode:

```
switch(config)# qos map dscp-mutation test
switch(dscp-mutation-test)#
```

To map an ingress DSCP value to egress DSCP values while in dscp-mutation mode:

```
switch(dscp-mutation-test)# mark 1,3,5,7 to 9
```

To map multiple ingress DSCP values to egress DSCP values while in dscp-mutation mode:

```
switch(dscp-mutation-test)# mark 1,3,5,7 to 9
switch(dscp-mutation-test)# mark 11,13,15,17 to 19
switch(dscp-mutation-test)# mark 12,14,16,18 to 20
switch(dscp-mutation-test)# mark 2,4,6,8 to 10
```

To remove a QoS DSCP-mutation map while in global configuration mode:

```
switch(config)# no qos map dscp-mutation test
```

**Related  
Commands**    [qos dscp-mutation, show qos maps dscp-mutation](#)

## qos map dscp-traffic-class

Creates a QoS map for performing DSCP-to-Traffic Class mapping. This creates a dscp-traffic-class map on the ingress interface. You can configure an interface with either a DSCP-to-Traffic-Class map or a CoS-to-Traffic-Class map.

<b>Syntax</b>	<p><b>qos map dscp-traffic-class</b> <i>name</i></p> <p><b>no qos map dscp-traffic-class</b> <i>name</i></p> <p><b>mark ingress dscp values to traffic class</b></p>
<b>Command Default</b>	DSCP-to-Traffic-Class mutation is not enabled.
<b>Parameters</b>	<p><b>name</b> Name of QoS DSCP-to-Traffic Class map.</p> <p><b>ingress dscp values</b> Range of input DSCP values</p> <p><b>traffic class</b> Traffic Class (0-7)</p>
<b>Modes</b>	<p>dscp-traffic-class mode for the dscp-traffic-class map</p> <p>Global configuration mode</p>
<b>Usage Guidelines</b>	<p>Enter <b>qos dscp-traffic-class</b> <i>name</i> while in configuration mode for a specific interface to apply the QoS DSCP-Traffic-Class map to that interface. When you enter <b>qos map dscp-traffic-class</b>, the system is placed in dscp-traffic-class mode for the configured map. At this point, you can map ingress DSCP values to traffic class values using the <b>mark</b> command.</p> <p>Enter <b>no qos dscp-traffic-class</b> <i>name</i> while in the interface mode to remove the map from that interface.</p> <p>Enter <b>no map dscp-mutation</b> <i>name</i> to remove the map while in global configuration mode.</p>
<b>Examples</b>	<p>To create a QoS DSCP-Traffic-Class map and place system into dscp-traffic-class mode:</p> <pre>switch(config)# qos map dscp-traffic-class test switch(dscp-traffic-class-test)#</pre> <p>To map ingress DSCP values to a traffic class while in dscp-traffic-class mode:</p> <pre>switch(dscp-traffic-class-test)# mark 1,3,5,7 to 3</pre> <p>To map multiple ingress DSCP values to traffic classes while in dscp-traffic-class mode:</p> <pre>switch(dscp-traffic-class-test)# mark 1,3,5,7 to 3 switch(dscp-traffic-class-test)# mark 11,13,15,17 to 5 switch(dscp-traffic-class-test)# mark 12,14,16,18 to 6 switch(dscp-traffic-class-test)# mark 2,4,6,8 to 7</pre> <p>To remove a QoS DSCP-Traffic-Class map while in global configuration mode:</p> <pre>switch(config)# no qos map dscp-traffic-class test</pre>
<b>Related Commands</b>	<a href="#">qos dscp-traffic-class</a> , <a href="#">show qos maps dscp-traffic-class</a>

## qos queue multicast scheduler

Configures the multicast Traffic Class packet expansion scheduler policy. All multicast Traffic Class packet expansion queues are serviced Deficit Weighted Round Robin (DWRR).

**Syntax** `qos queue multicast scheduler dwrr mTC0_WEIGHT mTC1_WEIGHT mTC2_WEIGHT mTC3_WEIGHT mTC4_WEIGHT mTC5_WEIGHT mTC6_WEIGHT mTC7_WEIGHT`

`no qos queue multicast scheduler`

**Command Default** The default weight value is 25 percent bandwidth for each multicast Traffic Class.

**Parameters** `dwrr`

Configures the DWRR multicast Traffic Class packet expansion policy.

***mTC0\_WEIGHT***

Sets the DWRR weight for multicast Traffic Class 0 packet expansion in units of bandwidth percentage. The sum of all weight values must equal 100 percent. Valid values range from 0 through 100.

***mTC1\_WEIGHT***

Sets the DWRR weight for multicast Traffic Class 1 packet expansion in units of bandwidth percentage. The sum of all weight values must equal 100 percent. Valid values range from 0 through 100.

***mTC2\_WEIGHT***

Sets the DWRR weight for multicast Traffic Class 2 packet expansion in units of bandwidth percentage. The sum of all weight values must equal 100 percent. Valid values range from 0 through 100.

***mTC3\_WEIGHT***

Sets the DWRR weight for multicast Traffic Class 3 packet expansion in units of bandwidth percentage. The sum of all weight values must equal 100 percent. Valid values range from 0 through 100.

***mTC4\_WEIGHT***

Sets the DWRR weight for multicast Traffic Class 4 packet expansion in units of bandwidth percentage. The sum of all weight values must equal 100 percent. Valid values range from 0 through 100.

***mTC5\_WEIGHT***

Sets the DWRR weight for multicast Traffic Class 5 packet expansion in units of bandwidth percentage. The sum of all weight values must equal 100 percent. Valid values range from 0 through 100.

***mTC6\_WEIGHT***

Sets the DWRR weight for multicast Traffic Class 6 packet expansion in units of bandwidth percentage. The sum of all weight values must equal 100 percent. Valid values range from 0 through 100.

***mTC7\_WEIGHT***

Sets the DWRR weight for multicast Traffic Class 7 packet expansion in units of bandwidth percentage. The sum of all weight values must equal 100 percent. Valid values range from 0 through 100.

**Modes** Global configuration mode

**Usage Guidelines** All multicast Traffic Class packet expansion queues are serviced Deficit Weighted Round Robin (DWRR). This multicast Traffic Class packet expansion scheduler policy is applied uniformly across the entire system.

Enter **no qos queue multicast scheduler** to return the multicast Traffic Class packet expansion scheduler to the default value.

**Examples** To set the multicast Traffic Class packet expansion scheduler for Traffic Class 0 getting 5 percent bandwidth, Traffic Class 1 getting 10 percent bandwidth, Traffic Class 2 getting 15 percent bandwidth, and Traffic Class 3 getting 20 percent bandwidth, and so on:

```
switch(config)# qos queue multicast scheduler dwrr 5 10 15 20 5 10 15 20
```

To return the system to the default multicast Traffic Class packet expansion scheduler policy:

```
switch(config)# no qos queue multicast scheduler
```

**Related Commands** [qos rcv-queue multicast rate-limit](#)

## qos queue scheduler

Configures the Traffic Class packet scheduler policy.

**Syntax** **qos queue scheduler strict-priority** *strict-priority-number* **dwrr** *weight0 weight1 weight2 weight3 weight4 weight5 weight6 weight7*

**no qos queue scheduler**

**Command Default** The default strict priority value is 8. There is no default value for each weight value.

**Parameters** **strict-priority**

Configures the Strict Priority Traffic Class policy. All Strict Priority Traffic Classes are serviced before any DWRR Traffic Classes.

***strict-priority-number***

Sets the number of the Strict Priority Traffic Class. This is the strict priority number of the highest Traffic Class. For example, if the strict priority number is 3, the Strict Priority Traffic Classes contains Traffic Classes 7, 6, and 5. Valid values range from 0 through 8.

**dwrr**

Configures the DWRR Traffic Class policy. There are a variable number of DWRR weight values accepted that are dependent on the setting of strict priority number. The strict priority number plus the number of DWRR weight values must always add up to 8 Traffic Classes.

***weight0***

Sets the DWRR weight for Traffic Class 0 in units of bandwidth percentage left over after servicing all of the Strict Priority Traffic Classes. The sum of all weight values must equal 100 percent. The *weight0* value is only valid when the strict priority number is less than 8. Valid values range from 0 through 100 percent.

***weight1***

Sets the DWRR weight for Traffic Class 1 in units of bandwidth percentage left over after servicing all of the Strict Priority Traffic Classes. The sum of all weight values must equal 100 percent. The *weight1* value is only valid when the strict priority number is less than 7. Valid values range from 0 through 100 percent.

***weight2***

Sets the DWRR weight for Traffic Class 2 in units of bandwidth percentage left over after servicing all of the Strict Priority Traffic Classes. The sum of all weight values must equal 100 percent. The *weight2* value is only valid when the strict priority number is less than 6. Valid values range from 0 through 100 percent.

***weight3***

Sets the DWRR weight for Traffic Class 3 in units of bandwidth percentage left over after servicing all of the Strict Priority Traffic Classes. The sum of all weight values must equal 100 percent. The *weight3* value is only valid when the strict priority number is less than 5. Valid values range from 0 through 100 percent.

***weight4***

Sets the DWRR weight for Traffic Class 4 in units of bandwidth percentage left over after servicing all of the Strict Priority Traffic Classes. The sum of all weight values must equal 100 percent. The *weight4* value is only valid



when the strict priority number is less than 4. Valid values range from 0 through 100 percent.

***weight5***

Sets the DWRR weight for Traffic Class 5 in units of bandwidth percentage left over after servicing all of the Strict Priority Traffic Classes. The sum of all weight values must equal 100 percent. The *weight5* value is only valid when the strict priority number is less than 3. Valid values range from 0 through 100 percent.

***weight6***

Sets the DWRR weight for Traffic Class 6 in units of bandwidth percentage left over after servicing all of the Strict Priority Traffic Classes. The sum of all weight values must equal 100 percent. The *weight6* value is only valid when the strict priority number is less than 2. Valid values range from 0 through 100 percent.

***weight7***

Sets the DWRR weight for Traffic Class 7 in units of bandwidth percentage left over after servicing all of the Strict Priority Traffic Classes. The sum of all weight values must equal 100 percent. The *weight7* value is only valid when the strict priority number is less than 1. Valid values range from 0 through 100 percent.

**Modes** Global configuration mode

**Usage Guidelines** Eight Traffic Classes are supported with a configurable number of them being Strict Priority and any remaining ones being serviced DWRR. This Traffic Class packet scheduler policy is applied uniformly across the entire system. Actual Traffic Class packet scheduling is performed independently by each switch.

In Brocade VCS Fabric mode, this command does not take effect and will result in a error. To update the scheduling, please use the CEE map configuration.

Enter **no qos queue scheduler** to return the Traffic Class packet scheduler to the default value.

**Examples** To set the Traffic Class packet scheduler for four Strict Priority Traffic Class and four DWRR Traffic Class with Traffic Class 0 getting 10 percent bandwidth, Traffic Class 1 getting 20 percent bandwidth, Traffic Class 2 getting 30 percent bandwidth, and Traffic Class 3 getting 40 percent bandwidth:

```
switch(config)# qos queue scheduler strict-priority 4 dwrr 10 20 30 40
```

To return the system to the default Traffic Class packet scheduler policy:

```
switch(config)# no qos queue scheduler
```

**Related Commands** [qos rcv-queue multicast rate-limit](#), [qos rcv-queue multicast threshold](#)

## qos random-detect traffic-class

Maps a Random Early Discard (RED) profile to a CoS priority value for a port.

**Syntax** `qos random-detect traffic-class value red-profile-id profile-ID value`

`no qos random-detect cos value`

**Command Default** Port CoS priority value is not mapped to the RED profile.

**Parameters** *value*

Class of Service (COS) value. Valid values range from 0 through 7.

*profile-ID value*

Random Error Detection value. Valid values range from 1 through 384.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The RED profile is defined by the `qos red-profile` command.

Enter `no qos random-detect cos value` while in the interface mode to remove the DSCP-to-Traffic-Class map from the interface.

**Examples** To map the profile to CoS priority 7 on the 10-gigabit Ethernet interface 1/2/2:

```
switch(config)# interface tengigabitethernet 1/2/2
switch(conf-if-te-1/2/2)# qos random-detect cos 7 red-profile-id 2
```

To remove the previously created profile from interface 1/2/2:

```
switch(config)# interface tengigabitethernet 1/2/2
switch(conf-if-te-1/2/2)# no qos random-detect cos 7
```

**Related  
Commands**

[interface](#), [qos red profile](#), [show qos red profiles](#), [show qos red statistics interface](#)

## qos rcv-queue cos-threshold

Configures the port tail drop thresholds.

**Syntax** `qos rcv-queue cos-threshold TDT0 { TDT1 | TDT2 | TDT3 | TDT4 | TDT5 | TDT6 | TDT7 }`

`no qos rcv-queue cos-threshold`

**Parameters** *TDT0*

Defines the proportion for the first port tail drop threshold. Valid values range from 0 through 100.

*TDT1*

Defines the proportion for the second port tail drop threshold. Valid values range from 0 through 100.

*TDT2*

Defines the proportion for the third port tail drop threshold. Valid values range from 0 through 100.

*TDT3*

Defines the proportion for the fourth port tail drop threshold. Valid values range from 0 through 100.

*TDT4*

Defines the proportion for the fifth port tail drop threshold. Valid values range from 0 through 100.

*TDT5*

Defines the proportion for the sixth port tail drop threshold. Valid values range from 0 through 100.

*TDT6*

Defines the proportion for the seventh port tail drop threshold. Valid values range from 0 through 100.

*TDT7*

Defines the proportion for the eighth port tail drop threshold. Valid values range from 0 through 100.

**Modes** Interface subconfiguration mode (gi, te).

**Usage Guidelines**

Every port has associated with it a total of nine CoS thresholds, one for the port tail drop threshold and the other eight are thresholds for per priority. To give a fair allocation of buffers for the traffic from all priorities, the port buffers are allocated among different priorities. That is achieved through per priority tail drop thresholds. The port tail drop threshold represents the amount of buffers given to the port and per priority tail drop thresholds (CoS tail drop thresholds from now on) represents the buffers allocated to each CoS.

Whenever the buffers allocated to a priority are fully exhausted, all the traffic coming in on that priority is dropped. In the absence of per priority tail drop thresholds (and only port tail drop threshold), the buffers would be consumed on a first come first serve basis and results in an unfair share of buffers between all the priorities.

If you know which priority traffic is most seen, then giving good number of buffers for those priorities results in less number of packet drops for those priorities. Therefore, instead of using the standard priority values, you can assign any priority from 0% to 100% to any threshold; however, the sum value of all eight priorities must not exceed 100%. For example, using the priorities 5 5 5 5 50 20 2 8 sums up to 100%.

The tail drop thresholds are not allowed to exceed 100%, but can be below 100%. For example, if the tail drop thresholds entered are less than 100%, then the buffer allocation happens as per what has been configured.

---

**NOTE**

Brocade recommends *not* configuring cos-thresholds on an edge interface for a COS value with pause/priority flow control enabled. Doing so could create buffer-allocation issues.

---

Enter **no qos rcv-queue cos-threshold** to remove the configured tail drop thresholds.

**Examples**

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# qos rcv-queue cos-threshold 5 5 5 5 50 20 2 8
switch(conf-if-te-178/0/9)# do show qos in te 178/0/9
Interface Ten Gigabit Ethernet 178/0/9
CoS-to-Traffic Class map 'default'
      In-CoS:   0   1   2   3   4   5   6   7
-----
Out-CoS/TrafficClass: 0/1 1/0 2/2 3/3 4/4 5/5 6/6 7/7
Per-Traffic Class Tail Drop Threshold (bytes)
      TC:       0     1     2     3     4     5     6     7
-----
Threshold: 10180 10180 10180 10180 101808 40723 4072 16289
```

**Related Commands**    [interface, qos rcv-queue multicast threshold](#)

## qos rcv-queue limit

Controls high burst traffic received on the Brocade VDX 6740.

**Syntax** `qos rcv-queue limit { buffering_upper_limit }`

**Command Default** The default value is 283 KB.

**Parameters** *buffering\_upper\_limit*

Defines the upper limit of buffering for the port. The recommended value is 2000 KB. The maximum value is 8000 KB.

**Modes** Rbridge ID configuration mode

**Usage Guidelines** With enhanced shared dynamic buffering mechanism, an interface is capable of bursting up to the recommended 2MB limit. Though a maximum of 8MB is allowed, you should consult your Brocade Engineer, as it may impact the performance of the other ports that may need to burst at the same time. .

**Examples** Typical command example:

```
switch(config-rbridge-1)# qos rcv-queue limit 8000
```

**History**

Release version	Command history
4.0.1	This command was introduced.

**Related Commands** [qos tx-queue limit](#)

## qos rcv-queue multicast rate-limit

Configures a cap on the maximum rate for multicast packet expansion such as packet replication. The rate limit is applied uniformly across the entire system and is enforced independently by each switch.

**Syntax** `qos rcv-queue multicast rate-limit rate [ burst burst-size ]`

`no qos rcv-queue multicast rate-limit`

**Command Default** The burst size is 4096 packets. The rate value is 3000000 pkt/s.

**Parameters** *rate*

Specifies the maximum rate for multicast packet expansion in units of packets per second (pkt/s). Valid values range from 6500 through 20000000 pkt/s.

**burst burst-size**

Configures a cap on the maximum burst size for multicast packet expansion. Valid values range from 50 through 65535 packets.

**Modes** Global configuration mode

**Usage Guidelines** This command is not supported on VDX 8770-4 and VDX 8770-8 switches.

The *rate* parameter places a cap on the sum of the first level expansion (for example, the ingress packets replicated for each egress switch) plus the second level expansion (for example, packets replicated for egress interfaces on the switch).

The **burst burst-size** parameter represents the maximum number of multicast packet expansion that can be performed back-to-back as a single burst in units of packets (pkt).

Enter `no qos rcv-queue multicast rate-limit` to return the multicast packet expansion rate limit to the default settings.

**Examples** To lower the maximum multicast packet expansion rate to 10000 pkt/s:

```
switch(config)# qos rcv-queue multicast rate-limit 10000
```

To return the system to the default multicast packet expansion rate limit values:

```
switch(config)# no qos rcv-queue multicast rate-limit
```

**Related Commands** [qos rcv-queue multicast threshold](#)

## qos rcv-queue multicast threshold

Configures a cap on the maximum queue depth for multicast packet expansion queues.

**Syntax** `qos rcv-queue multicast threshold mTC0 mTC1 mTC2 mTC3 mTC4 mTC5 mTC6 mTC7`  
`no qos rcv-queue multicast threshold`

**Command Default** 64 packets for each multicast Traffic Class.

**Parameters**

- mTC0** Sets the Tail Drop Threshold for multicast Traffic Class 0 packet expansion queue in units of packets (pkt). The valid range is 0 through 16383 packets.
- mTC1** Sets the Tail Drop Threshold for multicast Traffic Class 1 packet expansion queue in units of packets (pkt). The valid range is 0 through 16383 packets.
- mTC2** Sets the Tail Drop Threshold for multicast Traffic Class 2 packet expansion queue in units of packets (pkt). The valid range is 0 through 16383 packets.
- mTC3** Sets the Tail Drop Threshold for multicast Traffic Class 3 packet expansion queue in units of packets (pkt). The valid range is 0 through 16383 packets.
- mTC4** Sets the Tail Drop Threshold for multicast Traffic Class 4 packet expansion queue in units of packets (pkt). The valid range is 0 through 16383 packets.
- mTC5** Sets the Tail Drop Threshold for multicast Traffic Class 5 packet expansion queue in units of packets (pkt). The valid range is 0 through 16383 packets.
- mTC6** Sets the Tail Drop Threshold for multicast Traffic Class 6 packet expansion queue in units of packets (pkt). The valid range is 0 through 16383 packets.
- mTC7** Sets the Tail Drop Threshold for multicast Traffic Class 7 packet expansion queue in units of packets (pkt). The valid range is 0 through 16383 packets.

**Modes** Global configuration mode

**Usage Guidelines** The individual Tail Drop Threshold is specified for each of the four multicast traffic classes. These Tail Drop Thresholds are applied uniformly across the entire system. These queue depths are enforced independently by each switch.

This command is not supported on VDX 8770-4 and VDX 8770-8 switches.

Enter **no qos rcv-queue multicast threshold** to return the multicast expansion queues to the default value.

**Examples** To increase multicast packet expansion Tail Drop Threshold to 1000 pkt for each multicast Traffic Class:

```
switch(config)# qos rcv-queue multicast threshold 1000 1000 1000 1000 1000 1000 1000 1000
1000
```

To return the system to the default multicast packet expansion Tail Drop Threshold value:

```
switch(config)# no qos rcv-queue multicast threshold
```

**Related  
Commands**    [qos rcv-queue multicast rate-limit](#)



# qos red profile

Creates a Random Early Discard (RED) profile for egress traffic flow and provides a minimum threshold, maximum threshold, and drop-probability for egress traffic flow.

**Syntax** `qos red-profile profile-ID value min-threshold percentage max-threshold percentage drop-probability percentage`

`no qos red-profile profile-IDvalue`

**Parameters** *profile-ID value*

Valid values range from 1 through 384.

*percentage*

0 through 100 percent.

*min-threshold*

Minimum threshold (percentage) of queue size (0 through 100) for randomly dropping packets.

*max-threshold*

Maximum threshold (percentage) of queue size (0 through 100) when packets are dropped with 100% probability.

*drop-probability*

Probability that packets will be dropped when minimum threshold is reached.

**Modes** Global configuration mode

**Usage Guidelines** Enter `qos random-detect cos` command while in configuration mode for a specific interface to map the profile to a CoS priority for a port.

Enter `no qos random-detect cos` command while in the interface mode to remove the profile from the interface. You must remove the profile from interface before you can remove the profile itself.

Enter `no qos red-profile profile-ID` to remove the profile while in global configuration mode.

---

## NOTE

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

---

**Examples** To create a RED profile while in global configuration mode:

```
switch# configure terminal
Entering configuration mode terminal
switch(config)# qos red-profile 2 min-threshold 10 max-threshold 80 drop-probability
80
```

To remove the profile while in global configuration mode:

```
switch(config)# no qos red-profile 2
```

**Related Commands** [show qos red profiles](#)

## qos service-policy

Activates the global service policy mode that allows you to apply a service policy to a single Rbridge ID, a range of Rbridge IDs, or all Rbridge IDs.

<b>Syntax</b>	<b>qos service-policy</b> { <b>in</b>   <b>out</b> } <i>service_policy_name</i>				
<b>Parameters</b>	<p><b>in</b> Applies the service policy to inbound traffic.</p> <p><b>out</b> Applies the service policy to outbound traffic.</p> <p><b>service_policy_name</b> The name of the service policy to apply to the Rbridge ID.</p>				
<b>Modes</b>	Global configuration mode				
<b>Examples</b>	<p>Example of applying a service policy to inbound traffic on all Rbridge IDs.</p> <pre>switch# configure terminal switch(config)# qos service-policy in policymap1 switch(config-service-policy)# attach rbridge-id add all</pre>				
<b>History</b>	<table border="1"> <thead> <tr> <th>Release version</th> <th>Command history</th> </tr> </thead> <tbody> <tr> <td>5.0.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release version	Command history	5.0.0	This command was introduced.
Release version	Command history				
5.0.0	This command was introduced.				
<b>Related Commands</b>	<a href="#">attach rbridge-id</a> , <a href="#">class</a> , <a href="#">policy-map</a> , <a href="#">show class-maps</a> , <a href="#">show policymap</a>				

## qos trust cos

Specifies the interface QoS trust Class of Service (CoS), which controls user priority mapping of incoming traffic.

**Syntax** **qos trust cos**

**no qos trust cos**

**Command Default** The QoS trust mode set to the untrusted state.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The untrusted mode overrides all incoming priority markings with the Interface Default CoS. The CoS mode sets the user priority based on the incoming CoS value, if the incoming packet is not priority tagged, then fallback is to the Interface Default CoS value.

When a CEE map is applied on an interface, the **qos trust cos** command is not allowed. The CEE map always puts the interface in the CoS trust mode.

Enter **no qos trust cos** to return to the default.

**Examples** To set the interface QoS to the CoS trust mode for a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# qos trust cos
```

To return the interface QoS to the default value or to the untrusted state:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# no qos trust cos
```

When a CEE map is applied, the switch does not allow the **qos trust cos** command and displays the following error:

```
switch(conf-if-te-0/1)# cee demo
switch(conf-if-te-0/1)# qos trust cos
% Error: QoS is not in non-CEE Provisioning mode
```

**Related Commands** [interface, qos cos, show qos maps](#)

## qos trust dscp

Enables Differentiated Services Code Point (DSCP) which controls user priority mapping of incoming traffic

**Syntax** `qos trust dscp`

`no qos trust dscp`

**Command Default** The QoS trust DSCP mode set to the untrusted state.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The untrusted mode overrides all incoming priority markings with the Interface Default CoS. The DSCP trust mode sets the user priority based on the incoming DSCP value. When this feature is not enabled, DSCP values in the packet are ignored.

When DSCP trust is enabled, the following lists the default mapping of DSCP values to user priority.

**TABLE 12** Default DSCP priority mapping

DSCP Values	User Priority
0-7	0
8-15	1
16-23	2
24-31	3
32-39	4
40-47	5
48-55	6
56-63	7

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

QoS Trust Mode is automatically applied if **dscp-cos map** or **qos dscp traffic class** is applied to the interface.

Enter **no qos trust dscp** to return to the default.

**Examples** To set the interface QoS to DCSP trust mode on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# qos trust dscp
```

To return the interface QoS to the default value or to the untrusted state:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# no qos trust dscp
```

**Related** [interface](#), [qos map dscp-cos](#), [qos map dscp-traffic-class](#), [show qos interface](#), [show qos maps](#)  
**Commands** [dscp-traffic-class](#)

## qos tx-queue limit

Controls high burst traffic transmitted on the Brocade VDX 6740.

<b>Syntax</b>	<b>qos tx-queue limit</b> { <i>buffering_upper_limit</i> }				
<b>Command Default</b>	The default value is 283 KB.				
<b>Parameters</b>	<p><b><i>buffering_upper_limit</i></b></p> <p>Defines the upper limit of buffering for the port. The recommended value is 2000 KB. The maximum value is 8000 KB.</p>				
<b>Modes</b>	Rbridge ID configuration mode				
<b>Usage Guidelines</b>	With enhanced shared dynamic buffering mechanism, an interface is capable of bursting up to the recommended 2MB limit. Though a maximum of 8MB is allowed, you should consult your Brocade Engineer, as it may impact the performance of the other ports that may need to burst at the same time. .				
<b>Examples</b>	<p>Typical command example:</p> <pre>switch(config-rbridge-1)# qos tx-queue limit 8000</pre>				
<b>History</b>	<table border="1"> <thead> <tr> <th>Release version</th> <th>Command history</th> </tr> </thead> <tbody> <tr> <td>4.0.1</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release version	Command history	4.0.1	This command was introduced.
Release version	Command history				
4.0.1	This command was introduced.				
<b>Related Commands</b>	<a href="#">qos rcv-queue limit</a>				

## qos-profile (AMPP)

Activates the QoS profile mode for AMPP. This mode allows configuration of QoS attributes of a port-profile.

**Syntax**    **qos-profile**

**no qos-profile**

**Modes**     Port-profile configuration mode

**Usage Guidelines**    Enter **no qos-profile** to remove the profile.

**Examples**

```
switch(config)# port-profile sample-profile
switch(conf-pp)# qos-profile
```

## radius-server

Configures the Remote Authentication Dial-In User Service (RADIUS) server.

<b>Syntax</b>	<pre><b>radius-server host</b> { <i>ip-address</i>   <i>host_name</i> } [ <b>auth-port</b> <i>portnum</i> ] [ <b>protocol</b> { <b>chap</b>   <b>pap</b>   <b>peap</b> } ] [ <b>key</b> <i>shared_secret</i> ] [ <b>encryption-level</b> <i>value_level</i> ] [ <b>timeout</b> <i>sec</i> ] [ <b>retries</b> <i>num</i> ]</pre> <pre><b>no radius-server host</b> <i>hostname</i>   <i>ip-address</i></pre>
<b>Command Default</b>	A Remote Authentication Dial-In User Service (RADIUS) server is not configured.
<b>Parameters</b>	<p><b>host { <i>ipaddr</i>   <i>host_name</i> }</b> Specifies the IP address or host name of the RADIUS server. IPv4 and IPv6 addresses are supported. The maximum supported length for the RADIUS hostname is 40 characters.</p> <p><b>auth-port <i>portnum</i></b> Specifies the user datagram protocol (UDP) port used to connect the RADIUS server for authentication. The valid range is 0 through 65535. The default port is 1812.</p> <p><b>protocol { <b>chap</b>   <b>pap</b>   <b>peap</b> }</b> Specifies the authentication protocol. Parameters include CHAP, PAP, or PEAP-MSCHAP. The default is CHAP.</p> <p><b>key <i>shared_secret</i></b> The text string that is used as the shared secret between the switch and the RADIUS server. The default is <b>sharedsecret</b> . The exclamation mark (!) is supported both in RADIUS and TACACS+ servers, and you can specify the shared secret string in either double quotation marks or use the escape character (\). For example: "<b>secret!key</b>" or <b>secret\!key</b> .</p> <p><b>encryption-level <i>value_level</i></b> Designates the encryption level for the shared secret key operation. This operand supports JTC certification and compliance. The valid values are 0 and 7, with 0 being clear text and 7 being the most heavily encrypted. The default value is 7.</p> <p><b>timeout <i>sec</i></b> The time to wait for the RADIUS server to respond, in seconds. The default is 5 seconds.</p> <p><b>retries <i>num</i></b> The number of attempts allowed to connect to a RADIUS server. The default is 5 attempts.</p>
<b>Modes</b>	Global configuration mode
<b>Usage Guidelines</b>	<p>If a RADIUS server with the specified IP address or host name does not exist, it is added to the server list. If the RADIUS server already exists, this command modifies the configuration.</p> <p>The <b>key</b> parameter does not support an empty string.</p> <p>Enter <b>no radius-server</b> to reset to their default values.</p>

---

### NOTE

Before downgrading to a Network OS version that does not support the **encryption-level** keyword, set the value of this keyword to 0. Otherwise, the firmware download will throw an error that requests this value be set to 0.

---



**Examples** To configure a RADIUS server:

```
switch(config)# radius-server host 10.24.65.6 protocol chap retransmit 100
switch(config-radius-server-10.24.65.6)#
```

To modify the previously configured RADIUS server:

```
switch(config)# radius-server host 10.24.65.6 protocol pap key "new#radius*secret"
timeout 10
```

To reset the timeout value to the default:

```
switch(config)# no radius-server host 10.24.65.6 timeout
```

**Related Commands** [show running-config radius-server](#), [show running-config tacacs-server](#), [tacacs-server](#)

## rasman

Displays RASLog messages decoding and documentation on the switch.

**Syntax** **rasman** [ [ **module-description** ] | [ **message id** *RAS-message-id* ] | [ **module type** *module-name* ] | [ **type value** *RAS-message-type* ] ]

**Parameters** **module-description**

Displays the RAS module description.

**message id** *RAS-message-id*

Displays the RAS message ID details.

**module type** *module-name*

Displays the RAS message ID based on module. Displays all external RAS messages.

**type value** *RAS-message-type*

Displays the RAS message ID based on type. Possible completions: AUDIT, DCE, FFDC, LOG, and VCS.

**Modes** Privileged EXEC mode

**Usage Guidelines** Input value is case-sensitive.

**Examples** To display the module descriptions:

```
sw0# rasman module-description
RASModule      ID      Description
-----
KT              1      Kernel Test ID
UT              2      User Test ID
TRCE           3      Trace Subsystem (User)
KTRC           4      Trace Subsystem (Kernel)
LOG            5      RASLOG module
CDR            6      Condor ASIC driver
```

To display the messages pertaining to the AUTH module:

```
sw0# rasman module type AUTH
RAS Message ID  Severity  Message
-----
AUTH-1001      INFO      %s has been successfully completed.
AUTH-1002      ERROR     %s has failed.
AUTH-1003      INFO      %s type has been successfully set t
AUTH-1004      ERROR     Failed to set %s type to %s.
AUTH-1005      ERROR     Authentication file does not exist:
AUTH-1006      WARNING   Failed to open authentication confi
AUTH-1007      ERROR     The proposed authentication protoco
AUTH-1008      ERROR     No security license, operation fail
```

To display the AUDIT messages.

```
sw0# rasman type value AUDIT
RAS Message ID  Severity  Message
-----
FCIP-1002      INFO      An IPsec/IKE policy was added
FCIP-1003      INFO      An IPsec/IKE policy was deleted
AUTH-1045      ERROR     Certificate not present in this switch
AUTH-1046      INFO      %s has been successfully completed
AUTH-1047      ERROR     %s has failed
AUTH-3001      INFO      Event: %s, Status: success, Info: %
AUTH-3002      INFO      Event: %s, Status: success, Info: %
```

**Example of rasman type value DCE.**

```
sw0# rasman type value DCE
RAS Message ID Severity Message
-----
LACP-1001 ERROR %s Error opening socket (%d)
LACP-1002 ERROR %s %s
LACP-1003 INFO Port-channel %d up in defaulted state
LACP-1004 INFO Port-channel %d down from default
NSM-1001 INFO Interface %s is online
NSM-1002 INFO Interface %s is protocol down
```

**Example of rasman type value LOG:**

```
sw0# rasman type value LOG
RAS Message ID Severity Message
-----
FCIP-1000 ERROR %s of GE %d failed. Please retry
FCIP-1001 CRITICAL FIPS %s failed; algo=%d type=%d slot
FCIP-1002 INFO An IPsec/IKE policy was added
FCIP-1003 INFO An IPsec/IKE policy was deleted
FCIP-1004 INFO Tape Read Pipelining is being disabled
AUTH-1001 INFO %s has been successfully completed
AUTH-1002 ERROR %s has failed
```

**Example of rasman type value VCS:**

```
sw0# rasman type value VCS
RAS Message ID Severity Message
-----
SS-2000 INFO Copy support started on rbridge-id
SS-2001 INFO Copy support completed on rbridge-id
SS-2002 INFO Copy support failed on rbridge-id %
SULB-1105 WARNING Firmware upgrade session (%d: %s) s
SULB-1106 WARNING Firmware upgrade session (%d: %s) c
SULB-1107 WARNING Firmware upgrade session (%d: %s) f
```

## rate-limit-delay get netconf

Returns the rate limit delay configured for processing NETCONF Remote Procedure Calls (RPCs).

<b>Syntax</b>	<b>rate-limit-delay get netconf</b>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	This command returns the configured minimum time in milliseconds between processing successive NETCONF RPCs. A value of 0 indicates that RPC processing is unlimited.
<b>Related Commands</b>	<a href="#">rate-limit-delay set netconf</a>

## rate-limit-delay set netconf

Limits the rate at which BNA or NETCONF Remote Procedure Call (RPC) requests can be processed on the switch. Synopsistrate-limit-delay set netconf delay

**Syntax** `rate-limit-delay set netconf value`

**Command Default** The default is 0.

**Parameters** *value*

The number of milliseconds the system waits between processing RPCs.

**Modes** Privileged EXEC mode

**Usage Guidelines** The rate at which RPCs can be processed on the switch is specified the minimum delay between processing successive RPCs. The default of 0 means that the RPC processing rate is unlimited.

Use this command to prevent excessive numbers of RPCs from adversely affecting switch performance.

**Examples** This example limits the processing of RPCs to a maximum of one every 50 milliseconds.

```
switch# debug internal rate-limit-delay set netconf 50
```

**Related Commands** [rate-limit-delay get netconf](#)

## rbridge-id

Enables RBridge ID configuration mode to support VCS on individual nodes.

**Syntax** `rbridge-id rbridge-id`

`no rbridge-id rbridge-id`

**Parameters** `rbridge-id`

The number of an RBridge node.

**Modes** Global configuration mode

**Usage Guidelines** Use this command to enter RBridge ID configuration mode for fabric cluster and logical chassis cluster configuration.



### CAUTION

It is always preferable to have the RBridge ID configured on a switch. If the RBridge ID is not configured, deleting the interface IP address that matches the router ID will cause an OSPF process reset and a spike in CPU usage.

**Examples** Use the `rbridge-id ?` command in global configuration mode to see available nodes.

Enter RBridge ID configuration mode and use `?` to view commands available in that mode:

```
sw0(config)# rbridge-id 154
sw0(config-rbridge-id-154)# ?
Possible completions:
  arp                Address Resolution Protocol (ARP)
  chassis
  do                 Run an operational-mode command
  exit              Exit from current mode
  fabric            Allows to configure fabric related parameters
  fcsp             FCSP configuration commands
  filter-change-update-delay Change filter change update delay timer
  help             Provide help information
  interface        Interface configuration
  ip               Configure Internet Protocol (IP)
  ipv6             Configure Internet Protocol (IPv6)
  logical-chassis  Logical chassis commands
  management       The list of management interfaces.
  no               Negate a command or set its defaults
  protocol         Protocol configuration
  pwd              Display current mode path
  route-map        Configure a route-map instance
  router           Configure router
  secpolicy        Security policy related configuration
  ssh              Configure SSH Server
  switch-attributes Switch attributes configurations
  system-monitor   Configure FRU threshold and alert setting
  telnet           Configure Telnet Server
  threshold-monitor Configure Class monitoring threshold and alert
                  setting
  top              Exit to top level and optionally run command
  vrf              VRF configurations
```

## rd (route distinguisher)

Distinguishes a route for VRF.

**Syntax** `rd admin-value:arbitrary-value`

**Parameters** *admin-value*

The administrative number assigned to the route. This can be a local ASN number or an IP address. The ASN number can be either a 2-byte number (from 0 through 65535) or a 4-byte number (from 0 through 4294967295).

*arbitrary-value*

An arbitrary number you choose. The range of valid values is from 0 through 65535 if the ASN is 2 byte, or from 0 through 4294967295 if the ASN is 4 byte.

**Modes** VRF configuration mode

**Usage Guidelines** This command allows you to use the same IP address in different VPNs without creating any conflicts. The Route Distinguisher parameter can be either ASN-relative or IP address-relative.

Once the Route Distinguisher is configured for a VRF it cannot be changed or deleted.

To remove the Route Distinguisher, you must delete the VRF.

**Examples** To configure Route Distinguisher:

```
switch# configure terminal
Entering configuration mode terminal
switch(config)# rbridge-id 53
switch(config-rbridge-id-53)# vrf red
switch(config-vrf-red)# rd 101:101
```

To remove Route Distinguisher, remove the VRF.

```
switch(config-vrf-red)# no vrf red
```

**Related Commands** [vrf, ip router-id](#)

## reconnect-interval

Sets the reconnect interval between the NSX controller and the VCS fabric.

**Syntax** `reconnect-interval interval`

`no reconnect-interval`

**Command Default** 10 seconds

**Parameters** *interval*

Specifies the maximum number of seconds to wait between connection attempts. Value must be in the range of 1 to 1000.

**Modes** NSX controller configuration mode

**Usage Guidelines** Use this command to set the reconnect interval for the NSX controller connection profile. If the connection is lost between the NSX and the VCS fabric, a reconnection attempt occurs at this interval.

This command is allowed for a switch that is in logical chassis cluster mode only.

Use the **no** form of the command to revert the reconnect interval to the default value.

**Examples** To set the reconnect interval to 30 seconds for an NSX controller profile that you have already created (named *profile1*) :

```
switch# configuration
switch(config)# nsx-controller profile1
switch(config-nsx-controller-profile1)# reconnect-interval 30
```



## redistribute (BGP)

Configures the device to redistribute OSPF, ISIS, or RIP routes, directly connected routes, or static routes into BGP4 and BGP4+.

<b>Syntax</b>	<b>redistribute</b> { <b>connected</b>   <b>static</b> } [ <b>metric</b> <i>num</i>   <b>route-map</b> <i>string</i> ]  <b>no redistribute</b> { <b>connected</b>   <b>static</b> } [ <b>metric</b> <i>num</i>   <b>route-map</b> <i>string</i> ]
<b>Command Default</b>	The device does not redistribute routing information between BGP4 or BGP4+ and the IP interior gateway protocol OSPF.
<b>Parameters</b>	<p><b>connected</b> Redistributes connected routes.</p> <p><b>static</b> Redistributes static routes.</p> <p><b>metric</b> Metric for redistributed routes.</p> <p><b>num</b> Specifies a metric number. The range is from 0 through 4294967297. No value is assigned by default.</p> <p><b>route-map</b> Specifies that a route map be consulted before a route is added to the routing table.</p> <p><b>string</b> Specifies a route map to be consulted before a route is added to the routing table.</p>
<b>Modes</b>	BGP address-family IPv4 unicast configuration mode BGP address-family IPv6 unicast configuration mode
<b>Usage Guidelines</b>	Use this command to configure the device to redistribute OSPF, directly connected routes, or static routes into BGP4 or BGP4+. The routes can be filtered by means of an associated route map before they are distributed.  Use the <b>no</b> form of the command to restore the defaults.

---

### NOTE

The **default-metric** command does not apply to the redistribution of directly connected routes into BGP4 or BGP4+. Use a route map to change the default metric for directly connected routes.

---

### Examples

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router bgp
switch(config-bgp-router)# address-family ipv4 unicast
switch(config-bgp-ipv4u)# redistribute static metric 200
```

To redistribute directly connected routes into BGP4+ and specify route-map 5 to be consulted.

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router bgp
switch(config-bgp-router)# address-family ipv6 unicast
switch(config-bgp-ipv6u)# redistribute static metric 200
```

**History**

---

<b>Release version</b>	<b>Command history</b>
NOS v5.0.0	This command was modified to add support for the IPv6 address family.

---

**Related  
Commands**

[route-map, default-metric \(OSPF\)](#)

# redistribute (OSPF)

Configures the device to redistribute OSPF routes.

**Syntax** `redistribute ospf { match [ external1 | external2 | internal ] } [ metric num ] | route-map string`  
`no redistribute ospf { match [ external1 | external2 | internal ] } [ metric num ] | route-map string`

**Command Default** Internal OSPF routes are distributed. No value is assigned for *num* .

**Parameters**

- match***
- external1*** Selects the type of route to be redistributed.
- external2*** Redistributes OSPF external type 1 routes.
- internal*** Redistributes OSPF external type 2 routes.
- num*** Redistributes OSPF internal routes.
- string*** A value that assigns the metric. The range is from 0 through 4294967297.  
Specifies a route map to be consulted before an OSPF route is added to the BGP4 routing table.

**Modes** BGP address-family IPv4 unicast configuration mode  
BGP address-family IPv6 unicast configuration mode

**Usage Guidelines** Use the **redistribute ospf** command to redistribute all OSPF routes (OSPF external type 1, external type 2, or internal routes). Use the **no** form of the command to restore the defaults.

**Examples**

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router bgp
switch(config-bgp-router)# address-family ipv4 unicast
switch(config-bgp-ipv4u)# redistribute ospf match external1 metric 200
```

History	Release version	Command history
	NOS v5.0.0	This command was modified to add support for the IPv6 address family.

**Related Commands** [default-metric \(OSPF\)](#)

## region

Assigns a name to the Multiple Spanning Tree Protocol (MSTP) region.

**Syntax** `region region-name`

`no region`

**Parameters** *region-name*

Assigns a name to an MSTP region.

**Modes** Protocol Spanning Tree MSTP configuration mode

**Usage Guidelines** The *region-name* string must be between 1 and 32 ASCII characters in length, and is case-sensitive. If MSTP is enabled over VCS, this command must be executed on all RBridge nodes. Enter **no region** to delete the region name.

**Examples** To assign a name to an MSTP region named brocade1:

```
switch(config)# protocol spanning-tree mstp
switch(conf-mstp)# region brocade1
```

**Related Commands** [revision](#), [show spanning-tree](#)

# reload

Reboots the control processor (CP) or management module (MM).

**Syntax** `reload [ standby | system ]`

`reload system [ rbridge-id { rbridge-id | all } ]`

**Parameters** **standby**

Reboots the standby CP or MM on a dual CP/MM chassis.

**system**

Reboots an entire chassis.

**rbridge-id**

Specifies an RBridge or all RBridges.

*rbridge-id*

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command performs a "cold reboot" (power off and restart) of the CP or MM.

The **reload** operation is generally disruptive and the command prompts for confirmation before executing. When you reboot a switch connected to a fabric, all traffic to and from that switch stops. All ports on that switch remain inactive until the switch comes back online.

On a Top-of-Rack (ToR) switch, if the power-on-self-test (POST) is enabled, it is executed when the system comes back up.

On a modular chassis, the **reload** commands only reboots the management module on which the command is executed. If you log in to the switch IP address and execute the **reload** command, only the active management module reboots and POST is bypassed.

The available modes are listed below.

**TABLE 13** Available modes

Mode	Definition
Standalone	Standalone. A node is in Standalone mode when Virtual Cluster Switching (VCS) is disabled.
FC	Fabric cluster. In FC mode, the data path for nodes is distributed, but the configuration path is not distributed. Each node maintains its own configuration database.
LC	Logical chassis cluster. In LC mode, both the data path and the configuration path are distributed.

The following summarizes the behavior of the **reload** command under a variety of conditions.

**TABLE 14** Behavior of the **reload** command

Command	HA synchronized		HA not synchronized	
	Active	Standby	Active	Standby
reload	If executed on active MM, reboots that MM 1.	If executed on active MM, reboots that MM.	The user is prompted to execute the <b>reload system</b> command.	N/A
	In FC mode, the running configuration becomes the new active configuration.			N/A
	In LC mode, the running configuration becomes the new active configuration.			N/A
reload standby	Reboots the standby MM.	Reboots the standby MM.	Reboots the standby MM.	Reboots the standby MM.
reload system	Reboots the chassis and remains the master MM.	Not allowed.	If executed on active MM, reboots the chassis and remains the master MM.	Not allowed.
	In FC mode, the startup configuration is used.		In FC mode, the startup configuration is used.	
	In LC mode, the running configuration is used.		In LC mode, the running configuration is used.	

**Examples** To perform a cold reboot on the switch:

```
switch# reload
Warning: Unsaved configuration will be lost. Please run `copy running-config startup-config` to save the current configuration if not done already.
Are you sure you want to reload the switch [y/n]?: y
```

**Related Commands** [fastboot, ha chassisreboot, ha failover](#)

## remap fabric-priority

Remaps the CoS fabric priority to a different priority for Brocade VCS Fabric mode.

**Syntax** **remap fabric-priority** *priority*

**Command Default** The default is 0.

**Parameters** *priority*

Specifies the remapped CoS priority value for Brocade VCS Fabric mode. The valid range is 0 through 6.

**Modes** CEE map configuration mode

## remap lossless-priority

Remaps the Brocade VCS Fabric Fabric lossless priorities to a different priority

**Syntax** `remap lossless-priority priority`

**Parameters** *priority*  
Specifies the remapped priority value. Valid values range from 0 through 6.  
Default is 0.

**Modes** CEE map configuration mode



# rename

Renames a file in the switch flash memory.

**Syntax** `rename current_name new_name`

**Parameters** `current_name` The file name you want to change.  
`new_name` The new file name.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.  
 System files cannot be renamed. If you try to rename a system file, a warning message is displayed.

**Examples** To rename a file:

```
switch# rename myconfig.vcs myconfig.old

switch# dir

total 24
drwxr-xr-x  2 root   sys      4096 Feb 13 00:39 .
drwxr-xr-x  3 root   root     4096 Jan  1 1970 ..
-rwxr-xr-x  1 root   sys       417 Oct 12 2010 myconfig.old
-rwxr-xr-x  1 root   sys       417 Oct 12 2010 defaultconfig.novcs
-rwxr-xr-x  1 root   sys       697 Oct 12 2010 defaultconfig.vcs
-rw-r--r--  1 root   root     6800 Feb 13 00:37 startup-config
```

**Related Commands** [copy](#), [delete](#), [dir](#), [show file](#)

## rename (Access Gateway mode)

Provides a name for a port group or renames a port group in Access Gateway mode.

<b>Syntax</b>	<b>rename</b> <i>pg_name</i>
<b>Parameters</b>	<i>pg_name</i> Port group name
<b>Modes</b>	Port Grouping configuration mode
<b>Usage Guidelines</b>	You must be in Port Grouping configuration mode for the specific port group to use this command. The <i>pg_name</i> cannot exceed 64 characters,.
<b>Examples</b>	Renaming port group pg-1 to pg-array24.  <pre>sw0(config-rbridge-id-3-ag-pg-1)# rename pg-array24</pre>
<b>Related Commands</b>	<a href="#">pg</a> , <a href="#">show ag pg</a>

## resequence access-list

Reassigns sequence numbers to entries of an existing MAC,IPv4, or IPv6 access list.

**Syntax** `resequence access-list { ip | ipv6 | mac } name seq_num increment`

**Parameters** `ip | ipv6 | mac`

**name** Specifies the Layer 2 or Layer 3 ACL bound to an interface.

**seq\_num** Specifies the name of a standard or an extended ACL. A maximum of 63 characters is allowed.

**increment** Specifies the starting sequence number in the ACL. Valid values range from 1 through 4294967290.

**increment** Specifies a value to increment the sequence number between rules. Valid values range from 1 through 4294967290.

**Modes** Privileged EXEC mode

**Usage Guidelines** Reordering the sequence numbers is useful when you need to insert rules into an existing ACL and there are not enough sequence numbers available. When all sequence numbers between rules are exhausted, this feature allows the reassigning of new sequence numbers to entries of an existing access list. Examples

To reorder the rules in a MAC ACL:

```
switch# show running-config access-list mac test
!
mac access-list standard test
 seq 1 permit 0011.2222.3333
 seq 2 permit 0011.2222.4444
 seq 3 permit 0011.2222.5555
 seq 4 deny 0011.2222.6666
!
switch# resequence access-list mac test 10 10
switch# show running-config access-list mac test
!
mac access-list standard test
 seq 10 permit 0011.2222.3333
 seq 20 permit 0011.2222.4444
 seq 30 permit 0011.2222.5555
 seq 40 deny 0011.2222.6666
!
```

To reorder the rules in an IPv6 ACL:

```
switch# show running-config ipv6 access-list distList
!
ipv6 access-list standard distList
 seq 10 deny 2001:125:132:35::/64
 seq 20 deny 2001:54:131::/64
 seq 30 deny 2001:5409:2004::/64
 seq 40 permit any!
switch# resequence access-list ipv6 distList 100 100
switch# show running-config ipv6 access-list distList
!
ipv6 access-list standard distList
 seq 100 deny 2001:125:132:35::/64
```

## Commands P through short-path-forwarding

```
seq 200 deny 2001:54:131::/64
seq 300 deny 2001:5409:2004::/64
seq 400 permit any
!
```

**Related Commands** [mac access-list extended, seq \(MAC extended ACLs\), seq \(IPv6 standard ACLs\), seq \(MAC standard ACLs\)](#)

## reserved-vlan

Defines the range of 802.1Q VLANs that cannot be created by means of the **interface vlan** command.

**Syntax** **reserved-vlan** *start-VLAN-ID end-VLAN-ID*

**Command Default** VLANs 4087 through 4095 are reserved on the switch.

**Parameters** **start-VLAN-ID**

Valid values range from 1 through 4086.

**end-VLAN-ID**

Valid values range from 1 through 4086.

**Modes** Global configuration mode

### Usage Guidelines

---

#### NOTE

This command does not apply to service or transport VFs in a Virtual Fabrics context (VLAN ID > 4095).

The end value must be greater than the start value. This command succeeds if there are no VLANs configured in the specified range. Otherwise, an error instructs you to delete the configured VLANs in the specified range, or provide a different range.

VLAN 1002 is still the default FCoE VLAN. VLAN 1002 cannot be part of the reserved VLAN range unless some other VLAN is created for FCoE.

This command does not require a switch reboot.

**Related Commands** [show default-vlan](#), [interface vlan](#), [show running reserved-vlan](#)

## restrict-flooding

Restricts the flooding of egress BUM traffic from an AMPP port-profile port.

**Syntax** **restrict-flooding**

**no restrict-flooding**

**Command Default** Egress BUM traffic is allowed

**Modes** Port-profile configuration mode

**Usage Guidelines** This command is applicable only on the default profile and automatically applied to all the AMPP port-profile-ports on the switch.

This command only blocks the egress BUM traffic. Ingress traffic, known as unicast traffic, is not impacted.

Use the **no restrict-flooding** version of this command to remove the restriction.

**Related Commands** [fcoe-profile \(AMPP\)](#), [security-profile \(AMPP\)](#), [switchport](#), [port-profile-port](#), [port-profile \(global configuration mode\)](#)

# revision

Assigns a version number to the Multiple Spanning Tree Protocol (MSTP) configuration.

**Syntax** **revision** *number*

**no revision**

**Command Default** The default is 0.

**Parameters** *number*

Specifies the revision or version number of the MSTP region. Valid values range from 0 through 255.

**Modes** Protocol Spanning Tree MSTP configuration mode

**Usage Guidelines** If MSTP is enabled over VCS, this command must be executed on all Rbridges. Enter **no revision** to return to the default setting.

**Examples** To set the configuration revision to 1:

```
switch(config)# protocol spanning-tree mstp
switch(conf-mstp)# revision 1
```

**Related Commands** [region](#), [show spanning-tree](#)

## rfc1583-compatibility (OSPF)

Configures compatibility with RFC 1583.

**Syntax** **rfc1583-compatibility**

**no rfc1583-compatibility**

**Command Default** OSPF is compatible with RFC 1583 (OSPFv2).

**Modes** OSPF VRF router configuration mode

**Usage Guidelines** OSPF is compatible with RFC 1583 (OSPFv2) and maintains a single best route to an autonomous system (AS) boundary router in the OSPF routing table. Disabling this compatibility causes the OSPF routing table to maintain multiple intra-AS paths, which helps prevent routing loops.

Enter **no rfc1583-compatibility** to disable compatibility with RFC 1583.

**Examples** To disable compatibility with RFC 1583:

```
switch# configure
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)#router ospf
switch(config-router-ospf-vrf-default-vrf)# rfc1583-compatibility
```



## rfc1587-compatibility (OSPF)

Configures compatibility with RFC 1587.

**Syntax**    **rfc1587-compatibility**  
**no rfc1587-compatibility**

**Command Default**    OSPF is compatible with RFC 1587 (OSPFv2).

**Modes**    OSPF VRF router configuration mode

**Usage Guidelines**    RFC 1587 is the original NSSA specification. Only part of the newer RFC 3101 is supported—the "no-summary" parameter and the handling of default-route LSAs when "no summary" is enabled.

Enter **no rfc1587-compatibility** to disable compatibility with RFC 1587.

**Examples**    To disable compatibility with RFC 1587:

```
switch# configure
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)#router ospf
switch(config-router-ospf-vrf-default-vrf)# no rfc1587-compatibility
```

## rib-route-limit (BGP)

Limits the maximum number of BGP Routing Information Base (RIB) routes that can be installed in the Routing Table Manager (RTM).

<b>Syntax</b>	<b>rib-route-limit</b> <i>num</i> <b>no rib-route-limit</b> <i>num</i>				
<b>Command Default</b>	This option is disabled. There is no limit.				
<b>Parameters</b>	<b>num</b> Decimal value for maximum number of RIB routes to be installed in the RTM. Range is from 1 through 65535.				
<b>Modes</b>	BGP Address-Family IPv4 Unicast configuration mode BGP Address-Family IPv6 Unicast configuration mode				
<b>Usage Guidelines</b>	Use the <b>no</b> form of this command to restore the default.  Beginning with Network OS v5.0.0, the <b>rib-route-limit</b> command controls the number of routes installed by BGP, irrespective of whether those BGP routes are the preferred routes in the system. BGP locally tracks the number of routes installed and the number of routes withdrawn from RIB. If the total number of routes installed exceeds the specified rib-route-limit, routes will not be installed.  If the rib-route-limit value is increased, route calculation is automatically triggered.  If the rib-route-limit value is decreased, you will be prompted to clear the BGP RTM.				
<b>Examples</b>	To configure the device to limit the maximum number of BGP RIB routes that can be installed in the RTM:  <pre>switch(config)# rbridge-id 10 switch(config-rbridge-id-10)# router bgp switch(config-bgp-router)# address-family ipv4 unicast switch(config-bgp-ipv4u)# rib-route-limit 10000</pre>				
<b>History</b>	<table border="1"> <thead> <tr> <th>Release version</th> <th>Command history</th> </tr> </thead> <tbody> <tr> <td>NOS v5.0.0</td> <td>This command was modified to add support for the IPv6 address family and to control the number of routes installed by BGP.</td> </tr> </tbody> </table>	Release version	Command history	NOS v5.0.0	This command was modified to add support for the IPv6 address family and to control the number of routes installed by BGP.
Release version	Command history				
NOS v5.0.0	This command was modified to add support for the IPv6 address family and to control the number of routes installed by BGP.				

# rmon alarm

Sets the RMON alarm conditions.

**Syntax** `rmon alarm index snmp_oid interval seconds [ absolute | delta ] rising-threshold value event number [ falling-threshold value event number [ owner name ]`

`no rmon alarm`

**Command Default** No alarms are configured.

**Parameters** *index*

Specifies the RMON alarm index. Valid values range from 1 through 65535.

*snmp\_oid*

Specifies the MIB object to monitor. The variable must be in the SNMP OID format, for example, 1.3.6.1.2.1.16.1.1.1.5.65535. The object type must be a counter32.

*interval seconds*

Specifies the RMON alarm sample interval in seconds. Valid values range from 1 through 2147483648.

*absolute*

Sets the sample type as absolute.

*delta*

Sets the sample type as delta.

*rising-threshold value*

Specifies the RMON alarm rising threshold. Valid values range from 0 through 4294967295.

*event number*

Specifies the event for the rising alarm. Valid values range from 1 through 65535.

*falling-threshold value*

Specifies the RMON alarm falling threshold. Valid values range from 0 through 4294967295.

*event number*

Specifies the event for the falling alarm. Valid values range from 1 through 65535.

*owner name*

Specifies the identity of the owner. The maximum number of characters is 32.

**Modes** Global configuration mode

**Usage Guidelines** Enter `no rmon alarm` to disable the alarm conditions.

**Examples** To set RMON alarm conditions:

```
switch(config)# rmon alarm 100 1.3.6.1.2.1.16.1.1.1.5.65535 interval 5 absolute
rising-threshold 10000 event 100 falling-threshold 1000 event 101 owner admin
```

**Related Commands** [rmon event](#), [show rmon](#)

## rmon collection history

Collects Ethernet group statistics for later retrieval.

**Syntax** `rmon collection history number [ buckets bucket_number | interval seconds | owner name ]`

`no rmon collection history number`

**Command Default** RMON history collection is not enabled.

**Parameters** *number*

Specifies the RMON collection control index value. Valid values range from 1 through 65535.

**buckets bucket\_number**

Specifies the maximum number of buckets for the RMON collection history. Valid values range from 1 through 65535.

**interval seconds**

Specifies the alarm sample interval in seconds. Valid values range from 1 through 3600. The default value is 1800.

**owner name**

Specifies the identity of the owner. The maximum number of characters is 15.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command collects periodic statistical samples of Ethernet group statistics on a specific interface for later retrieval.

Enter `no rmon collection history number` to disable the history of statistics collection.

**Examples** To collect RMON statistics, with an RMON collection control index value of 5 for the owner named *admin*, on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 170/0/1
switch(conf-if-te-170/0/1)# rmon collection history 5 owner admin
```

**Related Commands** [interface](#), [show rmon history](#)

## rmon collection stats

Collects Ethernet group statistics on a specific interface.

**Syntax** `rmon collection stats number [ owner name ]`

`no rmon collection stats number`

**Command Default** RMON statistic collection is not enabled.

**Parameters** *number*

Specifies the RMON collection control index value. Valid values range from 1 through 65535.

*owner name*

Specifies the identity of the owner.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no rmon collection stats number` to disable the collection of statistics.  
Ethernet group statistics collection is not supported on ISL links.

**Examples** To collect RMON statistics, with an RMON collection control index value of 2 for the owner named *admin*, on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 170/0/1
switch(conf-if-te-170/0/1)# rmon collection stats 2 owner admin
```

**Related Commands** [interface](#), [show rmon history](#)

## rmon event

Adds or removes an event in the RMON event table associated to the RMON alarm number.

**Syntax** `rmon event index [ description word | log | owner name | trap word ]`

`no rmon event`

**Command Default** No events are configured.

**Parameters** *index*

Specifies the RMON event number. Valid values range from 1 through 65535.

**description word**

Specifies a description of the event.

**log**

Generates an RMON log when an event is triggered.

**owner name**

Specifies the owner of the event. The *name* string must be between 1 and 32 characters in length.

**trap word**

Specifies the SNMP community or string name to identify this trap.

**Modes** Global configuration mode

**Usage Guidelines** Enter `no rmon event` to remove the event configuration.

**Examples** To configure an RMON event:

```
switch(config)# rmon event 2 log description "My Errorstoday" owner gjack
```

**Related Commands** [show rmon history](#)

# role name

Creates or modifies a user role.

**Syntax** `role name role_name [ desc description ]`

`no role name`

**Parameters** `role_name`

The name of the role.

`desc description`

An optional description of the role.

**Modes** Global configuration mode

## Usage Guidelines

A role defines the access privileges of the user accounts on the switch. A user is associated with a single role. You first create the role and later associate the role with rules to define the access permissions.

The role name must begin with a letter and can contain alphanumeric characters and underscores. The length of the role name should be between 4 and 32 characters. The name cannot be same as that of an existing user.

The description field supports up to 64 characters and can include any printable ASCII character, except for the following characters: single quotation mark ('), double quotation mark ("), exclamation point (!), colon (:), and semi-colon (;). If the description contains spaces, you must enclose the text in double quotation marks.

The maximum number of roles supported is 64.

Enter **no role name** to set the attributes to their default values.

**Examples** To create a role of a VCS administrator

```
switch(config)# role name VCSAdmin desc "Manages VCS fabrics"
```

To reset the description to the default value (no description):

```
switch(config)# no role name VCSAdmin desc
```

To delete the role:

```
switch(config)# no role name
```

## Related Commands

[rule](#), [show running-config role](#), [show running-config rule](#)

# root access console

Restricts the root access to the device to the console only.

**Syntax** `root access console`

`no root access console`

**Modes** RBridge ID configuration mode

**Usage Guidelines** The `no root access console` allows root access to the device through all terminals (SSH, Telnet, and console).

**Examples** Typical command output:

```
switch(config-rbridge-id-1)# do show running-config rbridge-id | include root
% No entries found.
switch(config-rbridge-id-1)# root access console
switch(config-rbridge-id-1)# do show running-config rbridge-id | include root
root access console
switch(config-rbridge-id-1)#
```

**History**

Release version	Command history
5.0.1a	This command was introduced.

**Related Commands**

[root enable](#)



# root enable

Enables root access to the device following a firmware configuration.

**Syntax** **root enable**

**no root enable**

**Modes** RBridge ID configuration mode

**Usage Guidelines** The **no root enable** command disables root access to the device.

**Examples** Typical command output:

```
switch(config-rbridge-id-1)# do show running-config rbridge-id | include root
% No entries found.
switch(config-rbridge-id-1)# root enable
% Info: Root password is at system default, for better security, you may want to
change it.
switch(config-rbridge-id-1)# do show running-config rbridge-id | include root
root enable
switch(config-rbridge-id-1)#
```

**History**

Release version	Command history
5.0.1a	This command was introduced.

**Related Commands** [root access console](#)

## route-map

Creates or deletes a route map instance, with a variety of options.

<b>Syntax</b>	<pre><b>route-map</b> <i>name</i> [ <b>permit</b>   <b>deny</b> ] <i>instance_number</i>   [ <b>continue</b> <i>sequence_number</i> ]</pre> <pre><b>no route-map</b> <i>name</i> [ <b>permit</b>   <b>deny</b> ] <i>instance_number</i>   [ <b>continue</b> <i>sequence_number</i> ]</pre>
<b>Parameters</b>	<p><b><i>name</i></b> The name of the route map. The string must be between 1 and 63 ASCII characters in length.</p> <p><b>permit</b> Allows a matching pattern</p> <p><b>deny</b> Disallows a matching pattern.</p> <p><b><i>instance_number</i></b> The instance ID. The range is from 1 through 65535.</p> <p><b>continue</b> Use a "continue" clause to allow for more programmable policy configuration and route filtering, with capability to execute additional entries in a route map after an entry is executed with successful "match" and "set" clauses.</p> <p><b><i>sequence_number</i></b> The sequence ID. The range is from 1 through 65535.</p>
<b>Modes</b>	RBridge ID configuration mode
<b>Usage Guidelines</b>	<p>This command is used in conjunction with the on <b>match</b> and <b>set</b> commands. For details on these commands, refer to the Related Commands section:</p> <p>The maximum number of OSPF networks that can be advertised and processed in a single area in a router is limited to 600.</p> <p>Enter <b>no route-map</b> <i>name</i> to remove the route-map name.</p>
<b>Related Commands</b>	<p><a href="#">match (route map)</a>, <a href="#">match access-list</a>, <a href="#">match as-path</a>, <a href="#">match community</a>, <a href="#">match interface</a>, <a href="#">match ip address</a>, <a href="#">match ip next-hop</a>, <a href="#">match metric</a>, <a href="#">match protocol bgp</a>, <a href="#">match route-type</a>, <a href="#">match tag</a>, <a href="#">set as-path</a>, <a href="#">set as-path prepend</a>, <a href="#">set automatic-tag</a>, <a href="#">set comm-list</a>, <a href="#">set community</a>, <a href="#">set cos traffic-class</a>, <a href="#">set dscp</a>, <a href="#">set dampening</a>, <a href="#">set distance</a>, <a href="#">set local-preference</a>, <a href="#">set metric</a>, <a href="#">set metric-type</a>, <a href="#">set origin</a>, <a href="#">set route-type</a>, <a href="#">set tag</a>, <a href="#">set weight</a></p>

## router bgp

Enables BGP4 and BGP4+ routing.

**Syntax** `router bgp`

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use the `no` form of this command to disable BGP4 routing.

**Examples** To enable BGP4 routing:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)#
```

## router fabric-virtual-gateway

Configures the Fabric-Virtual-Gateway protocol globally in VCS.

**Syntax** `router fabric-virtual-gateway`

`no router fabric-virtual-gateway`

**Command Default** None

**Modes** Global configuration mode

**Usage Guidelines** Enter the **no** form of the command to disable the Fabric-Virtual-Gateway configuration.

**Examples** The following example shows how to configure the Fabric-Virtual-Gateway protocol.

```
switch(config)# router fabric-virtual-gateway
```

**History**

---

Release version	Command history
-----------------	-----------------

5.0.1	This command was introduced.
-------	------------------------------

---

## router ospf

Enables and configures the Open Shortest Path First (OSPF) routing protocol over virtual forward and routing (VRF) and enter OSPF VRF router configuration mode.

**Syntax** `router ospf [ vrf name ]`

`no router ospf`

**Command Default** Enabled

**Parameters** `vrf name`

The name of the non-default VRF to connect.

**Modes** RBridge ID configuration mode

**Usage Guidelines** With Network OS4.0 and later OSPF can run over multiple Virtual Forwarding and Routing (VRF) mechanisms. OSPF maintains multiple instances of the routing protocol to exchange route information among various VRF instances.

Enter `no router ospf` to delete all current OSPF configuration and to block any further OSPF configuration.

**Examples** To enable OSPF on a default VRF and to enter OSPF VRF router configuration mode, run the `router ospf` command in RBridge ID configuration mode, as shown in the following example:

```
switch# configure
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)#router ospf
switch(config-router-ospf-vrf-default-vrf)
```

To enable OSPF on a non-default VRF and to enter OSPF VRF router configuration mode, run the `router ospf vrf name` command in RBridge ID configuration mode, as shown in the following example:

```
switch# configure
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)#router ospf vrf vrfname
switch(config-router-ospf-vrf-vrfname)
```

## router pim

Enables or disables the Protocol Independent Multicast (PIM) routing protocol.

**Syntax** `router pim`

`no router pim`

**Command Default** The PIM protocol is disabled.

**Modes** RBridge ID configuration mode

**Usage Guidelines** This command launches the PIM router configuration mode.  
Enter **exit** to exit this mode.

**Examples** To enable the PIM protocol:

```
switch(config-rbridge-id-128)# router pim
```

# route-target

Imports or exports the routes for the router-id for as pecified VRF.

**Syntax** `route-target [ admin-value:arbitrary-value ] [ export | import ]`

**Parameters** *admin-value*

The administrative number assigned to the route. This can be a local ASN number or an IP address. The ASN number can be either a 2 byte (from 0 through 65535) or a 4 byte number from 0 through 4294967295).

*arbitrary-value*

An arbitrary number you choose. The range of valid values is from 0 through 65535 if the ASN is 2 byte, or from 0 through 4294967295 if the ASN is 4 byte.

**export**

Exports the routes.

**import**

Import the routes.

**Modes** VRF configuration mode

**Related  
Commands** [vrf](#)

## rp-address

Adds or removes a static rendezvous point address for a PIM domain.

**Syntax** `rp-address A.B.C.D`

`no rp-address`

**Command Default** No interface is configured as the rendezvous point candidate.

**Parameters** *A.B.C.D*

The IP address that should be designated as the rendezvous point router.

**Modes** PIM router configuration mode

**Usage Guidelines** Since prefix-lists are not supported, the address is assumed to be the rendezvous point for 224.0.0.0/4 address range.

Enter **no rp-address** to disable this feature.

**Examples** Setting the IP address to 12.12.12.12.

```
switch(conf-pim-router)# rp-address 12.12.12.12
```

**Related  
Commands** [router pim](#)



# rspan-vlan

Configures the VLAN to support RSPAN (Remote Switched Port Analyzer) traffic analysis.

**Syntax** **rspan-vlan**

**Modes** Interface subtype configuration mode

**Usage Guidelines** RSPAN extends SPAN by enabling remote monitoring of multiple switches across your network. All participating switches must be trunk-connected at Layer 2, and RSPAN must be configured on all the switches participating in the RSPAN session.

**Examples** Typical execution of this command.

```
switch(config)# interface vlan 300
switch(config-vlan-300)# rspan-vlan
```

**Related Commands** [interface vlan](#), [show vlan](#)

## rule

Creates the Role-Based Access Permissions (RBAC) permissions associated with a role.

**Syntax** `rule index [ action { accept | reject } ] [ operation { read-only | read-write } ] role role_name  
command command_name`

`no rule index`

**Command Default** The default for **action** is **accept**. The default for **operation** is **read-write**.

**Parameters** *index*

Specifies a numeric identifier for the rule. Valid values range from 1 through 512.

**action accept | reject**

Specifies whether the user is accepted or rejected while attempting to execute the specified command. The default value is **accept**.

**operation read-only | read-write**

Specifies the type of operation permitted. The default value is **read-write**.

**role *role\_name***

Specifies the name of the role for which the rule is defined.

**command *command\_name***

Specifies the command for which access is defined. Separate commands with a space. RBAC support is provided only for the following commands with parameters: copy, clear, interface, and protocol.

**Modes** Global configuration mode

**Usage Guidelines** Network OS uses RBAC as the authorization mechanism. Every user account must be associated with a role. Every user account can only be associated with a single role. Note that the permissions cannot be assigned directly to the user accounts and can only be acquired through the associated role.

When you create a rule, the **role**, *index*, and **command** operands are mandatory and the **action** and **operation** operands are optional. The maximum number of rules is 512.

When you modify a rule, all operands except *index* are optional.

Enter `no rule index` to remove the specified rule.

**Examples** To create a rule allowing the NetworkSecurityAdmin role to create user accounts:

```
switch(config)# rule 150 action accept operation read-write role NetworkSecurityAdmin
command config
switch(config)# rule 155 action accept operation read-write role NetworkSecurityAdmin
command username
```

To delete a rule:

```
switch(config)# no rule 155
```

**Related  
Commands**

[role name](#), [show running-config role](#), [show running-config rule](#)

# scheduler

Specifies the scheduling attributes along with the TC shape rate.

**Syntax** `scheduler sp_count [ shape_rate | [ shape_rate ... shape_rate ] dwrr [ weight | weight ... weight ]`

**Parameters** `sp_count`

Specifies how many strict priority queues for each port scheduler. The range of valid values is from 0 through 8.

`shape_rate`

Specifies the shape rate on strict priority queues. The range of valid values are from 28000 kbps to the maximum interface speed.

`dwrr weight`

Specifies the dwrr weight percentage for the queue. The range of valid values is from 1% through 100%, and the sum of all dwrr weights should not exceed 100%.

**Modes** Policy-map configuration mode

**Usage Guidelines** There are total eight queues are present on an interface. The number of dwrr queues present depends on the SP\_COUNT value. For example if the SP\_COUNT is two, then there are two strict priority queues and six dwrr queues.

This command is allowed only for the Egress direction.

This command can only be configured in for the **class class-default** command.

This command is mutually exclusive of the **port-shape** and **police** commands.

**Examples** Typical command example:

```
switch(config)#policy-map mutation
switch(config-policymap)#class class-default
switch(config-policyclass)# scheduler 3 31000 32000 33000 dwrr 20 20 20 10 10
```

**Related Commands** [class](#), [policy-map](#)

## script reload

Reloads scripts from disk and shows a variety of script-related information.

**Syntax** `script reload [ all [ debug ] ] | debug | diff [ debug ] | errors [ debug ]`

**Command Default** None

**Parameters** **all**

Displays information about all scripts.

**debug**

Displays additional debug information about the scripts.

**diff**

Displays information about scripts that have changed since the last reload.

**errors**

Displays information about erroneous scripts.

**Modes** Privileged EXEC mode

**Examples** To reload scripts from disk:

```
switch# script reload
```

**History**

Release version	Command history
5.0.1	This command was introduced.

# secpolicy activate

Activates the defined switch connection control (SCC) policy and its member set.

**Syntax** **secpolicy activate** [ **rbridge-id** { *rbridge-id* | **all** } ]

**Command Default** Any switch is allowed to join the fabric.  
The SCC policy does not exist until it is defined and activated.

**Parameters** **rbridge-id**  
Specifies an RBridge or all RBridges.

***rbridge-id***  
Specifies an RBridge ID.

**all**  
Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** The SCC policy is used to restrict which switches can join the fabric by either accepting or rejecting the connection between two switches. Switches are checked against the policy each time an E\_Port-to-EX\_Port connection is made. The policy is named SCC\_POLICY and accepts device members listed as World Wide Names (WWNs).

Although the **active-policy** is listed under the possible completions of **secpolicy** command, the *defined-policy* parameter should be used to create or add policy or members. The **secpolicy activate** command activates the policy.

A defined SCC policy must exist before you can activate the policy. You create the policy with the **secpolicy defined-policy** command.

During configuration replay, the defined and active policies are replayed and the E\_Ports are enabled or disabled based on the SCC policy entries in the active policy list.

During **copy file running-config** command execution, only the defined policy in the switch is updated with the config file entries; the active policy entries remain unchanged. In this case, you must use the **secpolicy activate** command to activate the defined policy list.

This command is supported on the Brocade VDX 6740 and Brocade VDX 2740.

**Examples**  
switch# secpolicy activate rbridge-id 3

**Related Commands** [secpolicy defined-policy](#)

## secpolicy defined-policy

Creates the switch connection control (SCC) policy and adds the SCC defined policy set members (WWNs).

**Syntax** **secpolicy defined-policy SCC\_POLICY [ member-entry switch\_wwn ]**

**no secpolicy defined-policy SCC\_POLICY [ member-entry switch\_wwn ]**

**Command Default** Any switch is allowed to join the fabric. The SCC policy does not exist until it is created.

**Parameters** **member-entry switch\_wwn**

The switch WWN to be added to the SCC defined policy set.

**Modes** Global configuration mode

RBridge ID configuration mode

**Usage Guidelines** The SCC policy defines which switches can join the fabric by either accepting or rejecting the connection between two switches. Switches are checked against the policy each time an E\_Port-to-EX\_Port connection is made. The policy is named SCC\_POLICY and accepts members listed as WWNs.

When you execute this command, the SCC policy entry is created (if not present) and the WWNs are added to the SCC policy.

This command is not distributed across the cluster. The RBridge ID of the node should be used to configure policy configurations.

Although the **active-policy** is listed under the possible completions of **secpolicy** command, the defined-policy parameter should be used to create or add policy or members. Entering **secpolicy activate** activates the policy.

You can add multiple WWNs separated by a comma.

After you configure the defined SCC\_POLICY, run **secpolicy activate** to apply the changes to the active policy set.

This command is supported on the Brocade VDX 6740 and Brocade VDX 2740.

Enter **no secpolicy defined-policy SCC\_POLICY member-entry switch\_wwn** to remove a switch (WWN) from the defined policy member set.

Enter **no secpolicy defined-policy SCC\_POLICY** to remove the SCC policy, along with all of the defined policy members.

**Examples** To create the defined SCC policy:

```
switch(config)# rbridge-id 3
switch(config-rbridge-id-3)# secpolicy defined-policy SCC_POLICY
switch(config-defined-policy-SCC_POLICY)# exit
```

To add a switch WWN to the policy set:

```
switch(config)# rbridge-id 3
switch(config-rbridge-id-3)# secpolicy defined-policy SCC_POLICY member-entry
10:00:00:05:1e:00:69:00
switch(config-member-entry-10:00:00:05:1e:00:69:00)# exit
switch(config-defined-policy-SCC_POLICY)# exit
switch(config-rbridge-id-3)# exit
```

To remove an entry from the policy list of rbridge id 3:

```
switch(config)# rbridge-id 3
switch(config-rbridge-id-3)# no secpolicy defined-policySCC_POLICY member-entry
10:00:00:05:1e:00:69:01
```

To remove the SCC\_POLICY entry of rbridge id 3:

```
switch(config)# rbridge-id 3
switch(config-rbridge-id-3)# no secpolicy defined-policySCC_POLICY
```

**Related  
Commands**     [secpolicy activate](#)

## security-profile (AMPP)

Activates the security-profile mode for AMPP.

**Syntax**    **security-profile**

**no security-profile**

**Modes**    Port-profile configuration mode

**Usage Guidelines**    The security-profile mode for AMPP allows configuration of security attributes of a port-profile.  
Enter **no security-profile** to remove the profile.

**Examples**    To activate the security-profile mode for AMPP:

```
switch(config)# port-profile sample-profile
switch(conf-pp)# security-profile
```



## seq (IPv4 extended ACLs)

Inserts filtering rules in IPv4 extended ACLs. Extended ACLs permit or deny traffic according to source and destination addresses, as well as other parameters.

<b>Syntax</b>	<pre>seq seq-value { permit   deny   hard-drop } ip-protocol { any   S_IPaddress mask   host S_IPaddress } [ { eq   gt   lt   neq   range } S_port-numbers ] { any   D_IPaddress mask   host D_IPaddress } [ { eq   gt   lt   neq   range } D_port-numbers ] [ vlan vlanID ] [ dscp DSCPvalue ] [ ack   fin   rst   sync   urg   push ] [ count ] [ log ]  { permit   deny   hard-drop } ip-protocol { any   S_IPaddress mask   host S_IPaddress } [ { eq   gt   lt   neq   range } S_port-numbers ] { any   D_IPaddress mask   host D_IPaddress } [ { eq   gt   lt   neq   range } D_port-numbers ] [ vlan vlanID ] [ dscp DSCPvalue ] [ ack   fin   rst   sync   urg   push ] [ count ] [ log ]  no seq seq-value  no { permit   deny   hard-drop } ip-protocol { any   S_IPaddress mask   host S_IPaddress } [ { eq   gt   lt   neq   range } S_port-numbers ] { any   D_IPaddress mask   host D_IPaddress } [ { eq   gt   lt   neq   range } D_port-numbers ] [ vlan vlanID ] [ dscp DSCPvalue ] [ ack   fin   rst   sync   urg   push ] [ count ] [ log ]</pre>
<b>Parameters</b>	<p><b>seq</b></p> <p>(Optional) Enables you to assign a sequence number to the rule. If you do not specify <b>seq seq-value</b>, the rule is added at the end of the list.</p> <p><b>seq-value</b></p> <p>Valid values range from 0 through 4294967290.</p> <p><b>permit</b></p> <p>Specifies rules to permit traffic.</p> <p><b>deny</b></p> <p>Specifies rules to deny traffic.</p> <p><b>hard-drop</b></p> <p>Overrides the trap behavior for control frames and data frames such as echo request (ping). However, <b>hard-drop</b> does not override a <b>permit</b> for this address in a preceding rule.</p> <p><b>ip-protocol</b></p> <p>Indicates the type of IP packet you are filtering. The options are as follows:</p> <p><b>&lt;0-255&gt;</b></p> <p>Protocol number custom value from 0 through 255.</p> <p><b>icmp</b></p> <p>Internet Control Message Protocol</p> <p><b>ip</b></p> <p>Any IP protocol</p> <p><b>tcp</b></p> <p>Transmission Control Protocol</p> <p><b>udp</b></p> <p>User Datagram Protocol</p> <p><b>any</b></p> <p>Specifies all source addresses.</p> <p><b>S_IPaddress</b></p> <p>Specify a source address for which you want to filter the sub-net.</p>

<b>mask</b>	Defines a mask, whose effect is to specify a subnet that includes the source address that you specified. For options to specify the mask, see the Usage Guidelines.
<b>host</b>	Specifies a source address.
<b>S_IPAddress</b>	The source address.
<b>(Source Operator)</b>	The following operators are available:
<b>eq</b>	The policy applies to the TCP or UDP port name or number you enter after <b>eq</b> .
<b>gt</b>	The policy applies to TCP or UDP port numbers greater than the port number or the numeric equivalent of the port name you enter after <b>gt</b> .
<b>lt</b>	The policy applies to TCP or UDP port numbers that are less than the port number or the numeric equivalent of the port name you enter after <b>lt</b> .
<b>neq</b>	The policy applies to all TCP or UDP port numbers except the port number or port name you enter after <b>neq</b> .
<b>range</b>	The policy applies to all TCP or UDP port numbers that are between the first TCP or UDP port name or number and the second one you enter following the <b>range</b> keyword. The range includes the port names or numbers you enter. For example, to apply the policy to all ports between and including 23 (Telnet) and 53 (DNS), enter the following: range 23 53 (two values separated by a space). The first port number in the range must be lower than the last number in the range.
<b>S_port-numbers</b>	(Valid only when <i>ip-protocol</i> is UDP or TCP) Specifies one or more source port numbers.
<b>any</b>	Specifies all destination addresses.
<b>D_IPAddress</b>	Specify a destination address for which you want to filter the sub-net.
<b>mask</b>	Defines a mask, whose effect is to specify a subnet that includes the destination address that you specified. For options to specify the mask, see the Usage Guidelines.
<b>host</b>	Specifies a destination address.
<b>D_IPAddress</b>	The destination address.
<b>(Destination Operator)</b>	The following operators are available:
<b>eq</b>	The policy applies to the TCP or UDP port name or number you enter after <b>eq</b> .

- gt**  
The policy applies to TCP or UDP port numbers greater than the port number or the numeric equivalent of the port name you enter after **gt**.
- lt**  
The policy applies to TCP or UDP port numbers that are less than the port number or the numeric equivalent of the port name you enter after **lt**.
- neq**  
The policy applies to all TCP or UDP port numbers except the port number or port name you enter after **neq**.
- range**  
The policy applies to all TCP or UDP port numbers that are between the first TCP or UDP port name or number and the second one you enter following the **range** keyword. The range includes the port names or numbers you enter. For example, to apply the policy to all ports between and including 23 (Telnet) and 53 (DNS), enter the following: **range 23 53**. The first port number in the range must be lower than the last number in the range.

**D\_port\_numbers**  
(Valid only when *ip-protocol* is UDP or TCP) The operator that you specified determines how *D\_port\_numbers* are applied.

**vlan vlanID**  
Specifies a VLAN interface to which the ACL is bound.

**dscp**  
Matches *DSCPvalue* against the DSCP value of the packet.

**DSCPvalue**  
From 0 through 63.

**count**  
Enables statistics for the rule.

**log**  
(Available for **permit** or **deny** only) Enables logging for the rule. In addition, the ACL log buffer must be enabled, using the **debug access-list-log buffer** command.

**Modes** ACL configuration mode

**Usage Guidelines** This command configures rules to permit or drop traffic based on source and destination addresses and protocol type. You can also enable counters and logging for specified rules.

The order of the rules in an ACL is critical, as the first matching rule stops further processing. When creating rules, specifying sequence values determines the order of rule processing. If you do not specify a sequence value, the rule is added to the end of the list.

The hard-drop option can prevent trapping of control frames. As a result, it could interfere with normal operations of the protocols.

For an ACL applied to a management interface, **hard-drop** keywords are interpreted as **deny** keywords.

You can specify a mask in either of the following ways:

- Wildcard mask format—for example, 0.0.0.255. The advantage of this format is that it enables you mask any bit, for example by specifying 0.255.0.255.
- Classless Interdomain Routing (CIDR) format—in which you specify the number of bits of the prefix. For example, appending /24 to an IPv4 address is equivalent to specifying 0.0.0.255 as wildcard mask format.

If you are defining rules for a QoS ACL, be aware of the following considerations for ACLs implemented under flow-based QoS. For more information, refer to the "Configuring QoS" > "Flow-based QoS" section of the *Network OS Layer 2 Switching Configuration Guide*.

- Do not include the **count** keyword in ACLs intended for flow-based QoS implementation, because such ACLs automatically share a common counter.
- The **deny** keyword functions as a PASS THROUGH: For a match, QoS action defined for that class is not implemented.
- The **hard-drop** keyword is equivalent to the **deny** keyword.

To delete a rule from an ACL, do the relevant of the following:

- If you know the rule number, enter **no seq seq-value**.
- If you do not know the rule number, type **no** followed by the full syntax except for **seq seq-value**.

**Examples** The following example creates an IPv4 extended ACL and defines rules:

```
switch(config)# ip access-list extended extdACL5
switch(config-ipl-ext)# seq 5 deny tcp host 10.24.26.145 any eq 23
switch(config-ipl-ext)# seq 7 deny tcp any any eq 80
switch(config-ipl-ext)# seq 10 deny udp any any range 10 25
switch(config-ipl-ext)# seq 15 permit tcp any any
```

**Related  
Commands**

[ip access-group](#), [ip access-list](#), [show access-list](#), [show running-config access-list](#)

## seq (IPv6 extended ACLs)

Inserts filtering rules in IPv6 extended ACLs. Extended ACLs permit or deny traffic according to source and destination addresses, as well as other parameters.

**Syntax** `seq seq-value { permit | deny | hard-drop } ip-protocol { any | S_IPAddress /prefix_len | host S_IPAddress } [ { eq | gt | lt | neq | range } S_port-numbers ] { any | D_IPAddress/prefix_len | host D_IPAddress } [ { eq | gt | lt | neq | range } D_port-numbers ] [ vlan vlanID ] [ dscp DSCPvalue ] [ ack | fin | rst | sync | urg | push ] [ count ] [ log ]`

`{ permit | deny | hard-drop } ip-protocol { any | S_IPAddress/prefix_len | host S_IPAddress } [ { eq | gt | lt | neq | range } S_port-numbers ] { any | D_IPAddress/prefix_len | host D_IPAddress } [ { eq | gt | lt | neq | range } D_port-numbers ] [ vlan vlanID ] [ dscp DSCPvalue ] [ ack | fin | rst | sync | urg | push ] [ count ] [ log ]`

`no seq seq-value`

`no { permit | deny | hard-drop } ip-protocol { any | S_IPAddress /prefix_len | host S_IPAddress } [ { eq | gt | lt | neq | range } S-port_numbers ] { any | D_IPAddress/prefix_len | host D_IPAddress } [ { eq | gt | lt | neq | range } D_port-numbers ] [ vlan vlanID ] [ dscp DSCPvalue ] [ ack | fin | rst | sync | urg | push ] [ count ] [ log ]`

### Parameters

#### Draft comment:

<<<TW Note that the ack > push list is not explained.

#### seq

(Optional) Enables you to assign a sequence number to the rule. If you do not specify **seq seq-value**, the rule is added at the end of the list.

#### seq-value

Valid values range from 0 through 4294967290.

#### permit

Specifies rules to permit traffic.

#### deny

Specifies rules to deny traffic.

#### hard-drop

Overrides the trap behavior for control frames and data frames such as echo request (ping). However, **hard-drop** does not override a **permit** for this address in a preceding rule.

#### ip-protocol

Indicates the type of IP packet you are filtering. The options are as follows:

#### <0-255>

Protocol number custom value from 0 through 255.

#### icmp

Internet Control Message Protocol

#### ip

Any IP protocol

#### tcp

Transmission Control Protocol

#### udp

User Datagram Protocol

#### any

Specifies all source addresses.

**S\_IPAddress**

Specify a source address for which you want to filter the subnet. For options to abbreviate the address, see the Usage Guidelines.

**prefix\_len**

Indicates how many of the high-order, contiguous bits of the address comprise the IPv6 prefix.

**host**

Specifies a source address.

**S\_IPAddress**

The specific address. For options to abbreviate the address, see the Usage Guidelines.

**(Source Operator)**

The following operators are available:

**eq**

The policy applies to the TCP or UDP port name or number you enter after **eq**.

**gt**

The policy applies to TCP or UDP port numbers greater than the port number or the numeric equivalent of the port name you enter after **gt**.

**lt**

The policy applies to TCP or UDP port numbers that are less than the port number or the numeric equivalent of the port name you enter after **lt**.

**neq**

The policy applies to all TCP or UDP port numbers except the port number or port name you enter after **neq**.

**range**

The policy applies to all TCP or UDP port numbers that are between the first TCP or UDP port name or number and the second one you enter following the **range** keyword. The range includes the port names or numbers you enter. For example, to apply the policy to all ports between and including 23 (Telnet) and 53 (DNS), enter the following: **range 23 53** (two values separated by a space). The first port number in the range must be lower than the last number in the range.

**S\_port-numbers**

(Valid only when *ip-protocol* is UDP or TCP) Specify one or more port numbers.

**any**

Specifies all destination addresses.

**D\_IPAddress**

Specify a destination address for which you want to filter the subnet. For options to abbreviate the address, see the Usage Guidelines.

**prefix\_len**

Indicates how many of the high-order, contiguous bits of the address comprise the IPv6 prefix.

**host**

Specifies a destination address.

**D\_IPAddress**

The destination address. For options to abbreviate the address, see the Usage Guidelines.

**(Destination Operator)**

The following operators are available:

- eq**  
The policy applies to the TCP or UDP port name or number you enter after **eq**.
- gt**  
The policy applies to TCP or UDP port numbers greater than the port number or the numeric equivalent of the port name you enter after **gt**.
- lt**  
The policy applies to TCP or UDP port numbers that are less than the port number or the numeric equivalent of the port name you enter after **lt**.
- neq**  
The policy applies to all TCP or UDP port numbers except the port number or port name you enter after **neq**.
- range**  
The policy applies to all TCP or UDP port numbers that are between the first TCP or UDP port name or number and the second one you enter following the **range** keyword. The range includes the port names or numbers you enter. For example, to apply the policy to all ports between and including 23 (Telnet) and 53 (DNS), enter the following: **range 23 53**. The first port number in the range must be lower than the last number in the range.

***D\_port\_numbers***

(Valid only when *ip-protocol* is UDP or TCP) Specify one or more destination port numbers.

**vlan *vlanID***

Specifies a VLAN interface to which the ACL is bound.

**dscp**

Matches *DSCPvalue* against the DSCP value of the packet.

***DSCPvalue***

From 0 through 63.

**count**

Enables statistics for the rule.

**log**

(Available for **permit** or **deny** only) Enables logging for the rule. In addition, the ACL log buffer must be enabled, using the **debug access-list-log buffer** command.

**Modes** ACL configuration mode

**Usage Guidelines** This command configures rules to permit or drop traffic based on source and destination addresses and protocol type. You can also enable counters and logging for specified rules.

The order of the rules in an ACL is critical, as the first matching rule stops further processing. When creating rules, specifying sequence values determines the order of rule processing. If you do not specify a sequence value, the rule is added to the end of the list.

The hard-drop option can prevent trapping of control frames. As a result, it could interfere with normal operations of the protocols.

For an ACL applied to a management interface, **hard-drop** keywords are interpreted as **deny** keywords.

You can abbreviate an IPv6 address by using one or more of the following rules:

- Remove one or more leading zeros from one or more groups of hexadecimal digits; this is usually done to either all or none of the leading zeros. (For example, convert the group 0042 to 42.)
- Omit consecutive sections of zeros, using a double colon (::) to denote the omitted sections. The double colon may only be used once in any given address, as the address would be indeterminate if the double colon were used multiple times. A double colon may not be used to denote an omitted single section of zeros. (For example, 2001:db8::1:2 is valid, but 2001:db8::1::2 or 2001:db8::1:1:1:1 are not permitted.)

On the Brocade VDX 8770 under Network OS 5.0.0, filtering of IPv6 traffic by DSCP value is supported for ingress only. On the VDX 4740, VDX 4740T, and VDX 4740T-1G, DSCP-based filtering of IPv6 traffic is also supported for egress.

If you are defining rules for a QoS ACL, be aware of the following considerations for ACLs implemented under flow-based QoS. For more information, refer to the "Configuring QoS" > "Flow-based QoS" section of the *Network OS Layer 2 Switching Configuration Guide*.

- Do not include the **count** keyword in ACLs intended for flow-based QoS implementation, because such ACLs automatically share a common counter.
- The **deny** keyword functions as a PASS THROUGH: For a match, QoS action defined for that class is not implemented.
- The **hard-drop** keyword is equivalent to the **deny** keyword.

To delete a rule from an ACL, do the relevant of the following:

- If you know the rule number, enter **no seq seq-value**.
- If you do not know the rule number, type **no** followed by the full syntax except for **seq seq-value**.

**Examples** The following example shows how to create an IPv6 extended ACL, define a rule for it, and apply the ACL to an interface.

```
switch# configure
switch(config)# ipv6 access-list extended ip_acl_1
switch(conf-ip6acl-ext)# seq 10 deny ipv6 2001:2002:1234:1::/64 2001:1001:1234:1::/64
count
switch(conf-ip6acl-ext)# exit
switch(config)# interface ten 122/5/22
switch(conf-if-te-122/5/22)# ipv6 access-group ip_acl_1 in
```

**Related  
Commands**

[ipv6 access-group](#), [ipv6 access-list](#), [show access-list](#), [show running-config access-list](#)



## seq (IPv4 standard ACLs)

Inserts filtering rules in IPv4 standard ACLs. Standard ACLs permit or deny traffic according to source address only.

**Syntax** **seq** *seq-value* { **deny** | **permit** | **hard-drop** } { **any** | *S\_IPaddress mask* | **host** *S\_IPaddress* } [ **count** ] [ **log** ]

{ **deny** | **permit** | **hard-drop** } { **any** | *S\_IPaddress mask* | **host** *S\_IPaddress* } [ **count** ] [ **log** ]

**no seq** *seq-value*

**no** { **deny** | **permit** | **hard-drop** } { **any** | *S\_IPaddress mask* | **host** *S\_IPaddress* } [ **count** ] [ **log** ]

**Parameters** **seq**

(Optional) Enables you to assign a sequence number to the rule. If you do not specify **seq** *seq-value*, the rule is added at the end of the list.

**seq-value**

Valid values range from 0 through 4294967290.

**permit**

Specifies rules to permit traffic.

**deny**

Specifies rules to deny traffic.

**hard-drop**

Overrides the trap behavior for control frames and data frames such as echo request (ping). However, **hard-drop** does not override a **permit** for this address in a preceding rule.

**any**

Specifies all source addresses.

**S\_IPaddress**

Specifies a source address for which you want to filter the subnet.

**mask**

Defines a mask, whose effect is to specify a subnet that includes the source address that you specified. For options to specify the mask, see the Usage Guidelines.

**host**

Specifies a source address.

**S\_IPaddress**

The source address.

**count**

Enables statistics for the rule.

**log**

(Available for **permit** or **deny** only) Enables logging for the rule. In addition, the ACL log buffer must be enabled, using the **debug access-list-log buffer** command.

**Modes** ACL configuration mode

**Usage Guidelines** This command configures rules to permit or drop traffic based on source addresses. You can also enable counters and logging for specified rules.

The order of the rules in an ACL is critical, as the first matching rule stops further processing. When creating rules, specifying sequence values determines the order of rule processing. If you do not specify a sequence value, the rule is added to the end of the list.

The **hard-drop** option can prevent trapping of control frames. As a result, it could interfere with normal operations of the protocols.

For an ACL applied to a management interface, **hard-drop** keywords are interpreted as **deny** keywords.

You can specify a mask in either of the following ways:

- Wildcard mask format—for example, 0.0.0.255. The advantage of this format is that it enables you mask any bit, for example by specifying 0.255.0.255.
- Classless Interdomain Routing (CIDR) format—in which you specify the number of bits of the prefix. For example, appending /24 to an IPv4 address is equivalent to specifying 0.0.0.255 as wildcard mask format.

If you are defining rules for a QoS ACL, be aware of the following considerations for ACLs implemented under flow-based QoS. For more information, refer to the "Configuring QoS" > "Flow-based QoS" section of the *Network OS Layer 2 Switching Configuration Guide*.

- Do not include the **count** keyword in ACLs intended for flow-based QoS implementation, because such ACLs automatically share a common counter.
- The **deny** keyword functions as a PASS THROUGH: For a match, QoS action defined for that class is not implemented.
- The **hard-drop** keyword is equivalent to the **deny** keyword.

To delete a rule from an ACL, do the relevant of the following:

- If you know the rule number, enter **no seq seq-value**.
- If you do not know the rule number, type **no** and then enter the full syntax without **seq-value**.

**Examples** The following example shows how to create a IPv4 standard ACL, define rules for it, and apply the ACL to an interface:

```
switch# configure
switch(config)# ip access-list standard stdACL3
switch(config-ipacl-std)# seq 5 permit host 10.20.33.4
switch(config-ipacl-std)# seq 15 deny any
switch(config-ipacl-std)# exit
switch(config)# interface ten 122/5/22
switch(conf-if-te-122/5/22)# ipv4 access-group stdACL3 in
```

**Related Commands** [ip access-group](#), [ip access-list](#), [show access-list](#), [show running-config access-list](#)

## seq (IPv6 standard ACLs)

Inserts filtering rules in IPv6 standard ACLs. Standard ACLs permit or deny traffic according to source address only.

<b>Syntax</b>	<pre>seq seq-value { deny   permit   hard-drop } { any   A:B:C:D:E:F:H:I / prefix_len   host S_IPaddress } [ count ] [ log ]  { deny   permit   hard-drop } { any   A:B:C:D:E:F:H:I / prefix_len   host SIP_address   SIP_addressmask } [ count ] [ log ]  no seq seq-value  no { deny   permit   hard-drop } { any   A:B:C:D:E:F:H:I / prefix_len   host SIP_address   SIP_addressmask } [ count ] [ log ]</pre>
<b>Parameters</b>	<p><b>seq</b> (Optional) Enables you to assign a sequence number to the rule. If you do not specify <b>seq seq-value</b>, the rule is added at the end of the list.</p> <p><b>seq-value</b> Valid values range from 0 through 4294967290.</p> <p><b>permit</b> Specifies rules to permit traffic.</p> <p><b>deny</b> Specifies rules to deny traffic.</p> <p><b>hard-drop</b> Overrides the trap behavior for control frames and data frames such as echo request (ping). However, <b>hard-drop</b> does not override a <b>permit</b> for this address in a preceding rule.</p> <p><b>any</b> Specifies all source addresses.</p> <p><b>S_IPaddress</b> Specify a source address for which you want to filter the subnet. For options to abbreviate the address, see the Usage Guidelines.</p> <p><b>prefix_len</b> Indicates how many of the high-order, contiguous bits of the address comprise the IPv6 prefix.</p> <p><b>host</b> Specifies a source address.</p> <p><b>SIP_address</b> The source address. For options to abbreviate the address, see the Usage Guidelines.</p> <p><b>count</b> Enables statistics for the rule.</p> <p><b>log</b> (Available for <b>permit</b> or <b>deny</b> only) Enables logging for the rule. In addition, the ACL log buffer must be enabled, using the <b>debug access-list-log buffer</b> command.</p>
<b>Modes</b>	ACL configuration mode

**Usage Guidelines** This command configures rules to permit or drop traffic based on source addresses. You can also enable counters and logging for specified rules.

The order of the rules in an ACL is critical, as the first matching rule stops further processing. When creating rules, specifying sequence values determines the order of rule processing. If you do not specify a sequence value, the rule is added to the end of the list.

The hard-drop option can prevent trapping of control frames. As a result, it could interfere with normal operations of the protocols.

For an ACL applied to a management interface, **hard-drop** keywords are interpreted as **deny** keywords.

You can abbreviate an IPv6 address by using one or more of the following rules:

- Remove one or more leading zeros from one or more groups of hexadecimal digits; this is usually done to either all or none of the leading zeros. (For example, convert the group 0042 to 42.)
- Omit consecutive sections of zeros, using a double colon (::) to denote the omitted sections. The double colon may only be used once in any given address, as the address would be indeterminate if the double colon were used multiple times. A double colon may not be used to denote an omitted single section of zeros. (For example, 2001:db8::1:2 is valid, but 2001:db8::1::2 or 2001:db8::1:1:1:1 are not permitted.)

If you are defining rules for a QoS ACL, be aware of the following considerations for ACLs implemented under flow-based QoS. For more information, refer to the "Configuring QoS" > "Flow-based QoS" section of the *Network OS Layer 2 Switching Configuration Guide*.

- Do not include the **count** keyword in ACLs intended for flow-based QoS implementation, because such ACLs automatically share a common counter.
- The **deny** keyword functions as a PASS THROUGH: For a match, QoS action defined for that class is not implemented.
- The **hard-drop** keyword is equivalent to the **deny** keyword.

To delete a rule from an ACL, do the relevant of the following:

- If you know the rule number, enter **no seq seq-value**.
- If you do not know the rule number, type **no** and then enter the full syntax without *seq-value*.

**Examples** The following example shows how to create an IPv6 standard ACL and define rules for it:

```
switch(config)# ipv6 access-list standard ipv6-std-acl
switch(conf-ip6acl-std)# seq 10 permit host 0:1::1
switch(conf-ip6acl-std)# seq 20 deny 0:2::/64
switch(conf-ip6acl-std)# seq 30 hard-drop any count
```

**Related Commands**

[ipv6 access-group](#), [ipv6 access-list](#), [show access-list](#), [show running-config access-list](#)

## seq (MAC extended ACLs)

Inserts filtering rules in a Layer 2 (MAC) extended ACLs. Extended ACLs permit or deny traffic according to source and destination addresses, as well as other parameters.

<b>Syntax</b>	<pre>seq seq-value { deny   permit   hard-drop } { any   SMAC_address mask   host SMAC_address } { any   host DMAC_address   DMAC_address mask } [ EtherType   arp   fcoe   ipv4 ] [count ] [ log ]  { deny   permit   hard-drop } { any   SMAC_address mask   host SMAC_address } { any   host DMAC_address   DMAC_address mask } [ EtherType   arp   fcoe   ipv4 ] [ vlan vlanID ] [count ] [ log ]  no seq seq-value  no seq { deny   permit   hard-drop } { any   SMAC_address mask   host SMAC_address } { any   host DMAC_address   DMAC_address mask } [ EtherType   arp   fcoe   ipv4 ] [count ] [ log ]</pre>
<b>Parameters</b>	<p><b>seq</b> (Optional) Enables you to assign a sequence number to the rule. If you do not specify <b>seq seq-value</b>, the rule is added at the end of the list.</p> <p><b>seq-value</b> Valid values range from 0 through 4294967290.</p> <p><b>permit</b> Specifies rules to permit traffic.</p> <p><b>deny</b> Specifies rules to deny traffic.</p> <p><b>hard-drop</b> Overrides the trap behavior for control frames and data frames such as echo request (ping). However, <b>hard-drop</b> does not override a <b>permit</b> for this address in a preceding rule.</p> <p><b>any</b> Specifies all source MAC addresses.</p> <p><b>SMAC_address</b> Specifies a source MAC address and a comparison mask.</p> <p><b>mask</b> Specify the mask using F's and zeros. For example, to match on the first two bytes of the address aabb.ccdd.eeff, use the mask ffff.0000.0000. In this case, the clause matches all MAC addresses that contain "aabb" as the first two bytes and any values in the remaining bytes.</p> <p><b>host</b> Specifies a source MAC address.</p> <p><b>SMAC_address</b> Use the format HHHH.HHHH.HHHH.</p> <p><b>any</b> Specifies all destination MAC addresses.</p> <p><b>DMAC_address</b> Specify a destination MAC address and a comparison mask.</p> <p><b>mask</b> Specify the mask using F's and zeros. For example, to match on the first two bytes of the address aabb.ccdd.eeff, use the mask ffff.0000.0000. In</p>

this case, the clause matches all MAC addresses that contain "aabb" as the first two bytes and any values in the remaining bytes.

**host**

Specifies a destination MAC address.

***DMAC\_address***

Use the format HHHH.HHHH.HHHH.

***EtherType***

Specifies the protocol number for which to set the permit or deny conditions. Valid values range from 1536 through 65535.

**arp**

Specifies to permit or deny the Address Resolution Protocol (0x0806).

**fcoe**

Specifies to permit or deny the Fibre Channel over Ethernet Protocol (0x8906).

**ipv4**

Specifies to permit or deny the IPv4 protocol (0x0800).

**vlan *vlanID***

Specifies a VLAN interface to which the ACL is bound.

**count**

Enables statistics for the rule.

**log**

(Available for **permit** or **deny** only) Enables logging for the rule. In addition, the ACL log buffer must be enabled, using the **debug access-list-log buffer** command.

**Modes** ACL configuration mode

**Usage Guidelines**

This command configures rules to permit or drop traffic based on source and destination MAC addresses and protocol type. You can also enable counters and logging for specific rules.

The order of the rules in an ACL is critical, as the first matching rule stops further processing. When creating rules, specifying sequence values determines the order of rule processing. If you do not specify a sequence value, the rule is added to the end of the list.

The hard-drop option can prevent trapping of control frames. As a result, it could interfere with normal operations of the protocols.

If you are defining rules for a QoS ACL, be aware of the following considerations for ACLs implemented under flow-based QoS. For more information, refer to the "Configuring QoS" > "Flow-based QoS" section of the *Network OS Layer 2 Switching Configuration Guide*.

- Do not include the **count** keyword in ACLs intended for flow-based QoS implementation, because such ACLs automatically share a common counter.
- The **deny** keyword functions as a PASS THROUGH: For a match, QoS action defined for that class is not implemented.
- The **hard-drop** keyword is equivalent to the **deny** keyword.

To delete a rule from an ACL, do the relevant of the following:

- If you know the rule number, enter **no seq seq-value**.
- If you do not know the rule number, type **no** and then enter the full syntax without **seq-value**.

**Examples**

The following example creates a rule in a MAC extended ACL to deny IPv4 traffic from the source MAC address 0022.3333.4444 to the destination MAC address 0022.3333.5555 and to enable the counting of packets:

```
switch(conf-macl-ext)# seq 100 deny 0022.3333.4444 0022.3333.5555 ipv4 count
```

The following example deletes a rule from a MAC extended ACL:

```
switch(conf-macl-ext)# no seq 100
```

**Related Commands** [mac access-group](#), [mac access-list extended](#), [show access-list](#), [show running-config access-list](#)

## seq (MAC standard ACLs)

Inserts filtering rules in Layer 2 (MAC) standard ACLs. Standard ACLs permit or deny traffic according to source address only.

<b>Syntax</b>	<pre>seq seq-value { deny   permit   hard-drop } { any   SMAC_address mask   host SMAC_address } [count] [ log ]  { deny   permit   hard-drop } { any   SMAC_address mask   host SMAC_address } [count] [ log ]  no seq seq-value  no seq { deny   permit   hard-drop } { any   SMAC_address mask   host SMAC_address } [count] [ log ]</pre>
<b>Parameters</b>	<p><b>seq</b> (Optional) Enables you to assign a sequence number to the rule. If you do not specify <b>seq seq-value</b>, the rule is added at the end of the list.</p> <p><b>seq-value</b> Valid values range from 0 through 4294967290.</p> <p><b>permit</b> Specifies rules to permit traffic.</p> <p><b>deny</b> Specifies rules to deny traffic.</p> <p><b>hard-drop</b> Overrides the trap behavior for control frames and data frames such as echo request (ping). However, <b>hard-drop</b> does not override a <b>permit</b> for this address in a preceding rule.</p> <p><b>any</b> Specifies all source MAC addresses.</p> <p><b>SMAC_address</b> Specifies a source MAC address and a comparison mask.</p> <p><b>mask</b> Specify the mask using F's and zeros. For example, to match on the first two bytes of the address aabb.ccdd.eeff, use the mask ffff.0000.0000. In this case, the clause matches all MAC addresses that contain "aabb" as the first two bytes and any values in the remaining bytes.</p> <p><b>host</b> Specifies a source MAC address.</p> <p><b>SMAC_address</b> Use the format HHHH.HHHH.HHHH.</p> <p><b>count</b> Enables statistics for the rule.</p> <p><b>log</b> (Available for <b>permit</b> or <b>deny</b> only) Enables logging for the rule. In addition, the ACL log buffer must be enabled, using the <b>debug access-list-log buffer</b> command.</p>
<b>Modes</b>	ACL configuration mode



<b>Usage Guidelines</b>	<p>This command configures rules to permit or drop traffic based on source MAC address. You can also enable counters and logging for specific rules.</p> <p>The order of the rules in an ACL is critical, as the first matching rule stops further processing. When creating rules, specifying sequence values determines the order of rule processing. If you do not specify a sequence value, the rule is added to the end of the list.</p> <p>The hard-drop option can prevent trapping of control frames. As a result, it could interfere with normal operations of the protocols.</p> <p>If you are defining rules for a QoS ACL, be aware of the following considerations for ACLs implemented under flow-based QoS. For more information, refer to the "Configuring QoS" &gt; "Flow-based QoS" section of the <i>Network OS Layer 2 Switching Configuration Guide</i>.</p> <ul style="list-style-type: none"> <li>• Do not include the <b>count</b> keyword in ACLs intended for flow-based QoS implementation, because such ACLs automatically share a common counter.</li> <li>• The <b>deny</b> keyword functions as a PASS THROUGH: For a match, QoS action defined for that class is not implemented.</li> <li>• The <b>hard-drop</b> keyword is equivalent to the <b>deny</b> keyword.</li> </ul> <p>To delete a rule from an ACL, do the relevant of the following:</p> <ul style="list-style-type: none"> <li>• If you know the rule number, enter <b>no seq seq-value</b>.</li> <li>• If you do not know the rule number, type <b>no</b> and then enter the full syntax, without <b>seq seq-value</b>.</li> </ul>
<b>Examples</b>	<p>The following command creates statistic-enabled rules in a MAC standard ACL:</p> <pre>switch(conf-macl-std)# seq 100 deny host 0022.3333.4444 count switch(conf-macl-std)# seq 110 permit host 0011.3333.5555 count</pre> <p>The following command deletes a rule in a MAC standard ACL:</p> <pre>switch(conf-macl-std)# no seq 100</pre>
<b>Related Commands</b>	<p><a href="#">mac access-group</a>, <a href="#">mac access-list standard</a>, <a href="#">resequence access-list</a>, <a href="#">show access-list</a>, <a href="#">show running-config access-list</a></p>

## service password-encryption

Enables or disables password encryption.

**Syntax** **service password-encryption**

**no service password-encryption**

**Command Default** Default value is service password-encryption.

**Modes** Global configuration mode

**Usage Guidelines** Enter **no service password-encryption** to disable password encryption.

**Examples** To enable password encryption:

```
switch(config)# service password-encryption
```

To disable password encryption:

```
switch(config)# no service password-encryption
```

**Related Commands** [show running-config password-attributes](#)

# service-policy

Binds a policy-map to an interface.

**Syntax** `service-policy in | out policy-mapname`

`no service-policy in | out`

**Command Default** No service policy is created.

**Parameters** `in`

Binds policy-map to inbound traffic.

`out`

Binds policy-map to outbound traffic.

***policy-mapname***

Name of the policy-map.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command applies a policy-map containing a class-map with specific Policer parameters and match criterions to a switch interface. The policy-map must be configured before you can apply it (refer to the description of the **policy-map** command).

The **no** form of this command removes the service policy.

---

## NOTE

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

---

**Examples** To create a service-policy for outbound traffic on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 237/1/8
switch(conf-if-te-237/1/8)# service-policy out policymap1
```

To remove a service-policy for outbound traffic from a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 237/1/8
switch(conf-if-te-237/1/8)# no service-policy out
```

To remove a service-policy for inbound traffic on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 237/1/8
switch(conf-if-te-237/1/8)# no service-policy in
```

**Related Commands** [interface](#), [class](#), [qos cos](#), [policy-map](#), [show policymap](#)

## set as-path

Sets a prepended string or a tag for a BGP AS-path attribute in a route-map instance.

**Syntax** **set as-path** [ **prepend** *string* | **tag** ]

**no set as-path** [ **prepend** *string* | **tag** ]

**Parameters** **prepend**

Prepends the string to the AS-path.

*string*

AS numbers. Range is from 1 through 4294967295.

**tag**

Sets a route tag.

**Modes** Route-map configuration mode

**Related  
Commands** [route-map](#)

## set as-path prepend

Prepends an AS4 number to an AS path, makes the AS number a tag attribute for a route map, and provides a variety of route-management options.

**Syntax** **set as-path prepend** *as-num* , *as-num* , . . . *as-num* [ **automatic-tag** ] | [ **comm-list** *acl* **delete** ] | [ **community** *num* : *num* | *num* | **additive** | **internet** | **local-as** | **no-advertise** | **no-export** ] | [ **dampening** [ *half-life* | *reuse* | *suppress* | *max-suppress-time* ] ] | [ **ip next hop** *ip-addr* ] | [ **ip next-hop peer-address** ] | [ **local-preference** *num* ] | [ **metric** [ **add** | **assign** | **none** | **sub** ] ] | [ **metric-type** [ **type-1** | **type-2** ] ] | [ **external** [ **metric-type** **internal** ] ] | [ **origin** **igp** | **incomplete** ] | [ **tag** ] | [ **weight** *num* ]

**no set as-path prepend** *as-num* , *as-num* , . . . *as-num*

**Parameters** **automatic-tag**

Calculates and sets an automatic tag for the route.

**comm-list** *acl* **delete**

Deletes a community from the community attributes field for a BGP4 route.

**community**

Sets the community attribute for the route to the number or well-known type specified. Possible values are *num* : *num* , Internet, no-export, local-as, no-advertise.

**num:num**

Specific community member.

**additive**

Adds a community to the already existing communities.

**internet**

The Internet community.

**local-as**

Local sub-AS within the confederation. Routes with this community can be advertised only within the local sub-AS.

**no-advertise**

Routes with this community cannot be advertised to any other BGP4 devices at all.

**no-export**

Community of sub-ASs within a confederation. Routes with this community can be exported to other sub-ASs in the same confederation but not outside the confederation to other ASs or otherwise sent to EBGP neighbors.

**dampening**

Sets dampening parameters for the route.

**half-life**

Number of minutes after which the route penalty becomes half its value.

**reuse**

Specifies how low a route penalty must become before the route becomes eligible for use again after being suppressed.

**suppress**

Specifies how high a route penalty can become before the device suppresses the route.

**max-suppress-time**

	Specifies the maximum number of minutes that a route can be suppressed regardless of how unstable it is.
<b>ip next hop</b>	Sets the next-hop IP address for a route that matches the match statement in the route map.
<i>ip-addr</i>	IPv4 address in dotted-decimal notation.
<b>ip next-hop peer-address</b>	Sets the BGP4 next hop for a route to the neighbor address.
<b>local-preference</b>	Sets the local preference for the route.
<i>num</i>	Range is from 0 through 4294967295.
<b>metric</b>	Sets the MED (metric) value for the route. Range is from 0 through 4294967295. The default MED value is 0.
<b>add</b>	Adds to the current metric value.
<b>assign</b>	Replaces the current metric value with a new value.
<b>none</b>	Removes the MED attribute (metric) from the BGP4 route.
<b>sub</b>	Subtracts from the current metric value.
<b>metric-type</b>	Changes the metric type of the route redistributed into OSPF.
<b>type-1</b>	Type 1 route.
<b>type-2</b>	Type 2 route.
<b>external</b>	External Type 1 or Type 2 route.
<b>metric-type internal</b>	Sets route MED attribute to same value as the IGP metric of the BGP4 next-hop route, for advertising a BGP4 route to an EBGp neighbor.
<b>next-hop</b>	Sets IPv4 address of the next hop.
<i>ip-addr</i>	IPv4 address in dotted-decimal notation.
<b>origin</b>	Sets the route's origin.
<b>igp</b>	Sets origin to IGP.
<b>incomplete</b>	Sets origin to INCOMPLETE.
<b>tag</b>	Keyword that makes the ASN an AS-path tag attribute. (Applies only to routes redistributed into OSPF.)
<b>weight</b>	

Sets the weight for the route.

***num***

Range is from 0 through 4294967295.

**Modes** Route-map configuration mode

**Usage Guidelines** Use the **no** form of this command to remove the configuration.

**Examples** To prepend an AS4 number:

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# route-map myroutes
switch(config-route-map myroutes)# set as-path prepend 7701000
```

**Related  
Commands** [route-map](#)

## set automatic-tag

Sets the route-map tag value.

**Syntax** `set automatic-tag value`

**Parameters** *value*

The value for the computed tag.

**Modes** Route-map configuration mode

**Usage Guidelines** This command sets an automatically computed tag value in a route-map instance.

**Related  
Commands** [route-map](#)



## set comm-list

Sets a BGP community list for deletion in a route-map instance.

**Syntax** `set comm-list name`

`no set comm-list name`

**Parameters** *name*

BGP community list name. Range is from 1 through 32 ASCII characters.

**Modes** Route-map configuration mode

**Usage Guidelines** Use the **no** version of this command to disable this feature.

**Related  
Commands** [route-map](#)

## set community

Sets a BGP community attribute in a route-map instance.

**Syntax** **set community** [ *community-number* | *local-as* | *no-advertise* | *no-export* | *none* ]

**no set community** *community-number*

**Parameters** **community-number**

BGP community number, in two format options:(1) Range is from 1 through 4294967295.(2) Format is AA:NN, where AA is the AS number, and NN is a locally significant number.

**local-as**

Do not send outside local AS (well-known community).

**no-advertise**

Do not advertise to any peer (well-known community).

**no-export**

Do not export to next AS (well-known community).

**none**

Sets no community attribute.

**Modes** Route-map configuration mode

**Related  
Commands** [route-map](#)

## set cos traffic-class

Specifies the User-Priority field value in VLAN header and traffic-class queuing value when a packet matches a flow.

**Syntax** `set cos { 0..7 } traffic-class { 0..7 }`

`no set cos { 0..7 } traffic-class { 0..7 }`

**Parameters** `0..7`

Modifies the Class of Service (CoS) value in the VLAN header of classified traffic, or assigns a queue to the classified traffic. The range of valid values is from 0 through 7.

**Modes** Route-map configuration mode

**Examples**

```
switch(config)# policy-map p1
switch(config-policy-map)# class c1
switch(config-policy-class)# set cos 4 traffic-class 3
```

**Related  
Commands** [class](#), [policy-map](#)

## set dampening

Sets a BGP route-flap dampening penalty in a route-map instance.

**Syntax** **set dampening** *number*

**no set dampening** *number*

**Command Default** The default is 15.

**Parameters** *number*

Half-life in minutes for the penalty. Range is from 1 through 45.

**Modes** Route-map configuration mode

**Usage Guidelines** The **no** form of this commands removes the penalty.

**Related  
Commands** [route-map](#)

## set distance

Sets the administrative distance for matching OSPF routes in route-map instance.

**Syntax** **set distance** *value*

**no set distance**

**Parameters** *value*

Administrative distance for the route. Range is from 1 through 254.

**Modes** Route-map configuration mode

**Usage Guidelines** The **no** form of this command removes the configuration.

**Related Commands** [ip prefix-list](#), [match interface](#), [match ip address](#), [match ip next-hop](#), [match metric](#), [match route-type](#), [match tag](#), [route-map](#), [set ip next-hop](#), [set metric](#), [set tag](#)

## set dscp

Specifies the DSCP field value in IP header when a packet matches a flow.

**Syntax** `set dscp { 0..63 }`

`no set dscp { 0..63 }`

**Parameters** `0..63`

The DSCP value in the IP header of the classified traffic. The range of valid values is from 0 through 63.

**Modes** Route-map configuration mode

**Examples**

```
switch(config)#policy-map p1
switch(config-policy-map)#class c1
switch(config-policy-class)#set dscp 56
```

**Related Commands** [class](#), [policy-map](#)

## set extcommunity

Sets an extended BGP community attribute in a route-map instance.

**Syntax** **set extcommunity** { **rt** *extcommunity value* | **soo** *extcommunity value* }

**no set extcommunity**

**Command Default** No extended BGP community attribute is set in a route-map instance.

**Parameters** **rt**

Specifies the route target (RT) extended community attribute.

**soo**

Specifies the site of origin (SOO) extended community attribute.

**extcommunity value**

Specifies the value. The value can be one of the following:

**ASN:nn—autonomous-system-number:network-number**

Autonomous system (AS) number and network number.

**IPAddress:nn—ip-address:network-number**

IP address and network number.

**Modes** Route-map configuration mode.

**Usage Guidelines** Enter **no set extcommunity** to delete an extended community set statement from the configuration file.

**Examples** To set the route target to extended community attribute 1:1 for routes that are permitted by the route map:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# route-map extComRmap permit 10
device(config-route-map-sendExtComRmap/permit/10)# set extcommunity rt 1:1
```

To set the site of origin to extended community attribute 2:2 for routes that are permitted by the route map:

```
device# configure terminal
device(config)# rbridge-id 122
device(config-rbridge-id-122)# ip community-list extended 1 permit 123:2
device(config-rbridge-id-122)# route-map extComRmap permit 10
device(config-route-map-sendExtComRmap/permit/10)# set extcommunity soo 2:2
```

**History**

**Release version**

**Command history**

5.0.0

This command was introduced.

## set ip interface null0

Drops traffic when the null 0 statement becomes the active setting as determined by the route-hop selection process..

**Syntax** **set ip interface null0**

**no set ip interface null0**

**Modes** Route-map configuration mode

**Usage Guidelines** The **no** form of this command deletes the matching filter from the ACL.

**Related Commands** [ip prefix-list](#), [match interface](#), [match ip address](#), [match ip next-hop](#), [match metric](#), [match route-type](#), [match tag](#), [route-map](#), [set distance](#), [set metric](#), [set tag](#)



## set ip next-hop

Sets the IPv4 address of the next hop in a route-map instance.

**Syntax** `set ip [ global | vrf vrf-name ] next-hop A.B.C.D`

`no set ip next-hop A.B.C.D`

**Parameters** *A.B.C.D*

IPv4 address of the next hop.

**global**

Specifies that the next specified hop address is to be resolved from the global routing table.

**vrf *vrf-name***

Specifies from which VRF routing table the specified next hop address will be resolved.

**next hop *A.B.C.D***

Sets the next hop to which to route the packet. The next hop must be adjacent.

**Modes** Route-map configuration mode

**Usage Guidelines** Use the **no** form of this command to delete the matching filter from the ACL.

**Related Commands** [ip prefix-list](#), [match interface](#), [match ip address](#), [match ip next-hop](#), [match metric](#), [match route-type](#), [match tag](#), [route-map](#), [set distance](#), [set metric](#), [set tag](#)

## set ipv6 next-hop

Sets the IPv6 address of the next hop in a route-map instance.

<b>Syntax</b>	<b>set ipv6 [ global   vrf <i>vrf-name</i> ] next-hop AAAA:BBBB:CCCC:DDDD:EEEE:FFFF:GGGG:HHHH</b> <b>no set ipv6 next-hop AAAA:BBBB:CCCC:DDDD:EEEE:FFFF:GGGG:HHHH</b>
<b>Parameters</b>	<b>AAAA:BBBB:CCCC:DDDD:EEEE:FFFF:GGGG:HHHH</b> IPv6 address of the next hop.
	<b>global</b> Specifies that the next specified hop address is to be resolved from the global routing table.
	<b>vrf <i>vrf-name</i></b> Specifies from which VRF routing table the specified next hop address will be resolved.
	<b>next hop AAAA:BBBB:CCCC:DDDD:EEEE:FFFF:GGGG:HHHH</b> Sets the next hop to which to route the packet. The next hop must be adjacent.
<b>Modes</b>	Route-map configuration mode
<b>Usage Guidelines</b>	Use the <b>no</b> form of this command to delete the matching filter from the ACL.

## set local-preference

Sets a BGP local-preference path attribute in a route-map instance.

**Syntax** `set local-preference number`

`no set local-preference`

**Parameters** *number*

Range is from 0 through 4294967295.

**Modes** Route-map configuration mode

**Usage Guidelines** Use the **no** form of this command to remove the attribute.

**Related  
Commands** [route-map](#)

## set metric

Configures the route metric set clause in a route-map instance.

<b>Syntax</b>	<b>set metric [ add   assign   sub ] value</b> <b>no set metric [ add   assign   sub ] value</b>
<b>Parameters</b>	<b>add</b> Adds the value to the current route metric. <b>assign</b> Replaces the current route metric with this value. <b>sub</b> Subtracts the value from the current route metric. <b>none</b> Removes the current route metric. <b>value</b> Range is from 0 through 4294967295.
<b>Modes</b>	Route-map configuration mode
<b>Usage Guidelines</b>	Use the <b>no</b> form of this command to remove the configuration.
<b>Related Commands</b>	<a href="#">ip prefix-list</a> , <a href="#">match interface</a> , <a href="#">match ip address</a> , <a href="#">match ip next-hop</a> , <a href="#">match metric</a> , <a href="#">match route-type</a> , <a href="#">match tag</a> , <a href="#">route-map</a> , <a href="#">set distance</a> , <a href="#">set ip next-hop</a> , <a href="#">set tag</a>

## set metric-type

Sets a variety of metric types for destination routing in a route-map instance.

**Syntax** **set metric-type** [ *external* | *internal* | *type-1* | *type-2* ]

**no set metric-type** [ *external* | *internal* | *type-1* | *type-2* ]

<b>Parameters</b>	<b>external</b>	IS-IS external metric
	<b>internal</b>	IGP internal metric to BGP MED
	<b>type-1</b>	OSPF external type-1 metric
	<b>type-2</b>	OSPF external type-2 metric

**Modes** Route-map configuration mode

**Usage Guidelines** Use the **no** form of this command to remove the configuration.

**Related Commands** [route-map](#)

## set origin

Sets a BGP origin code in a route-map instance.

**Syntax** **set origin** [ *igp* | *incomplete* ]

**no set origin** [ *igp* | *incomplete* ]

**Parameters** *igp*

Local IGP

*incomplete*

Unknown heritage

**Modes** Route-map configuration mode

**Usage Guidelines** Use the **no** form of this command to remove the configuration.

**Related  
Commands** [route-map](#)

# set-priority

Configures the priority map of a class-map.

**Syntax** `set-priority priority-map-name`

`no set-priority priority-map-name`

**Parameters** `priority-map-name`

The priority-map name that you are including in the policy-map. Refer to the description of the **police-priority-map** command.

**Modes** Class-map configuration mode

**Usage Guidelines** Only the **police cir** and **cbs** commands are mandatory for configuring a class-map.

If the optional parameters for a class-map are not set, they are treated as disabled. To delete parameters for a class-map, you must delete all policer parameters while in the policy-map class configuration mode using the **no police cir** command.

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

Use the **no** form of this command to remove the parameter from the class-map.

**Examples**

```
switch(config-policymap)# class default
switch (config-policymap-class)# police cir 40000
switch (config-policymap-class)# set-priority default
```

**Related Commands** [cbs](#), [conform-set-dscp](#), [conform-set-prec](#), [conform-set-tc](#), [ebs](#), [eir](#), [exceed-set-dscp](#), [exceed-set-prec](#), [exceed-set-tc](#), [police cir](#), [police-priority-map](#), [policy-map](#), [qos cos](#), [service-policy](#)

## set route-type

Sets a route type in a route-map instance.

**Syntax** **set route-type** [ *internal* | *type-1* | *type-2* ]

**no set route-type**

**Parameters** *internal*

Internal route type

**type-1**

OSPF external route type 1

**type-2**

OSPF external route type 2

**Modes** Route-map configuration mode

**Usage Guidelines** The **no** form of this command removes the configuration.



## set tag

Sets the route tag value in a route-map instance.

**Syntax** `set tag value`

`no set tag value`

**Parameters** *value*

The tag clause value for the route-map. Range is from 0 through 4294967295.

**Modes** Privileged EXEC mode

**Usage Guidelines** The `no` form of this command disables this feature.

**Related Commands** [ip prefix-list](#), [match interface](#), [match ip address](#), [match ip next-hop](#), [match metric](#), [match route-type](#), [match tag](#), [route-map](#), [set distance](#), [set ip next-hop](#), [set metric](#)

## set weight

Sets a BGP weight for the routing table in a route-map instance.

**Syntax** **set weight** *number*

**no set weight** *number*

**Parameters** *number*

Weight value. Range is from 0 through 65535.

**Modes** Route-map configuration mode

**Usage Guidelines** The **no** form of this command disables this feature

**Related  
Commands** [route-map](#)

## sflow collector

Identifies the sFlow collectors to which sFlow datagrams are forwarded.

**Syntax** **sflow collector** [ *IPv4address* | *IPv6address* ]

**no sflow collector** [ *IPv4address* | *IPv6address* ]

**Parameters** **IPv4address**

Specifies an IPv4 address in dotted-decimal format for the collector.

**IPv6address**

Specifies an IPv6 address for the collector.

**Modes** Global configuration mode

**Usage Guidelines** You can only specify up to five sFlow collectors.

The **no** form of this command resets the specified collector address to a null value.

**Examples** To identify the sFlow collectors for an IPv4 address to which sFlow datagrams are forwarded:

```
switch(config)# sflow collector 192.10.138.176
```

To identify the sFlow collectors for an IPv6 address and port to which sFlow datagrams are forwarded:

```
switch(config)# sflow collector 3ff3:1900:4545:3:200:f8ff:fe21:67cf:6343
```

## sflow enable (global version)

Enables sFlow globally.

**Syntax** **sflow enable**

**no sflow enable**

**Command Default** sFlow is disabled on the system.

**Modes** Global configuration mode

**Usage Guidelines** This command is supported on physical ports only.  
On a Brocade VDX 8770, SPAN and sFlow can be enabled at the same time.  
The **no** form of this command disable sFlow globally.

**Examples** To enable sFlow globally:

```
switch(config)# sflow enable
```

**Related Commands** [sflow enable \(interface version\)](#)

## sflow enable (interface version)

Enables sFlow on an interface. sFlow is used for monitoring network activity.

**Syntax** **sflow enable**

**no sflow enable**

**Command Default** sFlow is disabled on all interfaces.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command is supported on physical ports only.

On a Brocade VDX 8770 switch, SPAN and sFlow can be enabled at the same time.

The **no** form of this command disable sFlow on an interface.

**Examples** To enable sFlow on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 1/3/1
switch(conf-if-fo-1/3/1)# sflow enable
```

**Related Commands** [interface](#), [sflow enable \(global version\)](#), [sflow polling-interval \(interface version\)](#), [sflow sample-rate \(interface version\)](#)

## sflow polling-interval (global version)

Configures the polling interval globally.

**Syntax** **sflow polling-interval** *interval\_value*

**no sflow polling-interval**

**Parameters** *interval\_value*

Specifies a value in seconds to set the polling interval. Valid values range from 1 through 65535 seconds.

**Command Default** The default is 20.

**Modes** Global configuration mode

**Usage Guidelines** The interval is the maximum number of seconds between successive samples of counters to be sent to the collector.

The **no** form of this command restores the default value.

**Examples** To set the polling interval to 135 seconds:

```
switch(config)# sflow polling-interval 135
```

**Related Commands** [sflow polling-interval \(interface version\)](#)

## sflow polling-interval (interface version)

Configures the polling interval at the interface level.

**Syntax** **sflow polling-interval** *interval\_value*

**no sflow polling-interval**

**Command Default** The default is 20.

**Parameters** *interval\_value*

Specifies a value in seconds to set the polling interval. Valid values range from 1 through 65535.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The interval is the maximum number of seconds between successive samples of counters to be sent to the collector.

The **no** form of this command restores the default value.

**Examples** To set the polling interval to 135 seconds on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 1/3/1
switch(conf-if-fo-1/3/1)# sflow polling-interval 135
```

**Related Commands** [interface](#), [sflow polling-interval \(global version\)](#), [sflow enable \(interface version\)](#), [sflow sample-rate \(interface version\)](#)

## sflow sample-rate (global version)

Sets the number of packets that are skipped before the next sample is taken.

**Syntax** **sflow sample-rate** *samplerate*

**no sflow sample-rate**

**Command Default** The default is 32768.

**Parameters** **samplerate**

Specifies the sampling rate value in packets. Valid values range from 2 through 16777215 packets.

**Modes** Global configuration mode

**Usage Guidelines** Sample-rate is the average number of packets skipped before the sample is taken. The **no** form of this command restores the default sampling rate.

**Examples** To change the sampling rate to 4096:

```
switch(config)# sflow sample-rate 4096
```

**Related Commands** [sflow polling-interval \(interface version\)](#)



## sflow sample-rate (interface version)

Sets the default sampling rate for an interface.

**Syntax** **sflow sample-rate** *samplerate*

**no sflow sample-rate**

**Command Default** The default is 32768.

**Parameters** **samplerate**

Specifies the sampling rate. Valid values range from 2 through 16777215 packets.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The default sampling rate determines how many packets are skipped before the next sample is taken for that interface. The default sampling rate of an interface is set to the same value as the current global default sampling rate.

This command changes the sampling rate for an interface.

The **no** form of this command restores the default setting.

**Examples** To change the sampling rate to 4096 packets on a specific 40-gigabit Ethernet interface:

```
switch(config)# interface fortygigabitethernet 1/3/1
switch(conf-if-fo-1/3/1)# sflow sample-rate 4096
```

**Related Commands** [interface](#), [sflow sample-rate \(global version\)](#), [sflow enable \(interface version\)](#), [sflow polling-interval \(interface version\)](#)

## sflow-profile

Establishes an sFlow profile name and sets a sampling rate.

**Syntax** **sflow-profile** { *sflow\_profile\_name* } { **sample-rate** *sampling\_rate* }

**no sflow-profile** { *sflow\_profile\_name* }

**Command Default** This command is disabled.

**Parameters** **sflow\_profile\_name**

Name of an sFlow profile for sampling rates. The maximum number of characters is 64.

**sample-rate**

Selects a sampling rate.

**sampling\_rate**

Specifies a sampling rate. Range is from 2 through 8388608 packets, in powers of 2 only. The default is 32768 packets.

**Modes** Global configuration mode

**Usage Guidelines** The **no** form of this command disables the sFlow profile.

**Examples** To establish an sFlow profile and set a sampling rate of 4096:

```
switch(config)# sflow mysflowprofile sample-rate 4096
```

## sflow profile-map

Attaches an sFlow profile map to a class map in flow-based QoS. This configures the sampling rate and other sFlow attributes.

**Syntax** **sflow profile-map** *map\_name*

**Command Default** The sFlow profile map must be created.

**Parameters** ***map\_name***

The sFlow profile map to attach to the class map in flow-based QoS. The maximum number of characters is 64.

**Modes** Policy-map configuration mode

**Usage Guidelines** Specifying a non-existent map name causes an error.

This action is allowed only in the ingress direction.

It can be configured both in user-defined class maps and in the class map "default". If configured in the class map "default", port-based sFlow is enabled.

**Examples** Typical command execution.

```
switch# configure terminal
switch(config)# policy-map policymap1
switch(config-policyclass)#class cmap1
switch(config-policyclass)#sflow profile-map mysflowprofile
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## sflow (VXLAN)

Enables sFlow monitoring of the tunnel endpoints for a VXLAN overlay gateway site.

<b>Syntax</b>	<b>sflow profile_name remote-endpoint</b> { <i>IPv4_address</i>   <b>any</b> } <b>vlan</b> { <b>add</b>   <b>remove</b> } <i>vlan_id</i> [ <b>vrf name</b> ]  <b>no sflow profile_name</b>
<b>Parameters</b>	<p><b>profile_name</b> Name of a configured sFlow profile.</p> <p><b>remote-endpoint</b> Specifies an IPv4 address or all IPv4 addresses associated with the remote tunnel endpoint for the site.</p> <p><b>IPv4_address</b> IPv4 address for the tunnel endpoint.</p> <p><b>any</b> Specifies all IPv4 addresses for the tunnel endpoint.</p> <p><b>vlan</b> Specifies a VLAN ID or range of VLAN IDs to be added or removed from the tunnel.</p> <p><b>add</b> Specifies a VLAN ID or range of VLAN IDs to be added to the tunnel.</p> <p><b>remove</b> Specifies a VLAN ID or range of VLAN IDs to be removed from the tunnel.</p> <p><b>vlan_id</b> A VLAN ID or range of VLAN IDs. See the Usage Guidelines.</p> <p><b>vrf</b> Specifies a VRF instance.</p> <p><b>name</b> Name of the VRF instance.</p>
<b>Modes</b>	VXLAN overlay gateway site configuration mode
<b>Usage Guidelines</b>	An sFlow profile must be configured, by means of the <b>sflow-profile</b> command. Use the <b>no sflow profile_name</b> command to remove the configuration from the overlay gateway.
<b>Examples</b>	To enable sFlow monitoring for all endpoints for specified VLAN IDs:  <pre>switch(config)# overlay-gateway gateway1 switch(config-overlay-gw-gateway1)# sflow my_sflow_profile remote-endpoint any vlan add 10,20-30</pre>

# sfp breakout

Displays the QSFP port breakout configurations for the specified QSFP ports. .

**Syntax** **sfp breakout**

**no sfp breakout**

**Command Default** Breakout mode is set to disabled.

**Modes** Connector configuration mode

**Usage Guidelines** This command is an executable command and it could be executed under connector mode. This command is destructible and irreversible. After this command, you must execute the **copy running-config startup-config** command, and immediately perform a power-cycle on the corresponding linecard/switch.

---

## NOTE

For the 27x40 GbE line card on a Brocade VDX 8770, a port group must be in performance mode before you can configure one of its ports to breakout mode.

---

Use the **no sfp breakout** to disable breakout mode and create a single Fo interface.

**Examples** To enable SFP breakout on a connector:

```
switch(config)# hardware
switch(config-hardware)#connector 2/0/1
switch(config-connector-2/0/1)# sfp breakout
```

To disable SFP breakout on a connector:

```
switch(config-connector-2/0/1)# no sfp breakout
```

**Related Commands** [power-off linecard](#), [power-on linecard](#)

# shape

Specifies the shaping rate for a port to smooth out the traffic egressing an interface

**Syntax** `shape speed`

**Parameters** `speed`

The speed for the shape rate in Kbps. The range of valid values is from 28000 to the top speed on the interface.

**Modes** Policymap configuration mode

**Usage Guidelines** This command is allowed only for the Egress direction.

This command can only be configured in for the **class class-default** command.

This command is mutually exclusive of the **scheduler** and **police** commands.

**Examples** Typical command example:

```
switch(config)#policy-map mutation
switch(config-policymap)#class class-default
switch(config-policyclass)# shape 30000
```

**Related Commands** [class](#), [policy-map](#)

## short-path-forwarding

Enables short-path forwarding on a VRRP router.

**Syntax** `short-path-forwarding [ revert-priority number ]`

`no short-path-forwarding`

**Command Default** Disabled

**Parameters** `revert-priority number`

Allows additional control over short-path-forwarding on a backup router. If you configure this option, the revert-priority number acts as a threshold for the current priority of the session, and only if the current priority is higher than the revert-priority will the backup router be able to route frames. The range of revert-priority is 1 to 254.

**Modes** Virtual-router-group configuration mode

**Usage Guidelines** Short-path forwarding means that a backup physical router in a virtual router attempts to bypass the VRRP-E master router and directly forward packets through interfaces on the backup router.

This command can be used for VRRP-E, but not for VRRP. You can perform this configuration on a virtual Ethernet (VE) interface only.

Enter **no short-path-forwarding** to remove this configuration.

**Examples** To enable short-path-forwarding on a VRRP-E group:

```
switch(config)# rbridge-id 101
switch(config-rbridge-id-101)# int ve 25
switch(config-ve-25)# vrrp-extended-group 100
switch(config-vrrp-extended-group-100)# short-path-forwarding
```

short-path-forwarding



# Show commands

---

## show access-list

For a given network protocol and inbound/outbound direction, displays ACL status information. You can show information for a specified ACL or only for that ACL on a specified interface. You can also display information for all ACLs bound to a specified switch interface, VLAN, VE, or VXLAN overlay-gateway.

**Syntax** For a specified network protocol (MAC, IPv4, or IPv6), the following version displays general information about all ACLs applied to the switch:

```
show access-list { ip | ipv6 | mac }
```

The following version displays information for either the inbound or the outbound direction of a specified ACL:

```
show access-list { ip | ipv6 | mac } name { in | out }
```

For either the inbound or the outbound direction on a specified N-gigabite physical Ethernet, port-channel, VLAN, or management interface, the following version displays information for all ACLs bound to that interface:

```
show access-list interface { <N>gigabitethernet rbridge_id/slot/port | port-channel index | vlan vlan_id | management rbridge_id/port } { in | out }
```

For either the inbound or the outbound direction on a specified virtual Ethernet (VE) interface, the following version displays information for all ACLs bound to that interface. You can also include ACLs on nodes connected by RBridges:

```
show access-list interface ve vlan_id { in | out } [ rbridge-id { rbridge_id | all } ]
```

For the inbound direction on a specified VXLAN overlay-gateway, the following version displays information for all ACLs bound to that overlay gateway:

```
show access-list overlay-gateway overlay_gateway_name in
```

For either the inbound or the outbound direction, on a specified N-gigabite physical Ethernet, port-channel, or VLAN interface, the following version displays the rules in a specified MAC ACL bound to that interface:

```
show access-list mac name interface { <N>gigabitethernet rbridge_id/slot/port | port-channel index | vlan vlan_id } { in | out }
```

For either the inbound or the outbound direction, on a specified N-gigabite physical Ethernet, port-channel, VLAN, or management interface, the following version displays the rules in a specified Layer 3 ACL bound to that interface:

```
show access-list name interface { <N>gigabitethernet rbridge_id/slot/port | port-channel index | vlan vlan_id | management rbridge_id/port } { in | out }
```

For either the inbound or the outbound direction, on a specified virtual Ethernet (VE) interface, the following version displays the rules in a specified Layer 3 ACL bound to that interface. You can also include ACLs on nodes connected by RBridges:

**show access-list** *name interface ve vlan\_id in | out* [ **rbridge-id** { *rbridge\_id* | **all** } ]

**Parameters** **ip | ipv6 | mac**

Specifies the network protocol.

**name**

Specifies the ACL name.

**interface**

Filters by interface.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace **<N>gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge\_id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**management rbridge\_id/port**

Specifies a management interface.

**port-channel index**

Specifies a port-channel interface.

**vlan vlan\_id**

Specifies a VLAN interface.

**ve vlan\_id**

Specifies a virtual Ethernet (VE) interface.

**rbridge-id**

(for a VE interface) To display ACLs beyond the local node, include this keyword and the relevant of the following:

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**overlay-gateway overlay\_gateway\_name**

Specifies a VXLAN overlay-gateway.

**in | out**

Specifies the ACL binding direction (incoming or outgoing).

**Modes** Privileged EXEC mode

**Usage Guidelines** On the Brocade VDX family of hardware, VLANs are treated as interfaces from a configuration point of view. By default all the DCB ports are assigned to VLAN 1 (VLAN ID equals 1). For details of valid VLAN IDs, refer to the **vlan classifier group** command.

**Command Output** The **show access-list** command displays the following information:

Output field	Description
Active	The rule is active and implements the configured action.

Output field	Description
Partial	The rule is partially programmed, with the configured action implemented in some cases. This is typically seen for logical interfaces like VLAN, which span multiple hardware resources.
In progress	The rule is currently being programmed into the hardware.
Inactive	The rule is inactive and is not programmed in the hardware. This is typically seen when the hardware resources limit is reached.

## Examples

**Draft comment:**  
 <<<TW Add a MAC example

The following example displays the names of IPv4 ACLs applied to the switch, interfaces to which they are applied, and incoming/outgoing direction:

```
sw0# show access-list ip
Interface Ve 171
  Inbound access-list is not set
  Outbound access-list is IPV4_ACL_000 (From User)
```

The following example displays all interfaces on which an IPv4 ACL is applied in the outgoing direction:

```
sw0# show access-list ip IPV4_ACL_000 out
ip access-list IPV4_ACL_000 on Ve 171 at Egress (From User)
  seq 0 deny ip host 0.0.0.0 host 10.0.0.0 (Active)
```

The following example displays all interfaces on which an IPv6 ACL is applied in the incoming direction:

```
switch# show access-list ipv6 distList in
ipv6 access-list distList on TenGigabitEthernet 122/1/2 at Ingress (From User)
  seq 10 deny 2001:125:132:35::/64 (Active)
  seq 20 deny 2001:54:131::/64 (Active)
  seq 30 deny 2001:5409:2004::/64 (Active)
  seq 40 permit any (Active)
```

The following example displays all ACLs applied on a specified interface in the outgoing direction:

```
switch# show access-list interface tengigabitethernet 1/4/1 in
ipv6 access-list ipv6-std-acl on TenGigabitEthernet 1/4/1 at Ingress (From User)
  seq 10 permit host 0:1::1 (Active)
  seq 20 deny 0:2::/64 (Active)
  seq 30 hard-drop any count (Active)
```

The following example displays details of ACLs applied in the outgoing direction to VE 121, RBridge 2.

```
sw0# show access-list interface ve 171 out rbridge-id 2
ip access-list IPV4_ACL_000 on Ve 171 at Egress (From User)
  seq 0 deny ip host 0.0.0.0 host 10.0.0.0 (Active)
```

The following example displays information for ACLs applied to a VXLAN overlay-gateway named gw121:

```
switch# show access-list overlay-gateway gw121 in
mac access-list stdmacaclin on overlay-gateway gw121 at Ingress (From User)
ip access-list stdipaclin on overlay-gateway gw121 at Ingress (From User)
  seq 0 deny ip host 0.0.0.0 host 10.0.0.0 (Active)
ipv6 access-list stdip6aclin on overlay-gateway gw121 at Ingress (From User)
  seq 10 permit host 0:1::1 (Active)
  seq 20 deny 0:2::/64 (Active)
  seq 30 hard-drop any count (Active)
```

## show access-list-log buffer

Displays the contents of the log buffer for all ACLs.

**Syntax** `show access-list-log buffer`

**Modes** Privileged EXEC mode

**Examples** Sample terminal output:

```
switch# show access-list-log buffer
Frames Logged on interface 1/2/1 :
-----
Frame Received Time : Fri Dec 9 3:8:48 2011
Ethernet,          Src : (00:34:56:78:0a:ab), Dst: (00:12:ab:54:67:da)
  Ethtype           : 0x8100
  Vlan tag type     : 0x800
  VlanID            : 0x1
Internet proto,   Src : 192.85.1.2, Dst: 192.0.0.1
  Interface         :
  Type of service  : 0
  Length           : 110
  Identification   : 0
  Fragmentation    : 00 00
  TTL              : 255
  protocol         : 253
  Checksum         : 39 3a
  Payload type     :
packet(s) repeated : 30
-----
```

**Related Commands** [access-group](#), [access-list](#), [show access-list](#), [show access-list-log buffer config](#)

## show access-list-log buffer config

Displays the configuration of the ACL buffer.

**Syntax** `show access-list-log buffer config`

**Modes** Privileged EXEC mode

**Examples** Sample terminal output:

```
switch# show access-list-log buffer config
ACL Logging Enabled.
ACL logging Buffer configuration: Buffer type is circular and Buffer size is 1600.
```

**Related Commands** [access-group](#), [access-list](#), [show access-list](#), [show access-list-log buffer](#)

## show ag

Displays the current Access Gateway configuration on a switch.

<b>Syntax</b>	<b>show ag [ rbridge-id rbridge-id ]</b>
<b>Parameters</b>	<b>rbridge-id rbridge-id</b> Specifies an RBridge ID for the switch.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>The command displays current, active configuration information for Access Gateway, such as the switch identification, number and type of ports, enabled policies, port grouping, and attached fabric details</p> <p>Consider these guidelines when automatic login balancing (lb) mode is enabled or disabled for a port group.</p> <ul style="list-style-type: none"> <li>When lb mode is disabled in a port group, the <b>show running-config ag</b>, <b>show ag map</b>, and <b>show ag</b> commands display the configured VF_Port to N_Port mapping. This is because configured and active mapping are the same.</li> <li>When LB mode is enabled in a port group, the <b>show ag</b> and <b>show ag map</b> commands display the active mapping only because VF_Port to N_Port mapping is based on the current distributed load across all N_Ports. The <b>show running-config ag</b> command displays the configured mapping only.</li> </ul>

**Examples** Following is an example of the Access Gateway configuration on RBridge 5:

```
sw0# show ag
Rbridge-ID 5:
-----
Name : sw0
NodeName : 10:00:00:05:33:f4:78:04
Number of Ports : 32
IP Address(es) : 10.37.209.80
Firmware Version : v4.1.0pgoel_pit02_nos4_1_10_10
Number of N_Ports(Fi) : 2
Number of VF_Ports : 0
Policies Enabled : pg
Persistent ALPA : Disabled
Port Group information :
PG_ID PG_Name PG_Mode PG_Members
-----
0 pg0 lb 5/0/1, 5/0/2, 5/0/3, 5/0/4,
5/0/5, 5/0/6, 5/0/7, 5/0/8
-----
Fabric Information :
Attached Fabric Name N_Ports(Fi)
-----
10:00:00:05:33:72:f5:5a 5/0/1, 5/0/2
N_Port(Fi) information :
Port PortID Attached PWWN IP_Addr VF_Ports
-----
Fi 5/0/1 0x020200 20:02:00:05:33:72:f5:5a 10.37.209.86 None
798 Network OS Command Reference
53-1003226-01
5 show ag
Fi 5/0/2 0x020300 20:03:00:05:33:72:f5:5a 10.37.209.86 None
-----
VF_Port information :
VF_Port Eth_Port PortID Attached PWWN N_Port(Fi)
-----
None
-----
```

**Related Commands** [ag, ag enable, show ag map, show running-config ag](#)

# show ag map

Displays the current VF\_Port mapping to N\_Ports in Access Gateway mode on a specific switch or on all switches in the VCS cluster.

**Syntax** `show ag map nport [ rbridge-id { rbridge-id | all } ]`

**Parameters** *nport*

N\_Port number supported by the switch model in /rbridge-id/port group/N Port format.

**rbridge-id**

Specifies an RBridge or all RBridges.

*rbridge-id*

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** To display VF\_Ports currently mapped to N\_Ports on a specific switch, enter **show ag map rbridge-id rbridge-id**.

To display VF\_Ports currently mapped to a specific N\_Port on a specific switch, enter **show ag map nport rbridge-id rbridge-id**. In Network OS commands, N\_Ports are designated by the format rbridge-id/port group/N\_Port. Therefore, N\_Port 5/0/1 designates that N\_Port 1 resides in port group 0 on RBridge 5. The **show ag map command** for this N\_Port would be the following:

```
show ag map 5/0/1 rbridge-id 5
```

To display VF\_Ports currently mapped to a specific N\_Port on all switches in the VCS cluster, enter **show ag map nport rbridge-id all**.

Consider these guidelines when Automatic Login Balancing (LB) mode is enabled or disabled for a port group.

- When Login Balancing (LB) mode is disabled in a port group, the **show running-config ag**, **show ag map**, and **show ag** commands display the configured VF\_Port to N\_Port mapping. This is because configured and active mapping are the same.
- When LB mode is enabled in a port group, the **show ag** and **show ag map** commands display the active mapping only because VF\_Port to N\_Port mapping is based on the current distributed load across all N\_Ports. The **show running-config ag** command displays the configured mapping only.

**Examples** Displaying port mapping information for a switch.

```
sw0# show ag map rbridge 5
Rbridge-ID 5:
-----
N_Port(Fi) PG_ID PG_Name Current_VF_Ports
-----
5/0/1 0 pg0 None
5/0/2 0 pg0 None
5/0/3 0 pg0 None
5/0/4 0 pg0 None
5/0/5 0 pg0 None
800 Network OS Command Reference
53-1003226-01
5 show ag map
5/0/6 0 pg0 None
5/0/7 0 pg0 None
5/0/8 0 pg0 None
-----
```

Show commands

**Related Commands** [ag](#), [ag enable](#), [map fport interface fcoe](#), [show ag](#), [show ag nport-utilization](#), [show ag pg](#)



# show ag nport-utilization

Displays Access Gateway N\_Port utilization information. You can display this information either for a specific RBridge or for all.

**Syntax** `show ag nport-utilization [ rbridge-id { rbridge-id | all } ]`

**Parameters** **rbridge-id**

You can display N\_Port utilization information either for a specific RBridge or for all.

**rbridge-id**

Specify an RBridge ID.

**all**

Display N\_Port utilization information for N\_ports on all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** Access Gateway mode must be enabled.

There is a **clear** form of this command, which clears utilization information of RBridges specified. Enabling a port also clears the information.

If an N\_port is a trunk slave port, no utilization information is displayed. Instead, the bandwidth is included in the master port of the trunk.

**Command Output** The `show ag nport-utilization` command displays the highest bandwidth utilization and associated timestamp associated with each N\_port.

**Examples** The following command displays utilization information for Access Gateway N\_ports on RBridge 1:

```
sw0# show ag nport-utilization rbridge-ID 1
-----
Name           : sw0
NodeName       : 10:00:00:05:1e:e5:6d:27
Number of Ports : 128
IP Address(es) : 10.17.31.92
Firmware Version : v5.0.0d
Number of N Ports (Fi) : 2
Number of VF Ports : 2
Policies Enabled : pg
Disabled
N_Port (Fi) information :
  Port          PortID      Attached PWWN      IP_Addr      VF_Ports
  -----
  Fi 1/0/7      0xa90900  2f:00:00:05:1e:80:31:4f  10.17.31.169  1/1/1,
1/1/2
                highest bandwidth utilization of 11 % recorded at Wed Apr 30 14:07:42
2014
  Fi 1/0/8      0xa90900  2f:00:00:05:1e:80:31:4f  10.17.31.169  None
                trunk slave. bandwidth/traffic added to trunk master
-----
```

**History**

**Release version**

**Command history**

5.0.0

This command was introduced.

**Related Commands**

[ag](#), [ag enable](#), [clear ag nport-utilization](#), [show ag](#), [show ag map](#), [show ag pg](#)

## show ag pg

Displays information on Port Grouping (PG) configured on a switch for Access Gateway (AG) mode.

<b>Syntax</b>	<b>show ag pg [ rbridge-id { rbridge-id   all } ]</b>
<b>Parameters</b>	<b>rbridge-id</b>
	Specifies an RBridge or all RBridges.
	<b>rbridge-id</b>
	Specifies an RBridge ID.
	<b>all</b>
	Specifies all RBridges.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	The command output includes N_Ports and VF_Ports in the group and Port Grouping (PG) modes enabled.
	Access Gateway mode must be enabled.

**Examples** Following is an example showing port grouping information for RBridge 5:

```
sw0# show ag pg rbridge-id 5
Rbridge-ID 5:
```

```
-----
PG_ID  PG_Name  PG_Mode          N_Ports (Fi)          VF_Ports
-----
0      pg0       lb              5/0/1,5/0/2,5/0/3,5/0/4,
1/5/1, 1/5/2, 1/5/3, 1/5/4,
1/5/5, 1/5/6, 1/5/7, 1/5/8,
1/5/9, 1/5/10, 1/5/11, 1/5/12,
1/5/13, 1/5/14, 1/5/15, 1/5/16,
1/5/17, 1/5/18, 1/5/19, 1/5/20,
1/5/21, 1/5/22, 1/5/23, 1/5/24,
1/5/25, 1/5/26, 1/5/27, 1/5/28,
1/5/29, 1/5/30, 1/5/31, 1/5/32,
1/5/33, 1/5/34, 1/5/35, 1/5/36,
1/5/37, 1/5/38, 1/5/39, 1/5/40,
1/5/41, 1/5/42, 1/5/43, 1/5/44,
1/5/45, 1/5/46, 1/5/47, 1/5/48,
1/5/49, 1/5/50, 1/5/51, 1/5/52,
1/5/53, 1/5/54, 1/5/55, 1/5/56,
1/5/57, 1/5/58, 1/5/59, 1/5/60,
1/5/61, 1/5/62, 1/5/63, 1/5/64
-----
```

**Related Commands** [pg](#), [show ag](#), [show ag map](#), [show ag nport-utilization](#)

# show arp

Displays the ARP cache.

<b>Syntax</b>	<b>show arp</b> [dynamic[summary]]   <N>gigabitethernet rbridge-id/slot/port   ip ip-address   static [summary]   summary   ve vlan_id [vrf name] [rbridge-id[all rbridge_id]]   slot slot_no [[ip-address]   [vrf name] [ip-address]]
<b>Parameters</b>	<p><b>switch_ID</b> Unique identifier for a switch (WWN).</p> <p><b>all</b> Displays ARP information for all RBridge IDs in a cluster.</p> <p><b>dynamic</b> Displays all the dynamic ARP entries in the ARP table.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;gigabitethernet with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>ip</b> Displays the ARP for a particular next-hop.</p> <p><b>ip-address</b> Displays the ARP information for this next-hop IP address.</p> <p><b>slot</b> Displays ARP information for a selected slot.</p> <p><b>static</b> Displays all the static ARP entries in the ARP table.</p> <p><b>summary</b> Displays a summary of the ARP table (can be used by itself, or succeed the static, dynamic or interface keywords).</p> <p><b>ve vlan_id</b> Specifies the virtual Ethernet (VE) interface to display.</p> <p><b>vrf name</b> Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.</p>
<b>Modes</b>	Privileged EXEC mode

## show bpdu-drop

Displays information about BPDU guard.

<b>Syntax</b>	<b>show bpdu-drop [ interface { port-channel <i>num</i>   &lt;N&gt;gigabitethernet <i>rbridge-id/slot/port</i> ]</b>
<b>Parameters</b>	<b>interface</b> Selects an interface (required).
	<b>port-channel <i>num</i></b> Selects a port channel interface. The number of available channels ranges from 1 through 6144
	<b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N> <b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.
	<b><i>rbridge-id</i></b> Specifies an RBridge ID.
	<b><i>slot</i></b> Specifies a valid slot number.
	<b><i>port</i></b> Specifies a valid port number.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	This command can be entered on any RBridge in a Brocade VCS Fabric.
<b>Related Commands</b>	<a href="#">capture packet interface</a>

# show capture packet interface

Displays information about captured packets.

**Syntax** `show capture packet interface { all | <N>gigabitethernet rbridge-id/slot/port }`

**Parameters** **all**

Selects all interfaces.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace **<N>gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command displays information captured by means of the **capture packet interface** command. This command can be entered on any RBridge in a Brocade VCS Fabric.

## Examples

```
switch# show capture packet interface all
Packet Capture configured on the following interfaces
Te 130/0/5 >> ISL
Te 130/0/6 >> ISL
Te 130/0/21
Te 130/0/23
Te 130/0/24
Frame Received Time : Sat Mar 9 2013 0:57:0:282
Packet Type          : ELD
Packet Direction     : TX
Interface info       : Te 130/0/21
  ETHERNET HEADER
SrcMAC                : 00:05:33:5e:01:67
DstMAC                : 03:05:33:5d:f3:fa
Ethtype               : 0x8100
Eth Frametype         : 0x33
VlanID                : 0xfff
  ELD PAYLOAD DETAILS
-----
Vlan id               : 2
Src-Rbridgeid         : 130
Src-Priority          : 5
Magic Number         : 5103
```

**Related Commands** [capture packet interface](#)

## show cee maps

Displays information on the defined CEE maps. The configuration state is displayed with a list of all of the Layer 2 interfaces bound to the CEE map.

- Syntax** `show cee maps default`
- Command Default** The only map name allowed is "default."
- Modes** Privileged EXEC mode
- Usage Guidelines** Network OS only allows the CEE map named "default."
- Examples** To view the CEE map:

```
switch0# show cee maps

CEE Map 'default'
Precedence: 1
Remap Fabric-Priority to Priority 0
Remap Lossless-Priority to Priority 0
Priority Group Table
1: Weight 40, PFC Enabled, BW% 40
2: Weight 40, PFC Disabled, BW% 40
3: Weight 20, PFC Disabled, BW% 20
15.0: PFC Disabled
15.1: PFC Disabled
15.2: PFC Disabled
15.3: PFC Disabled
15.4: PFC Disabled
15.5: PFC Disabled
15.6: PFC Disabled
15.7: PFC Disabled
Priority Table
CoS:      0      1      2      3      4      5      6      7
-----
PGID:     2      2      3      1      2      2      2 15.0
```

**Related Commands** [cee, cee-map \(configuration\)](#)

## show cert-util ldapca

Displays the Lightweight Directory Access Protocol (LDAP) Certification Authority (CA) certificate.

**Syntax** `show cert-util ldapca [ rbridge-id { rbridge_id | all } ]`

**Parameters** **rbridge-id** Specifies an RBridge or all RBridges.

***rbridge-id*** Specifies an RBridge ID.

**all** Specifies all RBridges.

**Modes** Privileged EXEC mode

**Examples** To display the LDAP certificate on the switch:

```
switch: show cert-util syslogcacert rbridge-id 3
```

**Related Commands** [ldap-server host](#), [ldap-server maprole](#), [show running-config ldap-server](#), [username](#)

## show cert-util sshkey

Displays the public SSH key for a specified user..

<b>Syntax</b>	<b>show cert-util sshkey user <i>user_id</i> [ <i>rbridge-id</i> { <i>rbridge-id</i>   <b>all</b> } ]</b>
<b>Parameters</b>	<b>user <i>user_id</i></b>
	The user ID to display.
	<b>rbridge-id</b>
	Specifies an RBridge or all RBridges.
	<b><i>rbridge-id</i></b>
	Specifies an RBridge ID.
	<b>all</b>
	Specifies all RBridges.

**Modes** Privileged EXEC mode

**Examples** A typical output of this command:

```
switch# show cert-util sshkey user testuser

user's public keys
ssh-rsa AAAAB3NzaC1yc2EAAAABIwAAAQEAtTCFzC1lfjwV9hjdqv2ulSvmsmf7q7MS92Ctc3pDje/
YGYJPHVUi8bQX0XAsCAuzdsZL0B1VhdYP01L4HStuIo8okfn4xLxrazqzwVeeL8p5Zcspf9zK8HmDzNpZ/
OuQ9MvfOuzbseYrovqgYLFgfPvY6vleFXZo61vVncFM7uFzasED9o9JUSBRORhBki7vB0SG69yNn6ADnmpQW6Q
Ou+nYuZaWx00QXk2OIB+hidjxSQVafVLidSIGyfDD0go
+JAE3osxZxwQa5jcorASs4q2Gt4tSYERpvzOsjaAR5YivbmmBTIQWdUuR9Laz8s8VKF4Di9HQ4kE
+xyBeAFNvQ== bmeenaks@blc-10-6
```

To see the output of rbridge-id 3:

```
switch# show cert-util sshkey user testuser rbridge-id 3
```

**Related Commands** [certutil import sshkey](#)



## show cert-util syslogca

Displays the syslog Certification Authority (CA) certificate.

**Syntax** `show cert-util syslogca [ rbridge-id { rbridge_id | all } ]`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

***rbridge-id***

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Examples** To display the LDAP certificate on the switch:

```
switch# show cert-util ldapca
LDAP CA
```

**Related Commands** [show running-config ldap-server](#), [ldap-server host](#), [ldap-server maprole](#), [show running-config ldap-server](#), [username](#)

## show chassis

displays the Field Replaceable Unit (FRU) header content for each object in the chassis.

<b>Syntax</b>	<b>show chassis [ rbridge-id rbridge-id ]</b>
<b>Parameters</b>	<b>rbridge-id rbridge-id</b> Specifies an RBridge ID for the switch.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	This command is executed on the local switch and is supported only on the local switch. The output of this command depends on the platforms on which it is executed. Not all information is available for all platforms. In cases where information is not available, the lines are suppressed  Pagination is not supported with this command. Use the "more" parameter to display the output one page at a time.
<b>Command Output</b>	The <b>show chassis</b> command displays the Field Replaceable Unit (FRU) header content for each object in the chassis.

Output field	Description
Chassis name and model	For example, BR-VDX6740-48
Chassis backplane revision	
Object type	MM (management module), SFM (switch fabric module), LC (line card), CHASSIS, FAN, POWER SUPPLY, SW CID (chassis ID), WWN (world wide name), or UNKNOWN
Object number	Slot number (for blades), Unit number (for everything else)
Brief description	If the FRU is part of an assembly
FRU header version number or blade version	Header Version: x
Maximum allowed power consumption	Positive value for power supplies; negative value for consumers
Real-time power usage (W)	For FRUs that support real-time power management
Part number (up to 14 characters)	Factory Part Num: xx-xxxxx-x x
Serial number (up to 12 characters)	Factory Serial Num: xxxxxxxxx
FRU manufacture date	Manufacture: Day: dd Month: mm Year: yyyy
Date of the last FRU header update	Update: Day: dd Month: mm Year: yyyy
Cumulative time (days) FRU inserted in the chassis with Network OS running	Time Alive :dd days
Current time (days) since FRU was last powered on or the system restarted	Time Awake: dd days

Output field	Description
Airflow direction	
Externally supplied ID (up to 10 characters)	ID: xxxxxxxxxx
Externally supplied part number (up to 20 characters)	Part Num: xxxxxxxxxxxxxxxxxxxxxx
Externally supplied serial number (up to 20 characters)	Serial Num: xxxxxxxxxxxxxxxxxxxxxx
Externally supplied revision number (up to 4 characters)	Revision Num: xxxx

**Examples** To display the FRU information on a Brocade VDX switch:

```
switch# show chassis rbridge-id 54

Chassis Name:          BR-VDX6740
Chassis Backplane Revision: 2
switchType: 96
FAN Unit: 1
Time Awake:           64 days
FAN Unit: 2
Time Awake:           64 days
POWER SUPPLY Unit: 1
Header Version:       2
Factory Part Num:     40-1000590-03
Factory Serial Num:   BWU0406G006
Manufacture:          Day: 18 Month: 2 Year: 2011
Update:               Day: 1 Month: 7 Year: 2012
Time Alive:           594 days
Time Awake:           0 days
POWER SUPPLY Unit: 2
Header Version:       2
Factory Part Num:     40-1000590-03
Factory Serial Num:   BWU0406G006
Manufacture:          Day: 18 Month: 2 Year: 2011
Update:               Day: 1 Month: 7 Year: 2012
Time Alive:           594 days
Time Awake:           64 days
CHASSIS/WWN Unit: 1
Header Version:       2
Power Consume Factor: 0
Factory Part Num:     40-1000590-03
Factory Serial Num:   BWU0406G006
Manufacture:          Day: 18 Month: 2 Year: 2011
Update:               Day: 1 Month: 7 Year: 2012
Time Alive:           594 days
Time Awake:           64 days
```

To display the FRU information on a Brocade VDX 8770-4:

```

switch# show chassis rbridge-id 1

Chassis Name: BR-VDX8770-4
Chassis Backplane Revision: 2
switchType: 1000
MM Slot: M1
Blade Version: 3
Power Consume Factor: -120
Power Usage (Watts): -43
Factory Part Num: 60-1002179-07
Factory Serial Num: BVT0329G00D
Manufacture: Day: 26 Month: 7 Year: 11
Update: Day: 30 Month: 6 Year: 2012
Time Alive: 78 days
Time Awake: 1 days
SFM Slot: S2
Blade Version: 3
Power Consume Factor: -150
Power Usage (Watts): -132
Factory Part Num: 60-1002180-05
Factory Serial Num: BVU0321G01F
Manufacture: Day: 39 Month: 5 Year: 17
Update: Day: 30 Month: 6 Year: 2012
Time Alive: 76 days
Time Awake: 1 days
LC Slot: L1
Blade Version: 3
Power Consume Factor: -400
Factory Part Num: 60-1002181-08
Factory Serial Num: BVV0333G00E
Manufacture: Day: 17 Month: 8 Year: 11
Update: Day: 30 Month: 6 Year: 2012
Time Alive: 69 days
Time Awake: 1 days
LC Slot: L2
Blade Version: 3
Power Consume Factor: -400
Factory Part Num: 60-1002181-07
Factory Serial Num: BVV0326G01B
Manufacture: Day: 5 Month: 7 Year: 11
Update: Day: 30 Month: 6 Year: 2012
Time Alive: 75 days
Time Awake: 1 days
LC Slot: L3
Blade Version: 3
Power Consume Factor: -400
Power Usage (Watts): -261
Factory Part Num: 40-1000573-01
Factory Serial Num: BTF0333G002
Manufacture: Day: 48 Month: 8 Year: 17
Update: Day: 30 Month: 6 Year: 2012
Time Alive: 58 days
Time Awake: 1 days
LC Slot: L4
Blade Version: 3
Power Consume Factor: -400
Factory Part Num: 60-1002181-07
Factory Serial Num: BVV0326G01A
Manufacture: Day: 5 Month: 7 Year: 11
Update: Day: 30 Month: 6 Year: 2012
Time Alive: 80 days
Time Awake: 1 days
POWER SUPPLY Unit: 1
Power Consume Factor: 3000
Factory Part Num: 23-0000135-01
Factory Serial Num: BMM2J02G003
Manufacture: Day: 1 Month: 1 Year: 2011
Time Awake: 1 days
ID: LPCS
Part Num: SP750Z1A
Rework: A
POWER SUPPLY Unit: 2
Power Consume Factor: 3000
Factory Part Num: 23-0000135-01
Factory Serial Num: BMM2J02G008

```

```

Manufacture:          Day:  1  Month:  1  Year: 2011
Time Awake:          1 days
ID:                  LPCS
Part Num:             SP750Z1A
Rework:              A
FAN Unit: 1
Power Consume Factor: -126
Power Usage (Watts): -19
Factory Part Num:    60-1002130-02
Factory Serial Num:  BYX0320G007
Manufacture:          Day:  3  Month:  6  Year: 17
Time Awake:          1 days
FAN Unit: 2
Power Consume Factor: -126
Power Usage (Watts): -21
Factory Part Num:    60-1002130-02
Factory Serial Num:  BYX0320G011
Manufacture:          Day:  3  Month:  6  Year: 17
Time Awake:          1 days
CID Unit: 1
Power Consume Factor: -1
Factory Part Num:    60-1002178-01
Factory Serial Num:  BWF0319G015
Manufacture:          Day:  3  Month:  6  Year: 17
Time Awake:          1 days
CID Unit: 2
Power Consume Factor: -1
Factory Part Num:    60-1002178-01
Factory Serial Num:  BWF0319G01Z
Manufacture:          Day:  3  Month:  6  Year: 17
Time Awake:          1 days
Chassis Factory Serial Num: BZA0320G00W

```

**Related**    [show linecard](#), [show mm](#), [show sfm](#)  
**Commands**

## show cipherset

Displays the current cipherset status for LDAP and SSH.

**Syntax** `show cipherset`

**Modes** Privileged EXEC mode

**Examples** To display cipherset status on the switch:

```
switch# show cipherset
LDAP Cipher List      : !DH:HIGH:-MD5
SSH Cipher List      : 3des-cbc,aes128-cbc,aes192-cbc,aes256-cbc
```

**Related  
Commands** [cipherset](#)

## show class-maps

Displays all the class-maps configured in the system.

**Syntax**    **show class-maps**

**Modes**    Privileged EXEC mode

**Related  
Commands**    [class-map](#), [policy-map](#)

## show cli

Displays all the current CLI settings.

**Syntax** **show cli**

**Modes** Privileged EXEC mode

**Examples** Typical command output display.

```
switch# show cli
autowizard                false
complete-on-space        false
history                   100
idle-timeout              600
ignore-leading-space     false
output-file               terminal
paginate                  true
prompt1                   \H\M#
prompt2                   \H(\m)#
screen-length             73
screen-width              120
service prompt config    true
show-defaults             false
terminal                  ansi
```



## show cli history

Displays the last 512 commands executed on the local node across user sessions.

**Syntax** `show cli history`

**Modes** Privileged EXEC mode

## show clock

Returns the local time, date, and time zone.

**Syntax** `show clock [ rbridge-id { rbridge-id | all } ]`

**Command Default** The local clock is used.

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

*rbridge-id*

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** If the RBridge ID is not provided, status results default to the local switch (LOCL). If **rbridge-id all** is executed, the command displays the status for all switches in the VCS cluster

This command is currently supported only on the local RBridge.

**Examples** To show clock time for all switches in the cluster (Logical chassis cluster mode only):

```
switch# show clock rbridge-id all
```

To show clock time for switch with rbridge-id 16:

```
switch# show clock rbridge-id 16
```

**Related Commands** [clock set](#), [clock timezone \(Privileged EXEC mode\)](#), [clock timezone \(RBridge ID configuration mode\)](#), [ntp server](#)

## show config snapshot

Displays the snapshots present on the switch.

**Syntax** `show config snapshot [ rbridge-id { rbridge-id | all } ] [ snapshot-id ]`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**snapshot-id**

Specifies the name of the snapshot that has been captured. This can be any combination of characters and numbers. The range is from 1 through 50.

**Modes** Privileged EXEC mode

**Usage Guidelines** A maximum of four snapshots for each RBridge ID can be stored on the switch.

**Related Commands** [copy snapshot \(logical chassis cluster mode\)](#)

## show copy-support status

Displays the status of the copy support operation.

**Syntax** `show copy-support status [ rbridge-id { rbridge-id | all } ]`

**Parameters** `rbridge-id`

Specifies an RBridge or all RBridges.

*rbridge-id*

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** The status is indicated by the percentage of completion. On a modular chassis, Use this command to display status information for each module along with the slot number and SS type. NORMAL indicates process is proceeding or completed without errors. FAULTY indicates a faulty blade.

This command is supported only on the local switch.

**Examples** To display the support upload status on a Brocade VDX 8770-4:

```
switch# show copy-support status

Slot Name      SS type      Completion Percentage
#####
M1             NORMAL      [100%]
M2             NORMAL      [100%]
L1/0           NORMAL      [100%]
L1/1           NORMAL      [100%]
L2/0           NORMAL      [100%]
L2/1           NORMAL      [100%]
L4/0           NORMAL      [100%]
L4/1           NORMAL      [100%]
```

**Related Commands** [copy support](#), [copy support-interactive](#), [show support](#)

# show dadstatus

Displays the current DHCP auto-deployment (DAD) status output on the switch.

**Syntax** `show dadstatus`

**Modes** Privileged EXEC mode

**Usage Guidelines** If DAD fails, one of the following errors will show in the output:

1. DHCP auto-deployment failed during DHCP process
2. DHCP auto-deployment failed in sanity check
3. DHCP auto-deployment failed due to same firmware
4. DHCP auto-deployment failed to start firmware download
5. DHCP auto-deployment failed due to firmware download failure

**Examples** To display DAD status output on the switch:

```
sw0# show dadstatus
[1] : Thu Aug 15 23:22:50 GMT 2013
DHCP Auto-deployment enabled

[2] : Thu Aug 15 23:27:20 GMT 2013
DHCP Auto-deployment started firmwaredownload

[3] : Thu Aug 15 23:38:57 GMT 2013
DHCP Auto-deployment succeeded

sw0# show dadstatus
[1] : Fri Aug 16 12:02:44 GMT 2013
DHCP Auto-deployment enabled

[2] : Fri Aug 16 12:10:03 GMT 2013
DHCP Auto-deployment failed in sanity check.
```

**Related Commands** [firmware download](#), [firmware download logical-chassis](#), [dhcp auto-deployment enable](#)

show debug dhcp packet

## show debug dhcp packet

Displays the DHCP packet capture configuration for interfaces configured for DHCP packet capturing.

**Syntax** `show debug dhcp packet`

**Modes** Privileged EXEC mode

**Examples**

```
sw0# show debug dhcp packet
```

```
% DHCP protocol RCV debug is enabled on interface Te 3/18
```

```
% DHCP protocol TX debug is enabled on interface Te 3/18
```

```
PCAP Buffer Configuration for Vrf ID 0: Buffer Type is Linear and BufferSize is 2056
```

**Related  
Commands** [debug dhcp packet buffer interface](#)

## show debug dhcp packet buffer

Displays DHCP packets saved in the DHCP packet capture buffer for all VRF IDs.

**Syntax** `show debug dhcp packet buffer`

**Modes** Privileged EXEC mode

**Examples** The following command displays buffer content for all VRF IDs.

```
sw0# show debug dhcp packet buffer
Protocol Type      : DHCP
Packet Flow       : RX
Src Port          : 68 (DHCP Client)
Dst Port          : 67 (DHCP Server)
Message Type      : 1 (DHCP-Discover)
Hardware Type     : 1 (Ethernet (10Mb))
Hw Address Len    : 6
Hops              : 0
Transaction ID    : 0
Seconds Elapsed   : 0
BootP Flags       : 8000
Client IP         : 0.0.0.0
Your (client) IP  : 0.0.0.0
Next Server IP    : 0.0.0.0
Relay Agent IP    : 0.0.0.0
Client MAC Add    : 00:10:94:00:00:01
Server Host Name  : Not Given
Boot File Name    : Not Given
*****
Protocol Type     : DHCP
Packet Flow       : TX
Src Port          : 67 (DHCP Server)
Dst Port          : 68 (DHCP Client)
Message Type      : 2 (DHCP-Offer)
Hardware Type     : 1 (Ethernet (10Mb))
Hw Address Len    : 6
Hops              : 1
Transaction ID    : 0
Seconds Elapsed   : 0
BootP Flags       : 8000
Client IP         : 0.0.0.0
Your (client) IP  : 10.10.10.30
Next Server IP    : 20.20.20.20
Relay Agent IP    : 10.10.10.10
Client MAC Add    : 00:10:94:00:00:01
Server Host Name  : Not Given
Boot File Name    : Not Given
*****
Protocol Type     : DHCP
Packet Flow       : RX
Src Port          : 68 (DHCP Client)
Dst Port          : 67 (DHCP Server)
Message Type      : 3 (DHCP-Request)
Hardware Type     : 1 (Ethernet (10Mb))
Hw Address Len    : 6
Hops              : 0
Transaction ID    : 0
Seconds Elapsed   : 0
BootP Flags       : 8000
Client IP         : 0.0.0.0
Your (client) IP  : 0.0.0.0
Next Server IP    : 0.0.0.0
Relay Agent IP    : 0.0.0.0
Client MAC Add    : 00:10:94:00:00:01
Server Host Name  : Not Given
Boot File Name    : Not Given
*****
Protocol Type     : DHCP
Packet Flow       : TX
Src Port          : 67 (DHCP Server)
Dst Port          : 68 (DHCP Client)
Message Type      : 5 (DHCP-Ack)
Hardware Type     : 1 (Ethernet (10Mb))
Hw Address Len    : 6
Hops              : 1
Transaction ID    : 0
Seconds Elapsed   : 0
BootP Flags       : 8000
Client IP         : 0.0.0.0
Your (client) IP  : 10.10.10.30
Next Server IP    : 20.20.20.20
Relay Agent IP    : 10.10.10.10
Client MAC Add    : 00:10:94:00:00:01
Server Host Name  : Not Given
```



```
Boot File Name      : Not Given  
*****
```

**Related  
Commands**

[debug dhcp packet buffer clear](#), [debug dhcp packet buffer interface](#)

show debug ip bgp all

## show debug ip bgp all

Displays all BGP4 debug options that are enabled.

**Syntax** `show debug ip bgp all`

**Modes** Privileged EXEC mode

**Examples**  
switch# show debug ip bgp all

## show debug ip igmp

Displays the IGMP packets received and transmitted, as well as related events.

**Syntax** `show debug ip igmp`

**Modes** Privileged EXEC mode

## show debug ip pim

Displays the current state of the Protocol Independent Multicast (PIM) debug flags.

**Syntax** `show debug ip pim`

**Modes** Privileged EXEC mode

**Examples** A typical output of this command.

```
switch# show debug ip pim
PIM debugging status:
-----
add-del-oif   : off
bootstrap    : off
group         : off
join-prune    : on
nbr-change    : off
packets       : off
parent        : off
regproc       : off
route-change  : off
rp            : off
source        : off
-----
```

# show debug ipv6 packet

Displays IPv6 packets captured through the packet capture utility on an interface or all interfaces, as well as the packet capture configuration on the switch.

**Syntax** `show debug ipv6 packet [ buffer [ all | interface [<N> gigabitethernet rbridge-id/slot/port] ve vlan_id ] [ rx | tx ]`

<b>Parameters</b>	<b>buffer</b>	Specifies IPv6 packets.
	<b>all</b>	Specifies all interfaces.
	<b>interface</b>	Specifies an interface.
	<b>&lt;N&gt; gigabitethernet</b>	Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N> <b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.
	<b>rbridge-id</b>	Specifies an RBridge ID.
	<b>slot</b>	Specifies a valid slot number.
	<b>port</b>	Specifies a valid port number.
	<b>vevlan_id</b>	Specifies a virtual Ethernet interface.

**Draft comment:**  
add range

**Command Default** None

**Modes** Privileged EXEC mode

**Examples** To display the current PCAP configuration on the switch:

```
switch# show debug ipv6 packet
```

To display IPv6 packets captured on all interfaces:

```
switch# show debug ipv6 packet buffer all
```

To display IPv6 packets captured on a specific interface:

```
switch# show debug ipv6 packet buffer int te 54/0/1
```

**History**

Release version	Command history
5.0.0	This command was introduced.

show debug lacp

## show debug lacp

Displays the status of LACP debugging flags on the switch.

**Syntax** `show debug lacp`

**Modes** Privileged EXEC mode

## show debug lldp

Displays the LLDP debugging status on the switch.

**Syntax** **show debug lldp**

**Modes** Privileged EXEC mode

**Examples** To display the LLDP debugging status on the switch:

```
switch# show debug lldp  
  
LLDP debugging status:  
Interface te0/0      : Transmit Receive  Detail
```

show debug spanning-tree

## show debug spanning-tree

Displays the status of STP debugging flags on the switch.

**Syntax** `show debug spanning-tree`

**Modes** Privileged EXEC mode



## show debug udd

Shows UDLD debug status on the switch.

**Syntax** `show debug udd`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command displays the unidirectional link detection (UDLD) protocol debug status of the switch. The status reflects the bugging you set with the `debug udd` command.

**Related Commands** [protocol udd](#), [debug udd packet](#)

## show debug vrrp

Displays the status of VRRP debugging flags on the switch.

**Syntax** `show debug vrrp`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is for VRRP and VRRP-E. You can modify or redirect the displayed information by using the default Linux tokens (`|`, `>`).

**Examples** If you run this command and the debug parameter has already been set to debug all VRRP events, the following is displayed:

```
switch# show debug vrrp
VRRP event debugging is on
```

# show defaults threshold

Displays the default thresholds for environmental and alert values for Ethernet interfaces, login, Telnet security monitoring, and SFPs.

**Syntax** `show defaults threshold [ interface type Ethernet | security | sfp ]`

**Parameters** `interface type Ethernet`

Thresholds for all Ethernet interfaces.

`security`

Thresholds for login and Telnet monitoring.

`sfp`

Thresholds for the following SFP types:

1 GLR

1 GSR

10 GLR

10 GSR

10 GUSR

QSFP

**Modes** Privileged EXEC mode

**Usage Guidelines** These thresholds can be changed by means of the **threshold-monitor** command.

**Examples** The following example illustrates default interface thresholds:

```
switch# show defaults threshold interface type Ethernet
Type: GigE-Port
```

Area	High Threshold			Low Threshold			Buffer Value	Time Base
	Value	Above Action	Below Action	Value	Above Action	Below Action		
MTC	300	none	none	12	none	none	0	minute
CRCAAlign	300	none	none	12	none	none	0	minute
Symbol	5	none	none	0	none	none	0	minute
IFG	100	none	none	5	none	none	0	minute

MTC - Missing Termination Character

The following example illustrates security thresholds:

```
sw0# show defaults threshold security
```

Area	High Threshold			Low Threshold		Buffer Value	Time Base
	Value	Above	Below	Value	Below		
		Action	Action		Action		
Telnet	2	raslog	none	1	none	0	minute
Login	2	raslog	none	1	none	0	minute

**Related Commands** [show threshold monitor](#), [threshold-monitor cpu](#)

## show default-vlan

Displays the current default VLAN value.

**Syntax**    **show default-vlan**

**Modes**    Privileged EXEC mode

**Related  
Commands**    [show running reserved-vlan, reserved-vlan](#)

## show dpod

Displays Dynamic Ports on Demand (DPOD) licensing.

<b>Syntax</b>	<b>show dpod [ rbridge-id { rbridge-id   all } ]</b>
<b>Parameters</b>	<p><b>rbridge-id</b> Specifies an RBridge or all RBridges.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>all</b> Specifies all RBridges.</p>
<b>Modes</b>	Privileged Exec mode
<b>Usage Guidelines</b>	<p>This command has no effect on Brocade VDX 6710 and VDX 8770 switches. These switches do not support the Dynamic POD feature.</p> <p>In logical chassis cluster mode, remote license operations may be performed on any remote RBridge, from any RBridge in the logical chassis cluster.</p>
<b>Examples</b>	<pre>switch# show dpod rbridge-id: 15 48 10G ports are available in this switch 4 40G ports are available in this switch 10G Port Upgrade license is installed 40G Port Upgrade license is installed Dynamic POD method is in use 32 10G port assignments are provisioned for use in this switch: 24 10G port assignments are provisioned by the base switch license 8 10G port assignments are provisioned by the Port Upgrade license 1 10G port is assigned to installed licenses: 1 10G port is assigned to the base switch license 0 10G ports are assigned to the Port Upgrade license 10G ports assigned to the base switch license: 15/0/12 10G ports assigned to the Port Upgrade license: None 10G ports not assigned to a license: 15/0/1, 15/0/2, 15/0/3, 15/0/4, 15/0/5, 15/0/6, 15/0/7, 15/0/8, 15/0/9, 15/0/10 15/0/11, 15/0/13, 15/0/14, 15/0/15, 15/0/16, 15/0/17, 15/0/18, 15/0/19, 15/0/20, 15/0/21 15/0/22, 15/0/23, 15/0/24, 15/0/25, 15/0/26, 15/0/27, 15/0/28, 15/0/29, 15/0/30, 15/0/31 15/0/32, 15/0/33, 15/0/34, 15/0/35, 15/0/36, 15/0/37, 15/0/38, 15/0/39, 15/0/40, 15/0/41 15/0/42, 15/0/43, 15/0/44, 15/0/45, 15/0/46, 15/0/47, 15/0/48 31 10G license reservations are still available for use by unassigned ports 16 40G port assignments are provisioned for use in this switch: 0 40G port assignments are provisioned by the base switch license 2 40G port assignments are provisioned by the Port Upgrade license 1 40G port is assigned to installed licenses: 836 Network OS Command Reference 53-1003226-01 5 show dpod 0 40G ports are assigned to the base switch license 1 40G ports are assigned to the Port Upgrade license 40G ports assigned to the base switch license: None 40G ports assigned to the Port Upgrade license: 15/0/49 40G ports not assigned to a license: 15/0/50, 15/0/51, 15/0/52 3 40G license reservations are still available for use by unassigned ports</pre>

**Related  
Commands** [show running-config dpod](#)

## show diag burninerrshow

Displays the error messages that are stored in the nonvolatile storage on the slot during the POST and system verification processes.

- Syntax** `show diag burninerrshow [ rbridge-id rbridge-id ]`
- Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.
- Modes** Privileged EXEC mode
- Examples** The error messages are updated when there is a POST failure or a systemVerification failure. To display burn-in errors from the switch:

```
switch# show diag burninerrshow rbridge-id 1

errLog for slot M2
errLog is empty for slot M2
errLog for slot S1
errLog is empty for slot S1
errLog for slot S2
errLog is empty for slot S2
errLog for slot S3
errLog is empty for slot S3
errLog for slot L4
errLog is empty for slot L4
rbridgeId 1
```

- Related Commands** [diag burninerrclear](#), [diag clearerror](#), [show diag burninstatus](#)



## show diag burninerrshowerrLog

Displays the error log messages that are stored in the nonvolatile storage on the slot during the POST and system verification processes.

<b>Syntax</b>	<b>show diag burninerrshowerrLog [ slot <i>slot-id</i> ]</b>
<b>Parameters</b>	<b>slot <i>slot_id</i></b> Specifies the slot ID. This is mandatory for slot-based systems only.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	The error messages are updated when there is a POST failure or a systemVerification failure. To display the error log messages on the slot:

```
switch# show diag burninerrshowerrLog
Log for slot M1errLog is empty for slot M1errLog for slot
S12012/06/03-07:11:17:038992, [DIAG-5004], 0, M1, INFO, chassis, DIAG-MANUAL4 " S1
verify: Starting run Sun Jun 3 07:11:14 PDT 2012 "Err# 0140045
0300:101:000:001:0:20: , OID:0x430c0000, iobuf.c, line: 648, comp:insmod, ltime:
2012/06/03-07:2012/06/03-07:31:02:766063, [DIAG-5004], 0, M1, INFO, chassis, DIAG-
MANUAL4 " S1 verify: TESTED stat PASSED 5 cmds in 1 runs Therm 10 Vib 2 in 0 hr 18
min 53 sec (0:18:53)"Err# 0140045 0300:101:000:001:0:20: , OID:0x430c0000, iobuf.c,
lineerrLog for slot S22012/06/03-07:11:16:618653, [DIAG-5004], 0, M1, INFO, chassis,
DIAG-MANUAL4 " S2 verify: Starting run Sun Jun 3 07:11:13 PDT 2012 "Err# 0140045
0400:101:000:001:0:20: , OID:0x43100000, iobuf.c, line: 648, comp:insmod, ltime:
2012/06/03-07:2012/06/03-07:30:39:636631, [DIAG-5004], 0, M1, INFO, chassis, DIAG-
MANUAL4 " S2 verify: TESTED stat PASSED 5 cmds in 1 runs Therm 10 Vib 2 in 0 hr 18
min 58 sec (0:18:58)"Err# 0140045 0400:101:000:001:0:20: , OID:0x43100000, iobuf.c,
lineerrLog for slot S32012/06/03-07:11:12:838561, [DIAG-5004], 0, M1, INFO, chassis,
DIAG-MANUAL4 " S3 verify: Starting run Sun Jun 3 07:11:09 PDT 2012 "Err# 0140045
0500:101:000:001:0:20: , OID:0x43140000, iobuf.c, line: 648, comp:insmod, ltime:
2012/06/03-07:2012/06/03-07:30:35:017964, [DIAG-5004], 0, M1, INFO, chassis, DIAG-
MANUAL4 " S3 verify: TESTED stat PASSED 5 cmds in 1 runs Therm 10 Vib 2 in 0 hr 19
min 4 sec (0:19:4)"Err# 0140045 0500:101:000:001:0:20: , OID:0x43140000, iobuf.c,
line:errLog for slot L12012/06/03-07:11:18:678484, [DIAG-5004], 0, M1, INFO, chassis,
DIAG-MANUAL4 " L1 verify: Starting run Sun Jun 3 07:11:15 PDT 2012 "Err# 0140045
0700:101:000:001:0:20: , OID:0x431c0000, iobuf.c, line: 648, comp:insmod, ltime:
2012/06/03-07:2012/06/03-07:30:56:177298, [DIAG-5004], 0, M1, INFO, chassis, DIAG-
MANUAL4 " L1 verify: TESTED stat PASSED 8 cmds in 1 runs Therm 10 Vib 2 in 0 hr 18
min 44 sec (0:18:44)"Err# 0140045 0700:101:000:001:0:20: , OID:0x431c0000, iobuf.c,
lineerrLog for slot L22012/06/03-07:11:18:678576, [DIAG-5004], 0, M1, INFO, chassis,
DIAG-MANUAL4 " L2 verify: Starting run Sun Jun 3 07:11:15 PDT 2012 "Err# 0140045
0800:101:000:001:0:20: , OID:0x43200000, iobuf.c, line: 648, comp:insmod, ltime:
2012/06/03-07:2012/06/03-07:30:40:774116, [DIAG-5004], 0, M1, INFO, chassis, DIAG-
MANUAL4 " L2 verify: TESTED stat PASSED 8 cmds in 1 runs Therm 10 Vib 2 in 0 hr 18
min 41 sec (0:18:41)"Err# 0140045 0800:101:000:001:0:20: , OID:0x43200000, iobuf.c,
lineerrLog for slot L32012/06/03-07:11:17:097345, [DIAG-5004], 0, M1, INFO, chassis,
DIAG-MANUAL4 " L3 verify: Starting run Sun Jun 3 07:11:14 PDT 2012 "Err# 0140045
0900:101:000:001:0:20: , OID:0x43240000, iobuf.c, line: 648, comp:insmod, ltime:
2012/06/03-07:2012/06/03-07:19:29:651740, [DIAG-5046], 0, M1, ERROR, chassis,
L3:portLoopbackTest FAILED. Err -2, OID:0x43240000, diag mercury mm, line: 543,
comp:diag, ltime:2012/06/03-07:19:29:6516992012/06/03-07:29:52:276612, [DIAG-5004],
0, M1, INFO, chassis, DIAG-MANUAL4 " L3 verify: TESTED stat FAILED 8 cmds in 1 runs
Therm 10 Vib 2 in 0 hr 18 min 34 sec (0:18:34)"Err# 0140045 0900:101:000:001:0:20: ,
OID:0x43240000, iobuf.c, lineerrLog for slot L42012/06/03-07:11:17:385343,
[DIAG-5004], 0, M1, INFO, chassis, DIAG-MANUAL4 " L4 verify: Starting run Sun Jun 3
07:11:15 PDT 2012 "Err# 0140045 0A00:101:000:001:0:20: , OID:0x43280000, iobuf.c,
line: 648, comp:insmod, ltime:2012/06/03-07:2012/06/03-07:30:27:647391, [DIAG-5004],
0, M1, INFO, chassis, DIAG-MANUAL4 " L4 verify: TESTED stat PASSED 8 cmds in 1 runs
Therm 10 Vib 2 in 0 hr 18 min 55 sec (0:18:55)"Err# 0140045 0A00:101:000:001:0:20: ,
OID:0x43280000, iobuf.c, linerbridgeId 233M4_237_233#
```

**Related Commands**     [diag burninerrclear](#), [diag clearerror](#), [show diag burninstatus](#)

## show diag burninstatus

Displays the diagnostics burn-in status or system verification status stored in the nonvolatile storage memory in the switch.

- Syntax** `show diag burninstatus [ rbridge-id rbridge-id ]`
- Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples** To display the diagnostics burn-in status:

```
switch# show diag burninstatus
```

DiagID	State	Status	Run	Cmd	TotCmds	PID	Script	SlotID
1	COMPLETE_TESTED	PASS	1	8	8	23163	verify	L1
2	COMPLETE_TESTED	PASS	1	8	8	23311	verify	L2
6	COMPLETE_TESTED	PASS	1	5	5	23465	verify	S2
7	COMPLETE_TESTED	PASS	1	5	5	23618	verify	S3
8	COMPLETE_TESTED	PASS	1	5	5	23787	verify	S4
9	COMPLETE_TESTED	PASS	1	5	5	23976	verify	S5
10	COMPLETE_TESTED	PASS	1	5	5	24156	verify	S6
12	COMPLETE_TESTED	PASS	1	8	8	24388	verify	L6
14	COMPLETE_TESTED	PASS	1	8	8	24692	verify	L8

```
rbridgeId 1
```

**Related Commands** [diag burninerrclear](#), [diag clearerror](#), [show diag burninerrshow](#)

# show diag post results

Displays either the brief results or detailed information of the power-on self-test (POST) executed on the switch.

<b>Syntax</b>	<b>show diag post results { <i>brief</i>   <i>detailed</i> } [ <i>rbridge-id</i> <i>rbridge-id</i> ] [ <i>slot</i> <i>slot-id</i> ]</b>
<b>Parameters</b>	<p><b>brief   detailed</b> Specifies whether the POST passed or failed (brief) or displays detailed status with the register dump when a POST fails (detailed).</p> <p><b>rbridge-id</b> <i>rbridge-id</i> Specifies an RBridge ID.</p> <p><b>slot</b> <i>slot_id</i> Specifies the slot ID. This is mandatory for slot-based systems only.</p>

**Modes** Privileged EXEC mode

**Examples** To display brief POST results (whether the POST passed or failed):

```
switch# show diag post results brief slot L4
POST1:Slot L4 turboramtest PASSED (exit_status 0).
POST1:Slot L4 Script PASSED with exit_status of 0 Thu Jan 1 00:04:36 GMT 1970 took
(0:0:47)
POST2:Slot L4 portloopbacktest PASSED (exit_status 0).
POST2:Slot L4 prbstest PASSED (exit_status 0).
POST2:Slot L4 Script PASSED with exit_status of 0 Thu Jan 1 00:05:52 GMT 1970 took
(0:1:15)
rbridgeId 1
switch# show diag post results detailed slot S1
POST1:Slot S1 Started running Thu Jan 1 00:02:46 GMT 1970
POST1:Slot S1 Running diagclearerror
POST1:Slot S1 Running diagsetup
POST1:Slot S1 Test #1 - Running turboramtest
Running turboramtest...
:
<..cut..>
:
POST1:Slot S1 ***** Slot S1 POST Summary *****
POST1:Slot S1 Completed 1 Diagnostic test:
POST1:Slot S1 Script PASSED with exit_status of 0 Thu Jan 1 00:02:53 GMT 1970 took
(0:0:7)
POST2:Slot S1 Started running Thu Jan 1 00:02:58 GMT 1970
POST2:Slot S1 Running diagclearerror
POST2:Slot S1 Test #1 - Running portloopbacktest
Running portloopbacktest...
:
<..cut..>
:
POST2: ***** Slot S1 POST Summary *****
POST2:Slot S1 Completed 2 Diagnostic test:
POST2:Slot S1 Script PASSED with exit_status of 0 Thu Jan 1 00:03:35 GMT 1970 took
(0:0:37)
rbridgeId 1
```

**Related Commands** [diag post enable](#)

## show diag setcycle

Displays the current system verification test parameters.

**Syntax** `show diag setcycle [ rbridge-id rbridge-id ]`

**Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples** To display current values used in system verification:

```
switch# show diag setcycle

CURRENT - KEYWORD           : DEFAULT
1       - number_of_runs    : 1
2       - min_lb_mode       : 2
1       - tbr_passes        : 1
16      - plb_nframes       : 16
1       - pled_passes       : 1
rbridgeId 1
```

**Related  
Commands** [diag setcycle](#)

# show diag status

Displays the currently diagnostic test status on one or all slots in the system.

**Syntax** `show diag status [ rbridge-id rbridge-id ] [ slot slot-id ]`

**Command Default** If an RBridge ID is not specified, diagnostic tests for all blades in the system are displayed.

**Parameters** `rbridge-id rbridge-id`

Specifies an RBridge ID.

`slot slot_id`

Specifies the slot ID. This is mandatory for slot-based systems only.

**Modes** Privileged EXEC mode

**Examples** To automatically display current diagnostic status in the console:

```
switch# show diag status rbridge-id 1
Slot M2 [2]: DIAG runs 'NONE'
Slot S1 [3]: DIAG runs 'NONE'
Slot S2 [4]: DIAG runs 'NONE'
Slot S3 [5]: DIAG runs 'NONE'
Slot L4 [10]: DIAG runs 'NONE'
rbridgeId 1
```

To display the diagnostic status when POST is running on the LC or SFM using the slot ID:

```
switch# show diag status rbridge-id 233 slot L1
Slot L1 [7]:DIAG runs `turboramtest'
rbridgeId 233
switch# show diag status slot L1
Slot L1 [7]: DIAG runs `turboramtest'
rbridgeID 233
```

**Related Commands** [show diag post results](#)

## show dot1x

Displays the overall state of dot1x on the system.

**Syntax** **show dot1x**

**Modes** Privileged EXEC mode

**Examples** To display the state of dot1x on the system:

```
switch# show dot1x

802.1X Port-Based Authentication Enabled
PAE Capability:           Authenticator Only
Protocol Version:        2
Auth Server:             RADIUS
RADIUS Configuration
-----
Position:                1
Server Address:          172.21.162.51
Port:                    1812
Secret:                  sharedsecret
Position:                2
Server Address:          10.32.154.113
Port:                    1812
Secret:                  sharedsecret
```

## show dot1x all

Displays detailed dot1x information for all of the ports.

**Syntax** **show dot1x all**

**Modes** Privileged EXEC mode

**Examples** To display detailed dot1x information for all of the ports:

```
switch# show dot1x all

802.1X Port-Based Authentication Enabled
PAE Capability:          Authenticator Only
Protocol Version:       2
Auth Server:            RADIUS
802.1X info for interface te0/16
-----
Port Control:           Auto
Port Auth Status:       Unauthorized
Protocol Version:       2
ReAuthentication:       Disabled
Auth Fail Max Attempts: 0
ReAuth Max:             2
Tx Period:              30 seconds
Quiet Period:           60 seconds
Supplicant Timeout:     30 seconds
Server Timeout:         30 seconds
Re-Auth Interval:       3600 seconds
PAE State:               Connected
BE State:                Invalid
Supplicant Name:         --
Supplicant Address:     0000.0000.0000
Current Id:              1
Id From Server:         0
```

## show dot1x diagnostics interface

Displays all diagnostics information for the authenticator associated with a port.

- Syntax** `show dot1x diagnostics interface [ <N>gigabitethernet rbridge-id/slot/port ]`
- Parameters** `<N>gigabitethernet`  
Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.
- `rbridge-id`  
Specifies an RBridge ID.
- `slot`  
Specifies a valid slot number.
- `port`  
Specifies a valid port number.
- Modes** Privileged EXEC mode
- Examples** To display all diagnostics information for the authenticator associated with a port:

```
switch# show dot1x diagnostics interface tengigabitethernet 5/0/16

802.1X Diagnostics for interface te5/0/16
authEnterConnecting: 0
authEaplogoffWhileConnecting: 1
authEnterAuthenticating: 0
authSuccessWhileAuthenticating: 0
authTimeoutWhileAuthenticating: 0
authFailWhileAuthenticating: 0
authEapstartWhileAuthenticating: 0
authEaplogoggWhileAuthenticating: 0
authReauthsWhileAuthenticated: 0
authEapstartWhileAuthenticated: 0
authEaplogoffWhileAuthenticated: 0
BackendResponses: 0
BackendAccessChallenges: 0
BackendOtherrequestToSupplicant: 0
BackendAuthSuccess: 0
BackendAuthFails: 0
```



## show dot1x interface

Displays the state of a specified interface.

**Syntax** `show dot1x interface [ <N>gigabitethernet rbridge-id/slot/port ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** The `gigabitethernet rbridge-id/slot/port` parameter is used only on Brocade VDX 6710, Brocade VDX 8770-4, and Brocade VDX 8770-8 switches.

**Examples** To display the state of the 10-gigabit Ethernet interface 0/16:

```
switch# show dot1x interface tengigabitethernet 5/0/16

Dot1x Global Status:      Enabled
802.1X info for interface te5/0/16
-----
Port Control:             Auto
Port Auth Status:         Unauthorized
Protocol Version:         2
ReAuthentication:         Disabled
Auth Fail Max Attempts:   0
ReAuth Max:               2
Tx Period:                 30 seconds
Quiet Period:             60 seconds
Supplicant Timeout:       30 seconds
Server Timeout:           30 seconds
Re-Auth Interval:         3600 seconds
PAE State:                 Connected
BE State:                 Invalid
Supplicant Name:          --
Supplicant Address:       0000.0000.0000
Current Id:                1
Id From Server:           0
```

## show dot1x session-info interface

Displays all statistical information of an established session.

**Syntax** `show dot1x session-info interface [ <N>gigabitethernet rbridge-id/slot/port ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples** To display all statistical information of the established session:

```
switch# show dot1x session-info interface tengigabitethernet 0/16

802.1X Session info for te0/16
-----
User Name:                testuser
Session Time:             3 mins 34 secs
Terminate Cause:         Not terminated yet
```

## show dot1x statistics interface

Displays the statistics of a specified interface.

**Syntax** `show dot1x statistics interface [ <N>gigabitethernet rbridge-id/slot/port ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** The `gigabitethernet rbridge-id/slot/port` parameter is used only on Brocade VDX 6710, Brocade VDX 8770-4, and Brocade VDX 8770-8 switches.

**Examples** To display the statistics for the 10-gigabit Ethernet interface 22/0/16:

```
switch# show dot1x statistics interface tengigabitethernet 22/0/16

802.1X statistics for interface te22/0/16
EAPOL Frames Rx: 0 - EAPOL Frames Tx: 0
EAPOL Start Frames Rx: 0 - EAPOL Logoff Frames Rx: 0
EAP Rsp/Id Frames Rx: 2 - EAP Response Frames Rx: 10
EAP Req/Id Frames Tx: 35 - EAP Request Frames Tx: 0
Invalid EAPOL Frames Rx: 0 - EAP Length Error Frames Rx: 0
EAPOL Last Frame Version Rx: 0 - EAPOL Last Frame Src: 0000.0000.0000
```

## show dpod

Displays Dynamic Ports on Demand (POD) license information.

**Syntax** `show dpod [ rbridge-id { rbridge-id | all } ]`

**Command Default** This command is executed on the local switch.

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** The Dynamic POD feature is not supported on Brocade VDX 8770 switches.

**Examples** To display Dynamic POD assignment information:

```
switch# show dpod
rbridge-id: 1
24 ports are available in this switch
1 POD license is installed
Dynamic POD method is in use
24 port assignments are provisioned for use in this switch:
16 port assignments are provisioned by the base switch license
8 port assignments are provisioned by the first POD license
* 0 more assignments are added if the second POD license is installed
21 ports are assigned to installed licenses:
16 ports are assigned to the base switch license
5 ports are assigned to the first POD license
Ports assigned to the base switch license:
Te 1/0/1, Te 1/0/10, Te 1/0/11, Te 1/0/12, Te 1/0/13, Te 1/0/14, Te 1/0/15,
Te 1/0/16, Te 1/0/17, Te 1/0/18, Te 1/0/19, Te 1/0/20, Te 1/0/21, Te 1/0/22, Te
1/0/23, Te 1/0/24
Ports assigned to the first POD license:
Te 1/0/5, Te 1/0/6, Te 1/0/7, Te 1/0/8, Te 1/0/9
Ports assigned to the second POD license:
None
Ports not assigned to a license:
Te 1/0/2, Te 1/0/3, Te 1/0/4
3 license reservations are still available for use by unassigned ports
```

**Related Commands** [dpod](#), [show running-config dpod](#)

## show edge-loop-detection detail

Displays ELD detailed information for the entire node.

**Syntax** `show edge-loop-detection detail [ rbridge-id { rbridge-id | all } ]`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

ELD configuration mode

**Usage Guidelines** This functionality detects Layer 2 loops only.

If no rbridge ID is specified, ELD data on the particular node is displayed.

If an rbridge ID is specified, ELD data for the node with that particular rbridge-id is displayed.

If all rbridge IDs are specified, ELD data from all the nodes in the cluster is displayed.

### Examples

```
switch(conf-if-te-119/0/1)# do show edge-loop-detection detail
Number of edge-loop-detection instances enabled: 1
Data for Rbridge-id: 119
Total_instances: 1
Eld-mac: 03:05:33:65:1b:ec
Data for interface: te0/1
Eld-instance no. (enabled for VLANs): 1
Priority: 128   If_status: 1
Shutdown-vlan: 0   Vlag-master-id: 0   Age-left: 31913 mins
Port-type : 3   pvid_frame_type: 2   Brcd-agg-type: 0
Eld stats:      Tx      Rx
                42      0
Enabled for Vlan-id: 10
Send-untagged: 0
time-rxlimit : 0
Vlan stats:     Tx      Rx
                42      0
switch(conf-if-te-119/0/1)#
```

**Related Commands** [edge-loop-detection vlan](#), [hello-interval](#), [pdu-rx-limit](#), [protocol edge-loop-detection](#), [shutdown-time](#)

## show edge-loop-detection globals

Displays ELD global configuration values for status, disabled ports, and resource.

<b>Syntax</b>	<b>show edge-loop-detection globals</b>
<b>Modes</b>	Privileged EXEC mode ELD configuration mode
<b>Usage Guidelines</b>	The command output displays the PDU receive limit, shutdown time, and hello time. This command detects Layer 2 loops only.
<b>Examples</b>	To view the ELD global configuration values:  <pre>switch# show edge-loop-detection globals</pre> Edge-loop-detection global configuration values are as below: PDU receive limit (packets): 1 Shutdown-time (minutes): 0 Hello-time (msec): 1000
<b>Related Commands</b>	<a href="#">edge-loop-detection vlan</a> , <a href="#">hello-interval</a> , <a href="#">pdu-rx-limit</a> , <a href="#">protocol edge-loop-detection</a> , <a href="#">shutdown-time</a>

## show edge-loop-detection interface

Displays ELD configuration settings and status for a specific interface and to view the number of packets received and transmitted.

**Syntax** `show edge-loop-detection interface interface-type interface-id`

`show edge-loop-detection interface { <N>gigabitethernet rbridge-id/slot/port | port-channel number }`

**Parameters** *interface-type*

Specifies an interface type.

*interface-id*

Specifies an interface ID.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

*rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**port-channel number**

Specifies the interface is a port-channel. Valid values range from 1 through 6144.

**Modes** Privileged EXEC mode

ELD configuration mode

**Usage Guidelines** This functionality detects Layer 2 loops only.

**Examples** To view the ELD status for a specific interface:

```
switch(conf-if-te-7/0/5)# do show edge-loop-detection interface tengigabitethernet
7/0/5
```

```
Number of eld instances: 1
Enabled on VLANs:      100
Priority:               128
Interface status:     UP
Auto enable in:       Never
Packet Statistics:
```

```
vlan      sent      rcvd
100       100         0
```

```
switch(conf-if-te-7/0/5)# do show edge-loop-detection rbridge-id 7
```

```
Number of edge-loop-detection instances enabled: 1
Interface: 7/0/5
```

```
-----
Enabled on VLANs: 100
Priority:         128
Interface status: UP
Auto enable in:  Never
```

Show commands

**Related Commands** [clear edge-loop-detection](#), [edge-loop-detection port-priority](#), [edge-loop-detection vlan](#), [protocol edge-loop-detection](#), [shutdown-time](#)



## show edge-loop-detection rbridge-id

Displays ELD status information for a specific RBridge, including the ports that ELD has disabled..

**Syntax** `show edge-loop-detection rbridge-id { rbridge-id | all }`

**Parameters** `rbridge-id`

Specifies an RBridge or all RBridges.

*rbridge-id*

Specifies an RBridge ID.

all

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** This functionality detects Layer 2 loops only.

For each interface on which ELD is enabled, this command shows the enabled VLANs, the ELD port priority, the up/down status of the interface, and time to the next automatic port re-enable. The command includes display of disabled interfaces.

If a single rbridge ID is specified, ELD data for the node with that particular rbridge-id is displayed.

If all rbridges are specified, ELD data from all the nodes in the cluster is displayed.

**Examples** To view the ELD status:

```
switch# show edge-loop-detection rbridge-id 7
Number of edge-loop-detection instances enabled: 1
Interface: 7/0/5
-----
Enabled on VLANs: 100
Priority:         128
Interface status: UP
Auto enable in:  Never
```

**Related Commands** [clear edge-loop-detection](#), [edge-loop-detection port-priority](#), [edge-loop-detection vlan](#), [shutdown-time](#)

## show environment fan

Displays fan status information.

**Syntax** `show environment fan [ rbridge-id { rbridge-id | all } ]`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Command Output** The command displays the following information:

Output field	Description
OK	Fan is functioning correctly at the displayed speed (RPM).
absent	Fan is not present.
below minimum	Fan is present but rotating too slowly or stopped.
above maximum	Fan is rotating too quickly.
unknown	Unknown fan unit installed.
faulty	Fan has exceeded hardware tolerance and has stopped. In this case, the last known fan speed is displayed.
Airflow direction	Port side intake or Port side exhaust. This value is not applicable to modular chassis.
speed	Fan RPM.

**Examples** To display the fan status information on a Brocade VDX 8770-4:

```
switch# show environment fan
Fan 1 is Ok, speed is 2057 RPM
Fan 2 is Ok, speed is 2009 RPM
```

**Related Commands** [show environment history](#), [show environment power](#), [show environment sensor](#), [show environment temp](#)

# show environment history

Displays the field-replaceable unit (FRU) history log.

**Syntax** `show environment history [ rbridge-id { rbridge-id | all } ]`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

*rbridge-id*

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** The history log records insertion and removal events for field-replaceable units (FRUs), such as blades, power supplies, fans, and world wide name (WWN) or chassis ID (CID) cards. The type of FRU supported depends on the hardware platform.

**Command Output** The `show environment history` command displays the following information:

Output field	Description
Object type	On standalone platforms: FAN, POWER SUPPLY, WWN (WWN card), or UNKNOWN.  On modular platforms: CHASSIS, CID (chassis ID card), FAN, POWER SUPPLY, SW BLADE (port blade), MM[1–2] (management module), SFM (switch fabric module), LC[1–8] (line card) or UNKNOWN.
Object number	Displays the slot number for blades. Displays the unit number for all other object types.
Event type	Displays Inserted, Removed, or Invalid.
Time of the event	Displays the date in the following format: Day Month dd hh:mm:ss yyyy.
Factory Part Number	Displays the part number (xx-yyyyyy-zz) or Not available.
Factory Serial Number	Displays the FRU serial number (xxxxxxxxxxx) or Not available.

**Examples** To display the FRU history on a Brocade VDX 8770-4

```
switch# show environment history

CID Unit 2                Inserted at Tue Sep  6 22:40:27 2011
Factory Part Number:      40-1000592-01
Factory Serial Number:    BVW0311G00K
SFM Slot 3                Inserted at Tue Sep  6 22:41:47 2011
Factory Part Number:      60-1002180-05
Factory Serial Number:    BVU0321G00N
LC Slot 9                 Inserted at Tue Sep  6 22:41:48 2011
Factory Part Number:      60-1002181-07
Factory Serial Number:    BVV0326G019
LC Slot 10                Inserted at Tue Sep  6 22:41:50 2011
Factory Part Number:      40-100522-02
Factory Serial Number:    BSX0312G01F
MM Slot 1                 Inserted at Tue Sep  6 22:41:50 2011
Factory Part Number:      60-1002179-07
Factory Serial Number:    BVT0329G00B
SFM Slot 4                Inserted at Wed Sep  7 00:01:44 2011
Factory Part Number:      60-1002180-06
Factory Serial Number:    BVU0329G00B
LC Slot 10                Removed at Mon Sep 12 19:04:58 2011
Factory Part Number:      40-100522-02
Factory Serial Number:    BSX0312G01F
LC Slot 10                Inserted at Mon Sep 12 19:12:21 2011
Factory Part Number:      40-100522-02
Factory Serial Number:    BSX0312G01F
LC Slot 1                 Inserted at Mon Sep 12 19:19:52 2011
Factory Part Number:      40-100522-02
Factory Serial Number:    BSX0312G00B
(Output truncated)
```

**Related Commands** [show environment fan](#), [show environment power](#), [show environment sensor](#), [show environment temp](#)

# show environment power

Displays the type and current status of the switch power supply.

**Syntax** `show environment power [ rbridge-id { rbridge-id | all } ]`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Command Output** The `show environment power` command displays the following information:

Output field	Description
OK	Power supply is functioning correctly.
absent	Power supply is not present.
unknown	Unknown power supply unit is installed.
predicting failure	Power supply is present but predicting failure. Replace the power supply as soon as possible.
faulty	Power supply is present but faulty (no power cable, power switch turned off, fuse blown, or other internal error).
Airflow	Direction of fan air flow (not applicable to modular chassis).

**Examples** To display the power supply status:

```
switch# show environment power

Power Supply #1 is OK
LPCS      F@ 11/01/18 type: AC V165.2 3000W
Power Supply #2 is OK
LPCS      F@ 11/01/18 type: AC V165.2 3000W
Power Supply #3 is absent
Power Supply #4 is absent
Power Supply #1 is faulty
```

**Related Commands** [show environment fan](#), [show environment history](#), [show environment sensor](#), [show environment temp](#)

## show environment sensor

Displays the environment sensor status.

**Syntax** `show environment sensor [ rbridge-id { rbridge-id | all } ]`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** The command output displays the current temperature, fan, and power supply status readings from sensors located on the switch. Refer to the **show environment power** command for an explanation of the power supply status values.

**Examples** To display the sensor readings on the switch:

```
switch# show environment sensor

sensor 1: (Temperature ) is Ok, value is 36 C
sensor 2: (Temperature ) is Ok, value is 40 C
sensor 3: (Temperature ) is Ok, value is 32 C
sensor 4: (Fan          ) is Absent
sensor 5: (Fan          ) is Ok, speed is 7345 RPM
sensor 6: (Power Supply) is Absent
sensor 7: (Power Supply) is Ok
```

**Related Commands** [show environment fan](#), [show environment history](#), [show environment power](#), [show environment temp](#)

# show environment temp

Displays environment temperature.

**Syntax** `show environment temp [ rbridge-id { rbridge-id | all } ]`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Command Output** The `show environment temp` command displays the following information:

Output field	Description
Sensor ID	
Slot number	(On modular chassis only)
Sensor state	
Temperature	Displayed in both Centigrade and Fahrenheit.

**Examples** To display the temperature readings on a Brocade VDX switch:

```
switch# show environment temp

Sensor  State          Centigrade    Fahrenheit
ID
=====
 1     Ok             36            96
 2     Ok             40            104
 3     Ok             32            89
```

**Related Commands** [show environment fan](#), [show environment history](#), [show environment power](#), [show environment sensor](#)

## show fabric all

Displays the Brocade VCS Fabric membership information.

<b>Syntax</b>	<b>show fabric all</b>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	If the switch is initializing or is disabled, the message "Local Switch disabled or fabric is re-building" is displayed. If the fabric is reconfiguring, some or all switches may not be displayed.
<b>Command Output</b>	The <b>show fabric all</b> command displays the following information:

Output field	Description
VCS ID	VCS ID of the switch
Config Mode VCS mode of the switch.	For fabric cluster mode, "Local-Only" is displayed.
Rbridge-id	The RBridge ID of the switch.
WWN	The switch World Wide Name.
IP Address	The switch Ethernet IP address.
Name	The switch symbolic name. An arrow (>) indicates the principal switch. An asterisk (*) indicates the switch on which the command is entered.

### Examples

```
switch# show fabric all
Config Mode: Local-Only
Rbridge-id  WWN                               IP Address      Name
-----
1           10:00:00:05:1E:CD:44:6A  10.17.87.144    "RB1"
2           10:00:00:05:1E:CD:42:6A  10.17.87.145    "RB2"*
3           10:00:00:05:1E:CD:55:6A  10.17.87.155    "RB3"
4           10:00:00:05:1E:CD:42:EA  10.17.87.156    "RB4"
5           10:00:00:05:1E:CD:52:6A  10.17.87.157    "RB5"
6           10:00:00:05:1E:CD:53:6A  10.17.87.158    "RB6"
10          10:00:00:05:33:13:6A:BE  10.17.87.169    "RB10"
11          10:00:00:05:1E:CD:38:6A  10.17.86.240    "RB11"
12          10:00:00:05:1E:CD:3F:EA  10.17.86.241    >"RB12-a"
The Fabric has 9 Rbridge(s)
```

The angle bracket (>), as shown with RBridge ID 12-a, indicates the principal switch. The asterisk (\*) indicates the switch on which the command was entered.

**Related Commands**    [show vcs](#)



## show fabric ecmp group

Displays the ECMP group information for the fabric RBridge IDs.

**Syntax** **show fabric ecmp group** [ **dest-rbridge number** | **src-rbridge number**]

**Parameters** **dest-rbridge number**

Restricts the display output to the designated destination RBridge ID.

**src-rbridge number**

Restricts the display output to the designated source RBridge ID.

**Modes** Privileged EXEC mode

**Examples** Typical command output for the **show fabric ecmp group** command.

```
switch# show fabric ecmp group

Source RBridge-Id: 1
Total Path Count: 1

ECMP Dst    Out    Out    Nbr    Nbr
Grp  RB-ID  Index  Interface  Index  Interface  Hops BW    Trunk
-----
1    2      17     Te 1/8/18  25     Te 22/0/18  2   20G   Yes

      Source
      Range
      -----
      1/8/1-48
      1/6/1-12

Source RBridge-Id: 1
Total Path Count: 1

ECMP Dst    Out    Out    Nbr    Nbr
Grp  RB-ID  Index  Interface  Index  Interface  Hops BW    Trunk
-----
1    3      17     Te 1/8/18  25     Te 22/0/18  3   20G   Yes

      Source
      Range
      -----
      1/8/1-48
      1/6/1-12

Source RBridge-Id: 1
Total Path Count: 1

ECMP Dst    Out    Out    Nbr    Nbr
Grp  RB-ID  Index  Interface  Index  Interface  Hops BW    Trunk
-----
1    22     17     Te 1/8/18  25     Te 22/0/18  1   20G   Yes

      Source
      Range
      -----
      1/8/1-48
      1/6/1-12

Source RBridge-Id: 1
Total Path Count: 1

ECMP Dst    Out    Out    Nbr    Nbr
Grp  RB-ID  Index  Interface  Index  Interface  Hops BW    Trunk
-----
1    160    17     Te 1/8/18  25     Te 22/0/18  2   20G   Yes

      Source
      Range
      -----
      1/8/1-48
      1/6/1-12
```

**History**

Release version	Command history
5.0.0	This command was introduced.

# show fabric ecmp load-balance

Displays the current configuration of hash field selection and hash swap.

**Syntax** `show fabric ecmp load-balance [ rbridge-id rbridge-id ]`

**Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Usage Guidelines** The **show fabric** family of commands display neighbor and local port information when connected to a down-level RBridge.

This command displays ISL details, including the breakout index of the interface if breakout mode is configured on the source or neighbor interface.

**Examples** Some typical outputs of this command:

```
switch# show fabric ecmp load-balance

Fabric Ecmp Load Balance Information
-----
Rbridge-Id           : 2
Ecmp-Load-Balance Flavor : Destination MAC address and VID based load balancing
Ecmp-Load-Balance HashSwap : 0x4
switch# show fabric ecmp load-balance rbridge-id 2

Fabric Ecmp Load Balance Information
-----
Rbridge-Id           : 2
Ecmp-Load-Balance Flavor : Destination MAC address and VID based load balancing
Ecmp-Load-Balance HashSwap : 0x4
```

**Related Commands** [show fabric isl](#), [show fabric trunk](#)

## show fabric isl

Displays Inter-Switch Link (ISL) information in the fabric.

**Syntax** `show fabric isl [ rbridge-id | all ]`

**Parameters** *rbridge-id*

Specifies an RBridge ID.

**all**

Specifies all switches in the fabric.

**Modes** Privileged EXEC mode

**Command Output** The `show fabric isl` command displays the following information:

Output field	Description
Rbridge-id	RBridge-id of the switch. Valid values range from 1 through 239.
#ISLs	Number of ISLs connected.
Src Index	Source index of the local RBridge.
Src Interface	Source interface of the local RBridge in the format "local-rbridge-id/slot/port". If the ISL is not up, then "??/?" displays for a Te interface and "-/-" displays for an Fi interface.
Nbr Index	Neighbor Index of the ISL connected from local port. If the link is segmented and the NBR rbridge details are unavailable, "?" displays in this field.
Nbr Interface	Neighbor interface of the ISL connected from the local RBridge in the format "nbr-rbridgeid/slot/port". If the ISL is not completely up, this field will be displayed as "??/?".
Nbr-WWN	Neighbor WWN of the switch. If the ISL is segmented and the neighbor RBridge details are not available, then "?:?:?:?:?:?:?:?:?:?" displays in this field.
BW	Bandwidth of the traffic.
Trunk	Displays "Yes" if trunk is enabled in the ISL.
Nbr-Name	Neighbor switch name.

**Examples** This example displays Inter-Switch Link (ISL) information in the fabric.

```
switch# show fabric isl

Rbridge-id: 76 #ISLs: 2
Src      Src      Nbr      Nbr
Index   Interface  Index   Interface      Nbr-WWN      BW      Trunk
Nbr-Name
-----
 2      Te 1/0/2      56      Te 21/0/56     10:00:00:05:33:13:5F:BE 60G     Yes
"Edget12r1_1_21"
 7      Te 1/0/7      55      Te 22/0/55     10:00:00:05:33:40:31:93 40G     Yes
"Edget12r12_22"
```

This example displays ISL information and includes a segmented link.

```
switch# show fabric isl
Rbridge-id: 2 #ISLs: 4
Src      Src      Nbr      Nbr
Index   Interface  Index   Interface  Nbr-WWN          BW  Trunk  Nbr-
Name
-----
1       Te 2/0/1    1       Te 3/0/1    10:00:00:05:1E:CD:7A:7A  10G  Yes
"sw0"
2       Te 2/0/2    ?       Te ???/?    ????:???:???:???:???:?? (segmented -
incompatible)
26      Te 2/0/26   56      Te 25/0/56  10:00:00:05:33:40:2F:C9  60G  Yes
"Edget12r31_25"
34      Te 2/0/34   58      Te 26/0/58  10:00:00:05:33:41:1E:B7  40G  Yes
"Edget12r32_26"
```

This example displays ISL information and includes an Fi port.

```
switch# show fabric isl
Rbridge-id: 66 #ISLs: 5
Src      Src      Nbr      Nbr
Index   Interface  Index   Interface  Nbr-WWN          BW  Trunk
Nbr-Name
-----
5       Te 66/0/5   1       Te 65/0/1   10:00:00:05:33:5F:EA:A4  10G  Yes
"sw0"
15      Te 66/0/15  2       Te 65/0/2   10:00:00:05:33:5F:EA:A4  10G  Yes
"sw0"
25      Te 66/0/25  3       Te 65/0/3   10:00:00:05:33:5F:EA:A4  10G  Yes
"sw0"
35      Te 66/0/35  4       Te 65/0/4   10:00:00:05:33:5F:EA:A4  10G  Yes
"sw0"
124     Fi 66/0/4   7       Fi 2/-/-    50:00:51:E4:44:40:0E:04  32G  Yes
"fcr_fd_2"
```

This ISL output example includes breakout information for switches on which breakout mode is configured.

```
switch# show fabric isl
Rbridge-id: 66 #ISLs: 5
Src Src Nbr Nbr
Index Interface Index Interface  Nbr-WWN          BW Trunk Nbr-Name
-----
5   Te 66/0/5:1  1   Te 65/0/1    10:00:00:05:33:5F:EA:A4  10G Yes "sw0"
15  Te 66/0/15  2   Te 65/0/2:1  10:00:00:05:33:5F:EA:A4  10G Yes "sw0"
25  Te 66/0/25  3   Te 65/0/3    10:00:00:05:33:5F:EA:A4  10G Yes "sw0"
35  Te 66/0/35:1 4   Te 65/0/4:4  10:00:00:05:33:5F:EA:A4  10G Yes "sw0"
124 Fi 66/0/4    7   Fi 2/-/-     50:00:51:E4:44:40:0E:04  32G Yes "fcr_fd_2"
```

This example displays ISL details and includes the breakout index of the interface (for a non-trunked port) in normal mode.

```
switch# sh fab isl
Rbridge-id: 1 #ISLs: 4
Src      Src      Nbr      Nbr
Index   Interface  Index   Interface  Nbr-WWN          BW  Trunk
Nbr-Name
-----
30      Te 1/0/27   1       Te 48/0/49:1  XX:XX:XX:XX:XX:XX:XX:XX  10G  Yes
"sw0"
32      Te 1/0/29   2       Te 48/0/49:2  XX:XX:XX:XX:XX:XX:XX:XX  10G  Yes
"sw0"
34      Te 1/0/31   3       Te 48/0/49:3  XX:XX:XX:XX:XX:XX:XX:XX  10G  Yes
"sw0"
36      Te 1/0/33   4       Te 48/0/49:4  XX:XX:XX:XX:XX:XX:XX:XX  10G  Yes
"sw0"
```

This example displays ISL details and includes the breakout index of the interface (for a trunked port) in normal mode.

```
switch# sh fab isl
Rbridge-id: 1 #ISLs: 1
  Src      Src      Nbr      Nbr
  Index    Interface  Index    Interface      Nbr-WWN          BW  Trunk
  Nbr-Name
-----
  5      Te 1/0/50:1      1      Te 48/0/49:1      10:00:00:05:33:E5:C1:8F      40G  Yes
"sw0"
```

This example displays ISL details in mixed mode, but no breakout index is displayed for switches running Network OS versions earlier than v4.1.0.

Output shown is for Network OS 4.0.0 for a non-trunked port in mixed mode.

```
sw0# sh fab isl
Rbridge-id: 1 #ISLs: 4
  Src      Src      Nbr      Nbr
  Index    Interface  Index    Interface      Nbr-WWN          BW  Trunk
  Nbr-Name
-----
  30      Te 1/0/27      1      Te 48/0/49      XX:XX:XX:XX:XX:XX:XX:XX      10G  Yes
"sw0"
  32      Te 1/0/29      1      Te 48/0/49      XX:XX:XX:XX:XX:XX:XX:XX      10G  Yes
"sw0"
  34      Te 1/0/31      1      Te 48/0/49      XX:XX:XX:XX:XX:XX:XX:XX      10G  Yes
"sw0"
  36      Te 1/0/33      1      Te 48/0/49      XX:XX:XX:XX:XX:XX:XX:XX      10G  Yes
"sw0"
```

Output shown is for Network OS 4.0.0 for a trunked port in mixed mode.

```
sw0# sh fab isl
Rbridge-id: 1 #ISLs: 1
  Src      Src      Nbr      Nbr
  Index    Interface  Index    Interface      Nbr-WWN          BW  Trunk
  Nbr-Name
-----
  2      Te 1/0/50      1      Te 48/0/49      10:00:00:05:33:E5:C1:8F      40G  Yes
"sw0"
```

Output shown is for Network OS 4.1.0 for a non-trunked port in mixed mode.

```
sw0# sh fab isl
Rbridge-id: 48 #ISLs: 4
  Src      Src      Nbr      Nbr
  Index    Interface  Index    Interface      Nbr-WWN          BW
  Trunk  Nbr-Name
-----
  1      Te 48/0/49:1      30      Te 1/0/25      XX:XX:XX:XX:XX:XX:XX:XX      10G
Yes  "sw0"
  1      Te 48/0/49:2      32      Te 1/0/27      XX:XX:XX:XX:XX:XX:XX:XX      10G
Yes  "sw0"
  1      Te 48/0/49:3      34      Te 1/0/29      XX:XX:XX:XX:XX:XX:XX:XX      10G
Yes  "sw0"
  1      Te 48/0/49:4      36      Te 1/0/31      XX:XX:XX:XX:XX:XX:XX:XX      10G
Yes  "sw0"
```

Output shown is for Network OS 4.1.0 for a trunked port in mixed mode.

```
sw0# sh fab isl
Rbridge-id: 1 #ISLs: 1
  Src      Src      Nbr      Nbr
Index  Interface  Index  Interface  Nbr-WWN      BW
Trunk  Nbr-Name
-----
30     Te 1/0/50:1    1     Te 48/0/49    10:00:00:05:33:E5:C1:8F  40G
Yes    "sw0"
```

**Related Commands** [fabric isl enable](#), [show diag burninstatus](#), [show fabric isl](#), [show fabric trunk](#)

## show fabric islports

Displays information for all Inter-Switch Link (ISL) ports in the switch.

- Syntax** `show fabric islports [ rbridge-id rbridge-id ] [ all ]`
- Parameters** `rbridge-id rbridge-id`  
 Specifies the RBridge ID on which the ISL ports are displayed.
- `all`  
 Specifies that information for all RBridges in the fabric are displayed.
- Modes** Privileged EXEC mode
- Usage Guidelines** If this command is executed without operands, it displays the ISL information of the local RBridge.
- The **show fabric** family of commands display neighbor and local port information when connected to a down-level RBridge.
- This command displays ISL details, including the breakout index of the interface if breakout mode is configured on the source or neighbor interface.
- Command Output** The **show fabric islports** command displays the following information:

Output field	Description
Name	Switch name.
Type	Switch model and revision number.
State	Switch state. The valid values are Online, Offline, Testing, or Faulty.
Role	Switch role. The valid values are Principal, Subordinate, or Disabled.
VCS	Id VCS ID. Valid values range from 1 through 8192.
Config Mode	Brocade VCS Fabric mode. The valid values are Standalone/Local-Only/Distributed.
Rbridge-id	RBridge ID of the switch. Valid values range from 1 through 239.
WWN	Switch world wide name (WWN).
FCF MAC	Mac address
Index	A number between 0 and the maximum number of supported ports on the platform. The port index identifies the port number relative to the switch.
Interface	Interface of the local RBridge in the format "local-rbridge-id/slot/port".
State	Port state information: <ul style="list-style-type: none"> <li>• Up—if the ISL is connected and the link is up.</li> <li>• Down—no ISL is connected.</li> </ul>



Output field	Description
Operational State	<p>ISL state information:</p> <ul style="list-style-type: none"> <li>• ISL Fabric port—displays the world wide name (WWN) and name of the attached switch.</li> <li>• (Trunk Primary) —the port is the master port in a group of trunking ports.</li> <li>• (Trunk port, primary is rbridge-id/slot/port) —the port is configured as a trunking port; the primary port is rbridge-id/slot/port.</li> <li>• (upstream)—the ISL is an upstream path toward the principal switch of the fabric.</li> <li>• (downstream)—the ISL is a downstream path away from the principal switch of the fabric.</li> <li>• Segmented, (Reason Code)—the ISL has been segmented due to the given reason code.</li> <li>• Down, (Reason Code)—the ISL is down due to the given reason code.</li> </ul>

In this command, ISL segmentation is denoted as "ISL segmented, (segmentation reason)". The segmentation reason could be any of those listed below.

**TABLE 15** Segmentation reasons

Number	Segmentation	Explanation
1	RBridge ID Overlap	When a new node joins the cluster with the RBridge-id already existing in the cluster.
2	ESC mismatch, Unknown	Only on one side of the ISL, the actual ESC mismatch reason code will be displayed. On the other end, Unknown will be displayed.
3	ESC mismatch, Config Mode	Brocade VCS Fabric mode is different on both switches.
4	ESC mismatch, Distributed Config DB	The DCM Configuration DB is different on both the ends of ISL.
5	ESC mismatch, Brocade VCS Fabric License	Brocade VCS Fabric license is enabled on one end and disabled on the other side.
6	ESC mismatch, Fabric Distribution Service	FDS state is different on both the ends.
7	zone conflict	Zone configuration is not same on both the switches.
8	ISL Disabled	This port is disabled to be an ISL.
9	ISL Isolated	If BF or DIA is rejected then the port will get isolated.
10	LD inc om pat ability	ECP rejected or retries exceeded.
11	FDS Zone Conflict	FDS configuration caused zone conflict.

**TABLE 15** Segmentation reasons (Continued)

Number	Segmentation	Explanation
12	ESC mismatch, VCS Virtual Fabric Mode Conflict	Virtual Fabric mode is enabled on one end and disabled on the other end.

In this command, disabled ports are denoted as "Down (Disabled reason)". The disabled reason could be any of those listed below.

**TABLE 16** Disabled port reasons

Number	Disabled Reasons	Explanation
1	Admin	Port is persistently disabled.
2	Protocol Incomplete	The ISL couldn't complete the link protocol. Stuck in G_PORT state.
3	RBridge ID Overlap	Two nodes in the cluster requested for same RBridge ID.
4	Long distance incompatibility	Long distance configuration doesn't match.
5	ELP retries exceeded	Max ELP retries exceeded but no response from the other end.
6	Zone conflict	Zoning configuration overlaps.
7	ESC Config Mode Conflict	The link has been segmented due to different Brocade VCS Fabric mode.
8	ESC NOS incompatible	Other end does not support Brocade VCS Fabric technology.
9	ESC Distributed Config DB Conflict	DCM Configuration DB conflict.
10	ESC VCS Fabric License Conflict	Brocade VCS Fabric license is not enabled on one end.
11	No VCS Fabric License	Brocade VCS Fabric license is not enabled. For more than 2 nodes in the cluster VCS fabric license is mandatory.
12	ESC Fabric Distribution Service Conflict	FDS state is different.
13	Zoning FDS Configuration Conflict	FDS zoning configuration is different.

**Examples** To display information for all ISL ports in the core switch:

```
switch# show fabric islports
Name:          sw0
Type:          96.5
State:         Online
Role:          Fabric Principal
VCS Id:        1
Config Mode:  Local-Only
Rbridge-id:    23
WWN:          10:00:00:05:33:d1:3a:ac
FCF MAC:       00:05:33:d1:3a:ac
Index   Interface      State   Operational State
=====
  0     Fi 23/0/1         Up      ISL (protocol incomplete)
  1     Fi 23/0/2         Up      F-Port
  2     Fi 23/0/3         Up      F-Port
  3     Fi 23/0/4         Up      F-Port
  4     Fi 23/0/5         Up      Loopback-> Fi 23/0/5
  5     Fi 23/0/6         Down
  6     Fi 23/0/7         Down
  7     Fi 23/0/8         Down
  8     Te 23/0/1         Up      ISL segmented, (ESC mismatch, Config Mode) (Trunk
Primary)
  9     Te 23/0/2         Down
 10     Te 23/0/3         Down
 11     Te 23/0/4         Down
 12     Te 23/0/5         Down
 13     Te 23/0/6         Down
 14     Te 23/0/7         Down
 15     Te 23/0/8         Down
 16     Te 23/0/9         Down
 17     Te 23/0/10        Down
 18     Te 23/0/11        Down
 19     Te 23/0/12        Down
 20     Te 23/0/13        Down
 21     Te 23/0/14        Down
 22     Te 23/0/15        Down
 23     Te 23/0/16        Down
 24     Te 23/0/17        Down
 25     Te 23/0/18        Down
 26     Te 23/0/19        Down
 27     Te 23/0/20        Down
 28     Te 23/0/21        Down
 29     Te 23/0/22        Down
 30     Te 23/0/23        Down
 31     Te 23/0/24        Down
```

**Related Commands** [fabric isl enable](#), [show diag burninstatus](#), [show fabric isl](#), [show fabric trunk](#)

## show fabric port-channel

Displays the fabric VLAG load-balance information.

<b>Syntax</b>	<b>show fabric port-channel</b> [ <i>port-channel-id</i>   <b>load-balance</b> ]
<b>Parameters</b>	<b><i>port-channel-id</i></b> Displays the information for the port channel ID.
	<b>load-balance</b> Displays the load balance information.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	This command displays ISL details, including the breakout index of the interface if breakout mode is configured on the source or neighbor interface.
<b>Examples</b>	<pre>switch# show fabric port-channel 10 load-balance Fabric Vlag Load-Balance Information ----- Port-channel id      : 10 Load-Balance Flavor : Source and Destination MAC address and VID based load balancing</pre>
<b>Related Commands</b>	<a href="#">show fabric isl</a> , <a href="#">show fabric trunk</a>

# show fabric route linkinfo

Displays the RBridge route link information connected in the fabric.

**Syntax** `show fabric route linkinfo`

**Modes** Privileged EXEC mode

**Usage Guidelines** The **show fabric** family of commands display neighbor and local port information when connected to a down-level RBridge.

The output displays the link information, which includes the breakout index of the interface if breakout mode is configured in the source or neighbor interface.

When a fabric is running normal mode (switches are running Network OS 4.1.0 or later), CLI output displays the QSFP breakout index for all switches in the fabric.

When a fabric is running mixed mode (switches are running Network OS 4.1.0 or earlier), the QSFP breakout index is not displayed in the output on switches running Network OS versions earlier than v4.1.0.

**Command Output** The **show fabric route linkinfo** command displays the following information:

Output field	Description
Rbridge-id	ID of the RBridge. Valid values range from 1 through 239.
Reachable	Indicates whether the RBridge can be reached. Displays "Yes" if it is reachable, otherwise displays "No".
Version	Displays the version.
No. of links	The number of ISLs connected to the neighbor switches.
Link #	A sequence number for links on the RBridge.
Src Index	E_Port interface on the local switch. This value is typically equal to the Index field reported in the switchShow command.
Src Interface	Source interface of the local RBridge in the format "local-rbridge-id/slot/port". If the ISL is not up, then "?/?/?" displays for a Te interface and "-/-/" displays for an Fi interface.
Nbr Index	E_Port interface on the remote switch. This value is typically equal to the index field reported in the switchShow command. If the link is segmented and the NBR rbridge details are unavailable, "?" displays in this field.
Nbr Interface	Neighbor interface of the ISL connected from the local RBridge in the format "nbr-rbridgeid/slot/port". If the ISL is not completely up, this field will be displayed as "?/?/?".
Link-Cost	The cost of reaching the destination domain.
Link-type	The type of link.
Trunk	Displays "Yes" if trunk is enabled in the ISL, otherwise displays "No".

**Examples** To display link information for the fabric:

```
switch# show fabric route linkinfo

Rbridge-id: 1
=====
Reachable:    Yes
Version:      1
No. of Links: 2
Link#   Src      Src      Nbr      Nbr
      Index  Interface Index  Interface  Link-Cost  Link-Type
Trunk
-----
-----
1      1      Fi 1/-/-  128     Fi 2/-/-   10000
Pt_Pt
2      159     Fi 1/-/-  128     Fi 160/-/- 10000
Pt_Pt
Rbridge-id: 2
=====
Reachable:    Yes
Version:      1
No. of Links: 2
Link#   Src      Src      Nbr      Nbr
      Index  Interface Index  Interface  Link-Cost  Link-Type
Trunk
-----
-----
1      129     Fi 2/-/-  49      Fi 66/0/1   10000
Pt_Pt
2      128     Fi 2/-/-  1       Fi 1/-/-   10000
Pt_Pt
Rbridge-id: 65
=====
Reachable:    Yes
Version:      1
No. of Links: 2
Link#   Src      Src      Nbr      Nbr
      Index  Interface Index  Interface  Link-Cost  Link-Type
Trunk
-----
-----
1      2       Te 65/0/2  2       Te 66/0/2   500        Pt_Pt Ethernet
Yes
2      44      Te 65/0/44 20      Te 66/0/20  500        Pt_Pt Ethernet
Yes
Rbridge-id: 66
=====
Reachable:    Yes
Version:      1
No. of Links: 4
Link#   Src      Src      Nbr      Nbr
      Index  Interface Index  Interface  Link-Cost  Link-Type
Trunk
-----
-----
1      2       Te 66/0/2  2       Te 65/0/2   500        Pt_Pt Ethernet
Yes
2      20      Te 66/0/20 44      Te 65/0/44  500        Pt_Pt Ethernet
Yes
3      49      Fi 66/0/1  129     Fi 2/-/-   500        Pt_Pt
Yes
4      54      Fi 66/0/6  129     Fi 160/-/- 500        Pt_Pt
Yes
Rbridge-id: 160
=====
Reachable:    Yes
Version:      1
No. of Links: 2
Link#   Src      Src      Nbr      Nbr
      Index  Interface Index  Interface  Link-Cost  Link-Type
Trunk
-----
-----
1      129     Fi 160/-/- 54      Fi 66/0/6   10000
Pt_Pt
2      128     Fi 160/-/- 159     Fi 1/-/-   10000        Pt_Pt
```

This example displays link linformation and includes the breakout index of the interface in normal mode.

```
sw0# show fabric route linkinfo
Rbridge-id: 1
=====
Reachable:    Yes
Version:      1
No. of Links: 4
Link#   Src      Src      Nbr      Nbr
      Index  Interface Index  Interface Link-Cost  Link-Type
-----
Trunk
-----
1       28       Te 1/0/49:1  0      Te 48/0/49:1  500      Pt_Pt Ethernet
2       30       Te 1/0/49:2  1      Te 48/0/49:2  500      Pt_Pt Ethernet
3       32       Te 1/0/49:3  2      Te 48/0/49:3  500      Pt_Pt Ethernet
4       34       Te 1/0/49:4  3      Te 48/0/49:4  500      Pt_Pt Ethernet
Rbridge-id: 48
=====
Reachable:    Yes
Version:      1
No. of Links: 4
Link#   Src      Src      Nbr      Nbr
      Index  Interface Index  Interface Link-Cost  Link-Type
-----
Trunk
-----
1       0        Te 48/0/49:1  28     Te 1/0/49:1  500      Pt_Pt Ethernet
2       1        Te 48/0/49:2  30     Te 1/0/49:2  500      Pt_Pt Ethernet
3       2        Te 48/0/49:3  32     Te 1/0/49:3  500      Pt_Pt Ethernet
4       3        Te 48/0/49:4  34     Te 1/0/49:4  500      Pt_Pt Ethernet
```

This example displays link linformation and includes the breakout index of the interface in mixed mode running Network OS v4.0.0:

```
switch# show fabric route linkinfo
Rbridge-id: 1
=====
Reachable:    Yes
Version:      1
No. of Links: 4
Link#   Src      Src      Nbr      Nbr
      Index  Interface Index  Interface Link-Cost  Link-Type
-----
Trunk
-----
1       28       Te 1/0/49    0      Te 48/0/49    500      Pt_Pt Ethernet
2       30       Te 1/0/49    1      Te 48/0/49    500      Pt_Pt Ethernet
3       32       Te 1/0/49    2      Te 48/0/49    500      Pt_Pt Ethernet
4       34       Te 1/0/49    3      Te 48/0/49    500      Pt_Pt Ethernet
Rbridge-id: 48
=====
Reachable:    Yes
Version:      1
No. of Links: 4
Link#   Src      Src      Nbr      Nbr
      Index  Interface Index  Interface Link-Cost  Link-Type
-----
Trunk
-----
1       0        Te 48/0/49    28     Te 1/0/49    500      Pt_Pt Ethernet
2       1        Te 48/0/49    30     Te 1/0/49    500      Pt_Pt Ethernet
3       2        Te 48/0/49    32     Te 1/0/49    500      Pt_Pt Ethernet
4       3        Te 48/0/49    34     Te 1/0/49    500      Pt_Pt Ethernet
```

This example displays link information and includes the breakout index of the interface in mixed mode running Network OS v4.1.0:

```
switch# show fabric route linkinfo
Rbridge-id: 1
=====
Reachable:    Yes
Version:      1
No. of Links: 4
Link#   Src      Src      Nbr      Nbr      Link-Cost  Link-Type
      Index  Interface Index  Interface
-----
Trunk
-----
1       28       Te 1/0/49:1  0       Te 48/0/49    500       Pt_Pt Ethernet
2       30       Te 1/0/49:2  1       Te 48/0/49    500       Pt_Pt Ethernet
3       32       Te 1/0/49:3  2       Te 48/0/49    500       Pt_Pt Ethernet
4       34       Te 1/0/49:4  3       Te 48/0/49    500       Pt_Pt Ethernet
Rbridge-id: 48
=====
Reachable:    Yes
Version:      1
No. of Links: 4
Link#   Src      Src      Nbr      Nbr      Link-Cost  Link-Type
      Index  Interface Index  Interface
-----
Trunk
-----
1       0       Te 48/0/49:1  28      Te 1/0/49     500       Pt_Pt Ethernet
2       1       Te 48/0/49:2  30      Te 1/0/49     500       Pt_Pt Ethernet
3       2       Te 48/0/49:3  32      Te 1/0/49     500       Pt_Pt Ethernet
4       3       Te 48/0/49:4  34      Te 1/0/49     500       Pt_Pt Ethernet
```

**Related Commands**    [show fabric route topology](#), [show fabric route neighbor-state](#)



## show fabric route multicast

Displays ISLs that receives any forwarded Broadcast, unknown Unicast, and Multicast (BUM) traffic.

**Syntax** **show fabric route multicast** [ *rbridge-id* | **all** ]

**Parameters** *rbridge-id*  
Specifies an RBridge ID.

**all**  
Specifies all switches in the fabric.

**Modes** Privileged EXEC mode

**Usage Guidelines** The multicast routing information indicates all ports that are members of the multicast distribution tree ports that are able to send and receive multicast frames.

If this command is executed without operands, it displays the multicast information of the local RBridge.

The **show fabric** family of commands display neighbor and local port information when connected to a down-level RBridge.

When a fabric is running normal mode (switches are running Network OS 4.1.0 or later), CLI output displays the QSFP breakout index for all switches in the fabric.

When a fabric is running mixed mode (switches are running Network OS 4.1.0 or earlier), the QSFP breakout index is not displayed in the output on switches running Network OS versions earlier than v4.1.0. In such instances, the neighbor port WWN (Nbr-WWN) is displayed as *XX:XX:XX:XX:XX:XX:XX*.

This command displays ISL details, including the breakout index of the interface if breakout mode is configured on the source or neighbor interface.

**Command Output** The **show fabric route multicast** command displays the following information:

Output field	Description
Rbridge-id	RBridge ID of the switch. Valid values range from 1 through 239.
Mcast Priority	Mcast priority value of the switch. Valid values range from 1 through 255.
Enet IP Addr	The switch Ethernet IP address.
WWN	World Wide Name of the switch.
Name	Switch name.
Src-Index	Source index of the local RBridge.
Src-Port	Source port of the local RBridge in the format "local-rbridge-id/slot/port".
Nbr-Index	Neighbor Index of the ISL connected from local port.
Nbr-Port	Neighbor port of the ISL connected from the local RBridge in the format "nbr-rbridge-id/slot/port".

**Examples** To display the multicast routing information for all ports in the switch:

```
switch# show fabric route multicast
Root of the Multicast-Tree
=====
Rbridge-id: 1
Mcast Priority: 1
Enet IP Addr: 10.24.85.212
WWN: 10:00:00:05:1e:cd:73:fa
Name: switch
Rbridge-id: 1
Src-Index   Src-Port       Nbr-Index   Nbr-Port     BW      Trunk
-----
7           Te 1/0/7       55          Te 22/0/55   40G    Yes
15          Te 1/0/15      57          Te 23/0/57   60G    Yes
22          Te 1/0/22      58          Te 24/0/58   40G    Yes
26          Te 1/0/26      56          Te 25/0/56   60G    Yes
34          Te 1/0/34      58          Te 26/0/58   60G    Yes
41          Te 1/0/41      59          Te 27/0/59   20G    Yes
44          Te 1/0/44      56          Te 28/0/56   60G    Yes
```

This example displays route information and includes the breakout index of the interface in normal mode.

```
sw0# show fabric route multicast
Root of the Multicast-Tree
=====
Rbridge-id: 1
Mcast Priority: 1
Enet IP Addr: 10.38.19.47
WWN: 10:00:00:05:33:65:0b:20
Name: sw0
Rbridge-id: 48
Src-Index   Src-Port       Nbr-Index   Nbr-Port     BW      Trunk
-----
0           Te 48/0/49:1   28          Te 1/0/49:1   0G
```

This example displays route information and includes the breakout index of the interface in mixed mode running Network OS v4.0.0.

```
sw0# show fabric route multicast
Root of the Multicast-Tree
=====
Rbridge-id: 1
Mcast Priority: 1
Enet IP Addr: 10.38.19.47
WWN: 10:00:00:05:33:65:0b:20
Name: sw0
Rbridge-id: 1
Src-Index   Src-Port       Nbr-Index   Nbr-Port     BW      Trunk
-----
28          Te 1/0/49      0           Te 48/0/49    10G
```

This example displays route information and includes the breakout index of the interface in mixed mode running Network OS v4.1.0.

```
sw0# show fabric route multicast
Root of the Multicast-Tree
=====
Rbridge-id: 1
Mcast Priority: 1
Enet IP Addr: 10.38.19.47
WWN: 10:00:00:05:33:65:0b:20
Name: sw0
Rbridge-id: 1
Src-Index   Src-Port       Nbr-Index   Nbr-Port     BW      Trunk
-----
0           Te 48/0/49:1   28          Te 1/0/49     10G
```

**Related Commands** [fabric route mcast](#), [show fabric route topology](#), [show running-config fabric route mcast](#), [show fabric route topology](#)

## show fabric route neighbor-state

Displays the state information of all the ISL links connected to the RBridge.

**Syntax** `show fabric route neighbor-state [ rbridge-id { rbridge-id | all } ]`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

*rbridge-id*

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** FSPF defines a neighbor as a remote ISL interface that is directly attached to the local RBridge. If the interfaces are trunked, the command displays data only about the trunk primary.

If no information is available for the switch, the command displays the message "No ISL found."

If no RBridge is specified, the neighbor state information for the local switch is displayed.

The **show fabric** family of commands display neighbor and local port information when connected to a down-level RBridge.

When a fabric is running normal mode (switches are running Network OS 4.1.0 or later), CLI output displays the QSFP breakout index for all switches in the fabric.

When a fabric is running mixed mode (switches are running Network OS 4.1.0 or earlier), the QSFP breakout index is not displayed in the output on switches running Network OS versions earlier than v4.1.0. This command displays ISL details, including the breakout index of the interface if breakout mode is configured on the source or neighbor interface.

**Command Output** The **show fabric route neighbor-state** command displays the following information:

Output field	Description
rbridge-id	ID of the RBridge. Valid values range from 1 through 239.
# ISLs	The number of ISLs that connect the switch to neighbor switches.
Src Index	E_Port interface on the local switch. This value is typically equal to the Index field reported in the switchShow command.
Src Interface	Physical interface on the local switch in the format "Te rbridge-id/slot/port". If the ISL is not up, then "?/?/?" displays for a Te interface and "-/-/" displays for an Fi interface.
Nbr Index	E_Port interface on the remote switch. This value is typically equal to the index field reported in the switchShow command.
Nbr Interface	Physical interface on the remote switch in the format "Te rbridge-id/slot/port". If the ISL is not up, then "?/?/?" displays for a Te interface and "-/-/" displays for an Fi interface.

Output field	Description
Nbr State	<p>The FSPF neighbor state for the port attached to remote switch. The neighbor can be in one of the following states:</p> <ul style="list-style-type: none"> <li>NB_ST_DOWN—the neighbor is down.</li> <li>NB_ST_INIT—the neighbor is initializing.</li> <li>NB_ST_DB_EX—the neighbor and the switch are exchanging data from their Link State Records (LSR) databases.</li> <li>NB_ST_DB_ACK_WT—the neighbor is waiting for the switch to acknowledge the LSR database.</li> <li>NB_ST_DB_WT—the LSR Database is in waiting state; synchronization is in process.</li> <li>NB_ST_FULL—the neighbor is in the last, finishing state. The E_Port can route frames only if the neighbor is in full state.</li> </ul>

**Examples** To display the state of FSPF neighbors for the local switch:

```
switch# show fabric route neighbor-state
Rbridge-id: 66 #ISLs: 8
  Src      Src      Nbr      Nbr      Nbr
  Index   Interface  Index   Interface  State
-----
2        Te 66/0/2    2        Te 65/0/2    NB_ST_FULL
17       Te 66/0/17   41       Te 65/0/41   NB_ST_FULL
18       Te 66/0/18   42       Te 65/0/42   NB_ST_FULL
19       Te 66/0/19   43       Te 65/0/43   NB_ST_FULL
20       Te 66/0/20   44       Te 65/0/44   NB_ST_FULL
23       Te 66/0/23   47       Te 65/0/47   NB_ST_FULL
49       Fi 66/0/1    129      Fi 2/-/-     NB_ST_FULL
53       Fi 66/0/5    129      Fi 160/-/-   NB_ST_FULL
```

This example displays neighbor state route details and includes the breakout index of the interface in normal mode.

```
sw0# show fabric route neighbor-state
Rbridge-id: 1 #ISLs: 1
  Src      Src      Nbr      Nbr      Nbr
  Index   Interface  Index   Interface  State
-----
30       Te 1/0/49:1  1        Te 48/0/49:1  NB_ST_FULL
```

This example displays neighbor state route details of the non-trunked port in mixed mode running Network OS v4.0.0. (In mixed mode, the QSFP breakout index is not displayed in the output on a switch running Network OS versions earlier than v4.1.0.)

```
sw0# show fabric route neighbor-state
Rbridge-id: 1 #ISLs: 2
  Src      Src      Nbr      Nbr      Nbr
  Index   Interface  Index   Interface  State
-----
30       Te 1/0/49    1        Te 48/0/49    NB_ST_FULL
```

This example displays neighbor state route details of the non-trunked port in mixed mode running Network OS v4.1.0.

```
sw0# show fabric route neighbor-state
Rbridge-id: 1 #ISLs: 2
  Src      Src      Nbr      Nbr      Nbr
  Index   Interface  Index   Interface  State
-----
30       Te 1/0/49:1  1        Te 48/0/49    NB_ST_FULL
```

**Related  
Commands**    [show fabric route topology](#), [show fabric route linkinfo](#)

## show fabric route pathinfo

Displays the path of a data stream through a fabric and provides statistics about each hop on that path.

<b>Syntax</b>	<b>show fabric route pathinfo Fabric ID Domain Source Port Destination Port Basic Stats Extended Stats Reverse Path</b>
<b>Parameters</b>	<p>You are prompted to select parameters interactively. The command will prompt you for the following parameters:</p> <p><b>Fabric ID</b></p> <p>Enter the VCS ID of the destination Network OS switch or the Fabric ID of the destination Fabric OS switch. If unspecified, the value defaults to -1, which specifies the Brocade VCS Fabric cluster of the local switch.</p> <p><b>Domain</b></p> <p>Enter the RBridge ID of the destination Network OS switch or the domain ID of the destination Fabric OS switch. You must enter a value for this parameter. It has no default value.</p> <p><b>Source Port</b></p> <p>Enter the port index of the port at the head of the data stream to be traced. If unspecified, the value defaults to -1, which specifies the embedded port.</p> <p><b>Destination Port</b></p> <p>Enter the port index of the port on the destination switch for the path being traced. If unspecified, the value defaults to -1, which specifies the embedded port. The command output also reports the status of the Destination Port. If the specified port is out of range on the destination switch, the command fails with the message "Target port not present."</p> <p><b>Basic Stats</b></p> <p>Enter <b>y</b> to display basic statistics about each hop. By default, basic statistics are not displayed.</p> <p><b>Extended Stats</b></p> <p>Enter <b>y</b> to display extended statistics about each hop. By default, extended statistics are not displayed.</p> <p><b>Reverse Path</b></p> <p>Enter <b>y</b> to display reverse path information in addition to the forward path information. By default, reverse path information is not displayed. The path from port A on switch X to port B on switch Y might be different from the path from port B to port A depending on the links traversed between a given sequence of switches, or the reverse path might involve different switches.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>The <b>show fabric</b> family of commands display neighbor and local port information when connected to a down-level RBridge. This command displays ISL details, including the breakout index of the interface if breakout mode is configured on the source or neighbor interface.</p> <p>Use this command to display detailed routing information and statistics for a data stream from a source port on the local switch to a destination port on another switch. The destination switch can be a member of the same Brocade VCS Fabric cluster, a member of a different Brocade VCS Fabric cluster, a member of a Fabric OS backbone fabric, or a member of a Fabric OS edge fabric. This routing information describes the exact path that a user data stream takes to go from the source port to the destination port.</p>

Use this command to check whether a congested link might be causing performance degradation on a specific data stream or path.

You can request statistics for each hop in addition to the routing information. These statistics are presented for the input and output ports for both receive and transmit modes. You can select basic statistics, extended statistics, or both. Statistics are not reported for the embedded port. Some throughput values are reported in multiple time intervals to describe current path utilization and the average throughput over a longer period of time.

To collect these statistics, this command uses a special frame that is sent hop-by-hop from the source switch to the destination switch. To prevent such a frame from looping forever if an error occurs, a maximum of 25 hops is enforced. The hop count includes all hops in the direct path from source to destination, and also all the hops in the reverse path, if the tracing of the reverse path is requested. If the hop limit is exceeded, information collected up to the switch that returned the error is displayed along with the message "Maximum hops exceeded."

**Command Output** Regardless of parameter selection, the **show fabric route pathinfo** command displays the following information of the destination port and routing information about each hop:

Output field	Description
Target port is	Provides the status of the destination port. It can have one of the following values: <ul style="list-style-type: none"> <li>Embedded—this is the embedded port.</li> <li>Not active—the port is not connected or is still initializing and has not yet reached a stable state.</li> <li>E_Port</li> <li>F_Port</li> </ul>
Hop	The hop number. The local switch is hop 0.
In Port	The port index of the port that the frames come in from on this path. For hop 0, this is the source port.
Domain ID	Routing bridge ID of the Network OS switch or domain of the Fabric OS switch.
Out Port	The port index of the port that the frames use to reach the next hop on this path. For the last hop, this is the destination port.
BW	The bandwidth of the output ISL in Gbps. It does not apply to the embedded port.
Cost	The cost of the ISL used by the fabric shortest path first (FSPF) routing protocol. It applies only to an E_Port.

If basic statistics are requested, the following information is provided for each hop in addition to the routing information:

Output field	Description
B/s (1s)	Bytes per second transmitted and received over the previous 1-second period for the in port and for the out port.
B/s (64s)	Bytes per second transmitted and received over the previous 64-second period for the in port and for the out port.

Output field	Description
TxCrdz(1s)	The length of time, in milliseconds, over the previous 1 second interval that the port was unable to transmit frames because the transmit BB credit was 0. The purpose of this statistic is to detect congestion or a device affected by latency. This parameter is sampled at 1 millisecond (ms) intervals, and the counter is incremented if the condition is true. Each sample represents 1 ms of time with a 0 Tx BB Credit. An increment of this counter means that the frames could not be sent to the attached device for 1 ms, indicating degraded performance.
TxCrdz(64s)	The length of time, in milliseconds, over the previous 64-second interval that the port was unable to transmit frames because the transmit BB credit was 0.

If extended statistics are requested, the following information is provided for each hop in the data path:

Output field	Description
F/s (1s)	The number of frames received or transmitted per second over the previous 1-second period.
F/s (64s)	The number of frames received or transmitted per second over the previous 64-second period.
Words	The total number of 4-byte Fibre Channel words.
Frames	The total number of frames.
Errors	The total number of errors that may have caused a frame not to be received correctly. This includes cyclic redundancy check (CRC) errors, bad end-of-frame (EOF) errors, frame truncated errors, frame-too-short errors, and encoding errors inside a frame.

**Examples** To show path information without statistics or reverse path information:

```
switch# show fabric route pathinfo
Fabric ID (1..128) [-1]      : 10
Domain      : 1
Source Port [-1]           :
Destination Port [-1]      :
Basic Stats [y/n/yes/no]?  : n
Extended Stats [y/n/yes/no]? : n
Reverse Path[y/n/yes/no]?  : n
```

```
-----
Target port is Embedded
Hop      In Port      Domain ID      Out Port      BW      Cost
-----
0        E              152            1             10G     500
1        5              142            54            4G      500
2        14             5              1             4G      10000
3        217            100            793           48G     500
4        1209           2              148            8G      500
5        3              1              E             --      --
```



To show path information with basic statistics:

```
switch# show fabric route pathinfo
Fabric ID (1..128) [-1]      : 10
Domain      : 1
Source Port [-1]          :
Destination Port [-1]      :
Basic Stats [y/n/yes/no]?  : y
Extended Stats [y/n/yes/no]? : n
Reverse Path[y/n/yes/no]?  : n
```

```
-----
Target port is Embedded
Hop      In Port      Domain ID      Out Port      BW      Cost
-----
0        E            E 152           1            10G      500
Port
-----
Tx      Rx      Tx      Rx
B/s (1s)  --    --    0      0
B/s (64s) --    --    0      0
TxCrzd (1s) --  --    0      0
TxCrzd (64s) -- --    0      0
Hop      In Port      Domain ID      Out Port      BW      Cost
-----
1        5            142           54           4G      500
Port
-----
Tx      Rx      Tx      Rx
B/s (1s)  0      0      0      0
B/s (64s) 0      0      7      7
TxCrzd (1s) 0    --    0      --
TxCrzd (64s) 0    --    0      --
Hop      In Port      Domain ID      Out Port      BW      Cost
-----
2        14           5            1            4G      10000
Port
-----
Tx      Rx      Tx      Rx
B/s (0s)  0      0      0      0
B/s (0s)  0      0      0      0
TxCrzd (0s) 0    --    0      --
TxCrzd (0s) 0    --    0      --
Hop      In Port      Domain ID      Out Port      BW      Cost
-----
3        217          100           793          48G      500
Port
-----
Tx      Rx      Tx      Rx
B/s (1s)  0      0      0      0
B/s (64s) 4      4      0      0
TxCrzd (1s) 0    --    0      --
TxCrzd (64s) 0    --    0      --
Hop      In Port      Domain ID      Out Port      BW      Cost
-----
4        1209         2            148          8G      500
Port
-----
Tx      Rx      Tx      Rx
B/s (1s)  0      0      0      0
B/s (64s) 0      0      3      0
TxCrzd (1s) 0    --    0      --
TxCrzd (64s) 0    --    0      --
Hop      In Port      Domain ID      Out Port      BW      Cost
-----
5        3            1            E            --      --
Port
-----
Tx      Rx      Tx      Rx
B/s (1s)  0      0      --     --
B/s (64s) 0      3      --     --
```

## Show commands

```
TxCrdz (1s)      0      --      --      --  
TxCrdz (64s)    0      --      --      --
```

To show path information with extended statistics and reverse path information:

```
switch# show fabric route pathinfo
```

```
Fabric ID (1..128) [-1]      : 10
```

```
Domain      : 1
```

```
Source Port [-1]      :
Destination Port [-1] :
Basic Stats [y/n/yes/no]? : y
```

```
Extended Stats [y/n/yes/no]? : y
```

```
Reverse Path[y/n/yes/no]? : y
```

```
-----
Target port is Embedded
Hop      In Port      Domain ID      Out Port      BW      Cost
-----
  0      E              152            1             10G     500
Port
              Tx      E      Rx              Tx      Rx
-----
B/s (1s)      --      --      --              0      0
B/s (64s)     --      --      --              0      0
TxCrzd (1s)   --      --      --              0      --
TxCrzd (64s)  --      --      --              0      --
F/s (1s)      --      --      --              0      0
F/s (64s)     --      --      --              0      0
Words         --      --      --              0      0
Frames        --      --      --              0      0
Errors        --      --      --              --     0
Hop      In Port      Domain ID      Out Port      BW      Cost
-----
  1      5              142            54            4G      500
Port
              Tx      5      Rx              Tx      Rx
-----
B/s (1s)      0      0      0              0      0
B/s (64s)     0      0      0              7      7
TxCrzd (1s)   0      --     --              0      --
TxCrzd (64s)  0      --     --              0      --
F/s (1s)      0      0      0              0      0
F/s (64s)     0      0      0              0      0
words         0      0      0              967    967
Frames        0      0      0              1204   967
Errors        --     --     0              --     0
Hop      In Port      Domain ID      Out Port      BW      Cost
-----
  2      14             5              1             4G     10000
Port
              Tx      14     Rx              Tx      Rx
-----
B/s (0s)      0      0      0              0      0
B/s (0s)      0      0      0              0      0
TxCrzd (0s)   0      --     --              0      --
TxCrzd (0s)   0      --     --              0      --
F/s (0s)      0      0      0              0      0
F/s (0s)      0      0      0              0      0
words         0      0      0              0      0
Frames        0      0      0              0      0
Errors        --     --     0              --     0
Hop      In Port      Domain ID      Out Port      BW      Cost
-----
  3      217            100            793           48G     500
Port
              Tx      217    Rx              Tx      Rx
-----
B/s (1s)      0      0      0              0      0
B/s (64s)     4      4      0              0      0
TxCrzd (1s)   0      --     --              0      --
TxCrzd (64s)  0      --     --              0      --
F/s (1s)      0      0      0              0      0
F/s (64s)     0      0      0              0      0
words         50570  50570  511118479      511118479
Frames        50742  50570  539255694      511118479
-----
```

Show commands

```

Errors          --          0          --          0
Hop             In Port          Domain ID          Out Port          BW          Cost
-----
4              1209              2              148              8G          500
Port
              Tx              Rx              Tx              Rx
-----
B/s (1s)      0              0              0              0
B/s (64s)     0              0              3              0
TxCrzd (1s)   0              --             0              --
TxCrzd (64s)  0              --             0              --
F/s (1s)      0              0              0              0
F/s (64s)     0              0              0              0
words         608            608            424            424
Frames        454            608            563            424
Errors        --             0              --             0
Hop             In Port          Domain ID          Out Port          BW          Cost
-----
5              3              1              E              E          --          --
Port
              Tx              Rx              Tx              Rx
-----
B/s (1s)      0              0              --             --
B/s (64s)     0              3              --             --
TxCrzd (1s)   0              --             --             --
TxCrzd (64s)  0              --             --             --
F/s (1s)      0              0              --             --
F/s (64s)     0              0              --             --
words         1244           1244           --             --
Frames        898            1244           --             --
Errors        --             0              --             --
Reverse Path
Hop             In Port          Domain ID          Out Port          BW          Cost
-----
6              E              1              0              0          8G          500
Port
              Tx              Rx              Tx              Rx
-----
B/s (1s)      --             --             0              0
B/s (64s)     --             --             4              4
TxCrzd (1s)   --             --             0              --
TxCrzd (64s)  --             --             0              --
F/s (1s)      --             --             0              0
F/s (64s)     --             --             0              0
Words         --             --             809            809
Frames        --             --             1645           809
Errors        --             --             --             0
Hop             In Port          Domain ID          Out Port          BW          Cost
-----
7              149              2              1204             48G          500
Port
              Tx              Rx              Tx              Rx
-----
B/s (1s)      0              0              0              0
B/s (64s)     4              4              0              0
TxCrzd (1s)   0              --             0              --
TxCrzd (64s)  0              --             0              --
F/s (1s)      0              0              0              0
F/s (64s)     0              0              0              0
words         707            707            56             56
Frames        403            707            57             56
Errors        --             0              --             0
Hop             In Port          Domain ID          Out Port          BW          Cost
-----
8              796              100             217             4G          500
Port
              Tx              Rx              Tx              Rx
-----
B/s (1s)      0              0              0              0
B/s (64s)     0              0              4              4
TxCrzd (1s)   0              --             0              --
TxCrzd (64s)  0              --             0              --
F/s (1s)      0              0              0              0
F/s (64s)     0              0              0              0
words         48267544      48267544      50570          50570
Frames        1164982       48267544      50742          50570
Errors        --             0              --             0

```

**Related** [show fabric route topology](#), [show fabric route neighbor-state](#)  
**Commands**

# show fabric route topology

Displays the RBridge routes from the source switch to destination switches.

**Syntax** `show fabric route topology [ src-rbridgeld src-id ] [ dst-rbridgeld dst_id ]`

**Parameters** `src-rbridgeld`

Specifies the source RBridge ID

*src-id*

Specifies details on the source RBridge.

`dst-rbridgeld`

Specifies the destination RBridge ID

*dst\_id*

Specifies details on the destination RBridge.

**Modes** Privileged EXEC mode

**Usage Guidelines** The RBridge routes to other switches are the available paths to remote domains that unicast traffic can take.

The source RBridge ID must be the local RBridge ID in this release. It is an optional parameter. If you do not specify the source RBridge ID or the destination RBridge ID, the system routes to all destinations in the Fabric.

The **show fabric** family of commands display neighbor and local port information when connected to a down-level RBridge.

When a fabric is running normal mode (switches are running Network OS 4.1.0 or later), CLI output displays the QSFP breakout index for all switches in the fabric.

When a fabric is running mixed mode (switches are running Network OS 4.1.0 or earlier), the QSFP breakout index is not displayed in the output on switches running Network OS versions earlier than v4.1. This command displays ISL details, including the breakout index of the interface if breakout mode is configured on the source or neighbor interface.

**Command Output** The **show fabric route topology** command displays the following information:

Output field	Description
Path Count	The number of currently active paths to the destination domain.
Src RB-ID	RBridge ID of the source switch. Valid values range from 1 through 239.
Dst RB-ID	Destination rbridge-id to where the traffic flows. Valid values range from 1 through 255.
Out Index	The port index to which incoming frames are forwarded to reach the destination RBridge.
Out Interface	The port interface (local-rbridge-id/slot/port) of the local RBridge to which incoming frames are forwarded to the destination RBridge. If the ISL is not up, then "?/???" displays for a Te interface and "-/-" displays for an Fi interface.
ECMP Grp	The Equal Cost MultiPath group
Hops	The maximum number of hops to reach destination RBridge.

Output field	Description
Cost	The cost of reaching destination domain.
Nbr Index	Neighbor Index of the ISL connected from local port.
Nbr Interface	Neighbor interface of the ISL connected from the local RBridge in the format "nbr-rbridge-id/slot/port". If the ISL is not up, then "??/?" displays for a Te interface and "-/-" displays for an Fi interface.
BW	Bandwidth of the traffic.
Trunk	Displays "Yes" if trunk is enabled in the ISL.

### Examples To display the fabric route topology information:

```
switch# show fabric route topology
Total Path Count: 4
```

Src RB-ID	Dst RB-ID	Out Index	Out Interface	ECMP Grp	Hops	Cost	Nbr Index	Nbr Interface	BW	Trunk
-										
1	2	17	Te 1/8/18	1	2	1000	25	Te 22/0/18	20G	Yes
	3	17	Te 1/8/18	1	3	11000	25	Te 22/0/18	20G	Yes
	22	17	Te 1/8/18	1	1	500	25	Te 22/0/18	20G	Yes
	160	17	Te 1/8/18	1	2	1000	25	Te 22/0/18	20G	Yes

This example displays route topology details and includes the breakout index of the neighbor interface in normal mode.

```
switch# show fabric route topology
Total Path Count: 3
```

Src RB-ID	Dst RB-ID	Out Index	Out Interface	ECMP Grp	Hops	Cost	Nbr Index	Nbr Interface	BW	Trunk
-										
1	48	30	Te 1/0/49:1	1	1	500	1	Te 48/0/49:1	40G	Yes

This example displays route topology details and includes the breakout index of the neighbor interface in mixed mode running Network O.S. v4.0.0.

```
switch# show fabric route topology
Total Path Count: 3
```

Src RB-ID	Dst RB-ID	Out Index	Out Interface	ECMP Grp	Hops	Cost	Nbr Index	Nbr Interface	BW	Trunk
-										
1	48	30	Te 1/0/49	1	1	500	1	Te 48/0/49	40G	Yes

This example displays route topology details and includes the breakout index of the neighbor interface in mixed mode running Network O.S. v4.1.0.

```
switch# show fabric route topology
Total Path Count: 3
```

Src RB-ID	Dst RB-ID	Out Index	Out Interface	ECMP Grp	Hops	Cost	Nbr Index	Nbr Interface	BW	Trunk
-										
1	48	30	Te 1/0/49:1	1	1	500	1	Te 48/0/49	40G	Yes

### Related Commands [fabric route mcast](#)

## show fabric trunk

Displays trunk information of Inter-Switch Link (ISL) ports.

<b>Syntax</b>	<b>show fabric trunk</b> [ <i>rbridge-id</i>   <b>all</b> ]
<b>Parameters</b>	<p><b>rbridge-id</b></p> <p>Specifies an RBridge ID.</p> <p><b>all</b></p> <p>Specifies all switches in the fabric.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>If this command is executed without operands, it displays the trunk information of the local RBridge.</p> <p>The <b>show fabric</b> family of commands display neighbor and local port information when connected to a down-level RBridge.</p> <p>When a fabric is running normal mode (switches are running Network OS 4.1.0 or later), CLI output displays the QSFP breakout index for all switches in the fabric.</p> <p>When a fabric is running mixed mode (switches are running Network OS 4.1.0 or earlier), the QSFP breakout index is not displayed in the output on switches running Network OS versions earlier than v4.1.0. In such instances, the neighbor port WWN (Nbr-WWN) is displayed as <code>XX:XX:XX:XX:XX:XX:XX:XX</code>.</p> <p>This command displays ISL details, including the breakout index of the interface if breakout mode is configured on the source or neighbor interface.</p>

**Command Output** The **show fabric trunk** command displays the following information:

Output field	Description
Rbridge-id	RBridge ID of the switch. Valid values range from 1 through 239.
Trunk Group	Displays each trunking group on a switch. All ports that are part of this trunking group are displayed.
Src Index	Source index of the local RBridge.
Src Interface	Source interface of the local RBridge in the format "local-rbridge-id/slot/port". If the ISL is not up, then "?/?/?" displays for a Te interface and "-/-/" displays for an Fi interface.
Nbr Index	Neighbor Index of the ISL connected from local port. If the link is segmented and the neighbor RBridge details are unavailable, "?" displays in this field.
Nbr Interface	Neighbor interface of the ISL connected from the local RBridge in the format "nbr-rbridge-id/slot/port". If the ISL is not completely up, this field will be displayed as "?/?/?". If the ISL is not up, then "?/?/?" displays for a Te interface and "-/-/" displays for an Fi interface.
Nbr-WWN	Neighbor WWN of the switch. If the ISL is segmented and the neighbor RBridge details are not available, then "?:?:?:?:?:?:?:?:?:?" displays in this field.



**Examples** To display the fabric trunk information:

```
switch# show fabric trunk

Possible completions:
  all          all Rbridges in fabric
  rbridge-id  Syntax: rbridge-id [rbridge-id]
  |           Output modifiers
  <cr>
switch# show fabric trunk
```

```
Rbridge-id: 65
Trunk Src   Source          Nbr   Nbr
Group Index Interface        Index Interface      Nbr-WWN
-----
1      1      Te 65/0/1          1     Te 66/0/1        10:00:00:05:33:6F:27:57
1      2      Te 65/0/2          2     Te 66/0/2        10:00:00:05:33:6F:27:57
2      45     Te 65/0/45         21    Te 66/0/21       10:00:00:05:33:6F:27:57
2      47     Te 65/0/47         23    Te 66/0/23       10:00:00:05:33:6F:27:57
2      46     Te 65/0/46         22    Te 66/0/22       10:00:00:05:33:6F:27:57
```

This example displays trunk details and includes the breakout index of the neighbor interface in normal mode.

```
sw0# show fabric trunk
Rbridge-id: 1
Trunk Src   Source          Nbr   Nbr
Group Index Interface        Index Interface      Nbr-WWN
-----
1      74     Te 1/0/49:1        0     Te 48/0/49:1     XX:XX:XX:XX:XX:XX:XX:XX
1      76     Te 1/0/49:2        1     Te 48/0/49:2     XX:XX:XX:XX:XX:XX:XX:XX
1      80     Te 1/0/49:3        3     Te 48/0/49:3     XX:XX:XX:XX:XX:XX:XX:XX
1      78     Te 1/0/49:4        2     Te 48/0/49:4     XX:XX:XX:XX:XX:XX:XX:XX
Where XX:XX:XX:XX:XX:XX:XX:XX is the neighbor port WWN
```

This example displays trunk details and includes the breakout index of the neighbor interface in mixed mode running Network OS v4.0.0.

```
sw0# show fabric trunk
Rbridge-id: 1
Trunk Src   Source          Nbr   Nbr
Group Index Interface        Index Interface      Nbr-WWN
-----
1      74     Te 1/0/49          0     Te 48/0/49       XX:XX:XX:XX:XX:XX:XX:XX
1      76     Te 1/0/49          1     Te 48/0/49       XX:XX:XX:XX:XX:XX:XX:XX
1      80     Te 1/0/49          3     Te 48/0/49       XX:XX:XX:XX:XX:XX:XX:XX
1      78     Te 1/0/49          2     Te 48/0/49       XX:XX:XX:XX:XX:XX:XX:XX
```

This example displays trunk details and includes the breakout index of the neighbor interface in mixed mode running Network OS v4.1.0.

```
sw0# show fabric trunk
Rbridge-id: 1
Trunk Src   Source          Nbr   Nbr
Group Index Interface        Index Interface      Nbr-WWN
-----
1      74     Te 1/0/49:1        0     Te 48/0/49       XX:XX:XX:XX:XX:XX:XX:XX
1      76     Te 1/0/49:2        1     Te 48/0/49       XX:XX:XX:XX:XX:XX:XX:XX
1      80     Te 1/0/49:3        3     Te 48/0/49       XX:XX:XX:XX:XX:XX:XX:XX
1      78     Te 1/0/49:4        2     Te 48/0/49       XX:XX:XX:XX:XX:XX:XX:XX
```

**Related Commands** [fabric trunk enable](#), [show fabric isl](#), [show fabric islports](#)

## show fcoe fabric-map

Displays the FCoE fabric-map configuration globally in a fabric, or on a single RBridge.

**Syntax** `show fcoe fabric-map [ rbridge-id rbridge-id ]`

**Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples** To display the fabric-map configuration on all RBridges in the fabric:

```
switch# show fcoe fabric-map
```

```
=====
Fabric-Map      VLAN    VFID    Pri  FCMAP      FKA      Timeout
=====
default         1002[D] 128[D]  3[D] 0xefc00[D] 8000[D] Enabled[D]
```

To display the fabric-map configuration for a single RBridge:

```
switch# show fcoe fabric-map rbridge-id 19
```

```
=====
Fabric-Map      VLAN    VFID    Pri  FCMAP      FKA      Timeout
=====
default         1002[D] 128[D]  3[D] 0xefc00[D] 8000[D] Enabled[D]
```

**Related Commands** [fcoe-enodes](#), [show fcoe fcoe-enodes](#)

## show fcoe fcoe-enodes

Displays the FCoE enodes information for all or one RBridge IDs in the cluster.

**Syntax** `show fcoe fcoe-enodes [ rbridge-id number ]`

**Parameters** `rbridge-id number`  
 Defines which Rbridge ID information to display.

**Modes** Privileged EXEC mode

**Examples** The `show fcoe fcoe-enodes` command displays the following information:

```
switch# show fcoe fcoe-enodes
=====
Rbridge-id          Fcoe-enodes
=====
1                   64 [D]
2                   70
20                  100
26                  250
37                  1000
100                 0
Total number of fcoe-enodes in the cluster = 1484
```

The `show fcoe fcoe-enodes rbridge-id` command displays the following information:

```
switch# show fcoe fcoe-enodes rbridge-id 20
=====
Rbridge-id          Fcoe-enodes
=====
20                  100
Total number of fcoe-enodes in the cluster = 100.
```

History	Release version	Command history
	<i>Network OS v5.0.0</i>	This command was introduced.

**Related Commands** [show fcoe fabric-map, fcoe-enodes](#)

## show fcoe interface

Displays a synopsis of the FCoE interfaces.

**Syntax** `show fcoe interface [ brief | ethernet [ rbridge-id rbridge-id ] ]`

**Parameters** **brief**

Displays a brief synopsis of the configuration status.

**ethernet**

Displays the FCoE Ethernet Interface information.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show fcoe interface brief
```

```
=====
FCOE IF          Mode          Status          Binding          Num
                Config Current  Config          Proto           VN Ports
=====
1/12/1           VF           VF             Up              Down            Te 12/0/1       0
1/12/2           VF           VF             Up              Down            Te 12/0/2       0
1/12/3           VF           VF             Up              Down            Te 12/0/3       0
1/12/4           VF           VF             Up              Down            Te 12/0/4       0
1/12/5           VF           VF             Up              Down            Te 12/0/5       0
1/12/6           VF           VF             Up              Down            Te 12/0/6       0
1/12/7           VF           VF             Up              Down            Te 12/0/7       0
1/12/8           VF           VF             Up              Down            Te 12/0/8       0
1/12/9           VF           VF             Up              Down            Te 12/0/9       0
1/12/10          VF           VF             Up              Down            Te 12/0/10      0
1/12/11          VF           VF             Up              Down            Te 12/0/11      0
1/12/12          VF           VF             Up              Down            Te 12/0/12      0
1/12/13          VF           VF             Up              Down            Te 12/0/13      0
1/12/14          VF           VF             Up              Down            Te 12/0/14      0
1/12/15          VF           VF             Up              Down            Te 12/0/15      0
=====
```

## show fcoe login

Displays FCoE login information.

**Syntax** **show fcoe login** { **interface** [ **WORD** | **VN-Num** | **rbridge** | **port** ] } { **rbridge-id** *rbridge-id* } { **vfid** *vf\_id* } { **vlan** *vlan\_id* }

<b>Parameters</b>	<b>interface</b>	Displays logins for an FCoE interface
	<b>WORD</b>	Displays Word information.
	<b>VN-Num</b>	Displays VN-Num information.
	<b>rbridge</b>	Displays RBridge information.
	<b>port</b>	Displays port information.
	<b>rbridge-id</b> <i>rbridge-id</i>	Displays FCoE logins for a given RBridge ID.
	<b>vfid</b> <i>vf_id</i>	Displays logins for an FCoE virtual fabric. Valid values range from 1 through 4096.
	<b>vlan</b> <i>vlan_id</i>	Displays logins for an FCoE VLAN.

**Modes** Privileged EXEC mode

### Usage Guidelines

---

#### NOTE

The FCoE virtual fabric is not to be confused with the Virtual Fabrics feature that supports service or transport VFs.

---

## show fcoe map

Displays all FCoE maps, or a single map.

**Syntax** `show fcoe map [ default { rbridge-id rbridge-id } | rbridge-id rbridge-id ]`

**Parameters** **default**

The fabric map name. The only map name available is "default".

**rbridge-id rbridge-id**

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Usage Guidelines** The only map name allowed is "default."

**Examples**

```
switch# show fcoe map default
```

```
=====
Name                DCB-Map          FABRIC-MAP (s)
=====
default             default          default
=====
```

## show fcsp auth-secret dh-chap

Displays the switches (WWNs) for which a shared secret is configured.

**Syntax** `show fcsp auth-secret dh-chap`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported on the Brocade VDX 6740 and Brocade VDX 2740.

**Examples**

```
switch# show fcsp auth-secret dh-chap
10:00:00:05:1e:7a:c3:00
```

**Related Commands** [fcsp auth](#), [fcsp auth-secret dhchap](#), [show running-config fcsp auth](#)

## show fibrechannel login

Displays Fibre Channel logins or a specified fibrechannel interface or a specified RBridge ID..

**Syntax** `show fibrechannel login [ rbridge-id rbridge-id | interface fcoe-id ]`

**Parameters** *rbridge-id rbridge-id*

Specifies an RBridge ID.

*interface fcoe-id*

Specifies the FCoE interface name in VN-Num/RBridge-ID/port format of the Fibre Channel logins to display.

**Modes** Privileged EXEC mode

**Examples** To view all fibrechannels:

```
sw0# show fibrechannel login
=====
==
Interface      Index  PID      status      protocol  speed      PortWWN
=====
==
Fi 17/0/3      2      110146   up(In_Sync ) up        4G Auto    2e:83:00:05:33:26:14:26
Fi 17/0/3      2      110145   up(In_Sync ) up        4G Auto    2d:07:00:05:33:26:14:26
Fi 17/0/3      2      110144   up(In_Sync ) up        4G Auto    2e:fc:00:05:33:26:14:26
Fi 17/0/3      2      110143   up(In_Sync ) up        4G Auto    20:74:00:05:33:26:14:26
Fi 17/0/3      2      110142   up(In_Sync ) up        4G Auto    26:0a:00:05:33:26:14:26
Fi 17/0/3      2      110141   up(In_Sync ) up        4G Auto    28:2d:00:05:33:26:14:26
Fi 17/0/3      2      110140   up(In_Sync ) up        4G Auto    10:00:00:05:33:26:14:26
Fi 17/0/4      3      110100   up(In_Sync ) up        4G Auto    10:00:00:05:33:26:14:27
Total number of Login(s) = 8
```

To view fibrechannel logins for an RBridge:

```
sw0# show fibrechannel login rbridge-id 17
=====
==
Interface      Index  PID      status      protocol  speed      PortWWN
=====
==
Fi 17/0/3      2      110146   up(In_Sync ) up        4G Auto    2e:83:00:05:33:26:14:26
Fi 17/0/3      2      110145   up(In_Sync ) up        4G Auto    2d:07:00:05:33:26:14:26
Fi 17/0/3      2      110144   up(In_Sync ) up        4G Auto    2e:fc:00:05:33:26:14:26
Fi 17/0/3      2      110143   up(In_Sync ) up        4G Auto    20:74:00:05:33:26:14:26
Fi 17/0/3      2      110142   up(In_Sync ) up        4G Auto    26:0a:00:05:33:26:14:26
Fi 17/0/3      2      110141   up(In_Sync ) up        4G Auto    28:2d:00:05:33:26:14:26
Fi 17/0/3      2      110140   up(In_Sync ) up        4G Auto    10:00:00:05:33:26:14:26
Fi 17/0/4      3      110100   up(In_Sync ) up        4G Auto    10:00:00:05:33:26:14:27
Total number of Login(s) = 8
```

To view fibrechannel logins on an interface:

```
sw0# show fibrechannel login interface 17/0/3
=====
==
Interface      Index  PID      status      protocol  speed      PortWWN
=====
==
Fi 17/0/3      2      110146   up(In_Sync ) up        4G Auto    2e:83:00:05:33:26:14:26
Fi 17/0/3      2      110145   up(In_Sync ) up        4G Auto    2d:07:00:05:33:26:14:26
Fi 17/0/3      2      110144   up(In_Sync ) up        4G Auto    2e:fc:00:05:33:26:14:26
Fi 17/0/3      2      110143   up(In_Sync ) up        4G Auto    20:74:00:05:33:26:14:26
Fi 17/0/3      2      110142   up(In_Sync ) up        4G Auto    26:0a:00:05:33:26:14:26
Fi 17/0/3      2      110141   up(In_Sync ) up        4G Auto    28:2d:00:05:33:26:14:26
Fi 17/0/3      2      110140   up(In_Sync ) up        4G Auto    10:00:00:05:33:26:14:26
Total number of Login(s) = 7
```



# show file

Displays the contents of a file in the local flash memory.

**Syntax** `show file filename`

**Parameters** `filename`  
The name of the file to be displayed.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

**Examples** To display the contents of the startup configuration file:

```
switch# show file startup-config-copy

diag post rbridge-id 237
no enable
!
linecard 2 LC48x10G
linecard 4 LC48x10G
class-map default
match any
!
logging rbridge-id 237
  raslog console INFO
!
logging auditlog class SECURITY
logging auditlog class CONFIGURATION
logging auditlog class FIRMWARE
logging syslog-facility local LOG_LOCAL7
switch-attributes 237
chassis-name VDX8770-4
host-name sw0
!
support rbridge-id 237
ffdc
!
snmp-server contact "Field Support."
snmp-server location "End User Premise."
snmp-server sys-descr "Brocade VDX Switch."
snmp-server community ConvergedNetwork
snmp-server community OrigEquipMfr rw
snmp-server community "Secret C0de" rw
snmp-server community common
snmp-server community private rw
snmp-server community public
snmp-server host 172.26.3.84 public
udp-port 5000
severity-level Info
!
(Output truncated)
```

**Related Commands** [copy](#), [delete](#), [dir](#), [rename](#)

## show fips

Displays the current FIPS configuration.

**Syntax** **show fips**

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display whether FIPS self tests are enabled, and whether the root account is disabled.

**Examples** To display the FIPS enabled status:

```
switch# show fips  
  
FIPS Selftests: Enabled  
Root account: Disabled
```

**Related Commands** [fips selftests](#), [fips zeroize](#), [prom-access disable](#), [unhide fips](#)

# show firmwaredownloadhistory

Displays the firmware download history for the switches.

**Syntax** `show firmwaredownloadhistory [ rbridge-id { rbridge-id | all } ]`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

***rbridge-id***

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** The log records the date and time of the firmware download, the switch name, slot number, process ID and firmware version.

Use this command to display information for the local management module only.

**Examples** To display the firmware download history:

```
switch# show firmwaredownloadhistory
Firmware version history
Sno Date & Time                Switch Name Slot PID OS Version
1   Thu May  2 05:00:08 2013    sw0         0   1561 nos4.0.0
2   Wed May  1 07:44:43 2013    sw0         0   1551 nos3.0.1
```

**Related Commands** [show version](#)

## show firmwaredownloadstatus

Displays the firmware download activity log.

<b>Syntax</b>	<b>show firmwaredownloadstatus [ <i>brief</i> ] [ <i>summary</i> ] [ <i>rbridge-id</i> { <i>rbridge-id</i>   <i>all</i> } ]</b>
<b>Parameters</b>	<p><b>brief</b> Displays only the last entry of the firmware download event log.</p> <p><b>summary</b> Displays a high-level summary of the firmware download status.</p> <p><b>rbridge-id</b> Specifies an RBridge or all RBridges.</p> <p><b><i>rbridge-id</i></b> Specifies an RBridge ID.</p> <p><b>all</b> Specifies all RBridges.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Use this command to display an event log that records the progress and status of events that occur during a firmware download. The event log is created by the <b>firmware download</b> command and is retained until you issue another <b>firmware download</b> command. A time stamp is associated with each event.</p> <p>The <b>rbridge-id</b> parameter is supported in VCS mode only.</p> <p>The output varies depending on the hardware platform.</p>
<b>Examples</b>	To display the firmware download event log on a Brocade VDX 8770-4:

```
switch# show firmwaredownloadstatus

[1]: Tue Mar  6 04:05:20 2012
Slot M1: Firmware install begins.

[2]: Tue Mar  6 04:09:02 2012
Slot M1: Firmware install ends.

[3]: Tue Mar  6 04:09:02 2012
Slot M2: Firmware install begins.

[4]: Tue Mar  6 04:12:08 2012
Slot M2: Firmware install ends.

[5]: Tue Mar  6 04:12:09 2012
Slot M1: Firmware starts to swap.

[6]: Tue Mar  6 04:12:09 2012
Slot M2: Firmware starts to swap.
(Output truncated)
```

To display a condensed version of the firmware download status:

```
switch# show firmwaredownloadstatus brief

[35]: Tue Mar  6 04:23:10 2012
Slot M1: Firmware is downloaded successfully.
```

To display a high-level summary of the firmware download status:

```
switch# show firmwaredownloadstatus summary rbridge-id 1-4
Rid 1: INSTALLING
Rid 2: INSTALLED (Ready for activation)
Rid 3: COMMITTING
Rid 4: COMMITED
```

**Related Commands**    [firmware activate](#), [firmware commit](#), [firmware download](#), [firmware download logical-chassis](#), [firmware recover](#), [firmware restore](#), [show version](#)

show global-running-config

## show global-running-config

Displays the global running configuration for a node.

**Syntax** `show global-running-config`

**Modes** Privileged EXEC mode

**Examples** The following example shows partial output for this command:

```

switch# show global-running-config
logging raslog console INFO
logging auditlog class SECURITY
logging auditlog class CONFIGURATION
logging auditlog class FIRMWARE
logging syslog-facility local LOG_LOCAL7
no support autoupload enable
support ffdc
snmp-server contact "Field Support."
snmp-server location "End User Premise."
snmp-server sys-descr "Brocade VDX Switch."
snmp-server community ConvergedNetwork
snmp-server community OrigEquipMfr rw
snmp-server community "Secret C0de" rw
snmp-server community common
snmp-server community private rw
snmp-server community public
snmp-server user snmpadmin1 groupname snmpadmin
snmp-server user snmpadmin2 groupname snmpadmin
snmp-server user snmpadmin3 groupname snmpadmin
snmp-server user snmpuser1
snmp-server user snmpuser2
snmp-server user snmpuser3
line vty
  exec-timeout 10
!
zoning enabled-configuration cfg-name ""
zoning enabled-configuration default-zone-access allaccess
zoning enabled-configuration cfg-action cfg-save
role name admin desc Administrator
role name user desc User
aaa authentication login local
aaa accounting exec default start-stop none
aaa accounting commands default start-stop none
service password-encryption
username admin password "BwrsDbB+tABWGwPINOVKoQ==\n" encryption-level 7 role admin
desc Administrator
username user password "BwrsDbB+tABWGwPINOVKoQ==\n" encryption-level 7 role user desc
User
cee-map default
  precedence 1
  priority-group-table 1 weight 40 pfc on
  priority-group-table 15.0 pfc off
  priority-group-table 15.1 pfc off
  priority-group-table 15.2 pfc off
  priority-group-table 15.3 pfc off
  priority-group-table 15.4 pfc off
  priority-group-table 15.5 pfc off
  priority-group-table 15.6 pfc off
  priority-group-table 15.7 pfc off
  priority-group-table 2 weight 60 pfc off
  priority-table 2 2 2 1 2 2 2 15.0
  remap fabric-priority priority 0
  remap lossless-priority priority 0
!
fcoe
  fabric-map default
    vlan 1002
    priority 3
    virtual-fabric 128
    fcmmap 0E:FC:00
    max-enodes 64
    advertisement interval 8000
    keep-alive timeout
  !
  map default
    fabric-map default
    cee-map default
  !
!
interface Vlan 1
  shutdown
!
interface Vlan 123
  shutdown
protocol lldp

```

## Show commands

```
advertise dcbx-fcoe-app-tlv
advertise dcbx-fcoe-logical-link-tlv
advertise dcbx-tlv
system-description Brocade-VDX-VCS 300
!
vlan dot1q tag native
port-profile default
vlan-profile
  switchport
  switchport mode trunk
  switchport trunk allowed vlan all
  switchport trunk native-vlan 1
!
class-map cee
class-map default
```

### Related Commands

[show rbridge-running config](#), [show rbridge-local-running-config](#)



# show ha

Displays the High Availability (HA) status of the management modules.

---

## NOTE

HA is not supported in this release. All failover is disruptive. The HA commands are provided for consistency and future expansion.

---

### Draft comment:

<<<SME Is **show ha** supported yet? When I enter this command, I get the following:

```
M8-122# show ha ?
Possible completions:
  all-partitions    verbose chassis HA information
  |                Output modifiers
  <cr>
M8-122# show ha
application communication failure
```

**Syntax** `show ha [ all-partitions ] [ rbridge-id { rbridge-id } all ]`

### Parameters

**all-partitions** Displays the HA status for all partitions.

**rbridge-id** Specifies an RBridge or all RBridges.

*rbridge-id* Specifies an RBridge ID.

**all** Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** If a failover becomes necessary while the management modules are not in sync, the standby management module reboots, and the failover is disruptive.

**Command Output** The **show ha** command displays the following information:

Output field	Description
Local MM state	warm or cold, recovering or recovered
Remote MM state	warm or cold, recovering or recovered, or not available
High Availability	enabled or disabled
Heartbeat	up or down

Output field	Description
Health of standby management module	<p>The health of the standby CP is defined as follows:</p> <ul style="list-style-type: none"> <li>• <b>Healthy</b>—The standby management module is running and the background health diagnostic has not detected any errors.</li> <li>• <b>Failed</b>—The standby is running, but the background health diagnostic has discovered a problem with the blade. Check the logs to determine the appropriate action.</li> <li>• <b>Unknown</b>—The standby management module's health state is unknown because of one of the following reasons: the standby CP does not exist, Heartbeat is down, or the Health Monitor has detected a configuration file error.</li> </ul>
HA synchronization status	<p>The High Availability synchronization status is defined as follows:</p> <ul style="list-style-type: none"> <li>• <b>HA State synchronized</b>The system is fully synchronized. If a failover becomes necessary, it is non-disruptive.</li> <li>• <b>HA State not in sync</b>—The system is unable to synchronize the two management modules. This may be caused by one or more of the following conditions: <ul style="list-style-type: none"> <li>- A failover is in process but not completed.</li> <li>- The standby management module is faulty.</li> <li>- A system error occurred.</li> </ul> </li> </ul>

**Examples** To display HA status:

```
switch# show ha
```

```
Local (M2): Active, Cold Recovered
Remote (M1): Standby, Healthy
HA enabled, Heartbeat Up, HA State synchronized
```

To display HA status for all partitions:

```
switch# show ha all-partitions
Local (M2): Active, Cold Recovered
Remote (M1): Standby, Healthy
HA enabled, Heartbeat Up, HA State synchronized
L2/0: Active, Cold Recovered, Dual Partitions, Redundant, State in sync
    1: Standby, Dual Partitions, Redundant, State in sync
```

**Related Commands**

[ha disable](#), [ha enable](#), [ha failover](#)

# show hardware connector-group

Displays all of the connector groups and the corresponding flexports in the groups.

**Syntax** `show hardware connector-group`

**Modes** Privileged EXEC mode

**Examples** The `show hardware connector-group` command displays the following information:

```
switch# show hardware connector-group
Connector-group  Flexports
1/0/1           1-8
1/0/3           17-24
1/0/5           33-40
1/0/6           41-48
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## show hardware-profile

Displays the route table and TCAM profiles in the running configuration, as well as the current active profile information and subtype details for each profile type and RBridge ID.

<b>Syntax</b>	<b>show hardware-profile</b> { <b>current</b> [ <b>rbridge-id</b> [ <i>rbridge-id</i>   <b>all</b> ] ]   <b>route-table</b> { <b>default</b>   <b>ipv4-max-route</b>   <b>ipv4-max-arp</b>   <b>ipv4-min-v6</b>   <b>ipv6-max-route</b>   <b>ipv6-max-nd</b> }   <b>tcam</b> { <b>default</b>   <b>ipv4-max-route</b>   <b>ipv4-max-arp</b>   <b>ipv4-min-v6</b>   <b>ipv6-max-route</b>   <b>ipv6-max-nd</b> } }
<b>Parameters</b>	<p><b>current</b> Displays current active profile information. This option is available only in fabric cluster mode.</p> <p><b>rbridge-id</b> Specifies an RBridge ID or all RBridge IDs.</p> <p><i>rbridge-id</i> Range is from 1 through 239. This option is available only in logical chassis cluster mode.</p> <p><b>all</b> Specifies all RBridge IDs.</p> <p><b>route-table</b> Specifies hardware resources for route profiles.</p> <p><b>default</b> Specifies IPv4/IPv6 resources for dual-stack operations.</p> <p><b>ipv4-max-route</b> Specifies resources for the maximum number of IPv4 routes.</p> <p><b>ipv4-max-arp</b> Specifies resources for the maximum number of IPv4 ARP entries.</p> <p><b>ipv4-min-v6</b> Specifies resources for IPv4 routes in dual-stack configurations.</p> <p><b>ipv6-max-route</b> Specifies resources for the maximum number of IPv6 routes.</p> <p><b>ipv6-max-nd</b> Specifies resources for the maximum number of IPv6 Neighbor Discovery entries.</p> <p><b>tcam</b> Specifies hardware resources for TCAM profiles.</p> <p><b>default</b> Specifies resources with basic support for all applications.</p> <p><b>l2-ipv4-acl</b> Specifies resources for Layer 2 and IPv4 ACLs.</p> <p><b>ipv4-v6-pbr</b> Specifies resources for IPv4 and IPv6 ACLs and policy-based routing tables.</p> <p><b>ipv4-v6-qos</b> Specifies resources for IPv4 and IPv6 ACLs and QoS.</p> <p><b>ipv4-v6-mcast</b> Specifies resources for multicast.</p> <p><b>l2-acl-qos</b> Specifies resources for Layer 2 ACLs and QoS.</p>

**Modes** Privileged EXEC mode

### Usage Guidelines

**Examples** The following example shows the use of the **show hardware-profile** command in fabric cluster mode, with the **current** keyword to show the results of a default profile on a Brocade VDX 6740.

```
switch# show hardware-profile current

rbridge-id: 1          switch type: BR-VDX6740

current route-table profile:                                DEFAULT
-----
1024                  IPv4 Max Routes                                4096
                      Max Next-hops                                1024
                      IPv6 Max Routes
                      IPv4 Max Neighbor cache (ARPs)             16384
                      IPv6 Max Neighbor cache (ND)                4096
IPV4 Max Multicast Routes                                1024
IPV6 Max Multicast Routes                                100
IGMP Snooping Entries                                  1024
MLD Snooping Entries                                  1024
    PIM IPv4 Register Encap Entries                      1024
    PIM IPv4 Register Decap Entries                     1024
    PIM IPv6 Register Encap Entries                      1024
    PIM IPv6 Register Decap Entries                     1024
FCoE Domain Routes and SAN routing 2048

current TCAM profile:                                     DEFAULT
-----
LDEV_L2PSEL_SYS                                         512
LDEV_L2PSEL_FCOE                                         512
LDEV_L2PSEL_QOS                                         512
LDEV_L2PSEL_FWD                                         512
LDEV_L2PSEL_ACL                                         512
LDEV_IPV4PSEL_QOS                                       512
LDEV_IPV4PSEL_MCAST                                    3072
LDEV_IPV4PSEL_PBR                                       512
LDEV_IPV4PSEL_ACL                                       512
LDEV_L3PSEL_FCOE                                       512
LDEV_L3FWD_IPV4                                         4096
LDEV_L3FWD_FCOE                                         2048
LDEV_L3FWD_IPV6                                         1024
LDEV_L2EACL                                             128
LDEV_L2EACL_SPAN                                       256
LDEV_IPV4EACL                                           512
LDEV_FCOEEACL                                           128
LDEV_IPV4_MCUID_OVFLW                                   2048
LDEV_L2_MAC_CLASS_VID                                  256
LDEV_ING_VPN_CLASS                                      4096
LDEV_L3CTRL_CLASS                                       128
LDEV_TYPE_VLAN_CLASS                                   256
```

### History

Release version	Command history
Network OS v5.0.0	This command was introduced.

## show history

Displays the history of commands executed on the switch.

**Syntax** `show history [ number ]`

**Parameters** *number*

The number of commands to display. If you omit this value, all commands are displayed.

**Modes** Privileged EXEC mode

**Examples** Typical command output display.

```
switch# show history
21:10:20 -- show arp vrf test
21:35:57 -- show ip
21:38:03 -- show arp vrf name
21:38:14 -- show access-
21:39:07 -- show access-list-log
21:39:18 -- show capture
21:48:53 -- show b int po
21:48:57 -- show bp
21:53:12 -- show cli
21:53:46 -- show cli
21:54:37 -- show cli
22:05:36 -- show confd-state cli listen ssh ip port
```

# show interface

Displays the detailed interface configuration and capabilities of all interfaces or for a specific interface.

<b>Syntax</b>	<b>show interface</b> [ <b>fibrenchannel</b> <i>rbridge-id/slot/port</i>   <b>management</b> <i>rbridge-id/slot/port</i>   <b>fcoe</b> [ <i>vn-number/rbridge-id/front-port-number</i>   <b>rbridge-id</b> <i>rbridge-id</i> ]   <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>loopback number</b>   <b>port-channel number</b>   <b>stats</b> <i>rbridge-id/slot/port</i>   <b>switchport</b>   <b>vlan</b> <i>vlan_id</i> }
<b>Parameters</b>	<p><b>fibrenchannel</b></p> <p>See <b>show interface FibreChannel</b>.</p> <p><b>rbridge-id</b></p> <p>Specifies an RBridge ID.</p> <p><b>slot</b></p> <p>Specifies a valid slot number.</p> <p><b>port</b></p> <p>Specifies a valid port number.</p> <p><b>loopback number</b></p> <p>Specifies a loopback interface.</p> <p><b>rbridge-id</b></p> <p>Specifies an RBridge ID.</p> <p><b>slot</b></p> <p>Specifies a valid slot number.</p> <p><b>port</b></p> <p>Specifies a valid port number.</p> <p><b>management</b></p> <p>See <b>show interface management</b>.</p> <p><b>fcoe</b></p> <p>Specifies FCoE interfaces.</p> <p><b>vn-number</b></p> <p>Specifies the VN number for FCoE.</p> <p><b>rbridge-id</b></p> <p>Specifies an RBridge ID.</p> <p><b>front-port-number</b></p> <p>Specifies the front port number.</p> <p><b>rbridge-idrbridge-id</b></p> <p>Specifies an RBridge ID.</p> <p><b>&lt;N&gt; gigabitethernet</b></p> <p>Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b></p> <p>Specifies an RBridge ID.</p> <p><b>slot</b></p> <p>Specifies a valid slot number.</p> <p><b>port</b></p> <p>Specifies a valid port number.</p> <p><b>port-channel number</b></p>

Specifies to display the port-channel number. Valid values range from 1 through 63.

**stats**

See **show interface stats**.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**switchport**

Specifies to display information for Layer 2 interfaces.

**vlan vlan\_id**

Specifies a VLAN interface.

**Modes** Privileged EXEC mode

**Usage Guidelines** If **show interface loopback** is executed in logical chassis cluster mode, loopback interfaces are not shown.

**Examples** To display detailed information for the 10-gigabit Ethernet interface 1/0/1:

```
switch# show interface tengigabitethernet 1/0/1

Ten Gigabit Ethernet 1/0/1 is admin down, line protocol is down (admin down)
Hardware is Ethernet, address is 0005.1e76.1aa5
Current address is 0005.1e76.1aa5
Pluggable media present, Media type is sfp
Wavelength is 850 nm
Interface index (ifindex) is 67174401
MTU 2500 bytes
LineSpeed: 10000 Mbit, Duplex: Full
Flowcontrol rx: on, tx: on
Last clearing of show interface counters: 00:02:18
Queueing strategy: fifo
Receive Statistics:
0 packets, 0 bytes
Unicasts: 0, Multicasts: 0, Broadcasts: 0
64-byte pkts: 0, Over 64-byte pkts: 0, Over 127-byte pkts: 0
Over 255-byte pkts: 0, Over 511-byte pkts: 0, Over 1023-byte pkts: 0
Over 1518-byte pkts(Jumbo): 0
Runts: 0, Jabbers: 0, CRC: 0, Overruns: 0
Errors: 0, Discards: 0
Transmit Statistics:
0 packets, 0 bytes
Unicasts: 0, Multicasts: 0, Broadcasts: 0
Underruns: 0
Errors: 0, Discards: 0
Rate info:
Input 0.000000 Mbits/sec, 0 packets/sec, 0.00% of line-rate
Output 0.000000 Mbits/sec, 0 packets/sec, 0.00% of line-rate
Time since last interface status change: 00:02:17
```



To display detailed information for a 1-gigabit Ethernet interface:

```
switch# show interface gigabitethernet 1/0/2

Gigabit Ethernet 1/0/2 is up, line protocol is up (connected)
Hardware is Ethernet, address is 0005.1e76.1aa5
Current address is 0005.3313.ac7f
Fixed copper RJ-45 media present
Interface index (ifindex) is 4697661440
MTU 2500 bytes
LineSpeed: 1000 Mbit, Duplex: Full
Flowcontrol rx: off, tx: off
Last clearing of show interface counters: 1d12h37m
Queueing strategy: fifo
Receive Statistics:
0 packets, 0 bytes
Unicasts: 0, Multicasts: 0, Broadcasts: 0
64-byte pkts: 0, Over 64-byte pkts: 0, Over 127-byte pkts: 0
Over 255-byte pkts: 0, Over 511-byte pkts: 0, Over 1023-byte pkts: 0
Over 1518-byte pkts(Jumbo): 0
Runts: 0, Jabbers: 0, CRC: 0, Overruns: 0
Errors: 0, Discards: 0
Transmit Statistics:
4425 packets, 513300 bytes
Unicasts: 4425, Multicasts: 0, Broadcasts: 0
Underruns: 0
Errors: 0, Discards: 0
Rate info:
Input 0.000000 Mbits/sec, 0 packets/sec, 0.00% of line-rate
Output 0.000000 Mbits/sec, 0 packets/sec, 0.00% of line-rate
Time since last interface status change: 15:14:13
```

To display Layer 2 information for all interfaces:

```
switch# show interface switchport

Interface name      : Ten Gigabit Ethernet 1/0/8
Switchport mode    : access
Ingress filter      : enable
Acceptable frame types : all
Default Vlan       : 1
Active Vlans        : 1
Inactive Vlans     : -
Interface name      : Ten Gigabit Ethernet 1/0/19
Switchport mode    : hybrid
Ingress filter      : enable
Acceptable frame types : all
Default Vlan       : 1
Active Vlans        : 1
Inactive Vlans     : 100
Interface name      : Ten Gigabit Ethernet 1/0/20
Switchport mode    : trunk
Ingress filter      : enable
Acceptable frame types : vlan-tagged only
Default Vlan       : 0
Active Vlans        : 1
Inactive Vlans     : -
```

#### Related Commands

[show interface FibreChannel](#), [show interface management](#), [show ip interface](#)

## show interface description

Displays the interface description.

**Syntax** `show interface description [ rbridge-id rbridge-id | range | all ]`

**Parameters** `rbridge-id rbridge-id`

The unique identifier for a switch, or set of switches. The range of valid values is from 1 through 239.

***range***

A range of *rbridge-id* values. The range string can be discontinuous, such as "1-3,5".

**all**

Selects all of the members of the logical chassis cluster.

**Modes** Privileged EXEC mode

**Examples** Typical command output:

```
switch# show interface description
-----
Port                Type    Speed  Description
-----
Te 1/0/1            eth     10G    appcl12-c9c06-a05-swid1105-m1-sw
Te 1/0/2            eth     10G    --
Te 1/0/3            eth     10G    --
-----
Interface           Description
-----
Po 11                TO:appcl12-c9c06-a06-swid1106-sw-slot104
Po 12                TO:appcl12-c9c06-a06-swid1106-sw-slot105
```

# show interface FibreChannel

Displays the up or down status of the port and of the Fibre Channel protocol, whether pluggable media are present, and additional configuration information.

## Syntax

### Draft comment:

<<<TW Last implementation by Jonny, on Mon. Jul. 7.

**show interface FibreChannel** *rbridge-id/slot/port* [ **detail** ]

## Parameters

***rbridge-id***

Specifies an RBridge ID.

***slot***

Specifies a valid slot number.

***port***

Specifies a valid port number.

***detail***

Displays detailed error and statistics counters.

## Modes

Privileged EXEC mode

## Usage Guidelines

This command applies only to Brocade VDX 6730 switches.

## Command Output

General **show interface FibreChannel** command configuration information:

Output field	Description
LineSpeed	Actual Operating speed of the port.
PortSpeed	Fixed speed of the port.
portDisableReason	The reason the port is disabled.

Following the general information, the command displays three columns of counters. The first column shows interrupt statistics:

Output field	Description
Interrupts	Total number of interrupts.
Unknown	Interrupts that are not counted elsewhere.
Lli	Low-level interface (physical state, primitive sequences).
Proc_rqrd	Frames delivered for embedded N_Port processing.
Timed_out	Frames that have timed out.
Rx_flushed	Frames requiring translation.
Tx_unavail	Frames returned from an unavailable transmitter.
Free_buffer	Free buffer available interrupts.
Overrun	Buffer overrun interrupts.
2_parity_err	Secondary transmission parity errors.

Output field	Description
Suspended	Transmission suspended interrupts.
Parity_err	Central memory parity errors.

The second column displays link error status block counters:

Output field	Description
Link_failure	Link failures
Loss_of_sync	Synchronization losses
Loss_of_sig	Signal losses
Protocol_err	Protocol errors
Invalid_word	Invalid words
Invalid_crc	Cyclic redundancy errors
Delim_err	Delimiter errors
Address_err	Addressing errors
Lr_in	Line resets in
Li_out	Line resets out
Ols_in	Offline primitive sequences in
Ols_out	Offline primitive sequences out

The third column shows the number of transmitted frames rejected and busied:

Output field	Description
Frjt	Transmitted frames rejected.
Fbsy	Transmitted frames busied.

After this, some transmission rate information is displayed:

Output field	Description
Bandwidth	Bandwidth of the port.
Tx performance	Bytes per second transmitted.
Rx performance	Bytes per second received.

When used with the **detail** parameter, this command also reports the following receive statistics, transmit statistics, error statistics, and port error information.

Output field	Description
stat_wrx	4-byte words received.
stat_frx	Frames received.

Output field	Description
stat_c2_fr	Class 2 frames received.
stat_c3_fr	Class 3 frames received.
stat_lc_rx	Link control frames received.
stat_mc_rx	Multicast frames received.
stat_wtx	4-byte words transmitted.
stat_ftx	Frames transmitted.
stat_mc_tx	Multicast frames transmitted.
tim_txcrd_z	The number of times that the port was unable to transmit frames because the transmit buffer-to-buffer (BB) credit was zero. The purpose of this statistic is to detect congestion or a device affected by latency. This parameter is sampled at intervals of 2.5 microseconds, and the counter is incremented if the condition is true. Each sample represents 2.5 microseconds of time with 0 Tx BB Credit. An increment of this counter means that the frames could not be sent to the attached device for 2.5 microseconds, indicating degraded performance.
er_enc_in	Encoding errors inside frames.
er_crc	Frames with cyclic redundancy check (CRC) errors.
er_trunc	Frames shorter than the minimum frame length.
er_toolong	Frames longer than the maximum frame length.
er_bad_eof	Frames with bad end-of-frame.
er_enc_out	Encoding error outside frames.
er_bad_os	Invalid ordered sets (platform-specific and port-specific).
er_rx_c3_timeout	Receive class 3 frames received at this port and discarded at the transmission port due to timeout (platform-specific and port-specific).
er_tx_c3_timeout	Transmit class 3 frames discarded at the transmission port due to timeout (platform-specific and port-specific).
er_c3_dest_unreach	Class 3 frames discarded because the transmit port, although it is determined, cannot send the frame at the moment when the error occurs.
er_other_discard	Other discards due to route lookup failures or other reasons.
er_type1_miss	FCR frames with transmit errors.
er_type2_miss	Frames with routing errors.
er_type6_miss	FCR frames with receive errors.
er_zone_miss	Frames discarded due to hard zoning miss. Hardware zoning enforcement is not supported currently.
er_lun_zone_miss	Frames discarded due to zoning miss. LUN zoning is not supported currently.
er_crc_good_eof	CRC errors with good end-of-frame (EOF).
er_inv_arb	Invalid ARBs.
Loss_of_sync	Link synchronization errors.

Output field	Description
Loss_of_sig	Link loss-of-signal errors.
Frjt	Transmitted frames rejected.
Fbsy	Transmitted frames busied.

Buffer information:

Output field	Description
Lx Mode	<ul style="list-style-type: none"> <li>L0—Link not in long-distance mode.</li> <li>LD—Link is from 5 km through 10 km.</li> <li>LE—Distance is determined dynamically.</li> <li>LS—Distance is determined statically by user.</li> </ul>
Max/Resv	Buffers The maximum or reserved number of buffers that are allocated to the port based on the estimated distance (as defined by the desire-distance command). If the port is not configured in long distance mode, some systems might reserve buffers for the port. This field then displays the number of buffers reserved for the port.
Buffer Usage	The actual number of buffers allocated to the port. In LD mode, the number is determined by the actual distance and the user-specified desired distance (as defined by the desired-distance command).
Needed Buffers	The number of buffers needed to utilize the port at full bandwidth (depending on the port configuration). If the number of Buffer Usage is less than the number of Needed Buffers, the port is operating in the buffer limited mode.
Link Distance	For L0 (not in long distance mode), the command displays the fixed distance based on port speed, for instance: 10 km (1 Gbps), 5 km (2 Gbps), 2 km (4 Gbps), or 1 km (8 Gbps). For static long distance mode (LE), the fixed distance of 10 km displays. For LD mode, Brocade switches use a proprietary algorithm to estimate distance across an ISL. LD mode supports distances up to 500 km. Distance measurement on a link longer than 500 km might not be accurate. If the connecting port does not support LD mode, is shows "N/A".
Remaining Buffers	The remaining (unallocated and reserved) buffers in a port group.

#### NOTE

A hyphen in one of the Buffer information display fields indicates that no relevant information is available; there may be no connection to a port, or the port is disabled, or the port is not an E\_Port.

**Examples** To view Fibre Channel port statistics:

```
switch# show interface FibreChannel 66/0/1
fibrechannel 66/0/1 is up. Protocol state is up (connected)
Pluggable media present
LineSpeed Actual: 400,800_MB/s
PortSpeed: N8Gbps
portDisableReason: None
PortId: 427900
PortIfId: 4302303f
PortWwn: 20:79:00:05:33:67:26:78
Distance: normal
Last clearing of show interface counters: 00:00:00
Interrupts: 0 Link_failure: 0 Frjt: 0
Unknown: 0 Loss_of_sync: 1 Fbsy: 0
Lli: 9 Loss_of_sig: 2
Proc_rqrd: 5 Protocol_err: 0
Timed_out: 0 Invalid_word: 0
Rx_flushed: 0 Invalid_crc: 0
Tx_unavail: 0 Delim_err: 0
Free_buffer: 0 Address_err: 0
OverRun: 0 Lr_in: 1
Suspended: 0 Lr_out: 1
Parity_err: 0 Ols_in: 0
2_parity_err: 0 Ols_out: 1
Rate info:
Bandwidth: 8.00G
Tx performance: 0 B/sec
Rx performance: 0 B/sec
```

To view Fibre Channel port statistics details:

```

switch# show interface FibreChannel 66/0/1 detail
fibrechannel 66/0/1 is up. Protocol state is up (connected)
Pluggable media present
LineSpeed Actual: 400,800_MB/s
portSpeed: N8Gbps
portDisableReason: None
portId 423100
portIfId: 43020026
portWwn: 20:31:00:05:33:6f:27:57
Distance normal
Last clearing of show interface counters: 00:00:00
Rx Statistics:
stat_wrx 118 4-byte words received
stat_frx 4 Frames received
stat_c2_frx 0 Class 2 frames received
stat_c3_frx 0 Class 3 frames received
stat_lc_rx 2 Link control frames received
stat_mc_rx 0 Multicast frames received
Tx Statistics:
stat_wtx 282 4-byte words transmitted
stat_ftx 12 Frames transmitted
stat_mc_tx 0 Multicast frames transmitted
tim_txcrd_z 2881 Time TX Credit Zero (2.5Us ticks)
tim_txcrd_z_vc 0- 3: 2881 0 0 0
tim_txcrd_z_vc 4- 7: 0 0 0 0
tim_txcrd_z_vc 8-11: 0 0 0 0
tim_txcrd_z_vc 12-15: 0 0 0 0
Error Statistics
er_enc_in 0 Encoding errors inside of frames
er_crc 0 Frames with CRC errors
er_trunc 0 Frames shorter than minimum
er_toolong 0 Frames longer than maximum
er_bad_eof 0 Frames with bad end-of-frame
er_enc_out 0 Encoding error outside of frames
er_bad_os 1 Invalid ordered set
er_rx_c3_timeout 0 Class 3 receive frames discarded due to timeout
er_tx_c3_timeout 0 Class 3 transmit frames discarded due to timeout
er_c3_dest_unreach 0 Class 3 frames discarded due to destination
er_type2_miss 0 frames with FTB Type 2 miss
er_type6_miss 0 frames with FTB type 6 miss
er_zone_miss 0 frames with hard zoning miss
er_lun_zone_miss 0 frames with LUN zoning miss
er_crc_good_eof 0 Crc error with good eof
er_inv_arb 0 Invalid ARB
Port Error Info:
Loss_of_sync:1
Loss_of_sig:2
Frjt:0
Fbsy:0
Buffer Information:
Lx Max/Resv Buffer Needed Link Remaining
Mode Buffers Usage Buffers Distance Buffers
=====
- 8 0 0 - 924
Rate info:
Bandwidth: 8.00G
Tx performance: 0 B/sec
Rx performance: 0 B/sec

```

**Related  
Commands**

[show running-config interface FibreChannel](#)



# show interface management

Displays information related to a management interface.

<b>Syntax</b>	<b>show interface management</b> [ <i>rbridge-id/port</i> ] [ ip [ <b>address</b>   <b>gateway-address</b> ]   ipv6 [ <b>ipv6-address</b>   <b>ipv6-gateways</b> ] [ <b>line-speed</b> ]
<b>Command Default</b>	This command is executed on the local switch.
<b>Parameters</b>	<p><b>rbridge-id/port</b> Specifies the management interface to be configured as the <i>rbridge-id</i> followed by a slash (/) and the port number.</p> <p><b>port</b> On standalone platforms, the port number for the management port is always 0. On a modular switches with two redundant management modules, you can configure two management ports: 1 and 2.</p> <p><b>ip</b> Displays the IPv4 configurations for the selected interface.</p> <p><b>address</b> Displays assigned IPv4 addresses.</p> <p><b>gateway-address</b> Displays assigned IPv4 gateway addresses.</p> <p><b>ipv6</b> Displays the IPv6 configurations for the selected interface.</p> <p><b>ipv6-address</b> Displays assigned IPv6 addresses.</p> <p><b>ipv6-gateways</b> Displays assigned IPv6 gateway addresses.</p> <p><b>line-speed</b> Displays Ethernet speed and other line configurations for the selected interface.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	The address field indicates if DHCP is used to obtain an IP address or if a static IP address is used.
<b>Examples</b>	<p>The following example displays information related to a management interface configured with an IPv4 address:</p> <pre>switch# show interface management  Management 2/0 ip address 10.20.49.112/20 ip gateway-address 10.20.48.1 ipv6 ipv6_address [ ] ipv6 ipv6_gateways [ fe80::21b:edff:fe0b:2400 ] LineSpeed Actual "1000 Mbit, Duplex: Full" LineSpeed Configured "Auto, Duplex: Full"</pre>

The following example displays information related to a management interface configured with a static IPv6 address:

```
switch# show interface management

interface Management 1/0
ip address 10.17.19.145/20
ip gateway-address 10.17.16.1
ipv6 ipv6-address [ "static aaaa::aaaa/64 preferred" ]
ipv6 ipv6-gateways [ fe80::21b:edff:fe0b:3c00 fe80::21b:edff:fe0b:9000 ]
line-speed actual "1000baseT, Duplex: Full"
line-speed configured Auto
```

The following example displays information related to a management interface on a Brocade VDX 8770. Interface 1/1 is configured with stateless IPv6 addresses:

```
switch# show interface management

interface Management 1/1
ip address 10.24.82.121/20
ip gateway-address 10.24.80.1
ipv6 ipv6-address [ "stateless fd00:60:69bc:64:205:33ff:fe15:f980/64 preferred" ]
ipv6 ipv6-gateways [ fe80::21b:edff:fe0f:bc00 fe80::21b:edff:fe0c:c200 ]
line-speed actual "1000baseT, Duplex: Full"
line-speed configured Auto
interface Management 1/2
ip address 10.24.82.255/20
ip gateway-address 10.24.80.1
ipv6 ipv6-address [ ]
ipv6 ipv6-gateways [ ]
line-speed actual "1000baseT, Duplex: Full"
line-speed configured Auto
```

**Related  
Commands**

[interface management, show running-config interface management](#)

# show interface stats

Displays interface statistics for a variety of interfaces.

**Syntax** **show interface stats** { **brief** [ **slot** *linecard\_number* ] | **detail** [ **interface** [ <N>**gigabitethernet** *rbridge-id/slot/port* | **port-channel** *number* ] | **slot** *number* ] }

**Parameters**

**brief**

Displays summary statistics.

**slot** *linecard\_number*

Displays statistics for specified linecard.

**detail**

Displays detailed statistics.

**interface**

Displays statistics for all interfaces or specific types of interface.

<N>**gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

*rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**port-channel** *number*

Specifies a port-channel number. Valid values range from 1 through 6144.

**slot** *number*

Specifies a slot.

**Modes** Privileged EXEC mode

**Examples** To display detailed statistics on a 10-GbE interface:

```
sw0# show interface stats detail interface ten 0/24
Interface TenGigabitEthernet 0/24 statistics (ifindex 403439639)
      RX
Packets          0
Bytes            0
Unicasts         0
Multicasts       0
Broadcasts       0
Errors           0
Discards         0
Overruns         0
Runts            0
Jabbers          0
CRC              0
64-byte pkts    0
Over 64-byte pkts 0
Over 127-byte pkts 0
Over 255-byte pkts 0
Over 511-byte pkts 0
Over 1023-byte pkts 0
Over 1518-byte pkts 0
Mbits/Sec       0.000000
Packet/Sec      0
Line-rate       0.00%
      TX
Underruns       0
```

**Related Commands** [show interface](#), [show ip interface](#)

# show interface status

Displays the interface status.

**Syntax** `show interface status [ rbridge-id rbridge-id | range | all ]`

**Parameters** `rbridge-id rbridge-id`

The unique identifier for a switch, or set of switches. The range of valid values is from 1 through 239.

**range**

A range of *rbridge-id* values. The range string can be discontinuous, such as "1-3,5".

**all**

Selects all of the members of the logical chassis cluster.

**Modes** Privileged EXEC mode

**Examples** Typical command output:

```
switch# show interface status
```

Port	Status	Vlan	Speed	Type	Description
Te 1/0/1	connected	Trunk	10G	10G-SFPP-LR	
Te 1/0/2	connected	1	10G	10G-SFPP-SR	
Po 1	connected	Trunk	40G	--	
Po 2	connected	1	20G	--	

## show interface trunk

Displays the interface trunk information.

**Syntax** `show interface trunk [ rbridge-id rbridge-id | range | all ]`

**Parameters** `rbridge-id rbridge-id`

The unique identifier for a switch, or set of switches. The range of valid values is from 1 through 239.

`range`

A range of *rbridge-id* values. The range string can be discontinuous, such as "1-3,5".

`all`

All of the members of the logical cluster.

**Modes** Privileged EXEC mode

**Examples** Typical command output:

```
switch# show interface trunk
-----
Port                Vlans Allowed on Trunk
-----
Te 1/0/1            1-4094
Te 1/0/2            1-4094
Te 1/0/3            1-4094
Po 52               1-4094
Po 99               1-4094
Po 401              701-703,757,2200-2399
Po 403              701-703,757,2200-2399
Po 405              701-703,757,2200-2399
Po 407              701-703,757,2200-2399
```

# show inventory

Displays the hardware inventory of the switch.

**Syntax** `show inventory [ chassis | fan | module | powerSupply ]`

**Parameters** **chassis**

Displays information about the chassis.

**fan**

Displays information about the fan.

**module**

Displays information about the module.

**powerSupply**

Displays information about the power supply.

**Modes** Privileged EXEC mode

**Examples** Example of typical command output

```
switch# show inventory
NAME:MM, Slot M1      DESCR:Chassis Blade module
PN:60-1002179-23     SN:BVT0417J00M
NAME:MM, Slot M2      DESCR:Chassis Blade module
PN:60-1002179-13     SN:BVT0302H00T
NAME:SFM, Slot S1     DESCR:Chassis Blade module
PN:60-1002180-12     SN:BVU0304H037
NAME:SFM, Slot S2     DESCR:Chassis Blade module
PN:60-1002180-12     SN:BVU0302H01Y
NAME:SFM, Slot S3     DESCR:Chassis Blade module
PN:60-1002560-01     SN:BVU0307H01G
NAME:LC, Slot L1      DESCR:Chassis Blade module
PN:60-1002466-17     SN:CCE0423J00P
NAME:LC, Slot L2      DESCR:Chassis Blade module
PN:60-1002466-09     SN:CCE0315H00B
NAME:LC, Slot L3      DESCR:Chassis Blade module
PN:60-1002569-01     SN:CCE0305H00G
NAME:LC, Slot L4      DESCR:Chassis Blade module
PN:60-1002181-12     SN:BVV0303H019
NAME:POWER SUPPLY 1   DESCR:Chassis PS module
PN:23-0000135-02     SN:BMM2J25G998
NAME:POWER SUPPLY 2   DESCR:Chassis PS module
PN:23-0000135-02     SN:BMM2J25G803
NAME: Chassis         DESCR:System Chassis
SID:BR-VDX8770-4     SwitchType:1000
PN:84-1001681-03     SN:BZA0305H00D
```

show ip bgp

## show ip bgp

Displays BGP information.

**Syntax** `show ip bgp { summary } [ rbridge-id rbridge-id ]`

**Parameters** **summary**

Displays the local autonomous system number (ASN), maximum number of routes supported, and some BGP4 statistics.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show ip bgp
```



## show ip bgp attribute-entries

Displays BGP4 route-attribute entries that are stored in device memory.

**Syntax** `show ip bgp attribute-entries [ rbridge-id rbridge-id ]`

**Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Usage Guidelines** The route-attribute entries table lists the sets of BGP4 attributes that are stored in device memory. Each set of attributes is unique and can be associated with one or more routes. In fact, the device typically has fewer attribute entries than routes. Use this command to view BGP4 route-attribute entries that are stored in device memory.

**Examples**  
`switch# show ip bgp attribute-entries`

show ip bgp dampened-paths

## show ip bgp dampened-paths

Displays all BGP4 dampened routes.

**Syntax** `show ip bgp dampened-paths [ rbridge-id rbridge-id ]`

**Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples**  
`switch# show ip bgp dampened-paths`

## show ip bgp filtered-routes

Displays BGP4 filtered routes that are received from a neighbor or peer group.

**Syntax** `show ip bgp filtered-routes { detail } [ ip-addr { / mask } [ longer-prefixes ] ] | as-path-access-list name ] | prefix-list name ] [ rbridge-id rbridge-id ]`

<b>Parameters</b>	<b>detail</b>	Optionally displays detailed route information.
	<b>ip-addr</b>	IPv4 address of the destination network in dotted-decimal notation.
	<b>mask</b>	(Optional) IPv4 mask of the destination network in CIDR notation.
	<b>longer-prefixes</b>	Specifies all statistics for routes that match the specified route, or that have a longer prefix than the specified route.
	<b>as-path-access-list</b>	Specifies an AS-path ACL.
	<b>prefix-list</b>	Specifies an IP prefix list.
	<b>name</b>	Name of an AS-path ACL or prefix list.
	<b>rbridge-id rbridge-id</b>	Specifies an RBridge ID.
<b>Modes</b>	Privileged EXEC mode	
<b>Examples</b>	switch# show ip bgp filtered-routes detail 10.11.12.13 prefix-list	

## show ip bgp flap-statistics

Displays BGP4 route-dampening statistics for all dampened routes with a variety of options.

<b>Syntax</b>	<b>show ip bgp flap-statistics</b> [ <i>ip-addr</i> { / <i>mask</i> } ] [ <b>longer-prefixes</b> ] ]   <b>as-path-filter</b> <i>name</i> ]   <b>neighbor</b> <i>ip-addr</i> ] [ <b>regular-expression</b> <i>name</i> ] [ <b>rbridge-id</b> <i>rbridge-id</i> ]
<b>Parameters</b>	<b>detail</b> Optionally displays detailed route information.
	<b>ip-addr</b> IPv4 address of a specified route in dotted-decimal notation.
	<b>mask</b> (Optional) IPv4 mask of a specified route in CIDR notation.
	<b>as-path-filter</b> <i>name</i> Specifies an AS-path filter.
	<b>longer-prefixes</b> Displays statistics for routes that match the specified route or have a longer prefix than the specified route.
	<b>neighbor</b> Displays flap statistics only for routes learned from the specified neighbor. <b>ip-addr</b> IPv4 address of the neighbor.
	<b>regular-expression</b> <i>name</i> Specifies a regular expression in the display output on which to filter.
	<b>rbridge-id</b> <i>rbridge-id</i> Name of an AS-path filter or regular expression. Specifies an RBridge ID.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	switch# show ip bgp flap-statistics neighbor 10.11.12.13

## show ip bgp neighbors

Displays configuration information and statistics for BGP4 neighbors of the device.

**Syntax** `show ip bgp neighbors { ip-addr | route-summary | last-packet-with-error } [ rbridge-id rbridge-id ]`

**Parameters** *ip-addr*

IPv4 address of a neighbor in dotted-decimal notation.

**route-summary**

Displays routes received, routes accepted, number of routes advertised by peer, and so on.

**last-packet-with-error**

Displays the last packet with an error.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to view configuration information and statistics for BGP4 neighbors of the device. Output shows all configured parameters for the neighbors. Only the parameters whose values differ from defaults are shown.

**Examples**

```
switch# show ip bgp neighbors route-summary
```

## show ip bgp neighbors advertised-routes

Displays configuration information and statistics for BGP4 neighbors of the device.

<b>Syntax</b>	<b>show ip bgp neighbors</b> <i>ip-addr</i> <b>advertised-routes</b> { <b>detail</b>   <i>ip-addr</i> { / <i>mask-bits</i> } } [ <b>rbridge-id</b> <i>rbridge-id</i> ]
<b>Parameters</b>	
<b><i>ip-addr</i></b>	IPv4 address of a neighbor in dotted-decimal notation.
<b>advertised-routes</b>	Displays only the routes that the device has advertised to the neighbor during the current BGP4 session.
<b>detail</b>	Displays details of advertised routes.
<b><i>mask-bits</i></b>	Number of mask bits in CIDR notation.
<b>rbridge-id</b> <i>rbridge-id</i>	Specifies an RBridge ID.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	<pre>switch# show ip bgp neighbors 10.11.12.13 advertised-routes detail</pre>

## show ip bgp neighbors flap-statistics

Displays configuration information and flap statistics for BGP4 neighbors of the device.

**Syntax** `show ip bgp neighbors ip-addr flap-statistics [ rbridge-id rbridge-id ]`

**Parameters** *ip-addr*

IPv4 address of a neighbor in dotted-decimal notation.

**flap-statistics**

Displays the route flap statistics for routes received from or sent to a neighbor.

**rbridge-id *rbridge-id***

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show ip bgp neighbors 10.11.12.13 flap-statistics
```

## show ip bgp neighbors received

Displays Outbound Route Filters (ORFs) received from BGP4 neighbors of the device.

**Syntax** `show ip bgp neighbors ip-addr received [ extended-community | prefix-filter ] [ rbridge-id rbridge-id ]`

**Parameters** *ip-addr*

IPv4 address of a neighbor in dotted-decimal notation.

**extended-community**

Displays the results for ORFs that use the BGP Extended Community Attribute.

**prefix-filter**

Displays the results for ORFs that are prefix-based.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show ip bgp neighbors 10.11.12.13 received extended-community
```



## show ip bgp neighbors received-routes

Lists all route information received in route updates from BGP4 neighbors of the device since the soft-reconfiguration feature was enabled.

**Syntax** `show ip bgp neighbors ip-addr received-routes { detail } [ rbridge-id rbridge-id ]`

**Parameters** *ip-addr*

IPv4 address of a neighbor in dotted-decimal notation.

**detail**

Displays detailed route information.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show ip bgp neighbors 10.11.12.13 received-routes
```

## show ip bgp neighbors routes

Lists a variety of route information received in UPDATE messages from BGP4 neighbors.

<b>Syntax</b>	<b>show ip bgp neighbors</b> <i>ip-addr</i> <b>routes</b> { <b>best</b>   <b>not-installed-best</b>   <b>unreachable</b> }   <b>detail</b> { <b>best</b>   <b>not-installed-best</b>   <b>unreachable</b> } [ <b>rbridge-id</b> <i>rbridge-id</i> ]
<b>Parameters</b>	
<b>ip-addr</b>	IPv4 address of a neighbor in dotted-decimal notation.
<b>best</b>	Displays routes received from the neighbor that are the best BGP4 routes to their destination.
<b>not-installed-best</b>	Displays routes received from the neighbor that are the best BGP4 routes to their destination but were not installed in the route table because the device received better routes from other sources.
<b>unreachable</b>	Displays routes that are unreachable because the device does not have a valid RIP, OSPF, or static route to the next hop.
<b>detail</b>	Displays detailed information for the specified route types.
<b>rbridge-id</b> <i>rbridge-id</i>	Specifies an RBridge ID.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	To view best-route information received in UPDATE messages:  switch# show ip bgp neighbors 10.11.12.13 routes best

## show ip bgp neighbors routes-summary

Lists all route information received in UPDATE messages from BGP4 neighbors.

**Syntax** `show ip bgp neighbors ip-addr routes-summary [ rbridge-id rbridge-id ]`

**Parameters** *ip-addr*

IPv4 address of a neighbor in dotted-decimal notation.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show ip bgp neighbors 10.11.12.13 routes-summary
```

## show ip bgp peer-group

Displays peer-group information.

<b>Syntax</b>	<b>show ip bgp peer-group</b> <i>peer-group-name</i> [ <b>rbridge-id</b> <i>rbridge-id</i> ]
<b>Parameters</b>	<p><b><i>ip-addr</i></b> IPv4 address of a neighbor in dotted-decimal notation.</p> <p><b><i>peer-group-name</i></b> Peer-group name configured by the <b>neighbor</b> <i>peer-group-name</i> command.</p> <p><b><i>rbridge-id rbridge-id</i></b> Specifies an RBridge ID.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Use this command to view configuration information and statistics for BGP4 neighbors of the device. Output shows all configured parameters for the neighbors. Only the parameters whose values differ from defaults are shown.
<b>Examples</b>	<pre>switch# show ip bgp peer-group mypeergroup</pre>
<b>Related Commands</b>	<a href="#">neighbor (BGP)</a>

## show ip bgp routes

Displays BGP4 route information that is filtered by the table entry at which the display starts.

**Syntax** `show ip bgp routes num [ rbridge-id rbridge-id ]`

**Parameters** *num*

Table entry at which the display starts.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show ip bgp routes 100
```

## show ip bgp routes age

Displays BGP4 route information that is filtered by age, best/not best routes, or routes not installed.

<b>Syntax</b>	<b>show ip bgp routes</b> [ <b>age</b> <i>num</i>   <b>best</b>   <b>no-best</b>   <b>cidr-only</b>   <b>not-installed-best</b> ] [ <b>rbridge-id</b> <i>rbridge-id</i> ]
<b>Parameters</b>	<b>age</b> Displays only those routes that have been received or updated more recently than the number of seconds specified by <i>num</i> .  <b>num</b> Last update interval, in seconds.  <b>best</b> Displays only routes received from a neighbor that the device selected as best routes.  <b>no-best</b> Displays only routes received from a neighbor that the device selected as suboptimal routes.  <b>cidr-only</b> Displays only routes whose network masks do not match their class network length.  <b>not-installed-best</b> Displays only routes received from a neighbor that are the best BGP4 routes to their destinations, but that were not installed in the IP route table because the device received better routes from other sources (such as OSPF, RIP, or static routes).  <b>rbridge-id</b> <i>rbridge-id</i> Specifies an RBridge ID.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	To view BGP4 best route information:  switch# show ip bgp routes best

## show ip bgp routes as-path-access-list

Displays BGP4 route information that is filtered by autonomous system (AS)-path access control list (ACL).

**Syntax** `show ip bgp routes [ as-path-access-list name ] [ rbridge-id rbridge-id ]`

**Parameters** **as-path-access-list**

Displays only those routes that use the AS-path ACL defined by *name* .

***name***

Name of AS-path ACL.

**rbridge-id *rbridge-id***

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples** To view BGP4 routes filtered by AS-path ACL:

```
switch# show ip bgp routes as-path-access-list myacl
```

## show ip bgp routes community

Displays BGP4 route information that is filtered by community and other options.

<b>Syntax</b>	<b>show ip bgp routes</b> [ <b>community</b> <i>num</i>   <b>internet</b>   <b>local-as</b>   <b>no-advertise</b>   <b>no-export</b> ] [ <b>rbridge-id</b> <i>rbridge-id</i> ]
<b>Parameters</b>	<b>community</b> Displays routes filtered by a variety of communities. <b>num</b> Specific community member. <b>internet</b> Displays routes for the Internet community. <b>local-as</b> Displays routes for a local sub-AS within the confederation. <b>no-advertise</b> Displays routes with this community that cannot be advertised to any other BGP4 devices at all. <b>no-export</b> Displays routes for the community of sub-ASs within a confederation. <b>rbridge-id</b> <i>rbridge-id</i> Specifies an RBridge ID.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	To view BGP4 routes filtered by community:  switch# show ip bgp routes community 10



## show ip bgp routes community-access-list

Displays BGP4 route information for an AS-path community access list.

**Syntax** `show ip bgp routes community-access-list name [ rbridge-id rbridge-id ]`

**Parameters** *name*

Name of the AS path community access list. Range is from 1 through 32 ASCII characters.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples** To view BGP4 route information for an AS-path community access list:

```
switch# show ip bgp routes community-access-list mycommunityacl
```

## show ip bgp routes community-reg-expression

Displays BGP4 route information for an ordered community-list regular expression.

**Syntax** `show ip bgp routes community-reg-expression expression [ rbridge-id rbridge-id ]`

**Parameters** *expression*

An ordered community-list regular expression.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples** To view BGP4 route information for an ordered community-list regular expression:

```
switch# show ip bgp routes community-reg-expression myregexexpression
```

## show ip bgp routes longer-prefixes

Displays BGP4 route information that is filtered for a specific prefix and mask, as well as for prefixes with a longer mask than the one specified.

**Syntax** `show ip bgp routes ip-addr/prefix [ longer-prefixes | ip-addr ] [ rbridge-id rbridge-id ]`

**Parameters** *ip-addr*

IPv4 address in dotted-decimal notation.

*prefix*

Mask length in CIDR notation.

**longer-prefixes**

Filters on prefixes equal to or greater than that specified by the mask.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples** To view BGP4 route information filtered by longer prefixes:

```
switch# show ip bgp routes 10.11.12.12/23 longer-prefixes
```

## show ip bgp routes neighbor nexthop local unreachable

Displays BGP4 route information that is filtered by neighbor, next hop, and other options.

<b>Syntax</b>	<b>show ip bgp routes</b> [ <b>neighbor</b> <i>ip-addr</i>   <b>nexthop</b> <i>ip-addr</i>   <b>local</b>   <b>unreachable</b> ] [ <b>rbridge-id</b> <i>rbridge-id</i> ]
<b>Parameters</b>	
<b>neighbor</b>	Displays only those routes that are received from the specified neighbor.
<b>nexthop</b>	Displays only those routes that are received from the specified next hop.
<b>ip-addr</b>	IPv4 address of neighbor or next hop, in dotted-decimal notation.
<b>local</b>	Displays only those routes that use a Local AS.
<b>unreachable</b>	Displays only those routes whose destinations are unreachable through any of the BGP4 paths in the BGP4 route table.
<b>rbridge-id</b> <i>rbridge-id</i>	Specifies an RBridge ID.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	To view BGP4 routes filtered by neighbor:  switch# show ip bgp routes neighbor 10.11.12.13

## show ip bgp routes prefix-list regular-expression route-map

Displays BGP4 route information that is filtered by prefix list and other options.

<b>Syntax</b>	<b>show ip bgp routes</b> [ <b>prefix-list</b> <i>string</i>   <b>regular-expression</b> <i>name</i>   <b>route-map</b> <i>name</i> ] [ <b>rbridge-id</b> <i>rbridge-id</i> ]
<b>Parameters</b>	<p><b>prefix-list</b></p> <p>Displays only those routes that use the specified prefix list.</p> <p><b><i>string</i></b></p> <p>Identifier of IP prefix list.</p> <p><b>regular-expression</b></p> <p>Displays only those routes that are associated with the specified regular expression.</p> <p><b><i>name</i></b></p> <p>Regular expression, in quotes.</p> <p><b>route-map</b></p> <p>Displays only those routes that use the specified route map.</p> <p><b><i>name</i></b></p> <p>Name of route map.</p> <p><b>rbridge-id</b> <i>rbridge-id</i></p> <p>Specifies an RBridge ID.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	<p>To view BGP4 routes filtered by prefix list:</p> <pre>switch# show ip bgp routes prefix-list myprefixlist</pre>

## show ip bgp routes summary detail

Displays BGP4 summary route information.

**Syntax** `show ip bgp routes [ summary | detail ] [ rbridge-id rbridge-id ]`

**Parameters** **summary**

Displays summary route information.

**detail**

Displays detailed route information.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples** To view summary BGP4 route information:

```
switch# show ip bgp routes summary
```

## show ip dhcp relay address interface

Displays IP DHCP Relay addresses configured on a specific interface.

**Syntax** `show ip dhcp relay address interface [ <N>gigabitethernet rbridge-id/slot/port ]`

`show ip dhcp relay address interface ve vlan_id { rbridge-id rbridge-id | all | range }`

**Command Default** If the **rbridge-id** parameter is omitted, IP DHCP Relay addresses display for the local switch.

**Parameters** **<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace **<N>gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**ve**

VE interface.

**vlan\_id**

VLAN identification for interface.

**rbridge-id rbridge-id**

Specifies an RBridge. You can specify multiple RBridge IDs, separated by commas.

**all**

Specifies all RBridge IDs in the logical chassis cluster.

**range**

A range of RBridge IDs separated by a dashes or commas, for example:

1-3 - RBridge ID 1 through 3  
1-3, 5 - RBridge ID 1 through 3 and RBridge ID 5  
1, 3, 5, 6 - RBridge ID 1, 3, 5, and 6

**Modes** Privileged EXEC mode

**Usage Guidelines** This command displays IP DHCP Relay addresses configured on specific physical or virtual Ethernet (VE) interfaces located on a local switch, specific switches, or all switches in a logical chassis cluster. No spaces are allowed in the range string. The range does not need to be contiguous (for example, 1-2,5).

**Examples** Display configured IP DHCP Relay addresses on a specific physical interface:

```
sw0# show ip dhcp relay address interface tengigabitethernet 1/0/24
                                Rbridge Id: 1
                                -----
Interface                        Relay Address
VRF Name
-----
Te 1/0/24                        10.3.4.5                        default-
vrf
Te 1/0/24                        10.5.1.1
blue
```

Display configured IP DHCP Relay addresses on VE interface for RBridge ID 1.

```
sw0# show ip dhcp relay address int ve 300 rbridge-id 1
                                Rbridge Id: 1
                                -----
Interface                        Relay Address                    VRF Name
-----
Ve 300                          10.0.1.2                        default-vrf
```

Display configured IP DHCP Relay addresses on VE interface on RBridge IDs 1 and 3.

```
sw0# show ip dhcp relay address interface ve 300 rbridge-id 1,3
                                Rbridge Id: 1
                                -----
Interface                        Relay Address                    VRF Name
-----
Ve 300                          10.0.1.2                        default-vrf
                                Rbridge Id: 3
                                -----
Ve 300                          10.0.0.5
```

**Related Commands** [ip dhcp relay address](#), [show ip dhcp relay address rbridge-id](#)



## show ip dhcp relay address rbridge-id

Displays IP DHCP Relay addresses.

**Syntax** `show ip dhcp relay address rbridge-id rbridge-id | all | range`

**Command Default** If the *rbridge-id* parameter is omitted, IP DHCP Relay addresses display for the local switch.

**Parameters** *rbridge-id*

Specifies an RBridge. You can specify multiple RBridge IDs, separated by commas.

**all**

Specifies all RBridge IDs in the logical chassis cluster.

**range**

A range of RBridge IDs separated by a dashes or commas, for example:

1-3 - RBridge ID 1 through 3  
1-3, 5 - RBridge ID 1 through 3 and RBridge ID 5  
1, 3, 5, 6 - RBridge ID 1, 3, 5, and 6

**Modes** Privileged EXEC mode

**Usage Guidelines** This command displays the IP address and Virtual Routing and Forwarding (VRF) name for all interfaces with configured IP DHCP Relay addresses on a local switch, specific switches, or all switches in a VCS Fabric cluster. No spaces are allowed in the *range* string. The range does not need to be contiguous (for example, 1-2,5).

**Examples** To display addresses configured on a specific RBridge ID:

```
sw0# show ip dhcp relay address rbridge-id 2
                               Rbridge Id:    2
                               -----
Interface                      Relay Address          VRF Name
-----                      -
Te 2/2/1                       10.1.1.1                Blue
Te 2/4/2                       20.1.1.1                Blue
Te 2/5/4                       30.1.1.1                Default-vrf
Te 2/6/6                       40.1.1.1                Green
```

To display addresses configured on all switches in a virtual fabric cluster:

```
sw0# show ip dhcp rel address rbridge-id all
                               Rbridge Id:    1
                               -----
Interface                      Relay VRF Name
Address                      -----
-----                      -
Te 1/0/24                     2.3.4.5                 default-vrf
Ve 300                        10.0.1.2                default-vrf
                               Rbridge Id:    3
                               -----
Interface                      Relay VRF Name
Address                      -----
-----                      -
Ve 300                        10.0.0.5                default-vrf
```

Show commands

**Related  
Commands** [ip dhcp relay address, show ip dhcp relay address interface](#)

## show ip dhcp relay statistics

Displays the general information about the DHCP Relay function.

**Syntax** `show ip dhcp relay statistics [ ip-address ip-addr ] [ rbridge-id rbridge-id | all | range ]`

**Command Default** If the **rbridge-id** parameter is omitted, IP DHCP Relay statistics display for the local switch. If the **ip-address** parameter is omitted, statistics display for all configured addresses on defined switches.

**Parameters** **ip-address** *ip-addr*

IPv4 address of DHCP server where client requests are to be forwarded.

**rbridge-id** *rbridge-id*

Specifies an RBridge. You can specify multiple RBridge IDs, separated by commas.

**all**

Specifies all RBridge IDs in the logical chassis cluster.

**range**

A range of RBridge IDs separated by a dashes or commas, for example:

1-3 - RBridge ID 1 through 3  
1-3, 5 - RBridge ID 1 through 3 and RBridge ID 5  
1, 3, 5, 6 - RBridge ID 1, 3, 5, and 6

**Modes** Privileged EXEC mode

**Usage Guidelines** No spaces are allowed in the *range* string. The range does not need to be contiguous (for example, 1-2,5). You can also specify **all** for all RBridge IDs in a logical chassis cluster. To display addresses for configured interfaces on a local switch, an RBridge ID parameter is not required.

The **show ip dhcp relay statistics** command displays the following information about the IP DHCP Relay function for IP DHCP Relay addresses configured on a local switch, specific switches, or all switches in a logical chassis cluster:

- DHCP Server IP Address configured in the switch.
- Number of DHCP DISCOVERY, OFFER, REQUEST, ACK, NAK, DECLINE, and RELEASE packets received.
- Number of DHCP client packets received (on port 67) and relayed by the Relay Agent.
- Number of DHCP server packets received (on port 67) and relayed by the Relay Agent.

**Examples** To display statistics for a local switch:

```
switch# show ip dhcp relay statistics
DHCP Relay Statistics - Rbridge Id: 3
-----
Address      Decline  Release  Disc. Offer  Req.  Ack  Nak
-----  -----  -----  -----  -----  ---  ---
10.1.0.1      0        0        400         100   2972 2968
20.2.0.1      0        0        400         100   2979 2975
30.3.0.1      0        0        400         100   3003 2998
40.4.0.1      0        0        400         100   3026 3018
Active Clients: 400
Clients to Restore: 0
Client Packets: 12780
Server Packets: 12359
Timed Out: 0
No Offers: 0
```

To display statistics for specific RBridge IDs:

```
switch# show ip dhcp relay statistics rbridge-id 1,3
DHCP Relay Statistics - Rbridge Id: 1
-----
Address      Decline  Release  Disc. Offer  Req.  Ack  Nak
-----  -----  -----  -----  -----  ---  ---
2.3.4.5      2968     0        0          300   100   1211 0
10.0.1.2     0        0        300         100   1207 2975
Client Packets: 2701
Server Packets: 2932
```

```
DHCP Relay Statistics - Rbridge Id: 3
-----
Address      Decline  Release  Disc. Offer  Req.  Ack  Nak
-----  -----  -----  -----  -----  ---  ---
10.0.0.5      0        0        0          0     0    0
10.0.1.2     0        0        0          0     0    0
Client Packets: 0
Server Packets: 0
```

**Related Commands**

[show ip dhcp relay address interface](#), [show ip dhcp relay address rbridge-id](#)

# show ip fabric-virtual-gateway

Displays IPv4 Fabric-Virtual-Gateway session details.

<b>Syntax</b>	<b>show ip fabric-virtual-gateway { detail   summary   interface ve <i>vlan-id</i> }</b>
<b>Parameters</b>	<p><b>detail</b> Lists the IP Fabric-Virtual-Gateway configuration in detail.</p> <p><b>summary</b> Lists a summary of the IP Fabric-Virtual-Gateway configuration.</p> <p><b>interface ve <i>vlan-id</i></b> Displays IPv4 Fabric-Virtual-Gateway configuration for the specified VE interface.</p>
<b>Modes</b>	Privileged EXEC mode

**Examples** The following example displays IPv4 Fabric-Virtual-Gateway session details.

```
Total number of session(s)      : 1
Total number of active session(s) : 0
Interface: Ve 1; Ifindex: 0
  Admin Status: Enabled
  Description : ipfabric-virtual
  Address family: IPV4      State: IntfDown
  ARP responder Rbridge-id:
  Gateway IP(s): 1.1.1.1/24
  Gateway MAC Address: 02e0.5200.010f
  Load balancing: Disabled
  Load balancing threshold priority: 0
  Gratuitous ARP Timer: 5 sec
  Hold time: 12 sec (default: 0 sec)
    Total no. of state changes: 0
    Gratuitous ARP Sent: 0
  Last state change: 3d.19h.20m.54s ago
  Track Priority: 0
```

The following example displays IPv4 Fabric-Virtual-Gateway session details for the given VE interface.

```
Interface: Ve 1; Ifindex: 0
  Admin Status: Enabled
  Description : ipfabric-virtual
  Address family: IPV4      State: IntfDown
  ARP responder Rbridge-id:
  Gateway IP(s): 1.1.1.1/24
  Gateway MAC Address: 02e0.5200.010f
  Load balancing: Disabled
  Load balancing threshold priority: 0
  Gratuitous ARP Timer: 5 sec
  Hold time: 12 sec (default: 0 sec)
    Total no. of state changes: 0
    Neighbor Advertisements Sent: 0
  Last state change: 3d.19h.24m.24s ago
  Track Priority: 0
```

History	Release version	Command history
	5.0.1	This command was introduced.

## show ip igmp groups

Displays information related to learned groups in the IGMP protocol module.

<b>Syntax</b>	<b>show ip igmp groups</b> [ [ <b>A.B.C.D</b> [ <b>detail</b> ] ]   <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ] [ <b>interface</b> [ <i>&lt;N&gt;gigabitethernet rbridge-id/slot/port</i>   <b>ve</b> [ <i>vlan_id</i>   <b>rbridge-id rbridge-id</b> ] [ <b>detail</b>   <i>A.B.C.D</i> ] ] ] [ <b>interface</b> <i>vlan vlan_id</i>   <b>detail</b> ] ] [ <b>interface port-channel</b> <i>number</i>   <b>detail</b> ] ] ]
<b>Parameters</b>	<b>A.B.C.D</b> Specifies the group address, as a subnet number in dotted decimal format (for example, 10.0.0.1), as the allowable range of addresses included in the multicast group.
	<b>detail</b> Displays the IGMPv3 source information.
	<b>rbridge-id</b> <i>rbridge-id</i> Specifies an RBridge ID.
	<b>all</b> Specifies all RBridges.
	<b>interface</b> Use this parameter to specify the interface.
	<b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>&lt;N&gt;gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.
	<b>rbridge-id</b> Specifies an RBridge ID.
	<b>slot</b> Specifies a valid slot number.
	<b>port</b> Specifies a valid port number.
	<b>ve</b> <i>vlan_id</i> Specifies the virtual Ethernet (VE) interface.
	<b>detail</b> Displays the IGMPv3 source information.
	<b>interface</b> Use this parameter to specify the interface.
	<b>vlan</b> <i>vlan_id</i> Specifies which VLAN interface to display the snooping configuration related information.
	<b>detail</b> Displays the IGMPv3 source information.
	<b>interface</b> Use this parameter to specify the interface.
	<b>port-channel</b> <i>number</i> Specifies the interface is a port-channel. The number of available channels range from 1 through 6144.
	<b>detail</b>

Displays the IGMPv3 source information.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the IGMP database, including configured entries for either all groups on all interfaces, or all groups on specific interfaces, or specific groups on specific interfaces.

The remote RBridge information is not displayed when the detail and interface operands are used.

In logical chassis mode, when **rbridge-id** is specified, groups learned on Layer 3 interfaces for that particular RBridge ID are displayed. However, groups learned on Layer 2 interfaces from all the nodes in an entire cluster are displayed.

In logical chassis mode, if **rbridge-id** is not specified, IGMP groups on Layer 3 interfaces of the node on which the command is executed are displayed. Groups learned on Layer 2 interfaces from all the nodes in the cluster are displayed.

In logical chassis mode, when **rbridge-id all** is specified, all groups from all the nodes in the cluster are displayed.

**Examples** This is an example of a detailed output.

```
switch# show ip igmp groups interface tengigabitethernet 125/1/32 detail

Interface: Te 125/1/32
Group: 225.225.1.1
Uptime: 00:02:45
Expires: 00:03:56
Last reporter: 125.32.1.3
Last reporter mode: IGMP V2
```

This is an example of a virtual interface output.

```
switch# show ip igmp groups interface ve 2006

Total Number of Groups: 1
IGMP Connected Group Membership
Group Address  Interface  Uptime    Expires   Last Reporter
226.226.1.1   Vlan 2006  00:00:09  00:04:03  112.26.1.25
Member Ports: Te 125/2/12
```

## show ip igmp interface

Displays information related to VLANs in the IGMP protocol module.

<b>Syntax</b>	<b>show ip igmp interface</b> [ <b>vlan</b> <i>vlan_id</i> [ [ <i>A.B.C.D</i> [ <b>detail</b> ] ] ]   <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ] [ <b>interface</b> [ <i>&lt;N&gt;</i> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>ve</b> [ <i>vlan_id</i>   <b>rbridge-id</b> <i>rbridge-id</i> ] [ <b>detail</b>   <i>A.B.C.D</i> ] ] ] [ <b>interface</b> <i>vlan</i> <i>vlan_id</i>   <b>detail</b> ] ] [ <b>interface</b> <b>port-channel</b> <i>number</i>   <b>detail</b> ] ] ]
<b>Parameters</b>	<b>A.B.C.D</b> Specifies the group address, as a subnet number in dotted decimal format (for example, 10.0.0.1), as the allowable range of addresses included in the multicast group.
	<b>detail</b> Displays the IGMPv3 source information.
	<b>rbridge-id</b> <i>rbridge-id</i> Specifies an RBridge.
	<b>all</b> Specifies all RBridges.
	<b>interface</b> Use this parameter to specify the interface.
	<b>vlan</b> <i>vlan_id</i> Specifies a VLAN interface.
	<b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>&lt;N&gt;gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.
	<b>rbridge-id</b> Specifies an RBridge ID.
	<b>slot</b> Specifies a valid slot number.
	<b>port</b> Specifies a valid port number.
	<b>ve</b> <i>vlan_id</i> Specifies a Virtual Ethernet (VE) interface.
	<b>detail</b> Displays the IGMPv3 source information.
	<b>interface</b> Use this parameter to specify the interface.
	<b>detail</b> Displays the IGMPv3 source information.
	<b>interface</b> Use this parameter to specify the interface.
	<b>port-channel</b> <i>number</i> Specifies the interface is a port-channel. The number of available channels range from 1 through 6144.
	<b>detail</b>



Displays the IGMPv3 source information.

**Modes** Privileged EXEC mode

**Usage Guidelines** In logical chassis mode:

- When the **rbridge-id** option is specified, details for the VE interface on that particular rbridge are displayed.
- If **rbridge-id** is not specified, details for the VE interface on the node on which the command is executed is displayed.
- When **rbridge-id all** is specified, all VE interfaces with that **rbridge-id** from all the nodes in the cluster are displayed.

**Examples**

```
switch# show ip igmp interface vlan 1
```

```
Interface Vlan 1
IGMP Snooping disabled
IGMP Snooping fast-leave disabled
IGMP Snooping querier disabled
Number of router-ports: 0
```

## show ip igmp snooping

Displays IGMP snooping information.

<b>Syntax</b>	<b>show ip igmp snooping [ interface vlan <i>vlan_id</i>   mrouter interface vlan <i>vlan_id</i> ]</b>
<b>Parameters</b>	<b>interface vlan <i>vlan_id</i></b> Specifies which VLAN interface to display the snooping configuration related information. <b>mrouter interface vlan <i>vlan_id</i></b> Specifies which VLAN interface to display the snooping configuration related information.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Use this command to display IGMP snooping information, display multicast router port related information for the specified VLAN, or to display snooping statistics for the specified VLAN in the IGMP protocol module.
<b>Examples</b>	To display IGMP snooping information for VLAN 5:  <pre>switch# show ip igmp snooping interface vlan 5</pre>

# show ip igmp statistics

Displays IGMP statistics for an interface.

**Syntax** `show ip igmp statistics interface [ interface <N>gigabitethernet rbridge-id/slot/port | vlan vlan_id | ve vlan_id [ rbridge-id rbridge-id ] ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**vlan vlan\_id**

Specifies which VLAN interface to display the snooping configuration related information.

**ve vlan\_id**

Specifies a virtual Ethernet (VE) interface.

**rbridge-id rbridge-id**

Specifies an RBridge.

**Modes** Privileged EXEC mode

**Usage Guidelines** In logical chassis mode:

- When the **rbridge-id** option is specified, details for the VE interface on that particular rbridge are displayed.
- If **rbridge-id** is not specified, details for the VE interface on the node on which the command is executed is displayed.
- When **rbridge-id all** is specified, all VE interfaces with that **rbridge-id** from all the nodes in the cluster are displayed.

**Examples**

```
switch# show ip igmp statistics interface vlan 1
```

```
IGMP packet statistics for all interfaces in Vlan 1:
IGMP Message type      Edge-Received   Edge-Sent      Edge-Rx-Errors   ISL Received
Membership Query       0               0              0                0
V1 Membership Report   0               0              0                0
V2 Membership Report   0               0              0                0
Group Leave            0               0              0                0
V3 Membership Report   0               0              0                0
PIM hello              0               0              0                0
```

```
IGMP Error Statistics:
```

```
Unknown types          0
Bad Length             0
Bad Checksum           0
```

# show ip interface

Displays the IP interface status and configuration of all interfaces or a specified interface.

<b>Syntax</b>	<b>show ip interface</b> [ <b>brief</b> [ <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ]   <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>loopback</b> <i>number</i>   <b>port-channel</b> <i>number</i>   <b>ve</b> <i>vlan_id</i> ]
<b>Parameters</b>	<p><b>brief</b> Specifies to display a brief summary of IP interface status and configuration.</p> <p><b>rbridge-id</b> Specifies an RBridge or all RBridges.</p> <p><b><i>rbridge-id</i></b> Specifies an RBridge ID.</p> <p><b>all</b> Specifies all RBridges.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b><i>rbridge-id</i></b> Specifies an RBridge ID.</p> <p><b><i>slot</i></b> Specifies a valid slot number.</p> <p><b><i>port</i></b> Specifies a valid port number.</p> <p><b>loopback <i>number</i></b> Specifies to display the loopback interface number. Valid values range from 1 through 255.</p> <p><b>port-channel <i>number</i></b> Specifies to display the port-channel number. Valid values range from 1 through 6144.</p> <p><b>ve <i>vlan_id</i></b> Specifies a virtual Ethernet (VE) interface (VLAN interface number).</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Note the following with respect to the <b>show ip interface brief</b> command:</p> <ul style="list-style-type: none"> <li>• The command <b>show ip interface brief rbridge-id rbridge-id</b> provides information about all physical, loopback, and switched virtual interfaces (SVIs) specific to the given <i>rbridge-id</i>.</li> <li>• The <b>show ip interface brief rbridge-id all</b> command provides information about all physical, loopback, and SVIs for all nodes in a cluster.</li> <li>• If the <b>rbridge-id</b> option is not used, information about physical, loopback, and SVIs is shown for the local node only.</li> <li>• Note the following with respect to the <b>show ip interface loopback</b> command:</li> <li>• The command <b>show ip interface loopback rbridge-id rbridge-id</b> shows the details of loopback interfaces for the given <i>rbridge-id</i>.</li> </ul>

- The command **show ip interface loopback rbridge-id all** shows the details of loopback interfaces for all nodes in a cluster.
- If the **rbridge-id** option is not used, information about loopback interfaces is shown for the local node only.

Note the following with respect to the **show ip interface ve** command:

- The command **show ip interface ve rbridge-id rbridge-id** provides information about SVIs specific to the given *rbridge-id*.
- The command **show ip interface ve rbridge-id all** provides information about SVIs for all nodes in a cluster.

If the **rbridge-id** option is not used, information about SVIs is shown for the local node only on the Brocade VDX family of switches.

**Examples** To display information about all of the interfaces in the summary format:

```
switch# show ip interface brief
```

Interface	IP-Address	Status	Protocol
Port-channel 10	unassigned	up	down
Port-channel 11	unassigned	up	down
Port-channel 12	unassigned	up	down
Port-channel 13	unassigned	up	up
Port-channel 14	unassigned	up	down
Port-channel 15	unassigned	up	up
Ten Gigabit Ethernet 1/0/0	unassigned	up	
Ten Gigabit Ethernet 1/0/1	unassigned	up	down
Ten Gigabit Ethernet 1/0/2	unassigned	up	up
Ten Gigabit Ethernet 1/0/3	unassigned	up	up
Ten Gigabit Ethernet 1/0/4	unassigned	up	down
Ten Gigabit Ethernet 1/0/5	unassigned	up	down
Ten Gigabit Ethernet 1/0/6	unassigned	up	down
Ten Gigabit Ethernet 1/0/7	unassigned	up	up
Ten Gigabit Ethernet 1/0/8	unassigned	up	up
Ten Gigabit Ethernet 1/0/9	unassigned	up	up
Ten Gigabit Ethernet 1/0/10	unassigned	up	down
Ten Gigabit Ethernet 1/0/11	unassigned	up	down
Ten Gigabit Ethernet 1/0/12	unassigned	up	up
Ten Gigabit Ethernet 1/0/13	unassigned	up	up
Ten Gigabit Ethernet 1/0/14	unassigned	up	down
Ten Gigabit Ethernet 1/0/15	unassigned	up	up
Ten Gigabit Ethernet 1/0/16	unassigned	up	down
Ten Gigabit Ethernet 1/0/17	unassigned	up	up
Ten Gigabit Ethernet 1/0/18	unassigned	up	down
Ten Gigabit Ethernet 1/0/19	unassigned	up	up
Ten Gigabit Ethernet 1/0/20	unassigned	up	up
Ten Gigabit Ethernet 1/0/21	unassigned	up	up
Ten Gigabit Ethernet 1/0/22	unassigned	up	up
Ten Gigabit Ethernet 1/0/23	unassigned	up	up
Vlan 1	unassigned	administratively down	down
Vlan 100	unassigned	administratively down	down
Vlan 200	unassigned	administratively down	down

To display port-security status when the port-security feature is applied:

```
sw0# show ip interface brief
```

Interface	IP-Address	Status	Protocol
Port-channel 1	unassigned	up	up
TenGigabitEthernet 0/1	unassigned	up	up
TenGigabitEthernet 0/2	unassigned	admin-down	down "Port security violation"
TenGigabitEthernet 0/3	unassigned	admin-down	down
TenGigabitEthernet 0/4	unassigned	admin-down	down "Port security violation"

## Show commands

To display the IP interface status of a 1-gigabit Ethernet port:

```
switch# show ip interface gigabitethernet 1/0/1  
  
Gigabit Ethernet 1/0/1 is up protocol is up  
IP unassigned  
Proxy Arp is not Enabled  
ICMP unreachable are always sent  
ICMP mask replies are never sent  
IP fast switching is enabled
```

**Related  
Commands**    [show interface](#)

# show ip interface loopback

Displays loopback information for a Management Cluster.

**Syntax** `show ip interface loopback id [ rbridge-id { rbridge-id | all } ]`

**Parameters** **id**

Displays the information for the designated loopback.

**rbridge-id**

Specifies an RBridge or all RBridges.

*rbridge-id*

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Related Commands** [show ip interface](#), [show ip interface ve](#)

## show ip interface ve

Displays virtual Ethernet (VE) port information for a Management Cluster.

<b>Syntax</b>	<b>show ip interface ve</b> <i>id</i> [ <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ]
<b>Parameters</b>	<b><i>id</i></b> Displays the information for the designated loopback.
	<b>rbridge-id</b> Specifies an RBridge or all RBridges.
	<b><i>rbridge-id</i></b> Specifies an RBridge ID.
	<b>all</b> Specifies all RBridges.
<b>Modes</b>	Privileged EXEC mode
<b>Related Commands</b>	<a href="#">show ip interface</a> , <a href="#">show ip interface loopback</a>



# show ip ospf

Displays the OSPF state.

**Syntax** `show ip ospf [ vrf name [ rbridge-id { rbridge-id | all } ] ]`

**Parameters** **vrf name**

Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.

**rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** When the RBridge ID is not specified, the output from the local node is displayed.

When the RBridge ID is specified, data from the corresponding specified RBridge is displayed.

When **all** is specified, data from all nodes in the cluster is displayed.

## Examples

```
Switch# show ip ospf
  vrf testname
OSPF Version                Version 2
Router Id                   0.0.0.0
ASBR Status                 No
ABR Status                  No          (0)
Redistribute Ext Routes from
Initial SPF schedule delay  0          (msecs)
Minimum hold time for SPF  5000       (msecs)
Maximum hold time for SPF  10000      (msecs)
External LSA Counter       0
External LSA Checksum Sum  0
Originate New LSA Counter  0
Rx New LSA Counter        0
External LSA Limit        14913080
Database Overflow Interval  0
Database Overflow State :  NOT OVERFLOWED
RFC 1583 Compatibility :   Enabled
NSSA Translator:          Enabled
Nonstop Routing:         Disabled
Originating router-LSAs with maximum metric
Condition: Always Current State: Active
Link Type: TRANSIT
Additional LSAs originated with maximum metric:
LSA Type                   Metric Value
AS-External                16711680
Type 3 Summary             16711680
Type 4 Summary             16711680
```

## show ip ospf area

Displays the OSPF area table in a specified format.

<b>Syntax</b>	<b>show ip ospf area</b> { <i>A.B.C.D</i>   <i>decimal</i> } <b>database link-state</b> [ <b>advertise</b> <i>index</i>   <b>asbr</b> { <i>asbrid</i>   <b>adv-router</b> <i>rid</i> }   <b>extensive</b>   <b>link-state-id</b> <i>lid</i>   <b>network</b> { <i>netid</i>   <b>adv-router</b> <i>rid</i> }   <b>nssa</b> { <i>nsaaid</i>   <b>adv-router</b> <i>rid</i> }   <b>router</b> { <i>routerid</i>   <b>adv-router</b> <i>rid</i> }   <b>router-id</b> <i>rid</i>   <b>self-originate</b>   <b>sequence-number</b> <i>num</i>   <b>summary</b> { <i>lid</i>   <b>adv-router</b> <i>rid</i> } ] [ [ <b>vrf</b> <i>vrfname</i> [ <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ] ]   <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ]
<b>Parameters</b>	<b>A.B.C.D</b> Area address in dotted decimal format.
	<b>decimal</b> Area address in decimal format. Valid values range from 0 to 2147483647.
	<b>database link-state</b> Displays database link-state information.
	<b>advertise index</b> Displays the link state by Link State Advertisement (LSA) index.
	<b>asbr</b> Displays the link state for all autonomous system boundary router (ASBR) links.
	<b>asbrid</b> Displays the state of a single ASBR link that you specify.
	<b>adv-router rid</b> Displays the link state for the advertising router that you specify.
	<b>extensive</b> Displays detailed information for all entries in the OSPF database.
	<b>link-state-id lid</b> Displays the link state by link-state ID.
	<b>network</b> Displays the link state by network link.
	<b>netid</b> Displays the link state of a particular network link that you specify.
	<b>adv-router rid</b> Displays the link state by the advertising router that you specify.
	<b>nssa</b> Displays the link state by not-so-stubby area (NSSA).
	<b>nsaaid</b> Displays the link state of a particular NSAA area that you specify.
	<b>adv-router rid</b> Displays the link state for the advertising router that you specify.
	<b>router</b> Displays the link state by router link.
	<b>routerid</b> Displays the link state of a particular router link that you specify.
	<b>adv-router rid</b> Displays the link state by the advertising router that you specify.
	<b>router-id rid</b> Displays the link state by advertising router that you specify.
	<b>self-originate</b> Displays the link state by advertising router that you specify.

Displays self-originated link states.

**sequence-number *num***

Displays the link-state by sequence number that you specify.

**summary**

Displays the link state summary. Can specify link-state ID or advertising router ID.

**adv-router *rid***

Displays the link state for the advertising router that you specify.

**vrf vrf *name***

Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.

**rbridge-id**

Specifies an RBridge or all RBridges.

***rbridge-id***

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show ip ospf area
```

```
Number of Areas is 4
```

Indx	Area	Type	Cost	SPFR	ABR	ASBR	LSA	Chksum (Hex)
1	10.0.0.0	normal	0	4	0	0	0	00000000
2	11.0.0.0	normal	0	3	0	0	0	00000000
3	4	nssa	120	0	0	0	0	00000000
4	6	stub	110	0	0	0	0	00000000

## show ip ospf border-routers

Displays information about border routers and boundary routers.

<b>Syntax</b>	<b>show ip ospf border-routers</b> [ <i>A.B.C.D</i> ] [ [ <b>vrf</b> <i>vrfname</i> [ <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ] ]   <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ]
<b>Parameters</b>	<b>A.B.C.D</b>
	Specifies the router ID in dotted decimal format.
	<b>vrf vrf name</b>
	Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.
	<b>rbridge-id</b>
	Specifies an RBridge or all RBridges.
	<b>rbridge-id</b>
	Specifies an RBridge ID.
	<b>all</b>
	Specifies all RBridges.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Use this command to display information about area border routers (ABRs) and autonomous system boundary routers (ASBRs). You can display information for all ABRs and ASBRs or for a specific router.
<b>Examples</b>	To display information for all ABRs and ASBRs:

```
switch# show ip ospf border-routers
```

Index	Router-ID	Router-type	Next-hop-router	Outgoing-interface	Area
1	1.0.0.1	ABR	22.22.22.2	2/2	7
1	1.0.0.2	ABR	22.22.22.2	2/2	7
1	1.0.0.1	ASBR	22.22.22.2	2/2	7
1	1.0.0.2	ASBR	22.22.22.2	2/2	7

# show ip ospf config

Displays OSPF configuration.

**Syntax** `show ip ospf config [[ vrf vrfname [ rbridge-id { rbridge-id | all } ] ] | rbridge-id { rbridge-id | all } ]`

**Parameters** `vrf vrf name`

Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.

`rbridge-id`

Specifies an RBridge or all RBridges.

`rbridge-id`

Specifies an RBridge ID.

`all`

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show ip ospf config
```

```
Router OSPF: Enabled
Redistribution: Disabled
Default OSPF Metric: 10
OSPF Auto-cost Reference Bandwidth: Disabled
OSPF Redistribution Metric: Type2
OSPF External LSA Limit: 14913080
OSPF Database Overflow Interval: 0
RFC 1583 Compatibility: Enabled
Router id: 0.0.0.0
OSPF Area currently defined:
Area-ID      Area-Type Cost
0            normal  0
1            normal  0
OSPF Area Range currently defined:
Area-ID  Range-Address  Subnetmask  Status  Config-Cost
1        20.0.0.0      255.0.0.0  advertise  100
1        30.0.0.0      255.0.0.0  not-advertise  -
```

## show ip ospf database

Shows database information.

**Syntax** `show ip ospf database [ [ vrf vrfname [ rbridge-id { rbridge-id | all } ] ] | rbridge-id { rbridge-id | all } ]`

`show ip ospf database database-summary [ [ vrf vrfname [ rbridge-id { rbridge-id | all } ] ] | rbridge-id { rbridge-id | all } ]`

`show ip ospf database external-link-state [ advertise index | extensive | link-state-id lid | router-id routerid | sequence-number num ] [ [ vrf vrfname [ rbridge-id { rbridge-id | all } ] ] | rbridge-id { rbridge-id | all } ]`

`show ip ospf database link-state [ advertise index | asbr { asbrid | adv-router rid } | extensive | link-state-id lid | network { netid | adv-router rid } | nssa { nsaaid | adv-router rid } | router [ { routerid | adv-router rid } | router-id routerid | self-originate | sequence-number num | summary { lid | adv-router rid } ]`

**Parameters** **database-summary**

Displays how many link state advertisements (LSAs) of each type exist for each area, as well as total number of LSAs.

**external-link-state**

Displays information by external link state, based on the following parameters:

**advertise *index***

Displays the hexadecimal data in the specified LSA packet. The *index* parameter identifies the LSA packet by its position in the router's External LSA table. To determine an LSA packet's position in the table, enter the **show ip ospf external-link-state** command.

**extensive**

Displays LSAs in decrypt format. Do not use this parameter in combination with other display parameters because the entire database is displayed.

**link-state-id *lid***

Displays external LSAs for the LSA source that you specify.

**router-id *routerid***

Displays external LSAs for the advertising router that you specify.

**sequence-number *num***

Displays the External LSA entries for the hexadecimal LSA sequence number that you specify.

**link-state**

Displays the link state, based on the following parameters:

**advertise *index***

Displays the hexadecimal data in the specified LSA packet. The *index* parameter identifies the LSA packet by its position in the router's external-LSA table. To determine an LSA packet's position in the table, enter the **show ip ospf external-link-state** command.

**asbr**

Displays autonomous system boundary router (ASBR) LSAs.

**extensive**

Displays LSAs in decrypt format. Do not use this parameter in combination with other display parameters because the entire database is displayed.

**link-state-id *lid***

Displays LSAs for the LSA source that you specify.

<b>network</b>	Displays either all network LSAs or the LSAs for a network that you specify.
<b>nssa</b>	Displays either all NSSA LSAs or the LSAs for a not-so-stubby area (NSSA) that you specify.
<b>router</b>	Displays LSAs by router link.
<b>router-id <i>routerid</i></b>	Displays LSAs for the advertising router that you specify.
<b>self-originate</b>	Displays self-originated LSAs.
<b>sequence-number</b>	Displays the LSA entries for the hexadecimal LSA sequence number that you specify.
<b>summary</b>	Displays summary information. You can specify link-state ID or advertising router ID.
<b>adv-router <i>rid</i></b>	Displays the link state for the advertising router that you specify.
<b>vrf <i>name</i></b>	Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.
<b>rbridge-id</b>	Specifies an RBridge or all RBridges.
<b><i>rbridge-id</i></b>	Specifies an RBridge ID.
<b>all</b>	Specifies all RBridges.
<b>Modes</b>	Privileged EXEC mode

Examples

```
switch# show ip ospf database
```

```
Link States
Index Area ID      Type LS ID      Adv Rtr      Seq(Hex) Age  Cksum
1      6      Summ 0.0.0.0      22.22.22.1  80000002 1   0xbfec
2      7      Rtr  22.22.22.1   22.22.22.1  80000002 6   0xb8cc
3      0      Summ 22.22.22.0   22.22.22.1  80000001 6   0x4294
```

```
switch# show ip ospf database
```

```
Link States
Index Area ID      Type LS ID      Adv Rtr      Seq(Hex) Age  Cksum
1      6      Summ 0.0.0.0      22.22.22.1  80000002 52  0xbfec
2      7      Rtr  22.22.22.1   22.22.22.1  80000003 7   0xda66
3      7      Rtr  1.0.0.2      1.0.0.2     80000001 1248 0xee99
4      7      Rtr  192.0.0.1    192.0.0.1   80000006 8   0x9c80
5      7      Rtr  1.0.0.1      1.0.0.1     80000001 1248 0xfe8b
6      7      Net  22.22.22.1   22.22.22.1  80000002 7   0xb419
7      7      Summ 1.0.2.0      1.0.0.1     80000001 1248 0x4314
8      7      Summ 1.0.0.0      1.0.0.1     80000001 1248 0x59ff
9      7      Summ 1.0.3.0      1.0.0.2     80000001 1248 0x3223
10     7      Summ 1.0.1.0      1.0.0.1     80000001 1248 0x4e0a
11     7      Summ 1.0.4.0      1.0.0.2     80000001 1248 0x272d
12     0      Summ 22.22.22.0   22.22.22.1  80000001 57  0x4294
13     0      ASBR 1.0.0.2     22.22.22.1  80000001 7   0x38db
14     0      ASBR 1.0.0.1     22.22.22.1  80000001 7   0x42d2
```

```
Type-5 AS External Link States
```

```
Index Age  LS ID      Router      Netmask  Metric  Flag Fwd Address
1      1248 1.0.5.0    1.0.0.1    ffffffff0 00000001 0000 0.0.0.0
2      1248 1.0.8.0    1.0.0.2    ffffffff0 00000001 0000 0.0.0.0
3      1248 1.0.6.0    1.0.0.1    ffffffff0 00000001 0000 0.0.0.0
4      1248 1.0.7.0    1.0.0.2    ffffffff0 00000001 0000 0.0.0.0
```



# show ip ospf interface

Displays information about all or specific OSPF-enabled interfaces.

**Syntax** **show ip ospf interface** [ { *A.B.C.D* | *<N>***gigabitethernet** *rbridge-id/slot/port* [ **brief** ] | [ **brief** ] | **loopback** *number* | **port-channel** *number* [ **brief** ] | **ve** *vlan\_id* [ **brief** ] } [ **brief** ] ] [ **vrf** *vrfname* [ **brief** ] ] | **rbridge-id** { *rbridge-id* | **all** } ] ] | **rbridge-id** { *rbridge-id* | **all** } ]

**Parameters** **A.B.C.D**

Specifies interface IP address in dotted decimal format.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace **<N>gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**brief**

Displays brief summary information about the specified port.

**loopback number**

Specifies a loopback port number in the range of 1 to 255.

**port-channel number**

Specifies the interface is a port-channel. The number of available channels range from 1 through 6144.

**brief**

Displays brief summary information about the specified port channel.

**ve vlan\_id**

Specifies the VLAN number.

**brief**

Displays brief summary information about the specified VLAN.

**brief**

Displays brief summary about all enabled interfaces.

**vrf vrfname**

Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.

**rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** If the physical interface type and name are specified, the **rbridge-id** option is not available.

**Examples** To display information about all enabled interfaces:

```
switch# show ip ospf interface
TenGigabitEthernet 3/0/1 admin up, oper up
IP Address 100.1.1.1, Area 0
Database Filter: Not Configured
State passive(default none), Pri 1, Cost 1, Options 2, Type broadcast Events 0
Timers(sec): Transmit 1, Retrans 5, Hello 10, Dead 40
DR: Router ID 0.0.0.0 Interface Address 0.0.0.0
BDR: Router ID 0.0.0.0 Interface Address 0.0.0.0
Neighbor Count = 0, Adjacent Neighbor Count= 0
Authentication-Key: None
MD5 Authentication: Key None, Key-Id None , Auth-change-wait-time 300
```

# show ip ospf neighbor

Displays OSPF neighbor information.

**Syntax** **show ip ospf neighbor** [ **extensive** ] { <N>**gigabitethernet** *rbridge-id/slot/port* | **loopback** *number* | **port-channel** *number* | **router-id** *A.B.C.D* | **ve** *vlan\_id* } [ [ **vrf** *vrfname* [ **rbridge-id** { *rbridge-id* | **all** } ] ] | **rbridge-id** { *rbridge-id* | **all** } ]

**Parameters** **extensive**

Shows detailed information about all neighbors.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**loopback number**

Specifies a loopback port number in the range from 1 through 255.

**port-channel number**

Displays neighbor information for the specified, valid port-channel number. Valid values range from 1 through 6144.

**router-id A.B.C.D**

Displays neighbor information for the specified router ID (in dotted decimal format).

**ve vlan\_id**

Specifies a virtual Ethernet (VE) interface.

**vrf vrfname**

Specifies the name of the VRF instance. If this option is not used, details for the default VRF instance are shown in the output.

**rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** If the physical interface type and name are specified, the **rbridge-id** option is not available.

**Examples** To show information about all OSPF neighbors:

```
switch# show ip ospf neighbor
```

```
Number of Neighbors is 2, in FULL state 1
Port Address Pri State Neigh Address Neigh ID Ev Opt Cnt
2/2 22.22.22.1 0 FULL/OTHER 22.22.22.2 192.0.0.1 5 2 0
```

## show ip ospf redistribute route

Displays routes that have been redistributed into OSPF.

<b>Syntax</b>	<b>show ip ospf redistribute route</b> [ <i>A.B.C.D:M</i> ] [ [ <b>vrf</b> <i>vrfname</i> [ <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ] ]   <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ]
<b>Parameters</b>	<p><b><i>A.B.C.D:M</i></b></p> <p>Specifies an IP address and mask for the output.</p> <p><b>vrf <i>vrfname</i></b></p> <p>Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.</p> <p><b>rbridge-id</b></p> <p>Specifies an RBridge or all RBridges.</p> <p><b><i>rbridge-id</i></b></p> <p>Specifies an RBridge ID.</p> <p><b>all</b></p> <p>Specifies all RBridges.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	<pre>switch# show ip ospf redistribute route 30.30.30.0 255.255.255.0 fwd 0.0.0.0 (0) metric 10 connected 50.1.0.0 255.255.0.0 fwd 100.1.1.100 (1) metric 10 static</pre>

## show ip ospf routes

Displays OSPF calculated routes.

<b>Syntax</b>	<b>show ip ospf routes</b> [ <i>A.B.C.D</i> ] [ [ <b>vrf</b> <i>vrfname</i> [ <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ] ]   <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ]
<b>Parameters</b>	<p><b>A.B.C.D</b> Specifies a destination IP address in dotted decimal format.</p> <p><b>vrf vrfname</b> Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.</p> <p><b>rbridge-id</b> Specifies an RBridge or all RBridges.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>all</b> Specifies all RBridges.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Use this command to display routes that OSPF calculated. You can display all routes or you can display information about a specific route.
<b>Examples</b>	To display all OSPF-calculated routes:

```
switch# show ip ospf routes
```

```
OSPF Regular Routes 2:
  Destination      Mask          Path_Cost  Type2_Cost  Path_Type
  2.2.2.0          255.255.255.0  1          0           Intra
  Adv_Router      Link_State    Dest_Type  State       Tag        Flags
  2.2.2.1          2.2.2.1      Network   Valid       0          4000*
  Paths Out_Port  Next_Hop     Type       State
  1 eth1/2         0.0.0.0      OSPF      00 00
  Destination      Mask          Path_Cost  Type2_Cost  Path_Type
  22.22.22.0       255.255.255.0  1          0           Intra
  Adv_Router      Link_State    Dest_Type  State       Tag        Flags
  2.2.2.1          22.22.22.1   Network   Valid       0          4000*
  Paths Out_Port  Next_Hop     Type       State
  1 eth2/2         0.0.0.0      OSPF      00 00
```

# show ip ospf summary

Displays summary information for all OSPF instances.

**Syntax** `show ip ospf summary [ [ vrf vrfname [ rbridge-id { rbridge-id | all } ] ] | rbridge-id { rbridge-id | all } ]`

**Parameters** `vrf vrfname`

Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.

`rbridge-id`

Specifies an RBridge or all RBridges.

`rbridge-id`

Specifies an RBridge ID.

`all`

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show ip ospf summary
```

```
Total number of OSPF instances: 1
```

```
Seq Instance      Intfs  Nbrs   Nbrs-Full LSAs   Routes
1  default-vrf    5      2      1             12      2
```

```
telnet@NetIron MLX-4 Router(config-ospf-router)#show ip ospf border-routers
```

```
router ID      router type next hop router outgoing interface Area
1  1.0.0.1      ABR         22.22.22.2      2/2          7
1  1.0.0.2      ABR         22.22.22.2      2/2          7
1  1.0.0.1      ASBR        22.22.22.2      2/2          7
1  1.0.0.2      ASBR        22.22.22.2      2/2          7
```

## show ip ospf traffic

Displays OSPF traffic details.

<b>Syntax</b>	<b>show ip ospf traffic</b> [ { <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>loopback</b> <i>number</i>   <b>port-channel</b> <i>number</i>   <b>ve</b> <i>vlan_id</i> } ] [ [ <b>vrf</b> <i>vrfname</i> [ <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ] ]   <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ]																					
<b>Parameters</b>	<p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>loopback number</b> Specifies a loopback port number in the range from 1 through 255.</p> <p><b>port-channel number</b> Specifies the interface is a port-channel. The number of available channels range from 1 through 6144.</p> <p><b>ve vlan_id</b> Specifies a virtual Ethernet (VE) interface.</p> <p><b>vrf vrfname</b> Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.</p> <p><b>rbridge-id</b> Specifies an RBridge or all RBridges.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>all</b> Specifies all RBridges.</p>																					
<b>Modes</b>	Privileged EXEC mode																					
<b>Usage Guidelines</b>	<p>Use this command to display details of OSPF traffic sent and received. You can display all traffic or specify a particular interface.</p> <p>If the physical interface type and name are specified, the rbridge-id option is not available.</p>																					
<b>Examples</b>	<p>To show all OSPF traffic:</p> <pre>switch# show ip ospf traffic</pre> <table border="0"> <thead> <tr> <th style="text-align: left;">Packets Received</th> <th style="text-align: left;">Packets Sent</th> <th></th> </tr> </thead> <tbody> <tr> <td>Hello</td> <td>10</td> <td>10</td> </tr> <tr> <td>Database</td> <td>90</td> <td>89</td> </tr> <tr> <td>LSA Req</td> <td>12</td> <td>11</td> </tr> <tr> <td>LSA Upd</td> <td>12</td> <td>12</td> </tr> <tr> <td>LSA Ack</td> <td>12</td> <td>12</td> </tr> <tr> <td colspan="3">No Packet Errors!</td> </tr> </tbody> </table>	Packets Received	Packets Sent		Hello	10	10	Database	90	89	LSA Req	12	11	LSA Upd	12	12	LSA Ack	12	12	No Packet Errors!		
Packets Received	Packets Sent																					
Hello	10	10																				
Database	90	89																				
LSA Req	12	11																				
LSA Upd	12	12																				
LSA Ack	12	12																				
No Packet Errors!																						



# show ip ospf virtual

Displays information about virtual links.

**Syntax** `show ip ospf virtual { link | neighbor } [ index ] [ [ vrf vrfname [ rbridge-id { rbridge-id | all } ] ] | rbridge-id { rbridge-id | all } ]`

**Parameters** `link index`

Shows information about all virtual links or one virtual link that you specify.

`neighbor index`

Shows information about all virtual neighbors or one virtual neighbor that you specify.

`vrf vrfname`

Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.

`rbridge-id`

Specifies an RBridge or all RBridges.

`rbridge-id`

Specifies an RBridge ID.

`all`

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display information about virtual links and virtual neighbors over virtual links. You can show information about all virtual links or virtual neighbors, or you can specify a specific virtual link or virtual neighbor.

**Examples** To show information about all virtual links:

```
switch# show ip ospf virtual link
Indx      Transit Area      Router ID      Transit(sec) Retrans(sec)
Hello(sec)
1          7
192.0.0.1 1
5          10
Dead(sec) events state Authentication-Key
40 0 down None
MD5 Authentication-Key: None
MD5 Authentication-Key-Id: None
MD5 Authentication-Key-Activation-Wait-Time: 300
```

To show information about all virtual neighbors:

```
switch# show ip ospf virtual neighbor
Indx      Transit Area      Router ID      Transit(sec)
Retrans(sec) Hello(sec)
1          7
192.0.0.1 1
5          10
Dead(sec) events state Authentication-Key
40 0 down None
MD5 Authentication-Key: None
MD5 Authentication-Key-Id: None
MD5 Authentication-Key-Activation-Wait-Time: 300
```

## show ip pim bsr

Displays the Boot Strap Router (BSR) information.

<b>Syntax</b>	<b>show ip pim bsr</b> [ <b>rbridge-id</b> <i>rbridge-id</i> ]
<b>Parameters</b>	<b>rbridge-id</b> <i>rbridge-id</i> Specifies an RBridge ID.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	The information displayed ignores whether the Protocol Independent Multicast router is the elected BSR or not.
<b>Examples</b>	A typical output for this command.  <pre>switch# show ip pim bsr  PIMv2 Bootstrap information : ----- BSR address: 10.10.10.1. Hash Mask Length 32. Priority 0.</pre>
<b>Related Commands</b>	<a href="#">router pim</a> , <a href="#">show ip pim group</a> , <a href="#">show ip pim neighbor</a> , <a href="#">show ip pim rpf</a> , <a href="#">show ip pim rp-hash</a> , <a href="#">show ip pim rp-map</a> , <a href="#">show ip pim rp-set</a> , <a href="#">show ip pim-sparse</a> , <a href="#">show ip pim traffic</a> , <a href="#">show ip pim traffic</a> , <a href="#">show ip pim traffic</a>

## show ip pim group

Displays the list of multicast groups.

**Syntax** `show ip pim group [ rbridge-id rbridge-id ]`

**Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display a list of the multicast groups that Protocol Independent Multicast (PIM) has learned. All groups, irrespective of how PIM learned them, are displayed.

**Examples** A typical output for this command.

```
switch# show ip pim group

Total number of groups: 2
1   Group 225.0.0.1
    Group member at   Te 19/2/1: Te 19/2/1
    Group member at   Ve 100: Ve 100
2   Group 225.0.0.2
    Group member at   Te 19/2/1: Te 19/2/1
    Group member at   Ve 100: Ve 100
```

**Related Commands** [router pim](#), [show ip pim bsr](#), [show ip pim neighbor](#), [show ip pim rpf](#), [show ip pim rp-hash](#), [show ip pim rp-map](#), [show ip pim rp-set](#), [show ip pim-sparse](#), [show ip pim traffic](#), [show ip pim traffic](#), [show ip pim traffic](#)

## show ip pim mcache

Displays the multicast cache.

- Syntax** `show ip pim mcache [ ip-address-1 [ ip-address-2 ] ] [ rbridge-id rbridge-id ]`
- Parameters**
- ip-address-1** Group/Source IP address
  - ip-address-2** Group/Source IP address
  - rbridge-id rbridge-id** Specifies an RBridge ID.
- Modes** Privileged EXEC mode
- Examples** A typical output for this command.

```
switch# show ip pim mcache 231.0.0.10
IP Multicast Mcache TableEntry Flags : sm - Sparse Mode, ssm - Source Specific
Multicast
RPT - RPT Bit, SPT - SPT Bit, LSrc - Local Source
LRcv - Local Receiver, RegProbe - Register In Progress
RegSupp - Register Suppression Timer, Reg - Register Complete
L2Reg - L2 Registration, needRte - Route Required for Src/RPTotal entries in mcache:
2001
(*, 231.0.0.10) RP 22.22.22.22 in Te 18/0/5, Uptime 00:00:56
Sparse Mode, RPT=1 SPT=0 Reg=0 L2Reg=0 RegSupp=0 RegProbe=0 LSrc=0 LRcv=1
upstream neighbor=13.13.13.1
num oifs = 1
Ve 10, Ve 10(00:00:56/0)
Flags (0x012604a0)
sm=1 ssm=0 needRte=02 (14.14.14.100, 231.0.0.10) in Te 18/0/1, Uptime 00:00:31
Sparse Mode, RPT=0 SPT=0 Reg=0 L2Reg=0 RegSupp=0 RegProbe=0 LSrc=0 LRcv=1
upstream neighbor=48.48.48.5
num oifs = 1
Ve 10, Ve 10(00:00:31/0)
Flags (0x010600f5)
sm=1 ssm=0 needRte=0Number of matching entries: 2
```

- Related Commands** [router pim](#), [show ip pim bsr](#), [show ip pim group](#), [show ip pim neighbor](#), [show ip pim rpf](#), [show ip pim rp-hash](#), [show ip pim rp-map](#), [show ip pim rp-set](#), [show ip pim-sparse](#), [show ip pim traffic](#), [show ip pim traffic](#)

# show ip pim neighbor

Displays the Protocol Independent Multicast (PIM) neighbor information.

**Syntax** `show ip pim neighbor [ interface { <N>gigabitethernet | ve vlan-id } | rbridge-id { rbridge-id | all } ]`

**Parameters** **interface**

Specifies an interface.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace **<N>gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**ve vlan\_id**

Specifies a virtual Ethernet (VE) interface (VLAN interface number). Range is from 1 through 8191.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display information about all the neighbors that the PIM router perceives as active.

**Examples** A typical output for this command:

```
switch# show ip pim neighbor

Total Number of Neighbors : 43
Port          Phy_Port      Neighbor      Holdtime   Age    UpTime      Priority
              |            |              |            |      |      |
Te 125/1/31   Te 125/1/31   125.31.1.1    105        0     00:29:30    1
Te 125/1/43   Te 125/1/43   125.49.43.2   105        20     00:29:30    1
Te 125/2/1    Te 125/2/1    125.2.1.2     105        10     00:29:40    1
Ve 2000       Ve 2000       10.1.1.5      105        0     00:27:00    1
Ve 2001       Ve 2001       21.1.1.3      105        0     00:27:00    1
Ve 2002       Ve 2002       22.1.1.131    105        0     00:27:00    1
```

**Related Commands** [router pim](#), [show ip pim bsr](#), [show ip pim group](#), [show ip pim rpf](#), [show ip pim rp-hash](#), [show ip pim rp-map](#), [show ip pim rp-set](#), [show ip pim-sparse](#), [show ip pim traffic](#), [show ip pim traffic](#), [show ip pim traffic](#)

## show ip pim rpf

Displays the Reverse Path Forwarding (RPF) for a given unicast IP address.

<b>Syntax</b>	<b>show ip pim rpf</b> [ <i>A.B.C.D</i>   <b>rbridge-id</b> <i>rbridge-id</i> ]
<b>Parameters</b>	<b>A.B.C.D</b> The unicast IP address. <b>rbridge-id</b> <i>rbridge-id</i> Specifies an RBridge ID.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Use this command to display the port that PIM regards as the best reverse path for a given unicast IP address. The unicast IP address may be an RP address or source address.
<b>Examples</b>	A typical output for this command. <pre>switch# show ip pim rpf 123.32.120.10 Source 123.32.120.10 directly connected on Te 1/0/21</pre>
<b>Related Commands</b>	<a href="#">router pim</a> , <a href="#">show ip pim bsr</a> , <a href="#">show ip pim group</a> , <a href="#">show ip pim neighbor</a> , <a href="#">show ip pim rp-hash</a> , <a href="#">show ip pim rp-map</a> , <a href="#">show ip pim rp-set</a> , <a href="#">show ip pim-sparse</a> , <a href="#">show ip pim traffic</a>

## show ip pim rp-hash

Displays the Rendezvous Point (RP) information for a Protocol Independent Multicast (PIM) sparse group.

**Syntax** `show ip pim rp-hash [ A.B.C.D | rbridge-id rbridge-id ]`

**Parameters** *A.B.C.D* Group address in dotted decimal format.  
**rbridge-id** *rbridge-id* Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command displays all RPs for the given group. The RP address could have been learned either from the Boot Strap Router (BSR) or configured statically.

**Examples** A typical output for this command.  

```
switch# show ip pim rp-hash 225.125.1.1
RP: 10.10.10.1, v2
```

**Related Commands** [router pim](#), [show ip pim bsr](#), [show ip pim group](#), [show ip pim neighbor](#), [show ip pim rpf](#), [show ip pim rp-map](#), [show ip pim rp-set](#), [show ip pim-sparse](#), [show ip pim traffic](#), [show ip pim traffic](#), [show ip pim traffic](#)

## show ip pim rp-map

Displays the Rendezvous Point (RP) to group mappings.

**Syntax** `show ip pim rp-map [ rbridge-id rbridge-id ]`

**Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples** A typical output for this command.

```
switch# show ip pim rp-map

Number of group-to-RP mappings: 6
Group address RP address
-----
1 239.255.163.1 99.99.99.5
2 239.255.163.2 99.99.99.5
3 239.255.163.3 99.99.99.5
4 239.255.162.1 99.99.99.5
5 239.255.162.2 43.43.43.1
6 239.255.162.3 99.99.99.5
```

**Related Commands** [router pim](#), [show ip pim bsr](#), [show ip pim group](#), [show ip pim neighbor](#), [show ip pim rpf](#), [show ip pim rp-hash](#), [show ip pim rp-set](#), [show ip pim-sparse](#), [show ip pim traffic](#), [show ip pim traffic](#), [show ip pim traffic](#)



## show ip pim rp-set

Displays the Rendezvous Point (RP) set list.

**Syntax** `show ip pim rp-set [ rbridge-id rbridge-id ]`

**Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command displays information regarding all RPs that Protocol Independent Multicast (PIM) perceives. The RPs may be either statically or dynamically learned.

**Examples** A typical output for this command.

```
switch# show ip pim rp-set

Static RP
-----
Static RP count: 1
  RP: 22.22.22.22
Number of group prefixes Learnt from BSR: 1
Group prefix = 231.0.0.0/4      # RPs expected: 1
      # RPs received: 1
      RP 1: 33.33.33.33   priority=0   age=10   holdtime=150
switch#
```

**Related Commands** [router pim](#), [show ip pim bsr](#), [show ip pim group](#), [show ip pim neighbor](#), [show ip pim rpf](#), [show ip pim rp-hash](#), [show ip pim rp-map](#), [show ip pim-sparse](#), [show ip pim traffic](#), [show ip pim traffic](#), [show ip pim traffic](#)

## show ip pim-sparse

Displays the internal parameters of the Protocol Independent Multicast (PIM) router or the PIM enabled interface.

**Syntax** `show ip pim-sparse [ interface { <N>gigabitethernet rbridge-id/slot/port | ve vlan_id | rbridge-id rbridge-id } ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

`rbridge-id rbridge-id`

Specifies an RBridge ID.

`slot`

Specifies a valid slot number.

`port`

Specifies a valid port number.

`ve vlan_id`

Specifies a virtual Ethernet (VE) interface.

**Modes** Privileged EXEC mode

**Examples** A typical output for this command.

```
switch# show ip pim-sparse
Global PIM Sparse Mode settings
Maximum mcache: 2048 Current count: 0
Hello interval: 30 Neighbor timeout: 105
Join/Prune interval: 60 Inactivity interval: 180
Hardware drop enabled: Yes Prune wait interval: 3
Bootstrap Msg interval: 60 Candidate-RP Msg interval: 60
Register Suppress Time: 60 Register Probe Time: 10
Register Stop Delay: 60 Register Suppress interval: 60
SSM Enabled: No SPT Threshold: 1
-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
Interface |Local      |Ver  |Mode|Designated Router |TTL |Multicast|VRF |DR
Boundary | |Prio
-----+-----+-----+-----+-----+-----+-----+-----+-----+-----+
Te 1/0/15 12.12.12.12 v2  SM  Itself          1   None      0   1
```

**Related Commands** [router pim](#), [show ip pim bsr](#), [show ip pim group](#), [show ip pim neighbor](#), [show ip pim rpf](#), [show ip pim rp-hash](#), [show ip pim rp-map](#), [show ip pim rp-set](#), [show ip pim traffic](#), [show ip pim traffic](#), [show ip pim traffic](#)

## show ip pim traffic

Displays the Protocol Independent Multicast (PIM) traffic statistics categorized by each PIM enabled interface.

**Syntax** `show ip pim traffic [ rbridge-id rbridge-id ]`

**Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Related Commands** [router pim](#), [show ip pim bsr](#), [show ip pim group](#), [show ip pim neighbor](#), [show ip pim rpf](#), [show ip pim rp-hash](#), [show ip pim rp-map](#), [show ip pim rp-set](#), [show ip pim-sparse](#)

## show ip route

Shows IP route information.

**Syntax** **show ip route**

**show ip route** *A.B.C.D/M* [ { **debug** | **detail** | **longer** } ]

**show ip route** [ **all** ] [ **connected** ] [ **ospf** ] [ **bgp** ] [ **slot** *line\_card\_number* ] [ **static** ] [ **summary** ] [ **vrf** *name* ] [ **rbridge-id** *rbridge-id* ]

**show ip route nexthop** [ *nexthopID* [ **ref-routes** ] ]

**Parameters** **A.B.C.D/M**

Specifies the IPv4 address/length to show information for a specific route.

**debug**

Displays debug information.

**detail**

Displays more-specific routes with the same specified prefix.

**longer**

Displays routes with addresses that match the address/mask prefix.

**rbridge-id**

Displays routes for a selected RBridge ID.

**vrf**

Displays routes for a selected VRF instance.

**all**

Displays information for all configured ip routes.

**bgp**

Displays BGP route information.

**connected**

Displays directly connected routes, such as local Layer 3 interfaces.

**nexthop**

Displays information about the configured next hop.

***nexthopID***

Valid values range from 0 through 65535.

**ref-routes**

Displays all routes that point to the specified *nexthopID* .

**ospf**

Displays routes learned from the Open Shortest Path First (OSPF) protocol.

**rbridge-id** *rbridge-id*

Displays routes for a selected RBridge ID.

**slot** *line\_card\_number*

Displays information for routes with the provided line card number.

**static**

Displays information about the configured static routes.

**summary**

Displays summary information for all routes.

**vrf** *name*

Displays routes for a selected VRF instance.

**Modes** Privileged EXEC mode

### Usage Guidelines

#### ATTENTION

Beginning with release 5.0.0, support is provided for the management VRF. The default VRF and other user-configured (nondefault) VRFs can no longer be used for router management. This feature is allowed only on management VRF ports.

To view the status of management routes, use the **show ip route vrf** command and enter **mgmt-vrf** as follows. You must enter the name of the management VRF manually. Example output is shown below.

```
show ip route vrf mgmt-vrf
```

```
switch# show ip route vrf mgmt-vrf
Total number of IP routes: 3
Type Codes - B:BGP D:Connected O:OSPF S:Static; Cost - Dist/Metric
BGP Codes - i:iBGP e:eBGP
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2 s:Sham Link
      Destination      Gateway      Port      Cost      Type  Uptime
0.0.0.0/0              10.25.224.1 mgmt 1      1/1      S    10d17h
10.25.224.0/24        DIRECT      mgmt 1      0/0      D    10d17h
10.25.224.18/32      DIRECT      mgmt 1      0/0      D    10d17h
```

#### Examples Typical command output for basic command:

```
switch# show ip route

Total number of IP routes: 7
Type Codes - B:BGP D:Connected I:ISIS O:OSPF R:RIP S:Static; Cost - Dist/Metric
BGP Codes - i:iBGP e:eBGP
ISIS Codes - L1:Level-1 L2:Level-2
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2 s:Sham Link
      Destination      Gateway      Port      Cost      Type  Uptime
1      1.1.1.0/24          DIRECT      Te 2/1      0/0      D    1m57s
2      1.1.2.0/24          DIRECT      Te 2/2      0/0      D    0m6s
3      100.1.1.0/24        1.1.1.2     Te 2/1      1/1      S    1m32s
4      100.1.2.0/24        1.1.1.2     Te 2/1      1/1      S    1m16s
5      100.1.3.0/24        1.1.1.2     Te 2/1      1/1      S    1m13s
6      100.2.1.0/24        DIRECT      Te 2/1      1/1      S    0m57s
7      100.3.1.0/24        1.1.1.2     Te 2/1      1/1      S    0m5s
      100.3.1.0/24        1.1.2.2     Te 2/2      1/1      S    0m5s
```

#### Typical command output for connected option:

```
switch# show ip route connected

Type Codes - B:BGP D:Connected I:ISIS O:OSPF R:RIP S:Static; Cost - Dist/Metric
BGP Codes - i:iBGP e:eBGP
ISIS Codes - L1:Level-1 L2:Level-2
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2 s:Sham Link
      Destination      Gateway      Port      Cost      Type  Uptime
1      1.1.1.0/24          DIRECT      Te 2/1      0/0      D    4m33s
2      1.1.2.0/24          DIRECT      Te 2/2      0/0      D    2m42s
```

#### Typical command output for summary option:

```
switch(config)# do show ip route summary

IP Routing Table - 7 entries:
  2 connected, 5 static, 0 RIP, 0 OSPF, 0 BGP, 0 ISIS
Number of prefixes:
 /24: 7
NextHop Table Entry - 4 entries
```

Typical command output for static option:

```
switch(config)# do show ip route static

Type Codes - B:BGp D:Connected I:ISIS O:OSPF R:RIP S:Static; Cost - Dist/Metric
BGP Codes - i:iBGP e:eBGP
ISIS Codes - L1:Level-1 L2:Level-2
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2 s:Sham Link
      Destination      Gateway      Port      Cost      Type      Uptime
1      100.1.1.0/24      1.1.1.2      Te 2/1      1/1      S      4m27s
2      100.1.2.0/24      1.1.1.2      Te 2/1      1/1      S      4m11s
3      100.1.3.0/24      1.1.1.2      Te 2/1      1/1      S      4m8s
4      100.2.1.0/24      DIRECT      Te 2/1      1/1      S      3m52s
5      100.3.1.0/24      1.1.1.2      Te 2/1      1/1      S      3m0s
      100.3.1.0/24      1.1.2.2      Te 2/2      1/1      S      3m0s
```

Typical command output for nexthop option:

```
switch# show ip route nexthop

Total number of IP nexthop entries: 4; Forwarding Use: 4
      NextHopIp      Port      RefCount      ID      Age
1      1.1.1.2      Te 2/1      3/3      2147549184 277
2      0.0.0.0      Te 2/2      1/1      2147484008 191
3      0.0.0.0      Te 2/1      2/2      2147484009 302
4      1.1.1.2      Te 2/1      1/1      2147549185 190
      1.1.2.2      Te 2/2
```

Typical command output for specific ID option:

```
switch# show ip route nexthop 2147549184

      NextHopIp      Port      RefCount      ID      Age
1      1.1.1.2      Te 2/1      3/3      2147549184 288
```

Typical command output for reference routes option:

```
switch# show ip route nexthop 2147549184 ref-routes

Type Codes - B:BGp D:Connected I:ISIS O:OSPF R:RIP S:Static; Cost - Dist/Metric
BGP Codes - i:iBGP e:eBGP
ISIS Codes - L1:Level-1 L2:Level-2
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2 s:Sham Link
      Destination      Gateway      Port      Cost      Type      Uptime
1      100.1.1.0/24      1.1.1.2      Te 2/1      1/1      S      5m10s
2      100.1.2.0/24      1.1.1.2      Te 2/1      1/1      S      4m54s
3      100.1.3.0/24      1.1.1.2      Te 2/1      1
```

Typical command output for specific IP address:

```
switch# show ip route 100.1.1.1

Type Codes - B:BGp D:Connected I:ISIS O:OSPF R:RIP S:Static; Cost - Dist/Metric
BGP Codes - i:iBGP e:eBGP
ISIS Codes - L1:Level-1 L2:Level-2
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2 s:Sham Link
      Destination      Gateway      Port      Cost      Type      Uptime
4      100.1.1.0/24      1.1.1.2      Te 2/1      1/1      S      5m37s
```

Typical detailed output for specific IP address:

```
switch(config)# do show ip route 100.1.1.1 detail

Type Codes - B:BGp D:Connected I:ISIS O:OSPF R:RIP S:Static; Cost - Dist/Metric
BGP Codes - i:iBGP e:eBGP
ISIS Codes - L1:Level-1 L2:Level-2
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2 s:Sham Link
      Destination      Gateway      Port      Cost      Type      Uptime
6      100.1.1.0/24      1.1.1.2      Te 2/1      1/1      S      6m5s
      Nexthop Entry ID:2147549184, Paths: 1, Ref_Count:3/3
```

## Typical command output for longer option:

```
switch# show ip route 100.0.0.0/8 longer
```

1	100.1.1.0/24	1.1.1.2	Te 2/1	1/1	S	14m37s
2	100.1.2.0/24	1.1.1.2	Te 2/1	1/1	S	14m21s
3	100.1.3.0/24	1.1.1.2	Te 2/1	1/1	S	14m18s
4	100.2.1.0/24	DIRECT	Te 2/1	1/1	S	14m2s
5	100.3.1.0/24	1.1.1.2	Te 2/1	1/1	S	13m10s
	100.3.1.0/24	1.1.2.2	Te 2/2	1/1	S	13m10s

# show ip route import

Displays the IPv4 routes imported to a specified VRF

**Syntax** `show ip route import [vrf vrf_name] [rbridge-id {rbridge-id | all}]`

**Parameters** **vrf\_name**

Specifies the VRF whose imported routes you want to display.

**rbridge-id**

Specifies a RBridge or all R Bridges for the VRF whose routes you wish to display.

***rbridge-id***

Specifies an RBridge ID.

**all**

Specifies all R Bridges.

**Modes** Privileged EXEC mode

**Examples** To display IPv4 routes for a VRF that has been configured with the name VRF2:

```
switch# show ip route import vrf
vrf2
Total number of IP routes: 106
Type Codes - B:BGP D:Connected O:OSPF S:Static; Cost - Dist/Metric
BGP Codes - i:iBGP e:eBGP
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2 s:Sham Link
      Destination      Gateway      Port      Cost      Type Uptime
12.0.0.0/24           10.1.21.200  Ve 21      20/0      Be+  1m52s
12.0.1.0/24           10.1.21.200  Ve 21      20/0      Be+  1m52s
12.0.2.0/24           10.1.21.200  Ve 21      20/0      Be+  1m52s
12.0.3.0/24           10.1.21.200  Ve 21      20/0      Be+  1m52s
12.0.4.0/24           10.1.21.200  Ve 21      20/0      Be+  1m52s
12.0.5.0/24           10.1.21.200  Ve 21      20/0      Be+  1m52s
12.0.6.0/24           10.1.21.200  Ve 21      20/0      Be+  1m52s
12.0.7.0/24           10.1.21.200  Ve 21      20/0      Be+  1m52s
12.0.8.0/24           10.1.21.200  Ve 21      20/0      Be+  1m52s
12.0.9.0/24           10.1.21.200  Ve 21      20/0      Be+  1m52s
12.0.10.0/24          10.1.21.200  Ve 21      20/0      Be+  1m52s
12.0.11.0/24          10.1.21.200  Ve 21      20/0      Be+  1m52s
12.0.12.0/24          10.1.21.200  Ve 21      20/0      Be+  1m52s
12.0.13.0/24          10.1.22.200  Ve 22      20/0      Be+  1m52s
12.0.14.0/24          10.1.22.200  Ve 22      20/0      Be+  1m52s
12.0.15.0/24          10.1.22.200  Ve 22      20/0      Be+  1m52s
12.0.16.0/24          10.1.22.200  Ve 22      20/0      Be+  1m52s
12.0.17.0/24          10.1.22.200  Ve 22      20/0      Be+  1m52s
12.0.18.0/24          10.1.22.200  Ve 22      20/0      Be+  1m52s
12.0.19.0/24          10.1.22.200  Ve 22      20/0      Be+  1m52s
12.0.20.0/24          10.1.22.200  Ve 22      20/0      Be+  1m52s
```

**History**

Release version	Command history
5.0.0	This command was introduced.



# show ip route system-summary

Displays IPv4 route information with respect to route limits and next-hop limits, as well as additional information, for all VRFs and specific VRFs.

**Syntax** `show ip route system-summary [ rbridge-id rbridge-id ] [ vrf name ]`

**Parameters** `rbridge-id rbridge-id`

Displays routes for a selected RBridge ID.

`vrf name`

Displays routes for a selected VRF instance.

**Modes** Privileged EXEC mode

**Usage Guidelines** Per-VRF data are as for the `show ip route summary vrf` command, except for all VRFs.

The `show ip route system-summary` command displays the following information:

Output field	Description
System Route Count	Displays current (all VRF aggregate) system-wide route count, the maximum value supported by the RBridge, and whether or not the system limit was exceeded in the past.
System Nexthop Count	Displays current (all VRF aggregate) system-wide next-hop count, the maximum value supported by the RBridge, and whether or not the system limit was exceeded in the past.
VRF-Name	Displays, on a per-VRF basis, the current route count on the VRF, the maximum number of routes (if configured) on the VRF, and a breakdown of routes as connected, static, per routing protocol, and so on. The display is for a named VRF, the default VRF, and the management VRF.

**Examples** Typical command output:

```
switch# show ip route system-summary

System Route Count: 12192 Max routes: 20476 (Route limit not exceeded)
System Nexthop Count: 334 Max nexthops: 15360 (Nexthop limit not exceeded)

VRF-Name: 122_53
  Route count: 1033 Max routes: 2000 (Route limit not exceeded)
  18 connected, 1 static, 0 RIP, 1001 OSPF, 0 BGP, 0 ISIS

VRF-Name: abc
  Route count: 2006 Max routes: 2500 (Route limit not exceeded)
  2 connected, 0 static, 0 RIP, 2002 OSPF, 0 BGP, 0 ISIS

VRF-Name: default-vrf
  Route count: 3080 Max routes: Not Set (Route limit not exceeded)
  32 connected, 3 static, 0 RIP, 1011 OSPF, 2004 BGP, 0 ISIS

VRF-Name: mgmt-vrf
  Route count: 6 Max routes: Not Set (Route limit not exceeded)
  3 connected, 1 static, 0 RIP, 0 OSPF, 0 BGP, 0 ISIS
```

**History**

Release version	Command history
5.0.1	This command was introduced.

# show ipv6 bgp attribute-entries

Displays BGP4+ route-attribute entries that are stored in device memory.

- Syntax** `show ipv6 bgp attribute-entries [ rbridge-id rbridge-id ]`
- Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.
- Modes** Privileged EXEC mode
- Usage Guidelines** The route-attribute entries table lists the sets of BGP4+ attributes that are stored in device memory. Each set of attributes is unique and can be associated with one or more routes. In fact, the device typically has fewer attribute entries than routes. Use this command to view BGP4+ route-attribute entries that are stored in device memory.

**Examples** The following is sample output from the `show ipv6 bgp attribute-entries` command:

```
device# show ipv6 bgp attribute-entries

Total number of BGP Attribute Entries: 2
1  Next Hop : 2001::1 MED :
1  Origin:IGP
   Originator:0.0.0.0 Cluster List:None
   Aggregator:AS Number :0 Router-ID:0.0.0.0 Atomic:None
   Local Pref:1 Communities:Internet
   AS Path : (length 0)
   Address: 0x1205c75c Hash:268 (0x01000000)
   Links: 0x00000000, 0x00000000
   Reference Counts: 2:0:0, Magic: 1
2  Next Hop : :: MED :
1  Origin:IGP
   Originator:0.0.0.0 Cluster List:None
   Aggregator:AS Number :0 Router-ID:0.0.0.0 Atomic:None
   Local Pref:100 Communities:Internet
   AS Path : (length 0)
   AsPathLen: 0 AsNum: 0, SegmentNum: 0, Neighboring As: 0, Source As 0
   Address: 0x1205c7cc Hash:365 (0x01000000)
   Links: 0x00000000, 0x00000000
   Reference Counts: 1:0:1, Magic: 2
```

History	Release version	Command history
	5.0.0	This command was introduced.

## show ipv6 bgp dampened-paths

Displays all BGP4+ dampened routes.

**Syntax** `show ipv6 bgp dampened-paths [ rbridge-id rbridge-id ]`

**Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples** The following is sample output from the `show ipv6 bgp dampened-paths` command:

```
device# show ipv6 bgp dampened-paths
```

Path	Network	From		Flaps	Since	Reuse
*d 1000	2001:db8:8::/45	2001:db8:1::1	1	0 :1 :14	0 :2 :20	100 1002
*d 1000	2001:db8:1::/48	2001:db8:1::1	1	0 :1 :14	0 :2 :20	100 1002
*d 1000	2001:db8:4::/46	2001:db8:1::1	1	0 :1 :14	0 :2 :20	100 1002
*d 1000	2001:db8:2::/47	2001:db8:1::1	1	0 :1 :14	0 :2 :20	100 1002
*d 1002 1000	2001:db8:0:8000::/49	2001:db8:1::1	1	0 :1 :14	0 :2 :20	100
*d	2001:db8:17::/64	2001:db8:1::1	1	0 :1 :18	0 :2 :20	100

### History

#### Release version

#### Command history

5.0.0

This command was introduced.

## show ipv6 bgp filtered-routes

Displays BGP4+ filtered routes that are received from a neighbor or peer group.

**Syntax** `show ipv6 bgp filtered-routes { detail } [ ipv6-addr { / mask } [ longer-prefixes ] ] | as-path-access-list name ] | prefix-list name ] [ rbridge-id rbridge-id ]`

**Parameters** **detail**

Optionally displays detailed route information.

**ipv6-addr**

IPv6 address of the destination network in dotted-decimal notation.

**mask**

(Optional) IPv6 mask of the destination network in CIDR notation.

**longer-prefixes**

Specifies all statistics for routes that match the specified route, or that have a longer prefix than the specified route.

**as-path-access-list**

Specifies an AS-path ACL.

**prefix-list**

Specifies an IP prefix list.

**name**

Name of an AS-path ACL or prefix list.

**rbridge-id rbridge-id**

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Command Output** The `show ipv6 bgp filtered-routes` command displays the following information:

Output field	Description
Number of BGP4+ Routes matching display condition	The number of routes that matched the display parameters you entered. This is the number of routes displayed by the command.
Status codes	A list of the characters the display uses to indicate the route's status. The status code appears in the left column of the display, to the left of each route. The status codes are described in the command's output. The status column displays an "IF" for each filtered route.
Prefix	The network address and prefix.
Next Hop	The next-hop router for reaching the network from the device.
MED	The value of the route's MED attribute. If the route does not have a metric, this field is blank.
LocPrf	The degree of preference for this route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 - 4294967295.

Output field	Description
Weight	The value that this device associates with routes from a specific neighbor. For example, if the receives routes to the same destination from two BGP4+ neighbors, the prefers the route from the neighbor with the larger weight.
Status	<p>The route's status, which can be one or more of the following:</p> <ul style="list-style-type: none"> <li>A - AGGREGATE - The route is an aggregate route for multiple networks.</li> <li>B - BEST - BGP4+ has determined that this is the optimal route to the destination.</li> <li>b - NOT-INSTALLED-BEST - BGP4+ has determined that this is the optimal route to the destination but did not install it in the IPv6 route table because the device received better routes from other sources (such as OSPFv3, RIPng, or static IPv6 routes).</li> <li>C - CONFED_EBGP - The route was learned from a neighbor in the same confederation and AS, but in a different sub-AS within the confederation.</li> <li>D - DAMPED - This route has been dampened (by the route dampening feature), and is currently unusable.</li> <li>E - EBGP - The route was learned through a in another AS.</li> <li>H - HISTORY - Route dampening is configured for this route, and the route has a history of flapping and is unreachable now.</li> <li>I - IBGP - The route was learned through a in the same AS.</li> <li>L - LOCAL - The route originated on this device.</li> <li>M - MULTIPATH - BGP4+ load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with "B".</li> </ul>
	<p><b>NOTE</b></p> <p>If the "m" is shown in lowercase, the software was not able to install the route in the IPv6 route table.</p>
	<ul style="list-style-type: none"> <li>S - SUPPRESSED - This route was suppressed during aggregation and thus is not advertised to neighbors.</li> <li>F - FILTERED - This route was filtered out by BGP4+ route policies on the device, but the device saved updates containing the filtered routes.</li> </ul>

**Examples** The following is sample output from the **show ipv6 bgp filtered-routes** command:

```
device# show ipv6 bgp filtered-routes

Searching for matching routes, use ^C to quit...
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
Prefix          Next Hop          MED LocPrf      Weight Status
1 2001:db8:3000::/48 2001:db8::110      100    0          EF
  AS_PATH: 65001 4355 701 80
2 2001:db8:4000::/48 2001:db8::110      100    0          EF
  AS_PATH: 65001 4355 1
3 2001:db8:5000::/48 2001:db8::110      100    0          EF
  AS_PATH: 65001 4355 701 1 189
```

## Show commands

History	Release version	Command history
	5.0.0	This command was introduced.

# show ipv6 bgp flap-statistics

Displays BGP4+ route-dampening statistics for all dampened routes with a variety of options.

**Syntax** `show ipv6 bgp flap-statistics [ ipv6-addr { / mask } ] [ longer-prefixes ] ] | as-path-filter name ] | neighbor ipv6-addr ] [ regular-expression name ] [ rbridge-id rbridge-id ]`

**Parameters** **detail**

Optionally displays detailed route information.

**ipv6-addr**

IPv6 address of a specified route in dotted-decimal notation.

**mask**

(Optional) IPv6 mask of a specified route in CIDR notation.

**as-path-filter name**

Specifies an AS-path filter.

**longer-prefixes**

Displays statistics for routes that match the specified route or have a longer prefix than the specified route.

**neighbor**

Displays flap statistics only for routes learned from the specified neighbor.

**ipv6-addr**

IPv6 address of the neighbor.

**regular-expression**

Specifies a regular expression in the display output on which to filter.

**name**

Name of an AS-path filter or regular expression.

**rbridge-id rbridge-id**

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Command Output** The `show ipv6 bgp flap-statistics` command displays the following information:

Output field	Description
Total number of flapping routes	The total number of routes in the device's BGP4+ route table that have changed state and thus have been marked as flapping routes.
Status code	Indicates the dampening status of the route, which can be one of the following: <ul style="list-style-type: none"> <li>&gt; - This is the best route among those in the BGP4+ route table to the route's destination.</li> <li>d - This route is currently dampened, and thus unusable.</li> <li>h - The route has a history of flapping and is unreachable now.</li> <li>* - The route has a history of flapping but is currently usable.</li> </ul>
Network	The destination network of the route.
From	The IPv6 address of the advertising peer.

Output field	Description
Flaps	The number of flaps (state changes) the route has experienced.
Since	The amount of time (in hh:mm:ss) since the first flap of this route.
Reuse	The amount of time (in hh:mm:ss) after which the path is again available.
Path	The AS path of the route.

**Examples** The following is sample output from the **show ipv6 bgp flap-statistics** command:

```
device# show ipv6 bgp flap-statistics
Total number of flapping routes: 14
  Status Code >:best d:damped h:history *:valid
  Network      From      Flaps  Since  Reuse  Path
h> 2001:db8:2::/48 2001:db8:23::47 1    0 :0 :13 0 :0 :0 65001 4355 1 701
*> 2001:db8:34::/48 2001:db8:23::47 1    0 :1 :4  0 :0 :0 65001 4355 701 62
```

**History**

Release version	Command history
5.0.0	This command was introduced.



# show ipv6 bgp neighbors

Displays configuration information and statistics for BGP4+ neighbors of the device.

- Syntax** `show ipv6 bgp neighbors { ipv6-addr | last-packet-with-error | routes-summary } [ rbridge-id rbridge-id ]`
- Parameters**
- ipv6-addr*** IPv6 address of a neighbor in dotted-decimal notation.
  - last-packet-with-error*** Displays the last packet with an error.
  - rbridge-id* *rbridge-id*** Specifies an RBridge ID.
- Modes** Privileged EXEC mode
- Examples** The following is sample output from the `show ipv6 bgp neighbors` command when the `routes-summary` keyword is used:

```
device# show ipv6 bgp neighbors routes-summary

    Total number of BGP Neighbors: 2
  1  IP Address: 2001:54:54::54
Routes Accepted/Installed:0, Filtered/Kept:0, Filtered:0
  Routes Selected as BEST Routes:0
    BEST Routes not Installed in IP Forwarding Table:0
  Unreachable Routes (no IGP Route for NEXTHOP):0
  History Routes:0

NLRIs Received in Update Message:0, Withdraws:0 (0), Replacements:0
  NLRIs Discarded due to
    Maximum Prefix Limit:0, AS Loop:0
    Invalid Nexthop:0, Invalid Nexthop Address:0.0.0.0
    Invalid Confed aspath:0, maxas-limit aspath:0
    Duplicated Originator_ID:0, Cluster_ID:0

Routes Advertised:150, To be Sent:0, To be Withdrawn:0
NLRIs Sent in Update Message:677, Withdraws:512, Replacements:15

Peer Out of Memory Count for:
  Receiving Update Messages:0, Accepting Routes(NLRI):0
  Attributes:0, Outbound Routes(RIB-out):0 Outbound Routes Holder:0

  2  IP Address: 2001:55:55::55
Routes Accepted/Installed:1, Filtered/Kept:0, Filtered:0
  Routes Selected as BEST Routes:1
    BEST Routes not Installed in IP Forwarding Table:0
  Unreachable Routes (no IGP Route for NEXTHOP):0
  History Routes:0

NLRIs Received in Update Message:1, Withdraws:0 (0), Replacements:0
  NLRIs Discarded due to
    Maximum Prefix Limit:0, AS Loop:0
    Invalid Nexthop:0, Invalid Nexthop Address:0.0.0.0
    Invalid Confed aspath:0, maxas-limit aspath:0
    Duplicated Originator_ID:0, Cluster_ID:0

Routes Advertised:150, To be Sent:0, To be Withdrawn:0
NLRIs Sent in Update Message:677, Withdraws:512, Replacements:15

Peer Out of Memory Count for:
  Receiving Update Messages:0, Accepting Routes(NLRI):0
  Attributes:0, Outbound Routes(RIB-out):0 Outbound Routes Holder:0
```

## Show commands

History	Release version	Command history
	5.0.0	This command was introduced.

## show ipv6 bgp neighbors advertised-routes

Displays all the routes the BGP4+ networking device advertised to the neighbor.

**Syntax** `show ip bgp neighbors ipv6-addr advertised-routes { detail | ipv6-addr { / mask-bits } } [ rbridge-id rbridge-id ]`

**Parameters** *ipv6-addr*

IPv6 address of a neighbor in dotted-decimal notation.

**advertised-routes**

Displays only the routes that the device has advertised to the neighbor during the current BGP4 session.

**detail**

Displays details of advertised routes.

**mask-bits**

Number of mask bits in CIDR notation.

**rbridge-id *rbridge-id***

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Command Output** The `show ipv6 bgp neighbors advertised-routes` command displays the following information:

Output field	Description
Number of BGP4+ Routes advertised to specified neighbor (appears only in display for all routes)	The number of routes displayed by the command.
Status codes	A list of the characters the display uses to indicate the route's status. The status code appears in the Status column of the display. The status codes are described in the command's output.
Prefix	The advertised route's prefix.
Next Hop	The next-hop for reaching the advertised route from the device.
MED	The value of the advertised route's MED attribute. If the route does not have a metric, this field is blank.
LocPrf	The degree of preference for the advertised route relative to other routes in the local autonomous system. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference range is 0 - 4294967295.
Weight	The value that this device associates with routes from a specific neighbor. For example, if the receives routes to the same destination from two BGP4+ neighbors, the prefers the route from the neighbor with the larger weight.

Output field	Description
Status	The advertised route's status, which can be one or more of the following: <ul style="list-style-type: none"> <li>• A - AGGREGATE. The route is an aggregate route for multiple networks.</li> <li>• B - BEST. BGP4+ has determined that this is the optimal route to the destination.</li> <li>• b - NOT-INSTALLED-BEST - BGP4+ has determined that this is the optimal route to the destination but did not install it in the IPv6 route table because the device received better routes from other sources (such as OSPFv3, RIPng, or static IPv6 routes).</li> <li>• E - EBGp. The route was learned through a in another AS.</li> <li>• I - IBGP. The route was learned through a in the same AS.</li> <li>• L - LOCAL. The route originated on this device.</li> </ul>
AS-PATH	The AS-path information for the route.

The **show ipv6 bgp neighbors advertised-routes detail** command displays the following fields that are not described in the table above:

Output field	Description
Age	The age of the advertised route, in seconds.
Learned from Peer	The IPv6 address of the neighbor from which this route is learned. "Local Router" indicates that the device itself learned the route.
MED	The value of the advertised route's MED attribute. If the route does not have a metric, this field is blank.
Origin	The source of the route information. The origin can be one of the following: <ul style="list-style-type: none"> <li>• EGP - The routes with this set of attributes came to BGP4+ through EGP.</li> <li>• IGP - The routes with this set of attributes came to BGP4+ through IGP.</li> <li>• INCOMPLETE - The routes came from an origin other than one of the above. For example, they may have been redistributed from OSPFv3 or RIPng.</li> </ul> <p>When BGP4+ compares multiple routes to a destination to select the best route, IGP is preferred over EGP and both are preferred over INCOMPLETE.</p>
AS-PATH	The AS-path information for the route.
Adj RIB out count	The number of routes in the device's current BGP4+ Routing Information Base (Adj-RIB-Out) for a specified neighbor.
Admin distance	The administrative distance of the route.

**Examples** The following is sample output from the **show ipv6 bgp neighbors advertised-routes** command:

```
device# show ipv6 bgp neighbor 2001:54:54::54 advertised-routes

      There are 7 routes advertised to neighbor 2001:54:54::54
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST E:EBGP I:IBGP L:LOCAL
Prefix      Next Hop      MED      LocPrf      Weight      Status
1          fd80:122:122:122:101:101:0:122/128  2001:122:122::122
                                                0          100          101      BL
      AS_PATH:
2          fd80:122:122:122:103:103:0:122/128  2001:122:122::122
                                                0          100          103      BL
      AS_PATH:
3          fd80:122:122:122:105:105:0:122/128  2001:122:122::122
                                                0          100          105      BL
      AS_PATH:
4          131::1/128          2001:122:122::122
                                                1          100          32768   BL
      AS_PATH:
5          2001:122:131:125:131:1::/96  2001:3002::732
                                                1          100          0        BE
      AS_PATH: 65530
6          2001:abcd:1234:1234:1:2:1:0/112  2001:3002::733
                                                1          100          0        BE
      AS_PATH: 65530
7          2001:abcd:1234:1234:1:2:2:0/112  2001:3002::733
                                                1          100          0        BE
```

The following is sample output from the **show ipv6 bgp neighbors advertised-routes** command when the **detail** keyword is used:

```
device# show ipv6 bgp neighbors 2001:54:54::54 advertised-routes detail
      There are 7 routes advertised to neighbor 2001:54:54::54
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST E:EBGP I:IBGP L:LOCAL
1          Prefix: fd80:122:122:122:101:101:0:122/128, Status: BL, Age: 4h23m34s
      NEXT_HOP: 2001:122:122::122, Learned from Peer: Local Router
      LOCAL_PREF: 100, MED: 0, ORIGIN: igp, Weight: 101
      AS_PATH:
      Adj_RIB out count: 20, Admin distance 0
2          Prefix: fd80:122:122:122:103:103:0:122/128, Status: BL, Age: 4h23m32s
      NEXT_HOP: 2001:122:122::122, Learned from Peer: Local Router
      LOCAL_PREF: 100, MED: 0, ORIGIN: igp, Weight: 103
      AS_PATH:
      Adj_RIB out count: 20, Admin distance 0
3          Prefix: fd80:122:122:122:105:105:0:122/128, Status: BL, Age: 4h23m31s
      NEXT_HOP: 2001:122:122::122, Learned from Peer: Local Router
      LOCAL_PREF: 100, MED: 0, ORIGIN: igp, Weight: 105
      AS_PATH:
      Adj_RIB out count: 20, Admin distance 0
4          Prefix: 131::1/128, Status: BL, Age: 4h23m49s
      NEXT_HOP: 2001:122:122::122, Learned from Peer: Local Router
      LOCAL_PREF: 100, MED: 1, ORIGIN: igp, Weight: 32768
      AS_PATH:
      Adj_RIB out count: 20, Admin distance 1
5          Prefix: 2001:122:131:125:131:1::/96, Status: BE, Age: 2h39m44s
```

#### History

Release version	Command history
5.0.0	This command was introduced.

## show ipv6 bgp neighbors flap-statistics

Displays configuration information and flap statistics for routes received from or sent to a neighbor.

<b>Syntax</b>	<b>show ipv6 bgp neighbors <i>ipv6-addr</i> flap-statistics [ <i>rbridge-id rbridge-id</i> ]</b>
<b>Parameters</b>	<p><b><i>ipv6-addr</i></b> IPv6 address of a neighbor in dotted-decimal notation.</p> <p><b><i>rbridge-id rbridge-id</i></b> Specifies an RBridge ID.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Command Output</b>	The <b>show ipv6 bgp neighbors flap-statistics</b> command displays the following information:

Output field	Description
Total number of flapping routes	The total number of routes in the neighbor's BGP4+ route table that have changed state and thus have been marked as flapping routes.
Status code	Indicates the status of the route, which can be one of the following: <ul style="list-style-type: none"> <li>&gt; - This is the best route among those in the neighbor's BGP4+ route table to the route's destination.</li> <li>d - This route is currently dampened, and thus unusable.</li> <li>h - The route has a history of flapping and is unreachable now.</li> <li>* - The route has a history of flapping but is currently usable.</li> </ul>
Network	The destination network of the route.
From	The IPv6 address of the advertising peer.
Flaps	The number of flaps (state changes) the route has experienced.
Since	The amount of time (in hh:mm:ss) since the first flap of this route.
Reuse	The amount of time (in hh:mm:ss) after which the path is again available.
Path	The AS path of the route.

**Examples** The following is sample output from the **show ipv6 bgp neighbors flap-statistics** command:

```
device# show ipv6 bgp neighbors 2001:db8::110 flap-statistics

Total number of flapping routes: 14
  Status Code >:best d:damped h:history *:valid
Network      From          Flaps Since  Reuse  Path
h> 2001:db8:2::/48 10.90.213.77 1      0 :0 :13 0 :0 :0 65001 4355 1 701
*> 2001:db8:34::/48 10.90.213.77 1      0 :1 :4  0 :0 :0 65001 4355 701 62
```

### History

Release version	Command history
5.0.0	This command was introduced.

## show ipv6 bgp neighbors last-packet-with-error

Displays information about the last packet that contained an error from any of a device's neighbors.

**Syntax** `show ipv6 bgp neighbors ipv6-addr last-packet-with-error [ decode | rbridge-id rbridge-id ]`

**Parameters** *ipv6-addr*

IPv6 address of a neighbor in dotted-decimal notation.

**decode**

Decodes last packet that contained an error from any of a device's neighbors.

**rbridge-id *rbridge-id***

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Command Output** The `show ipv6 bgp neighbors last-packet-with-error` command displays the following information:

Output field	Description
Total number of BGP Neighbors	The total number of configured neighbors for a device.
Last error	The error packet's contents decoded in a human-readable format or notification that no packets with an error were received.

**Examples** The following is sample output from the `show ipv6 bgp neighbors last-packet-with-error` command:

```
device# show ipv6 bgp neighbor last-packet-with-error
Total number of BGP Neighbors: 67
1 IP Address: 153::2
  Last error:
    BGP4: 0 bytes hex dump of packet that contains error
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## show ipv6 bgp neighbors received

Displays Outbound Route Filters (ORFs) received from BGP4 neighbors of the device.

<b>Syntax</b>	<b>show ip bgp neighbors</b> <i>ipv6-addr</i> <b>received</b> [ <b>detail</b>   <b>prefix-filter</b> ] [ <b>rbridge-id</b> <i>rbridge-id</i> ]
<b>Parameters</b>	<p><b>ipv6-addr</b> IPv6 address of a neighbor in dotted-decimal notation.</p> <p><b>detail</b> Displays detailed ORF information.</p> <p><b>prefix-filter</b> Displays the results for ORFs that are prefix-based.</p> <p><b>rbridge-id</b> <i>rbridge-id</i> Specifies an RBridge ID.</p>

**Modes** Privileged EXEC mode

**Examples** The following is sample output from the **show ipv6 bgp neighbors received** command when the **prefix-filter** is used:

```
device# show ipv6 bgp neighbors 4001::1 received prefix-filter
ip prefix-list: 2 entries
seq 1 permit 1001::/64
seq 2 permit 4001::/64
SW0)#show ipv6 bgp neighbors 4001::1 advertised-routes
There are 2 routes advertised to neighbor 4001::1
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST E:EBGP I:IBGP L:LOCAL
Prefix Next Hop MED LocPrf Weight Status
1 1001::/64 4001::2 0 100 32768 BL
AS_PATH:
2 4001::/64 4001::2 0 100 32768 BL
AS_PATH:
Taurus
```

### History

Release version	Command history
5.0.0	This command was introduced.



## show ipv6 bgp neighbors received-routes

Lists all route information received in route updates from BGP4+ neighbors of the device since the soft-reconfiguration feature was enabled.

**Syntax** `show ipv6 bgp neighbors ipv6-addr received-routes [ detail ] [ rbridge-id rbridge-id ]`

**Parameters** *ipv6-addr*

IPv6 address of a neighbor in dotted-decimal notation.

**detail**

Displays detailed route information.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Command Output** The `show ipv6 bgp neighbors received-routes` command displays the following information:

Output field	Description
Number of BGP4+ Routes received from a neighbor	The number of routes displayed by the command.
Status codes	A list of the characters the display uses to indicate the route's status. The status code appears in the Status column of the display. The status codes are described in the command's output.
Prefix	The received route's prefix.
Next Hop	The IPv6 address of the next device that is used when forwarding a packet to the received route.
MED	The value of the route's MED attribute. If the route does not have a metric, this field is blank.
LocPrf	The degree of preference for the advertised route relative to other routes in the local autonomous system. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 - 4294967295.
Weight	The value that this device associates with routes from a specific neighbor. For example, if the receives routes to the same destination from two BGP4+ neighbors, the prefers the route from the neighbor with the larger weight.

Output field	Description
Status	<p>The advertised route's status, which can be one or more of the following:</p> <p>A - AGGREGATE. The route is an aggregate route for multiple networks.</p> <p>B - BEST. BGP4+ has determined that this is the optimal route to the destination.</p> <p>b - NOT-INSTALLED-BEST - BGP4+ has determined that this is the optimal route to the destination but did not install it in the IPv6 route table because the device received better routes from other sources (such as OSPFv3, RIPng, or static IPv6 routes).</p> <p>D - DAMPED. This route has been dampened (by the route dampening feature), and is currently unusable.</p> <p>E - EBGP. The route was learned through a in another AS.</p> <p>H - HISTORY. Route dampening is configured for this route, and the route has a history of flapping and is unreachable now.</p> <p>I - IBGP. The route was learned through a in the same autonomous system.</p> <p>L - LOCAL. The route originated on this device.</p> <p>M - MULTIPATH. BGP4+ load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with "B".</p>
	<p><b>NOTE</b></p> <p>If the "m" is shown in lowercase, the software was not able to install the route in the IPv6 route table.</p>
	<p>S - SUPPRESSED. This route was suppressed during aggregation and thus is not advertised to neighbors.</p>
	<p>F - FILTERED. This route was filtered out by BGP4+ route policies on the device, but the saved updates containing the filtered routes.</p>

**Examples** The following is sample output from the **show ipv6 bgp neighbors received-routes** command:

```
device# show ipv6 bgp neighbor 2001:db8::10 received-routes

There are 4 received routes from neighbor 2001:db8::10
Searching for matching routes, use ^C to quit...
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
  Prefix      Next Hop      Metric      LocPrf      Weight      Status
1  2001:db8:2002::/64  2001:db8::10      0      100      0      BE
AS_PATH: 400
2  2001:db8:2003::/64  2001:db8::10      1      100      0      BE
AS_PATH: 400
3  2001:db8:2004::/64  2001:db8::10      1      100      0      BE
AS_PATH: 400
4  2001:db8:2005::/64  2001:db8::10      1      100      0      BE
AS_PATH: 400
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## show ipv6 bgp neighbors rib-out-routes

Displays information about BGP4+ outbound RIB routes.

**Syntax** `show ipv6 bgp neighbors ipv6-addr received-routes [ detail ] [ rbridge-id rbridge-id ]`

**Parameters** *ipv6-addr*

IPv6 address of a neighbor in dotted-decimal notation.

**detail**

Displays detailed RIB route information.

**rbridge-id** *rbridge-id*

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Command Output** The `show ipv6 bgp neighbors rib-out-routes` command displays the following information:

Output field	Description
Number of RIB_out routes for a specified neighbor (appears only in display for all RIB routes)	The number of RIB routes displayed by the command.
Status codes	A list of the characters the display uses to indicate the route's status. The status code appears in the Status column of the display. The status codes are described in the command's output.
Prefix	The RIB route's prefix.
Next Hop	The next-hop router for reaching the route from the device.
MED	The value of the advertised route's MED attribute. If the route does not have a metric, this field is blank.
LocPrf	The degree of preference for the route relative to other routes in the local autonomous system. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 - 4294967295.
Weight	The value that this device associates with routes from a specific neighbor. For example, if the receives routes to the same destination from two BGP4+ neighbors, the prefers the route from the neighbor with the larger weight.

Output field	Description
Status	The RIB route's status, which can be one or more of the following: <ul style="list-style-type: none"> <li>A - AGGREGATE. The route is an aggregate route for multiple networks.</li> <li>B - BEST. BGP4+ has determined that this is the optimal route to the destination.</li> <li>E - EBGP. The route was learned through a in another autonomous system.</li> <li>I - IBGP. The route was learned through a in the same autonomous system.</li> <li>L - LOCAL. The route originated on this device.</li> </ul>
AS-PATH	The AS-path information for the route.

**Examples** The following is sample output from the **show ipv6 bgp neighbors rib-out-routes** command:

```
device# show ipv6 bgp neighbors 2001:54:54::54 rib-out-routes

      There are 150 RIB_out routes for neighbor 2001:54:54::54
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST E:EBGP I:IBGP L:LOCAL
Prefix      Next Hop      MED      LocPrf      Weight Status
1   fd80:122:122:122:101:101:0:122/128  ::      0          100          101    BL
      AS_PATH:
2   fd80:122:122:122:103:103:0:122/128  ::      0          100          103    BL
      AS_PATH:
3   fd80:122:122:122:105:105:0:122/128  ::      0          100          105    BL
      AS_PATH:
4   131::1/128      ::      1          100          32768  BL
      AS_PATH:
5   2001:122:131:125:131:1::/96  2001:3002::732
      AS_PATH: 65530
6   2001:abcd:1234:1234:1:2:1:0/112  2001:3002::733
      AS_PATH: 65530
7   2001:abcd:1234:1234:1:2:2:0/112  2001:3002::733
      AS_PATH: 65530
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## show ipv6 bgp neighbors routes

Lists a variety of route information received in UPDATE messages from BGP4+ neighbors.

<b>Syntax</b>	<b>show ip bgp neighbors <i>ip-addr</i> routes { best   detail   not-installed-best   unreachable } [ rbridge-id <i>rbridge-id</i> ]</b>				
<b>Parameters</b>	<p><b><i>ipv6-addr</i></b> IPv6 address of a neighbor in dotted-decimal notation.</p> <p><b>best</b> Displays routes received from the neighbor that are the best BGP4+ routes to their destination.</p> <p><b>not-installed-best</b> Displays routes received from the neighbor that are the best BGP4+ routes to their destination but were not installed in the route table because the device received better routes from other sources.</p> <p><b>unreachable</b> Displays routes that are unreachable because the device does not have a valid RIP, OSPF, or static route to the next hop.</p> <p><b>detail</b> Displays detailed information for the specified route types.</p> <p><b>rbridge-id <i>rbridge-id</i></b> Specifies an RBridge ID.</p>				
<b>Modes</b>	Privileged EXEC mode				
<b>Examples</b>	<p>The following is sample output from the <b>show ipv6 bgp neighbors routes</b> command when the <b>best</b> keyword is used:</p> <pre>device# show ipv6 bgp neighbor 2001:db8::106 routes best  There are 2 accepted routes from neighbor 2001:db8::106 Searching for matching routes, use ^C to quit... Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED E:EBGP D:DAMPED E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED Prefix Next Hop MED LocPrf Weight Status 1 2001:db8:2002::/48 2001:db8::106 1 100 0 BE AS_PATH: 65001 2 2001:db8:2002:1234::/64 2001:db8::106 1 100 0 BE AS_PATH: 65001</pre>				
<b>History</b>	<table border="1"> <thead> <tr> <th>Release version</th> <th>Command history</th> </tr> </thead> <tbody> <tr> <td>5.0.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release version	Command history	5.0.0	This command was introduced.
Release version	Command history				
5.0.0	This command was introduced.				

## show ipv6 bgp neighbors routes-summary

Lists all route information received in UPDATE messages from BGP4 neighbors.

**Syntax** `show ipv6 bgp neighbors ipv6-addr routes-summary [ rbridge-id rbridge-id ]`

**Parameters** *ipv6-addr*

IPv6 address of a specified route in dotted-decimal notation.

**rbridge-id *rbridge-id***

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Command Output** The `show ipv6 bgp neighbors routes-summary` command displays the following information:

Output field	Description
IP Address	The IPv6 address of the neighbor
Routes Received	How many routes the device has received from the neighbor during the current BGP4+ session: <ul style="list-style-type: none"> <li>Accepted or Installed - Indicates how many of the received routes the device accepted and installed in the BGP4+ route table.</li> <li>Filtered or Kept - Indicates how many routes were filtered out, but were nonetheless retained in memory for use by the soft reconfiguration feature.</li> <li>Filtered - Indicates how many of the received routes were filtered out.</li> </ul>
Routes Selected as BEST Routes	The number of routes that the device selected as the best routes to their destinations.
BEST Routes not Installed in IPv6 Forwarding Table	The number of routes received from the neighbor that are the best BGP4+ routes to their destinations, but were nonetheless not installed in the IPv6 route table because the device received better routes from other sources (such as OSPFv3, RIPng, or static IPv6 routes).
Unreachable Routes	The number of routes received from the neighbor that are unreachable because the device does not have a valid RIPng, OSPFv3, or static IPv6 route to the next hop.
History Routes	The number of routes that are down but are being retained for route flap dampening purposes.
NLRIs Received in Update Message	The number of routes received in Network Layer Reachability (NLRI) format in UPDATE messages: <ul style="list-style-type: none"> <li>Withdraws - The number of withdrawn routes the device has received.</li> <li>Replacements - The number of replacement routes the device has received.</li> </ul>

Output field	Description
NLRIs Discarded due to	<p>Indicates the number of times the device discarded an NLRI for the neighbor due to the following reasons:</p> <ul style="list-style-type: none"> <li>• Maximum Prefix Limit - The device's configured maximum prefix amount had been reached.</li> <li>• AS Loop - An AS loop occurred. An AS loop occurs when the BGP4+ AS-path attribute contains the local AS number.</li> <li>• Invalid Nexthop Address - The next hop value was not acceptable.</li> <li>• Duplicated Originator_ID - The originator ID was the same as the local router ID.</li> <li>• Cluster_ID - The cluster list contained the local cluster ID, or contained the local router ID (see above) if the cluster ID is not configured.</li> </ul>
Routes Advertised	<p>The number of routes the device has advertised to this neighbor:</p> <ul style="list-style-type: none"> <li>• To be Sent - The number of routes the device has queued to send to this neighbor.</li> <li>• To be Withdrawn - The number of NLRIs for withdrawing routes the device has queued up to send to this neighbor in UPDATE messages.</li> </ul>
NLRIs Sent in Update Message	<p>The number of NLRIs for new routes the device has sent to this neighbor in UPDATE messages:</p> <ul style="list-style-type: none"> <li>• Withdraws - The number of routes the device has sent to the neighbor to withdraw.</li> <li>• Replacements - The number of routes the device has sent to the neighbor to replace routes the neighbor already has.</li> </ul>
Peer Out of Memory Count for	<p>Statistics for the times the device has run out of BGP4+ memory for the neighbor during the current BGP4+ session:</p> <ul style="list-style-type: none"> <li>• Receiving Update Messages - The number of times UPDATE messages were discarded because there was no memory for attribute entries.</li> <li>• Accepting Routes(NLRI) - The number of NLRIs discarded because there was no memory for NLRI entries. This count is not included in the Receiving Update Messages count.</li> <li>• Attributes - The number of times there was no memory for BGP4+ attribute entries.</li> <li>• Outbound Routes (RIB-out) - The number of times there was no memory to place a "best" route into the neighbor's route information base (Adj-RIB-Out) for routes to be advertised.</li> <li>• Outbound Routes Holder - For debugging purposes only.</li> </ul>

**Examples** The following is sample output from the **show ipv6 bgp neighbors routes-summary** command:

```
device# show ipv6 bgp neighbors routes-summary

Total number of BGP Neighbors: 1
1 IP Address: 5001::1
Routes Accepted/Installed:3, Filtered/Kept:0, Filtered:0
Routes Selected as BEST Routes:3
BEST Routes not Installed in IP Forwarding Table:0
Unreachable Routes (no IGP Route for NEXTHOP):0
History Routes:0
NLRIs Received in Update Message:3, Withdraws:0 (0), Replacements:0
NLRIs Discarded due to
Maximum Prefix Limit:0, AS Loop:0
Invalid Nexthop:0, Invalid Nexthop Address:0.0.0.0
Invalid Confed aspath:0, maxas-limit aspath:0
Duplicated Originator_ID:0, Cluster_ID:0
Routes Advertised:0, To be Sent:0, To be Withdrawn:0
NLRIs Sent in Update Message:0, Withdraws:0, Replacements:0
Peer Out of Memory Count for:
Receiving Update Messages:0, Accepting Routes(NLRI):0
Attributes:0, Outbound Routes(RIB-out):0 Outbound Routes Holder:0
```

**History**

Release version	Command history
5.0.0	This command was introduced.



## show ipv6 bgp peer-group

Displays peer-group information.

**Syntax** `show ipv6 bgp peer-group peer-group-name [ rbridge-id rbridge-id ]`

**Parameters** *ipv6-addr*

IPv6 address of a neighbor in dotted-decimal notation.

***peer-group-name***

Peer-group name configured by the **neighbor** *peer-group-name* command.

***rbridge-id rbridge-id***

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples** The following is sample output from the **show ipv6 bgp peer-group** command:

```
device# # show ipv6 bgp peer-group
do show ipv6 bgp peer-group
1 BGP peer-group is P1, Remote AS: 1
Address family : IPV4 Unicast
activate
Address family : IPV4 Multicast
no activate
Address family : IPV6 Unicast
activate
Address family : IPV6 Multicast
no activate
Address family : VPNV4 Unicast
no activate
Address family : L2VPN VPLS
no activate
Members:
IP Address: 2001::1
IP Address: 2001:0:0:1::1
IP Address: 10.1.0.1
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## show ipv6 bgp routes

Displays BGP4+ route information that can be filtered using various options.

**Syntax** **show ipv6 bgp routes** [ *num* | *ipv6-address/prefix* | **age** *num* | **as-path-access-list** *name* | **best** | **cidr-only** | **community** *num* | **community-access-list** *name* | **community-reg-expression** *expression* | **detail** | **local** | **neighbor** *ipv6-addr* | **nexthop** *ipv6-addr* | **no-best** | **not-installed-best** | **prefix-list** *string* | **regular-expression** *name* | **route-map** *name* | **summary** | **unreachable** ] [ **rbridge-id** *rbridge-id* ]

**Parameters** *num*

Table entry at which the display starts.

**ipv6-address/prefix**

Table entry at which the display starts.

**age**

Displays BGP4+ route information that is filtered by age.

**as-path-access-list**

Displays BGP4+ route information that is filtered by autonomous system (AS)-path access control list (ACL).

**best**

Displays BGP4+ route information that the device selected as best routes.

**cidr-only**

Displays BGP4+ routes whose network masks do not match their class network length.

**community** *num*

Displays BGP4+ route information that is filtered by community.

**community-access-list** *name*

Displays BGP4+ route information for an AS-path community access list.

**community-reg-expression** *expression*

Displays BGP4+ route information for an ordered community-list regular expression.

**detail**

Displays BGP4+ detailed route information.

**local**

Displays BGP4+ route information about selected local routes.

**neighbor** *ipv6-addr*

Displays BGP4+ route information about selected BGP neighbors.

**nexthop** *ipv6-addr*

Displays BGP4+ route information about routes that are received from the specified next hop.

**no-best**

Displays BGP4+ route information that the device selected as not best routes.

**not-installed-best**

Displays BGP4+ route information about best routes that are not installed.

**prefix-list** *string*

Displays BGP4+ route information that is filtered by prefix list.

**regular-expression** *name*

Displays BGP4+ route information about routes that are associated with the specified regular expression.

**route-map** *name*

Displays BGP4+ route information about routes that use the specified route map.

**summary**

Displays BGP4+ summary route information.

**unreachable**

Displays BGP4+ route information about routes whose destinations are unreachable through any of the BGP4 paths in the BGP4 route table.

**rbridge-id *rbridge-id***

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Command Output** The **show ipv6 bgp routes** command displays the following information:

Output field	Description
Number of BGP4+ Routes	The number of routes displayed by the command.
Status codes	A list of the characters the display uses to indicate the route's status. The status code appears in the Status column of the display. The status codes are described in the command's output.
Prefix	The route's prefix.
Next Hop	For normal IPv6 routes, next hop is the next hop IPv6 router to reach the destination. For the 6PE routes, next hop is the IPv4-mapped IPv6 address of the peer 6PE router.
MED	The value of the route's MED attribute. If the route does not have a metric, this field is blank.
LocPrf	The degree of preference for the advertised route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 - 4294967295.
Weight	The value that this device associates with routes from a specific neighbor. For example, if the receives routes to the same destination from two BGP4+ neighbors, the prefers the route from the neighbor with the larger weight.

Output field	Description
Status	<p>The route's status, which can be one or more of the following:</p> <ul style="list-style-type: none"> <li>• A - AGGREGATE. The route is an aggregate route for multiple networks.</li> <li>• B - BEST. BGP4+ has determined that this is the optimal route to the destination.</li> <li>• b - NOT-INSTALLED-BEST - BGP4+ has determined that this is the optimal route to the destination but did not install it in the IPv6 route table because the device received better routes from other sources (such as OSPFv3, RIPng, or static IPv6 routes).</li> <li>• C - CONFED_EBGP. The route was learned from a neighbor in the same confederation and AS, but in a different sub-AS within the confederation.</li> <li>• D - DAMPED. This route has been dampened (by the route dampening feature), and is currently unusable.</li> <li>• E - EBGP. The route was learned through a in another AS.</li> <li>• H - HISTORY. Route dampening is configured for this route, and the route has a history of flapping and is unreachable now.</li> <li>• I - IBGP. The route was learned through a in the same AS.</li> <li>• L - LOCAL. The route originated on this.</li> <li>• M - MULTIPATH. BGP4+ load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with "B".</li> </ul> <hr/> <p><b>NOTE</b> If the "m" is shown in lowercase, the software was not able to install the route in the IPv6 route table.</p> <hr/> <ul style="list-style-type: none"> <li>• S - SUPPRESSED. This route was suppressed during aggregation and thus is not advertised to neighbors.</li> </ul>
AS-PATH	The AS-path information for the route.

**Examples** The following is sample output from the **show ipv6 bgp routes** command:

```
device# show ipv6 bgp routes

Total number of BGP Routes: 6
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
       E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH m:NOT-INSTALLED-MULTIPATH
       S:SUPPRESSED F:FILTERED s:STALE
Prefix      Next Hop      MED      LocPrf      Weight Status
1  57:7000:3:22:abc:1::/128  2001:700:122:57::57
                               100          0          BE
   AS_PATH: 7000 322
2  57:7000:3:22:abc:1:0:2/128  2001:700:122:57::57
                               100          0          BE
   AS_PATH: 7000 322
3  57:7000:3:22:abc:1:0:4/128  2001:700:122:57::57
                               100          0          BE
   AS_PATH: 7000 322
4  57:7000:3:22:abc:1:0:6/128  2001:700:122:57::57
                               100          0          BE
   AS_PATH: 7000 322
5  57:7000:3:22:abc:1:0:8/128  2001:700:122:57::57
                               100          0          BE
   AS_PATH: 7000 322
6  57:7000:3:22:abc:1:0:a/128  2001:700:122:57::57
                               100          0          BE
   AS_PATH: 7000 322
```

The following is sample output from the **show ipv6 bgp routes** command using the **summary** keyword:

```
device# show ipv6 bgp routes summary

Total number of BGP routes (NLRIs) Installed      : 558
Distinct BGP destination networks                 : 428
Filtered bgp routes for soft reconfig              : 0
Routes originated by this router                   : 19
Routes selected as BEST routes                     : 417
BEST routes not installed in IP forwarding table   : 0
Unreachable routes (no IGP route for NEXTHOP)     : 22
IBGP routes selected as best routes                : 102
EBGP routes selected as best routes                : 296
```

The following is sample output from the **show ipv6 bgp routes** command using the **local** keyword:

```
device# show ipv6 bgp routes local

Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
       E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH m:NOT-INSTALLED-MULTIPATH
       S:SUPPRESSED F:FILTERED s:STALE
Prefix      Next Hop      MED      LocPrf      Weight Status
1  131::1/128      ::              1          100          32768 BL
   AS_PATH:
2  2001:107:6133:2007:1::/112  2001:2007::201
                               107          100          32768 BL
   AS_PATH:
3  2001:107:6133:2007:2::/112  2001:2007::202
                               107          100          32768 BL
   AS_PATH:
4  2001:107:6133:2007:3::/112  2001:2007::203
                               107          100          32768 BL
   AS_PATH:
5  2001:107:6133:2007:4::/112  2001:2007::204
                               107          100          32768 BL
   AS_PATH:
6  2001:107:6133:2007:5::/112  2001:2007::205
                               107          100          32768 BL
   AS_PATH:
7  2001:107:6133:2007:6::/112  2001:2007::206
                               107          100          32768 BL
```

## History

Release version	Command history
5.0.0	This command was introduced.

## show ipv6 bgp summary

Displays summarized information about the status of all BGP connections.

**Syntax** `show ipv6 bgp summary [ rbridge-id rbridge-id ]`

**Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Command Output** The `show ipv6 bgp summary` command displays the following information:

Output field	Description
Router ID	The device's router ID.
Local AS Number	The BGP4+ AS number in which the device resides.
Confederation Identifier	The autonomous system number of the confederation in which the device resides.
Confederation Peers	The numbers of the local autonomous systems contained in the confederation. This list matches the confederation peer list you configure on the device.
Maximum Number of Paths Supported for Load Sharing	The maximum number of route paths across which the device can balance traffic to the same destination. The feature is enabled by default but the default number of paths is 1. You can increase the number from 2 - 8 paths.
Number of Neighbors Configured	The number of BGP4+ neighbors configured on this device.
Number of Routes Installed	The number of BGP4+ routes in the device's BGP4+ route table.
Number of Routes Advertising to All Neighbors	The total of the RtSent and RtToSend columns for all neighbors.
Number of Attribute Entries Installed	The number of BGP4+ route-attribute entries in the route-attributes table.
Neighbor Address	The IPv6 addresses of this BGP4+ neighbors.
AS#	The autonomous system number.

Output field	Description
State	<p>The state of this neighbor session with each neighbor. The states are from this perspective of the session, not the neighbor's perspective. The state values can be one of the following for each:</p> <ul style="list-style-type: none"> <li>• IDLE - The BGP4+ process is waiting to be started. Usually, enabling BGP4+ or establishing a neighbor session starts the BGP4+ process. <ul style="list-style-type: none"> <li>- A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes.</li> </ul> </li> <li>• ADMND - The neighbor has been administratively shut down. <ul style="list-style-type: none"> <li>- A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes.</li> </ul> </li> <li>• CONNECT - BGP4+ is waiting for the connection process for the TCP neighbor session to be completed.</li> <li>• ACTIVE - BGP4+ is waiting for a TCP connection from the neighbor.</li> </ul> <hr/> <p><b>NOTE</b> If the state frequently changes between CONNECT and ACTIVE, there may be a problem with the TCP connection.</p> <hr/> <ul style="list-style-type: none"> <li>• OPEN SENT - BGP4+ is waiting for an Open message from the neighbor.</li> <li>• OPEN CONFIRM - BGP4+ has received an OPEN message from the neighbor and is now waiting for either a KEEPALIVE or NOTIFICATION message. If the receives a KEEPALIVE message from the neighbor, the state changes to Established. If the message is a NOTIFICATION, the state changes to Idle.</li> <li>• ESTABLISHED - BGP4+ is ready to exchange UPDATE packets with the neighbor. <ul style="list-style-type: none"> <li>- If there is more BGP data in the TCP receiver queue, a plus sign (+) is also displayed.</li> </ul> </li> </ul> <hr/> <p><b>NOTE</b> If you display information for the neighbor using the <b>show ipv6 bgp neighbor</b> command, the TCP receiver queue value will be greater than 0.</p> <hr/>
Time	The time that has passed since the state last changed.
Accepted	The number of routes received from the neighbor that this installed in the BGP4+ route table. Usually, this number is lower than the RoutesRcvd number. The difference indicates that this filtered out some of the routes received in the UPDATE messages.
Filtered	<p>The routes or prefixes that have been filtered out.</p> <ul style="list-style-type: none"> <li>• If soft reconfiguration is enabled, this field shows how many routes were filtered out (not placed in the BGP4+ route table) but retained in memory.</li> <li>• If soft reconfiguration is not enabled, this field shows the number of BGP4+ routes that have been filtered out.</li> </ul>
Sent	The number of BGP4+ routes sent to the neighbor.

Output field	Description
ToSend	The number of routes queued to send to this neighbor. <ul style="list-style-type: none"> <li>s - GR neighbor is in a stale state</li> <li>r - GR neighbor is in a restarting state</li> <li>&lt; - GR neighbor is waiting for an EOR</li> </ul>

**Examples** The following is sample output from the **show ipv6 bgp summary** command:

```
device# show ipv6 bgp summary

BGP4 Summary
Router ID: 122.122.122.122   Local AS Number: 122
Confederation Identifier: not configured
Confederation Peers:
Cluster ID: 122
Maximum Number of IP ECMP Paths Supported for Load Sharing: 1
Number of Neighbors Configured: 20, UP: 15
Number of Routes Installed: 219, Uses 20805 bytes
Number of Routes Advertising to All Neighbors: 2802 (440 entries), Uses 26400 bytes
Number of Attribute Entries Installed: 31, Uses 2852 bytes
Neighbor Address  AS#           State      Time      Rt:Accepted Filtered Sent
ToSend
2001:54:54::54   122         ESTAB     0h19m58s  0         0         146       0
2001:55:55::55   122         ESTAB     0h19m54s  1         0         146       0
2001:122:53::53  6000        ESTAB     0h22m39s  50        0         147       0
2001:122:534:2::534
                    534         ESTAB     0h 3m20s  10        0         137       0
2001:125:125::125 122         CONN     0h11m33s  0         0         0         -
```

The following is sample output from the **show ipv6 bgp summary** command when a GR neighbor is in a stale state:

```
device# show ipv6 bgp summary

BGP4 Summary
Router ID: 140.1.1.3   Local AS Number: 50
Confederation Identifier: not configured
Confederation Peers:
Maximum Number of IP ECMP Paths Supported for Load Sharing: 1
Number of Neighbors Configured: 4, UP: 1
Number of Routes Installed: 13, Uses 1235 bytes
Number of Routes Advertising to All Neighbors: 32 (16 entries), Uses 960 bytes
Number of Attribute Entries Installed: 3, Uses 276 bytes
Neighbor Address  AS#           State      Time      Rt:Accepted Filtered Sent
ToSend
10.10.10.1       50           ACTIVs    0h 0m 0s  10        0         3         0 <
```

The following is sample output from the **show ipv6 bgp summary** command when a GR neighbor is in a restarting state:

```
device# show ipv6 bgp summary

BGP4 Summary
Router ID: 140.1.1.3   Local AS Number: 50
Confederation Identifier: not configured
Confederation Peers:
Maximum Number of IP ECMP Paths Supported for Load Sharing: 1
Number of Neighbors Configured: 4, UP: 1
Number of Routes Installed: 13, Uses 1235 bytes
Number of Routes Advertising to All Neighbors: 32 (16 entries), Uses 960 bytes
Number of Attribute Entries Installed: 3, Uses 276 bytes
Neighbor Address  AS#           State      Time      Rt:Accepted Filtered Sent
ToSend
10.10.10.1       50           OPENSr    0h 0m 2s  10        0         0         3 <
```

**History**

Release version	Command history
5.0.0	This command was introduced.



# show ipv6 counters interface

Displays the counters on an IPv6 interface.

<b>Syntax</b>	<b>show ipv6 counters interface</b> { <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>loopback</b> <i>port_number</i>   <b>ve</b> <i>vlan_id</i> }
<b>Parameters</b>	<p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>loopback port_number</b> Specifies the port number for the loopback interface. The range is 1 through 255.</p> <p><b>ve vlan_id</b> Specifies the VLAN ID of a virtual Ethernet (VE) interface.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	The following example shows counters on an Ethernet interface:

```
switch# show ipv6 counters interface te 1/0/10
Interface TenGigabitEthernet 1/0/10 IPv6 statistics (ifindex 402980872)
Ip6OutRequests                21
Ip6OutMcastPkts              30
Ip6OutOctets                  2024
Ip6OutMcastOctets            3008
Icmp6OutMsgs                  21
Icmp6OutRouterAdvertisements  6
Icmp6OutNeighborSolicits     6
Icmp6OutMLDv2Reports         9
Icmp6OutType134               6
Icmp6OutType135               6
Icmp6OutType143               25
```

# show ipv6 dhcp relay address interface

Displays IPv6 DHCP Relay addresses configured on a specific interface.

**Syntax** `show ipv6 dhcp relay address interface [interface-type interface-name ]{ rbridge-id rbridge-id | all | range }`

**Command Default** If the **rbridge-id** parameter is omitted, IPv6 DHCP Relay addresses display for the local switch.

**Parameters** *interface-type*

Specifies the type of interface, such as gigabitEthernet, TengigabitEthernet, FortygigabitEthernet, HundredgigabitEthernet, or Ve interface.

*interface-name*

Specifies the interface number or VLAN-ID in case of a Ve interface.

**rbridge-id** *rbridge-id*

Specifies an RBridge. You can specify multiple RBridge IDs, separated by commas.

**all**

Specifies all RBridge IDs in the logical chassis cluster.

**range**

A range of RBridge IDs separated by a dashes or commas, for example:

1-3 - RBridge ID 1 through 3  
 1-3, 5 - RBridge ID 1 through 3 and RBridge ID 5  
 1, 3, 5, 6 - RBridge ID 1, 3, 5, and 6

**Modes** Privileged EXEC mode

**Usage Guidelines** This command displays IPv6 DHCP Relay addresses configured on specific physical or virtual Ethernet (VE) interfaces located on a local switch, specific switches, or all switches in a logical chassis cluster. No spaces are allowed in the range string. The range does not need to be contiguous (for example, 1-2,5).

**Examples** Display configured IPv6 DHCP Relay addresses on a specific physical interface:

```
sw0# show ipv6 dhcp relay address interface tengigabitethernet 1/0/24
                                     Rbridge Id: 3
-----
Interface                               Relay Address
VRF Name                               Outgoing Interface
-----                               -
Te 3/0/21                               4001::10                default-
vrf
Te 3/0/21                               fe80::8
blue                                 ve 100
```

Display configured IPv6 DHCP Relay addresses on VE interface for RBridge ID 1.

```
sw0# show ipv6 dhcp relay address int ve 300 rbridge-id 1
                                     Rbridge Id: 1
-----
Interface                               Relay Address                               VRF
Name                                     -----
Ve 300
5001:1234:1234:2101:1234:1234:3103:1234    default-vrf
```

Display configured IPv6 DHCP Relay addresses on VE interface on RBridge IDs 1 and 3.

```
sw0# show ipv6 dhcp relay address interface ve 300 rbridge-id 1,3
                                     Rbridge Id:    1
                                     -----
Interface          Relay
Address
-----
Ve 300
5001:1234:1234:2101:1234:1234:3103:1234
                                     Rbridge Id:    3
                                     -----
Ve 300
default-vrf                               10.0.0.5
```

#### History

Release version	Command history
5.0.1	This command was introduced.

## show ipv6 dhcp relay address rbridge-id

Displays IPv6 DHCP Relay addresses.

**Syntax** `show ipv6 dhcp relay address rbridge-id rbridge-id | all | range`

**Command Default** If the *rbridge-id* parameter is omitted, IP DHCP Relay addresses display for the local switch.

**Parameters** *rbridge-id*

Specifies an RBridge. You can specify multiple RBridge IDs, separated by commas.

**all**

Specifies all RBridge IDs in the logical chassis cluster.

**range**

A range of RBridge IDs separated by a dashes or commas, or both. Range can be discontinuous, for example, 1-3,5. Spaces are not allowed.

For example: 1-3 - RBridge ID 1 through 3 1-3, 5 - RBridge ID 1 through 3 and RBridge ID 5 1, 3, 5, 6 - RBridge ID 1, 3, 5, and 6. in the range string

**Modes** Privileged EXEC mode

**Usage Guidelines** This command displays the IPv6 address and Virtual Routing and Forwarding (VRF) name for all interfaces with configured IPv6 DHCP Relay addresses on a local switch, specific switches, or all switches in a VCS Fabric cluster. No spaces are allowed in the *range* string. The range does not need to be contiguous (for example, 1-2,5).

**Examples** To display addresses configured on a specific RBridge ID:

```
sw0# show ipv6 dhcp relay address
                                     Rbridge Id:    3
                                     -----
Interface                               Relay Address                               VRF Name
Outgoing Interface                      -----
-----
Te 3/0/21                               4001::101                                   default-
vrf
Te 3/0/21                               fe80::8                                     default-
blue                                     ve 100
Ve 200                                  5001:1234:1234:2101:1234:1234:3103:1234    default-
vrf                                     Te 3/0/3
```

To display addresses configured on all switches in a virtual fabric cluster:

```
sw0# show ipv6 dhcp rel address rbridge-id all
Rbridge Id: 1
-----
Interface          Relay
Address            VRF Name
-----
Te 1/0/24
2.3.4.5            default-vrf
Ve 300
10.0.1.2          default-vrf
Rbridge Id: 3
-----
Interface          Relay
Address            VRF Name
-----
Ve 300
10.0.0.5          default-vrf
```

**History**

Release version	Command history
5.0.1	This command was introduced.

## show ipv6 dhcp relay statistics

Displays general information about the DHCPv6 Relay function.

**Syntax** `show ipv6 dhcp relay statistics rbridge-id rbridge-id | all | range ]`

**Command Default** If the **rbridge-id** parameter is omitted, IPv6 DHCP Relay statistics display for the local switch.

**Parameters** **rbridge-id** *rbridge-id*

Specifies an RBridge. You can specify multiple RBridge IDs, separated by commas.

**all**

Specifies all RBridge IDs in the logical chassis cluster.

**range**

A range of RBridge IDs separated by a dashes or commas, for example:

1-3 - RBridge ID 1 through 3  
 1-3, 5 - RBridge ID 1 through 3 and RBridge ID 5  
 1, 3, 5, 6 - RBridge ID 1, 3, 5, and 6

**Modes** Privileged EXEC mode

**Usage Guidelines** No spaces are allowed in the *range* string. The range does not need to be contiguous (for example, 1-2,5). You can also specify **all** for all RBridge IDs in a logical chassis cluster. To display addresses for configured interfaces on a local switch, an RBridge ID parameter is not required.

The **show ipv6 dhcp relay statistics** command displays the following information about the IP DHCP Relay function for IP DHCP Relay addresses configured on a local switch, specific switches, or all switches in a logical chassis cluster:

- Number of DHCP Error packets dropped.
- Number of DHCP SOLICIT, REQUEST, CONFIRM, RENEW, REBIND, RELEASE, DECLINE, INFORMATION-REQUEST, RELAY-FORWARD, RELAY-REPLY packets received.
- Number of DHCP RELAY-FORWARD, REPLY packets sent.

**Examples** To display statistics for a local switch:

```
sw0# show ipv6 dhcp relay statistics

Packets dropped          : 0
  Error                  : 0
Packets received        : 0
  SOLICIT                : 0
  REQUEST                 : 0
  CONFIRM                 : 0
  RENEW                   : 0
  REBIND                  : 0
  RELEASE                 : 0
  DECLINE                 : 0
  INFORMATION-REQUEST    : 0
  RELAY-FORWARD          : 0
  RELAY-REPLY             : 0
Packets sent            : 0
  RELAY-FORWARD          : 0
  REPLY                   : 0
```

To display statistics for specific RBridge IDs:

```
switch# show ipv6 dhcp relay statistics rbridge-id 6
```

```

Rbridge Id:    6
Packets dropped      : 0
  Error            : 0
Packets received    : 6
  SOLICIT          : 2
  REQUEST          : 1
  CONFIRM          : 0
  RENEW            : 0
  REBIND           : 0
  RELEASE          : 0
  DECLINE          : 0
  INFORMATION-REQUEST : 0
  RELAY-FORWARD    : 0
  RELAY-REPLY      : 3
Packets sent        : 6
  RELAY-FORWARD    : 3
  REPLY            : 3

```

#### History

Release version	Command history
5.0.1	This command was introduced.

# show ipv6 fabric-virtual-gateway

Displays IPv6 Fabric-Virtual-Gateway session details.

**Syntax** `show ipv6 fabric-virtual-gateway { detail | summary | interface ve vlan-id }`

**Parameters** **detail**

Lists the IPv6 Fabric-Virtual-Gateway configuration in detail.

**summary**

Lists a summary of the IPv6 Fabric-Virtual-Gateway configuration.

**interface ve *vlan-id***

Displays IPv6 Fabric-Virtual-Gateway configuration for the specified VE interface.

**Modes** Privileged EXEC mode

**Examples** The following example displays IPv6 Fabric-Virtual-Gateway session details.

```
Total number of session(s)      : 1
Total number of active session(s) : 0
Interface: Ve 100; Ifindex: 0
Admin Status: Enabled
Description :
Address family: IPV6      State: Detached
ARP responder Rbridge-id:
Gateway IP(s): 1111::1/64
Gateway MAC Address: 02e0.5200.020e
Load balancing: Enabled
Load balancing threshold priority: 0
nd Timer: Disabled
Hold time: 0 sec (default: 0 sec)
  Total no. of state changes: 0
  Neighbor Advertisements Sent: 0
Last state change: 1d.0h.18m.11s ago
Track Priority: 0
```

The following example displays IPv6 Fabric-Virtual-Gateway session details for the given VE interface.

```
Interface: Ve 2000; Ifindex: 1207959554
Admin Status: Enabled
Description :
Address family: IPV6 State: Active
ARP responder Rbridge-id: 55
Gateway IP(s): 6:1::1/64
Gateway MAC Address: 02e0.5200.020e
Load balancing configuration: Enabled
Load balancing current status: Enabled
Load balancing threshold priority: unset
Gratuitous ARP Timer: Disabled
Hold time: 0 sec (default: 0 sec)
  Total no. of state changes: 0
  ND Advertisements Sent: 0
Last state change: 0d.1h.28m.16s ago
Track Priority: 0
```

**History**

Release version	Command history
5.0.1	This command was introduced.



# show ipv6 interface

Displays details of IPv6 interfaces.

<b>Syntax</b>	<b>show ipv6 interface</b> [ <b>brief</b> [ <b>rbridge-id</b> { <b>all</b>   <i>rbridge-id</i> } ] ] { <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>ve</b> <i>vlan_id</i> [ <b>rbridge-id</b> { <b>all</b>   <i>rbridge-id</i> } ] }
<b>Parameters</b>	<p><b>brief</b> Specifies brief interface information.</p> <p><b>rbridge-id</b> Specifies an RBridge or all RBridges.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>all</b> Specifies all RBridges.</p> <p><b>&lt;N&gt; gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>&lt;N&gt;gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>ve vlan_id</b> Specifies the VLAN ID of a virtual Ethernet (VE) interface.</p>
<b>Modes</b>	Privileged EXEC mode Interface subtype configuration mode
<b>Examples</b>	The following example illustrates the output of the <b>show ipv6 interface</b> command with an Ethernet interface specified:

```
switch# show ipv6 interface tengigabitethernet 1/0/10
TenGigabitEthernet 1/0/10 is up protocol is up
IPv6 Address: 1111::2222/64 Primary Confirmed
IPv6 Address: fe80::227:f8ff:fe88:e4df/128 Link Local Confirmed
IPv6 MTU: 1500
Vrf : default-vrf
```

The following example illustrates the output of the **show ipv6 interface** command with a virtual Ethernet and RBridge ID specified:

```
switch# show ipv6 interface ve 10 rbridge 1

Ve 10 is administratively down protocol is down
IPv6 Address: fe80::/128 Link Local Wait Confirm
IPv6 MTU: 1500
Vrf : default-vrf
```

The following example illustrates the output of the **show ipv6 interface** command with a virtual Ethernet of 1 specified:

```
switch# #show ipv6 interface ve 1
Ve 1 is up protocol is up
IPv6 Address: 1001::4/64 Primary Confirmed
IPv6 Address: fe80::205:33ff:fee4:4011/128 Link Local Confirmed
IPv6 Address: fe80::205:33ff:fee5:ba86/128 Link Local Confirmed
IPv6 multicast groups locally joined:
  ff02::1
  ff02::2    ff02::1:ff00:4    ff02::1:ffe4:4011
  ff02::1:ffe5:ba86
IPv6 MTU: 1500
Vrf : default-vrf
```

The following example illustrates the output of the **show ipv6 interface** applied directly on an interface with the **brief** option:

```
switch(conf-if-te-1/0/10)# do show ipv6 int br
Interface      Vrf          Status      Protocol      IPv6-Address
=====
FortyGigabitEthernet 1/0/49      default-vrf  up            up
unassigned
FortyGigabitEthernet 1/0/50      default-vrf  up            down
unassigned
FortyGigabitEthernet 1/0/51      default-vrf  up            down
unassigned
FortyGigabitEthernet 1/0/52      default-vrf  up            down
unassigned
TenGigabitEthernet 1/0/1       default-vrf  up            down
unassigned
TenGigabitEthernet 1/0/2       default-vrf  up            down
unassigned
TenGigabitEthernet 1/0/10      default-vrf  up            up
1111::2222/64
```

## show ipv6 mld groups

Displays information about a specific IPv6 MLDv1 group or a VLAN.

**Syntax** `show ipv6 mld groups [ ipv6address ] [ interface vlan vlan_id ]`

**Parameters** *ipv6address*

A multicast group address.

**interface vlan**

Specifies a VLAN ID.

*vlan\_id*

A VLAN ID. Range is from 1 through 4090 if Virtual Fabrics is disabled, and from 1 through 8191 if Virtual Fabrics is enabled.

**Modes** Privileged EXEC mode

**Examples** To display information about all IPv6 MLDv1 groups:

```
switch# show ipv6 mld groups
```

To display information about an IPv6 MLDv1 group for a specific multicast address:

```
switch# show ipv6 mld groups ff1e::1
```

To display information about all IPv6 MLDv1 groups for a VLAN:

```
switch# show ipv6 mld groups interface vlan 2000
```

## show ipv6 mld interface

Displays IPv6 MLDv1 snooping information for a VLAN interface.

<b>Syntax</b>	<b>show ipv6 mld interface</b> { <b>vlan</b> <i>vlan_id</i> } [ <b>rbridge-id</b> { <b>all</b>   <i>rbridge-id</i> } ]
<b>Parameters</b>	<p><b>vlan</b> <i>vlan_id</i></p> <p>Specifies a VLAN ID. Range is from 1 through 4090 if Virtual Fabrics is disabled, and from 1 through 8191 if Virtual Fabrics is enabled.</p> <p><b>rbridge-id</b></p> <p>Specifies an RBridge or all RBridges.</p> <p><b><i>rbridge-id</i></b></p> <p>Specifies an RBridge ID.</p> <p><b>all</b></p> <p>Specifies all RBridges.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	<p>To display information about IPv6 MLDv1 snooping for a specific VLAN interface:</p> <pre>switch# show ipv6 mld statistics interface vlan 1 MLD packet statistics for Rbridge Id 3 in Vlan vlan1 MLD Message type      Edge-Received   Edge-Sent      Edge-Rx-Errors   ISL-Received General Query         0               0              0                0 &lt;&lt; Group Specific Query  0               0              0                0 V1 Membership Report  0               0              0                0 V2 Membership Report  0               0              0                0 Group Leave           0               0              0                0  MLD Error Statistics: Checksum Error        0 Size_or_Range_Error  0</pre>

## show ipv6 mld snooping

Displays information about the actively enabled IPv6 MLDv1 snooping mechanism and related configurations such as the active querier, the number of group-learned mrouter present, and other querier details.

<b>Syntax</b>	<b>show ipv6 mld snooping</b> [ <b>interface vlan</b> <i>vlan_id</i> ] [ <b>mrouter</b> [ <b>interface vlan</b> <i>vlan_id</i> ] ]
<b>Parameters</b>	<p><b>interface vlan</b> Specifies a VLAN ID.</p> <p><b>vlan_id</b> A VLAN ID. Range is from 1 through 4090 if Virtual Fabrics is disabled, and from 1 through 8191 if Virtual Fabrics is enabled.</p> <p><b>mrouter</b> Specifies all multicast router statistics.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	<p>To display comprehensive information about the IPv6 MLDv1 snooping mechanism and related configurations:</p> <pre>switch# show ipv6 mld snooping</pre> <p>To display information about IPv6 MLDv1 snooping for a specific VLAN:</p> <pre>switch# show ipv6 mld snooping interface vlan 2000</pre> <p>To display information about all IPv6 MLDv1 multicast router snooping:</p> <pre>switch# show ipv6 mld snooping mrouter</pre> <p>To display information about IPv6 MLDv1 multicast router snooping for a specific VLAN:</p> <pre>switch# show ipv6 mld snooping mrouter interface vlan 2000</pre>

## show ipv6 mld statistics

Displays IPv6 MLDv1 statistics for a VLAN.

**Syntax** `show ipv6 mld statistics interface vlan vlan_id [ rbridge-id { all | rbridge-id } ]`

**Parameters** **interface vlan**

Specifies a VLAN ID.

***vlan\_id***

A VLAN ID. Range is from 1 through 4090 if Virtual Fabrics is disabled, and from 1 through 8191 if Virtual Fabrics is enabled.

***rbridge-id***

Specifies an RBridge or all RBridges.

***rbridge-id***

Specifies an RBridge ID.

***all***

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Examples** To display information about IPv6 MLDv1 snooping statistics for a specific VLAN:

```
switch# show ipv6 mld statistics interface vlan 2000
```

## show ipv6 nd interface

Displays information about the IPv6 Neighbor Discovery configuration on an interface.

**Syntax** `show ipv6 nd interface [ <N>gigabitethernet rbridge-id/slot/port | prefix | rbridge-id { all | rbridge-id } | ve vlan_id [ prefix ] | vrf { vrf-name | all | default ] ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**prefix**

Displays prefix information.

**rbridge-id**

Specifies the RBridge IDs. You can display all or a specific RBridge.

**all**

Specifies all RBridges in the cluster.

**rbridge-id**

Specifies a single RBridges in the cluster.

**ve vlan\_id**

Specifies the VLAN ID of a virtual Ethernet (VE) interface.

**vrf vrf-name**

Specifies a VRF instance.

**all**

Specifies all VRF instances.

**default**

Specifies the default VRF instance.

**Modes** Privileged EXEC mode

**Examples** The following example illustrates the output of the **show ipv6 nd interface** command for an Ethernet interface:

```
switch# show ipv6 nd interface tengigabitethernet 7/0/46
ICMPv6 ND Interfaces for VRF default-vrf
IPv6 address: 2ffe::1
Router-Advertisement active timers:
  Last Router-Advertisement sent: 00:01:25
  Next Router-Advertisement sent in: 00:07:06
Router-Advertisement parameters:
  Periodic interval: 200 to 600 seconds
  Send 'Managed Address Configuration' flag: false
  Send 'Other Stateful Configuration' flag: false
  Send 'Current Hop Limit' field: 64
  Send 'MTU' option value: 1500
  Send 'Router Lifetime' field: 1800 secs
  Send 'Reachable Time' field: 0 ms
  Send 'Retrans Timer' field: 0 ms
  Suppress RA: false
  Suppress MTU in RA: false
  Suppress All RA: false
Neighbor-Solicitation parameters:
  NS retransmit interval: 1 secs
  DAD Attempts: 2
  DAD expiry: 1 secs
  Neighbor Cache Expiry: 240 mins
```

The following example illustrates the output of the **show ipv6 nd interface** command for an Ethernet interface with the **prefix** keyword specified:

```
switch# show ipv6 nd interface tengigabitethernet 7/0/46 prefix
ICMPv6 ND Interfaces for VRF default-vrf
List of IPv6 Prefix advertised on Te 7/0/46
  Prefix : 3001::/64
  Enabled : Yes
  Valid lifetime : 2592000
  Preferred lifetime : 604800
  On-link : Yes
  Off-link : No
  Autonomous : Yes
  Prefix : 2ffe::/64
  Enabled : Yes
  Valid lifetime : Infinite
  Preferred lifetime : Infinite
  On-link : Yes
  Off-link : No
  Autonomous : Yes
```



# show ipv6 neighbor

Displays information for a neighbor in IPv6 Neighbor Discovery.

**Syntax** `show ipv6 neighbor [<N> gigabitethernet [ dynamic | summary ] [ vrf [ vrf-name | all | default-vrf ] ] [ rbridge-id { all | rbridge-id } | slot slot [ipv6_address]] | static [ summary [ vrf [ vrf-name | all | default-vrf ] ] | ve vlan_id ]`

<b>Parameters</b>	<b>dynamic</b>	Displays dynamic information.
	<b>summary</b>	Displays summary information.
	<b>&lt;N&gt;gigabitethernet</b>	Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N> <b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.
	<b>rbridge-id</b>	Specifies an RBridge ID.
	<b>slot</b>	Specifies a valid slot number.
	<b>port</b>	Specifies a valid port number.
	<b>vrf vrf-name</b>	Specifies a VRF instance.
	<b>all</b>	Specifies all VRF instances.
	<b>default-vrf</b>	Specifies the default VRF instance.
	<b>rbridge-id rbridge-id</b>	Specifies an RBridge ID.
	<b>all</b>	Specifies all RBridges in the cluster.
	<b>slot slot</b>	Specifies a line card.
	<b>static</b>	Displays static information.
	<b>ve vlan_id</b>	Specifies the VLAN ID of a virtual Ethernet (VE) interface.

**Modes** Privileged EXEC mode

**Examples** The following example illustrates the output of the **show ipv6 neighbor** command without keywords:

```
switch# show ipv6 neighbor
Address          Mac-address      Interface      MacResolved    Age           Type
-----
2001::10        0010.9400.0066  Te 3/0/2      yes            00:00:13     Dynamic
2001::11        0010.9400.0067  Te 3/0/2      yes            00:00:13     Dynamic
2001::12        0010.9400.0068  Te 3/0/2      yes            00:00:13     Dynamic
2001::13        0010.9400.0069  Te 3/0/2      yes            00:00:13     Dynamic
2001::14        0010.9400.006a  Te 3/0/2      yes            00:00:13     Dynamic
2001::15        0010.9400.006b  Te 3/0/2      yes            00:00:13     Dynamic
2001::16        0010.9400.006c  Te 3/0/2      yes            00:00:13     Dynamic
2001::17        0010.9400.006d  Te 3/0/2      yes            00:00:13     Dynamic
2001::18        0010.9400.006e  Te 3/0/2      yes            00:00:13     Dynamic
```

The following example illustrates the output of the **show ipv6 neighbor** command with the **slot** keyword:

```
switch# show ipv6 neighbor slot 0
Total Neighbors : 100
Address          Mac-address      Interface      MacResolved    Type
-----
2001::10        0010.9400.0066  Te 0/2        yes            Dynamic
2001::11        0010.9400.0067  Te 0/2        yes            Dynamic
2001::12        0010.9400.0068  Te 0/2        yes            Dynamic
2001::13        0010.9400.0069  Te 0/2        yes            Dynamic
```

# show ipv6 ospf area

Displays the OSPFv3 area table in a specified format.

<b>Syntax</b>	<b>show ipv6 ospf area</b> [ <i>A.B.C.D</i> ] [ <i>decimal</i> ] [ <b>all-vrfs</b> ] [ <b>rbridge-id</b> <i>rbridge-id</i> ] [ <b>vrf</b> <i>vrfname</i> ]
<b>Parameters</b>	<p><b>A.B.C.D</b> Area address in dotted decimal format.</p> <p><b>decimal</b> Area address in decimal format. Valid values range from 0 to 2147483647.</p> <p><b>all-vrfs</b> Specifies all VRFs.</p> <p><b>rbridge-id</b> <i>rbridge-id</i> Displays the information for the physical, loopback, and SVI interfaces specific to the selected RBridge.</p> <p><b>vrf</b> <i>vrf name</i> Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.</p>

**Modes** Privileged EXEC mode

**Examples** The following is sample output from the **show ipv6 ospf area** command when no arguments or keywords are used:

```
switch# show ipv6 ospf area
Area 0.0.0.1 :
Authentication: Not Configured
Active interface(s) attached to this area: Ve 2001 Ve 2002
Inactive interface(s) attached to this area: None
Number of Area scoped LSAs is 38
Sum of Area LSAs Checksum is 0015da81
Statistics of Area 0.0.0.1:
SPF algorithm executed 46 times
SPF last updated: 8518 sec ago
Current SPF node count: 7
Router: 4 Network: 3
Maximum of Hop count to nodes: 4
```

History	Release version	Command history
	5.0.0	This command was introduced.

## show ipv6 ospf database

Displays lists of information about different OSPFv3 link-state advertisements (LSAs).

**Syntax** `show ipv6 ospf database [ advrtr A.B.C.D ] [ all-vrfs ] [ as-external ] [ extensive ] [ inter-prefix ] [ inter-router ] [ intra-prefix ] [ link decimal ] [ link-id decimal ] [ network ] [ prefix ipv6-addr ] [ rbridge-id rbridge-id ] [ router ] [ summary ] [ type-7 ] [ vrf vrfname ]`

`show ipv6 ospf database scope { area { A.B.C.D | decimal } | as | link } [ all-vrfs ] [ rbridge-id rbridge-id ] [ vrf vrfname ]`

**Parameters** `advrtr A.B.C.D`

Displays LSAs by Advertising Router Id in dotted decimal format.

**all-vrfs**

Specifies all VRFs in the cluster.

**as-external**

Displays information about external LSAs.

**extensive**

Displays detailed lists of LSA information.

**inter-prefix**

Displays information about inter area prefix LSAs.

**inter-router**

Displays information about inter area router LSAs.

**intra-prefix**

Displays information about intra area router LSAs.

**link *decimal***

Displays information about the link LSAs.

**link-id *decimal***

Link-state ID that differentiates LSAs. Valid values range from 1 to 4294967295.

**network**

Displays information about the network LSAs.

**prefix**

Displays information on the intra-area-prefix LSAs.

***ipv6-addr***

IPv6 address in dotted-decimal notation.

**rbridge-id *rbridge-id***

Displays the information for the physical, loopback, and SVI interfaces specific to the selected RBridge.

**router**

Displays information about the router LSAs.

**summary**

Displays LSA summary information.

**type-7**

Displays information about the not so stubby area (NSSA) external LSAs.

**vrf *vrf name***

Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.

**scope**

Displays LSA information by LSA scope.

**area**

**as** Displays LSAs by scope within a specified area.

**link** Displays autonomous system (AS) LSAs by scope.

Displays link LSAs by scope.

**Modes** Privileged EXEC mode

**Examples** The following is sample output from the **show ipv6 ospf database as-external** command using the **link-id** keyword:

```
device# show ipv6 ospf database as-external link-id 5
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace
Area ID   Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
N/A      Extn 33           4.4.4.4     80000002 1044 acb8 36   Yes
Bits: E--
Metric: 0
Prefix Options:
Referenced LSType: 0
Prefix: 2001:2:16::/64
```

The following is sample output from the **show ipv6 ospf database inter-prefix** command using the **link-id** keyword:

```
device# show ipv6 ospf database inter-prefix link-id 5
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace
Area ID   Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
128      Inap 5           125.125.125.125 80000035 548 fe72 36   Yes
Metric: 1
Prefix Options:
Prefix: 2001:2000:8192::/64
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace
Area ID   Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
128      Inap 5           122.122.122.122 80000035 565 a7e8 36   Yes
Metric: 1
Prefix Options:
Prefix: 2001:2001::/64
```

The following is sample output from the **show ipv6 ospf database inter-router** command using the **link-id** keyword:

```
device# show ipv6 ospf database inter-router link-id 5
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace
Area ID   Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
0.0.0.0   Inar 5           125.125.125.125 80000035 879 c910 32   Yes
Options: V6E---R--
Metric: 1
Destination Router ID: 125.2.32.125
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace
Area ID   Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
0.0.0.1   Inar 5           122.122.122.122 80000035 1611 bb3c 32   Yes
Options: -----
Metric: 2
Destination Router ID: 125.2.32.125
```

The following is sample output from the **show ipv6 ospf database intra-prefix** command using the **link-id** keyword:

```
device# show ipv6 ospf database intra-prefix link-id 5
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
Iap:IntraPrefix Grc:Grace
Area ID      Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
0            Iap 0          10.10.10.10 80000002 1572 63a0 44  Yes
    Number of Prefix: 1
    Referenced LS Type: Router
    Referenced LS ID: 0
    Referenced Advertising Router: 10.10.10.10
    Prefix Options: Metric: 1
    Prefix: 2050::/64
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
Iap:IntraPrefix Grc:Grace
Area ID      Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
0            Iap 46440      4.4.4.4      80000001 1649 d85c 44  Yes
    Number of Prefix: 1
    Referenced LS Type: Network
    Referenced LS ID: 1548
    Referenced Advertising Router: 4.4.4.4
    Prefix Options: Metric: 0
    Prefix: 3010::/64
```

The following is sample output from the **show ipv6 ospf database link** command using the **link-id** keyword:

```
device# show ipv6 ospf database link link-id 5
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
Iap:IntraPrefix Grc:Grace
Area ID      Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
0            Link 145      10.10.10.10 80000001 1639 0117 56  Yes
    Router Priority: 1
    Options: V6E---R--
    LinkLocal Address: fe80::205:33ff:fe77:2452
    Number of Prefix: 1
    Prefix Options:
    Prefix: 2050::/64
```

The following is sample output from the **show ipv6 ospf database network** command:

```
device# show ipv6 ospf database network
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
Iap:IntraPrefix Grc:Grace
Area ID      Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
0            Net 1548      4.4.4.4      80000001 1707 7b53 32  Yes
    Options: V6E---R--
    Attached Router: 4.4.4.4
    Attached Router: 10.10.10.10
```

The following is sample output from the **show ipv6 ospf database router** command:

```
device# show ipv6 ospf database router
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
Iap:IntraPrefix Grc:Grace
Area ID      Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
0            Rtr 0          4.4.4.4      80000139 2    4b9a 24  Yes
    Capability Bits: ---EB
    Options: V6E---R--
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
Iap:IntraPrefix Grc:Grace
Area ID      Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
10           Rtr 0          4.4.4.4      80000001 2    e236 24  Yes
    Capability Bits: ---EB
    Options: V6---NR--
```

The following is sample output from the **show ipv6 ospf database type-7** command:

```
device# show ipv6 ospf database type-7
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace
Area ID   Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
3         Typ7 3         10.10.10.10 80000001 5   6c95 28   Yes
    Bits: E--
    Metric: 10
    Prefix Options:
    Referenced LSType: 0
    Prefix: ::/0
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace
Area ID   Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
3         Typ7 2         10.10.10.10 80000001 5   8107 36   Yes
    Bits: E--
    Metric: 10
    Prefix Options:
    Referenced LSType: 0
    Prefix: 2111::/64
```

The following is sample output from the **show ipv6 ospf database link-id** command:

```
device# show ipv6 ospf database link-id 6514
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace
Area ID   Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
0         Link 6514     10.10.10.10 80000001 1696 6e44 56   Yes
    Router Priority: 1
    Options: V6E---R--
    LinkLocal Address: fe80::205:33ff:fe77:23ee
    Number of Prefix: 1
    Prefix Options:
    Prefix: 3010::/64
```

The following is sample output from the **show ipv6 ospf database extensive** command:

```
device# show ipv6 ospf database extensive
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace
Area ID   Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
0         Link 145     10.10.10.10 80000001 1559 0117 56   Yes
    Router Priority: 1
    Options: V6E---R--
    LinkLocal Address: fe80::205:33ff:fe77:2452
    Number of Prefix: 1
    Prefix Options:
    Prefix: 2050::/64
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace
Area ID   Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
0         Link 6514     10.10.10.10 80000001 1592 6e44 56   Yes
    Router Priority: 1
    Options: V6E---R--
    LinkLocal Address: fe80::205:33ff:fe77:23ee
    Number of Prefix: 1
    Prefix Options:
    Prefix: 3010::/64
```

The following is sample output from the **show ipv6 ospf database summary** command:

```

device# show ipv6 ospf database summary
AS scope:
  ASExternal          Active   MaxAge
  Area 0 scope:
  Router              Active   MaxAge
  Network              2         0
  InterPrefix         1         0
  InterRouter         1         0
  Type7               0         0
  IntraPrefix         0         0
  Other                2         0
  Total                0         0
  Total                6         0
Interface scope (over 2 interfaces):
  Active   MaxAge
  Link     3         0
  Grace    0         0
  Other    0         0
  Total    3         0
Area 1 scope:
  Active   MaxAge
  Router   1         0
  Network  0         0
  InterPrefix  2         0
  InterRouter  1         0
  Type7     0         0
  IntraPrefix  1         0
  Other     0         0
  Total     5         0
Interface scope (over 1 interfaces):
  Active   MaxAge
  Link     1         0
  Grace    0         0
  Other    0         0
  Total    1         0
Total: 21 LSAs, 21 Active LSAs, 0 MaxAge LSAs

```

The following is sample output from the **show ipv6 ospf database scope** command using the **area** keyword:

```

device# show ipv6 ospf database scope area 0
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace
Area ID   Type LSID      Adv Rtr          Seq(Hex) Age  Cksum Len  Sync
0         Rtr 0           10.10.10.10     80000005 1135 4bf6 40  Yes
  Capability Bits: ---EB
  Options: V6E---R--
  Type: Transit Metric: 1
  Interface ID: 6514      Neighbor Interface ID: 1548
  Neighbor Router ID: 4.4.4.4
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace
Area ID   Type LSID      Adv Rtr          Seq(Hex) Age  Cksum Len  Sync
0         Rtr 0           4.4.4.4         800000f1 1295 9156 40  Yes
  Capability Bits: ---E-
  Options: V6E---R--
  Type: Transit Metric: 1
  Interface ID: 1548     Neighbor Interface ID: 1548
  Neighbor Router ID: 4.4.4.4

```



The following is sample output from the **show ipv6 ospf database prefix** command:

```
device# show ipv6 ospf database prefix L5001::10/128
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace
Area ID      Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len  Sync
0            Iap 0            4.4.4.4      80000001 267 52a8 52  Yes
Number of Prefix: 1
Referenced LS Type: Router
Referenced LS ID: 0
Referenced Advertising Router: 4.4.4.4
Prefix Options: LA, Metric: 0
Prefix: 5001::10/128
```

#### History

Release version	Command history
5.0.0	This command was introduced.

## show ipv6 ospf interface

Displays interface information for all or specific OSPFv3-enabled interfaces.

<b>Syntax</b>	<b>show ipv6 ospf interface</b> [ <b>all-vrfs</b> ] [ <b>brief</b> ] [ <i>&lt;N&gt;</i> <b>gigabitethernet</b> <i>mappedID/slot/port</i> ] [ <b>loopback</b> <i>number</i> ] [ <b>rbridge-id</b> <i>rbridge-id</i> ] [ <b>ve</b> <i>vlan_id</i> ] [ <b>vrf</b> <i>vrfname</i> ]
<b>Parameters</b>	<p><b>all-vrfs</b></p> <p>Displays the information for the physical, loopback, and SVI interfaces of all nodes in the VCS cluster. There can be multiple loopback or SVI interfaces with the same id from different rbridges. If <i>rbridge-id</i> is not specified the output will contain information from all vrfs from the local node only.</p> <p><b>brief</b></p> <p>Displays brief summary about all enabled interfaces.</p> <p><b>&lt;N&gt;gigabitethernet <i>rbridge-id/slot/port</i></b></p> <p>Specifies a valid, physical Ethernet subtype ( <i>&lt;N&gt;</i> represents all available Ethernet speeds). Enter ? at the command prompt to see what interface subtypes are available for that command.</p> <p><b><i>rbridge-id</i></b></p> <p>Specifies the RBridge ID.</p> <p><b><i>slot</i></b></p> <p>Specifies a valid slot number.</p> <p><b><i>port</i></b></p> <p>Specifies a valid slot number.</p> <p><b><i>ve vlan_id</i></b></p> <p>Specifies the VLAN number.</p> <p><b><i>rbridge-id</i></b></p> <p>Specifies the RBridge ID.</p> <p><b>loopback <i>number</i></b></p> <p>Specifies a loopback port number in the range from 1 through 255.</p> <p><b>vrf <i>vrfname</i></b></p> <p>Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Use the <b>brief</b> keyword to limit the display to the following fields:</p> <ul style="list-style-type: none"> <li>• Interface</li> <li>• Area</li> <li>• Status</li> <li>• Type</li> <li>• Cost</li> <li>• State</li> <li>• Nbrs(F/C)</li> </ul>

**Examples** The following is sample output from the **show ipv6 ospf interface** command when no arguments or keywords are used:

```
device# show ipv6 ospf interface
vlan0.10 admin up, oper up, IPv6 enabled
IPv6 Address:fe80::205:33ff:fe77:23ee
3010::10/64
Instance ID 0, Router ID 10.10.10.10
Area ID 0, Cost 1, Type BROADCAST
MTU: 1500
State BDR, Transmit Delay 1 sec, Priority 1, Link-LSA Tx not suppressed
Timer intervals :
Hello 10, Hello Jitter 10 Dead 40, Retransmit 5
Authentication Use: Enabled
KeyRolloverTime(sec): Configured: 300 Current: 0
KeyRolloverState: NotActive
Outbound: None
Inbound: None
DR:4.4.4.4 BDR:10.10.10.10 Number of I/F scoped LSAs is 2
DRElection: 1 times, DelayedLSAck: 2 times
Neighbor Count = 1, Adjacent Neighbor Count= 1
Neighbor:
4.4.4.4 (DR)
Statistics of interface vlan0.10:
Type tx rx tx-byte rx-byte
Unknown 0 0 0 0
Hello 37 35 1476 1400
DbDesc 2 2 136 116
LSReq 1 1 52 64
LSUpdate 8 2 684 368
LSAck 3 8 208 348
OSPF messages dropped,no authentication: 0
```

The following is sample output from the **show ipv6 ospf interface** command the **brief** keyword is used:

```
device# show ipv6 ospf interface brief
Interface Area Status Type Cost State Nbrs (F/C)
te2/1 0 up BCST 1 DR 0/0
vlan0.10 0 up BCST 1 BDR 1/1
vlan0.20 1 up BCST 1 DR 0/0
vlan0.30 1 up P2P 10 P2P 0/0
```

## History

Release version	Command history
5.0.0	This command was introduced.

## show ipv6 ospf memory

Displays information about OSPFv3 memory usage.

<b>Syntax</b>	<b>show ipv6 ospf memory</b> [ <b>all-vrfs</b> ] [ <b>rbridge-id</b> <i>rbridge-id</i> ] [ <b>vrf</b> <i>vrfname</i> ]
<b>Parameters</b>	<p><b>all-vrfs</b> Displays the information for all VRF instances.</p> <p><b>rbridge-id</b> <i>rbridge-id</i> Displays the information for the physical, loopback, and SVI interfaces specific to the selected RBridge.</p> <p><b>vrf</b> <i>vrfname</i> Displays the information for a specific VRF instance. If this option is not used, details for the default VRF are shown in the output.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Use this command to display routes that have been redistributed into OSPFv3.
<b>Examples</b>	The following is sample output from the <b>show ipv6 ospf memory</b> command when no arguments or keywords are used:

```

device# show ipv6 ospf memory
Total Dynamic Memory Allocated for this instance : 4551924 bytes
Memory Type          Size      Allocated  Max-alloc  Alloc-Fails
MTYPE_OSPF6_AREA     450720      2           4           0
MTYPE_OSPF6_AREA_RANGE 36           0          16           0
MTYPE_OSPF6_SUMMARY_ADDRE 32           0          16           0
MTYPE_OSPF6_IF       304          4          64           0
MTYPE_OSPF6_NEIGHBOR 12524        1          32           0
MTYPE_OSPF6_ROUTE_NODE 28           11         4096         0
MTYPE_OSPF6_ROUTE_INFO 44           11         4096         0
MTYPE_OSPF6_PREFIX   24           0          16           0
MTYPE_OSPF6_LSA      136          22         4096         0
MTYPE_OSPF6_VERTEX   176          4          64           0
MTYPE_OSPF6_SPTTREE  48           2           2           0
MTYPE_OSPF6_NEXTHOP  32           7          256          0
MTYPE_OSPF6_EXTERNAL_INFO 44           0          4096         0
MTYPE_THREAD         36           13         1024          0
MTYPE_OSPF6_LINK_LIST 24           3224       20480         0
MTYPE_OSPF6_LINK_NODE 16           74         20480         0
MTYPE_OSPF6_LSA_RETRANSMI 12           0          8192          0
global memory pool for all instances
Memory Type          Size      Allocated  Max-alloc  Alloc-Fails
MTYPE_OSPF6_TOP      61480       1           1           0
MTYPE_OSPF6_LSA_HDR  56           22          23           0
MTYPE_OSPF6_RMAP_COMPILED 0           0           0           0
MTYPE_OSPF6_OTHER    0           0           0           0
MTYPE_THREAD_MASTER  84           1           1           0

```

### History

Release version	Command history
5.0.0	This command was introduced.

# show ipv6 ospf neighbor

Displays detailed or summary OSPFv3 neighbor information.

<b>Syntax</b>	<b>show ipv6 ospf neighbor</b> [ <b>all-vrfs</b> ] [ <b>detail</b> ] [ <b>interface</b> { <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>loopback</b> <i>number</i>   <b>ve</b> <i>vlan_id</i> } ] [ <b>rbridge-id</b> <i>rbridge-id</i> ] [ <b>router-id</b> <i>A.B.C.D</i> ] [ <b>vrf</b> <i>vrfname</i> ]
<b>Parameters</b>	<p><b>all-vrfs</b> Displays the information for all VRF instances.</p> <p><b>detail</b> Displays detailed neighbor information.</p> <p><b>Interface</b> Displays OSPFv3 interface information.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>loopback number</b> Specifies a loopback port number in the range from 1 through 255.</p> <p><b>ve vlan_id</b> Specifies a virtual Ethernet (VE) interface.</p> <p><b>rbridge-id rbridge-id</b> Displays the information for the physical, loopback, and SVI interfaces specific to the selected RBridge.</p> <p><b>router-id A.B.C.D</b> Displays neighbor information for the specified router ID (in dotted decimal format).</p> <p><b>vrf vrfname</b> Specifies the name of the VRF instance. If this option is not used, details for the default VRF instance are shown in the output.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	The following is sample output from the <b>show ipv6 ospf neighbor</b> command when no arguments or keywords are used:

```
device# show ipv6 ospf neighbor
Total number of neighbors in all states: 1
Number of neighbors in state Full      : 1
RouterID      Pri State  DR          BDR          Interface    [State]
4.4.4.4       1 Full   4.4.4.4     10.10.10.10  vlan0.10     [BDR]
```

The following is sample output from the **show ipv6 ospf neighbor** command when the **detail** keyword is used:

```

device# show ipv6 ospf neighbor detail
Total number of neighbors in all states: 8
Number of neighbors in state Init      : 1
Number of neighbors in state Full     : 7
RouterID      Pri State   DR              BDR              Interface        [State]
153.153.153.153  1 Init   153.153.153.153 0.0.0.0          Fo 122/8/8      [DR]
Option: 00-00-00  QCount: 0   Timer: 37
125.125.125.125  1 Full   154.154.154.154 122.122.122.122 Ve 2000          [BDR]
Option: 00-00-13  QCount: 0   Timer: 2
154.154.154.154  1 Full   154.154.154.154 122.122.122.122 Ve 2000          [BDR]
Option: 00-00-13  QCount: 0   Timer: 38
122.21.21.122    0 Full   122.122.122.122 0.0.0.0          Ve 2001          [DR]
Option: 00-00-13  QCount: 0   Timer: 18
125.125.125.125  1 Full   122.122.122.122 125.125.125.125 Ve 2002          [DR]
Option: 00-00-13  QCount: 0   Timer: 5
125.125.125.125  1 Full   122.122.122.122 125.125.125.125 Ve 2009          [DR]
Option: 00-00-13  QCount: 0   Timer: 47
125.125.125.125  1 Full   128.128.128.128 125.125.125.125 Ve 2128          [DROt her]
Option: 00-00-13  QCount: 42  Timer: 420
128.128.128.128  1 Full   128.128.128.128 125.125.125.125 Ve 2128          [DROt her]
Option: 00-00-13  QCount: 0   Timer: 28
    
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## show ipv6 ospf redistribute route

Displays all IPv6 routes or a specified IPv6 route that the device has redistributed into OSPFv3.

**Syntax** `show ipv6 ospf redistribute route [ A.B.C.D:M ] [ all-vrfs ] [ rbridge-id rbridge-id ] [ vrf vrfname ]`

**Parameters** *A.B.C.D:M*

Specifies an IPv6 address.

**all-vrfs**

Displays all IPv6 routes that the device has redistributed into OSPFv3.

**rbridge-id** *rbridge-id*

Displays the information for the physical, loopback, and SVI interfaces specific to the selected RBridge.

**vrf** *vrfname*

Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.

**Modes** Privileged EXEC mode

**Examples** The following is sample output from the `show ipv6 ospf redistribute route` command when no arguments or keywords are used:

```
device# show ipv6 ospf redistribute route
Id      Prefix          Protocol  Metric Type  Metric
2       2111::/64      Static   Type-2    10
1       3030::/64      Connect  Type-2     0
```

**History**

**Release version**

**Command history**

5.0.0

This command was introduced.

## show ipv6 ospf routes

Displays OSPFv3 routes.

<b>Syntax</b>	<b>show ipv6 ospf routes</b> [ <i>A.B.C.D:M</i> ] [ <b>all-vrfs</b> ] [ <b>rbridge-id</b> <i>rbridge-id</i> ] [ <b>vrf</b> <i>vrfname</i> ]
<b>Parameters</b>	<b>A.B.C.D:M</b> Specifies a destination IPv6 address.
	<b>all-vrfs</b> Displays the entire OSPFv3 route table for a device.
	<b>rbridge-id</b> <i>rbridge-id</i> Displays the route information for the physical, loopback, and SVI interfaces specific to the selected RBridge.
	<b>vrf</b> <i>vrfname</i> Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	To display OSPFv3-calculated routes for the default VRF:

```
device# show ipv6 ospf routes
```

```
Current Route count: 4
  Intra: 3 Inter: 0 External: 5 (Type1 0/Type2 5)
  Equal-cost multi-path: 0
  OSPF Type: IA- Intra, OA - Inter, E1 - External Type1, E2 - External Type2
Destination          Cost      E2Cost    Tag      Flags    Dis
E2 2014::/64          1          0         0        00000003 110
  Next_Hop_Router    Outgoing_Interface Adv_Router
  fe80::768e:f8ff:fe2a:4900  vlan0.10      4.4.4.4
Destination          Cost      E2Cost    Tag      Flags    Dis
E2 2015::/64          1          0         0        00000003 110
  Next_Hop_Router    Outgoing_Interface Adv_Router
  fe80::768e:f8ff:fe2a:4900  vlan0.10      4.4.4.4
Destination          Cost      E2Cost    Tag      Flags    Dis
IA 2050::/64          1          0         0        00000003 110
  Next_Hop_Router    Outgoing_Interface Adv_Router
  ::                   te2/1         10.10.10.10
Destination          Cost      E2Cost    Tag      Flags    Dis
IA 3010::/64          1          0         0        00000003 110
  Next_Hop_Router    Outgoing_Interface Adv_Router
  ::                   vlan0.10      4.4.4.4
```

History	Release version	Command history
	5.0.0	This command was introduced.



# show ipv6 ospf spf

Displays OSPFv3 SPF node, table, and tree information.

<b>Syntax</b>	<b>show ipv6 ospf spf</b> { <b>node</b>   <b>table</b>   <b>tree</b> } [ <b>all-vrfs</b> ] [ <b>area</b> { <i>A.B.C.D</i>   <i>decimal</i> } ] [ <b>rbridge-id</b> <i>rbridge-id</i> ] [ <b>vrf</b> <i>vrfname</i> ]
<b>Parameters</b>	<p><b>node</b> Displays OSPFv3 node information.</p> <p><b>table</b> Specifies a SPF table.</p> <p><b>tree</b> Specifies a SPF tree.</p> <p><b>all-vrfs</b> Displays the information for all VRF instances.</p> <p><b>area</b> Specifies an area.</p> <p style="padding-left: 2em;"><b>A.B.C.D</b> Area address in dotted decimal format.</p> <p style="padding-left: 2em;"><b>decimal</b> Area address in decimal format.</p> <p><b>rbridge-id</b> <i>rbridge-id</i> Displays the information for the physical, loopback, and SVI interfaces specific to the selected RBridge.</p> <p><b>vrf</b> <i>vrfname</i> Displays the information for a specific VRF instance. If this option is not used, details for the default VRF are shown in the output.</p>
<b>Examples</b>	The following is sample output from the <b>show ipv6 ospf spf</b> command when the <b>node</b> keyword is used:

```
device# show ipv6 ospf spf node
SPF node for Area 0
SPF node 10.10.10.10, cost: 0, hops: 0
  nexthops to node:
  parent nodes:
  child nodes: 4.4.4.4:1548
SPF node 4.4.4.4:1548, cost: 1, hops: 1
  nexthops to node:      :: vlan0.10
  parent nodes: 10.10.10.10
  child nodes: 4.4.4.4:0
SPF node 4.4.4.4:0, cost: 1, hops: 2
  nexthops to node:      fe80::768e:f8ff:fe2a:4900 vlan0.10
  parent nodes: 4.4.4.4:1548
  child nodes:
SPF node for Area 1
SPF node 10.10.10.10, cost: 0, hops: 0
  nexthops to node:
  parent nodes:
  child nodes:
```

The following is sample output from the **show ipv6 ospf spf** command when the **table** keyword is used:

```
device# show ipv6 ospf spf table
SPF table for Area 0
R 4.4.4.4          ---E- V6E---R--    1 fe80::768e:f8ff:fe2a:4900 vlan0.10
N 4.4.4.4[1548]   ----- V6E---R--    1  ::                          vlan0.10
  Destination      Bits Options  Cost  Nexthop                      Interface
SPF table for Area 1
  Destination      Bits Options  Cost  Nexthop                      Interface
```

The following is sample output from the **show ipv6 ospf spf** command when the **tree** keyword is used:

```
device# show ipv6 ospf spf tree
SPF tree for Area 0
+- 10.10.10.10 cost 0
   +- 4.4.4.4:1548 cost 1
      +- 4.4.4.4:0 cost 1

SPF tree for Area 1
+- 10.10.10.10 cost 0
```

**History**

Release version	Command history
5.0.0	This command was introduced.

# show ipv6 ospf summary

Displays summary information for all OSPFv3 instances.

**Syntax** `show ipv6 ospf summary [ all-vrfs ] [ rbridge-id rbridge-id ] [ vrf vrfname ]`

**Parameters** **all-vrfs**

Specifies all VRF instances.

**rbridge-id rbridge-id**

Displays the information for the physical, loopback, and SVI interfaces specific to the selected RBridge.

**vrf vrfname**

Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.

**Modes** Privileged EXEC mode

**Examples** The following is sample output from the **show ipv6 ospf summary** command when no arguments or keywords are used:

```
device# show ipv6 ospf summary
```

```
Total number of IPv6 OSPF instances: 1
Seq Instance      Intfs  Nbrs   Nbrs-Full  LSAs   Routes
1  default-vrf    3      1      1          21     9
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## show ipv6 ospf virtual-links

Displays information about all OSPFv3 virtual links or specified links.

<b>Syntax</b>	<b>show ipv6 ospf virtual-link</b> [ <b>all-vrfs</b> ] [ <b>brief</b> ] [ <b>rbridge-id</b> <i>rbridge-id</i> ] [ <b>vrf</b> <i>vrfname</i> ]
<b>Parameters</b>	<p><b>all-vrfs</b> Specifies all virtual links.</p> <p><b>brief</b> Displays brief summary information.</p> <p><b>rbridge-id</b> <i>rbridge-id</i> Displays information for the physical, loopback, and SVI interfaces specific to the selected RBridge.</p> <p><b>vrf</b> <i>vrfname</i> Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Use this command to display brief or detailed information about virtual links. You can show information about all virtual links, or you can specify a virtual link</p> <p>Use the <b>brief</b> keyword to limit the display to the following fields:</p> <ul style="list-style-type: none"> <li>• Index</li> <li>• Transit Area ID</li> <li>• Router ID</li> <li>• Interface Address</li> <li>• State</li> </ul>
<b>Examples</b>	<p>The following is sample output from the <b>show ipv6 ospf virtual-links</b> command when no arguments or keywords are used:</p>

```
device# show ipv6 ospf virtual-links
Transit Area ID Router ID      Interface Address      State
1              4.4.4.4                3010::10              P2P
  Timer intervals(sec) :
    Hello 10, Hello Jitter 10, Dead 40, Retransmit 5, TransmitDelay 1
  DelayedLSAck:      3 times
  Authentication: Not Configured
  Statistics:
    Type      tx      rx      tx-byte  rx-byte
    Unknown  0       0       0        0
    Hello     3       4       120      156
    DbDesc    2       3       156      124
    LSReq     1       1       40       76
    LSUpdate  7       3       656     240
    LSAck     3       4       148     224
  OSPF messages dropped,no authentication: 0
  Neighbor: State: Full Address: 3010::1 Interface: vlan0.10
```

The following is sample output from the **show ipv6 ospf virtual-links** command when the **brief** keyword is used:

```
device# show ipv6 ospf virtual-links brief
Transit Area ID Router ID      Interface Address      State
1              4.4.4.4                3010::10              P2P
```

History	Release version	Command history
	5.0.0	This command was introduced.

## show ipv6 ospf virtual-neighbor

Displays information about all OSPFv3 virtual neighbors or one OSPFv3 virtual neighbor that you specify.

**Syntax** `show ipv6 ospf virtual-neighbor [ all-vrfs ] [ brief ] [ rbridge-id rbridge-id ] [ vrf vrfname ]`

**Parameters** **all-vrfs**

Specifies all virtual neighbors.

**brief**

Displays brief summary information.

**rbridge-id rbridge-id**

Displays information for the physical, loopback, and SVI interfaces specific to the selected RBridge.

**vrf vrfname**

Specifies the name of the VRF instance. If this option is not used, details for the default VRF are shown in the output.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display brief or detailed information about virtual neighbors. You can show information about all virtual neighbors, or you can specify a virtual neighbor

Use the **brief** keyword to limit the display to the following fields:

- Index
- Router ID
- Address
- State
- Interface

**Examples** The following is sample output from the **show ipv6 ospf virtual-neighbor** command when no arguments or keywords are used:

```
device# show ipv6 ospf virtual-neighbor
Index Router ID      Address          State      Interface
1      4.4.4.4           3010::1        Full      vlan0.10
Option: 00-00-00    QCount: 0      Timer: 457
```

The following is sample output from the **show ipv6 ospf virtual-neighbor** command when the brief keyword is used:

```
device# show ipv6 ospf virtual-neighbor brief
Index Router ID      Address          State      Interface
1      4.4.4.4           3010::1        Full      vlan0.10
```

**History**

Release version	Command history
5.0.0	This command was introduced.

# show ipv6 prefix-list

Displays the IPv6 prefix-list information.

**Syntax** `show ipv6 prefix-list [ name ]`

**Parameters** *name*  
The name of the specific prefix-list you want to display.

**Modes** Privileged EXEC mode

**Examples** Typical command output:

```
switch# show ipv6 prefix-list
ipv6 prefix-list routesfor2001: 1 entries
seq 5 permit 2001::/16
```

**Related  
Commands** [ipv6 prefix-list](#)

## show ipv6 route

Displays information about IPv6 routes.

<b>Syntax</b>	<b>show ipv6 route</b> [ <i>ipv6address</i> [ <b>debug</b> [ <b>rbridge-id</b> { <b>all</b>   <i>rbridge-id</i> } <b>vrf</b> { <i>vrf-name</i>   <b>all</b>   <b>default</b> } ]   <b>detail</b> [ <b>rbridge-id</b> { <b>all</b>   <i>rbridge-id</i> } <b>vrf</b> { <i>vrf-name</i>   <b>all</b>   <b>default</b> } ]   <b>rbridge-id</b> { <b>all</b>   <i>rbridge-id</i> } <b>vrf</b> { <i>vrf-name</i>   <b>all</b>   <b>default</b> }   <b>ipv6prefix</b> [ <b>debug</b>   <b>detail</b>   <b>longer</b> [ <b>rbridge-id</b> { <b>all</b>   <i>rbridge-id</i> } ] <b>vrf</b> { <i>vrf-name</i>   <b>all</b>   <b>default</b> } ]   <b>bgp</b> [ <b>rbridge-id</b> { <b>all</b>   <i>rbridge-id</i> } ]   <b>connected</b> [ <b>rbridge-id</b> { <b>all</b>   <i>rbridge-id</i> } ] <b>vrf</b> { <i>vrf-name</i>   <b>all</b>   <b>default</b> } ]   <b>nexthop</b> <i>nexthop</i> [ <b>rbridge-id</b> { <b>all</b>   <i>rbridge-id</i> } ] <b>vrf</b> { <i>vrf-name</i>   <b>all</b>   <b>default</b> } ]   <b>ospf</b> [ <b>rbridge-id</b> <i>rbridge-id</i> ]   <b>rbridge-id</b> { <b>all</b>   <i>rbridge-id</i> }   <b>slot</b> <i>slot</i>   <b>static</b> [ <b>rbridge-id</b> { <b>all</b>   <i>rbridge-id</i> } <b>vrf</b> { <i>vrf-name</i>   <b>all</b>   <b>default</b> } ]   <b>summary</b> [ <b>rbridge-id</b> { <b>all</b>   <i>rbridge-id</i> } <b>vrf</b> { <i>vrf-name</i>   <b>all</b>   <b>default</b> } ] [ <b>vrf</b> [ <i>vrf-name</i>   <b>all</b>   <b>default</b> ] ]   <b>vrf</b> [ <i>vrf-name</i>   <b>all</b>   <b>default</b> ] ]
<b>Parameters</b>	<p><b><i>ipv6address</i></b> IPv6 address in A:B::C:D format.</p> <p><b>debug</b> Displays debug information.</p> <p><b>detail</b> Displays detailed information.</p> <p><b>rbridge-id</b> <i>rbridge-id</i> Specifies an RBridge ID.</p> <p><b>all</b> Specifies all RBridges in the cluster.</p> <p><b>vrf</b> <i>vrf-name</i> Specifies a VRF instance.</p> <p><b>all</b> Specifies all VRF instances.</p> <p><b>default</b> Specifies the default VRF instance.</p> <p><b><i>ipv6prefix</i></b> IPv6 prefix in A:B::/length format.</p> <p><b>longer</b> Displays information for prefixes longer than the specified prefix.</p> <p><b>all</b> Displays information about all routes.</p> <p><b>bgp</b> Displays information about BGP routes.</p> <p><b>connected</b> Displays information about directly connected routes.</p> <p><b>nexthop</b> <i>nexthop</i> Displays information about a specified next-hop address.</p> <p><b>slot</b> <i>slot</i> Specifies a line card.</p> <p><b>static</b> Displays information about static routes.</p> <p><b>summary</b> Displays summary information.</p>



**Modes** Privileged EXEC mode

# show ipv6 route import

Displays the IPv6 routes imported to a specified VRF

**Syntax** `show ipv6 route import [vrf vrf_name] [rbridge-id {rbridge-id | all}]`

**Parameters** **vrf\_name**  
 Specifies the VRF whose imported routes you want to display.

**rbridge-id**  
 Specifies a RBridge or all RBridges for the VRF whose routes you wish to display.

**rbridge-id**  
 Specifies an RBridge ID.

**all**  
 Specifies all RBridges.

**Modes** Privileged EXEC mode

**Examples** To display IPv6 routes for a VRF that has been configured with the name VRF1:

```
switch# show ipv6 route import vrf vrf1
IPv6 Routing Table for VRF "vrf1"
'*' denotes best ucast next-hop
'[x/y]' denotes [preference/metric]

5000::/64, attached
  *via 2000:21::200, Ve 21, [20/0], 1m6s, eBgp+
5000:0:0:1::/64, attached
  *via 2000:21::200, Ve 21, [20/0], 1m6s, eBgp+
5000:0:0:2::/64, attached
  *via 2000:22::200, Ve 22, [20/0], 1m6s, eBgp+
5000:0:0:3::/64, attached
  *via 2000:22::200, Ve 22, [20/0], 1m6s, eBgp+
5000:0:0:4::/64, attached
  *via 2000:23::200, Ve 23, [20/0], 1m6s, eBgp+
5000:0:0:5::/64, attached
  *via 2000:24::200, Ve 24, [20/0], 1m6s, eBgp+
5000:0:0:6::/64, attached
  *via 2000:25::200, Ve 25, [20/0], 1m6s, eBgp+
5000:0:0:7::/64, attached
  *via 2000:26::200, Ve 26, [20/0], 1m6s, eBgp+
5000:0:0:8::/64, attached
  *via 2000:27::200, Ve 27, [20/0], 1m6s, eBgp+
5000:0:0:9::/64, attached
  *via 2000:28::200, Ve 28, [20/0], 1m6s, eBgp+
```

History	Release version	Command history
	5.0.0	This command was introduced.

# show ipv6 route system-summary

Displays IPv6 route information with respect to route limits and next-hop limits, as well as additional information, for all VRFs and specific VRFs.

**Syntax** `show ip route system-summary [ rbridge-id rbridge-id ] [ vrf name ]`

**Parameters** `rbridge-id rbridge-id`

Displays routes for a selected RBridge ID.

`vrf name`

Displays routes for a selected VRF instance.

**Modes** Privileged EXEC mode

## Usage Guidelines

**Command Output** The `show ip route system-summary` command displays the following information:

Output field	Description
System Route Count	Displays current (all VRF aggregate) system-wide route count, the maximum value supported by the RBridge, and whether or not the system limit was exceeded in the past.
System Nexthop Count	Displays current (all VRF aggregate) system-wide next-hop count, the maximum value supported by the RBridge, and whether or not the system limit was exceeded in the past.
VRF-Name	Displays, on a per-VRF basis, the current route count on the VRF, the maximum number of routes (if configured) on the VRF, and a breakdown of routes as connected, static, per routing protocol, and so on. The display is for a named VRF, the default VRF, and the management VRF.

## Examples

```
switch# show ipv6 route system-summary

System Route Count: 12192 Max routes: 20476 (Route limit not exceeded)
System Nexthop Count: 334 Max nexthops: 15360 (Nexthop limit not exceeded)

VRF-Name: 122_53
  Route count: 1033 Max routes: 2000 (Route limit not exceeded)
  18 connected, 1 static, 0 RIP, 1001 OSPF, 0 BGP, 0 ISIS

VRF-Name: abc
  Route count: 2006 Max routes: 2500 (Route limit not exceeded)
  2 connected, 0 static, 0 RIP, 2002 OSPF, 0 BGP, 0 ISIS

VRF-Name: default-vrf
  Route count: 3080 Max routes: Not Set (Route limit not exceeded)
  32 connected, 3 static, 0 RIP, 1011 OSPF, 2004 BGP, 0 ISIS

VRF-Name: mgmt-vrf
  Route count: 6 Max routes: Not Set (Route limit not exceeded)
  3 connected, 1 static, 0 RIP, 0 OSPF, 0 BGP, 0 ISIS
```

## History

Release version	Command history
5.0.1	This command was introduced.

## show ipv6 static route

Displays information about IPv6 static routes.

- Syntax** `show ipv6 static route [ ipv6prefix [ rbridge-id { all | rbridge-id } ] [ vrf vrf-name ] | rbridge-id { all | rbridge-id } | vrf vrf-name ]`
- Parameters**
- ipv6prefix**  
IPv6 prefix in *A:B::length* format.
  - rbridge-id rbridge-id**  
Specifies an RBridge ID.
  - all**  
Specifies all RBridges in the cluster.
  - vrf vrf-name**  
Specifies a VRF instance.
  - all**  
Specifies all VRF instances.
  - default**  
Specifies the default VRF instance.
- Modes** Privileged EXEC mode
- Examples** The following example illustrates the output of the **show ipv6 static route** command:

```
switch# show ipv6 static route
IPv6 Configured Static Routes for VRF "default-vrf"
2014::/64-> 3001:1111::2000 preference: 1
  nh_vrf (default-vrf)
3ffe:1002::/64-> 2001::100 preference: 1
  nh_vrf (default-vrf)
  real-next-hop: 2001::100, interface: Te 7/0/48
2ffe:1111:2222::1234/128-> 3001::5678 preference: 1
  nh_vrf (default-vrf)
```

# show ipv6 vrrp

Displays information about IPv6 VRRP and VRRP-E sessions.

**Syntax** `show ipv6 vrrp VRID [ detail ] [ summary ] [ rbridge-id { rbridge-id | all } ]`

`show ipv6 vrrp [ detail | summary ] [ rbridge-id { rbridge-id | all } ]`

`show ipv6 vrrp [ interface { <N>gigabitethernet [ rbridge-id ]/slot/port | ve vlan_id } ] [ detail ] [ summary ]`

`show ipv6 vrrp rbridge-id { rbridge-id | all } [ detail ] [ summary ]`

**Parameters** *VRID*

The virtual group ID about which to display information. Valid values range from 1 to 128.

**detail**

Displays all session information in detail, including session statistics.

**summary**

Displays single line, session-information summaries.

**rbridge-id { rbridge-id | all }**

Displays information for a specified RBridge ID. If **all** is specified for the rbridge-id variable, information for all RBridge IDs is displayed.

**interface**

Displays information for an interface that you specify.

**<N> gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**ve vlan\_id**

Specifies the VE VLAN number.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display information about IPv6 VRRP and VRRP-E sessions, either in summary or full-detail format. You can also specify a particular virtual group, one or all RBridge IDs, or an interface for which to display VRRP output.

This command is for IPv6 VRRP and IPv6 VRRP-E. IPv6 VRRP-E supports only the VE interface type. You can modify or redirect the displayed information by using the default Linux tokens (|, >).

**Examples** To show IPv6 VRRPv3 information in detail for a specific virtual group ID of 19, including session statistics:

```
switch# show ipv6 vrrp 19 detail
=====Rbridge-id:122=====
Total number of VRRP session(s) : 1
VRID 19
  Interface: Ve 2019; Ifindex: 1207961571
  Mode: VRRPE
  Admin Status: Enabled
  Description :
  Address family: IPv6
  Version: 3
  Authentication type: No Authentication
  State: Backup
  Session Master IP Address: fe80::205:33ff:fe79:fb1e
  Virtual IP(s): 2001:2019:8192::1
  Virtual MAC Address: 02e0.5200.2513
  Configured Priority: unset (default: 100); Current Priority: 100
  Advertisement interval: 1 sec (default: 1 sec)
  Preempt mode: DISABLE (default: DISABLED)
  Advertise-backup: ENABLE (default: DISABLED)
  Backup Advertisement interval: 60 sec (default: 60 sec)
  Short-path-forwarding: Enabled
  Revert-Priority: unset; SPF Reverted: No
  Hold time: 0 sec (default: 0 sec)
  Master Down interval: 4 sec
  Trackport:
    Port(s)          Priority  Port Status
    =====
Global Statistics:
=====
Checksum Error : 0
Version Error  : 0
VRID Invalid   : 0
Session Statistics:
=====
Advertisements      : Rx: 103259, Tx: 1721
Neighbor Advertisements : Tx: 0
Session becoming master : 0
Advts with wrong interval : 0
Prio Zero pkts      : Rx: 0, Tx: 0
Invalid Pkts Rcvd   : 0
Bad Virtual-IP Pkts : 0
Invalid Authentication type : 0
Invalid TTL Value   : 0
Invalid Packet Length : 0
VRRPE backup advt sent : 1721
VRRPE backup advt recvd : 0
```

To show summary information for IPv6 VRRP-E statistics:

```
switch# show ipv6 vrrp summary
Total number of VRRP session(s) : 2
Master session count : 1
Backup session count : 1
Init session count : 0
VRID Session Interface Admin Current State Short-path Revert SPF
State Priority Forwarding Priority Reverted
=====
18 VRRPE Ve 2018 Enabled 254 Master Enabled unset No
19 VRRPE Ve 2019 Enabled 100 Backup Enabled unset No
```

# show lacp

Displays Link Aggregation Control Protocol (LACP) statistics.

**Syntax** `show lacp [ counters [ port-channel ] | sys-id [ port-channel ]`

**Parameters** **counters**

Displays LACP statistics for all port-channel interfaces.

***port-channel***

Displays counters for a specified port channel interface. Valid values range from 1 through 6144.

**sys-id**

Displays LACP statistics by system ID.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the LACP statistics for each port-channel interface for all port-channel interfaces or a single port-channel interface, or by system ID.

## show lacp sys-id

Displays the Link Aggregation Control Protocol (LACP) system ID and priority information.

**Syntax** `show lacp sys-id`

**Modes** Privileged EXEC mode

**Usage Guidelines** The system priority and the system Media Access Control (MAC) address make up the system identification. The first two bytes are the system priority, and the last six bytes are the globally administered individual MAC addresses associated with the system.

**Examples** To display the local system ID:

```
switch# show lacp sys-id
% System 8000,00-05-1e-76-1a-a6
```



# show license

Displays license information.

**Syntax** `show license [ rbridge-id { rbridge-id | all } ] [ all ]`

**Command Default** Displays the licenses installed on the local switch.

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**all**

Executes the command on all switches in the fabric.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the license information for the local switch or any switch in a Brocade VCS Fabric cluster. The command output includes the RBridge ID, license description, expiration if applicable, the feature name, and an indication of whether the license is valid. A string of "x" characters is displayed for the license key.

In logical chassis cluster mode, remote license operations may be performed on any remote RBridge, from any RBridge in the logical chassis cluster.

**Examples** To display a Brocade VDX 8770 licensed for Advanced Services: (This configuration enables the use of Layer 3 and FCoE features. The VCS Fabric license is enabled on all VDX platforms by default starting with Network OS 4.1.0; a VCS Fabric license does not need to be installed to enable VCS Fabric functionality.)

```
switch# show license

rbridge-id: 60
xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx
Advanced Services license
Feature name:ADVANCED_SERVICES
License is valid
```

**Related Commands** [license add](#), [license remove](#), [show license id](#)

## show license id

Displays the RBridge License ID.

**Syntax** `show license id [ rbridge-id { rbridge-id { rbridge-id | all } } [ all ]`

**Command Default** Displays the license ID installed on the local switch.

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

***rbridge-id***

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**all**

Executes the command on all switches in the fabric.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the RBridge license ID (WWN) for the specified switch. You need the RBridge license ID when you prepare to add a license.

In logical chassis cluster mode, remote license operations may be performed on any remote RBridge, from any RBridge in the logical chassis cluster.

**Examples** To display the license ID for the local switch:

```
switch# show license id

Rbridge-Id      LicenseId
=====
2                10:00:00:05:1E:00:4C:80
```

**Related Commands** [license add](#), [license remove](#), [show license](#)

# show linecard

Displays information about the line cards present in the chassis.

**Syntax** `show linecard`

**Modes** Privileged EXEC mode

**Command Output** The `show linecard` command displays the following information:

Output field	Description
Slot	Displays the slot number. Slots for line cards are L1 through L4 on Brocade VDX 8770-4 switches, and L1 through L8 on Brocade VDX 8770-8 switches.
Type	Displays the line card type.
Description	Module description.
ID	Displays IDs for line cards.
Status	Displays the status of the line card as one of the following: <ul style="list-style-type: none"> <li>VACANT - The slot is empty.</li> <li>POWERED-OFF - The module is present in the slot but is powered off.</li> <li>POWERING UP - The module is present and powering on.</li> <li>LOADING - The module is present, powered on, and loading the initial configuration.</li> <li>DIAG RUNNING POST1 - The module is present, powered on, and running the POST (power-on self-test).</li> <li>DIAG RUNNING POST2 - The module is present, powered on, and running the reboot power on self tests.</li> <li>INITIALIZING - The module is present, powered on, and initializing hardware components.</li> <li>ENABLED - The module is on and fully enabled.</li> <li>DISABLED - The module is powered on but disabled.</li> <li>FAULTY - The module is faulty because an error was detected.</li> <li>UNKNOWN - The module is inserted but its state cannot be determined.</li> </ul>

**Examples** To display the line cards present in a Brocade VDX 8770-4 switch:

```
switch# show linecard
```

Slot	Type	Description	ID	Status
L1	LC48X10G	48-port 10GE card	114	ENABLED
L2	LC48X10G	48-port 10GE card	114	ENABLED
L3				VACANT
L4	LC48X1G	48-port 1GE card	131	ENABLED

**Related Commands** [linecard](#), [show sfm](#), [show slots](#)

## show lldp interface

Displays the LLDP status on the specified interface.

**Syntax** `show lldp interface [ <N>gigabitethernet rbridge-id/slot/port ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples** To display all the LLDP interface information for a selected interface:

```
switch# show lldp interface tengigabitethernet 1/0/0
```

```
LLDP information for Te 1/0/0
State:                               Enabled
Mode:                                 Receive/Transmit
Advertise Transmitted:                30 seconds
Hold time for advertise:              120 seconds
Tx Delay Timer:                       1 seconds
DCBX Version :                        CEE
Auto-Sense :                          Yes
Transmit TLVs:                        Chassis ID          Port ID
                                       TTL                  System Name
                                       IEEE DCBx          DCBx FCoE App
                                       DCBx FCoE Logical Link
DCBX FCoE Priority Values: 3
DCBX iSCSI Priority Values: 4
```

To display all the LLDP interface information:

```
switch# show lldp
LLDP Global Information
system-name: switch
system-description: Brocade-VDX-VCS 100
description:
State:                               Enabled
Mode:                                 Receive/Transmit
Advertise transmitted:                30 seconds
Hold time for advertise:              120 seconds
Tx Delay Timer:                       1 seconds
Transmit TLVs:                        Chassis ID          Port ID
                                       TTL                  System Name
                                       IEEE DCBx          DCBx FCoE App
                                       DCBx FCoE Logical Link
DCBX FCoE Priority Values: 3
DCBX iSCSI Priority Values: 4
```

# show lldp neighbors

Displays LLDP information for all neighboring devices on the specified interface.

**Syntax** `show lldp neighbors [ interface { <N>gigabitethernet rbridge-id/slot/port } detail ]`

**Parameters** **interface**

Specifies an Ethernet interface.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**detail**

Displays all the LLDP neighbor information in detail for the specified interface.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display LLDP information for all neighboring devices on the specified interface.

---

## ATTENTION

If you do not use the **interface** parameter, only the mandatory TLVs are displayed.

---

**Examples** To display detailed LLDP neighbor information on a specific interface:

```
switch# show lldp neighbors interface tengigabitethernet 3/0/8 detail

Neighbors for Interface Te 3/0/8
MANDATORY TLVs
=====
Local Interface: Te 0/8      Remote Interface: Te 3/0/8 (IF Name)
Dead Interval: 120 secs  Remaining Life : 100 secs Tx: 536 Rx: 535
Chassis ID: 0005.1e76.1020 (MAC)
Remote Mac: 0005.1e76.102c
OPTIONAL TLVs
=====
Port Interface Description: Te 3/0/8
System Name: sw0
System Description: Fibre Channel Switch.
System Capabilities: Switching Routing
System Capabilities Enabled: Switching
Link Prim: 257
Remote Protocols Advertised: Multiple Spanning Tree Protocol
Remote VLANs Configured: VLAN ID: 1  VLAN Name: default
AutoNego Support: Supported Not Enabled
AutoNego Capability: 0
Operational MAU Type: 0
Link Aggregation Capability: Capable
Link Aggregation Status: Disabled
Port Vlan Id: 1
Port & Protocol Vlan Flag: Supported Not enabled
Port & Protocol Vlan Id: 0
Link Aggregation Port Id: 0
Max Frame Size: 2500
Management Address: 10.32.152.21 (IPv4)
Interface Numbering: 2
Interface Number: 0x4080100 (67633408)
OID: 0x100f99b4
```

## show lldp statistics

Displays the LLDP statistics on all interfaces or a specified interface.

**Syntax** `show lldp statistics [ interface { <N>gigabitethernet rbridge-id/slot/port } ]`

**Parameters** **interface**

Specifies an Ethernet interface.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace **<N>gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** If you do not specify an interface, this command displays the LLDP statistics for all interfaces.

**Examples** To display LLDP statistics on the specified interface:

```
switch# show lldp statistics interface tengigabitethernet 5/0/8

LLDP Interface statistics for Te 5/0/8
Frames transmitted: 555
Frames Aged out:    0
Frames Discarded:  0
Frames with Error: 0
Frames Recieved:   554
TLVs discarded:    0
TLVs unrecognized: 0
```

## show logging auditlog

Displays the internal audit log buffer of the switch.

**Syntax** `show logging auditlog [ count count ] [ reverse ] [ rbridge-id rbridge-id | all ]`

**Parameters** `count count`

Specifies the number of messages to display.

`reverse`

Displays the audit log in reverse order.

`rbridge-id rbridge-id`

Specifies an RBridge.

`all`

Executes the command on all switches in the fabric.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

**Examples** To display the audit log messages stored in the internal buffer:

```
switch# show logging auditlog
```

```
0 AUDIT,2012/04/13-02:35:59 (GMT), [DCM-2002], INFO, DCMCFG, admin/admin/
10.72.16.41/ssh/cli,, chassis, Event: noscli exit, Status: success, Info: Successful
logout by user [admin].
1 AUDIT,2012/04/13-02:43:23 (GMT), [DCM-2001], INFO, DCMCFG, admin/admin/
10.72.16.41/ssh/cli,, chassis, Event: noscli start, Status: success, Info: Successful
login attempt through ssh from 10.72.16.41.
```

**Related  
Commands**

[clear logging auditlog](#), [clear logging raslog](#), [log-dampening-debug](#)



# show logging raslog

Displays the internal RASlog buffer of the switch.

**Syntax** `show logging raslog [ attribute attribute ] [ blade blade ] [ count count ] [ message-type type ] [ reverse ] [ severity severity ] [ rbridge-id rbridge-id ]`

**Parameters** `attribute attribute`

Filters output by message attribute. Valid attributes include FFDC and VCS.

`blade blade`

Displays for the specified blade only. Valid values for blade include MM1, MM2, and LC[1-8].

`count count`

Specifies the number of messages to display.

`message-type type`

Filters the output by message type. Valid message types include DCE or SYSTEM.

`severity severity`

Filters the output by message severity. Valid severity levels include the following: critical, error, info, and warning.

`reverse`

Displays the messages in reverse order.

`rbridge-id rbridge-id`

Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use the filters to customize the output.

This command is supported only on the local switch.

The RASLog messages contain the module name, error code, and message details.

**Examples** To display all RASLog messages stored in the system:

```
switch# show logging raslog
```

```
NOS: 3.0.0
2012/05/25-17:37:15, [LOG-1003], 1, M1, INFO, VDX8770-4, SYSTEM error log has been
cleared
2012/05/25-17:38:32, [SEC-1203], 3, M1, INFO, sw0, Login information: Login
successful via TELNET/SSH/RSH. IP Addr: 10.24.65.24
2012/05/25-17:42:54, [SEC-1203], 4, M1, INFO, sw0, Login information: Login
successful via TELNET/SSH/RSH. IP Addr: 10.24.65.24
2012/05/25-17:43:12, [IPAD-1002], 5, M1, INFO, VDX8770-4, Switch name has been
successfully changed to dutA1-sw0.
2012/05/25-17:51:42, [FW-1439], 180, M1, WARNING, dutA1-sw0, Switch status change
contributing factor Switch offline.
(Output truncated)
```

To display all RASLog messages for a line card:

```
switch# show logging raslog blade LC2
```

```
NOS: 3.0.0
2012/05/28-12:07:41, [HASM-1004], 822, L2, INFO, VDX8770-4, Processor rebooted - Reset
2012/05/28-12:07:41, [HASM-1104], 823, L2, INFO, VDX8770-4, Heartbeat to M1 up
2012/05/28-12:07:48, [HASM-1108], 830, L2, INFO, VDX8770-4, All service instances
become active.
2012/05/29-13:32:50, [HASM-1004], 2721, L2, INFO, VDX8770-4, Processor rebooted -
Reset
```

To display warning messages only on the standby management module:

```
switch# show logging raslog blade MM1 severity warning
NOS: 3.0.0
2012/03/09-15:20:55, [FW-1042], 26, M1, WARNING, dutA1-sw0, Sfp TX power for port
1/2/9, is below low boundary(High=1999, Low=125). Current value is 17 uW.
2012/03/09-15:20:55, [FW-1046], 27, M1, WARNING, dutA1-sw0, Sfp Current for port
1/2/9, is below low boundary(High=10, Low=3). Current value is 0 mA.
2012/03/09-15:20:55, [FW-1042], 28, M1, WARNING, dutA1-sw0, Sfp TX power for port
1/2/17, is below low boundary(High=1999, Low=125). Current value is 18 uW.
(Output truncated)
```

To display only the FFDC messages:

```
switch# show logging raslog attribute FFDC rbridge-id 1
NOS: 3.0.0
1970/01/01-00:09:43, [HASM-1200], 106, MM1 | FFDC, WARNING, chassis, Detected
termination of process Dcmd.Linux.powe:1660
```

**Related  
Commands**

[clear logging raslog](#), [logging raslog console](#)

## show mac-address-table

Displays forwarding information for all MAC addresses, for a specific dynamic or static MAC address, for all dynamic MAC addresses, for all static MAC addresses, for a specific interface, for a specific VLAN, or for MAC addresses associated with port profiles.

<b>Syntax</b>	<b>show mac-address-table</b> [ <b>address</b> <i>mac-addr</i>   <b>aging-time</b> [ <b>conversational</b> [ <b>rbridge-id</b> ] <i>rbridge-id</i> ] ]   <b>count</b> [ <b>address</b> <i>MAC_address</i>   <b>conversational linecard</b> <i>linecard_number</i> [ <b>address</b> [ <i>MAC_address</i>   <b>rbridge-id</b> <i>rbridge-id</i> ] ]   <b>interface</b> { <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>vlan</b> <i>vlan_id</i> }   <b>dynamic</b> [ <b>address</b> <i>MAC_address</i>   <b>interface</b> { <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>port-channel</b> <i>number</i>   <b>tunnel</b> <i>number</i>   <b>vlan</b> <i>vlan_id</i> }   <b>interface</b> { <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>port-channel</b> <i>number</i>   <b>tunnel</b> <i>number</i>   <b>vlan</b> <i>vlan_id</i> }   <b>static</b> [ <b>address</b> <i>MAC_address</i>   <b>interface</b> { <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>port-channel</b> <i>number</i>   <b>tunnel</b> <i>number</i>   <b>vlan</b> <i>vlan_id</i> }   <b>vlan</b> <i>vlan_id</i>   <b>dynamic</b>   <b>interface</b>   <b>learning-mode</b> [ <b>rbridge-id</b> [ <i>rbridge-id</i> ] ]   <b>linecard interface</b>   <b>port-profile</b> [ <b>address</b> <i>MAC_address</i>   <b>count</b>   <b>dynamic</b>   <b>vlan</b> <i>vlan_id</i> ]   <b>static</b>   <b>vlan</b> <i>vlan_id</i> ]
<b>Parameters</b>	<p><b>address</b> <i>MAC_address</i> Displays forwarding information for a 48-bit MAC address. The valid format is <i>H.H.H</i> (available in Privileged EXEC mode only).</p> <p><b>aging-time</b> Displays the aging time.</p> <p><b>conversational</b> Displays conversational MAC learning (CML) aging time, or is used for forwarding entries.</p> <p><b>rbridge-id</b> [<i>rbridge-id</i>] Specifies the RBridge ID display.</p> <p><b>count</b> Displays the count of forwarding entries.</p> <p><b>address</b> <i>MAC_address</i> Specifies a MAC address.</p> <p><b>conversational linecard</b> <i>linecard_number</i> Specifies CML addresses for a line card.</p> <p><b>address</b> Specifies a MAC address or an RBridge.</p> <p><b>interface</b> Specifies a physical interface or VLAN.</p> <p><b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b>[<i>rbridge-id</i>] Specifies all RBridge IDs or a single RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>port-channel</b> <i>number</i></p>

- tunnel number** Specifies a port-channel number. Range is from 1 through 6144.
- dynamic** Specifies a tunnel. Range is from 1 through 100000.
- static** Specifies dynamic (legacy) MAC addresses for a physical interface, port-channel, or VLAN.
- learning-mode** Specifies static MAC addresses for a physical interface, port-channel, or VLAN.
- linecard interface** Specifies the learning mode for all R Bridges or one R Bridge.
- port-profile** Specifies a line card.
- port-profile** Specifies a port profile.

**Modes** Privileged EXEC mode

**Examples** To display a specific MAC address in the table:

```
switch# show mac-address-table address 0011.2222.3333
vlanId  Mac-address      Type    State    Ports
100     0011.2222.3333      Static  Inactive Te 0/1
Total MAC addresses   : 1
```

To display the aging time for a specific MAC address table:

```
switch# show mac-address-table aging-time
MAC Aging-time : 300 seconds
```

To display a dynamic MAC address table:

```
switch# show mac-address-table dynamic
vlanId  Mac-address      Type    State    Ports
100     0011.2222.5555      Dynamic Dynamic  Inactive Te 0/1
100     0011.2222.6666      Dynamic Inactive Te 0/1
Total MAC addresses   : 2
```

# show media

Displays the SFP information for all the interfaces present on a switch.

**Syntax** `show media`

**Modes** Privileged EXEC mode

**Usage Guidelines** The command output will be several pages long.

The TX Power Field in the **show media** command is not supported by the 40-Gbps optics.

**Examples** To display all SFP information:

```
switch# show media
Interface Ten Gigabit Ethernet 0/1
  Identifier      3      SFP
  Connector       7      LC
  Transceiver     0000000000000010 10_GB/s
  Name            id
  Encoding        6
  Baud Rate       103 (units 100 megabaud)
  Length 9u      0 (units km)
  Length 9u      0 (units 100 meters)
  Length 50u     8 (units 10 meters)
  Length 62.5u  3 (units 10 meters)
  Length Cu      0 (units 1 meter)
  Vendor Name     BROCADE
  Vendor OUI      42:52:4f
  Vendor PN       57-0000075-01
  Vendor Rev      A
  Wavelength      850 (units nm)
  Options         001a Loss_of_Sig,Tx_Fault,Tx_Disable
  BR Max          0
  BR Min          0
  Serial No       AAA108454100431
  Date Code       081108
  Temperature     44 Centigrade
  Voltage         3246.8 (Volts)
  Current         0.002 (mAmps)
  TX Power        0.1 (uWatts)
  RX Power        0.1 (uWatts)
(Output truncated)
```

**Related Commands** [show media interface](#), [show media linecard](#)

## show media interface

Displays the SFP information for a specific interface.

**Syntax** `show media interface [ <N>gigabitethernet rbridge-id/slot/port | fibrechannel rbridge-id/slot/port ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**fibrechannel rbridge-id/slot/port**

Specifies a valid external 1-gigabit FibreChannel interface.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** The `fibrechannel rbridge-id/slot/port` parameter is used only on Brocade VDX 6740 switches.

**Examples** To display SPF information for a 1-gigabit Ethernet interface:

```
switch# show media interface gigabitethernet 1/0/1

Interface      Gigabit Ethernet 0/1
Identifier     2      On-board
Connector      34     CAT-5 copper cable
Transceiver    1000   BASE-T Gigabit Ethernet
Name           cu
Encoding       5      IEEE 802.3ab
Length         max 100 m
Copper Speed   1GB/s  Fixed
Copper Duplex  Full Duplex
Sync status    Valid/No
Vendor Name    Broadcom
Vendor OUI     00:1B:E9
Vendor model   02:0F
Vendor Rev     01
Options        001a Remote fault/Jabber detect/copper link up
Temperature threshold/val  55 Centigrade
Voltage threshold/val     3289.9 (mVolts)
```

To display SFP information for a 10-gigabit Ethernet interface:

```
switch# show media interface tengigabitethernet 5/0/1

Interface Ten Gigabit Ethernet 5/0/1
Identifier      3      SFP
Connector      7      LC
Transceiver    0000000000000010 10_GB/s
Name           id
Encoding       6
Baud Rate     103 (units 100 megabaud)
Length 9u     0 (units km)
Length 9u     0 (units 100 meters)
Length 50u    8 (units 10 meters)
Length 62.5u  3 (units 10 meters)
Length Cu     0 (units 1 meter)
Vendor Name    BROCADE
Vendor OUI     00:05:1E
Vendor PN      57-0000075-01
Vendor Rev     A
Wavelength    850 (units nm)
Options        001a Loss_of_Sig,Tx_Fault,Tx_Disable
BR Max        0
BR Min        0
Serial No     AAA108454100431
Date Code     081108
Temperature    44 Centigrade
Voltage       3246.8 (Volts)
Current       0.002 (mAmps)
TX Power      0.1 (uWatts)
RX Power      0.1 (uWatts)
```

To display SFP information for a Fibre Channel interface:

```
switch# show media interface fibrechannel 66/0/1

Interface      FibreChannel 66/0/1
Identifier     3      SFP
Connector     7      LC
Transceiver    540c404040000000 200,400,800_MB/s M5,M6 sw Short_dist
Encoding       1      8B10B
Baud Rate     85 (units 100 megabaud)
Length 9u     0 (units km)
Length 9u     0 (units 100 meters)
Length 50u    5 (units 10 meters)
Length 62.5u  2 (units 10 meters)
Length Cu     0 (units 1 meter)
Vendor Name    BROCADE
Vendor OUI     00:05:1e
Vendor PN      57-1000012-01
Vendor Rev     A
Wavelength    850 (units nm)
Options        003a Loss_of_Sig,Tx_Fault,Tx_Disable
BR Max        0
BR Min        0
Serial No     UAF110170000VP1
Date Code     100422
DD Type       0x68
Enh Options    0xfa
Status/Ctrl   0x82
Alarm flags[0,1] 0x5, 0x40
Warn Flags[0,1] 0x5, 0x40

                                     Alarm          Warn
Temperature  28      Centigrade    low    high    low    high
Voltage      3331.4  mVolts     2900.0 3700.0 3000.0 3600.0
Current      0.310      mAmps      1.000  17.000  2.000  14.000
TX Power     -21.7      dBm (6.8 uW) 125.9 uW 631.0 uW 158.5 uW 562.3 uW
RX Power     -inf      dBm (0.0 uW) 10.0 uW 1258.9 uW 15.8 uW 1000.0 uW
```

**Related Commands** [show media](#), [show media linecard](#)

## show media linecard

Displays the SFP information for a specified line card.

- Syntax** `show media linecard number`
- Parameters** *number*  
 Numeric identifier for the line card.
- Modes** Privileged EXEC mode
- Usage Guidelines** Use this command to display a summary of small form-factor pluggable (SFP) and Quad SFP media information for each interface on the specified module.  
 This command is supported only on the local RBridge.
- Examples** To display the SFP media information for an LC48X10G line card in slot 2:

```
switch# show media linecard 2

Interface      Ten Gigabit Ethernet 1/2/1
Identifier     3      SFP
Connector      33     Copper Pigtail
Transceiver    d580884104000002 10_GB/s TW Short_dist
Name           cu
Encoding       0
Baud Rate      103 (units 100 megabaud)
Length 9u      0      (units km)
Length 9u      0      (units 100 meters)
Length 50u     0      (units 10 meters)
Length 62.5u   0      (units 10 meters)
Length Cu      1      (units 1 meter)
Vendor Name    BROCADE
Vendor OUI     00:05:1e
Vendor PN      58-1000026-01
Vendor Rev     A
Wavelength     3072 (units nm)
Options        0012
BR Max         0
BR Min         0
Serial No      CAMB110100607EW
Date Code      110111
Optical Monitor No
Temperature    N/A
Voltage        N/A
Current        N/A
TX Power       N/A
RX Power       N/A
(Output truncated)
```



To display the Quad SFP media information for an LC12X40G line card in slot 3:

```
switch# show media linecard 3

Interface          fortygigabitethernet 1/3/2
Identifier         13   QSFP
Connector         12
Transceiver       0000000000000004 40_GB/s  Short_dist
Name              sw
Encoding          5   IEEE 802.3ab
Baud Rate         103 (units 100 megabaud)
Length 9u         0   (units km)
Length 9u         50 (units 100 meters)
Length 50u        0   (units 10 meters)
Length 62.5u     0   (units 10 meters)
Length Cu         0   (units 1 meter)
Vendor Name       5ROCADE
Vendor OUI        00:05:1e
Vendor PN         57-1000128-01
Vendor Rev        A
Wavelength        17000 (units nm)
Options           0000
BR Max            15
BR Min            222
Serial No         LTA111421000923
Date Code         111022
Optical Monitor   yes
Temperature       31 Centigrade
Voltage           3313.2 (mVolts)
Current           7.204 (mAmps)
TX Power          N/A
RX Power          0.0 (uWatts)
```

**Related Commands**    [linecard, show slots](#)

## show mm

Displays information about the Management Modules present in the chassis.

- Syntax** `show mm`
- Modes** Privileged EXEC mode
- Usage Guidelines** Diagnostic tests (POST1, POST2) are not running on the management modules.
- Command Output** The `show mm` command displays the following information:

Output field	Description
Slot	Displays the slot number. Slots for management modules are M1 and M2.
Type	Displays the line card type. The management module type is MM.
Description	Module description
ID	Displays the module ID. The ID for the management module is 112.
Status	Displays the status of the module as one of the following: <ul style="list-style-type: none"> <li>VACANT - The slot is empty.</li> <li>POWERED-OFF - The module is present in the slot but is powered off.</li> <li>POWERING UP - The module is present and powering on.</li> <li>LOADING - The module is present, powered on, and loading the initial configuration.</li> <li>INITIALIZING - The module is present, powered on, and initializing hardware components.</li> <li>ENABLED - The module is on and fully enabled.</li> <li>DISABLED - The module is powered on but disabled.</li> <li>FAULTY - The module is faulty because an error was detected.</li> <li>UNKNOWN - The module is inserted but its state cannot be determined.</li> </ul>

**Examples** To display the management modules present in a Brocade VDX 8770-4 chassis:

```
switch# show mm
```

Slot	Type	Description	ID	Status
M1	MM	Management Module	112	ENABLED
M2				VACANT

**Related Commands** [show linecard](#), [show sfm](#), [show slots](#)

# show monitor

Displays the monitoring information for all Port Mirroring sessions or for a single session.

**Syntax** `show monitor [ session session_number ]`

**Parameters** `session session_number`  
 Specifies a session identification number. Valid values range from 0 through 511.

**Modes** Privileged EXEC mode

**Examples** To display monitoring information for all Port Mirroring sessions:

```
switch# show monitor

Session           :1
Type              :Remote source session
Description       :Test monitor session
State             :Enabled
Source interface  :Te 1/0/10 (Up)
Destination interface :Vlan x
Direction        :Rx
```

**Related Commands** [monitor session](#)

## show name-server brief

Displays brief entries of local name server (NS) information about devices connected to a switch.

- Syntax** `show name-server brief [ rbridge-id rbridge-id ]`
- Command Default** If no RBridge ID is specified, brief entries for all devices in the fabric are displayed.
- Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.
- Modes** Privileged EXEC mode
- Usage Guidelines** Brief output lists only the Fibre Channel address (PID) of each device.

---

### NOTE

If no information is available for the switch, the command displays the message: "0 entries."

---

### Examples

```
switch# show name-server brief
```

Example output, with no hidden entries, follows; note that there are two spaces preceding each PID:

```
481000 481040 471000 471040
4 entries
```

Hidden entries are preceded by a single space, followed by an asterisk [\*]. Output from RBridge 0x47 perspective (PID 471080 hidden, PID 481000 removed) follows:

```
471040 *471080 481040
2 entries
* 1 hidden entries due to duplicate WWN
```

- Related Commands** [show name-server detail](#), [show name-server nodefind](#)

## show name-server detail

Displays local name server (NS) information about devices connected to a switch.

**Syntax** `show name-server detail [ rbridge-id rbridge-id ]`

**Command Default** If no RBridge ID is specified, detailed entries for all devices in the fabric are displayed.

**Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Command Output** The `show name-server detail` command displays the following information:

Output field	Description
PID	Fibre Channel address of the device in 6-digit hexadecimal format.
Port Name	Worldwide port name (WWPN) of the device.
Node Name	Worldwide node name (WWNN) of the device.
SCR	Indicates the State Change Registration of the device, which affects RSCN behavior. The value can be one of the following: <ul style="list-style-type: none"> <li>0: No registration</li> <li>1: Fabric detected RSCN</li> <li>2: Port detected RSCN</li> <li>3: Both Fabric and Port detected RSCN</li> </ul>
<p><b>NOTE</b> This information is only available for devices that are connected to the local RBridge on which the command is executed.</p>	
FC4s	Fibre Channel FC4 type of the device represented as an ASCII string.
PortSymb	User defined name for this port (ASCII string).
Fabric Port Name	Fabric port name (worldwide name format). This is the F_Port worldwide name to which the N_Port connects.
Permanent Port Name	Physical Nx_Port worldwide name.
Device Type	Type and role of the device, where the device type is either "Physical", "Virtual", "NPIV", or "iSCSI". The role is either "Initiator", "Target", or "Initiator + Target". If the device role is not registered, the display indicates "unknown". If the device registers a type that is not one of the aforementioned values, then the type is listed as "undefined".
Interface	Interface information for the port. For FCoE devices this information is shown as: Fcoe vlan/rbridge-id/FCoE port.
Physical Interface	Physical interface information for the port. For FCoE devices this information is shown as: Te rbridge-id/slot/port Where Te = Ten gigabit Ethernet.

Output field	Description
Share Area	The state of the Brocade shared area addressing method. If "Yes" then the port uses shared area addressing.
Redirect	Indicates whether or not the device is involved in Brocade Frame Redirection. If "Yes" then the device is involved in Frame Redirection zoning.

If no information is available for the switch, the command displays the message: "total number of 0 entries."

For each detail entry displayed, if the device has been flagged as having a duplicate Port WWN, the following text appears after the entry:

```
*** Duplicate Port WWN entry - PID: <PID>
*** Please see RAS log entry NS-1012 pertaining to this device
```

**Examples** To view name server entries for all devices connected to a switch:

```
switch# show name-server detail

PID: 012100
Port Name: 10:00:00:05:1E:ED:95:38
Node Name: 20:00:00:05:1E:ED:95:38
SCR: 3
FC4s: FCP
PortSymb: [27] "Brocade-1020|2.3.0.0|localhost.localdomain|Red Hat
Enterprise Linux Server release 5.5"
NodeSymb: NULL
Fabric Port Name: 20:21:00:05:1E:CD:79:7A
Permanent Port Name: 10:00:00:05:1E:ED:95:38
Device type: Physical Initiator
Interface: Fcoe 1/1/9
Physical Interface: Te 1/0/9
Share Area: No
Redirect: No
```

**Related Commands** [show name-server brief](#), [show name-server nodefind](#)

# show name-server nodefind

Displays the local name server (NS) information for a specific device.

**Syntax** `show name-server nodefind { PID pid | WWN wwn }`

**Parameters** **PID *pid***

Specifies the Fibre Channel address of the device to search for.

**WWN *wwn***

Specifies the World Wide Name (WWN) of the device to search for.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display local name server (NS) information about a specific detailed entry.

The lookup is performed using either the Fibre Channel address (Port ID, or PID), or the WWN of the device. If no information is available for the device, the command displays one of the following messages:

- For PID lookup: Device with PID of *pid* does not exist
- For WWN lookup: Device with WWN of *wwn* does not exist

Refer to **show name-server detail** for descriptions of the displayed information.

**Examples** To view name server information for a device specified by PID:

```
switch# show name-server nodefind pid 0x012100

PID: 012100
Port Name: 10:00:00:05:1E:ED:95:38
Node Name: 20:00:00:05:1E:ED:95:38
SCR: 3
FC4s: FCP
PortSymb: [27] "Brocade-1020|2.3.0.0|localhost.localdomain|Red Hat
Enterprise Linux Server release 5.5"
NodeSymb: NULL
Fabric Port Name: 20:21:00:05:1E:CD:79:7A
Permanent Port Name: 10:00:00:05:1E:ED:95:38
Device type: Physical Initiator
Interface: Fcoe 1/1/9
Physical Interface: Te 1/0/9
Share Area: No
Redirect: No
```

**Related Commands** [show name-server brief](#), [show name-server detail](#)

## show name-server zonemember

Displays the local name server (NS) zoning information.

<b>Syntax</b>	<b>show name-server zonemember { PID <i>pid</i>   WWN <i>wwn</i> }</b>
<b>Parameters</b>	<p><b>PID <i>pid</i></b> Specifies the Fibre Channel address of the device.</p> <p><b>WWN <i>wwn</i></b> Specifies the World Wide Name (WWN) of the device.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Use this command to display detailed local name server (NS) information about all devices zoned with the specified device. The lookup is performed using either the Fibre Channel address (Port ID, or PID), or the WWN of the device.

If no information is available for the device, the command displays one of the following messages:

- For PID lookup: Device with PID of *pid* does not exist
- For WWN lookup: Device with WWN of *wwn* does not exist

If the specified device has been flagged as having a duplicate Port WWN, the following text is displayed:

```
Device with duplicate WWN removed from Name Server database: <device detail entry
displayed here>
Please review RAS log for NS-1012 entries in order to obtain details about the
conflicting device pair.
```

**Examples** To view name server information for a device specified by PID:

```
switch# show name-server zonemember pid 0x010500

PID: 010500
Port Name: 10:00:00:05:1F:ED:95:38
Node Name: 20:00:00:05:1F:ED:95:38
SCR: 3
FC4s: FCP
PortSymb: [27] "Brocade-1020|2.3.0.0|localhost.localdomain|Red Hat
Enterprise Linux Server release 5.5"
NodeSymb: NULL
Fabric Port Name: 20:21:00:05:1F:ED:79:7A
Permanent Port Name: 10:00:00:05:1F:ED:95:38
Device type: Physical Initiator
Interface: Fcoe 1/1/5
Physical Interface: Te 1/0/5
Share Area: No
Redirect: No
PID: 010600
Port Name: 10:00:00:05:1F:CD:95:38
Node Name: 20:00:00:05:1F:CD:95:38
SCR: 3
FC4s: FCP
PortSymb: [27] "Brocade-1020|2.3.0.0|localhost.localdomain|Red Hat
Enterprise Linux Server release 5.5"
NodeSymb: NULL
Fabric Port Name: 20:21:00:05:1E:CD:79:7A
Permanent Port Name: 10:00:00:05:1E:CD:95:38
Device type: Physical Initiator
Interface: Fcoe 1/1/6
Physical Interface: Te 1/0/6
Share Area: No
Redirect: No
```



**Related Commands** [show name-server brief](#), [show name-server detail](#), [show name-server nodefind](#)

## show nas statistics

Displays automatic network attached storage (Auto NAS) statistics.

<b>Syntax</b>	<b>show nas statistics all   server-ip <i>ip_addr/prefix</i> [ vlan <i>VLAN_id</i>   vrf <i>VRF_name</i> ] [ rbridge-id <i>rbridge-id</i> ]</b>
<b>Parameters</b>	<b>all</b> Shows all gathered statistics.
	<b>server-ip</b> IP address to show Auto NAS statistics for.
	<b><i>ip_addr/prefix</i></b> IPv4 address/prefix of a specified <b>Auto</b> NAS port.
	<b>vlan <i>VLAN_id</i></b> Specifies which VLAN interface to display the statistics for.
	<b>vrf <i>VRF_name</i></b> Specifies which VRF interface to display the statistics for.
	<b>rbridge-id <i>rbridge-id</i></b> Specifies an RBridge ID.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	This command is supported only on Brocade VDX 8770-4, VDX 8770-8, VDX 6740, and VDX 6740T switches.
<b>Related Commands</b>	<a href="#">backup-advertisement-interval</a> , <a href="#">clear nas statistics</a> , <a href="#">nas auto-qos</a> , <a href="#">nas server-ip</a> , <a href="#">show running-config nas server-ip</a> , <a href="#">show system internal nas</a> , <a href="#">show cee maps</a>

# show netconf client-capabilities

Displays the client capabilities associated with each NETCONF session.

**Syntax** `show netconf client-capabilities`

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display client capabilities for all active NETCONF sessions. It always displays the session-ID, login name of the user of the client session, the host IP address, and the time the user logged on. The application vendor name, application product name and version number, and the identity of the client are also returned if these values are advertised by the client as capabilities in the <hello> message to the server at the start of the session.

## Examples

```
switch# show netconf client-capabilities

Session Id   : 10
User name    : root
Vendor       : Brocade
Product      : Brocade Network Advisor
Version      : 9.1.0 Build 123
Client user  : admin-user
Host IP      : 10.24.65.8
Login time   : 2011-08-18T08:54:24Z
Session Id   : 11
User name    : root
Vendor       : Not Available
Product      : Not Available
Version      : Not Available
Client user  : Not Available
Host IP      : 10.24.65.8
```

**Related Commands** [show netconf-state capabilities](#), [show netconf-state statistics](#)

## show netconf-state capabilities

Displays NETCONF server capabilities.

**Syntax** `show netconf-state capabilities`

**Modes** Privileged EXEC mode

**Examples**

```
switch# show netconf-state capabilities

netconf-state capabilities capability urn:ietf:params:netconf:base:1.0
netconf-state capabilities capability urn:ietf:params:netconf:capability:writable-
running:1.0
netconf-state capabilities capability urn:ietf:params:netconf:capability:startup:1.0
netconf-state capabilities capability urn:ietf:params:netconf:capability:xpath:1.0
netconf-state capabilities capability urn:ietf:params:netconf:capability:validate:1.0
netconf-state capabilities capability http://tail-f.com/ns/netconf/actions/1.0
netconf-state capabilities capability http://tail-f.com/ns/aaa/1.1?
revision=2010-06-17&module=tailf-aaa
netconf-state capabilities capability urn:brocade.com:mgmt:brocade-aaa?
revision=2010-10-21&module=brocade-aaa
(Output truncated)
```

**Related Commands** [show netconf client-capabilities](#), [show netconf-state datastores](#), [show netconf-state schemas](#), [show netconf-state sessions](#), [show netconf-state statistics](#)

## show netconf-state datastores

Displays the NETCONF datastores that are present on the NETCONF server along with related locking information.

**Syntax** `show netconf-state datastores`

**Modes** Privileged EXEC mode

**Examples**

```
switch# show netconf-state datastores
```

NAME	LOCKED		LOCK ID	LOCKED		SELECT	LOCKED NODE
	BY SESSION	TIME		BY SESSION	TIME		
running	-	-					
startup	-	-					

**Related Commands** [show netconf-state capabilities](#), [show netconf-state schemas](#), [show netconf-state sessions](#), [show netconf-state statistics](#)

## show netconf-state schemas

Displays the data models supported by the NETCONF server.

**Syntax** `show netconf-state schemas`

**Modes** Privileged EXEC mode

**Related Commands** [show netconf-state capabilities](#), [show netconf-state datastores](#), [show netconf-state sessions](#), [show netconf-state statistics](#)

# show netconf-state sessions

Displays information about currently active NETCONF sessions.

**Syntax** `show netconf-state sessions`

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the following information about each active NETCONF session:

- Transport used by the session
- Login name of the user
- Client IP address
- The time the user logged in

This command also provides a summary of RPC error counts and notifications.

## Examples

```
switch# show netconf-state sessions

etconf-state sessions session 6
transport cli-console
username admin
source-host 127.0.0.1
login-time 2011-09-05T11:29:31Z
netconf-state sessions session 9
transport netconf-ssh
username root
source-host 172.21.132.67
login-time 2011-09-05T11:50:33Z
in-rpcs 0
in-bad-rpcs 0
out-rpc-errors 0
out-notifications 0
```

**Related Commands** [show netconf-state capabilities](#), [show netconf-state datastores](#), [show netconf-state schemas](#), [show netconf-state statistics](#)

## show netconf-state statistics

Displays NETCONF server statistics.

<b>Syntax</b>	<b>show netconf-state statistics</b>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Use this command to display statistics related to the NETCONF server, including counts of the following entities:</p> <ul style="list-style-type: none"><li>• Start time of the NETCONF server</li><li>• Erroneous &lt;hello&gt; elements received</li><li>• Client sessions begun</li><li>• Dropped sessions</li><li>• Remote procedure calls (RPCs) received</li><li>• Erroneous RPCs received</li><li>• RPC errors returned to clients</li><li>• Notifications sent</li></ul>
<b>Examples</b>	<pre>switch# show netconf-state statistics  netconf-state statistics netconf-start-time 2012-04-27T09:12:09Z netconf-state statistics in-bad-hellos 0 netconf-state statistics in-sessions 3 netconf-state statistics dropped-sessions 0 netconf-state statistics in-rpcs 4 netconf-state statistics in-bad-rpcs 0 netconf-state statistics out-rpc-errors 0 netconf-state statistics out-notifications 0</pre>
<b>Related Commands</b>	<a href="#">show netconf-state capabilities</a> , <a href="#">show netconf-state datastores</a> , <a href="#">show netconf-state schemas</a> , <a href="#">show netconf-state sessions</a>



## show notification stream

Displays notifications about the event stream.

**Syntax** `show notification stream`

**Modes** Privileged EXEC mode

## show nsx controller

Displays connection status and statistics for the NSX controller.

<b>Syntax</b>	<b>show nsx-controller</b> [ <b>brief</b>   <b>client-cert</b>   <b>name</b> <i>name</i> ]
<b>Parameters</b>	<p><b>brief</b> Shows a brief listing of NSX controller connections.</p> <p><b>client-cert</b> Displays the public certificate used for the NSX controller connection.</p> <p><b>name</b> <i>name</i> Displays the name of the NSX controller profile that has been configured.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	This command is available only for a switch that is in logical chassis cluster mode.
<b>Command Output</b>	The <b>show nsx controller</b> command displays the following information:

State	Meaning
Connected	Connection is up and operational.
Not activated	User has shut down the connection.
Connection in progress	Switch is attempting to connect to the NSX controller.
Connection lost	Disconnected by peer, or network reachability has been lost. The switch will automatically attempt to connect after the configured amount of reconnect-interval seconds.
Connection dead	Switch could not connect to the NSX controller after the maximum number of reconnect attempts. The user can restart the connection via the "nsx-controller reconnect" command (Privileged EXEC mode) or via the "no activate" and "activate" commands in NSX Controller configuration mode.

**Examples** To show the status of the NSX controller:

```
sw0# show nsx-controller
NSX controller cluster "yy"
Seed IP address 192.168.0.13, port 6632, method SSL
Reconnect interval 10 secs, Max retries 100
Admin state up, Number of connections 1
Number of tunnels 2, Number of MACs 4
Connection details:
  ID fb580822-b185-4068-8c9b-f15a800b4eea, Connected
  IP address 192.168.0.13, port 6632, method SSL
  Reconnect interval 10000 millis, Number of retries 0 (max 100)
  Last connect time: Wed Jan 29 16:33:48 2014
  Last disconnect time: Wed Jan 29 16:33:48 2014
```

To show a brief listing of NSX controller connections:

```
sw0# show nsx-controller brief
Controller name      IP address      Port Type Connection state
=====
yy                  192.168.0.13   6632 SSL   Connected
```

To display the public certificate used for the NSX controller connection:

```
sw0# show nsx-controller client-cert
-----BEGIN CERTIFICATE-----
MIIC2jCCAcICAQEwdQYJKoZIhvcNAQEFBQAwMzELMAkGA1UEBhMCQ0ExEDA0BgNV
BAoTB0Jyb2NhZGUxEjAQBGNVBAMTCWxvY2FsaG9zdAeFw0xNDAxMjkkNjMyMDZa
Fw0xNTAxMjkkNjMyMDZaMDMxCzAJBgNVBAYTAkNBMR4wDgYDVQQKEwdCcm9jYWR1
MRIwEAYDVQQDEwlsb2NhbGhvc3QwggEiMA0GCSqGSIb3DQEBAQUAA4IBDwAwggEK
AoIBAQCtVSTo/ZYpA591cuSGoNRiT7mPHUzn5SUYTTM6J4Z1FErYtD5iLmjZbiU4
hUd45tnSYpGsx4oARk1AobAdj1KS/Y4WuVXgQWsqQf4mLEnO5ONsaZHgt+I/TV
SL4DWqfZ/SMOYpDPW326iN6I9JIOMctcDPNm49pmroAZkePxC1zuAh5LAKYIGsga
1/5gGWX2GkT0Jv5inljZ43rsNpVUzylb+wTrhUbWlAFx6y6wZtAdNWz8mpoguV8E
WB7W4wo1tqyAu0X8OkGOcwnyRmrG/eu4PmTkBxpOQnsHfkeTlLnbu3Nt9l6v8gKn
/0mi+ts22+2jdh9OzWMuSVovxt5pAgMBAAEwdQYJKoZIhvcNAQEFBQADggEBABj2
rjDhCiByiwl65SODh1Fy5+z8Pi/m4aCA1NH1yI9EteRC7nbYs94wu6DuJ5LaET3l
JWtKjY0aZ2Um0Sg9l13aG9+kkaVtn3oMgAre7/pRuxxssId7PuLibYqfz1zuwtwa
wVbtsrxUwZYW55mFOI7+ACMQKq3WUUb8S14vrNq+gB49kPJAQSYaygHZ+FdPYd01
j7B2L495jaXBtkttz/hai5BGqKwnfx1SgH0pI+RLrEvJrUHbwIMUNAcBODRZqxnX
0WmnxW5IInvyRZAx6AH3EdCWjkMXA3/D8VQ/eDoYNVa65um43EsHRiPSjg/AnrO
dQDO4meBm7uFdqS4Gf0=
-----END CERTIFICATE-----
```

## show ntp status

Displays the current active NTP server IP address or LOCL (for local switch time when no NTP servers were configured or no reachable NTP servers are available).

<b>Syntax</b>	<b>show ntp status</b> [ <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ]
<b>Parameters</b>	<p><b>rbridge-id</b></p> <p style="padding-left: 40px;"><i>rbridge-id</i> Specifies an RBridge or all RBridges.</p> <p style="padding-left: 40px;"><b>all</b> Specifies an RBridge ID.</p> <p style="padding-left: 40px;"><b>all</b> Specifies all RBridges.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Use this command to display the active NTP server. If an NTP server is not configured, the command output displays the server as "LOCL". Otherwise, the command displays the NTP server IP address.</p> <p>If the RBridge ID is not provided, status results default to the local switch (LOCL). If <b>rbridge-id all</b> is specified, the command displays the status for all switches in the cluster.</p>
<b>Examples</b>	<p>To show the local switch NTP status when an NTP server is not configured:</p> <pre>switch# show ntp status rbridge-id 1: active ntp server is LOCL</pre> <p>To show the configured NTP server:</p> <pre>switch# show ntp status active ntp server is 10.31.2.81</pre>
<b>Related Commands</b>	<a href="#">ntp server</a>

## show overlapping-vlan-resource usage

Shows the utilization of the hardware table entries that support classified or transport VLAN classifications that use overlapping C-TAGs in a Virtual Fabrics context.

**Syntax** `show overlapping-vlan-resource usage`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is platform-specific. For platforms that do not have such a table for classified or TLS VLANs, the percentage is zero.

**Examples**

```
switch# show overlapping-vlan-resource usage
Number of table entries used:6.11%(max 4028, used 246)
```

## show overlay-gateway

Displays status and statistics for the VXLAN overlay-gateway instance.

<b>Syntax</b>	<b>show overlay-gateway [ name <i>name</i> [ vlan statistics ] ] [ rbridge-id <i>rbridge-id</i> ] [ statistics ]</b>
<b>Parameters</b>	<p><b>name</b> Name of the configured VXLAN gateway. Network OS supports only one gateway instance.</p> <p><b>vlan statistics</b> Displays statistics for each VLAN for the VXLAN gateway. Statistics include transmitted and received packet counts and byte counts exchanged for each exported VLAN. Because each exported VLAN maps to a VXLAN, these statistics apply on a per-VXLAN-counters basis. Per-VLAN counters are not enabled by default. You need to first run the <b>enable statistics direction</b> command for the gateway to enable statistics for specified VLAN IDs.</p> <p><b>rbridge-id <i>rbridge-id</i></b> Specifies an RBridge ID.</p> <p><b>statistics</b> Displays statistics for the VXLAN gateway. Statistics include transmitted and received packet counts and byte counts. These counters are derived by aggregating tunnel counters for all the tunnels of the gateway.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Output includes the gateway name, the system-assigned gateway ID, source IP address, VRF, administration state, number of tunnels associated, and the Rbridge IDs on which the gateway is configured.</p> <p>This command is available only for a switch that is in logical chassis cluster mode.</p> <p>If you specify the gateway name, the gateway must already be configured.</p>
<b>Examples</b>	<p>To show the status for a gateway instance that is configured for an NSX Controller:</p> <pre>switch# show overlay-gateway Overlay Gateway "gateway1", ID 1, rbridge-ids 22-23 Type nsx, Admin state up, Tunnel mode VXLAN IP address 10.10.10.1 ( ve1000, Vrid 100 ), Vrf default-vrf Number of tunnels 2 Packet count: RX 0          TX 0 Byte count  : RX (NA)      TX 0</pre> <p>To show the status for a gateway instance that is configured for Layer 2 extension with a loopback interface:</p> <pre>switch# show overlay-gateway Overlay Gateway "gateway1", ID 1, rbridge-ids 22-23 Type layer2-extension, Admin state up IP address 10.10.10.1 (Loopback 10), Vrf default-vrf Number of tunnels 2 Packet count: RX 0          TX 0 Byte count  : RX (NA)      TX 0</pre> <p>To show statistics for the gateway instance:</p> <pre>switch# show overlay-gateway statistics Gateway Name      RX packets      TX packets      RX bytes      TX bytes ===== GW1                200000          10000           22227772      1110111</pre>

To display statistics for VLANs attached to the VXLAN gateway:

```
switch# show overlay-gateway name GW1 vlan statistics
          Packets          Bytes
VLAN     VNI      Tx      Rx      Tx      Rx
-----
10       1010   10000  200000  1110111  22227772
11       1011    2200   -        221334   -
21       1021    -        1         -        100
```

```
sw0# show overlay-gateway name test vlan statistics
VLAN ID  RX packets  TX packets
-----
30       0           0
40       3696       3696
```

## show policymap

Displays configured policy-maps and class-map Policer parameters applied to switch interfaces.

<b>Syntax</b>	<b>show policymap</b> [ <b>interface</b> <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i> <b>input</b>   <b>output</b> ] [ <b>details</b> <i>policyname</i> ]
<b>Parameters</b>	<p><b>interface</b> <b>tengigabitethernet</b> <i>rbridge-id/slot/port</i> Interface where policy-map is bound.</p> <p>&lt;N&gt;<b>gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><i>rbridge-id</i> Specifies an RBridge ID.</p> <p><i>slot</i> Specifies a valid slot number.</p> <p><i>port</i> Specifies a valid port number.</p> <p><b>input</b>   <b>output</b> Direction (inbound or outbound) where the policy-map is applied.</p> <p><b>details</b> <i>policyname</i> Displays the detail configuration of the policy-map along with binding information.</p>
<b>Modes</b>	<p>Global configuration mode</p> <p>Interface subtype configuration mode</p>
<b>Usage Guidelines</b>	<p>Enter <b>show policymap</b> for a specific interface to display the policy-map binding settings (policy-map name and traffic direction), police-priority-map applied, and class-map Policer parameters applied for that interface.</p> <p>Enter <b>show policymap</b> without identifying an interface and direction of traffic to display policy-map binding for all interfaces on the switch.</p>

---

### NOTE

This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

---

The following are definitions of terms used in output from the **show policymap** command:

- **Interface**: The interface for which rate limiting information is being displayed.
- **Direction**: The traffic direction for which rate limiting is applied.
- **police-priority-map**: Remarkd priority-map used for Policer application (802.1 p priority remarked map).
- **Conform**: The traffic in bytes that has been forwarded from this interface that is within the CIR bandwidth limits.
- **Exceeded**: The traffic that has been exceeded the bandwidth available in the CIR limits and has not exceed the EIR limits for this rate-limit policy.
- **Violated**: The traffic that has exceeded the bandwidth available in the CIR and EIR limits.



- **set-dscp:** The DSCP value which is applied to the traffic for the given color (conform, exceed, violate).
- **set-tc:** The remapped traffic class queue for the traffic for the given color (conform, exceed, violate).
- **Total:** The total traffic in bytes carried on this interface for the defined rate-limit policy.

**Examples** To display policy-map binding and class-map parameters applied to a specific interface:

```
switch# show policymap interface tengigabitethernet 4/1 input
Interface : Ten Gigabit Ethernet 4/1
Policymap: policymapA-1
Direction: Input
Input Excluded lossless priorities: None

Class-map: default
  Police:
    cir 5 bps cbs 5678 bytes eir 512000 bps ebs 4096 bytes
    Police-priority-map: po-pr-map1
    Conformed: 30720 bytes set-dscp 0 set-tc 0
    Exceeded: 23424 bytes set-dscp 0 set-tc 0
    Violated: 0 bytes
    Total: 54144 bytes
```

To display policy-map binding information for all switch interfaces:

```
switch# show policymap
Interface : Ten Gigabit Ethernet 4/2
Inbound policy map is policymapA-1
Outbound policy map is not set
Interface : Ten Gigabit Ethernet 4/3
Inbound policy map is not set
Outbound policy map is not set
Interface : Ten Gigabit Ethernet 4/4
Inbound policy map is not set
Outbound policy map is not set
```

**Related  
Commands**

[class](#), [policy-map](#), [qos cos](#), [show running-config policy-map](#), [show running-config class-map](#)

show port port-channel

## show port port-channel

Displays the detailed LACP attributes that are configured and negotiated with its partner.

**Syntax** `show port port-channel port_id`

**Parameters** *port\_id*  
Port to display. The number of available channels range from 1 through 6144.

**Modes** Privileged EXEC mode

# show port-channel

Displays the Link Aggregation Group (LAG) information for a port-channel.

**Syntax** **show port-channel** [ *channel-group-number* | **detail** | **load-balance** | **summary** ]

**Parameters** ***channel-group-number***  
Specifies a LAG port channel-group number to display. The number of available channels range from 1 through 6144.

**detail**  
Displays detailed LAG information for a port-channel.

**load-balance**  
Displays the load-balance or frame-distribution scheme among ports in the port-channel.

**summary**  
Displays the summary information per channel-group.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the LAGs present on the system with details about the LACP counters on their member links. LAG interfaces are called port-channels.

If you do not specify a port-channel, all port-channels are displayed.

When using the **show port-channel *channel-group-number*** command, an asterisk in the command output designates that the designated port channel is the primary link through which the BUM (Broadcast, Unknown unicast and Multicast) traffic flows.

**Examples** To display detailed port-channel information:

```
switch# show port-channel detail

LACP Aggregator: Po 10 (vLAG) (Defaulted)
Aggregator type: Standard
Ignore-split is enabled
Member rbridges:
rbridge-id: 1 (2)
rbridge-id: 2 (1)
Actor System ID - 0x8000,01-e0-52-00-00-01
Admin Key: 0010 - Oper Key 0010
Receive link count: 1 - Transmit link count: 1
Individual: 0 - Ready: 1
Partner System ID - 0x8000,00-05-1e-cd-0f-ea
Partner Oper Key 0010
Member ports on rbridge-id 2:
Link: Te 2/0/7 (0x218038006) sync: 1
```

## show port-channel-redundancy-group

Displays the port-channel redundancy-group information.

**Syntax** `show port-channel-redundancy-group group-id`

**Parameters** *group-id*  
Designates which port-channel to display.

**Modes** Privileged EXEC mode

**Examples** Typical command execution example:

```
switch#show port-channel-redundancy-group 1
Group ID                : 1
Member Ports            : Port-channel 5, Port-channel 7
Configured Active Port-channel: Port-channel 5
Current Active Port-channel : Port-channel 5
Backup Port-channel     : Port-channel 7
```

Typical command output, when the backup vLAG is operationally down or not yet created.

```
switch#show port-channel-redundancy-group 1
Group ID : 1
Member Ports            : Port-channel 5, Port-channel 7
Configured Active Port-channel: Port-channel 5
Current Active Port-channel : Port-channel 5
Backup Port-channel     : None
```

Typical command output, when both vLAG members are operationally down.

```
switch#show port-channel-redundancy-group 1
Group ID                : 1
Member Ports            : Port-channel 5, Port-channel 7
Configured Active Port-channel: Port-channel 5
Current Active Port-channel : None
Backup Port-channel     : None
```

Typical command output, when the active vLAG is not configured.

```
switch#show port-channel-redundancy-group 1
Group ID                : 1
Member Ports            : Port-channel 5, Port-channel 7
Configured Active Port-channel: None
Current Active Port-channel : Port-channel 5
Backup Port-channel     : Port-channel 7
```

# show port-profile

Displays the AMPP port-profile configuration information.

**Syntax** **show port-profile**

**Modes** Privileged EXEC mode

**Examples** Example of this command:

```
switch# show port-profile

port-profile default
ppid 0
  vlan-profile
  switchport
  switchport mode trunk
  switchport trunk allowed vlan all
port-profile auto-dvPortGroup-2
ppid 1
  vlan-profile
  switchport
  switchport mode trunk
  switchport trunk allowed vlan add 45
port-profile auto-dvPortGroup-1
ppid 2
  vlan-profile
  switchport
  switchport mode trunk
  switchport trunk allowed vlan add 3-10
```

**Related Commands** [show running-config](#), [show port-profile interface](#)

## show port-profile domain

Displays the status of Automatic Migration of Port Profiles (AMPP) profiles and port-profile domains.

<b>Syntax</b>	<b>show port-profile</b> [ <i>port-profile-name</i> ]   <b>domain</b> <i>port-profile-domain-name</i> ] [ <b>status</b>   <b>activated</b>   <b>applied</b> ]   <b>associated</b> ]
<b>Parameters</b>	<p><b><i>port-profile-name</i></b> The name of a port-profile.</p> <p><b>domain</b> Enables specification of a port-profile domain name.</p> <p><b><i>port-profile-domain-name</i></b> Name of a port-profile domain.</p> <p><b>status</b> Enables selection of status type.</p> <p><b>activated</b> Specifies all port-profiles with the activated status.</p> <p><b>applied</b> Specifies all port-profiles with the applied status.</p> <p><b>associated</b> Specifies all port-profiles with the associated status.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Enter <b>show port-profile status</b> to display the status of all AMPP profiles.</p> <p>If <b>no</b> option is specified, then all port-profiles that match the criteria are shown.</p>
<b>Examples</b>	<p>The following example shows the status of all port-profiles:</p> <pre>switch# show port-profile status Port-Profile  PPID  Activated  Associated MAC  Interface auto-dvPortGroup-2  1    Yes      0050.5681.2ed5  none  0050.5699.5524      te0/2  0050.5699.39e0      te0/1 auto-dvPortGroup-1  2    Yes      0050.5681.083c  none</pre> <p>The following example shows the status of a port-profile domain:</p> <pre>switch# show port-profile domain vDC1_Domain status Port-Profile  PPID  Activated  Associated MAC  Interface Tenant1_PP    1    No        None           None Tenant2_PP    2    No        None           None</pre>
<b>Related Commands</b>	<a href="#">show running-config</a> , <a href="#">show running-config port-profile-domain</a> , <a href="#">show port-profile</a> , <a href="#">show port-profile interface</a>

## show port-profile interface

Displays AMPP port-profile information for interfaces.

**Syntax** **show port-profile interface** [ **all** | **port-channel** *channel-group-number* | **<N>gigabitethernet** *rbridge-id/slot/port* ]

**Parameters** **all**

Displays the port-profile information for all interfaces.

**port-channel** *channel-group-number*

Specifies a LAG port channel-group number to display. Valid values range from 1 through 6144.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace **<N>gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

*rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display AMPP port-profile information for either all interfaces, or for specific interfaces.

**Related Commands** [show running-config](#), [show port-profile](#)

## show port-profile name

Displays the port profile information for a named port-profile.

**Syntax** `show port-profile name port-profile-name { qos | security | status | vlan }`

`show port-profile name port-profile-name name port-profile-name validate`

**Parameters** *port-profile-name*

The name of the port-profile. The maximum number of characters is 64.

**qos**

QoS sub-profile

**security**

Security sub-profile

**status**

Specific port-profile status

**vlan**

VLAN sub-profile

**validate**

Validates two port-profiles against each other.

**Modes** Privileged EXEC mode



## show port-security

Displays the configuration information related to port security.

**Syntax** **show port-security**

**Modes** Privileged EXEC mode

### Examples

```
switch# show port-security
Secure MaxSecureAddr CurrentAddr StaticSec Violated Action
OUIs Sticky
Port (count) (count) (count)
Te 1/1 2 1 3 No
Restrict 2 No
Te 1/3 3 3 5 Yes
Shutdown 0 Yes
```

## show port-security addresses

Displays the configuration information related to port-security addresses.

**Syntax** `show port-security addresses`

**Modes** Privileged EXEC mode

**Examples**

```
switch# show port-security addresses
                Secure Mac Address Table
-----
Vlan           Mac Address      Type              Ports
1              0000.0000.0001   Secure-Dynamic    1/1
1              0000.0000.0002   Secure-Static     1/2
```

# show port-security interface

Displays the configuration information related to port-security interfaces.

<b>Syntax</b>	<b>show port-security interface</b> [ <b>all</b>   <b>port-channel</b> <i>channel-group-number</i>   <N> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i> ]
<b>Parameters</b>	<p><b>all</b> Displays the port-security information for all interfaces.</p> <p><b>port-channel</b> <i>channel-group-number</i> Specifies a LAG port channel-group number to display. Valid values range from 1 through 6144.</p> <p>&lt;N&gt;<b>gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;N&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	<pre>switch# show port-security interface TenGigabitEthernet 1/1 Port Security           :Enabled Port Status             :up / Down (Security Violated) Violation Mode         :Restrict Violated                :Yes/No Sticky enabled         :Yes/No Maximum MAC Addresses  :2 Total MAC Addresses    :2 Configured MAC Addresses :5 Violation time         : Fri Mar 22 05:53:03 UTC 2013 Shutdown time(in Minutes) :5 Number of OUIs configured :1</pre>

show port-security oui interface

## show port-security oui interface

Displays the configuration information related to port security for Organizationally Unique Identifier (OUI) interfaces.

**Syntax** `show port-security oui interface`

**Modes** Privileged EXEC mode

**Examples**

```
switch# show port-security oui interface TenGigabitEthernet 1/1
OUIs configured      : 3
OUIs                  : 0010.0a00.0000
                      : 0020.0b00.0000
                      : 0030.0c00.0000
```

## show port-security sticky interface

Displays the configuration information related to port security for a sticky interface.

**Syntax** `show port-security sticky interface`

**Modes** Privileged EXEC mode

**Examples**

```
switch# show port-security sticky interface TenGigabitEthernet 1/1
VlanId  Mac-address      Type      State      Ports
1        0000.0000.1111        Secure-Sticky  Active      Te 1/1
```

## show process cpu

Displays information about the active processes in the switch and their corresponding CPU utilization statistics.

<b>Syntax</b>	<b>show process cpu</b> [ <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ] [ <b>summary</b> ] [ <b>history</b> ] [ <b>top</b> ]																																								
<b>Parameters</b>	<p><b>rbridge-id</b></p> <p>Specifies an RBridge or all RBridges.</p> <p><i>rbridge-id</i></p> <p>Specifies an RBridge ID.</p> <p><b>all</b></p> <p>Specifies all RBridges.</p> <p><b>summary</b></p> <p>Displays a summary view of cpu usage.</p> <p><b>history</b></p> <p>Displays the history of CPU usage.</p> <p><b>top</b></p> <p>Displays current CPU utilization.</p>																																								
<b>Modes</b>	Privileged EXEC mode																																								
<b>Usage Guidelines</b>	<p>This command is supported only on the local switch.</p> <p>For an explanation of process states, refer to the UNIX manual page for the <b>ps</b> command.</p>																																								
<b>Examples</b>	<p>To show the information for all processes:</p> <pre>switch# show process cpu summary</pre> <p>Realtime Statistics: Total CPU Utilization: 0% (user procs:0%, system-kernel:0%, iowait:0%) Load Average: One minute: 0.00; Five minutes: 0.03; Fifteen minutes: 0.01</p> <p>To show CPU usage information by individual processes:</p> <pre>switch# show process cpu</pre> <p>Realtime Statistics: Total CPU Utilization: 0% (user procs:0%, system-kernel:0%, iowait:0%) Load Average: One minute: 0.00; Five minutes: 0.02; Fifteen minutes: 0.00 Active Processes Lifetime Statistic:</p> <table> <thead> <tr> <th>PID</th> <th>Process</th> <th>CPU%</th> <th>State</th> <th>Started</th> </tr> </thead> <tbody> <tr> <td>17169</td> <td>sh</td> <td>1.00</td> <td>S</td> <td>13:44:27 Jul 1, 2012</td> </tr> <tr> <td>2060</td> <td>emd</td> <td>0.80</td> <td>S</td> <td>21:52:27 Jun 29, 2012</td> </tr> <tr> <td>2462</td> <td>SWITCH_TMR_0</td> <td>0.60</td> <td>S</td> <td>21:53:08 Jun 29, 2012</td> </tr> <tr> <td>17170</td> <td>imishow_prOc_cp</td> <td>0.50</td> <td>S</td> <td>13:44:27 Jul 1, 2012</td> </tr> <tr> <td>2207</td> <td>ospfd</td> <td>0.20</td> <td>S</td> <td>21:52:41 Jun 29, 2012</td> </tr> <tr> <td>2211</td> <td>mstpd</td> <td>0.20</td> <td>S</td> <td>21:52:41 Jun 29, 2012</td> </tr> <tr> <td>2208</td> <td>rtmd</td> <td>0.10</td> <td>S</td> <td>21:52:41 Jun 29, 2012</td> </tr> </tbody> </table> <p>(Output truncated)</p>	PID	Process	CPU%	State	Started	17169	sh	1.00	S	13:44:27 Jul 1, 2012	2060	emd	0.80	S	21:52:27 Jun 29, 2012	2462	SWITCH_TMR_0	0.60	S	21:53:08 Jun 29, 2012	17170	imishow_prOc_cp	0.50	S	13:44:27 Jul 1, 2012	2207	ospfd	0.20	S	21:52:41 Jun 29, 2012	2211	mstpd	0.20	S	21:52:41 Jun 29, 2012	2208	rtmd	0.10	S	21:52:41 Jun 29, 2012
PID	Process	CPU%	State	Started																																					
17169	sh	1.00	S	13:44:27 Jul 1, 2012																																					
2060	emd	0.80	S	21:52:27 Jun 29, 2012																																					
2462	SWITCH_TMR_0	0.60	S	21:53:08 Jun 29, 2012																																					
17170	imishow_prOc_cp	0.50	S	13:44:27 Jul 1, 2012																																					
2207	ospfd	0.20	S	21:52:41 Jun 29, 2012																																					
2211	mstpd	0.20	S	21:52:41 Jun 29, 2012																																					
2208	rtmd	0.10	S	21:52:41 Jun 29, 2012																																					
<b>Related Commands</b>	<a href="#">show process memory</a> , <a href="#">show process info</a>																																								

# show process info

Displays system processes hierarchically.

**Syntax** `show process info [ rbridge-id { rbridge-id | all } ]`

**Command Default** This command is executed on the local switch.

**Parameters** **rbridge-id**  
Specifies an RBridge or all RBridges.

**rbridge-id**  
Specifies an RBridge ID.

**all**  
Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** Pagination is not supported with this command. Use **more** in the terminal window to display the output one page at a time.

This command is supported only on the local switch.

**Examples** To display system processes hierarchically:

```
switch# show process info
```

```
PID      CMD
2        kthreadd
3        \_ migration/0
4        \_ ksoftirqd/0
5        \_ watchdog/0
6        \_ migration/1
7        \_ ksoftirqd/1
8        \_ watchdog/1
9        \_ migration/2
10       \_ ksoftirqd/2
11       \_ watchdog/2
12       \_ migration/3
13       \_ ksoftirqd/3
14       \_ watchdog/3
15       \_ migration/4
16       \_ ksoftirqd/4
17       \_ watchdog/4
18       \_ migration/5
19       \_ ksoftirqd/5
20       \_ watchdog/5
21       \_ migration/6
22       \_ ksoftirqd/6
(Output truncated)
```

**Related Commands** [show process cpu](#), [show process memory](#)

## show process memory

Displays the memory usage information based on processes running in the system.

**Syntax** `show process memory [ rbridge-id { rbridge-id | all } ] [ summary ]`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

*rbridge-id*

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**summary**

Displays a summary view of memory usage.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.



**Examples** To show memory usage information by individual processes:

```
switch# show process memory

Rbridge-id: 54
%Memory Used: 48.9778%; TotalMemory: 3354812 KB; Total Used: 1643112 KB
Total Free: 1711700 KB; Low Free: 759700 KB; High Free: 500156 KB; Cached: 406696 KB
  PID Process      MEM%    VSIZE(KB)    RSS(KB)    PSS(KB)
  2895 postgres      4.30      203788      147224      101079
  2682 Dcmd.Linux.powe 4.30      324416      145956      119904
  3063 ospf6d         2.80      375424      94816       51118
  3042 rps           2.70      266576      93800       73916
  2890 postgres      2.60      155492      89616       46558
  3039 ospfd         2.50      367280      86068       42306
  3038 bgpd         2.40      372888      81520       37625
  3050 vrrpd        1.90      289480      65700       21929
  3040 ribmgr       1.90      203156      65004       45139
  4370 fibagt     1.60      184816      55772       36110
  3041 srm          1.60      183608      54272       34579
  3044 pimd        1.50      288724      53040       33215
  1264 confd     1.40      58856      46984       45873
  2336 raslogd     1.30      192276      44488       21016
  3055 iphelpd     1.30      232224      44360       24545
  3034 nsm         1.30      265352      43720       23292
  3054 arpd        1.20      209820      41276       21638
  3049 mstpd        1.10      200420      39768       19836
  3061 toamd      1.10      189932      38592       18752
  3064 tnlnmgrd   1.10      181312      37580       18049
  2965 snmpd      1.00      135320      34012       11760
  3046 ssmd      0.90      179288      31504       11510
  4366 l2agtd     0.90      165984      31304       11608
  3045 mldd       0.80      184660      29948       9992
  3036 l2sysd     0.80      225680      29688       9596
  3047 qosd       0.80      175688      29068       9141
  3052 igmpd      0.80      176268      28684       8803
  3043 radv      0.80      164956      27352       7562
  4368 mcagtd    0.80      156732      27048       7351
  3056 onmd      0.70      175700      26812       6707
  3048 lacpd     0.70      166880      26280       6153
[output omitted, as will vary by device]

 3491 TD_TX_0      0.00      0          0          0
 4273 DCE_BLADE_THR_0 0.00      0          0          0
 4274 CBR_BH_43008080 0.00      0          0          0
 4275 CBR_HI_43008080 0.00      0          0          0
 4276 CBR_TX_43008080 0.00      0          0          0
 4277 CBR_RX_43008080 0.00      0          0          0
 4278 CBR_AS_43008080 0.00      0          0          0
 4279 CBR_MM_43008080 0.00      0          0          0
 4280 DCE_BLADE_CH_TH 0.00      0          0          0
 4282 FCOE_AGT_MI_THR 0.00      0          0          0
```

**Related Commands** [show process cpu](#), [show process info](#)

## show prom-access

Shows the Boot PROM access status.

**Syntax** `show prom-access`

**Command Default** The boot PROM is accessible.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to determine whether the Boot PROM is accessible.

Under non-FIPS compliant operation, you can access the Boot PROM by holding down the ESC key during the 4-second period when the switch is booting up. In FIPS compliant state, PROM access is disabled to prevent users from net-installing firmware.

If PROM access is enabled, you can disable it in preparation for FIPS compliance. If PROM access is disabled, you cannot re-enable it.

Enter the **unhide fips** command with password "fibranne" to make the command available.

**Examples** To view the Boot PROM access status:

```
switch# show prom-access
PROM access Enabled
```

**Related Commands** [cipherset](#), [fips selftests](#), [fips zeroize](#), [unhide fips](#)

# show qos flowcontrol interface

Displays all of the configured flow control information for an interface.

**Syntax** `show qos flowcontrol interface [ <N>gigabitethernet rbridge-id/slot/port | all ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**all**

Reports QoS flow control statistics for all interfaces within the system.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the runtime state retrieved from the dataplane reflecting the operation of 802.3x pause or Priority Flow Control (PFC) on an interface.

The administrative state for pause generation and reception or processing is presented for the interface (802.3x mode) or for each CoS (PFC mode). TX\_Pause frame generation statistics are always presented for the interface. The RX\_Pause BitTimes is presented for the interface (802.3x mode) or for each CoS (PFC mode). When PFC is deployed under the CEE Provisioning model, then the command reports whether the Data Center Bridging eXchange protocol (DCBX) has overridden the user configuration, for example when the DCBX detects a mis-configuration between CEE peers, it disables PFC operationally.

**Examples** To display all of the configured flow control information for a 10-gigabit Ethernet interface:

```
switch# show qos flowcontrol interface tengigabitethernet 5/0/1
```

```
Interface Ten Gigabit Ethernet 5/0/1
Mode PFC
DCBX enabled for PFC negotiation
TX 0 frames
      TX   TX   RX   RX Output Paused
CoS Admin Oper Admin Oper 512 BitTimes
-----
  0 Off  Off  Off  Off          0
  1 Off  Off  Off  Off          0
  2 On   Off  On   Off          0
  3 Off  Off  Off  Off          0
  4 Off  Off  Off  Off          0
  5 Off  Off  Off  Off          0
  6 Off  Off  Off  Off          0
```

**Related Commands** [show qos interface](#), [show cee maps](#)

## show qos interface

Displays a summary of all QoS configurations applied on an interface.

**Syntax** `show qos interface [ <N>gigabitethernet rbridge-id/slot/port | port-channel number | all ]`

**Command Default** If no interface is specified, QoS information for all interfaces is displayed.

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

*rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**port-channel number**

Specifies the port-channel of the interface. Valid values range from 1 through 63.

**all**

Reports QoS configurations for all interfaces within the system.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display a summary of all QoS configuration applied on an interface, including QoS Provisioning mode, CEE map, Layer 2 priority, Traffic Class mapping, congestion control, and the scheduler policy.

**Examples** To display all of the configured QoS information for a 10-gigabit Ethernet interface:

```
switch# show qos interface tengigabitethernet 22/0/1

Interface Ten Gigabit Ethernet 22/0/1
Provisioning mode cee
CEE Map demo
Default CoS 0
Interface trust cos
CoS-to-CoS Mutation map 'default'
-----
In-CoS: 0 1 2 3 4 5 6 7
-----
Out-CoS/TrafficClass: 0/4 1/4 2/6 3/4 4/4 5/4 6/4 7/4
Tail Drop Threshold 1081344 bytes
Per-CoS Tail Drop Threshold (bytes)
-----
CoS: 0 1 2 3 4 5 6 7
-----
Threshold: 129761 129761 129761 129761 129761 129761 129761 129761
Flow control mode PFC
CoS2 TX on, RX on
Multicast Packet Expansion Rate Limit 3000000 pkt/s, max burst 4096 pkts
Multicast Packet Expansion Tail Drop Threshold (packets)
TrafficClass: 0 1 2 3 4 5 6 7
-----
Threshold: 64 64 64 64 64 64 64 64
Traffic Class Scheduler configured for 0 Strict Priority queues
TrafficClass: 0 1 2 3 4 5 6 7
-----
DWRRWeight: 0 0 0 0 60 0 40 0
Multicast Packet Expansion Traffic Class Scheduler
TrafficClass: 0 1 2 3 4 5 6 7
-----
DWRRWeight: 25 25 25 25 25 25 25 25
```

**Related Commands** [cee-map \(FCoE\)](#)

## show qos maps

Displays information on the defined QoS maps.

**Syntax** `show qos maps [ cos-mutation [ name ] | cos-traffic-class [ name ] ]`

**Command Default** Report shows all defined QoS maps.

**Parameters** **cos-mutation *name***

Specifies to report on only the named CoS-to-CoS mutation QoS map.

**cos-traffic-class *name***

Specifies to report on only the named CoS-to-Traffic Class QoS map.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display information on the QoS defined maps. For each QoS map, the configuration state is displayed with a list of all interfaces bound to the QoS map.

**Examples** To display information on the defined QoS maps:

```
switch# show qos maps

CoS-to-CoS Mutation map 'test'
  In-CoS: 0 1 2 3 4 5 6 7
-----
  Out-CoS: 0 1 2 3 5 4 6 7
  Enabled on the following interfaces:
    Te 0/5
CoS-to-Traffic Class map 'test'
  Out-CoS: 0 1 2 3 4 5 6 7
-----
  TrafficClass: 0 1 2 3 5 4 6 7
  Enabled on the following interfaces:
    Te 0/5
```

**Related  
Commands**

[qos map cos-traffic-class, show qos interface](#)[qos map cos-traffic-class, show qos interface](#)

## show qos maps dscp-cos

Displays configured DSCP-CoS maps.

**Syntax** `show qos maps dscp-cos`

**Modes** Privileged EXEC mode

**Examples** To display information on defined QoS DSCP-CoS maps and application on interfaces.

```
sw0# show qos maps dscp-cos

Dscp-to-CoS map 'test' (dscp= d1d2)
dl : d2 0 1 2 3 4 5 6 7 8 9
-----
0 :    00 03 07 03 07 03 07 03 07 01
1 :    01 05 06 05 06 05 06 05 06 02
2 :    02 02 02 02 03 03 03 03 03 03
3 :    03 03 04 04 04 04 04 04 04 04
4 :    05 05 05 05 05 05 05 05 06 06
5 :    06 06 06 06 06 06 07 07 07 07
6 :    07 07 07 07
Enabled on the following interfaces:
  Te 16/2/2
```

This information relates to the following map configuration applied to interface 16/2/2:

```
qos map dscp-mutation test
mark 1,3,5,7 to 3
mark 11,13,15,17 to 5
mark 12,14,16,18 to 6
mark 2,4,6,8 to 7
```

**Related Commands** [qos map dscp-cos, show qos interface](#)

## show qos maps dscp-mutation

Displays configured DSCP-mutation maps.

- Syntax** `show qos maps dscp-mutation`
- Modes** Privileged EXEC mode
- Usage Guidelines** This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.
- Examples** To display information on defined QoS DSCP-mutation maps.

```
sw0# show qos maps dscp-mutation
Dscp-to-Dscp Mutation map 'test' (dscp= d1d2)
d1 : d2 0 1 2 3 4 5 6 7 8 9
-----
0 :    00 09 10 09 10 09 10 09 10 09
1 :    10 19 20 19 20 19 20 19 20 19
2 :    20 21 22 23 24 25 26 27 28 29
3 :    30 31 32 33 34 35 36 37 38 39
4 :    40 41 42 43 44 45 46 47 48 49
5 :    50 51 52 53 54 55 56 57 58 59
6 :    60 61 62 63
Enabled on the following interfaces:
    Te 16/2/2
```

This information relates to the following map configuration applied to interface 16/2/2:

```
qos map dscp-mutation test
mark 1,3,5,7 to 9
mark 11,13,15,17 to 19
mark 12,14,16,18 to 20
mark 2,4,6,8 to 10
```

**Related Commands** [qos map dscp-mutation](#)



## show qos maps dscp-traffic-class

Displays configured DSCP-Traffic-Class maps.

**Syntax** `show qos maps dscp-traffic-class`

**Modes** Privileged EXEC mode

**Examples** To display information on defined QoS DSCP-Traffic-Class maps.

```
sw0# show qos maps dscp-traffic-class

Dscp-to-Dscp Mutation map 'test' (dscp= d1d2)
Dscp-to-Traffic Class map 'pqrs'(dscp= d1d2)
dl : d2 0 1 2 3 4 5 6 7 8 9
-----
0 :    00 03 07 03 07 03 07 03 07 01
1 :    01 05 06 05 06 05 06 05 06 02
2 :    02 02 02 02 03 03 03 03 03 03
3 :    03 03 04 04 04 04 04 04 04 04
4 :    05 05 05 05 05 05 05 05 06 06
5 :    06 06 06 06 06 06 07 07 07 07
6 :    07 07 07 07
Enabled on the following interfaces:
    Te 16/2/2
```

This information relates to the following map configuration applied to interface 16/2/2:

```
qos map dscp-mutation test
mark 1,3,5,7 to 3
mark 11,13,15,17 to 5
mark 12,14,16,18 to 6
mark 2,4,6,8 to 7
```

**Related  
Commands** [show qos interface](#)

## show qos queue interface

Displays the runtime state retrieved from the interface reflecting the number of packets and bytes sent and received for each priority.

**Syntax** `show qos queue interface [ <N>gigabitethernet rbridge-id/slot/port | all ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N> gigabitethernet with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**all**

Reports QoS statistics for all Ethernet interfaces within the system.

**Modes** Privileged EXEC mode

**Examples** To display the queuing information for a 10-gigabit Ethernet interface:

```
switch# show qos queue interface tengigabitethernet 5/0/2
```

```
Interface Ten Gigabit Ethernet 5/0/2
  CoS      RX          RX          TX          TX
          Packets    Bytes    Packets    Bytes
-----
  0         680458    87098624    0           0
  1           0           0           1        32318
  2           0           0           2           0
  3           0           0           3           0
  4           0           0           4           0
  5           0           0           5           0
  6           0           0           6           0
  7           0           0           7           0
```

**Related Commands** [cee-map \(configuration\)](#), [qos map cos-mutation](#)[cee-map \(configuration\)](#), [qos map cos-mutation](#)

# show qos rcv-queue interface

Displays a summary of the runtime ingress queue state information applied to a Layer 2 interface.

**Syntax** `show qos rcv-queue interface [ <N>gigabitethernet rbridge-id/slot/port | all ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**all**

Reports QoS configurations for all 10-gigabit Ethernet interfaces within the system.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is not supported on Brocade VDX 8770-4 and VDX 8770-8 platforms.

**Examples** To display the runtime ingress queue state information retrieved from the dataplane for a 10-gigabit Ethernet interface:

```
switch# show qos rcv-queue interface tengigabitethernet 22/0/2
```

```
Interface TenGigabitEthernet 22/0/2
  In-use 404019 bytes, Max buffer 1081344 bytes
  0 packets dropped
  CoS      In-use      Max
  -----  Bytes      Bytes
  0         0         1081344
  1         0         1081344
  2      404019     1081344
  3         0         1081344
  4         0         1081344
  5         0         1081344
  6         0         1081344
  7         0         1081344
```

**Related Commands** [show qos rcv-queue multicast](#)

## show qos rcv-queue multicast

Displays the runtime state retrieved from the dataplane reflecting any multicast packet expansion packet drops resulting from a queue crossing the maximum queue depth.

**Syntax** `show qos rcv-queue multicast [ <N>gigabitethernet rbridge-id/slot/port | all ]`

**Parameters** `<N> gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**all**

Reports QoS multicast packet expansion receive queuing statistics for all ASICs within the system.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is not supported on Brocade VDX 8770-4 and VDX 8770-8 switches.

**Examples** To display the queuing information:

```
switch# show qos rcv-queue multicast tengigabitethernet 1/0/2
Dropped Counts
  Linecard/Portset          TC 0          TC 1          TC 2          TC 3
-----
          0/0                0            0            0            0
```

**Related Commands** [show qos rcv-queue interface](#)

# show qos red profiles

Displays configured Random Early Discard (RED) profiles.

**Syntax** `show qos red profiles`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

**Examples** Using `show qos red profiles` to display information on defined QoS RED profiles:

---

## NOTE

Notice that the first example shows output for the RED profile configured in the example for the `qos red profile` command.

---

```
switch# show qos red profiles

Red Profile 2
  Minimum Threshold: 10
  Maximum Threshold: 80
  Drop Probability: 80
Activated on the following interfaces:
Te 1/2/2 Traffic-class: 7
Red Profile 100
  Minimum Threshold: 30
  Maximum Threshold: 80
  Drop Probability: 56
Activated on the following interfaces:
Te 1/1 Traffic-class: 2
Red Profile 200
  Minimum Threshold: 40
  Maximum Threshold: 60
  Drop Probability: 40
Activated on the following interfaces:
Te 1/1 Traffic-class: 4
```

Using `show qos interface interface-name` to examine the applied RED profiles for a specific interface:

```
switch# show qos interface te 1/2/2

Interface Ten Gigabit Ethernet 1/2/2
  Provisioning mode non-cee
  Default CoS 0
  Interface COS trust untrusted
  CoS-to-CoS Mutation map 'default'
  CoS-to-Traffic Class map 'default'
      In-CoS:  0  1  2  3  4  5  6  7
-----
  Out-CoS/TrafficClass: 0/1 0/1 0/1 0/1 0/1 0/1 0/1 0/7
  Interface DSCP trust untrusted
  DSCP-to-DSCP Mutation map 'default' (dscp= d1d2)
d1 : d2 0  1  2  3  4  5  6  7  8  9
-----
  0 :   00 01 02 03 04 05 06 07 08 09
  1 :   10 11 12 13 14 15 16 17 18 19
  2 :   20 21 22 23 24 25 26 27 28 29
  3 :   30 31 32 33 34 35 36 37 38 39
  4 :   40 41 42 43 44 45 46 47 48 49
  5 :   50 51 52 53 54 55 56 57 58 59
  6 :   60 61 62 63
  RED Enabled on the following Priorities:
      CoS: 7, Profile: 2
more
```

**Related Commands** [qos red profile](#)

## show qos red statistics interface

Displays Random Early Discard (RED) statistics for a specific interface.

**Syntax** `show qos red statistics interface interface-name`

**Parameters** *interface-name*

Name of interface where an RED profile is applied.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display statistics for RED on a specific interface where a RED profile is applied. Statistics include packets and bytes dropped for the CoS priority mapped to the profile for the interface.

**Examples** To display RED statistics on interfaces, use the **show qos red statistics interface *interface-name*** command. Notice that the colors in the following example (red, yellow, and green) relate to color-based priority mapping set through the Port-Based Policer feature. Refer to the *Network OS Administrator's Guide* for more information.

```
switch# show qos red statistics interface te 2/1

Statistics for interface: Te 2/1
Traffic-class: 2, ProfileId: 20
Packets Dropped: Red: 0, Yellow: 0, Green: 0, Queue Drops: 0
Bytes Dropped: Red: 0, Yellow: 0, Green: 0, Queue Drops: 0
Traffic-class: 3, ProfileId: 10
Packets Dropped: Red: 0, Yellow: 0, Green: 0, Queue Drops: 0
Bytes Dropped: Red: 0, Yellow: 0, Green: 0, Queue Drops: 0
```

**Related Commands** [qos red profile](#), [show qos red profiles](#)

# show qos tx-queue interface

Displays a summary of the runtime egress queue state information applied to a Layer 2 interface.

**Syntax** `show qos tx-queue interface [ <N>gigabitethernet rbridge-id/slot/port | all ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**all**

Reports QoS configurations for all 10-gigabit Ethernet interfaces within the system.

**Modes** Privileged EXEC mode

**Usage Guidelines** The `gigabitethernet rbridge-id/slot/port` parameter is used only on the Brocade VDX 8770-4, and Brocade VDX 8770-8 switches.

**Examples** To display the runtime egress queue state information retrieved from the dataplane for a tengigabit Ethernet interface:

```
switch# show qos tx-queue interface tengigabitethernet 1/0/7
Interface TenGigabitEthernet 1/0/7 Transmit Queues
In-use 0 bytes, Max buffer 5046272 bytes
0 packets dropped
  TC          In-use          Max
  ---          ---          ---
  0             0          630784
  1             0          630784
  2             0          630784
  3             0          630784
  4             0          630784
  5             0          630784
  6             0          630784
  7             0          630784
```

**History**

**Release version**

**Command history**

5.0.0

This command was introduced.

## show rbridge-id

Displays the RBridge ID of each node that is configured in a Virtual Cluster Switching (VCS) cluster.

<b>Syntax</b>	<b>show rbridge-id [ swbd-number <i>int</i>   chassis { virtual-ip } ]</b>
<b>Parameters</b>	<p><b>swbd-number</b> Selects a switch type.</p> <p><b><i>int</i></b> One or more integers (including a decimal) that identifies a switch type.</p> <p><b>chassis virtual-ip</b> Displays virtual IP addresses if configured</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Use this command to view the RBridge IDs of configured nodes in a VCS cluster, in addition to the switch type (SWBD) number and IPv4 and IPv6 virtual IP addresses.
<b>Examples</b>	<pre>switch# show rbridge-id RBRIDGE  SWBD ID        NUMBER  V4   V6 ----- 154      95         -   -</pre>
<b>Related Commands</b>	<a href="#">rbridge-id</a>



## show rbridge-running config

Displays the currently running configuration for an RBridge.

**Syntax** `show rbridge-running-config rbridge-id rbridge-id`

**Parameters** `rbridge-id rbridge-id`  
Specifies the RBridge ID whose configuration will be displayed.

**Modes** Privileged EXEC mode

**Examples** The following example shows partial output for this command:

```
switch# show rbridge-running-config rbridge-id 1
diag post rbridge-id 1
  enable
  !
dpod 1/0/1
  reserve
  !
dpod 1/0/2
  reserve
  !
dpod 1/0/3
  reserve
  !
dpod 1/0/4
  !
dpod 1/0/5
  !
dpod 1/0/6
  !
dpod 1/0/7
  !
[output truncated for brevity]

logging raslog console INFO
logging auditlog class SECURITY
logging auditlog class CONFIGURATION
logging auditlog class FIRMWARE
logging syslog-facility local LOG_LOCAL7
switch-attributes 1
  chassis-name VDX6720-24
  host-name rb1
```

**Related Commands** [show global-running-config](#), [show rbridge-local-running-config](#)

## show rbridge-local-running-config

Displays the current local configuration for an RBridge.

**Syntax** `show rbridge-local-running-config [ rbridge-id rbridge-id ]`

**Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples** The following example shows partial output for this command:

```
switch# show rbridge-local-running-config rbridge-id 1
diag post rbridge-id 1
  enable
  !
dpod 1/0/1
  reserve
  !
dpod 1/0/2
  reserve
  !
dpod 1/0/3
  reserve
  !
dpod 1/0/4
  !
dpod 1/0/5
  !
dpod 1/0/6
  !
dpod 1/0/7
  !
dpod 1/0/8
  !
dpod 1/0/9
  !
dpod 1/0/10
  !
dpod 1/0/11
  !
dpod 1/0/12
  !
dpod 1/0/13
  !
dpod 1/0/14
  !
dpod 1/0/15
  !
dpod 1/0/16
  !
dpod 1/0/17
  !
dpod 1/0/18
  !
dpod 1/0/19
  !
dpod 1/0/20
  !
dpod 1/0/21
  !
dpod 1/0/22
  !
dpod 1/0/23
  !
dpod 1/0/24
  !
switch-attributes 1
  chassis-name VDX6720-24
  host-name rb1
  !
fabric route mcast rbridge-id 1
  !
rbridge-id 1
  ip route 0.0.0.0/0 10.17.0.1
  switch-attributes chassis-name VDX6720-24
  switch-attributes host-name rb1
  system-monitor fan threshold marginal-threshold 1 down-threshold 2
  system-monitor fan alert state removed action raslog
  system-monitor power threshold marginal-threshold 1 down-threshold 2
  system-monitor power alert state removed action raslog
  system-monitor temp threshold marginal-threshold 1 down-threshold 2
  system-monitor cid-card threshold marginal-threshold 1 down-threshold 2
  system-monitor cid-card alert state none action none
  system-monitor sfp alert state none action none
  system-monitor compact-flash threshold marginal-threshold 1 down-threshold 0
  system-monitor MM threshold marginal-threshold 1 down-threshold 0
```

## Show commands

```
system-monitor LineCard threshold marginal-threshold 1 down-threshold 2
system-monitor LineCard alert state none action none
system-monitor SFM threshold marginal-threshold 1 down-threshold 2
no protocol vrrp
no protocol vrrp-extended
interface Ve 123
  shutdown
!
!
interface Management 1/0
  no ip address dhcp
  ip address 10.17.10.21/20
  ip gateway-address 10.17.0.1
  no ipv6 address autoconfig
  no ipv6 address dhcp
!
interface TenGigabitEthernet 1/0/1
  description LC 1/0/1-23
  fabric isl enable
  fabric trunk enable
  no shutdown
!
interface TenGigabitEthernet 1/0/2
  description LC 1/0/1-23
  fabric isl enable
  fabric trunk enable
  no shutdown
!
interface TenGigabitEthernet 1/0/3
  mtu 9216
  description LC 1/0/1-23
  fabric isl enable
  fabric trunk enable
  switchport
  switchport mode access
  switchport access vlan 1
  no shutdown
!
interface TenGigabitEthernet 1/0/4
  mtu 9216
  description LC 1/0/1-23
```

### Related Commands

[show global-running-config](#), [show rbridge-running config](#)

# show redundancy

Displays the control processor redundancy settings of the Management Module (MM).

**Syntax** **show redundancy**

**Modes** Privileged EXEC mode

**Examples** To show redundancy:

```
switch# show redundancy
=== MM Redundancy Statistics ===
Current Active Session:
Active Slot = M2 (Local), Failover Cause: Failed Over
Standby Slot = M1 (Remote)
Start Time: 11:11:08 UTC Wed Nov 28 2012
Previous Active Session:
Active Slot = M1
Standby Slot = M2
End Time: 09:50:07 UTC Wed Nov 28 2012
System Uptime: 09:42:12 UTC Wed Nov 28 2012
```

**Related Commands** [ha enable](#), [ha failover](#), [show ha](#)

## show rmon

Displays the current RMON status on the switch.

<b>Syntax</b>	<b>show rmon [ alarms [ <i>number</i> ] [ <i>brief</i> ]   events [ <i>number</i> ] [ <i>brief</i> ]   logs [ <i>event_number</i> ]   statistics [ <i>number</i> ] [ <i>brief</i> ] ]</b>
<b>Parameters</b>	<p><b>alarms</b></p> <p style="padding-left: 2em;">Specifies to display the RMON alarm table.</p> <p style="padding-left: 2em;"><b><i>number</i></b></p> <p style="padding-left: 4em;">Specifies the alarm index identification number. Valid values range from 1 through 65535.</p> <p style="padding-left: 2em;"><b>brief</b></p> <p style="padding-left: 4em;">Specifies to display a brief summary of the output.</p> <p><b>events</b></p> <p style="padding-left: 2em;">Specifies to display the RMON events table.</p> <p style="padding-left: 2em;"><b><i>number</i></b></p> <p style="padding-left: 4em;">Specifies the event index identification number. Valid values range from 1 through 65535.</p> <p style="padding-left: 2em;"><b>brief</b></p> <p style="padding-left: 4em;">Specifies to display a brief summary of the output.</p> <p><b>logs</b></p> <p style="padding-left: 2em;">Specifies to display the RMON log table.</p> <p style="padding-left: 2em;"><b><i>event_number</i></b></p> <p style="padding-left: 4em;">Specifies the event log index identification number. Valid values range from 1 through 65535.</p> <p><b>statistics</b></p> <p style="padding-left: 2em;">Specifies to display the statistics identification number.</p> <p style="padding-left: 2em;"><b><i>number</i></b></p> <p style="padding-left: 4em;">Specifies the statistics identification number. Valid values range from 1 through 65535.</p> <p style="padding-left: 2em;"><b>brief</b></p> <p style="padding-left: 4em;">Specifies a brief summary of the output.</p>

**Modes** Privileged EXEC mode

**Examples** To display the RMON statistics:

```
switch# show rmon statistics

rmon collection index 4
  Interface index is Id: 67108864 , Name : Ten Gigabit Ethernet 0/0
  Receive Statistics:
    218903 packets, 14015626 bytes, 0 packs dropped
    Multicasts: 218884, Broadcasts: 18
    Under-size : 0, Jabbers: 0, CRC: 0
    Fragments: 0, Collisions: 0
      64 byte pkts: 218722, 65-127 byte pkts: 174
      128-255 byte pkts: 0, 256-511 byte pkts: 6
      512-1023 byte pkts: 0, 1024-1518 byte pkts: 0
      Over 1518-byte pkts(Oversize - Jumbo): 0
  Owner: RMON_SNMP
  Status: ok(I)
```

To display the RMON events:

```
switch# show rmon events

event Index = 4
      Description "My Description"
      Event type Log & SnmpTrap
      Event community name admin
      Last Time Sent = 00:00:00
      Owner admin
```

**Related  
Commands**    [rmon alarm, rmon event](#)

## show rmon history

Displays information gathered by rmon event and rmon alarm commands.

**Syntax** `show rmon history [ statistics | history_index ]`

**Parameters** **statistics**

Displays a more detailed synopsis.

***history\_index***

Specifies the RMON history identification number. Valid values range from 1 through 65535.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display a synopsis of the statistics collected by the **rmon event** and **rmon alarm** commands.

Add the **statistics** parameter to display the detailed history.

**Examples** To display the RMON history:

```
switch# show rmon history

RMON history control entry 1
interface: ifIndex.1745682445 Ten Gigabit Ethernet 0/13
buckets requested: 20
buckets granted: 20
sampling interval: 10
Owner: jsmith
```

**Related Commands** [rmon alarm](#), [rmon event](#)



## show route-map

Displays all interfaces in the system that currently have a route map applied.

**Syntax** `show route-map [ name ] [ rbridge-id { rbridge-id | all } ]`

`show route-map ve vlan-id { rbridge-id rbridge-id | all } }`

<b>Parameters</b>	<b>name</b>	The name of the route-map.
	<b>rbridge-id</b>	Specifies an RBridge or all RBridges.
	<b>rbridge-id</b>	Specifies an RBridge ID.
	<b>all</b>	Specifies all RBridges.
	<b>ve vlan_id</b>	Specifies the interface Ve for specified RBridge ID.

**Modes** Privileged EXEC mode

**Usage Guidelines** Output indicators are as follows:

- **Active/Partial/Inactive status:** Indicates the instantiation of the route-map configuration into the underlying hardware. Possible meanings for inactive may be no room in the TCAM for programming the ACL, or the exhaustion of next-hop entries within the hardware next-hop table.
- **Selected:** Indicates which of the configured next hops is currently being used by the policy. If the keyword selected is absent from the display, it indicates that none of the next hops in the list is being used and the packet is being routed by the standard routing mechanism.
- **Count:** Provides a summary of the number of times any of the match criteria within the specific ACL has been hit. If the ACL binding was unable to allocate a counter for the ACL (due to resource exhaustion), the count value will show "Counter not available." Otherwise, an actual counter value is displayed.

### Examples

```
sw0# show route-map
Interface TenGigabitEthernet 3/3
  Ip Policy Route-map abc
Interface TenGigabitEthernet 3/4
  Ip Policy Route-map bar
```

Example of **show route-map** by application:

```

sw0# show route-map abc
Interface TenGigabitEthernet 3/3
  ip policy route-map abc permit 10 (Active)
  match ip address acl ACL_Vincent
  set ip precedence critical
  set ip next-hop 3.3.1.1 (selected)
  set ip next-hop 4.4.2.1
  Policy routing matches: 100 packets; 500000 bytes
ip policy route-map abc permit 20 (Active)
  match ip address acl ACL_Vincent_2
  set ip precedence flash
  set ip next-hop 10.3.1.1
  set ip next-hop 10.4.2.1 (selected)
  set ip interface null0
  Policy routing matches: 0 packets; 0 bytes
sw0# show route-map xyz
Interface TenGigabitEthernet 3/4
  ip policy route-map xyz deny 10 (inactive)
  match ip address acl Vincent
  set ip precedence critical
  set ip vrf pulp_fiction next-hop 3.3.3.5 (selected)
  set ip next-hop 4.4.4.4
  Policy routing matches: Counter not available
sw0# show route-map abc rbridge-id all
Interface TenGigabitEthernet 204/3/3
  ip policy route-map abc permit 10 (Active)
  match ip address acl ACL_Vincent
  set ip next-hop 3.3.1.1 (selected)
  set ip next-hop 4.4.2.1
  Policy routing matches: 100 packets; 500000 bytes
Interface Ve 3 on rbridge-id 205
  ip policy route-map abc permit 20 (Active)
  match ip address acl ACL_Vincent_2
  set ip next-hop 10.3.1.1
  set ip next-hop 10.4.2.1 (selected)
  set ip interface null0
  Policy routing matches: 0 packets; 0 bytes

```

**Related  
Commands**    [ip policy route-map](#)

## show route-map interface

Displays the status of a route-map application on the specified interface.

**Syntax** **show route-map interface** { **port-channel** *index* | **<N>gigabitethernet** *slot/port* | **ve** *vlan-id* }  
**show route-map interface** **ve** *vlan-id* **rbridge-id** { *rbridge-id* | **all** }

**Parameters** **port-channel** *index*

Displays the status of the port-channel interface.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace **<N>gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**port**

Specifies a valid port number.

**ve** *vlan-id*

Displays the status of a route-map application on the specified virtual Ethernet interface Ve for the mentioned rbridge-id.

**rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** You do not need to specify the route map name, as only a single route map can be applied to an interface.

**Examples** To display the status of a route map on a 10-gigabit Ethernet interface:

```
sw0# show route-map interface tengigabitethernet 3/3
Interface TenGigabitEthernet 3/3
  ip policy route-map foo permit 10 (Active)
  match ip address acl ACL_Vincent
  set ip next-hop 3.3.1.1 (selected)
  set ip next-hop 4.4.2.1
  Policy routing matches: 100 packets; 500000 bytes
  ip policy route-map foo permit 20 (Active)
  match ip address acl ACL_Vincent_2
  set ip next-hop 10.3.1.1
  set ip next-hop 10.4.2.1 (selected)
  set ip interface null0
  Policy routing matches: 0 packets; 0 bytes
sw0# show route-map interface Ve 3 rbridge-id all
Interface Ve 3 on rbridge-id 205
  ip policy route-map foo permit 10 (Active)
  match ip address acl ACL_Vincent
  set ip precedence critical
  set ip next-hop 3.3.1.1 (selected)
  set ip next-hop 4.4.2.1
  Policy routing matches: 100 packets; 500000 bytes
Interface Ve 3 on rbridge-id 206
  ip policy route-map foo permit 20 (Active)
  match ip address acl ACL_Vincent_2
  set ip next-hop 10.3.1.1
  set ip next-hop 10.4.2.1 (selected)
  set ip interface null0
  Policy routing matches: 0 packets; 0 bytes
```

**Related  
Commands** [ip policy route-map](#)

## show running reserved-vlan

Displays the range of reserved VLAN values.

**Syntax** `show running reserved-vlan`

**Modes** Privileged EXEC mode

**Related  
Commands** [reserved-vlan](#), [show default-vlan](#)

## show running-config

Displays the contents of the running configuration.

- Syntax** `show running-config`
- Parameters** Refer to the Usage Guidelines.
- Modes** Privileged EXEC mode
- Usage Guidelines** Use this command to display the running configuration. This is the configuration that is currently active on the local switch but which is not saved persistently.
- This command is supported only on the local switch.
- Enter **show running-config ?** to display the list of available configuration entries.
- Examples** To display the running configuration:

```
switch# show running-config

chassis virtual-ip 10.24.73.50/20
no diag post enable
linecard 2 LC48x10G
linecard 4 LC48x10G
class-map default
  match any
!
logging rbridge-id 1
  raslog console INFO
!
logging auditlog class SECURITY
logging auditlog class CONFIGURATION
logging auditlog class FIRMWARE
logging syslog-facility local LOG_LOCAL7
switch-attributes 1
  chassis-name VDX8770-4
  host-name sw0
!
support rbridge-id 1
  ffdc
!
snmp-server contact "Field Support."
snmp-server location "End User Premise."
snmp-server sys-descr "Brocade VDX Switch."
snmp-server community ConvergedNetwork
snmp-server community OrigEquipMfr rw
snmp-server community "Secret C0de" rw
snmp-server community common!
(Output truncated)
```

**Related Commands** [show startup-config](#), [show startup-db](#)

## show running-config aaa

Displays the configuration attributes for the authentication, authorization, and accounting (AAA) server from the configuration database.

**Syntax** `show running-config aaa [ accounting [ commands | exec ] | authentication [ login ] ]`

**Parameters**

- accounting**
  - Configures Login or Command accounting
  - commands**
    - Enable/Disable Command accounting
  - exec**
    - Enable/Disable Login accounting
- authentication**
  - Configures preferred order of Authentication output modifiers
  - login**
    - Configures the order of sources for login (default = 'local')

**Modes** Privileged EXEC mode

**Usage Guidelines** Refer to the **aaa authentication** command for a description of the displayed attributes.

**Examples** To display the authentication mode:

```
switch# show running-config aaa
aaa authentication radius local
aaa accounting exec default start-stop none
aaa accounting commands default start-stop none

switch# show running-config aaa authentication
aaa authentication login radius local

switch# show running-config aaa authentication
aaa authentication login ldap local-auth-fallback
```

**Related Commands** [aaa authentication](#)

## show running-config aaa accounting

Displays the AAA server accounting configuration.

**Syntax** `show running-config aaa accounting`

**Modes** Privileged EXEC mode

**Usage Guidelines** Refer to the **aaa authentication** command for a description of the displayed attributes.

**Examples** To displaying the authentication mode:

```
switch# show running-config aaa accounting
aaa accounting exec default start-stop tacacs+
aaa accounting commands default start-stop tacacs+
```

**Related  
Commands** [aaa authentication](#)



# show running-config access-list

Displays a list of ACLs defined on the switch, including the rules they contain.

## Syntax

### Draft comment:

<<<TW Write ipv6 and MAC topics.

```
show running-config ip access-list [ standard | extended ] [ ACL_name ]
```

```
show running-config ipv6 access-list [ standard | extended ] [ ACL_name ]
```

```
show running-config mac access-list [ standard | extended ] [ ACL_name ]
```

## Parameters

**standard | extended**

Specifies the ACL type. Not specifying the ACL type displays all standard and extended ACLs of the given type.

**ACL\_name**

Specifies the ACL name.

## Modes

Privileged EXEC mode

## Usage Guidelines

This command is supported only on the local switch.

To display details of ACLs bound to interfaces, use the **show access-list** command.

## Examples

The following example displays all IPv4 ACLs in the running-config of the local switch:

```
switch# show running-config ip access-list
ip access-list extended ip1
  seq 10 permit ip host 192.168.100.2 any
!
ip access-list extended ip_1
  seq 10 permit ip any host 172.10.15.200 count
!
ip access-list extended ip_2
  seq 10 permit ip any host 172.10.16.200 count
!
ip access-list extended ip_3
  seq 10 permit ip host 172.10.16.100 any
!
```

The following example displays all standard IPv6 ACLs in the running-config of the local switch:

```
switch# show running-config ipv6 access-list standard
ipv6 access-list standard distList
  seq 10 deny 2001:125:132:35::/64
  seq 20 deny 2001:54:131::/64
  seq 30 deny 2001:5409:2004::/64
  seq 40 permit any
!
ipv6 access-list standard ipv6_acl_std_1
  seq 10 deny 2001:2001::/64 count log
```

## Related Commands

[access-group](#), [access-list](#), [show access-list](#), [show statistics access-list](#)

## show running-config ag

Displays the configured N\_Port to VF\_Port mappings, port grouping information, and other parameters for Access Gateway (AG) mode.

<b>Syntax</b>	<b>show running-config ag</b> <i>rbridge-id</i>
<b>Command Default</b>	Displays the AG configuration on local switch when the RBridge ID is not specified.
<b>Parameters</b>	<b><i>rbridge-id</i></b> Specifies an RBridge ID.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Use this command to display parameters configured for AG mode. This shows the factory-default configuration, unless parameters have been modified by the user.</p> <p>Consider the following when using LB mode with <b>show running-config ag</b> and <b>show ag</b> commands:</p> <ul style="list-style-type: none"><li>• The only Port Grouping mode that you can enable or disable is lb mode.</li><li>• When lb mode is disabled in a port group, the <b>show running-config ag</b>, <b>show ag map</b>, and <b>show ag</b> commands display the configured VF_Port to N_Port mapping. This is because configured and active mapping are the same.</li><li>• When lb mode is enabled in a port group, <b>show ag</b> and <b>show ag map</b> commands display the active mapping only because VF_Port to N_Port mapping is based on the current distributed load across all N_Ports. The <b>show running-config ag</b> command displays the configured mapping only.</li></ul>

**Examples** The following example displays the running AG configuration for RBridge ID 1.

```
sw0# show running-config rbridge-id 1 ag
  nport 1/0/1
    map fport interface Fcoe 1/1/1 1/1/9 1/1/17 1/1/25 1/1/33 1/1/41 1/1/49 1/1/57
    !
  nport 1/0/2
    map fport interface Fcoe 1/1/2 1/1/10 1/1/18 1/1/26 1/1/34 1/1/42 1/1/50 1/1/58
    !
  nport 1/0/3
    map fport interface Fcoe 1/1/3 1/1/11 1/1/19 1/1/27 1/1/35 1/1/43 1/1/51 1/1/59
    !
  nport 1/0/4
    map fport interface Fcoe 1/1/4 1/1/12 1/1/20 1/1/28 1/1/36 1/1/44 1/1/52 1/1/60
    !
  nport 1/0/5
    map fport interface Fcoe 1/1/5 1/1/13 1/1/21 1/1/29 1/1/37 1/1/45 1/1/53 1/1/61
    !
  nport 1/0/6
    map fport interface Fcoe 1/1/6 1/1/14 1/1/22 1/1/30 1/1/38 1/1/46 1/1/54 1/1/62
    !
  nport 1/0/7
    map fport interface Fcoe 1/1/7 1/1/15 1/1/23 1/1/31 1/1/39 1/1/47 1/1/55 1/1/63
    !
  nport 1/0/8
    map fport interface Fcoe 1/1/8 1/1/16 1/1/24 1/1/32 1/1/40 1/1/48 1/1/56 1/1/64
    !
  pg 0
    nport interface FibreChannel 1/0/1 1/0/2 1/0/3 1/0/4 1/0/5 1/0/6 1/0/7 1/0/8
    modes lb
    rename pg0
    !
  timeout fnm 120
  counter reliability 25
  !
  !
sw0# show running-config ag
ag
mapset nport 1/0/1 fports 1/1/1 1/1/92 1/1/173
mapset nport 1/0/2 fports 1/1/24 1/1/105 1/1/186
mapset nport 1/0/3 fports 1/1/37 1/1/118 1/1/199
mapset nport 1/0/4 fports 1/1/410 1/1/1211 1/1/2012
mapset nport 1/0/5 fports 1/1/513 1/1/1314 1/1/2115
mapset nport 1/0/6 fports 1/1/616 1/1/1417 1/1/2218
mapset nport 1/0/7 fports 1/1/719 1/1/1520 1/1/2321
mapset nport 1/0/8 fports 1/1/822 1/1/1623 1/1/24
staticmapadd nport 1/0/1 staticfports
staticmapadd nport 1/0/2 staticfports
staticmapadd nport 1/0/3 staticfports
.....
failback 1/0/5 true
failback 1/0/6 true
failback 1/0/7 true
vcs:
fabric-map default
  vlan 1002
  priority 3
  virtual-fabric 128
  fcmap 0E:FC:00
```

**Related Commands** [show ag](#), [show ag map](#)

## show running-config banner

Displays the switch banner.

**Syntax** `show running-config banner`

**Modes** Privileged EXEC mode

**Examples** To display the switch banner:

```
switch# show running-config banner
banner login "Please don't disturb the setup on this switch."
```

**Related  
Commands** [banner login](#)

# show running-config cee-map

Displays the Converged Enhanced Ethernet (CEE) map.

**Syntax** `show running-config cee-map [ precedence | priority-group-table [ pgid ] | priority-table | remap { fabric-priority | lossless-priority } ]`

**Parameters** **precedence**

Displays only the precedence of the default CEE map.

**priority-group-table**

Without a specified priority group ID, displays the priority group table for each priority group ID.

***pgid***

Specifies one priority group ID.

**priority-table**

Displays the configured priority table map.

**remap fabric-priority**

Displays the fabric priority for the Brocade VCS Fabric QoS.

**remap lossless-priority**

Displays the lossless priority for the Brocade VCS Fabric QoS.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display properties of the configured CEE map. Without parameters, the command displays the precedence of the default CEE map, priority group table for each priority group ID, the configured priority table map, and the fabric priority and lossless priority for the Brocade VCS Fabric QoS.

**Examples** To display the CEE map:

```
switch(config)# show running-config cee-map

cee-map default
precedence 1
priority-group-table 1 weight 40 pfc on
priority-group-table 15.0 pfc off
priority-group-table 15.1 pfc off
priority-group-table 15.2 pfc off
priority-group-table 15.3 pfc off
priority-group-table 15.4 pfc off
priority-group-table 15.5 pfc off
priority-group-table 15.6 pfc off
priority-group-table 15.7 pfc off
priority-group-table 2 weight 60 pfc off
priority-table 2 2 2 1 2 2 2 15.0
remap fabric-priority priority 0
remap lossless-priority priority 0
!
```

**Related Commands** [priority-group-table](#), [remap fabric-priority](#), [remap lossless-priority](#)

## show running-config class-map

Displays configured class-maps.

**Syntax** `show running-config class-map`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

**Examples** To display configured class maps:.

```
switch# show running-config class-map
class-map default
match any
```

**Related  
Commands** [qos cos](#)

## show running-config diag post

Displays the defined POST configuration.

**Syntax** **show running-config diag post**

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config diag post
diag post rbridge-id 132
no enable
switch# show running-config diag post
diag post rbridge-id 132
enable
```

**Related  
Commands** [diag post enable](#)

show running-config dot1x

## show running-config dot1x

Displays the IEEE 802.1x Port Authentication configuration.

**Syntax** `show running-config dot1x [ enable | test timeout ]`

**Parameters** `enable`

Shows the configured state of globally enabled IEEE 802.1x port authentication.

`test timeout`

Shows the configured timeout value in seconds for the IEEE 802.1x readiness check.

**Modes** Privileged EXEC mode

**Related Commands** [dot1x enable](#), [dot1x test timeout](#)



# show running-config dpod

Displays Dynamic Ports on Demand (DPOD) license information.

**Syntax** `show running-config dpod [ rbridge-id/slot/port ]`

**Command Default** Displays all port reservations on the local switch.

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display port reservations for a specified port or for all ports on the local switch.

This command has no effect on Brocade VDX 8770 switches. These switches do not support the Dynamic Ports on Demand feature.

**Examples** To display port reservations for all ports on the local switch:

```
switch# show running-config dpod

dpod 10/0/1
  reserve
!
dpod 10/0/2
  reserve
!
dpod 10/0/3
!
dpod 10/0/4
  reserve
!
dpod 10/0/5
!
dpod 10/0/6
  reserve
!
(Output truncated)
```

To display port reservations on a switch that does not support the DPOD feature:

```
switch# show running-config dpod

%No entries found
```

**Related Commands** [dpod](#), [show dpod](#)

## show running-config fabric route mcast

Displays fabric route multicast configuration information.

<b>Syntax</b>	<b>show running-config fabric route mcast { rbridge-id <i>rbridge-id</i>   priority }</b>
<b>Parameters</b>	<b>rbridge-id <i>rbridge-id</i></b> Specifies an RBridge ID.
	<b>priority</b> Displays the priority value.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	The configuration currently effective on the switch is referred to as the running configuration. Any configuration change you make while the switch is online is made to the running configuration.
<b>Examples</b>	These examples display fabric route multicast configuration information:  <pre>switch# show running-config fabric route mcast fabric route mcast rbridge-id 2 switch# show running-config fabric route mcast rbridge-id 2 priority fabric route mcast rbridge-id 2 priority 1</pre>
<b>Related Commands</b>	<a href="#">fabric route mcast</a> , <a href="#">show fabric route multicast</a>

## show running-config fcoe

Displays the running configuration for FCoE.

**Syntax** `show running-config fcoe [ fabric-map default | map default ]`

**Parameters** `fabric-map default`

Displays the contents of the fabric map.

`map default`

Displays the list of available maps.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config fcoe fabric-map default
```

```
fcoe
  fabric-map default
  vlan-id 1002
  priority 3
  virtual-fabric 128
  fcmap 0E:FC:00
  advertisement interval 8000
  keep-alive timeout
```

```
switch# show running-config fcoe map default
```

```
fcoe
map default
  fabric-map default
  cee-map default
```

## show running-config fcsp auth

Displays the E\_Port-to-EX\_Port authentication protocol parameters.

<b>Syntax</b>	<b>show running-config [ rbridge-id { <i>rbridge-id</i>   all } ] fcsp auth</b>
<b>Parameters</b>	<b>rbridge-id</b> Specifies an RBridge or all RBridges. <b><i>rbridge-id</i></b> Specifies an RBridge ID. <b>all</b> Specifies all RBridges.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Use this command to display the E_Port-to-EX_Port authentication protocol parameters such as auth-type, group, hash type, and policy state. The policy status can be one of the following: ON, OFF, ACTIVE, or PASSIVE. Refer to the <b>fcsp auth</b> command for a description of policy states.
<b>Examples</b>	To display both protocol and policy (auth-type = all, group = 2, hash = md5, and switch policy = off)  <pre>swe52# show running-config rbridge-id 2 fcsp auth rbridge-id 2 fcspauth auth-type all fcspauth group 2 fcspauth hash sha1 fcspauth policy switch active</pre>
<b>Related Commands</b>	<a href="#">fcsp auth</a> , <a href="#">fcsp auth-secret dhchap</a> , <a href="#">show fcsp auth-secret dh-chap</a>

# show running-config hardware

Displays configuration information relating to the flexport on a switch.

**Syntax** `show running-config hardware { connector-group | flexport }`

**Parameters** `connector-group`

Displays the current configuration of the connector group for the flexport.

`flexport`

Displays the current configuration of the flexport.

**Modes** Privileged EXEC mode

**Examples** The `show running-config hardware connector-group` command displays the following information:

```
switch# show runn hardware connector-group
hardware
connector-group 1/0/1
  speed LowMixed
!
connector-group 1/0/3
  speed LowMixed
!
connector-group 1/0/5
  speed LowMixed
!
connector-group 1/0/6
  speed LowMixed
!
connector-group 2/0/1
  speed LowMixed
!
connector-group 2/0/3
  speed LowMixed
!
connector-group 2/0/5
  speed LowMixed
!
connector-group 2/0/6
  speed LowMixed
!
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## show running-config hardware connector

Displays the SFP configurations in the running-config.

**Syntax** `show running-config hardware connector`

**Command Default** Displays information for the local switch.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

**Examples** To display the SFP configuration on the local switch:

```
switch# show running-config hardware connector
hardware
  connector 0/1
    no sfp breakout
  !
  connector 0/2
    sfp breakout
```

**Related Commands** [clear support](#), [copy support](#), [show support](#), [sfp breakout](#)

## show running-config interface fcoe

Displays the status of FCoE interfaces.

**Syntax** **show running-config interface fcoe** [ *vn-number/rbridge-id/front-port-number* ]

**Parameters** ***vn-number/rbridge-id/front-port-number***  
Specifies a valid FCoE port interface.  
***vn-number***  
Specifies the VN number for FCoE.  
***rbridge-id***  
Specifies an RBridge ID.  
***front-port-number***  
Specifies the front port number.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface fcoe
interface Fcoe 1/22/1
  no shutdown
!
interface Fcoe 1/22/2
  no shutdown
!
interface Fcoe 1/22/3
  no shutdown
!
interface Fcoe 1/22/4
  no shutdown
!
interface Fcoe 1/22/5
  no shutdown
!
interface Fcoe 1/22/6
  no shutdown
!
```

## show running-config interface FibreChannel

Displays Fibre Channel port attributes.

<b>Syntax</b>	<b>show running-config interface FibreChannel</b> [ <i>rbridge-id/slot/port</i> [ <b>desire-distance</b>   <b>fill-word</b>   <b>isl-r_rdy</b>   <b>long-distance</b>   <b>shutdown</b>   <b>speed</b>   <b>trunk-enable</b>   <b>vc-link-init</b> ] ]
<b>Parameters</b>	<p><b><i>rbridge-id</i></b></p> <p>Specifies an RBridge ID.</p> <p><b><i>slot</i></b></p> <p>Specifies a valid slot number.</p> <p><b><i>port</i></b></p> <p>Specifies a valid port number.</p> <p><b>desire-distance</b></p> <p>Displays the setting of the desired distance attribute.</p> <p><b>fill-word</b></p> <p>Displays the configured link initialization and fill word primitives for 8 Gbps Fibre Channel ports: idle-idle, arbff-arbff, idle-arbff, or aa-then-ia.</p> <p><b>isl-r_rdy</b></p> <p>Displays whether R_RDY buffer-to-buffer flow control is enabled for the ISL. VC_RDY flow control is enabled if R_RDY flow control is disabled.</p> <p><b>long-distance</b></p> <p>Displays the configured long distance mode:</p> <p style="padding-left: 40px;">l0—Long distance mode is not configured.</p> <p style="padding-left: 40px;">l1—Link is up to 10 km.</p> <p style="padding-left: 40px;">ld—Distance is determined dynamically.</p> <p style="padding-left: 40px;">ls—Distance is determined statically by the user (<b>desire-distance</b> command).</p> <p><b>shutdown</b></p> <p>Displays whether the port is enabled (<b>no shutdown</b>) or disabled (<b>shutdown</b>).</p> <p><b>speed</b></p> <p>Displays the configured port speed: auto, 1 Gbps, 2 Gbps, 4 Gbps, or 8 Gbps.</p> <p><b>trunk-enable</b></p> <p>Displays whether trunking is enabled on the port.</p> <p><b>vc-link-init</b></p> <p>Displays the configured long distance fill word: idle or arb.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Use this command to display port attributes for a specified Fibre Channel port or for all Fibre Channel ports on the cluster.</p> <p>Enter the command without specifying <i>rbridge-id/slot/port</i> to obtain a listing of attributes for all Fibre Channel ports. Enter the command with the <i>rbridge-id/slot/port</i> parameters to obtain attributes information for a specific port. The values for <b>desire-distance</b>, <b>isl-r_rdy</b>, <b>trunk-enable</b>, and <b>shutdown</b> are always displayed. The values for <b>fill-word</b>, <b>long-distance</b>, <b>speed</b>, and <b>vc-link-init</b> are displayed only if they have been changed from their default values.</p>



Include the attribute name to obtain the setting of that specific attribute only.

This command can be used only on Network OS platforms with Fibre Channel ports (Brocade VDX 6740), in Brocade VCS Fabric mode, and with the FCoE license installed.

Enter **interface FibreChannel** to set the values.

**Examples** To display Fibre Channel port attributes for all ports on a Brocade VDX 6740 switch:

```
switch# show running-config interface FibreChannel

interface FibreChannel 3/0/1
  desire-distance 0
  no isl-r_rdy
  trunk-enable
  no shutdown
!
interface FibreChannel 3/0/2
  desire-distance 0
  no isl-r_rdy
  trunk-enable
  no shutdown
!
interface FibreChannel 3/0/3
  desire-distance 0
  no isl-r_rdy
  trunk-enable
  no shutdown
!
(Output truncated)
```

To display Fibre Channel port attributes for one port of a Brocade VDX 6740 switch:

```
switch# show running-config interface FibreChannel 8/0/1

interface FibreChannel 8/0/1
  speed 8gbps
  long-distance ld
  vc-link-init arb
  desire-distance 0
  no isl-r_rdy
  trunk-enable
  shutdown
!
```

To display the setting of a specific attribute on a specific port:

```
switch# show running-config interface FibreChannel 66/0/1 speed

interface FibreChannel 66/0/1
  speed auto
!
```

**Related  
Commands**

[fill-word](#), [interface](#), [isl-r\\_rdy](#), [shutdown](#), [speed \(Fibre Channel\)](#), [trunk-enable](#), [vc-link-init](#)

## show running-config interface fortygigabitethernet

Displays the status of 40-gigabit Ethernet interfaces.

**Syntax** `show running-config interface fortygigabitethernet [ rbridge-id/slot/port ]`

**Command Default** Displays the configuration of all 40-gigabit Ethernet interfaces on the local switch.

**Parameters** *rbridge-id*  
Specifies an RBridge ID.

*slot*  
Specifies a valid slot number.

*port*  
Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples** To display configuration information about all 40-gigabit Ethernet interfaces on a Brocade VDX switch:

```
switch# show running-config interface fortygigabitethernet

interface Forty Gigabit Ethernet 22/0/49
fabric isl enable
fabric trunk enable
no shutdown
!
interface Forty Gigabit Ethernet 22/0/50
fabric isl enable
fabric trunk enable
no shutdown
!
interface Forty Gigabit Ethernet 22/0/51
fabric isl enable
fabric trunk enable
no shutdown
!
interface Forty Gigabit Ethernet 22/0/52
fabric isl enable
fabric trunk enable
sflow enable
no shutdown
!
interface Forty Gigabit Ethernet 22/0/53
fabric isl enable
fabric trunk enable
sflow enable
shutdown
!
interface Forty Gigabit Ethernet 22/0/54
fabric isl enable
fabric trunk enable
```

**Related  
Commands** [interface](#)

## show running-config interface fortygigabitethernet bpdu-drop

Displays the BPDU drop status of a 40-gigabit Ethernet interface.

**Syntax** `show running-config interface fortygigabitethernet [ rbridge-id/slot/port ] bpdu-drop [ enable ]`

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**enable**

Displays the drop status of STP/MSTP/RSTP and PVST+/R-PVST+ BPDUs.

**Modes** Privileged EXEC mode

**Usage Guidelines** STP, RSTP, or MSTP must be configured.

Brocade Network OS supports PVST+ and R-PVST+only. The PVST and R-PVST protocols are proprietary to Cisco and are not supported.

**Examples** To display BPDU drop status information for a specific 40-gigabit Ethernet port:

```
switch# show running-config interface fortygigabitethernet 1/0/49 bpdu-drop
```

**Related  
Commands** [interface](#)

show running-config interface fortygigabitethernet cee

## show running-config interface fortygigabitethernet cee

Displays whether the default CEE map has been applied to a 40-gigabit Ethernet interface.

**Syntax** **show running-config interface fortygigabitethernet** [ *rbridge-id/slot/port* ] **cee**

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command does not apply to ISL ports.

**Related  
Commands** [cee](#)

## show running-config interface fortygigabitethernet channel-group

Displays channel group configuration information for a 40-gigabit Ethernet interface participating in link aggregation.

**Syntax** `show running-config interface fortygigabitethernet [ rbridge-id/slot/port ] channel-group [ mode | type ]`

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

*mode*

Displays the mode of link aggregation (active, passive, or on).

*type*

Displays the type of link aggregation (802.3ad standards-based LAG, or Brocade proprietary hardware-based trunking).

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is relevant only to interfaces configured as part of a LAG.

**Related Commands** [channel-group](#)

## show running-config interface fortygigabitethernet description

Displays the description string associated with a 40-gigabit Ethernet interface.

**Syntax** `show running-config interface fortygigabitethernet [ rbridge-id/slot/port ] description`

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface fortygigabitethernet 1/0/52 description
interface fortygigabitethernet 1/0/52
  description Connects to storage device 1
```

**Related Commands** [description \(interfaces\)](#), [interface](#)

## show running-config interface fortygigabitethernet dot1x

Displays IEEE 802.1x port-based access control configuration information for a 40-gigabit Ethernet interface.

<b>Syntax</b>	<b>show running-config interface fortygigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>dot1x</b> [ <b>authentication</b>   <b>port-control</b>   <b>protocol-version</b>   <b>quiet-period</b>   <b>reauthMax</b>   <b>reauthentication</b>   <b>timeout</b> [ <b>re-authperiod</b>   <b>server-timeout</b>   <b>supp-timeout</b>   <b>tx-period</b> ] ]
<b>Parameters</b>	<p><b>rbridge-id</b></p> <p>Specifies an RBridge ID.</p> <p><b>slot</b></p> <p>Specifies a valid slot number.</p> <p><b>port</b></p> <p>Specifies a valid port number.</p> <p><b>authentication</b></p> <p>Indicates whether 802.1x port-based access control is enabled on the interface.</p> <p><b>port-control</b></p> <p>Displays the status of port authorization: auto (authentication on the port is enabled), forced authorize, or force unauthorize.</p> <p><b>protocol-version</b></p> <p>Displays the version number of the dot1x protocol.</p> <p><b>quiet-period</b></p> <p>Displays the number of seconds between a failed authentication and the next authentication retry.</p> <p><b>reauthMax</b></p> <p>Displays the maximum number of reauthentication attempts before the port goes into the reauthorized state.</p> <p><b>reauthentication</b></p> <p>Indicates whether reauthentication is enabled on a port.</p> <p><b>timeout</b></p> <p>Displays 802.1x timeout values.</p> <p><b>re-authperiod</b></p> <p>Displays the reauthentication interval in seconds.</p> <p><b>server-timeout</b></p> <p>Displays the number of seconds the switch waits for a response from the authentication server.</p> <p><b>supp-timeout</b></p> <p>Displays the number of seconds that the switch waits for a response to the Extensible Authentication Protocol (EAP) frame.</p> <p><b>tx-period</b></p> <p>Displays the number of seconds that the switch waits for a response to an EAP request or identity frame from the client before retransmitting the request</p>
<b>Modes</b>	Privileged EXEC mode

**Examples** To display the 802.1x port-based authentication configuration for a 40-gigabit Ethernet interface:

```
switch# show running-config interface fortygigabitethernet 1/0/49 dot1x

interface fortygigabitethernet 1/0/49
dot1x authentication
dot1x port-control auto
dot1x quiet-period 120
dot1x reauthMax 5
dot1x reauthentication
dot1x timeout server-timeout 60
```

**Related Commands** [dot1x authentication](#), [dot1x port-control](#), [dot1x quiet-period](#), [dot1x reauthentication](#), [dot1x reauthMax](#), [dot1x timeout re-authperiod](#), [dot1x timeout server-timeout](#), [dot1x timeout supp-timeout](#), [dot1x timeout tx-period](#)



## show running-config interface fortygigabitethernet fabric

Displays fabric protocol configuration parameters for a 40-gigabit Ethernet interface.

<b>Syntax</b>	<b>show running-config interface fortygigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>fabric</b> [ <b>isl</b> [ <b>enable</b> ] ]   <b>trunk</b> [ <b>enable</b> ] ]
<b>Parameters</b>	<p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p> <p><b>isl [ enable ]</b> Indicates only the administration and operational state the Inter-Switch Link (ISL).</p> <p><b>trunk [ enable ]</b> Indicates only whether trunking is enabled on the port.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	<pre>switch# show running-config interface fortygigabitethernet 1/0/49 fabric interface fortygigabitethernet 1/0/49   fabric isl enable   fabric trunk enable</pre>
<b>Related Commands</b>	<a href="#">fabric isl enable</a> , <a href="#">fabric trunk enable</a>

## show running-config interface fortygigabitethernet fcoeport

Displays whether a 40-gigabit Ethernet interface is configured as an FCoE port.

**Syntax** `show running-config interface fortygigabitethernet [ rbridge-id/slot/port ] fcoeport`

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Related  
Commands** [fcoe](#), [fcoeport](#)

## show running-config interface fortygigabitethernet lacp

Displays interface configuration parameters for the Link Aggregation Control Protocol (LACP) for a 40-gigabit Ethernet interface.

**Syntax** `show running-config interface fortygigabitethernet [ rbridge-id/slot/port ] lacp [ timeout ]`

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

*timeout*

Indicates whether the interface timeout is short (for Brocade trunks) or long (for standard trunks).

**Modes** Privileged EXEC mode

**Related  
Commands** [lacp timeout](#)

## show running-config interface fortygigabitethernet lldp

Displays Link Layer Discovery Protocol (LLDP) configuration information for a 40-gigabit Ethernet interface.

<b>Syntax</b>	<b>show running-config interface fortygigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>lldp</b> [ <b>dcbx-version</b>   <b>disable</b>   <b>iscsi-priority</b>   <b>profile</b> ]
<b>Parameters</b>	
<b><i>rbridge-id</i></b>	Specifies an RBridge ID.
<b><i>slot</i></b>	Specifies a valid slot number.
<b><i>port</i></b>	Specifies a valid port number.
<b>dcbx-version</b>	Displays the configured version of the Data Center Bridging Exchange (DCBX) protocol.
<b>disable</b>	Indicates whether LLDP is disabled on the interface.
<b>iscsi-priority</b>	Displays the configured priority that will be advertised in the DCBX iSCSI TLV.
<b>profile</b>	Displays the LLDP profile configured on the interface.
<b>Modes</b>	Privileged EXEC mode
<b>Related Commands</b>	<a href="#">lldp dcbx-version</a> , <a href="#">lldp disable</a> , <a href="#">lldp iscsi-priority</a> , <a href="#">lldp profile</a>

## show running-config interface fortygigabitethernet mac

Displays configured MAC parameters for a 40-gigabit Ethernet interface.

**Syntax** `show running-config interface fortygigabitethernet [ rbridge-id/slot/port ] mac [ access-group ]`

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

*access-group*

Displays MAC ACLs configured for the specified interface.

**Modes** Privileged EXEC mode

**Related  
Commands** [mac access-group](#)

## show running-config interface fortygigabitethernet mtu

Displays the configured MTU for a 40-gigabit Ethernet interface.

<b>Syntax</b>	<b>show running-config interface fortygigabitethernet [ <i>rbridge-id/slot/port</i> ] mtu</b>
<b>Parameters</b>	<b><i>rbridge-id</i></b> <b><i>slot</i></b> <b><i>port</i></b>
	Specifies an RBridge ID. Specifies a valid slot number. Specifies a valid port number.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	<pre>switch# show running-config interface fortygigabitethernet 1/0/49 mtu interface fortygigabitethernet 1/0/49   mtu 2500</pre>
<b>Related Commands</b>	<a href="#">ip mtu</a>

## show running-config interface fortygigabitethernet port-profile-port

Displays whether AMPP port-profile configuration mode is enabled for a 40-gigabit Ethernet interface.

**Syntax** `show running-config interface fortygigabitethernet [ rbridge-id/slot/port ] port-profile-port`

**Parameters** *rbridge-id*

*slot* Specifies an RBridge ID.

*port* Specifies a valid slot number.

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface fortygigabitethernet 1/0/50 port-profile-port
interface fortygigabitethernet 1/0/50
port-profile-port
```

**Related  
Commands** [port-profile-port](#)

## show running-config interface fortygigabitethernet priority-tag

Displays whether 802.1p priority tagging is configured for a 40-gigabit Ethernet interface.

**Syntax** `show running-config interface fortygigabitethernet [ rbridge-id/slot/port ] priority-tag`

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface fortygigabitethernet 1/0/51 priority-tag
interface fortygigabitethernet 1/0/51
priority-tag
```

**Related  
Commands** [priority-tag](#)



## show running-config interface fortygigabitethernet qos

Displays the Quality of Service (QoS) configuration for a 40-gigabit Ethernet interface.

**Syntax** `show running-config interface fortygigabitethernet [ rbridge-id/slot/port ] qos [ cos | cos-mutation | cos-traffic-class | flowcontrol [ rx | tx ] | trust [ cos ] ]`

**Command Default** Displays the full QoS configuration for the interface.

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**cos**

Displays only the Class of Service (CoS) value configured for the interface.

**cos-mutation**

Displays the Cos-to-CoS mutation QoS map configured for the interface.

**cos-traffic-class**

Displays the CoS-to-Traffic Class QoS Map configured for the interface.

**flowcontrol**

Displays the activation status of QoS flow control on the interface.

**rx**

Displays the activation status of the receive portion of flow control for the interface.

**tx**

Displays the activation status of the transmit portion of flow control for the interface.

**trust cos**

Displays the configured QoS trust mode for the interface.

**Modes** Privileged EXEC mode

**Related Commands** [qos cos](#), [qos cos-mutation](#), [qos cos-traffic-class](#), [qos flowcontrol](#), [qos trust cos](#), [show qos flowcontrol interface](#), [show qos interface](#), [show qos queue interface](#), [show qos rcv-queue interface](#), [show qos flowcontrol interface](#), [show qos interface](#), [show qos queue interface](#), [show qos rcv-queue interface](#)

## show running-config interface fortygigabitethernet rmon

Displays the Remote Monitoring protocol (RMON) configuration for a 40-gigabit Ethernet interface.

**Syntax** **show running-config interface fortygigabitethernet** [ *rbridge-id/slot/port* ] **rmon** [ **collection** [ **history** *index* | **stats** *index* ] ]

**Command Default** Displays all RMON collection configuration information.

**Parameters** **rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**collection**

Displays configuration information for RMON collections.

**history**

Displays configuration information for RMON history collections.

**index**

Specifies a valid RMON history collection index value.

**stats**

Displays configuration information for RMON statistics collections.

**index**

Specifies a valid RMON collection control index value.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface fortygigabitethernet 1/0/49 rmon collection
interface fortygigabitethernet 1/0/49
  rmon collection stats 10 owner RMON_SNMP
  rmon collection history 10 owner RMON_SNMP
```

**Related Commands** [rmon collection history](#), [rmon collection stats](#)

## show running-config interface fortygigabitethernet sflow

Displays the sFlow configuration for a 40-gigabit Ethernet interface.

**Syntax** `show running-config interface fortygigabitethernet [ rbridge-id/slot/port ] sflow [ enable | polling-interval | sample-rate ]`

**Command Default** Displays all sFlow configuration information for the port.

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**enable**

Displays whether sFlow is enabled for the port.

**polling-interval**

Displays the configured maximum number of seconds between successive samples of counters to be sent to the collector.

**sample-rate**

Displays the number of packets that are skipped before the next sample is taken for the interface.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface fortygigabitethernet 1/0/53 sflow

interface fortygigabitethernet 1/0/53
 sflow enable
 sflow polling-interval 10
 sflow sample-rate 100
```

**Related Commands** [sflow enable \(interface version\)](#), [sflow polling-interval \(interface version\)](#), [sflow sample-rate \(interface version\)](#)

## show running-config interface fortygigabitethernet shutdown

Displays whether a 40-gigabit Ethernet interface is enabled.

<b>Syntax</b>	<b>show running-config interface fortygigabitethernet [ <i>rbridge-id/slot/port</i> ] shutdown</b>
<b>Parameters</b>	<b><i>rbridge-id</i></b> <b><i>slot</i></b> <b><i>port</i></b>
	Specifies an RBridge ID. Specifies a valid slot number. Specifies a valid port number.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	<pre>switch# show running-config interface fortygigabitethernet 1/0/52 shutdown interface fortygigabitethernet 1/0/52 no shutdown</pre>
<b>Related Commands</b>	<a href="#">shutdown</a>

## show running-config interface fortygigabitethernet switchport

Displays the configured switching characteristics for the 40-gigabit Ethernet Layer 2 interface.

**Syntax** `show running-config interface fortygigabitethernet [ rbridge-id | slot | port ] switchport [ access [ vlan ] | mode | trunk [ allowed [ vlan ] | native-vlan | tag [ native-vlan ] ]`

**Command Default** Displays all configured Layer 2 switching characteristics for the port.

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**access**

Displays whether the Layer 2 interface is configured as access.

**access vlan**

Displays whether the specific VLAN on the Layer 2 interface is configured as access.

**mode**

Displays whether the Layer 2 interface is configured for access, trunk or converged.

**trunk**

Displays whether the Layer 2 interface is configured for trunk.

**trunk allowed**

Displays the configuration settings that determine the VLANs that will transmit and receive through the Layer 2 interface.

**trunk allowed vlan**

Displays the configuration settings for a specific VLAN.

**trunk allowed native-vlan**

Displays the configured native VLAN characteristics of the Layer 2 trunk interface for classifying untagged traffic.

**trunk tag**

Displays whether tagging is enabled.

**tag native-vlan**

Displays native VLAN tags.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface fortygigabitethernet 1/0/49 switchport
interface fortygigabitethernet 1/0/49
 switchport
 switchport mode access
 switchport access vlan 1
```

**Related Commands** [switchport](#), [switchport access](#), [switchport mode](#), [switchport trunk allowed vlan rspan-vlan](#)

show running-config interface fortygigabitethernet uddl

## show running-config interface fortygigabitethernet uddl

Displays Unidirectional Link Detection Protocol (UDLD) configuration information for a 40-gigabit Ethernet interface.

**Syntax** **show running-config interface fortygigabitethernet [ *rbridge-id/slot/port* ] uddl enable**

**Command Default** This command has no defaults.

**Parameters** ***rbridge-id***

Specifies an RBridge ID.

***slot***

Specifies a valid slot number.

***port***

Specifies a valid port number.

**enable**

Indicates whether UDLD is enabled on the interface.

**Modes** Privileged EXEC mode

## show running-config interface fortygigabitethernet vlan

Displays information about VLAN classification groups for a 40-gigabit Ethernet Layer 2 interface.

<b>Syntax</b>	<b>show running-config interface fortygigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>vlan</b> [ <b>classifier</b> [ <b>activate</b> [ <b>group</b> ] ] ]
<b>Parameters</b>	<p><b><i>rbridge-id</i></b> Specifies an RBridge ID.</p> <p><b><i>slot</i></b> Specifies a valid slot number.</p> <p><b><i>port</i></b> Specifies a valid port number.</p> <p><b><i>classifier</i></b> Displays VLAN classifier commands for the Layer 2 interface.</p> <p><b><i>activate</i></b> Displays VLAN classifier activate commands for the Layer 2 interface.</p> <p><b><i>group</i></b> Displays VLAN classifier activate group commands for the Layer 2 interface.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	<pre>switch# show running-config interface fortygigabitethernet 1/0/49 vlan interface fortygigabitethernet 1/0/49 vlan classifier activate group 1 vlan 2</pre>
<b>Related Commands</b>	<a href="#">show vlan classifier</a> , <a href="#">switchport</a> , <a href="#">vlan classifier activate group</a> , <a href="#">vlan classifier group</a> , <a href="#">vlan classifier rule</a>

## show running-config interface gigabitethernet

Displays the status of 1-gigabit Ethernet interfaces.

**Syntax** **show running-config interface gigabitethernet** [ *rbridge-id/slot/port* ]

**Command Default** Displays the configuration of all 1-gigabit Ethernet interfaces on the local switch.

**Parameters** ***rbridge-id***  
Specifies an RBridge ID.

***slot***  
Specifies a valid slot number.

***port***  
Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples** To display configuration information about all 1-gigabit Ethernet interfaces on the local switch:

```
switch# show running-config interface gigabitethernet

interface Gigabit Ethernet 22/0/1
description tests
channel-group 2 mode active type standard
lACP timeout long
sflow enable
no shutdown
!
interface Gigabit Ethernet 22/0/2
channel-group 2 mode active type standard
lACP timeout long
no shutdown
!
interface Gigabit Ethernet 22/0/3
channel-group 2 mode active type standard
lACP timeout long
no shutdown
!
interface Gigabit Ethernet 22/0/4
no shutdown
!
interface Gigabit Ethernet 22/0/5
no shutdown
!
interface Gigabit Ethernet 22/0/6
no shutdown
!
interface Gigabit Ethernet 22/0/7
no shutdown
(Output truncated)
```

**Related  
Commands** [interface](#)



## show running-config interface gigabitethernet bpdu-drop

Displays the BPDU drop status of a 1-gigabit Ethernet interface.

**Syntax** `show running-config interface gigabitethernet [ rbridge-id/slot/port ] bpdu-drop [ enable ]`

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**enable**

Displays the drop status of STP/MSTP/RSTP and PVST+/R-PVST+ BPDUs.

**Modes** Privileged EXEC mode

**Usage Guidelines** STP, RSTP, or MSTP must be configured.

Brocade Network OS supports PVST+ and R-PVST+only. The PVST and R-PVST protocols are proprietary to Cisco and are not supported.

**Examples** To display BPDU drop status information for a specific 1-gigabit Ethernet port:

```
switch# show running-config interface gigabitethernet 1/0/7 bpdu-drop
```

**Related  
Commands** [interface](#)

## show running-config interface gigabitethernet channel-group

Displays channel group configuration information for an interface participating in link aggregation.

<b>Syntax</b>	<b>show running-config interface gigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>channel-group</b> [ <b>mode</b>   <b>type</b> ]
<b>Parameters</b>	<b><i>rbridge-id</i></b> Specifies an RBridge ID.
	<b><i>slot</i></b> Specifies a valid slot number.
	<b><i>port</i></b> Specifies a valid port number.
	<b>mode</b> Displays the mode of link aggregation (active, passive, or on).
	<b>type</b> Displays the type of link aggregation (802.3ad standards-based LAG, or Brocade proprietary hardware-based trunking).
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	This command is relevant only to interfaces configured as part of a LAG.
<b>Related Commands</b>	<a href="#">channel-group</a>

## show running-config interface gigabitethernet description

Displays the description string associated with a 1-gigabit Ethernet interface.

**Syntax** `show running-config interface gigabitethernet [ rbridge-id/slot/port ] description`

**Parameters**

- rbridge-id***
- slot*** Specifies an RBridge ID.
- port*** Specifies a valid slot number.
- port*** Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface gigabitethernet 1/0/7 description
interface Gigabit Ethernet 1/0/7
description Connects to storage device 1
```

**Related Commands** [description \(interfaces\)](#), [interface](#)

## show running-config interface gigabitethernet dot1x

Displays IEEE 802.1x port-based access control configuration information for a 1-gigabit Ethernet interface.

**Syntax** `show running-config interface gigabitethernet [ rbridge-id/slot/port ] dot1x [ authentication | port-control | protocol-version | quiet-period | reauthMax | reauthentication | timeout [ re-authperiod | server-timeout | supp-timeout | tx-period ] ]`

<b>Parameters</b>	<b><i>rbridge-id</i></b>	Specifies an RBridge ID.
	<b><i>slot</i></b>	Specifies a valid slot number.
	<b><i>port</i></b>	Specifies a valid port number.
	<b>authentication</b>	Indicates whether 802.1x port-based access control is enabled on the interface.
	<b>port-control</b>	Displays the status of port authorization: auto (authentication on the port is enabled), forced authorize, or force unauthorize.
	<b>protocol-version</b>	Displays the version number of the dot1x protocol.
	<b>quiet-period</b>	Displays the number of seconds between a failed authentication and the next authentication retry.
	<b>reauthMax</b>	Displays the maximum number of reauthentication attempts before the port goes into the reauthorized state.
	<b>reauthentication</b>	Indicates whether reauthentication is enabled on a port.
	<b>timeout</b>	Displays 802.1x timeout values.
	<b>re-authperiod</b>	Displays the reauthentication interval in seconds.
	<b>server-timeout</b>	Displays the number of seconds the switch waits for a response from the authentication server.
	<b>supp-timeout</b>	Displays the number of seconds that the switch waits for a response to the Extensible Authentication Protocol (EAP) frame.
	<b>tx-period</b>	Displays the number of seconds that the switch waits for a response to an EAP request or identity frame from the client before retransmitting the request
<b>Modes</b>	Privileged EXEC mode	

**Examples** To display the 802.1x port-based authentication configuration for a 1-gigabit Ethernet interface:

```
switch# show running-config interface gigabitethernet 1/0/7 dot1x

interface Gigabit Ethernet 1/0/7
 dot1x authentication
 dot1x port-control auto
 dot1x quiet-period 120
 dot1x reauthMax 5
 dot1x reauthentication
 dot1x timeout server-timeout 60
```

**Related Commands** [dot1x authentication](#), [dot1x port-control](#), [dot1x quiet-period](#), [dot1x reauthentication](#), [dot1x reauthMax](#), [dot1x timeout re-authperiod](#), [dot1x timeout server-timeout](#), [dot1x timeout supp-timeout](#), [dot1x timeout tx-period](#)

## show running-config interface gigabitethernet lacp

Displays interface configuration parameters for the Link Aggregation Control Protocol (LACP) for a 1-gigabit Ethernet interface.

<b>Syntax</b>	<b>show running-config interface gigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>lacp</b> [ <b>timeout</b> ]	
<b>Parameters</b>	<b><i>rbridge-id</i></b>	Specifies an RBridge ID.
	<b><i>slot</i></b>	Specifies a valid slot number.
	<b><i>port</i></b>	Specifies a valid port number.
	<b>timeout</b>	Indicates whether the interface timeout is short (for Brocade trunks) or long (for standard trunks).
<b>Modes</b>	Privileged EXEC mode	
<b>Related Commands</b>	<a href="#">lacp timeout</a>	

## show running-config interface gigabitethernet lldp

Displays Link Layer Discovery Protocol (LLDP) configuration information for a 1-gigabit Ethernet interface.

<b>Syntax</b>	<b>show running-config interface gigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>lldp</b> [ <b>dcbx-version</b>   <b>disable</b>   <b>iscsi-priority</b>   <b>profile</b> ]
<b>Parameters</b>	<b><i>rbridge-id</i></b> Specifies an RBridge ID.
	<b><i>slot</i></b> Specifies a valid slot number.
	<b><i>port</i></b> Specifies a valid port number.
	<b>dcbx-version</b> Displays the configured version of the Data Center Bridging Exchange (DCBX) protocol.
	<b>disable</b> Indicates whether LLDP is disabled on the interface.
	<b>iscsi-priority</b> Displays the configured priority that will be advertized in the DCBX iSCSI TLV.
	<b>profile</b> Displays the LLDP profile configured on the interface.
<b>Modes</b>	Privileged EXEC mode
<b>Related Commands</b>	<a href="#">lldp dcbx-version</a> , <a href="#">lldp disable</a> , <a href="#">lldp iscsi-priority</a> , <a href="#">lldp profile</a>

## show running-config interface gigabitethernet mac

Displays configured MAC parameters for a 1-gigabit Ethernet interface.

<b>Syntax</b>	<b>show running-config interface gigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>mac</b> [ <b>access-group</b> ]
<b>Parameters</b>	<b><i>rbridge-id</i></b> Specifies an RBridge ID.
	<b><i>slot</i></b> Specifies a valid slot number.
	<b><i>port</i></b> Specifies a valid port number.
	<b>access-group</b> Displays MAC ACLs configured for the specified interface.
<b>Modes</b>	Privileged EXEC mode
<b>Related Commands</b>	<a href="#">mac access-group</a>



## show running-config interface gigabitethernet mtu

Displays the configured MTU for a 1-gigabit Ethernet interface.

**Syntax** `show running-config interface gigabitethernet [ rbridge-id/slot/port ] mtu`

**Parameters**

- rbridge-id***
- slot*** Specifies an RBridge ID.
- port*** Specifies a valid slot number.
- port*** Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface gigabitethernet 1/0/8 mtu
interface Gigabit Ethernet 1/0/8
  mtu 2500
!
```

**Related  
Commands** [ip mtu](#)

## show running-config interface gigabitethernet port-profile-port

Displays whether AMPP port-profile configuration mode is enabled for a 1-gigabit Ethernet interface.

**Syntax** `show running-config interface gigabitethernet [ rbridge-id/slot/port ] port-profile-port`

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface gigabitethernet 1/0/8 port-profile-port
interface Gigabit Ethernet 1/0/8
  port-profile-port
```

**Related  
Commands** [port-profile-port](#)

## show running-config interface gigabitethernet priority-tag

Displays whether 802.1p priority tagging is configured for a 1-gigabit Ethernet interface.

**Syntax** `show running-config interface gigabitethernet [ rbridge-id/slot/port ] priority-tag`

**Parameters**

- rbridge-id***
- slot*** Specifies an RBridge ID.
- port*** Specifies a valid slot number.
- port*** Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface gigabitethernet 1/0/8 priority-tag
interface Gigabit Ethernet 1/0/8
  priority-tag
```

**Related  
Commands** [priority-tag](#)

## show running-config interface gigabitethernet qos

Displays the Quality of Service (QoS) configuration for a 1-gigabit Ethernet interface.

**Syntax** `show running-config interface gigabitethernet [ rbridge-id/slot/port ] qos [ cos | cos-mutation | cos-traffic-class | flowcontrol [ rx | tx ] | trust [ cos ] ]`

**Command Default** Displays the full QoS configuration for the interface.

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**cos**

Displays only the Class of Service (CoS) value configured for the interface.

**cos-mutation**

Displays the Cos-to-CoS mutation QoS map configured for the interface.

**cos-traffic-class**

Displays the CoS-to-Traffic Class QoS Map configured for the interface.

**flowcontrol**

Displays the activation status of QoS flow control on the interface.

**rx**

Displays the activation status of the receive portion of flow control for the interface.

**tx**

Displays the activation status of the transmit portion of flow control for the interface.

**trust cos**

Displays the configured QoS trust mode for the interface.

**Modes** Privileged EXEC mode

**Related Commands** [qos cos](#), [qos cos-mutation](#), [qos cos-traffic-class](#), [qos flowcontrol](#), [qos trust cos](#), [show qos flowcontrol interface](#), [show qos interface](#), [show qos queue interface](#), [show qos rcv-queue interface](#)

## show running-config interface gigabitethernet rmon

Displays the Remote Monitoring protocol (RMON) configuration for a 1-gigabit Ethernet interface.

**Syntax** `show running-config interface gigabitethernet [ rbridge-id/slot/port ] rmon [ collection [ history index | stats index ] ]`

**Command Default** Displays all RMON collection configuration information.

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**collection**

Displays configuration information for RMON collections.

**history**

Displays configuration information for RMON history collections.

**stats**

Displays configuration information for RMON statistics collections.

*index*

Specifies a valid RMON collection control index value.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface gigabitethernet 1/0/8 rmon collection
interface Gigabit Ethernet 1/0/8
  rmon collection stats 10 owner RMON_SNMP
  rmon collection history 10 owner RMON_SNMP
```

**Related Commands** [rmon collection history](#), [rmon collection stats](#)

## show running-config interface gigabitethernet sflow

Displays the sFlow configuration for a 1-gigabit Ethernet interface.

**Syntax** **show running-config interface gigabitethernet** [ *rbridge-id/slot/port* ] **sflow** [ **enable** | **polling-interval** | **sample-rate** ]

**Command Default** Displays all sFlow configuration information for the port.

**Parameters** **rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**enable**

Displays whether sFlow is enabled for the port.

**polling-interval**

Displays the configured maximum number of seconds between successive samples of counters to be sent to the collector.

**sample-rate**

Displays the number of packets that are skipped before the next sample is taken for the interface.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface gigabitethernet 1/0/8 sflow
interface Gigabit Ethernet 1/0/8
 sflow enable
 sflow polling-interval 10
 sflow sample-rate 100
!
```

**Related Commands** [sflow enable \(interface version\)](#), [sflow polling-interval \(interface version\)](#), [sflow sample-rate \(interface version\)](#)

## show running-config interface gigabitethernet shutdown

Displays whether a 1-gigabit Ethernet interface is enabled.

**Syntax** `show running-config interface gigabitethernet [ rbridge-id/slot/port ] shutdown`

**Parameters**

- rbridge-id***
- slot*** Specifies an RBridge ID.
- port*** Specifies a valid slot number.
- port*** Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface gigabitethernet 1/0/8 shutdown
interface Gigabit Ethernet 1/0/8
no shutdown
```

**Related  
Commands** [shutdown](#)

## show running-config interface gigabitethernet switchport

Displays the configured switching characteristics for the 1-gigabit Ethernet Layer 2 interface.

**Syntax** `show running-config interface gigabitethernet [ rbridge-id/slot/port ] switchport [ access [ vlan ] | mode | trunk [ allowed [ vlan ] | native-vlan | tag [ native-vlan ] ]`

**Command Default** Displays all configured Layer 2 switching characteristics for the port.

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**access**

Displays whether the Layer 2 interface is configured as access.

**access vlan**

Displays whether the specific VLAN on the Layer 2 interface is configured as access.

**mode**

Displays whether the Layer 2 interface is configured for access, trunk or converged.

**trunk**

Displays whether the Layer 2 interface is configured for trunk.

**trunk allowed**

Displays the configuration settings that determine the VLANs that will transmit and receive through the Layer 2 interface.

**trunk allowed vlan**

Displays the configuration settings for a specific VLAN.

**trunk allowed native-vlan**

Displays the configured native VLAN characteristics of the Layer 2 trunk interface for classifying untagged traffic.

**trunk tag**

Displays whether tagging is enabled.

**tag native-vlan**

Displays tags for the native VLAN.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface gigabitethernet 1/0/8 switchport
interface Gigabit Ethernet 1/0/8
 switchport
 switchport mode access
 switchport access vlan 1
```

**Related Commands** [switchport](#), [switchport access](#), [switchport mode](#), [switchport trunk allowed vlan rspan-vlan](#)



## show running-config interface gigabitethernet udd

Displays Unidirectional Link Detection Protocol (UDLD) configuration information for a 1-gigabit Ethernet interface.

**Syntax** **show running-config interface gigabitethernet** [ *rbridge-id/slot/port* ] **udd enable**

**Command Default** This command has no defaults.

**Parameters** ***rbridge-id***

Specifies an RBridge ID.

***slot***

Specifies a valid slot number.

***port***

Specifies a valid port number.

**enable**

Indicates whether UDLD is enabled on the interface.

**Modes** Privileged EXEC mode

## show running-config interface gigabitethernet vlan

Displays information about VLAN classification groups for the 1-gigabit Ethernet Layer 2 interface.

<b>Syntax</b>	<b>show running-config interface gigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>vlan</b> [ <b>classifier</b> [ <b>activate</b> [ <b>group</b> ] ] ]
<b>Parameters</b>	<b><i>rbridge-id</i></b> Specifies an RBridge ID.
	<b><i>slot</i></b> Specifies a valid slot number.
	<b><i>port</i></b> Specifies a valid port number.
	<b>classifier</b> Displays VLAN classifier commands for the Layer 2 interface.
	<b>activate</b> Displays VLAN classifier activate commands for the Layer 2 interface.
	<b>group</b> Displays VLAN classifier activate group commands for the Layer 2 interface.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	<pre>switch# show running-config interface gigabitethernet 1/0/8 vlan interface Gigabit Ethernet 1/0/8 vlan classifier activate group 1 vlan 2</pre>
<b>Related Commands</b>	<a href="#">show vlan classifier</a> , <a href="#">switchport</a> , <a href="#">vlan classifier activate group</a> , <a href="#">vlan classifier group</a> , <a href="#">vlan classifier rule</a>

# show running-config interface management

Displays the management interface configuration.

**Syntax** `show running-config interface management [ rbridge-id/ | port ] [ ip ] access group`

**Parameters** `rbridge-id/ | port`

Specifies the management interface to be displayed as the RBridge ID followed by a slash (/) and the port number.

On standalone platforms, the port number for the management port is always 0. On a modular switches with two redundant management modules, can configure two management ports: 1 and 2.

***ip***

Displays the IP addresses configured for the management interface. Use **access-group** to display selected addresses only.

**access-group**

Displays the access lists (ACLs) configured on the management interface.

**Modes** Privileged EXEC mode

**Examples** This example displays the authentication mode:

```
switch# show running-config interface Management 2/2
interface Management 2/2
.
ip access-group extdACL5
```

**Related Commands** [interface management](#), [ip access-list](#), [show running-config ip access-list](#)

## show running-config interface port-channel

Displays the status of port-channel interfaces.

**Syntax** `show running-config interface port-channel [ number ]`

**Command Default** Displays the configuration of all port channel interfaces on the local switch.

**Parameters** *number*  
Specifies a valid port-channel number.

**Modes** Privileged EXEC mode

**Examples** To display configuration information about all port channel interfaces on a Brocade switch:

```
switch# show running-config interface port-channel

interface port-channel 1
description 1
shutdown
!
interface port-channel 2
switchport
switchport mode access
switchport access vlan 1
shutdown
!
interface port-channel 3
shutdown
```

**Related  
Commands** [interface](#)

## show running-config interface tengigabitethernet

Displays the status of 10-gigabit Ethernet interfaces.

**Syntax** `show running-config interface tengigabitethernet [ rbridge-id/slot/port ]`

**Command Default** Displays the configuration of all 10-gigabitEthernet interfaces on the local switch.

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples** To display configuration information about all 10-gigabit Ethernet interfaces on a Brocade VDX switch:

```
switch# show running-config interface tengigabitethernet

interface Ten Gigabit Ethernet 22/0/49
fabric isl enable
fabric trunk enable
no shutdown
!
interface Ten Gigabit Ethernet 22/0/50
fabric isl enable
fabric trunk enable
no shutdown
!
interface Ten Gigabit Ethernet 22/0/51
fabric isl enable
fabric trunk enable
no shutdown
!
interface Ten Gigabit Ethernet 22/0/52
fabric isl enable
fabric trunk enable
sflow enable
no shutdown
!
interface Ten Gigabit Ethernet 22/0/53
fabric isl enable
fabric trunk enable
sflow enable
shutdown
!
interface Ten Gigabit Ethernet 22/0/54
fabric isl enable
fabric trunk enable
```

**Related  
Commands** [interface](#)

## show running-config interface tengigabitethernet bpdu-drop

Displays the BPDU drop status of a 10-gigabit Ethernet interface.

<b>Syntax</b>	<b>show running-config interface tengigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>bpdu-drop</b> [ <b>enable</b> ]
<b>Parameters</b>	<b><i>rbridge-id</i></b> Specifies an RBridge ID.
	<b><i>slot</i></b> Specifies a valid slot number.
	<b><i>port</i></b> Specifies a valid port number.
	<b>enable</b> Displays the drop status of STP/MSTP/RSTP and PVST+/R-PVST+ BPDUs.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	STP, RSTP, or MSTP must be configured. Brocade Network OS supports PVST+ and R-PVST+ only. The PVST and R-PVST protocols are proprietary to Cisco and are not supported.
<b>Examples</b>	To display BPDU drop status information for a specific 10-gigabit Ethernet port:  <pre>switch# show running-config interface tengigabitethernet 1/0/49 bpdu-drop</pre>
<b>Related Commands</b>	<a href="#">interface</a>

## show running-config interface tengigabitethernet cee

Displays whether the default CEE map has been applied to a 10-gigabit Ethernet interface.

**Syntax** `show running-config interface tengigabitethernet [ rbridge-id/slot/port ] cee`

**Parameters**

<i>rbridge-id</i>	Specifies an RBridge ID.
<i>slot</i>	Specifies a valid slot number.
<i>port</i>	Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command does not apply to ISL ports.

**Related  
Commands** [cee](#)

## show running-config interface tengigabitethernet channel-group

Displays channel group configuration information for a 10-gigabit Ethernet interface participating in link aggregation.

<b>Syntax</b>	<b>show running-config interface tengigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>channel-group</b> [ <b>mode</b>   <b>type</b> ]
<b>Parameters</b>	<b><i>rbridge-id</i></b> Specifies an RBridge ID.
	<b><i>slot</i></b> Specifies a valid slot number.
	<b><i>port</i></b> Specifies a valid port number.
	<b>mode</b> Displays the mode of link aggregation (active, passive, or on).
	<b>type</b> Displays the type of link aggregation (802.3ad standards-based LAG, or Brocade proprietary hardware-based trunking).
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	This command is relevant only to interfaces configured as part of a LAG.
<b>Related Commands</b>	<a href="#">channel-group</a>



## show running-config interface tengigabitethernet description

Displays the description string associated with a 10-gigabit Ethernet interface.

**Syntax** `show running-config interface tengigabitethernet [ rbridge-id/slot/port ] description`

**Parameters**

- rbridge-id***
- slot*** Specifies an RBridge ID.
- port*** Specifies a valid slot number.
- port*** Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface tengigabitethernet 1/0/52 description
interface tengigabitethernet 1/0/52
description Connects to storage device 1
```

**Related Commands** [description \(interfaces\)](#), [interface](#)

## show running-config interface tengigabitethernet dot1x

Displays IEEE 802.1x port-based access control configuration information for a 10-gigabit Ethernet interface.

**Syntax** **show running-config interface tengigabitethernet** [ *rbridge-id/slot/port* ] **dot1x** [ **authentication** | **port-control** | **protocol-version** | **quiet-period** | **reauthMax** | **reauthentication** | **timeout** [ **re-authperiod** | **server-timeout** | **supp-timeout** | **tx-period** ] ]

<b>Parameters</b>	<b><i>rbridge-id</i></b>	Specifies an RBridge ID.
	<b><i>slot</i></b>	Specifies a valid slot number.
	<b><i>port</i></b>	Specifies a valid port number.
	<b>authentication</b>	Indicates whether 802.1x port-based access control is enabled on the interface.
	<b>port-control</b>	Displays the status of port authorization: auto (authentication on the port is enabled), forced authorize, or force unauthorize.
	<b>protocol-version</b>	Displays the version number of the dot1x protocol.
	<b>quiet-period</b>	Displays the number of seconds between a failed authentication and the next authentication retry.
	<b>reauthMax</b>	Displays the maximum number of reauthentication attempts before the port goes into the reauthorized state.
	<b>reauthentication</b>	Indicates whether reauthentication is enabled on a port.
	<b>timeout</b>	Displays 802.1x timeout values.
	<b>re-authperiod</b>	Displays the reauthentication interval in seconds.
	<b>server-timeout</b>	Displays the number of seconds the switch waits for a response from the authentication server.
	<b>supp-timeout</b>	Displays the number of seconds that the switch waits for a response to the Extensible Authentication Protocol (EAP) frame.
	<b>tx-period</b>	Displays the number of seconds that the switch waits for a response to an EAP request or identity frame from the client before retransmitting the request
<b>Modes</b>	Privileged EXEC mode	

**Examples** To display the 802.1x port-based authentication configuration for a 10-gigabit Ethernet interface:

```
switch# show running-config interface tengigabitethernet 1/0/49 dot1x

interface tengigabitethernet 1/0/49
dot1x authentication
dot1x port-control auto
dot1x quiet-period 120
dot1x reauthMax 5
dot1x reauthentication
dot1x timeout server-timeout 60
```

**Related Commands** [dot1x authentication](#), [dot1x port-control](#), [dot1x quiet-period](#), [dot1x reauthentication](#), [dot1x reauthMax](#), [dot1x timeout re-authperiod](#), [dot1x timeout server-timeout](#), [dot1x timeout supp-timeout](#), [dot1x timeout tx-period](#)

## show running-config interface tengigabitethernet fabric

Displays fabric protocol configuration parameters for a 10-gigabit Ethernet interface.

<b>Syntax</b>	<b>show running-config interface tengigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>fabric</b> [ <b>isl</b> [ <b>enable</b> ]   <b>trunk</b> [ <b>enable</b> ] ]
<b>Parameters</b>	<b><i>rbridge-id</i></b> Specifies an RBridge ID.
	<b><i>slot</i></b> Specifies a valid slot number.
	<b><i>port</i></b> Specifies a valid port number.
	<b>isl [ enable ]</b> Indicates only the administration and operational state of the Inter-Switch Link (ISL).
	<b>trunk [ enable ]</b> Indicates only whether trunking is enabled on the port.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Use this command to display ISL and trunking status for the specified 10-gigabit Ethernet interface.
<b>Examples</b>	<pre>switch# show running-config interface tengigabitethernet 1/0/49 fabric interface tengigabitethernet 1/0/49 fabric isl enable fabric trunk enable</pre>
<b>Related Commands</b>	<a href="#">fabric isl enable</a> , <a href="#">fabric trunk enable</a>

## show running-config interface tengigabitethernet fcoeport

Displays whether a 10-gigabit Ethernet interface is configured as an FCoE port.

**Syntax** **show running-config interface tengigabitethernet** [ *rbridge-id/slot/port* ] **fcoeport**

**Parameters** *rbridge-id*  
Specifies an RBridge ID.

*slot*  
Specifies a valid slot number.

*port*  
Specifies a valid port number.

**Modes** Privileged EXEC mode

**Related  
Commands** [fcoe](#), [fcoeport](#)

## show running-config interface tengigabitethernet lacp

Displays interface configuration parameters for the Link Aggregation Control Protocol (LACP) for a 10-gigabit Ethernet interface.

<b>Syntax</b>	<b>show running-config interface tengigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>lacp</b> [ <b>timeout</b> ]
<b>Parameters</b>	<b><i>rbridge-id</i></b> Specifies an RBridge ID.
	<b><i>slot</i></b> Specifies a valid slot number.
	<b><i>port</i></b> Specifies a valid port number.
	<b>timeout</b> Indicates whether the interface timeout is short (for Brocade trunks) or long (for standard trunks).
<b>Modes</b>	Privileged EXEC mode
<b>Related Commands</b>	<a href="#">lacp timeout</a>

## show running-config interface tengigabitethernet lldp

Displays Link Layer Discovery Protocol (LLDP) configuration information for a 10-gigabit Ethernet interface.

<b>Syntax</b>	<b>show running-config interface tengigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>lldp</b> [ <b>dcbx-version</b>   <b>disable</b>   <b>iscsi-priority</b>   <b>profile</b> ]
<b>Parameters</b>	<b>rbridge-id</b> Specifies an RBridge ID.
	<b>slot</b> Specifies a valid slot number.
	<b>port</b> Specifies a valid port number.
	<b>dcbx-version</b> Displays the configured version of the Data Center Bridging Exchange (DCBX) protocol.
	<b>disable</b> Indicates whether LLDP is disabled on the interface.
	<b>iscsi-priority</b> Displays the configured priority that will be advertized in the DCBX iSCSI TLV.
	<b>profile</b> Displays the LLDP profile configured on the interface.
<b>Modes</b>	Privileged EXEC mode
<b>Related Commands</b>	<a href="#">lldp dcbx-version</a> , <a href="#">lldp disable</a> , <a href="#">lldp iscsi-priority</a> , <a href="#">lldp profile</a>

## show running-config interface tengigabitethernet mac

Displays configured MAC parameters for a 10-gigabit Ethernet interface.

**Syntax** `show running-config interface tengigabitethernet [ rbridge-id/slot/port ] mac [ access-group ]`

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**access-group**

Displays MAC ACLs configured for the specified interface.

**Modes** Privileged EXEC mode

**Related  
Commands** [mac access-group](#)



## show running-config interface tengigabitethernet mtu

Displays the configured MTU for a 10 gigabit Ethernet interface.

**Syntax** `show running-config interface tengigabitethernet [ rbridge-id/slot/port ] mtu`

**Parameters**

- rbridge-id***
- slot*** Specifies an RBridge ID.
- port*** Specifies a valid slot number.
- port*** Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface tengigabitethernet 1/0/49 mtu
interface tengigabitethernet 1/0/49
  mtu 2500
```

**Related  
Commands** [ip mtu](#)

## show running-config interface tengigabitethernet port-profile-port

Displays whether AMPP port-profile configuration mode is enabled for a 10-gigabit Ethernet interface.

<b>Syntax</b>	<b>show running-config interface tengigabitethernet [ <i>rbridge-id/slot/port</i> ] port-profile-port</b>
<b>Parameters</b>	<b><i>rbridge-id</i></b> Specifies an RBridge ID.
	<b><i>slot</i></b> Specifies a valid slot number.
	<b><i>port</i></b> Specifies a valid port number.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	<pre>switch# show running-config interface tengigabitethernet 1/0/50 port-profile-port  interface tengigabitethernet 1/0/50 port-profile-port</pre>
<b>Related Commands</b>	<a href="#">port-profile-port</a>

## show running-config interface tengigabitethernet priority-tag

Displays whether 802.1p priority tagging is configured for a 10-gigabit Ethernet interface.

**Syntax** `show running-config interface tengigabitethernet [ rbridge-id/slot/port ] priority-tag`

**Parameters**

- rbridge-id***
- slot*** Specifies an RBridge ID.
- port*** Specifies a valid slot number.
- port*** Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface tengigabitethernet 1/0/51 priority-tag
interface tengigabitethernet 1/0/51
  priority-tag
```

**Related  
Commands** [priority-tag](#)

## show running-config interface tengigabitethernet qos

Displays the quality of service (QoS) configured for a 10-gigabit Ethernet interface.

**Syntax** `show running-config interface tengigabitethernet [ rbridge-id/slot/port ] qos [ cos | cos-mutation | cos-traffic-class | flowcontrol [ rx | tx ] | trust [ cos ] ]`

**Command Default** Displays the full QoS configuration for the interface.

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**cos**

Displays only the Class of Service (CoS) value configured for the interface.

**cos-mutation**

Displays the Cos-to-CoS mutation QoS map configured for the interface.

**cos-traffic-class**

Displays the CoS-to-Traffic Class QoS Map configured for the interface.

**flowcontrol**

Displays the activation status of QoS flow control on the interface.

**rx**

Displays the activation status of the receive portion of flow control for the interface.

**tx**

Displays the activation status of the transmit portion of flow control for the interface.

**trust cos**

Displays the configured QoS trust mode for the interface.

**Modes** Privileged EXEC mode

**Related Commands** [qos cos](#), [qos cos-mutation](#), [qos cos-traffic-class](#), [qos flowcontrol](#), [show qos flowcontrol interface](#), [show qos interface](#), [show qos queue interface](#), [show qos rcv-queue interface](#)

## show running-config interface tengigabitethernet rmon

Displays the Remote Monitoring protocol (RMON) configuration for a 10-gigabit Ethernet interface.

**Syntax** **show running-config interface tengigabitethernet** [ *rbridge-id/slot/port* ] **rmon** [ **collection** [ **history** *index* | **stats** *index* ] ]

**Command Default** Displays all RMON collection configuration information.

**Parameters** **rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**collection**

Displays configuration information for RMON collections.

**history**

Displays configuration information for RMON history collections.

**index**

Specifies a valid RMON history collection index value.

**stats**

Displays configuration information for RMON statistics collections.

**index**

Specifies a valid RMON collection control index value.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface tengigabitethernet 1/0/49 rmon collection
interface tengigabitethernet 1/0/49
 rmon collection stats 10 owner RMON_SNMP
 rmon collection history 10 owner RMON_SNMP
```

**Related Commands** [rmon collection history](#), [rmon collection stats](#)

## show running-config interface tengigabitethernet sflow

Displays the sFlow configuration for a 10-gigabit Ethernet interface.

**Syntax** `show running-config interface tengigabitethernet [ rbridge-id/slot/port ] sflow [ enable | polling-interval | sample-rate ]`

**Command Default** Displays all sFlow configuration information for the port.

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**enable**

Displays whether sFlow is enabled for the port.

**polling-interval**

Displays the configured maximum number of seconds between successive samples of counters to be sent to the collector.

**sample-rate**

Displays the number of packets that are skipped before the next sample is taken for the interface.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface tengigabitethernet 1/0/53 sflow
interface tengigabitethernet 1/0/53
 sflow enable
 sflow polling-interval 10
 sflow sample-rate 100
```

**Related Commands** [sflow enable \(interface version\)](#), [sflow polling-interval \(interface version\)](#), [sflow sample-rate \(interface version\)](#)

## show running-config interface tengigabitethernet shutdown

Displays whether a 10-gigabit Ethernet interface is enabled.

**Syntax** `show running-config interface tengigabitethernet [ rbridge-id/slot/port ] shutdown`

**Parameters**

- rbridge-id***
- slot*** Specifies an RBridge ID.
- port*** Specifies a valid slot number.
- Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface tengigabitethernet 1/0/52 shutdown
interface tengigabitethernet 1/0/52
no shutdown
```

**Related  
Commands** [shutdown](#)

## show running-config interface tengigabitethernet switchport

Displays the configured switching characteristics for the 10-gigabit Ethernet Layer 2 interface.

**Syntax** `show running-config interface tengigabitethernet [ rbridge-id | slot | port ] switchport [ access [ vlan ] | mode | trunk [ allowed [ vlan ] | native-vlan | tag [ native-vlan ] ]`

**Command Default** Displays all configured Layer 2 switching characteristics for the port.

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**access**

Displays whether the Layer 2 interface is configured as access.

**access vlan**

Displays whether the specific VLAN on the Layer 2 interface is configured as access.

**mode**

Displays whether the Layer 2 interface is configured for access, trunk or converged.

**trunk**

Displays whether the Layer 2 interface is configured for trunk.

**trunk allowed**

Displays the configuration settings that determine the VLANs that will transmit and receive through the Layer 2 interface.

**trunk allowed vlan**

Displays the configuration settings for a specific VLAN.

**trunk allowed native-vlan**

Displays the configured native VLAN characteristics of the Layer 2 trunk interface for classifying untagged traffic.

**trunk tag**

Displays whether tagging is enabled.

**tag native-vlan**

Displays tags for the native VLAN.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config interface tengigabitethernet 1/0/49 switchport
interface tengigabitethernet 1/0/49
  switchport
  switchport mode access
  switchport access vlan 1
```

**Related Commands**

[switchport](#), [switchport access](#), [switchport mode](#), [switchport trunk allowed vlan rspan-vlan](#)



## show running-config interface tengigabitethernet udd

Displays Unidirectional Link Detection Protocol (UDLD) configuration information for a 10 Gigabit Ethernet interface.

**Syntax** **show running-config interface tengigabitethernet [ *rbridge-id/slot/port* ] udd enable**

**Command Default** This command has no defaults.

**Parameters** ***rbridge-id***

Specifies an RBridge ID.

***slot***

Specifies a valid slot number.

***port***

Specifies a valid port number.

**enable**

Indicates whether UDLD is enabled on the interface.

**Modes** Privileged EXEC mode

## show running-config interface tengigabitethernet vlan

Displays information about VLAN classification groups for a 10-gigabit Ethernet Layer 2 interface.

<b>Syntax</b>	<b>show running-config interface tengigabitethernet</b> [ <i>rbridge-id/slot/port</i> ] <b>vlan</b> [ <b>classifier</b> [ <b>activate</b> [ <b>group</b> ] ] ]
<b>Parameters</b>	<b><i>rbridge-id</i></b> Specifies an RBridge ID.
	<b><i>slot</i></b> Specifies a valid slot number.
	<b><i>port</i></b> Specifies a valid port number.
	<b>classifier</b> Displays VLAN classifier commands for the Layer 2 interface.
	<b>activate</b> Displays VLAN classifier activate commands for the Layer 2 interface.
	<b>group</b> Displays VLAN classifier activate group commands for the Layer 2 interface.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	<pre>switch# show running-config interface tengigabitethernet 1/0/49 vlan interface tengigabitethernet 1/0/49 vlan classifier activate group 1 vlan 2</pre>
<b>Related Commands</b>	<a href="#">show vlan classifier</a> , <a href="#">switchport</a> , <a href="#">vlan classifier activate group</a> , <a href="#">vlan classifier group</a> , <a href="#">vlan classifier rule</a>

## show running-config interface vlan

Displays the status of VLAN interfaces.

**Syntax** `show running-config interface vlan [ vlan_id ] [ arp-ageing-timeout | description | ip | mac access-group | shutdown | spanning-tree ]`

**Command Default** Displays the configuration of all VLAN interfaces on the local switch.

**Parameters** *vlan\_id*

Specifies a VLAN.

**arp-ageing-timeout**

Displays the configured interface timeout value in minutes for the Address Resolution Protocol (ARP) for VLANs.

**description**

Displays the description text entered for each VLAN or for the specified VLAN.

**ip**

Displays IP configuration information for VLANs.

**mac access-group**

Displays MAC ACLs configured for VLANs.

**shutdown**

Specifies whether the VLAN interface is enabled.

**spanning-tree**

Displays spanning tree configuration information for VLANs.

**Modes** Privileged EXEC mode

**Related Commands** [interface](#), [show running-config interface vlan ip](#)

## show running-config interface vlan ip

Displays the IP configuration of VLAN interfaces.

**Syntax** `show running-config interface vlan [ vlan_id ] ip [ address | igmp [ last-member-query-interval | query-interval | query-max-response-time | snooping [ enable | fast-leave | mrouter | mrouter-timeout | querier ] | static-group static-group-address ] | mtu | proxy-arp ]`

**Command Default** Displays configured information for all VLAN interfaces on the local switch.

**Parameters** *vlan\_id*

Specifies a VLAN.

**address**

Displays the IP address configured for VLANs.

**igmp**

Displays whether the Internet Group Management Protocol (IGMP) is enabled for VLANs.

**last-member-query-interval**

Displays the amount of time in seconds that the IGMP router waits to receive a response to a group query message.

**query-interval**

Displays the amount of time in seconds between IGMP query messages sent by the switch.

**query-max-response-time**

Displays the configured maximum response time in seconds for IGMP queries.

**snooping**

Displays IGMP snooping configuration information for VLANs.

**enable**

Indicates whether IGMP snooping is enabled for specified VLANs.

**fast-leave**

Indicates if snooping fast leave is enabled.

**mrouter**

Displays multicast router port information for the VLAN.

**mrouter-timeout**

Displays the configured multicast router IGMP timeout value in seconds.

**querier**

Indicates if IGMP snooping querier is configured.

**static-group**

Displays configured static group membership entries.

*static-group-address*

Specifies an IPv4 address to return static group information about.

**mtu**

Displays the MTU configured for each VLAN.

**proxy-arp**

Indicates whether a proxy ARP is configured for VLAN interfaces.

**Modes** Privileged EXEC mode

**Examples** To display IP configuration information for all configured VLANs:

```
switch# show running-config interface vlan ip

interface Vlan 1
!
interface Vlan 2
ip igmp query-interval 200
ip igmp query-max-response-time 15
ip igmp snooping enable
```

**Related Commands** [interface management, ip access-list, show running-config interface management](#)

## show running-config ip access-list

Displays a list of IPv4 ACLs defined on the switch, including the rules they contain.

<b>Syntax</b>	<b>show running-config ip access-list [ standard   extended ] [ ACL_name ]</b>
<b>Parameters</b>	<b>standard   extended</b> Specifies the ACL type. Not specifying the ACL type displays all IPv4 standard and extended ACLs. <b>ACL_name</b> Specifies the ACL name.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	This command is supported only on the local switch. To display details of IPv4 ACLs bound to interfaces, use the <b>show access-list ip</b> command.
<b>Examples</b>	The following example displays the IPv4 ACLs configured on the switch. <pre>switch# show running-config ip access-list  ip access-list standard stdACL3   seq 5 permit host 10.20.33.4   seq 7 permit any ip access-list extended extdACL5   seq 5 deny tcp host 10.24.26.145 any eq 23   seq 7 deny tcp any any eq 80   seq 10 deny udp any any range 10 25   seq 15 permit tcp any ip access-list extended extdACLwithNoRules</pre>
<b>Related Commands</b>	<a href="#">interface management</a> , <a href="#">ip access-group</a> , <a href="#">ip access-list</a> , <a href="#">show running-config interface management</a> , <a href="#">show access-list</a> , <a href="#">show statistics access-list</a>

## show running-config ip dns

Displays the domain name service (DNS) parameters. The DNS parameters are the domain name and the name server IP address for primary and secondary name servers.

**Syntax** **show running-config ip dns**

**Modes** Privileged EXEC mode

**Examples** To display the configured DNS parameters:

```
switch# show running-config ip dns

ip dns domain-name brocade.com
ip dns name-server 10.70.20.1
ip dns name-server 10.70.20.10
```

**Related  
Commands** [ip dns](#)

## show running-config ip igmp

Displays IGMP configuration information.

**Syntax** `show running-config ip igmp [ snooping [ enable ] ]`

**Parameters** **snooping**

Displays IGMP snooping configuration information.

**enable**

Displays whether IGMP snooping is enabled.

**Modes** Privileged EXEC mode

**Examples** To display IGMP configuration information:

```
switch# show running-config ip igmp
```

**Related Commands** [ip igmp snooping enable](#), [ip igmp snooping enable \(global version\)](#)



## show running-config ip route

Displays routing information.

**Syntax** `show running-config ip route [ routing-table ]`

**Parameters** `routing-table`  
Displays a specific route to a specific destination.

**Modes** Privileged EXEC mode

## show running-config ldap-server

Displays the SSH server status in the running-config.

**Syntax** `show running-config ldap-server [ host ipaddr | host-name ]`

**Parameters** **host**

Identifies the IPv4 address of the host.

***ipaddress***

IPv4 address of the host.

**host-name**

Name of the host.

**Modes** Privileged EXEC mode

**Usage Guidelines** LDAP server configuration is placed at the beginning of the running-config and is part of the global configuration of the switch. LDAP is enabled by default and no entry is shown in the running-config when set to default.

Attributes with default values will not be displayed.

**Examples**

```
switch# show running-config ldap-server host 10.24.65.6

ldap-server host 10.24.65.6
  port          3890
  domain        security.brocade.com
  retries       3
!
```

**Related  
Commands**

[certutil import ldapca](#), [ldap-server host](#), [ldap-server maprole](#)

## show running-config line

Displays command line session configuration information.

**Syntax** `show running-config line [ vty [ exec-timeout ] ]`

**Parameters** `vty`

Displays the terminal type.

`exec-timeout`

Displays the configured idle time in minutes before the command line session automatically logs off.

**Modes** Privileged EXEC mode

**Related  
Commands** [interface](#)

## show running-config logging

Displays the configuration of the logging facilities on the local switch.

**Syntax** `show running-config logging`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

**Examples** To display the logging facilities configured on the local switch:

```
switch# show running-config logging

logging raslog console INFO
logging auditlog class SECURITY
logging auditlog class CONFIGURATION
logging auditlog class FIRMWARE
logging syslog-facility local LOG_LOCAL7
```

**Related Commands** [show running-config logging auditlog class](#), [show running-config logging syslog-server](#)

## show running-config logging auditlog class

Displays the severity level configured for the audit log class.

**Syntax** `show running-config logging auditlog class`

**Command Default** Displays the information for the local switch.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.  
This command is not supported on the standby management module.

**Examples** To display audit log classes enabled on the switch:

```
switch# show running-config logging auditlog class

logging auditlog class SECURITY
logging auditlog class CONFIGURATION
logging auditlog class FIRMWARE
```

**Related Commands** [clear logging auditlog](#), [clear logging raslog](#)

## show running-config logging raslog

Displays the severity level configured for the RASLog console.

**Syntax** `show running-config logging raslog`

**Command Default** Displays the RASLog console configuration.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the configured severity levels for the RASLog console. Valid values consist of one of the following: INFO, WARNING, ERROR, or CRITICAL.

This command is supported only on the local switch.

This command is not supported on the standby management module.

**Examples** To display the severity level configured for the RASLog console:

```
switch# show running-config logging raslog
logging raslog console INFO
```

**Related Commands** [clear logging raslog](#), [logging raslog console](#), [show running-config logging](#)

## show running-config logging syslog-facility

Displays the syslog facility log level.

**Syntax** `show running-config logging syslog-facility [ local ]`

**Command Default** Displays the local configuration.

**Parameters** **local**

Displays the local syslog facility level.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

This command is not supported on the standby management module.

**Examples** To display the syslog daemon IP addresses configured on a switch:

```
switch# show running-config logging syslog-facility
logging syslog-facility local LOG_LOCAL7
```

**Related Commands** [logging syslog-server](#), [show running-config logging syslog-server](#)

## show running-config logging syslog-server

Displays the syslog server configuration.

- Syntax** `show running-config logging syslog-server`
- Modes** Privileged EXEC mode
- Usage Guidelines** Use this command to display the servers that are running the syslogd daemon and to which system messages are sent. Servers are specified in the configuration database by IP address.
- This command is supported only on the local switch.
- This command is not supported on the standby management module.
- Examples** To display the syslog daemon IP addresses configured on a switch:
- ```
switch# show running-config logging syslog-server
logging syslog-server 10.17.17.203
  secure port 6514
!
logging syslog-server 10.17.17.204
```
- Related Commands** [logging syslog-server](#)



## show running-config mac-address-table

Displays configuration information about MAC interfaces and configurations.

**Syntax** `show running-config monitor mac-address-table [ aging-time | static ]`

**Command Default** Default aging time is 300 seconds.

**Parameters**

- aging-time** Specifies the aging time value (in seconds).
- static** Specifies a static MAC address.

**Modes** Privileged EXEC mode

## show running-config monitor

Displays configuration information about the monitor session.

**Syntax** `show running-config monitor { session session_number { description } }`

**Parameters** `session session_number`

The session number to display.

`description`

Displays the session's description.

**Modes** Privileged EXEC mode

**Examples** To display the monitor information:

```
switch# show running-config monitor
monitor session 22
```

## show running-config nas server-ip

Displays information about the specified Auto NAS (automatic network attached storage) interface.

**Syntax** `show running-config nas server-ip`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on Brocade VDX 8770-4, VDX 8770-8, VDX 6740, and VDX 6740T switches.

**Related Commands** [backup-advertisement-interval](#), [clear nas statistics](#), [nas auto-qos](#), [nas server-ip](#), [show nas statistics](#), [show system internal nas](#), [show cee maps](#)

show running-config ntp

## show running-config ntp

Displays the Network Time Protocol (NTP) server configuration.

**Syntax** `show running-config ntp`

**Modes** Privileged EXEC mode

**Examples** To display the configured NTP server

```
switch# show running-config ntp
ntp server 172.26.1.159
```

**Related  
Commands** [ntp server](#), [show ntp status](#)

# show running-config overlay-gateway

Displays the configured characteristics for an overlay gateway.

## Syntax

### Draft comment:

<<<ShivAnand Thanks for your explanation that the "Possible match completions" below are filter options rather than configuration options. However, please consider opening a defect concerning the "Configure" descriptions and sub-commands, which look like they were pasted from the overlay-gateway topic without editing them. Also, please note the following typo: "Description: Configure <<<Overaly gateway instance."

<<< Log on 10.25.224.18 running 5.0.0\_bld42, Aug. 25, 2014.

```
sw0# show running-config overlay-gateway ?
Description: Configure Overaly gateway instance
```

Possible completions:

```
gateway1 | <cr>
```

Possible match completions:

```
activate  Activate the Overlay Gateway instance
attach     Configure attachments
enable     Enable statistics
ip         IP address configuration for the Overlay Gateway
map        Specify the vlan to vni mappings for the Overlay Gateway.
monitor    Configure SPAN for the tunnels of this gateway
sflow      Configure Sflow for the tunnels of this gateway
site       Configure remote extension site
type       Configure the type of Overlay Gateway.
```

<<<TW I suggest not to document the "Possible match completions" filtering options until the incorrect description text and command flow are listed as defects.

**show running-config overlay-gateway** [ *gateway\_name* ]

## Parameters

**gateway\_name**

Specifies the overlay-gateway name. Since Network OS supports only one overlay-gateway on a switch, you do not need to enter this parameter. The default name is "gateway1".

## Modes

Privileged EXEC mode

## Command Output

The **show running-config overlay-gateway** command displays the following information:

| Output field      | Description                                                                               |
|-------------------|-------------------------------------------------------------------------------------------|
| mac access-group  | Specifies the name of a Layer 2 access control list (ACL) applied to the overlay gateway. |
| ip access-group   | Specifies the name of an IPv4 ACL applied to the overlay gateway.                         |
| ipv6 access-group | Specifies the name of an IPv6 ACL applied to the overlay gateway.                         |

**Examples** The following example displays the overlay-gateway running configuration for an overlay gateway that includes multiple sites.

```
sw0# show running-config overlay-gateway
overlay-gateway gw121
type layer2-extension
ip interface Loopback 11
attach rbridge-id add 1-2
map vlan 1 vni 5001
map vlan 10 vni 5010
map vlan 2 vni 5002
map vlan 3 vni 5003
map vlan 4 vni 5004
map vlan 5 vni 5005
map vlan 6 vni 5006
map vlan 7 vni 5007
map vlan 8 vni 5008
map vlan 9 vni 5009
site b
  ip address 2.2.2.2
  extend vlan add 3-4
!
site br
  ip address 3.3.3.3
  extend vlan add 5-6
!
site mu
  ip address 4.4.4.4
  extend vlan add 7-10
!
site san
  ip address 1.1.1.1
  extend vlan add 1-2
!
enable statistics direction both vlan add 5-10
monitor session 11 direction both remote-endpoint any vlan add 5-10
sflow sflowprofile1 remote-endpoint any vlan add 5-10
mac access-group stdmacaclin in
ip access-group stdipaclin in
ipv6 access-group stdipv6aclin in
```

**Related Commands** [overlay-gateway, show overlay-gateway](#)

# show running-config password-attributes

Displays global password attributes.

**Syntax** **show running-config password-attributes**

**Modes** Privileged EXEC mode

**Usage Guidelines** The attributes will not be displayed when they hold default values.

**Examples** To display the global password attributes:

```
switch# show running-config password-attributes

password-attributes max-retry 4
password-attributes character-restriction upper 1
password-attributes character-restriction lower 2
password-attributes character-restriction numeric 1
password-attributes character-restriction special-char 1
```

**Related  
Commands** [service password-encryption](#)

## show running-config police-priority-map

Displays configured police-priority-maps.

**Syntax** `show running-config class-map`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is only supported on Brocade VDX 8770-4, VDX 8770-8, and later switches.

**Examples** To display configured police-priority-maps:

```
switch# configure terminal
switch(config)# do show running-config police-priority-map

police-priority-map pmap1
conform 0 1 1 2 1 2 1 1
exceed 3 3 3 3 4 5 6 7
```

**Related  
Commands** [police-priority-map](#)



## show running-config policy-map

Displays the currently running policy-map configurations.

**Syntax** `show running-config policy-map`

**Modes** Privileged EXEC mode

**Usage Guidelines** Output includes the policy-map name, class-map name, and class-map configuration.

**Examples** To currently running policy-maps and their configuration:

```
switch# show running-config policy-map

policy-map policy_map1
  class default
    police cir 50000 cbs 500000 eir 60000 ebs 40000 set-priority prio_map1 conform-set-
dscp 23 conform-set-tc 4 exceed-set-prec 2 exceed-set-tc 5
  !
policy-map policy_map2
  class default
    police cir 1000000 cbs 200000
```

**Related Commands** [class](#), [policy-map](#), [qos cos](#), [show running-config class-map](#)

## show running-config port-profile

Displays configured AMPP port-profiles.

**Syntax** `show running-config port-profile [ name ]`

**Parameters** *name*

Specifies the name of a port-profile. If no name is provided, information about all port-profiles is displayed.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show running-config port-profile

port-profile default
vlan-profile
switchport
switchport mode trunk
switchport trunk allowed vlan all
switchport trunk native-vlan 1
```

**Related  
Commands**

[port-profile \(global configuration mode\)](#), [show port-profile](#), [show running-config port-profile activate](#), [show running-config port-profile fcoe-profile](#), [show running-config port-profile qos-profile](#), [show running-config port-profile security-profile](#), [show running-config port-profile static](#), [show running-config port-profile vlan-profile](#), [show running-config port-profile-domain](#)

## show running-config port-profile activate

Displays activated AMPP port-profiles.

**Syntax** `show running-config port-profile [ name ] activate`

**Parameters** *name*

Specifies the name of a port-profile. If no name is provided, information about all activated port-profiles is displayed.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command display port profiles that are activated. These port profiles are available for association with MAC addresses.

**Related Commands** [port-profile \(global configuration mode\)](#), [show running-config port-profile](#)

## show running-config port-profile fcoe-profile

Displays the configured FCOE subprofile.

|                         |                                                                                                                                                                          |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>show running-config port-profile [ <i>name</i> ] fcoe-profile [ fcoeport [ default ] ]</b>                                                                            |
| <b>Parameters</b>       | <b><i>name</i></b><br>Specifies the name of a port-profile. If no name is provided, information about all port-profiles with the FCOE profile applied is displayed.      |
|                         | <b>fcoeport [ default ]</b><br>Specifies an FCOE map name. The only map name supported currently is "default."                                                           |
| <b>Modes</b>            | Privileged EXEC mode                                                                                                                                                     |
| <b>Related Commands</b> | <a href="#">fcoe</a> , <a href="#">fcoe-profile (AMPP)</a> , <a href="#">port-profile (global configuration mode)</a> , <a href="#">show running-config port-profile</a> |

## show running-config port-profile qos-profile

Displays the configured Quality of Service (QoS) subprofile.

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>show running-config port-profile</b> [ <i>name</i> ] <b>qos-profile</b> [ <b>cee</b> [ <i>name</i> ] ]   <b>qos</b> [ <b>cos</b> <i>cos</i>   <b>cos-mutation</b> <i>name</i>   <b>cos-traffic-class</b> <i>name</i>   <b>flowcontrol</b> [ <b>pfc</b>   <b>rx</b>   <b>tx</b> ]   <b>trust</b> [ <b>cos</b> ] ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Parameters</b>       | <p><b>name</b></p> <p>Specifies the name of a port-profile. If no name is provided, information about all port-profiles with the QoS subprofile applied is displayed.</p> <p><b>cee [ name ]</b></p> <p>The configured QoS CEE map.</p> <p><b>qos</b></p> <p>The QoS profile.</p> <p><b>cos cos</b></p> <p>The configured default class of service (CoS).</p> <p><b>cos-mutation name</b></p> <p>The applied Cos-to-Cos mutation map.</p> <p><b>cos-traffic-class name</b></p> <p>The applied Cos-to-Traffic class map.</p> <p><b>flowcontrol</b></p> <p>The configured IEEE 802.3x flow control.</p> <p><b>pfc</b></p> <p>Whether priority-based flow control (PFC) is enabled.</p> <p><b>rx</b></p> <p>Whether Pause reception is enabled.</p> <p><b>tx</b></p> <p>Whether Pause generation is enabled.</p> <p><b>trust</b></p> <p>The configured QoS trust configuration.</p> <p><b>cos</b></p> <p>Whether the Layer 2 CoS field in incoming packets is configured as trusted for deriving the internal traffic class.</p> |
| <b>Modes</b>            | Privileged EXEC mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Commands</b> | <a href="#">port-profile (global configuration mode)</a> , <a href="#">qos cos</a> , <a href="#">qos cos-mutation</a> , <a href="#">qos flowcontrol pfc</a> , <a href="#">qos flowcontrol</a> , <a href="#">qos map cos-traffic-class</a> , <a href="#">qos-profile (AMPP)</a> , <a href="#">security-profile (AMPP)</a> , <a href="#">show running-config port-profile</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

## show running-config port-profile security-profile

Displays security subprofiles.

|                         |                                                                                                                                                                                                                              |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>show running-config port-profile</b> [ <i>name</i> ] <b>security-profile</b> [ <b>mac</b> [ <b>access-group</b> [ <i>acl-name</i>   <b>in</b> ] ] ]                                                                       |
| <b>Parameters</b>       | <b>name</b><br>Specifies the name of a port-profile. If no name is provided, information about all port-profiles with the security subprofile applied is displayed.                                                          |
|                         | <b>mac</b><br>The configured MAC parameters.                                                                                                                                                                                 |
|                         | <b>access-group</b><br>The applied ACL.                                                                                                                                                                                      |
|                         | <b>acl-name</b><br>Specifies an ACL.                                                                                                                                                                                         |
|                         | <b>in</b><br>Ingress direction.                                                                                                                                                                                              |
| <b>Modes</b>            | Privileged EXEC mode                                                                                                                                                                                                         |
| <b>Related Commands</b> | <a href="#">mac access-group</a> , <a href="#">show running-config port-profile</a> , <a href="#">port-profile (global configuration mode)</a> , <a href="#">port-profile-port</a> , <a href="#">security-profile (AMPP)</a> |

## show running-config port-profile static

Displays statically associated VM MAC addresses and the port profiles with which they are statically associated.

**Syntax** `show running-config port-profile [ name ] static [ mac-address ]`

**Parameters** *name*

Specifies the name of a port-profile. If no name is provided, information about all port-profiles associated with VM MAC addresses is displayed.

*mac-address*

Displays the port-profile associated with a specific MAC address.

**Modes** Privileged EXEC mode

**Related Commands** [port-profile \(global configuration mode\)](#), [show running-config port-profile](#)

## show running-config port-profile vlan-profile

Displays information about VLAN subprofiles.

|                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>     | <b>show running-config port-profile</b> [ <i>name</i> ] <b>vlan-profile</b> [ <b>switchport</b> [ <b>access</b> [ <b>vlan</b> [ <i>vlan_id</i> ] ] ]   <b>mode</b> [ <b>access</b>   <b>trunk</b> ]   <b>trunk</b> [ <b>allowed</b> [ <b>vlan</b> [ <b>add</b> [ <i>vlan_id</i> ]   <b>all</b>   <b>except</b> <i>vlan_id</i>   <b>none</b>   <b>remove</b> [ <i>vlan_id</i> ] ] ]   <b>native-vlan</b> <i>vlan_id</i> ] ] ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Parameters</b> | <p><b>name</b><br/>Specifies the name of a port-profile. If no name is provided, information about all port-profiles with a VLAN subprofile applied is displayed.</p> <p><b>switchport</b><br/>Specifies the configured switching characteristics of the Layer 2 interfaces.</p> <p><b>access</b><br/>Specifies VLAN interfaces for which access is configured for the VLAN profile mode.</p> <p><b>vlan <i>vlan_id</i></b><br/>Specifies a VLAN interface configured for access.</p> <p><b>mode</b><br/>Specifies the configured mode of the Layer 2 interface.</p> <p><b>access</b><br/>Specifies Layer 2 interfaces configured for access mode.</p> <p><b>trunk</b><br/>Specifies Layer 2 interfaces configured for trunk mode.</p> <p><b>trunk</b><br/>Specifies Layer 2 interfaces configured for trunk mode.</p> <p><b>allowed</b><br/>Specifies VLANs that are configured to transmit and receive through the Layer 2 interface.</p> <p><b>vlan add [ <i>vlan_id</i> ]</b><br/>Specifies VLANs that are allowed to transmit and receive through the Layer 2 interface.</p> <p><b>vlan all</b><br/>Specifies all VLANs that are allowed to transmit and receive through the Layer 2 interface.</p> <p><b>vlan except <i>vlan_id</i></b><br/>Specifies VLANs that are excluded from transmitting and receiving through the Layer 2 interface.</p> <p><b>vlan none</b><br/>Specifies VLANs that are allowed to transmit and receive through the Layer 2 interface.</p> <p><b>vlan remove [ <i>vlan_id</i> ]</b><br/>Specifies VLANs to be removed from those allowed to transmit and receive through the Layer 2 interface.</p> <p><b>native-vlan <i>vlan_id</i></b><br/>Specifies native VLANs configured to classify untagged traffic</p> |
| <b>Modes</b>      | Privileged EXEC mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |



**Examples**

```
switch# show running-config port-profile vlan-profile

port-profile default
  vlan-profile
    switchport
      switchport mode trunk
      switchport trunk allowed vlan all
      switchport trunk native-vlan 1
  !
  !
switch# show running-config port-profile vlan-profile switchport trunk native-vlan

port-profile default
  vlan-profile
    switchport trunk native-vlan 1
  !
  !
```

**Related  
Commands**

[port-profile \(global configuration mode\)](#), [show running-config port-profile](#), [switchport](#), [switchport access](#), [switchport mode](#), [switchport trunk allowed vlan rspan-vlan](#), [vlan-profile \(AMPP\)](#)

## show running-config port-profile-domain

Displays the port-profile domains and their associated port-profiles.

**Syntax** `show running-config port-profile-domain`

**Modes** Privileged EXEC mode

### Usage Guidelines

```
switch# show running-config port-profile-domain
port-profile-domain PP0
  port-profile pp1
  port-profile pp4
!
port-profile-domain PP1
  port-profile pp3
  port-profile pp4
```

## show running-config protocol cdp

Displays the Cisco Discovery Protocol (CDP) information.

**Syntax** `show running-config protocol cdp`

**Modes** Privileged EXEC mode

## show running-config protocol edge

Displays the Edge Loop Detection (ELD) parameters.

**Syntax** `show running-config protocol edge { hello-interval | pdu-rx-limit | shutdown-time }`

**Parameters** **hello-interval**

Displays the hello-interval-limit value.

**pdu-rx-limit**

Displays the bpdu-rx-limit value.

**shutdown-time**

Displays the shutdown-time-limit value.

**Modes** Privileged EXEC mode

## show running-config protocol lldp

Displays the Link Layer Discovery Protocol (LLDP) parameters.

|                   |                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>     | <b>show running-config protocol lldp advertise</b> { { <b>dcbx-fcoe-app-tlv</b>   <b>dcbx-fcoe-logical-link-tlv</b>   <b>dcbx-iscsi-app-tlv</b>   <b>dcbx-tlv</b>   <b>dot1-tlv</b>   <b>dot3-tlv</b>   <b>optional-tlv</b> }   <b>description</b>   <b>disable</b>   <b>hello</b>   <b>iscsi-priority</b>   <b>mode</b>   <b>multiplier</b>   <b>profile</b> { <b>description</b> }   <b>system-description</b>   <b>system-name</b> } |
| <b>Parameters</b> | <b>advertise</b><br>Displays the Advertise TLV configuration information.                                                                                                                                                                                                                                                                                                                                                               |
|                   | <b>dcbx-fcoe-app-tlv</b><br>Displays the IEEE Data Center Bridging eXchange FCoE Application TLV information.                                                                                                                                                                                                                                                                                                                           |
|                   | <b>dcbx-fcoe-logical-link-tlv</b><br>Displays the IEEE Data Center Bridging eXchange FCoE Logical Link TLV information.                                                                                                                                                                                                                                                                                                                 |
|                   | <b>dcbx-iscsi-app-tlv</b><br>Displays the IEEE Data Center Bridging eXchange iSCSI Application TLV information.                                                                                                                                                                                                                                                                                                                         |
|                   | <b>dcbx-tlv</b><br>Displays the IEEE Data Center Bridging eXchange TLV information.                                                                                                                                                                                                                                                                                                                                                     |
|                   | <b>dot1-tlv</b><br>Displays the IEEE 802.1 Organizationally Specific TLV information.                                                                                                                                                                                                                                                                                                                                                   |
|                   | <b>dot3-tlv</b><br>Displays the IEEE 802.3 Organizationally Specific TLV information.                                                                                                                                                                                                                                                                                                                                                   |
|                   | <b>optional-tlv</b><br>Displays the Optional TLVs information.                                                                                                                                                                                                                                                                                                                                                                          |
|                   | <b>description</b><br>Displays the User description                                                                                                                                                                                                                                                                                                                                                                                     |
|                   | <b>disable</b><br>Displays the Disable LLDP                                                                                                                                                                                                                                                                                                                                                                                             |
|                   | <b>hello</b><br>Displays the Hello Transmit interval.                                                                                                                                                                                                                                                                                                                                                                                   |
|                   | <b>iscsi-priority</b><br>Displays the Ethernet priority to advertise for iSCSI                                                                                                                                                                                                                                                                                                                                                          |
|                   | <b>mode</b><br>Displays the LLDP mode.                                                                                                                                                                                                                                                                                                                                                                                                  |
|                   | <b>multiplier</b><br>Displays the Timeout Multiplier                                                                                                                                                                                                                                                                                                                                                                                    |
|                   | <b>profile description</b><br>Displays the LLDP Profile table and description.                                                                                                                                                                                                                                                                                                                                                          |
|                   | <b>system-description</b><br>Displays the System Description.                                                                                                                                                                                                                                                                                                                                                                           |
|                   | <b>system-name</b><br>Displays the System Name                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Modes</b>      | Privileged EXEC mode                                                                                                                                                                                                                                                                                                                                                                                                                    |

## show running-config protocol spanning-tree mstp

Displays the protocol configuration information for MSTP.

|                         |                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>show running-config protocol spanning-tree mstp</b> [ <b>bridge-priority</b>   <b>cisco-interopability</b>   <b>description</b>   <b>error-disable-timeout</b>   <b>forward-delay</b>   <b>instance</b>   <b>max-age</b>   <b>max-hops</b>   <b>port-channel</b>   <b>region</b>   <b>revision</b>   <b>information</b>   <b>shutdown</b>   <b>transmit-holdcount</b>   <b>vlan</b> ] |
| <b>Parameters</b>       | <b>bridge-priority</b><br>Displays the Bridge priority commands.                                                                                                                                                                                                                                                                                                                         |
|                         | <b>cisco-interopability</b><br>Displays the Cisco Interoperability status.                                                                                                                                                                                                                                                                                                               |
|                         | <b>description</b><br>Displays the spanning tree description.                                                                                                                                                                                                                                                                                                                            |
|                         | <b>error-disable-timeout</b><br>Displays the Error-disable-timeout for the spanning tree.                                                                                                                                                                                                                                                                                                |
|                         | <b>forward-delay</b><br>Displays the forward delay for the spanning tree.                                                                                                                                                                                                                                                                                                                |
|                         | <b>hello-time</b><br>Displays the hello time settings.                                                                                                                                                                                                                                                                                                                                   |
|                         | <b>instance</b><br>Displays the MST instance.                                                                                                                                                                                                                                                                                                                                            |
|                         | <b>max-age</b><br>Displays the max age for the spanning tree.                                                                                                                                                                                                                                                                                                                            |
|                         | <b>max-hops</b><br>Displays the MST max hop count.                                                                                                                                                                                                                                                                                                                                       |
|                         | <b>port-channel</b><br>Displays the status of port-channel for spanning-tree.                                                                                                                                                                                                                                                                                                            |
|                         | <b>region</b><br>Displays the MST region.                                                                                                                                                                                                                                                                                                                                                |
|                         | <b>revision</b><br>Displays the revision number for configuration information.                                                                                                                                                                                                                                                                                                           |
|                         | <b>shutdown</b><br>Displays the status of the spanning-tree protocol.                                                                                                                                                                                                                                                                                                                    |
|                         | <b>transmit-holdcount</b><br>Displays the current transmit hold count of the bridge.                                                                                                                                                                                                                                                                                                     |
|                         | <b>vlan</b><br>Displays the VLAN ID                                                                                                                                                                                                                                                                                                                                                      |
| <b>Modes</b>            | Privileged EXEC mode                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Commands</b> | <a href="#">spanning-tree shutdown</a>                                                                                                                                                                                                                                                                                                                                                   |

## show running-config protocol spanning-tree pvst

Displays the protocol configuration information for PVST.

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>show running-config protocol spanning-tree pvst</b> [ <b>bridge-priority</b>   <b>cisco-interopability</b>   <b>description</b>   <b>error-disable-timeout</b>   <b>forward-delay</b>   <b>instance</b>   <b>max-age</b>   <b>max-hops</b>   <b>port-channel</b>   <b>region</b>   <b>revision</b>   <b>information</b>   <b>shutdown</b>   <b>transmit-holdcount</b>   <b>vlan</b> ]                                                                                                                                                                                                                                                                                                |
| <b>Parameters</b>       | <p><b>bridge-priority</b><br/>Displays the Bridge priority commands.</p> <p><b>description</b><br/>Displays the spanning tree description.</p> <p><b>error-disable-timeout</b><br/>Displays the Error-disable-timeout for the spanning tree.</p> <p><b>forward-delay</b><br/>Displays the forward delay for the spanning tree.</p> <p><b>hello-time</b><br/>Displays the hello time settings.</p> <p><b>max-age</b><br/>Displays the max age for the spanning tree.</p> <p><b>port-channel</b><br/>Displays the status of port-channel for spanning-tree.</p> <p><b>shutdown</b><br/>Displays the status of the spanning-tree protocol.</p> <p><b>vlan</b><br/>Displays the VLAN ID</p> |
| <b>Modes</b>            | Privileged EXEC mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Related Commands</b> | <a href="#">spanning-tree shutdown</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

## show running-config protocol spanning-tree rpvst

Displays the protocol configuration information for RPVST.

|                         |                                                                                                                                                                                                                                                                                  |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>show running-config protocol spanning-tree rpvst [ bridge-priority   cisco-interopability   description   error-disable-timeout   forward-delay   instance   max-age   max-hops   port-channel   region   revision   information   shutdown   transmit-holdcount   vlan ]</b> |
| <b>Parameters</b>       | <b>bridge-priority</b><br>Displays the Bridge priority commands.                                                                                                                                                                                                                 |
|                         | <b>cisco-interopability</b><br>Displays the Cisco Interoperability status.                                                                                                                                                                                                       |
|                         | <b>description</b><br>Displays the spanning tree description.                                                                                                                                                                                                                    |
|                         | <b>error-disable-timeout</b><br>Displays the Error-disable-timeout for the spanning tree.                                                                                                                                                                                        |
|                         | <b>forward-delay</b><br>Displays the forward delay for the spanning tree.                                                                                                                                                                                                        |
|                         | <b>hello-time</b><br>Displays the hello time settings.                                                                                                                                                                                                                           |
|                         | <b>max-age</b><br>Displays the max age for the spanning tree.                                                                                                                                                                                                                    |
|                         | <b>port-channel</b><br>Displays the status of port-channel for spanning-tree.                                                                                                                                                                                                    |
|                         | <b>shutdown</b><br>Displays the status of the spanning-tree protocol.                                                                                                                                                                                                            |
|                         | <b>transmit-holdcount</b><br>Displays the current transmit hold count of the bridge.                                                                                                                                                                                             |
|                         | <b>vlan</b><br>Displays the VLAN ID                                                                                                                                                                                                                                              |
| <b>Modes</b>            | Privileged EXEC mode                                                                                                                                                                                                                                                             |
| <b>Related Commands</b> | <a href="#">spanning-tree shutdown</a>                                                                                                                                                                                                                                           |



## show running-config protocol spanning-tree rstp

Displays the protocol configuration information for RSTP.

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>show running-config protocol spanning-tree rstp</b> [ <b>bridge-priority</b>   <b>cisco-interoperability</b>   <b>description</b>   <b>error-disable-timeout</b>   <b>forward-delay</b>   <b>instance</b>   <b>max-age</b>   <b>max-hops</b>   <b>port-channel</b>   <b>region</b>   <b>revision</b>   <b>information</b>   <b>shutdown</b>   <b>transmit-holdcount</b>   <b>vlan</b> ]                                                                                                                                                                                                                                                                                                                                               |
| <b>Parameters</b>       | <p><b>bridge-priority</b><br/>Displays the Bridge priority commands.</p> <p><b>description</b><br/>Displays the spanning tree description.</p> <p><b>error-disable-timeout</b><br/>Displays the Error-disable-timeout for the spanning tree.</p> <p><b>forward-delay</b><br/>Displays the forward delay for the spanning tree.</p> <p><b>hello-time</b><br/>Displays the hello time settings.</p> <p><b>max-age</b><br/>Displays the max age for the spanning tree.</p> <p><b>port-channel</b><br/>Displays the status of port-channel for spanning-tree.</p> <p><b>shutdown</b><br/>Displays the status of the spanning-tree protocol.</p> <p><b>transmit-holdcount</b><br/>Displays the current transmit hold count of the bridge.</p> |
| <b>Modes</b>            | Privileged EXEC mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Commands</b> | <a href="#">spanning-tree shutdown</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

## show running-config protocol spanning-tree stp

Displays the protocol configuration information for STP.

|                         |                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>show running-config protocol spanning-tree stp</b> [ <b>bridge-priority</b>   <b>cisco-interoperability</b>   <b>description</b>   <b>error-disable-timeout</b>   <b>forward-delay</b>   <b>instance</b>   <b>max-age</b>   <b>max-hops</b>   <b>port-channel</b>   <b>region</b>   <b>revision</b>   <b>information</b>   <b>shutdown</b>   <b>transmit-holdcount</b>   <b>vlan</b> ] |
| <b>Parameters</b>       | <b>bridge-priority</b><br>Displays the Bridge priority commands.                                                                                                                                                                                                                                                                                                                          |
|                         | <b>description</b><br>Displays the spanning tree description.                                                                                                                                                                                                                                                                                                                             |
|                         | <b>error-disable-timeout</b><br>Displays the Error-disable-timeout for the spanning tree.                                                                                                                                                                                                                                                                                                 |
|                         | <b>forward-delay</b><br>Displays the forward delay for the spanning tree.                                                                                                                                                                                                                                                                                                                 |
|                         | <b>hello-time</b><br>Displays the hello time settings.                                                                                                                                                                                                                                                                                                                                    |
|                         | <b>max-age</b><br>Displays the max age for the spanning tree.                                                                                                                                                                                                                                                                                                                             |
|                         | <b>port-channel</b><br>Displays the status of port-channel for spanning-tree.                                                                                                                                                                                                                                                                                                             |
|                         | <b>shutdown</b><br>Displays the status of the spanning-tree protocol.                                                                                                                                                                                                                                                                                                                     |
| <b>Modes</b>            | Privileged EXEC mode                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Commands</b> | <a href="#">spanning-tree shutdown</a>                                                                                                                                                                                                                                                                                                                                                    |

## show running-config protocol udd

Displays the UDLD global parameters.

**Syntax** `show running-config protocol udd advertise { hello | multiplier | shutdown }`

**Command Default** This command has no defaults.

**Parameters** **hello**

Displays the Hello Transmit interval.

**multiplier**

Displays the Timeout Multiplier.

**shutdown**

Displays the shutdown status.

**Modes** Privileged EXEC mode

## show running-config radius-server

Displays the local switch configuration for the RADIUS server from the configuration database.

|                         |                                                                                                                                                                                                                                                 |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>show running-config radius-server host</b> { <i>ip-address</i>   <i>hostname</i> }                                                                                                                                                           |
| <b>Parameters</b>       | <b>host</b><br>Identifies the RADIUS server by host name or IP address.<br><b>hostname</b><br>Specifies the host name of the RADIUS server.<br><b>ip-address</b><br>Specifies the IP address of the RADIUS server. IPv4 and IPv6 are supported. |
| <b>Modes</b>            | Privileged EXEC mode                                                                                                                                                                                                                            |
| <b>Examples</b>         | <pre>switch# show running-config radius-server host 10.38.37.180<br/><br/>radius-server host 10.38.37.180<br/>protocol    pap<br/>key         changedsec<br/>timeout     3</pre>                                                                |
| <b>Related Commands</b> | <a href="#">radius-server</a> , <a href="#">show running-config tacacs-server</a> , <a href="#">tacacs-server</a>                                                                                                                               |

# show running-config rbridge-id

Displays configuration for the RBridge ID.

**Syntax** `show running-config rbridge-id rbridge-id [fcoe]`

**Parameters** *rbridge-id*

Specifies an RBridge ID.

*fcoe*

Displays the FCoE information for the RBridge ID.

**Modes** Privileged EXEC mode

**Examples** switch# show running-config rbridge-id 2

```
rbridge-id 2
 interface-nodespecific ns-vlan 10
 interface-nodespecific ns-ethernet 100
 fabric vlag 10 load-balance src-dst-mac-vid
 fabric vlag 20 load-balance dst-mac-vid
 no protocol vrrp
```

```
switch# show running-config rbridge-id 21 fcoe
rbridge-id 21
 fcoe
  fcoe-enodes 1000
```

**Related Commands** [show fabric ecmp load-balance](#)

## show running-config rbridge-id hardware-profile

Displays the route table and TCAM profiles in the running configuration for all RBridge IDs or a specified RBridge ID.

**Syntax** `show running-config rbridge-id [rbridge-id] hardware-profile [ route-table [ default | ipv4-max-route | ipv4-max-arp | ipv4-min-v6 | ipv6-max-route | ipv6-max-nd ] | tcam [ default | ipv4-max-route | ipv4-max-arp | ipv4-min-v6 | ipv6-max-route | ipv6-max-nd ] ]`

**Parameters** **rbridge-id**

Specifies an RBridge ID or all RBridge IDs.

***rbridge-id***

Range is from 1 through 239. This option is available only in logical chassis cluster mode.

**route-table**

Specifies hardware resources for route profiles.

**default**

Specifies IPv4/IPv6 resources for dual-stack operations.

**ipv4-max-route**

Specifies resources for the maximum number of IPv4 routes.

**ipv4-max-arp**

Specifies resources for the maximum number of IPv4 ARP entries.

**ipv4-min-v6**

Specifies resources for IPv4 routes in dual-stack configurations.

**ipv6-max-route**

Specifies resources for the maximum number of IPv6 routes.

**ipv6-max-nd**

Specifies resources for the maximum number of IPv6 Neighbor Discovery entries.

**tcam**

Specifies hardware resources for TCAM profiles.

**default**

Specifies resources with basic support for all applications.

**l2-ipv4-acl**

Specifies resources for Layer 2 and IPv4 ACLs.

**ipv4-v6-pbr**

Specifies resources for IPv4 and IPv6 ACLs and policy-based routing tables.

**ipv4-v6-qos**

Specifies resources for IPv4 and IPv6 ACLs and QoS.

**ipv4-v6-mcast**

Specifies resources for multicast.

**l2-acl-qos**

Specifies resources for Layer 2 ACLs and QoS.

**Modes** Privileged EXEC mode

**Examples    Displaying hardware profile configuration on the local switch**

The following shows the use of the **show running-config rbridge-id hardware-profile** command, without the specification of an RBridge ID, to display the results of the configuration on the local switch. You can also specify an RBridge ID.

```
switch# show running-config rbridge-id hardware-profile
rbridge-id 11
  hardware-profile tcam ipv4-v6-mcast
  hardware-profile route-table ipv6-max-nd
!
rbridge-id 12
  hardware-profile tcam 12-ipv4-acl
  hardware-profile route-table ipv4-max-arp
```

## show running-config rbridge-id linecard

Displays the line card configuration.

**Syntax** `show running-config rbridge-id rbridge-id linecard`

**Parameters** *rbridge-id*  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command must be executed in the current RBridge ID context.

**Examples** To display the line card configuration for the local switch:

```
switch# show running-config rbridge-id 1 linecard  
  
rbridge-id 1  
linecard 1 LC48x10G  
linecard 2 LC48x10G  
linecard 3 LC12x40G  
linecard 4 LC48x10G
```

**Related  
Commands** [linecard](#)



## show running-config rbridge-id ssh

Displays the Secure Shell (SSH) configuration for an RBridge ID.

**Syntax** `show running-config rbridge-id rbridge-id ssh`

**Parameters** *rbridge-id*  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

show running-config rmon

## show running-config rmon

Displays Remote Monitor configuration information.

**Syntax** `show running-config rmon [ alarm | event ]`

**Parameters** **alarm**

Displays the Remote Monitor alarm configuration.

**event**

Displays the Remote Monitor event configuration

**Modes** Privileged EXEC mode

**Related  
Commands** [rmon alarm](#), [rmon event](#)

## show running-config role

Displays the configured roles.

**Syntax** `show running-config role [ name role_name ]`

**Parameters** `name role_name`  
Specifies role assigned to the user.

**Modes** Privileged EXEC mode

**Examples** To display the roles configured on the switch:

```
switch# show running-config role

role name VLANAdmin desc "Manages security CLIs"
role name NetworkAdmin desc "Manages Network CLIs"
role name ClusterAdmin desc "Manages Cluster CLIs"
```

**Related Commands** [role name](#), [rule](#), [show running-config rule](#)

## show running-config route-map

Displays the status of a route-map application on the specified interface.

**Syntax** `show running-config route-map [ name ]`

**Parameters** *name*  
Specifies the name of the route-map.

**Modes** Privileged EXEC mode

**Usage Guidelines** There is no need to specify the route map name as the user is only allowed to apply a single route map to an interface.

### Examples

```
sw0# show running-config route-map abc
ip policy route-map abc permit 20
  match ip address acl Vincent
  set ip vrf pulp_fiction next-hop 3.3.3.5
  set ip next-hop 4.4.4.4switch#
```

**Related Commands** [route-map](#)

# show running-config rule

Displays configured access rules.

**Syntax** `show running-config rule [ index ] [ { action { reject | accept } | command command_name | operation { read-only | read-write } | role role_number } ]`

**Parameters** **rule**

Displays all configured rules

***index***

Displays the rule with the specified index number. The valid range is from 1 through 512.

**action { **reject** | **accept** }**

Displays all rules with the specified action: accept or reject.

**command *command\_name***

Displays all rules for the specified command. Type a question mark (?) to display a list of valid commands.

**operation { **read-only** | **read-write** }**

Displays the operation for the command.

**role *role\_number***

Displays all rules for the specified role.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command without parameters to display rules that have been defined and associated with a particular role.

**Examples** To display the configured roles and their access rules:

```
switch# show running-config rule

rule 30 action accept operation read-write role NetworkSecurityAdmin
rule 30 command role
!
rule 31 action accept operation read-write role NetworkSecurityAdmin
rule 31 command rule
!
rule 32 action accept operation read-write role NetworkSecurityAdmin
rule 32 command username
!
rule 33 action accept operation read-write role NetworkSecurityAdmin
rule 33 command aaa
!
rule 34 action accept operation read-write role NetworkSecurityAdmin
rule 34 command radius-server
!
rule 35 action accept operation read-write role NetworkSecurityAdmin
rule 35 command configure
!
rule 40 action accept operation read-write role FCOEAdmin
rule 40 command "interface fcoe"
```

To display a single rule:

```
switch# show running-config rule 30

rule 30
  action accept operation read-write role NetworkSecurityAdmin
  command role
```

Show commands

**Related  
Commands**    [role name, rule, show running-config role](#)

## show running-config secpolicy

Displays the Switch Connection Control (SCC) security policy information.

**Syntax** `show running-config [ rbridge-id { rbridge-id | all } ] secpolicy { defined-policy | active-policy }`

**Parameters** **defined-policy**

Displays the defined policy and its policy member set.

**active-policy**

Displays the active policy and its policy member set.

**rbridge-id**

Specifies an RBridge or all RBridges.

***rbridge-id***

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the active policy and the defined policy and its policy member set. The **rbridge-id** parameter is supported in VCS mode only.

**Examples** To show only the defined policy of rbridge-id 3:

```
switch# show running-config rbridge-id 3 secpolicy defined-policy
rbridge-id 3
secpolicy defined-policy SCC_POLICY
 member-entry aa:aa:aa:aa:aa:aa:aa:aa:aa
 !
 member-entry bb:bb:bb:bb:bb:bb:bb:bb:bb
 !
 member-entry cc:cc:cc:cc:cc:cc:cc:cc:cc
 !
 !
switch#
```

To show only the active policy of rbridge-id 3:

```
switch# show running-config rbridge-id 3 secpolicy active-policy
rbridge-id 3
secpolicy active-policy SCC_POLICY
 member-entry aa:aa:aa:aa:aa:aa:aa:aa:aa
 !
 member-entry bb:bb:bb:bb:bb:bb:bb:bb:bb
 !
 member-entry cc:cc:cc:cc:cc:cc:cc:cc:cc
 !
 !
switch#
```

## Show commands

To show both active and defined policies of rbridge-id 3:

```
switch# show running-config rbridge-id 3 secpolicy
rbridge-id 3
secpolicy defined-policy SCC_POLICY
member-entry aa:aa:aa:aa:aa:aa:aa:aa:aa
!
member-entry bb:bb:bb:bb:bb:bb:bb:bb:bb
!
member-entry cc:cc:cc:cc:cc:cc:cc:cc:cc
!
!
secpolicy active-policy SCC_POLICY
member-entry aa:aa:aa:aa:aa:aa:aa:aa:aa
!
member-entry bb:bb:bb:bb:bb:bb:bb:bb:bb
!
member-entry cc:cc:cc:cc:cc:cc:cc:cc:cc
```

**Related Commands**    [secpolicy activate](#), [secpolicy defined-policy](#)



## show running-config sflow

Displays the IPv4 and IPv6 addresses and ports of sFlow collectors.

**Syntax** `show running-config sflow`

**Modes** Privileged EXEC mode

**Examples** To display the IPv4 and IPv6 addresses and ports of sFlow collectors:

```
switch# show running-config sflow
Sflow collector          3ffe:1900:4545:3:200:f8ff:fe21:67cf : 6343
Sflow collector          fe80::200:f8ff:fe21:67cf           : 6343
Sflow collector          192.35.41.32 : 6343
```

## show running-config sflow-policy

Displays the configured sFlow policies.

**Syntax** `show running-config sflow-policy`

**Modes** Privileged EXEC mode

**Examples** To display the configured sFlow policies.

```
switch# show running-config sflow-policy
```

## show running-config sflow-profile

Displays the configured sFlow policies.

**Syntax** `show running-config sflow-profile`

**Modes** Privileged EXEC mode

## show running-config snmp-server

Shows the running configuration of the SNMP server on the switch.

- Syntax** `show running-config snmp-server`
- Modes** Privileged EXEC mode
- Usage Guidelines** Use this command to display the current SNMP configurations of host, community, contact, user, and location.

This command has no default configurations.

- Examples** The following command shows the running configuration of the SNMP server on the switch, with encryption applied:

```
switch# show running-config snmp-server

snmp-server contact "Field Support."
snmp-server location "End User Premise."
snmp-server sys-descr "Brocade VDX Switch."
snmp-server community ConvergedNetwork
snmp-server community OrigEquipMfr rw
snmp-server community "Secret C0de" rw
snmp-server community common
snmp-server community private rw
snmp-server community public
snmp-server host 10.17.37.107 public
snmp-server user snmp
snmp-server user snmpadmin1 groupname snmpadmin auth md5 auth-password "MVb
+360X3kcfBzug5Vo6dQ==\n" priv DES priv-password "ckJFoHbzVvhR0xFRPjsMTA==\n" encrypted
snmp-server user snmpadmin2 groupname snmpadmin auth md5 auth-password "MVb
+360X3kcfBzug5Vo6dQ==\n" priv DES priv-password "ckJFoHbzVvhR0xFRPjsMTA==\n" encrypted
snmp-server user snmpadmin3 groupname snmpadmin
snmp-server user snmpuser2
snmp-server user snmpuser3 auth md5 auth-password "MVb+360X3kcfBzug5Vo6dQ==\n" priv
DES priv-password "ckJFoHbzVvhR0xFRPjsMTA==\n" encrypted
```

- Related Commands** [snmp-server community](#), [snmp-server contact](#), [snmp-server context](#), [snmp-server engineid local](#), [snmp-server group](#), [snmp-server host](#), [snmp-server location](#), [snmp-server sys-descr](#), [snmp-server user](#), [snmp-server v3host](#), [snmp-server view](#)

## show running-config snmp-server engineid

Shows the engine ID of the SNMP server on the switch.

**Syntax** `show running-config snmp-server engineid`

**Modes** Privileged EXEC mode

**Examples** To see the engine ID of the SNMP server:

```
switch# show running-config rbridge-id 1 snmp-server engineID local
10:20:30:40:50:60:70:80:90:10:30:12
```

**Related Commands** [snmp-server community](#), [snmp-server contact](#), [snmp-server context](#), [snmp-server engineid local](#), [snmp-server group](#), [snmp-server host](#), [snmp-server location](#), [snmp-server sys-descr](#), [snmp-server user](#), [snmp-server v3host](#), [snmp-server view](#)

show running-config ssh

## show running-config ssh

Displays the Secure Shell (SSH) status in the running-config.

**Syntax** `show running-config ssh`

**Modes** Privileged EXEC mode

# show running-config ssh server

Displays the SSH server status in the running-config.

**Syntax** `show running-config [ rbridge-id { rbridge-id | all } ] ssh server`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

***rbridge-id***

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** Privileged EXEC mode

**Usage Guidelines** SSH server configuration is placed at the beginning of the running-config and is part of the global configuration of the switch. SSH is enabled by default and no entry is shown in the running-config when set to default.

**Examples** When SSH service is shut down:

```
switch# show running-config rbridge-id 3 ssh server
rbridge-id 3
ssh server shutdown
switch# show running-config rbridge-id 3 ssh server
rbridge-id 3
ssh server shutdown
ssh server key-exchange dh-group-14
```

When SSH Server Key-exchange is configured to DH Group 14:

```
switch# show running-config rbridge-id 3 ssh server key-exchange
rbridge-id 3
ssh server key-exchange dh-group-14
```

When SSH Server Key-exchange method has the default value:

```
switch# show running-config rbridge-id 3 ssh server key-exchange
rbridge-id 3
```

When SSH service is enabled:

```
switch# show running-config [rbridge-id
rbridge-id
| all] ssh server
% No entries found
```

**Related Commands** [show ssh server status](#), [ssh server shutdown](#)

## show running-config ssh server key-exchange

Displays the SSH server key-exchange status in the running-config.

**Syntax** `show running-config ssh server key-exchange`

**Modes** Privileged EXEC mode

**Examples** Typical command output:

```
switch# show running-config ssh server key-exchange
ssh server key-exchange dh-group-14
```

**Related  
Commands** [show ssh server status](#)



# show running-config support

Displays the support parameters in the running configuration.

**Syntax** `show running-config support [ ffdc ]`

**Parameters** `ffdc`

Displays the FFDC settings.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

This command is not supported on the standby management module.

**Examples** To display the support parameters in the running configuration:

```
switch# show running-config support ffdc
support ffdc
switch#
```

**Related Commands** [show support](#), [telnet server shutdown](#)

## show running-config support autoupload-param

Displays autoupload parameters.

**Syntax** `show running-config support autoupload-param`

**Modes** Privileged EXEC mode

**Examples**

```
switch(config)# do show running-config support autoupload-param
support autoupload-param hostip 10.31.2.27 username hegdes directory /users/home40/
hegdes/autoupload protocol ftp password "3iTYxJWEUHp9axZQt2tbvw==\n"
switch(config)#
```

## show running-config support support-param

Displays support parameters

|                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>     | <b>show running-config support support-param</b> [ <b>hostip</b> <i>host-ip</i> <b>user</b> <i>user_acct</i> <b>password</b> <i>password</i> <b>protocol</b> [ <b>ftp</b>   <b>scp</b>   <b>sftp</b> ] <b>directory</b> <i>path</i> ]                                                                                                                                                                                                                                          |
| <b>Parameters</b> | <p><b>hostip</b> <i>host-ip</i><br/>Displays the IP address of the remote host.</p> <p><b>user</b> <i>user_acct</i><br/>Displays the user name to access the remote host.</p> <p><b>password</b> <i>password</i><br/>Displays the password to access the remote host.</p> <p><b>protocol</b> <b>FTP</b>   <b>SCP</b>   <b>SFTP</b><br/>Displays the protocol used to access the remote server.</p> <p><b>directory</b> <i>path</i><br/>Displays the path to the directory.</p> |
| <b>Modes</b>      | Privileged EXEC mode                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

### Examples

```
switch(config)# do show running-config support support-param
support support-param hostip 10.31.2.27 username hegdes directory /users/home40/
hegdes/support protocol ftp password "3iTYxJWEUHp9axZQt2tbvw==\n"
switch(config)#
```

### History

| Release version | Command history              |
|-----------------|------------------------------|
| 5.0.0           | This command was introduced. |

## show running-config switch-attributes

Displays switch attributes.

**Syntax** `show running-config switch-attributes [ rbridge-id ] { chassis-name | host-name }`

**Command Default** Displays all switch attributes on the local switch. The default host name is "sw0". The default chassis name depends on the switch model.

**Parameters** *rbridge-id*

Specifies an RBridge ID.

**chassis-name**

Displays the switch chassis name.

**host-name**

Displays the switch host name.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

This command is not supported on the standby management module.

**Examples** To display all attributes for the local switch:

```
switch# show running-config switch-attributes
switch-attributes 2
  chassis-name VDX6740-48
  host-name sw0
!
```

To display the host name of the local switch:

```
switch# show running-config switch-attributes host-name
switch-attributes 2
  host-name sw0
!
```

**Related Commands** [switch-attributes](#)

# show running-config system-monitor

Displays the system monitor configuration.

**Syntax** `show running-config system-monitor [ fan | power | temp | cid-card | sfp | compact-flash | MM | LineCard | SFM ]`

|                   |                      |                                                                          |
|-------------------|----------------------|--------------------------------------------------------------------------|
| <b>Parameters</b> | <b>fan</b>           | Displays the threshold and alert setting for the FAN component.          |
|                   | <b>power</b>         | Displays the threshold and alert setting for the power component.        |
|                   | <b>temp</b>          | Displays the threshold for the temperature sensor component.             |
|                   | <b>cid-card</b>      | Displays the threshold for the CID card component.                       |
|                   | <b>sfp</b>           | Displays the threshold for the small form factor pluggable (SFP) device. |
|                   | <b>compact-flash</b> | Displays the threshold for the compact flash device.                     |
|                   | <b>MM</b>            | Displays the threshold for the management module.                        |
|                   | <b>LineCard</b>      | Displays the threshold for the line card.                                |
|                   | <b>SFM</b>           | Displays the threshold for the switch fabric module.                     |

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

## Examples

```
switch# show running-config system-monitor

system-monitor fan threshold marginal-threshold 1 down-threshold 2
system-monitor fan alert state removed action raslog
system-monitor power threshold marginal-threshold 0 down-threshold 1
system-monitor power alert state removed action raslog
system-monitor temp threshold marginal-threshold 1 down-threshold 2
system-monitor cid-card threshold marginal-threshold 1 down-threshold 0
system-monitor cid-card alert state inserted,faulty action email
system-monitor sfp alert state none action none
system-monitor compact-flash threshold marginal-threshold 1 down-threshold 0
system-monitor MM threshold marginal-threshold 1 down-threshold 0
system-monitor LineCard threshold marginal-threshold 1 down-threshold 0
system-monitor LineCard alert state removed action raslog
system-monitor SFM threshold marginal-threshold 1 down-threshold 0
```

**Related Commands** [show system monitor](#), [system-monitor-mail](#)

## show running-config system-monitor-mail

Displays the system monitor mail configuration.

**Syntax** `show running-config system-monitor-mail { fru enable }`

**Parameters** `fru`

Displays FRU information.

`enable`

Displays the status of the FRU.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

**Related Commands** [show system monitor](#), [system-monitor-mail](#)

## show running-config tacacs-server

Displays the TACACS+ server configuration.

**Syntax** `show running-config tacacs-server [ host ipaddr | hostname ]`

**Parameters** **host**

Identifies the TACACS+ server by host name or IP address.

***ipaddr***

Specifies the IP address of the TACACS+ server (IPv4 or IPv6).

***hostname***

Specifies the domain name of the TACACS+ server.

**source-ip [ *chassis-ip* | *mm-ip* ]**

Specifies the chassis IP address or MM IP address as the source IP address for TACACS+ authentication and accounting.

**Modes** Privileged EXEC mode

**Examples** To display the list of configured TACACS+ servers:

```
switch# show running-config tacacs-server host
fec0:60:69bc:94:211:25ff:fec4:6010
```

To display a single IPv4 TACACS+ server configuration:

```
switch# show running-config tacacs-server host 10.24.65.6
```

To display a single IPv5 TACACS+ server configuration:

```
switch# show running-config tacacs-server host fec0:60:69bc:94:211:25ff:fec4:6010
```

**Related Commands** [radius-server](#), [show running-config radius-server](#), [tacacs-server](#)

## show running-config telnet server

Displays the Telnet server status in the running-config.

|                         |                                                                                                                                                                                                                                                                                     |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>show running-config [ rbridge-id { rbridge-id   all } ] telnet server</b>                                                                                                                                                                                                        |
| <b>Parameters</b>       | <b>rbridge-id</b><br>Specifies an RBridge or all RBridges.<br><b>rbridge-id</b><br>Specifies an RBridge ID.<br><b>all</b><br>Specifies all RBridges.                                                                                                                                |
| <b>Modes</b>            | Privileged EXEC mode                                                                                                                                                                                                                                                                |
| <b>Usage Guidelines</b> | Telnet server configuration is placed at the beginning of running-config and is part of the global configuration of the switch. Telnet is enabled by default and there will be no entry in the running-config when set to default.                                                  |
| <b>Examples</b>         | When Telnet service is shut down:<br><pre>switch# show running-config rbridge-id 3 telnet server rbridge-id 3 telnet server shutdown</pre> When Telnet service is enabled:<br><pre>switch# show running-config [rbridge-id rbridge-id   all] telnet server % No entries found</pre> |
| <b>Related Commands</b> | <a href="#">show telnet server status</a> , <a href="#">telnet</a> , <a href="#">telnet server shutdown</a>                                                                                                                                                                         |



# show running-config threshold-monitor

Displays the system's threshold configuration.

**Syntax** `show running-config threshold-monitor`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

## Examples

```
switch# show running-config threshold-monitor

threshold-monitor Cpu poll 30 retry 2 limit 60 actions raslog
threshold-monitor Memory poll 30 retry 2 limit 70 high-limit low-limit 50 actions none
switch# show running-config threshold-monitor area IFG
```

| Interface                     | Area                | Value | Status       | Monitoring Status |
|-------------------------------|---------------------|-------|--------------|-------------------|
| -----                         | -----               | ----- | -----        | -----             |
| fortygigabitethernet 3/8      | IFG Violation Error | 30    | Out of Range | Monitoring        |
| fortygigabitethernet 3/9      | IFG Violation Error | 0     | In Range     | Monitoring        |
| <All other online interfaces> | IFG Violation Error | 0     | In Range     | Monitoring        |

**Related Commands** [show system monitor](#), [system-monitor-mail](#)

## show running-config threshold-monitor interface

Displays the system's running interface configuration.

**Syntax** `show running-config threshold-monitor interface`

**Modes** Privileged EXEC mode

**Usage Guidelines** Default values are not displayed under the `show running-config threshold-monitor interface` command. Only custom values are displayed.

### Examples

```
switch# do show running-config threshold-monitor interface
switch(config)# do show running-config threshold-monitor interface
threshold-monitor interface apply custom-monitoring
threshold-monitor interface pause
threshold-monitor interface policy custom type Ethernet area
MissingTerminationCharacter threshold timebase minute high-threshold 20 low-threshold
1 buffer 5
threshold-monitor interface policy custom type Ethernet area
MissingTerminationCharacter alert above highthresh-action none lowthresh-action none
threshold-monitor interface policy custom type Ethernet area
MissingTerminationCharacter alert below highthresh-action none lowthresh-action none
threshold-monitor interface policy custom type Ethernet area CRCAlignErrors threshold
timebase hour high-threshold 80 low-threshold 10 buffer 35
threshold-monitor interfacepolicy custom type Ethernet area CRCAlignErrors alert
above highthresh-action none lowthresh-action none
threshold-monitor interface policy custom type Ethernet area CRCAlignErrors alert
below highthresh-action none lowthresh-action none
threshold-monitor interface policy custom type Ethernet area SymbolErrors threshold
timebase minute high-threshold 20 low-threshold 1 buffer 5
threshold-monitor interfacepolicy custom type Ethernet area SymbolErrors alert above
highthresh-action none lowthresh-action none
threshold-monitor interface policy custom type Ethernet area SymbolErrors alert below
highthresh-action none lowthresh-action none
threshold-monitor interface policy custom type Ethernet area IFG threshold timebase
minute high-threshold 20 low-threshold 1 buffer 5
threshold-monitor interface policy custom type Ethernet area IFG alert above
highthresh-action raslog,portfence lowthresh-action emailraslog
threshold-monitor interface policy custom type Ethernet area IFG alert below
highthresh-action none lowthresh-action none
```

**Related  
Commands** [show system monitor](#)

## show running-config threshold-monitor security

Displays the system's running security configuration.

**Syntax** `show running-config threshold-monitor security`

**Modes** Privileged EXEC mode

**Usage Guidelines** Default values are not displayed under the `show running-config threshold-monitor security` command. Only custom values are displayed.

**Examples**

```
switch# show running-config threshold-monitor security policy custom area telnet-
violation

threshold-monitor security policy custom area telnet-violation timebase hour
threshold-monitor security policy custom area telnet-violation threshold thresh_high
high-threshold 10 buffer 20
switch# show running-config threshold-monitor security policy custom area login-violation
threshold-monitor securitym policy custom area login-violation alert above
highthresh action all
threshold-monitor security apply custom
switch#
```

**Related  
Commands** [show system monitor](#)

## show running-config threshold-monitor sfp

Displays the system's running SFP configuration.

- Syntax** **show running-config threshold-monitor sfp**
- Modes** Privileged EXEC mode
- Usage Guidelines** Default values are not displayed under the **show running-config threshold-monitor sfp** command. Only custom values are displayed.

**Examples**

```
switch# do show running-config threshold-monitor sfp

threshold-monitor sfp pause
threshold-monitor sfp apply custom
threshold-monitor sfp policy custom Type 1GSR area TXP threshold high-threshold 2000
low-threshold 1000 buffer 500
threshold-monitor sfp policy custom Type 1GSR area TXP alert above highthresh-action
raslog lowthresh-action none
threshold-monitor sfp policy custom Type 1GSR area TXP alert below highthresh-action
none lowthresh-action raslog
```

- Related Commands** [show system monitor](#)

# show running-config username

Displays the user accounts on the switch.

**Syntax** `show running-config username [[ username ] [ desc ] [ enable ] [ encryption-level ] [ password ] [ role ]]`

**Parameters** *username*

The account name associated with the user. The maximum number of characters is 40.

**desc**

Displays the description of the user configuration.

**enable**

Displays the account status: enable true = enabled (default) enable false = disabled

**encryption-level**

Password encryption level. Values are 0 through 7. The default is 0.

**password**

Account password.

**role**

The role associated with the account.

**Modes** Privileged EXEC mode

**Usage Guidelines** When used without operands, Use this command to display all user accounts on the switch.

Use the various parameters to query the specified account details.

This command does not display the root account.

Defaults are not displayed.

**Examples** To display the user accounts on the switch:

```
switch# show running-config username

username admin password "BwrsDbB+tABWGWpINOVKoQ==\n" encryption-level 7 role admin
desc Administrator
username user password "BwrsDbB+tABWGWpINOVKoQ==\n" encryption-level 7 role user desc
User
```

To display a specific user account:

```
switch# show running-config username admin

username admin password "BwrsDbB+tABWGWpINOVKoQ==\n" encryption-level 7 role admin
desc Administrator
```

To display the enabled status for a specific user account

```
switch# show running-config username admin enable

username admin enable true
```

**Related Commands** [show users](#), [unlock username](#), [username](#)

## show running-config vcs

Displays VCS configuration information.

**Syntax** `show running-config vcs [ virtual [ ip [ address ] ] ]`

**Parameters** **virtual**

Displays the VCS configuration.

**ip**

Displays the virtual IP configuration.

**address**

Displays the virtual IP address.

**Modes** Privileged EXEC mode

**Related Commands** [vcs config snapshot \(logical chassis cluster mode\)](#)

# show running-config zoning

Displays the zoning configuration.

**Syntax** `show running-config zoning [ defined-configuration | enabled-configuration ]`

**Parameters** **defined-configuration**

Displays the defined configuration parameters. See **show running-config zoning defined-configuration**.

**enabled-configuration**

Displays the enabled configuration parameters. See **show running-config zoning enabled-configuration**.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the zoning configuration for a Brocade VCS Fabric. The base command lists both the defined and the enabled configuration.

This command is supported in VCS mode. Zoning configuration data are automatically distributed among all RBridges in the VCS Fabric.

To display the enabled-configuration enabled-zone information, use the **show zoning enabled-configuration** command.

This command can be entered on any RBridge in a Brocade VCS Fabric.

**Examples** The following example displays the zoning configuration:

```
switch# show running-config zoning
zoning defined-configuration cfg cfg1
  member-zone zone1
  member-zone zone2
```

**Related Commands** [show running-config zoning defined-configuration](#), [show running-config zoning enabled-configuration](#), [show zoning enabled-configuration](#)

## show running-config zoning defined-configuration

Displays the defined zone configuration.

**Syntax** `show running-config zoning defined-configuration`

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the zoning configuration for a Brocade VCS Fabric. The base command lists both the defined and a small subset of the enabled configuration.

This command is supported only in Brocade VCS Fabric mode. Zoning configuration data are automatically distributed among all R Bridges in the VCS Fabric.

This command can be entered on any R Bridge in a Brocade VCS Fabric.

**Examples** The following example displays the defined zoning configuration:

```
switch# show running-config zoning defined-configuration

zoning defined-configuration cfg cfg0
member-zone zone_0_1
member-zone zone_0_2
member-zone zone_0_3
member-zone zone_0_4
member-zone zone_same
!
zoning defined-configuration cfg cfg1
member-zone zone_1_1
member-zone zone_1_2
member-zone zone_1_3
member-zone zone_1_4
member-zone zone_same
!
zoning defined-configuration cfg cfg2
member-zone zone_2_1
member-zone zone_2_2
member-zone zone_2_3
member-zone zone_2_4
member-zone zone_same
!
zoning defined-configuration cfg cfg4
member-zone zone2
member-zone zone3
!
zoning defined-configuration zone zone0
member-entry 11:22:33:44:55:66:77:80
member-entry 11:22:33:44:55:66:77:81
member-entry 11:22:33:44:55:66:77:82
member-entry 11:22:33:44:55:66:77:83
member-entry 11:22:33:44:55:66:77:84
!
zoning defined-configuration zone zone1
member-entry 11:22:33:44:55:66:77:80
member-entry 11:22:33:44:55:66:77:81
member-entry alias1
member-entry alias2
member-entry alias3
!
zoning defined-configuration zone zone2
member-entry 11:22:33:44:55:66:77:80
member-entry 11:22:33:44:55:66:77:81
member-entry 11:22:33:44:55:66:77:82
member-entry 11:22:33:44:55:66:77:83
member-entry 11:22:33:44:55:66:77:84
!
```

**Related  
Commands**

[show running-config zoning](#), [show running-config zoning enabled-configuration](#)



# show running-config zoning enabled-configuration

Displays the enabled zone configuration.

**Syntax** `show running-config zoning enabled-configuration [ cfg-action | cfg-name | default-zone-access ]`

**Parameters** `cfg-action`

Displays the enabled configuration action.

`cfg-name`

Displays the enabled configuration name.

`default-zone-access`

Displays the default-zone access mode.

**Modes** Privileged EXEC mode

**Usage Guidelines** The enabled configuration is the single zone configuration that is currently enabled in a Brocade VCS Fabric. The devices an initiator can access in the network are based on this configuration. The enabled configuration is built when a specific zone configuration is enabled and all error checking has been completed successfully. Use this command to display the name of the enabled zoning configuration, the configuration action, and the default-zone access mode.

The configuration name is displayed differently depending on two main factors:

- If no transaction is pending, the configuration action is set to “cfg-save.”
- If a transaction is pending, the configuration name is marked with a CFG\_MARKER asterisk (\*) and the configuration action is set to “cfg-None” The CFG\_MARKER flag can also indicate that the enabled configuration does not exactly match the defined configuration. This scenario occurs when you have an enabled configuration and make edits to the defined configuration, and then, instead of enabling the defined configuration, you issue the `cfg-save` command.

Zoning configuration data are automatically distributed among all R Bridges in the VCS Fabric.

This command can be executed on any R Bridge in a Brocade VCS Fabric.

To view details about the enabled zones, use the **show zoning enabled-configuration** command.

**Examples** To display the enabled zoning configuration:

```
switch# show running-config zoning enabled-configuration
zoning enabled-configuration cfg-name cfg1
zoning enabled-configuration default-zone-access noaccess
zoning enabled-configuration cfg-action cfg-save
```

To display only the default-zone access mode for the enabled zoning configuration:

```
switch# show running-config zoning enabled-configuration default-zone-access
zoning enabled-configuration default-zone-access allaccess
```

**Related Commands** [show running-config zoning](#), [show running-config zoning defined-configuration](#), [show zoning enabled-configuration](#)

## show secpolicy

Displays the Switch Connection Control (SCC) security policy information.

**Syntax** `show running-config secpolicy { defined-policy | active-policy }`

**Parameters** **defined-policy**

Displays the defined policy and its policy member set.

**active-policy**

Displays the active policy and its policy member set.

**Modes** Privileged EXEC mode

**Examples** To show only the defined policy

```
switch# show running-config secpolicy defined-policy
secpolicy defined-policy SCC_POLICY
member-entry 11:11:11:11:11:11:11:11
!
member-entry 22:22:22:22:22:22:22:22
!
member-entry 33:33:33:33:33:33:33:33
```

To show only the active policy

```
switch# show running-config secpolicy active-policy
secpolicy active-policy SCC_POLICY
member-entry 11:11:11:11:11:11:11:11
!
member-entry 22:22:22:22:22:22:22:22
!
member-entry 33:33:33:33:33:33:33:33
```

To show both active and defined policy

```
switch# show running-config secpolicy
secpolicy defined-policy SCC_POLICY
member-entry 11:11:11:11:11:11:11:11
!
member-entry 22:22:22:22:22:22:22:22
!
member-entry 33:33:33:33:33:33:33:33
!
!
secpolicy active-policy SCC_POLICY
member-entry 11:11:11:11:11:11:11:11
!
member-entry 22:22:22:22:22:22:22:22
!
member-entry 33:33:33:33:33:33:33:33
```

**Related  
Commands**

[secpolicy activate](#), [secpolicy defined-policy](#)

## show sflow

Displays sFlow configuration information and statistics.

**Syntax** **show sflow** [ **interface** { <N>**gigabitethernet** *rbridge-id/slot/port* | **all**

**Command Default** sFlow is disabled on all interfaces.

**Parameters** **all**

Displays all sFlow information and statistics.

**interface**

Displays sFlow information for an Ethernet interface.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Examples** To display sFlow statistics on the 10-gigabit Ethernet interface 15/0/4:

```
switch# show sflow interface tengigabitethernet 15/0/4
sFlow info for interface Ten Gigabit Ethernet 15/0/4
-----
Configured sampling rate:          100 pkts
Actual sampling rate:              100 pkts
Counter polling interval:         100 secs
Samples received from hardware:    32
Port backoffThreshold :           272
Counter samples collected :        147
```

To display sFlow statistics on 1-gigabit Ethernet interface 22/0/1:

```
switch# show sflow interface gigabitethernet 22/0/1
-----
sFlow info for interface Gigabit Ethernet 22/0/1
Configured sampling rate:          32768 pkts
Actual sampling rate:              32768 pkts
Counter polling interval:         20 seconds
Samples received from hardware:    0
Port backoff threshold:           48
-----
```

To display all sFlow statistics:

```
switch# show sflow all
sFlow services are:                               enabled
Global default sampling rate:                     32768 pkts
Global default counter polling interval:          20 secs
Collector server address
-----
3ffe:1900:4545:3:200:f8ff:fe21:67cf : 6343          0
fe80::200:f8ff:fe21:67cf           : 6343          0
192.35.41.32                       : 6343          0
fe80::201:fdff:fe21:43cd           : 6343          0
192.44.23.45                       : 6343          0
-----
Number of samples sent
-----
```

## show sflow-profile

Displays the sflow profile configurations.

**Syntax** `show sflow-profile { string | all }`

**Parameters** *string* Specifies the name of the profile.  
**all** Displays all profile information.

**Modes** Privileged EXEC mode

**Related Commands** [sflow enable \(global version\)](#)

## show sfm

Displays information about the switch fabric modules present in the chassis.

**Syntax** `show sfm`

**Modes** Privileged EXEC mode

**Command Output** The `show sfm` command displays the following information:

| Output field | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Slot         | Displays the slot number. Slots for switch fabric modules are S1 through S3 for Brocade VDX 8770-4 switches and S1 through S6 for Brocade VDX 8770-8 switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Type         | Displays the interface module type. The switch fabric module type is SFM.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Description  | Module description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| ID           | Displays the module ID. The ID for the switch fabric module is 113.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Status       | Displays the status of the module as one of the following: <ul style="list-style-type: none"> <li>VACANT - The slot is empty.</li> <li>POWERED-OFF - The module is present in the slot but is powered off.</li> <li>POWERING UP - The module is present and powering on.</li> <li>LOADING - The module is present, powered on, and loading the initial configuration.</li> <li>DIAG RUNNING POST1 - The module is present, powered on, and running the POST (power-on self-test).</li> <li>DIAG RUNNING POST2 - The module is present, powered on, and running the reboot power on self tests.</li> <li>INITIALIZING - The module is present, powered on, and initializing hardware components.</li> <li>ENABLED - The module is on and fully enabled.</li> <li>DISABLED - The module is powered on but disabled.</li> <li>FAULTY - The module is faulty because an error was detected.</li> <li>UNKNOWN -The module is inserted but its state cannot be determined.</li> </ul> |

**Examples** To display the switch fabric modules present in a Brocade VDX 8770-4 chassis:

```
switch# show sfm
```

```
Slot  Type      Description                               ID      Status
-----
S1   SFM         Switch Fabric Module                       113     ENABLED#
S2   SFM         Switch Fabric Module                       113     ENABLED#
S3   SFM         Switch Fabric Module                       113     ENABLED
# = At least one enabled SFM in these slots is required.
```

**Related Commands** [show linecard](#), [show mm](#), [show slots](#)

# show sfp

Displays the SFP breakout configurations.

**Syntax** `show sfp [ linecard linecard [ port port ] ]`

**Command Default** Displays the SFP breakout information using a line card. Port number is optional. If absent, all SFP port configurations are shown.

**Parameters** `linecard linecard`

Specifies line card information.

`port port`

Specifies port information.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the SFP configuration for the specified line cards. The speed column shows the breakout speed in breakout mode, and the aggregate speed when not in breakout mode.

This command is supported on the line cards.

**Examples** To display the SFP configuration on a line card:

```
switch# show sfp linecard 1
Port      Type      Breakout      Speed
-----
1         SFP       n/a           10G
2         QSFP      4x10G         10G
3         SFP       n/a           40G
4         CSFP      10x10G        100G
switch# show sfp linecard 1 port 2
Port      Type      Breakout      Speed
-----
2         QSFP      4X10G         10G
```

**Related Commands** [clear support](#), [copy support](#), [power-off linecard](#), [power-on linecard](#), [show support](#), [show running-config hardware connector](#)

# show slots

Displays information about the modules present in the chassis.

**Command Output** The **show slots** command displays the following information:

| Output field | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Slot         | Displays the slot number. Slots for interface modules are L1 through L4 on Brocade VDX 8770-4 switches, and L1 through L8 on the Brocade VDX 8770-8 switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Type         | Displays the module type. Examples are: <ul style="list-style-type: none"> <li>• MM Management Module</li> <li>• SFM Switch Fabric Module</li> <li>• LC48X10G 48-port 10 GbE interface module (line card)</li> <li>• LC48X1G 48-port 1 GbE interface module</li> <li>• LC12X40G 12-port 40 GbE interface module</li> <li>• 27x40G 27-port 40 GbE interface module</li> <li>• 6x100G 6-port 100 GbE interface module</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Description  | Module description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| ID           | Module ID. Examples are: <ul style="list-style-type: none"> <li>• 112 Management Module</li> <li>• 113 Switch Fabric Module</li> <li>• 114 48-port 10GbE interface module</li> <li>• 127 12-port 10 GbE interface module</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Status       | Displays the status of the module as one of the following: <ul style="list-style-type: none"> <li>• VACANT - The slot is empty.</li> <li>• POWERED-OFF - The module is present in the slot but is powered off.</li> <li>• POWERING UP - The module is present and powering on.</li> <li>• LOADING - The module is present, powered on, and loading the initial configuration.</li> <li>• DIAG RUNNING POST1 - The module is present, powered on, and running the POST (power-on self-test). This status is not valid for the management modules.</li> <li>• DIAG RUNNING POST2 - The module is present, powered on, and running the reboot power on self tests. This status is not valid for the management modules.</li> <li>• INITIALIZING - The module is present, powered on, and initializing hardware components.</li> <li>• ENABLED - The module is on and fully enabled.</li> <li>• DISABLED - The module is powered on but disabled.</li> <li>• FAULTY - The module is faulty because an error was detected.</li> <li>• UNKNOWN - The module is inserted but its state cannot be determined.</li> </ul> |

**Syntax** **show slots**

**Modes** Privileged EXEC mode



**Examples** To display the modules present in a Brocade VDX 8770-4 chassis:

```
switch# show slots
```

| Slot | Type     | Description          | ID  | Status   |
|------|----------|----------------------|-----|----------|
| M1   | MM       | Management Module    | 112 | ENABLED  |
| M2   |          |                      |     | VACANT   |
| S1   |          |                      |     | VACANT#  |
| S2   | SFM      | Switch Fabric Module | 113 | ENABLED# |
| S3   |          |                      |     | VACANT   |
| L1   | LC48X10G | 48-port 10GE card    | 114 | ENABLED  |
| L2   | LC48X10G | 48-port 10GE card    | 114 | ENABLED  |
| L3   |          |                      |     | VACANT   |
| L4   | LC48X1G  | 48-port 1GE card     | 131 | ENABLED  |

# = At least one enabled SFM in these slots is required.

---

**NOTE**

An "@" following an SFM status line indicates that the status of the optical switch is "OPEN."

---

**Related  
Commands** [show linecard](#), [show sfm](#)

## show span path

Displays the SPAN path information.

**Syntax** `show span path session session_number`

**Parameters** `session session_number`  
The path for the SPAN session to display.

**Modes** Privileged EXEC

**Examples** Example for logical chassis mode:

```
switch# show span path session 1
Session                :1
Path                   :Te 1/0/10 -> Te 1/0/1 (ISL-exit port) -> Te 2/0/16
```

**Related Commands** [monitor session, source](#)

# show spanning-tree

Displays all Spanning Tree Protocol (STP) information.

**Syntax** `show spanning-tree [ pvst | mst-config | vlan vlan_id ]`

**Parameters** `pvst`

Spanning-tree PVST+ information.

`mst-config`

MSTP region configuration information.

`vlan vlan_id`

Specifies the VLAN number.

**Modes** Privileged EXEC mode

**Usage Guidelines** On the Brocade VDX family of switches, VLANs are treated as interfaces from a configuration point of view. By default, all the DCB ports are assigned to VLAN 1 (VLAN ID equals 1). Valid VLAN IDs are as follows:

- On Brocade VDX 8770 switches: 1 through 4086 for 802.1Q VLANs (VLAN IDs 4087 through 4095 are reserved on these switches), and 4096 through 8191 for service or transport VFs in a Virtual Fabrics context.
- On all other Brocade VDX switches: 1 through 3962 for 802.1Q VLANs (VLAN IDs 3963 through 4095 are reserved on these switches), and 4096 through 8191 for service or transport VFs in a Virtual Fabrics context.

---

**NOTE**

Brocade Network OS supports PVST+ and Riposting. The PVST and R-PVST protocols are proprietary to Cisco and are not supported.

---

**Related Commands** [show spanning-tree interface](#)

## show spanning-tree brief

Displays the status and parameters of the Spanning Tree Protocol (STP).

|                         |                                                                                                                                         |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>show spanning-tree [ vlan <i>vlan_id</i> ] brief</b>                                                                                 |
| <b>Parameters</b>       | <b>vlan <i>vlan_id</i></b><br>Specifies a VLAN.                                                                                         |
| <b>Modes</b>            | Privileged EXEC mode                                                                                                                    |
| <b>Usage Guidelines</b> | Use this command to display a summary of the status and parameters of STP for each interface, including the port roles and port states. |

The following describes the port roles and states:

- Port roles—root port, designated port, alternate port and backup port.
- Port states—discarding, learning, forwarding, and blocked.
- Port types—edge port (PortFast), point-to-point, and shared port.

When "root guard" is in effect, the **show spanning-tree brief** command output shows the port state as ERR, not root\_inc.

**Examples** To display the interface summary of the Spanning Tree Protocol:

```
switch# show spanning-tree brief

Spanning-tree Mode: Rapid Spanning Tree Protocol
  Root ID          Priority 32768
                  Address 0005.1e76.1aa0
                  Hello Time 2, Max Age 20, Forward Delay 15
  Bridge ID       Priority 32768
                  Address 0005.1e76.1aa0
                  Hello Time 2, Max Age 20, Forward Delay 15, Tx-HoldCount 6
                  Migrate Time 3 sec
Interface      Role   Sts   Cost      Prio  Link-type      Boundary  Edge
-----
Te 0/0         DIS   DSC   2000      128   P2P            Yes       No
Te 0/1         ALT   BLK   2000      128   P2P            Yes       No
Te 0/2         RTPT  BLK   2000      128   P2P            Yes       No
Te 0/3         DIS   BLK   2000      128   P2P            Yes       No
Te 0/8         DIS   DSC   2000      128   P2P            Yes       No
Te 0/19        DIS   DSC   2000      128   P2P            Yes       No
Te 0/20        DIS   DSC   2000      128   P2P            Yes       No
```

Typical output of a summary that contains an rbridge-id as a non-root port.

```
switch# show spanning-tree brief

Spanning-tree Mode: Rapid Spanning Tree Protocol
  Root ID          Priority 32768
                  Address 0005.1ecd.0b8a
                  Hello Time 2, Max Age 20, Forward Delay 15
  Root Port ID : 5/0/22
  Bridge ID       Priority 32768
                  Address 0105.3352.6f27
                  STP Switch Id: 01e0.5200.0211
                  Hello Time 2, Max Age 20,
                  Forward Delay 15, Tx-HoldCount 6
                  Migrate Time 3 sec
Interface      Role   Sts   Cost      Prio  Link-type      Edge
-----
Te 6/0/20      DES   FWD   2000      128   P2P            No
Te 6/0/21      DES   FWD   2000      128   P2P            No
Te 6/0/23      ALT   DSC   2000      128   P2P            No
```

**Related  
Commands**    [show spanning-tree interface](#)

## show spanning-tree interface

Displays the state of the Spanning Tree Protocol for all named port-channels or 1-gigabit Ethernet, or 10-gigabit Ethernet interfaces.

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>show spanning-tree interface</b> [ <b>port-channel</b> <i>number</i>   <b>&lt;N&gt;gigabitethernet</b> <i>rbridge-id/slot/port</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Parameters</b>       | <p><b>port-channel</b> <i>number</i><br/>Specifies the port-channel number. The number of available channels range from 1 through 6144.</p> <p><b>&lt;N&gt;gigabitethernet</b><br/>Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>&lt;N&gt;gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b><br/>Specifies an RBridge ID.</p> <p><b>slot</b><br/>Specifies a valid slot number.</p> <p><b>port</b><br/>Specifies a valid port number.</p> |
| <b>Modes</b>            | Privileged EXEC mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Usage Guidelines</b> | <p>The following describes the port roles, states and types:</p> <ul style="list-style-type: none"> <li>• Port roles—root port, designated port, alternate port and backup port.</li> <li>• Port states—discarding, learning, and forwarding.</li> <li>• Port types—edge port (PortFast), point-to-point, and shared port.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                               |

To display information on a 10-gigabit Ethernet interface:

```
switch# show spanning-tree interface tengigabitethernet 1/0/0
Spanning-tree Mode: Rapid Spanning Tree Protocol
Root Id: 8000.0005.1e76.1aa0 (self)
Bridge Id: 8000.0005.1e76.1aa0
Port Te 0/0 enabled
  IfIndex: 67108864; Id: 8000; Role: Disabled; State: Discarding
  Designated Path Cost: 0
  Configured Path Cost: 2000
  Designated Port Id: 0; Port Priority: 128
  Designated Bridge: 0000.0000.0000.0000
  Number of forward-transitions: 0
  Version Rapid Spanning Tree Protocol - Received None - Send RSTP
  Edgeport: off; AutoEdge: no; AdminEdge: no; EdgeDelay: 3 sec
  Configured Root guard: off; Operational Root guard: off
  Boundary: yes
  Bpdu-guard: off
  Bpdu-filter: off
  Link-type: point-to-point
  Received BPDUs: 0; Sent BPDUs: 0
```

**Related Commands**    [show spanning-tree brief](#)

## show spanning-tree mst brief

Displays the status and parameters of the Multiple Spanning Tree Protocol (MSTP) instance information in brief.

**Syntax** `show spanning-tree mst brief`

**Modes** Privileged EXEC mode

**Usage Guidelines** The command output includes the port roles, port states and port types.

- Port roles—root port, designated port, alternate port, and backup port.
- Port states—discarding, learning, and forwarding.
- Port types—edge port (PortFast), point-to-point, and shared port.

**Examples** To display the status and parameters of the MSTP instance information:

```
switch# show spanning-tree mst brief

Spanning-tree Mode: Multiple Spanning Tree Protocol
CIST Root ID          Priority 32768
                    Address 0005.1e76.1aa0
CIST Bridge ID        Priority 32768
                    Address 0005.1e76.1aa0
CIST Regional Root ID Priority 32768
                    Address 0005.1e76.1aa0
Configured Hello Time 2, Max Age 20, Forward Delay 15
Max Hops 20, Tx-HoldCount 6
CIST Root Hello Time 2, Max Age 20, Forward Delay 15, Max Hops 20
CIST Root path cost 0
Interface    Role  Sts  Cost      Prio  Link-type      Boundary  Edge
-----
Te 0/0       DIS  DSC  2000      128   P2P             Yes       No
Te 0/1       ALT  BLK  2000      128   P2P             Yes       No
Te 0/2       RTP  BLK  2000      128   P2P             Yes       No
Te 0/3       DIS  BLK  2000      128   P2P             Yes       No
Te 0/8       DIS  DSC  2000      128   P2P             Yes       No
Te 0/19      DIS  DSC  2000      128   P2P             Yes       No
Te 0/20      DIS  DSC  2000      128   P2P             Yes       No
```

**Related Commands** [show spanning-tree mst instance](#), [show spanning-tree mst interface](#)

## show spanning-tree mst detail

Displays details on an interface for the Multiple Spanning Tree Protocol (MSTP) instance running.

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>show spanning-tree mst detail</b> [ <b>interface port-channel</b> <i>number</i>   <b>interface</b> <i>&lt;N&gt;gigabitethernet rbridge-id/slot/port</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Parameters</b>       | <b>interface</b><br>Specifies the interface for which to display the MSTP information.<br><b>port-channel</b> <i>number</i><br>Specifies the port-channel of the interface. The number of available channels range from 1 through 6144.<br><b>&lt;N&gt;gigabitethernet</b><br>Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>&lt;N&gt;gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.<br><b>rbridge-id</b><br>Specifies an RBridge ID.<br><b>slot</b><br>Specifies a valid slot number.<br><b>port</b><br>Specifies a valid port number. |
| <b>Modes</b>            | Privileged EXEC mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Usage Guidelines</b> | The <b>gigabitethernet rbridge-id/slot/port</b> parameter is used only on Brocade VDX 6710, Brocade VDX 8770-4, and Brocade VDX 8770-8 switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |



## To display MSTP information on the switch in detail:

```

switch# show spanning-tree mst detail
Spanning-tree Mode: Multiple Spanning Tree Protocol
CIST Root Id: 8000.0005.1e76.1aa0 (self)
CIST Bridge Id: 8000.0005.1e76.1aa0
CIST Reg Root Id: 8000.0005.1e76.1aa0 (self)
CIST Root Forward Delay: 15; Hello Time: 2; Max Age: 20; Max-hops: 20
Configured Forward Delay: 15; Hello Time: 2; Max Age: 20; Max-hops: 20;
Tx-HoldCount: 6
Number of topology change(s): 0
Bpdu-guard errdisable timeout: disabled
Bpdu-guard errdisable timeout interval: 300 sec
Migrate Time: 3 sec

CIST Port Details.
=====
Instance: 0; Vlans:1, 100
Port Te 0/0 enabled
  IfIndex: 67108864; Id: 8000; Role: Disabled; State: Discarding
  Designated External Path Cost: 0; Internal Path Cost 0
  Configured Path Cost: 2000
  Designated Port Id: 0; CIST Priority: 128
  Designated Bridge: 0000.0000.0000.0000
  CIST Port Hello Time: 2
  Number of forward-transitions: 0
  Version Multiple Spanning Tree Protocol - Received None - Send MSTP
  Edgeport: off; AutoEdge: no; AdminEdge: no; EdgeDelay: 3 sec
  Configured Root guard: off; Operational Root guard: off
  Boundary: yes
  Bpdu-guard: off
  Bpdu-filter: off
  Link-type: point-to-point
  Received BPDUs: 0; Sent BPDUs: 0
Port Te 1/0/8 enabled
  IfIndex: 67633408; Id: 8008; Role: Disabled; State: Discarding
  Designated External Path Cost: 0; Internal Path Cost 0
  Configured Path Cost: 2000
  Designated Port Id: 0; CIST Priority: 128
  Designated Bridge: 0000.0000.0000.0000
  CIST Port Hello Time: 2
  Number of forward-transitions: 0
  Version Multiple Spanning Tree Protocol - Received None - Send MSTP
  Edgeport: off; AutoEdge: no; AdminEdge: no; EdgeDelay: 3 sec
  Configured Root guard: off; Operational Root guard: off
  Boundary: yes
  Bpdu-guard: off
  Bpdu-filter: off
  Link-type: point-to-point
  Received BPDUs: 0; Sent BPDUs: 0
Port Te 1/0/19 enabled
  IfIndex: 68354563; Id: 8013; Role: Disabled; State: Discarding
  Designated External Path Cost: 0; Internal Path Cost 0
  Configured Path Cost: 2000
  Designated Port Id: 0; CIST Priority: 128
  Designated Bridge: 0000.0000.0000.0000
  CIST Port Hello Time: 2
  Number of forward-transitions: 0
  Version Multiple Spanning Tree Protocol - Received None - Send MSTP
  Edgeport: off; AutoEdge: no; AdminEdge: no; EdgeDelay: 3 sec
  Configured Root guard: off; Operational Root guard: off
  Boundary: yes
  Bpdu-guard: off
  Bpdu-filter: off
  Link-type: point-to-point
  Received BPDUs: 0; Sent BPDUs: 0
Port Te 1/0/20 enabled
  IfIndex: 68420100; Id: 8014; Role: Disabled; State: Discarding
  Designated External Path Cost: 0; Internal Path Cost 0
  Configured Path Cost: 2000
  Designated Port Id: 0; CIST Priority: 128
  Designated Bridge: 0000.0000.0000.0000
  CIST Port Hello Time: 2
  Number of forward-transitions: 0
  Version Multiple Spanning Tree Protocol - Received None - Send MSTP
  Edgeport: off; AutoEdge: no; AdminEdge: no; EdgeDelay: 3 sec
  Configured Root guard: off; Operational Root guard: off

```

## Show commands

```
Boundary: yes  
Bpdu-guard: off  
Bpdu-filter: off  
Link-type: point-to-point  
Received BPDUs: 0; Sent BPDUs: 0
```

```
MSTI details.  
=====
```

**Related Commands** [show spanning-tree mst instance, show spanning-tree mst interface](#)

# show spanning-tree mst instance

Displays information on a specified Multiple Spanning Tree Protocol (MSTP) instance.

**Syntax** `show spanning-tree mst instance i instance_id [ interface port-channel number | interface <N>gigabitethernet rbridge-id/slot/port ]`

**Parameters** *instance\_id*

Specifies the MSTP instance for which to display information. Valid values range from 1 through 31.

**interface**

Specifies the interface for which to display the MSTP instance information.

**port-channel *number***

Specifies the port-channel of the interface. The number of available channels range from 1 through 6144.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>gigabitethernet with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

***rbridge-id***

Specifies an RBridge ID.

***slot***

Specifies a valid slot number.

***port***

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** The **gigabitethernet *rbridge-id/slot/port*** parameter is used only on Brocade VDX 6710, Brocade VDX 8770-4, and Brocade VDX 8770-8 switches.

**Examples** To display information on MSTP instance 1:

```
switch# show spanning-tree mst instance 1 interface tengigabitethernet 1/0/0
Instance: 1; VLANs: 100
MSTI Root Id: 8001.0005.1e76.1aa0 (self)
MSTI Bridge Id: 8001.0005.1e76.1aa0
MSTI Bridge Priority: 32768
```

**Related Commands** [show spanning-tree mst brief](#), [show spanning-tree mst interface](#)

## show spanning-tree mst interface

Displays information for a specified interface for a Multiple Spanning Tree Protocol (MSTP) instance.

|                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>           | <b>show spanning-tree mst interface</b> [ <b>port-channel</b> <i>number</i>   <b>&lt;N&gt;gigabitethernet</b> <i>rbridge-id/slot/port</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Parameters</b>       | <p><b>port-channel</b> <i>number</i><br/>Specifies the port-channel of the interface. The number of available channels range from 1 through 6144.</p> <p><b>&lt;N&gt;gigabitethernet</b><br/>Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>&lt;N&gt;gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b><br/>Specifies an RBridge ID.</p> <p><b>slot</b><br/>Specifies a valid slot number.</p> <p><b>port</b><br/>Specifies a valid port number.</p> |
| <b>Modes</b>            | Privileged EXEC mode                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Usage Guidelines</b> | <p>Use this command to display MSTP protocol specific information such as Common and Internal Spanning Tree (CIST) spanning-tree related information, information to each MSTP instance (MSTI), and the state of the port specific to each MSTI.</p> <p>The <b>gigabitethernet</b> <i>rbridge-id/slot/port</i> parameter is used only on Brocade VDX 6710, Brocade VDX 8770-4, and Brocade VDX 8770-8 switches.</p>                                                                                                                                                                                                                                                                                                                           |

To display information for the MSTP interface:

```
switch# show spanning-tree mst interface tengigabitethernet 5/0/1
Spanning-tree Mode: Multiple Spanning Tree Protocol
CIST Root Id: 8000.0005.1e76.1aa0 (self)
CIST Bridge Id: 8000.0005.1e76.1aa0
CIST Reg Root Id: 8000.0005.1e76.1aa0 (self)
IST Operational Port Hello Time: 0
Number of forward-transitions: 0
Version: Multiple Spanning Tree Protocol - Received None - Send MSTP
Edgeport: off; AutoEdge: no; AdminEdge: no; EdgeDelay: 3 sec
Configured Root guard: off; Operational Root guard: off
Boundary: yes
Bpdu-guard: off
Bpdu-filter: off
Link-type: point-to-point
Received BPDUs: 0; Sent BPDUs: 0
Instance Role   Sts   Cost   Prio VLANs
-----
0                DIS     DSC   2000   128     1
```

**Related Commands** [show spanning-tree brief](#), [show spanning-tree mst brief](#)

## show ssh server status

Displays the current Secure Shell (SSH) server key-exchange status.

**Syntax** `show ssh server status [ rbridge-id { rbridge-id | all } ]`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

***rbridge-id*** Specifies an RBridge ID.

**all** Specifies all RBridges.

**Modes** Privileged EXEC mode

**Examples** When SSH server is disabled in rbridge-id 3:

```
switch# show ssh server status rbridge-id 3
rbridge-id 3 SSH server status: Enabled
switch#
```

When SSH server key-exchange method is configured to DH Group 14:

```
switch# show ssh server status rbridge-id 3
rbridge-id 3
SSH Kex Exchange Algorithm: DH Group 14
```

When SSH Server Key-exchange method is restored to default

```
switch# show ssh server status rbridge-id 3
rbridge-id 3
```

**Related Commands** [show telnet server status](#), [ssh](#), [ssh server shutdown](#)

show ssh server rekey-interval status

## show ssh server rekey-interval status

Displays the status information related to the Secure Shell (SSH) server rekey-interval.

**Syntax** `show ssh server rekey-interval status`

**Modes** Privileged EXEC mode

# show startup-config

Displays the contents of the startup configuration.

**Syntax** `show startup-config`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

**Examples** To display the startup configuration:

```
switch# show startup-config

chassis virtual-ip 10.24.73.50/20
no diag post enable
linecard 2 LC48x10G
linecard 4 LC48x10G
class-map default
match any
!
logging rbridge-id 1
raslog console INFO
!
logging auditlog class SECURITY
logging auditlog class CONFIGURATION
logging auditlog class FIRMWARE
logging syslog-facility local LOG_LOCAL7
switch-attributes 1
chassis-name VDX8770-4
host-name sw0
!
support rbridge-id 1
ffdc
!
snmp-server contact "Field Support."
snmp-server location "End User Premise."
snmp-server sys-descr "Brocade VDX Switch."
snmp-server community ConvergedNetwork
snmp-server community OrigEquipMfr rw
snmp-server community "Secret C0de" rw
snmp-server community common!
(Output truncated)
```

**Related Commands** [show running-config](#), [show startup-db](#)

## show startup-db

Displays the startup database information.

**Syntax** **show startup-db**

**Parameters**

Refer to the Usage Guidelines.

**Modes** Privileged EXEC mode

**Usage Guidelines** Enter **show startup-db ?** to display the list of available database entries.

**Examples** To display the logging configuration in the startup database:

```
switch# show startup-db logging

logging rbridge-id 1
  raslog console INFO
!
logging auditlog class SECURITY
logging auditlog class CONFIGURATION
logging auditlog class FIRMWARE
logging syslog-facility local LOG_LOCAL7
```

**Related Commands** [show running-config](#), [show startup-config](#)



## show statistics access-list

For a given network protocol and inbound/outbound direction, displays ACL statistical information. You can show statistics for a specified ACL or only for that ACL on a specified interface. You can also display statistical information for all ACLs bound to a specified switch interface, VLAN, VE, or VXLAN overlay gateway.

**Syntax** The following version displays statistical information for either the inbound or the outbound direction of a specified ACL:

```
show statistics access-list { ip | ipv6 | mac } name { in | out }
```

For either the inbound or the outbound direction on a specified N-gigabite physical Ethernet, port-channel, or VLAN interface, the following version displays statistical information for all ACLs bound to that interface:

```
show statistics access-list interface { <N>gigabitethernet rbridge_id/slot/port | port-channel index | vlan vlan_id } { in | out }
```

For either the inbound or the outbound direction on a specified virtual Ethernet (VE) interface, the following version displays statistical information for all ACLs bound to that interface. You can also include ACLs specific to an RBridge:

```
show statistics access-list interface ve vlan_id { in | out } [ rbridge-id { rbridge_id | all } ]
```

For the inbound direction on a specified VXLAN overlay-gateway, the following version displays statistical information for all ACLs bound to that gateway:

```
show statistics access-list overlay-gateway overlay_gateway_name in
```

For either the inbound or the outbound direction, on a specified N-gigabite physical Ethernet, port-channel, or VLAN interface, the following version displays statistics of the rules in a specified MAC ACL bound to that interface:

```
show statistics access-list mac name interface { <N>gigabitethernet rbridge_id/slot/port | port-channel index | vlan vlan_id } { in | out }
```

For either the inbound or the outbound direction, on a specified N-gigabite physical Ethernet or port-channel interface, the following version displays statistics of the rules in a specified Layer 3 ACL bound to that interface:

```
show statistics access-list { ip | ipv6 } name interface { <N>gigabitethernet rbridge_id/slot/port | port-channel index } { in | out }
```

For either the inbound or the outbound direction, on a specified virtual Ethernet (VE) interface, the following version displays statistics of the rules in a specified Layer 3 ACL bound to that interface. You can also include ACLs specific to an RBridge:

```
show statistics access-list { ip | ipv6 } name interface ve vlan_id in | out } [ rbridge-id { rbridge_id | all } ]
```

**Parameters** **ip** | **ipv6** | **mac**

Specifies the network protocol.

**name**

Specifies the ACL name.

**interface**

Filter by interface.

<N>**gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge\_id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**port-channel number**

Specifies a port-channel. Available channels range from 1 through 6144.

**vlan vlan\_id**

(Available only on Layer 2) Specifies a VLAN.

**ve vlan\_id**

(Available only on Layer 3) Specifies a virtual Ethernet (VE).

**rbridge-id**

(for a VE interface) To display ACLs beyond the local node, include this keyword and the relevant of the following:

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**overlay-gateway overlay\_gateway\_name**

Specifies a VXLAN overlay-gateway.

**in | out**

Specifies the ACL binding direction (incoming or outgoing).

**Modes** Privileged EXEC mode

**Usage Guidelines** Statistics are displayed only for rules that contain the **count** keyword.

**Command Output** The **show statistics access-list** command displays the following information:

| Output field | Description                                                                                                                               |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Uncount      | The counter resource is not allocated. This is typically seen if counting is not supported or if the hardware resources limit is reached. |
| Unwritten    | The rule is inactive and is not programmed in the hardware. This is typically seen when the hardware resources limit is reached.          |

**Examples** The following example displays inbound ACL statistics for a named IPv4 ACL:

```
switch# show statistics access-list ip l3ext in
ip access-list l3ext TenGigabitEthernet 1/1/8 in
seq 76 deny ip 10.10.75.10 0.0.0.0 any count log (795239 frames)
seq 77 hard-drop ip 10.10.75.10 0.0.0.0 10.10.11.0 0.0.0.255 count log (0 frames)
seq 78 hard-drop ip any 10.10.11.0 0.0.0.255 count log (0 frames)
seq 79 hard-drop ip any 10.10.0.0 0.0.255.255 count log (0 frames)
seq 80 hard-drop ip 10.10.75.10 0.0.0.0 any count log (0 frames)
seq 81 hard-drop ip 10.10.75.0 0.0.0.0 10.10.0.0 0.0.255.255 count log (0 frames)
seq 91 hard-drop ip any any count (0 frames)
seq 100 deny udp 10.10.75.0 0.0.0.255 10.10.76.0 0.0.0.255 count log (0 frames)
seq 1000 permit ip any any count log (0 frames)
```

The following example displays inbound ACL statistics for a specified ten-gigabit interface:

```
switch# show statistics access-list interface tengigabitethernet 1/4/1 in
ipv6 access-list ipv6-std-acl on TenGigabitEthernet 1/4/1 at Ingress (From User)
  seq 10 permit host 0:1::1
  seq 20 deny 0:2::/64
  seq 30 hard-drop any count (100 frames)
```

The following example displays inbound statistics for all ACLs bound to a specified VE interface:

```
switch# show statistics access-list interface ve 3010 in
ipv6 access-list ip_acl_3 on Ve 3010 at Ingress (From User)
  seq 10 deny ipv6 2001:3010:131:35::/64 2001:1001:1234:1::/64 count (0 frames)
  seq 20 permit ipv6 2001:3010:131:35::/64 2001:3001:1234:1::/64
```

The following example displays (inbound) statistics for all ACLs bound to an overlay gateway:

```
switch# show statistics access-list overlay-gateway gw121 in
mac access-list stdmacaclin on overlay-gateway gw121 at Ingress (From User)
ip access-list stdipaclin on overlay-gateway gw121 at Ingress (From User)
ipv6 access-list stdipv6aclin on overlay-gateway gw121 at Ingress (From User)
```

**Related Commands**    [access-group](#), [access-list](#), [clear counters access-list](#), [show access-list](#), [show running-config access-list](#)

## show storm-control

Displays information for traffic controlled by configured rate limits.

**Syntax** **show storm-control**

**show storm-control broadcast** [ **interface** { <N>**gigabitethernet** } *rbridge-id/slot/port* ]

**show storm-control multicast** [ **interface** { <N>**gigabitethernet** } *rbridge-id/slot/port* ]

**show storm-control unknown-unicast** [ **interface** { <N>**gigabitethernet** } *rbridge-id/slot/port* ]

**Parameters** **storm-control**

Displays all BUM (Broadcast, Unknown unicast and Multicast)-related configurations in the system.

**broadcast**

Displays all BUM-related configurations in the system for the broadcast traffic type.

**interface**

Displays all BUM-related configurations in the system for the specified interface.

**<N>gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**multicast**

Displays all BUM-related configurations in the system for the multicast traffic type.

**unknown-unicast**

Displays all BUM-related configurations in the system for the unknown-unicast traffic type.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display BUM storm-control-related configuration for the entire system, for specified traffic types, for specified interfaces, or for specified traffic types on specified interface.

**Examples** To display storm-control information for broadcast traffic on the 10-gigabit Ethernet interface 102/4/1:

```
switch# show storm-control broadcast interface tengigabitethernet 102/4/1
Interface  Type          rate (Mbps)  conformed  violated  total
Te102/4/1  broadcast     100,000      12500000000 12500000000 25000000000
```

To display storm-control information for all traffic on the 10-gigabit Ethernet interface 102/4/1:

```
switch# show storm-control interface tengigabitethernet 102/4/1
```

| Interface | Type            | rate (Mbps) | conformed   | violated    | total       |
|-----------|-----------------|-------------|-------------|-------------|-------------|
| Te102/4/1 | broadcast       | 100,000     | 12500000000 | 12500000000 | 25000000000 |
| Te102/4/1 | unknown-unicast | 100,000     | 12500000000 | 12500000000 | 25000000000 |
| Te102/4/1 | multicast       | 100,000     | 12500000000 | 12500000000 | 25000000000 |

To display storm-control information for all traffic in the system:

```
switch# show storm-control
```

| Interface | Type            | rate (Mbps) | conformed   | violated    | total       |
|-----------|-----------------|-------------|-------------|-------------|-------------|
| Te102/4/1 | broadcast       | 100,000     | 12500000000 | 12500000000 | 25000000000 |
| Te102/4/1 | unknown-unicast | 100,000     | 12500000000 | 12500000000 | 25000000000 |
| Te102/4/1 | multicast       | 100,000     | 12500000000 | 12500000000 | 25000000000 |
| Te102/4/2 | broadcast       | 100,000     | 12500000000 | 12500000000 | 25000000000 |
| Te102/4/3 | broadcast       | 100,000     | 12500000000 | 12500000000 | 25000000000 |
| Te102/4/4 | unknown-unicast | 100,000     | 12500000000 | 12500000000 | 25000000000 |

To display storm-control information for all broadcast traffic the system:

```
switch# show storm-control broadcast
```

| Interface | Type      | rate (Mbps) | conformed   | violated    | total       |
|-----------|-----------|-------------|-------------|-------------|-------------|
| Te102/4/1 | broadcast | 100,000     | 12500000000 | 12500000000 | 25000000000 |
| Te102/4/2 | broadcast | 100,000     | 12500000000 | 12500000000 | 25000000000 |
| Te102/4/3 | broadcast | 100,000     | 12500000000 | 12500000000 | 25000000000 |

## show support

Displays a list of core files on the switch.

**Syntax** `show support [ rbridge-id { rbridge-id | all } ]`

**Command Default** Displays information for the local switch.

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all switches in the fabric.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

Pagination is not supported with this command. Use the "more" parameter to display the output one page at a time.

**Examples** To display the core files:

```
switch# show support
No core or FFDC data files found!
```

**Related Commands** [clear support](#), [copy support](#), [show running-config support](#)

# show system

Displays hardware and software system information.

**Syntax** `show system { rbridge-id rbridge-id }`

**Parameters** `rbridge-id rbridge-id`  
Specifies an RBridge ID.

**Modes** Privileged EXEC mode

**Examples** To display the system information:

```
switch# show system

Stack MAC                : 00:05:33:4B:CC:37
  -- UNIT 0 --
Unit Name                 : sw0
Switch Status             : Online
Hardware Rev              : 97.4
Ten Gigabit Ethernet Port(s) : 60
Up Time                   : up 1 day, 2:29
Current Time              : 21:20:50 GMT
NOS Version               :
Jumbo Capable             : yes
Burned In MAC             : 00:05:33:4B:CC:37
Management IP             : 10.24.85.74
Management Port Status   : UP
  -- Power Supplies --
PS1 is faulty
PS2 is OK
  -- Fan Status --
Fan 1 is Ok
Fan 2 is Ok
Fan 3 is Ok
```

**Related  
Commands** [show version](#)

## show system internal nas

Displays all NAS server IP addresses in the system.

- Syntax** `show system internal nas`
- Modes** Privileged EXEC mode
- Usage Guidelines** This command is supported only on Brocade VDX 8770-4, VDX 8770-8, VDX 6740, and VDX 6740T switches.
- Examples** To display the IP addresses for all active NAS servers:
- ```
switch0# show system internal nas
Rbridge 1
-----
Auto-NAS Enabled
Cos 2
Dscp 10
Traffic Class 5
nas server-ip 10.192.100.100/32 vlan 100
nas server-ip 10.192.100.101/32 vrf brown
```
- Related Commands** [backup-advertisement-interval](#), [clear nas statistics](#), [nas auto-qos](#), [nas server-ip](#), [show cee maps](#), [show nas statistics](#), [show running-config nas server-ip](#), [show system internal nas](#)



# show system monitor

Displays the overall status for a selected switch.

**Syntax** `show system monitor { rbridge-id [ rbridge-id | all ] }`

**Parameters** **rbridge-id**

Specifies an RBridge or all RBridges.

**rbridge-id**

Specifies an RBridge ID.

**all**

Specifies all RBridges.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use this command to display the overall switch status and the status of the contributors defined as part of the policy.

This command is supported only on the local switch.

## Examples

```
switch# show system monitor

** System Monitor Switch Health Report **
RBridge 128      switch status      : HEALTHY
                  Time of Report    : 2012-06-19 03:18:28
                  Power supplies monitor : HEALTHY
                  Temperatures monitor  : HEALTHY
                  Fans monitor          : HEALTHY
                  CID-Card monitor      : HEALTHY
                  MM monitor            : HEALTHY
                  LC monitor            : HEALTHY
                  SFM monitor           : HEALTHY
                  Flash monitor         : HEALTHY
```

**Related Commands** [system-monitor](#), [system-monitor-mail](#)

## show telnet server status

Displays the current Telnet server status.

<b>Syntax</b>	<b>show telnet server status [ rbridge-id { <i>rbridge-id</i>   all } ]</b>
<b>Parameters</b>	<b>rbridge-id</b> Specifies an RBridge or all RBridges. <b><i>rbridge-id</i></b> Specifies an RBridge ID. <b>all</b> Specifies all RBridges.
<b>Modes</b>	Privileged EXEC mode
<b>Examples</b>	When Telnet server status is enabled:  <pre>switch# show telnet server status [rbridge-id rbridge-id   all] Telnet server status: Enabled</pre> When Telnet server is disabled in rbridge-id 3:  <pre>switch# show telnet server status rbridge-id 3 rbridge-id 3 Telnet server status: Disabled switch#</pre>
<b>Related Commands</b>	<a href="#">show running-config telnet server</a> , <a href="#">telnet server shutdown</a>

# show threshold monitor

Displays the current status of environmental thresholds and alerts for interfaces, security, and SFPs.

**Syntax** `show threshold monitor [ interface all area | security area [ login-violation [ rbridge-id rbridge-id | all ] | telnet-violation [ rbridge-id rbridge-id | all ] ] | sfp all area [ current | rxp | temperature | txp | voltage ]`

**Parameters**

- interface all area**  
Displays status of interface thresholds and alerts.
- security area**  
Displays status of security thresholds and alerts.
  - login-violation**  
Displays status of login violations.
  - telnet-violation**  
Displays status of Telnet violations.
- sfp all area**  
Displays status of SFP thresholds and alerts.
  - current**  
Amount of current supplied to the SFP transceiver.
  - rxp**  
Amount of incoming laser power, in microWatts ( $\mu$ W).
  - temperature**  
Temperature of the SFP, in degrees Celsius.
  - txp**  
Amount of outgoing laser power, in microWatts ( $\mu$ W).
  - voltage**  
Amount of voltage supplied to the SFP.
- rbridge-id rbridge-id**  
Specifies a switch by means of the switch's RBridge ID.
- all**  
Reports status for all nodes in the cluster.

**Modes** Privileged EXEC mode

**Examples**

```
switch# show threshold monitor security area login-violation rbridge-id all
Rbridge-Id   Area                Value  Status  Monitoring Status
154          Login Violation      0      In Range Monitoring
```

**Related Commands** [show defaults threshold](#), [system-monitor](#), [system-monitor-mail](#), [threshold-monitor interface](#)

# show tunnel

Displays statistics for tunnels.

**Syntax** **show tunnel** *ID* [ **rbridge-id** *rbridge-id* ]  
**show tunnel** [ **site name** ] **brief** [ **rbridge-id** *rbridge-id* ]  
**show tunnel dst-ip** *dst\_ip\_address* **brief** [ **rbridge-id** *rbridge-id* ]  
**show tunnel mode vxlan** **brief** [ **rbridge-id** *rbridge-id* ]  
**show tunnel nsx service-node** [ **rbridge-id** *rbridge-id* ]  
**show tunnel overlay-gateway** *name* **brief** [ **rbridge-id** *rbridge-id* ]  
**show tunnel src-ip** *src\_ip\_address* **brief** [ **rbridge-id** *rbridge-id* ]  
**show tunnel statistics** [ **rbridge-id** *rbridge-id* ]

**Parameters** **tunnel ID**  
Specifies one tunnel ID for which to show statistics. Range is 1 to 65535.

**rbridge-id rbridge-id**  
Specifies an RBridge ID.

**site name**  
Specifies a site that represents a remote VCS Fabric or the other end of the tunnel.

**brief**  
Displays brief listings for all tunnels.

**dst-ip dst\_ip\_address**  
Filters statistics by tunnel destination IP address.

**mode**  
Filters statistics by tunnel mode; in Network OS, the only supported mode is vxlan.

**vxlan**  
Filters statistics on all VXLANs.

**nsx service-node**  
Filters BUM-enabled tunnels to NSX service nodes.

**overlay-gateway name**  
Filter by gateway name.

**src-ip src\_ip\_address**  
Filters statistics by tunnel source IP address.

**statistics**  
Displays packet information for all tunnels.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command lists statistics for all the tunnels in the VCS. The output includes the tunnel ID, source IP address, destination IP address, VRF, administration state, and operational state.

For **show tunnel ID**, details of the specified tunnel are shown. Output includes the tunnel ID, tunnel IF index, administration state, operational state, source IP address, gateway (if any), destination IP address, packet count, byte count, and current outgoing path.

For **show tunnel statistics**, you receive packet information for all tunnels.

This command is available only for a switch that is in logical chassis cluster mode.

To show brief listings for all tunnels in the VCS:

```
switch# show tunnel brief
Tunnel 1, mode VXLAN
Admin state: Up, Oper state: Up
Source IP 10.10.10.1, Vrf default
Destination IP 150.1.1.1
```

```
Tunnel 200, mode VXLAN
Admin state: Up, Oper state: Down
Source IP 100.1.1.11, Vrf default
Destination IP 160.1.1.1
```

```
Tunnel 300, mode VXLAN
Admin state: Up, Oper state: Up
Source IP 100.1.1.11, Vrf default
Destination IP 170.1.1.1
```

To display statistics for a tunnel site:

```
switch# show tunnel site VCS_2 brief
Tunnel 61441, mode VXLAN, rbridge-ids 10
Admin state UP, Oper state UP
Source IP 10.2.2.1, Vrf default-vrf
Destination IP 10.1.1.1
```

To display statistics for VLANs attached to the overlay gateway:

To show statistics for the tunnel with the ID of 100:

```
switch# show tunnel 61441
Tunnel 61441, mode VXLAN, rbridge-ids 1,4
Ifindex 1000000, Admin state up, Oper state down
Overlay gateway "myGateway", ID 1
Source IP 10.10.10.1 ( Loopback 10 ), Vrf blue
Destination IP 60.60.60.1, Site mySite1
Active next hop on rbridge 1: (none)
Active next hop on rbridge 4: (none)
Packet count: RX 0 TX 0
Byte count : RX (NA) TX 0
```

To show high-level statistics for all tunnels:

```
switch# show tunnel statistics
```

Tunnel ID	Packets		Bytes	
	TX	RX	TX	RX
1	22200	2272	1982888	11000
200	2233	888922	22333	7867822

## show udd

Shows global UDLD information.

**Syntax** `show udd`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command displays global unidirectional link detection (UDLD) protocol configuration values such as whether the protocol is enabled on the switch and the *hello* time and timeout values.

**Examples** To display global UDLD information on the switch:

```
switch# show udd
UDLD Global Information
  Admin State:      UDLD enabled
  UDLD hello time:  500 milliseconds
  UDLD timeout:    2500 milliseconds
```

**Related  
Commands** [protocol udd](#)

# show udd interface

Displays unidirectional link detection (UDLD) protocol information for the specified interfaces.

**Syntax** `show udd interface [ <N>gigabitethernet rbridge-id/slot/port ]`

**Parameters** `<N> gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** The following describes the values that appear in the headings for this command.

**TABLE 17** Description UDLD headings

Heading	Description
State	Describes if UDLD is enable or disabled.
Mode	Describes if the mode is Receive, Transmit, or Both (Transmit/Receive).
Advertise Transmitted	Describes how often the advertisement is transmitted.
Hold time for advertise	Describes the hold time for receiving devices before discarding.
Re-init Delay Timer	The timer for the reinitializing delay
Tx Delay Timer	The timer for transmission
DCBX Version	The current DCBX version
Auto-Sense	States whether Auto-Sense is active.
Transmit TLVs	Describes what information is being transmitted for the TLV.
DCBX FCoE Priority Bits	Describes the current FCoE priority bit for DCBX.

**Examples** To display UDLD information for a specific 10-gigabitEthernet interface:

```
switch# show udld interface te 5/0/1
Global Admin State: UDLD enabled
UDLD information for TenGigabitEthernet 5/0/1
  UDLD Admin State: Enabled
  Interface Operational State: Link is down
  Remote hello time: Unknown
  Local system id: 0x1ecd7bfa Remote system id: Unknown
  Local port : 5/0/1 Remote port : Unknown
  Local link id: 0x0 Remote link id: Unknown
  Last Xmt Seq Num: 1 Last Rcv Seq Num: Unknown
```

**Related  
Commands** [protocol udld](#)



# show uddl statistics

Shows UDLD statistics.

**Syntax** `show uddl statistics [ interface { <N>gigabitethernet rbridge-id/slot/port } ]`

**Parameters** `<N>gigabitethernet`

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace `<N>gigabitethernet` with the desired operand (for example, `tengigabitethernet` specifies a 10-Gb Ethernet port). The use of `gigabitethernet` without a speed value specifies a 1-Gb Ethernet port.

*rbridge-id*

Specifies an RBridge ID.

*slot*

Specifies a valid slot number.

*port*

Specifies a valid port number.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command displays all unidirectional link detection (UDLD) protocol statistics or shows the statistics on a specified port.

**Examples** To show UDLD statistics on a specific 10-gigabitEthernet interface:

```
switch# show uddl statistics interface te 5/0/1
```

**Related Commands** [protocol uddl](#)

## show users

Displays the users logged in to the system and locked user accounts.

<b>Syntax</b>	<b>show users [ rbridge-id { <i>rbridge-id</i>   all } ]</b>
<b>Parameters</b>	<b>rbridge-id</b>
	Specifies an RBridge or all RBridges.
	<b><i>rbridge-id</i></b>
	Specifies an RBridge ID.
	<b>all</b>
	Specifies all RBridges.
<b>Modes</b>	Privileged EXEC mode RBridge ID mode
<b>Examples</b>	To display active user sessions and locked user accounts:
	<pre>switch# show users   rbridge-id   all **USER SESSIONS** RBridge ID      Username  Role   Device  Time Logged In 195             admin    admin  Cli     2014-01-15 15:11:26 **LOCKED USERS** RBridge ID      Username no locked users</pre>

**Related Commands**    [show running-config username](#)

## show vcs

Displays the Brocade VCS Fabric configuration.

**Syntax** `show vcs { detail | virtual-ip }`

**Parameters** `detail`

Displays detailed information about each RBridge in the fabric.

`virtual-ip`

Displays the virtual IP address.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the Brocade VCS Fabric parameters (VCS ID and the switch RBridge ID) and Brocade VCS Fabric mode.

**Examples** To display the VCS summary view for a switch that is in fabric cluster mode ("Local-Only"):

```
switch# show vcs

Config Mode      : Local-Only
VCS ID           : 1
Total Number of Nodes           : 1
Rbridge-Id  WWN                Management IP  VCS Status  Fabric Status
HostName
1           10:00:00:05:33:51:63:42* 10.17.37.154  Online      Online
sw0
```

To display the VCS configuration details:

```
switch# show vcs detail
Config Mode      : Local-Only
VCS ID          : 1
Total Number of Nodes      : 6
Node :1
  Serial Number : BKN2501G00R
  Condition     : Good
  Status       : Connected to Cluster
  VCS Id       : 1
  Rbridge-Id   : 38
  Co-ordinator : NO
  WWN          : 10:00:00:05:33:52:2A:82
  Switch MAC   : 00:05:33:52:2A:82
  FCF MAC     : 0B:20:B0:64:10:27
  Switch Type  : BR-VDX6720-24-C-24
  Internal IP  : 127.1.0.38
  Management IP : 10.17.10.38
Node :2
  Serial Number : BZA0330G00P
  Condition     : Good
  Status       : Connected to Cluster
  VCS Id       : 1
  Rbridge-Id   : 80*
  Co-ordinator : NO
  WWN          : 10:00:00:05:33:78:00:00
  Switch MAC   : 00:05:33:78:00:81
  FCF MAC     : 19:30:00:48:19:31
  Switch Type  : Brocade VDX 8770-4
  Internal IP  : 127.1.0.80
  Management IP : 10.17.11.80
Node :3
  Serial Number : BW2516G01G
  Condition     : Good
  Status       : Connected to Cluster
  VCS Id       : 1
  Rbridge-Id   : 82
  Co-ordinator : NO
  WWN          : 10:00:00:05:33:6F:2B:D2
  Switch MAC   : 00:05:33:6F:2B:D2
  FCF MAC     : 0B:20:B0:64:10:26
  Switch Type  : Elara2f
  Internal IP  : 127.1.0.82
  Management IP : 10.17.10.82
(Output truncated)
```

To display the VCS summary view for a switch (called *rb1*) that is in logical chassis cluster mode ("Distributed"):

```
rb1# show vcs
Config Mode      : Distributed
VCS ID          : 300
VCS GUID        : 1001bffd-24f5-4a11-8adf-d00991dcae48
Total Number of Nodes      : 3
Rbridge-Id      WWN
IP              Status                               HostName      Management
-----
1              10:00:00:05:1E:CD:22:6A*  10.17.10.21   Online
rb1
2              >10:00:00:05:1E:CD:11:6A  10.17.10.22   Online      rb2
3              10:00:00:05:33:00:6C:80  10.17.10.23   Online      sw0
```

To display the VCS configuration details:

```

rb1# show vcs detail
Config Mode      : Distributed
VCS ID          : 300
VCS GUID        : 1001bffd-24f5-4a11-8adf-d00991dcae48
Total Number of Nodes      : 3
Nodes Disconnected from Cluster : 0
Cluster Condition          : Good
Cluster Status             : All Nodes Present in the Cluster
Node :1
  Serial Number      : BKH0322F01L
  Condition          : Good
  Status             : Connected to Cluster
  VCS Id             : 300
  Rbridge-Id        : 1*
  Co-ordinator       : NO
  WWN                : 10:00:00:05:1E:CD:22:6A
  Switch MAC        : 00:05:1E:CD:22:6A
  FCF MAC           : 00:05:1E:CD:22:6A
  Switch Type       : VDX6720-24
  Firmware Ver      : v4.0.0pkadu_nos4.0.0_pit_a_03_0425_01133_att1
  Internal IP       : 127.1.0.1
  Management IP     : 10.17.10.21
Node :2
  Serial Number      : BKH0322F01Y
  Condition          : Good
  Status             : Co-ordinator
  VCS Id             : 300
  Rbridge-Id        : 2
  Co-ordinator       : YES
  WWN                : 10:00:00:05:1E:CD:11:6A
  Switch MAC        : 00:05:1E:CD:11:6A
  FCF MAC           : 00:05:1E:CD:11:6A
  Switch Type       : VDX6720-24
  Firmware Ver      : v4.0.0pkadu_nos4.0.0_pit_a_03_0425_01133_att1
  Internal IP       : 127.1.0.2
  Management IP     : 10.17.10.22
Node :3
  Serial Number      : BKH0320F005
  Condition          : Good
  Status             : Connected to Cluster
  VCS Id             : 300
  Rbridge-Id        : 3
  Co-ordinator       : NO
  WWN                : 10:00:00:05:33:00:6C:80
  Switch MAC        : 00:05:33:00:6C:80
  FCF MAC           : 00:05:33:00:6C:80
  Switch Type       : VDX6720-24
  Firmware Ver      : v4.0.0pkadu_nos4.0.0_pit_a_03_0425_01133_att1
  Internal IP       : 127.1.0.3
  Management IP     : 10.17.10.23

```

To issue the **show vcs** command on a VCS-disabled switch:

```

switch# show vcs
state      : Disabled

```

To display the virtual IP address:

```

switch# show vcs virtual-ip
Virtual IP      : 10.21.87.2/20
Associated rbridge-id : 2

```

## show version

Displays the current firmware version.

<b>Syntax</b>	<b>show version</b> [ <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ] [ <b>all-partitions</b> ] [ <b>brief</b> ]
<b>Parameters</b>	<p><b>rbridge-id</b></p> <p>Specifies an RBridge or all RBridges.</p> <p><i>rbridge-id</i></p> <p>Specifies an RBridge ID.</p> <p><b>all</b></p> <p>Specifies all RBridges.</p> <p><b>all-partitions</b></p> <p>Displays firmware information for both the active and the standby partitions. For each module, both partitions are displayed.</p> <p><b>brief</b></p> <p>Displays a brief version of the firmware information.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Use this command to display firmware version information and build dates. The default command output includes the following information:</p> <ul style="list-style-type: none"> <li>• Network Operating System Version—The firmware version number</li> <li>• Firmware name—The label of the firmware image</li> <li>• Build Time—The build date and time of the firmware</li> <li>• Install time—The date and time of the firmware installation</li> <li>• Kernel—The Linux kernel version</li> <li>• Boot-Prom—The size of the boot programmable read-only memory</li> <li>• Control Processor—The control processor model and memory</li> </ul> <p>When executed on the active management module, this command displays firmware versions on both management modules and interface modules. When executed on the standby management module, only the firmware versions for the standby management module are displayed.</p> <p>The <b>rbridge-id</b> and <b>all</b> operands are not supported.</p>

**Examples** To display the firmware version information for all partitions:

```
switch# show version all-partitions

Network Operating System Software
Network Operating System Version: 3.0.0
Copyright (c) 1995-2012 Brocade Communications Systems, Inc.
Firmware name: 3.0.0
Build Time: 01:18:17 May 26, 2012
Install Time: 10:16:24 May 27, 2012
Kernel: 2.6.34.6
BootProm: 1.0.0
Control Processor: e500mc with 7168 MB of memory
Slot Name Primary/Secondary Versions Status
-----
M1 NOS 4.1.0 STANDBY
4.1.0
M2 NOS 4.1.0 ACTIVE*
4.1.0
L1/0 NOS 4.1.0 ACTIVE
4.1.0
L1/1 NOS 4.1.0 STANDBY
4.1.0
L2/0 NOS 4.1.0 ACTIVE
4.1.0
L2/1 NOS 4.1.0 STANDBY
4.1.0
```

To display the firmware for all partitions in the brief view:

```
switch# show version all-partitions brief

Slot Name Primary/Secondary Versions Status
-----
M1 NOS 4.1.0 STANDBY
4.1.0
M2 NOS 4.1.0 ACTIVE*
4.1.0
L1/0 NOS 4.1.0 ACTIVE
4.1.0
L1/1 NOS 4.1.0 STANDBY
4.1.0
L2/0 NOS 4.1.0 ACTIVE
4.1.0
L2/1 NOS 4.1.0 STANDBY
4.1.0
```

**Related Commands** [firmware download, show firmwaredownloadstatus](#)

## show virtual-fabric status

Displays the status of the Virtual Fabric (VF): VF-capable, VF-incapable, or VF-enabled.

**Syntax** `show virtual-fabric status`

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the status of the VF with respect to all nodes in the fabric. The possible states are as follows:

- VF-capable: All nodes in the fabric can support service or transport VFs.
- VF-incapable: At least one node in the fabric cannot support service or transport VFs.
- VF-enabled: The Virtual Fabric is already enabled and service or transport VFs are supported

### Examples

```
Typical command output display.
switch# show virtual-fabric status
Fabric is virtual-fabric incapable
Rbridge-Id      Virtual-fabric status
=====
1                capable
2                capable
3                incapable
4                capable
```



# show vlan

Displays information about one or more VLAN interfaces.

**Syntax** `show vlan [ vlan_id | brief [ provisioned | unprovisioned ] | classifier ]`

**Parameters** `vlan_id`

Specifies the VLAN interface to display.

**brief**

Displays VLAN information for all interfaces including static and dynamic.

**classifier**

Displays all VLAN classification information.

**provisioned**

Displays provisioned VLANs.

**unprovisioned**

Displays unprovisioned VLANs.

**Modes** Privileged EXEC mode

**Examples** The following example displays information about an 802.1Q VLAN:

```
switch# show vlan 1

VLAN      Name                State    Ports
          (u)-Untagged, (t)-Tagged
          (c)-Converged
=====
1         default            ACTIVE   Te 0/0(t)
          Te 0/8(t)
          Po 1(t)
```

The following example shows all VLANs that are configured, provisioned (active) and unprovisioned (inactive):

```
switch# show vlan brief

Total Number of VLANs configured:    6
Total Number of VLANs unprovisioned: 0
Total Number of VLANs provisioned:   6
VLAN      Name                State    Ports                Classification
(F)-FCoE          (u)-Untagged,
(T)-Transparent   (t)-Tagged
(R)-RSPAN         (c)-Converged
=====
300        vlan300             ACTIVE   Te 4/0/1(t)
5000(T)    vlan5000           ACTIVE   Te 2/0/1/(t)        ctag 50, 60, 100-200
          Te 4/0/1(t)        ctag 50, 60, 100-200
5500(T)    vlan5500           ACTIVE   Te 3/0/1/(t)        ctag 1, 1002, 4093, 4095
5800        vlan5800           ACTIVE   Te 2/0/1(t)         ctag 800
6000(T)    vlan6000           ACTIVE   Te 4/0/1/(t))
```

The following example shows only provisioned VLANs:

```
switch# show vlan brief provisioned
Total Number of VLANs configured: 8
Total Number of VLANs unprovisioned: 3
Total Number of VLANs provisioned: 5
VLAN      Name      State  Ports      Classification
(F)-FCoE
(R)-RSPAN
=====
1          default  ACTIVE Te 2/0/5(c)
5000      VLAN5000 ACTIVE Te 2/0/5(t)  ctag 100
          Te 2/0/6(u)  ctag 200
          Te 3/0/4(u)
          Te 3/0/5(u)  mac 0004.0004.0004
6000      VLAN6000 ACTIVE Te 2/0/5(t)  ctag 300
          Te 3/0/5(u)  mac 0002.0002.0002
          Te 3/0/5 (u) mac-group 1
          Po 10(t)    ctag 300
7000      VLAN7000 ACTIVE Te 2/0/5 (t) ctag 400
          Te 3/0/5 (u) mac 0006.0006.0006
          Te 3/0/5 (u) mac-group 2
1002 (F)  VLAN1002 ACTIVE Te 2/0/16(t)
          Te 3/0/15(t)
```

The following example shows only unprovisioned VLANs:

```
switch# show vlan brief unprovisioned
Total Number of VLANs configured: 8
Total Number of VLANs unprovisioned: 3
Total Number of VLANs provisioned: 5
VLAN      Name      State
Ports
(F)-FCoE
(R)-RSPAN
=====
2000      VLAN2000  INACTIVE (unprovisioned)
4000      VLAN4000  INACTIVE (unprovisioned)
8000      VLAN8000  INACTIVE (unprovisioned)
```

# show vlan brief

Displays basic information about switch VLAN interfaces. You can filter to display only provisioned or unprovisioned VLANs.

**Syntax** `show vlan brief [ provisioned | unprovisioned ]`

**Parameters**

**provisioned** Displays provisioned VLANs.

**unprovisioned** Displays unprovisioned VLANs.

**Modes** Privileged EXEC mode

**Command Output** The `show vlan brief` command displays the following information:

Output field	Description
VLAN	Displays the <i>vlan_ID</i> .
Name	Displays one of the following strings: <ul style="list-style-type: none"> <li>"default"</li> <li>A name assigned to the VLAN using the <b>name</b> command</li> <li>A default name automatically assigned to the VLAN, composed of "VLAN" and the <i>vlan_ID</i>. For example, if the <i>vlan_ID</i> is 1000, the default name is VLAN1000.</li> </ul>
State	Displays "ACTIVE" for provisioned VLANs or "INACTIVE" for unprovisioned VLANs.
Ports	Displays the ports on which the VLAN is applied.
Classification	(Available only for provisioned).

**Examples** The following example shows all VLANs that are configured, provisioned (active) and unprovisioned (inactive). VLAN 5800 was assigned the name "marketing."

```
switch# show vlan brief
Total Number of VLANs configured:    6
Total Number of VLANs unprovisioned: 0
Total Number of VLANs provisioned:   6
VLAN      Name          State    Ports          Classification
(F)-FCoE                               (u)-Untagged,
(T)-Transparent                          (t)-Tagged
(R)-RSPAN                                (c)-Converged
=====
300       vlan300    ACTIVE   Te 4/0/1(t)
5000(T)   vlan5000  ACTIVE   Te 2/0/1/(t)   ctag 50, 60, 100-200
Te 4/0/1(t)   ctag 50, 60, 100-200
5500(T)   vlan5500  ACTIVE   Te 3/0/1/(t)   ctag 1, 1002, 4093, 4095
5800      marketing ACTIVE   Te 2/0/1(t)    ctag 800
6000(T)   vlan6000  ACTIVE   Te 4/0/1/(t))
```

**Related Commands** [name \(VLAN interfaces\)](#)

## show vlan classifier

Displays information about a specific VLAN classifier group.

<b>Syntax</b>	<b>show vlan classifier</b> [ <b>group</b> <i>number</i>   <b>interface</b> <i>group-number</i>   <b>interface port-channel</b> <i>number</i>   <b>rule</b> <i>number</i>   <b>interface</b> < <i>N</i> > <b>gigabitethernet</b> <i>rbridge-id/slot/port</i> ]
<b>Parameters</b>	<p><b>group</b> <i>number</i> Specifies the VLAN classifier group number. Valid values range from 1 through 16.</p> <p><b>interface</b> <i>group</i> <i>number</i> Specifies the VLAN classifier interface group number. Valid values range from 1 through 16.</p> <p><b>interface port-channel</b> <i>number</i> Specifies the VLAN classifier port-channel number. Valid values range from 1 through 63.</p> <p><b>rule</b> <i>number</i> Specifies the VLAN classifier rule number. Valid values range from 1 through 256.</p> <p><b>interface</b> &lt;<i>N</i>&gt;<b>gigabitethernet</b> Specifies a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace &lt;<i>N</i>&gt;<b>gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Use this command to display information about all configured VLAN classifier groups or a specific VLAN interface group.</p> <p>If a group ID is not specified, all configured VLAN classifier groups are shown. If a group ID is specified, a specific configured VLAN classifier group is shown.</p>

## show vlan private-vlan

Displays information about private VLANs.

**Syntax** `show vlan private-vlan`

**Modes** Privileged EXEC mode

### Examples

Typical command output display.  
switch# show vlan private-vlan

Primary	Secondary	Type	Ports	Classification
=====	=====	=====	=====	=====
6000		primary	Te 4/1/17(t) Te 1/2/17(t)	ctag 10 ctag 10
6000	6001	isolated	Te 4/1/17(t) Te 2/0/17(t)	ctag 11 ctag 11
6000	6002	community	Te 4/1/17(t) Te 3/1/17(t)	ctag 12 ctag 12
6000	6003	community	Te 4/1/17(t) Te 3/1/18(t)	ctag 13 ctag 13

## show vlan rspan-vlan

Displays information about remote SPAN VLANs.

**Syntax** `show vlan rspan-vlan`

**Modes** Privileged EXEC mode

**Examples**

```
sw0(conf-if-te-1/1/34)# do show vlan rspan-vlan
Total Number of VLANs configured      : 3
Total Number of VLANs provisioned     : 2
Total Number of VLANs unprovisioned   : 1
VLAN      Name      State      Ports      Classification
=====  =====  =====  =====  =====
6000 (R)  VLAN6000  INACTIVE (member port down) Te 1/1/34(t) ctag 121
6001 (R)  VLAN6001  INACTIVE (member port down) Te 1/1/34(t) ctag 555
```

**Related Commands** [rspan-vlan](#)

# show vnetwork

Displays virtual assets from the vCenter that are discovered on a Brocade VDX switch.

<b>Syntax</b>	<b>show vnetwork</b> [ <b>datacenter</b> [ <i>id</i>   <i>vcenter</i> ]   <b>dvpggs</b> [ <b>datacenter</b> <i>string</i>   <b>name</b> <i>string</i> ] { <b>vcenter</b> <i>string</i> }   <b>dvs</b> [ <b>datacenter</b> <i>string</i>   <b>name</b> <i>string</i> ] { <b>vcenter</b> <i>string</i> }   <b>hosts</b> [ <b>datacenter</b> <i>string</i>   <b>name</b> <i>string</i> ] { <b>vcenter</b> <i>string</i> }   <b>pgs</b> [ <b>datacenter</b> <i>string</i>   <b>name</b> <i>string</i> ] { <b>vcenter</b> <i>string</i> }   <b>vcenter status</b>   <b>vmpolicy</b> [ <b>macaddr</b> [ <b>datacenter</b> <i>string</i>   <b>mac</b> <i>mac_address</i> ] { <b>vcenter</b> <i>string</i> }   <b>vms</b>   <b>vss</b> [ <b>datacenter</b> <i>string</i>   <b>name</b> <i>string</i> ] { <b>vcenter</b> <i>string</i> } ]
<b>Parameters</b>	<p><b>datacenter</b></p> <p>Displays discovered data centers.</p> <p><i>id</i></p> <p>Datacenter ID (a string).</p> <p><i>vcenter</i></p> <p>vCenter name (a string).</p> <p><b>dvpggs</b></p> <p>Displays distributed virtual port groups.</p> <p><b>datacenter</b></p> <p>Selects a datacenter.</p> <p><b>name</b></p> <p>Selects a distributed virtual port group.</p> <p><b>vcenter</b></p> <p>Selects a vCenter (required).</p> <p><b>dvs</b></p> <p>Displays distributed virtual switches.</p> <p><b>datacenter</b></p> <p>Selects a datacenter.</p> <p><b>name</b></p> <p>Selects a distributed virtual switch name.</p> <p><b>vcenter</b></p> <p>Selects a vCenter (required).</p> <p><b>hosts</b></p> <p>Displays discovered hosts.</p> <p><b>datacenter</b></p> <p>Selects a datacenter.</p> <p><b>name</b></p> <p>Selects a host name.</p> <p><b>vcenter</b></p> <p>Selects a vCenter (required).</p> <p><b>pgs</b></p> <p>Displays discovered standard port groups.</p> <p><b>datacenter</b></p> <p>Selects a datacenter.</p> <p><b>name</b></p> <p>Selects a standard port group.</p> <p><b>vcenter</b></p>

	Selects a vCenter (required).
<b>vcenter status</b>	Displays configured vCenter status.
<b>vmpolicy</b>	Displays association between virtual network interface cards (vNICs) or VM kernel NICs (vmkNICs) and port groups or port profiles.
<b>macaddr</b>	Displays policies by MAC address.
<b>datacenter</b>	Selects a datacenter.
<b>mac</b>	Selects a six-octet MAC address; for example, 00:50:56:8e:00:4b.
<b>vcenter</b>	Selects a vCenter (required).
<b>vms</b>	Displays discovered VMs.
<b>vss</b>	Displays discovered standard virtual switches.
<b>datacenter</b>	Selects a datacenter.
<b>name</b>	Selects a virtual switch.
<b>vcenter</b>	Selects a vCenter (required).

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to display the virtual assets configured on the vCenter and discovered on the VDX switch.

The switch interface column information is local to each switch in the fabric.



Examples

```
switch# show vnetwork ?
Possible completions:
  datacenter Shows discovered datacenters
  diff       Shows vcenter and switch configuration diff
  dvpgs     Shows discovered distributed virtual port-groups
  dvs       Shows discovered distributed virtual switches
  hosts     Shows discovered hosts
  pgs       Shows discovered standard port-groups
  vcenter   Shows configured vCenter
  vmpolicy  Shows vnics/vmknics to portgroup to port-profile association
  vms       Shows discovered VMs
  vss       Shows discovered standard virtual switches
```

```
switch# show vnetwork dvpgs
dvPortGroup          dvSwitch          Vlan
=====
ProductionVMs       dvSwitch-Production 10-10,
dvSwitch-Production-DVUplinks-7589 dvSwitch-Production 0-4094,
switch# show vnetwork dvs
```

```
dvSwitch          Host          Uplink Name          Switch Interface
=====
dvSwitch-Production40 -             -                    -
dvSwitch-Production41 -             -                    -
Total Number of Entries: 2
switch# show vnetwork hosts
```

```
Host          Uplink Name          Uplink MAC          (d)Virtual Switch
Switch Interface
=====
ESX-4921.englab.brocade.com vmnic0          e4:1f:13:43:54:90 vSwitch0          -
115/0/5          vmnic2          00:1b:21:8f:4a:f0 dvSwitch-Production
115/0/1          vmnic4          00:05:33:26:3e:ba vSwitch1
ESX-4922.englab.brocade.com vmnic5          00:05:33:26:3e:bb dvSwitch-Production -
115/0/10         vmnic0          e4:1f:13:43:95:5c vSwitch0          -
115/0/10         vmnic2          00:05:33:26:2d:90 dvSwitch-Production
115/0/11         vmnic3          00:05:33:26:2d:91 dvSwitch-Production
115/0/2          vmnic5          00:05:1e:eb:f9:94 vSwitch1
```

```
switch# show vnetwork pgs
PortGroup          vSwitch          vlanId          Host
=====
TestVMs           vSwitch1         50-50,         ESX-4922.englab.brocade.com
                  vSwitch1         50-50,         ESX-4921.englab.brocade.com
VMkernel          vSwitch1         0-0,          ESX-4922.englab.brocade.com
                  vSwitch1         0-0,          ESX-4921.englab.brocade.com
```

```
switch# show vnetwork vcenter status
vCenter          Start          Elapsed (sec)          Status
=====
MYVC             2011-09-07 14:08:42 10                    In progress
```

```
switch# show vnetwork vmpolicy macaddr all
Associated MAC          Virtual Machine          (dv)PortGroup          Port-Profile
=====
00:50:56:72:42:4c -             ProductionVMs          auto-ProductionVMs
00:50:56:78:69:36 -             VMkernel              auto-VMkernel
00:50:56:7b:e5:41 -             ProductionVMs          auto-ProductionVMs
00:50:56:7d:96:16 -             VMkernel              auto-VMkernel
00:50:56:8e:00:4b CentOS-4921          ProductionVMs          auto-ProductionVMs
00:50:56:8e:00:4d CentOS-4921          TestVMs                auto-TestVMs
00:50:56:8e:00:50 CentOS-4922          TestVMs                auto-TestVMs
00:50:56:8e:00:51 CentOS-4922          ProductionVMs          auto-ProductionVMs
switch# show vnetwork vms
```

```
Virtual Machine          Associated MAC          IP Addr          Host
=====
```

Show commands

```

CentOS-4921      00:50:56:8e:00:4b -      ESX-4921.englab.brocade.com
                  00:50:56:8e:00:4d -      ESX-4921.englab.brocade.com
CentOS-4922      00:50:56:8e:00:50 -      ESX-4922.englab.brocade.com
                  00:50:56:8e:00:51 -      ESX-4922.englab.brocade.com
vSwitch          Host          Uplink Name    Switch Interface
=====
vSwitch0         djesxi-5064.englab.brocade.com  vmnic0         -
                  djesxi-5064.englab.brocade.com  vmnic1         -
                  ht-153.englab.brocade.com        vmnic0         -
                  ht-154.englab.brocade.com        vmnic0         -
vSwitch1         ht-153.englab.brocade.com        vmnic7         -
                  ht-154.englab.brocade.com        vmnic6         -
vSwitch2         ht-153.englab.brocade.com        vmnic7         -
                  ht-154.englab.brocade.com        vmnic6         -
Total Number of Entries: 8

```

## show vrf

Displays VRF configuration information.

**Syntax**    **show vrf**

**Modes**    Privileged EXEC mode

## show vrrp

Displays information about VRRP and VRRP-E sessions.

<b>Syntax</b>	<p><b>show vrrp</b> <i>VRID</i> [ <b>detail</b> ] [ <b>summary</b> ]</p> <p><b>show vrrp detail</b></p> <p><b>show vrrp interface</b> <i>&lt;N&gt;</i> <b>gigabitethernet</b> <i>rbridge-id/slot/port</i> [ <b>detail</b> ] [ <b>summary</b> ]</p> <p><b>show vrrp summary</b></p>
<b>Parameters</b>	<p><b>VRID</b> The virtual-group ID about which to display information. Valid values range from 1 to 128.</p> <p><b>detail</b> Displays all session information in detail, including session statistics.</p> <p><b>summary</b> Displays single line, session-information summaries.</p> <p><b>interface</b> Displays information for an interface that you specify.</p> <p><b>&lt;N&gt; gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>&lt;N&gt;gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.</p> <p><b>rbridge-id</b> Specifies an RBridge ID.</p> <p><b>slot</b> Specifies a valid slot number.</p> <p><b>port</b> Specifies a valid port number.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Use this command to display information about VRRP and VRRP-E sessions, either in summary or full-detail format. Can also specify a particular virtual group or interface for which to display output.</p> <p>This command is for VRRP and VRRP-E. VRRP-E supports only the <b>ve</b> interface type. You can modify or redirect the displayed information by using the default Linux tokens ( , &gt;).</p>

**Examples** To show all session information in detail, including session statistics:

```
switch# show vrrp detail

VRID 1
  Interface: Ten Gigabit Ethernet 0/18; Ifindex: 403832850
  Mode: VRRP
  Admin Status: Enabled
  Address family: IPv4
  Authentication type: No Authentication
  State: Master
  Virtual IP(s): 1.1.1.5, 1.1.1.6, 1.1.1.8, 1.1.1.9

  Configured Priority: 255 (default: 100); Current Priority: 255
  Advertisement interval: 1 sec (default: 1 sec)
  Preempt mode: ENABLE (default: ENABLE)
  Hold time: 0 sec (default: 0 sec)
  Trackport:
    Port(s)                Priority
    =====
  Statistics:
    Advertisements: Rx: 0, Tx: 10298
    ARP:              Rx: 0, Tx: 28

VRID 2
  Interface: Ten Gigabit Ethernet 0/22; Ifindex: 404094998
  Mode: VRRP
  Admin Status: Disabled
  Address family: IPv4
  Authentication type: No Authentication
  State: Initialize
  Virtual IP: unset
  Configured Priority: 100 (default: 100); Current Priority: 100
  Advertisement interval: 1 sec (default: 1 sec)
  Preempt mode: ENABLE (default: ENABLE)
  Hold time: 0 sec (default: 0 sec)
  Trackport:
    Port(s)                Priority
    =====
  Statistics:
    Advertisements: Rx: 0, Tx: 0
    ARP:              Rx: 0, Tx: 0

VRID 3
  Interface: Ten Gigabit Ethernet 0/18; Ifindex: 403832850
  Mode: VRRP
  Admin Status: Enabled
  Address family: IPv4
  Authentication type: No Authentication
  State: Master
  Virtual IP(s): 1.1.1.20
  Configured Priority: 100 (default: 100); Current Priority: 100
  Advertisement interval: 1 sec (default: 1 sec)
  Preempt mode: ENABLE (default: ENABLE)
  Hold time: 0 sec (default: 0 sec)
  Trackport:
    Port(s)                Priority
    =====
```

## show zoning enabled-configuration

Displays information about the enabled zoning configuration.

- Syntax** **show zoning enabled-configuration**
- Modes** Privileged EXEC mode
- Usage Guidelines** Use this command to display the `cfg-name` and `enabled-zone` fields of the enabled zoning configuration for a Brocade VCS Fabric.

This command is supported in VCS Fabric mode. Zoning configuration data are automatically distributed among all Rbridges in the VCS Fabric.

This command can be entered on any RBridge in a Brocade VCS Fabric.

### Examples

```
switch# show zoning enabled-configuration
zoning enabled-configuration cfg-name cfg1
zoning enabled-configuration enabled-zone zone1
  member-entry 10:00:00:00:00:00:01
zoning enabled-configuration enabled-zone zone2
  member-entry 10:00:00:00:00:00:02
switch# show zoning enabled-configuration | count
Count: 8 lines
```

- Related Commands** [show running-config zoning defined-configuration](#), [show running-config zoning enabled-configuration](#)

# show zoning operation-info

Displays information about transactions and database size.

**Syntax** `show zoning operation-info`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only in Brocade VCS Fabric mode. Zoning configuration data are automatically distributed among all R Bridges in the VCS Fabric.

This command can be entered on any R Bridge in a Brocade VCS Fabric, but it is always executed on the principal R Bridge.

**Command Output** The `show zoning operation-info` command displays the following information:

Output field	Description
db-max	Defines the maximum size in bytes of the zone database in nonvolatile memory.
db-avail	Displays the size in bytes of the unused portion of nonvolatile memory available for the defined configuration.
db-committed	Displays the size in bytes of the defined configuration currently stored in nonvolatile memory.
db-transaction	Displays the size in bytes of the uncommitted defined configuration.
db-token	Displays the current transaction token ID.
last-zone-changed-timestamp	Displays the last time the defined zone configuration was modified.
last-zone-committed-timestamp	Displays the data and time of the last time the zoning database was saved to nonvolatile memory.

**Examples** To display information about transactions and database size:

```
switch# show zoning operation-info

db-max 1045274
db-avail 1043822
db-committed 440
db-transaction 0
transaction-token 0
last-zone-changed-timestamp 2011-11-16 14:38:15 GMT-7:00
last-zone-committed-timestamp 2011-11-16 14:38:15 GMT-7:00
```

**Related Commands** [show running-config zoning defined-configuration](#), [show running-config zoning enabled-configuration](#), [show zoning enabled-configuration](#)

show zoning operation-info



# Commands shutdown through Z

---

## shutdown

Disables the selected interface.

**Syntax**    **shutdown**

**no shutdown**

**Command Default**    The interface is disabled.

**Modes**            Interface subtype configuration mode

**Usage Guidelines**    Enter **no shutdown** to enable the interface.

When an RBridge is rejoining the logical chassis cluster, the interface-level configuration is reset to the default values.

**Examples**    To disable a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 1/0/1
switch(conf-if-te-1/0/1)# shutdown
```

To enable a specific 1-gigabit Ethernet interface:

```
switch(config)# gigabitethernet interface 1/0/2
switch(conf-if-gi-1/0/2)# noshutdown
```

## shutdown (STP)

Disables the Multiple Spanning Tree Protocol (MSTP), Rapid Spanning Tree Protocol (RSTP), the Spanning Tree Protocol (STP), Per Vlan Spanning Tree (PVST), or Rapid PVST(RPVST) globally.

**Syntax**    **shutdown**

**no shutdown**

**Command Default**    STP is not enabled as it is not required in a loop-free topology.

**Modes**            Protocol Spanning Tree configuration mode

**Usage Guidelines**    Enter **no shutdown** to re-enable all versions of STP.

**Examples**          To disable STP globally:

```
switch(config)# protocol spanning-tree rstp
switch(conf-rstp)# shutdown
```

          To enable STP globally:

```
switch(config)# protocol spanning-tree rstp
switch(conf-rstp)# no shutdown
```

## shutdown (UDLD)

Disables the unidirectional link detection (UDLD) protocol on all ports without affecting configuration.

**Syntax**    **shutdown**

**no shutdown**

**Modes**    Protocol UDLD configuration mode

**Usage Guidelines**    The **no shutdown** command unblocks all ports that have been blocked by the UDLD protocol.

**Examples**    To shutdown the UDLD protocol:

```
switch# configure
switch(config)# protocol udld
switch(config-udld)# shutdown
```

**Related  
Commands**    [protocol udld](#)

## shutdown (VXLAN)

Administratively shuts down tunnels to a VXLAN overlay gateway site.

**Syntax**    **shutdown**

**no shutdown**

**Modes**    VXLAN overlay gateway site configuration mode

**Usage Guidelines**    The **no shutdown** command enables tunnels to the site.

The "no shutdown" state for this mode is not displayed in the running configuration.

**Examples**    To shut down VXLAN overlay gateway tunnels:

```
switch(config)# overlay-gateway gateway1
switch(config-overlay-gw-gateway1)# site mysite
switch(config-overlay-gw-gateway1-site-mysite)# shutdown
```

**Related Commands**    [overlay-gateway, site](#)

# shutdown-time

Specifies the delay between the time a port is disabled after Edge Loop Detection (ELD) detects a loop and the automatic re-enabling of that port.

**Syntax** **shutdown-time** *num*

**no shutdown-time** *num*

**Command Default** The default value is 0 minutes.  
The port will not be re-enabled automatically.

**Parameters** *num*

Specifies the number of minutes before a port is re-enabled. Valid values range from 10 through 1440 minutes (10 minutes to 24 hours).

**Modes** ELD configuration mode

## Usage Guidelines

---

### NOTE

Any change to **shutdown-time** only takes effect for the ports that are disabled by ELD after the configuration change. Any ports that were already disabled by ELD before the **shutdown-time** change continues to follow the old **shutdown-time** value. These ports start to follow the new shutdown time after the currently running timer expires and ELD still detects the loop and shuts down the port again.

---

If you do not set a shutdown time using this command, you can re-enable all ELD-disabled ports manually using the **clear edge-loop-detection** command.

Enter **no shutdown-time** to return to the default value.

**Examples** To re-enable ports 24 hours after they are disabled by ELD:

```
switch(config)# protocol edge-loop-detection
switch(config-eld)# shutdown-time 1440
```

To cancel automatic port re-enable:

```
switch(config-eld)# no shutdown-time 1440
```

**Related Commands** [clear edge-loop-detection](#), [show edge-loop-detection globals](#), [show edge-loop-detection rbridge-id](#)

# site

Creates a remote Layer 2 extension site in a VXLAN overlay gateway context and enables VXLAN overlay gateway site configuration mode.

<b>Syntax</b>	<b>site</b> <i>name</i>
	<b>no site</b> <i>name</i>
<b>Parameters</b>	<b>name</b>
	Site identifier. An ASCII character string up to 63 characters long, including the alphabet, numbers 0 through 9, hyphens (-), and underscores (_).
<b>Modes</b>	VXLAN overlay gateway configuration mode
<b>Usage Guidelines</b>	<p>The VXLAN overlay gateway type must first be configured for Layer 2 extension, by means of the <b>type layer2-extension</b> command.</p> <p>A "site" represents a remote VCS Fabric or the other end of the VXLAN tunnel. A site is associated with a "container," as data structure that includes the destination IPv4 address of the tunnel, the switchport VLANs, and the administrative state.</p> <p>Use the <b>no site</b> command with a specified name to remove the tunnel that corresponds to the site. Once you create the site instance, you enter VXLAN overlay gateway site configuration mode, where you can configure other properties for the site. The key commands available in this mode are summarized below:</p>

**TABLE 18** Key commands available in VXLAN overlay gateway site configuration mode

Command	Description
<b>extend vlan</b>	Configures switchport VLANs for the tunnels to the containing site in a VXLAN overlay gateway configurations.
<b>ip address</b>	Specifies the IPv4 address of a destination tunnel in VXLAN overlay gateway configurations.
<b>shutdown</b>	Administratively shuts down tunnels to a VXLAN overlay gateway site.

**Examples** To create a VXLAN overlay gateway site and enter VXLAN overlay gateway site configuration mode:

```
switch(config)# overlay-gateway gateway1
switch(config-overlay-gw-gateway1)# site mysite
switch(config-overlay-gw-gateway1-site-mysite)#
```

**Related Commands** [overlay-gateway](#)

# slot

Enables or disables the slot.

**Syntax** `slot number { disable | enable }`

**Command Default** This command has no defaults.

**Parameters** *number*

The slot to control. The valid values are 0 or 1.

**disable**

Disables the slot.

**enable**

Enables the slot.

**Modes** Privileged EXEC mode

## snmp-server community

Sets the community string and associates it with the default or user-defined group name to restrict the access of MIB for SNMPv1 and SNMPv2 requests.

**Syntax** `snmp-server community string [groupname group-name]`

`no snmp-server community string [groupname group-name]`

**Command Default** By default no group name is mapped with the community string. User must map the community string with any non-existing or existing group name or use the default group name (user/admin) available in the group CLI configuration to contact the switch through SNMPv1 or SNMPv2c.

**Parameters** *string*

Specifies the community string.

**groupname *group-name***

Specifies the group name associated with the community name.

**Modes** Global configuration mode

**Usage Guidelines** This command manages the configuration of the SNMP agent in the switch. The configuration includes SNMPv1 and SNMPv2c configuration settings.

You can specify one of the six default community strings when the system first comes up. The maximum number of SNMP communities supported is 256, which includes the following six default communities.

The following community strings belongs to read-write group "admin":

- Secret C0de
- OrigEquipMfr
- private

The following community strings belongs to read-only group "user":

- public
- common
- ConvergedNetwork

**Examples** To add a community string "public" and associate it with the read-only group name "user":

```
switch(config)# snmp-server community public groupname user
```

To remove the community string "public" and the associated group name "user":

```
switch(config)# no snmp-server community public
```

**Related Commands** [show running-config snmp-server](#), [snmp-server contact](#), [snmp-server group](#), [snmp-server location](#), [snmp-server user](#), [snmp-server v3host](#), [snmp-server view](#)



## snmp-server contact

Sets the SNMP server contact string.

**Syntax** **snmp-server contact** *string*

**no snmp-server contact** *string*

**Command Default** The default contact string is "Field Support."

**Parameters** **string**

Specifies the server contact. You must enclose the text in double quotes if the text contains spaces.

**Modes** Global configuration mode

**Usage Guidelines** The **no** form of this command restores the default values.

**Examples** To set the SNMP server contact string to "Operator 12345":

```
switch(config)# snmp-server contact "Operator 12345"
```

To set the SNMP server contact string to the default of "Field Support":

```
switch(config)# no snmp-server contact
```

**Related Commands** [show running-config snmp-server](#), [snmp-server community](#), [snmp-server group](#), [snmp-server location](#), [snmp-server user](#), [snmp-server v3host](#), [snmp-server view](#)

## snmp-server context

Maps the context name in an SNMPv3 packet's protocol data unit (PDU) to the name of a VPN routing and forwarding (VRF) instance.

<b>Syntax</b>	<p><b>snmp-server context</b> <i>context_name</i> <b>vrf-name</b> <i>vrf_name</i></p> <p><b>no snmp-server-context</b> <i>context_name</i> <b>vrf-name</b> <i>vrf_name</i></p>
<b>Parameters</b>	<p><b>context</b> Enables the specification of a variable <i>context_name</i> that can be passed in the SNMP PDU.</p> <p><b>vrf-name</b> Enables the specification of a variable <i>vrf_name</i> that can be retrieved when an SNMP request is sent with the configured <i>context_name</i>. This variable can be used in SNMP requests for "ipCidrRouteTable."</p>
<b>Modes</b>	Global configuration mode
<b>Usage Guidelines</b>	The context-to-VRF mapping is one-to-one and is applicable to all SNMP versions.
<b>Examples</b>	<p>The following <b>snmp-server context</b> command maps the context name "mycontext" to the VRF name "myvrf."</p> <pre>switch(config)# snmp-server context mycontext vrf-name myvrf</pre> <p>The following <b>snmp-server context</b> command deletes the VRF name "myvrf."</p> <pre>switch(config)# no snmp-server context mycontext vrf-name myvrf</pre> <p>The following <b>snmp-server context</b> command creates the new VRF name "mynewvrf" and maps the context to it.</p> <pre>switch(config)# snmp-server context mycontext vrf-name mynewvrf</pre>
<b>Related Commands</b>	<a href="#">show running-config snmp-server</a> , <a href="#">snmp-server community</a> , <a href="#">snmp-server contact</a> , <a href="#">snmp-server group</a> , <a href="#">snmp-server location</a> , <a href="#">snmp-server user</a> , <a href="#">snmp-server v3host</a> , <a href="#">snmp-server view</a>

## snmp-server enable trap

This command controls the activation of the SNMP traps.

**Syntax** **snmp-server enable trap**

**no snmp-server enable trap**

**Command Default** The SNMP server traps are enabled by default.

**Modes** Global configuration mode.

**Usage Guidelines** Use the **no snmp-server enable trap** to disable the SNMP traps.

**Examples** The following example activates the SNMP traps.

```
switch# configure terminal
switch(configure)# snmp-server enable trap
```

**History**

Release version	Command history
5.0.0	This command was introduced.

**Related  
Commands**

[show running-config snmp-server](#), [snmp-server community](#), [snmp-server contact](#), [snmp-server group](#), [snmp-server location](#), [snmp-server user](#), [snmp-server v3host](#), [snmp-server view](#)

## snmp-server engineid local

Configures a user-defined engine ID for the SNMP agent.

- Syntax** **snmp-server engineid local** *engine\_id*  
**no snmp-server engineid local**
- Modes** RBridge ID configuration mode
- Usage Guidelines** A switch reboot is necessary for the configured engine ID to become active. Enter the **no snmp-server engineid local** command to remove the configured engine ID from database.
- Examples** To configure a user-defined engine ID for the SNMP agent:
- ```
switch (config-rbridge-id-152)# snmp-server engineid local
10:00:00:05:33:51:A8:65:05:33:51:A8
```
- To remove the configured engine ID from the database:
- ```
switch(config)# no snmp-server engineid local
switch (config-rbridge-id-152)# no snmp-server engineid local
```
- Related Commands** [show running-config snmp-server](#), [show running-config snmp-server engineid](#), [snmp-server community](#), [snmp-server contact](#), [snmp-server context](#), [snmp-server group](#), [snmp-server location](#), [snmp-server user](#), [snmp-server v3host](#), [snmp-server view](#)

## snmp-server group

Creates user-defined groups for SNMPv1/v2/v3 and configures read, write, and notify permissions to access the MIB view.

**Syntax** **snmp-server group** *groupname* {**v1** | **v2c** | **v3** {**auth** | **noauth** | **priv**}} [**read** *viewname*] [**write** *viewname*] [**notify** *viewname*]

**no snmp-server group** *groupname* {**v1** | **v2c** | **v3** {**auth** | **noauth** | **priv**}} [**read** *viewname*] [**write** *viewname*] [**notify** *viewname*]

**Command Default** Six default groups are supported to associate the default SNMPv3 user groups and the default SNMPv1/v2c community groups with the view configuration. The default group configurations are as follows:

```
switch(config)# snmp-server group admin v1 read All write All notify All
switch(config)# snmp-server group admin v2c read All write All notify All
switch(config)# snmp-server group snmpadmin v3 notify All
switch(config)# snmp-server group snmpuser v3 notify All
switch(config)# snmp-server group user v1 read All notify All
switch(config)# snmp-server group user v2c read All notify All
```

---

### NOTE

By default, SNMPv3 groups "snmpadmin" and "snmpuser" are configured with noauth security level. Once the default SNMPv3 users are updated with auth and priv credentials then the corresponding group configuration needs to be updated with read/write view name. Also, the security level to access the switch through SNMPv3 user need to be updated, if required.

---

**Parameters** **groupname**

Specifies the name of the SNMP group to be created.

**v1** | **v2c** | **v3**

Specifies the version of SNMP.

**auth** | **noauth** | **priv**

Determines whether authentication is required for accessing the supported views. If auth is selected, then only authenticated packets with no privacy are allowed to access the specified view. If noauth is selected, then no authentication and no privacy are required to access the specified view. If priv is selected, then authentication and privacy are required from the users to access the view.

---

### NOTE

These parameters are available only for SNMPv3 user groups.

---

**read viewname**

Specifies the name of the view that enables you to provide read access.

**write viewname**

Specifies the name of the view that enables you to provide both read and write access.

**notify viewname**

Specifies the name of the view that enables you to provide access to the MIB for trap or inform.

**Modes** Global configuration mode

**Usage Guidelines** Maximum number of SNMP groups supported is 10.

**Examples** To create SNMP server group entries for SNMPv3 user group with auth/noauth permission:

```
switch(config)# snmp-server group group1 v3 auth read myview write myview notify myview
switch(config)# snmp-server group group2 v3 noauth read all write all notify all
switch(config)# snmp-server group group3 v3 auth
```

To remove the configured SNMP server groups:

```
switch(config)# no snmp-server group test1 v3 auth
switch(config)# no snmp-server group TEST1 v3 auth read myview write myview
switch(config)# no snmp-server group TEST2 v3 noauth read all write all notify all
```

**Related Commands** [snmp-server community](#), [snmp-server contact](#), [snmp-server context](#), [snmp-server host](#), [snmp-server location](#), [snmp-server user](#), [snmp-server v3host](#), [snmp-server view](#)

# snmp-server host

Configures the SNMP trap server host attributes.

**Syntax** **snmp-server host** { **ipv4\_host** | **ipv6\_host** | **dns\_host** } *community\_string* [ **version** { **1** | **2c** } ] [ **udp-port** *port* ] [ **severity-level** | { **none** | **debug** | **info** | **warning** | **error** | **critical** } ]

**no snmp-server host** { **ipv4\_host** | **ipv6\_host** | **dns\_host** } *community\_string* [ **version** { **1** | **2c** } ] [ **udp-port** *port* ] [ **severity-level** | { **none** | **debug** | **info** | **warning** | **error** | **critical** } ]

**Parameters** **host** { **ipv4\_host** | **ipv6\_host** | **dns\_host** }

Specifies the IP address of the host. IPv4, IPv6, and DNS hosts are supported.

**community\_string**

Specifies the community string associated with the host entry.

**version** { **1** | **2c** }

Selects version 1 or 2c traps to be sent to the specified trap host.

**udp-port** *port*

Specifies the UDP port where SNMP traps will be received. Valid port IDs range from 0 through 65535. The default port is 162.

**severity-level** { **none** | **debug** | **info** | **warning** | **error** | **critical** }

Provides the ability to filter traps based on severity level on both the host and the SNMPv3 host. Only RASLog (swEvent) traps can be filtered based on severity level. The configured severity level marks the reporting threshold. All messages with the configured severity or higher are displayed. If the severity level of **none** is specified, all traps are filtered and no RASLog traps are received.

**Modes** Global configuration mode

**Usage Guidelines** This command sets the trap destination IP addresses and SNMP version, associates a community string with a trap host community string (for v1 and v2c), and specifies the UDP destination port where SNMP traps will be received.

To configure SNMP trap hosts associated with community strings, you must create the community string using the **snmp-server community** command before configuring the host.

The host supports six communities and their associated trap recipients and trap recipient severity levels. The default value for the trap recipient of each community is 0.0.0.0. The length of the community string should be between 2 and 16 characters.

The following community strings are read-write:

- Secret C0de
- OrigEquipMfr
- private

The following community strings are read-only:

- public
- common
- ConvergedNetwork

The **no snmp-server host** *host* **community-string** *string* **version 2c** command brings version 2c down to version 1.

The **no snmp-server host** *host* **community-string** *string* command removes the SNMP server host from the switch configuration altogether.

The following `snmp-server host ipv6_host` command creates an entry for trap host 1050:0:0:0:5:600:300c:326b associated with community “public.” The trap host receives traps from the configured switch.

```
switch(config)# snmp-server host 1050:0:0:0:5:600:300c:326b public severity-level Info
```

The following `snmp-server host dns_host` command creates an entry for trap host brcd.brocade.com associated with community “public.” The trap host receives traps from the configured switch.

```
switch(config)# snmp-server host brcd1.brocade.com public severity-level info
switch(config)# snmp-server v3host brocade.com snmpuser3 notifytype informs engineid
80:00:05:23:01:AC:1A:01:F6 severity-level Info
```

To associate “commaccess” as a read-only community and set 10.32.147.6 as a trap recipient with SNMP version 2c on target port 162:

```
switch(config)# snmp-server host 10.32.147.6 commaccess version 2c udp-port 162
```

To create a trap host (10.23.23.45) associated with the community “public”, which will receive all traps with the severity levels of Info, Warning, Error, and Critical:

```
switch(config)# snmp-server host 10.23.23.45 public severity-level info
```

To reset the severity level to None:

```
switch(config)# snmp-server host 10.23.23.45 public severity-level none
```

**Related  
Commands**

[show running-config snmp-server](#), [snmp-server community](#), [snmp-server contact](#), [snmp-server context](#), [snmp-server group](#), [snmp-server location](#), [snmp-server sys-descr](#), [snmp-server user](#), [snmp-server v3host](#), [snmp-server view](#)



## snmp-server location

Sets the SNMP server location string.

**Syntax** **snmp-server location** *string*

**no snmp-server location** *string*

**Command Default** The location string is "End User Premise."

**Parameters** ***string***

Specifies the SNMP server location string. You must enclose the text in double quotes if the text contains spaces.

**Modes** Global configuration mode

**Examples** To set the SNMP server location string to "Building 3 Room 214":

```
switch(config)# snmp-server location "Building 3 Room 214"
```

To set the SNMP server location to the default, "End User Premise":

```
switch(config)# no snmp-server location
```

**Related Commands** [show running-config snmp-server](#), [snmp-server community](#), [snmp-server contact](#), [snmp-server group](#), [snmp-server user](#), [snmp-server v3host](#), [snmp-server view](#)

## snmp-server sys-descr

Sets the Management Information Base (MIB-2) object identifier (OID) system description.

**Syntax** `snmp-server sys-descr string`

`no snmp-server sys-descr`

**Command Default** The system description is "Brocade VDX switch".

**Parameters** *string*

The text for the system description. The string must be between 4 and 255 characters in length.

**Modes** Global configuration mode

**Usage Guidelines** Enter `no snmp-server sys-descr` to return to the default system description.

**Examples** To set the system description OID to "Brocade Cluster switch":

```
switch(config)# snmp-server sys-descr "Brocade Cluster switch"
```

To restore the system description OID to the default:

```
switch(config)# no snmp-server sys-descr
```

**Related Commands** [show running-config snmp-server](#), [snmp-server community](#), [snmp-server contact](#), [snmp-server group](#), [snmp-server location](#), [snmp-server user](#), [snmp-server view](#)

## snmp-server user

Creates or changes the attributes of SNMPv3 users, and allows the SNMPv3 user to be associated with the user-defined group name.

**Syntax** **snmp-server user** *username* [**groupname** *group-name*] [**auth**] {**md5** | **sha**} [**auth-password** *string* {*encrypted*}] [**priv**] {**DES** | **AES128**} [**priv-password** *string* {*encrypted*}]

**no snmp-server user** *user-name*

**Command Default** Two SNMPv3 user groups are configured, snmpadmin and snmpuser, with default users as follows.

- In the snmpadmin group there are three read-write users: snmpadmin1, snmpadmin2, and snmpadmin3.
- In the snmpuser group there are three read-only users: snmpuser1, snmpuser2, and snmpuser3.

The **auth** parameter is turned off.

The **priv** parameter is turned off.

Encryption is not enabled.

**Parameters** **username**

The name of the user that connects to the agent. The name must be between 1 and 16 characters long.

**groupname** **group-name**

The name of the group to which the user is associated: snmpadmin is a read-write group and snmpuser (default) is a read-only group. Configured user is also allowed to be associated with the user-defined groups created using the **snmp-server group** command.

**auth**

Initiates an authentication level setting session. Default is noauth.

**md5**

The HMAC-MD5-96 authentication level.

**sha**

The HMAC-SHA-96 authentication level.

**auth-password** **string**

A string that enables the agent to receive packets from the host. Passwords are plain text and must be added each time for each configuration replay. The password must be between 1 and 32 characters long.

**priv**

Initiates a privacy authentication level setting session. Default is nopriv.

**DES**

Specifies the DES privacy protocol.

**AES128**

Specifies the AES128 privacy protocol.

**priv-password** **string**

A string (not to exceed 32 characters) that enables the host to encrypt the contents of the message that it sends to the agent. Passwords are plain text and must be added each time for each configuration replay. The privacy password alone cannot be configured. You configure the privacy password with the authentication password.

**encrypted**

Used to enter the input for auth/priv passwords as encrypted. The encrypted key should be used only while entering the encrypted auth/priv passwords.

- Modes** Global configuration mode  
RBridge ID configuration mode
- Usage Guidelines** This command configures SNMPv3 users that can be associated with a trap and inform response functionality. This command also allows configured user to be associated with user-defined SNMP groups created using the **snmp-server group** command. The maximum number of SNMP users that can be configured is 10. Optional encryption for **auth-password** and **priv-password** is also provided.
- When creating a new SNMPv3 user without group name, by default there is no group name mapped with the SNMPv3 user. you must map the configured SNMPv3 user with any non-existing or existing group name or use the default group name (snmpuser or snmpadmin) available in the group CLI configuration to contact the switch through SNMPv3.
- Enter **no snmp-server user *user-name*** to delete a user.
- The behavior of this command in the local RBridge ID configuration is same as the global configuration. If the user name configured is same in both global and RBridge ID configurations, then the RBridge ID configuration will take precedence. The encrypted password generated in the global configuration can be used for another global user to modify the passwords. The encrypted passwords generated in global configurations cannot be used in the RBridge ID configurations and vice versa.
- This command may not be successful where encrypted passwords are generated by third-party or open-source tools.

**Examples** To configure a basic authentication policy:

```
switch(config)# snmp-server user brocade groupname snmpadmin auth md5 user123 priv
priv-password user456
```

To configure plain-text passwords:

```
switch(config)# snmp-server user snmpadmin1 auth md5 auth-password private123 priv
DES priv-password public123
```

To configure encrypted passwords:

```
switch(config)# snmp-server user snmpadmin2 groupname snmpadmin auth md5 auth-
password "MVb+360X3kcfBzug5Vo6dQ==\n" priv DES priv-password "ckJFoHbzVvhR0xFRPjsMTA==
\n" encrypted
```

To create the SNMP users "user1" and "user2" associated with used-defined group "group1" under global configuration mode:

```
switch(config)# snmp-server user user1 groupname group1
switch(config)# snmp-server user user2 groupname group1 auth md5 auth-password
password priv DES priv-password password
```

To configure a SNMPv3 user under local RBridge ID configuration mode:

```
switch(config-rbridge-id-1)# snmp-server user snmpadmin1 groupname snmpadmin auth sha
auth-password private123 priv DES priv-password public123
```

- Related Commands** [show running-config snmp-server](#), [snmp-server community](#), [snmp-server contact](#), [snmp-server group](#), [snmp-server host](#), [snmp-server location](#), [snmp-server v3host](#), [snmp-server view](#)

# snmp-server v3host

Specifies the recipient of the SNMPv3 notification parameter.

**Syntax** `snmp-server v3host [host { ipv4_host | ipv6_host | dns_host}] user_name [notifytype {traps | informs}] engineid engine-id udp-port port_number [severity-level | {none | debug | info | warning | error | critical}]`

`no snmp-server v3host [host { ipv4_host | ipv6_host | dns_host}]`

**Parameters** `host { ipv4_host | ipv6_host | dns_host }`

Specifies the IP address of the host. IPv4, IPv6, and DNS hosts are supported.

**user\_name**

Specifies the SNMPv3 user name to be associated with the SNMPv3 host entry.

**notifytype { traps | informs }**

Specifies the type of notification traps that are sent for the host. Traps and informs are supported. The default notify type is traps.

**engineID engine-id**

Configures the remote engine ID to receive informs on a remote host.

**udp-port port\_number**

Specifies the UDP port of the host. The default UDP port number is 162.

**severity-level { none | debug | info | warning | error | critical }**

Provides the ability to filter traps based on severity level on both the host and the SNMPv3 host. Only RASLog (swEvent) traps can be filtered based on severity level. The configured severity level marks the reporting threshold. All messages with the configured severity or higher are displayed. If the severity level of None is specified, all traps are filtered and no RASLog traps are received. The default severity level is none.

**Modes** Global configuration mode

RBridge ID configuration mode

**Usage Guidelines** The global SNMPv3 host can be configured by associating with only global SNMPv3 users and the local SNMPv3 host can be configured by associating with only local SNMPv3 users. You cannot create a SNMPv3 host in global configuration by associating with the local SNMPv3 users and vice versa.

**Examples** The `snmp-server v3host` command is similar to the `snmp-server host` command.

To configure an IPv4 host address under global configuration mode:

```
switch(config)# snmp-server v3host 10.23.23.45 snmpadmin1 severity-level info
```

The following command creates an entry for SNMPv3 trap IPv6 host 1050:0:0:5:600:300c:326b associated with SNMP user "snmpadmin2" under global configuration mode. The trap host will receive SNMPv3 traps from the configured switch.

```
switch(config)# snmp-server v3host 1050::5:600:300c:326b snmpadmin2 severity-level Info
```

The following command creates an entry for SNMPv3 trap host 10.26.3.166 associated with SNMP user "snmpuser2" under RBridge ID configuration mode. The trap host will receive SNMPv3 traps from the configured switch.

```
switch(config-rbridge-id-1)# snmp-server v3host 10.26.3.166 snmpuser2 severity-level  
Info udp-port 4425
```

The following command removes the SNMPv3 trap host 10.26.3.166 associated with SNMP user "snmpuser2".

```
switch(config-rbridge-id-1)# no snmp-server v3host 10.26.3.166 snmpuser2
```

**Related  
Commands**

[show running-config snmp-server](#), [snmp-server community](#), [snmp-server contact](#), [snmp-server group](#), [snmp-server host](#), [snmp-server location](#), [snmp-server user](#), [snmp-server view](#)

## snmp-server view

Creates or removes a view entry with MIB objects to be included or excluded for user access.

**Syntax** **snmp-server view** *view-name* *mib\_tree* {**included** | **excluded**}

**no snmp-server view** *view-name* *mib\_tree* {**included** | **excluded**}

**Command Default** The default view configuration is "All" with base OID "1" (iso) included.

```
switch(config)# snmp-server view All 1 included
```

**Parameters** **view-name**

Specifies the alphanumeric name to identify the view. The name should not contain spaces.

**mib\_tree**

Specifies the MIB object ID called Object Identifiers (OIDs) that represent the position of the object or sub-tree in the MIB hierarchy.

**included | excluded**

Specifies whether the MIB object ID identified by the *mib\_tree* variable must be included in the view or excluded from the view.

**Modes** Global configuration mode

**Usage Guidelines** Maximum number of views supported with MIB tree entries is 10. Either a single view name associated with 10 different MIB object IDs or 10 different view names associated with each one of the MIB Object IDs is allowed.

**Examples** To create a SNMP view entry "view1" with excluded permission for the MIB object ID "1.3.6.1.2.1.1.3":

```
switch(config)# snmp-server view view1 1.3.6.1.2.1.1.3 excluded
```

To create SNMP view entry "view2" with included permission for the MIB object ID "1.3.6.1":

```
switch(config)# snmp-server view view2 1.3.6.1 included
```

To remove the SNMP view entry "view1" from the configuration list:

```
switch(config)# no snmp-server view view1 1.3.6.1.2.1.1.3 excluded
```

**Related Commands** [show running-config snmp-server](#), [snmp-server community](#), [snmp-server contact](#), [snmp-server context](#), [snmp-server group](#), [snmp-server host](#), [snmp-server location](#), [snmp-server user](#), [snmp-server v3host](#)

## source

Configures the monitoring session.

<b>Syntax</b>	<b>source</b> [ <b>fortygigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>&lt;N&gt;gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>destination</b>   <b>direction</b> [ <b>rx</b>   <b>tx</b>   <b>both</b> ]  <b>no source</b> [ <b>&lt;N&gt;gigabitethernet</b> <i>rbridge-id/slot/port</i>   <b>destination</b>   <b>direction</b> [ <b>rx</b>   <b>tx</b>   <b>both</b> ]
<b>Parameters</b>	<b>&lt;N&gt;gigabitethernet</b> Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <b>&lt;N&gt;gigabitethernet</b> with the desired operand (for example, <b>tengigabitethernet</b> specifies a 10-Gb Ethernet port). The use of <b>gigabitethernet</b> without a speed value specifies a 1-Gb Ethernet port.  <b>rbridge-id</b> Specifies an RBridge ID.  <b>slot</b> Specifies a valid slot number.  <b>port</b> Specifies a valid port number.  <b>destination</b> Use this parameter to specify the interface.  <b>direction rx</b> Specifies to monitor the receiving traffic.  <b>direction tx</b> Specifies to monitor the transmitting traffic  <b>direction both</b> Specifies to monitor transmitting and receiving traffic.
<b>Modes</b>	Monitor session configuration mode
<b>Usage Guidelines</b>	Enter <b>no source</b> followed by the identifying parameters to delete the port mirroring connection for the specified interface.
<b>Examples</b>	To enable session 22 for monitoring traffic:  <pre>switch(config)# monitor session 22 switch(config-session-22)# source tengigabitethernet 0/1 destination tengigabitethernet 0/15 direction both</pre>
<b>Related Commands</b>	<a href="#">monitor session</a>



## span session

Configures the SPAN session.

**Syntax** **span session** *session\_id*

**no span session** *session\_id*

**Parameters** **session\_id**

Designates the session number for the flow-based SPAN session.

**Modes** Policy class configuration mode

**Usage Guidelines** Use the **no span session session-id** command to delete the session.

**Related  
Commands** [destination](#)

## spanning-tree autoedge

Enables automatic edge detection.

**Syntax** **spanning-tree autoedge**

**no spanning-tree autoedge**

**Command Default** Auto-detection is not enabled.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The port can become an edge port if no Bridge Protocol Data Unit (BPDU) is received.  
If xSTP is enabled over VCS, this command must be executed on all the RBridge nodes. Enter **no spanning-tree autoedge** to disable automatic edge detection.

**Examples** To enable automatic edge detection:

```
switch(config)# interface tengigabitethernet 0/1
switch(conf-if-te-0/1)# spanning-tree autoedge
```

**Related Commands** [protocol spanning-tree](#)

## spanning-tree bpdu-mac

Sets the MAC address of the Bridge Protocol Data Unit (BPDU).

**Syntax** **spanning-tree bpdu-mac [ 0100.0ccc.cccd | 0304.0800.0700 ]**

**no spanning-tree bpdu-mac [ 0100.0ccc.cccd | 0304.0800.0700 ]**

**Parameters** **0100.0ccc.cccd**

Cisco Control Mac

**0304.0800.0700**

Brocade Control Mac

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command will only take effect when the protocol is PVST+ or R-PVST+.

If xSTP is enabled over VCS, this command must be executed on all the RBridge nodes. Brocade Network OS supports PVST+ and R-PVST+ only. The PVST and R-PVST protocols are proprietary to Cisco and are not supported.

Enter **no spanning-tree bpdu-mac 0100.0ccc.cccd** to remove the address.

## spanning-tree cost

Changes an interface's spanning-tree port path cost.

**Syntax** `spanning-tree cost cost`

**Command Default** The default path cost is 200000000.

**Parameters** `cost`

Specifies the path cost for the Spanning Tree Protocol (STP) calculations. Valid values range from 1 through 200000000.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Lower path cost indicates a greater chance of becoming root.

If xSTP is enabled over VCS, this command must be executed on all the RBridge nodes.

**Examples** To set the port cost to 128:

```
switch(config)# interface tengigabitethernet 0/1
switch(conf-if-te-0/1)# spanning-tree cost 128
```

**Related Commands** [show spanning-tree](#)

# spanning-tree edgeport

Enables the edge port on an interface to allow the interface to quickly transition to the forwarding state.

**Syntax** `spanning-tree edgeport [ bpdu-filter | bpdu-guard ]`

**Command Default** Edge port is disabled.

**Parameters** `bpdu-filter`

Sets the edge port Bridge Protocol Data Unit (BPDU) filter for the port.

`bpdu-guard`

Guards the port against the reception of BPDUs.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command is only for RSTP and MSTP. Use the **spanning-tree portfast** command for STP. If xSTP is enabled over VCS, this command must be executed on all RBridge nodes. Note the following details about edge ports and their behavior:

- A port can become an edge port if no BPDU is received.
- A port must become an edge port before it receives a BPDU.
- When an edge port receives a BPDU, it becomes a normal spanning-tree port and is no longer an edge port.
- Because ports directly connected to end stations cannot create bridging loops in the network, edge ports directly transition to the forwarding state, and skip the listening and learning states.

**Examples** To enable a port to quickly transition to the forwarding state:

```
switch(config)# interface tengigabitethernet 0/1
switch(conf-if-te-0/1)# spanning-tree edgeport
```

To set the edgeport BPDU filter for the port:

```
switch(conf-if-te-0/1)# spanning-tree edgeport
switch(conf-if-te-0/1)# spanning-tree edgeport bpdu-filter
```

To guard the port against reception of BPDUs:

```
switch(config)# interface tengigabitethernet 0/1
switch(conf-if-te-0/1)# spanning-tree edgeport
switch(conf-if-te-0/1)# spanning-tree edgeport bpdu-guard
```

**Related Commands** [spanning-tree portfast](#), [spanning-tree autoedge](#)

## spanning-tree guard root

Enables the guard root to restrict which interface is allowed to be the spanning-tree root port or the path-to-the-root for the switch.

**Syntax** `spanning-tree guard root [ vlan vlan_id ]`

`no spanning-tree guard root`

**Command Default** Guard root is disabled.

**Parameters** `vlan vlan_id`  
Specifies a VLAN.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Guard root protects the root bridge from malicious attacks and unintentional misconfigurations where a bridge device that is not intended to be the root bridge becomes the root bridge. This causes severe bottlenecks in the data path. Guard root ensures that the port on which it is enabled is a designated port. If the guard root enabled port receives a superior Bridge Protocol Data Unit (BPDU), it goes to a discarding state.

If the VLAN parameter is not provided, the guard root functionality is applied globally for all per-VLAN instances. But for the VLANs which have been configured explicitly, the per-VLAN configuration takes precedence over the global configuration.

The root port provides the best path from the switch to the root switch.

If xSTP is enabled over VCS, this command must be executed on all RBridge nodes. Enter **no spanning-tree guard root** to disable guard root on the selected interface.

On the Brocade VDX family of switches, VLANs are treated as interfaces from a configuration point of view. By default, all the DCB ports are assigned to VLAN 1 (VLAN ID equals 1). Valid VLAN IDs are as follows:

- On Brocade VDX 8770 switches: 1 through 4086 for 802.1Q VLANs (VLAN IDs 4087 through 4095 are reserved on these switches), and 4096 through 8191 for service or transport VFs in a Virtual Fabrics context.
- On all other Brocade VDX switches: 1 through 3962 for 802.1Q VLANs (VLAN IDs 3963 through 4095 are reserved on these switches), and 4096 through 8191 for service or transport VFs in a Virtual Fabrics context.

**Examples** To enable guard root:

```
switch(config)# interface tengigabitethernet 0/1
switch(conf-if-te-0/1)# spanning-tree guard root
```

**Related Commands** [show spanning-tree](#)

# spanning-tree hello-time

Configures the hello-time in seconds on the interface.

**Syntax** **spanning-tree hello-time** *seconds*

**no spanning-tree hello-time**

**Command Default** 2 seconds.

**Parameters** **seconds**

Sets the interval between the hello Bridge Protocol Data Units (BPDUs) sent by the root switch configuration messages. Valid values range from 1 through 10.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command sets the interval time between the BPDUs sent by the root switch. This command is only for MSTP.

Changing the **hello-time** value affects all spanning-tree instances.

The **max-age** command setting must be greater than the **spanning-tree hello-time** command setting.

If xSTP is enabled over VCS, this command must be executed on all RBridge nodes. Enter **no spanning-tree hello-time** to return to the default setting.

**Examples** To set the hello time to 5 seconds:

```
switch(config)# interface tengigabitethernet 0/1
switch(conf-if-te-0/1)# spanning-tree hello-time 5
```

**Related Commands** [forward-delay](#), [max-age](#), [show spanning-tree](#)

## spanning-tree instance

Sets restrictions for the port of particular MSTP instances.

**Syntax** **spanning-tree instance** *instance\_id* [ **cost** *cost* | **priority** *priority* | **restricted-role** | **restricted-tcn** ]  
**no spanning-tree instance** *instance\_id*

**Command Default** The path-cost value is 2000 on a 10-gigabit Ethernet interface.

**Parameters**

- instance\_id*** Specifies the MSTP instance. Valid values range from 1 through 32.
- cost** *cost* Specifies the path-cost for a port. Valid values range from 1 through 20000000.
- priority** *priority* Specifies the port priority for a bridge in increments of 16. Valid values range from 0 through 240.
- restricted-role** Specifies to restrict the role of a port.
- restricted-tcn** Specifies to restrict the propagation of the topology change notifications from a port.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use this command for MSTP-specific configurations.  
If xSTP is enabled over VCS, this command must be executed on all RBridge nodes.  
Enter **no spanning-tree instance** *instance\_id* to remove the specified MSTP instance.

**Examples** To set restrictions for the port of MSTP instance 1 with the cost of 40000:

```
switch(config)# interface tengigabitethernet 0/1  
switch(conf-if-te-0/1)# spanning-tree instance 1 cost 40000
```

**Related Commands** [instance](#), [show spanning-tree](#)



## spanning-tree link-type

Enables and disables the rapid transition for the Spanning Tree Protocol (STP).

**Syntax** `spanning-tree link-type [ point-to-point | shared ]`

**Command Default** The `spanning-tree link-type` is set to `point-to-point`.

**Parameters** `point-to-point`

Enables rapid transition.

`shared`

Disables rapid transition.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command overrides the default setting of the link type.

If xSTP is enabled over VCS, this command must be executed on all RBridge nodes.

**Examples** To specify the link type as shared:

```
switch(config)# interface tengigabitethernet 0/1
switch(conf-if-te-0/0)# spanning-tree link-type shared
```

## spanning-tree portfast

Enables the Port Fast feature on an interface to allow the interface to quickly transition to forwarding state.

<b>Syntax</b>	<b>spanning-tree portfast [ bpdu-filter   bpdu-guard ]</b>
<b>Command Default</b>	Port Fast is disabled.
<b>Parameters</b>	<p><b>bpdu-filter</b> Sets the Port Fast BPDU filter for the port.</p> <p><b>bpdu-guard</b> Guards the port against the reception of BPDUs.</p>
<b>Modes</b>	Interface subtype configuration mode
<b>Usage Guidelines</b>	<p>This command is applicable the only for the Spanning Tree Protocol (STP). Port Fast immediately puts the interface into the forwarding state without having to wait for the standard forward time. Use the <b>spanning-tree edgeport</b> command for MSTP and RSTP.</p> <p>BPDU filter prevents the switch from sending BPDU frames on ports that are enabled with portfast.</p> <p>BPDU guard disables all portfast-enabled ports should they ever receive BPDU frames. It does not prevent transmitting of BPDU frames.</p> <p>If you enable <b>spanning-tree portfast bpdu-guard</b> on an interface and the interface receives a BPDU, the software disables the interface and puts the interface in the ERR_DISABLE state.</p> <p>Enable Port Fast on ports connected to host. Enabling Port Fast on interfaces connected to switches, bridges, hubs, and so on can cause temporary bridging loops, in both trunking and nontrunking mode.</p> <p>If xSTP is enabled over VCS, this command must be executed on all RBridge nodes.</p>
<b>Examples</b>	<p>To enable a port to quickly transition to the forwarding state:</p> <pre>switch(config)# interface tengigabitethernet 0/1 switch(conf-if-te-0/1)# spanning-tree portfast</pre> <p>To set the Port Fast BPDU filter for the port:</p> <pre>switch(config)# interface tengigabitethernet 0/1 switch(conf-if-te-0/1)# spanning-tree portfast bpdu-filter</pre> <p>To guard the port against the reception of BPDUs:</p> <pre>switch(config)# interface tengigabitethernet 0/1 switch(conf-if-te-0/1)# spanning-tree portfast bpdu-guard</pre>
<b>Related Commands</b>	<a href="#">show spanning-tree</a> , <a href="#">spanning-tree autoedge</a> , <a href="#">spanning-tree edgeport</a>

## spanning-tree priority

Changes an interface's spanning-tree port priority.

**Syntax** **spanning-tree priority** *priority*

**no spanning-tree priority**

**Command Default** The default value is 128.

**Parameters** *priority*

Specifies the interface priority for the spanning tree. The range of valid values is from 0 through 240. Port priority is in increments of 16.

**Modes** Interface subtype configuration mode

**Usage Guidelines** If xSTP is enabled over VCS, this command must be executed on all the R Bridges.  
Enter **no spanning-tree priority** to return to the default setting.

**Examples** To configure the port priority to 16:

```
switch(config)# interface tengigabitethernet 0/1
switch(conf-if-te-0/1)# spanning-tree priority 16
```

**Related Commands** [show spanning-tree](#), [spanning-tree cost](#)

## spanning-tree restricted-role

Restricts the role of the port from becoming a root port.

**Syntax** **spanning-tree restricted-role**

**no spanning-tree restricted-role**

**Command Default** The restricted role is disabled.

**Modes** Interface subtype configuration mode

**Usage Guidelines** If xSTP is enabled over VCS, this command must be executed on all the RBridges.  
Enter **no spanning-tree restricted-role** to return to the default setting.

**Examples** To configure the port from becoming a root port:

```
switch(config)# interface tengigabitethernet 0/1
switch(conf-if-te-0/1)# spanning-tree restricted-role
```

**Related Commands** [show spanning-tree](#)

## spanning-tree restricted-tcn

Restricts the Topology Change Notification (TCN) Bridge Protocol Data Units (BPDUs) sent on the port.

**Syntax** **spanning-tree restricted-tcn**

**no spanning-tree restricted-tcn**

**Command Default** The restricted TCN is disabled.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter **no spanning-tree restricted-tcn** to disable this parameter.  
If xSTP is enabled over VCS, this command must be executed on all the R Bridges.

**Examples** To restrict the TCN on a specific interface:

```
switch(config)# interface tengigabitethernet 0/1
switch(conf-if-te-0/1)# spanning-tree restricted-tcn
```

**Related  
Commands** [show spanning-tree](#)

## spanning-tree shutdown

Enables or disables spanning tree on the interface or VLAN.

**Syntax** **spanning-tree shutdown**

**no spanning-tree shutdown**

**Command Default** Spanning tree is disabled by default.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Once all of the interfaces have been configured for a VLAN, you can enable Spanning Tree Protocol (STP) for all members of the VLAN with a single command. Whichever protocol is currently selected is used by the VLAN. Only one type of STP can be active at a time.

A physical interface (port) can be a member of multiple VLANs. For example, a physical port can be a member of VLAN 1002 and VLAN 55 simultaneously. In addition, VLAN 1002 can have STP enabled and VLAN 55 can have STP disabled simultaneously.

If xSTP is enabled over VCS, this command must be executed on all the RBridges.

Enter **no spanning-tree shutdown** to enable spanning tree on the interface or VLAN.

Vlan 1002 can not be enabled with the **spanning-tree shutdown** command while the device is in VCS Fabric mode.

**Examples** To disable spanning tree on a specific interface:

```
switch(config)# interface tengigabitethernet 0/1
switch(conf-if-te-0/1)# spanning-tree shutdown
```

To enable spanning tree on VLAN 1002:

```
switch(config)# interface vlan 1002
switch(conf-if-vl-1002)# no spanning-tree shutdown
```

**Related Commands** [protocol spanning-tree](#)

# spanning-tree vlan

Configures the VLAN identifier for the spanning tree interface.

**Syntax** `spanning-tree vlan vlan_id`

`no spanning-tree vlan`

**Parameters** `vlan vlan_id`

Sets the VLAN identifier for the spanning tree interface.

**Modes** Interface subtype configuration mode

**Usage Guidelines** If xSTP is enabled over VCS, this command must be executed on all RBridge nodes.

Enter **no spanning-tree vlan** to remove the VLAN setting.

On the Brocade VDX family of switches, VLANs are treated as interfaces from a configuration point of view. By default, all the DCB ports are assigned to VLAN 1 (VLAN ID equals 1). Valid VLAN IDs are as follows:

- On Brocade VDX 8770 switches: 1 through 4086 for 802.1Q VLANs (VLAN IDs 4087 through 4095 are reserved on these switches), and 4096 through 8191 for service or transport VFs in a Virtual Fabrics context.
- On all other Brocade VDX switches: 1 through 3962 for 802.1Q VLANs (VLAN IDs 3963 through 4095 are reserved on these switches), and 4096 through 8191 for service or transport VFs in a Virtual Fabrics context.

**Related Commands** [forward-delay](#), [max-age](#), [show spanning-tree](#)

## speed (Ethernet)

Sets the speed negotiation value on an Ethernet interface.

**Syntax** `speed { 100 | 1000 | 1000-auto | 10000 | auto }`

`no speed`

**Command Default** Speed is `auto`.

**Parameters** `100`

Forces the speed to 100 Mbps.

`1000`

Forces the speed to 1 Gbps.

`1000-auto`

Forces the speed to 1 Gbps AN (802.3 Clause 37 Auto-Negotiation)

`10000`

Forces the speed to 10 Gbps.

`auto`

Allows the interface to negotiate the speed setting.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The speed command is not available for 1-gigabit Ethernet or 40-gigabit Ethernet ports. Enter **no speed** to return to the default.

**Examples** To set the speed to 10 Gbps on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 170/0/1
switch(conf-if-int-170/0/1)# speed 10000
```

**Related Commands** [interface](#)



## speed (Fibre Channel)

Sets the operational speed on a Fibre Channel port.

**Syntax** `speed { auto | 1gbps | 2gbps | 4gbps | 8gbps }`

**Command Default** Speed is **auto** .

**Parameters** **auto**

Allows the interface to negotiate the port speed.

**2gbps**

Sets the operational port speed to 2 Gbps.

**4gbps**

Sets the operational port speed to 4 Gbps.

**8gbps**

Sets the operational port speed to 8 Gbps.

**16gbps**

Sets the operational port speed to 16 Gbps.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The Fibre Channel version of this command can be used only on Network OS platforms with Fibre Channel Flexports (Brocade VDX 6740 and Brocade VDX 2740) in Brocade VCS Fabric mode, and with the FCoE license installed.

**Examples** To set the Fibre Channel port speed:

```
switch (config)# interface FibreChannel 7/0/2
switch(conf-FibreChannel-7/0/2)# speed 4gbps
```

**Related Commands** [fill-word](#), [interface](#), [isl-r\\_rdy](#), [show running-config interface FibreChannel](#), [shutdown](#), [trunk-enable](#), [vc-link-init](#)

## speed (FlexPort)

This command sets the protocol and speed for the FlexPort connector group.

**Syntax** `speed { LowMixed | HighMixed | FibreChannel }`

**Command Default** The default state is Ethernet.

**Parameters** **LowMixed**

Sets to speed to 2/4/8G Fibre Channel and Ethernet speeds.

**HighMixed**

Sets the speed to 16G Fibre Channel and Ethernet speeds

**FibreChannel**

Sets the speed to support only fibre channel speeds and protocol. All FlexPorts in this connector-group must be converted to fibre-channel in order to use the FibreChannel connector-group speed.

**Modes** Hardware connector-group configuration mode.

**Usage Guidelines** None.

**Examples** This example configures the speed for the FlexPort on Rbridge-ID 47, connector group 6, to support Fibre Channel.

```
switch(conf-if-fi-47/0/8)#speed FibreChannel
```

**History**

Release version	Command history
5.0.0	This command was introduced.

**Related Commands**

[connector-group](#), [flexport](#), [hardware](#)

## speed (LAG)

Sets the speed on a LAG interface.

**Syntax** `speed { 1000 | 10000 | 40000 }`

**Command Default** Speed is 10000

**Parameters** **1000**

Forces the speed to 1 Gbps.

**10000**

Forces the speed to 10 Gbps.

**40000**

Forces the speed to 40 Gbps.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The speed command is available only for 10-gigabit Ethernet ports.

## speed (port-channel)

Sets the speed on a port-channel interface.

**Syntax** `speed { 1000 | 10000 | 40000 | 100000 }`

`no speed`

**Command Default** Speed is 10000.

**Parameters** **1000**

Forces the speed to 1 Gbps.

**10000**

Forces the speed to 10 Gbps.

**40000**

Forces the speed to 40 Gbps.

**100000**

Forces the speed to 100 Gbps. This is available only if the HundredGigabit line card is supported.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no speed` to return to the default setting.

**Examples** To set the speed to 40 Gbps on a specific port-channel interface:

```
switch(config)# interface port-channel 44
switch(config-Port-Channel-44)# speed 40000
```

**Related  
Commands** [interface](#)

# spt-threshold

Configures the Shortest Path Tree (SPT) threshold.

**Syntax** `spt-threshold { infinity | num }`

`no spt-threshold`

**Command Default** Default value is 1.

**Parameters** `infinity`

Use only the rendezvous point to send packets, do not switch over to SPT.

`num`

Rate (in kilobytes per second) that must be reached before switching to SPT.  
Valid values range from 1 through 4294967295.

**Modes** PIM router configuration mode

**Usage Guidelines** This command sets the rate, in kilobytes per second, data is to be sent through the rendezvous point before switching to SPT for sending packets.

Enter **no spt-threshold** to return to the default setting of 1.

**Examples** To set the SPT threshold interval to 20:

```
switch(conf-pim-router)# spt-threshold 20
```

**Related  
Commands** [router pim](#)

# ssh

Connects to a remote server by means of the Secure Shell (SSH) protocol.

**Syntax** `ssh { IP_address | hostname } [ -c | -l | -m | interface { <N>gigabitethernet | management | ve vlan-id } | vrf vrf_name ] }`

**Command Default** SSH connects to port 22.

**Parameters** *IP\_address*

Specifies the server IP address in IPv4 or IPv6 format.

*hostname*

Specifies the host name, a string from 1 through 253 characters.

**-c**

Specifies the encryption algorithm for the SSH session. This parameter is optional; if no encryption algorithm is specified, the default (**3des**) is used. Supported algorithms include the following:

**3des**

Triple Data Encryption Standard (DES). This is the default setting.

**aes128-cbc**

AES 128-bits

**aes192-cbc**

AES 192-bits

**aes256-cbc**

AES 256-bits

**-l *username***

Login name for the remote server. This parameter is optional. If you specify a user name, you will be prompted for a password. If you do not specify a user name, the command assumes you are logging in as root and will prompt for the root password.

**-m**

Specifies the HMAC (Hash-based Message Authentication Code) message encryption algorithm. This parameter is optional; if no encryption algorithm is specified, the default (**hmac-md5**) is used. Supported algorithms include the following:

**hmac-md5**

MD5 128-bits. This is the default setting.

**hmac-md5-96**

MD5 96-bits

**hmac-sha1**

SHA1 160-bits

**hmac-sha1-96**

SHA1 96-bits

**interface**

Specifies an interface.

**<N> gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example,

**tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**management**

Specifies a management interface.

**ve vlan-id**

Range is from 1 through 4090 if Virtual Fabrics is disabled, and from 1 through 8191 if Virtual Fabrics is enabled.

**vrf vrf-name**

Specifies a VRF instance. See the Usage Guidelines.

**Modes** Privileged EXEC mode

**Usage Guidelines** Use this command to establish an encrypted SSH connection from a switch to a remote networking device. This implementation is based on SSH v2.

---

**ATTENTION**

Beginning with release 5.0.0, support is provided for the management VRF. The default VRF and other user-configured (nondefault) VRFs can no longer be used for router management.

---

To use the **ssh** command on the management VRF, use the **vrf** keyword and enter **mgmt-vrf** as follows. You must enter the name of the management VRF manually.

```
switch# ssh vrf mgmt-vrf
```

The following features are not supported:

- Displaying SSH sessions
- Deleting stale SSH keys

**Examples** To connect to a remote device using an SSH connection with default settings:

```
switch# ssh 10.70.212.152
```

```
The authenticity of host '10.70.212.152 (10.70.212.152)' can't be established.
RSA key fingerprint is f0:2a:7e:48:60:cd:06:3d:f4:44:30:2a:ce:68:fe:1d.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '10.70.212.152' (RSA) to the list of known hosts.
Password:
```

To connect to a remote device using an SSH connection with a login name:

```
switch# ssh -l admin 127.2.1.8
```

```
admin@127.2.1.8's password
```

**Related Commands** [show running-config ssh server](#), [show ssh server status](#), [ssh server shutdown](#), [telnet](#)

## ssh client cipher non-cbc

Sets the SSH client's cipher list to non-cbc ciphers for the SSH client.

**Syntax** `ssh client cipher non-cbc`

`no ssh client cipher non-cbc`

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use the `no ssh client cipher non-cbc` command remove the non-cbc cipher list from the ssh client.

**Examples** Sets the SSH client's cipher list to non-cbc ciphers, such as aes256-ctr, aes192-ctr, or aes128-ctr.

```
switch(config-rbridge-id-1)# ssh client cipher non-cbc
switch(config-rbridge-id-1)# do show running-config rbridge-id ssh
rbridge-id 1
ssh server non-cbc
ssh client non-cbc
switch(config-rbridge-id-1)#
```

### History

Release version	Command history
5.0.1a	This command was introduced.

### Related Commands

[ssh server cipher non-cbc](#)



## ssh server cipher non-cbc

Sets the SSH server's cipher list to non-cbc ciphers for the SSH server.

**Syntax** **ssh server cipher non-cbc**

**no ssh server cipher non-cbc**

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use the **no ssh server cipher non-cbc** command remove the non-cbc cipher list from the ssh client.

**Examples** Sets the SSH server's cipher list to non-cbc ciphers, such as aes256-ctr, aes192-ctr, or aes128-ctr.

```
switch(config-rbridge-id-1)# ssh server cipher non-cbc
switch(config-rbridge-id-1)# do show running-config rbridge-id ssh
rbridge-id 1
ssh server non-cbc
ssh client non-cbc
switch(config-rbridge-id-1)#
```

### History

Release version	Command history
5.0.1a	This command was introduced.

### Related Commands

[ssh client cipher non-cbc](#)

## ssh server key

Generates or zeroizes SSH crypto keys on the device. All three keys can be active simultaneously.

**Syntax** `ssh server key {dsa | rsa [1024 | 2048] | ecdsa 256}`

`no ssh server key {dsa | rsa | ecdsa}`

**Command Default** The default values of SSH keys are:

- DSA is active
- ECDSA value is 256
- RSA value is 2048

**Parameters** `dsa`

Generates the DSA key.

`rsa [1024 | 2048]`

Generates the RSA key, in either the 1024 or 2048 bit size.

`ecdsa 256`

Generates the ECDSA key at 256 bits.

**Modes** RBridge ID configuration mode

**Usage Guidelines** The `no ssh server key` command zeroizes the SSH keys on the device.

If you generate and delete SSH crypto keys, you must restart the SSH server using the `no ssh server shutdown` command to enable the configuration.

Earlier versions of Network OS have `rsa`, `dsa` and `ecdsa` keys, so after upgrading to Network OS v5.0.1a, respective entries are added into the configuration.

If you downgrade your device to a release earlier than Network OS v5.0.1a, the RSA, DSA, and ECDSA keys are generated if they do not exist.

**Examples** Typical DSA command example:

```
switch(config-rbridge-id-176)# ssh server key dsa
```

Typical RSA command example:

```
switch(config-rbridge-id-176)# ssh server key rsa 1024
```

Typical ECDSA command example:

```
switch(config-rbridge-id-176)# ssh server key ecdsa 256
```

Typical zeroizing example:

```
switch(config-rbridge-id-176)# no ssh server key dsa
```

**History**

Release version	Command history
5.0.1a	This command was introduced.

# ssh server key-exchange dh-group-14

Specifies the method used for generating the one-time session keys for encryption and authentication with the Secure Shell (SSH) server.

**Syntax** **ssh server key-exchange dh-group-14**

**no ssh server key-exchange dh-group-14**

**Command Default** This command is not configured as DH Group 14.

**Modes** Global configuration mode

RBridge ID configuration mode

**Usage Guidelines** You can configure the SSH server key-exchange method to DH Group 14. When the SSH server key-exchange method is configured to DH Group 14, the SSH connection from a remote SSH client is allowed only if the key-exchange method at the client end is also configured to DH Group 14. Enter **no ssh server key-exchange dh-group-14** to restore SSH server key-exchange to the default value.

This command is not distributed across the cluster. The RBridge ID of the node should be used to configure service on individual nodes.

For information on DH Group 14, refer to [RFC 3526](#).

**Examples** To set SSH server key-exchange to DH Group 14:

```
switch(config)# rbridge-id 3
switch(config-rbridge-id-3)# ssh server key-exchange dh-group-14
```

To restore the SSH server key-exchange to default value:

```
switch(config)# rbridge-id 3
switch(config-rbridge-id-3)# no ssh server key-exchange dh-group-14
```

**Related Commands** [show running-config ssh server](#), [show ssh server status](#)

## ssh server rekey-interval

Configures the Secure Shell (SSH) server rekey-interval.

**Syntax** **ssh server rekey-interval** *interval*

**no ssh server rekey-interval**

**Parameters** *interval*

The value for the rekey interval. Range is from 900 to 3600 seconds.

**Modes** Global configuration mode

**Usage Guidelines** Use the **no ssh server rekey-interval** command to remove the rekey-interval.

# ssh server shutdown

Disables SSH service on the switch.

**Syntax** **ssh server shutdown**

**no ssh server shutdown**

**Modes** Global configuration mode

RBridge ID configuration mode

**Usage Guidelines** Enter **no ssh server shutdown** to enable SSH service. This command is not distributed across the cluster. The RBridge ID of the node should be used to configure service on individual nodes.

**Examples** To shut down SSH service:

```
switch(config)# rbridge-id-3  
switch(config-rbridge-id-3)# ssh server shutdown
```

To enable SSH service:

```
switch(config-rbridge-id-3)# no ssh server shutdown
```

**Related Commands** [show support, telnet server shutdown](#), [show running-config ssh server](#), [show ssh server status](#)

## ssh server standby enable

Enables the SSH services on the standby MM.

**Syntax** **ssh server standby enable**

**no ssh server standby enable**

**Command Default** The SSH services are disabled on the standby MM.

**Modes** RBridge ID configuration mode

**Usage Guidelines** The **no ssh server standby enable** command disables the SSH services on the standby MM. It is mandatory to specify the default-config when converting from Logical Chassis mode to Fabric Cluster mode, or the other way around. After conversion, the SSH and Telnet services on the standby MMs are disabled. This command enables the SSH services on the standby MM. .

**Examples** Typical command output:

```
switch(config-rbridge-id-1)# no ssh server standby enable
switch(config-rbridge-id-1)# do show running-config rbridge-id | include standby
% No entries found.
switch(config-rbridge-id-1)#
```

**History**

Release version	Command history
5.0.1a	This command was introduced.

**Related Commands**

[telnet server standby enable](#)

## ssh server status

Displays SSH service on the switch.

**Syntax** `ssh server status`

**Modes** Global configuration mode

**Examples** Typical command output:

```
switch# ssh server status
SSH Kex Exchange Algorithm: DH Group 14
```

**Related Commands** [show running-config ssh server](#), [show ssh server status](#)

## static-network

Configures a static BGP4 network, creating a stable network in the core.

<b>Syntax</b>	<b>static-network</b>  <b>no static-network</b> <i>network/mask</i> [ <b>distance</b> <i>num</i> ]
<b>Command Default</b>	The default is 200.
<b>Parameters</b>	<b><i>network/mask</i></b> Network and mask in CIDR notation. <b><i>num</i></b> Administrative distance value for this network. The range is from 1 through 255.
<b>Modes</b>	BGP address-family IPv4 unicast configuration mode
<b>Usage Guidelines</b>	While a route configured with this command will never flap unless it is deleted manually, a static BGP4 network will not interrupt the normal BGP4 decision process on other learned routes that are installed in the Routing Table Manager (RTM). Consequently, when there is a route that can be resolved, it will be installed into the RTM.  Use the <b>no</b> form of the command to restore the defaults.
<b>Examples</b>	Typical example of this command.  <pre>device# configure terminal device(config)# rbridge-id 10 device(config-rbridge-id-10)# router bgp device(config-bgp-router)# address-family ipv4 unicast device(config-bgp-ipv4u)# static-network 10.11.12.0/24 distance 300</pre>
<b>Related Commands</b>	<a href="#">route-map</a>



# storm-control ingress

Limits ingress traffic on a specified interface.

**Syntax** `storm-control ingress { broadcast | unknown-unicast | multicast } { limit-bps | limit-percent } rate [ { monitor | shutdown } ]`

`no storm-control ingress { broadcast | unknown-unicast | multicast } { limit-bps | limit-percent } rate [ { monitor | shutdown } ]`

**Parameters** **broadcast**

Specifies that the command will operate on broadcast traffic only.

**unknown-unicast**

Specifies that the command will operate on unknown-unicast traffic only.

**multicast**

Specifies that the command will operate on multicast traffic only.

**limit-bps**

Specifies that the value given to the *rate* parameter is in bits per second. If the traffic on the interface reaches this rate, no more traffic (for the traffic type specified) is allowed on the interface.

**limit-percent**

Specifies that the value given to the *rate* parameter is in percentage of capacity of the interface. If the traffic on the interface reaches this percentage of capacity, no more traffic (for the traffic type specified) is allowed on the interface.

**rate**

Specifies the amount of traffic allowed, either in bits per second or a percentage of the capacity of the interface, depending on which parameter was chosen with the rate.

- Range if you are specifying rate in bps: 0 to 10000000000. Because each application-specific integrated circuit (ASIC) may support different bit granularity, bit rates are rounded up to the next achievable rate.
- Range if you are specifying rate in percent of interface capacity: 0 to 100.

**monitor**

Specifies that, if a rate limit is reached within a five-second sampling period, a log message gets sent. A log message is generated upon the first occurrence of such an event. Subsequent log messages are generated only at the end of one complete sample interval in which no rate limits are reached.

**shutdown**

Specifies that, if a rate limit is exceeded within a five-second sampling period, the interface will be shut down. You must manually re-enable the interface after a shutdown.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command limits the amount of broadcast, unknown unicast, and multicast (BUM) ingress traffic on a specified interface. The *shutdown* parameter monitors the status of the configured rate limit every five seconds, and if the maximum defined rate is exceeded the corresponding interface is shut down until you re-enable it using the **no shut** command.

This command is supported on the 8770-4 and 8770-8 platforms only.

If you want to modify an active BUM storm control configuration, you must first disable it, then issue the **storm-control ingress** command again with the new parameters.

Enter **no storm-control ingress** to disable BUM storm control for a particular traffic type on an interface.

**Examples** To configure storm control on a 10-gigabit Ethernet interface 101/0/2, with a limit-rate of 1000000 bps:

```
switch (config)# interface tengigabitethernet 101/0/2
switch (conf-if-te-101/0/2)# storm-control ingress broadcast 1000000
```

To disable BUM storm control for broadcast traffic only, on a 10-gigabit Ethernet interface 101/0/2:

```
switch (config)# int te 101/0/2
switch (conf-if-te-101/0/2)# no storm-control ingress broadcast
```

**Related  
Commands**

[clear counters storm-control, interface, show storm-control](#)

## summary-address (OSPF)

Configures route summarization for redistributed routes for an Autonomous System Boundary Router (ASBR).

**Syntax** `summary-address A.B.C.D E.F.G.H`

`no summary-address`

**Command Default** Summary addresses are not configured.

**Parameters** `A.B.C.D E.F.G.H`

IP address and mask for the summary route representing all the redistributed routes in dotted decimal format.

**Modes** OSPF VRF router configuration mode

**Usage Guidelines** Use this command to configure an ASBR to advertise one external route as an aggregate for all redistributed routes that are covered by a specified address range. When you configure an address range, the range takes effect immediately. All the imported routes are summarized according to the configured address range. Imported routes that have already been advertised and that fall within the range are flushed out of the AS and a single route corresponding to the range is advertised.

If a route that falls within a configured address range is imported by the device, no action is taken if the device has already advertised the aggregate route; otherwise the device advertises the aggregate route. If an imported route that falls within a configured address range is removed by the device, no action is taken if there are other imported routes that fall within the same address range; otherwise the aggregate route is flushed.

You can configure up to 32 address ranges. The device sets the forwarding address of the aggregate route to 0 and sets the tag to 0. If you delete an address range, the advertised aggregate route is flushed and all imported routes that fall within the range are advertised individually. If an external link-state-database-overflow condition occurs, all aggregate routes and other external routes are flushed out of the AS. When the device exits the external LSDB overflow condition, all the imported routes are summarized according to the configured address ranges. This parameter affects only imported, type 5 external routes.

Enter `no summary-address` to disable route summarization.

**Examples** To configure a summary address of 10.1.0.0 with a mask of 255.255.0.0:

```
switch# configure
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)#router ospf
switch(config-router-ospf-vrf-default-vrf)# summary-address 10.1.0.0 255.255.0.0
```

---

### NOTE

The command in this example configures summary address 10.1.0.0, which includes addresses 10.1.1.0, 10.1.2.0, 10.1.3.0, and so on. For all of these networks, only the address 10.1.0.0 is advertised in external LSAs.

---

## summary-address (OSPFv3)

Configures route summarization for redistributed routes for an Autonomous System Boundary Router (ASBR).

<b>Syntax</b>	<b>summary-address</b> <i>A:B::C:D/LEN</i>  <b>no summary-address</b>
<b>Command Default</b>	Summary addresses are not configured.
<b>Parameters</b>	<b>A:B:C:D/LEN</b> IPv6 summary address
<b>Modes</b>	OSPFv3 VRF router configuration mode
<b>Usage Guidelines</b>	<p>Use this command to configure an ASBR to advertise one external route as an aggregate for all redistributed routes that are covered by a specified address range. When you configure an address range, the range takes effect immediately. All the imported routes are summarized according to the configured address range. Imported routes that have already been advertised and that fall within the range are flushed out of the AS and a single route corresponding to the range is advertised.</p> <p>If a route that falls within a configured address range is imported by the device, no action is taken if the device has already advertised the aggregate route; otherwise the device advertises the aggregate route. If an imported route that falls within a configured address range is removed by the device, no action is taken if there are other imported routes that fall within the same address range; otherwise the aggregate route is flushed.</p> <p>You can configure up to 4 address ranges. The device sets the forwarding address of the aggregate route to 0 and sets the tag to 0. If you delete an address range, the advertised aggregate route is flushed and all imported routes that fall within the range are advertised individually. If an external link-state-database-overflow condition occurs, all aggregate routes and other external routes are flushed out of the AS. When the device exits the external LSDB overflow condition, all the imported routes are summarized according to the configured address ranges.</p>
<b>Examples</b>	<p>To configure a summary address of 2001:db8::/24 for routes redistributed into OSPFv3:</p> <pre>device# configure terminal device(config)# rbridge-id 122 device(config-rbridge-id-122)# ipv6 router ospf device(config-ipv6-router-ospf-vrf-default-vrf)# summary-address 2001:db8::/24</pre>

---

### NOTE

this example, the summary prefix 2001:db8::/24 includes addresses 2001:db8::/1 through 2001:db8::/24. Only the address 2001:db8::/24 is advertised in an external link-state advertisement.

---

# support

Enables or disables the first-fault data capture (FFDC).

**Syntax**    **support ffdc**

**no support ffdc**

**Command Default**    FFDC is enabled.

**Parameters**        **ffdc**

                              Enables FFDC.

**Modes**            Global configuration mode

**Usage Guidelines**    This command is supported only on the local switch.

                          This command is not supported on the standby management module.

                          Enter **no router ffdc** to disable FFDC. When disabled, the daemon does not capture any data, even when a message with FFDC attributes is logged.

**Examples**        To enable FFDC:

```
switch(config)# support ffdc
```

                    To disable FFDC:

```
switch(config)# no support ffdc
```

**Related  
Commands**        [clear support](#), [copy support](#), [show support](#)

## support autoupload enable

Specifies if support autoupload is enabled or disabled. When set to enabled, the data files are automatically transferred to the configured remote location.

**Syntax** **support autoupload enable**

**no support autoupload enable**

**Command Default** Support autoupload is disabled by default.

**Modes** Global configuration mode

**Usage Guidelines** Whenever a core file, FFDC, trace data file occurs, the data files are automatically transferred to the configured remote location if the autoupload feature is enabled.

Use the **no** form of this command to disable support autoupload.

**Examples** To enable autoupload mode:

```
switch(config)# support autoupload enable
```

To disable autoupload mode:

```
switch(config)# no support autoupload enable
```

**Related Commands** [show running-config support autoupload-param](#)

## support autoupload-param

Defines autoupload parameters.

<b>Syntax</b>	<b>support autoupload-param</b> <i>hostip</i> <i>host-ip</i> <b>user</b> <i>user_acct</i> <b>password</b> <i>password</i> <b>protocol</b> [ <b>ftp</b>   <b>scp</b>   <b>sftp</b> ] <i>directory</i> <i>path</i>
<b>Parameters</b>	<p><b>hostip</b> <i>host-ip</i> Specifies the IP address of the remote host.</p> <p><b>user</b> <i>user_acct</i> Specifies the user name to access the remote host.</p> <p><b>password</b> <i>password</i> Specifies the password to access the remote host.</p> <p><b>protocol</b> <b>FTP</b>   <b>SCP</b>   <b>SFTP</b> Specifies the protocol used to access the remote server.</p> <p><b>directory</b> <i>path</i> Specifies the path to the directory.</p> <p><b>rbridge-id</b> Enables RBridge ID mode to support Virtual Cluster Switching (VCS) on individual nodes.</p> <p><b>rbridge-id</b> Specifies a unique identifier for a node.</p> <p><b>all</b> Specifies all identifiers for a node.</p>
<b>Modes</b>	Global configuration mode
<b>Examples</b>	To configure autoupload parameters:

```
switch(config)# support autoupload-param hostip 10.31.2.27 protocol [ftp|scp |
sftp]username hegdes directory /uers/home40/hegdes/autoupload password
(<string>): *****
```

## support support-param

Defines support parameters.

- Syntax** **support support-param hostip** *host-ip* **user** *user\_acct* **password** *password* **protocol** [ **ftp** | **scp** | **sftp** ] **directory** *path*
- Parameters**
- hostip** *host-ip*  
Specifies the IP address of the remote host.
  - user** *user\_acct*  
Specifies the user name to access the remote host.
  - password** *password*  
Specifies the password to access the remote host.
  - protocol** **FTP** | **SCP** | **SFTP**  
Specifies the protocol used to access the remote server.
  - directory** *path*  
Specifies the path to the directory.
- Modes** Global configuration mode
- Examples** To configure support parameters:

```
switch(config)# support support-param hostip 10.31.2.27 protocol [ftp|scp |
sftp]username hegdes directory /uers/home40/hegdes/support password
(<string>): *****
```



# switch-attributes

Sets switch attributes.

**Syntax** **switch-attributes** *rbridge-id*

**chassis-name** *string*

**host-name** *string*

**no switch-attributes**

**Command Default** The default chassis name depends on the switch model. You can assign the chassis name any name you wish to represent one of the following product names:

- VDX 6740
- VDX 6740T
- VDX 67440T-1G
- VDX 8770-4
- VDX 8770-8

The default host name is "sw0".

**Parameters** **rbridge-id**

Specifies the RBridge ID the attribute is to be set for. Only the local RBridge ID is supported.

**chassis-name** *string*

Sets the switch chassis name. The string must be between 1 and 30 ASCII characters in length, and the leading character must be a letter.

**host-name** *string*

Sets the switch host name. The string must be between 1 and 30 ASCII characters in length, and the leading character must be a letter.

**Modes** Global configuration mode

**Usage Guidelines** When issued with the RBridge ID of the switch to be configured, this command goes into a sub-command shell where you can configure the host name or chassis name.

The text string for the **chassis-name** and **host-name** string is limited to 30 characters. The string must begin with a letter, and can consist of letters, digits, hyphens, periods (dots), and underscore characters. Spaces are not permitted.

This command is not supported on the standby management module.

This command is supported only on the local switch.

Enter **no switch-attributes** to restore the default values.

**Examples** To set the host name for a switch with an RBridge ID of 2:

```
switch(config)# switch-attributes 2
switch(config-switch-attributes-1)# host-name VDX8770-4
```

**Related Commands** [show running-config switch-attributes](#)

# switchport

Puts the interface in Layer 2 mode and sets the switching characteristics of the Layer 2 interface. .

**Syntax** **switchport**

**no switchport**

**Command Default** All Layer 2 interfaces are mapped to default VLAN 1 and the interface is set to access mode.

**Modes** Interface subtype configuration mode

**Usage Guidelines** For changing the interface configuration mode to trunk or changing the default VLAN mapping, use additional **switchport** commands.

Enter **no switchport** to take the switch out of the Layer 2 mode.

**Examples** To put a specific 10-gigabit Ethernet interface in Layer 2 mode:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# switchport
```

To remove a specific port-channel interface from Layer 2 mode:

```
switch(config)# interface port-channel 44
switch(config-port-channel-44)# no switchport
```

**Related Commands** [interface](#), [show vlan](#), [switchport mode](#), [switchport access](#), [switchport trunk allowed vlan rspan-vlan](#)

## switchport access

Sets the Layer 2 interface as access.

**Syntax** `switchport access { vlan vlan_id | rspan-vlan vlan_id | mac HHHH.HHHH.HHHH | mac-group mac-group-id }`

**no switchport access** `{ vlan vlan_id | rspan-vlan vlan_id | mac HHHH.HHHH.HHHH | mac-group mac-group-id }`

**Command Default** All Layer 2 interfaces are in access mode and belong to the VLAN ID 1.

**Parameters** `vlan vlan_id`

Sets the port VLAN (PVID) to the specified *vlan\_id*. Range is below 4096 for 802.1Q VLANs, and from 4096 through 8191 for service or transport VFs in a Virtual Fabrics context.

`rspan-vlan vlan_id`

Sets a VLAN ID for RSPAN (Remote Switched Port Analyzer) traffic analysis.

`mac HHHH.HHHH.HHHH`

Sets a source MAC address for classifying an untagged VLAN specified by the `vlan` keyword.

`mac-group mac-group-id`

(Optional) Specifies a set of MAC addresses. The group of addresses must be established by the global `mac-group` command.

**Modes** Interface subtype configuration mode on edge ports

**Usage Guidelines** In access mode, the interface only allows untagged and priority tagged packets.

In a Virtual Fabrics context, use this command also to configure service or transport VFs on an access port. This allows multiple untagged VLANs on the port by means of SRC MAC classifiers.

Enter **no switchport access vlan** to set the PVID to the default VLAN 1.

**Examples** To set the Layer 2 interface PVID to 100 on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(config-if-te-178/0/9)# switchport access vlan 100
```

To set the PVID to the default VLAN 1 on a specific port-channel interface:

```
switch(config)# interface port-channel 44
switch(config-port-channel-44)# no switchport access vlan
```

The following examples illustrate configuration with service or transport VFs in a Virtual Fabrics context.

In global configuration mode, establish a mac-group:

```
switch(config)# mac-group 1
switch(config-mac-group 1)# mac 0002.0002.0002
switch(config-mac-group 1)# mac 0005.0005.0005
switch(config-mac-group 1)# mac 0008.0008.0008
```

In interface configuration mode, ensure that the switchport mode is set to access:

```
switch(config)# int te 2/0/1
switch(config-if-te-2/0/1)# switchport mode access
```

Set the default access VLAN (the default is 1) to 5000 (a classified VLAN):

```
switch(config-if-te-2/0/1)# switchport access vlan 5000
```

Classify an 802.1Q VLAN by means of a source MAC address:

```
switch(config-if-te-2/0/1)# switchport access vlan 200 mac 0002.0002.0002
```

Configure a classified VLAN (> 4095) on the same interface with a MAC address. Frames that do not match the source MAC addresses of 0002.0002.0002 or 0004.0004.0004 are classified into VLAN 5000 (the access VLAN for all untagged frames that do not have MAC address classifications).

```
switch(config-if-te-2/0/1)# switchport access vlan 6000 mac 0004.0004.0004
```

The following errors occur because a MAC address can be classified to only one VLAN on the same interface.

```
switch(config-if-te-2/0/1)# switchport access vlan 7000 mac-group 1
switch(config-if-te-2/0/1)# %Error: Mac-address/Mac-group is overlapping with another
Mac-address/Mac-group configuration on the same port.
switch(config-if-te-3/0/1)# switchport mode access
switch(config-if-te-3/0/1)# switchport access vlan 7000 mac-group 1
switch(config-if-te-3/0/1)# switchport access vlan mac 8000 0008.0008.0008
switch(config-if-te-3/0/1)# %Error: Mac-address/Mac-group is overlapping with another
Mac-address/Mac-group configuration on the same port.
```

**Related  
Commands**

[interface](#), [mac-group](#), [rspan-vlan](#), [show vlan](#), [switchport mode](#), [switchport trunk allowed vlan](#)  
[rspan-vlan](#), [switchport](#)

# switchport mode

Sets the mode of the Layer 2 interface.

**Syntax** `switchport mode { access | trunk }`

**Parameters** `access`

Sets the Layer 2 interface as access. Access mode assigns the port to a VLAN

`trunk`

Sets the Layer 2 interface as trunk. Trunk mode makes the port linkable to other switches and routers

**Modes** Interface subtype configuration mode

**Usage Guidelines** You must configure the same native VLAN on both ends of an 802.1 or classified VLAN trunk link. Failure to do so can cause bridging loops and VLAN leaks.

**Examples** To set the mode of a specific 10-gigabit Ethernet interface to *access* :

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# switchport mode access
```

To set the mode of a specific port-channel interface to *trunk*:

```
switch(config)# interface port-channel 44
switch(config-port-channel-44)# switchport mode trunk
```

**Related Commands** [interface](#), [show vlan](#), [switchport access](#), [switchport trunk allowed vlan rspan-vlan](#), [switchport](#)

## switchport mode private-vlan

Sets the private VLAN (PVLAN) mode of the Layer 2 interface.

<b>Syntax</b>	<b>switchport mode private-vlan [ host ] [ promiscuous ] [ trunk [ promiscuous   host ] ]</b>
<b>Command Default</b>	The port does not have any PVLAN attributes by default.
<b>Parameters</b>	<p><b>host</b> Sets the port mode to host (community or isolated) mode. It accepts the untagged or priority tagged packet, and the outgoing packet is untagged.</p> <p><b>promiscuous</b> Sets the port mode to promiscuous mode.</p> <p><b>trunk</b> Sets the port mode to PVLAN trunk port. This port can carry multiple VLANs. The outgoing packets carry all VLANs, except for native VLANs.</p> <p><b>trunk host</b> Sets the port mode to host (community or isolated) mode. The trunk operand means the outgoing packet will be tagged "accept".</p> <p><b>trunk promiscuous</b> Sets the trunk to promiscuous mode.</p>
<b>Modes</b>	Interface subtype configuration mode
<b>Usage Guidelines</b>	<p>This command assigns the primary Vlan to a promiscuous port. This command also maps a promiscuous port to selected secondary VLANs. This means only selected VLANs can send packets to this port.</p> <p>All switchport modes are independent from each other, including normal mode (access/trunk) and above private VLAN modes. Based on the default behavior of the port, the new mode automatically overwrites the existing mode by deleting the existing mode (removing any relationship/association) and applying the new mode.</p>
<b>Examples</b>	<p>To set the mode of a specific 10-gigabit Ethernet interface to PVLAN trunk:</p> <pre>switch(config)# interface tengigabitethernet 178/0/9 switch(conf-if-te-178/0/9)# switchport mode private-vlan trunk</pre> <p>To set the mode of a specific 10-gigabit Ethernet interface to PVLAN promiscuous (untagged):</p> <pre>switch(config)# interface tengigabitethernet 178/0/9 switch(conf-if-te-178/0/9)# switchport mode private-vlan promiscuous</pre> <p>To set the mode of a specific 10-gigabit Ethernet interface to PVLAN promiscuous (tagged):</p> <pre>switch(config)# interface tengigabitethernet 178/0/9 switch(conf-if-te-178/0/9)# switchport mode private-vlan trunk promiscuous</pre>
<b>Related Commands</b>	<a href="#">private-vlan</a> , <a href="#">show vlan</a> , <a href="#">switchport access</a> , <a href="#">switchport trunk allowed vlan rspan-vlan</a> , <a href="#">switchport</a>

## switchport mode trunk-no-default-native

Configures a port to trunk mode without the implicit creation of default native VLAN 1 in a Virtual Fabrics context.

**Syntax** `switchport mode trunk-no-default-native`

**Modes** Interface subtype configuration mode

**Usage Guidelines** When this command is enabled, any ingress tagged or untagged packet is discarded until a switchport classification or native VLAN classification is configured. To disable this functionality, simply issue the **no switchport** command, or enter a different switchport mode by using the **switchport mode access** command or the **switchport mode trunk** command.

Port mode change is not allowed when port security is enabled on the interface.

This is the fundamental difference between this command and the **switch mode trunk** command, which implicitly creates VLAN 1 on the port.

The global command **dot1q tag native-vlan** does not affect the ingress or egress tagging behavior of the native VLAN configured in this mode.

The following native VLAN commands are supported in this mode:

- **switchport trunk native-vlan-untagged**
- **switchport trunk native-vlan-xtagged**

The following native VLAN commands that are supported in regular trunk mode are NOT supported in this mode:

- **switchport trunk tag native-vlan**
- **switchport trunk native-vlan**

**Examples** Configure a trunk port without a default native VLAN, then explicitly configure the native VLAN.

```
switch(config)# interface te 2/1/1
switch(config-if-te-2/1/1)# switchport mode trunk-no-default-native
switch(config-if-te-2/1/1)# switchport trunk native-vlan-xtagged 1 egress tagged
```

**Related Commands** [switchport trunk native-vlan](#), [switchport trunk native-vlan-untagged](#), [switchport trunk native-vlan-xtagged](#)

## switchport port-security

Enables or disables port security on an interface port.

**Syntax** **switchport port-security**

**no switchport port-security**

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use the **no switchport port-security** command to disable port security on the interface.  
Port mode change is not allowed when port security is enabled on the interface.



## switchport port-security mac-address

Configures the MAC address option for port security on an interface port.

**Syntax** `switchport port-security mac-address address vlan vlan_id`

**Parameters** `mac-address address`

Specifies the MAC address-based VLAN classifier rule used to map to a specific VLAN.

`vlan vlan_id`

Specifies a VLAN.

**Modes** Interface subtype configuration mode

## switchport port-security max

Configures the maximum number of MAC addresses used for port security on an interface port.

**Syntax** `switchport port-security max value`

`no switchport port-security max`

**Parameters** *value*

The maximum number of secure MAC addresses. Range is from 1 through 8192.

**Modes** Interface subtype configuration mode

## switchport port-security oui

Configures an Organizationally Unique Identifier (OUI) MAC address for port security on an interface port. All other addresses are ignored

**Syntax**    **switchport port-security oui** *address*

**no switchport port-security oui**

**Parameters**    ***address***

The OUI MAC address from which to accept vendor traffic, in the format  
xxxx.xxxx.xxxx.

**Modes**    Interface subtype configuration mode

**Usage Guidelines**    Use the **no switchport port-security oui** command to disable this option.

The use of static secure MAC addresses is not included in OUI-based port security.

When you configure the first OUI MAC address on a secure port, traffic floods until the entries are programmed in the hardware.

## switchport port-security shutdown-time

Configures the shutdown-time option for port security on an interface port.

**Syntax** `switchport port-security shutdown-time time`

**Parameters** *time*

The amount of time to shut down the interface port, in minutes. Range is from 1 through 15.

**Modes** Interface subtype configuration mode

## switchport port-security sticky

Converts dynamic MAC addresses to sticky secure MAC addresses.

**Syntax** `switchport port-security sticky mac-address address vlan vlan_id`

**Parameters** `mac-address address`

Specifies the MAC address-based VLAN classifier rule used to map to a specific VLAN.

`vlan vlan_id`

Specifies a VLAN.

**Modes** Interface subtype configuration mode

**Usage Guidelines** You can configure an interface to convert the dynamic MAC addresses to sticky secure MAC addresses and to add them to the running configuration by enabling sticky learning. When this command is executed on an interface, the interface converts all the dynamic secure MAC addresses, including those that were dynamically learned before sticky learning was enabled, to sticky secure MAC addresses.

## switchport port-security violation

Configures the violation response options for port security on an interface.

<b>Syntax</b>	<b>switchport port-security violation { restrict   shutdown }</b>
<b>Parameters</b>	<b>restrict</b> Drops packets with unknown source addresses until you remove a sufficient number of secure MAC addresses to drop below the maximum value.
	<b>shutdown</b> Puts the interface into the error-disabled state for a predetermined amount of time.
<b>Modes</b>	Interface subtype configuration mode

## switchport private-vlan association trunk

Assigns a primary private VLAN to private VLAN trunk port.

**Syntax** `switchport private-vlan association trunk primary_vlan_ID secondary_vlan_ID`  
`no switchport private-vlan association trunk primary_vlan_ID`  
`no switchport private-vlan association trunk primary_vlan_ID secondary_vlan_ID`

**Command Default** The port does not have any PVLAN attributes by default.

**Parameters** *primary\_vlan\_ID*  
 The primary VLAN identification.  
*secondary\_vlan\_ID*  
 The secondary VLAN identification.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Multiple PVLAN pairs (Primary VLAN, multiple secondaries) can be specified using this command. Therefore, two **no** versions of this command are used to remove association for one primary VLAN, or remove any trunk association.

**Examples** To associate a primary VLAN to PVLAN trunk port, in this example 2 is primary VLAN and 302 is secondary VLAN:

```
switch(conf-if-te-178/0/9)# switchport private-vlan association trunk 2 302
```

To remove a primary VLAN to PVLAN trunk port:

```
switch(conf-if-te-178/0/9)# no switchport private-vlan association trunk 2
```

**Related Commands** [private-vlan](#), [switchport mode private-vlan](#), [switchport private-vlan mapping](#)

## switchport private-vlan host-association

Assigns a secondary and primary VLAN pair to host port.

**Syntax** **switchport private-vlan host-association** *primary\_vlan\_ID secondary\_vlan\_ID*

**no switchport private-vlan host-association**

**Command Default** The port does not have any PVLAN attributes by default.

**Parameters** *primary\_vlan\_ID*

The primary VLAN identification.

*secondary\_vlan\_ID*

The secondary VLAN identification.

**Modes** Interface subtype configuration mode

**Related Commands** [private-vlan](#), [switchport mode private-vlan](#), [switchport private-vlan mapping](#)



## switchport private-vlan mapping

Maps primary VLAN and secondary VLAN to a promiscuous port.

**Syntax** `switchport private-vlan mapping primary_vlan_ID [ add | remove ] secondary_vlan`  
`no switchport private-vlan mapping`

**Command Default** The port does not have any PVLAN attributes by default.

**Parameters** *primary\_vlan\_ID*  
The primary VLAN identification.

**add**  
Adds the secondary VLAN to the primary mapping.

**remove**  
Removes the secondary VLAN from the primary mapping.

*secondary\_vlan*  
The secondary VLAN identification.

**Modes** Interface subtype configuration mode

**Usage Guidelines** This command also maps a promiscuous port to selected secondary VLANs. This means only selected VLAN can send packets to this port.

**Related Commands** [private-vlan](#), [switchport private-vlan association trunk](#)

## switchport private-vlan trunk allowed vlan

Adds a VLAN to a private VLAN (PVLAN) trunk port.

**Syntax** `switchport private-vlan trunk allowed vlan { all | none | [ add | remove | except ] vlan_id ] ctag ctag }`

`no switchport private-vlan trunk allowed vlan vlan_id`

**Command Default** The port will have default VLAN 1.

**Parameters**

**all**

Allows all VLANs.

**none**

Removes all VLANs except for VLAN 1.

**add**

Adds a specified VLAN.

**remove**

Removes the specified VLAN.

**except**

Allows all VLANs except the specified VLAN.

**vlan\_id**

Specifies a VLAN.

**ctag ctag**

Specifies an incoming C-TAG that is associated with a service or transport VF in a Virtual Fabrics context.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Use the **no** form of this command to remove a VLAN or C-TAG from a trunk port.

For service or transport VFs (VLAN ID 4096 through 8191), the C-TAG cannot be a default VLAN, a reserved VLAN, and FCoE VLAN, or an internal control VLAN. Examples

The following illustrates the configuration of PVLANS for both 802.1Q VLANs and service or transport VFs in a Virtual Fabrics context.

Configure a PVLAN trunk port:

```
switch(config)# int te 4/1
switch(config-if-te-2/0/2)# switchport mode private-vlan trunk
```

Configure 802.1Q VLANs and service or transport VFs in a Virtual Fabrics context:

```
switch(config-if-te-2/0/2)# switchport private-vlan trunk allowed vlan add 400
switch(config-if-te-2/0/2)# switchport private-vlan trunk allowed vlan add 5000 ctag
100
```

Configure service or transport VFs as PVLANS, by using the **switchport private-vlan association** command:

```
switch(config-if-te-2/0/2)# switchport private-vlan association trunk 6000 7000
switch(config-if-te-2/0/2)# switchport private-vlan association trunk 6000 8000
```

**Related Commands**

[switchport mode](#), [switchport private-vlan association trunk](#)

## switchport private-vlan trunk native-vlan

Sets native private VLAN (PVLAN) characteristics of the Layer 2 trunk interface for classifying untagged traffic.

**Syntax** `switchport private-vlan trunk native-vlan vlan_id`

`no switchport private-vlan trunk native-vlan`

**Parameters** *vlan\_id*

Specifies a VLAN to transmit and receive through the Layer 2 interface.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no switchport trunk native-vlan` to reset the native VLAN to the default setting.

Native VLAN configuration is not supported for a port in private vlan trunk promiscuous mode.

**Examples** To set native PVLAN characteristics for a VLAN whose VLAN ID is 120:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# switchport private-vlan trunk native-vlan 120
```

**Related Commands** [switchport mode private-vlan](#), [switchport private-vlan association trunk](#), [switchport private-vlan trunk allowed vlan](#)

## switchport trunk allowed vlan rspan-vlan

Adds or removes VLANs on a Layer 2 interface in trunk mode.

<b>Syntax</b>	<b>switchport trunk allowed { vlan   rspan-vlan } { add <i>vlan_id</i> { ctag { <i>id</i>   <i>ctag - range</i> }   all   except <i>vlan_id</i>   none   remove <i>vlan_id</i> }</b>
<b>Parameters</b>	<p><b>add <i>vlan_id</i></b> Adds a VLAN to transmit and receive through the Layer 2 interface. The VLAN can be an 802.1Q VLAN, an RSPAN VLAN, or a transport VLAN.</p> <p><b>all</b> Allows only 802.1Q VLANs to transmit and receive through the Layer 2 interface. This keyword does not apply to classified or transport VLANs.</p> <p><b>ctag</b> Specifies an incoming C-TAG or range of C-TAGs for classified or transport VLANs in a Virtual Fabrics context.</p> <p><b><i>id</i></b> C-TAG ID.</p> <p><b><i>range</i></b> Range of C-TAG IDs, for example, 100-200, or 10,20,100-200, applicable only if the VLAN is a transport VLAN.</p> <p><b>except <i>vlan_id</i></b> Allows only 802.1Q VLANs except the specified VLAN ID to transmit and receive through the Layer 2 interface.</p> <p><b>none</b> Allows only 802.1Q VLANs to transmit and receive through the Layer 2 interface. This keyword does not apply to service or transport VFs in a Virtual Fabrics context.</p> <p><b>rspan-vlan <i>vlan_id</i></b> Selects a VLAN for Remote Switched Port Analyzer (RSPAN) traffic monitoring.</p> <p><b>remove <i>vlan_id</i></b> Removes a VLAN that transmits and receives through the Layer 2 interface.</p>
<b>Modes</b>	Interface subtype configuration mode
<b>Usage Guidelines</b>	<p>For service or transport VFs (VLAN ID 4096 through 8191), the C-TAG cannot be a default VLAN, a reserved VLAN, and FCoE VLAN, or an internal control VLAN.</p> <p>A transport VF C-TAG can be any VLAN ID that is not used in other classifications or as a 802.1Q VLAN.</p>
<b>Examples</b>	<p>To add the tagged VLAN 100 to a specific 10-gigabit Ethernet interface:</p> <pre>switch(config)# interface tengigabitethernet 178/0/9 switch(conf-if-te-178/0/9)# switchport trunk allowed vlan add 100</pre> <p>To remove the tagged VLAN 100 from the interface:</p> <pre>switch(config)# interface tengigabitethernet 178/0/9 switch(conf-if-te-178/0/9)# switchport trunk allowed vlan remove 100</pre>

The following examples illustrate configuration in a Virtual Fabrics context:

Configure an interface as a trunk switchport.

```
switch(config)# int te 1/0/1
switch(config-if-te-1/0/1)# switchport mode trunk
```

A C-TAG is required for a classified VLAN (VLAN ID from 4096 through 8191):

```
switch(config-if-te-1/0/1)# switchport trunk allowed vlan add 7000
switch(config-if-te-1/0/1)# syntax error: unknown argument
```

Configure a classified VLAN with a C-TAG:

```
switch(config-if-te-1/0/1)# switchport trunk allowed vlan add 5000 ctag 100
switch(config-if-te-1/0/1)# switchport trunk allowed vlan add 6000 ctag 200
```

An 802.1Q vlan specified as a user VLAN cannot be used as a C-TAG in a classified VLAN. The following show conflicts.

- Edge C-TAG 100 is already assigned to VLAN 5000 at the same port:

```
switch(config-if-te-1/0/1)# switchport trunk allow vlan add 8000 ctag 100
switch(config-if-te-1/0/1)# %Error: C-tag is already used.
```

- Edge VLAN 100 is already used as a C-TAG in a classified VLAN:

```
switch(config-if-te-1/0/1)# switchport trunk allow vlan 100
switch(config-if-te-1/0/1)# %%Error: One of the vlans in the range is configured as a
ctag on the same port.
switch(config-if-te-1/0/1)# switchport trunk allow vlan all
switch(config-if-te-1/0/1)# %%Error: Virtual-fabric vlan classification configuration
exists.
switch(config-if-te-1/0/1)# switchport trunk allow vlan add 888
```

- Edge VLAN 888 was already used in 802.1Q configuration.

```
switch(config-if-te-1/0/1)# switchport trunk allow vlan add 8000 ctag 888
switch(config-if-te-1/0/1)# %Error: Ctag is configured in the allowed range on this
port.
```

**Related Commands** [interface](#), [rspan-vlan](#), [show vlan](#), [switchport mode](#), [switchport trunk native-vlan](#), [switchport trunk tag native-vlan](#), [transport-service](#)

## switchport trunk default-vlan

Configures tagged or untagged data traffic that does not match any classification rule on a trunk port, supporting service or transport VFs in a Virtual Fabrics context.

<b>Syntax</b>	<b>switchport trunk default-vlan</b> <i>vlan_id</i> <b>no switchport trunk default-vlan</b> <i>vlan_id</i>
<b>Parameters</b>	<b>vlan_id</b> Adds a classified VLAN (VLAN ID > 4095) to transmit and receive through the Layer 2 interface.
<b>Modes</b>	Interface subtype configuration mode on a trunk port
<b>Usage Guidelines</b>	Enter <b>no switchport trunk default-vlan</b> <i>vlan_id</i> to remove the default VLAN configuration.
<b>Examples</b>	Create a transport VF in a Virtual Fabrics context:  <pre>switch(config)# interface vlan 6000 switch(config-vlan-6000)# transport-service 60</pre> Classify all nonmatching traffic except native VLAN traffic to the transparent default VLAN:  <pre>switch(config-if-te-2/0/1)# switchport trunk default-vlan 6000</pre>
<b>Related Commands</b>	<a href="#">interface</a> , <a href="#">show vlan</a> , <a href="#">switchport mode</a> , <a href="#">switchport trunk allowed vlan rspan-vlan</a> , <a href="#">switchport trunk tag native-vlan</a> , <a href="#">transport-service</a>

## switchport trunk native-vlan

Sets native VLAN characteristics as an 802.1Q VLAN, or, in a Virtual Fabrics context, as service or transport VF on a trunk port, matching tagged or untagged data traffic that does not match a classification rule.

**Syntax** `switchport trunk native-vlan vlan_id [ ctag id ]`

`no switchport trunk native-vlan vlan_id [ ctag id ]`

**Parameters** *vlan\_id*

Adds a VLAN to transmit and receive through the Layer 2 interface.

*ctag id*

Sets an optional C-TAG for a service or transport VF (VLAN ID > 4095). If not present, the native VLAN is untagged.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Note the following:

- For VLAN IDs above 4095, the **ctag** keyword is optional.
- If **ctag** is not used, the native VLAN is untagged and the command is validated against the **[no] switchport trunk tag native-vlan** command, which controls the tagging of the native VLAN at the interface level. The **switchport trunk native-vlan** command is accepted only if the configuration set by the **switchport trunk tag native-vlan** command allows untagged packets. For VLAN IDs above 4095, validation against the global command **no vlan dot1q tag native** is not required.
- The native VLAN must accept tagged frames for the **ctag** keyword to apply.
- For 802.1Q VLANs (VLAN ID < 4096), both the interface subtype and global commands that control native VLAN tagging apply to the specified native VLAN.

Use the **no** form of this command to unconfigure the native VLAN. VLAN 1 then becomes the native VLAN.

For service or transport VFs (VLAN ID 4096 through 8191), the C-TAG cannot be a default VLAN, a reserved VLAN, or an internal control VLAN. An FCoE VLAN ID can be used as a C-TAG provided the interface is not configured for "fcoeport default."

Enter **no switchport trunk native-vlan** to reset the native VLAN to the default setting

**Examples** To set native VLAN characteristics for an 802.1Q VLAN whose VLAN ID is 120:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# switchport trunk native-vlan 120
```

The following illustrates the use of the command in a Virtual Fabrics context:

- Configure an interface as a switchport trunk and set the tagging of the native VLAN at the interface level:

```
switch(config)# int te 2/0/1
switch(config-if-te-2/0/1)# switchport mode trunk
switch(config-if-te-2/0/1)# switchport trunk tag native-vlan
```

- Change the native VLAN from the default of 1 to a classified VLAN (VLAN ID > 4095) and add an optional C-TAG:

```
switch(config-if-te-2/0/1)# switchport trunk native-vlan 5000 ctag 50
```

- Change the new native default VLAN to an 802.1Q VLAN (VLAN ID < 4096):

```
switch(config-if-te-2/0/1)# switchport trunk native-vlan 200
```

- The interface must allow untagged packets for classified native VLANs without a C-TAG:

```
switch(config-if-te-2/0/1)# switchport trunk native-vlan 5000
%%Error: Cannot configure non-dot1q native-vlan without a ctag, when native-vlan-
tagging is enabled.
switch(config-if-te-2/0/1)# no
 switchport trunk tag native-vlan
switch(config-if-te-2/0/1)# switchport trunk native-vlan 5000
```

**Related  
Commands**

[interface](#), [show vlan](#), [switchport mode](#), [switchport trunk allowed vlan rspan-vlan](#), [switchport trunk tag native-vlan](#), [transport-service](#)



## switchport trunk native-vlan-untagged

Configures a port to accept only untagged packets, and specifies that those packets be egress untagged in a Virtual Fabrics context. The untagged packets may be classified to an 802.1Q VLAN, a service VF, or a transport VF.

**Syntax** `switchport trunk native-vlan-untagged vlan_id`

**no switchport trunk native-vlan-untagged**

**Parameters** *vlan\_id*

Adds a classified VLAN (VLAN ID > 4095) to transmit and receive through the Layer 2 interface.

**Modes** Interface subtype configuration mode on a trunk port

**Usage Guidelines** This command is supported when the port is in no-default-vlan trunk mode, as enabled by means of the **switchport mode trunk-no-default-native** command.

Use the **no switchport trunk native-vlan-untagged** command to remove the configuration.

Port mode change is not allowed when port security is enabled on the interface.

**Examples** Configure untagged native VLAN 5000, allow VLAN 6000, and make VLAN 7000 the default VLAN.

```
switch(config)# interface te 2/1/1
switch(config-if-te-2/1/1)# switchport mode trunk-no-default-native
switch(config-if-te-2/1/1)# switchport trunk native-vlan untagged 5000
switch(config-if-te-2/1/1)# switchport trunk add vlan 6000 ctag 100-200
switch(config-if-te-2/1/1)# switchport trunk default-vlan 7000
```

Remove the native VLAN 5000.

```
switch(config-if-te-2/1/1)# no switchport trunk native-vlan-untagged
```

**Related Commands** [switchport mode trunk-no-default-native](#), [switchport trunk native-vlan-xtagged](#)

## switchport trunk native-vlan-xtagged

Configures a port to accept both tagged and untagged packets, and specifies the egress tagging behavior in a Virtual Fabrics context.

<b>Syntax</b>	<b>switchport trunk native-vlan-xtagged</b> <i>vlan_id</i> [ <b>ctag</b> <i>cvid</i> ] <b>egress</b> { <b>tagged</b>   <b>untagged</b>   <b>any</b> }
	<b>no switchport trunk native-vlan-xtagged</b>
<b>Parameters</b>	<p><b>vlan_id</b> Adds a classified VLAN (VLAN ID &gt; 4095) to transmit and receive through the Layer 2 interface.</p> <p><b>ctag cvid</b> Sets an optional C-TAG (802.1Q VLAN ID) for a service or transport VF (VLAN ID &gt; 4095).</p> <p><b>egress</b> Enables the selection of required tagging options.</p> <p style="padding-left: 20px;"><b>tagged</b> Specifies packets as tagged.</p> <p style="padding-left: 20px;"><b>untagged</b> Specifies packets as untagged.</p> <p style="padding-left: 20px;"><b>any</b> Specifies that packets preserve their ingress encapsulation.</p>
<b>Modes</b>	Interface subtype configuration mode on a trunk port
<b>Usage Guidelines</b>	<p>This command is supported when the port is in no-default-vlan trunk mode, as enabled by means of the <b>switchport mode trunk-no-default-native</b> command.</p> <p>Note the following:</p> <ul style="list-style-type: none"> <li>• Ingress packets may be classified to an 802.1Q VLAN, a service VF, or a transport VF.</li> <li>• The native VLAN must accept tagged frames for the <b>ctag</b> keyword to apply.</li> <li>• If the specified VLAN is an 802.1Q VLAN, the <b>ctag</b> option is not required.</li> <li>• If the specified VLAN is an 802.1Q VLAN or a service VF, the <b>egress</b> tagging options are <b>tagged</b> or <b>untagged</b>.</li> <li>• If the specified VLAN is a transport VF, then the <b>egress</b> tagging option must be <b>any</b> to preserve the encapsulation of ingress frames.</li> </ul> <p>Use the <b>no switchport trunk native-vlan-xtagged</b> command to remove the configuration.</p> <p>Port mode change is not allowed when port security is enabled on the interface.</p>
<b>Examples</b>	<p>Configure transport VF 6000 that accepts C-TAG range 100 through 200 and a native VLAN that can be either tagged or untagged.</p> <pre>switch(config)# interface te 2/1/1 switch(config-if-te-2/1/1)# switchport mode trunk-no-default-native switch(config-if-te-2/1/1)# switchport trunk native-vlan-xtagged 6000 ctag 10 egress any switch(config-if-te-2/1/1)# switchport trunk allow vlan 6000 ctag 100-200</pre> <p>Remove the native VLAN from the transport VF.</p> <pre>switch(config-if-te-2/1/1)# no switchport trunk native-vlan-xtagged</pre>

**Related Commands** [switchport mode trunk-no-default-native, switchport trunk native-vlan-untagged](#)

## switchport trunk tag native-vlan

Enables tagging on native VLAN traffic.

**Syntax** `switchport trunk tag native-vlan`

`no switchport trunk tag native`

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no switchport trunk tag native` to untag native traffic for a specific interface.

**Examples** To enable tagging for native traffic on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/9
switch(conf-if-te-178/0/9)# switchport trunk tag native-vlan
```

**Related Commands** [interface](#), [show vlan](#), [switchport mode](#), [switchport trunk allowed vlan rspan-vlan](#), [switchport trunk native-vlan](#)

# system-description

Sets the global system description specific to LLDP.

**Syntax** **system-description** *line*

**no system-description**

**Parameters** *line*

Specifies a description for the LLDP system. The string must be between 1 and 50 ASCII characters in length.

**Modes** Protocol LLDP configuration mode

**Usage Guidelines** Enter **no system-description** to clear the global LLDP system description.

**Examples** To set the global system description specific to LLDP:

```
switch(conf-lldp)# system-description Brocade
```

**Related  
Commands** [system-name](#)

## system-max

Sets the maximum number of Address Resolution Protocol (ARP) requests that the system will allocate.

**Syntax** **system-max arp** *number\_of\_arps*

**no system-max arp**

**Parameters** **arp**

Enables setting the maximum number of ARP requests.

*number\_of\_arps*

An integer value from 0 through 16384.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use the **no** form of this command to disable this feature.

# system-monitor

Manages the monitoring of FRUs and sets a variety of alerts when thresholds are exceeded.

**Syntax** `system-monitor { LineCard [ alert [ action [ all | email | none | raslog ] ] | state [ all | faulty | inserted | none | on | removed ] ] | threshold [ down-threshold | marginal-threshold ] ] | MM [ threshold [ down-threshold | marginal-threshold ] ] | cid-card [ alert [ action | state [ all | faulty | inserted | none | on | removed ] ] | threshold [ down-threshold | marginal-threshold ] ] | compact-flash [ threshold [ down-threshold | marginal-threshold ] ] | fan [ alert [ action | state [ all | faulty | inserted | none | on | removed ] ] | threshold [ down-threshold | marginal-threshold ] ] | power [ alert [ action | state [ all | faulty | inserted | none | on | removed ] ] | threshold [ down-threshold | marginal-threshold ] ] | sfp [ alert [ action state ] ] | temp [ threshold [ down-threshold | marginal-threshold ] ] }`

`no system-monitor`

**Command Default** For system monitoring defaults, see the "System Monitor" chapter in the *Network OS Administrator's Guide Supporting Network OS v.4.0.0*.

<b>Parameters</b>	<b>LineCard</b>	Specifies alerts and thresholds for line cards.
	<b>MM</b>	Specifies thresholds for management modules.
	<b>cid-card</b>	Specifies alerts and thresholds for the chassis ID card.
	<b>compact-flash</b>	Specifies thresholds for the compact flash device.
	<b>fan</b>	Specifies alerts and thresholds for the fans.
	<b>power</b>	Specifies alerts and thresholds for the power supplies.
	<b>sfp</b>	Specifies alerts for the small form-factor pluggable devices.
	<b>temp</b>	Specifies thresholds for the temperature sensors.
	<b>alert</b>	Specifies whether an alert is sent when a threshold value is either above or below a threshold trigger.
	<b>action</b>	Specifies the response type.
	<b>all</b>	Specifies that e-mail and RASLog messaging are used.
	<b>email</b>	Specifies that an e-mail message is sent.
	<b>none</b>	Specifies that no message is sent.
	<b>raslog</b>	Specifies RASLog messaging.
	<b>state</b>	Specifies the hardware state to be monitored.

- all** Specifies that all hardware states are monitored.
- faulty** Specifies that hardware is monitored for faults.
- inserted** Specifies that the insertion state of hardware is monitored.
- none** Specifies that no hardware states are monitored.
- on** Specifies that the hardware on/off state is monitored.
- removed** Specifies that the removal of hardware is monitored.

**threshold**

Specifies the monitoring of thresholds

**down-threshold**

Specifies an integer value that, when exceeded, indicates when hardware is down.

**marginal-threshold**

Specifies an integer value that, when exceeded, indicates when hardware is operating marginally.

**Modes** RBridge ID configuration mode

**Usage Guidelines** Use this command to configure field-replaceable unit (FRU) monitoring and actions. Depending on these configuration settings, a variety of actions are generated when there is a change in FRU state.  
Use this command in RBridge subconfiguration mode to manage the system health monitoring of individual nodes in a cluster.

**Examples**

```
switch(config-rbridge-id-154)# system-monitor sfm threshold down-threshold 3 marginal-  
threshold 2  
switch(config-rbridge-id-154)# system-monitor cid-card alert state faultyinserted  
action email
```

**Related Commands** [rbridge-id](#), [show system monitor](#), [system-monitor-mail](#)



# system-monitor-mail

Configures Fabric Watch e-mail alerts on the switch.

**Syntax** **system-monitor-mail** { **fru** | **interface** | **relay** { *host\_ip* | *domain\_name* } | **security** | **sfp** } **enable** | *email-id* ]

**no system-monitor-mail**

**Command Default** The default source is disabled.

**Parameters** **fru**

Configures e-mail alerts for FRUs.

**interface**

Configures e-mail alerts for interfaces.

**relay**

Configures the relay host for e-mail to work in a non-DNS environment.

**host\_ip**

Specifies the IPv4 address of the mail server.

**domain\_name**

Specifies the domain that corresponds to the e-mail ID.

**security**

Configures e-mail alerts for security.

**sfp**

Configures e-mail alerts for SFPs.

**enable**

Enables or disables e-mail alerts for the above options.

**email-id**

Specifies the e-mail address to where the alert will be sent.

**Modes** Global configuration mode

**Usage Guidelines** For an e-mail alert to function correctly, add the IP addresses and host names to DNS in addition to configuring the domain name and name servers. Both relay parameters (the host IP address and the domain name) must be configured in a non-DNS environment. In a DNS environment, only the host IP address is required).

**Examples**

```
switch(config)# system-monitor-mail ?
Possible completions:
  fru      Configure FRU mail settings
  interface Configure interface mail settings
  relay    Configure relay ip mail settings
  security Configure security mail settings
  sfp     Configure sfp mail settings
switch(config)# system-monitor-mail fru enable

switch(config)# system-monitor-mail relay ?
Possible completions:
  <host-ip:IP address> <host-ip:string, min: 1 chars, max: 253 chars>
switch(config)# system-monitor-mail relay 1.2.3.4 ?

Possible completions:
  domain-name Domain name server
switch(config)# system-monitor-mail relay 1.2.3.4 domain-name ?

Possible completions:
  <LINE:0-64> Domain name[]
switch(config)# system-monitor-mail relay 1.2.3.4 domain-name abc.brocade.com

switch# show running-config system-monitor-mail relay
system-monitor-mail relay 1.2.3.4 domain-name abc.brocade.com
```

**To create a mapping:**

```
switch(config)# system-monitor-mail relay host-ip 1.2.3.4 domain-name abc.brocade.com
```

**To delete the mapping:**

```
switch(config)# no system-monitor-mail relay host-ip 1.2.3.4
```

**To change the domain name:**

```
switch(config)# system-monitor-mail relay host-ip 1.2.3.4 domain-name mail.brocade.com
```

**Related  
Commands**

[show system monitor](#), [system-monitor](#)

## system-name

Sets the global system name specific to LLDP.

**Syntax** `system-name name`

`no system-name`

**Command Default** The host name from the switch is used.

**Parameters** *name*

Specifies a system name for the LLDP. The string must be between 1 and 32 ASCII characters in length.

**Modes** Protocol LLDP configuration mode

**Usage Guidelines** Enter `no system-name` to delete the name.

**Examples** To specify a system name for the LLDP:

```
switch(conf-lldp)# system-name Brocade
```

**Related Commands** [system-description](#)

## table-map

Maps external entry attributes into the routing table, ensuring that those attributes are preserved after being redistributed into OSPF.

<b>Syntax</b>	<b>table-map</b> <i>string</i>
	<b>no table-map</b> <i>string</i>
<b>Command Default</b>	This option is disabled.
<b>Parameters</b>	<b>string</b> Specifies a route map to be whose attributes are to be preserved. Range is from 1 through 63 ASCII characters.
<b>Modes</b>	BGP address-family IPv4 unicast configuration mode BGP address-family IPv6 unicast configuration mode
<b>Usage Guidelines</b>	Use the <b>no</b> form of the command to remove the table map.

Use this command only to set the tag values. Normally, a route map is applied on routes (and therefore the routes are updated) before it is stored in the BGP routing table. Use the **table-map** command to begin the update before the routes are stored in the IP routing table.

Configurations made by this command apply to all peers.

Route maps that contain **set** statements change values in routes when the routes are accepted by the route map. For inbound route maps (route maps that filter routes received from neighbors), the routes are changed before they enter the BGP4 routing table. For tag values, if you do not want the value to change until a route enters the IP routing table, you can use a table map to change the value. A table map is a route map that you have associated with the IP routing table. The device applies the **set** statements for tag values in the table map to routes before adding them to the routing table. To configure a table map, you first configure the route map, then identify it as a table map. The table map does not require separate configuration. You can have only one table map.

---

### NOTE

Use table maps only for setting the tag value. Do not use table maps to set other attributes. To set other route attributes, use route maps or filters. To create a route map and identify it as a table map, enter commands such those shown in the first example below. These commands create a route map that uses an address filter. For routes that match the IP prefix list filter, the route map changes the tag value to 100 and is then considered as a table map. This route map is applied only to routes that the device places in the IP routing table. The route map is not applied to all routes. The first example below assumes that IP prefix list p11 has already been configured.

---

**Examples** The following illustrates the execution of the **table-map** command in the context discussed in Usage Guidelines:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# route-map TAG_IP permit 1
device(config-route-map/TAG_IP/permit/1)# match ip address prefix-list p11
device(config-route-map/TAG_IP/permit/1)# set tag 100
device(config-route-map/TAG_IP/permit/1)# exit
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# table-map TAG_IP
```

To remove the table map:

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# address-family ipv4 unicast
device(config-bgp-ipv4u)# no table-map TAG_IP
```

History	Release version	Command history
	5.0.0	This command was modified to add support for the IPv6 address family.

**Related  
Commands**    [route-map](#)

## tacacs-server

Configures a Terminal Access Controller Access-Control System plus (TACACS+) server.

**Syntax** **tacacs-server** {**host** *hostname* | **source-ip** [ *chassis-ip* | *mm-ip* ] } [ **port** *portnum* ] [ **protocol** { **chap** | **pap** } ] [ **key** *shared\_secret* ] [ **encryption-level** *value\_level* ] [ **timeout** *secs* ] [ **retries** *num* ]

**no tacacs-server** { **host** *hostname* | **source-ip** [ *chassis-ip* | *mm-ip* ] }

**Command Default** Refer to the Parameter section for specific defaults.

**Parameters** **host** *hostname*

Specifies the IP address or domain name of the TACACS+ server. IPv4 and IPv6 addresses are supported.

**source-ip** [*chassis-ip* | *mm-ip*]

Specifies the chassis IP address or MM IP address as the source IP address for TACACS+ authentication and accounting.

**port** *portnum*

Specifies the authentication port. Valid values range from 0 through 65535. The default is 49.

**protocol** { **chap** | **pap** }

Specifies the authentication protocol. Options include CHAP and PAP. The default is CHAP.

**key** *shared\_secret*

Specifies the text string that is used as the shared secret between the switch and the TACACS+ server to make the message exchange secure. The key must be between 8 and 40 characters in length. The default key is **sharedsecret**. The exclamation mark (!) is supported both in RADIUS and TACACS+ servers, and you can specify the password in either double quotes or the escape character (\), for example "**secret!key**" or **secret\!key**.

**encryption-level** *value\_level*

Designates the encryption level for the shared secret key operation. This operand supports JITC certification and compliance. The valid values are 0 and 7, with 0 being clear text and 7 being the most heavily encrypted. The default value is 7.

**timeout** *secs*

Specifies the time to wait for the TACACS+ server to respond. The default is 5 seconds.

**retries** *num*

Specifies the number of attempts allowed to connect to a TACACS+ server. The default is 5 attempts.

**Modes** Global configuration mode

**Usage Guidelines** If a TACACS+ server with the specified IP address or host name does not exist, it is added to the server list. If the TACACS+ server already exists, this command modifies the configuration. The **key** parameter does not support an empty string.

Executing the **no** form of the **tacacs-server** command attributes resets the specified attributes to their default values.

---

**NOTE**

Before downgrading to a Network OS version that does not support the **encryption-level** keyword, set the value of this keyword to **0**. Otherwise, the firmware download will throw an error that requests this value be set to **0**.

---

Before downgrading to a version that doesn't support **tacacs-server source-ip**, you must remove the source-ip configuration using **no tacacs-server source-ip**. Otherwise, the firmware download process throws an error requesting to reset the cipher.

**Examples** To configure an IPv4 TACACS+ server:

```
switch(config)# tacacs-server host 10.24.65.6 protocol chap retries 100
switch (config-tacacs-server-10.24.65.6)#
```

To modify an existing TACACS+ server configuration:

```
switch(config)# tacacs-server host 10.24.65.6
switch(config-tacacs-server-10.24.65.6)# key "changedsec"
```

To delete a TACACS+ server:

```
switch(config)# no tacacs-server host 10.24.65.6
switch(config)# exit
switch# show running-config tacacs-server host
switch# show running-config tacacs-server host 10.xx.xx.xxx
tacacs-server host 10.xx.xx.xxx key changedsec
```

To configure an IPv6 TACACS+ server:

```
switch(config)# tacacs-server host fec0:60:69bc:94:211:25ff:fec4:6010 protocol chap
switch(config-tacacs-server-fec0:60:69bc:94:211:25ff:fec4:6010)# key "mysecret"
```

**Related  
Commands**

[radius-server](#), [show running-config radius-server](#), [show running-config tacacs-server](#)

## tagged-ieee-bpdu-enabled

Activates IEEE BPDU packets.

**Syntax**    **tagged-ieee-bpdu-enabled**  
**no tagged-ieee-bpdu-enabled**

**Modes**    mode

**Usage Guidelines**    Enter **no tagged-ieee-bpdu-enabled** to disable this feature.  
This command should only be used on edge ports.

---

### ATTENTION

This command should be enabled when the interface is connected to a switch which sends tagged IEEE bpdu packets.

---



## tcp burstrate

Sets the threshold for the burst rate of TCP traffic, and defines the lockout time once that threshold is passed.

**Syntax** **tcp burstrate** *packet* **lockup** *seconds*

**no tcp burstrate**

**Command Default** This feature is disabled.

**Parameters** **packet**

The maximum number of packets allowed over five seconds. Range is from 1 through 100000.

**lockup seconds**

Sets the number of seconds to lock up the port. Range is from 1 through 3000.

**Modes** Global configuration mode

**Usage Guidelines** To protect against TCP SYN attacks, you can configure the Brocade device to drop TCP SYN packets when excessive numbers are encountered. You can set threshold values for TCP SYN packets that are targeted at the router itself or passing through an interface, and drop them when the thresholds are exceeded.

This command sets the threshold for the burstrate, and defines the lockout time once that threshold is passed.

# telnet

Establishes a Telnet session to a remote networking device.

**Syntax** `telnet { IP_address | hostname }`

`telnet interface port-num { interface | vrf vrf-name } { IP_address | hostname }`

`telnet interface <N> gigabitethernet { IP_address | hostname | vrf vrf-name }`

`telnet interface management { IP_address | hostname | vrf vrf-name }`

`telnet interface ve vlan-id hostname`

`telnet interface vrf vrf-name`

`telnet vrf vrf-name`

**Command Default** The default port is 23.

**Parameters** *IP\_address*

The server IP address in either IPv4 or IPv6 format.

*hostname*

The host name (a string between 1 and 63 ASCII characters in length).

**interface**

Specifies an interface.

**<*N*> gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace **<*N*>gigabitethernet** with the desired operand (for example, **ten**gigabitethernet specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**management**

Specifies a management interface.

**port-number *port***

Specifies the port number in the remote device to connect to. Range is from 0 through 65535. For the connection to succeed, a TCP server must be listening for client connections at the specified port.

**ve *vlan-id***

Range is from 1 through 4090 if Virtual Fabrics is disabled, and from 1 through 8191 if Virtual Fabrics is enabled.

**vrf *vrf-name***

Specifies a VRF instance. See the Usage Guidelines.

**Modes** Privileged EXEC mode

**Usage Guidelines**

---

### ATTENTION

Beginning with release 5.0.0, support is provided for the management VRF. The default VRF and other user-configured (nondefault) VRFs can no longer be used for router management.

---

To use the **telnet** command on the management VRF, use the **vrf** keyword and enter **mgmt-vrf** as follows. You must enter the name of the management VRF manually.

```
switch# telnet vrf mgmt-vrf
```

The following features are not supported:

- Display Telnet sessions
- Ability to terminate hung Telnet sessions

**Examples** To establish a Telnet session from a switch to a remote networking device:

```
switch# telnet 10.17.37.157
```

```
Trying 10.17.37.157...
Connected to 10.17.37.157.
Escape character is '^]'.
Network OS (sw0)
sw0 login:
```

**Related Commands** [show running-config telnet server](#), [show telnet server status](#), [ssh](#), [telnet server shutdown](#)

## telnet server shutdown

Disables Telnet service on the switch.

<b>Syntax</b>	<b>telnet server shutdown</b> <b>no telnet server shutdown</b>
<b>Modes</b>	Global configuration mode RBridge ID configuration mode
<b>Usage Guidelines</b>	Enter <b>no telnet server shutdown</b> to enable Telnet service. This command is not distributed across a cluster. The RBridge ID of the node should be used to configure service on individual nodes.
<b>Examples</b>	To shut down Telnet service on a switch:  <pre>switch(config)# rbridge-id 3 switch(config-rbridge-id-3)# telnet server shutdown</pre> To enable Telnet service on a switch:  <pre>switch(config)# rbridge-id 3 switch(config-rbridge-id-3)# no telnet server shutdown</pre>
<b>Related Commands</b>	<a href="#">show running-config telnet server</a> , <a href="#">show telnet server status</a>

# telnet server standby enable

Enables the Telnet services on the standby MM.

**Syntax** **telnet server standby enable**  
**no telnet server standby enable**

**Command Default** The Telnet services are disabled on the standby MM.

**Modes** RBridge ID configuration mode

**Usage Guidelines** The **no telnet server standby enable** command disables the Telnet services on the standby MM. It is mandatory to specify the default-config when converting from Logical Chassis mode to Fabric Cluster mode, or the other way around. After conversion, the SSH and Telnet services on the standby MMs are disabled. This command enables the Telnet services on the standby MM.

**Examples** Typical command output:

```
switch(config-rbridge-id-1)# do show running-config rbridge-id | include standby
% No entries found.
switch(config-rbridge-id-1)# telnet server standby enable
switch(config-rbridge-id-1)# do show running-config rbridge-id | include standby
telnet server standby enable
switch(config-rbridge-id-1)#
```

Typical command output:

```
switch(config-rbridge-id-1)# no telnet server standby enable
switch(config-rbridge-id-1)# do show running-config rbridge-id | include standby
% No entries found.
switch(config-rbridge-id-1)#
```

**History**

Release version	Command history
5.0.1a	This command was introduced.

**Related Commands** [ssh server standby enable](#)

# terminal

Sets terminal parameters for the current session.

**Syntax** `terminal [ length number_of_lines ] [ monitor ] [ timeout value ]`

`no terminal [ length ] [ monitor ] [ timeout ]`

**Command Default** The default for **length** is 24.

**Parameters** **length** *number\_of\_lines*

Specifies the number of lines to be displayed. Valid values range from 1 through 512. Specify 0 for infinite length.

**monitor**

Enables terminal monitoring.

**timeout** *value*

Specifies the timeout value in minutes. Valid values range from 0 through 136. Specify 0 to disable timeout.

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is supported only on the local switch.

This command overrides the timeout configuration set by the **line vty exec-timeout** command, but only for the duration of the current session. When the current session ends, the configured values apply for any subsequent sessions.

This command is not available on the standby management module.

Enter **no terminal** (optionally with a specific parameter) to restore the current terminal settings to default.

**Examples** To set the display length to 30 lines:

```
switch# terminal length 30
```

To set the timeout length to 60 minutes:

```
switch# terminal timeout 60
```

To restore all settings to default values:

```
switch# no terminal
```

To restore only the timeout setting to its default values:

```
switch# no terminal timeout
```

**Related  
Commands**

[line vty exec-timeout](#)

# threshold-monitor cpu

Configures monitoring of CPU usage of the system and alerts the user when configured thresholds are exceeded.

**Syntax** `threshold-monitor cpu { [ actions [ none | raslog [ { limit limit_when_reached | poll polling_interval | retry number_of_retries ] ] ] }`

**no threshold-monitor cpu**

**Parameters** **actions**

Specifies the action to be taken when a threshold is exceeded.

**none**

No action is taken.

**raslog**

Specifies RASLog messaging.

**limit**

Specifies the baseline CPU usage limit as a percentage of available resources.

***limit\_when\_reached***

When the limit set by this parameter is exceeded, a RASLog WARNING message is sent. When the usage returns below the limit, a RASLog INFO message is sent. Valid values range from 0 through 80 percent. The default is 70 percent.

**poll**

Specifies the polling interval in seconds.

***polling\_interval***

The range is from 0 through 3600. The default is 120

**retry**

Specifies the number of polling retries before desired action is taken.

***number\_of\_retries***

Range is from 1 through 100. The default is 3.

**Modes** RBridge ID configuration mode

**Usage Guidelines** This command sends a RASLog WARNING message when configured thresholds are exceeded.

**Examples**

```
switch(config-rbridge-id-154)# threshold-monitor cpu actions rasloglimit 50 poll110
```

**Related Commands** [rbridge-id](#)

## threshold-monitor interface

Configures monitoring of port statistics on all external gigabit Ethernet interfaces: 1 GbE, 10 GbE, and 40 GbE.

<b>Syntax</b>	<pre>threshold-monitor interface { [ apply <i>policy_name</i>   pause   policy <i>policy_name</i> ] typeEthernet area [ CRCAAlignErrors [ alert [ above [ highthresh-action [ [ all   lowthresh-action ]   email   fence   none   raslog ]   lowthresh-action [ all   email none   raslog ]   below [ highthresh-action [ all   email   fence   none raslog ]   lowthresh-action [ all   email   none   raslog ] ]   threshold [ buffer   high-threshold   low-threshold   timebase [ day   hour   minute   none ] ] ] IFG [ alert [ above [ highthresh-action [ [ all   lowthresh-action ]   email   fence   none   raslog ]   lowthresh-action [ all   email none   raslog ]   below [ highthresh-action [ all   email   fence   none raslog ]   lowthresh- action [ all   email   none   raslog ] ]   threshold [ buffer   high-threshold   low-threshold   timebase [ day   hour   minute   none ] ] ] MissingTerminationCharacter [ alert [ above [ highthresh-action [ [ all   lowthresh-action ]   email   fence   none   raslog ]   lowthresh-action [ all   email none   raslog ]   below [ highthresh-action [ all   email   fence   none raslog ]   lowthresh-action [ all   email   none   raslog ] ]   threshold [ buffer   high-threshold   low-threshold   timebase [ day   hour   minute   none ] ] ] SymbolErrors [ alert [ above [ highthresh-action [ [ all   lowthresh-action ]   email   fence   none   raslog ]   lowthresh-action [ all   email none   raslog ]   below [ highthresh- action [ all   email   fence   none raslog ]   lowthresh-action [ all   email   none   raslog ] ]   threshold [ buffer   high-threshold   low-threshold   timebase [ day   hour   minute   none ] ] ] ] }</pre>
	<b>no threshold-monitor interface</b>
<b>Parameters</b>	<p><b>apply</b></p> <p>Applies a custom policy that has been created by the policy operand.</p> <p><b>pause</b></p> <p>Pause monitoring.</p> <p><b>policy</b></p> <p>Specifies a policy name for monitoring by means of custom settings, rather than default settings. A policy name is required before additional configurations can be made. This operation is not supported from a secondary node.</p> <p><b>WORD</b></p> <p>Specifies the name of a custom policy configuration that can be saved and applied by means of the <b>apply</b> operand.</p> <p><b>type Ethernet</b></p> <p>Enables gigabit Ethernet interface monitoring.</p> <p><b>area</b></p> <p>Enables policy configuration.</p> <p><b>CRCAAlignErrors</b></p> <p>The total number of frames received with either a bad Frame Check Sequence (FCS) or an alignment error.</p> <p><b>IFG</b></p> <p>The minimum-length interframe gap (IFG) between successive frames is violated. The typical minimum IFG is 12 bytes.</p> <p><b>MissingTerminationCharacter</b></p> <p>The number of frames that terminate in anything other than the Terminate character.</p> <p><b>SymbolErrors</b></p> <p>The number of words received as an unknown (invalid) symbol. Large symbol errors indicate a bad device, cable, or hardware.</p> <p><b>alert</b></p>



<b>above</b>	Specifies whether an alert is sent when a threshold value is either above or below a threshold trigger.
<b>below</b>	Enables setting a value for <b>highthresh-action</b> , which specifies the action to be taken when a high threshold is exceeded.
<b>all</b>	Enables setting a value for <b>highthresh-action</b> and <b>lowthresh-action</b> , which specifies the action to be taken when a low threshold is exceeded.
<b>email</b>	Specifies that email and RASLog messaging are used, and that Port Fencing is applied in the case of highthresh-action only.
<b>fence</b>	Specifies that an email message is sent.
<b>none</b>	Specifies that Port Fencing is applied, which disables the port until further action is taken. This is available only for <b>highthresh-action</b> .
<b>raslog</b>	Specifies that no alert notification or other action (Port Fencing) is taken.
<b>limit</b>	Specifies RASLog messaging.
<b>poll</b>	Specifies the percent of threshold usage, from 0 through 80. The default is 75.
<b>retry</b>	Specifies the polling interval in seconds, from 0 through 3600. The default is 120.
<b>threshold</b>	Specifies the number of polling retries before desired action is taken, from 1 through 100. The default is 3.
<b>buffer</b>	Specifies the values for high, low, buffer, and timebase thresholds. These values are used to trigger different alerts and Port Fencing.
<b>high-threshold</b>	An integer value.
<b>low-threshold</b>	An integer value.
<b>timebase</b>	An integer value.
<b>day</b>	Calculates differences between current and previous data taken over a variety of intervals, for comparison against the preset threshold boundary.
<b>hour</b>	Calculates the difference between a current data value and that value a day ago.
<b>minute</b>	Calculates the difference between a current data value and that value an hour ago.
<b>none</b>	Calculates the difference between a current data value and that value a minute ago.
	Compares a data value to a threshold boundary level.

**Modes** RBridge ID configuration mode

**Usage Guidelines** When any monitored error crosses the configured high or low threshold, an alert is generated and a problem port can be taken out of service. Use this command to monitor port statistics on all external gigabit Ethernet interfaces and generate a variety of actions, from alerts through Port Fencing.

**Examples**

```
switch(config-rbridge-id-154)# threshold-monitor interface policy mypolicy type  
Ethernet area IFG alert above highthresh-action fence raslog lowthresh-action email  
raslog
```

**Related  
Commands** [rbridge-id](#)

# threshold-monitor memory

Configures monitoring of the memory usage of the system and alerts the user when configured thresholds are exceeded.

**Syntax** **threshold-monitor memory** { [ **actions** [ **none** | **raslog** { **high-limit** *percent* | **limit** *percent* | **low-limit** *percent* | **poll** *polling\_interval* | **retry** *number\_of\_retries* } | **high-limit** *percent* | **limit** *percent* | **low-limit** *percent* | **poll** *polling\_interval* | **retry** *number\_of\_retries* } ] }

**no threshold-monitor memory**

**Parameters** **actions**

**none** Specifies the action to be taken when a threshold is exceeded.

**raslog**

No action is taken. This is the default.

**high-limit**

Specifies RASLog messaging.

**limit**

Specifies an upper limit for memory usage as a percentage of available memory.

**percent**

This value must be greater than the value set by **limit** . When memory usage exceeds this limit, a RASLog CRITICAL message is sent. Values range from 0 through 80 percent. The default is 70 percent.

**low-limit**

Specifies the baseline memory usage limit as a percentage of available resources.

**percent**

When this value is exceeded, a RASLog WARNING message is sent. When the usage returns below the value set by **limit** , a RASLog INFO message is sent. Values range from 0 through 80 percent. The default is 60 percent.

**poll**

Specifies a lower limit for memory usage as percentage of available memory.

**percent**

This value must be smaller than the value set by **limit** . When memory usage exceeds or falls below this limit, a RASLog INFO message is sent. The default is 40 percent.

**retry**

Specifies the polling interval in seconds.

**polling\_interval**

The range is from 0 through 3600. The default is 120

**number\_of\_retries**

Specifies the number of polling retries before desired action is taken.

**number\_of\_retries**

Range is from 1 through 100. The default is 3.

**Modes** RBridge ID configuration mode

**Examples**

```
switch(config-rbridge-id-154)# threshold-monitor memory actions none high-limit 80  
low-limit 50 limit 70 retry 2 poll 30
```

**Related  
Commands**    [rbridge-id](#)

# threshold-monitor security

Configures monitoring of security parameters, such as Telnet and login violations.

**Syntax** `threshold-monitor security { [ apply policy_name | pause | policy policy_name ] area [ login-violation [ alert [ above [ highthresh-action [ [ all | lowthresh-action ] | email | fence | none | raslog ] ] | lowthresh-action [ all | email | none | raslog ] ] | below [ highthresh-action [ all | email | fence | none | raslog ] ] | lowthresh-action [ all | email | none | raslog ] ] ] | threshold [ buffer | high-threshold | low-threshold | timebase [ day | hour | minute | none ] ] ] | telnet-violation [ alert [ above [ highthresh-action [ [ all | lowthresh-action ] | email | fence | none | raslog ] ] | lowthresh-action [ all | email | none | raslog ] ] | below [ highthresh-action [ all | email | fence | none | raslog ] ] | lowthresh-action [ all | email | none | raslog ] ] ] | threshold [ buffer | high-threshold | low-threshold | timebase [ day | hour | minute | none ] ] ] ] }`

**no threshold-monitor security**

**Command Default** For other security monitoring defaults, see the "System Monitor" chapter in the *Network OS Security Configuration Guide*.

**Parameters** **apply**

Applies a custom policy that has been created by the **policy** operand.

***policy\_name***

Name of a custom policy configuration created by the **policy** operand.

**pause**

Pauses monitoring.

**policy**

Specifies a policy name for monitoring by means of custom settings, rather than default settings. A policy name is required before additional configurations can be made. This operation is not supported from a secondary node.

***policy\_name***

Name of a custom policy configuration that can be saved and applied by means of the **apply** operand.

**area**

Enables policy configuration.

**login-violation**

Enables monitoring of login violations.

**alert**

Specifies whether an alert is sent when a threshold value is either above or below a threshold trigger.

**above**

Enables setting a value for **highthresh-action**, which specifies the action to be taken when a high threshold is exceeded.

**below**

Enables setting a value for **highthresh-action** and **lowthresh-action**, which specifies the action to be taken when a low threshold is exceeded.

**all**

Specifies that email and RASLog messaging are used, and that Port Fencing is applied in the case of **highthresh-action** only.

**all**

Specifies that email and RASLog messaging are used.

**email**

<b>fence</b>	Specifies that an email message is sent.
<b>none</b>	Specifies that Port Fencing is applied, which disables the port until further action is taken.
<b>raslog</b>	No alert is sent
<b>limit</b>	Specifies RASLog messaging.
<b>poll</b>	Specifies the percent of threshold usage, from 0 through 80. The default is 75.
<b>retry</b>	Specifies the polling interval in seconds, from 0 through 3600. The default is 120.
<b>threshold</b>	Specifies the number of polling retries before desired action is taken, from 1 through 100. The default is 3.
<b>buffer</b>	Specifies the values for high, low, buffer, and timebase thresholds. These values are used to trigger different alerts and Port Fencing.
<b>high-threshold</b>	An integer value.
<b>low-threshold</b>	An integer value.
<b>timebase</b>	An integer value.
<b>day</b>	Calculates differences between current and previous data taken over a variety of intervals, for comparison against the preset threshold boundary.
<b>hour</b>	Calculates the difference between a current data value and that value a day ago.
<b>minute</b>	Calculates the difference between a current data value and that value an hour ago.
<b>none</b>	Calculates the difference between a current data value and that value a minute ago.
<b>telnet-violation</b>	Compares a data value to a threshold boundary level.
	Enables monitoring of Telnet violations. Operands are as for <b>login-violation</b> .

**Modes** RBridge ID configuration mode

**Examples** Here are examples of typical commands:

```
switch(config-rbridge-id-154)# threshold-monitor security policy mypolicy area telnet-violation threshold high-threshold 10 buffer 3

switch(config-rbridge-id-154)# threshold-monitor security policy mypolicy area login-violation timebase hour
```

**Related  
Commands** [rbridge-id](#)

## threshold-monitor sfp

Configures monitoring of SFP parameters.

**Syntax** `threshold-monitor sfp { [ apply policy_name | pause | policy policy_name ] type SFP_type area parameters alert [ above [ highthresh-action [ [ all | lowthresh-action ] ] | email | none | raslog ] | lowthresh-action [ all | email | none | raslog ] ] | below [ highthresh-action [ all | email | none | raslog ] | lowthresh-action [ all | email | none | raslog ] ] ] | threshold [ buffer | high-threshold | low-threshold ] | timebase [ day | hour | minute | none ] ] }`

**no threshold-monitor sfp**

**Command Default** For the default parameter values of the SFP types, refer to the chapter "System Monitor" in *Network OS Administrator's Guide* .

### Parameters

#### **apply**

Applies a custom policy that has been created by the **policy** operand.

#### *policy\_name*

Name of a custom policy configuration created by the **policy** operand.

#### **pause**

Pause monitoring.

#### **policy**

Specifies a policy name for monitoring by means of custom settings, rather than default settings. A policy name is required before additional configurations can be made. This operation is not supported from a secondary node.

#### *policy\_name*

Name of a custom policy configuration that can be saved and applied by means of the **apply** operand.

#### **type**

Specifies the SFP type. Possible completions are as follows:

#### **1GLR**

— SFP Type 1GLR

#### **1GSR**

— SFP Type 1GSR

#### **10GLR**

— SFP Type 10GLR

#### **10GSR**

— SFP Type 10GSR

#### **10GUSR**

— SFP Type 10GUSR

#### **100GSR**

— SFP Type 100GSR

#### **QSFP**

— SFP type QSFP

#### **area**

Specifies one of the following SFP parameters to be monitored. See Defaults, below.

#### **Current**

Measures the current supplied to the SFP transceiver.

#### **RXP**



<b>TXP</b>	Measures the incoming laser power, in microWatts ( $\mu$ W).
<b>Temperature</b>	Measures the outgoing laser power, in $\mu$ W).
<b>Voltage</b>	Measures the temperature of the SFP, in degrees Celsius.
<b>alert</b>	Measures the voltage supplied to the SFP.
	Specifies whether an alert is sent when a threshold value is either above or below a threshold trigger.
<b>above</b>	Enables setting a value for <b>highthresh-action</b> , which specifies the action to be taken when a high threshold is exceeded.
<b>below</b>	Enables setting a value for <b>highthresh-action</b> and <b>lowthresh-action</b> , which specifies the action to be taken when a low threshold is exceeded.
<b>all</b>	Specifies that email and RASLog messaging are used, and that Port Fencing is applied in the case of <b>highthresh-action</b> only.
<b>all</b>	Specifies that email and RASLog messaging are used.
<b>email</b>	Specifies that an email message is sent.
<b>none</b>	Specifies that no alert is sent.
<b>raslog</b>	Specifies RASLog messaging.
<b>limit</b>	Specifies the percent of threshold usage, from 0 through 80. The default is 75.
<b>poll</b>	Specifies the polling interval in seconds, from 0 through 3600. The default is 120.
<b>retry</b>	Specifies the number of polling retries before desired action is taken, from 1 through 100. The default is 3.
<b>threshold</b>	Specifies the values for high, low, buffer, and timebase thresholds. These values are used to trigger different alerts and Port Fencing.
<b>buffer</b>	An integer value.
<b>high-threshold</b>	An integer value.
<b>low-threshold</b>	An integer value.
<b>timebase</b>	Calculates differences between current and previous data taken over a variety of intervals, for comparison against the preset threshold boundary.
<b>day</b>	

<b>hour</b>	Calculates the difference between a current data value and that value a day ago.
<b>minute</b>	Calculates the difference between a current data value and that value an hour ago.
<b>none</b>	Calculates the difference between a current data value and that value a minute ago.
	Compares a data value to a threshold boundary level.

**Modes** RBridge ID configuration mode

**Examples** A typical command might look like this:

```
switch(config)# threshold-monitor sfp custom type QSFP area rxp threshold high-  
threshold 2000 low-threshold 1000
```

**Related  
Commands** [rbridge-id](#)

## timeout fnm

For Access Gateway mode, this sets and displays the fabric name monitoring time-out value (TOV) for Modified Managed Fabric Name Monitoring (M-MFNM) mode.

**Command Default** The default is 120 seconds

**Parameters** *value*  
A value from 30 to 120 seconds.

**Modes** Access Gateway configuration mode

**Usage Guidelines** You must be in Access Gateway (AG) configuration mode to use this command. This command sets the time out value (TOV) for M-MFNM queries of the fabric name to detect whether all N\_Ports in a port group are physically connected to the same physical or virtual fabric. M-MFNM is a Port Grouping mode that prevents connections from the AG VDX switch to multiple SANs. Entering the **timeout fnm** command without a value displays the current TOV value.

**Examples** Set the fabric name monitoring TOV value.

```
sw0(config-rbridge-id-3-ag)# timeout fnm 60
```

Displays the fabric name monitoring TOV value.

```
sw0(config-rbridge-id-3-ag)# timeout fnm
```

## timers

Configures Link State Advertisement (LSA) pacing and Shortest Path First (SPF) throttle timers.

<b>Syntax</b>	<b>timers { lsa-group-pacing <i>interval</i>   throttle spf <i>start hold max</i> }</b>
<b>Command Default</b>	See Operands for specific defaults.
<b>Parameters</b>	<p><b>lsa-group-pacing <i>interval</i></b> Specifies the interval at which OSPF LSAs are collected into a group and refreshed, check-summed, or aged by the OSPF process. Valid values range from 10 to 1800 seconds. The default is 240 seconds.</p> <p><b>throttle spf</b> Specifies start, hold and maximum wait intervals for throttling SPF calculations for performance. The values you enter are in milliseconds.</p> <p><b>start</b> Initial SPF calculation delay. Valid values range from 0 to 60000 milliseconds. The default is 0 milliseconds.</p> <p><b>hold</b> Minimum hold time between two consecutive SPF calculations. Valid values range from 0 to 60000 milliseconds. The default is 5000 milliseconds.</p> <p><b>max</b> Maximum wait time between two consecutive SPF calculations. Valid values range from 0 to 60000 milliseconds. The default is 10000 milliseconds.</p>
<b>Modes</b>	OSPF VRF router configuration mode
<b>Usage Guidelines</b>	<p>The device paces LSA refreshes by delaying the refreshes for a specified time interval instead of performing a refresh each time an individual LSA refresh timer expires. The accumulated LSAs constitute a group, which the device refreshes and sends out together in one or more packets.</p> <p>The LSA pacing interval is inversely proportional to the number of LSAs the device is refreshing and aging. For example, if you have a large database of 10,000 LSAs, decreasing the pacing interval enhances performance. If you have a small database of about 100 LSAs, increasing the pacing interval to 10 to 20 minutes may enhance performance.</p> <p>Enter the <b>no timers lsa-group-pacing</b> to restore the pacing interval to its default value.</p> <p>Enter <b>no timers throttle spf</b> to set the SPF timers back to their defaults.</p>
<b>Examples</b>	<p>To set the LSA group pacing interval to 30 seconds:</p> <pre>switch# configure switch(config)# rbridge-id 5 switch(config-rbridge-id-5)# router ospf switch(config-router-ospf-vrf-default-vrf)# timers lsa-group-pacing 30</pre> <p>To change the SPF delay to 10000 milliseconds, the hold time to 15000 milliseconds, and the maximum wait time to 30000 milliseconds:</p> <pre>switch# configure switch(config)# rbridge-id 5 switch(config-rbridge-id-5)# router ospf switch(config-router-ospf-vrf-default-vrf)# timers throttle spf 10000 15000 30000</pre>

## timers (BGP)

Adjusts the interval at which BGP KEEPALIVE and HOLDTIME messages are sent.

**Syntax** `timers { keep-alive keepalive_interval hold-time holdtime_interval }`

**no timers**

**Command Default** See Parameters.

**Parameters** **keep-alive**

Sets the interval for KEEPALIVE messages.

***keepalive\_interval***

The KEEPALIVE interval in seconds. Range is from 0 through 65535. Default is 60.

**hold-time**

Sets the interval for HOLDTIME messages.

***holdtime\_interval***

The HOLDTIME interval in seconds. Range is from 0 through 65535. Default is 180.

**Modes** BGP configuration mode

**Usage Guidelines** The KEEPALIVE and HOLDTIME message interval is overwritten when the **fast-external-failover** command takes effect on a down link to a peer.

You must enter a value for **keep-alive** before you can enter a value for **hold-time**. Both values must be entered.

Use the **no timers** command to clear the timers.

**Examples**

```
device# configure terminal
device(config)# rbridge-id 10
device(config-rbridge-id-10)# router bgp
device(config-bgp-router)# timers keep-alive 120 hold-time 360
```

**Related Commands** [fast-external-fallover](#)

## timers (OSPFv3)

Configures Link State Advertisement (LSA) pacing and Shortest Path First (SPF) timers.

<b>Syntax</b>	<b>timers { lsa-group-pacing <i>interval</i>   spf start hold }</b>				
<b>Command Default</b>	Enabled. Refer to the Parameters section for specific defaults.				
<b>Parameters</b>	<p><b>lsa-group-pacing <i>interval</i></b> Specifies the interval at which OSPFv3 LSAs are collected into a group and refreshed, check-summed, or aged by the OSPFv3 process. Valid values range from 10 to 1800 seconds. The default is 240 seconds.</p> <p><b>spf</b> Specifies start and hold intervals for SPF calculations for performance. The values you enter are in milliseconds.</p> <p><b>start</b> Initial SPF calculation delay. Valid values range from 0 to 65535 seconds. The default is 5 seconds.</p> <p><b>hold</b> Minimum hold time between two consecutive SPF calculations. Valid values range from 0 to 65535 seconds. The default is 10 milliseconds.</p>				
<b>Modes</b>	OSPFv3 VRF router configuration mode				
<b>Usage Guidelines</b>	<p>The device paces LSA refreshes by delaying the refreshes for a specified time interval instead of performing a refresh each time an individual LSA refresh timer expires. The accumulated LSAs constitute a group, which the device refreshes and sends out together in one or more packets.</p> <p>The LSA pacing interval is inversely proportional to the number of LSAs the device is refreshing and aging. For example, if you have a large database of 10,000 LSAs, decreasing the pacing interval enhances performance. If you have a small database of about 100 LSAs, increasing the pacing interval to 10 to 20 minutes may enhance performance.</p> <p>Enter the <b>no timers lsa-group-pacing</b> to restore the pacing interval to its default value.</p> <p>Enter <b>no timers spf</b> to set the SPF timers back to their defaults.</p>				
<b>Examples</b>	<p>To set the LSA group pacing interval to 30 seconds:</p> <pre>device# configure terminal device(config)# rbridge-id 122 device(config-rbridge-id-122)# ipv6 router ospf device(config-ipv6-router-ospf-vrf-default-vrf)# timers lsa-group-pacing 30</pre>				
<b>History</b>	<table border="1"> <thead> <tr> <th>Release version</th> <th>Command history</th> </tr> </thead> <tbody> <tr> <td>5.0.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release version	Command history	5.0.0	This command was introduced.
Release version	Command history				
5.0.0	This command was introduced.				

# tracert

Traces the network path of packets as they are forwarded to a destination address.

**Syntax** `tracert IPv4_address |hostname [ src-addr src-addr ] | [ ipv6 dest-ipv6-addr ] | host-name [ maxttl value ] [ minttl value ] [ timeout seconds ] [ vrf vrf-name ]`

<b>Parameters</b>	<b>IPv4_address</b>	Specifies the IPv4 address of the destination device.
	<b>hostname</b>	Specifies the hostname of the destination device.
	<b>ipv6 dest-ipv6-addr</b>	Specifies the IPv6 address of the destination device. This parameter is valid only with the <b>ping</b> command.
	<b>maxttl value</b>	Maximum Time To Live value in a number of hops.
	<b>minttl value</b>	Minimum Time To Live value in a number of hops.
	<b>src-addr address</b>	Specifies the IPv4 or IPv6 address of the source device.
	<b>timeout seconds</b>	The tracert timeout value.
	<b>vrf vrf-name</b>	Name of the VRF. If no VRF is specified, the default-vrf is used. See the Usage Guidelines.

**Modes** Privileged EXEC mode

## Usage Guidelines

---

### ATTENTION

Beginning with release 5.0.0, support is provided for the management VRF. The default VRF and other user-configured (nondefault) VRFs can no longer be used for router management.

---

To use the **tracert** command on the management VRF, enter **mgmt-vrf** as follows. You must enter the name of the management VRF manually.

```
switch# tracert 1.1.1.1 vrf mgmt-vrf
```

**Examples** To execute an IPv4 tracert.

```
switch# tracert 172.16.4.80

tracert to 172.16.4.80 (172.16.4.80), 64 hops max
 1  10.24.80.1 (10.24.80.1) 0.588ms 0.139ms 0.527ms
 2  10.31.20.61 (10.31.20.61) 0.550ms 0.254ms 0.234ms
 3  10.16.200.113 (10.16.200.113) 0.408ms 0.285ms 0.282ms
 4  10.110.111.202 (10.110.111.202) 5.649ms 0.283ms 0.288ms
 5  10.130.111.38 (10.130.111.38) 1.108ms 0.712ms 0.704ms
 6  10.192.0.42 (10.192.0.42) 37.053ms 32.985ms 41.744ms
 7  172.16.56.10 (172.16.56.10) 33.110ms 33.349ms 33.114ms
 8  172.16.4.9 (172.16.4.9) 34.096ms 33.023ms 33.122ms
 9  172.16.4.80 (172.16.4.80) 76.702ms 83.293ms 79.570ms
```

To execute an IPv6 traceroute, with minimum and maximum TTL values.

```
switch# traceroute ipv6 fec0:60:69bc:92:218:8bff:fe40:1470 maxttl 128 minttl 30 src-  
addr fec0:60:69bc:92:205:33ff:fe9e:3f20 timeout 3
```

```
traceroute to fec0:60:69bc:92:218:8bff:fe40:1470 (fec0:60:69bc:  
92:218:8bff:fe40:1470), 128 hops max, 80 byte packets  
30 fec0:60:69bc:92:218:8bff:fe40:1470 (fec0:60:69bc:92:218:8bff:fe40:1470) 2.145  
ms 2.118 ms 2.085 ms
```

**Related** [ping](#)  
**Commands**



# track

Specifies a VRRP interface to track.

**Syntax** **track** { <N>**gigabitethernet** *rbridge-id/slot/port* | **port-channel** *number* | } [ **priority range** ]  
**no track** { <N>**gigabitethernet** *rbridge-id/slot/port* | **port-channel** *number* | } [ **priority range** ]

**Command Default** Priority range is 2.

**Parameters** <N>**gigabitethernet**

Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**

Specifies an RBridge ID.

**slot**

Specifies a valid slot number.

**port**

Specifies a valid port number.

**port-channel number**

Specifies the port-channel number. Valid values range from 1 through 6144.

**priority range**

The track priority is a number from 1 through 254, and is used when the tracked interface up or down event is detected. For VRRP, if the tracked interface becomes disabled, the current router priority is reduced *to* the track-port priority, (For VRRP only, interface tracking does not have any effect on an owner router; the owner priority can not be changed from 255.) For VRRP-E, if the tracked interface becomes disabled, the current router priority is reduced *by* the track-port priority.

**Modes** Virtual-router-group configuration mode

**Usage Guidelines** This command can be used for VRRP or VRRP-E.

For VRRP, the tracked interface can be any 10-gigabit Ethernet, 40-gigabit Ethernet, 1-gigabit Ethernet, or port-channel interface other than the one on which this command is issued.

The maximum number of interfaces you can track per virtual router is 16.

Enter **no track** with the specified interface to remove the tracked port configuration.

**Examples** To set the track port to 21/2/4 and the track priority to 60:

```
switch(config)# rbridge-id 21
switch(config-rbridge-id-21)# protocol vrrp
switch(config-rbridge-id-21)# int te 21/1/6
switch(conf-if-te-21/1/6)# vrrp-group 1
switch(config-vrrp-group-1)# track tengigabitethernet 21/2/4 priority 60
```

**Related Commands** [vrrp-group](#)

## track (Fabric-Virtual-Gateway)

Tracks an interface, network, or next hop.

**Syntax**

```

track interface {<N> gigabitethernet rbridge-id/slot/port | port-channel number } priority range
no track interface {<N> gigabitethernet rbridge-id/slot/port | port-channel number } priority range
track network A.B.C.D/mask priority range
no track network A.B.C.D/mask
track next-hop ip-address priority range
no track next-hop ip-address

```

**Command Default** None

**Parameters**

**interface**  
Interface type.

**network**  
Network address

**next-hop**  
Next hop IP address

**<N>gigabitethernet**  
Represents a valid, physical Ethernet subtype for all available Ethernet speeds. Enter ? to see which interface subtypes are available. Replace <N>**gigabitethernet** with the desired operand (for example, **tengigabitethernet** specifies a 10-Gb Ethernet port). The use of **gigabitethernet** without a speed value specifies a 1-Gb Ethernet port.

**rbridge-id**  
Specifies an RBridge ID.

**slot**  
Specifies a valid slot number.

**port**  
Specifies a valid port number.

**port-channel number**  
Specifies the port-channel number. Valid values range from 1 through 6144.

**priority range**  
The track priority range is from 1 through 254.

**A.B.C.D/mask**  
Network address in A.B.C.D/mask format.

**ip-address**  
IP address.

**Modes** Fabric-virtual-gateway in an RBridge VE interface IPv4 or IPv6 configuration mode

**Usage Guidelines** Enter the **no** form of the command with the specified interface to remove the tracked port configuration.

**Examples** The following example shows how to track a fortygigabitethernet interface with a priority of 34.

```
sw0(config)# rbridge-id 55
sw0(config-rbridge-id-55)# interface ve 1
sw0(config-Ve-1)# ip fabric-virtual-gateway
sw0(config-ip-fabric-virtual-gw)# track interface fortygigabitethernet 55/0/51
priority 34
```

The following example shows how to track a network with a priority of 28.

```
sw0(config)# rbridge-id 58
sw0(config-rbridge-id-58)# interface ve 1
sw0(config-Ve-1)# ipv6 fabric-virtual-gateway
sw0(config-ipv6-fabric-virtual-gw)# track network 1::1/22 priority 28
```

#### History

Release version	Command history
5.0.1	This command was introduced.

## transmit-holdcount

Configures the maximum number of Bridge Protocol Data Units (BPDUs) transmitted per second for the Multiple Spanning Tree Protocol (MSTP), Rapid Spanning Tree Protocol (RSTP), and R-PVST+.

**Syntax** `transmit-holdcount number`

`no transmit-holdcount`

**Command Default** 6 units

**Parameters** *number*

Specifies the number of BPDUs than can be sent before pausing for 1 second. Valid unit values range from 1 through 10.

**Modes** Protocol Spanning Tree MSTP configuration mode

**Usage Guidelines** Brocade Network OS supports PVST+ and R-PVST+ only. The PVST and R-PVST protocols are proprietary to Cisco and are not supported.

Enter **no transmit-holdcount** to return to the default setting.

**Examples** To change the number of BPDUs transmitted to 3 units:

```
switch(conf-mstp)# transmit-holdcount 3
```

**Related Commands** [show spanning-tree mst detail](#)

# transport-service

In a Virtual Fabrics context, associates a service VF with a trunk port interface as a transport VF.

**Syntax** **transport-service** *tsid*

**no transport-service** *tsid*

**Command Default** This feature is disabled by default.

**Parameters** *tsid*

The transport LAN service ID. Range is from 1 through 1000.

**Modes** Interface subtype configuration mode

**Usage Guidelines** In a Virtual Fabrics context, use this command to associate a service VF (VLAN ID > 4095, through 8191) to a trunk port interface as a transport VF.

This command does not apply to standard (802.1Q) VLANs (VLAN IDs from 1 through 4095).

This command is not supported when issued from a secondary node.

Enter **no transport-service** *tsid* to remove the service VF from the trunk port interface as a transport VF.

**Examples** Configure a classified VLAN and assign it to transport VF instance 10:

```
switch(config)# interface vlan 5000
switch(config-vlan-5000)# transport-service 10
```

**Related Commands** [interface vlan, vcs virtual-fabric enable](#)

# trunk-enable

Enables port trunking on a Fibre Channel port.

<b>Syntax</b>	<b>trunk-enable</b>  <b>no trunk-enable</b>
<b>Modes</b>	Interface Fibre Channel configuration mode
<b>Usage Guidelines</b>	<p>This command can be used only on Network OS platforms with Fibre Channel ports (Brocade VDX 6740 and VDX 2740 switches), in Brocade VCS Fabric mode.</p> <p>A long-distance link can also be configured to be part of a trunk group.</p> <p>While using R_RDY mode flow control, an E_Port cannot form trunk groups of long distance links even if trunking is enabled.</p> <p>To disable trunking on a Fibre Channel port, enter <b>no trunk-enable</b>.</p>
<b>Examples</b>	<p>This example enables trunking mode on a Fibre Channel port:</p> <pre>switch(config)# interface FibreChannel 7/0/2 switch(conf-FibreChannel-7/0/2)# trunk-enable</pre> <p>This example disables trunking mode on a Fibre Channel port:</p> <pre>switch (config)# interface FibreChannel 7/0/2 switch(conf-FibreChannel-7/0/2)# no trunk-enable</pre>
<b>Related Commands</b>	<a href="#">fill-word</a> , <a href="#">interface</a> , <a href="#">isl-r_rdy</a> , <a href="#">show running-config interface FibreChannel</a> , <a href="#">shutdown</a> , <a href="#">speed (Fibre Channel)</a> , <a href="#">vc-link-init</a>

# type

Specifies whether a VXLAN overlay gateway uses NSX Controller integration or Layer 2 extension.

**Syntax** `type { nsx | layer2-extension }`

**Command Default** NSX Controller integration is the default behavior.

**Parameters** **nsx**  
Specifies NSX Controller integration.

**layer2-extension**  
Specifies Layer 2 extension.

**Modes** VXLAN overlay gateway configuration mode.

**Usage Guidelines** There is no **no** form of this command, as the overlay gateway must have a type.

Note the following restrictions related to changing the type:

- To change the type, ensure that the gateway is not attached to any RBridge.
- If changing from **nsx** to **layer2-extension**, ensure that there are no "attach vlan" configurations, as configured by the **attach vlan** command.
- If changing from **layer2-extension** to **nsx**, ensure that no "map vlan" configurations are present, as configured by the **map vlan** command.

**Examples** To specify Layer 2 extension:

```
switch# config
switch(config)# overlay-gateway gateway1
switch(config-overlay-gw-gateway1)# type layer2-extension
```

**Related Commands** [attach vlan](#), [map vlan](#), [overlay-gateway](#)

## type (FlexPort)

Sets the FlexPort interface to support either Ethernet or Fibre Channel protocol.

**Syntax** `type { fibre-channel | ethernet }`

**Command Default** The default state is set to Ethernet protocol.

**Parameters** **fibre-channel**

Sets the interface type to Fibre Channel protocol.

**ethernet**

Sets the interface type to Ethernet protocol.

**Modes** FlexPort configuration mode

**Examples** To set the FlexPort interface type to Fibre Channel:

```
switch(config)# hardware
switch(config-hw)# flexport 1/0/1
switch(conf-hw-flex-1/0/1)# type fibre-channel
```

To set the FlexPort interface type to Ethernet:

```
switch(config)# hardware
switch(config-hw)# flexport 1/0/1
switch(conf-hw-flex-1/0/1)# type ethernet
```

**History**

Release version	Command history
5.0.0	This command was introduced.



# udld enable

Enables the Unidirectional Link Detection (UDLD) protocol on an interface.

**Syntax** **udld enable**

**no udld enable**

**Command Default** Disabled on interfaces by default.

**Modes** Interface subconfiguration mode (fo, gi, te)

**Usage Guidelines** Use **no udld enable** to unblock the interface if it has been blocked by the UDLD protocol.

**Examples** To enable UDLD on a specific tengigabitethernet interface:

```
switch# configure
switch(config)# interface te 5/0/1
switch(conf-if-te-5/0/1)# udld enable
```

**Related  
Commands** [protocol udld](#)

## unhide built-in-self-test

Executes the built-in self test for Federal Information Processing Standards (FIPS).

**Syntax** `unhide built-in-self-test`

**Modes** Privileged EXEC mode

**Usage Guidelines** Irreversible commands related to enabling FIPS compliance are hidden. Use this command to execute the built-in self test of the FIPS system.

Enter "fibranne" at the Password prompt to run the command.

This command applies only in fabric cluster mode. This command can be entered only from a user account with the admin role assigned.

**Examples** To execute the built-in self test for FIPS:

```
switch# unhide built-in-self-test
Password: *****
```

**History**

Release version	Command history
5.0.1	This command was introduced.

# unhide fips

Makes available irreversible commands used in enabling Federal Information Processing Standard (FIPS) compliance.

**Syntax** `unhide fips`

**Modes** Privileged EXEC mode

**Usage Guidelines** Irreversible commands related to enabling FIPS compliance are hidden. Use this command to make the following hidden commands available: **fips root disable**, **fips selftests**, **fips selftests**, and **prom-access disable**.

Enter "fibranne" at the Password prompt to run the command.

This command applies only in fabric cluster mode. This command can be entered only from a user account with the admin role assigned.

**Examples** To make available all irreversible commands used in enabling FIP compliance:

```
switch# unhide fips
```

```
Password: *****
```

**Related Commands** [fips selftests](#), [fips zeroize](#), [prom-access disable](#), [show fips](#)

## unlock username

Unlocks a locked user account.

<b>Syntax</b>	<b>unlock username</b> <i>name</i> [ <b>rbridge-id</b> { <i>rbridge-id</i>   <b>all</b> } ]
<b>Parameters</b>	<b><i>name</i></b> The name of the user account.
	<b>rbridge-id</b> Specifies an RBridge or all RBridges.
	<b><i>rbridge-id</i></b> Specifies an RBridge ID.
	<b>all</b> Specifies all RBridges.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Use this command to unlock a user who has been locked out because of unsuccessful login attempts. A user account is locked by the system when the configured threshold for login retries has been reached.
<b>Examples</b>	The following example unlocks a user account:  <pre>switch# unlock username testUser Result: Unlocking the user account is successful</pre>
<b>Related Commands</b>	<a href="#">show running-config username</a> , <a href="#">show sfp, username</a>

## update-time (BGP)

Configures the interval at which BGP next-hop tables are modified. BGP next-hop tables should always have IGP (non-BGP) routes.

<b>Syntax</b>	<b>update-time sec</b>  <b>no update-time sec</b>
<b>Command Default</b>	This option is disabled.
<b>Parameters</b>	<b>sec</b>  Update time in seconds. Range is from 0 through 30. Default is 5 seconds.
<b>Modes</b>	BGP address-family IPv4 unicast configuration mode BGP address-family IPv6 unicast configuration mode
<b>Usage Guidelines</b>	The update time determines how often the device computes the routes (next-hops) in an RBridge. Lowering the value set by the <b>update-time</b> command increases the convergence rate.  By default, the device updates the BGP4 next-hop tables and affected BGP4 routes five seconds following IGP route changes. Setting the update time value to 0 permits fast BGP4 convergence for situations such as a link failure or IGP route changes, starting the BGP4 route calculation in sub-second time.  Use the <b>no</b> form of this command to restore the defaults.

---

### NOTE

Use the **advertisement-interval** command to determine how often to advertise IGP routes to the BGP neighbor.

---

**Examples** To permit fast convergence:

```
switch(config)# rbridge-id 10
switch(config-rbridge-id-10)# router bgp
switch(config-bgp-router)# address-family ipv4 unicast
switch(config-bgp-ipv4u)# update-time 0
```

### History

Release version	Command history
NOS v5.0.0	This command was modified to add support for the IPv6 address family.

**Related Commands** [advertisement interval \(fabric-map\)](#)

## usb

Enables or disables an attached USB device. The device will be inaccessible until it is enabled

<b>Syntax</b>	<b>usb { on   off }</b>
<b>Parameters</b>	<b>on</b> Turns the USB device on. <b>off</b> Turns the USB device off.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	This command is executed on the local switch. A switch reload will automatically turn the USB device off.  This command is supported only on the local switch.  This command is not supported on the standby management module.
<b>Examples</b>	To enable a USB device attached to the local switch:  <pre>switch# usb on USB storage enabled</pre> To disable a USB device attached to the local switch:  <pre>switch# usb off USB storage disabled</pre>
<b>Related Commands</b>	<a href="#">usb dir</a> , <a href="#">usb remove</a>

# usb dir

Lists the contents of an attached USB device.

**Syntax** `usb dir`

**Modes** Privileged EXEC mode

**Usage Guidelines** This command is executed on the local switch. The USB device must be enabled before this function is available.

This command is supported only on the local switch.

This command is not supported on the standby management module.

**Examples** To list the contents of the USB device attached to the local switch:

```
switch# usb dir

firmwarekey\ 0B 2010 Aug 15 15:13
support\ 106MB 2010 Aug 24 05:36
support1034\ 105MB 2010 Aug 23 06:11
config\ 0B 2010 Aug 15 15:13
firmware\ 380MB 2010 Aug 15 15:13
Available space on usbstorage 74%
```

**Related Commands** [usb](#), [usb remove](#)

## usb remove

Removes a file from an attached USB device.

<b>Syntax</b>	<b>usb remove directory</b> <i>directory</i> <b>file</b> <i>file</i>
<b>Parameters</b>	<b>directory</b> <i>directory</i> Specifies one the name of the directory where the file you want to remove is located. Valid USBstorage directories are /firmware, /firmwarekey, /support, and /config. <b>file</b> <i>file</i> Specifies the name of the file to be removed.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	This command is executed on the local switch. The USB device must be enabled before this function is available. This command is supported only on the local switch. This command is not supported on the standby management module.
<b>Examples</b>	To remove a configuration file from a USB device attached to the local switch:  <pre>switch# usb remove directory config file startup-config.backup</pre>
<b>Related Commands</b>	<a href="#">usb</a> , <a href="#">usb dir</a>



## user (alias configuration)

Launches the user level alias configuration mode.

**Syntax**    **user** *string*

**no user** *string*

**Parameters**    **string**

Alias name string. The number of characters can be from 1 through 64.

**Modes**        Alias configuration mode

**Usage Guidelines**    The user alias is only visible to the user currently logged in to the switch. Use the **alias** command to configure the alias for the user name.

Use the **no** form of this command to remove the user

**Examples**        Example of setting a switch alias and a user alias.

```
switch(config)# alias-config
switch(config-alias-config)# alias redwood engineering
switch(config-alias-config)# user john
switch(config-alias-config-user)# alias johnexpansion smith
switch(config-alias-config-user)# alias userinfo show users
```

**Related  
Commands**        [alias](#), [alias-config](#)

## username

Configures a user account.

**Syntax** **username** *username* **password** *password* **role** *role\_name* [ **encryption-level** { 0 | 7 } ] [ **desc** *description* ] [ **enable** **true** | **false** ]

**no username** *name*

**Command Default** The default account status is enabled (enable = true).  
The default role has read-only access permissions.

**Parameters** **username**

Specifies the account login name.

**password** *password*

Specifies the account password. The exclamation mark (!) is supported, and you can specify the password in either double quotes or the escape character (\), for example "secret!password" or **secret!\password**.

**role** *role\_name*

Specifies the role assigned to the user account. The role is optional and, by default, the user's role is read-only.

**encryption-level** { 0 | 7 }

Specifies the password encryption level. The values are 0 (clear text) and 7 (encrypted). Clear text (0) is the default.

**desc** *description*

Specifies a description of the account (optional). The description can be up to 64 characters long, and can include any printable ASCII character, except for the following characters: single quotation marks ('), double quotation marks ("), exclamation point (!), colon (:), and semi-colon (;). If the description contains spaces, you must enclose the text in double quotation marks.

**enable** **true** | **false**

Specifies whether the account is enabled or disabled. A user whose account is disabled cannot login. The default account status is enabled.

**Modes** Global configuration mode

**Usage Guidelines** The *username* must be between 1 and 40 characters in length. The username must begin with a letter or underscore and be comprised of only letters, numbers, underscore and period. The username is case sensitive. The name cannot be the same as that of an existing role.

The maximum number of user accounts on a switch is 64.

The maximum number of roles for a user is 64, including the default roles.

Enter **no username** *name* followed by the appropriate parameter name to set the individual parameters to their default values. Use this command to assign attributes for a user.



### CAUTION

All active login sessions for a user are terminated if the user's password or role is changed.

**Examples** To configure a user account:

```
switch(config)# username testUser roles admin
Value for 'password' (<string>): *****

switch(config-username-testUser)# exit
switch(config)# username userBrocade password ***** role user desc "User to
monitor" enabled true
switch(config-username-userBrocade)#
```

To modify an existing user account:

```
switch(config)# username testUser enabled false
switch(config-username-testUser)# desc "add op test user"
switch(config)# no username testUser desc
```

**Related Commands** [show running-config username](#), [show users](#), [unlock username](#)

## username admin enable false

Toggles the lockout option for the default admin account.

**Syntax** `username admin enable false`

`no username admin enable false`

**Command Default** This feature is disabled.

**Modes** Global configuration mode

**Usage Guidelines** This command toggles the lockout option for the default admin account.

The account lockout policy locks an account when the user exceeds the configured number of maximum failed login attempts. This policy is now available for admin accounts. You are allowed to enable or disable lockout policy for admin accounts and user accounts with the admin role.

For admin accounts, there is no support of lockout duration to release the locked accounts. Locked admin role accounts will be reset after reboot.

Use the **no** `username admin enable false` command to disable this option.

## username user enable false

Toggles the lockout option for user accounts with admin privileges.

**Syntax**    **username user enable false**  
**no username user enable false**

**Command Default**    This feature is disabled.

**Modes**    Global configuration mode

**Usage Guidelines**    This command toggles the enable option for user accounts with admin privileges.

The account lockout policy locks an account when the user exceeds the configured number of maximum failed login attempts. This policy is now available for admin accounts. You are allowed to enable or disable lockout policy for admin accounts and user accounts with 'admin' role.

Use the **no username user enable false** command to disable this option.

## use-v2-checksum

Enables the v2 checksum computation method for a VRRPv3 IPv4 session.

**Syntax** **use-v2-checksum**

**no use-v2-checksum**

**Command Default** VRRPv3 uses the v3 checksum computation method.

**Modes** Virtual-router-group configuration mode

**Usage Guidelines** Some non-Brocade devices only use the v2 checksum computation method in VRRPv3. This command enables v2 checksum computation method in VRRPv3 and provides interoperability with these non-Brocade devices.

The **no** form of this command enables the default v3 checksum computation method in VRRPv3 sessions.

**Examples** The following example shows the v2 checksum computation method enabled for an VRRPv3 IPv4 session on a Brocade device.

```
device(config)# rbridge-id 1
device(config-rbridge-id-1)# protocol vrrp
device(config-rbridge-id-1)# interface ve 100
device(config-Ve-100)# vrrp-group 10 version 3
device(config-vrrp-group-10)# use-v2-checksum
```

### History

Release version	Command history
5.0.1a	This command was introduced.

# vcenter

Authenticates with an established vCenter and provides additional options.

**Syntax** `vcenter name [ activate | interval interval | { url URL username username password password } ]`

`no vcenter name`

## Parameters

**name**

Name of an established vCenter.

**activate**

Activates the vCenter.

**interval**

Enables the discovery timer.

*interval*

Discovery timer interval in minutes, Range is 0 through 1440. Default is 30, and 0 disables discovery.

**url**

Enables configuration of vCenter URL, user name, and password.

*URL*

URL of the vCenter.

**username**

Configures the user name.

**password**

Configures the password.

## Modes

Global configuration mode

## Usage Guidelines

You must authenticate with an established vCenter before you can initiate any discovery transactions. In order to authenticate with a specific vCenter, you must configure the URL, login, and password properties on the VDX switch. Use this command to authenticate with a vCenter; establish a URL, username, and password; and manage discovery intervals.

Enter `no vcenter name` and selected operands to deactivate this functionality.

## Examples

```
switch(config)# vcenter myvcenter url https://10.2.2.2 username user password pass
switch(config)# vcenter myvcenter activate
switch(config)# no vcenter myvcenter
switch(config)# no vcenter myvcenter
switch(config)# vcenter myvcenter interval 60
```

## Related Commands

[show vlan private-vlan](#)

## vcenter discovery (ignore delete responses)

Causes a vCenter to ignore delete responses.

**Syntax** `vcenter name discovery ignore-delete-all-response [ number | always ]`

**Command Default** The default for *number* is 0.

**Parameters** *name*

Name of the vcenter.

*number*

Number of discovery cycles to ignore. Default is 0.

**always**

Always ignore delete-all requests from the vCenter.

**Modes** Global configuration mode

**Usage Guidelines** An invalid state or condition of a vCenter can cause the deletion of all auto-port-profiles in a system. To prevent this from happening, you can configure a mode in Network OS to ignore the "delete-all" responses from the vCenter.

**Examples**

```
switch(config)# vcenter vcs_demo discovery ignore-delete-all-response 3
```



## vc-link-init

Specifies the fill word used on long distance links for an 8 Gbps Fibre Channel port.

**Syntax** `vc-link-init { idle | arb }`

**Command Default** `vc-link-init` is `idle` .

**Parameters** `idle`

Sets the long distance link fill word to IDLE.

`arb`

Sets the long distance link fill word to ARB(ff).

**Modes** Interface subtype configuration mode

**Usage Guidelines** The fill word must be set to the same value as the fill word configured for the remote port. Therefore, if the remote port link initialization and fill word combination is **idle-idle**, then the fill word for the long distance link must be set to **idle**. If the remote port link initialization/fill word combination is set to **arbff-arbff**, **idle-arbff**, or **aa-then-ia** , then the fill word for the long distance link must be set to **arb**.

This command can be used only on Network OS platforms with Fibre Channel ports (Brocade VDX 6740), in Brocade VCS Fabric mode, and with the FCoE license installed.

**Examples** To set the fill word for a long distance link:

```
switch (config)# interface FibreChannel 7/0/2
switch(conf-FibreChannel-7/0/2)# vc-link-init arb
```

**Related Commands** [fill-word](#), [interface](#), [isl-r\\_rdy](#), [show running-config interface FibreChannel](#), [shutdown](#), [speed \(Fibre Channel\)](#), [trunk-enable](#)

## vcs (logical chassis cluster mode)

Changes the RBridge ID or VCS ID of a logical chassis cluster mode and, with the no form of the command, converts a logical chassis cluster to a fabric cluster.

<b>Syntax</b>	<p><b>vcs</b> [ <b>rbridge-id</b> <i>rbridge-id</i> ] [ <b>vcsid</b> <i>vcsid</i> ]</p> <p><b>no vcs</b> [ <b>rbridge-id</b> <i>rbridge-id</i> ] [ <b>vcsid</b> <i>vcsid</i> ] <b>logical-chassis enable</b></p> <p><b>no vcs logical-chassis enable rbridge-id</b> { <b>all</b>   <i>range</i> } <b>default-config</b></p>
<b>Parameters</b>	<p><b>rbridge-id</b> <i>rbridge-id</i> Changes the existing RBridge ID.</p> <p><b>vcsid</b> <i>vcsid</i> Changes the VCS ID. The range for this value is 1 to 8192. The default is 1.</p> <p><b>logical-chassis enable</b> Used with the <b>no</b> form of this command, transitions the node from logical chassis cluster mode to fabric cluster mode.</p> <p><b>rbridge-id</b> [ <b>all</b>   <i>range</i> ] Specifies that you want to either convert all RBridge IDs in the logical chassis cluster to fabric cluster mode, or that you want to convert only a range of RBridge IDs. (You can also specify just one RBridge ID.) Ranges can be specified with hyphens, separated by commas, or contain a mixture of both. Do not use a space after a comma when specifying a range of IDs. For example, to specify RBridges 5 through 10 and RBridge 15, enter: <b>rbridge-id 5,10,15</b></p> <p><b>default-config</b> Uses the default configuration when the nodes are converted to fabric cluster mode. This is a required parameter.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>Use this command to change the RBridge ID and/or the VCS ID on a switch. At the same time, you can change the VCS ID and transition the node from logical chassis cluster mode to fabric cluster mode. You can also convert the cluster from logical chassis cluster mode to fabric cluster mode without changing the RBridge ID or VCS ID.</p> <p>For examples of how to use the <b>no</b> form of this command, refer to the Examples.</p>
<b>Examples</b>	<p>To change the RBridge ID to 10 and VCS ID to 35:</p> <pre>switch# vcs rbridge-id 10 vcsid 35</pre> <p>To change an RBridge ID from 8 to 10:</p> <pre>switch# vcs rbridge-id 10</pre> <p>During reboot, enter the following command on the principal node to disable the old RBridge ID:</p> <pre>switch# no vcs enable rbridge-id 8</pre>

The following examples illustrate the use of the **no** form of this command.

- Change the RBridge ID of the node to the value <x> and then transitions the node from logical chassis cluster mode to fabric cluster mode.

```
switch# no vcs rbridge-id <x> logical chassis enable
```

- Change the VCS ID of the node to the value <y> and then transitions the node from logical chassis cluster mode to fabric cluster mode.

```
switch# no vcs vcs-id <y> logical chassis enable
```

- Change the RBridge ID of the node to the value <x>, changes the VCS ID of the node to the value <y>, and then transitions the node from logical chassis cluster mode to fabric cluster mode.

```
no vcs rbridge-id <x> vcsid <y> logical chassis enable
```

- Convert the entire logical chassis cluster (all RBridge IDs) to fabric cluster mode. The nodes will then use the default configurations for fabric cluster mode.

```
no vcs logical-chassis enable rbridge-id all default-config
```

- Converts RBridge IDs 1 and 4 through 8 from logical chassis cluster mode to fabric cluster mode. These RBridge IDs will then use the default configurations for fabric cluster mode.

```
no vcs logical-chassis enable rbridge-id 1,4-8 default-config
```

**Related Commands** [vcs logical-chassis enable \(fabric cluster mode\)](#), [vcs rbridge-id \(fabric cluster mode\)](#), [vcs vcsid \(fabric cluster mode\)](#), [vcs virtual ip](#), [vcs config snapshot \(logical chassis cluster mode\)](#)

## vcs config snapshot (logical chassis cluster mode)

Takes a configuration snapshot for a specified RBridge ID.

<b>Syntax</b>	<b>vcs config snapshot { create   restore } rbridge-id <i>rbridge-id</i> snapshot-id <i>snapshot-id</i></b> <b>no config snapshot rbridge-id <i>rbridge-id</i> snapshot-id [ all   <i>rbridge-id</i> ]</b>
<b>Parameters</b>	<p><b>create</b> Captures the snapshot configuration from the RBridge ID specified.</p> <p><b>restore</b> Restores the snapshot configuration to the RBridge ID specified.</p> <p><b>rbridge-id <i>rbridge-id</i></b> Specifies the RBridge ID of the configuration you are capturing in a snapshot or the RBridge ID to which you are restoring the snapshot.</p> <p><b>snapshot-id <i>snapshot-id</i></b> Name you give to the snapshot of the configuration.</p> <p><b>all</b> Designates all of the snapshots.</p>
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	<p>A configuration snapshot allows you to restore the configuration if necessary. The snapshot for the RBridge specified is stored on all switches in the logical chassis cluster.</p> <p>The <b>vcs config snapshot</b> commands apply onto to nodes in a logical chassis cluster mode. The <b>create</b> and <b>restore</b> commands can be issued from any node in the cluster even though the commands pertain to a specific RBridge ID.</p> <p>If a snapshot was taken on a node that had been disconnected from the cluster, the cluster will not have the snapshot. In this situation, you can use the <b>copy snapshot</b> commands to put the snapshot on the cluster.</p>
<b>Examples</b>	<p>To create a snapshot of the configuration on an RBridge with the ID of 10, and to give the name of the snapshot "snapshot10:"</p> <pre>switch# vcs config snapshot create rbridge-id 10 snapshot snapshot10</pre>
<b>Related Commands</b>	<a href="#">vcs logical-chassis enable (fabric cluster mode)</a> , <a href="#">vcs rbridge-id (fabric cluster mode)</a> , <a href="#">vcs vcsid (fabric cluster mode)</a> , <a href="#">vcs (logical chassis cluster mode)</a> , <a href="#">vcs virtual ip</a>

## vcs logical-chassis enable (fabric cluster mode)

Changes specified nodes from fabric cluster mode to logical chassis cluster mode.

**Syntax** `vcs logical-chassis enable rbridge-id { all | range } default-config`

`no vcs logical-chassis enable rbridge-id { all | range } default-config`

**Parameters** `rbridge-id [ all | range ]`

Specifies that you want to either convert all RBridge IDs in the fabric cluster from fabric cluster mode to logical chassis mode, or that you want to convert only a range of RBridge IDs. (You can also specify just one RBridge ID.)

Ranges can be specified with hyphens, separated by commas, or contain a mixture of both. Do not use a space after a comma when specifying a range of IDs. For example, to specify RBridges 5 through 10 and RBridge 15, enter:

**rbridge-id 5,10,15**

**default-config**

Uses the default configuration when the nodes are converted to logical chassis mode. This is a required parameter.

**Modes** Privileged EXEC mode

**Usage Guidelines** In logical chassis mode, configuration can be distributed from one node—the primary switch—to all other nodes in the cluster.

Each time you change the Brocade VCS Fabric configuration, the switch resets to the default configuration and reboots automatically. Make sure to save the configuration before you issue any of the commands shown in the Synopsis.

This command can be run only when the switch is in fabric cluster mode. All nodes you want to convert to logical chassis cluster mode must have the same global configuration for this command to work.

Conversely, the **no** form of the command can be run only when the switch is in logical chassis cluster mode and you want to convert it to fabric cluster mode.

**Examples** To convert all RBridge IDs in the fabric cluster to logical chassis cluster mode:

```
switch# vcs logical-chassis enable rbridge-id all default-config
```

**Related Commands** [vcs rbridge-id \(fabric cluster mode\)](#), [vcs vcsid \(fabric cluster mode\)](#), [vcs \(logical chassis cluster mode\)](#), [vcs virtual ip](#), [vcs config snapshot \(logical chassis cluster mode\)](#)

## vcs rbridge-id (fabric cluster mode)

Changes the RBridge ID and, optionally, the VCS ID, and can enable logical chassis cluster mode.

<b>Syntax</b>	<b>vcs rbridge-id</b> <i>rbridge-id</i> [ <b>logical-chassis enable</b>   <b>vcsid</b> <i>vcsid</i> [ <b>logical-chassis enable</b> ] ]
<b>Parameters</b>	<b>rbridge-id</b> <i>rbridge-id</i> Allows you to change the existing RBridge ID, and gives you the option of changing the VCS ID at the same time. While changing these IDs, you can also enable logical chassis cluster mode on the specified RBridge ID. <b>vcsid</b> <i>vcsid</i> Changes the VCS ID. The range for this value is 1 to 8192. The default is 1. <b>logical-chassis enable</b> Enables logical chassis cluster mode on the switch.
<b>Modes</b>	Privileged EXEC mode
<b>Usage Guidelines</b>	Each time you change the Brocade VCS Fabric configuration, the switch resets to the default configuration and reboots automatically. Make sure to save the configuration before you issue any of the commands shown in the Synopsis.
<b>Examples</b>	To convert a node that is in fabric cluster mode to logical chassis cluster mode, while simultaneously changing its RBridge ID to 10 and its VCS ID to 35:  <pre>switch# vcs rbridge-id 10 vcsid 35 logical-chassis enable</pre>
<b>Related Commands</b>	<a href="#">vcs logical-chassis enable (fabric cluster mode)</a> , <a href="#">vcs vcsid (fabric cluster mode)</a> , <a href="#">vcs (logical chassis cluster mode)</a> , <a href="#">vcs virtual ip</a> , <a href="#">vcs config snapshot (logical chassis cluster mode)</a>

## vcs vcsid (fabric cluster mode)

Changes the VCS ID and, optionally, the RBridge ID, and can enable logical chassis cluster mode.

**Syntax** `vcs vcsid vcsid [ logical-chassis enable | rbridge-id rbridge-id [ logical-chassis enable ] ]`

**Parameters** `vcsid vcsid`

Changes the existing VCS ID. The range for this value is 1 to 8192. The default is 1.

**rbridge-id rbridge-id**

Changes the existing RBridge ID.

**logical-chassis enable**

Enables logical chassis cluster mode on the switch.

**Modes** Privileged EXEC mode

**Usage Guidelines** Each time you change the Brocade VCS Fabric configuration, the switch resets to the default configuration and reboots automatically. Make sure to save the configuration before you issue any of the commands shown in the Synopsis.

**Examples** To convert a node that is in fabric cluster mode to logical chassis cluster mode, while simultaneously changing its RBridge ID to 10 and its VCS ID to 35:

```
switch# vcs vcsid 35 rbridge-id 10 logical-chassis enable
```

**Related Commands** [vcs logical-chassis enable \(fabric cluster mode\)](#), [vcs rbridge-id \(fabric cluster mode\)](#), [vcs \(logical chassis cluster mode\)](#), [vcs virtual ip](#), [vcs config snapshot \(logical chassis cluster mode\)](#)

## vcs virtual-fabric enable

Enables the Virtual Fabrics feature, allowing the configuration of service or transport VFs in a Virtual Fabrics context. This expands the VLAN ID address space above the standard 802.1Q limit of 4095 to support multitenancy.

**Syntax** `vcs virtual-fabric enable`

`no vcs virtual-fabric enable`

**Command Default** This feature is disabled by default.

**Modes** Global configuration mode

**Usage Guidelines** This command will be successful only if the Virtual Fabric (VF) status is VF-capable. This operation does not disrupt existing 802.1Q traffic in the fabric. Upon the successful completion of the command, the status of the fabric becomes VF-enabled.

Use the **no** form of this command to disable the configuration of service or transport VFs in the fabric. The **no** form of this command will be successful only if there is no service or transport VF configuration in the fabric and the status of the fabric is VF-enabled. All service or transport VF configurations in the fabric must be removed or the command **no vcs virtual-fabric enable** will fail. Upon successful completion of the command, the fabric status becomes VF-capable.

On the Brocade VDX family of switches, VLANs are treated as interfaces from a configuration point of view. By default, all the DCB ports are assigned to VLAN 1 (VLAN ID equals 1). Valid VLAN IDs are as follows:

- On Brocade VDX 8770 switches: 1 through 4086 for 802.1Q VLANs (VLAN IDs 4087 through 4095 are reserved on these switches), and 4096 through 8191 for service or transport VFs in a Virtual Fabrics context.
- On all other Brocade VDX switches: 1 through 3962 for 802.1Q VLANs (VLAN IDs 3963 through 4095 are reserved on these switches), and 4096 through 8191 for service or transport VFs in a Virtual Fabrics context.

---

### NOTE

When the fabric is VF-enabled with a VF-specific configuration, the user is advised of relevant errors when attempting to disable the VF.

---

**Examples** To enable the Virtual Fabrics feature:

```
switch(config)# vcs virtual-fabric enable
```

To disable the Virtual Fabrics feature when there is no classified VLAN configuration in the fabric:

```
switch(config)# no vcs virtual-fabric enable
```

**Related  
Commands**

[interface vlan](#)



## vcs replace rbridge-id

Replaces a node in a logical chassis cluster.

**Syntax** `vcs replace rbridge-id rbridge-id`

**Parameters** `rbridge-id rbridge-id`  
Specifies the RBridge ID of the node you are replacing.

**Modes** Privileged EXEC mode

**Usage Guidelines** You must re-use the RBridge ID and then enter the WWN of the new node when prompted, as shown in the Example

This command can be performed only on a node that is in logical chassis cluster mode.

**Examples** To replace a node that has an RBridge ID of 3 and then enter the WWN of the new switch:

```
switch# vcs replace rbridge-id 3
Enter the WWN of the new replacement switch: 11:22:33:44:55:66:77:81
```

## vcs virtual ip

Assigns a single virtual IP address to all switches in a Brocade VCS Fabric.

<b>Syntax</b>	<p><b>vcs virtual ip address</b> <i>ipv4_address/prefix_len</i></p> <p><b>no vcs virtual-ip address</b></p>
<b>Parameters</b>	<p><b><i>ipaddress</i></b> Configures the virtual IP address.</p> <p><b><i>ipv4_address/prefix_len</i></b> Specifies the IP address in IPv4 format by means of a CIDR prefix (mask).</p>
<b>Modes</b>	Global configuration mode
<b>Usage Guidelines</b>	<p>When you configure the virtual IP address is configured for the first time, the address is assigned to the principal switch. You can then access the principal switch through the management port IP address or the virtual IP address. The virtual IP configuration is global in nature. All the nodes in the fabric will be configured with the same virtual IP address, but the address is always bound to the current Principal switch</p> <p>This command can be used in VCS mode only after the fabric has formed successfully.</p> <p>The command can be executed from any node. However, you cannot remove a virtual IP address when you are logged on to the switch using the virtual IP address. Use the management port IP address or the serial console to configure the virtual IP address.</p> <p>It is the responsibility of Network Administrator to ensure that the virtual IP address assigned is not a duplicate of address assigned to any other management port in the VCS fabric.</p> <p>The virtual IP address should be configured on the same subnet as the management interface IP address.</p> <p>Enter <b>no vcs virtual ip address</b> to remove the currently configured virtual IP address.</p>
<b>Examples</b>	<p>To assign a virtual IP address and mask to the principal switch and verify the operation:</p> <pre>switch(config)# vcs virtual ip address 10.21.87.2/20 switch(config)# do show vcs virtual ip Virtual IP           :10.21.87.2/20 Associated rbridge-id : 2</pre> <p>To remove the currently configured virtual IP address:</p> <pre>switch(config)# no vcs virtual ip address</pre>
<b>Related Commands</b>	<a href="#">show vcs</a>

## virtual-fabric

Designates the FCoE Virtual Fabric Identification (VFID).

**Syntax** `virtual-fabric 1`

**Modes** FCoE fabric-map configuration mode

**Usage Guidelines** The VFID value is 1. No other values are allowed.

You must be in the feature configuration mode for FCoE fabric-map for this command to function.

---

**NOTE**

The FCoE virtual fabric is not to be confused with the Virtual Fabric feature that supports service or transport VFs.

---

**Examples**

```
switch(config)# fcoe
switch(config-fcoe)# fabric-map default
switch(config-fcoe-fabric-map)# virtual-fabric 1
```

## virtual-ip

Configures a virtual IPv4 address or IPv6 address for the virtual router.

<b>Syntax</b>	<b>virtual-ip</b> { <i>ipv4-address</i>   <i>ipv6-address</i> }  <b>no virtual-ip</b> { <i>ipv4-address</i>   <i>ipv6-address</i> }
<b>Parameters</b>	<b>ipv4-address</b> Virtual IPv4 address of the virtual router.  <b>ipv6-address</b> Virtual IPv6 address of the virtual router.
<b>Modes</b>	Virtual-router-group configuration mode
<b>Usage Guidelines</b>	<p>The virtual IPv4 address or IPv6 address is the IP address that an end-host sets as its default gateway. The virtual IP address must belong to the same subnet as the underlying interface. A maximum of 16 virtual IP addresses can be configured for VRRP; only one virtual IP address can be configured for VRRP-E. The session is enabled as soon as the first virtual IP address is configured.</p> <p>You can perform this command for VRRP or VRRP-E. VRRPv3 introduced the ability to use an IPv6 address when an IPv6 VRRPv3 group is configured.</p> <p>Enter the <b>no virtual-ip</b> command with a specified virtual IP address to delete the specified virtual IP address</p>
<b>Examples</b>	<p>To assign a virtual IP address of 192.53.5.1 to the VRRP virtual group 1:</p> <pre>switch(config)# rbridge-id 101 switch(config-rbridge-id-101)# protocol vrrp switch(config-rbridge-id-101)# int te 101/1/6 switch(config-if-te-101/1/6)# vrrp-group 1 switch(config-vrrp-group-1)# virtual-ip 192.53.5.1</pre> <p>To assign a virtual IP address of 192.53.5.1 to the VRRP-E virtual group 1:</p> <pre>switch(config)# rbridge-id 101 switch(config-rbridge-id-101)# protocol vrrp switch(config-rbridge-id-101)# int ve 20 switch(config-ve-20)# vrrp-group-extended 1 switch(config-vrrp-extended-group-1)# virtual-ip 192.53.5.1</pre> <p>To assign a virtual IPv6 address of 2001:2019:8192::1 to the VRRP-Ev3 virtual group 19:</p> <pre>switch(config)# rbridge-id 122 switch(config-rbridge-id-122)# ipv6 protocol vrrp-extended switch(config-rbridge-id-122)# interface ve 2019 switch(config-Ve-2019)# ipv6 address 2001:2019:8192::122/64 switch(config-Ve-2019)# ipv6 vrrp-extended-group 19 switch(config-vrrp-extended-group-19)# virtual-ip 2001:2019:8192::1</pre>
<b>Related Commands</b>	<a href="#">vrrp-group</a>

## virtual-mac

Enables generation of a virtual MAC with 0 IP hash.

**Syntax** `virtual-mac virtual_mac_address`

**Parameters** `virtual_mac_address`  
-----

**Modes** VRRP-Extended group configuration mode

**Usage Guidelines** The distributed VXLAN gateway functionality depends on VRRP-E for multi-homing. By default, the VRRP-E virtual MAC is derived as 02:e0:52:<2-byte-ip-hash> :<1-byte-vid> . The VXLAN gateway requires that the virtual MAC be a function of only VRID. The two-byte hash of the virtual IP should be set to zeros, for example, 02e0.5200.00xx:<1-byte-VRID>.

**Examples** To enable the generation of a virtual MAC with 0 IP hash:

```
switch(config)# rbridge-id 101
switch(config-rbridge-id-101)# int ve 10
switch(config-Ve-10)# vrrp-extended-group 100
switch(config-vrrp-extended-group-100)# virtual-mac 02e0.5200.00xx:<1-byte-VRID>
```

## vlag ignore-split

Controls the ignore-split recovery functionality.

**Syntax** **vlag ignore-split**

**no vlag ignore-split**

**Command Default** **vlag ignore-split** is enabled.

**Modes** Port-channel configuration mode

**Usage Guidelines** When ignore-split-recovery is active, neither of the RBridges modify their actor SID when splitting or rejoining the vLAG. They both advertise VSID and keep both sides of the vLAG alive.

This command is supported only when the switch is operating in Brocade VCS Fabric mode.

Enter **no vlag ignore-split** to disable this functionality.

---

### NOTE

It is recommended that this command be enabled.

---

### Examples

```
switch(config)# interface port-channel 27
switch(config-port-channel-27)# vlag ignore-split
```

# vlan classifier activate group

Activates a VLAN classifier group.

**Syntax** `vlan classifier activate group number vlan vlan_id`  
`no vlan classifier activate group number`

**Parameters** *number* Specifies which VLAN classifier group to activate. Valid values range from 1 through 16.

*vlan *vlan\_id** Specifies which VLAN interface to activate.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no vlan classifier activate group number` to remove the specified group.

**Examples** To activate VLAN classifier group 1 for VLAN 5 on a specific 10-gigabit Ethernet interface:

```
switch(config)# interface tengigabitethernet 178/0/1
switch(conf-if-te-178/0/1)# vlan classifier activate group 1 vlan 5
```

To remove VLAN classifier group 10 from a specific port-channel interface:

```
switch(config)# interface port-channel 44
switch(config-port-channel-44)# no vlan classifier activate group 10
```

**Related Commands** [interface, vlan classifier group](#)

## vlan classifier group

Adds and deletes rules to a VLAN classifier group.

**Syntax** `vlan classifier group number [ add rule number | delete rule number ]`

**Parameters** *number*

Specifies the VLAN group number for which rules are to be added or deleted. Valid values range from 1 through 16.

**add rule *number***

Specifies a rule is to be added. Valid values range from 1 through 256.

**delete rule *number***

Specifies a rule is to be deleted. Valid values range from 1 through 256.

**Modes** Global configuration mode

**Usage Guidelines** Make sure your converged mode interface is not configured to classify untagged packets to the same VLAN as the incoming VLAN-tagged packets. By configuring a converged interface to classify untagged packets (by using classifiers or the default port *vlan\_id*) to the same VLAN as VLAN-tagged packets coming into the interface, the FCoE hardware sends out untagged packets to the CNA. These packets may be dropped, disrupting communications.

**Examples** To add rule 1 to VLAN classifier group 1:

```
switch(config)# vlan classifier group 1 add rule 1
```



## vlan classifier rule

Creates a VLAN classifier rule to dynamically classify Ethernet packets on an untagged interface into VLANs.

**Syntax** `vlan classifier rule rule_id [ [ mac mac_address ] | [ proto { hex_addr encap { ethv2 | nosnapllc | snapllc } | arp encap { ethv2 | nosnapllc | snapllc } | ip encap { ethv2 | nosnapllc | snapllc } | ipv6 encap { ethv2 | nosnapllc | snapllc } ] ]`

`no vlan classifier rule`

**Parameters**

**rule\_id**  
Specifies the VLAN identification rule. Valid values range from 1 through 2556.

**mac**  
Specifies the Media Access Control (MAC) list.

**mac\_address**  
Specifies the MAC address-based VLAN classifier rule used to map to a specific VLAN.

**proto**  
Specifies the protocol to use for the VLAN classifier rule.

**hex\_addr**  
An Ethernet hexadecimal value. Valid values range from 0x0000 through 0xffff

**arp**  
Specifies to use the Address Resolution Protocol.

**ip**  
Specifies to use the Internet Protocol.

**ipv6**  
Specifies to use the Internet Protocol version 6.

**encap**  
Specifies to encapsulate the Ethernet frames sent for the VLAN classifier rule.

**ethv2**  
Specifies to use the Ethernet version 2 encapsulated frames.

**nosnapllc**  
Specifies to use the Ethernet version 2 non-SNA frames.

**snapllc**  
Specifies to use the Ethernet version 2 with SNA frames.

**Modes** Global configuration mode

**Usage Guidelines** VLAN classifiers are created individually and are managed separately. Up to 256 VLAN classifiers can be provisioned. One or more VLAN classifiers can be grouped into a classifier group. This classifier group can further be applied on an interface.

Enter `no vlan classifier rule rule_id` to delete the specified rule.

**Examples** To create an ARP VLAN classifier rule:

```
switch(config)# vlan classifier rule 2 proto arp encap ethv2
```

Commands shutdown through Z

**Related  
Commands** [show vlan](#)

## vlan dot1q tag native

Enables 802.1Q tagging on the native VLAN on all trunked ports on the switch.

**Syntax**    **vlan dot1q tag native**  
**no vlan dot1q tag native**

**Command Default**    The native VLAN is enabled.

**Modes**    Global configuration mode

**Usage Guidelines**    Usually, you configure 802.1Q trunks with a native VLAN ID, which strips tagging from all packets on that VLAN.

To maintain the tagging on the native VLAN and drop untagged traffic, use the **vlan dot1q tag native** command. The switch will tag the traffic received on the native VLAN and admit only 802.1Q-tagged frames.

Control traffic continues to be accepted as untagged on the native VLAN on a trunked port, even when the **vlan dot1q tag native** command is enabled.

Enter **no vlan dot1q tag native** to disable dot1q (IEEE 802.1Q) tagging for all native VLANs on all trunked ports on the switch.

**Related Commands**    [switchport mode](#), [switchport trunk allowed vlan rspan-vlan](#)

## vlan-profile (AMPP)

Activates the VLAN profile mode for AMPP.

- Syntax** **vlan-profile**
- no vlan-profile**
- Modes** Port-profile configuration mode
- Usage Guidelines** The VLAN profile mode for AMPP allows configuration of VLAN attributes of a port-profile. Enter **no vlan-profile** to delete the profile.
- Examples** To create a basic VLAN profile supporting 802.1Q VLANs:

```
switch(config)# port-profile my_profile
switch(conf-port-profile-my_profile)# vlan-profile
```

The following illustrates the creation of port-profiles and vlan-profiles with switchport configurations illustrating VLAN classifications in a Virtual Fabrics context:

```
switch(config)# port-profile pp100
switch(config-port-profile-pp100)# vlan-profile
switch(config-vlan-profile)# switchport
switch(config-vlan-profile)# switchport access vlan 5001 mac 1.1.1
switch(config-vlan-profile)# switchport access vlan 5002 mac 1.1.2
switch(config-vlan-profile)# switchport access vlan 5001 mac-group 11
switch(config-vlan-profile)# port-profile pp101
switch(config-port-profile-pp101)# vlan-profile
switch(config-vlan-profile)# switchport
switch(config-vlan-profile)# switchport mode trunk
switch(config-vlan-profile)# switchport trunk allowed vlan add 5004 ctag 11
switch(config-vlan-profile)# switchport trunk allowed vlan add 5005 ctag 12
switch(config-vlan-profile)# switchport trunk native-vlan 5006 ctag 13
```

## vnetwork vcenter discover

Explicitly starts the discovery process on the vCenter.

**Syntax** `vnetwork vcenter vcenter_name discover`

**Parameters** `vcenter_name`  
Name of a vCenter.

**Modes** Privileged EXEC mode

**Usage Guidelines** The discovery of virtual assets from the vCenter occurs during one of the following circumstances:

- When a switch boots up.
- When a new vCenter is configured on the VDX switch and activated (activation turns on the timer processing, set to 180-second intervals.)

When the discovery is explicitly initiated with the CLI.

## vrf

Creates and enters Virtual Routing and Forwarding (VRF) configuration mode.

<b>Syntax</b>	<b>vrf</b> <i>name</i>
<b>Parameters</b>	<b><i>name</i></b> Character string for the name of the VRF. The string can be up 24 characters long, but should not contain punctuation or special characters.
<b>Modes</b>	RBridge ID configuration mode
<b>Related Commands</b>	<a href="#">address-family (BGP)</a> , <a href="#">arp</a> , <a href="#">ip router-id</a> , <a href="#">max-route</a> , <a href="#">network (BGP)</a> , <a href="#">next-hop-recursion</a> , <a href="#">rbridge-id</a> , <a href="#">rd (route distinguisher)</a>

## vrf forwarding

Configures a management port as a management VRF port.

**Syntax** `vrf forwarding mgmt_name`

`no vrf forwarding mgmt_name`

**Parameters** `mgmt_name`

The name of the VRF option for the management port.

**Command Default** By default, the out-of-band (OOB) management port (the eth0 interface) is part of the management VRF.

**Modes** Interface subtype configuration mode

**Usage Guidelines** The "no" form of this command disables the management VRF.

---

### ATTENTION

Support is provided for the management VRF. The default VRF and other user-configured (nondefault) VRFs can no longer be used for router management. This feature is allowed only on management VRF ports.

---

The management VRF is a dedicated, secure VRF instance that allows users to manage the router inband on switched virtual interfaces (SVIs) and physical interfaces. The name of this VRF instance is "mgmt-vrf;" this instance cannot be deleted.

A management port is any port that is part of the management VRF. The OOB port cannot be removed from the management VRF. In addition, Layer 3 virtual and physical ports (also known as front-end or inband ports) can be part of the management VRF. Inband ports can be moved, by means of the CLI, into and out of the management VRF.

**Examples** To enable the management VRF on an Ethernet interface and assign the interface to a subnet:

```
switch(config)# int te 3/0/2
switch(conf-if-te-3/0/2)# vrf forwarding mgmt-vrf
switch(conf-if-te-3/0/2)# ip addr 10.1.1.1/24
```

To disable a management VRF previously configured on a VE interface:

```
switch(config)# int ve 100
switch(conf-Ve-100)# no vrf forwarding mgmt-vrf
```

### History

Release version	Command history
5.0.0	This command was introduced.

## vrf-lite-capability

Disables the down-bit (DN bit) that is set when routes are redistributed from multiprotocol BGP (MP-BGP) to OSPF.

**Syntax** **vrf-lite-capability**

**no vrf-lite-capability**

**Modes** OSPF VRF router configuration mode

**Usage Guidelines** A customer edge (CE) router acts the provider edge (PE) router in VRF Lite. Because PE routers advertise VPN routes to CE routers with the DN-bit set, these checks should be disabled in a VRF Lite context. If CE routers receive routes with the DN-bit set, they discard those routes.

Enter **no vrf-lite-capability** to disable this feature.

**Examples**

```
switch# configure
switch(config)# rbridge-id 5
switch(config-rbridge-id-5)# router ospf vrf orange
switch(config-router-ospf-vrf-orange)# vrf-lite-capability
```



## vrf mgmt-vrf

Configures routes on a management VRF port.

**Syntax** **vrf mgmt-vrf**

**no vrf mgmt-vrf**

**Command Default** None

**Modes** RBridge ID configuration mode

**Usage Guidelines** The **no** form of this command disables the management VRF.

---

### ATTENTION

Beginning with release 5.0.0, support is provided for the management VRF. The default VRF and other user-configured (nondefault) VRFs can no longer be used for router management. This feature is allowed only on management VRF ports.

---

The management VRF is a dedicated, secure VRF instance that allows users to manage the router inband on switched virtual interfaces (SVIs) and physical interfaces. The name of this VRF instance is "mgmt-vrf;" this instance cannot be deleted.

A management port is any port that is part of the management VRF. The OOB port cannot be removed from the management VRF. In addition, Layer 3 virtual and physical ports (also known as front-end or inband ports) can be part of the management VRF. Inband ports can be moved, by means of the CLI, into and out of the management VRF.

**Examples** The following configures an IPv4 route subnet for the management VRF, enters address family IPv4 configuration mode, and assigns the management VRF to an Ethernet interface.

```
switch(config)# rbridge-id 3
switch(config-rbridge-id-3)# vrf mgmt-vrf
switch(config-vrf-mgmt-vrf)# ip route 10.1.1.0/32 to 3/0/10
```

### History

Release version	Command history
5.0.0	This command was introduced.

## vrrp-extended-group

Configures a virtual-router-extended group and enters into the virtual router configuration mode..

<b>Syntax</b>	<b>vrrp-extended-group</b> <i>group-ID</i> <b>no vrrp-extended-group</b> <i>group-ID</i>
<b>Parameters</b>	<b>group-ID</b> A user-assigned number from 1 through 128 that you assign to the virtual router group.
<b>Modes</b>	Virtual Ethernet (ve) interface configuration mode
<b>Usage Guidelines</b>	This configuration is for virtual Ethernet (ve) interfaces only. Enter <b>no vrrp-extended-group</b> <i>group-ID</i> to remove the specific VRRP Extended group. If you remove a group, you cannot retrieve it. You would have to redo the configuration procedure.
<b>Examples</b>	The following example shows how to assign the ve interface with a vlan number of 20 to the virtual router extended group with the ID of 1. (First you must enable VRRP-E on the switch.) <pre>switch(config)# rbridge-id 101 switch(config-rbridge-id-101)# protocol vrrp-extended switch(config-rbridge-id-101)# int ve 20 switch(config-ve-20)# vrrp-extended-group 1</pre>
<b>Related Commands</b>	<a href="#">interface</a> , <a href="#">interface ve</a> , <a href="#">virtual-ip</a>

## vrrp-group

Configures a virtual router group (VRRP) and enters into the virtual router configuration mode.

**Syntax** `vrrp-group group-ID [ version { 2 | 3 } ]`  
`no vrrp-group group-ID [ version { 2 | 3 } ]`

**Command Default** VRRP version 2 is the default.

**Parameters** *group-ID*  
 A value from 1 through 128 that you assign to the virtual router group.

**version**  
 Specifies in which version of VRRP the IPv4 VRRP group is to be configured.

**2 | 3**  
 Version 2 or version 3 of VRRP.

**Modes** Interface subtype configuration mode

**Usage Guidelines** Enter `no vrrp-group group-ID` to remove a specific VRRP group. If you remove a group, you cannot retrieve it. You would have to redo the configuration procedure. You must disable the VRRP session before using the `no` form of this command.

You can specify in which version of VRRP the VRRP group is configured using the **version** keyword and either 2 or 3 as the version number. VRRPv3 supports both IPv4 and IPv6 addresses.

**Examples** The following example shows how to assign the 10-gigabit Ethernet interface 101/1/6 to the virtual router group with the ID of 1. (First you must enable VRRP on the switch.)

```
switch(config)# rbridge-id 101
switch(config-rbridge-id-101)# protocol vrrp
switch(config-rbridge-id-101)# interface tengigabitethernet 101/1/6
switch(config-if-te-101/1/6)# vrrp-group 1
```

The following example shows how to assign the 10-gigabit Ethernet interface 101/1/6 to the virtual router group with the ID of 1 for VRRPv3. (First you must enable VRRP on the switch.)

```
switch(config)# rbridge-id 101
switch(config-rbridge-id-101)# protocol vrrp
switch(config-rbridge-id-101)# interface te 101/1/6
switch(conf-if-te-101/1/6)# vrrp-group 1 version 3
```

**Related Commands** [interface](#)

# write erase

Returns switch to factory default state.

**Syntax** `write erase [ RbridgeID rbridge-ID ] [vcs-id vcs_id ] [ vcs-mode {0 | 1 } ]`

**Command Default** None

**Parameters** **Rbridge ID** *rbridge-id*

After reboot, the switch is set to the specified RBridge ID

**vcs-id** *vcs\_id*

After reboot, the switch is set to the specified VCS ID.

**vcs-mode**

Specifies the mode for the switch after it reboots.

**0**

The switch comes back up in fabric cluster mode.

**1**

The switch comes back up in logical chassis cluster mode.

**Modes** Privileged EXEC mode

**Usage Guidelines** The command can be run only on the active MM. Both MMs will be brought to the specified factory default state, with the following guidelines:

- If you do not specify any optional parameters, this command resets all user configurations, including the management IP address and license.
- If you specify any optional parameters, this command resets all user configurations except the management IP address and license and the parameters that you specified.

This command can be used for switch recovery or switch configuration reset to the factory default state. Due to its disruptive nature, this command prompts the user about the consequence of losing all current user configuration and resetting the switch to the factory default state. It waits for the user's confirmation before proceeding.

**Examples** To reset the switch to factory defaults, and to bring the switch back up in logical chassis cluster mode, and with an RBridge ID of 25:

```
switch# write erase rbridgeid 25 vcs-mode 1
```

**History**

Release version	Command history
5.0.0	This command was introduced.

## zoning defined-configuration alias

Creates or deletes a zone alias, adds one or more members to a zone alias, or removes a member from a zone alias.

**Syntax** **zoning defined-configuration alias** *aliasName*

**member-entry** *member* [ ; *member* ] ...

**no member-entry** *member*

**no zoning defined-configuration alias** *aliasName*

**Parameters** **alias** *aliasName*

Specifies a zone alias.

**member-entry** *member*

Specifies the WWN of the device to be added to the zone alias.

**Modes** Global configuration mode  
Zoning configuration mode

**Usage Guidelines** This command enters a subconfiguration mode, where you can specify the names of the zone alias members to be added to the defined configuration or removed from the defined configuration.

This command is supported only in Brocade VCS Fabric mode. Zoning configuration data are automatically distributed among all RBridges in the VCS Fabric.

This command can be entered on any RBridge in a Brocade VCS Fabric, but it is always executed on the principal RBridge in fabric cluster mode. In logical chassis cluster mode, edits can be performed only from the principal RBridge.

Enter the **member-entry** command with one or more specified members in the subconfiguration mode to add one or more members to a zone alias. You specify the zone alias member by its WWN. When adding multiple members in a single command line, the members are added sequentially until all members are added or the first error is encountered.

Enter **no member-entry** *member* to remove a member from a zone alias. You can remove only one member entry each time you enter **no member-entry**.

If you remove the last member from a zone alias and subsequently commit the configuration, the commit operation deletes the zone alias.

Enter **no zoning defined-configuration alias** *aliasName* to delete a zone alias.

The **zoning defined-configuration alias** command changes the defined configuration.

To save the configuration persistently, enter **zoning enabled-configuration cfg-action cfg-save** . For the change to become effective, enable the configuration by entering **zoning enabled-configuration cfgName**.

**Examples** To create a zone alias with one member:

```
switch(config)# zoning defined-configuration alias alias1
switch(config-alias-alias1)# member-entry 10:00:00:00:00:00:01
```

To add two additional WWNs to the zone alias:

```
switch(config)# zoning defined-configuration alias alias1
switch(config-alias-alias1)# member-entry
10:00:00:00:00:00:00:02;10:00:00:00:00:00:00:03
```

To remove a WWN from a zone alias:

```
switch(config)# zoning defined-configuration alias alias1
switch(config-alias-alias1)# no member-entry 10:00:00:00:00:00:00:01
```

To delete a zone alias from the defined configuration:

```
switch(config)# no zoning defined-configuration alias alias1
```

**Related  
Commands**

[show running-config zoning defined-configuration](#)

## zoning defined-configuration cfg

Creates a new zone configuration or adds a zone to an existing configuration.

**Syntax** **zoning defined-configuration cfg** *cfgName*

**member-zone** *zoneName* [ ;*zoneName* ] ...

**no member-zone** *zoneName*

**no zoning defined-configuration cfg** *cfgName*

**Parameters** **cfgName**

Specifies the name of the zone configuration.

**member-zone zoneName**

Specifies the name of a zone to be added to the configuration or removed from the configuration.

**Modes** Global configuration mode

Zoning configuration mode

**Usage Guidelines** This command enters a subconfiguration mode where you can specify the names of the member zones to be added to the configuration or removed from the configuration.

This command is supported only in Brocade VCS Fabric mode. Zoning configuration data are automatically distributed among all R Bridges in the VCS Fabric.

This command can be entered on any R Bridge in a Brocade VCS Fabric, but it is always executed on the principal R Bridge in fabric cluster mode. In logical chassis cluster mode, edits can be performed only from the principal R Bridge.

The **zoning defined-configuration cfg** command changes the defined configuration. To save the configuration persistently, issue the **zoning enabled-configuration cfg-action cfg-save** command. For the change to become effective, enable the configuration with the **zoning enabled-configuration cfg-name** command.

Enter the **member-zone** command with one or more zone names in the subconfiguration mode to add additional zones. When adding multiple zones in a single command line, the zones are added sequentially until all zones are added or the first error is encountered.

Enter the **no member-zone** with a specified zone name in the subconfiguration mode to remove a member zone from the configuration. You can remove only one member zone each time you enter the **no member-zone** command.

If you enable a zone configuration, the members in that zone configuration must be populated with at least one zone member-entry (a WWN or an alias); otherwise the enable operation fails.

If you remove the last zone from the configuration and subsequently commit the configuration, the commit operation deletes the configuration.

Enter **no zoning defined-configuration cfg** *cfgName* to delete a configuration.

---

### NOTE

Zone aliases are not valid zone configuration members. Adding an alias to an existing zone configuration will not be blocked. However, the attempt to enable a zone configuration that contains aliases will fail with an appropriate error message.

---

**Examples** To add two zones to a zone configuration:

```
switch(config)# zoning defined-configuration cfg cfg4
switch(config-cfg-cfg4)# member-zone zone2;zone3
```

To delete a zone from a zone configuration:

```
switch(config)# zoning defined-configuration cfg cfg4
switch(config-cfg-cfg4)# no member-zone zone2
```

To delete a zone configuration:

```
switch(config)# no zoning defined-configuration cfg cfg4
```

**Related Commands** [zoning defined-configuration zone](#), [zoning enabled-configuration cfg-name](#)



## zoning defined-configuration zone

Creates a new zone or adds a member to an existing zone.

**Syntax** **zoning defined-configuration zone** *zoneName*

**member-entry** *member* [ ; *member* ] ...

**no member-entry** *member*

**no zoning defined-configuration zone** *zoneName*

**Parameters** **zone** *zoneName*

Specifies the name of the zone to be configured.

**member-entry** *member*

Specifies the name of the zone member to be added to the zone. The zone member can be specified by a WWN or a by a zone alias.

**Modes** Global configuration mode

Zoning configuration mode

**Usage Guidelines** Use this command to create a new zone, to add one or more members to a zone, or to delete a member from a zone.

This command enters a subconfiguration mode, where you can specify the names of the zone members to be added to the defined configuration or removed from the defined configuration.

This command is supported only in Brocade VCS Fabric mode. Zoning configuration data are automatically distributed among all R Bridges in the VCS Fabric.

This command can be entered on any R Bridge in a Brocade VCS Fabric, but it is always executed on the principal R Bridge in fabric cluster mode. In logical chassis cluster mode, edits can be performed only from the principal R Bridge.

You can define a zone member by its port WWN or node WWN. However, when creating an L SAN zone, you should use only port WWNs, because node WWNs cannot be exported to a remote fabric.

Enter the **member-entry** command with one or more zone member names in the subconfiguration mode to add additional members to a zone. You can specify the zone member by its WWN or by a zone alias. When adding multiple members in a single command line, the members are added sequentially until all members are added or the first error is encountered.

Enter **no member-entry** *member* to remove a member from a zone. You can remove only one member entry each time you enter **no member-entry**.

If you enable a zone configuration, the members in that zone configuration must be populated with at least one member-entry; otherwise the enable operation fails. However, You can have a non-populated zone in a zone configuration if that zone configuration only exists in the defined-configuration and is not enabled.

If you remove the last member from a zone and subsequently commit the configuration, the commit operation deletes the zone.

Enter **no zoning defined-configuration zone** *zoneName* to delete a zone.

The **zoning defined-configuration zone** command changes the defined configuration:

- To save the configuration persistently, issue the **zoning enabled-configuration cfg-action cfg-save** command.



**CAUTION**

---

For the change to become effective, enable the configuration with the **zoning enabled-configuration cfg-name** command. When edits are made to the defined configuration, and those edits affect a currently enabled zone configuration, issuing a "cfg-save" command makes the enabled configuration effectively stale. Until the enabled configuration is re-enabled, the merging of new RBridges into the cluster is not recommended. This merging may cause unpredictable results, with the potential for mismatched enabled-zoning configurations among the RBridges in the cluster.

---

**Examples** To add a WWN and an alias to a zone:

```
switch(config)# zoning defined-configuration zone zone3
switch(config-zone-zone3)# member-entry 11:22:33:44:55:66:77:84;alias1
```

To remove a WWN from a zone:

```
switch(config)# zoning defined-configuration zone zone3
switch(config-zone-zone3)# no member-entry 11:22:33:44:55:66:77:82
```

To remove an alias from a zone:

```
switch(config)# zoning defined-configuration zone zone3
switch(config-zone-zone3)# no member-entry alias1
```

To delete a zone from the defined configuration:

```
switch(config)# no zoning defined-configuration zone zone3
```

**Related Commands** [zoning defined-configuration cfg](#)

## zoning enabled-configuration cfg-action cfg-clear

Clears all zone configurations in the defined configuration.

**Syntax** `zoning enabled-configuration cfg-action cfg-clear`

**Modes** Global configuration mode

**Usage Guidelines** The enabled configuration is not affected by this command.

This command is supported only in Brocade VCS Fabric mode. Zoning configuration data are automatically distributed among all R Bridges in the VCS Fabric.

This command can be entered on any R Bridge in a Brocade VCS Fabric, but it is always executed on the principal R Bridge in fabric cluster mode. In logical chassis cluster mode, edits can be performed only from the principal R Bridge.

After clearing the defined zone configuration with **zoning enabled-configuration cfg-action cfg-clear**, enter **no zoning enabled-configuration cfg-name** to clear the entire zoning configuration (both the defined zone configuration and the enabled configuration).

If no current active zoning configuration exists, or you just want to clear the defined zone configuration, enter **zoning enabled-configuration cfg-action cfg-save** to commit the transaction.

If a **cfg-clear** is entered accidentally, issue a **cfg-transaction-abort** command.



### CAUTION

All defined zone objects in the defined zone configuration are deleted. If you try to commit the empty defined zone configuration while a zone configuration is enabled, you are warned to first disable the enabled zone configuration or to provide a valid configuration with the same name.

**Examples** To clear the defined zoning database:

```
switch(config)# zoning enabled-configuration cfg-action cfg-clear
```

**Related Commands** [zoning enabled-configuration cfg-action cfg-save](#), [zoning enabled-configuration cfg-namezoning enabled-configuration cfg-name](#), [zoning enabled-configuration cfg-action cfg-save](#)

## zoning enabled-configuration cfg-action cfg-save

Saves the defined configuration to persist across reboots.

<b>Syntax</b>	<b>zoning enabled-configuration cfg-action cfg-save</b>
<b>Modes</b>	Global configuration mode
<b>Usage Guidelines</b>	<p>This command writes the defined configuration and the name of the defined zone configuration to nonvolatile memory in all switches in the VCS Fabric.</p> <p>The saved configuration is automatically reloaded at power on. If a configuration was in effect at the time it was saved, the same configuration is reinstalled with an automatic <b>zoning enabled-configuration cfg-name</b> command.</p> <p>The <b>zoning enabled-configuration cfg-action cfg-save</b> command validates the effective configuration by performing the same tests as the <b>zoning enabled-configuration cfg-name</b> command on enabling the configuration. If the tests fail, an error message is displayed and the configuration is not saved.</p> <p>This command commits the current transaction. Pending transactions are pushed to nonvolatile memory. Any empty zones or empty configurations are deleted.</p> <p>This command is supported only in Brocade VCS Fabric mode. Zoning configuration data are automatically distributed among all R Bridges in the VCS Fabric.</p> <p>This command can be entered on any R Bridge in a Brocade VCS Fabric, but it is always executed on the principal R Bridge in fabric cluster mode. In logical chassis cluster mode, edits can be performed only from the principal R Bridge.</p>
<b>Examples</b>	<p>The following example saves the current zone configuration:</p> <pre>switch(config)# zoning enabled-configuration cfg-action cfg-save</pre>
<b>Related Commands</b>	<a href="#">zoning enabled-configuration cfg-name</a> , <a href="#">zoning enabled-configuration cfg-action cfg-transaction-abort</a>

## zoning enabled-configuration cfg-action cfg-transaction-abort

Aborts a current fabric-wide transaction without committing the transaction.

All changes made since the transaction was started are removed and the zone configuration database is restored to the state before the transaction was started.

**Syntax** `zoning enabled-configuration cfg-action cfg-transaction-abort`

**Modes** Global configuration mode

**Usage Guidelines** This command is supported only in Brocade VCS Fabric mode. Zoning configuration data are automatically distributed among all R Bridges in the VCS Fabric.

This command can be entered on any R Bridge in a Brocade VCS Fabric, but it is always executed on the principal R Bridge in fabric cluster mode. In logical chassis cluster mode, edits can be performed only from the principal R Bridge.

**Examples** To abort the current zone transaction:

```
switch(config)# zoning enabled-configuration cfg-action cfg-transaction-abort
```

**Related Commands** [zoning enabled-configuration cfg-action cfg-save](#), [zoning enabled-configuration cfg-namezoning enabled-configuration cfg-action cfg-save](#), [zoning enabled-configuration cfg-name](#)

## zoning enabled-configuration cfg-name

Enables a zone configuration.

This command commits the current defined zone configuration to both volatile and nonvolatile memory.

**Syntax** `zoning enabled-configuration cfg-name cfgName`

**no zoning enabled-configuration cfg-name**

**Command Default** Zoning is not implemented and default zoning applies.

**Parameters** *cfgName*

Specifies the configuration to be enabled.

**Modes** Global configuration mode

**Usage Guidelines** Only one configuration can be enabled at a time.

This command is supported only in Brocade VCS Fabric mode. Zoning configuration data are automatically distributed among all R Bridges in the VCS Fabric.

This command can be entered on any R Bridge in a Brocade VCS Fabric, but it is always executed on the principal R Bridge in fabric cluster mode. In logical chassis cluster mode, edits can be performed only from the principal R Bridge.

If the operation fails, the previous state is preserved; that is, zoning remains disabled, or the previous effective configuration remains in effect. If the operation succeeds, the new configuration replaces the previous effective configuration.

Enter **no zoning enabled-configuration cfg-name** to disable the currently enabled configuration. The VCS Fabric returns to default zoning mode. In this mode, either all devices can access one another, or no device can access any other device, depending on if the default zoning mode is ALLACCESS or NOACCESS.

---

### NOTE

If more than 300 devices are connected when the enabled-configuration is disabled, the **no zoning enabled-configuration cfg-name** command is not allowed if the defzone mode is AllAccess. In this case, change the defzone mode to No Access and then disable the enabled-configuration.

---

**Examples** To enable a zone configuration:

```
switch(config)# zoning enabled-configuration cfg-name myconfig
```

To disable the currently enabled configuration:

```
switch(config)# no zoning enabled-configuration cfg-name
```

**Related Commands** [show running-config zoning defined-configuration](#), [show running-config zoning enabled-configuration](#), [zoning enabled-configuration cfg-action transaction-abort](#)

## zoning enabled-configuration default-zone-access

Sets the default zone access mode.

<b>Syntax</b>	<b>zoning enabled-configuration default-zone-access { allaccess   noaccess }</b>
<b>Command Default</b>	Zone access mode is "All Access".
<b>Parameters</b>	<p><b>allaccess</b></p> <p>Sets the default zone access mode to "All Access". Each device can access all other devices attached to the VCS Fabric.</p> <p><b>noaccess</b></p> <p>Sets the default zone access mode to "No Access". No device can access any other device in the VCS Fabric.</p>
<b>Modes</b>	Global configuration mode
<b>Usage Guidelines</b>	<p>This command is supported only in Brocade VCS Fabric mode. Zoning configuration data are automatically distributed among all R Bridges in the VCS Fabric.</p> <p>This command can be entered on any R Bridge in a Brocade VCS Fabric, but it is always executed on the principal R Bridge in fabric cluster mode. In logical chassis cluster mode, edits can be performed only from the principal R Bridge.</p>

---

### ATTENTION

Setting the default zone mode initializes a zoning transaction (if one is not already in progress), and creates reserved zoning objects. For the change to become effective, you must commit the transaction with either the **zoning enabled-configuration cfg-action cfg-save** command or the **zoning enabled-configuration cfg-name** command.

---

### NOTE

A default zone controls the device access that is in effect when zoning is not enabled. When a user-specified zoning configuration is not enabled, the default zone is in effect, allowing access to all devices or no devices. When a user-specified zone configuration is enabled, it overrides the default zone access mode.

---

**Examples** To set the default zone mode to All Access:

```
switch(config)# zoning enabled-configuration default-zone-access allaccess
```

**Related Commands** [zoning enabled-configuration cfg-name](#), [zoning enabled-configuration cfg-action cfg-save](#)

zoning enabled-configuration default-zone-access