



Using ACLI and EDM on Avaya Ethernet Routing Switch 3500 Series

Release 5.3.2
NN47203-102
Issue 04.03
September 2016

© 2012-2016, Avaya, Inc.
All Rights Reserved.

Notice

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

Documentation disclaimer

"Documentation" means information published in varying mediums which may include product information, operating instructions and performance specifications that are generally made available to users of products. Documentation does not include marketing materials. Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of Documentation unless such modifications, additions, or deletions were performed by or on the express behalf of Avaya. End User agrees to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

Link disclaimer

Avaya is not responsible for the contents or reliability of any linked websites referenced within this site or Documentation provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warranty

Avaya provides a limited warranty on Avaya hardware and software. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this product while under warranty is available to Avaya customers and other parties through the Avaya Support website: <https://support.avaya.com/helpcenter/getGenericDetails?detailId=C20091120112456651010> under the link "Warranty & Product Lifecycle" or such successor site as designated by Avaya. Please note that if You acquired the product(s) from an authorized Avaya Channel Partner outside of the United States and Canada, the warranty is provided to You by said Avaya Channel Partner and not by Avaya.

"Hosted Service" means an Avaya hosted service subscription that You acquire from either Avaya or an authorized Avaya Channel Partner (as applicable) and which is described further in Hosted SAS or other service description documentation regarding the applicable hosted service. If You purchase a Hosted Service subscription, the foregoing limited warranty may not apply but You may be entitled to support services in connection with the Hosted Service as described further in your service description documents for the applicable Hosted Service. Contact Avaya or Avaya Channel Partner (as applicable) for more information.

Hosted Service

THE FOLLOWING APPLIES ONLY IF YOU PURCHASE AN AVAYA HOSTED SERVICE SUBSCRIPTION FROM AVAYA OR AN AVAYA CHANNEL PARTNER (AS APPLICABLE), THE TERMS OF USE FOR HOSTED SERVICES ARE AVAILABLE ON THE AVAYA WEBSITE, [HTTPS://SUPPORT.AVAYA.COM/LICENSEINFO](https://support.avaya.com/LICENSEINFO) UNDER THE LINK "Avaya Terms of Use for Hosted Services" OR SUCH SUCCESSOR SITE AS DESIGNATED BY AVAYA, AND ARE APPLICABLE TO ANYONE WHO ACCESSES OR USES THE HOSTED SERVICE. BY ACCESSING OR USING THE HOSTED SERVICE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE DOING SO (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THE TERMS OF USE. IF YOU ARE ACCEPTING THE TERMS OF USE ON BEHALF A COMPANY OR OTHER LEGAL ENTITY, YOU REPRESENT THAT YOU HAVE THE AUTHORITY TO BIND SUCH ENTITY TO THESE TERMS OF USE. IF YOU DO NOT HAVE SUCH AUTHORITY, OR

IF YOU DO NOT WISH TO ACCEPT THESE TERMS OF USE, YOU MUST NOT ACCESS OR USE THE HOSTED SERVICE OR AUTHORIZE ANYONE TO ACCESS OR USE THE HOSTED SERVICE.

Licenses

THE SOFTWARE LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE, [HTTPS://SUPPORT.AVAYA.COM/LICENSEINFO](https://support.avaya.com/LICENSEINFO), UNDER THE LINK "AVAYA SOFTWARE LICENSE TERMS (Avaya Products)" OR SUCH SUCCESSOR SITE AS DESIGNATED BY AVAYA, ARE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS AVAYA SOFTWARE, PURCHASED FROM AVAYA INC., ANY AVAYA AFFILIATE, OR AN AVAYA CHANNEL PARTNER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH AVAYA OR AN AVAYA CHANNEL PARTNER. UNLESS OTHERWISE AGREED TO BY AVAYA IN WRITING, AVAYA DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN AVAYA, AN AVAYA AFFILIATE OR AN AVAYA CHANNEL PARTNER; AVAYA RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND AVAYA INC. OR THE APPLICABLE AVAYA AFFILIATE ("AVAYA").

Avaya grants You a license within the scope of the license types described below, with the exception of Heritage Nortel Software, for which the scope of the license is detailed below. Where the order documentation does not expressly identify a license type, the applicable license will be a Designated System License. The applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the documentation or other materials available to You. "Software" means computer programs in object code, provided by Avaya or an Avaya Channel Partner, whether as stand-alone products, pre-installed on hardware products, and any upgrades, updates, patches, bug fixes, or modified versions thereto. "Designated Processor" means a single stand-alone computing device. "Server" means a Designated Processor that hosts a software application to be accessed by multiple users. "Instance" means a single copy of the Software executing at a particular time: (i) on one physical machine; or (ii) on one deployed software virtual machine ("VM") or similar deployment.

License types

Designated System(s) License (DS). End User may install and use each copy or an Instance of the Software only on a number of Designated Processors up to the number indicated in the order. Avaya may require the Designated Processor(s) to be identified in the order by type, serial number, feature key, Instance, location or other specific designation, or to be provided by End User to Avaya through electronic means established by Avaya specifically for this purpose.

Heritage Nortel Software

"Heritage Nortel Software" means the software that was acquired by Avaya as part of its purchase of the Nortel Enterprise Solutions Business in December 2009. The Heritage Nortel Software is the software contained within the list of Heritage Nortel Products located at <https://support.avaya.com/LicenseInfo> under the link "Heritage Nortel Products" or such successor site as designated by Avaya. For Heritage Nortel Software, Avaya grants Customer a license to use Heritage Nortel Software provided hereunder solely to the extent of the authorized activation or authorized usage level, solely for the purpose specified in the Documentation, and solely as embedded in, for execution on, or for communication with Avaya equipment. Charges for Heritage Nortel Software may be based on extent of activation or use authorized as specified in an order or invoice.

Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation, Software, Hosted Service, or hardware provided by Avaya. All content on this site, the

documentation, Hosted Service, and the product provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software unless expressly authorized by Avaya. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Avaya can be a criminal, as well as a civil offense under the applicable law.

Virtualization

The following applies if the product is deployed on a virtual machine. Each product has its own ordering code and license types. Note that each Instance of a product must be separately licensed and ordered. For example, if the end user customer or Avaya Channel Partner would like to install two Instances of the same type of products, then two products of that type must be ordered.

Third Party Components

"Third Party Components" mean certain software programs or portions thereof included in the Software or Hosted Service may contain software (including open source software) distributed under third party agreements ("Third Party Components"), which contain terms regarding the rights to use certain portions of the Software ("Third Party Terms"). As required, information regarding distributed Linux OS source code (for those products that have distributed Linux OS source code) and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply is available in the products, Documentation or on Avaya's website at: <https://support.avaya.com/Copyright> or such successor site as designated by Avaya. The open source software license terms provided as Third Party Terms are consistent with the license rights granted in these Software License Terms, and may contain additional rights benefiting You, such as modification and distribution of the open source software. The Third Party Terms shall take precedence over these Software License Terms, solely with respect to the applicable Third Party Components to the extent that these Software License Terms impose greater restrictions on You than the applicable Third Party Terms.

The following applies only if the H.264 (AVC) codec is distributed with the product. THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

Service Provider

THE FOLLOWING APPLIES TO AVAYA CHANNEL PARTNER'S HOSTING OF AVAYA PRODUCTS OR SERVICES. THE PRODUCT OR HOSTED SERVICE MAY USE THIRD PARTY COMPONENTS SUBJECT TO THIRD PARTY TERMS AND REQUIRE A SERVICE PROVIDER TO BE INDEPENDENTLY LICENSED DIRECTLY FROM THE THIRD PARTY SUPPLIER. AN AVAYA CHANNEL PARTNER'S HOSTING OF AVAYA PRODUCTS MUST BE AUTHORIZED IN WRITING BY AVAYA AND IF THOSE HOSTED PRODUCTS USE OR EMBED CERTAIN THIRD PARTY SOFTWARE, INCLUDING BUT NOT LIMITED TO MICROSOFT SOFTWARE OR CODECS, THE AVAYA CHANNEL PARTNER IS REQUIRED TO INDEPENDENTLY OBTAIN ANY APPLICABLE LICENSE AGREEMENTS, AT THE AVAYA CHANNEL PARTNER'S EXPENSE, DIRECTLY FROM THE APPLICABLE THIRD PARTY SUPPLIER.

WITH RESPECT TO CODECS, IF THE AVAYA CHANNEL PARTNER IS HOSTING ANY PRODUCTS THAT USE OR EMBED THE G.729 CODEC, H.264 CODEC, OR H.265 CODEC, THE AVAYA CHANNEL PARTNER ACKNOWLEDGES AND AGREES THE AVAYA CHANNEL PARTNER IS RESPONSIBLE FOR ANY AND ALL RELATED FEES AND/OR ROYALTIES. THE G.729 CODEC IS LICENSED BY SIPRO LAB TELECOM INC. SEE

[WWW.SIPRO.COM/CONTACT.HTML](http://www.sipro.com/contact.html). THE H.264 (AVC) CODEC IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO: (I) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (II) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION FOR H.264 (AVC) AND H.265 (HEVC) CODECS MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

Compliance with Laws

You acknowledge and agree that it is Your responsibility for complying with any applicable laws and regulations, including, but not limited to laws and regulations related to call recording, data privacy, intellectual property, trade secret, fraud, and music performance rights, in the country or territory where the Avaya product is used.

Preventing Toll Fraud

"Toll Fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of Toll Fraud associated with your system and that, if Toll Fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya Toll Fraud intervention

If You suspect that You are being victimized by Toll Fraud and You need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1-800-643-2353 for the United States and Canada. For additional support telephone numbers, see the Avaya Support website: <https://support.avaya.com> or such successor site as designated by Avaya.

Security Vulnerabilities

Information about Avaya's security support policies can be found in the Security Policies and Support section of <https://support.avaya.com/security>.

Suspected Avaya product security vulnerabilities are handled per the Avaya Product Security Support Flow (<https://support.avaya.com/css/P8/documents/100161515>).

Downloading Documentation

For the most current versions of Documentation, see the Avaya Support website: <https://support.avaya.com>, or such successor site as designated by Avaya.

Contact Avaya Support

See the Avaya Support website: <https://support.avaya.com> for product or Hosted Service notices and articles, or to report a problem with your Avaya product or Hosted Service. For a list of support telephone numbers and contact addresses, go to the Avaya Support website: <https://support.avaya.com> (or such successor site as designated by Avaya), scroll to the bottom of the page, and select Contact Avaya Support.

Trademarks

The trademarks, logos and service marks ("Marks") displayed in this site, the Documentation, Hosted Service(s), and product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, its licensors, its suppliers, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the Documentation, Hosted Service(s) and product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party.

Avaya is a registered trademark of Avaya Inc.

All non-Avaya trademarks are the property of their respective owners. Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

Contents

Chapter 1: Introduction	6
Purpose.....	6
Chapter 2: New in this document	7
Features.....	7
Other changes.....	7
Chapter 3: ACLI concepts	8
ACLI command modes.....	8
ACLI access procedures	10
Opening an ACLI session.....	10
Chapter 3: ACLI help	11
Chapter 3: Enterprise Device Manager concepts	13
Tested browsers.....	14
Memory requirements.....	14
Online help.....	14
Interface components.....	15
Switch summary view.....	15
Device Physical View.....	16
EDM window.....	17
Single port configuration for EDM.....	24
Multiple Port Configuration for EDM.....	26
Chapter 3: Enterprise Device Manager procedures	29
Enabling the Web server using ACLI.....	29
Disabling the Web server using ACLI.....	29
Displaying the Web server status using ACLI.....	30
Starting EDM.....	30
Using shortcut menus.....	31
Navigating around EDM.....	31
Undocking tabs.....	32
Docking tabs.....	32
Editing a dialog box.....	32
Inserting an entry in a dialog box.....	33
Deleting an entry from a dialog box.....	33
Editing an object using the shortcut menu.....	33
Editing file system elements.....	34
Configuring multiple interface ports using EDM - Example 1.....	34
Configuring multiple ports using EDM - Example 2.....	35
Graphing statistics.....	35
Getting EDM online help files for embedded EDM.....	36
Downloading help files.....	36

Configuring the path to the help files using ACLI.....	37
Configuring the help file path using EDM.....	37
Chapter 4: Configuration files fundamentals.....	38
ACL configuration files.....	38
Viewing current configuration using ACLI.....	38
Saving current configuration using ACLI.....	38
Saving current configuration to flash memory using ACLI.....	39
Restoring system configuration from TFTP using ACLI.....	39
Downloading a configuration file automatically using ACLI.....	40
Enterprise Device Manager configuration files.....	41
ASCII configuration file management using EDM.....	41
Binary configuration file management using EDM.....	43
Saving current configuration to flash memory manually using EDM.....	45
Chapter 5: Supported standards and Request for Comments.....	46
Standards.....	46
RFCs and MIBs.....	47
Chapter 6: Related Resources.....	50
Support.....	50
Documentation.....	50
Searching a documentation collection.....	51
Subscribing to e-notifications.....	52

Chapter 1: Introduction

Purpose

This document provides information about the Avaya Command Line Interface (ACLI) and Enterprise Device Manager (EDM) for the switch.

Chapter 2: New in this document

The following sections detail what is new in *Using ACLI and EDM on Avaya Ethernet Routing Switch 3500 Series*, NN47203-102.

Features

There is no new feature-related content in this release.

Related links

[New in this document](#) on page 7

Other changes

Fundamentals of Avaya Ethernet Routing Switch 3500 Series is renamed *Using ACLI and EDM on Avaya Ethernet Routing Switch 3500 Series*, NN47203-102 .

Installation information is moved to *Installing Avaya Ethernet Routing Switch 3500 Series*, NN47203-304.

Related links

[New in this document](#) on page 7

Chapter 3: ACLI concepts

Avaya Command Line Interface (ACLI) is a text-based interface that you can use for switch configuration and management. A common command line interface (CLI), ACLI follows the industry standard used for device management across Avaya products.

The command modes within ACLI are listed in order of increasing privileges and each mode is based on the user logon permission level. User logon permission is determined by a logon password as supplied by your system administrator.

You can access ACLI directly through a console connection, remotely through a dial-up modem connection, or in-band through a Telnet session.

You can use ACLI interactively or use the `configure network` command to load and execute ACLI scripts, to manually load the script in the console menu, or to automatically load the script at startup.

ACLI command modes

Avaya Command Line Interface (ACLI) provides the following command modes:

- User EXEC
- Privileged EXEC
- Global Configuration
- Interface Configuration
- Application Configuration

Mode access is determined by access permission levels and password protection.

If no password is set, you can enter ACLI in User EXEC mode and use the `enable` command to move to the next level (Privileged EXEC mode). However, if you have read-only access, you cannot progress beyond User EXEC mode, the default mode. If you have read-write access you can progress from the default mode through all of the available modes.

With sufficient permission, you can use the rules in the following table to move between the command modes.

Table 1: ACLI command modes

Command mode and sample prompt	Entrance commands	Exit commands
User Executive Switch>	No entrance command, default mode	exit or logout
Privileged Executive Switch#	enable	exit or logout
Global Configuration Switch (config)#	From Privileged Executive mode, enter configure terminal	To return to Privileged Executive mode, enter end or exit To exit ACLI completely, enter logout
Interface Configuration Switch (config-if)#	From Global Configuration mode: To configure a port, enter interface fastethernet <port number> To configure a VLAN, enter interface vlan <vlan number> To configure a loopback, enter interface loopback <loopback number>	To return to Global Configuration mode, enter exit To return to Privileged Executive mode, enter end To exit ACLI completely, enter logout
Application Configuration Switch (config-app)#	From Global, or Interface Configuration mode, enter application	To return to Global Configuration mode, enter exit To return to Privileged Executive mode, enter end To exit ACLI completely, enter logout

ACLI access procedures

Before you begin

- Connect to the switch with a console cable, connected directly to the console port, or use Telnet.
- To connect to the switch remotely, through Telnet, ensure that you enable remote access, and that the switch IP address is valid.
- Use a terminal, or computer with a terminal emulator, as the ACLI command station.
- If you use a console cable and console port, ensure that the terminal emulation program conforms to settings listed in the following table.

Property	Value
Baud Rate	9600 bps
Data Bits	8
Stop Bits	1
Parity	None
Flow Control	None
Terminal Protocol	VT100 and VT100/ANSI

Opening an ACLI session

Procedure

1. Connect to the switch.
2. Enter the password, if applicable.
3. At the ACLI Banner Screen, enter `CTRL+Y`.
4. To access ACLI, from the main menu, press **c** or scroll to Command Line Interface.
5. Press **Enter**.

Chapter 3: ACLI help

ACLI help is available at all levels.

ACLI list

From the User EXEC mode, the ACLI list command `show cli list` displays a detailed view of the ACLI commands. Additionally, the verbose command, `show cli list verbose` lists the CLI syntax for each command.

Command list

To obtain a list of all commands available from a prompt, enter a question mark (?).

Command options

To obtain a list of all options for a command, at the prompt enter a portion of a command followed by a space and a question mark (?).

Command names

To obtain a correct command name, at the prompt enter a portion of the command name, and then press the **Tab** key. The system displays the first unambiguous match for your selection. For example, when you enter `down` + **Tab**, the system displays `download`.

Command modes

To obtain a list of ACLI command modes available, enter `help modes`.

Commands organized by mode

To obtain a list of ACLI commands, organized by command mode, enter `help commands`. A short explanation of each command is included.

Keystroke shortcuts

To make using ACLI easier, use the keystroke shortcuts in the following table.

Key combination	Function
Ctrl+A	Start of line
Ctrl+B	Back 1 character
Ctrl+C	Abort command
Ctrl+D	Delete the character indicated by the cursor
Ctrl+E	End of line
Ctrl+F	Forward 1 character

Table continues...

Key combination	Function
Ctrl+H	Delete character left of cursor (Backspace key)
Tab	Command or parameter completion
Ctrl+K and Ctrl+R	Redisplay line
Ctrl+N or Down arrow	Next history command
Ctrl+P or Up arrow	Previous history command
Ctrl+T	Transpose characters
Ctrl+U	Delete entire line
Ctrl+W	Delete word to left of cursor
Ctrl+X	Delete all characters to left of cursor
Ctrl+z	Exit Global Configuration mode to Privileged EXEC mode
?	Context sensitive help
Esc+C and Exc+U	Capitalize character at cursor
Esc+l	Change character at cursor to lower case
Esc+B	Move back 1 word
Esc+D	Delete 1 word to the right
Esc+F	Move 1 word forward

Chapter 3: Enterprise Device Manager concepts

To manage the switch from a centralized location, using Configuration and Orchestration Manager (COM) 2.0 and higher, Avaya offers optional, product-specific EDM plug-ins for COM that include other features such as centralized syslog, trap viewer, troubleshooting and diagnostic tools. For more information, or to purchase plug-ins, go to <http://www.avaya.com/support>.

The following table compares EDM functions in the embedded version to COM plug-in version.

Table 2: EDM functions: embedded version compared to COM plug-in version

EDM functions	Embedded version	Plug-in version
100% device configuration: device view, device-specific configuration	Yes	Yes
Stackable Device Web User Interface features	Yes	No
Centralized off-box multi-user element management: <ul style="list-style-type: none"> • user and device credential manager • user preference • SSO-based user access control • user-based Device Access Control (read only and read-write) • authentication through third party (RADIUS, Microsoft AD, Sun AM) 	No	Yes
Centralized EM plug-in management (downloadable install and uninstall, upgrade, patch, and inventory view)	No	Yes
User activity log and audit trail	No	Yes
Device performance monitoring and polling	Limited	High performance and low latency

Table continues...

EDM functions	Embedded version	Plug-in version
Device-specific single device wizards and template	No	Yes
Centralized syslog and trap viewer	No	Yes
Troubleshooting and diagnostic tools (ping, CLI Manager, path-trace)		

EDM is an embedded application that you can use for single device element management and configuration through a standard Web browser. Because EDM is embedded into Ethernet Routing Switch software, and the switch operates as a Web server, you do not require additional client software.

Tested browsers

EDM has been tested with the following web browsers:

- Microsoft Internet Explorer 11.0
- Mozilla Firefox 45.0.2

Memory requirements

If you install Configuration and Orchestration Manager on a PC to manage your switch, the PC must have at least 500 MB of free disk space.

There are no memory requirements to use EDM through a Web browser.

Online help

Online help is context-sensitive and appears in a separate window in the Web browser.

To obtain help for the current topic, click the **help** button on the toolbar in the work area.

If you are not using EDM through COM, you need to download the help file to a TFTP server and configure the EDM Help file path.

Interface components

This section describes Enterprise Device Manager interface components.

The Enterprise Device Manager window includes the following parts:

- Navigation tree toolbar
- Switch Summary View
- Device Physical View
- EDM window
- Navigation tree
- Menu bar
- Tool bar
- Work area

Switch summary view

The EDM initial view displays a switch summary view in the work area.

The Switch Summary tab displays basic switch information. This information-only display derives from the configuration tab Edit, Chassis, Chassis.

Following is a list of the fields on the Switch Summary tab:

- hardware model
- hardware version
- firmware version
- software version
- system uptime
- system object identifier
- system contact
- system name
- system location

A Stack Information panel appears at the bottom of the switch summary view work area that provides a description of your switch or the units in your switch stack.

This information includes the following:

- Unit number (for stacks) – also lists which unit is the base unit in a stack
- Switch type
- Description

- Running software version

Device Physical View

When you access EDM, the first panel in the work area displays a switch summary view. The tab behind the summary view is a real-time physical view of the front panel of a device or stack called the Device Physical View.

Objects in the Device Physical View are

- a stand-alone switch, called a unit
- a switch stack, called a chassis
- a port

From the Device Physical View you can

- determine the hardware operating status
- select a switch or a port to perform management tasks on specific objects or view fault, configuration, and performance information for specific objects

To select an object, click the object. The system outlines the object in yellow, indicating that the object selected.

The conventions on the device view are similar to the actual switch appearance except that LEDs in Device Physical View do not blink. The LEDs and the ports are color-coded to reflect hardware status. Green indicates the port is up and running; red indicates that the port is disabled.

From the menu bar you can click the Device Physical View tab to open the Device Physical View any time during a session.

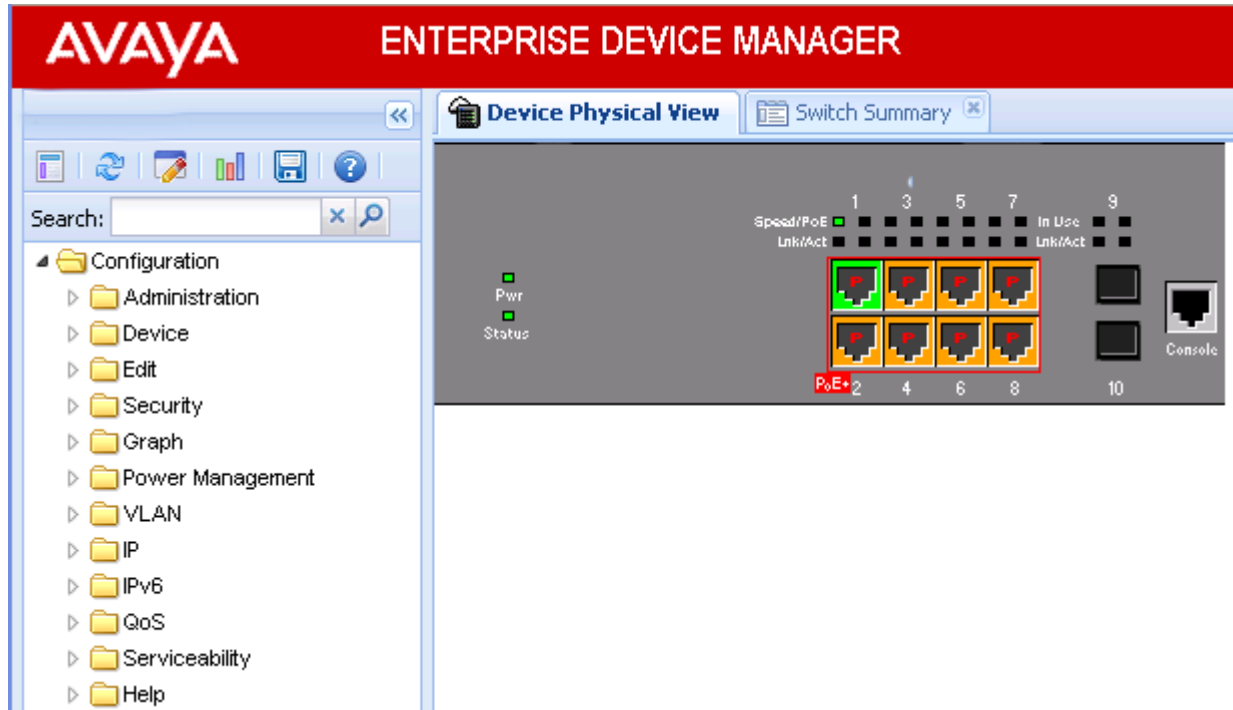


Figure 1: Device Physical View

*** Note:**

Depending on your hardware model, your switch may appear different than the figure shown in this section.

EDM window

The EDM window contains the following parts:

1. navigation tree—the navigation pane on the left side of the window that displays available command folders in a tree format
2. menu bar—the area at the top of the window that displays primary and secondary tabs that you accessed during the session; the tabs remain available until you close them
3. toolbar—the area just below the menu bar that provides quick access to the most common operational commands such as **Apply**, **Refresh**, and **Help**
4. work area—the main area on the right side of the window that displays the dialog boxes where you view or configure switch parameters

*** Note:**

Depending on your hardware model, information displayed may appear different than the figure shown in this section.

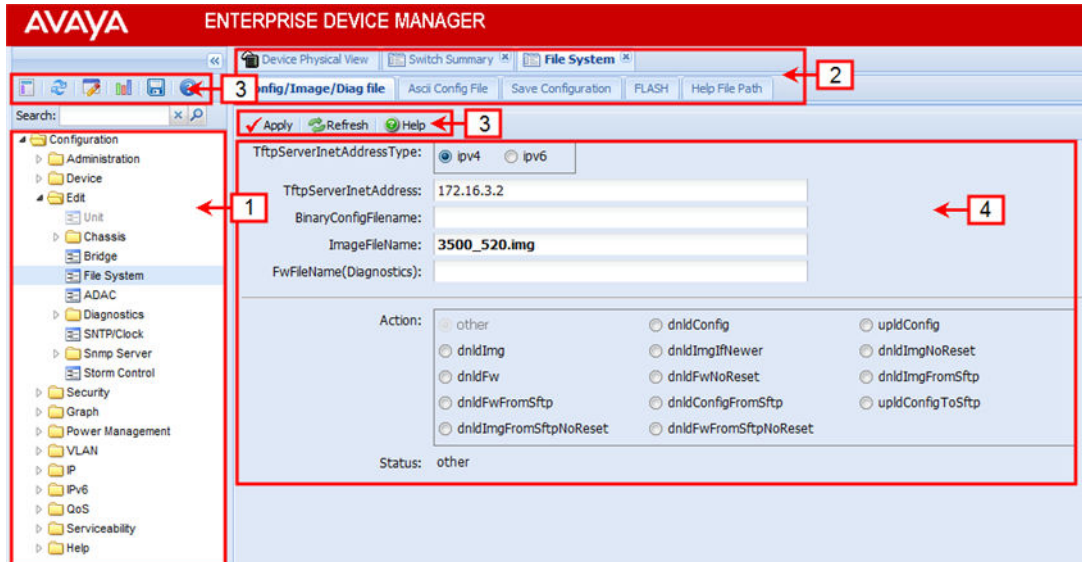


Figure 2: EDM window

Navigation tree

The navigation tree displays available command topics as folders in a tree, as described in the table below.

Table 3: Folders and subfolders in the navigation tree

Folder	Description
Administration	<p>Use the selections in the Administration folder to perform the following functions:</p> <ul style="list-style-type: none"> • Quick Start — sets up IP/Community/VLAN • Remote Access — enables or disables Telnet, SNMP, Web Page, and SSH • Run Script — configures parameters for the switch, according to Avaya best practices. Run Scripts are available for IP Office. • MIB Web Page — performs a MIB Walk
Device	<p>Rediscover Device — Use the Rediscover Device selection to refresh the session.</p> <p>⚠ Caution: All existing tabs are lost.</p>
Edit	<p>Opens edit dialog boxes for the objects selected in the navigation tree. Use the selections in the Edit folder to view or change parameters for the currently-selected object.</p> <ul style="list-style-type: none"> • Unit • Chassis: Chassis, Switch/Stack, Ports, and Environment

Table continues...

Folder	Description
	<ul style="list-style-type: none"> • Bridge • File System • ADAC • Diagnostics: Port Mirrors, Topology, System Log. 802.1AB: LLDP, Port MED, Avaya • SNTP/Clock • Snmp Server: MIB View, User, Community, Host, Notification Control • Storm Control
Security	<p>Use the selections in the Security folder to view or change security settings.</p> <ul style="list-style-type: none"> • General • MAC Security • DHCP Snooping • Dynamic ARP Inspection (DAI) • IP Source Guard (IPSG) • 802.1X/EAP • Web/Telnet/Console • SSH/SSL • RADIUS • TACACS+
Graph	<p>Use the selections in the Graph folder to view statistics and produce graphs of the statistics on the following tabs:</p> <ul style="list-style-type: none"> • Chassis • Port — to view or graph statistics for a port, first select a port on the Device Physical View.
Power Management	<p>The Power Management tab is available only for switches equipped with Power over Ethernet (PoE). Use the tabs associated with the subfolders in the Power Management folder to view and configure Power over Ethernet (PoE) settings and to view and configure Energy Saver settings.</p> <p>Subfolders in the Power Management folder are:</p> <ul style="list-style-type: none"> • PoE • Energy Saver
VLAN	<p>Use the selections in the VLAN folder to configure or view information about the following:</p> <ul style="list-style-type: none"> • VLANs

Table continues...

Folder	Description
	<ul style="list-style-type: none"> • Spanning Tree: Globals, STG, RSTP, MSTP • MLT/LACP • SLPP
IP	<p>Use the selections in the IP folder to set up IP functions on tabs in the following sub-folders:</p> <ul style="list-style-type: none"> • IP • TCP/UDP • IGMP • DHCP Relay • DHCP Server • UDP Forwarding
IPv6	<p>Use the selections in the IPv6 folder to set up IPv6 routing functions on tabs in the following sub-folders:</p> <ul style="list-style-type: none"> • IPv6 • TCP/UDP
QoS	<p>Use the selections in the QoS folder to configure quality of service and set up QoS policies and filters using tabs in the following sub-folders:</p> <ul style="list-style-type: none"> • QoS Devices • QoS Rules • QoS • QoS Agent
Serviceability	<p>Use the selections in the Serviceability folder to navigate to the following sub-folders:</p> <ul style="list-style-type: none"> • RMon for remote monitoring and configuration of <ul style="list-style-type: none"> - Alarms - Control • SLA Mon for Service Level Agreement monitoring
Help	<p>Use the tabs associated with the subfolders in the Help folder to access help and support for the following:</p> <ul style="list-style-type: none"> • Device Manager Basic • Support Portal (Avaya) • Legend: Up, Down, No Link, Standby, Testing, Unmanageable, and Loopback.

To open a folder or sub-folder, you can click the arrowhead to the left of the folder or double-click the folder to display the available commands tabs.

To close a folder, click the arrowhead once.

To access a command tab, double-click the selection in the navigation tree.

Navigation tree toolbar







You can use the toolbar above the navigation tree to perform common functions more easily.

Toolbar:



Figure 3: Toolbar

Following is a description of the toolbar button functions:

Button	Description
	Switch Summary – you can use the Switch Summary toolbar button to open or reopen the switch summary tab
	Refresh Status – in addition to the existing refresh methods you can use the Refresh Status toolbar button to refresh the device status
	Edit Selected – in addition to the existing edit methods, and depending on which object you select on the Device Physical View, you can use this toolbar button to open Edit > Chassis, Edit > Unit, or Edit > Ports tabs. If you do not select an object from the Device Physical View and you click the Edit Select toolbar button, the Edit > Chassis tab opens.
	Graph Selected – depending on which object you select on the Device Physical View, you can use this toolbar button to open Graph > Chassis or Graph > Port tabs. If you do not make a selection on the Device Physical View, or if you select Unit, the Graph > Chassis tab opens.
	Save Config — this button allows you to save the current configuration. A window appears asking if you want to save the configuration: click OK to save the configuration or click Cancel to cancel the Save operation.
	Help Setup Guide – this button connects you to the help setup guide for embedded EDM and it replaces the link that appeared on the top right of work panes.

Under the toolbar is the Search function window. You can use the Search function window to find a specific sub-folder or selection in the navigation tree.

 


Figure 4: Search function window

Enter the sub-folder or selection you are looking in the Search window and click the magnifying glass to perform the search. The navigation tree displays the sub-folder that best matches your search criteria.

Menu bar

The menu bar appears above the work area and consists of two rows of tabs.

The top row displays tabs that were accessed from the navigation tree during the active session. The tabs in this row, called primary tabs, are docked and available to reopen on demand. The docked tabs appear in the sequence that you accessed them.

When you click a primary tab from the menu bar, the associated secondary tabs appear in the second row and the default dialog box appears in the work area. Click any secondary tab to display its associated dialog box.

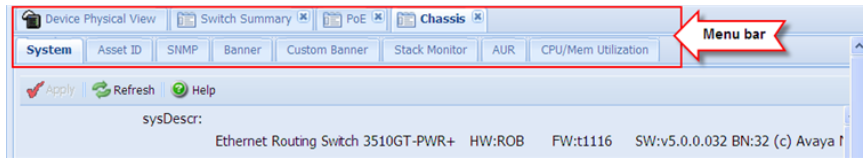


Figure 5: Menu bar

If you want to open a dialog without displacing the current open dialog, you can go to the tab on the menu bar and undock the tab by using your mouse to drag and drop it into the work area. You can drag the dialog box to any location on the screen and you can toggle between the open dialog boxes to compare information and make changes. When you no longer need the undocked tab, you can use the three buttons on the upper right side of the tab to temporarily shrink it, re-dock it, or close it.

In both rows of the menu bar, arrows can appear on the left and right sides when the number of open tabs exceeds the available space. You can use the arrows to scroll to a tab, or you can select the tab from the navigation tree.

To reduce the number of open tabs, you can click the X button on the top right of a tab to close it.

Tool bar

The tool bar, located below the menu bar, contains buttons that provide quick access to commonly used operational commands. Depending on the tab selected, different buttons can appear.

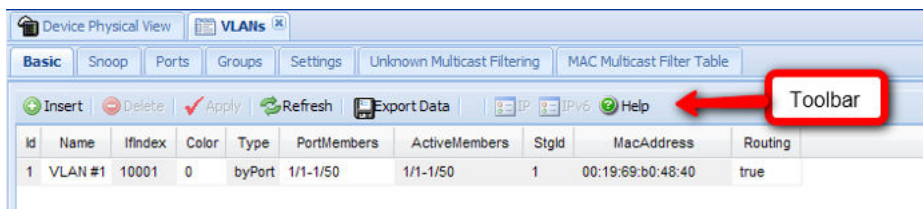


Figure 6: Tool Bar

The following table describes common tool bar buttons.

Table 4: Common tool bar buttons







Button	Name	Description
	Apply	Executes parameter changes

Table continues...

Button	Name	Description
	Refresh	Refreshes screen data
	Help	Displays context-sensitive online help for the current dialog box
	Insert	Opens an insert dialog box Submits the entry from the insert dialog box The insert buttons appear only on panes where you can insert entries.
	Delete	Removes a selected entry
	Cancel	Cancels an operation

Work area

The work area, on the right side of the EDM page, displays the switch Device Physical View and dialog boxes related to the menu selections in the navigation tree. You can use the work area to view and configure switch parameters from the dialog boxes that appear in the work area.

See the following figure for an example of the work area for the File System, Config/Image/Diag file dialog.

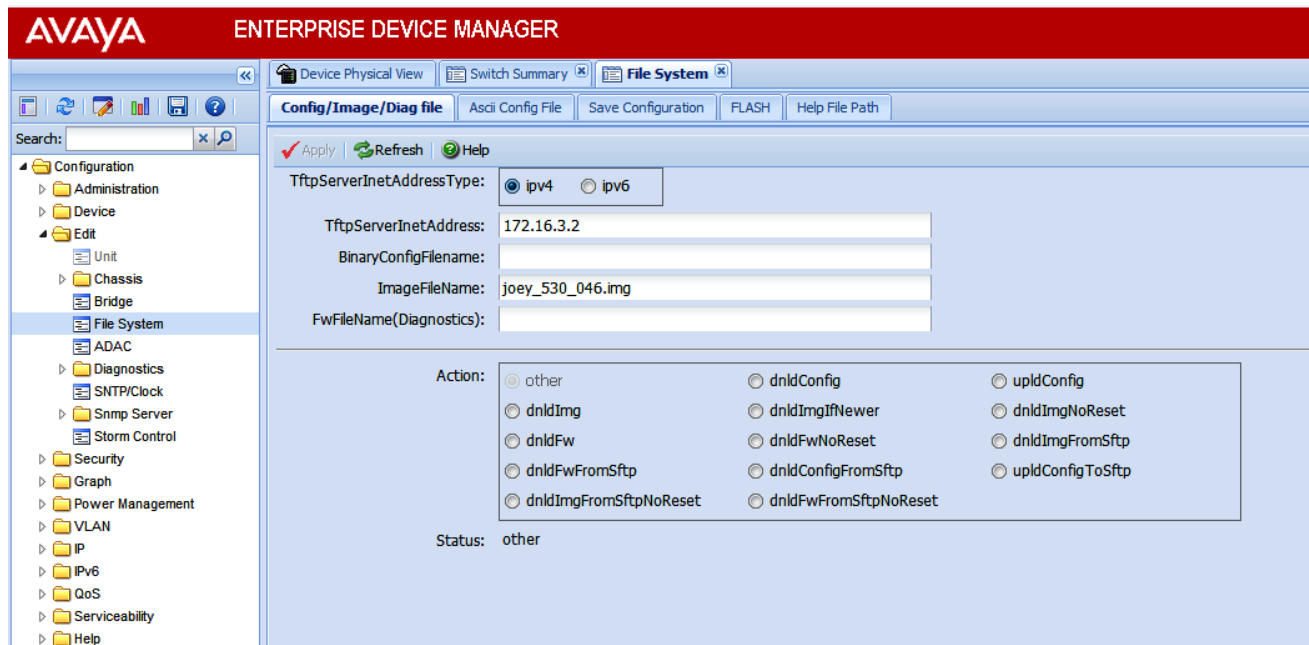


Figure 7: EDM work area

* Note:

Depending on your hardware model, information displayed may appear different than the figure shown in this section.

Single port configuration for EDM

*** Note:**

Depending on your hardware model, information displayed may appear different than the figures shown in this section.

You can apply configuration changes to single ports by using one of the following methods:

- From the Device Physical View, you can right-click a port and select Edit from the drop-down menu, then click the appropriate tab.

The following figure displays the drop-down menu for the selected port in the Device Physical View.

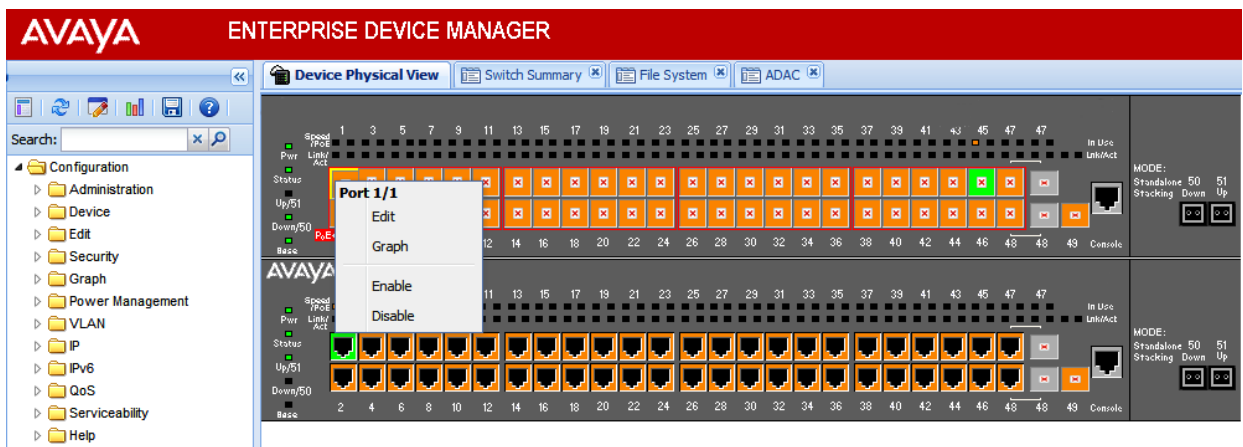


Figure 8: Device Physical View - port edit

The following figure displays the port edit work area with the VLAN tab selected.

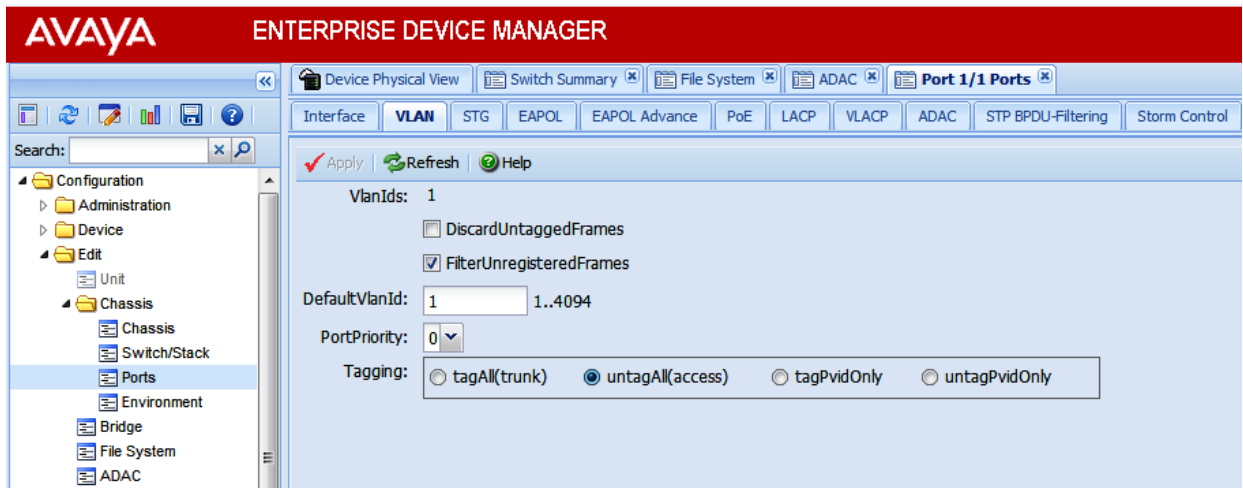


Figure 9: Port edit -VLAN tab

- From the Navigation tree you can select any tab from the Edit, Chassis, Ports work flow and double-click a cell under an editable parameter column heading in the appropriate port row of the table.

The following figure displays the Edit, Chassis, Ports work area with the Interface tab selected.

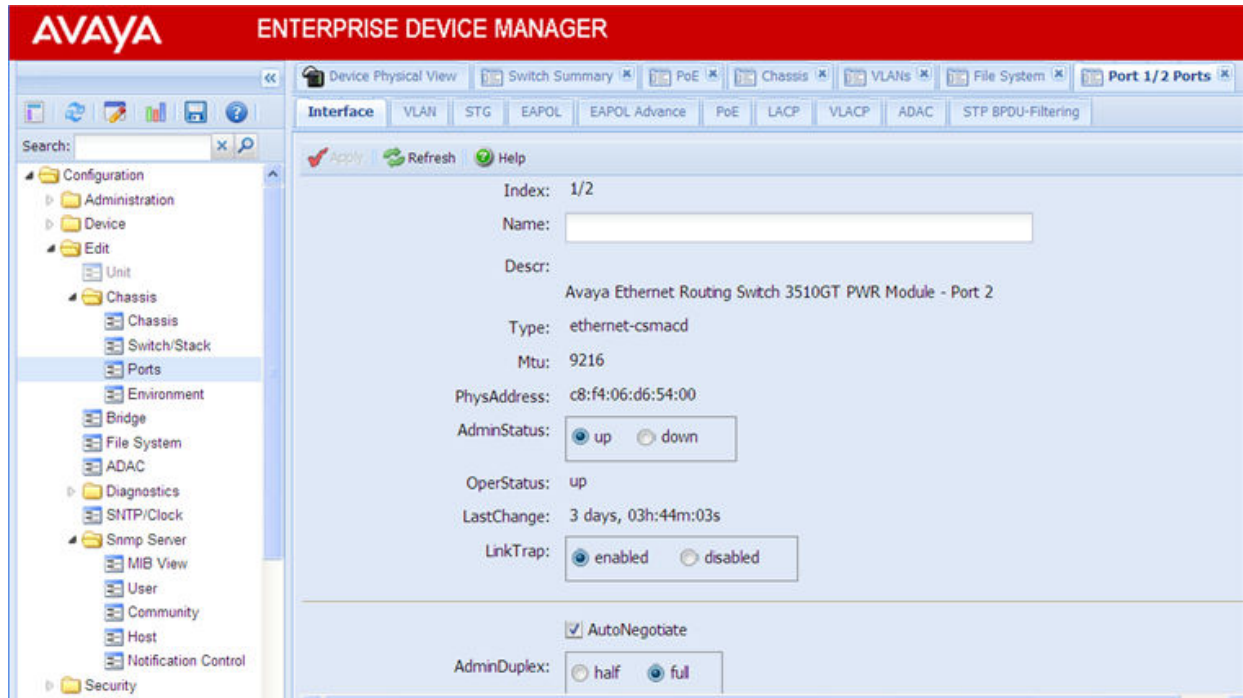


Figure 10: Edit, Chassis, Ports - Interface tab

- From the Navigation tree you can select a port-related tab from a specific, applicable feature work area (for example, VLAN, VLANs, Ports), and double-click a cell under an editable parameter column heading in the appropriate port row of the table.

The following figure displays the VLAN, VLANs, Ports tab work area.

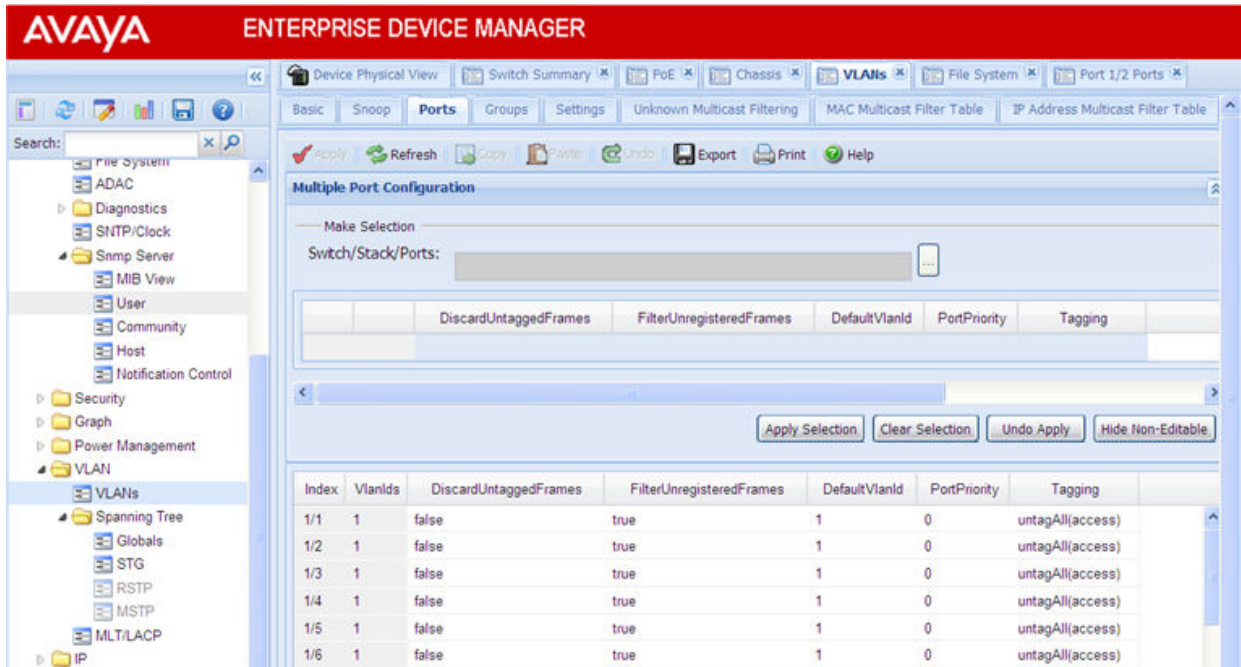


Figure 11: VLAN, VLANs - Ports tab

Multiple Port Configuration for EDM

* Note:

Depending on your hardware model, information displayed may appear different than the figures shown in this section.

When you need to apply the same configuration changes to more than one port, you can use the Multiple Port Configuration function available on all tabs in the Edit, Chassis, Ports work flow, or on port-related tabs for specific, applicable feature work areas (for example, VLAN, VLANs, Ports).

The following sections use the Edit, Chassis, Ports, Interface tab work area to describe the available Multiple Port Configuration functions.

In the work area for any of the Edit, Chassis, Ports tabs, the following two panes appear in the default view:

- Multiple Port Configuration pane—provides port selection for one port, several ports, or all ports, and configurable port parameters
- Tab work pane—displays existing configuration information for the feature and configurable cells for individual ports

With Multiple Port Configuration you can perform the following:

- Hide non-editable fields from the multiple configuration pane so that you choose to view only those fields that can be configured.
- Select an individual port or a group of ports from the Port Editor.

- Select all ports from the Port Editor.
- Double-click any or all of the editable fields to change the configuration parameter.
- Clear your selections.
- Apply your selections.
- Undo the application of your selections.

You can expand or collapse the Multiple Port Configuration pane by clicking the Multiple Port Configuration task bar. The Multiple Port Configuration pane is expanded by default.

The following figure displays the tabs available in the Edit, Chassis, Ports work flow, with the Interface tab selected and the Multiple Port Configuration pane expanded.

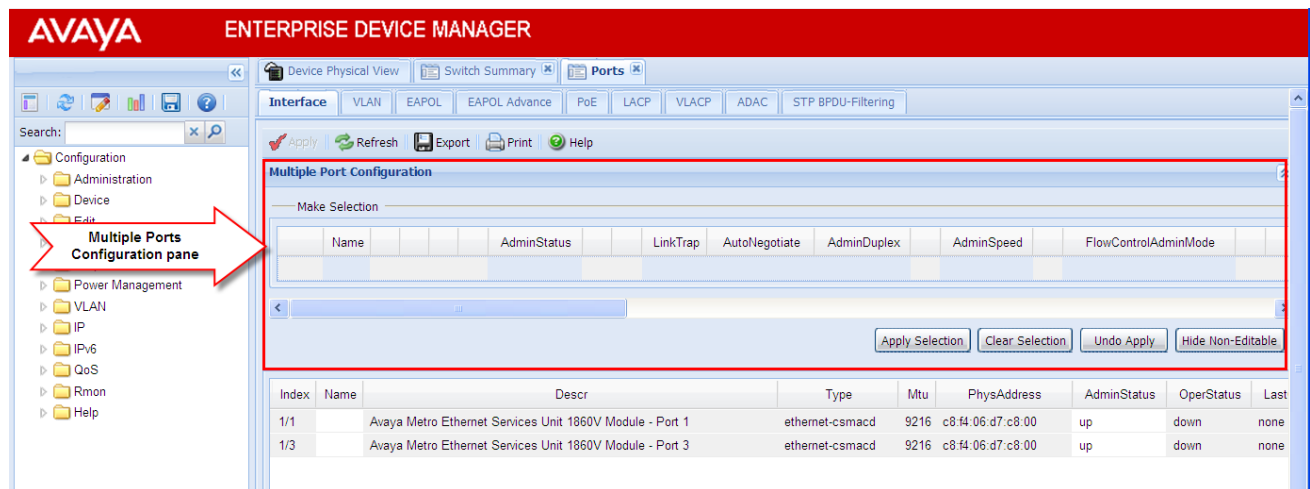


Figure 12: Interface tab — Multiple Port Configuration pane expanded

The following figure displays the Edit, Chassis, Ports, Interface tab with the Multiple Port Configuration pane collapsed.

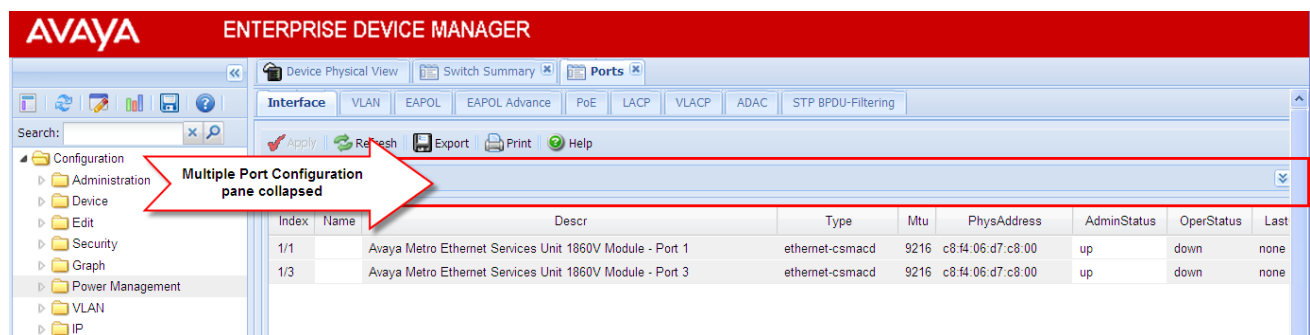


Figure 13: Interface tab — Multiple Port Configuration pane collapsed

Changes you make to a port configuration using Multiple Port Configuration are applied to the switch configuration only after you click **Apply** on the work area toolbar.

The following figure displays the location of the **Apply** button on the work area toolbar.

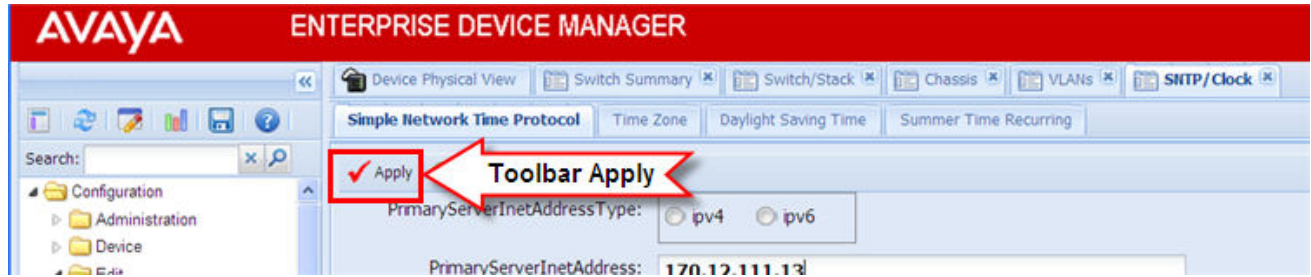


Figure 14: Toolbar Apply button

Chapter 3: Enterprise Device Manager procedures

This section contains procedures for starting and using Enterprise Device Manager (EDM) on your switch. You can use EDM software on the switch; you do not need to install a client-based application on your computer.

Enabling the Web server using ACLI

The Web server is enabled by default. If you have assigned an IP address to the switch you can access EDM.

If you have disabled the Web server, use this procedure to enable and manage the Web server using ACLI. After you enable the Web server you can start EDM. For more information about the Web server, see *Configuring Security on Avaya Ethernet Routing Switch 3500 Series*, NN47203-504.

Procedure

1. Enter Global Configuration mode:

```
enable  
configure terminal
```

2. At the command prompt, enter the following command:

```
web-server enable
```

Disabling the Web server using ACLI

Use this procedure to disable the Web server using ACLI. After you disable the Web server, you cannot start EDM.

Procedure

1. Enter Global Configuration mode:

```
enable  
configure terminal
```

2. At the command prompt, enter the following command:

```
no web-server enable
```

Displaying the Web server status using ACLI

Use the following procedure to display the status of the Web server using ACLI.

Procedure

1. Enter Global Configuration mode:

```
enable  
configure terminal
```

2. At the command prompt, enter the following command:

```
show web-server
```

Starting EDM

To configure and maintain your switch through a Web-based graphical user interface, start EDM.

Before you begin

- Ensure that the switch is running.
- Note the switch IP address.
- Ensure that the Web server is enabled.
- Note the user name.
- Note the password.
- Open one of the supported Web browsers.

Procedure

1. In a supported Web browser, enter the IP address of the switch using one of the following formats:
 - `http://<IP Address>`
 - `https://<IP Address>`
2. Enter the user name.
3. Enter the password.

4. Click **Log On**.

Using shortcut menus

In the EDM Device Physical View you can use shortcut menus to edit objects and apply changes.

Procedure

1. In the **Device Physical View**, select an object.
2. Right-click the object.
3. Select a function from the list.

Shortcut menus field descriptions

Name	Description
Unit	
Edit	Display the Edit unit dialog box and tabs
Refresh	Refreshes switch status
Refresh Port Tooltips	Refreshes the port tooltip data. Port tooltip data contains: Slot/Port, PortName, and PortOperSpeed
Port	
Edit	Displays the Edit port dialog box and tabs
Graph	Displays the graph port dialog box and tabs
Enable	Enables the port administratively
Disable	Shuts down the port administratively

Navigating around EDM

Use the following procedure to navigate around EDM.

Procedure

1. In the navigation pane, click the arrowhead to the left of a folder to display the sub-level folders in the tree.
2. If there is a sub-folder, double-click the folder or click the arrowhead beside it, to open the sub-folder.
3. The primary tabs appear under the folders and sub-folders. Click a tab to open it in the work area.

Undocking tabs

To improve certain types of configuration, you can view more than one tab at a time. To view more than one tab, you use the undock function to activate a previously-opened tab from the menu bar.

! **Important:**

When you undock a tab to make changes, then return to another open tab, in order to see the effects of the changes, you must click the **Refresh** button on the tool bar.

Procedure

1. From the menu bar, drag and drop the tab you want to open.
2. To reposition the tab in the work area, click and drag the title bar of the tab.

Docking tabs

You can re-dock an undocked tab using one of the following methods.

Procedure

To re-dock a tab, do one of the following:

- On the undocked tab, click the dock-back button (the middle button on the top right of the panel)
- On the undocked tab, click the collapse button (left button on the top right of the panel) to temporarily minimize the panel.

Editing a dialog box

Use this procedure to edit a dialog box.

Procedure

1. In the work area, double-click the field you want to edit.
2. Select a value from the list of predetermined values or enter the value for a field without preset values.

! **Important:**

Enter an IP address in decimal format: <xxx> <xxx> <xxx> <xxx>.

Enter a MAC address in hexadecimal format: xx:xx:xx:xx:xx:xx.

Time is a value based on the delta from the switch boot-up time.

3. Click **Apply**.

Inserting an entry in a dialog box

Use this procedure to insert an entry in a dialog box.

Procedure

1. On the tool bar, click **Insert**.
2. Enter changes in the Insert dialog box.
3. Click **Insert** to submit the entry and return to the active tab in the work area.
4. On the toolbar, click **Apply** to commit the change to the configuration. The system refreshes the view and errors display in a browser popup.

Deleting an entry from a dialog box

Use this procedure to delete an entry from a dialog box.

Procedure

1. Highlight the entry.
2. Click **Delete**.

Editing an object using the shortcut menu

You can edit objects in the Device Physical View from the navigation tree or the shortcut menu. Use this procedure to edit an object using the shortcut menu.

About this task

Changes are not applied to the running configuration until you click **Apply**.

Procedure

1. On the Device Physical View, you can
 - right click an object
 - press Ctrl+click to select several objects, then right click
 - click and drag to select a group of objects, then right click
 - click an entire device, then right click
2. From the list, click **Edit**.
3. Edit the applicable tab in the work area.
4. Click **Apply**.

Editing file system elements

Use this procedure to edit file system elements.

Procedure

1. Click the **Edit** arrowhead to open the Edit menu.
2. Double-click **File System** to open the File System tab in the work area.

File System work area field descriptions

The following table describes the tabs in the File System work area.

Tab	Description
Config/Image/Diag file	Use this tab to view information about and acquire image, configuration, and firmware files.
Ascii Config File	Use this tab to acquire ASCII configuration files.
Save Configuration	Use this tab to save the current configuration manually or automatically.

Configuring multiple interface ports using EDM - Example 1

Use this procedure as an example for configuring multiple interface ports using the Multiple Port Configuration function and the **Edit, Chassis, Ports, Interface** work flow.

Before you begin

- Select ports on the Device Physical View.

Procedure

1. In the navigation tree, double-click **Edit**.
2. In the Edit tree, double-click **Chassis**.
3. In the Chassis tree, click **Ports**.
4. Click the **Interface** tab.
5. To change the configuration of the selected ports, in the Multiple Port Configuration pane, double-click the cell beneath the column heading that represents the parameter you want to change and do one of the following:
 - Select a value from a drop-down list.
 - Type a value in the cell.

6. In the Make Selection pane, click **Apply Selection**. The changes appear in the table.
7. On the Interface tab toolbar, click **Apply** to apply the changes to the switch configuration.

Configuring multiple ports using EDM - Example 2

Use this procedure to configure multiple ports using the Multiple Port Configuration functions and the **Security**, **MAC Security**, **AutoLearn** workflow. When you use this workflow you can select ports directly from the Multiple Port Configuration pane on the **Configuration** tab.

Procedure

1. In the navigation tree, double-click **Security**.
2. In the Security tree, double-click **MAC Security**.
3. Click the **AutoLearn** tab.
4. In the work area, in the Make Selection section of the Multiple Port Configuration pane, click the Switch/Stack/Ports ellipsis (...) to open the Port Editor dialog.
5. In the Port Editor window, click the ports you want to configure.

 **Note:**

If you want to configure all ports, click **All**.

6. Click **OK** to return to the Make Selection pane.

The ports you selected appear in the Switch/Stack/Ports box.

7. To change the configuration of the selected ports, in the Multiple Port Configuration pane, double-click the cell beneath the column heading that represents the parameter you want to change and do one of the following:
 - Select a value from a drop-down list.
 - Type a value in the cell.
8. In the Make Selection pane, click **Apply Selection**.

The changes appear in the table.
9. On the **AutoLearn** tab toolbar, click **Apply** to apply the changes to the configuration.

Graphing statistics

You can graph statistics for an entire device, a group of ports, or a single port.

Before you begin

On a Device Physical View select one of the following:

- a port
- a group of ports
- a device

Procedure

1. In the navigation tree, double-click **Graph**.
2. In the Graph tree, select one of the following:
 - **Chassis**
 - **Port**
3. In the work area, select a tab.
4. On the tab, select information to graph. To export the information to another application, on the task bar click **Export Data**.
5. To create the graph, on the task bar, click a graph type.

Getting EDM online help files for embedded EDM

Because help files are not included with the embedded EDM software files on the switch, you need to download the help files to a TFTP destination and use ACLI to configure a path from your switch to the help files.

If you are using COM to manage your switch, help resides with COM and you do not need to use these procedures.

Downloading help files

Use this procedure to download help files.

Before you begin

- An available TFTP server — ensure that the TFTP path differs from the path you use to download switch software

Caution:

Do not install EDM help files on Flash.

Procedure

1. To obtain EDM help files for the embedded element manager, do one of the following:
 - Go to the Avaya Web site <http://support.avaya.com/css/appmanager/public/support> and locate the help file for the appropriate product.

- Select the help file from the software CD ROM contained in the Base Software License Kit.
2. Download the help file to a TFTP server.

Configuring the path to the help files using ACLI

Use this procedure to configure the path to the help files.

Procedure

1. Enter Global Configuration mode:

```
enable  
configure terminal
```

2. At the command prompt, enter the following command:

```
edm help-file-path <path name> <tftp address> <filename>
```

Example

Following is an example of an ACLI EDM help file path:

```
edm help-file-path  
ERS3500_51_Help tftp address 10.100.100.15
```

In the preceding example, ERS3500_51_Help is a folder that contains help files and the folder is located on a TFTP server at the 10.100.100.15 address.

Configuring the help file path using EDM

Use this procedure to configure the path to the help files.

Procedure

1. In the navigation tree, double-click **Edit** or click the Edit arrowhead to open the Edit menu.
2. Click **File System** to open the File System work area.
3. In the work area, click the **Help File Path** tab.
4. In the Path dialog box, enter the path to the help file storage location.

Example

```
tftp://A.B.C.D/file_name
```

Chapter 4: Configuration files fundamentals

This chapter provides fundamental information about working with configuration files.

Configuration files are ASCII text files that allow the administrator to change switch configuration quickly.

Procedures to manage binary configuration files are included in the Enterprise Device Manager section.

ACLI configuration files

You can use ACLI to display, store, and retrieve configuration files, and to save the current configuration.

Viewing current configuration using ACLI

Use this procedure to view the current configuration.

Procedure

1. Enter Privileged EXEC mode:
`enable`
2. At the command prompt, enter the following command:
`show running-config [verbose] [module]`

Saving current configuration using ACLI

Use this procedure to save the current configuration to a specific TFTP server.

Procedure

1. Enter Privileged EXEC mode:
`enable`
2. At the command prompt, enter the following command:

```
copy running-config tftp [address (<A.B.C.D> | <WORD>)] [filename
<WORD>]
```

Variable definitions

The following table describes the parameters for the `copy running-config` command.

Variable	Value
address<A.B.C.D>	Specifies the address of the TFTP server. <ul style="list-style-type: none"> A.B.C.D — specifies the IP address
filename<name>	Specifies the configuration file name.

Saving current configuration to flash memory using ACLI

Use this procedure to save the current configuration to flash memory. Note that the system automatically issues the `copy config nvram` command periodically.

Procedure

1. Enter Privileged EXEC mode:
2. At the command prompt, enter the following command:

```
enable
```

```
copy config nvram
```

*** Note:**

The current configuration can also be saved to Non-Volatile RAM (NVRAM) using the `write memory` command or the `save config` command. Both of these commands are also issued from Privileged EXEC command mode.

Restoring system configuration from TFTP using ACLI

Use this procedure to restore the system configuration from TFTP.

Procedure

1. Enter Privileged EXEC mode:
2. At the command prompt, enter the following command:

```
enable
```

```
copy tftp config address <A.B.C.D> filename <name>
```

Variable definitions

The following table describes the parameters for the `copy tftp config` command.

Variable	Value
address <A.B.C.D>	Specifies the address of the TFTP server. <ul style="list-style-type: none"> A.B.C.D — specifies the IP address
filename <name>	Specifies the configuration file name.

Downloading a configuration file automatically using ACLI

Use this procedure to configure a switch to automatically load a configuration file.

Procedure

1. Enter Privileged EXEC mode:

```
enable
```

2. At the command prompt, enter the following command:

```
configure network load-on-boot {disable | use-bootp | use-config}
address <A.B.C.D> filename <name>
```

Variable definitions

The following table describes the parameters for the `configure network load-on-boot` command.

Variable	Value
load-on-boot { <i>disable</i> <i>use-bootp</i> <i>use-config</i> }	Specifies the setting to automatically load a configuration file when the system starts <ul style="list-style-type: none"> <i>disable</i> — disables the automatic loading of the configuration file <i>use-bootp</i> — specifies loading the ASCII configuration file at startup and using BootP to obtain values for the TFTP address and file name <i>use-config</i> — specifies loading the ASCII configuration file at startup and using the locally configured values for the TFTP address and file name <p>If you omit the variables, the system immediately downloads and runs the ASCII configuration file.</p>
address <A.B.C.D>	Specifies the address of the TFTP server. <ul style="list-style-type: none"> A.B.C.D — specifies the IP address
filename <name>	Specifies the configuration file name.

Enterprise Device Manager configuration files

You can use Enterprise Device Manager procedures in the following sections to:

- store the current switch ASCII configuration on a TFTP server
- retrieve an ASCII configuration file from a TFTP server to apply to a switch
- store a binary configuration file from a TFTP server
- retrieve a binary configuration file from a TFTP server
- manually save the current configuration to flash memory
- designate a configuration to download automatically at switch startup

ASCII configuration file management using EDM

Use the following procedure to manage ASCII configuration files.

Storing current ASCII configuration on a TFTP server using EDM

Use this procedure to store the current ASCII configuration on a TFTP server.

Procedure

1. In the navigation tree, double-click **Edit** to open the Edit tree.
2. Double-click **File System**.
3. Click the **Ascii Config File** tab.
4. In **TftpServerInetAddressType** choose the TFTP server internet address type.
5. In **TftpServerInetAddress**, enter the TFTP server IP address.
6. In **AsciiConfigFilename**, enter the configuration file name.
7. In **AsciiConfigManualUpload**, choose **uploadNow**.
8. On the toolbar, click **Apply**.

ASCII Config File field descriptions

The following table describes the fields on the Ascii Config File tab.

Name	Description
TftpServerInetAddressType	Specifies the IP version of the TFTP server address.
TftpServerInetAddress	Specifies the TFTP server IP address.
AsciiConfigFilename	Specifies the name of the ASCII configuration file.
AsciiConfigManualUpload	uploadNow — Initiates manual configuration upload

Downloading an ASCII configuration from a TFTP server using EDM

Use this procedure to download an ASCII configuration from a TFTP server.

Procedure

1. In the navigation tree, double-click **Edit** to open the Edit tree.
2. Double-click **File System**.
3. Click the **Ascii Config File** tab.
4. In **TftpServerInetAddressType**, choose the TFTP server internet address type .
5. In TftpServerInetAddress, enter the TFTP server IP address.
6. In AsciiConfigFilename, enter the configuration file name.
7. In AsciiConfigManualDownload, choose **downloadNow**.
8. On the toolbar, click **Apply**.

ASCII Config File field descriptions

The following table describes the fields on the Ascii Config File tab.

Name	Description
TftpServerInetAddressType	Specifies the IP version of the TFTP server address.
TftpServerInetAddress	Specifies the TFTP server IP address.
AsciiConfigFilename	Specifies the name of the ASCII configuration file.
AsciiConfigManualDownload	downloadNow — Initiates manual configuration download

Downloading a configuration file automatically using EDM

Use this procedure to download a configuration file automatically.

Procedure

1. In the navigation tree, double-click **Edit** to open the Edit tree.
2. Double-click **File System**.
3. Click the **Ascii Config File** tab.
4. In **TftpServerInetAddressType**, choose the TFTP server internet address type .
5. In AsciiConfigFilename, enter the configuration file name.
6. In AsciiConfigAutoDownload,, choose the automatic download source — either **useBootp**, to specify loading the ASCII configuration file at system start and using Bootp to obtain values for the TFTP address and file name, or use **useConfig**, to specify loading the ASCII configuration file at system start and using the locally configured values for the TFTP address and file name.
7. On the toolbar, click **Apply**.

ASCII Config File field descriptions

The following table describes the fields on the Ascii Config File tab.

Name	Description
TftpServerInetAddressType	Specifies the IP version of the TFTP server address.
TftpServerInetAddress	Specifies the TFTP server IP address.
AsciiConfigFilename	Specifies the name of the ASCII configuration file.
AsciiConfigAutoDownload	<ul style="list-style-type: none"> • disabled — Disabled automatic loading of ASCII configuration file at startup • useBootp — Specifies loading the ASCII configuration file at startup and using BootP to obtain values for the TFTP address and file name • useConfig — Specifies loading the ASCII configuration file at startup and using the locally configured values for the TFTP address and file name
AsciiConfigAutoDldStatus	Displays the configuration automatic download status

Binary configuration file management using EDM

Use the following procedures to manage binary configuration files.

Storing a binary configuration file on a TFTP server using EDM

Use this procedure to store a binary configuration file on a TFTP server.

Procedure

1. In the navigation tree, double-click **Edit** to open the Edit menu.
2. Double-click **File System**.
3. Click the **Config/Image/Diag file** tab.
4. In **TftpServerInetAddressType**, choose the TFTP server internet address type .
5. In **TftpServerInetAddress**, enter the TFTP server IP address.
6. In **BinaryConfigFilename**, enter the configuration file name.
7. In **Action**, select **upldConfig**.
8. On the toolbar, click **Apply**.

Config Image Diag file tab field descriptions

The following table describes the fields on the Config/Image/Diag file tab.

Name	Description
TftpServerInetAddressType	Specifies the IP version of the TFTP server address.

Table continues...

Name	Description
TftpServerInetAddress	Specifies the TFTP server IP address.
BinaryConfigFilename	Specifies the name of the binary configuration file.
Action	<ul style="list-style-type: none"> • dnldConfig—Downloads a configuration file to the switch. • upldConfig—Uploads a configuration file to the switch from a designated location. • dnldImg—Downloads a new software image to the switch. • dnldImgIfNewer—Downloads a new software image to the switch only if it is newer than the current image. • dnldImgNoReset—Downloads a new software image to the switch without a switch reset. • dnldFW—Downloads a new diagnostic software image to the switch. • dnldFwNoReset—Downloads a new diagnostic software image to the switch without a switch reset.
Status	Displays the status of the most recent action since the last switch restart.

Downloading a binary configuration file on a TFTP server using EDM

Use this procedure to download a binary configuration file on a TFTP server.

Procedure

1. In the navigation tree, double-click **Edit** to open the Edit menu.
2. Double-click **File System**.
3. Click the **Config/Image/Diag file** tab.
4. In **TftpServerInetAddress**, enter the TFTP server IP address.
5. In **BinaryConfigFilename**, enter the configuration file name.
6. In **Action**, select **dnldConfig**.
7. On the toolbar, click **Apply**.

Config Image Diag file tab field descriptions

The following table describes the fields on the Config/Image/Diag file tab.

Name	Description
TftpServerInetAddressType	Specifies the IP version of the TFTP server address.

Table continues...

Name	Description
TftpServerIpAddress	Specifies the TFTP server IP address.
BinaryConfigFilename	Specifies the name of the binary configuration file.
Action	<ul style="list-style-type: none"> • dnldConfig—Downloads a configuration file to the switch. • upldConfig—Uploads a configuration file to the switch from a designated location. • dnldImg—Downloads a new software image to the switch. • dnldImgIfNewer—Downloads a new software image to the switch only if it is newer than the current image. • dnldImgNoReset—Downloads a new software image to the switch without a switch reset. • dnldFW—Downloads a new diagnostic software image to the switch. • dnldFwNoReset—Downloads a new diagnostic software image to the switch without a switch reset.

Saving current configuration to flash memory manually using EDM

Use this procedure to save the current configuration to flash memory manually.

Procedure

1. In the navigation tree, double-click **Edit** to open the Edit tree.
2. Double-click **File System**.
3. Choose Save Configuration.
4. Deselect **AutosaveToNvramEnabled** — this option is enabled by default.
5. In **Action**, choose **copyConfigToNvram**.
6. On the toolbar, click **Apply**.

Chapter 5: Supported standards and Request for Comments

This chapter lists the Supported standards and Request for Comments (RFCs) supported.

Standards

The standards in the following list are supported on the switch:

- IEEE 802.1AB (Link Layer Discovery Protocol (LLDP) and LLDP-Media Endpoint Discover (LLDP-MED))
- IEEE 802.1Q (VLANs)
- IEEE 802.1p (Priority Queues)
- IEEE 802.1D (Spanning Tree)
- IEEE 802.1w (Rapid Spanning Tree)
- IEEE 802.1s (Multiple Spanning Tree Groups)
- IEEE 802.1X (Extensible Authentication Protocol (EAP))
- IEEE 802.3 (10BASE-T/100BASE-TX)
- IEEE 802.3u (100BASE-T (ANSI) Auto-Negotiation)
- IEEE 802.3x (Pause Frames / Flow Control)
- IEEE 802.3z (1000BASE-X)
- IEEE 802.3ab (1000BASE-T)
- IEEE 802.3ad (Link Aggregation Control Protocol (LACP))
- IEEE 802.3aq (10GBASE-LRM 10 Gbit/s Ethernet over fiber)
- IEEE 802.3at (Power over Ethernet plus— PoE+ (32W))

RFCs and MIBs

For more information about networking concepts, protocols, and topologies, consult the following RFCs and MIBs:

- RFC 783 Trivial File Transfer Protocol (TFTP)
- RFC 791/ 950 Internet Protocol (IP)
- RFC 792 Internet Control Message Protocol (ICMP)
- RFC 826 Address Resolution Protocol (ARP)
- RFC 854 Telnet Server and Client
- RFC 951/ 1542 (BOOTP)
- RFC 1112 Internet Group Management Protocol v1 (IGMPv1)
- RFC 1213 MIB-II
- RFC 1215 SNMP Traps Definition
- RFC 1271 / 1757 / 2819 RMON
- RFC 1361 / 1769 Simple Network Time Protocol (SNTP)
- RFC 1493 (Bridge MIB)
- RFC 1573 / 2863 Interface MIB
- RFC 1643 / 2665 Ethernet MIB
- RFC 1905 / 3416 SNMP
- RFC 1906 / 3417 SNMP Transport Mappings
- RFC 1907 / 3418 SNMP MIB
- RFC 1945 HTTP v1.0
- RFC 1981 Path MTU Discovery for IPv6
- RFC 2011 SNMP v2 MIB for IP
- RFC 2012 SNMP v2 MIB for TCP
- RFC 2013 SNMP v2 MIB for UDP
- RFC 2131 DHCP Client
- RFC 2132 DHCP Options 6, 43 & 60
- RFC 2138 RADIUS
- RFC 2236 Internet Group Management Protocol v2 (IGMPv2)
- RFC 2460 Internet Protocol v6 (IPv6) Specification
- RFC 2461 Neighbor Discovery for IPv6
- RFC 2462 Auto-configuration of link local addresses
- RFC 2464 Ipv6 over Ethernet

Supported standards and Request for Comments

- RFC 2474 Differentiated Services Support
- RFC 2570 / 3410 SNMPv3
- RFC 2571 / 3411 SNMP Frameworks
- RFC 2572 / 3412 SNMP Message Processing
- RFC 2573 / 3413 SNMPv3 Applications
- RFC 2574 / 3414 SNMPv3 USM
- RFC 2575 / 3415 SNMPv3 VACM
- RFC 2576 / 3584 Co-existence of SNMP v1/v2/v3
- RFC 2616 HTTP
- RFC 2660 HTTPS (Secure Web)
- RFC 2665 Ethernet MIB
- RFC 2674 Q-Bridge MIB
- RFC 2737 Entity MIBv2
- RFC 2819 RMON MIB
- RFC 2863 Interfaces Group MIB
- RFC 2866 RADIUS Accounting
- RFC 2869 RADIUS Extensions (interim updates)
- RFC 3046 (& 5010) DHCP option 82, Relay Agent Information Option
- RFC 3058 RADIUS Authentication
- RFC 3361 DHCP option 120 SIP Servers
- RFC 3376 Internet Group Management Protocol v3 (IGMPv3)
- RFC 3484 Default Address Selection for IPv6
- RFC 3576 RADIUS Change of Authorization
- RFC 3596 DNS Extensions for IPv6
- RFC 3879 Deprecating Site Local Addresses
- RFC 4007 Scoped Address Architecture
- RFC 4022 MIB for TCP
- RFC 4113 MIB for UDP
- RFC 4193 Unique Local IPv6 Unicast Addresses
- RFC 4252 SSH
- RFC 4291 IPv6 Addressing Architecture
- RFC 4293 MIB for IP
- RFC 4301 Security Architecture for the Internet Protocol

- RFC 4432 SSHv2 RSA
- RFC 4443 Internet Control Message Protocol (ICMPv6) Update to RFC 2463
- RFC 4675 RADIUS Attributes for VLAN and Priority Support
- RFC 4861 Neighbor Discovery for IPv6
- RFC 4862 IPv6 Stateless Address Autoconfig
- RFC 5095 Deprecation of Type 0 Routing Headers in IPv6
- RFC 5859 TFTP Server DHCP option

Chapter 6: Related Resources

Support

Go to the Avaya Support website at <http://support.avaya.com> for the most up-to-date documentation, product notices, and knowledge articles. You can also search for release notes, downloads, and resolutions to issues. Use the online service request system to create a service request. Chat with live agents to get answers to questions, or request an agent to connect you to a support team if an issue requires additional expertise.

Documentation

See *Documentation Reference for Avaya Ethernet Routing Switch 3500 Series*, NN47203-101 for a list of the documentation for this product.

For more information about new features of the switch and important information about the latest release, see *Release Notes for Avaya Ethernet Routing Switch 3500 Series*, NN47203-400.

For more information about how to configure security, see *Configuring Security on Avaya Ethernet Routing Switch 3500 Series*, NN47203-504.

For the current documentation, see the Avaya Support website: www.avaya.com/support.

Training

Ongoing product training is available. For more information or to register, see <http://avaya-learning.com/>.

Enter the course code in the **Search** field and click **Go** to search for the course.

Course code	Course title
8D00020E	Stackable ERS and VSP Products Virtual Campus Offering

Viewing Avaya Mentor videos

Avaya Mentor videos provide technical content on how to install, configure, and troubleshoot Avaya products.

About this task

Videos are available on the Avaya Support website, listed under the video document type, and on the Avaya-run channel on YouTube.

Procedure

- To find videos on the Avaya Support website, go to <http://support.avaya.com> and perform one of the following actions:
 - In **Search**, type `Avaya Mentor Videos` to see a list of the available videos.
 - In **Search**, type the product name. On the Search Results page, select **Video** in the **Content Type** column on the left.
- To find the Avaya Mentor videos on YouTube, go to www.youtube.com/AvayaMentor and perform one of the following actions:
 - Enter a key word or key words in the **Search Channel** to search for a specific product or topic.
 - Scroll down Playlists, and click the name of a topic to see the available list of videos posted on the website.

 **Note:**

Videos are not available for all products.

Searching a documentation collection

On the Avaya Support website, you can download the documentation library for a specific product and software release to perform searches across an entire document collection. For example, you can perform a single, simultaneous search across the collection to quickly find all occurrences of a particular feature. Use this procedure to perform an index search of your documentation collection.

Before you begin

- Download the documentation collection zip file to your local computer.
- You must have Adobe Acrobat or Adobe Reader installed on your computer.

Procedure

1. Extract the document collection zip file into a folder.
2. Navigate to the folder that contains the extracted files and open the file named `<product_name_release>.pdx`.

3. In the Search dialog box, select the option **In the index named <product_name_release>.pdx**.
4. Enter a search word or phrase.
5. Select any of the following to narrow your search:
 - Whole Words Only
 - Case-Sensitive
 - Include Bookmarks
 - Include Comments
6. Click **Search**.

The search results show the number of documents and instances found. You can sort the search results by Relevance Ranking, Date Modified, Filename, or Location. The default is Relevance Ranking.

Subscribing to e-notifications

Subscribe to e-notifications to receive an email notification when documents are added to or changed on the Avaya Support website.

About this task

You can subscribe to different types of general notifications, for example, Product Correction Notices (PCN), which apply to any product or a specific product. You can also subscribe to specific types of documentation for a specific product, for example, Application & Technical Notes for Virtual Services Platform 7000.

Procedure

1. In an Internet browser, go to <https://support.avaya.com>.
2. Type your username and password, and then click **Login**.
3. Under **My Information**, select **SSO login Profile**.
4. Click **E-NOTIFICATIONS**.
5. In the GENERAL NOTIFICATIONS area, select the required documentation types, and then click **UPDATE**.

GENERAL NOTIFICATIONS
1/5 Notifications Selected

End of Sale and/or Manufacturer Support Notices	<input type="checkbox"/>
Product Correction Notices (PCN)	<input checked="" type="checkbox"/>
Product Support Notices	<input type="checkbox"/>
Security Advisories	<input type="checkbox"/>
Services Support Notices	<input type="checkbox"/>

UPDATE >>

6. Click **OK**.
7. In the **PRODUCT NOTIFICATIONS** area, click **Add More Products**.

PRODUCT NOTIFICATIONS Add More Products

Show Details **1 Notices**

8. Scroll through the list, and then select the product name.
9. Select a release version.
10. Select the check box next to the required documentation types.

Related Resources

The image shows a web interface with two main panels. The left panel, titled "PRODUCTS" with a "My Notifications" link, contains a list of products: Virtual Services Platform 7000, Virtualization Provisioning Service, Visual Messenger™ for OCTEL® 250/350, Visual Vectors, Visualization Performance and Fault Manager, Voice Portal, Voice over IP Monitoring, W310 Wireless LAN Gateway, WLAN 2200 Series, and WLAN Handset 2200 Series. The right panel, titled "VIRTUAL SERVICES PLATFORM 7000", features a "Select a Release Version" dropdown menu set to "All and Future". Below this are several checkboxes: "Administration and System Programming" (unchecked), "Application Developer Information" (unchecked), "Application Notes" (unchecked), "Application and Technical Notes" (checked), "Declarations of Conformity" (unchecked), and "Documentation Library" (checked). A red "SUBMIT >>" button is located at the bottom right of the right panel.

11. Click **Submit**.