



# Avaya Fabric Orchestrator

Release 1.0  
NN48100-102 (A-852078)  
Issue 01.02  
December 2015

## Getting started and locating the latest software and release notes for Avaya Fabric Orchestrator

This document ships with Avaya Fabric Orchestrator (AFO) components. Avaya recommends that you check the Avaya Support Web site for the latest Avaya Fabric Orchestrator software release.

Avaya also recommends that you read the following documents before you install and configure Avaya Fabric Orchestrator:

- *Deploying Avaya Fabric Orchestrator*, NN48100–101– Provides instructions to perform initial provisioning and basic configuration of Avaya Fabric Orchestrator (AFO).
- *Administration using Avaya Fabric Orchestrator*, NN48100–600– Provides instructions to perform configuration, initial administration of Avaya Fabric Orchestrator (AFO).

For the current documentation and software, see the Avaya Support web site: [www.avaya.com/support](http://www.avaya.com/support).

## Getting started

This section provides information and instructions to install and commission a factory-supplied Avaya Fabric Orchestrator (AFO) appliance.

### Before you begin

- Read *HP ProLiant DL360 Gen9 Server* setup overview information. For more pre-installation information, see the *HP ProLiant DL360 Gen9 Server User Guide*.
- Ensure that you have the following :
  - Minimum two network cables
  - Monitor
  - Keyboard

## Procedure

1. Unpack the appliance, locate the materials, and verify the package content with the documentation that ships with the appliance.
2. Perform installation of the appliance as per the *HP Setup Information*.
3. Verify power supply unit (PSU) specifications.

 **Caution:**

To protect the appliance against ESD damage, do the following before you connect the data cables:

- Use antistatic wrist straps. Ensure that the strap has good skin contact. Do not remove the wrist or ankle strap until the installation is complete.
  - Ensure that you properly ground work surfaces and equipment racks.
  - Avoid contact between equipment and clothing.
  - Avoid touching the connector pins.
4. Connect the AC power cord to the back of the appliance, and then plug the other end of the cord into an AC power outlet.

 **Warning:**

You must use a power cord set approved for the appliance and the power receptacle type in your country.

5. Connect the Ethernet cable and integrated lights out (iLO) to the network ports.

 **Note:**

It is mandatory to connect the Network Interface Card (NIC1) to the first network port.

6. Press the Power On button.
7. Check the front- panel LEDs as the appliance powers on to be sure the LED is lit. If the power supply LEDs do not light up, turn off the power switch to diagnose the problem, or replace the failed power supply.

If the problem persists, contact the Avaya Technical Solutions Center.

## Next steps

Configure AFO on the appliance. See *Deploying Avaya Fabric Orchestrator*, NN48100–101, for more information.