

Monitoring Performance on VSP Operating System Software

© 2017, Extreme Networks, Inc. All Rights Reserved.

Notice

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Extreme Networks, Inc. assumes no liability for any errors. Extreme Networks, Inc. reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

Documentation disclaimer

"Documentation" means information published in varying mediums which may include product information, operating instructions and performance specifications that are generally made available to users of products. Documentation does not include marketing materials. Extreme Networks shall not be responsible for any modifications, additions, or deletions to the original published version of Documentation unless such modifications, additions, or deletions were performed by or on the express behalf of Extreme Networks. End User agrees to indemnify and hold harmless Extreme Networks, Extreme Networks' agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

Link disclaimer

Extreme Networks is not responsible for the contents or reliability of any linked websites referenced within this site or Documentation provided by Extreme Networks. Extreme Networks is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Extreme Networks does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warrantv

Extreme Networks provides a limited warranty on Extreme Networks hardware and software. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Extreme Networks' standard warranty language, as well as information regarding support for this product while under warranty is available to Extreme Networks customers and other parties through the Extreme Networks Support website: http://www.extremenetworks.com/support under the link ""Policies" or such successor site as designated by Extreme Networks. Please note that if You acquired the product(s) from an authorized Extreme Networks Channel Partner outside of the United States and Canada, the warranty is provided to You by said Extreme Networks Channel Partner and not by Extreme Networks.

"Hosted Service" means an Extreme Networks hosted service subscription that You acquire from either Extreme Networks or an authorized Extreme Networks Channel Partner (as applicable) and which is described further in Hosted SAS or other service description documentation regarding the applicable hosted service. If You purchase a Hosted Service subscription, the foregoing limited warranty may not apply but You may be entitled to support services in connection with the Hosted Service as described further in your service description documents for the applicable Hosted Service. Contact Extreme Networks or Extreme Networks Channel Partner (as applicable) for more information.

Hosted Service

THE FOLLOWING APPLIES ONLY IF YOU PURCHASE AN EXTREME NETWORKS HOSTED SERVICE SUBSCRIPTION FROM EXTREME NETWORKS OR AN EXTREME NETWORKS CHANNEL PARTNER (AS APPLICABLE), THE TERMS OF USE FOR HOSTED SERVICES ARE AVAILABLE ON THE EXTREME NETWORKS WEBSITE, https://extremeportal.force.com OR SUCH SUCCESSOR SITE AS DESIGNATED BY EXTREME NETWORKS, AND ARE APPLICABLE TO ANYONE WHO ACCESSES OR USES THE HOSTED SERVICE. BY ACCESSING OR USING THE HOSTED SERVICE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE DOING SO (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THE TERMS OF USE. IF YOU ARE ACCEPTING THE TERMS OF USE ON BEHALF A COMPANY OR OTHER LEGAL ENTITY, YOU

REPRESENT THAT YOU HAVE THE AUTHORITY TO BIND SUCH ENTITY TO THESE TERMS OF USE. IF YOU DO NOT HAVE SUCH AUTHORITY, OR IF YOU DO NOT WISH TO ACCEPT THESE TERMS OF USE, YOU MUST NOT ACCESS OR USE THE HOSTED SERVICE OR AUTHORIZE ANYONE TO ACCESS OR USE THE HOSTED SERVICE.

Licenses

THE SOFTWARE LICENSE TERMS AVAILABLE ON THE EXTREME NETWORKS WEBSITE, https://extremeportal.force.com OR SUCH SUCCESSOR SITE AS DESIGNATED BY EXTREME NETWORKS, ARE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS EXTREME NETWORKS SOFTWARE, PURCHASED FROM EXTREME NETWORKS, INC., ANY EXTREME NETWORKS AFFILIATE, OR AN EXTREME NETWORKS CHANNEL PARTNER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH EXTREME NETWORKS OR AN EXTREME NETWORKS CHANNEL PARTNER. UNLESS OTHERWISE AGREED TO BY EXTREME NETWORKS IN WRITING. EXTREME NETWORKS DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN EXTREME NETWORKS, AN EXTREME NETWORKS AFFILIATE OR AN EXTREME NETWORKS CHANNEL PARTNER; EXTREME NETWORKS RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND EXTREME NETWORKS, INC. OR THE APPLICABLE EXTREME NETWORKS AFFILIATE ("EXTREME NETWORKS").

Extreme Networks grants You a license within the scope of the license types described below. Where the order documentation does not expressly identify a license type, the applicable license will be a Designated System License as set forth below in the Designated System(s) License (DS) section as applicable. The applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the documentation or other materials available to You. "Software" means computer programs in object code, provided by Extreme Networks or an Extreme Networks Channel Partner, whether as stand-alone products, pre-installed on hardware products, and any upgrades, updates, patches, bug fixes, or modified versions thereto. "Designated Processor" means a single stand-alone computing device. "Server" means a set of Designated Processors that hosts (physically or virtually) a software application to be accessed by multiple users. "Instance" means a single copy of the Software executing at a particular time: (i) on one physical machine; or (ii) on one deployed software virtual machine ("VM") or similar deployment.

License type(s)

Designated System(s) License (DS). End User may install and use each copy or an Instance of the Software only: 1) on a number of Designated Processors up to the number indicated in the order; or 2) up to the number of Instances of the Software as indicated in the order, Documentation, or as authorized by Extreme Networks in writing. Extreme Networks may require the Designated Processor(s) to be identified in the order by type, serial number, feature key, Instance, location or other specific designation, or to be provided by End User to Extreme Networks through electronic means established by Extreme Networks specifically for this purpose.

Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation, Software, Hosted Service, or hardware provided by Extreme Networks. All content on this site, the documentation, Hosted Service, and the product provided by Extreme Networks including the selection, arrangement and design of the content is owned either by Extreme Networks or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part,

including any code and software unless expressly authorized by Extreme Networks. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Extreme Networks can be a criminal, as well as a civil offense under the applicable law.

Virtualization

The following applies if the product is deployed on a virtual machine. Each product has its own ordering code and license types. Note, unless otherwise stated, that each Instance of a product must be separately licensed and ordered. For example, if the end user customer or Extreme Networks Channel Partner would like to install two Instances of the same type of products, then two products of that type must be ordered.

Third Party Components

"Third Party Components" mean certain software programs or portions thereof included in the Software or Hosted Service may contain software (including open source software) distributed under third party agreements ("Third Party Components"), which contain terms regarding the rights to use certain portions of the Software ("Third Party Terms"). As required, information regarding distributed Linux OS source code (for those products that have distributed Linux OS source code) and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply is available in the products, Documentation or on Extreme Networks' website at:http://www.extremenetworks.com/support/policies/software licensing or such successor site as designated by Extreme Networks. The open source software license terms provided as Third Party Terms are consistent with the license rights granted in these Software License Terms, and may contain additional rights benefiting You, such as modification and distribution of the open source software. The Third Party Terms shall take precedence over these Software License Terms, solely with respect to the applicable Third Party Components to the extent that these Software License Terms impose greater restrictions on You than the applicable Third Party Terms.

The following applies only if the H.264 (AVC) codec is distributed with the product. THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE http://www.mpegla.com/

Service Provider

THE FOLLOWING APPLIES TO EXTREME NETWORKS CHANNEL PARTNER'S HOSTING OF EXTREME NETWORKS PRODUCTS OR SERVICES. THE PRODUCT OR HOSTED SERVICE MAY USE THIRD PARTY COMPONENTS SUBJECT TO THIRD PARTY TERMS AND REQUIRE A SERVICE PROVIDER TO BE INDEPENDENTLY LICENSED DIRECTLY FROM THE THIRD PARTY SUPPLIER. AN EXTREME NETWORKS CHANNEL PARTNER'S HOSTING OF EXTREME NETWORKS PRODUCTS MUST BE AUTHORIZED IN WRITING BY EXTREME NETWORKS AND IF THOSE HOSTED PRODUCTS USE OR EMBED CERTAIN THIRD PARTY SOFTWARE, INCLUDING BUT NOT LIMITED TO MICROSOFT SOFTWARE OR CODECS, THE EXTREME NETWORKS CHANNEL PARTNER IS REQUIRED TO INDEPENDENTLY OBTAIN ANY APPLICABLE LICENSE AGREEMENTS, AT THE EXTREME NETWORKS CHANNEL PARTNER'S EXPENSE, DIRECTLY FROM THE APPLICABLE THIRD PARTY SUPPLIER.

WITH RESPECT TO CODECS, IF THE EXTREME NETWORKS CHANNEL PARTNER IS HOSTING ANY PRODUCTS THAT USE OR EMBED THE G.729 CODEC, H.264 CODEC, OR H.265 CODEC, THE EXTREME NETWORKS CHANNEL PARTNER ACKNOWLEDGES AND AGREES THE EXTREME NETWORKS CHANNEL PARTNER IS RESPONSIBLE FOR ANY AND ALL RELATED FEES AND/OR ROYALTIES. THE G.729 CODEC IS LICENSED BY SIPRO LAB TELECOM INC. SEE

WWW.SIPRO.COM/CONTACT.HTML. THE H.264 (AVC) CODEC IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR

THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO: (I) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (II) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION FOR H.264 (AVC) AND H.265 (HEVC) CODECS MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP://

Compliance with Laws

You acknowledge and agree that it is Your responsibility for complying with any applicable laws and regulations, including, but not limited to laws and regulations related to call recording, data privacy, intellectual property, trade secret, fraud, and music performance rights, in the country or territory where the Extreme Networks product is used.

Preventing Toll Fraud

"Toll Fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of Toll Fraud associated with your system and that, if Toll Fraud occurs, it can result in substantial additional charges for your telecommunications services.

Security Vulnerabilities

Information about Extreme Networks' security support policies can be found in the Global Technical Assistance Center Knowledgebase at https://gtacknowledge.extremenetworks.com/.

Downloading Documentation

For the most current versions of Documentation, see the Extreme Networks Support website: http://documentation.extremenetworks.com, or such successor site as designated by Extreme Networks.

Contact Extreme Networks Support

See the Extreme Networks Support website: http://www.extremenetworks.com/support for product or Hosted Service notices and articles, or to report a problem with your Extreme Networks product or Hosted Service. For a list of support telephone numbers and contact addresses, go to the Extreme Networks Support website: http://www.extremenetworks.com/support/contact/ (or such successor site as designated by Extreme Networks), scroll to the bottom of the page, and select Contact Extreme Networks Support.

Contact Avaya Support

See the Avaya Support website: https://support.avaya.com for product or Hosted Service notices and articles, or to report a problem with your Avaya product or Hosted Service. For a list of support telephone numbers and contact addresses, go to the Avaya Support website: https://support.avaya.com (or such successor site as designated by Avaya), scroll to the bottom of the page, and select Contact Avaya Support.

Trademarks

The trademarks, logos and service marks ("Marks") displayed in this site, the Documentation, Hosted Service(s), and product(s) provided by Extreme Networks are the registered or unregistered Marks of Extreme Networks, Inc., its affiliates, its licensors, its suppliers, or other third parties. Users are not permitted to use such Marks without prior written consent from Extreme Networks or such third party which may own the Mark. Nothing contained in this site, the Documentation, Hosted Service(s) and product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Extreme Networks or the applicable third party.

Extreme Networks is a registered trademark of Extreme Networks, Inc.

All non-Extreme Networks trademarks are the property of their respective owners. Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

For additional information on Extreme Networks trademarks, please see: http://www.extremenetworks.com/company/legal/

Contents

Chapter 1: Preface	10
Purpose	10
Training	10
Providing Feedback to Us	11
Getting Help	11
Extreme Networks Documentation	
Chapter 2: New in this document	13
Notice about feature support	
Chapter 3: Port performance management	14
Digital Diagnostic Monitoring	
Port performance management using CLI	
Viewing DDI port information	
Viewing DDI temperature information	
Viewing DDI voltage information	
Port performance management using EDM	17
Configuring rate limits	
Enabling learning limits on a port	18
Viewing DDI information	19
Chapter 4: Key Health Indicators (KHI)	23
Key Health Indicators using the CLI	
Displaying KHI performance information	
Displaying KHI control processor information	
Clearing KHI information	
Displaying KHI Fabric Extend ONA status	34
Displaying KHI Fabric Extend ONA global information	35
Key Health Indicators using EDM	36
Clearing KHI statistics	36
Displaying KHI port information	37
Chapter 5: Link state change control	38
Link state change control	
Link state change control using CLI	38
Link state change control using EDM	40
Chapter 6: Logs and traps	41
Logs and traps	
Log and trap fundamentals	
Log configuration using CLI	
Log configuration using EDM	
SNMP trap configuration using CLI	74
SNMP trap configuration using EDM	78

Chapter 7: MACsec performance	84
MACsec statistics	84
Viewing MACsec statistics using the CLI	86
Viewing MACsec statistics	86
Viewing MACsec statistics using EDM	87
Viewing MACsec interface statistics	87
Viewing secure channel (SC) inbound statistics	88
Viewing secure channel (SC) outbound statistics	90
Chapter 8: Remote Monitoring	92
Remote Monitoring	92
RMON 2	96
RMON configuration using CLI	98
Configuring RMON	
Enabling Remote Monitoring on an interface	103
Displaying RMON information	104
RMON configuration using EDM	111
Enabling RMON globally	
Enabling RMON on a port or VLAN	112
Enabling RMON1 history	113
Disabling RMON1 history	114
Viewing RMON1 history statistics	115
Creating an RMON1 alarm	117
Viewing RMON1 alarms	120
Deleting an RMON1 alarm	
Creating an RMON1 event	
Viewing RMON1 events	
Deleting an event	
Viewing the RMON log	
Viewing the protocol directory	
Viewing the data source for protocol distribution statistics	
Viewing protocol distribution statistics	
Viewing the host interfaces enabled for monitoring	
Viewing address mappings	
Viewing the data source for host statistics	
Viewing network host statistics	
Viewing application host statistics	
RMON alarm variables	130
Chapter 9: sFlow	
sFlow fundamentals	
sFlow configuration using CLI	
Configuring the agent-ip and enabling sFlow globally	
Configuring an sFlow collector	
Configuring the packet sampling rate	154

Configuring sFlow maximum header size	156
Configuring the counter sampling interval	157
Viewing sFlow statistics	158
sFlow configuration using EDM	160
Enabling sFlow globally	160
Configuring an sFlow collector	160
Configuring the packet samples and counter samples	161
Enabling sFlow statistics	163
Chapter 10: Statistics	164
Viewing statistics using CLI	164
Viewing TCP statistics	
Viewing port routing statistics	165
Displaying bridging statistics for specific ports	166
Displaying DHCP-relay statistics for specific ports	168
Displaying DHCP-relay statistics for all interfaces	169
Displaying LACP statistics for specific ports	171
Displaying VLACP statistics for specific ports	173
Displaying RMON statistics for specific ports	175
Displaying detailed statistics for ports	177
Displaying IS-IS statistics and counters	178
Clearing ACL statistics	180
Viewing ACE statistics	181
Viewing MSTP statistics	183
Viewing RSTP statistics	184
Viewing RSTP port statistics	185
Viewing MLT statistics	187
Viewing vIST statistics	188
Showing RADIUS server statistics	191
Viewing RMON statistics	
Showing OSPF error statistics on a port	
Viewing OSPF interface statistics	
Viewing OSPF range statistics	196
Clearing IP OSPF statistics	198
Viewing basic OSPF statistics for a port	
Showing extended OSPF statistics	
Viewing ingress port-rate limit statistics	
Viewing ingress policer statistics	
Viewing the management port statistics	202
Viewing IP VRRPv3 statistics	
Clearing IPv4 MSDP statistics	
Clearing IPv6 statistics	
Viewing ICMP statistics	
Viewing IPv6 DHCP Relay statistics	207

Contents

	Viewing IPv6 OSPF statistics	208
	Viewing IPv6 statistics on an interface	209
	Displaying IPsec statistics	
	Viewing IPv6 VRRP statistics	217
	Showing the EAPoL status of the device	219
	Showing EAPoL authenticator statistics	
	Viewing EAPoL session statistics	
	Viewing non-EAPoL MAC information	223
	Viewing port EAPoL operation statistics	224
	Viewing IP multicast threshold exceeded statistics	225
Vie	wing statistics using EDM	
	Graphing chassis statistics	
	Graphing port statistics	227
	Viewing chassis system statistics	227
	Viewing chassis SNMP statistics	
	Viewing chassis IP statistics	229
	Viewing chassis ICMP In statistics	231
	Viewing chassis ICMP Out statistics	232
	Viewing chassis TCP statistics	
	Viewing chassis UDP statistics	233
	Viewing port interface statistics	235
	Viewing port Ethernet errors statistics	236
	Viewing port bridging statistics	239
	Viewing port spanning tree statistics	239
	Viewing port routing statistics	
	Viewing DHCP statistics for an interface	240
	Graphing DHCP statistics for a port	241
	Viewing DHCP statistics for a port	241
	Graphing DHCP statistics for a VLAN	
	Displaying DHCP-relay statistics for Option 82	243
	Viewing port OSPF statistics	244
	Viewing LACP port statistics	245
	Viewing port policer statistics	246
	Displaying file statistics	247
	Viewing ACE port statistics	247
	Viewing ACL statistics	248
	Clearing ACL statistics	
	Viewing VLAN and Spanning Tree CIST statistics	249
	Viewing VLAN and Spanning Tree MSTI statistics	250
	Viewing VRRP interface stats	251
	Viewing VRRP statistics	252
	Viewing SMLT statistics	252
	Viewing RSTP status statistics	254

	Viewing MLT interface statistics	255
	Viewing MLT Ethernet error statistics	256
	Viewing RIP statistics	258
	Viewing OSPF chassis statistics	259
	Graphing OSPF statistics for a VLAN	259
	Graphing OSPF statistics for a port	261
	Viewing BGP global stats	262
	Viewing statistics for a VRF	266
	Showing RADIUS server statistics	266
	Showing SNMP statistics	268
	Enabling RMON statistics	269
	Viewing RMON statistics	270
	Displaying IS-IS system statistics	272
	Displaying IS-IS interface counters	273
	Displaying IS-IS interface control packets	273
	Graphing IS-IS interface counters	274
	Graphing IS-IS interface sending control packet statistics	275
	Graphing IS-IS interface receiving control packet statistics	276
	Graphing stat rate limit statistics for a port	277
	Viewing IPv6 statistics for an interface	277
	Viewing ICMP statistics	
	Viewing IPv6 OSPF statistics	
	Viewing IPv6 VRRP statistics	283
	Viewing IPv6 VRRP statistics for an interface	284
	Configuring IPv6 VRRP statistics	285
	Viewing IP VRRPv3 statistics	286
	Graphing IPv6 VRRP statistics	
	Graphing IP VRRPv3 statistics	
	Viewing IPv6 DHCP Relay statistics for a port	
	Displaying IPsec interface statistics	
	Graphing IPsec interface statistics	
	Displaying switch level statistics for IPsec-enabled interfaces	
	9	296
	•	297
	Viewing EAP session statistics	
	Viewing NEAP MAC information	
	• ,	298
	Viewing secure channel (SC) inbound statistics	
	Viewing MACsec interface statistics	
Glossa	nry	303

Chapter 1: Preface

Purpose

This document provides information on features in VSP Operating System Software (VOSS). VOSS runs on the following product families:

- Extreme Networks Virtual Services Platform 4000 Series
- Extreme Networks Virtual Services Platform 7200 Series
- Extreme Networks Virtual Services Platform 8000 Series (includes VSP 8200 and VSP 8400 Series)
- Extreme Networks Virtual Services Platform 8600

This document describes conceptual and procedural information about the switch management tools and features that are available to monitor and manage the switch. Operations include the following:

- Remote Monitoring (RMON)
- Simple Network Management protocol (SNMP)
- Chassis Performance
- · Port Performance

This document also provides information about how to prevent faults and improve the performance of the switch. This includes procedures for link state change, key health indicators, and logs and traps.

Examples and network illustrations in this document may illustrate only one of the supported platforms. Unless otherwise noted, the concept illustrated applies to all supported platforms.

Training

Ongoing product training is available. For more information or to register, you can access the Web site at www.extremenetworks.com/education/.

Providing Feedback to Us

We are always striving to improve our documentation and help you work better, so we want to hear from you! We welcome all feedback but especially want to know about:

- · Content errors or confusing or conflicting information.
- Ideas for improvements to our documentation so you can find the information you need faster.
- · Broken links or usability issues.

If you would like to provide feedback to the Extreme Networks Information Development team about this document, please contact us using our short <u>online feedback form</u>. You can also email us directly at <u>internalinfodev@extremenetworks.com</u>

Getting Help

Product purchased from Extreme Networks

If you purchased your product from Extreme Networks, use the following support contact information to get help.

If you require assistance, contact Extreme Networks using one of the following methods:

- GTAC (Global Technical Assistance Center) for Immediate Support
 - Phone: 1-800-998-2408 (toll-free in U.S. and Canada) or +1 408-579-2826. For the support phone number in your country, visit: www.extremenetworks.com/support/contact
 - Email: support@extremenetworks.com. To expedite your message, enter the product name or model number in the subject line.
- GTAC Knowledge Get on-demand and tested resolutions from the GTAC Knowledgebase, or create a help case if you need more guidance.
- <u>The Hub</u> A forum for Extreme customers to connect with one another, get questions answered, share ideas and feedback, and get problems solved. This community is monitored by Extreme Networks employees, but is not intended to replace specific guidance from GTAC.
- <u>Support Portal</u> Manage cases, downloads, service contracts, product licensing, and training and certifications.

Before contacting Extreme Networks for technical support, have the following information ready:

- Your Extreme Networks service contract number and/or serial numbers for all involved Extreme Networks products
- · A description of the failure
- A description of any action(s) already taken to resolve the problem
- A description of your network environment (such as layout, cable type, other relevant environmental information)
- Network load at the time of trouble (if known)

- The device history (for example, if you have returned the device before, or if this is a recurring problem)
- Any related RMA (Return Material Authorization) numbers

Product purchased from Avaya

If you purchased your product from Avaya, use the following support contact information to get help.

Go to the Avaya Support website at http://support.avaya.com for the most up-to-date documentation, product notices, and knowledge articles. You can also search for release notes, downloads, and resolutions to issues. Use the online service request system to create a service request. Chat with live agents to get answers to questions, or request an agent to connect you to a support team if an issue requires additional expertise.

Extreme Networks Documentation

To find Extreme Networks product guides, visit our documentation pages at:

Current Product Documentation <u>www.extremenetworks.com/documentation/</u>

Archived Documentation (for previous <u>www.extremenetworks.com/support/documentation-</u>

versions and legacy products) archives/

Release Notes <u>www.extremenetworks.com/support/release-notes</u>

Open Source Declarations

Some software files have been licensed under certain open source licenses. More information is available at: www.extremenetworks.com/support/policies/software-licensing.

Chapter 2: New in this document

There are no feature changes in this document.

Notice about feature support

This document includes content for multiple hardware platforms across different software releases. As a result, the content can include features not supported by your hardware in the current software release.

If a documented command, parameter, tab, or field does not appear on your hardware, it is not supported.

For information about feature support, see Release Notes.

For information about physical hardware restrictions, see your hardware documentation.

Chapter 3: Port performance management

Digital Diagnostic Monitoring

Use Digital Diagnostic Monitoring (DDM) to monitor laser operating characteristics such as temperature, voltage, current, and power. This feature works at any time during active laser operation without affecting data traffic.

The following optical transceivers support DDM:

- 1 Gbps Small Form Factor Pluggable (SFP)
- 10 Gbps Small Form Factor Pluggable plus (SFP+)
- 40 Gbps Quad Small Form Factor Pluggable plus (QSFP+)
- 100 Gbps Quad Small Form Factor Pluggable 28 (QSFP28)

Note:

Not all hardware platforms support each form factor. For more information on supported form factors, see your hardware documentation.

Digital Diagnostic Interface (DDI) is an interface that supports DDM. These devices provide real-time monitoring of individual DDI transceivers. The DDM software provides warnings or alarms after the temperature, voltage, laser bias current, transmitter power or receiver power fall outside of vendor-specified thresholds during initialization.

For information about optical transceivers, see *Installing Transceivers and Optical Components on VSP Operating System Software*, NN47227-301.

Port performance management using CLI

This section contains procedures to monitor individual DDI transceivers using the CLI.

Viewing DDI port information

Perform this procedure to view basic manufacturing information and characteristics, and the current configuration.

About this task

This command displays information for DDI transceivers.



Different hardware platforms can support different form factors. For more information, see the hardware documentation for your platform.

Procedure

1. Enter Privileged EXEC mode:

enable

2. View basic manufacturing information and characteristics:

```
show pluggable-optical-modules basic [{slot/port[/sub-port] [-slot/port[/sub-port]] [,...]}]
```

3. View configuration information:

```
show pluggable-optical-modules config
```

4. View detailed manufacturing information and characteristics:

```
show pluggable-optical-modules detail [{slot/port[/sub-port] [-slot/port[/sub-port]] [,...]}]
```

Example

```
Switch:1#show pluggable-optical-modules config

Pluggable Optical Module Global Configuration

ddm-monitor: disabled
ddm-monitor-interval: 5
ddm-traps-send: enabled
ddm-alarm-portdown: disabled
```

Variable definitions

Use the data in the following table to use the show pluggable-optical-modules basic and show pluggable-optical-modules detail commands.

Variable	Value
{slot/port[/sub-port] [-slot/port[/sub-port]] [,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Viewing DDI temperature information

About this task

This command displays information for DDI transceivers.



Different hardware platforms can support different form factors. For more information, see the hardware documentation for your platform.

Procedure

1. Enter Privileged EXEC mode:

enable

2. View temperatures:

show pluggable-optical-modules temperature [{slot/port[/sub-port] [slot/port[/sub-port]] [,...]}]

Example

Switch:1#show pluggable-optical-modules temperature						
	Pluc	ggable Opti	.cal Modu	le Temperat	ure(C)	
PORT NUM	LOW_ALARM I			· —	HIGH_ALARM THRESHOLD	
1/2 1/3 1/9	7.0 7.0625	1.1250 0.0	65.2539 65.2539 65.2539	0.0	3.0156 3.0156	Low Alarm Low Alarm Low Alarm
1/15 2/1 2/17 2/40	7.0625 7.0625 7.0625 7.0625	0.0 0.0 0.0 0.0	65.2539 65.2539 65.2539 65.2539	0.0 0.0 0.0	3.0156 3.0156	Low Alarm Low Alarm Low Alarm Low Alarm

Variable definitions

Use the data in the following table to use the show pluggable-optical-modules temperature command.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Viewing DDI voltage information

About this task

This command displays information for DDI transceivers.

Procedure

1. Enter Privileged EXEC mode:

enable

2. View voltages:

show pluggable-optical-modules voltage [{slot/port[/sub-port] [slot/port[/sub-port]] [,...]}]

Example

Switch:1#show pluggable-optical-modules voltage						
	P	luggable Op	otical Mod	dule Voltaç	ge (V)	
PORT NUM	LOW_ALARM THRESHOLD		ACTUAL VALUE	_	HIGH_ALARM THRESHOLD	THRESHOLD STATUS
1/2 1/3 1/9 1/15	0.1281 0.0001 0.0006 0.0006	0.0 0.0 0.0 0.0	1.2596 1.2596 1.2596 1.2596	0.5376 0.3072 2.6368 2.6368	1.6396 0.0 0.0	Normal Normal Normal
2/1 2/17 2/40	0.0006 0.0006 0.0006	0.0 0.0 0.0	1.2596 1.2596 1.2596	2.6368 2.6368 2.6368	0.0 0.0 0.0	Normal Normal Normal

Variable definitions

Use the data in the following table to use the **show pluggable-optical-modules voltage** command.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]] [,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Port performance management using EDM

This section contains procedures to monitor individual DDI transceivers using EDM.

Configuring rate limits

About this task

Configure the rate limit of broadcast or multicast packets to determine the total bandwidth limit on the port.

Procedure

- 1. On the Device Physical View, select a port or multiple ports.
- 2. In the navigation pane, expand the **Configuration > Edit > Port** folders.
- 3. Click General.
- 4. Click the Rate Limiting tab.
- 5. Configure the parameters as required.
- 6. Click Apply.

Rate Limiting field descriptions

Use the data in the following table to use the Rate Limiting tab.

Name	Description
Index	The port number.
TrafficType	The type of traffic being rate limited, either broadcast or multicast traffic. The default is broadcast.
AllowedRatePps	This variable is the allowed traffic rate limit for the port in packets per second.
	1 to 25 configures the limit in a percentage of the total bandwidth on the port from 1–25 percent.
	On gigabit ports and MDAs, there can be up to a 2 percent difference between the configured and actual rate limiting values.
	1–65535 configures the limit in packets for each second.
Enable	Double-click in the field and select to enable (True) or disable (False) rate limiting. The default is false.

Enabling learning limits on a port

About this task

Limit MAC address learning to limit the number of forwarding database (FDB) entries learned on a particular port to a user-specified value. After the number of learned forwarding database entries reaches the maximum limit, MAC learning stops on that port.

Note:

Limit learning is not supported on all hardware platforms. For more information about feature support, see *Release Notes*.

Procedure

- 1. In the Device Physical View tab, select a port or multiple ports.
- 2. In the navigation pane, expand the **Configuration** > **Edit** > **Port** folders.
- 3. Click General.
- 4. Click the **Limit-Learning** tab.
- 5. Configure the parameters as required.
- 6. Click **Apply**.

Limit-Learning field descriptions

Use the data in the following table to use the Limit-Learning tab.

Name	Description
PortNum	Shows the slot and port number to configure.
MaxMacCount	Configures the number of entries in the MAC table for the port that causes learning to stop. The default is 1024.
CurrentMacCount	Shows the number of entries currently in the MAC table for the port.
Enable	Enables or disables limit learning for the port. The default is disable.
MacLearning	Shows if MAC learning is enabled or disabled for the port. The default is true.

Viewing DDI information

About this task

You can view DDI information, for example, port information, temperature, and voltages for DDI transceivers.

Note:

Different hardware platforms can support different types of transceivers. For more information, see your hardware documentation.

Procedure

- 1. In the Physical Device view, select a port.
- 2. In the navigation pane, expand the **Configuration > Edit > Port** folders.

- 3. Click General.
- 4. Select the **DDI/SFP** tab.

DDI/SFP field descriptions

Use the data in the following table to use the DDI/SFP tab.

Name	Description
ConnectorType	Indicates the type of connector.
SupportsDDM	Indicates if the transceiver supports DDM.
DdmStatusMask	Indicates the DDM status. A value other than ddm-ok represents a specific error.
CLEI	Indicates the Telcordia register assignment CLEI code.
VendorName	Indicates the name of the manufacturer.
VendorPartNumber	Indicates the part number for the transceiver.
VendorRevNumber	Indicates the manufacturer revision level for the transceiver.
VendorSN	Indicates the manufacturer serial number for the transceiver.
VendorDateCode	Indicates the manufacturer date code for the transceiver.
Wavelength	Indicates the wavelength in nm. This field is valid for optical transceivers only.
Calibration	Indicates if the calibration is internal or external.
PowerMeasure	Indicates Rx power measurement as average or OMA.
Aux1Monitoring	Indicates if auxiliary monitoring is implemented for the transceiver.
Aux2Monitoring	Indicates if auxiliary monitoring is implemented for the transceiver.
TemperatureLowAlarmThreshold	Indicates the low alarm threshold in degrees Celsius.
TemperatureLowWarningThreshold	Indicates the low warning threshold in degrees Celsius.
Temperature	Indicates the current temperature in degrees Celsius of the transceiver.
TemperatureHighWarningThreshold	Indicates the high warning threshold in degrees Celsius.
TemperatureHighAlarmThreshold	Indicates the high alarm threshold in degrees Celsius.
TemperatureStatus	Indicates if any temperature thresholds were exceeded.
VoltageLowAlarmThreshold	Indicates the low alarm threshold in volts.
VoltageLowWarningThreshold	Indicates the low warning threshold in volts.
Voltage	Indicates the current voltage in volts.
VoltageHighWarningThreshold	Indicates the high warning threshold in volts.
VoltageHighAlarmThreshold	Indicates the high alarm threshold in volts.

Table continues...

Name	Description
VoltageStatus	Indicates if any voltage thresholds were exceeded.
BiasLowAlarmThreshold	Indicates the bias current low alarm threshold in mA.
BiasLowWarningThreshold	Indicates the bias current low warning threshold in mA.
Bias	Indicates the laser bias current in mA.
BiasHighWarningThreshold	Indicates the bias current high warning threshold in mA.
BiasHighAlarmThreshold	Indicates the bias current high alarm threshold in mA.
BiasStatus	Indicates if any bias thresholds were exceeded.
TxPowerLowAlarmThreshold	Indicates the low alarm threshold in dBm for the Tx power.
TxPowerLowWarningThreshold	Indicates the low warning threshold in dBm for the Tx power.
TxPowerHighWarningThreshold	Indicates the high warning threshold in dBm for the Tx power.
TxPowerHighAlarmThreshold	Indicates the high alarm threshold in dBm for the Tx power.
TxPowerStatus	Indicates if any Tx power thresholds were exceeded.
RxPowerLowAlarmThreshold	Indicates the low alarm threshold in dBm for the Rx power.
RxPowerLowWarningThreshold	Indicates the low warning threshold in dBm for the Rx power.
RxPower	Indicates the current Rx power in dBm.
RxPowerHighWarningThreshold	Indicates the high warning threshold in dBm for the Rx power.
RxPowerHighAlarmThreshold	Indicates the high alarm threshold in dBm for the Rx power.
RxPowerStatus	Indicates if any Rx power thresholds were exceeded.
Aux1LowAlarmThreshold	Indicates the low alarm threshold auxiliary 1 reading.
Aux1LowWarningThreshold	Indicates the low warning threshold auxiliary 1 reading.
Aux1	Indicates the current auxiliary 1 reading.
Aux1HighWarningThreshold	Indicates the high warning threshold auxiliary 1 reading.
Aux1HighAlarmThreshold	Indicates the high alarm threshold auxiliary 1 reading.
Aux1Status	Indicates if any auxiliary 1 thresholds were exceeded.
Aux2LowAlarmThreshold	Indicates the low alarm threshold auxiliary 2 reading.
Aux2LowWarningThreshold	Indicates the low warning threshold auxiliary 2 reading.
Aux2	Indicates the current auxiliary 2 reading.
Aux2HighWarningThreshold	Indicates the high warning threshold auxiliary 2 reading.
Aux2HighAlarmThreshold	Indicates the high alarm threshold auxiliary 2 reading.
Aux2Status	Indicates if any auxiliary 2 thresholds were exceeded.

Note:

- 1. Threshold and actual values for TxBias, TxPower, and RxPower are provided for all 4 channels in QSFP+ and QSFP28 optical transceivers.
- 2. Auxiliary monitoring does not apply to QSFP+s or QSFP28s.

Chapter 4: Key Health Indicators (KHI)

About this task

The Key Health Indicators (KHI) feature provides a subset of health information that allows for quick assessment of the overall operational state of the device.



Note:

KHI was not designed to provide a comprehensive debugging solution. Instead, KHI identifies key information that could lead support personnel towards discovery of a specific failure. After the technician assesses the KHI information, further debugging is required to determine the specific reason for the fault.

You should capture KHI information during normal operations to provide a baseline for support personnel when detecting fault situations.

Key Health Indicators using the CLI

Use the procedures in this section to display Key Health Indicator (KHI) information using the CLI.

Displaying KHI performance information

Use the following commands to display KHI information about the performance of the switch.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. Display buffer performance and utilization statistics:

```
show khi performance buffer-pool [{slot[-slot][,...]}]
```

3. Show current utilization, 5-minute average utilization, and 5-minute high water mark with date and time of event:

```
show khi performance cpu [{slot[-slot][,...]}]
```

4. Display memory performance and utilization statistics on the specified slot or all slots:

```
show khi performance memory [history | {slot[-slot][,...]}]
```

Note:

Depending on the hardware platform, you can display virtual memory history.

5. Display process performance and utilization statistics on the specified slot or all slots:

```
show khi performance process [{slot[-slot][,...]}]
```

6. Display thread performance and utilization statistics on the specified slot or all slots:

```
show khi performance pthread [{slot[-slot][,...]}]
```

7. Display internal memory management resource performance and utilization statistics on the specified slot or all slots:

```
show khi performance slabinfo [{slot[-slot][,...]}]
```

Example

```
Switch:1>show khi performance buffer-pool 1
    Slot:1
      CPP:
        UsedFBuffs: 12
        FreeFBuffs: 3060
        RxQ0FBuffs: 0
        RxQ1FBuffs: 0
        RxQ2FBuffs: 0
        RxQ3FBuffs: 0
        RxQ4FBuffs: 0
        RxQ5FBuffs: 0
        RxQ6FBuffs: 0
         RxQ7FBuffs: 0
        TxQueueFBuffs: 0
        NoFbuff: 0
      Network stack system:
         UsedMbuf: 244
         FreeMbuf: 47606
         SocketMbuf: 19
      Network stack data:
         UsedMbuf: 4
         FreeMbuf: 10748
      Letter API message queue:
         QHigh: 0
         QNormal: 0
         FreeQEntries: 51200
```

```
Switch:1>show khi performance cpu 1
    Slot:1
         Current utilization: 9
         1-minute average utilization: 9
         1-minute high water mark: 14 (06/20/16 06:03:08)
         5-minute average utilization: 8
         5-minute high water mark: 10 (06/19/16 08:35:58)
```

Depending on the switch hardware, any one of the following output can appear for show khi performance memory [{slot[-slot][,...]}].

```
Switch:1>show khi performance memory 1
   Slot:1
        Used: 514560 (KB)
```

```
Free: 521260 (KB)
Current utilization: 49 %
5-minute average utilization: 49 %
5-minute high water mark: 22 (10/08/14 14:48:01)

Switch:1>show khi performance memory 1
```

```
Switch:1>show khi performance memory 1
Slot:1

Used: 1684000 (KB)
Free: 2321704 (KB)
Current utilization: 42 %
5-minute average utilization: 41 %
5-minute high water mark: 41 (%)
10-minute average utilization: 41 %
10-minute high water mark: 41 (%)
1-Hour average utilization: 41 %
1-Hour high water mark: 41 (%)
1-Day average utilization: 41 %
1-Day high water mark: 41 (%)
1-Day high water mark: 41 (%)
1-Month average utilization: 39 %
1-Year average utilization: 0 %
```

Depending on the hardware platform, you can display virtual memory history using show khi performance memory history.

Sl	Switch:1>show khi performance memory history Slot:1 Values indicate VMSize in KB									
Pid Year	Pname	5-Min	10-Min	1-Hour	1-Day	1-Month 1-				
4731	logger	1	1	1	1	1				
4747	namServer	20	20	20	20	20				
4748	sockserv	4	4	4	4	4				
	oom95	213	213	213	213	213				
4750	oom90	213	213	213	213	213				
4751	imgsync.x	19	19	19	19	19				
4818	logServer	23	23	23	23	23				
4819	trcServer	18	18	18	18	18				
4820	hwsServer	86	86	85	73	45				
	cbcp-main.x	789	789	787	786	782				
4822	rssServer	18	18	18	18	18				
4823	dbgServer	21	21	21	21	20				
4824	dbgShell	18	18	18	18	18				
4825	khiCollection	21	21	21	21	21				
	coreManager.x	19	19	19	19	19				
4827	filer	18	18	18	18	18				
4828	ssio	672	672	672	672	671				

4829	hckServer	18	18	18	18	18
5045	slamon.sh	3	3	3	3	3
4830	fabServer	20	20	20	20	20

Switch:1>show khi performance process 1

Slot									
PID	PPID		VmSize	VmLck		VmData	VmStk	VmExe	VmLib
1	0	init	1936	0	656	164	88	32	1556
2	0	kthreadd	0	0	0	0	0	0	0
3	2	migration/0	0	0	0	0	0	0	0
4	2	ksoftirqd/0	0	0	0	0	0	0	0
5	2	watchdog/0	Ö	0	Ö	0	0	0	0
6	2	migration/1	0	0	0	0	0	0	0
7	2	ksoftirgd/1	0	0	0	0	0	0	0
8	2	watchdog/1	0	0	0	0	0	0	0
9	2		0	0	0	0	0	0	0
		events/0					0	0	0
10	2	events/1	0	0	0	0			
11	2	khelper	0	0	0	0	0	0	0
12	2	netns	0	0	0	0	0	0	0
13	2	async/mgr	0	0	0	0	0	0	0
14	2	sync_supers	0	0	0	0	0	0	0
15	2	bdi-default	0	0	0	0	0	0	0
16	2	kblockd/0	0	0	0	0	0	0	0
17	2	kblockd/1	0	0	0	0	0	0	0
18	2	khubd	0	0	0	0	0	0	0
19	2	kmmcd	Ō	0	Ō	Ō	Ō	0	Ō
22	2	rpciod/0	0	0	0	0	0	0	0
23	2	rpciod/1	0	0	Ö	0	0	0	0
24	2	khungtaskd	0	0	0	0	0	0	0
		-	0	0	0	0	0	0	0
25	2	kswapd0							
26	2	aio/0	0	0	0	0	0	0	0
27	2	aio/1	0	0	0	0	0	0	0
28	2	nfsiod	0	0	0	0	0	0	0
29	2	mtdblockd	0	0	0	0	0	0	0
38	2	mmcqd	0	0	0	0	0	0	0
55	1	udevd	2356	0	832	264	88	96	1672
1351	2	wdd	0	0	0	0	0	0	0
1749	1	portmap	1920	0	416	164	88	16	1556
1762	1	rc	3156	0	1368	128	88	736	1808
1773		sshd	4948	0	904	372	88	392	3376
1779		syslogd	2476	0	664	172	88	564	1556
1781		klogd	2476	0	620	172	88	564	1556
	1762		3292	0	1532	264	88	736	1808
	1782			0	1424	152	88	736	1808
4660		i2c_wq	0	0	0	0	0	0	0
4672		fan_q	0	0	0	0	0	0	0
4700		workqueue_0	0	0	0	0	0	0	0
4702		workqueue_1	0	0	0	0	0	0	0
	4366	start	3176	0	1392	148	88	736	1808
	4749	lifecycle	15664	0	4856	5016	88	284	6936
4785	4780	logger	2480	0	580	176	88	564	1556
4794	4780	sockserv	4404	0	1024	72	88	8	3708
	4780	oom95	114768	0	107244	106084	88	84	6432
	4780	oom90	115032	0	107240	106348	88	84	6432
	4780	imgsync.x	12656	0	4332	2952	88	120	6768
	4794	logger	2480	0	580	176	88	564	1556
	4795	logger	2480	0	696	176	88	564	1556
	4797	logger	2480	0	696	176	88	564	1556
	4797				696	176		564	
4001	4/20	logger	2480	0	090	1/0	88	504	1556

	4780	logServer	16228	0	5284	4340	88	1384	7604
4840	4780	trcServer	11264	0	3580	2544	88	124	6432
4841	4780	oobServer	10300	0	3524	1520	88	104	6444
4842	4780	cbcp-main.x	556732	0	447832	505748	88	25184	14080
4843	4780	rssServer	11236	0	3424	2544	88	96	6432
4844	4780	dbgServer	11240	0	3516	2544	88	100	6432
4845	4780	dbgShell	11084	0	3604	2412	88	84	6432
4846	4780	coreManager.x	11056	0	3576	1896	88	124	6612
4847	4780	ssio	256364	0	147604	216088	88	23328	7236
4848	4780	hckServer	11252	0	3560	2544	88	112	6432
4849	4780	remCmdAgent.x	11684	0	3960	2672	88	88	6564
4850	4839	logger	2480	0	696	176	88	564	1556
4851	4841	logger	2480	0	696	176	88	564	1556
4852	4840	logger	2480	0	696	176	88	564	1556
4853	4842	logger	2480	0	696	176	88	564	1556
4854	4844	logger	2480	0	696	176	88	564	1556
4855	4843	logger	2480	0	696	176	88	564	1556
4856	4845	logger	2480	0	700	176	88	564	1556
4857	4847	logger	2480	0	696	176	88	564	1556
4858	4846	logger	2480	0	696	176	88	564	1556
4859	4848	logger	2480	0	696	176	88	564	1556
4860	4849	logger	2480	0	696	176	88	564	1556
4907	4847	logger	2480	0	696	176	88	564	1556
4946	4780	slamon.sh	3152	0	1336	124	88	736	1808
4949	4946	logger	2480	0	580	176	88	564	1556
4973	4946	slamon_second.s	3136	0	1272	108	88	736	1808
4982	4973	ns_exec	4324	0	1020	68	88	8	3696
4989	4982	slac	4944	0	1172	460	88	8	3728

Switch:1>show khi performance pthread 1 Slot:1

TID	PID	PName			CPU(%)	5MinHiWater	CPU(%(time	stamp))
1	1	init	0.0	0.0				
2	2	kthreadd	0.0	0.0				
3	3	migration/0	0.0	0.0				
4	4	ksoftirqd/0	0.0	0.0				
5	5	watchdog/0	0.0	0.0				
6	6	migration/1		0.0				
7	7	ksoftirqd/1	0.0	0.0				
8	8	watchdog/1	0.0	0.0				
9	9	events/0	0.0	0.0				
10	10	events/1	0.1	0.0	0.1	(10/08/14 14	:27:31)	
11	11	khelper	0.0	0.0				
12	12	netns	0.0	0.0				
13	13	async/mgr	0.0	0.0				
14	14	sync supers	0.0	0.0				
15	15	bdi-default	0.0	0.0				
16	16	kblockd/0	0.0	0.0				
17	17	kblockd/1	0.0	0.0				
18	18	khubd	0.0	0.0				
19	19	kmmcd	0.0	0.0				
22	22	rpciod/0	0.0	0.0				
23	23	rpciod/1	0.0	0.0				
24	24	khungtaskd	0.0	0.0				
25	25	kswapd0	0.0	0.0				
26	26	aio/0	0.0	0.0				
27	27	aio/1	0.0	0.0				
28	28	nfsiod	0.0	0.0				
29	29	mtdblockd	0.0	0.0				
38	38	mmcqd	0.0	0.0	0.2	(10/08/14 14	:27:31)	
55	55	udevd	0.0	0.0				
1351	1351	wdd	0.0	0.0				
1749	1749	portmap	0.0	0.0				

```
1762 1762 rc
                                                                0.0 0.0

    1702
    1702
    rc
    0.0
    0.0

    1773
    1773
    sshd
    0.0
    0.0

    1779
    1779
    syslogd
    0.0
    0.0

    1781
    1781
    klogd
    0.0
    0.0

    1782
    1782
    S25vsp
    0.0
    0.0

    1782
    1782
    S25vsp
    0.0
    0.0

    4366
    4366
    rc.appfs.vsp8k
    0.0
    0.0

    4660
    4660
    i2c_wq
    0.0
    0.0

    4672
    4672
    fan_q
    0.0
    0.0

    4700
    4700
    workqueue_0
    0.0
    0.0

    4702
    4702
    workqueue_1
    0.0
    0.0

    4749
    4749
    start
    0.0
    0.0

    4780
    4780
    lifecycle
    0.0
    0.0

    4781
    4780
    715pd ipc disp
    0.0
    0.0

4781 4780 Z15nd_ipc_disp 0.0 0.0
4782 4780 Z18nd_ipc_send 0.0 0.0
4783 4780 Z21nd_ipc_rece 0.0 0.0
4784 4780 ZN10nd_tmr_grp 0.0 0.0
4786 4780 dpmXportRxMonit 0.0 0.0 4787 4780 dpmXportTxMonit 0.0 0.0 4788 4780 ltrBulkTimerThr 0.0 0.0
                                                                                                                     0.0
 4789 4780 lc wd exception 0.0 0.0
 4790 4780 lc_hwwd_feed 0.0 0.0
 4791 4780 lc_swwd_feed 0.0 0.0

      4791
      4780
      1c_swwd_leed
      0.0
      0.0

      4792
      4780
      worker_thread
      0.0
      0.0

      4793
      4780
      1c_master
      0.0
      0.0

      4785
      4785
      logger
      0.0
      0.0

      4794
      4794
      sockserv
      0.0
      0.0

      4795
      4795
      oom95
      0.0
      0.0

4802 4795 Z15nd_ipc_disp 0.0 0.0

4803 4795 Z18nd_ipc_send 0.0 0.0

4804 4795 Z21nd_ipc_rece 0.0 0.0

4808 4795 ZN10nd_tmr_grp 0.0 0.0
 4796 4796 oom90
                                                                   0.0 0.0
4805 4796 _Z15nd_ipc_disp 0.0 0.0 4806 4796 _Z18nd_ipc_send 0.0 0.0 4807 4796 _Z21nd_ipc_rece 0.0 0.0 4809 4796 _ZN10nd_tmr_grp 0.0 0.0
 4797 4797 imgsync.x 0.0 0.0
4810 4797 Z15nd_ipc_disp 0.0 0.0

4811 4797 Z18nd_ipc_send 0.0 0.0

4812 4797 Z21nd_ipc_rece 0.0 0.0

4813 4797 ZN10nd_tmr_grp 0.0 0.0
 4814 4797 dpmXportRxMonit 0.0 0.0

      4814
      4797
      dpmXportRxMonit
      0.0
      0.0

      4815
      4797
      dpmXportTxMonit
      0.0
      0.0

      4816
      4797
      ltrBulkTimerThr
      0.0
      0.0

      4798
      4798
      logger
      0.0
      0.0

      4800
      4800
      logger
      0.0
      0.0

      4801
      4801
      logger
      0.0
      0.0

      4839
      4839
      logServer
      0.0
      0.0

      4873
      4839
      215nd_ipc_disp
      0.0
      0.0

      4874
      4839
      218nd_ipc_send
      0.0
      0.0

      4875
      4839
      721nd_ipc_rece
      0.0
      0.0

 4875 4839 _Z21nd_ipc_rece 0.0 0.0
4876 4839 ZN10nd_tmr_grp 0.0 0.0
4840 4840 trcserver 0.0 0.0
4865 4840 Z15nd_ipc_disp 0.0 0.0
4866 4840 Z18nd_ipc_send 0.0 0.0
4867 4840 Z21nd_ipc_rece 0.0 0.0
4868 4840 ZN10nd_tmr_grp 0.0 0.0
4841 4841 Oobserver 0.0 0.0
                                                                                                                                                             0.1(10/08/14 14:45:12)
4841 4841 oobServer 0.0 0.0
4861 4841 Z15nd_ipc_disp 0.0 0.0
4862 4841 Z18nd_ipc_send 0.0 0.0
 4863 4841 _Z21nd_ipc_rece 0.0 0.0
 4864 4841 ZN10nd tmr grp 0.0 0.0
 4842 4842 cbcp-main.x 0.0
                                                                                                                          0.0
 4908 4842 _Z15nd_ipc_disp 0.0 0.0
```

```
4909 4842 _Z18nd_ipc_send 0.0 0.0
     4910 4842 Z21nd_ipc_rece 0.1 0.0

      4910
      4842
      ZN10nd_tmr_grp
      0.0

      4911
      4842
      ZN10nd_tmr_grp
      0.0

      4912
      4842
      tUsrRoot
      0.0

      4913
      4842
      tExcTask
      0.5
      0.4

      4914
      4842
      tExcJobTask
      0.0
      0.0

      4915
      4842
      tNetTask
      0.1
      0.0

      4916
      4842
      traceOutput
      0.0
      0.0

      4917
      4842
      nd_profile_cmd
      0.0
      0.0

                                                                                                                                                                                                                                                                                                 0.4(10/08/14 14:47:51)
                                                                                                                                                                                                                                                                            0.3(10/08/14 14:44:51)
     4917 4842 hd_ploffile_cmd 0.0 0.0 4918 4842 tRlogind 0.1 0.0 4919 4842 tRshd 0.0 0.0

      4920
      4842
      tTftpdTask
      0.0
      0.0

      4921
      4842
      tFtpdTask
      0.1
      0.0

      4922
      4842
      dpmXportRxMonit
      0.0
      0.0

      4923
      4842
      dpmXportTxMonit
      0.0
      0.0

     4924 4842 tndMiscServTask 0.0 0.0

      4924
      4842
      tndmiscservTask
      0.0
      0.0

      4925
      4842
      tLoggerTask
      0.0
      0.0

      4926
      4842
      ZN10CLimServer
      0.1
      0.0

      4927
      4842
      BootpServer
      0.0
      0.0

      4928
      4842
      tSioMsgRx
      0.0
      0.0

      4930
      4842
      chEvmTask
      0.0
      0.0

      4931
      4842
      chServiceTask
      0.0
      0.0

      4933
      4842
      tSnmpTmr
      0.0
      0.0

      4934
      4842
      tSnmpd
      0.0
      0.0

      4934
      4842
      tSnagaspTask
      0.0
      0.0

     4935 4842 tTacacspTask 0.0 0.0
  4935 4842 tTacacspTask 0.0 0.0
4936 4842 tTacacsqTask 0.0 0.0
4937 4842 tMainTask 4.5 4.2 15.7(10/08/14 14:48:41
4938 4842 rtMainTask 0.0 0.0
4939 4842 tCppSend 0.0 0.0
4940 4842 tCppInterruptTa 0.4 0.1 0.9(10/08/14 14:28:21)
4941 4842 cfmMain 0.5 0.3 0.3(10/08/14 14:27:31)
4942 4842 tTalkClient 0.0 0.0
4943 4842 tSlaClient 0.0 0.0
4944 4842 cfmClock 0.0 0.0
4947 4842 tTrapd 0.0 0.0
4948 4842 tOspf6SpfTimer 0.0
                                                                                                                                                                                                                                                                                                15.7(10/08/14 14:48:41)

      4947
      4842
      tTrapd
      0.0
      0.0

      4948
      4842
      tOspf6SpfTimer
      0.0
      0.0

      4955
      4842
      tTrapd
      0.0
      0.0

      4961
      4842
      tTdpTimer
      0.0
      0.0

      4962
      4842
      chHealthMonitor
      0.0
      0.0

      4963
      4842
      tSpfTimer
      0.0
      0.0

      4965
      4842
      tIsisTask
      0.1
      0.0

      4968
      4842
      tBgpTask
      0.0
      0.0

      4984
      4842
      tWebSrv
      0.0
      0.0

      4995
      4842
      Http1
      0.0
      0.0

      4996
      4842
      Http2
      0.0
      0.0

      4997
      4842
      Http2
      0.0
      0.0

      4998
      4842
      Http3
      0.0
      0.0

      5000
      4842
      Http4
      0.0
      0.0

      5001
      4842
      Http5
      0.0
      0.0

      5002
      4842
      Http7
      0.0
      0.0

      5003
      4842
      Http1
      0.0
      0.0

     4948 4842 tOspf6SpfTimer 0.0 0.0
```

```
5072 4842 tShell-cli 0.0 0.0 0.5(10/08/14 14:27:31)
 5074 4842 tTelnetd 0.0 0.0
5075 4842 smltSlave 0.3 0.0
5084 4842 tTeOut_19637cc0 0.0 0.0
                                                                                                                            0.1(10/08/14 14:30:51)
 5085 4842 tTeIn 19637cc0 0.0 0.0
 5086 4842 tShell-cli 0.0 0.0
4843 4843 rssServer 0.0 0.0
 4843 4843 rssServer
                                                                                               0.0
 4869 4843 Z15nd_ipc_disp 0.0
4870 4843 Z18nd_ipc_send 0.0
4871 4843 Z21nd_ipc_rece 0.0
4872 4843 ZN10nd_tmr_grp 0.0
                                                                                               0.0
                                                                                          0.0
                                                                                          0.0
4872 4843 ZNIUNG_tmr_grp 0.0 0.0
4844 4844 dbgServer 0.0 0.0
4877 4844 Z15nd_ipc_disp 0.0 0.0
4878 4844 Z18nd_ipc_send 0.0 0.0
4879 4844 Z21nd_ipc_rece 0.0 0.0
4880 4844 ZNIUNd_tmr_grp 0.0 0.0
4845 4845 dbgShell 0.0 0.0

4881 4845 Z15nd_ipc_disp 0.0 0.0

4882 4845 Z18nd_ipc_send 0.0 0.0

4883 4845 Z21nd_ipc_rece 0.0 0.0

4885 4845 ZN10nd_tmr_grp 0.0 0.0
4846 4846 coreManager.x 0.0 0.0
4901 4846 Z15nd_ipc_disp 0.0 0.0
4902 4846 Z18nd_ipc_send 0.0 0.0
4903 4846 Z21nd_ipc_rece 0.0 0.0
4904 4846 ZN10nd_tmr_grp 0.0 0.0
 4847 4847 ssio
                                                                          0.0 0.0
 4896 4847 Z15nd_ipc_disp 0.0 0.0
4897 4847 Z18nd_ipc_send 0.0 0.0
4898 4847 Z21nd_ipc_rece 0.0 0.0
4899 4847 ZN10nd_tmr_grp 0.0 0.0
4990 4847 tUsrRoot 0.0 0.0

4905 4847 tExcTask 0.2 0.1

4906 4847 tty 0.0 0.0

5016 4847 dpmXportRxMonit 0.0 0.0

5017 4847 dpmXportTxMonit 0.0 0.0
                                                                                                                            0.1(10/08/14 14:27:31)

      5018
      4847
      ltrBulkTimerThr
      0.1
      0.0

      5019
      4847
      nd_profile_cmd
      0.0
      0.0

      5020
      4847
      tMainTask
      0.5
      0.3

      5022
      4847
      bcmDPC
      0.0
      0.0

      5023
      4847
      bcmINTR
      2.9
      2.6

      5024
      4847
      socdmadesc.0
      0.5
      0.5

      5056
      4847
      bcmTX
      0.0
      0.0

      5057
      4847
      bcmLZMOD.0
      0.0
      0.0

      5058
      4847
      bcmCNTR.0
      4.7
      4.5

      5060
      4847
      bcmL2age.0
      0.0
      0.0

      5061
      4847
      bcmRX
      0.4
      0.2

      5062
      4847
      listener
      0.1
      0.1

      5063
      4847
      bcmLINK.0
      2.3
      2.3

      5064
      4847
      tUsrRoot
      0.0
      0.0

      5065
      4847
      tRspDebugPollTa
      0.0
      0.0

 5018 4847 ltrBulkTimerThr 0.1 0.0
                                                                                                                              13.5(10/08/14 14:48:21)
                                                                                                                         3.5(10/08/14 14:28:21)
0.5(10/08/14 14:27:31)
                                                                                                                            0.1(10/08/14 14:45:51)
                                                                                                                            0.1(10/08/14 14:45:31)
                                                                                                                      4.7(10/08/14 14:44:40)
                                                                                                                          1.2(10/08/14 14:27:31)
0.7(10/08/14 14:47:41)
2.4(10/08/14 14:28:21)
 5065 4847 tRspDebugPollTa 0.0 0.0
 5066 4847 tLcdIntrTask 0.0 0.0
 5067 4847 tTimerTask 0.0
5068 4847 tScanSfp 0.1
5071 4847 tExcJobTask 0.0
4848 4848 hckServer 0.0
                                                                                             0.0
                                                                                             0.0
                                                                                             0.0
 4884 4848 _Z15nd_ipc_disp 0.0 0.0
 4886 4848 Z18nd_ipc_send 0.0 0.0
4887 4848 Z21nd_ipc_rece 0.0 0.0
4888 4848 ZN10nd_tmr_grp 0.0 0.0
 4849 4849 remCmdAgent.x 0.0 0.0
 4889 4849 _Z15nd_ipc_disp 0.0 0.0
 4890 4849 Z18nd_ipc_send 0.0 0.0
4891 4849 Z21nd_ipc_rece 0.0 0.0
```

```
      4892
      4849
      ZN10nd_tmr_grp
      0.0
      0.0

      4893
      4849
      dpmXportRxMonit
      0.0
      0.0

      4894
      4849
      dpmXportTxMonit
      0.0
      0.0

      4895
      4849
      ltrBulkTimerThr
      0.0
      0.0

      4851
      4851
      logger
      0.0
      0.0

      4852
      4852
      logger
      0.0
      0.0

      4853
      4853
      logger
      0.0
      0.0

      4854
      4854
      logger
      0.0
      0.0

      4855
      4855
      logger
      0.0
      0.0

      4857
      4857
      logger
      0.0
      0.0

      4858
      4858
      logger
      0.0
      0.0

      4859
      4859
      logger
      0.0
      0.0

      4850
      4860
      logger
      0.0
      0.0

      4859
      4859
      logger
      0.0
      0.0

      4860
      logger
      0.0
      0.0

      4946
      4946
      slamon.sh
      0.0
      0.0

      4973
      4973
      slamon_second.s
      0.0
      0.0
```

Switch:1>show khi performance slabinfo
Slot:1

Name merc_sock	Active Objs	Num Objs	Objsize	Objper slab	Pageper slab	Active Slabs	Num Slabs
merc sock	0	0	384	21	2	0	0
cfg queue	72	72	112	36	1	2	2
bsg cmd	0	0	288	14	1	0	0
mqueue inode cache	15	15	544	15	2	1	1
nfs direct cache	0	0	80	51	1	0	0
nfs inode cache	0	0	600	13	2	0	0
cfq_queue bsg_cmd mqueue_inode_cache nfs_direct_cache nfs_inode_cache fat_inode_cache fat_cache	0	0	416	19	2	0	0
fat cache	0	0	24	170	1	0	0
							8
configfs_dir_cache posix_timers_cache rpc_inode_cache UNIX UDP-Lite UDP	0	0	56	73	1	0	0
posix timers cache	0	0	104	39	1	0	0
rpc inode cache	17	17	480	17	2	1	1
UNIX	57	57	416	19	2	3	3
UDP-Lite	0	0	512	16	2	0	0
UDP	32	32	512	16	2	2	2
tw_sock_TCP TCP eventpoll_pwq sgpool-128 sgpool-64	32	32	128	32	1	1	1
TCP	28	28	1120	14	4	2	2
eventpoll_pwq	204	204	40	102	1	2	2
sgpool-128	12	12	2560	12	8	1	1
sgpool-64	12	12	1280	12	4	1	1
Samoo I = 37	17	17	6411	17			1
scsi_data_buffer	170	170	24	170	1	1	1
blkdev_queue	48	48	1288	12	4	4	4
blkdev_requests	60	44	200	20	1	3	3
biovec-256	10	10	3072	10	8	1	1
scsi_data_buffer blkdev_queue blkdev_requests biovec-256 biovec-128	0	0	1536	21	8	0	0
D10Vec-64	U	U	768	21	4	U	0
sock_inode_cache			416		2	16	16
skbuff_fclone_cache	460	290	352		2	20	20
file_lock_cache	72	72	112	36	1	2	2
file_lock_cache net_namespace shmem_inode_cache proc_inode_cache sigquee	24	24	320	12 18 21	1	2	2
shmem_inode_cache	1170	1144	448	18	2	65	65
proc_inode_cache	777	768	376	21	2	37	37
sigqueue	56	56	144	28		2	2
radix tree node	1222	10/0	290	13		94	94
bdev_cache	34	34	480	17	2	2	2

sysfs_dir_cache	7055	7010	48	85	1	83	83
filp	1700	1520	160	25	1	68	68
inode_cache	3243	3038	352	23	2	141	141
dentry	6210	5398	136	30	1	207	207
buffer_head	280	277	72	56	1	5	5
vm_area_struct	3358	3250	88	46	1	73	73
mm_struct	126	115	448	18	2	7	7
files cache	72	71	224	18	1 2	4	4
signal cache	119	116	480	17	2	7	7
sighand cache	108	103	1312	12	4	9	9
task struct	260	250	1248	13	4	20	20
anon vma	1280	1278	16	256	1	5	5
idr Tayer cache	208	208	152	26	1	8	8
kmalloc-8192	8	8	8192	4	8	2	2
kmalloc-4096	104	99	4096	8	8	13	13
kmalloc-2048	128	115	2048	16	8	8	8
kmalloc-1024	256	256	1024	16	4	16	16
kmalloc-512	288	240	512	16	2	18	18
kmalloc-256	352	351	256	16	1	22	22
kmalloc-128	896	895	128	32	1	28	28
kmalloc-64	5120	5120	64	64	1	80	80
kmalloc-32	896	883	32	128	1	7	7
kmalloc-16	1536	1535	16	256	1	6	6
kmalloc-8	2560	2558	8	512	1	5	5
kmalloc-192	273	273	192	21	1	13	13
kmalloc-96	966	900	96	42	1	23	23

Variable definitions

Use the data in the following table to use the show khi performance command.

Variable	Value
{slot[-slot][,]}	Specifies the slot number. Valid slot is 1.
history	Specifies virtual memory consumed for each
Note:	process.
Depending on the hardware platform, this parameter appears in show khi performance memory.	

Displaying KHI control processor information

Use the following commands to display key health information about the type of packets and protocols received on a port.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. Display statistics for control packets that go to the control processor:

```
show khi cpp port-statistics [{slot/port[/sub-port][-slot/port[/sub-port]][,...]}]
```

Example

Switch:	Switch:1>show khi cpp port-statistics 3/1-3/7							
	KHI CPP Details - Port Statist	ics						
Ports	Packet Type	Rx Packets	Tx Packets					
_								
3/1	LLC TDP(134)	498	498					
3/1	LLC ISIS(137)	420	421					
	LLC TDP (134)	498	498					
	Ether2 ARP Request(10)	0	1					
3/4	Ether2 IPv4 PIM MC(24)	0	101					
3/4	Ether2 IPv4 OSPF MC(32)	318	320					
3/4	Ether2 IPv4 OSPF UC(34)	5	0					
3/4	LLC TDP(134)	496	496					
3/5	Ether2 ARP Request(10)	4	4					
3/5	Ether2_ARP_Other(11)	0	4					
3/5	Ether2_IPv4_PIM_MC(24)	0	103					
3/5	Ether2_IPv4_OSPF_MC(32)	0	235					
3/5	LLC_TDP(134)	374	374					
3/7	Ether2_ARP_Request(10)	0	1					
3/7	Ether2_ARP_Other(11)	1	0					
3/7	Ether2_IPv4_PIM_MC(24)	153	151					
3/7	Ether2_IPv4_PIM_UC(26)	4	0					

Variable definitions

Use the data in the following table to use the show khi cpp command.

Variable	Value
{slot/port[/sub-port]}	Identifies a single slot and port. If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Clearing KHI information

KHI information can be cleared for a specific slot or across the whole device. Use the command to clear the port statistics.

Procedure

1. Enter Privileged EXEC mode:

enable

2. Clear CPP statistics:

clear khi cpp <port-statistics>

Displaying KHI Fabric Extend ONA status

About this task



Note:

This feature only applies to platforms that have an Open Networking Adapter (ONA) connected to it.

Use the following command to display the current status of the Fabric Extend ONA, which includes release information.

Procedure

1. Enter Privileged EXEC mode:

enable

2. Display the ONA status:

show khi fe-ona status

Example

The following output displays the show khi fe-ona status when the ONA is operating normally.

```
Switch: 1#show khi fe-ona status
           ONA STATUS
______
ONA Device Status : UP
Running Release Name: v1.0.0.0int006-3-g9749735-dirty
Last Image Upgrade Status : UPGRADE_SUCCESS
Last Image File Used For Upgrde: gdb-secure ona.tgz
```

The following examples display the output when communication from the switch to the ONA is disrupted. Note that the ONA Down reason lists the cause of the failure. The reason changes depending on the context of the failure.

The following output displays when the configuration push from the switch to the ONA fails:

```
Switch: 1#show khi fe-ona status
______
         ONA STATUS
______
ONA Device Status : DOWN
ONA DOWN reason : ONA CONFIG DOWNLOAD FAILED
Running Release Name :
Image Upgrade Status : UNKNOWN
```

The following output displays when the port connecting to the ONA device port is DOWN:

```
Switch: 1#show khi fe-ona status
_____
   ONA STATUS
```

```
ONA Device Status: DOWN
ONA DOWN reason: ONA_DEVICE_PORT_DOWN
Running Release Name:
Image Upgrade Status: UNKNOWN
Image File Is Being Used For Upgrade:
```

The following output displays when the switch is not receiving LLDP packets from the ONA:

```
Switch:1#show khi fe-ona status

ONA STATUS

ONA Device Status: DOWN
ONA DOWN reason: ONA_LLDP_TIMEOUT
Running Release Name:
Image Upgrade Status: UNKNOWN
```

Note:

On the switch console, the following log message precedes all three of the above cases:

CP1 $[03/22/71\ 09:30:15.336:UTC]\ 0x00378601\ 00000000\ GlobalRouter\ ONA WARNING ONA device status detected down$

Displaying KHI Fabric Extend ONA global information

About this task



This feature only applies to platforms that have an Open Networking Adapter (ONA) connected to it.

Use the following command to display Fabric Extend ONA global information such as port numbers, IP addresses, and MTU.

Procedure

1. Enter Privileged EXEC mode:

enable

2. Display the ONA global information:

show khi fe-ona detail

Example

```
ONA Device Port Status: UP
ONA Device Status: UP
MTU: 1000
ONA Network Port Number: 1/35
ONA Mac(ARP) Address: 10:cd:ae:69:b6:50
ONA Source VlanId: 1050
ONA Source VlanIP: 192.0.2.1
ONA Gateway IP: 192.0.2.1
ONA Management IP Mask: 255.255.255.0
ONA Bootmode: 1
ONA Uptime: 0 day(s), 00:00:00
pbit-to-dscp-map p0=16 p1=20 p2=24 p3=30 p4=36 p5=40 p6=48 p7=46
```

Note:

In the above example, the switch receives LLDP packets with the Management IP address of the ONA over the ONA Port (1/15). The switch extracts the ONA Management IP from the LLDP packet and resolves the ARP of the ONA over the network port (1/35). After the switch resolves the ARP of the ONA IP, the show khi fe-ona detail updates the following details:

- ONA Network Port Number
- ONA Mac(ARP) Address
- ONA Source VlanId

Note the following in regard to the show khi fe-ona detail output shown above:

- ONA Source VlanIP: 192.0.2.1—This is the IP address of the switch VLAN that switches traffic to the ONA network port. In the above output, this is VLAN 1050.
- ONA Gateway IP: 192.0.2.1—This is the ONA gateway IP address that the switch gets by querying the ONA. The ONA receives this gateway IP from the DHCP server.

Important:

The ONA Source VlanIP, and ONA Gateway IP addresses must be the same for the tunnels to come up and the traffic to switch.

Key Health Indicators using EDM

Use the procedures in this section to display KHI information using EDM.

Clearing KHI statistics

About this task

Clear KHI statistics.

Procedure

1. In the Device Physical View tab, select the Device.

- 2. In the navigation pane, expand the **Configuration > Edit** folders.
- 3. Click Chassis.
- 4. Click the CPP Stats Control tab.
- 5. Select the statistics you want to clear.
- 6. Click Apply.

CPP Stats Control field descriptions

Use the data in the following table to use the CPP Stats Control tab.

Name	Description
PortStatsClear	Clears port statistics.

Displaying KHI port information

About this task

Use the following commands to display key health information about the types of control packets and protocols received on a port and sent to the control processor.

Procedure

- 1. In the Device Physical View, select a port.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Port.
- 4. Click the CPP Stats tab.

CPP Stats field descriptions

Use the data in the following table to use the CPP Stats tab.

Name	Description
Port	Identifies the slot and port.
Packet	Shows the packet type.
PacketName	Shows the name of the packet.
RxPackets	Indicates the number of received packets on the port for the packet type.
TxPackets	Indicates the number of transmitted packets on the port for the packet type.

Chapter 5: Link state change control

Link state change control

Rapid fluctuation in a port link state is called link flapping.

Link flapping is detrimental to network stability because it can trigger recalculation in spanning tree and the routing table.

If the number of port down events exceeds a configured limit during a specified interval, the system forces the port out of service.

You can configure link flap detection to control link state changes on a physical port. You can set thresholds for the number and frequency of changes allowed.

You can configure the system to take one of the following actions if changes exceed the thresholds:

- · send a trap
- · bring down the port

If changes exceed the link state change thresholds, the system generates a log entry.

Link state change control using CLI

Detect and control link flapping to bring more stability to your network.

Controlling link state changes

Configure link flap detection to control state changes on a physical port.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Configure the interval for link state changes:

```
link-flap-detect interval <2-600>
```

3. Configure the number of changes allowed during the interval:

```
link-flap-detect frequency <1-9999>
```

4. Enable automatic port disabling:

link-flap-detect auto-port-down

5. Enable sending a trap:

link-flap-detect send-trap

Example

Enable automatic disabling of the port:

Switch:1(config) #link-flap-detect auto-port-down

Configure the link-flap-detect interval:

Switch:1(config) #link-flap-detect interval 20

Enable sending traps:

Switch:1(config)#link-flap-detect send-trap

Variable definitions

Use the data in the following table to use the link-flap-detect command.

Variable	Value
<auto-port-down></auto-port-down>	Automatically disables the port if state changes exceed the link-flap threshold. By default, auto-port-down is enabled. Use the no operator to remove this configuration. To set this option to the default value, use the default operator with the command.
frequency <1-9999>	Configures the number of changes that are permitted during the time specified by the interval command.
	The default is 20. To set this option to the default value, use the default operator with the command.
interval <2-600>	Configures the link-flap-detect interval in seconds.
	The default value is 60. To set this option to the default value, use the default operator with the command.
send-trap	Activates traps transmission. The default setting is activated. Use the no operator to remove this configuration. To set this option to the default value, use the default operator with the command.

Displaying link state changes

Displays link flap detection state changes on a physical port.

Procedure

1. Enter Privileged EXEC mode:

enable

2. Display link state changes:

show link-flap-detect

Example

Switch:1>enable Switch:1#show link-flap-detect

Auto Port Down : enable Send Trap : enable Interval : 60 Frequency : 20

Link state change control using EDM

Detect and control link flapping to bring more stability to your network.

Controlling link state changes

About this task

Configure link flap detection to control link state changes on a physical port.

Procedure

- 1. In the navigation pane, expand the **Configuration > Edit > Diagnostics** folders.
- 2. Click General.
- 3. Click the Link Flap tab.
- 4. Configure the parameters as required.
- 5. Click Apply.

Link Flap field descriptions

Use the data in the following table to use the Link Flap tab.

Name	Description
AutoPortDownEnable	Enables or disables Link Flap Detect. If you enable Link Flap Detect, the system monitors the number of times a port goes down during a designated interval. If the number of drops exceeds a specified limit, the system forces the port out-of-service. The default is enabled.
SendTrap	Specifies that a trap is sent if the port is forced out-of-service.
Frequency	Specifies the number of times the port can go down. The default is 20.
Interval	Specifies the interval (in seconds) between port failures. The default is 60.

Chapter 6: Logs and traps

Logs and traps

Log and trap fundamentals

Use the information in this section to help you understand Simple Network Management Protocol (SNMP) traps and log files, available as part of the switch System Messaging Platform.

Overview of traps and logs

System log messaging

On a UNIX-based management platform, you can use system log (syslog) messaging to manage event messages. The switch syslog software communicates with a server software component named syslogd on the management workstation.

The UNIX daemon syslogd is a software component that receives and locally logs, displays, prints, and forwards messages that originate from sources internal and external to the workstation. For example, syslogd on a UNIX workstation concurrently handles messages received from applications that run on the workstation, as well as messages received from the switch that runs in a network accessible to the workstation.

The remote UNIX management workstation performs the following actions:

- · Receives system log messages from the switch .
- Examines the severity code in each message.
- Uses the severity code to determine appropriate system handling for each message.

Log consolidation

The switch generates a system log file and can forward that file to a syslog server for remote viewing, storage, and analyzing.

The system log captures messages for the following components:

- Extensible Authentication Protocol (EAP)
- Remote Authentication Dial-in User Service (RADIUS)
- Remote Monitoring (RMON)
- Web
- hardware (HW)

- MultiLink Trunking (MLT)
- filter
- Quality of Service (QoS)
- · Command line interface (CLI) log
- software (SW)
- Central Processing Unit (CPU)
- Internet Protocol (IP)
- Virtual Local Area Network (VLAN)
- · policy
- Simple Network Management Protocol (SNMP) log

The switch can send information in the system log file, including CLI command log and the SNMP operation log, to a syslog server.

View logs for CLILOG module to track all CLI commands executed and for fault management purposes. The CLI commands are logged to the system log file as CLILOG module.

View logs for SNMPLOG module to track SNMP logs. The SNMP operation log is logged to the system log file as SNMPLOG module.

The platform logs CLILOG and SNMPLOG as INFO. Normally, if you configure the logging level to WARNING, the system skips all INFO messages. However, if you enable CLILOG and SNMPLOG the system logs CLI Log and SNMP Log information regardless of the logging level you configure. This is not the case for other INFO messages.

System log client over IPv6 transport

You can log system log messages to external system log hosts with both IPv4 and IPv6 addresses with no difference in functionality or configuration except in the following case. When you configure the system log table in EDM, under the System Log Table tab, you must select either IPv4 or IPv6.

Log messages with enhanced secure mode

Enhanced secure mode allows the system to provide role-based access levels, stronger password requirements, and stronger rules on password length, password complexity, password change intervals, password reuse, and password maximum age use. If you enable enhanced secure mode, the system encrypts the entire log file.

With enhanced secure mode enabled, only individuals in the administrator or auditor role can view log files to analyze switch access and configuration activity. However, no access level role can modify the content of the log files, not even the administrator or the auditor access level roles. The administrator has access to the remove and delete commands.

If you enable enhanced secure mode, you cannot access the following commands for log files at any role-based access level:

- more
- edit
- rename
- сору

If someone attempts to access a log file with the preceding commands, an information and warning message displays on the screen.

The following table summarizes log file command access based on role-based access levels.

Table 1: Log commands accessible for various users

Access level role	Commands
Administrator	The remove and delete commands.
No user at any access level.	The following commands:
	• more
	• edit
	• rename
	• copy
Administrator	All configuration commands can be accessed only by the individual in the administrator role, other than the preceding commands.
Administrator and auditor	All show commands for log files.
All users (Administrator, auditor, security, privilege, operator)	All show commands for log configurations.

With enhanced secure mode enabled, authorized users can use SFTP to transfer files to a remote server with the content encrypted.

SNMP traps

The SNMP trap is an industry-standard method used to manage events. You can set SNMP traps for specific types of log message (for example, warning or fatal), from specific applications, and send them to a trap server for further processing. For example, you can configure the switch to send SNMP traps to a server after a port is unplugged or if a power supply fails.

This document only describes SNMP commands related to traps. For more information about how to configure SNMP community strings and related topics, see *Configuring Security*.

Secure syslog

Syslog is a standard used to send event log messages to devices within a network. The switch sends event messages to a logging server called syslog server. The syslog server stores the log messages and displays them for event reporting. Syslog messages are used for monitoring system activities and troubleshooting.

The secure syslog feature adds security and authenticated access to the plain text event log messages that are communicated between a remote syslog server and a syslog client. The secure syslog feature helps prevent unauthorized access to confidential data transmitted on an unsecured communication channel between a remote syslog server and client.

To implement the security, this feature employs port forwarding using the Transport Layer Security (TLS) to provide encrypted communication between a syslog server and client.

After starting the syslog server, to ensure authentication, you must setup a remote port forwarding connection to connect the switch with a remote TLS Server.

TLS client for secure syslog:

The syslog server is installed on a host that serves as a TLS Server. The switch plays the role of a TLS client for secure syslog. A TLS handshake is initiated between the syslog server and the switch. The syslog server transmits a certificate which has a subject common name and an optional subject alternative name (SAN). The subject common name is always present in the certificate but the SAN is optional. The server-cert-name must match the SAN name, if present in the certificate. If the SAN name is not present, it must match the subject common name. Otherwise, TLS negotiation fails and the connection to the server is closed. If the server-cert-name part is not configured, this check is not done.

Once the TLS handshake is successful, the log messages sent from the switch to the syslog server are encrypted. The syslog server decrypts these messages using a private key. The server then stores the messages or forwards them to other servers.

This feature supports the Rsyslog, which is a Linux based open source syslog server for TLS tunneling.

Simple Network Management Protocol

The Simple Network Management Protocol (SNMP) provides facilities to manage and monitor network resources. SNMP consists of:

- Agents—An agent is software that runs on a device that maintains information about device configuration and current state in a database.
- Managers—An SNMP manager is an application that contacts an SNMP agent to query or modify the agent database.
- The SNMP protocol—SNMP is the application-layer protocol SNMP agents and managers use to send and receive data.
- Management Information Bases (MIB)—The MIB is a text file that specifies the managed objects by an object identifier (OID).

Important:

The switch does not reply to SNMP requests sent to the Virtual Router Redundancy Protocol (VRRP) virtual interface address; it does, however, reply to SNMP requests sent to the physical IP address.

An SNMP manager and agent communicate through the SNMP protocol. A manager sends queries and an agent responds; however, an agent initiates traps. Several types of packets transmit between SNMP managers and agents:

- Get request—This message requests the values of one or more objects.
- Get next request—This message requests the value of the next object.
- Set request—This message requests to modify the value of one or more objects.
- Get response—An SNMP agent sends this message in response to a get request, get next request, or set request message.
- Trap—SNMP trap is a notification triggered by events at the agent.

Log message format

The log messages for the switch have a standardized format. All system messages are tagged with the following information, except that alarm type and alarm status apply to alarm messages only:

- CPU slot number—Indicates the CP slot where the command is logged.
- timestamp—Records the date and time at which the event occurred. The format is MM/DD/YY hh:mm:ss.uuu, where uuu is milliseconds. Example: [11/01/10 11:41:21.376].
- event code—Precisely identifies the event reported.
- alarm code—Specifies the alarm code.
- alarm type—identifies the alarm type (Dynamic or Persistent) for alarm messages
- alarm status—identifies the alarm status (set or clear) for alarm messages
- VRF name—Identifies the Virtual Routing and Forwarding (VRF) instance, if applicable.
- module name—Identifies the software module or hardware from which the log is generated.
- severity level—Identifies the severity of the message.
- sequence number—Identifies a specific CLI command.
- context—Specifies the type of the session used to connect to the switch. If the session is a remote session, the remote IP address is identified.
- user name—Specifies the user name used to login to the switch.
- CLI command—Specifies the commands typed during the CLI session. The system logs anything type during the CLI session as soon as the user presses the Enter key.

The following messages are examples of an informational message for CLILOG:

```
CP1 [07/18/14 13:23:11.253] 0x002c0600 00000000 GlobalRouter CLILOG INFO 13 TELNET:
192.0.2.200 rwa show log file name-of-file log.40300001.1806
CP1 [07/18/14 13:24:19.739] 0x002c0600 00000000 GlobalRouter CLILOG INFO 15 TELNET:
192.0.2.200 rwa term more en
CP1 [07/18/14 13:24:22.577] 0x002c0600 00000000 GlobalRouter CLILOG INFO 16 TELNET:
192.0.2.200 rwa show log
CP1 [01/12/70 15:13:59.056] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                           5 TELNET:
198.51.100.108 rwa syslog host 4
CP1 [01/12/70 15:13:35.520] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                           4 TELNET:
198.51.100.108 rwa syslog host enable
CP1 [01/12/70 15:13:14.576] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                            3 TELNET:
198.51.100.108 rwa show syslog
CP1 [01/12/70 15:12:44.640] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                            2 TELNET:
198.51.100.108 rwa show logging file tail
```

The following messages are examples of an informational message for SNMPLOG:

```
CP1 [05/07/14 10:24:05.468] 0x002c4600 00000000 GlobalRouter SNMPLOG INFO 1
ver=v2c public rcVlanPortMembers.2 =

CP1 [05/07/14 10:29:58.133] 0x002c4600 00000000 GlobalRouter SNMPLOG INFO 2
ver=v2c public rcVlanPortMembers.2 =
```

```
CP1 [05/07/14 10:30:20.466] 0x002c4600 00000000 GlobalRouter SNMPLOG INFO 3 ver=v2c public rcVlanPortMembers.1 =
```

The following messages are examples of an informational message for system logs:

```
CP1 [07/24/14 18:04:08.304] 0x00000670 00000000 GlobalRouter SW INFO Basic license supports all features on this device
CP1 [07/24/14 18:04:10.651] 0x00034594 00000000 GlobalRouter SW INFO System boot
CP1 [07/24/14 18:04:10.651] 0x00034595 00000000 GlobalRouter SW INFO VSP-8200 System
Software Release 0.0.0.0 B553
CP1 [07/24/14 18:04:10.779] 0x00010774 00000000 GlobalRouter HW INFO Detected 8 284XSQ chassis
CP1 [07/24/14 18:04:10.779] 0x0001081c 00400010.2 DYNAMIC SET GlobalRouter HW INFO Slot
2 is initializing.
CP1 [07/24/14 18:04:10.780] 0x0001081c 00400010.1 DYNAMIC SET GlobalRouter HW INFO Slot
1 is initializing.
CP1 [07/24/14 18:04:10.810] 0x00010729 00000000 GlobalRouter HW INFO Detected 8284XSQ Power Supply in slot PS 1. Adding 800 watts to available power
CP1 [07/24/14 18:04:10.811] 0x00010830 00000000 GlobalRouter HW INFO Detected 8242XSQ module (Serial#: SDNIV84Q2013) in slot 2
```

The system encrypts AP information before writing it to the log file.

The encrypted information in a log file is for debugging purposes. Only a Customer Service engineer can decrypt the encrypted information in a log file. CLI commands display the logs without the encrypted information. Do not edit the log file.

The following table describes the system message severity levels.

Table 2: Severity levels

Severity level	Definition
EMERGENCY	A panic condition that occurs when the system becomes unusable. A severity level of emergency is usually a condition where multiple applications or servers are affected. You must correct a severity level of emergency immediately.
ALERT	Any condition requiring immediate attention and correction. You must correct a severity level of alert immediately, but this level usually indicates failure of a secondary system, such as an Internet Service Provider connection.
CRITICAL	Any critical conditions, such as a hard drive error.
ERROR	A nonfatal condition occurred. You can be required to take appropriate action. For example, the system generates an error message if it is unable to lock onto the semaphore required to initialize the IP addresses used to transfer the log file to a remote host.
WARNING	A nonfatal condition occurred. No immediate action is needed. An indication that an error can occur if action is not taken within a given amount of time.
NOTIFICATION	Significant event of a normal nature. An indication that unusual, but not error, conditions have occurred. No immediate action is required.
INFO	Information only. No action is required.

Table continues...

Severity level	Definition
DEBUG	Message containing information useful for debugging.
FATAL	A fatal condition occurred. The system cannot recover without restarting. For example, a fatal message is generated after the configuration database is corrupted.

Based on the severity code in each message, the platform dispatches each message to one or more of the following destinations:

- workstation display
- · local log file
- · one or more remote hosts

You can log system log messages to external system log hosts with both IPv4 and IPv6 addresses with no difference in functionality or configuration except in the following case. When you configure the system log table in EDM, under the System Log Table tab, you must select either IPv4 or IPv6.

Internally, the switch has four severity levels for log messages: INFO, WARNING, ERROR, and FATAL. The system log supports eight different severity levels:

- Debug
- Info
- Notice
- Warning
- Critical
- Error
- Alert
- Emergency

The following table shows the default mapping of internal severity levels to syslog severity levels.

Table 3: Default and system log severity level mapping

UNIX system error codes	System log severity level	Internal severity level
0	Emergency	Fatal
1	Alert	_
2	Critical	_
3	Error	Error
4	Warning	Warning
5	Notice	_
6	Info	Info
7	Debug	_

Log files

The log file captures hardware and software log messages, and alarm messages. The switch logs to internal flash.

The system saves internal log messages in a circular list in memory, which overwrite older log messages as the log fills. Unlike the log messages in a log file, the internal log messages in memory do not contain encrypted information, which can limit the information available during troubleshooting. Free up the disk space on the flash if the system generates the disk space 75% full alarm. After the disk space utilization returns below 75%, the system clears the alarm, and then starts logging to a file again.

Log file naming conventions

The following list provides the naming conventions for the log file:

- The log file is named as log.xxxxxxxxx.sss format. The prefix of the log file name is log. The six characters after the log file prefix contain the last three bytes of the chassis base MAC address. The next two characters are 01. The last three characters (sss) denote the sequence number of the log file.
- The sequence number of the log file is incremented for each new log file created after the existing log file reaches the maximum configured size.
- At initial system start up when no log file exists, a new log file with the sequence number 000 is created. After a restart, the system finds the newest log file from internal flash based on file timestamps. If the newest log file is on the flash that is used for logging, the system continues to use the newest log file. And once the maximum configured size is reached, system continues to create a new log file with incremental sequence number on the internal flash for logging.

Log file transfer

The system logs contain important information for debugging and maintaining the switch. After the current log file reaches the configured maximum size, the system creates a new log file for logging. The system transfers old log files to a remote host. You can configure up to 10 remote hosts, which creates long-term backup storage of your system log files.

Of the 10 configured remote hosts, 1 is the primary host and the other 9 are redundant. Upon initiating a transfer, system messaging attempts to use host 1 first. If host 1 is not reachable, system messaging tries hosts 2 to 10.

If log file transfer is unsuccessful, the system keeps the old log files on internal flash. The system attempts to transfer old log files after the new log file reaches the configured maximum size. The system also attempts to transfer old log files periodically (once in one hundred log writes) if the disk space on the flash is more than 75% full.

You can log system log messages to external system log hosts with both IPv4 and IPv6 addresses with no difference in functionality or configuration.

With enhanced secure mode enabled, authorized users can use SFTP to transfer files to a remote server with the content encrypted.

You can specify the following information to configure the transfer criteria:

· The maximum size of the log file.

- · The IP address of the remote host.
- The name prefix of the log file to store on the remote host.

The system appends a suffix of .xxxxxxxxx.sss to the file name. The first six characters of the suffix contain the last three bytes of the chassis base MAC address. The next two characters are 01. The last three characters (sss) denote the sequence number of the log file. For example, if you configure the name prefix as mylog, a possible file name is mylog. 9000001.001.

• The user name and password, if using File Transfer Protocol (FTP) for file transfer. Use the following commands to configure the user name and password:

```
boot config host user WORD<0-16>
boot config host password WORD<0-16>
```

Be aware of the following restrictions to transfer log files to a remote host:

- The remote host IP address must be reachable.
- If you transfer a log file from a host to the system, (for example, to display it with a show command), rename the log file. Failure to rename the log file can cause the system to use the recently transferred file as the current log, if the sequence number in the extension is higher than the current log file. For example, if bf860005.002 is the current log file and you transfer bf860005.007 to the system, the system logs future messages to the bf860005.007 file. You can avoid this if you rename the log file to something other than the format used by system messaging.
- If your TFTP server is a UNIX-based machine, files written to the server must already exist. For example, you must create dummy files with the same names as your system logs. This action is commonly performed by using the touch command (for example, touch bf860005.001).

Three parameters exist to configure the log file:

- the minimum acceptable free space available for logging
- · the maximum size of the log file
- the percentage of free disk space the system can use for logging

Although these three parameters exist, you can only configure the maximum size of the log file. The switch does not support the minimum size and percentage of free disk space parameters. The internal flash must be less than 75% full for the system to log a file. If the internal flash is more than 75% full, logging to a file stops to prevent exhausting disk space.

Log file transfer using a wildcard filename

File transfers using SFTP require file permissions.

Use the command attribute WORD<1-99> [+/-] R to change the permissions of a file.

To change permissions for all log files, use the wildcard filename log.*. Using the command in the wildcard form attribute log.* [+/-]R changes permissions for log files with names that begin with the characters "log.".

Important:

You cannot use a wildcard pattern other than log. * for this command.

Email notification

The switch can send email notification for failed components or other critical log-event conditions. The switch can also send periodic health status notifications.

Enable and configure a Simple Mail Transfer Protocol (SMTP) client on the switch for one SMTP server by specifying the server hostname or IPv4 address. To use a hostname, you must also configure a Domain Name System (DNS) client on the switch.

You must configure at least one email recipient and can create a maximum of five email recipients.

The switch can periodically send general health status notifications. Status email messages include information about the following items:

- · General switch
- Chassis
- Card
- Temperature
- Power supplies
- Fans
- LEDs
- · System errors
- Port lock
- Message control
- Operational configuration changes
- Current Uboot
- · Port interfaces
- · Port statistics

The switch maintains a default list of event IDs for which it generates an email notification. You can add specific event IDs to this list. To see the default list of event IDs, run the show smtp event-id command.

The following example shows an email that the switch sends for log events.

```
Subject: Logs from LabSwitch - 50712100008
From: <LabSwitch@default.com>
To: <test1@default.com>
CP1 [08/04/15 21:48:04.527:UTC] 0x00004603 00400003.67108870 DYNAMIC CLEAR GlobalRouter
SNMP INFO 2k card up(CardNum=1 AdminStatus=1 OperStatus=1)
CP1 [08/04/15 21:48:04.527:UTC] 0x00004603 00400003.67108870 DYNAMIC CLEAR GlobalRouter
SNMP INFO 2k card up(CardNum=1 AdminStatus=1 OperStatus=1)
CP1 [08/04/15 21:48:04.527:UTC] 0x00004603 00400003.67108870 DYNAMIC CLEAR GlobalRouter
SNMP INFO 2k card up(CardNum=2 AdminStatus=1 OperStatus=1)
CP1 [08/04/15 21:50:03.511:UTC] 0x000088524 00000000 GlobalRouter SW INFO Boot sequence
successful
```

If you enable the SMTP client but the switch cannot reach the SMTP server, the switch generates an alarm. The switch holds log and status information in a queue until the connection with the SMTP

server is restored. The message queue holds a maximum of 2,000 messages. If the queue fills, the switch drops new messages.

The following text is an example of the alarm that the switch generates when it cannot connect to the SMTP server.

```
CP1 [06/10/15\ 19:27:07.901:EST]\ 0x00398600\ 0e600000 DYNAMIC SET GlobalRouter SMTP WARNING SMTP: Unable to establish connection with server: mailhost.usae.company.com, port: 25
```

If the switch cannot establish a connection to the SMTP server, verify that the server IP address or hostname, and the TCP port are correct. If you specify the server hostname, confirm that the IP address for the DNS server is correct. Check for network issues such as unplugged cables.

If the SMTP server rejects the email message, the switch generates a log message.

Log configuration using CLI

Use log files and messages to perform diagnostic and fault management functions.

Configuring a UNIX system log and syslog host

Configure the syslog to control a facility in UNIX machines that logs SNMP messages and assigns each message a severity level based on importance.

About this task

You can log system log messages to external system log hosts with both IPv4 and IPv6 addresses with no difference in functionality or configuration.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Enable the system log:

```
syslog enable
```

3. Specify the IP header in syslog packets:

```
syslog ip-header-type <circuitless-ip|default>
```

4. Configure the maximum number of syslog hosts:

```
syslog max-hosts <1-10>
```

5. Create the syslog host:

```
syslog host <1-10>
```

6. Configure the IP address for the syslog host:

```
syslog host <1-10> address WORD <0-46>
```

7. Enable the syslog host:

```
syslog host <1-10> enable
```

Configure optional syslog host parameters by using the variables in the following variable definition tables.

8. View the configuration to ensure it is correct:

```
show syslog [host \langle 1-10 \rangle]
```

Example

```
Switch:1(config) # syslog enable
Switch:1(config) # syslog host 7 address 192.0.2.1
Switch:1(config) # syslog host 7 enable
Switch:1(config) #show syslog host 7
                 Id : 7
            IpAddr : 192.0.2.1
            UdpPort : 514
           Facility : local7
   Severity: info|warning|error|fatal MapInfoSeverity: info
MapWarningSeverity : warning
  MapErrorSeverity : error
    MapMfgSeverity : notice
  MapFatalSeverity : emergency
Enable : true
SecureForwardingMode: none
    Tcp Port: 1025
Switch:1(config) #show syslog
Enable
          : true
Max Hosts : 5
 OperState : active
header : default
Total number of configured hosts : 3
Total number of enabled hosts : 1
Configured host: 7 8 9 Enabled host: 7
```

Variable definitions

Use the data in the following table to use the syslog command.

Variable	Value
enable	Enables the sending of syslog messages on the device. Use the no operator before this parameter, no syslog enable, to disable the sending of syslog messages on the device. The default is enabled.

Table continues...

Variable	Value
ip-header-type <circuitless-ip default></circuitless-ip default>	Specifies the IP header in syslog packets to circuitless-ip or default.
	 If the value is default, the IP address of the VLAN is used for syslog packets that are transmitted in-band using input/ output (I/O) ports.
	 If the value is circuitless-ip, then for all syslog messages (in-band or out-of-band), the circuitless IP address is used in the IP header. If you configure multiple circuitless IPs, the first circuitless IP configured is used.
max-hosts <1-10>	Specifies the maximum number of syslog hosts supported, from 1–10. The default is 5.

Use the data in the following table to use the syslog host command.

Variable	Value
1–10	Creates and configures a host instance. Use the no operator before this parameter, no syslog host, to delete a host instance.
address WORD <0–46>	Configures a host location for the syslog host. WORD <0–46> is the IPv4 or IPv6 address of the UNIX system syslog host in the format A.B.C.D or x:x:x:x:x:x:x:X You can log system log messages to external system log hosts with both IPv4 and IPv6 addresses with no difference in functionality or configuration.
enable	Enables the syslog host. Use the no operator before this parameter, no syslog host enable, to disable syslog host. The default is disabled.
facility {local0 local1 local2 local3 local4 local5 local6 local7}	Specifies the UNIX facility in messages to the syslog host. {local0 local1 local2 local3 local4 local5 local6 local7} is the UNIX system syslog host facility. The default is local7.
maperror {emergency alert critical error warning notice info debug}	Specifies the syslog severity to use for error messages. The default is error.
mapfatal {emergency alert critical error warning notice info debug}	Specifies the syslog severity to use for fatal messages. The default is emergency.
mapinfo {emergency alert critical error warning notice info debug}	Specifies the syslog severity level to use for information messages. The default is info.
mapwarning {emergency alert critical error warning notice info debug}	Specifies the syslog severity to use for warning messages. The default is warning.
severity <info warning error fatal> [<info warning error fatal="">] [<info warning error fatal="">] [<info warning error fatal>]</info warning error fatal></info warning error ></info ></info warning error fatal>	Specifies the severity levels for which to send syslog messages. You can specify up to four severity levels in the same command string. The default is info.
udp-port <514-530>	Specifies the User Datagram Protocol port number on which to send syslog messages to the syslog host. This value is the UNIX system syslog host port number from 514–530. The default is 514.

Configuring secure forwarding

Configuring secure forwarding includes setting the mode for the particular syslog host and setting the TCP port through which the logs are sent to the syslog server.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Create the syslog host:

```
syslog host <1-10>
```

Use the no operator before this parameter, that is, no syslog host to delete a host instance.

3. Configure an IP address for the syslog host:

```
syslog host <1-10> address WORD<0-46>
```

4. Enable the syslog host:

```
syslog host <1-10> enable
```

5. Enable syslog globally:

```
syslog enable
```

6. Set the mode for secure forwarding on the host:

```
syslog host <1-10> secure-forwarding mode <none | tls [server-cert-name WORD<1-64>]>
```

7. Set the TCP port:

```
syslog host <1-10> secure-forwarding tcp-port <1025-49151>
```

8. Display the secure forwarding configured values:

```
show syslog host <1-10>
```

9. **(Optional)** Remove the server certificate name:

```
no syslog host <1-10> secure-forwarding mode tls server-cert-name
```

10. **(Optional)** Set secure-forwarding mode to none for a particular host:

```
default syslog host <1-10> secure-forwarding mode
```

Next steps

After configuring secure forwarding on the switch, set the syslog server to be able to see the log messages on the interactive syslog viewer.

• For TLS secure syslog, on the rsyslog server, configure the server to use TLS method and install the root certificate on the server in the switch.

Variable definitions

Use the data in the following table to use the syslog host command.

Variable	Value
host <1-10>	Specifies the ID for the syslog host. The range is 1–10.
address WORD<0-46>	Configures a host location for the syslog host. WORD <0–46> is the IPv4 or IPv6 address of the UNIX system syslog host in the format A.B.C.D or x:x:x:x:x:x:x:x. You can log system log messages to external system log hosts with both IPv4 and IPv6 addresses with no difference in functionality or configuration using CLI.
enable	Enables the syslog host. Use the no operator before this parameter, no syslog host enable to disable syslog host. The default is disabled.
secure-forwarding	Adds protected syslog using remote port forwarding for host.

Use the data in the following table to use the syslog host secure-forwarding command.

Variable	Value	
host <1–10>	Creates and configures a host instance. Use the no operator before this parameter, no syslog host to delete a host instance.	
mode <none [server-cert-name="" tls="" word<1-64="" ="">]></none>	Specifies the mode of secure forwarding of syslog on the host. The default mode is none, that is, tls mode is disabled by default.	
	Note:	
	Certificate validation is done only if the server-cert-name is configured.	
tcp-port <1025-49151>	Set tcp-port for secure forwarding of syslog for host. The default tcp-port is 1025.	
	To set the TCP port to default value, use command default syslog host <1-10> secure-forwarding tcp-port.	
	Important:	
	The tcp-port 6000 cannot be used, as it is used as an internal port for Internal Spanning Tree (IST).	

Installing root certificate for syslog client

Use the following procedure to install a root certificate for a syslog client.

Procedure

1. Enter Global Configuration mode:

enable
configure terminal

2. Install a root certificate on the store:

syslog root-cert install-filename <file-name>

The certificate is installed in folder: /intflash/.cert/.syslogrootinstalledcert/.



Note:

The offline root certificate for TLS syslog must be kept in folder: / intflash/.cert/..syslogofflinerootcert/.

3. Uninstall a root certificate from the store:

```
no syslog root-cert install-filename <file-name>
```

4. To display the installed syslog server root certificate file:

```
show syslog root-cert-file
```

Variable definition

Use the data in the following table to use the syslog root-cert command.

Variable	Value
install-filename WORD<1– 128>	Specifies the name of the root certificate to be installed on the store.

Configuring logging

Configure logging to determine the types of messages to log and where to store the messages.

About this task



Note:

The platform logs CLILOG and SNMPLOG as INFO. Normally, if you configure the logging level to WARNING, the system skips all INFO messages. However, if you enable CLILOG and SNMPLOG the system logs CLI Log and SNMP Log information regardless of the logging level you configure. This is not the case for other INFO messages.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Define which messages to log:

```
logging level <0-4>
```

3. Write the log file from memory to a file:

```
logging write WORD<1-1536>
```

4. Show logging on the screen:

```
logging screen
```

Example

```
Switch:1(config) #logging level 0
Switch:1(config) #logging write log2
Switch:1(config) #logging screen
```

Variable definitions

Use the data in the following table to use the logging command.

Variable	Value
level <0-4>	Shows and configures the logging level. The level is one of the following values:
	0: Information — all messages are recorded
	1: Warning — only warning and more serious messages are recorded
	2: Error — only error and more serious messages are recorded
	3: Manufacturing — this parameter is not available for customer use
	4: Fatal — only fatal messages are recorded
screen	Configures the log display on the screen to on. Use the no form of the command to stop the log display on the screen: no logging screen
transferFile <1–10> address {A.B.C.D} filename-prefix WORD<0–200	Transfers the syslog file to a remote FTP or TFTP server. <1–10> specifies the file ID. The address {A.B.C.D} option specifies the IP address. The filename-prefix WORD<0–200> option sets the filename prefix for the log file at the remote host.
write WORD<1-1536>	Writes the log file with the designated string. <i>WORD<1-1536></i> is the string or command that you append to the log file. If the string contains spaces, you must enclose the string in quotation marks (").

Configuring the remote host address for log transfer

Configure the remote host address for log transfer. The system transfers the current log file to a remote host after the log file size reaches the maximum size.

Before you begin

• The IP address you configure for the remote host must be reachable at the time of configuration.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Configure the remote host address for log transfer:

logging transferFile $\{1-10\}$ address $\{A.B.C.D\}$ [filename-prefix WORD < 0-200 > 1

Example

Switch:1(config) # logging transferFile 1 address 192.0.2.10

Variable definitions

Use the data in the following table to use the logging transferFile command.

Variable	Value
1–10	Specifies the file ID to transfer.
address {A.B.C.D}	Specifies the IP address of the host to which to transfer the log file. The remote host must be reachable or the configuration fails.
filename-prefix WORD<0-200>	Specifies the name of the file on the remote host. If you do not configure a name, the current log file name is the default.

Configuring system logging

System logs are a valuable diagnostic tool. You can send log messages to flash files for later retrieval.

About this task

You can change log file parameters at anytime without restarting the system. Changes made to these parameters take effect immediately.

Configure logging to a flash file at all times as a best practice.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Enable system logging to a PC card file:

```
boot config flags logging
```

3. Configure the logfile parameters:

```
boot config logfile <64-500> <500-16384> <10-90>
```

Example

```
Switch:1>enable
Switch:1#configure terminal
Switch:1(config)#boot config logfile 64 600 10
```

Variable definitions

Use the data in the following table to use the boot config command.

Variable	Value
flags logging	Enables or disables logging to a flash file. The log file is named using the format log.xxxxxxxxxsss. The first six characters after the prefix of the file name log contain the last three bytes of the chassis base MAC address. The next two characters specify the slot number. The last three characters denote the sequence number of the log file.
logfile <64-500> <500-16384> <10-90>	Configures the following logfile parameters:
	 <64-500> specifies the minimum free memory space on the external storage device from 64–500 KB. The switch does not support this parameter.
	• <500-16384> specifies the maximum size of the log file from 500–16384 KB.
	• <10-90> specifies the maximum percentage, ranging from 10–90 percent, of space on the external storage device the logfile can use. The switch does not support this parameter.

Configuring system message control

Configure system message control to suppress duplicate error messages on the console, and to determine the action to take if they occur.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Configure system message control action:

```
sys msg-control action <both|send-trap|suppress-msg>
```

3. Configure the maximum number of messages:

```
sys msg-control max-msg-num <2-500>
```

4. Configure the interval:

```
sys msg-control control-interval <1-30>
```

5. Enable message control:

```
sys msg-control
```

Example

```
Switch:1(config) #sys msg-control action suppress-msg
Switch:1(config) #sys msg-control max-msg-num 10
Switch:1(config) #sys msg-control control-interval 15
Switch:1(config) #sys msg-control
```

Variable definitions

Use the data in the following table to use the sys msg-control command.

Variable	Value
action <both send-trap suppress-msg></both send-trap suppress-msg>	Configures the message control action. You can either suppress the message or send a trap notification, or both. The default is suppress.
control-interval <1-30>	Configures the message control interval in minutes. The valid options are 1–30. The default is 5.
max-msg-num <2-500>	Configures the number of occurrences of a message after which the control action occurs. To configure the maximum number of occurrences, enter a value from 2–500. The default is 5.

Extending system message control

Use the force message control option to extend the message control feature functionality to the software and hardware log messages.

About this task

To enable the message control feature, you must specify an action, control interval, and maximum message number. After you enable the feature, the log messages that get repeated and cross the maximum message number in the control interval, trigger the force message feature. You can either suppress the message or send a trap notification, or both.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Configure the force message control option:

```
sys force-msg WORD<4-4>
```

Example

Add a force message control pattern. If you use a wildcard pattern (****), all messages undergo message control.

```
Switch:1>enable
Switch:1#configure terminal
Switch:1(config) #sys force-msg ****
```

Variable definitions

Use the data in the following table to use the sys force-msg command.

Variable	Value
WORD<4-4>	Adds a forced message control pattern, where WORD<4-4> is a string of 4 characters. You can add a four-byte pattern into the force-msg table. The software and the hardware log messages that use the first four bytes that match one of the

Variable	Value
	patterns in the force-msg table undergo the configured message control action. You can specify up to 32 different patterns in the force-msg table, including a wildcard pattern (****) as well. If you specify the wildcard pattern, all messages undergo message control.

Viewing logs

View log files by file name, category, or severity to identify possible problems.

About this task

View CLI command and SNMP trap logs, which are logged as normal log messages and logged to the system log file.

Procedure

1. Enter Privileged EXEC mode:

enable

2. Show log information:

```
show logging file [alarm] [CPU WORD<0-100>] [detail] [event-code WORD<0-10>] [module WORD<0-100>] [name-of-file WORD<1-99>] [save-to-file WORD<1-99>] [severity WORD<0-25>] [tail] [vrf WORD<0-32>]
```

Example

Display log file information:

```
Switch: 1>enable
Switch: 1#configure terminal
Switch:1(config) #show logging file
CP1 [02/06/15 22:38:20.678:UTC] 0x00270428 00000000 GlobalRouter SW INFO Lifecy cle: Start
CP1 [02/06/15 22:38:21.770:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s sockserv started, pid:4794
CP1 [02/06/15 22:38:21.771:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s oom95 started, pid:4795
CP1 [02/06/15 22:38:21.771:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s oom90 started, pid:4796
CP1 [02/06/15 22:38:21.772:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s imgsync.x started, pid:4797
CP1 [02/06/15 22:38:22.231:UTC] 0x0026452f 00000000 GlobalRouter SW INFO No pat
ch set.
CP1 [02/06/15 22:38:22.773:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s logServer started, pid:4840
CP1 [02/06/15 22:38:22.774:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s trcServer started, pid:4841
CP1 [02/06/15 22:38:22.774:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s oobServer started, pid:4842
CP1 [02/06/15 22:38:22.775:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s cbcp-main.x started, pid:4843
CP1 [02/06/15 22:38:22.776:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s rssServer started, pid:4844
CP1 [02/06/15 22:38:22.777:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s dbgServer started, pid:4845
CP1 [02/06/15 22:38:22.777:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s dbgShell started, pid:4846
```

```
CP1 [02/06/15 22:38:22.778:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s coreManager.x started, pid:4847
CP1 [02/06/15 22:38:22.779:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s ssio started, pid:4848
CP1 [02/06/15 22:38:22.780:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s hckServer started, pid:4849
CP1 [02/06/15 22:38:22.780:UTC] 0x0027042b 00000000 GlobalRouter SW INFO Proces
s remCmdAgent.x started, pid:4850
CP1 [02/06/15 22:38:24.717:UTC] 0x000006cc 00000000 GlobalRouter SW INFO rcStar
t: FIPS Power Up Self Test SUCCESSFUL - 0
CP1 [02/06/15 22:38:24.718:UTC] 0x000006c2 00000000 GlobalRouter SW INFO rcStar
t: Security Stack Init SUCCESSFUL - 0
CP1 [02/06/15 22:38:24.718:UTC] 0x000006c3 00000000 GlobalRouter SW INFO rcStar
t: IPSEC Init SUCCESSFUL
CP1 [02/06/15 22:38:24.718:UTC] 0x000006bf 00000000 GlobalRouter SW INFO rcStar
t: Security Stack Log init SUCCESSFUL - 0
CP1 [02/06/15 22:38:26.111:UTC] 0x000005c0 00000000 GlobalRouter SW INFO Licens
eLoad = ZERO, loading premier license for developer debugging
IO1 [02/06/15 22:38:26.960:UTC] 0x0011054a 00000000 GlobalRouter COP-SW INFO De
tected Master CP in slot 1
--More-- (q = quit)
Switch: 1 (config) #show logging file module SNMP
CP1 [02/06/15 22:39:58.530:UTC] 0x00004595 00000000 GlobalRouter SNMP INFO Boot
ed with file
CP1 [02/06/15 22:39:59.547:UTC] 0x00004603 00400003.67108870 DYNAMIC CLEAR Glob
alRouter SNMP INFO 2k card up(CardNum=1 AdminStatus=1 OperStatus=1)
CP1 [02/06/15 22:39:59.547:UTC] 0x00004603 00400003.67108870 DYNAMIC CLEAR Glob
alRouter SNMP INFO 2k card up(CardNum=2 AdminStatus=1 OperStatus=1)
CP1 [02/06/15 22:39:59.547:UTC] 0x00004603 00400003.67108870 DYNAMIC CLEAR Glob
alRouter SNMP INFO 2k card up(CardNum=3 AdminStatus=1 OperStatus=1)
CP1 [02/06/15 22:40:45.839:UTC] 0x000045e5 00400005 DYNAMIC SET GlobalRouter SN
MP INFO Sending Cold-Start Trap
```

Variable definitions

Use the data in the following table to use the show logging file command.

Variable	Value
alarm	Displays alarm log entries.
CPU WORD <0-100>	Filters and lists the logs according to the CPU that generated the message. Specify a string length of 0-25 characters. To specify multiple filters, separate each CPU by the vertical bar (), for example, CPU1 CPU2.
detail	Displays CLI and SNMP logging information.
event-code WORD<0-10>	Specifies a number that precisely identifies the event reported.
module WORD<0-100>	Filters and lists the logs according to module. Specifies a string length of 0–100 characters. Categories include SNMP, EAP, RADIUS, RMON, WEB, HW, MLT, FILTER, QOS, CLILOG, SW, CPU, IP, VLAN, IPMC, and SNMPLOG. To specify multiple filters, separate each category by the vertical bar (), for example, FILTER QOS.
name-of-file WORD<1-99>	Displays the valid logs from this file. For example, /intflash/logcopy.txt. You cannot use this command on the current log file, the file into which the messages are currently logged. Specify a string length of 1 to 99 characters.

Table continues...

Variable	Value
	If you enable enhanced secure mode, the system encrypts the entire log file. After you use the show log file name-of-file WORD<1-99> command, the system takes the encrypted log file name as input, then decrypts it, and prints the output to the screen. You can then redirect the decrypted output to a file that you can store onto the flash. If enhanced secure mode is disabled, the system only encrypts the
	proprietary portion of the log file.
save-to-file WORD<1-99>	Redirects the output to the specified file and removes all encrypted information. You cannot use the tail option with the save-to-file option. Specify a string length of 1–99 characters.
severity WORD<0-25>	Filters and lists the logs according to severity. Choices include INFO, ERROR, WARNING, and FATAL. To specify multiple filters, separate each severity by the vertical bar (), for example, ERROR WARNING FATAL.
tail	Shows the last results first.
vrf WORD<0-32>	Specifies the name of a VRF instance to show log messages that only pertain to that VRF.

Configuring CLI logging

Use CLI logging to track all CLI commands executed and for fault management purposes. The CLI commands are logged to the system log file as CLILOG module.

About this task



The platform logs CLILOG and SNMPLOG as INFO. Normally, if you configure the logging level to WARNING, the system skips all INFO messages. However, if you enable CLILOG and SNMPLOG the system logs CLI Log and SNMP Log information regardless of the logging level you configure. This is not the case for other INFO messages.

Procedure

1. Enter Global Configuration mode:

enable configure terminal

Enable CLI logging:

clilog enable

3. (Optional) Disable CLI logging:

no clilog enable

4. Ensure that the configuration is correct:

show clilog

5. View the CLI log:

show logging file module clilog

Example

Enable CLI logging, and view the CLI log:

```
Switch:1>enable
Switch: 1#configure terminal
Switch:1(config) #clilog enable
Switch:1(config) #show logging file module clilog
CP1 [02/13/13 17:27:25.956] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                            1 CONSOLE
rwa show snmp-server host
CP1 [02/13/13 17:28:10.100] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                             2 CONSOLE
rwa show snmp-server notif
CP1 [02/13/13 17:28:45.732] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                             3 CONSOLE
rwa snmp-server force-trap
CP1 [02/13/13 17:29:30.628] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                             4 CONSOLE
rwa show logging file modug
CP1 [02/14/13 19:39:11.648] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                             5 CONSOLE
rwa ena
CP1 [02/14/13 19:39:13.420] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                             6 CONSOLE
rwa conf t
CP1 [02/14/13 19:49:21.044] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                             7 CONSOLE
rwa filter acl 2 enable
CP1 [02/14/13 19:50:08.540] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                             8 CONSOLE
rwa filter acl 2 type inpol
CP1 [02/14/13 19:50:38.444] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                             9 CONSOLE
rwa filter acl 2 type inpoe
CP1 [02/14/13 19:50:52.968] 0x002c0600 0000000 GlobalRouter CLILOG INFO
                                                                            10 CONSOLE
rwa filter acl enable 2
CP1 [02/14/13 19:51:08.908] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                           11 CONSOLE
rwa filter acl 2 enable
CP1 [02/15/13 06:50:25.972] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                           14 CONSOLE
rwa ena
CP1 [02/15/13 06:50:30.288] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                           15 CONSOLE
rwa conf t
CP1 [02/15/13 06:50:39.412] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                           16 CONSOLE
rwa show vlan basic
CP1 [02/15/13 06:51:09.488] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                            17 CONSOLE
rwa show isis spbm
CP1 [02/15/13 06:56:00.992] 0x002c0600 00000000 GlobalRouter CLILOG INFO 19 CONSOLE
rwa spbm 23 b-vid 2 primar1
CP1 [02/15/13 06:56:59.092] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                         20 CONSOLE
rwa show isis
    [02/15/13 07:10:54.928] 0x002c0600 00000000 GlobalRouter CLILOG INFO
CP1
                                                                            21 CONSOLE
rwa show isis interface
CP1 [02/15/13 07:12:33.404] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                            22 CONSOLE
rwa show isis spbm
CP1 [02/15/13 07:45:28.596] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                            23 CONSOLE
CP1 [02/15/13 07:45:30.236] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                           24 CONSOLE
rwa conf t
CP1 [02/15/13 07:46:29.456] 0x002c0600 00000000 GlobalRouter CLILOG INFO 25 CONSOLE
rwa interface gigabitEther0
CP1 [02/15/13 07:47:28.476] 0x002c0600 00000000 GlobalRouter CLILOG INFO
                                                                            26 CONSOLE
rwa encapsulation dot1q
--More-- (q = quit)
```

Variable definitions

Use the data in the following table to use the clilog command.

Variable	Value
enable	Activates CLI logging. To disable, use the no clilog
	enable command.

Configuring email notification

Configure the SMTP feature to generate email notifications for component failures, critical conditions, or general system health status.

About this task

The SMTP feature is disabled by default.

Before you begin

• To identify the SMTP server by hostname, you must first configure a DNS client on the switch. For more information about how to configure a DNS client, see *Administering*.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Configure the TCP port the client uses to open a connection with the SMTP server:

```
smtp port <1-65535>
```

Note:

The port you specify must match the port that the SMTP server uses.

3. Configure email recipients:

```
smtp receiver-email add WORD<3-1274>
smtp receiver-email remove WORD<3-1274>
```

Note:

You must configure at least one recipient.

4. Configure the SMTP server hostname or IPv4 address:

```
smtp server WORD<1-256>
```

5. (Optional) Configure a sender email address:

```
smtp sender-email WORD<3-254>
```

6. **(Optional)** Add or remove log events to the default list that generate email notification:

```
smtp event-id add WORD<1-1100>
smtp event-id remove WORD<1-1100>
```

7. **(Optional)** Configure the status update interval:

```
smtp status-send-timer <0 | 30-43200>
```

8. Enable the SMTP client:

```
smtp enable
```

9. Configure an SMTP domain name:

```
smtp domain-name WORD<1-254>
```

10. Verify the configuration:

```
show smtp [event-id]
```

Example

Configure the SMTP client to use TCP port 26 to communicate with an SMTP server that is using port 26. Add two receiver email addresses, configure the server information using an IPv4 address, and enable the SMTP feature. Finally, configure an SMTP domain name, and then verify the configuration.

```
Switch:1>enable
Switch: 1#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Switch:1(config) #smtp port 26
Switch:1(config) #smtp receiver-email add test1@default.com, test2@default.com
Switch:1(config) #smtp server 192.0.2.1
Switch:1(config) #smtp enable
Switch:1(config) #smtp domain-name test mailer
Switch:1(config) #show smtp
______
                            SMTP Information
_____
      SMTP Status: Enabled
    Server Address: 192.0.2.1
 Server Port: 26
Status send Timer: 30 (seconds)
Sender Email: LabSwitch@default.com
Domain Name: test mailer
Receiver Emails: test1@default.com
                    test2@default.com
```

Add an event ID to the list for which the switch sends email notification on a log event. Verify the configuration.

```
Switch:1(config) #smtp event-id add 0x0000c5ec
Switch:1(config) #show smtp event-id

SMTP Event IDs Information

SMTP Event IDs: (total: 51)

0x000045e3,0x00004602,0x00004603,0x0000c5ec,0x000106ce,0x000106cf
0x000106d0,0x000106d1,0x000106d2,0x000106d4,0x000106d8,0x000106d9
0x000106da,0x000106f8,0x000106f9,0x000106fb,0x00010775,0x00010776
0x000107f5,0x000107f6,0x000305c8,0x000305ca,0x000305f1,0x00030637
0x00040506,0x00040507,0x00040508,0x00040509,0x000646da,0x000646db
0x00088524,0x000d8580,0x000d8586,0x000d8589,0x000e4600,0x000e4601
0x000e4602,0x000e4603,0x000e4604,0x000e4605,0x000e4606,0x000e4607
0x000e4608,0x000e4609,0x001985a0,0x00210587,0x00210588,0x00210595
0x00210596,0x0027458a,0x0027458d

Default Event IDs: (total: 50)
```

```
0x000045e3,0x00004602,0x00004603,0x000106ce,0x000106cf,0x000106d0
0x000106d1,0x000106d2,0x000106d4,0x000106d8,0x000106d9,0x000106da
0x000106f8,0x000106f9,0x000106fb,0x00010775,0x00010776,0x000107f5
0x000107f6,0x000305c8,0x000305ca,0x000305f1,0x00030637,0x00040506
0x00040507,0x00040508,0x00040509,0x000646da,0x000646db,0x00088524
0x000d8580,0x000d8586,0x000d8589,0x000e4600,0x000e4601,0x000e4602
0x000e4603,0x000e4604,0x000e4605,0x000e4606,0x000e4607,0x000e4608

0x000e4609,0x001985a0,0x00210587,0x00210588,0x00210595,0x00210596
0x0027458a,0x0027458d

Remove From Default: (total: 0)

Add List: (total: 1)
0x0000c5ec
```

Variable definitions

Use the data in the following table to use the smtp port command.

Variable	Value
<1–65535>	Specifies the TCP port on the switch that the SMTP client uses to communicate with the SMTP server. The default value is 25.
	Note:
	You must disable the SMTP feature before you can change an existing SMTP port configuration.
	The port you specify must match the port that the SMTP server uses.

Use the data in the following table to use the smtp receiver-email command.

Variable	Value
add WORD<3-1274>	Adds an email address to the recipient list. The recipients receive the email notification generated by the switch.
	You must configure at least one email recipient and can create a maximum of five email recipients. You can specify multiple addresses in a single command by separating them with a comma.
	You cannot use quotation marks (") or commas (,) in email addresses. Other restrictions for the format of the email address follow RFC 5321.
	The maximum length for the address is 254 characters.
remove WORD<3-1274>	Removes an email address from the recipient list. The recipients receive the email notification generated by the switch. You can specify multiple

Table continues...

Variable	Value
	addresses in a single command by separating them with a comma.
	You cannot use quotation marks (") or commas (,) in email addresses. Other restrictions for the format of the email address follow RFC 5321.
	The maximum length for the address is 254 characters.

Use the data in the following table to use the smtp server command.

Variable	Value
WORD<1-256>	Specifies the SMTP server address. You can use either a hostname or IPv4 address. If you use a hostname, you must configure the DNS client on the switch.

Use the data in the following table to use the smtp sender-email command.

Variable	Value
WORD<3-254>	Specifies the email address that appears in the From field of the message that the switch generates. By default, the switch uses <systemname>@default.com.</systemname>

Use the data in the following table to use the smtp event-id command.

Variable	Value
add WORD<1-1100>	Adds a log event to the list of events that generate email notification. You can specify multiple event IDs in a single command by separating them with a comma. The event ID can be up to 10 digits in hexadecimal format.
remove WORD<1-1100>	Removes a log event from the list of events that generate email notification. You can specify multiple event IDs in a single command by separating them with a comma. The event ID can be up to 10 digits in hexadecimal format.

Use the data in the following table to use the smtp status-send-timer command.

Variable	Value
<0 30-43200>	Specifies the interval, in seconds, at which the switch
	sends status information. The default is 30 seconds.

Variable	Value
	A value of 0 means the switch does not send status information.

Use the data in the following table to use the smtp domain-name command.

Variable	Value
WORD<1-254>	Specifies the SMTP host name or IPv4 address
	(string length 1–254).

Use the data in the following table to use the show smtp command.

Variable	Value
event-id	Shows a list of active event IDs for which the switch generates email notification. The command output includes the default list of IDs and IDs you specifically add or remove.

Log configuration using EDM

Use log files and messages to perform diagnostic and fault management functions. This section provides procedures to configure and use the logging system in Enterprise Device Manager (EDM).

Configuring the system log

About this task

Configure the system log to track all user activity on the device. The system log can send messages of up to ten syslog hosts.

Procedure

- 1. In the navigation pane, expand the **Configuration > Edit > Diagnostics** folders.
- 2. Click System Log.
- 3. In the **System Log** tab, select **Enable**.
- 4. Configure the maximum number of syslog hosts.
- 5. Configure the IP header type for the syslog packet.
- 6. Click Apply.

System Log field descriptions

Use the data in the following table to use the System Log tab.

Name	Description
Enable	Enables or disables the syslog feature. If you select this variable,
	this feature sends a message to a server on a network that is

Table continues...

Name	Description
	configured to receive and store diagnostic messages from this device. You can configure the type of messages sent. The default is enabled.
MaxHosts	Specifies the maximum number of remote hosts considered active and can receive messages from the syslog service. The range is 0–10 and the default is 5.
OperState	Specifies the operational state of the syslog service. The default is active.
Header	Specifies the IP header in syslog packets to circuitlessIP or default.
	If the value is default, the IP address of the VLAN is used for syslog packets that are transmitted in-band using input/output (I/O) ports.
	If the value is circuitlessIP, the circuitless IP address is used in the IP header for all syslog messages (in-band or out-of-band). If you configure multiple circuitless IPs, the first circuitless IP configured is used.
	The default value is default.

Configuring the system log table

About this task

Use the system log table to customize the mappings between the severity levels and the type of alarms.

You can log system log messages to external system log hosts with both IPv4 and IPv6 addresses with no difference in functionality or configuration except in the following case. When you configure the system log table, under the System Log Table tab, you must select **ipv4** or **ipv6**, in the **AddressType** box. The **Address** box supports both IPv4 and IPv6 addresses.

Procedure

- 1. In the navigation pane, expand the **Configuration > Edit > Diagnostics** folders.
- 2. Click System Log.
- 3. Click the **System Log Table** tab.
- 4. Click Insert.
- 5. Configure the parameters as required.
- 6. Click Insert.
- 7. To modify mappings, double-click a parameter to view a list of options.
- 8. Click Apply.

System Log Table field descriptions

Use the data in the following table to use the System Log Table tab.

Name	Description
Id	Specifies the ID for the syslog host. The range is 1–10.
AddressType	Specifies if the address is an IPv4 or IPv6 address.
Address	Specifies the IP address of the syslog host. You can log system log messages to external system log hosts with both IPv4 and IPv6 addresses.
UdpPort	Specifies the UDP port to use to send messages to the syslog host (514–530). The default is 514.
Enable	Enables or disables the sending of messages to the syslog host. The default is disabled.
HostFacility	Specifies the syslog host facility used to identify messages (local0 to local7). The default is local7.
Severity	Specifies the message severity for which syslog messages are sent. The default is info warning error fatal.
MapInfoSeverity	Specifies the syslog severity to use for INFO messages. The default is info.
MapWarningSeverity	Specifies the syslog severity to use for WARNING messages. The default is warning.
MapErrorSeverity	Specifies the syslog severity to use for ERROR messages. The default is error.
MapFatalSeverity	Specifies the syslog severity to use for FATAL messages. The default is emergency.
MapMfgSeverity	Specifies the syslog severity to use for Accelar manufacturing messages. The default is notice.
SecureForwardingTcpPort	Specifies the TCP port to use for secure forwarding for a particular host. The default is 1025.
SecureForwardingMode	Enables or disables secure forwarding of syslog over remote port forwarding. The supported values are tls and none. The default is none, which means that secure forwarding is disabled.
SecureForwardingServerCertName	Specifies the server certificate name.
	Certificate validation is done only if the server certificate name is configured.

Configuring email notification

Configure the SMTP feature to generate email notifications for component failures, critical conditions, or general system health status.

About this task

The SMTP feature is disabled by default.

Before you begin

• To identify the SMTP server by hostname, you must first configure a DNS client on the switch. For more information about how to configure a DNS client, see *Administering*.

Procedure

- 1. In the navigation pane, expand the **Configuration > Edit** folders.
- 2. Click SMTP.
- 3. Click the **Globals** tab.
- 4. In the **ServerAddress** field, configure the SMTP server address.
- 5. In the **ReceiverEmailsList** field, add email recipients.
 - Note:

You must configure at least one recipient.

- 6. **(Optional)** In the **SenderEmail** field, configure a sender email address to use an address other than the default.
- 7. In the **DomainName** field, configure an SMTP domain name.
- 8. In the **Port** field, configure the TCP port that the client uses to open a connection with the SMTP server.
- 9. (Optional) In the SystemStatusSendTimer field, configure the status update interval.
- 10. Click enable to enable the SMTP client.
- 11. **(Optional)** In the **LogEventIds** field, add or remove log events to the default list that generates an email notification.
- 12. Click Apply.

Globals field descriptions

Use the data in the following table to use the Globals tab.

Name	Description
ServerAddressType	Specifies the type of server address as either an IPv4 address or a hostname. If you use a hostname, you must configure the DNS client on the switch.
ServerAddress	Specifies the SMTP server address. You can use either a hostname or an IPv4 address. If you use a hostname, you must configure the DNS client on the switch.
ReceiverEmailsList	Specifies the recipient list. The recipients receive the email notification generated by the switch. You must configure at least one email recipient and can create a maximum of five email recipients. You can specify multiple addresses in a single command by separating them with a comma.

Table continues...

Name	Description
	You cannot use quotation marks (") or commas (,) in email addresses. Other restrictions for the format of the email address follow RFC5321.
	The maximum length for the address is 254 characters.
NumOfEmails	Shows the total number of addresses in ReceiverEmailsList.
SenderEmail	Specifies the email address that appears in the From field of the message that the switch generates. By default, the switch uses SystemName@default.com.
DomainName	Specifies the SMTP domain name.
	The maximum length is 254 characters.
Port	Specifies the TCP port on the switch that the SMTP client uses to communicate with the SMTP server. The default value is 25.
	ℜ Note:
	You must disable the SMTP feature before you can change an existing SMTP port configuration.
	The port you specify must match the port that the SMTP server uses.
SystemStatusSendTimer	Specifies the interval, in seconds, at which the switch sends status information. The default is 30 seconds. A value of 0 means the switch does not send status information.
Enable	Enables or disables the SMTP feature. By default, SMTP is disabled.
LogEventIds	Specifies the list of events that generate email notification. You can specify multiple event IDs in a single command by separating them with a comma.
	The event ID can be up to 10 digits in hexadecimal format.
NumOfEventIds	Shows the total number of IDs in LogEventIds .
DefaultLogEventIds	Shows the default list of event IDs that generate email notification.
NumOfDefaultEventIds	Shows the total number of IDs in DefaultLogEventIds .

SNMP trap configuration using CLI

Use Simple Network Management Protocol (SNMP) traps and notifications to gather information about device activities, alarms, and other information on management stations.

For more information about how to configure SNMP community strings and related topics, see *Configuring Security*.

Configuring an SNMP host

Configure an SNMP host so that the system can forward SNMP traps to a host for monitoring. You can use SNMPv1, SNMPv2c, or SNMPv3. You configure the target table parameters (security name and model) as part of the host configuration.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Configure an SNMPv1 host:

```
snmp-server host WORD < 1-256 > [port < 1-65535 >] v1 <math>WORD < 1-32 > [filter WORD < 1-32 >]
```

3. Configure an SNMPv2c host:

```
snmp-server host WORD < 1-256 > [port < 1-65535 >] v2c <math>WORD < 1-32 > [inform [timeout < 1-2147483647 >] [retries < 0-255 >] [mms < 0-2147483647 >]] [filter <math>WORD < 1-32 >]
```

4. Configure an SNMPv3 host:

```
snmp-server host WORD<1-256> [port <1-65535>] v3 {noAuthNoPriv|authNoPriv|AuthPriv} WORD<1-32> [inform [timeout <1-2147483647>] [retries <0-255>]] [filter WORD<1-32>]
```

5. Ensure that the configuration is correct:

```
show snmp-server host
```

Example

Configure the target table entry. Configure an SNMPv3 host.

```
Switch:1>enable
Switch:1#configure terminal
Switch:1(config) #snmp-server host 192.0.2.207 port 162 v2c ReadView inform timeout 1500
retries 3 mms 484
Switch:1(config) #snmp-server host 192.0.2.207 port 163 v3 authPriv Lab3 inform timeout
1500 retries 3
```

Variable definitions

Use the data in the following table to use the snmp-server host command.

Variable	Value
inform [timeout <1-2147483647>] [retries <0-255>] [mms <0-2147483647>]	Sends SNMP notifications as inform (rather than trap). To use all three options in one command, you must use them in the following order:
	timeout <1-2147483647> specifies the timeout value in seconds with a range of 1–214748364.
	 retries <0-255> specifies the retry count value with a range of 0–255.
	3. mms <0-2147483647> specifies the maximum message size as an integer with a range of 0–2147483647.
filter WORD<1-32>	Specifies the filter profile to use.
noAuthNoPriv authNoPriv AuthPriv	Specifies the security level.
port <1-65535>	Specifies the host server port number.
WORD<1-32>	Specifies the security name, which identifies the principal that generates SNMP messages.
WORD<1-256>	Specifies either an IPv4 or IPv6 address.

Configuring an SNMP notify filter table

Configure the notify table to select management targets to receive notifications, as well as the type of notification to send to each management target.

Before you begin

• For more information about the notify filter table, see RFC3413.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Create a new notify filter table:

```
snmp-server notify-filter WORD<1-32> WORD<1-32>
```

3. Ensure that the configuration is correct:

```
show snmp-server notify-filter
```

Example

profile2	+99.3.6.1.6.3.1.1.4.1	0x7f
profile3	+99.3.6.1.6.3.1.1.4.1	0x7f

Variable definitions

Use the data in the following table to use the snmp-server notify-filter command.

Variable	Value
WORD<1-32> WORD<1-32>	Creates a notify filter table.
	The first instance of WORD<1-32> specifies the name of the filter profile with a string length of 1–32.
	The second instance of <i>WORD<1-32></i> identifies the filter subtree OID with a string length of 1–32.
	If the subtree OID parameter uses a plus sign (+) prefix (or no prefix), this indicates include. If the subtree OID uses the minus sign (–) prefix, it indicates exclude.
	You do not calculate the mask because it is automatically calculated. You can use the wildcard character, the asterisk (*), to specify the mask within the OID. You do not need to specify the OID in the dotted decimal format; you can alternatively specify that the MIB parameter names and the OIDs are automatically calculated.

Configuring SNMP interfaces

Configure an interface to send SNMP traps. If the switch has multiple interfaces, configure the IP interface from which the SNMP traps originate.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Configure the destination and source IP addresses for SNMP traps:

```
snmp-server sender-ip {A.B.C.D} {A.B.C.D}
```

3. If required, send the source address (sender IP) as the sender network in the notification message:

```
snmp-server force-trap-sender enable
```

4. If required, force the SNMP and IP sender flag to use the same value:

```
snmp-server force-iphdr-sender enable
```

Example

```
Switch:1(config) #snmp-server sender-ip 192.0.2.2 192.0.2.5
Switch:1(config) #no snmp-server force-iphdr-sender enable
```

Variable definitions

Use the data in the following table to use the snmp-server command.

Variable	Value
authentication-trap enable	Activates the generation of authentication traps.
force-iphdr-sender enable	Automatically configures the SNMP and IP sender to the same value. The default is disabled.
force-trap-sender enable	Sends the configured source address (sender IP) as the sender network in the notification message.
sender-ip <a.b.c.d> <a.b.c.d></a.b.c.d></a.b.c.d>	Configures the SNMP trap receiver and source IP addresses. Specify the IP address of the destination SNMP server that receives the SNMP trap notification in the first IP address.
	Specify the source IP address of the SNMP trap notification packet that is transmitted in the second IP address. If this address is 0.0.0.0, the system uses the IP address of the local interface that is closest (from an IP routing table perspective) to the destination SNMP server.

Enabling SNMP trap logging

Use SNMP trap logging to send a copy of all traps to the syslog server.

Before you begin

• You must configure and enable the syslog server.

About this task



The platform logs CLILOG and SNMPLOG as INFO. Normally, if you configure the logging level to WARNING, the system skips all INFO messages. However, if you enable CLILOG and SNMPLOG the system logs CLI Log and SNMP Log information regardless of the logging level you set. This is not the case for other INFO messages.

Procedure

1. Enter Global Configuration mode:

enable
configure terminal

2. Enable SNMP trap logging:

snmplog enable

3. **(Optional)** Disable SNMP trap logging:

no snmplog enable

4. View the contents of the SNMP log:

show logging file module snmplog

Example

Enable SNMP trap logging and view the contents of the SNMP log:

```
Switch:1>enable
Switch:1#configure terminal
Switch:1(config) #snmplog enable
Switch:1(config-app) #show logging file module snmp
CP1 [02/06/15 22:39:58.530:UTC] 0x00004595 00000000 GlobalRouter SNMP INFO Boot
ed with file
CP1 [02/06/15 22:39:59.547:UTC] 0x00004603 00400003.67108870 DYNAMIC CLEAR Glob
alRouter SNMP INFO 2k card up(CardNum=1 AdminStatus=1 OperStatus=1)
CP1 [02/06/15 22:39:59.547:UTC] 0x00004603 00400003.67108870 DYNAMIC CLEAR Glob
alRouter SNMP INFO 2k card up(CardNum=2 AdminStatus=1 OperStatus=1)
CP1 [02/06/15 22:39:59.547:UTC] 0x00004603 00400003.67108870 DYNAMIC CLEAR Glob
alRouter SNMP INFO 2k card up(CardNum=2 AdminStatus=1 OperStatus=1)
CP1 [02/06/15 22:39:59.547:UTC] 0x00004603 00400003.67108870 DYNAMIC CLEAR Glob
alRouter SNMP INFO 2k card up(CardNum=3 AdminStatus=1 OperStatus=1)
CP1 [02/06/15 22:40:45.839:UTC] 0x000045e5 00400005 DYNAMIC SET GlobalRouter SN
MP INFO Sending Cold-Start Trap
```

Variable definitions

Use the data in the following table to use the snmplog command.

Variable	Value
enable	Enables the logging of traps.
	Use the command no snmplog enable to disable the logging of traps.

SNMP trap configuration using EDM

Use Simple Network Management Protocol (SNMP) traps and notifications to gather information about device activities, alarms, and other information on management stations. This section provides procedures to configure and use SNMP traps in Enterprise Device Manager (EDM).

For information about how to configure SNMP community strings and related topics, see *Configuring Security*.

Configuring an SNMP host target address

Configure a target table to specify the list of transport addresses to use in the generation of SNMP messages.

Procedure

- 1. In the navigation pane, expand the Configuration > Edit > SnmpV3 folders.
- 2. Click Target Table.
- 3. In the Target Table tab, click Insert.
- 4. In the **Name** box, type a unique identifier.
- 5. In the **TDomain** box, select the transport type of the address. Select either **ipv4Tdomain** or **ipv6Tdomain**.
- 6. In the **TAddress** box, type the transport address and User Datagram Protocol (UDP) port.

- 7. In the **Timeout** box, type the maximum round trip time.
- 8. In the **RetryCount** box, type the number of retries to be attempted.
- 9. In the **TagList** box, type the list of tag values.
- 10. In the **Params** box, type the SnmpAdminString.
- 11. In the **TMask** box, type the mask.
- 12. In the **MMS** box, type the maximum message size.
- 13. Click Insert.

Target Table field descriptions

Use the data in the following table to use the Target Table tab.

Name	Description
Name	Specifies a unique identifier for this table. The name is a community string.
TDomain	Specifies the transport type of the address. ipv4Tdomain specifies the transport type of address is an IPv4 address. ipv6Tdomain specifies the transport type of address is IPv6. The default is ipv4Tdomain.
TAddress	Specifies the transport address in xx.xx.xx.xx:port format, for example: 192.1.2.12:162, where 162 is the trap listening port on the system 192.1.2.12.
Timeout	Specifies the maximum round trip time required to communicate with the transport address. The value is in 1/100 seconds from 0–2147483647. The default is 1500.
	After the system sends a message to this address, if a response (if one is expected) is not received within this time period, you can assume that the response is not delivered.
RetryCount	Specifies the maximum number of retries if a response is not received for a generated message. The count can be in the range of 0–255. The default is 3.
TagList	Contains a list of tag values used to select target addresses for a particular operation. A tag refers to a class of targets to which the messages can be sent.
Params	Contains SNMP parameters used to generate messages to send to this transport address. For example, to receive SNMPv2C traps, use TparamV2.
TMask	Specifies the mask. The value can be empty or in six-byte hex string format. Tmask is an optional parameter that permits an entry in the TargetAddrTable to specify multiple addresses.
MMS	Specifies the maximum message size. The size can be zero, or 484–2147483647. The default is 484.
	Although the maximum message size is 2147483647, the device supports the maximum SNMP packet size of 8192.

Configuring target table parameters

About this task

Configure the target table to configure the security parameters for SNMP. Configure the target table to configure parameters such as SNMP version and security levels.

Procedure

- 1. In the navigation pane, expand the **Configuration > Edit > SnmpV3** folders.
- 2. Click Target Table.
- 3. Click the Target Params Table tab.
- 4. Click Insert.
- 5. In the **Name** box, type a target table name.
- 6. From the **MPModel** options, select an SNMP version.
- 7. From the **Security Model** options, select the security model.
- 8. In the **SecurityName** box, type readview or writeview.
- 9. From the **SecurityLevel** options, select the security level for the table.
- 10. Click Insert.

Target Params Table field descriptions

Use the data in the following table to use the Target Params Table tab.

Name	Description
Name	Identifies the target table.
MPModel	Specifies the message processing model to use to generate messages: SNMPv1, SNMPv2c, or SNMPv3/USM.
SecurityModel	Specifies the security model to use to generate messages: SNMPv1, SNMPv2c, or USM. You can receive an inconsistent Value error if you try to configure this variable to a value for a security model that the implementation does not support.
SecurityName	Identifies the principal on whose behalf SNMP messages are generated.
SecurityLevel	Specifies the security level used to generate SNMP messages: noAuthNoPriv, authNoPriv, or authPriv.

Configuring SNMP notify filter profiles

About this task

Configure the SNMP table of filter profiles to determine whether particular management targets receive particular notifications.

Procedure

- 1. In the navigation pane, expand the **Configuration > Edit > SnmpV3** folders.
- 2. Click Notify Table.
- 3. Click the **Notify Filter Table** tab.
- 4. Click Insert.
- 5. In the **NotifyFilterProfileName** box, type a name for the notify filter profile.
- 6. In the **Subtree** box, type subtree location information in x.x.x.x.x.x.x.x.x.x. format.
- 7. In the **Mask** box, type the mask location in hex string format.
- 8. From the **Type** options, select **included** or **excluded**.
- 9. Click Insert.

Notify Filter Table field descriptions

Use the data in the following table to use the Notify Filter Table tab.

Name	Description
NotifyFilterProfileName	Specifies the name of the filter profile used to generate notifications.
Subtree	Specifies the MIB subtree that, if you combine it with the mask, defines a family of subtrees, which are included in or excluded from the filter profile. For more information, see RFC 2573.
Mask	Specifies the bit mask (in hexadecimal format) that, in combination with the subtree, defines a family of subtrees, which are included in or excluded from the filter profile.
Туре	Indicates whether the family of filter subtrees are included in or excluded from a filter. The default is included.

Configuring SNMP notify filter profile table parameters

Before you begin

The notify filter profile exists.

About this task

Configure the profile table to associate a notification filter profile with a particular set of target parameters.

Procedure

- 1. In the navigation pane, expand the Configuration > Edit > SnmpV3 folders.
- 2. Click Notify Table.
- 3. Click the Notify Filter Profile Table tab.
- 4. Click Insert.
- 5. In the **TargetParamsName** box, type a name for the target parameters.

- 6. In the **NotifyFilterProfileName** box, type a name for the notify filter profile.
- 7. Click Insert.

Notify Filter Profile Table field descriptions

Use the data in the following table to use the Notify Filter Profile Table tab.

Name	Description
TargetParamsName	Specifies the unique identifier associated with this entry.
NotifyFilterProfileName	Specifies the name of the filter profile to use to generate notifications.

Enabling authentication traps

About this task

Enable the SNMP agent process to generate authentication-failure traps.

Procedure

- 1. In the navigation pane, expand the **Configuration > Edit > Diagnostics** folders.
- 2. Click General.
- 3. Click the Error tab.
- 4. Select AuthenticationTraps.
- 5. Click Apply.

Error field descriptions

Use the data in the following table to use the Error tab.

Name	Description
AuthenticationTraps	Enables or disables the sending of traps after an error occurs. The default is disabled.
LastErrorCode	Specifies the last reported error code.
LastErrorSeverity	Specifies the last reported error severity:
	0= Informative Information
	1= Warning Condition
	2= Error Condition
	3= Manufacturing Information
	4= Fatal Condition

Viewing the trap sender table

About this task

Use the Trap Sender Table tab to view source and receiving addresses.

Procedure

- 1. In the navigation pane, expand the **Configuration > Edit** folders.
- 2. Click Chassis.
- 3. Click the **Trap Sender Table** tab.

Trap Sender Table field descriptions

Use the data in the following table to use the **Trap Sender Table** tab.

Name	Description
RecvAddress	IP address for the trap receiver. This is a read-only parameter that contains the IP address configured in the TAddress field in the TargetTable.
SrcAddress	Source IP address to use when sending traps. This IP address will be inserted into the source IP address field in the UDP trap packet.

Chapter 7: MACsec performance

MACsec statistics

This feature is not supported on all hardware platforms. For more information about feature support, see *Release Notes*.

MAC Security (MACsec) is an IEEE 802[®] standard that allows authorized systems in a network to transmit data confidentially and to take measures against data transmitted or modified by unauthorized devices.

The switch supports the following statistics that provide a measure of MACsec performance.

Table 4: General MACsec statistics

Statistics	Description	
TxUntaggedPkts	Specifies the number of transmitted packets without the MAC security tag (SecTAG), with MACsec disabled on the interface.	
TxTooLongPkts	Specifies the number of transmitted packets discarded because the packet length is greater than the Maximum Transmission Unit (MTU) of the Common Port interface.	
RxUntaggedPkts	Specifies the number of received packets without the MAC security tag (SecTAG), with MACsec <i>not</i> operating in strict mode.	
RxNoTagPkts	Specifies the number of received packets without the MAC security tag (SecTAG), with MACsec operating in strict mode.	
RxBadTagPkts	Specifies the number of received packets discarded with an invalid SecTAG or with a zero value Packet Number (PN)/invalid Integrity Check Value (ICV).	
RxUnknownSCIPkts	Specifies the number of packets received with an unknown Secure Channel Identifier (SCI) and with MACsec <i>not</i> operating in strict mode.	
RxNoSCIPkts	Specifies the number of packets received with an unknown Secure Channel Identifier (SCI) and with MACsec operating in strict mode.	
RxOverrunPkts	Specifies the number of packets discarded because the number of received packets exceeded the cryptographic performance capabilities.	

Table 5: Secure-channel inbound MACsec statistics

Statistics	Description
UnusedSAPkts	Specifies the summation of received unencrypted packets on all SAs of this secure channel, with MACsec <i>not</i> in strict mode.

Statistics	Description		
NoUsingSAPkts	Specifies the summation of received packets that were discarded along with either encrypted packets or packets that were received with MACsec operating in strict mode.		
LatePkts	Specifies the number of packets received that have been discarded for this Secure Channel (SC) with Replay Protect enabled.		
	Note:		
	The switch does not support Replay Protect.		
NotValidPkts	Specifies the summation of packets that were discarded in all SAs of the SC because they were not valid with one of the following conditions:		
	MACsec was operating in strict mode		
	The packets received were encrypted but contained erroneous fields.		
InvalidPkts	Specifies the summation of all packets received that were not valid for this SC, with MACsec operating in <i>check</i> mode.		
DelayedPkts	Specifies the summation of packets for this SC, with the Packet Number (PN) of the packets lower than the lower bound replay protection PN.		
	Note:		
	The switch does not support Replay Protect.		
UncheckedPkts	The total number of packets for this SC that:		
	were encrypted and had failed the integrity check		
	were not encrypted and had failed the integrity check		
	were received when MACsec validation was not enabled		
OKPkts	Specifies the total number of Integrity Check Validated (ICV) packets for all SAs of this Secure Channel. The number of octets of User Data recovered from received frames that were integrity protected but not encrypted.		
OctetsValidated	Specifies the number of octets of plaintext recovered from received packets that were integrity protected but not encrypted.		
OctetsDecrypted	Specifies the number of octets of plaintext recovered from received packets that were integrity protected and encrypted.		

Table 6: Secure-channel outbound MACsec statistics

Statistics	Description	
ProtectedPkts	Specifies the number of integrity protected but not encrypted packets for this transmitting SC.	
EncryptedPkts	Specifies the number of integrity protected and encrypted packets for this transmitting SC.	
OctetsProtected	Specifies the number of plain text octets that are integrity protected but not encrypted on the transmitting SC.	
OctetsEncrypted	Specifies the number of plain text octets that are integrity protected and encrypted on the transmitting SC.	

October 2017

Viewing MACsec statistics using the CLI

Use the following procedure to view MAC Security (MACsec) statistics using CLI.

Viewing MACsec statistics

Perform this procedure to view the MACsec statistics.

Procedure

1. Enter Privileged EXEC mode:

enable

2. View the general MACsec statistics:

```
show macsec statistics [{slot/port[/sub-port][-slot/port[/sub-port]]
[,...]}]
```

3. View the secure-channel inbound MACsec statistics:

```
show macsec statistics [{slot/port[/sub-port][-slot/port[/sub-port]]
[,...]}] secure-channel inbound
```

4. View the secure-channel outbound MACsec statistics:

```
show macsec statistics [{slot/port[/sub-port][-slot/port[/sub-port]]
[,...]}] secure-channel outbound
```

Example

Display general MACsec statistics, inbound MACsec statistics, and outbound MACsec statistics:



Slot and port information can differ depending on hardware platform. For more information, see the hardware documentation for your platform.

The switch supports MACsec on specific ports. For more information, see your hardware documentation.

1/40	0	0	0	0	
Switch:1	#show macsec	statistics 1/40	secure-chan	nnel inbound	
	MACS	EC Port Inbound	Secure Chan	nnel Statistics	
PortId		NoUsingSA Packets		NotValid Packets	
1/40	0	0	0	100037	0
PortId	-			Octets Validated	
1/40	0	0	0	53528828	0
Switch:1#show macsec statistics 1/40 secure-channel outbound					
	MACS	EC Port Outbound	d Secure Cha	nnel Statistics	
PortId		Encrypted Packets		Octets l Encrypted	1
1/40	0	99946	0	53434	1154

Viewing MACsec statistics using EDM

Use the following procedures to view MAC Security (MACsec) statistics using EDM.

Viewing MACsec interface statistics

Use this procedure to view the MACsec interface statistics using EDM.

This feature is not supported on all hardware platforms. If you do not see this command in EDM, the feature is not supported on your hardware. For more information about feature support, see *Release Notes*.

Procedure

1. In the Device Physical View tab, select the port for which you need to view the MACsec interface statistics.

The switch supports MACsec on specific ports. For more information, see your hardware documentation.

- 2. In the navigation pane, expand the **Edit** > **Port** > **General** folders.
- 3. Click the MacSec Interface Stats tab.



Note:

Use the Clear Stats button to the clear MACsec interface statistics. The Clear Stats button is available to clear single-port as well as multiple-port MACsec interface statistics.

MacSec Interface Stats field descriptions

The following table describes the fields in the MacSec Interface Stats tab.

Field	Description
TxUntaggedPkts	Specifies the number of transmitted packets without the MAC security tag (SecTAG), with MACsec disabled on the interface.
TxTooLongPkts	Specifies the number of transmitted packets discarded because the packet length is greater than the maximum transmission unit (MTU) of the common port interface.
RxUntaggedPkts	Specifies the number of received packets without the MAC security tag (SecTAG), with MACsec <i>not</i> operating in strict mode.
RxNoTagPkts	Specifies the number of received packets without the MAC security tag (SecTAG), with MACsec operating in strict mode.
RxBadTagPkts	Specifies the number of received packets discarded with an invalid SecTAG, or with a zero value packet number (PN), or invalid Integrity Check Value (ICV).
RxUnknownSCIPkts	Specifies the number of packets received with an unknown secure channel identifier (SCI), and with MACsec <i>not</i> operating in strict mode.
RxNoSCIPkts	Specifies the number of packets received with an unknown secure channel identifier (SCI), and with MACsec operating in strict mode.
RxOverrunPkts	Specifies the number of packets discarded because the number of received packets exceeded the cryptographic performance capabilities.

Viewing secure channel (SC) inbound statistics

Use this procedure to view the secure channel (SC) inbound statistics using EDM.

This feature is not supported on all hardware platforms. If you do not see this command in EDM, the feature is not supported on your hardware. For more information about feature support, see Release Notes.

Procedure

1. In the Device Physical View tab, select the port for which you need to view the SC inbound statistics.

The switch supports MACsec on specific ports. For more information, see your hardware documentation.

- 2. In the navigation pane, expand the **Edit** > **Port** > **General** folders.
- 3. Click the SC Inbound Stats tab.



Note:

Use the **Clear Stats** button to the clear single-port secure channel inbound statistics. The Clear Stats button is not available to clear multiple-port secure channel inbound statistics.

SC Inbound Stats field descriptions

The following table describes the fields in the **SC Inbound Stats** tab.

Field	Description
UnusedSAPkts	Specifies the summary of received unencrypted packets on all SAs of this secure channel, with MACsec <i>not</i> in strict mode.
NoUsingSAPkts	Specifies the summary of received packets that were discarded along with either encrypted packets or packets that were received with MACsec operating in strict mode.
LatePkts	Specifies the number of packets received that have been discarded for this secure channel (SC) with Replay Protect enabled.
	* Note:
	The switch does not support Replay Protect.
NotValidPkts	Specifies the summary of packets that were discarded in all SAs of the SC because they were not valid with one of the following conditions:
	MACsec was operating in strict mode.
	The packets received were encrypted but contained erroneous fields.
InvalidPkts	Specifies the summary of all packets received that were not valid for this SC, with MACsec operating in check mode.
DelayedPkts	Specifies the summary of packets for this SC, with the packet number (PN) of the packets lower than the lower bound replay protection PN.

Field	Description
	Note:
	The switch does not support Replay Protect.
UncheckedPkts	The total number of packets for this SC that:
	Were encrypted and had failed the integrity check.
	Were <i>not</i> encrypted and had failed the integrity check.
	Were received when MACsec validation was not enabled.
AcceptedPkts	Specifies the total number of Integrity Check Validated (ICV) packets for all SAs of this Secure Channel. The number of octets of User Data recovered from received frames that were integrity protected but not encrypted.
OctetsValidated	Specifies the number of octets of plaintext recovered from received packets that were integrity protected but not encrypted.
OctetsDecrypted	Specifies the number of octets of plaintext recovered from received packets that were integrity protected and encrypted.

Viewing secure channel (SC) outbound statistics

Use this procedure to view the secure channel (SC) outbound statistics using EDM.

This feature is not supported on all hardware platforms. If you do not see this command in EDM, the feature is not supported on your hardware. For more information about feature support, see Release Notes.

Procedure

1. In the Device Physical View tab, select the port for which you need to view the SC outbound statistics.

The switch supports MACsec on specific ports. For more information, see your hardware documentation.

- 2. In the navigation pane, expand the **Edit** > **Port** > **General** folders.
- 3. Click the SC Outbound Stats tab.



Note:

Use the **Clear Stats** button to the clear single-port secure channel outbound statistics. The Clear Stats button is not available to clear multiple-port secure channel outbound statistics.

SC Outbound Stats field descriptions

The following table describes the fields in the SC Outbound Stats tab.

Field	Description
ProtectedPkts	Specifies the number of integrity protected but not encrypted packets for this transmitting SC.
EncryptedPkts	Specifies the number of integrity protected and encrypted packets for this transmitting SC.
OctetsProtected	Specifies the number of plain text octets that are integrity protected but not encrypted on the transmitting SC.
OctetsEncrypted	Specifies the number of plain text octets that are integrity protected and encrypted on the transmitting SC.

Chapter 8: Remote Monitoring

This chapter provides conceptual information and procedures to configure Remote Monitoring (RMON1) and (RMON2).

Remote Monitoring

Remote Monitoring (RMON) is a management information base (MIB) or a group of management objects that you use to obtain or configure values using the Simple Network Management Protocol (SNMP). Use CLI, or EDM, to globally enable RMON on the system. After you globally enable RMON, you enable monitoring for individual devices on a port-by-port basis.

RMON1 is the original version of the protocol, which collects information for OSI Layer 1 and Layer 2 in Ethernet networks. RMON1 provides traffic statistics at the MAC layer, and provides statistics on Ethernet segments for packets and bytes received and transmitted.

You can use RMON1 to:

- · Configure alarms for user-defined events.
- · Collect Ethernet statistics.
- · Log events.
- Send traps for events.

Within EDM, you can configure RMON1 alarms that relate to specific events or variables. You can also specify events associated with alarms to trap or log-and-trap. In turn, the system traps or logs tripped alarms.

You can view all RMON1 information using CLI or EDM. Alternatively, you can use any management application that supports SNMP traps to view RMON1 trap information.

This section describes RMON1 alarms, RMON1 history, RMON1 events, and RMON1 statistics.

RMON1 alarms

You can configure alarms to alert you if the value of a variable goes out of range. You can define RMON1 alarms on any MIB variable that resolves to an integer value. You cannot use string variables (such as system description) as alarm variables.

You can use RMON1 alarm to monitor anything that has a MIB OID associated with it and a valid instance.

All alarms share the following characteristics:

- A defined upper and lower threshold value.
- A corresponding rising and falling event.
- An alarm interval or polling period.

 
After you activate alarms, you can:

- View the activity in a log and/or a trap.
- Create a script directing the system to sound an audible alert at a console.
- Create a script directing the system to send an e-mail.
- Create a script directing the system to call a pager.

The system polls the alarm variable and the system compares the result against upper and lower limit values you select when you create the alarm. If the system reaches or crosses the alarm variable during the polling period, the alarm fires and generates an event that you can view in the event log or the trap log. You can configure the alarm to either create a log, or have the alarm send a Simple Network Management Protocol (SNMP) trap to a Network Management System (NMS). You can view the activity in a log or a trap log, or you can create a script to cause a console to beep, send an e-mail, or call a pager.

The upper limit of the alarm is the rising value, and the lower limit is the falling value. RMON1 periodically samples data based upon the alarm interval. During the first interval that the data passes above the rising value, the alarm fires as a rising event. During the first interval that the data drops below the falling value, the alarm fires as a falling event.

The following figure shows how alarms fire:



Alarm firesNo firing

Figure 1: How alarms fire

The alarm fires during the first interval that the sample goes out of range. No additional events generate for that threshold until the system crosses the opposite threshold. Therefore, you must carefully define the rising and falling threshold values for alarms. Incorrect thresholds cause an alarm to fire at every alarm interval, or never at all.

You can define one threshold value to an expected, baseline value, and then define the opposite threshold as the out-of-bounds limit. Because of sample averaging, the value is equal to ± 1 baseline unit. For example, assume you define an alarm with octets leaving a port as the variable. The intent of the alarm is to notify you if excessive traffic occurs on that port. You enable spanning tree, and then 52 octets transmit from the port every 2 seconds, which is equivalent to baseline traffic of 260 octets every 10 seconds. This alarm notifies you if you define the lower limit of exiting octets at 260 and you define the upper limit at 320 (or at any value greater than 260 + 52 = 312).

The rising alarm fires the first time outbound traffic, other than spanning tree Bridge Protocol Data Units (BPDUs), occurs. The falling alarm fires after outbound traffic, other than spanning tree. ceases. This process provides the time intervals of any nonbaseline outbound traffic.

If you define the alarm with a falling threshold of less than 260 and the alarm polling interval is at 10 seconds, for example, 250, then the rising alarm can fire only once, as shown in the following example. The falling alarm (the opposite threshold) must fire for the rising alarm to fire a second time. The falling alarm cannot fire unless the port becomes inactive or you disable spanning tree, which causes the value for outbound octets to drop to zero, because the baseline traffic is always greater than the value of the falling threshold. By definition, the failure of the falling alarm to fire prevents the rising alarm from firing a second time.

The following figure shows an example of the alarm threshold:

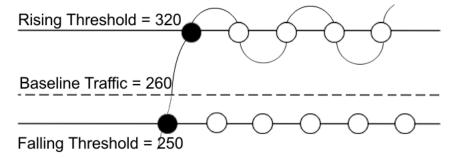


Figure 2: Alarm example, threshold less than 260

When you create an alarm, you select a variable from the variable list and a port, or another system component to which it connects. Some variables require port IDs, card IDs, or other indexes, for example, spanning tree group IDs. You then select a rising and a falling threshold value. The rising and falling values compare to the actual value of the variable that you choose. If the variable falls outside of the rising or falling value range, an alarm triggers, and the system logs an event or trap.

When you create an alarm, you also select a sample type, which can be either absolute or delta. Define absolute alarms for alarms based on the cumulative value of the alarm variable. An example of an absolute alarm value is card operating status. Because this value is not cumulative, but instead represents states, such as card up (value 1) and card down (value 2), you configure the value as the absolute value. Therefore, you can create an alarm with a rising value of 2 and a falling value of 1 to alert you whether the card is up or down.

Configure most alarm variables related to Ethernet traffic as a delta value. Define delta alarms for alarms based on the difference in the value of the alarm variable between the start of the polling period and the end of the polling period.

Note:

If you create an alarm that monitors a variable that does not exists, you will receive an error message and the creation will fail. Also, if the variable you are monitoring is no longer valid at the time of sampling, the switch removes the alarm automatically. For example, if you create an alarm that monitors some information about a VLAN, and that VLAN is later removed, then the switch silently removes the associated alarm at the next sampling interval.

RMON1 history

The RMON1 history group records periodic statistical samples from a network. A sample is a history and the system gathers the sample in time intervals referred to as buckets.

You can use RMON1 history for the MAC layer in the network. You cannot use RMON1 history for application and network layer protocols.

You enable and create histories to establish a time-dependent method to gather RMON1 statistics on a port. The following are the default values for history:

- · Buckets are gathered at 30-minute intervals.
- The number of buckets gathered is 50.

You can configure both the time interval and the number of buckets. However, after the system reaches the last bucket, the system dumps bucket 1 and recycles the bucket to hold a new bucket of statistics. Then the system dumps bucket 2, and so forth.

RMON1 events

RMON1 events and alarms work together to notify you when values in your network go out of a specified range. After a value passes the specified range, the alarm fires. The event specifies how the system records the activity.

You can use RMON1 events to monitor anything that has a MIB OID associated with it and a valid instance.

An event specifies whether a trap, a log, or both a trap and a log generates to view alarm activity.

You must create an event before associating it with an alarm, otherwise an error occurs. Also, you cannot delete an event as long as there are alarms associated with it. If you try to do so, an error message displays.

RMON1 statistics

You can use EDM to gather and graph statistics in a variety of formats, or you can save the statistics to a file and export the statistics to a third-party presentation or graphing application.

RMON1 scaling limits

The following tables shows the scaling limits for RMON1 elements.



When the log table reaches the maximum 500 log limit, the oldest third of the logs per event is removed to make room for new events. For all other elements, a message displays when you reach the maximum limit and no other element can be added.

Alarms	100	
Events	100	
History	20	
(entries in the history control table with 2000 buckets shared between them)		
Logs	500	
Statistics (entries in stats table)	100	

RMON 2

Remote Monitoring (RMON) is a management information base (MIB) or a group of management objects that you use to obtain or configure values using the Simple Network Management Protocol (SNMP).

Use CLI or EDM, to globally enable RMON on the system.

After you globally enable RMON, you enable monitoring for individual devices on a port-by-port basis.

RMON1 is the original version of the protocol, which collects information for OSI Layer 1 and Layer 2 in Ethernet networks. RMON1 provides traffic statistics at the MAC layer, and provides statistics on Ethernet segments for packets and bytes received and transmitted.

The RMON2 feature monitors network and application layer protocols on configured network hosts, either VLAN or port interfaces, that you enable for monitoring. The RMON2 feature expands the capacity of RMON1 to upper layer protocols in the OSI model.

The following figure shows which form of RMON monitors which layers in the OSI model:

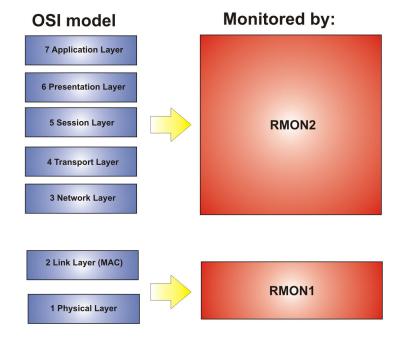


Figure 3: OSI model and RMON

October 2017

The RMON2 feature is a management information base (MIB) or a group of management objects that you use to obtain or configure values using the Simple Network Management Protocol (SNMP). The switch supports a partial implementation of RMON2. The RMON2 feature adds the following MIBS: protocol directory, protocol distribution, address map, network-layer host and application layer host for the traffic passing through the (Control Processor) CP for these MIB tables.

The system only collects statistics for IP packets that pass through the CP. RMON2 does not monitor packets on other interfaces processed on the switch that do not pass through the CP.

After you globally enable RMON2, enable monitoring for individual devices. Identify the network hosts for the system to monitor with a manual configuration on the interfaces you want to monitor.

The RMON2 feature monitors a list of predefined protocols. The system begins to collect protocol statistics immediately after you enable RMON.

The RMON2 feature collects statistics on:

- Protocols predefined by the system.
- Address mapping between physical and network address on particular network hosts that you configure for monitoring.
- Network host statistics for particular hosts on a network layer protocol (IP) that you configure for monitoring.
- Application host statistics for a particular host on an application layer protocol that you configure for monitoring.

RMON2 MIBs

This section describes the following MIBs, on which RMON2 can collect statistics: protocol directory, protocol distribution, address map, network-layer host, and application layer host.

Protocol directory MIB

The protocol directory is a master directory that lists all of the protocols RMON2 can monitor. The protocols include network layer, transport layer, and application layer protocols, under the OSI model. The system only monitors statistics for the predefined protocols. You cannot delete or add additional protocols to this table. The protocol directory MIB is enabled by default for the predefined protocols.

The predefined protocols include:

- Internet Protocol (IP)
- Secure Shell version 2 (SSHv2)
- Transmission Control Protocol (TCP)
- User Datagram Protocol (UDP)
- File Transfer Protocol (FTP)
- Hypertext Transfer Protocol (HTTP)
- Telnet
- Remote login (rlogin)
- Trivial File Transfer Protocol (TFTP)
- Simple Network Management Protocol (SNMP)

Protocol distribution MIB

The protocol distribution MIB collects traffic statistics that each protocol generates by local area network (LAN) segment. The switch acts as the probe and the system collects protocol statistics for the entire switch as part of the group for all of the protocols predefined in the protocol directory table. The protocol distribution control table is part of this group. The protocol distribution control table is predefined with an entry for the management IP for the switch to represent the network segment where the system collects the statistics.

No CLI or EDM support exists to add or delete entries in this table.

Address map MIB

The address map MIB maps the network layer IP to the MAC layer address.

The system populates the address map control table MIB with an entry for each host interface that you enable for monitoring on the switch.

Network layer host MIB

The network layer host MIB monitors the Layer 3 traffic statistics for each host. The network layer host MIB monitors traffic packets in and out of hosts based on the network layer address. The network layer host controls the network and application layer host tables.

The system populates an entry for the management IP of the switch to represent the network segment where the system collects the statistics. You have to enable each host interface that you want to monitor on the switch.

The system only collects statistics for this group from packets that go to the CP.

Application layer host MIB

The application layer host MIB monitors traffic statistics by application protocol for each host.

The system populates an entry for the management IP of the switch to represent the network segment where the system collects the statistics. You have to enable each host interface that you want to monitor on the switch.

The system only collects statistics for this group from packets that go to the CP.

RMON configuration using CLI

This section contains procedures to configure RMON using Command Line Interface (CLI).

For information about RMON statistics, see the following sections in the Statistics chapter:

- Displaying RMON statistics for specific ports on page 175
- Viewing RMON statistics on page 192

Configuring RMON

Enable RMON1 and RMON2 globally, and configure RMON1 alarms, events, history, statistics, and whether port utilization is calculated in half or full duplex. By default, RMON1 and RMON2 are disabled globally.

For RMON1, you enable RMON globally, and then you can use RMON1 alarm, history, events, and statistics for the MAC layer in the network. You cannot use RMON1 history or statistics for application and network layer protocols.

For RMON2, you enable RMON globally, and then you enable RMON on the host interfaces you want to monitor.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Enable RMON1 and RMON2 globally:

rmon

3. Configure an RMON1 alarm:

```
rmon alarm <1-65535> WORD <1-1536> <1-3600> {absolute|delta} [falling-threshold <-2147483647-2147483647> event <1-65535>] [owner WORD<1-127>] [rising-threshold <-2147483647-2147483647> event <1-65535>]
```

4. Configure an RMON1 event:

```
rmon event <1-65535> [community WORD<1-127>] [description WORD<0-127>] [log] [owner WORD<1-127>] [trap] [trap_dest [{A.B.C.D}]] [trap src [{A.B.C.D}]]
```

5. Configure RMON1 history:

```
rmon history <1-65535> {slot/port [/sub-port][-slot/port[/sub-port] [,...]}[buckets <1-65535>][interval <1-3600>][owner WORD<1-127>]
```

6. Configure RMON1 statistics:

```
rmon stats <1-65535> {slot/port [/sub-port][-slot/port[/sub-port] [,...]} [owner <1-127>]
```

7. Configure whether the system calculates port utilization in half or full duplex:

```
rmon util-method [half|full]
```

Example

Configure RMON globally, an RMON1 alarm, and RMON1 event:

```
Switch:1>enable
Switch:1#configure terminal
Switch:1(config) #rmon
Switch:1(config) #rmon event 60534 community public description "Rising Event" log trap
Switch:1(config) #rmon alarm 4 rcCliNumAccessViolations.0 10 absolute rising-threshold 2
event 60000
```

Variable definitions

Use the data in this table to use the **rmon** command.

Variable	Value
alarm <1-65535> WORD <1-1536>	Creates an alarm interface.
<pre><1-3600> {absolute delta} [falling- threshold <-2147483647-2147483647> event <1-65535>] [owner WORD<1-127>] [rising-threshold <</pre>	 <1-65535>— Specifies the interface index number from 1 to 65535. Each entry defines a diagnostics sample at a particular interval for an object on the device. The default is 1.
2147483647-2147483647> event <1-65535>]	• WORD <1-1536>— Specifies the variable name or OID. The entry is case sensitive and can have a string length of 1 to 1536.
	{absolute delta} — Specifies the sample type.
	 rising-threshold <-2147483648-2147483647> [<event: 1-65535="">] — Specifies the rising threshold from -2147483648 to 2147483647, which is a threshold for the sampled statistic. After the current sampled value is greater than or equal to this threshold, and the value at the last sampling interval was less than this threshold, the system generates a single event. The system also generates a single event if the first sample after this entry that becomes valid is greater than or equal to the rising alarm, or the rising or falling alarm. After the system generates a rising event, the system does not generate another such event until the sampled value falls below this threshold and reaches the alarm falling threshold. You cannot modify this object if the associated alarm status is equal to valid.</event:>
	<1-65535>— Specifies the rising event index, which the system uses after the system crosses a rising threshold. The event entry identified by a particular value of this index is the same as identified by the same value of the event index object. If no corresponding entry exists in the event table, no association exists. In particular, if this value is zero, the system does not generate an associated event, as zero is not a valid event index. You cannot modify this object if the associated alarm status is equal to valid.
	• falling-threshold <-2147483648-2147483647> [<event: 1-65535="">] — Specifies the falling threshold from -2147483648 to 2147483647, which specifies a threshold for the sampled statistic. If the current sampled value is less than or equal to this threshold, and the value at the last sampling interval was greater than this threshold, the system generates a single event. The system also generates a single event if the first sample after this entry that becomes valid is less than or equal to this threshold and the associated alarm startup alarm is equal to falling alarm or rising or falling alarm. After the system generates a falling event, the system does not generate another such event until the sampled value rises above this threshold, and reaches the alarm rising threshold. You cannot</event:>

Variable	Value
	modify this object if the associated alarm status is equal to valid.
	<1-65535> — Specifies the index of the event entry that the system uses after a falling threshold is crossed. The event entry identified by a particular value of this index is the same as identified by the same value of the event index object. If no corresponding entry in the event table exists, no association exists. In particular, if this value is zero, the system does not generate an event, as zero is not a valid event index. You cannot modify this object if the associated alarm status is equal to valid. The default is 60535.
	 owner WORD<1-127> — Specifies the name of the owner, with a string length 1 to 127.
	Use the default operator to reset the RMON alarms to their default configuration: default rmon alarm <65535>
	Note:
	When configuring from CLI, the default owner is cli; when configuring with SNMP, the default owner is snmp. The default command only sets the owner to default. No other parameters can be changed after you create the alarm.
	Use the no operator to disable RMON alarms: no rmon alarm [<1-65535>]
event <1-65535> [community	Create an event.
WORD<1-127>] [description WORD<0-127>] [log] [owner WORD<1-127>] [trap]	 <1-65535>— Specifies the event index number. Each entry defines one event that the system generates after the appropriate conditions occur. The default is 1.
	 log — Specifies if this event stores a log when the event is triggered by the alarm.
	 trap — Specifies if this event sends a trap when the event is triggered by the alarm. The trap will be sent to all the snmp- server hosts configured in the snmp table.
	 description WORD<0-127>— Specifies the event description, with a string length of 0 to 127.
	• owner WORD<1-127> — Specifies the name of the owner, with a string length of 1 to 127.
	• community WORD<1-127> — Specifies the SNMP community where you can send SNMP traps, with a string length 1 to 127.
	You can set the community, but the trap is not filtered out. The trap is sent to all configured snmp-server hosts, regardless of the value of this field.

	Use the no operator to delete a RMON event: no rmon event [<1-65535>] [log]
history <1-65535> {slot/port [/sub-port][-	Configures RMON history.
slot/port[/sub-port][,]}[buckets <1-65535>][interval <1-3600>][owner WORD<1-127>]	 <1-65535> — Specifies the history index number that uniquely identifies an entry in the history control table. Each entry defines a set of samples at a particular interval for an interface on the default. The default value is 1.
	 {slot/port [/sub-port][-slot/port[/sub-port][,]} — Specifies the single port interface. Identifies the source for which the system collects and places historical data in a media-specific table on behalf of this history control entry. The source is an interface on this device. The statistics in this group reflect all packets on the local network segment that attaches to the identified interface.
	• buckets <1-65535>— Specifies the requested number of discrete time intervals where the system saves data in the part of the media-specific table associated with this history control entry. The default value is 50.
	• interval <1–3600>— Specifies the time interval in seconds over which the system samples the data for each bucket in the part of the media-specific table associated with this history control entry. Because the counters in a bucket can overflow at their maximum value with no indication, you must take into account the possibility of overflow in all the associated counters. Consider the minimum time in which a counter can overflow on a particular media type, and then set the history control interval to a value less than this interval, which is typically most important for the octets counter in a media-specific table. The default value is 1800.
	• owner WORD<1–127>— Specifies the name of the owner.
stats <1-65535> {slot/port [/sub-port][-	Configures RMON statistics.
slot/port[/sub-port][,]} owner WORD<1– 127>	 <1-65535>— Specifies the control Ether statistics entry index number.
	• {slot/port [/sub-port][-slot/port[/sub-port][,]}— Specifies the single port interface.
	• owner WORD<1-127> — Specifies the name of the owner.
	Use the no operator to delete a RMON Ether stats control interface: no rmon stats [<1-65535>]
util-method [half full]	Configures whether port utilization is calculated in half or full duplex to calculate port usage.
	half—Configures the string to half duplex.

Variable	Value
	full—Configures the string to full duplex.
	After you select half for half duplex, RMON uses InOctets and the speed of the port to calculate port usage (this is the standard RMON RFC 1271 convention). After you select full for full duplex, RMON uses InOctets and OutOctets, and 2X the speed of the port to calculate port usage. If you select full, but the port operates in half-duplex mode, the calculation defaults to the RFC1271 convention. The default is half.

Enabling Remote Monitoring on an interface

Use the following procedure to enable Remote Monitoring (RMON) on an interface.

Before you begin

• Enable RMON globally.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Enable RMON on a particular VLAN:

```
vlan rmon <1-4059>
```

3. Enter GigabitEthernet Interface Configuration mode:

```
enable
configure terminal
interface GigabitEthernet {slot/port[/sub-port][-slot/port[/sub-port]][,...]}
```



If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

4. Enable RMON on a particular port:

rmon

Example

Enable RMON on VLAN 2:

```
Switch:1>enable
Switch:1#configure terminal
Switch:1(config) #vlan rmon 2
```

Enable RMON on port 3/8:

```
Switch:1>enable
Switch:1#configure terminal
Switch:1(config) #interface gigabitethernet 3/8
Switch:1(config-if) #rmon
```

Variable definitions

Use the data in this table to use the vlan rmon command.

Variable	Value
<1-4059>	Specifies the VLAN ID on which to configure RMON.

Displaying RMON information

View RMON1 and RMON2 information on the switch. You can display information on RMON1 alarms, events, history, logs, and statistics. You can also display RMON2 information on application host statistics, control tables, network host statistics, and protocol distribution statistics.

Procedure

1. View RMON1 information:

```
show rmon {alarm|event|history|log|stats}
```

2. View RMON2 information:

show rmon {address-map|application-host-stats WORD<1-64>|application protocols|ctl-table|protocol-dist-stats|network-host-stats}

Example

View RMON event, log, and statistics information:

```
Switch:1(config) #show rmon event

Rmon Event

INDEX DESCRIPTION TYPE COMMUNITY OWNER LAST_TIME_SENT

60534 Rising Event log-and-trap public 192.0.2.155 none
60535 Falling Event log-and-trap public 192.0.2.155 8 day(s), 19:14:32

Switch:1(config) #show rmon log

Rmon Log

Rmon Log

INDEX TIME DESCRIPTION

60535. 1 8 day(s), 19:14:45 1.3.6.1.4.1.2272.1.19.14.0 (absValue = 0, Falling Threshold = 2, interval = 10) [alarmIndex.1] [trap]

"Falling Event"

60535. 2 8 day(s), 19:14:45 1.3.6.1.4.1.2272.1.19.14.0 (absValue = 0, Falling Threshold = 2, interval = 10) [alarmIndex.1] [trap]

"Falling Event"

60535. 2 8 day(s), 19:14:45 1.3.6.1.4.1.2272.1.19.14.0 (absValue = 0, Falling
```

```
Threshold = 1, interval = 10) [alarmIndex.2] [trap]
"Falling Event"

Switch:1(config) #show rmon stats

Rmon Ether Stats

INDEX PORT OWNER

1 1/10 monitor
```

Variable definitions

Use the data in the following table to use the **show rmon** command.

Variable	Value	
address-map	Displays the RMON2 address map. This RMON2 parameter expands RMON capacity to display information on network, transport, and application layers.	
alarm	Displays the RMON1 alarm table.	
application-host-stats WORD<1-64>	Displays RMON2 application host statistics from one of the following protocols: TCP, UDP, FTP, Telnet HTTP, rLogin, SSHv2, TFTP, SNMP, HTTPS. This RMON2 parameter expands RMON capacity to display network, transport, and application layers.	
ctl-table	Displays the RMON2 control tables. This RMON2 parameter expands RMON capacity to display network, transport, and application layers.	
event	Displays the RMON1 event table.	
history	Displays the RMON1 history table. This RMON1 parameter displays and is limited to link layer information, including as MAC information.	
log	Displays the RMON1 log table.	
network-host-stats	Displays RMON2 network-host statistics. This RMON2 parameter expands RMON capacity to display network, transport, and application layers.	
protocol-dist-stats	Displays RMON2 protocol distribution statistics. This RMON2 parameter expands RMON capacity to display network, transport, and application layers.	
stats	Displays the RMON1 statistics table. This RMON1 parameter displays and is limited to link layer information, including as MAC information.	

Displaying RMON status

View the current RMON status on the switch.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. View RMON status:

show rmon

Example

```
Switch:1# show rmon

RMON Info :
Status : enable
```

Displaying RMON address maps

View the maps of network layer address to physical address to interface.

The probe adds entries based on the source MAC and network addresses in packets without MAC-level errors.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. View RMON address maps:

```
show rmon address-map
```

Example

Switch:1#	show rmon addres	s-map		
		Rmon	Address Map Table	
PROTOIDX	HOSTADDR	SOURCE	PHYADDR	LASTCHANGE
1	192.0.2.11	2060	b0:ad:aa:42:a5:03	10/09/15 17:30:41

Job aid

The following table describes the fields in the output for the show rmon address-map command.

Parameter	Description
PROTOIDX	Shows a unique identifier for the entry in the table.
HOSTADDR	Shows the network address for this entry. The format of the value depends on the protocol portion of the local index.
SOURCE	Shows the interface or port on which the network address was most recently seen.
PHYADDR	Shows the physical address on which the network address was most recently seen.
LASTCHANGE	Shows when the entry was created or last changed. If this value changes frequently, it can indicate duplicate address problems.

Displaying RMON application host statistics

View application host statistics to see traffic statistics by application protocol for each host.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. View RMON application host statistics:

show rmon application-host-stats WORD<1-64>

Example

```
Switch:1# show rmon application-host-stats?

WORD<1-64> Select one of these application protocols

{TCP|UDP|FTP|TELNET|HTTP|RLOGIN|SSH|TFTP|SNMP|HTTPS}

Switch:1# show rmon application-host-stats FTP

Rmon Application Host Stats

HOSTADDR INPKT OUTPKT INOCT OUTOCT CREATETIME

192.0.2.10 0 0 0 10/09/15 17:29:54
```

Job aid

The following table describes the fields in the output for the show rmon application-host-stats command.

Parameter	Description
HOSTADDR	Shows the network address for this entry. The format of the value depends on the protocol portion of the local index.
INPKT	Shows the number of packets for this protocol type, without errors, transmitted to this address. This value is the number of link-layer packets so a single, fragmented network-layer packet can increment the counter several times.
OUTPKT	Shows the number of packets for this protocol type, without errors, transmitted by this address. This value is the number of link-layer packets so a single, fragmented network-layer packet can increment the counter several times.
INOCT	Shows the number of octets transmitted to this address, excluding octets in packets that contained errors. This value counts octets in the entire packet that contained the protocol, not just the particular protocol frames.
ОUТОСТ	Shows the number of octets transmitted by this address, excluding octets in packets that contained errors. This value counts octets in the entire packet that contained the protocol, not just the particular protocol frames.
CREATETIME	Shows when the entry was last activated.

Displaying RMON control tables

View RMON control tables to see the data source for both network layer and application layer host statistics.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. View RMON control tables:

show rmon ctl-table

Example

Switch:1# show rmon ctl-table						
		=======	Kmon (Control Table ========		
				Directory Tabl	e =========	
IDX	PROTOCOL	ADDRMAPCFG	HOSTCFG	MATRIXCFG	OWNER	
1 2 3 4 5 6 7 8 9 10 11	UDP FTP SSH TELNET HTTP RLOGIN TFTP SNMP	SUPPORTED	SUPPORTED	NOT SUPPORTED NOT SUPPORTED NOT SUPPORTED NOT SUPPORTED NOT SUPPORTED NOT SUPPORTED	Switch-1	
====	======			stribution Con	trol Table	
	DATASOURC		======== FRAMES CRE		OWNER	
1	0.0.0.0	0	09/	/22/15 19:29:13	Switch-1	
				ap Control Tabl	e	
IDX	DATASOURC	E DROP	FRAMES OWN	IER		
1	0.0.0.0	0	Swi			
====	Host Control Table					
IDX	DATASOURC			AHDROPFRAMES O	WNER	
1	0.0.0.0	0	0	Swi	tch-1	

Job aid

The following table describes the fields in the output for the show rmon ctl-tabl command.

Parameter	Description	
ADDRMAPCFG	Describes and configures the probe support for the network layer and application layer host tables for this protocol. The value can be one of the following:	
	NOT SUPPORTED	
	SUPPORTED OFF	
	SUPPORTED ON	

Parameter	Description
	If the value is SUPPORTED ON , the probe adds entries to the address map table that maps the network layer address to the MAC layer address.
AHDROPFRAMES	Shows the total number of application layer host frames that the probe receives and drops. This value does not include packets that were not counted because they had MAC-layer errors.
CREATETIME	Shows when the entry was last activated.
DATASOURCE	Shows the source of data for the entry.
DROPFRAMES	Shows the total number of frames that the probe receives and drops. This value does not include packets that were not counted because they had MAC-layer errors.
HOSTCFG	Describes and configures the probe support for the network layer and application layer host tables for this protocol. The value can be one of the following:
	NOT SUPPORTED
	SUPPORTED OFF
	SUPPORTED ON
	If the value is SUPPORTED ON , the probe adds entries to the Host Control table to collect statistics for network layer and application layer hosts.
IDX	Shows a unique identifier for the entry in the table.
MATRIXCFG	Describes and configures the probe support for the network layer and application layer host tables for this protocol. The value can be one of the following:
	NOT SUPPORTED
	SUPPORTED OFF
	SUPPORTED ON
NHDROPFRAMES	Shows the total number of network host frames that the probe receives and drops. This value does not include packets that were not counted because they had MAC-layer errors.
OWNER	Shows the entity that configured this entry.
PROTOCOL	Shows the protocols RMON2 can monitor:
	Internet Protocol (IP)
	Transmission Control Protocol (TCP)
	User Datagram Protocol (UDP)
	File Transfer Protocol (FTP)
	Secure Shell version 2 (SSHv2)
	• Telnet
	Hypertext Transfer Protocol (HTTP)

Parameter	Description
	Remote login (RLOGIN)
	Trivial File Transfer Protocol (TFTP)
	Simple Networking Management Protocol (SNMP)
	Hypertext Transfer Protocol Secure (HTTPS)

Displaying RMON network host statistics

View network host statistics to see Layer 3 traffic statistics for each host. The network layer host MIB monitors traffic packets in and out of hosts based on the network layer address.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. View RMON network host statistics:

show rmon network-host-stats

Job aid

The following table describes the fields in the output for the show rmon network-host-stats command.

Parameter	Description
HOSTADDR	Shows the host address for this entry.
INPKT	Shows the number of packets without errors transmitted to this address. This value is the number of link-layer packets so a single, fragmented network-layer packet can increment the counter several times.
OUTPKT	Shows the number of packets without errors transmitted by this address. This value is the number of link-layer packets so a single, fragmented network-layer packet can increment the counter several times.
INOCT	Shows the number of octets transmitted to this address, excluding octets in packets that contained errors. This value counts octets in the entire packet that contained the protocol, not just the particular protocol frames.
OUTOCT	Shows the number of octets transmitted by this address, excluding octets in packets that contained errors. This value counts octets in the entire packet that contained the protocol, not just the particular protocol frames.
CREATETIME	Shows when the entry was last activated.

Displaying RMON protocol distribution statistics

View protocol distribution statistics to see traffic statistics that each protocol generates by local area network (LAN) segment.

- 1. Log on to the switch to enter User EXEC mode.
- 2. View RMON protocol distribution statistics:

show rmon protocol-dist-stats

Example

Switch:1#	show rm	non protocol-	-dist-stats
		 R	Rmon Protocol Dist Stats
PROTOCOL	PKTS	OCTETS	
IP	0	0	
TCP	0	0	
UDP	0	0	
FTP	0	0	
SSH	0	0	
TELNET	0	0	
HTTP	0	0	
RLOGIN	0	0	
TFTP	0	0	
SNMP	0	0	
HTTPS	0	0	

RMON configuration using EDM

This section contains procedures to configure RMON using Enterprise Device Manager (EDM).

For information about RMON statistics, see the following sections in the Statistics chapter:

- Enabling RMON statistics on page 269
- Viewing RMON statistics on page 270

Enabling RMON globally

About this task

You must globally enable RMON before you can use RMON2 functions. If you attempt to enable an RMON2 function before the global flag is disabled, EDM informs you that the flag is disabled and prompts you to enable the flag. You can configure RMON1 while RMON is globally disabled.

If you want to use nondefault RMON parameter values, you can configure them before you enable RMON, or as you configure the RMON functions.

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Options.
- 3. Click the **Options** tab.
- 4. Select the Enable check box.
- 5. In the **UtilizationMethod** option, select a utilization method.

6. Click Apply.

Options field descriptions

Use the data in the following table to use the **Options** tab.

Name	Description
Enable	Enables RMON. If you select the Enable check box, the RMON agent starts immediately. To disable RMON, clear the Enable check box and click Apply to save the new setting to NVRAM, and then restart the device. The default is disabled.
UtilizationMethod	Controls whether RMON uses a half-duplex or full-duplex formula to calculate port usage. After you select halfDuplex, RMON uses InOctets and the speed of the port to calculate port usage (this is the standard RMON RFC1271 convention). After you select fullDuplex, RMON uses InOctets and OutOctets and 2X the speed of the port to calculate port usage. If you select fullDuplex, but the port operates in half-duplex mode, the calculation defaults to the RFC1271 convention. The default is halfDuplex.

Enabling RMON on a port or VLAN

Use the following procedure to enable RMON on an interface.

Before you begin

• Enable RMON globally.

- 1. Enable RMON on a VLAN:
 - a. In the navigation pane, expand the **Configuration > VLAN** folders.
 - b. Click VLANs.
 - c. Click the Advanced tab.
 - d. In the row for the VLAN, double-click the **RmonEnable** field, and then select **enable**.
 - e. Click Apply.
- 2. Enable RMON on a port:
 - a. In the Device Physical View, select a port.
 - b. In the navigation pane, expand the **Configuration > Edit > Port** folders.
 - c. Click General.
 - d. Click the Interface tab.
 - e. For the RmonEnable field, select enable.
 - f. Click Apply.

Enabling RMON1 history

About this task

Use RMON1 to establish a history for a port and configure the bucket interval. For example, to gather RMON statistics over the weekend, you must have enough buckets to cover two days. Configure the history to gather one bucket every hour, and cover a 48-hour period. After you configure the history characteristics, you cannot modify them; you must delete the history and create another one.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Control.
- 3. In the **History** tab, click **Insert**.
- 4. In the **Port** box, click the ellipsis (...) button.
- 5. Select a port.
- 6. Click OK.
- 7. In the **Buckets Requested** box, type the number of discrete time intervals to save data.
- 8. In the **Interval** box, type the interval in seconds.
- 9. In the **Owner** box, type the owner information.
- 10. Click Insert.

History field descriptions

Use the data in the following table to use the **History** tab.

Name	Description
Index	Specifies an index that uniquely identifies an entry in the historyControl table. Each entry defines a set of samples at a particular interval for an interface on the device. Index value ranges from 1–65535. The default value is 1.
Port	Identifies the source for which the system collects and places historical data in a media-specific table on behalf of this historyControlEntry. The source is an interface on this device. To identify a particular interface, the object identifies the instance of the iflndex object, defined in (4,6), for the desired interface. For example, if an entry receives data from interface 1, the object is iflndex 1. The statistics in this group reflect all packets on the local network segment attached to the identified interface. You cannot modify this object if the associated historyControlStatus object is equal to valid(1).
BucketsRequested	Specifies the requested number of discrete time intervals over which the system save data in the part of the media-specific table associated with

Name	Description
	this historyControlEntry. After this object is created or modified, the probe configures historyControlBucketsGranted as closely to this object as possible for the particular probe implementation and available resources. Values range from 1–65535. The default value is 50.
BucketsGranted	Specifies the number of discrete sampling intervals over which the system save data in the part of the media-specific table associated with this historyControlEntry. After the associated BucketsRequested object is created or modified, the probe sets this object as closely to the requested value as possible for the particular probe implementation and available resources. The probe must not lower this value except as a result of a modification to the associated BucketsRequested object. Occasionally, the actual number of buckets associated with this entry is less than the value of this object. In this case, at the end of each sampling interval, the system adds a new bucket to the media-specific table. After the number of buckets reaches the value of this object and the system is going to add a new bucket to the media-specific table, the agent deletes the oldest bucket associated with this entry so the system can added the new bucket. After the value of this object changes to a value less than the current value, entries are deleted from the media-specific table associated with this entry. The agent deletes the oldest of these entries so that their number remains less than or equal to the new value of this object. After the value of this object changes to a value greater than the current value, the system allows the number of associated media-specific entries to grow.
Interval	Specifies the interval in seconds over which the system samples data for each bucket in the part of the media-specific table associated with this historyControlEntry. You can set this interval between 1–3600 seconds (1 hour). Because the counters in a bucket can overflow at their maximum value with no indication, you must take into account the possibility of overflow in all of the associated counters. Consider the minimum time in which a counter can overflow on a particular media type, and then set the historyControlInterval object to a value less than this interval, which is typically most important for the octets counter in a media-specific table. For example, on an Ethernet network, the etherHistoryOctets counter can overflow in approximately 1 hour at the maximum utilization. You cannot modify this object if the associated historyControlStatus object is equal to valid. The default value is 1800.
Owner	Specifies the entity that configured this entry and uses the assigned resources.

Disabling RMON1 history

About this task

Disable RMON1 history on a port if you do not want to record a statistical sample from that port.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Control.
- 3. In the **History** tab, select the row that contains the port ID to delete.
- 4. Click Delete.

Viewing RMON1 history statistics

View RMON1 history statistics when you want to see a statistical sample from the switch. You can create a graph of the statistics in a bar, pie, chart, or line format.

Procedure

- 1. In the Device Physical View, select a port.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Port.
- 4. Click the **RMON History** tab.
- 5. Select the statistics you want to graph.
- 6. Click the button for the type of graph you require (bar, pie, chart, or line).

RMON History field descriptions

Use the data in the following table to use the **RMON History** tab.

Table 7: Variable definitions

Parameter	Description
SampleIndex	Identifies the particular sample this entry represents among all samples associated with the same history control entry. This index starts at one and increases by one as each new sample is taken.
Utilization	Specifies the best estimate of the mean physical layer network utilization on this interface during the sampling interval, in hundredths of a percent.
Octets	Specifies the total number of octets of data (including those in bad packets) received on the network (excluding framing bits but including FCS octets)
Pkts	Specifies the number of packets (including bad packets) received during this sampling interval.
BroadcastPkts	Specifies the number of good packets received during this sampling interval that were directed to the broadcast address.
MulticastPkts	Specifies the number of good packets received during this sampling interval that the system directs to a multicast address. This number does not include packets addressed to the broadcast address.

Parameter	Description
DropEvents	Specifies the total number of events in which the probe dropped packets due to lack of resources during this sampling interval. This number is not necessarily the number of packets dropped; it is only the number of times the system detects this condition.
CRCAlignErrors	The number of packets the system receives during this sampling interval that had a length (excluding framing bits but including FCS octets) from 64–1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).
UndersizePkts	Specifies the number of packets the system receives during this sampling interval that were less than 64 octets (excluding framing bits but including FCS octets), and were otherwise well formed.
OversizePkts	Specifies the number of packets the system receives during this sampling interval that were longer than 1518 octets (excluding framing bits but including FCS octets), but were otherwise well formed.
Fragments	Specifies the total number of packets received during this sampling interval that were less than 64 octets in length (excluding framing bits but including FCS octets) and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).
	It is entirely normal for Fragments to increment because it counts both runts (which are normal occurrences due to collisions) and noise hits.
Collisions	Specifies the best estimate of the total number of collisions on this Ethernet segment during this sampling interval. The value returned depends on the location of the RMON probe. Section 8.2.1.3 (10BASE-5) and section 10.3.1.3 (10BASE-2) of IEEE standard 802.3 states that a station must detect a collision in the receive mode if three or more stations transmit simultaneously. A repeater port must detect a collision when two or more stations transmit simultaneously. Thus, a probe placed on a repeater port can record more collisions than a probe connected to a station on the same segment.
	Probe location plays a small role when 10BASE-T. 14.2.1.4 (10BASE-T) of IEEE standard 802.3 defines a collision as the simultaneous presence of signals on the DO and RD circuits (transmitting and receiving at the same time). A 10BASE-T station can detect only collisions when it transmits. Thus, probes placed on a station and a repeater can report the same number of collisions.
	An RMON probe inside a repeater can ideally report collisions between the repeater and one or more other hosts (transmit collisions as defined by IEEE 802.3k) plus receiver collisions observed on any coax segments to which the repeater is connected.

Creating an RMON1 alarm

After you enable RMON1 globally, you also create a default rising and falling event. The default for the events is log-and-trap, which means that you receive notification through a trap as well as through a log entry.

Before you begin

· You must globally enable RMON.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Alarms.
- 3. Click the Alarms tab.
- 4. Click Insert.
- 5. In the **Variable** option, select a variable for the alarm.

If you select some variables, the system will prompt you for a port (or other object) on which you want to set an alarm.

- 6. In the **SampleType** option, select a sample type.
- 7. In the **Interval** box, type a sample interval in seconds.
- 8. In the **Index** box, type an index number.
- 9. In the **RisingThreshold** box, type a rising threshold value.
- 10. In the **RisingEventIndex** box, type a rising threshold event index.
- 11. In the **FallingThreshold** box, type a falling threshold value.
- 12. In the **FallingEventIndex** box, type a falling threshold event index.
- 13. In the **Owner** box, type the owner of the alarm.
- 14. Click Insert.

Alarms field descriptions

Use the data in the following table to use the **Alarms** tab.

Name	Description
Index	Uniquely identifies an entry in the alarm table. Each entry defines a diagnostic sample at a particular interval for an object on the device. The default is 1.
Interval	Specifies the interval, in seconds, over which the data is sampled and compared with the rising and falling thresholds. deltaValue sampling—Configures the interval short enough that the sampled variable is unlikely to increase or decrease by more than 2^31–1 during a single sampling interval.

Name	Description
Variable	Specifies the object identifier of the particular variable to be sampled. Only variables that resolve to an ASN.1 primitive type of INTEGER (INTEGER, Counter, Gauge, or TimeTicks) can be sampled.
	Alarm variables exist in three formats, depending on the type:
	 A chassis, power supply, or fan-related alarm ends in x where the x index is hard-coded. No further information is required.
	• A card, spanning tree group (STG), or EtherStat alarm ends with a dot (.). You must enter a card number, STG ID, IP address, or EtherStat information.
	 A port alarm ends with no dot or index and requires that you use the port shortcut menu. An example of a port alarm is ifInOctets (interface incoming octet count).
	Because the system articulates SNMP access control entirely in terms of the contents of MIB views, no access control mechanism exists to restrict the value of this object to identify only those objects that exist in a particular MIB view. Because no acceptable means of restricting the read access that is obtained through the alarm mechanism exists, the probe must grant only write access to this object in those views that have read access to all objects on the probe.
	After you configure a variable, if the supplied variable name is not available in the selected MIB view, the system returns a badValue error. After the variable name of an established alarmEntry is no longer available in the selected MIB view, the probe changes the status of this alarmEntry to invalid.
	You cannot modify this object if the associated alarmStatus object is equal to valid.
SampleType	Specifies the method of sampling the selected variable and calculating the value to be compared against the thresholds. If the value of this object is absoluteValue, the value of the system compares the selected variable directly with the thresholds at the end of the sampling interval. If the value of this object is deltaValue, the system subtracts the value of the selected variable at the last sample from the current value, and the system compares the difference with the thresholds. You cannot modify this object if the associated alarmStatus object is equal to valid. The default is deltaValue.
Value	Specifies the value of the statistic during the last sampling period. For example, if the sample type is deltaValue, this value is the difference between the samples at the beginning and end of the period. If the sample type is absoluteValue, this value is the sampled value at the end of the period. This system compares the value with the rising and falling thresholds. The value during the current sampling period is not made available until the period is completed and remains available until the next period is complete.
StartUpAlarm	Specifies the alarm that is sent after this entry is first set to valid. If the first sample after this entry becomes valid is greater than or equal to the risingThreshold and alarmStartupAlarm is equal to the risingAlarm or the risingOrFallingAlarm, then the system generates a single rising alarm. If the first sample after this entry becomes valid is less than or equal to the

Name	Description
	fallingThreshold and alarmStartupAlarm is equal to the fallingAlarm or the risingOrFallingAlarm, then the system generates a single falling alarm. You cannot modify this object if the associated alarmStatus object is equal to valid.
RisingThreshold	Specifies a threshold for the sampled statistic. After the current sampled value is greater than or equal to this threshold, and the value at the last sampling interval was less than this threshold, the system generates a single event. The system also generates a single event if the first sample after this entry becomes valid is greater than or equal to this threshold and the associated alarmStartupAlarm is equal to risingAlarm or risingOrFallingAlarm. After a rising event is generated, another such event is not generated until the sampled value falls below this threshold and reaches the alarmFallingThreshold. You cannot modify this object if the associated alarmStatus object is equal to valid.
RisingEventIndex	Specifies the index of the eventEntry that is used after a rising threshold is crossed. The eventEntry identified by a particular value of this index is the same as identified by the same value of the eventIndex object. If no corresponding entry exists in the eventTable, no association exists. In particular, if this value is zero, the system generates no associated event, as zero is not a valid event index. You cannot modify this object if the associated alarmStatus object is equal to valid.
	Note: ■ The state of the state
	You must create the event prior to associating it to an alarm.
FallingThreshold	Specifies a threshold for the sampled statistic. If the current sampled value is less than or equal to this threshold, and the value at the last sampling interval was greater than this threshold, the system generates a single event. The system also generates a single event if the first sample after this entry becomes valid is less than or equal to this threshold and the associated alarmStartupAlarm is equal to fallingAlarm or risingOrFallingAlarm. After the system generates a falling event, the system does not generate another similar event until the sampled value rises above this threshold and reaches the alarmRisingThreshold. You cannot modify this object if the associated alarmStatus object is equal to valid.
FallingEventIndex	Specifies the index of the eventEntry that the system uses after a falling threshold is crossed. The eventEntry identified by a particular value of this index is the same as identified by the same value of the eventIndex object. If there is no corresponding entry in the eventTable, no association exists. In particular, if this value is zero, the system generates no associated event, as zero is not a valid event index. You cannot modify this object if the associated alarmStatus object is equal to valid. Note: You must create the event prior to associating it to an alarm.
Owner	Specifies the entity that configured this entry and is therefore using the
	resources assigned to it.
Status	Specifies the status of this alarm entry.

Viewing RMON1 alarms

View the RMON1 alarm information to see alarm activity.

Procedure

- 1. In the navigation pane, expand the Configuration > Serviceability > RMON folders.
- 2. Click Alarms.
- 3. Click the Alarm tab.

Deleting an RMON1 alarm

Delete an RMON1 alarm if you no longer want it to appear in the log.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Alarms.
- 3. Select the alarm you must delete.
- 4. Click Delete.

Creating an RMON1 event

Create a custom rising and falling RMON1 event to specify if alarm information is sent to a trap, a log, or both.

Procedure

- 1. In the navigation pane, expand the Configuration > Serviceability > RMON folders.
- 2. Click Alarms.
- 3. Click the Events tab.
- 4. Click Insert.
- 5. In the **Description** box, type an event name.
- 6. In the **Type** option, select an event type.

The default configuration is log-and-trap. To save memory, configure the event type to log. To reduce traffic from the system, configure the event type to snmp-log.

If you select snmp-trap or log, you must configure trap receivers.

- 7. In the **Community** box, type an SNMP community.
- 8. In the **Owner** box, type the owner of this event.

9. Click Insert.

Events field descriptions

Use the data in the following table to use the **Events** tab.

Name	Description
Index	Uniquely identifies an entry in the event table. Each entry defines one event that the system generates after the appropriate conditions occur. The default is 1.
Description	Specifies a comment that describes this event entry.
Туре	Specifies the type of notification that the probe makes about this event. In the case of a log, the system makes an entry in the log table for each event. In the case of SNMP traps, the system sends an SNMP trap to one or more management stations.
Community	Specifies the SNMP community where you can send SNMP traps.
LastTimeSent	Specifies the value of sysUpTime at the time this event entry last generated an event. If this entry has not generated events, this value is zero.
Owner	Specifies the entity that configured this entry and is therefore using the assigned resources. If this object contains a string starting with monitor and has associated entries in the log table, all connected management stations retrieve those log entries, as they have significance to all management stations connected to this device.

Viewing RMON1 events

View RMON1 events to see how many events occurred.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Alarms.
- 3. Click the **Events** tab.

Events field descriptions

Use the data in the following table to use the **Events** tab.

Name	Description
Index	Uniquely identifies an entry in the event table. Each entry defines one event that the system generates after the appropriate conditions occur. The default is 1.
Description	Specifies a comment that describes this event entry.
Туре	Specifies the type of notification that the probe makes about this event. In the case of a log, the system makes an entry in the log table for each event. In the case of SNMP traps, the system sends an SNMP trap to one or more management stations.

Name	Description
Community	Specifies the SNMP community where you can send SNMP traps.
LastTimeSent	Specifies the value of sysUpTime at the time this event entry last generated an event. If this entry has not generated events, this value is zero.
Owner	Specifies the entity that configured this entry and is therefore using the assigned resources. If this object contains a string starting with monitor and has associated entries in the log table, all connected management stations retrieve those log entries, as they have significance to all management stations connected to this device.

Deleting an event

Delete an event after you no longer require the alarm information.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Alarms.
- 3. Click the **Events** tab.
- 4. Select the event you must delete.
- 5. Click Delete.

Viewing the RMON log

About this task

View the trap log to see which activity occurred.

Procedure

- 1. In the navigation pane, expand the Configuration > Serviceability > RMON folders.
- 2. Click Alarms.
- 3. Click the **Log** tab.

Log field descriptions

Use the data in the following table to use the **Log** tab.

Name	Description
EventIndex	Specifies an index that uniquely identifies an entry in the event table. Each entry defines one event that is generated under appropriate conditions.

Name	Description	
Index	Specifies an index that uniquely identifies an entry in the log table generated by the same event entries.	
Time	Specifies the creation time for this log entry.	
Description	Specifies an implementation dependent description of the event that activated this log entry.	

Viewing the protocol directory

View the protocol directory to see the list of protocols that RMON2 can monitor. You cannot change the list of protocols.

About this task

The protocol directory MIB is enabled by default for the predefined protocols.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Protocol Directory.
- 3. Click the Protocol Directories tab.

Protocol Directories field descriptions

Use the data in the following table to use the **Protocol Directories** tab.

Name	Description
Index	Shows a unique identifier for the entry in the table.
Protocol	Shows the protocols RMON2 can monitor:
	Internet Protocol (IP)
	Secure Shell version 2 (SSHv2)
	Transmission Control Protocol (TCP)
	User Datagram Protocol (UDP)
	File Transfer Protocol (FTP)
	Hypertext Transfer Protocol (HTTP)
	Telnet
	Remote login (rlogin)
	Trivial File Transfer Protocol (TFTP)
	Simple Networking Management Protocol (SNMP)

Name	Description
AddressMapConfig	Describes and configures the probe support for the network layer and application layer host tables for this protocol. The value can be one of the following:
	notSupported
	supportedOff
	supportedOn
	If the value is supportedOn, the probe adds entries to the Address Map tab that maps the network layer address to the MAC layer address.
HostConfig	Describes and configures the probe support for the network layer and application layer host tables for this protocol. The value can be one of the following:
	notSupported
	supportedOff
	supportedOn
	If the value is supportedOn, the probe adds entries to the Host Control tab to collect statistics for network layer and application layer hosts.
MatrixConfig	Describes and configures the probe support for the network layer and application layer host tables for this protocol. The value can be one of the following:
	notSupported
	supportedOff
	• supportedOn
Owner	Shows the entity that configured this entry.

Viewing the data source for protocol distribution statistics

View the Distribution Control tab to see the network segment data source on which the protocol distribution statistics are measured. The management IP mentioned as a data source represents the IP that the SNMP agent uses to access the switch.

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Protocol Distribution.
- 3. Click the **Distribution Control** tab.

Distribution Control field descriptions

Use the data in the following table to use the **Distribution Control** tab.

Name	Description
Index	Shows a unique identifier for the entry in the table.
DataSource	Specifies the source of data for this protocol distribution.
DroppedFrames	Shows the total number of frames that the probe receives and drops but does not include in the StatsDropEvents value. This event can occur if the probe is out of resources and sheds the load from this collection. This value does not include packets that were not counted because they had MAC-layer errors.
CreateTime	Shows the value of the sysUpTime when the entry was last activated.
Owner	Shows the entity that configured this entry.

Viewing protocol distribution statistics

View protocol distribution statistics to see traffic statistics that each protocol generates by local area network (LAN) segment.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Protocol Distribution.
- 3. Click the **Distribution Stats** tab.

Distribution Stats field descriptions

Use the data in the following table to use the **Distribution Stats** tab.

Name	Description
Localindex	Identifies the protocol distribution an entry is part of, as well as the particular protocol that it represents.
Pkts	Shows the number of packets without errors received for this protocol type. This value is the number of link-layer packets so a single, fragmented network-layer packet can increment the counter several times.
Octets	Shows the number of octets in packets received for this protocol type since it was added to the table.

Name	Description
	This value does not include octets in packets that contained errors. This value counts octets in the entire packet that contained the protocol, not just the
	particular protocol frames.

Viewing the host interfaces enabled for monitoring

View the entries in the address map control tab to see which host interfaces are enabled for monitoring on the switch. Each entry in this table enables the discovery of addresses on a new interface.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Address Map.
- 3. Click the Address Map Control tab.

Address Map Control field descriptions

Use the data in the following table to use the **Address Map Control** tab.

Name	Description
Index	Shows a unique identifier for the entry in the table.
DataSource	Shows the source of data for the entry.
DroppedFrames	Shows the total number of frames that the probe receives and drops but does not include in the StatsDropEvents value. This event can occur if the probe is out of resources and sheds the load from this collection. This value does not include packets that were not counted because they had MAC-layer errors.
Owner	Shows the entity that configured this entry.

Viewing address mappings

View the mappings of network layer address to physical address to interface.

About this task

The probe adds entries on this tab based on the source MAC and network addresses in packets without MAC-level errors.

The probe populates this table for all protocols on the **Protocol Directories** tab with a value of **AddressMapConfig** equal to **supportedOn**.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Address Map.
- 3. Click the **Address Map** tab.

Address Map field descriptions

Use the data in the following table to use the **Address Map** tab.

Name	Description
LocalIndex	Shows a unique identifier for the entry in the table.
HostAddress	Shows the network address for this entry. The format of the value depends on the protocol portion of the local index.
Source	Shows the interface or port on which the network address was most recently seen.
PhysicalAddress	Shows the physical address on which the network address was most recently seen.
LastChange	Shows the value of the sysUpTime when the entry was created or last changed. If this value changes frequently, it can indicate duplicate address problems.

Viewing the data source for host statistics

View the Host Control tab to see the data source for both network layer and application layer host statistics.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Network Layer Host.
- 3. Click the Host Control tab.

Host Control field descriptions

Use the data in the following table to use the **Host Control** tab.

Name	Description
Index	Shows a unique identifier for the entry in the table.
DataSource	Shows the source of data for the associated host table. The statistics in this group reflect all packets

Name	Description
	on the local network segment that attaches to the identified interface.
NHDropFrames	Shows the total number of frames that the probe receives and drops but does not include in the StatsDropEvents value. This event can occur if the probe is out of resources and sheds the load from this collection. This value does not include packets that were not counted because they had MAC-layer errors.
AHDropFrames	Shows the total number of frames that the probe receives and drops but does not include in the StatsDropEvents value. This event can occur if the probe is out of resources and sheds the load from this collection. This value does not include packets that were not counted because they had MAC-layer errors.
Owner	Shows the entity that configured this entry.

Viewing network host statistics

View network host statistics to see Layer 3 traffic statistics for each host. The network layer host MIB monitors traffic packets in and out of hosts based on the network layer address.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Network Layer Host.
- 3. Click the **Network Host Stats** tab.

Network Host Stats field descriptions

Use the data in the following table to use the **Network Host Stats** tab.

Name	Description
Localindex	Shows a unique identifier for the entry in the table.
HostAddress	Shows the host address for this entry.
InPkts	Shows the number of packets without errors transmitted to this address. This value is the number of link-layer packets so a single, fragmented network-layer packet can increment the counter several times.
OutPkts	Shows the number of packets without errors transmitted by this address. This value is the number

Name	Description
	of link-layer packets so a single, fragmented network-layer packet can increment the counter several times.
InOctets	Shows the number of octets transmitted to this address, excluding octets in packets that contained errors. This value counts octets in the entire packet that contained the protocol, not just the particular protocol frames.
OutOctets	Shows the number of octets transmitted by this address, excluding octets in packets that contained errors. This value counts octets in the entire packet that contained the protocol, not just the particular protocol frames.
CreateTime	Shows the value of the sysUpTime when the entry was last activated.

Viewing application host statistics

View application host statistics to see traffic statistics by application protocol for each host.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Application Layer Host.
- 3. Click the **Application Host Stats** tab.

Application Host Stats field descriptions

Use the data in the following table to use the Application Host Stats tab.

Name	Description
Index	Shows a unique identifier for the entry in the table.
HostAddress	Identifies the network layer address of this entry.
Localindex	Identifies the network layer protocol of the address.
InPkts	Shows the number of packets for this protocol type, without errors, transmitted to this address. This value is the number of link-layer packets so a single, fragmented network-layer packet can increment the counter several times.
OutPkts	Shows the number of packets for this protocol type, without errors, transmitted by this address. This value is the number of link-layer packets so a single,

Name	Description
	fragmented network-layer packet can increment the counter several times.
InOctets	Shows the number of octets transmitted to this address, excluding octets in packets that contained errors. This value counts octets in the entire packet that contained the protocol, not just the particular protocol frames.
OutOctets	Shows the number of octets transmitted by this address, excluding octets in packets that contained errors. This value counts octets in the entire packet that contained the protocol, not just the particular protocol frames.
CreateTime	Shows the value of the sysUpTime when the entry was last activated.

RMON alarm variables

RMON alarm variables are divided into three categories. Each category has subcategories. The following table lists the alarm variable categories and provides a brief variable description.

Table 8: RMON alarm variables

Category	Subcategory	Variable	Definition
Security		rcCliNumAccessViolations.0	The number of CLI access violations detected by the system.
		rcWebNumAccessBlocks.0	The number of accesses the Web server blocked.
		snmpInBadCommunityNames.0	The total number of SNMP messages delivered to the SNMP protocol entity that represented an SNMP operation not allowed by the SNMP community named in the message.
Errors	Interface	ifInDiscards	The number of inbound packets discarded even though no errors were detected to prevent the packets being deliverable to a higher-layer protocol. One possible reason for discarding a packet is to free buffer space.

Category	Subcategory	Variable	Definition
		ifInErrors	For packet-oriented interfaces, the number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol. For character-oriented or fixed-length interfaces, the number of inbound transmission units that contained errors, preventing them from being deliverable to a higher-layer protocol.
		ifOutDiscards	The number of outbound packets discarded even though no errors were detected to prevent the packets being transmitted. One possible reason for discarding such a packet is to free buffer space.
		ifOutErrors	For packet-oriented interfaces, the number of outbound packets that were not transmitted because of errors. For character-oriented or fixed-length interfaces, the number of outbound transmission units that were not transmitted because of errors.
	Ethernet	dot3StatsAlignmentErrors	A count of frames received on a particular interface that are not an integral number of octets in length and do not pass the Frame Check Sequence (FCS) check. The count represented by an instance of this object increments when the alignmentError status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions exist are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.
		dot3StatsFCSErrors	A count of frames received on a particular interface that are an integral number of octets in length but do not pass the FCS check.

Category	Subcategory	Variable	Definition
			The count represented by an instance of this object increments when the frameCheckError status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions occur are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.
		dot3StatsSingleCollisionFrames	A count of successfully transmitted frames on a particular interface where transmission is inhibited by exactly one collision. A frame that is counted by an instance of this object is also counted by the corresponding instance of either the ifOutUcastPkts object, the ifOutMulticastPkts object, or the ifOutBroadcastPkts object, and is not counted by the corresponding instance of the dot3StatsMultipleCollisionFrames object.
		dot3StatsMultipleCollisionFrames	A count of successfully transmitted frames on a particular interface where transmission is inhibited by more than one collision. A frame that is counted by an instance of this object is also counted by the corresponding instance of either the ifOutUcastPkts, ifOutMulticastPkts, or ifOutBroadcastPkts object, and is not counted by the corresponding instance of the dot3StatsSingleCollisionFrames object.
		dot3StatsSQETestErrors	A count of times that the SQE TEST ERROR message is generated by the PLS sublayer for a particular interface. The SQE TEST ERROR message is

Category	Subcategory	Variable	Definition
			defined in section 7.2.2.2.4 of ANSI/IEEE 802.3-1985 and its generation is described in section 7.2.4.6 of the same document.
		dot3StatsDeferredTransmissions	A count of frames for which the first transmission attempt on a particular interface is delayed because the medium is busy. The count represented by an instance of this object does not include frames involved in collisions.
		dot3StatsLateCollisions	The number of times that a collision is detected on a particular interface later than 512 bit-times into the transmission of a packet; 512 bit-times corresponds to 51.2 microseconds on a 10 Mb/s system. A (late) collision included in a count represented by an instance of this object is also considered as a (generic) collision for purposes of other collision-related statistics.
		dot3StatsExcessiveCollisions	A count of frames where the transmission on a particular interface fails due to excessive collisions.
		dot3StatsInternalMacTransmitErrors	A count of frames where the transmission on a particular interface fails due to an internal MAC sublayer transmit error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of either the dot3StatsLateCollisions object, the dot3StatsExcessiveCollisions object, or the dot3StatsCarrierSenseErrors object. The precise meaning of the count
			represented by an instance of this object is implementation specific. In particular, an instance of this object can represent a count of

Category	Subcategory	Variable	Definition
			transmission errors on a particular interface that are not otherwise counted.
		dot3StatsCarrierSenseErrors	The number of times the carrier sense condition was lost or never asserted when the switch attempted to transmit a frame on a particular interface. The count represented by an instance of this object increments at most once for each transmission attempt, even if the carrier sense condition fluctuates during a transmission attempt.
		dot3StatsFrameTooLongs	A count of frames received on a particular interface that exceeds the maximum permitted frame size. The count represented by an instance of this object increments when the frameTooLong status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions obtained are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.
		dot3StatsInternalMacReceiveErrors	A count of frames where the transmission on a particular interface fails due to an internal MAC sublayer transmit error. A frame is counted by an instance of this object ony if it is not counted by the corresponding instance of either the dot3StatsLateCollisions object, the dot3StatsExcessiveCollisions object, or the dot3StatsCarrierSenseErrors object.
			The precise meaning of the count represented by an instance of this object is implementation-specific. In particular, an instance of this

Category	Subcategory	Variable	Definition
			object can represent a count of transmission errors on a particular interface that are not otherwise counted.
	IP	ipInHdrErrors.0	The number of input datagrams discarded due to errors in the datagram IP headers, including bad checksums, version number mismatch, other format errors, time-to-live exceeded, and errors discovered in processing IP options.
		ipInDiscards.0	The number of discarded input IP datagrams where no problems were encountered to prevent continued processing. An example of why they were discarded can be lack of buffer space. This counter does not include any datagrams discarded while awaiting reassembly.
		ipOutDiscards.0	The number of output IP datagrams where no problems were encountered to prevent transmission to the destination, but that were discarded (for example, for lack of buffer space). This counter includes datagrams counted in ipForwDatagrams if packets meet this (discretionary) discard criterion.
		ipFragFails.0	The number of IP datagrams discarded because they needed to be fragmented at this entity but were not, for example, because the Don't Fragment flag was set.
		ipReasmFails.0	The number of failures detected by the IP reassembly algorithm (for whatever reason: timed out, errors, and so forth). This is not necessarily a count of discarded IP fragments because some algorithms (notably the algorithm in RFC 815) can lose track of the number of fragments by

Category	Subcategory	Variable	Definition
			combining them as they are received.
		icmpInParmProbs.0	The number of ICMP In parameter problem messages received.
		icmpOutParmProbs.0	The number of ICMP Out parameter problem messages received.
	MLT	rcStatMltEtherAlignmentErrors	The number of frames received on an MLT that are not an integral number of octets in length, but do not pass the FCS check.
		rcStatMltEtherFCSErrors	The number of frames received on an MLT that are an integral number of octets in length, but do not pass the FCS check.
		rcStatMltEtherSingleCollFrames	The number of successfully transmitted frames on a particular MLT where transmission is inhibited by exactly one collision.
		rcStatMltEtherMultipleCollFrames	The number of successfully transmitted frames on a particular MLT where transmission is inhibited by more than one collision.
		rcStatMltEtherSQETestError	A count of times that the SQE TEST ERROR message is generated by the PLS sublayer for a particular MLT.
		rcStatMltEtherDeferredTransmiss	A count of frames where the first transmission attempt on a particular MLT is delayed because the medium is busy. The count represented by an instance of this object.
		rcStatMltEtherLateCollisions	The number of times that a late collision is detected on a particular MLT later than 512 bittimes into the transmission of a packet; 512-bit-times corresponds to 51.2-microseconds on a 10 Mb/s system.
		rcStatMltEtherExcessiveCollis	The number of times that excessive collisions are detected

Category	Subcategory	Variable	Definition
			on a particular MLT later than 512 bit-times into the transmission of a packet; 512 bit-times corresponds to 51.2 microseconds on a 10-Mb/s system.
		rcStatMltEtherMacTransmitError	A count of frames where the transmission on a particular MLT fails due to an internal MAC sublayer transmit error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of either the LateCollisions object, the ExcessiveCollisions object, or the CarrierSenseErrors object.
		rcStatMltEtherCarrierSenseError	The number of times the carrier sense condition was lost or never asserted when attempting to transmit a frame on a particular MLT. The count represented by an instance of this object increments at most once for each transmission attempt, even if the carrier sense condition fluctuates during a transmission attempt.
		rcStatMltEtherFrameTooLong	A count of frames received on a particular MLT that exceeds the maximum permitted frame size. The count represented by an instance of this object increments when the frameTooLong status is returned by the MAC service to the LLC (or other MAC user).
		rcStatMltEtherMacReceiveError	A count of frames for which reception on a particular MLT fails due to an internal MAC sublayer receive error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of either the FrameTooLongs object, the AlignmentErrors object, or the FCSErrors object.

Category	Subcategory	Variable	Definition
	Other	rcTblArNoSpace	The number of entries not added to the address translation table due to lack of space.
		snmpInAsnParseErrs.0	The total number of ASN.1 or BER errors encountered by the SNMP protocol entity when it decodes received SNMP messages.
		rcStgPortInBadBpdus	The number of bad BPDUs received by this port.
		dot1dTpPortInDiscards	Count of valid frames received that were discarded (that is, filtered) by the forwarding process.
Traffic	Interface	ifInOctets	The total number of octets received on the interface, including framing characters.
		ifInMulticastPkts	The number of packets, delivered by this sublayer to a higher sublayer, that are addressed to a multicast address at this sublayer. For a MAC layer protocol, this number includes both Group and Functional addresses.
		ifInBroadcastPkts	The number of packets, delivered by this sublayer to a higher (sub) layer, that are addressed to a broadcast address at this sublayer.
		ifInUnkownProtos	For packet-oriented interfaces, the number of packets received through the interface that are discarded because of an unknown or unsupported protocol. For character-oriented or fixed-length interfaces that support protocol multiplexing, the number of transmission units received through the interface that are discarded because of an unknown or unsupported protocol. For any interface that does not support protocol multiplexing, this counter is always 0.

Category	Subcategory	Variable	Definition
		ifOutOctets	The total number of octets transmitted from the interface, including framing characters.
		ifOutMulticastPkts	The total number of packets that higher-level protocols requested be transmitted, and that are addressed to a multicast address at this sublayer, including those that are discarded or not sent. For a MAC layer protocol, this includes both Group and Functional addresses.
		ifoutBroadcastPkts	The total number of packets that higher level protocols requested transmitted, and that were addressed to a broadcast address at this sublayer, including those discarded or not sent.
		ifLastChange	The value of sysUpTime at the time the interface entered its current operational state. If the current state was entered prior to the last reinitialization of the local network management subsystem, this object contains a value of zero.
	RmonEther Stats	etherStatsOctets	The total number of octets of data (including those in bad packets) received on the network (excluding framing bits but including FCS octets). Use this object as a reasonable estimate of Ethernet utilization. For greater precision, sample the etherStatsPkts and etherStatsOctets objects before and after a common interval.
		etherStatsPkts	The total number of packets (including bad packets, broadcast packets, and multicast packets) received.
		etherStatsBroadcastPkts	The total number of good packets received that are directed to the broadcast address. This number does not include multicast packets.

Category	Subcategory	Variable	Definition
		etherStatsMulticastPkts	The total number of good packets received that are directed to a multicast address. This number does not include packets directed to the broadcast address.
		etherStatsCRCAlignErrors	The total number of packets received that had a length (excluding framing bits, but including FCS octets) of 64 to 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).
		etherStatsUndersizePkts	The total number of packets received that are less than 64 octets long (excluding framing bits, but including FCS octets) and were otherwise well formed.
		etherStatsOversizePkts	The total number of packets received that are longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well formed.
		etherStatsFragments	The total number of packets received that are less than 64 octets in length (excluding framing bits but including FCS octets) and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).
			It is entirely normal for etherStatsFragments to increment because it counts both runts (which are normal occurrences due to collisions) and noise hits.
		etherStatsCollisions	The best estimate of the total number of collisions on this Ethernet segment.
	IP	ipInReceives.0	All incoming IP packets.

Category	Subcategory	Variable	Definition
		ipInAddrErrors.0	The number of bad IP destination addresses.
		ipForwDatagrams.0	IP packets forwarded.
		ipInUnknownProtos.0	Number of unsupported IP protocols.
		ipInDelivers.0	The number of IP In packets delivered.
		ipOutRequests.0	The total number of IP datagrams that local IP user protocols supplied to IP in request for transmission.
		ipOutNoRoutes.0	The number of IP datagrams discarded because no route was found to transmit to the destination.
		ipFragOKs.0	The number of IP datagrams successfully fragmented.
		ipFragCreates.0	The number of IP datagram fragments generated as a result of fragmentation.
		ipReasmReqds.0	The number of requests to reassemble fragments.
		ipReasmOKs.0	The number of fragments reassembled successfully.
	ICMP	IcmpInSrcQuenchs.0	The number of ICMP Source Quench messages received.
		icmpInRedirects.0	The number of ICMP redirect messages.
		icmplnEchos.0	The number of ICMP Echo requests messages received.
		icmpInEchosReps.0	The number of ICMP Echo reply messages received.
		icmpInTimeStamps.0	The number of ICMP timestamp request messages received.
		icmpInTimeStampsReps.0	The number of ICMP timestamp reply messages received.
		icmplnAddrMasks.0	The number of ICMP mask request messages reviewed.
		icmplnAddrMasksReps.0	The number of ICMP mask reply messages reviewed.

Category	Subcategory	Variable	Definition
		icmpInDestUnreachs.0	The number of ICMP destinations unreachable messages received.
		icmpInTimeExcds.0	The number of ICMP Time Exceeded messages received.
		icmpOutSrcQuenchs.0	The number of ICMP Source Quench messages sent.
		icmpOutRedirects.0	The number of ICMP redirect messages sent.
		icmpOutEchos.0	The number of ICMP Echo request messages sent.
		icmpOutEchosReps.0	The number of ICMP Echo reply messages sent.
		icmpOutTimeStamps.0	The number of ICMP Timestamp request messages sent.
		icmpOutTimeStampsReps.0	The number of ICMP Timestamp reply messages sent.
		icmpOutAddrMasks.0	The number of ICMP Address mask messages sent.
		icmpOutAddrMasksReps.0	The number of ICMP Address mask reply messages sent.
		icmpOutDestUnreachs.0	The number of ICMP destination unreachable messages sent.
		icmpOutTimeExcds.0	The number of ICMP time exceeded messages sent.
	Snmp	snmpInPkts.0	The total number of messages delivered to the SNMP entity from the transport service.
		snmpOutPkts.0	The total number of SNMP messages passed from the SNMP protocol entity to the transport service.
		snmpInBadVersions.0	The total number of SNMP messages delivered to the SNMP protocol entity that were intended for an unsupported SNMP version.
		snmpInBadCommunityUses.0	The total number of SNMP messages delivered to the SNMP protocol entity that represented an SNMP operation that was not allowed by the SNMP community named in the message.

Category	Subcategory	Variable	Definition
		snmpInTooBigs.0	The total number of SNMP PDUs delivered to the SNMP protocol entity and for which the value of the error-status field is tooBig.
		snmpInNoSuchNames.0	The total number of SNMP PDUs delivered to the SNMP protocol entity and for which the value of the error-status field is noSuchName.
		snmpInBadValues. 0	The total number of SNMP PDUs received that were generated by the SNMP protocol entity and for which the value of the error-status field is badValue.
		snmpInReadOnlys.0	The total number of valid SNMP PDUs delivered to the SNMP protocol entity and for which the value of the error-status field is readOnly. It is a protocol error to generate an SNMP PDU that contains the value readOnly in the error-status field; as such, this object is provided as a means of detecting incorrect implementations of the SNMP.
		snmpInGenErrs.0	The total number of SNMP PDUs delivered to the SNMP protocol entity and for which the value of the error-status field is genErr.
		snmpInTotalReqVars.0	The total number of MIB objects retrieved successfully by the SNMP protocol entity as the result of receiving valid SNMP Get-Request and Get-Next PDUs.
		snmpInTotalSetVars.0	The total number of MIB objects altered successfully by the SNMP protocol entity as the result of receiving valid SNMP Set-Request PDUs.
		snmpInGetRequests.0	The total number of SNMP Get- Request PDUs accepted and processed by the SNMP protocol entity.
		snmpInGetNexts.0	The total number of SNMP Get- Next PDUs accepted and

Category	Subcategory	Variable	Definition
			processed by the SNMP protocol entity.
		snmpInSetRequests.0	The total number of SNMP Set- Request PDUs accepted and processed by the SNMP protocol entity.
		snmpInGetResponses.0	The total number of SNMP Get- Response PDUs accepted and processed by the SNMP protocol entity.
		snmpInTraps.0	The total number of SNMP Trap PDUs accepted and processed by the SNMP protocol entity.
		snmpOutTooBigs.0	The total number of SNMP PDUs generated by the SNMP protocol entity and for which the value of the error-status field is tooBig.
		snmpOutNoSuchNames.0	The total number of SNMP PDUs generated by the SNMP protocol entity and for which the value of the error-status field is noSuchName.
		snmpOutBadValues.0	The total number of SNMP PDUs sent that were generated by the SNMP protocol entity and for which the value of the error-status field is badValue.
		snmpOutGenErrs.0	The total number of SNMP PDUs generated by the SNMP protocol entity and for which the value of the error-status field is genErr.
		snmpOutGetRequests.0	The total number of SNMP Get- Request PDUs generated by the SNMP protocol entity.
		snmpOutGetNexts.0	The total number of SNMP Get- Next PDUs generated by the SNMP protocol entity.
		snmpOutSetRequests.0	The total number of SNMP Set- Request PDUs generated by the SNMP protocol entity.
		snmpOutGetResponses.0	The total number of SNMP Get- Response PDUs generated by the SNMP protocol entity.

Category	Subcategory	Variable	Definition
		snmpOutTraps.0	The total number of SNMP Trap PDUs generated by the SNMP protocol entity.
	Bridge	rcStgTimeSinceTopologyChange	The time (in hundredths of a second) since the last topology change was detected by the bridge entity.
		rcStgTopChanges	The total number of topology changes detected by this bridge since the management entity was last reset or initialized.
		rcStgMaxAge	The maximum age of Spanning Tree Protocol information learned from the network on any port before it is discarded, in hundredths of a second. This is the actual value that this bridge is currently using.
		rcStgPortForwardTransitions	The number of times this port transitioned from the Learning state to the Forwarding state.
		rcStgPortInConfigBpdus	The number of Config BPDUs received by this port.
		rcStgPortInTcnBpdus	The number of Topology Change Notification BPDUs received by this port.
		rcStgPortOutConfigBpdus	The number of Config BPDUs transmitted by this port.
		rcStgPortOutTcnBpdus	The number of Topology Change Notification BPDUs transmitted by this port.
		dot1dTpPortInFrames	The number of frames received by this port from its segment. A frame received on the interface corresponding to this port is counted by this object only if it is for a protocol being processed by the local bridging function, including bridge management frames.
		dot1dTpPortOutFrames	The number of frames transmitted by this port to its segment. A frame transmitted on the interface corresponding to this port is

Category	Subcategory	Variable	Definition
			counted by this object if and only if it is for a protocol processed by the local bridging function, including bridge management frames.
		dot1dTpLearnedEntryDiscards.0	The total number of Forwarding Database entries learned but discarded due to a lack of space to store them in the Forwarding Database. If this counter increases, it indicates that the forwarding database is regularly becoming full (a condition that has negative performance effects on the subnetwork). If this counter has a significant value but does not increase, it indicates that the problem occurred but is not persistent.
	Utilization	rcSysBufferUtil.0	Buffer utilization as a percentage of the total amount of buffer space in the system. A high value indicates congestion.
		rcSysNVRamUsed.0	Nonvolatile RAM (NVRAM) in use in kilobytes.
		rcSysLastChange.0	Last management-initiated configuration change since sysUpTime.
		rcSysLastVlanChange.0	Last management-initiated VLAN configuration change since sysUpTime.
	MLT	rcStatMltlfExtnlfInMulticastPkts	The total number of multicast packets delivered to this MLT interface.
		rcStatMltlfExtnlflnBroadcastPkts	The total number of broadcast packets delivered to this MLT Interface.
		rcStatMltIfExtnIfOutMulticastPkts	The total number of MLT interface multicast packets delivered to this MLT interface.
		rcStatMltlfExtnlfOutBroadcastPkts	The total number of MLT interface broadcast packets delivered to this MLT interface.

Category	Subcategory	Variable	Definition
		rcStatMltlfExtnlfHCInOctets	The total number of octets received on this MLT interface including framing characters detected by the high-count (64-bit) register.
		rcStatMltIfExtnIfHCInUcastPkts	The number of packets delivered by this MLT interface to a higher MLT that were not addressed to a multicast or broadcast address as detected by the high-count (64-bit) register.
		rcStatMltlfExtnlfHCInMulticastPkt	The total number of multicast packets delivered to this MLT interface detected by the high-count (64-bit) register.
		rcStatMltlfExtnlfHCInBroadcastPkt	The total number of broadcast packets delivered to this MLT interface detected by the high-count (64-bit) register.
		rcStatMltIfExtnIfHCOutOctets	The total number of octets transmitted from the MLT interface, including framing characters.
		rcStatMltIfExtnIfHCOutUcastPkts	The number of packets transmitted by this MLT interface to a higher MLT that were not addressed to a multicast or broadcast address as detected by the high-count (64-bit) register.
		rcStatMltlfExtnlfHCOutMulticast	The total number of packets that higher-level protocols requested be transmitted, and that were addressed to a multicast address at this sublayer, including those that were discarded or not sent registered by the high-count (64-bit) register.
		rcStatMltlfExtnlfHCOutBroadcast	The total number of packets that higher-level protocols requested be transmitted, and that were addressed to a broadcast address at this sublayer, including those that were discarded or not sent registered by the high-count (64-bit) register.



Note:

In addition to these elements that are offered in a graphical way by EDM, you can manually set any valid OID in the variable field to be monitored by an alarm. For these cases, the name of the variable cannot be translated automatically in OID, the exact OID must be set as a sequence of numbers.

Chapter 9: sFlow

sFlow fundamentals

sFlow monitors traffic in a data network. Use sFlow to monitor routers and switches in the network, and capture traffic statistics about those devices. sFlow uses sampling to provide scalability for network-wide monitoring, and therefore applies to high speed networks. The switch sends the sampled data as a User Datagram Protocol (UDP) packet to the specified host and port.

sFlow consists of the following:

- sFlow agent—Performs two types of sampling:
 - Flow samples: Flow sampling randomly samples an average of 1 out of n packets for each operation.
 - Counter samples: Counter sampling periodically polls and exports counters for a configured interface. This type of sampling uses a counter to determine if the packet is sampled. Each packet that an interface receives, and that a filter does not drop, reduces the counter by one. After the counter reaches zero, the sFlow agent takes a sample.

Note:

Only generic interface counters and Ethernet interface counters are supported.

- sFlow datagrams—Supports both flow samples and counter samples. Datagrams can be sent from the front panel port or an out-of-band (OOB) port. Each datagram provides information about the sFlow version, the originating IP address of the device, a sequence number, the number of samples it contains, and one or more flow and/or counter samples.
- sFlow collector—Located on a central server and runs software that analyzes and reports on network traffic. Two sFlow collectors can be configured to be reachable over a management network or Shortest Path Bridging (SPB). The preferred network is SPB.

Limitations

- Application-specific integrated circuit (ASIC) or Software Development Kit (SDK) limitation—To
 avoid wobbling, the recommended counter interval for sFlow is 20 seconds. Minor wobbling
 can still occur even after configuring the recommended counter interval due to the interaction
 between the sFlow agent counter export schedule and the frequency with which the switch
 ASIC SDK copies and caches counters from the ASIC.
- sFlow supports a maximum of two collectors.
- UDP datagram size and the collector buffer are restricted to 1400 bytes. sFlow sends
 datagrams to the collector when the buffer reaches the 1400-byte capacity or after a timeout of
 one second is triggered. The collector buffer size cannot be modified.

- The switch supports IPv4 collector IP addresses.
- VLAN counters/statistics are not supported.
- sFlow can be enabled only on the front panel ports.
- You cannot configure the sampling limit. The sampling limit applies system-wide rather than on a per port basis. Sampling rates differ depending on the hardware platform so any sampled packets beyond the limit are dropped. For more information about feature support, see *Release Notes*.
- The switch does not support egress sampling. The switch supports only ingress sampling.
- The switch does not support enabling sFlow on a link aggregation group (LAG) interface. However, you can enable sFlow on the member interfaces of a LAG.
- The collector can be hosted on the network management virtual routing and forward (VRF) and global routing table (GRT) in only a Layer 2 VSN or IP shortcut.

Configuration considerations

- If the sFlow collector has two network interface controller (NIC) cards, you can add a route to the agent-ip address for the NIC card on which the sFlow datagrams are received to avoid dropped sFlow datagrams that are a result of reverse path checks.
- First preference is always given to either the GRT or management VRF to where the sFlow agent IP address is configured. For example, if you configure the sFlow agent IP address as part of GRT, the GRT route to the collector is given preference over the management VRF. If the management network hosts a collector with a collector IP address that is reachable over SPB as a result of redistributing direct routes on a peer Backbone Edge Bridge (BEB) or in situations where the GRT has a default route (0.0.0.0) and the collector route is in the local management VRF, first preference is given to the VRF where you have configured the sFlow agent IP address.

Example

After you configure the sFlow agent on the network device that you want to monitor, the system collects flow samples or counter samples, and exports these traffic statistics as sFlow datagrams to the sFlow collector on a server or appliance.

For example, after the buffers reach capacity or a timeout is triggered, an sFlow datagram, which is a (UDP) packet, sends the measurement information to the sFlow collector buffers. The UDP payload contains the sFlow datagram.

The following figure shows the sFlow agent on various routers and switches with sFlow datagrams being sent to the sFlow collector.

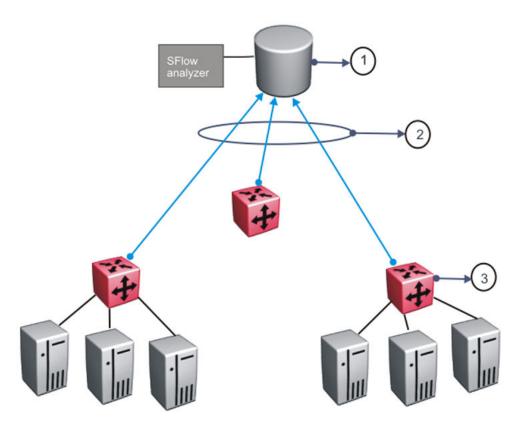


Table 9: sFlow legend

Number	Description
1	sFlow collector
2	sFlow datagrams
3	sFlow agents

As a general rule, drop action occurs after sampling completes. However, in situations related to Layer 1 errors such as, MTU exceeded packets, the drop action occurs before sampling begins. For errors such as, frame too long, packets are dropped due to the size of the frame being greater than the interface MTU. In this situation, the packets are dropped before sampling begins so only counter polling occurs. To enable trace, use line-card 1 trace level 232 <0-4>.

! Important:

The defined sampling rate, an average of 1 out of n packets/operations does not provide a 100% accurate result, but it does provide a result with quantifiable accuracy.

sFlow configuration using CLI

Use sFlow to capture traffic statistics to monitor traffic in a data network. This section provides procedures to view and configure sFlow using CLI.

Configuring the agent-ip and enabling sFlow globally

Configure the sFlow agent IPv4 address, and then enable sFlow before the system can monitor and capture traffic statistics to send to an sFlow collector. By default, sFlow is globally disabled.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Enable the agent IPv4 address:

```
sflow agent-ip {A.B.C.D}
```

3. Enable sFlow:

```
sflow enable
```

4. Verify the global configuration:

```
show sflow
```

Example

Globally enable sFlow, and then verify the configuration.

Next steps

After you configure the agent-ip and globally enable sFlow, proceed to configuring the sFlow collector.

Variable definitions

Use the data in the following table to use the sflow agent-ip command.

Variable	Definition
{A.B.C.D.}	Specifies the agent-ip address (IPv4).

Configuring an sFlow collector

Configure an sFlow collector to determine the device to which the sFlow agent sends sFlow datagrams. You can configure up to two collectors for each interface slot in the chassis.

Before you begin

· You must globally enable sFlow.

About this task

The sFlow datagrams that the agent sends to the collector are not encrypted. Use a VLAN to create a secure measurement network to route sFlow datagrams.

To further protect the sFlow collector, configure it to accept only sFlow datagrams, or to check sequence numbers and verify source addresses.

Procedure

Enter Global Configuration mode:

```
enable
configure terminal
```

2. Configure the collector information:

```
sflow collector <1-2> address {A.B.C.D} [Owner WORD<1-20>] [port <1-65535>] [timeout <1-65535>]
```

3. Verify the collector configuration:

```
show sflow collector <1-2>
```

Example

Configure collector ID, and then verify the configuration.

```
Switch: 1>enable
Switch: 1#configure terminal
Enter configuration commands, one per line. End with \mathtt{CNTL}/\mathtt{Z}.
Switch:1(config) #sflow collector 1 address 192.0.2.26 owner flow1 port 6343 timeout 650
Switch:1(config) #sflow collector 2 address 192.0.2.27 owner flow2 port 6343 timeout 650
Switch:1(config) #show sflow collector
                                           _____
_____
                  sFlow Collector Configuration Info
Collector-IP Port Timeout(secs)
                    192.0.2.26 6343
192.0.2.27 6343
   sflow1
                                              497
                                              531
All 2 out of 2 Total Num of sflow collector entries displayed
```

October 2017

Variable definitions

Use the data in the following table to use the sflow collector command.

Variable	Value
collector <1-2>	Specifies the id to export sFlow datagrams to the collector id.
	Use the no operator to remove an sflow collector id and a collector name. no sflow collector <1-2> owner WORD<1-20>
	To configure the default value, enter default sflow collector <1-2>
address {A.B.C.D.}	Specifies the collector IP address.
	Use the no operator to remove an sflow collector address. no sflow collector <1-2> address {A.B.C.D}
owner WORD<1-20>	Specifies the sFlow collector name.
port <1-65535>	Specifies the destination UDP port. The default port is 6343.
	To configure the default value, enter default sflow collector <1-2> port
timeout <1-65535>	Specifies the time remaining (in seconds) before the collector is released.
	The default timeout is 0, which means the timeout is not used and the collector sends data forever.
	To configure the default value, enter default sflow collector <1-2> timeout

Configuring the packet sampling rate

Configure the packet sampling rate at port level to determine how many packets the system counts before it takes a sample.

Before you begin

· You must globally enable sFlow.

About this task

If you configure a conservative sampling rate to prevent overloading the sFlow agent, the result will reflect high values that do not reflect typical traffic levels.

Procedure

1. Enter GigabitEthernet Interface Configuration mode:

enable

```
configure terminal
interface GigabitEthernet {slot/port[/sub-port][-slot/port[/sub-port]][,...]}
```

Note:

If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

2. Configure the collector id:

```
sflow collector <1-2>
```

3. Configure the sampling rate:

```
sflow sampling-rate <8192-1000000>
```

4. Verify the configuration:

```
show sflow interface {slot/port[/sub-port] [-slot/port[/sub-port]]
[,...]}
```

Example

Configure sampling rates for ports 2/1, 2/2, 2/3, and 2/4.

```
Switch:1(config-if) #interface gigabitethernet 2/1,2/2
Switch:1(config-if) #sflow collector 1
Switch:1(config-if) #sflow sampling-rate 10000
Switch:1(config-if) #interface gigabitethernet 2/3
Switch:1(config-if) #sflow collector 2
Switch:1(config-if) #sflow sampling-rate 8192
Switch:1(config-if)#interface gigabitethernet 2/4
Switch:1(config-if) #sflow collector 2
Switch:1(config-if) #sflow sampling-rate 12001
Switch:1(config-if) #show sflow interface enabled
______
                     sFlow Port Configuration Info
______
Port Packet-Sample-Rate Max-Header-Size Counter-interval Collector-list
                                   (in secs)
______

      2/1
      10000
      128

      2/2
      10000
      128

      2/3
      8192
      128

      2/4
      12001
      128

                            0
                                                       1
                              0 0
                       128
All 4 out of 4 Total Num of sflow port entries displayed
```

Variable definitions

Use the data in the following table to use the sflow sampling-rate and show sflow interface commands.

Variable	Value	
<8192–1000000>	Configures the packet sampling rate on a port.	

Variable	Value
	The default value is 0 (disabled). To configure the default value, enter default sflow sampling-rate.
{slot/port[/sub-port] [-slot/port[/sub-port]] [,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Configuring sFlow maximum header size

Configure the maximum header size on a single port or multiple ports.

Before you begin

· You must globally enable sFlow.

Procedure

1. Enter GigabitEthernet Interface Configuration mode:

```
enable
configure terminal
interface GigabitEthernet {slot/port[/sub-port][-slot/port[/sub-port]][,...]}
```

Note:

If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

2. Configure the maximum-header size:

```
sflow max-header-size <64-256>
```

3. Verify the configuration:

```
show sflow interface {slot/port[/sub-port] [-slot/port[/sub-port]]
[,...]}
```

Example

For ports 1/1 to 1/10, configure the maximum header size, and then verify the configuration.

Port	Packet-Sample-Rate	Max-Header-Size	Counter-interval (in secs)	Collector-list
1/1	0	255	525	1,2
1/2 1/3	0 0	255 255	525 525	1,2
1/4	0	255 255	525 525	1,2
1/6	0	255 255	525	1,2
1/8	0	255	525 525	1,2
1/9 1/10	0	255 255	525 525	1,2 1,2

Variable definitions

Use the data in the following table to use the max-header-size command.

Variable	Value
<64–256>	Identifies the maximum number of bytes to be copied from the sampled packet.
	Default 128 bytes.

Configuring the counter sampling interval

Configure the counter sampling interval values at port level to determine how often the sFlow agent polls and exports counters for a configured interface.

Before you begin

· You must globally enable sFlow.

Procedure

1. Enter GigabitEthernet Interface Configuration mode:

```
enable
configure terminal
interface GigabitEthernet {slot/port[/sub-port][-slot/port[/sub-port]][,...]}
```

Note:

If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

2. Configure the counter sampling interval:

```
sflow counter-interval <1-3600>
```

3. Verify the configuration:

show sflow interface $\{slot/port[/sub-port] [-slot/port[/sub-port]] [,...]\}$

Example

Verify all slots use the default polling-interval configuration.

sFlow Port Configuration Info				
Port	Packet-Sample-Rate	Max-Header-Size	Counter-interval (in secs)	Collector-list
1/1	0	128	525	1,2
1/2	0	128	525	1,2
1/3	0	128	525	1,2
1/4	0	128	525	1,2
1/5	0	128	525	1,2
1/6	0	128	525	1,2
1/7	0	128	525	1,2
1/8	0	128	525	1,2
1/9	0	128	525	1,2
1/10	0	128	525	1,2

Variable definitions

Use the data in the following table to use the sflow counter-interval and show sflow interface commands.

Variable	Value
<1–3600>	Specifies the polling interval for a slot.
	Default value is 0 (disabled).
{slot/port[/sub-port] [-slot/port[/sub-port]] [,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Viewing sFlow statistics

Display statistics for sFlow datagrams.

Before you begin

• You must globally enable sFlow.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. View sFlow statistics:

```
show sflow statistics [collector <1-2>]
```

Example

Clearing sFlow statistics

Use this procedure to clear the statistics for each collector.

Before you begin

· You must globally enable sFlow.

Procedure

1. Enter Privileged EXEC mode:

enable

2. Clear sFlow statistics:

```
clear sflow statistics [collector <1-2>]
```

3. Verify the collector information:

```
show sflow statistics [collector <1-2>]
```

Example

Clear the statistics for collector ID 1.

sFlow configuration using EDM

Use sFlow to capture traffic statistics to monitor traffic in a data network. This section provides procedures to view and configure sFlow using EDM.

Enabling sFlow globally

Configure the sFlow agent IP address before the system can monitor and capture traffic statistics to send to an sFlow collector.

Important:

The switch does not check the IP address so ensure the **AgentAddress** field contains the IP address of an interface that exists in the local management VRF or global routing table (GRT).

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability** folders.
- 2. Click Sflow.
- 3. Click the Globals tab.
- 4. Select the **AdminEnable** check box.
- 5. In the **AgentAddress** field, enter the agent IPv4 address.
- 6. Click Apply.

Globals field descriptions

Use the data in the following table to use the Globals tab.

Name	Description
AdminEnable	Shows whether sFlow is enabled. By default, the check box is not enabled.
AgentAddressType	Specifies the collector IP address type. Only IPv4 collector addresses are supported.
AgentAddress	Specifies the agent IP address of an interface that exists in the local management VRF or GRT.

Configuring an sFlow collector

Configure an sFlow collector to determine the device to which the sFlow agent sends sFlow datagrams. You can configure up to two collectors for each interface slot in the chassis.

Before you begin

· You must globally enable sFlow.

About this task



You can configure the Collector tab to select only the columns you are interested in seeing. By default, the AddressType option does not appear. To make the AddressType column visible, click the down arrow on one of the menu headings, navigate to Columns, and select the AddressType check box.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability** folders.
- 2. Click Sflow.
- 3. Click the Collector tab.
- 4. For Collector 1 and Collector 2, configure the fields in the corresponding row.
- 5. Click Apply.

sFlow collector field descriptions

Use the data in the following table to use the Collector tab.

Name	Description
Index	Shows collector 1 and collector 2. The switch exports sFlow datagrams to the collector.
Owner	Specifies the sFlow collector name. The string length is 1 to 20 characters.
Timeout	Specifies the time remaining (in seconds) before the collector is released and stops sampling.
	The default timeout is 0, which means the timeout is not used and the collector sends data forever.
Address	Specifies the collector IP address. If the default address is set to 0.0.0.0, sFlow datagrams are not sent.
Port	Specifies the destination UDP port. The default port is 6343.

Configuring the packet samples and counter samples

Configure the packet sampling rate to determine how many packets the system counts before it takes a sample and configure the counter sampling interval to determine how often the sFlow agent polls and exports counters for a configured interface. You can also configure the maximum header size on a single port or multiple ports.

Before you begin

· You must globally enable sFlow.

About this task



You can configure the Interfaces tab to select only the columns you are interested in seeing. By default, the Instances option does not appear. To make the Instances column visible, click the down arrow on one of the menu headings, navigate to Columns, and select the Instances check box.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability** folders.
- 2. Click Sflow.
- 3. Click the Interfaces tab.
- 4. In the **DataSource** column, navigate to the slot and port where you want to configure sFlow, and configure the following:
 - a. PacketSamplingRate—Double-click the field, and enter a sampling rate value. Range 8192 to 1000000.
 - b. MaximumHeaderSize—Double-click the field, and enter a maximum header size value. Range 64 to 256.
 - c. Interval—Double-click the field, and enter the counter sampling interval value in seconds. Range 1 to 3600.
- 5. Click Apply.

Interfaces field descriptions

Use the data in the following table to use the Interfaces tab.

Name	Description		
DataSource	Shows the slot and port for which traffic statistics are collected.		
Instance	Shows the number of sFlow samplers associated with a specific datasource. The value for each sFlow sampler instance can range from 1–65535.		
	Note:		
	You must select this field for it to display on the Interfaces tab.		
Collectors	Shows the collectors that have been configured for the sFlow agent to send sFlow datagrams. Two collectors are supported.		
PacketSamplingRate	Specifies the packet sampling rate to determine how many packets the system counts before it take a sample.		
	Range 8192–1000000. Default 0.		
MaximumHeaderSize	Specifies the maximum header size on a single port or multiple ports.		
	Range 64–256 bytes. Default 128 bytes		

Name	Description
Interval	Specifies the counter sampling interval to determine how often the sFlow agent polls and exports counters for a configured interface.
	Range 1–3600 seconds. Default 0.

Enabling sFlow statistics

Use the following procedure to enable (true) sFlow statistics. Statistics for sFlow is disabled (false), by default.

About this task



Tip:

You can configure the Stats tab to select only the columns you are interested in seeing. All the options appear, by default. To hide a column, click the down arrow on one of the menu headings, navigate to Columns, and select the check box for the column you want to hide.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability** folders.
- 2. Click sFlow.
- 3. Click the Stats tab.
- 4. In the ClearStats column, double-click the field, and select true or false from the list.
- 5. Click Apply.

Statistics field descriptions

Use the data in the following table to use the Statistics tab.

Name	Description	
Index	Shows sFlow collector ID 1 and 2	
DatagramCount	Shows the number of datagrams that have been sent to the collector.	
ClearStats	Shows whether the sFlow statistics are enabled (true) or disabled (false). The default is false.	

Chapter 10: Statistics

This chapter provides the procedures for using statistics to help monitor the performance of the switch using Enterprise Device Manager (EDM) and command line interface (CLI).

Viewing statistics using CLI

This section contains procedures to view statistics in the CLI.

Viewing TCP statistics

View TCP statistics to manage network performance.

Procedure

View TCP statistics:

show ip tcp statistics

Example

```
Switch: 1#show ip tcp statistics
show ip tcp global statistics:
ActiveOpens: 0
PassiveOpens: 37
**+cmptFails: 0
AttemptFails:
EstabResets:
                    34
CurrEstab:
                     6726
InSegs:
OutSegs:
                      7267
RetransSegs:
                      10
InErrs:
                      0
OutRsts:
```

Job aid

The following table describes the output for the show ip tcp statistics command.

Table 10: show ip tcp statistics command output

Field	Description
ActiveOpens	The count of transitions by TCP connections to the SYN-SENT state from the CLOSED state.
PassiveOpens	The count of transitions by TCP connections to the SYN-RCVD state from the LISTEN state.
AttemptFails	The count of transitions by TCP connections to the CLOSED state from either the SYN-SENT state or the SYN-RCVD state, plus the count of transitions to the LISTEN state from the SYN-RCVD state.
EstabResets	The count of transitions by TCP connections to the CLOSED state from the ESTABLISHED or CLOSE-WAIT state.
CurrEstab	The count of TCP connections for which the current state is either ESTABLISHED or CLOSE-WAIT.
InSegs	The total count of segments received, including those received in error. This count includes segments received on currently established connections.
OutSegs	The total number of segments sent, including those on current connections but excluding those containing only retransmitted octets.
RetransSegs	The total count of TCP segments transmitted containing one or more previously transmitted octets.
InErrs	The count of segments received in error.
OutRsts	The count of TCP segments sent containing the RST flag.

Viewing port routing statistics

About this task

View port routing statistics to manage network performance.



This command is not available on all hardware platforms.

Procedure

View port routing statistics:

```
show routing statistics interface [gigabitethernet] [{slot/port[-slot/port][,...]}]
```

Example

Switch:1#show routing statistics interface gigabitethernet 1/7-1/9

======			Port Stats	Routing	
PORT NUM	IN_FRAME UNICAST	IN_FRAME MULTICAST	IN DISCARD	OUT_FRAME UNICAST	OUT_FRAME MULTICAST
1/7 1/8 1/9	1386 1302 0	0 0 0 0	0 0 0	1344 1344 0	0 0 0

Variable definitions

Use the data in the following table to use the **show routing statistics interface** command.

Variable	Value
gigabitethernet	Specifies the interface type.
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Job aid

The following table describes the output for the **show routing statistics interface** command.

Table 11: show routing statistics interface field descriptions

Parameter	Description
PORT NUM	Indicates the port number.
IN_FRAME UNICAST	The count of inbound unicast frames.
IN_FRAME MULTICAST	The count of inbound multicast frames.
IN DISCARD	The count of inbound discarded frames.
OUT_FRAME UNICAST	The count of outbound unicast frames.
OUT_FRAME MULTICAST	The count of outbound multicast frames.

Displaying bridging statistics for specific ports

About this task

Display individual bridging statistics for specific ports to manage network performance.

Note:

This command is not available on all hardware platforms.

Procedure

1. Enter Privileged EXEC mode:

enable

2. View bridging statistics for a specific port:

show interfaces GigabitEthernet statistics bridging [{slot/port[slot/port][,...]}}

Example

Switch: 1#show interfaces gigabitEthernet statistics bridging

Port Stats Bridge							
PORT NUM	IN_FRAME UNICAST	IN_FRAME MULTICAST	_	_	IN_FRAME xSTP BPDU	_	IN_DISCARD
1/2 1/3 1/4 1/5 1/6 1/7 1/8 1/9 1/10 1/11 1/12 1/13 1/14 1/15	179325 187951 0 0 0 0 394 4689 4369 0 0 0 179325 187864 0	0 26078 0 0 0 0 0 0 3206 0 0 0		119310 689486 0 0 0 948942 863403 958752 0 0 0 42040 50437 0	179325 179324 0 0 0 360 360 360 0 0 0 179325 179324 0	0 0 0 0 0 0 0 0 0 0 0	0 25617 0 0 0 0 0 3995 0 0 0

Variable definitions

Use the data in the following table to use the **show interfaces GigabitEthernet** statistics bridging command.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Job aid

The following table describes parameters for the show interfaces GigabitEthernet statistics bridging command.

Table 12: show interfaces gigabitEthernet statistic bridging field descriptions

Parameter	Description
PORT NUMB	Port index of the statistics table.
IN_FRAME UNICAST	The count of inbound Unicast frames.
IN_FRAME MULTICAST	The count of inbound Multicast frames.
IN_FRAME BROADCAST	The count of inbound Broadcast frames.
OUT_FRAME	The count of outbound frames.

Displaying DHCP-relay statistics for specific ports

Display individual DHCP-relay statistics for specific ports to manage network performance.



Slot and port information can differ depending on hardware platform.

Procedure

1. Enter Privileged EXEC mode:

enable

2. View DHCP-relay statistics for a specific port or VRF.

```
show interfaces GigabitEthernet statistics dhcp-relay [vrf WORD<1-16>] [vrfids WORD<0-255>]|{slot/port[/sub-port][-slot/port[/sub-port]][,...]}}
```

Example

View DHCP-relay statistics:

```
Switch:1>enable
Switch:1#show interfaces gigabitethernet statistics dhcp-relay

Port Stats Dhcp

PORT_NUM VRF NAME NUMREQUEST NUMREPLY

1/12 GlobalRouter 0 2
1/13 GlobalRouter 3 2
2/3 GlobalRouter 0 2
```

Variable definitions

Use the data in the following table to use the **show interfaces GigabitEthernet** statistics dhcp-relay command.

Variable	Value
vrf WORD<0-16>	Specifies a VRF instance by VRF name.
vrfids WORD<0-255>	Specifies the ID of the VRF.
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (1/1). Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Job aid

The following table describes parameters for the show interfaces GigabitEthernet statistics dhcp-relay command output.

Table 13: show interfaces gigabitethernet statistics dhcp-relay field descriptions

Variable	Value
PORT_NUM	Indicates the port number.
VRF NAME	Identifies the VRF
NUMREQUEST	Indicates the total number of DHCP requests on this interface
NUMREPLY	Indicates the total number of DHCP replies on this interface.

Displaying DHCP-relay statistics for all interfaces

About this task

Display DHCP-relay statistics for all interfaces to manage network performance.



Slot and port information can differ depending on hardware platform.

Procedure

1. Show the number of requests and replies for each interface:

show ip dhcp-relay counters [vrf WORD<0-16>] [vrfids WORD<0-512>]

2. Show counters for Option 82:

show ip dhcp-relay counters option82 [vrf WORD < 0-16 >] [vrfids WORD < 0-512 >]

Example

Switch:1>show ip dhcp-relay counters option82								
			DHCP Cour	nters	Option82	2 - GlobalRouter		
INTERFACE			CIRCUIT ID			REMOTE ID	ADD REMOTE	REMOVE REMOTE
Port 1/12 Vlan40					0 0			0 0

Variable definitions

Use the data in the following table to use the show ip dhcp-relay counters command.

Variable	Value
vrf WORD<0-16>	Specifies a VRF instance by the VRF name.
vrfids WORD<0-512>	Specifies the ID of the VRF.

Job aid

The following table explains the output from the show ip dhcp-relay counters option82 command.

Table 14: show ip dhcp-relay counters option82 command

Heading	Description
INTERFACE	Shows the VLAN or port associated with the respective relay interface.
IP ADDR	Shows the IP address of the respective relay interface.
FOUND OPT82	Shows the number of packets received that included option82. This number increases every time a valid DHCP packet that contains option82 arrives on the respective relay interface.
DROP PKT	Shows the number of packets the interface did not forward.
	This number increases every time a DHCP packet that has option82 arrives on a relay interface but is not forwarded on the interface towards the server; the path towards the relay can include additional DHCP relays.
	To determine the cause of the drop, you must enable trace on level 170.

Heading	Description
CIRC ID	Show the circuit ID associated with the respective interface.
ADD CIRC	Shows on how many packets the circuit ID was inserted for that interface.
	This number increases every time the relay adds a circuit id sub-option in a generated option82 packet to send on an interface towards the server.
	If you expect this value to increase but it does not, and the interface does not drop a packet, it is possible the packet does not have enough space to insert the option. You must enable trace on level 170 to determine the cause.
DEL CIRC	Shows on how many packets the circuit id was removed for that interface.
	This number increases every time the relay removes a circuit id sub-option from an option82 packet received on a interface towards the server.
REMOTE ID	Shows the remote ID associated with the respective interface. The value is the MAC address of the interface.
ADD REMID	Shows on how many packets the remote ID was inserted for that interface.
	This number increases every time the relay adds a remote id sub-option in a generated option82 packet to send through an interface towards a server.
	If you expect this value to increase but it does not, and the interface does not drop a packet, it is possible the packet does not have enough space to insert the option. You must enable trace on level 170 to determine the cause.
DEL REMID	Shows on how many packets the remote ID was removed for that interface.
	This number increases every time the relay removes a remote id sub-option from an option82 packet received on an interface towards a server.

Displaying LACP statistics for specific ports

Display individual LACP statistics for specific ports to manage network performance.



Slot and port information can differ depending on hardware platform.

Procedure

1. Enter Privileged EXEC mode:

enable

2. View statistics for specific ports:

show interfaces GigabitEthernet statistics lacp [{slot/port[/subport][-slot/port[/sub-port]][,...]}]

Example

View LACP statistics:

Switch:1>enable Switch:1#show interfaces gigabitethernet statistics lacp								
				Port St	tats Lacp			
PORT NUM		RX LACPDU	TX MARKERPDU	RX MARKERPDU	TX MARKERRESPPDU	RX MARKERRESPPDU	RX UNKNOWN	RX ILLEGAL
1/39	0	0	0	0	0	0	0	0
2/37	0	0	0	0	0	0	0	0
2/38	0	0	0	0	0	0	0	0

Variable definitions

Use the data in the following table to use the **show interfaces GigabitEthernet** statistics lacp command.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Job aid

The following table describes parameters for the show interfaces GigabitEthernet statistics lacp command.

Table 15: show interfaces GigabitEthernet statistics lacp field descriptions

Parameter	Description
PORT_NUM	Indicates the port number.
TX LACPDU	The count of transmitted LACP data units.
RX LACPDU	The count of received LACP data units.

Parameter	Description
TX MARKERPDU	The count of transmitted marker protocol data units.
RX MARKERPDU	The count of received marker protocol data units.
TX MARKERRESPPDU	The count of transmitted marker protocol response data units.
RX MARKERRESPPDU	The count of received marker protocol response data units.
RX UNKNOWN	The count of received unknown frames.
RX ILLEGAL	The count of received illegal frames.

Displaying VLACP statistics for specific ports

Display VLACP statistics for specific ports to manage network performance.



Slot and port information can differ depending on hardware platform.

About this task

You can enable sequence numbers for each VLACPDU to assist in monitoring performance. The switch counts mismatched PDU sequence numbers to determine packet loss information. By default, sequence numbers are enabled.

You can use the show commands from Privileged EXEC mode but must enter Global Configuration mode to enable or disable the sequence numbers.

Procedure

1. Enter Global Configuration mode:

```
enable
configure terminal
```

2. Confirm sequence numbers are enabled:

```
show vlacp
```

3. (Optional) Enable sequence numbers for VLACPDUs:

```
vlacp sequence-num
```

4. View VLACP statistics:

```
show interfaces gigabitEthernet statistics vlacp [{slot/port[/sub-
port][-slot/port[/sub-port]][,...]} ]
```

5. (Optional) View VLACP statistics history:

```
show interfaces gigabitEthernet statistics vlacp history [{slot/port[/sub-port]][,...]} ]
```

6. (Optional) Clear VLACP statistics:

```
clear vlacp stats [port {slot/port[/sub-port][-slot/port[/sub-port]]
[,...]}]
```

7. (Optional) Disable sequence numbers for VLACPDUs:

```
no vlacp sequence-num
```

Example

Determine if sequence numbers are enabled, and then view port statistics. Port numbering may differ depending on your product and configuration.

Variable definitions

Use the data in the following table to use the commands in this procedure.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Job aid

The following table describes fields in the output for the show interfaces gigabitEthernet statistics vlacp command.

Field	Description
PORT NUM	Shows the slot and port number.

Field	Description
TX VLACPDU	Shows the number of VLACPDUs transmitted on the port.
RX VLACPDU	Shows the number of valid VLACPDUs received on the port.
SEQNUM MISMATCH	Shows the number of mismatched VLACPDUs in terms of received sequence numbers on the port.

Displaying RMON statistics for specific ports

Display individual RMON statistics for specific ports to manage network performance.



Slot and port information can differ depending on hardware platform.

Procedure

1. Enter Privileged EXEC mode:

enable

2. View statistics for specific ports:

show interfaces GigabitEthernet statistics rmon {slot/port[/subport][-slot/port[/sub-port]][,...]}

Example

View RMON statistics:

Switch:1>enable Switch:1#show interfaces gigabitEthernet statistics rmon 1/13									
Port Stats Rmon									
PORT NUM	OCTETS	PKTS	MULTI CAST	BROAD CAST	CRC ALLIGN	UNDER SIZE	OVER SIZE	FRAG MENT	COLLI SION
1/13	1943	21	8	13	0	0	0	0	0

Variable definitions

Use the data in the following table to use the **show interfaces GigabitEthernet** statistics rmon command.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is

Variable	Value
	channelized, you must also specify the sub-port in the format slot/port/sub-port.

Job aid

The following table describes parameters for the $\verb"show"$ interfaces $\verb"GigabitEthernet"$ statistics $\verb"rmon"$ command output.

Table 16: show interfaces GigabitEthernet statistics rmon field descriptions

Parameter	Description
PORT NUM	Indicates the port number.
OCTETS	The total number of octets of data (including those in bad packets) received on the network (excluding framing bits but including FCS octets).
PKTS	The total number of packets (including bad packets, broadcast packets, and multicast packets) received.
MULTICAST	The total number of packets received that were directed to a multicast address. This number does not include packets directed to the broadcast address.
BROADCAST	The total number of packets received that were directed to the broadcast address. This number does not include multicast packets.
CRC ALLIGN	The total number of packets received that had a length (excluding framing bits, but including FCS octets) between 64 and 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error), or a bad FCS with a nonintegral number of octets (Alignment Error).
UNDERSIZE	The total number of packets received that were less than 64 octets long (excluding framing bits, but including FCS octets) and were otherwise well formed.
OVERSIZE	The total number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well formed.
FRAGMENT	The total number of packets received that were less than 64 octets in length (excluding framing bits but including FCS octets) and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).

Parameter	Description
COLLISION	An estimated value for the total number of collisions on this Ethernet segment.

Displaying detailed statistics for ports

Display detailed statistics for specific ports to manage network performance.



Slot and port information can differ depending on hardware platform.

Procedure

1. Enter Privileged EXEC mode:

enable

2. View statistics for specific ports:

show interfaces GigabitEthernet statistics verbose {slot/port[/subport][-slot/port[/sub-port]][,...]}

Example

View statistics for various ports:

Switch:1>enable Switch:1#show interfaces gigabitethernet statistics verbose								
Please wi	lease widen the terminal for optimal viewing of data.							
=======	.=======	Port Stat	s Interface	Extended				
PORT_NUM	IN_UNICST	OUT_UNICST	IN_MULTICST	OUT_MULTICST	IN_BRDCST	OUT_BRDCST	IN_LSM	OUT_LSM
. , .	_	_	_	_	_	_		
2/1 2/2		0	0	0	0	0	0	0
/3		0	0	0	0	0	0	0
/4	0	0	0	0	0	0	0	0
15	0	0	0	0	0	0	0	0
6	0	0	0	Ö	Ō	0	0	Ō
/1	0	0	0	0	0	0	0	0
/2	0	0	0	0	0	0	0	0
/3	0	0	8702	34805	0	0	0	0
/4	0	0	0	0	0	0	0	0
/5	0	0	0	0	0	0	0	0
/6	0	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0	0
/8	0	0	0	0	0	0	0	0
3/9	0	0	0	0	0	0	0	0
-More	(q = quit)							

Variable definitions

Use the data in the following table to use the show interfaces GigabitEthernet statistics verbose command.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Job aid

The following table describes parameters for the show interfaces GigabitEthernet statistics verbose command.

Table 17: how interfaces GigabitEthernet statistics verbose field descriptions

Parameter	Description
PORT_NUM	Indicates the port number.
IN_UNICAST	The count of inbound Unicast packets.
OUT_UNICAST	The count of outbound Unicast packets.
IN_MULTICAST	The count of inbound Multicast packets.
OUT_MULTICAST	The count of outbound Multicast packets.
IN_BRDCST	The count of inbound broadcast packets.
OUT_BRDCST	The count of outbound broadcast packets.

Displaying IS-IS statistics and counters

Use the following procedure to display the IS-IS statistics and counters.

Procedure

1. Display IS-IS system statistics:

show isis statistics

2. Display IS-IS interface counters:

show isis int-counters

3. Display IS-IS level 1 control packet counters:

show isis int-l1-cntl-pkts



The switch uses level 1 IS-IS. The switch does not support level 2 IS-IS. The command show isis int-12-cont1-pkts is not supported because the IEEE 802.1aq standard currently only defines the use of one hierarchy, Level 1.

4. Clear IS-IS statistics:

Switch:1# show isis statistics

clear isis stats [error-counters] [packet-counters]

Example

=======									==
			IS	SIS System S	Stats				
=======									==
LEVEL	CORR LS	AUTH SPs FAII		K SEQ SEQ EXCEEDED	NUM OWN SKIPS	LSP BAI		LSP	DB LOAD
Level-1	0	0	0 0	1	0	0	0	0	
Switch:1	# show	isis int	-counters						
			ISIS	Interface (Counters				==
IFIDX	LEVEL	AUTH FAILS	ADJ CHANGES	INIT	REJ FAILS	ID I ADJ	LEN MAX A	AREA LAN	DIS CHANGES
Mlt2 Port1/21	Level Level		1 1		0	0	0	0	0 0
Switch:1:	# show	isis int	:-11-cntl-p	okts 					==

	ISI	S L1 Control	Packet coun	ters	
IFIDX	DIRECTION	HELLO	LSP	CSNP	PSNP
 Mlt2	Transmitted	13346	231	2	229
Mlt2 Port1/21	Received Transmitted	13329 13340	230 227	1 2	230 226
Port1/21	Received	13335	226	1	227

Variable definitions

Use the data in the following table to use the clear isis stats command.

Variable	Value
error-counters	Clears IS-IS stats error-counters.
packet-counters	Clears IS-IS stats packet-counters.

Job aid

show isis statistics

The following table describes the fields in the output for the show isis statistics command.

Parameter	Description
LEVEL	Shows the level of the IS-IS interface.
CORR LSPs	Shows the number of corrupted LSPs detected.

Parameter	Description
AUTH FAILS	Shows the number of times authentication has failed on the global level.
AREA DROP	Shows the number of manual addresses dropped from the area.
MAX SEQ EXCEEDED	Shows the number of attempts to exceed the maximum sequence number.
SEQ NUM SKIPS	Shows the number of times the sequence number was skipped.
OWN LSP PURGE	Shows how many times the local LSP was purged.
BAD ID LEN	Shows the number of ID field length mismatches.
PART CHANGES	Shows the number of partition link changes.
LSP DB OLOAD	Show the number of times the switch was in the overload state.

show isis int-counters

The following table describes the fields in the output for the **show isis int-counters** command.

Parameter	Description
IFIDX	Shows the interface index for the Ethernet or MLT interface.
LEVEL	Shows the level of the IS-IS interface.
AUTH FAILS	Shows the number of times authentication has failed per interface.
ADJ CHANGES	Shows the number of times the adjacencies have changed.
INIT FAILS	Shows the number of times the adjacency has failed to establish.
REJ ADJ	Shows the number of times the adjacency was rejected by another router.
ID LEN	Shows the ID field length mismatches.
MAX AREA	Shows the maximum area address mismatches.
LAN DIS CHANGES	Shows the number of times the DIS has changed.

show isis int-l1-cntl-pkts

The following table describes the fields in the output for the show isis int-l1-cntl-pkts command.

Parameter	Description
IFIDX	Shows the interface index for the Ethernet or MLT interface.
DIRECTION	Shows the packet flow (Transmitted or Received).
HELLO	Shows the amount of interface-level Hello packets.
LSP	Shows the amount of LSP packets.
CSNP	Shows the amount of CSNPs.
PSNP	Shows the amount of PSNPs.

Clearing ACL statistics

Clear default ACL statistics if you no longer require previous statistics.

Procedure

1. Enter Privileged EXEC mode:

enable

2. Enter the following command to clear default ACL statistics:

```
clear filter acl statistics default [<1-2048>]
```

3. Enter the following command to clear global ACL statistics:

```
clear filter acl statistics global [<1-2048>]
```

4. Enter the following command to clear all ACL statistics:

```
clear filter acl statistics all
```

5. Enter the following command to clear statistics associated with a particular ACL, ACE, or ACE type:

clear filter acl statistics $\lceil \langle 1-2048 \rangle \rceil / \langle 1-2000 \rangle \rceil \lceil \text{gos} \rceil \lceil \text{security} \rceil$

Variable definitions

Use the information in the following table to use the clear filter acl statistics command.

Variable	Value
1–2048	Specifies the ACL ID.
1–2000	Specifies the ACE ID.

Viewing ACE statistics

View ACE statistics to ensure that the filter operates correctly.

Procedure

1. Enter Privileged EXEC mode:

enable

2. View ACE statistics for a specific ACL, ACE, or ACE type:

show filter acl statistics $\langle 1-2048 \rangle$ [$\langle 1-2000 \rangle$] [qos] [security]

3. View all ACE statistics:

show filter acl statistics all

4. View default ACE statistics:

show filter acl statistics default [<1-2048>]

5. View global statistics for ACEs:

show filter acl statistics global [<1-2048>]

Example

View ACE statistics:

Switch:	T#SHOW TITLE					
======				======= atistics Ta		
Acl Id	Acl Name	Acl Type	Acl Sec Packets	Acl Sec		Acl QOS Bytes
	ACL-1 ACL-2			0 0	0 0	0 0
Display	red 2 of 2 e	ntries				
		Acl	Default S	tatistics T	able	
Acl Id	Acl Name	Acl Type	Acl Sec Packets		Acl QOS Packets	======================================
1	ACL-1 ACL-2	inVlan	0	0 0		0
Display	red 2 of 2 e	ntries				
	red 2 of 2 ex-					
More- Switch:	(q = quit 1#show filte) er acl stat	istics def			
More- Switch:	(q = quit 1#show filte) er acl stat ======= Acl	istics defa	======= tatistics T	able	
More- Switch: ====== =====Acl Id	(q = quit 1#show filto) er acl stat ======== Acl Acl Type	istics default S Default S Acl Sec Packets	tatistics T ======= Acl Sec Bytes	able ======= Acl QOS Packets	
More- Switch: ====== Acl Id 	(q = quit 1#show filt	er acl stat Acl Acl Type inVlan	istics default Some Packets	tatistics T Acl Sec Bytes	able ======= Acl QOS Packets	
More- Switch: ====== Acl Id 1 2	(q = quit 1#show filto	er acl stat Acl Acl Type inVlan inVlan	istics default Some Packets	tatistics T Acl Sec Bytes	able ======= Acl QOS Packets	Acl QOS Bytes
More- Switch: Acl Id 1 2 Display	(q = quit 1#show filto 	er acl stat Acl Acl Type inVlan inVlan ntries	istics default S Default S Acl Sec Packets 0	tatistics T Acl Sec Bytes 0	able ======= Acl QOS Packets	Acl QOS Bytes
More- Switch: Acl Id 1 2 Display Switch:	(q = quit 1#show filte	er acl stat Acl Acl Type inVlan inVlan er acl stat Acl stat	istics def	tatistics T Acl Sec Bytes 0 0 0 bal 2 atistics Ta	able	Acl QOS Bytes 0 0
More- Switch: Acl Id Display Switch: Acl Id	(q = quit 1#show filte	er acl stat Acl Acl Type inVlan inVlan ntries er acl stat Acl Acl Acl	istics default S Default S Acl Sec Packets O O O istics glo	tatistics T Acl Sec Bytes 0 0 0 bal 2 atistics Ta Acl Sec Bytes	able Acl QOS Packets 0 0 ble Acl QOS Packets	Acl QOS Bytes 0 0
More- Switch: Acl Id Display Switch: Acl Id	(q = quit 1#show filte	er acl stat	istics default S Default S Acl Sec Packets O O O istics glob	tatistics T Acl Sec Bytes 0 0 0 bal 2 atistics Ta	able Acl QOS Packets 0 0 ble Acl QOS Packets	Acl QOS Bytes 0 0

Variable definitions

Use the data in the following table to use the **show filter acl statistics** command.

Variable	Value
1–2048	Specifies the ACL ID.
1–2000	Specifies the ACE ID.

Job aid

The following table describes output for the show filter acl statistics default command.

Table 18: show filter acl statistics default field descriptions

Parameter	Description
Acl ID	Specifies the identifier for the ACL.
Acl Name	Specifies the name for the ACL.
Acl Type	Specifies the ACL type.
Acl Sec Packets	Specifies the ACL secondary packets.
Acl Sec Bytes	Specifies the ACL secondary bytes.
Acl QoS Packets	Specifies the ACL QoS packets.
Acl QoS Bytes	Specifies the ACL QoS bytes.

Viewing MSTP statistics

About this task

Display MSTP statistics to see MSTP related bridge-level statistics.

Procedure

Display the MSTP related bridge-level statistics:

show spanning-tree mstp statistics

Example

```
Switch:1#show spanning-tree mstp statistics

MSTP Bridge Statistics

MSTP Bridge Statistics

I STP Bridge Statistics

I S
```

Job aid

The following table describes the output for the show spanning-tree mstp statistics command.

Table 19: show spanning-tree mstp statistics field descriptions

Parameter	Description
MSTP Up Count	The number of times the MSTP port has been enabled. A Trap is generated on the occurrence of this event.
MSTP Down Count	The number of times the MSTP port has been disabled. A Trap is generated on the occurrence of this event.
Region Config Change Count	The number of times the switch detects a Region Configuration Identifier Change. The switch generates a trap on the occurrence of this event.
Time since topology change	The time (in hundredths of a second) since the TcWhile Timer for any port in this Bridge was non-zero for Common Spanning Tree context.
Topology change count	The count of at least one non zero TcWhile timers on this Bridge for Common Spanning Tree context.
New Root Bridge Count	The number of times this Bridge has detected a Root Bridge change for Common Spanning Tree context. A Trap is generated on the occurrence of this event.

Viewing RSTP statistics

About this task

View Rapid Spanning Tree Protocol statistics to manage network performance.

Procedure

View RSTP stats with the following command:

show spanning-tree rstp statistics

Job aid

The following table describes output for the show spanning-tree rstp statistics command.

Table 20: show spanning-tree rstp statistics field descriptions

Parameter	Description
RSTP Up Count	The number of times RSTP port has been enabled. A Trap is generated on the occurence of this event.
RSTP Down Count	The number of times RSTP port has been disabled. A Trap is generated on the occurence of this event.

Parameter	Description
Count of Root Bridge Changes	The number of times this Bridge has detected a Root Bridge change for Common Spanning Tree context.
STP Time since Topology change	The time (in hundredths of a second) since the "TcWhile" Timer for any port in this Bridge was non zero for this spanning tree instance.
Total number of topology changes	The number of times that there have been atleast one non zero "TcWhile" Timer on this Bridge for this spanning tree instance.

Viewing RSTP port statistics

About this task

View RSTP statistics on ports to manage network performance.



Note:

Slot and port information can differ depending on hardware platform.

Procedure

View RSTP statistics on a port:

show spanning-tree rstp port statistics [{slot/port[/sub-port][-slot/ port[/sub-port]][,...]}]

Example

View RSTP statistics:

```
Switch: 1#show spanning-tree rstp port statistics
______
                                    RSTP Port Statistics
Port Number : 4/1
Number of Fwd Transitions : 0
Rx RST BPDUs Count : 0
Rx Config BPDU Count : 0
Rx TCN BPDU Count : 0
Tx RST BPDUs Count : 0
Tx Config BPDU Count : 0
Tx Config BPDU Count : 0
Tx TCN BPDU Count : 0
Tx TCN BPDU Count : 0
: 0
Invalid Config BPDUs Rx Count : 0
Invalid TCN BPDU Rx Count : 0
Invalid TCN BPDU Rx Count : 0
Protocol Migration Count : 0
Port Number of T
Port Number : 4.
Number of Fwd Transitions : 0
Rx RST BPDUs Count : 0
Rx Config BPDU Count : 0
Rx TCN BPDU Count : 0
Tx RST BPDUs Count : 0
Tx Config BPDU Count
--More-- (q = quit)
```

Variable definitions

Use the data in the following table to use the **show spanning-tree rstp port statistics** command.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Job aid

The following table describes output for the show spanning-tree rstp port statistics command.

Table 21: show spanning-tree rstp port statistics field descriptions

Parameter	Description
RxRstBpduCount	The number of RSTP BPDUs received on this port.
RxConfigBpduCount	The number of configuration BPDUs received on this port.
RxTcnBpduCount	The number of TCN BPDUs received on this port.
TxRstBpduCount	The number of RSTP BPDUs transmitted by this port.
TxConfigBpduCount	The number of Config BPDUs transmitted by this port.
TxTcnBpduCount	The number of TCN BPDUs transmitted by this port.
InvalidRstBpduRxCount	The number of invalid RSTP BPDUs received on this port. A trap is generated on the occurrence of this event.
InvalidConfigBpduRx Count	The number of invalid configuration BPDUs received on this port. A trap is generated on the occurrence of this event.
InvalidTcnBpduRxCount	The number of invalid TCN BPDUs received on this port. A trap is generated on the occurrence of this event.
ProtocolMigrationCount	The number of times this port migrated from one STP protocol version to another. The relevant protocols are STP-Compatible and RSTP. A trap is generated on the occurrence of this event.

Viewing MLT statistics

About this task

View MLT statistics to display MultiLinkTrunking statistics for the switch or for the specified MLT ID.

Procedure

View MLT statistics:

show mlt stats [<1-512>]

Example

	Mlt :	Interface		
D IN-OCTETS	OUT-OCTETS	IN-UNICST	OUT-UNICST	
			456 1490619 0	
D IN-MULTICST	OUT-MULTICST	IN-BROADCST	OUT-BROADCST	МТ
962303832	2295274 960067410 666153 504965		268194 237 90 0	E E E E
D IN-LSM	OUT-LSM			
. 0 2 957925732 3 0	0 957929399 0			

Variable definitions

Use the data in the following table to help you use the show mlt stats command.

Variable	Value
<1-512>	Specifies the MLT ID.

Job aid

The following table describes the output for the show mlt stats command.

Table 22: show mlt stats field descriptions

Parameter	Description
ID IN-OCTETS	The total number of inbound octets of data (including those in bad packets).
OUT-OCTETS	The total number of outbound octets of data.
IN-UNICAST	The count of inbound Unicast packets.
OUT-UNICAST	The count of outbound unicast packets.
ID IN-MULTICAST	The count of inbound multicast packets.
OUT-MULTICAST	The count of outbound multicast packets.
IN-BROADCAST	The count of inbound broadcast packets.
OUT-BROADCAST	The count of outbound broadcast packets.
MT	The MLT type: P for POS, E for Ethernet, A for ATM.

Viewing vIST statistics

View virtual IST (vIST) statistics for the switch.

Procedure

1. Enter Privileged EXEC mode:

enable


2. Display the vIST statistics:

show virtual-ist stat

3. To clear the vIST statistics:

clear virtual-ist stats

Example

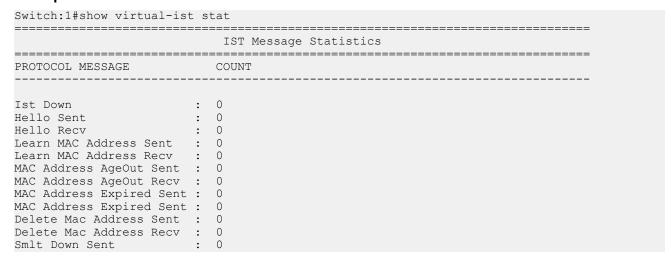

```
Smlt Down Recv : 0
Smlt Up Sent : 0
Smlt Up Recv : 0
Send MAC Address Sent : 0
Send MAC Address Recv : 0
IGMP Sent : 0
IGMP Sent : 0
IGMP Recv : 0
Port Down Sent : 0
Port Down Recv : 0
Port Down Recv : 0
Request MAC Table Sent : 0
Request MAC Table Recv : 0
Unknown Msg Type Recv : 0
Mit Table Sync Req Sent : 0
Mit Table Sync Req Recv : 0
Mit Table Sync Req Sent : 0
Mit Table Sync Recv : 0
Port Update Recv : 0
Dialect Negotiate Sent : 0
Entry Update Recv : 0
Dialect Negotiate Recv : 0
Update Response Recv : 0
Update Mit Water Mark : 0
```

Job aid

The following table describes the output for the show virtual-ist stat command.

Table 23: show virtual-ist stat field descriptions

Parameter	Description
Ist Down	The count of how many sessions between the two peering switches went down since last boot.
Hello Sent	The count of transmitted hello messages.
Hello Recv	The count of received hello messages.
Learn MAC Address Sent	The count of transmitted learned MAC address messages.
Learn MAC Address Recv	The count of received learned MAC address messages.
MAC Address AgeOut Sent	The count of transmitted aging out MAC address messages.
MAC Address AgeOut Recv	The count of received aging out MAC address messages.
MAC Address Expired Sent	The count of transmitted MAC address age expired messages.
MAC Address Expired Recv	The count of received MAC address age expired messages.
Delete Mac Address Sent	The count of transmitted MAC address deleted messages.

Parameter	Description
Delete Mac Address Recv	The count of received MAC address deleted messages.
Smlt Down Sent	The count of transmitted SMLT down messages.
Smlt Down Recv	The count of received SMLT down messages.
Smlt Up Sent	The count of transmitted SMLT up messages.
Smlt Up Recv	The count of received SMLT up messages.
Send MAC Address Sent	The count of transmitted send MAC table messages.
Send MAC Address Recv	The count of received send MAC table messages.
IGMP Sent	The count of transmitted IGMP messages.
IGMP Recv	The count of received IGMP messages.
Port Down Sent	The count of transmitted port down messages.
Port Down Recv	The count of received port down messages.
Request MAC Table Sent	The count of transmitted MAC table request messages.
Request MAC Table Recv	The count of received MAC table request messages.
Unknown Msg Type Recv	The count of received unknown message type messages.
Mlt Table Sync Req Sent	The count of transmitted MLT table sync request messages.
Mlt Table Sync Req Recv	The count of received MLT table sync request messages.
Mlt Table Sync Sent	The count of transmitted MLT table sync messages.
Mlt Table Sync Recv	The count of received MLT table sync messages.
Port Update Sent	The count of transmitted port update messages.
Port Update Recv	The count of received port update messages.
Entry Update Sent	The count of transmitted entry update messages.
Entry Update Recv	The count of received entry update messages.
Dialect Negotiate Sent	The count of transmitted protocol ID messages.
Dialect Negotiate Recv	The count of received protocol ID messages.
Update Response Sent	The count of transmitted update response messages.
Update Response Recv	The count of received update response messages.
Transaction Que HiWaterM	The count of transaction queue high watermark messages.
Poll Count Hi Water Mark	The count of poll count high watermark messages.

Showing RADIUS server statistics

About this task

You cannot collect the following network statistics from a console port: the number of input and output packets, and the number of input and output bytes. All other statistics from console ports are available to assist with debugging.

Procedure

1. Enter Privileged EXEC mode:

enable

2. Display RADIUS server statistics:

```
show radius-server statistics
```

3. Clear server statistics:

clear radius statistics

Example

```
Switch: 1#show radius-server statistics
Responses with invalid server address: 0
  Radius Server (UsedBy) : 192.0.2.58(cli)
        Access Requests: 52
         Access Accepts : 0
        Access Rejects: 0
         Bad Responses: 52
         Client Retries : 52
       Pending Requests : 0
       Acct On Requests : 1
      Acct Off Requests : 0
    Acct Start Requests: 47
     Acct Stop Requests : 46
  Acct Interim Requests: 0
     Acct Bad Responses: 94
  Acct Pending Requests: 0
    Acct Client Retries: 94
      Access Challanges: 0
        Round-trip Time :
         Nas Ip Address: 192.0.2.32
  Radius Server (UsedBy) : 192.0.2.58 (snmp)
        Access Requests : 0
         Access Accepts: 0
         Access Rejects: 0
         Bad Responses : 0
         Client Retries: 0
       Pending Requests: 0
       Acct On Requests: 0
      Acct Off Requests: 0
    Acct Start Requests: 0
     Acct Stop Requests: 0
  Acct Interim Requests : 0
```

```
Acct Bad Responses: 0
Acct Pending Requests: 0
Acct Client Retries: 0
Access Challanges: 0
Round-trip Time:
Nas Ip Address: 192.0.2.32
```

Job aid

The following table shows the field descriptions for the show radius-server statistics command output.

Table 24: show radius-server statistics command fields

Parameter	Description
RADIUS Server	The IP address of the RADIUS server.
AccessRequests	Number of access-response packets sent to the server; does not include retransmissions.
AccessAccepts	Number of access-accept packets, valid or invalid, received from the server.
AccessRejects	Number of access-reject packets, valid or invalid, received from the server.
BadResponses	Number of invalid access-response packets received from the server.
PendingRequests	Access-request packets sent to the server that have not yet received a response, or have timed out.
ClientRetries	Number of authentication retransmissions to the server.
AcctOnRequests	Number of accounting On requests sent to the server.
AcctOffRequests	Number of accounting Off requests sent to the server.
AcctStartRequests	Number of accounting Start requests sent to the server.
AcctStopRequests	Number of accounting Stop requests sent to the server.
AcctInterimRequests	Number of accounting Interim Requests sent to the server.
	The AcctInterimRequests counter increments only if the parameter acct-include-cli-commands is set to true.
AcctBadResponses	Number of Invalid Responses from the server that are discarded.
AcctPendingRequests	Number of requests waiting to be sent to the server.
AcctClientRetries	Number of retries made to this server.

Viewing RMON statistics

About this task

View RMON statistics to manage network performance.

Procedure

View RMON statistics:

show rmon stats

Example

Job aid

The following table describes parameters in the output for the show rmon stats command.

Table 25: show rmon stats field descriptions

Parameter	Description
Index	An index that uniquely identifies an entry in the Ethernet statistics table.
Port	Identifies the source of the data that this entry analyzes.
Owner	The entity that configured this entry and is therefore using the assign resources.

Showing OSPF error statistics on a port

Use statistics to help you monitor Open Shortest Path First (OSPF) performance. You can also use statistics in troubleshooting procedures.

Procedure

1. Enter Privileged EXEC mode:

enable

2. Display extended information about OSPF errors for the specified port or for all ports:

```
show interfaces GigabitEthernet error ospf [{slot/port[/sub-port][-
slot/port[/sub-port]][,...]}]
```

Variable definitions

Use the following table to help you use the **show interfaces GigabitEthernet error ospf** command.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Job aid

The following table describes the output for the show interfaces GigabitEthernet error ospf command.

Table 26: show interfaces GigabitEthernet error ospf field descriptions

Parameters	Description
PORT NUM	Indicates the port number.
VERSION MISMATCH	Indicates the number of version mismatches this interface receives.
AREA MISMATCH	Indicates the number of area mismatches this interface receives.
AUTHTYPEMISMATCH	Indicates the number of AuthType mismatches this interface receives.
AUTH FAILURES	Indicates the number of authentication failures.
NET_MASK MISMATCH	Indicates the number of net mask mismatches this interface receives.
HELLOINT MISMATCH	Indicates the number of hello interval mismatches this interface receives.
DEADINT MISMATCH	Indicates the number of dead interval mismatches this interface receives.
OPTION MISMATCH	Indicates the number of options mismatches this interface receives.

Viewing OSPF interface statistics

Use statistics to help you monitor Open Shortest Path First (OSPF) performance. You can also use statistics in troubleshooting procedures.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. Display OSPF interface statistics:

show ip ospf ifstats [detail vrf WORD<0-16> vrfids WORD<0-512>] [mismatch vrf WORD<0-16> vrfids WORD<0-512>] [vlan <1-4059>] [vrfids WORD<0-16>] [vrfids WORD<0-512>]

Example

Switch:1#show ip ospf ifstats

	0.	SPF Inte	erface	e Stat	istic	cs - (GlobalE	Router			
INTERFACE		LLOS TX				~				ACK Tx	
		76355 76349			_	-			2525 0	1247 0	

Variable definitions

Use this table to help you use the **show** ip ospf ifstats command.

Variable	Value
detail	Shows detailed information.
mismatch	Shows the number of times the area ID is not matched.
vlan <1-4059>	Specifies the VLAN ID in the range of 1 to 4059. By default, VLAN IDs 1 to 4059 are configurable and the system reserves VLAN IDs 4060 to 4094 for internal use. On switches that support the vrf-scaling and spbm-config-mode boot configuration flags, if you enable these flags, the system also reserves VLAN IDs 3500 to 3998. VLAN ID 1 is the default VLAN and you cannot create or delete VLAN ID 1.
vrf WORD<1-16>	Specifies a VRF instance by VRF name.
vrfids WORD<0-512>	Specifies a VRF or range of VRFs by ID.

Job aid

The following table describes the output for the show ip ospf ifstats command.

Table 27: show ip ospf ifstats field descriptions

Field	Description
INTERFACE	Indicates the IP address of the host.
HELLOS RX	Indicates the number of hello packets received by this interface.
HELLOS TX	Indicates the number of hello packets transmitted by this interface.
DBS RX	Indicates the number of database descriptor packets received by this interface.
DBS TX	Indicates the number of database descriptor packets transmitted by this interface.
LS REQ	Indicates the number of link state request packets received by this interface.
LS TX	Indicates the number of link state request packets transmitted by this interface.
LS UDP RX	Indicates the number of link state update packets received by this interface.

Field	Description
LS UDP TX	Indicates the number of link state update packets transmitted by this interface.
LS ACK RX	Indicates the number of link state acknowledge packets received by this interface.
LS ACK TX	Indicates the number of link state acknowledge packets transmitted by this interface.
VERSION	Indicates the OSPF version.
AREA	Indicates the OSPF area.
AUTHTYPE	Indicates the OSPF authentication type.
AUTHFAIL	The count of authentication fail messages.
NETMASK	Indicates the net mask.
HELLO	The count of Hello messages.
DEADTRR OPTION	The dead TRR option.

Viewing OSPF range statistics

Use statistics to help you monitor Open Shortest Path First (OSPF) performance. You can also use statistics in troubleshooting procedures. OSPF range statistics include area ID, range network address, range subnet mask, range flag, and LSDB type.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. Display the OSPF range statistics:

```
show ip ospf stats [vrf WORD<0-16>] [vrfids WORD<0-512>]
```

Example

```
Switch: 1#show ip ospf stats
______
               OSPF Statistics - GlobalRouter
    NumBufAlloc: 239603
      NumBufFree: 239603
  NumBufAllocFail: 0
  NumBufFreeFail: 0
        NumTxPkt: 239655
NumRxPkt: 317562
    NumTxDropPkt: 0
    NumRxDropPkt: 0
     NumRxBadPkt: 0
       NumSpfRun: 47
      LastSpfRun: 2 day(s), 04:18:58
     LsdbTblSize: 16
    NumAllocBdDDP: 24
    NumFreeBdDDP: 24
     NumBadLsReq: 0
   NumSeqMismatch: 3
    NumOspfRoutes: 4
```

```
NumOspfAreas: 1
NumOspfAdjacencies: 3
--More-- (q = quit)
```

Variable definitions

Use the data in the following table to use the **show ip ospf stats** command.

Variable	Value
vrf WORD<0-16>	Specifies a VRF instance by VRF name.
vrfids WORD<0-16>	Specifies a VRF or range of VRFs by ID.

Job aid

The following table describes the show command output.

Table 28: show ip ospf stats command parameters

Parameter	Description
NumBufAlloc	Indicates the number of buffers allocated for OSPF.
NumBufFree	Indicates the number of buffers that are freed by the OSPF.
NumBufAllocFail	Indicates the number of times that OSPF failed to allocate buffers.
NumBufFreeFail	Indicates the number of times that OSPF failed to free buffers.
NumTxPkt	Indicates the number of packets transmitted by OSPF.
NumRxPkt	Indicates the number of packets received by OSPF.
NumTxDropPkt	Indicates the number of packets dropped before transmission by OSPF.
NumRxDropPkt	Indicates the number of packets dropped before reception by OSPF.
NumRxBadPkt	Indicates the number of packets received by OSPF that are bad.
NumSpfRun	Indicates the total number of SPF calculations performed by OSPF, which also includes the number of partial route table calculation for incremental updates.
LastSpfRun	Indicates the time (SysUpTime) since the last SPF calculated by OSPF.
LsdbTblSize	Indicates the number of entries in the link state database table.
NumAllocBdDDP	Indicates the number of times buffer descriptors were allocated for OSPF database description packets.
NumFreeBdDDP	Indicates the number of times buffer descriptors were freed after use as OSPF database description packets.
NumBadLsReq	Indicates the number of bad LSDB requests.
NumSeqMismatch	Indicates the number of mismatches for sequence numbers.
NumOspfRoutes	The count of OSPF routes.
NumOspfAreas	The count of OSPF areas.
NumOspfAdjacencies	The count of Adjacencies.

Clearing IP OSPF statistics

Use the following procedure to clear all IPv4 OSPF statistics.

Procedure

1. Enter Privileged EXEC mode:

enable

2. Clear IPv4 OSPF statistics:

```
clear ip ospf stats [vrf WORD<1-16>] [vrfids WORD<0-512>]
```

Variable definitions

Use the data in the following table to use the clear ip ospf stats command.

Variable	Value
vrf WORD<0-16>	Specifies a VRF instance by VRF name.
vrfids WORD<0-512>	Specifies the ID of the VRF.

Viewing basic OSPF statistics for a port

Use statistics to help you monitor Open Shortest Path First (OSPF) performance. You can also use statistics in troubleshooting procedures.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. View basic OSPF statistics:

```
show ports statistics ospf main [{slot/port[/sub-port][-slot/port[/
sub-port]][,...]}]
```

Example

View basic OSPF statistics:

Variable definitions

Use the data in the following table to use the show ports statistics ospf main command.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Job aid

The following table describes the output for the show ports statistics ospf main command.

Table 29: show ports statistics ospf main output description

Field	Description
PORT NUM	Indicates the port number.
RX_HELLO	Indicates the number of hello packets this interface receives.
TX_HELLO	Indicates the number of hello packets this interface transmitted.
RXDB_DESCR	Indicates the number of database descriptor packets this interface receives.
TXDB_DESCR	Indicates the number of database descriptor packets this interface transmitted.
RXLS_UPDATE	Indicates the number of link state update packets this interface receives.
TXLS_UPDATE	Indicates the number of link state update packets this interface transmitted.

Showing extended OSPF statistics

Use statistics to help you monitor Open Shortest Path First (OSPF) performance. You can also use statistics in troubleshooting procedures.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. Display extended OSPF information about the specified port or for all ports:

```
show ports statistics ospf extended [{slot/port[/sub-port][-slot/
port[/sub-port]][,...]}]
```

Example

Display extended OSPF information:

Variable definitions

Use the data in the following table to use the show ports statistics ospf extended command.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Job aid

The following table describes the output for the show ports statistics ospf extended command.

Table 30: show ports statistics ospf extended output description

Parameters	Description
PORT_NUM	Indicates the port number.
RXLS_REQS	Indicates the number of link state update request packets received by this interface.
TXLS_REQS	Indicates the number of link state request packets transmitted by this interface.
RXLS_ACKS	Indicates the number of link state acknowledge packets received by this interface.
TXLS_ACKS	Indicates the number of link state acknowledge packets transmitted by this interface.

Viewing ingress port-rate limit statistics

Use this procedure to view the ingress port-rate limit statistics. The system displays the statistics of the dropped packets and bytes.



Note:

This command is not available on all hardware platforms.

Procedure

1. Enter Privileged EXEC mode:

enable

2. View the ingress port-rate limit statistics:

show interfaces gigabitethernet statistics rate-limiting [port {slot/port[/sub-port][-slot/port[/sub-port]][,...]}]

Example

Switch: 1# show interfaces gigabitethernet statistics rate-limiting 1/1

	QO.	S Interface Ingress	======================================	nts
PORT	DROPPING PKTS RATE	DROPPING BYTES RATE	DROPPING PKTS	DROPPING BYTES
1/1 1430758	9224	9 1436481032	260507	

Variable definitions

Use the data in the following table to use the **show interfaces** gigabitethernet statistics rate-limiting command.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.

Viewing ingress policer statistics

Use this procedure to view the ingress policer statistics. The system displays individual policer statistics for specific ports to manage network performance.



This command is not available on all hardware platforms.

Procedure

1. Enter Privileged EXEC mode:

enable

2. View the policer statistics:

show interfaces gigabitethernet statistics policer {slot/port[/sub-port][-slot/port[/sub-port]][,...]}

Example

Switch: 1# show interfaces gigabitethernet statistics policer 1/3

======	
QoS Ingress Port Policer Stats	

	==			
PORT	TOTAL	TOTAL	YELLOW	RED
NUM	PKTS	BYTES	BYTES	BYTES
1/3	420	31628	0	0

Variable definitions

Use the data in the following table to use the **show interfaces gigabitethernet** statistics policer command.

Variable	Value		
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.		

Viewing the management port statistics

Use this procedure to view the management port statistics.



This procedure only applies to hardware with a dedicated, physical management interface.

Procedure

1. Enter Global Configuration mode:

enable
configure terminal

2. View the management port statistics:

show interfaces mgmtethernet statistics

Example

View management port statistics:

Switc	h:1#show i	nterfaces	mgmtetherne	t statistics	 	
			Port Stats	Interface		
PORT NUM	IN OCTETS	OUT OCTETS		IN PACKET	 OUT PACKET	
mgmt	7222116	44282		81789	 586	
PORT NUM	IN FLOWCTRL	OUT FLOWCTRL		IN PFC	OUT PFC	OUTLOSS PACKETS
mgmt	0	0		0	 0	0

Viewing IP VRRPv3 statistics

Use the following procedure to view IP VRRPv3 statistics to monitor network performance.

Procedure

1. Enter Privileged EXEC mode:

enable

2. Enter the following command to view VRRP statistics:

```
show ip vrrp statistics version <2-3>
```

3. Enter the following command to view VRRP statistics for the specified VRF:

```
show ip vrrp statistics vrf WORD<1-16> version <2-3>
```

4. Enter the following command to view VRRP statistics for the specified virtual router:

show ip vrrp statistics vrfids WORD<0-512> version <2-3>

Example

View IP VRRPv3 statistics:

VRRP Global Stats - GlobalRouter	
CHK_SUM_ERR VERSION_ERR VRID_ERR VRRP_VERSION	
0 0 0 2 0 0 0 3	
VRRP Interface Stats - GlobalRouter	===
vrrp id p/v become_master adveritse_rcv version	===
3 3 1 0 2 2 1/1 1 0 3	
VRRP ID P/V ADVERTISE_INT_ERR TTL_ERR PRIO_0_RCV VERSION	
3 3 0 0 0 2 2 1/1 0 0 0 3	
VRRP ID P/V PRIO_0_SENT INVALID_TYPE_ERR ADDRESS_LIST_ERR UNKNOWN_AUTHTYPE VERS	ION
3 3 0 0 0 0 0 2 2 1/1 0 0 0 0 0 3	
VRRP ID P/V AUTHTYPE_ERR PACKLEN_ERR VERSION	
3 3 0 0 2 2 1/1 0 0 3	

Variable definitions

Use the data in the following table to use the ip vrrp version command.

Variable	Value
version	Configures the VRRP version on the specified interface.
<2–3>	Specifies the version of VRRP (2 or 3) to be configured on the specified interface.
vrf WORD<1–16>	Specifies the name of the VRF.
vrfids WORD<0–512>	Specifies the ID of the VRF, and is an integer in the range of 0–512.

Clearing IPv4 MSDP statistics

Use the following procedure to clear all IPv4 Multicast Source Discovery Protocol (MSDP) statistics for all peers or a specific peer.

About this task

The switch supports this command for local management VRF or global routing table (GRT). If you do not specify a VRF or VRF ID, the switch defaults to GRT.

Procedure

1. Enter Privileged EXEC mode:

enable

2. Clear IPv4 MSDP statistics for all peers:

```
clear ip msdp statistics [vrf WORD<0-16>] [vrfids WORD<0-512>]
```

3. Clear IPv4 MSDP statistics for a specific peer:

clear ip msdp statistics {A.B.C.D.} [vrf WORD<0-16>] [vrfids WORD<0512>]

Variable definitions

Use the data in the following table to use the clear ip msdp statistics command.

Variable	Value
vrf WORD<0-16>	Specifies a VRF instance by VRF name.
vrfids WORD<0-512>	Specifies the ID of the VRF.
{A.B.C.D.}	Specifies the IPv4 MSDP address for a specific peer.

Clearing IPv6 statistics

Clear all IPv6 statistics if you do not require previous statistics.

Procedure

1. Enter Privileged EXEC mode:

enable

2. Clear all the IPv6 statistics:

clear ipv6 statistics all

3. Clear interface statistics:

clear ipv6 statistics interface [general|icmp] [gigabitethernet $\{slot/port[/sub-port]\}>$ |mgmtethernet mgmt|tunnel <1-2000>| vlan <1-4059>|

4. Clear TCP statistics:

clear ipv6 statistics tcp

5. Enter the following command to clear UDP statistics:

clear ipv6 statistics udp

Variable definitions

Use the information in the following table to use the clear ipv6 statistics command.

Variable	Value
vlan<1-4059>	Specifies the VLAN ID in the range of 1 to 4059. By default, VLAN IDs 1 to 4059 are configurable and the system reserves VLAN IDs 4060 to 4094 for internal use. On switches that support the vrf-scaling and spbm-config-mode boot configuration flags, if you enable these flags, the system also reserves VLAN IDs 3500 to 3998. VLAN ID 1 is the default VLAN and you cannot create or delete VLAN ID 1.
gigabitethernet {slot/port[/sub-port]}	Identifies a single slot and port. If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.
mgmtethernet mgmt	Identifies the management interface. This parameter only applies to hardware with a dedicated, physical management interface.
tunnel <1-2000>	Identifies a 6in4 tunnel ID.

Viewing ICMP statistics

View IPv6 ICMP statistics on an interface for ICMP messages sent over a particular interface.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. View IPv6 ICMP statistics

show ipv6 interface icmpstatistics [gigabitethernet <slot/port[/sub-port]>|mqmtethernet mqmt|tunnel <1-2000>| vlan <1-4059>]

Example

View ICMP statistics:

```
Switch:1>show ipv6 interface icmpstatistics
        ______
                           Icmp Stats
______
Icmp stats for IfIndex = 192
IcmpInMsqs: 0
IcmpInErrors: 0
IcmpInDestUnreachs : 0
IcmpInAdminProhibs : 0
IcmpInTimeExcds : 0
IcmpInParmProblems : 0
IcmpInPktTooBigs : 0
IcmpInEchos : 0
IcmpInEchoReplies : 0
IcmpInRouterSolicits : 0
IcmpInRouterAdverts : 0
InNeighborSolicits: 0
InNbrAdverts: 0
IcmpInRedirects : 0
IcmpInGroupMembQueries : 0
IcmpInGroupMembResponses : 0
```

Variable definitions

Use the data in the following table to use the **show ipv6 interface icmpstatistics** command

Variable	Value
<1-4059>	Shows ICMP statistics for the specific interface index. If you do not specify an interface index, the command output includes all IPv6 ICMP interfaces.
	Specifies the VLAN ID in the range of 1 to 4059. By default, VLAN IDs 1 to 4059 are configurable and the system reserves VLAN IDs 4060 to 4094 for internal use. On switches that support the vrf-scaling and spbm-config-mode boot configuration flags, if you

Variable	Value
	enable these flags, the system also reserves VLAN IDs 3500 to 3998. VLAN ID 1 is the default VLAN and you cannot create or delete VLAN ID 1.
gigabitethernet {slot/port[/sub-port]}	Identifies a single slot and port. If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.
mgmtethernet mgmt	Identifies the management interface. This parameter only applies to hardware with a dedicated, physical management interface.
tunnel <1-2000>	Identifies a 6in4 tunnel ID.

Viewing IPv6 DHCP Relay statistics

Display individual IPv6 DHCP Relay statistics for specific interfaces to manage network performance.

Procedure

 
- 1. Log on to the switch to enter User EXEC mode.
- 2. View statistics:

show ipv6 dhcp-relay counters



Use the sys action reset counters command to clear DHCP Relay statistics.

Example



Job aid

The following table explains the output of the show ipv6 dhcp-relay counters command.

Table 31: show ipv6 dhcp-relay counters command output

Heading	Description
REQUESTS	Shows the number of DHCP and BootP requests on this interface.
REPLIES	Shows the number of DHCP and BootP replies on this interface.

Viewing IPv6 OSPF statistics

View OSPF statistics to analyze trends.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. View statistics:

```
show ipv6 ospf statistics
```

Example

View IPv6 OSPF statistics:

```
Switch:1>enable
Switch:1#show ipv6 ospf statistics

OSPFv3 Statistics

NumTxPkt: 9958
NumRxPkt: 8982
NumTxDropPkt: 33
NumRxDropPkt: 0
NumRxBadPkt: 0
NumRxBadPkt: 0
LastSpfRun: 42
LastSpfRun: 0 day(s), 02:44:32
LsdbTblSize: 45
NumBadLsReq: 0
NumSeqMismatch: 0
NumOspfAdjacencies: 7
```

Job aid

The following table explains the output of the show ipv6 ospf statistics command.

Field	Description
NumTxPkt	Shows the count of sent packets.
NumRxPkt	Shows the count of received packets.
NumTxDropPkt	Shows the count of sent, dropped packets.
NumRxDropPkt	Shows the count of received, dropped packets.
NumRxBadPkt	Shows the count of received, bad packets.
NumSpfRun	Shows the count of intra-area route table updates with calculations using this area link-state database.
LastSpfRun	Shows the count of the most recent SPF run.
LsdbTblSize	Shows the size of the link-state database table.
NumBadLsReq	Shows the count of bad link requests.
NumSeqMismatch	Shows the count of sequence mismatched packets.

Viewing IPv6 statistics on an interface

View IPv6 statistics to view information about the IPv6 datagrams on an interface.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. View statistics:

```
show ipv6 interface statistics [gigabitethernet <slot/port[/sub-port]>|mgmtethernet mgmt|tunnel <1-2000> | vlan <1-4059>]
```

Example

View IPv6 statistics on an interface:

```
Switch:1>enable
Switch: 1#show ipv6 interface statistics
_____
                      Interface Stats
______
If Stats for mgmt, IfIndex = 64
InReceives: 404
InHdrErrors: 0
InTooBigErrors : 0
InNoRoutes : 0
InAddrErrors : 0
InUnknownProtos: 0
InTruncatedPkts : 0
InDiscards : 0
InDelivers : 404
OutForwDatagrams: 0
OutRequests: 417
OutDiscards: 0
OutFragOKs : 0
OutFragFails : 0
OutFragCreates : 0
--More-- (q = quit)
```

Variable definitions

Use the data in the following table to use the show ipv6 interface statistics command

Variable	Value
vlan <1-4059>	Shows statistics for the specific interface index. If you do not specify an interface index, the command output includes all IPv6 interfaces.
	Specifies the VLAN ID in the range of 1 to 4059. By default, VLAN IDs 1 to 4059 are configurable and the system reserves VLAN IDs 4060 to 4094 for internal

Variable	Value
	use. On switches that support the vrf-scaling and spbm-config-mode boot configuration flags, if you enable these flags, the system also reserves VLAN IDs 3500 to 3998. VLAN ID 1 is the default VLAN and you cannot create or delete VLAN ID 1.
gigabitethernet {slot/port[/sub-port]}	Identifies a single slot and port. If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.
mgmtethernet mgmt	Identifies the management interface. This parameter only applies to hardware with a dedicated, physical management interface.
tunnel <1-2000>	Identifies a 6in4 tunnel ID.

Displaying IPsec statistics

Use the following procedure to clear Internet Protocol Security (IPsec) system statistics counters and display IPsec statistics on an interface. The device only clears system statistics counters on system reboot.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. Display IPsec statistics for the system:

```
show ipsec statistics system
```

3. Display IPsec statistics for an Ethernet interface:

```
show ipsec statistics gigabitethernet {slot/port[/sub-port][-slot/
port[/sub-port]][,...]}
```

4. Display IPsec statistics for a VLAN interface:

```
show ipsec statistics vlan <1-4059>
```

5. Display statistics for IPsec on the management interface:



This step only applies to hardware with a dedicated, physical management interface.

```
show ipsec statistics mgmtethernet mgmt
```

6. Display statistics for IPsec on the loopback interface:

```
show ipsec statistics loopback <1-256>
```

7. Clear IPsec system statistics counters:

```
clear ipsec stats all
```

Example

Display IPsec statistics. Output is partial due to length.

```
Switch:1>show ipsec statistics system
                        IPSEC Global Statistics
_____
InSuccesses = 0
InSPViolations = 0
InNotEnoughMemories = 0
InAHESPReplays = 0
InAHFailures = 0
InAHFailures
InESPFailures
OutSuccesses
                 = 0
OutSuccesses = 0
OutSPViolations = 0
OutNotEnoughMemories = 0
generalError = 0
InAHSuccesses = 0
                 = 0
InAHSuccesses
InESPSuccesses
                 = 0
                  = 0
OutAHSuccesses
OutESPSuccesses
                 = 0
OutKBytes
OutBytes
                 = 0
InKBytes
                 = 0
InBytes
--More-- (q = quit)
Switch:1>show ipsec statistics gigabitethernet 1/13
______
                          Ipsec Port Stats
______
Ifindex = 204
InSuccesses = 0
InSPViolations = 0
InNotEnoughMemories = 0
InAHESPReplays = 0
InAHFailures = 0
InAHFailures
InESPFailures
 \begin{array}{lll} \text{InESPFailures} & = & 0 \\ \text{OutSuccesses} & = & 0 \\ \text{OutSPViolations} & = & 0 \\ \end{array} 
                 = 0
OutNotEnoughMemories = 0
generalError
Switch:1>show ipsec statistics vlan 1
______
                           Ipsec Vlan Stats
______
Ifindex = 2049
InSuccesses = 0
InSPViolations = 0
InNotEnoughMemories = 0
InAHESPReplays = 0
InAHFailures
                 = 0
InESPFailures
OutSuccesses
OutSPViolations = 0
OutSuccesses
OutNotEnoughMemories = 0
generalError = 0
```

Display IPsec statistics for a loopback interface:

```
Switch:1>show ipsec statistics loopback 1
______
                          Ipsec LoopBack Stats
______
Ifindex = 1344
InSuccesses = 0
InSPViolations = 0
InNotEnoughMemories = 0
InAHESPReplays = 0
InESPReplays = 0
InESPReplays = 0
InAHFailures = 0
OutSuccesses = 0
OutSuccesses = 0
OutSPViolations = 0
OutNotEnoughMemories = 0
generalError = 0
Switch:1>show ipsec statistics mgmtethernet mgmt
______
                           Ipsec Port Stats
Ifindex = 64
InSuccesses = 0
InSPViolations = 0
InNotEnoughMemories = 0
InAHESPReplays = 0
InESPReplays = 0
InAHFailures = 0
InESPFailures = 0
OutSuccesses = 0
OutSPViolations = 0
OutNotEnoughMemories = 0
generalError = 0
```

Variable definitions

Use the data in the following table to use the show ipsec statistics command.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the sub-port in the format slot/port/sub-port.
loopback <1-256>	Identifies the loopback interface.
mgmtethernet mgmt	Identifies the interface as the management interface.
system	Shows statistics for the entire system.
vlan <1-4059>	Specifies the VLAN.

Job aid

The following table describes the fields in the output for the **show ipsec statistics system** command.

Parameter	Description
InSuccesses	Specifies the number of ingress packets IPsec successfully carries.
InSPViolations	Specifies the number of ingress packets IPsec discards since boot time because of a security policy violation.
InNotEnoughMemories	Specifies the number of ingress packets IPsec discards since boot time because not enough memory is available.
InAHESPReplays	Specifies the number of ingress packets IPsec discards since boot time because the encapsulating security payload (ESP) replay check fails.
InAHFailures	Specifies the number of ingress packets IPsec discards since boot time because the AH authentication check fails.
InESPFailures	Specifies the number of ingress packets IPsec discards since boot time because the ESP authentication check fails.
OutSuccesses	Specifies the number of egress packets IPsec successfully carries since boot time.
OutSPViolations	Specifies the number of egress packets IPsec discards since boot time because a security policy violation occurs.
OutNotEnoughMemories	Specifies the number of egress packets IPsec discards since boot time because not enough memory is available since boot time.
generalError	Specifies a general error.
InAHSuccesses	Specifies the number of ingress packets IPsec carries because the AH authentication succeeds.
InESPSuccesses	Specifies the number of ingress packets IPsec carries since boot time because the ESP authentication succeeds.
OutAHSuccesses	Specifies the number of egress packets IPsec successfully carries since boot time.
OutESPSuccesses	Specifies the number of egress packets IPsec successfully carries since boot time.
OutKBytes	Specifies the total number of kilobytes on egress.
OutBytes	Specifies the total number of bytes on egress.

Parameter	Description
InKBytes	Specifies the total number of bytes on ingress.
InBytes	Specifies the total number of bytes on ingress.
TotalPacketsProcessed	Specifies the total number of packets processed.
TotalPacketsByPassed	Specifies the total number of packets bypassed.
OutAHFailures	Specifies the number of egress packets IPsec discards since boot time because the AH authentication check fails.
OutESPFailures	Specifies the number of egress packets IPsec discards since boot time because the ESP authentication check fails.
InMD5Hmacs	Specifies the number of inbound HMAC MD5 occurrences since boot time.
InSHA1Hmacs	Specifies the number of inbound HMAC SHA1 occurrences since boot time.
InAESXCBCs	Specifies the number of inbound AES XCBC MAC occurrences since boot time.
InAnyNullAuth	Specifies the number of inbound null authentication occurrences since boot time.
In3DESCBCs	Specifies the number of inbound 3DES CBC occurrences since boot time.
InAESCBCs	Specifies the number of inbound AES CBC occurrences since boot time.
InAESCTRs	Specifies the number of inbound AES CTR occurrences since boot time.
InAnyNullEncrypt	Specifies the number of inbound null occurrences since boot time. Used for debugging purposes.
OutMD5Hmacs	Specifies the number of outbound HMAC MD5 occurrences since boot time.
OutSHA1Hmacs	Specifies the number of outbound HMAC SHA1 occurrences since boot time.
OutAESXCBCs	Specifies the number of outbound AES XCBC MAC occurrences since boot time.
OutInAnyNullAuth	Specifies the number of outbound null authentication occurrences since boot time.
Out3DESCBCs	Specifies the number of outbound 3DES CBC occurrences since boot time.
OutAESCBCs	Specifies the number of outbound AES CBC occurrences since boot time.
OutAESCTRs	Specifies the number of outbound AES CTR occurrences since boot time.

Parameter	Description
OutInAnyNullEncrypt	Specifies the number of outbound null occurrences since boot time. Used for debugging purposes.

The following table describes the fields in the output for the show ipsec statistics gigabitethernet {slot/port[-slot/port][,...]} and show statistics loopback <1-256> commands.

Parameter	Description
Ifindex	Specifies the interface.
InSuccesses	Specifies the number of ingress packets IPsec successfully carries.
InSPViolations	Specifies the number of ingress packets IPsec discards since boot time because of a security policy violation.
InNotEnoughMemories	Specifies the number of ingress packets IPsec discards since boot time because not enough memory is available.
InAHESPReplays	Specifies the number of ingress packets IPsec discards since boot time because the encapsulating security payload (ESP) replay check fails.
InAHFailures	Specifies the number of ingress packets IPsec discards since boot time because the AH authentication check fails.
InESPFailures	Specifies the number of ingress packets IPsec discards since boot time because the ESP authentication check fails.
OutSuccesses	Specifies the number of egress packets IPsec successfully carries since boot time.
OutSPViolations	Specifies the number of egress packets IPsec discards since boot time because a security policy violation occurs.
OutNotEnoughMemories	Specifies the number of egress packets IPsec discards since boot time because not enough memory is available since boot time.
generalError	Specifies a general error.

The following table describes the fields in the output for the show ipsec statistics vlan <1-4059> command.

Parameter	Description
Ifindex	Specifies the interface.
InSuccesses	Specifies the number of ingress packets IPsec successfully carries.

Parameter	Description
InSPViolations	Specifies the number of ingress packets IPsec discards since boot time because of a security policy violation.
InNotEnoughMemories	Specifies the number of ingress packets IPsec discards since boot time because not enough memory is available.
InAHESPReplays	Specifies the number of ingress packets IPsec discards since boot time because the encapsulating security payload (ESP) replay check fails.
InAHFailures	Specifies the number of ingress packets IPsec discards since boot time because the AH authentication check fails.
InESPFailures	Specifies the number of ingress packets IPsec discards since boot time because the ESP authentication check fails.
OutSuccesses	Specifies the number of egress packets IPsec successfully carries since boot time.
OutSPViolations	Specifies the number of egress packets IPsec discards since boot time because a security policy violation occurs.
OutNotEnoughMemories	Specifies the number of egress packets IPsec discards since boot time because not enough memory is available since boot time.
generalError	Specifies a general error.

The following table describes the fields in the output for the show ipsec statistics mgmtethernet command.

Parameter	Description
Ifindex	Specifies the interface.
InSuccesses	Specifies the number of ingress packets IPsec successfully carries.
InSPViolations	Specifies the number of ingress packets IPsec discards since boot time because of a security policy violation.
InNotEnoughMemories	Specifies the number of ingress packets IPsec discards since boot time because not enough memory is available.
InAHESPReplays	Specifies the number of ingress packets IPsec discards since boot time because the AH replay check fails.

Parameter	Description
InESPReplays	Specifies the total number of ingress packets IPsec discards since boot time because the encapsulating security payload (ESP) replay check fails.
InAHFailures	Specifies the number of ingress packets IPsec discards since boot time because the AH authentication check fails.
InESPFailures	Specifies the number of ingress packets IPsec discards since boot time because the ESP authentication check fails.
OutSuccesses	Specifies the number of egress packets IPsec successfully carries since boot time.
OutSPViolations	Specifies the number of egress packets IPsec discards since boot time because a security policy violation occurs.
OutNotEnoughMemories	Specifies the number of egress packets IPsec discards since boot time because not enough memory is available since boot time.
generalError	Specifies a general error.

Viewing IPv6 VRRP statistics

View IPv6 VRRP statistics to monitor network performance

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. View statistics for the device and for all interfaces:

show ipv6 vrrp statistics [link-local WORD<0-127>]] [vrid <1-255>]

Example

View IPv6 VRRP statistics for VRID 1.

1	85	0	0	0	
1	86	0	0	0	
1	87	0	0	0	
1	1001	0	0	0	
VRID	P/V	PRIO_0_SENT	INVALID_TYPE	_ERR ADDRESS_LIST_ERR UNKNOWN_AUTHTYPE	
More $(q = quit)$					

Variable definitions

Use the data in the following table to use the show ipv6 vrrp statistics command.

Variable	Value
link-local WORD<0-127>	Shows statistics for a specific link-local address.
vrid <1–255>	Shows statistics for a specific VRID.

Job aid

The following table describes the output for the show ipv6 vrrp statistics command.

Table 32: show ipv6 vrrp statistics command output

Heading	Description
CHK_SUM_ERR	Shows the number of VRRP packets received with an invalid VRRP checksum value.
VERSION_ERR	Shows the number of VRRP packets received with an unknown or unsupported version number.
VRID_ERR	Shows the number of VRRP packets received with an invalid VrID for this virtual router.
BECOME_MASTER	Shows the total number of times that the state of this virtual router has transitioned to master. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
ADVERTISE_RCV	Shows the total number of VRRP advertisements received by this virtual router. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
ADVERTISE_INT_ERR	Shows the total number of VRRP advertisement packets received for which the advertisement interval is different than the one configured for the local virtual router. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of DiscontinuityTime.

Heading	Description
TTL_ERR	Shows the total number of VRRP packets received by the virtual router with IPv4 TTL (for VRRP over IPv4) or IPv6 Hop Limit (for VRRP over IPv6) not equal to 255. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
PRIO_0_RCV	Shows the total number of VRRP packets received by the virtual router with a priority of 0. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
PRIO_0_SENT	Shows the total number of VRRP packets sent by the virtual router with a priority of 0. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
INVALID_TYPE_ERR	Shows the number of VRRP packets received by the virtual router with an invalid value in the 'type' field. Discontinuities in the value of this counter can occur at reinitialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
ADDRESS_LIST_ERR	Shows the total number of packets received for which the address list does not match the locally configured list for the virtual router. Discontinuities in the value of this counter can occur at reinitialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
UNKNOWN_AUTHTYPE	Shows the total number of packets received with an unknown authentication type.
PACKLEN_ERR	Shows the total number of packets received with a packet length less than the length of the VRRP header. Discontinuities in the value of this counter can occur at reinitialization of the management system, and at other times as indicated by the value of DiscontinuityTime.

Showing the EAPoL status of the device

Display the current device configuration.



Note:

Use the clear-stats command to clear EAP or NEAP statistics.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. Display the current device configuration by using the following command:

```
show eapol system
```

Example

```
Switch:1#show eapol system

Eapol System

eap: enabled

non-eap-pwd-fmt: ip-addr.mac-addr.port-number

non-eap-pwd-fmt key:
non-eap-pwd-fmt padding: disabled
```

Showing EAPoL authenticator statistics

Display the authenticator statistics to manage network performance.



Use the clear-stats command to clear EAP or NEAP statistics.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. Display the authenticator statistics:

```
show eapol auth-stats interface [gigabitEthernet [{slot/port[/sub-
port][-slot/port[/sub-port]][,...]}]]
```

Example



Slot and port information can differ depending on hardware platform.

Switch: 1#show eapol auth-stats interface

			Eap	o Authei	nticator	Statist	tics	
PORT	EAP RCVD	AUTH-EAP TX	START RCVD	LOGOFF RCVD	INVALID FRAMES	LENGTH ERROR	LAST-RX VER	LAST-RX SRC
1/1	716	1074	0	0	0	0	1	18:a9:05:b1:04:ce
1/2	0	0	0	0	0	0	0	00:00:00:00:00:00
1/3	0	0	0	0	0	0	0	00:00:00:00:00:00
1/4	0	5	0	0	0	0	0	00:00:00:00:00:00
1/5	0	0	0	0	0	0	0	00:00:00:00:00:00
1/6	0	0	0	0	0	0	0	00:00:00:00:00:00
1/7	0	0	0	0	0	0	0	00:00:00:00:00:00
1/8	0	0	0	0	0	0	0	00:00:00:00:00:00
1/9	0	0	0	0	0	0	0	00:00:00:00:00:00

1/10 0	0	0	0	0	0	0	00:00:00:00:00
More (q = quit)						

Variable definitions

Use the data in the following table to use the show eapol auth-stats interface command.

Variable	Value
{slot/port[/sub-port][-slot/ port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the subport in the format slot/port/sub-port.

Job aid

The following table describes the output for the show eapol auth-stats interface command.

Table 33: show eapol auth-stats interface field descriptions

Parameter	Description
PORT	Displays the port number in use.
EAP RCVD	Displays the number of EAPoL-EAP frames received by this Authenticator.
AUTH-EAP TX	Displays the number of EAPoL-EAP frames transmitted by the Authenticator.
START RCVD	Displays the number of EAPoL start frames received by this Authenticator.
LOGOFF RCVD	Displays the number of EAPoL logoff frames received by this Authenticator.
INVALID FRAMES	Displays the number of EAPoL frames received by this Authenticator in which the frame type is not recognized.
LENGTH ERROR	Displays the number of EAPoL frames received by this Authenticator in which the Packet Body Length field is invalid.
LAST-RX VER	Displays the last received version of the EAPoL frame by this Authenticator.
LAST-RX SRC	Displays the source MAC address of the last received EAPoL frame by this Authenticator.

Viewing EAPoL session statistics

View EAPoL session statistics to manage network performance.



Use the clear-stats command to clear EAP/NEAP statistics.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. Display the session statistics:

```
show eapol session—stats interface [gigabitEthernet [{slot/port[/
sub-port][-slot/port[/sub-port]][,...]}]
```

Example

Switc	h:1#shc	w eapol se	ession-stats	interface			
			Eap Authent	icator Session St	atistics		
PORT NUM	MAC	SESSION ID	AUTHENTIC METHOD	SESSION TIME	TERM CAUS	INATE E	USER NAME
1/1 sachi		05:b1:04:d	ce cb0000	00 remote-server	0 day(s), 05:58:	16 not-terminated
1/4	00:00:	00:00:00:0	01 cb0000	02 remote-server	0 day(s), 05:48:	01 not-terminated

Variable definitions

Use the data in the following table to use the **show eapol session-stats interface** command.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the subport in the format slot/port/sub-port.

Job aid

The following table describes the output for the **show eapol session-stats interface** command.

Table 34: show eapol session-stats interface field descriptions

Parameter	Description
PORT NUM	Displays the port number in use.
MAC	Displays the MAC address of the client.
USER NAME	Displays the user name of the Supplicant Authenticator Port Access Entity (PAE).
SESSION ID	Displays a unique identifier for the session.
AUTHENTIC METHOD	Displays the authentication method (remote or local RADIUS server) used to establish the session.

Parameter	Description
SESSION TIME	Displays the duration of the session (in seconds).
TERMINATE CAUSE	Displays the reason the session terminated.

Viewing non-EAPoL MAC information

Use this procedure to view non-EAPoL client MAC information on a port.



Use the clear-stats command to clear EAP/NEAP statistics.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. Display the non-EAPoL MAC information:

show eapol multihost non-eap-mac status [vlan <1-4059>][{slot/port[/ sub-port][-slot/port[/sub-port]][,...]}]

Example

Switch:1#show eapol m	ultihost non-eap-mac st	atus
Non-Eap Oper Status		
PORT MAC NUM	STATE	VLAN ID
1/3 00:00:00:11:22:33	RADIUS-Authenticated	250

Variable definitions

Use the data in the following table to use the show eapol multihost non-eap-mac status command.

Variable	Value
{slot/port[/sub-port][-slot/port[/sub-port]][,]}	Identifies the slot and port in one of the following formats: a single slot and port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the subport in the format slot/port/sub-port.
<1-4059>	Specifies the VLAN ID in the range of 1 to 4059. By default, VLAN IDs 1 to 4059 are configurable and the system reserves VLAN IDs 4060 to 4094 for internal use. On switches that support the vrf-scaling and spbm-config-mode boot configuration flags, if you enable these flags, the system also reserves VLAN IDs 3500 to 3998. VLAN ID 1 is the default VLAN and you cannot create or delete VLAN ID 1.

Job aid

The following table describes the output for the show eapol multihost non-eap-mac status command.

Table 35: show eapol multihost non-eap-mac status field descriptions

Parameter	Description
PORT NUM	Displays the port number in use.
MAC	Displays the MAC address of the client.
STATE	Indicates the authentication status of the non EAP host that is authenticated using radius server.
VLAN ID	Indicates the VLAN assigned to the client.

Viewing port EAPoL operation statistics

Use this procedure to view port EAPoL operation statistics.



Use the clear-stats command to clear EAP/NEAP statistics.

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. Display the port EAPoL operation statistics information:

```
show eapol status interface [gigabitEthernet [{slot/port[/sub-port]
[-slot/port[/sub-port]][,...]}] [vlan <1-4059>]
```

Example

Switc	h:1#show eapol status	interface	
Eap Oper Stats			
PORT NUM	MAC	PAE STATUS	VLAN ID
1/1	18:a9:05:b1:04:ce	authenticated	10
Total	Fotal Number of EAP sessions : 1		

Variable definitions

Use the data in the following table to use the show eapol status command.

Variable	Value
{slot/port[/sub-port][-slot/	Identifies the slot and port in one of the following formats: a single slot and
port[/sub-port]][,]}	port (slot/port), a range of slots and ports (slot/port-slot/port), or a series of

Variable	Value
	slots and ports (slot/port,slot/port,slot/port). If your platform supports channelization and the port is channelized, you must also specify the subport in the format slot/port/sub-port.
<1-4059>	Specifies the VLAN ID for which to show the statistics.

Job aid

The following table describes the output for the show eapol status interface command.

Table 36: show eapol status interface field descriptions

Parameter	Description
PORT NUM	Displays the port number in use.
MAC	Displays the MAC address of the client.
PAE STATUS	Indicates the current state of the authenticator PAE state machine.
VLAN ID	Indicates the VLAN assigned to the client.

Viewing IP multicast threshold exceeded statistics

Procedure

- 1. Log on to the switch to enter User EXEC mode.
- 2. View statistics:

show sys stats ipmc-threshold-exceeded-cnt



Note:

The command show sys stats ipmc-threshold-exceeded-cnt is not supported on all hardware platforms. For more information, see *Release Notes*.

Example

```
Switch: 1#show sys stats ipmc-threshold-exceeded-cnt
            SourceGroupThresholdExceeded: 7372
            EgressStreamThresholdExceeded: 7331
```

Viewing statistics using EDM

Use statistics to help monitor the performance of the switch.

About this task

To reset all statistics counters, click **Clear Counters**. After you click this button, all Cumulative, Average, Minimum, Maximum, and LastVal columns reset to zero, and automatically begin to recalculate statistical data.

Important:

The **Clear Counters** function does not affect the AbsoluteValue counter for the device. The **Clear Counters** function clears all cached data in EDM except AbsoluteValue. Perform the following steps to reset AbsoluteValues.

Procedure

- 1. In the Device Physical View tab, select the Device.
- 2. In the navigation pane, expand the **Configuration** > **Edit** folders.
- 3. Click Chassis.
- 4. Click the **System** tab.
- 5. In ActionGroup1, select resetCounters, and then click Apply.

Graphing chassis statistics

Create graphs of chassis statistics to generate a visual representation of your data.

Procedure

- 1. In the Device Physical View, select the chassis.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Chassis.
- 4. On the Graph Chassis tab, select the tab with the data you want to graph:
 - System
 - SNMP
 - IP
 - ICMP In
 - ICMP Out
 - TCP
 - UDP
- 5. Select the statistic you want to graph.
- 6. Select the graph type:
 - line chart
 - · area chart
 - · bar chart
 - pie chart

Graphing port statistics

You can create a graph of the port statistics to generate a visual representation of your data.

Procedure

- 1. In the Device Physical View, select the port or ports for which you want to create a graph.
- 2. In the navigation pane, expand the Configuration > Graph folders, and then click Port.
 OR, use the following shortcut:
 - Right-click the selected port or ports from Step 1, and choose **Graph**.
- 3. On the **Graph Port** tab for the selected port or ports, select the item you want to graph.
- 4. Click an icon to select the type of graph you require. The following list provides the graph types available:
 - Line Chart
 - · Area Chart
 - · Bar Chart
 - · Pie Chart

Viewing chassis system statistics

Use the following procedure to create graphs for chassis statistics.

Procedure

- 1. In the Device Physical View, select the chassis.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Chassis.
- 4. Click the **System** tab.

System field descriptions

The following table describes the fields on the **System** tab.

Name	Description
MemUsed	The percentage of memory space used.
	Only the AbsoluteValue column is valid in the System tab. All other columns display as N/A because they are percentages and not actual memory counters.
MemFree	The amount in kilobytes of free memory.
CpuUtil	Percentage of CPU utilization.

Viewing chassis SNMP statistics

View chassis SNMP statistics to monitor network performance.

Procedure

- 1. In the Device Physical View, select the chassis.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Chassis.
- 4. Click the **SNMP** tab.

SNMP field descriptions

The following table describes parameters on the **SNMP** tab.

Name	Description
InPkts	The number of messages delivered to the SNMP entity from the transport service.
OutPkts	The number of SNMP messages passed from the SNMP protocol entity to the transport service.
InTotalReqVars	The number of MIB objects retrieved successfully by the SNMP protocol entity as the result of receiving valid SNMP Get-Request and Get-Next PDUs.
InTotalSetVars	The number of MIB objects altered successfully by the SNMP protocol entity as the result of receiving valid SNMP Set-Request PDUs.
InGetRequests	The number of SNMP Get-Request PDUs the SNMP protocol accepts and processes.
OutGetRequests	The number of SNMP Get-Request PDUs that are generated by the SNMP protocol entity.
InGetNexts	The number of SNMP Get-Next PDUs the SNMP protocol accepts and processes.
OutGetNexts	The number of SNMP Get-Next PDUs that are generated by the SNMP protocol entity.
InSetRequests	The number of SNMP Set-Request PDUs the SNMP protocol accepts and processes.
OutSetRequests	The number of SNMP Set-Request PDUs that are generated by the SNMP protocol entity.
InGetResponses	The number of SNMP Get-Response PDUs the SNMP protocol accepts and processes.
OutGetResponses	The number of SNMP Get-Response PDUs that are generated by the SNMP protocol entity.
InTraps	The number of SNMP Trap PDUs the SNMP protocol accepts.

Name	Description
OutTraps	The number of SNMP Trap PDUs the SNMP protocol generates.
OutTooBigs	The number of SNMP PDUs the SNMP protocol generates for which the value of the error-status field is tooBig.
OutNoSuchNames	The number of SNMP PDUs the SNMP protocol generates for which the value of the error-status field is noSuchName.
OutBadValues	The number of SNMP PDUs the SNMP protocol generates for which the value of the error-status field is badValue.
OutGenErrs	The number of SNMP PDUs the SNMP protocol generates for which the value of the error-status field is genErr.
InBadVersions	The number of SNMP messages delivered to the SNMP protocol entity for an unsupported SNMP version.
InBadCommunityNames	The number of SNMP messages delivered to the SNMP protocol entity that used an SNMP community name not known to said entity.
InBadCommunityUses	The number of SNMP messages delivered to the SNMP protocol entity that represented an SNMP operation not allowed by the SNMP community named in the message.
InASNParseErrs	The number of ASN.1 or BER errors the SNMP protocol encountered when decoding received SNMP messages.
InTooBigs	The number of SNMP PDUs delivered to the SNMP protocol entity for which the value of the error-status field is tooBig.
InNoSuchNames	The number of SNMP PDUs delivered to the SNMP protocol entity for which the value of the error-status field is noSuchName.
InBadValues	The number of SNMP PDUs delivered to the SNMP protocol entity for which the value of the error-status field is badValue.
InReadOnlys	The number of SNMP PDUs delivered to the SNMP protocol entity for which the value of the error-status field is readOnly. It is a protocol error to generate an SNMP PDU containing the value "readOnly" in the error-status field. This object is provided to detect incorrect implementations of the SNMP.
InGenErrs	The number of SNMP PDUs delivered to the SNMP protocol entity for which the value of the error-status field is genErr.

Viewing chassis IP statistics

View chassis IP statistics to monitor network performance.

Procedure

- 1. In the Device Physical View, select the chassis.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Chassis.

4. Click the IP tab.

IP field descriptions

The following table describes parameters on the $\ensuremath{\mathbf{IP}}$ tab.

Name	Description
InReceives	The number of input datagrams received from interfaces, including those received in error.
InHdrErrors	The number of input datagrams discarded due to errors in the IP headers, including bad checksums, version number mismatch, other format errors, time-to-live exceeded, errors discovered in processing their IP options.
InAddrErrors	The number of input datagrams discarded because the IP address in the IP header destination field was not a valid address to be received at this entity. This count includes invalid addresses (for example, 0.0.0.0) and addresses of unsupported Classes (for example, Class E). For entities that are not IP Gateways and therefore do not forward datagrams, this counter includes datagrams discarded because the destination address was not a local address.
ForwDatagrams	The number of input datagrams for which this entity was not their final IP destination, as a result of which an attempt was made to find a route to forward them to that final destination. In entities that do not act as IP Gateways, this counter includes only those packets that were Source-Routed by way of this entity and had successful Source-Route option processing.
InUnknownProtos	The number of locally addressed datagrams received successfully but discarded because of an unknown or unsupported protocol.
InDiscards	The number of input IP datagrams for which no problems were encountered to prevent their continued processing but that were discarded (for example, for lack of buffer space). This counter does not include any datagrams discarded while awaiting reassembly.
InDelivers	The number of input datagrams successfully delivered to IP user-protocols (including ICMP).
OutRequests	The number of IP datagrams that local IP user-protocols (including ICMP) supplied to IP in requests for transmission. This counter does not include any datagrams counted in ipForwDatagrams.
OutDiscards	The number of output IP datagrams for which no problem was encountered to prevent their transmission to their destination, but that were discarded (for example, for lack of buffer space). This counter includes datagrams counted in ipForwDatagrams if any such packets met this (discretionary) discard criterion.
OutNoRoutes	The number of IP datagrams discarded because no route was found to transmit them to their destination. This counter includes any packets counted in ipForwDatagrams that meet this no-route criterion. This counter includes any datagrams a host cannot route because all default gateways are down.

Name	Description
FragOKs	The number of IP datagrams that were successfully fragmented at this entity.
FragFails	The number of IP datagrams that were discarded because they needed to be fragmented at this entity but can not be, for example, because the Don't Fragment flags were set.
FragCreates	The number of IP datagram fragments that were generated as a result of fragmentation at this entity.
ReasmReqds	The number of IP fragments received that needed to be reassembled at this entity.
ReasmOKs	The number of IP datagrams successfully reassembled.
ReasmFails	The number of failures detected by the IP reassembly algorithm (for whatever reason: timed out, errors, and so on). This number is not necessarily a count of discarded IP fragments because some algorithms (notably the algorithm in RFC 815) can lose track of the number of fragments by combining them as they are received.

Viewing chassis ICMP In statistics

View chassis ICMP In statistics to monitor network performance.

Procedure

- 1. In the Device Physical View, select the chassis.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Chassis.
- 4. Click the ICMP In tab.

ICMP In field descriptions

The following table describes parameters on the **ICMP In** tab.

Name	Description
SrcQuenchs	The number of ICMP Source Quench messages received.
Redirects	The number of ICMP Redirect messages received.
Echos	The number of ICMP Echo (request) messages received.
EchoReps	The number of ICMP Echo Reply messages received.
Timestamps	The number of ICMP Timestamp (request) messages received.
TimestampReps	The number of ICMP Timestamp Reply messages received.
AddrMasks	The number of ICMP Address Mask Request messages received.
AddrMaskReps	The number of ICMP Address Mask Reply messages received.

Name	Description
ParmProbs	The number of ICMP Parameter Problem messages received.
DestUnreachs	The number of ICMP Destination Unreachable messages received.
TimeExcds	The number of ICMP Time Exceeded messages received.

Viewing chassis ICMP Out statistics

View chassis ICMP Out statistics to monitor network performance.

Procedure

- 1. In the Device Physical View, select the chassis.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Chassis.
- 4. Click the ICMP Out tab.

ICMP Out field descriptions

The following table describes parameters on the **ICMP Out** tab.

Name	Description
SrcQuenchs	The number of ICMP Source Quench messages sent.
Redirects	The number of ICMP Redirect messages received. For a host, this object is always zero, because hosts do not send redirects.
Echos	The number of ICMP Echo (request) messages sent.
EchoReps	The number of ICMP Echo Reply messages sent.
Timestamps	The number of ICMP Timestamp (request) messages sent.
TimestampReps	The number of ICMP Timestamp Reply messages sent.
AddrMasks	The number of ICMP Address Mask Request messages sent.
AddrMaskReps	The number of ICMP Address Mask Reply messages sent.
ParmProbs	The number of ICMP Parameter Problem messages sent.
DestUnreachs	The number of ICMP Destination Unreachable messages sent.
TimeExcds	The number of ICMP Time Exceeded messages sent.

Viewing chassis TCP statistics

View TCP statistics to monitor network performance.

Procedure

1. In the Device Physical View, select the chassis.

- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Chassis.
- 4. Click the **TCP** tab.

TCP field descriptions

The following table describes parameters on the **TCP** tab.

Name	Description
ActiveOpens	The number of times TCP connections made a direct transition to the SYN-SENT state from the CLOSED state.
PassiveOpens	The number of times TCP connections made a direct transition to the SYN-RCVD state from the LISTEN state.
AttemptFails	The number of times TCP connections made a direct transition to the CLOSED state from either the SYN-SENT state or the SYN-RCVD state, plus the number of times TCP connections made a direct transition to the LISTEN state from the SYN-RCVD state.
EstabResets	The number of times TCP connections made a direct transition to the CLOSED state from either the ESTABLISHED state or the CLOSE-WAIT state.
CurrEstab	The number of TCP connections for which the current state is either ESTABLISHED or CLOSE-WAIT.
InSegs	The number of segments received, including those received in error. This count includes segments received on currently established connections.
OutSegs	The number of segments sent, including those on current connections, but excluding those containing only retransmitted octets.
RetransSegs	The number of segments retransmitted that is, the number of TCP segments transmitted containing one or more previously transmitted octets.
InErrs	The number of segments received in error (for example, bad TCP checksums).
OutRsts	The number of TCP segments sent containing the RST flag.
HCInSegs	The number of segments received, including those received in error. This count includes segments received on currently established connections. This object is the 64-bit equivalent of InSegs.
HCOutSegs	The number of segments sent, including those on current connections, but excluding those containing only retransmitted octets. This object is the 64-bit equivalent of OutSegs.

Viewing chassis UDP statistics

Display User Datagram Protocol (UDP) statistics to see information about the UDP datagrams.

Procedure

- 1. In the Device Physical View, select the chassis.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Chassis.
- 4. Click the **UDP** tab.
- 5. Select the information you want to graph.
- 6. Select the type of graph you want:
 - line
 - · area
 - bar
 - pie
- 7. To clear counters, click **Clear Counters**. Discontinuities in the value of these counters can occur when the management system reinitializes, and at other times as indicated by discontinuities in the value of sysUpTime.

UDP field descriptions

Use the data in the following table to use the **UDP** tab.

Name	Description
NoPorts	The number of received UDP datagrams with no application at the destination port.
	Discontinuities in the value of this counter can occur at reinitialization of the management system, and at other times as indicated by discontinuities in the value of sysUpTime.
InErrors	The number of received UDP datagrams that were not delivered for reasons other than the lack of an application at the destination port.
	Discontinuities in the value of this counter can occur at reinitialization of the management system and at other times as indicated by discontinuities in the value of sysUpTime.
InDatagrams	The number of UDP datagrams delivered to UDP users, for devices that can receive more than 1 000 000 UDP datagrams for each second.
	Discontinuities in the value of this counter can occur at reinitialization of the management system, and at other times as indicated by discontinuities in the value of sysUpTime.
OutDatagrams	The number of UDP datagrams sent from this entity.
	Discontinuities in the value of this counter can occur at reinitialization of the management system, and at other times as indicated by discontinuities in the value of sysUpTime.

Name	Description
HCInDatagrams	The number of TCP connections for which the current state is either ESTABLISHED or CLOSE-WAIT.
HCOutDatagrams	The number of UDP datagrams sent from this entity, for devices that can transmit more than 1 million UDP datagrams for each second.
	Discontinuities in the value of this counter can occur at reinitialization of the management system, and at other times as indicated by discontinuities in the value of sysUpTime.

Viewing port interface statistics

View port interface statistics to manage network performance.

Procedure

- 1. In the Device Physical View, select a port.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Port.
- 4. Click the Interface tab.

Interface field descriptions

The following table describes parameters on the Interface tab.

Name	Description
InOctets	Specifies the number of octets received on the interface, including framing characters.
OutOctets	Specifies the number of octets transmitted from the interface, including framing characters.
InUcastPkts	Specifies the number of packets delivered by this sublayer to a higher sublayer that were not addressed to a multicast or broadcast address at this sublayer.
OutUcastPkts	Specifies the number of packets that higher-level protocols requested be transmitted that were not addressed to a multicast address at this sublayer. The total number includes those packets discarded or not sent.
InMulticastPkts	Specifies the number of packets delivered by this sublayer to a higher sublayer that were addressed to a multicast address at this sublayer. For a MAC layer protocol, this number includes both group and functional addresses.
OutMulticastPkts	Specifies the number of packets that higher-level protocols requested be transmitted, and that are addressed to a multicast address at this sublayer, including those that were discarded or not sent. For a MAC

Name	Description
	layer protocol, this number includes both group and functional addresses.
InBroadcastPkts	Specifies the number of packets delivered by this sublayer to a higher sublayer that are addressed to a broadcast address at this sublayer.
OutBroadcastPkts	Specifies the number of packets that higher-level protocols requested be transmitted, and that were addressed to a broadcast address at this sublayer, including those that were discarded or not sent.
InDiscards	Specifies the number of inbound packets that are discarded because of frames with errors or invalid frames or, in some cases, to fill up buffer space.
InErrors	For packet-oriented interfaces, specifies the number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol. For character-oriented or fixed-length interfaces, the number of inbound transmission units that contained errors preventing them from being deliverable to a higher-layer protocol.
InUnknownProtos	For packet-oriented interfaces, specifies the number of packets received through the interface that are discarded because of an unknown or unsupported protocol. For character-oriented or fixed-length interfaces that support protocol multiplexing, the number of transmission units received through the interface that were discarded because of an unknown or unsupported protocol. For any interface that does not support protocol multiplexing, this counter is always 0.
HCInPfcPkts	Specifies the total number of Priority Flow Control (PFC) packets received by this interface. This number does not increment for port-level flow control.
HCOutPfcPkts	Specifies the total number of PFC packets transmitted by this interface. This number does not increment for port-level flow control.
InFlowCtrlPkts	Specifies the number of port-level flow control packets received by this interface.
OutFlowCtrlPkts	Specifies the number of port-level flow control packets transmitted by this interface.
InPfcPkts	Specifies the total number of port-level flow control packets received by this interface.
OutPfcPkts	Specifies the total number of port-level flow control packets transmitted by this interface.
NumStateTransition	Specifies the number of times the port went in and out of service; the number of state transitions from up to down.

Viewing port Ethernet errors statistics

View port Ethernet errors statistics to manage network performance.

Procedure

- 1. In the Device Physical View, select a port.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Port.
- 4. Click the **Ethernet Errors** tab.

Ethernet Errors field descriptions

The following table describes parameters on the **Ethernet Errors** tab.

Name	Description
AlignmentErrors	Specifies acount of frames received on a particular interface that are not an integral number of octets in length and do not pass the FCS check. The count represented by an instance of this object increments when the alignmentError status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions obtain are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.
FCSErrors	Specifies a count of frames received on a particular interface that are an integral number of octets in length but do not pass the FCS check. The count represented by an instance of this object increments when the frameCheckError status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions obtained are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.
InternalMacTransmitErrors	Specifies a count of frames for which transmission on a particular interface fails due to an internal MAC sublayer transmit error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of either the LateCollisions object, the ExcessiveCollisions object, or the CarrierSenseErrors object. The precise meaning of the count represented by an instance of this object is implementation-specific. In particular, an instance of this object can represent a count of transmission errors on a particular interface that are not otherwise counted.
InternalMacReceiveErrors	Specifies a count of frames for which reception on a particular interface fails due to an internal MAC sublayer receive error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of either the FrameTooLongs object, the AlignmentErrors object, or the FCSErrors object. The precise meaning of the count represented by an instance of this object is implementation-specific. In particular, an instance of this object can represent a count of receive errors on a particular interface that are not otherwise counted.

Name	Description
CarrierSenseErrors	Specifies the number of times that the carrier sense condition is lost or not asserted when the switch attempts to transmit a frame on a particular interface. The count represented by an instance of this object increments at most once for each transmission attempt, even if the carrier sense condition fluctuates during a transmission attempt.
FrameTooLongs	Specifies a count of frames received on a particular interface that exceed the maximum permitted frame size. The count represented by an instance of this object increments when the frameTooLong status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions obtained are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.
SQETestErrors	Specifies a count of times that the SQE TEST ERROR message is generated by the PLS sublayer for a particular interface. The SQE TEST ERROR message is defined in section 7.2.2.2.4 of ANSI/IEEE 802.3-1985 and its generation described in section 7.2.4.6 of the same document.
DeferredTransmissions	Specifies a count of frames for which the first transmission attempt on a particular interface is delayed because the medium is busy. The count represented by an instance of this object does not include frames involved in collisions.
SingleCollisionFrames	Specifies a count of successfully transmitted frames on a particular interface for which transmission is inhibited by exactly one collision. A frame that is counted by an instance of this object is also counted by the corresponding instance of either the UcastPkts, MulticastPkts, or BroadcastPkts objects and is not counted by the corresponding instance of the MultipleCollisionFrames object.
MultipleCollisionFrames	Specifies a count of successfully transmitted frames on a particular interface for which transmission is inhibited by more than one collision. A frame that is counted by an instance of this object is also counted by the corresponding instance of either the UcastPkts, MulticastPkts, or BroadcastPkts objects and is not counted by the corresponding instance of the SingleCollisionFrames object.
LateCollisions	Specifies the number of times that a collision is detected on a particular interface later than 512 bit-times into the transmission of a packet; 512 corresponds to 51.2 microseconds on a 10 Mb/s system. A (late) collision included in a count represented by an instance of this object is also considered as a (generic) collision for purposes of other collision-related statistics.
ExcessiveCollisions	Specifies a count of frames for which transmission on a particular interface fails due to excessive collisions.
FrameTooShorts	Specifies the number of frames, encountered on this interface, that
	are too short.

Name	Description
PacketErrors	Specifies the number of packet errors encountered on this interface.
CarrierErrors	Specifies the number of carrier errors encountered on this interface.
LinklnactiveErrors	Specifies the number of link inactive errors encountered on this interface.

Viewing port bridging statistics

View port bridging errors statistics to manage network performance.



This tab is not available on all hardware platforms.

Procedure

- 1. In the Device Physical View, select a port.
- 2. In the navigation tree, expand the following folders: **Configuration > Graph**.
- 3. Click Port.
- 4. Click the **Bridging** tab.

Bridging field descriptions

The following table describes parameters on the **Bridging** tab.

Name	Description
InUnicastFrames	The number of incoming unicast frames bridged.
InMulticastFrames	The number of incoming multicast frames bridged.
InBroadcastFrames	The number of incoming broadcast frames bridged.
InDiscards	The number of frames discarded by the bridging entity.
OutFrames	The number of outgoing frames bridged.

Viewing port spanning tree statistics

View port spanning tree statistics to manage network performance.

Procedure

- 1. In the Device Physical View, select a port.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Port.
- 4. Click the **Spanning Tree** tab.

Spanning Tree field descriptions

The following table describes parameters on the **Spanning Tree** tab.

Name	Description
InConfigBpdus	The number of Config BPDUs received.
InTcnBpdus	The number of Topology Change Notifications BPDUs received.
InBadBpdus	The number of unknown or malformed BPDUs received.
OutConfigBpdus	The number of Config BPDUs transmitted.
OutTcnBpdus	The number of Topology Change Notifications BPDUs transmitted.

Viewing port routing statistics

View port routing statistics to manage network performance.



Note:

This tab is not available on all hardware platforms.

Procedure

- 1. In the Device Physical View, select a port.
- 2. In the navigation tree, expand the following folders: **Configuration > Graph**.
- 3. Click Port.
- 4. Click the **Routing** tab.

Routing field descriptions

Use the data in the following table to use the **Routing** tab.

Name	Description
InUnicastFrames	The number of incoming unicast frames routed.
InMulticastFrames	The number of incoming multicast frames routed.
InDiscards	The number of frames discarded by the routing entity.
OutUnicastFrames	The number of outgoing unicast frames routed.
OutMulticastFrames	The number of outgoing multicast frames routed.

Viewing DHCP statistics for an interface

View DHCP statistics to manage network performance.

Procedure

1. In the navigation pane, expand the **Configuration** > **IP** folders.

- 2. Click **DHCP Relay**.
- 3. Click the Interfaces Stats tab.

Interfaces Stats field descriptions

Use the data in the following table to use the **Interfaces Stats** tab.

Name	Description
IfIndex	Identifies the physical interface.
AgentAddr	Shows the IP address configured as the relay on this interface. This address is either the IP of the physical interface or the IP of the VRRP address.
NumRequests	Shows the number of DHCP and BootP requests on this interface.
NumReplies	Shows the number of DHCP and BootP replies on this interface.

Graphing DHCP statistics for a port

View DHCP statistics to manage network performance.

Procedure

- 1. In the Device Physical View, select a port.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Port.
- 4. Click the **DHCP** tab.
- 5. Select one or more values.
- 6. Click the type of graph to create.

DHCP field descriptions

The following table describes parameters on the **DHCP** tab.

Name	Description
NumRequests	The number of DHCP and/or BootP requests on this interface.
NumReplies	The number of DHCP and/or BootP replies on this interface.

Viewing DHCP statistics for a port

View DHCP statistics to manage network performance.

Procedure

1. In the Device Physical view, select a port.

- 2. In the navigation pane, expand the **Configuration > Edit > Port** folders.
- 3. Click IP.
- 4. Click the **DHCP Relay** tab.
- 5. Click Graph.
- 6. Select one or more values.
- 7. Click the type of graph.

DHCP Stats field descriptions

Use the data in the following table to use the **DHCP Stats** tab.

Name	Description
NumRequests	The number of DHCP and BootP requests on this interface.
NumReplies	The number of DHCP and BootP replies on this interface.

Graphing DHCP statistics for a VLAN

View DHCP statistics to manage network performance.

Procedure

- 1. In the navigation pane, expand the **Configuration > VLAN** folders.
- 2. Click VLANs.
- 3. On the **Basic** tab, select a VLAN.
- 4. Click IP.
- 5. Click the **DHCP Relay** tab.
- 6. Click Graph.
- 7. Select one or more values.
- 8. Click the type of graph.

DHCP Stats field descriptions

Use the data in the following table to use the **DHCP Stats** tab.

Name	Description
NumRequests	The number of DHCP and BootP requests on this interface.
NumReplies	The number of DHCP and BootP replies on this interface.

Displaying DHCP-relay statistics for Option 82

Display DHCP-relay statistics for all interfaces to manage network performance.

Procedure

- 1. In the navigation pane, expand the **Configuration** > **IP** folders.
- 2. Click DHCP-Relay.
- 3. Click the Option 82 Stats tab.

Option 82 Stats field descriptions

Use the data in the following table to use the Option 82 Stats tab.

Name	Description
IfIndex	Shows the name of the interface on which you enabled option 82. Shows the port number if the interface is a brouter port or the VLAN number if the interface is a VLAN.
AgentAddr	Shows the IP address configured as the relay on this interface. This address is either the IP of the physical interface or the IP of the VRRP address.
FoundOp82	Shows the number of packets that the interface received that already had option82 in them.
Dropped	Shows the number of packets the interface dropped because of option 82–related issues. These reasons could be that the packet was received from an untrusted source or spoofing was detected. To determine the cause of the drop, you must enable trace on level 170.
Circuitld	Shows the value inserted in the packets as the circuit ID. The value is the index of the interface.
AddedCircuitId	Shows how many packets (requests from client to server) the circuit ID was inserted for that interface.
	If you expect this value to increase but it does not, and the interface does not drop a packet, it is possible the packet does not have enough space to insert the option. You must enable trace on level 170 to determine the cause.
RemovedCircuitId	Shows how many packets (replies from server to client) the circuit id was removed for that interface.
Remoteld	Shows the value inserted in the packets as the remote ID. The value is the MAC address of the interface.

Name	Description
AddedRemoteld	Shows how many packets (requests from client to server) the remote ID was inserted for that interface.
	If you expect this value to increase but it does not, and the interface does not drop a packet, it is possible the packet does not have enough space to insert the option. You must enable trace on level 170 to determine the cause.
RemovedRemoteld	Shows how many packets (replies from server to client) the remote ID was removed for that interface.

Viewing port OSPF statistics

View port OSPF statistics to manage network performance.

Procedure

- 1. On the Device Physical View, select a port.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Port.
- 4. Click the **OSPF** tab.

OSPF field descriptions

The following table describes parameters on the **OSPF** tab.

Name	Description
VersionMismatches	Specifies the number of version mismatches received by this interface.
AreaMismatches	Specifies the number of area mismatches received by this interface.
AuthTypeMismatches	Specifies the number of authentication type mismatches received by this interface.
AuthFailures	Specifies the number of authentication failures.
NetmaskMismatches	Specifies the number of net mask mismatches received by this interface.
HelloIntervalMismatches	Specifies the number of hello interval mismatches received by this interface.
DeadIntervalMismatches	Specifies the number of dead interval mismatches received by this interface.
OptionMismatches	Specifies the number of option mismatches in the hello interval or dead interval fields received by this interface.

Name	Description
RxHellos	Specifies the number of hello packets received by this interface.
RxDBDescrs	Specifies the number of database descriptor packets received by this interface.
RxLSUpdates	Specifies the number of link state update packets received by this interface.
RxLSReqs	Specifies the number of link state request packets received by this interface.
RxLSAcks	Specifies the number of link state acknowledge packets received by this interface.
TxHellos	Specifies the number of hello packets transmitted by this interface.
TxDBDescrs	Specifies the number of database descriptor packets transmitted by this interface.
TxLSUpdates	Specifies the number of link state update packets transmitted by this interface.
TxLSReqs	Specifies the number of link state request packets transmitted by this interface.
TxLSAcks	Specifies the number of link state acknowledge packets transmitted by this interface.

Viewing LACP port statistics

View LACP port statistics to monitor the performance of the port.

Procedure

- 1. In the Device Physical View, select a port.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Port.
- 4. Click the **LACP** tab.
- 5. To change the poll interval, in the toolbar click the **Poll Interval** box, and then select a new interval.

LACP field descriptions

Use the data in the following table to view the LACP statistics.

Name	Description
LACPDUsRx	The number of valid LACPDU received on this aggregation port.
MarkerPDUsRx	The number of valid marker PDUs received on this aggregation port.

Name	Description
MarkerResponsePDUsRx	The number of valid marker response PDUs received on this aggregation port.
UnknownRx	The number of frames received that either:
	carry Slow Protocols Ethernet type values, but contain an unknown PDU.
	are addressed to the Slow Protocols group MAC Address, but do not carry the Slow Protocols Ethernet Type.
IllegalRx	The number of frames received that carry the Slow Protocols Ethernet Type value (43B.4), but contain a badly formed PDU or an illegal value of Protocol Subtype (43B.4).
LACPDUsTx	The number of LACPDUs transmitted on this aggregation port.
MarkerPDUsTx	The number of marker PDUs transmitted on this aggregation port.
MarkerResponsePDUsTx	The number of marker response PDUs transmitted on this aggregation port.

Viewing port policer statistics

View port policer statistics to manage network performance.

This tab does not appear for all hardware models.

Procedure

- 1. In the navigation pane, expand the **Configuration > Graph** folders.
- 2. Click Port.
- 3. Click the Policer tab.

Policer field descriptions

Use the data in the following table to use the **Policer** tab.

Name	Description
TotalPkts	Shows the total number of packets received on the port.
TotalBytes	Shows the total number of bytes received on the port.
YellowBytes	Shows the total number of bytes received on the port that were above the committed rate but below the peak rate.
RedBytes	Shows the total number of bytes received on the port that were above the peak rate.

Displaying file statistics

Display the amount of memory used and available for onboard flash memory, as well as the number of files.

Procedure

- 1. In the navigation pane, expand the **Configuration > Edit** folders.
- 2. Click File System.
- 3. Click the Storage Usage tab.

Storage Usage field descriptions

Use the data in the following table to use the Storage Usage tab.

Name	Description
IntflashBytesUsed	Specifies the number of bytes used in internal flash memory.
IntflashBytesFree	Specifies the number of bytes available for use in internal flash memory.
IntflashNumFiles	Specifies the number of files in internal flash memory.
UsbBytesUsed	Specifies the number of bytes used in USB device.
UsbBytesFree	Specifies the number of bytes available for use in USB device.
UsbNumFiles	Specifies the number of files in USB device.

Viewing ACE port statistics

About this task

Use port statistics to ensure that the ACE is operating correctly.

Procedure

- 1. In the navigation pane, expand the **Configuration > Security > Data Path** folders.
- 2. Click Advanced Filters (ACE/ACLs).
- 3. Click the ACL tab.
- 4. Select a field on the **ACL** tab.
- 5. Click ACE.
- 6. Click the Statistics tab.

Statistics field descriptions

Use the data in the following table to use the **Statistics** tab.

Name	Description
Aclid	Specifies the associated ACL index.
Aceld	Specifies the ACE index.
MatchCountPkts	Specifies a packet count of the matching packets.
MatchCountOctets	Specifies the number of octets of the matching packets.

Viewing ACL statistics

About this task

Graph statistics for a specific ACL ID to view default statistics.

Procedure

- 1. In the navigation pane, expand the Configuration > Security > Data Path folders.
- 2. Click Advanced Filters (ACE/ACLs).
- 3. Click the **ACL** tab.
- 4. Select an ACL.
- 5. Click Graph.
- 6. You can click Clear Counters to clear the Statistics fields.

Statistics field descriptions

Use the data in the following table to use the **Statistics** tab.

Name	Description
Aclid	Specifies the ACL ID.
MatchDefaultSecurityPkts	Shows a security packet count of traffic that does not match an ACE rule or hits the default action if count is configured in the ACL global action.
MatchDefaultSecurityOctets	Shows a security byte count of traffic that does not match an ACE rule or hits the default action if count is configured in the ACL global action.
MatchDefaultQosPkts	Shows a QoS packet count of traffic that does not match an ACE rule or hits the default action if count is configured in the ACL global action.
MatchDefaultQosOctets	Shows a QoS byte count of traffic that does not match an ACE rule or hits the default action if count is configured in the ACL global action.
MatchGlobalSecurityPkts	Shows a security packet count of traffic that matches an ACE rule or hits the default action if count is configured in the ACL global action.

Name	Description
MatchGlobalSecurityOctets	Shows a security byte count of traffic that matches an ACE rule or hits the default action if count is configured in the ACL global action.
MatchGlobalQosPkts	Shows a QoS packet count of traffic that matches an ACE rule or hits the default action if count is configured in the ACL global action.
MatchGlobalQosOctets	Shows a QoS byte count of traffic that matches an ACE rule or hits the default action if count is configured in the ACL global action.

Clearing ACL statistics

About this task

Clear ACL statistics when you want to gather a new set of statistics.

Procedure

- 1. In the navigation pane, expand the **Configuration > Security > Data Path** folders.
- 2. Click Advanced Filters (ACE/ACLs).
- 3. Click the ACL tab.
- 4. Select a field.
- 5. Click ClearStats.

Viewing VLAN and Spanning Tree CIST statistics

About this task

View CIST port statistics to manage network performance.

Procedure

- 1. In the navigation pane, expand the **Configuration > VLAN > Spanning Tree** folders.
- 2. Click MSTP.
- 3. Click the **CIST Port** tab.
- 4. Select a port, and then click **Graph**.

CIST field descriptions

The following table describes parameters on the CIST tab.

Name	Descriptions
ForwardTransitions	Specifies the number of times this port has transitioned to the forwarding state.
RxMstBpduCount	Specifies the number of MSTP BPDUs received on this port.
RxRstBpduCount	Specifies the number of RSTP BPDUs received on this port.
RxConfigBpduCount	Specifies the number of configuration BPDUs received on this port.
RxTcnBpduCount	Specifies the number of TCN BPDUs received on this port.
TxMstBpduCount	Specifies the number of MSTP BPDUs transmitted from this port.
TxRstBpduCount	Specifies the number of RSTP BPDUs transmitted from this port.
TxConfigBpduCount	Specifies the number of configuration BPDUs transmitted from this port.
TxTcnBpduCount	Specifies the number of TCN BPDUs transmitted from this port.
InvalidMstBpduRxCount	Specifies the number of Invalid MSTP BPDUs received on this port.
InvalidRstBpduRxCount	Specifies the number of Invalid RSTP BPDUs received on this port.
InvalidConfigBpduRxCount	Specifies the number of invalid configuration BPDUs received on this port.
InvalidTcnBpduRxCount	Specifies the number of invalid TCN BPDUs received on this port. The number of times this port has migrated from one STP protocol version to another. The relevant protocols are STP-compatible and RSTP/MSTP. A trap is generated on the occurrence of this event.
ProtocolMigrationCount	Specifies the number of times this port has migrated from one STP protocol version to another. The relevant protocols are STP-compatible and RSTP. A trap is generated on the occurrence of this event.

Viewing VLAN and Spanning Tree MSTI statistics

About this task

View multiple spanning tree instance (MSTI) port statistics to manage network performance.

Procedure

- 1. In the navigation pane, expand the **Configuration > VLAN > Spanning Tree** folders.
- 2. Click MSTP.
- 3. Click the MSTI Port tab.
- 4. Select a port, and then click **Graph**.

MSTI field descriptions

The following table describes parameters on the MSTI tab.

Name	Description
ForwardTransitions	Specifies the number of times this port has transitioned to the forwarding state for this specific instance.
ReceivedBPDUs	Specifies the number of BPDUs received by this port for this spanning tree instance.
TransmittedBPDUs	Specifies the number of BPDUs transmitted on this port for this spanning tree instance.
InvalidBPDUsRcvd	Specifies the number of invalid BPDUs received on this port for this spanning tree instance.

Viewing VRRP interface stats

About this task

View VRRP statistics to manage network performance.

Procedure

- 1. In the navigation pane, expand the **Configuration** > **IP** folders.
- 2. Click VRRP.
- 3. Select the Interface tab.
- 4. Select an interface.
- 5. Click Graph.

Interface field descriptions

The following table describes parameters on the **Interface** tab.

Name	Description
AdvertiseRcvd	Specifies the number of VRRP advertisements received by this virtual router.
AdvertiseIntervalErrors	Specifies the number of received VRRP advertisement packets with a different interval is than configured for the local virtual router.
IPTtlErrors	Specifies the number of VRRP packets received by the virtual router with IP TTL (Time-To-Live) not equal to 255.
PriorityZeroPktsRcvd	Specifies the number of VRRP packets received by the virtual router with a priority of 0.
PriorityZeroPktsSent	Specifies the number of VRRP packets sent by the virtual router with a priority of 0'.

Name	Description
InvalidTypePktsRcvd	Specifies the number of VRRP packets received by the virtual router with an invalid value in the 'type' field.
AddressListErrors	Specifies the packets received address list the address list does not match the locally configured list for the virtual router.
AuthTypeMismatch	Specifies the count of authentication type mismatch messages.
PacketLengthErrors	Specifies the count of packet length errors.
AuthFailures	Specifies the count of authentication failure messages.

Viewing VRRP statistics

About this task

View VRRP statistics to monitor network performance.

Procedure

- 1. In the navigation pane, expand the **Configuration > IP** folders.
- 2. Click VRRP.
- 3. Select the **Stats** tab.

Stats field descriptions

The following table describes parameters on the VRRP statistics tab.

Name	Description
ChecksumErrors	Specifies the number of VRRP packets received with an invalid VRRP checksum value.
VersionErrors	Specifies the number of VRRP packets received with an unknown or unsupported version number.
VrIDErrors	Specifies the number of VRRP packets received with an invalid VrID for this virtual router.

Viewing SMLT statistics

View SMLT statistics to manage network performance.

Procedure

1. In the navigation pane, expand the **Configuration** > **VLAN** folders.

- 2. Click MLT/LACP.
- 3. Select the Ist/SMLT Stats tab.

IST/SMLT Stats field descriptions

The following table describes parameters on the IST/SMLT Stats tab.

Name	Description
SmltlstDownCnt	The number of times the session between the two peering switches has gone down since last boot.
SmltHelloTxMsgCnt	The count of transmitted hello messages.
SmltHelloRxMsgCnt	The count of received hello messages.
SmltLearnMacAddrTxMsgCnt	The count of transmitted learned MAC address messages.
SmltLearnMacAddrRxMsgCnt	The count of received learned MAC address messages.
SmltMacAddrAgeOutTxMsgCnt	The count of transmitted aging out MAC address messages.
SmltMacAddrAgeOutRxMsgCnt	The count of received aging out MAC address messages.
SmltMacAddrAgeExpTxMsgCnt	The count of transmitted MAC address age expired messages.
SmltMacAddrAgeExpRxMsgCnt	The count of received MAC address age expired messages.
SmltStgInfoTxMsgCnt	The count of transmitted STG information messages.
SmltStgInfoRxMsgCnt	The count of received STG information messages.
SmltDelMacAddrTxMsgCnt	The count of transmitted MAC address deleted messages.
SmltDelMacAddrRxMsgCnt	The count of received MAC address received messages.
SmltSmltDownTxMsgCnt	The count of transmitted SMLT down messages.
SmltSmltDownRxMsgCnt	The count of received SMLT down messages
SmltUpTxMsgCnt	The count of transmitted SMLT up messages.
SmltUpRxMsgCnt	The count of received SMLT up messages.
SmltSendMacTblTxMsgCnt	The count of sent send MAC table messages.
SmltSendMacTblRxMsgCnt	The count of received send MAC table messages.
SmltlgmpTxMsgCnt	The count of sent IGMP messages.
SmltlgmpRxMsgCnt	The count of received IGMP messages.
SmltPortDownTxMsgCnt	The count of sent port down messages.
SmltPortDownRxMsgCnt	The count of received port down messages.

Name	Description
SmltReqMacTblTxMsgCnt	The count or sent MAC table request messages.
SmltReqMacTblRxMsgCnt	The count of received MAC table request messages.
SmltRxUnknownMsgTypeCnt	The count of received unknown message type messages.
SmltPortTblSyncReqTxMsgCnt	The count of sent sync request messages.
SmltPortTblSyncReqRxMsgCnt	The count of received sync request messages.
SmltPortTblSyncTxMsgCnt	The count of sent sync messages.
SmltPortTblSyncRxMsgCnt	The count of received sync messages.
SmltPortUpdateTxMsgCnt	The count of sent update messages.
SmltPortUpdateRxMsgCnt	The count of received update messages.
SmltEntryUpdateTxMsgCnt	The count of sent entry update messages.
SmltEntryUpdateRxMsgCnt	The count of received entry update messages.
SmltDialectNegotiateTxMsgCnt	The count of sent protocol ID messages.
SmltDialectNegotiateRxMsgCnt	The count of received protocol ID messages.
SmltUpdateRespTxMsgCnt	The count of sent update response messages.
SmltUpdateRespRxMsgCnt	The count of received update response messages.
SmltTransQHighWaterMarkMsgCnt	The count of transaction queue high watermark messages.
SmltPollCountHighWaterMarkCnt	The count of poll count high watermark.

Viewing RSTP status statistics

About this task

You can view status statistics for Rapid Spanning Tree Protocol (RSTP).

Procedure

- 1. In the navigation pane, expand the **Configuration > VLAN > Spanning Tree** folders.
- 2. Click RSTP.
- 3. In the RSTP Status tab, select a port, and then click Graph.

RSTP Status field descriptions

The following table describes the **RSTP Status** fields.

Name	Description
RxRstBpduCount	Specifies the number of RSTP BPDUs this port received.
RxConfigBpduCount	Specifies the number of configuration BPDUs this port received.

Name	Description	
RxTcnBpduCount	Specifies the number of TCN BPDUs this port received.	
TxRstBpduCount	Specifies the number of RSTP BPDUs this port transmitted.	
TxConfigBpduCount	Specifies the number of Config BPDUs this port transmitted.	
TxTcnBpduCount	Specifies the number of TCN BPDUs this port transmitted.	
InvalidRstBpduRxCount	Specifies the number of invalid RSTP BPDUs this port received. A trap is generated on the occurrence of this event.	
InvalidConfigBpduRx Count	Specifies the number of invalid configuration BPDUs this port received. A trap is generated on the occurrence of this event.	
InvalidTcnBpduRxCount	Specifies the number of invalid TCN BPDUs this port received. A trap is generated on the occurrence of this event.	
ProtocolMigrationCount	Specifies the number of times this port migrated from one STP protocol version to another. The relevant protocols are STP-Compatible and RSTP. A trap is generated on the occurrence of this event.	

Viewing MLT interface statistics

About this task

Use MLT interface statistics tab to view interface statistics for the selected MLT.

Procedure

- 1. In the navigation pane, expand the **Configuration** > **VLAN** folders.
- 2. Click MLT/LACP.
- 3. Click the MultiLink/LACP Trunks tab.
- 4. Select an MLT.
- 5. Click Graph.

MultiLink/LACP Trunks field descriptions

Use the data in the following table to use the MultiLink/LACP Trunks tab.

Name	Description
InOctets	Specifies the total number of octets received on the MLT interface, including framing characters.
OutOctets	Specifies the total number of octets transmitted out of the MLT interface, including framing characters.
InUcastPkts	Specifies the number of packets delivered by this MLT to higher level protocols that were not addressed to a multicast or broadcast address at this sublayer.

Name	Description
OutUcastPkts	Specifies the number of packets that higher–level protocols requested be transmitted that were not addressed to a multicast address at this MLT. This total number includes discarded or unsent packets.
InMulticastPkt	Specifies the number of packets delivered to this MLT that were addressed to a multicast address at this sublayer. For a MAC layer protocol, this number includes both Group and Functional addresses.
OutMulticast	Specifies the total number of packets that higher-level protocols requested be transmitted, and that were addressed to a multicast address at this MLT, including those that were discarded or unsent. For a MAC layer protocol, this number includes both Group and Functional addresses.
InBroadcastPkt	Specifies the number of packets delivered to this MLT that were addressed to a broadcast address at this sublayer.
OutBroadcast	Specifies the total number of packets that higher-level protocols requested be transmitted, and that were addressed to a broadcast address at this MLT, including those that were discarded or not sent.
InLsmPkts	Specifies the total number of Link State Messaging (LSM) packets delivered on this MLT.
OutLsmPkts	Specifies the total number of Link State Messaging (LSM) packets transmitted on this MLT.

Viewing MLT Ethernet error statistics

About this task

Use MLT Ethernet error statistics to view the error statistics.

Procedure

- 1. In the navigation pane, expand the **Configuration** > **VLAN** folders.
- 2. Click MLT/LACP.
- 3. Click the MultiLink/LACP Trunks tab.
- 4. Select an MLT, and then click Graph.
- 5. Click the Ethernet Errors tab.

Ethernet Errors field descriptions

Use the data in the following table to use the **Ethernet Errors** tab.

Name	Description
AlignmentErrors	Specifies the frame count frames received on a particular MLT that is not an integral number of octets in length and does not pass the FCS check. The count represented by an instance of this object increments when the alignmentError status is returned by the MAC service to the LLC (or other

Name	Description	
	MAC user). Received frames for which multiple error conditions occur are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.	
FCSErrors	Specifies the frame count received on an MLT that is an integral number of octets in length, but does not pass the Frame Check Sequence (FCS) check. The count represented by an instance of this object increments when the FrameCheckError status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions occur are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.	
IMacTransmitError	Specifies the frame count for which transmission on a particular MLT fails due to an internal MAC sublayer transmit error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of either the LateCollisions object, the ExcessiveCollisions object, or the CarrierSenseErrors object.	
IMacReceiveError	Specifies the frame count for which reception on a particular MLT fails due to an internal MAC sublayer receive error. A frame is only counted by an instance of this object if it is not counted by the corresponding instance of either the FrameTooLongs object, the AlignmentErrors object, or the FCSErrors object.	
	The precise meaning of the count represented by an instance of this object is implementation specific. In particular, an instance of this object can represent receive errors on a particular interface that are not otherwise counted.	
CarrierSenseError	Specifies the number of times that the carrier sense condition was lost or never asserted when attempting to transmit a frame on a particular MLT. The count represented by an instance of this object increments at most once for each transmission attempt, even if the carrier sense condition fluctuates during a transmission attempt.	
FrameTooLong	Specifies the frame count received on a particular MLT that exceeds the maximum permitted frame size. The count represented by an instance of this object increments when the frameTooLong status is returned by the MAC service to the LLC (or other MAC user). Received frames for which multiple error conditions occur are, according to the conventions of IEEE 802.3 Layer Management, counted exclusively according to the error status presented to the LLC.	
SQETestError	Specifies the number of times that the SQE test error message is generated by the PLS sublayer for a particular MLT. The SQE test error message is defined in section 7.2.2.2.4 of ANSI/ IEEE 802.3-1985.	
DeferredTransmiss	Specifies the frame count for which the first transmission attempt on a particular MLT is delayed because the medium is busy. The count represented by an instance of this object does not include frames involved in collisions.	

Name	Description
SingleCollFrames	Specifies a count of successfully transmitted frames on a particular MLT for which transmission is inhibited by exactly one collision. A frame that is counted by an instance of this object is also counted by the corresponding instance of either the ifOutUcastPkts object, the ifOutMulticastPkts object, or the ifOutBroadcastPkts object, and is not counted by the corresponding instance of the MultipleCollisionFrames object.
MultipleCollFrames	Specifies the successfully transmitted frame count on a particular MLT for which transmission is inhibited by more than one collision. A frame that is counted by an instance of this object is also counted by the corresponding instance of either the ifOutUcastPkts object, the ifOutMulticastPkts object, or the ifOutBroadcastPkts object, and is not counted by the corresponding instance of the SingleCollisionFrames object.
LateCollisions	Specifies the number of times that a collision is detected on a particular MLT later than 512 bit-times into the transmission of a packet; 512 corresponds to 51.2 microseconds on a 10 Mb/s system. A late collision included in a count represented by an instance of this object is also considered as a generic collision for purposes of other collision-related statistics.
ExcessiveCollis	Specifies the frame count for which transmission on a particular MLT fails due to excessive collisions.

Viewing RIP statistics

Use statistics to help you monitor Routing Information Protocol (RIP) performance. You can also use statistics in troubleshooting procedures.

Procedure

- 1. In the navigation pane, expand the **Configuration > IP** folders.
- 2. Click RIP.
- 3. Click the **Status** tab.

Status field descriptions

Use the data in the following table to use the **Status** tab.

Name	Description
Address	The IP address of the router interface.
RcvBadPackets	The number of RIP response packets received by the RIP process that were subsequently discarded for any reason (examples: a version 0 packet or an unknown command type).
RcvBadRoutes	The number of routes, in valid RIP packets, that were ignored for any reason (examples: unknown address family or invalid metric).
SentUpdates	The number of triggered RIP updates actually sent on this interface. This field explicitly does not include full updates sent containing new information.

Viewing OSPF chassis statistics

Use statistics to help you monitor Open Shortest Path First (OSPF) performance. You can also graph statistics for all OSPF packets transmitted by the switch.

Procedure

- 1. In the navigation pane, expand the **Configuration** > **IP** folders.
- 2. Click OSPF.
- 3. Click the Stats tab.
- 4. To create a graph for OSPF statistics, select a column, and then select a graph type.

Stats field descriptions

Use the data in the following table to use the **Stats** tab.

Name	Description	
LsdbTblSize	Specifies the number of entries in the link state database table.	
TxPackets	Specifies the number of packets transmitted by OSPF.	
RxPackets	Specifies the number of packets received by OSPF.	
TxDropPackets	Specifies the number of packets dropped before being transmitted by OSPF.	
RxDropPackets	Specifies the number of packets dropped before they are received by OSPF.	
RxBadPackets	Specifies the number of packets received by OSPF that are bad.	
SpfRuns	Specifies the number of SPF calculations performed by OSPF.	
BuffersAllocated	Specifies the number of buffers allocated for OSPF.	
BuffersFreed	Specifies the number of buffers freed by OSPF.	
BufferAllocFailures	Specifies the number of times that OSPF has failed to allocate buffers.	
BufferFreeFailures	Specifies the number of times that OSPF has failed to free buffers.	
Routes	Specifies the count of OSPF routes.	
Adjacencies	Specifies the count of OSPF adjacencies.	
Areas	Specifies the count of OSPF areas.	

Graphing OSPF statistics for a VLAN

Use statistics to help you monitor OSPF performance on a VLAN. You can also graph statistics for all OSPF packets.

- 1. In the navigation pane, expand the **Configuration > VLAN** folders.
- 2. Click VLANs.

- 3. Select a VLAN.
- 4. Click IP.
- 5. Click the **OSPF** tab.
- 6. Click Graph.
- 7. Select one or more values.
- 8. Click the type of graph.

OSPF field descriptions

Use the data in the following table to use the **OSPF** tab.

Name	Description
VersionMismatches	Indicates the number of version mismatches received by this interface.
AreaMismatches	Indicates the number of area mismatches received by this interface.
AuthTypeMismatches	Indicates the number of AuthType mismatches received by this interface.
AuthFailures	Indicates the number of authentication failures.
NetMaskMistmatches	Indicates the number of net mask mismatches received by this interface.
HelloIntervalMismatches	Indicates the number of hello interval mismatches received by this interface.
DeadIntervalMismatches	Indicates the number of dead interval mismatches received by this interface.
OptionMismatches	Indicates the number of options mismatches received by this interface.
RxHellos	Indicates the number of hello packets received by this interface.
RxDBDescrs	Indicates the number of database descriptor packets received by this interface.
RxLSUpdates	Indicate the number of Link state update packets received by this interface.
RxLsReqs	Indicates the number of Link state request packets received by this interface.
RxLSAcks	Indicates the number of Link state acknowledge packets received by this interface.
TxHellos	Indicates the number of hello packets transmitted by this interface.
TxDBDescrs	Indicates the number of database descriptor packets transmitted by this interface.

Name	Description
TxLSUpdates	Indicate the number of Link state update packets transmitted by this interface.
TxLSReqs	Indicates the number of Link state request packets transmitted by this interface.
TxLSAcks	Indicates the number of Link state acknowledge packets transmitted by this interface.

Graphing OSPF statistics for a port

Use statistics to help you monitor OSPF performance on a VLAN. You can also graph statistics for all OSPF packets.

Procedure

- 1. On the Device Physical View, select a port.
- 2. In the navigation pane, expand the **Configuration > Edit > Port** folders.
- 3. Click IP.
- 4. Click the **OSPF** tab.
- 5. Click Graph.
- 6. Select one or more values.
- 7. Click the type of graph.

OSPF field descriptions

Use the data in the following table to use the **OSPF** tab.

Name	Description
VersionMismatches	Indicates the number of version mismatches received by this interface.
AreaMismatches	Indicates the number of area mismatches received by this interface.
AuthTypeMismatches	Indicates the number of AuthType mismatches received by this interface.
AuthFailures	Indicates the number of authentication failures.
NetMaskMistmatches	Indicates the number of net mask mismatches received by this interface.
HelloIntervalMismatches	Indicates the number of hello interval mismatches received by this interface.
DeadIntervalMismatches	Indicates the number of dead interval mismatches received by this interface.

Name	Description
OptionMismatches	Indicates the number of options mismatches received by this interface.
RxHellos	Indicates the number of hello packets received by this interface.
RxDBDescrs	Indicates the number of database descriptor packets received by this interface.
RxLSUpdates	Indicate the number of Link state update packets received by this interface.
RxLsReqs	Indicates the number of Link state request packets received by this interface.
RxLSAcks	Indicates the number of Link state acknowledge packets received by this interface.
TxHellos	Indicates the number of hello packets transmitted by this interface.
TxDBDescrs	Indicates the number of database descriptor packets transmitted by this interface.
TxLSUpdates	Indicate the number of Link state update packets transmitted by this interface.
TxLSReqs	Indicates the number of Link state request packets transmitted by this interface.
TxLSAcks	Indicates the number of Link state acknowledge packets transmitted by this interface.

Viewing BGP global stats

View BGP global stats.

Procedure

- 1. In the navigation pane, expand the **Configuration > IP** folders.
- 2. Click BGP.
- 3. Click the Global Stats tab.

Global Stats field descriptions

Use the data in the following table to use the BGP Global Stats tab.

Name	Description
AbsoluteValue	Displays the counter value.
Cumulative	Displays the total value since you opened the Stats tab.

Name	Description
Average/sec	Displays the average value for each second.
Minimum/sec	Displays the minimum value for each second.
Maximum/sec	Displays the maximum value for each second.
LastVal/sec	Displays the last value for each second.
Starts	Displays the number of times the BGP connection started.
Stops	Displays the number of times the BGP connection stopped.
Opens	Displays the number of times BGP opens TCP.
Closes	Displays the number of times BGP closes TCP.
Fails	Displays the number of times TCP attempts failed.
Fatals	Displays the number of times TCP crashes due to fatal error.
ConnExps	Displays the number of times the TCP retry timer expired.
HoldExps	Displays the number of times the hold timer expired.
KeepExps	Displays the number of times the keepalive timer expired.
RxOpens	Displays the number of open instances BGP receives.
RxKeeps	Displays the number of keepalive instances BGP receives.
RxUpdates	Displays the number of update instances BGP receives.
RxNotifys	Displays the number of notification instances BGP receives.
TxOpens	Displays the number of open instances BGP transmitted.
TxKeeps	Displays the number of keepalive instances BGP transmitted.
TxUpdates	Displays the number of updates instances BGP transmits.
TxNotifys	Displays the number of notification instances BGP transmits.
BadEvents	Displays the number of invalid events FSM received.
SyncFails	Displays the number of times FDB sync failed.
TrEvent	Displays the trace event.
RxECodeHeader	Displays the total header errors received.
RxECodeOpen	Displays the total open errors received.

Name	Description
RxECodeUpdate	Displays the total update errors received.
RxECodeHoldtimer	Displays the total hold timer errors received.
RxECodeFSM	Displays the total FSM errors received.
RxECodeCease	Displays the total cease errors received.
RxHdrCodeNoSync	Displays the header not synchronized errors received.
RxHdrCodeInvalidMsgLen	Displays the header invalid message length errors received.
RxHdrCodeInvalidMsgType	Displays the header invalid message type errors received.
RxOpCodeBadVer	Displays the open errors received for Bad Version.
RxOpCodeBadAs	Displays the open errors received for le Bad AS Number.
RxOpCodeBadRtID	Displays the open errors received for Bad BGP Rtr ID.
RxOpCodeUnsuppOption	Displays the open errors received for Unsupported Option.
RxOpCodeAuthFail	Displays the open errors received for Auth Failures.
RxOpCodeBadHold	Displays the open errors received for Bad Hold Value.
RxUpdCodeMalformedAttrList	Displays the update errors received for Malformed Attr List.
RxUpdCodeWelKnownAttrUnrecog	Displays the update errors received for Welknown Attr Unrecog.
RxUpdCodeWelknownAttrMiss	Displays the update errors received for Welknown Attr Missing.
RxUpdCodeAttrFlagError	Displays the update errors received for Attr Flag Error.
RxUpdCodeAttrLenError	Displays the update errors received for Attr Len Error.
RxUpdCodeBadORIGINAttr	Displays the update errors received for Bad ORIGIN Attr.
RxUpdCodeASRoutingLoop	Displays the update errors received for AS Routing Loop.
RxUpdCodeBadNHAttr	Displays the update errors received for Bad NEXT-HOP Attr.
RxUpdCodeOptionalAttrError	Displays the update errors received for Optional Attr Error.
RxUpdCodeBadNetworkField	Displays the update errors received for Bad Network Field.

Name	Description
RxUpdCodeMalformedASPath	Displays the update errors received for Malformed AS Path.
TxECodeHeader	Displays the total Header errors transmitted.
TxECodeOpen	Displays the total Open errors transmitted.
TxECodeUpdate	Displays the total Update errors transmitted.
TxECodeHoldtimer	Displays the total Hold timer errors transmitted.
TxECodeFSM	Displays the total FSM errors transmitted.
TxECodeCease	Displays the total Cease errors transmitted.
TxHdrCodeNoSync	Displays the header Not Synchronized errors transmitted.
TxHdrCodeInvalidMsgLen	Displays the header Invalid msg len errors transmitted.
TxHdrCodeInvalidMsgType	Displays the header Invalid msg type errors transmitted.
TxOpCodeBadVer	Displays the open errors transmitted for Bad Version.
TxOpCodeBadAs	Displays the open errors transmitted for Bad AS Number.
TxOpCodeBadRtID	Displays the open errors transmitted for Bad BGP Rtr ID.
TxOpCodeUnsuppOption	Displays the open errors transmitted for Unsupported Option.
TxOpCodeAuthFail	Displays the open errors transmitted for Auth Failures.
TxOpCodeBadHold	Displays the open errors transmitted for Bad Hold Value.
TxUpdCodeMalformedAttrList	Displays the update errors transmitted for Malformed Attr List.
TxUpdCodeWelknownAttrUnrecog	Displays the update errors transmitted for Welknown Attr Unrecog.
TxUpdCodeWelknownAttrMiss	Displays the update errors transmitted for Welknown Attr Missing.
TxUpdCodeAttrFlagError	Displays the update errors transmitted for Attr Flag Error.
TxUpdCodeAttrLenError	Displays the update errors transmitted for Attr Len Error.
TxUpdCodeBadORIGINAttr	Displays the update errors transmitted for Bad ORIGIN Attr.
TxUpdCodeASRoutingLoop	Displays the update errors transmitted for AS Routing Loop

Name	Description
TxUpdCodeBadNHAttr	Displays the update errors transmitted for Bad NEXT-HOP Attr
TxUpdCodeOptionalAttrError	Displays the update errors transmitted for Optional Attr Error.
TxUpdCodeBadNetworkField	Displays the update errors transmitted for Bad Network Field.
TxUpdCodeMalformedASPath	Displays the update errors transmitted for Malformed AS Path.

Viewing statistics for a VRF

About this task

View VRF statistics to ensure the instance is performing as expected.

Procedure

- 1. In the navigation pane, expand the **Configuration > IP** folders.
- 2. Click VRF.
- 3. Select a VRF.
- 4. Click the Stats button.

Stats field descriptions

Use the data in the following table to use the **Stats** tab.

Name	Description
StatRouteEntries	Specifies the number of routes for this VRF.
StatFIBEntries	Specifies the number of Forwarding Information Base (FIB) entries for this VRF.

Showing RADIUS server statistics

About this task

Use the server statistics feature to display the number of input and output packets and the number of input and output bytes. Statistics from console ports are available to assist with debugging.

- 1. In the navigation pane, expand the **Configuration > Security > Control Path** folders.
- 2. Click RADIUS.
- 3. Click the RADIUS Servers Stats tab.

RADIUS Server Stats field descriptions

Use the data in the following table to use the **RADIUS Server Stats** tab.

Name	Description
AddressType	Specifies the type of IP address. RADIUS supports IPv4 addresses only.
Address	Shows the IP address of the RADIUS server.
Used by	Identifies the client.
AccessRequests	Shows the number of access-response packets sent to the server; does not include retransmissions.
AccessAccepts	Shows the number of access-accept packets, valid or invalid, received from the server.
AccessRejects	Shows the number of access-reject packets, valid or invalid, received from the server.
BadResponses	Shows the number of invalid access-response packets received from the server.
PendingRequests	Shows the access-request packets sent to the server that have not yet received a response or that have timed out.
ClientRetries	Shows the number of authentication retransmissions to the server.
AcctOnRequests	Shows the number of accounting on requests sent to the server.
AcctOffRequests	Shows the number of accounting off requests sent to the server.
AcctStartRequests	Shows the number of accounting start requests sent to the server.
AcctStopRequests	Shows the number of accounting stop requests sent to the server.
AcctInterimRequests	Number of Accounting Interim requests sent to the server.
	Important:
	The AcctInterimRequests counter increments only if you select AcctIncludeCli from the RADIUS Global tab.
AcctBadResponses	Shows the number of Invalid responses discarded from the server.
AcctPendingRequests	Shows the number of requests waiting to be sent to the server.
AcctClientRetries	Shows the number of retries made to this server.
RoundTripTime	Shows the time difference between the instance when a RADIUS request is sent and the corresponding response is received.
AccessChallenges	Shows the number of RADIUS access-challenges packets sent to this server. This does not include retransmission.
NaslpAddress	Shows the RADIUS client NAS Identifier for this server.

Showing SNMP statistics

About this task

Display SNMP statistics to monitor the number of specific error messages, such as the number of messages that were delivered to SNMP but were not allowed.

Procedure

- 1. In the navigation pane, expand the **Configuration > Security > Control Path** folders.
- 2. Click General.
- 3. Click the SNMP tab.

SNMP field descriptions

Use the data in the following table to display SNMP statistics.

Name	Description
OutTooBigs	Shows the number of SNMP PDUs that the SNMP protocol entity generated and for which the value of the error-status field is tooBig.
OutNoSuchNames	Shows the number of SNMP PDUs that the SNMP protocol entity generated and for which the value of the error-status is noSuchName.
OutBadValues	Shows the number of SNMP PDUs that SNMP protocol entity generated and for which the value of the error-status field is badValue.
OutGenErrors	Shows the number of SNMP PDUs that the SNMP protocol entity generated and for which the value of the error-status field is genErr.
InBadVersions	Shows the number of SNMP messages that were delivered to the SNMP protocol entity and were for an unsupported SNMP version.
InBadCommunityNames	Shows the number of SNMP messages delivered to the SNMP protocol entity that used an SNMP community name not known to the entity.
InBadCommunityUsers	Shows the number of SNMP messages delivered to the SNMP protocol entity that represented an SNMP operation not allowed by the SNMP community named in the message.
InASNParseErrs	Shows the number of ASN.1 or BER errors encountered by the SNMP protocol entity when decoding received SNMP messages.
InTooBigs	Shows the number of SNMP PDUs that were delivered to the SNMP protocol entity and for which the value of the error-status field is tooBig.
InNoSuchNames	Shows the number of SNMP PDUs that were delivered to the SNMP protocol entity and for which the value of the error-status field is noSuchName.

Name	Description
InBadValues	Shows the number of SNMP PDUs that were delivered to the SNMP protocol entity and for which the value of the error-status field is badValue.
InReadOnlys	Shows the number of valid SNMP PDUs delivered to the SNMP protocol entity and for which the value of the error-status field is "read-only". It is a protocol error to generate an SNMP PDU that contains the value "read-only" in the error-status field; this object is provided as a means of detecting incorrect implementations of the SNMP.
InGenErrors	Shows the number of SNMP PDUs delivered to the SNMP protocol entity and for which the value of the error-status field is "genErr."

Enabling RMON statistics

About this task

Enable Ethernet statistics collection for RMON.

Procedure

- 1. In the navigation pane, expand the **Configuration > Serviceability > RMON** folders.
- 2. Click Control.
- 3. Click the Ethernet Statistics tab.
- 4. Click Insert.
- 5. Next to the **Port** box, click the ellipsis (...) button.
- 6. Select a port.
- 7. Click OK.
- 8. In the **Owner** box, type the name of the owner entity.
- 9. Click OK.
- 10. Click Insert.

Ethernet Statistics field descriptions

Use the data in the following table to use the **Ethernet Statistics** tab.

Name	Description	
Index	Uniquely identifies an entry in the Ethernet Statistics table. The default is 1.	
Port	Identifies the source of the data that this etherStats entry is configured to analyze.	
Owner	Specifies the entity that configured this entry and therefore uses the assigned resources.	

Viewing RMON statistics

Before you begin

• You must enable RMON statistics collection.

About this task

Use the following procedure to view RMON statistics for each port.

Procedure

- 1. In the Device Physical View, select a port.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Port.
- 4. Click the RMON tab.
- 5. Select the statistics you want to graph.
- 6. Select a graph type:
 - bar
 - pie
 - chart
 - line

RMON field descriptions

The following table describes fields on the **RMON** tab.

Name	Description
Octets	Specifies the number of octets of data (including those in bad packets) received on the network (excluding framing bits but including FCS octets).
	You can use this object as a reasonable estimate of Ethernet utilization. If additional precision is desired, sample the Pkts and Octets objects before and after a common interval. The differences in the sampled values are Pkts and Octets, and the number of seconds in the interval is Interval. These values are used to calculate the Utilization as follows:
	Pkts * (9.6+6.4) + (Octets * .8)
	Utilization =
	Interval * 10,000
	The result of this equation is the value Utilization, which is the percent utilization of the Ethernet segment on a scale of 0 to 100 percent.
Pkts	Specifies the number of packets (including bad packets, broadcast packets, and multicast packets) received.

Name	Description	
BroadcastPkts	Specifies the number of good packets received that were directed to the broadcast address. This number does not include multicast packets.	
MulticastPkts	Specifies the number of good packets received that were directed to a multicast address. This number does not include packets directed to the broadcast address.	
CRCAlignErrors	Specifies the number of packets received that had a length (excluding framing bits, but including FCS octets) between 64 and 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).	
UndersizePkts	Specifies the number of packets received that were less than 64 octets long (excluding framing bits, but including FCS octets) and were otherwise well formed.	
OversizePkts	Specifies the number of packets received that were longer than 1518 octets (excluding framing bits, but including FCS octets) and were otherwise well formed.	
Fragments	Specifies the number of packets received that were less than 64 octets in length (excluding framing bits but including FCS octets) and had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a nonintegral number of octets (Alignment Error).	
	It is entirely normal for Fragments to increment because it counts both runs (which are normal occurrences due to collisions) and noise hits.	
Collisions	Specifies the best estimate of the number of collisions on this Ethernet segment. The value returned depends on the location of the RMON probe. Section 8.2.1.3 (10BASE-5) and section 10.3.1.3 (10BASE-2) of IEEE standard 802.3 states that a station must detect a collision in the receive mode if three or more stations are transmitting simultaneously. A repeater port must detect a collision when two or more stations transmit simultaneously. Thus, a probe placed on a repeater port can record more collisions than a probe connected to a station on the same segment.	
	Probe location plays a much smaller role when considering 10BASE-T. 14.2.1.4 (10BASE-T) of IEEE standard 802.3 defines a collision as the simultaneous presence of signals on the DO and RD circuits (transmitting and receiving at the same time). A 10BASE-T station can only detect collisions when it is transmitting. Thus, probes placed on a station and a repeater reports the same number of collisions.	
	An RMON probe inside a repeater reports collisions between the repeater and one or more other hosts (transmit collisions as defined by IEEE 802.3k) plus receiver collisions observed on any coax segments to which the repeater is connected.	

Displaying IS-IS system statistics

Use the following procedure to display Intermediate-System-to-Intermediate-System (IS-IS) system statistics.

Procedure

- 1. In the navigation pane, expand the **Configuration > IS-IS** folders.
- 2. Click Stats.
- 3. Click the **System Stats** tab.

System Stats field descriptions

Use the data in the following table to use the **System Stats** tab.

Name	Description
CorrLSPs	Indicates the number of corrupted in-memory link-state packets (LSPs) detected. LSPs received from the wire with a bad checksum are silently dropped and not counted.
AuthFails	Indicates the number of authentication key failures recognized by this Intermediate System.
LSPDbaseOloads	Indicates the number of times the LSP database has become overloaded.
ManAddrDropFromAreas	Indicates the number of times a manual address has been dropped from the area.
AttmptToExMaxSeqNums	Indicates the number of times the IS has attempted to exceed the maximum sequence number.
SeqNumSkips	Indicates the number of times a sequence number skip has occurred.
OwnLSPPurges	Indicates the number of times a zero-aged copy of the system's own LSP is received from some other node.
IDFieldLenMismatches	Indicates the number of times a PDU is received with a different value for ID field length to that of the receiving system.
PartChanges	Indicates partition changes.
AbsoluteValue	Displays the counter value.
Cumulative	Displays the total value since you opened the Stats tab.
Average/sec	Displays the average value for each second.
Minimum/sec	Displays the minimum value for each second.
Maximum/sec	Displays the maximum value for each second.
LastVal/sec	Displays the last value for each second.

Displaying IS-IS interface counters

Use the following procedure to display IS-IS interface counters.

Procedure

- 1. In the navigation pane, expand the **Configuration > IS-IS** folders.
- 2. Click Stats.
- 3. Click the Interface Counters tab.

Interface Counters field descriptions

Use the data in the following table to use the Interface Counters tab.

Name	Description
Index	Shows a unique value identifying the IS-IS interface.
AdjChanges	Shows the number of times an adjacency state change has occurred on this circuit.
InitFails	Shows the number of times initialization of this circuit has failed. This counts events such as PPP NCP failures. Failures to form an adjacency are counted by isisCircRejAdjs.
RejAdjs	Shows the number of times an adjacency has been rejected on this circuit.
IDFieldLenMismatches	Shows the number of times an IS-IS control PDU with an ID field length different to that for this system has been received.
MaxAreaAddrMismatches	Shows the number of times an IS-IS control PDU with a max area address field different to that for this system has been received.
AuthFails	Shows the number of times an IS-IS control PDU with the correct auth type has failed to pass authentication validation.
LANDesiSChanges	Shows the number of times the Designated IS has changed on this circuit at this level. If the circuit is point to point, this count is zero.

Displaying IS-IS interface control packets

Use the following procedure to display IS-IS interface control packets.

- 1. In the navigation pane, expand the **Configuration** > **IS-IS** folders.
- 2. Click Stats.
- 3. Click the Interface Control Packets tab.

Interface Control Packets field descriptions

Use the data in the following table to use the Interface Control Packets tab.

Name	Description
Index	Shows a unique value identifying the Intermediate-System-to-Intermediate-System (IS-IS) interface.
Direction	Indicates whether the switch is sending or receiving the PDUs.
Hello	Indicates the number of IS-IS Hello frames seen in this direction at this level.
LSP	Indicates the number of IS-IS LSP frames seen in this direction at this level.
CSNP	Indicates the number of IS-IS Complete Sequence Number Packets (CSNP) frames seen in this direction at this level.
PSNP	Indicates the number of IS-IS Partial Sequence Number Packets (PSNP) frames seen in this direction at this level.

Graphing IS-IS interface counters

Use the following procedure to graph IS-IS interface counters.

Procedure

- 1. In the navigation pane, expand the **Configuration > IS-IS** folders.
- 2. Click IS-IS.
- 3. Click the Interfaces tab.
- 4. Select an existing interface.
- 5. Click the **Graph** button.

Interface Counters field descriptions

The following table describes the fields in the Interface Counters tab.

Name	Description
InitFails	Indicates the number of times initialization of this circuit has failed. This counts events such as PPP NCP failures.
RejAdjs	Indicates the number of times an adjacency has been rejected on this circuit.
IDFieldLenMismatches	Indicates the number of times an Intermediate-System-to- Intermediate-System (IS-IS) control PDU with an ID field length different from that for this system has been received.

Name	Description
MaxAreaAddrMismatches	Indicates the number of times an IS-IS control PDU with a max area address field different from that for this system has been received.
AuthFails	Indicates the number of times an IS-IS control PDU with the correct auth type has failed to pass authentication validation.
LANDesiSChanges	Indicates the number of times the Designated IS has changed on this circuit at this level. If the circuit is point to point, this count is zero.
AbsoluteValue	Displays the counter value.
Cumulative	Displays the total value since you opened the Stats tab.
Average/Sec	Displays the average value for each second.
Minimum/Sec	Displays the minimum value for each second.
Maximum/Sec	Displays the maximum value for each second.
Last Val/Sec	Displays the last value for each second.

Graphing IS-IS interface sending control packet statistics

Use the following procedure to graph IS-IS interface receiving control packet statistics.

Procedure

- 1. In the navigation pane, expand the **Configuration > IS-IS** folders.
- 2. Click IS-IS.
- 3. Click the **Interfaces** tab.
- 4. Select an existing interface.
- 5. Click the **Graph** button.
- 6. Click the Interface Sending Control Packets tab.

Interface Sending Control Packets field descriptions

The following table describes the fields in the Interface Sending Control Packets tab.

Name	Description
Hello	Indicates the number of IS-IS Hello (IIH) PDUs seen in this direction at this level. Point-to-Point IIH PDUs are counted at the lowest enabled level: at L1 on L1 or L1L2 circuits, and at L2 otherwise.
LSP	Indicates the number of IS-IS LSP frames seen in this direction at this level.

Name	Description
CSNP	Indicates the number of IS-IS Complete Sequence Number Packet (CSNP) frames seen in this direction at this level.
PSNP	Indicates the number of IS-IS Partial Sequence Number Packets (PSNPs) seen in this direction at this level.
AbsoluteValue	Displays the counter value.
Cumulative	Displays the total value since you opened the Stats tab.
Average/Sec	Displays the average value for each second.
Minimum/Sec	Displays the minimum value for each second.
Maximum/Sec	Displays the maximum value for each second.
Last Val/Sec	Displays the last value for each second.

Graphing IS-IS interface receiving control packet statistics

Use the following procedure to graph IS-IS interface sending control packet statistics.

Procedure

- 1. In the navigation pane, expand the **Configuration > IS-IS** folders.
- 2. Click IS-IS.
- 3. Click the Interfaces tab.
- 4. Select an existing interface.
- 5. Click the **Graph** button.
- 6. Click the Interface Receiving Control Packets tab.

Interface Receiving Control Packets field descriptions

The following table describes the fields in the Interface Receiving Control Packets tab.

Name	Description
Hello	Indicates the number of IS-IS Hello PDUs seen in this direction at this level. Point-to-Point IIH PDUs are counted at the lowest enabled level: at L1 on L1 or L1L2 circuits, and at L2 otherwise.
LSP	Indicates the number of IS-IS link-state packet (LSP) frames seen in this direction at this level.
CSNP	Indicates the number of IS-IS Complete Sequence Number Packet (CSNP) frames seen in this direction at this level.
PSNP	Indicates the number of IS-IS Partial Sequence Number Packets (PSNPs) seen in this direction at this level.
AbsoluteValue	Displays the counter value.

Name	Description
Cumulative	Displays the total value since you opened the Stats tab.
Average/Sec	Displays the average value for each second.
Minimum/Sec	Displays the minimum value for each second.
Maximum/Sec	Displays the maximum value for each second.
Last Val/Sec	Displays the last value for each second.

Graphing stat rate limit statistics for a port

View stat rate limit statistics to view the total dropped packets and bytes.

Procedure

- 1. In the Device Physical View, select a port.
- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Port.
- 4. Click the Stat Rate Limit tab.
- 5. Select one or more values.
- 6. Click the type of graph to create.

Stat rate limit field descriptions

Use the data in the following table to use the **Stat Rate Limit** tab.

Name	Description
DropPktRate	Indicates the drop packet rate.
DropByteRate	Indicates the drop byte rate.
DropTotalBytes	Indicates the total bytes dropped.
DropTotalPkts	Indicates the total packets dropped.

Viewing IPv6 statistics for an interface

View IPv6 statistics to view information about the IPv6 datagrams on an interface.

- 1. In the navigation pane, expand the **Configuration > IPv6** folders.
- 2. Click IPv6.
- 3. Click the Interfaces tab.
- 4. Select an interface.

- 5. Click **IfStats**.
- 6. (Optional) Select one or more values, and then click on the type of graph to graph the data.

Statistics field descriptions

Use the data in the following table to use the **Statistics** tab.

Name	Description
InReceives	Shows the total number of input datagrams received by the interface, including those received in error.
InHdrErrors	Shows the number of input datagrams discarded due to errors in their IPv6 headers, including version number mismatch, other format errors, hop count exceeded, and errors discovered in processing the IPv6 options.
InTooBigErrors	Shows the number of input datagrams that could not be forwarded because their size exceeded the link MTU of the outgoing interface.
InNoRoutes	Shows the number of input datagrams discarded because no route could be found to transmit them to their destination.
InAddrErrors	Shows the number of input datagrams discarded because the IPv6 address in the IPv6 header destination field was not a valid address to be received at this entity. This count includes invalid addresses, for example, ::0, and unsupported addresses, for example, addresses with unallocated prefixes. For entities which are not IPv6 routers and do not forward datagrams, this counter includes datagrams discarded because the destination address was not a local address.
InUnknownProtos	Shows the number of locally-addressed datagrams received successfully but discarded because of an unknown or unsupported protocol. This counter is incremented at the interface to which these datagrams were addressed, which is not always the input interface for some of the datagrams.
InTruncatedPkts	Shows the number of input datagrams discarded because the datagram frame did not carry enough data.
InDiscards	Shows the number of input IPv6 datagrams for which no problems were encountered to prevent their continued processing, but which were discarded, for example, for lack of buffer space. This counter does not include datagrams discarded while awaiting reassembly.

Name	Description
InDelivers	Shows the total number of datagrams successfully delivered to IPv6 user-protocols (including ICMP). This counter is incremented at the interface to which these datagrams were addressed which is not always the input interface for some of the datagrams.
OutForwDatagrams	Shows the number of output datagrams which this entity received and forwarded to their final destinations. In entities which do not act as IPv6 routers, this counter includes only those packets which were Source-Routed using this entity, and the Source-Route processing was successful. For a successfully forwarded datagram the counter of the outgoing interface is incremented.
OutRequests	Shows the total number of IPv6 datagrams which local IPv6 user-protocols (including ICMP) supplied to IPv6 in requests for transmission. This counter does not include datagrams counted in OutForwDatagrams .
OutDiscards	Shows the number of output IPv6 datagrams for which no problem was encountered to prevent their transmission to their destination, but which were discarded, for example, for lack of buffer space. This counter includes datagrams counted in OutForwDatagrams if such packets met this (discretionary) discard criterion.
OutFragOKs	Shows the number of IPv6 datagrams that have been successfully fragmented at this output interface.
OutFragFails	Shows the number of IPv6 datagrams that have been discarded because they needed to be fragmented at this output interface but could not be.
OutFragCreates	Shows the number of output datagram fragments that have been generated as a result of fragmentation at this output interface.
ReasmReqds	Shows the number of IPv6 fragments received which needed to be reassembled at this interface. This counter is incremented at the interface to which these fragments were addressed, which is not always the input interface for some of the fragments.
ReasmOKs	Shows the number of IPv6 datagrams successfully reassembled. This counter is incremented at the interface to which these datagrams were addressed, which is not always the input interface for some of the fragments.

Name	Description
ReasmFails	Shows the number of failures detected by the IPv6 re- assembly algorithm). This value is not necessarily a count of discarded IPv6 fragments because some algorithms can lose track of the number of fragments by combining them as they are received. This counter is incremented at the interface to which these fragments were addressed, which is not always the input interface for some of the fragments.
InMcastPkts	Shows the number of multicast packets received by the interface.
OutMcastPkts	Shows the number of multicast packets transmitted by the interface.

Viewing ICMP statistics

View ICMP statistics for ICMP configuration information.

Procedure

- 1. In the navigation pane, expand the **Configuration > IPv6** folders.
- 2. Click IPv6.
- 3. Click Interfaces tab.
- 4. Select the interface on which you want to view the ICMP statistics.
- 5. Click **ICMPstats** option from the menu.

ICMP stats field descriptions

Use the data in the following table to use the ICMP **Statistics** tab.

Name	Description
InMsgs	Specifies the total number of ICMP messages which the entity received.
	Note:
	This counter includes all those counted by icmpInErrors.
InErrors	Specifies the number of ICMP messages which the entity received but determined as having ICMP-specific errors (bad ICMP checksums, bad length, etc.).
InDestUnreachs	Specifies the number of ICMP Destination Unreachable messages received by the interface.

Name	Description
InAdminProhibs	Specifies the number of ICMP destination unreachable/communication administratively prohibited messages received by the interface.
InTimeExcds	Specifies the number of ICMP Time Exceeded messages by the interface.
InParmProblems	Specifies the number of ICMP Parameter Problem messages received by the interface.
InPktTooBigs	Specifies the number of ICMP Packet Too Big messages received by the interface.
InEchos	Specifies the number of ICMP Echo (request) messages received by the interface.
InEchoReplies	Specifies the number of ICMP Echo Reply messages received by the interface.
InRouterSolicits	Specifies the number of ICMP Router Solicit messages received by the interface.
InRouterAdvertisements	Specifies the number of ICMP Router Advertisement messages received by the interface
InNeighborSolicits	Specifies the number of ICMP Neighbor Solicit messages received by the interface.
InNeighborAdvertisements	Specifies the number of ICMP Neighbor Advertisement messages received by the interface.
InRedirects	Specifies the number of ICMP Redirect messages received by the interface.
InGroupMembQueries	Specifies the number of ICMPv6 Group Membership Query messages received by the interface
InGroupMembResponses	Specifies the number of ICPv6 Group Membership Response messages received by the interface.
InGroupMembReductions	Specifies the number of ICMPv6 Group Membership Reduction messages received by the interface.
OutMsgs	Specifies the total number of ICMP messages which this interface attempted to send. Note that this counter includes all those counted by icmpOutErrors.
OutErrors	Specifies the number of ICMP messages which this interface did not send due to problems discovered within ICMP such as a lack of buffers. This value should not include errors discovered outside the ICMP layer such as the inability of IPv6 to route the resultant datagram. In some implementations there may be no types of error which contribute to this counter's value.
OutDestUnreachs	Specifies the number of ICMP Destination Unreachable messages sent by the interface.

Name	Description
OutAdminProhibs	Specifies the number of ICMP destination unreachable/communication administratively prohibited messages sent.
OutTimeExcds	Specifies the number of ICMP Time Exceeded messages sent by the interface.
OutParmProblems	Specifies the number of ICMP Parameter Problem messages sent by the interface.
OutPktTooBigs	Specifies the number of ICMP Packet Too Big messages sent by the interface.
OutEchos	Specifies the number of ICMP Echo (request) messages sent by the interface.
OutEchoReplies	Specifies the number of ICMP Echo Reply messages sent by the interface.
OutRouterSolicits	Specifies the number of ICMP Router Solicitation messages sent by the interface.
OutRouterAdvertisements	Specifies the number of ICMP Router Advertisement messages sent by the interface.
OutNeighborSolicits	Specifies the number of ICMP Neighbor Solicitation messages sent by the interface.
OutNeighborAdvertisements	Specifies the number of ICMP Neighbor Advertisement messages sent by the interface.
OutRedirects	Specifies the number of Redirect messages sent. For a host, this object will always be zero, since hosts do not send redirects.
OutGroupMembQueries	Specifies the number of ICMPv6 Group Membership Query messages sent.
OutGroupMembResponses	Specifies the number of ICMPv6 Group Membership Response messages sent.
OutGroupMembReductions	Specifies the number of ICMPv6 Group Membership Reduction messages sent.

Viewing IPv6 OSPF statistics

View OSPF statistics to analyze trends. You can also graph statistics for all OSPF packets transmitted by the switch.

- 1. In the navigation pane, expand the **Configuration > IPv6** folders.
- 2. Click OSPF.
- 3. Click Stats.

Stats field descriptions

Use the data in the following table to use the Stats tab.

Name	Description
TxPackets	Shows the count of sent packets.
RxPackets	Shows the count of received packets.
TxDropPackets	Shows the count of sent, dropped packets.
RxDropPackets	Shows the count of received, dropped packets.
RxBadPackets	Shows the count of received, bad packets.
SpfRuns	Shows the count of intra-area route table updates with calculations using this area link-state database.
LastSpfRun	Shows the count of the most recent SPF run.
LsdbTblSize	Shows the size of the link state database table.
BadLsReqs	Shows the count of bad link requests.
SeqMismatches	Shows the count of sequence mismatched packets.
Routes	Shows the number of OSPF routes added to the routing table.
Adjacencies	Shows the number of existing adjacencies.
Areas	Shows the number of configured areas.
Nbrs	Shows the number of OSPF neighbors.

Viewing IPv6 VRRP statistics

View IPv6 VRRP statistics to monitor network performance.

Procedure

- 1. In the navigation pane, expand the **Configuration > IPv6** folders.
- 2. Click VRRP.
- 3. Click the Stats tab.

Stats field descriptions

Use the data in the following table to use the Stats tab.

Name	Description
InetAddrType	Shows the type of IP address (IPv4 or IPv6).
ChecksumErrors	Shows the number of VRRP packets received with an invalid VRRP checksum value.

Name	Description
VersionErrors	Shows the number of VRRP packets received with an unknown or unsupported version number.
VrldErrors	Shows the number of VRRP packets received with an invalid VrID for this virtual router.

Viewing IPv6 VRRP statistics for an interface

View IPv6 VRRP statistics for a VLAN or port.

Procedure

- 1. In the navigation pane, expand the **Configuration > IPv6** folders.
- 2. Click VRRP.
- 3. Click the Interface tab.
- 4. Select an interface.
- 5. Click Statistics.

Statistics field descriptions

Use the data in the following table to use the **Statistics** tab.

Name	Description
MasterTransitions	Shows the total number of times that the state of this virtual router has transitioned to master. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
RcdAdvertisements	Shows the total number of VRRP advertisements received by this virtual router. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
AdvintervalErrors	Shows the total number of VRRP advertisement packets received for which the advertisement interval is different than the one configured for the local virtual router. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
IpTtlErrors	Shows the total number of VRRP packets received by the virtual router with IPv4 TTL (for VRRP over IPv4) or IPv6 Hop Limit (for VRRP over IPv6) not

Name	Description
	equal to 255. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
RcvdPriZeroPackets	Shows the total number of VRRP packets received by the virtual router with a priority of 0. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
SentPriZeroPackets	Shows the total number of VRRP packets sent by the virtual router with a priority of 0. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
RcvdInvalidTypePkts	Shows the number of VRRP packets received by the virtual router with an invalid value in the 'type' field. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
AddressListErrors	Shows the total number of packets received for which the address list does not match the locally configured list for the virtual router. Discontinuities in the value of this counter can occur at reinitialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
PacketLengthErrors	Shows the total number of packets received with a packet length less than the length of the VRRP header. Discontinuities in the value of this counter can occur at re-initialization of the management system, and at other times as indicated by the value of DiscontinuityTime.
RcvdInvalidAuthentications	Shows the total number of packets received with an unknown authentication type.

Configuring IPv6 VRRP statistics

View IPv6 VRRP statistics for a VLAN or port.

- 1. In the navigation pane, expand the **Configuration > Edit > Port** folders.
- 2. Click IPv6.
- 3. Click the **VRRP** tab.

- 4. Select an interface.
- 5. Click Statistics.

Viewing IP VRRPv3 statistics

About this task

Use the following procedure to view IPv6 VRRPv3 statistics for monitoring the network performance.

Procedure

- 1. In the navigation pane, expand the **Configuration** --> **IP** folders.
- 2. Click VRRP.
- 3. Click the V3 Stats tab.

V3 Stats field descriptions

Use the data in the following table to interpret the **V3 Stats** tab.

Name	Description
InetAddrType	Shows that the address type of the statistical entry is IPv4.
ChecksumErrors	Specifies the total number of VRRP packets received with an invalid VRRP checksum value.
VersionErrors	Specifies the total number of VRRP packets received with an unknown or unsupported version number.
VrldErrors	Specifies the total number of VRRP packets received with an invalid VRID for the virtual router.

Graphing IPv6 VRRP statistics

About this task

Use the following procedure to graph IPv6 VRRPv3 statistics for monitoring the network performance.

- 1. In the navigation pane, expand the **Configuration --> IPv6** folders.
- 2. Click VRRP.
- 3. Click the Stats tab.
- 4. Select an interface, and click **Graph**.
- 5. Select one or more values.

- 6. Select a graph type, click one of the icons in the upper-left corner of the menu bar. Your choices are:
 - Line Chart
 - · Area Chart
 - · Bar Chart
 - Pie Chart

Stats field descriptions

Use the data in the following table to use the Stats tab.

Name	Description
InetAddrType	Shows the type of IP address (IPv4 or IPv6).
ChecksumErrors	Shows the number of VRRP packets received with an invalid VRRP checksum value.
VersionErrors	Shows the number of VRRP packets received with an unknown or unsupported version number.
VrldErrors	Shows the number of VRRP packets received with an invalid VrID for this virtual router.

Graphing IP VRRPv3 statistics

About this task

Use the following procedure to view and graph IP VRRPv3 statistics for monitoring the network performance.

- 1. In the navigation pane, expand the **Configuration** --> **IP** folders.
- 2. Click VRRP.
- 3. Click the **V3 Interface** tab.
- 4. Select an interface, and click **Graph**.
- 5. Select one or more values.
- 6. Select a graph type, click one of the icons in the upper-left corner of the menu bar. Your choices are:
 - Line Chart
 - · Area Chart
 - · Bar Chart
 - · Pie Chart

V3 Interface field descriptions

Use the data in the following table to use the **V3 Interface** tab.

Name	Description
IfIndex	Shows the index value that uniquely identifies the interface to which this entry applies.
Vrld	Specifices a number that uniquely identifies a virtual router on a VRRP router.
PrimarylpAddr	Specifies the virtual address assigned to the VRRP.
VirtualMacAddr	Specifies the MAC address of the virtual router interface.
State	Specifies the state of the virtual router interface:
	Initialize—waiting for a startup event
	Backup—monitoring availability and state of the master router
	Master—functioning as the forwarding router for the virtual router IP addresses.
Control	Specifies whether VRRP is enabled or disabled for the port (or VLAN). The default is enabled.
Priority	Specifies the priority value used by this VRRP router. Set a value from 1 to 255, where 255 is reserved for the router that owns the IP addresses associated with the virtual router. The default is 100.
Advinterval	Specifies the time interval (in seconds) between sending advertisement messages. The range is 1 to 255 seconds with a default of 1 second. Only the master router sends advertisements. The default is 1.
UpTime	Specifies the time interval (in hundredths of a second) since the virtual router was initialized.
CriticallpAddr	This command specifies an IP interface on the local router, which is configured so that a change in its state causes a role switch in the virtual router (for example, from master to backup) in case the interface stops responding.
	Note:
	In this context, local implies an address from the same VRF as the IP interface where VRRP is being configured.
CriticallpAddrEnabled	Configures the IP interface on the local router to enable or disable the backup. The default is disabled.

Name	Description
BackUpMaster	Enables the backup VRRP system traffic forwarding. The default is disabled.
BackUpMasterState	Indicates whether the backup VRRP system traffic forwarding is enabled or disabled. The default is disabled.
FasterAdvintervalEnabled	Enables or disables the Fast Advertisement Interval. When disabled, the regular advertisement interval is used. The default is disable.
FasterAdvinterval	Configures the Fast Advertisement Interval between sending VRRP advertisement messages. The interval is between 200 and 1000 milliseconds, and you must enter the same value on all participating routers. The default is 200. You must enter the values in multiples of 200 milliseconds.
PreemptMode	Issued to preempt the existing router. If a new router is added to the network with its priority higher than the existing routers, then the new router becomes the master.
Action	Lists options to override the delay timer manually and force preemption:
	none does not override the timer
	preemptHoldDownTimer preempts the timer
HoldDownTimer	Indicates the hold-down state of this VRRP interface. If the hold-down timer is operational, this variable is set to active; otherwise, this variable is set to dormant.
HoldDownTimeRemaining	Indicates the amount of time (in seconds) left before the HoldDownTimer expires.
MasterAdvinterval	On the VRRPv3 master, the master advertisement interval is same as the advertisement interval. On the VRRPv3 Backup, the master advertisement interval is set to the Advertisement configured on the Master (received in the packet).

Viewing IPv6 DHCP Relay statistics for a port

Display individual IPv6 DHCP Relay statistics for specific ports to manage network performance. You can also create a graph of selected statistical values.

Procedure

- 1. On the Device Physical view, select a port.
- 2. In the navigation pane, expand the **Configuration > IPv6** folders.

- 3. Click the **DHCP Relay** tab.
- 4. Click the Interface tab.
- 5. Select the interface on which you want to view the IPv6 DHCP Relay statistics.
- 6. Click Statistics.
- 7. Select one or more values.
- 8. Click the type of graph.

Statistics field descriptions

Use the data in the following table to use the **Statistics** tab.

Name	Description
NumRequests	Shows the number of DHCP and BootP requests on this interface.
NumReplies	Shows the number of DHCP and BootP replies on this interface.

Displaying IPsec interface statistics

Use this procedure to view IPsec statistics and counter values for each IPsec-enabled interface.

About this task

If you select an interface on the **Stats** tab, you can click **Graph** to graph particular statistics for that interface.

Procedure

- 1. In the navigation pane, expand the **Configuration > IPv6** folders.
- 2. Click IPSec.
- 3. Click the Stats tab.

Stats field descriptions

Use the data in the following table to use the **Stats** tab.

Name	Description
IfIndex	Shows the interface index for which the statistic is captured.
InSuccesses	Specifies the number of ingress packets IPsec successfully carries.
InSPViolations	Specifies the number of ingress packets IPsec discards since boot time because of a security policy violation.

Name	Description
InNotEnoughMemories	Specifies the number of ingress packets IPsec discards since boot time because not enough memory is available.
InAHESPReplays	Specifies the number of ingress packets IPsec discards since boot time because the AH replay check fails.
InESPReplays	Specifies the number of ingress packets IPsec discards since boot time because the ESP replay check fails.
InAHFailures	Specifies the number of ingress packets IPsec discards since boot time because the AH authentication check fails.
InESPFailures	Specifies the number of ingress packets IPsec discards since boot time because the ESP authentication check fails.
OutSuccesses	Specifies the number of egress packets IPsec successfully carries since boot time.
OutSPViolations	Specifies the number of egress packets IPsec discards since boot time because a security policy violation occurs.
OutNotEnoughMemories	Specifies the number of egress packets IPsec discards since boot time because not enough memory is available since boot time.
generalError	Specifies a general error.
InAhSuccesses	Specifies the number of ingress packets IPsec carries because the AH authentication succeeds.
OutAHSuccesses	Specifies the number of egress packets IPsec successfully carries since boot time.
InESPSuccesses	Specifies the number of ingress packets IPsec carries since boot time because the ESP authentication succeeds.
OutESPSuccesses	Specifies the number of egress packets IPsec successfully carries since boot time.
OutKBytes	Specifies the total number of kilobytes on egress.
OutBytes	Specifies the total number of bytes on egress.
InKBytes	Specifies the total number of bytes on ingress.
InBytes	Specifies the total number of bytes on ingress.
TotalPacketsProcessed	Specifies the total number of packets processed.
TotalPacketsByPassed	Specifies the total number of packets bypassed.

Name	Description
OutAHFailures	Specifies the number of egress packets IPsec discards since boot time because the AH authentication check fails.
OutESPFailures	Specifies the number of egress packets IPsec discards since boot time because the ESP authentication check fails.
InMD5Hmacs	Specifies the number of inbound HMAC MD5 occurrences since boot time.
InSHA1Hmacs	Specifies the number of inbound HMAC SHA1 occurrences since boot time.
InAESXCBCs	Specifies the number of inbound AES XCBC MAC occurrences since boot time.
InAnyNullAuth	Specifies the number of inbound null authentication occurrences since boot time.
In3DESCBCs	Specifies the number of inbound 3DES CBC occurrences since boot time.
InAESCBCs	Specifies the number of inbound AES CBC occurrences since boot time.
InAESCTRs	Specifies the number of inbound AES CTR occurrences since boot time.
InAnyNulEncrypt	Specifies the number of inbound null occurrences since boot time. Used for debugging purposes.
OutMD5Hmacs	Specifies the number of outbound HMAC MD5 occurrences since boot time.
OutSHA1Hmacs	Specifies the number of outbound HMAC SHA1 occurrences since boot time.
OutAESXCBCs	Specifies the number of outbound AES XCBC MAC occurrences since boot time.
OutlnAnyNullAuth	Specifies the number of outbound null authentication occurrences since boot time.
Out3DESCBCs	Specifies the number of outbound 3DES CBC occurrences since boot time.
OutAESCBCs	Specifies the number of outbound AES CBC occurrences since boot time.
OutAESCTRs	Specifies the number of outbound AES CTR occurrences since boot time.
OutlnAnyNullEncrypt	Specifies the number of outbound null occurrences since boot time. Used for debugging purposes.

Graphing IPsec interface statistics

Use this procedure to graphically view IPsec statistics and counter values for each IPsec-enabled interface.

About this task

If you select an interface on the **Stats** tab, you can click **Graph** to graph particular statistics for that interface.

Procedure

- 1. In the navigation pane, expand the **Security** > **Control Path** folders.
- 2. Click IPSec.
- 3. Click the Interface Stats tab.
- 4. Select a row, and click Graph.
- 5. Select one of the parameters, and click the appropriate icon in the upper-left corner of the menu bar to draw a line chart, area chart, bar chart, or a pie chart.
- 6. To clear existing counters, and fix a reference point in time to restart the counters, click **Clear Contents**.
- 7. To export the statistical data to a file, click **Export**.
- 8. To configure a poll interval, select an appropriate value from the **Poll Interval** drop-down list.

Displaying switch level statistics for IPsec-enabled interfaces

Use this procedure to view IPsec statistics and counter values at the switch level for all IPsecenabled interfaces.

Procedure

- 1. In the navigation pane, expand the **Configuration > IPv6** folders.
- 2. Click IPSec.
- 3. Click the Global Stats tab.

Global Stats field descriptions

Use the data in the following table to use the **Global Stats** tab.

Name	Description
	Specifies the number of ingress packets IPsec successfully carries.

Name	Description
InSPViolations	Specifies the number of ingress packets IPsec discards since boot time because of a security policy violation.
InNotEnoughMemories	Specifies the number of ingress packets IPsec discards since boot time because not enough memory is available.
InAHESPReplays	Specifies the number of ingress packets IPsec discards since boot time because the AH replay check fails.
InESPReplays	Specifies the number of ingress packets IPsec discards since boot time because the ESP replay check fails.
InAHFailures	Specifies the number of ingress packets IPsec discards since boot time because the AH authentication check fails.
InESPFailures	Specifies the number of ingress packets IPsec discards since boot time because the ESP authentication check fails.
OutSuccesses	Specifies the number of egress packets IPsec successfully carries since boot time.
OutSPViolations	Specifies the number of egress packets IPsec discards since boot time because a security policy violation occurs.
OutNotEnoughMemories	Specifies the number of egress packets IPsec discards since boot time because not enough memory is available since boot time.
generalError	Specifies a general error.
InAhSuccesses	Specifies the number of ingress packets IPsec carries because the AH authentication succeeds.
OutAHSuccesses	Specifies the number of egress packets IPsec successfully carries since boot time.
InESPSuccesses	Specifies the number of ingress packets IPsec carries since boot time because the ESP authentication succeeds.
OutESPSuccesses	Specifies the number of egress packets IPsec successfully carries since boot time.
OutKBytes	Specifies the total number of kilobytes on egress.
OutBytes	Specifies the total number of bytes on egress.
InKBytes	Specifies the total number of bytes on ingress.
InBytes	Specifies the total number of bytes on ingress.
TotalPacketsProcessed	Specifies the total number of packets processed.

Name	Description
TotalPacketsByPassed	Specifies the total number of packets bypassed.
OutAHFailures	Specifies the number of egress packets IPsec discards since boot time because the AH authentication check fails.
OutESPFailures	Specifies the number of egress packets IPsec discards since boot time because the ESP authentication check fails.
InMD5Hmacs	Specifies the number of inbound HMAC MD5 occurrences since boot time.
InSHA1Hmacs	Specifies the number of inbound HMAC SHA1 occurrences since boot time.
InAESXCBCs	Specifies the number of inbound AES XCBC MAC occurrences since boot time.
InAnyNullAuth	Specifies the number of inbound null authentication occurrences since boot time.
In3DESCBCs	Specifies the number of inbound 3DES CBC occurrences since boot time.
InAESCBCs	Specifies the number of inbound AES CBC occurrences since boot time.
InAESCTRs	Specifies the number of inbound AES CTR occurrences since boot time.
InAnyNulEncrypt	Specifies the number of inbound null occurrences since boot time. Used for debugging purposes.
OutMD5Hmacs	Specifies the number of outbound HMAC MD5 occurrences since boot time.
OutSHA1Hmacs	Specifies the number of outbound HMAC SHA1 occurrences since boot time.
OutAESXCBCs	Specifies the number of outbound AES XCBC MAC occurrences since boot time.
OutInAnyNullAuth	Specifies the number of outbound null authentication occurrences since boot time.
Out3DESCBCs	Specifies the number of outbound 3DES CBC occurrences since boot time.
OutAESCBCs	Specifies the number of outbound AES CBC occurrences since boot time.
OutAESCTRs	Specifies the number of outbound AES CTR occurrences since boot time.
OutInAnyNullEncrypt	Specifies the number of outbound null occurrences since boot time. Used for debugging purposes.

Viewing EAPoL Authenticator statistics

Use EAPoL Authenticator statistics to display the Authenticator Port Access Entity (PAE) statistics for each selected port.

Procedure

1. On the Device Physical View, select the port you want to graph.

A yellow outline appears around the selected ports

If you want to select multiple ports, press Ctrl and hold down the key while you click the ports you want to configure. A yellow outline appears around the selected ports.

- 2. In the navigation pane, expand the **Configuration > Graph** folders.
- 3. Click Port.
- 4. Click EAPOL Stats.
- 5. If you selected multiple ports, from the Graph port EAPoL Stats tab Show list, select: Absolute Value, Cumulative, Average/sec, Minimum/sec, Maximum/sec, or LastVal/sec.

EAPOL Stats field descriptions

The following table describes values on the **EAPOL Stats** tab.

Name	Description
InvalidFramesRx	Displays the number of EAPoL frames received by this Authenticator in which the frame type is not recognized.
EapLengthErrorFramesRx	Displays the number of EAPoL frames received by this Authenticator in which the Packet Body Length field is invalid.
StartFramesRx	Displays the number of EAPoL start frames received by this Authenticator.
EapFramesRx	Displays the number of EAPoL-EAP frames received by this Authenticator.
LogoffFramesRx	Displays the number of EAPoL Logoff frames received by this Authenticator.
LastRxFrameVersion	Displays the last received version of the EAPoL frame by this Authenticator.
LastRxFrameSource	Displays the source MAC address of the last received EAPoL frame by this Authenticator.
AuthEapFramesTx	Displays the number of EAPoL-EAP frames transmitted by the Authenticator.

Viewing Multihost status information

Use the following procedure to display multiple host status for a port.

Procedure

- 1. In the navigation pane, expand the **Configuration** --> **Security** --> **Data Path** folders.
- 2. Click 802.1x-EAPOL.
- 3. Click the **MultiHost Status** tab.

MultiHost status field descriptions

The following table describes values on the **MultiHost Status** tab.

Name	Description
PortNumber	Indicates the port number associated with this port.
ClientMACAddr	Indicates the MAC address of the client.
PaeState	Indicates the current state of the authenticator PAE state machine.
VlanId	Indicates the VLAN assigned to the client.

Viewing EAP session statistics

Use the following procedure to display multiple host session information for a port.

Procedure

- 1. In the navigation pane, expand the **Configuration** --> **Security** --> **Data Path** folders.
- 2. Click 802.1x-EAPOL.
- 3. Click the MultiHost Session tab.

MultiHost session field descriptions

The following table describes values on the **MultiHost Session** tab.

Name	Description
StatsPortNumber	Indicates the port number associated with this port.
StatsClientMACAddr	Indicates the MAC address of the client.
Id	Indicates the unique identifier for the session.
AuthenticMethod	Indicates the authentication method used to establish the session.
Time	Indicates the elapsed time of the session.

Name	Description
TerminateCause	Indicates the cause of the session termination.
UserName	Indicates the user name that represents the identity of the supplicant PAE.

Viewing NEAP MAC information

Use this procedure to view NEAP client MAC information on a port.

Procedure

- 1. In the navigation pane, expand the **Configuration** --> **Security** --> **Data Path** folders.
- 2. Click 802.1x-EAPOL.
- 3. Click the **NEAP Radius** tab.

NEAP Radius field descriptions

The following table describes values on the **NEAP Radius** tab.

Name	Description
MacPort	Indicates the port number associated with this port.
MacAddr	Indicates the MAC address of the client.
MacStatus	Indicates the authentication status of the NEAP host that is authenticated using the RADIUS server.
VlanId	Indicates the VLAN assigned to the client.
MacClear	Clears the non EAP MAC entry associated with a specific index.

Viewing secure channel (SC) outbound statistics

Use this procedure to view the secure channel (SC) outbound statistics using EDM.

This feature is not supported on all hardware platforms. If you do not see this command in EDM, the feature is not supported on your hardware. For more information about feature support, see *Release Notes*.

Procedure

- 1. In the Device Physical View tab, select the port for which you need to view the SC outbound statistics.
 - The switch supports MACsec on specific ports. For more information, see your hardware documentation.
- 2. In the navigation pane, expand the **Edit** > **Port** > **General** folders.

3. Click the SC Outbound Stats tab.



Note:

Use the **Clear Stats** button to the clear single-port secure channel outbound statistics. The Clear Stats button is not available to clear multiple-port secure channel outbound statistics

SC Outbound Stats field descriptions

The following table describes the fields in the **SC Outbound Stats** tab.

Field	Description
ProtectedPkts	Specifies the number of integrity protected but not encrypted packets for this transmitting SC.
EncryptedPkts	Specifies the number of integrity protected and encrypted packets for this transmitting SC.
OctetsProtected	Specifies the number of plain text octets that are integrity protected but not encrypted on the transmitting SC.
OctetsEncrypted	Specifies the number of plain text octets that are integrity protected and encrypted on the transmitting SC.

Viewing secure channel (SC) inbound statistics

Use this procedure to view the secure channel (SC) inbound statistics using EDM.

This feature is not supported on all hardware platforms. If you do not see this command in EDM, the feature is not supported on your hardware. For more information about feature support, see Release Notes.

Procedure

1. In the Device Physical View tab, select the port for which you need to view the SC inbound statistics.

The switch supports MACsec on specific ports. For more information, see your hardware documentation.

- 2. In the navigation pane, expand the **Edit** > **Port** > **General** folders.
- 3. Click the SC Inbound Stats tab.



Note:

Use the Clear Stats button to the clear single-port secure channel inbound statistics. The Clear Stats button is not available to clear multiple-port secure channel inbound statistics.

SC Inbound Stats field descriptions

The following table describes the fields in the ${f SC}$ Inbound ${f Stats}$ tab.

Field	Description
UnusedSAPkts	Specifies the summary of received unencrypted packets on all SAs of this secure channel, with MACsec <i>not</i> in strict mode.
NoUsingSAPkts	Specifies the summary of received packets that were discarded along with either encrypted packets or packets that were received with MACsec operating in strict mode.
LatePkts	Specifies the number of packets received that have been discarded for this secure channel (SC) with Replay Protect enabled.
	Note:
	The switch does not support Replay Protect.
NotValidPkts	Specifies the summary of packets that were discarded in all SAs of the SC because they were not valid with one of the following conditions:
	MACsec was operating in strict mode.
	The packets received were encrypted but contained erroneous fields.
InvalidPkts	Specifies the summary of all packets received that were not valid for this SC, with MACsec operating in <i>check</i> mode.
DelayedPkts	Specifies the summary of packets for this SC, with the packet number (PN) of the packets lower than the lower bound replay protection PN.
	Note:
	The switch does not support Replay Protect.
UncheckedPkts	The total number of packets for this SC that:
	Were encrypted and had failed the integrity check.
	Were <i>not</i> encrypted and had failed the integrity check.
	Were received when MACsec validation was not enabled.
AcceptedPkts	Specifies the total number of Integrity Check Validated (ICV) packets for all SAs of this Secure Channel. The number of octets of User Data recovered from received frames that were integrity protected but not encrypted.

Field	Description
OctetsValidated	Specifies the number of octets of plaintext recovered from received packets that were integrity protected but not encrypted.
OctetsDecrypted	Specifies the number of octets of plaintext recovered from received packets that were integrity protected and encrypted.

Viewing MACsec interface statistics

Use this procedure to view the MACsec interface statistics using EDM.

This feature is not supported on all hardware platforms. If you do not see this command in EDM, the feature is not supported on your hardware. For more information about feature support, see *Release Notes*.

Procedure

1. In the Device Physical View tab, select the port for which you need to view the MACsec interface statistics.

The switch supports MACsec on specific ports. For more information, see your hardware documentation.

- 2. In the navigation pane, expand the **Edit** > **Port** > **General** folders.
- 3. Click the MacSec Interface Stats tab.



Use the **Clear Stats** button to the clear MACsec interface statistics. The **Clear Stats** button is available to clear single-port as well as multiple-port MACsec interface statistics.

MacSec Interface Stats field descriptions

The following table describes the fields in the MacSec Interface Stats tab.

Field	Description
TxUntaggedPkts	Specifies the number of transmitted packets without the MAC security tag (SecTAG), with MACsec disabled on the interface.
TxTooLongPkts	Specifies the number of transmitted packets discarded because the packet length is greater than the maximum transmission unit (MTU) of the common port interface.

Field	Description
RxUntaggedPkts	Specifies the number of received packets without the MAC security tag (SecTAG), with MACsec <i>not</i> operating in strict mode.
RxNoTagPkts	Specifies the number of received packets without the MAC security tag (SecTAG), with MACsec operating in strict mode.
RxBadTagPkts	Specifies the number of received packets discarded with an invalid SecTAG, or with a zero value packet number (PN), or invalid Integrity Check Value (ICV).
RxUnknownSCIPkts	Specifies the number of packets received with an unknown secure channel identifier (SCI), and with MACsec <i>not</i> operating in strict mode.
RxNoSCIPkts	Specifies the number of packets received with an unknown secure channel identifier (SCI), and with MACsec operating in strict mode.
RxOverrunPkts	Specifies the number of packets discarded because the number of received packets exceeded the cryptographic performance capabilities.

Glossary

American Standard Code for Information Interchange (ASCII)	A code to represent characters in computers. ASCII uses uppercase and lowercase alphabetic letters, numeric digits, and special symbols.
Autonomous System (AS)	A set of routers under a single technical administration, using a single IGP and common metrics to route packets within the Autonomous System, and using an EGP to route packets to other Autonomous Systems.
Autonomous System Number (ASN)	A two-byte number that is used to identify a specific AS.
bit error rate (BER)	The ratio of the number of bit errors to the total number of bits transmitted in a specific time interval.
Bootstrap Protocol (BootP)	A User Datagram Protocol (UDP)/Internet Protocol (IP)-based protocol that a booting host uses to configure itself dynamically and without user supervision.
Collecting process	A process that receives flow records from one or more exporting processes. The collecting process can process or store received flow records.
Collector	A device that hosts one or more collecting processes.
cyclic redundancy check (CRC)	Ensures frame integrity is maintained during transmission. The CRC performs a computation on frame contents before transmission and on the receiving device. The system discards frames that do not pass the CRC.
Data flowset	One or more records, of the same type, in an export packet. Each record is either a flow data record or an options data record previously defined by a template record or an options template record.
Dynamic Random Access Memory (DRAM)	A read-write random-access memory, in which the digital information is represented by charges stored on the capacitors and must be repeatedly replenished to retain the information.

Exporting process

An export process that sends flow records to one or more collecting processes. One or more metering processes generate the flow records.

External Data Representation (XDR)

An IETF standard, RFC 1832, for the description and encoding of data.

Flow key

A field used to define a flow is termed a flow key. A flow key is each field that belongs to the packet header (for example, destination IP address), is a property of the packet itself (for example, packet length), or is derived from packet treatment (for example, AS number).

Flow record

A flow record contains information about a specific flow that was observed at an observation point. The flow record contains measured properties of the flow, for example, the total number of bytes for all packets in the flow, and characteristic properties of the flow, for example, source IP address.

Flowset

A generic term for a collection of flow records that use a similar structure. In an export packet, one or more flowsets follow the packet header. Three flow sets are available: template flowset, options template flowset, and data flowset.

forwarding database (FDB)

A database that maps a port for every MAC address. If a packet is sent to a specific MAC address, the switch refers to the forwarding database for the corresponding port number and sends the data packet through that port.

Frame Check Sequence (FCS)

Frames are used to send upper-layer data and ultimately the user application data from a source to a destination.

graphical user interface (GUI)

A graphical (rather than textual) computer interface.

Intermediate System to Intermediate System (IS-IS)

Intermediate System to Intermediate System(IS-IS) is a link-state, interior gateway protocol. ISO terminology refers to routers as Intermediate Systems (IS), hence the name Intermediate System to Intermediate System (IS-IS). IS-IS operation is similar to Open Shortest Path First (OSPF).

In Shortest Path Bridging MAC (SPBM) networks, IS-IS discovers network topology and builds shortest path trees between network nodes that IS-IS uses for forwarding unicast traffic and determining the forwarding table for multicast traffic. SPBM employs IS-IS as the interior gateway protocol and implements additional Type-Length-Values (TLVs) to support additional functionality.

Internet Control Message Protocol (ICMP)

A collection of error conditions and control messages exchanged by IP modules in both hosts and gateways.

Internet Group Management Protocol (IGMP)

IGMP is a host membership protocol used to arbitrate membership in multicast services. IP multicast routers use IGMP to learn the existence of host group members on their directly attached subnets.

interswitch trunking (IST)

A feature that uses one or more parallel point-to-point links to connect two aggregation switches. The two aggregation switches use this channel to share information and operate as a single logical switch. Only one interswitch trunk can exist on each Split Multilink Trunking (SMLT) aggregation switch.

Layer 2

Layer 2 is the Data Link Layer of the OSI model. Examples of Layer 2 protocols are Ethernet and Frame Relay.

Layer 3

Layer 3 is the Network Layer of the OSI model. An example of a Layer 3 protocol is Internet Protocol (IP).

Link Aggregation Control Protocol Data Units (LACPDU)

Link aggregation control protocol data unit (LACPDU) is used for exchanging information among LACP-enabled devices.

link-state advertisement (LSA)

Packets that contain state information about directly connected links (interfaces) and adjacencies. Each Open Shortest Path First (OSPF) router generates the packets.

link-state database (LSDB)

A database built by each OSPF router to store LSA information. The router uses the LSDB to calculate the shortest path to each destination in the autonomous system (AS), with itself at the root of each path.

Logical Link Control (LLC)

A protocol used in LANs to transmit protocol data units between two end stations. This LLC layer addresses and arbitrates data exchange between two endpoints.

management information base (MIB)

The MIB defines system operations and parameters used for the Simple Network Management Protocol (SNMP).

media

A substance that transmits data between ports; usually fiber optic cables or category 5 unshielded twisted pair (UTP) copper wires.

Metering process

A process that generates flow records. An input to the process is packets observed at an observation point and packet treatment at the observation point. The metering process consists of a set of functions that includes packet header capturing, time stamping, sampling, classifying, and maintaining flow records. The maintenance of flow records can include creating new records, updating existing records, computing flow statistics, deriving further flow properties, detecting flow expiration, passing flow records to the exporting process, and deleting flow records.

multiplexing

Carriage of multiple channels over a single transmission medium; a process where a dedicated circuit is shared by multiple users. Typically, data streams intersperse on a bit or byte basis (time division), or separate by different carrier frequencies (frequency division).

nanometer (nm)

One billionth of a meter (10⁻⁹ meter). A unit of measure commonly used to express the wavelengths of light.

NonVolatile Random Access Memory (NVRAM) Random Access Memory that retains its contents after electrical power turns off.

Observation domain

The set of observation points that is the largest set of flow information that can be aggregated at the metering process. Each observation domain uses a unique ID for the export process to identify the IPFIX messages it generates. For example, a router interface module can comprise several interfaces with each interface being an observation point. Every observation point is associated with an observation domain.

Observation point

An observation point is a network location where you can observe IP packets. Examples include a port or a VLAN.

Options data record

The data record that contains values and scope information of the flow measurement parameters that correspond to an options template record.

Options template flowset

One or more options template records in an export packet.

Options template record

A record that defines the structure and interpretation of fields in an options data record, including defining the scope within which the options data record is relevant.

policing

Ensures that a traffic stream follows the domain service-provisioning policy or service-level agreement (SLA).

Port Access Entity (PAE)

Software that controls each port on the switch. The PAE, which resides on the device, supports authenticator functionality. The PAE works with the Extensible Authentication Protocol over LAN (EAPoL).

Protocol Data Units (PDUs)

A unit of data that is specified in a protocol of a specific layer and that consists of protocol-control information of the specific layer and possibly user data of that layer.

QSFP+

A hot pluggable, quad small form-factor pluggable plus (QSFP+) transceiver, which is used in 40 Gbps and 4x10 Gbps Ethernet applications. 4x10 Gbps requires channelization support.

QSFP28

A hot pluggable, quad small form-factor pluggable 28 (QSFP28) transceiver, which is used in 100 Gbps and 4x25 Gbps Ethernet applications. 4x25 Gbps requires channelization support. It is similar in physical appearance to QSFP+ transceivers.

quality of service (QoS)

QoS features reserve resources in a congested network, allowing you to configure a higher priority for certain devices. For example, you can configure a higher priority for IP deskphones, which need a fixed bit rate

and split the remaining bandwidth between data connections if calls in the network are more important than the file transfers.

Random Access Memory (RAM)

Memory into which you can write and read data. A solid state memory device used for transient memory stores. You can enter and retrieve information from storage position.

remote login (rlogin)

An application that provides a terminal interface between hosts (usually UNIX) that use the TCP/IP network protocol. Unlike Telnet, rlogin assumes the remote host is, or behaves like, a UNIX host.

remote monitoring (RMON)

A remote monitoring standard for Simple Network Management Protocol (SNMP)-based management information bases (MIB). The Internetwork Engineering Task Force (IETF) proposed the RMON standard to provide guidelines for remote monitoring of individual LAN segments.

sFlow agent

Provides the interface for the sFlow instance. The agent maintains the measurement session with, and sends sFlow datagrams to, the sFlow collector.

sFlow collector

Receives sFlow datagrams from one or more sFlow agents.

sFlow datagram

A User Datagram Protocol (UDP) packet that contains the measurement information. The sFlow datagram also includes information about the source and process.

SFP

A hot pluggable, small form-factor pluggable (SFP) transceiver, which is used in Ethernet applications up to 1 Gbps.

SFP+

A hot pluggable, small form-factor pluggable plus (SFP+) transceiver, which is used in Ethernet applications up to 10 Gbps. It is similar in physical appearance to SFP transceivers.

Shortest Path Bridging MAC (SPBM)

Shortest Path Bridging MAC (SPBM) uses the Intermediate-System-to-Intermediate-System (IS-IS) link-state routing protocol to provide a loop-free Ethernet topology that creates a shortest-path topology from every node to every other node in the network based on node MAC addresses. SPBM uses the 802.1ah MAC-in-MAC frame format and encapsulates the source bridge identifier into the B-MAC header. SPBM eliminates the need for multiple overlay protocols in the core of the network by reducing the core to a single Ethernet-based link-state protocol, which can provide virtualization services, both layer 2 and layer 3, using a pure Ethernet technology base.

shortest path first (SPF)

A class of routing protocols that use Djikstra's algorithm to compute the shortest path through a network, according to specified metrics, for efficient transmission of packet data.

spanning tree A simple, fully-connected active topology formed from the arbitrary physical

topology of connected bridged Local Area Network components by relaying frames through selected bridge ports. The protocol parameters and states that are used and exchanged to facilitate the calculation of the active

topology and to control the bridge relay function.

Spanning Tree Group (STG)

A collection of ports in one spanning-tree instance.

Template flowset

One or more options template records in an export packet.

Template record An ordered list (for example, of <type, length>pairs) that identifies the

structure and semantics of a particular set of information to communicate from an Internet Protocol Flow Information eXport (IPFIX) device to a collector. Each template is uniquely identifiable, for example, by using a

template ID.

time-to-live (TTL) The field in a packet used to determine the valid duration for the packet.

The TTL determines the packet lifetime. The system discards a packet with

a TTL of zero.

traffic profile The temporal properties of a traffic stream, such as rate.

Trivial File Transfer Protocol (TFTP)

A protocol that governs transferring files between nodes without protection

against packet loss.

trunk A logical group of ports that behaves like a single large port.

User Datagram Protocol (UDP)

In TCP/IP, a packet-level protocol built directly on the Internet Protocol layer. TCP/IP host systems use UDP for application-to-application

programs.

Virtual Router Redundancy Protocol (VRRP) A protocol used in static routing configurations, typically at the edge of the network. This protocol operates on multiple routers on an IP subnet and elects a primary gateway router. When the primary router fails, a backup

router is quickly available to take its place.