

Brocade NetIron Software Upgrade Guide, 06.0.00a

Supporting NetIron OS 06.0.00a

© 2016, Brocade Communications Systems, Inc. All Rights Reserved.

Brocade, Brocade Assurance, the B-wing symbol, ClearLink, DCX, Fabric OS, HyperEdge, ICX, MLX, MyBrocade, OpenScript, VCS, VDX, Vplane, and Vyatta are registered trademarks, and Fabric Vision is a trademark of Brocade Communications Systems, Inc., in the United States and/or in other countries. Other brands, products, or service names mentioned may be trademarks of others.

Notice: This document is for informational purposes only and does not set forth any warranty, expressed or implied, concerning any equipment, equipment feature, or service offered or to be offered by Brocade. Brocade reserves the right to make changes to this document at any time, without notice, and assumes no responsibility for its use. This informational document describes features that may not be currently available. Contact a Brocade sales office for information on feature and product availability. Export of technical data contained in this document may require an export license from the United States government.

The authors and Brocade Communications Systems, Inc. assume no liability or responsibility to any person or entity with respect to the accuracy of this document or any loss, cost, liability, or damages arising from the information contained herein or the computer programs that accompany it.

The product described by this document may contain open source software covered by the GNU General Public License or other open source license agreements. To find out which open source software is included in Brocade products, view the licensing terms applicable to the open source software, and obtain a copy of the programming source code, please visit <http://www.brocade.com/support/oscd>.

Contents

Preface	7
Document conventions.....	7
Text formatting conventions.....	7
Command syntax conventions.....	7
Notes, cautions, and warnings.....	8
Brocade resources.....	8
Contacting Brocade Technical Support.....	8
Brocade customers.....	8
Brocade OEM customers.....	9
Document feedback.....	9
About This Document	11
Audience.....	11
Supported hardware.....	11
How command information is presented in this guide.....	11
Important Upgrade Information for all Supported Devices	13
Upgrade and downgrade considerations	13
Upgrade to 6.0.00a for the Network Packet Broker (NPB) global setting.....	14
General upgrade considerations.....	14
General downgrade considerations.....	16
Special upgrade information for Brocade MLXe devices.....	16
FPGA image upgrade information.....	17
ifIndex allocation.....	17
Upgrade memory requirements.....	18
Software upgrades for Brocade MLX Series and Brocade NetIron XMR devices	19
R06.0.00 images.....	19
Performing a patch upgrade.....	19
Important memory information for an R06.0.00 upgrade.....	20
Clearing code flash memory.....	20
Performing a basic upgrade.....	21
Basic upgrade Steps.....	21
Step 1 - Determining current software image versions.....	22
Step 2 - Upgrading the management module monitor image.....	24
Step 3 - Upgrading the management module boot image.....	24
Step 4 - Upgrading the combined application image on management modules.....	25
Step 5 - Upgrading boot and monitor images on interface modules.....	25
Step 6 - Upgrading interface modules using the combined FPGA image.....	26
Step 7 - Performing supplemental image upgrades (as needed).....	27
Step 8 - Performing an image coherence check.....	27
Step 9 - Reloading the management module.....	28
Brocade MLX Series and NetIron XMR supplemental upgrade procedures	31
Upgrading MBRIDGE or MBRIDGE32 images on management modules.....	31
Upgrading the SBRIDGE image on 32-slot devices.....	32
Upgrading the HSBRIDGE image on 32-slot devices.....	32
Upgrading individual FPGA images on interface modules.....	33

Software Upgrades for Brocade NetIron CER Series and Brocade NetIron CES Series devices	35
R06.0.00 images.....	35
Performing a patch upgrade.....	35
Performing a basic upgrade.....	35
Step 1 - Determining current image versions.....	36
Step 2 - Upgrading the application image.....	37
Step 3 - Upgrading the fpga-pbif.....	37
Step 4 - Upgrading monitor and boot image.....	37
Step 5 - Reboot the device.....	38
Hitless OS Upgrade for all Supported Devices	39
Hitless OS Upgrade support limitations.....	39
Special considerations for Hitless OS Upgrade.....	39
The hitless upgrade process.....	41
Performing a hitless upgrade.....	41
Simplified Upgrade and Auto Upgrade	43
Simplified Upgrade.....	43
Brocade NetIron XMR and Brocade MLX Series single-command (full-system) upgrade.....	44
Brocade NetIron CER and Brocade NetIron CES single-command (full-system) upgrade.....	44
Step 1: Download Manifest file and Validation.....	44
Step 2: Download File Images.....	44
Version Check.....	45
Summary Report.....	46
Single-Command Package Upgrade.....	47
Interface Module Auto-Upgrade.....	47
Upgrading the software.....	47
Upgrading the software using a TFTP server.....	47
Upgrading the software using an auxiliary storage device.....	48
Auto upgrade.....	48
In systems running MR management modules.....	48
In systems running MR2 management modules.....	49
Enabling Auto Upgrade.....	49
Disabling Auto Upgrade.....	49
Syslog messages for Simplified Upgrade and Auto Upgrade.....	50
MIB information for Simplified Upgrade and Auto Upgrade.....	50
Loading and saving configuration files	51
Brocade MLX Series and NetIron XMR devices.....	51
Configuring file size for startup and running configuration.....	51
Replacing the startup configuration with the running configuration.....	52
Retaining the current startup configuration.....	52
Copying a configuration file to or from an HTTP(S), SCP or TFTP server.....	52
Making local copies of the startup configuration file.....	55
NetIron CES Series and NetIron CER devices.....	55
Configuring file size for startup and running configuration.....	56
Replacing the startup configuration with the running configuration.....	56
Retaining the current startup configuration.....	56
Copying a configuration file to or from an HTTP(S), SCP or TFTP server.....	57
Making local copies of the startup configuration file.....	59
Device module considerations	61

Interface module considerations.....	61
Upgrading high-speed switch fabric modules	61
Management module considerations.....	62
Upgrading to MR2 management modules.....	62
Setting port auto-negotiation.....	65
Troubleshooting.....	67
Upgrading devices in MCT topologies.....	67
Recovering from a failed upgrade.....	67
Troubleshooting 1G modules stuck in down state.....	68

Preface

- Document conventions..... 7
- Brocade resources..... 8
- Contacting Brocade Technical Support..... 8
- Document feedback..... 9

Document conventions

The document conventions describe text formatting conventions, command syntax conventions, and important notice formats used in Brocade technical documentation.

Text formatting conventions

Text formatting conventions such as boldface, italic, or Courier font may be used in the flow of the text to highlight specific words or phrases.

Format	Description
bold text	Identifies command names. Identifies keywords and operands. Identifies the names of user-manipulated GUI elements.
<i>italic text</i>	Identifies text to enter at the GUI. Identifies emphasis. Identifies variables.
Courier font	Identifies document titles. Identifies CLI output. Identifies command syntax examples.

Command syntax conventions

Bold and italic text identify command syntax components. Delimiters and operators define groupings of parameters and their logical relationships.

Convention	Description
bold text	Identifies command names, keywords, and command options.
<i>italic text</i>	Identifies a variable.
value	In Fibre Channel products, a fixed value provided as input to a command option is printed in plain text, for example, --show WWN.
[]	Syntax components displayed within square brackets are optional.
{ x y z }	Default responses to system prompts are enclosed in square brackets. A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options.
x y	In Fibre Channel products, square brackets may be used instead for this purpose. A vertical bar separates mutually exclusive elements.
< >	Nonprinting characters, for example, passwords, are enclosed in angle brackets.

Convention	Description
...	Repeat the previous element, for example, <i>member{member...}</i> .
\	Indicates a "soft" line break in command examples. If a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash.

Notes, cautions, and warnings

Notes, cautions, and warning statements may be used in this document. They are listed in the order of increasing severity of potential hazards.

NOTE

A Note provides a tip, guidance, or advice, emphasizes important information, or provides a reference to related information.

ATTENTION

An Attention statement indicates a stronger note, for example, to alert you when traffic might be interrupted or the device might reboot.



CAUTION

A Caution statement alerts you to situations that can be potentially hazardous to you or cause damage to hardware, firmware, software, or data.



DANGER

A Danger statement indicates conditions or situations that can be potentially lethal or extremely hazardous to you. Safety labels are also attached directly to products to warn of these conditions or situations.

Brocade resources

Visit the Brocade website to locate related documentation for your product and additional Brocade resources.

You can download additional publications supporting your product at www.brocade.com. Select the Brocade Products tab to locate your product, then click the Brocade product name or image to open the individual product page. The user manuals are available in the resources module at the bottom of the page under the Documentation category.

To get up-to-the-minute information on Brocade products and resources, go to MyBrocade. You can register at no cost to obtain a user ID and password.

Release notes are available on MyBrocade under Product Downloads.

White papers, online demonstrations, and data sheets are available through the Brocade website.

Contacting Brocade Technical Support

As a Brocade customer, you can contact Brocade Technical Support 24x7 online, by telephone, or by e-mail. Brocade OEM customers contact their OEM/Solutions provider.

Brocade customers

For product support information and the latest information on contacting the Technical Assistance Center, go to <http://www.brocade.com/services-support/index.html>.

If you have purchased Brocade product support directly from Brocade, use one of the following methods to contact the Brocade Technical Assistance Center 24x7.

Online	Telephone	E-mail
Preferred method of contact for non-urgent issues: <ul style="list-style-type: none"> • My Cases through MyBrocade • Software downloads and licensing tools • Knowledge Base 	Required for Sev 1-Critical and Sev 2-High issues: <ul style="list-style-type: none"> • Continental US: 1-800-752-8061 • Europe, Middle East, Africa, and Asia Pacific: +800-AT FIBREE (+800 28 34 27 33) • For areas unable to access toll free number: +1-408-333-6061 • Toll-free numbers are available in many countries. 	support@brocade.com Please include: <ul style="list-style-type: none"> • Problem summary • Serial number • Installation details • Environment description

Brocade OEM customers

If you have purchased Brocade product support from a Brocade OEM/Solution Provider, contact your OEM/Solution Provider for all of your product support needs.

- OEM/Solution Providers are trained and certified by Brocade to support Brocade® products.
- Brocade provides backline support for issues that cannot be resolved by the OEM/Solution Provider.
- Brocade Supplemental Support augments your existing OEM support contract, providing direct access to Brocade expertise. For more information, contact Brocade or your OEM.
- For questions regarding service levels and response times, contact your OEM/Solution Provider.

Document feedback

To send feedback and report errors in the documentation you can use the feedback form posted with the document or you can e-mail the documentation team.

Quality is our first concern at Brocade and we have made every effort to ensure the accuracy and completeness of this document. However, if you find an error or an omission, or you think that a topic needs further development, we want to hear from you. You can provide feedback in two ways:

- Through the online feedback form in the HTML documents posted on www.brocade.com.
- By sending your feedback to documentation@brocade.com.

Provide the publication title, part number, and as much detail as possible, including the topic heading and page number if applicable, as well as your suggestions for improvement.

About This Document

- Audience..... 11
- Supported hardware..... 11
- How command information is presented in this guide..... 11

Audience

This document is designed for system administrators with a working knowledge of Layer 2 and Layer 3 switching and routing.

Supported hardware

In instances in which procedures or parts of procedures documented here apply to some devices but not to others, this guide identifies exactly which devices are supported and which are not.

Although many different hardware configurations are tested and supported by Brocade Communication Systems, Inc. documenting all possible configurations and scenarios is beyond the scope of this document.

The following hardware platforms are described in this document:

- Brocade MLXe Series-4 router
- Brocade MLXe Series-8 router
- Brocade MLXe Series-16 router
- Brocade MLXe Series-32 router
- Brocade NetIron MLX Series-4 router
- Brocade NetIron MLX Series-8 router
- Brocade NetIron MLX Series-16 router
- Brocade NetIron MLX Series-32 router
- Brocade NetIron XMR Series 4000 router
- Brocade NetIron XMR Series 8000 router
- Brocade NetIron XMR Series 16000 router
- Brocade NetIron XMR Series 32000 router
- Brocade NetIron CES Series 2000 Series
- Brocade NetIron CER Series 2000 Series

How command information is presented in this guide

Starting with NetIron 5.6.00, command syntax and parameter descriptions are removed from commands that are referenced in configuration tasks. To find the full description of a specific command, including all required and optional keywords and variables, refer to the *NetIron Command Reference* for your software release.

Important Upgrade Information for all Supported Devices

- [Upgrade and downgrade considerations](#)13
- [General upgrade considerations](#).....14
- [General downgrade considerations](#).....16
- [Special upgrade information for Brocade MLXe devices](#).....16

This chapter contains important information you will need to perform your Brocade NetIron software upgrade.

For additional upgrade information on the following topics, refer to [Troubleshooting](#) on page 67:

- [Upgrading devices in MCT topologies](#) on page 67
- [Recovering from a failed upgrade](#) on page 67

Upgrade and downgrade considerations

Upgrade and downgrade scenarios for NetIron 6.0.0 and Network Packet Broker.

To upgrade to 6.0.00a, a two-step approach may be required.

Scenario 1

Customers running releases 6.0.00, 5.9.00a, 5.6.00ga, 5.6.00h, 5.8.00d and 5.7.00e can directly upgrade to 6.0.00a.

NOTE

If you are not running one of the releases listed above, you CANNOT directly upgrade to 6.0.00.

Scenario 2

To upgrade from 5.6.00c or any later release (other than the images mentioned in Scenario 1), a two-step approach is required.

1. Upgrade to 5.9.00a or any of the following releases: 5.6.00ga, 5.6.00h, 5.8.00d or 5.7.00e and reload the device.
2. Upgrade to 6.0.00a. Reload the device.

Scenario 3

To upgrade to 6.0.00a from releases prior to R05.6.00c, a two-step approach is required.

1. Upgrade to 5.9.00a or any of the following releases: 5.6.00ga, 5.6.00h, 5.8.00d or 5.7.00e and reload the device.
2. Upgrade again to the same image which was used in step 1 and reload the device again. This ensures that the device will have the SHA256 signatures on the device if they are needed, for example for LP Auto-upgrade.
3. Upgrade to 6.0.00a and reload the device.

OpenFlow upgrade/downgrade

When downgrading the system from R06.0.00 to R05.8.00, if there are any VRF interfaces which are enabled with OpenFlow, some unexpected IFL entries will be seen after moving to R05.8.00. These unexpected IFL entries may affect the L3VPN/6VPE traffic.

Brocade recommends removing OpenFlow from the VRF interfaces before downgrading the router to R05.8.00. For upgrade and migration considerations, refer to the latest version of the Brocade NetIron Software Upgrade Guide.

Hitless upgrade

Hitless upgrade support Hitless Upgrade from any release to R06.0.00a is NOT supported.

Upgrade to 6.0.00a for the Network Packet Broker (NPB) global setting

To upgrade to 6.0.00a for the NPB global setting, a two-step approach is required.

1. Upgrade to NetIron R06.0.00a using the NPB manifest file.
2. Reload the system.
3. Configure the NPB global setting using the `fpga-mode-NPB` command.
4. Reload the system.

General upgrade considerations

NOTE

The upgrade process for R05.2.00 and later releases are different than the releases prior to R05.2.00. The upgrade instructions documented here must be followed to upgrade a system from a pre R5.2.00 release to R5.2.00 or higher. If you need assistance with the upgrade process, please contact Brocade Support.

The following general considerations apply to upgrades to NetIron 6.0.00 software.

When upgrading to NetIron 6.0.00 from the following NetIron versions (5.9.00a, 5.8.00d, 5.7.00e, 5.6.00h, 5.6.00ga), a direct upgrade to NetIron 6.0.00 can be performed.

When upgrading to NetIron 6.0.00 from releases prior to NetIron 5.6.00c a two-step approach is required.

1. Upgrade to any one of NetIron 5.9.00a, 5.8.00d, 5.7.00e, 5.6.00h, 5.6.00ga. Reload the device.
2. Upgrade again to the same image which was upgraded to in step 1 and reload the device again. This ensures that the device will have the SHA256 signatures on the device if they are needed, for example for LP Auto-upgrade.
3. Upgrade to NetIron 6.0.00 and reload the device.

To upgrade from NetIron 5.6.00c or any later release other than the images mentioned above, upgrade to NetIron 5.9.00a and then upgrade to NetIron 6.0.00.

The following general considerations apply to upgrades of Multi-Service IronWare software.

NOTE

Before you begin your R06.0.00 upgrade, you must clear enough code flash memory for the upgrade to be successful. Refer to [Important memory information for an R06.0.00 upgrade](#) on page 20.

- Because of code flash memory considerations, software versions R05.2.00 and later releases operate using a single copy of each image instead of primary and secondary images. R05.2.00 and later releases only support a single (primary) image on each module.
- The combined interface module FPGA image can exceed 32 MB in size, which is greater than the file size limit in older versions of TFTP server applications. Before you use TFTP to transfer image files, be sure that you are using an updated TFTP server capable of handling larger file sizes.
- In most cases boot images do not need to be upgraded, regardless of whether you are using the combined IronWare image, or are copying images to the management module and interface modules individually. Do not upgrade boot images unless you are explicitly instructed to do so in the upgrade instructions for the version you are using.
- Hitless OS upgrades are only supported for upgrades within a major software release. Hitless OS upgrades are not supported for upgrades from one major release to another major release. For more information about hitless upgrades, refer to [Hitless OS Upgrade for all Supported Devices](#) on page 39.

- Simplified Upgrades are only supported for upgrades from MultiService IronWare R05.3.00 to a higher release. For more information about Simplified Upgrades, refer to [Simplified Upgrade and Auto Upgrade](#) on page 43.
- The combined FPGA image is not supported in releases prior to MultiService IronWare R04.1.00.
- For 32-slot devices, you must copy the SBRIDGE image to each switch fabric module. If you are already running SBRIDGE version 6, this upgrade step is not necessary. Verify your SBRIDGE image using the **show version** command.
- If you are currently running MultiService IronWare R04.1.00 or 04.1.00a, DO NOT upgrade to SBRIDGE image 6. When loading the SBRIDGE image from a system running 4.1.00 or 4.1.00a, the image on the switch fabric modules may become corrupted. The recommended procedure is to upgrade all images except the SBRIDGE image, reload the device, then upgrade the SBRIDGE image.
- Beginning with MultiService IronWare R05.3.00, all types of POS modules are not supported.
- Beginning with MultiService IronWare R05.3.00, SNTP is not supported. When upgrading to R05.3.00, all SNTP configurations will be lost. SNTP functionality is replaced with NTP. For more information, refer to the Network Time Protocol chapter of the *Brocade NetIron Management Configuration Guide*.
- When upgrading FPGA images on a Line Card, a power cycle of the Line Card is required using either the MP system **reload** or **power-off lp** and **power-on lp** commands. The **lp boot sys flash** command does not perform a Line Card power cycle and is not sufficient to upgrade the FPGA images.
- The use of the "wait-for-all-cards" configuration in MultiService IronWare R05.3.00 may cause ports on any 1G module to stay down after boot-up, even if configured to be enabled. To avoid such an occurrence, it is recommended that the "wait-for-all-cards" configuration be removed from the startup-config prior to reloading the router with R05.3.00 code. For more information, refer to [Troubleshooting](#) on page 67.
- It is recommended to start a log file to capture the upgrade process for troubleshooting purposes if an unexpected event occurs.
- A two cycle upgrade is required when upgrading between SHA256 signature packages to non-SHA256 signature packages.
- When upgrading from a release that does not support SHA256 signatures to a release that does, please upgrade twice to the same release as follows. First upgrade to the release that supports SHA256 signatures. Reload the device. Then upgrade again to the same release that supports SHA256 signatures, and reload the device again. This ensures that the device will have the SHA256 signatures on the device if they are needed, for example for LP Auto-upgrade.
- Beginning with NetIron 6.0.00a the option is available to install the Network Packet Broker (NPB) FPGA manifest file. Refer to the NetIron 6.0.00a Release Notes for installation information and limitations.

NOTE

Refer to the Federal Information Processing Standards and Common Criteria Guide for more information when upgrading from non-SHA256 signatures to SHA256 signature packages or downgrading from SHA256 signature to non-SHA256 signature packages.

NOTE

There is specific case where NetIron 5.8.00b and NetIron 6.0.00 releases will not interoperate with each other when a default configuration is used in **ikev2 auth- proposal** to setup an IPsec tunnel. The default value for IKEv2 authentication proposal has changed in the NetIron 6.0.00 release. In NetIron 6.0.00 the pre _shared key is the default method, with the pre_shared key set to default value **def-ike-pre-shared-password**. To continue IKEv2 authentication interoperability between NetIron 5.8.00b and NetIron 6.0.00, you will need to ensure that the same IKEv2 authentication is configured on both nodes.

To prevent loss of interoperability:

1. Before upgrading:

EITHER

Configure non-default, IKEv2 authentication on both nodes for the IPsec tunnel.

OR

On each NetIron 5.8.00b node, change the authentication method to the pre _shared key with the key set to value **def-ike-pre-shared-password**.

2. Save the configurations.

3. Upgrade to the upgrade to NetIron 6.0.00.

General downgrade considerations

The following general considerations apply to downgrades of Mutli-Service IronWare software.

- Brocade MLXe routers must not be downgraded to software releases prior to R05.0.00c.
- Brocade NetIron MLX Series and Brocade NetIron XMR Series 24x1G-X modules (BR-MLX-1GFx24-X-ML, BR-MLX-1GFx24-X, BR-MLX-1GCx24-X-ML, BR-MLX-1GCx24-X) must not be downgraded to versions prior to R05.1.00.
- Brocade NetIron MLX Series and Brocade NetIron XMR Series 4x10G-X modules (BR-MLX-10Gx4-X, BR-MLX-10Gx4-X-ML) must not be downgraded to versions prior to R05.1.00.
- Brocade NetIron MLX Series 8x10G modules (NI-MLX-10Gx8-M, NI-MLX-10Gx8-D) must not be downgraded to versions prior to R05.0.00b.
- Brocade NetIron XMR Series 8x10G modules (BR-MLX-10Gx8-X) must not be downgraded to versions prior to R05.2.00.
- Brocade NetIron MLX Series and Brocade NetIron XMR Series 100G modules (BR-MLX-100Gx2-X, BR-MLX-100Gx1-X) must not be downgraded to versions prior to R05.2.00.
- MLX-32 devices must not be downgraded to versions prior to R03.6.00.
- Brocade NetIron CER Series devices must not be downgraded versions prior to R04.1.00a software.
- A two cycle downgrade/upgrade is required when downgrading between SHA256 signature packages to non-SHA256 signature packages. Generally , NI releases prior to 5.6 patch C (but not 5.6 patch AA) do not support SHA256 signatures.
- When downgrading from a release that does support SHA256 signatures to a release that does not, please downgrade twice to the same release as follows. First downgrade to the release that does not support SHA256 signatures. Reload the device. Then downgrade again to the same release that does not support SHA256 signatures, and reload the device again. This ensures that the device will have non-SHA256 signatures on the device after downgrade if they are needed, for example for LP Auto-upgrade.

NOTE

Downgrade from SHA256 signature to non-SHA256 signature packages requires two downgrade cycles to update the signature files from SHA256 signatures for LP Auto-upgrade to use the non-SHA256 signatures for manifest file signature check. When downgrading the following warning message may be seen:

```
Failed to rename manifest_tmp.sig into manifest.sig
```

Special upgrade information for Brocade MLXe devices

The following general considerations apply to upgrade Brocade MLXe Series devices:

- Brocade MLXe devices require a minimum software release of R05.0.00c.
- In rare circumstances, you may receive management modules with MLXe devices that are running R04.0.00b or R04.0.00g.

If your management module is running R04.0.00b, when you boot the device, you will see the following message:

```
"Error: unknown chassis type value 000000f0, system can't come up!"
```


If this occurs, contact Technical Support for guidance on how to upgrade the software.

If your management module is running R04.0.00g, when you boot the device it is recognized as a Brocade NetIron XMR device. Contact Technical support for guidance on how to upgrade the software.

- Although not recommended, if you want to use a management module that has a software image loaded in flash that is older than R05.0.00c in your MLXe chassis, you must first upgrade the module software to R05.0.00c or later. Contact Technical Support for guidance on how to upgrade the software on this module.

FPGA image upgrade information

NOTE

You must use FPGA images that are specified for Brocade NetIron MLX Series or Brocade NetIron XMR Series devices. If you use FPGA images intended for other products your device will be inoperable.

The following rules apply when upgrading FPGA images on interface modules:

- FPGA images on interface modules must be compatible with the software version running on the router.
- You can upgrade FPGA images individually, or upgrade all FPGA images using the combined FPGA image.
- When you copy the combined FPGA image from to the management module, the management module selects the FPGA images to be downloaded based on the types of interface modules installed and checks for duplicates before downloading the images.
- The FPGA upgrade utility compares the FPGA image version currently installed to new images being downloaded. If the versions are identical, the download is aborted and a warning message is displayed. You can use the **force-overwrite** option with the FPGA upgrade command to override this feature.
- The bundled FPGA image is more than 32 MB in size. If you are using a TFTP server, be sure that it is capable of handling larger file sizes.

NOTE

Starting in R06.0.00a two combined FPGA images will be available for download: the standard (MAIN) FPGA image and the Network Packet Broker (NPB) FPGA image. The Network Packet Broker FPGA image version is specific to the functionality of the Network Packet Broker.

ifIndex allocation

The SNMP Management Information Base (MIB) uses the Interface Index (ifIndex) to assign a unique value to each port on a module or slot. The number of indexes that can be assigned per module is 20, 40, or 64, depending on the number of ports on the module.

For modules with 1 to 20 ports, the ifIndex can be set to 20 or 40.

For modules with 24 or more ports, you must set the ifIndex to 64 before you install the module. This applies to 48-T interface modules and 1Gx24 copper or fiber interface modules.

To change the ifIndex number, enter the following command at the global config level of the CLI.

```
snmp-server max-ifindex-per-module 64
```

For hardware installation instructions, refer to the *MultiService Ironware hardware installation guide*.

Upgrade memory requirements

Before you begin your upgrade, verify that you have enough available bytes free in the flash memory. You should have a minimum of 18 MB available for 32-slot devices, and 16MB for 4, 8, and 16-slot devices to complete your upgrade. To clear enough memory you must first delete existing files. Refer to [Clearing code flash memory](#) on page 20.

Software upgrades for Brocade MLX Series and Brocade NetIron XMR devices

- [R06.0.00 images](#).....19
- [Important memory information for an R06.0.00 upgrade](#)..... 20
- [Performing a basic upgrade](#)..... 21

This chapter describes how to upgrade your Multi-Service IronWare software to R06.0.00.

NOTE

The software described in this chapter applies only to the Brocade NetIron MLX Series and Brocade NetIron XMR Series devices. You cannot use this software on other Brocade devices.

Before you begin your upgrade, read [Important Upgrade Information for all Supported Devices](#) on page 13 to make sure your system does not have special upgrade requirements.

R06.0.00 images

NOTE

When upgrading Multi-Service Ironware, follow the manifest upgrade to ensure all required files are upgraded. Boot upgrade is not part of the manifest upgrade. Compatible boot images for Multi-Service IronWare R06.0.00 include 05900 and 05800 versions. Although not required, it is recommended to use the most current version of the boot image.

NOTE

If the manifest upgrade is not followed, check the boot image for management, interface modules and the monitor image for compatibility.

Refer to the latest version of the [Brocade NetIron Release Notes](#) for all R06.0.00 images.

[Table 1](#) lists the required images for a basic upgrade.

TABLE 1 Required images for a basic R06.0.00 software upgrade

Image description	Image name
Combined application image for management modules	xm06000.bin
Monitor image for management modules	xmb06000.bin
Monitor image for interface modules	xmlb06000.bin
Boot image for management modules	xmprm06000.bin
Boot image for interface modules	xmlprm06000.bin
Combined FPGA image for interface modules	lpfpga06000.bin

For a list of all images for Multi-Service IronWare R06.0.00, refer to the *Brocade NetIron R06.0.00 Release Notes*.

Performing a patch upgrade

For patch releases, in most cases, boot and monitor images do not need to be upgraded. Refer to the *Brocade NetIron R06.0.00 Release Notes* for information about which image must be upgraded for a specific patch.

NOTE

Starting in R06.0.00a two combined FPGA images will be available for download: the standard (MAIN) FPGA image and the Network Packet Broker (NPB) FPGA image. The Network Packet Broker FPGA image version is specific to the functionality of the Network Packet Broker.

Important memory information for an R06.0.00 upgrade

Clearing code flash memory

To provide enough code flash memory to perform the upgrade you must delete the secondary application image files from the active management module. The Multi-Service IronWare software will sync the changes needed to accommodate R06.0.00 to the standby management module during the course of the upgrade process.

NOTE

Because of code flash memory considerations, R05.2.00 and later software operates using a single copy of each image instead of primary and secondary images. R05.2.00 and later supports only a single (primary) image on each module.

NOTE

You should not need to remove any other files than the ones specified below from the code flash to complete the upgrade.

NOTE

It is recommended that you copy all files to a file server for later retrieval if necessary.

For management modules

R05.2.00 and later only support a single image on each module. To manually delete the secondary files from the active management module, perform the following steps:

NOTE

If your set up is not running a secondary image, and you perform these steps, you will receive the following error message: `Remove file /flash/secondary failed - File not found`

1. Delete the secondary application image by entering the following command.

delete secondary

2. Delete the secondary lp application image by entering the following command.

delete lp-secondary-0

3. Delete any `___mbridge.old` files from the active management module by entering the following command (three underscores are required in front of `mbridge.old`).

delete ___mbridge.old

4. Enter the `dir` command to check available memory, as shown in this sample output. You should have approximately 18 MB available for 32-slot devices, and approximately 16 MB for 4, 8, and 16-slot devices to complete your upgrade.

```
device# dir
Directory of /flash/
01/11/2011   03:18:42   2  $$snmp_boots
09/30/2009   03:47:50   5,201  $$sshdsspub.key
06/15/2011   21:19:04   660,145  ___mbridge
12/07/2010   22:16:23   139  boot_parameter
06/15/2011   21:20:00   524,288  lp-monitor-0
06/15/2011   21:07:44   4,950,939  lp-primary-0
06/15/2011   21:19:28   524,053  monitor
```

```

06/15/2011    21:08:37    6,986,237 primary
06/20/2011    17:11:42    620,225 startup-config
   9 File(s)    14,271,229 bytes
   0 Dir(s)     16,515,072 bytes free

```

5. Manually delete all unwanted backup configuration files to provide enough memory to accommodate the new images.

For interface modules

R05.2.00 and later support only a single image on each module. To remove secondary application image files from each interface module, perform the following steps:

1. Enter the **show module** command and note the slots the interface modules are installed into for the device.
2. Rconsole to each interface module and enter the **delete secondary** command as shown in this sample output. You should delete the secondary application image file on each interface module.

```

telnet@
device#rconsole 1
Remote connection to LP slot 1 established
Press CTRL-X or type 'exit' to disconnect it
LP-1>enable
LP-1#delete secondary
LP-1# <ctrl-x>
...

```

3. Enter the **dir** command to check available memory, as shown in this sample output. You should have approximately 8.0 MB per interface module to complete your upgrade.

```

LP-2# dir
Directory of /flash/
File Name      Size    Chksum
PBIF           112     81ed
XPP            112     7ff7
boot           524288  6c2b
monitor        524288  fd4a
primary        4950939 df45
  5 File(s) 5999739 bytes
 Available 58982400 bytes

```

Performing a basic upgrade

The overall procedure for a basic upgrade involves copying only the new application, boot, monitor, and combined FPGA image. If any of the other image versions do not match those listed in the *NetIron R06.0.00 Release Notes*, you will need to upgrade those images as well (for example, individual FPGAs or the MBRIDGE or SBRIDGE images). For instructions on how to upgrade additional images, refer to [Software upgrades for Brocade MLX Series and Brocade NetIron XMR devices](#) on page 19 on page 19 .

Basic upgrade Steps

Please read the full upgrade instructions, listed below, carefully.

Once you have cleared enough code flash memory, you must perform the following steps to complete a basic software upgrade:

- [Step 1 - Determining current software image versions](#) on page 22.
- [Step 2 - Upgrading the management module monitor image](#) on page 24.
- [Step 3 - Upgrading the management module boot image](#) on page 24.
- [Step 4 - Upgrading the combined application image on management modules](#) on page 25.
- [Step 5 - Upgrading boot and monitor images on interface modules](#) on page 25.

- [Step 6 - Upgrading interface modules using the combined FPGA image](#) on page 26.
- [Step 7 - Performing supplemental image upgrades \(as needed\)](#) on page 27.
- [Step 8 - Performing an image coherence check](#) on page 27.
- [Step 9 - Reloading the management module](#) on page 28.

Step 1 - Determining current software image versions

Before you upgrade your software, you must check the image versions currently installed to determine which ones need to be upgraded (in addition to the images needed for the basic upgrade).

To display image version information, enter the **show flash** or **show version** command. Compare the image versions to the compatible image version numbers listed in *NetIron R06.0.00 Release Notes*.

You can view the images stored in flash memory using the **show flash** command.

NOTE

Output examples have been shortened for brevity and do not necessarily reflect all components installed in a system. This example output may not exactly match output from your system.

show flash command output example

In the following examples, the image versions appear in bold.

```
device# show flash
~~~~~
Active Management Module (Left Slot)
Code Flash - Type MT28F128J3, Size 32 MB
o IronWare Image (Primary)
Version 5.1.0T163, Size 6986803 bytes, Check Sum 74d5
Compiled on Mar 16 2011 at 17:49:56 labeled as xmr05100
o IronWare Image (Secondary)
Version 5.1.0T163, Size 6984593 bytes, Check Sum d570
Compiled on Mar 17 2011 at 16:13:36 labeled as xmr05100
o LP Kernel Image (Monitor for LP Image Type 0)
Version 5.1.0T175, Size 493244 bytes, Check Sum fd4a
Compiled on Mar 11 2011 at 14:07:42 labeled as xmlb05100
o LP IronWare Image (Primary for LP Image Type 0)
Version 5.1.0T177, Size 4950936 bytes, Check Sum d368
Compiled on Mar 16 2011 at 17:55:24 labeled as xmlp05100
o LP IronWare Image (Secondary for LP Image Type 0)
Version 5.1.0T177, Size 4947628 bytes, Check Sum 3f13
Compiled on Aug 18 2011 at 17:39:16 labeled as xmlp05100
o Monitor Image
Version 5.1.0T165, Size 524053 bytes, Check Sum 70b1
Compiled on Mar 11 2011 at 14:06:30 labeled as xmb05100
o Startup Configuration
Size 12652 bytes, Check Sum dd86
Modified on 21:57:42 Pacific Thu Sep 16 2010
Boot Flash - Type AM29LV040B, Size 512 KB
o Boot Image
Version 5.1.0T165, Size 524038 bytes, Check Sum 59a3
Compiled on Mar 11 2011 at 14:06:58 labeled as xmpr05100
~~~~~
Standby Management Module (Right Slot)
Code Flash: Type MT28F128J3, Size 32 MB
o IronWare Image (Primary)
Version 5.1.0T163, Size 6986803 bytes, Check Sum 74d5
Compiled on Mar 16 2011 at 17:49:56 labeled as xmr05100
o IronWare Image (Secondary)
Version 5.1.0T163, Size 6984593 bytes, Check Sum d570
Compiled on Mar 17 2011 at 16:13:36 labeled as xmr05100
o LP Kernel Image (Monitor for LP Image Type 0)
Version 5.1.0T175, Size 493244 bytes, Check Sum fd4a
```

```

Compiled on Mar 11 2011 at 14:07:42 labeled as xmlb05100
o LP IronWare Image (Primary for LP Image Type 0)
Version 5.1.0T177, Size 4950936 bytes, Check Sum d368
Compiled on Mar 16 2012 at 17:55:24 labeled as xmlp05100
o LP IronWare Image (Secondary for LP Image Type 0)
Version 5.1.0T177, Size 4947628 bytes, Check Sum 3f13
Compiled on Mar 18 2011 at 17:39:16 labeled as xmlp05100
o Monitor Image
Version 5.1.0T165, Size 524053 bytes, Check Sum 70b1
Compiled on Mar 11 2011 at 14:06:30 labeled as xmb05100
o Startup Configuration
Size 12652 bytes, Check Sum dd86
Modified on 14:15:27 Pacific Fri Mar 17 2011
Boot Flash: Type AM29LV040B, Size 512 KB
o Boot Image Version 5.1.0T165, Size 524038 bytes, Check Sum 59a3
Compiled on Mar 11 2011 at 14:06:58 labeled as xmpr05100
~~~~~
Line Card Slot 4
Code Flash: Type MT28F640J3, Size 16 MB
o IronWare Image (Primary)
Version 5.1.0T177, Size 4950936 bytes, Check Sum d368
Compiled on Mar 16 2011 at 17:55:24 labeled as xmlp05100
o IronWare Image (Secondary)
Version 5.1.0T177, Size 4947628 bytes, Check Sum 3f13
Compiled on Mar 18 2011 at 17:39:16 labeled as xmlp05100b1
o Monitor Image
Version 5.1.0T175, Size 493244 bytes, Check Sum fd4a
Compiled on Mar 11 2011 at 14:07:42 labeled as xmlb05100
Boot Flash: Type AM29LV040B, Size 512 KB
o Boot Image
Version 5.1.0T175, Size 492544 bytes, Check Sum 6c2b
Compiled on Mar 11 2011 at 14:07:20 labeled as xmpr05100
FPGA Version (Stored In Flash):
PBIF Version = 3.24, Build Time = 8/4/2010 14:57:00
XPP Version = 6.03, Build Time = 2/18/2010 16:38:00
STATS Version = 0.08, Build Time = 2/18/2010 16:30:00
~~~~~
All show flash done

```

show version command output example

```

device# show version
System Mode: MLX
Chassis: Brocade 8-slot (Serial #: GOLD, Part #: 35549-000C)
NI-X-SF Switch Fabric Module 1 (Serial #: PR23050271, Part #: 31523-100A)
FE 1: Type fe200, Version 2
FE 3: Type fe200, Version 2
NI-X-SF Switch Fabric Module 2 (Serial #: SA21091164, Part #: 35523-302A)
FE 1: Type fe200, Version 2
FE 3: Type fe200, Version 2
NI-X-SF Switch Fabric Module 3 (Serial #: SA21091204, Part #: 35523-302A)
FE 1: Type fe200, Version 2
FE 3: Type fe200, Version 2
=====
SL M2: NI-MLX-MR Management Module Active (Serial #: SA21091472, Part #:
35524-103C):
Boot: Version 5.1.0T165 Copyright(c)1996-2011 Brocade Communications Systems, Inc.
Compiled on Feb 11 2011 at 14:06:58 labeled as xmpr05100
(524038 bytes) from boot flash
Monitor: Version 5.1.0T165 Copyright(c)1996-2011 Brocade Communications Systems,
Inc.
Compiled on Feb 11 2011 at 14:06:30 labeled as xmb05100
(524053 bytes) from code flash
IronWare: Version 5.1.0T163 Copyright(c)1996-2011 Brocade Communications Systems,
Inc.
Compiled on Feb 16 2011 at 17:49:56 labeled as xmr05100
(6986803 bytes) from Primary
Board ID : 00 MBRIDGE Revision : 32
916 MHz Power PC processor 7447A (version 8003/0101) 166 MHz bus
512 KB Boot Flash (AM29LV040B), 32 MB Code Flash (MT28F128J3)
1024 MB DRAM

```

```

Active Management uptime is 1 minutes 28 seconds
=====
SL 4:NI-MLX-1Gx48-T 48-port 10/100/1000Base-T MRJ21 Module(Serial#:
SA05091472,Part#: 35663-20EA)
Boot: Version 5.1.0T175 Copyright(c) 1996-2011 Brocade Communications Systems,
Inc.
Compiled on Feb 11 2011 at 14:07:20 labeled as xmlprm05100
(492544 bytes) from boot flash
Monitor: Version 5.1.0T175 Copyright(c)1996-2011 Brocade Communications Systems,
Inc.
Compiled on Feb 11 2011 at 14:07:42 labeled as xmlb05100
(493244 bytes) from code flash
IronWare: Version 5.1.0T177 Copyright(c)1996-2011 Brocade Communications Systems,
Inc.
Compiled on Feb 16 2011 at 17:55:24 labeled as xmlp05100
(4950936 bytes) from Primary
FPGA versions:
Valid PBIF Version = 3.24, Build Time = 8/4/2010 14:57:00
Valid XPP Version = 6.03, Build Time = 2/18/2010 16:38:00
Valid STATS Version = 0.08, Build Time = 2/18/2010 16:30:00
BCM56502GMAC 0
BCM56502GMAC 1
666 MHz MPC 8541 (version 8020/0020) 333 MHz bus
512 KB Boot Flash (AM29LV040B), 16 MB Code Flash (MT28F640J3)
1024 MB DRAM, 8 KB SRAM, 0 Bytes BRAM
PPCR0: 768K entries CAM, 8192K PRAM, 2048K AGE RAM
PPCR1: 768K entries CAM, 8192K PRAM, 2048K AGE RAM
LP Slot 4 uptime is 58 seconds
=====
All show version done

```

Step 2 - Upgrading the management module monitor image

To upgrade the monitor image on a management module, perform the following steps:

1. Place the new monitor image on an SCP or TFTP server, or on a flash card inserted in slot 1 or 2 in the management module.
2. Copy the new monitor image to the device by entering one of the following commands:
 - - Using SCP on a remote client:

```
C> scp xmb xxxxx.bin user@device-IPAddress :flash:monitor
```

The device-IPAddress variable is the IP address of the device where image needs to be transferred.

- - Using TFTP at the Privileged EXEC level of the CLI:

```
copy tftp flash tftp-srvr xmb xxxxx.bin monitor
```

- - Using the flash card:

```
copy [slot 1 | slot 2] flash xmbxxxx.bin monitor
```

3. Verify that the new monitor image has been successfully copied by entering the **show flash** command.

Step 3 - Upgrading the management module boot image

To upgrade the boot image on a management module, perform the following steps:

1. Place the new boot image on an SCP or TFTP server, or on a flash card inserted in slot 1 or 2 in the management module.
2. Copy the new boot image to the device by entering one of the following commands.
 - - Using SCP on a remote client:

```
C> scp xmprm xxxxx.bin user@device-IPAddress :flash:boot
```

The device -IPAddress variable is the IP address of the device where image needs to be transferred.

- - Using TFTP at the Privileged EXEC level of the CLI:

```
copy tftp flash tftp-srvr xmprn xxxxx.bin boot
```

- - Using the flash card:

```
copy [slot 1 | slot 2] flash xmprn xxxxx.bin boot
```

3. Verify that the new boot image has been successfully copied by entering the **show flash** command. Check the image versions, and the date and time when the new images were built.

Step 4 - Upgrading the combined application image on management modules

NOTE

Because of code flash memory considerations, R05.2.00 and later software operates using a single copy of each image instead of primary and secondary images. R05.2.00 and later only supports a single (primary) image on each module.

NOTE

Do not use the **copy tftp flash** command when upgrading the Combined Application Image (for example: **xm05600.bin**) or the system will only upgrade the Management Module Application image and will not upgrade the Interface Module Application image.

1. Place the new software images on an SCP or TFTP server, or on a flash card inserted in slot 1 or 2 on the active management module.
2. Copy the new combined image by entering one of the following commands.
 - - Using SCP on a remote client:

```
C:> scp xm xxxxx.bin user@device-IpAddress: image: [ primary | secondary ]
```

- - Using TFTP at the Privileged EXEC level of the CLI:

```
copy tftp image tftp-srvr xm xxxxx.bin [primary |secondary] [delete-first]
```

- - Using the flash card

```
copy [slot 1 |slot 2] image xm xxxxx.bin [primary | secondary] [delete-first]
```

The **primary** option copies the files to the primary image on the management module.

The **secondary** option copies the files to the secondary image on the management module.

The **delete-first** option automatically deletes the existing primary or secondary flash images before installing the new images.

3. Verify that the new image has been successfully copied by entering the **show flash** command at the Privileged Exec level of the CLI and checking the image name and the date and time that it was placed in the directory.

Step 5 - Upgrading boot and monitor images on interface modules

It is recommended that you perform this upgrade from a PC or terminal that is directly connected to the Console port on the management module. You can also perform this procedure through a Telnet or SSHv2 session.

NOTE

If you use the **all** keyword, the LP monitor code is always saved to monitor code space on the management module. If you specify a slot number, the management module copy of the LP code is not changed.

To upgrade monitor and boot images for all interface modules or a specified interface module perform the following steps.

1. Place the new monitor and boot images on an SCP or TFTP server or on a flash card inserted in slot 1 or 2 of the management module.
2. Copy the new monitor and boot images to all interface modules, or to a specified interface module by entering one of the following commands:

- - Using SCP on a remote client:

```
C:> scp xmlbxxxxx.bin user@device-IpAddress:ip:monitor [all | slot-number]
```

```
C:> scp xmlprmxxxxx.bin use>@device-IpAddress:ip:boot: [all | slot-number]
```

The *device-IpAddress* variable is the Ip address of the device where image needs to be transferred.

- - Using TFTP at the Privileged EXEC level of the CLI:

```
copy tftp ip tftp-srvr xmlb xxxxx.bin monitor [all | slot-number]
```

```
copy tftp ip tftp-srvr xmlprm xxxxx.bin boot [all | slot-number]
```

- - Using the flash card

```
copy [slot 1 | slot 2] ip xmlbxxxxx.bin monitor [all | slot-number]
```

```
copy [slot 1 | slot 2] ip xmlprmxxxxx.bin boot [all | slot-number]
```

The **all** keyword copies the image to all interface modules.

The *slot-number* variable copies the image to a specific interface module.

3. Verify that the new images were successfully copied by entering the **show flash** command. Check the image versions, and the date and time when the new images were built.

Step 6 - Upgrading interface modules using the combined FPGA image

NOTE

The combined interface module FPGA image can exceed 32 MB in size, which is greater than the file size limit in older versions of TFTP server applications. Before you use TFTP to transfer image files, be sure that you are using an updated TFTP server capable of handling larger file sizes.

NOTE

Before you upgrade the FPGA code on the line cards, change the preforwarding timer to 1200 milliseconds (1.2 seconds). The value needs to be changed on all the switches in the MRP ring. For more information, refer to the **Metro Ring Protocol** chapter of the *Brocade NetIron Switching Configuration Guide*.

To upgrade FPGA images on interface modules using the combined FPGA image, perform the following steps:

1. Place the combined FPGA image on an SCP or TFTP server, or on a flash card inserted in management module slot 1 or 2.
2. Copy the combined FPGA image to all interface modules, or to a specific interface module by entering one of the following commands:

- - Using SCP on a remote client:

```
C:> scp lpfpgaxxxxx.bin user@device-IpAddress:ip:fpga-all: [all | slot-number] [:force-overwrite]
```

The *device-IpAddress* variable is the Ip address of the device where image needs to be transferred.

- - Using TFTP at the Privileged EXEC level of the CLI:

```
copy tftp ip tftp-srvr lpfpga xxxxx.bin fpga-all [slot-num | all] [force -overwrite]
```

- - Using the flash card:

```
copy [slot 1 | slot 2] lp lpfpga.xxxx.bin [slot-num| all] [force -overwrite]
```

The *tftp-server* variable is the address of the TFTP server.

The *slot-num* variable specifies the slot number.

The management module compares the copied FPGA versions to the images currently installed on all interface modules (the **all** option), or on a specified interface module (*slot-number*). If the FPGA images are identical, the download is aborted and a message appears:

```
Copying 1st image (PBIF - Ethernet) to slot(s) 6, 8 skipped, same version exists. Use "force
overwrite" if required.
```

The download continues for interface modules that do not have matching FPGA images.

The **force-overwrite** option allows you to copy the FPGA image identical to the image currently installed. A warning message is not sent. The **force-overwrite** option can also be used for a specific module type.

Step 7 - Performing supplemental image upgrades (as needed)

This procedure is generally not required for a major software upgrade. To determine whether you need to upgrade these images, refer to the images and versions listed in the *Brocade NetTron Unified R06.0.00 Release Notes*. If your system image versions differ from those listed in the table, you will need to upgrade them using the following sections:

- Upgrading MBRIDGE or MBRIDGE32 images on management modules
- Upgrading the SBRIDGE image on 32-slot devices
- Upgrading the HSBIDGE image on 32-slot devices

Step 8 - Performing an image coherence check

When you enter the **reload-check** command, Multi-Service IronWare software performs a coherence check to ensure that compatible versions are installed on management and interface modules, and that all interface module FPGAs are compatible with the current software version. If the software discovers incompatible images, a warning message is sent.

The image coherence check is performed in the following sequence:

1. Check management module and interface module application images for compatibility.
2. Checks the interface module monitor image on the management module and all interface modules.
3. Checks the management module monitor image for compatibility with the management module application image.
4. Checks the interface module monitor image for compatibility the management and interface module application images.
5. Checks all interface module FPGAs for compatibility with the application image. FPGAs include CPP, PBIF, XGMAC, STATS.

If step 1 does not succeed, verification is stopped and a warning is issued. If step 1 succeeds, the rest of the checks are conducted in parallel.

Performing a coherence check without a reload

Enter the **reload-check** command to perform a coherence check without performing a reload.

Example output from this command that shows some inconsistencies is shown here.

```
device# reload-check
Checking for coherence...
Warning: The new LP PBIF-8X10 FPGA will not be compatible with the new LP 3 application.
Warning: The new LP XPP-8X10 FPGA will not be compatible with the new LP 3 application.
Done.
```

Error messages generated by a coherence check

The following error messages are generated if a coherence check fails:

```
Warning: Image coherence check skipped due to insufficient info: Invalid active LP flash images in Primary/
Secondary.
Warning: Image coherence check skipped due to insufficient info: Invalid active MP flash images in Primary/
Secondary.
Warning: Image coherence check skipped due to insufficient inf: MP/LP not booting from flash.
Warning: Image coherence check skipped due to failure to communicate with LP.
```

If interface modules are in interactive mode, or the system is unable to communicate with the interface modules, the system sends the following warning message:

```
Can't check LP for coherence
```

Step 9 - Reloading the management module

When you complete your upgrade process, you must reload the management module, which then reboots the interface modules.

NOTE

When upgrading FPGA images on a Line Card, a power cycle of the Line Card is required using either the MP system **reload** or **power-off lp** and **power-on lp** commands. The **lp boot sys flash** command does not perform a Line Card power cycle and is not sufficient to upgrade the FPGA images.

Before reloading the management module, use the **write memory** command to save the current configuration.

To reload the management module, enter one of the following commands:

reload (this command boots from the default boot source, which is the primary code flash)

For example:

```
device# reload
Checking for coherence...
Done.
Are you sure? (enter 'y' or 'n'): y
Halt and reboot
```

boot system flash [primary]

When the management module reboots, the following synchronization events occur:

- The system compares the monitor, primary, and secondary images on a standby management module (if installed) to those on the active management module. If you have updated these images on the active module, the system automatically synchronizes the images on the standby module to match those on the active management module.

If you copied the primary and secondary image to all interface modules using the **copy** command with the **all** keyword, the management module copied the image and stored it in flash memory under the names **lp-primary-0** or **lp-secondary-0**. By default, the system compares the images on the interface modules to the images on the management module to confirm that they are identical. (These images are stored on the management module only and are not run by the management or interface modules.) If the images are not identical, the system gives you the following options.

To replace the images in interface module flash memory with the images in the management module flash memory, enter the **lp cont-boot sync slot-number** command at the Privileged EXEC prompt.

To retain the images in the interface module flash memory, enter the **lp cont-boot no-sync slot-number** command at the Privileged EXEC prompt.

After the management module finishes booting, perform the following steps.

1. Enter the **show module** command, and verify that the status of all interface modules is **CARD_STATE_UP**.

2. Enter the **show version** command, and verify that all management and interface modules are running the new software image version.

NOTE

If an interface module is in a waiting state or is running an older software image, you may have forgotten to enter the **lp cont-boot syncslot-number** command at the Privileged EXEC prompt.

3. If your upgrade fails, for recovery information refer to [Recovering from a failed upgrade](#) on page 67.
4. Verify that the new images were successfully copied by entering the **show flash** command. Check the image versions, and the date and time when the new images were built.

Brocade MLX Series and NetIron XMR supplemental upgrade procedures

- Upgrading MBRIDGE or MBRIDGE32 images on management modules..... 31
- Upgrading the SBRIDGE image on 32-slot devices..... 32
- Upgrading the HSBIDGE image on 32-slot devices..... 32
- Upgrading individual FPGA images on interface modules..... 33

The following chapter describe additional upgrade procedures that may be required to upgrade individual images. To determine whether you need to upgrade these images, refer to the *Brocade NetIron Release Notes*.

NOTE

Starting in R06.0.00a two combined FPGA images will be available for download: the standard (MAIN) FPGA image and the Network Packet Broker (NPB) FPGA image. The Network Packet Broker FPGA image version is specific to the functionality of the Network Packet Broker.

Upgrading MBRIDGE or MBRIDGE32 images on management modules

NOTE

This procedure is generally not required for a major software upgrade. To determine whether you need to upgrade these images, refer to the *Brocade NetIron Release Notes*.

To upgrade the MBRIDGE image on your management module, perform the following steps:

NOTE

If you are upgrading a 32-slot device, use the MBRIDGE32 image.

1. Place the new MBRIDGE image on an SCP or TFTP server, or on a flash card inserted in slot 1 or 2 in the management module.
2. Copy the new MBRIDGE image by entering one of the following commands.
 - Using SCP on a remote client:

```
C:> scp mbridgexxxx.xsvf user@device-IPAddress:mbridge
```
 - Using TFTP at the Privileged EXEC level of the CLI:

```
copy tftp mbridge tftp-srvr mbridge _ xxxx.xsvf
```
 - Using the flash card:

```
copy [slot 1 | slot 2] mbridge mbridge_ xxxx.xsvf
```
3. Verify that the new image has been successfully copied by entering the **show flash** command. Check the image version and the date and time when the new image was built.

NOTE

Always use TELNET on the MLX-32 chassis (instead of SSH). PROM write operations consume substantial CPU cycles, starving other tasks such as SSH. The end result includes timeouts within affected tasks. TELNET does not have similar issues (such as hello exchanges) and hence is not impacted.

Upgrading the SBRIDGE image on 32-slot devices

The SBRIDGE image applies to standard switch fabric modules on 32-slot devices.

NOTE

This procedure is generally not required for a major software upgrade. To determine whether you need to upgrade these images, refer to the *Brocade NetIron Release Notes*.

To upgrade the SBRIDGE image on switch fabric modules installed in a 32-slot device, perform the following steps:

1. Place the new SBRIDGE image on an SCP or TFTP server, or on a flash card in slot 1 or 2 of the management module.
2. Copy the SBRIDGE image to all switch fabric modules or to a specified switch fabric module by entering one of the following commands:

- Using SCP on a remote client:

```
C:> scp sbridge_XXXX.mcs user@device-IPAddress:snm:sbridge: [all |slot-number]
```

- Using TFTP at the Privileged EXEC level of the CLI:

```
copy tftp snm tftp-srvr sbridge_XXXX.mcs sbridge [all |slot-number]
```

- Using the flash card:

```
copy [slot 1 |slot 2] snm sbridge_XXXX.mcs sbridge [all |slot-number]
```

The `all` keyword copies the image to all switch fabric modules.

The `slot-number` variable copies the image to a specified switch fabric module.

3. Verify that the SBRIDGE image has been successfully copied by entering the **show version** command. Check the image name and the date and time when the new image was built.

Upgrading the HSBRIDGE image on 32-slot devices

The HSBRIDGE image applies to high-speed switch fabric modules installed in 32-slot devices.

NOTE

This procedure is generally not required for a major software upgrade. To determine whether you need to upgrade these images, refer to the *Brocade NetIron Release Notes*.

To upgrade the HSBRIDGE image on high-speed switch fabric modules installed in a 32-slot device, perform the following steps.

1. Place the new HSBRIDGE image on an SCP or TFTP server, or on a flash card in slot 1 or 2 of the management module.
2. Copy the HSBRIDGE image to all high-speed switch fabric modules or to a specified high-speed switch fabric module by entering one of the following commands:

- Using SCP on a remote client:

```
C:> scp hsbridge_XXXX.mcs user@device-IPAddress:snm:sbridge: [all |snm-index]
```

- Using TFTP at the Privileged EXEC level of the CLI:

```
copy tftp snm tftp-srvr hsbridge_XXXX.mcs sbridge [all |snm-index]
```

- Using the flash card:

```
copy [slot 1 |slot 2] snm hsbridge_XXXX.mcs sbridge [all |<snm-index>]
```

The `all` keyword copies the image to all high-speed switch fabric modules.

The `snm-index` variable copies the image to a specific high-speed switch fabric module.

3. Verify that the HSBIDGE image has been successfully copied by entering the **show version** command. Check the image name and the date and time the new image was built.

Upgrading individual FPGA images on interface modules

NOTE

This procedure is generally not required for a major software upgrade. To determine whether you need to upgrade these images, refer to the *Brocade NetIron Release Notes*.

NOTE

Brocade recommends using the combined FPGA image to simplify the FPGA image upgrade procedure.

NOTE

When upgrading FPGA images on a Line Card, a power cycle of the Line Card is required using either the MP system **reload** or **power-off lp** and **power-on lp** commands. The **lp boot sys flash** command does not perform a Line Card power cycle and is not sufficient to upgrade the FPGA images.

NOTE

Before you upgrade the FPGA code on the line cards, change the preforwarding timer to 1200 milliseconds (1.2 seconds). The value needs to be changed on all the switches in the MRP ring. For more information, refer to the **Metro Ring Protocol** chapter of the *Brocade NetIron Switching Configuration Guide*.

To upgrade FPGA images individually, perform the following steps.

1. Copy each FPGA image from the TFTP server or a flash card to all interface modules, or to a specified interface module by entering one of the following commands:

- Using SCP on a remote client:

```
C:> scp fpga-image-namexxxx.bin user@device-ipAddress:lp: [fpga-pbif | fpga-stats | fpga-xgmac | fpga-xpp]:[all | /p-slot-  
num] [:force-overwrite]
```

- Using TFTP at the Privileged EXEC level of the CLI:

```
copy tftp lp tftp-srvr fpga-image-namexxxx.bin [all | slot-number [image-type [module-type] [force-overwrite]
```

- Using the PCMCIA flash card:

```
copy [slot 1 | slot 2] lp fpga-image-namexxxx.bin [all | module-type] [force-overwrite]
```

Specify the *fpga-image-namexxxx.bin* of the FPGA file you are copying, for example pbifsp2_05700.bin, xppsp2_05700.bin, etc. For a complete list of individual FPGA file names, refer to the *Brocade NetIron Release Notes*.

If you specify the *module-type* the device copies the images for that module only. If you specify all without a module-type, the system copies the appropriate images to the corresponding modules.

The system compares FPGA versions being copied to those currently on the interface modules. If the images are identical, the download is aborted, and the following warning message appears.

```
Warning: same version of FPGA already exists on LP, no need to download FPGA again, use force-  
overwrite option to force download.
```

If you use the **all** option, the system checks each interface module, and sends warning messages for Interface modules that have matching FPGA images. For interface modules that do not have matching FPGA images, the software proceeds with the download.

If you use the **force-overwrite** option, an identical image is downloaded and no warning message is sent.

2. The new FPGA images take effect when the management module is rebooted. You can also force the FPGA image to take effect on an interface module without rebooting the management module by "power cycling" the interface module using either of the following methods:

- Turn the power off and on for the interface module using the **power-off lpslot-number** command followed by the **power-on lpslot-number** command.
- Remove and reinsert the interface module.

When the interface module boots, the FPGA Version Check utility confirms that compatible versions of the FPGA images have been installed. At restart or when you enter the **show version** command, the following information appears (the output on your system might vary from this example):

```
Valid PBIFF Version = 3.21, Build Time = 03/11/2011 14:44:00
Valid XPP Version = 6.02, Build Time = 02/31/2011 10:52:00
Valid STATS Version = 0.07, Build Time = 01/11/2011 13:33:00
```

If there is a problem with your FPGA upgrade, one of the following warnings will be displayed:

```
WARN: Invalid FPGA version = 1.2, Build Time = 2/13/2011 13:20:0 <<<---
```

This message indicates an FPGA version mismatch, or that one of the versions is not current:

```
ERROR: failed to read FPGA versions from flash <<<---
```

This message indicates that you have not completed a mandatory FPGA upgrade.

Software Upgrades for Brocade NetIron CER Series and Brocade NetIron CES Series devices

- [R06.0.00 images](#).....35
- [Performing a basic upgrade](#).....35

This chapter describes how to upgrade software on Brocade NetIron CER Series and Brocade NetIron CES Series devices. The procedures described are identical for all models, except where indicated.

NOTE

The software described in this section applies only to the Brocade NetIron CER Series and Brocade NetIron CES Series devices. You cannot use this software on other Brocade devices.

R06.0.00 images

Refer to the latest version of the Brocade NetIron Release Notes for all R06.0.00 images.

NOTE

When upgrading Multi-Service Ironware, follow the manifest upgrade to ensure all required files are upgraded. Boot upgrade is not part of the manifest upgrade. Compatible boot images for Multi-Service IronWare R06.0.00 include 05900 and 05800 versions. Although not required, it is recommended to use the most current version of the boot image.

NOTE

If the manifest upgrade is not followed, check the boot and monitor image for compatibility.

[Table 2](#) lists the required images and image names for an upgrade to R06.0.00.

TABLE 2 Required images for a basic R06.0.00 software upgrade

Image description	Image name
Application - Multi-Service IronWare	ce06000.bin
Boot and monitor image (for Brocade NetIron CER Series and Brocade NetIron CES Series devices, the boot and monitor images are the same)	ceb006000.bin
fpga-pbif image	pbifmetro_06000.bin

Performing a patch upgrade

Refer to the latest version of the Brocade NetIron Release Notes for information about which images must be upgraded for a specific patch.

Performing a basic upgrade

The following sections describe how to perform a basic software upgrade.

Before you begin your upgrade, read [Important Upgrade Information for all Supported Devices](#) on page 13 to make sure your system does not require special upgrade steps.

Upgrading Multi-Service IronWare software for Brocade NetIron CES and CER devices requires an upgrade of the combined application image, boot image, and monitor images.

This upgrade requires the following steps:

Step 1 - Determining current image versions

Before you upgrade the images on a Brocade NetIron CER Series or Brocade NetIron CES Series device, you should check the image versions already installed to determine which ones need to be upgraded. You should also check the versions after you complete your upgrade to confirm that the upgrade was successful. Use the **show flash** and **show version** commands to display this information.

Compare the image versions in the output of these commands to the versions listed in [R06.0.00 images](#) on page 35. Upgrade any image versions that do not match those shown in the table.

Examples of output from these commands is shown here.

NOTE

These examples may differ slightly from the information displayed for your system.

show flash command output

```
device#show flash
~~~~~
Code Flash - Type MT28F256J3, Size 64 MB
  o IronWare Image (Primary)
    Version 5.3.0T183, Size 14385657 bytes, Check Sum e848
    Compiled on Jan 20 2012 at 18:56:08 labeled as ce05300
  o Monitor Image
    Version 5.3.0T185, Size 447585 bytes, Check Sum 58c7
    Compiled on Nov 16 2011 at 10:06:46 labeled as ceb05300
  o Startup Configuration
    Size 6002 bytes, Check Sum cc8a
    Modified on 19:50:20 GMT+00 Fri Jan 27 2012
Boot Flash - Type AM29LV040B, Size 512 KB
  o Boot Image
    Version 5.3.0T185, Size 447585 bytes, Check Sum 58c7
    Compiled on Nov 16 2011 at 10:06:46 labeled as ceb05300
~~~~~
```

show version command output

```
device#show version
System: NetIron CER (Serial #: K40533F00H, Part #: 40-1000372-04)
License: RT_SCALE, ADV_SVCS_PREM (LID: mJFKIIhFFj)
Boot      : Version 5.3.0T185 Copyright (c) 1996-2009 Brocade Communications Systems, Inc.
Compiled on Nov 16 2011 at 10:06:46 labeled as ceb05300
(447585 bytes) from boot flash
Monitor   : Version 5.3.0T185 Copyright (c) 1996-2009 Brocade Communications Systems, Inc.
Compiled on Nov 16 2011 at 10:06:46 labeled as ceb05300
(447585 bytes) from code flash
IronWare  : Version 5.3.0T183 Copyright (c) 1996-2009 Brocade Communications Systems, Inc.
Compiled on Jan 20 2012 at 18:56:08 labeled as ce05300
(14385657 bytes) from Primary
CPLD Version: 0x00000010
Micro-Controller Version: 0x0000000d
Extended route scalability
PBIF Version: 0x56
800 MHz Power PC processor 8544 (version 8021/0022) 400 MHz bus
512 KB Boot Flash (AM29LV040B), 64 MB Code Flash (MT28F256J3)
2048 MB DRAM
System uptime is 1 minutes 37 seconds
device
```

NOTE

Upgrading the legacy NetIron CES and NetIron CER devices to R05.5.00 is a two step process now. First the application image has to be installed. After the device is on R05.5.00 application image, the corresponding PBIF image can be installed.

Step 2 - Upgrading the application image

To upgrade the combined application image (primary or secondary) for Brocade NetIron CER Series or Brocade NetIron CES Series devices, perform the following steps:

1. Place the application on an SCP or TFTP server.
2. Copy the new combined image by entering one of the following commands.

- - Using SCP on a remote client:

```
C:> scp cexxxx.bin user@device-IpAddress:flash: [ primary ]
```

- - Using TFTP at the Privileged EXEC level of the CLI:

```
copy tftp flash tftp-srvr ce xxxx . bin [primary ]
```

3. Verify that the new image has been successfully copied by entering the **show flash** command. Check the image version and the date and time the new image was added.

Step 3 - Upgrading the fpga-pbif

To upgrade the fpga-pbif on the Brocade NetIron CER or Brocade NetIron CES device, perform the following steps.

1. Place the pbifmetro_<XXXX>.bin file on a tftp server.

NOTE

This command must be entered from the console. Telnet, SSH and SCP are not supported.

2. Copy the fpga-pbif by entering the following command.
 - - Using TFTP at the Privileged EXEC Level of the CLI:

```
copy tftp fpga-pbif tftp-srvr pbifmetro_ XXXX .bin
```

NOTE

System may take several minutes to finish this procedure, and return control of the console to the user.

Step 4 - Upgrading monitor and boot image

NOTE

Brocade NetIron CER Series or Brocade NetIron CES Series devices use the same image for boot and monitor.

To upgrade the monitor and boot image, perform the following steps:

1. Place the new monitor and boot image on an SCP or TFTP server.
2. Copy the new monitor and boot image to the switch using one of the following commands:

- Using SCP on a remote client:

```
C:> scp cebxxxx.bin user@device-IpAddress:flash: [boot | monitor]
```

- Using TFTP at the Privileged EXEC level of the CLI:

```
copy tftp flash tftp-srvr ceb xxxx . bin [boot | monitor]
```

3. Verify that the new monitor and boot images have been successfully copied by entering the **show flash** command at the Privileged level of the CLI.

Step 5 - Reboot the device

When you complete your upgrade process, you must reboot the device.

1. To reboot the device, enter one of the following commands:
reload (this command boots from the default boot source, which is the primary code flash)
boot system flash [primary]
2. After the device finishes booting, enter the **show version** command, and verify that the device is running the new software image version.

If your upgrade fails, for recovery information refer to [Recovering from a failed upgrade](#) on page 67.

Hitless OS Upgrade for all Supported Devices

- Hitless OS Upgrade support limitations..... 39
- Special considerations for Hitless OS Upgrade..... 39
- The hitless upgrade process.....41
- Performing a hitless upgrade.....41

This chapter describes the Hitless OS Upgrade feature.

You can upgrade Multi-Service IronWare software using the Hitless OS Upgrade feature with no loss of service or disruption in most functions and protocols. During the hitless upgrade process, all ports and links remain operational.

Hitless OS Upgrade support limitations

Hitless OS Upgrade is not supported for any release to R6.0.00.

Hitless OS Upgrade is not supported from any major release to another major release. For example, an upgrade from 5.8.00x or 5.9.00x to 6.0.00x is not supported.

Hitless OS Upgrade is not supported to 6.0.00a.

NOTE

Starting in R06.0.00a two combined FPGA images will be available for download: the standard (MAIN) FPGA image and the Network Packet Broker (NPB) FPGA image. The Network Packet Broker FPGA image version is specific to the functionality of the Network Packet Broker. Hitless OS Upgrade is not supported for R06.0.00a .

NOTE

Refer to the Release Notes for the specific version being upgraded before performing an upgrade. The Release Notes provide specific upgrade information and limitations for each release.

Special considerations for Hitless OS Upgrade

Depending on the software version, Hitless OS Upgrade has the following limitations:

- Both active and standby management modules must be installed to use this feature.
- To avoid disruptions of Layer-3 traffic to OSPF or BGP routes, OSPF Non-stop routing or OSPF Graceful Restart and BGP Graceful Restart features must be configured on the router. In addition, OSPF neighbors of the router must have OSPF Graceful Restart Helper enabled if OSPF Graceful Restart is enabled.
- To avoid disruptions of IPv4 Layer 3 multicast traffic, the unicast routing protocol for multicast RPF routes must be either Non-Stop routing- or Graceful Restart-capable and enabled.
- The time required for the hitless upgrade process ranges from 1 to 10 minutes, depending on the size of the MAC table and the routing table, and the number of OSPF and BGP neighbors. Router configuration is unavailable during the entire hitless upgrade process. The message "---SW Upgrade In Progress - Please Wait---" is displayed at the console if configuration is attempted. Operational command of the router is allowed during the upgrade process.
- Because the active management module becomes the standby management module during the hitless upgrade process, you will need a connection to the console interface on both management modules.

- When they are reset, management and interface modules are unable to send and receive packets. Once the management and interface modules are again operational, modules can send and receive packets, even before the hitless upgrade process is complete.
- Router configuration cannot be changed during the hitless upgrade process.
- Changes to the system-max parameter (or other configuration changes that require a system reload, such as "cam-mode" and "cam-profile" changes) do not take effect after a hitless upgrade.
- FPGA images cannot be upgraded using the hitless upgrade process.
- Hitless upgrade cannot be used to downgrade an image to a version older than the version currently running on the device.
- If there are protocol dependencies between neighboring nodes, it is recommended that you upgrade nodes one at a time.
- After hitless upgrade, the running configuration on the router will be the same as it was before the upgrade. A configuration that is not saved before a hitless upgrade is not removed and the existing startup configuration does not take effect. This behavior is similar to the management module switchover feature.

Table 3 lists supported and unsupported protocols and features for Hitless OS Upgrade.

TABLE 3 Supported and unsupported protocols and features for Hitless OS Upgrade

Supported for Hitless OS Upgrade	Not supported for Hitless OS Upgrade
Layer 2 switching	802.1s
Layer 2 protocols: MRP STP RSTP VSRP	All MPLS features
Layer 3 protocols IGMP PIM OSPF BGP IS-IS	IPv4 and IPv6 multicast snooping
Static IP routes	IPv6 multicast routing
Layer-3 forwarding	VLAN translation
GRE tunnels	Policy-based routing
ACLs (the following ACLs continue to function but ACL counters are reset)	FPGA upgrades
<ul style="list-style-type: none"> • Layer 2 ACLs • IPv4 ACLs • IPv6 ACLs • IP Receive ACLs 	VRRP and VRRP-E
IPv4 and Layer-2 ACL-based traffic policing	All VPN features
Traffic policing	MCT (Multi-chassis trunking)
UDLD	Network management to the device: SSH Telnet SNMP HTTP/HTTPS
LACP	sFlow (interface modules only) Ping Traceroute Syslog messages are cleared SNMP and SNMP trap DNS DHCP AAA
BFD	ERP (G.8032)Management VRF
802.lag over VLANs	ToS-based QoS
IPv4 multicast routing	

Features not supported for Hitless OS Upgrade may encounter disruptions when the management and interface modules are restarted, but will resume normal operation once the modules become operational.

NOTE

If using an MR-2 module during a hitless upgrade an error message may begin to be displayed. This message should be ignored as it has no impact.

The hitless upgrade process

A hitless upgrade of Multi-Service IronWare software is performed in the following sequence:

1. Multi-Service IronWare software is installed in flash memory to the primary and secondary image on active and standby management modules and interface modules.
2. Enter the **hitless-reload** command on the active management module.
3. The hitless upgrade process starts on the active management module, which initiates the upgrade process on the standby management module.
4. The standby management module is reset.
5. The active management module is reset and the standby management module becomes the active module.
6. Active console control is lost to the previously active management module as it becomes the standby management module.
7. The active management module initiates the upgrade process on all interface modules.
8. The router is now running the new Multi-Service IronWare software. The management module that was initially configured as the standby management module is now the active management module and the management module that was initially configured as the active management module is now the standby management module. If you want the original management module to be active, you must manually fail-over control to it.

Performing a hitless upgrade

NOTE

Hitless upgrades are generally supported for upgrades within a major release (for example, 05.3.00 to 05.3.00a) but are not supported for upgrades from one major release to another (for example 05.2.xx to 05.3.xx). Please refer to [Hitless OS Upgrade support limitations](#) on page 39 for a list of releases that do not support Hitless Upgrade.

Some features and protocols are not supported for hitless upgrade. Before you perform a hitless upgrade, refer to [Special considerations for Hitless OS Upgrade](#) on page 39 for a list of supported and not-supported features and protocols.

A Hitless OS Upgrade loads from the primary and secondary images on the management modules.

To perform a Hitless OS Upgrade, use the following procedure:

1. Copy the Multi-Service IronWare software images to the primary and secondary flash on the active and standby management modules and on interface modules.

Set up a console connection to both the active and standby management modules. These connections can be serial console sessions or sessions established through Telnet or SSH.

2. Enter the **hitless-reload** command at the console of the active management module.

```
hitless-reload mp [primary] | lp [primary]
```

The **mp** parameter specifies that the image will be copied to the management module.

The **lp** parameter specifies that the image will be reloaded to the interface module.

Simplified Upgrade and Auto Upgrade

• Simplified Upgrade.....	43
• Upgrading the software.....	47
• Auto upgrade.....	48
• Syslog messages for Simplified Upgrade and Auto Upgrade.....	50
• MIB information for Simplified Upgrade and Auto Upgrade.....	50

This chapter describes how to upgrade your MultiService IronWare software using a single command, **copy tftp system manifest**. Before beginning your upgrade, refer to the appropriate chapters in this document for your device to make sure your system does not have special upgrade requirements.

NOTE

The Simplified Upgrade feature is available only when upgrading from R05.3.00.

Simplified Upgrade

Simplified Upgrade is a single operation that performs a full system upgrade of all the images. It can be as simple as one command from the CLI or one set-request operation from the SNMP. Prior to R05.3.00, several commands were required to upgrade your system. That method is still supported as described in the appropriate chapter for your device, however using the **copy tftp system** command with the new all images and manifest parameters introduced in R05.3.00, you can upgrade your system by issuing only one command.

In this release, the process will be optimized by introducing a version-check of the images to determine whether it is necessary to download/upgrade the image or not.

This simplified upgrade method greatly reduces the possibility of having incompatible interface modules due to incompatible image versions.

The command can be issued to download images from either of the following:

- TFTP server, as described in [Upgrading the software using a TFTP server](#) on page 47
- auxiliary storage device, as described in [Upgrading the software using an auxiliary storage device](#) on page 48

Use the all images parameter to upgrade the management and interface boot, monitor, and application images, as well as all interface and management FPGA images. Since many of these images are not required to be upgraded for each release and doing so can be time consuming, you can upgrade the management and interface monitor and application images, as well as the combined FPGA images only by omitting the all images parameter.

The default behavior is that the all images parameter is not specified.

NOTE

Management and interface boot images and individual boot images are generally not required to be upgraded and customers are not recommended to upgrade them, unless it is explicitly stated otherwise in release notes. Copying management interface FPGA images may temporarily affect time-sensitive protocols.

NOTE

For simplified upgrades on the NetIron CES and NetIron CER devices, the pbif_mero installation in simplified upgrade will fail and device will need to be reloaded. After all images are installed using Simplified upgrade, the pbif will need to be installed manually, and the device will need to be reloaded again.

Brocade NetIron XMR and Brocade MLX Series single-command (full-system) upgrade

There is no change in the syntax for the full-system upgrade; however, the expected behavior for the keyword "all-images" has changed.

Syntax: copy tftp system [all-images] <server-ip-address> manifest <File name> [lp-sec | mp-sec | secondary]

Syntax: copy <slot1 | slot2> system [all-images] manifest <File name> [lp-sec | mp-sec | secondary]

NOTE

Boot images are not included in the upgrade process for systems running Multi-Service IronWare Release 05.6.00d and later when the "all-images" option is used. The optional keyword "all-images" specifies to include only the MP FPGA images (MBRIDGE/MBRIDGE32 and SBRIDGE/HSBRIDGE).

Brocade NetIron CER and Brocade NetIron CES single-command (full-system) upgrade

NOTE

Boot images are not included in the upgrade process for systems running Multi-Service IronWare Release 05.6.00d and later when the "all-images" option is used. The "all-images" optional keyword is available in *Multi-Service IronWare R05.6.00d* and earlier versions only.

Syntax: copy tftp system [all-images] <server-ip-address> manifest <File name> [secondary]

Step 1: Download Manifest file and Validation

NOTE

While the simplified upgrade is in progress, CLI commands or SNMP set-requests that initiate a TFTP download are rejected.

When you issue the **copy tftp system** command using the manifest parameter, the first step the system performs is to download the digital signature file associated with the manifest file, download the manifest file and perform a signature check. This ensures the manifest file download is indeed created by Brocade, and not modified by anybody.

Step 2: Download File Images

Next, the system upgrades the system file images. The file images upgraded depend on how you enter the command. If you use the manifest and all images parameters, the files are upgraded in the following sequence:

- management module Boot image
- interface module Boot image
- management module Monitor image
- interface module Monitor image
- management module Application image
- interface module Application image
- Bundled FPGA image for all interface modules
- MBRIDGE (or MBRIDGE32 for 32-slot chassis)
- SBRIDGE or HSBRIDGE image (for 32-slot chassis only)

If you do not use the all images parameter, the files are upgraded in the following sequence:

- management module Monitor image
- interface module Monitor image
- management module Application image
- interface module Application image
- Bundled FPGA image for all interface modules

Depending on the type of management module (MR or MR2) in the system, the system follows different behavior in downloading and installing the images.

Systems with MR management modules

In systems with MR management modules, the following events are performed for each image:

1. Download the signature of the image
2. Download the image file
3. Perform CRC check
4. Install the image

Even if it encounters a failure in one of the images, it will proceed to upgrade the other images.

In systems running MR2 management modules

In systems running MR2 management modules, all images and their signature files are first downloaded and saved to temporary files in the embedded Slot1 Compact Flash. Once all the images are successfully downloaded, the system proceeds to install them.

NOTE

If there is any failure during download operation for any file copy, the entire operation is terminated and a messages is posted to the syslog. For a list of Simplified Upgrade syslog messages, refer to [Syslog messages for Simplified Upgrade and Auto Upgrade](#) on page 50.

The following events occur during the install operation:

- perform a CRC check
- install the image

Version Check

Prior to this release, Simplified Upgrade and LP Auto-Upgrade reads the manifest file for the location of the image to be used for the upgrade, and proceeds to download the image file.

For instance, when Simplified Upgrade is upgrading the LP FPGA of the interface modules, it downloads the bundled FPGA file then later attempt to install individual FPGA types to the applicable interface modules. In the individual FPGA installation, it performs a version check between the downloaded image and the currently running image.

If both versions are the same, Simplified Upgrade will skip the upgrade for that FPGA type and proceed to the next FPGA type. In a case where all interface modules are up-to-date, all will be skipped.

Version Information

This release will address the above mentioned example by introducing version checking at the beginning. The manifest file will now have a version field for every specified image. For example, a line in a manifest file for XPP MRJ FPGA image may look something like this,

```
xppmrj_05600.bin 1.00
xpp8x10_05600i066.bin 6.14
pbif8x10_05600i066.bin 1.30
```

For every FPGA type in the manifest file that is applicable to the system, its version will be compared to the image that is currently running. If any of the following conditions is satisfied, it will start to download the bundled FPGA image and proceed to install the applicable FPGAs conditionally:

- At least one card is not in UP state.
- At least one FPGA type version does not match.
- Failure to retrieve the running version (due to internal error).

Otherwise, if all the FPGA types match the versions, Simplified Upgrade will skip this step. The display output will look like this:

```
Bundled FPGA skipped, same version exists.
```

Option to Ignore the Version

By default, the upgrade operation will perform a version check. An optional parameter to ignore the version field will be available in the CLI command as well as SNMP MIB.

The user may choose to perform a forced upgrade.

Similarly, if the specified manifest file does not have a version field, it will perform a forced upgrade for backward compatibility.

Supported Images

The version comparison is done for the following images:

- Interface Module FPGA (LP FPGA)
- Management Module FPGA (MBRIDGE and MBRIDGE-32)

NOTE

Simplified Upgrade (single-command) must be performed before LP Auto-Upgrade can be configured. The later one uses the manifest file that the former one downloaded in the system flash.

Summary Report

During the simplified upgrade process, the system keeps track of the status of every image download, validation and installation and creates a summary report that is displayed at the end of the upgrade. If any image download or installation fails, the summary report indicates the operation failed and details of the failure. You can individually upgrade any failed images using existing upgrade commands for individual images. The summary report also identifies any potential incompatibility issues.

The summary report display is modified to indicate that the upgrade was skipped for the image. It will appear similarly to the example report as follows:

```
System Upgrade Done.
Upgrade Summary
Source: tftp 10.120.75.21 Directory /XMR-MLX
1) Installed /XMR-MLX/Boot/ManagementModule/xmprm05600.bin to MP Boot
2) Installed /XMR-MLX/Boot/InterfaceModule/xmlprm05600.bin to LP Boot on all LP slots
3) Installed /XMR-MLX/Monitor/ManagementModule/xmb05600.bin to MP Monitor
4) Installed /XMR-MLX/Monitor/InterfaceModule/xmlb05600.bin to LP Monitor on all LP slots
5) Installed /XMR-MLX/Application/ManagementModule/xmr05600b296.bin to MP Primary
```

```

6) Installed /XMR-MLX/Application/InterfaceModule/xmlp05600b296.bin to LP Primary on all LP slots
7) Skipped LP FPGA Bundled, same version exists.
8) Installed /XMR-MLX/FPGA/ManagementModule/mbridge_05600b296.xsvf to FPGA MBRIDGE
Checking for coherence...
Done.

```

Single-Command Package Upgrade

The CLI command is modified to have an optional parameter to ignore or bypass version checking.

Full syntax (using a TFTP server as the source):

```

device# copy tftp system [all-images] <server-ip-address>
manifest <File name> [lp-sec | mp-sec | secondary]
[skip-version-check]

```

Full syntax (using a removable storage device as the source):

```

device# copy <slot1 | slot2> system [all-images]
manifest <File name> [lp-sec | mp-sec | secondary]
[skip-version-check]

```

Interface Module Auto-Upgrade

NOTE

Interface Module Auto-Upgrade does not support LP Auto-Upgrade, which allows the system to automatically upgrade the Boot and FPGA images of an inserted interface module.

In a full-system upgrade where an external set of images (or, release package) is to be applied to the system, it makes sense to perform a version comparison between what is currently running in the system and the release package (while LP Auto-Upgrade compares the image version in LP and that of the system).

Upgrading the software

The command can be issued to specify the source of the images, whether it is from a TFTP server or auxiliary storage device.

Upgrading the software using a TFTP server

To upgrade the management and interface boot, monitor, and application images, as well as FPGA images, enter the following command using TFTP as the source of the images.

The full syntax for the command when using a TFTP server is as follows:

```

device# copy tftp system [all-images]<server-ip-address> manifest
<File name> [lp-sec | mp-sec| secondary]

```

The following parameters are available:

- The optional parameter **[all-images]** specifies that the management and interface boot, monitor, and application images, as well as FPGA images should be upgraded. If the parameter is not entered, only the management and interface monitor and application images and bundled FPGA image for interface modules which don't include MBRIDGE and SBRIDGE are upgraded.
- The parameter *server-ip-address* specifies the TFTP server IP address in IPv4 or IPv6.
- The parameter *File name* specifies the manifest filename, including its relative path to the TFTP server root directory.

- The optional parameter [**lp-sec** | **mp-sec** | **secondary**] specifies the destination code image. If not specified, it defaults to primary for both MP and LP. This is for the application image only.
 - **lp-sec** specifies that MP image goes to primary while LP goes to secondary.
 - **mp-sec** specifies that MP image goes to secondary while LP image goes to primary.
 - **secondary** means both MP and LP images goes to secondary.

Upgrading the software using an auxiliary storage device

The storage card must have the manifest file at the top-most of the base directory and all the images must be in the directory structure specified in the manifest file.

The full syntax for the command when using an auxiliary storage device is as follows:

```
device# copy
  <slot1|slot2> system [all-images] manifest
  <filename
  >
  [lp-sec | mp-sec | secondary]
```

The following parameters are available:

- The parameter *slot1* | *slot2* identifies the source auxiliary storage device slot number.
- The optional parameter [**all-images**] specifies that the management and interface boot, monitor, and application images, as well as FPGA images, including MBRIDGE and SBRIDGE, should be upgraded. If the parameter is not entered, only the management and interface monitor and application images and bundled FPGA image for interface modules which don't include MBRIDGE and SBRIDGE are upgraded.
- The parameter *filename* specifies the manifest filename, which should be located at the root directory of the storage device.
- The optional parameter [**lp-sec** | **mp-sec** | **secondary**] specifies the destination code image. If not specified, it defaults to primary for both MP and LP. This is for the application image only.
 - **lp-sec** specifies that MP image goes to primary while LP goes to secondary.
 - **mp-sec** specifies that MP image goes to secondary while LP image goes to primary.
 - **secondary** means both MP and LP images goes to secondary.

Auto upgrade

NOTE

This feature is available only on devices that have been upgraded to R05.3.00 or later using the Simplified Upgrade feature as it requires the manifest file.

NOTE

The auto upgrade feature is disabled by default and must be enabled to take effect.

If you have used the simplified upgrade procedure to upgrade your system to R05.3.00 or later, you can take advantage of the auto upgrade feature. The auto upgrade feature allows the system to automatically upgrade the images of a newly inserted interface module if it detects a mismatch in monitor and application image files, as synched in releases prior to R05.3.00 or later, as well as boot and FPGA image files, depending on the parameters used.

In systems running MR management modules

If the device is running an MR management module, it will take the following steps:

1. Perform a signature check of the manifest file.
2. Open the manifest file to lookup for the filename of the image and its relative path.
3. For the TFTP source, download the image using the TFTP info specified in **lp auto-upgrade tftp** command. For the case of storage card source, it will copy the image from the specified auxiliary storage slot number.
4. Install the image to the destination interface module.

It will repeat the same steps for all images necessary for the upgrade.

If an image cannot be located, an error is logged and it will proceed to boot with application and monitor images synced from the MP.

In systems running MR2 management modules

For devices running an MR2 management module, the images lp-boot and lp-fpga-all, kept in the flash memory, are used. If the image is not found in the flash memory, the system downloads it from the source specified in the command (TFTP or storage card).

At the end of the auto-upgrade process, regardless if it was completed successfully or not, syslog messages and traps are posted.

Enabling Auto Upgrade

NOTE

The auto upgrade feature is disabled by default and must be manually enabled to take effect.

The full syntax for the command is as follows:

```
device(config)# lp auto-upgrade <slot1 | slot2 | tftp <ip-address>
>> [path <directory pathname>]
```

Parameter descriptions:

- The parameter **tftpserver-ip-address** specifies the TFTP server IP address in IPv4 or IPv6.
- The parameter **slot1 | slot2** specifies the source auxiliary storage device slot number.
- The optional parameter [path *directory pathname*] specifies the relative path of the manifest file in the TFTP server directory file structure. This should not include the manifest file name. If not specified, it defaults to the TFTP root.

NOTE

The path specified, plus the build directory and file names of the various files should not exceed 127 characters.

To enable the auto upgrade feature of interface modules in your device from a TFTP, enter the following:

```
device(config)# lp auto-upgrade tftp <ip-address> [path <directory pathname>
>]
```

To enable the auto upgrade feature of interface modules in your device using a auxiliary storage device, enter the following:

```
device(config)# lp auto-upgrade <slot1 | slot2> [path <directory pathname>
>]
```

At the end of the auto-upgrade process, regardless if it was completed successfully or not, syslog messages and trap are posted.

Disabling Auto Upgrade

NOTE

The auto upgrade feature is disabled by default and must be manually enabled to take effect.

Auto-upgrade of interface module can be disabled by applying 'no' to the command. When the auto upgrade feature is disabled, the newly inserted interface modules boot after syncing the application and monitor images from the management module without syncing the interface boot image and interface FPGAs.

To disable the auto upgrade feature of interface modules in your device, enter the following:

```
device(config)# no lp auto-upgrade
```

This will post a syslog after the completion of the process, whether successful or not.

Syslog messages for Simplified Upgrade and Auto Upgrade

Table 4 lists the syslog messages related to the simplified upgrade procedure and auto upgrade feature.

TABLE 4 Simplified Upgrade and Auto Upgrade syslog messages

Event Description	Message
Simplified upgrade has started	Single-command upgrade has started.
Simplified upgrade is complete	Single-command upgrade completed. or Single-command upgraded with error(s).
Auto upgrade has started	Auto-upgrade for slot <slot-id> has started.
Auto upgrade is complete	Auto-upgrade for slot <slot-id> completed. or Auto-upgrade for slot <slot-id> completed with errors.

The following SNMP traps are generated:

```
snTrapUpgradeSingleCmdStart ::= { snTraps 1216 }
```

```
snTrapUpgradeSingleCmdDone ::= { snTraps 1217 }
```

```
snTrapAutoUpgradeStart ::= { snTraps 1218 }
```

```
snTrapAutoUpgradeDone ::= { snTraps 1219 }
```

For more information on the SNMP traps, refer to the *Unified MIB Reference*.

MIB information for Simplified Upgrade and Auto Upgrade

For MIB information related to the simplified upgrade and auto upgrade features, refer to the *Unified IP MIB Reference* document.

Loading and saving configuration files

- [Brocade MLX Series and NetIron XMR devices](#).....51
- [NetIron CES Series and NetIron CER devices](#).....55

This chapter contains information you will need to know when loading and saving configuration files on your Brocade device.

Brocade MLX Series and NetIron XMR devices

For easy configuration management, the router supports both the download and upload of configuration files between the router and a TFTP server on the network.

You can upload either the startup configuration file or the running configuration to the TFTP server, code flash, or a flash card for backup and use in booting the system.

Startup configuration file - This file (startup-config) contains the configuration information that is currently saved in the flash memory. To display this file, enter the **show configuration** command at any CLI prompt.

Running configuration - This active configuration is in the system RAM but not yet saved to flash memory. These changes could represent a short-term requirement or general configuration change. To display this configuration, enter the **show running-config** command or **write terminal** command at any CLI prompt.

Each device can have one startup configuration file and one running configuration. The startup configuration file is shared by both flash modules. The running configuration resides in DRAM.

Configuring file size for startup and running configuration

The system allocates 8 MB of contiguous memory per session (console, TELNET, SSH) for processing different configuration commands, such as **show run**, **config terminal**, and **copy tftp run**. In a low memory state, memory is generally fragmented resulting in a failure to allocate contiguous memory to support the session. We now pre-allocate one configuration buffer so that at least one CLI session will remain operational even in low memory condition.

NOTE

Low memory is not a normal operating condition, and may indicate scaling the network beyond system max limits. However, this feature ensures that one CLI session remains operational so you can recover from the condition.

To specify a configuration file size for both startup and running configuration, enter the following command:

```
device(config)# system-max
```

Syntax: `[no] system-max [config-file-size decimal]`

By default, no system-max parameter is configured.

The **config-file-size** option specifies the configuration file size for processing various commands.

The *decimal* parameter specifies the range supported for configuring file size. The minimum configuration is 2 MB, and the maximum is 16 MB. If the file size is not configured, the default size of 8 MB is used.

NOTE

It is strongly recommended that you use the default size (8 MB) when configuring file size.

When you enter the **system-max** command, with the `config-file-size` parameter included, the following additional information is displayed:

```
device(config)# system-max config-file-size 2097152
Reload required. Please write memory and then reload or power cycle.
Failure to reload could cause system instability on failover.
Newly configured system-max will not take effect during hitless-reload.
Replacing the Startup Configuration with the Running Configuration
```

NOTE

You must enter the **write memory** command and restart the system for this command to take effect.

Replacing the startup configuration with the running configuration

After you make configuration changes to the active system, you can save the changes to flash memory, which replaces the existing startup configuration with the new running configuration.

To replace the startup configuration with the new running configuration, enter the **write memory** command.

```
device# write memory
```

Retaining the current startup configuration

After making configuration changes to the active system, if you have not executed a **write memory** command and you decide you don't want to save the changes, enter the **reload** command to return to the current startup configuration.

```
device# reload
```

If the system detects differences between the running and startup configurations, it prompts you as follows:

```
Are you sure? (enter 'y' or 'n'):
```

Enter y, and press the Enter key.

Copying a configuration file to or from an HTTP(S), SCP or TFTP server

To copy the `startup-config` or `running-config` file to or from an HTTP(S), SCP or TFTP server, use the commands shown in this section.

NOTE

You can name the configuration file when you copy it to an SCP or TFTP server. However, when you copy a configuration file from the server to a device, the file is always copied as "startup-config" or "running-config", depending on which type of file you saved to the server. For the HTTP(S) server, you can copy to and from to any filename.

Using HTTP(S)

By default, file copies can be done using the management IP. You must configure the `source-interface` for the HTTP[S] client for file transfers to take place through the interface for a physical, loopback or logical port. Once you configure the LP port as the source interface, transfers will take place using only the configured interface. Connections to the management IP will not be rejected for file copies.

To copy the `startup-configuration` file to an HTTP server, enter the following command:

```
copy flash http ip-address filename_server startup-config
```

NOTE

`filename_server` is the name of the file on the server to which the `startup-configuration` file is copied.

To download the *running-config* file to the device from an HTTP server, enter the following command:

```
copy http slot2 ip-address running-config filename_device
```

To make the *filename_device* the startup configuration file, enter the following command.

```
copy slot2 startup-config filename_device
```

NOTE

You must use *flash* while performing file copies on CES and CER devices. Using *slot1* or *slot2* is not supported for these devices.

NOTE

Use similar steps for an HTTPS server.

1. HTTPS client uses TLS protocol.
2. In FIPS mode HTTP client protocol will be hidden (HTTPS is still shown).
3. TLS 1.0, TLS 1.1, and TLS 1.2 versions are supported.
4. SSL 3.0 is not supported.

NOTE

1. You can perform only one HTTP(S) file transfer at a time. Parallel transfers will be blocked across HTTP/HTTPS/SCP/TFTP with the following error message: "Error: HTTP[S]: Another TFTP/SCP/HTTP[S] copy operation is in progress. Please try later".
2. When using HTTP, base64-encoded username and password may be seen by a network packet capture tool.
3. File size is limited to 200 Mbyte, provided there is space in the FLASH memory of the target destination for the transfer to the device.
4. Certain filenames such as *startup-config* and *running-config* are reserved. The system will warn you and generate an error message when you try to use any reserved filename, which is an ineligible target for the copy command.

NOTE

If you copy an invalid image to the FLASH and make it the primary image, a reload may fail to bring up the device.

5. HTTP(S) client file transfer is supported for the default VRF only.

Using TFTP

To copy the startup-configuration files to a TFTP server, enter the following command:

```
copy startup-config tftp ip-address filename
```

To upload the running-config from the device to a TFTP server, enter the following command:

```
copy running-config tftp ip-address filename
```

To upload a copy of the startup-config to the device from a TFTP server, enter the following command.

```
copy tftp startup-config ip-address filename
```

To upload a running configuration to the device from a TFTP server, enter the following command:

```
copy tftp running-config tftp -svr filename [overwrite]
```

This command downloads the access-list to the running-configuration. The new access-list is then appended to the current running configuration of the router.

Using SCP

Secure copy (SCP) supports file transfer between local and a remote hosts. It combines the file-transfer element of BSD remote copy (RCP) with the authentication and encryption provided by the Secure shell (SSH) protocol.

The SCP client feature on Brocade NetIron devices helps to transfer files to and from the SCP server and maintains the confidentiality of the data being transferred by blocking packet sniffers from extracting valuable information from the data packets. You can use SCP client to do the following:

- Download a boot file, NetIron application image file, signature file, license file, startup configuration file, or running configuration from an SCP server
- Upload a NetIron application image file, startup configuration file, or running configuration to an SCP server

SCP client uploads the file to the SCP server (that is, the SSH server) by providing files to be uploaded. You can specify file attributes, such as permissions and time-stamps as part of file data when you use SCP client to upload files. SCP client supports the same copy features as the time stamps, TFTP client feature on NetIron devices, but the SSH2 protocol secures data transfer.

Uploading an image to an SCP server

To securely upload image files to a secure copy (SCP) server, copy an image from a device to the SCP server.

```
device# copy flash scp 10.20.1.1 SPR08040.bin primary
device# copy flash scp 10.20.1.1 SPR08040.bin secondary

device# copy flash scp 10.20.99.146 ~/xmr05800.bin primary
```

Uploading configuration files to an SCP server

To securely upload startup and running configuration files to a secure copy (SCP) server.

1. Copy a startup configuration file to the SCP server.

```
Device#copy startup-config scp 10.20.1.1 icx-74-startup
```

The startup configuration file is uploaded to the SCP server and you are notified when the transfer is complete.

```
user name:name
Password:
Connecting to remote host.....

Sending data (8192 bytes per dot)
.

SCP transfer from device completed

SYSLOG: <14>2014 Apr 1 14:34:16 ICX-74-CC SCP transfer from device completed

Connection Closed

device#copy startup-config scp 172.20.133.116 run.txt
User name:tester
Password:
Connecting to remote host.....
Connection Established. Uploading .Done.
startup-config upload via SCP complete.

Connection Closed
device#
```

- Copy a running configuration file to the SCP server.

```
Device#copy running-config scp 10.20.1.1 icx-74-run
```

Downloading configuration files from an SCP server

To securely download startup and running configuration files from a secure copy (SCP) server to a device.

- Copy a startup configuration file from the SCP server.

```
device# copy scp startup-config 10.20.1.1 icx-74-startup
```

- Copy a running configuration file from the SCP server.

```
device# copy scp running-config 10.20.1.1 icx-74-run
```

Making local copies of the startup configuration file

You can copy the startup-config file in flash memory to a TFTP server or to a PCMCIA flash card inserted in management module slot 1 or 2.

For example, to make a backup copy of the startup-config file and save the backup file to a TFTP server, enter a command such as the following at the Privileged EXEC level in the CLI:

```
device# copy startup-config tftp 10.28.40.21 startup-config.bak
```

Syntax: `copy startup-config tftp ip-address dest-file-name`

The *ip-address* variable specifies the IP address of the TFTP server that you want to save the startup configuration to.

The *dest-file-name* specifies the name of the file you copied to a new destination.

For example, to make a backup copy of the startup-config file and save the backup file on a flash card in slot 2, enter a command such as the following at the Privileged EXEC level in the CLI:

```
device# copy startup-config slot2 /backups/startup-config.bak
```

Syntax: `copy startup-config [slot1 | slot2] [/ dest-dir-path] / dest-file-name`

Specify the *dest-dir-path* parameter to copy the source file to a file system that does not have current management focus.

The *dest-file-name* parameter specifies the name of the file you copied to a new destination.

NetIron CES Series and NetIron CER devices

For easy configuration management, the device supports both the download and upload of configuration files between the router and a TFTP server on the network.

Startup configuration file - This file (startup-config) contains the configuration information that is currently saved in the Brocade NetIron CER Series and Brocade NetIron CES Series series flash memory. To display this file, enter the **show configuration** command at any CLI prompt.

Running configuration - This active configuration is in the system RAM but not yet saved to flash memory. These changes could represent a short-term requirement or general configuration change. To display this configuration, enter the **show running-config** command or **write terminal** command at any CLI prompt.

Each device can have one startup configuration file and one running configuration. The startup configuration file is shared by both flash modules. The running configuration resides in DRAM.

Configuring file size for startup and running configuration

The system allocates 8 MB of contiguous memory per session (console, TELNET, SSH) for processing different configuration commands, such as **show run**, **config terminal**, and **copy tftp run**. In a low memory state, memory is generally fragmented resulting in a failure to allocate contiguous memory to support the session. We now pre-allocate one configuration buffer so that at least one CLI session will remain operational even in low memory condition.

NOTE

Low memory is not a normal operating condition, and may indicate scaling the network beyond system max limits. However, this feature ensures that one CLI session remains operational so you can recover from the condition.

To specify a configuration file size for both startup and running configuration, enter the following command:

```
device(config)# system-max
```

Syntax: `[no] system-max [config-file-size decimal]`

By default, no `system-max` parameter is configured.

The `config-file-size` option specifies the configuration file size for processing various commands.

The `decimal` parameter specifies the range supported for configuring file size. The minimum configuration is 2 MB, and the maximum is 16 MB. If the file size is not configured, the default size of 8 MB is used.

NOTE

Brocade strongly recommended that you use the default size (8 MB) when configuring file size.

When you enter the `system-max` command, with the `config-file-size` parameter included, the following additional information is displayed:

```
device(config)# system-max config-file-size 2097152
Reload required. Please write memory and then reload or power cycle.
Failure to reload could cause system instability on failover.
Newly configured system-max will not take effect during hitless-reload.
Replacing the Startup Configuration with the Running Configuration
```

NOTE

You must enter the `write memory` command and restart the system for this command to take effect.

Replacing the startup configuration with the running configuration

After you make configuration changes to the active system, you can save the changes to flash memory, which replaces the existing startup configuration with the new running configuration.

To replace the startup configuration with the new running configuration, enter the `write memory` command.

```
device# write memory
```

Retaining the current startup configuration

After making configuration changes to the active system, if you have not executed a `write memory` command and you decide you don't want to save the changes, enter the `reload` command to return to the current startup configuration.

```
device# reload
```

If the system detects differences between the running and startup configurations, it prompts you as follows:

```
Are you sure? (enter 'y' or 'n'):
```


Enter y, and press the Enter key.

Copying a configuration file to or from an HTTP(S), SCP or TFTP server

To copy the `startup-config` or `running-config` file to or from an HTTP(S), SCP or TFTP server, use the commands shown in this section.

NOTE

You can name the configuration file when you copy it to an SCP or TFTP server. However, when you copy a configuration file from the server to a device, the file is always copied as "startup-config" or "running-config", depending on which type of file you saved to the server. For the HTTP(S) server, you can copy to and from to any filename.

Using HTTP(S)

By default, file copies can be done using the management IP. You must configure the source-interface for the HTTP[S] client for file transfers to take place through the interface for a physical, loopback or logical port. Once you configure the LP port as the source interface, transfers will take place using only the configured interface. Connections to the management IP will not be rejected for file copies.

To copy the `startup-configuration` file to an HTTP server, enter the following command:

```
copy flash http ip-address filename_server startup-config
```

NOTE

`filename_server` is the name of the file on the server to which the `startup-configuration` file is copied.

To download the `running-config` file to the device from an HTTP server, enter the following command:

```
copy http slot2 ip-address running-config filename_device
```

To make the `filename_device` the startup configuration file, enter the following command.

```
copy slot2 startup-config filename_device
```

NOTE

You must use `flash` while performing file copies on CES and CER devices. Using `slot1` or `slot2` is not supported for these devices.

NOTE

Use similar steps for an HTTPS server.

1. HTTPS client uses TLS protocol.
2. In FIPS mode HTTP client protocol will be hidden (HTTPS is still shown).
3. TLS 1.0, TLS 1.1, and TLS 1.2 versions are supported.
4. SSL 3.0 is not supported.

NOTE

1. You can perform only one HTTP(S) file transfer at a time. Parallel transfers will be blocked across HTTP/HTTPS/SCP/TFTP with the following error message: "Error: HTTP[S]: Another TFTP/SCP/HTTP[S] copy operation is in progress. Please try later".
2. When using HTTP, base64-encoded username and password may be seen by a network packet capture tool.
3. File size is limited to 200 Mbyte, provided there is space in the FLASH memory of the target destination for the transfer to the device.
4. Certain filenames such as *startup-config* and *running-config* are reserved. The system will warn you and generate an error message when you try to use any reserved filename, which is an ineligible target for the copy command.

NOTE

If you copy an invalid image to the FLASH and make it the primary image, a reload may fail to bring up the device.

5. HTTP(S) client file transfer is supported for the default VRF only.

Using TFTP

To copy startup-configuration files to or from a TFTP server, enter the following command:

```
copy startup-config tftp ip-address filename
```

To upload the running-config from the device to a TFTP server, enter the following command:

```
copy running-config tftp ip-address filename
```

To copy a startup-config to the device from a TFTP server, enter the following command.

```
copy tftp startup-config ip-address filename
```

To upload a running configuration to the device from a TFTP server, enter the following command:

```
copy tftp running-config tftp -srvr filename [overwrite]
```

This command downloads the access-list to the running-configuration. The new access-list is then appended to the current running configuration of the router.

Using SCP**Running configuration backup or appending via scp**

To copy the running configuration file on a device to a file on the SCP-enabled host.

```
C:\> scp user@device-IPAddress:runConfig dst-file
```

To download a configuration file and append to running configuration, enter the following command.

```
C:> scp config-file user@ device-IPAddress:config:run
```

This command transfers *config-file* to the device and appends to the running configuration.

For backward compatibility, the following syntax is also supported for this command.

```
C:> scp <config-file> <user>@<device-IPAddress>:runConfig
```

Replacing or backing up the startup configuration using SCP

To copy the startup configuration file on the device to a file on the SCP-enabled client, enter the following command:

```
C:> scp user@device-IpAddress:startConfig dst-file
```

To download a configuration file and replace the startup configuration, enter the following command.

```
C:> scp config-file user@device-IpAddress:config:start
```

This command transfers *config-file* to the device and replaces the startup configuration in flash.

For backward compatibility, the following syntax is also supported for this command.

```
C:> scp <config-file> <user>@<device-IpAddress>:startConfig
```

Making local copies of the startup configuration file

Copy the startup-config file in flash memory to a TFTP server.

For example, to make a backup copy of the startup-config file and save the backup file to a TFTP server, enter a command such as the following at the Privileged EXEC level in the CLI:

```
device# copy startup-config tftp 10.28.40.21 startup-config.bak
```

Syntax: `copy startup-config tftp ip-address dest-file-name`

The *ip-address* variable specifies the IP address of the TFTP server that you want to save the startup configuration to.

The *dest-file-name* specifies the name of the file you copied to a new destination.

Device module considerations

- [Interface module considerations](#).....61
- [Management module considerations](#).....62

This appendix contains information about specific device components that you may find useful when you perform your Brocade NetIron software upgrade.

Interface module considerations

The following sections contain upgrade and downgrade information for interface modules. When installing or upgrading interface modules, consider the following:

- 1Gx24 copper and fiber interface modules require software version 5.1.00 or later.
- For interface modules with 8 or more ports, you must change the ifindex. Refer to [ifIndex allocation](#) on page 17.
- Before you install your 100GbE interface module into an existing working device, you must change the switch fabric data-mode to force-normal, and the system tm credit size to 1024b (which readies the device to forward 100 Gbps traffic. Change these settings by entering the following commands, writing to memory, and reloading the device.

```
device(config)# system-init fabric-data-mode force-normal
device(config)# system-init tm-credit-size credit_1024b
device(config)# exit
device# write memory
device# reload
```

For more information about how to install 100GbE modules, refer to the appropriate hardware installation guide.

Upgrading high-speed switch fabric modules

The following interface modules require high-speed switch fabric modules to operate:

- NI-MLX-10Gx8-M (requires R05.0.00c or later)
- NI-MLX-10Gx8-D (requires R05.0.00c or later)
- BR-MLX-10Gx8-X (requires R05.2.00 or later)

If you are installing these modules in your device, you must also install high-speed switch fabric modules (if not already installed). For hardware installation instructions, refer to the hardware installation guide.

When you install NI-MLX-10Gx8-M or NI-MLX-10Gx8-D, you must first upgrade the entire system to software R05.0.00c or later, and replace existing switch fabric modules with high-speed switch fabric modules. Be sure to remove all standard switch fabric modules BEFORE you install NI-MLX-10Gx8-M or NI-MLX-10Gx8-D modules.

NOTE

Do not attempt to downgrade NI-MLX-10Gx8-M or NI-MLX-10Gx8-D modules or high-speed switch fabric modules to software versions older than R05.0.00c. The modules will not operate with older software.

When you install BR-MLX-10Gx8-X interface modules, you must first upgrade the entire system to software R05.2.00 or later, and replace existing switch fabric modules with high-speed switch fabric modules. Be sure to remove all standard switch fabric modules BEFORE you install NI-MLX-10Gx8-M or NI-MLX-10Gx8-D modules.

NOTE

Do not attempt to downgrade BR-MLX-10Gx8-X modules or high-speed switch fabric modules to software versions older than R05.2.00. The modules will not operate with older software.

If you install NI-MLX-10Gx8-M or NI-MLX-10Gx8-D or BR-MLX-10Gx8-X interface modules without high-speed switch fabric modules, the interface modules will not work. For Brocade NetIron MLX Series and Brocade NetIron XMR Series 16-slot devices, you must also install high-speed fans. Refer to the hardware installation guide for installation instructions.

To upgrade software and install high-speed switch fabric modules and NI-MLX-10Gx8-M or NI-MLX-10Gx8-D or BR-MLX-10Gx8-X modules at the same time, first upgrade your router to the appropriate software version for your interface modules, then perform the following steps:

NOTE

Traffic may be briefly interrupted during an inline upgrade procedure.

1. Upgrade all application, boot, and monitor files, and all management, interface, and switch fabric module FPGAs to R05.0.00c or later (for NI-MLX-10Gx8-M or NI-MLX-10Gx8-D modules). For BR-MLX-10Gx8-X interface modules, you must upgrade to R05.2.00 or later.
2. Restart your device.
3. Enter the **show version** command to confirm that the upgrade was successful.
4. Remove a standard switch fabric module.
5. Install a high-speed switch fabric module in the empty switch fabric slot.
6. To confirm that the new module is operating properly, enter the **show module** command.

Repeat steps 4 through 6 to replace the remaining switch fabric modules with high-speed switch fabric modules.

7. Install an interface module into an empty interface module slot.

8. To confirm that the module is operating properly, enter the **show module** command.

Repeat steps 7 and 8 to install all remaining interface modules.

Management module considerations

Upgrading to MR2 management modules

This section describes how to upgrade the management module in your router to an MR2 management module.

NOTE

The following scenarios are not supported and may result in damage to the MR2 management module and other hardware:

- Installing the MR2 as a standby management module in a device running code prior to NetIron Release 5.2.00b is not supported.
- Installing the MR2 as a standby management module with an MR module in the same device is not supported. If the MR2 router no longer boots, please contact Brocade technical support.

To upgrade to MR2 management modules, perform the following steps:

1. Perform a basic upgrade of your devices to NetIron Release 5.2.00b as documented in the appropriate chapter in this document for your router.

NOTE

You must complete this step before continuing to the next step.

- Changes in onboard storage form factors between MR and MR2 management modules require that you back up the configuration while upgrading. Use a TFTP server or SSH client to store the configuration.

To back up the running or startup configurations:

- Using TFTP:

To copy the startup configuration files from the device to a TFTP server, enter the following command:

```
device
copy startup-config tftp
ip-address filename
```

To copy the running configuration files from the device to an TFTP server, enter the following command:

```
copy running-config tftp
ip-address filename
```

- Using SCP:

To copy the running configuration file on a device to a file on the SCP-enabled host:

```
C:\> scp userdevice-IpAddress
:runConfig dst-file
```

To copy the startup configuration file on the device to a file on the SCP-enabled client, enter the following command:

```
C:> scp user@device-IpAddress dst-file:startConfig
```

- Remove the power supplies or power cords to power down the device, and remove the MR management modules. For device specific instructions on removing existing management modules, refer to the appropriate chapter in this document for the device you are using.

NOTE

You should label the network, serial, and power cords to ensure that they are reconnected correctly in Step 4 and Step 5.

- Install the MR2 management modules. For device specific instructions on installing management modules, refer to the appropriate chapter in the hardware installation guide for the device you are using.

Once the MR2 management modules are correctly installed in the device, reconnect to the serial and network connections.

- Power the device back on by installing the power supplies or power cords to power on the device.
- Once the device has come up, connect to the serial port and enter the following commands to assign a temporary IP address to interface m 1, and enable the interface:

```
enable
configure terminal
interface m 1
ip addresss 10.10.10.2/24
enable
exit
ip route 0.0.0.0/0 10.10.10.1
exit
```

You may also need to assign a static route. You should be able to ping the IP address of the TFTP server or SSH client.

- Copy the startup or running configuration stored from the SSH client or TFTP server back to the device:

- - Using TFTP from the privileged exec mode of the console:

```
copy tftp startup-config ip-addressfilename
```

NOTE

SSH is disabled by default, you will need to configure and enable it before using SCP.

- - Using SCP:

```
C:> scp filename user device-ipaddress
:config:start
```

8. Issue one of the following commands from the Privileged exec mode of the console to reload the device:

NOTE

You may wish to check that all interface modules are in the up state, and resolve any incompatible versions found before reloading the device.

- - To load the primary code flash enter the **reload** command:

```
reload
```

The **reload** command boots from the default boot source, which is the primary code flash.

- To load the secondary code flash, enter the **boot system flash secondary** command.

```
boot system flash
 [primary
```

After the device has reloaded, verify that everything is working in order.

Setting port auto-negotiation

Perform the port auto-negotiation procedure after upgrading to R06.0.00.

Perform this task when upgrading to R6.0.00 with 20x10GE or 4x10GE IPSEC modules installed.

When a device is upgraded to R06.0.00 from R5.7.00x, R5.8.00x, or R05.9.00x where auto-negotiation is supported, the auto-negotiation feature will be disabled for the interfaces of existing 20x10GE and 4x10GE-IPSEC modules. The following task will enable auto-negotiation.

1. Use the **interface eth** command to direct the specific interface.
2. Execute the **gig-default auto-gig** command to enable auto-negotiation on the interface.

```
Brocade(config)#interface eth 8/1
Brocade(config-if-e10000-8/1)#gig-default auto-gig
Brocade(config-if-e10000-8/1)#
```


Troubleshooting

- [Upgrading devices in MCT topologies.....](#) 67
- [Recovering from a failed upgrade.....](#) 67
- [Troubleshooting 1G modules stuck in down state.....](#) 68

This appendix contains information about specific scenarios and troubleshooting issues that you may find useful when you perform your Brocade NetIron software upgrade.

Upgrading devices in MCT topologies

MCT (multi-chassis trunking) does not support hitless upgrades of devices within the MCT topology. However, it is possible to avoid interruptions of traffic flow when upgrading MCT devices. To do this, you must first issue the **client-shutdown** on the device that is being upgraded. This forces all traffic to the other MCT devices. Once the traffic is redirected, perform the upgrade using the standard upgrade procedure, and reload the MCT device while it is still in shutdown mode. When the upgrade is complete, remove the client-shutdown by entering the **no client-shutdown** command and resume forwarding traffic. The commands for this process are shown here.

```
device(config)# cluster abc 1
device(config-cluster-abc)# client-interfaces shutdown
```

Perform the upgrade on this device at this point. When the upgrade is complete, enter the following command to resume traffic flow.

```
device(config-cluster-abc)# no client-interfaces shutdown
```

NOTE

This process must be done for separately for each device in the MCT topology. If you attempt an upgrade or reload without issuing the client-shutdown, traffic may be adversely affected for all devices.

Recovering from a failed upgrade

This section describes two scenarios in which you may have to recover from a failed upgrade.

- Upgrade fails, no primary image exists. At reboot, system automatically stops in monitor mode.
- An incorrect version of the software has been loaded on the device. At reboot, the system automatically stops in monitor mode.

For either instance, the recovery procedure is the same, and is explained here.

If your upgrade fails, when you issue the **reload** command, you will see output similar to this example.

```
BOOT INFO: load image from primary copy Bad image header
BOOT INFO: load image from secondary copy File not found, 'secondary'
MP-1Monitor>
```

If you issue a **dir** command, you will see information similar to the following.

```
MP-1 Monitor> dir
524288 [0000] lp-monitor-0
6505897 [0000] lp-primary-0
523622 [0000] monitor
13667494 [0000] primary
1688 [ac60] startup-config
21232924 bytes 15 File(s)
7602176 bytes free
MP-1 Monitor>
```

You can recover by copying a new image from a TFTP server, as shown in the following steps.

NOTE

For R05.2.00 and later, recovery can only be achieved by using a TFTP server.

1. Assign an IP address to in monitor mode.

```
MP-1 Monitor> ip address 10.10.10.1/24
IP address = 10.10.10.1
MP-1 Monitor> ip default-gateway 10.10.10.254
```

2. Copy the image from the TFTP server using the following command:

```
MP-1 Monitor> copy tftp flash 10.10.10.2 xmr05200.bin primary
```

3. Reload the device using the following command. After the reload, the device should be running R05.2.00 (there will be no secondary image).

```
MP-1 Monitor> reset
Are you sure? (enter 'y' or 'n'): y
NetIron XMR/MLX Boot Code Version 5.2.00
..MP.
Enter 'a' to stop at memory test
Enter 'b' to stop at boot monitor
..BOOT INFO: load monitor from code flash, cksum = 79ca monitor 0x80000100
DMAC0 Link is up
BOOT INFO: verify flash files - max_code_flash_blocks[126].....
read_startup_config
INFO: 4-slot backplane is detected.
g_bp_board_class_val = 134, g_max_slave_slot = 4, g_max_snm_slot = 3, g_max_power = 3
```

Troubleshooting 1G modules stuck in down state

The use of the "wait-for-all-cards" configuration in NetIron Release 5.3.00 may cause ports on any 1G module to stay down after boot-up, even if configured to be enabled.

To avoid such an occurrence, it is recommended that the "wait-for-all-cards" configuration be removed from the startup-config prior to reloading the router with R05.3.00 code.

To bring the port back from a "down" state, disable and re-enable the port.