



7520 Series Installation Guide

Setup, Configuration, and Best Practices

9037389-00 Rev AF
May 2025



Copyright © 2025 Extreme Networks, Inc. All rights reserved.

Legal Notice

Extreme Networks, Inc. reserves the right to make changes in specifications and other information contained in this document and its website without prior notice. The reader should in all cases consult representatives of Extreme Networks to determine whether any such changes have been made.

The hardware, firmware, software or any specifications described or referred to in this document are subject to change without notice.

Trademarks

Extreme Networks and the Extreme Networks logo are trademarks or registered trademarks of Extreme Networks, Inc. in the United States and/or other countries.

All other names (including any product names) mentioned in this document are the property of their respective owners and may be trademarks or registered trademarks of their respective companies/owners.

For additional information on Extreme Networks trademarks, see: <https://www.extremenetworks.com/about-extreme-networks/company/legal/trademarks>

Open Source Declarations

Some software files have been licensed under certain open source or third-party licenses.

End-user license agreements and open source declarations can be found at: <https://www.extremenetworks.com/support/policies/open-source-declaration/>



Table of Contents

| | |
|---|-----------|
| Introduction to the Extreme 7520 Installation Guide..... | 8 |
| Text Conventions..... | 8 |
| Documentation and Training..... | 10 |
| Open Source Declarations..... | 10 |
| Training..... | 10 |
| Help and Support..... | 10 |
| Subscribe to Product Announcements..... | 11 |
| Send Feedback..... | 11 |
| New in this Guide..... | 13 |
| May 2025 Revisions..... | 13 |
| Extreme 7520 Overview..... | 14 |
| Management..... | 14 |
| Cooling..... | 15 |
| Power Supplies..... | 15 |
| Stacking Ports..... | 15 |
| Secure Boot..... | 15 |
| Operating Temperatures..... | 16 |
| Feature Licensing..... | 16 |
| Extreme 7520-48Y-8C Switch Features..... | 16 |
| Extreme 7520-48YE-8CE Switch Features..... | 17 |
| Extreme 7520-48XT-6C Switch Features..... | 18 |
| Port Partitioning..... | 20 |
| Manage Your Switch..... | 21 |
| Connect to Your Switch..... | 21 |
| Manage Your Switch..... | 21 |
| Universal Ethernet Ports..... | 23 |
| Secure Boot..... | 24 |
| Switch Engine..... | 24 |
| Secure Boot Troubleshooting | 24 |
| Fan Modules for Use with Your Switch..... | 25 |
| Precautions Specific to Fan Modules..... | 25 |
| Fan Modules..... | 26 |
| Power Supplies for Use with Your Switch..... | 27 |
| Precautions Specific to Power Supply Modules..... | 27 |
| 800 W AC Power Supplies..... | 28 |
| 800 W DC Power Supplies..... | 28 |
| Build Stacks..... | 30 |

| | |
|---|-----------|
| Introduction to Stacking..... | 30 |
| Build Basic Stacks..... | 31 |
| SummitStack Topologies..... | 32 |
| SummitStack Terms..... | 36 |
| Plan to Create Your Stack..... | 39 |
| Enable and Disable the Stacking Support Option..... | 39 |
| Recommendations for Placing Switches for Stacked Operation..... | 40 |
| Recommendations for Configuring Stacks..... | 40 |
| Combine Switches from Different Series..... | 41 |
| Select Stacking Cables..... | 42 |
| Use the Extreme Stacking Tool..... | 42 |
| Set up the Physical Stack..... | 44 |
| Connect the Switches to Form the Stack Ring..... | 44 |
| Connect Your Stack to the Management Network..... | 47 |
| Site Preparation..... | 48 |
| Plan Your Site..... | 48 |
| Operating Environment Requirements..... | 49 |
| Meet Building and Electrical Codes..... | 49 |
| Set Up the Wiring Closet..... | 50 |
| Control the Temperature..... | 51 |
| Control the Humidity Level..... | 52 |
| Protect Your System from ESD (Electrostatic Discharge)..... | 52 |
| Rack Specifications and Recommendations..... | 52 |
| Mechanical Recommendations for the Rack..... | 53 |
| Ground the Rack..... | 53 |
| Provide Adequate Space for the Rack..... | 53 |
| Secure the Rack..... | 54 |
| Evaluate and Meet Cable Requirements..... | 54 |
| Label Cables and Keep Accurate Records..... | 55 |
| Install Cable..... | 55 |
| Use RJ45 Connector Jackets..... | 57 |
| Prevent Radio Frequency Interference (RFI)..... | 58 |
| Meet Power Requirements..... | 58 |
| Power Supply Requirements..... | 58 |
| Power Cord Requirements..... | 59 |
| UPS (Uninterruptible Power Supply) Requirements..... | 59 |
| Follow Applicable Industry Standards..... | 60 |
| Install Your Switch..... | 61 |
| Safety Considerations for Installation..... | 61 |
| What You Will Need for the Installation..... | 62 |
| Attach the Switch to a Rack or Cabinet..... | 62 |
| Four-Post Rack Mount..... | 63 |
| Two-Post Rack Mount..... | 67 |
| Install Optional Components..... | 68 |
| Pluggable Transceiver Modules..... | 68 |
| Optical Cables..... | 68 |
| Breakout cables..... | 69 |
| Install Internal Power Supplies..... | 69 |

| | |
|--|-----------|
| Turn on the Switch..... | 69 |
| Connect AC Power..... | 69 |
| Connect DC Power..... | 70 |
| Connect Network Interface Cables..... | 70 |
| Activate and Verify the Switch..... | 72 |
| Connect to a Management Console..... | 72 |
| Log In for the First Time on Switch Engine | 72 |
| Configure the Switch's IP Address for the Management VLAN..... | 74 |
| Change the Switch OS via the Bootloader Menu..... | 74 |
| Change the Switch OS via the Startup Menu..... | 75 |
| Log In for the First Time on Fabric Engine..... | 75 |
| Remove and Replace Components..... | 77 |
| Remove the Device from the Rack..... | 77 |
| Remove a Device from a Four-Post Rack..... | 77 |
| Remove a Device from a Two-Post Rack..... | 79 |
| Replace Internal Power Supplies..... | 79 |
| Airflow Direction Requirements..... | 80 |
| Replace an 800 W Internal AC Power Supply..... | 80 |
| Replace an 800 W Internal DC Power Supply..... | 82 |
| Replace Fan Modules..... | 85 |
| Airflow Direction Requirements..... | 86 |
| Replace a Fan Module..... | 86 |
| Monitor the Switch..... | 87 |
| System Status LEDs..... | 87 |
| RJ-45 Management Port LEDs..... | 88 |
| SFP+/SFP28 Port LEDs for 7520-48Y-8C and 7520-48YE-8CE..... | 89 |
| 1G/10G RJ45 Port LEDs for the 7520-48XT-6C..... | 89 |
| QSFP28 Port LEDs..... | 90 |
| 800 W AC Power Supply LEDs..... | 90 |
| 800 W DC Power Supply LEDs..... | 91 |
| Technical Specifications..... | 92 |
| 7520 Series Technical Specifications..... | 92 |
| External Interfaces..... | 92 |
| Weights and Dimensions of Accessories..... | 94 |
| Acoustic Noise and Fan Speed..... | 94 |
| Acoustic Noise..... | 94 |
| Fan Speed..... | 94 |
| Mean Time Between Failures..... | 95 |
| Power Specifications..... | 96 |
| Power Supply Specifications..... | 96 |
| Power Consumption and Heat Dissipation..... | 96 |
| Environmental..... | 96 |
| Environmental Specifications..... | 96 |
| Environmental Compliance..... | 97 |
| Environmental Operating Conditions..... | 97 |
| Packaging and Storage Specifications..... | 97 |
| Standards..... | 97 |
| North American ITE..... | 97 |

| | |
|--|------------|
| European ITE..... | 98 |
| International ITE..... | 98 |
| EMI/EMC Standards..... | 98 |
| North American EMC for ITE..... | 98 |
| European EMC Standards..... | 98 |
| International EMC Certifications..... | 98 |
| Country Specific..... | 98 |
| IEEE 802.3 Media Access Standards..... | 99 |
| Power Cord Requirements for AC-Powered Switches and AC Power Supplies..... | 99 |
| Console Connector Pinouts..... | 99 |
| Safety and Regulatory Information..... | 102 |
| Considerations Before Installing..... | 102 |
| General Safety Precautions..... | 103 |
| Maintenance Safety..... | 104 |
| Fiber Optic Ports and Optical Safety..... | 104 |
| Cable Routing for LAN Systems..... | 105 |
| Power Cord Requirements for AC-Powered Switches and AC Power Supplies..... | 105 |
| Select Power Supply Cords..... | 106 |
| Install Power Supply Units and Connect Power..... | 106 |
| Battery Notice..... | 107 |
| Battery Warning - Taiwan..... | 108 |
| Regulatory Information..... | 109 |
| CE statement..... | 109 |
| EMC Warnings..... | 110 |
| Taiwan BSMI Warning..... | 110 |
| China CQC Warning..... | 110 |
| China and Taiwan: Restriction of Hazardous Substances (ROHS)..... | 110 |
| Canadian requirements..... | 110 |
| China CCC statement..... | 111 |
| Australia (RCM)..... | 111 |
| Federal Communications Commission (FCC) Notice..... | 111 |
| Germany statement..... | 112 |
| KCC statement (Republic of Korea)..... | 112 |
| Japan (VCCI Class A)..... | 112 |
| Japan power cord | 113 |
| Index..... | 114 |



Abstract

This hardware installation guide for the Extreme 7520 Series outlines the procedures for setting up the switches, including site preparation, rack installation, power supply specifications, and cabling. It describes the various models, detailing port configurations, cooling options, and power supply features. The guide covers management interfaces, including RJ45 and USB ports, and provides instructions for configuring secure boot processes, building stacks, and managing environmental requirements. It is designed for network administrators knowledgeable in LANs, Ethernet, and SNMP protocols.



Introduction to the Extreme 7520 Installation Guide

This guide is intended for use by network administrators responsible for installing and setting up network equipment. It assumes a basic working knowledge of:

- Local area networks (LANs)
- Ethernet concepts
- Ethernet switching and bridging concepts
- Routing concepts
- Simple Network Management Protocol (SNMP)
- Basic equipment installation procedures

See the *Switch Engine User Guide* and the *Switch Engine Command References* for your version of the Switch Engine operating system for information about configuring Extreme Networks switches.

Read the following topics to learn about:

- The meanings of text formats used in this document.
- Where you can find additional information and help.
- How to reach us with questions and comments.



Note

If the information in an installation note or release note shipped with your Extreme Networks equipment differs from the information in this guide, follow the installation or release note.

Text Conventions

Unless otherwise noted, information in this document applies to all supported environments for the products in question. Exceptions, like command keywords associated with a specific software version, are identified in the text.

When a feature, function, or operation pertains to a specific hardware product, the product name is used. When features, functions, and operations are the same across an entire product family, such as Extreme Networks switches or routers, the product is referred to as *the switch* or *the router*.

Table 1: Notes and warnings






| Icon | Notice type | Alerts you to... |
|---|-------------|---|
|  | Tip | Helpful tips and notices for using the product |
|  | Note | Useful information or instructions |
|  | Important | Important features or instructions |
|  | Caution | Risk of personal injury, system damage, or loss of data |
|  | Warning | Risk of severe personal injury |

Table 2: Text

| Convention | Description |
|--|---|
| screen displays | This typeface indicates command syntax, or represents information as it is displayed on the screen. |
| The words <i>enter</i> and <i>type</i> | When you see the word <i>enter</i> in this guide, you must type something, and then press the Return or Enter key. Do not press the Return or Enter key when an instruction simply says <i>type</i> . |
| Key names | Key names are written in boldface, for example Ctrl or Esc . If you must press two or more keys simultaneously, the key names are linked with a plus sign (+). Example: Press Ctrl+Alt+Del |
| <i>Words in italicized type</i> | Italics emphasize a point or denote new terms at the place where they are defined in the text. Italics are also used when referring to publication titles. |
| NEW! | New information. In a PDF, this is searchable text. |

 Table 3: Command syntax

| Convention | Description |
|--------------------|---|
| bold text | Bold text indicates command names, keywords, and command options. |
| <i>italic text</i> | Italic text indicates variable content. |

Table 3: Command syntax (continued)

| Convention | Description |
|------------------------------------|--|
| [] | Syntax components displayed within square brackets are optional. Default responses to system prompts are enclosed in square brackets. |
| { x y z } | A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options. |
| x y | A vertical bar separates mutually exclusive elements. |
| < > | Nonprinting characters, such as passwords, are enclosed in angle brackets. |
| ... | Repeat the previous element, for example, <i>member[member...]</i> . |
| \ | In command examples, the backslash indicates a “soft” line break. When a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash. |

Documentation and Training

Find Extreme Networks product information at the following locations:

[Current Product Documentation](#)

[Release Notes](#)

[Hardware and Software Compatibility](#) for Extreme Networks products

[Extreme Optics Compatibility](#)

[Other Resources](#) such as articles, white papers, and case studies

Open Source Declarations

Some software files have been licensed under certain open source licenses. Information is available on the [Open Source Declaration](#) page.

Training

Extreme Networks offers product training courses, both online and in person, as well as specialized certifications. For details, visit the [Extreme Networks Training](#) page.

Help and Support

If you require assistance, contact Extreme Networks using one of the following methods:

[Extreme Portal](#)

Search the GTAC (Global Technical Assistance Center) knowledge base; manage support cases and service contracts; download software; and obtain product licensing, training, and certifications.

The Hub

A forum for Extreme Networks customers to connect with one another, answer questions, and share ideas and feedback. This community is monitored by Extreme Networks employees, but is not intended to replace specific guidance from GTAC.

Call GTAC

For immediate support: (800) 998 2408 (toll-free in U.S. and Canada) or 1 (408) 579 2800. For the support phone number in your country, visit www.extremenetworks.com/support/contact.

Before contacting Extreme Networks for technical support, have the following information ready:

- Your Extreme Networks service contract number, or serial numbers for all involved Extreme Networks products
- A description of the failure
- A description of any actions already taken to resolve the problem
- A description of your network environment (such as layout, cable type, other relevant environmental information)
- Network load at the time of trouble (if known)
- The device history (for example, if you have returned the device before, or if this is a recurring problem)
- Any related RMA (Return Material Authorization) numbers

Subscribe to Product Announcements

You can subscribe to email notifications for product and software release announcements, Field Notices, and Vulnerability Notices.

1. Go to [The Hub](#).
2. In the list of categories, expand the **Product Announcements** list.
3. Select a product for which you would like to receive notifications.
4. Select **Subscribe**.
5. To select additional products, return to the **Product Announcements** list and repeat steps 3 and 4.

You can modify your product selections or unsubscribe at any time.

Send Feedback

The User Enablement team at Extreme Networks has made every effort to ensure that this document is accurate, complete, and easy to use. We strive to improve our documentation to help you in your work, so we want to hear from you. We welcome all feedback, but we especially want to know about:

- Content errors, or confusing or conflicting information.

- Improvements that would help you find relevant information.
- Broken links or usability issues.

To send feedback, email us at Product-Documentation@extremenetworks.com.

Provide as much detail as possible including the publication title, topic heading, and page number (if applicable), along with your comments and suggestions for improvement.



New in this Guide

The following sections describe the recent documentation revisions for this guide. Use this information to locate the latest updates.

May 2025 Revisions

The following table lists the documentation updates for April, 2025.

| Description | Section |
|--|--|
| The Port Partitioning topic has been updated to remove 50Gbps partitioning which is not supported. | Port Partitioning on page 20 Universal Ethernet Ports on page 23 QSFP28 Port LEDs on page 90 |
| Updated QSFP28 Port LEDs table | QSFP28 Port LEDs on page 90 |



Extreme 7520 Overview

[Extreme 7520-48Y-8C Switch Features](#) on page 16

[Extreme 7520-48YE-8CE Switch Features](#) on page 17

[Extreme 7520-48XT-6C Switch Features](#) on page 18

The Extreme 7520 are purpose-built 48-port 10Gb and 48-port 25Gb switches designed for high-performance aggregation and core applications. The Extreme 7520 provides end-to-end secure network segmentation and advanced policy capabilities. The 7520 are Universal Hardware, providing a user-selectable choice of Extreme's flagship switch operating systems.

The 7520 network hardware platform enables organizations to design networks that accommodate a variety of applications and east-west traffic patterns. With its high-density scale-out architecture, leading power efficiency, and airflow options, the 7520 platform delivers a cost-effective solution that optimizes power, cooling, and equipment room space, wherever your network operating center might be.

Management

After connecting to your switch, it can be flexibly managed through the cloud, the network, or the command-line interface (CLI), either remotely or locally. You can access management functions on the switch using ExtremeCloud™ IQ or ExtremeCloud IQ Site Engine, or manually through a web-based GUI or generic command-line interface (CLI) client.

For more information about switch management methods, see [Manage Your Switch](#).



Note

There is also a Type A USB 2.0 port labeled USB on the front panel that can host removable devices.

You can connect to the switch using the RJ45 serial console port or the Ethernet management ports to view and manage the switch configuration. For more information on switch connection methods, see [Manage Your Switch](#). For switch connection details, see [Connect to a Management Console](#) on page 72.

Cooling

Each switch is cooled by hot-swappable internal fan modules. The switch supports both front-to-back and back-to-front airflow for switch cooling. Fan modules are ordered separately for base models 7520-48Y-8C, 7520-48YE-8CE, and 7520-48XT-6C. Fans are included with other models.

For more information about the fan modules used in the switch, see [Fan Modules for Use with Your Switch](#) on page 25.

Power Supplies

Each switch supports up to two hot-swappable internal modular AC or DC power supplies that provide enough power for the needs of the switch. Installed power supplies can be AC, DC, or a combination of AC and DC. Power supplies are ordered separately for base models 7520-48Y-8C, 7520-48YE-8CE, and 7520-48XT-6C. Power supplies are included with other models.

For more information about the power supplies used in the switch, see [Power Supplies for Use with Your Switch](#) on page 27.

Stacking Ports

**Note**

7520-48YE-8CE switches do not support stacking.

Each switch comes equipped with two stacking ports, also referred to as Universal Ethernet ports. When running Switch Engine, these ports can be used in either stacking mode or Ethernet mode. When in stacking mode, up to eight systems can be stacked using qualified direct attach cables or optical transceivers. Fabric Engine does not support stacking; the stacking ports can be used as Ethernet ports if Fabric Engine is in non-fabric mode.

**Note**

7520 Series switches can stack with themselves, with 7720 Series switches, and other switches. See [Combine Switches from Different Series](#) on page 41 for more information.

Stacking cables are ordered separately.

For more information about stacking ports, see [Universal Ethernet Ports](#) on page 23.

For information about optical modules, see the [Extreme Optics](#) website.

For more information about stacking, see [Build Stacks](#) on page 30.

Secure Boot

Secure boot establishes a chain-of-trust relationship in the boot process. The chain-of-trust is established by cryptographic checks at each stage of the boot process

to validate the integrity and authenticity of the next stage before it can execute. The current implementation validates boot images. It cannot be disabled after it has been programmed on the device. There is no command-line interface or commands to enable or disable secure boot. The status of the boot image verification can be monitored in the operating system.

For more information, see [Secure Boot](#) on page 24.

Operating Temperatures

The 7520 supports the following operating temperatures with front-to-back cooling:

- 0°C (32°F) to 50°C (122°F) at sea level
- 0°C (32°F) to 40°C (104°F) up to 3000 m (10,000 ft)

The 7520 supports the following operating temperatures with back-to-front cooling:

- 0°C (32°F) to 45°C (113°F) at sea level
- 0°C (32°F) to 40°C (104°F) up to 3000 m (10,000 ft)

Feature Licensing

Extreme 7520 switches support Unified Licensing, so that you can use them with multiple operating systems. There are two methods of acquiring feature licenses: manual or through ExtremeCloud IQ™ (XIQ).

For Switch Engine licensing, see the *Feature License Requirements* for your version of the Switch Engine operating system.

For Fabric Engine licensing, see the Licensing chapter in the *Fabric Engine User Guide* for your version of the Fabric Engine operating system.

For XIQ licensing, see [ExtremeCloud IQ](#).

Extreme 7520-48Y-8C Switch Features

The Extreme 7520-48Y-8C switch includes the following models:

7520-48Y-8C

The 7520-48Y-8C base switch includes six empty fan module slots and two empty power supply module slots. Fan modules and power supply modules must be ordered separately.

7520-48Y-8C-AC-F

The 7520-48Y-8C-AC-F switch includes two AC power supply modules and six fan modules. Airflow for both the fan modules and the power supply modules is front-to-back.

7520-48Y-8C-AC-R

The 7520-48Y-8C-AC-R switch includes two AC power supply modules and six fan modules. Airflow for both the fan modules and the power supply modules is back-to-front.

The front panel of the switch includes:

- 1 = 48 x 1/10/25Gbps SFP28 ports
- 2 = 8 x 40/100Gbps QSFP28 ports
- 3 = 10/100/1000BASE-T Out-of-band management port
- 4 = USB Type-A port for management or external USB flash
- 5 = Serial console port (RJ-45)
- 6 = System status LEDs

**Note**

1G speeds are supported on SFP28 ports on 7520-48Y-8C models.

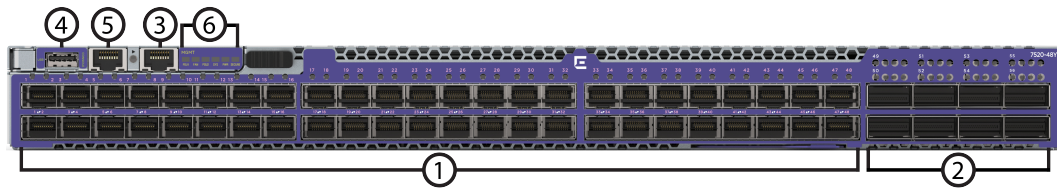


Figure 1: 7520-48Y-8C Switch Front Panel

The rear panel of the switch includes:

- 1 = Grounding lug
- 2 = 2 x Power supply slots
- 3 = 6 x Fan modules



Figure 2: 7520-48Y-8C Switch Rear Panel

Extreme 7520-48YE-8CE Switch Features

The Extreme 7520-48Y-8C switch includes the following models:

7520-48YE-8CE

The 7520-48YE-8CE base switch includes six empty fan module slots and two empty power supply module slots. Fan modules and power supply modules must be ordered separately.

7520-48YE-8CE-AC-F

The 7520-48YE-8CE-AC-F switch includes two AC power supply modules and six fan modules. Airflow for both the fan modules and the powers supply modules is front-to-back.

7520-48YE-8CE-AC-R

The 7520-48YE-8CE-AC-R switch includes two AC power supply modules and six fan modules. Airflow for both the fan modules and the powers supply modules is back-to-front.

The front panel of the switch includes:

- 1 = 48 x 10/25Gbps SFP28 MACsec capable ports
- 2 = 8 x 40/100Gbps QSFP28 MACsec capable ports
- 3 = 10/100/1000BASE-T Out-of-band management port
- 4 = USB Type-A port for management or external USB flash
- 5 = Serial console port (RJ-45)
- 6 = System status LEDs



Note

1G speeds are not supported on SFP28 ports on 7520-48YE-8CE models.

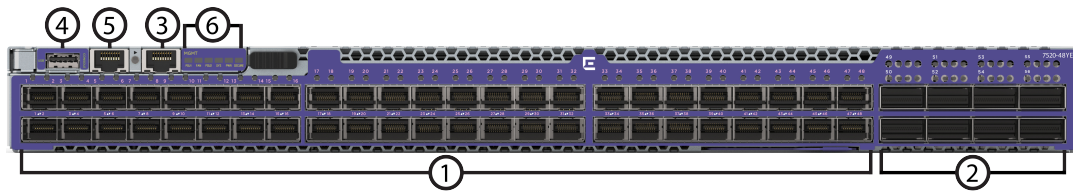


Figure 3: 7520-48YE-8CE Switch Front Panel

The rear panel of the switch includes:

- 1 = Grounding lug
- 2 = 2 x Power supply slots
- 3 = 6 x Fan modules



Figure 4: 7520-48YE-8CE Switch Rear Panel

Extreme 7520-48XT-6C Switch Features

The Extreme 7520-48XT-6C switch includes the following models:

7520-48XT-6C

The 7520-48XT-6C base switch includes six empty fan module slots and two empty power supply module slots. Fan modules and power supply modules must be ordered separately.

7520-48XT-6C-AC-F

The 7520-48XT-6C-AC-F switch includes two AC power supply modules and six fan modules. Airflow for both the fan modules and the power supply modules is front-to-back.

7520-48XT-6C-AC-R

The 7520-48XT-6C-AC-R switch includes two AC power supply modules and six fan modules. Airflow for both the fan modules and the power supply modules is back-to-front.

The front panel of the switch includes:

- 1 = 48 x 1/10Gbps 10GBaseT RJ-45 ports
- 2 = 6 x 40/100Gbps QSFP28 ports
- 3 = 10/100/1000BASE-T Out-of-band management port
- 4 = USB Type-A port for management or external USB flash
- 5 = Serial console port (RJ-45)
- 6 = System status LEDs

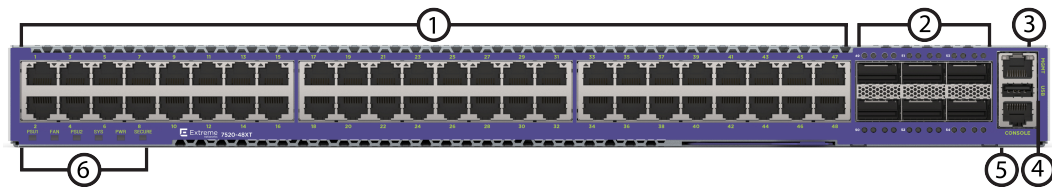



Figure 5: 7520-48XT-6C Switch Front Panel

The rear panel of the switch includes:

- 1 = Grounding lug
- 2 = 2 x Power supply slots
- 3 = 6 x Fan modules



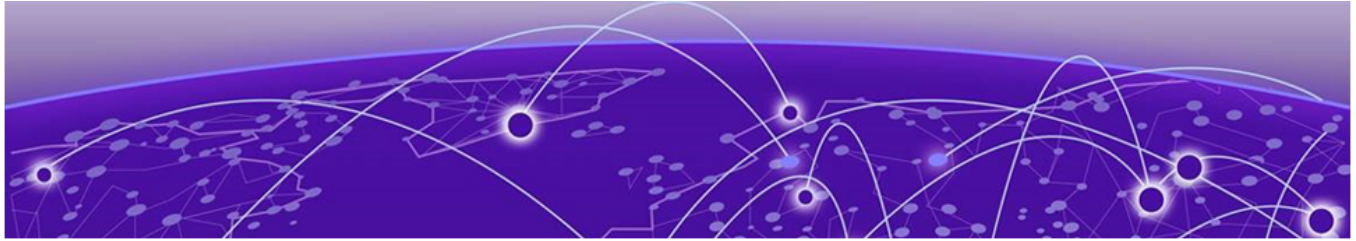Figure 6: 7520-48XT-6C Switch Rear Panel



Port Partitioning

On some Extreme Networks switch models, you can configure QSFP28 ports either as single ports or as multiple, partitioned ports. In a partitioned port, with appropriate cabling, the original physical port can accommodate multiple data lanes at lower bandwidths.

The following partitioning options are available:

Table 4: Port Partitioning

| Switch Model | Port Bandwidth | Ports | Port Partitions |
|--|----------------|---|--|
| 7520-48Y-8C and 7520-48YE-8CE QSFP28 | 100 Gb | Switch Engine: 51 and 53 Fabric Engine: 1/51 | One of the following: <ul style="list-style-type: none">• One 40 Gb port• One 100 Gb port (default)• Four 10 Gb ports• Four 25 Gb ports |
| 7520-48XT-6C QSFP28 | 100 Gb | Switch Engine: 51 and 52 Fabric Engine: 1/51 | One of the following: <ul style="list-style-type: none">• One 40 Gb port• One 100 Gb port (default)• Four 10 Gb ports• Four 25 Gb ports |

For information about configuring partitioned ports, see the *Switch Engine Command References* for your version of the Switch Engine operating system, or the *Fabric Engine Command References* for your version of the Fabric Engine operating system.



Manage Your Switch

Each switch can be flexibly managed through the cloud, the network, or the command-line interface (CLI), either remotely or locally.

Connect to Your Switch

You can use the following methods to connect to the switch.

RJ45 serial console port

Attach an RJ45 to DB9 adapter cable to the RJ45 serial console port on the switch to connect a terminal to manage the switch locally. The RJ45 serial console port is located on the front panel of the switch.

Ethernet management port

Attach an Ethernet cable to the Ethernet management port to connect the system to an out-of-band management network to manage the switch. An Ethernet management port provides dedicated remote access to the switch using TCP/IP. The switch uses an Ethernet management port only for host operation, not for switching or routing.

Alternatively, attach an Ethernet cable directly to the Ethernet management port and a laptop to view and locally manage the switch configuration.

The Ethernet management ports are located on the front panel of the switch. It supports 10/100/1000 Mbps speeds.

For switch connection details, see [Connect to a Management Console](#) on page 72.

Manage Your Switch

The switch supports flexible management through the following methods.

ExtremeCloud IQ or ExtremeCloud IQ Site Engine


ExtremeCloud IQ is a cloud-based enterprise network management application. It provides centralized management, monitoring, and control of network devices from the cloud. It is entirely cloud-hosted, meaning it does not require on-premises infrastructure for management.

ExtremeCloud IQ - Site Engine is an on-premises solution that extends the capabilities of ExtremeCloud IQ to manage a broader range of devices and provides additional features for comprehensive network management. ExtremeCloud IQ - Site Engine provides end-to-end network management, task automation, real-time analytics, and service assurance.

For more information, see [ExtremeCloud IQ](#).

Web-based GUI or generic command-line interface (CLI)

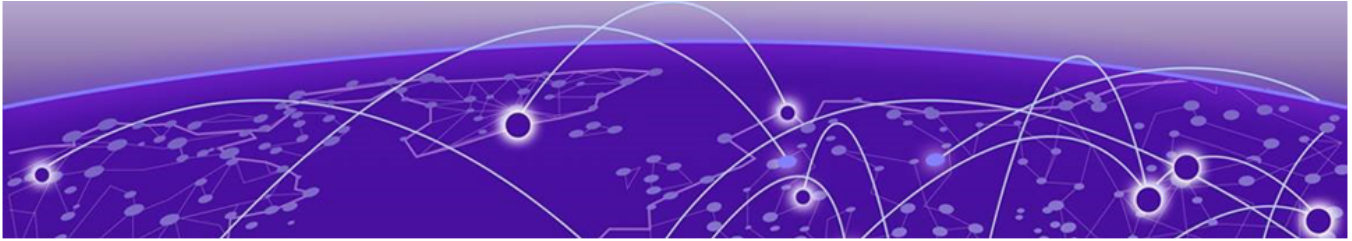The command line interface (CLI) is a powerful tool for managing and configuring switches and network settings. The CLI interface can be accessed through the web-based GUI, or through Telnet, Secure Shell (SSH2), or SNMP using an SNMP manager. The web server must be enabled in the operating system on the switch in order to use the web-based GUI.



Universal Ethernet Ports

The Universal Ethernet ports, or stacking ports, are located on the front panel of the switch and are labeled U1 and U2. These ports can be used with Switch Engine as stacking ports, or as Ethernet ports with Switch Engine and Fabric Engine in non-fabric mode (Fabric Engine does not support stacking).

The Universal Ethernet ports operate as Ethernet ports by default. Use the `enable stacking-support` command to set the U1 and U2 ports in stacking mode.

When used as Ethernet ports, the U1 and U2 ports can support data rates of 100Gb, 1 x 40Gb, 4 x 25Gb, or 4 x 10Gb using QSFP optics.

When running Fabric Engine, the stacking ports are reserved for use by advanced features on the switch by default. For more information, see the `advanced-feature-bandwidth-reservation` Boot Flag documentation in the *Fabric Engine User Guide* for your version of the Fabric Engine operating system.

For information on switch stacking, see [Build Stacks](#) on page 30.



Secure Boot

The status of the boot image verification can be monitored in the operating system.

Switch Engine

The Trusted Delivery field in the output of the `show switch` and `show system` commands in Switch Engine displays the status of the boot image verification. For example:

```
7520-48Y-EXOS.2 # sh switch
SysName:          7520-48Y-EXOS
SysLocation:
SysContact:        https://www.extremenetworks.com/support/
System MAC:        00:04:96:F2:F8:00
System Type:       7520-48Y-EXOS
SysHealth check:   Enabled (Normal)
Recovery Mode:     All
System Watchdog:   Enabled
Trusted Delivery:  Boot Image Verified
Current Time:      Mon Jul 27 19:35:03 2020
Timezone:          [Auto DST Disabled] GMT Offset: 0 minutes, name is UTC.
Boot Time:         Mon Jul 27 19:31:50 2020
```

Trusted delivery can only be in one of two states:

- Boot Image Verified
- Boot Image Verification Failed

Secure Boot Troubleshooting

When there is a secure boot validation failure, the switch is booted to a recovery stage or halts. Contact GTAC for assistance with recovering the switch.



Fan Modules for Use with Your Switch

[Fan Modules](#) on page 26

The Extreme 7520 switch is designed to operate with hot-swappable internal fan modules that provide the cooling needed for the switch to operate. The switch can include up to six redundant, hot-swappable fan modules. The fan modules in the switch chassis can be removed and replaced without special tools. The device can continue operating during the replacement (hot-swap).

Switch fans are not responsible for cooling the power supplies; power supplies have integrated cooling fans that operate independently of the switch fan. All installed fan modules must blow air in the same direction and must match the airflow direction of the installed power supplies. Fan module slots are located on the rear panel of the switch.

Precautions Specific to Fan Modules



Warning

Be careful not to accidentally insert your fingers into the fan tray while removing it from the chassis. The fan may still be spinning at a high speed.



Caution

Disassembling any part of the power supply and fan assembly voids the warranty and regulatory certifications. There are no user-serviceable parts inside the power supply and fan assembly.



Caution

Ensure that the airflow direction of the power supply unit matches that of the installed fan tray. The power supplies and fan trays are clearly labeled with either a green arrow with an "E", or an orange arrow with an "I."



Caution

If you do not install a fan module or a power supply in a slot, you must keep the slot filler panel in place. If you run the chassis with an uncovered slot, the system will overheat.

Fan Modules

Two fan module options, with front-to-back or back-to-front airflow, are supported on the switch.

- Part number XN-FAN-001-F provides front-to-back airflow for switch cooling.
- Part number XN-FAN-001-R provides back-to-front airflow for switch cooling.

Fan modules are ordered separately for base models 7520-48Y-8C, 7520-48YE-8CE, and 7520-48XT-6C. Fans are included with other models.

For information on installing or replacing a fan module, see [Replace Fan Modules on page 68](#).

LEDs on the fan module provide information on the unit's operational status. See [Monitor the Switch](#) on page 87 for details.



Power Supplies for Use with Your Switch

[800 W AC Power Supplies](#) on page 28

[800 W DC Power Supplies](#) on page 28

The Extreme 7520 switch is designed to operate with two replaceable 800 W internal power supply modules that provide all of the power needed for the switch to operate. You can remove one power supply module (hot-swap) without interrupting the switch's operation. Installed power supplies can be AC, DC, or a combination of AC and DC.

The power supplies have integrated cooling fans that operate independently of the switch fans and provide either front-to-back or back-to-front airflow for power supply cooling. All installed power supplies must blow air in the same direction (front-to-back or back-to-front) and must match the airflow direction of the installed fan modules. Power supply slots are located on the rear panel of the switch.

Precautions Specific to Power Supply Modules



Warning

Make sure you use a power cord displaying the mark of the safety agency that defines the regulations for power cords in your country. The mark is your assurance that the power cord can be used safely with the device.



Warning

If the installation requires a different power cord than the one supplied with the device, make sure you use a power cord displaying the mark of the safety agency that defines the regulations for power cords in your country. The mark is your assurance that the power cord can be used safely with the device.



Caution

Disassembling any part of the power supply and fan assembly voids the warranty and regulatory certifications. There are no user-serviceable parts inside the power supply and fan assembly.

**Caution**

Ensure that the airflow direction of the power supply unit matches that of the installed fan tray. The power supplies and fan trays are clearly labeled with either a green arrow with an "E", or an orange arrow with an "I."

**Caution**

If you do not install a fan module or a power supply in a slot, you must keep the slot filler panel in place. If you run the chassis with an uncovered slot, the system will overheat.

800 W AC Power Supplies

Two 800 W AC power supply options, with front-to-back or back-to-front airflow, are supported on the switch.

- 800W AC power supply - front-to-back airflow (part no. XN-ACPWR-800W-F)
- 800W AC power supply - back-to-front airflow (part no. XN-ACPWR-800W-R)

Power supplies are ordered separately for base models 7520-48Y-8C, 7520-48YE-8CE, and 7520-48XT-6C. Power supplies are included with other models.

**Note**

AC power input cords are not provided with AC power supplies. You can order an appropriate cord from Extreme Networks or from your local supplier. The power cord must meet the requirements listed in [Power Cord Requirements](#) on page 59.

For information on installing or replacing an AC power supply, see [Replace Internal Power Supplies](#) on page 79.

LEDs on the 800 W AC power supply provide information on the unit's operational status. See [800 W AC Power Supply LEDs](#) on page 90 for details.

800 W DC Power Supplies

Two 800 W DC power supply options, with front-to-back or back-to-front airflow, are supported on the switch.

- 800W DC power supply - front-to-back airflow (part no. XN-DCPWR-800W-F)
- 800W DC power supply - back-to-front airflow (part no. XN-DCPWR-800W-R)

Power supplies are ordered separately for base models 7520-48Y-8C, 7520-48YE-8CE, and 7520-48XT-6C. Power supplies are included with other models.

**Note**

DC power input cords are provided with DC power supplies.

For information on installing or replacing a DC power supply, see [Replace Internal Power Supplies](#) on page 79.

LEDs on the 800 W DC power supply provide information on the unit's operational status. See [800 W DC Power Supply LEDs](#) on page 91 for details.



Build Stacks

[Introduction to Stacking](#) on page 30

[Plan to Create Your Stack](#) on page 39

[Set up the Physical Stack](#) on page 44

A stack consists of a group of up to eight switches that are connected to form a ring. The stack offers the combined port capacity of the individual switches; it operates as if it were a single switch, making network administration easier.

Stacking is facilitated by the SummitStack-V feature – part of the Switch Engine Basic License features.

This topic describes the supported configurations for stacking switches, the considerations for planning a stack, and the steps for setting up the hardware. Read this chapter before installing the switches that will make up the stack.

Refer to the "Stacking" chapter in the *Switch Engine User Guide* for your version of the Switch Engine operating system for information about configuring a stack, maintaining the stack configuration, and troubleshooting.

Introduction to Stacking

When stacking switches, the stack operates as if it were a single switch with a single IP address and a single point of authentication. One switch – called the primary switch – is responsible for running network protocols and managing the stack. The primary runs Switch Engine software and maintains all the software tables for all the switches in the stack.

All switches in the stack, including the primary switch, are called nodes. [Figure 7](#) shows four nodes in a stack, connected to each other by SummitStack cables.

All connections between stack ports must be directly between switches. A stacking connection cannot pass through a third device, for example a Virtual Port Extender or an LRM/MACsec Adapter.

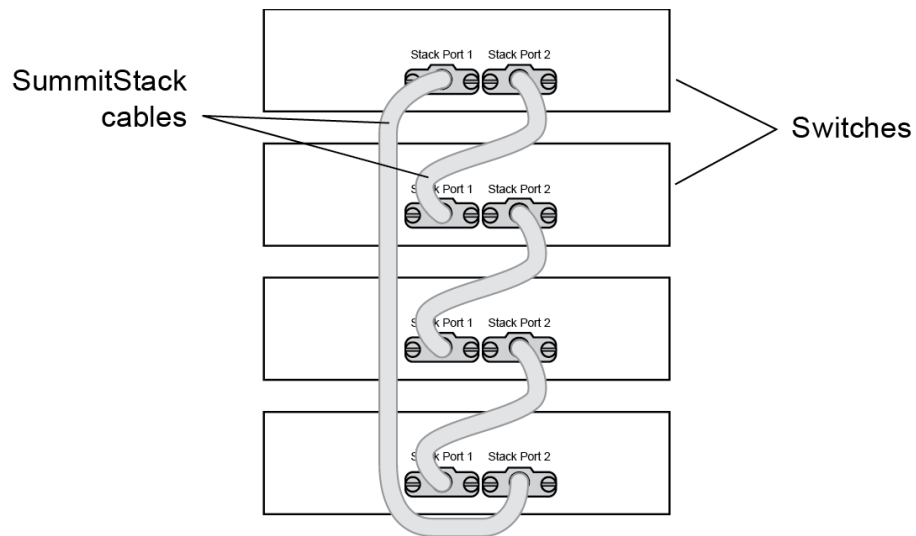


Figure 7: Switches Connected to Form a Stack

Using the SummitStack feature—part of the Switch Engine Edge/Base license—a stack can combine switches from different series, provided that every switch in the stack:

- Runs in the same partition (primary or secondary).
- Runs the same version of Switch Engine.
- Includes support for stacking.

See [Combine Switches from Different Series](#) on page 41 for information about which switch series can be combined to form a stack.

The following topics introduce you to the basic principles of stacking and provide recommendations for creating stacks.

More information to answer your questions about stacking and help you plan your configuration is available on the [Extreme Networks GTAC Knowledge Base](#).

Build Basic Stacks

A stack can be created in either of two ways:

- In *native stacking*, switches are connected using either designated Ethernet data ports or dedicated stacking connectors.
- In *alternate stacking*, switches are connected using 10-Gbps Ethernet data ports that have been configured for stacking. These ports are located either on the switch itself or on option cards installed on either the front or the rear of the switch.

The 7520 Series supports native stacking but does not support alternate stacking.

When planning and building your stack, be sure to follow port compatibility and cabling recommendations as described in this chapter.

Slot Numbers in Stacks

A switch stack can be thought of as a virtual chassis. Each switch (node) operates as if it were occupying a slot in a chassis and is controlled by the primary. The high-speed stacking links function like the backplane links of a chassis.

Each switch in the stack is assigned a “slot number” during the initial software configuration of the stack. Starting at the switch with the console connection, numbers are assigned in numerical order following the physical path of the connected stacking cables. For example, if you follow the cabling recommendations presented in [Connect the Switches to Form the Stack Ring](#) on page 44 and configure a vertical stack from the console on the switch at the top of the physical stack, the switches will be assigned slot numbers 1 through 8 from the top down.

A quick way to verify that the cable connections match the software configuration is to check the stack number indicator on each switch. If the slot numbers do not line up in the order you arranged the switches, this might indicate that the stacking cable setup differs from what you intended when you configured the software. In this case, reconnect the cables in the correct order and perform the software configuration again.

Primary/Backup Switch Redundancy

When your stack is operational, one switch is the primary switch, responsible for running network protocols and managing the stack.

To provide recovery in case of a break in the stack connections, you can configure redundancy by designating a backup switch to take over as primary if the primary switch fails. When you perform the initial software configuration of the stack, the “easy setup” configuration option automatically configures redundancy, with slot 1 as the primary and slot 2 as the backup. You can also configure additional switches as “primary-capable,” meaning they can become a stack primary in case the initial backup switch fails.

Extreme 7520 switches can be stacked with themselves or with Extreme 7720 switches using the SummitStack V400 stacking method. One switch is as capable as the other.

**Note**

The 7520-48YE-8CE switch models do not support stacking.

SummitStack Topologies

[Figure 8](#) presents a graphical representation of a stack and some of the terms that describe stack conditions.

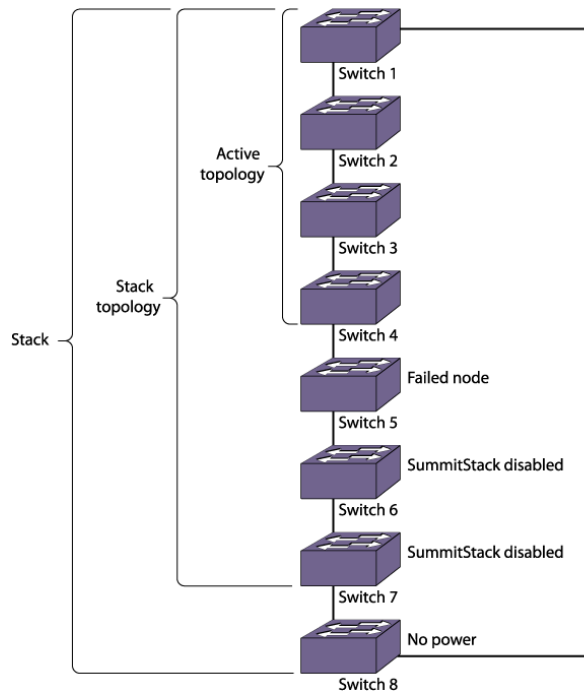


Figure 8: Example of a Stack, Showing the Active Topology and the Stack Topology

A stack is the collection of all switches, or nodes, that are cabled together to form one virtual switch using the Switch Engine SummitStack feature.

The maximum cable length supported between switches depends on the types of switches in your stack, the installed option cards, and the configured stacking ports.

A stack topology is the set of contiguous nodes that are powered up and communicating with each other. In the example shown, Switch 8 is not part of the stack topology because it is not powered up.

An active topology is the set of contiguous nodes that are active. An active node is powered up, is configured for stack operation, and is communicating with the other active nodes.

Switch 5 in the example has failed, stacking is disabled on Switches 6 and 7, and Switch 8 has no power. As a result, the active topology includes Switches 1 through 4 only.

For more information about SummitStack terminology, see [SummitStack Terms](#) on page 36.

Ring Topology: Recommended for Stacking

SummitStack nodes should be connected to each other in a ring topology. In a ring topology, one link is used to connect to a node and the other link is used to connect to another node. The result forms a physical ring connection. This topology is highly recommended for normal operation.

[Figure 9](#) represents a maximal ring topology of eight active nodes.

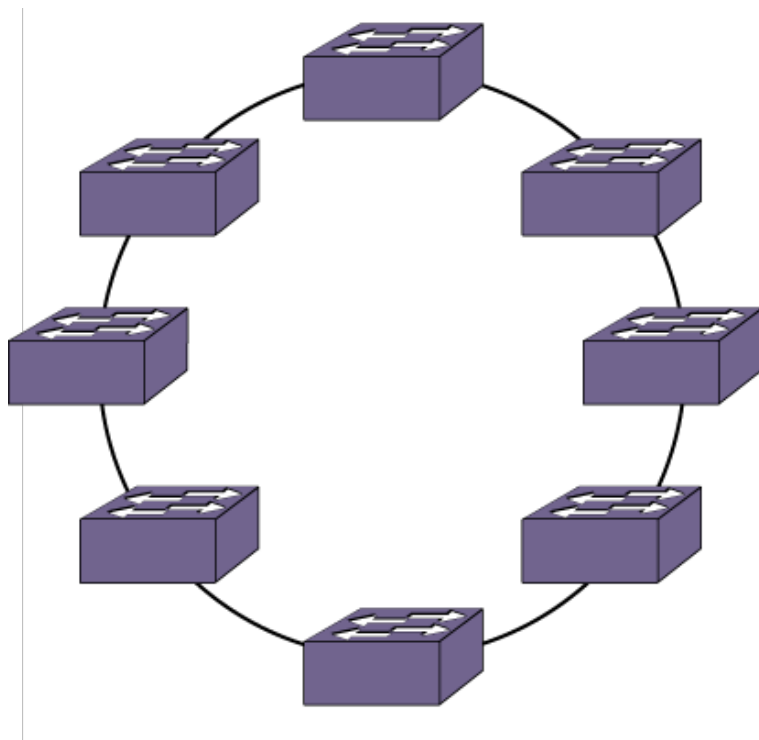


Figure 9: Graphical Representation of a Ring Topology

Figure 10 shows what the same ring topology would look in actual practice. Each switch in the rack is connected to the switch above it and the switch below it. To complete the ring, a longer cable connects Switch 1 with Switch 8.

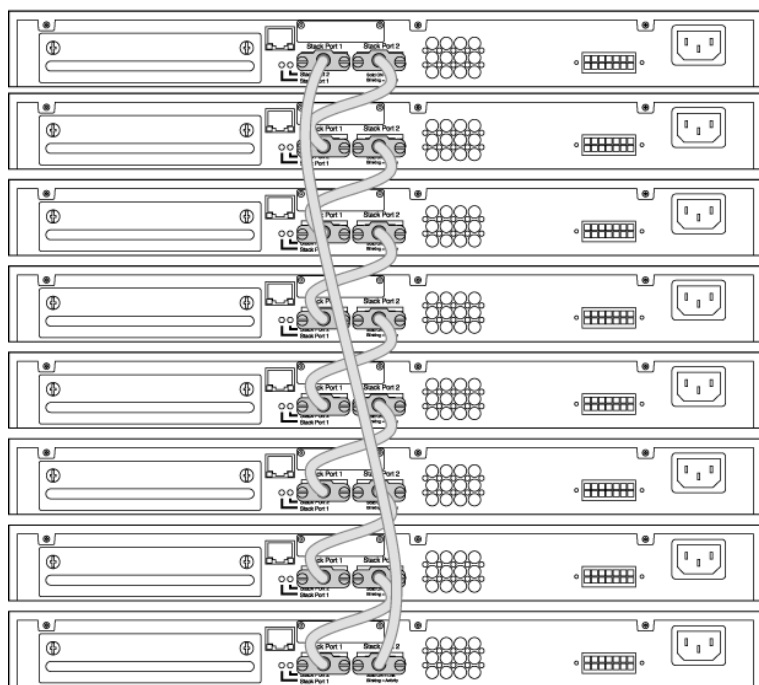


Figure 10: Switches Connected to Each Other in a Ring Topology

Note that, while a physical ring connection may be present, a ring active topology exists only when all nodes in the stack are active.

Daisy Chain Topology: Not Recommended for Stacking

Stackable switches can be connected in a daisy-chain topology. This is a [ring topology](#) with one of the links disconnected, inoperative, or disabled. A daisy chain can be created when a link fails or a node reboots in a ring topology, but the daisy chain topology is not recommended for normal operation.

Connect your stack nodes in a ring topology, not a daisy-chain topology, for normal operation.

In [Figure 11](#), the nodes delineated as the active topology are operating in a daisy-chain configuration, even though there is physically a ring connection in the stack.

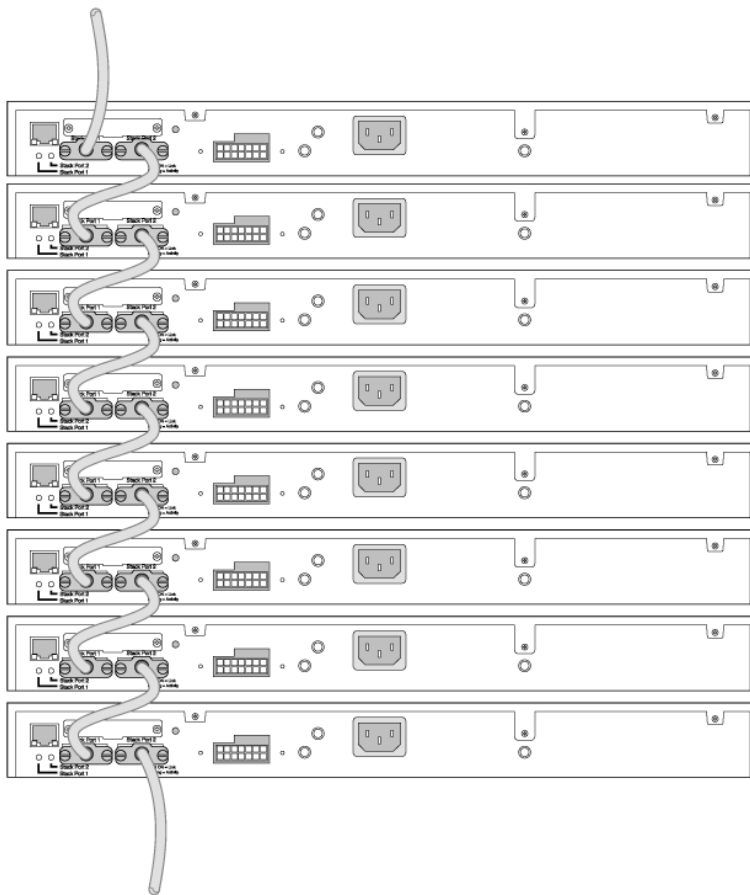


Figure 11: Daisy Chain Topology

You might need to use a daisy chain topology while adding a new node, removing a node, or joining two stacks.

If you are using a daisy chain topology, the possibility of a dual primary condition increases. Before you create a daisy chain topology, read "Managing a Dual Primary Situation" in the *Switch Engine User Guide* for your version of the Switch Engine operating system.

SummitStack Terms

[Table 5](#) describes the terms used for the SummitStack feature. These terms are listed in the recommended reading sequence.

Table 5: List of Stacking Terms

| Term | Description |
|--------------------|--|
| Stackable switch | An Extreme Networks switch that provides two stacking ports and can participate in a stack. |
| Stacking port | A physical interface of a stackable switch that is used to allow the connection of a stacking link. Stacking ports are point-to-point links that are dedicated for the purpose of forming a stack. |
| Native stacking | A stacking configuration in which stack members are connected using either designated Ethernet data ports or dedicated stacking connectors. |
| Alternate stacking | A stacking configuration in which stack members are connected using 10-Gbps Ethernet data ports that have been configured for stacking. These ports are located either on the switch itself or on option cards installed on the rear of the switch. |
| Stacking link | A cable that connects a stacking port of one stackable switch to a stacking port of another stackable switch, plus the stacking ports themselves. |
| Node | A switch that runs the Switch Engine operating system and is part of a stack. Synonymous with <i>stackable switch</i> . |
| Stack | A set of stackable switches and their connected stacking links made with the intentions that: (1) all switches are reachable through their common connections; (2) a single stackable switch can manage the entire stack; and (3) configurable entities such as VLANs and link trunk groups can have members on multiple stackable switches. A stack consists of all connected nodes regardless of the state of the nodes. |
| Stack topology | A contiguously connected set of nodes in a stack that are currently communicating with one another. All nodes that appear in the <code>show stacking</code> command display are present in the stack topology. |
| Stack path | A data path that is formed over the stacking links for the purpose of determining the set of nodes that are present in the stack topology and their locations in the stack. Every node is always present in a stack path whether or not stacking is enabled on the node. |
| Control path | A data path that is formed over the stacking links that is dedicated to carrying control traffic, such as commands to program hardware or software image data for software upgrade. A node must join the control path to fully operate in the stack. A node that is disabled for stacking does not join the control path, but does communicate over the stack path. |

Table 5: List of Stacking Terms (continued)

| Term | Description |
|-----------------|--|
| Active node | A node that has joined the control path. The active node can forward the control path messages or can process them. It can also forward data traffic. Only an active node can appear as a card inserted into a slot when the <code>show slot {slot} {detail} detail</code> command is executed on the primary node of the stack. |
| Active topology | A contiguous set of active nodes in a stack topology plus the set of stacking links that connect them. When an active topology consists of more than one node, each node in the active topology is directly and physically connected to at least one other node in the active topology. Thus, the active topology is a set of physically contiguous active nodes within a stack topology. |
| Candidate node | A node that is a potential member of an active topology, or an active node that is already a member of an active topology. A candidate node may or may not be an active mode – that is, it may or may not have joined the control path. |
| Node role | The role that each active node plays in the stack – either primary, backup, or standby. |
| Primary node | The node that is elected as the primary node in the stack. The primary node runs all of the configured control protocols such as OSPF (Open Shortest Path First), RIP (Routing Information Protocol), Spanning Tree, and EAPS (Extreme Automatic Protection Switching). The primary node controls all of its own data ports as well as all data ports on the backup and standby nodes. To accomplish this, the primary node issues specific programming commands over the control path to the backup and standby nodes. |
| Backup node | The node assigned to take over the role of primary if the primary node fails. The primary node keeps the backup node's databases synchronized with its own databases in preparation for such an event. If and when the primary node fails, the backup node becomes the primary node and begins operating with the databases it has previously received. In this way, all other nodes in the stack can continue operating. |
| Standby node | A node that is prepared to become a backup node in the event that the backup node becomes the primary node. When a backup node becomes a primary node, the new primary node synchronizes all of its databases to the new backup node. When a node operates in a standby role, most databases are not synchronized – except those few that directly relate to hardware programming. |

Table 5: List of Stacking Terms (continued)

| Term | Description |
|-----------------------------|--|
| Acquired node | <p>A standby or backup node that is acquired by a primary node. This means that the primary node has used its databases to program the hardware of the standby or backup node. The standby or backup node has acted as a hardware programming proxy, accepting the instructions of the primary node to do so.</p> <p>An acquired backup node maintains the databases needed to reflect why the hardware is programmed as it is. However, a standby node does not. An acquired node can be re-acquired (without a reboot) by the backup node only when the backup node becomes the primary node, and only when both the backup and standby nodes were already acquired by the same primary node at the time of its failure.</p> |
| Data ports | The set of ports on a stackable switch that are available for connection to your data networks. Such ports can be members of a user-configured VLAN or trunk group. They can be used for Layer 2 and 3 forwarding of user data traffic, for mirroring, or other features you can configure. Data ports are different from stacking ports. |
| Failover | <p>The process of changing the backup node to the primary node when the original primary node has failed.</p> <p>When a primary node fails, if a backup node is present, and if that node has completed its initial synchronization with the primary node, then the backup node assumes the role of primary node. The standby nodes continue their operation and their data ports do not fail.</p> |
| Hitless failover | A failover in which all data ports in the stack, except those of the failing primary node, continue normal operation when the primary node fails. |
| Node address | The unique MAC address that is factory-assigned to each node. |
| Node role election | The process that determines the role for each node. The election takes place during initial stack startup and elects one primary node and one backup node. An election also takes place after a primary node failover, when a new backup node is elected from the remaining standby nodes. |
| Node role election priority | A priority assigned to each node, to be used in node role election. The node with the highest node role election priority during a role election becomes the primary node. The node with the second highest node role election priority becomes the backup. |
| Operational node | A node that has achieved operational state as a card in a slot. The operational state can be displayed using the <code>show slot {slot} {detail} detail</code> command. |
| System uptime | The amount of time that has passed since the last node role election. You can display the system uptime by entering the <code>show switch {detail}</code> command on the primary node. |

Table 5: List of Stacking Terms (continued)

| Term | Description |
|---------------|---|
| Stack segment | A collection of nodes that form a stack topology. The term is useful when a stack is severed. Each severed portion of the stack is referred to as a stack segment. |
| Stack state | A state assigned by the stack to a node. You can display the stack state by entering the <code>show stacking</code> command. |
| Easy Setup | A procedure that automatically configures the essential stacking parameters on every node for initial stack deployment, and then automatically reboots the stack to put the parameters into effect. The choice to run Easy Setup is offered when you run the <code>enable stacking {node-address node-address}</code> command and the essential stacking parameters are unconfigured or inconsistent. It can also be invoked directly by running the <code>configure stacking easy-setup</code> command. |

Plan to Create Your Stack

Use the information in the following topics to plan the physical makeup of your stack – switches, versatile interface modules (VIMs), and cables – and the stacking protocols you will use. Included are:

- Guidelines and other information for each switch model in your stack
- Considerations for combining different switch models in a stack
- Information about stacking cables

Enable and Disable the Stacking Support Option

The stacking-support option is enabled by default for many switch and option card configurations. However, some configurations require you to enable the stacking-support option before a switch can participate in a stack.

- To enable stacking-support, issue the `enable stacking-support` command.

You must enable stacking-support individually for every switch in the stack that does not have stacking support enabled by default.

- To disable stacking support, configure the switch data ports to use the Ethernet protocol instead of the stacking protocol.

Use the `disable stacking-support` command.

Recommendations for Placing Switches for Stacked Operation

For best results in a SummitStack configuration, follow these recommendations for physically situating your equipment:

- Use the shortest possible stacking cables to connect the switches in the stack. This reduces the likelihood that the stacking cables might accidentally be damaged or disconnected.
- When possible, place all switches for the stack in the same rack or in adjacent racks. This facilitates using shorter stacking cables.
- The primary switch, or node, is the switch through which you will perform the initial stack configuration, using the console port. For simplicity and ease of connecting the stacking cables, plan to designate the top switch in a vertical physical stack as the primary switch. If switches are installed in several adjacent racks, place the primary switch at one end of the row.
- Physically locate the intended primary and backup nodes adjacent to each other, and plan to connect these nodes to each other directly so that Switch Engine application synchronization traffic is localized to a single stack link.
- On the primary node, connect the Ethernet management port to your management network.
- To provide management access to the stack in case of a failure in the primary switch, connect all switches that will participate in redundancy to your management network using the Ethernet management port on each switch.
- Use stacking cables to interconnect the stack nodes into a ring topology (see [Ring Topology: Recommended for Stacking](#) on page 33). Include only the nodes that you expect to be active in the stack.

Follow the recommendations in [Recommendations for Configuring Stacks](#) on page 40 to configure the software for your stack.

The recommended procedures for installing and interconnecting a stack are found in [Set up the Physical Stack](#) on page 44.

Recommendations for Configuring Stacks

When deploying a new stack, follow these recommendations for configuring the software:

- Plan to use the stack as if it were a single multi-slot switch. You need to decide the number and type of stackable switches in the stack and how the stack ports will be connected to the network.
- You can physically connect the stack to your networks before the nodes are configured. However, the default configuration on a switch in non-stacking mode assumes a default untagged VLAN that contains all switch ports. When first powered on, the switch acts as a Layer 2 switch, possibly resulting in network loops.
- Make sure all nodes support the SummitStack feature and are running the same Switch Engine software version. (See the *Licensing Guide* for your version of the Switch Engine operating system.) To view the Switch Engine software version on a node, restart the node and run the command:

```
show version {detail | process name | images {partition partition}
{slot slot_number} } .
```

If any node does not have the right version, install the correct version on that node. Use the same image partition on all nodes. After stacking is enabled, images can be upgraded from the stack only if the same image is selected on all nodes.

- If you intend to deploy new units that might be part of a stack in the future, turn on stacking mode during initial deployment to avoid the need for a future restart. The only disadvantages of stacking mode are the loss of QoS (quality of service) profile QP7 and the reservation of some of the packet buffer space for stacking control traffic.
- You can configure the stack by logging into the primary node or any of the other nodes.
- If the primary-capable stackable switches have different purchased license levels, you might need to configure license level restrictions on some nodes before those nodes can join the stack. See the *Switch Engine User Guide* for your version of the Switch Engine operating system for more information about managing licenses.
- If the stack supports any feature pack license (such as MPLS or Direct Attach), that feature pack license must be installed on all primary-capable nodes to support that feature and to prevent traffic interruption if a failover event occurs.
- Most stacking specific configurations are effective only after a restart. However, most non-stacking configuration commands take effect immediately and require no restart.
- A basic stack configuration can be achieved by using the Easy Setup procedure, as described in the *Switch Engine User Guide* for your version of the Switch Engine operating system.
- If EAPS, Spanning Tree, or any Layer 2 redundancy protocol is not running on the network, make sure that your network connections do not form a network loop.

Follow the recommendations in [Recommendations for Placing Switches for Stacked Operation](#) on page 40 for physically situating your equipment.

Combine Switches from Different Series

- When stacking with themselves, the 5320-24T-4X-XT and 5320-24T-24S-4XE-XT switches support data rates of 10Gbps on ports U1 and U2 using the default Native-V40 stacking method with SFP+ cables.
- When stacking with itself, and with other 5320 Series switches, the 5320-16P-2MXT-2X switch supports data rates of 40Gbps on ports U1 and U2 using Native-V40 stacking with SFP+ cables.

5320 Series switches (except the 5320 Series Extended Temperature switches and the 5320-16P-2MXT-2X switch) can also stack with 5420 Series and 5520 Series switches.

- The 5520-VIM-4X must be installed on the 5520 Series when stacking with the 5420 Series and 5520 Series switches. Data rates of 10Gbps are supported using the Native-V40 stacking method and SFP+ cables.

- When stacking with 5420 Series and 5520 Series switches utilizing the 5520-VIM-4X installed on the 5520 Series and using the SummitStack-V stacking method with SFP+ cables and alternate stacking ports (10G link running at HG), data rates of 10Gbps are supported.

Extreme 7520 switches can stack with themselves and with Extreme 7720 switches. The Extreme 7520 supports data rates of 100Gbps using the Native-V400 stacking method (SummitStack-V400) with QSFP28 cables, or Native-V400-Alternative-configuration with the long range AOC optics. The stacking ports on 7520-48XT-6C models are ports 53 and 54. The stacking ports on 7520-48Y-8C models are ports 55 and 56.

Select Stacking Cables

Stacking connections using the native stacking ports require stacking cables that are specific to the type of stacking port. These cables are available from Extreme Networks in lengths from 0.5 meter to 40 meters.



Note

For the most recent information about available cables, contact your Extreme Networks sales representative or refer to the [Extreme Optics](#) website.



Caution

Use of non-recommended cables or optics could cause stack instability.

Use the Extreme Stacking Tool

The Extreme Stacking Tool provides an easy way to plan your stack. As you select various switch models and stacking methods, the tool shows you:

- What switch models can be stacked together and which cannot.
- Statistics showing the routing options that are available with every stack combination.
- Recommendations about which switches should be the primary and backup nodes.
- Information about the supported versions of Switch Engine for every combination.

To use the Stacking Tool, follow these steps.

1. Open the Stacking Tool (<https://stackingtool.extremenetworks.com/StackingTool/>) in a web browser.



Note

The Stacking Tool is also available in the Support Tools section of the Extreme Portal.

2. Find a switch model in the **Switches** column.

Each switch model is represented by a rectangle, as shown in the example in the following figure. Each switch model is represented by a rectangle, as shown in the example in the following figure. In this example, stacking ports are represented by

U1 and U2 on the right side. Ports 53 and 54 are the actual stacking ports for the 7520-48XT-6C model.



Note

The 7520-48Y-8C model uses ports 55 and 56 for stacking.



Figure 12: 7520 Switch Shown in the Stacking Tool



Tip

Select a rectangle to display more information about the switch model and the VIMs (if any) that it can use for stacking.

3. Drag the rectangle to the first slot in the Stack column in the middle of the page.

To the right of the Stack column, the tool displays statistics about available routes, supported software versions, and primary/backup recommendations.



Tip

If you do not see statistics and other information, select the arrow (> symbol) to the immediate right of the Stack column.

4. Use the tool in any of the following ways:
 - Select other switches and drag them to the slots in the stacking column.
 - For any switch in the stack, select the U1 and U2 symbols to choose stacking methods – for example, SummitStack-V and SummitStack-V80.
 - To remove a switch from the stack, drag it away from the stacking column.

Whenever you add or remove a switch from the stack, the statistics and recommendations update automatically.

In addition to statistics and recommendations, colors in the display show whether the selected switch models and stacking methods are compatible.

Table 6: Colors in the Stacking Tool Display

| Color | Meaning |
|--------|---|
| Green | Compatible and preferred |
| Blue | Compatible |
| Yellow | Incompatible with the selected primary node |
| Red | Incompatible |

Set up the Physical Stack

After you have installed the individual switches (see [Install Your Switch](#) on page 61), follow these steps to create the physical stack.

1. Connect the switches that will form the stack. See [Connect the Switches to Form the Stack Ring](#) on page 44.
2. Connect the switches to your management network. See [Connect Your Stack to the Management Network](#) on page 47.

After setting up and connecting the switches, perform software configuration for the stack. See "Configuring a New Stack" in the *Switch Engine User Guide* for your version of the Switch Engine operating system.

Connect the Switches to Form the Stack Ring

After you have installed the individual switches, connect them together using the stacking cables.

The examples in this section show cable connections and the recommended order for connecting ports to facilitate the easy setup configuration.

In general, it is best to connect Stack Port 2 on one switch to Stack Port 1 on the switch with the next higher slot number. Although you can connect the switches in any order, connecting them as shown in these examples will produce better predictability and easier software configuration.

All connections between stack ports must be directly between switches. A stacking connection cannot pass through a third device, for example a Virtual Port Extender or an LRM/MACsec Adapter.

It is essential to create an unbroken data path through all the switches in the stack.

Examples of Valid Stacking Configurations

The examples in the following sections show various physical stacking arrangements: all switches in a single rack, switches in two adjacent racks, and switches at the tops of several racks in a row.

Example: Basic Stack with Four Switches

This example shows a stack of four switches in a single rack.

The slot numbers presume a console connection to the switch at the top of the physical stack.

[Figure 13](#) shows cable connections for a 4-node stack using SummitStack 40G cables to connect switches with integrated SummitStack ports.

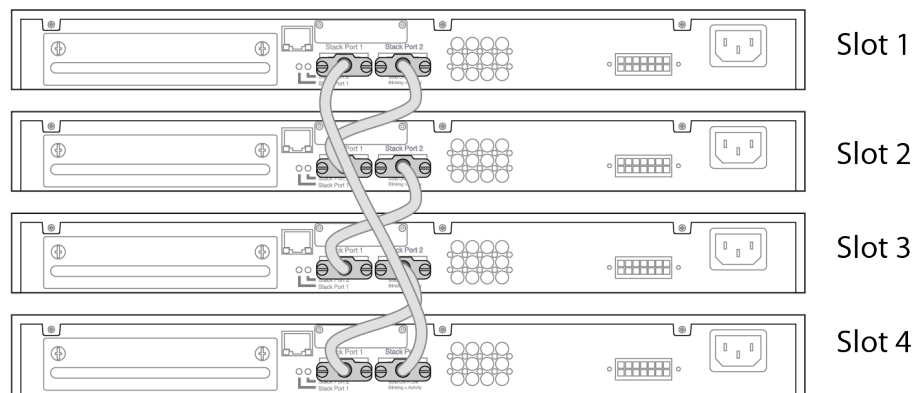


Figure 13: SummitStack Cable Connections Using Four Switches with Integrated SummitStack Ports

Table 7 lists the recommended order for connecting the stacking ports in this example.

Table 7: Basic Stack with Four Switches: Connections

| Connect this slot and port ... | | ... To this slot and port | |
|--------------------------------|--------------|---------------------------|--------------|
| Slot 1 | Stack Port 2 | Slot 2 | Stack Port 1 |
| Slot 2 | Stack Port 2 | Slot 3 | Stack Port 1 |
| Slot 3 | Stack Port 2 | Slot 4 | Stack Port 1 |
| Slot 4 | Stack Port 2 | Slot 1 | Stack Port 1 |

Example: Basic Stack with Eight Switches

Figure 14 shows cable connections for an 8-node stack using SummitStack 40G cables to connect switches with integrated SummitStack ports.



Figure 14: SummitStack Cable Connections Using Eight Switches with Integrated SummitStack Ports

Table 8 lists the recommended order for connecting the stacking ports in this example.

Table 8: Basic Stack with Eight Switches: Connections

| Connect this slot and port ... | | ... To this slot and port | |
|--------------------------------|--------------|---------------------------|--------------|
| Slot 1 | Stack Port 2 | Slot 2 | Stack Port 1 |
| Slot 2 | Stack Port 2 | Slot 3 | Stack Port 1 |
| Slot 3 | Stack Port 2 | Slot 4 | Stack Port 1 |
| Slot 4 | Stack Port 2 | Slot 5 | Stack Port 1 |
| Slot 5 | Stack Port 2 | Slot 6 | Stack Port 1 |
| Slot 6 | Stack Port 2 | Slot 7 | Stack Port 1 |
| Slot 7 | Stack Port 2 | Slot 8 | Stack Port 1 |
| Slot 8 | Stack Port 2 | Slot 1 | Stack Port 1 |

Example: Stacked Switches across Several Racks

Figure 15 shows five switches installed at the tops of five adjacent racks. To accommodate the shortest possible cables, immediately adjacent switches are not always connected together. Port 2 on one switch is connected to Port 1 on the next connected switch. If the easy setup feature is used to configure the stack parameters, the assigned slot numbers will be as shown in the figure.

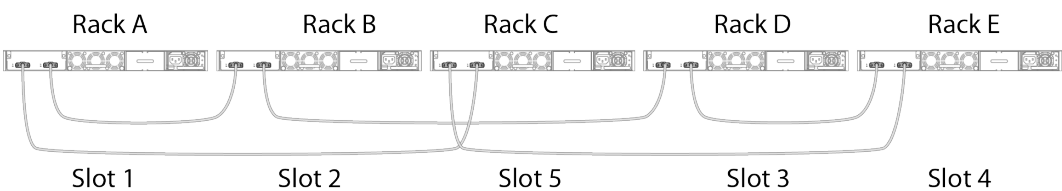


Figure 15: Top-of-Rack Stack Installation

Table 9 lists the recommended order for connecting the stacking ports in this example.

Table 9: Stacked Switches across Several Racks: Connections

| Connect this slot and port ... | | | ... To this slot and port | | |
|--------------------------------|--------|--------|---------------------------|---------|--------|
| Slot 1 | Rack A | Port 2 | Slot 2 | Rack B | Port 1 |
| Slot 2 | Rack B | Port 2 | Slot 3 | Rack D | Port 1 |
| Slot 3 | Rack D | Port 2 | Slot 4 | Rack E | Port 1 |
| Slot 4 | Rack E | Port 2 | Slot 5 | Rack C | Port 1 |
| Slot 5 | Rack C | Port 2 | Slot 1 | (Rack A | Port 1 |

Connect Your Stack to the Management Network

Before you can configure Switch Engine for a new stack, your management console must be connected to at least one switch in the stack.

Connect your management console to a serial console port or the Ethernet management console port on the switch that will become the stack primary node. If you plan to configure redundancy, connect to the console ports of all switches in the stack that will be primary-capable.

If you followed the cabling examples in [Connect the Switches to Form the Stack Ring](#) on page 44, and if you use the Easy Setup configuration procedure, only slots 1 and 2 can become the primary node. However, you can connect all switch management ports in the stack if you choose to do so. There is an alternate IP address configuration that will enable you to log in directly to each switch in the stack through its Ethernet management port.

See the *Switch Engine User's Guide* for your version of Switch Engine for instructions to perform the software configuration for your stack.



Site Preparation

[Plan Your Site](#) on page 48

[Operating Environment Requirements](#) on page 49

[Rack Specifications and Recommendations](#) on page 52

[Evaluate and Meet Cable Requirements](#) on page 54

[Meet Power Requirements](#) on page 58

By carefully planning your site, you can maximize the performance of your existing network and ensure that it is ready to migrate to future networking technologies.

The information in this chapter is intended for the system administrator, network equipment technician, network manager, or facilities manager responsible for installing and managing the network hardware. The chapter assumes a working knowledge of local area network (LAN) operations, and a familiarity with communications protocols that are used on interconnected LANs.

Only qualified service personnel should install, maintain, or remove a switch, chassis, or its components. Qualified service personnel have had appropriate technical training and experience that is necessary to be aware of the hazards to which they are exposed when performing a task and of measures to minimize the danger to themselves or other people.



Note

Before installing or removing any components of the system, and before carrying out any maintenance procedures, read the safety information in the [Technical Specifications](#) on page 92 topic.

Plan Your Site

To install your equipment successfully, you should plan the site carefully. The site planning process has three major parts:

1. Meeting site requirements.

The physical installation site must meet the following requirements for a safe and successful installation:

- Building and electrical code requirements
- Environmental, safety, and thermal requirements for the equipment you plan to install
- Equipment rack requirements

2. Evaluating and meeting cable requirements.

After examining your physical site and verifying that all environment requirements are met, evaluate and compare your existing cable plant with the requirements of the Extreme Networks equipment to determine if you need to install new cables.

3. Meeting power requirements.

To run your equipment safely, you must meet the specific power requirements for each switch and external power supply unit installed in the system.

For power specifications of the switches, see the specific switch listings in [Technical Specifications](#) on page 92.

Operating Environment Requirements

Verify that your site meets all environmental and safety requirements.

Virtually all areas of the United States are regulated by building codes and standards. During the early planning stages of installing or modifying your network, it is important that you develop a thorough understanding of the regulations that pertain to your location and industry.

Meet Building and Electrical Codes

Building and electrical codes vary depending on your location. Comply with all code specifications when planning your site and installing cable. This section lists resources for obtaining additional information.

For information about major building codes, consult the following organization:

International Code Council (ICC)
5203 Leesburg Pike
Falls Church, VA 22041 USA
www.iccsafe.org

The organizations listed in [Table 10](#) are authorities on electrical codes.

Table 10: Authorities on Electrical Codes

| Organization | Address | Web Site URL |
|--|--|--|
| National Electrical Code (NEC) Classification (USA only) Recognized authority on safe electrical wiring. Federal, state, and local governments use NEC standards to establish their own laws, ordinances, and codes on wiring specifications. The NEC classification is published by the National Fire Protection Association (NFPA). | NFPA 1 Batterymarch Park Quincy, MA 02169 USA | www.nfpa.org/ |
| Underwriters' Laboratory (UL) Independent research and testing laboratory. UL evaluates the performance and capability of electrical wiring and equipment to determine whether they meet certain safety standards when properly used. Acceptance is usually indicated by the words "UL Approved" or "UL Listed." | UL 333 Pfingsten Road Northbrook, IL 60062 USA | www.ul.com |
| National Electrical Manufacturing Association (NEMA) (USA only) Organization of electrical product manufacturers. Members develop consensus standards for cables, wiring, and electrical components. | NEMA 1300 N. 17th Street Rosslyn, VA 22209 USA | www.nema.org |
| Electronic Components Industry Association (ECIA) Trade association that develops technical standards, disseminates marketing data, and maintains contact with government agencies in matters relating to the electronics industry. | ECIA 111 Alderman Drive Suite 400 Alpharetta, GA 30005 USA | www.ecianow.org |
| Federal Communications Commission (FCC) (USA only) Commission that regulates all interstate and foreign electrical communication systems that originate in the United States according to the Communications Act of 1934. The FCC regulates all U.S. telephone and cable systems. | FCC 445 12th Street S.W. Washington, DC 20554 USA | www.fcc.gov |

Set Up the Wiring Closet

Be aware of the following recommendations for your wiring closet:

- Make sure that your system is easily accessible for installation and service. See [Rack Specifications and Recommendations](#) on page 52 for more information.
- Use appropriate AC or DC power, power distribution, and grounding for your specific installation.

- Use a vinyl floor covering in your wiring closet. (Concrete floors accumulate dust, and carpets can cause static electricity.)
- Prevent unauthorized access to wiring closets by providing door locks. Install the equipment in a secured, enclosed, and restricted access location, ensuring that only qualified service personnel have access to the equipment.
- Provide adequate overhead lighting for easy maintenance.
- Be sure that each wiring closet has a suitable ground. All equipment racks and equipment installed in the closet should be grounded.
- Be sure that all system environmental requirements are met, such as ambient temperature and humidity.

**Note**

Consult an electrical contractor for commercial building and wiring specifications.

Control the Temperature

Extreme Networks equipment generates a significant amount of heat. It is essential that you provide a temperature-controlled environment for both performance and safety.

Install the equipment only in a temperature- and humidity-controlled indoor area that is free of airborne materials that can conduct electricity. Too much humidity can cause a fire. Too little humidity can produce electrical shock and fire.

Observe these additional thermal recommendations for the location where you plan to install your equipment:

- Ensure that the ventilation in the wiring closet is adequate to maintain a temperature below the maximum operating temperature for the equipment..
- Install a reliable air conditioning and ventilation system.
- Keep the ventilation in the wiring closet running during non-business hours; otherwise, the equipment can overheat.
- Maintain a storage temperature between -40°C (-40°F) and 70°C (158°F).

[Table 11](#) summarizes the behavior of Extreme Networks switches when they experience high operating temperatures.

Safeguards are built into all Extreme Networks switches and power supply units to minimize the risk of fire.

Table 11: Thermal Shutdown and Restart Behavior

| Switch Model(s) | Behavior |
|-----------------|--|
| All models | <p>When internal system temperatures exceed the thermal shutdown temperature limit (typically about 20°C higher than normal system operating temperatures), the system's power supplies are turned off and the switch shuts down. The system remains in the OFF state until the system has sufficient time to cool and the internal thermal sensor measures a temperature lower than the maximum specified ambient temperature, at which time the system restarts automatically.</p> <p>Alternately, you can restart the system by removing and then restoring all line power to the system. The internal sensor must still measure a system temperature that is lower than the maximum specified ambient temperature, so recovery might not be immediate.</p> |

Control the Humidity Level

To maximize equipment life, keep operating humidity between 50% and 70% relative humidity (non-condensing) during typical operation.

The equipment can operate between 5% and 95% relative humidity (non-condensing) for short intervals.

Protect Your System from ESD (Electrostatic Discharge)

Your system must be protected from static electricity or ESD. Take the following measures to ensure optimum system performance:

- Remove materials that can cause electrostatic generation (such as synthetic resins) from the wiring closet.

Check the appropriateness of floor mats and flooring.

- Connect metal chassis, conduit, and other metals to ground using dedicated grounding lines.
- Use electrostatically safe equipment.

If you are working with pluggable interface modules, wear an ESD-preventive wrist strap and connect the metal end to a grounded equipment rack or other source of ground.

Rack Specifications and Recommendations

Racks should conform to conventional standards.

In the United States, use EIA Standard RS-310C: Racks, Panels, and Associated Equipment. In countries other than the United States, use IEC Standard 297. In addition,

verify that your rack meets the basic mechanical, space, and earthquake requirements that are described in this section.

Mechanical Recommendations for the Rack

Use equipment racks that meet the following mechanical recommendations:

- Use an open style, 19-inch rack to facilitate easy maintenance and to provide proper ventilation.
- Use a rack made of steel or aluminum.
- The rack should use the universal mounting rail hole pattern that is identified in IEC Standard 297.
- The rack should have designated earth grounding connections (typically on the base).
- The rack must meet earthquake safety requirements equal to that of the installed chassis.
- The mounting holes should be flush with the rails to accommodate the chassis.
- The rack should support approximately 270 kg (600 lb).

Ground the Rack

The rack must be properly grounded.

Use a rack grounding kit and a ground conductor that is carried back to earth or to another suitable building ground.

At a minimum, follow these guidelines to ground equipment racks to the earth ground:

- CAD weld appropriate wire terminals to building I-beams or earth ground rods.
- For a DC-powered switch, use a minimum 14 AWG stranded copper wire for grounding.

AC-powered switches do not need separate chassis grounding.

- Position the earth ground as close to the equipment rack as possible to maintain the shortest wiring distance possible.
- Use a ground impedance tester or micro-ohm meter to test the quality of earth ground connection at the chassis. This will ensure good grounding between the chassis, rack, and earth ground.



Note

Because building codes vary worldwide, consult an electrical contractor to ensure proper equipment grounding for your specific installation.

Provide Adequate Space for the Rack

Provide enough space in front of and behind the switch so that you can service it easily.

Allow a minimum of 48 inches (122 cm) in front of the rack and 30 inches (76 cm) behind the rack. When using a relay (two-post) rack, provide a minimum of 24 inches (61 cm) of space behind the mounted equipment. Extra room on each side is optional.

**Warning**

Extreme Networks switches do not have a switch for turning power to the unit on and off. For systems using an AC power supply, power to the switch is disconnected by removing the wall plug from the electrical outlet.

Be sure that cables and other equipment do not block the switch's air intake or outflow.

Depending on other conditions in the equipment room, it may be possible to install the switches closer to each other; consult your Extreme Networks Customer Support representative for guidance.

Secure the Rack

The rack should be attached to the wiring closet floor with 9.5 mm (3/8 in) lag screws or equivalent hardware. The floor under the rack should be level within 5 mm (3/16 in). Use a floor-leveling cement compound if necessary or bolt the racks to the floor as shown.

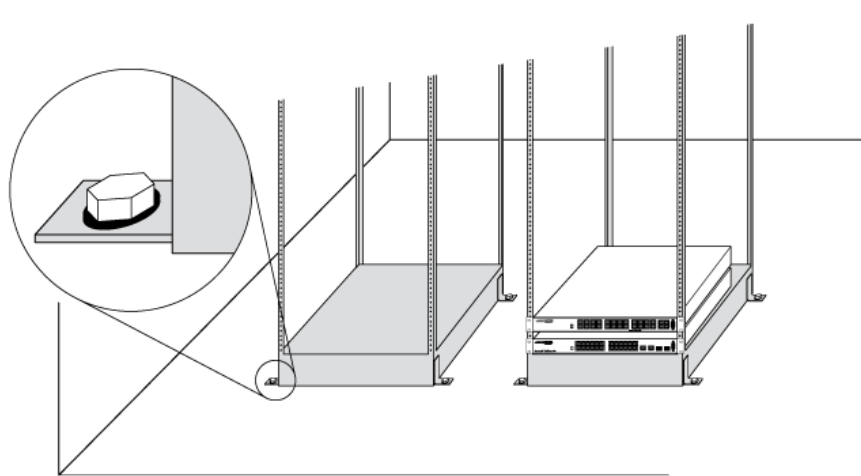


Figure 16: Properly Secured Rack

Brace open equipment racks if the channel thickness is less than 6.4 mm (1/4 in).

Evaluate and Meet Cable Requirements

Use professional consultants for site planning and cabling.

The Building Industry Consulting Service International (BICSI) Registered Communications Distribution Designer (RCDD), which is globally recognized as a standard in site planning and cabling, can be used.

For information, visit www.bicsi.org.

Label Cables and Keep Accurate Records

A reliable cable labeling system is essential when planning and installing a network.

Keeping accurate records helps you to:

- Relocate devices easily.
- Make changes quickly.
- Isolate faults in the distribution system.
- Locate the opposite end of any cable.
- Know the types of network devices that your cabling infrastructure can support.

Follow these guidelines when setting up a cable labeling system suitable for your installation:

- Identify cables by securely attaching labels to all cable ends.
- Assign a unique block of sequential numbers to the group of cables that run between each pair of wiring closets.
- Assign a unique identification number to each equipment rack.
- Identify all wiring closets by labeling the front panel of your Extreme Networks equipment and other hardware.
- Keep accurate and current cable identification records.
- Post records near each equipment rack. For each cable drop, include information about the cable source, destination, and jumper location.

Install Cable

When you connect cable to your network equipment, keep the following things in mind.

- Examine cable for cuts, bends, and nicks.
- Support cable using a cable manager that is mounted above connectors to avoid unnecessary weight on the cable bundles.
- Use cable managers to route cable bundles to the left and right of the network equipment to maximize accessibility to the connectors.
- Provide enough slack, approximately 5 to 7.5 cm (2 to 3 in), to provide proper strain relief as shown in [Figure 17](#) on page 56.
- Bundle cable using hook-and-loop straps to avoid injuring cables.
- If you build your own cable, be sure that connectors are properly crimped.
- When installing a patch panel using twisted pair wiring, untwist no more than 2.5 cm (1 in) of the cable to avoid radio frequency (RF) interference.
- Discharge the RJ45 Ethernet cable before plugging it into a port on the switch.



Caution

Unshielded twisted pair (UTP) cable can build up electrostatic charges when being pulled into a new installation. Before connecting any category 5 UTP cable to the switch, discharge ESD from the cable by plugging the RJ45 connector into a LAN static discharge device or use an equivalent method.

- Use plenum-rated cable when it is necessary for safety and fire rating requirements. Consult your local building codes to determine when it is appropriate to use plenum-rated cable, or refer to IEC standard 850.
- Keep all ports and connectors free of dust.

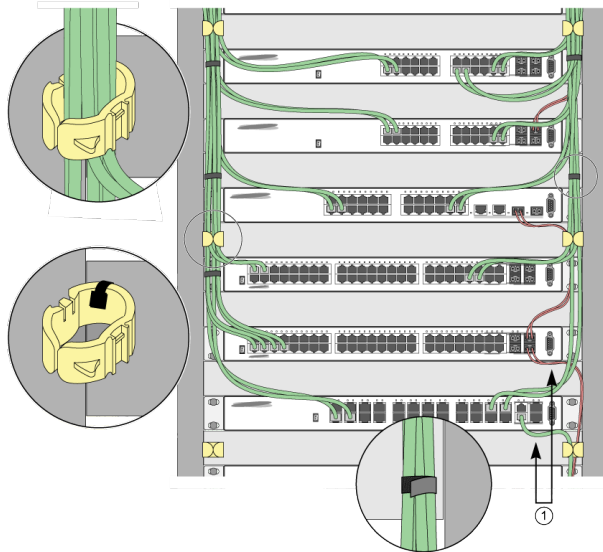


Figure 17: Properly Installed and Bundled Cable

1 = Ensure adequate slack and bend radius

Handle Fiber Optic Cable

Fiber optic cable must be handled carefully during installation.

Every cable has a minimum bend radius, and fibers will be damaged if the cables are bent too sharply. It is also important not to stretch the cable during installation. Ensure that the bend radius for fiber optic cables is equal to at least 5 cm (2 in) for each 90-degree turn as shown in [Figure 18](#).



Note

Kinks and sharp bends can destroy or impair the cable's ability to convey light pulses accurately from one end of the cable to the other. Use care in dressing the optical fiber cables: provide satisfactory strain relief to support the cable and maintain an adequate bend radius at all cable turns, particularly where the cable connects to the I/O module.

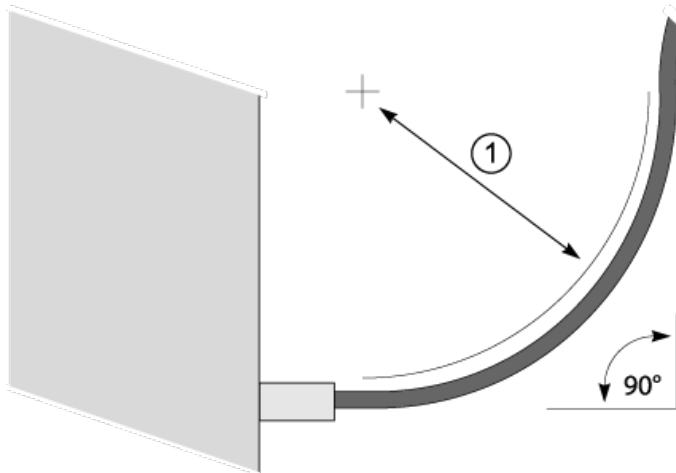


Figure 18: Bend Radius for Fiber Optic Cable

1 = Minimum 5 cm (2 in) radius in 90° bend

Cable Distances and Types

Refer to the [Extreme Optics](#) website for descriptions of optics and cables, as well as a complete list of supported cable lengths, and a list of the cable types that are compatible with your equipment.


Use RJ45 Connector Jackets

Use RJ45 cable with connector jackets that are flush with the connector or that have connectors with a no-snag feature.

Using cable with jackets that are wider than the connectors can cause:

- Connectors that are not properly aligned with the port.
- Crowded cable installation, which can cause connectors to pop out of the port.

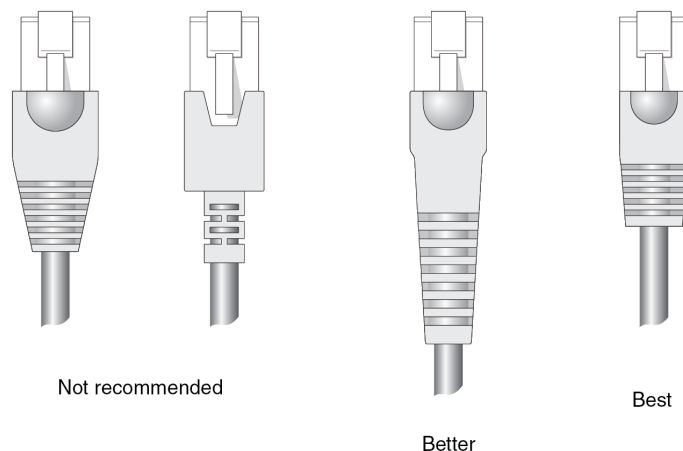[Figure 19](#) shows examples of recommended and non-recommended connector jacket types.



SPQ_001

Figure 19: RJ45 Connector Jacket Types

Prevent Radio Frequency Interference (RFI)

If you use UTP cabling in an installation, take precautions to avoid radio frequency (RF) interference.

RF interference can cause degradation of signal quality, and, in an Ethernet network environment, can cause excessive collisions, loss of link status, or other physical layer problems that can lead to poor performance or loss of communication.

To prevent RF interference, avoid the following situations:

- Attaching UTP cable to AC power cables
- Routing UTP cable near antennas, such as a ham radio antenna
- Routing UTP cable near equipment that could exhibit RF interference, such as ARC welding equipment
- Routing UTP cable near electrical motors that contain coils
- Routing UTP cable near air conditioner units
- Routing UTP cable near electrical transformers

In areas or applications where these situations cannot be avoided, use fiber optic cabling or shielded twisted pair cabling.

Meet Power Requirements

Observe the following requirements and precautions for powering your hardware.

Power Supply Requirements

Follow these recommendations when you plan power supply connections for your equipment:

- Place the equipment in an area that accommodates the power consumption and component heat dissipation specifications.
- Be sure that your power supply meets the site DC power or AC power requirements of the network equipment.
- When you connect power to installed equipment, do not make this connection through an extension cord or power strip.
- If your switch includes more than one power supply, connect each power supply to a different, independent power source.

If a power source fails, it will affect only the switch power supply to which it is connected. If all switch power supplies are connected to a single power source, the entire switch is vulnerable to a power source failure.

- In regions that are susceptible to electrical storms, the best practice is to plug your system into a surge suppressor.

For detailed power specifications for your equipment, see [Technical Specifications](#) on page 92.

Power Cord Requirements

Most Extreme Networks switches do not ship with power cords. Visit www.extremenetworks.com/product/powercords/ for information on selecting and purchasing the correct power cords for use with specific Extreme Networks equipment. The web page provides specifications for power cords in each country so that you can purchase cords locally.

UPS (Uninterruptible Power Supply) Requirements

A UPS (uninterruptible power supply) is a device that sits between a power supply (such as a wall outlet) and a device (such as a switch) to prevent outages, sags, surges, and bad harmonics from adversely affecting the performance of the device.

A UPS traditionally can perform the following functions:

- Absorb relatively small power surges.
- Smooth out noisy power sources.
- Continue to provide power to equipment during line sags.
- Provide power for a period of time after a blackout has occurred.

In addition, some UPS devices or UPS-plus-software combinations provide the following functions:

- Automatically shut down equipment during long power outages.
- Monitor and log power supply status.
- Display the voltage (current draw) of the equipment.
- Restart equipment after a long power outage.
- Display the voltage currently on the line.
- Provide alarms on certain error conditions.
- Provide short-circuit protection.

Select a UPS

To determine UPS requirements for your switch, answer these questions:

- What are the amperage requirements?
- What is the longest potential time period that the UPS would be required to supply backup power?
- Where will the UPS be installed?
- What is the maximum transition time that the installation will allow? (See [Provide a Suitable UPS Transition Time](#) on page 60.)

**Note**

Use a UPS that provides online protection.

Calculate Volt-Amperage Requirements

To determine the size of UPS that you need:

1. Locate the voltage and amperage requirements for each piece of equipment.

These numbers are usually found on a sticker on the back or bottom of your equipment.

2. Multiply the numbers together to get Volt-Amperes (VA):

$VA = \text{Volts} \times \text{Amperes}$

3. Add the VA from all the pieces of equipment together to find the total VA requirement.

To determine the minimum volt-ampere requirements for your UPS, add 30% to the total.

Provide a Suitable UPS Transition Time

UPS transition time is the time required for the UPS to change from providing AC power derived from the utility (or mains) supply to providing AC power derived from the battery backup. UPS transition time is sometimes called *UPS transfer time*.

UPS transition times vary between UPS models and implementations, but shorter transition times are preferred. For Extreme Networks stacking products, a UPS transition time of 20 milliseconds or less ensures optimum performance and minimizes service interruptions.

For high-availability and fault-tolerant installations in which the switches use redundant power supply units (PSUs), ensure that each PSU in a switch is connected to a different UPS and that each UPS is powered by an independent AC supply. This will prevent service interruptions when a power source is lost, or when a UPS unit fails. (Note that a single, appropriately sized UPS can power PSUs in multiple switches. The recommendation is simply that for any given switch, the two PSUs should be connected to different UPS units.)

Follow Applicable Industry Standards

Always follow applicable industry standards.

For more information, see the following ANSI/TIA/EIA standards:

- ANSI/TIA/EIA-568-A—the six subsystems of a structured cabling system
- ANSI/TIA/EIA-569-A—design considerations
- ANSI/TIA/EIA-606—cabling system administration
- ANSI/TIA/EIA-607—commercial building grounding and bonding requirements

You can access these standards at: [or](#) [.](#)



Install Your Switch

[Safety Considerations for Installation](#) on page 61
[What You Will Need for the Installation](#) on page 62
[Attach the Switch to a Rack or Cabinet](#) on page 62
[Install Optional Components](#) on page 68
[Install Internal Power Supplies](#) on page 69
[Turn on the Switch](#) on page 69
[Connect Network Interface Cables](#) on page 70

Before you attempt to install or remove an Extreme Networks switch, read the precautions in [Safety Considerations for Installation](#) on page 61.

Extreme Networks switches fit into standard 19-inch equipment racks.

The installation process includes the following tasks:

1. Prepare to install the switch. See [What You Will Need for the Installation](#) on page 62.
2. Install the switch in the rack. See .
3. Install optional components: optical transceivers and cables. See the instructions in [Install Optional Components](#) on page 68.
4. See [Install Internal Power Supplies](#) on page 69.
5. Connect network interface cables. See [Connect Network Interface Cables](#) on page 70.
6. Power up the switch. See [Turn on the Switch](#) on page 69.
7. Perform initial network connection and configuration. See [Activate and Verify the Switch](#) on page 72.

Safety Considerations for Installation

Read the information in this chapter thoroughly before you attempt to install or remove an Extreme Networks switch.

Ensure that proper ESD (electrostatic discharge) controls are in use before switch maintenance is performed. This includes but is not limited to wrist straps that are grounded to the switch housing and earth grounds.



Warning

Connect the chassis ground wire **before** you connect any power cables.
Disconnect the ground wire **after** you disconnect all power cables.

Take care to load the equipment rack so that it is not top-heavy. Start installing equipment at the bottom of the rack and work up.

Do not cover vents that would restrict airflow.

**Note**

See [Safety Information](#) for additional safety information. See [Regulatory Information](#) on page 109 for additional information regarding regulatory compliance certifications.

What You Will Need for the Installation

Ensure that you have followed the guidance in [Site Preparation](#) on page 48, and ensure that you have the appropriate people and tools on hand.

Installing Extreme Networks switches is easiest when there are two people to maneuver the switch and attach mounting hardware.

Provide enough space in front of and behind the switch so that you can service it easily. Ensure that a minimum of 122 cm (48 in) in front of the rack and 76 cm (30 in) behind the rack.

If your switch has internal power supplies, make sure they have the same airflow direction as the fans in the switch.

Check the *Quick Reference Guide* for your switch model to see what hardware is provided in the switch packaging.

You need the following additional tools and equipment. These are not provided with your switch:

- Screwdriver for securing the rack mounting screws.
- #2 Phillips magnetic screwdriver to attach bracket screws that are provided with the switch.
- ESD-preventive wrist strap for installing optional ports at the back of the switch.

Attach the Switch to a Rack or Cabinet

The Extreme 7520 switch can be attached to a standard 19-inch equipment rack, in either of the following ways:

- Four-post rack, using the mounting kit provided.
- Two-post rack, using mounting brackets (not provided) to attach the front or the middle of the switch to the posts.

To attach a switch to a two-post rack, a four-post rack, or a cabinet, follow these steps.

**Note**

Take care to load the rack so that it is not top-heavy. Start installing equipment at the bottom and work up.

Four-Post Rack Mount

A four-post rack-mounting kit (part number XN-4P-RKMT298) is included in the box with your switch. The kit contains an instruction sheet, along with the following components:

- Two mounting brackets, known as *inner member* in the instruction sheet. These pieces attach directly to both sides of the switch housing.
- Two slider assemblies, one for each side of the switch. Each slider assembly consists of an outer piece that is secured to the rack and a sliding rail to which you will attach the corresponding mounting bracket. These pieces are known on the instruction sheet as the *outer member* and *intermediate member*.
- Mounting ears - Black rack ears with a thumb screw in the middle (2 count)
- Black mounting ear screws (6 count)

To attach your switch to a four-post rack, follow these steps:

1. Separate the inner sliding rails from the outer rails by extending the rails and pulling on the disconnect latch. Note which direction the sliding rails slide from the outer rails for correct installation.

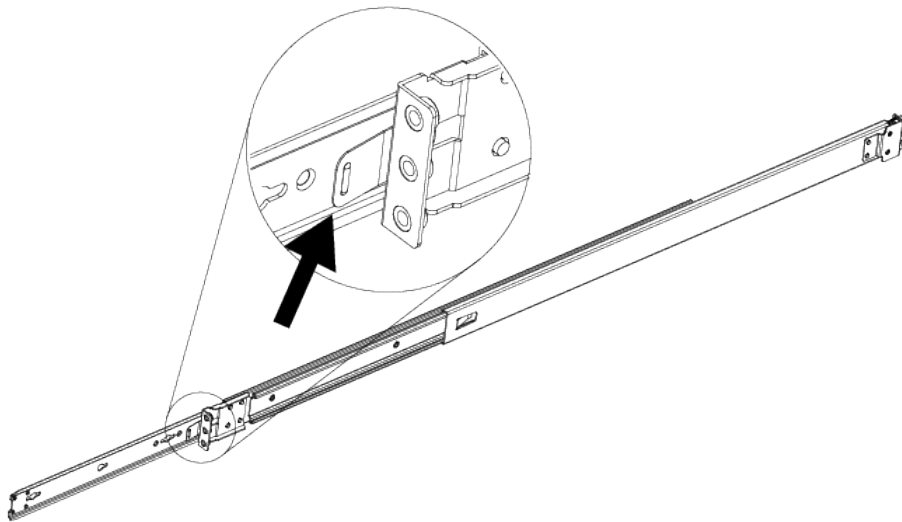


Figure 20: Separating the Inner Sliding Rails

2. Attach the outer rail (bracket) to the rack, securing it with the M5 screws.

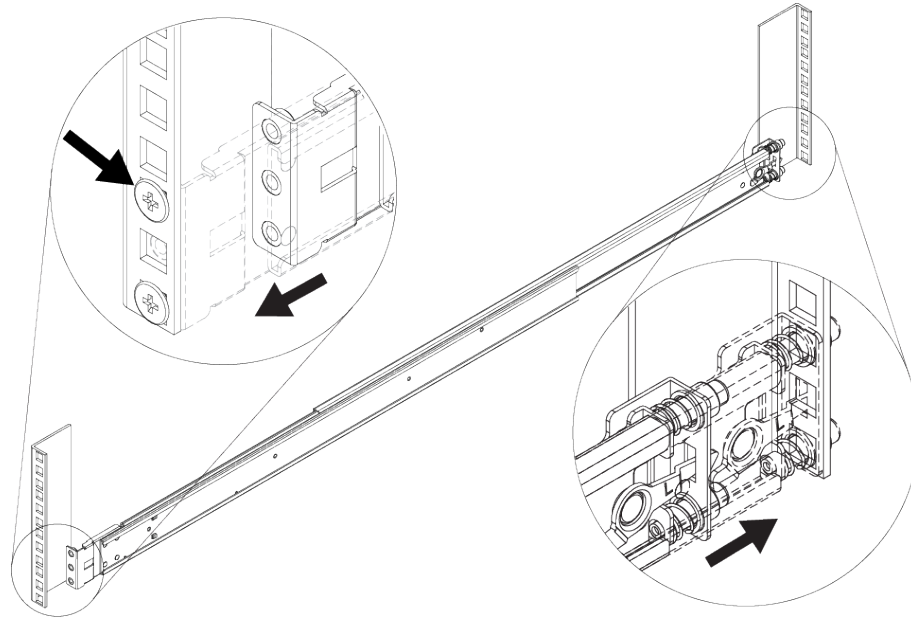


Figure 21: Attaching the Outer Rail

3. Attach an inner rail to the side of the device, using the M4 screws.
 - If you are using the 1U long rack ears (already attached to the inner rail): Ensure that the rack ear is flush with the either the front or the rear panel of the unit and continue to step 4 on page 65.

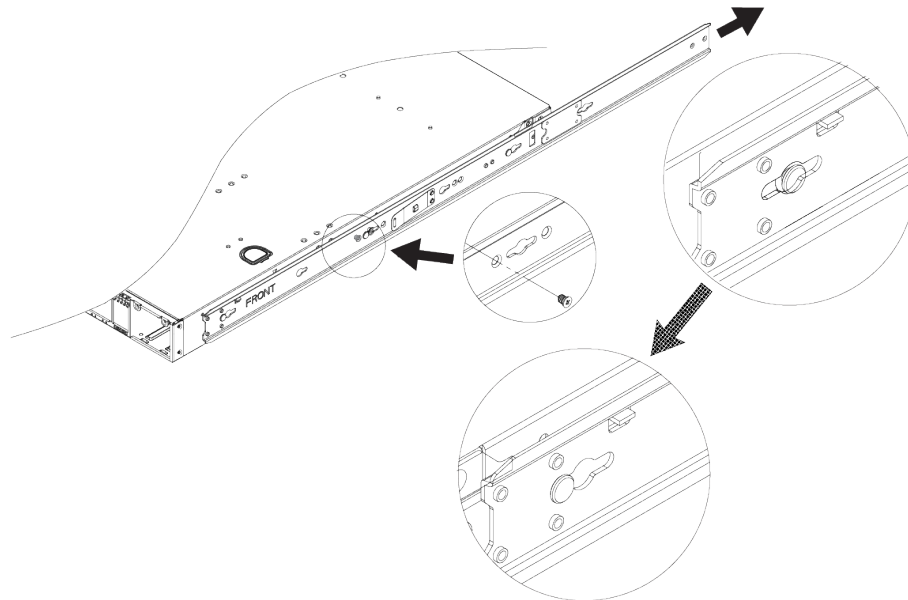


Figure 22: Front Installation: Attaching the Inner Rail

- If using the 1U or 2U short rack ears, attach one to the side of the device using the #6-32 screws, so that the rack ear is flush with either the front or the rear panel of the device.

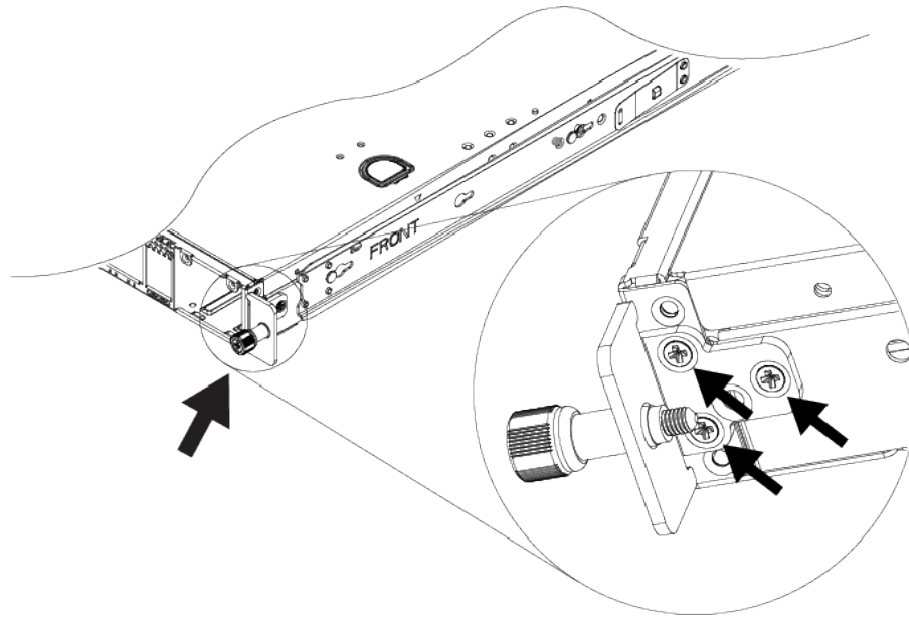


Figure 23: Front Installation: Attaching a Rack Ear

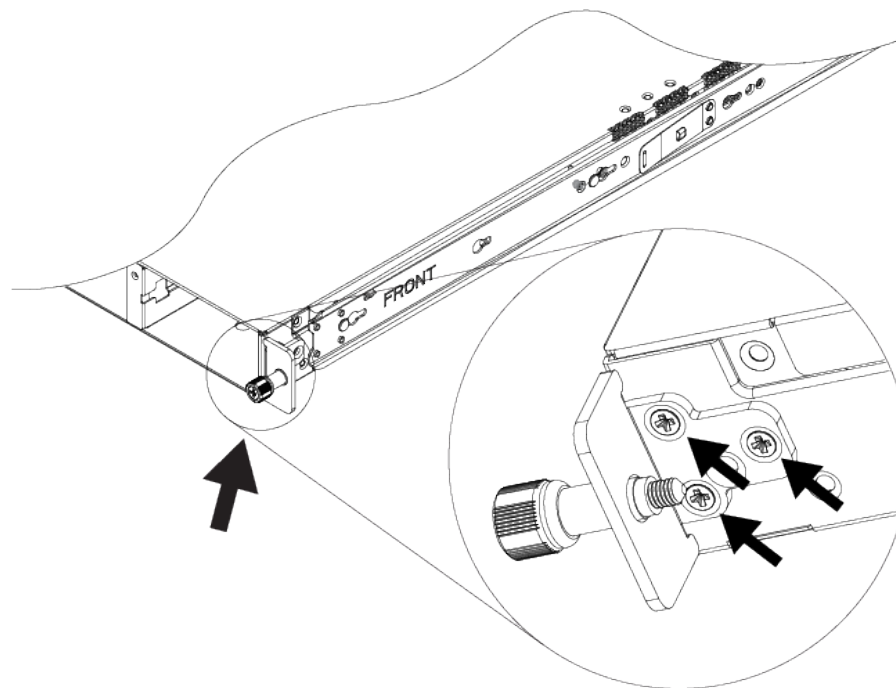


Figure 24: Rear Installation: Attaching a Rack Ear

4. Repeat steps 2 on page 63 and 3 for the other side of the device.
5. Insert the device into the rail kit. To install the device in the front of the rack, slide the device into the outer rails in the front of the rack.

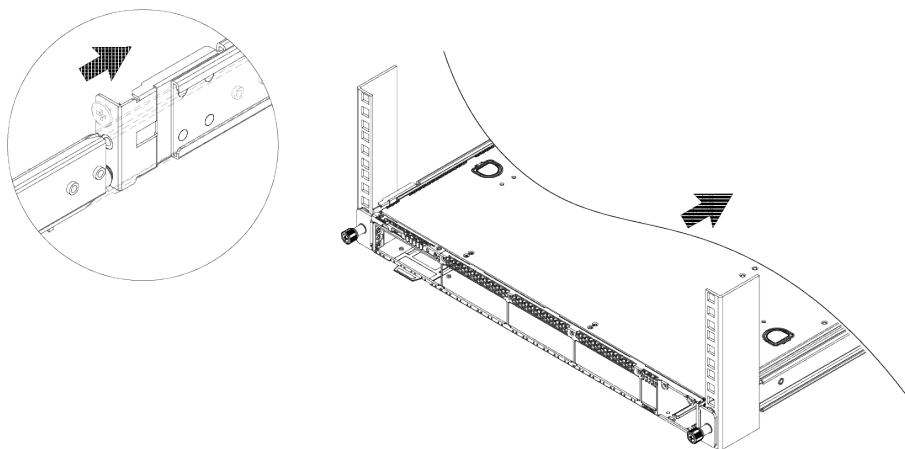


Figure 25: Front Installation: Inserting the Device

To install the device in the rear of the rack, slide the device into the outer rails in the rear of the rack.

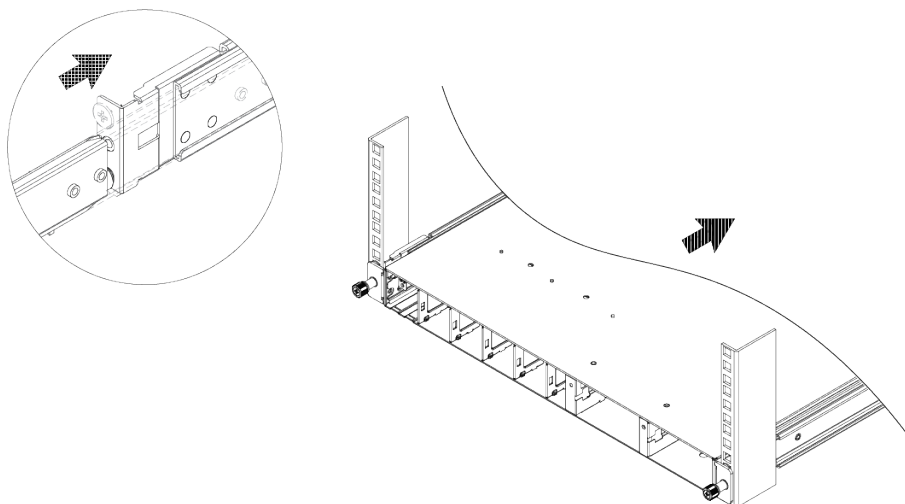


Figure 26: Rear Installation: Inserting the Device

Secure the device to the rack using the thumb screws on the mounting ears.

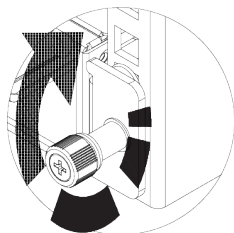


Figure 27: Secure the Device

Two-Post Rack Mount

You can attach the switch to a two-post rack in either of two configurations:

- Front mount
- Mid-mount

The side of the switch has different sets of holes for attaching mounting brackets in either configuration.

Brackets for a two-post mount are not included in the box with the switch. However, they can be ordered separately using part number XN-2P-RKMT299.

To attach the switch to a two-post rack, follow these steps:

1. On one side of the switch, attach one of the short mounting brackets to the device.
 - a. For a front mount, position the bracket over the holes so that the flange (ear) is even with the front of the device, as shown in the figure below:

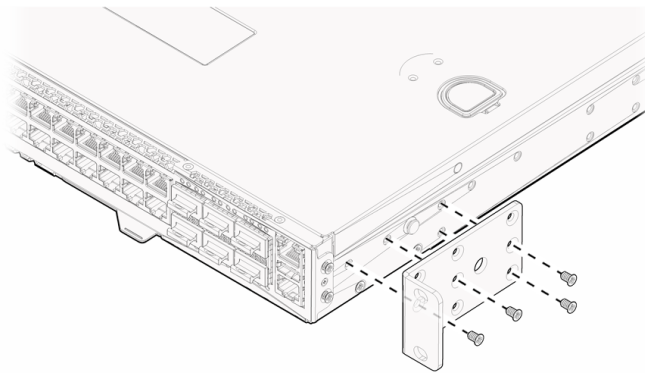


Figure 28: Attaching a Short Mounting Bracket (Ear): Front of Switch

- b. For a mid-mount, position the bracket so that the flange (ear) is positioned slightly more than halfway between the front and back of the device, as shown in figure below:

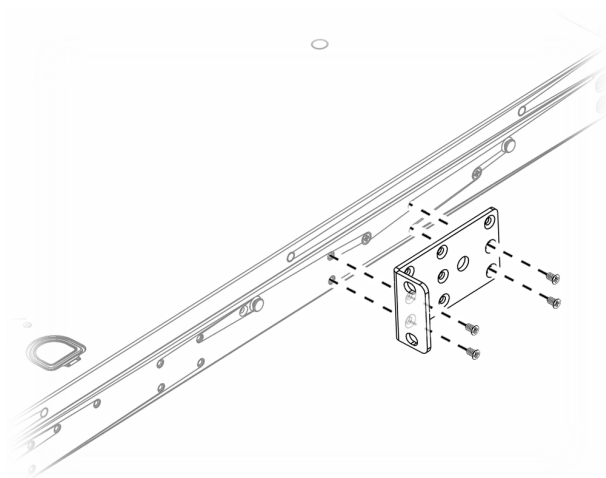


Figure 29: Attaching a Short Mounting Bracket (Ear): Middle of Switch

- c. Use four small mounting screws (provided) to attach the bracket to the device.
2. Attach the other short mounting bracket to the other side of the device, as you did in step 1.a on page 67.
3. Secure the brackets to the rack posts using rack-mounting screws that are appropriate for the rack (not provided).

If the switch comes with installed power supplies, skip to the topic: [Turn on the Switch](#) on page 69.

If the switch does not have an installed power supply, install one or two power supplies using the instructions in [Install Internal Power Supplies](#) on page 69.

Install Optional Components

After the switch is secured to the rack, install optional components.

Extreme Networks switches support the use of pluggable transceivers and cables in the SFP, SFP+, SFP28, QSFP+, and QSFP28 formats.

For a list of the optical components supported with Extreme Networks devices, see the [Extreme Optics](#) website.

Pluggable Transceiver Modules

Extreme Networks offers several optical transceiver modules for transmitting and receiving data over optical fiber rather than through electrical wires.

Optical Cables

Direct-attach copper and fiber cables provide connections between populated SFP, SFP+, SFP28, QSFP+, and QSFP28 ports.

Breakout cables

The copper breakout cables are terminated with optical connectors and are available in 1m, 3m, 5m, or greater lengths. No additional connectors or cabling are required when using the copper breakout. When using the fiber breakout cables, additional 10Gb optics are required.

For Extreme 7520 switches running either Fabric Engine or Switch Engine, interface 1/51 supports up to 4 10GbE, or up to 4 25GbE ports each in breakout mode when using the appropriate optics.

For 7520-48Y-8C and 7520-48YE-8CE switches running Switch Engine, interfaces 0/51 and 0/53 support up to 8 10GbE, 8 25GbE, 2 40GbE, or 2 100GbE ports in breakout mode when using the appropriate optics. For 7520-48XT-6C switches running Switch Engine, interfaces 0/51 and 0/52 support up to 8 10GbE, 8 25GbE, 2 40GbE, or 2 100GbE ports in breakout mode when using the appropriate optics.

See the [Extreme Optics](#) website to determine the appropriate optics.

Install Internal Power Supplies

If your device does not come with an installed internal power supply, you can install one or two power supplies. All installed power supplies must blow air in the same direction (front-to-back or back-to-front) and must match the airflow direction of the installed fan modules.

- If the power supply has a **red** tab, the airflow is front-to-back.
- If the power supply has a **blue** tab, the airflow is back-to-front.

The following 800 W AC or DC internal power supply units (PSUs) are available for the switch:

- Part numbers XN-ACPWR-800W-F and XN-DCPWR-800W-F provide front-to-back airflow for cooling and 800 W AC or DC power, respectively.
- Part numbers XN-DCPWR-800W-F and XN-DCPWR-800W-R provide back-to-front airflow for cooling, and 800 W AC or DC power respectively.

For installation instructions, see [Replace Internal Power Supplies](#) on page 79.

Turn on the Switch

Use the following instructions to turn on the switch

Connect AC Power

An AC power cord is not included with the AC power supply. You can purchase AC power cords for use in the US and Canada from Extreme Networks or from your local supplier. The cord must meet the requirements listed in [Power Cord Requirements for AC-Powered Switches and AC Power Supplies](#) on page 99.

To turn on the switch, connect one end of the power cord to the AC power input socket on the device and connect the other end to an AC power outlet.

**Note**

The switch does not have a power button, so connecting the power cable at both ends turns the switch on. The grounding connection in the power receptacle and in the power cord properly ground the power supply and extend that grounding to the switch.

If the PSU LEDs do not turn green, refer to [800 W AC Power Supply LEDs](#) on page 90 for troubleshooting information.

When the PSU LED has turned green, follow the instructions in [Activate and Verify the Switch](#) on page 72.

Connect DC Power

Use the instructions in [Connect a DC Power Supply to the Source Voltage](#) on page 84 to connect the device to a DC power source.

If the PSU LEDs do not turn green, refer to [800 W DC Power Supply LEDs](#) on page 91 for troubleshooting information.

When the PSU LED has turned green, follow the instructions in [Activate and Verify the Switch](#) on page 72.

Connect Network Interface Cables

Use the appropriate type of cable to connect the ports of your switch to another switch or router.

| Cable Type | Maximum Distance |
|------------|------------------|
| CAT5E | 55 meters |
| CAT6 | 55 meters |
| CAT6A | 100 meters |

Working carefully, one port at a time, do the following:

1. Verify that you have identified the correct cable for the port.
2. Use an alcohol wipe or other appropriate cleaning agent to clean the cable connectors; make sure they are free of dust, oil, and other contaminants.
3. If you are using optical fiber cable, align the transmit (Tx) and receive (Rx) connectors with the correct corresponding connectors on the switch or the I/O module.
4. Press the cable connectors into their mating connectors on the switch or I/O module until the cable connector is firmly seated.

5. Repeat the preceding steps for the remaining cables on this or other switches or I/O modules.
6. Dress and secure the cable bundle to provide appropriate strain relief and protection against bends and kinks.



Activate and Verify the Switch

- [Connect to a Management Console](#) on page 72
- [Log In for the First Time on Switch Engine](#) on page 72
- [Configure the Switch's IP Address for the Management VLAN](#) on page 74
- [Change the Switch OS via the Bootloader Menu](#) on page 74
- [Change the Switch OS via the Startup Menu](#) on page 75
- [Log In for the First Time on Fabric Engine](#) on page 75

After you have installed your Extreme Networks switch in the rack, installed all required and optional components, connected network cables, and powered the switch on, use the instructions in the following topics to configure the software on the switch and prepare it for use.

Connect to a Management Console

Connect each switch's serial console interface (an RJ45 jack) to a PC or terminal. The PC or terminal serves as the *management console*, used to monitor and configure the switch.

The default communication protocol settings for the serial console interface are:

- Baud rate: 115200
- Data bits: 8
- Stop bit: 1
- Parity: None

Log In for the First Time on Switch Engine

Onboard your switch with ExtremeCloud™. Log in or create your XIQ administrator account in order to select your switch operating system with XIQ at <https://extremecloudiq.com>

Switch Engine is the default operating system. If you want to run Fabric Engine, see [Change the Switch OS via the Bootloader Menu](#) on page 74 or [Change the Switch OS via the Startup Menu](#) on page 75.

Before logging in, verify that the switch LEDs are on (solid green or blinking green) and that it is connected to a management console as described in [Connect to a Management Console](#) on page 72.

To perform the initial login and complete initial configuration tasks, follow these steps.

1. Use a terminal emulator such as PuTTY or TeraTerm, connect to the switch using the serial port connection. You can also connect to the switch via telnet or SSH.

Be sure that your serial connection is set properly:

- Baud rate: Baud rate: 115200
 - Data bits: 8
 - Stop bit: 1
2. At the management console, press **[Enter]** one or more times until you see the login prompt.
 3. At the login prompt, log in using the default user name `admin`.

For example:

```
login: admin
```

**Note**

For the initial password, simply press **[Enter]**.

When you have successfully logged on to the system, the command line prompt displays the system name (for example, `7520-48Y-SwitchEngine#`) in its prompt. You are logged in with administrator privileges, which gives you access to all switch functions.

4. Respond to the screen prompts to configure the level of security you need.

**Note**

For more information about logging in to the switch and configuring switch management access, see the *Switch Engine User Guide* for your version of the Switch Engine operating system.

5. Enter `show version`.

The switch serial number is displayed, as highlighted in the following example. Make a note of this number for future reference.

```
7520-48Y-SwitchEngine.1 # show ver
Switch : 801131-00-01 AR032207Q-40019 Rev 01 BootROM: N/A IMG: 32.1.0.359
```

**Note**

Software upgrade is required.

Configure the switch's IP address for the management virtual LAN (VLAN) by following the steps in the [Configure the Switch's IP Address for the Management VLAN](#) on page 74.

Configure the Switch's IP Address for the Management VLAN

You can configure the switch's IP address for the management virtual LAN (VLAN).



Note

The management port is part of the mgmt VLAN. This VLAN membership cannot be changed.

Log in to the management console, connect to the switch, and follow these steps.

1. Assign a name, IP address, and default subnetwork mask for the VLAN as shown in the following example:

```
configure vlan vlan_name ipaddress nn.nn.nn.nn 255.255.255.0
```

Your changes take effect immediately.

2. Enter `save` to save your configuration changes so that they will be in effect after the next system reboot.



Note

For more information about saving configuration changes, see the *Switch Engine User Guide* for your version of the Switch Engine operating system.

The configuration is saved to the configuration database of the switch.

Change the Switch OS via the Bootloader Menu

Onboard your switch with ExtremeCloud™. Log in or create your XIQ administrator account in order to select your switch operating system with XIQ at <https://extremecloudiq.com>

Switch Engine is the default operating system for the Universal Hardware switch. If you take no action during the initial bootup, you can change the switch OS from the Bootloader menu on initial activation only by completing the following steps:

1. Using a terminal emulator such as PuTTY or TeraTerm, connect to the switch using the serial port connection.

Be sure that your serial connection is set properly:
 - Baud rate: Baud rate: 115200
 - Data bits: 8
 - Stop bit: 1
2. Once the switch is powered on, after seeing the "Boot Menu" screen, press the **[spacebar]** key within 30 seconds.
3. Use the **down-arrow** key to select Change the switch OS to Fabric Engine, then select **Enter**.

The switch installs Fabric Engine , then resets. Once the NOS is selected, the "Boot Menu" only waits for 3 seconds before continuing.

To change the switch OS if you take no action during the initial boot, see [Change the Switch OS via the Startup Menu](#) on page 75.

Change the Switch OS via the Startup Menu

Onboard your switch with ExtremeCloud™. Log in or create your XIQ administrator account in order to select your switch operating system with XIQ at <https://extremecloudiq.com>

Switch Engine is the default operating system for the Universal Hardware switch. If you take no action during the initial bootup, you can change the switch OS from the Startup menu on initial activation only by completing the following steps:

1. Connect to the switch via telnet, SSH, or console with a baud rate of 115200.
2. At the login prompt, log in using the default user name `admin`.

For example:

```
login: admin
```



Note

For the initial password, simply press **[Enter]**.

3. The switch prompts you to choose which switch personality you want to use:

```
This switch can alternatively run the Fabric Engine Network Operating System.
If you answer yes, all data including configurations, logs and debugs will be
cleared, except for the license activation status, Fabric Engine
will be installed, and Switch Engine will be removed.
Would you like to change the switch OS to Fabric Engine? [y/N/q]:
```

The switch installs Fabric Engine, then resets.

After resetting, your switch boots with Fabric Engine. See [Log In for the First Time on Fabric Engine](#) on page 75.

Log In for the First Time on Fabric Engine

Onboard your switch with ExtremeCloud™. Log in or create your XIQ administrator account in order to select your switch operating system with XIQ at <https://extremecloudiq.com>

Before logging in, verify that the switch LEDs are on (solid green or blinking green) and that it is connected to a management console as described in [Connect to a Management Console](#) on page 72.

To perform the initial login and complete initial configuration tasks, follow these steps.

1. Using a terminal emulator such as PuTTY or TeraTerm, connect to the switch using the serial port connection.

Be sure that your serial connection is set properly:

- Baud rate: 115200
- Data bits: 8

- Stop bit: 1
2. Press **[Enter]** one or more times until you see the login prompt.
 3. At the login prompt, log in using the default user name `rwa`.

For example:

```
login: rwa
```

When prompted for the password, enter `rwa`.

When you are logged in with the role-based authentication level of `rwa`, you can configure the login and password values for the other role-based authentication levels.



Remove and Replace Components

[Remove the Device from the Rack](#) on page 77

[Replace Internal Power Supplies](#) on page 79

[Replace Fan Modules](#) on page 85

Use the information in the following topics to remove or replace components.

Remove the Device from the Rack

These procedures assume that you have attached the device to the rack as described in one of the following topics:

- [Four-Post Rack Mount](#) on page 63
- [Two-Post Rack Mount](#) on page 67

Remove a Device from a Four-Post Rack

Use the following instructions to remove a device from a four-post rack.

1. Disconnect the device from its power source or sources.
2. Remove all cables and transceivers.
3. To remove a device from a four-post rack, do the following:
 - a. Unsecure the device from the rack by unscrewing the thumb screws on the mounting ears.
 - b. Fully extend the device on the rails and push the disconnect latch to release the device.

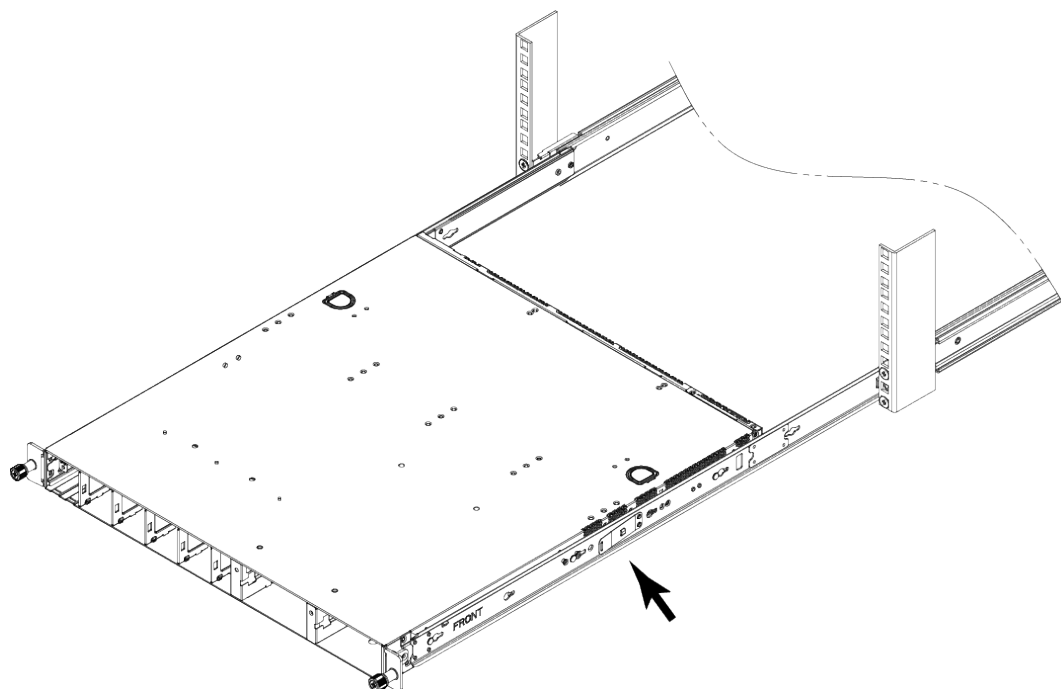


Figure 30: Disconnect latch for removal

- c. Carefully slide the device out of the slider assembly and place it on a flat surface.
You can leave the slider assemblies in place. If you want to remove them, continue with the next step.
- d. On one of the slider assemblies, remove the outer rail (bracket) from the rack by removing the M5 screws.

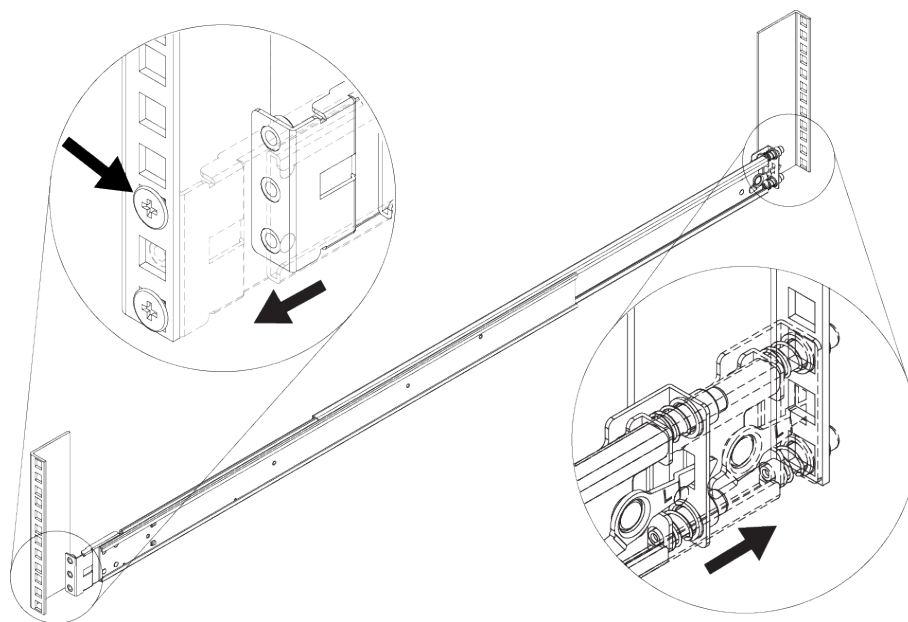


Figure 31: Removing the Outer Rail

- e. Repeat step 3.d to remove the second slider assembly.

If you plan to use the device again later, store it with the mounting brackets attached.

Remove a Device from a Two-Post Rack

Use the following instructions to remove a device from a two-post rack.

1. Disconnect the device from its power source or sources, then disconnect the ground, if there is a ground.
2. Remove all cables and transceivers.
3. Unscrew the mounting brackets from the rack while carefully supporting the weight of the device.
4. Tilt the device so that the brackets are clear of the rack posts, and carefully lift it out of the rack.

If the device cannot be tilted (because other equipment is mounted directly above and below), remove one or two mounting brackets from the device and then slide the device out.

If you plan to use the device again later, store it with the mounting brackets attached.

Replace Internal Power Supplies

For switches with replaceable power supplies, refer to the following information to replace the power supplies. The switches have two power supply slots. In a switch with a redundant power configuration, you can replace one power supply without powering down the switch ("hot swapping"). Installed power supplies can be AC, DC, or a combination of AC and DC.

Images in this topic might show switches that are not identical to the ones you are using. However, the procedure for replacing an internal power supply is the same for all Extreme Networks switches.

**Note**

Read all of the information in this chapter thoroughly before attempting to replace a power supply.

To replace one or both AC internal power supplies in the switch, follow the steps in [Replace an 800 W Internal AC Power Supply](#) on page 80.

To replace one or both DC internal power supplies in the switch, follow the steps in [Replace an 800 W Internal DC Power Supply](#) on page 82.

Airflow Direction Requirements

All installed power supplies must blow air in the same direction (front-to-back or back-to-front) and must match the airflow direction of the installed fan modules.

- If the power supply has a **red** tab, the airflow is front-to-back.
- If the power supply has a **blue** tab, the airflow is back-to-front.

**Note**

The operating-system software cannot display the airflow direction.

Replace an 800 W Internal AC Power Supply

**Warning**

Be sure to disconnect all power cables before you disconnect the chassis ground wire.

**Warning**

Make sure that the AC power supply circuit is not overloaded. Use proper overcurrent protection, such as a circuit breaker, to prevent overcurrent conditions.

1. Disconnect the AC power cord from the wall outlet and from the power supply.
2. If necessary, remove a blank panel from the back of the switch.
3. Note the orientation of the installed power supply, and the location of the latching tab at the right of the unit.
4. Verify that the new power supply's airflow direction (front-to-back or back-to-front) is compatible with the other installed power supply (if any) and with the installed fan modules.
5. Push the latching tab toward the power supply handle and pull outward on the handle to disengage the power supply internal connectors. See [Figure 32](#).

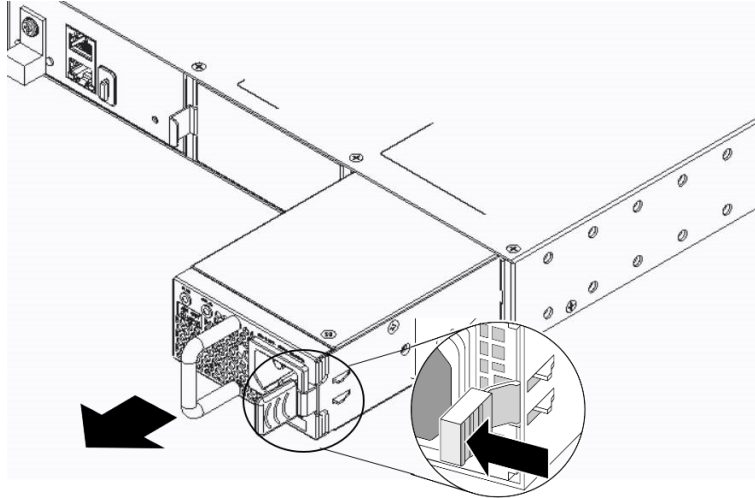


Figure 32: Removing a 800 W AC Power Supply

6. Carefully slide the power supply all the way into the power supply bay (see [Figure 33](#)).

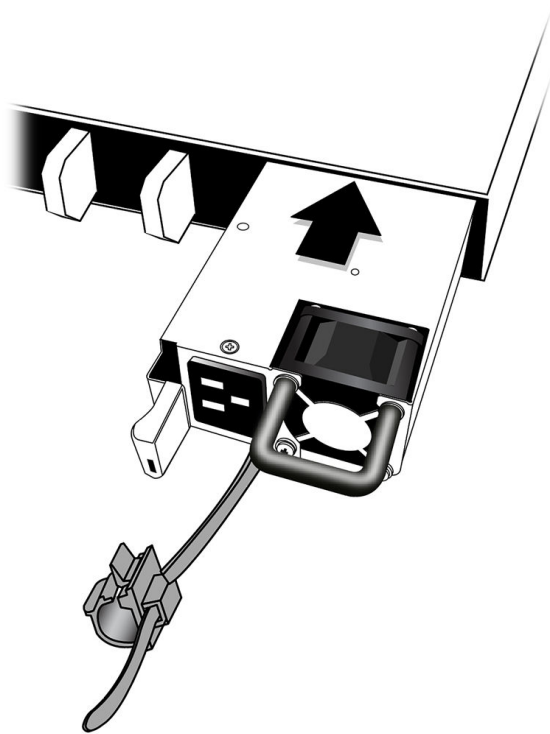


Figure 33: Installing an 800 W AC Power Supply

7. Push the power supply in until the latch snaps into place.

Do not slam the power supply into the switch.

**Note**

If power supplies are not installed in both power supply bays, be sure to install a cover over the unoccupied bay. Unoccupied bays must always be covered to maintain proper system ventilation and EMI levels.

8. Connect the power cord to the power supply and to a grounded AC power outlet.

**Warning**

Always make sure that the source outlet is properly grounded before plugging the AC power cord into the AC power supply.

9. If the power supply is equipped with a power cord retainer, use the retainer to secure the power cord to the power supply.

Replace an 800 W Internal DC Power Supply

**Warning**

Be sure to disconnect all power cables before you disconnect the chassis ground wire.

**Caution**

Make sure that the DC power supply circuit is not overloaded. Use proper overcurrent protection, such as a circuit breaker, to prevent overcurrent conditions. You can use up to a 30-Amp breaker.

To replace an 800 W DC power supply, follow these steps:

1. Attach an ESD-preventive wrist strap to your bare wrist and connect the metal end to an appropriate ground point on the rack.
2. Note the orientation of the installed power supply, and the location of the latching tab at the right of the unit.
3. Push the latching tab toward the power supply handle and pull outward on the handle to disengage the power supply internal connectors, as shown in [Figure 34](#).

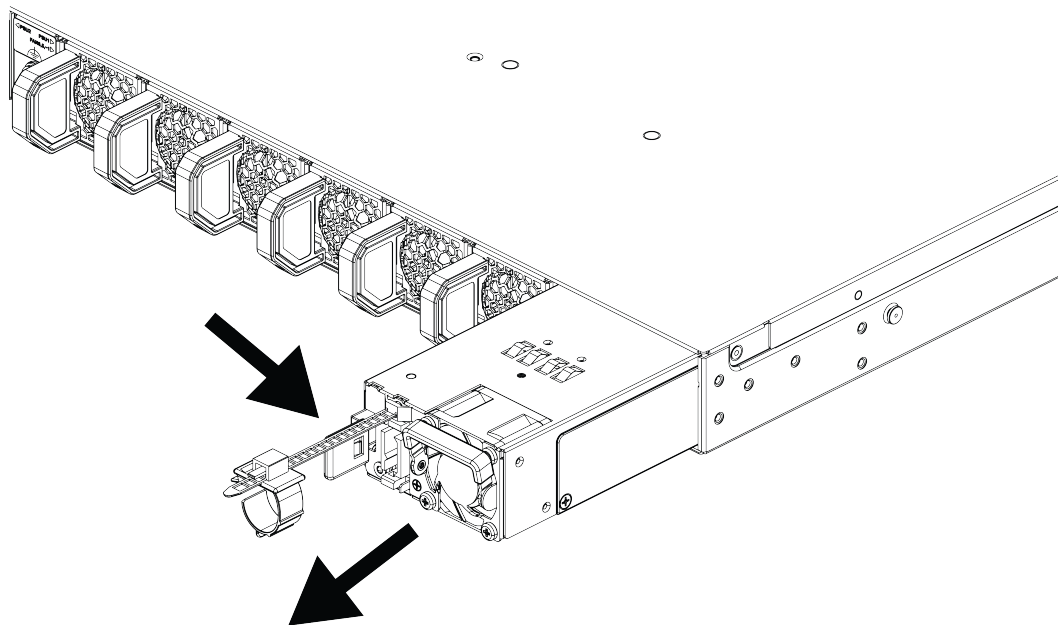


Figure 34: Remove an 800 W DC Power Supply

4. Carefully slide the power supply the rest of the way out of the switch, as shown in [Figure 34](#).



Caution

Power supplies can become very hot during operation. Wear thermal protective gloves when you remove a power supply from an operating switch.



Note

If you are not installing a replacement power supply, install a cover over the unoccupied power supply bay. Unoccupied bays must always be covered to maintain proper system ventilation and EMI levels.

5. Verify that the replacement power supply is oriented the same way as the unit you removed, and has the same airflow direction.
6. Carefully slide the power supply all the way into the power supply bay until the latch snaps into place, as shown in [Figure 35](#).



Caution

Do not slam the power supply into the switch.

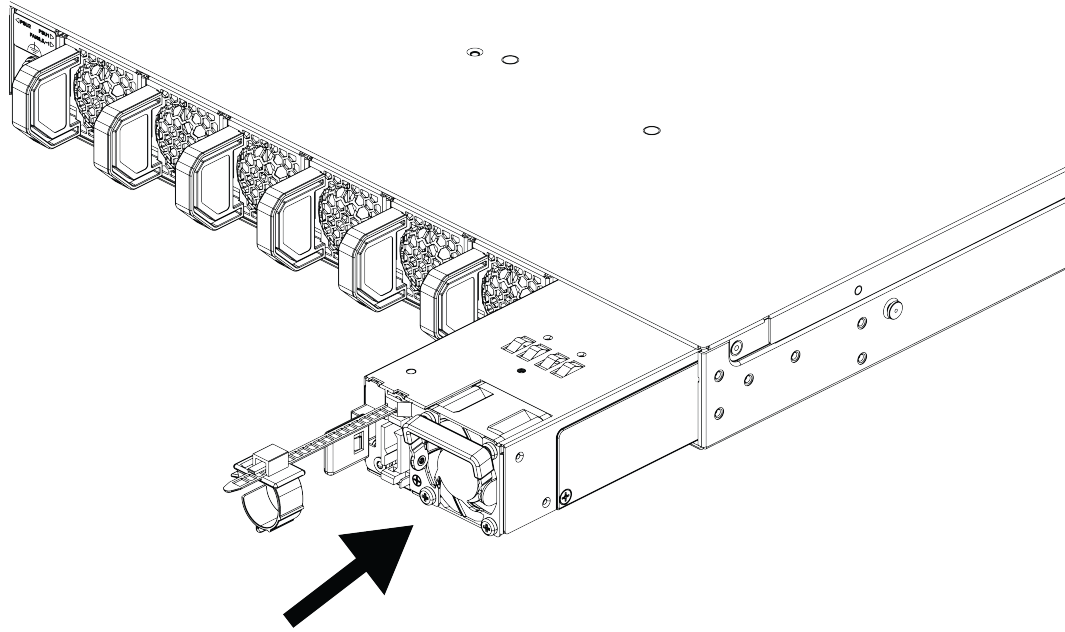


Figure 35: Replace an 800 W DC Power Supply

7. To install a second power supply, repeat the procedure.

When you are finished, use the provided 2 meter DC power input cable for the DC power supply to ground the power supply and connect the power supply to the power source.



Warning

Connect the chassis ground wire before you connect any power cables.

Connect a DC Power Supply to the Source Voltage

The DC power connection at your facility must be made by a qualified electrician, following these instructions.



Warning

Always make sure that the DC circuit is de-energized before connecting or disconnecting the DC power cables on the DC power supply

1. Verify that the DC circuit is de-energized.
2. Attach an ESD-preventive wrist strap to your bare wrist and connect the metal end to an appropriate ground point on the rack.
3. Position the DC power cable connector so that the wide, flat side is closest to the fan, as shown in [Figure 36](#). The DC power cable connector can only connect to the power supply one way.

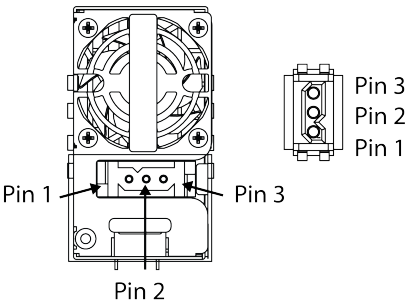


Figure 36: Connecting the DC Power Cord

4. The installation electrician connects the other end of the power cord to the building power system.



Warning

Before installing, be sure to connect the chassis ground wire before you connect any power cables.

- a. Connect the ring terminal of the yellow and green ground wire to a known reliable earth ground point at your site.

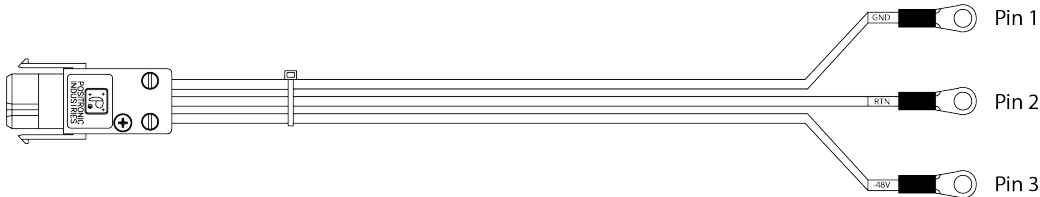


Figure 37: DC Power Cable

Use the following for the building wire harness:

| Cable Connector | Wire Color | | Ring Terminal |
|-----------------|--------------|------|---------------|
| Pin 1 | Black | -48V | Pin 3 |
| Pin 2 | Red | RTN | Pin 2 |
| Pin 3 | Yellow/Green | GRD | Pin 1 |

- b. Connect the ring terminal of the red RTN power cable to the positive terminal of the DC power source, and connect the ring terminal of the black -48V power cable to the negative terminal of the DC power source.
5. Repeat these steps for each power supply.

Leave the ESD strap permanently connected to the rack, so that the strap is always available when you need to handle ESD-sensitive components.

Replace Fan Modules

For switches with replaceable fan modules, refer to the following information to replace the fan modules.

Do not operate a chassis for more than a few minutes with a missing cooling module. To ensure internal chassis air pressure is maintained and to avoid loss of traffic due to modules overheating and shutting down, leave a failed cooling module installed until you have a replacement.

Images in this topic might show switches that are not identical to the ones you are using. However, the procedure for replacing a fan module is the same for all Extreme Networks switches.

**Note**

Read all of the information in this chapter thoroughly before attempting to replace a fan module.

Airflow Direction Requirements

You can replace fan modules as needed while the switch is operating ("hot swapping"). All installed fan modules must blow air in the same direction and must match the airflow direction of the installed power supplies.

- If the fan module has a **red** tab, the airflow is front-to-back.
- If the fan module has a **blue** tab, the airflow is back-to-front.

**Note**

The operating-system software cannot display the airflow direction.

Before you begin, have the replacement fan module on hand so that you can complete the replacement promptly. The switch can overheat if left without adequate cooling for an extended time.

Replace a Fan Module

Use the following instructions to replace a fan module in the switch

1. Gently pull the tab (labeled **Air Out** or **Air In**) on the end of the fan module.

The fan module is held in place by spring clips. As you pull, the clips will disengage and the fan will stop.

2. Slide the fan module out of the switch and set it aside.
3. Verify that the airflow direction on the replacement fan module matches that of the installed fan modules.

Fans with front-to-back airflow have red tabs and are labeled **Air Out**.

Fans with back-to-front airflow have blue tabs and are labeled **Air In**.

4. Carefully slide the replacement fan module into the switch.

Push until the fan module snaps into place. The fan will automatically start to operate.



Monitor the Switch

[System Status LEDs](#) on page 87

[RJ-45 Management Port LEDs](#) on page 88

[SFP+/SFP28 Port LEDs for 7520-48Y-8C and 7520-48YE-8CE](#) on page 89

[1G/10G RJ45 Port LEDs for the 7520-48XT-6C](#) on page 89

[QSFP28 Port LEDs](#) on page 90

[800 W AC Power Supply LEDs](#) on page 90

[800 W DC Power Supply LEDs](#) on page 91

The following topics help you monitor the status of the switch as it is running.

System Status LEDs

System status LEDs are located on the front of the switch. The following table describes the colors and the states for the LEDs.

Table 12: System Status LEDs

| LED | Color/State | Description |
|------------|----------------|---|
| Power | Off | No power; some power rails are dropping below specification |
| | Solid Green | Valid power. All monitored voltages are nominal. |
| System | Off | Boot failed. |
| | Solid green | Operational. |
| | Blinking amber | Bootng. |
| | Solid amber | Fault. |
| Fan Status | Off | No power. |
| | Solid green | Fan is operational. |
| | Solid amber | Fan failure. |

Table 12: System Status LEDs (continued)

| LED | Color/State | Description |
|------------|-----------------------------------|--|
| PSU Status | Off | No power. |
| | Solid green | Power on. Main and Standby output enabled with no PSU warning or fault detected. |
| | Blinking amber | Warning. Power supply warning detected. |
| | Solid amber | Fault. Power supply fault. |
| Secure | Off | CeC1712 is booting up or fault. CeC1712 is performing the initial load (decrypt, validate, load) of its own code, prior to authenticating images. Or the CeC1712 was unable to decrypt, validate and load its own image. |
| | Slow blinking blue (1 Hz) | CeC1712 is authenticating or updating images. CeC1712 is currently authenticating or copying golden image to primary. |
| | Fast blinking blue (4 Hz) | CeC1712 authentication failed. Neither primary nor golden image successfully validated. |
| | Very slow blinking blue (0.25 Hz) | Bypass authentication. Bypassing authentication for test or development only. |
| | Solid blue | CeC1712 authentication complete. CeC1712 successfully authenticated the BIOS Flash-0 and BMC Flash-0 images. |

RJ-45 Management Port LEDs

The 10/100/1000Base-T RJ-45 Management port includes two LEDs that are both amber and green. The LEDs are located on each side of the RJ-45 port. The LED on the right side is labeled Speed and the LED on the left side is labeled Link/Activity. The following table describes the meaning of the colors and states for the LEDs.

Table 13: 10/100/1000Base-T RJ-45 Management Port LEDs

| LED | Color/State | Description |
|-------|-------------|-------------------------------------|
| Speed | Off | The port is operating at 10 Mbps. |
| | Solid green | The port is operating at 100 Mbps. |
| | Solid amber | The port is operating at 1000 Mbps. |

Table 13: 10/100/1000Base-T RJ-45 Management Port LEDs (continued)

| LED | Color/State | Description |
|---------------|----------------|---|
| Link/Activity | Solid green | The port has established a link. There is no data activity. |
| | Blinking green | The port has established a link and there is data activity. |
| | Off | The port has not established a link. |

SFP+/SFP28 Port LEDs for 7520-48Y-8C and 7520-48YE-8CE

Each port has one LED to indicate link or activity. The following table describes the states for the LED.

Table 14: SFP+/SFP28 Port LEDs for 7520-48Y-8C and 7520-48YE-8CE

| LED | State | Description |
|---------------|---------------------|---|
| Link/Activity | Solid green | The port has link established. There is no data activity. |
| | Blinking green | The port has link established and there is data activity. |
| | Slow blinking green | The port is disabled by the admin. |
| | Off | No link or fault. |

1G/10G RJ45 Port LEDs for the 7520-48XT-6C

Each port has one LED to indicate link or activity. The following table describes the states for the LED.

Table 15: 1G/10G RJ45 Port LEDs for the 7520-48XT-6C

| LED | State | Description |
|---------------|---------------------|---|
| Link/Activity | Solid green | The port has link established. There is no data activity. |
| | Blinking green | The port has link established and there is data activity. |
| | Slow blinking green | The port is disabled by the admin. |
| | Off | No link or fault. |

QSFP28 Port LEDs

Each QSFP28 port has four green LEDs. The following table describes the states for the LEDs.

| Port Configuration | LEDs | State | Description |
|---|---|---|---|
| 100 Gb or 40 Gb | 1st LED | Off | No link. |
| | | On | Link is active, but there is no activity. |
| | | Blinking | Link is active and there is activity. |
| | | All LEDs blinking (on 1 second, off 1 second) | Switch is beaconing. |
| On | Link is active, but there is no activity. | | |
| Blinking | Link is active and there is activity. | | |
| All LEDs blinking (on 1 second, off 1 second) | Switch is beaconing. | | |
| 25 Gb or 10 Gb | All LEDs | Off | No link. |
| | | On | Link is active, but there is no activity. |
| | | Blinking | Link is active and there is activity. |
| | | All LEDs blinking (on 1 second, off 1 second) | Switch is beaconing. |

800 W AC Power Supply LEDs

The following table describes the meanings of the LEDs on the 800 W AC power supplies (part number XN-ACPWR-800W-F or XN-ACPWR-800W-R).

The LEDs are located on the end of the power supply unit, arranged vertically to the left of the power cord receptacle.

Table 16: 800 W AC Power Supply LED Status Indications

| Label and Color | Description | State | Meaning |
|-----------------|-----------------|------------|--------------|
| ! Amber | Fault Indicator | On (solid) | PSU fault |
| | | Off | No PSU fault |

Table 16: 800 W AC Power Supply LED Status Indications (continued)

| Label and Color | Description | State | Meaning |
|-----------------|---------------|-------|---------------|
| AC (Green) | AC input Good | On | AC input OK |
| | | Off | AC input fail |


800 W DC Power Supply LEDs

The following table describes the meanings of the LEDs on the 800 W DC power supplies (part number XN-DCPWR-800W-F or XN-DCPWR-800W-R).

The LEDs are located on the end of the power supply unit, arranged vertically to the left of the power cord receptacle.

Table 17: 800 W DC Power Supply LED Status Indications
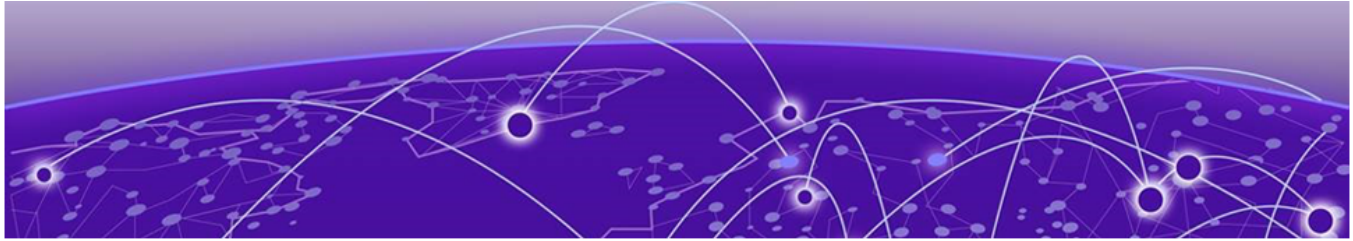
| Label and Color | Description | State | Meaning |
|-----------------|-----------------------|-----------------|----------------|
| ! Amber | Fault Indicator | On (solid) | PSU fault |
| | | Off | No PSU fault |
| OUT OK (Green) | DC output Good | On (solid) | DC output OK |
| | | Off or blinking | DC output fail |
| IN OK (Green) | DC input Good "IN OK" | On | DC input OK |
| | | Off | DC input fail |



Technical Specifications

- [7520 Series Technical Specifications](#) on page 92
- [Acoustic Noise and Fan Speed](#) on page 94
- [Mean Time Between Failures](#) on page 95
- [Power Specifications](#) on page 96
- [Environmental](#) on page 96
- [Standards](#) on page 97
- [EMI/EMC Standards](#) on page 98
- [Power Cord Requirements for AC-Powered Switches and AC Power Supplies](#) on page 99
- [Console Connector Pinouts](#) on page 99

The following topics contain technical specifications for the hardware products described in this document.

7520 Series Technical Specifications

External Interfaces

| Model | 7520-48Y-8C 7520-48YE-8CE | 7520-48XT-6C |
|----------------|--|--|
| Ports | <ul style="list-style-type: none">• 48 x 1/10/25GbE SFP28 ports (48Y/8C)• 48 x 10/25GbE SFP28 ports (48YE-8CE)• 8 x 40/100GbE QSFP28 ports• 1 x Serial console port RJ-45• 1 x 10/100/1000BASE-T out-of-band management port• USB Type A storage port | <ul style="list-style-type: none">• 48 x 1/10GbE 10GBaseT ports• 6 x 40/100GbE QSFP28 ports• 1 x Serial console port RJ-45• 1 x 10/100/1000BASE-T out-of-band management port• USB Type A storage port |
| Power Supplies | <ul style="list-style-type: none">• Modular 800W AC power supply (up to two PSUs)• Modular 800W DC power supply (up to two PSUs)• Front to Back and Back to Front airflow option | <ul style="list-style-type: none">• Modular 800W AC power supply (up to two PSUs)• Modular 800W DC power supply (up to two PSUs)• Front to Back and Back to Front airflow options |

| Model | 7520-48Y-8C 7520-48YE-8CE | 7520-48XT-6C |
|------------------------------------|---|---|
| Fan Modules | <ul style="list-style-type: none"> 6 fan modules Front-Back and Back-Front airflow options | <ul style="list-style-type: none"> 6 fan modules Front-Back and Back-Front airflow options |
| Dimensions | <ul style="list-style-type: none"> 17.3in W/21.24in D/1.7in H (44.0cm/53.95cm/4.3cm) (48Y-8C) 17.31in W/21.69in D/1.71in H (44.0cm/53.95cm/4.3cm) (48YE-8CE) | <ul style="list-style-type: none"> 17.3in W/20.9in D/1.7in H (44.0cm/53.2cm/4.3cm) |
| Weight | <ul style="list-style-type: none"> 16.71 lb (7.58 kg) empty chassis (48Y-8C) 22.29 lb (10.11 kg) with two AC PSUs (-F and -R models) (48Y-8C) 20.35 lb (9.23 kg) empty chassis (48YE-8CE) 26.23 lb (11.90 kg) with two AC PSUs (-F and -R models) (48YE-8CE) | <ul style="list-style-type: none"> 16.34 lb (7.41 kg) no PSU 20.88 lb (9.47 kg) with two AC PSUs (-F and -R models) |
| Performance | <ul style="list-style-type: none"> Line rate 4 Tbps Switching Capacity (2 Tbps ingress, 2 Tbps egress) Typical Latency: 800 ns Forwarding rate: 1000 Mpps | <ul style="list-style-type: none"> Line rate 2.16 Tbps Switching Capacity (1.08 Tbps ingress, 1.08 Tbps egress) Typical Latency: 2,400 ns Forwarding rate: 1000 Mpps |
| CPU/Memory | <ul style="list-style-type: none"> 8-core Processor 16GB DDR4 ECC memory 128GB SSD memory | <ul style="list-style-type: none"> 8-core Processor 16GB DDR4 ECC memory 128GB SSD memory |
| Packet Buffers | 32MB | 32MB |
| Environmental Operating Conditions | <p>AC/DC, one fan failed, front-to-back:</p> <ul style="list-style-type: none"> 0°C (32°F) to 50°C (122°F) at sea level; 0°C (32°F) to 40°C (104°F) up to 3000 m (10,000 ft) <p>AC/DC, one fan failed, back-to-front:</p> <ul style="list-style-type: none"> 0°C (32°F) to 45°C (113°F) at sea level; 0°C (32°F) to 40°C (104°F) up to 3000 m (10,000 ft) | <p>AC/DC, one fan failed, front-to-back:</p> <ul style="list-style-type: none"> 0°C (32°F) to 50°C (122°F) at sea level; 0°C (32°F) to 40°C (104°F) up to 3000 m (10,000 ft) <p>AC/DC, one fan failed, back-to-front:</p> <ul style="list-style-type: none"> 0°C (32°F) to 45°C (113°F) at sea level; 0°C (32°F) to 40°C (104°F) up to 3000 m (10,000 ft) |

Weights and Dimensions of Accessories

| Model | Weight | Physical Dimensions |
|--|-------------------|---|
| XN-FAN-001-F: Fan unit, front-to-back or XN-FAN-001-R: Fan Unit back-to-front | 0.14 kg (0.31 lb) | Height: 4.0 cm (1.57 in) Width: 4.0 cm (1.57 in) Length: 13.4 cm (5.28 in) |
| XN-4P-RKMT298 - Four-post rack mount kit (included with 7520-48Y-8C and 7520-48XT-6C switches) | 2.63 kg (5.8 lb) | Height: 2.1 cm (0.83 in) Width: 4.4 cm (1.73 in) Length: 63.0 cm - 90.0 cm (24.80 in - 35.43 in) |
| XN-4P-RKMT302 - Four-post rack mount kit (included with 7520-48YE-8CE switch) | 2.84 kg (6.26 lb) | Height: 5.0 cm (1.97 in) Width: 7.0 cm (2.76 in) Length: 72.0 cm (28.4 in) |
| XN-2P-RKMT299 - Two-post rack mount kit (separately orderable) | 2.8 kg (6.17 lb) | Height: 4.44 cm (1.75 in) Width: 2.0 cm (0.79 in) Length: 67.93 cm - 93.24 cm (26.76 in - 36.73 in) |

Acoustic Noise and Fan Speed

Acoustic Noise

The following table includes acoustic specifications of the Extreme 7520 switches under maximum operating conditions.

| Switch Model | Bystander Sound Pressure (at 25°C) | Declared Sound Power (at 25°C) |
|---------------------------------------|------------------------------------|--------------------------------|
| 7520-48Y-8C (Front-to-Back Airflow) | 52.2 dB(A) | 6.8 bels |
| 7520-48Y-8C (Back-to-Front Airflow) | 50.5 dB(A) | 6.7 bels |
| 7520-48YE-8CE (Front-to-Back Airflow) | 60.2 dB(A) | 7.3 bels |
| 7520-48YE-8CE (Back-to-Front Airflow) | 59.6 dB(A) | 7.2 bels |
| 7520-48XT-6C (Front-to-Back Airflow) | 36.4 dB(A) | 5.5 bels |
| 7520-48XT-6C (Back-to-Front Airflow) | 45.0 dB(A) | 6.3 bels |

Fan Speed

Fan speeds are adjusted based on calculations of the temperatures on all sensors. Due to one fan being located behind the other, air pushed from one fan can cause the other

fan in the module to run at a higher speed. One fan can run at medium speed while the other can spin at high speed if one is close to the temperature boundary.

Table 18: Fan Tray and Speed Variation

| Description | Operation Status | Operation Speed | Airflow Direction |
|--------------|------------------|-----------------|-------------------|
| Tray 1 Fan 1 | up | high speed | Unknown* |
| Tray 1 Fan 2 | up | medium speed | Unknown* |
| Tray 2 Fan 1 | up | high speed | Unknown* |
| Tray 2 Fan 2 | up | medium speed | Unknown* |
| Tray 3 Fan 1 | up | high speed | Unknown* |
| Tray 3 Fan 2 | up | medium speed | Unknown* |
| Tray 4 Fan 1 | up | high speed | Unknown* |
| Tray 4 Fan 2 | up | medium speed | Unknown* |
| Tray 5 Fan 1 | up | high speed | Unknown* |
| Tray 5 Fan 2 | up | medium speed | Unknown* |
| Tray 6 Fan 1 | up | high speed | Unknown* |
| Tray 6 Fan 2 | up | medium speed | Unknown* |

* - The color of the tab on the fan tray indicates the airflow direction:

- Red = Front-to-Back
- Blue = Back-to-Front

Mean Time Between Failures

The following table includes mean time between failures (MTBF) information for the Extreme 7520 switches.

| Switch Model | Mean Time Between Failures |
|--|--|
| 7520-48Y-8C-AC-F 7520-48Y-8C-DC-F | 471,550 hrs @ 25°C 178,775 hrs @ 50°C |
| 7520-48Y-8C-AC-R 7520-48Y-8C-DC-R | 520,479 hrs @ 25°C 255,358 hrs @ 45°C |
| 7520-48YE-8CE-AC-F 7520-48YE-8CE-DC-F | 348,187 hrs @ 25°C 116,838 hrs @ 50°C |
| 7520-48YE-8CE-AC-R 7520-48YE-8CE-DC-R | 335,332 hrs @ 25°C 141,298 hrs @ 45°C |
| 7520-48XT-6C-AC-F 7520-48XT-6C-DC-F | 439,148 hrs @ 25°C 187,306 hrs @ 50°C |
| 7520-48XT-6C-AC-R 7520-48XT-6C-DC-R | 421,453 hrs @ 25°C 176,924 hrs @ 45°C |

Power Specifications

This topic describes power supply specifications, power consumption, and heat dissipation.

Power Supply Specifications

The following table includes power supply specifications for the switch.

| | 800W AC PSU XN-ACPWR-800W-F/R | 800WDC PSU XN-DCPWR-800W-F/R |
|----------------------|--|--|
| Dimensions | 3.15 in W x 1.57 in H x 8.11 in D (8.0 cm x 4.0 cm x 20.6 cm) | 3.15 in W x 1.57 in H x 8.11 in D (8.0 cm x 4.0 cm x 20.6 cm) |
| Weight | 1.79 lb (0.81kg) | 1.85 lb (0.85kg) |
| Voltage Input Range | 100VAC-140 VAC/200VAC-240 VAC | -48VDC to -60VDC |
| Line Frequency Range | 50Hz– 60Hz | N/A |
| PSU Input Socket | IEC320 C14 | Terminal Block |
| PSU Output Cord | IEC320 C13 | N/A |
| Operating Conditions | 0°C–55°C operation | 0°C–55°C operation |

Power Consumption and Heat Dissipation

The following table includes power and heat dissipation information for the switch.

| Switch Model | Minimum Heat Dissipation (BTU/hr) (Idle, no ports linked) | Minimum Power Consumption (W) (Idle, no ports linked) | Maximum Heat Dissipation (BTU/hr) (Fans high, all ports 100% traffic) | Maximum Power Consumption (W) (Fans high, all ports 100% traffic) |
|---------------|---|---|---|---|
| 7520-48XT-6C | 407.48 | 119.42 | 1359.06 | 398.30 |
| 7520-48Y-8C | 326.71 | 95.75 | 1307.36 | 383.15 |
| 7520-48YE-8CE | 596.58 | 174.84 | 1638.51 | 480.20 |

Environmental

Environmental Specifications

EN/ETSI 300 019-2-1 v2.1.2 - Class 1.2 Storage

EN/ETSI 300 019-2-2 v2.1.2 - Class 2.3 Transportation

EN/ETSI 300 019-2-3 v2.1.2 - Class 3.1e Operational
EN/ETSI 300 753 (1997-10) - Acoustic Noise
ASTM D3580 Random Vibration Unpackaged 1.5 G

Environmental Compliance

EU RoHS - 2011/65/EU
EU WEEE - 2012/19/EU
EU REACH – Regulation (EC) No 1907/2006 Reporting
China RoHS - SJ/T 11363-2006
Taiwan RoHS - CNS 15663(2013.7)

Environmental Operating Conditions

Temp: 0°C to 50°C (32°F to 122°F)
Humidity: 10% to 95% relative humidity, non-condensing
Altitude: 0 to 3,000 meters (9,850 feet)
Shock (half sine) 98m/s² (10G), 11ms, 18 shocks
Random vibration: 3Hz to 500Hz at 1.5 G rms

Packaging and Storage Specifications

Temp: -40°C to 70°C (-40°F to 158°F)
Humidity: 10% to 95% relative humidity, non-condensing
Packaged Shock (half sine): 180 m/s² (18 G), 6 ms, 600 shocks
Packaged Vibration: 5Hz to 62Hz at velocity 5 mm/s, 62Hz to 500Hz at 0.2 G
Packaged Random Vibration: 5Hz to 20Hz at 1.0 ASD w/-3 dB/oct. from 20Hz to 200Hz
Packaged Drop Height: 14 drops minimum on sides and corners at 42 inches (<15 kg box)

Standards

North American ITE

UL 62368-1
UL/CuL62368-1 Listed
CAN/CSA-C22.2 No 60950-1-07 Incl. AM1 (2011) and AM2 (2014)
CAN/CSA C22.2 No. 62368-1:19
Complies with FCC 21CFR 1040.10 (U.S. Laser Safety)
CDRH Letter of Approval (US FDA Approval)

European ITE

EN 60950-1 2nd Edition
EN62368-1
EN 60825-1 Class 1 (Lasers Safety)
2014/35/EU Low Voltage Directive

International ITE

CB Report & Certificate per IEC 60950-1
CB Report & Certificate IEC 62368-1
AS/NZS 62368.1:2022 (Australia/New Zealand)

EMI/EMC Standards

North American EMC for ITE

FCC CFR 47 Part 15 Class A (USA)
ICES-003 Class A (Canada)

European EMC Standards

EN 55032 Class A
EN 55035
EN 55011
EN 61000-3-2,2014 (Harmonics)
EN 61000-3-3 2013 (Flicker)
EN 61000-6-2
EN 61000-6-4
EN 300 386 (EMC Telecommunications) 2014/30/EU EMC Directive

International EMC Certifications

CISPR 32, Class A (International Emissions) AS/NZSCISPR32
CISPR24 Class A (International Immunity)
IEC 61000-4-2/EN 61000-4-2 Electrostatic Discharge, 8 kV Contact, 15 kV Air, Criteria B
IEC 61000-4-3/EN 61000-4-3 Radiated Immunity 10V/m, Criteria A
IEC 61000-4-4/EN 61000-4-4 Transient Burst, 2 kV, Criteria B
IEC 61000-4-5/EN 61000-4-5 Surge, 2 kV L-L, 2 kV L-G, Level 3, Criteria B
IEC61000-4-6 Conducted Immunity, 0.15-80MHz, 10V/rms, 80%AM (1kHz), Criteria A
IEC/EN61000-4-11 Power Dips & Interruptions, >30%, 25 periods, Criteria C

Country Specific

VCCI Class A (Japan Emissions)
ACMA RCM (Australia Emissions)

CQC Mark (China)
KCC Mark, EMC Approval (Korea)
BSMI (Taiwan)
Anatel (Brazil)
NoM (Mexico)
EAC (Russia, Belarus, Kazakhstan)
NRCS (South Africa)
TEC (India)

IEEE 802.3 Media Access Standards

IEEE 802.3ab 1000BASE-T
IEEE 802.3ae 10GBASE-X
IEEE 802.3 10GBASE-T (up to 100m using Cat6a cabling or better)
IEEE 802.3by-2016 25Gb/s Operation
IEEE 802.3ba/802.3bm 40 GBASE-X and 100 GBASE-X

Power Cord Requirements for AC-Powered Switches and AC Power Supplies

An AC power cord is not included with the AC power supply.

Power cords used with AC-powered switches or AC power supplies must meet the following requirements:

- The power cord must be agency-certified for the country of use.
- The power cord must have an appropriate AC connector for connection to the switch or power supply. See the power supply documentation for the appropriate power cord.
- The power cord must have an appropriately rated and approved wall plug applicable to the country of installation.
- For cords up to 6 feet (2 m) long, the wire size must be 18 AWG (.75 mm²) minimum; over 6 feet, the minimum wire size is 16 AWG (1.0 mm²).

For details about obtaining AC power cords for use in your country, refer to <http://www.extremenetworks.com/product/powercords/>.

Console Connector Pinouts

Table 19 describes the pinouts for a DB-9 console plug connector.

Table 19: Pinouts for the DB-9 Console Connector

| Function | Pin Number | Direction |
|---------------------------|------------|-----------|
| DCD (data carrier detect) | 1 | In |
| RXD (receive data) | 2 | In |
| TXD (transmit data) | 3 | Out |

Table 19: Pinouts for the DB-9 Console Connector (continued)

| Function | Pin Number | Direction |
|---------------------------|------------|-----------|
| DTR (data terminal ready) | 4 | Out |
| GND (ground) | 5 | - |
| DSR (data set ready) | 6 | In |
| RTS (request to send) | 7 | Out |
| CTS (clear to send) | 8 | In |

Figure 38 shows the pinouts for a 9-pin to 25-pin (RS-232) null-modem cable.

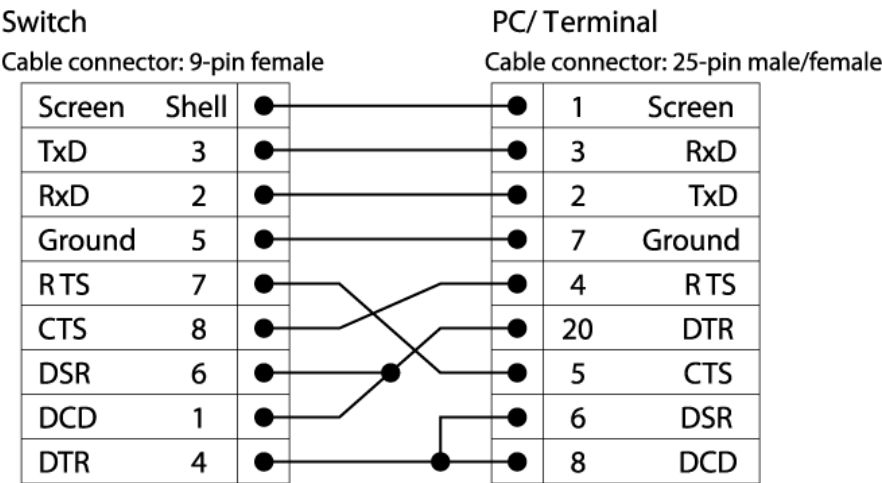


Figure 38: Null-Modem Cable Pinouts

Figure 39 shows the pinouts for a 9-pin to 9-pin (PC-AT) null-modem serial cable.

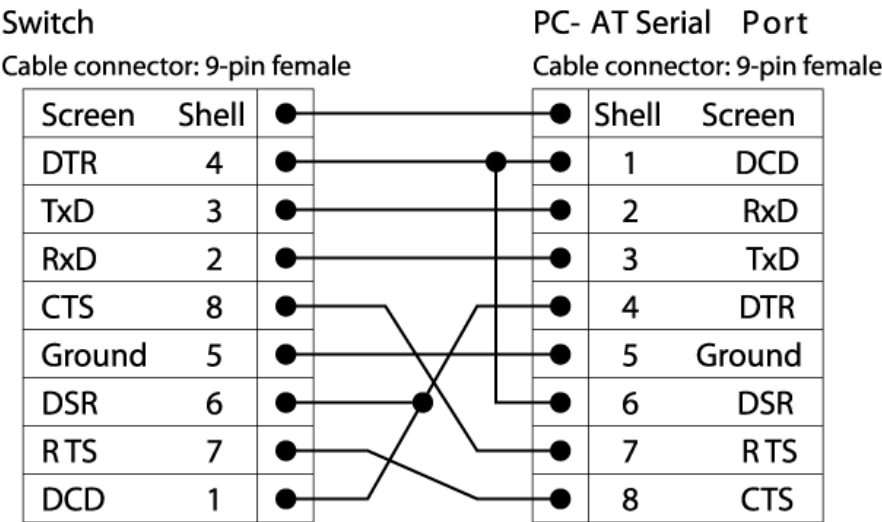


Figure 39: PC-AT Serial Null-modem Cable Pinouts

Table 20 shows the pinouts for the RJ45 console port on the ExtremeSwitching switches.

Table 20: RJ45 Console Port on Switch

| Function | Pin Number | Direction |
|---------------------------|------------|-----------|
| RTS (request to send) | 1 | Out |
| DTR (data carrier detect) | 2 | Out |
| TXD (transmit data) | 3 | Out |
| GND (ground) | 4 | — |
| GND (ground) | 5 | — |
| RXD (receive data) | 6 | In |
| DSR (data set ready) | 7 | In |
| CTS (clear to send) | 8 | In |

Table 21 shows the pinouts for an RJ45-to-DB-9 adapter.

Table 21: Pinouts for an RJ45 to DB-9 Adapter

| Signal | RJ45 Pin | DB-9 Pin |
|---------------------------|----------|----------|
| CTS (clear to send) | 1 | 8 |
| DTR (data carrier detect) | 2 | 6 |
| TXD (transmit data) | 3 | 2 |
| GND (ground) | 4 | 5 |
| GND (ground) | 5 | 5 |
| RXD (receive data) | 6 | 3 |
| DSR (data set ready) | 7 | 4 |
| RTS (request to send) | 8 | 7 |



Safety and Regulatory Information

[Considerations Before Installing](#) on page 102

[General Safety Precautions](#) on page 103

[Maintenance Safety](#) on page 104

[Fiber Optic Ports and Optical Safety](#) on page 104

[Cable Routing for LAN Systems](#) on page 105

[Power Cord Requirements for AC-Powered Switches and AC Power Supplies](#) on page 105

[Select Power Supply Cords](#) on page 106

[Install Power Supply Units and Connect Power](#) on page 106

[Battery Notice](#) on page 107

[Battery Warning - Taiwan](#) on page 108



Note

Read the following safety information thoroughly before installing Extreme Networks products. Failure to follow this safety information can lead to personal injury or damage to the equipment.

Only trained and qualified service personnel (as defined in IEC 60950-1 and AS/NZS 3260) should install, replace, or perform service to Extreme Networks switches and their components. Qualified personnel have read all related installation manuals, have the technical training and experience necessary to be aware of the hazards to which they are exposed in performing a task, and are aware of measures to minimize the danger to themselves or other persons.

If you are located in the United States, install the system in accordance with the U.S. National Electrical Code (NEC).

Considerations Before Installing

Consider the following items before you install equipment.

- For equipment designed to operate in a typical Telco environment that is environmentally controlled, choose a site that has the following characteristics:
 - Temperature-controlled and humidity-controlled, such that the maximum ambient room temperature shall not exceed 50°C (122°F).
 - Clean and free from airborne materials that can conduct electricity.

- Well ventilated and away from sources of heat including direct sunlight.
- Away from sources of vibration or physical shock.
- Isolated from strong electromagnetic fields produced by electrical devices.
- For equipment designed to be installed in environments that are not environmentally controlled, such as outdoor enclosures, see the product data sheet or for environmental conditions, temperature, and humidity.
- Establish at least 3 inches clearance on all sides for effective ventilation. Do not obstruct the air intake vent on the front, side, or rear ventilation grills. Locate the system away from heat sources.
- Make sure that your equipment is placed in an area that accommodates the power consumption and component heat dissipation specifications.
- Make sure that your power supplies meet the site DC power or AC power requirements of all the network equipment.
- Racks for Extreme Networks equipment must be permanently attached to the floor. Failure to stabilize the rack can cause the rack to tip over when the equipment is removed for servicing.
- Do not operate the system unless all modules, faceplates, front covers, and rear covers are in place. Blank faceplates and cover panels are required for the following functions:
 - Preventing exposure to hazardous voltages and currents inside the equipment
 - Containing electromagnetic interference (EMI) that might disrupt other equipment
 - Directing the flow of cooling air through the equipment
- Ultimate disposal of this product should be handled according to all national laws and regulations.

General Safety Precautions

Follow these guidelines:

- Do not try to lift objects that you think are too heavy for you.
- When you install equipment in a rack, load heavier devices in the lower half of the rack first to avoid making the rack top-heavy.
- Use only tools and equipment that are in perfect condition. Do not use equipment with visible damage.
- Route cables in a manner that prevents possible damage to the cables and avoids causing accidents, such as tripping.
- Do not place a monitor or other objects on top of the equipment. The chassis cover is not designed to support weight.
- To reduce the risk of fire, use only #26 AWG or larger telecommunications line cord. Use only copper conductors.
- Do not work on the system or connect or disconnect cables during periods of lightning activity.
- This equipment must be grounded. Never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor.

Maintenance Safety

When you perform maintenance procedures on Extreme Networks equipment, follow these recommendations:

- Use only authorized accessories or components approved for use with this system. Failure to follow these instructions may damage the equipment or violate required safety and EMC regulations.
- This system contains no customer serviceable components. Do not attempt to repair a chassis, power supply, module, or other component. In the event of failure, return the defective unit to Extreme Networks for repair or replacement, unless otherwise instructed by an Extreme Networks representative.
- To remove power from the system, you must unplug all power cords from wall outlets. The power cord is the disconnect device to the main power source.
- Disconnect all power cords before working near power supplies, unless otherwise instructed by a product-specific maintenance procedure.
- Replace a power cord immediately if it shows any signs of damage.
- When you work with optical devices, power supplies, or other modular accessories, put on an ESD-preventive wrist strap to reduce the risk of electronic damage to the equipment. Connect the other end of the strap to an appropriate grounding point on the equipment rack or to an ESD jack on the chassis if one is provided. Leave the ESD-preventive wrist strap permanently attached to the equipment rack or chassis so that it is always available when you need to handle components that are sensitive to ESD.
- Install all cables in a manner that avoids strain. Use tie wraps or other strain relief devices.

Fiber Optic Ports and Optical Safety

The following safety warnings apply to all optical devices used in Extreme Networks equipment that are removable or directly installed in an I/O module or chassis system.

Such devices include but are not limited to gigabit interface converters (GBICs), small form factor pluggable (SFP) modules (or mini-GBICs), QSFP+ modules, XENPAK transceivers, and XFP laser optic modules.



Warning

Laser optic modules become very hot after prolonged use. Take care when removing a laser optic module from the module or option card. If the laser optic module is too hot to touch, disengage the laser optic module and allow it to cool before removing it completely.

When working with laser optic modules, always take the precautions listed below to avoid exposure to hazardous radiation.

- Never look at the transmit LED/laser through a magnifying device while the transmit LED is powered on.
- Never look directly at a fiber port on the switch or at the ends of a fiber cable when they are powered on.

- Invisible laser radiation can occur when the connectors are open. Avoid direct eye exposure to the beam when optical connections are unplugged.
- Never alter, modify, or change an optical device in any way other than suggested in this document.

Cable Routing for LAN Systems

Extreme Networks equipment meets the requirements for LAN system equipment.

LAN systems are designed for intra-building installations; that is, cable runs between devices must be in the same building as the connected units, except under the conditions listed in the next paragraph.

As allowed in the USA by the National Electrical Code (NEC), this equipment can be connected between buildings if any one of the following conditions is true:

- Cable runs between buildings are less than 140 feet long.
- Cable runs between buildings are directly buried.
- Cable runs between buildings are in an underground conduit, where a continuous metallic cable shield or a continuous metallic conduit containing the cable is bonded to each building grounding electrode system.



Caution

Failure to follow these requirements for cable routing conditions may expose the user to electrical shock and expose the unit to damage that can cause errors.



Warning

The Ethernet ports of the equipment and its sub-assemblies are suitable only for intra-building connections (within the same building) or for connections to unexposed wiring or cabling. (See the conditions listed above.) The Ethernet ports of this equipment or its sub-assemblies must not be metalically connected to interfaces that connect to the outside plant (OSP) or its wiring. Ethernet interfaces are designed for use only as intra-building interfaces (described as Type 2 or Type 4 ports in GR-1089-CORE, Issue 6) and require isolation from the exposed OSP wiring. The addition of Primary Protectors is not sufficient protection to connect these interfaces metalically to OSP wiring.

Power Cord Requirements for AC-Powered Switches and AC Power Supplies

An AC power cord is not included with the AC power supply.

Power cords used with AC-powered switches or AC power supplies must meet the following requirements:

- The power cord must be agency-certified for the country of use.
- The power cord must have an appropriate AC connector for connection to the switch or power supply. See the power supply documentation for the appropriate power cord.

- The power cord must have an appropriately rated and approved wall plug applicable to the country of installation.
- For cords up to 6 feet (2 m) long, the wire size must be 18 AWG (.75 mm²) minimum; over 6 feet, the minimum wire size is 16 AWG (1.0 mm²).

For details about obtaining AC power cords for use in your country, refer to <http://www.extremenetworks.com/product/powercords/>.

Select Power Supply Cords

You can purchase a power cord for your product and for your specific country from your local Extreme Networks Channel Account Manager or Sales Manager, or you can purchase a cord from your local supplier. Requirements for the power cord are listed in the Technical Specifications for your product.

To locate a Sales Manager or Partner in your region, visit www.extremenetworks.com/partners/where-to-buy.



Note

This equipment is not intended to be directly powered by power distribution systems where phase-phase voltages exceed 240 VAC (2P+PE), such as those used in Norway, France, and other countries. For these applications, use a transformer to step down the voltage to < 240 VAC from phase-phase, or make a connection to a (P+N+PE) power distribution where voltages do not exceed 240 VAC.

All installations should confirm that the product is reliably grounded according to the country's local electrical codes.

Install Power Supply Units and Connect Power

For the ratings and power input requirements of each power supply unit, see "Technical Specifications" or the data sheet for the power supply at www.extremenetworks.com.



Warning

Be sure to satisfy the requirements listed in this section when you install Extreme Networks power supplies or connect power.

When you install any power supply:

- Do not use excessive force when you insert a power supply into the bay.
- Do not attempt to open the power supply enclosure for any reason; the power supply does not contain user-serviceable parts. In the event of failure, return the defective power supply to Extreme Networks for repair or replacement.
- Do not put your hand into an open power supply bay when a power supply is not present.
- Before you work on equipment that is connected to power lines, remove all jewelry, including watches. Metal objects heat up when they are connected to power and ground and can cause serious burns or weld the metal object to the terminals.

- An electrical arc can occur when you connect or disconnect the power with power applied. This could cause an explosion in hazardous area installations. Be sure that power is removed from the device.
- When you install or replace equipment, always make the ground connection first and disconnect the ground connection last.

When you install DC power supplies or connect DC power:

- Extreme Networks DC power supplies do not have switches for turning the unit on and off. Make sure that the DC circuit is de-energized before connecting or disconnecting the DC power cord at the DC input power socket.
- Connect the system or power supply only to a DC power source that complies with the safety extra-low voltage (SELV) requirements in IEC 60950-based safety standards.



Note

Because building codes vary worldwide, consult an electrical contractor to ensure proper equipment grounding and power distribution for your specific installation and country.



Warning

Extreme Networks power supplies do not have switches for turning the unit on and off. Disconnect all power cords to remove power from the device. Make sure that these connections are easily accessible.

Extreme Networks alimentations n'ont pas de contact pour mettre l'appareil sous et hors tension. Débranchez tous les cordons d'alimentation pour couper l'alimentation de l'appareil. Assurez-vous que ces connexions sont facilement accessibles.

Battery Notice



Warning: This product contains a battery used to maintain product information. If the battery should need replacement it must be replaced by Service Personnel. Please contact Technical Support for assistance.

Risk of explosion if battery is replaced by an incorrect type. Dispose of expended battery in accordance with local disposal regulations.



Attention: Ce produit renferme une pile servant à conserver les renseignements sur le produit. Le cas échéant, faites remplacer la pile par le personnel du service de réparation. Veuillez communiquer avec l'assistance technique pour du soutien.

Il y a risque d'explosion si la pile est remplacée par un type de pile incorrect. Éliminez les piles usées en conformité aux règlements locaux d'élimination des piles.

Battery Warning - Taiwan

警告

如果更換不正確之電池型式會有爆炸的風險，
請依製造商說明書處理用過之電池。



Regulatory Information

[CE statement](#) on page 109
[EMC Warnings](#) on page 110
[China and Taiwan: Restriction of Hazardous Substances \(ROHS\)](#) on page 110
[Canadian requirements](#) on page 110
[China CCC statement](#) on page 111
[Australia \(RCM\)](#) on page 111
[Federal Communications Commission \(FCC\) Notice](#) on page 111
[Germany statement](#) on page 112
[KCC statement \(Republic of Korea\)](#) on page 112
[Japan \(VCCI Class A\)](#) on page 112
[Japan power cord](#) on page 113

CE statement



Important

This is a Class A product. In a domestic environment, this product might cause radio interference, and the user might be required to take corrective measures.

The standards compliance label on this device contains the CE mark which indicates that this system conforms to the provisions of the following European Council directives, laws, and standards:

- Electromagnetic Compatibility (EMC) Directive 2014/30/EU
- Low Voltage Directive (LVD) 2014/35/EU
- EN 55032/EN 55024 (European Immunity Requirements)
 - EN61000-3-2/IEIDA (European and Japanese Harmonics Spec)
 - EN61000-3-3

EMC Warnings

Taiwan BSMI Warning

**警告:為避免電磁干擾,本產品不應安裝
或使用於住宅環境。**

China CQC Warning

**警告:在居住环境中，运行此设备可能
会造成无线电干扰。**

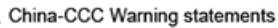
China and Taiwan: Restriction of Hazardous Substances (ROHS)

For more information, see <https://www.extremenetworks.com/company/legal/restriction-of-hazardous-substances/>.

Canadian requirements

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations, ICES-003 Class A.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.



在维修的时候一定要断开所有电源 (English translation "disconnect all power sources before service")




| | | |
|---------------------|-----|---|
| 安全 说明 和标 记 | 汉文 | “仅适用于非热带气候条件下安全使用。” |
| | 藏文 | འདི་གྲུབ་ཀྱི་སྤྱོད་ལེན་ཡིན་པའི་ཁྱེད་རང་གི་སྐོར་གྱི་མཛུགས་སྒྲུབ་ཀྱི་སྤྱོད་ལེན་ལ་འཇུག་པའི་ཆེད་དུ་བཞག་པའི་སྟེང་གི་ཚིག་ཅིག་ཡིན། |
| | 蒙古文 | “ᠰᠤᠶᠢᠨ ᠵᠦ᠋ᠭ᠎ᠠ ᠶᠤᠸᠠᠩ ᠳᠠᠨ ᠬᠠᠪ ᠶᠤᠨᠭ᠎ᠠ ᠶᠤᠸᠠᠩ ᠳᠠᠨ ᠬᠠᠷᠠᠭᠠᠨ ᠰᠠᠵᠢᠶᠤᠨᠭ᠎ᠠ” |
| | 壮文 | Dan hab yungh youq gij dienheiq diuzgen mbouj dwg diegndat haenx ancienz sawjyung. |
| | 维文 | غەيرى ئۇسۇقى بەلباغ ھالدا كېلىماتى شارائىتىدىلا بىخەتەر ئىشلەتكىلى بولىدۇ |



| | | |
|---------------------|-----|--|
| 安全 说明 和标 记 | 汉文 | 仅适用于海拔2000m以下地区安全使用。 |
| | 藏文 | 《2000m རེ་ འགྲོགས་ སུམ་རྒྱུ་ ལ་ བློན་ གཞི་ ཨང་མཉམ་ ཁུར་བཤུ་ རེ་ འགྲོགས་》 |
| | 蒙古文 | “ <u>“Бүтэцтэй байсан хайрхан 2000м-ийн багшгүй аюулгүй байдлыг хангахад зориулагдсан”</u> ” |
| | 壮文 | Dan hab yungh youq gij digih haijbaz 2000m doxroengz haenx ancienz sawjyung. |
| | 维文 | دېڭىز يۈزىدىن 2000 مېتر تۆۋەن رايونلاردا بىخەتەر ئىشلەتكىلى بولىدۇ |
| | 哈文 | Бүтэцтэй байсан хайрхан 2000м-ийн багшгүй аюулгүй байдлыг хангахад зориулагдсан |

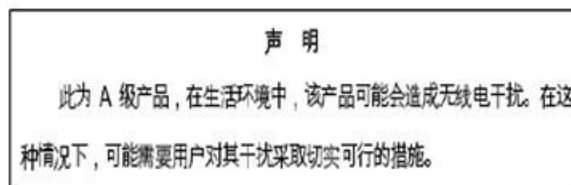Warning for Class A:



English translation of above statement

This is a Class A product. In a domestic environment this product may cause radio interference, in which case the user may be required to take adequate measures.



This equipment is compliant with Class B of CISPR 32. In a residential environment, this equipment may cause radio interference.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this

device must accept any interference received, including interference that may cause undesired operation.



Note

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment uses, generates, and can radiate radio frequency energy and if not installed in accordance with the operator's manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause interference in which case the user will be required to correct the interference at his own expense.

WARNING: Changes or modifications made to this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Germany statement

Machine noise information regulation - 3. GPSGV, the highest sound pressure level value is 70.0 dB(A) in accordance with EN ISO 7779.

Maschinenlärminformations-Verordnung - 3. GPSGV, der höchste Schalldruckpegel beträgt 70.0 dB(A) gemäss EN ISO 7779.

KCC statement (Republic of Korea)

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

Class A device (Broadcasting Communication Device for Office Use): This device obtained EMC registration for office use (Class A), and may be used in places other than home. Sellers and/or users need to take note of this.

Japan (VCCI Class A)



Warning

This is a Class A product based on the standard of the VCCI Council. If this equipment is used in a domestic environment, radio interference may occur, in which case the user may be required to take corrective actions.

この装置は、クラスA機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A

Japan power cord



注意－添付の電源コードを他の装置や用途に使用しない

添付の電源コードは本装置に接続し、使用することを目的として設計され、その安全性が確認されているものです。決して他の装置や用途に使用しないでください。火災や感電の原因となる恐れがあります。

English translation of above statement

ATTENTION: Never use the power cord packed with your equipment for other products.



Index

Numerics

- 1G/10G RJ45 port LEDs 89
- 800 W AC power supply
 - features 27
 - LEDs 90
- 800 W DC power supply
 - features 27
 - LEDs 91

A

- AC power
 - requirements for cords 99, 105
- AC power supplies
 - install 69
- AC power supply
 - installing 80
 - LEDs 90
 - replacing 80
- access 50
- acquired node
 - definition 38
- active node 37
- active topology 37
- airflow 80, 86
- alternate stacking 36
- announcements 10, 11
- ANSI standards 60

B

- backup node
 - definition 37
 - redundancy 32
- battery notice 107, 108
- bend radius 56
- BICSI 54
- brackets, for mounting in rack 77
- building codes 49
- Building Industry Consulting Service International.,
see BICSI

C

- cabinet
 - attaching switch 62, 63, 67
- cable
 - ANSI standards 60
 - bend radius 56

- cable (*continued*)
 - fiber optic 56
 - for stacking 42
 - installing 56
 - optical 68, 69
 - RJ45 57
 - standards 54
 - types and distances 57
- Canadian requirements 110
- candidate node 37
- combining
 - switches in a stack 41
- commercial building standards 60
- components
 - optional 68, 69
- connecting
 - to management console 72
- connector jackets
 - RJ45 57
- connector pinouts
 - DB-9 console connector 99
 - null-modem cable 99
- console port
 - for stacked configurations 47
 - on switch 99
 - settings 72
- control path 36
- conventions
 - notice icons 8
 - text 8
- cooling 80, 86
- cords
 - requirements 99, 105
 - selecting 106

D

- daisy chain topology 35
- data port 38
- DB-9 console connector pinouts 99
- DB-9 pinouts 99, 100
- DC power supply
 - installing 82, 84
 - LEDs 91
 - replacing 82, 84
- design standards 60
- distances
 - cables 57
- documentation

documentation (*continued*)

- feedback 11
- location 10

dual primary condition 35

E

Easy-Setup 39

election

- node role 38
- priority 38

electrical codes 49

environmental requirements

- building codes 49
- electrical codes 49
- humidity 52
- temperature 51
- wiring closet 50

equipment

- tools needed to install 62

equipment rack

- grounding 53
- mechanical recommendations 53
- mounting holes 53
- securing 54
- service access 53
- space requirements 53

Extreme 7520 switches

- features 14–18
- overview 14–16

F

failover 38

fan

- airflow 80, 86
- replacing 85

features

- switches 14–16

feedback 11

fiber optic cable

- bend radius 56
- handling 56
- installing 56

frequency, *see* radio frequency interference (RFI)

front-to-back cooling 80, 86

G

grounding

- racks 53
- requirements 60
- wiring closet 50

H

hitless failover 38

humidity 52

I

industry standards 60

install

- AC power supplies 69
- internal power supplies 69
- power supplies 69

installing

- 800 W AC power supply 80
- 800 W DC power supply 82, 84
- fiber optic cable 56
- optical transceivers 68, 69
- optional components 68, 69
- personnel 62
- preparing 62
- safety information 61
- switches 62, 63, 67
- tools 62

internal power supplies

- install 69

J

jackets

- RJ45 connector 57

L

LEDs

- 1G/10G RJ45 port 89
- 800 W AC power supply 90
- 800 W DC power supply 91
- QSFP28 port 90
- RJ-45 management port 88
- SFP+/SFP28 port 89
- stack number indicator 32
- system status 87

local management connection 72

M

MAC address 38

management port

- connecting to switch 72
- for stacked configurations 47
- settings 72

mounting brackets

- removing 77

multiple-rack stacking 46

N

native stacking 36

native stacking ports 31

node address 38

node role

- definition 37
- election 38

notices 8

null-modem cable pinouts 99

O

operating environment requirements 51

operational node 38

optical cables

installing 68, 69

optical transceivers

installing 68, 69

optional components

installing 68, 69

overview

switches 14–16

P

partitioning

of ports 20

pinouts

DB-9 console connector 99, 100

null-modem cable 99

planning

site 48

pluggable transceivers, *see* optical transceivers

ports

console port settings 72

for stacked configurations 47

management 72

native stacking 31

partitioning 20

power

requirements for cords 99, 105

Power Cord statement (Japan) 113

power cords

selecting 59, 106

power requirements

power supply 58

power supplies

install 69

specifications 96

power supply unit (PSU)

800 W AC 27, 80

800 W DC 27, 82, 84

installing 80, 82, 84

power requirements 58

replacing 80, 82, 84

specifications 96

primary node

definition 37

redundancy 32

primary switch 40

priority

for node role election 38

product announcements 10, 11

Q

QSFP+ ports

QSFP+ ports (*continued*)

partitioning 20

QSFP28 port LEDs 90

QSFP28 ports

partitioning 20

R

rack

attaching switch 62, 63, 67

removing switch 77

rack specifications

grounding 53

securing to floor 54

space requirements 53

radio frequency interference (RFI)

preventing 58

redundancy

in a stack 32

regulatory information 102

removing

from rack 77

replacing

800 W AC power supply 80

800 W DC power supply 82, 84

restricted 50

restricted access 50

RFI, *see* radio frequency interference (RFI)

ring topology 33

RJ-45 management port LEDs 88

RJ45 cable 57

S

safety

precautions when installing 61

requirements 102

secure boot 24

service access to the rack 53

settings

for management console 72

SFP+/SFP28 port LEDs 89

signal quality 58

single-rack stacking 44, 45

site planning 48

site preparation 62

slot number 32

space requirements, rack 53

specifications

equipment racks 53

stack 36

see also SummitStack

stack number indicator 32

stackable switch 36

stacking

backup 32

cables 42

combining switch models 41

connecting cables 47

stacking (*continued*)

- connecting management port 47
- connection order 44
- daisy chain 35
- definition 31
- dual primary condition 35
- examples 44–46
- guidelines 40
- LEDs 32
- multiple-rack 46
- native stacking ports 31
- primary 32
- priority 32
- recommendations 40
- redundancy 32
- ring topology 33
- single-rack 44, 45
- slot number 32
- stack number indicator 32
- terminology 36
- troubleshooting 32

stacking link 36

stacking port 36

standards

- cabling 54, 60
- commercial building 60
- design 60
- grounding 60

standby node

- definition 37

SummitStack

- path 36
- segment 39
- state 39
- topology 32, 36

SummitStack configuration 30

support, *see* technical support

switches

- attaching to cabinet 62, 63, 67
- attaching to rack 62, 63, 67
- installing optional components 68, 69
- removing from rack 77
- safety information 61
- tools needed to install 62

system status LEDs 87

T

technical support

- contacting 10, 11

temperature 51

tools for installing equipment

- switches 62

transceivers, *see* optical transceivers

transition time

- UPS 60

troubleshooting stack connections 32

U

UPS (uninterruptible power supply)

- requirements 59
- selecting 59
- transition time 60

UTP cable

- preventing RFI 58

W

warnings 8

wiring closet

- floor coverings 50
- grounding 50
- humidity 52
- rack, securing 54
- temperature 51

wiring terminals 53