



# ExtremeCloud Edge v5.08.01 Self-Orchestration Deployment Guide

Configuration and Management for Universal Compute Platform

9039095-00 Rev. AB  
October 2024



Copyright © 2024 Extreme Networks, Inc. All rights reserved.

## Legal Notice

Extreme Networks, Inc. reserves the right to make changes in specifications and other information contained in this document and its website without prior notice. The reader should in all cases consult representatives of Extreme Networks to determine whether any such changes have been made.

The hardware, firmware, software or any specifications described or referred to in this document are subject to change without notice.

## Trademarks

Extreme Networks and the Extreme Networks logo are trademarks or registered trademarks of Extreme Networks, Inc. in the United States and/or other countries.


All other names (including any product names) mentioned in this document are the property of their respective owners and may be trademarks or registered trademarks of their respective companies/owners.

For additional information on Extreme Networks trademarks, see: <https://www.extremenetworks.com/about-extreme-networks/company/legal/trademarks>

## Open Source Declarations

Some software files have been licensed under certain open source or third-party licenses.

End-user license agreements and open source declarations can be found at: <https://www.extremenetworks.com/support/policies/open-source-declaration/>

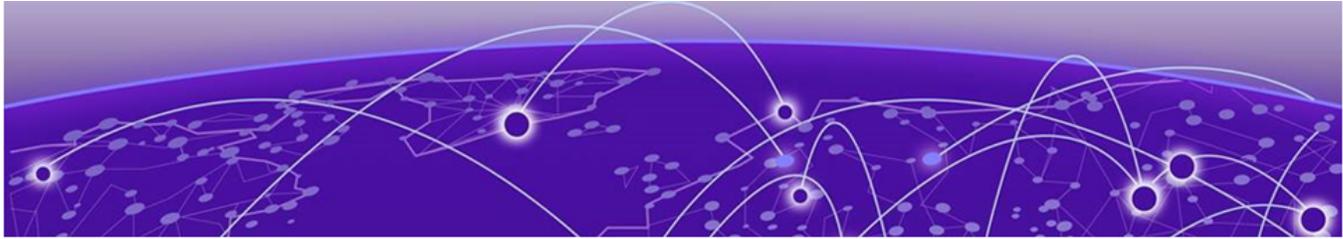


# Table of Contents

---

Abstract.....	v
<b>Preface.....</b>	<b>6</b>
Text Conventions.....	6
Documentation and Training.....	7
Open Source Declarations.....	8
Training.....	8
Help and Support.....	8
Subscribe to Product Announcements.....	9
Send Feedback.....	9
Revision History.....	9
<b>Introduction and Prerequisites.....</b>	<b>10</b>
Self-Orchestration.....	10
Supported Hardware for Self-Orchestration.....	12
Reserved IP Addressing.....	13
VRRP Configuration (Optional).....	13
Services VRRP Configuration.....	14
Firewall Requirements.....	14
<b>Configure an Appliance.....</b>	<b>16</b>
Connect the Appliance Hardware.....	16
Connect to the Management Interface through the Console Port.....	16
Connect to the Management Interface through the ICC Port.....	17
Basic Configuration Wizard.....	17
Use the Basic Configuration Wizard.....	18
Upgrade the Appliance Universal Compute Platform.....	22
Validate the Network Address Configuration.....	26
(Optional) Add a Port.....	27
Configure the Stand-Alone Cluster Settings.....	29
<b>Initial Engine Application Installation.....</b>	<b>32</b>
Download the Extreme Docker Application Image File.....	32
Upload the Docker Application Image File to the UCP.....	32
Install an Engine Application.....	33
Deploy the Application Image File.....	33
<b>Engine Upgrades.....</b>	<b>34</b>
Upgrade an Application (Self-Orchestrated).....	34
<b>Engine Application Settings.....</b>	<b>36</b>
<b>Onboard Cluster to ExtremeCloud IQ.....</b>	<b>38</b>
Onboarding a Cluster to ExtremeCloud IQ .....	38
Cloud Visibility.....	39


**Index..... 40**

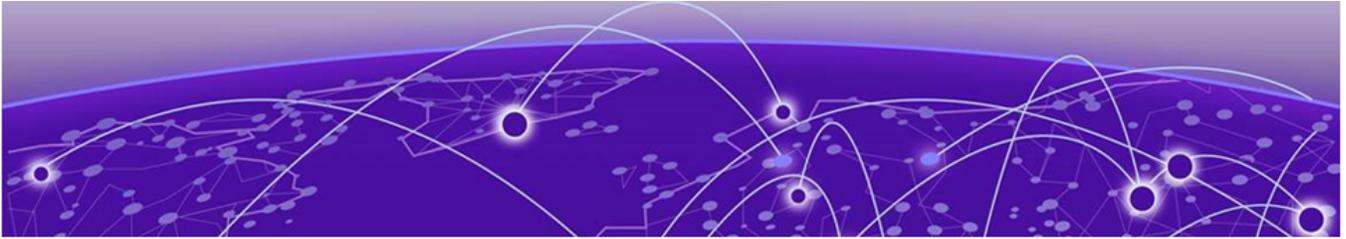

## Abstract

---

The ExtremeCloud Edge v5.08.01 Self-Orchestration Deployment Guide provides in-depth technical guidance for deploying the Universal Compute Platform (UCP) with self-orchestration capabilities. Architecture details focus on the orchestration layer, automated provisioning pipelines, and integration with network and cloud infrastructures. Key deployment processes include configuring system prerequisites, establishing deployment pipelines, and executing end-to-end orchestration workflows. Advanced troubleshooting techniques, optimization strategies, and best practices are provided to resolve common deployment challenges and ensure optimal performance. This resource is designed for system architects and IT professionals overseeing large-scale, automated UCP implementations.

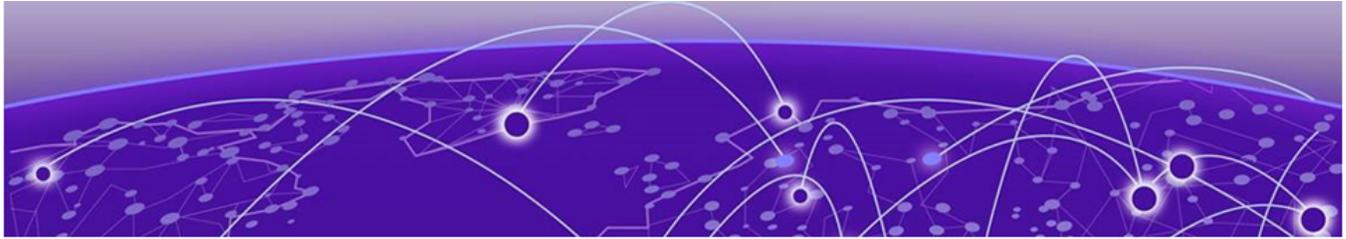

# Preface

---

Read the following topics to learn about:

- The meanings of text formats used in this document.
- Where you can find additional information and help.
- How to reach us with questions and comments.

## Text Conventions

---

Unless otherwise noted, information in this document applies to all supported environments for the products in question. Exceptions, like command keywords associated with a specific software version, are identified in the text.

When a feature, function, or operation pertains to a specific hardware product, the product name is used. When features, functions, and operations are the same across an entire product family, such as Extreme Networks switches or SLX routers, the product is referred to as *the switch* or *the router*.

**Table 1: Notes and warnings**

Icon	Notice type	Alerts you to...
	Tip	Helpful tips and notices for using the product
	Note	Useful information or instructions
	Important	Important features or instructions
	Caution	Risk of personal injury, system damage, or loss of data
	Warning	Risk of severe personal injury

**Table 2: Text**

Convention	Description
screen displays	This typeface indicates command syntax, or represents information as it is displayed on the screen.
The words <i>enter</i> and <i>type</i>	When you see the word <i>enter</i> in this guide, you must type something, and then press the Return or Enter key. Do not press the Return or Enter key when an instruction simply says <i>type</i> .
<b>Key names</b>	Key names are written in boldface, for example <b>Ctrl</b> or <b>Esc</b> . If you must press two or more keys simultaneously, the key names are linked with a plus sign (+). Example: Press <b>Ctrl+Alt+Del</b>
<i>Words in italicized type</i>	Italics emphasize a point or denote new terms at the place where they are defined in the text. Italics are also used when referring to publication titles.
<b>NEW!</b>	New information. In a PDF, this is searchable text.

**Table 3: Command syntax**

Convention	Description
<b>bold text</b>	Bold text indicates command names, keywords, and command options.
<i>italic text</i>	Italic text indicates variable content.
[ ]	Syntax components displayed within square brackets are optional. Default responses to system prompts are enclosed in square brackets.
{ <b>x</b>   <b>y</b>   <b>z</b> }	A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options.
<b>x</b>   <b>y</b>	A vertical bar separates mutually exclusive elements.
< >	Nonprinting characters, such as passwords, are enclosed in angle brackets.
...	Repeat the previous element, for example, <i>member [member...]</i> .
\	In command examples, the backslash indicates a “soft” line break. When a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash.

## Documentation and Training

Find Extreme Networks product information at the following locations:

[Current Product Documentation](#)

[Release Notes](#)

[Hardware and Software Compatibility](#) for Extreme Networks products

[Extreme Optics Compatibility](#)

[Other Resources](#) such as articles, white papers, and case studies

## Open Source Declarations

Some software files have been licensed under certain open source licenses. Information is available on the [Open Source Declaration](#) page.

## Training

Extreme Networks offers product training courses, both online and in person, as well as specialized certifications. For details, visit the [Extreme Networks Training](#) page.

## Help and Support

---

If you require assistance, contact Extreme Networks using one of the following methods:

### Extreme Portal

Search the GTAC (Global Technical Assistance Center) knowledge base; manage support cases and service contracts; download software; and obtain product licensing, training, and certifications.

### The Hub

A forum for Extreme Networks customers to connect with one another, answer questions, and share ideas and feedback. This community is monitored by Extreme Networks employees, but is not intended to replace specific guidance from GTAC.

### Call GTAC

For immediate support: (800) 998 2408 (toll-free in U.S. and Canada) or 1 (408) 579 2800. For the support phone number in your country, visit [www.extremenetworks.com/support/contact](http://www.extremenetworks.com/support/contact).

Before contacting Extreme Networks for technical support, have the following information ready:

- Your Extreme Networks service contract number, or serial numbers for all involved Extreme Networks products
- A description of the failure
- A description of any actions already taken to resolve the problem
- A description of your network environment (such as layout, cable type, other relevant environmental information)
- Network load at the time of trouble (if known)
- The device history (for example, if you have returned the device before, or if this is a recurring problem)
- Any related RMA (Return Material Authorization) numbers

## Subscribe to Product Announcements

You can subscribe to email notifications for product and software release announcements, Field Notices, and Vulnerability Notices.

1. Go to [The Hub](#).
2. In the list of categories, expand the **Product Announcements** list.
3. Select a product for which you would like to receive notifications.
4. Select **Subscribe**.
5. To select additional products, return to the **Product Announcements** list and repeat steps 3 and 4.

You can modify your product selections or unsubscribe at any time.

## Send Feedback

The User Enablement team at Extreme Networks has made every effort to ensure that this document is accurate, complete, and easy to use. We strive to improve our documentation to help you in your work, so we want to hear from you. We welcome all feedback, but we especially want to know about:


- Content errors, or confusing or conflicting information.
- Improvements that would help you find relevant information.
- Broken links or usability issues.

To send feedback, email us at [documentation@extremenetworks.com](mailto:documentation@extremenetworks.com).

Provide as much detail as possible including the publication title, topic heading, and page number (if applicable), along with your comments and suggestions for improvement.

## Revision History

Publish Date	Revision	Description of Change
Oct 11, 2024	AA	Initial publish
Oct 25, 2024	AB	Updated <i>Firewall Requirements</i> with information on internet connectivity requirements.

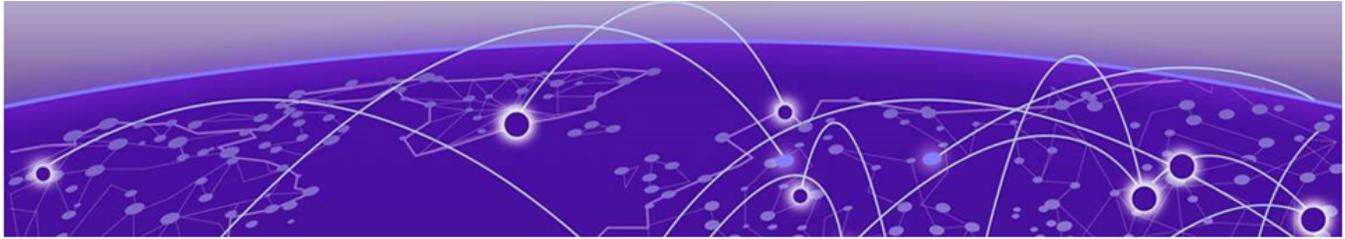

# Introduction and Prerequisites

---

[Self-Orchestration](#) on page 10

[Supported Hardware for Self-Orchestration](#) on page 12

[Reserved IP Addressing](#) on page 13

[VRRP Configuration \(Optional\)](#) on page 13

[Firewall Requirements](#) on page 14

This guide provides the steps needed to bring a stand-alone Universal Compute Platform online in ExtremeCloud Edge - Self-Orchestration mode. Universal Compute Platform leverages Kubernetes and Docker to deploy and manage the delivery of applications to the customer premises, providing the computing power, storage, high availability, and load-balancing for the system.

The system leverages VRRP (Virtual Router Redundancy Protocol) in order to provide support for both high-availability and load balancing, supported by an NGINX engine. All service operations to the cluster should be directed to the corresponding VRRP IP so that the load balancing logic can direct the request to the best node.

- The internal Kubernetes engine requires the reservation of two (2x) /16 or smaller subnets. Ensure that this IP address range does not conflict with any routable address space within the organization.

## Related Topics

[Self-Orchestration](#) on page 10

## Self-Orchestration

---

Deploy Universal Compute Platform in ExtremeCloud Edge - Self-Orchestration (standalone mode) with a set of Universal Container applications.

This deployment scenario includes the following application requirements for a stand-alone configuration:

- The use of the Virtual IP Address (VIP) is optional, but it provides a convenient way to expose services, from an instance of the UI (port 443) externally. Assign a VIP to each instance of an engine.
- Pod Network configuration settings — Pods are a group of managed containers that share networking and storage resources from the same node (appliance). Each pod

is assigned an IP address. All the containers in the pod share the same storage, IP address, and network namespace.

- Pod Network IP Address and CIDR
- Service Network IP Address and CIDR

**Note**

CIDR (*Classless Inter-Domain Routing*) is a method for allocating IP addresses and for IP routing.

**Note**

An Inter-Cluster Connection (ICC) is not required in a ExtremeCloud Edge - Self-Orchestration (standalone) deployment.

## Related Topics

[Reserved IP Addressing](#) on page 13

[VRRP Configuration \(Optional\)](#) on page 13

## Supported Hardware for Self-Orchestration

ExtremeCloud Edge - Self-Orchestration deployments of Universal Compute Platform support the following hardware appliances. Depending on the hardware, you may be able to install more than one instance of an application on a node.

**Table 4: Supported Hardware for ExtremeCloud Edge - Self-Orchestration**

Hardware Appliance	Details
1130C	<p>Ports:</p> <ul style="list-style-type: none"> <li>• 2 x 1 Gbps ICC Ports/RJ45</li> <li>• 4 x 1 Gbps Data 1-4/RJ45</li> </ul> <p>Self-Orchestration deployment application capacity:</p> <ul style="list-style-type: none"> <li>• Tunnel Concentrator—One instance per node</li> <li>• ExtremeCloud IQ Controller (CE1000)—One instance per node</li> </ul> <p>For additional server specifications, along with hardware installation information, see <a href="#">Extreme Networks Universal Compute Platform Appliance 1130C Installation Guide</a>.</p>
2130C	<p>Ports:</p> <ul style="list-style-type: none"> <li>• 2 x 10 Gbps ICC Ports/RJ45</li> <li>• 2 x 10 Gbps Data Ports 1-2/RJ45</li> <li>• 2 x 25 Gbps Data Ports 3-4/SFP28</li> </ul> <p>Self-Orchestration deployment application capacity:</p> <ul style="list-style-type: none"> <li>• Tunnel Concentrator—Two instances per node</li> <li>• ExtremeCloud IQ Controller (CE2000)—One instance per node</li> </ul> <p>For additional server specifications, along with hardware installation information, see <a href="#">Extreme Networks Universal Compute Platform 2130C Installation Guide</a> (available in fall 2024).</p>
4120C/4120C-1	<p>Ports:</p> <ul style="list-style-type: none"> <li>• 2 x 1/10 Gbps ICC Ports/RJ45</li> <li>• 2 x 1/10 Gbps Data 1-2/RJ45</li> <li>• 2 x 1/10/25/40/50 Gbps Data 3-4/QSFP</li> </ul> <p>Self-Orchestration deployment application capacity:</p> <ul style="list-style-type: none"> <li>• Tunnel Concentrator—Up to three instances per node.</li> <li>• ExtremeWireless WiNG (CX9000)—One instance per node</li> </ul> <p>For additional server specifications, along with hardware install information, see <a href="#">Extreme Networks Universal Compute Platform Appliance 4120C Installation Guide</a>.</p>



### Note

Support is for a single application type per node. Application mixing on a single appliance is not supported.

## Reserved IP Addressing

Container orchestration by Kubernetes within the cluster requires reservation of private network segments for each Pod. Plan for network segmentation regardless of your deployment mode.



### Note

Review the default IP range values for your pod and service networks in the following table. Use them if they are suitable and do not conflict with the deployed infrastructure network routing definitions. If there is a conflict, adjust the segment IP range as required.

**Table 5: IP Address range for network segmentation**

Restricted IP Range	Default Value	IP Address /Range
Pod Network IP Range	10.96.0.0/16	<reserved ip>/16
Service Network IP Range	10.97.0.0/16	<reserved ip>/16
Application Network IP Range	10.0.2.0/24	<reserved ip>/24

VRRP operations require visual representation of where the IP addresses are allocated.

## VRRP Configuration (Optional)

In support of load balancing and high-availability functions, the Universal Compute Platform relies on Virtual Router Redundancy Protocol (VRRP) to provide IP abstraction to key functionality. VRRP is critical in the configuration model.

The following operation settings must be defined as part of the VRRP configuration of member nodes:

- **Priority**— VRRP uses priority settings as a mechanism to arbitrate mastery of the state of exchanges across members of the cluster.
- **RouterID** — This setting allows segmentation of a routing domain, and it is important to separate from any other VRRP uses on the same network segment. The assigned value is arbitrary, but the value must not overlap when another VRRP usage is visible in the attached network segments.



### Note

In a stand-alone configuration, configure priority and router ID with a numeric value. However, in a stand-alone configuration, the specific value is not important. These attribute definitions are important in a multiple-node configuration.

## Services VRRP Configuration

The VRRP configuration relates to the number of services you are exposing. Configure a VRRP IP address (VIP) for each service.

**Table 6: Stand-Alone Configuration for Services VRRP Configuration**

	Single Node (Port #)
Data Port (optional)	Node Port IP /CIDR
VLAN	VLAN Tagged/Untagged
Port type	Physical
<b>VRRP (required)</b>	
VRRP IP address (VIP)	VIP address
Priority	Numeric Value
Router ID	ID (1)

## Firewall Requirements

The following connections are required during installation and upgrades so that Universal Compute Platform can download the appropriate packages.

**Table 7: Required Connections for Installs and Upgrades**

Domain Name	IP Adresses	Protocol	Port
docker.io	Dynamic IP range	HTTPS	443
gcr.io	Dynamic IP range	HTTPS	443

Internet connectivity is required in these situations:

- During installation and setup of the Universal Compute Platform appliance, up to and including the creation of the stand-alone cluster.
- Upgrades of Universal Compute Platform appliance software.
- For Cloud Connected use cases, connectivity to ExtremeCloud IQ services is required to facilitate the onboarding. For details, see [Table 8](#).

Once the stand-alone cluster is created, internet connectivity is not required while installing, upgrading, or running application engines that run on the appliance (unless the specific application engine requires it, or unless you onboarded to the cloud).




### Note

If the appliance is to be deployed as an air gap use case, the initial configuration of the host needs to take place in a staging location where internet services are available (for example, DNS, NTP and Docker access). Once the node is initialized to support the target application, the appliance can be moved to its target location.

The following connections are required if you connect to ExtremeCloud IQ.

**Table 8: Required Connections for Cloud Deployments**

Domain Name	IP Addresses	Protocol	Port	Description
hac.extremecloudiq.com	34.253.190.192 ~ 34.253.190.255	HTTPS	443	Onboarding to ExtremeCloud IQ
<rdc>-inlets.extremecloudiq.com	Dynamic IP range	TCP	8090	Ongoing connection to ExtremeCloud IQ

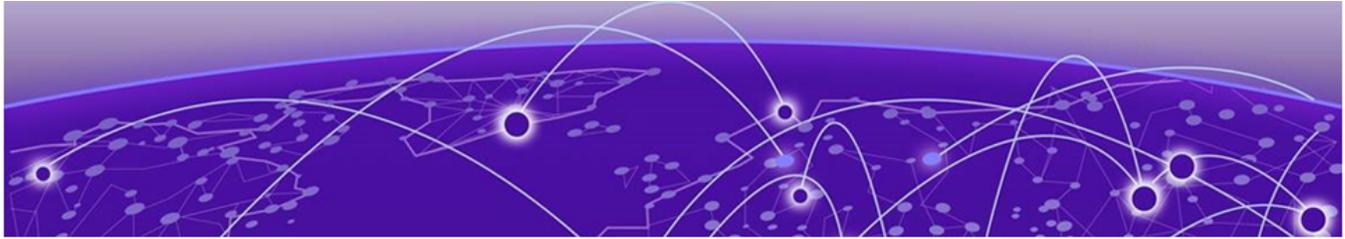

# Configure an Appliance

---

[Connect the Appliance Hardware](#) on page 16

[Basic Configuration Wizard](#) on page 17

[Upgrade the Appliance Universal Compute Platform](#) on page 22

[Validate the Network Address Configuration](#) on page 26

[Configure the Stand-Alone Cluster Settings](#) on page 29

Deployment of a Universal Compute Platform appliance involves the following steps:

1. Connect the hardware appliance to the network.
2. Run the [Basic Configuration Wizard](#) to deploy a fully-functioning appliance on a network.
3. [Upgrade](#) the Universal Compute Platform appliance software to the latest revision.
4. Validate the network settings and configure additional data plane interfaces if necessary.
5. Configure the Universal Compute Platform cluster creation.
6. Install and deploy the engine applications.

After the engine application is deployed, refer to the [documentation](#) for the individual application for information on how to manage your network with that application.

## Connect the Appliance Hardware

---

You can connect the appliance through the console port:

### Connect to the Management Interface through the Console Port

Take the following steps to connect to the appliance through the console port:

1. Connect the laptop serial port to the console port on the hardware appliance.  
If the laptop does not support RS232 interface, then obtain a USB to RS232 converter cable, which then connects to one of the following connections:
  - RJ45-DB9F cable—for 1130C, 4120C, or 4120C-1
  - Null Modem DB9 F-F (Female to Female)—for 2130C

- Using PuTTY, TeraTerm, or another terminal emulator, connect to the serial port connection.

Ensure that your serial connection is set properly with the following settings:

- 115200 baud
- 8 data bits
- 1 stop bit
- Parity none
- Flow control none

**Note**

The system's default gateway must be pointing to a next hop connection through the service ports.

- Using the console session, access the [Basic Configuration Wizard](#).

## Related Topics

[Use the Basic Configuration Wizard](#) on page 18

## Connect to the Management Interface through the ICC Port

You can retain the default IP address of the appliance management interface if you do not connect the appliance to your enterprise network. If you connect the appliance to your network, follow these steps:

- Connect a laptop to the appliance management port.
- Configure the Ethernet port of the laptop with a statically assigned unused IP address in the **192.168.10.0/24** subnet.
- SSH to the appliance.  
**192.168.10.1** is the default IP address on the appliance management port).  
The Universal Compute Platform logon screen is displayed.
- Using the console session, access the [Basic Configuration Wizard](#).

## Related Topics

[Use the Basic Configuration Wizard](#) on page 18

## Basic Configuration Wizard

The Universal Compute Platform software provides a **Basic Configuration Wizard** that can help administrators configure the minimum settings necessary to deploy a fully functioning appliance on a network.

Administrators can use the wizard to quickly configure the appliances for deployment, and then after the installation is complete, continue to revise the configuration accordingly.

The wizard is automatically launched when an administrator logs on to the appliance for the first time, including after the system has been reset to the factory default settings.

The configuration wizard prompts with a set of **Yes** or **No** questions. The default value is indicated in parenthesis. To accept the default value, press **Enter**.

Related Topics

[Use the Basic Configuration Wizard](#) on page 18

## Use the Basic Configuration Wizard

After logging into the appliance, the **Basic Configuration Wizard** displays. You are presented a set of **Yes** or **No** commands.

1. To begin the Admin password setup, press **Enter**. The **Admin Password Configuration** screen is displayed.

The following is the default factory settings for a Universal Compute Platform appliance:

- The default username is: admin
- The default password is: abc123



### Note

The values are case-sensitive.

- a. To change the password for the admin account, press **Enter**.
- b. Enter the new password for the admin account.



### Note

The password must be between 8-24 characters.

- c. Repeat the new password for the admin account and press **Enter**.



### Note

An Inter-Cluster Connection (ICC) is not required in a Standalone deployment.

2. Go to Data Port configuration.

### *Current Data Port Settings*

After you set up the **Admin Password configuration**, you are prompted to set up the **Current Data Port Settings**:

1. Change Port 1 settings: Select the number that corresponds to the port you will configure as the data port, and press **Enter**.
2. Set the default IP address for the data port **10.0.0.1**, or type a new IP address and press **Enter**.

The IP Address is selected.

3. Set the Netmask to the default **255.255.255.0**, or provide a new IP address and press **Enter**.

The Netmask is set.

4. Default VLAN: Set the default VLAN ID, or provide a new VLAN ID and press **Enter**.

5. Tagged Frames: Set the tagged frames to **No**, or type *y* to set tagged frames.
6. Management Traffic (admin interface): Set *y* to enable management traffic on the interface, or type *n* to not enable management traffic, and press **Enter**.
7. To accept the changes and keep the data port settings you have chosen, press **Enter**.

**Note**

If you need to reconfigure the data port settings, enter *n* and select your data port again.

The Data Port Interface is now set.

### *Current Host Attributes*

To set up the current host attributes:

1. Press **Enter** to enter the host name for the appliance.

**Note**

The host name must be all lower case letters.

2. Type the IP address for the ICC port.
3. Domain name: Set the domain name to the default value **extremenetworks.com**, or enter a domain name and press **Enter**.
4. IP netmask: Set the IP netmask for the ICC port, or enter an IP address and press **Enter**.
5. Primary DNS server: Set the IP address for the primary DNS server, or enter another IP address and press **Enter**.
6. If you need a secondary DNS server, type *Y* and provide the IP address. Otherwise, press **Enter** to accept **No** as the default value.

The updated Host Attribute settings are displayed.

7. To accept the changes you have made, press **Enter**.

**Note**

If you need to reconfigure the Host Attributes settings, enter *n* and enter the host name for the appliance again.

### *Current Global Default Gateway Settings*

The global default gateway can be on any Admin or data port topology/subnet.

**Note**

The system's default gateway must be pointing to a next hop connection through the service ports.

Enter the default gateway:

1. Type an IP address.
2. Press **Enter** to accept the changes.

### Current Time Settings

The Current Time Settings option allows you to change the time zone as per your location.

1. To set the Time Zone, press **Enter** . The Region number list is displayed.



#### Important

Ensure that Universal Compute Platform is configured with the correct Network Time Protocol (NTP) Server settings. Several system functions are dependent on an accurate timestamp.

2. Pick a number from those displayed on the screen that corresponds to the Continent. Then, enter a number that corresponds to the Region.

You can enter **n** to move down the list, or **p** to move up the list. To go back to the Region selection, press **c**.

For example, for Toronto select Americas (2) then Toronto (141).

3. Provide the fully qualified domain name or IP address of the NTP server. Press **Enter**.
4. You are prompted to enter a second NTP server and the default option is **y**. Type **n** and press **Enter**.

NTP Client is enabled.

5. Accept the changes you have made to the time zone and NTP server by pressing **Enter**.



#### Note

If you need to reconfigure the current time settings, enter **n** and enter the settings again.

- If you want to revisit any of the previous screens or exit without applying the configuration changes, enter one of the corresponding numbers/alphabets displayed on screen.

```

Controller Post Installation Configuration

Admin password Configuration          1
Change ICC Port Settings             2
Change Data Port Settings            3
Change Host Attributes Settings       4
Change Global Default Gateway Settings 5
Change Time Settings                 6
Apply Settings and Exit              A
Exit Without Applying                 E

Main Menu[A]: █

```

**Figure 1: Controller Post Installation Configuration Menu Screen**

**Table 9: Controller Post Installation Configuration Menu**

Menu Option	Command
Admin password Configuration	1
Change ICC Port Settings	2
Change Data Port Settings	3
Change Host Attribute Settings	4
Change Global Default Gateway Settings	5
Change Time Settings	6
Apply Settings and Exit	A
Exit Without Applying	E



**Note**

An Inter-Cluster Connection (ICC) is not required in a Standalone deployment.

When you revisit any other screen, you will have to reconfigure all subsequent area settings. For example, if you decide to reconfigure the Admin Password, which is at the beginning of the configuration wizard, you will have to reconfigure all the subsequent configuration wizard settings.

- Press **Enter** to accept the settings. The default option for accepting the settings is **A**. Your settings are now applied successfully.

### Test Connectivity

Test connectivity to the external services in the cluster using the `ping` command.

1. To test connectivity to external services such as DNS, ping the IP address of the DNS server.
2. Ping the cluster IP address to test connectivity.

```
Extreme Universal Compute Platform
Copyright Extreme Networks Inc. 2022
-----
c2-xca4.pinewoods.tor.lab.local# ping
Usage: ping [source-interface (name <name>) | (number <id>)] <ip address>
c2-xca4.pinewoods.tor.lab.local# ping 8.8.8.8
PING 8.8.8.8 (8.8.8.8) 56(84) bytes of data.
64 bytes from 8.8.8.8: icmp_seq=1 ttl=112 time=2.82 ms
64 bytes from 8.8.8.8: icmp_seq=2 ttl=112 time=2.05 ms
64 bytes from 8.8.8.8: icmp_seq=3 ttl=112 time=2.01 ms

--- 8.8.8.8 ping statistics ---
3 packets transmitted, 3 received, 0% packet loss, time 2003ms
rtt min/avg/max/mdev = 2.008/2.293/2.818/0.371 ms
c2-xca4.pinewoods.tor.lab.local#
```


**Figure 2: Example ping command**

## Upgrade the Appliance Universal Compute Platform

A best practice is to upgrade the appliance to the latest revision. Take the following steps to upgrade the Universal Compute Platform for the appliance:


1. Download the UCP image file from the Extreme Networks Support Portal. The image file extension is one of the following file types:
  - .asx (for 1130C)
  - .gbx (for 2130C)
  - .rcx (for 4120C/4120C-1)
2. Log in to the appliance Admin user interface: `https://node ip:5825`

3. Go to **Administration > System > Software Upgrade > Upload**.

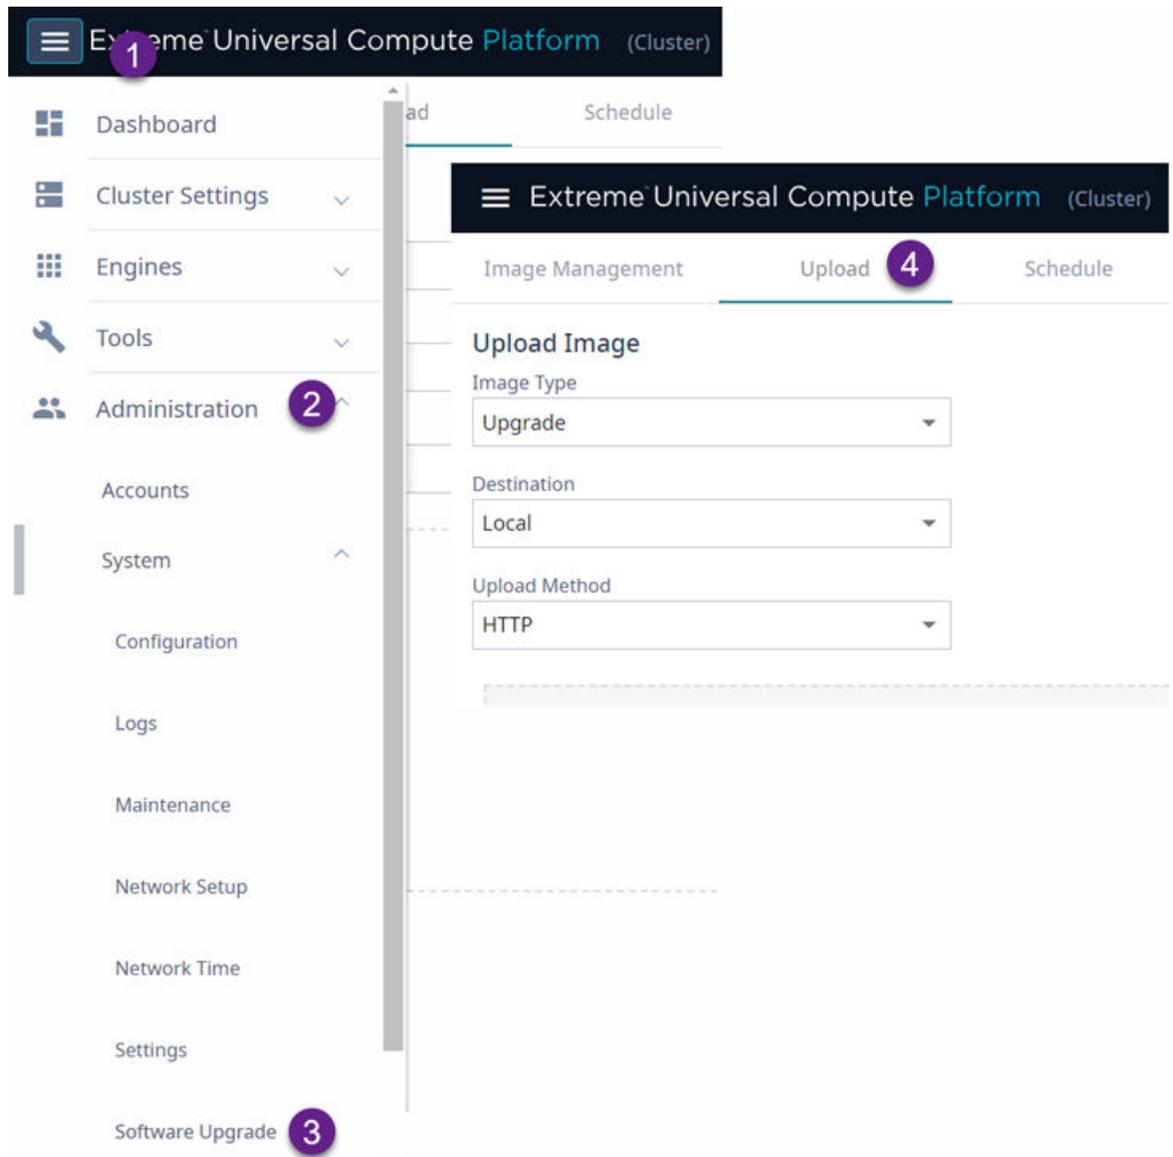


**Figure 3: Navigate to Universal Compute Platform Image Upload**

4. Specify the Image upgrade settings:
  - Image Type
  - Destination
  - Upload Method. The available upload methods are HTTP, FTP, and SCP; HTTP is recommended.

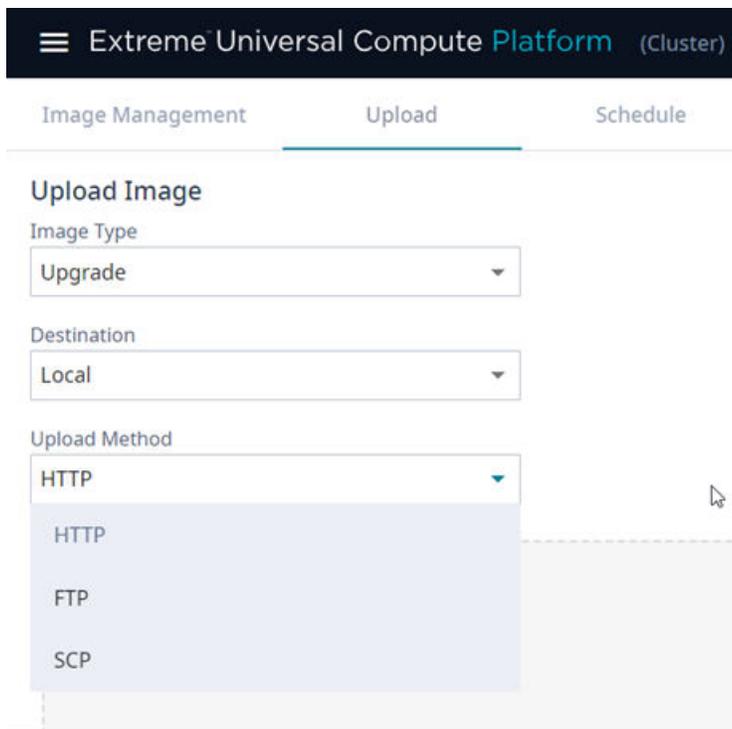

**Figure 4: Upload Image Settings**

- 5. Upload the desired revision of Universal Compute Platform.  
Select the **Choose Upgrade file pane** and navigate to the upgrade image or drag and drop the file on the upgrade pane.

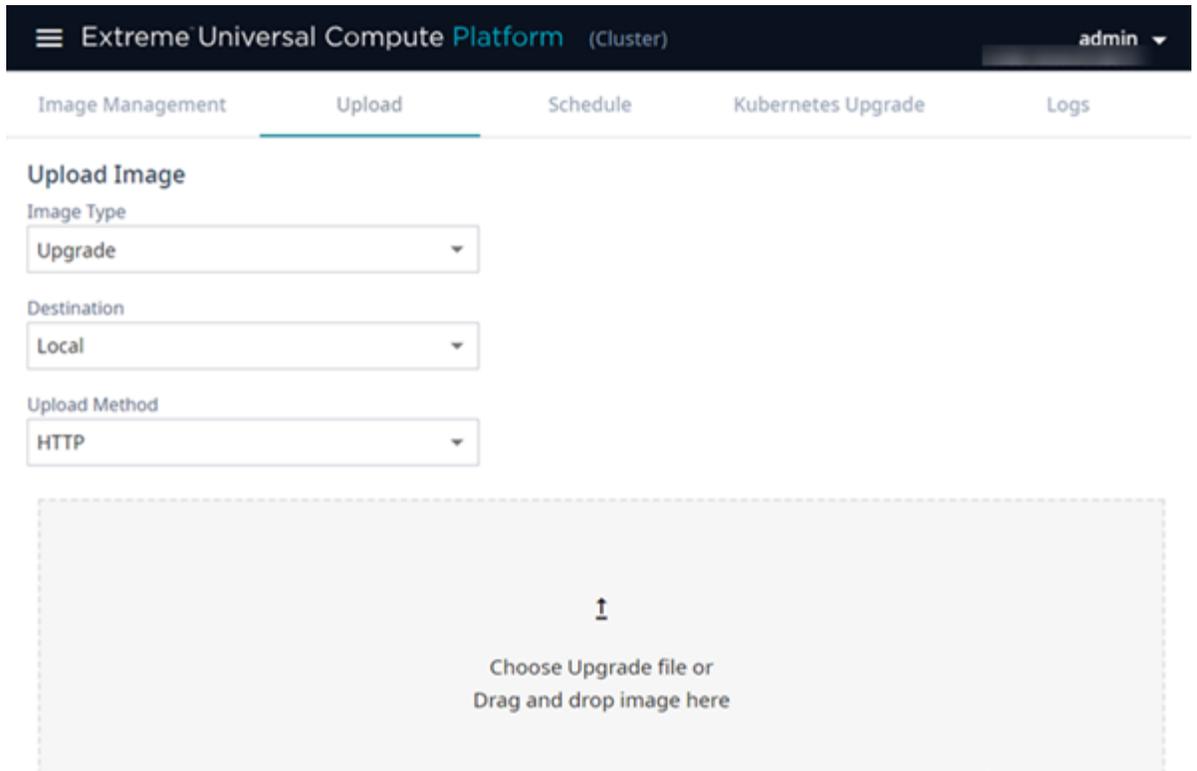


**Figure 5: Select the upgrade image**



**Note**  
The upgrade may take up to five minutes.

- From the **Image Management** Tab, select the Upgrade image, and click **Upgrade**.

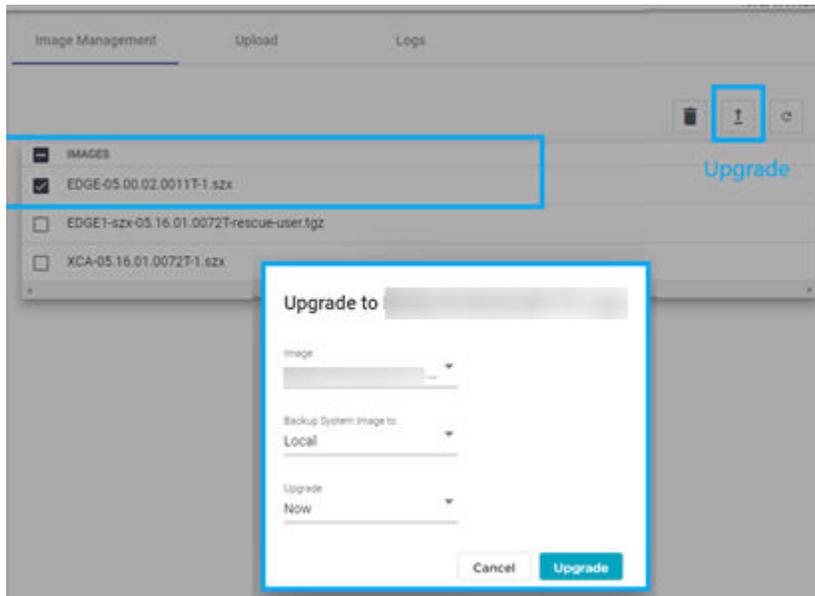

**Figure 6: Upgrade the selected image**

When the cluster is upgraded to the latest revision, proceed to [Validate the Network Address Configuration](#) on page 26.


## Validate the Network Address Configuration

Validate the IP addresses that you configured previously through the Configuration Wizard.

You can configure the engine instance IP address from the initial Configuration Wizard or from the Universal Compute Platform user interface.

To access the network settings in the user interface:

- Go to **Administration > System > Network Setup**.
- Verify the host attributes.

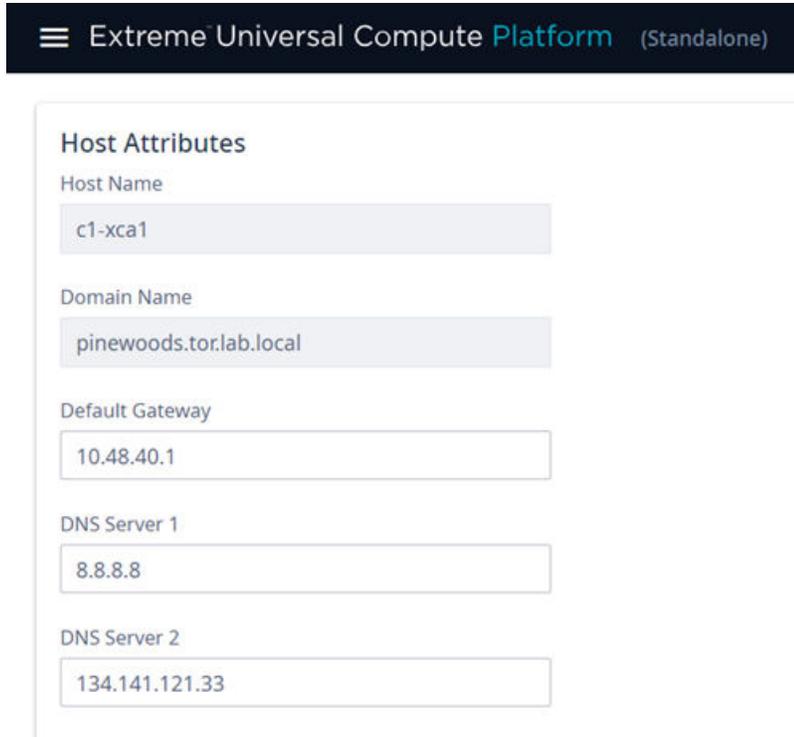

The screenshot shows the configuration interface for the Extreme Universal Compute Platform (Standalone). The title bar is dark blue with a white hamburger menu icon on the left and the text "Extreme Universal Compute Platform (Standalone)" in white. Below the title bar is a white panel titled "Host Attributes". This panel contains several input fields, each with a label above it: "Host Name" with the value "c1-xca1", "Domain Name" with the value "pinewoods.tor.lab.local", "Default Gateway" with the value "10.48.40.1", "DNS Server 1" with the value "8.8.8.8", and "DNS Server 2" with the value "134.141.121.33".

**Figure 7: Network Setup - Host Attributes**

3. Select additional ports as necessary to display and verify the interface settings. If you make any changes to the additional interface settings, select **Save**.



**Note**

Configuring an engine instance IP address for the admin interface of the container application is useful for diagnostic purposes. The web interface can be accessed from the [Engine Settings](#).

Related Topics

[Use the Basic Configuration Wizard](#) on page 18

[\(Optional\) Add a Port](#) on page 27

[Engine Application Settings](#) on page 36

## (Optional) Add a Port

You have the option to add a port interface that provides access to the admin interface of the container application. This can be any data interface on the Universal Compute Platform.




**Note**

After you have defined an engine instance IP address for the container application admin interface, you are able to access that container application from a web browser through the defined IP address.

To add a new port interface, take the following steps:

1. Navigate to **Administration > System > Network Setup**.
2. From the **Interfaces** pane, select **Add New Interface**.
3. Configure the Interface Properties for the port.

Provide a VIP for each engine instance in your deployment.

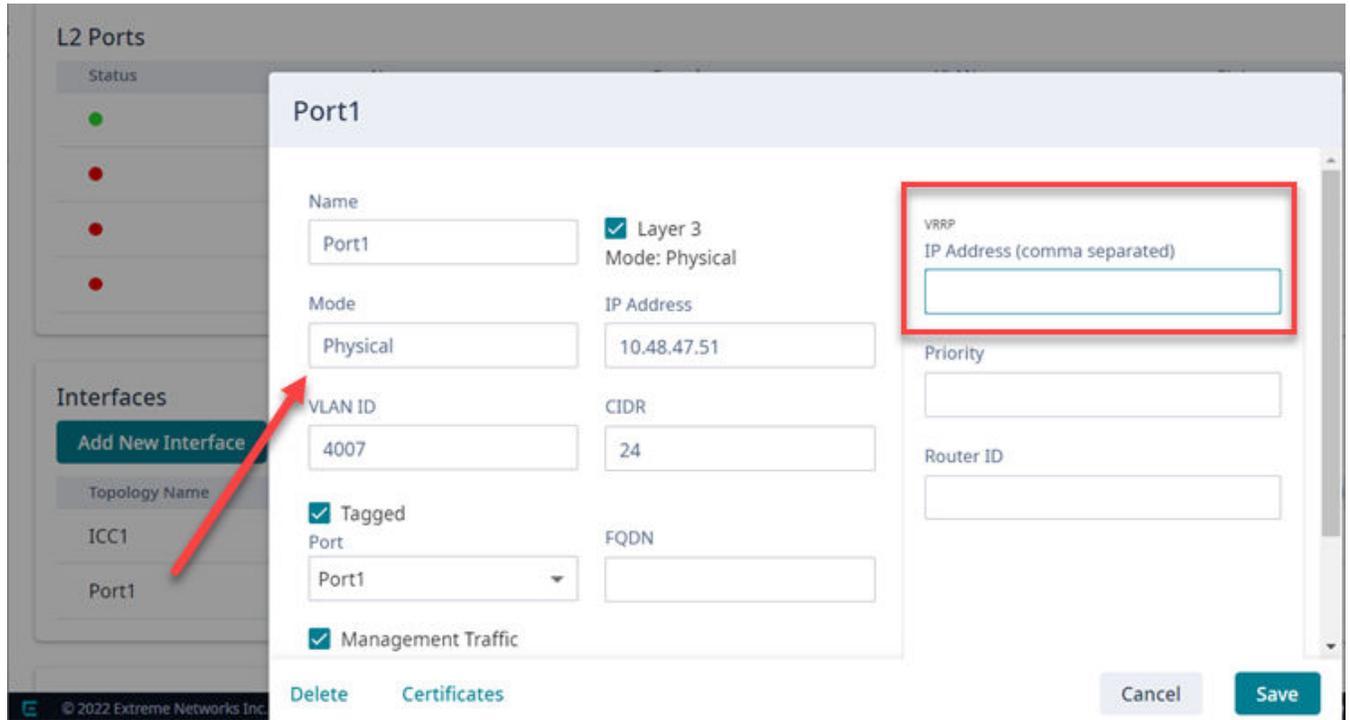

**Figure 8: User Interface showing properties window for New Port**

Related Topics

[Create New Interface Settings](#) on page 28

*Create New Interface Settings*

The following table provides interface properties for the settings in the **Create New Interface** window.

**Table 10: Interface Properties**

Field	Description
Name	Name of the interface.
Mode	Describes how traffic is forwarded on the interface topology. Options are: <ul style="list-style-type: none"><li>• Physical - The topology is the native topology of a data plane and it represents the actual Ethernet ports.</li><li>• Management - The native topology of the Universal Compute Appliance management port.</li></ul>
VLAN ID	ID for the virtual network.

**Table 10: Interface Properties (continued)**


Field	Description
Tagged	Indicates if the interface tags traffic. When traffic is tagged, the VLAN ID is inserted into the packet header to identify which VLAN the packet belongs to. Tagging can identify the port or interface to send a broadcast message to.
Port	Physical port on the Universal Compute Platform for the interface.
Management Traffic	Enable or disable Management Traffic through this interface. Enabling management provides access to SNMP (v1/v2c, v3), SSH, and HTTPs management interfaces.
MTU	Maximum Transmission Unit (MTU). Standard is 1500 bytes. Fixed value.
<b>Layer 3</b>	
IP Address	For an Admin topology, the Layer 3 check box is selected automatically. The IP address is mandatory for a Physical topology. This allows for IP Interface and subnet configuration together with other networking services.
CIDR	CIDR field is used along with IP address field to find the IP address range.
FQDN	Fully-Qualified Domain Name
VRRP	<p>Supports load balancing and high-availability functions for the Universal Compute Platform cluster.</p> <p><b>IP Addresses</b> Record the IP address relationship between the cluster's direct interfaces, VRRP, and external access.</p> <p><b>Priority</b> VRRP uses priority settings as a mechanism to arbitrate mastery of the state of exchanges across members of the cluster.</p> <p><b>Router ID</b> Allows segmentation of a routing domain.</p> <p><b>Note:</b> In a stand-alone configuration, configure priority and router ID with a numeric value. However, in a stand-alone configuration, the specific value is not important. These attribute definitions are important in a multiple-node configuration.</p>

## Configure the Stand-Alone Cluster Settings

An engine is an instance of a containerized application. This process follows the user interface to configure the orchestration engine settings for a stand-alone deployment. From the management IP address, log into the user interface using the admin credentials that you configured under [Use the Basic Configuration Wizard](#) on page 18.

Go to **Cluster Settings > Cluster Configuration** and configure the stand-alone cluster following the order shown on screen:

1. Deployment Type
  2. Cluster Node Information
  3. Pod Network Configuration
  4. Finish
1. Select the **Deployment Type**. For this deployment, select **ExtremeCloud Edge - Self Orchestration**.
  2. In the **Cluster Node Information** section, select **Standalone** mode and click **Next**.
  3. Provide the settings for **Pod Network Configuration**:
    - Pod Network IP Address
    - Pod Network CIDR
    - Service Network IP Address
    - Service Network CIDR

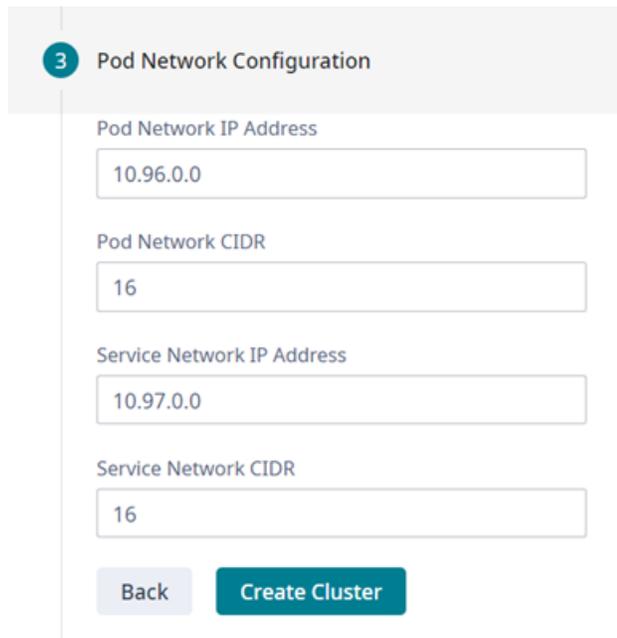

3 Pod Network Configuration

Pod Network IP Address  
10.96.0.0

Pod Network CIDR  
16

Service Network IP Address  
10.97.0.0

Service Network CIDR  
16

Back Create Cluster

**Figure 9: Pod Settings**

4. Select **Create Cluster**.
5. Select **Done**.




**Note**

The cluster state is bound to the IP Address of the ICC interface. If the ICC IP address is changed, the cluster state (even if Stand-Alone) is reset. Cluster configuration will need to be re-initialized and any installed applications will need to be re-installed.

Next, [download the Docker image file](#) to the specified node in the Universal Compute Platform deployment.

Related Topics

[Initial Engine Application Installation](#) on page 32

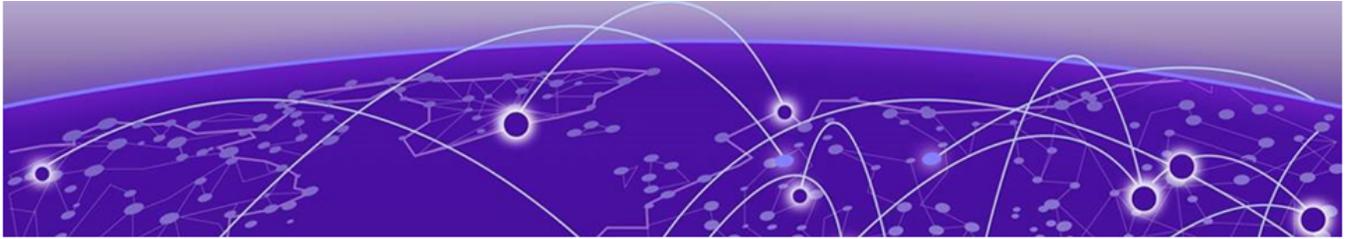

# Initial Engine Application Installation

---

[Download the Extreme Docker Application Image File](#) on page 32

[Upload the Docker Application Image File to the UCP](#) on page 32

[Install an Engine Application](#) on page 33

[Deploy the Application Image File](#) on page 33

Installing an engine application in a Universal Container deployment involves the following tasks:

1. Download the Extreme Docker Application Image File.
2. Upload the Docker Application Image File to the UCP.
3. Install the application engine.
4. Deploy the application Docker image file.

## Download the Extreme Docker Application Image File

---

Download the application Docker image file from the Extreme Networks [support portal](#).

To obtain the Docker image file, go to the Extreme Networks [support portal](#) to download the application Docker image.

For example, from the ExtremeWireless WiNG™ product page, download `cx-9000.tar`.

## Upload the Docker Application Image File to the UCP

---

To upload an engine application Docker image, take the following steps:

1. Go to **Engines > Image Management**.
2. Choose one of the following:
  - Select the **Choose Image File** pane and navigate to the image file. Or,
  - Drag and drop the image file onto the **Image File** pane.

A list of uploaded image files is displayed below the **Choose Image File** pane.

To delete an uploaded image, select the check box next to the image file. Then, select

1. To refresh the image file list, select .

## Install an Engine Application

---

To install the engine application, take the following steps:

1. Go to **Engines > Installation**.
2. From the pane for the application that you want to install, select **Install**.

**Note**

If you have not yet uploaded the application Docker image file, you will be prompted to do so.

**Note**

The installation time will depend on a variety of factors, be prepared for it to take some time.

A confirmation notice is displayed after installation is complete. Only one instance is required for the cluster.


## Deploy the Application Image File

---

After you have uploaded the application image file and installed the application Docker image, deploy the application to a node.

To deploy the application:

1. Go to **Engines > Installation**.
2. Select the engine instance link. For example, "cx9000 #1".
3. Select **Deploy**.
4. Save your changes.

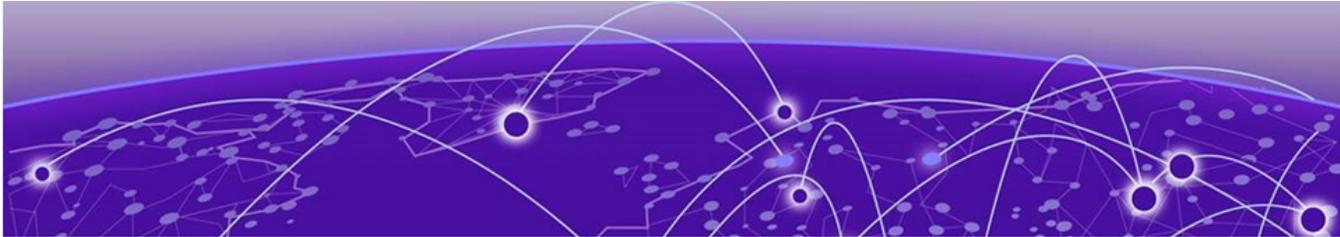

# Engine Upgrades

---

[Upgrade an Application \(Self-Orchestrated\)](#) on page 34

Universal Compute Platform has multiple methods for upgrading container applications. Select the upgrade method that fits your application type:

- **Self-Orchestrated applications**—For self-orchestrated applications that support external upgrades, see [Upgrade an Application \(Self-Orchestrated\)](#) on page 34.
- **Applications with built-in upgrade functionality**—For applications with built-in upgrade functionality, you can upgrade from the application interface. Refer to the application documentation for details.
- **Applications that do not support either upgrade method**—For these applications, uninstall the current image and then install the new image. Note that this method requires you to reconfigure your settings.

## Upgrade an Application (Self-Orchestrated)

---

Use this procedure to upgrade a self-orchestrated engine application from the Universal Compute Platform user interface. This procedure upgrades the application while retaining existing settings.



### Note

You must have the new application image file. For Extreme Networks applications, download the install image from the [Extreme Networks Support Portal](#) and save it to a local drive.

1. Log in to the Universal Compute Platform interface.
2. Upload the new application image file:
  - a. Go to **Engines > Image Management**.  
A list of uploaded images displays under the **Choose Image File** pane.
  - b. To upload the new image, complete either of the following steps:
    - Select **Choose Image File**, then browse to the image file and select it. Or,
    - Drag the image from your local drive and drop it on the **Choose Image File** pane.




### Note

To delete an image file, select the check box next to the image and select



3. Upgrade the application:
  - a. Go to **Engines > Installation**.
  - b. Select the application instance that you want to upgrade.
  - c. Select **Upgrade application**.
  - d. Select **OK**.

Universal Compute Platform creates a new container with the upgraded application image and existing settings. The old container is terminated.

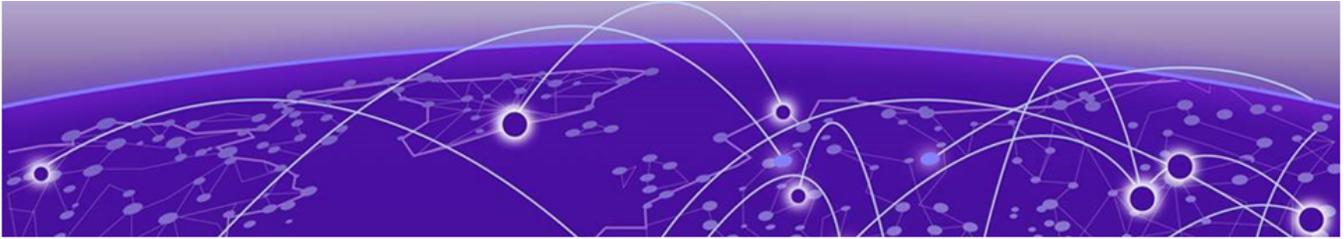

# Engine Application Settings

For each engine instance, select the instance link to configure the application settings and view the following information:

The screenshot shows the configuration page for an ExtremeWireless WiNG instance. The page title is "ExtremeWireless WiNG". Below the title, the following information is displayed:

- Image: cx9000 #1
- Instance: wing-1
- Node: ucp-2.sj.ctc.local
- Port Information: Port1 (Intel 10GBase-T) VF01, Port2 (Intel 10GBase-T) VF01, Port3 (Mellanox QSFP) VF01, Port4 (Mellanox QSFP) VF01

Below this information are four tabs: "Network Service Configuration" (selected), "Statistics", "Logs", and "Console".

Under the "Network Service Configuration" tab, there is a section titled "Assign a Virtual IP Address to the service set". This section contains a table with the following data:

Service Group	Services	Assigned Virtual IP Address
wingsvc	https (443 tcp), ssh (22 tcp)	10.6.7.108

At the bottom of the page, there is a "SAVE" button.

**Figure 10: Example Engine Application Settings**

## Image

Controller image name.

## Instance

Name of the node instance (provided by Universal Compute Platform)

## Instance Web Interface

The assigned IP address of the Engine instance. This option provides the ability to log into the specific Engine instance.

1. Configure the interface from the **Interfaces** pane. Go to **Administration > Network Setup**.

2. Select the configured IP address from the **Assigned Virtual IP Address** field. Note, only IP addresses configured through **Network Setup > Interfaces** will appear in the drop-down list.
3. Log in through the console.

### Network Service Configuration

The mapping of each core service set to the corresponding Virtual Router Redundancy Protocol (VRRP).

VRRP enables a virtual router to act as the default network gateway, improving host network reliability and performance.

### Statistics

Compute statistics and node drive volume statistics are available for CPU usage and memory usage.

### Logs

A log file is available for each node instance. Log entries include the following:


- Timestamp of log entry
- System Component
- Message log level
- Message content

### Console

A live console is available from each engine instance for diagnostics and troubleshooting. To open a live console and connect to a container or virtual machine instance (VMI), from the engine **Console** tab, select **Attach**.

### Related Topics

[\(Optional\) Add a Port](#) on page 27

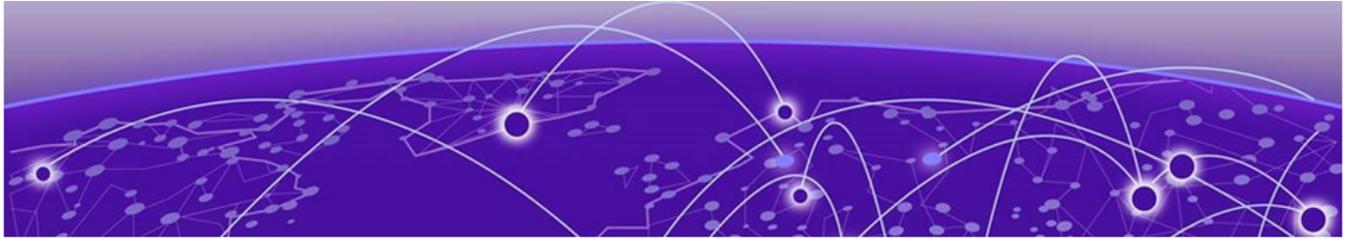

# Onboard Cluster to ExtremeCloud IQ

---

[Onboarding a Cluster to ExtremeCloud IQ](#) on page 38

[Cloud Visibility](#) on page 39



## Note

For Self-Orchestrated deployments, onboarding to ExtremeCloud IQ is optional. Use the topics in this section only if you plan to onboard to ExtremeCloud IQ.

After the Universal Compute Platform cluster is installed, associate the node cluster with your ExtremeCloud IQ account:

1. Onboard the cluster to your ExtremeCloud IQ account. See [Onboarding a Cluster to ExtremeCloud IQ](#) on page 38.
2. Onboard your devices and operate the account.


## Onboarding a Cluster to ExtremeCloud IQ

---

To onboard a Universal Compute Platform cluster into ExtremeCloud IQ use the ExtremeCloud IQ Quick Add function:

1. From the ExtremeCloud IQ main navigation pane, select  (Manage), and then select **Devices**.
2. Select  (**Add**) and then select **Quick Add Devices > Manage your devices directly from the cloud**.

- In the **Serial Number** field, enter the serial number for one node in the cluster.

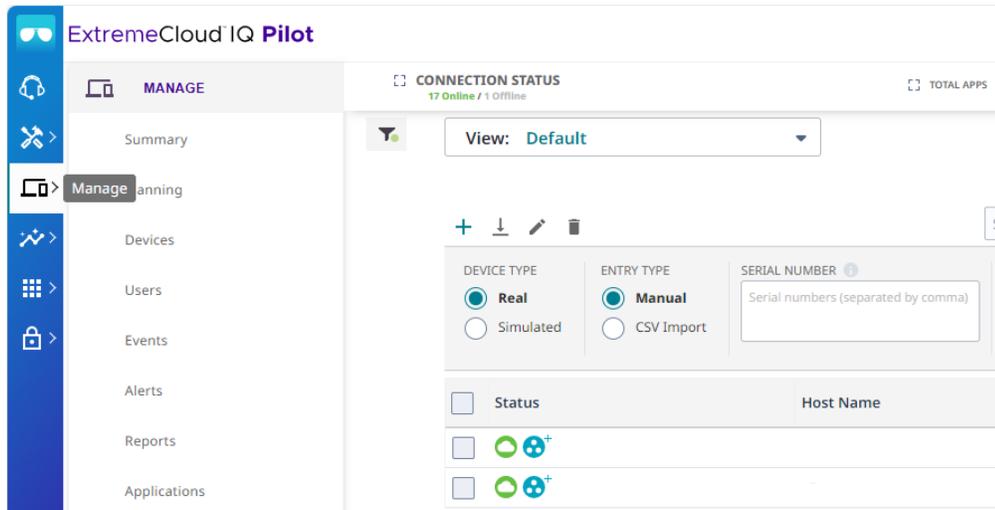

**Figure 11: Add Cluster to ExtremeCloud IQ**

The **Device Make** field displays.

- From the **Device Make** menu, select **Universal Appliance**.
- Select **Add Devices**.

The full cluster is added based on the serial number of a single node in the cluster.



**Note**


To view details about the cluster, select the **Host Name** link.

## Cloud Visibility

If your deployment is onboarded to ExtremeCloud IQ, you can view the cloud address from **Administration > System > Settings**. This page populates automatically when you onboard the cluster to ExtremeCloud IQ. For example, the URL may look like:

<RDC name>-cw.extremecloudiq.com where:

- <RDC name> is your Regional Data Center (RDC) information available under **About ExtremeCloud IQ**.
- cw indicates a Universal Compute Platform appliance.
- .extremecloudiq.com is the ExtremeCloud IQ host address.

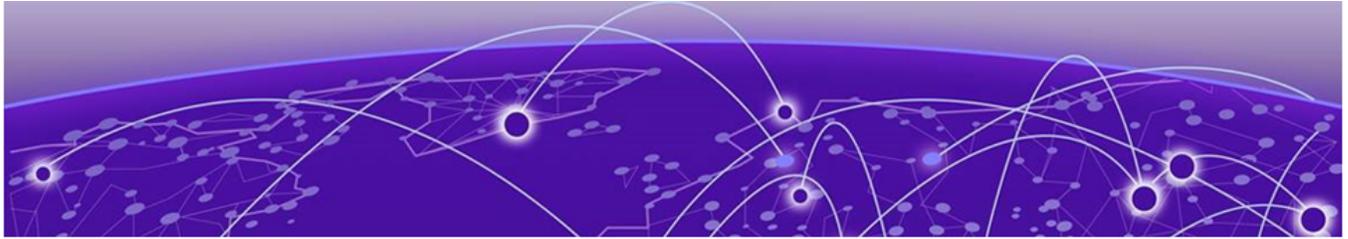

# Index

---

## A

abstract v  
announcements 8, 9

## C

cloud visibility 39  
cluster  
    prerequisites 10  
cluster settings  
    configure 29  
container engine application settings 36  
conventions  
    notice icons 6  
    text 6

## D

deploying Stand-alone Universal Containers 10  
documentation  
    feedback 9  
    location 7, 8

## E

ExtremeCloud IQ 39

## F

feedback 9  
firewall requirements 14

## H

hardware support 12

## I

install a container 32  
Interface Properties 28  
internet connections 14  
IP addresses  
    configuration 26  
    reserving private network segments 13

## K

Kubernetes  
    reserving private network segments 13

## M

management interface  
    console port 16  
    management port configuration 17

## N

notices 6

## O

onboard the cluster 38  
onboarding  
    cluster 38

## P

port requirements 14  
ports  
    adding 27  
product announcements 8, 9

## S

support, *see* technical support

## T

technical support  
    contacting 8, 9

## U

Universal Container  
    install 32  
upgrade application  
    self-orchestrated 34  
upgrading  
    appliance middleware 22

## V

Virtual Router Redundancy Protocol (VRRP)  
    configuration 13, 14

## W

warnings 6