



Extreme AirDefense v10.6.2 User Guide

Configuration, Management, and Alarm Monitoring

9037798-01 Rev. AC
March 2026



Copyright © 2026 Extreme Networks, Inc. All rights reserved.

Legal Notice

Extreme Networks, Inc. reserves the right to make changes in specifications and other information contained in this document and its website without prior notice. The reader should in all cases consult representatives of Extreme Networks to determine whether any such changes have been made.

The hardware, firmware, software or any specifications described or referred to in this document are subject to change without notice.

Trademarks

Extreme Networks and the Extreme Networks logo are trademarks or registered trademarks of Extreme Networks, Inc. in the United States and/or other countries.

All other names (including any product names) mentioned in this document are the property of their respective owners and may be trademarks or registered trademarks of their respective companies/owners.

For additional information on Extreme Networks trademarks, see: <https://www.extremenetworks.com/about-extreme-networks/company/legal/trademarks>

Open Source Declarations

Some software files have been licensed under certain open source or third-party licenses.

End-user license agreements and open source declarations can be found at: <https://www.extremenetworks.com/support/policies/open-source-declaration/>

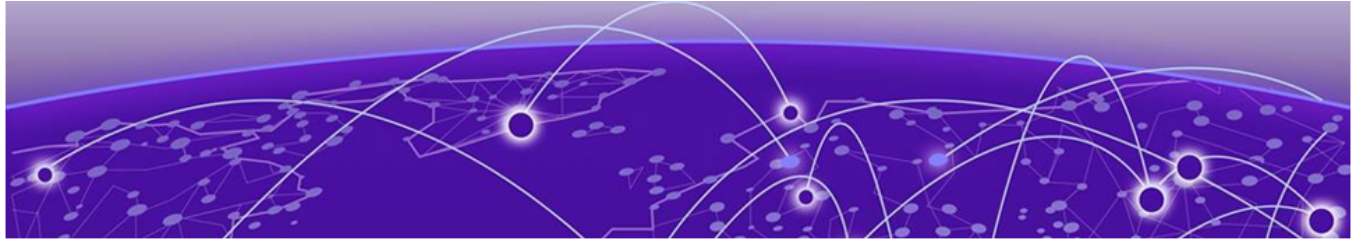


Table of Contents

Abstract.....	x
Revision History.....	xi
Preface.....	12
Conventions.....	12
Text Conventions.....	12
Terminology.....	14
Send Feedback.....	14
Help and Support.....	14
Subscribe to Product Announcements.....	15
Documentation and Training.....	15
Open Source Declarations.....	15
Training.....	16
Introduction.....	17
Scope of Documentation.....	17
Extreme AirDefense New User Experience.....	19
Login to ADSP.....	20
Logout of AirDefense.....	21
Setup Wizard.....	22
Download ADSP Toolkit.....	23
Download Toolkit from New User Interface.....	24
Launch the Old User Interface.....	25
Dashboard.....	26
View Dashboard.....	26
Set a Favorite Dashboard.....	27
Create a Dashboard.....	28
Manage Your Dashboard.....	32
Delete the Dashboard.....	34
Dashboard Widgets.....	35
WIPS Widgets.....	36
STATs Widgets.....	43
COMPLIANCE Widgets.....	48
Network View.....	50
Network Snapshot.....	50
Network Tree View.....	50
Details View.....	51
Device Details Screen.....	53
Network View - Network Snapshot.....	54
Top 5 Security Threats.....	55
Alarms and Actions.....	55

Polled Devices.....	55
Sensed Devices.....	56
Network Pane - Details View.....	56
Network Pane - Device Details.....	57
Device Details - Toolbar.....	59
Device Type Details.....	61
Alarms View.....	100
Alarm Actions.....	100
Alarms Details.....	101
Alarms Raised	102
Alarm Details Drill Down.....	102
Alarms - Alarms Summary.....	102
Alarms - Details View.....	103
Alarms Widget View.....	104
Alarm Type Widget.....	104
Top 5 Security Alarms Widget.....	104
Top 5 Criticalities Widget.....	105
Alarm Severity.....	105
Alarm Details List.....	105
Alarm Actions.....	108
Configuration.....	111
Appliance Management.....	113
Appliance Settings.....	113
Backup / Restore Status.....	115
Certificate / Key Validation.....	116
Certificate Manager.....	117
Configuration Backup.....	130
Configuration Clear.....	134
Configuration Restore.....	136
Download Logs.....	137
View Performance Statistics.....	140
Language.....	140
Login / SSH Banners.....	141
Redundant Appliance Sync.....	143
Structure Configuration.....	146
Triangulation Considerations	147
Policy Considerations	148
UI Scope Considerations	148
View And Manage Your Network Tree.....	148
Generate a Network Tree.....	150
Import the Network Tree.....	151
Floor Plans.....	152
Auto-Placement Rules.....	157
Auto-Placement Rules for Sensors.....	157
Auto-Placement Rules for Access Points and Switches	158
View Auto-Placement Rules.....	159
Add an Auto-Placement Rule.....	160
Edit an Auto-Placement Rule.....	162

Discovery Profile and Polling Configuration.....	163
Discovery Profile.....	164
Polling Configuration.....	170
Communication Profile.....	174
Overriding Configuration Settings.....	175
View Communication Profiles	175
Add a Communication Profile.....	177
Edit the Communication Profile.....	181
Delete Communication Profiles	182
Security Profile.....	183
Overriding Configuration Settings.....	183
Automatically-created Security Profiles on XIQ Import.....	184
View Security Profile.....	185
Add a Security Profile.....	188
Edit a Security Profile.....	193
Delete a Security Profile	195
Alarm Action Manager.....	196
View Alarm Action Manager Rule Set	197
Add Alarm Action Manager Rule Set.....	200
Edit Alarm Action Manager Rule Set.....	216
Delete Alarm Action Manager Rule Set.....	217
Device Action Manager.....	218
View Device Action Manager Rule Set.....	219
Add a Device Action Manager Rule Set.....	221
Apply or Run the Device Action Manager Rule Sets.....	248
Sensor Manager.....	250
Operation Tab.....	251
Settings Tab.....	251
Overriding Configuration Settings.....	251
Operation Tab.....	252
Settings Tab.....	256
Alarm Configuration.....	262
Wired Network Monitoring	266
Network PCI Compliance Monitoring.....	267
Overriding Configuration Settings.....	268
Performance Profile.....	269
View Performance Profile.....	269
Add Performance Profile.....	270
Apply Performance Profile.....	282
Environment Monitoring.....	283
Apply Environment Monitoring Configuration.....	284
Overriding Configuration Settings.....	284
Client Types.....	285
Manage Client Types.....	285
Appliance Settings.....	286
Device Age Out.....	289
Configuration Backup.....	290
How Backups Work.....	291
View Backup Schedules.....	292

Scheduling Configuration Backup.....	292
Forensic and Log Backup.....	296
Forensic Backup Configuration.....	298
Log Backup Configuration.....	299
Configuration Restore.....	302
Download Logs.....	303
Forensic and Log Backup.....	305
Redundant Appliance Synchronization.....	307
How Synchronization Works.....	307
Synchronization Rules.....	308
.....	308
Automatic Synchronization.....	308
Appliance Replacement Considerations.....	311
Configuration Clear.....	312
Configurations.....	313
Language Settings.....	314
Change the Language.....	315
License Management.....	315
Overriding License Assignments.....	319
Auto Reassignment.....	319
Auto License Management.....	320
Add Licenses.....	322
Manage License Manually.....	323
User Management.....	326
Manage User Accounts.....	328
User Group Management.....	338
User Profile Management.....	345
Remote Profile Management	351
Add Remote Profile	351
Edit Remote Profile.....	355
Delete Remote Profile	355
System Settings.....	356
Data Format.....	357
Severity Levels.....	357
Add System Log Server IP Address.....	357
System Overview.....	359
Extreme AirDefense in Standalone Mode.....	360
System Components.....	360
System Requirements.....	361
Supported Hardware Appliances.....	361
Supported Browsers.....	362
Supported Operating Systems.....	362
Version Compatibility for Upgrade.....	362
Version 9.5.....	362
WiNG Version Compatibility.....	362
Extreme Wireless Version Compatibility.....	363
Extreme Cloud Appliance Compatibility.....	363
Connecting to Hardware Appliance.....	363
Connect a Laptop.....	363

Connect a Monitor and Keyboard.....	363
Access Appliance Remotely.....	363
Configuring the Appliance.....	364
Add-On Modules.....	364
Hardware Dependencies.....	365
System Configuration.....	365
Selecting and Deploying APs and Sensors.....	366
Supported APs.....	366
Off-Channel Scanning (OCS).....	366
Setting Up APs and Sensors.....	367
Connecting to the Network.....	367
Assigning User Interfaces.....	367
Default Login.....	368
User Accounts.....	368
User Types.....	369
System Access Limitations.....	369
Basic Navigation.....	369
Tree Structure.....	370
Device Search.....	370
Filters.....	370
Dashboard Drill Down.....	371
Alarm Time Reporting.....	371
Extreme AirDefense on Virtual Platform.....	372
Prerequisites.....	372
Required Files.....	372
Required License.....	373
Required System Configuration.....	373
Installing Extreme AirDefense on VMware.....	373
Install Extreme AirDefense on Xen Hypervisor.....	382
Legacy Content.....	384
Menu.....	384
Installing the Toolkit.....	385
Open.....	386
Forensic Analysis-Basic.....	387
Advanced Forensic Analysis.....	391
Action Control.....	392
Reports.....	394
Report Builder.....	395
Scheduled AP Tests.....	405
Scheduled Vulnerability Assessment.....	408
Scheduled Events.....	411
Add Devices.....	413
Import and Discovery.....	419
Bluetooth Monitoring.....	429
AirDefense Dashboard.....	430
The Dashboard.....	430
Selecting Dashboard Scope.....	432
Customizing Dashboard Views.....	433

Dashboard Components.....	435
Network Tab.....	438
Select-Network View.....	439
Network Devices.....	440
Association Tree.....	447
Network Graph.....	448
Network Filters.....	450
Actions Menu.....	465
Actions Descriptions.....	467
Advanced Search.....	474
Alarms.....	476
Alarms Tab.....	476
Alarm Table.....	478
Alarm Filters.....	478
Alarm Categories and Criticality.....	486
Alarm Details.....	487
Alarm Actions.....	488
AirDefense Alarm Model.....	489
Configuration Tab.....	491
Search.....	492
Appliance Platform.....	493
Security & Compliance.....	531
Network Assurance.....	535
Operational Management.....	550
Appliance Management.....	631
Account Management.....	663
Drop-down Menu Access.....	685
Security.....	792
WIPS.....	792
Planning Your Sensor Deployment.....	793
Physical and Electromagnetic Interference.....	793
Planning Your Sensor Placement.....	796
Sensor Monitoring.....	800
Vulnerability Assessment.....	800
WEP Cloaking.....	802
ADSPAdmin.....	805
Accessing the ADSPAdmin Console.....	805
Manage System.....	806
Manage the Database.....	807
Software.....	807
Configure AirDefense.....	807
Troubleshooting.....	814
AP Testing.....	814
Live RF.....	814
Forensic RF.....	815
Spectrum Analysis.....	816
Advanced Spectrum Analysis.....	817
Advanced Troubleshooting.....	819
Assurance Suite (Network Assurance).....	819


Radio Share Network Assurance.....819

Customer Support.....820

AirDefense Icons.....820


AirDefense Application Icons.....820

Wireless Client Icons.....826

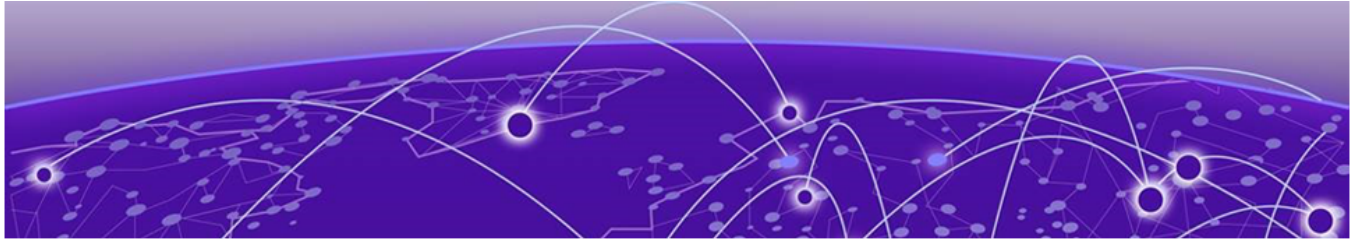

Abstract


This user guide for Extreme AirDefense version 10.6.2 provides comprehensive technical instructions for configuring, managing, and monitoring wireless network security using the standalone AirDefense appliance. It introduces a desktop-oriented user interface with customizable dashboards. Key features include wireless intrusion prevention (WIPS), rogue device detection, Bluetooth threat analysis, PCI compliance monitoring, and detailed device classification across polled, sensed, and unknown categories. The guide outlines configuration procedures for appliance settings, network structure, auto-placement rules, SNMP-based device discovery, and communication/security profiles. It details alarm and device action management using rule-based automation for mitigation, diagnostics, and reporting. Advanced capabilities include spectrum analysis, vulnerability assessments, forensic logging, and redundant appliance synchronization. The document supports administrators with step-by-step guidance on licensing, user management, backup/restore operations, and performance/environment monitoring, and is compatible with ExtremeCloud IQ integrations and multiple OS/browser platforms. Revision AC updates the guide to remove support for Connection Troubleshooting and features minor edits to title and formatting.

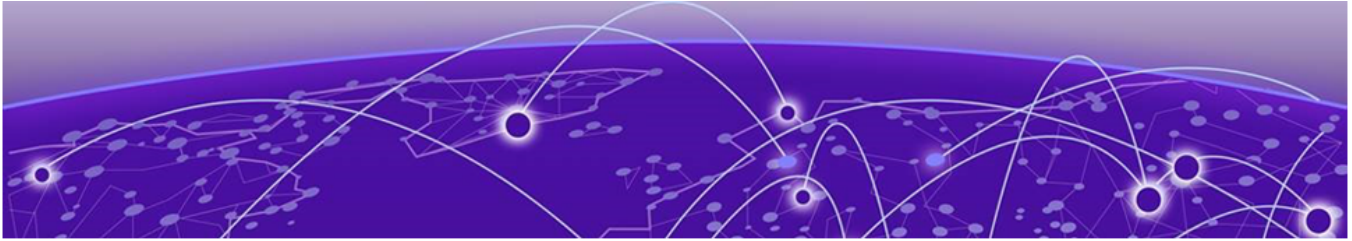

Revision History

This topic describes the revision history for this document.

Date	Revision	Description
April 2024	AA	Initial publish
March 2026	AB	Updated document to highlight that Connection Troubleshooting is no longer supported. Throughout the document, either removed mention of the feature or added a Note that indicate that the feature is not supported.
March 2026	AC	Updated title and formatting

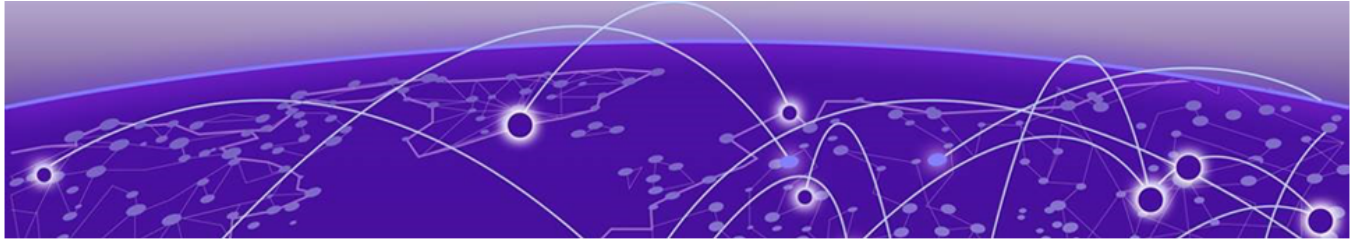

Preface

Read the following topics to learn about:

- The meanings of text formats used in this document.
- Where you can find additional information and help.
- How to reach us with questions and comments.

Conventions

To help you better understand the information presented in this guide, the following topics describe the formatting conventions used for notes, text, and other elements.

Text Conventions

Unless otherwise noted, information in this document applies to all supported environments for the products in question. Exceptions, like command keywords associated with a specific software version, are identified in the text.

When a feature, function, or operation pertains to a specific hardware product, the product name is used. When features, functions, and operations are the same across an entire product family, such as Extreme Networks switches, the product is referred to as *the switch*.

Table 1: Notes and warnings

Icon	Notice type	Alerts you to...
	Tip	Helpful tips and notices for using the product
	Note	Useful information or instructions
	Important	Important features or instructions

Table 1: Notes and warnings (continued)

Icon	Notice type	Alerts you to...
	Caution	Risk of personal injury, system damage, or loss of data
	Warning	Risk of severe personal injury

Table 2: Text

Convention	Description
screen displays	This typeface indicates command syntax, or represents information as it is displayed on the screen.
The words <i>enter</i> and <i>type</i>	When you see the word <i>enter</i> in this guide, you must type something, and then press the Return or Enter key. Do not press the Return or Enter key when an instruction simply says <i>type</i> .
Key names	Key names are written in boldface, for example Ctrl or Esc . If you must press two or more keys simultaneously, the key names are linked with a plus sign (+). Example: Press Ctrl+Alt+Del
<i>Words in italicized type</i>	Italics emphasize a point or denote new terms at the place where they are defined in the text. Italics are also used when referring to publication titles.
NEW!	New information. In a PDF, this is searchable text.

Table 3: Command syntax

Convention	Description
bold text	Bold text indicates command names, keywords, and command options.
<i>italic text</i>	Italic text indicates variable content.
[]	Syntax components displayed within square brackets are optional. Default responses to system prompts are enclosed in square brackets.
{ x y z }	A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options.
x y	A vertical bar separates mutually exclusive elements.
< >	Nonprinting characters, such as passwords, are enclosed in angle brackets.

Table 3: Command syntax (continued)

Convention	Description
...	Repeat the previous element, for example, <i>member[member...]</i> .
\	In command examples, the backslash indicates a “soft” line break. When a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash.

Terminology

When features, functionality, or operation is specific to a device family, such as ExtremeSwitching, the family name is used. Explanations about features and operations that are the same across all product families simply refer to the product as the *device*.

Send Feedback

The User Enablement team at Extreme Networks has made every effort to ensure that this document is accurate, complete, and easy to use. We strive to improve our documentation to help you in your work, so we want to hear from you. We welcome all feedback, but we especially want to know about:

- Content errors, or confusing or conflicting information.
- Improvements that would help you find relevant information.
- Broken links or usability issues.

To send feedback, email us at Product-Documentation@extremenetworks.com.

Provide as much detail as possible including the publication title, topic heading, and page number (if applicable), along with your comments and suggestions for improvement.

Help and Support

If you require assistance, contact Extreme Networks using one of the following methods:

Extreme Portal

Search the GTAC (Global Technical Assistance Center) knowledge base; manage support cases and service contracts; download software; and obtain product licensing, training, and certifications.

The Hub

A forum for Extreme Networks customers to connect with one another, answer questions, and share ideas and feedback. This community is monitored by Extreme Networks employees, but is not intended to replace specific guidance from GTAC.

Call GTAC

For immediate support: (800) 998 2408 (toll-free in U.S. and Canada) or 1 (408) 579 2800. For the support phone number in your country, visit www.extremenetworks.com/support/contact.

Before contacting Extreme Networks for technical support, have the following information ready:

- Your Extreme Networks service contract number, or serial numbers for all involved Extreme Networks products
- A description of the failure
- A description of any actions already taken to resolve the problem
- A description of your network environment (such as layout, cable type, other relevant environmental information)
- Network load at the time of trouble (if known)
- The device history (for example, if you have returned the device before, or if this is a recurring problem)
- Any related RMA (Return Material Authorization) numbers

Subscribe to Product Announcements

You can subscribe to email notifications for product and software release announcements, Field Notices, and Vulnerability Notices.

1. Go to [The Hub](#).
2. In the list of categories, expand the **Product Announcements** list.
3. Select a product for which you would like to receive notifications.
4. Select **Subscribe**.
5. To select additional products, return to the **Product Announcements** list and repeat steps 3 and 4.

You can modify your product selections or unsubscribe at any time.

Documentation and Training

Find Extreme Networks product information at the following locations:

[Current Product Documentation](#)

[Release Notes](#)

[Hardware and Software Compatibility](#) for Extreme Networks products

[Extreme Optics Compatibility](#)


[Other Resources](#) such as articles, white papers, and case studies

Open Source Declarations

Some software files have been licensed under certain open source licenses. Information is available on the [Open Source Declaration](#) page.

Training

Extreme Networks offers product training courses, both online and in person, as well as specialized certifications. For details, visit the [Extreme Networks Training](#) page.

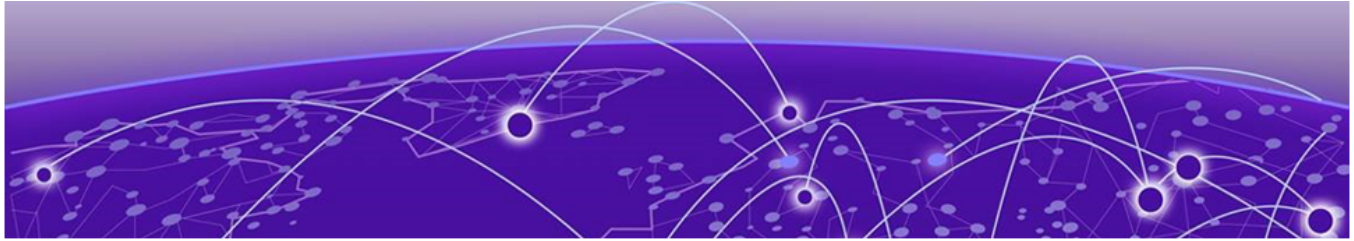

Introduction

[Scope of Documentation](#) on page 17

This guide is designed to help you use the Extreme AirDefense® (AirDefense) version 10.6. AirDefense is designed to protect your network from wireless threats and attacks, maximize your wireless network performance and enforce policy compliance. As a standalone platform, AirDefense is part of a system that includes the AirDefense appliance. The AirDefense appliance comes ready with the application and all supporting software preloaded.

AirDefense enables you to administer and configure your network efficiently using our detailed dashboards and the network and alarms views. Use the floor plan configuration to locate devices in your floor plan.



Note

The old user interface is still available for use and can be launched from within the new user interface.

This guide is intended for information security administrators and people who are responsible for reporting on and analyzing wireless LAN data.

Scope of Documentation


This guide covers the following Extreme AirDefense features:

- AirDefense New User Experience
 - Dashboard
 - Network
 - Alarms
 - Configuration
- AirDefense Old User Interface
 - Appliance Configuration
 - Operational Configuration
 - Device Management
 - Alarm Management
 - Network Security
 - WLAN Management

- Troubleshooting
- Managing Multiple Appliances

This guide does not cover initial hardware installation or the basic device configuration you need to perform to get the appliance up and running. For hardware installation instructions, see the *Extreme AirDefense 10.4 Appliance Installation Guide* available at the following URL:

[Extreme Networks Documentation Site](#)

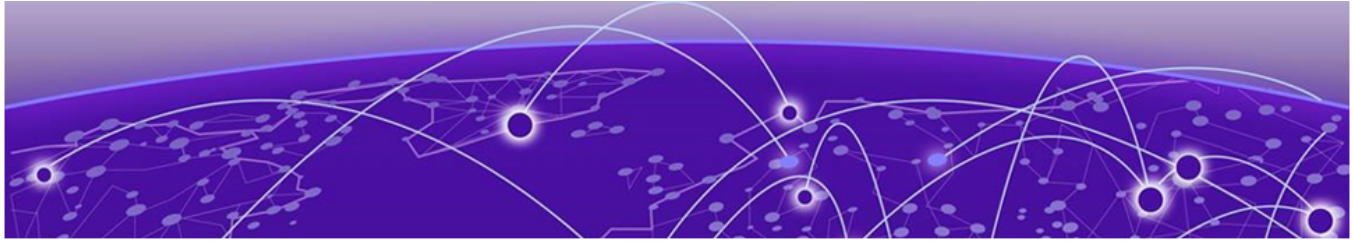

Extreme AirDefense New User Experience

[Login to ADSP](#) on page 20

[Setup Wizard](#) on page 22

[Download ADSP Toolkit](#) on page 23

[Launch the Old User Interface](#) on page 25

Extreme AirDefense's upgraded user interface provides a desktop oriented workflow for managing your AirDefense monitored network . This new user interface, with its fully customizable dashboard, alarms and network views, is now enhanced with a set of configuration screens that enable you to configure your AirDefense monitored network.

AirDefense also retains the original user interface for those users who would prefer to use it. This user interface can be launched at any time from within the new user interface. When launched, the original user interface is displayed in a new browser tab and is independent of the new interface.

The following views are available:

- Dashboard
- Network View
- Alarm View
- Configuration View

The **Dashboard** view is fully customizable and provides you with a large set of widgets that you can use in your dashboards to get a deeper insight into your AirDefense managed network. You can create any number of dashboards containing only those widgets that display the data that interests you. See the topic [Dashboard](#) to learn more about AirDefense dashboards.

The **Network** view provides a deep insight into the state of your network. Multiple screens enable you to drill down to view the statistics and state of individual devices that are a part of your network while retaining the ability to keep an eye on the overall state of the whole network. See the topic [Network View](#) to learn more about AirDefense's new Network view.

The **Alarm** view displays comprehensive information about alarms seen in your network. Multiple screens enable you to drill down to view details about each alarm

and to take appropriate actions to mitigate risks indicated by these alarms. See the topic [Alarms](#) to learn more about AirDefense's new Alarms view.

The **Configurations** view displays the various AirDefense parameters that can be set using this user interface. The following top level configuration settings can be managed:

- Rules / Profile Settings - You can configure *Auto Placement*, *Discovery/Polling*, and *Communication Profile* from this configuration settings menu item.
- Operational Settings - You can configure *Sensor* and its other settings from this configuration menu item.
- General Settings - You can configure AirDefense's network tree *Structure*, *License* from this configuration settings menu item. You can also create and manage *Users* from within this settings group. The *System Settings* screen enables you to configure a remote syslog server where you can record any user activity on this AirDefense instance.

See the topic [Configuration](#) to learn more about configuring your AirDefense system.

Login to ADSP

With the introduction of the new user experience, the way you login to AirDefense has been updated to reflect the style of the new interface.

To login to your AirDefense installation's web interface, enter the IP address of the AirDefense server in a browser window. The **AirDefense Login** screen displays.


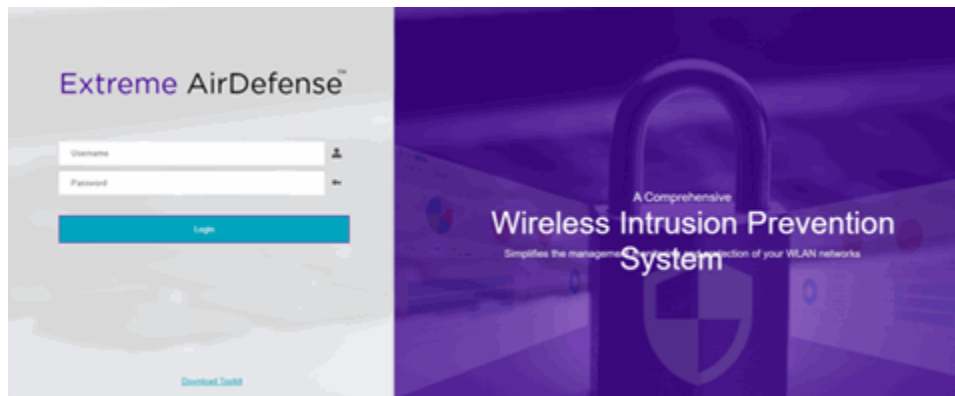


Figure 1: AirDefense Login Screen

1. Enter your username in the **Username** field.
2. Enter the password in the **Password** field. This password must be the one that is appropriate for the username entered in the **Username** field.

- Click the **Login** button.


On providing the correct credentials for your account, the default **Dashboard** for your account is displayed.

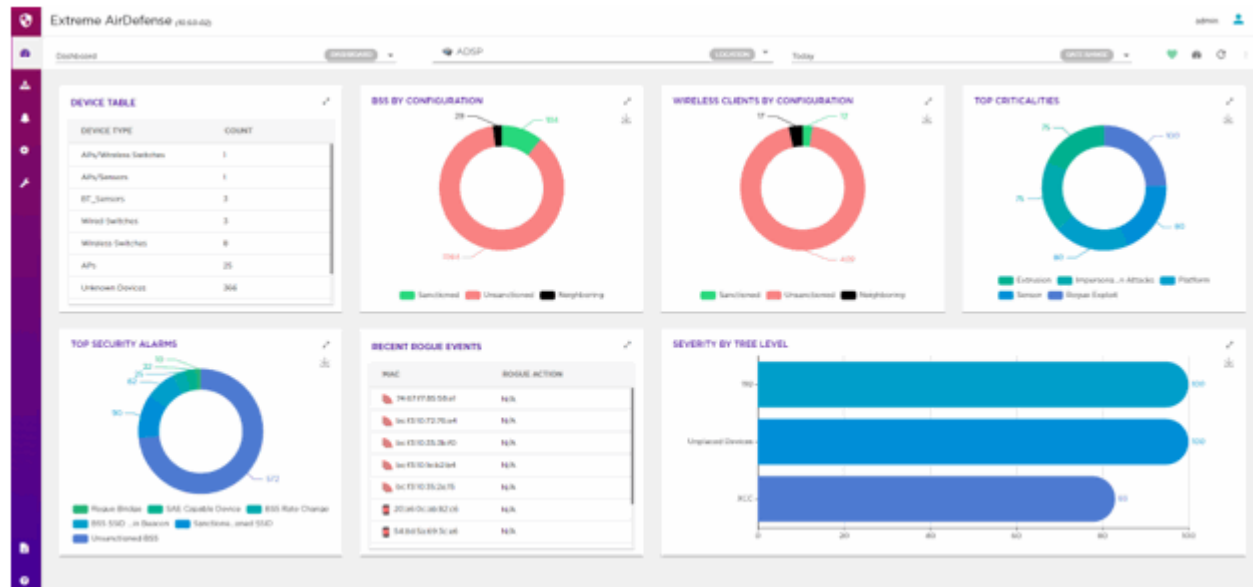


Logout of AirDefense

To logout of the new user interface:

- Select the  icon located to the top right of the user interface. A drop-down menu displays.

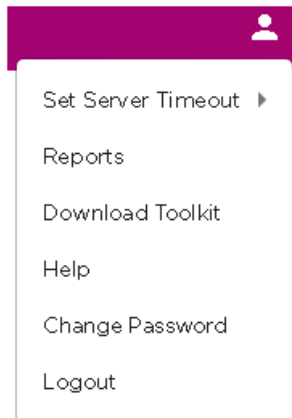


- Select the **Logout** menu item. A confirmation dialog displays.

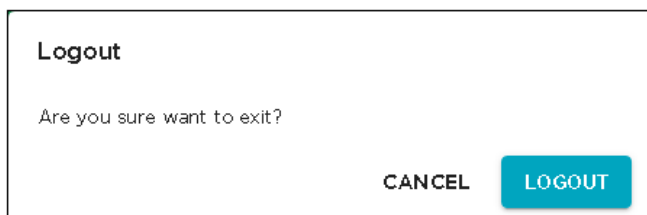

3. Select **Yes** to exit out of the AirDefense user interface.

You are immediately logged out of the user interface and the AirDefense login screen displays.

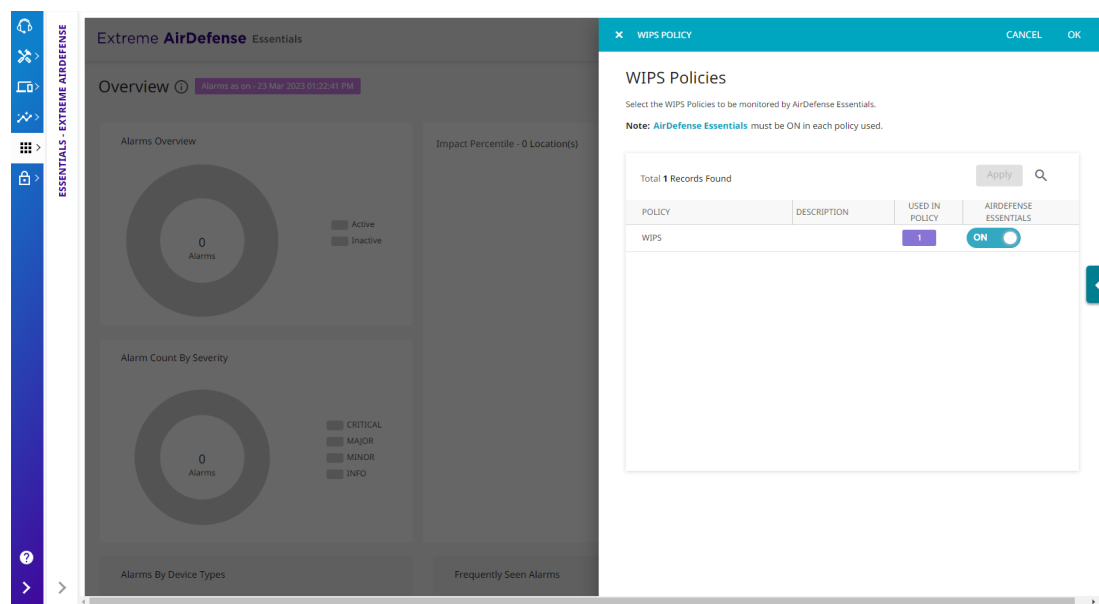


Select **No** to remain within the user interface and not logout of it.

Setup Wizard

At first login, Extreme AirDefense directs you to the setup wizard. Use the wizard to configure the system, import floor plans, and place your access points.

You can also select **Do it Later** from the **Configuration Modes** screen, which skips the wizard, letting you set up polling manually. You can also choose this option if you want to import your configuration from ExtremeCloud IQ Controller, which supports the automatic download of tree nodes, floor plans, and access point placements into AirDefense.

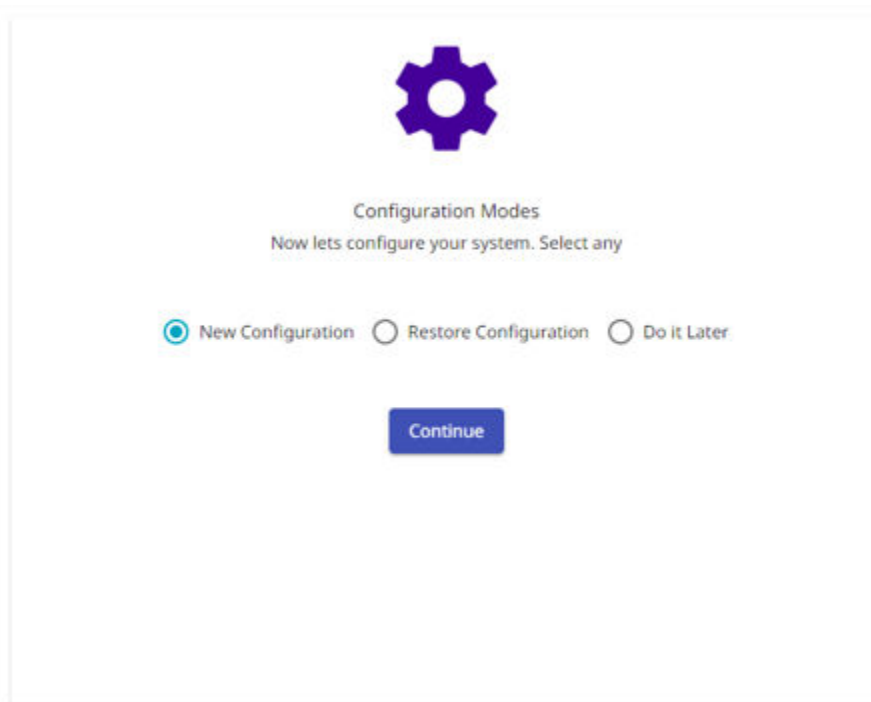


Download ADSP Toolkit

AirDefense Toolkit is a set of utilities for managing an AirDefense instance. The following operating systems can be used to install the AirDefense toolkit


- Window 7
- Windows 10 Enterprise
- Linux
- Apple Mac (Thin Client Applications only)

To download the AirDefense Toolkit:

1. From the login screen, select the **Download Toolkit** link located at the bottom of the screen.

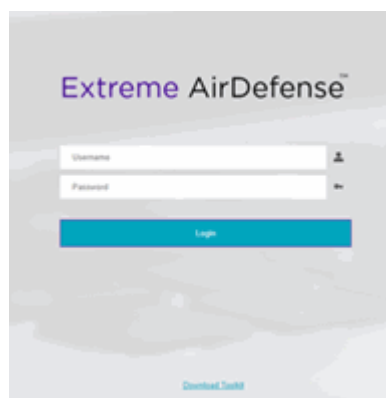

The **Download Toolkit** dialog displays.

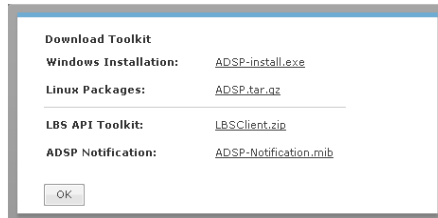


2. From the **Download Toolkit** dialog, select the appropriate download file for your operating system.
3. Once you have downloaded the toolkit and other tools from the dialog box, select the **OK** button to close the dialog.


Download Toolkit from New User Interface

To download the Extreme AirDefense Toolkit from within the new user interface:

1. Select the  icon located to the top right of the user interface.
A drop-down menu displays.

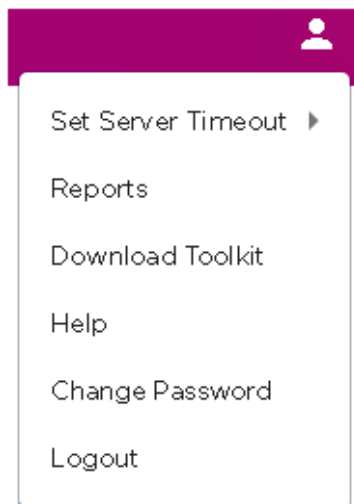

2. Select the **Download Toolkit** menu item.
The **Download Toolkit** dialog displays.

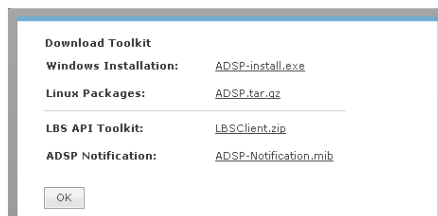


3. From the **Download Toolkit** dialog, select the appropriate download file for your operating system.
4. Once you have downloaded the toolkit and other tools from the dialog box, select the **OK** button to close the dialog.

Launch the Old User Interface

AirDefense has retained the old user interface for those users who would prefer using it. This user interface is launched from within the new user interface. When launched, the old user interface displays in a new browser tab. This tab is independent of the new interface. You need not login again.


To launch the old user interface:


1. From within the new user interface, select the menu  icon located at the top right of your dashboard to expand the list of functions:

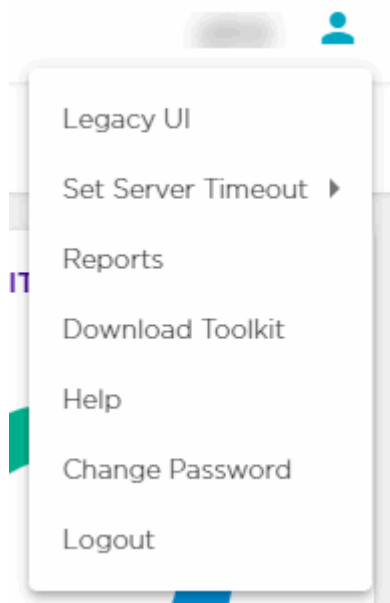

2. Select the Legacy UI from the menu.

A new browser tab opens and the AirDefense default **Dashboard** displays.

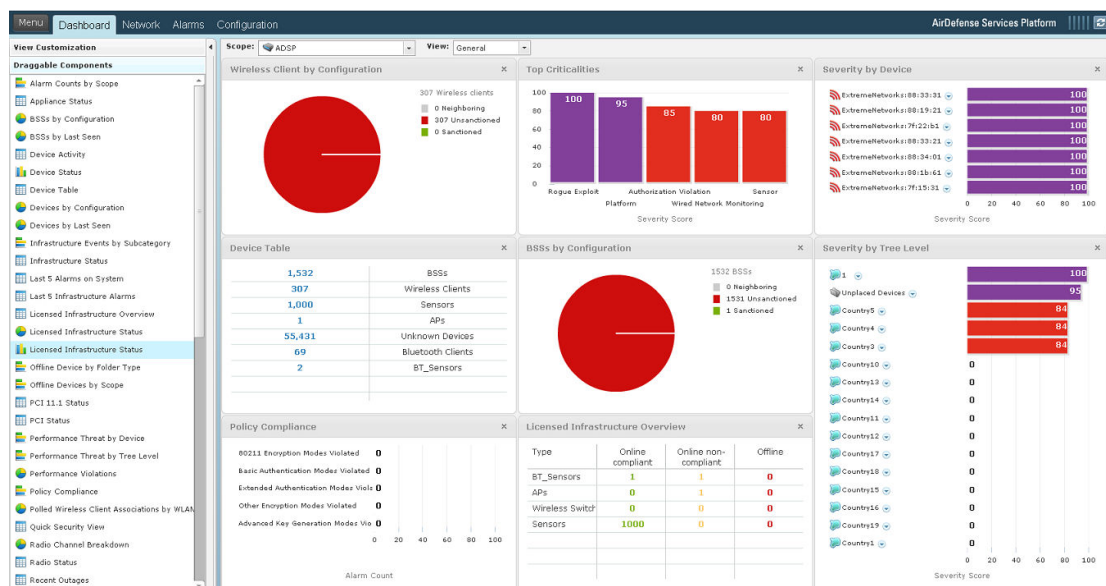

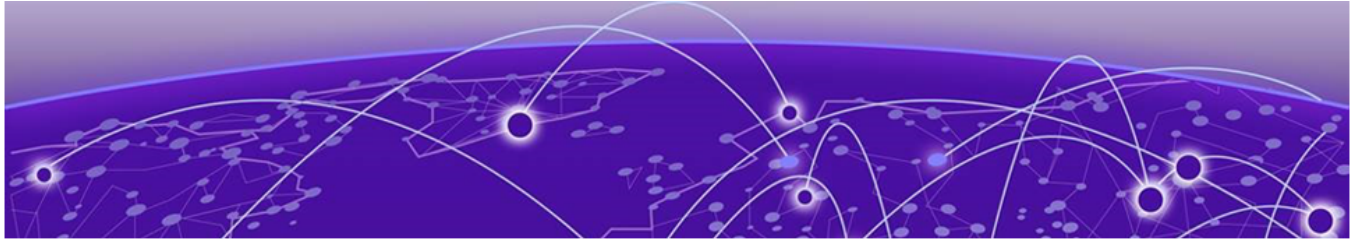

Dashboard

- [View Dashboard](#) on page 26
- [Create a Dashboard](#) on page 28
- [Manage Your Dashboard](#) on page 32
- [Delete the Dashboard](#) on page 34
- [Dashboard Widgets](#) on page 35

Use the fully customizable Extreme AirDefense (AirDefense) Dashboard to view various data and statistics for the sites managed through your AirDefense instance. Use the large number of built-in widgets to create customized desktops to view data and statistics. You can create any number of custom dashboards to meet your requirements.

AirDefense dashboards also includes a very powerful and fully customizable filter function to customize the data that you wish to view. You can filter the data displayed through a dashboard and its widgets by a site's location or by its site group. Further, you can also filter your data on the time duration of interest. These options, location and time, can be applied independent of each other.

View Dashboard

To access the Extreme AirDefense **Dashboard**, select the  icon from the toolbar on the left.

Extreme AirDefense Dashboard is configured to display important information. This dashboard cannot be modified or deleted. When you subscribe to Extreme AirDefense, this dashboard is available for immediate use.

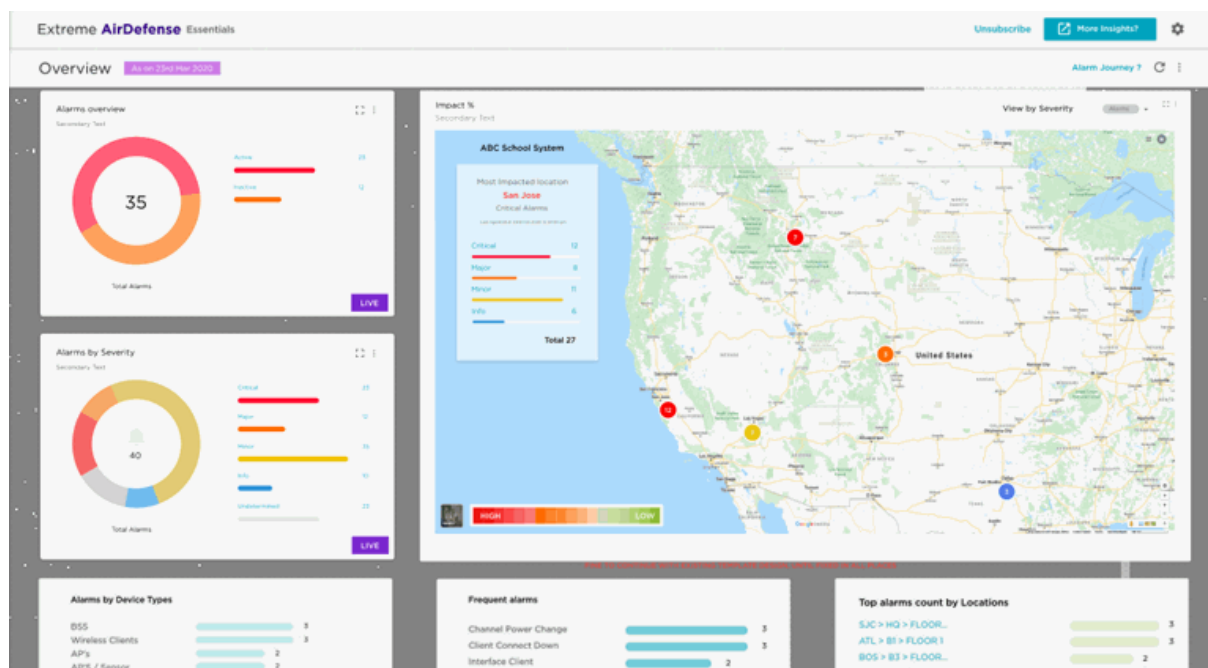


Figure 2: The Dashboard

To display a graphic that provides details about the alarms states, select **Alarm Journey** in the top right tool bar.

The **Dashboard Widgets** are described in the Dashboard Widgets chapter.


Set a Favorite Dashboard

A *Favorite* dashboard is a dashboard that you create and then customize to display the data and statistics that interests you. Every time you login to your Extreme AirDefense account, the dashboard marked as *Favorite* is always loaded.

For every account, Extreme AirDefense provides a default dashboard that is named *Dashboard*. Initially, this dashboard is also marked as the favorite dashboard for the account. This dashboard cannot be modified, deleted, or renamed.

You can create any number of dashboards for your ExtremeLocation instance. However, at any time, you can have only one dashboard as a favourite dashboard.

A favourite dashboard is indicated with the  symbol next to its name in the dashboard list and by the  icon on the  toolbar. For a normal dashboard, the same icon is displayed as .

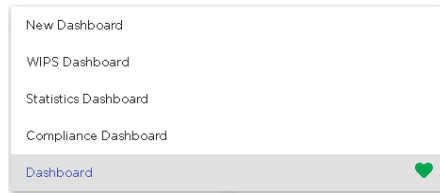

1. Select the **Dashboard** drop-down list to display a list of available dashboards.

A default dashboard is indicated by the  icon next to its name.

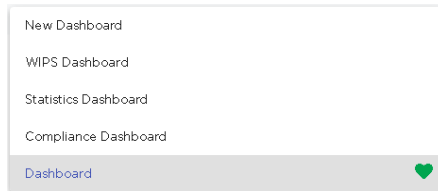


Figure 3: Default Dashboard

2. Select the dashboard that you want to mark as favourite.

The selected dashboard loads.

3. Select the  icon from the  toolbar.

The selected dashboard is immediately marked as the favourite dashboard. This dashboard loads automatically the next time you login to your Extreme AirDefense account.

Create a Dashboard

To create a new Extreme AirDefense dashboard:

1. From the main menu on the left, select the  icon to load the **Dashboard** screen.
The dashboard marked as favorite automatically loads.

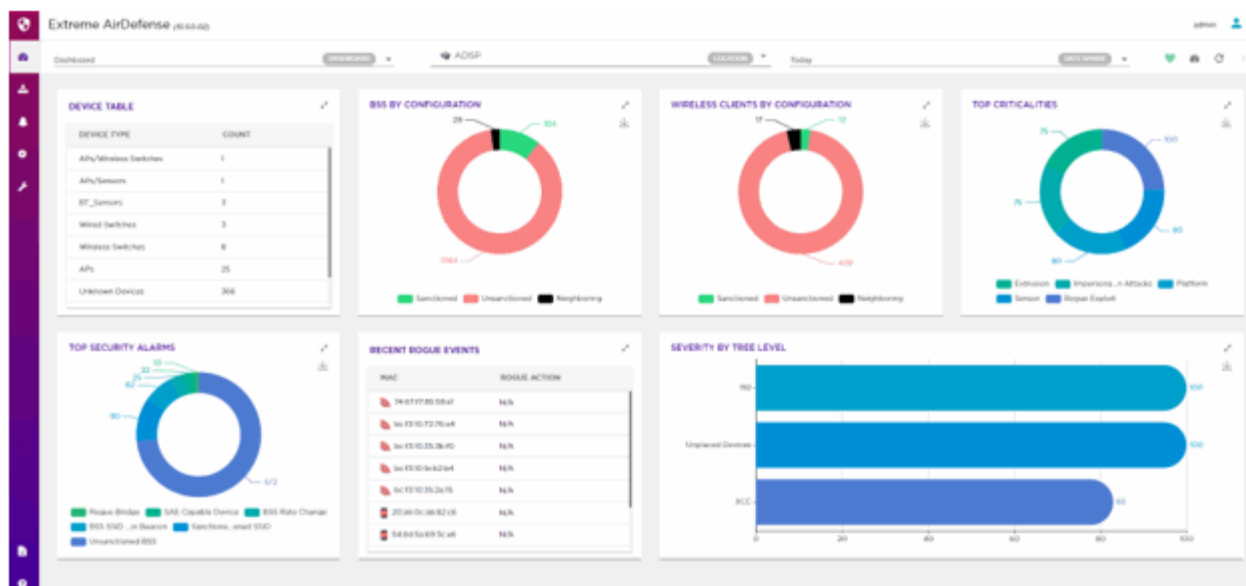


Figure 4: The Dashboard Screen

- Select the  button from    tool bar. The button expands to display a drop-down list.

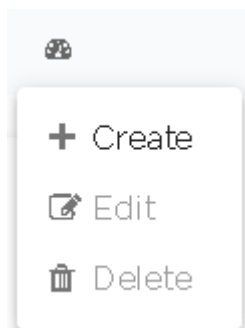


Figure 5: Manage Dashboard Options

- 3. Select the **Create** menu item from the drop-down list.
The following screen appears.

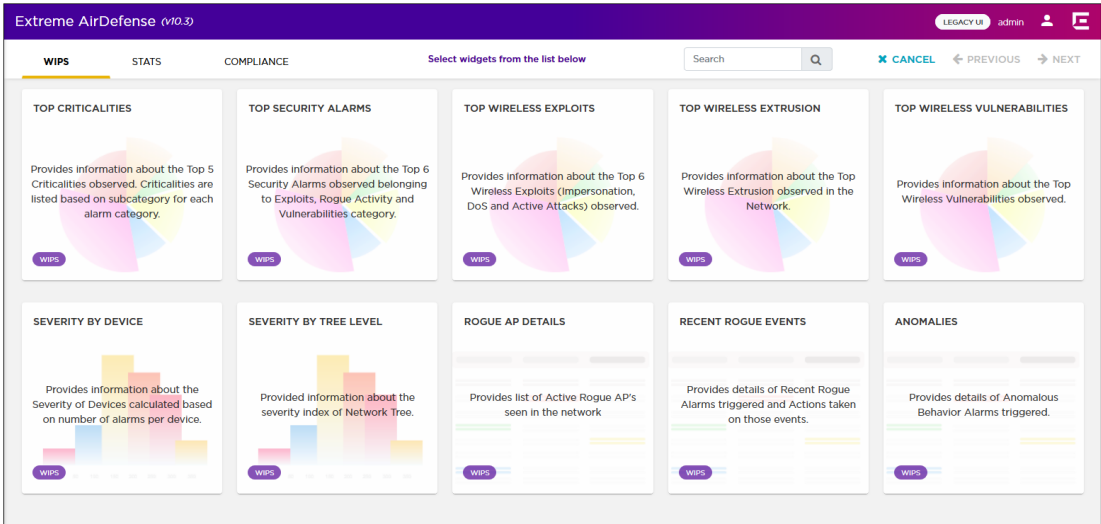


Figure 6: New Dashboard Screen

- 4. Select one category from the available categories. These categories classify the widgets available for use within your dashboard.
Dashboard widgets are classified into:
 - **WIPS** - Use the widgets in this category to display WIPS information and statistics.
 - **Stats** - Use the widgets in this category to display general statistics.
 - **Compliance** - Use the widgets in this category to display PCI compliance statistics.



Figure 7: Widget Categories

Use the **Search** text box to drill down to the widgets of interest.



Note
You cannot have more than 14 widgets on a single dashboard. Create a new dashboard to add additional widgets.

- Click the widget to select it. At a time, you can select multiple widgets to add to the dashboard.

A green check mark appears on the top right of the selected widget.

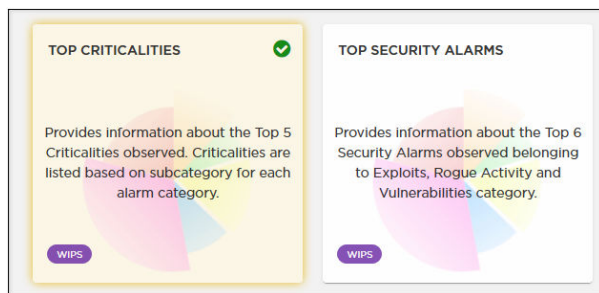


Figure 8: A Selected and an Unselected Widget

The screen also indicates the number of widgets added to this new dashboard.




Note

To add a widget from a different widget category, select that category from the available options and continue adding widgets. You can combine widgets from all the categories to create your dashboard. You cannot, however, add more than fourteen (14) widgets to a dashboard.

- Select the **Next** button located to the top right of the screen.

The following screen appears:

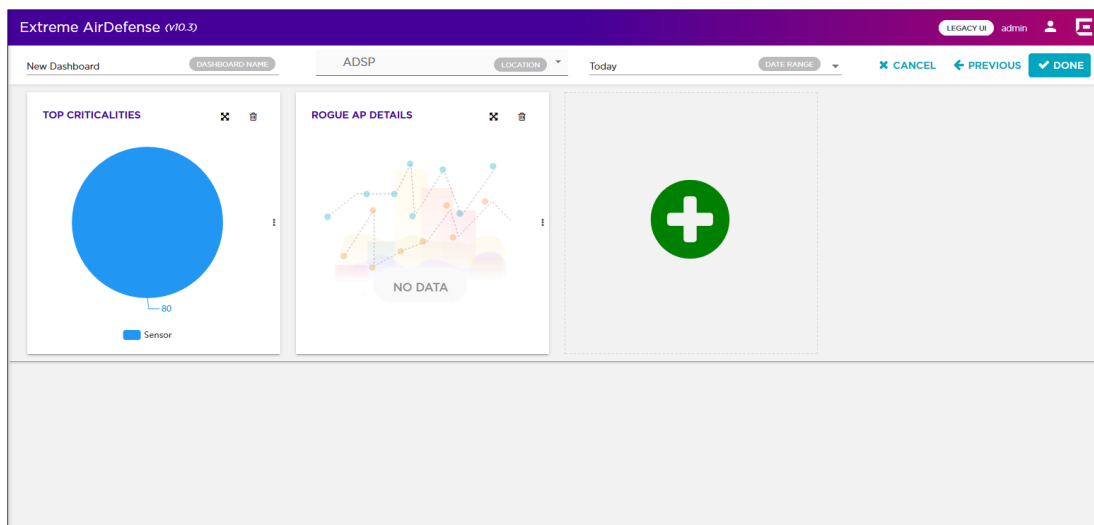

To remove a widget already placed on the dashboard, use the  icon located to the top of that widget. This immediately removes the widget from the dashboard.



Note

You can also use the big green circle to add more widgets to this dashboard.

**Note**

When a widget is added to the dashboard, it will display its data even when its dashboard is being created or edited. This is by design.

7. Use the  button, located to the top right of each widget, to rearrange the selected widget on the dashboard.

Hover over the widget's title. The arrow changes to . Then click and hold the primary mouse button, and drag the widget to the desired location on the dashboard. The other widgets on the dashboard are automatically rearranged to accommodate the moved widget.

8. Use the resize bar that is displayed - when you hover over the  icon to the left of the widget - to resize the widget.

The arrow changes to . Then click and hold the primary mouse button, and drag the edge of the widget to resize it. The other widgets on the dashboard are automatically rearranged to accommodate the resized widget.

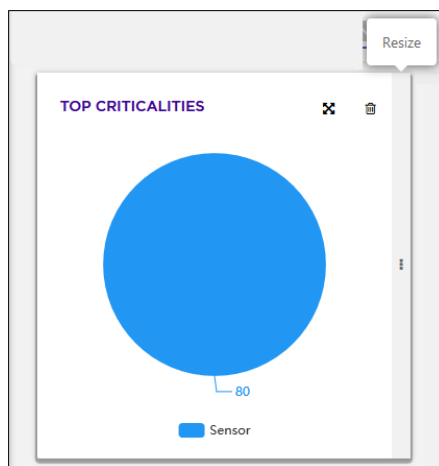


Figure 9: Widget with resize bar

**Note**

You cannot increase the height of the widget. Widget width can only be increased in fixed increments. You can only resize to the next available size.

9. Enter a name for this dashboard in the **Dashboard** field located to the top left of the new dashboard.
10. Select the **Done** button to save the final dashboard layout.

The dashboard is saved and displays the configured data. At any time use the **Previous** button to navigate to the previous screen. Similarly, use the **Cancel** button to exit without creating the dashboard.


Manage Your Dashboard

Use the tools provided in the **Dashboard** screen to edit any dashboard in your AirDefense account.

To edit an existing dashboard:

1. From the main menu on the left, select the  icon to load the **Dashboard** screen. The dashboard marked as default automatically loads.

Figure 10: The Dashboard Screen

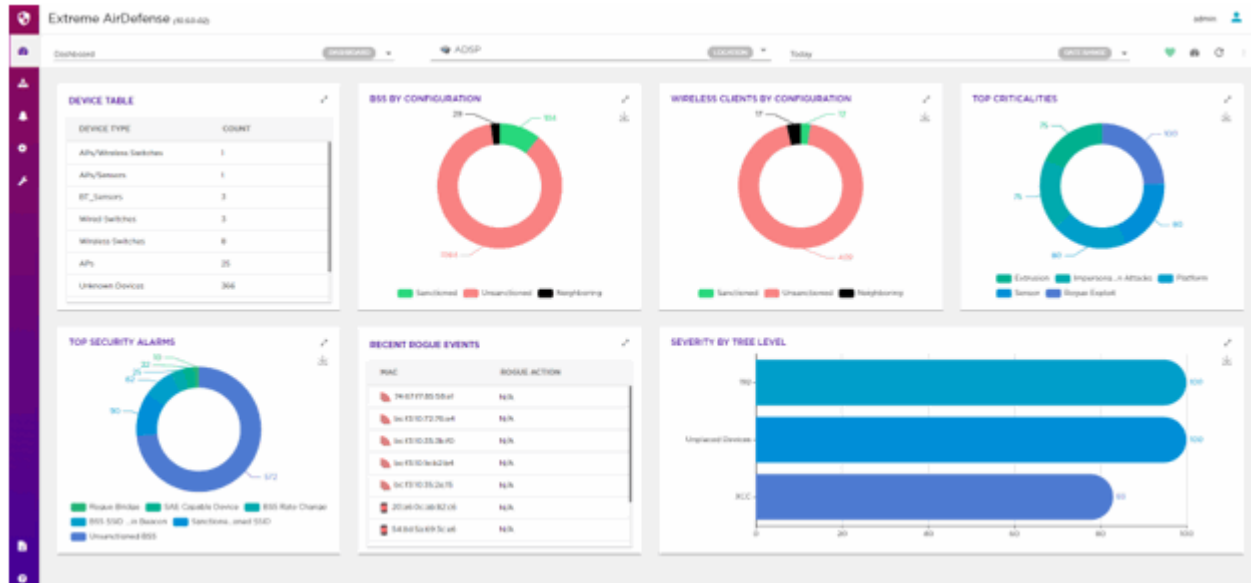

2. Select the **Dashboard** drop-down list to expand and display the list of available dashboards for this account.
3. From the list of available dashboards, select a dashboard.

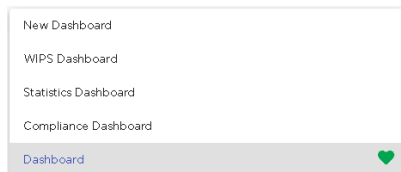


Figure 11: Dashboard List

The selected dashboard loads.

4. Select the  button from    tool bar. The button expands to display a drop-down list.

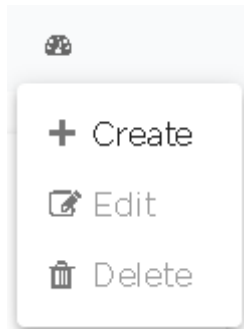



Figure 12: Manage Dashboard Options

5. Select **Edit** option from the drop-down list.
The selected dashboard is loaded in the edit mode. Use the available options to edit your dashboard.
6. After editing the dashboard, select the **Done** button to the top right of the dashboard to save the changes made to this dashboard.

Delete the Dashboard

1. From the main menu on the left, select the  icon to load the **Dashboard** screen.
The dashboard marked as default automatically loads.

Figure 13: The Dashboard Screen

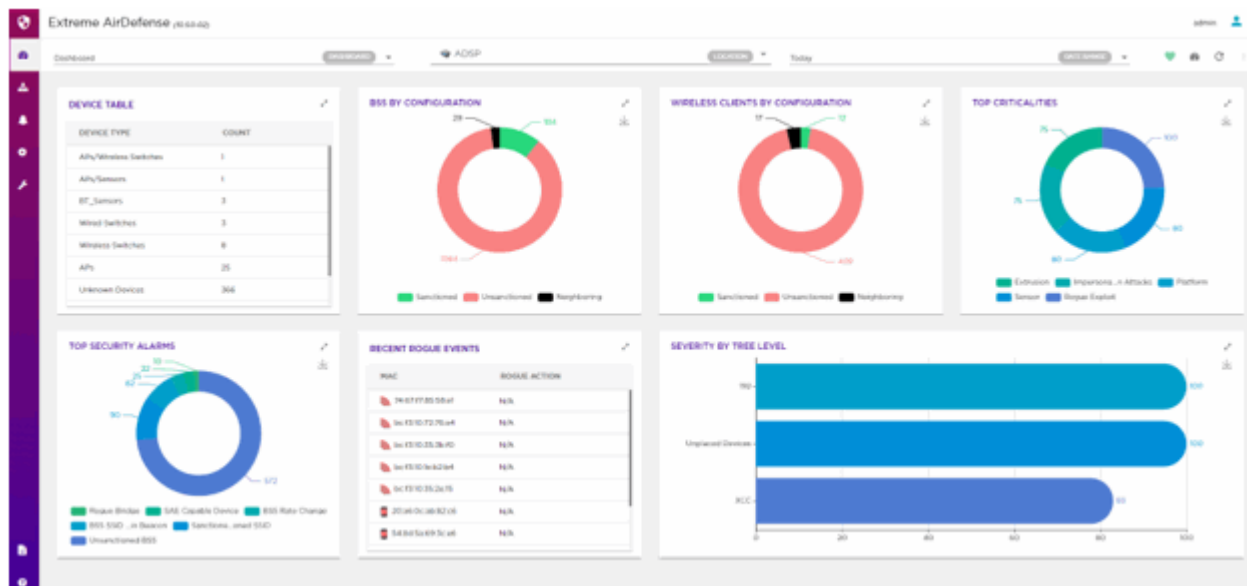

2. Select the **Dashboard** drop-down list to expand and display the list of available dashboards for this account.

- From the list of available dashboards, select a dashboard.

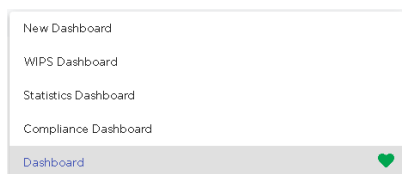


Figure 14: Dashboard List

The selected dashboard loads.

- Select the  button from  tool bar. The button expands to display a drop-down list.

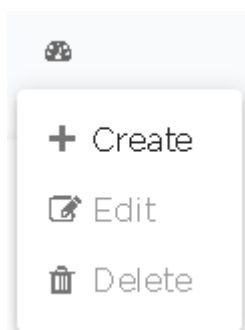


Figure 15: Manage Dashboard Options

- Select **Delete** from the drop-down list. A confirmation dialog appears.

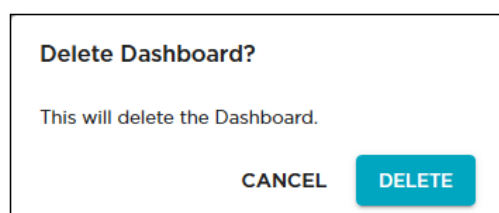


Figure 16: Delete Confirmation Dialog

- Select **Delete** to delete the dashboard. Select **Cancel** to exit this screen without deleting the selected dashboard. If **Delete** is selected, the dashboard is immediately deleted.

Dashboard Widgets

Extreme AirDefense provides a large number of widgets to enable you to customize how you view the large amount of data that it generates. These widgets displays the data of interest from Extreme AirDefense using tables and graphs. Some widgets also allow you to filter the data shown in them using filters and other elements specific to that widget.

Widgets on the **Dashboard** screen are classified into:

- [WIPS](#) - Use the widgets in this category to display WIPS information and statistics.
- [Stats](#) - Use the widgets in this category to display general statistics.
- [Compliance](#) - Use the widgets in this category to display PCI compliance statistics.

 


Figure 17: The Widget Categories

Use the **Search** text box to drill down to the widget or widgets of interest.


WIPS Widgets

Use the WIPS widgets to view AirDefense alarm activity and threat detection details. The following widgets are available:

- [Top Criticalities](#)
- [Top Security Alarms](#)
- [Top Wireless Exploits](#)
- [Top Wireless Extrusions](#)
- [Top Vulnerabilities](#)
- [Severity By Device](#)
- [Severity By Tree Level](#)
- [Rogue Access Points](#)
- [Recent Rogue Events](#)
- [Anomalies](#)
- [Top BT Security Alarms](#)
- [BT Security Threat By Category](#)
- [BT Security Threat By Tree Level](#)

Widget - Top Criticalities

This widget displays the top 5 criticalities observed in the AirDefense system.

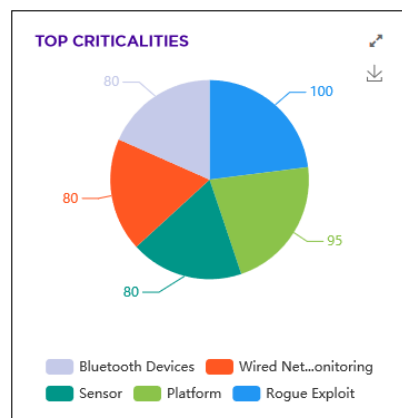

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.


Use the  icon to expand the widget to fill the current view.

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - Top Security Alarms

This widget displays the top security alarms observed in the AirDefense system. Security alarms observed in the *Exploits*, *Rogue Activity* and *Vulnerabilities* categories are displayed.

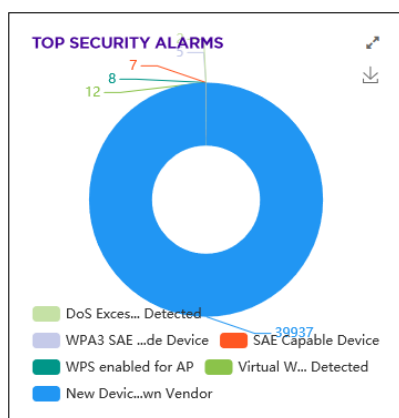

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.


Use the  icon to expand the widget to fill the current view.

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - Top Wireless Exploits

This widget displays the top 6 wireless exploits observed in the AirDefense system. Some of these exploits are *Impersonation*, *DoS* and *Active Attacks*.

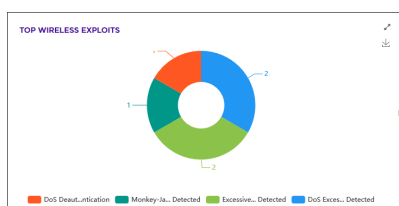

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.


Use the  icon to expand the widget to fill the current view.

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - Top Wireless Extrusions

This widget displays the top 6 wireless extrusions in your AirDefense monitored network. Extrusions happen when a sanctioned wireless station such as an access point or a sensor connects to an external unsanctioned network.

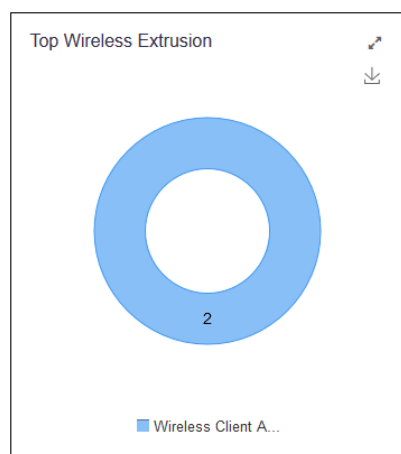

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.

Use the  icon to expand the widget to fill the current view.


Hover on any of the widget's data points to view specific information on the selected data point. When hovering on a part of the Pie chart, the section of the chart under the mouse pointer is exploded out.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - Top Vulnerabilities

This widget displays the top wireless vulnerabilities observed in the AirDefense system. Vulnerabilities are weaknesses that are not actively exploited, but are weaknesses that have been detected in the network. Vulnerabilities provide an inherent security risk to the enterprise and should be carefully evaluated to understand the potential exposure that could occur if a vulnerability was exploited. Once a vulnerability is discovered

options should be considered to remediate the vulnerability to prevent it from being exploited.

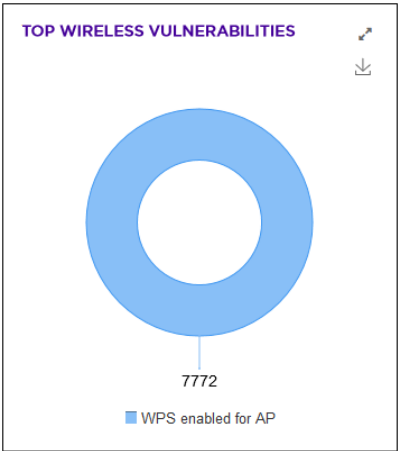

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.


Use the  icon to expand the widget to fill the current view.

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - Severity by Device

This widget displays the top devices with maximum severity identified by Extreme AirDefense.

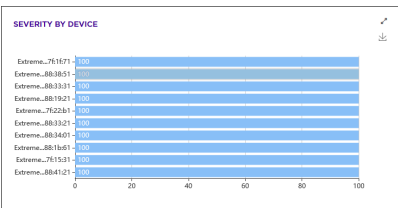

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.


Use the  icon to expand the widget to fill the current view.

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - Severity by Tree Level

This widget displays a graph for the severity index of the current selected network tree.

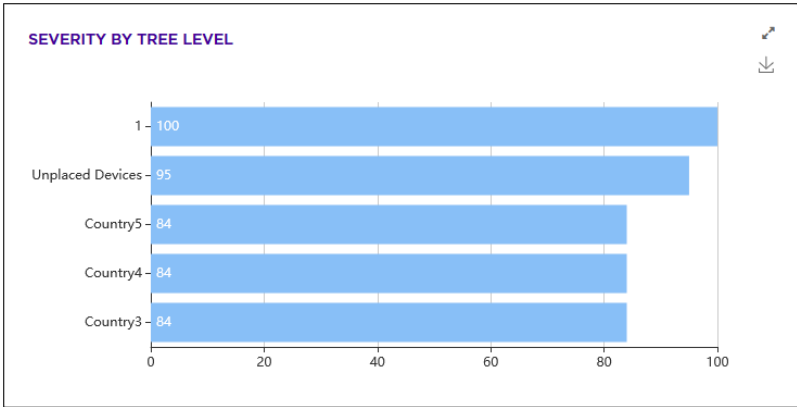

Use the  icon to expand the widget to fill the current view.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - Rogue Access Points

This widget displays a list of all rogue access points seen by Extreme AirDefense and the location where the rogue device is found.

A table titled "Rogue AP details". It has two columns: "Scope" and "Rogue". The "Scope" column contains "Floor 1" for all entries. The "Rogue" column contains MAC addresses for various devices, including ExtremeNetworks and ZebraTechnologies. The table is scrollable.

Scope	Rogue
Floor 1	ExtremeNetworks:7...
Floor 1	ZebraTechnologies:...
Floor 1	ZebraTechnologies:...
Floor 1	ExtremeNetworks:3...
Floor 1	ExtremeNetworks:7...
Floor 1	ExtremeNetworks:a...
Floor 1	ExtremeNetworks:d...
Floor 1	ExtremeNetworks:0...
Floor 1	ExtremeNetworks:R...

The widget displays a table with the rogue access point's location and its MAC address.

Use the  icon to expand the widget to fill the current view.

Widget - Recent Rogue Events

This widget displays a list of recent rogue events identified by Extreme AirDefense. Rogue Activity includes events for devices participating in unauthorized communication in your network. Examples of the type of event included in this category are detection of a wireless device operating in your network or the detection of an unsanctioned wireless device communicating with a device in the wired network.

RECENT ROGUE EVENTS


MAC	ROGUE ACTION
00:25:45:a9:5e:56	N/A
00:25:45:af:c5:02	N/A
00:25:45:b2:05:2e	N/A
00:25:45:b1:04:ba	N/A
00:25:45:ae:19:46	N/A
00:25:45:a9:83:72	N/A

The widget displays a table with the action taken on the rogue device and the device's MAC address.

Use the  icon to expand the widget to fill the current view.

Widget - Anomalies

This widget displays the various anomalies identified in the Extreme AirDefense system. Some of these exploits are *Impersonation*, *DoS* and *Active Attacks*.

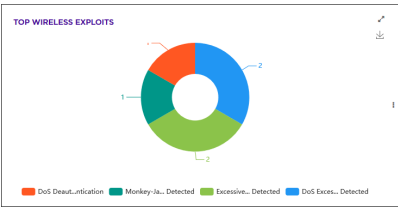


Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.

Use the  icon to expand the widget to fill the current view.

Widget - Top BT Security Alarms

This widget displays the top security alarms for Bluetooth devices observed in the AirDefense system. .

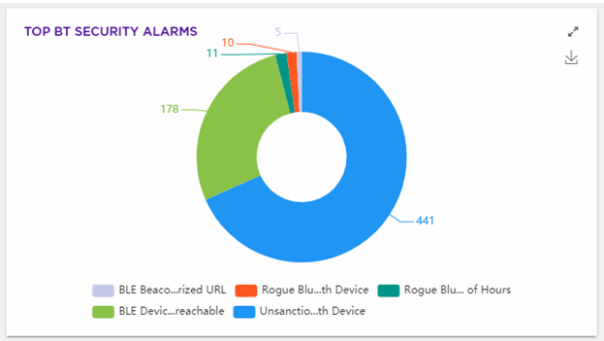

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.


Use the  icon to expand the widget to fill the current view.

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - BT Security Threat By Category

This widget displays the top security threats by category for Bluetooth devices observed in the Extreme AirDefense system.

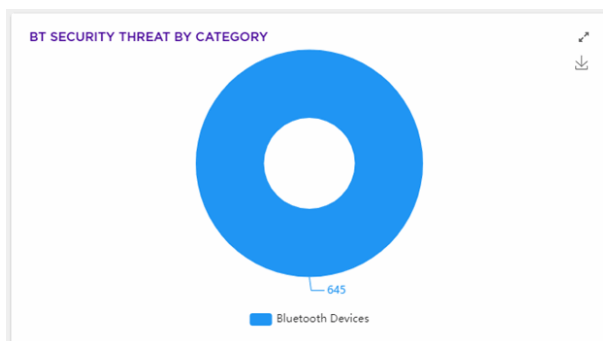

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.


Use the  icon to expand the widget to fill the current view.

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - BT Security Threat by Tree Level

This widget displays a graph of the security threats for Bluetooth devices in the current selected network tree.

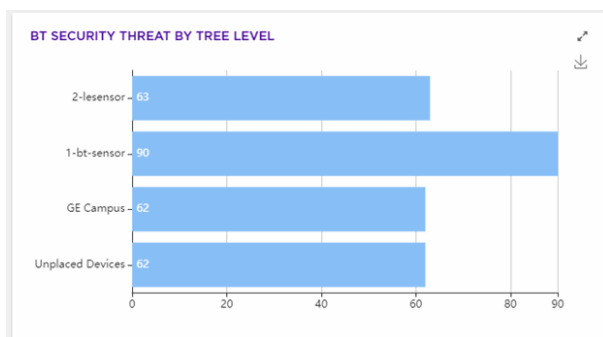

Use the  icon to expand the widget to fill the current view.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.


STATs Widgets

Use the STATS (statistics) widgets to view AirDefense statistics. The following widgets are available:

- [Device Table](#)
- [BSS by Configuration](#)
- [Sanctioned BSS Seen in Last 5 Days](#)
- [Wireless Clients by Configuration](#)
- [Top Talkers](#)
- [BT / BLE Seen In Last 5 Days](#)
- [BT By Configuration](#)
- [BT Protocol Stack Count Comparison](#)

Widget - Device Statistics Table

This widget displays the counts of different devices seen by AirDefense in the network.

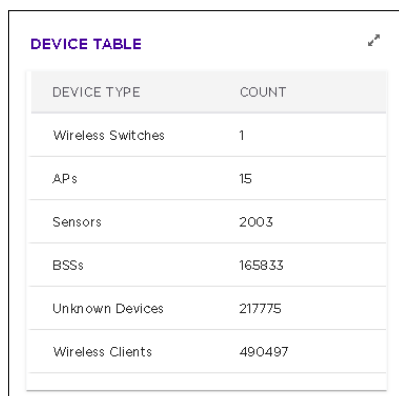


DEVICE TYPE	COUNT
Wireless Switches	1
APs	15
Sensors	2003
BSSs	165833
Unknown Devices	217775
Wireless Clients	490497

Use the  icon to expand the widget to fill the current view.

Widget - BSS by Configuration

This widget displays the counts of BSSs seen by AirDefense in the network by classification type. The BSSs are classified as *Sanctioned*, *Unsanctioned*, and *Neighboring*

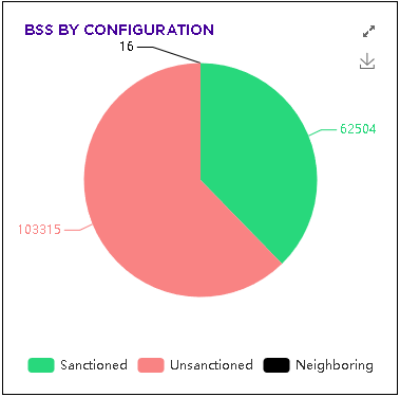

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.


Use the  icon to expand the widget to fill the current view.

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - Sanctioned BSS Seen In Last 5 Days

This widget displays the counts of sanctioned BSSs seen by AirDefense in the network during the last five (5) days.

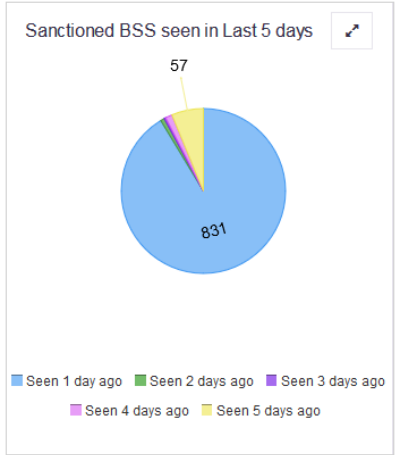

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.


Use the  icon to expand the widget to fill the current view.

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - Wireless Client by Configuration

This widget displays the counts of wireless clients seen by AirDefense in the network by classification type. The wireless clients are classified as *Sanctioned*, *Unsanctioned*, and *Neighboring*

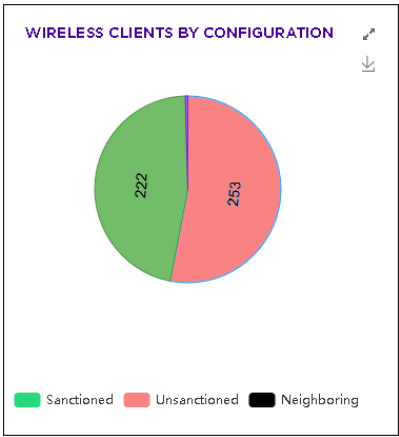

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.


Use the  icon to expand the widget to fill the current view.

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - Top Talkers

This widget displays a list of 10 devices that have the highest data consumption in the AirDefense monitored network. The widget also displays the exact amount of data consumed.

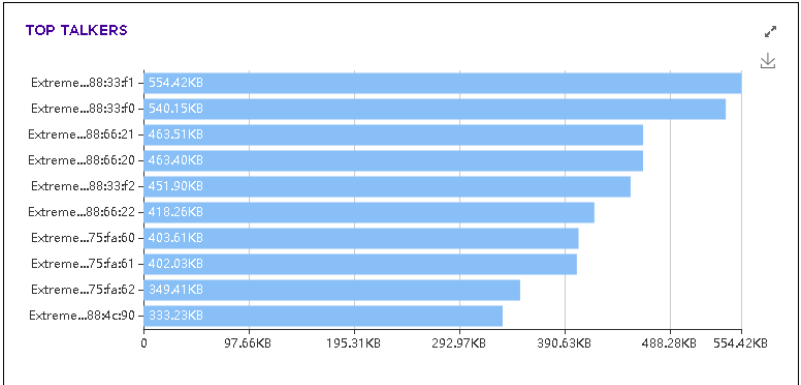


Use the  icon to expand the widget to fill the current view.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - BT/BLE Seen In Last 5 Days

This widget displays activity for Bluetooth and Bluetooth Low Energy devices that have been seen in the last five days by the Extreme AirDefense network. The colors in the piechart represent the day during which the activity had been seen. Place your cursor over a color in the pie chart to display the total number of devices with activity seen for that day, and the percentage it represents of the total number of devices seen.

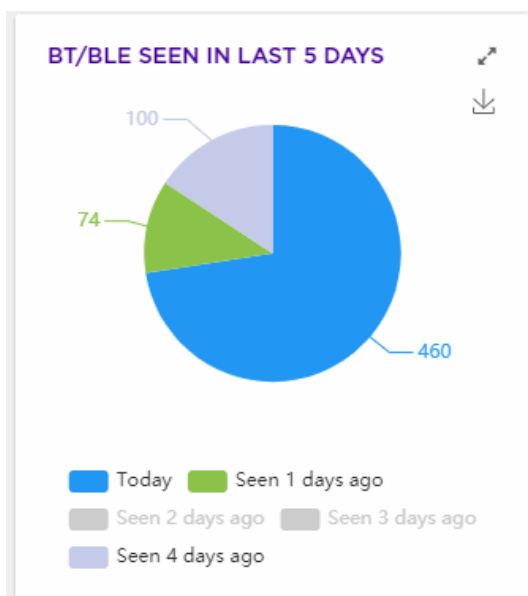


Use the  icon to expand the widget to fill the current view.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - BT By Configuration

This widget displays the counts of Bluetooth clients seen by Extreme AirDefense in the network by classification type. The Bluetooth clients are classified as *Sanctioned*, *Unsanctioned*, and *Neighboring*

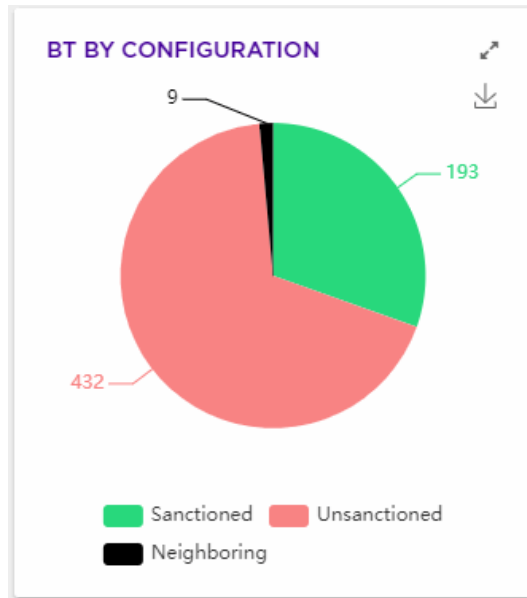

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.


Use the  icon to expand the widget to fill the current view.

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - BT Protocol Stack Count Comparison

This widget displays a graph that compares the protocol stack count for Bluetooth devices in the Extreme AirDefense network.

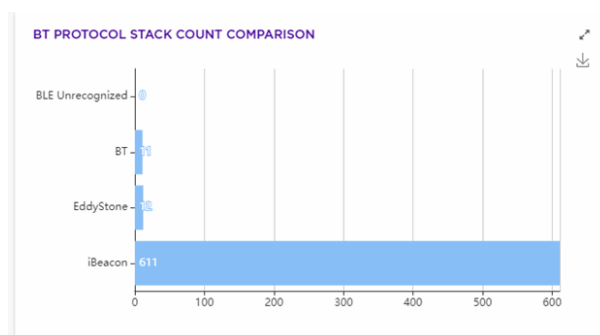

Use the  icon to expand the widget to fill the current view.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.


COMPLIANCE Widgets

Use the COMPLIANCE widgets to view the PCI (Payment Card Industry) Data Security Standard compliance. The following widgets are available:

- [Policy Compliance](#)
- [PCI Status](#)
- [PCI 11.1 Status](#)

Widget - Policy Compliance

This widget displays PCI policy compliance status of the Extreme AirDefense monitored network.

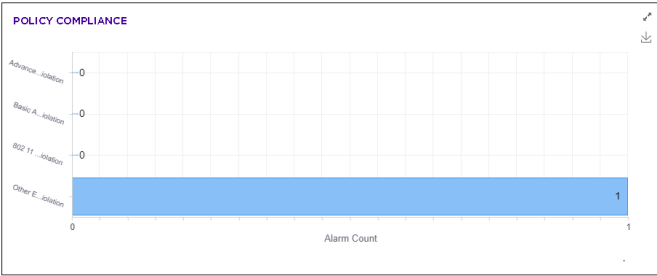

Use the  icon to expand the widget to fill the current view.

Use the  icon to download this widget as a image file. You can then save the downloaded image to any location on your PC.

Widget - PCI Status

This widget displays the counts of PCI Status alarms seen by Extreme AirDefense in the network.

PCI STATUS	
ALARM NAME	VALUE
Section 2	✗
Section 4	✗
Section 11.1	✗
Section 11.4	✓

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.

Use the  icon to expand the widget to fill the current view.

Widget - PCI 11.1 Compliance Status


This widget displays the counts of PCI 11.1 status alarms seen by Extreme AirDefense in the network.

PCI 11.1 STATUS

ALARM NAME	VALUE
Rogue AP	×
Accidental Associations	×
Rogue Station	×

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.

Use the  icon to expand the widget to fill the current view.

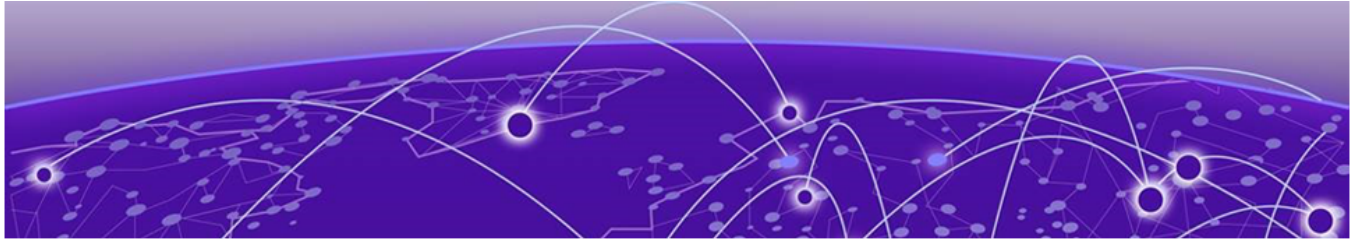

Network View

[Network View - Network Snapshot](#) on page 54

[Network Pane - Details View](#) on page 56

The **Network View** is your main window into the Extreme AirDefense monitored network. This view provides various tools to drill down to the site/location of interest and view the state and statistics of the selected site/location in the screen's **Details** Pane.

SCOPE	DEVICE DETAILS	SEVERITY
CA 0 Alarms 0 Notifications	Sensor: 0 AP: 0 Polled: 0	BSS: 0 WirelessClient: 0 Sensed: 0 Safe (0)
DE 0 Alarms 0 Notifications	Sensor: 0 AP: 0 Polled: 0	BSS: 0 WirelessClient: 0 Sensed: 0 Safe (0)
Default Location 0 Alarms 0 Notifications	Sensor: 0 AP: 0 Polled: 0	BSS: 0 WirelessClient: 0 Sensed: 0 Safe (0)
GB 0 Alarms 0 Notifications	Sensor: 0 AP: 0 Polled: 0	BSS: 0 WirelessClient: 0 Sensed: 0 Safe (0)
NL 0 Alarms 0 Notifications	Sensor: 0 AP: 0 Polled: 0	BSS: 0 WirelessClient: 0 Sensed: 0 Safe (0)

The **Network View** screen can be divided into:


- **Network Snapshot** section - Use this section to have a quick insight into the state of your network.
- **Network Tree View** section - Use this section to select the scope of the data to view in the **Network View** screen.
- **Details** section - This section shows the data for the context (scope) selected in the **Network Tree View** section.

Network Snapshot

The **Network Snapshot** section of the screen provides a comprehensive insight into your network's state using widgets. For more information, see the topic [Network Snapshot](#) in this document.

Network Tree View

The **Network Tree View** section is a drop-down pane that you use to select the context or the scope of the data to display.

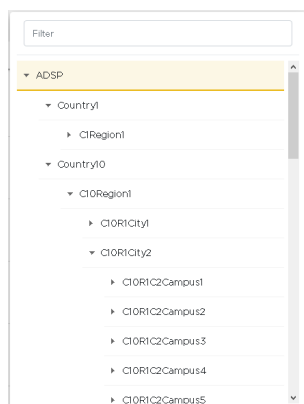

Use the  icon before each tree node to expand it and view its nodes. Similarly, use the  icon to collapse an expanded node.



Select the node for which you want to view the details. On selecting the node, the **Details View** pane immediately starts loading with the appropriate information. Depending on the size of the data to display, the number of devices to load and your network connection, it might take sometime for the data to be displayed.

Details View


The **Details** view displays the current state of the selected site/location. This section also displays the total number of devices found at the site/location.



Note

Use the **Items per page** control at the bottom right of the screen to configure the number of records to display. You can also click the < and > navigation buttons located there to show more records.

The following information is displayed:

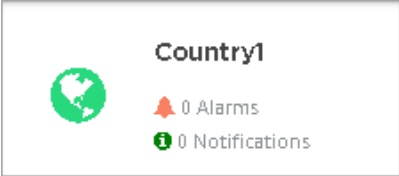Field	Description
Scope	Identifies the scope of the data being displayed (location/site/floor). The scope depends on the selection made in the My Network Tree View. Click the site/location name to view detailed statistics for it. This link is only active if there is at least 1 alarm or notification for the site/location.  The Scope field displays the number of Alarms and Notifications generated for a site/location. The following icons indicate the severity of the site/location: •  indicates a severity level of <i>Severe</i> which is higher than the level <i>Critical</i>. •  indicates a severity level of <i>Critical</i>. •  indicates a severity level of <i>Major</i>. •  indicates a severity level of <i>Minor</i>. •  indicates the site/location is <i>Safe</i>. •  indicates that no information is available for this site/location. Select the Site Name in each row to navigate to the Device Details screen and to view details about the devices located in the selected site. If enabled, you can select the Alarms link, to launch the Alarms screen of this user interface to view the alarms raised in this site/location. For more information on the Device Details screen, see Network Pane - Details View on page 56. For more information on the Alarms screen, see Alarms View on page 100.
Device Details	This column displays statistics about devices identified by Extreme AirDefense in the network. Devices are broadly classified as <i>Polled Devices</i> and <i>Sensed Devices</i>. Polled Devices are those devices that are classified as <i>Network Device</i> in the main Extreme AirDefense user interface. Sensed Devices are those devices that are classified as <i>BSS</i>, <i>Wireless Clients</i>, <i>BT/ BLE</i>, and <i>Unknown Devices</i>.

Field	Description
	 Select the Polled icon to navigate to the Device Details screen of the user interface and to view details about the devices identified for the site. For more information on the Device Details screen, see Network Pane - Details View on page 56. 8 Polled 4 4 1780 Sensed Unknown1076 474 Hover on or near the  icon to view a pop up window that displays a breakup of the various device types for the <i>Polled</i> and <i>Sensed</i> categories. Sensor0 AP0 APSensor0 BT_Sensor0 WirelessSwitch0 WiredSwitch0 AP/WirelessSwitch0 AP/WiredSwitch0
Severity	Displays a graphical representation of the site/location's health along with the current <i>Severity</i> value.

Occasionally, use the  icon to refresh the data displayed in this screen. Use the

ADSP


 field to change the scope of the data displayed on this screen.

Click the **Site Name** under the **Scope** column to load the **Device Details** screen. This screen displays site specific information. When you select the **Polled** icon under the **Device Details** screen, the **Device Details** screen loads to display the **Polled** tab. When you select one of the device types, the **Device Details** screen loads with the data filtered for the selected device type.

Device Details Screen

This screen displays when you select a **Site Name** in the **Details** section of the **Networks View** screen. This screen displays a list of all the devices identified as being located at the site. Use this screen to quickly analyze your overall security and performance for the selected site. This screen also enables you to drill down and

view detailed information on individual devices in your network. The following image displays a drill down view in the **Network View** window.

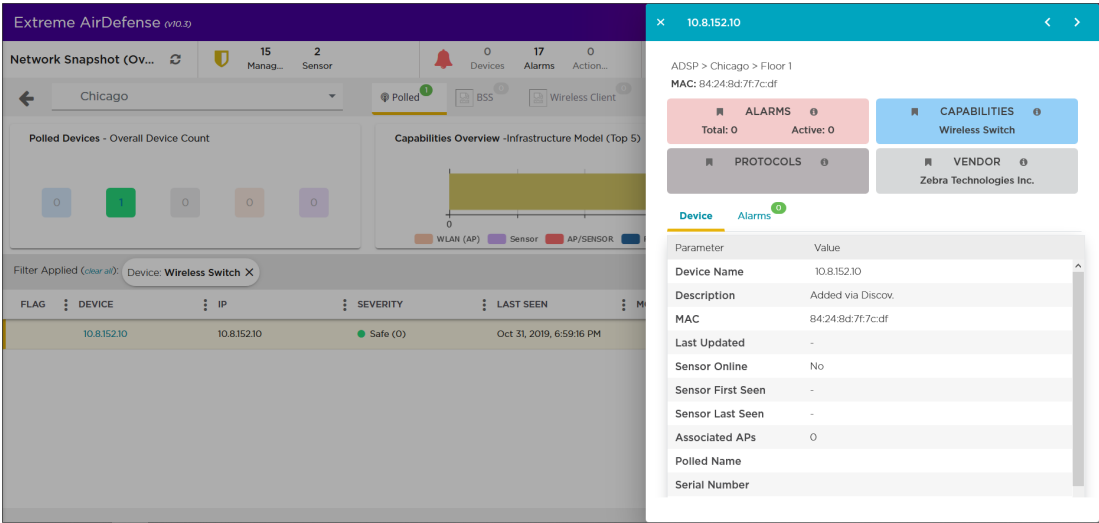

Network View - Network Snapshot


The **Network Snapshot** panel consists of four (4) widgets that provide a comprehensive insight into your network's state. These widgets are:

- [Top 5 Security Threats](#)
- [Alarms and Actions](#)
- [Polled Devices](#)
- [Sensed Devices](#)




Note

This panel cannot be customized. You cannot modify the widgets in this panel.

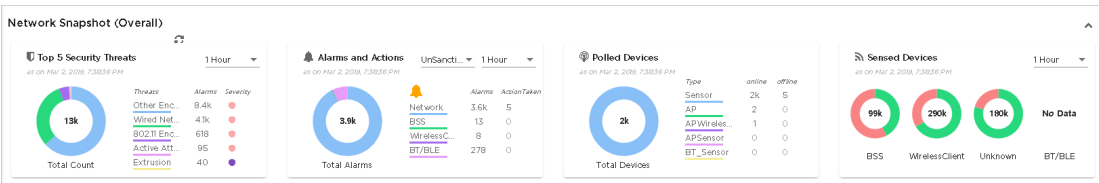

 
Use the  icon to collapse this panel to occupy less screen space. The same information is displayed in the collapsed panel. Use the icon in the same place to expand this panel to its full size. The expand/collapse icon is located to the top right of this panel.



Periodically use the  icon to update the data displayed in the widgets.

Top 5 Security Threats

The **Top 5 Security Threats** widget lists the top 5 security threats identified by in your network.

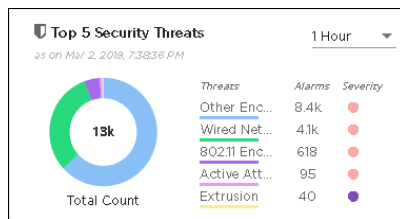


Use the drop-down list, located to the top right of this widget, to change the duration of the data that is displayed. By default, data for the last 1 Hour is displayed in the widget.

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Alarms and Actions

The **Alarms and Actions** widget displays an insight into the alarms raised by all the devices in the Extreme AirDefense monitored network.

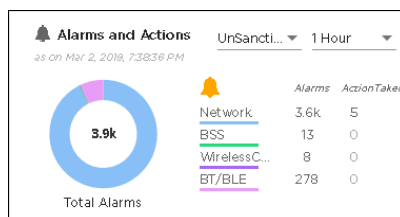

Use the drop-down list, located to the top right of this widget, to change the duration of the data that is displayed. By default, data for the last 1 Hour is displayed in the widget.


Use the **Device Type** drop-down list to select the device type of interest. Select from one of Sanctioned, Unsanctioned, and Neighboring. Unsanctioned is the default.

When a device type is selected, the data for that device type for the duration specified in the **Duration** drop-down list is displayed in the widget.

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Polled Devices


The **Polled Devices** widget displays a graph of the online/offline status of polled devices identified by Extreme AirDefense in your network. The widget displays the number of online and offline devices of major device types in your network.

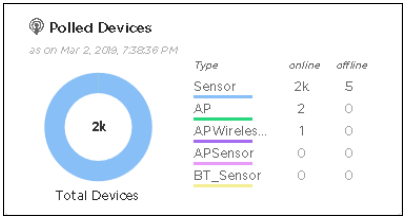

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Sensed Devices

The **Sensed Devices** widget displays the number of BSS, Wireless Clients, Unknown, and BT/BLE devices identified by Extreme AirDefense in your network.

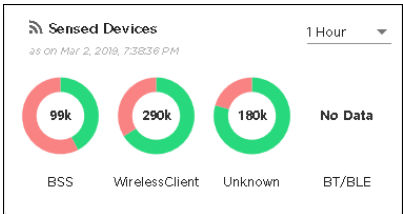


Use the drop-down list, located to the top right of this widget, to change the duration of the data that is displayed. By default, data for the last 1 Hour is displayed in the widget.

Place your cursor on any of the widget's data points to view specific information on the selected data point. Place your cursor over the pie chart to display details about each portion.

Network Pane - Details View

This screen displays in depth statistics and other details for the selected site or location. It also displays the current status of the network in the **Network Snapshot (Overall)** pane.

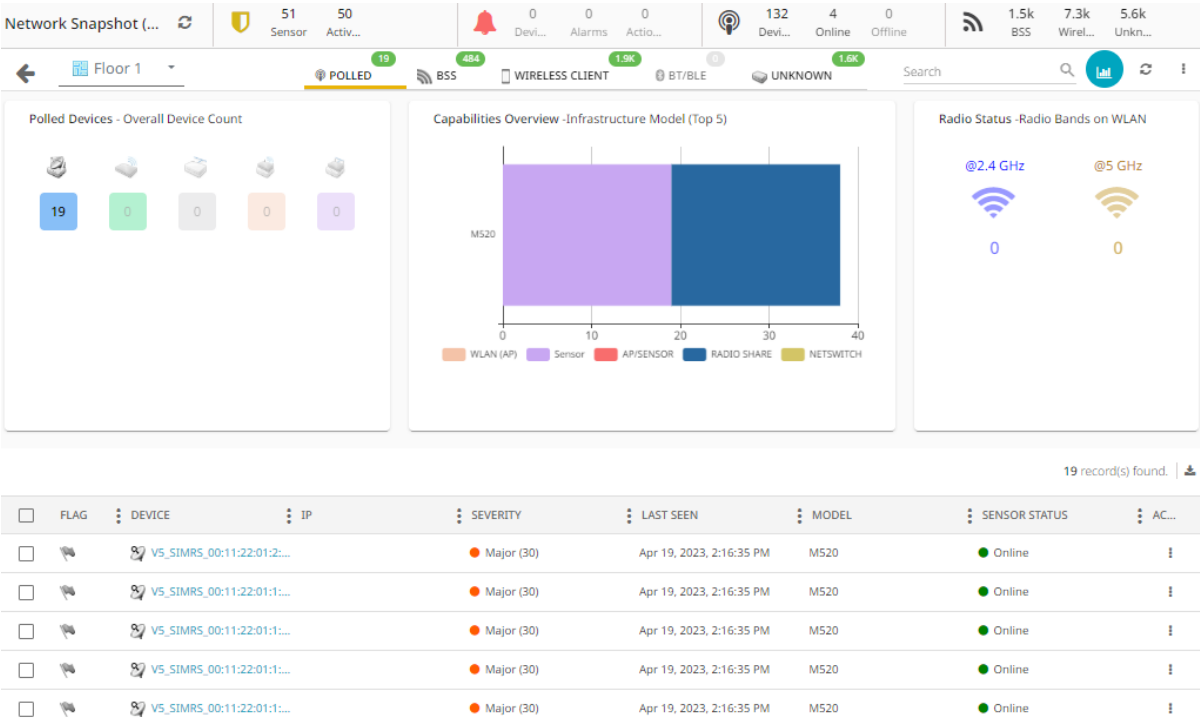


This screen can be divided into these sections:

- Network Snapshot (Overall) - This section provides a snapshot of the current state of your network. Use the icon to refresh the displayed data. For more information on this pane, see [Network View - Network Snapshot](#) on page 54.
- Network Scope and Tool Bar - This section provides controls that you can use to filter data displayed in this screen.
- Widgets - This section displays three (3) widgets that provide an overview about the devices in the network.
- Device Details - This section displays comprehensive data about the devices identified by Extreme AirDefense in the selected site/location. For more information, see [Network Pane - Device Details](#) on page 57.

Network Pane - Device Details

The **Device Details** pane displays comprehensive details about the devices found in the Extreme AirDefense monitored network. The data is further classified according to the identified device types. Details about each device type can be found under their own tabs.

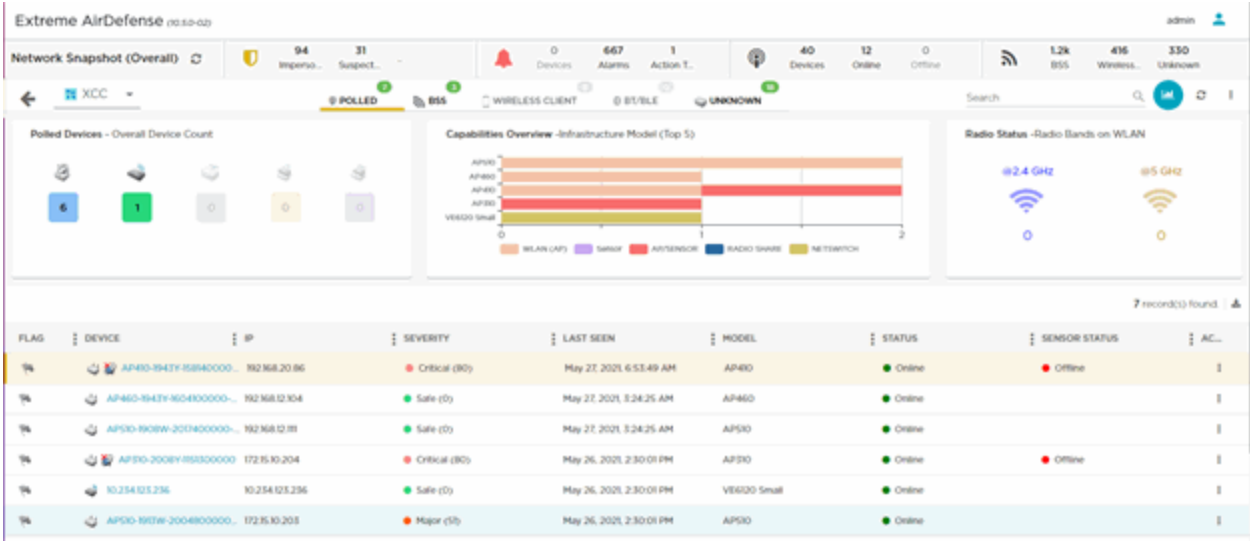

 **Note**
Use the **Items per page** control at the bottom right of the screen to configure the number of records to display. You can also click the < and > navigation buttons located there to show more records.


The **Device Details** pane can be divided into these panes:

Pane	Description
Toolbar	The Toolbar contains a number of tools that enable you to perform several tasks on the data being displayed in the pane. The Toolbar displays a drop-down list that displays the hierarchy of the Extreme AirDefense system. Use this list to select the scope of the data to be displayed in this screen. Some of the other features are <i>Device Type</i> tabs that you can use to view specific device types, a search box that you can use to search for specific devices, and a toggle button to show or hide the charts displayed below this toolbar. For more information, see Device Details - Toolbar on page 59.
Grid Chart View	The Grid Chart View is a panel that displays the statistics for the selected device type. This data is displayed in widgets. The content of this panel is different for the different device types identified by Extreme AirDefense. For more information, see the topic Device Type Details on page 61
Device List	The Device List is a table that displays a list of individual devices classified by device types. The content of this table is different for the different device type identified by Extreme AirDefense. For more information see Device Type Details on page 61

Device Details - Toolbar

The **Toolbar** of the **Device Details** pane contains a set of tools that you can use to manage the devices in your network.

 Table 4: Device Details Toolbar Actions

Tool	Description
	Use this icon to go back to the previous screen.
	Use this box to select the scope of the data to display in this pane. Select this pane to display a drop-down list and select the appropriate scope from this list. This drop-down list displays the AirDefense site hierarchy.
	Select each tab in this toolbar to view details about devices of the selected device type. For more information, see Device Type Details on page 61.
	Use the Search control to search for a specific device in the Device List . Hover on the field to view a list of fields that you can search on.
	Select this icon to view or hide the Grid Chart view in this pane.
	Select this icon periodically to refresh the data displayed on this screen.
	Displays actions that you can select and apply to selected devices in the Device Details view. You can use this icon to apply a bulk action to multiple devices. For details, see the following table Device Actions - Toolbar .

Device Actions - Toolbar

Use the toolbar's Device Actions menu icon  to select and apply actions to selected devices. In the Device Details list, check the relevant devices and then use this menu to select and apply an action to the checked devices. There are also a pair of actions that you can apply to all devices in the list, and which are available only when no devices are checked. See the following table for details.

The available actions differ depending on device types and the number of checked devices. When selecting multiple devices, all selected devices must be the same device type.



Note

There is also a device-specific actions icon  that appears at the end of each line entry in the Device Details list (rather than in the toolbar). Use this icon to select an action for that device only. For details, see the Device Actions tables that appear for each device type under [Device Type Details](#) on page 61.

Table 5: Device Actions - Toolbar

Action	Description
Set flag	Flags the selected device(s) to indicate that attention is required.
Clear flag	Clears the flag from the selected device(s).
Classification	Use this command to classify the device into one of the following categories: • Sanctioned (Inherit profiles) • Unsactioned • Neighboring • Sanctioned (Assigned profiles)
Client Type	Use this command to set the client type to one of the following: • Employee Personal Device • Guest Wi-Fi User • In Store Customer • Laptop • Loyalty Customer • Phone • Potential Customer • Scanner • Tablet • Uncategorized Device
Audit Devices	Conducts a compliance audit on the selected device(s).
Retrieve Diagnostic Logs	Retrieves the diagnostic logs for the selected device(s).
Remove Devices	Removes selected device(s) from monitoring.
Move Devices	Place the selected device(s) on a floor.
Upgrade Devices	Upgrade the firmware for the selected device(s).
Import CLI Variables	Imports CLI Variables at the device level for the selected device(s).
Command Run and Log	Executes CLI commands for selected device(s). The results are saved in a log file.
Search Device Configuration	Allows you to search for device configurations on the selected device(s).

Table 5: Device Actions - Toolbar (continued)

Action	Description
Remove all the (filtered) Devices	Use this menu item to remove all devices that are currently listed in the Device Details list from monitoring. Note the following conditions: • This command is available only if no devices are checked in the Device Details list. If any devices are checked, the command is greyed out. • If the number of devices listed exceeds what the page displays, this action includes devices that the current query returned, but which appear off the page (see the Items per page controls to increase the number of displayed records). • The action label contains "filtered" only if you applied a filter to the list. In this case, only devices that meet the filter criteria are affected.
Classify all the (filtered) Devices	Use this menu item to classify all of the listed devices into one of the following categories: • Sanctioned (Inherit profiles) • Unsactioned • Neighboring • Sanctioned (Assigned profiles) Note the following conditions: • This command is available only if no devices are checked in the Device Details list. If any devices are checked, the command is greyed out. • If the number of devices listed exceeds what the page displays, this action includes devices that the current query returned, but which appear off the page (see the Items per page controls to increase the number of displayed records). • The action label contains "filtered" only if you applied a filter to the list. In this case, only devices that meet the filter criteria are affected.

Device Type Details

AirDefense classifies devices into the following devices types:

- Polled
- BSS
- Wireless Clients
- Unknown
- BT/BLE

Polled Devices

Polled devices are those devices that AirDefense classifies as *Network Devices*.

Network Devices are those devices that are a part of your network and have been

assigned an IP address in your network. *Network Devices* include, switches, wireless controllers, routers, access points, and sensors. AirDefense communicates with these devices to push or pull data and configuration.

For more information on the **Polled** tab, see [Polled Devices Tab](#) on page 62.

BSS

The **BSS** screen lists all the BSSs, sanctioned or otherwise, identified by AirDefense.

For more information on the **BSS** tab, see [BSS Tab](#) on page 544.

Wireless Clients

The **Wireless Clients** tab displays a list of all wireless clients, sanctioned or otherwise, identified by AirDefense in your network.

For more information on the **Wireless Clients** tab, see [Wireless Clients](#) on page 79.

Unknown Devices

AirDefense classifies devices as **Unknown** based on the MAC address of the source or final destination of packets seen in the network. Any device with an unidentified MAC address is marked as an *Unknown Device*.

For more information on the **Unknown** tab, see [Unknown Devices](#) on page 87.

BT/BLE

The **BT/BLE** tab displays a list of Bluetooth/Bluetooth Low Energy (BLE) devices, sanctioned or otherwise, identified by AirDefense in your network.

For more information on the **BT/BLE** tab, see [Bluetooth and Bluetooth Low Energy Devices](#) on page 94.

Polled Devices Tab

Polled devices are those devices that Extreme AirDefense classifies as *Network Devices*. *Network Devices* are devices that are a part of your network and have been assigned an IP address in your network. *Network Devices* include, switches, wireless controllers, routers, access points, and sensors. These are the devices that Extreme AirDefense communicates with to push or pull data and configuration.





Select the export icon in the top right-hand corner of the table to export the Polled Devices data to a .csv report.

The **Polled Device** tab displays a set of widgets on the top of the display area. The widgets are:

- [Polled Devices](#)- Overall Device Count
- [Overview](#) - Infrastructure Model Overview
- [Radio Status](#) - Radio Bands on WLAN

The **Devices** table displays the following information for each Polled device:

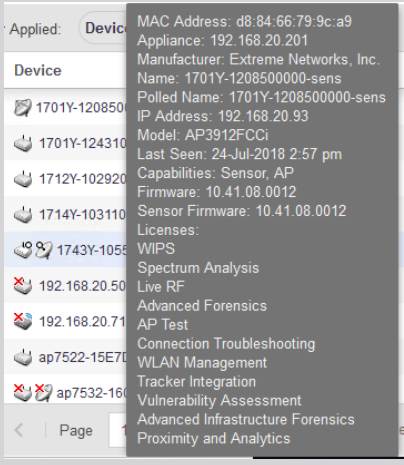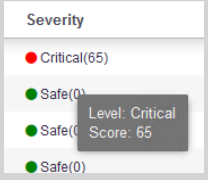Field	Description
Flag	Select the  icon to indicate that this device is considered to be of interest. The flag changes to  .
Device	The device type icon and its name. Hover on the name to display more details about the device in a pop-up. The following image is a pop up that displays on hover. 
IP	The IP address assigned to this device.
Severity	The device's threat level to your network. Hover on this value to display a threat score for this device.  Severe indicates a severity level of <i>Severe</i> which is higher than the level <i>Critical</i>.  Critical indicates a severity level of <i>Critical</i>.  Major indicates a severity level of <i>Major</i>.  Minor indicates a severity level of <i>Minor</i>.  Safe indicates the site/location is <i>Safe</i>. 
Last Seen	The date and time this device was last seen on the network.
Scope	The name of the site/location where this device is located as identified by Extreme AirDefense.
Floor	The floor number (in the site/location) where this device is located as identified Extreme AirDefense.


Field	Description
Model	Tthe device's model number as provided by the device. If the device does not provide its model number, the value <i>unknown</i> is displayed. Model numbers for offline devices are not displayed.
Firmware	The details of the firmware installed on the device.
Sensor Status	Indicates the online/offline status of a sensor device. If an access point is also a sensor, the status of the access point's sensor is indicated in this column.
	Select this icon to display a context sensitive menu of actions that can be performed for this particular device. The following image displays the actions that are available for an access point. Alarms Properties Upgrade Rename Move Remove Readiness Test Device Polling ▶ Action Details Port Lookup (Find this device) Forensic Analysis Direct Connect Copy MAC ▶

By default, only a subset of columns are displayed in the table. Depending on the context, additional fields can be manually added to the table.





Select the **Columns** item to view a list of columns that can be added to the table.



The following table lists the additional columns that can be added to the table.

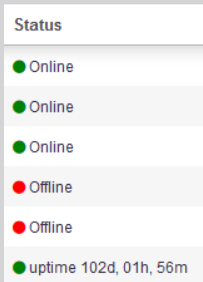
Field	Description
Name	The name of the device if configured.
Status	Indicates the online/offline status of the device. If the device reports up-time, then this up-time value is displayed. 
Polled Name	The polled name of the device if available.
MAC	The MAC address of the device.
First Seen	The date and time this device was first seen on the network.
Manufacturer	The name of the manufacturer of the device.
Compliant	Indicates if the device is compliant with AirDefense's policies.
Device Actions	Indicates if any of the following actions have taken place: • AP Test • Wireless Vulnerability Assessment • Termination • Dedicated Spectrum Analysis • Inline Spectrum Analysis
Associated Clients	The number of clients that are associated with the device.
Adopted APs	The number of access points that the device has adopted to.

Device Actions

The following actions can be performed on each device listed in the table. Select the  icon to display the list of actions that can be performed. The actions that can be performed are different for the different device types.

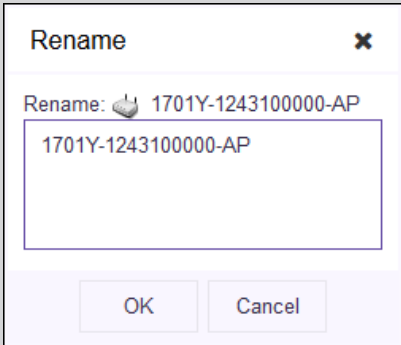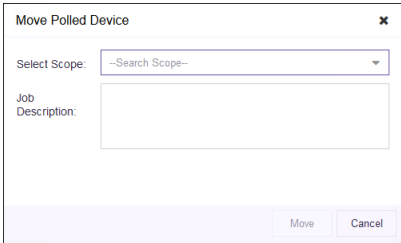Action	Description
Alarms	Displays the Alarms for the device. When selected, the alarms for this device are displayed in the Alarms screen
Properties	Displays the properties of the device. Select this item to view the properties of the selected device.
Upgrade	Select this menu item to upgrade the selected device to the latest available firmware.
Rename	Select this menu item to rename this device. Use this menu item to configure a meaningful name for this device. A small window displays. Use this Rename window to provide a name for this device. 
Move	Select this menu item to move this device to a different site/location in the Extreme AirDefense system. A small window displays. Use this window to provide the destination to move the device to. 

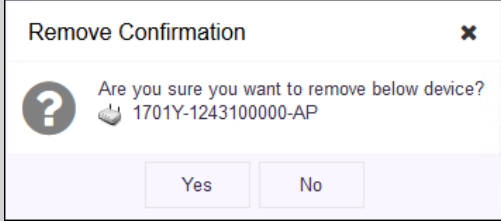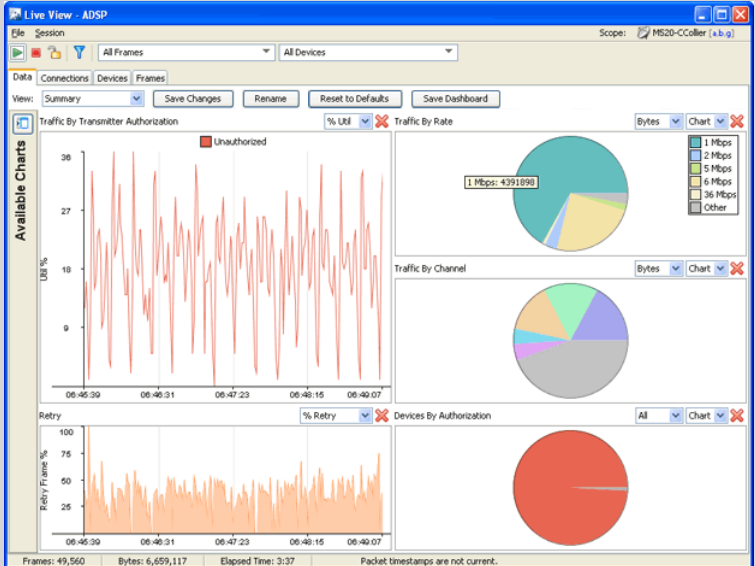Action	Description
Remove	Select this menu item to remove the device. A small confirmation window displays. Select Yes to remove the device. Select No to exit without removing the device.  The dialog box is titled "Remove Confirmation" and contains a question mark icon. The text asks, "Are you sure you want to remove below device?" followed by the device ID "1701Y-1243100000-AP". There are "Yes" and "No" buttons at the bottom.
Readiness Test	Select the Readiness Test menu item to check the connections and the communication settings between Extreme AirDefense and the device. A series of test are run and the results are displayed in another window.
Device Polling	Select the Device Polling menu item to run a compliance audit on the device.
Action Details	Select the Action Details menu item to view a table listing specific actions occurring on the device.
Port Lookup (Find this Device)	Use the Port Lookup menu item to scan for and locate this device, in your network, using its MAC address.
Forensic Analysis	Use the Forensic Analysis menu item to analyze the device and provide detailed information on the device. Forensic Analysis returns the threat level of the device, device alarms, and device association details about the device.
Live View	The Live View menu item displays the Live View window for the device where you can view the device's live status and other parameters.  The "Live View - ADSP" window displays various metrics for a device. It includes a "Data" tab with sub-tabs for "Connections", "Devices", and "Frames". The "Summary" view is selected. The window shows several charts: "Traffic By Transmitter Authorization" (line chart showing Unauthorized traffic), "Traffic By Rate" (pie chart showing traffic distribution by rate), "Traffic By Channel" (pie chart showing traffic distribution by channel), and "Retry" (line chart showing retry frames). The status bar at the bottom indicates "Frames: 49,560", "Bytes: 6,655,117", and "Elapsed Time: 3:37".

 Action	Description
Direct Connect	Select the Direct Connect menu item to directly connect to the device. A new browser window or a browser tab is created for the login screen of the device.
Copy MAC	The Copy MAC menu item is an ease of use feature and enables you to copy the MAC address of the device in hexadecimal or colon hexadecimal notation. Click this menu item to expand it and view MAC formats that can be copied.  Select the MAC format to copy to your PC's clipboard.

Polled Devices - Widgets

The **Polled Device** tab displays a set of widgets on the top of the display area. The widgets are:

- [Polled Devices](#)- Overall Device Count
- [Overview](#) - Infrastructure Model Overview
- [Radio Status](#) - Radio Bands on WLAN

Widget - Polled Device Tab - Polled Device

This widget displays the number of devices of each device category.


Polled Devices - Overall Device Count



The displayed device categories are:


- Network Devices APs - This item includes the totals of the following device categories:
 - Sensors
 - Access Points
 - Access Points that are also sensors
 - Bluetooth Sensors
- Wireless Switches
- Wired Switches
- Wireless Access Point Switches
- Wired Access Point Switches

Hover on each of the device types to display a popup with further details of the number of devices in that device category. This popup is not displayed for those device categories that have no devices (the number of devices in that category is zero(0)).

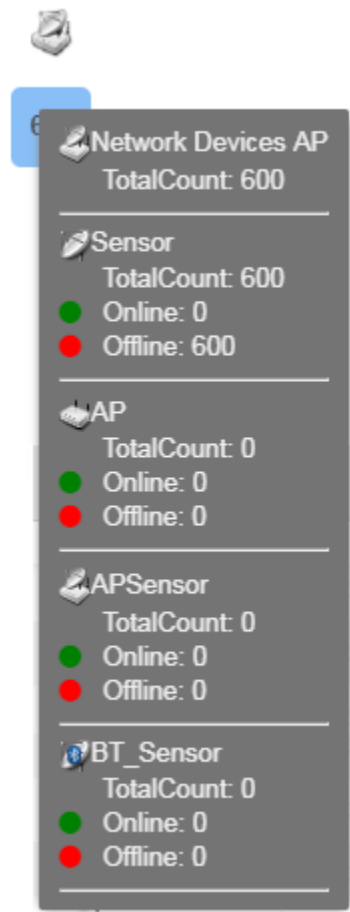

Widget - Polled Device Tab - Infrastructure Overview

This widget displays a horizontal bar chart which displays the top 5 infrastructure devices in your Extreme AirDefense monitored network.

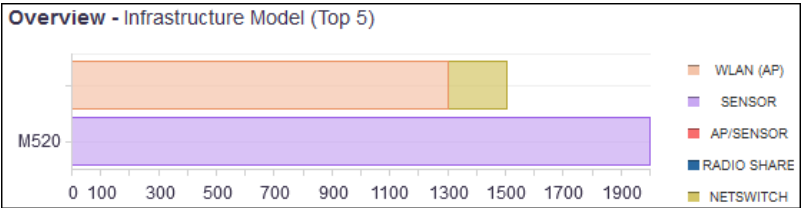


Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.


Widget - Polled Devices Tab - Radio Status

The **Radio Status** widget displays the number of radios for each radio band that has at least one WLAN configured.

Radio Status - Radio Bands on WLAN

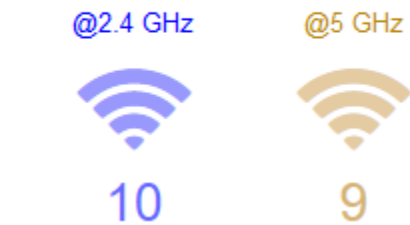


Hover on each of these radio bands to view a pop-up that displays the number of radios that are offline and online.

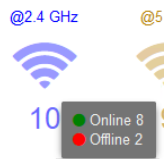

BSS Tab



The **BSS** tab displays a list of all Basic Service Sets (BSSs), sanctioned or otherwise, that were discovered by Extreme AirDefense in your network during regular scans. The tab also includes BSSs that are known about due to other methods like a controller (for example, ExtremeCloud IQ, ExtremeWireless WiNG, ExtremeCloud IQ Controller) or a CSV import.

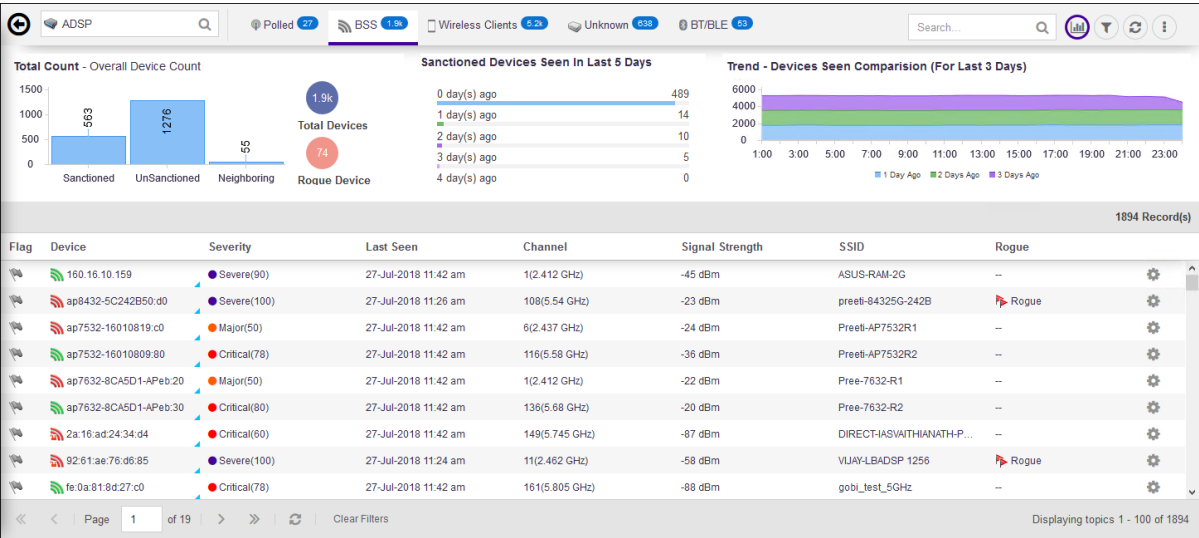


The BSS tab displays a set of widgets on the top of the display area. The widgets are:

- Total Count - Overall Device Count
- Sanctioned Devices Seen in Last 5 Days
- Trend - Device Seen Comparison (For Last 3 Days)

The **BSS** table displays the following information

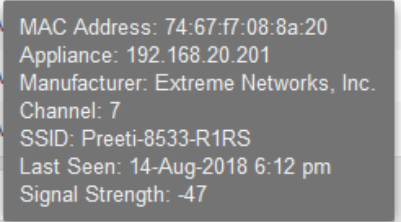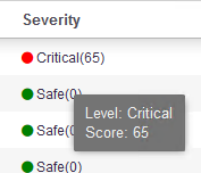Field	Description
Flag	Select the  icon to indicate that this device is considered to be of interest. The flag changes to  .
Device	This column displays the device type icon and its name. Hover on the name to display more details about the device in a pop-up. The following image is a pop up that displays on hover.  Select the MAC address of the device to view its details in a separate window.
SSID	The SSID of the network that the BSS used.
IP	The IP address assigned to this device.
Severity	This column displays the device's threat level to your network. Hover on this value to display a threat score for this device. •  Severe indicates a severity level of Severe which is higher than the level Critical. •  Critical indicates a severity level of Critical. •  Major indicates a severity level of Major. •  Minor indicates a severity level of Minor. •  Safe indicates the site/location is Safe. 
Last Seen	The date and time this device was last seen actively transmitting.
Manufacturer	The name of the manufacturer of the device.
Signal Strength	The signal strength for this device.
Channel	The channel identified based on the last sensed transmission.
Sensed Encryption	The encryption scheme used by the device, if any.
Protocols	The various wireless protocols supported by the device.
Associated Clients	The number of clients that are associated with the device.

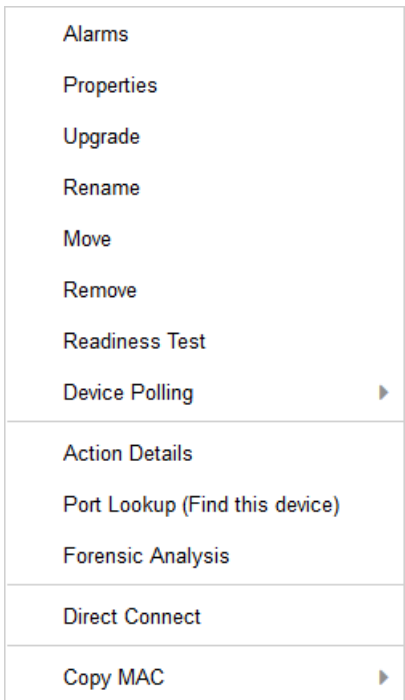Field	Description
Rogue	Indicates if a device has been flagged as a Rogue device. All rogue devices are flagged with this icon.
Sensor	The name of the sensor that sees the device.
	Select this icon to display a context sensitive menu of actions that can be performed for this particular device. The following image displays the actions that are available for an access point. 

Select a device in the table to display a right-panel details window that includes the following columns:

Parameter	Value
Device Name	Displays the name of the device
Description	Displays a description of the device.
Annotations	
MAC	Displays the MAC Address for the device.
Random MAC	Indicates whether the device is using Random MAC (yes) or not (no).
Observed	
First Seen	Displays date device was first seen transmitting.
Last Seen	Displays date device was last seen transmitting
Supported b/g Channel	
Available Rates	

Parameter	Value
Associated AP	
Capabilities	
Noise	
Channel	
Associated Wireless Clients	
Polled First Seen	
Polled Last Seen	
Sensed Authentication	
Sensed Encryption	
Reported SSID(s)	Displays the SSID for the device.
Reported IP	Displays the device's IP address.
Primary Sensor	Displays the name of the primary sensor.
Signal Strength	Displays the signal strength of the device.
Protocols	
Terminating	Indicates whether the device is terminating (yes) or not (no).
Vendor	Displays name of the device's vendor.

By default, only a subset of columns are displayed in the table. Depending on the context, additional fields can be manually added to the table.

To manipulate the data display, select the  icon to the left of any column header. For example, you can sort the data, add or remove table columns, and apply a filter (when available). The following drop-down list displays.



Select the **Filter** control (if available) to filter the data in the column based on the available filtering criteria. You can also apply a filter by clicking on graph categories within the widgets.

Select the **Columns** item to view a list of columns that can be added to the table.

The following table lists the additional columns that can be added to the table.




Field	Description
Name	The name of the device, if configured.
MAC	The MAC address of the device.
First Seen	The date and time this device was first seen on the network.
Scope	The name of the site/location where this device is located as identified by Extreme AirDefense.
Floor	The floor number (in the site/location) where this device is located as identified Extreme AirDefense.
Manufacturer	The name of the manufacturer of the device.
Classification	The device's classification as classified by Extreme AirDefense. A device can be classified as <i>Sanctioned (Inherit Profile)</i>, <i>Unsanctioned, Neighboring</i>, or <i>Sanctioned (Assigned Profile)</i>. You can manually set a device's classification from the  Classification menu from within the table.
Sensed Authentication	The authentication scheme that the device uses to authenticate.
Device Actions	Indicates if any of the following actions have taken place: • AP Test • Wireless Vulnerability Assessment • Termination • Dedicated Spectrum Analysis • Inline Spectrum Analysis
Access Points	The name of the access point on which the BSS is operating.
Security Policy	The security policy, if any, applied to this device.



Device Actions

The following actions can be performed on each device listed in the table. Select the



icon to display the list of actions that can be performed. The actions that can be performed are different for the different device types.

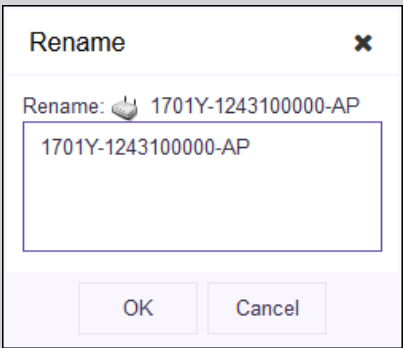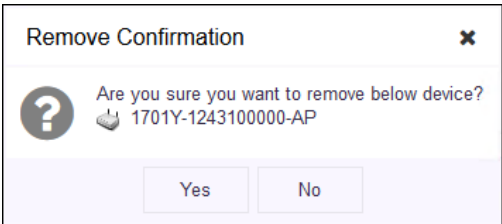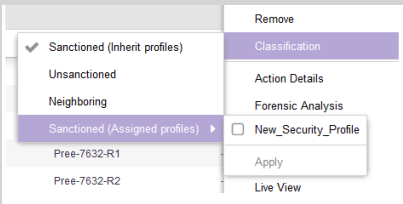Field	Description
Alarms	Displays the Alarms for the device. When selected, the alarms for this device are displayed in the Alarms screen
Rename	Select this menu item to rename this device. Use this menu item to configure a meaningful name for this device. A small window displays. Use this Rename window to provide a name for this device. 
Remove	Select this menu item to remove the device. A small confirmation window displays. Select Yes to remove the device. Select No to exit without removing the device. 
Classification	Use this menu item to classify the device into one of <i>Sanctioned (Inherit profiles)</i>, <i>Unsanctioned</i>, <i>Neighboring</i>, and <i>Sanctioned (Assigned Profiles)</i>.  The <i>Sanctioned (Assigned Profiles)</i> menu item expands to show a list of available profiles that can be assigned to this device.
Action Details	Select the Action Details menu item to view a table listing specific actions occurring on the device.

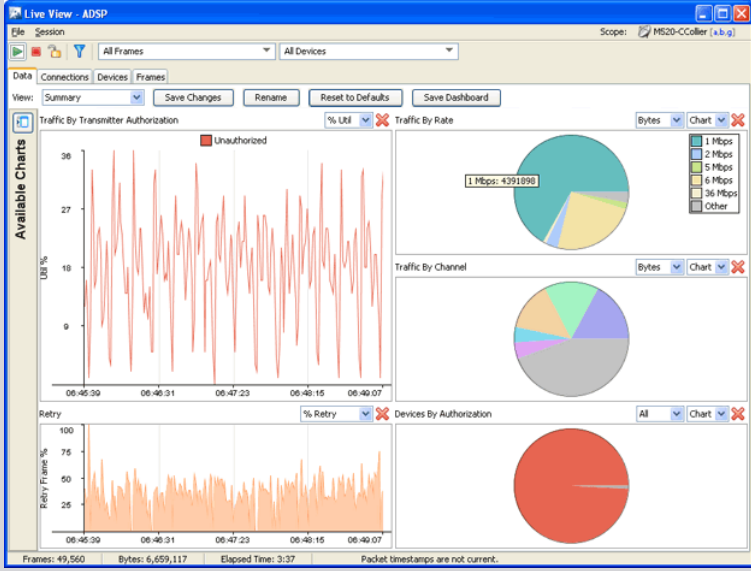 Field	Description
Forensic Analysis	Use the Forensic Analysis menu item to analyze the device and provide detailed information on the device. Forensic Analysis brings up a new window with very detailed historical information about the device.
Locate	Use the Locate menu item to locate this device on your network. This opens the Location Tracking window from where you can track the device.
Live View	The Live View menu item displays the Live View window for the device where you can view the device's live status and perform remote packet captures.  The screenshot shows the 'Live View - ADSP' window. It features a top menu bar with 'File' and 'Session'. Below is a toolbar with buttons for 'Data', 'Connections', 'Devices', and 'Frames'. A 'View' dropdown is set to 'Summary', and there are buttons for 'Save Changes', 'Rename', 'Reset to Defaults', and 'Save Dashboard'. The main area contains several charts: 'Traffic By Transmitter Authorization' (line chart showing 'Unauthorized' traffic), 'Traffic By Rate' (pie chart showing traffic distribution by rate), 'Traffic By Channel' (pie chart showing traffic distribution by channel), and 'Retry' (line chart showing 'Retry Frame %'). A status bar at the bottom displays 'Frames: 49,560', 'Bytes: 6,659,117', 'Elapsed Time: 3:37', and 'Packet timestamps are not current.'
Port Lookup (Find this Device)	Use the Port Lookup menu item to scan for and locate this device, in your network, using its MAC address.
Terminate	Use the Terminate menu item to open the Termination options window from where you can terminate this device.
AP Test	Use the AP Test action to begin an on-demand version of AP Test against the selected BSS.
Wireless Vulnerability Assessment	Use the Wireless Vulnerability Assessment window to begin an on-demand version of WVA against the selected BSS to scan your network for vulnerabilities.
Copy MAC	The Copy MAC menu item is an ease of use feature and enables you to copy the MAC address of the device in hexadecimal or colon hexadecimal notation. Click this menu item to expand it and view MAC formats that can be copied.  Select the MAC format to copy to your PC's clipboard.


BSS Tab - Widgets

The **BSS** tab displays a set of widgets on the top of the display area. The widgets are:

- [Device Classification](#)
- [Sanctioned Devices Seen in Last 5 Days](#)
- [Trend - Device Seen Comparison \(For Last 3 Days\)](#)

Widget - BSS Tab - Device Classification


This widget displays the total number of devices, identified and classified by Extreme AirDefense. This widget shows the total count of the devices and rogues in the network. It also displays a graph of the total device segregated as *Sanctioned*, *Unsanctioned*, and *Neighboring*.

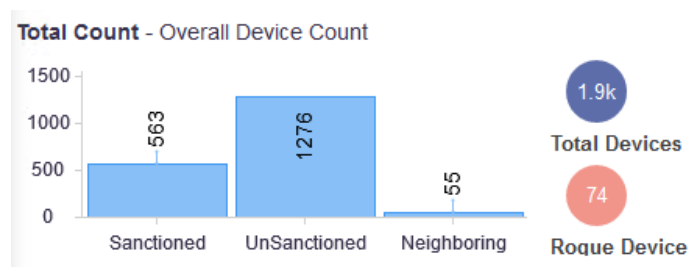

Hover on each of these device types to view more details.


Widget - BSS Tab - Sanctioned Devices Seen in Last 5 Days

This widget displays the total number of sanctioned devices seen in the last 5 days.

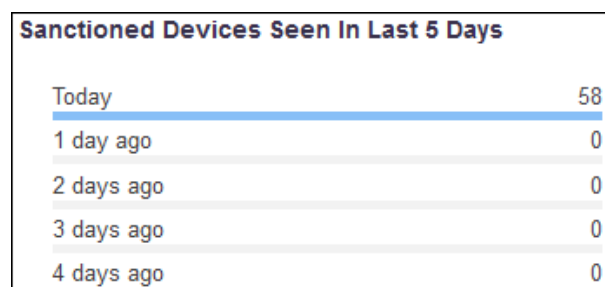

Widget - BSS Tab - Trend-Device Seen Comparison (For last 3 days)


This widget displays the trend of the total number of devices seen in the network in the last three (3) days.

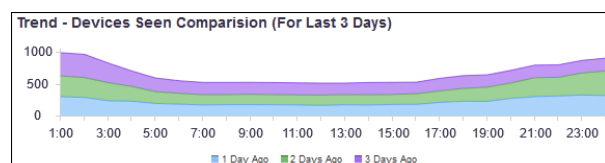

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.

Wireless Clients


The **Wireless Client** tab displays a list of wireless clients, sanctioned or otherwise, that were discovered by Extreme AirDefense in your network during regular scans.

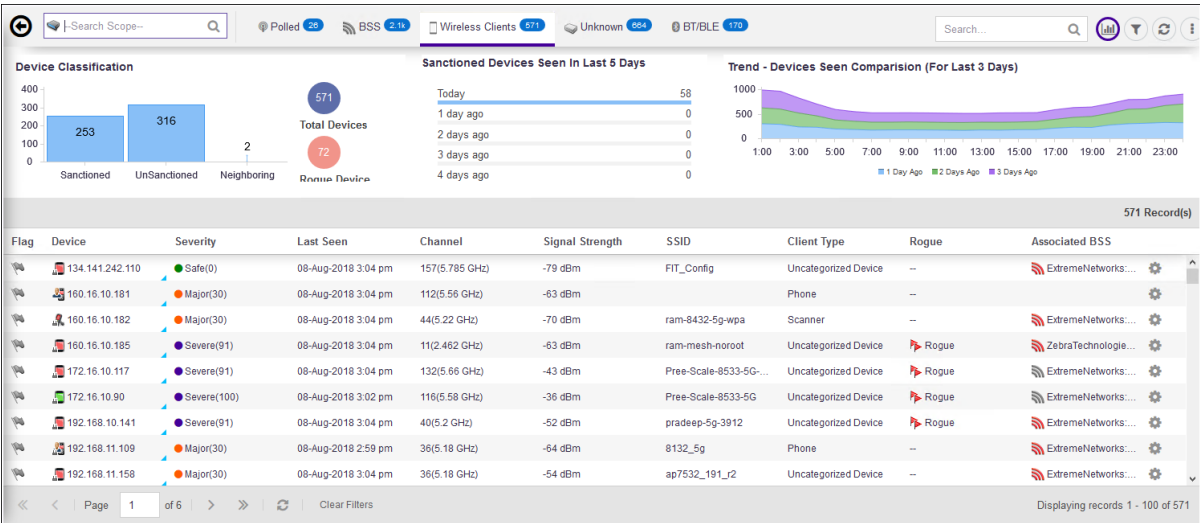


The **Wireless Clients** tab displays a set of widgets on top of the display area. These widgets are:

- [Device Classification](#)
- [Sanctioned Devices Seen in Last 5 Days](#)
- [Trend—Device Seen Comparison \(For Last 3 Days\)](#)

The **Wireless Clients** table displays the following information:

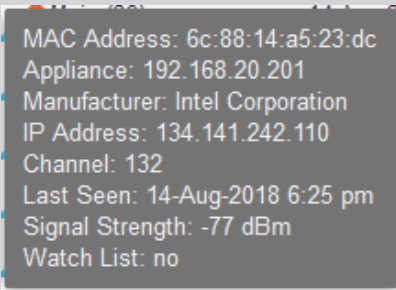Field	Description
Flag	Select the  icon to indicate that this device is considered to be of interest. The flag changes to  .
Device	The device type icon and its name. Hover on the name to display more details about the device in a pop-up. The following image is a pop up that displays on hover.  Select the MAC address of the device to view its details in a separate window.

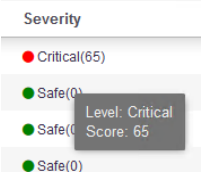Field	Description
Severity	The device's threat level to your network. Hover on this value to display a threat score for this device. •  Severe indicates a severity level of <i>Severe</i> which is higher than the level <i>Critical</i>. •  Critical indicates a severity level of <i>Critical</i>. •  Major indicates a severity level of <i>Major</i>. •  Minor indicates a severity level of <i>Minor</i>. •  Safe indicates the site/location is <i>Safe</i>. 
Last Seen	The date and time this device was last seen actively transmitting.
Manufacturer	The name of the manufacturer of the device.
Scope	The name of the site/location where this device is located as identified by Extreme ExtremeCloud IQ Controller.
SSID	The SSID of the network to which this device is adopted to.
Associated BSS	The BSS this wireless client is associated with.
802.1x Name	The 802.1x name of the device.
Signal Strength	The signal strength for this device.
Channel	The channel and the frequency on which this device was identified.
Sensed Encryption	The encryption scheme used by the device if any.
Rogue	Indicates if a device has been flagged as a <i>Rogue</i> device. All rogue devices are flagged with this  Rogue icon.

Field	Description
Sensor	The name of the sensor that sees this device.
	Select this icon to display a context sensitive menu of actions that can be performed for this particular device. The following image displays the actions that are available for an access point. Alarms Properties Upgrade Rename Move Remove Readiness Test Device Polling ▶ Action Details Port Lookup (Find this device) Forensic Analysis Direct Connect Copy MAC ▶

Select a device in the table to display a right-panel details window that includes the following columns:

Table 6:


Parameter	Value
Device Name	Displays the name of the device.
Description	Displays a description of the device.
Annotations	
MAC	Displays the MAC Address for the device.
Random MAC	Indicates whether the device is using random MAC (yes) or not (no).
Observed	
Ad-Hoc	
First Seen	Displays the date the device was first seen on the network

Table 6: (continued)

Parameter	Value
Last Seen	Displays the date the device was last seen on the network.
Polled Authentication	
Polled Encryption	
Sensed Authentication	
Sensed Encryption	
Reported SSID	Displays the SSID for the device.
Reported IP	Displays the device's IP Address
Protocols	
Noise	
Signal Strength	Displays the signal strength of the device.
Channel	
Terminating	Indicates whether the device is terminating (yes) or not (no).
VLAN	
Vendor	Displays the name of the vendor of the device.

By default, only a subset of columns are displayed in the table. Depending on the context, additional fields can be manually added to the table.

To manipulate the data display, select the  icon to the left of any column header. For example, you can sort the data, add or remove table columns, and apply a filter (when available). The following drop-down list displays.

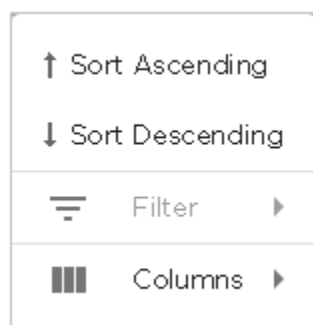

Select the **Filter** control (if available) to filter the data in the column based on the available filtering criteria. You can also apply a filter by clicking on graph categories within the widgets.

Select the **Columns** item to view a list of columns that can be added to the table.

The following table lists the additional columns that can be added to the table.

Field	Description
Name	The name of the device if configured.
MAC	The MAC address of the device.
IP	The IP address assigned to this device.
Client Type	The device's client type as classified by Extreme AirDefense. Client Type can be one of the following types: • Categorized Device • Scanner • Employee Personal Device • Guest WiFi User • Laptop • Phone • Tablet • Loyalty Customer • In Store Customer • Potential Customer
First Seen	The date and time this device was first seen on the network.
Scope	The name of the site/location where this device is located as identified by Extreme AirDefense.
Floor	The floor number (in the site/location) where this device is located as identified Extreme AirDefense.
Classification	The device's classification as classified by Extreme AirDefense. A device can be classified as <i>Sanctioned (Inherit Profile)</i>, <i>Unsanctioned</i>, <i>Neighboring</i>, or <i>Sanctioned (Assigned Profile)</i>. You can manually set a device's classification from the  > Classification menu item from within the table.
Sensed Authentication	The authentication scheme the device uses to authenticate.
Sensed Encryption	The encryption scheme used by the device if any.
Polled Authentication	The polled authentication for this device.
Polled Encryption	The polled encryption scheme for this device.
Protocols	The various wireless protocols supported by the device.
Device Actions	Indicates if any of the following actions have taken place: • AP Test • Wireless Vulnerability Assessment • Termination • Dedicated Spectrum Analysis • Inline Spectrum Analysis



Field	Description
Access Points	The name of the access point that sees this device.
Security Policy	The security policy, if any, applied to this device.


Device Actions


The following actions can be performed on each device listed in the table. Select the



icon to display the list of actions that can be performed. The actions that can be performed are different for the different device types.

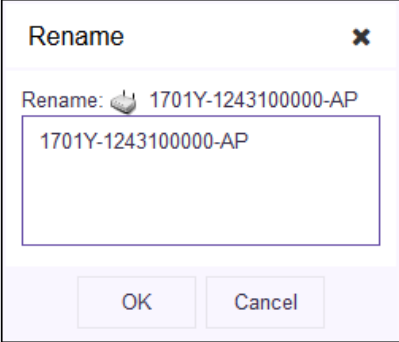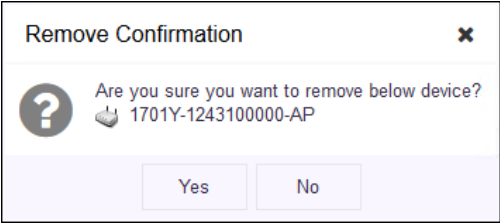Action	Description
Alarms	Displays the Alarms for the device. When selected, the alarms for this device are displayed in the Alarms screen
Rename	Select this menu item to rename this device. Use this menu item to configure a meaningful name for this device. A small window displays. Use this Rename window to provide a name for this device. 
Remove	Select this menu item to remove the device. A small confirmation window displays. Select Yes to remove the device. Select No to exit without removing the device. 

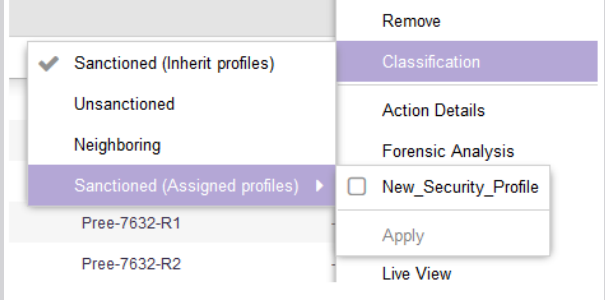Action	Description
Classification	Use this menu item to classify the device into one of <i>Sanctioned (Inherit profiles)</i>, <i>Unsanctioned</i>, <i>Neighboring</i>, and <i>Sanctioned (Assigned Profiles)</i>.  The <i>Sanctioned (Assigned Profiles)</i> menu item expands to show a list of available profiles that can be assigned to this device.
Client Type	Use this menu item to select the device's correct client type when the device has not been automatically classified by Extreme AirDefense. Client Type can be one of the following types: • Categorized Device • Scanner • Employee Personal Device • Guest WiFi User • Laptop • Phone • Tablet • Loyalty Customer • In Store Customer • Potential Customer
Action Details	Select the Action Details menu item to view a table listing specific actions occurring on the device.
Add to ACL	Use this menu item to add this device to the Access Control List. Note: The ACL option is supported only with AirDefense systems that are integrated with ExtremeCloud IQ Controller management platforms.
Forensic Analysis	Use the Forensic Analysis menu item to analyze the device and provide detailed information on the device. Forensic Analysis returns the threat level of the device, device alarms, and device association details about the device.
Locate	Use the Locate menu item to locate this device on your network. This opens the Location Tracking window from where you can track the device.

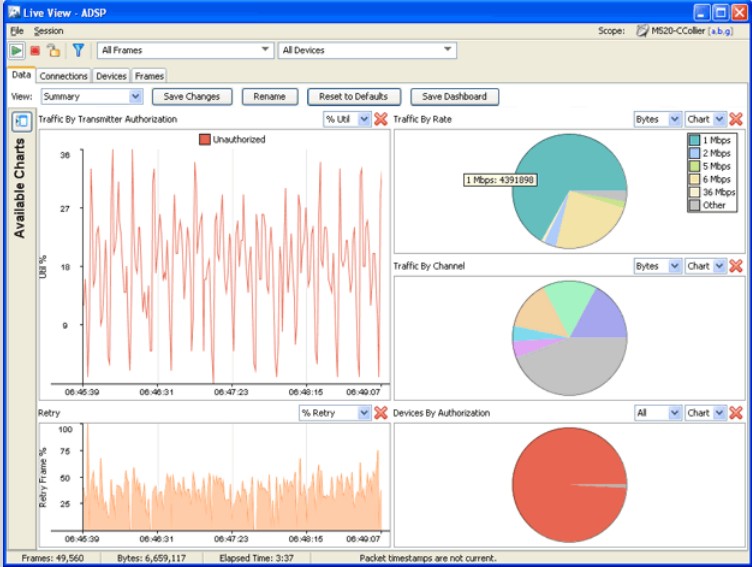Action	Description
Live View	The Live View menu item displays the Live View window for the device where you can view the device's live status and other parameters. 
Port Lookup (Find this Device)	Use the Port Lookup menu item to scan for and locate this device, in your network, using its MAC address.
Terminate	Use the Terminate menu item to open the Termination options window from where you can terminate this device.
Copy MAC	The Copy MAC menu item is an ease of use feature and enables you to copy the MAC address of the device in hexadecimal or colon hexadecimal notation. Click this menu item to expand it and view MAC formats that can be copied. 

Wireless Clients - Widgets


The **Wireless Clients** tab displays a set of widgets on top of the display area. These widgets are:

- [Device Classification](#)
- [Sanctioned Devices Seen in Last 5 Days](#)
- [Trend - Device Seen Comparison \(For Last 3 Days\)](#)

Widget - Wireless Client Tab - Device Classification

This widget displays the total number of devices, identified and then classified by Extreme AirDefense. This widget shows the count of all the devices and rogues


in the network. It also displays a graph of the devices segregated as *Sanctioned*, *Unsanctioned*, and *Neighboring*.

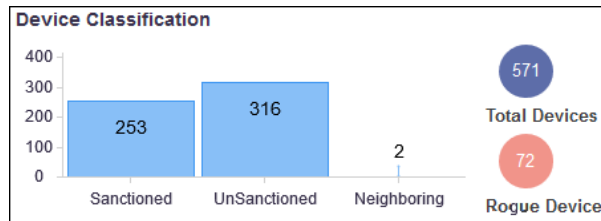

Hover on each of these device types to view more details.


Widget - Wireless Clients Tab - Sanctioned Devices Seen in Last 5 Days

This widget displays a graph that compares the number of sanctioned wireless client devices seen within the network in the last five(5) days.

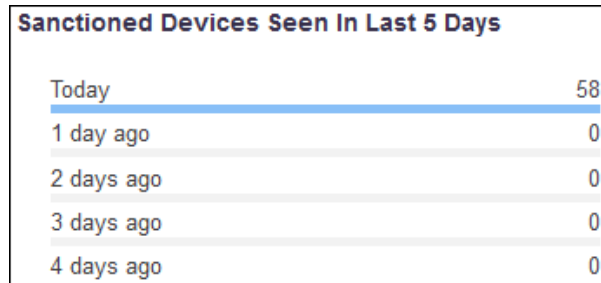

Widget - Wireless Clients - Trend—Device Seen Comparison (For Last 3 Days)


This widget displays a graph that displays the hourly trend of all wireless clients seen in the network in the last three(3) days.

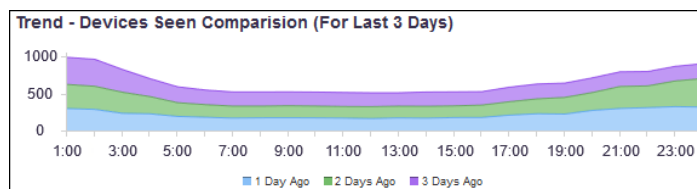

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.

Unknown Devices


The **Unknown Devices** tab displays a list of all devices on the wired network that were discovered by Extreme AirDefense from the source or destination address in communications from or to a wireless device in your network. If Extreme AirDefense is unable to identify the MAC address listed as the ultimate source or destination, then the identified device is classified as *Unknown Device*.

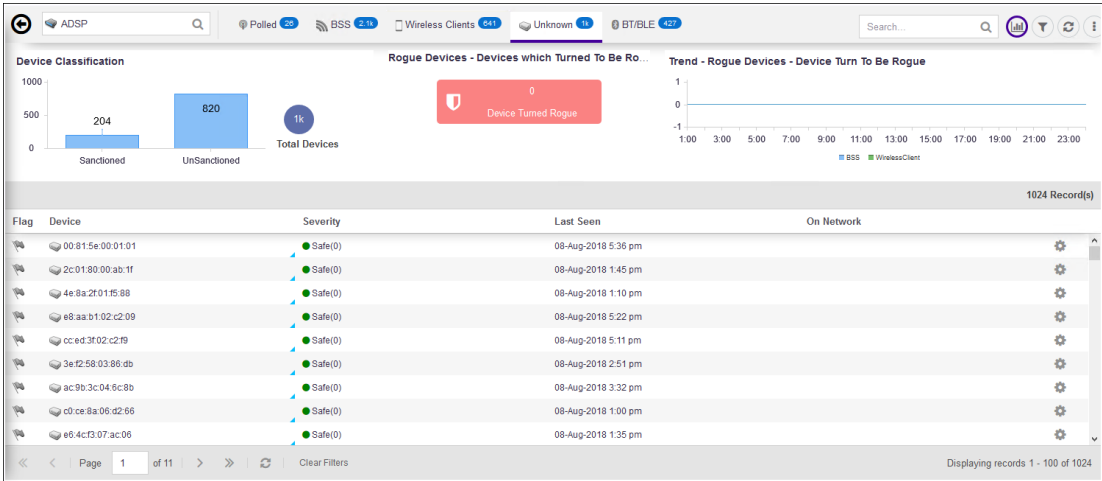


The **Unknown Devices** tab displays a set of widgets on the top of the display area. The widgets are:

- [Device Classification](#)
- [Rogue Devices - Devices which turned to be rogue](#)
- [Trend - Rogue Devices - Device turned to be rogue](#)

The **Unknown Devices** table displays the following information:

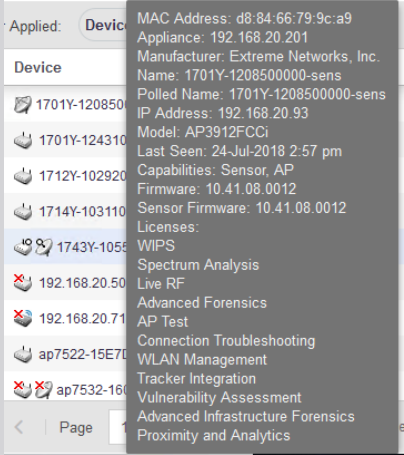Field	Description
Flag	Select the  icon to indicate that this device is considered to be of interest. The flag changes to  .
Device	The device type icon and its name. Hover on the name to display more details about the device in a pop-up. The following image is a pop up that displays on hover. 

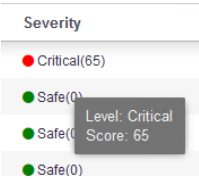Field	Description
Severity	The device's threat level to your network. Hover on this value to display a threat score for this device. •  Severe indicates a severity level of <i>Severe</i> which is higher than the level <i>Critical</i>. •  Critical indicates a severity level of <i>Critical</i>. •  Major indicates a severity level of <i>Major</i>. •  Minor indicates a severity level of <i>Minor</i>. •  Safe indicates the site/location is <i>Safe</i>. 
Last Seen	The date and time this device was last seen on the network.
On Network	Identifies how ADSP obtained the MAC address of a non-wireless device. The different entries are: • Sensor Segment—The frame containing MAC address was detected by a sensor on its wired port. This device is therefore known to be on a LAN segment containing the sensor and is therefore on the same wired infrastructure. • Switch—This MAC address was obtained from a data poll of the tables of a wireless switch. At some time, a know wireless device communicated with this unknown device. The unknown device is on the infrastructure somewhere, but the LAN segment is unknown. • Blank—This MAC address was detected by a sensor radio and the wireless device communicating with this MAC is not sanctioned in ADSP. This is most likely a device on a neighboring network and not part of the ADSP protected infrastructure. • Sanctioned BSS—This MAC address has been seen by a sensor in communication with a Sanctioned BSS and is likely to be a device on the ADSP protected infrastructure, but has not been reported to ADSP as being on the wired network by poll or discovery.

By default, only a subset of columns are displayed in the table. Depending on the context, additional fields can be manually added to the table.

To manipulate the data display, select the  icon to the left of any column header. For example, you can sort the data, add or remove table columns, and apply a filter (when available). The following drop-down list displays.



Select the **Filter** control (if available) to filter the data in the column based on the available filtering criteria. You can also apply a filter by clicking on graph categories within the widgets.

Select the **Columns** item to view a list of columns that can be added to the table.

The following table lists the additional columns that can be added to the table.

Field	Description
Name	The name of the device if configured.
MAC	The MAC address of the device.
IP	The IP address assigned to this device.
First Seen	The date and time this device was first seen on the network.
Scope	The name of the site/location where this device is located as identified by Extreme AirDefense.
Floor	The floor number (in the site/location) where this device is located as identified Extreme AirDefense.
Manufacturer	The name of the manufacturer of the device.
Classification	Use this menu item to classify the device into one of <i>Sanctioned (Inherit profiles)</i>, <i>Unsanctioned</i>, <i>Neighboring</i>, and <i>Sanctioned (Assigned Profiles)</i>. The <i>Sanctioned (Assigned Profiles)</i> menu item expands to show a list of available profiles that can be assigned to this device.


Device Actions


The following actions can be performed on each device listed in the table. Select the



icon to display the list of actions that can be performed. The actions that can be performed are different for the different device types.

Action	Description
Alarms	Displays the Alarms for the device. When selected, the alarms for this device are displayed in the Alarms screen
Rename	Select this menu item to rename this device. Use this menu item to configure a meaningful name for this device. A small window displays. Use this Rename window to provide a name for this device. Rename Rename: 1701Y-1243100000-AP 1701Y-1243100000-AP OK Cancel
Remove	Select this menu item to remove the device. A small confirmation window displays. Select Yes to remove the device. Select No to exit without removing the device. Remove Confirmation ? Are you sure you want to remove below device? 1701Y-1243100000-AP Yes No

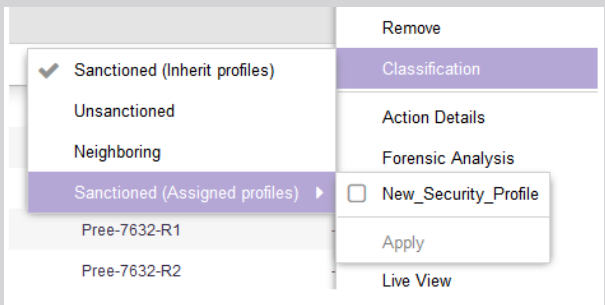Action	Description
Classification	Use this menu item to classify the device into one of <i>Sanctioned (Inherit profiles)</i>, <i>Unsanctioned</i>, <i>Neighboring</i>, and <i>Sanctioned (Assigned Profiles)</i>.  The <i>Sanctioned (Assigned Profiles)</i> menu item expands to show a list of available profiles that can be assigned to this device.
Action Details	Select the Action Details menu item to view a table listing specific actions occurring on the device.
Add to ACL	Use this menu item to add this device to the Access Control List. Note: The ACL option is supported only with AirDefense systems that are integrated with ExtremeCloud IQ controller management platforms.
Forensic Analysis	Use the Forensic Analysis menu item to analyze the device and provide detailed information on the device. Forensic Analysis returns the threat level of the device, device alarms, and device association details about the device.

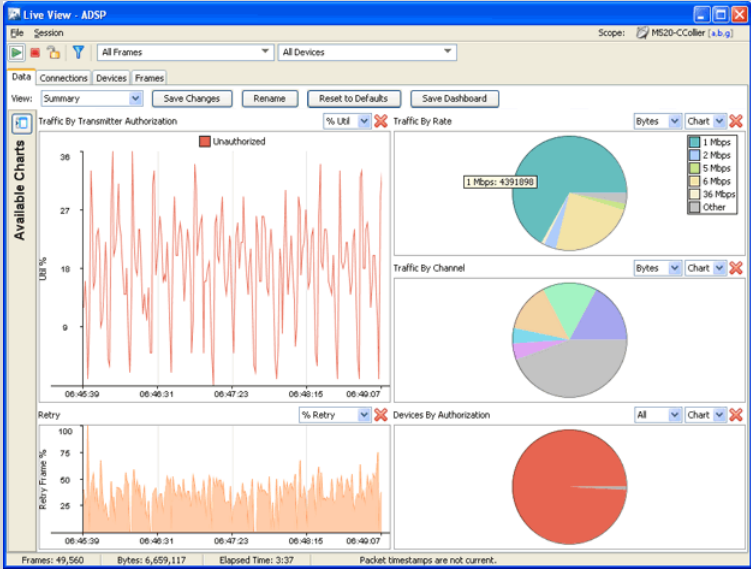Action	Description
Live View	The Live View menu item displays the Live View window for the device where you can view the device's live status and other parameters. 
Port Lookup (Find this Device)	Use the Port Lookup menu item to scan for and locate this device, in your network, using its MAC address.
Terminate	Use the Terminate menu item to open the Termination options window from where you can terminate this device.
Copy MAC	The Copy MAC menu item is an ease of use feature and enables you to copy the MAC address of the device in hexadecimal or colon hexadecimal notation. Click this menu item to expand it and view MAC formats that can be copied. 

Unknown Devices - Widgets


The **Unknown Devices** tab displays a set of widgets on the top of the display area. The widgets are:

- [Device Classification](#)
- [Rogue Devices - Devices which turned to be rogue](#)
- [Trend—Rogue Devices - Device turned to be rogue](#)

Widget - Unknown Devices - Device Classification

This widget displays the total number of devices, identified and then classified as *Unknown Device* by Extreme AirDefense. This widget shows the count of all the


unknown devices. It also displays a graph of the devices segregated as *Sanctioned* and *Unsanctioned*.

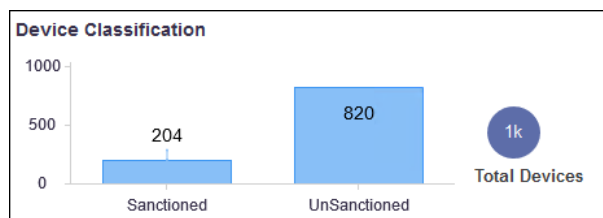

Hover on each of these device types to view more details.


Widget - Unknown Devices - Devices which turned to be Rogue

This widget displays the number of *Unknown* devices that were identified as *Rogue* devices.

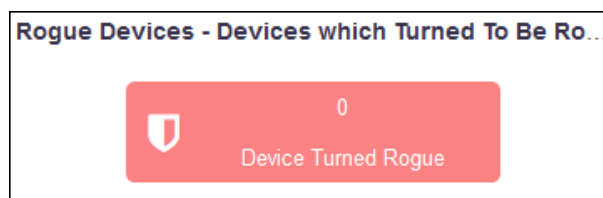

Widget - Unknown Devices - Trend - Rogue Device - Device Turn To be Rogue


This widget displays a hourly trend of *BSS* and *Wireless Clients* that turned rogue over a period of twenty four(24) hours.

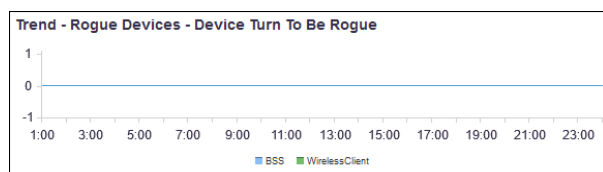

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.

Bluetooth and Bluetooth Low Energy Devices

The **BT/BLE** tab displays a list of Bluetooth or Bluetooth Low Energy (BLE) clients, sanctioned or otherwise, that were discovered by Extreme AirDefense in your network during regular scans.

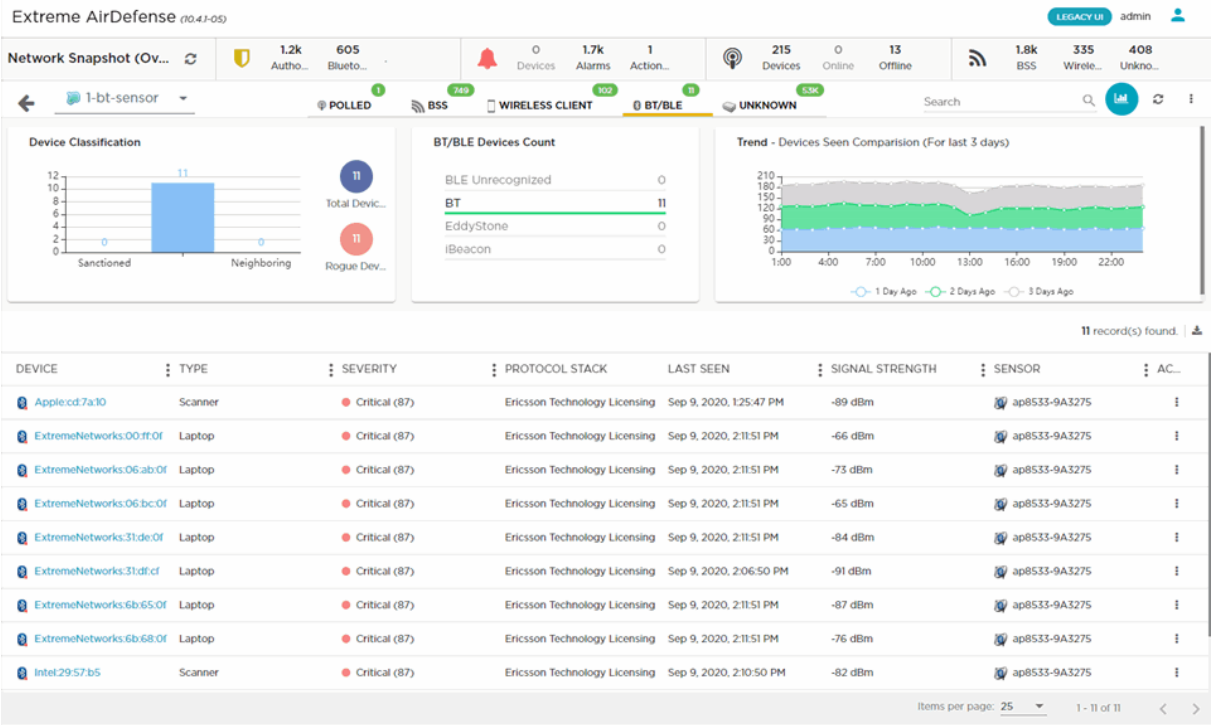

The **BT/BLE** tab displays a set of widgets on top of the display area. These widgets are:


- [Device Classification](#)
- [Sanctioned Devices Seen in Last 5 Days](#)
- [Trend - Device Seen Comparison \(For Last 3 Days\)](#)

The **BT/BLE** table displays the following information for each device:

Table 7:

Field	Description
Device	Displays the device type icon and its name. Place your cursor on the name to display more details about the device in a pop-up: MAC Address: f8:13:37:00:05:99 Appliance: 192.168.20.201 Last Seen: 15-Aug-2018 5:59 pm Signal Strength: -95 dBm
Type	Displays the type of BT/BLE device as identified by Extreme AirDefense.

Table 7: (continued)

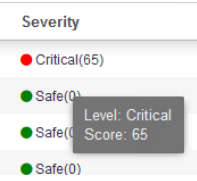Field	Description
Severity	Displays the device's threat severity to your network. Place your cursor on this value to display a threat score for the device: ● Severe indicates a severity level of <i>Severe</i> which is higher than the level <i>Critical</i>. ● Critical indicates a severity level of <i>Critical</i>. ● Major indicates a severity level of <i>Major</i>. ● Minor indicates a severity level of <i>Minor</i>. ● Safe indicates the site/location is <i>Safe</i>. 
Protocol Stack	Displays the name of the protocol in which the device is participating.
Last Seen	Displays the date and time the device was last seen on the network.
Signal Strength	Displays the signal strength for the device.
Sensor	Displays the name of the sensor that sees the device.
Action	Displays several device actions in a drop-down list, including Alarms , Remove , Classification , Live View , and Copy MAC .

By default, only a subset of columns are displayed in the table. Depending on the context, additional fields can be manually added to the table.

To manipulate the data display, select the  icon to the left of any column header. For example, you can sort the data, add or remove table columns, and apply a filter (when available). The following drop-down list displays.



Select the **Filter** control (if available) to filter the data in the column based on the available filtering criteria. You can also apply a filter by clicking on graph categories within the widgets.

Select the **Columns** item to view a list of columns that can be added to the table.

The following table lists the additional columns that can be added to the table.



Table 8:

Field	Description
Description	Displays a brief description of the device. This information only displays when configured on the device. The column is empty if no description is configured on the device.
MAC	Displays the device's MAC address.
First Seen	Displays the date and time the device was first seen on the network.
Scope	Displays the site or location where the device is located as identified by Extreme AirDefense.
Floor	Displays the floor number at the site or location where the device is located as identified by Extreme AirDefense.
Manufacturer	Displays the name of the device's manufacturer
Classification	Displays the device's classification as classified by Extreme AirDefense. A BT/BLE device can be classified as <i>Sanctioned (Inherit Profile)</i> , <i>Unsanctioned</i> , or <i>Neighboring</i> . You can manually set a device's  classification from the > Classification menu item from within the table.

Device Actions

The following actions can be performed on device listed in the Device Details.

Select the  icon to display the list of actions that can be performed. The actions that can be performed are different for the different device types. The actions also differ depending on whether you checked specific devices in Device Details (the action applies to the checked devices) or if you checked no devices (the action applies to all of the listed devices).

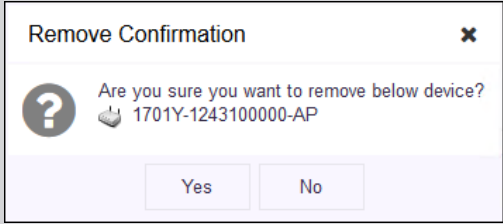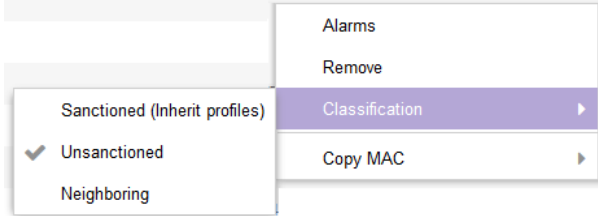Action	Description
Alarms	Displays the Alarms for the device. When selected, the alarms for this device are displayed in the Alarms screen
Remove	Select this menu item to remove the device. A small confirmation window displays. Select Yes to remove the device. Select No to exit without removing the device. 
Classification	Use this menu item to classify the device into one of <i>Sanctioned (Inherit profiles)</i>, <i>Unsanctioned</i>, or <i>Neighboring</i>. 
Copy MAC	The Copy MAC menu item is an ease of use feature and enables you to copy the MAC address of the device in hexadecimal or colon hexadecimal notation. Click this menu item to expand it and view MAC formats that can be copied.  Select the MAC format to copy to your PC's clipboard.


BT, BLE Devices - Widgets

The **BT/BLE** tab displays a set of widgets on top of the display area. These widgets are:

- [Device Classification](#)
- [Sanctioned Devices Seen in Last 5 Days](#)
- [Trend - Device Seen Comparison \(For Last 3 Days\)](#)

Widget - BT/BLE Devices - Device Classification


This widget displays the total number of devices, identified and then classified as *BT/BLE Device* by Extreme AirDefense. This widget shows the count of all BT/BLE devices and the number of rogue devices of this type. It also displays a graph of the devices classified as *Sanctioned*, *Unsanctioned*, or *Neighboring*.

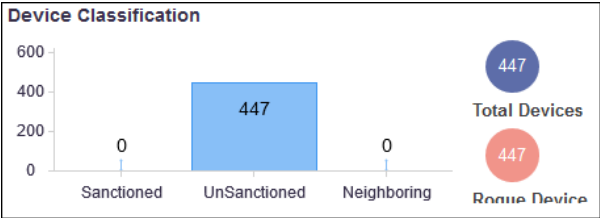

Hover on each of these device types to view more details.


Widget - BT/BLE Devices - BT/BLE Devices Count

This widget displays the counts of different Bluetooth or Bluetooth Low Energy devices found on the network. This data is displayed as a bar graph.

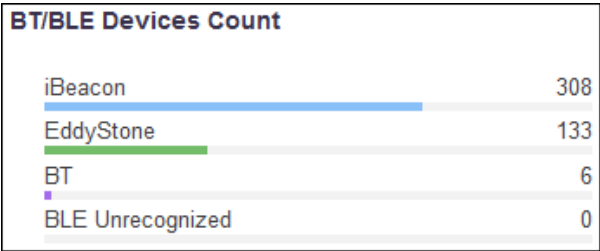


Widget - BT/BLE Devices - Trend - Devices Seen Comparison (Last 3 Days)

This widget displays a graph that displays the hourly trend of all Bluetooth / Bluetooth Low Energy devices seen in the network in the last three(3) days.

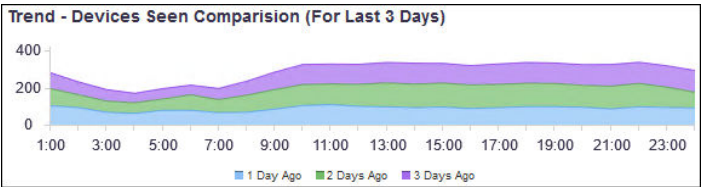

Select a label to include or exclude its data in the widget. When the data for the label is excluded, the label is displayed in a lighter color.

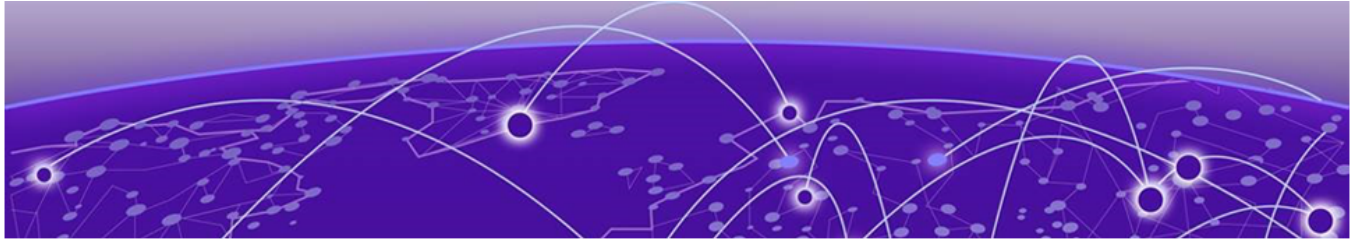

Alarms View

[Alarms - Alarms Summary](#) on page 102

[Alarms - Details View](#) on page 103

[Alarms Widget View](#) on page 104

[Alarm Details List](#) on page 105

Use the **Alarms View** to manage your alarms from Extreme AirDefense. The **Alarm View** screen is a single location from where you can see the alarms activity in your network.


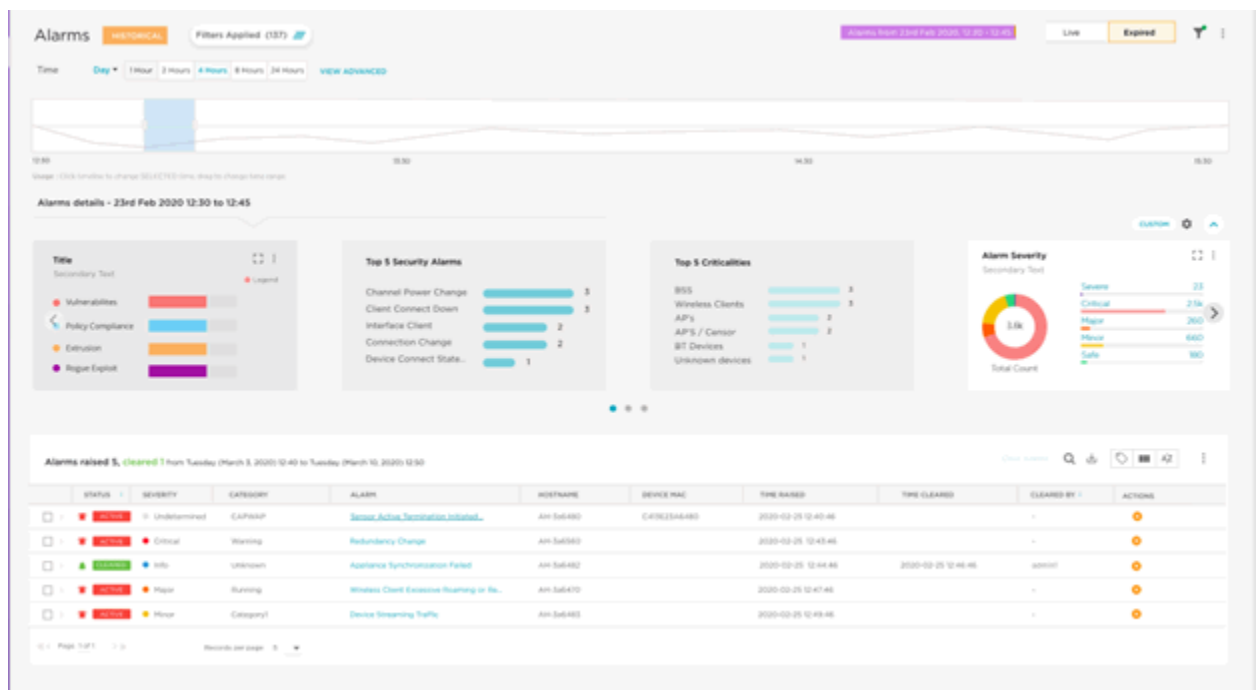


Figure 18: Alarms View - Historical

 The top tool bar includes several functions that you can use to customize the **Alarms View**.




Toggle between the **Live** and **Expired** icons to change the **Alarms View** data from a view of past activity (which displays as **HISTORICAL**), to a real-time view of current activity

(which displays as LIVE). The tool bar also displays the total number of filters applied to the data.

Select the Filter icon  to display the following filtering options in the Filter View:

Figure 19: Filter View

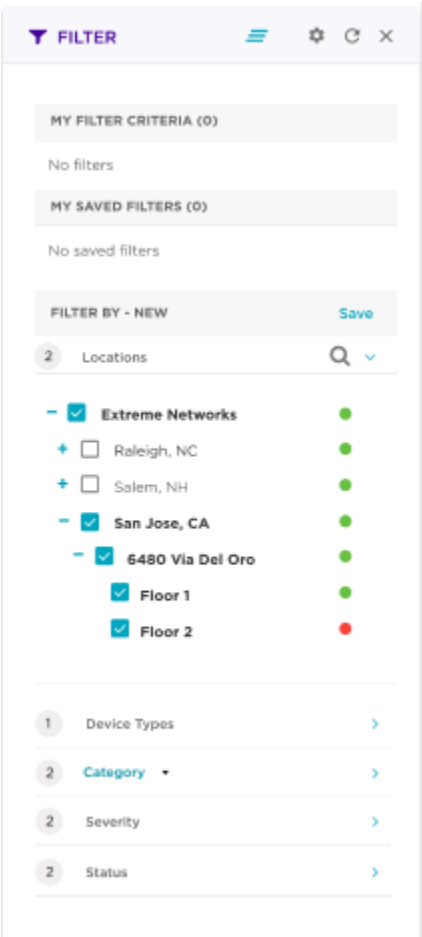

Use the tools in the Filter tool bar to Clear the filters, change the location of the Filter View window in the Alarms View (pin left, pin right, pop out), and Refresh the filters.

Alarm Actions

Select the  icon from the toolbar perform several actions on the alarms listed in the table.

The **Alarms View** is divided into the **Alarms Details** and **Alarms Raised** panes. You can expand and collapse the **Alarms Details** pane to further customize the data display.

Alarms Details

The expandable **Alarms Details** pane includes several widgets that provide detailed data about the alarms in your network.



Figure 20: Alarms Details Pane

Alarms Raised

The **Alarms Raised** pane displays a table with details about the alarms raised. If you are viewing the Historical data, the alarms details are for alarms raised during the time duration you select in the **Alarms Summary** pane. If you are viewing the Live data, the alarms details are for alarms currently raised.

	STATUS	SEVERITY	CATEGORY	ALARM	HOSTNAME	DEVICE MAC	TIME RAISED	TIME CLEARED	CLEARED BY	ACTIONS
☐	ACTIVE	Undetermined	CAPWAP	Sensor Active Termination Initiated...	AH-3a6480	C40E23A6480	2020-02-25 12:40:46		-	
☐	ACTIVE	Critical	Warning	Redundancy Change	AH-3a6560		2020-02-25 12:43:46		-	
☐	CLEARED	Info	Unknown	Appliance Synchronization Failed	AH-3a6482		2020-02-25 12:44:46	2020-02-25 12:46:46	admin!	
☐	ACTIVE	Major	Running	Wireless Client Excessive Roaming or Re...	AH-3a6470		2020-02-25 12:47:46		-	
☐	ACTIVE	Minor	Category1	Device Streaming Traffic	AH-3a6483		2020-02-25 12:48:46		-	

Figure 21: Alarms Raised Pane

Alarm Details Drill Down

Select an alarm in the **Alarms Raised** table to open the **Alarm Details Drill Down** window. The **Alarm Details Drill Down** displays detailed information about the alarms and issues seen in your network. See the [Alarms Details Drill Down](#) page for more information about this view.

Alarms - Alarms Summary

The **Alarms Summary** pane displays an up to date counts of all the alarms generated in your network.

Alarms Summary (Overall)	CURRENT	1111 Active	0 Action Taken	TOTAL	1981 Alarms	534 Severe/Critical	0 Action Taken	HEALTH	95%



Note
This pane cannot be modified.

The following information is displayed:

Panel	Description
Current	Displays the current total of the alarms raised in the network. This panel lists the Active alarms and the count of Action Taken on these alarms.
Total	Displays the total number of alarms raised in the network. This panel also displays a count of alarms of the categories <i>Severe</i> and <i>Critical</i> along with the count of Action Taken on these alarms.
Health	This column indicates a calculated value that indicates the health of your AirDefense monitored network. This value is calculated using the threat index of each alarm raised in the network and includes the alarms from all the sites and floors managed by AirDefense. When calculating the Health value, the threat index of the topmost alarms are used. For example, when alarms of the categories <i>Severe</i>, <i>Critical</i>, <i>Minor</i> are present, only the threat indexes of all alarms of <i>Severe</i> category are considered for calculating the Health value. Other alarms are ignored. The threat index of alarms that are acknowledged are not included when calculating the Health in the next iteration of the calculation.

Periodically use the  icon next to the pane's title to refresh the data displayed within this pane.

Alarms - Details View

This screen displays a list of all alarms raised for the selected site/location along with information required to take appropriate actions with respect to these alarms.

Extreme AirDefense (10.6.0-03)

admin

Alarm Summary (Overall)

CURRENT

67Active

0Action Taken

TOTAL

115Alarms

53Severe,Critical

0Action Taken

HEALTH

5%

Area 1

Search

25 record(s) found.

☐	FLAG	CRITICALITY	ALARM TYPE	DEVICE	START TIME	STATUS	SSID	SENSOR	ACKN...
☐		Minor (20)	Wireless Client Exces...	CISCOldigiaco.wlan	Apr 19, 2023, 1:33:00 PM	Inactive (expires in 1:46)	typhoon	V5_SIMRS_00:11:22:...	
☐		Major (30)	Fake-AP Flood Attack	V5_SIMRS_00:11:22:...	Mar 13, 2023, 6:01:00 AM	Inactive (expires in 8:47)		V5_SIMRS_00:11:22:...	
☐		Major (30)	Fake-AP Flood Attack	V5_SIMRS_00:11:22:...	Mar 13, 2023, 8:18:00 AM	Inactive (expires in 8:59)		V5_SIMRS_00:11:22:...	
☐		Major (30)	Fake-AP Flood Attack	V5_SIMRS_00:11:22:...	Mar 13, 2023, 5:32:00 AM	Inactive (expires in 9:16)		V5_SIMRS_00:11:22:...	
☐		Major (30)	Fake-AP Flood Attack	V5_SIMRS_00:11:22:...	Mar 13, 2023, 6:55:00 AM	Inactive (expires in 8:52)		V5_SIMRS_00:11:22:...	
☐		Major (30)	Fake-AP Flood Attack	V5_SIMRS_00:11:22:...	Apr 2, 2023, 3:14:00 AM	Inactive (expires in 9:04)		V5_SIMRS_00:11:22:...	
☐		Major (30)	Fake-AP Flood Attack	V5_SIMRS_00:11:22:...	Mar 13, 2023, 5:23:00 AM	Active		V5_SIMRS_00:11:22:...	
☐		Major (30)	Fake-AP Flood Attack	V5_SIMRS_00:11:22:...	Mar 13, 2023, 5:26:00 AM	Inactive (expires in 7:58)		V5_SIMRS_00:11:22:...	
☐		Major (30)	Fake-AP Flood Attack	V5_SIMRS_00:11:22:...	Mar 26, 2023, 1:43:00 AM	Inactive (expires in 8:37)		V5_SIMRS_00:11:22:...	

This screen is divided into these sections:

- **Alarm Summary (Overall)** - Provides a snapshot of the current state of your network with respect to the alarms generated. Use the  to refresh the displayed data. For more information on this pane, see [Alarms - Alarms Summary](#) on page 102.
- **Network Tree View** - Use this pane to select the scope of the data to display. For more information, see the section *Network Tree View* in [Alarms View](#) on page 100.
- **Toolbar** - The toolbar enables you to perform specific tasks such as hiding/showing the widgets, refreshing the screen, and performing other common actions in a single click. Use the **Search** field to filter devices listed in this screen.
- **Alarm Details List** - This pane displays a list of all alarms generated in your AirDefense managed network and in the selected site/location. For more information, see [Alarm Details List](#) on page 105.

Alarms Widget View


The **Alarms Widgets** pane consists of four (4) widgets that provides a comprehensive insight the alarms generated on your network. These widgets are:

- [Category/Sub-Category](#)
- [Device Classification](#)
- [Rogue Activity](#)
- [Alarm Severity](#)

Periodically use the  icon to update the data displayed in the widgets.


Alarm Type Widget

The **Alarm Type** widget displays the types of alarms raised.

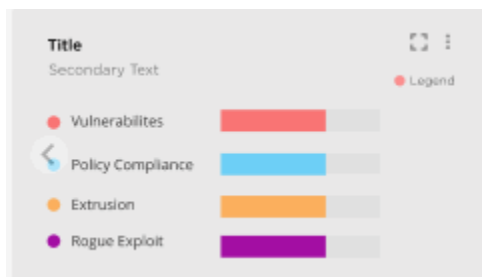

Top 5 Security Alarms Widget

The **Top 5 Security Alarms** widget displays a list of the Top 5 Security Alarms raised. The total number of devices that raised each alarm is included.

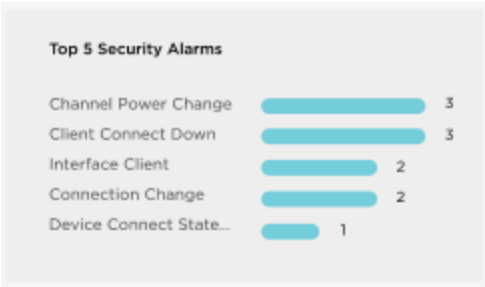


Top 5 Criticalities Widget

The **Top 5 Criticalities** widget displays a list of the Top 5 device types with the most critical alarms raised. The total number of devices that raised each alarm is included..



Alarm Severity

The **Alarm Severity** widget displays a pie chart of the different alarm severities that have been raised. The total number of devices that raised each alarm is included..

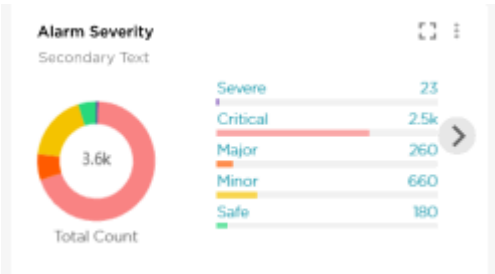

Alarm Details List

The **Alarm Details List** displays details for each alarm generated in a site or location.

To filter the list, do either of the following:


- From the list columns, click one of the icons, click **Filter**, and choose the filter.
- Click on a graph category within the various alarm widgets.

To take action on one or more alarms, check the adjacent check box(es) and select an action from the Actions menu . For details, see [Alarm Actions](#).

FLAG	CRITICALITY	ALARM TYPE	DEVICE	START TIME	STATUS	SSID	SENSOR	ACK...
☐	Minor (20)	Wireless Client Ex...	00:b0:00:00:44:05	Apr 18, 2023, 3:22:00 PM	Inactive (expires in 1:43)	typhoon	V5_SIMRS_00:11:...	
☐	Minor (20)	Wireless Client Ex...	CISCOldigiac.wi...	Apr 18, 2023, 5:20:00 PM	Inactive (expires in 2:13)	typhoon	V5_SIMRS_00:11:...	
☐	Major (30)	Fake-AP Flood Att...	V5_SIMRS_00:11:...	Mar 13, 2023, 6:01:00 AM	Inactive (expires in 7:53)		V5_SIMRS_00:11:...	
☐	Major (30)	Fake-AP Flood Att...	V5_SIMRS_00:11:...	Mar 13, 2023, 8:18:00 AM	Inactive (expires in 9:25)		V5_SIMRS_00:11:...	
☐	Major (30)	Fake-AP Flood Att...	V5_SIMRS_00:11:...	Mar 13, 2023, 5:32:00 AM	Active		V5_SIMRS_00:11:...	
☐	Major (30)	Fake-AP Flood Att...	V5_SIMRS_00:11:...	Mar 13, 2023, 6:55:00 AM	Inactive (expires in 8:54)		V5_SIMRS_00:11:...	
☐	Major (30)	Fake-AP Flood Att...	V5_SIMRS_00:11:...	Apr 2, 2023, 3:14:00 AM	Active		V5_SIMRS_00:11:...	
☐	Major (30)	Fake-AP Flood Att...	V5_SIMRS_00:11:...	Mar 13, 2023, 5:23:00 AM	Inactive (expires in 8:42)		V5_SIMRS_00:11:...	
☐	Major (30)	Fake-AP Flood Att...	V5_SIMRS_00:11:...	Mar 13, 2023, 5:26:00 AM	Inactive (expires in 9:25)		V5_SIMRS_00:11:...	
☐	Major (30)	Fake-AP Flood Att...	V5_SIMRS_00:11:...	Mar 26, 2023, 1:43:00 AM	Inactive (expires in 9:06)		V5_SIMRS_00:11:...	
☐	Major (30)	Fake-AP Flood Att...	V5_SIMRS_00:11:...	Mar 13, 2023, 6:24:00 AM	Inactive (expires in 9:00)		V5_SIMRS_00:11:...	
☐	Major (30)	Fake-AP Flood Att...	V5_SIMRS_00:11:...	Apr 1, 2023, 4:23:00 PM	Inactive (expires in 7:55)		V5_SIMRS_00:11:...	
☐	Major (30)	Fake-AP Flood Att...	V5_SIMRS_00:11:...	Mar 13, 2023, 5:58:00 AM	Inactive (expires in 9:30)		V5_SIMRS_00:11:...	
☐	Major (30)	Fake-AP Flood Att...	V5_SIMRS_00:11:...	Apr 10, 2023, 3:29:00 PM	Inactive (expires in 8:25)		V5_SIMRS_00:11:...	
☐	Major (30)	Fake-AP Flood Att...	V5_SIMRS_00:11:...	Mar 13, 2023, 6:13:00	Inactive (expires in		V5_SIMRS_00:11:...	

The following information is displayed:

Column	Description
Flag	Select the to indicate that the selected alarm is considered to be of interest. The flag changes to .
Criticality	This column displays the criticality value of the alarm. Criticality is a numerical value that indicates how critical the alarm is. The higher the value, the more critical the alarm. Each alarm has a numerical value (criticality index) pre-assigned to it. This value is used when calculating the Site Health for the site/location/system.
Alarm Type	This column displays the type of alarm generated. Each alarm is assigned a threat or criticality index. This index value is displayed in the Criticality column.

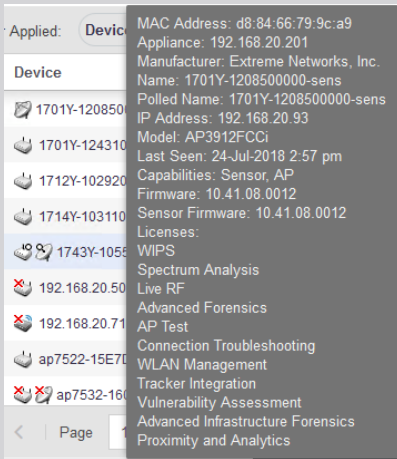Column	Description
Device	The device type icon and its name. Hover on the name to display more details about the device in a pop-up. The following image is a pop up that displays on hover. The information that the pop-up displays is different for the different device types. The following image is of a pop-up displaying data for a polled device. 
Start Time	This column displays the time and date when the alarm started.
Status	This column displays the status of the alarm. Alarms are either <i>active</i> or <i>inactive</i> . Active alarms can either be acknowledged or not acknowledged. Inactive alarms are displayed till they expire after a configured time duration.
SSID	This column displays the SSID of the network to which the device -that generated this alarm- is adopted to.
Sensor	This column displays the name of the sensor that observed the device that generated this alarm.
Acknowledge	Use this column to mark the alarm as <i>Acknowledged</i> . This indicates that you have selected the alarm and viewed the alarm's details. Acknowledged alarms are not used when calculating a site's Site Health .

By default, only a subset of columns are displayed in the table. Depending on the context, additional fields can be manually added to the table.

To manipulate the data display, select the  icon to the left of any column header. For example, you can sort the data, add or remove table columns, and apply a filter (when available). The following drop-down list displays.



Select the **Filter** control (if available) to filter the data in the column based on the available filtering criteria. You can also apply a filter by clicking on graph categories within the widgets.

Select the **Columns** item to view a list of columns that can be added to the table.

The following table lists the additional columns that can be added to the table.

Column	Description
Alarm ID	This column displays the unique ID assigned to this alarm when it was generated. This ID can be used to query for specific alarms.
Expire Time	Displays the date and time when the alarm expires. In case of inactive alarms, this field displays the time the alarm will be purged from the system.
Signal Strength	This column displays the signal strength of the device that triggered this alarm.
Channel	This column displays the channel and the frequency on which this device, that triggered the alarm, was identified.
Notes	This column displays the notes made for this alarm.
Summary	This column displays a brief description of the alarm.

Alarm Actions

Use the Alarm Actions menu icon  from the toolbar to select and apply an action against selected alarms.

In the Alarms Details list, check the relevant alarms and then use this menu to select the desired action. You can use this method to apply a single action against multiple selected alarms. There are also a pair of actions that apply to all alarms in the current


list, and which are available only when no alarms are checked. See the following table for details.

Table 9: Alarm Actions Description

Alarm Action	Description
Clear Alarm	Use this menu item to clear the selected alarm(s). When cleared, the alarm is removed from this list. You can also temporarily clear the alarm for the duration of 1 Hour, 6 Hours, 12 Hours, or 24 Hours. Once this duration expires, the alarm is added back to this list if the conditions that generated this alarm are not cleared.
Edit Alarm Notes	Use this menu item to add more details in a note that is attached to the selected alarm(s). When selected, a dialog is displayed where you can add your notes.
Set Flag	Use this menu to set a flag for the selected alarm(s). Flags are used to indicate that the alarm requires attention. When an flag is set, it changes to  .
Remove Flag	Use this menu to unset or remove a flag set for the selected alarm(s). When unset, the flag icon changes to  .
Mark as New	Use this menu to mark the selected alarm(s) as new. When marked, the alarm is indicated in bold.
Mark as Acknowledged	Use this menu to mark the selected alarm(s) as <i>Acknowledged</i> . This indicates that you have selected the alarm and viewed the alarm's details. Acknowledged alarms are not used when calculating a site's Site Health .
Export Alarms	Use this menu to export the selected alarm(s) as a Comma Separated Value (csv) file. When prompted, provide the name and place to save the file.
Manage Cleared Alarms	Use this menu to manage alarms that you have cleared or selected to remain cleared for a set period. Use the screen to reset these cleared alarms.

Table 9: Alarm Actions Description (continued)

Alarm Action	Description
Clear all (filtered) alarms	Clears all alarms that are currently listed in the Alarms List page. Note the following conditions: • This action is available only when no alarms are checked in the Alarms List. If any alarms are checked, this action is greyed out. • If the number of alarms exceeds what the page displays, this action includes alarms that were returned by the query, but which appear off the current page (use the Items per page controls to increase the number of displayed alarms). • The action label includes "filtered" only if you have a filter applied to the list. In this case, only alarms that meet the filter criteria are affected.
Acknowledge all (filtered) alarms	Acknowledges all alarms that are currently listed on the Alarms List view. Note the following conditions: • This action is available only when no alarms are checked in the Alarms List. If any alarms are checked, this action is greyed out. • If the number of alarms exceeds what the page displays, this action includes alarms that were returned by the query, but which appear off the current page (use the Items per page controls to increase the number of displayed alarms). • The action label includes "filtered" only if you have a filter applied to the list. In this case, only alarms that meet the filter criteria are affected.

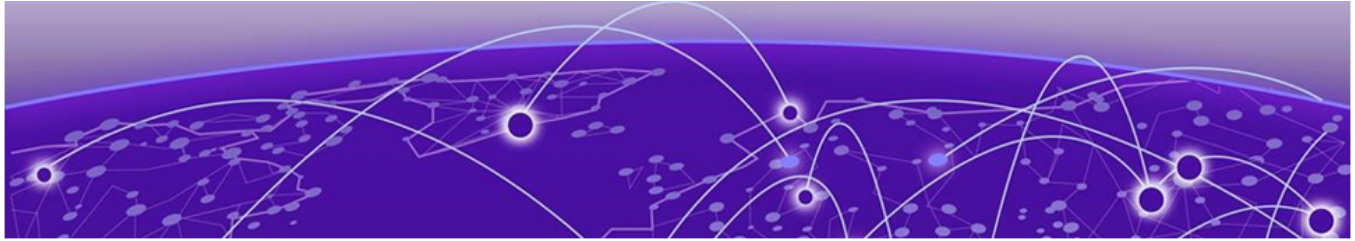

Configuration

Appliance Management	on page 113
Structure Configuration	on page 146
Auto-Placement Rules	on page 157
Discovery Profile and Polling Configuration	on page 163
Communication Profile	on page 174
Security Profile	on page 183
Alarm Action Manager	on page 196
Device Action Manager	on page 218
Sensor Manager	on page 250
Alarm Configuration	on page 262
Wired Network Monitoring	on page 266
Performance Profile	on page 269
Environment Monitoring	on page 283
Client Types	on page 285
Appliance Settings	on page 286
Device Age Out	on page 289
Configuration Backup	on page 290
Forensic and Log Backup	on page 296
Configuration Restore	on page 302
Download Logs	on page 303
Redundant Appliance Synchronization	on page 307
Configuration Clear	on page 312
Language Settings	on page 314
License Management	on page 315
User Management	on page 326
Remote Profile Management	on page 351
System Settings	on page 356

Use the **Settings** screen to configure a few of the many Extreme AirDefense settings. This screen provides configuration options that enable you to configure a few profiles, set Extreme AirDefense structure, and manage Extreme AirDefense licenses.

Select the  icon from the main menu tree on the left of the user interface to launch the configuration dashboard.

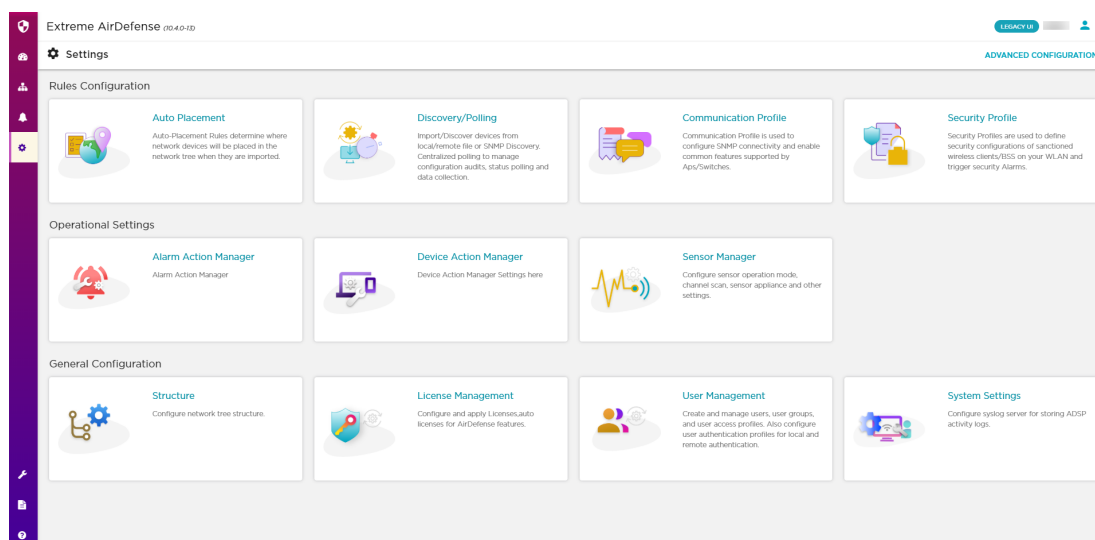


Figure 22: New User Interface - Settings Screen

The following configurations are managed from this screen.

- **Rules Configuration** - This section provides links to configure the following rules:
 - **Auto Placement** - The configurations defined within this profile determine how network devices are placed in your network hierarchy tree when imported. For more information, see [Auto-Placement Rules](#) on page 157
 - **Discovery/Polling** - The configurations defined within this profile enable you to import devices from local/remote files or to discover devices using SNMP discovery. These settings in this screen also configure centralized polling of devices for managing configuration audits, status polling, and other types of data collections. For more information, see [Discovery Profile and Polling Configuration](#) on page 163.
 - **Communication Profile** - The configurations defined within this profile enables you to set SNMP connection parameters and enable some common features supported by access points and switches. For more information, see [Communication Profile](#) on page 174.
 - **Security Profile** - The configurations defined within this profile are used to define the security configurations of sanctioned wireless devices and BSSs on your network and trigger security alarms when issues are discovered in your network. For more information, see [Security Profile](#) on page 183.
- **Operational Settings** - This section provides links to configure the different operational parameters for the Extreme AirDefense server.
 - **Sensor Manager** - Use this configuration screen to configure sensor scan patterns, set advanced spectrum analysis parameters, and enable or disable sensor-level options. The screen is also used to create and manage *Sensor Profiles* that are used to apply a set of sensor settings.

- **General Configuration** - This section provides links to configure the hierarchy of sites/location within your Extreme AirDefense network. You can also manage your licenses from within this section.
 - **Structure** - Use this configuration screen to set Extreme AirDefense site hierarchy. For more information, see [Structure Configuration](#) on page 146.
 - **Appliance Licensing** - Use this configuration screen to view and manage your licenses. For more information, see [License Management](#) on page 315.
 - **User Management** - Use this configuration screen to view and manage your users with respect to this Extreme AirDefense system. For more information, see [User Management](#) on page 326.
 - **System Settings** - Use this configuration screen to configure the remote log server to send your Extreme AirDefense system's activity logs to. For more information, see [System Settings](#) on page 356.

Appliance Management

Topics under the Appliance Management category describe how to configure the AirDefense Enterprise appliance. Go to **Configuration > Appliance Management**.

The Appliance Management category allows you to:

- Back up, clear, or restore system configuration.
- View, create, and install security certificates for the ADSP appliance.
- Select the level of security for your certificates.
- Specify information needed by your appliance and enable key system features.
- Specify the language to be used on your appliance.
- Synchronize the configuration on your primary and secondary servers.
- Back up forensic information.
- Download configuration backup and/or system log files to your workstation.
- Validate certificates, and add or remove public keys.
- View status of any backup or restore that was initiated.
- Add customized banners to be shown each time users log into the system.

Appliance Settings

Use the **Appliance Settings** window to specify information needed by your appliance and to enable key system features.



Important

You must be a user with read/write access to the System Configuration functional area to use this feature.

To access this window, go to **Configuration > Appliance Management > Appliance Settings**.

Function	Description
Port	Sets the UI port used for system access. Choose a port between 1024 and 65000. The system does not allow selection of a port that is already in use.
Mail Relay Server	Defines the mail relay host. Enter either an IP address or a fully qualified host name.
Max Connections	Specifies the maximum number of application server connections that can occur simultaneously.
User Session Limit	Limits the number of concurrent login sessions that a single user can have at one time.
Air Termination System	Enables termination of connections between the wireless LAN and associated authorized or unauthorized wireless clients. Yes enables Air Termination at the system level. No disables the feature (default). Note: This option is visible only to Admin users.
Policy-based Air Termination System	Enables automated Air Termination based on configured action plans and alarms. Yes enables policy-based termination. No disables the feature (default). Note: This option is visible only to Admin users.
Port Suppression System	Enables suppression of the network switch port through which a device is communicating, effectively shutting down the port. Yes enables port suppression. No disables the feature (default). Note: SNMP-managed switches must be added and full read/write privileges are required.
Auto-Logout Enabled	Enables automatic logout after a specified period of inactivity. Yes enables auto-logout and activates the Auto-Logout Timeout field. No disables the feature. Note: Users must log out and log back in for changes to take effect.

Function	Description
Auto-Logout Timeout (Minutes)	Specifies the number of minutes of inactivity before users are automatically logged out. This field is available only when Auto-Logout is enabled.
Spectrum Scan Timeout	Sets the timeout value for scanning during dedicated Spectrum Analysis. Valid values range from 1 to 120.
Sensor Cloaking Limit	Specifies the maximum number of sensors that can be cloaked simultaneously.

Backup / Restore Status

Backup / Restore Status allows you to view the status of your configuration backups and restores.

The screenshot displays the 'Backup / Restore Status' window. At the top, it shows the status of the most recent configuration backup: a green checkmark indicates 'Scheduled backup: Default Backup was successful' with a start time of 04/04/2013 12:00 AM and an end time of 04/04/2013 12:02 AM. Below this is a large grey rectangular area. The bottom section shows the status of the most recent configuration restore, sync, or clear: a red circle with an exclamation mark indicates 'Command-line SMUPGRADE failed (1 Error occurred)' with a start time of 03/31/2013 9:35 PM and an end time of 03/31/2013 9:35 PM. An 'Errors' section lists the following message: 'Command-line SMUPGRADE/Restore /usr/local/Speedwell/DB/(\\?)(GridCache))*/-1: File size or content not right: /usr/local/Speedwell/DB/ASP/Applications.xml'.

The top section displays status information about backups. The bottom section displays status information about configuration restores, synchronization, clear information, and upgrade information.

The following status information is displayed:

- A green checkmark  indicates that the backup/restore was successful.
- A red circle containing an exclamation mark  indicates that the backup/restore was unsuccessful.
- A start and end time is displayed to show you when the backup/restore started and when it ended.
- Any errors are displayed in the error window for each section.

Certificate / Key Validation

Certificate / Key Validation is where you validate certificates, and add or remove public keys.

Certificate Validation

The **Certificate Validation** tab allows you to validate certificate communications for your appliance and/or for any third party servers.

The screenshot shows the 'Certificate / Key Validation' window with the 'Certificate Validation' tab selected. It contains two sections: 'Appliance communication' and 'Third party communication', each with three checkboxes for verification. Below these is the 'OCSP Responder' section with a dropdown for 'Certificate Validation' and a text field for 'URL'.

Certificate / Key Validation Help

Certificate Validation **Key Validation**

Appliance communication
AirDefense Master/Slave and or Primary/Secondary appliance communication

☐ Verify master certificate against trusted certificates

☐ Verify hostname against certificate

☐ Check certificate revocation (enter OCSP Responder information below)

Third party communication
AirDefense appliance communication with 3rd parties, like LDAP or Radius Servers

☐ Verify master certificate against trusted certificates

☐ Verify hostname against certificate

☐ Check certificate revocation (enter OCSP Responder information below)

OCSP Responder

Certificate Validation: Appliance Root Certificate

URL:

There are three types of verifications for either appliance communications or third party communications. They are:

- Verify master certificate against trusted certificates
- Verify hostname against certificate
- Check certificate revocation.

Select the appropriate checkbox for each type of verification that you want to check. If the **Check certificate revocation** checkbox is selected, the OCSP Responder fields are activated. When activated, you must select the certificate type and enter its URL.

Clicking **Apply** validates your selections.

Key Validation

The **Key Validation** tab allows you to add and remove public keys for other servers.

The screenshot shows the 'Certificate / Key Validation' window with the 'Key Validation' tab selected. It features 'Add Key' and 'Remove Key' buttons, and a table with columns 'Host' and 'Type'.

Certificate / Key Validation Help


Certificate Validation **Key Validation**

Add Key **Remove Key**

Host	Type

To add a public key:

1. Click the **Add Key** button.

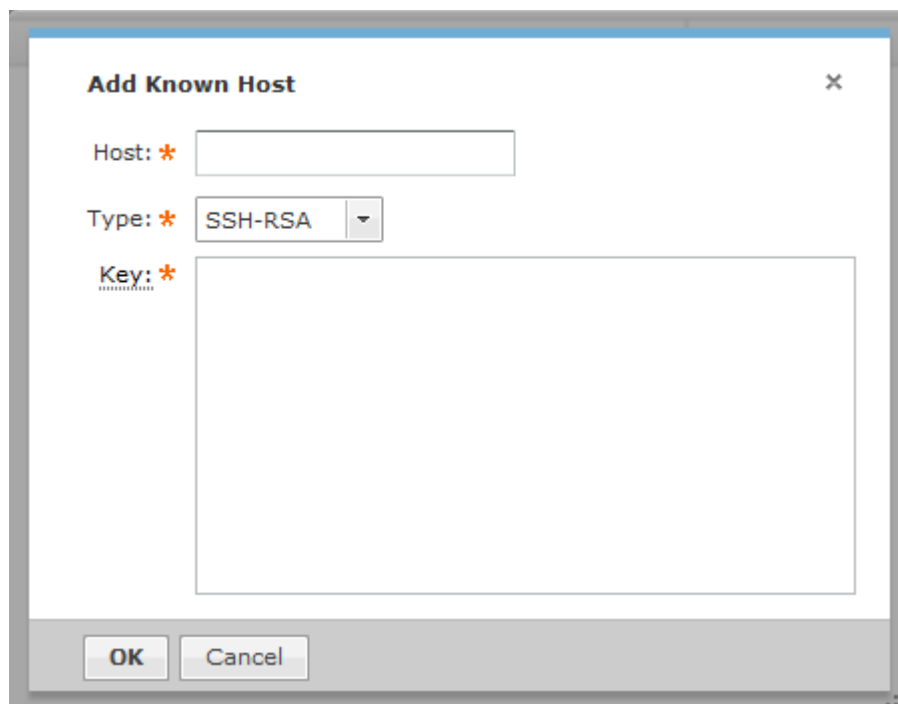

2. Type in the name of the other server.
3. Select the type of public key that you want to add (SSH-RSA or SSH-DSS).
4. Paste the public key into the **Key** field.

For example, if you possess the following public key:

```
----- BEGIN SSH2 PUBLIC KEY -----
AAAAB3NzaC1yc2EAAAABJQAAAIBrxx+YqQARTVMHfyjisoQvBZoxvBMxf9CbXoo
VpWHBezQbm3anaav+4rEPIylcfFrIR/9o3/IdXT+arnXlrZ+7v3kBVx9SRWr5GY1
BtPFElVQi1PJz/tXTP3erWyoZ4mwsb0kmoFAPc9LBrwrLtSlkrXezZrKZMa4VzB9
yK6dAQ==
----- END SSH2 PUBLIC KEY -----
```

copy the actual key part and paste it into the **Key** field.

```
AAAAB3NzaC1yc2EAAAABJQAAAIBrxx+YqQARTVMHfyjisoQvBZoxvBMxf9CbXoo
VpWHBezQbm3anaav+4rEPIylcfFrIR/9o3/IdXT+arnXlrZ+7v3kBVx9SRWr5GY1
BtPFElVQi1PJz/tXTP3erWyoZ4mwsb0kmoFAPc9LBrwrLtSlkrXezZrKZMa4VzB9
yK6dAQ==
```

5. Click **OK**.
6. To remove a public key, select (highlight) the key and then click the **Remove Key** button.

Certificate Manager

Certificates verify the authenticity of the AirDefense appliance. They can prevent hijacking of sessions between your browser and the AirDefense appliance, and can

even alert you to physical replacement of the AirDefense appliance. Certificates install into the AirDefense appliance and are sent by the appliance directly to your browser.



Important

AirDefense recommends using a security certificate for every AirDefense appliance in your network. Furthermore, we recommend that you replace the pre-installed security certificate from AirDefense with either a self-signed certificate or a root-signed certificate.

AirDefense supports the X.509 ITU-T (ITU Telecommunication Standardization Sector) standard for certificates. The supported encryption key lengths are 2048, 4096, and 8192. More information about the X.509 ITU-T standard can be found by searching the Internet.

Use the Certificate feature to view and create security certificates for the AirDefense appliance, and to perform other certificate-related tasks, such as installing certificates. You must be an Admin User to use this feature. You can access the iCertificates feature by following these steps:

View Certificate Details

To view certificate details:

1. Navigate to **Configuration > Appliance Management > Certificate Manager**.

The screenshot shows the 'Certificate Manager' web interface. At the top, there's a title bar with 'Certificate Manager' and a 'Help' icon. Below it, there are two tabs: 'Appliance Certificates' (selected) and 'Trusted Certificates'. A message states: 'The Key Store contains private keys and the certificates with their corresponding public keys.' Below this, a section titled 'In order to add an SSL certificate to the AirDefense website follow these steps:' lists three steps: 1. Generate a Certificate Signing Request (CSR), 2. Send the CSR to a Certificate Authority (CA) and get certificate files, and 3. Import the certificate files received from the CA. Below the steps, there's a 'Certificate Password:' label, a text input field, a 'View Certificates' button, a 'Display Password' checkbox, and a 'Change Password' link. The main area of the interface is divided into two large empty rectangular boxes. At the bottom, there's a row of buttons: 'Generate Request', 'Import New', 'Update', and 'Delete'.

2. Enter your certificate password.

**Note**

The first time you access Certificates use the default password (security). Immediately change the default password to one that is more secure. Do not continue to use the default password.

3. Click the **View Certificates** button.

Certificate Types

Every AirDefense appliance comes with an AirDefense certificate. However, there are three other certificates available; each represents a different level of security.

- Self-signed certificate
- Root-signed certificate
- SSL certificate.

The following table describes each of the certificate types:


Certificate	Description
AirDefense Certificate	The AirDefense certificate represents a minimal level of security. AirDefense ships the AirDefense appliance with a pre-installed security certificate. It is a working certificate that provides TLS encryption, but has not been verified and digitally signed by a root Certificate Authority (CA). The host name identified in the certificate will not match the actual host name of your AirDefense appliance. Unless the certificate meets all required criteria, you will receive one or more alert screens when you open a session with AirDefense.
Self-Signed Certificate	A self-signed certificate represents an intermediate level of security. A self-signed certificate (also called Tomcat Certificate) is a certificate that you must generate. In this certificate, you specify the host name of the AirDefense Server, but do not have the certificate verified and digitally signed by a root Certificate Authority. Unless the certificate meets all required criteria, you will receive one or more alert screens when you open a session with AirDefense.

Certificate	Description
Root-Signed Certificate	A root-signed certificate represents a high level of security. A root-signed certificate is a public certificate that is verified by a root Certificate Authority (CA). This is a digitally-signed certificate that ensures the authenticity of the AirDefense Server.
SSL Certificate	A SSL certificate represents the highest level of security. SSL certificates create a secure connection between a client and a server. The client is usually a web browser transmitting private information over the Internet. The URL for SSL connections start with https:// instead of http://.

View Certificates

There are two panels in the Certificates window. The left panel lists your current certificates. When you select (highlight) a certificate by clicking on it, information for that certificate is displayed in the right panel. The following information is available:

- Alias name
- Creation date
- Certificate details that include:
 - Certificate number
 - Owner information
 - Issuer information
 - Serial number
 - Validation period stating when the certificate became valid and when it ends
 - Certificate fingerprints.

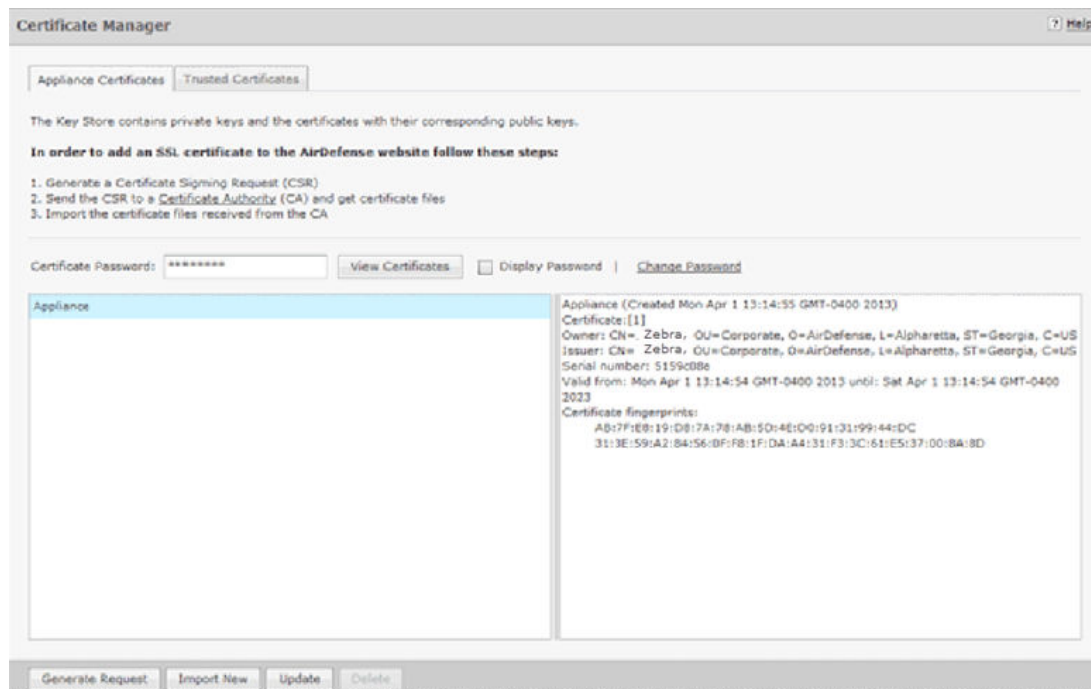

Sharing Certificates

AirDefense has a Central Management feature that allows you to monitor more than one appliance. In this situation, there will be a master appliance and a slave appliance. In order for this scenario to take place, you will need to share certificates between the master and the slave appliance.

There are two scenarios to sharing certificates after adding a slave appliance:

- Certificates on either the master appliance or slave appliance are in the default state.
- Certificates have been modified, changed, or imported on either appliance, and have been signed by a Certificate Authority (CA).

Sharing Certificates not in Default State

Sharing certificates not in the default state involves some extra steps. The following conditions must be met:

- The slave appliance must first be added using Add Devices under the Menu
- Both servers must be able to successfully ping each other
- Both master and slave must be running the same build
- The user name and passwords are entered correctly in Share certificate window, and the Alias field has the slave appliance IP address.

The procedure to sharing certificates in the default state is:



Note

This procedure assumes that you have added a certificate using the procedures under [Add Certificates](#).

1. Access the **Certificate Manager**.

2. In the **Appliance** field, select the slave appliance.
3. Type in the certificate password and then click **View Certificates**.
4. Click the **Share Appliance Certificate** button.

**Note**

The **Share Appliance Certificate** button is only visible after adding the slave appliance with **Add Devices**.

Share Appliance Certificates with Master

Slave Appliance

User Name: *

Password: * ☐ Display Passwords

Appliance Certificate Password: *

Trusted Certificate Password: *


Master Appliance

Appliance Certificate Password: *


Trusted Certificate Password: *

Alias: * 172.17.0.20

5. Fill in the above dialog window with the following information:
For the slave appliance:
 - The user name and password used to access the GUI
 - The appliance certificate password
 - The trusted certificate password.
For the master appliance:
 - The appliance certificate password
 - The trusted certificate password.
 - An alias that will show up in the trusted certificates on the slave. The default is the slave appliance IP address. This field is for identification purposes. You can change it to whatever you want it to be.
6. Click the **Share** button.

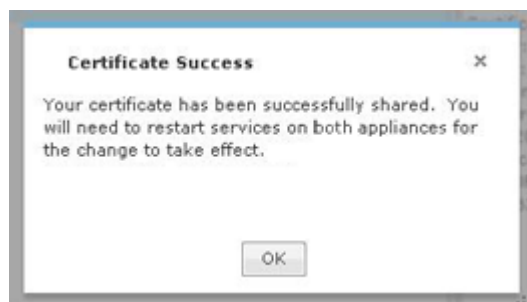

7. Click **OK**.
8. On the master appliance, access the **Trusted Certificate** tab.
9. In the **Appliance** field, select the master appliance.
10. Type in the certificate password and then click **View Certificates**.
11. Click the **Import New** button.

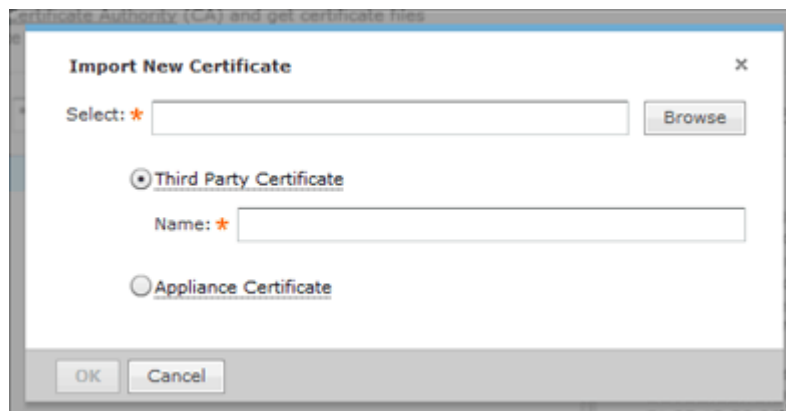

12. Browse to CA certificate and select it.
13. Click **OK**.
14. Restart the master appliance.
15. On the slave appliance, access the **Trusted Certificate** tab and then repeat steps 9 through 13.
16. Restart the slave appliance.
17. Check the master appliance to see that the slave appliance is now online.

Add Certificates

There are two types of certificates that you can add:

- Appliance Certificate
- Trusted Certificate.

Installation instructions for each type are included in their respective topics.

Appliance Certificates


The Appliance Certificates store private keys and the certificates with their corresponding public keys. There are three main steps to adding an appliance certificate. They are:

1. Generate a Certificate Signing Request (CSR).
2. Send the CSR to a Certificate Authority (CA) and get certificate files.
3. Import the certificate files received from the CA.


Generate Certificate Signing Request

To generate a Certificate Signing Request (CSR), do the following:

1. Click the **Generate Request** button. A window opens for you to confirm that you want to download the CSR.

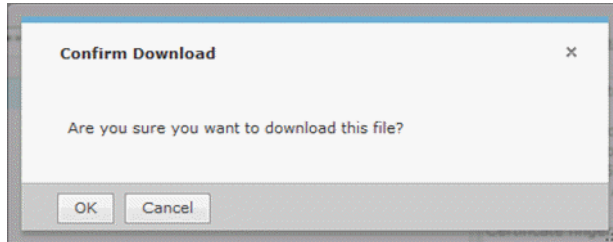

2. Click **OK**. A window opens for you to save your request.

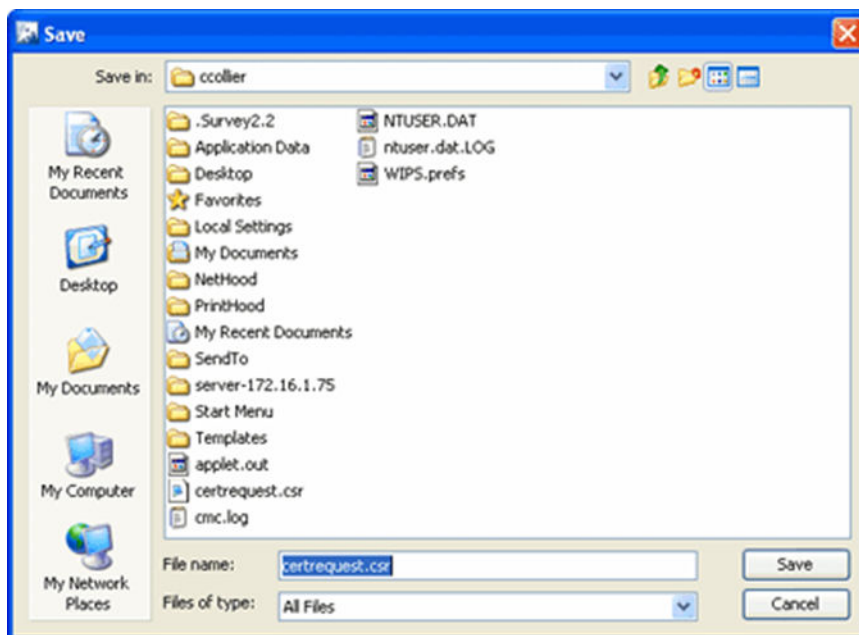

3. Navigate to in a convenient place such as your Desktop to save the CSR. The default name is `certrequest.csr`. You can use this name or change it.
4. Click **Save**.

Send CSR to a CA and Get Certificate Files

There is no set procedure on how to send a CSR to a CA and get the certificate files. This is dependent on the CA and their procedures.

The file save in Generate a CSR has the information that a CA needs to issue certificate files. You will have to present this information to the CA in some way.


Once you give the CA the information from the generated file, they will give you instructions on how to proceed, probably an email message. You will have to save the certificate files somewhere on your workstation such as your Desktop. There should be three certificates:

- Intermediate

- Root
- SSL which is the tomcat certificate.

Importing Certificate Files from CA

1. Click the **Import New** button. The **Import New Certificate** window displays.

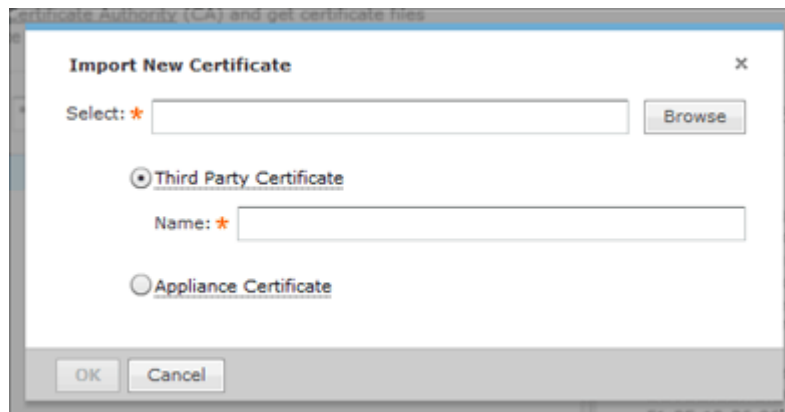


2. Click the **Browse** button to open the **Select file to upload** window.



Note

This is the procedure for a third party certificate. You also have the option of selecting an appliance certificate which includes private keys for the appliance, and is either self-signed or signed by a CA. Appliance certificates are always named Appliance.

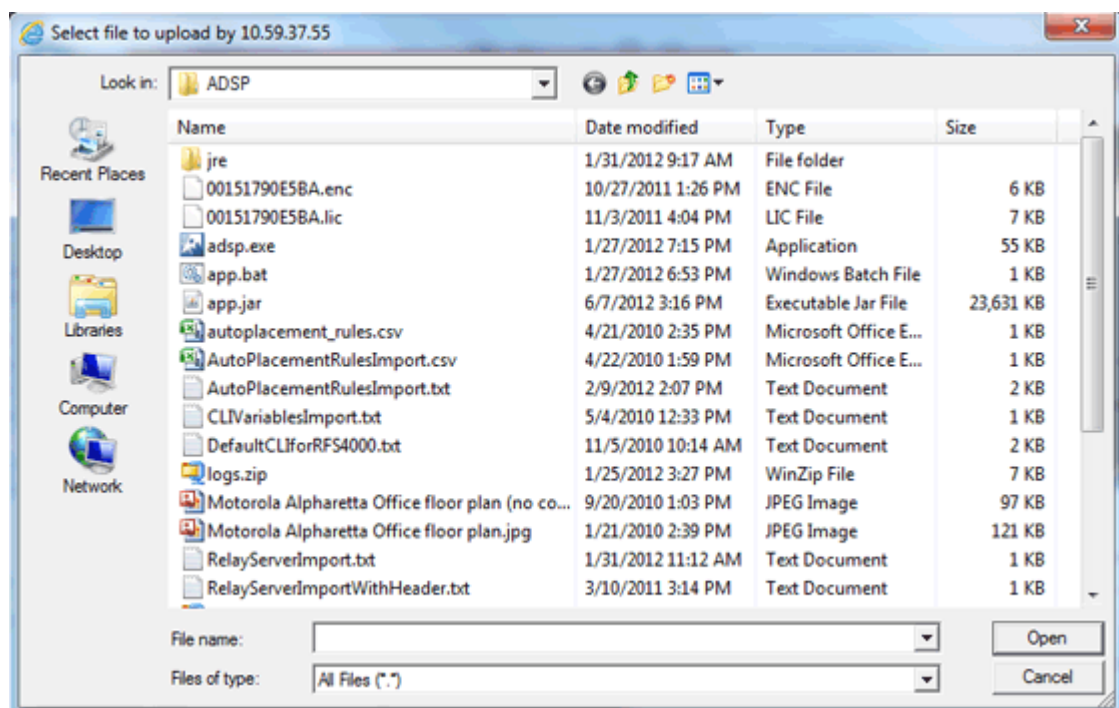

3. Navigate to the Intermediate certificate, select (highlight) it, and then click the **Open** button. The file name should now display in the **Select** field.

4. Type in a name for the certificate.
5. Click **OK**.
6. Repeat Steps 1 to 5 to import the Root certificate.
7. Repeat Steps 1 to 5 to import the SSL certificate.

**Note**

The name for the SSL certificate defaults to tomcat. You cannot change this name.

8. Click **OK**.


**Note**

You will have to restart tomcat services before the certificates are activated. The tomcat services are located on your ADSP appliance.


Import New Certificate

The Trusted Certificates store contains certificates from other parties (like AirDefense kAppliances, LDAP or Radius Servers) that you expect to communicate with, or from Certificate Authorities that you trust to identify other parties. Follow these steps to install a trusted certificate:

1. Click the **Import New** button. The **Import New Certificate** window displays.

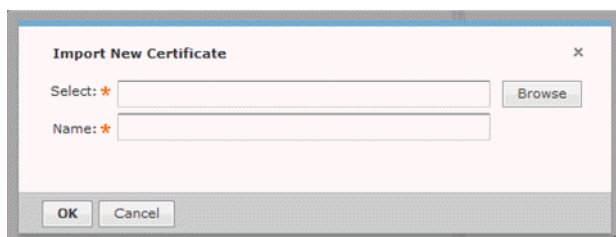

- Click the **Browse** button to open the **Select file to upload** window.

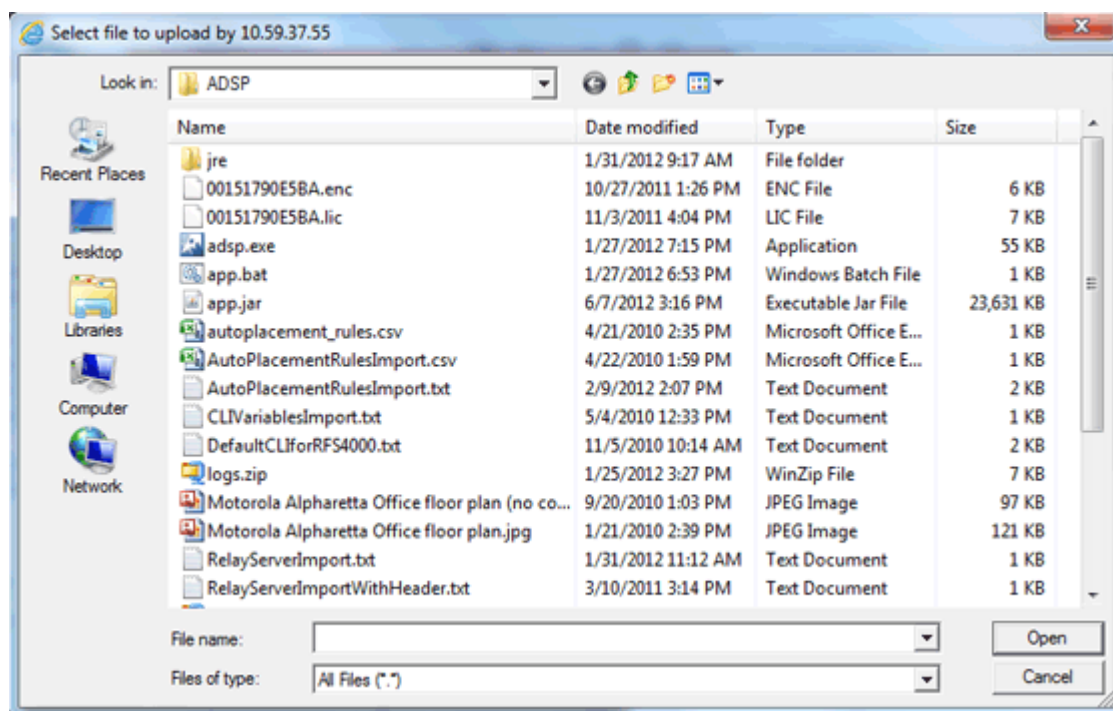

- Navigate to the trusted certificate, select (highlight) it, and then click the **Open** button. The file name should now display in the **Select** field.
- Type in a name for the certificate.
- Click **OK**.

Update Certificate Information


This topic discusses the process to update certificate information for certificates already stored in your appliance.

Changing Default Information

A certificate's default information is included with each certificate that you add.

To change the certificate's default information:

1. Click the **Update** button to display the **Update Appliance Certificate** window.

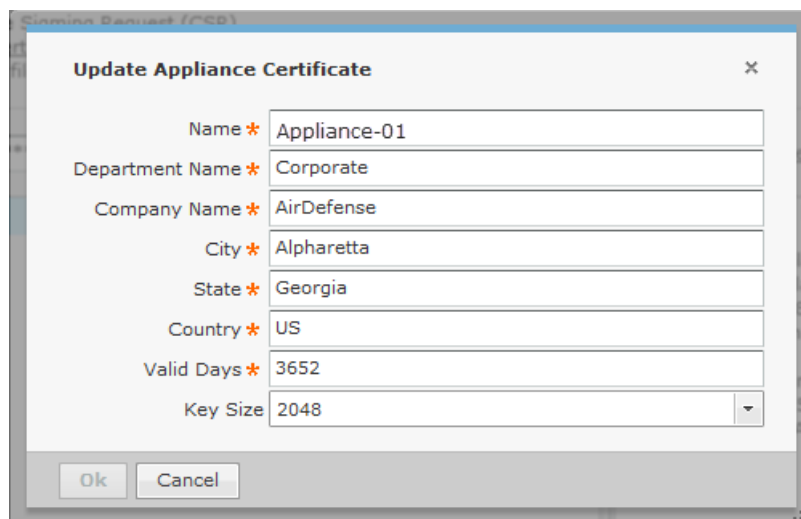

The following table describes the certificate information fields that can be modified:


Field	Description
Name	The hostname you assigned the AirDefense appliance.
Department Name	The department in which the AirDefense administrator is a member.
Company Name	The name of your company.
City	The city in which your company is located.
State	The State (full name - not abbreviated) in which the company is located.
Country	The two-character country code for the country in which the company is located.
Valid Days	The number of days a certificate is valid once you add it.
Key Size	The certificate encryption key length. Supported encryption key lengths are 2048, 4096, and 8192.

2. Once done, click the **OK** button.

Change Certificate Password

The **Certificates** window has a default password (security). You should change this password to a more secure password. To change the password:

1. Click the **Change Password** link.

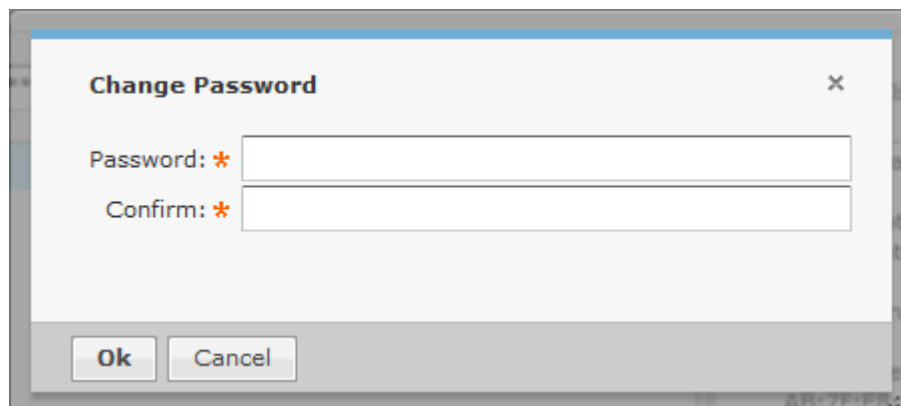

2. Type the new password in the **Password** field.
3. Type the new password again in the **Confirm** field.
4. Click the **OK** button.

Export Certificates

Exporting a certificate allows you to store a copy of the certificate, the certificate trust list, and the certificate revocation list on a local computer.



Note

This information is required for Managed Services Provider (MSP) integration.

Depending on your browser, follow one of these procedures:



Note

 
Procedures for Internet Explorer and Firefox are included here. Other browsers will have similar buttons/links that allow you to export a certificate.

- [For Internet Explorer](#) on page 129
- [For Firefox](#) on page 130

For Internet Explorer

To export certificates using Microsoft™ Internet explorer:

1. Click **Certificate Error** near the top of Internet Explorer window.



2. Click the **View Certificates** link.
3. Access the **Details** tab.
4. Click the **Copy to File** button. The **Certificate Export Wizard** displays.
5. Click **Next**.
6. Select a file format for the certificate and then click **Next**.

7. Click the **Browse** button. Select a location on the local PC and specify a file name.
8. Click **Save**. The path and file name is displayed in the **File Name** field.
9. Click **Finish**.

For Firefox

To export certificate using Mozilla™ Firefox:

1. Click the area with the appliance ID located near the top the Firefox window.

10.59.39.107

2. Click the **More Information** button.
3. Click the **View Certificate** button.
4. Access the **Details** tab.
5. Click the **Export** button.
6. Select a location and specify a file name.
7. Click **Save**.

Configuration Backup

Configuration Backup allow you to backup up your appliance configuration to your workstation or to your appliance. There are two methods to accomplish this:

- [Manual Backups](#) on page 132
- [Automatic Backups](#) on page 133

Configuration Backup

Backup Now ☒ Enable Configuration Backup Scheduling Add New Schedule Delete

Name	Schedule
Default Backup	Default Backup - Daily: Every 1 day at 12:00 AM

Settings

Job Name: *

Destination: ☒ Local ☐ Remote

Host: *

Port: *

Protocol: SCP

Path: *

User: *

Password: * ☐ Display Password

Retries: 1 (Max: 5)

Schedule

Frequency: One Time Schedule

Time: 12:00 AM

Date: 04/03/2013

Apply Reset

How Backups Work

- All backups, scheduled or on-demand, create a backup file in `/usr/local/smx/backups`.
- Backups include more than the SQL database. Many configuration files (XML files) scattered throughout ADSP are also included. These files are included in the zip archive along with the database tables.
- If an on-demand backup is done to the desktop, the system performs a regular backup to `/usr/local/smx/backups` first and then copies that file to the desktop.
- If a scheduled backup is done to a remote device via SCP or FTP, the system performs a backup to `/usr/local/smx/backups` first and then copies that file to the remote system.
- Only the most current backup is kept. Previous backups are deleted from the `/usr/local/smx/backups` folder.
- The `/usr/local/smx/backups` directory is root protected. Users cannot delete the backup file. However, they can copy it to another location.
- The format of a backup file looks like:
`Backup_8.1.0-10_ECRT236.am.mot.com_20101018000011.zip.enc`. The name always includes the release, the server name, and the year-month-day-hour-minute-second. The `enc` at the end of the name indicates that the file is encrypted. Encrypted files can be emailed securely.


Backup Recommendations

- As a minimum, schedule a daily backup internal during non-peak hours.
- If there is an external server to backup to, schedule an external backup at least once a week and NOT at the same time as a local backup.
- NEVER direct a backup to `/usr/local/smx/backups` on a standby server. This will prevent synchronization from working properly.


Manual Backups

You can manually back up your server configuration to your workstation by following these steps:

1. Click the **Backup Now** button to display the **Backup Ready** window.

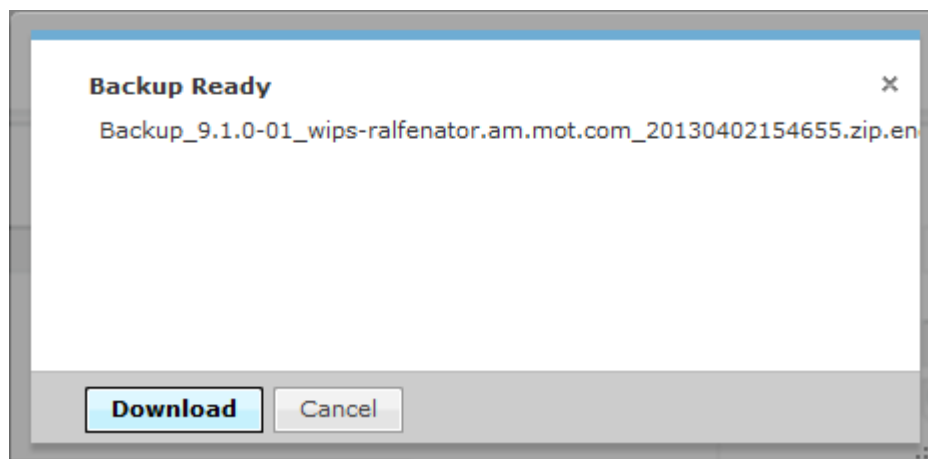

2. Click the **Download** button to open a window where you can select your destination directory (folder).

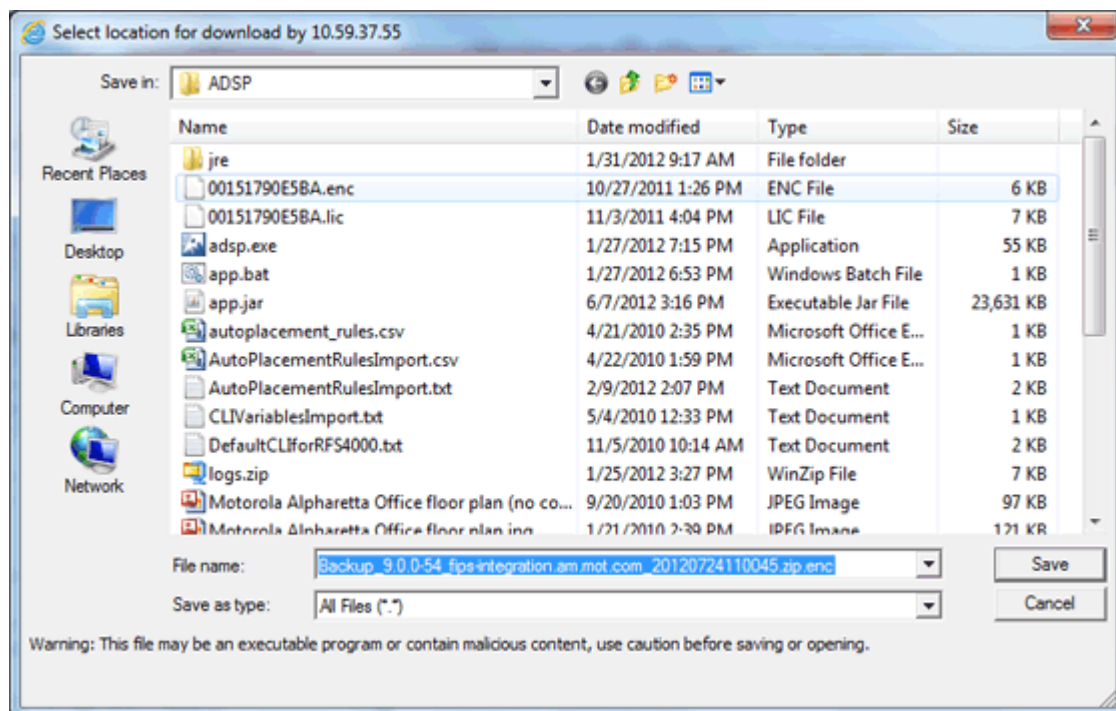

3. Navigate to the directory where you want to back up your server configuration.
4. Click **Save** to save the backup file in the selected directory.

Automatic Backups

Automatic Backups backs up your system configuration to your ADSP appliance.



Note

Do not configure the automatic backup time and the automatic synchronization time with the same values.

To schedule automatic backups, follow these steps:

1. Enable automatic backups by clicking the **Enable Configuration Backup Scheduling** checkbox to place a checkmark in the box.
2. Type in a name for the backup in the **Job Name** field.
3. Decide how often you want to run the backup by selecting *One Time Schedule*, *Intra-Day Schedule*, *Daily Schedule*, *Weekly Schedule*, or *Monthly Schedule* from the drop-down menu.
4. Depending on the interval you selected in the previous step, fill in the related fields using the following table:

Interval	Action
One Time Schedule	Choose a time for the backup by selecting a time from the Time drop-down menu. Then, select a day for the backup by clicking the Calendar button in the Date field and selecting a date.
Intra-Day Schedule	Select a time to begin the backup. Then, select a frequency in hours.
Daily Schedule	Select a frequency in day, weekdays only, or weekends only. Then, select a time of day.
Weekly Schedule	Choose a frequency in days. Then, select a day or multiple days to conduct the backup by clicking the checkbox next to the day to place a checkmark in the box.
Monthly Schedule	Choose the months that you want to run a backup by clicking the checkbox next to the month(s) to place a checkmark in the box(es). Then, select a day of the month to conduct the backup. Last, specify a time of day.

5. Click the **Apply** button to set the automatic backup schedule.
6. During an automatic backup, you can send the backup configuration to another AirDefense Enterprise server. Click the **Remote** checkbox to place a checkmark in the box and fill in the following fields:

Field	Description
Host	The name of the server where you want to back up the configuration. This can be an IP address or a DNS name defined by your DNS server.
Port	The port number to use during the backup.
Protocol	The file transfer protocol to use for backing up the configuration (SCP, SFTP, or HTTPS).

Field	Description
Path	The directory (folder) where to place the backup on the destination server.
User	The username used to log in on the destination server.
Password	The password used to log in on the destination server.
Verify Server Certificate/Key	Verifies that the server certificate (HTTPS connections) or server key (SCP and SFTP connections) is valid.
Retries	The number of times to retry the backup if a failure occurs. The maximum number is 5.


Configuration Clear

Use the Configuration Clear option to clear configuration data and set your appliance back to its default state when your system was first delivered.

You can either clear the complete configuration data and reset the system as it was first delivered or can clear specific configuration data.

The available options are:

1. Navigate to **Configuration > Appliance Management > Configuration Clear**.

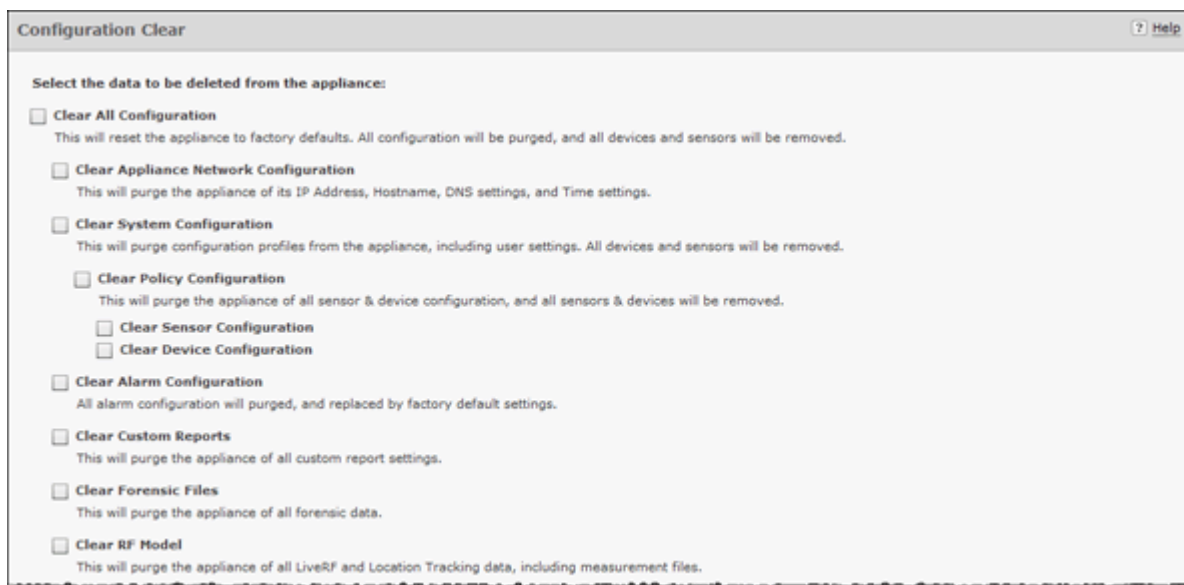


2. You can select from the following configuration options:

Option	Description
Clear All Configuration	Clears all configuration data, setting your server back to its original default state.
Clear Appliance Network Configuration	Clears the configuration for the appliance network. All network configuration is set back to default.

Option	Description
Clear System Configuration	Clears all system configuration data. This encompasses everything except what is covered by the other options. There are three other options associated with this option. • Clear Policy Configuration - Clears all policy configurations that you have changed. If you select this option, the Sensor and Device configurations will be automatically selected. • Clear Sensor Configuration - Clears all Sensor configurations that you customized. • Clear Device Configuration - Clears all device configurations that you customized.
Clear Alarm Configuration	Clears any configuration dealing with alarms and sets alarm configuration data back to default.
Clear Custom Reports	Clears any custom reports that you have created.
Clear Forensic Files	Clears (removes) any forensic data files that exists.
Clear RF Model	Clears the RF data used by Live RF and Location Tracking in the Floor Plan.

3. Select one or more options by placing a checkmark in the checkbox.
4. After selecting your options, click the **Next** button. A confirmation window is displayed.

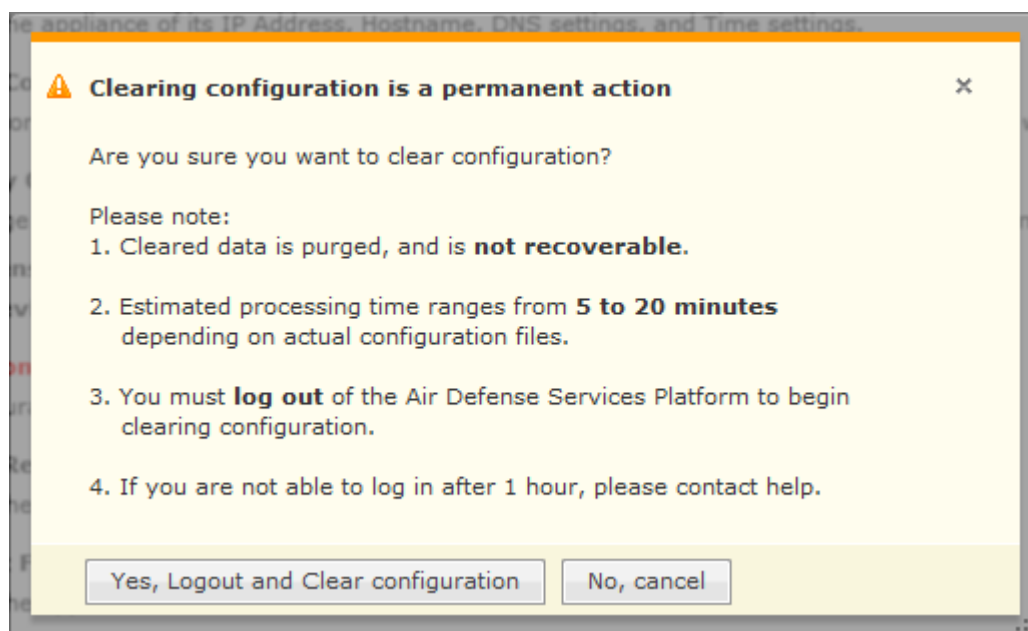

5. Select the **Yes, Logout and Clear configuration** button to confirm that you want to logout and clear the configuration data.




Note

Clicking the **No, cancel** button will cancel the clear operation.

Configuration Restore

You can restore a backup configuration that was previously saved to your workstation by using the Configuration Restore feature.

1. Navigate to **Configuration > Appliance Management > Configuration Restore**.

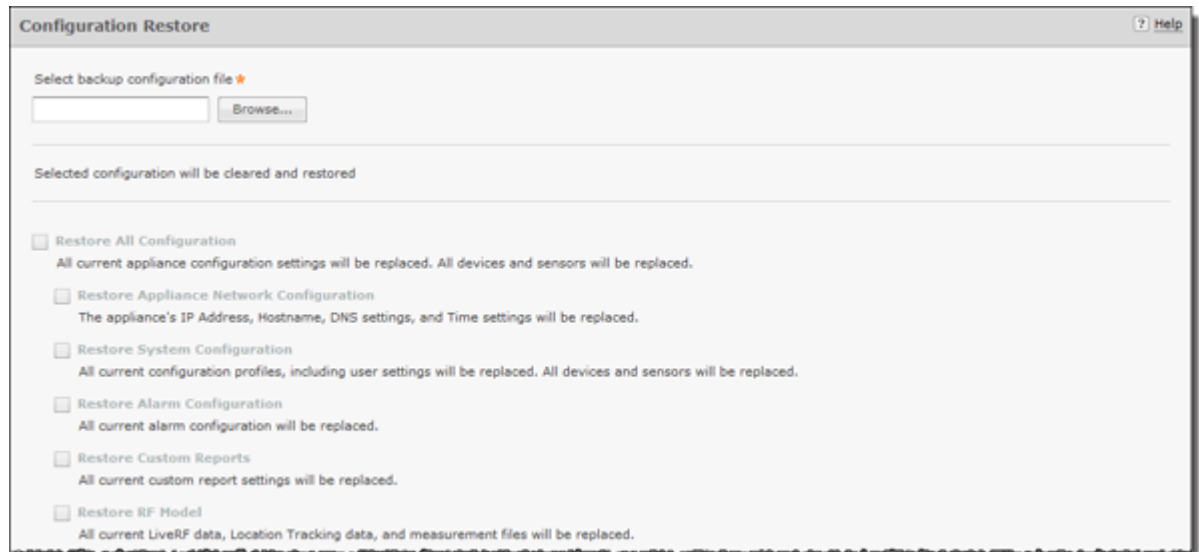

2. Click **Replace**.

A window opens that allows you to select the directory where your configuration backup is stored.

3. Navigate to the directory that contains the backup file and select the file.
4. Click **Open** to select the file.

The **Select backup configuration file** field displays the directory path and file name. The restore options become active.

5. Select the restore options that you want to restore. Refer to the following table for information on the options.

Option	Description
Restore All Configuration	Restores all configuration data from the backup file.
Restore Appliance Network Configuration	Restores the configuration for the appliance network.
Restore System Configuration	Restores all system configuration data. All sensors and devices are replaced.
Restore Alarm Configuration	Restores configuration related to alarms.
Restore Custom Reports	Restores any custom reports included in the backup.
Restore RF Model	Restores RF data used by Live RF and Location Tracking in the Floor Plan.

6. Click **Apply**.

The selected configuration is restored to the AirDefense server.

If you want to restore a configuration that was automatically backed up to the AirDefense server, download the backup file to your workstation before restoring it. See [Download Logs](#) for more information.

Download Logs

You can download configuration files that were automatically backed up to your Extreme AirDefense server to your workstation. Once the backed-up configuration is on your workstation, you can restore it. (See [Configuration Restore](#).)

To download a configuration, follow these steps:


1. Navigate to **Configuration > Appliance Management > Download Logs**.

The screenshot shows a web interface titled "Download" with a "Help" icon. Below the title, it says "Select the files to download from the appliance *". There are two checkboxes: "Configuration Backup (372 KB, created 04/03/2013 12:00 AM)" and "System Logs". Below these are two expandable sections. The first section, "AirDefense Forensic Logs", is expanded and shows a table with columns "Size" and "Last Modified". The second section, "Appliance Access Logs", is also expanded and shows a similar table. At the bottom are "Apply" and "Reset" buttons.


	Size	Last Modified
☐ AirDefense Forensic Logs		
☐ adstatlog.505	33,528 KB	07/26/2012 9:40 AM
☐ adstatlog.489	36,696 KB	07/17/2012 10:00 PM
☐ adstatlog.819	76,508 KB	01/11/2013 5:08 AM
☐ adstatlog.959	45,676 KB	03/25/2013 9:38 AM
☐ adstatlog.863	41,792 KB	02/03/2013 2:56 AM
☐ adstatlog.80	41,276 KB	12/09/2011 8:20 PM
☐ adstatlog.224	37,420 KB	02/26/2012 12:10 PM
☐ adstatlog.816	47,048 KB	01/09/2013 3:04 AM
☐ Appliance Access Logs		
☐ localhost_access_log.2011-12-05.txt	128 KB	12/05/2011 4:20 PM
☐ localhost_access_log.2012-06-25.txt	54 KB	06/25/2012 4:26 PM
☐ localhost_access_log.2013-03-14.txt	20 KB	03/14/2013 3:58 PM
☐ localhost_access_log.2012-04-17.txt	124 KB	04/17/2012 3:52 PM
☐ localhost_access_log.2012-02-03.txt	241 KB	02/03/2012 3:58 PM
☐ localhost_access_log.2012-10-03.txt	84 KB	10/03/2012 3:51 PM
☐ localhost_access_log.2012-03-01.txt	224 KB	03/01/2012 11:52 PM
☐ localhost_access_log.2012-07-30.txt	156 KB	07/30/2012 3:57 PM
☐ localhost_access_log.2012-01-26.txt	109 KB	01/26/2012 1:58 PM

2. Select if you want to download a backup that exists on your appliance and/or the system logs.
3. You can download all forensic logs or all appliance access logs. Alternatively, you can choose the forensic logs or appliance access logs that you want to download.

4. Select **Apply**. A destination directory window is displayed.

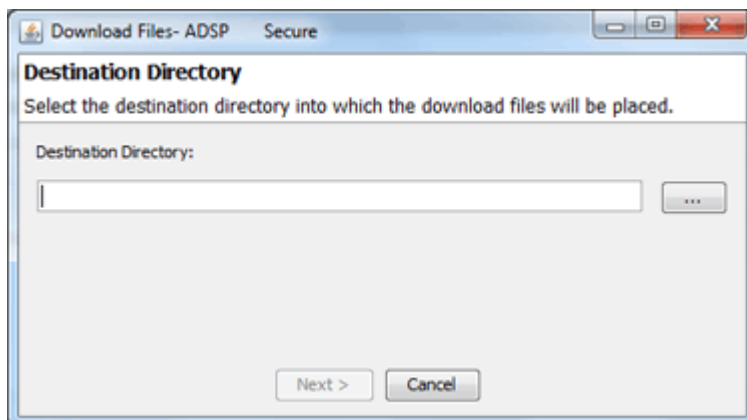

5. Select the **Browse** button to open a window where you can select your destination directory (folder).
6. Navigate to the directory where you want to download your server configuration.
7. Select **Select** to select the destination. The destination path displays in the **Destination Directory** field.
8. Select **Next**. The configuration is downloaded to the selected directory and a status window is displayed confirming the download.

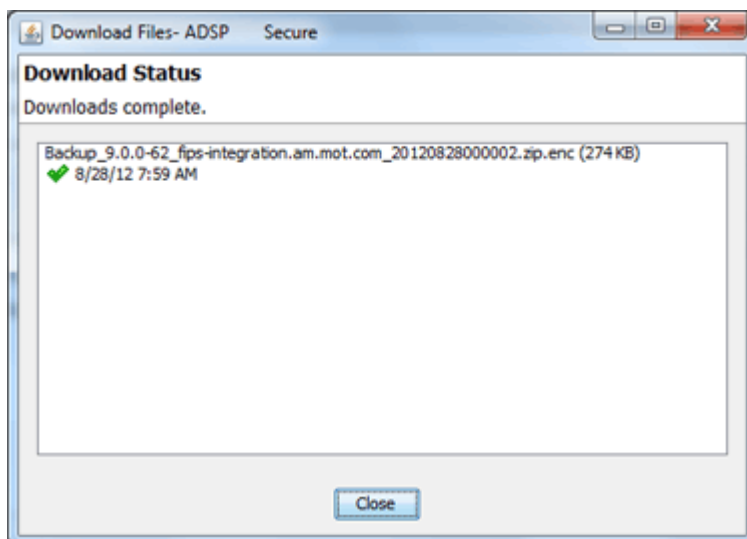

9. Select **Close**.

Forensic and Log Backup

To enable automatic forensics backup, select the **Enable Automatic Forensics Backup** checkbox. To enable automatic log backup, select the **Enable Automatic Log Backup** checkbox.

The fields used for both forensics and log backups are the same. After automatic backup is enabled, any newly created forensics or log file is automatically backed up to the host specified in the **Host** field.



Note

When automatic forensics backup or log backup is first enabled, only new files are backed up. Existing files are not backed up and must be saved manually if you want to copy them to another server.

To access this feature, navigate to **Configuration > Appliance Management > Forensic and Log Backup**.

Field	Description
Host	The name of the server where forensics or log files are backed up. This can be an IP address or a DNS name defined by your DNS server.
Port	The port number used during the backup operation.
Protocol	The file transfer protocol used to back up forensics or log files.
Path	The directory on the destination server where the backup files are stored.
User	The user name used to log in to the destination server.
Password	The password used to log in to the destination server.
Verify Server Certificate/Key	Verifies the server certificate for HTTPS connections or the server key for SCP and SFTP connections.
Retries	The number of retry attempts if a forensic backup fails. The maximum number of retries is 5.

You can schedule automatic backups for system and access logs by selecting an interval and configuring the related options.

Interval	Action
One Time Schedule	Select a time from the Time list and a date from the calendar.
Intra-Day Schedule	Select a start time and specify a frequency in hours.
Daily Schedule	Select a frequency (daily, weekdays only, or weekends only) and specify a time of day.
Weekly Schedule	Select a frequency in days and choose one or more days of the week for the backup.
Monthly Schedule	Select the months, a day of the month, and a time of day to run the backup.

View Performance Statistics


You can view AirDefense appliance performance statistics for the last day, the last week, or the last month.

In a web browser, go to one of the following locations, depending on whether you want to view daily, weekly, or monthly statistics:

- https://<AirDefense_ip_address>:8543/wireless/stats_day.html
- https://<AirDefense_ip_address>:8543/wireless/stats_week.html
- https://<AirDefense_ip_address>:8543/wireless/stats_month.html

Language

AirDefense allows you to select English, Chinese, Japanese, Korean, Portuguese, or Spanish as the language to use with your appliance. Changing the language requires you to restart your appliance from ADSPadmin in the appliance CLI. Click Apply to switch languages.

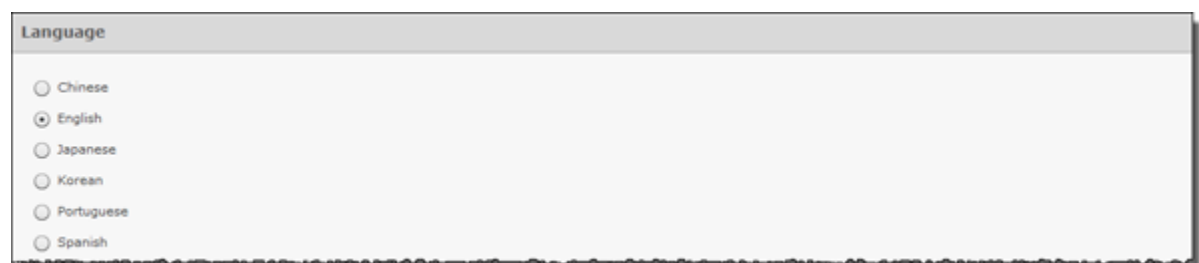

Changing the language requires you to restart your appliance from **ADSPadmin** in the appliance CLI. Click Apply to switch languages.

Login / SSH Banners

The **Banners** window is provided for ADSP users who wish to add their own customized agreement banner which will be shown each time users log into the system. Navigate to **Configuration > Appliance Management > Login / SSH Banners**.

Pre-Login banners are created in the **Pre-Login Banner** tab. Login banners are created in the **Login Banner** tab. SSH banners are created/edited in the **SSH Banner** tab.

- [Pre-Login Banner](#)
- [Login Banner](#)
- [SSH Banner](#)

Pre-Login Banner

The **Pre-Login Banner** tab is provided for AirDefense deployments who wish to display their own customized banner before allowing users to log into AirDefense. You could use this banner to force user to accept "Terms and Conditions".




To activate, select **Enable Pre-Login Banner** checkbox.

The *** (Please enter text)** field is available to enter text that users will see before logging into AirDefense. Text can be entered in HTML or text format.

Click **Apply** to save the pre-login banner.

Login Banner

The Login Banner tab is provided for ADSP users who wish to add their own customized agreement banner which will be shown each time users log into the system.

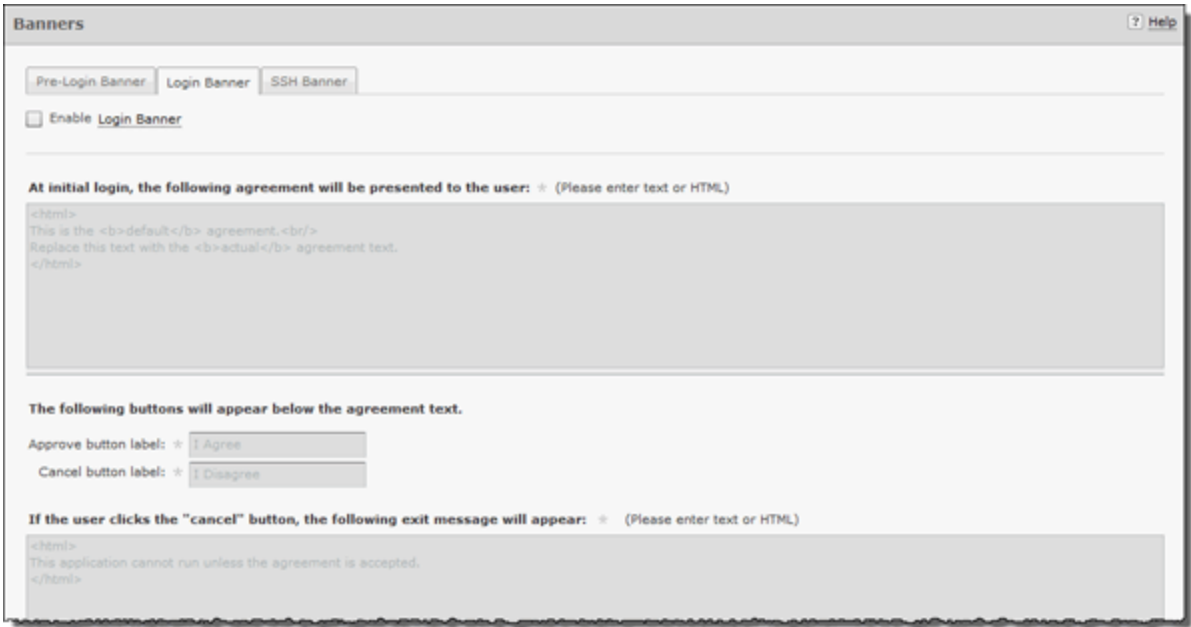

To activate, select **Enable Login Banner** field.

The following configuration options are available for customizing the Login Banner.

Function	Description
At initial login...	Enter the actual startup agreement text in this area; this text is what will appear when the ADSP application is first opened. Note: This text can be entered in HTML or text format.
Approve button label	Enter the actual text that will appear for the approve button on the Startup Agreement window. Default = I Agree
Cancel button label	Enter the actual text that will appear for the cancel button on the Startup Agreement window. Default = I Disagree
If the user clicks the...	Enter the actual text that will appear as a message dialog window when you choose to cancel the Startup Agreement. Note: This text can be entered in HTML or text format.

Click **Apply** to save the Login banner.

SSH Banner

The SSH Banner tab is provided for AirDefense users who wish to add their own customized text for users accessing the AirDefense appliance through SSH.



To activate, select **Enable SSH Banner** field.

The following configuration option is available for customizing the SSH Banner.

The **At initial login...** field is available to enter text that users will see when accessing the AirDefense appliance through SSH. Text can be entered in HTML or text format.

Click **Apply** to save the SSH banner.

Redundant Appliance Sync

AirDefense provides a feature that allows you to synchronize the configuration on your primary and secondary servers. There are two methods to accomplish this:

- [Manual Synchronization](#)
- [Automatic Synchronization](#)

The proper way to synchronize servers is to configure your primary server first and then synchronize your secondary server with your primary server. All configuration settings are copied from your primary server to your secondary server so that the two servers have the same configuration. Configuration settings from the primary server will override any configuration settings on the secondary server.

How Synchronization Works

- Synchronization will not work if there is no backup file or if there is a backup in progress.
- On the standby server, during either scheduled or on-demand synchronization, the standby server pulls the current backup from `/usr/local/smx/backups` on the primary server.
- NEVER schedule a synchronization or perform an on-demand synchronization at the same time a backup is occurring on the primary server.
- NEVER start an on-demand backup while synchronizing servers.
- The backup file is copied to `/usr/local/smx/backups` on the standby machine which brings up two important points:
 - NEVER schedule a local, remote or on-demand backup on the standby machine. If you do, it will overwrite the file transferred over from the primary server.
 - NEVER direct a backup from the primary server to `/usr/local/smx/backups` on a standby server. This will prevent synchronization from working properly.

- NEVER back up to the desktop from the standby server, because that process overwrites the existing file in `/usr/local/smx/backups`.
- As the second part of synchronization, the standby server runs a restore to itself using the file found in its own `/usr/local/smx/backups` directory. This should be the only file ever copied over from the primary server.

Synchronization Rules

- You should only back up the primary server. NEVER schedule or perform a backup on the standby server.
- Synchronization should only be done from the standby server. NEVER schedule or perform a synchronization on the primary server.
- Always schedule or perform a backup on the primary server one hour before scheduling a synchronization or performing an on-demand synchronization on the standby server. Backups require more time as the primary server continues collecting configuration data.
- NEVER schedule backups at the same time as a synchronization. This will NEVER work.
- Scheduled jobs should be included when backing up an appliance before synchronization. This will save you valuable time when restoring the backup on a new appliance. Unless you have backed up your scheduled jobs, you will have to recreate them on the new appliance.

Manual Synchronization

Follow these steps to manually synchronize your primary and secondary ADSP appliances:

1. On the secondary server, select the **Designate this as a Secondary (redundant) appliance** checkbox. The synchronization options activate.
2. Enter the IP address or DNS name of the primary server you want to synchronize with in the **Address** field.



Note

If using a DNS name, it must be defined by your DNS server.

3. Enter the port number of the primary server in the **Port** field.
4. Enter the username in the **Username** field that allows you to log in on the primary server you are synchronizing with.



Note

It is a good practice to setup an admin account (using the same username and password) on both the primary and secondary server.

5. Enter the password in the **Password** field that allows you to log in on the primary server you are synchronizing with.



Note

The **Password** must *not* contain a number sign (#).

6. Select whether you want to synchronize appliance name and/or synchronize mail relay.
7. Click the **Sync Now** button. Configuration files are downloaded to the secondary server.

Automatic Synchronization

Follow these steps to set up automatic synchronization of your primary and secondary ADSP appliances:



Note

Do not configure the automatic backup time and the automatic synchronization time with the same values.

1. Enable automatic synchronization by selecting the **Designate this as a Secondary (redundant) appliance** checkbox to place a checkmark in the box.
2. Enter the address, port, username, and password as described for manual synchronization.
3. Select whether you want to synchronize appliance name and/or synchronize mail relay.
4. Decide how often you want to run the synchronization by selecting *One Time Schedule*, *Intra-Day Schedule*, *Daily Schedule*, *Weekly Schedule*, or *Monthly Schedule* from the drop-down menu.

Depending on the interval you selected in the previous step, fill in the related fields using the following table:

Interval	Action
One Time Schedule	Choose a time for the synchronization by selecting a time from the Time drop-down menu. Then, select a day for the synchronization by clicking the Calendar button in the Date field and selecting a date.
Intra-Day Schedule	Select a time to begin the synchronization. Then, select a frequency in hours.
Daily Schedule	Select a frequency in day, weekdays only, or weekends only. Then, select a time of day.
Weekly Schedule	Choose a frequency in days. Then, select a day or multiple days to conduct the synchronization by clicking the checkbox next to the day to place a checkmark in the box.
Monthly Schedule	Choose the months that you want to run the synchronization by clicking the checkbox next to the month(s) to place a checkmark in the box(es). Then, select a day of the month to conduct the synchronization. Last, specify a time of day.

5. Click the **Apply** button to set the automatic synchronization schedule.

Appliance Replacement Considerations

Replacing an appliance should be done in such a way that no data is lost during the transition. Following these recommendations will help prevent data loss:

- Scheduled jobs should be included when backing up an appliance before synchronization. This will save you valuable time when restoring the backup on a new appliance. Unless you have backed up your scheduled jobs, you will have to recreate them on the new appliance.
- Hold onto the old appliance until you have retrieved all important data from the appliance's hard drive. Forensic data and other important data need to be backed up from the old appliance especially if you need the data for auditing purposes.
- You should install the new appliance on a lab network not connected to the LAN/WAN. Do not place the appliance on the WAN until you have restored the backed up configuration. The Sensors will connect to the appliance and your network tree will not be set up. Once connected to a lab network, you can either restore the primary's configuration file, or restore the configuration from a secondary appliance to the primary appliance. If the configuration is restored from the secondary appliance, you should then change the IP address of the new appliance to the one for the old appliance, reboot, and install the new appliance on the network.
- Once the new appliance is on the network, back up forensic data from the secondary appliance as required.
- ADSP restores the configuration long before the screen indicates that the process is complete. Executing a ping to the appliance will let you know exactly when the system is up. Once you receive a response, you can then log back in.

Structure Configuration

Extreme AirDefense requires you to create and maintain the hierarchy of sites and locations in your network for it to work as intended. This hierarchy, called the *Network Tree*, is a representation of how the sites are arranged within your network.

Your network tree can be arranged as:

- Country
- Region
- City
- Campus
- Building or Area
- Floor

In the above list, *Country* is the highest level in your hierarchy and *Floor* is the lowest.

The following image is of the **Structure & Tags** pane that displays your network tree.

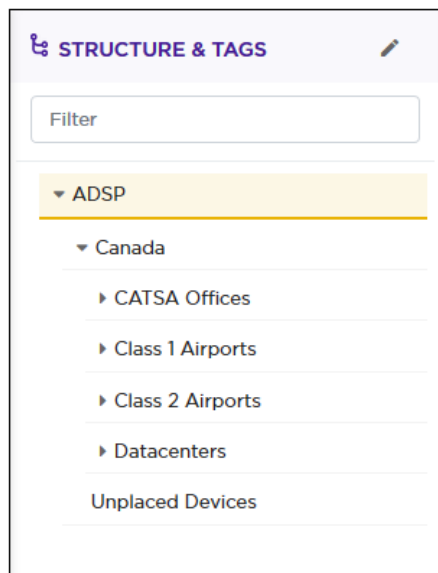



Figure 23: Network Tree

Your network tree automatically includes your appliance and any other appliance that you have added to your Extreme AirDefense system. Each appliance can be included into and then expanded within the above hierarchy tree.

Deciding how to structure your network tree depends on the following decisions:

- Whether you want to use triangulation for location tracking
- How you plan to apply policies to devices
- How the network tree affects the scope in the user interface

Launch the **Structure Configuration** screen from the  > **Structure** menu path. The following screen displays.

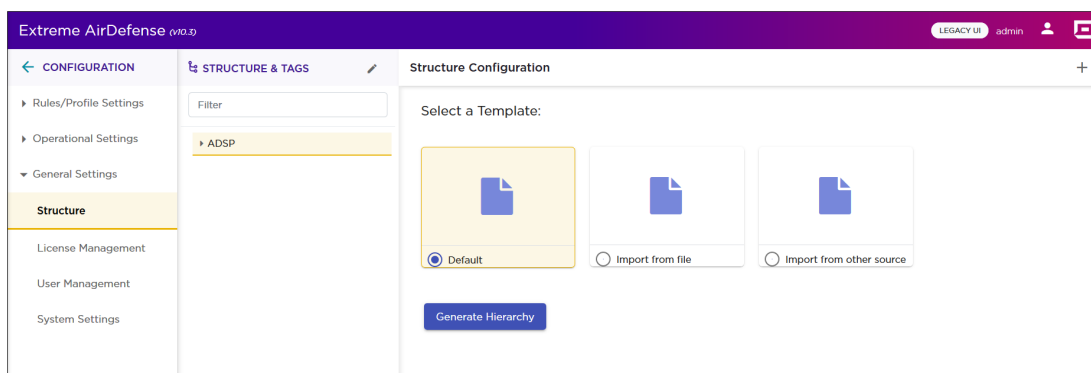

Use the  icon to regenerate your network structure.

Triangulation Considerations

To use triangulation, you must load AirDefense appliance with a two-dimensional map of the floor your sensors are located on. Maps must be loaded at the floor level. You

cannot use triangulation over multiple floors which means you cannot use sensors on different floors if you want to use triangulation.

Policy Considerations

When you are creating network levels, you should create profiles for similar devices that you expect to share common policies. Although you can certainly apply policies at the device level, it is a good practice to apply them at higher network levels, preferably at the appliance (AirDefense) level.

UI Scope Considerations

You control the scope of data you see at any time by selecting levels in the tree. If you want to view data from one area of your WLAN separately from data about the rest of the WLAN, such as different buildings/floors, you should consider how you can create network levels for that area. Then, viewing its data discretely is as easy as clicking on that node in the tree.

View And Manage Your Network Tree

You can view your network tree from the **Structure & Tags** panel wherever available.



Note

Network trees and floor plans can also be automatically imported by using the discovery process.


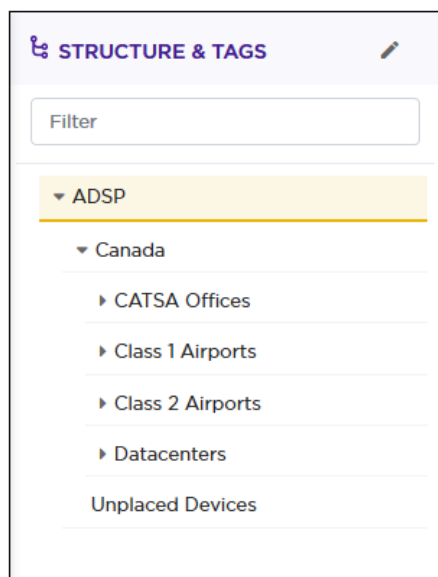



Figure 24: Structure & Tags Panel

Use the icons next to each node on the network tree to expand or contract it. The inner most node for the network tree is the *Floor* node. This node cannot be expanded further. Similarly, the topmost node is the *Appliance* node, and cannot be contracted further.

Use the **Filter** text area to filter the devices to view specific terms in the **Structure & Tags** pane. The following image displays a filter that displays AP-650 access points.

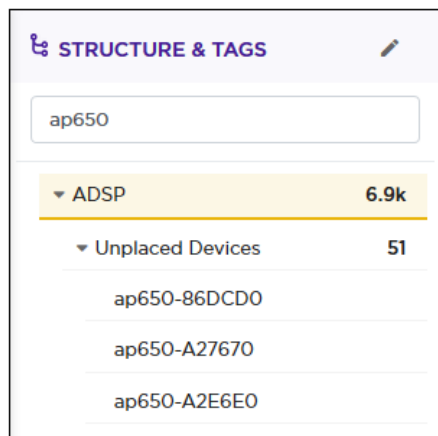


To edit the network tree, select the  icon located to the top left of the pane. The **Edit Structure** dialog displays.

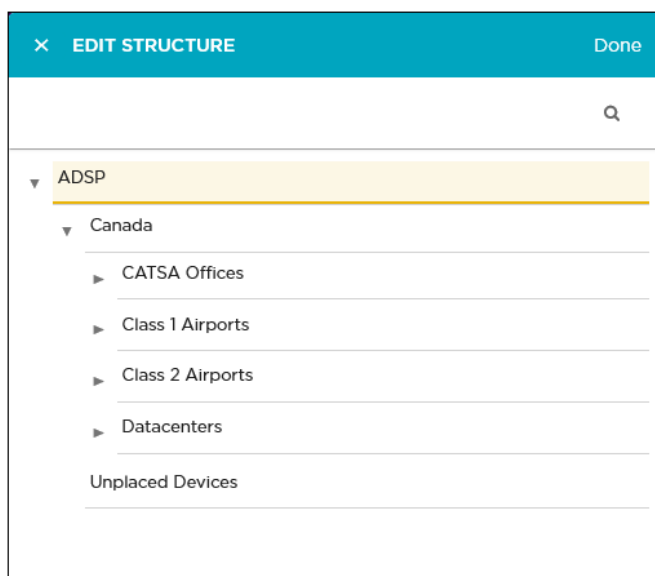

Hover on a node on this tree to view the actions that can be performed at that level. Generally the following actions can be performed.

- Add a tree node as a next level node (sub-node) in the hierarchy. Use the  icon to add a node to the tree.

When you add a node, it is always added as a sub-node of the node where this action was performed. If the main node has sub-nodes, the new node is always added as the last sub-node.

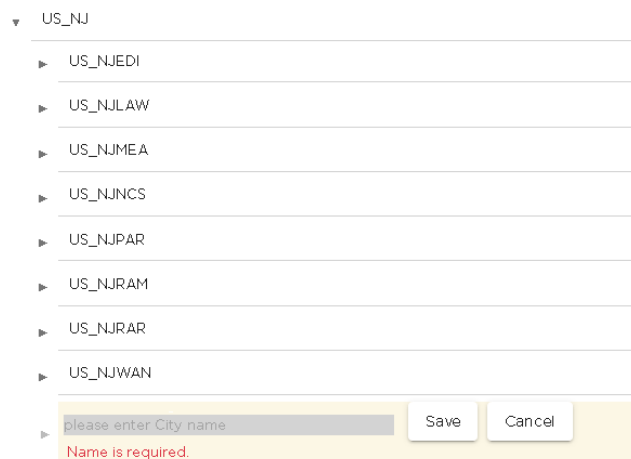

- Edit the node. The only action that can be performed is renaming the node. Use the  icon to edit the node.

The node name is edited in place. Use the **Save** button to save the edited node name. Use the **Cancel** button to retain the node's existing name.




- Delete the node and if it has sub-nodes, then this command deletes the sub-nodes too. Use the  icon to delete the node. The node and its sub-nodes are immediately deleted.

Generate a Network Tree

Before you can use a new installation of Extreme AirDefense, you must define the network structure of the sites that the system must manage. On first use, you must generate the system's network tree.

1. Select the  icon located to the top right of the screen. The **Structure Configuration** screen displays.

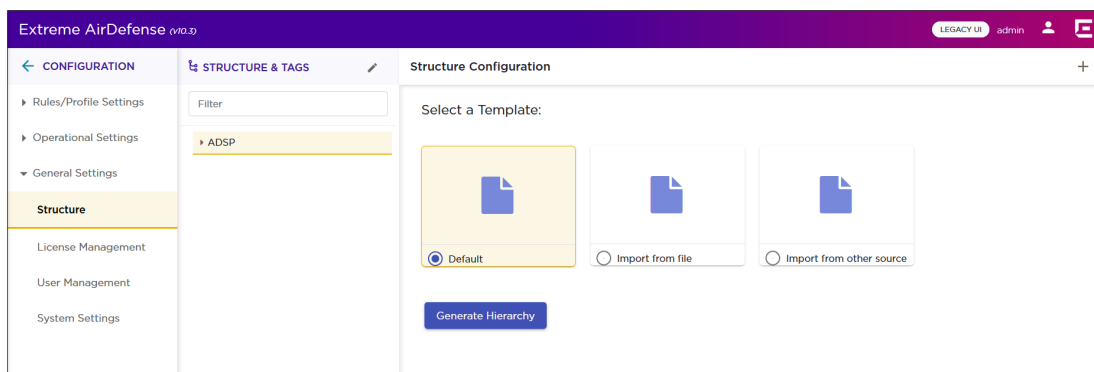


A blank network tree is generated from the **Structure Configuration** screen.


2. From the **Structure Configuration** screen, select the **Default** button.

3. Select the **Generate** button.

A blank network tree is created with the top level node named as *ADSP*.

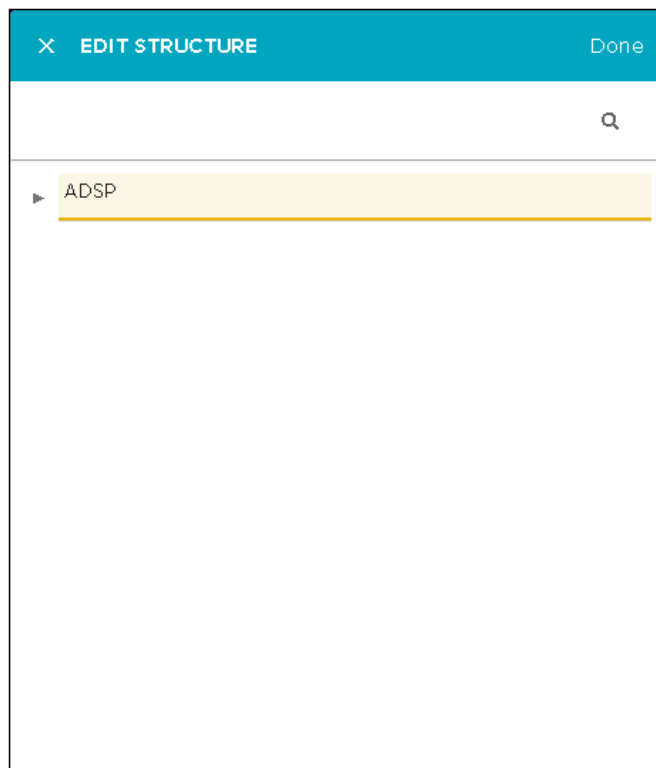

4. Hover on this level to display the action buttons for this level.

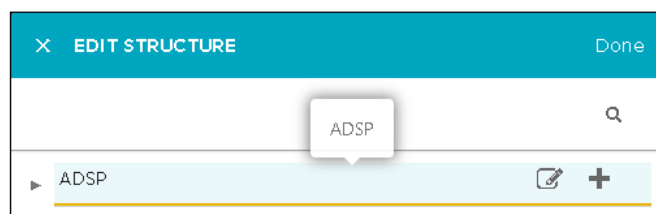

5. Use the **+** icon to add a sub-node to this top level node.

The **Edit Structure** dialog displays.

For more information on viewing and managing nodes, see the topic [View And Manage Your Network Tree](#) on page 148.


6. Once you have completed populating all the nodes in your network tree, select the **Done** button located on the top right of this dialog.

The **Edit Structure** dialog is closed and the **Structure Configuration** screen displays.

Import the Network Tree

Extreme AirDefense's network tree can also be imported from an external file.

You can import network tree from the **Structure Configuration** screen.

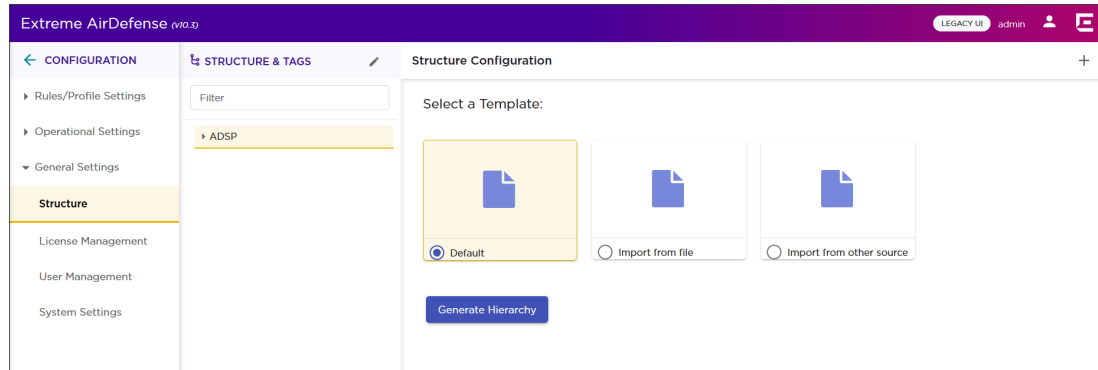


Note

The tree structure is created as part of import from **XIQ/XIQC Import**. Also, **Floor Plans** and the placing of infrastructure devices are part of the import as well.

1. From the **Structure Configuration** screen, select the **Import from File** button.

The screen changes to the following:

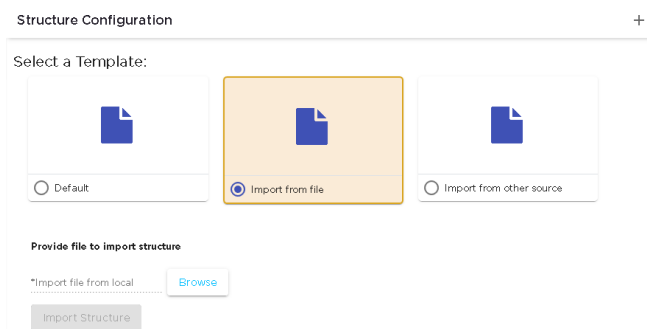


2. Select the **Browse** button to launch the operating system's **File Upload** window.
 3. Use the operating system's file upload window and navigate to the location where your import file is located and select the appropriate button to upload your file.
- On successful import, the Extreme AirDefense network tree is updated.

Floor Plans

This task describes how to create a detailed floor plan of your network and devices.


You can create a detailed floor plan map of your network and devices from the **Structure Configuration** window:

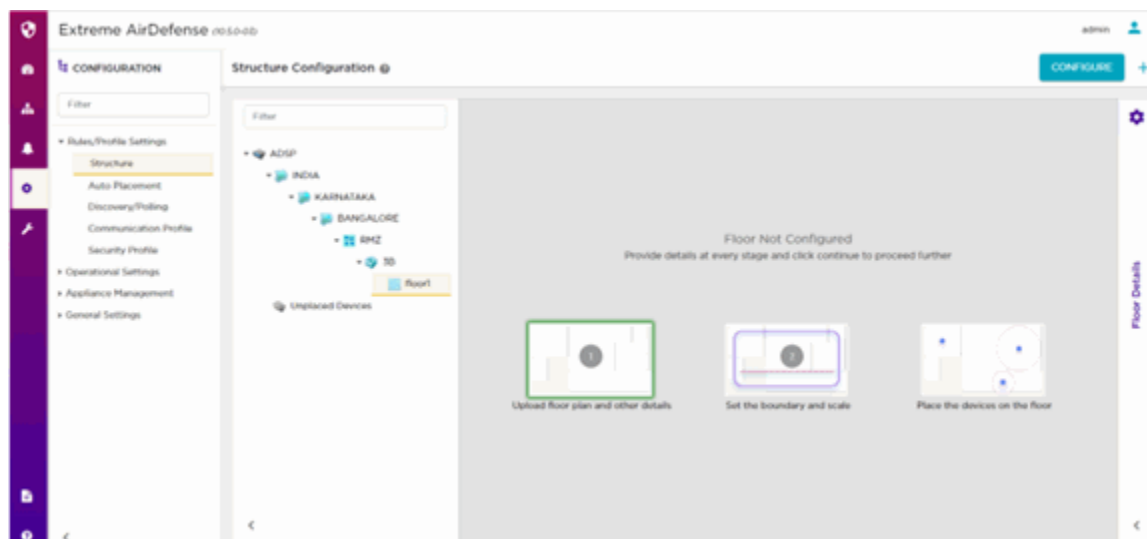

To map your floor plan:


1. From the **Structure Configuration** tree on the **Configuration** tab, select the Floor level.
2. To configure your floor plan, select the **Configure** button at the top right corner of the panel.

The **Floor Details** window displays.

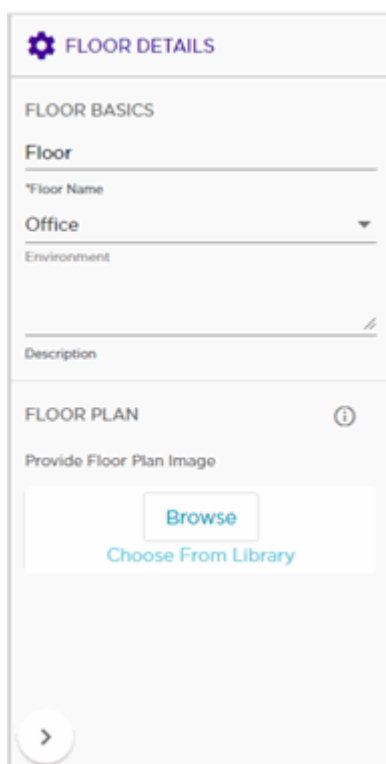


3. To select the type of environment that your floor plan represents, select the down arrow to expand the drop-down list:

The **Environment** drop-down list displays.

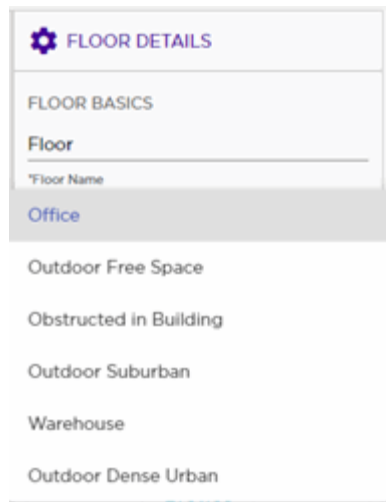


The screenshot shows a mobile application interface for 'FLOOR DETAILS'. Under the 'FLOOR BASICS' section, there is a 'Floor' label and a text input field containing 'Floor Name'. Below this is a drop-down menu for 'Environment'. The menu is expanded, showing a list of options: 'Office' (which is highlighted with a grey background), 'Outdoor Free Space', 'Obstructed in Building', 'Outdoor Suburban', 'Warehouse', and 'Outdoor Dense Urban'.

4. To upload an image of your floor plan, select the **Browse** button and choose the file to upload.

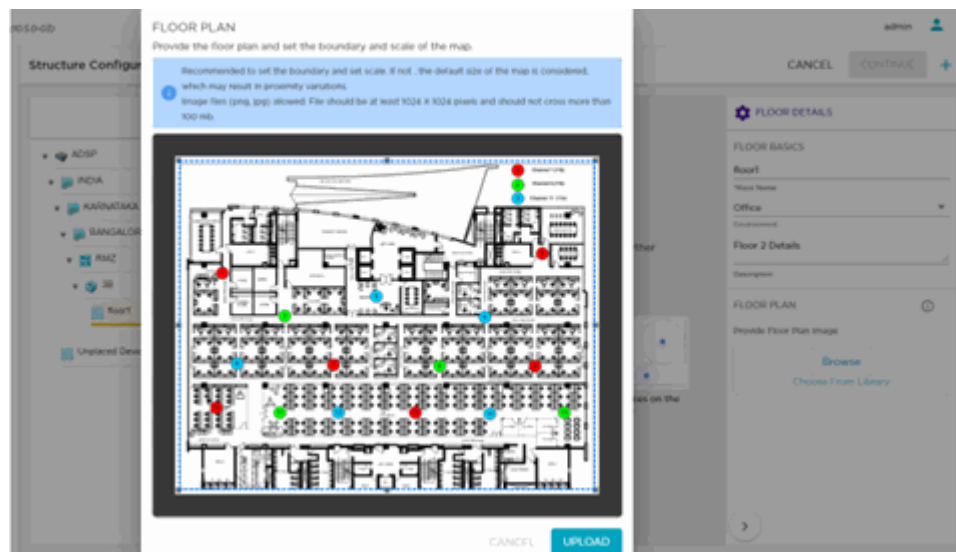

This screenshot shows a mobile application interface for uploading a floor plan. On the left, a sidebar menu lists various locations: 'ACSP', 'INDIA', 'KARNATAKA', 'BANGALORE', 'MUMBAI', 'CHENNAI', and 'UNPLACED DESK'. The main area is titled 'FLOOR PLAN' and contains a large image of a floor plan with several colored dots (red, green, blue) placed on it. Above the image, there is a text box with instructions: 'Provide the floor plan and set the boundary and scale of the map. Recommended to set the boundary and set scale. If not, the default size of the map is considered, which may result in proximity variations. Image files (png, jpg) allowed. File should be at least 1024 x 1024 pixels and should not cross more than 100 MB.' Below the image, there are 'CANCEL' and 'UPLOAD' buttons. On the right side of the screen, there is a 'FLOOR DETAILS' form with fields for 'Floor Name', 'Environment', 'Floor 2 Details', and 'Description'. At the bottom of this form, there is a 'Provide Floor Plan Image' section with a 'Browse' button and a 'Choose From Library' link.

5. Use the Coverage panel in the right-hand Floor Details window to set the boundaries for your floor plan map. Select **Auto** to configure the map using default coverage boundaries. Select **Manual** to configure the boundaries manually.

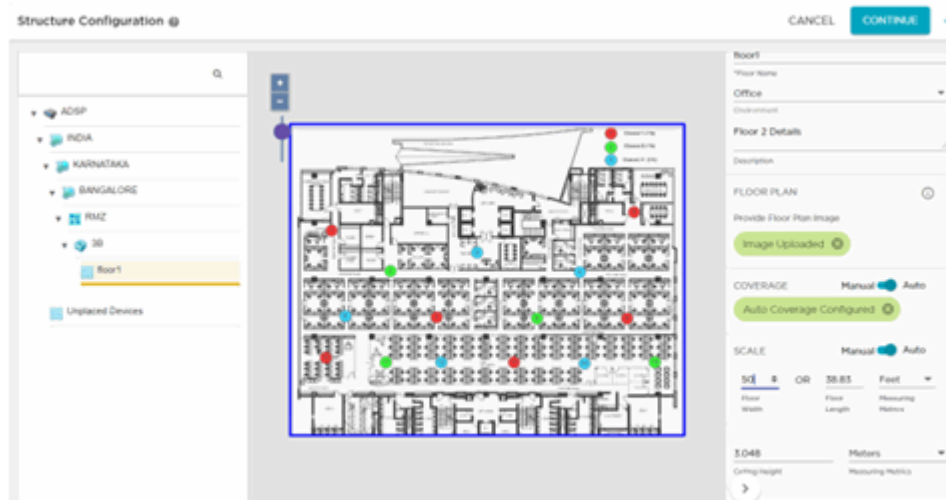**Note**


If you select **Auto** to use the default coverage option, changes and variations in the proximity of your mapped devices may occur. Use the **Manual** option to set your coverage to prevent these issues.

6. Use the **Scale** panel in the right-hand Floor Details window to set the scale for your floor plan map. Select **Auto** to configure the map using default scaling. Select **Manual** to configure the scale manually.

**Note**

If you select **Auto** to use the default scale option, changes and variations in the proximity of your mapped elements may occur. Use the **Manual** option to set your scale to prevent these issues.

- To add a device to your floor plan map, select it from the right-hand list of devices and drag and drop it on the map.

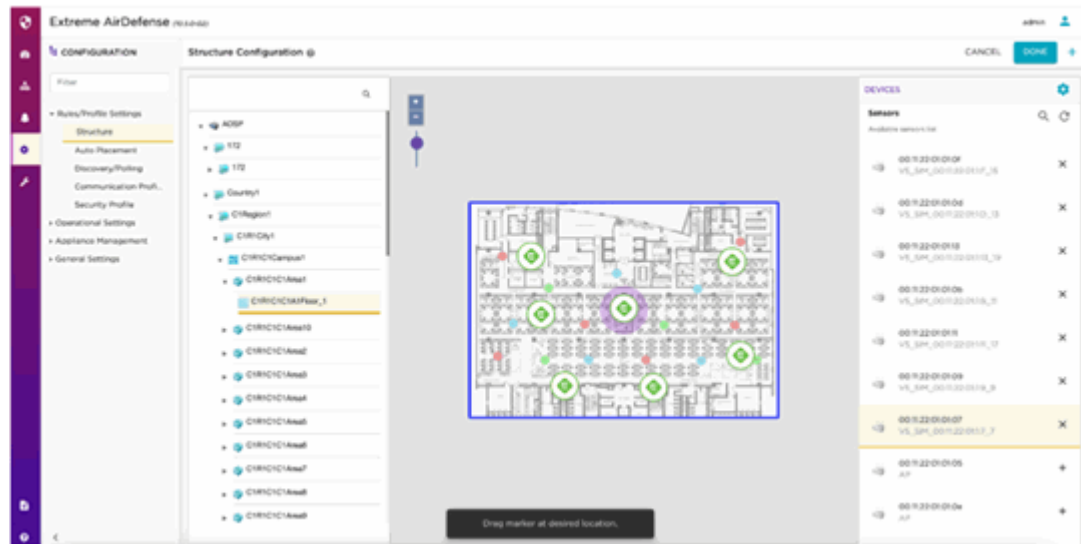


- To view Device Locations, navigate to the Network Snapshot tab and select any BSS, Wireless Client, or BT/BE device type. If the device type is configured for a floor plan, the Device Location window opens



9. Select Show All Devices to display all the the devices and APs:



10. If a floor plan is not configured, you can configure a floor plan from this window:

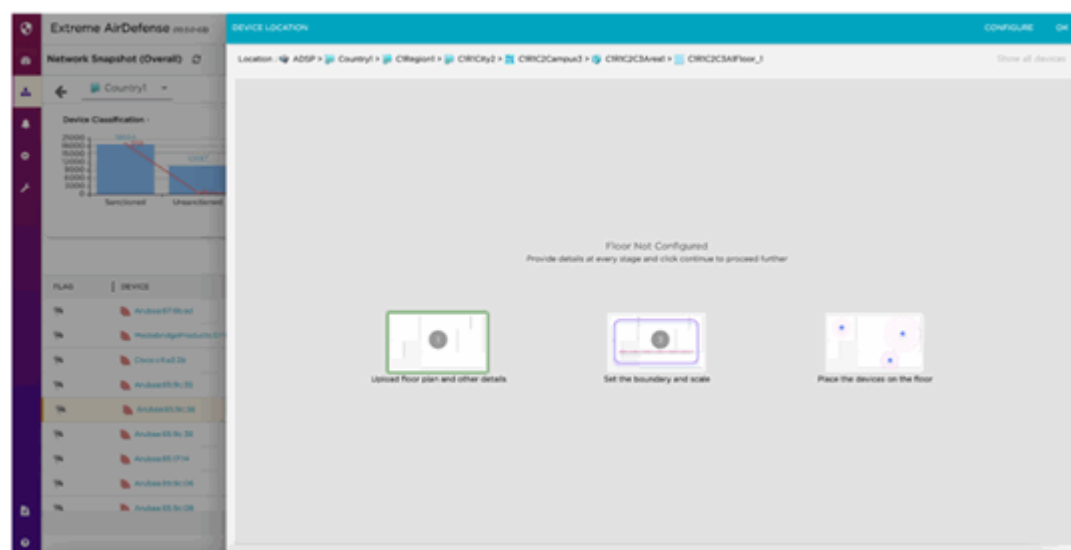

Auto-Placement Rules

Auto-Placement rules determine where devices will be placed in the network tree when they are imported. Any device that has the specified parameter(s) and qualifying value(s) will be placed in the selected network level.

Auto-Placement rules are applied differently based on the device type that are discovered in your network. The rules are different for sensors when compared to rules for access points and switches.

Auto-Placement Rules for Sensors

Auto-Placement rules for sensors are applied every 20 minutes. If a rule exists, new sensors in the *Unplaced Devices* folder are moved into a predefined scope level. This

only happens to sensors seen in your network since the last 20 minute poll. Sensors seen before the last 20 minute poll are excluded.

Auto-Placement Rules for Access Points and Switches

Auto-Placement rules for APs and switches are applied when APs or switches are manually added or imported into a system using the following conditions:

- If a rule exists, the AP or switch is moved into the predetermined scope level.
- If no rule exists, the AP or switch is moved into the *Unplaced Devices* folder.
- Adopted access points discovered from a controller but without an applicable auto-placement rule are placed in the same folder as the controller.
- If no Auto-Placement rules criteria match the device, it will be placed in the *Unplaced Devices* folder.
- IP based placement uses a single IP address for each device. The selected IP address for Auto-Placement is the first available address on the following ordered list of IP addresses learned by Extreme AirDefense.
 - The first IP address on the list is the Devices Management IP Address. This is the IP address that Extreme AirDefense uses to communicate with the device. Due to the use of NAT in the network, this IP address may be different than the actual configured IP address of the device.
 - The second IP address is the address that the switch provides to Extreme AirDefense for the AP. In adaptive or adopted mode where the AP is discovered through the switch, the system will use the IP address that the switch has provided for the AP. This IP address is only used by Extreme AirDefense for this purpose and is not saved by Extreme AirDefense. It is not used as a configured or managed IP address for the device, and it will not be displayed by Extreme AirDefense.
 - The switch's IP address will be used for Auto-Placement of the AP if the previous two IP addresses are not available. The switch's management address is the IP address that is used by Extreme AirDefense to communicate with the switch. It may NOT be the switch's configured IP address.

Extreme AirDefense (v10.5) LEGACY UI admin

← CONFIGURATION

▼ Rules/Profile Settings

Auto Placement

Discovery/Polling

Communication Profile

Security Profile

Operational Settings

General Settings

AUTO PLACEMENT RULES

TOTAL RECORDS : 126

Search

RULE NAME	DESTINATION	
ST020	ADSP > Even > ST020 > Floor 1	👁️ 🗑️ ✎️
ST022	ADSP > Even > ST022 > Floor 1	👁️ 🗑️ ✎️
ST026	ADSP > Even > ST026 > Floor 1	👁️ 🗑️ ✎️
ST030	ADSP > Even > ST030 > Floor 1	👁️ 🗑️ ✎️
ST032	ADSP > Even > ST032 > Floor 1	👁️ 🗑️ ✎️
ST034	ADSP > Even > ST034 > Floor 1	👁️ 🗑️ ✎️
ST036	ADSP > Even > ST036 > Floor 1	👁️ 🗑️ ✎️
ST042	ADSP > Even > ST042 > Floor 1	👁️ 🗑️ ✎️
ST044	ADSP > Even > ST044 > Floor 1	👁️ 🗑️ ✎️
ST046	ADSP > Even > ST046 > Floor 1	👁️ 🗑️ ✎️
ST048	ADSP > Even > ST048 > Floor 1	👁️ 🗑️ ✎️
ST050	ADSP > Even > ST050 > Floor 1	👁️ 🗑️ ✎️

normal

View Auto-Placement Rules

Use the **Auto-Placement Rules** screen to view a list of auto-placement rules configured for this Extreme AirDefense managed network. These rules determine where devices are placed in the network tree when they are imported into the network.

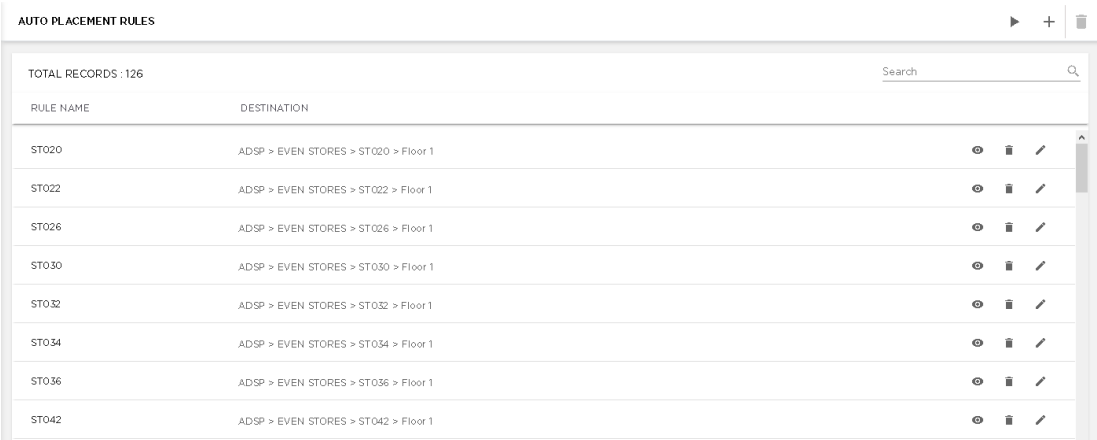


Figure 25: Auto-Placement Rules

The screen displays the following information:

Field	Description
Rule Name	This field displays the name of the auto-placement rule.
Destination	This field displays the destination configured for this rule. This is the location where a device that matches the auto-placement rule is placed in.
Action	The icons in this field enable you to view, edit or delete auto-placement rules. Use the  icon to view the rule's configuration in a different dialog. Use the  to delete the selected auto-placement rule. Similarly use  to edit the auto-placement rule. For more information, see Edit an Auto-Placement Rule on page 162.

Use the  area to search for a particular auto-placement rule.


The **Auto-Placement Rules** screen has a provision to manually run the auto-placement rules listed in this screen. By default Extreme AirDefense runs the auto-placement rules periodically. To force Extreme AirDefense to run the auto-placement rules on demand,

select the  icon located to the top right of this screen. When selected, all the rules configured in this screen are run immediately on the devices listed in the **Unplaced Devices** screen.

To add more auto-placement rules, use the  icon located to the top right of this screen. For more information, see [Add an Auto-Placement Rule](#) on page 160.

Add an Auto-Placement Rule

Auto-Placement rules configure where devices are placed when they are imported into the Extreme AirDefense managed network.

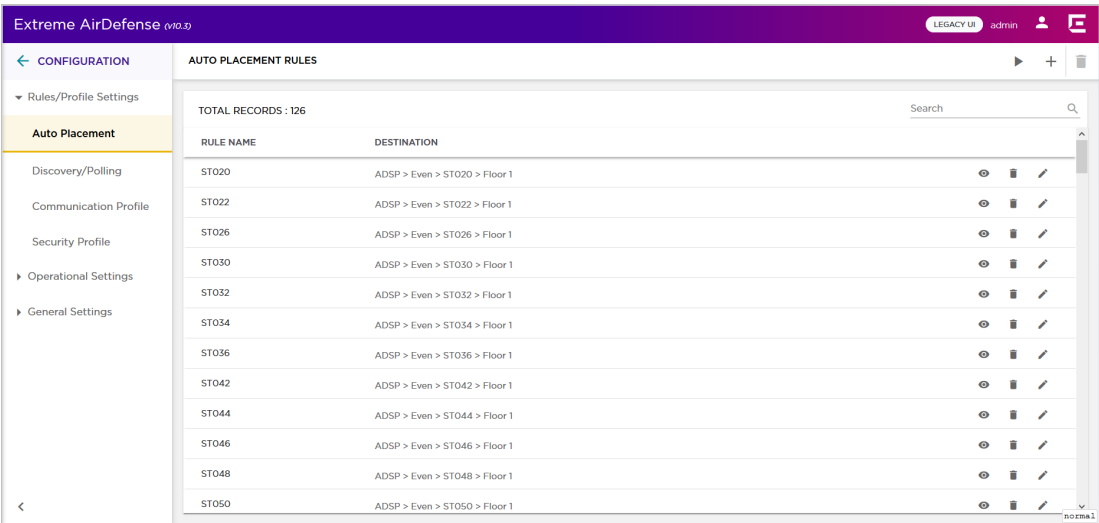


To add a new auto-placement rule:

1. From the **Auto-Placement Rules** screen, select the **+** icon.
The **Auto Placement Rule** dialog displays.

The screenshot shows the 'AUTO PLACEMENT RULE' dialog box. It has a title bar with a close button (X) and an 'APPLY' button. The dialog contains several fields: 'Name' (a text input field), 'Destination' (a dropdown menu currently showing 'Unplaced Devices'), and 'Criteria' (a section with the text 'Insert the criteria type' and an 'Add' button). Below the 'Criteria' section, there is a list of criteria types, with 'IP Range' currently selected and highlighted. The dialog is designed to allow users to configure the details of a new auto-placement rule.

2. Provide the following information to create a new auto-placement rule:

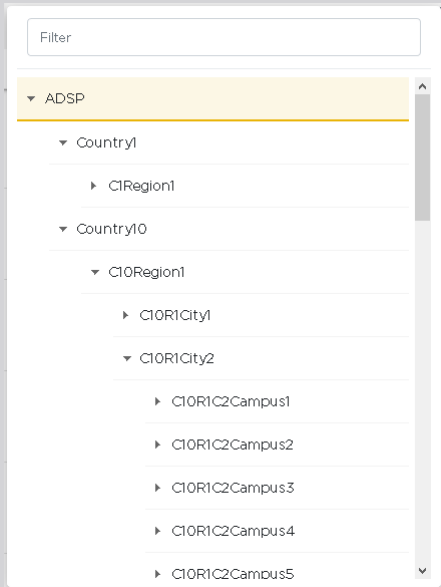Field	Description
Name	Provide a meaningful name for the auto-placement rule. You should name your rules such that they are easy to identify from among similar rules.
Destination	Use the Destination drop-down list to select the floor on which the devices meeting this auto-placement rule are to be placed.  Select the <i>Unplaced Devices</i> option from the drop-down list to indicate that the device is not placed. Unplaced devices appear in the Unplaced Devices tab of the Auto-Placement Rules screen.
Criteria	By default, a new rule has the following criteria selected: - IP Range Use this field to configure the range of IP address that is used as a selection criteria for this auto-placement rule. The following additional fields are available: - MAC Address Use this field to configure the device's MAC address that is used as a selection criteria for this auto-placement rule. You can configure a range of MAC addresses that is then used to place the devices. To use a single MAC address, enter the same address in both the Start MAC Address and End MAC Address fields. - DHCP

Field	Description
	Use this field to specify whether or not DHCP is used (True or False) as a selection criteria for this auto-placement rule. This parameter only works with sensors not with access points and switches. • Network Address Use the field to configure the device's network address that is used as a selection criteria for this auto-placement rule. • DNS Server Use this field to specify the DNS server or servers the devices are using and use that information as a selection criteria for this auto-placement rule. This parameter only works with sensors not with access points and switches. • Device Name Use this field to specify the device name that is used as a selection criteria for this auto-placement rule. • Device Model Use this field to specify the device model .This information is then used as a selection criteria for this auto-placement rule. • Firmware Use this field to specify the device's installed firmware version. This information is then used as a selection criteria for this auto-placement rule. • Serial Number Use this field to specify the device's unique serial number.This serial number is then used as a selection criteria for this auto-placement rule.

**Note**

Select the  icon to expand each selection criteria. To delete a selection criteria, use the  icon.

3. Select the **Apply** button located to the top right of this dialog to save the auto-placement rule.
4. Select the small 'x' icon to the top left of the dialog to close it.

Edit an Auto-Placement Rule

Auto-Placement rules configure where devices are placed when they are imported into the Extreme AirDefense managed network.

TOTAL RECORDS : 126		Search
RULE NAME	DESTINATION	
ST020	ADSP > Even > ST020 > Floor 1	👁️ 🗑️ ✎️
ST022	ADSP > Even > ST022 > Floor 1	👁️ 🗑️ ✎️
ST026	ADSP > Even > ST026 > Floor 1	👁️ 🗑️ ✎️
ST030	ADSP > Even > ST030 > Floor 1	👁️ 🗑️ ✎️
ST032	ADSP > Even > ST032 > Floor 1	👁️ 🗑️ ✎️
ST034	ADSP > Even > ST034 > Floor 1	👁️ 🗑️ ✎️
ST036	ADSP > Even > ST036 > Floor 1	👁️ 🗑️ ✎️
ST042	ADSP > Even > ST042 > Floor 1	👁️ 🗑️ ✎️
ST044	ADSP > Even > ST044 > Floor 1	👁️ 🗑️ ✎️
ST046	ADSP > Even > ST046 > Floor 1	👁️ 🗑️ ✎️
ST048	ADSP > Even > ST048 > Floor 1	👁️ 🗑️ ✎️
ST050	ADSP > Even > ST050 > Floor 1	👁️ 🗑️ ✎️

To edit an existing auto-placement rule:

1. From the **Auto-Placement Rules** screen, select the auto-placement rule to edit.
2. Select the  icon to edit the selected auto-placement rule.

The **Auto Placement Rule** dialog displays.

X
APPLY

Name

Destination
Unplaced Devices

Criteria
Insert the criteria type
Add

IP Range
X

3. Modify the required fields.
For more information on the fields in this screen, see [Add an Auto-Placement Rule](#) on page 160.
4. Select the **Apply** button located to the top right of this dialog to save the auto-placement rule.
5. Select the small 'x' icon to the top left of the dialog to close it.

Discovery Profile and Polling Configuration

Use the **Discovery/Polling** configuration menu item to configure the following Extreme AirDefense parameters:

- **Discovery and Import** - Use this configuration option to configure how devices are imported or are discovered. For more information, see [Discovery Profile](#) on page 164
- **Polling** - Use this configuration option to set the various parameters for managing configuration audits, status polling, and data collections from a single window. For more information, see [Polling Configuration](#) on page 170

Use the **Configuration > Discovery/Polling** menu to launch the **Discovery Profiles** screen.

Discovery Profile

Discovery profiles are used to configure how devices are discovered or imported from various sources into the Extreme AirDefense managed network. Use the configurations in **Discovery/Polling** screen to set periodic imports and discovery of the devices into your network.

Floor plans and sensor placement can automatically be updated during this process as well.


Devices can be imported or discovered from one of the following sources:

- Imported from a Local file
- Imported from a Remote file
- Using SNMP discovery using a list of networks to scan
- Using Wireless Manager/Switch
- Connection to Exeme IQ Controller
- Connection to an Extreme Cloud IQ Account

All devices, once imported, will be configured and classified according to the *Device Import Rules*. You may also use *Auto-Placement Rules* to place these imported device in your network or choose to place these devices manually.

Discovery Profiles Screen

The **Discovery Profile** screen enables you to add and manage the profiles configured for your Extreme AirDefense system.

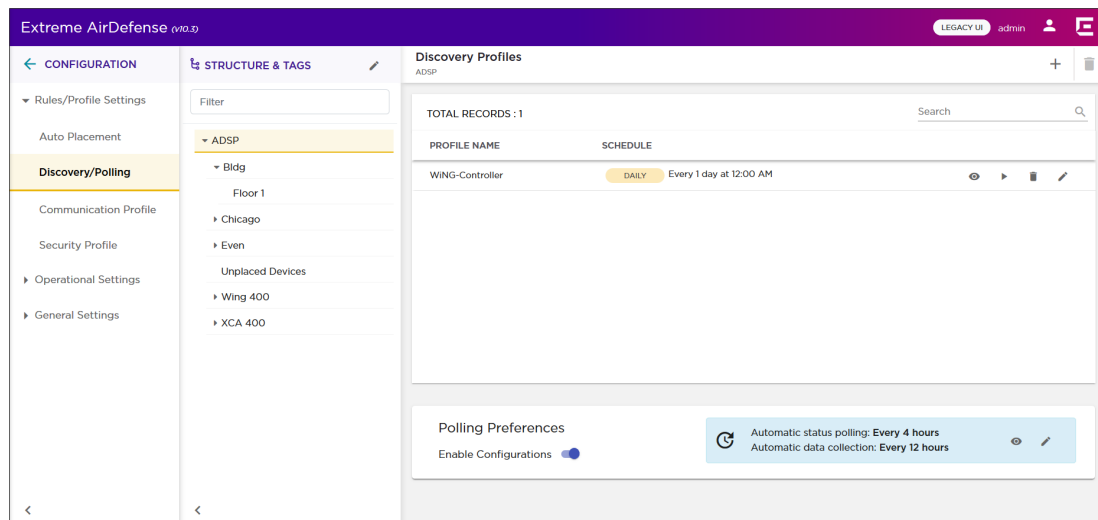

This screen is divided into the following sections:


- **Structure & Tags** - This section is used to set the scope of the *Polling Preferences* configuration. It is not used when configuring *Discovery Profiles*.

- Discovery Profiles - This section is used to add and manage your discovery profiles in the Extreme AirDefense system.

The **Discovery Profiles** area of the **Discovery/Polling** screen lists all the discovery profiles configured for your Extreme AirDefense system. Use the controls provided within this area to add and manage discovery profiles. You can add a new profile, modify or delete an existing profile. If required, you can also manually run a profile.

View Discovery Profiles

Use the **Discovery/Polling** screen to view a list of discovery profiles configured for this Extreme AirDefense managed network. These profiles determine how devices are discovered by Extreme AirDefense and how devices are imported into the system.

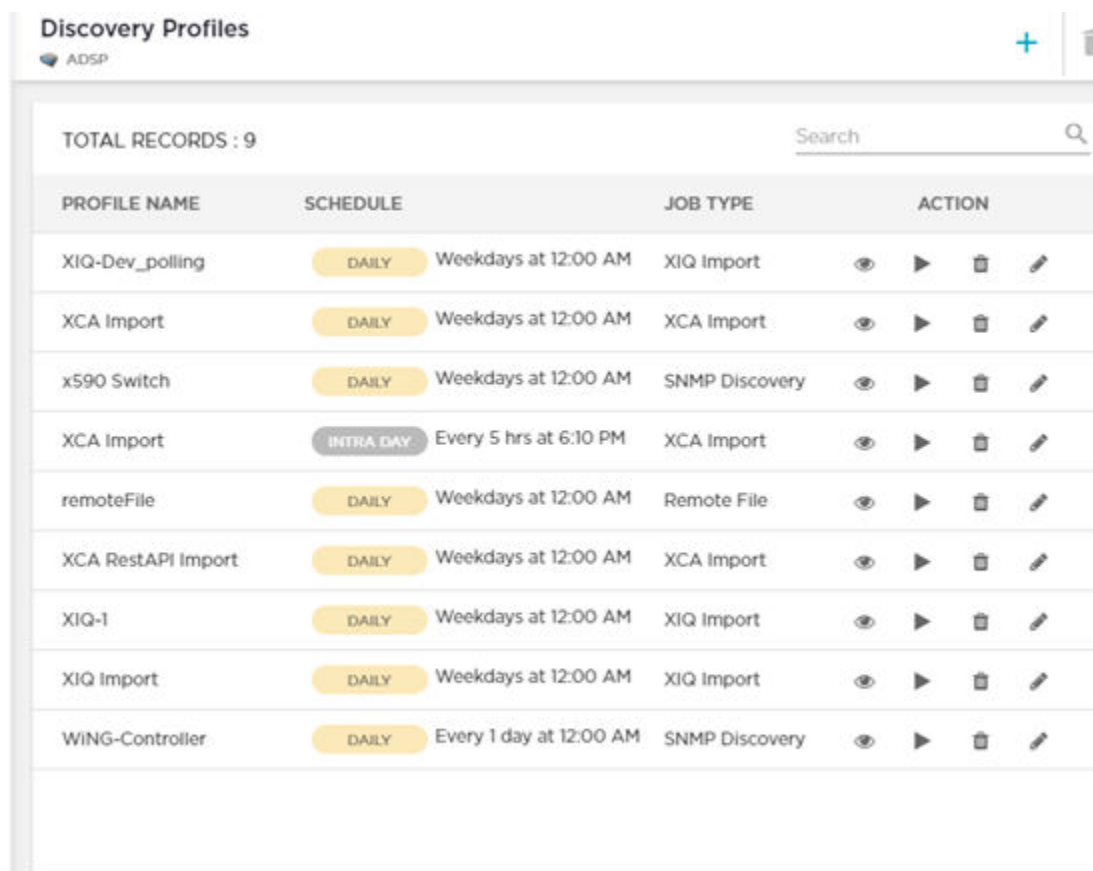

PROFILE NAME	SCHEDULE	JOB TYPE	ACTION
XIQ-Dev_polling	DAILY Weekdays at 12:00 AM	XIQ Import	View Run Delete Edit
XCA Import	DAILY Weekdays at 12:00 AM	XCA Import	View Run Delete Edit
x590 Switch	DAILY Weekdays at 12:00 AM	SNMP Discovery	View Run Delete Edit
XCA Import	INTRA DAY Every 5 hrs at 6:10 PM	XCA Import	View Run Delete Edit
remoteFile	DAILY Weekdays at 12:00 AM	Remote File	View Run Delete Edit
XCA RestAPI Import	DAILY Weekdays at 12:00 AM	XCA Import	View Run Delete Edit
XIQ-1	DAILY Weekdays at 12:00 AM	XIQ Import	View Run Delete Edit
XIQ Import	DAILY Weekdays at 12:00 AM	XIQ Import	View Run Delete Edit
WING-Controller	DAILY Every 1 day at 12:00 AM	SNMP Discovery	View Run Delete Edit

Figure 26: Discovery Profiles

The screen displays the following information:

Field	Description
Profile Name	The name of the discovery profile.
Schedule	The schedule for running this discovery profile.

Field	Description
Job Type	The method by which AirDefense is discovering or importing device information.
Action	The icons in this field enables you to edit, delete, run the discovery profile. Use the  icon to view the details for this discovery profile in a separate dialog. Use the  icon to run this discovery profile manually. Use the  icon to delete the selected discovery profile. Similarly use the  icon to edit the auto-placement rule.


Use the  area to search for a particular discovery profile.

The **Discovery Profiles** screen has a provision to manually run the profiles listed in this screen. By default Extreme AirDefense runs the discovery profile based on its schedule. To force Extreme AirDefense to run a discovery profile on demand, select the  icon.

To add more discovery profiles, use the  icon located to the top right of this screen. For more information, see [Add a Discovery Profile](#) on page 166.

Add a Discovery Profile

Discovery profiles configure how devices are discovered or imported into the Extreme AirDefense managed network.

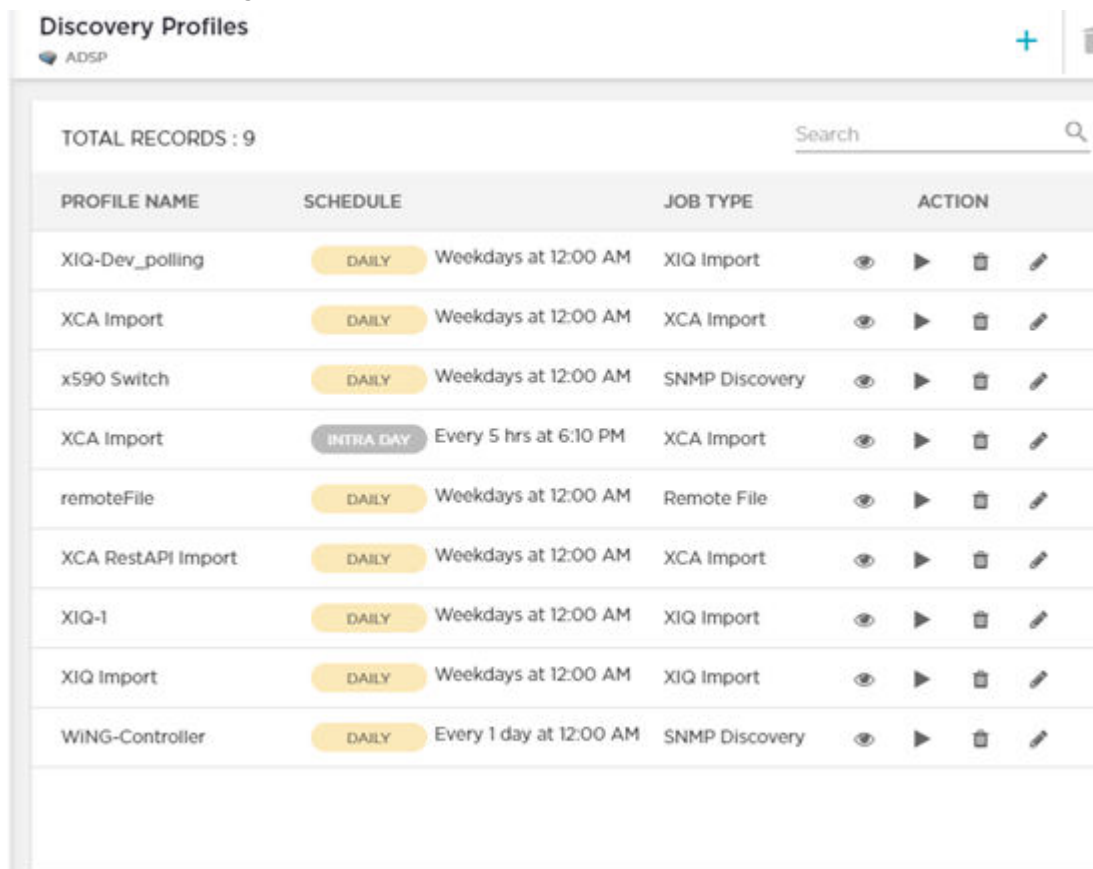

PROFILE NAME	SCHEDULE	JOB TYPE	ACTION
XIQ-Dev_polling	DAILY Weekdays at 12:00 AM	XIQ Import	   
XCA Import	DAILY Weekdays at 12:00 AM	XCA Import	   
x590 Switch	DAILY Weekdays at 12:00 AM	SNMP Discovery	   
XCA Import	INTRA DAY Every 5 hrs at 6:10 PM	XCA Import	   
remoteFile	DAILY Weekdays at 12:00 AM	Remote File	   
XCA RestAPI Import	DAILY Weekdays at 12:00 AM	XCA Import	   
XIQ-1	DAILY Weekdays at 12:00 AM	XIQ Import	   
XIQ Import	DAILY Weekdays at 12:00 AM	XIQ Import	   
WING-Controller	DAILY Every 1 day at 12:00 AM	SNMP Discovery	   

To add a new discovery profile:

1. From the **Discovery Profiles** screen, select the **+** icon.
The **Discovery Profile** dialog displays.

DISCOVERY PROFILE APPLY

*Discovery Profile Name
test

Job Type ⌵

Job Type
SNMP Discovery

Network Criteria * ⌵ **Wild Card *** 192.168.*.100 ×
e.g.: 192.168.*.100

Communication Profile * ⌵

Extreme WING 5.x Default

Extreme WING 5.x Default
SNMP CONSOLE HTTP

Schedule ⌵

DAILY Weekdays at 12:00 AM

Placement Rules ⌵

Add to appliance: ADSP, Place devices in a single folder: ADSP > Floor

Show all ×

2. In the **Discovery Profile Name** field, change the default value from *New Scheduled Import* to a name that describes this discovery profile.
3. Expand the **Job Type** field using the ⌵ icon.
4. Select the method through which Extreme AirDefense imports device information:

Option

SNMP Discovery	Configure device imports through <i>SNMP Discovery</i> .
Local File	Import devices via a local file.
Remote File	Import devices via a remote file.
XCC Import	Import device information from Extreme AirDefense.
XIQ Import	Import device information from ExtremeCloud IQ.

From the **Network Criteria selection** drop-down list, select the criteria used to select the device.

Wild Card

Enter an IP address including a wild card. For example, 10.9.*.100.

Single IP

Enter a single IP address. For example, 192.168.12.23.

IP Range

Enter a range of IP addresses. For example, 192.168.10.10–192.168.10.35.

Network Address

Enter a Network Address. For example, 192.168.10.0/24.

FQDN

Enter a fully qualified domain name. For example, www.example.com.

Use the **Communication Profile** field to select an existing communication profile. From the drop-down list, you can select a existing communication profile, or you can create a new profile. You can also select the *Manual Entry* option from this list to create a communication profile that is unique to this SNMP host.

**Note**

A communication profile is a set of parameters that enables you to connect to a remote server. For more information on communication profiles, see [Communication Profile](#) on page 174.


5. Use the **Schedule** field to schedule the frequency that discovery of the device occurs. Select **Daily**, **Monthly**, **One Time**, and **Intra-Day** (which is more than one time per day) from the drop-down list. You can also select the time that the device is discovered.
6. Use the **Placement Rules** field to configure the placement of the devices.
7. To configure device imports through a *Remote File*, select the **Remote File** button.
Provide the following information:

Field	Description
Host	Provide the host name or IP address of the remote server where the import file is located.
Protocol	From the drop-down list, select the protocol to use when communicating with the remote host.
Path	Enter the full path to the import file on the remote host. The path must also include the full name of the import file. For example /home/localadmin/temp/importlist.list
User	Enter the username to be used when connecting to the remote host.
Password	Enter the correct password for the username entered in the User field.
Verify Server Certificate	Select this option to force Extreme AirDefense to verify the remote server's security certificate for validity.

8. Select the **APPLY** button located to the top right of this dialog to save the device discovery profile.
9. Select the small 'x' icon to the top left of the dialog to close it.

Edit a Discovery Profile

Discovery profiles configure how devices are discovered or imported into the Extreme AirDefense managed network.

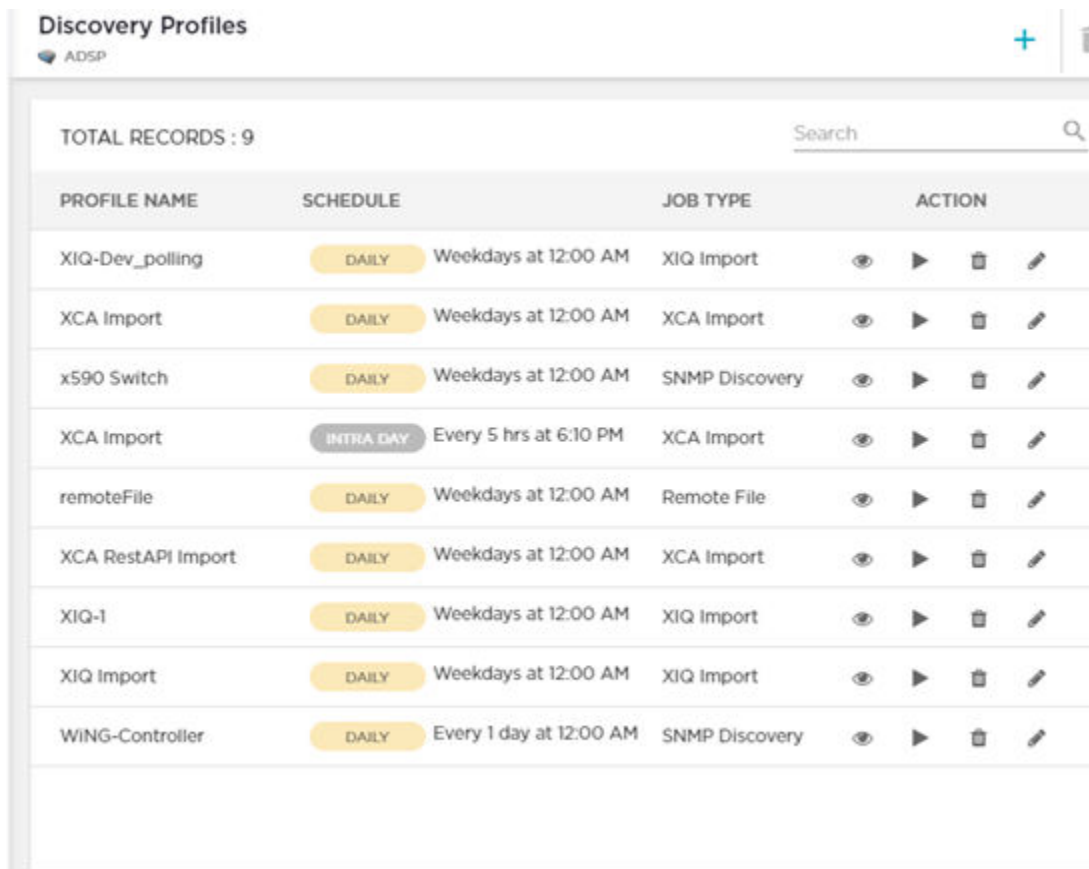

Discovery Profiles + | 🗑️

TOTAL RECORDS : 9 Search 🔍

PROFILE NAME	SCHEDULE	JOB TYPE	ACTION
XIQ-Dev_polling	DAILY Weekdays at 12:00 AM	XIQ Import	👁️ ▶️ 🗑️ ✎️
XCA Import	DAILY Weekdays at 12:00 AM	XCA Import	👁️ ▶️ 🗑️ ✎️
x590 Switch	DAILY Weekdays at 12:00 AM	SNMP Discovery	👁️ ▶️ 🗑️ ✎️
XCA Import	INTRA DAY Every 5 hrs at 6:10 PM	XCA Import	👁️ ▶️ 🗑️ ✎️
remoteFile	DAILY Weekdays at 12:00 AM	Remote File	👁️ ▶️ 🗑️ ✎️
XCA RestAPI Import	DAILY Weekdays at 12:00 AM	XCA Import	👁️ ▶️ 🗑️ ✎️
XIQ-1	DAILY Weekdays at 12:00 AM	XIQ Import	👁️ ▶️ 🗑️ ✎️
XIQ Import	DAILY Weekdays at 12:00 AM	XIQ Import	👁️ ▶️ 🗑️ ✎️
WING-Controller	DAILY Every 1 day at 12:00 AM	SNMP Discovery	👁️ ▶️ 🗑️ ✎️

To edit an existing discovery profile:

1. From the **Discovery Profiles** screen, select the discovery profile to edit.
2. Select the ✎️ icon to edit the select discovery profile.

The **Discovery Profile** dialog displays.

DISCOVERY PROFILE APPLY

*Discovery Profile Name
test

Job Type ⬆

Job Type
SNMP Discovery

Network Criteria *
Wild Card

Wild Card *
192.168.*.100 ×
e.g.: 192.168.*.100

Communication Profile *
Extreme WING 5.x Default

Extreme WING 5.x Default ✎

SNMP CONSOLE HTTP

Schedule ⬇

DAILY Weekdays at 12:00 AM

Placement Rules ⬇

Add to appliance: ADSP, Place devices in a single folder: ADSP > 📁

Old > 📁 3 > 📁 Floor

Show all ×

3. Modify the required fields.
For more information on the fields in this screen, see the topic [Add a Discovery Profile](#) on page 166.
4. Select the **APPLY** button located to the top right of this dialog to save the device discovery profile.
5. Select the small 'x' icon to the top left of the dialog to close it.

Polling Configuration

AirDefense uses a centralized polling feature to manage configuration audits, status polling, and data collections from a single location.

Polling preferences are configured from the **Discovery Profile** screen. Use the **Polling Preferences** area of the **Discovery Profiles** screen to configure your polling profiles.

Discovery Profiles

ADSP

TOTAL RECORDS : 9

Search

PROFILE NAME	SCHEDULE		JOB TYPE	ACTION
XIQ-Dev_polling	DAILY	Weekdays at 12:00 AM	XIQ Import	   
XCA Import	DAILY	Weekdays at 12:00 AM	XCA Import	   
x590 Switch	DAILY	Weekdays at 12:00 AM	SNMP Discovery	   
XCA Import	INTRA DAY	Every 5 hrs at 6:10 PM	XCA Import	   
remoteFile	DAILY	Weekdays at 12:00 AM	Remote File	   
XCA RestAPI Import	DAILY	Weekdays at 12:00 AM	XCA Import	   
XIQ-1	DAILY	Weekdays at 12:00 AM	XIQ Import	   
XIQ Import	DAILY	Weekdays at 12:00 AM	XIQ Import	   
WING-Controller	DAILY	Every 1 day at 12:00 AM	SNMP Discovery	   

You can configure different polling preferences for each node in your AirDefense hierarchy. To do so, you must select the correct node in the **Structure & Tags** area of the **Discovery Profiles** screen. After selecting the scope, you can apply the polling preferences to the scope.

View the current Polling Preference details

Use the  icon in this control to view the current polling preference values. This information is displayed in a separate window.

DISCOVERY POLLING

Basic Settings

Automatic Status Polling

Enabled

Automatic Status Polling Frequency

4 Hours

Automatic Data Collection

Enabled

Automatic Data Collection Frequency

12 Hours

Extended Settings

ACL

Disabled

Port Suppression

Disabled

Background Switch Port Scanning

Enabled

Device Configuration

Disabled

Overriding Configuration Settings

The **Enable Configuration** switch is only available at the top most node of the **Structure & Tags** pane. Configurations can only be applied when this switch is set to *ON*. The top

most node is always named *ADSP* and you must use this switch to apply the selected configuration through out the Extreme AirDefense system.

By default, any level in the **Structure & Tags** pane always inherits configuration from the level above it unless explicitly overridden.

Since Extreme AirDefense manages its devices using a hierarchy that is configured using the **Structure & Tags** pane, all the nodes under the top *ADSP* node inherit the configurations set at that node. However, you can override the inherited configuration at any level in the hierarchy.

To override the inherited settings, in the **Structure & Tags** pane, select the node where you want to override the inherited configuration. Then from the  control, select the **Override** option. Note that the **Inherited from :** control always displays the name of the level from which the configuration settings are inherited from. Use this information to orient your self on how the configurations are inherited.

Change the configuration for the selected level as required and then use the **APPLY** button to implement the modified configuration settings. These settings will now be inherited by all levels below the selected level unless a sub-level has been explicitly overridden.

Edit Polling Preferences

AirDefense uses a centralized location where you can configure polling preferences. These preferences are used to manage configuration audits, status polling, and data collections from a single location.

Polling Preferences

Select the **Enable Configurations**  switch to toggle enabling polling preferences. The current configuration is displayed as under.



1. Use the **Structure & Tags** tree to select the scope for configuring polling preferences. It is possible to configure polling preference for each level of the AirDefense tree structure. However, it is recommended that you configure a polling preference for the top level of this tree. When configured, this preference is applied to every level in the AirDefense structure. You can then fine tune this configuration at each level of the tree.
2. Use the  icon to edit the current polling preference. The **Discovery Polling** dialog displays.

✕

DISCOVERY POLLING

Apply

Basic

Enable Automatic Status Polling

Frequency *

1

Hours

Enable Automatic Data Collection

Frequency *

1

Days

Extended

Enable ACL

Enable Port Supression

Enable Background switch port scanning

Enable Device configuration

3. Select the **Enable Automatic Status Polling** switch to toggle it. When enabled, AirDefense automatically polls for device network status at an interval defined by the frequency values configured for this field.

Set the following frequency parameters for this field:

Field	Description
Frequency	Use the spinner control to set the duration value.
Frequency Format	Use the drop-down list to select the format for the frequency. Select from one of <i>Days</i> , <i>Hours</i> , or <i>Minutes</i> .

4. Select the **Enable Automatic Data Collection** switch to toggle it.

Each device model has an associated data collection profile which identifies the list of attributes collected from it. When this option is enabled, these SNMP attributes are collected from the devices at a frequency configured for this field.

Set the following frequency parameters for this field:

Field	Description
Frequency	Use the spinner control to set the duration value.
Frequency Format	Use the drop-down list to select the format for the frequency. Select from one of <i>Days</i> , <i>Hours</i> , or <i>Minutes</i> .

5. Set the following **Extended** parameters.

Field	Description
Enable ACL	When enabled, this parameter enables you to carry out the ACL action from the Device Action Manager or Alarm Action manager profile. This action would enable the Access Control List on switches that meet the conditions defined in the filter of Alarm Action Manager or Device Action Manager.
Enable Port Suppression	When enabled, this parameter enables you to carry out the Port Suppression action from the Device Action Manager or Alarm Action manager profile. This action is used to suppress communications between unauthorized devices and switches on your network.
Enable Background Switchport Scanning	When enabled, this parameter will allow generation of all alarms related to a switch.
Enable Device Configuration	When enabled, this parameter enables you to manually perform audit operations on the imported devices.

6. Select the **APPLY** button located to the top right of this dialog to save the polling preferences for the selected scope.

7. Select the small 'x' icon to the top left of the dialog to close it.

Repeat the above steps for configuring polling preferences for a different scope by selecting it from the **Structure & Tags** pane.

Communication Profile

A *Communication Profile* is a set of configurations that enables you to use the same settings for connecting to various devices in your Extreme AirDefense managed network.

A communication profile consists of the following:

- SNMP Configuration - Use the settings under the **SNMP** tab to configure SNMP connection parameters.
- Console Configuration - Use the settings under the **Console** tab to configure console access parameters.
- HTTP Configuration - Use the settings under the **HTTP** tab to configure the parameters to access devices using HTTP protocol.

The main advantage of creating a communication profile is its capability to use the same credentials across multiple devices in the Extreme AirDefense managed network. This enables ease of configuration management and reduces its complexity.

You can create multiple communication profiles and apply them to individual sections of your Extreme AirDefense tree structure. However, it is suggested that you create a few global communication profiles and apply them for the whole system. You can then create new profiles that can be applied for various nodes in your structure. This provides a great amount of granularity of configuration across your Extreme AirDefense managed network.

Overriding Configuration Settings

The **Enable Configuration** switch is only available at the top most node of the **Structure & Tags** pane. Configurations can only be applied when this switch is set to *ON*. The top most node is always named *ADSP* and you must use this switch to apply the selected configuration through out the Extreme AirDefense system.

By default, any level in the **Structure & Tags** pane always inherits configuration from the level above it unless explicitly overridden.

Since Extreme AirDefense manages its devices using a hierarchy that is configured using the **Structure & Tags** pane, all the nodes under the top *ADSP* node inherit the configurations set at that node. However, you can override the inherited configuration at any level in the hierarchy.

To override the inherited settings, in the **Structure & Tags** pane, select the node where you want to override the inherited configuration. Then from the  control, select the **Override** option. Note that the **Inherited from :** control always displays the name of the level from which the configuration settings are inherited from. Use this information to orient your self on how the configurations are inherited.

Change the configuration for the selected level as required and then use the **APPLY** button to implement the modified configuration settings. These settings will now be inherited by all levels below the selected level unless a sub-level has been explicitly overridden.

View Communication Profiles

Use the **Communication Profiles** screen to view a list of these profiles configured for your Extreme AirDefense managed network. A Communication Profile is a set of configurations that enables you to use the same settings for connecting to various devices in your AirDefense managed network.

A communication profile consists of configuration for the following:

- **SNMP** - Use the settings under this tab to configure SNMP connection parameters.
- **Console** - Use the settings under this tab to configure console access parameters.
- **HTTP** - Use the settings under this tab to configure the parameters to access using HTTP protocol.

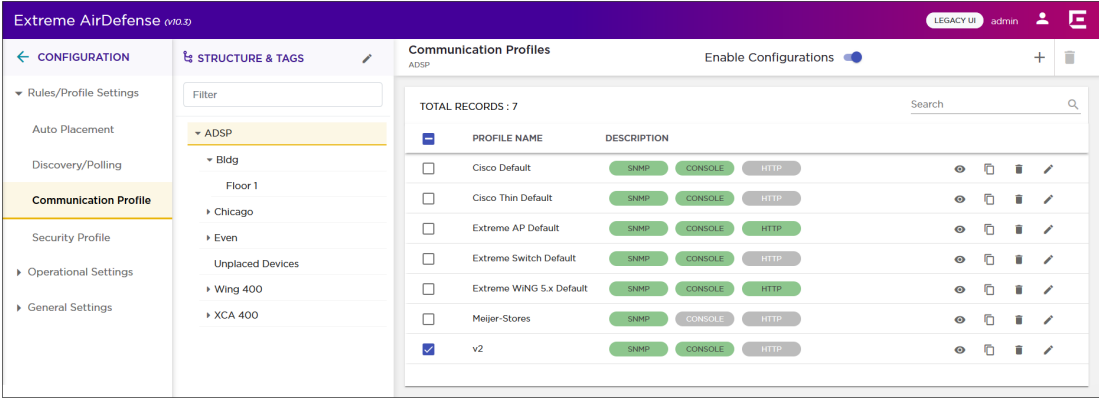


Figure 27: Communication Profiles

The screen displays the following information for each communication profile:

Field	Description
Profile Name	Displays the name of this communication profile.
Description	This field indicates which communication settings are active. An active setting is indicated in green and an inactive setting in grey.
Action	The icons in this field enable you to manage your communication profiles. You can edit your profile, create a new profile by creating a duplicate of the profile, and delete the profile. The following actions can be performed: • View Profile - Use the  icon to view the selected communication profile in a separate window. • Duplicate Profile - Use the  icon to create a duplicate of the selected profile. A new profile is created and the configuration dialog displays for the newly created communication profile. • Delete Profile - Use the  icon to delete the selected communication profile. • Edit Profile - Use the  to edit the communication profile. A configuration dialog displays where you can update the communication profile. For more information, see Edit the Communication Profile on page 181.

To apply one or more communication profiles to a particular scope (location), select the context from the **Structure & Tags** area. If permissions for this level are inherited from it's parent, change the  **Override**  **Inherit from: ADSP** control to **Override**. Select the check-box next to each selected communication profile to enable it for the selected scope (location). Click the **APPLY** button to apply the override for the selected context.


To add more communication profiles, use the  icon located to the top right of this screen. For more information see [Add a Communication Profile](#) on page 177.

Add a Communication Profile

A *Communication Profile* is a set of configurations that enables you to use the same settings for connecting to various devices in your Extreme AirDefense managed network.

To add a new communication profile:

1. From the **Communication Profile** screen, select the **+** icon.
The **Communication Profile** dialog displays.

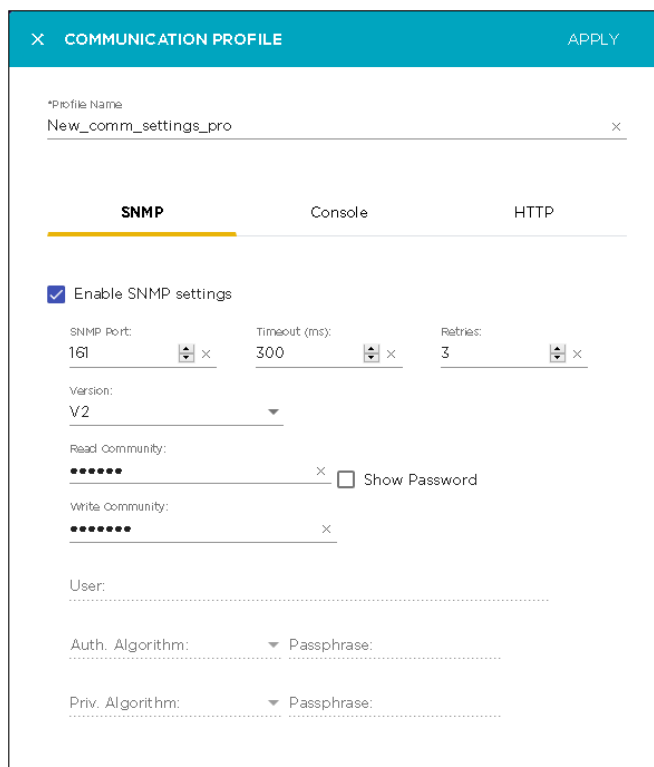

The screenshot shows the 'COMMUNICATION PROFILE' dialog box. At the top, there is a header bar with a close button (X) on the left and an 'APPLY' button on the right. Below the header, the 'Profile Name' field is populated with 'New_comm_settings_pro'. The dialog has three tabs: 'SNMP' (which is selected and highlighted with a yellow underline), 'Console', and 'HTTP'. Under the 'SNMP' tab, there is a checkbox labeled 'Enable SNMP settings' which is checked. Below this, there are three input fields: 'SNMP Port' with the value '161', 'Timeout (ms)' with the value '300', and 'Retries' with the value '3'. Each of these fields has a small 'x' icon to its right. Below these fields is a 'Version' dropdown menu set to 'V2'. Further down are 'Read Community' and 'Write Community' fields, both containing masked text (dots) and an 'x' icon. To the right of the 'Read Community' field is a 'Show Password' checkbox. At the bottom, there are 'User', 'Auth. Algorithm', 'Priv. Algorithm', and 'Passphrase' fields, all of which are currently empty.

By default, the **SNMP** configuration tab displays.

2. Provide a meaningful name for the communication profile. You should name your profiles such that they are easy to find among similar profiles.

3. Provide the following information for configuring SNMP settings:

COMMUNICATION PROFILE APPLY

*Profile Name
New_comm_settings_pro

SNMP Console HTTP

☒ Enable SNMP settings

SNMP Port: 161 Timeout (ms): 300 Retries: 3

Version: V2

Read Community: ☐ Show Password

Write Community:

User:

Auth. Algorithm: ▾ Passphrase:

Priv. Algorithm: ▾ Passphrase:

Field	Description
Enable SNMP Settings	Select this switch to enable SNMP settings.
SNMP Port	Use the spinner to set the SNMP port for the device. The default port number is 161.
Timeout (in ms)	Use the spinner to set the timeout value in milliseconds to connect to the device.
Retries	Use the spinner to set the maximum number of retries that can be made while attempting to connect to the device.
Version	Use the drop-down to select the SNMP version number to use. AirDefense supports SNMP version 1 (V1), version 2 (V2), and version 3 (V3).
Read Community	Enter the Read Community string. This string is used for SNMP authentication. You also have an option to display passwords while typing them.
Write Community	Enter the Write Community string. This string is used for the SNMP authentication.
User	Enter the name of the SNMP V3 user. This user is configured on the switch for SNMP V3 access. Note: This field is only available when SNMP version is V3.

Field	Description
Auth. Algorithm	Use the drop-down list to select the authentication algorithm. This selection must match what is set on the device. The available algorithms are <i>MD5</i> , <i>SHA</i> , and <i>None</i> . You must supply a pass-phrase which must also match what is set on the device. Note: This field is only available when SNMP version is V3.
Priv. Algorithm	Use the drop-down list to select the privacy algorithm. This selection must match what is set on the device. The available algorithms are <i>DES</i> , <i>3DES</i> , <i>AES128</i> , <i>AES192</i> , <i>AES256</i> , and <i>none</i> . You must also supply a pass-phrase which must also match what is set on the device. Note: This field is only available when SNMP version is V3.

4. Select the **Console** tab to configure the settings for console access.

Provide the following information:

Field	Description
Enable Console Settings	Select this switch to enable Console settings.
User	Use this field to enter the user name used to log in to the device.

Field	Description
Password	Use this field to enter the password for the above user name. Use the Show Password checkbox to view the password entered in this field.
Enable Password	Use this field to enter the <i>Enable</i> password. This password is required to enter the enable mode on the device.
Protocol	Use the drop-down list to select the protocol to use for console access. Select from <i>SSH</i> or <i>Telnet</i> .
Port	Use this field to enter the port number that is used for communications. By default port 22 is used.

5. Select the **HTTP** button to configure the settings for devices that support configuration through a web user interface using HTTP.

Provide the following information:

Field	Description
Enable HTTP Settings	Select this switch to enable HTTP settings.
User	Use this field to enter the user name used to log in to the device.
Password	Use this field to enter the password for the above user name.

Field	Description
Protocol	Use the drop-down list to select the protocol to use for HTTP access. Select from <i>HTTP</i> or <i>HTTPS</i> .
Port	Use this field to enter the port number that is used for communications. By default port 80 is used.

6. Select the **Apply** button located to the top right of this dialog to save the communication profile.
7. Select the small 'x' icon to the top left of the dialog to close it.

Edit the Communication Profile

Use the **Communication Profiles** screen to view a list of communication profiles configured for your Extreme AirDefense managed network. A Communication Profile is a set of configurations that enables you to use the same settings for connecting to various devices in your Extreme AirDefense managed network.

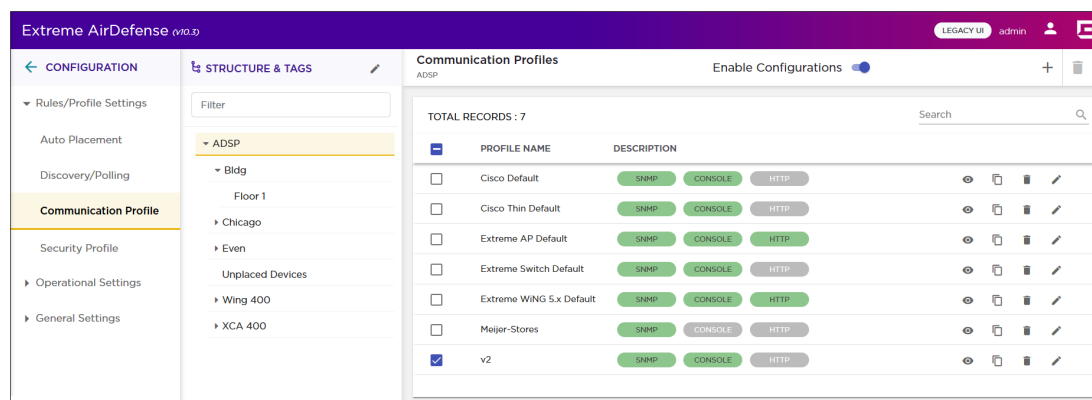


Figure 28: Communication Profiles

To edit a communication profile:

1. From the **Communication Profile** screen, select the communication profile to edit.
2. Select the  icon to edit the selected communication profile.

The **Communication Profile** dialog displays.

3. Modify the configuration settings for the different tabs in this dialog.
For more information on the fields in this dialog, see [Add a Communication Profile](#) on page 177
4. Select the **Apply** button located to the top right of this dialog to save the communication profile.
5. Select the small 'x' icon to the top left of the dialog to close it.

Delete Communication Profiles


To delete a communication profile:

1. Select the  icon for the profile that you wish to delete.
The **Delete Rules** dialog displays.

2. Review the rule to delete.
3. Select **ACCEPT** button to delete the selected communication profile.
4. To delete multiple communication profiles, use the [CTRL]+Click key combination to select the profiles that you want to delete.

5. Select the  icon located to the top right of the screen to delete the selected communication profiles.

The **Delete Rule(s)** dialog displays.

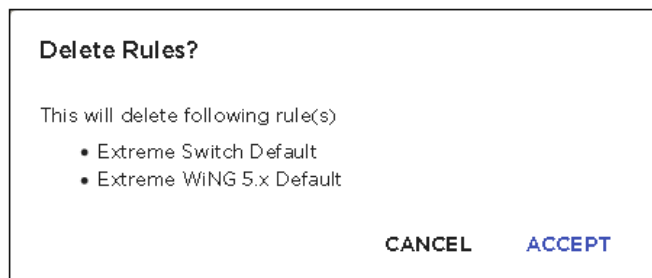


6. Review the communication profiles to delete.
7. Select **ACCEPT** button to delete the selected communication profile.

Security Profile

Security profiles are used to define the security configurations of the sanctioned wireless clients on your Extreme AirDefense managed wireless LANs. When a Security Profile is applied to your Extreme AirDefense system, and if the security thresholds for that profile are exceeded, a security alarm is generated. This allows you to monitor network security issues and address them in a timely manner. If there are no Security Profiles applied to your system, no security alarms are generated.

Security profiles are configured from the **Configuration > Security Profile** menu path. The **Security Profiles** screen displays. Existing security profiles are listed in the right pane of this window.

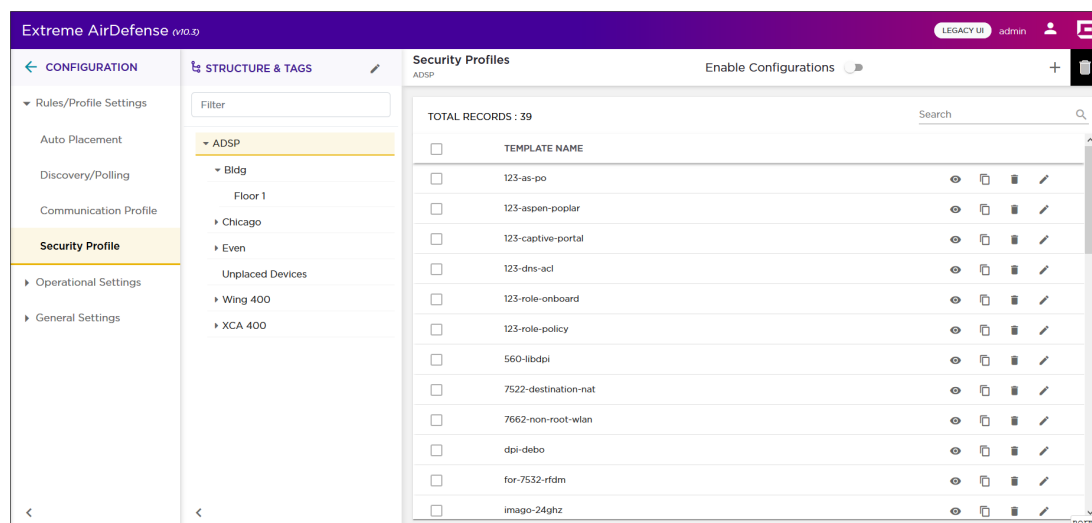

Overriding Configuration Settings

The **Enable Configuration** switch is only available at the top most node of the **Structure & Tags** pane. Configurations can only be applied when this switch is set to **ON**. The top

most node is always named *ADSP* and you must use this switch to apply the selected configuration through out the Extreme AirDefense system.

By default, any level in the **Structure & Tags** pane always inherits configuration from the level above it unless explicitly overridden.

Since Extreme AirDefense manages its devices using a hierarchy that is configured using the **Structure & Tags** pane, all the nodes under the top *ADSP* node inherit the configurations set at that node. However, you can override the inherited configuration at any level in the hierarchy.

To override the inherited settings, in the **Structure & Tags** pane, select the node where you want to override the inherited configuration. Then from the ☐ Override ☒ Inherit from: ADSP control, select the **Override** option. Note that the **Inherited from :** control always displays the name of the level from which the configuration settings are inherited from. Use this information to orient your self on how the configurations are inherited.

Change the configuration for the selected level as required and then use the **APPLY** button to implement the modified configuration settings. These settings will now be inherited by all levels below the selected level unless a sub-level has been explicitly overridden.

Automatically-created Security Profiles on XIQ Import

Security profiles are automatically created when importing using XIQ/XIQC import. Security profile information is based on each discovered SSID.

The following table shows the default imported Security Profile settings. Settings not listed in this table are not set.

Table 10: Default Imported Security Profile Settings

Setting	Value
Profile Name	[The discovered SSID name]
SSID	[The discovered SSID]
Communication to Wireless Clients	Allow Communication
Allow Unsanctioned Wireless Clients	Disabled
Allow SSID Broadcast in Beacon	Enabled
Monitor Privacy Settings	Enabled
Extended 802.11 Authentication	WPA2
802.11 Encryption	AES(CCMP)
Advanced Key Generation	PSK (pre-shared key)
Base 802.11 Authentication	Open

View Security Profile

Use the **Security Profile** screen to view a list of these profiles configured for you Extreme AirDefense managed system. A security profile is set of configurations that control how your alarms are generated.

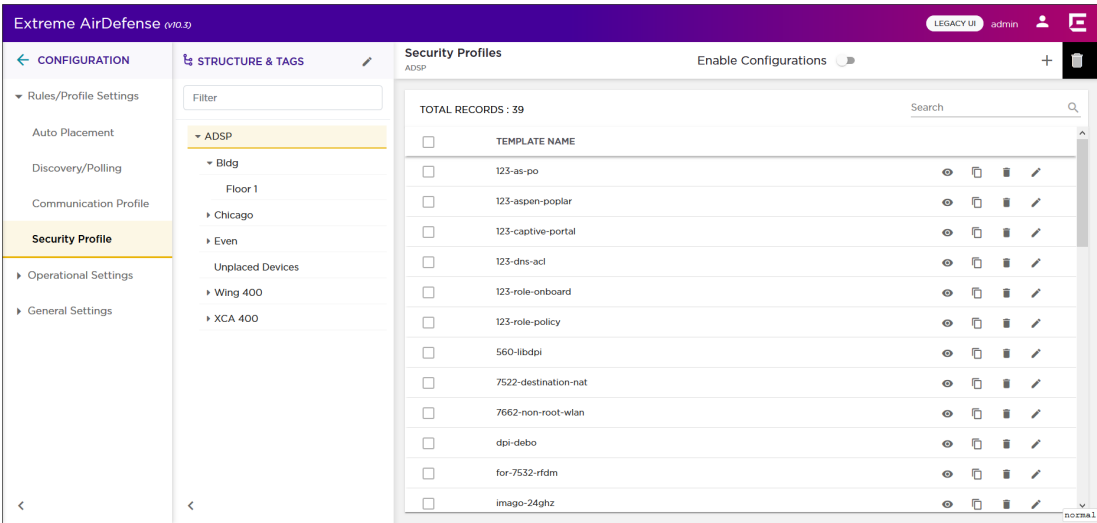


Figure 29: Security Profile Screen

The screen displays the following information:

Field	Description
Template Name	The name of the security profile.
Action	The actions that can be performed on the security profile. The icons in this field enable you to manage your security profile. You can edit your profile, create a new profile by creating a duplicate of the profile, or delete the profile. The following actions can be performed: • View Profile - To view a security profile, use the  icon for the profile. The details for this profile is displayed in a separate dialog. • Duplicate Profile - Use the  icon to create a duplicate of the selected profile. A duplicate of this profile is created and the configuration dialog displays the newly created security profile. Customize the duplicate profile to meet your requirements. • Delete Profile - Use the  icon to delete the selected security profile. • Edit Profile - Use the  to edit the security profile. A configuration dialog displays where you can make changes to the selected security profile. For more information, see Edit a Security Profile on page 193.


To apply one or more security profiles to a particular scope (location), select the context from the **Structure & Tags** area. If permissions for this level are inherited from its

parent, change the ☐ Override ☒ Inherit from: ADSP control to **Override**. Select the check-box next to each selected security profile to enable it for the selected scope (location). Click the **APPLY** button to apply the override for the selected context.

To add more security profiles, use the **+** icon located to the top right of this screen. For more information see [Add a Security Profile](#) on page 188.

View a Security Profile

Use the  icon for a security profile to view its details. A configuration dialog displays all the details about this security profile.

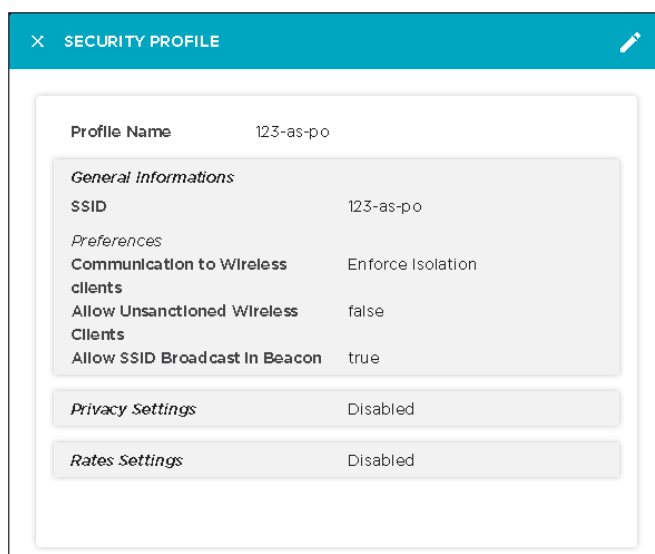

The screenshot shows a configuration dialog titled "SECURITY PROFILE" with a close button (X) and an edit icon (pencil). The profile name is "123-as-po". The settings are organized into sections: General Informations, Preferences, Privacy Settings, and Rates Settings.

Profile Name	123-as-po
General Informations	
SSID	123-as-po
Preferences	
Communication to Wireless clients	Enforce Isolation
Allow Unsanctioned Wireless Clients	false
Allow SSID Broadcast In Beacon	true
Privacy Settings	Disabled
Rates Settings	Disabled

The following information is displayed for each security profile.

Field	Description
Profile Name	The name of this security profile.
General Information	The General Information field displays the following information for this security profile. SSID The SSID that is covered by this security profile. Communication to Wireless clients The permissions set for enabling wireless clients to communicate with each other. Displays <i>Enforce Isolation</i> if the wireless clients are not allowed to communicate with each other. Allow Unsanctioned Wireless Clients The permission to allow unsanctioned Wireless Clients. Displays <i>false</i> if unsanctioned wireless clients are not allowed. Allow SSID Broadcast in Beacon The status of allowing SSID to be broadcast in the beacon. Displays <i>false</i> if SSID cannot be broadcast in the beacon.
Privacy Settings	The privacy setting configured for this security profile. When privacy settings are configured, this field displays <i>Enabled</i>. The following additional configuration information is also displayed. Base 802.11 Authentication The Base 802.11 authentication in use with this security profile. Displays <i>Open</i> or <i>Shared</i>. Extended 802.11 Authentication The Extended 802.11 authentication used with this security profile. Displays <i>WPA</i>, <i>WPA2</i>, or <i>Symbol KeyGuard</i>. Advanced Key Generation The key generation algorithm used with this security profile. 802.11 Encryption The 802.11 encryption system used with this security profile. Other Encryption Other encryption schemes used with this security profile.
Rate Settings	The configured rate settings used with this security profile. Selects the transmit and receive data rates for the BSSs to use.

Use the  icon located to the top right of this screen to edit the settings for the current security profile. For more information, see [Edit a Security Profile](#) on page 193

Add a Security Profile

A Security Profile is set of configurations that control how your alarms are generated. Use the **Security Profile** screen to view a list of these profiles configured for your Extreme AirDefense managed system.

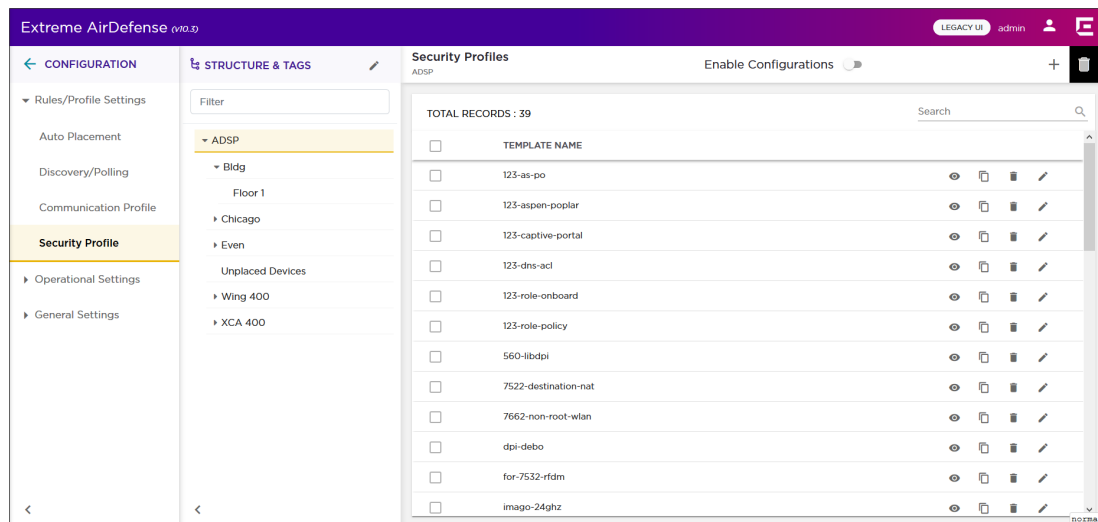


Figure 30: Security Profile Screen

A complete security profile consists of the following configurations:

- General Configuration - This set of parameters configure settings related to wireless clients.
- Privacy Configuration - This set of parameters enable you to monitor privacy settings.
- Rate Settings - This set of parameters select the specific rates that you need to monitor.

The **Enable Configuration** switch must be set to ON for security profiles to be applied throughout your Extreme AirDefense monitored network. This setting is only available at the topmost level of your Extreme AirDefense network tree.

To add a new security profile:

1. From the **Security Profile** screen, select the  icon. This icon is located to the top right of this screen.

The **Security Profile** screen displays.

2. Select the  icon next to the **General Settings** field if the field is not expanded.

In the **SSID** field, provide the SSID that the security profile applies to. This must be a valid SSID used in your Extreme AirDefense system.

Configure the following preferences for this security profile:

Field	Description
Communication to Wireless Clients	Select one of the following options: Enforce Isolation Select this option to isolate wireless clients within your network. Allow Communication Select this option to enable communications between wireless clients in your network.
Allow unsanctioned Wireless clients	Select this switch to allow or prevent unsanctioned wireless clients access to your system.
Allow SSID broadcast in Beacons	Select this switch to allow the BSS SSID to be broadcast in its beacon. SSIDs are not passwords. Many BSSs allow their SSIDs to broadcast by default.

3. Expand the **Privacy Settings** field using the  icon if the field is not expanded.
This field configures the settings related to transmission privacy.
4. Select the **Monitor Privacy Settings** option to enable this feature.
Provide the following additional configuration information:

Field	Description
Extended 802.11 Authentication	WPA Select to activate Wi-Fi Protected Access, which uses improved data encryption through the temporal key integrity protocol (TKIP). TKIP scrambles the keys using a hashing algorithm and, by adding an integrity-checking feature, ensures that the keys haven't been tampered with. WPA2 Short for Wi-Fi Protected Access 2, this checkbox enables the follow on security method to WPA for wireless networks that provide stronger data protection and network access control. It provides enterprise and consumer Wi-Fi users with a high level of assurance that only authorized users can access their wireless networks. Based on the IEEE 802.11i standard, WPA2 provides government grade security by implementing the National Institute of Standards and Technology (NIST) FIPS 140-2 compliant AES encryption algorithm and 802.1x-based authentication. Symbol KeyGuard When this checkbox is selected, it activates Symbol KeyGuard authentication protocols, which is provided by Symbol Technologies.
802.11 Encryption	AES (CCMP) When selected, causes the BSS to advertise support for Advanced Encryption Standard (AES-CCMP). Unencrypted Allowed Select this checkbox to allow unencrypted wireless traffic. TKIP When selected, this enables the BSS to advertise support for Temporal Key Integrity Protocol (TKIP).

Field	Description
Advanced Key Generation	802.1x EAP-FAST When selected, it keys 802.1X EAP Flexible Authentication via Secure Tunneling. 802.1x EAP-TLS When selected, it keys EAP Transport Level Security. 802.1x EAP-TTLS When selected, it keys EAP Tunneled Transport Layer Security. 802.1x EAP-GTC When selected, it keys EAP Generic Token Card. 802.1x RSA/PKA When selected, it keys EAP RSA Public Key Authentication Protocol. 802.1x RSA/SID When selected, it keys EAP RSA SecurID. 802.1x PEAP When selected, it keys any 802.1X Protected Extensible Authentication Protocol (PEAP). 802.1x LEAP When selected, it keys EAP Lightweight Extensible Authentication Protocol. 802.1x Other EAP Keys any 802.1x EAP authentication/key distribution mechanism other than the types previously mentioned. PSK (preshared key) When selected, it activates the Pre-shared Key authentication.


Field	Description
Base 802.11 Authentication	Open When this checkbox is selected, open system authentication does not actually provide authentication; it only performs identity verification through the exchange of two messages between the initiator (Wireless Client) and the receiver (wireless controller). Shared When selected, shared key authentication provides authentication by verifying that an initiator has knowledge of a shared secret. Under the 802.11 standard, it is assumed that the shared secret is sent to the wireless controller over a secure channel that is independent of 802.11. In practice, the shared key authentication secret is manually distributed and typed.
Other Encryption	AirFortress When selected enables AP usage of Layer 3 AirFortress encryption. Other Ethertypes allowed When selected, enables AP usage of other Layer 3 encryption mechanism which is not specified within this list. Cranite When selected, enables AP usage of Layer 3 Cranite encryption. IP-Sec When selected, enables AP usage of Layer 3 IP security protocol as encryption.

5. Expand the **Rate Settings** field using the  icon if the field is not expanded.

This field configures the transmit and receive data rates for BSSs to use.

6. Select the **Monitor Rate Settings** field to enable it.

The field expands to display a set of default rates.

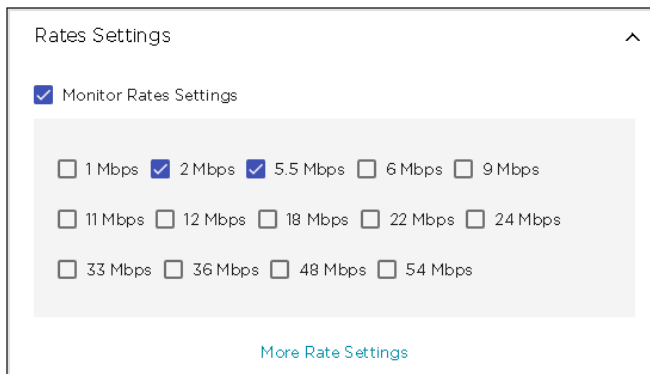

Rates Settings

☒ Monitor Rates Settings

☐ 1 Mbps
 ☒ 2 Mbps
 ☒ 5.5 Mbps
 ☐ 6 Mbps
 ☐ 9 Mbps

☐ 11 Mbps
 ☐ 12 Mbps
 ☐ 18 Mbps
 ☐ 22 Mbps
 ☐ 24 Mbps

☐ 33 Mbps
 ☐ 36 Mbps
 ☐ 48 Mbps
 ☐ 54 Mbps

[More Rate Settings](#)

From the list of rates, select the ones that you want to apply.

Select the **More Rate Settings** button to expand this list to include more rates that you can apply.

More Rate Setting

1SS 2SS 3SS 4SS

> 20Mhz,1

☐ 6.5 - 7.2 Mbps ☒ 13 - 21.7 Mbps ☐ 26 - 43.3 Mbps

☐ 52 - 72.2 Mbps ☐ 78 - 86 Mbps

> 40Mhz,1

☐ 13.5-15 Mbps ☐ 27 - 45 Mbps ☒ 54 - 90 Mbps

☐ 108 - 150 Mbps ☐ 162 - 200 Mbps

> 80Mhz,1

☐ 29-32 Mbps ☐ 58 - 97 Mbps ☐ 117 - 195 Mbps

☐ 234 - 325 Mbps ☐ 351 - 433 Mbps

Select the rates that you want to apply to this security profile.

7. Select the **APPLY** button located to the top right of this dialog to save the security profile.

The new security profile is added to the list of active profiles for this Extreme AirDefense monitored networks.

8. Select the small **X** icon located to the top left of the dialog to close it. Your changes will not be saved when you use this method to close the dialog.

Edit a Security Profile

Use the **Security Profile** screen to view a list of these profiles configured for you Extreme AirDefense managed system. A Security Profile is set of configurations that control how your alarms are generated.

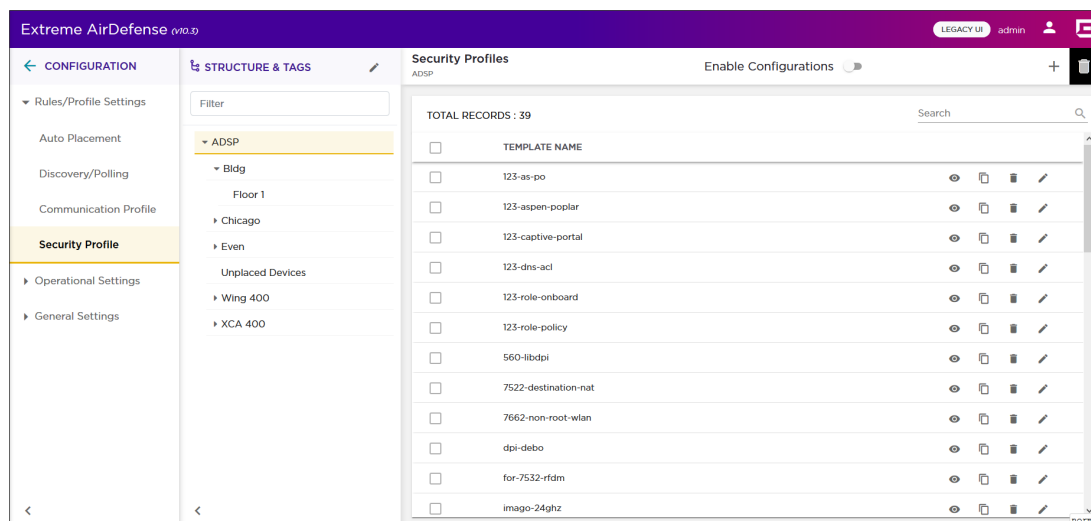


Figure 31: Security Profile Screen

A complete security profile consists of the following configurations:

- General Configuration - This set of parameters configure settings related to wireless clients.
- Privacy Configuration - This set of parameters configure enable you to monitor privacy settings.
- Rate Settings - This set of parameters configure the specific rates that you need to monitor.

To edit an existing security profile:

1. From the **Security Profile** screen, select the  icon for the security profile that you wish to edit.
The **Security Security Profile** dialog displays.

2. Modify the required fields.

For more information on the fields of this dialog, see [Add a Security Profile](#) on page 188

3. Select the **APPLY** button located to the top right of this dialog to save the security profile.
4. Select the small 'x' icon to the top left of the dialog to close it.

Delete a Security Profile


To delete a security profile:

1. Select the  icon for the profile that you wish to delete.
The **Delete Rule** dialog displays.



2. Review the rule to delete.
3. Select **ACCEPT** button to delete the selected rule.
4. To delete multiple security profiles, use the [CTRL]+Click key combination to select the profiles that you want to delete.
5. Select the  located to the top right of the screen to delete the selected security profiles.

The **Delete Rule(s)** dialog displays.

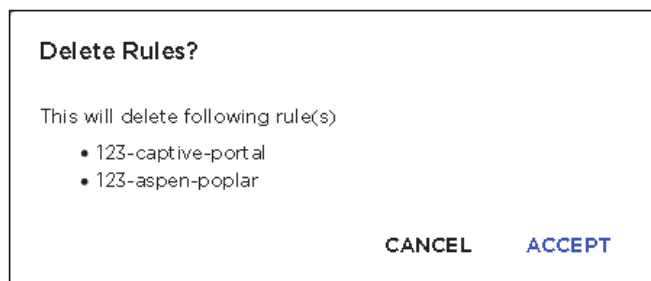

6. Review the rules to delete.
7. Select **ACCEPT** button to delete the selected rules.

Alarm Action Manager

Alarm Action Manager enables you to automatically respond to alarms in your Extreme AirDefense managed network with predetermined actions configured using alarm rules. Automating your response to the alarms enables you to focus on other critical administrative tasks.

An Alarm Action Manager rule set consists of lists of Alarms, Filters, and Actions. The list of Alarms contains those alarms for which you need to take specific action. The list of Filters contain a set of conditions that filters for a specific sub-set of alarms from those raised. The list of Actions contains the actions that will be automatically taken for these alarms.

An Alarm Action Manager rule can contain one or more of Alarms, Filters, and Actions. You may define as many Alarm Action Manager rules as required.

Alarm Action Manager rules are configured from the **Alarm Action Manager** screen. This screen is launched by selecting the **Configuration > Operational Settings > Alarm Action Manager** menu path.

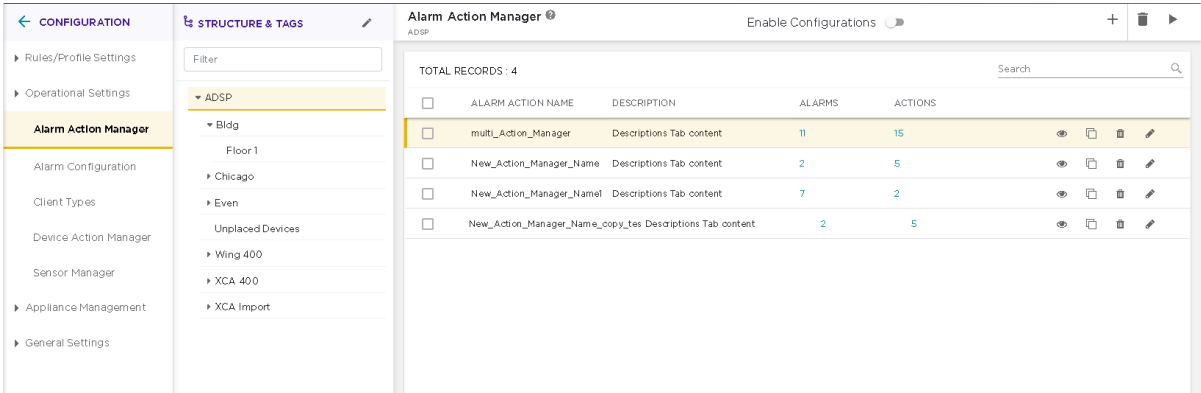


Figure 32: Alarm Action Manager Rule Set Screen

View Alarm Action Manager Rule Set

Use the **Alarm Action Manager** screen to view a list of these rules sets configured for your Extreme AirDefense managed system. An Alarm Action Manager Rule Set is a set of configurations that perform certain actions depending on the alarms that are raised in your network.

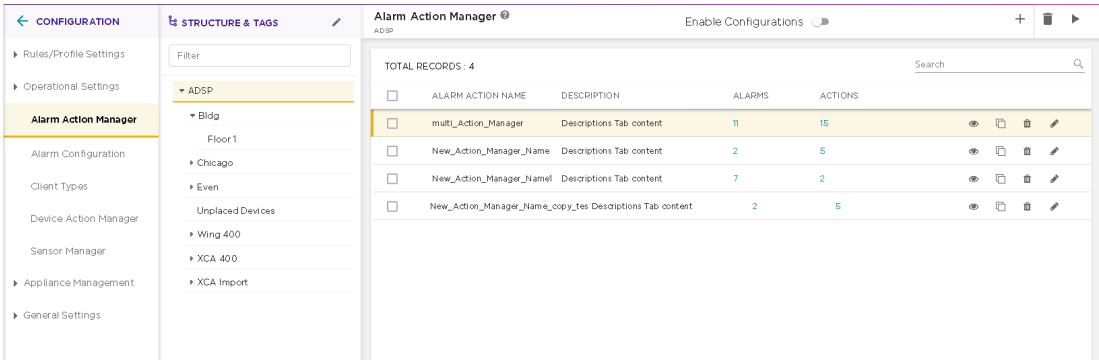


Figure 33: Alarm Action Manager Screen

The screen displays the following information:

Field	Description
Alarm Action Name	The name of the Alarm Action Manager rule set.
Description	A description about the Alarm Action Manager rule set and its actions.
Alarms	The number of alarms included in the Alarm Action Manager rule set.

Field	Description
Actions	The number of actions to be performed when the conditions specified within this rule set is met.
Actions	The actions that can be performed on the Alarm Action Manager rule set. The icons in this field enable you to manage your Alarm Action Manager rule set . You can edit the rule set, create a new one by creating a duplicate of an existing rule set, or delete the rule set. The following actions can be performed: • View - To view an Alarm Action Manager rule set, use the  icon for the rule set. The details for this rule set is displayed in a separate dialog. • Duplicate - Use the  icon to create a duplicate of the selected rule set. A duplicate of this rule set is created and the configuration dialog displays the newly created Alarm Action Manager rule set. Customize the duplicate rule set further to meet your requirements. • Delete - Use the  icon to delete the selected Alarm Action Manager rule set. • Edit - Use the  to edit the Alarm Action Manager rule set. A configuration dialog displays where you can make changes to the selected Alarm Action Manager rule set. For more information, see Edit Alarm Action Manager Rule Set on page 216.

To apply one or more Alarm Action Manager rule sets to a particular scope (location), select the context from the **Structure & Tags** area. If the permissions for this level are inherited from its parent, change the ☐ Override ☒ Inherit from: ADSP control to **Override**. Select the check-box next to each selected Alarm Action Manager rule set to enable it for the selected context.

To add more Alarm Action Manager rule sets, use the  icon located to the top right of this screen. For more information, see [Add Alarm Action Manager Rule Set](#) on page 200.

View Alarm Action Manager Rule Set

Use the  icon for an Alarm Action Manager rule set to view its details. A configuration dialog displays all the details about this Alarm Action Manager rule set.

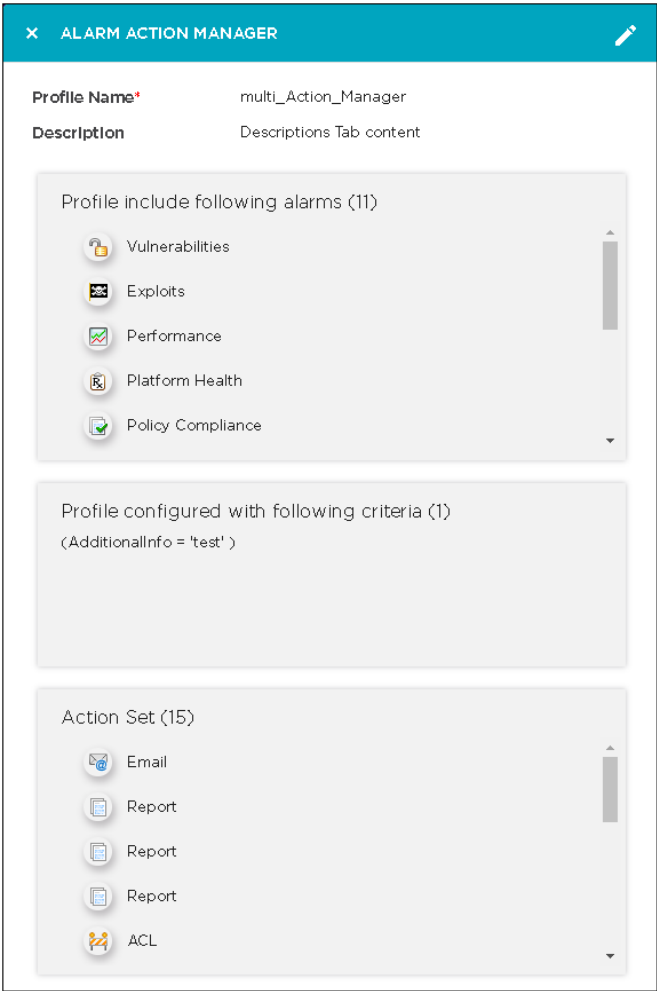


Figure 34: Alarm Action Manager Rule Set View Dialog

The following information is displayed for each Alarm Action Manager rule set.

Field	Description
Profile Name	The name of this Alarm Action Manager rule set.
Description	A description about the Alarm Action Manager rule set and its actions.
Profile include following alarms	This field lists the individual alarms included within this Alarm Action Manager rule set. The field name also lists the total number of alarms that are included within this rule set.
Profile configured with the following criteria	This field lists the filtering criteria used by this Alarm Action Manager rule set. The field name also lists the total number of filtering criteria used within this rule set.
Action Set	This field lists the actions that need to be performed by this rule set. The field name also lists the total number of individual actions that are configured for this Alarm Action Manager rule set.

You can directly edit the rule set from within this dialog. Click the  icon located to the top right of the dialog to edit it.

Add Alarm Action Manager Rule Set

An Alarm Action Manager profile is a set of rules that govern the automatic actions that can be performed when certain alarms are raised. These actions can be performed based on which alarms are monitored and other filtering criteria.

New Alarm Action Manager rule sets are created from the **Alarm Action Manager Rule Set Screen**. Use the  icon to add a new Alarm Action Manager Rule Set. The same screen is also used to edit an existing rule set of the same type.

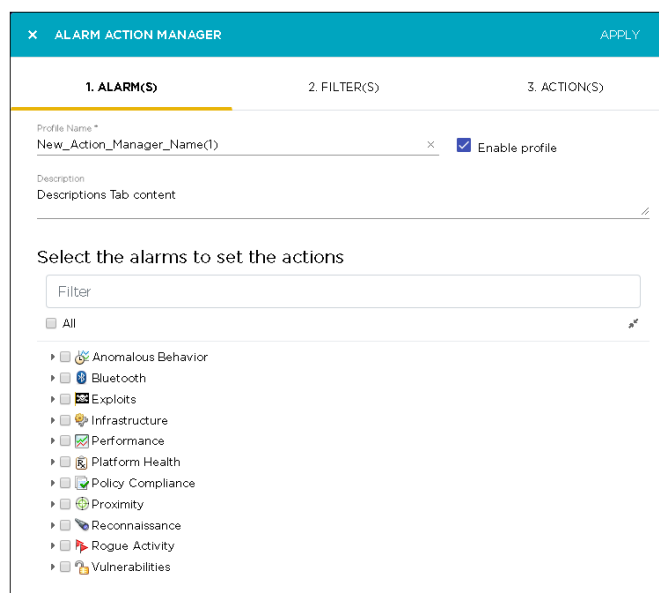


Figure 35: Add an Alarm Action Manager Rule Set

To create a new Alarm Action Manager rule set, you need to do the following:

1. Assign a name to your Alarm Action Manager rule set. Use the **Profile Name** field that is located in the **Alarms** tab of this screen.
2. Select the individual alarms or group of alarms from the **Alarms** tab.
3. Create at least one filter for the rule set. You can add up to twenty five (25) filters for every Alarm Action Manager rule set. Filtering enables you to remove data that does not interest you.
4. Create at least one action that needs to be performed for this Alarm Action Manager rule set.

Select Alarms

The **Alarms** tab of the **Alarm Action Manager** dialog lists all alarms that are raised by the AirDefense system. These alarms are classified under eleven (11) major categories with many sub-categories for each of them. The major categories of alarms are:

- Anomalous Behavior - This is a collection of all alarms that indicate behavior that is different from the normal behavior of a device within the AirDefense system.
- Bluetooth - This is a collection of all alarms that are related to Bluetooth and BLE devices.
- Exploits - This is a collection of all alarms that indicate attempted exploits on your AirDefense system.
- Infrastructure - This is a collection of all alarms that indicate issues with the infrastructure devices of the AirDefense system.
- Performance - This is a collection of all alarms that indicate performance issues with your AirDefense system.
- Platform Health - This is a collection of all alarms that indicate the current issues found within your AirDefense system.
- Policy Compliance - This is a collection of all alarms that indicate issues with compliance with various policies configured within the AirDefense system.
- Proximity - This is a collection of all alarms that are raised for various proximity events within your AirDefense system.
- Reconnaissance - This is a collection of all alarms that indicate presence of various tools that enable reconnaissance of your AirDefense system.
- Rogue Activity - This is a collection of all alarms that indicate rogue activity within your AirDefense system.
- Vulnerabilities - This is a collection of all alarms that indicate all vulnerabilities found during routine scanning of your AirDefense system.

Use the check-box next to each alarm or alarm group to select that item. When you select an alarm group, all its sub-groups and their alarms are also selected.

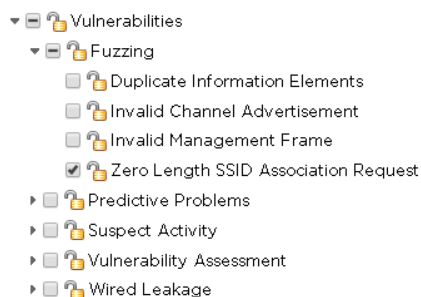


Figure 36: Selected Alarm

When an alarm group is selected, all its sub-groups and their alarms are also selected.

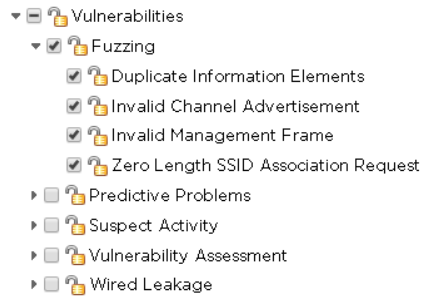


Figure 37: Selected Alarm Group

Configuring Filters

Configure your filters by using logical constructs of AND, OR, and NOT that are available for use when creating and adding multiple filter criteria to your rule. These logical constructs are explained below.

- AND - All the conditions defined for this rule must be met for the actions to be triggered.
- OR - One or more of the conditions defined for this rule set must be met for the actions to be triggered.
- NOT (AND) - This is the opposite condition of the AND construct. None of the selected conditions should meet for the action to be triggered.
- NOT (OR) - This is the opposite condition of the OR construct. One or more of the specified filter conditions must not be met for the action to be triggered.

The available filters are:

- AdditionalInfo
- Adhoc
- Associated
- AssociatedBSSClassification
- AssociatedBSSIP
- AssociatedBSSMAC
- AssociatedBSSName
- AssociatedBSSVendorPrefix
- Channel
- ConnectedToWired
- Criticality
- Device802_1XName
- DeviceAuditTime
- DeviceAuthentication
- DeviceCapabilities
- DeviceClassification
- DeviceClientType
- DeviceDHCP

- DeviceDNS
- DeviceEncryption
- DeviceFirmware
- DeviceFirstPolled
- DeviceFirstSeen
- DeviceIP
- DeviceLastAdoption
- DeviceLastDataPoll
- DeviceLastPolled
- DeviceLastSeen
- DeviceLastStatusPoll
- DeviceMAC
- DeviceManufacturer
- DeviceModel
- DeviceName
- DevicePolledID
- DevicePolledSSID
- DeviceProtocol
- DeviceSSID
- DeviceSensedID
- DeviceSensedSSID
- DeviceSerial
- DeviceType
- DeviceVendorPrefix
- SensorIP
- SensorMAC
- SensorName
- SignalStrength
- WatchList
- WiFiDirect

**Important**

In the Alarm Action Manager, the order of filters within the rule defines how the filters are applied. For example, if you want create a rule to sanction only BSSs, the first filter should be defined as *DeviceType=Include BSS* before defining other rules such as *DeviceManufacturer* or *DeviceSSID*. Setting the *DeviceType=Include BSS* as the first filter will cause all wireless client devices to be ignored.

Selecting Filters

Select a filter to add to this Alarm Action Manager rule set by clicking the **Filters** tab. By default the **Basic** option is selected.

Click the **+** icon within the **Filters** tab to add a new filter rule to this rule set.

Figure 38: New Filter


Use the **AND**, **OR**, **NOT (AND)**, and **NOT (OR)** logical constructs to create your rule. You can add up to twenty five (25) filter rules to this Alarm Action Manager rule set.

The following logical constructs are available for use:

- **AND** - All the conditions defined for this rule must be met for the actions to be triggered.
- **OR** - One or more of the conditions defined for this rule set must be met for the actions to be triggered.
- **NOT (AND)** - This is the opposite condition of the AND construct. None of the selected conditions should meet for the action to be triggered.
- **NOT (OR)** - This is the opposite condition of the OR construct. One or more of the specified filter conditions must not be met for the action to be triggered.

Use the **Filter** drop-down list to select the rule to apply.


Next, use the **Comparison Criteria** drop-down list to select the comparison operator for this filter rule. The operator indicates the relationship between the filter and a value that you specify.

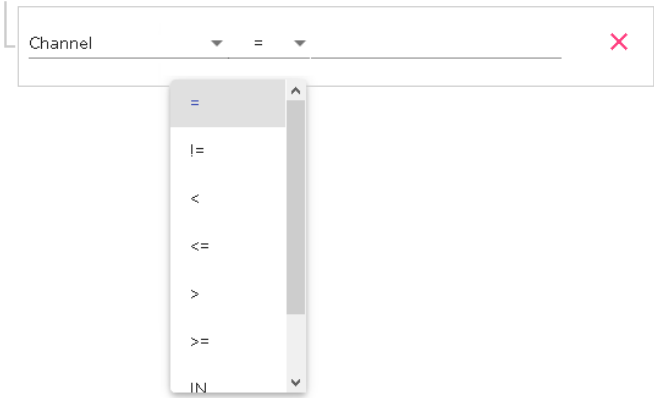

The selection in this list will vary with the filter selected in the **Filter** field. Some of the most common comparison operators are:

=	Is equal to
!=	Is not equal to
<	Is less than
<=	Is less than or equal to
MAC Range	Range to pick up MAC address.
>	Is greater than
>=	Is greater than or equal to
LIKE	Is similar to, matches some portion (Used for a partial match)
ILIKE	Case insensitive partial match
IN	Condition exists within the filter value (usually used when the filter combines two or more variables which must be compared in some way to create a trigger)

For each filter, there will be one or more values that you compare for taking action. The kind and number of value or values will depend on the filter that you have selected. Enter a value that is appropriate for the filter criteria. Any errors that you make will be flagged immediately.

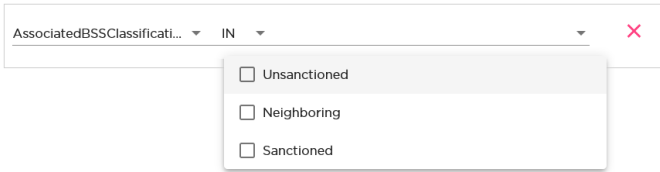

To remove a rule that you have configured, select the red **X** icon located to the right of each rule. When you click this icon, the rule is immediately deleted from this rule set.

Add Actions

Actions are configured from the **Actions** tab. You can specify one or more (up to five (5)) actions that can be performed when the conditions set in the **Filters** tab are met.

Actions for the alarms are classified into the following groups:

- **Notifications** - This group of actions enable you to automatically generate emails and reports for the selected alarms when the conditions specified in the **Filters** tab are met.
- **WIPS Mitigation** - This group of actions enable you to automatically take some specific WIPS mitigation actions and also generate SNMP traps. These actions are performed for the selected alarms when the conditions specified in the **Filters** tab are met.
- **Information Gathering** - This group of actions enable you to automatically do information gathering actions and generate system logs for the selected alarms when the conditions specified in the **Filters** tab are met.

Notification Actions


Notifications actions enables you to create and send automatic emails and also generate reports for the alarms that are raised within your AirDefense system.

The **Email** tab enables you to configure the parameters for creating and sending emails for your alarms.

The **Reports** tab enables you to configure the parameters for creating and sending reports for your alarms.

Email Configuration

The **Email** tab enables you to configure the parameters for sending emails for your alarms.

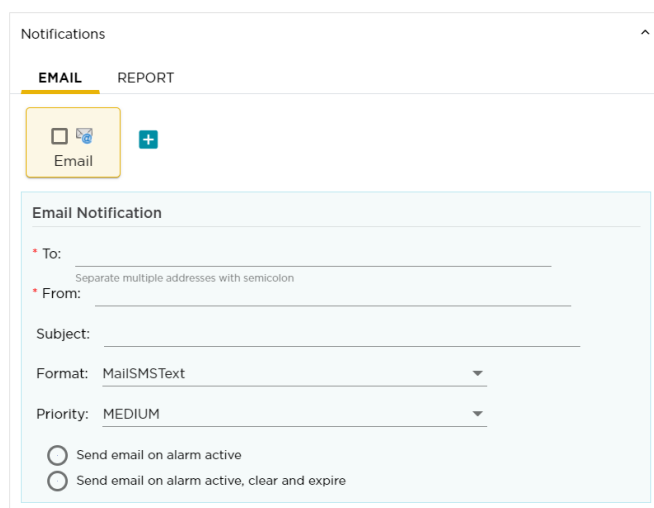

The screenshot shows the 'Notifications' configuration window with the 'EMAIL' tab selected. Below the tab, there is a yellow box with an 'Email' icon and a green '+' icon. The main configuration area is titled 'Email Notification' and contains the following fields:

- To:** (Text input field)
- From:** (Text input field)
- Subject:** (Text input field)
- Format:** (Dropdown menu, currently set to 'MailSMTPText')
- Priority:** (Dropdown menu, currently set to 'MEDIUM')
- Send email on alarm active** (Radio button)
- Send email on alarm active, clear and expire** (Radio button)

Figure 39: E-Mail Configuration

By default, an empty template is made available for immediate use. Use this empty template to create your first email. To add additional emails, use the green + icon to create a new blank template. When you add a new email, a new block is created for it. You can hover on each of these blocks to get a synopsis of the configuration for that block.

For each email, provide the following information:

Field	Description
To	The email addresses of the recipients for this email. Add multiple email addresses separated with a semi-colon (;) sign.
From	The email address that is used to send this email. This is the address that will receive any reply mails received from the recipients.
Subject	The subject for this email.
Format	Use the drop-down list to select the appropriate format for the email being sent.
Priority	Use the drop-down list to select the priority of this mail.
Send email on alarm active	Select this option to send email for active alarms only. You can use this or the Send email on alarm active, clear, and expire option.
Send email on alarm active, clear, and expire	Select this option to send email every time an alarm is active, cleared, or expires. You can use this or the Send email on alarm active option.

Report Action

The **Reports** tab enables you to configure the parameters for creating and sending reports for your alarms.

The screenshot shows the 'Notifications' section with the 'REPORT' tab selected. A 'Report' button with a plus icon is visible. Below it, the 'Report' configuration panel is shown with the following settings:

- Report Type:** Wifi Direct Network Activity
- Scope Increase factor:** 1
- Run immediate for previous:** 1 Day(s) (selected)
- Run on alarm clear / expire:** (unselected)
- Duration of the alarm:** (unselected)
- For Previous:** 1 Hour(s) (selected)
- Publish:** SHARED
- report named:** (empty field)
- E-mail:** HTML (selected)
- report to:** (empty field)

A note at the bottom states: 'Separate multiple addresses with semicolon'.

Figure 40: Report Configuration

By default, an empty template is made available for immediate use. Use this empty template to create your first report. To add additional reports, use the green + icon to create a new blank template. When you add a new report, a new block is created for

it. You can hover on each of these blocks to get a synopsis of the configuration for that block.

For each report, provide the following information:

Field	Description
Report Type	Use the drop-down to select from one of the pre-created reports.
Scope Increase Factor	Use the drop-down to select the scope of your report. The value in this field specifies the number of levels to expand the scope of the report. A value of 1 means only use the floor level. A value of 2 indicates that the floor and its parent level is to be included in this report's scope.
Run immediate for previous	Runs the report immediately for the period selected in the two drop-down lists located within this field.
Run on alarm clear / expire	Runs the report when the alarm is either cleared manually or expires automatically. To select a duration of time for this report, use the two drop -down list located within this field.
Publish	Indicates how this report is published. A report can be one of <i>SHARED</i> or <i>PRIVATE</i> . A shared report can be viewed by other users of the AirDefense system. A private report can only be viewed by you. When creating a report, provide a distinct name for it.
E-mail	Indicates if the report is emailed to specific users. Provide a list of recipients for this email, separated by semi-colon (;) in the field provided for the purpose.

WIPS Mitigation

WIPS Mitigation actions are a set of specific actions that you can take at the device level to mitigate issues with wireless intrusion from devices that do not belong to your AirDefense system. You can also configure and send SNMP trap messages to multiple SNMP services within your network.

Use the **General** tab of the **WIPS Mitigation** control to configure the various settings.

Similarly, use the **SNMP Trap** tab of this screen to configure SNMP servers to send SNMP traps to the remote SNMP servers.

General Actions

The **General** tab of the **WIPS Mitigation** field provides you with the following WIPS mitigation tools.

- **ACL** - When devices meet the criteria specified in the **Alarms** and the **Filters** tabs, these devices are automatically added to a switch's access control list.
- **Port Suppression** - This action is used to suppress communication between unauthorized devices and switches on your network.

- **Termination** - This action is used to terminate devices that generate specific alarms as selected in the **Filters** tab. An option to also terminate the device that a rogue device is paired to is also available.

ACL

The **ACL** action enables the Access Control List on switches that meet the conditions specified in the filters.

Use the **Scope Increase Factor** drop-down to select the scope of this action. The value in this field specifies the number of levels to expand the scope of the addition. A value of one (1) means only use the floor level. A value of two (2) indicates that the devices in the floor and its parent level are to be included. And so on. The maximum value that can be set is six (6).

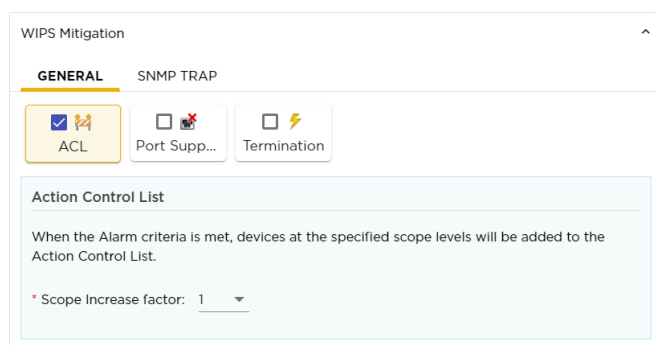


Figure 41: ACL

Hover on the **ACL** box to view a synopsis of its configuration.

Port Suppression

The **Port Suppression** action is used to suppress communication between unauthorized devices and the switches on your network.

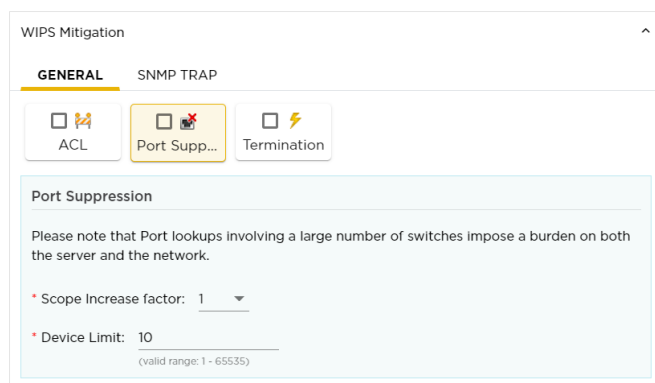


Figure 42: Port Suppression

Use the **Scope Increase Factor** drop-down to select the scope of this action. The value in this field specifies the number of levels to expand the scope of the port suppression action. A value of one (1) means only use the floor level. A value of two (2) indicates that the devices in the floor and its parent level are to be included. And so on. The maximum value that can be set is six (6).

Use the **Device Limit** field to specify a device limit. When a value is specified, for example, ten (10), the port suppression action will not be performed if the number of devices connected to the port exceeds this value.

Hover on the **Port Suppression** box to view a synopsis of its configuration.

Termination

The **Termination** action enables the automatic termination of devices that generate the alarms selected in the **Alarms** tab. When the Alarm criteria are met, devices at the selected scope level are terminated automatically.

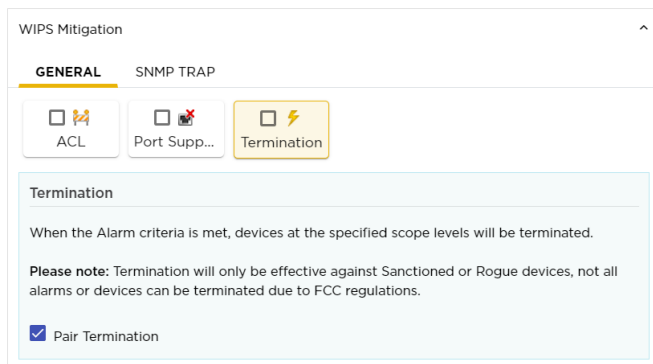


Figure 43: Termination

Select the **Pair Termination** option to enable termination of the offending pair of devices. This feature is only available for the following alarms.

- Ad-Hoc Connection between Sanctioned Stations
- Ad-Hoc Networking Extrusion Detected
- Sanctioned Client Association to Unsanctioned Virtual Wi-Fi
- Unauthorized Roaming
- Unsanctioned Client Associated to Sanctioned Client running Virtual Wi-Fi
- Wireless Client Accidental Association

To use the **Termination** action, you must enable the **Air Termination System** and the **Policy-based Air Termination System** features. These features can be enabled through the web user interface.

Hover on the **Termination** box to view a synopsis of its configuration.

SNMP Trap

The **SNMP Trap** action enables sending SNMP traps to your SNMP servers when the alarms specified in this Alarm Action Manager rule set are generated.

WIPS Mitigation

GENERAL **SNMP TRAP**

SNMP Trap

SNMP Trap

* Server Address: _____

* SNMP Port: 162 _____

* Community String: _____

Transport: UDP ▼

Max Queue Size: No queueing ▼

☒ Send SNMP Trap on alarm active

☐ Send SNMP Trap on alarm active, clear and expire

☐ *Send every 10 Minute(s) ▼

Figure 44: SNMP Trap

By default, an empty template is made available for immediate use. Use this empty template to create your first SNMP Trap. To add additional traps, use the green + icon to create a new blank template. When you add a new SNMP Trap, a new block is created for it. You can hover on each of these blocks to get a synopsis of the configuration for that block.

Multiple SNMP Traps can be generated for a Alarm Action Manager rule set.

For each SNMP Trap, provide the following information:

Field	Description
Server Address	The IP address of your remote SNMP server.
SNMP Port	The port on which your SNMP server is listening for notifications.
Community String	The community string for the receiving SNMP Server. This string is a series of characters manipulated as a group, in this instance for SNMP.
Transport	Specifies the transport protocol to use for sending the SNMP traps. The available protocols are: • UDP (User Datagram Protocol) • TCP (Transmission Control Protocol) In general, UDP is used for transmitting SNMP traps. However, TCP can be used for tunneling the traps over SSL (Secure Sockets Layer).
Max Queue Size	Specifies the maximum queue size for the notifications. Choose a size from the drop-down list.
Send Time	The choices Send SNMP Trap on alarm active , Send SNMP Trap on alarm active, clear, and expire , and Send every <duration> enable configuring when the SNMP traps are sent to the server.

Info Gathering

Info Gathering actions are a set of actions that you can take to gather more information about the state of your AirDefense system when particular alarms are raised in your system. When such alarms are raised, you can configure your system to automatically generate syslog entries.

Use the **General** tab of the **Info Gathering** control to configure the various settings.

Similarly, use the **Sys Log** tab of this screen to configure generating Sys Log entries for these alarms.

General Actions

The **General** tab of the **Info Gathering** field provides you with the following information gathering tools:

- **AP Test** - Runs a pre-configured AP test profile when the specified alarms are generated.
- **Frame Capture** - An action that monitors and analyzes real-time data flow in your network and saves the data for analysis.
- **Vulnerability Assessment** - Runs a pre-configured Vulnerability Assessment test when the specified alarms are generated.
- **Data Collection** - Automatically corrects configuration compliance violations when conditions specified in the filters are met.
- **Spectrum Analysis** - Runs a Spectrum Analysis or Advanced Spectrum Analysis using the profile specified when conditions specified in the filters are met.

AP Test

The *AP Test* action runs an AP test using a specific profile if the conditions specified in the **Filters** tab are met.



Note

AP Test is a part of the *Advanced Troubleshooting* module and requires an *Advanced Troubleshooting* license for access.

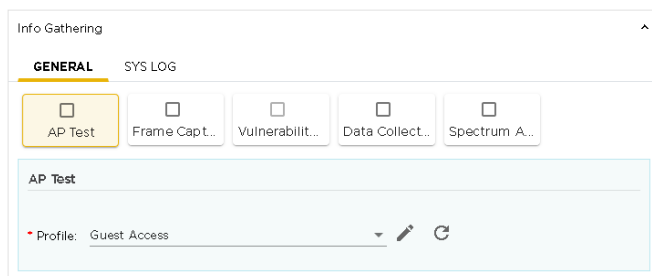


Figure 45: AP Test Configuration

Use the **Profile** drop-down list to select an appropriate AP Test profile. Use the  icon to edit the selected AP Test profile if required.

Hover on the **AP Test** box to view a synopsis of its configuration.

Frame Capture

The *Frame Capture* action monitors and analyzes real-time data traffic flow from devices in your wireless LAN and saves the data in a file if the conditions defined in the filter are met

Info Gathering

GENERAL

SYS LOG

☐

AP Test

☒

Frame Cap...

☐

Vulnerabilit...

☐

Data Collec...☐

Frame Capture

☐ Sensor ☒ Device

Frame Count Limit: 100000

Time Limit: 20 Minute(s)

File Name Prefix:

☒ Capture Management Frames

0

No Truncation

Truncate after 2000 bytes

☐ Capture Control Frames

0

No Truncation

Truncate after 0 bytes

☒ Capture Data Frames

0

No Truncation

Truncate after 165 bytes

Figure 46: Frame Capture Configuration

Provide the following Frame Capture configuration information:

Field	Description
Frame Capture	Select the scope of the frame capture. Frame capture can be limited to either Sensor or to Device .
Frame Count Limit	Limits the total number of frames to capture for each device category. Use the spinner control to set the value.
Time Limit	Specifies a time duration for the Frame Capture to run. Time can be set in number of minutes or hours. Use the appropriate controls to configure this value.
File Name Prefix	Specifies the prefix for the frame capture file. This prefix along with a number sequence is used to name your frame capture files.
Capture Management Frames	Select to include <i>Management Frames</i> in your frame capture. Use either the slider control or the Truncate After spinner control to set the maximum number of Management Frames that will be captured for this instance of frame capture. Capture Management Frames is selected by default.

Field	Description
Capture Control Frames	Select to include <i>Control Frames</i> in your frame capture. Use either the slider control or the Truncate After spinner control to set the maximum number of Control Frames that will be captured for this instance of frame capture. Capture Control Frames is not selected by default.
Capture Data Frames	Select to include <i>Data Frames</i> in your frame capture. Use either the slider control or the Truncate After spinner control to set the maximum number of Data Frames that will be captured for this instance of frame capture. Capture Data Frames is selected by default.

Hover on the **Frame Capture** box to view a synopsis of its configuration.

Vulnerability Assessment

The *Vulnerability Assessment* action runs a vulnerability assessment test using the specified profile if the conditions defined in the **Filters** tab are met.

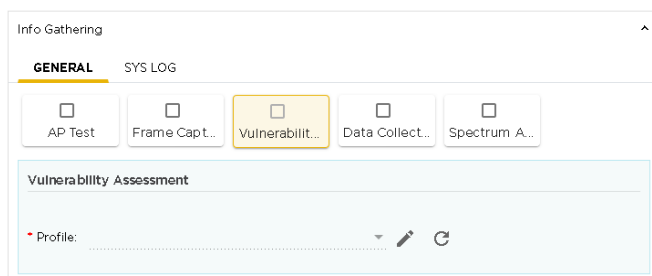


Figure 47: Vulnerability Assessment Configuration

Use the **Profile** drop-down list to select an appropriate Vulnerability Assessment profile. Use the  icon to edit the selected Vulnerability Assessment profile if required.

Hover on the **Vulnerability Assessment** box to view a synopsis of its configuration.

Data Collection

The *Data Collection* action automatically corrects configuration compliance issues and violations when the conditions defined in the **Filters** tab are met.

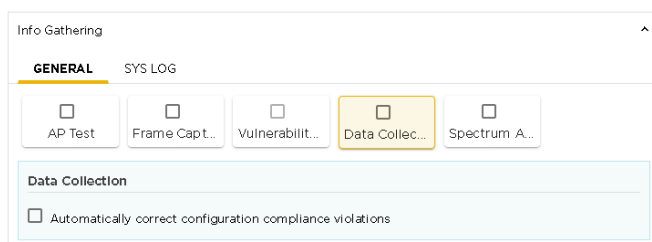


Figure 48: Data Collection Configuration

Select the **Automatically correct configuration compliance violations** option to enable it. When this option is selected, an alarm is generated by a device meeting the

conditions specified in the **Filters** tab and AirDefense automatically uploads the last approved configuration to the device to correct any violations.

Hover on the **Data Collection** box to view a synopsis of its configuration.

Spectrum Analysis

The *Spectrum Analysis* action runs a regular *Spectrum Analysis* or an *Advanced Spectrum Analysis* using the specified profile if the conditions specified in the **Filters** tab are met.

Info Gathering

GENERAL

SYS LOG

AP Test

Frame Capt...

Vulnerabilit...

Data Collect...

Spectrum A...

Spectrum Analysis

Time Limit: 5

File Name Prefix: SA_

SPECTRUM SETTINGS

ADVANCED SPECTRUM SETTINGS

Full Scan

Interference Scan

Pulse Definition

Threshold: -75

Width: 250

Figure 49: Spectrum Analysis Configuration

Provide the following configuration information.

Field	Description
Time Limit	Specifies a time duration for the Spectrum Analysis to run. Time can be set in number of minutes. Use the spinner control to configure this value.
File Name Prefix	Specifies the prefix for the spectrum analysis file. This prefix is used when creating your spectrum analysis file.
Spectrum Settings	Select this tab for configuring the regular Spectrum Analysis settings.
Advanced Spectrum Settings	Select this tab for configuring the Advanced Spectrum Analysis settings.

Hover on the **Spectrum Analysis** box to view a synopsis of its configuration.

Spectrum Setting

Provide the following configuration information for the normal Spectrum Analysis

Field	Description
Scan Type	Select one of Full Scan or Interference Scan . • <i>Full Scan</i> scans the entire 2.4GHz bandwidth (in 5MHz steps) and 5GHz bandwidth (in 20MHz steps) with a short dwell time (around 50 ms). It supports limited classification of interference sources. • <i>Interference Scan</i> scans three frequencies in the 2.4GHz band and three frequencies in the 5GHz band with a longer dwell time (around 500 ms). It supports classification for all interference sources.
Pulse Definition	Defines the values for each pulse when performing Spectrum Analysis. Use the Threshold control to set the pulse threshold value in <i>dBm</i> . Use the Width control to define the gap between two consecutive pulses.

Advanced Spectrum Settings

Provide the following configuration information for the Advanced Spectrum Analysis

Select the scan type. Select one of **Dedicated Scan** or **In-Line Scan**.

- *Dedicated Scan* is a full, detailed spectrum scan.
- *In-Line Scan* is a spectrum scan of all channels except the 802.11 channels and bands.

For each of the above scan types, provide the following configurations:

Field	Description
Scan Time	Defines the scan time in milliseconds. Use the spinner control to set this value. The default value is 1000 milliseconds.
Threshold	For both the 2.4 GHz and 5.0 GHz bands, set the threshold value in <i>dBm</i> .
Duty Cycle Threshold	For both the 2.4 GHz and 5.0 GHz bands, set the duty cycle threshold value in <i>dBm</i> .

Edit Alarm Action Manager Rule Set

The **Alarm Action Manager** screen lists the Alarm Action Manager rules sets configured for your Extreme AirDefense managed system. An Alarm Action Manager Rule Set is a set of configurations that perform certain actions depending on the alarms that are raised in your network.

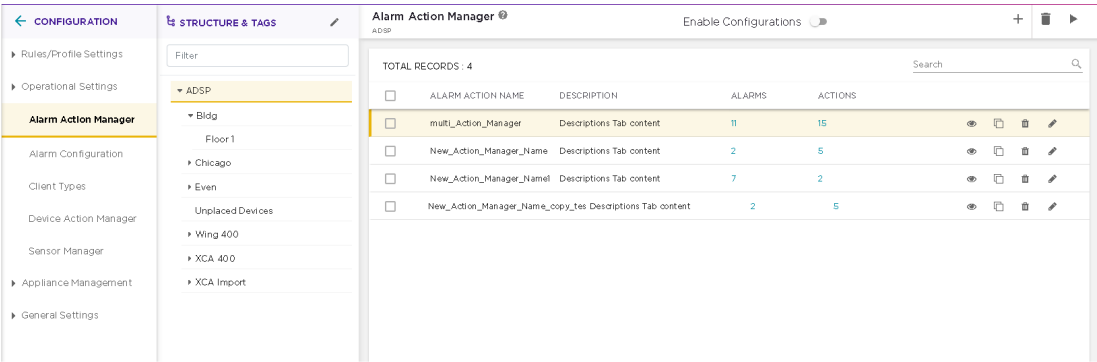


Figure 50: Alarm Action Manager Screen

Use the  icon located to the right of each Alarm Action Manager rule set to edit its configuration.

Alarm Action Manager rule sets are edited the **Alarm Action Manager Screen**.

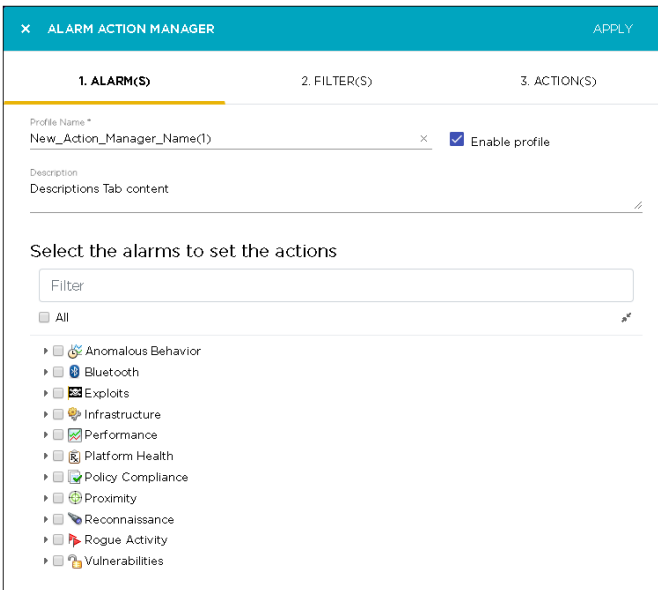


Figure 51: Edit an Alarm Action Manager Rule Set

You can modify all the settings for this Alarm Action Manager rule set except the **Profile Name** assigned to this rule set.

Click the **APPLY** button located to the top right of this screen to save your changes. To exit without saving your changes, select the **X** button to the top left of this screen.

Delete Alarm Action Manager Rule Set

The **Alarm Action Manager** screen lists the Alarm Action Manager rules sets configured for your Extreme AirDefense managed system. An Alarm Action Manager Rule Set is a set of configurations that perform certain actions depending on the alarms that are raised in your network.

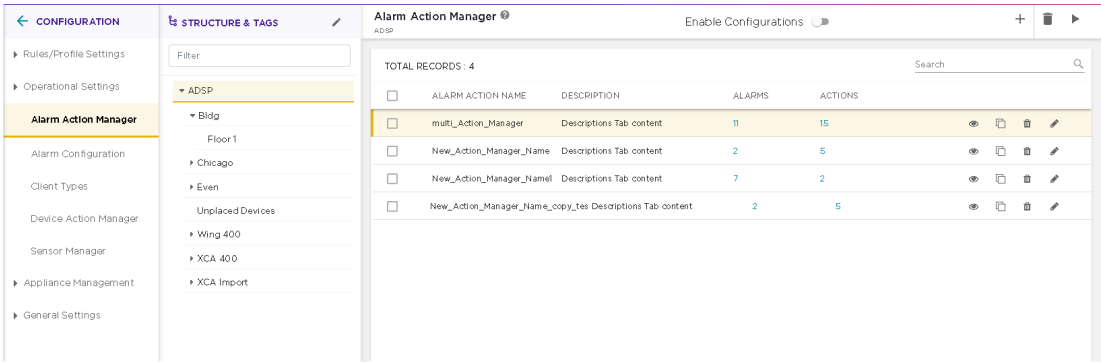


Figure 52: Alarm Action Manager Screen

Use the  icon located to the right of each Alarm Action Manager rule set to delete it. A confirmation dialog displays.

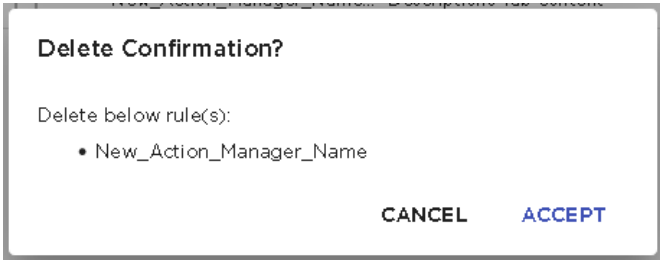


Figure 53: Delete Alarm Action Manager window

To delete the Alarm Action Manager rule set, click the **ACCEPT** button. The Alarm Action Manager rule set is immediately deleted.

To exit without deleting the Alarm Action Manager rule set, click the **CANCEL** button.

Device Action Manager

Device Action Manager enables you to create a set of rules that can be applied to devices in your Extreme AirDefense system. This feature enables you to create filters that define particular conditions, and, create actions that are automatically performed when these conditions are met.

Device Actions are configured using the **Device Action Manager** screen. This screen is launched by selecting the **Configuration > Operational Settings > Device Action Manager** menu path.

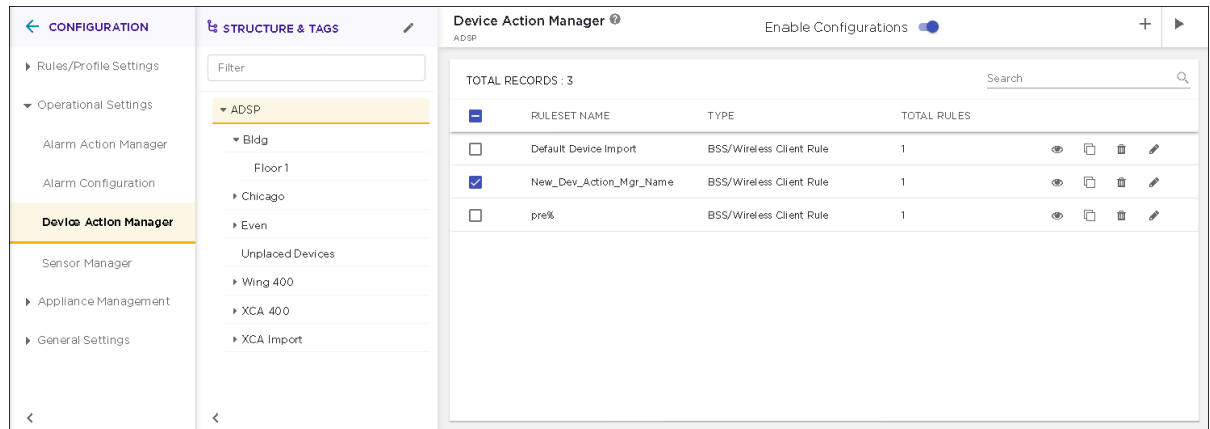


Figure 54: Device Action Manager Rule Set Screen

View Device Action Manager Rule Set

Use the **Device Action Manager** screen to view a list of these rule sets configured for your Extreme AirDefense managed system. A Device Action Manager rule set is a set of configurations that performs certain actions depending on defined conditions that occur in your network.

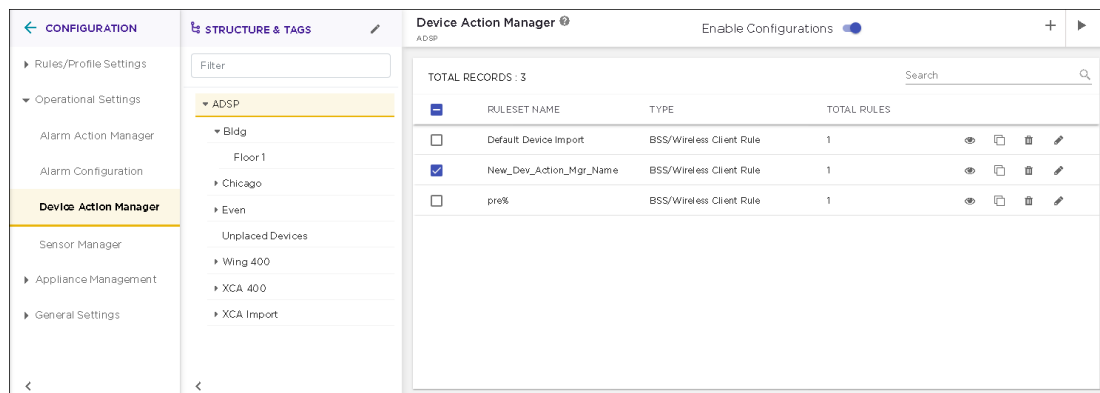


Figure 55: Device Action Manager Screen

The screen displays the following information:

Field	Description
Ruleset Name	The name of the Device Action Manager rule set.
Type	The type of Device Action Manager rule set. Can be one of: - Infrastructure Device Rule Set - This rule set is for those devices that make up the Extreme AirDefense infrastructure such as switches and access points. - Wireless Client /BSS Rule Set - This rule set is for those devices that are managed by the Extreme AirDefense system.

Field	Description
Total Rules	Displays the number of rules that are included in this Device Action Manager rule set.
Action	The actions that can be performed on the Device Action Manager rule set. The icons in this field enable you to manage your Device Action Manager rule set. You can edit the rule set, create a new one by creating a duplicate of an existing rule set, or delete the rule set. The following actions can be performed: • View - To view a Device Action Manager rule set, use the  icon for the rule set. The details for this rule set is displayed in a separate dialog. • Duplicate - Use the  icon to create a duplicate of the selected rule set. A duplicate of this rule set is created and the configuration dialog displays the newly created Device Action Manager rule set. Customize the duplicate rule set further to meet your requirements. • Delete - Use the  icon to delete the selected Device Action Manager rule set. • Edit - Use the  to edit the Device Action Manager rule set. A configuration dialog displays where you can make changes to the selected Device Action Manager rule set. For more information, see Add a Device Action Manager Rule Set on page 221.

To apply one or more Device Action Manager rule sets to a particular scope (location), select the context from the **Structure & Tags** area. If permissions for this level are inherited from its parent, change the ☐ Override ☒ Inherit from: ADSP control to **Override**. Select the check-box next to each selected Device Action Manager rule set to enable it for the selected scope (location). Click the **APPLY** button to apply the override for the selected context.

To add more Device Action Manager rule sets, use the  icon located to the top right of this screen. For more information, see [Add a Device Action Manager Rule Set](#) on page 221.

View Device Action Manager Rule Set

Use the  icon for a Device Action Manager rule set to view its details. A configuration dialog displays all the details about this Device Action Manager rule set.

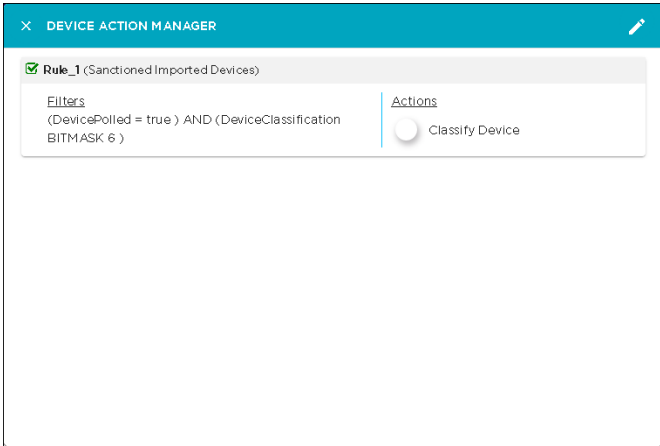


Figure 56: Device Action Manager Rule Set View Dialog

The following information is displayed for each Device Action Manager rule set.

Field	Description
Name	The name of this Device Action Manager rule set.
Rules	A list of rules that are configured for this rule set. For each rule, the following information is displayed. • Filters - The Filters column displays the rule that is configured. • Actions - The Actions column displays the action that will be taken if a device meets the rules specified in the Filters column.

You can directly edit the rule set from within this dialog. Click the  icon located to the top right of the dialog to edit it.

Add a Device Action Manager Rule Set

A Device Action Manager profile is a set of rules that govern actions that can be performed when certain conditions are met. These actions can be performed both on Infrastructure devices and Client devices.

Device Action Manager supports two types of rule sets; one for infrastructure devices and one for wireless clients/BSSs. You have to create separate rules for each device type. Infrastructure devices such as wireless switches, access points, and wired switches can be actioned on separately from Client devices such as wireless clients and devices.

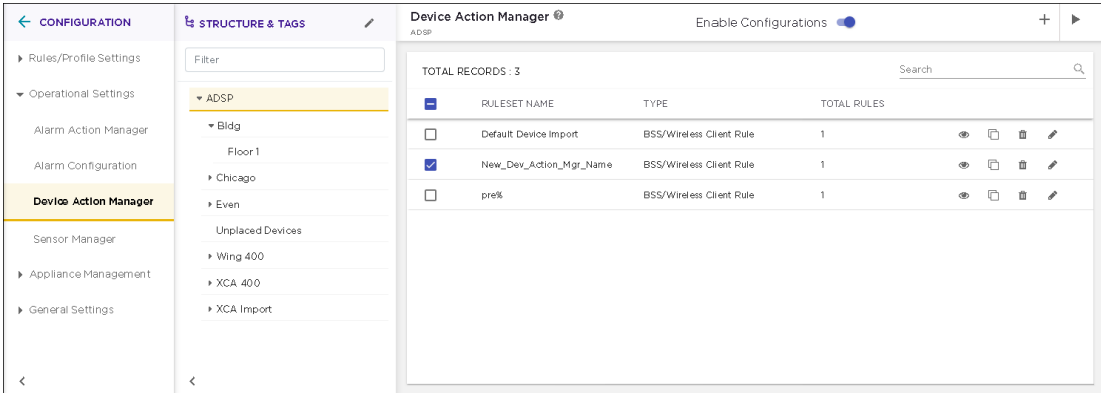


Figure 57: Device Action Manager Profile Screen

Use the **+** icon to add a new Device Action Manager Rule Set.

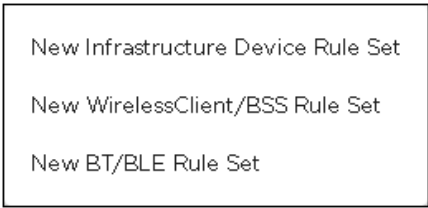


Figure 58: Device Action Manager Rule Set Types

Add a New Wireless Client/BSS Rule Set

Use the **Device Action Manager** screen to add a new wireless client/BSS rule. The same screen is also used to edit an existing rule set of the same type.

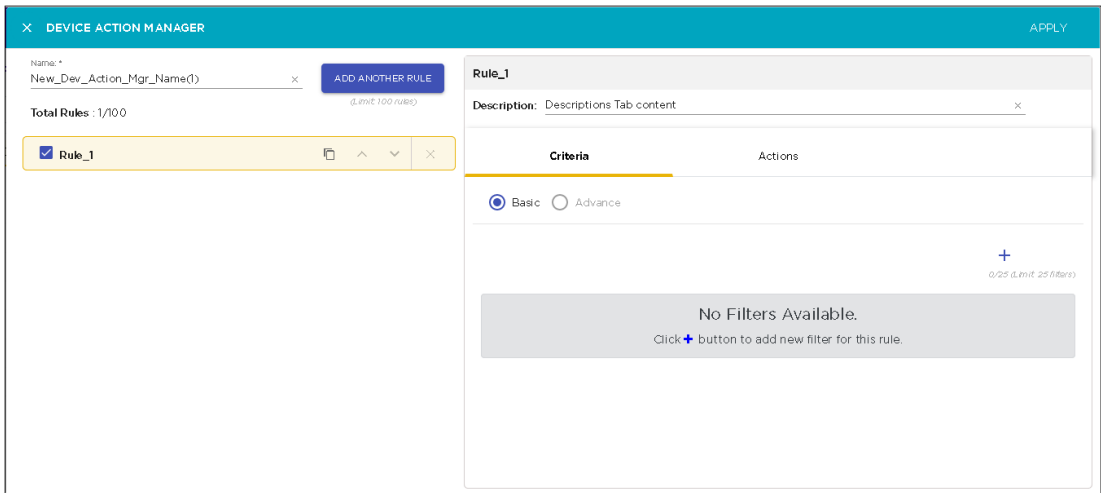


Figure 59: Add a Device Action Manager Rule Set

To create a new wireless client/BSS rule set, you need to do the following:

1. Assign a name to your Device Action Manager rule set. Use the **Name** field that is located to the top left of the screen.
2. Create at least one Rule for this rule set. You can add up to one hundred (100) rules to your rule set. Use the **Add Another Rule** button to add additional rules.

For each rule in your rule set, you must define at least one filter criteria and one action.

3. Create and add at least one filtering criteria for each rule that you create. You can add up to twenty five (25) criteria per rule in your rule set. Use the  icon in this tab to add new filters.
4. Create and add at least one action for the rule set. You can add up to five (5) actions for this rule set. Use the  icon in this tab to add new actions.

Configuring Filters

Configure your filters by using logical constructs of AND, OR, and NOT that are available for use when creating and adding multiple filter criteria to your rule. These logical constructs are explained below.

- AND - All the conditions defined for this rule must be met for the actions to be triggered.
- OR - One or more of the conditions defined for this rule set must be met for the actions to be triggered.
- NOT (AND) - This is the opposite condition of the AND construct. None of the selected conditions should meet for the action to be triggered.
- NOT (OR) - This is the opposite condition of the OR construct. One or more of the specified filter conditions must not be met for the action to be triggered.

The available filters are:

- Adhoc
- Associated
- AssociatedBSSClassification
- AssociatedBSSIP
- AssociatedBSSMAC
- AssociatedBSSName
- AssociatedBSSVendorPrefix
- Channel
- ConnectedToWired
- Device802_1XName
- DeviceAuthentication
- DeviceClassification
- DeviceClassificationInherit
- DeviceClientType
- DeviceEncryption

- DeviceFirstPolled
- DeviceFirstSeen
- DeviceIP
- DeviceLastPolled
- DeviceLastSeen
- DeviceMAC
- DeviceManufacturer
- DeviceName
- DevicePolledIP
- DevicePolledName
- DevicePolledSSID
- DeviceProtocol
- DeviceSSID
- DeviceSensedIP
- DeviceSensedSSID
- DeviceType
- DeviceVendorPrefix
- SensorIP
- SensorMAC
- SensorName
- SignalStrength
- WatchList
- WiFiDirect.

**Important**

In the Device Action Manager, the order of filters within the rule defines how the filters are applied. For example, if you want create a rule to sanction only BSSs, the first filter should be defined as *DeviceType=Include BSS* before defining other rules such as *DeviceManufacturer* or *DeviceSSID*. Setting the *DeviceType=Include BSS* as the first filter will cause all wireless client devices to be ignored.

Selecting Filters

Select a filter to add to this Wireless Clients/BSS Device Action Manager rule set by clicking the **Criteria** tab. By default the **Basic** option is selected.

Click the  icon within the **Criteria** tab to add a new filter rule to this rule set.

Rule_1

Description: Descriptions Tab content

Criteria Actions

☒ Basic ☐ Advance

☒ AND ☐ OR ☐ NOT (AND) ☐ NOT (OR) **+** 1/25 (Limit 25 filters)

Adhoc ▾ = ▾ ☐ True ☐ False **X**

Figure 60: New Filter

Use the **AND**, **OR**, **NOT (AND)**, and **NOT (OR)** logical constructs to create your rule. You can add up to twenty five (25) filter rules to this Device Action Manager rule set.

The following logical constructs are available for use:

- **AND** - All the conditions defined for this rule must be met for the actions to be triggered.
- **OR** - One or more of the conditions defined for this rule set must be met for the actions to be triggered.
- **NOT (AND)** - This is the opposite condition of the AND construct. None of the selected conditions should meet for the action to be triggered.
- **NOT (OR)** - This is the opposite condition of the OR construct. One or more of the specified filter conditions must not be met for the action to be triggered.

Use the **Filter** drop-down list to select the rule to apply.

Search...

Adhoc

Associated


AssociatedBSSClassification

AssociatedBSSID

AssociatedBSSMAC

▾ ☐ True ☐ False **X**


Next, use the **Comparison Criteria** drop-down list to select the comparison operator for this filter rule. The operator indicates the relationship between the filter and a value that you specify.

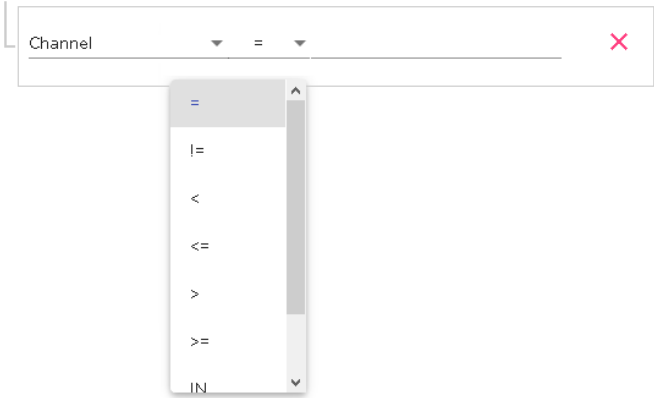

The selection in this list will vary with the filter selected in the **Filter** field. Some of the most common comparison operators are:

=	Is equal to
!=	Is not equal to
<	Is less than
<=	Is less than or equal to
MAC Range	Range to pick up MAC address.
>	Is greater than
>=	Is greater than or equal to
LIKE	Is similar to, matches some portion (Used for a partial match)
ILIKE	Case insensitive partial match
IN	Condition exists within the filter value (usually used when the filter combines two or more variables which must be compared in some way to create a trigger)

For each filter, there will be one or more values that you compare for taking action. The kind and number of value or values will depend on the filter that you have selected. Enter a value that is appropriate for the filter criteria. Any errors that you make will be flagged immediately.

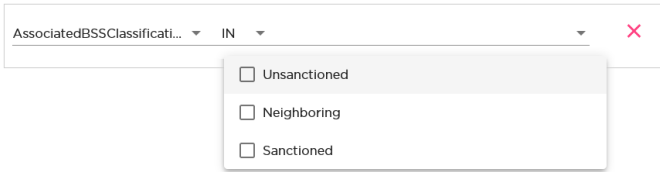


To remove a rule that you have configured, select the red **X** icon located to the right of each rule. When you click this icon, the rule is immediately deleted from this rule set.

Add Actions

Actions are configured from the **Actions** tab. You can specify one or more (up to five (5)) actions that can be performed when the conditions set in the **Criteria** tab are met. The valid actions are:

- Classify Devices - Classifies devices using the filter(s) to determine which devices are to be classified.
- Clear active alarm - Clears any active alarm if the conditions defined in the filter(s) are met.
- Set Client Type - Sets the Client Type for Wireless Clients as defined in the filter(s).
- ACL - Enables the Access Control List on switches that meet the conditions defined in the filter(s).
- Port Suppression - Suppresses communication between unauthorized devices and switches on your network as defined in the filter(s).
- Termination - Terminates devices that meet the conditions defined in the filter(s).
- AP Test - Runs an AP Test using the specified profile if the conditions defined in the filter(s) are met.
- Frame Capture - Monitors and analyzes real-time data traffic flow from devices in your wireless LAN and saves the data in a file if the conditions defined in the filter(s) are met.
- Vulnerability Assessment - Runs a vulnerability assessment using the specified profile if the conditions defined in the filter(s) are met.
- Delete Device - Deletes any device from your system that meets the criteria defined in the filter(s).
- Email - Sends an email to the administrator if the conditions defined in the filter(s) are met.

Use the **+** icon to add an action to your Device Action Manager Rule Set. You can add up to five (5) rules for each rule set. Configuration settings will be different for each action. For example, the following is the configuration settings when you select *Email* as your action.

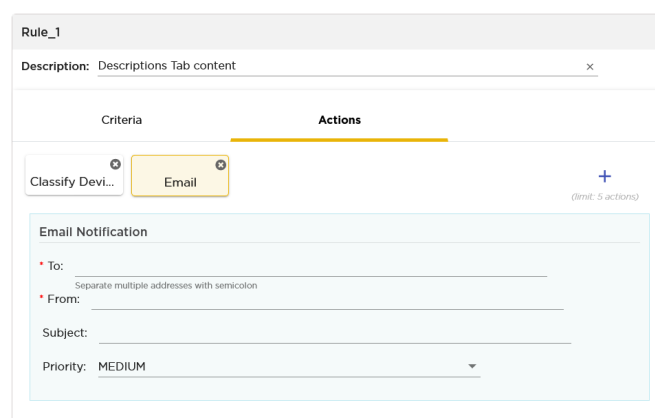

The screenshot shows the configuration for 'Rule_1'. The 'Description' field contains 'Descriptions Tab content'. The 'Criteria' tab is active, and the 'Actions' tab is selected. Under 'Actions', the 'Email' action is highlighted. Below the actions, the 'Email Notification' settings are shown, including fields for 'To:', 'From:', 'Subject:', and 'Priority: MEDIUM'. A note indicates 'Separate multiple addresses with semicolon' for the 'To:' field.

Figure 61: Action - Send Email

The send email action enables to send an email when the conditions specified in the **Criteria** tab are met. You can send mails to multiple persons with customized subject, priority, and the email from which this mail is supposed to originate.

When you create an action, its name is added to the top of the **Actions** tab.



To delete a specific action, use the small **x** button located to the top right of the action's name in the tab. When you click the button, the action is immediately removed.

Once you have configured your Device Action Manager Rule Set, click the **APPLY** button located to the top right of this window. The rule is saved and is added to the list of Device Action Manager rule sets.

The following image is of a fully configured Device Action Manager Rule Set.

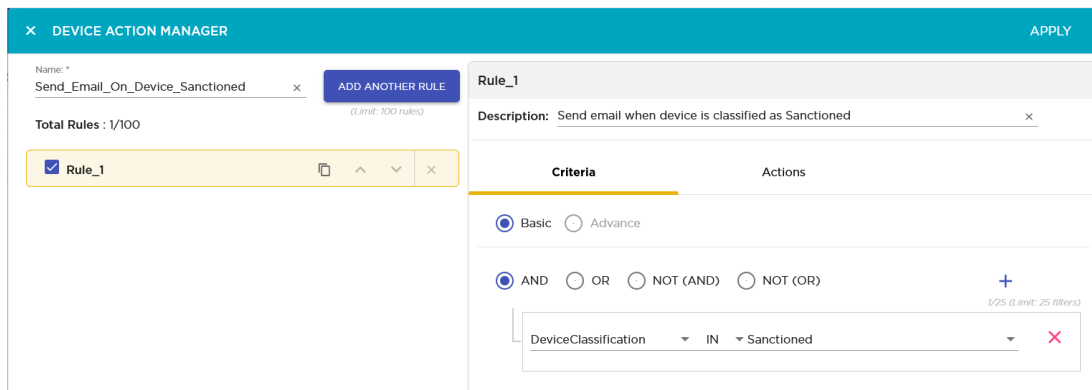


Figure 62: Example Device Action Manager Rule Set

Classify Device Action

The *Classify Device* action enables you to classify a device into various categories if the conditions specified in the **Filters** tab are met.

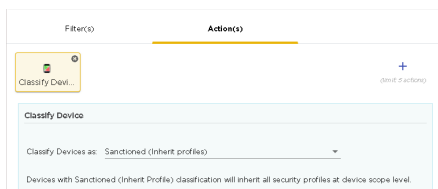


Figure 63: Classify Device Action

Use the **Classify Devices as** drop-down list to select the device's classification. The devices can be classified as:

- Sanctioned (Inherited Profile) - Devices with Sanctioned (Inherit Profile) classification will inherit all security profiles at device scope level.
- Unsanctioned - Devices will be classified as unsanctioned.

- Neighboring - Devices will be classified as neighboring devices.
- Sanctioned (Assigned Profiles) - Devices will be classified as sanctioned and then assigned the profiles selected from the list of profiles.

Hover on the **Classify Device** box to view a synopsis of its configuration.

Clear Active Alarms

The *Clear Active Alarms* action enables you to clear all active alarms in your AirDefense system. This action is performed when the conditions specified in the **Filters** tab are met.

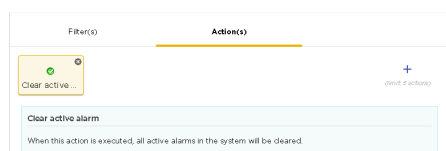


Figure 64: Clear Active Alarms Action

There are no configurable parameters for this action.

Set Client Type Action

The *Set Client Type* action enables you to classify a device as a particular client type. This action is performed when the conditions specified in the **Filters** tab are met.

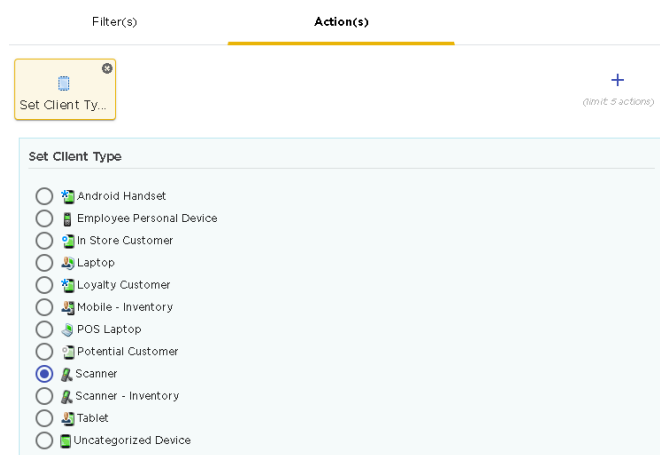


Figure 65: Set Client Type Action

Select the client type to apply to the devices from the list. The items in this list is populated from the **Client Types** screen.

ACL

The **ACL** action enables the Access Control List on devices that meet the conditions specified in the filters.

Use the **Scope Increase Factor** drop-down to select the scope of this action. The value in this field specifies the number of levels to expand the scope of the addition. A value of one (1) means only use the floor level. A value of two (2) indicates that the devices in

the floor and its parent level are to be included. And so on. The maximum value that can be set is six (6).

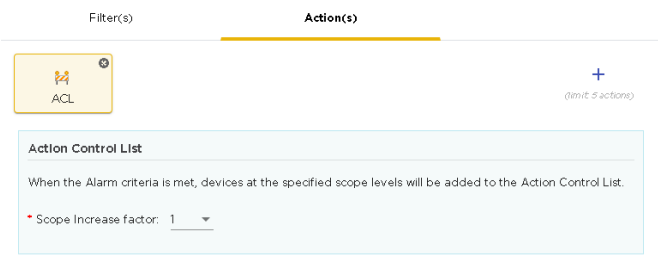


Figure 66: ACL

Hover on the **ACL** box to view a synopsis of its configuration.

Port Suppression

The **Port Suppression** action is used to suppress communication between unauthorized devices and the switches on your network.

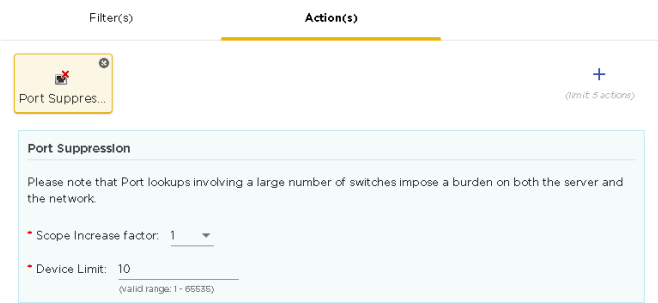


Figure 67: Port Suppression

Use the **Scope Increase Factor** drop-down to select the scope of this action. The value in this field specifies the number of levels to expand the scope of the port suppression action. A value of one (1) means only use the floor level. A value of two (2) indicates that the devices in the floor and its parent level are to be included. And so on. The maximum value that can be set is six (6).

Use the **Device Limit** field to specify a device limit. When a value is specified, for example, ten (10), the port suppression action will not be performed if the number of devices connected to the port exceeds this value.

Hover on the **Port Suppression** box to view a synopsis of its configuration.

Termination

The **Termination** action enables the automatic termination of devices that meet the conditions specified in the **Filters** tab. When the Alarm criteria are met, devices at the selected scope level are terminated automatically.

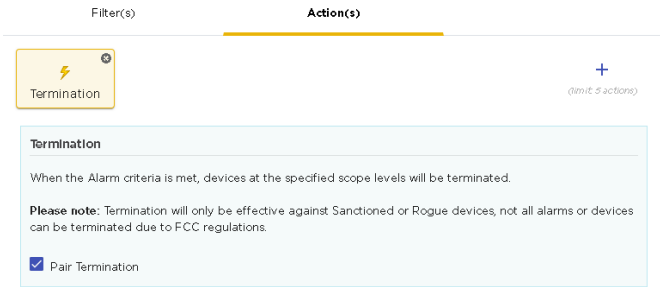


Figure 68: Termination

Select the **Pair Termination** option to enable termination of the offending pair of devices.

To use the **Termination** action, you must enable the **Air Termination System** and the **Policy-based Air Termination System** features. These features can be enabled through the web user interface.

Hover on the **Termination** box to view a synopsis of its configuration.

AP Test

The *AP Test* action runs an AP test using a specific profile if the conditions specified in the **Filters** tab are met.



Note
AP Test is a part of the *Advanced Troubleshooting* module and requires an *Advanced Troubleshooting* license for access.

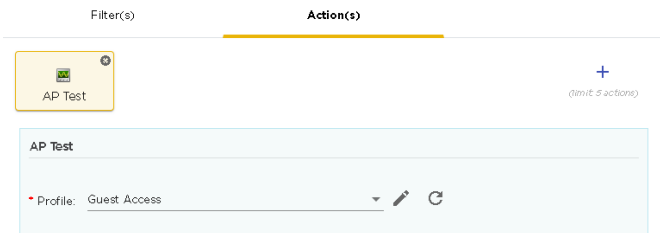


Figure 69: AP Test Configuration

 
Use the **Profile** drop-down list to select an appropriate AP Test profile. Use the  icon to edit the selected AP Test profile if required.

Hover on the **AP Test** box to view a synopsis of its configuration.

Frame Capture

The *Frame Capture* action monitors and analyzes real-time data traffic flow from devices in your wireless LAN and saves the data in a file if the conditions defined in the filter are met

Filter(s) **Action(s)**


(limit 5 actions)

Frame Capture ☐ Sensor ☒ Device

Frame Count Limit: 100000

Time Limit: 20 Minute(s)

File Name Prefix:

☒ Capture Management Frames

0  No Truncation

 
Truncate after: 2000 bytes

☐ Capture Control Frames

0  No Truncation

Truncate after: 0 bytes

☒ Capture Data Frames

0  No Truncation

Truncate after: 165 bytes

Figure 70: Frame Capture Configuration

Provide the following Frame Capture configuration information:

Field	Description
Frame Capture	Select the scope of the frame capture. Frame capture can be limited to either Sensor or to Device .
Frame Count Limit	Limits the total number of frames to capture for each device category. Use the spinner control to set the value.
Time Limit	Specifies a time duration for the Frame Capture to run. Time can be set in number of minutes or hours. Use the appropriate controls to configure this value.
File Name Prefix	Specifies the prefix for the frame capture file. This prefix along with a number sequence is used to name your frame capture files.
Capture Management Frames	Select to include <i>Management Frames</i> in your frame capture. Use either the slider control or the Truncate After spinner control to set the maximum number of Management Frames that will be captured for this instance of frame capture. Capture Management Frames is selected by default.

Field	Description
Capture Control Frames	Select to include <i>Control Frames</i> in your frame capture. Use either the slider control or the Truncate After spinner control to set the maximum number of Control Frames that will be captured for this instance of frame capture. Capture Control Frames is not selected by default.
Capture Data Frames	Select to include <i>Data Frames</i> in your frame capture. Use either the slider control or the Truncate After spinner control to set the maximum number of Data Frames that will be captured for this instance of frame capture. Capture Data Frames is selected by default.

Hover on the **Frame Capture** box to view a synopsis of its configuration.

Vulnerability Assessment

The *Vulnerability Assessment* action runs a vulnerability assessment test using the specified profile if the conditions defined in the **Filters** tab are met.

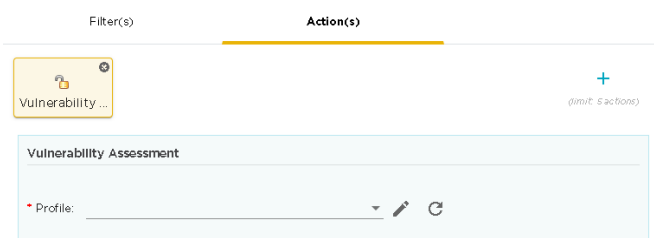


Figure 71: Vulnerability Assessment Configuration

Use the **Profile** drop-down list to select an appropriate Vulnerability Assessment profile. Use the  icon to edit the selected Vulnerability Assessment profile if required.

Hover on the **Vulnerability Assessment** box to view a synopsis of its configuration.

Delete Devices

The *Delete Device* action deletes all devices that meet the conditions specified in the **Filters** tab.

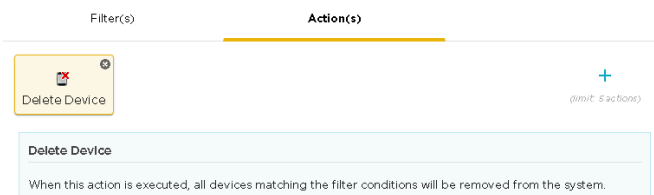


Figure 72: Delete Device Action

There are no configurable parameters for this action.

Email Configuration

The *Email* action enables you to configure the parameters for sending emails when there are some devices that meet the conditions specified in the **Filters** tab.

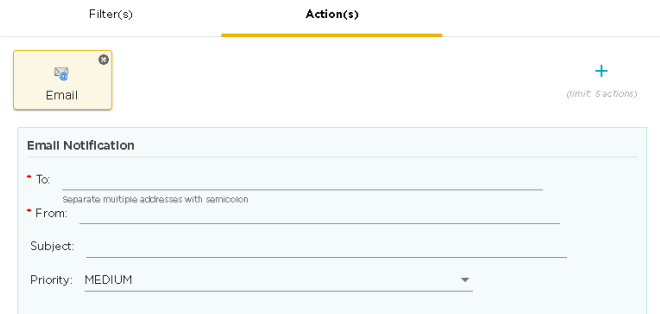


Figure 73: E-Mail Configuration

By default, an empty template is made available for immediate use. Use this empty template to create your first email. To add additional emails, use the green + icon to add a new *Email* action. When you add a new email action, a new block is created for it along with a blank template.

Multiple Emails can be generated for a Device Action Manager rule set.

Hover on the **Email** box to view a synopsis of its configuration.

For each email, provide the following information:

Field	Description
To	The email addresses of the recipients for this email. Add multiple email addresses separated with a semi-colon (;) sign.
From	The email address that is used to send this email. This is the address that will receive any reply mails received from the recipients.
Subject	The subject for this email.
Priority	Use the drop-down list to select the priority of this mail.

Add a New Infrastructure Device Rule Set

Use the **Device Action Manager** screen to add a new infrastructure device rule set. The same screen is used to edit an existing rule set of the same type.

Figure 74: Add a Device Action Manager Rule Set

The actions that you need to perform to add a new Infrastructure Device Action Manager rule set is the same as those that you need to perform to add a new Wireless Clients/BSS rule set. For more information, see [Add a New Wireless Client/BSS Rule Set](#) on page 222.

Configuring Filters

Configure your filters by using logical constructs of AND, OR, and NOT that are available for use when creating and adding multiple filter criteria to your rule. These logical constructs are explained in the topic [Configuring Filters](#) on page 223.

The available filters for Infrastructure devices are:

- DeviceCapabilities
- DeviceDHCP
- DeviceDNS
- DeviceFirmware
- DeviceFirstSeen
- DeviceIP
- DeviceLastDataPoll
- DeviceLastSeen
- DeviceLastStatusPoll
- DeviceMAC
- DeviceManufacturer
- DeviceModel
- DeviceName
- DevicePolledIP
- DeviceSensedIP

- DeviceSerial
- DeviceVendorPrefix.

**Important**

In the Device Action Manager, the order of filters within the rule defines how the filters are applied. For example, if you want create a rule to sanction only BSSs, the first filter should be defined as *DeviceType=Include BSS* before defining other rules such as *DeviceManufacturer* or *DeviceSSID*. Setting the *DeviceType=Include BSS* as the first filter will cause all wireless client devices to be ignored.

Add Actions

Actions are configured from the **Actions** tab. You can specify one or more (up to five (5)) actions that can be performed when the conditions set in the **Filters** tab are met. The valid actions are:

- Clear active alarm - Clears any active alarm if the conditions defined in the filter(s) are met.
- Frame Capture - Monitors and analyzes real-time data traffic flow from devices in your wireless LAN and saves the data in a file if the conditions defined in the filter(s) are met.
- Data Collection - Automatically corrects configuration compliance violations when conditions specified in the filters are met.
- Live RF / Floor Plan - Automatically updates the heat map predictions in the Live-RF window.
- ACL - Enables the Access Control List on devices that meet the conditions defined in the filter(s).
- Port Suppression - Suppresses communication between unauthorized devices on your network as defined in the filter(s).
- SNMP Trap - Generates SNMP traps when the conditions specified in the filters are met.
- Spectrum Analysis - Runs a Spectrum Analysis or Advanced Spectrum Analysis using the profile specified when the conditions specified in the filters are met.
- Delete Device - Deletes any device from your system that meets the criteria defined in the filter(s).

Use the  icon to add an action to your Device Action Manager Rule Set. You can add up to five (5) rules for each rule set. Configuration settings will be different for each action. For example, the following is the configuration settings when you select *Email* as your action.

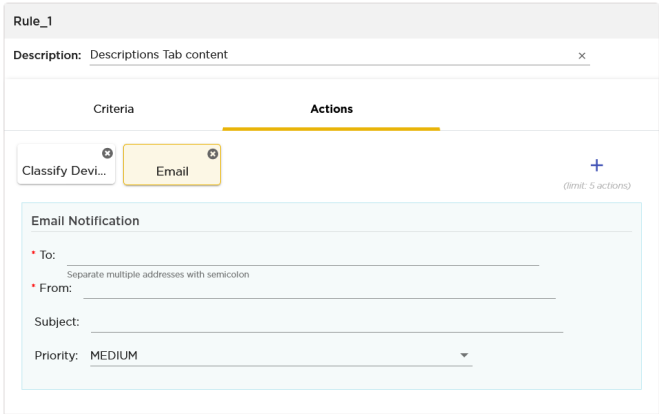


Figure 75: Action - Send Email

The send email action enables to send an email when the conditions specified in the **Filters** tab are met. You can send mails to multiple persons with customized subject, priority, and the email from which this mail is supposed to originate.

When you create an action, its name is added to the top of the **Actions** tab.



To delete a specific action, use the small **x** button located to the top right of the action's name in the tab. When you click the button, the action is immediately removed.

Once you have configured your Device Action Manager Rule Set, click the **APPLY** button located to the top right of this window. The rule is saved and is added to the list of Device Action Manager rule sets.

The following image is of a fully configured Device Action Manager Rule Set.

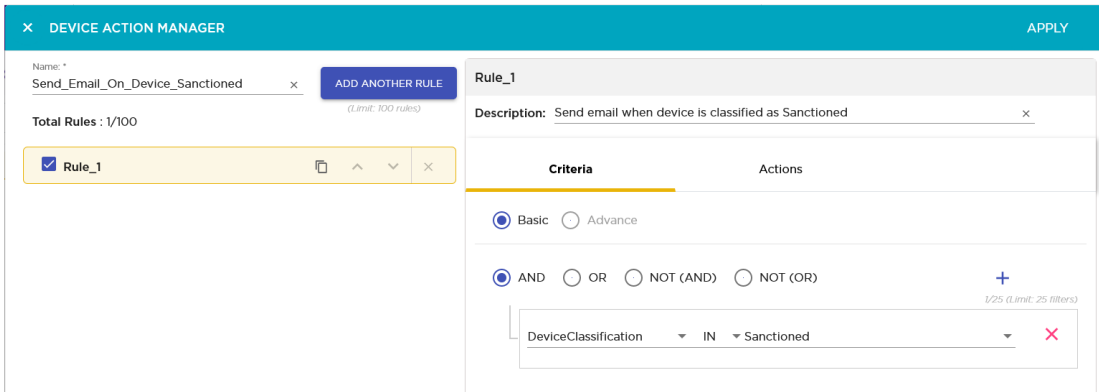


Figure 76: Example Device Action Manager Rule Set

Clear Active Alarms

The *Clear Active Alarms* action enables you to clear all active alarms in your AirDefense system. This action is performed when the conditions specified in the **Filters** tab are met.

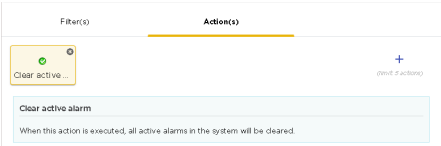


Figure 77: Clear Active Alarms Action

There are no configurable parameters for this action.

Frame Capture

The *Frame Capture* action monitors and analyzes real-time data traffic flow from devices in your wireless LAN and saves the data in a file if the conditions defined in the filter are met

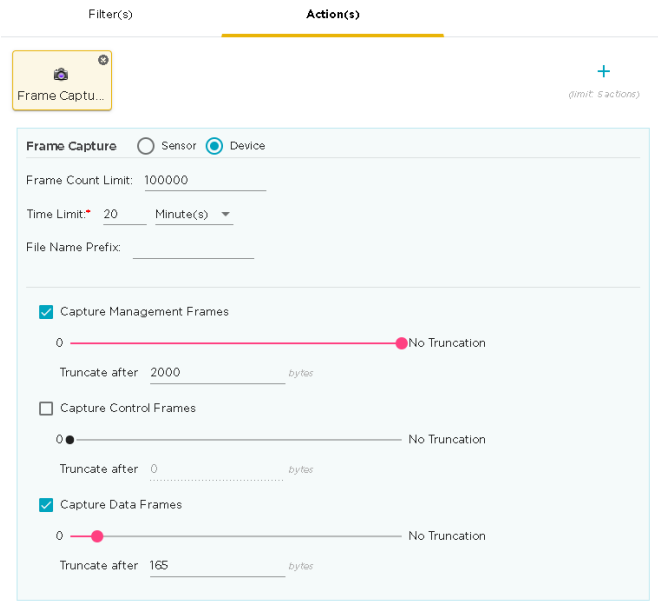


Figure 78: Frame Capture Configuration

Provide the following Frame Capture configuration information:

Field	Description
Frame Capture	Select the scope of the frame capture. Frame capture can be limited to either Sensor or to Device .
Frame Count Limit	Limits the total number of frames to capture for each device category. Use the spinner control to set the value.
Time Limit	Specifies a time duration for the Frame Capture to run. Time can be set in number of minutes or hours. Use the appropriate controls to configure this value.
File Name Prefix	Specifies the prefix for the frame capture file. This prefix along with a number sequence is used to name your frame capture files.

Field	Description
Capture Management Frames	Select to include <i>Management Frames</i> in your frame capture. Use either the slider control or the Truncate After spinner control to set the maximum number of Management Frames that will be captured for this instance of frame capture. Capture Management Frames is selected by default.
Capture Control Frames	Select to include <i>Control Frames</i> in your frame capture. Use either the slider control or the Truncate After spinner control to set the maximum number of Control Frames that will be captured for this instance of frame capture. Capture Control Frames is not selected by default.
Capture Data Frames	Select to include <i>Data Frames</i> in your frame capture. Use either the slider control or the Truncate After spinner control to set the maximum number of Data Frames that will be captured for this instance of frame capture. Capture Data Frames is selected by default.

Hover on the **Frame Capture** box to view a synopsis of its configuration.

Live RF / Floor Plan

The *Live RF / Floor Plan* action runs an infrastructure device poll to update the heat map predictions in Live RF. This action is performed when the conditions specified in the **Filters** tab are met. The next time the user accesses the Live RF / Floor Plan, they will see the latest updates and will also see whether or not any access points or sensors are offline.

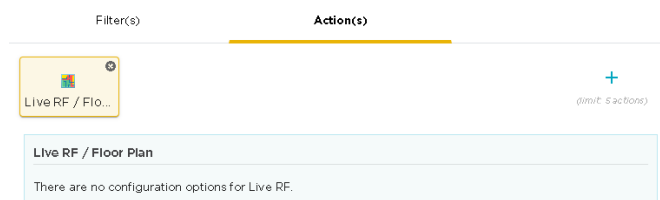


Figure 79: Live RF / Floor Plan Configuration

There are no configurable parameters for this action.

ACL

The **ACL** action enables the Access Control List on devices that meet the conditions specified in the filters.

Use the **Scope Increase Factor** drop-down to select the scope of this action. The value in this field specifies the number of levels to expand the scope of the addition. A value of one (1) means only use the floor level. A value of two (2) indicates that the devices in the floor and its parent level are to be included. And so on. The maximum value that can be set is six (6).

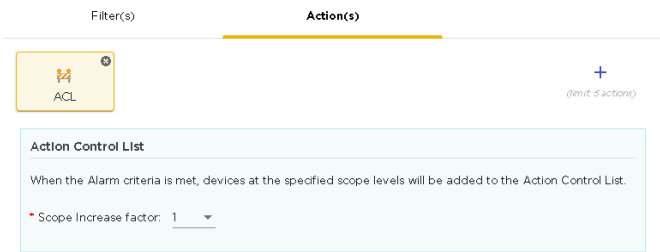


Figure 80: ACL

Hover on the **ACL** box to view a synopsis of its configuration.

Port Suppression

The **Port Suppression** action is used to suppress communication between unauthorized devices and the switches on your network.

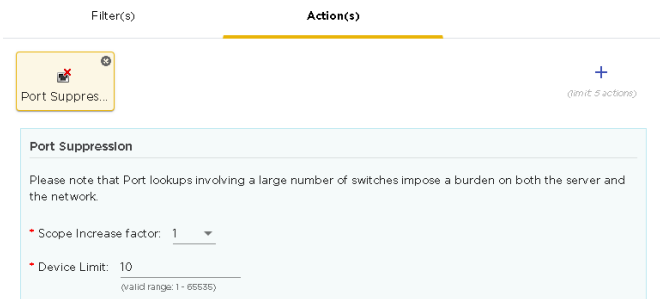


Figure 81: Port Suppression

Use the **Scope Increase Factor** drop-down to select the scope of this action. The value in this field specifies the number of levels to expand the scope of the port suppression action. A value of one (1) means only use the floor level. A value of two (2) indicates that the devices in the floor and its parent level are to be included. And so on. The maximum value that can be set is six (6).

Use the **Device Limit** field to specify a device limit. When a value is specified, for example, ten (10), the port suppression action will not be performed if the number of devices connected to the port exceeds this value.

Hover on the **Port Suppression** box to view a synopsis of its configuration.

SNMP Trap

The *SNMP Trap* action enables sending SNMP traps to your SNMP servers when devices meet conditions specified in the **Filters** tab.

Filter(s) Action(s)

SNMP Trap (limit: 6 actions)

SNMP Trap

- Server Address: _____
- SNMP Port: 162 _____
- Community String: _____
- Transport: UDP _____
- Max Queue Size: No queueing _____
- ☒ Send SNMP Trap on alarm active
- ☐ Send SNMP Trap on alarm active, clear and expire
- ☐ Send every 10 Minute(s) _____

Figure 82: SNMP Trap

By default, an empty template is made available for immediate use. Use this empty template to create your first SNMP Trap. To add additional traps, use the green + icon to create a new SNMP Trap action. When you add a new SNMP Trap action, a new block is created for it along with a new blank template.

Hover on the **SNMP Trap** box to view a synopsis of its configuration.

Multiple SNMP Traps can be generated for a Device Action Manager rule set.

For each SNMP Trap, provide the following information:

Field	Description
Server Address	The IP address of your remote SNMP server.
SNMP Port	The port on which your SNMP server is listening for notifications.
Community String	The community string for the receiving SNMP Server. This string is a series of characters manipulated as a group, in this instance for SNMP.
Transport	Specifies the transport protocol to use for sending the SNMP traps. The available protocols are: • UDP (User Datagram Protocol) • TCP (Transmission Control Protocol) In general, UDP is used for transmitting SNMP traps. However, TCP can be used for tunneling the traps over SSL (Secure Sockets Layer).
Max Queue Size	Specifies the maximum queue size for the notifications. Choose a size from the drop-down list.
Send Time	The choices Send SNMP Trap on alarm active , Send SNMP Trap on alarm active, clear and expire , and Send every <duration> enable configuring when the SNMP traps are sent to the server.

Spectrum Analysis

The *Spectrum Analysis* action runs a regular *Spectrum Analysis* or an *Advanced Spectrum Analysis* using the specified profile if the conditions specified in the **Filters** tab are met.

Info Gathering

GENERAL

SYS LOG

☐ AP Test

☐ Frame Capt...

☐ Vulnerabilit...

☐ Data Collect...

☒ Spectrum A...

Spectrum Analysis

Time Limit: 5

File Name Prefix: SA_

SPECTRUM SETTINGS

ADVANCED SPECTRUM SETTINGS

☒ Full Scan

☐ Interference Scan

Pulse Definition

Threshold: -75

Width: 250

Figure 83: Spectrum Analysis Configuration

Provide the following configuration information.

Field	Description
Time Limit	Specifies a time duration for the Spectrum Analysis to run. Time can be set in number of minutes. Use the spinner control to configure this value.
File Name Prefix	Specifies the prefix for the spectrum analysis file. This prefix is used when creating your spectrum analysis file.
Spectrum Settings	Select this tab for configuring the regular Spectrum Analysis settings.
Advanced Spectrum Settings	Select this tab for configuring the Advanced Spectrum Analysis settings.

Hover on the **Spectrum Analysis** box to view a synopsis of its configuration.

Spectrum Setting

Provide the following configuration information for the normal Spectrum Analysis

Field	Description
Scan Type	Select one of Full Scan or Interference Scan . • <i>Full Scan</i> scans the entire 2.4GHz bandwidth (in 5MHz steps) and 5GHz bandwidth (in 20MHz steps) with a short dwell time (around 50 ms). It supports limited classification of interference sources. • <i>Interference Scan</i> scans three frequencies in the 2.4GHz band and three frequencies in the 5GHz band with a longer dwell time (around 500 ms). It supports classification for all interference sources.
Pulse Definition	Defines the values for each pulse when performing Spectrum Analysis. Use the Threshold control to set the pulse threshold value in <i>dBm</i> . Use the Width control to define the gap between two consecutive pulses.

Advanced Spectrum Settings

Provide the following configuration information for the Advanced Spectrum Analysis

Select the scan type. Select one of **Dedicated Scan** or **In-Line Scan**.

- *Dedicated Scan* is a full, detailed spectrum scan.
- *In-Line Scan* is a spectrum scan of all channels except the 802.11 channels and bands.

For each of the above scan types, provide the following configurations:

Field	Description
Scan Time	Defines the scan time in milliseconds. Use the spinner control to set this value. The default value is 1000 milliseconds.
Threshold	For both the 2.4 GHz and 5.0 GHz bands, set the threshold value in <i>dBm</i> .
Duty Cycle Threshold	For both the 2.4 GHz and 5.0 GHz bands, set the duty cycle threshold value in <i>dBm</i> .

Add a New BT/BLE Rule Set

Use the **Device Action Manager** screen to add a new BT/BLE rule. The same screen is also used to edit an existing rule set of the same type.

Figure 84: Add a Device Action Manager Rule Set

The actions that you need to perform to add a new BT/BLE Device Action Manager rule set is the same as those that you need to perform to add a new Wireless Clients/BSS rule set. For more information, see [Add a New Wireless Client/BSS Rule Set](#) on page 222.

Configuring Filters

Configure your filters by using logical constructs of AND, OR, and NOT that are available for use when creating and adding multiple filter criteria to your rule. These logical constructs are explained in the topic [Configuring Filters](#) on page 223.

The available filters for BT/BLE devices are:

- BLEType
- DeviceClassification
- DeviceClientType
- DeviceFirstSeen
- DeviceLastSeen
- DeviceMAC
- DeviceManufacturer
- DeviceVendorPrefix
- SignalStrength
- URL
- UUID

Add Actions

Actions are configured from the **Actions** tab. You can specify one or more (up to five (5)) actions that can be performed when the conditions set in the **Filters** tab are met. The valid actions are:

- **Classify Devices** - Classifies devices using the filter(s) to determine which devices are to be classified.
- **Clear active alarm** - Clears any active alarm if the conditions defined in the filter(s) are met.
- **Set Client Type** - Sets the Client Type for BT/BLE devices as defined in the filter(s).
- **Delete Device** - Deletes any device from your system that meets the criteria defined in the filter(s).
- **Email** - Sends an email to the administrator if the conditions defined in the filter(s) are met.

Use the **+** icon to add an action to your Device Action Manager Rule Set. You can add up to five (5) rules for each rule set. Configuration settings will be different for each action. For example, the following is the configuration settings when you select *Email* as your action.

The screenshot shows a configuration window titled 'Rule_1'. At the top, there is a 'Description' field with the text 'Descriptions Tab content' and a small 'x' icon to its right. Below this, there are two tabs: 'Criteria' and 'Actions'. The 'Actions' tab is active and highlighted with a yellow underline. In the 'Actions' tab, there are two action buttons: 'Classify Devi...' and 'Email'. The 'Email' button is highlighted with a yellow border. To the right of the 'Email' button is a blue '+' icon and the text '(limit: 5 actions)'. Below the action buttons, there is a section titled 'Email Notification' with a light blue background. This section contains several fields: 'To:' with a note 'Separate multiple addresses with semicolon', 'From:', 'Subject:', and 'Priority:' which is set to 'MEDIUM' with a dropdown arrow.

Figure 85: Action - Send Email

The send email action enables to send an email when the conditions specified in the **Filters** tab are met. You can send mails to multiple persons with customized subject, priority, and the email from which this mail is supposed to originate.

When you create an action, its name is added to the top of the **Actions** tab.

This screenshot is a smaller version of the one above, showing the 'Rule_1' configuration window with the 'Actions' tab active. It highlights the 'Email' button and the '+' icon with the text '(limit: 5 actions)'.

To delete a specific action, use the small **x** button located to the top right of the action's name in the tab. When you click the button, the action is immediately removed.

Once you have configured your Device Action Manager Rule Set, click the **APPLY** button located to the top right of this window. The rule is saved and is added to the list of Device Action Manager rule sets.

The following image is of a fully configured Device Action Manager Rule Set.

The screenshot shows the 'DEVICE ACTION MANAGER' interface. On the left, a list of rules includes 'Send_Email_On_Device_Sanctioned' (1/100 rules). The main panel shows 'Rule_1' configuration. The 'Description' is 'Send email when device is classified as Sanctioned'. Under the 'Criteria' tab, 'Basic' is selected, and the logic is 'AND'. A single criterion is defined: 'DeviceClassification' is 'IN' 'Sanctioned'. The 'Actions' tab is currently empty.

Figure 86: Example Device Action Manager Rule Set

Classify Device Action

The *Classify Device* action enables you to classify a device into various categories if the conditions specified in the **Filters** tab are met.

The screenshot shows the 'Classify Device' action configuration. The 'Action(s)' tab is active, showing a 'Classify Device' action. The configuration includes a dropdown menu for 'Classify Devices as' set to 'Sanctioned (Inherit profile)'. A note states: 'Devices with Sanctioned (Inherit Profile) classification will inherit all security profiles at device scope level.'

Figure 87: Classify Device Action

Use the **Classify Devices as** drop-down list to select the device's classification. The devices can be classified as:

- Sanctioned (Inherited Profile) - Devices with Sanctioned (Inherit Profile) classification will inherit all security profiles at device scope level.
- Unsanctioned - Devices will be classified as unsanctioned.
- Neighboring - Devices will be classified as neighboring devices.

Hover on the **Classify Device** box to view a synopsis of its configuration.

Clear Active Alarms

The *Clear Active Alarms* action enables you to clear all active alarms in your AirDefense system. This action is performed when the conditions specified in the **Filters** tab are met.

The screenshot shows the 'Clear Active Alarms' action configuration. The 'Action(s)' tab is active, showing a 'Clear active alarm' action. A note states: 'When this action is executed, all active alarms in the system will be cleared.'

Figure 88: Clear Active Alarms Action

There are no configurable parameters for this action.

Set Client Type Action

The *Set Client Type* action enables you to classify a device as a particular client type. This action is performed when the conditions specified in the **Filters** tab are met.

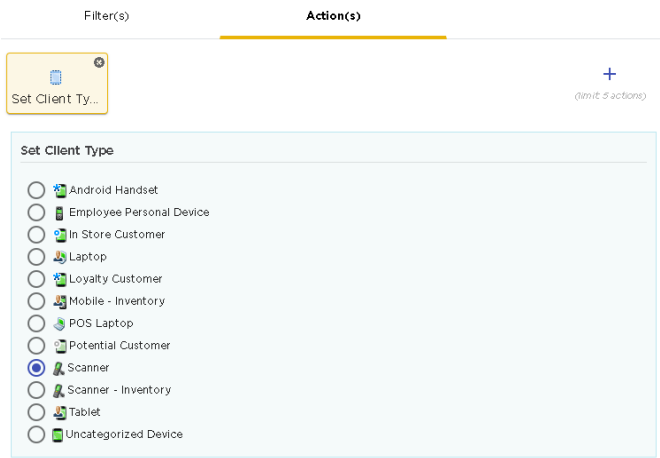


Figure 89: Set Client Type Action

Select the client type to apply to the devices from the list. The items in this list is populated from the **Client Types** screen.

Delete Devices

The *Delete Device* action deletes all devices that meet the conditions specified in the **Filters** tab.

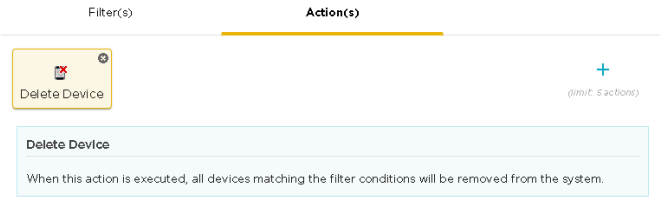


Figure 90: Delete Device Action

There are no configurable parameters for this action.

Email Configuration

The *Email* action enables you to configure the parameters for sending emails when there are some devices that meet the conditions specified in the **Filters** tab.

The screenshot displays the configuration interface for an email action. It features two tabs: 'Filter(s)' and 'Action(s)'. The 'Action(s)' tab is active, showing an 'Email' button with a plus icon and a text '(limit: 5 actions)'. Below this is an 'Email Notification' form with the following fields:

- To:** A text input field with a hint 'Separate multiple addresses with semicolon'.
- From:** A text input field.
- Subject:** A text input field.
- Priority:** A dropdown menu currently set to 'MEDIUM'.

Figure 91: E-Mail Configuration

By default, an empty template is made available for immediate use. Use this empty template to create your first email. To add additional emails, use the green + icon to add a new *Email* action. When you add a new email action, a new block is created for it along with a blank template.

Multiple Emails can be generated for a Device Action Manager rule set.

Hover on the **Email** box to view a synopsis of its configuration.

For each email, provide the following information:

Field	Description
To	The email addresses of the recipients for this email. Add multiple email addresses separated with a semi-colon (;) sign.
From	The email address that is used to send this email. This is the address that will receive any reply mails received from the recipients.
Subject	The subject for this email.
Priority	Use the drop-down list to select the priority of this mail.

Apply or Run the Device Action Manager Rule Sets

Device Action Manager Rule Sets can be run manually or by being applied to your network hierarchy.

When run manually, you can choose the Device Action Manager Rule Sets to run.

When applied to your network using the **Structure & Tags** pane, Device Action Manager Rule Sets are automatically run.

Apply Device Action Manager Rule Sets

Device Action Manager Rule Sets are applied to your network using the **Structure & Tags** pane. The section *Overriding Configuration Settings* in this topic provides a brief description of how permissions and configurations are inherited throughout the AirDefense managed network.

To apply a Device Action Manager Rule Set to any level of the AirDefense network tree, navigate to that level in the hierarchy using the **Structure & Tags** pane.

Select the **Override** option to indicate that you are overriding the inherited configurations starting at this level. The rules that are inherited from this level's parent level are enabled.

Use the option control before each rule to include or exclude it from being applied at this level in the AirDefense hierarchy. These rules will be inherited and applied to all levels that are below this level in the AirDefense hierarchy.

Overriding Configuration Settings

The **Enable Configuration** switch is only available at the top most node of the **Structure & Tags** pane. Configurations can only be applied when this switch is set to *ON*. The top most node is always named *ADSP* and you must use this switch to apply the selected configuration through out the Extreme AirDefense system.

By default, any level in the **Structure & Tags** pane always inherits configuration from the level above it unless explicitly overridden.

Since Extreme AirDefense manages its devices using a hierarchy that is configured using the **Structure & Tags** pane, all the nodes under the top *ADSP* node inherit the configurations set at that node. However, you can override the inherited configuration at any level in the hierarchy.

To override the inherited settings, in the **Structure & Tags** pane, select the node where you want to override the inherited configuration. Then from the  control, select the **Override** option. Note that the **Inherited from :** control always displays the name of the level from which the configuration settings are inherited from. Use this information to orient your self on how the configurations are inherited.

Change the configuration for the selected level as required and then use the **APPLY** button to implement the modified configuration settings. These settings will now be inherited by all levels below the selected level unless a sub-level has been explicitly overridden.

Run Device Action Manager Rule Sets Manually

Device Action Manager Rule Sets can be run manually on demand. Use the  icon located to the top right of the Device Action Manager screen.

The **Action Rules on Demand** dialog displays.

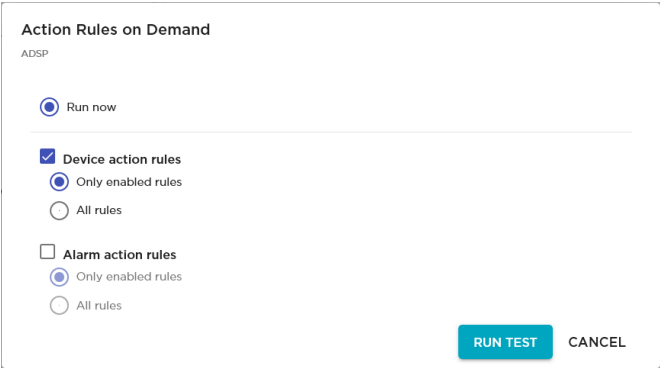



Figure 92: Run Rules On Demand Screen

By default, the **Device action rules** option is selected. Select this option if not selected. You can choose to run only the enabled rules or run all the rules, enabled or disabled. Use the appropriate choice control.

To run the selected rules, click the **RUN TEST** button. On successful completion, a message is displayed. Similarly, if some of your rules fail to execute, an error message is displayed.

Sensor Manager

Use the **Sensor Manager** screen to configure sensor operation mode, channel scan, sensor appliance, and other sensor related settings.

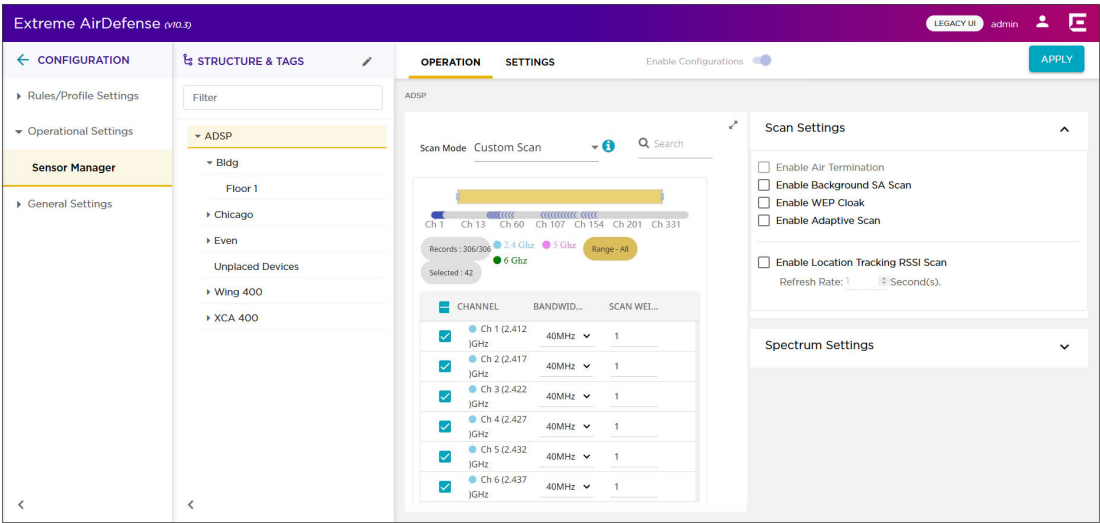

The screen combines the settings that were managed from the **Configuration > Sensor Only Settings** and the **Configuration > Sensor Operation** screens of the legacy user interface.

Operation Tab

The **Sensor Operation** tab of the **Sensor Manager** screen enables you to configure the following parameters.

- Scan Mode - Use the **Scan Mode** control to configure the different scan parameters. For more information, see [Scan Mode Settings](#) on page 252.
- Scan Settings - Use the **Scan Setting** control to configure the various parameters for scanning for devices. For more information, see [Scan Settings](#) on page 628.
- Spectrum Settings - Use the **Spectrum Settings** control to set the threshold values for the two radio bands. For more information, see [Spectrum Settings](#) on page 256.

For more information, see [Operation Tab](#) on page 252.

Settings Tab

The **Settings** tab of the **Sensor Manager** screen enables you to create and manage *Sensor Profiles*. Sensor profiles are a set of sensor configurations that can be applied to any stand-alone sensor (a sensor that is not adopted by any controller) managed by your Extreme AirDefense server. For more information, see [Settings Tab](#) on page 256.

Overriding Configuration Settings

The **Enable Configuration** switch is only available at the top most node of the **Structure & Tags** pane. Configurations can only be applied when this switch is set to *ON*. The top most node is always named *ADSP* and you must use this switch to apply the selected configuration through out the Extreme AirDefense system.

By default, any level in the **Structure & Tags** pane always inherits configuration from the level above it unless explicitly overridden.

Since Extreme AirDefense manages its devices using a hierarchy that is configured using the **Structure & Tags** pane, all the nodes under the top *ADSP* node inherit the configurations set at that node. However, you can override the inherited configuration at any level in the hierarchy.

To override the inherited settings, in the **Structure & Tags** pane, select the node where you want to override the inherited configuration. Then from the  control, select the **Override** option. Note that the **Inherited from :** control always displays the name of the level from which the configuration settings are inherited from. Use this information to orient your self on how the configurations are inherited.

Change the configuration for the selected level as required and then use the **APPLY** button to implement the modified configuration settings. These settings will now be inherited by all levels below the selected level unless a sub-level has been explicitly overridden.

Operation Tab

The following operations can be performed from the **Operation** tab of the **Sensor Manager** screen.

- **Scan Mode** - Use this control to set the channels to scan for unsanctioned devices. Extreme AirDefense provides a comprehensive list of scan modes that you can apply to your Extreme AirDefense managed network.
- **Scan Settings** - Use this control to set the various parameters associated with scanning and other security related settings.
- **Spectrum Settings** - Use this control to set the threshold values for *Advance Spectrum Analysis* In-Line based scans.

Scan Mode Settings


Use the **Scan Mode** control to choose the channels to monitor for rogue devices. Extreme AirDefense provides a set of preconfigured list of channels to scan.

The following pre-configured scan modes are available for use:



- **Default Scan** - This is list of channels that are scanned by default. This list consists of all the standard channels in both the 2.4 GHz and 5.0 GHz bands. This list cannot be edited.
- **Extended Channel Scan** - This list consists of all the standard channels in the 2.4 GHz and 5.0 GHz bands and also includes the extended channels in these bands. This list cannot be edited.
- **Extended and Emergency Channel Scan** - This list consists of all standard, extended, and emergency channels in both the 2.4 GHz and 5.0 GHz bands. This is most comprehensive of all the pre-configured scans. This list cannot be edited.
- **Custom Scan** - This list consists of all standard, extended, and emergency channels in both the 2.4 GHz and 5.0 GHz bands. This list allows you to select those channels that you wish to scan.
- **Channel Lock** - This list enables you to select a particular channel to scan. When selected, the scan is locked to the selected channel.

To set your **Scan Mode** configuration:


1. Select the appropriate **Scan Mode** from the drop-down list.
Depending on the selection, the list of available channels changes.

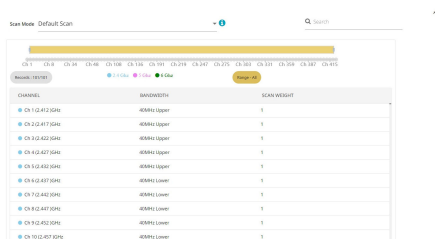

  This control displays the following additional information for your **Scan Mode** selection.

Field	Description																																	
Channel Range Bar	The channel range bar control enables you to narrow down the range of channels to those channels you are interested in.  Use the small rectangular handles at the vertical edges of the bar to narrow down your selection of channels. The number of records shown in the Records control changes to reflect the number of channels that you have selected. The Range control changes to show the radio frequency range of the channels that you have selected.  You can also click and drag the yellow bar to slide the bar within the control. Sliding the bar selects the appropriate channels within the bar's coverage. To reset your channel selection, click the small x located to the right of the Range control. This resets your channel selection immediately.																																	
Records	This control displays the number of records displayed for your current scan mode selection and the number of channels that have been selected based on your filter.																																	
Channel List	This field displays the channels for your current Scan Mode and the filter (if any) that you have applied to narrow down your channel selection. <table><tr><th>CHANNEL</th><th>SCAN WEIGHT</th><th>SCAN WEIGHT</th></tr><tr><td>Ch 1 (2.412 GHz)</td><td>ADMPU Upgrd</td><td>1</td></tr><tr><td>Ch 2 (2.417 GHz)</td><td>ADMPU Upgrd</td><td>1</td></tr><tr><td>Ch 3 (2.422 GHz)</td><td>ADMPU Upgrd</td><td>1</td></tr><tr><td>Ch 4 (2.427 GHz)</td><td>ADMPU Upgrd</td><td>1</td></tr><tr><td>Ch 5 (2.432 GHz)</td><td>ADMPU Upgrd</td><td>1</td></tr><tr><td>Ch 6 (2.437 GHz)</td><td>ADMPU Upgrd</td><td>1</td></tr><tr><td>Ch 7 (2.442 GHz)</td><td>ADMPU Upgrd</td><td>1</td></tr><tr><td>Ch 8 (2.447 GHz)</td><td>ADMPU Upgrd</td><td>1</td></tr><tr><td>Ch 9 (2.452 GHz)</td><td>ADMPU Upgrd</td><td>1</td></tr><tr><td>Ch 10 (2.457 GHz)</td><td>ADMPU Upgrd</td><td>1</td></tr></table> The fields in this control are not editable.	CHANNEL	SCAN WEIGHT	SCAN WEIGHT	Ch 1 (2.412 GHz)	ADMPU Upgrd	1	Ch 2 (2.417 GHz)	ADMPU Upgrd	1	Ch 3 (2.422 GHz)	ADMPU Upgrd	1	Ch 4 (2.427 GHz)	ADMPU Upgrd	1	Ch 5 (2.432 GHz)	ADMPU Upgrd	1	Ch 6 (2.437 GHz)	ADMPU Upgrd	1	Ch 7 (2.442 GHz)	ADMPU Upgrd	1	Ch 8 (2.447 GHz)	ADMPU Upgrd	1	Ch 9 (2.452 GHz)	ADMPU Upgrd	1	Ch 10 (2.457 GHz)	ADMPU Upgrd	1
CHANNEL	SCAN WEIGHT	SCAN WEIGHT																																
Ch 1 (2.412 GHz)	ADMPU Upgrd	1																																
Ch 2 (2.417 GHz)	ADMPU Upgrd	1																																
Ch 3 (2.422 GHz)	ADMPU Upgrd	1																																
Ch 4 (2.427 GHz)	ADMPU Upgrd	1																																
Ch 5 (2.432 GHz)	ADMPU Upgrd	1																																
Ch 6 (2.437 GHz)	ADMPU Upgrd	1																																
Ch 7 (2.442 GHz)	ADMPU Upgrd	1																																
Ch 8 (2.447 GHz)	ADMPU Upgrd	1																																
Ch 9 (2.452 GHz)	ADMPU Upgrd	1																																
Ch 10 (2.457 GHz)	ADMPU Upgrd	1																																

2. On selecting Custom Scan in the **Scan Mode** control, the **Channel List** control becomes editable.

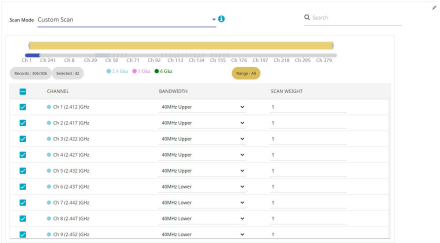


The following fields become available for further configuration.

Field	Description
Channel	This field displays the channel's number and its frequency. This field cannot be changed.
Bandwidth	Use the drop-down list to select the channel's bandwidth. The available bandwidths depend on the channel's frequency.
Scan Weight	This field indicates the number of times the channel is scanned in a scan cycle. A scan cycle is considered complete when each channel in the scan mode is scanned at least once. Note: By default, each channel is scanned for 1 second in each cycle. When this value is set to 1 or more, it indicates the number of times the channel is scanned in a scan cycle. A scan weight of 1 specifies that the selected channel will be scanned once during each scan rotation. A scan weight of 2 specifies that the selected channel will be scanned twice and so forth. The scan sequence is determined by the specified scan weights. All selected channels are initially scanned once during the scan rotation. Any selected channels that have weights of 2 or more are then scanned again at the end of each rotation period for the number of times specified by the weight value. For example, if channels 1, 6, and 11 are assigned scan weights of 1, 2, and 2, the channel scan sequence is 1-6-11-6-11. Another example is: if channels 1, 5, 6, and 11 are assigned scan weights of 2, 1, 3, and 3, then the channel scan sequence is 1-5-6-11-1-6-11-6-11. When this value is set to a value that is < 1, it indicates that the channel must be scanned for the set fraction of a second.

By default, all channels are selected for scanning. You can use the check box next to the **Channel** control to select or unselect all the channels listed in this control. Use the check box next to each channel in this list to either scan or prevent this channel from being scanned in each scan cycle.

3. On selecting Channel Lock in the **Scan Mode** control, the **Channel List** control becomes editable.

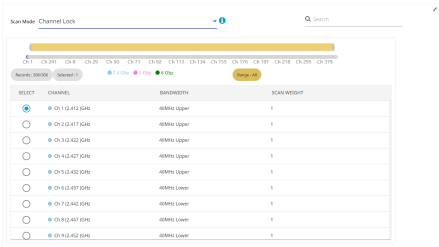


Note
You can only select one channel at a time for this scan mode.

Use the option control next to the channel's name to lock the channel scan to that particular channel. You cannot select multiple channels for this scan mode. The **Width** and **Weight** parameters cannot be modified.

Scan Settings

The settings in the **Scan Settings** control additional scan parameters.

Set the following parameters:

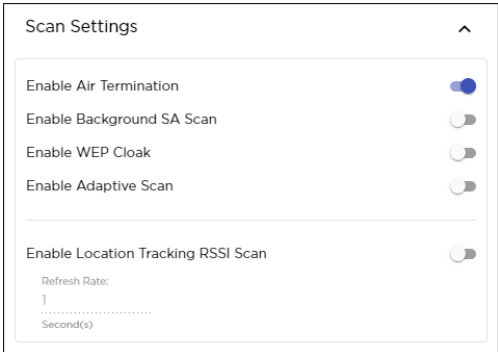

Field	Description
Enable Air Termination	Air Termination lets you terminate the connection between your wireless LAN and any access point or station associated with it. By default, Air Termination is disabled. It can only be enabled in the Appliance Manager.
Enable Background SA Scan	Spectrum Analysis (SA) can be run as a background process. Use this switch to run SA as a background process. By default, background scans are disabled
Enable WEP Cloak	WEP Cloaking is an add-on tool that injects noise into a WEP-protected environment by transmitting frames that appear to be sourced from valid devices but are encrypted with an invalid WEP key. By default, WEP Cloaking is disabled.


Field	Description
Enable Adaptive Scan	Initially scans the selected channels and then adjusts the scan to concentrate on the channels with the most traffic. By default, Adaptive Scan is disabled.
Enable Location Tracking RSSI Scan	Devices can report RSSI scan data to Extreme AirDefense. This option allows you to use that data in location tracking these devices. Once this option is selected, you can adjust the location tracking refresh rate from 1 to 60 seconds in the Refresh Rate control. The optimal rate is 1 second. (You must have a Proximity and Analytics license before this option is visible.)

Spectrum Settings

The **Spectrum Settings** control in the **Sensor Manager** screen controls the *Advanced Spectrum Analysis* (ASA) configuration parameters.

Set the following parameters:

The settings in this control are for the *Advanced Spectrum Analysis In-Line* based scan. They are not for the *Dedicated* scan. Four settings are available for configuration, two (2) each for the 2.4 GHz and 5.0 GHz bands. The values in these fields are the default settings for these bands. These settings will work for normal use and they should not have to be changed.

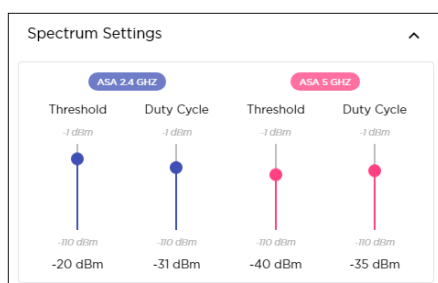

Field	Description
Threshold (dBm)	This is the master level control for ASA scanning. Any signal levels below the threshold during scanning will be dropped. Only levels greater than the threshold will be admitted for further processing.
Duty Cycle (dBm)	Duty cycle is a measure of the percentage (%) of utilization for each frequency. 100% duty cycle for a frequency indicates that the frequency is busy all the time. On the other hand, 0% duty cycle indicates the frequency is not used at all. The Duty Cycle value controls the threshold level for duty cycle measurement. Only signal levels greater than the Duty Cycle threshold are counted in the duty cycle measurement.

Settings Tab

The **Settings** tab of the **Sensor Manager** screen lets you create and manage *Sensor Profiles*. Sensor profiles are a set of sensor configurations that can be applied to any sensor or a group of sensors managed by your Extreme AirDefense server.


Sensor profiles can be created, modified, and deleted using this screen.



Important

These policies are applicable to stand alone, dedicated sensors such as *M520*, *M510*, *AP300*, *M400* and those sensors that support Extreme Networks WiNG 5.3 version and higher firmware.

Select the **Settings** tab to load the **Settings** screen.

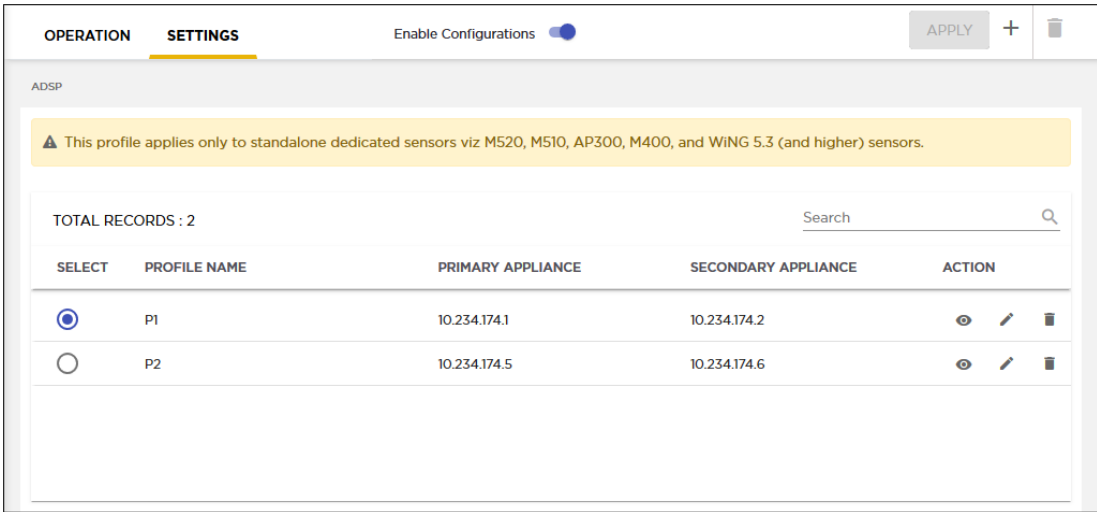

The following information is displayed for each sensor profile.

Field	Description
Select	Use this option control to select the current sensor profile and apply it to the scope selected in the Structure & Tags control.
Profile Name	Displays the name of the sensor profile.
Primary Appliance	Displays the IP address of the primary Extreme AirDefense appliance.
Secondary Appliance	Displays the IP address of the secondary Extreme AirDefense appliance.


Field	Description
Created On	Displays the timestamp when this sensor profile was created.
Actions	The icons in this field enable to manage your sensor profile. You can edit your profile, create a new profile, and delete the profile. The following actions can be performed: • View Profile - Use the  icon to view this sensor profile. For more information, see View Sensor Profile on page 258 • Edit Profile - Use the  icon to edit the sensor profile. A configuration dialog displays where you can edit and update the sensor profile. For more information, see Add a Sensor Profile on page 259. • Delete Profile - Use the  icon to delete the selected sensor profile. For more information, see Delete a Sensor Profile on page 262

View Sensor Profile

To view a sensor profile:

Select the  icon next to the profile that you wish to view.

The profile opens in a dialog.

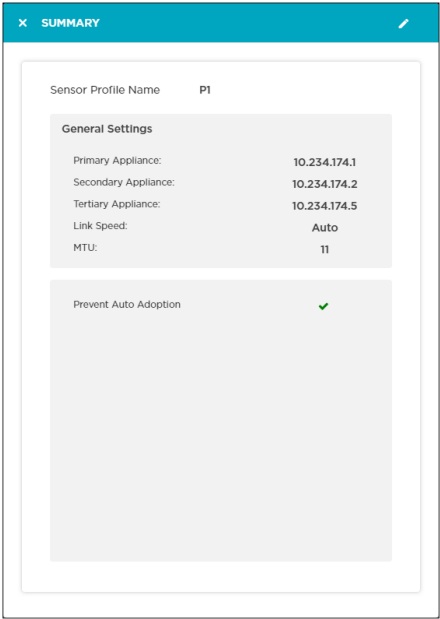


For each profile, the following information is displayed.

Field	Description
Sensor Profile Name	The sensor profile's name.
Primary Appliance	The IP address for the primary Extreme AirDefense appliance. This is the IP address of the Extreme AirDefense server which sensors will attempt connecting to first.
Secondary Appliance	The IP address for the secondary Extreme AirDefense appliance. This is the IP address of the Extreme AirDefense server, which sensors will try connecting to, if the attempt to connect to the <i>Primary Appliance</i> fails.
Tertiary Appliance	The IP address for the tertiary Extreme AirDefense appliance. This is the IP address of the Extreme AirDefense server, which sensors will try connecting to, when attempts to connect to the <i>Primary Appliance</i> and the <i>Secondary Appliance</i> fail.
Link Speed	The link speed for the Ethernet interface. This value can be one of auto negotiate (default), 10Mbps (Full Duplex or Half Duplex), or 100Mbps (Full Duplex or Half Duplex).
MTU	The <i>Maximum Transmission Unit</i> value for your interface.
Prevent Auto Adoption	Displays a green check mark when enabled. Displays a red 'x' mark when disabled. When enabled, auto adoption of sensors is prevented.

Add a Sensor Profile

Sensor profiles are a set of sensor configurations that can be applied to a sensor or a group of sensors.

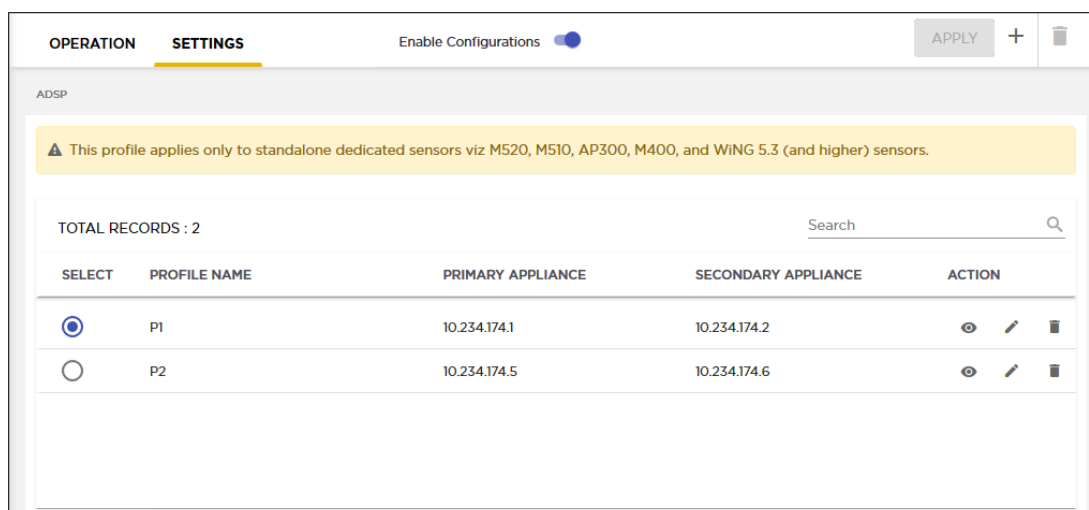

To add a new sensor profile:

1. From the **Settings** screen, select the  icon located to the top right. The **Sensor Profile** dialog displays.

×

SENSOR PROFILE

CREATE

Name

Primary Appliance:

Secondary Appliance:

Tertiary Appliance:

Sensor Admin Password:

Sensor Monitor Password:

Link Speed

Auto

MTU:

☒ Prevent Auto Adoption

2. Provide the following information to create a new sensor profile:

Field	Description
Name	Provide a meaningful name for the sensor profile. You should name your profile such that it is easy to identify the profile from among similar profiles.
Primary Appliance	Provide the IP address for the primary Extreme AirDefense appliance. This is the IP address of the Extreme AirDefense server which the sensors will attempt connecting to first.
Secondary Appliance	Provide the IP address for the secondary Extreme AirDefense appliance. This is the IP address of the Extreme AirDefense server, which sensors will attempt to connect to, if the attempt to connect to the <i>Primary Appliance</i> fails.
Tertiary Appliance	Provide the IP address for the tertiary Extreme AirDefense appliance. This is the IP address of the Extreme AirDefense server, which sensors try connecting to, when attempts to connect to the <i>Primary Appliance</i> and the <i>Secondary Appliance</i> fail.
Sensor Admin Password	Enter the password to the account that has <i>Sensor Administration</i> privilege on your sensors. This is a mandatory field.
Sensor Monitor Password	Enter the password to the account that has <i>Sensor Monitoring</i> privilege on your sensors.
Link Speed	Select the link speed. <i>Link Speed</i> control enables you to set the Ethernet interface to one of auto negotiate (default), fix interface speeds to 10Mbps (Full Duplex or Half Duplex), or to fix interface speeds to 100Mbps (Full Duplex or Half Duplex). Use the drop-down list to select the link speed.
MTU	Sets the <i>Maximum Transmission Unit</i> value for your interface. Use the spinner control to set the MTU value.
Prevent Auto Adoption	Select this option to prevent a sensor from being adopted by a switch.

3. Select the **CREATE** button located to the top right of this dialog to save your sensor profile.
4. Select the small 'x' icon to the top left of the dialog to close it.

Edit a Sensor Profile

Sensor profiles are a set of sensor configurations that can be applied to a sensor or a group of sensors.

The screenshot shows the 'SETTINGS' tab in the ADSP interface. At the top, there's a toggle for 'Enable Configurations' and an 'APPLY' button. Below this is a yellow warning banner: 'This profile applies only to standalone dedicated sensors viz M520, M510, AP300, M400, and WING 5.3 (and higher) sensors.' Below the banner is a table with the following data:

TOTAL RECORDS : 2				
SELECT	PROFILE NAME	PRIMARY APPLIANCE	SECONDARY APPLIANCE	ACTION
☒	P1	10.234.174.1	10.234.174.2	
☐	P2	10.234.174.5	10.234.174.6	

To edit an existing sensor profile:

1. From the **Settings** screen, select the sensor profile to edit.
2. Select the icon to edit the selected sensor profile.

The **Sensor Profile** dialog displays.

The screenshot shows the 'SENSOR PROFILE' dialog. It has a title bar with a close button (X) and an 'UPDATE' button. The form contains the following fields:

- Name: P1
- Primary Appliance: 10.234.174.1
- Secondary Appliance: 10.234.174.2
- Tertiary Appliance: 10.234.174.5
- Sensor Admin Password: (masked with dots)
- Sensor Monitor Password: (masked with dots)
- Link Speed: Auto
- MTU: 10
- ☒ Prevent Auto Adoption


3. Modify the required fields.

For more information on the fields of this screen, see [Add a Sensor Profile](#) on page 259

- 4. Select the **UPDATE** button located to the top right of this dialog to save your modified sensor profile.
- 5. Select the small 'x' icon to the top left of the dialog to close it.

Delete a Sensor Profile


Sensor profiles are a set of sensor configurations that can be applied to a sensor or a group of sensors.

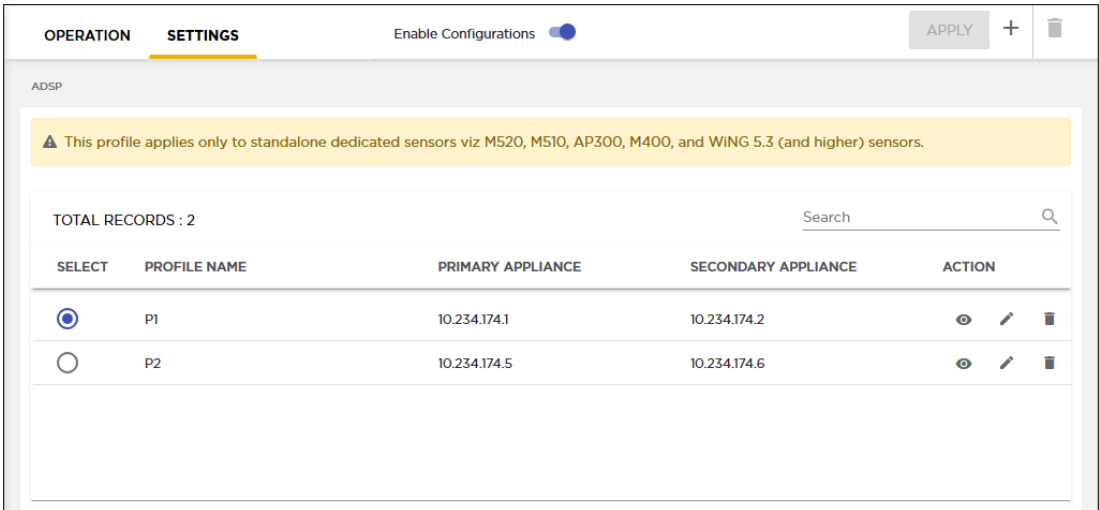

To delete a sensor profile:

- 1. From the **Settings** screen, select the sensor profile to edit.
- 2. Select the icon to delete the selected sensor profile.

The **Delete Sensor Profile** dialog displays.

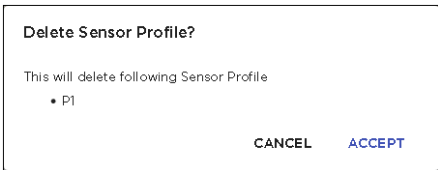

- 3. Review the information displayed in this dialog.
- 4. Select **ACCEPT** button to delete the selected sensor profile.

Alarm Configuration

The **Alarm Configuration** screen lists all the alarms that are generated within the Extreme AirDefense system. Alarms are broadly classified into the following categories. Some of these categories are further sub divided.

- Anomalous Behavior
- Bluetooth
- Exploits
- Infrastructure
- Performance

- Platform Health
- Policy Compliance
- Proximity
- Reconnaissance
- Rogue Activity
- Vulnerabilities

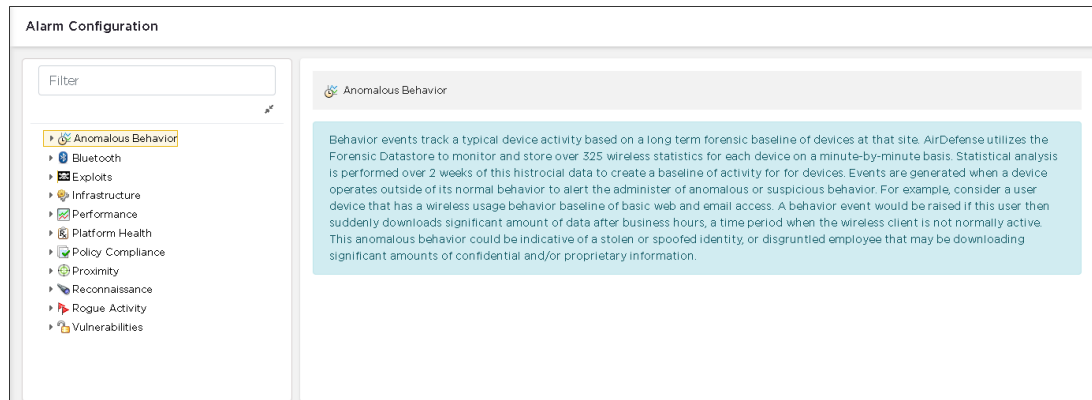


Figure 93: Alarm Configuration Screen

A detailed description of the alarm category is displayed for each category or sub-category of alarms in the right pane.

Use the  icon located before each category to expand that category and to view the alarms under that category.

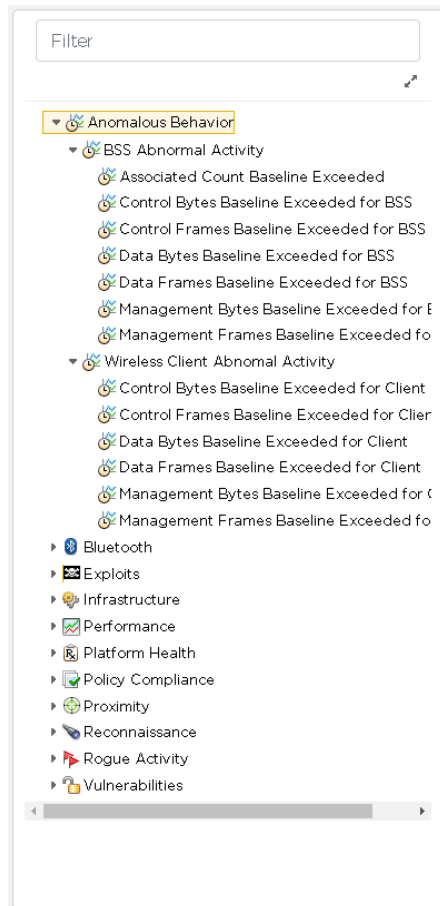


Figure 94: Expanded Alarm Category

Select an alarm to view its configuration fields in the **Alarm Configuration Screen**. Each alarm has its own set of parameters that can be modified to meet your requirements. The following is the set of configuration for the **Anomalous Behaviour > BSS Abnormal Activity > Associated Count Baseline Exceeded** alarm.

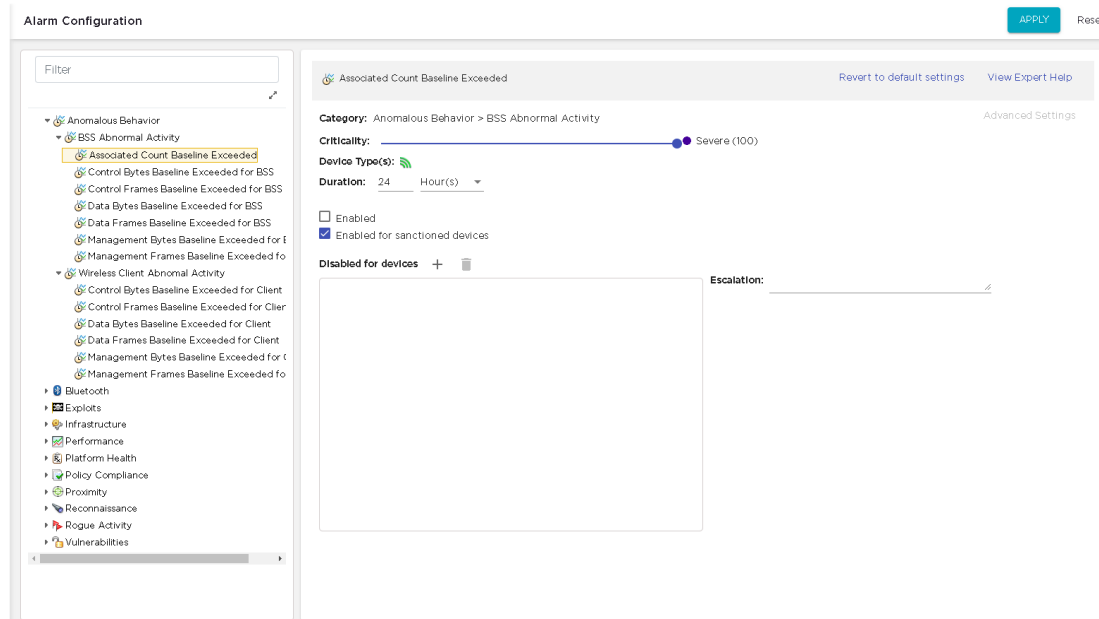


Figure 95: Alarm Configuration Settings

Use the **Revert to default settings** link to revert the configuration of the alarm to its defaults. Use this link in case you are not satisfied with the current settings for this particular alarm.

Use the **View Expert Help** link to view in-depth information for this alarm. When selected, the alarm's details are displayed in a separate browser tab or window. The following is the **Expert Help** screen for the **Anomalous Behaviour > BSS Abnormal Activity > Associated Count Baseline Exceeded** alarm.

AirDefense Services Platform

Associated Count Baseline Exceeded

- [Description](#)
- [Investigation](#)
- [Mitigation](#)

While AirDefense Enterprise is monitoring all wireless devices operating in the airspace, it is collecting 300 wireless data statistics per device every minute and storing them in the intelcenter's datastore. This collected information is then used to create a behavioral baseline for each of these devices that is always based upon the device's wireless activity from the last four weeks. The baseline will then be used as a reference to detect any abnormal activity that falls outside the realm of the device's expected wireless behavior. Deviations from the baseline will result in the generation of a behavior.

Reason for abnormal behavior include:

Wireless activity outside of typical working hours

Excessive data transmissions -- Significant transfer of information from or to the wired network.

Client Software/Hardware issues. Unusual management frame transmissions from a device may be the result of malfunctioning hardware or software.

Figure 96: Expert Help

To save the changes made to an alarm's configuration, use the **APPLY** button located to the top right of the screen. The alarm's configuration is immediately updated.

The **Reset** button located next to the **APPLY** button is used to revert any changes that you have made to the alarm's configuration. The previous settings are restored. This

action is different from the **Revert to default settings** action, where the alarm's default configuration is restored.

Wired Network Monitoring

Wired Network Monitoring is used to monitor the wired network devices in your Extreme AirDefense monitored system. Use this screen to generate generate alarms for your wired network by selecting any of the following conditions:

- New device detected on the wired network - This option is enabled by default. When selected, an alarm is generated when a new device is detected on the wired side of your Extreme AirDefense managed network.

Using the **Known Vendors** button, you can select the wired equipment vendors of devices that are commonly used in your network. When a device of a vendor found in the list is added to the wired network, the system will generate an alarm of lower severity than that is normally generated.

- Sanctioned wired device detected at different location in tree hierarchy than when originally discovered - Select this option to generate an alarm when a device has moved to a different location in your Extreme AirDefense tree hierarchy from where it was originally discovered when it was first added to the system.
- Sanction device no longer observed. - Select this option to generate an alarm when a sanctioned device is not observed in your wired network. You must specify a minimum time for the device to have not been seen on your network for this alarm to be generated. Use the **Minimum not seen time** control and its associated spinner control to set the time duration.

To detect new devices on your network, existing devices must be classified as sanctioned. Use the **Mass Wired Network Device Classification** button to open a dialog where you can sanction all or a selection of devices at one time. It is recommended that this process should be done when you initially configure policies or after major network changes.

Wired Network Monitoring ADSP

Enable Configurations ☒ APPLY Reset

Alarm Generation Policy

☒ New device detected on the wired network

Define Known Vendors: Known Vendors

(New devices detected on known vendor list generate lower severity events)

☐ Sanctioned wired device detected at different location in tree hierarchy than when originally discovered

☐ Sanctioned device no longer observed

Minimum not seen time 1 Hour(s)

Wired Device Classification

To detect new devices on the network existing devices must be classified as known or sanctioned. The button below allows mass classification of the network devices. Typically this process should be done on initial policy assignment or after major network changes. Wired network devices can also be marked as sanctioned in the network tab.

Classify Devices: Mass Wired Network Device Classification

Set Network PCI Scope

Figure 97: Wired Network Monitoring Screen

It is recommended to enable **Wired Network Monitoring** at the appliance level by selecting the **Enable Configurations** switch. When you do, all the other network levels are also monitored.

If you need to monitor a specific level in your Extreme AirDefense hierarchy, navigate to the level in the **Structure & Tags** pane and select it. Use the

☐ Override ☒ Inherit from: ADSP control's **Override** option to monitor this level and all the levels below it. Customize the monitoring options to meet your requirements.

For more information on overriding, see the section *Overriding Configuration Settings* in this document.

Network PCI Compliance Monitoring

Use the **Set Network PCI Scope** button to add VLANs to be monitored for PCI compliance. When this button is selected, the **Network PCI Scope** screen displays.

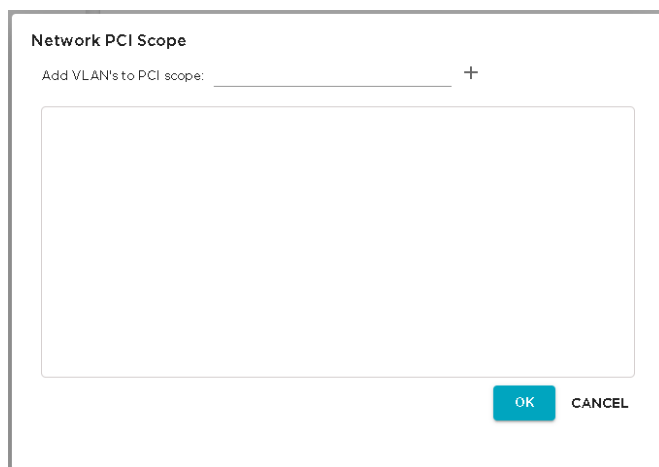
The image shows a dialog box titled "Network PCI Scope". Inside the dialog, there is a text input field labeled "Add VLAN's to PCI scope:" followed by a plus sign icon. Below the input field is a large, empty rectangular box, likely for a list of added VLANs. At the bottom right of the dialog, there are two buttons: "OK" and "CANCEL".

Figure 98: Network PCI Compliance Screen

Use the **Add VLANs to PCI scope** field to enter the VLAN that has to be monitored.

Select the **+** icon next to this field to add this VLAN to the list below. You can add multiple VLANs to monitor for PCI compliance. Once you have added all the VLANs, click the **OK** button to save your changes.

Overriding Configuration Settings

The **Enable Configuration** switch is only available at the top most node of the **Structure & Tags** pane. Configurations can only be applied when this switch is set to *ON*. The top most node is always named *ADSP* and you must use this switch to apply the selected configuration through out the Extreme AirDefense system.

By default, any level in the **Structure & Tags** pane always inherits configuration from the level above it unless explicitly overridden.

Since Extreme AirDefense manages its devices using a hierarchy that is configured using the **Structure & Tags** pane, all the nodes under the top *ADSP* node inherit the configurations set at that node. However, you can override the inherited configuration at any level in the hierarchy.

To override the inherited settings, in the **Structure & Tags** pane, select the node where you want to override the inherited configuration. Then from the ☐ Override ☒ Inherit from: ADSP control, select the **Override** option. Note that the **Inherited from :** control always displays the name of the level from which the configuration settings are inherited from. Use this information to orient your self on how the configurations are inherited.

Change the configuration for the selected level as required and then use the **APPLY** button to implement the modified configuration settings. These settings will now be inherited by all levels below the selected level unless a sub-level has been explicitly overridden.

Performance Profile

Performance Profiles are used to create network performance threshold policies for BSSs and wireless clients on your wireless LAN. When a Performance Profile is applied to your system, a performance alarm is generated if the performance thresholds for that profile are exceeded. If there are no Performance Profiles applied to your system, no performance alarms are generated.



Note
You should monitor new ADSP deployments for several weeks to determine normal network activity before configuring Performance Profiles.

Performance Profiles are managed from the **Performance Profile** screen.

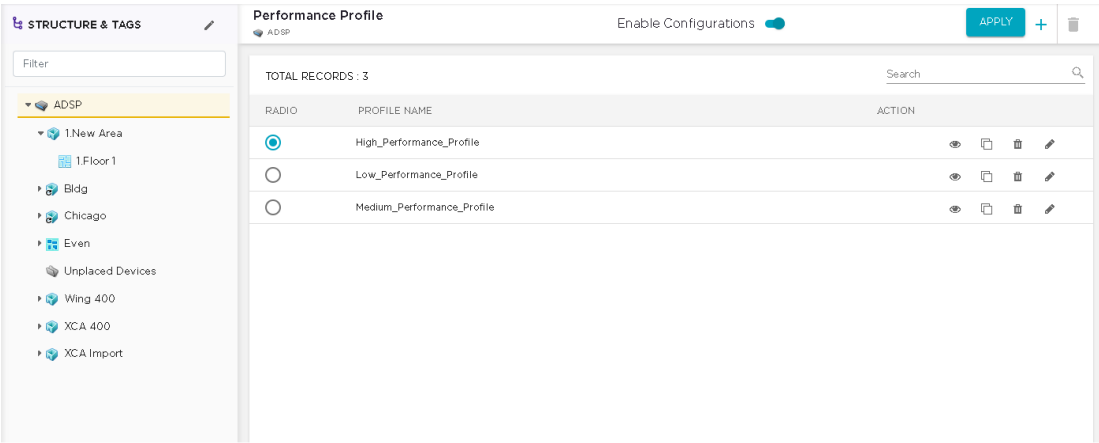


Figure 99: Performance Profile Screen

View Performance Profile

Use the **Performance Profile** screen to view a list of all performance profiles configured for this Extreme AirDefense system.

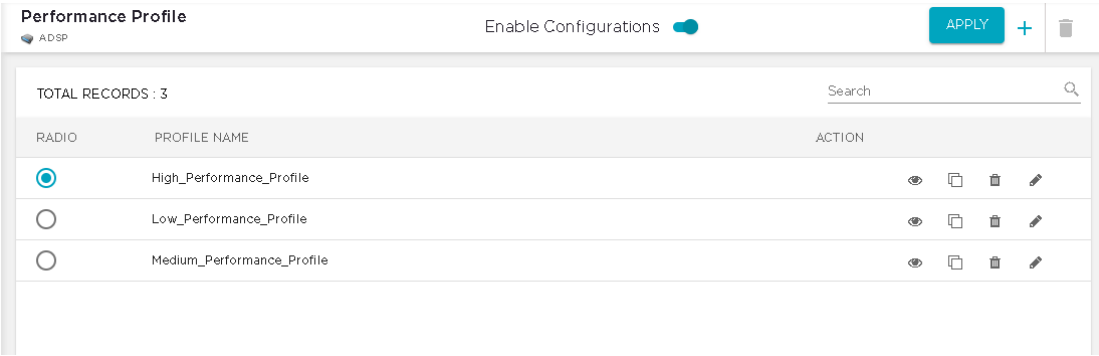


Figure 100: Performance Profiles Screen

The screen displays the following information:

Field	Description
Profile Name	The name of the Performance Profile.
Action	The actions that can be performed on the Performance Profile. The icons in this field enable you to manage your profile. You can edit the profile, create a new one by creating a duplicate of an existing rule set, or delete it. The following actions can be performed: • View - To view a Performance Profile, use the  icon for the profile. The details for this profile is displayed in a separate dialog. • Duplicate - Use the  icon to create a duplicate of the selected Performance Profile. A duplicate of this profile is created and the configuration dialog displays the newly created Performance Profile. Customize the duplicate profile further to meet your requirements. • Delete - Use the  icon to delete the selected Performance Profile. • Edit - Use the  to edit the Performance Profile. A configuration dialog displays where you can make changes to the selected profile.

Add Performance Profile

A Performance Profile is a set of parameters the define the threshold of performance of the BSS and wireless devices in your Extreme AirDefense system. A performance alarm is generated if the performance threshold for the selected profile are exceeded. No alarms are generated if no Performance Profiles are applied to your system.

New Performance Profiles are created from the **Performance Profiles** screen. Use the  icon to add a new Performance Profile. The same screen is also used to edit an existing profile.

PERFORMANCE PROFILE APPLY

General Cumulative Wireless Clients BSS

Profile Name: X

Short Slot Time Enabled: ☐

Allow Streaming Traffic: ☐

Protection Mode Enabled: ☐

Figure 101: Performance Profile Screen

Define your Performance Profile using the **General**, **Cumulative**, **Wireless Clients**, and **BSS** tabs. Once you have defined your Performance Profile, click the **APPLY** button to save your profile. Use the small **X** button to the top left of this screen to exit without saving the profile.

All profiles have four tabs that are used to set performance threshold policies for your system:

- **General** - Names your Performance Profile and specifies whether or not you want to:
 - Use a short time slot
 - Allow streaming traffic
 - Enable protection mode.
- **Cumulative** - Assigns thresholds to network characteristics for all wireless clients and traffic in the APs BSS (Basic Service Set). ADSP generates an alarm if any of the thresholds are exceeded.
- **Wireless Clients** - Assigns thresholds that apply to any individual wireless client in the APs BSS and will typically be lower than the aggregate wireless client thresholds. ADSP generates an alarm if any single wireless client reaches one of these thresholds. From these alarms, you can identify the high bandwidth users, and the times they are using the network. You should base wireless client thresholds on either the normal transmission rate for your wireless LAN, or on arbitrary numbers designed to detect your high-bandwidth users.
- **BSS** - Assigns thresholds for transmitting data to/from BSSs. ADSP generates an alarm if any of the thresholds are exceeded.

General Tab

Use the **General Tab** of the **Performance Profile** screen to configure some basic settings for this Performance Profile.

The screenshot shows the 'PERFORMANCE PROFILE' configuration screen with the 'General' tab selected. The 'Profile Name' is 'New_Performance_Profile(2)'. Below it, there are three toggle switches: 'Short Slot Time Enabled', 'Allow Streaming Traffic', and 'Protection Mode Enabled', all of which are currently turned off.

Figure 102: General Tab

Configure the following parameters:

Field	Description
Short Time Slot Enabled	Use the switch to allow or disable the Short Time Slot capability as advertised in the Beacon, which when used on a pure 802.11g deployment, improves WLAN throughput by reducing wait time for transmitter to assure clear channel assessment.
Allow Streaming Traffic	Use the switch to allow or block Streaming traffic in the wireless environment, such as video or audio traffic in wireless environment. It applies only to un-encrypted wireless traffic. Warning: Streaming traffic applications consume large bandwidth and can adversely impact all other Wireless Clients connected on the Wireless LAN.
Protection Mode Enabled	Use the switch to allow or prevent Protection Mode operation to be advertised in Beacon or Probe response. Protection Mode operation is used to support mixed-mode operation of 802.11b/g protocols. Warning: Use of Protection Mode in an 802.11g device can degrade the performance of the wireless network by introducing overhead to the network.

Cumulative Tab

Use the **Cumulative** tab to configure threshold to network characteristics for all wireless clients and traffic in the access point BSS (Basic Service Set).



Note

Entering 0 (zero) as a threshold value disables alarm-generation for that particular threshold.

×

PERFORMANCE PROFILE

APPLY

General

Cumulative

Wireless Clients

BSS

New Associations: 0

Total Associations: 0

Data Frames Seen: 0

Management Frames Seen: 0

Control Frames Seen: 0

Association Frames Seen: 0

Disassociation Frames Seen: 0

80211 Authentication Frames Seen: 0

8021x Authentication Frames Seen: 0

Deauthentication Frames Seen: 0

Probe Requests Seen: 0

Wired to Wireless Traffic %: Percent: 0 Min Frame: 0

Wireless to Wired Traffic %: Percent: 0 Min Frame: 0

Wireless station to station Traffic %: Percent: 0 Min Frame: 0

Wired station to station Traffic %: Percent: 0 Min Frame: 0

Low Speed Frames %: Percent: 0 Min Frame:

Layer 3 Multicast Frames %: Percent: 0 Min Frame: 0

Layer 3 Broadcast Frames %: Percent: 0 Min Frame: 0

Retransmission Frames %: Percent: 0 Min Frame: 0

PS Poll Frames Seen: 0

Figure 103: Cumulative Tab

Configure the following thresholds:

Threshold	Description
New Associations	Enter the maximum number of new associations per minute Extreme AirDefense will allow between a BSS and all Wireless Clients combined. Default = 20. Generally, this number should be low. Your Wireless Clients should associate with a BSS once in the morning when users log on, and rarely after that. In some cases, if the threshold value represents the actual number of Wireless Clients in a BSS, an alarm will be generated if the BSS goes off-line, forcing the Wireless Clients to re-associate with it. In no case should this value be greater than the actual number of Wireless Clients in a BSS. If the signal strength between a Wireless Client and a BSS is very low, the Wireless Client may repeatedly lose connectivity and then reconnect, increasing the number of associations per minute.
Total Associations	Enter the total number of Wireless Clients allowed to associate at any one time with a BSS. This number should reflect your actual number of Wireless Clients. Extreme AirDefense generates an alarm if it detects a greater number, assuming that the extra associations are made by hackers. Default = 15.
Data Frames Seen	Enter the maximum number of data frames per minute allowed to be transmitted from all Wireless Clients combined. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
Management Frames Seen	Enter the maximum number of management frames per minute allowed to be transmitted from all Wireless Clients combined. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
Control Frames Seen	Enter the maximum number of control frames per minute allowed to be transmitted from all Wireless Clients combined. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
Association Frames Seen	Enter the maximum number of association frames allowed to be transmitted or received from all Wireless Clients. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
Disassociation Frames Seen	Enter the maximum number of disassociation frames allowed to be transmitted or received from all Wireless Clients. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.

Threshold	Description
802.11 Authentication Frames Seen	Enter the maximum number of 802.11 authentication frames allowed to be transmitted or received from all Wireless Clients. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
802.1x Authentication Frames Seen	Enter the maximum number of 802.1x authentication frames allowed to be transmitted or received from all Wireless Clients. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
Deauthentication Frames Seen	Enter the maximum number of de-authentication frames allowed to be transmitted or received from all Wireless Clients. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
Probe Requests Seen	Enter the maximum number of probe requests allowed to be transmitted or received from all Wireless Clients. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
Wired to Wireless Traffic %	Enter the maximum percentage of data, per minute, allowed into a BSS from the wired portion of your network. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 60. Use the Min Frame control set the minimum number of frames for this threshold.
Wireless to Wired Traffic %	Enter the maximum percentage of data per minute allowed out of a BSS to a wired portion of your network. If Extreme AirDefense detects a greater number, it generates an alarm. Use the Min Frame control set the minimum number of frames for this threshold. Default = 60.
Wireless station to station Traffic %	Enter the maximum percentage of data per minute allowed to be transmitted within the BSS from all Wireless Clients. If Extreme AirDefense detects a greater number, it generates an alarm. Use the Min Frame control set the minimum number of frames for this threshold. Default = 50.

Threshold	Description
Wired station to station Traffic %	Enter the maximum percentage of data per minute allowed to be transmitted from a wired portion of the network to another wired portion of the network, using an AP as a bridge. If Extreme AirDefense detects a greater number, it generates an alarm. Use the Min Frame control set the minimum number of frames for this threshold. Default = 1.
Low Speed Frames %	802.11 protocols operate on a shared medium and use collision avoidance mechanism to access this medium. Excessive use of lower rates for transmitting frames is likely caused by stations which are either misconfigured to use lower rates or are too far from the APs to be able to support higher rates and cause alarms to be generated. Enter the maximum percentage of data per minute allowed for low speed frames to be transmitted or received from all stations. If Extreme AirDefense detects a greater number, it generates an alarm. Use the Min Frame control set the minimum number of frames for this threshold. Default = 0.
Layer 3 Multicast Frames %	An alarm that is generated when the system has detected a high percentage of multicast traffic violating the policy thresholds. This may be a result of potential Layer 3 broadcast storm attacks on the network. Enter the maximum percentage of data per minute allowed for multicast frames to be transmitted or received within a BSS from all stations. If Extreme AirDefense detects a greater number, it generates an alarm. Use the Min Frame control set the minimum number of frames for this threshold. Default = 0.
Layer 3 Broadcast Frames %	An alarm that is generated when the system has detected a high percentage of broadcast traffic violating the policy thresholds. This may be a result of potential Layer 3 broadcast storm attacks on the network. Enter the maximum percentage of data per minute allowed for broadcast frames to be transmitted or received within a BSS from all stations. If Extreme AirDefense detects a greater number, it generates an alarm. Use the Min Frame control set the minimum number of frames for this threshold. Default = 0.

Threshold	Description
Retransmission Frames %	Enter the maximum percentage of retransmitted data frames allowed during a transmission of data within a BSS from all stations. If Extreme AirDefense detects a greater number, it generates an alarm. Use the Min Frame control set the minimum number of frames for this threshold. Default = 0.
PS Poll Frames Seen	An alarm is generated by a DOS attack using an excessive number of PS-POLL frames have been detected. Enter the maximum number of PS Poll frames to be seen within a BSS. If Extreme AirDefense detects a greater number, it generates an alarm.Default = 0.

Wireless Clients

Use the **Wireless Clients** tab to configure thresholds for any wireless client. These thresholds will typically be lower than the aggregate Wireless Client thresholds. Extreme AirDefense generates an alarm if any single Wireless Client reaches one of these thresholds. From these alarms, you can identify the high bandwidth users, and the times they are using the network. You should base Wireless Client thresholds on either the normal transmission rate for your wireless LAN, or on arbitrary numbers designed to detect your high-bandwidth users.



Note

Entering 0 (zero) as a threshold value disables alarm generation for that particular threshold.

× PERFORMANCE PROFILE
 APPLY

General
Cumulative
Wireless Clients
BSS

Data Frames Sent:

Data Frames Received:

Management Frames Sent:

Management Frames Received:

Control Frames Sent:

Control Frames Received:

Fragment Frames Sent:

Association Frames Sent:

Disassociation Frames Sent:

80211 Authentication Frames Sent:

8021x Authentication Frames Sent:

Deauthentication Frames Sent:

Probe Request Sent:

Retransmission Frames Sent %: Percent: Min Frame:

Figure 104: Wireless Client Tab

Configure the following thresholds:

Threshold	Description
Data Frames Sent	Enter the maximum number of data frames per minute any Wireless Client is allowed to transmit. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
Data Frames Received	Enter the maximum number of data frames per minute any Wireless Client is allowed to receive. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
Management Frames Sent	Enter the maximum number of management frames per minute any Wireless Client is allowed to transmit. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0. Management frames carry information related to negotiating network connections. If many more Management frames per minute than usual are detected, this could indicate a malicious disassociation or other form of Denial-of-Service attack.

Threshold	Description
Management Frames Received	Enter the maximum number of management frames per minute any Wireless Client is allowed to receive. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
Control Frames Sent	Enter the maximum number of control frames per minute any Wireless Client is allowed to transmit. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
Control Frames Received	Enter the maximum number of control frames per minute any Wireless Client is allowed to receive. If Extreme AirDefense detects a greater number, an alarm is generated. Default = 0. Control frames carry information about negotiating the 802.11 protocol for getting data onto the airwaves, and are transmitted at only 1 Mbs. Unusually high numbers of Control frames may indicate bandwidth and network problems.
Fragment Frames Sent	Enter the maximum number of fragment frames per minute that are allowed from any Wireless Client. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 1.
Association Frames Sent	Enter the maximum number of association frames allowed to be transmitted from all Wireless Clients. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
Disassociation Frames Sent	Enter the maximum number of disassociation frames allowed to be transmitted from all Wireless Clients. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
802.11 Authentication Frames Sent	Enter the maximum number of 802.11 authentication frames allowed to be transmitted from all Wireless Clients. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
802.1x Authentication Frames Sent	Enter the maximum number of 802.1x authentication frames allowed to be transmitted from all Wireless Clients. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.

Threshold	Description
Deauthentication Frames Sent	Enter the maximum number of deauthentication frames allowed to be transmitted from all Wireless Clients. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
Probe Responses Sent	Enter the maximum number of probe requests allowed to be transmitted from all Wireless Clients. If Extreme AirDefense detects a greater number, it generates an alarm. Default = 0.
Retransmission Frames Sent %	Enter the maximum percentage of data per minute that a station can retransmit as frames. If Extreme AirDefense detects a greater number, it generates an alarm. Use the Min Frame control set the minimum number of frames for this threshold. Default = 0.

BSS Tab

Use the **BSS** tab to configure thresholds for data transmission to/from BSSs.

PERFORMANCE PROFILE APPLY

General Cumulative Wireless Clients **BSS**

Data Frames Sent: 0

Data Frames Received: 0

Management Frames Sent: 0

Management Frames Received: 0

Control Frames Sent: 0

Control Frames Received: 0

Fragment Frames Sent: 0

Association Frames Sent: 0

Disassociation Frames Sent: 0

80211 Authentication Frames Sent: 0

8021x Authentication Frames Sent: 0

Deauthentication Frames Sent: 0

Probe Request Sent: 0

Minimum Beacon Frames to be Sent: 0

Retransmission Frames Sent %: Percent: 0 Min Frame: 0

Figure 105: BSS Tab



Note

Entering 0 (zero) as a threshold value disables alarm generation for that particular threshold.

Configure the following thresholds:

Threshold	Description
Data Frames Sent	Enter the maximum number of data frames per minute this BSS is allowed to transmit. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Data Frames Received	Enter the maximum number of data frames per minute BSSs are allowed to receive. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Management Frames Sent	Enter the maximum number of management frames per minute BSSs are allowed to transmit. If AirDefense detects a greater number, it generates an alarm. Default = 20,000.
Management Frames Received	Enter the maximum number of management frames per minute BSSs are allowed to receive. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Control Frames Sent	Enter the maximum number of control frames per minute BSSs are allowed to transmit. If AirDefense detects a greater number, it generates an alarm. Default = 20,000.
Control Frames Received	Enter the maximum number of control frames per minute BSSs are allowed to receive. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Fragment Frames Sent	Enter the maximum number of fragment frames per minute BSSs may see before generating an alarm. Default = 1.
Association Frames Sent	Enter the maximum number of association frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Disassociation Frames Sent	Enter the maximum number of disassociation frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
802.11 Authentication Frames Sent	Enter the maximum number of 802.11 authentication frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.

Threshold	Description
802.1x Authentication Frames Sent	Enter the maximum number of 802.1x authentication frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Deauthentication Frames Sent	Enter the maximum number of de-authentication frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Probe Responses Sent	Enter the maximum number of probe responses allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Minimum Beacon Frames to be Sent	Enter the minimal number of beacon frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number it generates an alarm.
Retransmission Frames Sent %	Enter the maximum percentage of data per minute that a station can retransmit as frames. If AirDefense detects a greater number, it generates an alarm. Default = 0.

Apply Performance Profile

It is recommended to apply the Performance Profile at the appliance level by selecting the **Enable Configuration** switch.

If you need to apply a different Performance Profile at a specific level in your Extreme AirDefense hierarchy, navigate to the level in the **Structure & Tags** pane and select

it. Use the  control's **Override** option to apply the alternate Performance Profile.

For more information see the section *Overriding Configuration Settings* in this document.

Overriding Configuration Settings

The **Enable Configuration** switch is only available at the top most node of the **Structure & Tags** pane. Configurations can only be applied when this switch is set to *ON*. The top most node is always named *ADSP* and you must use this switch to apply the selected configuration through out the Extreme AirDefense system.

By default, any level in the **Structure & Tags** pane always inherits configuration from the level above it unless explicitly overridden.

Since Extreme AirDefense manages its devices using a hierarchy that is configured using the **Structure & Tags** pane, all the nodes under the top *ADSP* node inherit the

configurations set at that node. However, you can override the inherited configuration at any level in the hierarchy.

To override the inherited settings, in the **Structure & Tags** pane, select the node where you want to override the inherited configuration. Then from the ☐ Override ☒ Inherit from: ADSP control, select the **Override** option. Note that the **Inherited from** : control always displays the name of the level from which the configuration settings are inherited from. Use this information to orient your self on how the configurations are inherited.

Change the configuration for the selected level as required and then use the **APPLY** button to implement the modified configuration settings. These settings will now be inherited by all levels below the selected level unless a sub-level has been explicitly overridden.

Environment Monitoring

Use the **Environment Monitoring** screen to monitor the local RF environment. If one of the configured threshold exceeds, an alarm is generated. You can also choose to monitor your Extreme AirDefense system for unobserved devices and also generate alarms for missing devices.

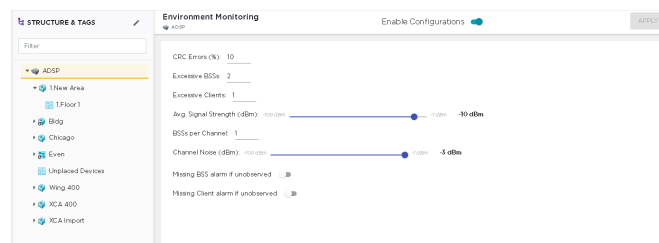


Figure 106: Environment Monitoring

It is recommended to apply Environment Monitoring at the Extreme AirDefense appliance level by selecting the **Enable Configuration** switch.

Configure the following parameters:

Field	Description
CRC Errors	Cyclic redundancy check (CRC) errors should not exceed the specified percentage value. Use the spinner control to set this threshold value.
Excessive BSSs	BSSs on your network are considered excessive if the specified value is exceeded. Use the spinner control to set this threshold value.
Excessive Clients	Wireless clients on your network are considered excessive if the specified value is exceeded. Use the spinner control to set this threshold value.
Avg. Signal Strength (dBm)	The average signal strength (in dBm) of APs on your network should not exceed the specified value. Use the slider to set this threshold value in the range of -100 dBm and -1 dBm.

Field	Description
BSSs per Channel	The number of BSSs on any particular channel should not exceed the specified value. Use the spinner control to set this threshold value.
Channel Noise (dBm)	Channel noise is monitored to ensure that the noise does not exceed the specified value. Use the slider to set this threshold value in the range of -100 dBm and -1 dBm.
Missing BSS Alarm if unobserved	When this switch is selected, it generates a missing BSS alarm when any of the threshold values are exceeded.
Missing Client Alarm if unobserved	When this switch is selected, it generates a missing Client alarm when any of the threshold values are exceeded.

Use the **APPLY** button located to the top right of this window to save your changes.

Apply Environment Monitoring Configuration

If you need to apply a different set of Environment Monitoring configurations at a specific level in your Extreme AirDefense hierarchy, navigate to the level in **Structure**

& **Tags** pane and select it. Use the  control's **Override** option to apply the alternate configuration at that level.

For more information see the section *Overriding Configuration Settings* in this document.

Overriding Configuration Settings

The **Enable Configuration** switch is only available at the top most node of the **Structure & Tags** pane. Configurations can only be applied when this switch is set to *ON*. The top most node is always named *ADSP* and you must use this switch to apply the selected configuration through out the Extreme AirDefense system.

By default, any level in the **Structure & Tags** pane always inherits configuration from the level above it unless explicitly overridden.

Since Extreme AirDefense manages its devices using a hierarchy that is configured using the **Structure & Tags** pane, all the nodes under the top *ADSP* node inherit the configurations set at that node. However, you can override the inherited configuration at any level in the hierarchy.

To override the inherited settings, in the **Structure & Tags** pane, select the node where you want to override the inherited configuration. Then from the  control, select the **Override** option. Note that the **Inherited from :** control always displays the name of the level from which the configuration settings are inherited from. Use this information to orient your self on how the configurations are inherited.

Change the configuration for the selected level as required and then use the **APPLY** button to implement the modified configuration settings. These settings will now be inherited by all levels below the selected level unless a sub-level has been explicitly overridden.

Client Types

Client Types are classification of devices that are found within your Extreme AirDefense system. Use the **Client Type** screen to create and manage custom client types within your system.

The **Client Types** screen enables you to:

- Add new client types to your system.
- Edit existing client types to change its icon or name.
- Remove existing client types from your system.

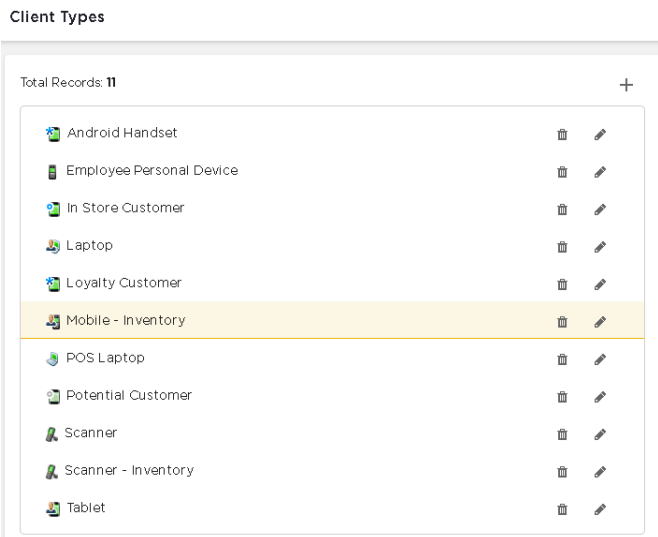


Figure 107: Client Types Screen

Manage Client Types

Add a New Client Type

Use the **Client Types** screen to manage your client types. To add a new client type, use the  icon located to the top of this list. The following window displays.

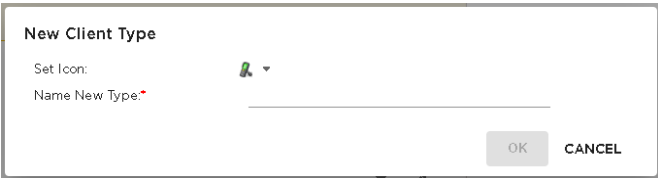


Figure 108: New Client Window

Use the **Set Icon** drop-down list to select an icon to apply to this client type. In the **Name New Type** field, provide a name for this new client type.

Click the **OK** button to save this client type. If you do not want to create this client type, use the **CANCEL** button.

Edit a Client Type

Each Client Type in this window has two icons. Use the  icon to edit the selected client type. The following window displays.

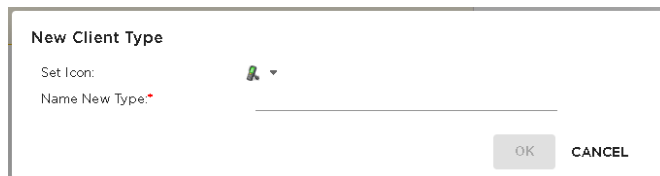
A dialog box titled "New Client Type". It contains a "Set Icon:" label followed by a green person icon and a downward arrow. Below this is a "Name New Type:" label followed by a red asterisk and a text input field. At the bottom right are "OK" and "CANCEL" buttons.

Figure 109: Edit Client Type Window

Use the **Set Icon** drop-down list to select an icon to apply to this client type. In the **Name New Type** field, edit the name for this client type.

Click the **OK** button to save this client type. If you do not want to edit this client type, use the **CANCEL** button.

Delete a Client Type

Use the  icon to delete the selected client type. The following window displays.

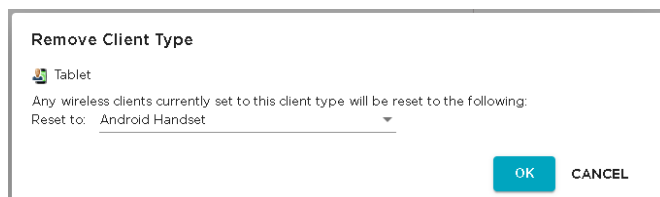
A dialog box titled "Remove Client Type". It shows a "Tablet" icon and name. Below is a message: "Any wireless clients currently set to this client type will be reset to the following:". Underneath is a "Reset to:" label followed by a dropdown menu showing "Android Handset". At the bottom right are "OK" and "CANCEL" buttons.

Figure 110: Remove Client Type

When this client type is deleted, all devices of this type must be assigned an another type. Use the **Reset To** drop-down list to select the client type to assign to the devices.

Click the **OK** button to remove this client type. If you do not want to remove this client type, use the **CANCEL** button.

Appliance Settings

Use the **Appliance Settings** screen to configure settings specific to this instance of the Extreme AirDefense appliance. An appliance is the physical device on which the Extreme AirDefense software runs. These settings are global in nature and apply to all networks managed by this Extreme AirDefense instance.

Appliance Settings

APPLY

Port:
8543

Mail Relay Server: (IP address or fully qualified host name)

Max Connections:
201 (Total simultaneous application server connections)

☐ User Session Limit of 1 simultaneous sessions per user

☒ Air-Termination system

☒ Policy based Air-Termination system

☐ Port Suppression system

☐ Auto-Logout 1 minute(s)

☒ Spectrum Scan Timeout after 20 minute(s)

☒ Sensors Cloaking Limit 3 simultaneous cloaked sensors

The following Extreme AirDefense appliance settings can be configured from this screen.

Field	Description
Port	Set the port on which the Extreme AirDefense user interface is available. This setting configures the system port to access the Extreme AirDefense graphical user interface. Enter a port number that is available for use. Choose a port number in the range 1024-65000. The default port is 8543. Note: Extreme AirDefense will not allow you to choose a port that is already in use.
Mail Relay Server	Define the mail relay host. Enter an IP address or a fully-qualified host name. The mail relay host is a mail server that forwards all mails received from Extreme AirDefense to their intended recipients.
Max Connections	Specify the maximum number of simultaneous application server connections that can occur with this Extreme AirDefense instance. A maximum of two thousand (2000) simultaneous application server connections can be set.

Field	Description
User Session Limit	Configures the number of simultaneous sessions that the same user can have with the Extreme AirDefense appliance. By default, this option is not enabled. It is suggested to enable this option and set the simultaneous session value to one (1) to increase security when permitting access to the physical Extreme AirDefense device. An upper limit of one hundred (100) simultaneous connections can be set for a single user.
Air Termination System	Air Termination enables you to terminate the connection between your wireless LAN and any associated Wireless Client, authorized or unauthorized. Select the Air-Termination system option to enable this feature. The Policy based Air-Termination system option is only available for use when the Air-Termination system option is selected. Note: This setting will not be visible if you are not a user with administrative permissions.
Policy-based Air Termination System Enabled	Policy-based Air Termination is an automated version of Air-Termination. This feature enables you to create and apply rules to automatically terminate the connection between your monitored Wireless LANs and any associated device or wireless client, either authorized or unauthorized, based on alarms that are generated by the Extreme AirDefense system. Select this option to enable Policy-based Air Termination. This is enabled by default when you enable Air-Termination system. Note: This setting will not be visible if you are not a user with administrative permissions.
Port Suppression System	Port Suppression enables you to turn off the port on the network switch through which a device is communicating. You can suppress the communications port for any network device, effectively shutting down the communication port for the device. This is useful for devices that are connected to your network through the physical network. Select this option to enable Port Suppression system. Note: You must have added SNMP Managed Switches and have full read and write privileges to enable Port Suppression system
Auto-Logout	Use this option to enable/disable the automatic logout of any logged in user after a specified amount of time. Select the Auto-Logout option to enable it and then use the spinner control to set the logout time in minutes. Note: You must log off Extreme AirDefense and then log back in before the Auto-Logout change takes effect.
Spectrum Scan Timeout	Use this option to enable timeout when performing dedicated spectrum scan for spectrum analysis. Then, use the spinner control set the timeout duration in minutes. Timeout duration can be in the range of 1-120 minutes.

Device Age Out

The **Device Age Out** screen displays a synopsis of the devices seen within your Extreme AirDefense managed networks. Devices are classified into BSSs, wireless clients, and BT/BLE devices. Data is displayed for the previous 24 hours, last 7 days, and for days beyond a week.

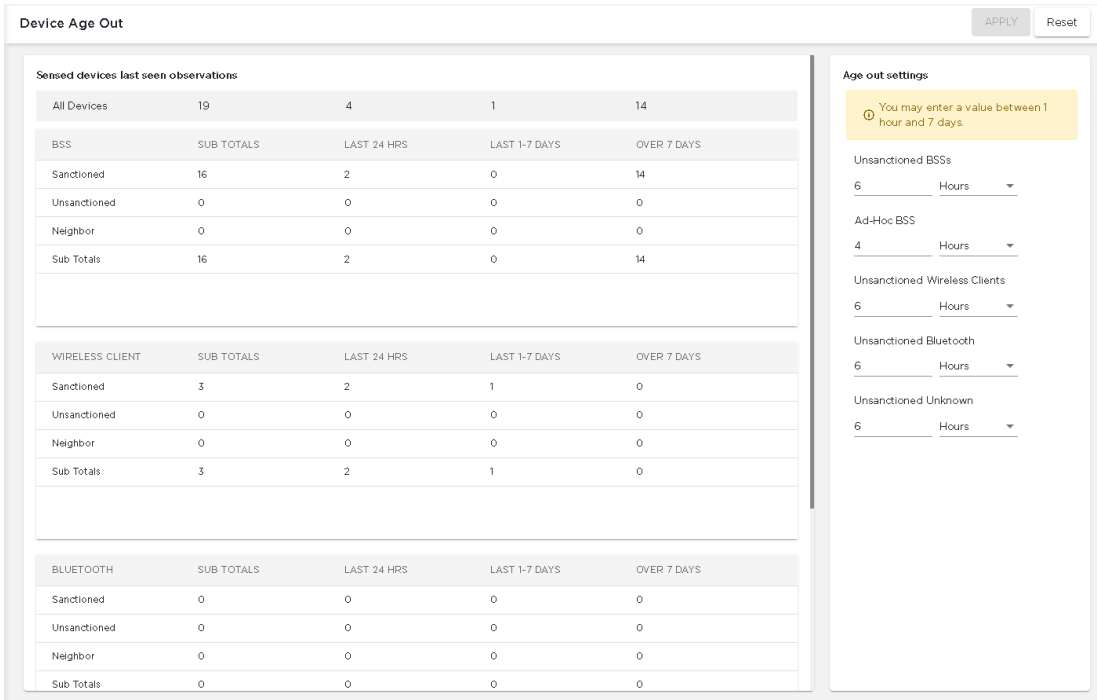


Figure 111: Device Age Out

Configurations in the *Device Age Out* screen allow you to specify various timeout values that are used when displaying devices in the left pane. You can set an age out value for any of the following device types:

- Unsanctioned BSSs
- Ad-Hoc BSSs
- Unsanctioned Wireless Clients
- Unsanctioned Bluetooth devices
- Unknown, unsanctioned devices

Values are specified in hours or days with a minimum of 1 hour and a maximum of 7 days.

When a device exceeds the age out value specified in this screen, it is no longer seen in any of the screens in the **Networks** tab. However, these devices will still be visible for forensics analysis. All alarms associated with these removed devices are removed as well and will not be displayed in any of the screens of the **Alarms** tab.

Age out settings

 You may enter a value between 1 hour and 7 days.

Unsanctioned BSSs
6 Hours ▼

Ad-Hoc BSS
4 Hours ▼

Unsanctioned Wireless Clients
6 Hours ▼

Unsanctioned Bluetooth
6 Hours ▼

Unsanctioned Unknown
6 Hours ▼

Figure 112: Age out setting

After configuring the age out values, click the **APPLY** button to save your changes. Click **Reset** button to discard any changes and revert the age out values to the previous settings.

Configuration Backup

Configuration Backup allow you to backup up your appliance configuration to your workstation or to your appliance. There are two methods to accomplish this:

- [Manual Backups](#) on page 132
- [Automatic Backups](#) on page 133

Configuration Backup

Backup Now ☒ Enable Configuration Backup Scheduling Add New Schedule Delete

Name	Schedule
Default Backup	Default Backup - Daily: Every 1 day at 12:00 AM

Settings

Job Name: *

Destination: ☒ Local ☐ Remote

Host: *

Port: *

Protocol: SCP

Path: *

User: *

Password: * ☐ Display Password

Retries: 1 (Max: 5)

Schedule

Frequency: One Time Schedule

Time: 12:00 AM

Date: 04/03/2013

Apply Reset

How Backups Work

- All backups, scheduled or on-demand, create a backup file in `/usr/local/smx/backups`.
- Backups include more than the SQL database. Many configuration files (XML files) scattered throughout ADSP are also included. These files are included in the zip archive along with the database tables.
- If an on-demand backup is done to the desktop, the system performs a regular backup to `/usr/local/smx/backups` first and then copies that file to the desktop.
- If a scheduled backup is done to a remote device via SCP or FTP, the system performs a backup to `/usr/local/smx/backups` first and then copies that file to the remote system.
- Only the most current backup is kept. Previous backups are deleted from the `/usr/local/smx/backups` folder.
- The `/usr/local/smx/backups` directory is root protected. Users cannot delete the backup file. However, they can copy it to another location.
- The format of a backup file looks like:
`Backup_8.1.0-10_ECRT236.am.mot.com_20101018000011.zip.enc`. The name always includes the release, the server name, and the year-month-day-hour-minute-second. The `enc` at the end of the name indicates that the file is encrypted. Encrypted files can be emailed securely.

View Backup Schedules

The **Configuration Backup** screen displays a list of schedules that have been configured for this Extreme AirDefense system.

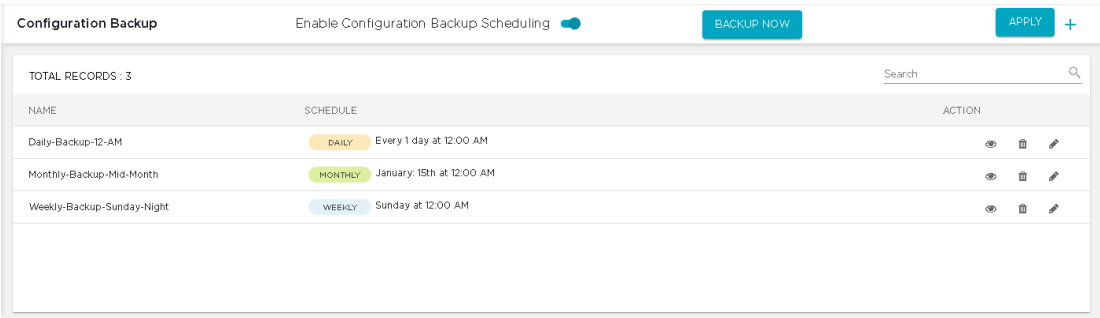


Figure 113: Configuration Backup Screen

The following information is displayed for each configuration backup schedule:


Field	Description
Name	Displays the name assigned to this schedule
Schedule	Displays the type of this schedule and the time or frequency for this schedule.
Action	The icons in this field enable to view, edit or delete your schedule. Use the  icon to view the configuration schedule. Use the  icon to delete the selected schedule. Similarly, use the  icon to edit the schedule.

If you are managing a large number of configuration backup schedules, use the **Search** field located to the top of this list to narrow down the number of items in this list.

Scheduling Configuration Backup

To ensure that you have the latest backups for recovering from disasters, use the scheduling features of the **Configuration Backup** screen to create backups on a pre set schedule.

Use the  icon located to the right of the **APPLY** button. This icon is only enabled when the **Enable Configuration Backup Scheduling** switch is set to on.

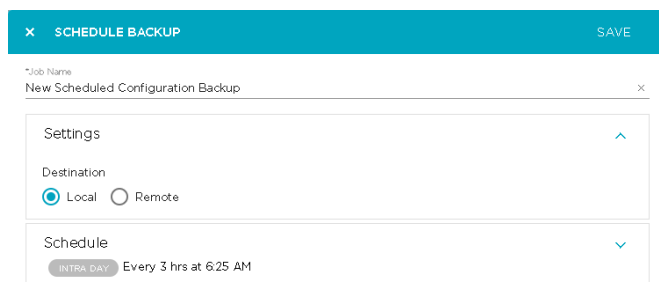**Figure 114: Add New Schedule Window**

This window is also used to edit existing backup schedules.

In the **Job Name** field, add a name for this backup schedule.

If the **Settings** field is not expanded, use the  icon to expand the field. By default, the destination for the backed up configuration is always on the Extreme AirDefense appliance. For more information on how configuration backup works and to know where the backup files are stored locally on the Extreme AirDefense system, see the topic [How Backups Work](#) on page 291 in this document.

If you require that your configuration backup is stored on a remote sever, click the **Remote** option. The **Settings** field expands to show more fields. Configure the following:

Field	Description
Host	The IP address of the remote server on which to store the backup configuration.
Port	The port number on which the remote server is listening to incoming connections.
Select Protocol	The protocol to use to connect to the remote server. Can be one of: • HTTP • HTTPS • FTP • SCP • SFTP • TFTP
Path	The destination directory on the remote sever where the backup configuration files will be stored.
User	The username used to connect to the remote server.
Password	The valid password for the account in the User field.

Field	Description
Retries	The number of attempts that will be made to connect to the remote server in the case the remote server is not accessible. Set a value in the range of 1-5 attempts. Extreme AirDefense will stop trying to connect to the remote server once it has tried this many number of times.
Verify Server Certificate/Key	Forces Extreme AirDefense to verify that the server certificate (for HTTPS connections) or server key (for SCP or SFTP connections) is valid for the remote server.

Expand the **Schedule** tab using the  icon.

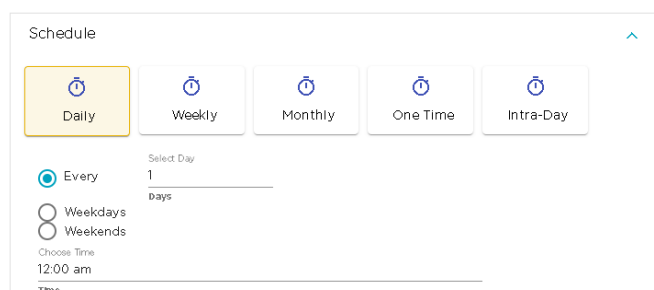


Figure 115: Schedule Field

Select from one of the available schedules. The available schedules are:

- Daily
- Weekly
- Monthly
- One Time
- Intra-Day

Each of these schedules have different configurations. The following table lists the various configurations and their individual settings.

Field	Description
Daily	The following configurations are available for the <i>Daily</i> schedule. • Every - Use this field to take a daily backup every set number of days. Use the spinner control to set the number of days between two consecutive backups. The value can be set between 1-31 days. • Weekdays - Use this field to enable backups to be taken only on week days. Backups are not taken on weekends, i.e., Saturdays and Sundays. • Weekends - Use this field to enable backups to be taken only on weekends. Backups are only taken on Saturdays and Sundays. • Choose Time - Use this field to set the time when the backup is taken every day.
Weekly	The following configurations are available for the <i>Weekly</i> schedule. • Select Weekday - Use this drop-down list to select the specific weekday or weekdays on which this schedule will run. Use the check-box before each day to select it. You can select multiple weekdays. • Choose Time - Use this field to set the time when the backup is taken every selected weekday.
Monthly	The following configurations are available for the <i>Monthly</i> schedule. • Select Month - Use this drop-down list to select the specific month or months during which this schedule will run. Use the check-box before each month to select it. You can select multiple months. • Day - Use the Day control to indicate the numerical date on which this schedule will run. For example, if this value is fifteen (15), then this schedule is run on the 15th of the selected month or months. • Last day of the month - Use this control to indicate the schedule is to be run on the last day of the month of the selected month or months. • Use the last option to indicate a specific schedule that is repeated at a particular combination. For example, if the values are <i>Second</i> and <i>Saturday</i>, then this schedule will run only on the second Saturday of the selected month or months. • Choose Time - Use this field to set the time when the backup is taken every selected month or months.

Field	Description
One Time	The following configurations are available for the <i>One Time</i> schedule. - Choose a date - Use this field to select the particular date on which you want to run this schedule. Use the calendar icon next to this field to select the date. - Choose Time - Use this field to set the time when the backup is taken on the specified day.
Intra-Day	The following configurations are available for the <i>Intra-Day</i> schedule. This schedule is used to take multiple backups on the same day. - Set Frequency - Use this field to define the frequency of this intra-day backup schedule. When this value is specified, a backup is taken with this frequency. For example, when this value is set to three (3), a configuration backup is taken every three hours. - Choose Time - Use this field to set the time when the intra-day backup is started. For example, if the value is set at 10:30 am, then the first backup of the day will be done at the above time. Subsequent backup will be taken after every Set Frequency interval.

Once you have configured your backup schedule, use the **SAVE** button to save the backup. To exit without saving your changes, use the small **X** button located to the top left of this window.

Forensic and Log Backup

To enable automatic forensics backup, select the **Enable Automatic Forensics Backup** checkbox. To enable automatic log backup, select the **Enable Automatic Log Backup** checkbox.

The fields used for both forensics and log backups are the same. After automatic backup is enabled, any newly created forensics or log file is automatically backed up to the host specified in the **Host** field.



Note

When automatic forensics backup or log backup is first enabled, only new files are backed up. Existing files are not backed up and must be saved manually if you want to copy them to another server.

To access this feature, navigate to **Configuration > Appliance Management > Forensic and Log Backup**.

Forensic and Log Backup

☐ Enable Automatic Forensics Backup

Host: *

Port: *

Protocol: SCP

Path: *

User: *

Password: *

Retries: 1 (Max: 5)

☐ Display Password

☐ Verify Server Certificate/Key

☐ Enable Automatic Log Backup

Host: *

Port: *

Protocol: SCP

Path: *

User: *

Password: *

Retries: 1 (Max: 5)

☐ Display Password

☐ Verify Server Certificate/Key

Frequency: One Time Schedule

Time: 12:00 AM

Date: 04/04/2013

Apply

Reset

Field	Description
Host	The name of the server where forensics or log files are backed up. This can be an IP address or a DNS name defined by your DNS server.
Port	The port number used during the backup operation.
Protocol	The file transfer protocol used to back up forensics or log files.
Path	The directory on the destination server where the backup files are stored.
User	The user name used to log in to the destination server.
Password	The password used to log in to the destination server.
Verify Server Certificate/Key	Verifies the server certificate for HTTPS connections or the server key for SCP and SFTP connections.
Retries	The number of retry attempts if a forensic backup fails. The maximum number of retries is 5.

You can schedule automatic backups for system and access logs by selecting an interval and configuring the related options.

Interval	Action
One Time Schedule	Select a time from the Time list and a date from the calendar.
Intra-Day Schedule	Select a start time and specify a frequency in hours.
Daily Schedule	Select a frequency (daily, weekdays only, or weekends only) and specify a time of day.

Interval	Action
Weekly Schedule	Select a frequency in days and choose one or more days of the week for the backup.
Monthly Schedule	Select the months, a day of the month, and a time of day to run the backup.

Forensic Backup Configuration

Use the fields in the left of the screen to set the remote server for saving the forensic backups.

Enable Configuration Backup Scheduling

Host*

Select Protocol
SCP

User*

Retries*
1 (Max: 5)

Port*

Path*

Password*

☐ Verify Server Certificate/Key

Figure 116: Forensic Logs - Remote Server Configuration

To save your forensic logs on a remote server, you should enable the feature. Use the switch in this field and set it to the *ON* position.

Configure the following:

Field	Description
Host	The IP address of the remote server on which to store the forensic logs.
Port	The port number on which the remote server is listening to incoming connections.
Select Protocol	The protocol to use to connect to the remote server. Can be one of: • HTTP • HTTPS • FTP • SCP • SFTP • TFTP
Path	The destination directory on the remote sever where the forensic log files will be stored.
User	The username used to connect to the remote server.
Password	The valid password for the account in the User field.

Field	Description
Retries	The number of attempts that will be made to connect to the remote server in the case the remote server is not accessible. Set a value in the range of 1-5 attempts. Extreme AirDefense will stop trying to connect to the remote server once it has tried this many number of times.
Verify Server Certificate/Key	Forces Extreme AirDefense to verify that the server certificate (for HTTPS connections) or server key (for SCP or SFTP connections) is valid for the remote server.

Use the **APPLY** button to save the changes made to the configurations in this screen. Use the **Reset** button to revert the changes made to the fields in this screen to their previous settings.

Log Backup Configuration

Use the fields to the right of the screen to set the remote server for saving log backups.

Figure 117: Logs - Remote Server Configuration

To save your logs automatically to a remote server, you should enable the feature. Use the switch in this field and set it to the *ON* position.

Configure the following:

Field	Description
Host	The IP address of the remote server on which to store the logs.
Port	The port number on which the remote server is listening to incoming connections.

Field	Description
Select Protocol	The protocol to use to connect to the remote server. Can be one of: • HTTP • HTTPS • FTP • SCP • SFTP • TFTP
Path	The destination directory on the remote sever where the backup configuration files will be stored.
User	The username used to connect to the remote server.
Password	The valid password for the account in the User field.
Retries	The number of attempts that will be made to connect to the remote server in the case the remote server is not accessible. Set a value in the range of 1-5 attempts. Extreme AirDefense will stop trying to connect to the remote server once it has tried this many number of times.
Verify Server Certificate/Key	Forces Extreme AirDefense to verify that the server certificate (for HTTPS connections) or server key (for SCP or SFTP connections) is valid for the remote server.

If you want to automatically backup the logs on a particular schedule, configure the following fields.

Field	Description
Daily	The following configurations are available for the <i>Daily</i> schedule. • Every - Use this field to take a daily backup every set number of days. Use the spinner control to set the number of days between two consecutive backups. The value can be set between 1-31 days. • Weekdays - Use this field to enable backups to be taken only on week days. Backups are not taken on weekends, i.e., Saturdays and Sundays. • Weekends - Use this field to enable backups to be taken only on weekends. Backups are only taken on Saturdays and Sundays. • Choose Time - Use this field to set the time when the backup is taken every day.
Weekly	The following configurations are available for the <i>Weekly</i> schedule. • Select Weekday - Use this drop-down list to select the specific weekday or weekdays on which this schedule will run. Use the check-box before each day to select it. You can select multiple weekdays. • Choose Time - Use this field to set the time when the backup is taken every selected weekday.
Monthly	The following configurations are available for the <i>Monthly</i> schedule. • Select Month - Use this drop-down list to select the specific month or months during which this schedule will run. Use the check-box before each month to select it. You can select multiple months. • Day - Use the Day control to indicate the numerical date on which this schedule will run. For example, if this value is fifteen (15), then this schedule is run on the 15th of the selected month or months. • Last day of the month - Use this control to indicate the schedule is to be run on the last day of the month of the selected month or months. • Use the last option to indicate a specific schedule that is repeated at a particular combination. For example, if the values are <i>Second</i> and <i>Saturday</i>, then this schedule will run only on the second Saturday of the selected month or months. • Choose Time - Use this field to set the time when the backup is taken every selected month or months.

Field	Description
One Time	The following configurations are available for the <i>One Time</i> schedule. - Choose a date - Use this field to select the particular date on which you want to run this schedule. Use the calendar icon next to this field to select the date. - Choose Time - Use this field to set the time when the backup is taken on the specified day.
Intra-Day	The following configurations are available for the <i>Intra-Day</i> schedule. This schedule is used to take multiple backups on the same day. - Set Frequency - Use this field to define the frequency of this intra-day backup schedule. When this value is specified, a backup is taken with this frequency. For example, when this value is set to three (3), a configuration backup is taken every three hours. - Choose Time - Use this field to set the time when the intra-day backup is started. For example, if the value is set at 10:30 am, then the first backup of the day will be done at the above time. Subsequent backup will be taken after ever Set Frequency interval.

Once you have configured your backup schedule, use the **SAVE** button to save the backup. To exit without saving your changes, use the small **X** button located to the top left of this window.

Configuration Restore

Use the **Configuration Restore** window to restore your Extreme AirDefense system's configuration from backups.

Configuration Restore APPLY Reset

Select backup configuration file BROWSE

Selected configuration will be cleared and restored

- ☐ Restore All Configuration
All current appliance configuration settings will be replaced. All devices and sensors will be replaced.
- ☐ Restore Appliance Network Configuration
The appliance's IP Address, Hostname, DNS settings, and Time settings will be replaced.
- ☐ Restore System Configuration
All current configuration profiles, including user settings will be replaced. All devices and sensors will be replaced.
- ☐ Restore Alarm Configuration
All current alarm configuration will be replaced.
- ☐ Restore Custom Reports
All current custom report settings will be replaced.

Figure 118: Configuration Restore Screen

By default, all the fields in this screen are disabled. These fields are only enabled when you select a backup from using the **BROWSE** button. When you click the **BROWSE** button, it opens the operating system's *File Browser* window. Use this window to locate the correct backup file.

Once the backup file is uploaded to the Extreme AirDefense system, the other controls in this screen are enabled. The following options are available when restoring a system from a backup file.

Field	Description
Restore All Configurations	Restores all configuration data from the backup file.
Restore Appliance Network Configuration	Restores the configuration for the Appliance Network.
Restore System Configuration	Restores all system configuration data. All sensors and devices are replaced.
Restore Alarm Configuration	Restore any configuration that pertains to Alarms.
Restore Custom Reports	Restores any custom reports that were backed up.

Once you have selected the appropriate restore options, click the **APPLY** button located to the top right of the screen.


The **Reset** button clears all your restore selections in this screen.

Download Logs


You can download configuration files that were automatically backed up to your Extreme AirDefense server to your workstation. Once the backed-up configuration is on your workstation, you can restore it. (See [Configuration Restore](#).)

To download a configuration, follow these steps:

1. Navigate to **Configuration > Appliance Management > Download Logs**.

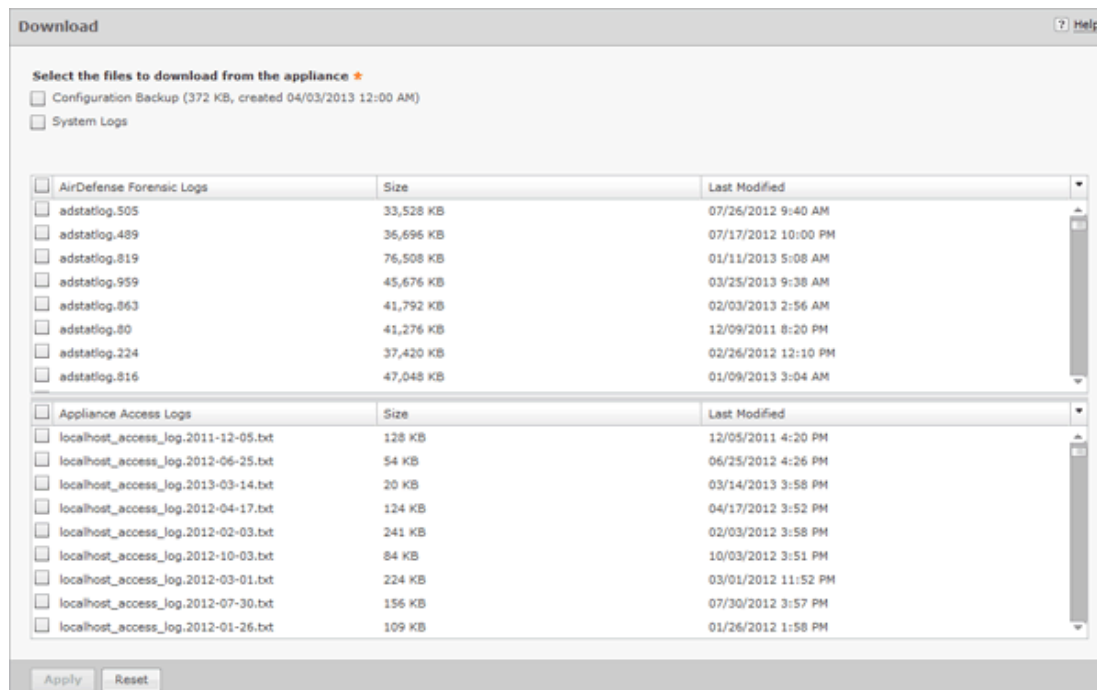


2. Select if you want to download a backup that exists on your appliance and/or the system logs.
3. You can download all forensic logs or all appliance access logs. Alternatively, you can choose the forensic logs or appliance access logs that you want to download.
4. Select **Apply**. A destination directory window is displayed.

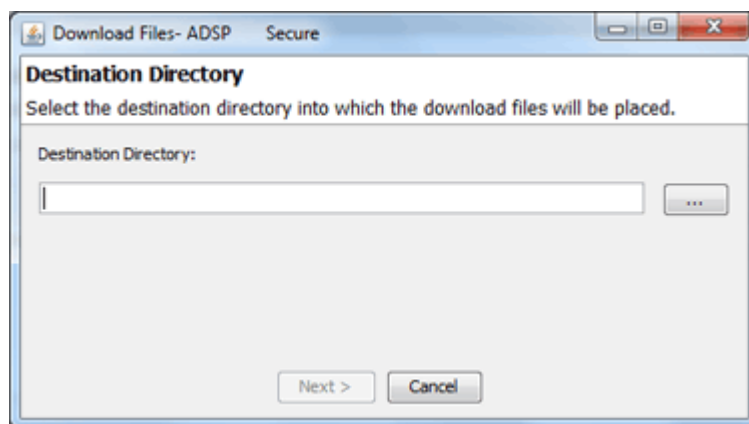

5. Select the **Browse** button to open a window where you can select your destination directory (folder).
6. Navigate to the directory where you want to download your server configuration.
7. Select **Select** to select the destination. The destination path displays in the **Destination Directory** field.

8. Select **Next**. The configuration is downloaded to the selected directory and a status window is displayed confirming the download.

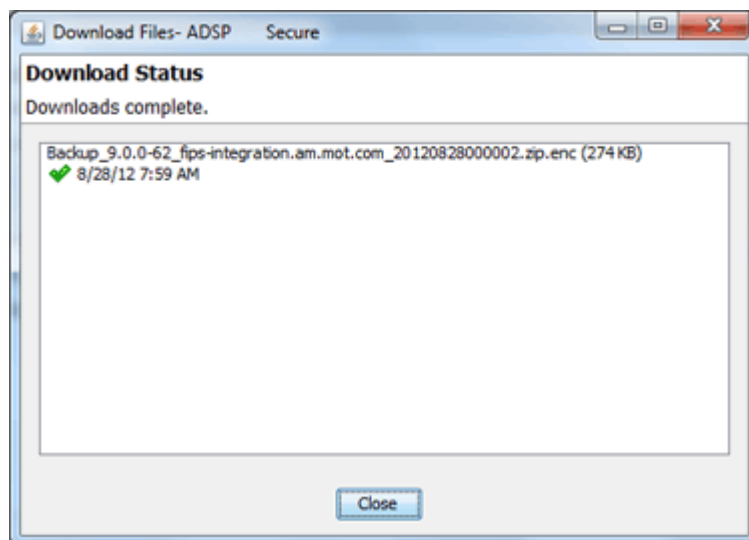

9. Select **Close**.

Forensic and Log Backup

To enable automatic forensics backup, select the **Enable Automatic Forensics Backup** checkbox. To enable automatic log backup, select the **Enable Automatic Log Backup** checkbox.

The fields used for both forensics and log backups are the same. After automatic backup is enabled, any newly created forensics or log file is automatically backed up to the host specified in the **Host** field.



Note

When automatic forensics backup or log backup is first enabled, only new files are backed up. Existing files are not backed up and must be saved manually if you want to copy them to another server.

To access this feature, navigate to **Configuration > Appliance Management > Forensic and Log Backup**.

Forensic and Log Backup

☐ Enable Automatic Forensics Backup

Host: *

Port: *

Protocol: SCP

Path: *

User: *

Password: *

Retries: 1 (Max: 5)

☐ Display Password

☐ Verify Server Certificate/Key

☐ Enable Automatic Log Backup

Host: *

Port: *

Protocol: SCP

Path: *

User: *

Password: *

Retries: 1 (Max: 5)

☐ Display Password

☐ Verify Server Certificate/Key

Frequency: One Time Schedule

Time: 12:00 AM

Date: 04/04/2013

Apply

Reset

Field	Description
Host	The name of the server where forensics or log files are backed up. This can be an IP address or a DNS name defined by your DNS server.
Port	The port number used during the backup operation.
Protocol	The file transfer protocol used to back up forensics or log files.
Path	The directory on the destination server where the backup files are stored.
User	The user name used to log in to the destination server.
Password	The password used to log in to the destination server.
Verify Server Certificate/Key	Verifies the server certificate for HTTPS connections or the server key for SCP and SFTP connections.
Retries	The number of retry attempts if a forensic backup fails. The maximum number of retries is 5.

You can schedule automatic backups for system and access logs by selecting an interval and configuring the related options.

Interval	Action
One Time Schedule	Select a time from the Time list and a date from the calendar.
Intra-Day Schedule	Select a start time and specify a frequency in hours.
Daily Schedule	Select a frequency (daily, weekdays only, or weekends only) and specify a time of day.

Interval	Action
Weekly Schedule	Select a frequency in days and choose one or more days of the week for the backup.
Monthly Schedule	Select the months, a day of the month, and a time of day to run the backup.

Redundant Appliance Synchronization

Extreme AirDefense provides a feature that allows you to configure a second server as a redundant server. This server will automatically take over if the primary server fails for any reason. To enable smooth transition between the two servers, the configurations of the primary server must be synchronized with the secondary server, either manually, or automatically as per a preset schedule.

Figure 119: Redundant Appliance Synchronization Screen

The correct way to synchronize your servers is to configure your primary server first and then synchronized your secondary server with your primary server. All configuration settings are copied from your primary server to your secondary server. After synchronization, both the servers will have the same configuration. When synchronizing these servers, the configurations from the primary server will override any configurations set on the secondary server.

How Synchronization Works

- Synchronization will not work if there is no backup file or if there is a backup in progress.
- On the standby server, during either scheduled or on-demand synchronization, the standby server pulls the current backup from `/usr/local/smx/backups` on the primary server.
- NEVER schedule a synchronization or perform an on-demand synchronization at the same time a backup is occurring on the primary server.
- NEVER start an on-demand backup while synchronizing servers.
- The backup file is copied to `/usr/local/smx/backups` on the standby machine which brings up two important points:
 - NEVER schedule a local, remote or on-demand backup on the standby machine. If you do, it will overwrite the file transferred over from the primary server.

- NEVER direct a backup from the primary server to `/usr/local/smx/backups` on a standby server. This will prevent synchronization from working properly.
- NEVER back up to the desktop from the standby server, because that process overwrites the existing file in `/usr/local/smx/backups`.
- As the second part of synchronization, the standby server runs a restore to itself using the file found in its own `/usr/local/smx/backups` directory. This should be the only file ever copied over from the primary server.

Synchronization Rules

- You should only back up the primary server. NEVER schedule or perform a backup on the standby server.
- Synchronization should only be done from the standby server. NEVER schedule or perform a synchronization on the primary server.
- Always schedule or perform a backup on the primary server one hour before scheduling a synchronization or performing an on-demand synchronization on the standby server. Backups require more time as the primary server continues collecting configuration data.
- NEVER schedule backups at the same time as a synchronization. This will NEVER work.
- Scheduled jobs should be included when backing up an appliance before synchronization. This will save you valuable time when restoring the backup on a new appliance. Unless you have backed up your scheduled jobs, you will have to recreate them on the new appliance.

Automatic Synchronization

As with manual synchronization, use the **Redundant Appliance Synchronization** screen to synchronize the configurations from your primary server to the secondary server.

Redundant Appliance Synchronization

☒ Designate this as a Secondary (redundant) appliance. This enables health monitoring and synchronization with the Primary appliance specified below.

Sync Now

Address* test x

Port* 8543 x

Username* test x

Password* x

☐ Sync Appliance Name

Daily Weekly Monthly One Time Intra-Day

☒ Every ☐ Weekdays ☐ Weekends

Select Day 1 days

Choose Time 12:00 am

Figure 120: Redundant Appliance Synchronization Screen

Use the left pane of this screen to provide the details for the primary Extreme AirDefense appliance.

The right pane of this screen enables you to automatically synchronize configurations from the primary server on a pre defined schedule.

Before you can synchronize between two devices, you must designate the current device as a redundant device. Select the **Designate this as a Secondary (redundant) device...** option to indicate that this device is a redundant server. When this option is not selected, this device becomes the primary server and all the fields in this screen are disabled.

To automatically synchronize this Extreme AirDefense appliance with a primary server, provide the following information:

Field	Description
Address	The IP address or host name of the primary Extreme AirDefense appliance.
Port	The port number on which the Extreme AirDefense primary server is running. 8543 is the default port.
Username	The username for an account that has login permissions on the primary Extreme AirDefense server.
Password	Password for the above username.
Sync Appliance Name	Select this option if you want to synchronize the appliance names between the primary and secondary servers.
Sync Mail Relay	Select this option if you want to synchronize the mail relay server information between the two servers.

The right pane of this screen enables you to configure the schedule for automatic synchronization. Set the following parameters:

Field	Description
Daily	The following configurations are available for the <i>Daily</i> schedule. • Every - Use this field to synchronize the servers every set number of days. Use the spinner control to set the number of days between two consecutive backups. The value can be set between 1-31 days. • Weekdays - Use this field to enable synchronization to take place only on week days. Synchronization does not happen on weekends, i.e., Saturdays and Sundays. • Weekends - Use this field to enable synchronization to take place only on weekends. Synchronization is only performed on Saturdays and Sundays. • Choose Time - Use this field to set the time when the synchronization happens every day.
Weekly	The following configurations are available for the <i>Weekly</i> schedule. • Select Weekday - Use this drop-down list to select the specific weekday or weekdays on which this schedule will run. Use the check-box before each day to select it. You can select multiple weekdays. • Choose Time - Use this field to set the time when the synchronization happens every day.
Monthly	The following configurations are available for the <i>Monthly</i> schedule. • Select Month - Use this drop-down list to select the specific month or months during which this schedule will run. Use the check-box before each month to select it. You can select multiple months. • Day - Use the Day control to indicate the numerical date on which this schedule will run. For example, if this value is fifteen (15), then this schedule is run on the 15th of the selected month or months. • Last day of the month - Use this control to indicate the schedule is to be run on the last day of the month of the selected month or months. • Use the last option to indicate a specific schedule that is repeated at a particular combination. For example, if the values are <i>Second</i> and <i>Saturday</i>, then this schedule will run only on the second Saturday of the selected month or months. • Choose Time - Use this field to set the time when the synchronization happens every day.

Field	Description
One Time	The following configurations are available for the <i>One Time</i> schedule. • Choose a date - Use this field to select the particular date on which you want to run this schedule. Use the calendar icon next to this field to select the date. • Choose Time - Use this field to set the time when the synchronization happens every day.
Intra-Day	The following configurations are available for the <i>Intra-Day</i> schedule. This schedule is used to take multiple backups on the same day. • Set Frequency - Use this field to define the frequency of this intra-day backup schedule. When this value is specified, a backup is taken with this frequency. For example, when this value is set to three (3), a configuration backup is taken every three hours. • Choose Time - Use this field to set the time when the intra-day synchronization is started. For example, if the value is set at 10: 30 am, then the first synchronization of the day will be done at the above time. Subsequent synchronizations will be taken after ever Set Frequency interval.

Once you have configured your synchronization schedule, use the **APPLY** button to save the schedule. To exit without saving your changes, use the **RESET**.

Appliance Replacement Considerations

Replacing an appliance should be done in such a way that no data is lost during the transition. Following these recommendations will help prevent data loss:

- Scheduled jobs should be included when backing up an appliance before synchronization. This will save you valuable time when restoring the backup on a new appliance. Unless you have backed up your scheduled jobs, you will have to recreate them on the new appliance.
- Hold onto the old appliance until you have retrieved all important data from the appliance's hard drive. Forensic data and other important data need to be backed up from the old appliance especially if you need the data for auditing purposes.
- You should install the new appliance on a lab network not connected to the LAN/WAN. Do not place the appliance on the WAN until you have restored the backed up configuration. The Sensors will connect to the appliance and your network tree will not be set up. Once connected to a lab network, you can either restore the primary's configuration file, or restore the configuration from a secondary appliance to the primary appliance. If the configuration is restored from the secondary appliance, you should then change the IP address of the new appliance to the one for the old appliance, reboot, and install the new appliance on the network.

- Once the new appliance is on the network, back up forensic data from the secondary appliance as required.
- ADSP restores the configuration long before the screen indicates that the process is complete. Executing a ping to the appliance will let you know exactly when the system is up. Once you receive a response, you can then log back in.

Configuration Clear

Use the **Configuration Clear** screen to clear configurations for the various features of the Extreme AirDefense system.

Configuration Clear APPLY

Select the data to be deleted from the appliance:

- ☐ **Clear All Configuration**
This will reset the appliance to factory defaults. All configuration will be purged, and all devices and sensors will be removed.
- ☐ **Clear Appliance Network Configuration**
This will purge the appliance of its IP Address, Hostname, DNS settings, and Time settings.
- ☐ **Clear System Configuration**
This will purge configuration profiles from the appliance, including user settings. All devices and sensors will be removed.
- ☒ **Clear Policy Configuration**
This will purge the appliance of all sensor & device configuration, and all sensors & devices will be removed.
- ☒ **Clear Sensor Configuration**
- ☒ **Clear Device Configuration**
- ☐ **Clear Alarm Configuration**
All alarm configuration will be purged, and replaced by factory default settings.
- ☐ **Clear Custom Reports**
This will purge the appliance of all custom report settings.
- ☐ **Clear Forensic Files**
This will purge the appliance of all forensic data.
- ☐ **Clear RF Model**
This will purge the appliance of all LiveRF and Location Tracking data, including measurement files.

Extreme AirDefense provides a comprehensive set of options that are used to have granular control on the data that can be retained or cleared. Extreme AirDefense configuration settings and the data that is stored on the physical Extreme AirDefense instance can be broadly classified into the following broad categories:

- Appliance's Network Configuration
- Extreme AirDefense System Configuration
- Sensor and Device Configuration, including device details
- Alarm Configuration
- Custom Report Configuration, including stored reports
- Forensic Files
- Life RF and Location Tracking data, including measurement files

The **Configuration Clear** screen also provides a switch to reset the Extreme AirDefense appliance to its factory defaults. This will purge all configurations and remove all devices and sensors.

Configurations

The following parameters can be managed through this screen:

Field	Description
Clear All Configuration	Clears all configuration data, setting the Extreme AirDefense server back to its original default state. This option is used to set the device to its factory defaults.
Clear Appliance Network Configuration	Clears the Extreme AirDefense appliance's network configuration. The appliance is cleared of its IP Address, host name, DNS configurations, and Time settings. Device and sensor information is not cleared.
Clear System Configuration	Clears all system configuration data. This includes the data that is covered by the other sub options. The configurations cleared include user settings and configuration profiles. All sensors and devices will also be removed. There are three sub-options associated with this option. • Clear Policy Configuration - Clears all policy configurations that you have changed. Selecting this option also clears the devices and sensor. If you select this option, the Sensor and Device configurations will be automatically selected. • Clear Sensor Configuration - Clears all Sensor configurations that you customized. Sensors will not be removed. • Clear Device Configuration - Clears all device configurations that you customized. Devices will not be removed. You can choose to select the Clear Sensor Configuration or Clear Device Configuration without select the Clear Policy Configuration option. When selected in this manner, the sensors and devices will not be removed, however, their configurations are removed.
Clear Alarm Configuration	Clears any configuration dealing with alarms and sets alarm configuration data back to its default.
Clear Custom Reports	Clears any custom reports that you have created. This also removes any reports that are stored on the Extreme AirDefense instance.
Clear Forensic Files	Clears (removes) any forensic data files that exist on the Extreme AirDefense server.
Clear RF Model	Clears the RF data used by Live RF and Location Tracking in the Floor Plan. This information includes the measurement files.

Once you have made your choices, select the **APPLY** button located to the top right of the screen to apply your changes. A warning dialog displays.

Clearing configuration is a permanent action

Are you sure you want to clear configuration?

Please note:

1. Cleared data is purged, and is **not recoverable**.
2. Estimated processing time ranges from **5 to 20 minutes** depending on actual configuration files.
3. You must **log out** of the Air Defense Services Platform to begin clearing configuration.
4. If you are not able to log in after 1 hour, please contact help.

NO, CANCEL **Yes, Logout and Clear configuration**

Read and understand the information displayed within this screen. To confirm your changes, select the **Yes, Logout and Clear configuration** button.

Select the **NO, CANCEL** button to exit without applying the changes you made to the parameters in this screen.

Language Settings

Extreme AirDefense user interface can be localized in a few selected language. Use the **Language** screen to select the language for the user interface elements.

The following user interface elements can display their content in your selected language.

Change the Language

To set the language for your user interface:

1. Select the appropriate language from the list of available languages.

The screenshot shows a web-based configuration window titled "Language". In the top right corner, there is a grey button labeled "APPLY". Below the title, there is a list of languages, each preceded by a radio button. "English" is selected, indicated by a blue dot. The other languages are "Chinese", "Japanese", "Korean", "Portuguese", and "Spanish". At the bottom of the window, there is a yellow rectangular box containing the text: "* Note changing language will reload the application."

The **APPLY** button located to the top right of the screen enables if your language has changed from the current selection.

2. Select the **APPLY** button to confirm your change of language.

The user interface refreshes immediately. The interface now displays in the language that you selected.


License Management

Use the **License Configuration** screen to manage your Extreme AirDefense licenses.

The **License Configuration** screen, in the new user interface, combines the activities performed from the **Configuration > Appliance Platform > Appliance Licensing** and **Configuration > Appliance Platform > Auto-Licensing** screens (from the legacy interface) into it.

The **Auto-Licensing** screen in the legacy user interface enables you to assign licenses automatically when a device is discovered. Similarly, the **Appliance Licensing** screen enables you to assign licenses to individual devices within your network tree.

The **License Configuration** screen is accessed from the **Configuration > License Management** menu path. The following screen displays.

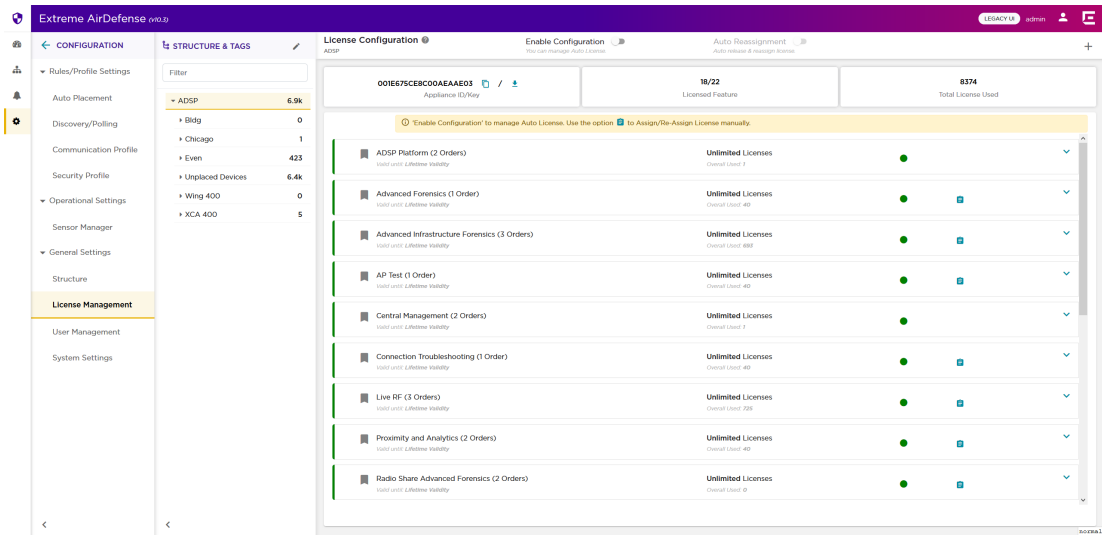

The screen displays two panes. The **Structure & Tags** pane displays the tree of your Extreme AirDefense managed network. Use this pane to drill down to the particular device of interest when applying licenses. For more information about this pane, see [View And Manage Your Network Tree](#) on page 148

The **License Configuration** pane displays the list of all licenses available for this Extreme AirDefense instance. The **License Configuration** pane displays the following information.

Field	Description
Appliance ID/Key	The unique key or ID assigned to this Extreme AirDefense appliance. This ID cannot be modified or removed. This key is required to generate any license that you purchase for use with this Extreme AirDefense appliance. Select the  icon to copy this <i>Appliance ID/Key</i> to your PC's clipboard. Select the  icon to download the <i>Appliance ID/Key</i> to a text file.
Licensed Feature	The number of licensed featured installed in this Extreme AirDefense instance. This field also shows the total number of available Extreme AirDefense features.
Total Licenses Used	The count of licenses used by this Extreme AirDefense instance.

The list of licenses that are available for this Extreme AirDefense instance is also displayed.

① 'Enable Configuration' to manage Auto License. Use the option  to Assign/Re-Assign License manually.

ADSP Platform (2 Orders) <i>Valid until Lifetime Validity</i>	Unlimited Licenses <i>Overall Used: 1</i>		
Demo1 (id=440339) Order on 2029-08-09 Maintenance from Unspecified	Unlimited Licenses <i>Overall Used: 0</i>		Valid from 2029-08-09 Valid to Lifetime Validity
(id=429576) Order on 2017-02-27 Maintenance from Unspecified	Unlimited Licenses <i>Overall Used: 1</i>		Valid from 2017-02-27 Valid to Lifetime Validity
Advanced Forensics (1 Order) <i>Valid until Lifetime Validity</i>	Unlimited Licenses <i>Overall Used: 41</i>		
Advanced Infrastructure Forensics (3 Orders) <i>Valid until Lifetime Validity</i>	Unlimited Licenses <i>Overall Used: 6850</i>		
AP Test (1 Order) <i>Valid until Lifetime Validity</i>	Unlimited Licenses <i>Overall Used: 41</i>		
Central Management (2 Orders) <i>Valid until Lifetime Validity</i>	Unlimited Licenses <i>Overall Used: 1</i>		

For each license, a colored dot indicates the state of the license.



Indicates that all the licenses for this feature are active.



Indicates that some of the multiple licenses applied for this feature have expired. Remaining licenses are still active




Indicates that all licenses applied for this feature have expired and this feature will not be available for use.



Indicates that some licenses will expire in the near future.

The small  icon located to the right of the **License Configuration** label displays a brief explanation of all the icons displayed on this screen. When you hover over this icon, the following popup displays.

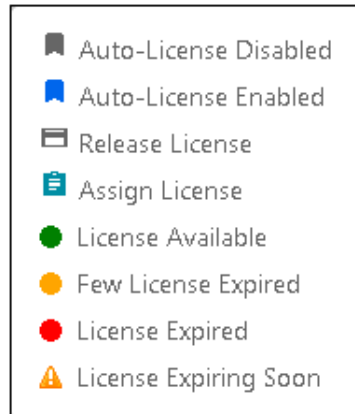

You can order a feature's license multiple times to meet your deployment's requirements. Each time you purchase a license for a particular feature, it is recorded separately under that feature's license.

To view a feature's license orders, click on its label. The label expands and displays all the orders for the selected feature. When expanded, this area displays the details of each license ordered. This area also displays a color dot indicating the current state of validity of each license order.

(id=429576) Order on 2017-02-27 Maintenance from Unspecified	Unlimited Licenses Overall Used: 1	 Valid from 2017-02-27 Valid to Lifetime Validity

The following information is shown for each order.

Order Date

The date the license was ordered and the license ID number generated by the license management system.

License Count

The number of licenses units in this order. Device count may be 0 (zero), a specific number, or *unlimited*.

Valid From

The date from which this license order become valid and is applied to your Extreme AirDefense instance.

Valid Date

The date till which this license is valid. A warning is also displayed if the license is about to expire.

Maintenance Date

Displays the date the license expires and the start date of the maintenance agreement with the customer.

A colored dot indicates the validity state of the order. The following is a list of the various states of the order.



Indicates that the order is valid.



Indicates that the order has expired.



Indicates that the order will expire in the near future.

Overriding License Assignments

The **Enable Configuration** switch is only available when the top most node of the **Structure & Tags** pane is selected. Auto Licenses can only be applied when this switch is set to *ON* and remains *ON*. The top most node is always named *ADSP* and you must use this switch to enable Auto Licensing through out the AirDefense system.

By default, any level in the **Structure & Tags** pane always inherits the licenses from the level above it unless explicitly overridden.

Since Extreme AirDefense manages its devices using a hierarchy that is configured using the **Structure & Tags** pane, all the nodes under the top *ADSP* node inherit the licenses from the top node. However, you can override the inherited licenses at any level in the hierarchy.

To override the inherited licenses, in the **Structure & Tags** pane, select the node where you want to override the inherited licenses. Then from the ☐ Override ☒ Inherit from: ADSP control, select the **Override** option. Note that the **Inherited from :** control always displays the name of the level from which the licenses are inherited from. Use this information to orient your self on how the licenses are inherited.

Change the licenses for the selected level as required and then use the **APPLY** button to implement the modified license settings. These licenses will now be inherited by all levels below the selected level unless a sub-level has been explicitly overridden.

Auto Reassignment

License Auto Reassignment enables you to manage your license reassignments without manual intervention. Generally, licenses are manually reassigned from any online, offline, or orphan device within your network to those devices that are added to your network. When reassigning a license manually, you would remove the license from an existing device and move it to the new device. This feature does this action automatically if you have enabled it and have adequate number of reassignment licenses that you can use.



Important

License Auto Reassignment works for those licenses that have enabled *Auto License*. For more information, see [Auto License Management](#) on page 320.

When you purchase a feature license, you are also provided with a few reassignment licenses which you can use as required. Reassignments of license is generally done

when a device is being replaced with a newer model or when you are reallocating assets between various sites that you manage.

**Important**

Please note that, at present, we support license reassignment for the following tri-radio access points: AP 410i, AP 410e, AP 460i, and AP 460e.

For automatic reassignment of licenses, the following rules apply:

1. **Auto License** must be enabled for each feature license that you want to reassign automatically. Feature licenses that do not have **Auto License** enabled, cannot be reassigned automatically.
2. If licenses for a feature are available for use, a license from these free licenses is assigned to the new tri-radio sensor added to your Extreme AirDefense managed network.
3. If no licenses are available for assignment, then the following logic is used to select a license for reassignment.
 - a. Extreme AirDefense searches for orphaned devices within your network. If an orphan device is found, its license is released and added as a re-assignable license. This license is then used for the newly added tri-radio access point.

Orphans are those devices that are no longer managed/monitored by Extreme AirDefense. However, licenses on these devices are not immediately remove but retained for future use. At a later date, when these devices are brought back online, these retained licenses are considered valid by Extreme AirDefense and the devices are joined to the network without consuming additional licenses. For more information on how to manually remove licenses from such orphaned devices, see [Manage License Manually](#) on page 323.

- b. When there are no orphaned devices within the network, Extreme AirDefense scans for and collects a list of all sensors that are considered offline. For Extreme AirDefense, an offline sensor is one that has not reported back to it for a duration of at least six (6) hours.

From this list of offline sensors, Extreme AirDefense releases the license of the sensor that has been offline for the maximum duration. This license is then reassigned to the newly added tri-radio access point.

The **Auto Reassignment** switch is only enabled when you set the **Enable Configuration** to the *ON* position. By default, the **Auto Reassignment** switch is *OFF*. You must manually set this switch to the *ON* position to use Auto License Reassignment.

Auto License Management

Auto-Licensing allows you to select licenses to be assigned to devices upon discovery.

You may define Auto-Licensing at the appliance network level all the way down to the floor network level, but the best practice is to always define Auto-Licensing at the appliance level. Any network level below the appliance level will inherit the

configuration. If you need to have a different configuration below the appliance level, use the **Override** settings option for the selected level.

The **Override** settings option is available when you select (highlight) a network level below the Appliance level. Use the Expand  icon in the **Structure & Tags** pane to reveal the other levels. By default, the licenses settings are inherited from the level above the current level.

When applying *Auto Licensing* the following rules apply:

- Only selected licenses, those explicitly selected by using the option control next to that license, are assigned automatically
- You can narrow the scope of the license by selecting the network level from the **Structure & Tags** pane.
- A license will not be assigned if there are no licenses available to apply.
- After a license is applied, the number of available licenses is reduced accordingly.

To enable or disable *Auto Licensing* for the selected licenses:

1. Select the **Enable Configuration** switch to enable applying *Auto Licensing* for your various licenses. At a level that is lower than the Appliance level, select the **Override** button.

When you select the **Enable Configuration** switch or the **Override** radio control, option controls  appear next to all the licenses.




Note

Option controls next to the **ADSP Platform** and **Central Management** are disabled by default as these are the base licenses available with all Extreme AirDefense instances.

2. Select the option control for each license that you want to auto apply.
The **AUTO LICENSE** button is enabled. This button is located to the top right of the pane.
3. Select those licenses that you want modified and then select the **AUTO LICENSE** button.

The **Enable/Disable Auto Licensing** dialog displays.

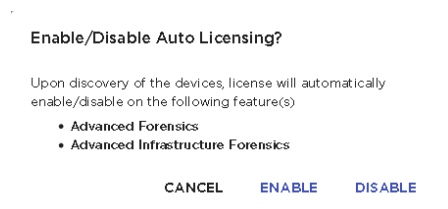

4. Review the list of licenses that you have enabled or disabled.
5. Select the **ENABLE** button to enable the selected licenses.

All feature licenses that are auto-licensed are indicated with the  icon. Normal licenses are indicated with the  icon.

The process to change the selected licences from *Auto Licenses* to normal licenses is the same. Select the **DISABLE** button instead.

At anytime, select the **CANCEL** button to cancel this activity.




Important

Please note that *Auto License* is only available till the **Enable Configurations** switch is set to On. It is not enabled if the **Enable Configuration** switch is set to Off.

Add Licenses

Use the **License Configuration** screen to add new feature license to this Extreme AirDefense instance.

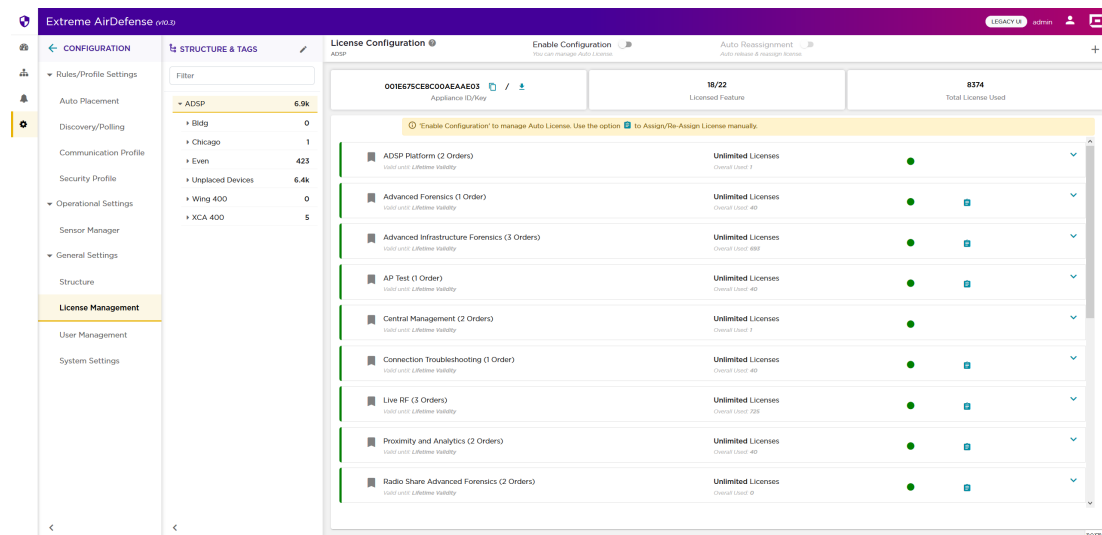

1. Select the  icon located to the top right of this screen. The **License Verify** screen displays.



License Verify

Please provide License file to verify

*License file only allowed

Browse

Ok, Verify License

Cancel

2. Select the **Browse** button to load the feature license using the operating system's *File Upload* dialog. Navigate to the location where your license file is stored and upload it to the Extreme AirDefense system. The **OK, Verify License** button enables.

3. Select the **OK, Verify License** button to verify the license's validity for use with this Extreme AirDefense system.
If the license is found to be valid, then the feature is added to the Extreme AirDefense system and the licensed feature becomes available through the Extreme AirDefense user interface.
4. Use the **Cancel** button to exit without adding the license to your Extreme AirDefense system.


Manage License Manually

Assign licenses manually to have the best control on how your licenses are utilized within your Extreme AirDefense monitored network. Use the **License Configuration** screen to manually assign licenses to your devices.

To manually assign licenses:

1. Select the  icon that is available for all licenses except the ADSP Platform and Central Management licenses.

The **License Assignment** dialog displays.

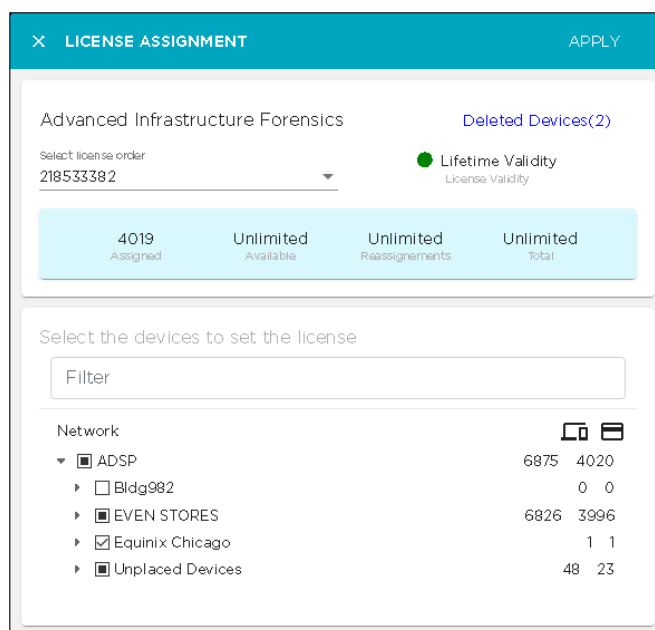

Network	Total	Available
ADSP	6875	4020
Bldg982	0	0
EVEN STORES	6826	3996
Equinix Chicago	1	1
Unplaced Devices	48	23

The following information is displayed.

Field	Description
Feature Name	Displays the feature name for which this license detail is displayed.
Select License Order	Use this drop-down list to select a specific license order from which to apply licenses.
Validity	This area displays details about the validity of this license.

The following area displays additional details about the license order selected in the **Select License Order** field.

0	50	5	50
Assigned	Available	Reassignments	Total

Field	Description
Assigned	The number of licenses assigned to devices out of the total licenses in this order.
Available	The number of licenses that are remaining after being assigned, and are thus available for use. For <i>Unlimited</i> licenses, the field will display <i>Unlimited</i> .
Reassignments	Displays the number of reassignments that are left for this license order. Extreme AirDefense allows you to reassign your licenses between devices a fixed number of times. Every time a license is reassigned, this value is reduced. Once this value reaches zero (0), you cannot reassign any more licenses. A license is considered reassigned when it is removed from a device and applied to another device. When such a activity is performed, Extreme AirDefense reduces the count of reassignments that are available for the selected license order.
Total	Displays the total number of licenses purchased in this license order. Displays <i>Unlimited</i> for <i>Unlimited</i> licenses.

2. Use the **Select the devices to set the license** pane within this dialog to drill down to the individual devices that you wish to apply the license. Use the  icon next to each level to expand it.

Select the devices to set the license

Filter

Network

ADSP

68754020

▸ Bldg982

00

▸ STORES

68263996

▾ ☒ Chicago

▾ ☒ Floor 1

☒ 10.8.152.10

4823

▸ ☒ Unplaced Devices

4823


3. Select the option control next to the level or the device name to apply the license. When you select a level, this license is applied to all devices that are found within the selected level.

You can also select multiple devices to apply this license to.

**Note**

Unselect a device's option control to revoke this license from it. You can add and remove licenses to multiple devices simultaneously in one single action. If you revoke permission from a level in the tree, then the selected license is removed from all devices under the selected level.

4. Select the **APPLY** button to apply the changes made to the selected device or devices' license configuration. This license is added to or removed from the selected device depending on your choice.

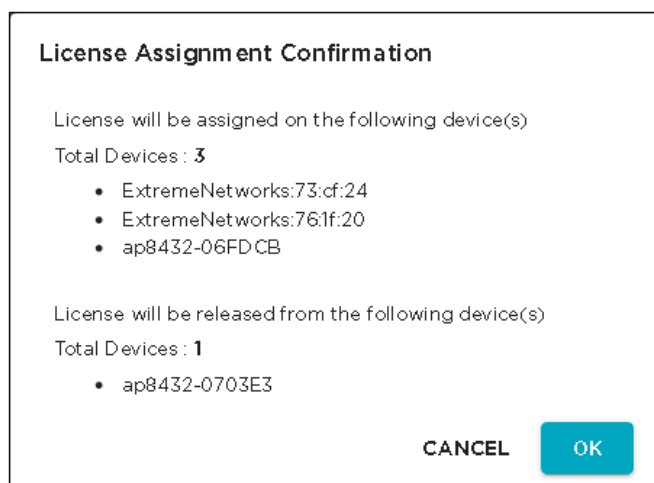

5. Review the actions that will be performed.
 6. Select the **OK** button to apply the changes listed in the dialog.
- At any time, select the **CANCEL** button to exit without applying the licensing changes made to the devices.

The screen refreshes to display the **License Configuration** screen.

7. (Optional) Select the **Deleted Device** link if displayed.

License Assignment

Advanced Infrastructure Forensics [Deleted Devices\(2\)](#)

Select license order: 218533382

4019 Assigned **Unlimited Available** **Unlimited Reassignments** **Unlimited Total**

Select the devices to set the license

Filter

Network	Total	Available
ADSP	6875	4020
Bldg982	0	0
EVEN STORES	6826	3996
Equinix Chicago	1	1
Unplaced Devices	48	23

If the **License Assignment** dialog displays **Deleted Devices** in the top right of the screen, it indicates that there are some licenses that are applied to devices that have been deleted from this Extreme AirDefense monitored network.

The numerical value next to this control indicates the number of licenses that can be released from these deleted devices.

The following dialog displays.

Remove Licenses from Deleted Devices

Are you sure you want to remove the Advanced Infrastructure Forensics license from this device?

Total Devices : 2

- b8:50:01:1a:06:a8
- b8:50:01:1a:00:b4

CANCEL **OK**

8. (Optional) Select the **OK** button to apply the changes listed in the dialog.

At any time, select the **CANCEL** button to exit without applying the licensing changes made to the devices.

The screen refreshes to display the **License Configuration** screen.

User Management

Use the **User Management & Configuration** screen to manage the users that are authorized to access your Extreme AirDefense instance. User access to various screens in your Extreme AirDefense user interface are controlled by the roles assigned to the

user account. Depending on the roles assigned, a user may or may not be allowed to view a screen or to modify any details that are displayed on the screen.

Extreme AirDefense provides a set of predefined user roles called *User Profile* that encapsulates all the permissions that are applicable to a user assigned this category. By default, the following user profiles are predefined.


- Super Admin
- Admin
- Guest
- Help Desk
- Operation Center

Users can be grouped together as groups for ease of management and permission settings. Use the **User Management & Configuration** screen to create and manage these user groups.

You can also use the **User Management & Configuration** screen to configure user authentication when user credentials are stored in remote RADIUS or LDAP servers.

The following actions can be performed from the **User Management & Configuration** screen.

- Create, modify, and delete Extreme AirDefense users.
- Configure the settings for user accounts local to a Extreme AirDefense appliance.
- Create, modify, and delete Extreme AirDefense user groups.
- Create, modify, and delete Extreme AirDefense user profiles.
- Create, modify, and delete remote authentication profiles.

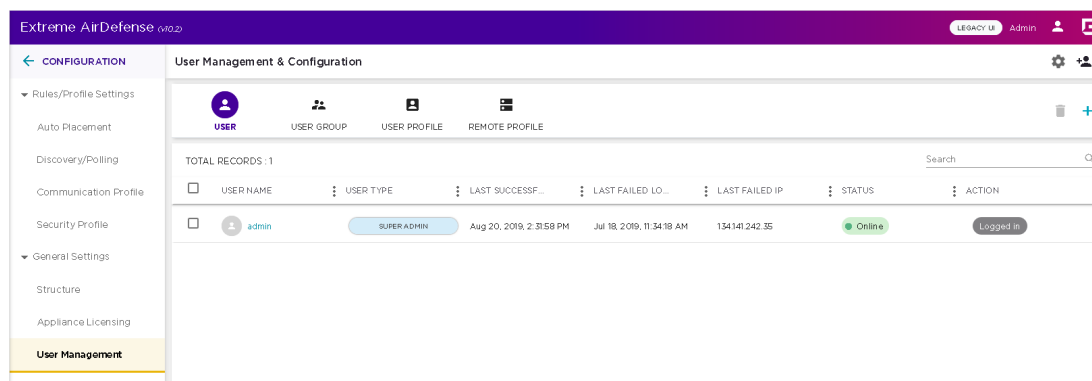

By default, this screen display a list of all the users configured for this Extreme AirDefense system.

Use the  icon located to the top right of this screen to quickly add a user, a user group, a user profile or a remote authentication profile. When selected, this icon expands to display a menu for these options.

Use the  icon located to the top right of this screen to configure the permissions for any local user account created on this Extreme AirDefense appliance. When selected, a

new dialog opens to display the various configurations that can be applied to any local user account. For more information, see [Local User Settings](#) on page 336.

Manage User Accounts

Users are managed from the User Management & Configuration screen. This screen is displayed when you select **Settings > User Management** menu path from the Extreme AirDefense user interface.

A list of users is displayed by default when you select the **User Management** menu item.

Field	Description
User Name	The user name.
Profile Name	The user account type. Select this field to view permissions assigned to this user account. The permissions are displayed in a separate popup dialog.
Last Successful Login	The timestamp for the last successful login by this user account.
Last Failed Login	The timestamp for the last failed login attempt by this user.
Last Failed IP	The IP address recorded by Extreme AirDefense when this user account failed to login to Extreme AirDefense. This information is only recorded for the last failed login attempt by this user.
Status	The current login status of the account.
Action	The actions that can be performed on the user account. For the user account that is logged in, this field displays the term <i>Logged In</i> . For other accounts, you can use the  (pencil) icon to edit the account, or use the  (trashcan) icon to delete the account.

The following activities can be performed from this screen:

- [Add User](#)—Add a new user to the list of valid users from this Extreme AirDefense instance.
- [Edit User](#)—Edit the details for an existing user.
- [Delete User](#)—Delete an existing user.

Add User

To add a new user to the list of approved users for this Extreme AirDefense instance:

1. Select the  icon located to the top right of this screen.
The **User Creation** dialog displays.

USER CREATION CREATE

Select User Type
Operation Center

Full Name

Description

Select Authentication Type
☒ Local ☐ Remote

User Name

New Password

Confirm Password

[VIEW ACCOUNT PREFERENCE](#)

Default Settings Enabled

2. Use the **Select User Type** drop-down list to select user type to create.
Access to various features of AirDefense depends on the permissions assigned to the selected user type. The default user type is *Operation Center*.
3. In the **Full Name** field, provide a user name for this account.
The name of the user account. This is different from the name entered in the **User Name** field. The name entered in the **User Name** field is used to login into Extreme AirDefense. This is a mandatory field.
4. In the **Description** field, provide a brief description about this account.
This information should enable you to uniquely identify this account from similar accounts.
5. From the options available under the **Select Authentication Type** field, select the appropriate authentication type for this new account.
Select from one of **Local** or **Remote**.

Local

Indicates that the new user account will be local to this Extreme AirDefense instance.

Remote

Indicates that the new user account will be remote and must be verified with the remote authentication server when used.


6. When you select `Local` in the **Select Authentication Type** field, the following additional inputs are required.

Field	Description
User Name	The user name for this account. This is a mandatory field. The maximum allowed user name length is 32 characters. Spaces and special characters are not allowed in user names.
New Password	Enter the password for this user account. Follow the password requirement guidelines specified below the Confirm Password field. Use the  icon to view the password entered in this field.
Confirm Password	Enter the same password as entered in the New Password field. This color of this field changes to black only when the passwords that you enter are the same and meet the password guidelines. Use the  icon to view the password entered in this field.

7. When you select `Remote` in the **Select Authentication Type** field, the following additional inputs are required.

Field	Description
User Name	The user name for this account. This is a mandatory field. The maximum allowed user name length is 32 characters. Spaces and special characters are not allowed in user names.
Select Remote Profile Name	The remote authentication profile to use. Use the Select Remote Profile Name drop-down list to select the authentication profile to use. This configuration is defined in the Remote Profile screen. To create a new <i>Authentication Profile</i> , expand the drop-down list and then select the <i>Add New Profile</i> entry in the list. The <i>All</i> menu item is the only selectable option available within this drop-down list. Support for other items will be enabled in future.
Enable Fall back local authentication	Set this switch to <code>ON</code> to enable local authentication of this user account if remote authentication fails. AirDefense will use the supplied password to enable this user to login successfully. Fallback Local Password The password for this user account as stored locally. Use the  icon to view the entered password. Confirm Password Re-enter the password to verify that the correct password is been entered.

8. Use the **TEST CONNECTION** field to test if the connection to the remote server is successful. The following dialog opens.

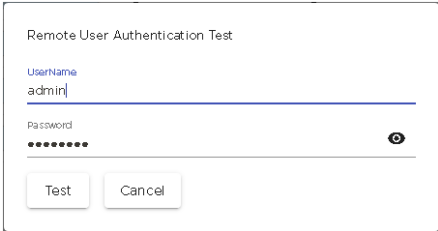
A dialog box titled "Remote User Authentication Test". It contains two input fields: "UserName" with the text "admin" and "Password" with masked characters "*****". There are "Test" and "Cancel" buttons at the bottom.

Provide the correct username and password for testing the remote connection and then select the **Test** button to test the connection.

The status of this test is indicated within this dialog.

9. Select the **VIEW ACCOUNT PREFERENCE** button to configure additional settings for this new user account.

The **USER CREATION** window expands to display additional fields.

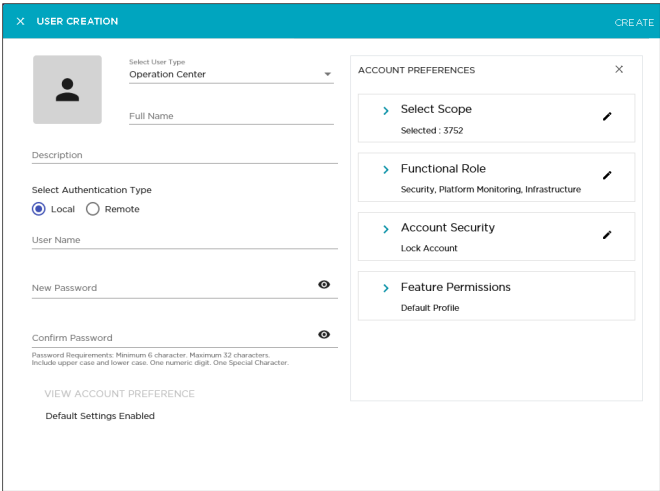
A "USER CREATION" window with a teal header. It has a "CREATE" button in the top right. The main area is divided into two panels. The left panel contains a user icon, "Select User Type" (set to "Operation Center"), "Full Name", "Description", "Select Authentication Type" (with "Local" selected and "Remote" as an option), "User Name", "New Password", "Confirm Password", and a "VIEW ACCOUNT PREFERENCE" button. The right panel, titled "ACCOUNT PREFERENCES", contains four expandable sections: "Select Scope" (Selected: 3752), "Functional Role" (Security, Platform Monitoring, Infrastructure), "Account Security" (Lock Account), and "Feature Permissions" (Default Profile).

The following fields are displayed.

Field	Description
Scope Permission	This field sets the scope in the AirDefense network tree where this user account is considered valid. Expand this field and select the scope for this setting.
Functional Role	This field sets the functional roles that can be performed. Expand this field to view and edit the various parameters for this setting.
Account Security	This field sets the user account's security settings. Expand this field to view and edit the various parameters for this setting.
Feature Permissions	This field sets the permissions that can be assigned. Expand this field to view and edit the various parameters for this setting.

10. Select the **Scope Permission** label to expand it.

The **Scope Permission** field displays a selectable network tree for this AirDefense instance.

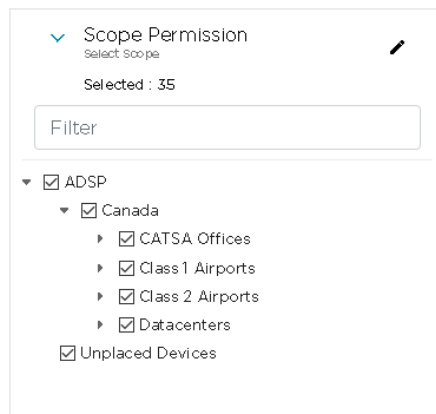

When you select or unselect any level in this network tree, all sub-levels under the level are selected or unselected respectively. A selected level is indicated by ☒ icon. A unselected level is blank.

Use the option control next to each level to include or exclude that level when the user account is considered valid in this AirDefense instance. When a level is selected, the configuration is applied to all its sub-levels. Use the option controls for each level to apply or revoke the user's permission on that level.

11. Select the **Functional Role** label to expand it.

The following additional fields are displayed. Select each option to enable or disable that functional role.

Field	Description
Security	When selected, this option grants permission to manage Security alarms. Is enabled by default.
Performance Monitoring Troubleshooting	When selected, this option grants permission to manage alarms that monitor the AirDefense system performance and alarms generated by the troubleshooting features such as AP Test. Is enabled by default.
Platform Monitoring	When selected, this option grants permission to manage alarms that monitor the AirDefense system (platform). Is enabled by default.
Infrastructure Management	When selected, this option grants permission to manage alarms that are generated by the infrastructure management features. Is enabled by default.
Locationing	When selected, this option grants permission to manage alarms triggered by the Location Based Services system. Is enabled by default.


12. Select the **Account Security** label to expand it.

The following additional fields are displayed. Select each option to enable or disable that security feature. These fields control the security of this new user account.

Field	Description
Lock Account	When selected, the account is locked and cannot be used for logging into this AirDefense instance. Is not enabled by default. Use this option to prepare a user account for later deployment or to temporarily suspend a user account.
Lock after ...	When selected, enter the number of days of inactivity to consider before the account is automatically deactivated. Is not enabled by default. Use this option to create accounts that automatically expire after a set number of days.
Change password at next logon	When selected, the user is forced to change password at next logon. This option is not available for <i>Remote</i> accounts.

13. Select the **Feature Permissions** label to expand it.


Review the **FUNCTIONAL AREA** and the **PERMISSION** fields. This area lists all the functional areas of AirDefense and the permission that can be set to view or edit that area. If no permission is granted for that particular functional area, the value *NO ACCESS* is displayed for it.

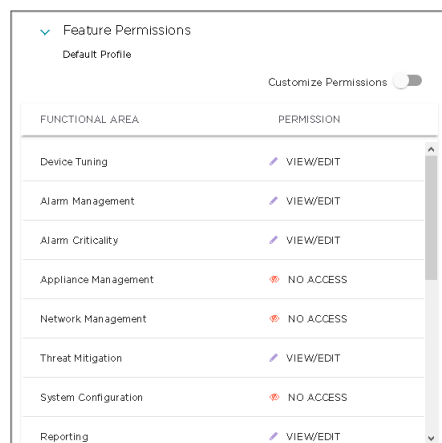

Feature Permissions	
Default Profile	
Customize Permissions ☐	
FUNCTIONAL AREA	PERMISSION
Device Tuning	VIEW/EDIT
Alarm Management	VIEW/EDIT
Alarm Criticality	VIEW/EDIT
Appliance Management	NO ACCESS
Network Management	NO ACCESS
Threat Mitigation	VIEW/EDIT
System Configuration	NO ACCESS
Reporting	VIEW/EDIT

Permissions to view and edit particular areas of AirDefense is set based on the permissions configured in the *User Profile* selected when creating any user or user group.

Select the **Customize Permissions** control to enable editing these permissions individually. After enabling the **Customize Permissions** field, select the  icon located next to the current permission for the functional area that you wish to modify permissions for. The drop-down expands and lists the available permissions that can be applied to the functional area.

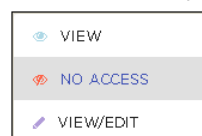

 VIEW
 NO ACCESS
 VIEW/EDIT

The following permissions can be applied to each functional area.

View

Grants permission to view all screens of the functional area. Editing is not permitted in these screens.

No Access

When selected, access is not granted to this functional area. The menus used to access these functional areas are also not displayed.

View/Edit

Grants permission to view and edit all the screens of the functional area and modify the fields in that area. The permission grants full control over this functional area.


14. Select the **CREATE** button located to the top of this dialog to save the newly created user account.

At any point of time, if you wish to exit without creating the user account, select the small **X** button located to the top left of this dialog.

Edit User Information

You can edit any user in the **User Management & Configuration** screen by selecting the  icon next to the its entry in this list.

Extreme AirDefense uses the **User Creation** screen to edit the user account details.

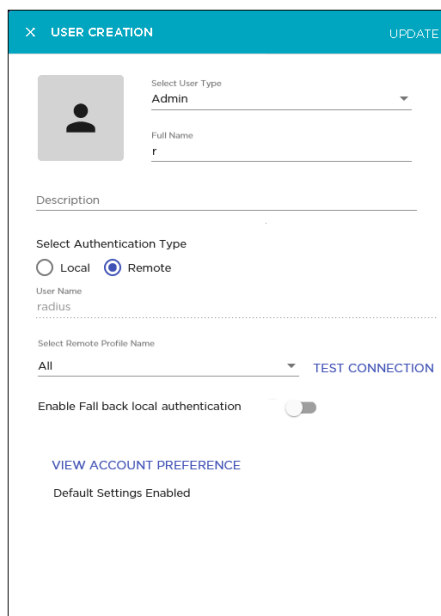

USER CREATION UPDATE

Select User Type
Admin

Full Name
r

Description

Select Authentication Type
☐ Local ☒ Remote

User Name
radius

Select Remote Profile Name
All TEST CONNECTION

Enable Fall back local authentication ☐

[VIEW ACCOUNT PREFERENCE](#)
Default Settings Enabled

All details for this user account are pre-filled in the fields of this screen and can be modified. However, you cannot modify the **User Name** for the selected account.

**Note**

If you do not want to modify your account's password, do not modify the password entered in the **New Password** field. When saving your other modifications, Extreme AirDefense will retain the existing password for this account. However, if you only want to modify the password for this account, enter the same password in the **New Password** and the **Confirm Password** fields and then save your changes.

1. Review the fields in this screen. Make the modifications as required.

For more information on the fields of this screen, see [Add User](#) on page 328.

2. Select the **UPDATE** button to save the changes made to this user account information.

Use the small **X** button located to the top left of the dialog to close it. Extreme AirDefense does not prompt you to save your changes when exiting this dialog. You will lose any unsaved changes when exiting this dialog.

Delete User Account


Use the **User Management & Configuration** screen to delete any user account added to this Extreme AirDefense instance.

**Note**

You cannot delete the account that you have used to login into the Extreme AirDefense instance.

1. If not selected, select the **User** icon from the toolbar.
2. From the list of user accounts that are saved for this Extreme AirDefense instance, select the account that you want to delete. Then select the  icon located to the right of this user account's entry.

The **Delete User** dialog displays.

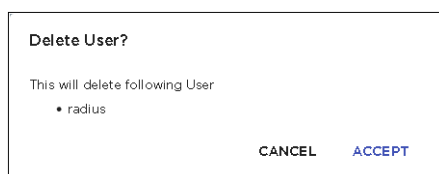

3. Review the account name listed in this dialog.
4. Select the **ACCEPT** button to delete the selected user account.


At anytime, select the **CANCEL** button to exit without deleting this user account.

The selected user account is deleted and removed from the list of valid accounts for this Extreme AirDefense instance.

5. The option control in the first column of each user account entry enables you to select multiple accounts simultaneously. To delete many accounts in the same action, select this option control for each of those accounts that you wish to delete.

The  icon located on top right of this list enables. Select this icon to delete the selected user accounts.

The **Delete User(s)** dialog opens.

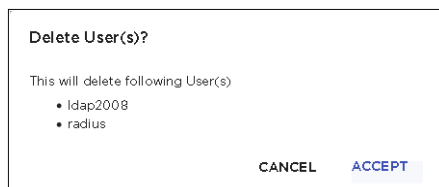

6. Review the list of accounts that you wish to delete.
7. Select the **ACCEPT** button to delete the selected user accounts.

At anytime, select the **CANCEL** button to exit without deleting these user accounts.

The selected user accounts are deleted and removed from the list of valid accounts for this Extreme AirDefense instance.

Local User Settings

The **User Settings** dialog of the **User Management** screen configures the settings for all local user accounts configured on this Extreme AirDefense appliance.

In the legacy user interface, the settings in this dialog are managed from the **Configuration > Account Management > Local Authentication** screen.

1. Select the  icon located to the top right of the **User Management & Configuration** screen

The **User Settings** dialog displays.

✕

USER SETTINGS

RESET

SAVE

Account Login Preference

☒ Max Login Attempts 10

☒ Account locked if max attempts reached within 5 minutes

☐ Account locked if max attempts is reached at anytime

Password Preferences

Minimum of 6 characters and maximum of 32 characters

☒ Uppercase alphabetic characters required

☒ Lowercase alphabetic characters required

☐ Numeric characters required

☐ Non-alphanumeric (special) characters required

☒ Password must be different from previous 1 passwords used

☐ Password must be different from the previous password by 1 characters

☐ Password must be changeable by the associated user only once in a 1 hour period

☐ Password must be changed after 1 days

2. Configure the following **Account Login Preference** parameters.

Field	Description
Max Login Attempts	Use the spinner control to set the maximum number of failed login attempts allowed before the user account is locked.
Account locked if max attempts reached within ...	Use the spinner control to set this value. When set, the user account is locked if the number of attempts specified in the Max Login Attempts control is exceeded in the time specified, in minutes, by this control. For example, if this value is set to five (5) and the Max Login Attempts value is set to ten (10), then the account is locked if an user tries and fails to login for ten (10) times within a span of five (5) minutes. This failure count is reset every time a user successfully logs in.
Account locked if max attempts is reached anytime	When selected, an account is locked immediately when the number of failed attempts exceeds the value set in the Max Login Attempts control. This failure count is reset every time a user successfully logs in.

3. Configure the following **Password Preference** parameters.


Field	Description
Minimum of ... Characters	Use the first spinner control to set the minimum length for the local user account passwords. The default value is <i>6</i> . The maximum value that can be selected is <i>100</i> .
Maximum of ... Characters	Use the second spinner control to set the maximum length for the local user account passwords. The default value is <i>32</i> . The maximum value that can be selected is <i>100</i> .
Uppercase alphabetic characters required	Select this option to ensure that Uppercase alphabets are included in the user account password.
Lowercase alphabetic characters required	Select this option to ensure that Lowercase alphabets are included in the user account password.
Numeric characters required	Select this option to ensure that numbers are included in the user account password.
Non-alphanumeric (special) characters required	Select this option to ensure that non-alphanumeric characters such as #, \$, %, ^, are included in the user account password.
Password must be different from previous ... passwords used	Select this option to ensure that passwords are not reused. Use the spinner control set the number of previous passwords that the current password must not match for it to be considered valid.
Password must be different from the previous password by ... characters	Select this option to ensure that the current password does not match any previous password. Use the spinner control to enforce the number of characters that the passwords must differ by.
Password must be changeable by the associated user only once in a ... hour period	Select this option to prevent a user from frequently changing the password. Use the spinner control to set the time limit in hours within which the user cannot reset the password.
Password must be changed after ... days	Select this option to enforce password expiry. Use the spinner control to set the number of days after which the user is forced to change the password.

4. Select the **SAVE** button to save the changes made to the **User Settings** screen.

Select the **RESET** button to reset the changes made to this screen. All your changes will be lost on reset.

User Group Management

User Groups are managed from the **User Management & Configuration** screen. In the **User Management & Configuration** screen, select the **User Group** button. The **User Management & Configuration** screen displays a list of all user groups created for this AirDefense instance.

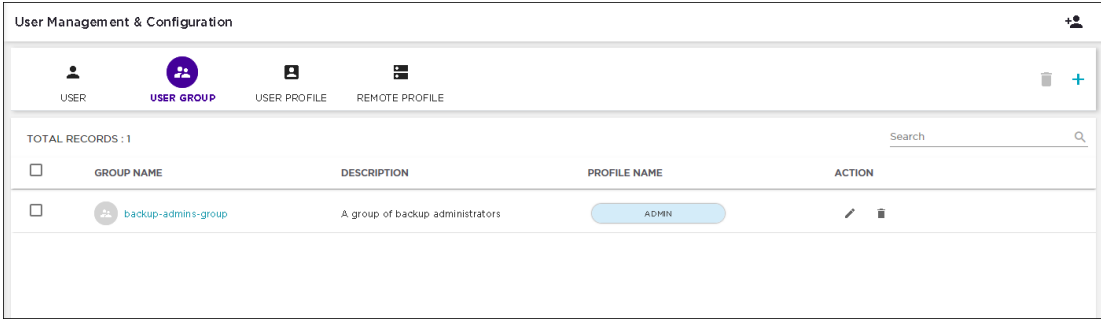

For each user group, the following information is displayed.

Field	Description
Group Name	The name of this group. Click the group name to edit its information.
Description	The description assigned to this user group.
Profile Name	The user profile applied to this user group. Click this field to view permissions assigned to this user group. This information is fetched from the user profile used to create this user group and any customizations that you have made to it. The permissions are displayed in a separate popup dialog.
Action	The actions that can be performed on this user group. You can use the  icon to edit the user group or use the  icon to delete the user group.


The following activities can be performed from this screen.

- [Add User Group](#) - Add a new user group for this AirDefense instance.
- [Edit User Group](#) - Edit the details for an existing user group.
- [Delete User Group](#) - Delete an existing user group.


Add User Group

To add a new user group to the list of user groups used with this AirDefense instance:

1. Select the  icon located to the top right of this screen.
The **User Group Creation** dialog displays.

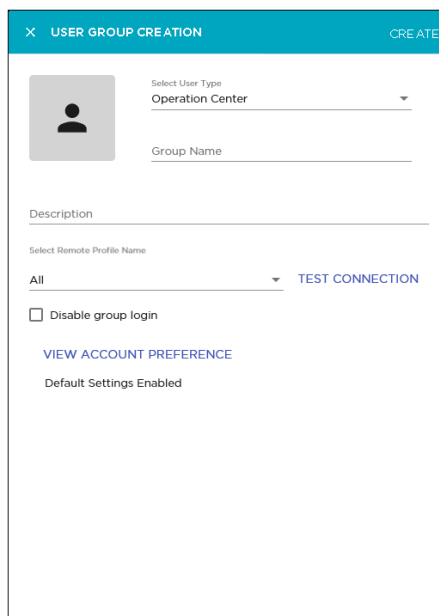

2. Use the **Select User Type** drop-down list to select user type to create.
Access to various features of AirDefense depends on the permissions assigned to the selected user type. The default user type is *Operation Center*.
3. In the **Group Name** field, provide a name for this user group.
This is a mandatory field.
4. In the **Description** field, provide a brief description about this user group and its purpose.
This information should enable you to uniquely identify this user group from similar groups.
5. Use the **Select Remote Profile Name** drop-down list to select the authentication profile to use. This configuration is defined in the [Remote Profile](#) screen. To create a new *Authentication Profile*, expand the drop-down list and then select the *Add New Profile* entry in the list.
The *All* menu item is the only selectable option available within this drop-down list. Support for other items will be enabled in future.
6. Use the **TEST CONNECTION** field to test if the connection to the remote server is successful. The following dialog opens.

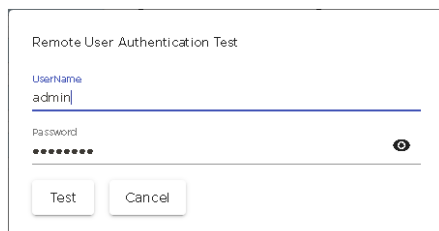

Provide the correct username and password for testing the remote connection and then select the **Test** button to test the connection.

The status of this test is indicated within this dialog.

7. Select the **Disable group login** control to prevent users belonging to this group from logging into this AirDefense instance.

When a user is authenticated from a RADIUS or LDAP server, and when *Group Authentication* is enabled, the authentication servers return the group name to which the user belongs. This group name is verified with the local AirDefense groups and if the group is found, the user is allowed access. Use this option to temporarily suspend users belonging to this group from accessing this AirDefense instance.

8. Select the **VIEW ACCOUNT PREFERENCE** button to configure additional settings for this new user account.


The **USER CREATION** window expands to display additional fields.

The following fields are displayed.

Field	Description
Scope Permission	This field sets the scope in the AirDefense network tree where this user account is considered valid. Expand this field and select the scope for this setting.
Functional Role	This field sets the functional roles that can be performed. Expand this field to view and edit the various parameters for this setting.
Account Security	This field sets the user account's security settings. Expand this field to view and edit the various parameters for this setting.
Feature Permissions	This field sets the permissions that can be assigned. Expand this field to view and edit the various parameters for this setting.

9. Select the **Scope Permission** label to expand it.

The **Scope Permission** field displays a selectable network tree for this AirDefense instance.

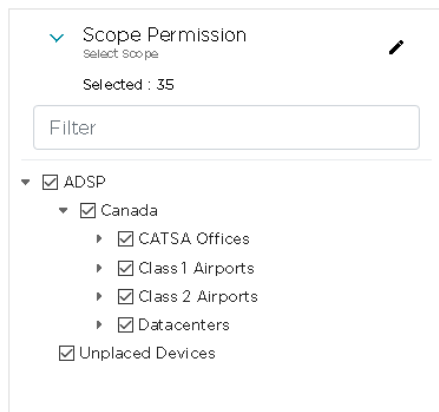

When you select or unselect any level in this network tree, all sub-levels under the level are selected or unselected respectively. A selected level is indicated by ☒ icon. A unselected level is blank.

Use the option control next to each level to include or exclude that level when the user account is considered valid in this AirDefense instance. When a level is selected, the configuration is applied to all its sub-levels. Use the option controls for each level to apply or revoke the user's permission on that level.


10. Select the **Functional Role** label to expand it.

The following additional fields are displayed. Select each option to enable or disable that functional role.

Field	Description
Security	When selected, this option grants permission to manage Security alarms. Is enabled by default.
Performance Monitoring Troubleshooting	When selected, this option grants permission to manage alarms that monitor the AirDefense system performance and alarms generated by the troubleshooting features such as AP Test. Is enabled by default.
Platform Monitoring	When selected, this option grants permission to manage alarms that monitor the AirDefense system (platform). Is enabled by default.
Infrastructure Management	When selected, this option grants permission to manage alarms that are generated by the infrastructure management features. Is enabled by default.
Locationing	When selected, this option grants permission to manage alarms triggered by the Location Based Services system. Is enabled by default.

11. Select the **Feature Permissions** label to expand it.


Review the **FUNCTIONAL AREA** and the **PERMISSION** fields. This area lists all the functional areas of AirDefense and the permission that can be set to view or edit that area. If no permission is granted for that particular functional area, the value *NO ACCESS* is displayed for it.

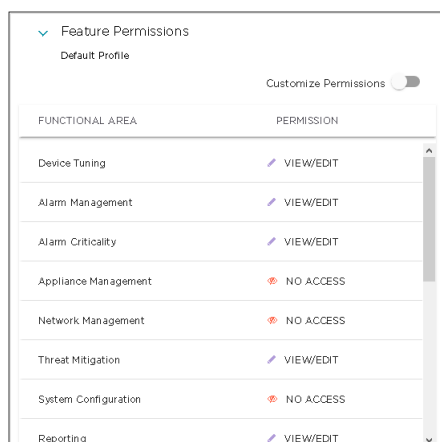

FUNCTIONAL AREA	PERMISSION
Device Tuning	VIEW/EDIT
Alarm Management	VIEW/EDIT
Alarm Criticality	VIEW/EDIT
Appliance Management	NO ACCESS
Network Management	NO ACCESS
Threat Mitigation	VIEW/EDIT
System Configuration	NO ACCESS
Reporting	VIEW/EDIT

Permissions to view and edit particular areas of AirDefense is set based on the permissions configured in the *User Profile* selected when creating any user or user group.

Select the **Customize Permissions** control to enable editing these permissions individually. After enabling the **Customize Permissions** field, select the  icon located next to the current permission for the functional area that you wish to modify permissions for. The drop-down expands and lists the available permissions that can be applied to the functional area.

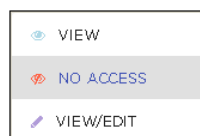

The following permissions can be applied to each functional area.

View

Grants permission to view all screens of the functional area. Editing is not permitted in these screens.

No Access

When selected, access is not granted to this functional area. The menus used to access these functional areas are also not displayed.

View/Edit

Grants permission to view and edit all the screens of the functional area and modify the fields in that area. The permission grants full control over this functional area.


12. Select the **CREATE** button located to the top of this dialog to save the newly created user group.

At any point of time, if you wish to exit without creating the user group, select the small **X** button located to the top left of this dialog.

Edit User Group Information

You can edit any user group in the **User Management & Configuration** screen by selecting the  icon next to its entry in this list.

AirDefense uses the **User Group Creation** screen to edit user group details.

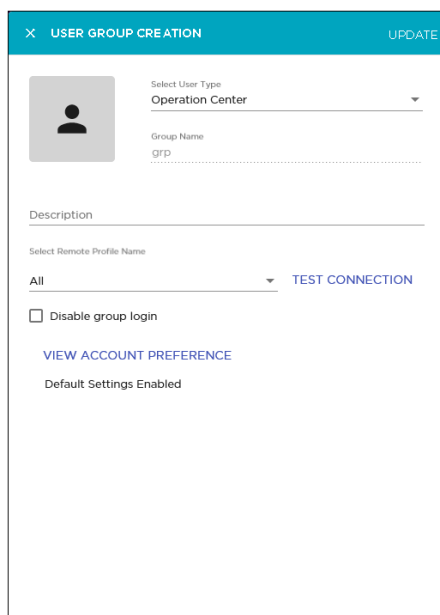

All details for this user group are pre-filled in the fields of this screen and can be modified. However, you cannot modify the **Group Name** for the selected group.


1. Review the fields in this screen. Make the modifications as required.
For more information on the fields of this screen, see [Add User Group](#) on page 339
2. Select the **UPDATE** button to save the changes made to this user group information.
Use the small **X** button located to the top left of this dialog to close it. AirDefense does not prompt you to save your changes when exiting this dialog. Unsaved changes are not saved when exiting this dialog.

Delete User Group

Use the **User Management & Configuration** screen to delete any user group added to this AirDefense instance.

1. If not selected, select the **User Group** icon from the toolbar.
2. From the list of user groups that are created for this AirDefense instance, select the user group that you want to delete. Then select the  icon located to the right of this user group's entry.

The **Delete User Group** dialog displays.

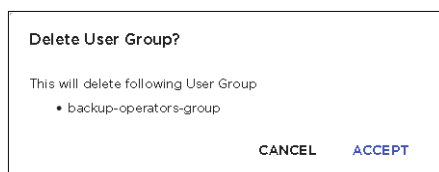

3. Review the user group name listed in this dialog.

4. Select the **ACCEPT** button to delete the selected user group.


At anytime, select the **CANCEL** button to exit without deleting this user group.

The selected user group is deleted and removed from the list of valid user groups for this AirDefense instance.

5. The option control in the first column of each user group entry enables you to select multiple groups simultaneously. To delete many groups in the same action, select this option control for each of those groups that you wish to delete.

The  icon located to the top right of this list enables. Select this icon to delete the selected user groups.

The **Delete User Group(s)** dialog opens.

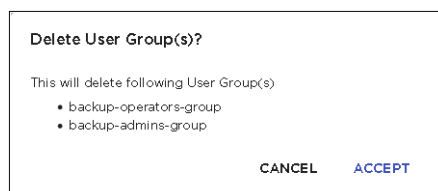

6. Review the list of user groups that you wish to delete.
7. Select the **ACCEPT** button to delete the selected user groups.

At anytime, select the **CANCEL** button to exit without deleting these user groups.

The selected user groups are deleted and removed from the list of valid user groups for this AirDefense instance.

User Profile Management

User Profiles are used to configure a set of permissions and other settings that can be applied to new and existing user accounts. AirDefense provides a few pre-created user profiles with commonly used permissions already defined within these profiles. These pre-created profiles are:

- *Super Admin* - This user profile is used only for the account that is created as the default account for this AirDefense instance. There is only one account with this user profile in any instance of AirDefense.
- *Admin* - This user profile is used to provide full administrative control to this instance of AirDefense. You can have multiple users with this user profile.
- *Guest* - This user profile is used to grant some minimum set of permissions to users to view some of the functional areas within this AirDefense instance.

- *Help Desk* - This user profile is used to grant certain permissions to users that act as help desk for resolving issues with this instance of AirDefense.
- *Operation Center* - This user profile provides higher access than *Help Desk* users and is generally granted to a networks operation center user to manage this AirDefense instance from a remote location.



Important

Please note that the user profiles that are marked as *Default* in the **Profile Type** field are created by the AirDefense system and cannot be edited or deleted. You can use these default profiles as a template to create your customized user profiles.

User Profiles are managed from the **User Management & Configuration** screen. In the **User Management & Configuration** screen, select the **User Profile** button. The **User Management & Configuration** screen displays a list of all the user profiles configured for this AirDefense instance.

User Management & Configuration					
USER USER GROUP USER PROFILE REMOTE PROFILE					
TOTAL RECORDS : 6					
☐	PROFILE NAME	PROFILE TYPE	USAGES	PROFILE SINCE	ACTION
☐	Super Admin	Default	1	-	
☐	Admin	Default	2	-	
☐	Guest	Default	0	-	
☐	Help Desk	Default	0	-	
☐	Operation Center	Default	0	-	
☐	Restrictd Operation Center	Custom	0	Oct 08, 2019, 10:43:37 AM	


For each user profile, the following information is displayed.

Field	Description
Profile Name	The name of this user profile.
Profile Type	The profile type. For a profile created by the AirDefense system, this field displays <i>Default</i> . For all user created profiles, this field displays <i>Custom</i> .
Usages	The number of times this profiles was assigned to user accounts valid for this AirDefense instance.
Profile Since	The time stamp when this user profile was created. This is only shown for profiles that are created by users and are marked as <i>Custom</i> in the Profile Type field.
Action	The actions that can be performed on this user profile. You can use the icon to edit this user profile or use the icon to delete this user profile. These actions are not enabled for profiles that are marked as <i>Default</i> in the Profile Type field.

Add User Profile

To add a new custom user profile to the list of valid profiles used with this AirDefense instance:

1. Select the  icon to the top right of this screen.
The **User Profile Creation** dialog displays.

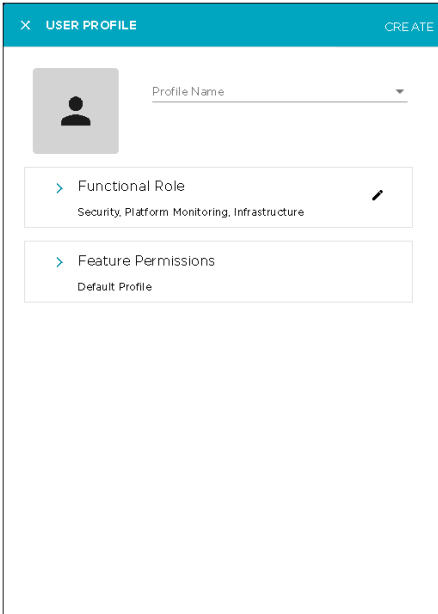

2. In the **Profile Name** field, provide a name for this user profile.
This is a mandatory field.
3. Select the **Functional Role** label to expand it.
The following additional fields are displayed. Select each option to enable or disable that functional role.

Field	Description
Security	When selected, this option grants permission to manage Security alarms. Is enabled by default.
Performance Monitoring Troubleshooting	When selected, this option grants permission to manage alarms that monitor the AirDefense system performance and alarms generated by the troubleshooting features such as AP Test. Is enabled by default.
Platform Monitoring	When selected, this option grants permission to manage alarms that monitor the AirDefense system (platform). Is enabled by default.
Infrastructure Management	When selected, this option grants permission to manage alarms that are generated by the infrastructure management features. Is enabled by default.
Locationing	When selected, this option grants permission to manage alarms triggered by the Location Based Services system. Is enabled by default.

4. Select the **Feature Permissions** label to expand it.

Review the **FUNCTIONAL AREA** and the **PERMISSION** fields. This area lists all the functional areas of AirDefense and the permissions that can be set to view or edit that area. If no permissions are granted for that particular functional area, the value *NO ACCESS* is displayed for it.

Feature Permissions	
Default Profile	
EDIT	
FUNCTIONAL AREA	PERMISSION
Device Tuning	VIEW/EDIT
Alarm Management	VIEW/EDIT
Alarm Criticality	VIEW/EDIT
Appliance Management	NO ACCESS
Network Management	NO ACCESS
Threat Mitigation	VIEW/EDIT
System Configuration	NO ACCESS
Reporting	VIEW/EDIT
Analysis Tools	VIEW/EDIT

Permissions to view and edit particular areas of AirDefense is set based on the permissions configured in the *User Type* selected when creating any user or user group.

Select the **Edit** button to enable editing these permissions individually. Select the icon located next to the current permission for the functional area that you wish to modify permissions for. The drop-down expands and lists the available permissions that can be applied to the functional area.

VIEW
NO ACCESS
VIEW/EDIT

The following permissions can be applied to each functional area.

View

Grants permission to view all screens of the functional area. Editing is not permitted in these screens.

No Access

When selected, access is not granted to this functional area. The menus used to access these functional areas are also not displayed.

View/Edit

Grants permission to view and edit all the screens of the functional area and modify the fields in that area. The permission grants full control over this functional area.

5. Select the **CREATE** button located to the top of this dialog to save the newly created user profile.

At any point of time, if you wish to exit without creating the user profile, select the small **X** button located to the top left of this dialog.

**Note**

Please note that this user profile will be created as a *Custom* profile inside the AirDefense instance.

Edit User Profile


You can edit any user profile marked as *CUSTOM* in the **Profile Type** field in the **User**

Management & Configuration screen. Use the  icon next to the user profile's entry in this list.

**Important**

Profiles marked as *DEFAULT* in the **Profile Type** field are created by the AirDefense system and cannot be modified.

AirDefense uses the **User Profile** screen to edit user profile details.

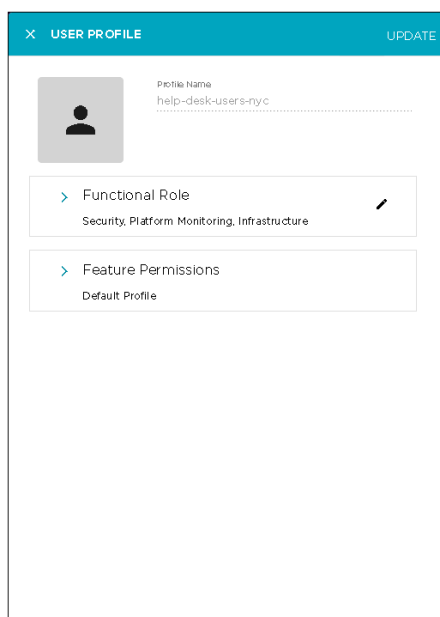

All details for this user profile are pre-filled or set for all the fields of this screen and can be modified. However, you cannot modify the **Profile Name** for the selected profile.

1. Review the fields in this screen. Make the modifications as required.
For more information on the fields of this screen, see [Add User Profile](#) on page 347.
2. Select the **UPDATE** button to save the changes made to this user profile information.
Use the small **X** button located to the top left of this dialog to close it. AirDefense does not prompt you to save your changes when exiting this dialog. If there are any unsaved changes when exiting this dialog, they are lost.

Delete User Profile

Use the **User Management & Configuration** screen to delete any user profile added to this AirDefense instance.




Important

You cannot delete any profile marked as *DEFAULT* in this screen. These are created by the ExtremeLocation system and cannot be edited or deleted.

1. If not selected, select the **User Profile** icon from the toolbar.
2. From the list of user profiles created for this AirDefense instance, select the profile that you want to delete. Then select the  icon to the right of this user profile's entry.

The **Delete User Profile** dialog displays.

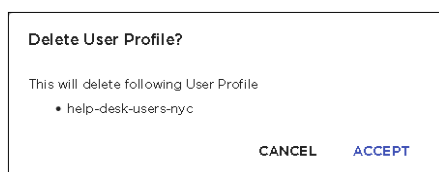

3. Review the user profile listed in this dialog.
4. Select the **ACCEPT** button to delete the selected profile.


At anytime, select the **CANCEL** button to exit without deleting this user profile.

The selected user profile is deleted and removed from the list of valid profiles for this AirDefense instance.

5. The option control in the first column of each user profile entry enables you to select multiple profiles simultaneously. To delete many profiles in the same action, select this option control for each of those profiles that you wish to delete.

The  icon located to the top right of this list enables. Select this icon to delete the selected user profiles.

The **Delete User Profile(s)** dialog opens.

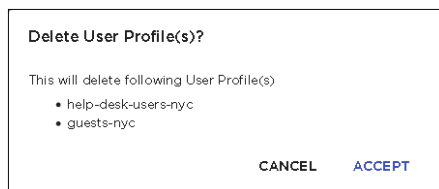

6. Review the list of user profiles that you wish to delete.
7. Select the **ACCEPT** button to delete the selected user profiles.

At anytime, select the **CANCEL** button to exit without deleting these user profiles.

The selected user profiles are deleted and removed from the list of valid user profiles for this AirDefense instance.

Remote Profile Management

Remote Profiles are used to configure the user authentication parameters required to authenticate users on remote RADIUS or LDAP servers. Storing user credentials on a centralized data store reduces the cost of managing user credentials across different systems and avoids replication of the same data across multiple databases.

Remote Profiles are managed from the **User Management & Configuration** screen. In the **User Management & Configuration** screen, select the **Remote Profile** button. The **User Management & Configuration** screen displays a list of all remote profiles configured for this AirDefense instance.

USER	USER GROUP	USER PROFILE	REMOTE PROFILE	
TOTAL RECORDS: 3				Search
☐	REMOTE PROFILE NAME	TYPE	ACTION	
☐	10234123222	RADIUS		
☐	sample2	RADIUS		
☐	sample	LDAP		

For each remote profile, the following information is displayed.

Field	Description
Remote Profile Name	The name of this remote profile.
Type	The type of this profile. Displays <i>RADIUS</i> if the remote server is a RADIUS server. Displays <i>LDAP</i> if the remote server is a LDAP server.
Action	The actions that can be performed on this remote profile. You can use the icon to edit this remote profile or use the icon to delete this remote profile.

The following activities can be performed from this screen.

- [Add Remote Profile](#) - Add a new remote profile for this AirDefense instance.
- [Edit Remote Profile](#) - Edit the details for an existing remote profile.
- [Delete Remote Profile](#) - Delete an existing remote profile.

Add Remote Profile

To add a new remote profile to the list of valid profiles used with this AirDefense instance.

1. Select the icon to the top right of this screen.
The **Remote Authentication** dialog displays.

REMOTE AUTHENTICATION

CREATE

Remote Server Name

Type

LDAP

LDAP

LDAPS

LDAP Server

192.168.0.1

LDAP Port

389

User Prefix

Example: "CN="

User Suffix

Example: "DN=MyCompany, DC=corp"

☐ Use LDAP for external group based authentication

2. In the **Remote Server Name** field, provide a name for this profile.
This is a mandatory field.
3. From the **Type** drop-down list, select the type of remote authentication server used to authenticate your users.
Select from one of *LDAP* or *RADIUS*.

LDAP

Indicates that the remote authentication server is a LDAP server.

RADIUS

Indicates that the remote authentication server is a RADIUS server.

4. When you select *LDAP* in the **Type** field, the following additional inputs are required.
Select one of **LDAP** or **LDAPS** as your server type.

Field	Description
LDAP Server	The IP address of the remote LDAP server.
LDAP Port	The port on which the LDAP authentication server is listening. The default LDAP port is 389.
User Prefix	The name of the windows domain for the server. This field is optional. You can leave this field blank or you can supply a prefix ending in a backslash (\) or a double backslash (\\). You may have to experiment to find out the correct option that works with your LDAP deployment.

Field	Description
User Suffix	Enter the domain name for this server. This field is optional. You can leave this field blank or supply a valid suffix.
Use LDAP for external group based authentication	Select this option to enable authentication of a user with a LDAP server based on the group that the user account is a member of.

5. When you select **Use LDAP for external group based authentication** option, the following additional fields are displayed.

Field	Description
Server Type	The server type of the remote LDAP server. This value is always <i>Active Directory</i> . The other fields are used in group identification for the Active Directory server type.
Search base	The name of your domain in the Active Directory. Use the format <code>DC=<your-domain-name>DC=<your-domain-name></code> . The Search base field should be the same as the User Prefix field but without any backslashes (/).
User field name	Enter a string to find your user name in the Active Directory. Normally, this string is <code>sAMAccountName</code> .
Group attribute	Enter a string to find your group name in the Active Directory. Normally this string is <code>memberOf</code> .
Group Reg Ex	Enter a string that is used to strip out the unnecessary information and send only that information that is relevant for AirDefense for use in group identification. Normally, this string is <code>CN= ([^ ,] *)</code> .



Note

If your LDAP administrator changes any of the above strings, your authentication will fail. Please ask your LDAP administrator to inform you of any changes in the above strings.

6. When you select **RADIUS** in the **Type** field, the following additional inputs are required.

Select from one of the following RADIUS protocols.

- PAP
- CHAP
- MSCHAP
- MSCHAPv2

Provide the following additional information for the RADIUS server.

Field	Description
RADIUS Server	The IP address of the remote RADIUS authentication server.
RADIUS Port	The port on which the RADIUS authentication server is listening. The default RADIUS port is 1812.
Shared Secret	The shared secret for accessing this RADIUS server. Use the  icon to view this secret.
Time Out	Timeout value for authentication. Once this time exceeds, the authentication fails.
Retries	The number of retries allowed when authentication fails for any reason.
User Prefix	The name of the windows domain for the server. This field is optional. You can leave this field blank or you can supply a prefix ending in a backslash (\) or a double backslash (\\). You may have to experiment to find out the correct option that works with your RADIUS deployment.
User Suffix	Enter the domain name for this server. This field is optional. You can leave this field blank or supply a valid suffix.
Use RADIUS for external group based authentication	Select this option to enable authentication of a user with a RADIUS server based on the group that the user account is a member of.

7. When you select Use RADIUS for external group based authentication control the following additional input is required.

Field	Description
Group attribute	Displays a list of attributes used to identify the group the user belongs to in the remote RADIUS server. When an attribute is selected, values are inserted into the Vendor Code , Attribute Code , and Group RegEx fields for AirDefense to use with group authentication.



Note

Do not change any values that are inserted in the **Vendor Code**, **Attribute Code**, and **Group RegEx** fields when you select any value the **Group Attribute** field.


8. Select the **CREATE** button located to the top of this dialog to save the newly created remote profile.

At any point of time, if you wish to exit without creating the remote profile, select the small **X** button located to the top left of this dialog.

Edit Remote Profile

You can edit a remote profile's settings in the **User Management & Configuration** screen by selecting the  icon next to its entry in this list.

AirDefense uses the **Remote Authentication** screen to edit the remote profile details.

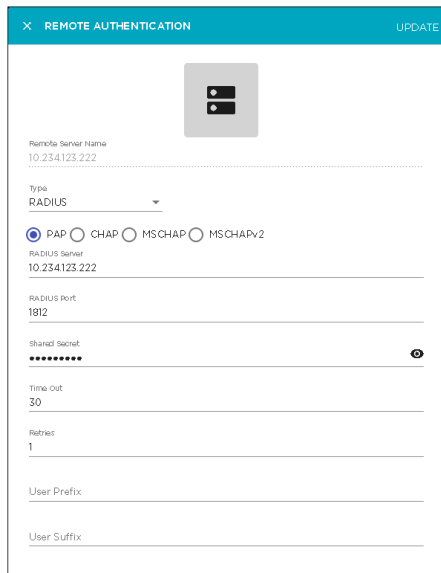


All details for this remote profile is pre-filled in the fields of this screen and can be modified. However, you cannot modify the **Remote Server Name** field for the selected remote profile.

1. Review the fields in this screen. Make the modifications as required.
For more information on the fields of this screen, see [Add Remote Profile](#) on page 351.
2. Select the **UPDATE** button to save the changes made to this remote profile's information.
Use the small **X** button located to the top left of the dialog to close it. AirDefense does not prompt you to save changes when exiting this dialog. If you have not saved your data, you will lose any unsaved changes when exiting this dialog.

Delete Remote Profile

Use the **User Management & Configuration** screen to delete any remote profile added to this AirDefense instance.

1. If not selected, select the **Remote Profile** icon from the toolbar.
2. From the list of remote profiles, select the profile that you want to delete. Then select the  icon located to the right of this profile's entry.
The **Delete Remote Profile** dialog displays.

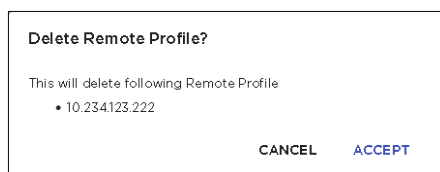

3. Review the remote profile listed in this dialog.
4. Select the **ACCEPT** button to delete the selected profile.


At anytime, select the **CANCEL** button to exit without deleting this remote profile.

The selected remote profile is deleted and removed from the list of valid profiles for this AirDefense instance.

5. The option control in the first column of each remote profile entry enables you to select multiple profiles simultaneously. To delete many profiles in the same action, select this option control for each of those profiles that you wish to delete.

The  icon located to the top right of this list enables. Select this icon to delete the selected remote profiles.

The **Delete Remote Profile(s)** dialog opens.

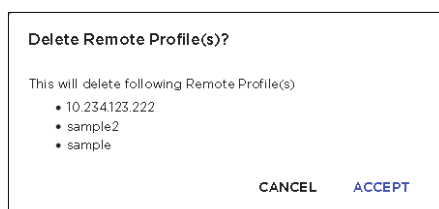

6. Review the remote profile listed in this dialog.
7. Select the **ACCEPT** button to delete the selected remote profiles.

At anytime, select the **CANCEL** button to exit without deleting these remote profiles.

The selected remote profiles are deleted and removed from the list of valid profiles for this AirDefense instance.

System Settings


Use the **System Settings** screen to configure a remote System Log server to store the log of activities performed directly on your Extreme AirDefense instance. This log can then be used for various purposes like performing security audits, audits for fulfilling statutory requirements, and other similar audits of your Extreme AirDefense installation.

When enabled, any activity performed directly on the Extreme AirDefense system, using its web interface, is logged automatically and then sent to the remote system log server.

An activity is an action that is performed directly on the Extreme AirDefense physical device. Logins, logouts, configuration changes, user management actions, and reboots are some of the activities that are recorded and forwarded to the remote system log server.

System log settings are managed from the **System Settings** screen. This screen displays when you select **Settings > System Settings** menu path from the Extreme AirDefense user interface.

The following screen displays.

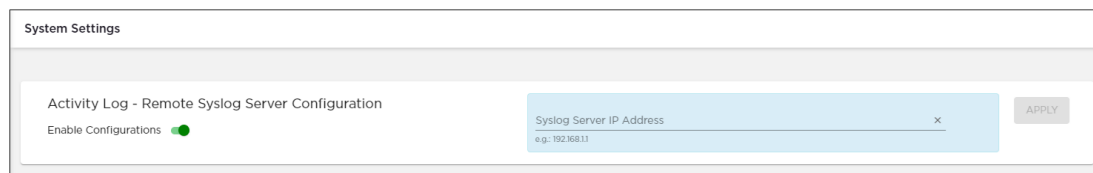

If a remote system log server is already configured, this screen displays the IP address of the currently configured server.

Data Format

Activity data from Extreme AirDefense is sent in the standard *syslog* format. Your system log server should listen for data on the standard port number 514.



Note

We do not support system log servers listening on non-standard ports.

Severity Levels

All activity log entries for your Extreme AirDefense server are sent with the following levels:

Facility Code

1 - User

Severity Value

6 - Information

Add System Log Server IP Address

To add an external *system log* server to record activities performed directly on your Extreme AirDefense instance:

1. Select the **Enable Configurations** switch to enable it.

The IP address of the remote system log server can only be entered if the **Enable Configurations** switch is set to the *ON* position.

The **Syslog Server IP Address** field gets enabled. If a System Log server is already configured for receiving activity logs, then this field displays its IP address.

2. Provide the IP address of the remote *system log* server in the **Syslog Server IP Address** field.

The IP address is only verified for proper formatting. Extreme AirDefense does not verify that the IP address is of a valid system log server.

If already configured, you can also choose to provide the IP address of your current *system log* server in this field. This is the server where your Alarm logs are currently being sent.

**Note**


This field will not accept host names.

**Note**

You cannot enter multiple IP addresses in this field.

3. Select the **APPLY** button to save the information.

On successful registration, activity logs from your Extreme AirDefense system is sent to the remote *system log* server.

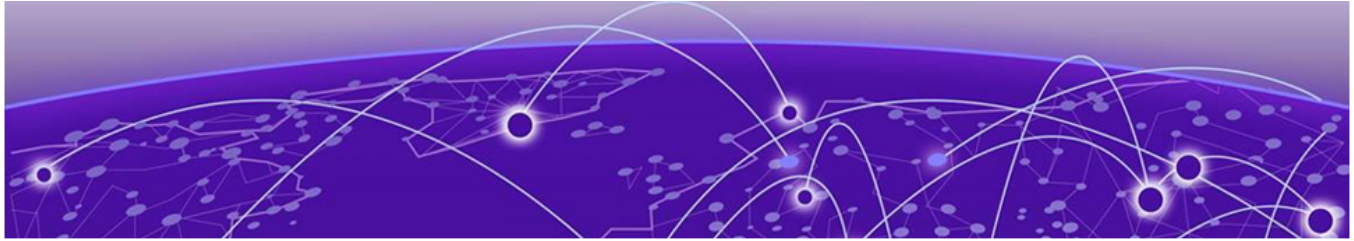

System Overview

- [Extreme AirDefense in Standalone Mode](#) on page 360
- [System Components](#) on page 360
- [System Requirements](#) on page 361
- [Version Compatibility for Upgrade](#) on page 362
- [Connecting to Hardware Appliance](#) on page 363
- [Configuring the Appliance](#) on page 364
- [System Configuration](#) on page 365
- [Selecting and Deploying APs and Sensors](#) on page 366
- [Connecting to the Network](#) on page 367
- [Assigning User Interfaces](#) on page 367
- [Basic Navigation](#) on page 369
- [Alarm Time Reporting](#) on page 371

Extreme AirDefense is an advanced wireless intrusion prevention system (WIPS) providing automatic protection against wireless threats and a key layer of security for wireless VPNs, including encryption and authentication. The platform provides you with a cost effective and simplified way to fully customize your wireless management and monitoring solutions to meet organizational needs and industry requirements.

Extreme AirDefense offers:

- 24x7 Wireless Intrusion Prevention (WIPS)
- Network Assurance Tools
- Multi-vendor WLAN Infrastructure Management
- Proximity and Analytics capabilities
- Forensic Analysis capabilities.

These tool-sets are seamlessly integrated into a single console to simplify the operation and security of your wireless network. With the device management system, you can manage your network remotely from a central location.

Extreme AirDefense consists of program areas and drill-down views. Each view gives you more details to help troubleshoot specific threats or performance problems reported by the Extreme AirDefense. The comprehensive configuration features give you full control over your network from a central location.


Extreme AirDefense in Standalone Mode

As part of an Extreme AirDefense system, the Extreme AirDefense appliance is a true plug-and-play system with a hardened operating system, optimized database, automated database maintenance, and all application software included.

The Extreme AirDefense appliance provides a scalable, secure, and manageable solution for enterprises to deploy in a single office or corporate campus. As an appliance, Extreme AirDefense does not require an enterprise to buy, install, configure, lock-down, and support a server, operating system, and database. A true appliance comes ready with the application and all supporting software preloaded.

System Components

Extreme AirDefense provides advanced Wireless LAN monitoring with a distributed architecture of remote sensors and APs that communicate with a centralized server (appliance.) A basic Extreme AirDefense system consists of an Extreme AirDefense appliance and one or more sensors.

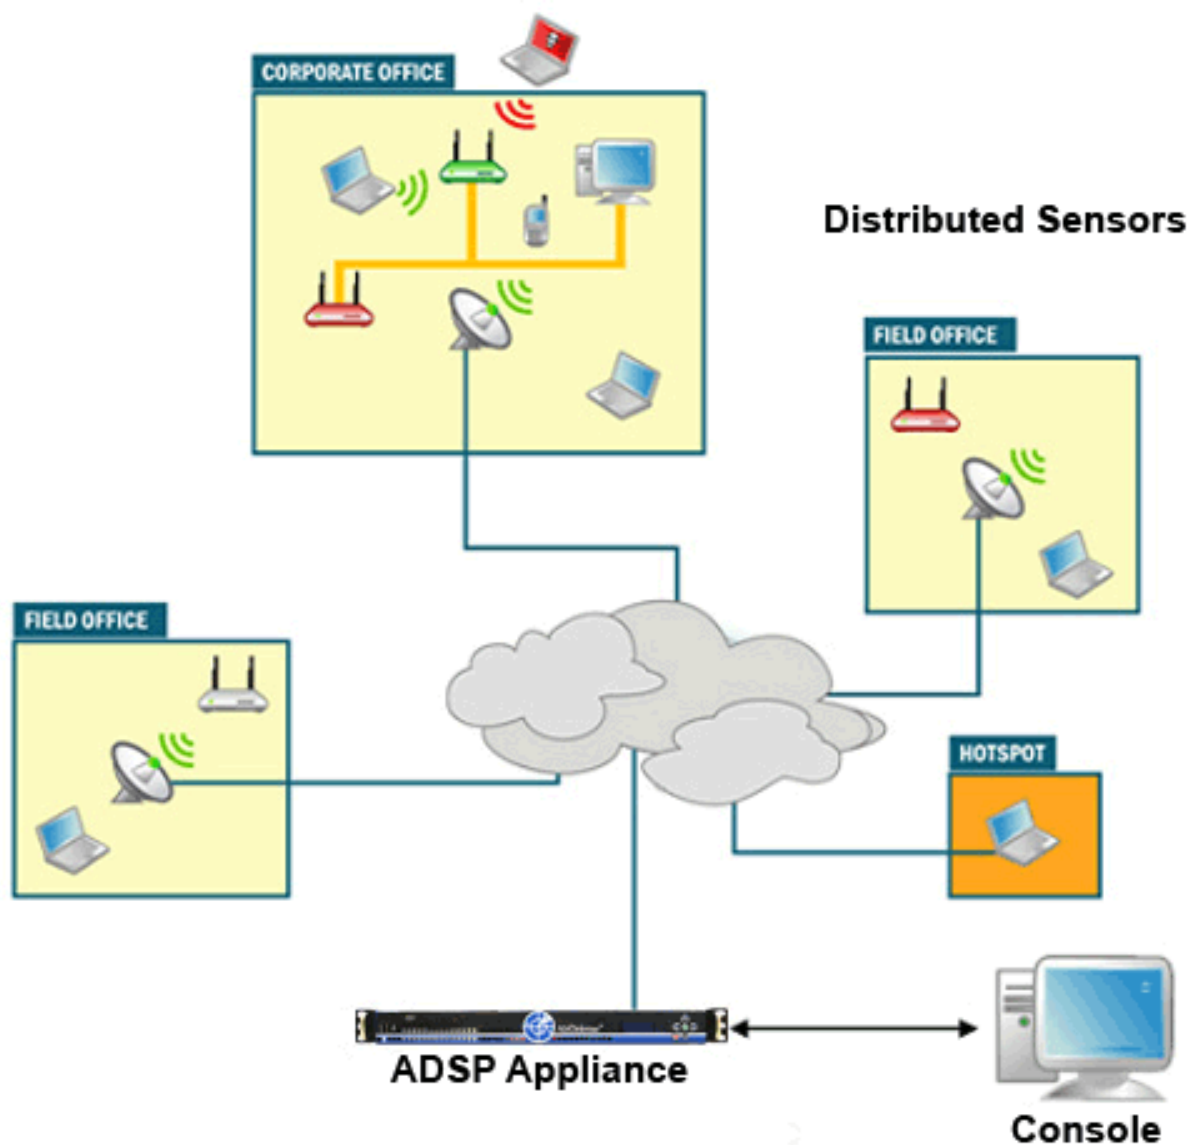

The Extreme AirDefense remote sensors collect frames being transmitted by 802.11a-, ac, b-, g-, and n-compliant devices, and sends that data to a central Extreme AirDefense appliance for analysis and correlation.

System Requirements

The following are the different requirements for Extreme AirDefense:

- [Supported Hardware Appliances](#)
- [Supported Browsers](#)
- [Supported Operating Systems](#)

Supported Hardware Appliances

Model NX95x0

Supported Browsers

- Firefox 36 and higher
- Internet Explorer 11 and higher
- Google Chrome 40, 41 and 53.

Supported Operating Systems

The following operating systems can be used to install the Extreme AirDefense toolkit. The Extreme AirDefense toolkit is a set of utilities for managing an Extreme AirDefense instance.

- Windows 7
- Windows 10 Enterprise
- Linux
- Mac (Thin Client Applications only)

Version Compatibility for Upgrade

The following versions can be updated to the latest version of Extreme AirDefense.



Important

Upgrading from versions other than those listed in this section are not supported. If you have a version not listed in this section, and would like to upgrade to , you must have an Extreme AirDefense support contract. Please contact your Extreme Networks sales person if you currently do not have a support contract and would like to receive access to software updates for this product.

Version 9.5

Version 10.0 can be upgraded directly from version 9.5.0-11 only. Direct upgrade from any other version is not supported.



Note

For existing customers who would like to upgrade to 10.0, you must have an AirDefense support contract. Please contact your Extreme Networks sales person if you currently do not have a support contract and would like to receive access to software updates for this product.

WiNG Version Compatibility

AirDefense is compatible with sensors operating on WiNG APs running WiNG-5 and WiNG-7. Individual AirDefense functionality will vary depending upon AP hardware model. Refer to AirDefense release notes for a detailed matrix indicating AP hardware and AirDefense feature support.

Extreme Wireless Version Compatibility

AirDefense is compatible with the following Extreme Wireless versions:

- Extreme Wireless 10.41.07 (dedicated sensor support for 39xx series APs only)
- Extreme Wireless 10.41.09

Extreme Cloud Appliance Compatibility

AirDefense is compatible with the following Extreme Cloud Appliance versions:

- Extreme Cloud Appliance 4.76.08

Connecting to Hardware Appliance

Extreme AirDefense Hardware Appliance is accessible through:

- By directly connecting a keyboard and mouse to the hardware appliance
- Using a laptop by connecting directly to the hardware appliance's LAN port
- Remote access through SSH

Connect a Laptop

You can physically connect a laptop to the Extreme AirDefense hardware appliance's Ethernet port to communicate through an IP address.

A new installation of Extreme AirDefense does not have a default IP address. It has to be assigned by the Extreme AirDefense operator. Ensure that your laptop has an IP address in the same subnet as the Extreme AirDefense Appliance.

Connect a Monitor and Keyboard

You can physically connect a monitor, keyboard, and mouse to the Extreme AirDefense Appliance. Use the appropriate connectors (such as PS2 or USB) to plug in to the appliance directly.

Access Appliance Remotely

To access the appliance remotely, use the SSH protocol version 2.

**Note**

You must have a client that supports SSH v 2 installed on the remote workstation used to connect to the Extreme AirDefense appliance. If you attempt to use SSH protocol 1, you will receive a protocol error message in syslog.

Launch your SSH client and connect to the IP address of the Extreme AirDefense appliance. See the following example :

```

NAME
  ssh -- OpenSSH SSH client (remote login program)

SYNOPSIS
  ssh [-1246AaCfGkMmNnqSTtvVxXy] [-b bind_address] [-c cipher_spec] [-D
  [bind_address:]port] [-e escape_char] [-F configfile]
  [-i identity_file] [-L [bind_address:]port:host:hostport]
  [-l login_name] [-m mac_spec] [-O ctl_cmd] [-o option] [-p port] [-R
  [bind_address:]port:host:hostport] [-S ctl_path]
  [-w local_tun[:remote_tun]] [user@]hostname [command]

DESCRIPTION
  ssh (SSH client) is a program for logging into a remote machine and for
  executing commands on a remote machine. It is intended to replace rlogin
  and rsh, and provide secure encrypted communications between two
  untrusted hosts over an insecure network. X11 connections and arbitrary
  TCP ports can also be forwarded over the secure channel.

```

Configuring the Appliance

You will need to configure your AirDefense appliance after the initial installation.



Note

For details on installing the AirDefense appliance, see the *AirDefense Appliance Installation Guide*.

The following table shows the basic activities you will need to perform to commission your AirDefense appliance.

Table 11: AirDefense Basic Commissioning

Planning and Assessment	Review your security policies, network infrastructure and WLAN sensor coverage requirements, and then establish your AirDefense policy configuration.
Analysis and Design	Develop a system implementation design tailored to your specific wireless security requirements.
Appliance Implementation	Configure the AirDefense appliance to work with your wireless infrastructure as required. (You can also commission additional appliances as needed.)

Add-On Modules

You can add on modules in order to customize AirDefense to fit your needs. You can add one module or multiple modules, categorized as follows:

- Security and Compliance
- WLAN Management

- Proximity Awareness
- Network Assurance.Mac (Thin Client Applications Only)

Module	Actions	Category
WIPS (Wireless Intrusion Prevention System) (Dedicated sensor WIPS, Radio-Share sensor WIPS)	• License and configure. License is per AP operating with a sensor. • Set up the automated configuration for policies and associated devices. • Configure optimal rogue detection and mitigation. • Define and tune threat monitoring policy.	Security and Compliance
Wireless Vulnerability Assessment (Dedicated sensor only)	• License and configure. License is per AP operating with a sensor.	Security and Compliance
Advanced Forensics (Dedicated sensor, Radio-Share sensor)	• License and configure. License is per AP operating with a sensor.	Security and Compliance

Hardware Dependencies

Certain software modules may be hardware dependent. For example, Spectrum Analysis is dependent on the radio chipset, which varies between hardware platforms. Other software modules such as AP Testing or Wireless Vulnerability Assessment require a client on each sensor, which may also be hardware dependent. Please verify hardware and firmware requirements for each software module needed by referencing the feature support matrix in the AirDefense release notes.

System Configuration

In order to configure AirDefense, you will need to follow the steps shown in the following chart:



Selecting and Deploying APs and Sensors

Consider the following points when selecting your access points (APs) and sensors for deployment:

- Most AP models can have internal or external antennas. APs with internal antennas work best in an indoor environment. AP/Sensors with external antennas work best for warehouse deployments, mount-in-plenum spaces or deployments where specialized antennas may be required.
- AP and sensor SKUs can be ordered for different RF domains to comply with regulatory requirements. Shipping locations may be limited by configured RF domain.

Supported APs

Refer to the Extreme AirDefense Release Notes for the full list of AP models, management platforms, and minimum supported firmware.

Off-Channel Scanning (OCS)

RadioShare and off-channel scanning (OCS) work hand-in-hand to allow either or both radios to carry client data and simultaneously act as a sensor, providing multi-band sensing. OCS essentially allows the AP to tune its radio to a different channel for a finite amount of time for threat scanning.

Example:

An AP that provides client access on channel six will monitor other channels as well. The AP will stay on channel six for 10 seconds. During the 10-second interval, the AP is capable of communication with associated clients. After the 10-second interval, the AP will listen off-channel on channel seven for 110 ms. This round-robin method of off-channel scanning is used by the APs to listen for transmissions of other APs and to monitor any off-channel RF transmissions.

**Note**

When utilizing OCS, the APs/sensors take more time to detect threats than when utilizing a dedicated sensor. The amount of time required to detect threats depend on several factors, such as, data load, timing, and the channel where the threat is active. OCS is a part of Part-time WIPS and requires that license for this feature.

Setting Up APs and Sensors

In order to implement WLAN monitoring, APs must be properly selected to operate as sensors in order to ensure full coverage of the desired RF airspace. The AirDefense Sensors passively observe all wireless LAN traffic within 40,000 to 60,000 square feet of typical office space. These sensors collect and analyze data on the wireless network by monitoring the following factors:

- Wireless devices present on the network, along with their associations
- Devices using encryption and authentication
- Device vendor information
- Total data transferred.

Connecting to the Network

There are various methods of connecting to the network. You should always use the most secure connection possible. When connecting via browser, use SSL (https:443) when possible.

- Sensor-to-Server: you may use unencrypted (port 80) or encrypted (port 443) communication.
- Via Sensor UI: new releases only allow encrypted access to the sensor UI (https:443).
- Console-to-Server: you must use encrypted (port 8543) communication.

Assigning User Interfaces

User interfaces allow system users to access certain AirDefense components. Each user interface has permissions. The table below describes the user interfaces, the

program area they manage, the functions within the program area, and the type of user interface required.

User Interfaces	Program Area	Functionality	User
AirDefense Command Line Interface	AirDefense admin (utilities)	Manage Dbase Software Config	Command Line User
AirDefense Graphical User Interface (GUI)	Extreme AirDefense	Dashboard Network Alarms Configuration Rogue Performance Compliance Forensic Intrusion Device Management Report Builder Reports Troubleshooting Downloads	User
AirDefense New User Experience (GUI)	Extreme AirDefense	Dashboard Network Alarms	User

For detailed information on configuring and assigning user accounts, refer to Chapter 7, Configuration, and the sections on Account Management and Account Access.

Default Login

The default GUI login for AirDefense is **admin/admin123**.

User Accounts

AirDefense has one default `Admin User` account. Admin Users may create other users with role-based permissions that control which functionality each user can access. The Admin User creates individual accounts and assigns these user roles.

User Types

The Admin User uses four templates to create user accounts with permissions. These templates are:

- Admin—read and write access to all areas of AirDefense server and sensor administration, including creation of other admin users.
- Guest—Gives users read permission to Alarm Management, Reporting, and Analysis Tools. No access is provided for the other functional areas.
- Help desk—Gives users read/write permission for Help desk capability.
- Operation Center—Gives users read/write permission to all functional areas except Appliance Management, Network Management, and System Configuration. No access is provided for these three function areas.

Use the Admin User account to bypass templates and to customize the user accounts to fit your unique needs.

System Access Limitations

Your particular AirDefense configuration will affect what fields you may access, regardless of your user type. Some of the features described in this guide may not appear in the interface, or may be grayed out, depending on whether they are enabled or disabled.


Example:

If Air Termination is disabled, you will not see options for using it.

If the Admin User who configured your user account only assigns you a specific scope (network level) to access, you will only be able to view or use data for the part of the network assigned to you.

Basic Navigation

Understanding some basic concepts about the AirDefense GUI will make it easy to navigate. The following graphic shows where to find the elements described below.

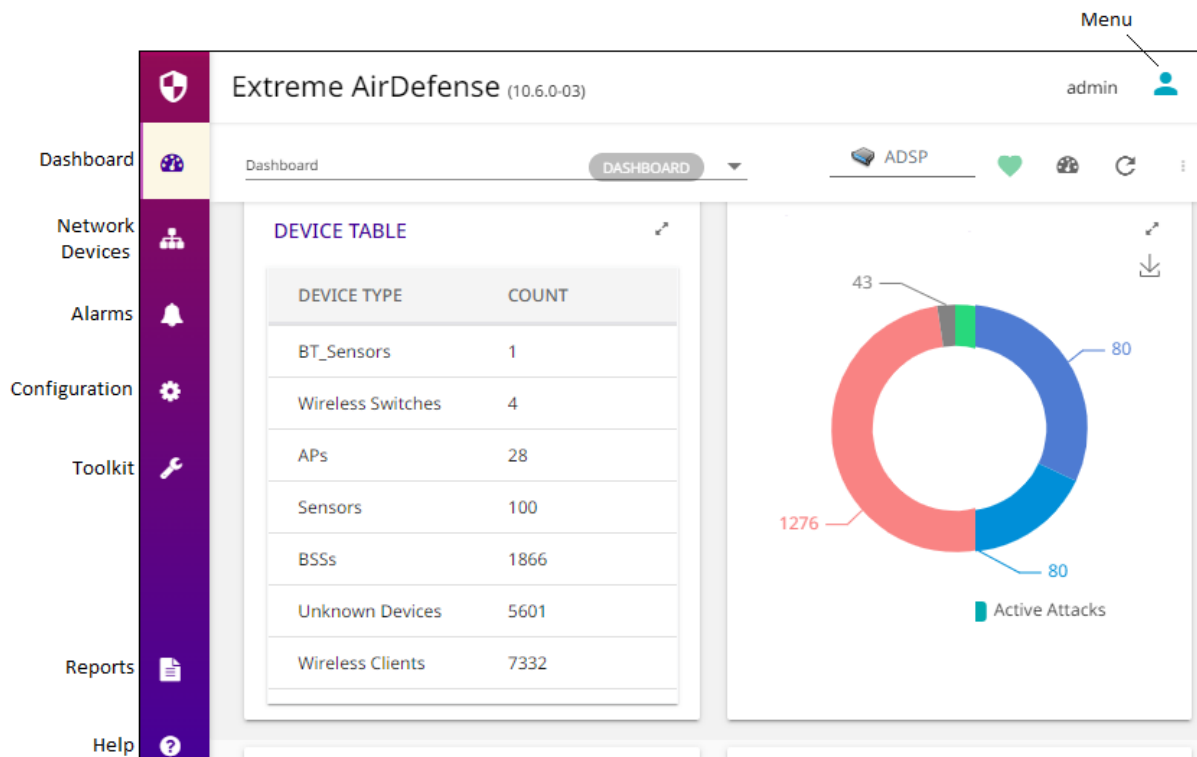

- **Menu**—Gives you access to the AirDefense standalone features that are part of AirDefense Toolkit.
- **Dashboard**—Provides a customizable view of your wireless LAN.
- **Network**—Displays a list of devices seen on your wireless network.
- **Alarms**—Displays an alarm table that shows all of the active alarms currently occurring on your network.
- **Configuration**—Allows you to configure devices plus perform other administrative tasks such as user and sensor administration.

Tree Structure

Whenever the tree structure is displayed, you can control the scope of the data you see in the right pane by selecting the appropriate network level in the tree. The scope you select in the tree is persistent while you drill down into the data in the right pane.

Device Search

The **Network** tab contains a search option that enables you to find specific devices that are being detected by AirDefense.

Filters

Filtering options make it easy to focus on the devices and alarms that are important to you. You can use filters to narrow down what you see. For example, you can use the filter to view only devices that are displaying rogue activity.

Dashboard Drill Down


The dashboard lets you quickly assess your overall security and performance status.

Alarm Time Reporting

Extreme AirDefense reports alarms and device information and traffic statistics every minute. To understand the data that appears in Extreme AirDefense, you must understand how Extreme AirDefense addresses system time versus the local GUI time, particularly in regard to alarms.

When an alarm occurs, Extreme AirDefense detects the alarm in system time, and records this time in its database. You can configure Extreme AirDefense system time by using the Command Line Interface (CLI) found in the **Configuration** menu.

However, when reporting the alarm to the GUI, Extreme AirDefense adjusts the report time to your local system time zone. It uses this time to report alarms in the **Alarms** tab, and it also reports other statistical data in this manner. The last updated time on each GUI screen (indicated by the time stamp) correlates to the local system where the browser is running. You configure the GUI time for your local system.

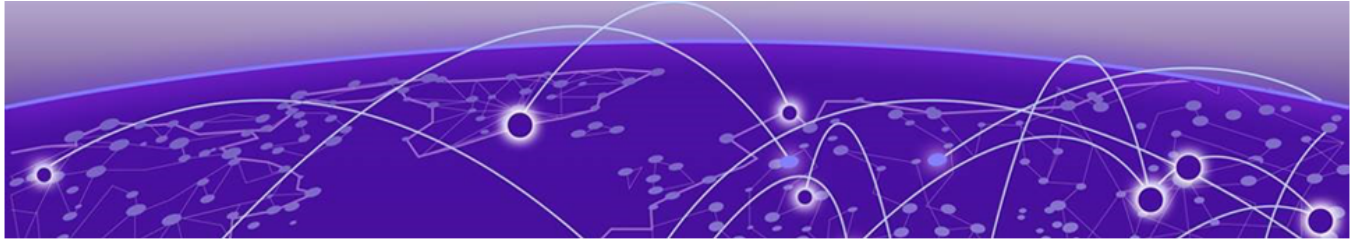

Extreme AirDefense on Virtual Platform

[Prerequisites](#) on page 372

[Installing Extreme AirDefense on VMware](#) on page 373

[Install Extreme AirDefense on Xen Hypervisor](#) on page 382

Extreme AirDefense can be pre-loaded on an appliance or can run as a virtual machine (VM) on a supported virtual platform. When you install the Extreme AirDefense platform on a hypervisor (for example, the Xen Project™ Hypervisor 4.x) it appears that Extreme AirDefense has the host hardware's processor, memory and resources.

This following sections provide step-by-step instructions on how to install Extreme AirDefense on a virtual platform.

Prerequisites

Extreme AirDefense can be installed on a appliance or as a Virtual Machine.

You can install Extreme AirDefense as a VM on the following virtual platforms:

- VMware® vSphere 5.5, 6.0, 6.5 (ESXi)
- Xen Hypervisor 4.1.2 and higher

Required Files

The following files are required for installation:

To Install On VMware

To install Extreme AirDefense as a VM on VMware, download the file `QAD-VMadsp-9-2-0-09.ova` and use it to install Extreme AirDefense on VMware.

You can also use the Extreme AirDefenseISO file for large installations. For more information contact GTAC. For more information on how to contact GTAC, see [Help and Support](#) on page 14.

To Install On Xen Hypervisor

To install Extreme AirDefense as a VM on Xen Hypervisor, download the files `AD-VM-adsp-9-2-0-09-dvd.gz` and `AD-VM-adsp-9-2-0-09-dvd.xm`.



Note

Xen Cloud Platform (XCP) is no longer supported.

You can download the latest version from Extreme Networks support site.

Required License

No license is required to install Extreme AirDefense on the Virtual Machine of your choice. However, you will require an Extreme AirDefense Platform license in order to use Extreme AirDefense on the virtual platform.

Required System Configuration

The following CPU, memory and hard disk configuration is required for installation of ADSP on virtual platforms to support appropriate network devices:

Platform Category	vCPUs for ADSP VM (on Intel 2.33GHz Xeon or equivalent)	Memory for ADSP VM	Hard Disk for ADSP VM	Scanning Sensors	RadioShare non scanning	Network Devices	Active WLAN Devices	Total WLAN Devices
Advanced	16	36GB	2x1TB	1700	2550	14,875	68,000	306,000
High-End	8	8GB	2x500GB	850	1275	8925	34,000	191,250
Mid-Level	4	4GB	2x250GB	425	637	4165	17,000	76,500
Entry-Level	2	2GB	1x250GB	85	85	595	3400	15,300



Note

In a multi-VM environment, over-allocation of CPUs to other VMs could potentially impact performance of the Extreme AirDefense VM.



Note


Higher sensor count will cause forensic analysis to take longer to run.

Installing Extreme AirDefense on VMware


Follow these steps to install Extreme AirDefense on VMware:

1. Install VMware ESXi according to the instructions located at <https://docs.vmware.com/en/VMware-vSphere/5.5/com.vmware.vsphere.install.doc/GUID-7C9A1E23-7FCD-4295-9CB1-C932F2423C63.html>
2. Install the vSphere Client to install and manage the Extreme AirDefense VM running on a VMware ESXi host. Follow the vSphere Client instructions located at <https://docs.vmware.com/en/VMware-vSphere/6.0/com.vmware.vsphere.hostclient.doc/GUID-52A4C8B5-04F9-4571-9AC3-4FBED2DD9215.html>


3. Once VMware is installed, double-click the **VMware vSphere Client** icon on your desktop to access the VMware vSphere server.

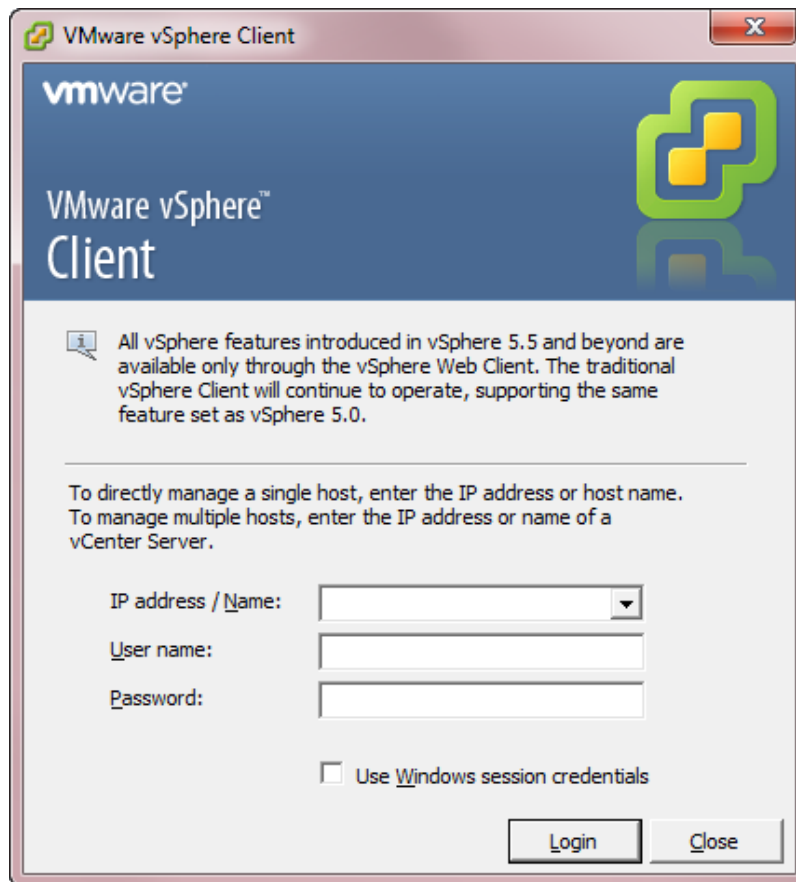


4. Enter the IP address of your server, your user name and password; then, click **Login**.

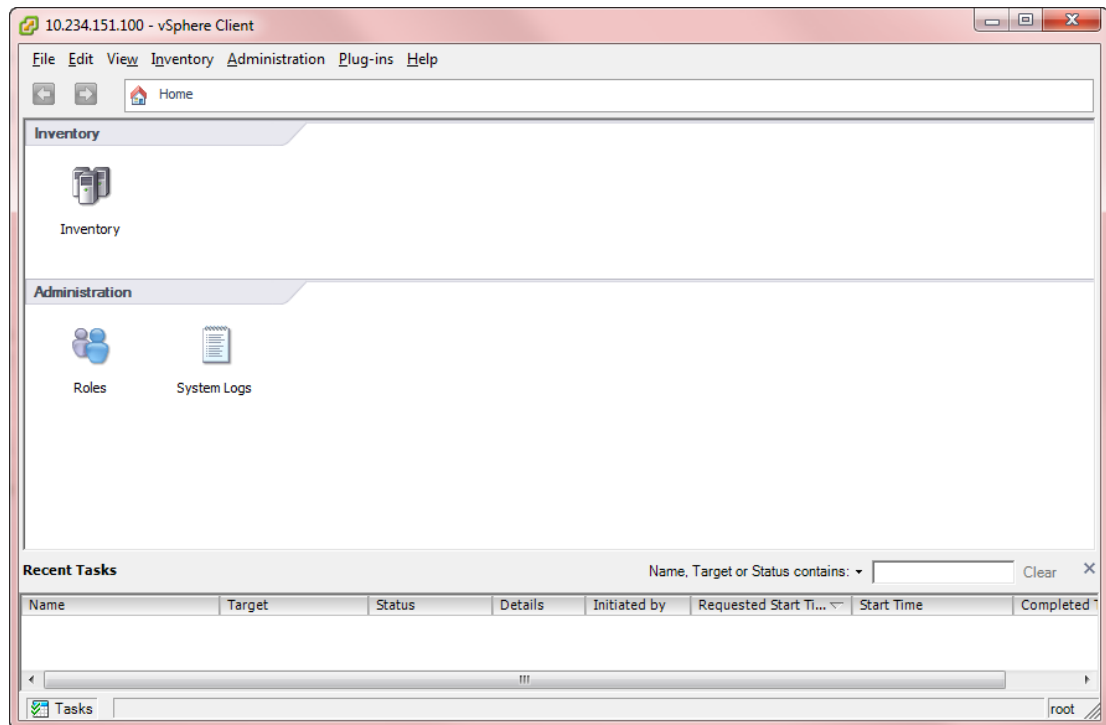


5. Select **File > Deploy OVF Template**.

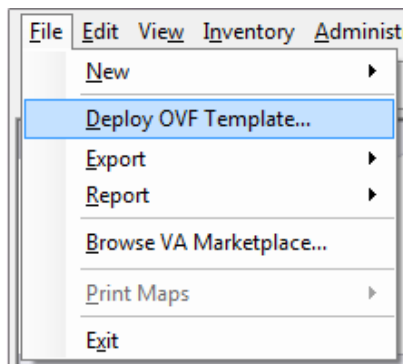


The **Deploy OVF Template** window is displayed.

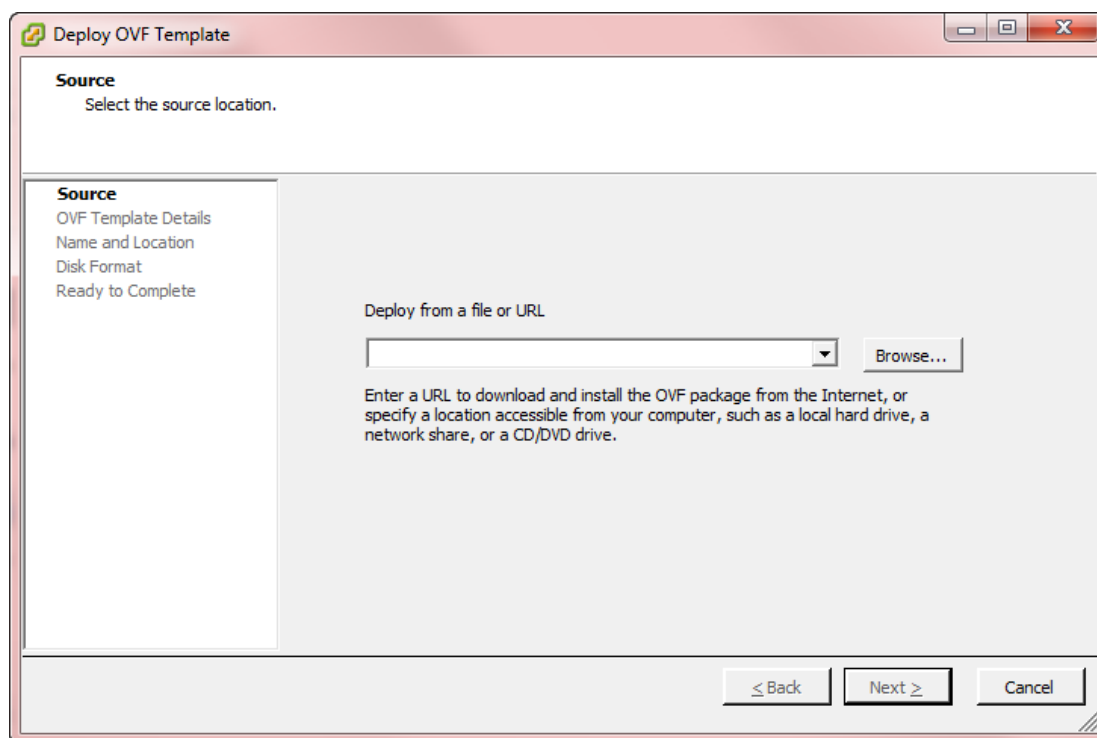


6. Click **Browse** and select the VMware image for the latest version of Extreme AirDefense. In the following example, you would select the `AD-VM-adsp-9-2-0-09.ova` file from your local PC.

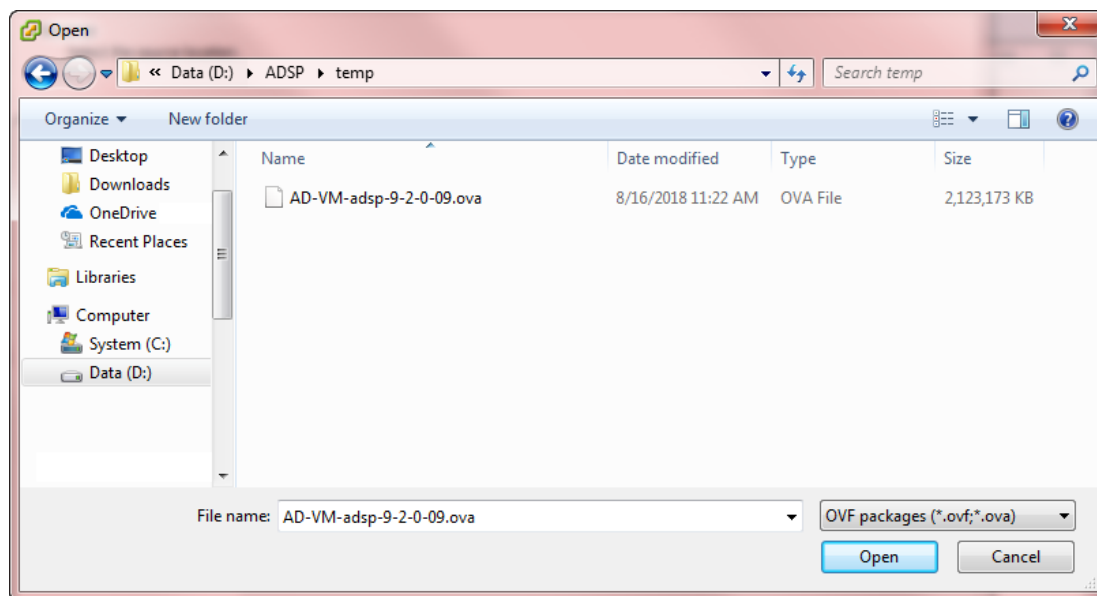

7. Click **Next**. The OVF template details window displays.

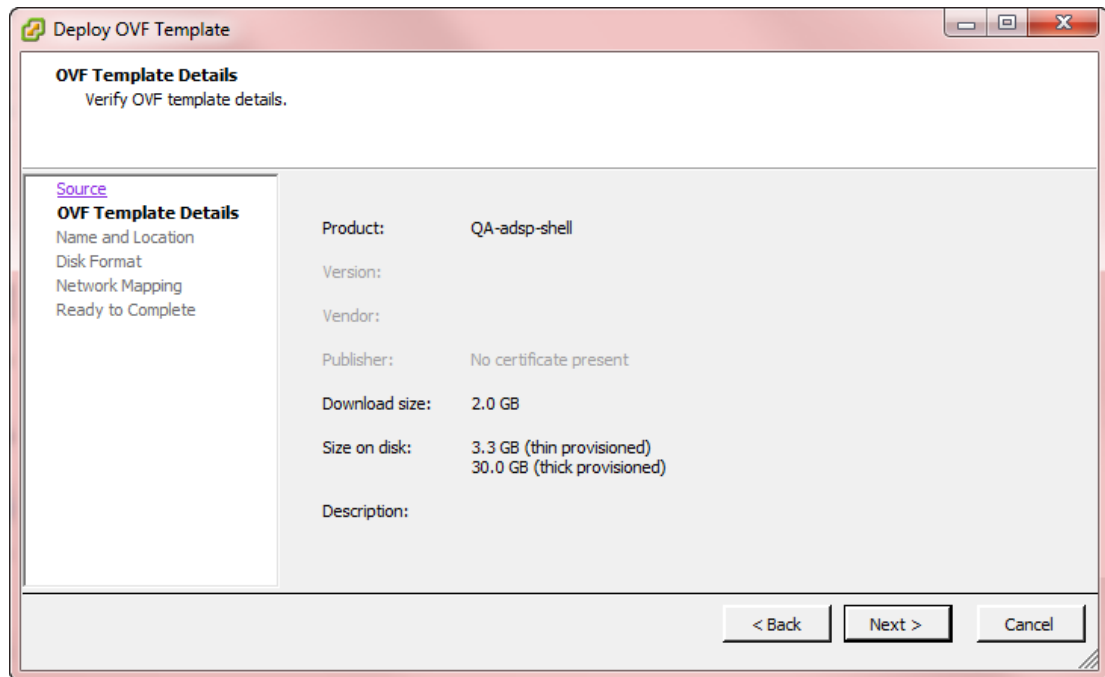

8. Verify the OVF template details and then click **Next**. The **Name and Location** screen displays.

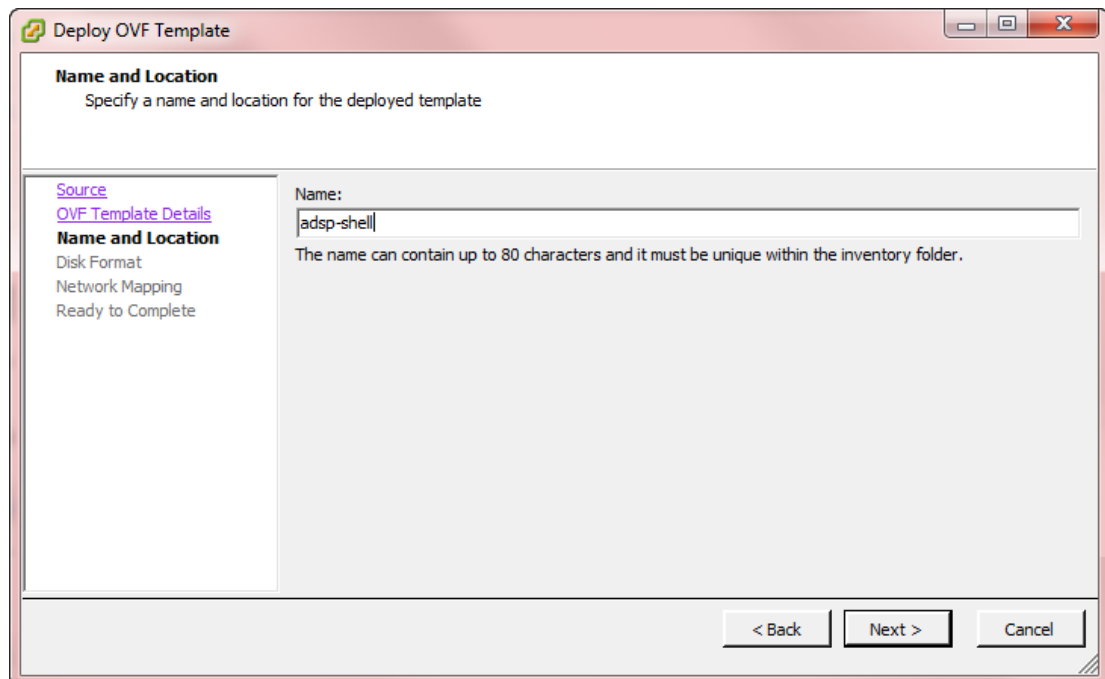

9. Enter a name (for example, adsp-shell) and then click **Next**.
10. When multiple installation destinations are available, you must select a destination for storage of the VM files and then click **Next**.

11. Select a **Disk Format** and then click **Next**.

The screenshot shows the 'Deploy OVF Template' wizard at the 'Disk Format' step. The title bar says 'Deploy OVF Template'. The main heading is 'Disk Format' with the question 'In which format do you want to store the virtual disks?'. On the left, there is a sidebar with links: 'Source', 'OVF Template Details', 'Name and Location', 'Disk Format' (which is highlighted), 'Network Mapping', and 'Ready to Complete'. The main area contains the following fields and options:

- Datastore:** A text box containing 'datastore1'.
- Available space (GB):** A text box containing '428.4'.
- Provisioning Options:** Three radio buttons are listed:
 - ☒ Thick Provision Lazy Zeroed
 - ☐ Thick Provision Eager Zeroed
 - ☐ Thin Provision

At the bottom right, there are three buttons: '< Back', 'Next >', and 'Cancel'.


12. Map the networks used in this OVF template to the networks available in your inventory. Use the drop-down list under the **DestinationNetworks** column to select the correct network.

The screenshot shows the 'Deploy OVF Template' wizard at the 'Network Mapping' step. The title bar says 'Deploy OVF Template'. The main heading is 'Network Mapping' with the question 'What networks should the deployed template use?'. On the left, there is a sidebar with links: 'Source', 'OVF Template Details', 'Name and Location', 'Disk Format', 'Network Mapping' (which is highlighted), and 'Ready to Complete'. The main area contains the following elements:


- Instruction:** 'Map the networks used in this OVF template to networks in your inventory'.
- Table:** A table with two columns: 'Source Networks' and 'DestinationNetworks'. It contains one row with the value 'VM Network' in both columns.

At the bottom right, there are three buttons: '< Back', 'Next >', and 'Cancel'.

13. Verify the information. **Power on after deployment** should not be enabled by default. If enabled, select the control to disable this option. Click **Finish** to deploy.

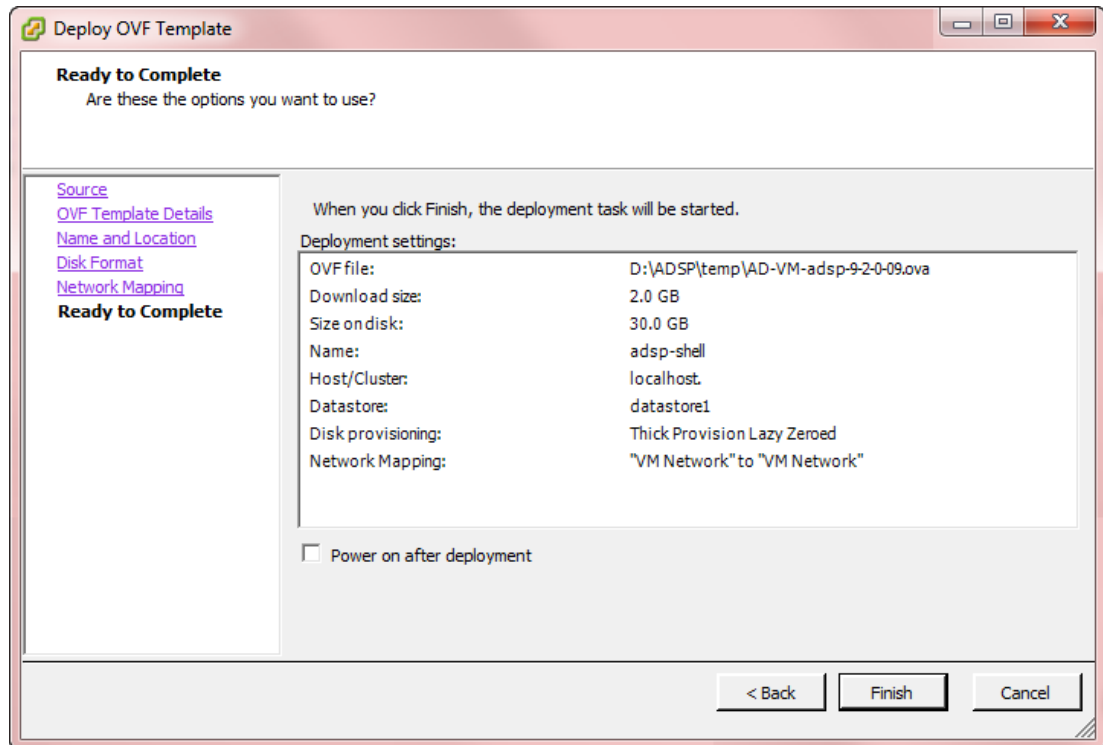

14. Wait until the **Deployment Completed Successfully** dialog box displays. This could take several minutes to hours depending on the location (local or Internet) of the AirDefense image being deployed.

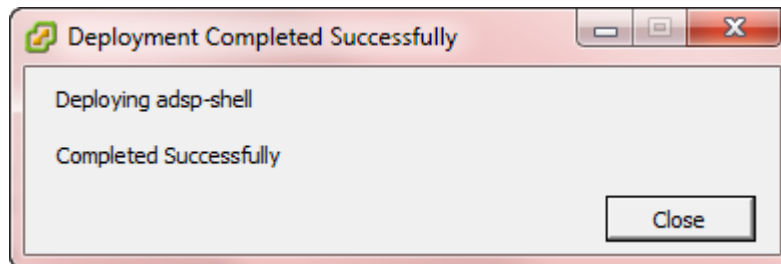


15. Click **Close**.




Note

If you receive a deployment error, download the `zlib1.dll` file from the Extreme Networks Support Center at [Extreme Networks Support](#) and copy the file to your local hard drive.

16. Right-click on the VM and then select **Edit Settings**.

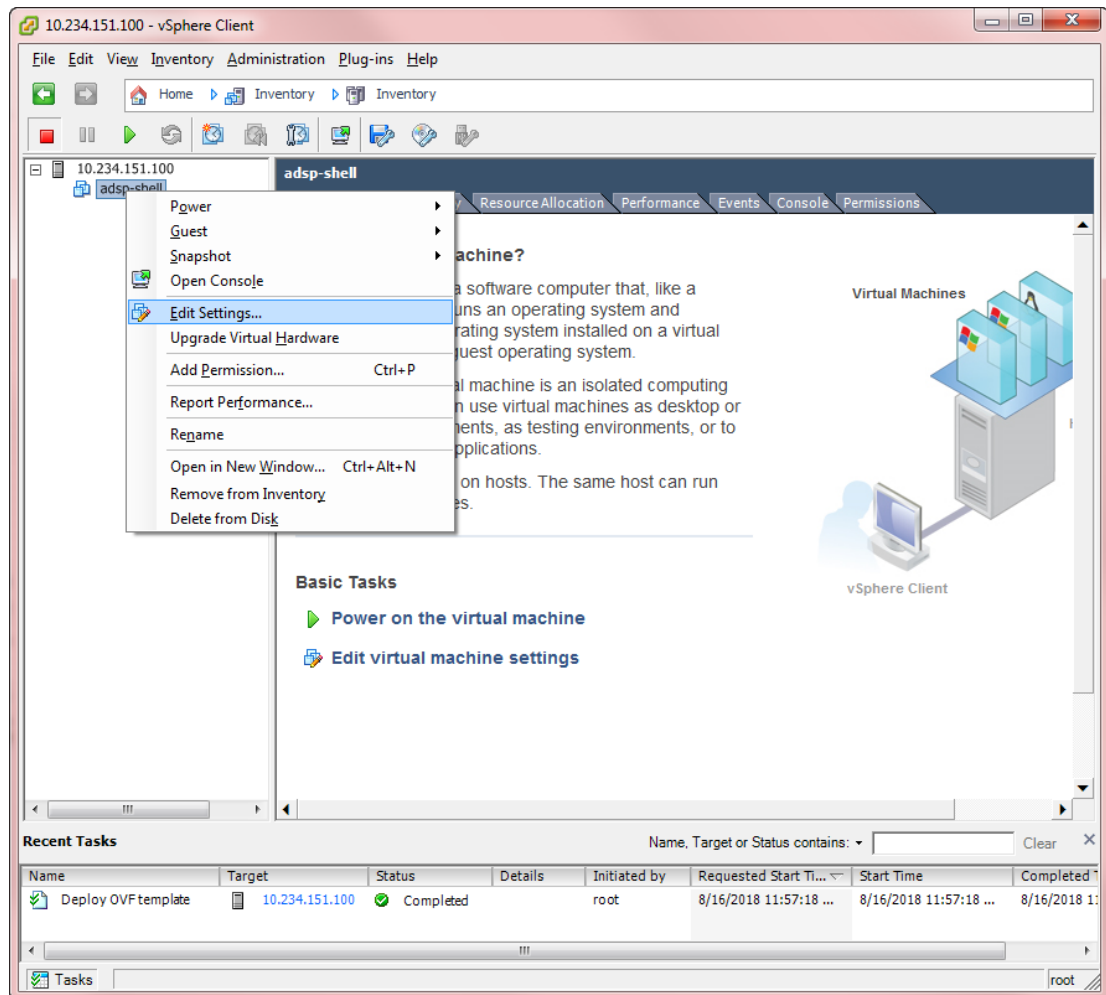


The following window is displayed.

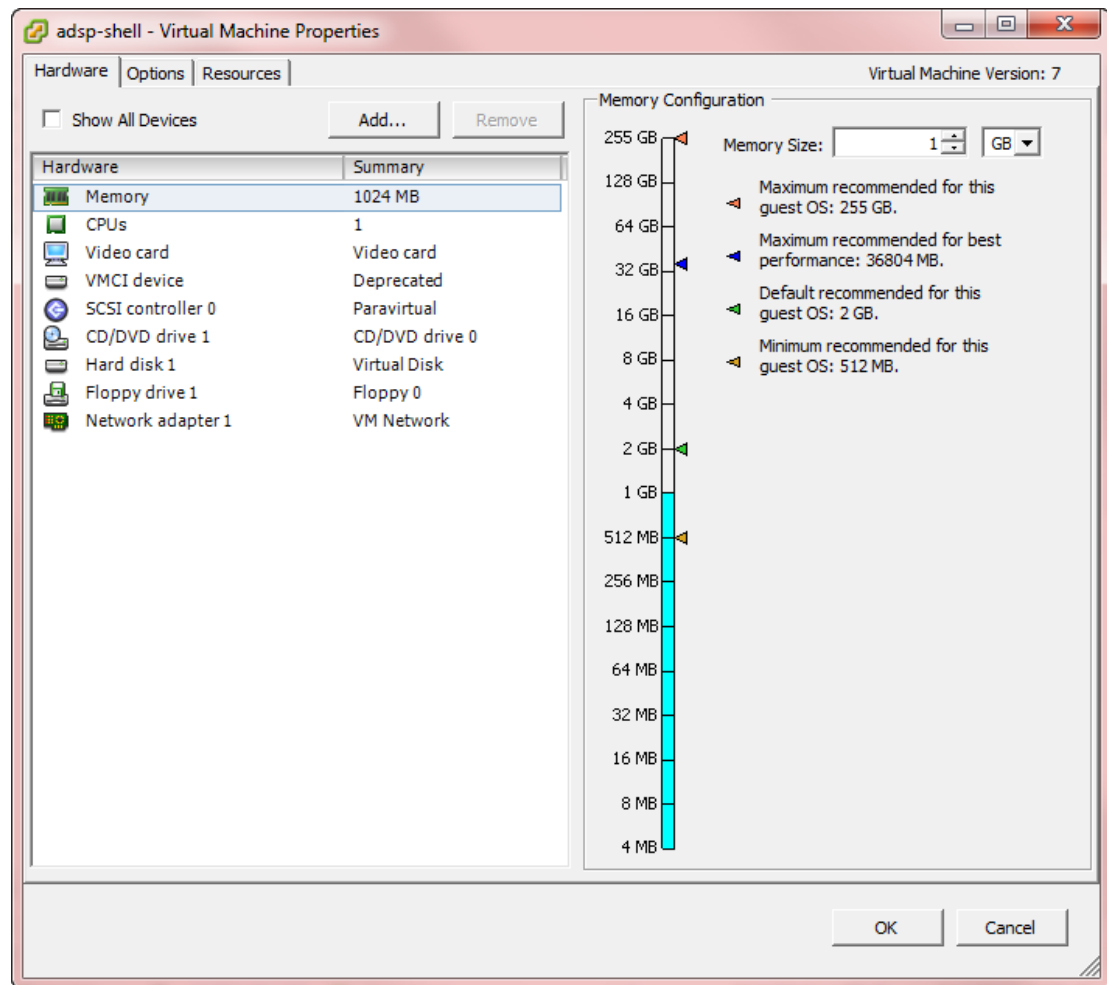

17. Set Memory, CPUs and hard disk size as specified in [Required System Configuration](#) on page 373 section and also based on the network devices and clients to be supported by Extreme AirDefense.
18. Click **OK**.

19. Right-click on the Extreme AirDefense VM and then select **Power > Power On**.

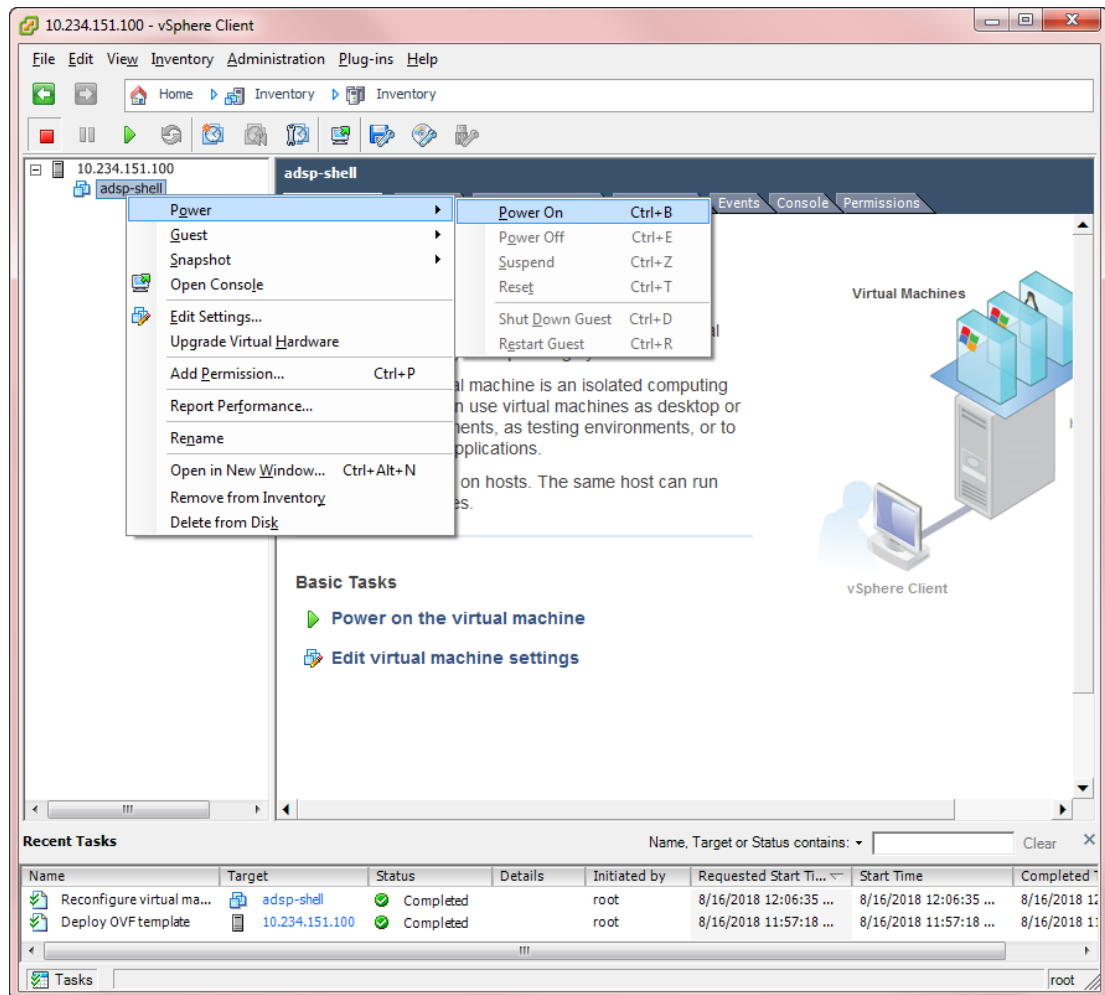

20. Double-click the VM, then select the **Console** tab, and wait for login prompt. While waiting, Extreme AirDefense VM configures automatically.
21. When login prompt displays, log into Extreme AirDefense and configure just like you would any Extreme AirDefense appliance.



Note

If you lose control of the cursor while using the VM, press **Ctrl+Alt** key combination to regain control.

Install Extreme AirDefense on Xen Hypervisor

Follow these steps to install AirDefense on the Xen Hypervisor:

1. Install Xen Hypervisor 4.x. Follow the Xen instructions located at https://wiki.xen.org/wiki/Main_Page
2. SCP the disk image (AD-VM-adsp-9-2-0-09-dvd.gz) and the configuration file (AD-VM-adsp-9-2-0-09-dvd.xm) to a location on your Xen server. Let us assume that the location is: /var/lib/libvirt/images.

3. Unzip the disk image using the following command: `gunzip AD-VM-adsp-9-2-0-09-dvd.gz`.
4. Go to `/var/lib/libvirt/images` and edit the configuration file: `vi AD-VM-adsp-9-2-0-09-dvd.xml`.

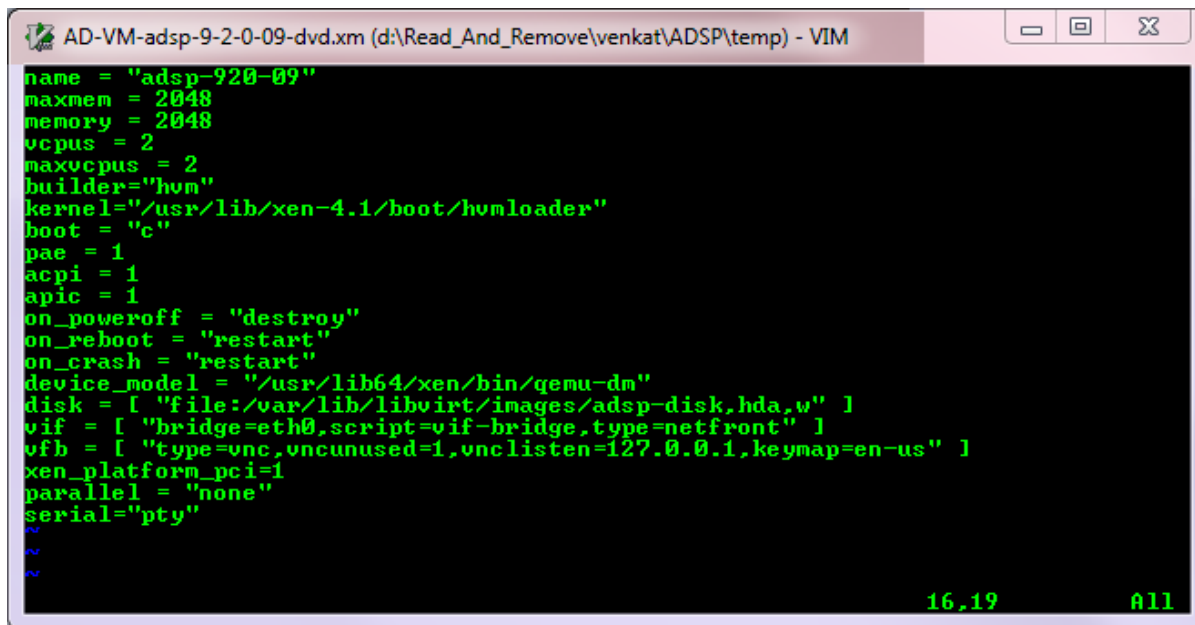


Figure 121: Edit the Configuration File

5. Change the line beginning with `disk` to point to your the location of your AirDefense image: `disk = [ file:/var/lib/libvirt/images/adsp-disk,hda,w ]`
6. Change the values for `name`, `maxmem`, `memory`, and `maxvcpus` to match your criteria. Refer to [Required System Configuration](#) on page 373 for the recommended resource configuration for Extreme AirDefense.
7. Increase the disk size of your Extreme AirDefense installation using the following command:

```
# fallocate -l <new size in bytes> /var/lib/libvirt/images/adsp-disk
```

By default, the size of the Extreme AirDefense image is set as the size your Extreme AirDefense VM disk. It is recommended that you increase the disk size to match the system requirements as specified in [Required System Configuration](#).


8. Create an Extreme AirDefense VM from the new configuration file: `xm new AD-VM-adsp-9-0-2-09-dvd.xml`
9. Start the Extreme AirDefense VM: `xm start adsp-920-09`



Note

The VM name is the same as the one you specified in the configuration file.

10. The Extreme AirDefense Console can be started with the following command: `xm console <ADSP VM name>`
11. Log in to Virtual Extreme AirDefense and configure it as you would any Extreme AirDefense appliance.

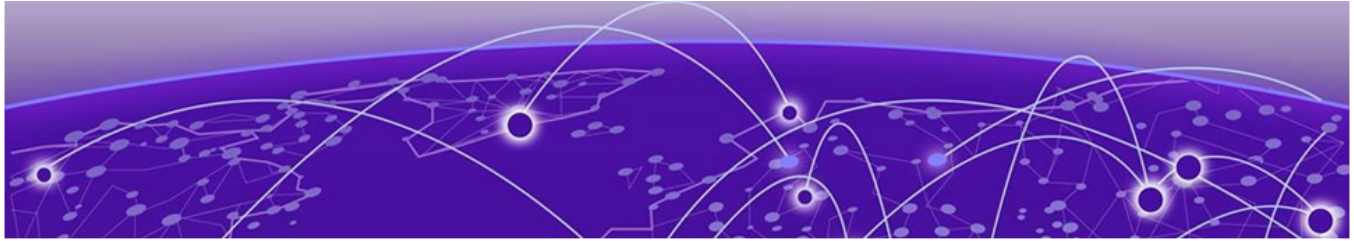

Legacy Content

[Menu](#) on page 384
[AirDefense Dashboard](#) on page 430
[Network Tab](#) on page 438
[Alarms](#) on page 476
[Configuration Tab](#) on page 491
[Security](#) on page 792
[ADSPAdmin](#) on page 805
[Troubleshooting](#) on page 814
[AirDefense Icons](#) on page 820

The menus in this section can be accessed from the legacy interface. To launch the legacy interface:

1. From within the new user interface, select the  icon in the top right corner of the Dashboard.
2. From the list of options, select **Legacy UI**.



Note

The legacy interface requires Flash support, which can be obtained by downloading WiNGMAN from the support site under Wireless.

Menu

The Menu gives you access to AirDefense features.



Features such as **Add Devices** and **Import/Discover Devices** are features that are an integral part of AirDefense. **Reports** and **Help** are web-based applications. Most of the rest of the features are Java applets. To run the Java applets, you are required to install the AirDefense Toolkit on your local workstation. (If you have no need to run the applets, there is no need to install these AirDefense Toolkit.)

Installing the Toolkit

You will need to install the AirDefense toolkit on your workstation after your initial AirDefense installation and also each time you upgrade to a new release.




Note

If you attempt to access a Java standalone feature and the AirDefense Toolkit is not installed, you will be prompted to install it.

To install the AirDefense Toolkit:

1. Access the login page and click the **Downloads** link in the top, right corner of the page (or if you are logged in, select **Menu > Download Toolkit**).

2. Select the version of the installation program that corresponds to your OS (Windows or Linux) and then follow the instructions for your OS.

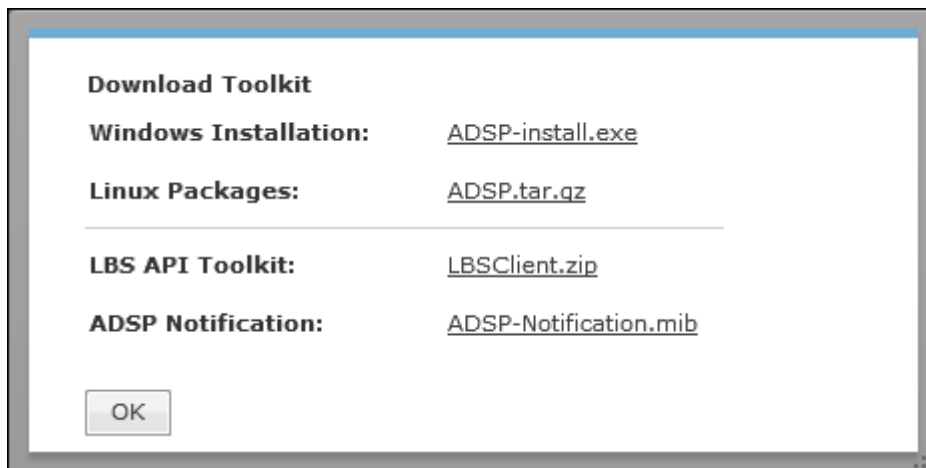

Open


Click **Open** to access a saved Frame Capture or Spectrum Analysis file.

- [Frame Capture Analysis](#) on page 386
- [Spectrum Analysis](#) on page 816

Frame Capture Analysis

Live View saves session frame data in a temporary file on your ADSP appliance. This process is called Frame Capture. You can then save the temporary file to a permanent file on the appliance or to a file on your workstation. To save a file, you must first stop the Live View session and then select **File > Save** from the **Live View** window to display the **Save Frame Capture** pop-up window.

Once the file is saved in PCAP format, you can view it using **Frame Capture Analysis**. You can access this feature by selecting **Menu > Open > Frame Capture** and then selecting the capture file. The frame data is displayed in the **Capture File** window.

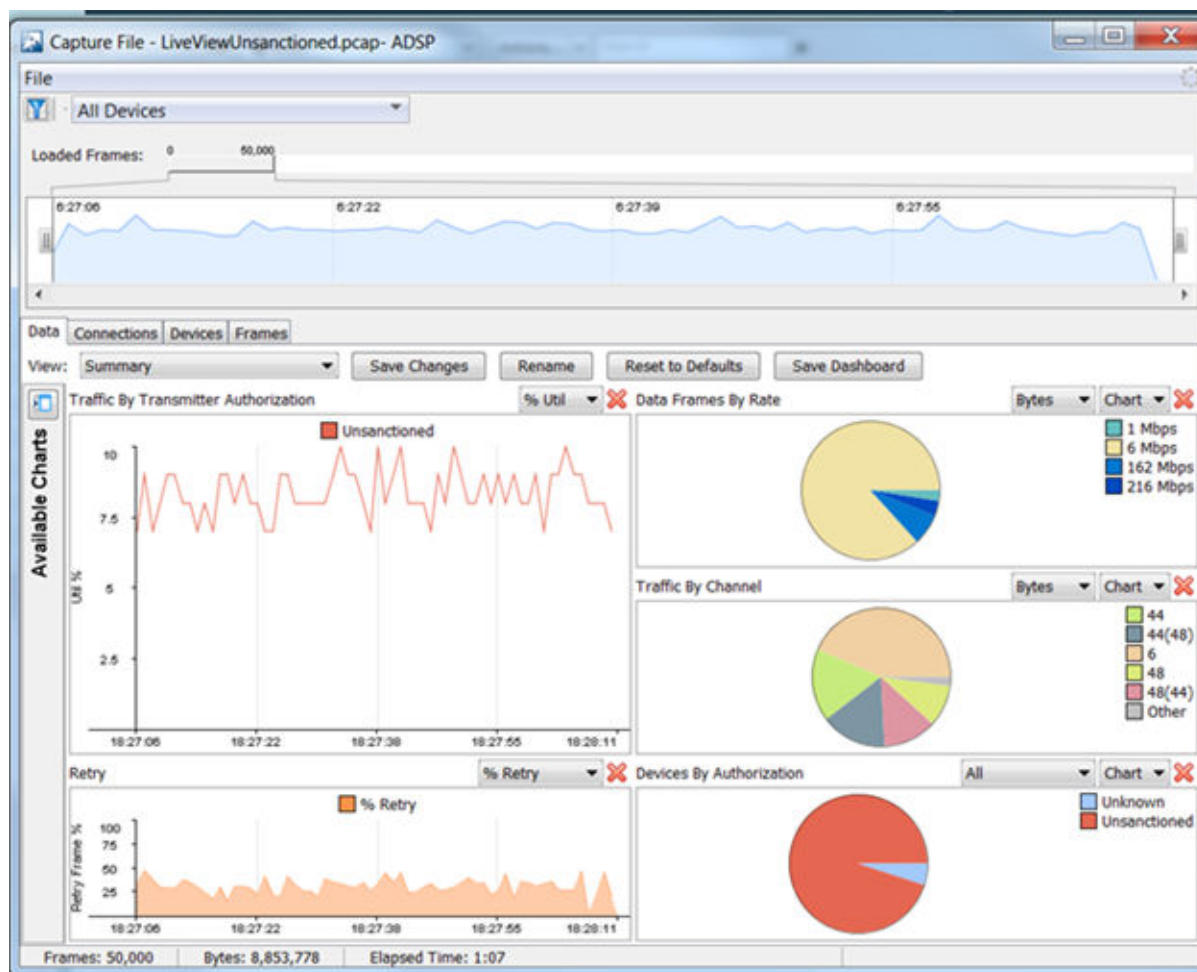

The **Capture File** window is basically the same as the **Live View** window minus the buttons and menus that are not needed for Frame Capture Analysis. The tabs display the same information as the **Live View** window.

Spectrum Analysis

After conducting a **Spectrum Analysis**, you can save the temporary spectrum data to a permanent file on the appliance or to a file on your workstation. To save a file, you must first stop the Spectrum Analysis and then select **File > Save** from the **Spectrum View** window to display the **Save Spectrum Data** pop-up window.

You can access the saved spectrum data by selecting **Menu > Open > Spectrum Analysis** and then selecting the spectrum analysis file. The spectrum data is displayed in the **Spectrum View** window.

The **Spectrum View** window is opened minus the buttons and menus that are needed for generating spectrum analysis data.

Forensic Analysis-Basic

Using Forensic Analysis, you can analyze historical data collected and stored for wireless devices. Forensics furnishes details on devices detected by AirDefense, e.g.,

APs, sensors, switches, BSSs and wireless clients. When you need to investigate a suspicious device or troubleshoot a WLAN problem, use the **Forensic Analysis** tool to analyze any device seen by the system and display the following information:

- Threat level of the device
- Device Alarms
- Device Associations.

Accessing Forensic Analysis


Forensic Analysis data is accessed in two ways:

- Using the menu
- Using left click the drop-down menu  next to a device within the AirDefense user interface and then selecting **Forensic Analysis**.

Method 1

To access forensic data for a device:

1. Select **Menu > Forensic Analysis**

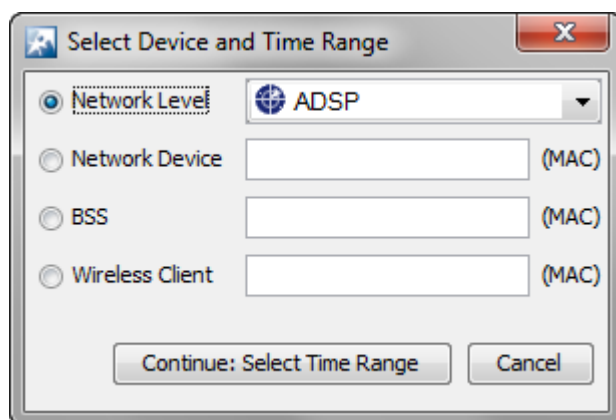


2. Enter the MAC address of the device in the appropriate field.

Method 2

Use the context sensitive menu for the device to view Forensic Analysis:


1. Left-click the drop-down menu button  of a device anywhere within AirDefense.

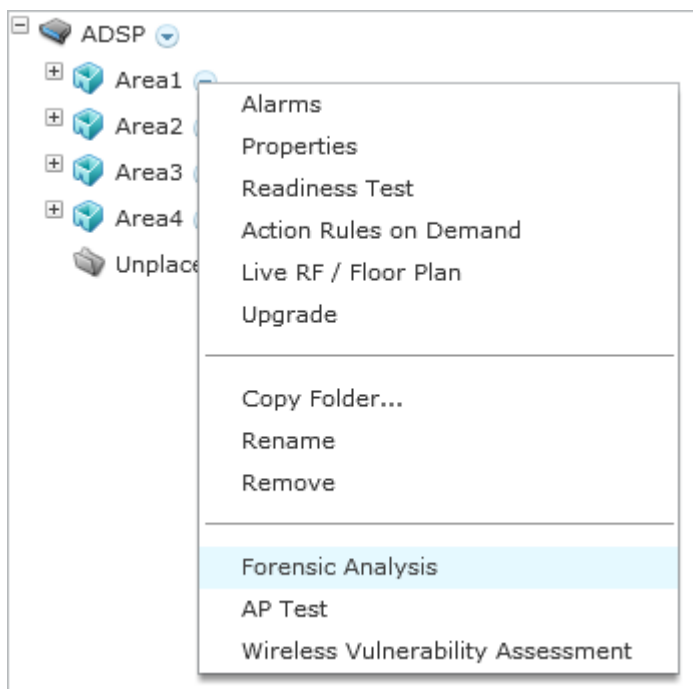

2. Select **Forensic Analysis** from the menu to drill down into the device statistics.

Setting Time

Once you have accessed **Forensic Analysis**, a time window displays and you must select the device and time range. Basic Forensic Analysis, by default, only shows 24 hours worth of data. For detailed historical analysis, you can change the 24 hour time period by selecting a new date and time. However, you cannot view more than 24 hours of data at any one time.

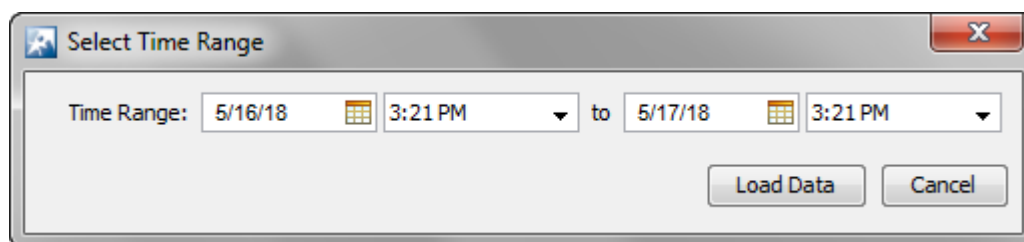

Note

Advanced Forensic Analysis allows you to specify your own time period which can exceed 24 hours. For more details, see the section [Advanced vs. Basic Forensic Analysis](#) on page 391.

Forensic Data

When you first access Forensic Analysis, you can view a summary of forensic data with information about threats, associations, device information, transmitting traffic, and receiving traffic.

If you select one of the tabs, the summary is expanded into more detailed forensic data so that you can learn more about the wireless device and if necessary, take immediate action.



Note

The tabs displayed will vary depending on the device selected and on whether you have installed Basic Forensic Analysis or Advanced Forensic Analysis.

You can access the following tabs in **Forensic Analysis** for more detail:

- **Adoption History** (APs and Switches.) For APs, adoption history provides a table of devices that have adopted the selected AP. For switches, it provides a table of devices that the selected switch has adopted.
- **Association Analysis** (BSSs and Wireless Clients) lists the associations between the device being analyzed and other wireless devices.
- **Bandwidth Analysis** (APs and Switches) displays a chart showing the bandwidth utilization for the selected AP or switch.
- **Channel Analysis** (BSSs and Wireless Clients) provides a visual representation of all channels.
- **Device Info** (All devices) displays the current settings for the device being analyzed.
- **Device Analysis** (All Devices) provides a visual representation of all channel bandwidths.
- **Performance Analysis** (Switches) provides performance raw data and usage percentages for the selected switch.
- **Radio Analysis** (APs) provides information that can be used to analyze the radio on the selected AP.
- **Radio Info** (APs) provides radio information that is recorded at the time displayed on the selected AP.
- **Signal Analysis** (BSSs and Wireless Clients) displays the signal strength of a device (in dBm) as measured by various sensors.
- **Threat Analysis** (All devices) displays a table of alarms generated by the device being analyzed.
- **Threat Breakdown** (APs, BSSs and Wireless Clients) displays devices broken down by type/manufacturer.
- **Traffic Analysis** (BSSs and Wireless Clients) displays traffic transmitted and received by the device being analyzed.
- **Traffic Breakdown** (APs, BSSs and Wireless Clients) displays devices broken down by type/manufacturer.

Advanced Forensic Analysis

The Advanced Forensic Analysis module allows you to access the full potential of Forensic Analysis. When installed, Advanced Forensic Analysis replaces the Basic Forensic Analysis that is included in Extreme AirDefense.

Advanced vs. Basic Forensic Analysis

Advanced Forensic Analysis has all the features of Basic Forensic Analysis plus some very powerful enhancements.

Administrators can view the activity of a suspect device over a period of months and drill down to minute-by-minute detail of wireless activity. Records are kept over a long period of time so that administrators can review events months later to improve network security posture, assist in forensic investigations, and ensure policy compliance. These records can be used to provide evidence that an attacker has made repeated attempts to break into the wireless network and to know where the attack was launched.

See the following table for a comparison of the features that are available with Basic vs. Advanced Forensics.

Table 12: Advanced vs. Basic Forensic Analysis

Basic Forensic Analysis	Advanced Forensic Analysis
Forensic data is available only for BSS and Wireless Client devices.	Forensic data is available for the entire system, a single network level, or a single sensor (Scope Based only.)
No Location data is available.	Location data is available and the Location Analysis tab is activated (Device Based only).
No Graphical views of data analysis are available.	Graphical views of data analysis are available in all tabs.
Data is displayed only in 24 hours increments. You cannot configure a different time period, but you can choose whatever 24 hour period that you want.	You can select a time frame for more than a 24 hour time period to display data.
Only the selected 24 hour time period is displayed; you cannot adjust the time window using sliders.	You can adjust the time window using sliders.
No data filters are available.	Data filters are enabled.

Advanced Forensic Analysis stores and manages 325 data points every minute for each wireless device on a network. This feature provides administrators more insight into wireless LAN performance and specific wireless device activity. Trends in network usage can easily be visualized to assist in performance troubleshooting such as identification of abnormal usage and capacity planning. There are two categories of Advanced Forensic Analysis:

- [Scope Based Forensic Analysis](#)

- [Device Based Forensic Analysis](#)

Scope Based Forensic Analysis

Scope Based Forensic Analysis provides forensic data for the network levels and sensors in the Network Tree.



Note

BSSs, Wireless Clients, APs, or switches are not analyzed in Scope Based Forensic Analysis.

The following forensic data is included with Scope Based Forensic Analysis:

- A summary that includes high-level information about the threat level, device counts and traffic for the entire scope over the selected time range (**Summary** tab).
- Active alarm information (Threat Analysis tab).
- Threat level information on items within the selected scope (**Threat Breakdown** tab).
- Transmitted and received traffic by all devices in the selected scope. (**Traffic Analysis** tab).
- Total traffic seen by the top 100 devices in the selected scope (**Traffic Breakdown** tab).
- Device count for each channel over time (**Channel Analysis** tab).
- Device counts for devices and sensors (**Device Analysis** tab).
- Wired bandwidth usage of the sensors in the selected Scope over time (**Bandwidth Analysis** tab).

Device Based Forensic Analysis

Device Based Forensic Analysis provides forensic data on BSSs, Wireless Clients, APs, and Switches.


Device Based Forensic Analysis provides AirDefense administrators with the same forensic data that Basic Forensic Analysis, but also includes the extra features. The Basic Forensic Analysis tabs are included plus an extra **Location Analysis** tab for BSSs and Wireless Clients is added.

The **Location Analysis** tab provides information to help administrators locate devices in their wireless network. A **Heat Map** and a **Location Map** are used to locate a device. A table view is provided to display the coordinates of a device. To use the map feature, you must first import the location map that is used by Location Analysis.

Action Control


Action Control displays a table listing specific actions that are occurring to devices seen on your WLAN. The type of actions displayed are:

- Air Termination
- Port Suppression
- ACL
- Frame Capture

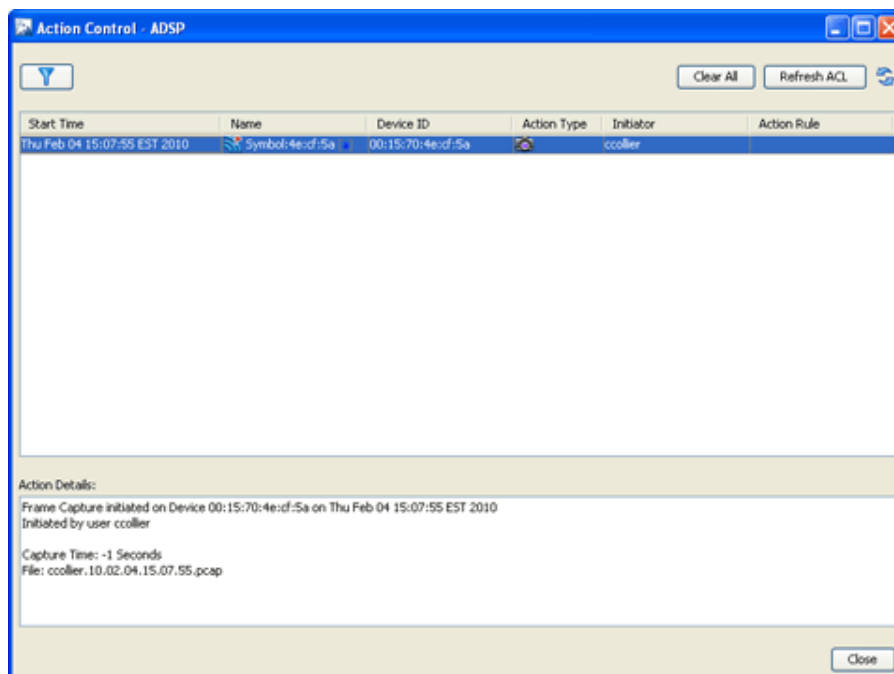

Selecting an action displays details about the action in the **Action Details** window.

Use the  button to launch a window that enables you to filter to the actions of interest on a specific device.

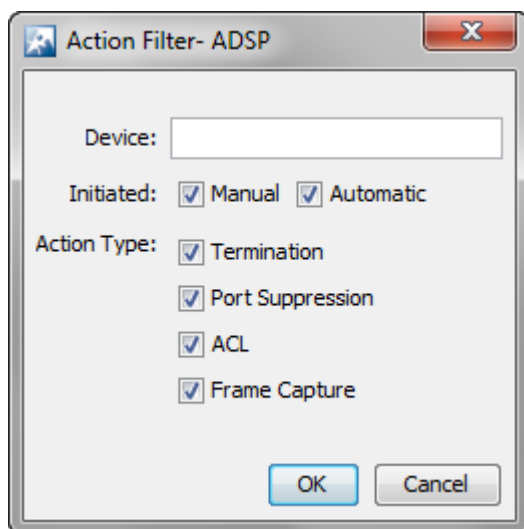

Action Control Table

The Action Control table displays specific information about an action that is taking place. The following information is included:

Column	Description
Start Time	The date and time the action was initiated
Name	The name of the device the action was performed on
Device ID	The MAC address of the device
Action Type	The type of action that was performed
Initiator	The user name of the person who initiated the action
Action Rule	The name of the Action Rule if action was initiated by an Action Rule

Action Control Commands

Also, while an action is highlighted, you can right click on the action to display options (commands) that can be performed on that action. The following commands are available:

Action	Available Commands
Air Termination	Cancel
Port Suppression	Cancel Port Suppression (re-enable port)
ACL	Cancel Access Control (remove from ACL)
Re-Apply Access Control List	
Refresh Access Control List Status	
Frame Capture	Cancel Frame Capture

You may select more than one action. If you select one or more actions that are the same, the commands for that action are available. If you select one or more actions that are different, the only command available is **Cancel All** which will cancel any highlighted action.

Reports

AirDefense provides dual approaches to reporting. You can access a web reporting interface and populate report templates with data or you can use a flexible report builder application to create custom reports.

- The **Web Reporting Interface** makes it easy to choose report templates and define the scope of data you want to include, then view the resulting report in a selection of formats. You can also save reports, share them with others, and schedule reports to run automatically.

- The **Report Builder Application** within the GUI lets more advanced users create report templates, either basing them on the templates delivered with AirDefense or designing them from scratch. Reports you create with the report builder become available as templates in the Web Reporting interface. For more information on the Report Builder interface, see [Report Builder](#) on page 395.

Web Reporting Interface

To access the Web Reporting web site, log in to the GUI and then select **Menu > Reports**. The report names are displayed by category. Select the desired report and click on the link to display it. The Web Reporting interface consists of three tabs: **Reports**, **Published** and **Favorites**.

To move from one page to another, click the tab name. See the following list for a description of each tab.

- **Reports**-The Reports tab is the default tab; it lists standard and custom report templates by category. You can select a report, specify applicable settings, and then display the report with data.
- **Published**-The Published tab lists the reports that you have run, saved as a published report or have scheduled to run periodically. You cannot view a report published by another user unless that user shares the report. Once a report is published, you can:
 - View published report data by clicking on the report's name.
 - Delete a published report by checking its check-box and clicking **Delete**.
 - Share a published report by checking its check-box and clicking **Share**.
 - Make a published report private by checking its check-box and clicking **Unshare**.
 - Rename a published report by clicking **Rename**, typing in a new report name, and then clicking **Apply**.
- **Favorites**-The Favorites tab is where you save reports that you run often. When a report is designated as a favorite, you can:
 - Edit the favorite report settings that are set when you create a report by clicking **Edit Settings**.
 - Schedule the report to run automatically.
 - Delete a favorite report by checking the check-box next to the report and then clicking the **Delete** button.

The Online Help describes each of these tabs in detail and explains how to create reports, add reports to the **Favorites** tab, and schedule reports.

Report Builder

The Report Builder application allows advanced users to create completely original reports from blank templates. Alternatively, you can choose a report template you like and edit it to meet your requirements. All report components are based on whether you want a report on a single device or multiple devices. Different components are available for single device reports than for multiple device reports.

ADSP collects extensive data about traffic on your WLAN. The Report Builder interface lets you create reports using any data point the appliance collects. The graphic below shows an example tree in the Report Builder application and some elements from the resultant report, along with tips on how to add different types of components.

You control what's in the header section of the report by adding the Simple Component Report Header to the tree. Simple Components are general things that are generic to all reports, like Titles.

802.11 Wireless Network Health
from 2010-02-01 14:00:19 to 2010-02-02 14:00:19

System Name: maha-wide-mgr-013
Scope: system
Generated: 2010-02-02 14:01:33
Version: 8.0.0-14
Time Zone: EST - Eastern Standard Time

Report Builder - system
File Edit
New Open Save
Report Structure

- Performance_WLAN_Health
 - Header
 - Performance_Summary_Section
 - Column1
 - Performance_Summary
 - Perf_Alarms_By_Cat
 - Total_Performance_Alarms
 - Performance_Top_10
 - AlarmTable1
 - PageBreak1
 - Performance_Details_Section
 - Column2
 - Alarm_Details_Title
 - Config_Compat_Title
 - Config_Comp_Alarm_total_Co
 - Config_Comp_Top10
 - Congestion_Title
 - Congestion_Alarm_Total
 - Congestion_Alarm_Top_10

You can insert a new section to control how many columns appear in different parts of the report. This section has one column.

Performance Summary

Performance Alarms By SubCategory

This is an example of a chart. When you add charts, you should remember that they do not convert well to CSV format, so you should probably not combine graphs and tables in reports that you want to save as a CSV file.


Alarm Details
Top 10 Configuration/Compatibility Alarms

Alarm	Severity	Count	Alarm	Severity	Count
1. Not Configured for 802.11n	Warning	1	2. Not Configured for 802.11n	Warning	1
3. Not Configured for 802.11n	Warning	1	4. Not Configured for 802.11n	Warning	1
5. Not Configured for 802.11n	Warning	1	6. Not Configured for 802.11n	Warning	1
7. Not Configured for 802.11n	Warning	1	8. Not Configured for 802.11n	Warning	1
9. Not Configured for 802.11n	Warning	1	10. Not Configured for 802.11n	Warning	1

This is an example of a table. You add tables by selecting a node you want to add the table to, then select Insert > Table.

Adding a Report

1. Click **New** on the **Report Builder** tool bar.

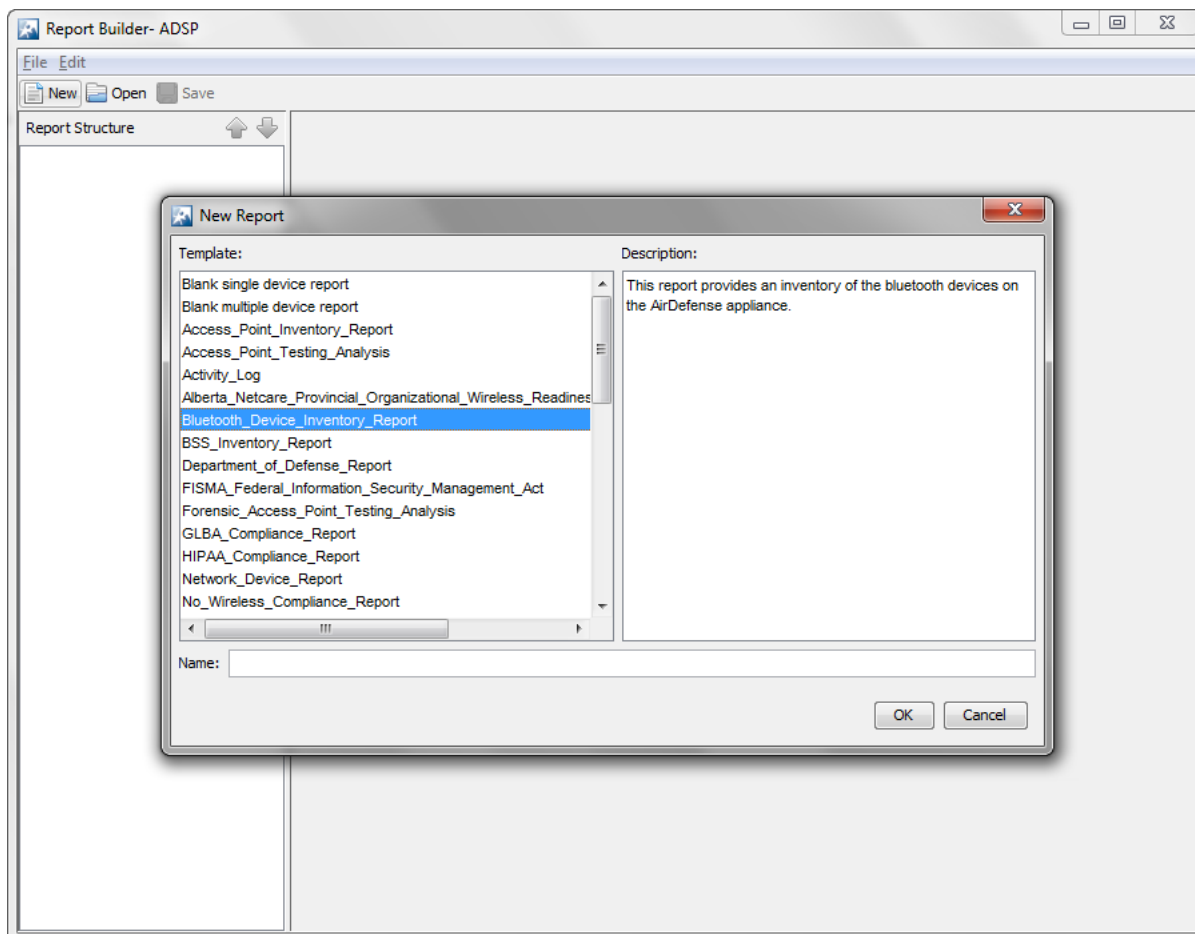

2. Choose a template. Either choose an existing report to edit, or choose the blank report for either a single device or for multiple devices.



Note

You cannot change the number of devices after you start creating a report. To change the number of devices on your report, you must create a new report.

3. In the **Name** field, type the name you want to use for this report.



Note

Report name must start with a letter and cannot have any spaces or symbols, with the exception of _ (underscore).

4. Click **OK**, and then click **Save**.

Adding Report Components

After you have created a report, regardless of whether you started with a blank template or an existing report, use the following guidelines for enhancing it:



Note

Right-click menus make it easy to work with report components. The Report Builder interface displays the right-click options that are available for use, and grays out those that are not.

- To add sections - Right-click on the name of the report in the tree. **Select Insert Simple Components**, and then select **Section**.
 - Sections are simply containers for the columns in a report area. For example, if you want three tables to appear side-by-side, you create a section, add three columns, then insert the tables as described below.
 - Use the up and down arrow buttons to move sections up and down in the tree to place them where you want them.
 - Use the word "Section" or the letter "S" in the section name to help you keep track of components.
 - You can add an empty buffer section between sections.
 - You must have at least one column per section.
- To add columns - Right-click on a section, select **Insert Simple Components**, and then select **Column**.
 - Columns cause items in your report to appear side-by-side.
 - You can add one (minimum) or more columns to each section.
 - You can add an empty buffer column between columns.
 - Use the word "Column" or the letter "C" in the section name to help you keep track of components.
- To add simple components - Click **Edit** on the tool bar or right-click on the name of your report in the tree. Select **Insert Simple Components**, and then select the item you want to add.
 - In addition to sections and columns, simple components include page breaks, headers and footers, and more.
- To add data fields, tables, charts, and floor plans - To add one of these report components to the highest level in the tree, click the name of the report in the tree (the top-level node). To add a report component to a section, click the column in that section that you want to add the component to. Then either right-click or click **Edit** on the tool bar. Select the item you want to add.




Note

When building alarm tables with an ap_MAC column, the ap_MAC column will only show data for alarms that were triggered by a wireless client (station) associated to an AP's BSS. Other alarms will leave this field blank.

- Use the up and down arrows to move items within the tree.

Available Report Components

The following diagram shows the components, data fields, tables, and charts that are available for you to add at different points in the report tree.

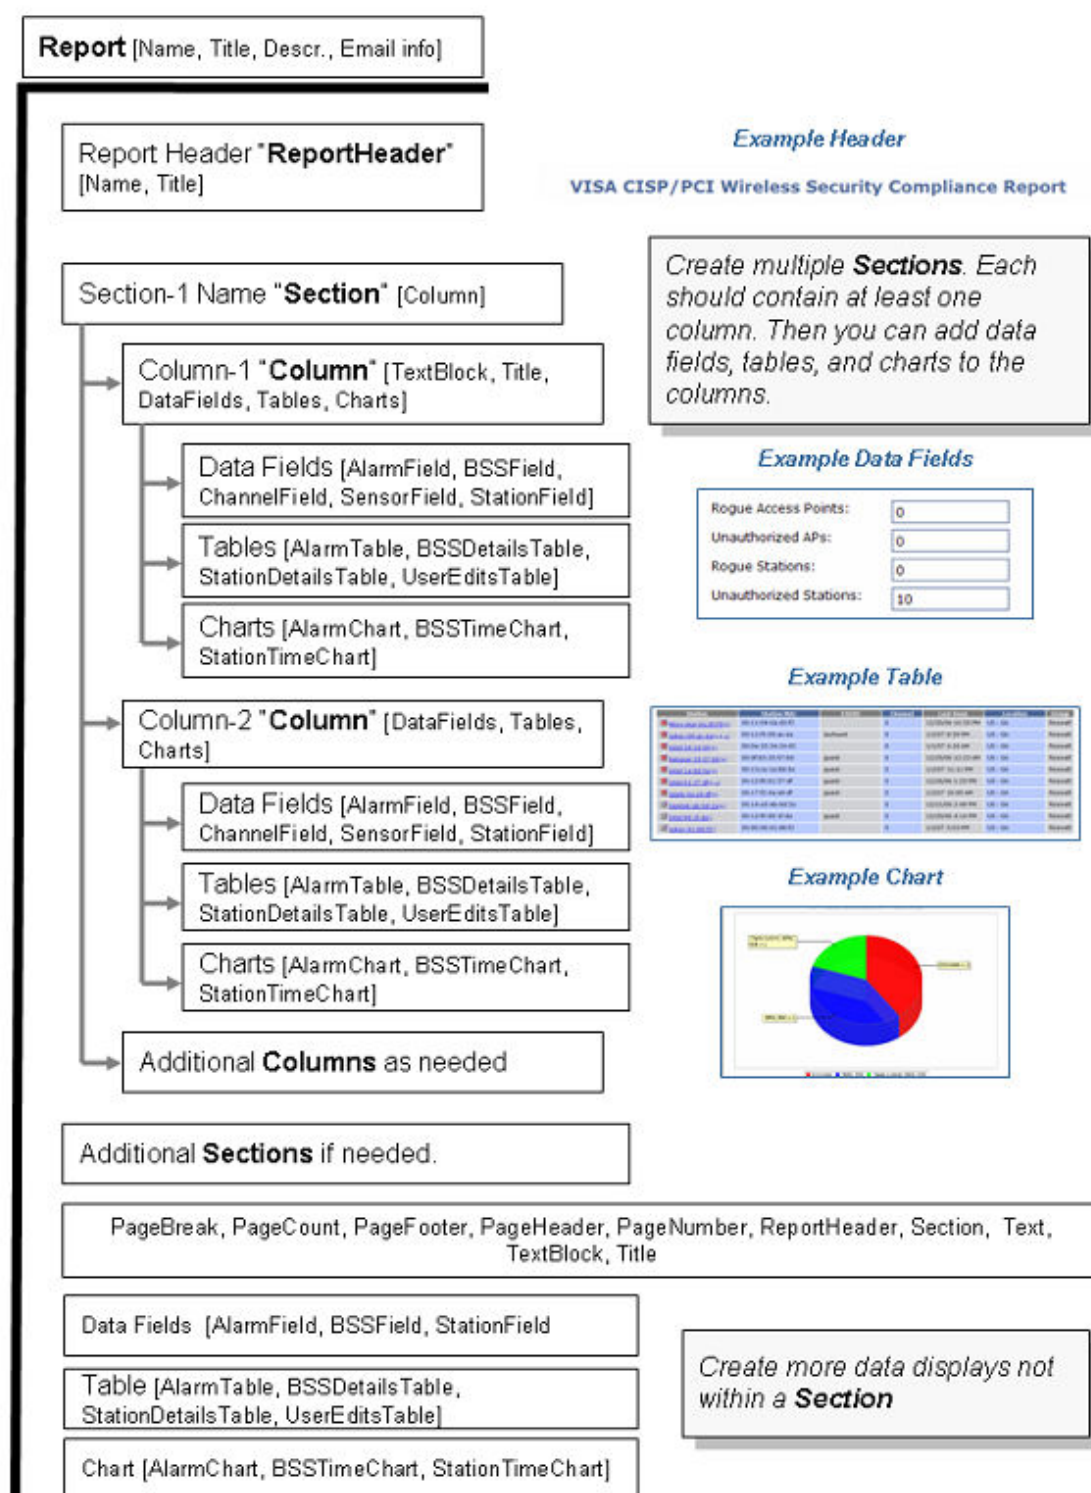

Configuring Report Components

Every report component (data field, table, or chart) has configuration options you can use to create reports that contain the exact information you need. After you add a report component to your report tree, Report Builder displays the configuration options for that component. You can name the component, and then configure filters.


**Note**

You may want to include the units of measure in the name you give the field. For example: Alarm (count).


Configuring Report Filters

There are four types of filter windows. When you choose to edit a filter, Report Builder displays filter choices in the appropriate type of window:


- Radio buttons (example):

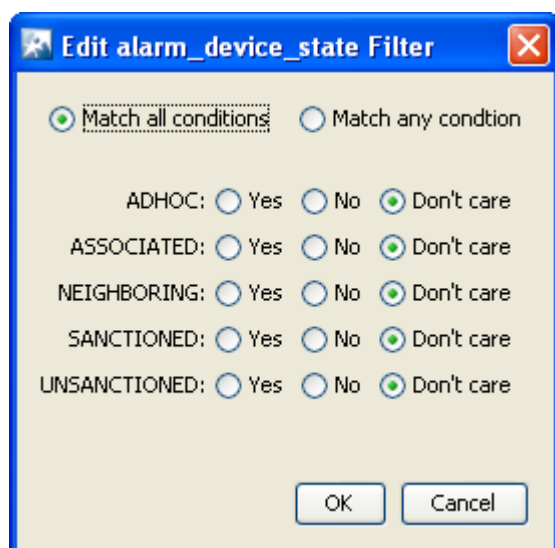


- Checkboxes (example):

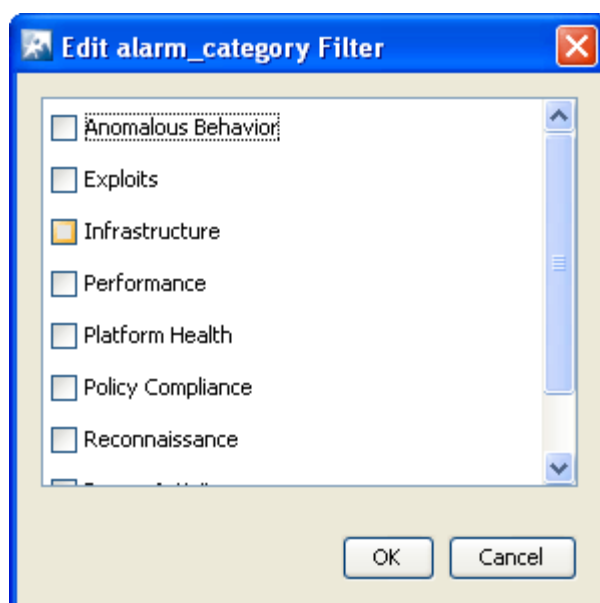

- Boolean (example):

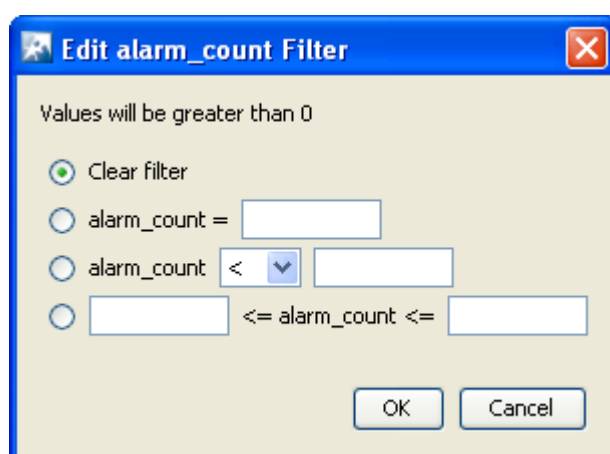

- Text box (example):

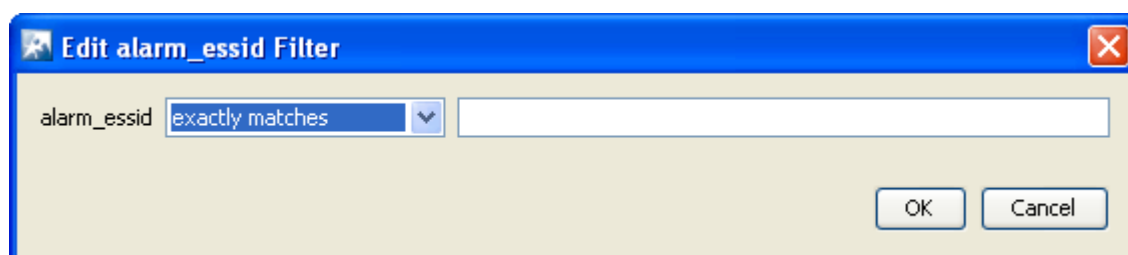


Deleting a Report

To delete an existing report:

1. Select **File > Delete Report** in the tool bar.

A Confirmation Window appears.

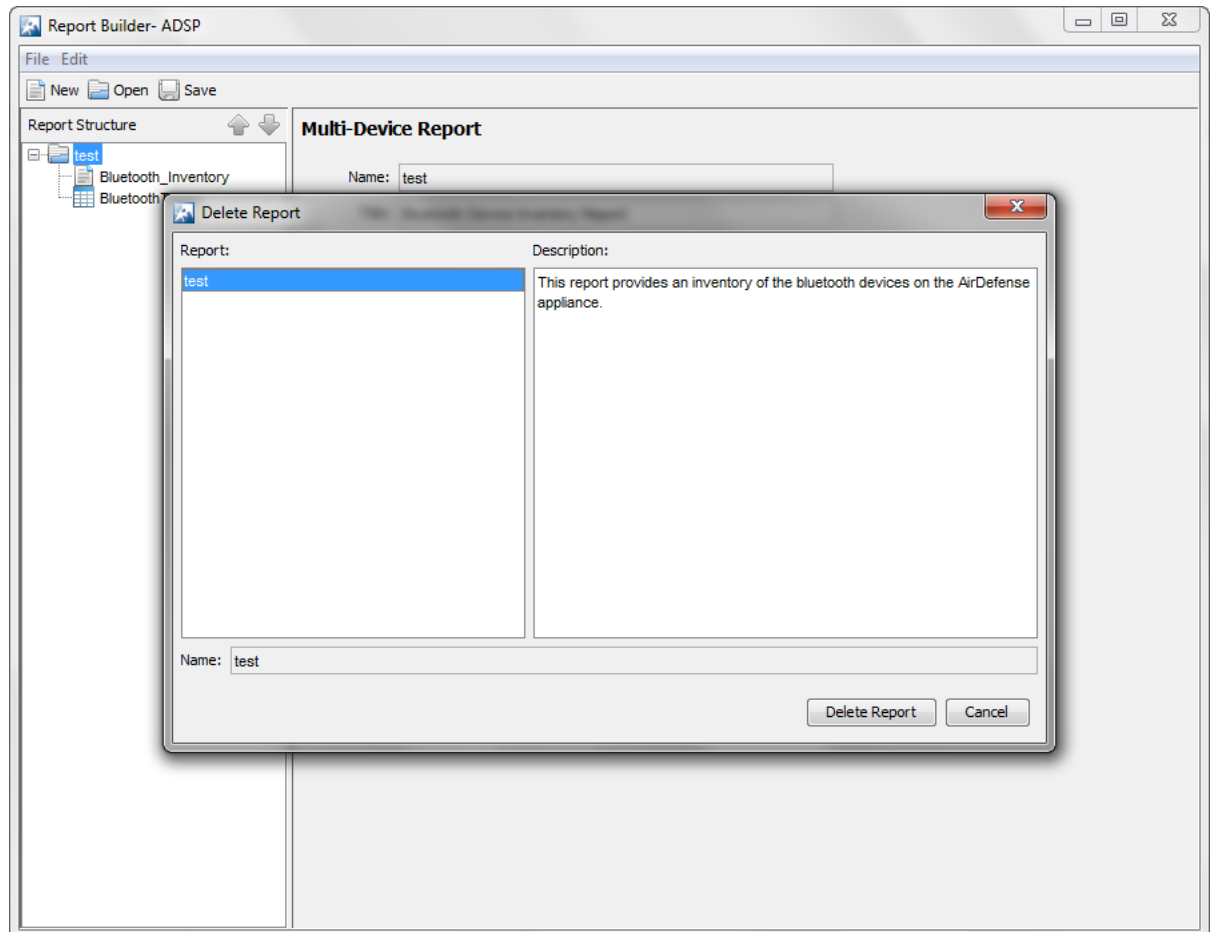


2. Select (highlight) the report that you want to delete.
3. Click **Delete Report** to delete.
4. Click **Yes** to confirm.

Importing a Report

You can import a report from the Report Builder screen by using the following steps.

1. Select **File > Import**.

The Import Reports window is displayed.

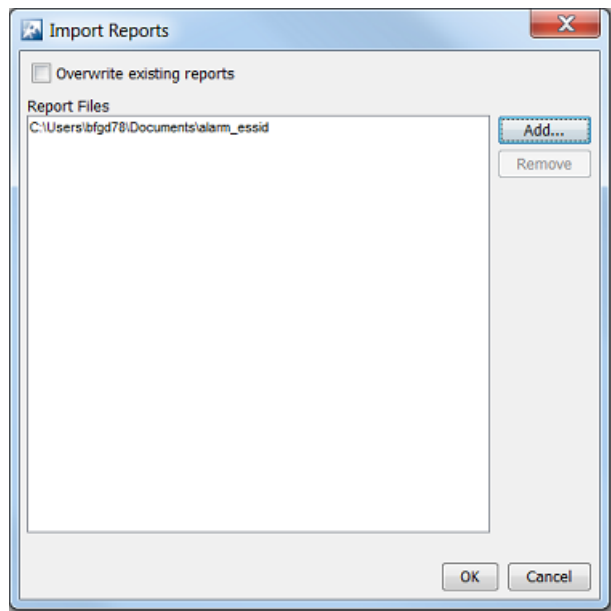


2. Click **Add**.
3. Navigate to the selected report, select (highlight) it, and click **Open**.
The report is added to the **Report Files** list. You may add as many reports as you like.
4. If a report name already exists, click the **Overwrite existing reports** checkbox.
5. Click **OK** to import the report.
The report is imported to the list of available reports.

Exporting a Report

You can export a report from the Report Builder screen by using the following steps.

1. Click **File > Export**.

The Export Reports window is displayed.

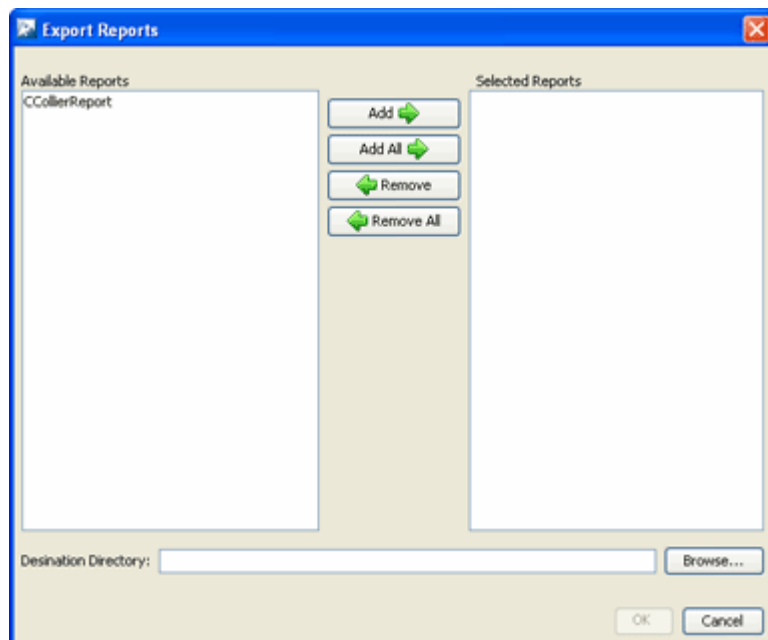

2. Select (highlight) one or more reports that you want to export.
3. Click **Add** to add the reports to the **Selected Reports** list.

The **Add All** button adds all of the available reports to the Selected Reports list. The **Remove** button removes selected (highlighted) reports from the Selected Reports list. The **Remove All** button removes all reports from the Selected Reports list.

4. Click **Browse** and navigate to the directory where you want to save the exported report(s).
5. Select the directory by clicking on it.
6. Click **Open** and then click **OK**.

The reported is exported to the selected directory on your PC.

Scheduled AP Tests

AP connectivity testing allows remote testing of network connectivity from the perspective of a wireless station. By utilizing the radio of the wireless sensor to simulate a wireless client station, true end-to-end network testing can verify all aspects of the wireless applications data path. Connectivity test can be configured two ways:

- scheduled
- on-demand


Scheduled AP Test



Note

Scheduled AP Test requires the 'AirDefense Toolkit' to work. Please download and install the AirDefense Toolkit from **Menu > Download Toolkit**.

You can schedule AP tests and view a list of AP Test scheduled for execution from the **Scheduled AP Test - ADSP** dialog.

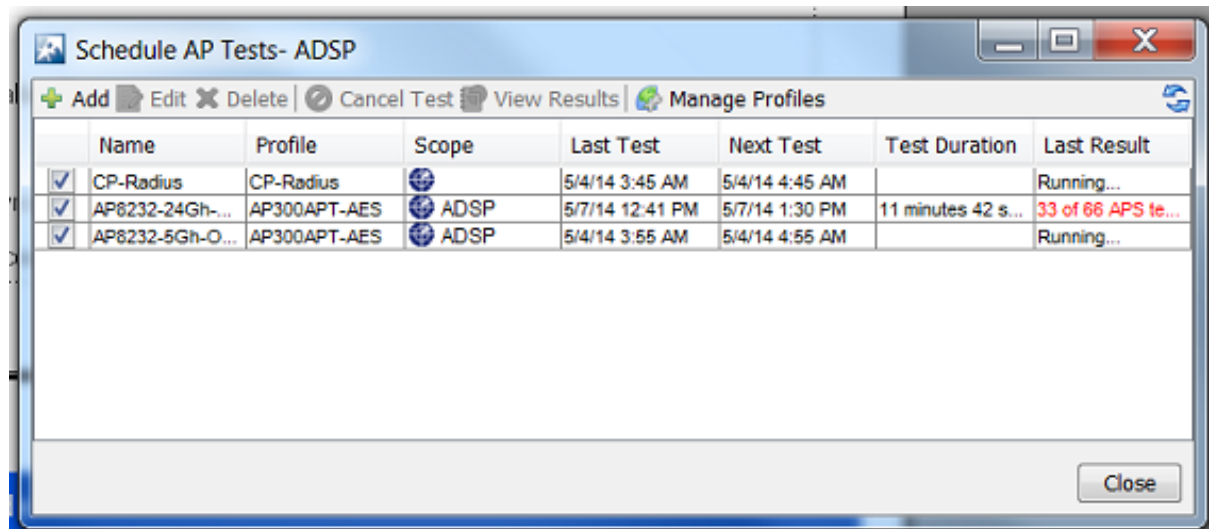

You can do the following tasks from the **Scheduled AP Test - ADSP** window:

- Add, edit, delete, and cancel tests
- View detail test results
- Manage the profiles that are used to run tests on similar APs.

Scheduled AP Test can be launched from **Menu > Scheduled AP Test**

On-demand AP Tests

On-demand AP tests can be performed on sanctioned APs only. Select the AP to test from the **Networks** tab and then run the required AP tests on it.

To run an on-demand AP test:

1. Click the **Network** tab.

The **Network** tab loads and displays a list of all discovered APs.

2. Select BSS from the **Show** drop-down menu.

A list of APs is displayed.

Device	Severity	Last Seen	Scope	Floor	Channel	Signal S...	SSID	Rogue	AP
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	11(2.462 ...	-77 dBm	Aspen1.2	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	6(2.437 ...	-79 dBm	Aspen1.2	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	7(2.442 ...	-84 dBm	ASPENLBS	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-82 dBm	Alpha-Corp	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-82 dBm	Alpha-Ph...	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-82 dBm	Alpha-Net	--	
ExtremeNetworks:...	Sever...	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-82 dBm		--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-72 dBm	Alpha-Corp	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-72 dBm	Alpha-Ph...	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-72 dBm	Alpha-Net	--	
ExtremeNetworks:...	Sever...	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-71 dBm		--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	7(2.442 ...	-86 dBm	ASPENLBS	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	11(2.462 ...	-87 dBm	tb1_auto...	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	6(2.437 ...	-88 dBm	Alpha-Ph...	--	
ExtremeNetworks:...	Sever...	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-84 dBm	Paris	--	
ExtremeNetworks:...	Sever...	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-73 dBm	devextre...	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	6(2.437 ...	-87 dBm	Alpha-Ph...	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	6(2.437 ...	-86 dBm	Alaha-Coro	--	

3. Select the AP you wish to test.




Note

The AP must be sanctioned, as indicated by the green symbol on the device.

4. Click on the down arrow on the device and in the drop-down menu, select **AP Test**.


Device	Severity	Last Seen	Scope	Floor	Channel	Signal S...	SSID	Rogue	AP
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	11(2.462 ...	-77 dBm	Aspen1.2	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	6(2.437 ...	-79 dBm	Aspen1.2	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	7(2.442 ...	-84 dBm	ASPENLBS	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-82 dBm	Alpha-Corp	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-82 dBm	Alpha-Ph...	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-82 dBm	Alpha-Net	--	
ExtremeNetworks:...	Sever...	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-82 dBm		--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-72 dBm	Alpha-Corp	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-72 dBm	Alpha-Ph...	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-72 dBm	Alpha-Net	--	
ExtremeNetworks:...	Sever...	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-71 dBm		--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	7(2.442 ...	-86 dBm	ASPENLBS	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	11(2.462 ...	-87 dBm	tb1_auto...	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	6(2.437 ...	-88 dBm	Alpha-Ph...	--	
ExtremeNetworks:...	Sever...	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-84 dBm	Paris	--	
ExtremeNetworks:...	Sever...	Wed Jan ...	ADSP	Unp...	1(2.412 ...	-73 dBm	devextre...	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	6(2.437 ...	-87 dBm	Alpha-Ph...	--	
ExtremeNetworks:...	Safe(0)	Wed Jan ...	ADSP	Unp...	6(2.437 ...	-86 dBm	Alaha-Coro	--	

5. The test results for that device are displayed in a window.

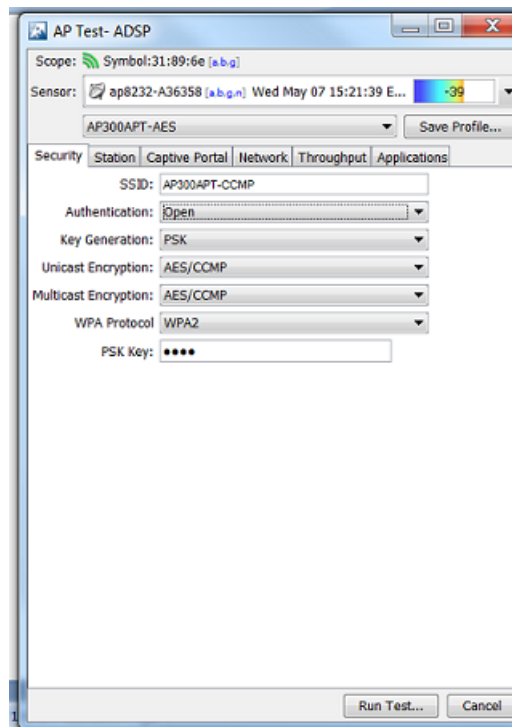

AP Test License


An AP Test license is required to access the **Scheduled AP Test** feature. AP Test is not part of the default AirDefense system. If the AP Test license is not installed, you will receive the following error when attempting to access the **Scheduled AP Test** feature:

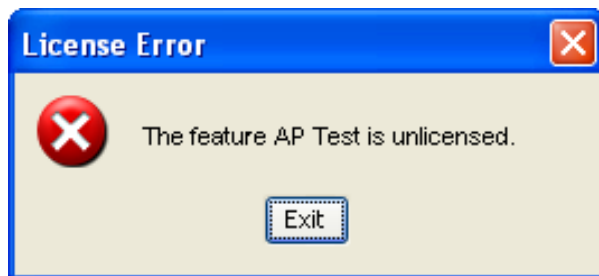

Click **Exit** to close this dialog window.

Scheduled Vulnerability Assessment

Wireless vulnerability assessment provides remote wireless security testing. By simulating attacks from a wireless hackers point of view, administrators can now identify sensitive systems exposed to the wireless network. This eliminates the need to go on-site and perform penetration testing.

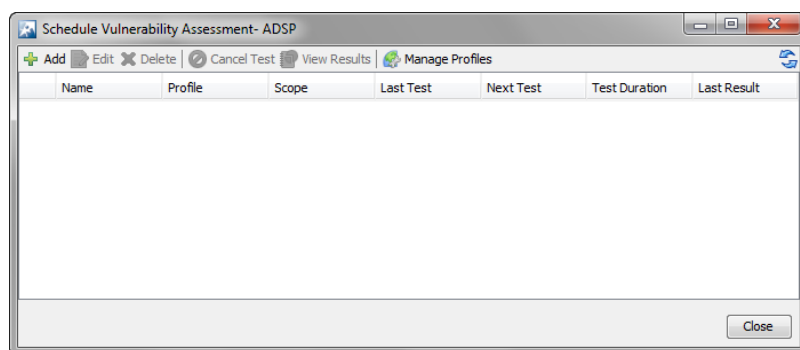


Schedule a Vulnerability Assessment

To manage and schedule Vulnerability Assessment:

1. Click **Menu > Scheduled Vulnerability Assessment**.

The **Vulnerability Assessment** window displays a list of existing Vulnerability Assessment tests.

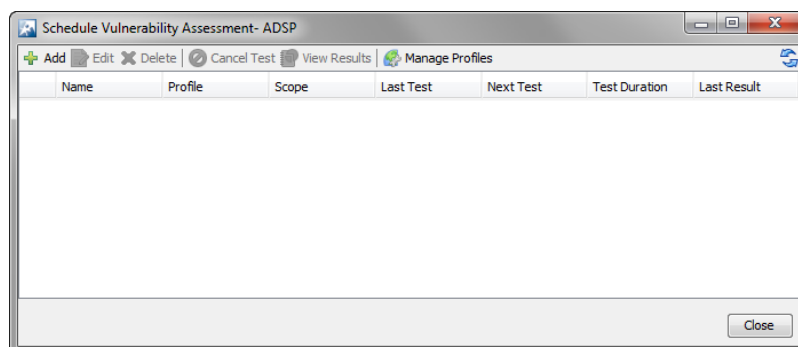


2. Select **Add** to create and add a new Scheduled Vulnerability Assessment test.

3. Select the **Ok** button after setting the parameters for this Vulnerability Assessment test.

At any time, select **Cancel** to exit without saving the configuration.

Vulnerability Assessment License


A Vulnerability Assessment license is required to access the Scheduled Vulnerability Assessment feature. Vulnerability Assessment is not part of the AirDefense basic system; therefore, you will receive the following license error when attempting to access the Scheduled Vulnerability Assessment feature:

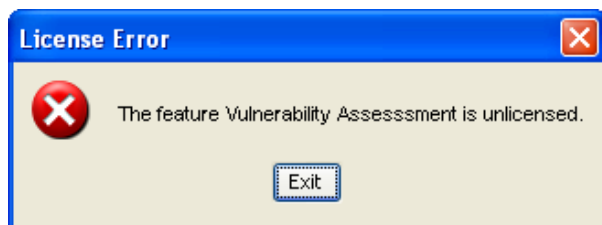

Click **Exit** to close this dialog window.

Scheduled Events

The Scheduled Events feature allows you to monitor all scheduled events from one source. You can schedule events throughout AirDefense, and monitor the scheduled events from the Scheduled Events window.

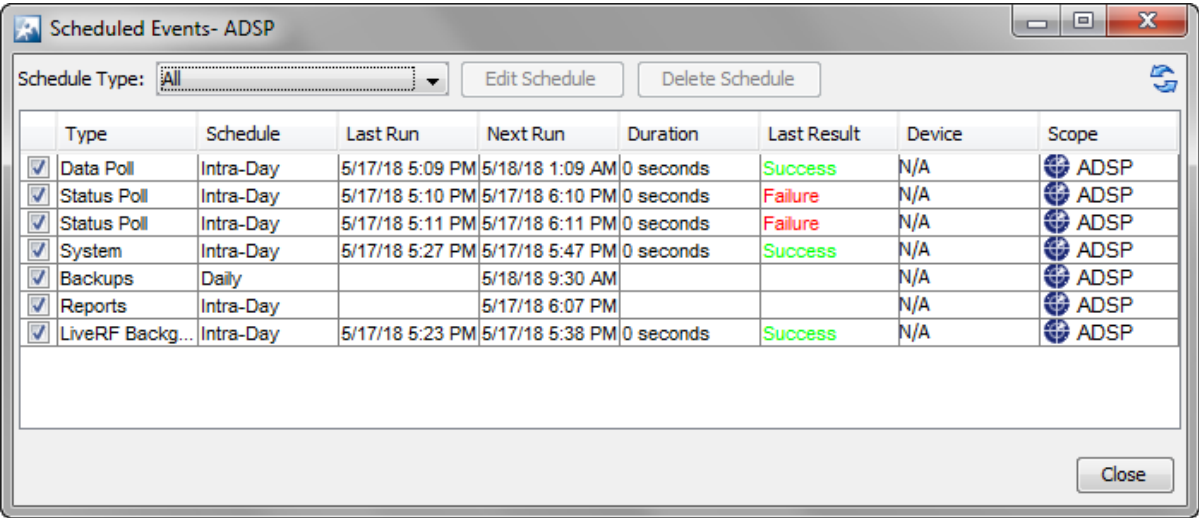


Monitoring Scheduled Events

Scheduled events can be monitored by:

- 1. Select **Menu > Scheduled Events**.

The **Scheduled Events** window displays with a list of events.

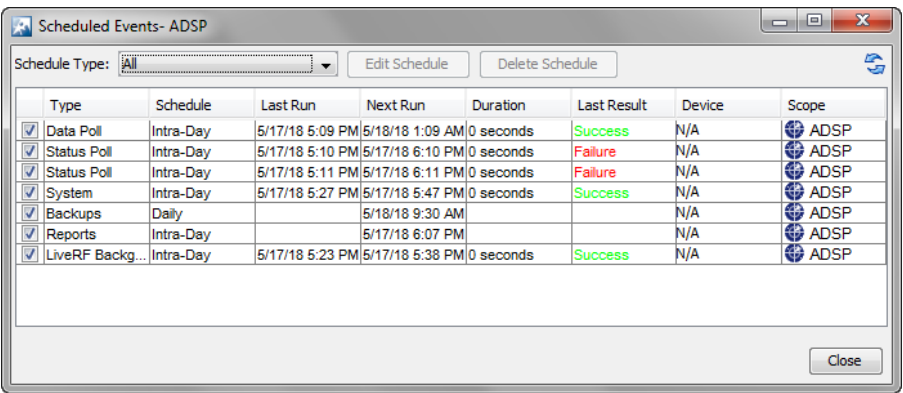

2. Use the **Schedule Type** drop-down to filter to the events of a particular type. Select **All** to view all scheduled events (default).

The different types of events that can be selected are:

• AP Test • Auto Classification • Backups • Firmware Upgrade • Frame Capture • Server Sync • System • Forensic Backup • Device Import • Vulnerability Assessment	• Device Management Poll • Device Configuration • Deferred Device Configuration • LiveRF Background Analysis. • Primary Appliance Poll • Spectrum Analysis • WiNG Integration: Keep Alive • Logs Backup • Reports



Note

You cannot schedule new events using the **Scheduled Events** feature. You can only view, edit, or delete events.


The following information is displayed for each event:

Column	Description
Type	Type of event that is scheduled.
Schedule	How often the scheduled event will be conducted.
Last Run	Last time the scheduled event was conducted.
Next Run	Next time the scheduled event will be conducted.
Duration	Amount of time the scheduled event lasted.
Last Result	Result of the last scheduled event.
Device	MAC address of the device if the event is reported for the device.
Scope	Scope of the report.

Altering Event Schedules

You can alter an event schedule by highlighting the scheduled event and clicking the **Edit Schedule** button. To alter an event's schedule:

1. Select the event by highlighting it and then select the **Edit Schedule** button.
The **Edit Schedule** window displays.

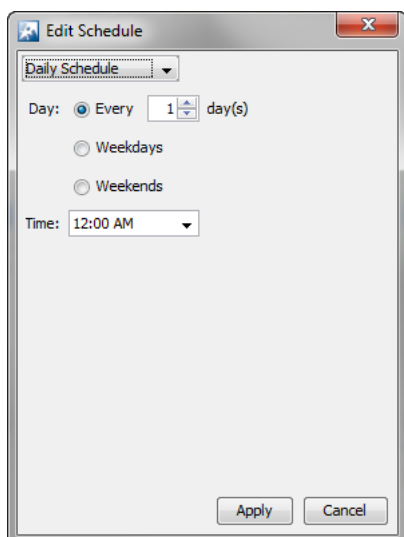

2. From the drop-down, select the appropriate schedule.
You can change how often the event is conducted by selecting *One Time Schedule*, *Intra-Day Schedule*, *Daily Schedule*, *Weekly Schedule*, or *Monthly Schedule* from the drop-down menu. Depending on the interval you select, fill in the related fields using the following table:

Interval	Action
One Time Schedule	Choose a time for the backup by selecting a time from the Time drop-down menu. Then, select a day for the backup by clicking the Calendar button in the Date field and selecting a date.
Intra-Day Schedule	Select a time to begin the backup. Then, select a frequency in hours.
Daily Schedule	Select a frequency in <i>day</i> , <i>weekdays only</i> , or <i>weekends only</i> . Then, select a time of day.
Weekly Schedule	Select the days of the week on which you want to schedule this event. Select the checkbox next to each day of the week to run the event on that particular day.
Monthly Schedule	Choose the months that you want to run the event by clicking the checkbox next to the month(s) to place a checkmark in the box(es). Then, select a day of the month to conduct the backup. Last, specify a time of day.

Add Devices

The **Add Devices** action is used to add devices to your network.

The screenshot shows the 'Add Devices' form. The 'Device Type' dropdown menu is open, displaying a list of device types: BSS, Wireless Client, Access Point, Wired Switch, Wireless Switch, WLSE, AirWave, MSP, and Appliance. The 'BSS' option is currently selected. The form fields include: 'MAC Address' (empty), 'Name' (filled with 'NX02'), 'Description' (empty text area), 'Add to appliance' (radio buttons for 'Primary appliance only' and 'All appliances', with 'Primary appliance only' selected), 'Annotations' (checkboxes for 'Flagged' and 'Bridge', both unchecked), 'Classification' (radio buttons for 'Neighboring', 'Unsanctioned', 'Sanctioned (Inherit Profiles)', and 'Sanctioned (Assign Profiles)', with 'Sanctioned (Inherit Profiles)' selected), and a list of security profiles (SecurityProfile1 through SecurityProfile15) with checkboxes, all of which are unchecked. A red error message 'Invalid MAC Address' is visible at the bottom left of the form.

You can add any of the following devices by selecting the device from the **Device Type** menu:

- BSS
- Wireless Client
- Wired Switch
- Wireless Switch
- WLSE
- AirWave
- MSP
- Appliance

The fields change according to the selected device.

BSS Fields

The following screen is displayed when BSS is selected.

Add Devices

Device Type: **BSS**

MAC Address:

Name:

Description:

Add to appliance: ☐ Primary appliance only ☒ All appliances

Annotations: ☐ Flagged ☐ Bridge

Classification: ☐ Neighboring
☐ Unsanctioned
☒ Sanctioned (inherit)
☐ Sanctioned (override)

☐ AD_ralfenator_Security_Profil

The following fields are available when adding BSSs:

Field	Description
MAC Address	The MAC address of the device
Name	The name you want your device to display in your network
Description	A description of the device
Add to appliance	You may add the device to your primary appliance or all appliances that Extreme AirDefense is monitoring. Select the appropriate radio button.

Field	Description
Annotations	Specify if the device should be flagged or if it will be bridged. Select the appropriate checkbox.
Classification	Specify if the device should be classified as: • Neighboring • Unsanctioned • Sanctioned (Inherit Profiles) • Sanctioned (Assign Profiles) - a list of available profiles is displayed to use as the override profile(s). You may select one or more profiles.

Wireless Client Fields

The following screen is displayed when `Wireless Client` is selected.

The screenshot shows the 'Add Devices' form with the 'Device Type' dropdown set to 'Wireless Client'. The form contains the following fields and options:

- MAC Address:** A text input field.
- Name:** A text input field.
- Description:** A large text area.
- Add to appliance:** Two radio buttons: 'Primary appliance only' and 'All appliances' (selected).
- Annotations:** Two checkboxes: 'Flagged' and 'Watch List'.
- Client Type:** A dropdown menu with 'Employee Personal Device' selected.
- Classification:** Four radio buttons: 'Neighboring', 'Unsanctioned', 'Sanctioned (Inherit Profiles)' (selected), and 'Sanctioned (Assign Profiles)'.
- Sanctioned (Assign Profiles):** A list box showing a scrollable list of security profiles: SecurityProfile1, SecurityProfile10, SecurityProfile11, SecurityProfile12, SecurityProfile13, SecurityProfile14, and SecurityProfile15. Each profile has an associated checkbox.

The following fields are available when adding Wireless Clients:

Field	Description
MAC Address	The MAC address of the device
Name	The name you want your device to display in your network
Description	Select a scope (usually a floor network level) from the drop-down menu
Add to appliance	You may add the device to your primary appliance or all appliances that Extreme AirDefense is monitoring. Select the appropriate radio button.
Annotations	Specify if the device should be flagged or if it will be on a watch list. Select the appropriate checkbox.
Client Type	Select the client type from the drop-down list. The choices are: • Employee Personal Devices • Guest Wi-Fi User • In-store Customer • Laptop • Loyalty Customer • Phone • Potential Customer • Scanner • Tablet • Uncategorized Device
Classification	Specify if the device should be classified as: • Neighboring • Unsanctioned • Sanctioned (Inherit Profiles) • Sanctioned (Assign Profiles) - a list of available profiles is displayed to use as the override profile(s). You may select one or more profiles.

Other Device Fields

The following screen is displayed when one of the following device types, Access Points, Wired Switches, Wireless Switches, WLSE, AirWave, or MSP, is selected.

The screenshot shows the 'Add Devices' form. At the top, there's a blue header bar with the text 'Add Devices'. Below this, on the right, is a 'Device Type:' label followed by a dropdown menu showing 'Access Point'. The form fields are as follows:

- MAC Address: A text input field.
- Name: A text input field.
- Scope: A dropdown menu with 'ADSP' selected.
- Host: A text input field.
- Description: A large text area.

The following fields are available when adding the above device types.

Field	Description
MAC Address	The MAC address of the device.
Name	The name you want your device to display in your network.
Scope	Select a scope (usually a floor network level) from the drop-down menu.
Host	The host name of the device.
Description	A description of the device.

Appliance Fields

The following screen is displayed when Appliance is selected.

The screenshot shows the 'Add Devices' form with 'Device Type' set to 'Appliance'. The fields are:

- Name: A text input field.
- Host: A text input field with '0000' entered.
- Port: A text input field with '0000' entered.

The following fields are available when adding appliances.

Field	Description
Name	The name you want your device to display in your network.
Host	The host name of the device.
Port	The port where the devices is connected.

When adding devices, you can only add one device at a time.

Import and Discovery

Import and Discovery is used to import or discover devices from one of the following sources:

- Local file
- Remote file
- SNMP discovery using a list of networks to scan
- Wireless Manager/Switch.

All imported devices will be configured and classified according to the Device Import Rules. You may also use Auto-Placement Rules to place the device in your network, or you may place the device yourself.

You can also import Connectivity profiles for AP Test and Vulnerability Assessment using Import and Discovery. The import file is used to populate the fields in the three tabs in the AP Test and Vulnerability Assessment profiles.


Importing profile settings requires a separate import file. You should not combine importing profiles with importing devices.

Once a profile has been created (by importing or through the GUI), you can schedule an AP Test or a Vulnerability Assessment to run using Import and Discovery.

SNMP Discovery

The following fields are available during SNMP discovery:

Field	Description
Job Type	SNMP Discovery
Descriptions	System generated description. You may change if you want to.
Networks	List of networks to scan separated by commas. You may enter a single IP address, a range of IP addresses, a subnet mask, or an IP address that includes a wild card such as asterisk (*).

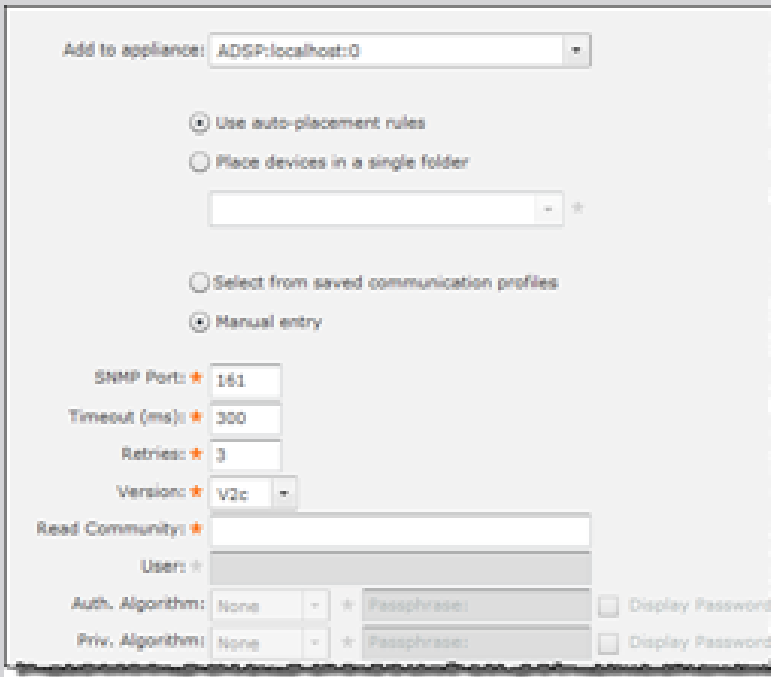Field	Description
Add to appliance	Appliance where you want to import device (will only list your appliance unless you have a Central Management license).
Device placement	You have the option of using the auto-placement rules or selecting a folder from your network tree.
Execution Method	You have the option of selecting an existing profile or entering the import information manually. If you elect to enter the information manually, additional options are displayed.  The screenshot shows a configuration window for manual entry. It includes fields for 'Add to appliance' (set to ADSP:localhost:0), radio buttons for 'Use auto-placement rules' and 'Place devices in a single folder' (the latter is selected), a folder selection dropdown, radio buttons for 'Select from saved communication profiles' and 'Manual entry' (the latter is selected), and several input fields: 'SNMP Port' (161), 'Timeout (ms)' (300), 'Retries' (3), 'Version' (V2c), 'Read Community', 'User', 'Auth. Algorithm' (None), 'Priv. Algorithm' (None), and two 'Passphrase' fields. There are also checkboxes for 'Display Password' next to the passphrase fields. The additional options for manual entry are: • SNMP Port-Device SNMP port number; normally set to 161 but can be different • Timeout (ms)-Timeout in milliseconds to attempt import • Retries-Number of retries to attempt import • Version-SNMP version used: V1, V2c or V3 • Read Community-Read Community string used for the SNMP authentication • User-Name of the V3 user, which is configured on a switch for SNMP V3 access. This option is inactive until V3 is selected as the version. • Authentication/Privacy Algorithm-You may optionally supply an authentication and privacy algorithm along with a passphrase for each. These parameters must match settings on the switch exactly. These options are inactive until V3 is selected as the version. Selecting the Display Password checkbox displays the passphrase as text.

Import Local File

Job Type: ★ Import Local File

Descriptions: ★ collier job started Fri Dec 16 2011 03:15:04 PM

Path: ★

? Not sure how to format a file for import?

1. Open a preformatted sample file.
2. Enter the appropriate information.
3. Save to a local drive.
4. return to this screen, and import to ADSP.

Select a sample CSV file ...

Add to appliance: ADSP:localhost:0

☒ Use auto-placement rules

☐ Place devices in a single folder

*

The following fields are available when importing local files:

Field	Description
Job Type	Import Local File
Descriptions	System generated description. You may change if you want to.
Path	Browse to specify a path on your local workstation including the import filename (e.g., c:\temp\filename)
Select a sample CSV file	Selects a sample CSV file from the drop-down list. Once a file is selected, click Open in New Window . A new window is opened containing the selected file. You can copy this file and use it to create an import file.
Add to appliance	Appliance where you want to import device (will only list your appliance unless you have a Central Management license)
Device placement	You have the option of using the auto-placement rules or selecting a folder from your network tree.

Import Remote File

Job Type: ★ Import Remote File

Descriptions: ★ collier job started Mon Dec 19 2011 10:35:00 AM

Host: ★

Protocol: ★ HTTP

Path: ★

User: ★

Password: ★

Add to appliance: ADSP:localhost:0

☒ Use auto-placement rules

☐ Place devices in a single folder

★

? Not sure how to format a file for import?

1. Open a preformatted sample file.
2. Enter the appropriate information.
3. Save to a local drive.
4. return to this screen, and import to ADSP.

Select a sample CSV file ...

Open in New Window

The following fields are available when importing remote files:

Field	Description
Job Type	Import Remote File
Descriptions	System generated description. You may change if you want.
Host	Host name or IP address
Protocol	Protocol used for communications
Path	Path name on the remote host including the import filename (e.g., /usr/local/tmp/filename)
User	User name needed to log in
Password	Password needed to log in
Add to appliance	Appliance where you want to import device (will only list your appliance unless you have a Central Management license)

Import from Wireless Manager or Switch

The following fields are available when importing wireless managers or switches:

Field	Description
Job Type	Import from Wireless Manager/Switch
Descriptions	System generated description. You may change if you want.
Basic Search	Specify a partial or full MAC address of a Switch or enter the name; then, click Search . The search results are listed in the Select from search results box. Select a device from the list and then click one of the Start Import buttons. Devices associated with the Wireless Manager/Switch are imported into ADSP.
Advanced Search	Enter search criteria in one or more fields, then click Search . The search results are listed in the Select from search results box. Select a device from the list and then click one of the Start Import buttons. Devices associated with the Wireless Manager/Switch are imported into ADSP. The following search criteria are available: MAC address Name DNS name Vendor name.
Add to appliance	Appliance where you want to import device (will only list your appliance unless you have a Central Management license).
Device placement	You have the option of using the auto-placement rules or selecting a folder from your network tree.

Import File Formats

There are two types of import files:

- Devices
- Profiles (configurations).

Import files contain records, made up of columns (fields), that are used to import devices or profiles and configuration settings into ADSP.

You will need to use text files to import devices and profiles. There are two commonly used text file formats:

- Comma separated values text files (CSV), in which the comma character typically separates each field of text.
- Delimited text files (TXT), in which the TAB character typically separates each field of text.

Use a text file, such as a Comma Separated Values (CSV) file, to import devices and profiles. To create an import file, use a text editor such as Notepad.



Note

A CSV file can be used instead of a TXT file.

Here is some guidance on creating import files:

- There can only be one record on a line.
- The record name must always be the first column.
- Each record has a default column sequence. For instance, an AP record default column sequence is:

```
AP ; NAME ; DESCRIPTION ; MAC_ADDRESS ; IP ; DNS_NAME ; MODEL ;  
ADD_OR_DEL ; FIRMWARE
```
- The default column sequence must always come before any other columns. Optional columns may follow in any order.
- Some columns (fields) are mandatory. You must include mandatory columns for each record.
- Some columns (fields) are flexible. Flexible columns may be left out of the record; however, ADSP will (depending on the column) supply a value for a flexible column.

You can find more detailed information about the records under Devices or Profiles and Configurations.

Devices

To view the information, click on the appropriate topic in the AirDefense Help.



Note

You can only access this information in the AirDefense Help. Also, you may have to scroll down to find the information you want if you are using Firefox as your browser.

- AP
- AUTOLIC_IMPORT
- BLUETOOTH
- BSS

Requirements: Importing BSSs require performance and security policy information. The relevant policies must be created prior to importing the file or created within the file. You can create the BSS in line 1 of the file and the policies later in the file. The sequence does not matter.

- DEV_IMPORT_CLASS
- DEV_ON_WIRE
- STATION

Requirements: Importing Stations require performance and security policy information. The relevant policies must be created prior to importing the file or created within the file. You can create the Station in line 1 of the file and the policies later in the file. The sequence does not matter.

Allowed Values of Station Type:

- New Client Type
- Scanner
- Employee Personal Device
- Laptop
- Tablet
- Loyalty Customer
- In Store Customer
- Potential Customer
- Phone
- Uncategorized Device
- Guest Wi-Fi User
- STATIONLITE
- SWITCH

Profiles and Configurations

Profiles and configuration settings can be created by importing the data from an import file. The import file supplies data that match the fields of a particular profile or configuration in the AirDefense GUI. There is a column for each field in the profile or configuration that exists in the GUI.

There is a special record for scheduling AP Tests or Wireless Vulnerability Assessments. Before you can schedule an AP Test or Wireless Vulnerability Assessment, profile data must be created by importing through an import file or through the GUI. Information about scheduling AP Tests or Wireless Vulnerability Assessments can be found in the [Scheduling AP Test or Vulnerability Assessment](#) on page 428 topic.

To view the information, click on a link below in the AirDefense Help.

**Note**

You can only access this information in the AirDefense Help.

- FOLDER
- ACCESS_CONFIG
- APT_PROFILE
- AUTOPLACEMENT_RULE
- CHANNEL_CONFIG
- CLEAR_COMM
- CLI_CONF

Mapping for Device Type:

- ap51x1=1
- ap71x1=2
- ws2000=4
- ws5100=5
- rfsx000=6
- airespace=7
- wm3x00=8
- ap35x0=9
- ap47x0=10
- brx000=11
- br51x1=12
- br71x1=13
- ap7181=14
- Cisco1200Plugin=20
- cb3000=23
- ap650SA5000R=
- Wing 5.2=25
- IRIS=26
- SILK=27
- ArubaPlugin=28
- extreme.WM2000Plugin=50
- CLI_PROF
- COMM_SETTINGS

- COMM_SETTINGS_LOC
- DELETE_PROFILE
- IDS_FREQ
- IDS_PROFILE
- KEY_PROFILE
- LBS_CONFIG
- LOC_RSSI
- LOC_REGION
- LOC_PRESENCE
- LOC_SUB
- NAMED_PROFILE
- PERF_POLICY
- POLL_SETTINGS
- RADIUS_CONFIG
- RADIUS_INFO
- REALM_CONFIG
- RELAY_PARAMS
- SCHEDULED_IMPORT
- SECURITY_PROFILE
- SENSOR_SETTINGS
- SYSTEM_SETTINGS
- USER_INFO
- WLAN_PROFILE

Import Rules:

- The last field NUM_KEYS_RADIUS_SERVERS is zero by default.
 - For protocol EAP,WPA and WPA2, RADIUS server information is expected.
 - RADIUS Server information is preceded by record name radius_info and followed by RADIUS server name.
 - For WPA_PSK and WPA2_PSK, the primary shared key and ascii value need to be made available.
 - If the protocol is Shared or Open, then Key information needs to be provided. The key information is specified as follows: KEY_PROFILE,<Index 1,2..>, <transmit key/default TRUE>, <ascii/default TRUE>,<The WEP Key>
 - If the number of keys/radius servers are greater than 0, no further WLAN profiles will be accepted until all keys or RADIUS server information is provided. Information can be sent in any sequence except for WLAN profiles and LBS profiles which require information in that order.
- WVA_PROFILE

Scheduling AP Test or Vulnerability Assessment

Once you have created a profile (by importing or through the GUI), you can schedule an AP Test or a Vulnerability Assessment to run. This is done with a record named `scheduled_test`.

The `scheduled_test` record can part of an import file that creates a profile or it can be its own separated import file. If it is part of an import file that creates a profile, all `scheduled_test` records must be entered at the end of the file.

The fields for a `scheduled_test` record are:

**Note**

All fields have an equivalent field in the GUI.

- Is this a scheduled AP Test (versus Vulnerability Assessment)-enter true for AP Test; false for Vulnerability Assessment.
- Profile name
- Scope [BSS MAC address or path to folder separated by a slash (/)]
- Number of retries
- Switch Sensors on retry (true or false)
- Signal threshold
- Last seen time in minutes
- Skip test on sensor busy (true or false)
- Filter on SSID (true or false)
- Time to wait for Sensor in minutes
- Number of tests (assessments) to run in parallel
- Prefer OTA tests (true or false)
- Schedule name
- Schedule type (daily, intraday, monthly, weekly, or onetime):
 - Daily has the following sub-fields:
 - hours (the hour of the day)
 - minutes (the minute of the hour)
 - type (interval, weekdays, or weekends)-interval means run in every x days. weekdays means run on weekdays. weekends means run on weekends.
 - interval (in days)-an interval of 1 means every day; an interval of 4 means every four days (this sub-field is only used if type is interval)
 - Intraday has the following sub-fields:
 - hours (the hour of the day)
 - minutes (the minute of the hour)
 - number of hours between runs (must be > 1)
 - Monthly has the following sub-fields:
 - hours (the hour of the day)
 - minutes (the minute of the hour)

- months to run [colon(:) delimited]; i.e., January:February:etc
- type (day, last, or specific)-day means run on the nth day of the month. last means run on last day of the month. specific means run on the last, first, second, third, fourth, or fifth occurrence on the specified day of the week (Monday, Tuesday, Wednesday, etc).
- Weekly has the following sub-fields:
 - hours (the hour of the day)
 - minutes (the minute of the hour)
 - days to run [colon(:) delimited]; i.e., Sunday:Wednesday
 - interval (weeks between runs)
- Onetime has the following sub-fields:
 - hours (the hour of the day) minutes (the minute of the hour)
 - month (1 - 12 with 1 being January and 12 being December)
 - day of the month (1 - 31)
 - year (i.e., 2012)

Examples:

```
scheduled_test,TRUE,APT_ProfileName1,00:11:22:33:44:55,2,TRUE,-70,10,TRUE,TRUE,10,20,Schedule1,onetime,6,30,5,5,2012
scheduled_test,FALSE,WVA_ProfileName1,ADSP/UnplacedDevices,2,TRUE,-70,10,TRUE,TRUE,10,20,TRUE,Schedule2,daily,interval,10,20,1
```

Bluetooth Monitoring

Bluetooth monitoring is a feature that provides 24x7 monitoring of Bluetooth devices in Enterprise environments. With this feature, ADSP can automatically scan and detect security threats from unsanctioned Bluetooth devices, as described in the following list.

- Detection of any unsanctioned Bluetooth device.
- Detection of any unsanctioned Bluetooth device present longer than the configured duration.
- Detection of any unsanctioned Bluetooth device detected outside of business hours.

Bluetooth devices are imported into AirDefense using a *csv* file. These devices are initially classified as *Unplaced* devices. When an imported Bluetooth device is seen, it is classified into its proper category and placed appropriately.

The system also generates notifications to administrators when a threat is detected.

Installing the Bluetooth Sensor

The Bluetooth sensor is an IO Gear GBU321 BT sensor. It is used in conjunction with the modular AP8132 device for providing a BT monitoring solution. To install, plug the BT sensor into the USB interface of the AP8132. The MAC address of the BT sensor is displayed in the LiveRF floor map next to the AP8132 device it is plugged into.

Bluetooth is natively supported in AP7602, AP7622, AP8532, AP8533 and AP8432 devices and these devices do not require the IO Gear GBU321 BT sensor.

Importing Bluetooth Devices

To import Bluetooth devices, go to Menu in the AirDefense UI, and then click on **Import and Discovery**. In the Job Type box, select Import Local File. Browse to the location of the CSV file. When the file name is displayed, click on **Open in New Window**. The CSV file is displayed.

- The format of the CSV file is similar to that of WLAN client/station, except that the security and performance policy fields are blank (represented as , separated columns.)
- When a Bluetooth device is detected by AirDefense, it is marked as Sanctioned or Unsanctioned depending on its classification in the CSV file.
- The Bluetooth monitoring support and alarms are enabled only when the WIPS license is assigned to the WLAN sensor on the AP8132 device.

Bluetooth License

You must have a WIPS license on the sensor device in order to access the Bluetooth feature.

AirDefense Dashboard

The Extreme AirDefense Dashboard provides a quick visual representation of your network. Network state and other information is displayed using widgets. You can select from a large array of useful widgets to customize the AirDefense Dashboard to display the network state information that you are interested in.


The Dashboard

The AirDefense Dashboard is designed to give you quick visualization of your network.



Note

You must have the latest version of Flash installed in order to view the Dashboard. If you do not, you will be prompted to install the latest Flash.

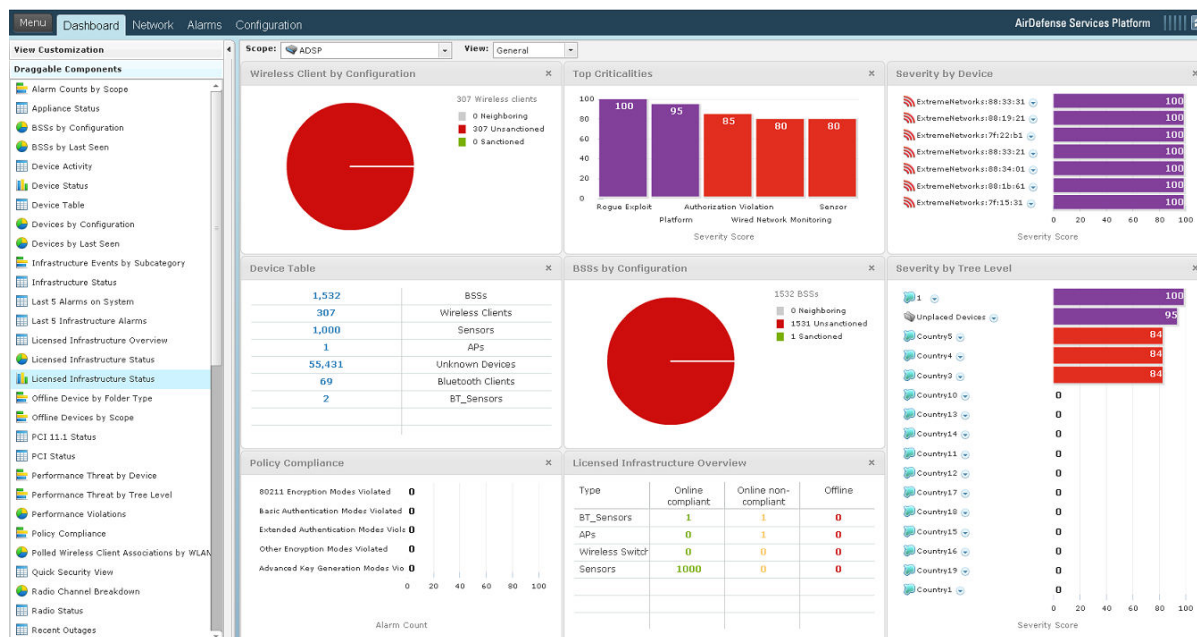

ADSP provides five default views involving the most important aspects of your network. Each view is fully customizable where you can add any one of the already defined dashboard components. The default views are:

- General - Displays general information about your network using some components of the other three views.
- Security - Displays security information about your network such as:
 - Rogue Wireless Access
 - Top Wireless Extrusions by Count
 - Top Wireless Exploits by Count
 - Policy Compliance
 - Security Threat by Tree Level
 - Security Threat by Device
 - Top Wireless Vulnerability by Count.
- Infrastructure - Displays infrastructure information such as:
 - Infrastructure Status
 - Last 5 Infrastructure Alarms
 - Device Breakdown by Model
 - Top Infrastructure Criticalities
 - Wireless Client Associations by WLAN
 - Radio Channel Breakdown.
- Performance - Displays performance information such as:
 - Performance Threat by Tree Level

- Performance Threat by Device.
- Network - Displays network information to give you a picture quick glance of your network utilizing the following components:
 - Devices by Configuration
 - Appliance Status
 - Wireless IPS Availability
 - BSSs by Last Seen
 - Wireless Clients by Last Seen.

In addition to the default views, there are three user views which are fully customizable. The user definable views are initially empty, allowing you to add any of the dashboard components to create a mixture important to you.

You can customize the custom views or the default views by selecting a view from the View drop-down menu, then dragging and dropping components located on the left side of the window.

Double-clicking on an individual component of any view accesses the related tab of that component. For example, if you double-click on APs of the Infrastructure Overview component, the Network tab is accessed displaying only APs.


See the [Dashboard Components](#) on page 435 topic for a description of all the available components.

You can hide dashboard components by clicking **Hide Dashboard Components** bar .

You can show (un-hide) dashboard components by clicking the **i** bar .

Selecting Dashboard Scope

The Scope field allows you to narrow or expand the scope of the Dashboard, as shown in the following example:

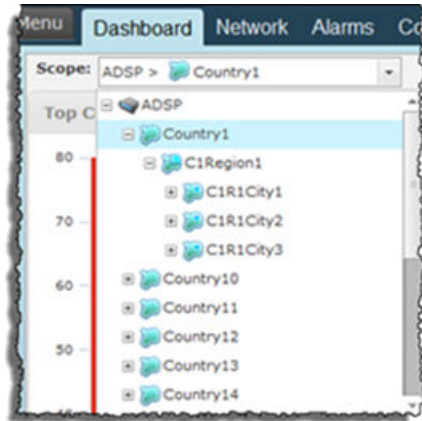

Scopes are defined as the following network levels:

- SystemDisplays information for your entire network (system). If you have a Central Management license, selecting System as the scope displays a combination of all appliances being managed.
- ADSPDisplays server information including all the network levels (Country, Region, City, Campus, Building, and Floor) as defined in the Configuration tab under Appliance Platform > Tree Setup.
- CountryDisplays information about a specific country including regions, cities, campuses, buildings, and floors.
- RegionDisplays information about a specific region including cities, campuses, buildings, and floors.
- CityDisplays information about a specific city including campuses, buildings, and floors.
- CampusDisplays information about a specific campus including buildings and floors.
- BuildingDisplays information about a specific campus including floors.
- FloorDisplays information about a specific floor.

Capabilities with a Central Management License


With a Central Management license, the Dashboard becomes a monitor of all appliances along with their associated devices. You can monitor your entire system at once or each individual appliance. Additionally, you may include information about other servers in your network. When you include other servers in your Dashboard, all scope information is included.

Customizing Dashboard Views

This topic discusses the options available to customize your AirDefense Dashboard.

View Customization

The Dashboard is displayed in a 2-by-2 defined area or a 3-by-3 defined area. To switch the defined display area, click the **View Customization** button. The following screen is displayed:

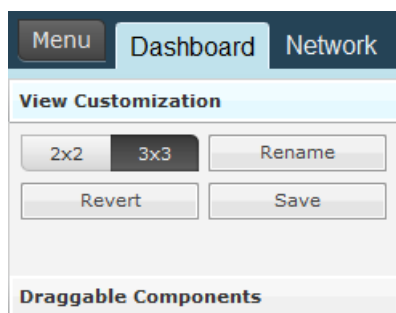

You can click on the **2x2** or **3x3** button. You can then change the name of a view by clicking the **Rename** button, typing in the new name, and then clicking **OK**.

Draggable Components

You may customize any of the existing views as well as the empty custom views. The components panel contains all of the components that can be viewed in the Dashboard. You may add components to the Dashboard by dragging and dropping a component onto the Dashboard. To customize the Dashboard, follow these instructions:

1. Select a view from the View drop-down menu. (Such as General.)
2. Click the **Draggable Components** bar to display the components if not already in view.
3. Click on a component while continuing to hold the mouse button down.
4. Drag the component to the Dashboard to the location where you want it.



Note

If you keep the component stationed in one spot without releasing the right mouse button, the component will expand to fill in an area. Also, after moving a component to the Dashboard, you can drag the mouse to expand the component or reduce the area the component is displayed.

5. Release the mouse button.



Note

If you decide you do not want to keep your changes, click the **Revert** button to return the view to its original state.

6. Click **Save** to save the customized view.

Dashboard Components

The following components are available to customize the different views of the Dashboard:

Component	Description
Alarm Counts by Scope	Displays a bar chart showing the network levels with the top 5 alarm counts.
Appliance Status	Displays the alarm status of the appliances on your network.
Bluetooth Clients	Displays Bluetooth clients (sanctioned, unsanctioned, and neighboring) seen on your network.
BT_Sensors	Displays Bluetooth sensors seen on your network.
BSSs by Configuration	Displays a pie chart of BSSs by configuration (sanctioned, unsanctioned, and neighboring). Also lists the total number of BSSs seen on your network.
BSSs by Last Seen	Displays a pie chart of the BSSs seen on your network over the last five days. Also lists the total number of BSSs as well as the totals for each day.
Device Activity	Displays the active/inactive state of Unknown Devices, Wireless, Clients, BSSs, and Bluetooth Devices seen on your network in tabular form.
Device Status	Displays the active/inactive state of Unknown Devices, Wireless, Clients, and BSSs, and Bluetooth Devices seen on your network in graphical form.
Device Table	Individually lists the total number of BSSs, Wireless Clients, Sensors, Unknown Devices, Bluetooth Clients, and BT_Sensors on your network.
Devices by Configuration	Displays a pie chart of devices by configuration (authorized, ignored, and unauthorized). Also lists the total number of devices seen on your network.
Devices by Last Seen	Displays a pie chart of the devices seen on your network over the last five days. Also lists the total number of devices as well as the totals for each day.
Infrastructure Events by Subcategory	Displays a bar chart showing infrastructure events by subcategory.
Infrastructure Overview	Displays a list of infrastructure devices in three columns (Online compliant, Online non-compliant, and Offline).
Infrastructure Status	Displays a list of infrastructure devices showing if they are online or offline, and the total number of each device type.
Last 5 Alarms on System	Displays a list of the last 5 alarms generated by ADSP.
Last 5 Infrastructure Alarms	Displays a list of the last 5 infrastructure alarms generated by ADSP.
Licensed Device Breakdown by Model	Displays a list of licensed devices on your network grouped by model.


Component	Description
Licensed Device Breakdown by Model	Displays a pie chart showing licensed devices on your network grouped by model.
Licensed Infrastructure Overview	Displays a list of infrastructure devices in three columns (Online compliant, Online non-compliant, and Offline).
Licensed Infrastructure Status	Displays a column chart showing the status of licensed infrastructure devices in your network.
Licensed Infrastructure Status	Displays a pie chart showing the status of licensed infrastructure devices in your network.
Offline Device by Folder Type	Displays a bar chart showing the offline devices and the folder type they reside in.
Offline Devices by Scope	Displays a bar chart showing the offline devices and the scope they reside in.
PCI 11.1 Status	Lists the compliance status of Rogue APs, Rogue Wireless Clients, and Accidental Associations as related to PCI Section 11.1. A green checkmark signifies you are in compliance. A red x signifies you are out of compliance.
PCI Status	Lists the compliance status of PCI Sections 2, 4, 11.1, and 11.4. A green checkmark signifies you are in compliance. A red x signifies you are out of compliance.
Performance Threat by Device	Displays a bar chart showing the threat score of the top devices violating your performance policy.
Performance Treat by Tree Level	Displays a bar chart showing the tree level threat score violations of your performance policy.
Performance Violations	Displays a pie chart showing the number of alarms generated by a performance violation. Also lists the overall alarm total as well as totals for individual alarms.
Policy Compliance	Displays a bar graph showing the alarm count for policy compliance.
Polled Wireless Client Associations by WLAN	Displays a pie chart showing polled Wireless Client associations by WLAN.
Quick Security View	Shows a quick view of possible security issues. A green checkmark indicates there are no issues. A red x indicates there is some type of issue.
Radio Channel Breakdown	Displays a pie chart showing configurable radios group by channel.
Radio Status	Displays the radio status by band (2.4 GHz and 5 GHz) and lists the online APs and Sensors. A count is displayed in the form of x of x.
Recent Outages	Lists devices with recent outages along with the associated appliance, start time of the outage, the type, and criticality.
Rogue AP Details	Shows BSSs and their associated scope per row. The table is sorted by alarm time with the device most recently detected on top of the table.

Component	Description
Rogue Wireless Access	Displays a bar chart showing the alarm count of rogue devices seen on your network.
Sanctioned Network	Displays a pie chart showing sanctioned devices on your network.
Security Alarm Counts by Scope	Displays the network levels with the top 5 alarm count using the following alarm types and sub-types: Anomalous Behavior, Exploits, Policy Compliance Violations, Reconnaissance, Rogue Exploit, Vulnerabilities.
Security Threat by Category	Displays a column chart showing the alarm count of security issues by category (Rogue Exploit, Vulnerability, Policy, and Extrusion).
Security Threat by Device	Displays a bar chart showing the threat score of the top devices violating your security policy.
Security Threat by Tree Level	Displays a bar chart showing the tree level threat score violations of your security policy.
Security View	Displays a bar chart showing the number of security alarms generated by ADSP.
Severity by Device	Displays a bar chart showing the severity scores of the top offending devices.
Severity by Tree Level	Displays a bar chart showing the severity scores of the top offending network levels.
Signal Strength Status	Displays a pie chart showing the number of clients and APs greater than or equal to -70dBm, and the number of clients and APs less than -70 dBm.
System Load	Displays a column chart reflecting system load. Charts include percentages for: • Sensor count • Managed network devices • Total device load • Active device load.
Termination Count by Scope	Displays a bar chart showing a total termination count by scope.
Termination Status	Displays a pie chart showing the number devices not on the termination list and number of devices on the termination list.
Top Criticalities	Displays a column chart showing top alarms observed by ADSP.
Top Infrastructure Alarms by Count	Displays a bar chart showing the top infrastructure alarms by count.
Top Infrastructure Criticalities	Displays a column chart showing the to infrastructure alarms observed by ADSP.
Top Performance Alarms by Count	Displays a bar chart showing the alarm count of the top performance policy violations.

Component	Description
Top Security Alarms by Count	Displays a bar chart showing the alarm count of the top security policy violations.
Top Talkers	Displays a bar chart showing the top 5 BSS and Wireless Client talkers on the network based on the combined value of sensed total TX and total RX bytes.
Top Wireless Exploits by Count	Displays a bar chart showing the alarm count for wireless exploits on your network.
Top Wireless Extrusions by Count	Displays a bar chart showing the alarm count for wireless extrusions on your network.
Top Wireless Vulnerability by Count	Displays a bar chart showing the alarm count for wireless vulnerability on your network.
Wireless Client by Configuration	Displays a pie chart of Wireless Clients by configuration (authorized, ignored, and unauthorized). Also lists the total number of Wireless Clients seen on your network.
Wireless Client by Last Seen	Displays a pie chart of the Wireless Clients seen on your network over the last five days. Also lists the total number of Wireless Clients as well as the totals for each day.
Wireless IPS Availability	Lists a count of online and offline Sensors on your network.

Network Tab

The Network tab displays a list of devices seen in your wireless network.

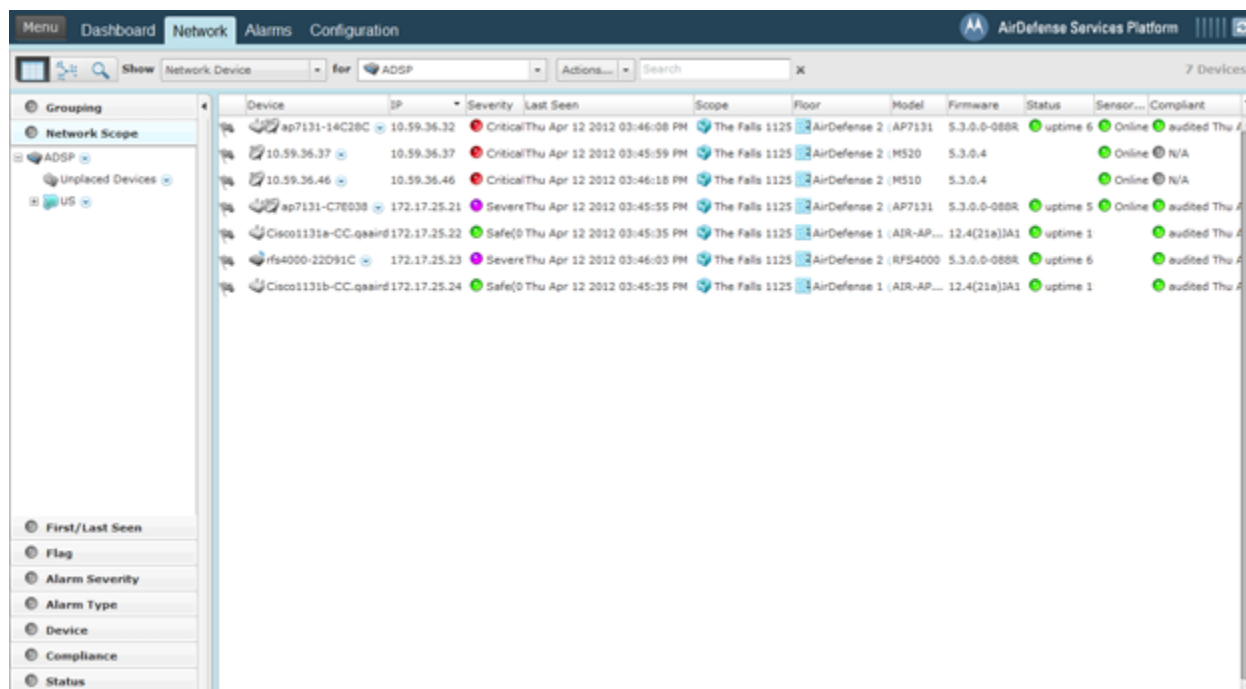

Also displayed is a total device count. You can narrow the scope by selecting an ADSP appliance, country, region, city, campus, building, or floor from the network tree or from the for menu. You can also filter device information using the Network Filter.

The information displayed depends on the type of device selected. You can sort device information according to information in a column by clicking the column header.

In a large list of devices, you can use the Search field to find a device or group of similar devices. Entering a string will reduce the list of devices to the ones that has information matching the string. Entering a device name will display the device matching the typed name.

You can hide (uncheck) or view (check) columns by clicking the drop-down button  located after the last column (Compliant.) The menu changes according to the selected device in the Show drop-down menu.

Select-Network View

Show Menu

Use the Show menu on the top menu bar to select the devices that you want to display in the Network tab.

Viewing the Network

You can choose to display the Network tab in a tabular or graphical view as follows:

In the tabular view, the following items are displayed in the Show menu:

- Network Devices (includes APs, Sensors, Wired Switches, Wireless Switches, WLSE devices, AirWave devices, and Managed Services Providers (MSPs).
- BSSs
- Wireless Clients
- Unknown Devices
- Bluetooth Devices

In the graphical view, the following items are displayed in the Show menu:

- Association Tree
- Network Graph.

You can select the different views by selecting the appropriate view button.



The first button selects the tabular view. The second button selects the graphical view. The last button is the Advanced Search button which is explained later.

Types of Devices

From the drop-down menu under Show, you can select a device. The choices are:

- Network Devices
- BSS

- Wireless Clients
- Unknown Devices
- Bluetooth.

Select for AirDefense system or a specific city, building, floor, etc.


Actions menu

From the drop-down menu under Actions on the top menu bar, you can select an action to apply to the selected device. The actions available vary by device, as explained in the following section, Network Devices.

You can hide the Network Filters by clicking Hide Network Filters bar . You can show (un-hide) the Network Filters by clicking the Show Network Filters bar .

Network Devices

The Network Devices view displays a list of access points (APs), sensors, wireless switches, and wired switches detected in the network. To view network devices, click the drop-down menu under **Show** and select **Network Devices**.

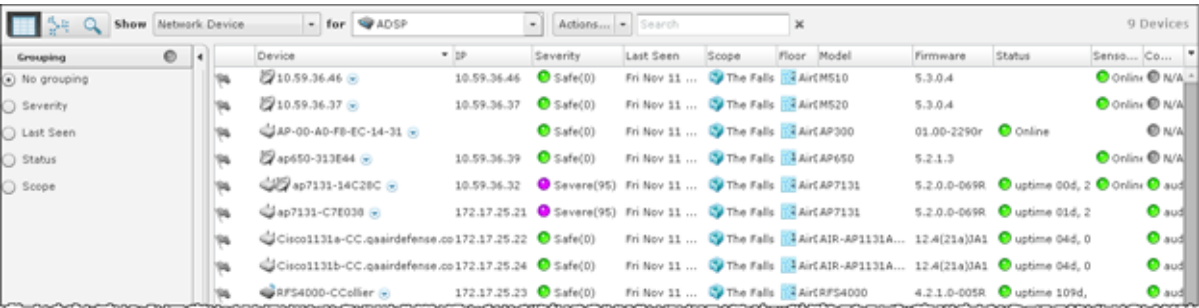


Network Devices are displayed in a tabular format. You can hide or show the Network Filters bar by clicking **Hide Network Filters** or **Show Network Filters**.

Column	Description
Flag	Indicates whether a Network Device has been flagged (blue flag ). (default header)
Device	Displays the Network Device icon and name. (default header)
Name	Displays the name of the Network Device.
MAC	Displays the MAC address of the Network Device.
IP	Displays the IP address of the Network Device. (default header)
Severity	Displays the threat level of the Network Device. (default header)
First Seen	Displays the date and time when the Network Device was first detected.

Column	Description
Last Seen	Displays the date and time when the Network Device was last detected.
Scope	Displays the network scope where the Network Device is located. (default header)
Floor	Displays the floor where the Network Device is located. (default header)
Manufacturer	Displays the manufacturer of the Network Device.
Model	Displays the model number of the Network Device. (default header)
Firmware	Displays the installed firmware version of the Network Device. (default header)
Status	Displays whether the Network Device is online or offline. (default header)
Sensor Status	Displays whether the associated sensor is online or offline. (default header)
Compliant	Indicates whether the Network Device complies with defined policies. (default header)
Last Configuration	Displays the date and time of the most recent configuration change.
Associated Clients	Displays the number of clients associated with the Network Device.
Adopted APs	Displays the number of access points adopted by the Network Device.

BSS

Click the drop-down menu under **Show** and click on **BSS**. AirDefense displays a list of all BSSs seen in your wireless network.

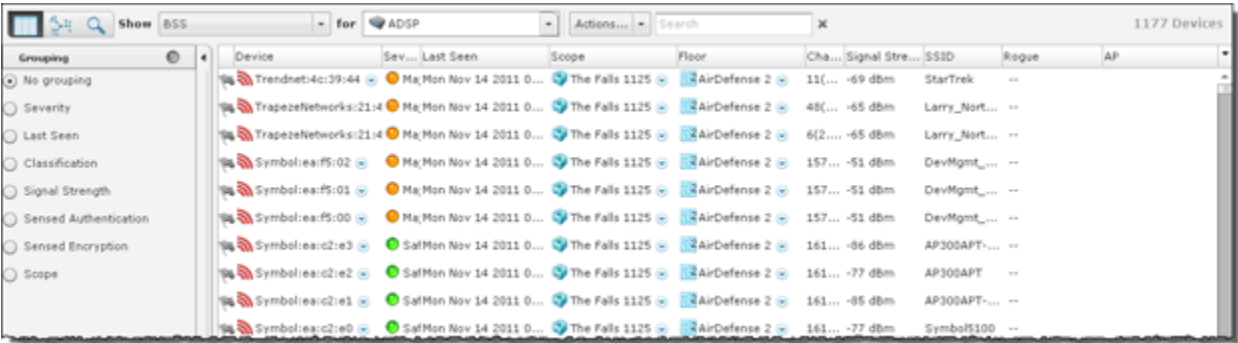

The list of BSSs are displayed in a tabular format using a combination of the following columns:

Column	Description
Flag	Indicates if a BSS has been flagged (blue flag ). (default header)
Device	Displays the BSS icon along with the vendors ID. (default header)
Name	Displays the name of the BSS.

Column	Description
MAC	Displays the BSS's MAC address.
IP	Displays the BSS's IP address.
Severity	Displays the BSS threat level to your network. (default header)
First Seen	Displays the first time the BSS was seen on the network.
Last Seen	Displays the last time the BSS was seen on the network. (default header)
Scope	Displays where the is located within the network scope. (default header)
Floor	Displays the floor the BSS is on. (default header)
Channel	Displays the communications channel the BSS is using. (default header)
Signal Strength	Displays the signal strength of the BSS. (default header)
SSID	Displays the Service Set Identifiers, a 32- character unique identifier attached to the header of packets sent over a WLAN that acts as a password when a Wireless Client tries to connect to the BSS. (default header)
Manufacturer	Displays the manufacturer of the device.
Classification	Displays how BSSs are classified.
Sensed Authentication	Displays the sensed method of authentication.
Sensed Encryption	Displays the sensed method of encryption.
Protocols	Displays the protocols being utilized by the BSS.
Rogue	Indicates if a BSS is a rogue (true or false). (default header)
Device Actions	Indicates a current live state. • AP Test  • Wireless Vulnerability Assessment  • Termination  • Dedicate Spectrum Analysis  • Inline Spectrum Analysis 
Sensor	Displays the name of the Sensor that sees the BSS.
AP	Displays the name of the . (default header)
Associated Clients	Displays the number of clients that have associated with the BSS.

Wireless Client

Click the drop-down menu under **Show** and click on **Wireless Client**. AirDefense displays a list of all Wireless Clients seen in your wireless network.

Device	Sev...	Last Seen	Scope	Floor	Cha...	Signal Stre...	SSID	Rogue	Associate...	AP
KJW476@motorola.cor	SalMan	Nov 14 2011 0...	The Falls 1125	AirDefense 2	165...	-73 dbm	M-Wireless	--		
xHUC78@motorolasolu	SalFri	Nov 11 2011 06:...	The Falls 1125	AirDefense 2	n/a	-64 dbm		--		
WTDQ84@motorola.co	SalFri	Nov 11 2011 04:...	The Falls 1125	AirDefense 1	n/a	-82 dbm		--		
WKH764@motorola.co	SalFri	Nov 11 2011 06:...	The Falls 1125	AirDefense 2	n/a	-59 dbm		--		
WistronNeweb:ee:6e:c	SalMan	Nov 14 2011 0...	ADSP	Unplaced Devices	n/a	n/a		--		
WistronNeweb:d9:30:1	SalMan	Nov 14 2011 0...	ADSP	Unplaced Devices	n/a	n/a		--		
WistronNeweb:83:b1:f	SalMan	Nov 14 2011 0...	ADSP	Unplaced Devices	n/a	n/a		--		
VXBK87@motorolasolu	SalFri	Nov 11 2011 03:...	The Falls 1125	AirDefense 2	n/a	-72 dbm		--		
VGT378@motorolasolu	SalMan	Nov 14 2011 0...	The Falls 1125	AirDefense 2	n/a	-57 dbm		--		
UbiquitiNetworks:84:c	SalFri	Nov 11 2011 03:...	The Falls 1125	AirDefense 2	n/a	-76 dbm		--		


A list of wireless clients is displayed in a tabular format using a combination of the following columns:

Column	Description
Flag	Indicates if a Wireless Client has been flagged (blue flag ). (default header)
Device	Displays the Wireless Client icon along with the vendors ID. (default header)
Name	Displays the name of the Wireless Client.
MAC	Displays the Wireless Clients MAC address.
IP	Displays the Wireless Clients IP address.
Severity	Displays the Wireless Client threat level to your network. (default header)
First Seen	Displays the first time the Wireless Client was seen on the network.
Last Seen	Displays the last time the Wireless Client was seen on the network. (default header)
Scope	Displays where the Wireless Client is located within the network scope. (default header)
Floor	Displays the floor the Wireless Client is on.
Channel	Displays the communications channel the Wireless Client is using. (default header)
Signal Strength	Displays the signal strength of the Wireless Client. (default header)
SSID	Displays the Service Set Identifiers, a 32- character unique identifier attached to the header of packets sent over a WLAN that acts as a password when a Wireless Client tries to connect to the Wireless Client. (default header)
Client Type	Displays the client type of the Wireless Client.
802.1x Name	Displays the 802.1x name of the Wireless Client.
Manufacturer	Displays the manufacturer of the device.
Classification	Displays how the Wireless Client is classified.

Column	Description
Sensed Authentication	Displays the sensed method of authentication.
Sensed Encryption	Displays the sensed method of encryption.
Polled Authentication	Displays the polled method of authentication.
Polled Encryption	Displays the polled method of encryption.
Protocols	Displays the protocols being utilized by the Wireless Client.
Rogue	Indicates if a Wireless Client is a rogue (true or false). (default header)
Device Actions	Indicates if any of the following actions have occurred: - AP Test  - Wireless Vulnerability Assessment  - Termination  - Dedicate Spectrum Analysis  - Inline Spectrum Analysis 
Associated BSS	Displays the BSS that the Wireless Client has associated with.
AP	Displays the name of the . (default header)
Sensor	Displays the name of the Sensor that sees the Wireless Client.

Unknown Devices

Click the drop-down menu under **Show** and click on **Unknown Devices**. AirDefense displays a list of all Unknown Devices seen in your network. Unknown devices are defined from the source or destination address detected in communication to or from a wireless device. AirDefense can identify the wireless device the frame is sent from or received by, but if the MAC address listed as the ultimate source or destination is not a device identified by AirDefense, it is considered 'unknown'. These are almost always infrastructure devices on the wired network.

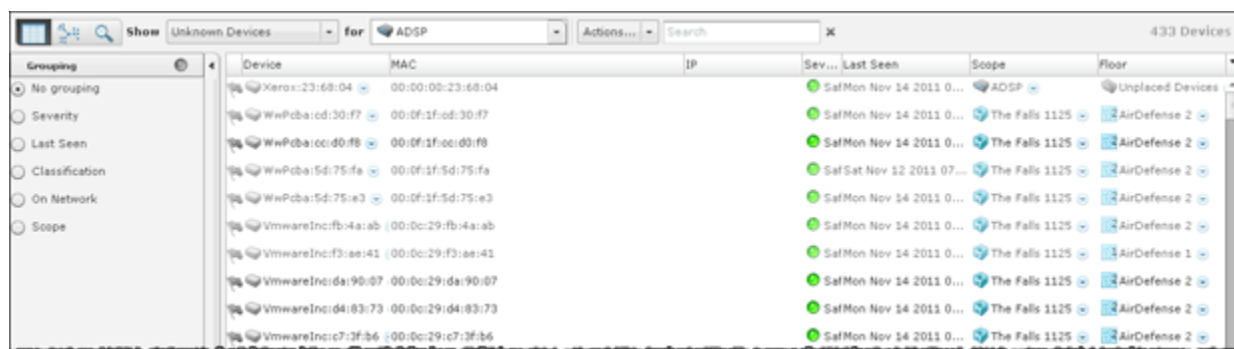

The list of Unknown Devices are displayed in a tabular format using a combination of the following columns:

Column	Description
Flag	Indicates if a Unknown Device has been flagged (blue flag ). (default header)
Device	Displays the Unknown Device icon along with the switch name. (default header)
Name	Displays the name of the Unknown Device.
MAC	Displays the Unknown Devices MAC address. (default header)
IP	Displays the Unknown Devices IP address. (default header)
Severity	Displays the Unknown Device threat level to your network. (default header)
First Seen	Displays the first time the Unknown Device was seen on the network.
Last Seen	Displays the last time the Unknown Device was seen on the network. (default header)
Scope	Displays where the Unknown Device is located within the network scope. (default header)
Floor	Displays the floor the Unknown Device is on. (default header)
Manufacturer	Displays the manufacturer of the device.

Column	Description
On Network	Identifies how AirDefense obtained the MAC address of a non-wireless device. The different entries are: • Sensor Segment The frame containing MAC address was detected by a sensor on its wired port. This device is therefore known to be on a LAN segment containing the sensor and is therefore on the same wired infrastructure. • Switch This MAC address was obtained from a data poll of the tables of a wireless switch. At some time, a know wireless device communicated with this unknown device. The unknown device is on the infrastructure somewhere, but the LAN segment is unknown. • Blank This MAC address was detected by a sensor radio and the wireless device communicating with this MAC is not sanctioned in AirDefense. This is most likely a device on a neighboring network and not part of the AirDefense protected infrastructure. • Sanctioned BSS This MAC address has been seen by a sensor in communication with a Sanctioned BSS and is likely to be a device on the AirDefense protected infrastructure, but has not been reported to AirDefense as being on the wired network by poll or discovery.
Classification	Displays how the Unknown Device is classified.

Bluetooth Devices

Click the drop-down menu under **Show** and click on **Bluetooth**. AirDefense displays a list of all Bluetooth devices seen in your wireless network.

Device	Type	Severity	Last Seen	Scope	Floor	Signal Strength
00:0c:10:01:02:01:01	Computer	Critical(83)	Thu May 15 2014 06:53:21 PM	C1R1C2C3Area2	C1R1C2C3A2Floor_1	-84 dBm
00:0c:10:02:02:01:01	Computer	Critical(83)	Thu May 15 2014 06:53:21 PM	C1R1C2C3Area2	C1R1C2C3A2Floor_1	-86 dBm
00:0c:10:07:02:01:01	Computer	Critical(83)	Thu May 15 2014 06:53:21 PM	C1R1C2C3Area2	C1R1C2C3A2Floor_1	-68 dBm
00:0c:10:08:02:01:01	Computer	Critical(83)	Thu May 15 2014 06:53:21 PM	C1R1C2C3Area2	C1R1C2C3A2Floor_1	-91 dBm
00:0c:10:01:02:03:03	Computer	Critical(83)	Thu May 15 2014 06:52:43 PM	C1R1C2C4Area2	C1R1C2C4A2Floor_1	-33 dBm
00:0c:10:02:02:03:03	Computer	Critical(83)	Thu May 15 2014 06:52:43 PM	C1R1C2C4Area2	C1R1C2C4A2Floor_1	-48 dBm
00:0c:10:07:02:03:03	Computer	Critical(83)	Thu May 15 2014 06:52:43 PM	C1R1C2C4Area2	C1R1C2C4A2Floor_1	-77 dBm
00:0c:10:08:02:03:03	Computer	Critical(83)	Thu May 15 2014 06:52:43 PM	C1R1C2C4Area2	C1R1C2C4A2Floor_1	-40 dBm
00:0c:10:01:02:01:10	Computer	Critical(83)	Thu May 15 2014 06:53:23 PM	C1R1C2C3Area2	C1R1C2C3A2Floor_1	-98 dBm
00:0c:10:02:02:01:10	Computer	Critical(83)	Thu May 15 2014 06:53:23 PM	C1R1C2C3Area2	C1R1C2C3A2Floor_1	-9 dBm

The list of Bluetooth devices are displayed in a tabular format using a combination of the following columns:

Column	Description
Device	Contains the MAC address. Click on the down-arrow to display the MAC address, appliance, when last seen, and signal strength.
Type	Displays the type of Bluetooth device (such as computer.)
Severity	Displays the threat level to your network. Green indicates a sanctioned device. Red indicates an unsanctioned device. (default header)
Last Seen	Displays the last time the Bluetooth device was seen on the network. (default header)
Scope	Displays the area where the Bluetooth device is located within the network scope. (default header)
Floor	Displays the floor where the Bluetooth device is located. (default header)
Signal Strength	Displays the signal strength of the Bluetooth device in dBm. (default header)

Menu Network Support



Note


Live View is not supported on Menu Networks.

Menu Networks only display virtual MAC addresses in the Network tab. To display the true MAC addresses, contact Customer Support and have them enable Menu Network support on your appliance. When enabled, the true MAC addresses are displayed in the Network tab.

Association Tree

The Association Tree displays your network from the top down starting at the appliance going all the way down to the associated Wireless Clients. Clicking the **Network Graph**

icon  gives you access to the Association Tree via the Show drop-down menu. Select Association Tree from the menu to display the association tree for your network.

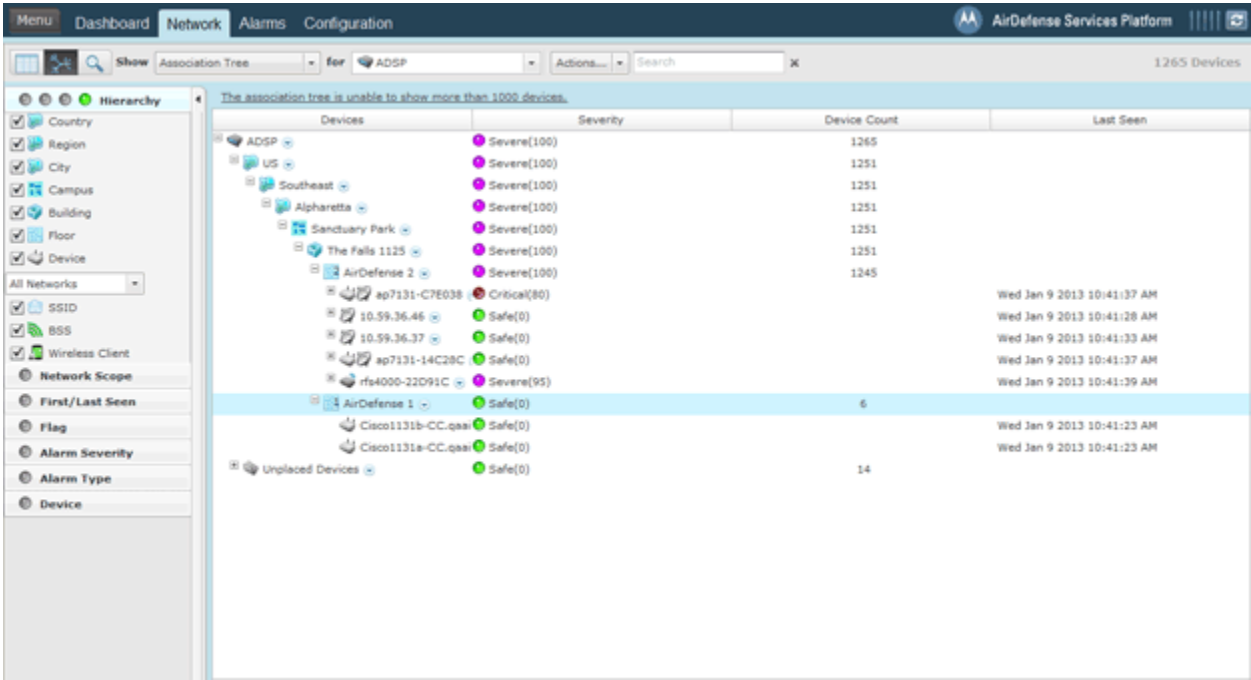


Click the **Expand**  button to open a branch of the tree. Click the **Close**  button to close a branch of the tree. The table columns for the Association Tree are:


Column	Description
Devices	Displays the name of the devices on your network.
Severity	Displays the threat level to your network for a floor and all the devices on that floor.
Device Count	Displays the number of devices on a tree level.
Last Seen	Displays the last time a device was seen on the network.

Network Graph

The Network Graph displays your network in a graphical view. Clicking the **Network**  gives you access to the Network Graph via the Show drop-down menu and displays a Network Graph of managed devices seen in your network. There is a Concentric view (default) and a Hierarchical view.

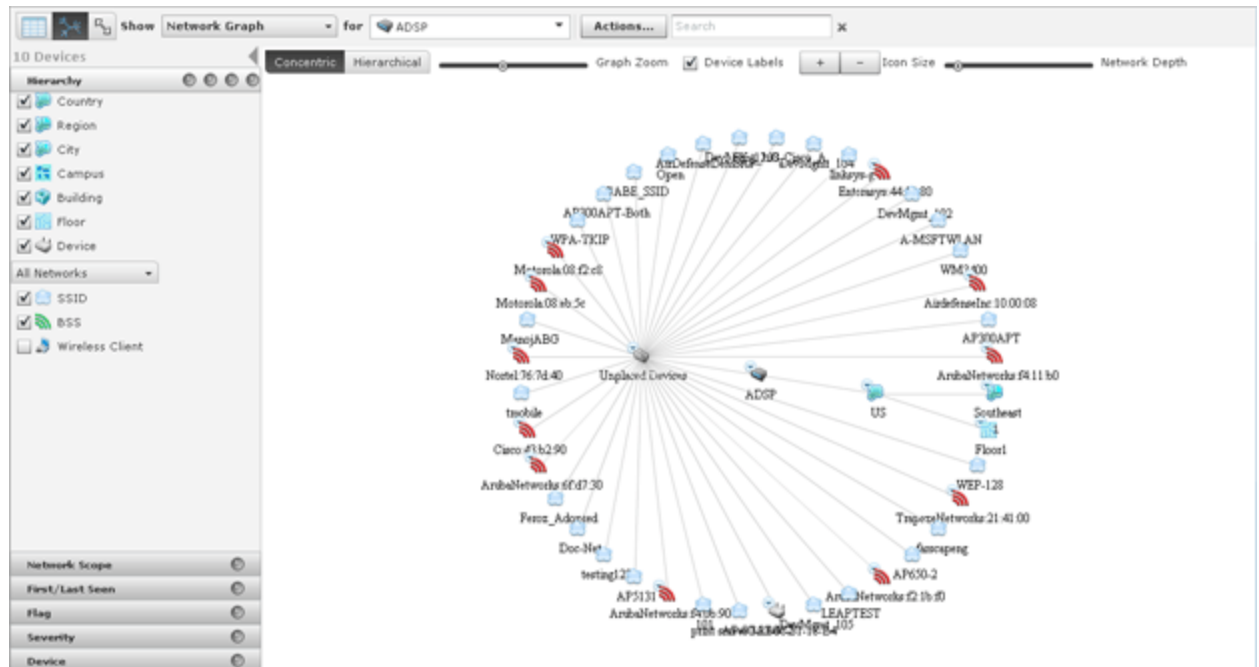


To switch to the Hierarchical view, click the **Hierarchical** button.

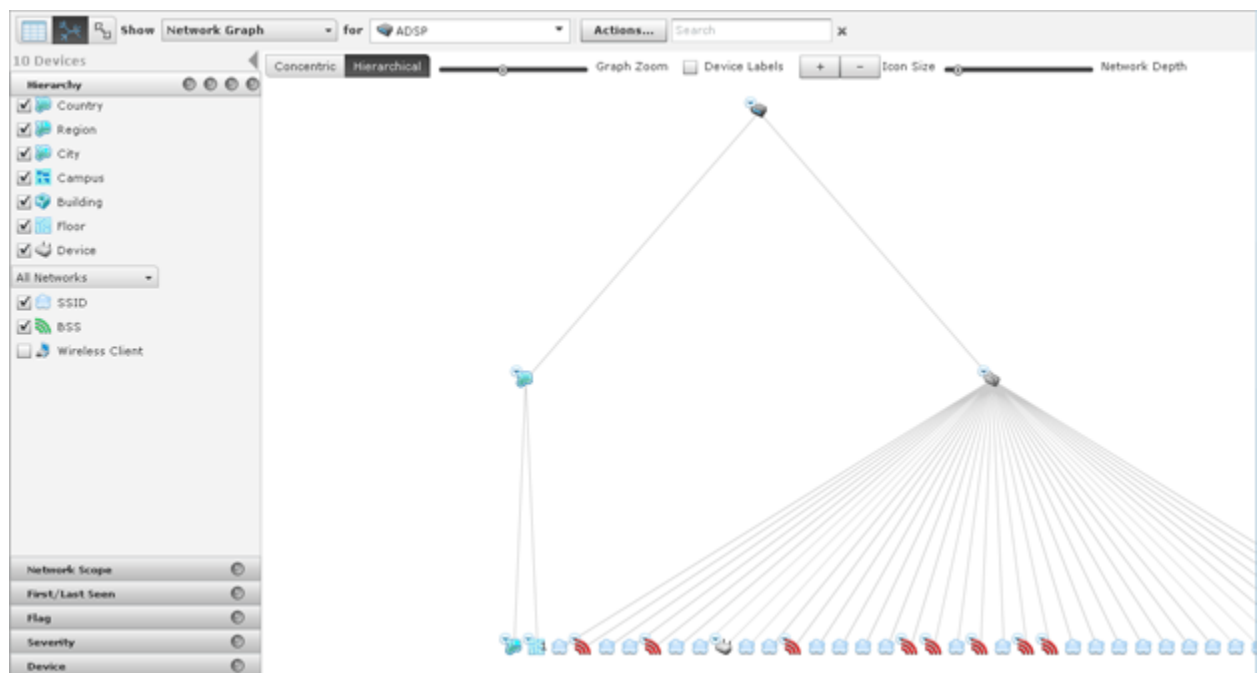


Click **Concentric** to return to the **Concentric** view. You can manipulate the graph by using:

- **Graph Zoom** to zoom the graph in and out.
- **Device Labels** to remove or display the device labels.
- **Icon Size** to increase or decrease the size of the icons.
- **Network Depth** to see more devices or less devices in your network.

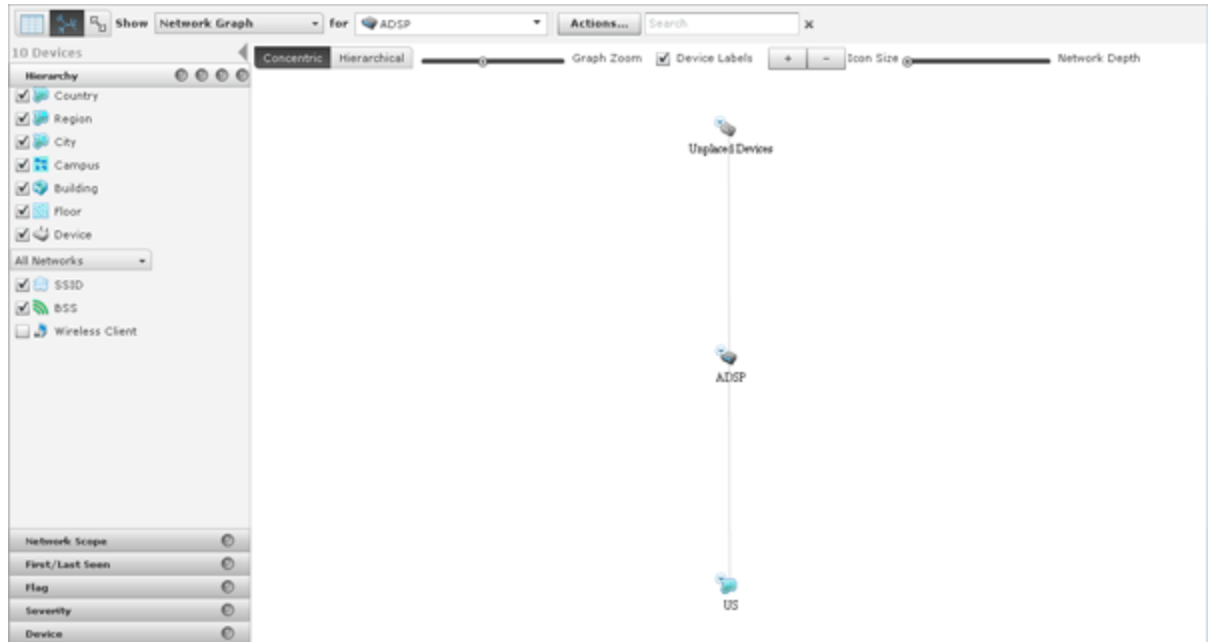

Network Filters

Network filters are provided to filter the displayed network information. They are displayed on the left side of the Network tab.

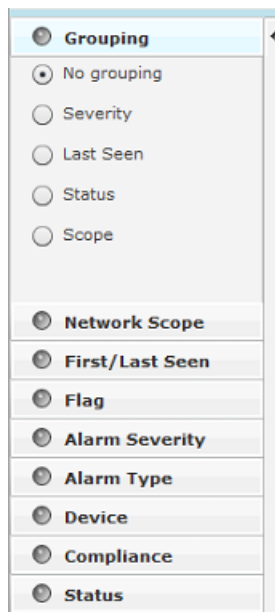

The different filters are:

- **Grouping** - you can view devices by grouping them using similar criteria.
- **Network Scope** - you can view devices according to where they are in the network tree.
- **First/Last Seen Filter** - filters devices according to when they were first seen and/or last seen on your network.


- **Flag** - you can optionally view all flagged devices.
- **Alarm Severity** - you can view devices by alarm criticality.
- **Alarm Type** - filters devices by alarm type.
- **Device** - filters devices by model, manufacturer, and/or capabilities.
- **Compliance** - displays devices according to state of compliance with network policies.
- **Status** - displays devices according to their uptime/offline status.
- **Signal Strength** - filters devices within a specific signal strength range.
- **Security-Sensed Filter** - displays devices using a combination of the sensed method of authentication and/or the sensed method of encryption.
- **Security-Polled Filter** - devices using a combination of the polled method of authentication and/or the polled method of encryption.

The filters are initially set to display the maximum amount of devices. You can adjust any filter or combination of filters to fine tune the display of devices. This allows you to display only the devices that you want to view.

The indicator on the right of each filter turns green  when you change a filter from its original state. Click the green indicator to return a filter to its default state.

Grouping Filter

The Grouping filter allows you to view devices by grouping them using similar criteria. The views vary depending on the type of devices being displayed.

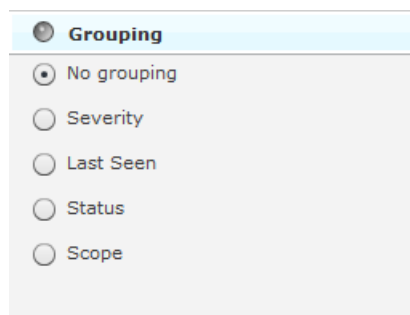

The following views are available:

- **No Grouping** - Displays all devices without grouping. This view is accessible when displaying any type of device.
- **Severity** - Groups devices into the different threat levels to your network. Threat levels that are not sensed are not shown. This view is accessible when displaying any type of device.



- **Last Seen** - Groups devices by a time frame when the devices were last seen on your network. This view is accessible when displaying any type of device.




- **Classification** - Groups devices by how they are classified. This view is accessible when displaying BSSs, Wireless Clients, or Unknown Devices.



- **Signal Strength** - Groups devices in a range of signal strengths. This view is accessible when displaying BSSs or Wireless Clients.



- **Sensed Authentication** - Groups devices based on their sensed method of authentication. This view is accessible when displaying BSSs or Wireless Clients.

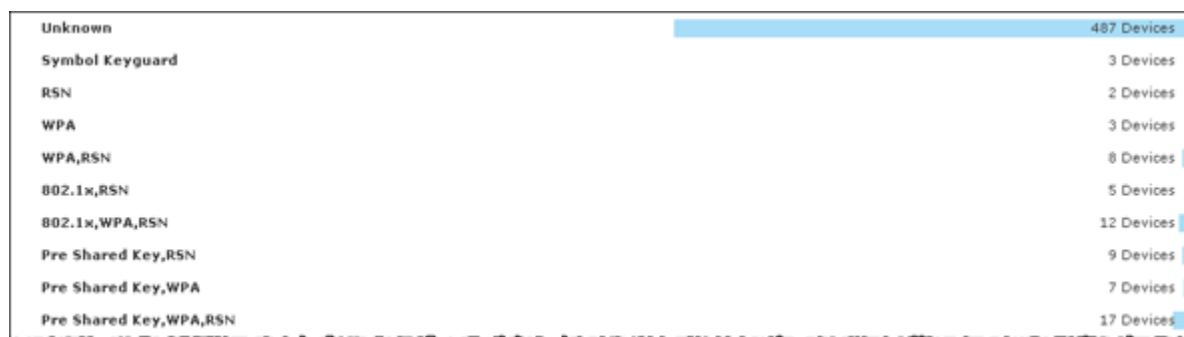

- **Sensed Encryption** - Groups devices based on their sensed method of encryption. This view is accessible when displaying BSSs or Wireless Clients.



- **Polled Authentication** - Groups devices based on their polled method of authentication. This view is accessible only when displaying Wireless Clients.



- **Polled Encryption** - Groups devices based on their polled method of encryption. This view is accessible only when displaying Wireless Clients.



- **Client Type** - Groups devices based on their client type. This view is accessible only when displaying Wireless Clients.



 
- **On Network** - Groups devices based whether they are on the network or not. This view is accessible only when displaying Unknown Devices.



- **Status** - Groups devices based on their online/offline status. This view is accessible when displaying Network Devices.




- **Scope** - Groups devices based on where they are in the network. The highest network level under the appliance level is displayed as the group. This view is accessible when displaying any type of device.



Clicking on a group will display the devices in that group.

Network Scope Filter


The **Network Scope** filter is used to view alarms according to where they are in the network tree. By selecting a network level, you limit the displayed alarms to only the ones under that particular network level.

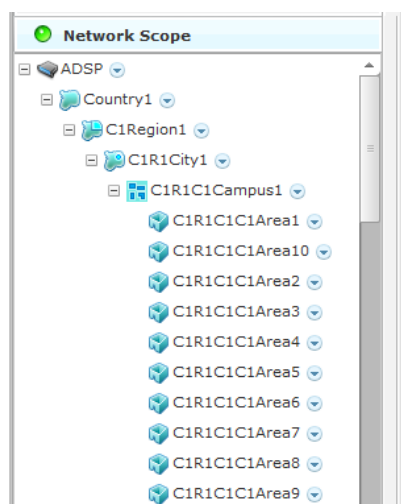

If the appliance level is selected, all the alarms for that appliance are displayed. If a floor level is selected, only the alarms on that floor are displayed.

First Last Seen Filter

The **First/Last Seen** filter allows you to filter devices according to when they were first seen and/or last seen on your network.

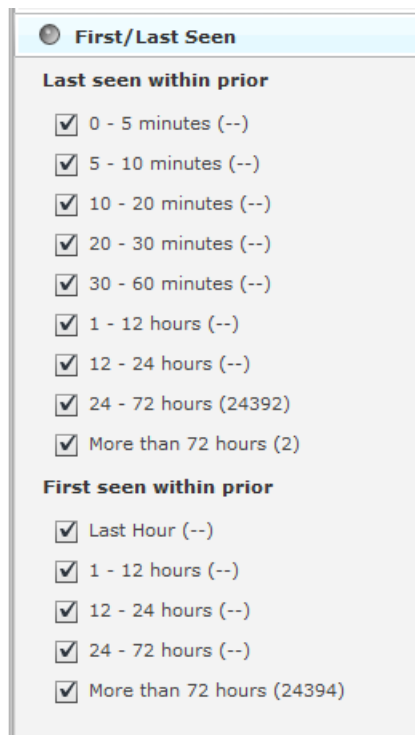

The screenshot shows a configuration window titled "First/Last Seen". It contains two sections: "Last seen within prior" and "First seen within prior". Each section has a list of time intervals with checkboxes. In the "Last seen" section, all checkboxes are checked. In the "First seen" section, the "Last Hour" checkbox is checked, while the others are unchecked.

Section	Filter Option	Count	Selected
Last seen within prior	0 - 5 minutes	--	Yes
	5 - 10 minutes	--	Yes
	10 - 20 minutes	--	Yes
	20 - 30 minutes	--	Yes
	30 - 60 minutes	--	Yes
	1 - 12 hours	--	Yes
	12 - 24 hours	--	Yes
	24 - 72 hours	24392	Yes
	More than 72 hours	2	Yes
First seen within prior	Last Hour	--	Yes
	1 - 12 hours	--	No
	12 - 24 hours	--	No
	24 - 72 hours	--	No
	More than 72 hours	24394	No

The last seen times may be:

- Any time period
- 0 - 5 minutes
- 5 - 10 minutes
- 10 - 20 minutes
- 20 - 30 minutes
- 30 - 60 minutes
- 1 - 12 hours
- 12 - 24 hours
- 24 - 72 hours
- More than 72 hours.

 
The first seen times may be:

- Any time period
- 1 - 12 hours
- 12 - 24 hours
- 24 - 72 hours
- More than 72 hours.

For example, if 30 – 60 minutes is selected as the last seen time and no other times are selected (first/last seen), only devices that were last seen within 30 to 60 minutes are displayed.

Flag Filter


The Flag filter gives you the option of viewing all devices or only flagged devices.



To select an option, click All or the blue flag .

Alarm Severity Filter

The **Alarm Severity** filter allows you to view devices by alarm severity.

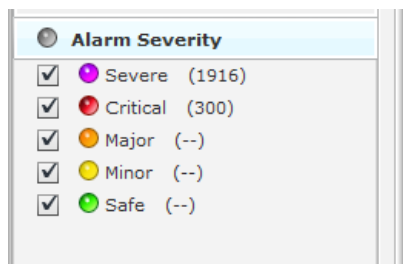


The severities are:

- Severe -  - Displays only Severe alarms.
- Critical -  - Displays Critical and Severe alarms.
- Major -  - Displays Major, Critical, and Severe alarms.
- Minor -  - Displays Major, Critical, and Severe alarms.
- Safe -  - Displays alarms of all criticalities.

You can select the alarms that you want to view by checking the checkbox.

Alarm Type Filter


The Alarm Type filter allows you to view devices by alarm type. Devices are grouped together according to their alarm threat to your network.

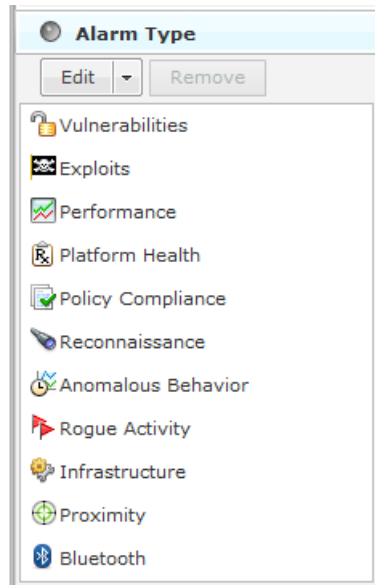


You have the option of displaying all alarm types or filtering alarms by a specific type. The different alarm types are:

- Vulnerabilities
- Exploits
- Performance
- Platform Health
- Policy Compliance
- Reconnaissance
- Anomalous Behavior
- Rogue Activity
- Infrastructure
- Proximity
- Bluetooth.

Click the Edit button to select the alarm types that you want to display.

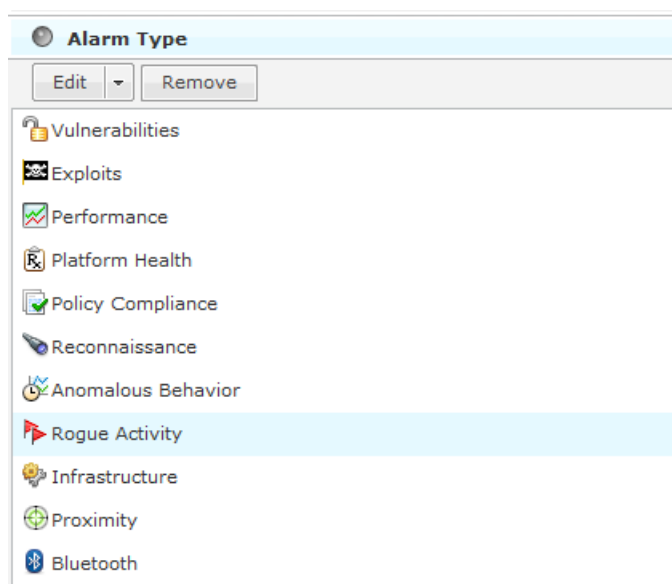


Click Edit, select the alarm type(s), and then click OK. The following graphic shows that you only want to display rogue alarms.

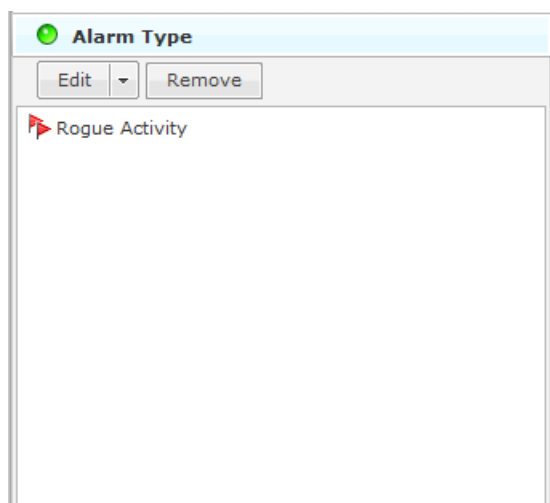

To remove an alarm type, select (highlight) the alarm type and click Remove.

Classification Filter

The Classification filter is used to filter devices by their device classification.

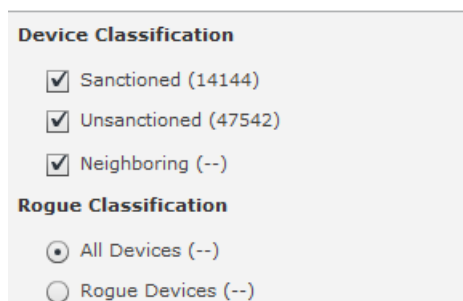

Devices are displayed by the following classifications:

- SanctionedDisplay sanctioned devices.
- UnsanctionedDisplay unsanctioned devices.
- NeighboringDisplay neighboring devices.

Select the checkbox(es) for the classification(s) that you want to display. You can also display devices by rogue classification. You options are to display all devices or to display only rogue devices. Select the appropriate radio button.

**Note**

The Classification filter is not available when displaying Network Devices. It is available for BSS, Wireless Client and Unknown Devices.

On Network Filter

The On Network filter is used to display devices that are on your network and/or devices that have been seen by a sensor but not confirmed to be on your network. This filter is only available when displaying Unknown Devices.

Check the check-box to display either or both conditions.

**Note**

The On Network filter is only available when displaying network devices.

Device Filter

The Device filter is used to filter devices by model, manufacturer, and/or capabilities. The filter changes depending on the types of devices being displayed.

Network Devices


For network devices, you can filter devices based on the model type. Select a model from the Model drop-down menu

You can also filter network devices based on the capability of the device. When you select a capability, only devices with that capability are displayed. For network devices, you may select:

- Access Point
- BT_Sensors
- Wireless Switch
- Sensor
- Wired Switch
- Network Manager.

Wireless Clients

For wireless clients, you can filter devices based on the manufacturer. Select the manufacturer from the drop-down menu. You may also type in the manufacturer's name, including a partial name.

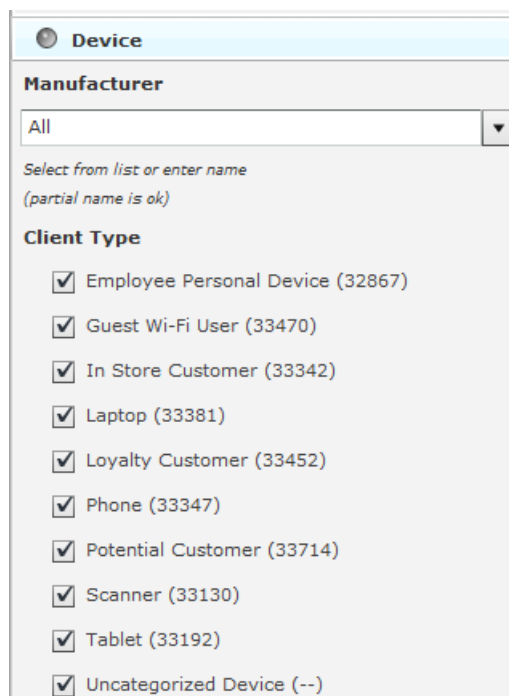

The screenshot shows a web interface for filtering devices. At the top, there is a tab labeled "Device". Below it, the "Manufacturer" section features a dropdown menu currently set to "All". A text prompt below the dropdown reads "Select from list or enter name (partial name is ok)". The "Client Type" section below contains a list of device categories, each with a checked checkbox and a count in parentheses:

- ☒ Employee Personal Device (32867)
- ☒ Guest Wi-Fi User (33470)
- ☒ In Store Customer (33342)
- ☒ Laptop (33381)
- ☒ Loyalty Customer (33452)
- ☒ Phone (33347)
- ☒ Potential Customer (33714)
- ☒ Scanner (33130)
- ☒ Tablet (33192)
- ☒ Uncategorized Device (--)

You can also filter Wireless Clients based on the client type. When you select a client type, only devices of that type are displayed. You may select from the following client types:

- Employee Personal Device
- Guest Wi-Fi User
- In-Store Customer
- Laptop
- Loyalty Customer
- Phone

- Potential Customer
- Scanner
- Tablet
- Uncategorized Device

BSSs and Unknown Devices

For BSSs and Unknown Devices, you can filter devices based on the manufacturer but not on client type or capabilities. Select the manufacturer from the drop-down menu. You may also type in the manufacturer's name, including a partial name.

Device

Manufacturer

All

Select from list or enter name
(partial name is ok)

Bluetooth Devices

Click the drop-down menu under **Show** and click on **Bluetooth**. AirDefense displays a list of all Bluetooth devices seen in your wireless network.

AirDefense Services Platform							
Menu Dashboard Network Alarms Configuration							
Show Bluetooth for ADSP Actions... Search -4000							
Grouping	Device	Type	Severity	Last Seen	Scope	Floor	Signal Strength
No grouping	00:c1:01:02:01:01	Computer	Critical(83)	Thu May 15 2014 06:53:21 PM	C1R1C2C3Area2	C1R1C2C3A2Floor_1	-84 dBm
Severity	00:c1:02:02:01:01	Computer	Critical(83)	Thu May 15 2014 06:53:21 PM	C1R1C2C3Area2	C1R1C2C3A2Floor_1	-86 dBm
Last Seen	00:c1:07:02:01:01	Computer	Critical(83)	Thu May 15 2014 06:53:21 PM	C1R1C2C3Area2	C1R1C2C3A2Floor_1	-68 dBm
Scope	00:c1:08:02:01:01	Computer	Critical(83)	Thu May 15 2014 06:53:21 PM	C1R1C2C3Area2	C1R1C2C3A2Floor_1	-91 dBm
Network Scope	00:c1:01:02:03:03	Computer	Critical(83)	Thu May 15 2014 06:52:43 PM	C1R1C2C4Area2	C1R1C2C4A2Floor_1	-33 dBm
First/Last Seen	00:c1:02:02:03:03	Computer	Critical(83)	Thu May 15 2014 06:52:43 PM	C1R1C2C4Area2	C1R1C2C4A2Floor_1	-48 dBm
Alarm Severity	00:c1:07:02:03:03	Computer	Critical(83)	Thu May 15 2014 06:52:43 PM	C1R1C2C4Area2	C1R1C2C4A2Floor_1	-77 dBm
Alarm Type	00:c1:08:02:03:03	Computer	Critical(83)	Thu May 15 2014 06:52:43 PM	C1R1C2C4Area2	C1R1C2C4A2Floor_1	-40 dBm
	00:c1:01:02:01:10	Computer	Critical(83)	Thu May 15 2014 06:53:23 PM	C1R1C2C3Area2	C1R1C2C3A2Floor_1	-98 dBm
	00:c1:02:02:01:10	Computer	Critical(83)	Thu May 15 2014 06:53:23 PM	C1R1C2C3Area2	C1R1C2C3A2Floor_1	-9 dBm


The list of Bluetooth devices are displayed in a tabular format using a combination of the following columns:

Column	Description
Device	Contains the MAC address. Click on the down-arrow to display the MAC address, appliance, when last seen, and signal strength.
Type	Displays the type of Bluetooth device (such as computer.)
Severity	Displays the threat level to your network. Green indicates a sanctioned device. Red indicates an unsanctioned device. (default header)
Last Seen	Displays the last time the Bluetooth device was seen on the network. (default header)

Column	Description
Scope	Displays the area where the Bluetooth device is located within the network scope. (default header)
Floor	Displays the floor where the Bluetooth device is located. (default header)
Signal Strength	Displays the signal strength of the Bluetooth device in dBm. (default header)

Compliance Filter

The Compliance filter is used to display devices according to their state of compliance with your network policies. This filter is only available when displaying Network Devices

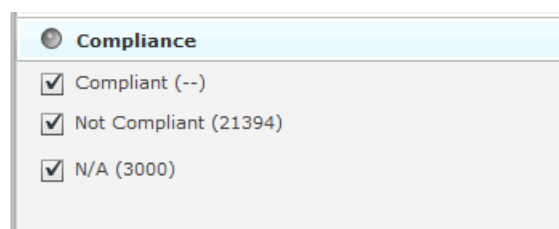


.Devices are displayed if you have their compliance state checked. The different states are:

- Compliant - Displays devices that are compliant.
- Not Compliant - Displays devices that are not compliant.
- Unlicensed - Displays devices that do not have the required license.

Status Filter

The Status filter is used to display devices according to their uptime/off-line status. This filter is only available when displaying Network Devices.

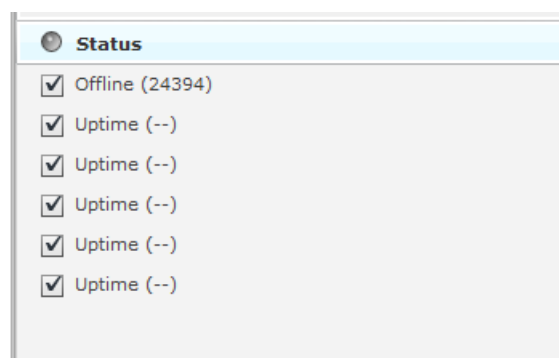

You may select one or more of the following statuses:

- OfflineDisplays any offline devices.
- Uptime (0 - 1 hours)Displays devices that have been online from 0 to 1 hour.




Note

Devices that do not track uptime are shown in this time slot.

- Uptime (1 - 12 hour) Displays devices that have been online from 1 to 12 hours.
- Uptime (12 - 24 hours) Displays devices that have been online from 12 to 24 hours.
- Uptime (24 - 72 hours) Displays devices that have been online from 24 to 72 hours.
- Uptime (More than 72 hours) Displays devices that have been online longer than 72 hours.

Signal Strength Filter

The Signal Strength filter is used to filter devices within a specific signal strength range. This filter is only available when displaying BSSs and Wireless Clients.

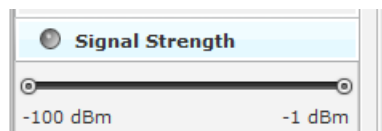

You may adjust the signal strength range by sliding the adjusters. The maximum range is -100 dBm to -1 dBm. Sliding the left slider adjusts the minimum signal strength. Sliding the right slider adjusts the maximum signal strength.

Security-Sensed Filter

The Security-Sensed filter is used to display devices using a combination of the sensed method of authentication and/or the sensed method of encryption. This filter is only available when displaying BSSs and Wireless Clients. The security-sensed filter has two fields: authentication and encryption.

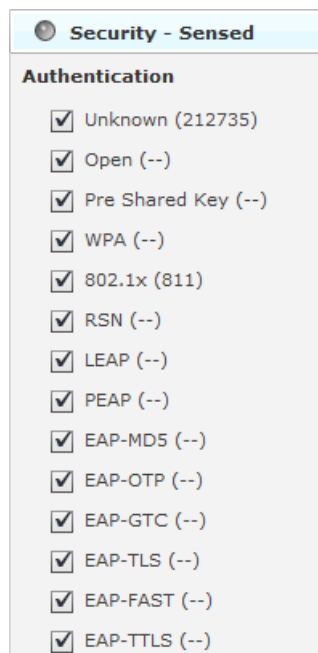


Figure 122: Authentication

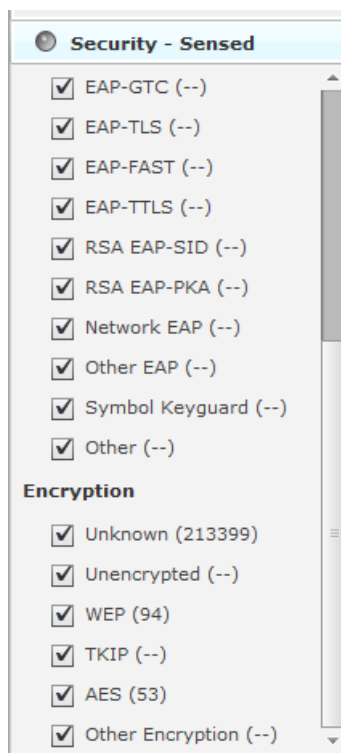


Figure 123: Encryption

You may select any combination of authentication methods and/or encryption methods. The available authentication methods are:


- Unknown
- Open
- Pre-Share Key
- WPA
- 802.1x
- RSN
- LEAP
- PEAP
- EAP-MD5
- EAP-OTP
- EAP-GTC
- EAP-TLS
- EAP-FAST
- EAP-TTLS
- RSA EAP-SIP
- RAS EAP-PKA
- Network EAP
- Symbol Keyguard
- Other.

The available encryption methods are:

- Unknown
- Unencrypted
- WEP
- TKIP
- AES(CCMP)
- Other Encryption.

Security-Polled Filter

The Security-Polled filter is used to display devices using a combination of the polled method of authentication and/or the polled method of encryption. This filter is only available when displaying wireless clients.

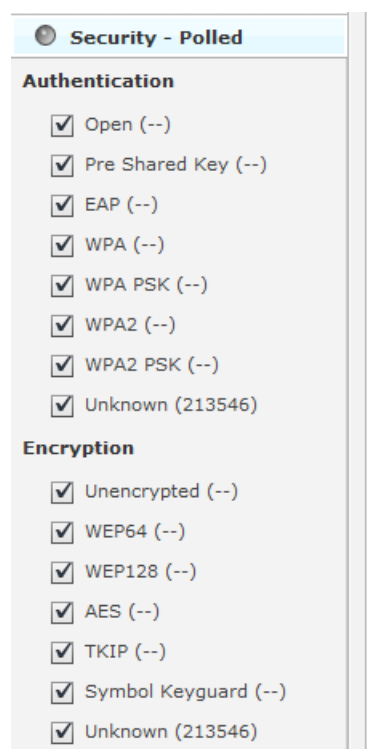

Security - Polled

Authentication

- ☒ Open (--)
- ☒ Pre Shared Key (--)
- ☒ EAP (--)
- ☒ WPA (--)
- ☒ WPA PSK (--)
- ☒ WPA2 (--)
- ☒ WPA2 PSK (--)
- ☒ Unknown (213546)

Encryption

- ☒ Unencrypted (--)
- ☒ WEP64 (--)
- ☒ WEP128 (--)
- ☒ AES (--)
- ☒ TKIP (--)
- ☒ Symbol Keyguard (--)
- ☒ Unknown (213546)

You may select any combination of authentication methods and/or encryption methods. The available authentication methods are:

- Open
- Pre-Share Key
- EAP
- WPA
- WPA PSK
- WPA2
- WPA2 PSK
- Unknown.


The available encryption methods are:

- Unencrypted
- WEP64
- WEP128
- AES(CCMP)
- TKIP
- Symbol Keyguard
- WPA2 PSK.


Actions Menu

The Network tab includes an Actions menu where you can execute an action. Depending on the device type, clicking the **Actions** button displays one of the following menus:



Network Device Actions

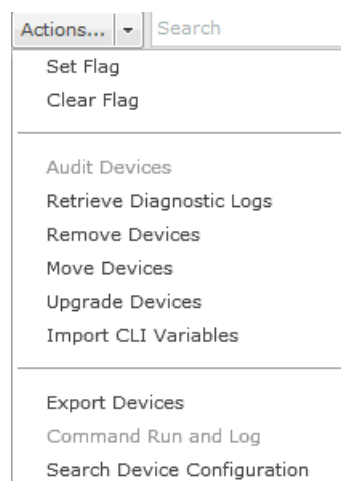


BSS Actions

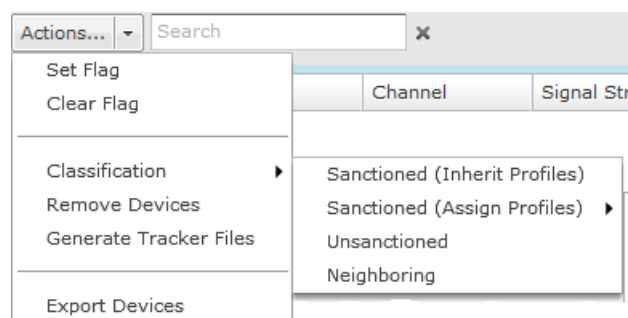


Wireless Client Actions

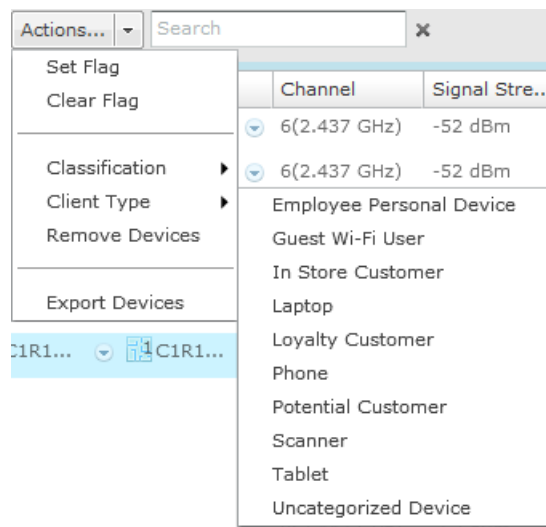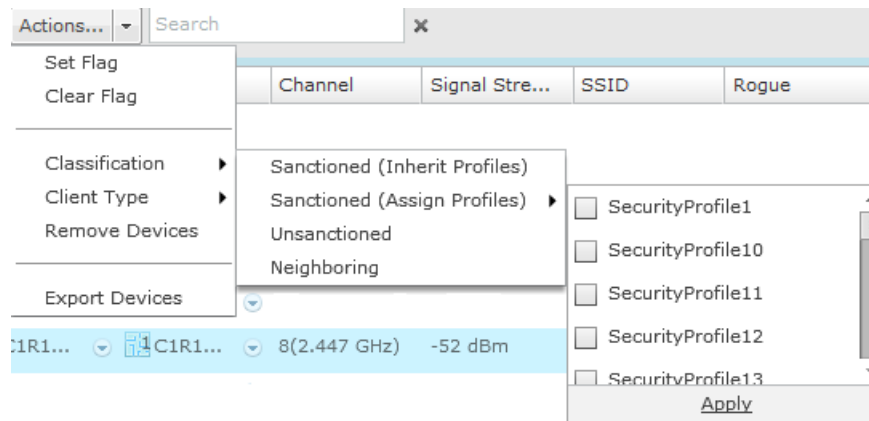

Unknown Devices Actions

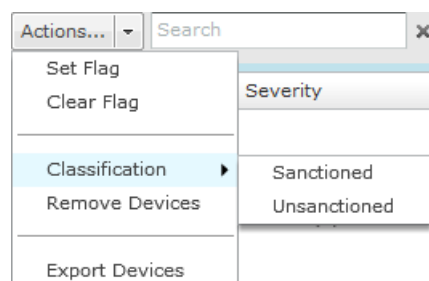

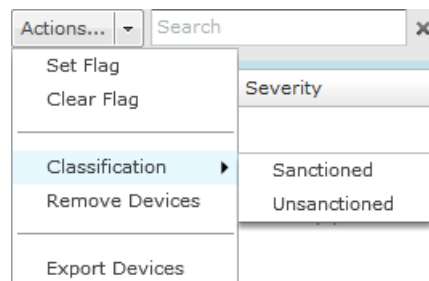Bluetooth Devices Actions

Actions Descriptions


Actions are active (selectable) or inactive (un-selectable) depending on the device type selected in the Show menu. Some actions are executed when you select a device and then select an action. In this case, no other input is required. Other actions will display a dialog that require more input. Descriptions of the actions are as follows:

Action	Description
Set Flag	Allows you to flag the selected device(s) to indicate attention is required.
Clear Flag	Allows you to remove a flag from the selected device(s).
Classification	Sanctioned (inherit) Classify the selected device(s) as a sanctioned device that inherits its traits from wherever its location in the network tree. Sanctioned (override) Classify the selected device(s) as a sanctioned device using traits that override the inherited traits. For example, a security profile can be applied to a BSS that overrides the inherited traits. Sanctioned Classify the selected device(s) as sanctioned (Unknown Devices only) Unsanctioned Classify the selected device(s) as unsanctioned. Neighboring Classify the selected device(s) as a neighboring device.
Client Type	Classifies a Wireless Client as one of the following types: • Employee Personal Device • Guest Wi-Fi User • In Store Customer • Laptop • Loyalty Customer • Phone • Potential Customer • Scanner • Tablet • Uncategorized Device
Audit Devices	Allows you to conduct a compliance audit on the selected device(s) (see < LINK HERE >.)

Action	Description
Retrieve Diagnostic Logs	Allows you to display the diagnostic logs for the selected device(s). If no logs are available, you will receive a message stating so (see < LINK HERE >.)
Remove Devices	Allows you to remove selected device(s) from monitoring (see < LINK HERE >.)
Move Devices	Allows you to place selected device(s) on a floor (see < LINK HERE >.)
Upgrade Devices	Allows you to upgrade the firmware for the selected device(s) (see < LINK HERE >.)
Import CLI Variables	Allows you to import CLI variables at the device level (see < LINK HERE >.)
Export Devices	Allows you to export information about selected device(s) to a CSV file (see < LINK HERE >.)
Command Run and Log	Allows you to execute CLI commands for selected device(s) and save results in a log file (see < LINK HERE >.)
Search Device Configuration	Allows you to search for device configurations on the network.

Retrieve Diagnostic Logs

To retrieve the diagnostic logs for the selected device in one consolidated file, elect (highlight) a device and then click **Actions > Retrieve Diagnostic Logs**.

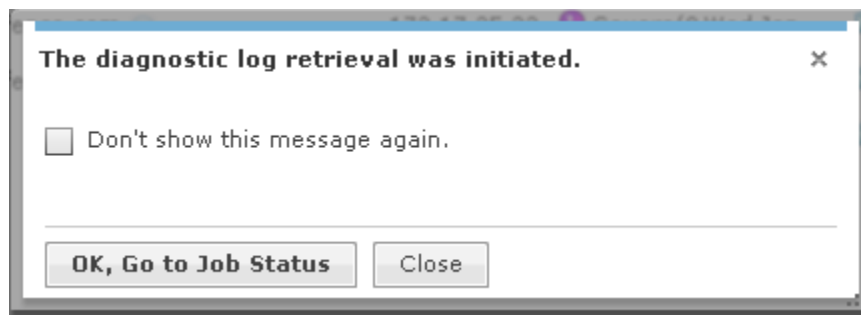


Note

You can elect not to show this message again by selecting the checkbox.

At this point, ADSP starts retrieving the diagnostic logs. When you click **OK, Go to Job Status**, the Job Status is displayed.

View Details							
Type	Description	User	Status	Start Time	Finish Time	Progress	
Device Configuration	On Demand Log Ret	ccollier	Complete: successfu	Wed Jan 25 2012 ...	Wed Jan 25 2012 ...	1/1	


Select your job and then click **View Details** to display the job details.

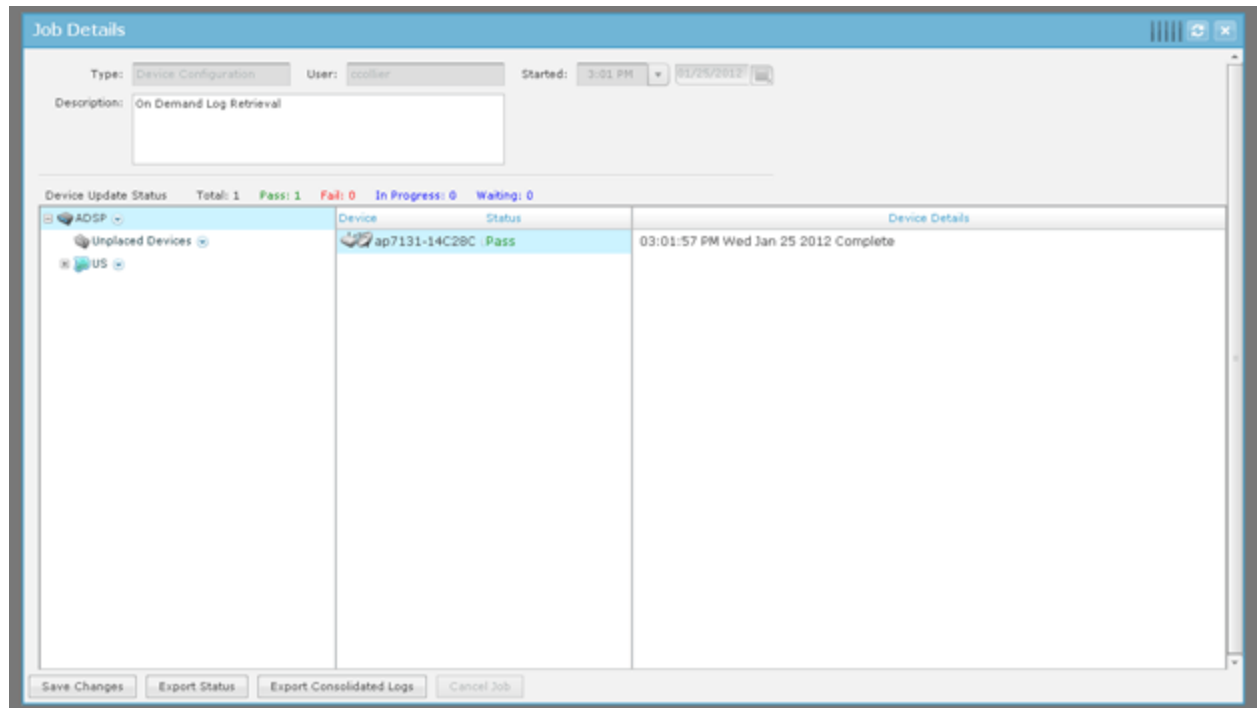

To view your diagnostic logs, you will have to export them to your workstation by clicking **Export Consolidated Logs**.

**Note**

The Export Consolidated Logs button is inactive until the status changes to Pass and the diagnostic logs are ready to export.

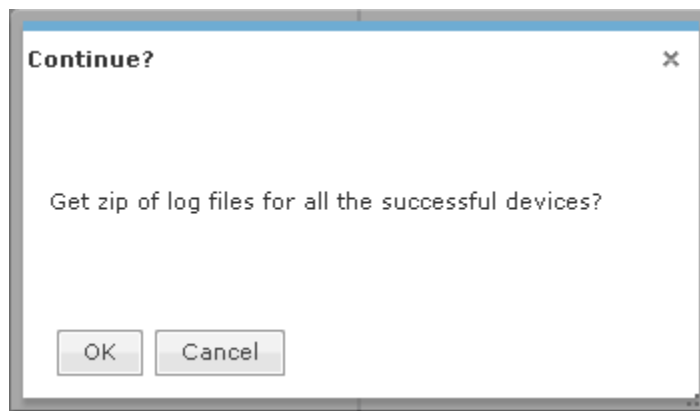


Click **OK** to continue. Navigate to a location and click **Save**. The consolidated logs are saved in a ZIP file using the specified file name. You can now view the logs.

Remove Devices

To remove devices:

1. Click **Remove Devices** to remove a selected (highlighted) device. You are prompted to confirm removal.

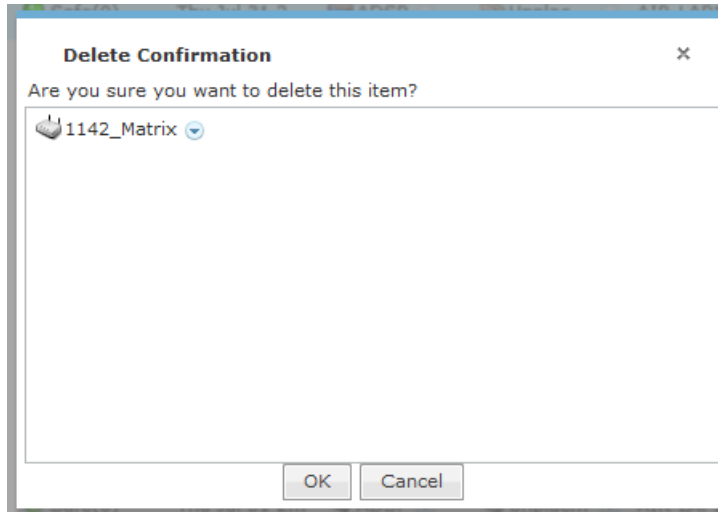

2. Click **OK** to remove the listed devices. Click **Cancel** to exit without removing the device(s).


Move Devices

Use the **Move Devices** action to move a selected (highlighted) device to a scope (floor) that you specify. When selected, you are prompted to select a scope


To move a device:

1. Select **Move Devices** action.

The **Choose Target Directory** dialog displays.

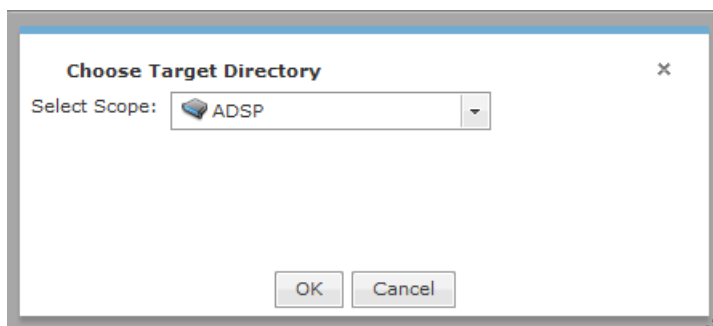

- Click the **Select Scope** drop-down menu to make your scope and then click **OK**. You are prompted to confirm your selection.

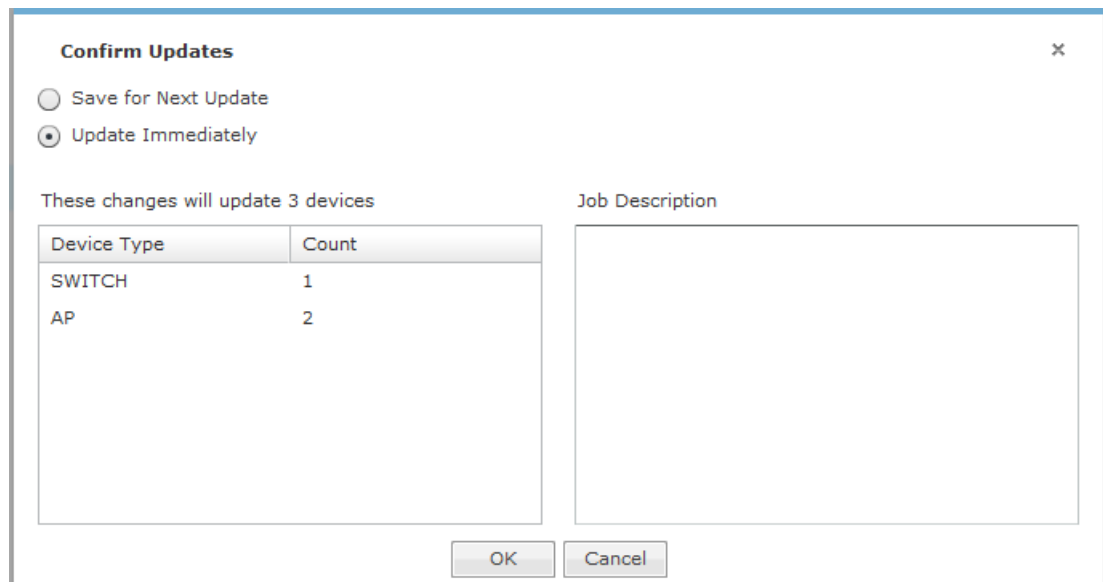

Confirm Updates

☐ Save for Next Update
☒ Update Immediately

These changes will update 3 devices

Device Type	Count
SWITCH	1
AP	2

Job Description

OK Cancel

- Click **OK** to move the device(s). Click **Cancel** to exit without moving the device(s).

Import CLI Variables



Note

A WLAN Management license is required to import CLI variables.

The Import CLI Variables action is used to import CLI variables at the device level. Naturally, the CLI variable should already exist in the device's profile or it will not be applied.

Comma delimited files are used to import CLI variables. The format of the file is:

```
cli_variables,server,deviceMAC or
folderPath,deviceType,var1,var1_value,var2,var2_value,var3,var3_value,
[etc.]
```

There are different ways to create a comma delimited file but the most trouble-free way is to use a text editor, such as Notepad.

The first line is reserved for header information. If you do not want to include header information, make the first line a blank line.

Examples:


```
cli_variables,localhost,00:00:00:a0:e7:33,ap,MASK,255.255.0.0
cli_variables,localhost,00:00:00:c7:00:39,ap,HOSTNAME,AP7131_Cube44,MASK
,255.255.0.0,GATEWAY,192.10.1.1 cli_variables,localhost,US/Southeast/
Alpharetta/Floor1,,HOSTNAME,AP7131_Cube44
```



Note

deviceType can be blank if designating a folderPath.

When you select the Import CLI Variables action, a dialog window opens where you can specify the directory (folder) and name of the CSV file.

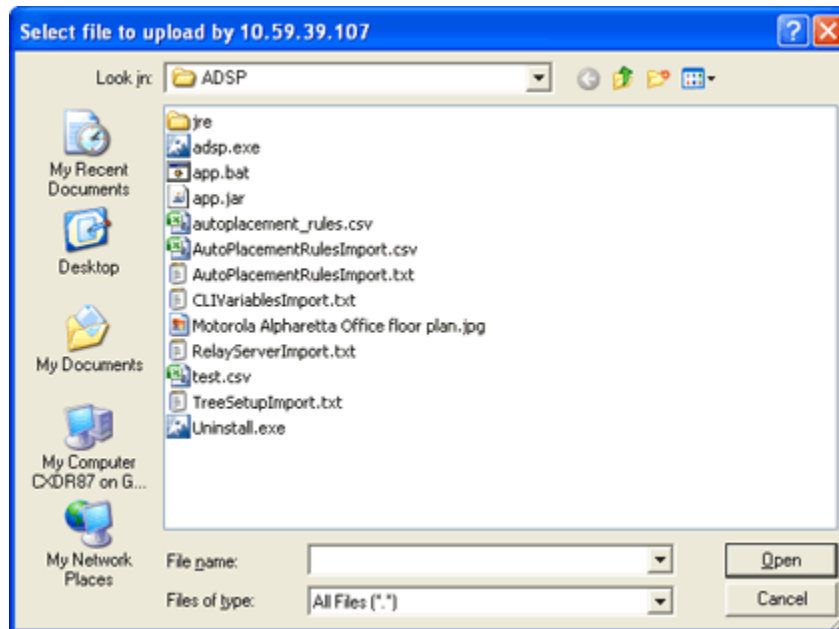

Select the import file and then click **Open** to import the CLI variables.


Verify Import of CLI Variables

To verify that the CLI variables were imported:

1. Click the device's drop-down menu button. 
2. Select **Properties** from the menu.
3. Select the CLI Profile for the device. The imported CLI variables should be visible in the **Variables** section.

Export Devices

To export information about your devices to a CSV file on your local workstation, select a device and click **Export Devices** from the **Actions** menu. A pop-up box asks you to confirm the download.

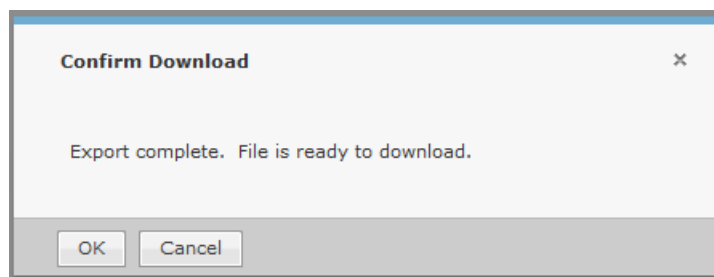


Click **OK** to confirm or click **Cancel** to exit without exporting the device(s).

When you click **OK**, a dialog window opens where you can specify the directory (folder) and name of the CSV file.

**Note**

At this time, files exported using Export Devices are for external viewing only. They cannot be imported back into AirDefense.

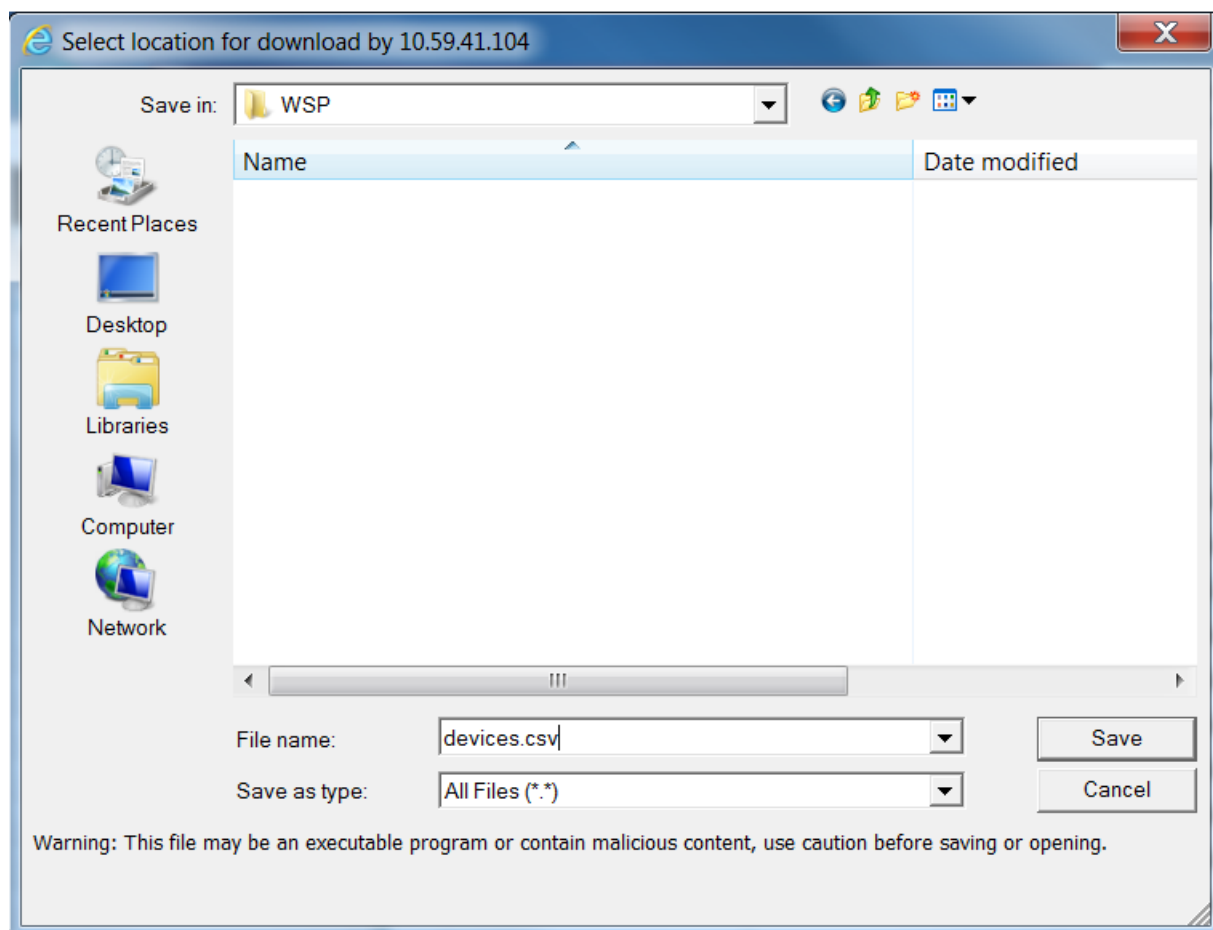

AirDefense names the CSV file `devices.csv` by default. You can keep that name or change it.


Click **Save** button to save the CSV file. Click **Cancel** to exit without saving the file. Once the file is saved, you can view the file at any time.

Search Device Configuration

Use the Search Device Configuration action to search for devices by configuration. Depending on the number of infrastructure devices in network, the process can take some time. Follow these steps to search for device configurations:

1. Select **Network Device** from the Show menu.
2. Highlight the desired device(s).


- From the **Actions** menu, select **Search Device Configuration**.

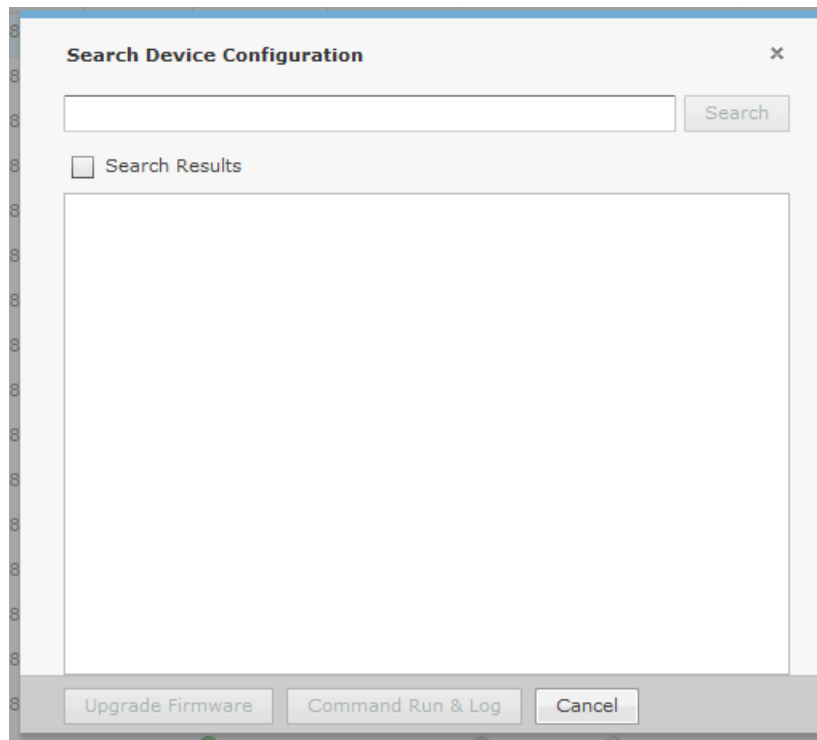

- Enter the name of the device configuration you are searching for.
- Check **Search Results** to display the search results.
- When the devices are found, click **Upgrade Firmware** to upgrade; **Command Run & Log** to run the command log; and **Cancel** to exit without saving.

Advanced Search

The **Network** tab has an advanced search feature that allows you to supply additional criteria to the basic search. Click the **Advance Search** icon  to access the advanced search feature.

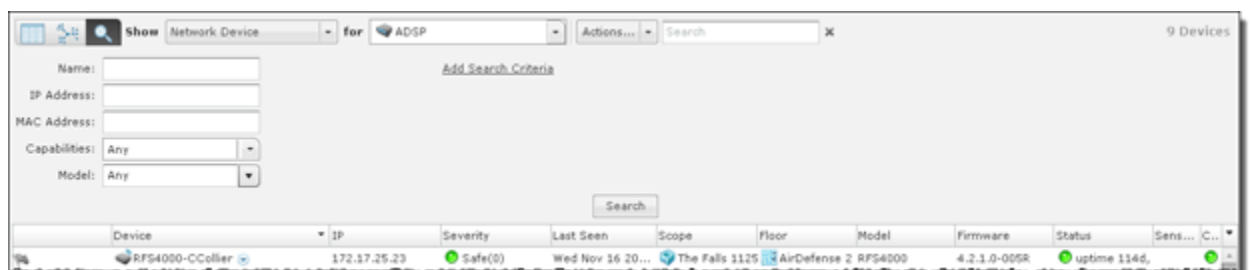


With the advanced search feature, you can supply additional information such as:

- The name of the device
- The IP address of the device
- The MAC address of the device
- The capabilities of the device (Any, Sensor, Wireless Switch, Wired Switch, or Network Manager selected from a drop-down menu)

- The model number of a device or any model.
- The SSID of the device
- The client type of the device
 - Default Type
 - MCD
 - VoIP Phone
 - Laptop
 - Employee Laptop
 - Employee Phone
 - Employee Device
 - High Priority Visitor Device
 - Visitor Device
 - Low Priority Visitor Device
- The manufacturer of the device
- The source
 - All
 - Sensor Segment
 - Switch
 - Authorized AP
 - Unknown

You may add additional criteria as needed by clicking the **Add Search Criteria** link. When the link is clicked, the first additional criteria (Flag) is added.

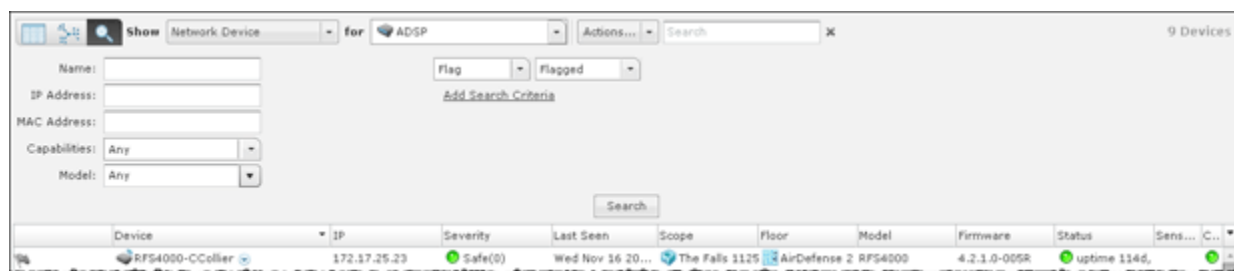

You can change the added search criteria by clicking the drop-down menu and selecting another criteria. The menu contains criteria that relate to the type of devices being displayed. If you want to use more than one of the listed criteria, you can click the **Add Search Criteria** link to add the next criteria in the list.



Additional criteria may be added until you added all the search criteria for the type of devices being displayed. Added criteria may be removed by hovering your cursor

over the criteria and then clicking the  located to the right of the criteria. Additional criteria includes:

Criteria	Description
Flag	Select whether you want to display flagged or un-flagged devices.
Firmware	Supply a firmware version for devices you want to display.
First Seen	Supply a range of first seen hours for devices you want to display.
Last Seen	Supply a range of last seen hours for devices you want to display.
Classification	Select whether you want to display sanction, unsanctioned or neighboring devices.
Channel	Supply a range of channels for devices you want to display.
Signal Strength	Supply a range of signal strengths (in dBm) for devices you want to display.
Sensed Authentication	Select a sensed authentication method from the drop-down menu.
Sensed Encryption	Select a sensed encryption method from the drop-down menu.
Polled Authentication	Select a polled authentication method from the drop-down menu.
Polled Encryption	Select a polled encryption method from the drop-down menu.
Up Time	Supply a range of up time hours for devices you want to display.
Online	Select whether you want to display online or offline devices.
Compliant	Select whether you want to display compliant, non-compliant, or unlicensed devices.

Once you have entered or selected your search criteria, click **Search** to display devices matching your search criteria.

Alarms

Alarms Tab

The Alarms tab displays an alarm table that shows all of the active and inactive alarms currently occurring on your network, sorted in columns by:

- flag
- alarm criticality
- alarm type

- offending device
- start time
- alarm status
- SSID of the offending device.

Alarm ID	Alarm Type	Device	Start Time	Status	SSID
S 2433254...	Rogue AP on Wired Ne...	Motorola:ca:f9:d1	Fri Apr ...	Inactive (expires in 22:08)	Test_100
S 5553530...	Rogue AP on Wired Ne...	Motorola:ca:f9:d0	Fri Apr ...	Inactive (expires in 22:08)	MayerS131
S 5122746...	Rogue AP on Wired Ne...	Motorola:cb:f9:f0	Fri Apr ...	Inactive (expires in 22:08)	MayerS131
S 2828001...	Rogue AP on Wired Ne...	Motorola:cb:f9:f1	Fri Apr ...	Inactive (expires in 22:08)	Test_100
S 3294987...	Rogue AP on Wired Ne...	Motorola:2f:72:e0	Fri Apr ...	Active	MayerS131
S 3984849...	Rogue AP on Wired Ne...	Motorola:2f:72:e1	Fri Apr ...	Active	Test_100
S 9319765...	Rogue AP on Wired Ne...	Motorola:2f:74:20	Fri Apr ...	Active	MayerS131
S 1468755...	Rogue AP on Wired Ne...	Motorola:2f:74:21	Fri Apr ...	Active	Test_100
S 4159659...	Rogue AP on Wired Ne...	Cisco:bfe7:20	Fri Apr ...	Inactive (expires in 19:48)	1140-N
S 3862793...	Rogue AP on Wired Ne...	Symbol:ce:86:51	Fri Apr ...	Inactive (expires in 18:32)	AP300APT-OPEN
S 2349844...	Rogue AP on Wired Ne...	Symbol:27:36:19	Fri Apr ...	Inactive (expires in 13:41)	AP300APT-OPEN
S 2486069...	Rogue AP on Wired Ne...	Symbol:76:0f:50	Thu Apr ...	Active	APS131-SH
S 2410922...	Rogue AP on Wired Ne...	Motorola:08:05:b2	Thu Apr ...	Inactive (expires in 2:51)	DevMgmt_104
S 1530972...	Rogue AP on Wired Ne...	Motorola:08:05:b3	Thu Apr ...	Inactive (expires in 2:50)	DevMgmt_105
S 2059755...	Rogue AP on Wired Ne...	Motorola:86:44:c2	Thu Apr ...	Inactive (expires in 2:44)	DevMgmt_104
S 1263574...	Rogue AP on Wired Ne...	Motorola:2e:a2:27	Thu Apr ...	Inactive (expires in 2:17)	DevMgmt_108
S 1668760...	Rogue AP on Wired Ne...	Motorola:2e:a2:23	Thu Apr ...	Inactive (expires in 2:12)	DevMgmt_105
S 2926010...	Rogue AP on Wired Ne...	Motorola:2e:a2:22	Thu Apr ...	Inactive (expires in 2:10)	DevMgmt_104
S 1314810...	Rogue AP on Wired Ne...	Motorola:2e:a2:25	Thu Apr ...	Inactive (expires in 2:20)	DevMgmt_106
S 2211873...	Rogue AP on Wired Ne...	Motorola:2e:a2:24	Thu Apr ...	Inactive (expires in 2:19)	DevMgmt_105
S 2676730...	Rogue AP on Wired Ne...	Motorola:2e:a2:26	Thu Apr ...	Inactive (expires in 2:16)	DevMgmt_107

The alarms listed in the table are determined by the network level and the filters you have selected. Select the network level in **Show alarms** in the drop-down menu. Select filters using the instructions described in the [Alarm Filters](#) on page 478 section.

You can hide (uncheck) or view (check) columns by clicking the drop-down button located to the right of the last column.

- ✓ Flag
- ✓ Criticality
- Alarm ID
- ✓ Alarm Type
- ✓ Device
- Device Actions
- ✓ Start Time
- ✓ Status
- ✓ SSID
- Sensor
- Expire Time
- Signal Strength
- Channel
- Notes
- Summary



You can hide the Alarm Filters by clicking Hide Alarm Filters bar . You can show (un-hide) the Alarm Filters by clicking the Show Alarm Filters bar .




Alarm Table

The alarm table is customizable and includes the following information (columns):

Column	Description
Flag	Indicates whether or not a alarm has been flagged.
Criticality	Displays the criticality of the alarm. (See Alarm Criticality on page 486 for more information.)
Alarm ID	Displays the alarm identification.
Alarm Type	Displays the alarm type.
Device	Displays the name of the device that triggered the alarm.
Start Time	Displays the time and date the alarm started.
Status	Displays the status (active/inactive) of the alarm.
SSID	Displays the SSID (Service Set IDentifier) of the WLAN device triggering the alarm appears on.
Sensor	Displays the name of the Sensor that observed the device triggering the alarm.
Expire Time	Displays the time and date when the alarm expired.
Signal Strength	Displays the signal strength of the device triggering the alarm.
Channel	Displays the channel the device triggering the alarm is using.
Notes	Displays any notes that were created for the alarm.
Summary	Displays a summary describing the alarm.

Alarm Filters

The alarm filters are used to filter the displayed alarm information. The filters are displayed on the left side of the window.

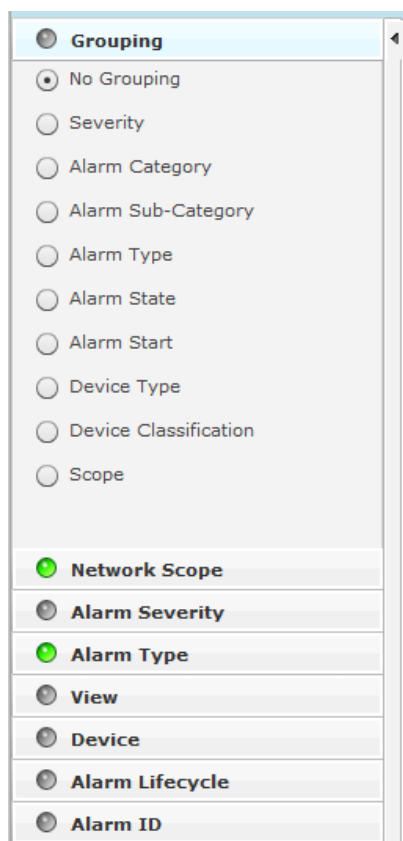

The indicator on the right of each filter turns green  when you change a filter from its original state. Click the green indicator to return a filter to its default state.

The different filters are:

- Grouping Filterview devices by grouping them using similar criteria.
- Network Scope Filterview alarms according to where they appear in the network tree.
- Alarm Severityview alarms by severity.
- Alarm Typeview devices by alarm type.
- View Filteroptionally view all alarms, new alarms, or flagged alarms.
- Device Filterfilter alarms by device classification and/or device type.
- Alarm Lifecycle Filterfilters alarms over the life cycle of an alarm.
- Alarm ID Filterfilter alarms by specifying an alarm ID.

Grouping Filter

The Grouping filter allows you to view devices by grouping them using similar criteria. The views vary depending on the type of devices being displayed.

●

Grouping

●

No grouping

○

Severity

○

Last Seen

○

Status

○

Scope

The following views are available:


- No Grouping** - Displays all devices without grouping. This view is accessible when displaying any type of device.
- Severity** - Groups devices into the different threat levels to your network. Threat levels that are not sensed are not shown. This view is accessible when displaying any type of device.

Severe	13 Devices
Critical	5 Devices
Major	213 Devices
- Last Seen** - Groups devices by a time frame when the devices were last seen on your network. This view is accessible when displaying any type of device.


More than 72 hours	8 Devices
24 - 72 hours	57 Devices
12 - 24 hours	79 Devices
1 - 12 hours	5 Devices
0 - 1 hour	90 Devices
- Classification** - Groups devices by how they are classified. This view is accessible when displaying BSSs, Wireless Clients, or Unknown Devices.

Unsanctioned	547 Devices
Sanctioned	6 Devices
- Signal Strength** - Groups devices in a range of signal strengths. This view is accessible when displaying BSSs or Wireless Clients.

Between -21 and -40 dBm	1 Devices
Between -41 and -60 dBm	5 Devices
Between -61 and -80 dBm	216 Devices
Less than or equal to -80 dBm	331 Devices
- Sensed Authentication** - Groups devices based on their sensed method of authentication. This view is accessible when displaying BSSs or Wireless Clients.

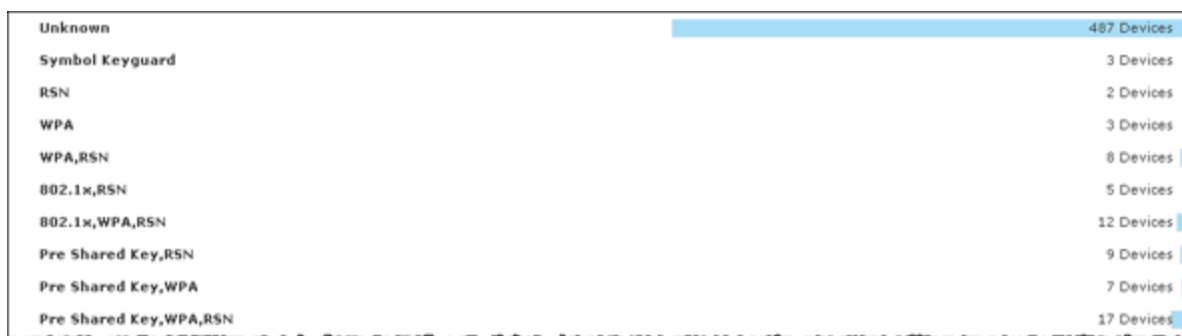

- **Sensed Encryption** - Groups devices based on their sensed method of encryption. This view is accessible when displaying BSSs or Wireless Clients.

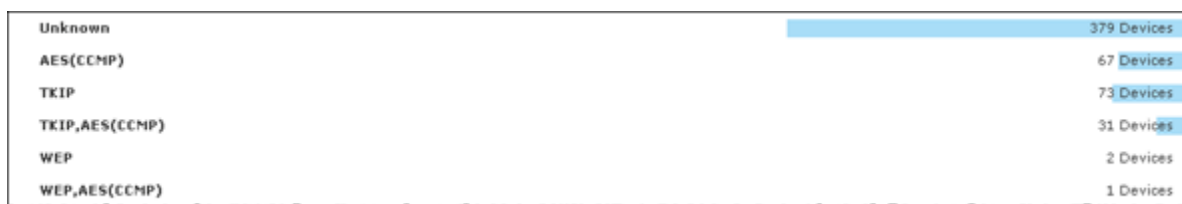

- **Polled Authentication** - Groups devices based on their polled method of authentication. This view is accessible only when displaying Wireless Clients.



- **Polled Encryption** - Groups devices based on their polled method of encryption. This view is accessible only when displaying Wireless Clients.



- **Client Type** - Groups devices based on their client type. This view is accessible only when displaying Wireless Clients.



- **On Network** - Groups devices based whether they are on the network or not. This view is accessible only when displaying Unknown Devices.



- **Status** - Groups devices based on their online/offline status. This view is accessible when displaying Network Devices.




- **Scope** - Groups devices based on where they are in the network. The highest network level under the appliance level is displayed as the group. This view is accessible when displaying any type of device.



Clicking on a group will display the devices in that group.

Network Scope Filter


The **Network Scope** filter is used to view alarms according to where they are in the network tree. By selecting a network level, you limit the displayed alarms to only the ones under that particular network level.

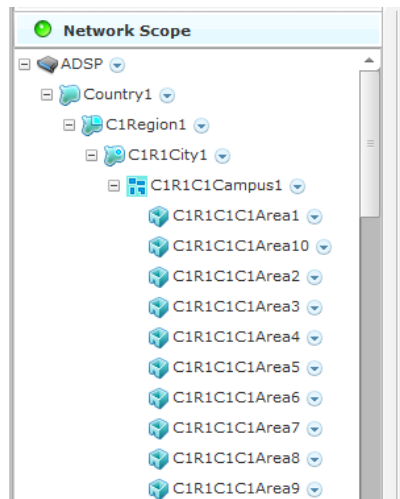

If the appliance level is selected, all the alarms for that appliance are displayed. If a floor level is selected, only the alarms on that floor are displayed.

Alarm Severity Filter

The **Alarm Severity** filter allows you to view devices by alarm severity.

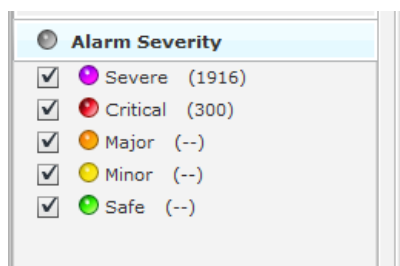


The severities are:

- Severe - - Displays only Severe alarms.
- Critical - - Displays Critical and Severe alarms.
- Major - - Displays Major, Critical, and Severe alarms.
- Minor - - Displays Major, Critical, and Severe alarms.
- Safe - - Displays alarms of all criticalities.

You can select the alarms that you want to view by checking the checkbox.

Alarm Type Filter


The Alarm Type filter allows you to view devices by alarm type. Devices are grouped together according to their alarm threat to your network.

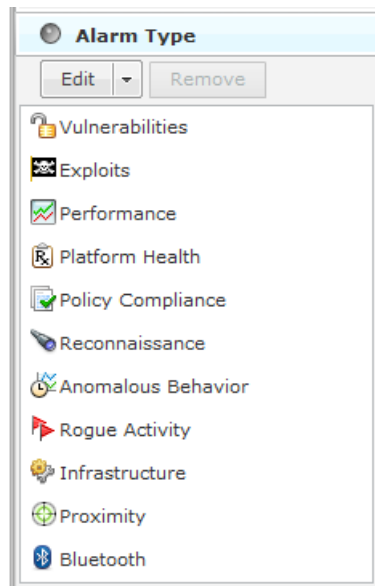


You have the option of displaying all alarm types or filtering alarms by a specific type. The different alarm types are:

- Vulnerabilities
- Exploits
- Performance
- Platform Health
- Policy Compliance
- Reconnaissance
- Anomalous Behavior
- Rogue Activity
- Infrastructure
- Proximity
- Bluetooth.

Click the Edit button to select the alarm types that you want to display.

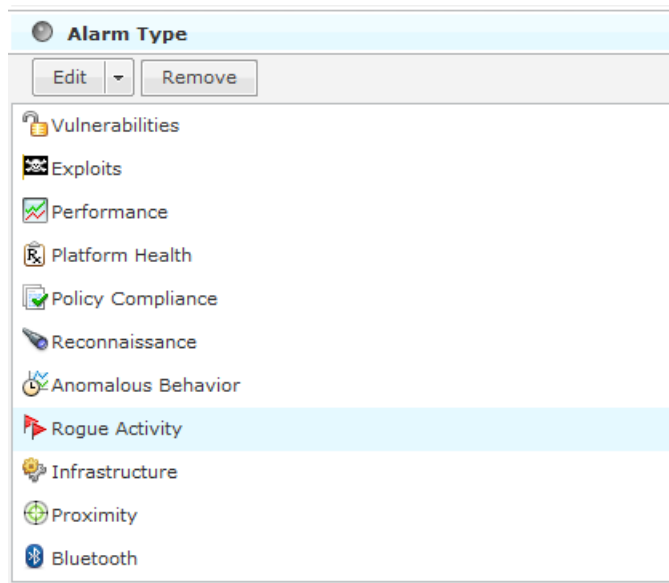


Click Edit, select the alarm type(s), and then click OK. The following graphic shows that you only want to display rogue alarms.

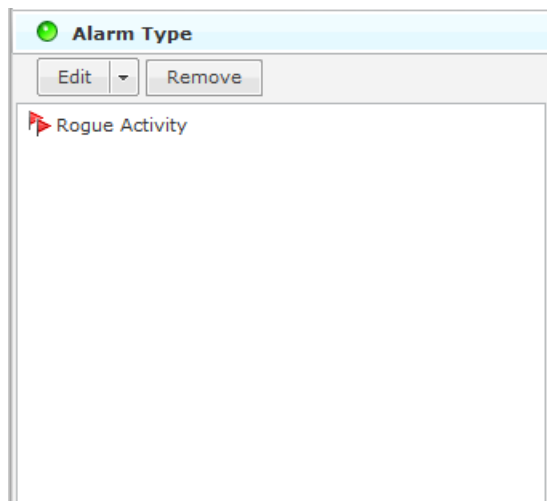

To remove an alarm type, select (highlight) the alarm type and click Remove.

View Filter

 The **View** filter gives you the option of viewing all alarms, new alarms, or flagged alarms.




To select an option, click **All**, **New**, or the blue flag - . The option you select will be highlighted.

Device Filter

The Device filter is used to filter devices by model, manufacturer, and/or capabilities. The filter changes depending on the types of devices being displayed.

Alarm Lifecycle Filter

Use the **Alarm Lifecycle** filter to filter alarms over a specified range of time.

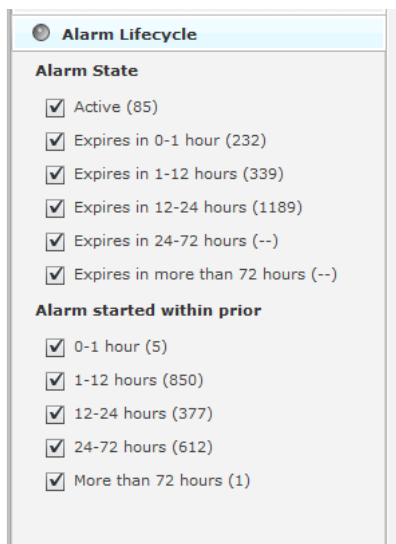

Alarm Lifecycle

Alarm State

- ☒ Active (85)
- ☒ Expires in 0-1 hour (232)
- ☒ Expires in 1-12 hours (339)
- ☒ Expires in 12-24 hours (1189)
- ☒ Expires in 24-72 hours (--)
- ☒ Expires in more than 72 hours (--)

Alarm started within prior

- ☒ 0-1 hour (5)
- ☒ 1-12 hours (850)
- ☒ 12-24 hours (377)
- ☒ 24-72 hours (612)
- ☒ More than 72 hours (1)

You can select alarm states and/or a time range when the alarms started. The alarm states include:

- Active Alarms
- Alarms that expire in 0 to 1 hour
- Alarms that expire in 1 to 12 hours
- Alarms that expire in 12 to 24 hours
- Alarms that expire in 24 to 72 hours
- Alarms that expire in more than 72 hours.


The time range when alarms started include:

- Alarms that started 0 to 1 hour ago
- Alarms that started 1 to 12 hours ago
- Alarms that started 12 to 24 hours ago
- Alarms that started 24 to 72 hours ago
- Alarms that started more than 72 hours ago.

Select the checkbox(es) for the alarm states and/or time ranges when the alarms started that you want to display.

Alarm ID Filter

Use the **Alarm ID** to filter alarms using the alarm ID.

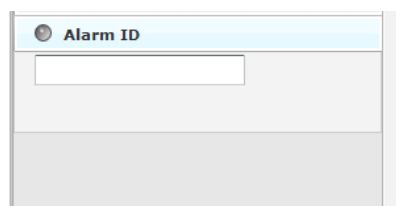

Alarm ID

Normally, the alarm ID can be found in things such as:

- an email that was generated by an alarm.
- a SNMP notification generated by a Trap action defined in the Action Manager.
- a report generated by the Report system.

Type or paste an alarm ID in the Alarm ID field to filter alarms using that alarm ID. Only the alarm matching the ID will be displayed.

Alarm Categories and Criticality

AirDefense Services Platform generates alarms when certain events or conditions occur in your wireless LAN that violate a policy or performance threshold.

To make alarms easy to identify, AirDefense groups alarms into nine categories, and assigns a criticality to each alarm. Alarm notifications can also be delivered to the administrator via Email, SNMP, or Syslog.

Alarm Categories

The nine alarm categories are as follows:

- Anomalous BehaviorDevices that operate outside of their normal behavior settings and generate events that could indicate anomalous or suspicious activity.
- ExploitsEvents caused by a potentially malicious user actively interacting on your Wireless LAN using a laptop/PC as a wireless attack platform.
- InfrastructureEvents that are generated based on the SNMP traps received from the infrastructure devices.
- PerformanceWireless LAN traffic that exceeds set performance thresholds for devices.
- Platform HealthEvents that provide information about the state of the AirDefense Services platform and the Sensors which report back to the appliance.
- Policy ComplianceWireless LAN traffic that violates established or default policies for devices.
- ReconnaissanceMonitors and tracks external devices that are attempting to monitor your Wireless LAN.
- Rogue ActivityUnauthorized Devices detected by AirDefense which pose a risk to the security of your network.
- VulnerabilitiesDevices that are detected to be susceptible to attack.

Alarm Criticality


Alarms are assign a default criticality by ADSP. You can optionally change the default criticality of each alarm to match your environment when configuring alarms under **Configuration > Operational Management > Alarm Configuration**. You must be a user

with read/write permission for the Alarm Management functional area to change the criticality of an alarm.

Alarm Criticality	Description
Severe 	Serious alarms that may have catastrophic effects on your WLAN network.
Critical 	Serious alarms on devices that require immediate attention.
Major 	Potentially serious alarms on devices that require priority attention.
Minor 	Suggested potential problem alarms on devices that may develop into worse issues if left alone.
Safe 	Devices that pose no immediate threat to your WLAN network.

Alarm Details

Additional alarm information can be displayed by selecting an alarm. Information about the alarm is displayed at the bottom of the **Alarms** tab.

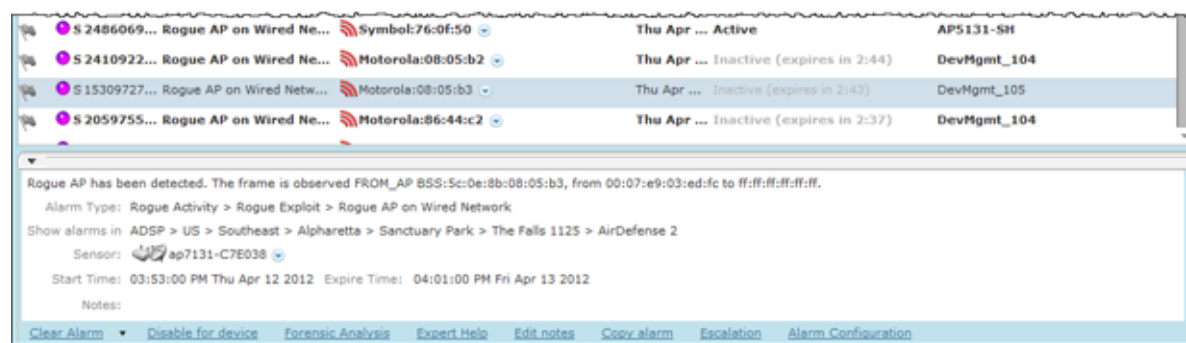

If you do not see the alarm details, click the **Open** bar to display them.



The following alarm information is displayed:


- A description of the alarm
- The alarm type
- The network level of the device
- The Sensor that observed the device
- The time when the alarm started
- The time when the alarm will expire
- Any notes added by a user.

At the bottom of the detailed information are links that allow you to execute a function or provide more information.

Link	Description
Clear Alarm	Clear alarm works the same as Clear Alarm in the Actions menu.
Disable for device	Disables the alarm specifically for the device causing the alarm. If you wish to re-enable the alarm, you must go to Alarm Configuration and remove the device from the disabled list.
Forensic Analysis	Accesses Forensic Analysis where you can analyze historical information about the device.
Expert Help	Provides comprehensive descriptions on the alarm in four tabs: - Summary displays a summary about the alarm type. - Description displays detailed information about the alarm type. - Investigation advises you on how to investigate the alarm type. - Mitigation advises you on how to mitigate the alarm type.
Edit notes	Allows you to edit or add notes for the alarm.
Copy alarm	Copies all the detailed information about the alarm to the Clipboard for later use.
Escalation	Displays an escalation window displaying what you need to do to escalate a problem. The escalation information is defined in the alarm configuration for the specific alarm.
Alarm Configuration	Opens Alarm Configuration in the Configuration tab.

Alarm Actions

The **Alarms** tab includes an **Actions** menu where you can execute an action that affects the selected alarm.

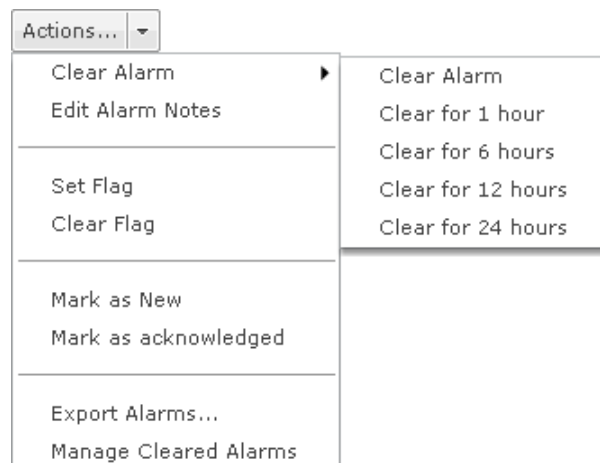

A description of the actions are as follows:

Action	Description
Clear Alarm	Clear the selected alarm using one of the following options: • Clear Alarm (no time limit) • Clear for 1 hour • Clear for 6 hours • Clear for 12 hours • Clear for 24 hours. If you click one of the options with a time limit. The alarm is cleared for the specified time and then returns if the conditions that generated the alarm are not cleared.
Edit Alarm Notes	Allows you to edit or add notes for the selected alarm.
Set Flag	Flag the selected alarm(s) to indicate attention is required.
Clear Flag	Remove flag from the selected alarm(s).
Mark as New	Mark the alarm as new. New alarms are displayed in bold text.
Mark as acknowledged	Mark the alarm as acknowledge which means you have selected the alarm and view details about the alarm. Acknowledge alarms are displayed in regular text.
Export Alarms	Exports the alarm information to a CSV file. You will be prompted for a name and a location to place the file.
Manage Cleared Alarms	Displays an overlay where you can manage cleared alarms. A list of alarms is displayed containing alarms that have been cleared and configured to remain cleared for a specified amount of time. You can remove alarms that have been configured to remain cleared for a time period by selecting (highlighting) the alarm(s) and clicking Remove Alarms. Click Close to exit the overlay.

AirDefense Alarm Model

Suppressed Alarm Repetition

AirDefense has made significant advancements in the Alarm Model, dramatically decreasing the occurrence of repetitious alarms. In the new Alarm Model, the AirDefense appliance leverages the extensive data it collects about security events to determine whether events are:

- Unique events
- Repeat occurrences of activities that constitute a single security event
- Repeat observances of a single, ongoing event.

Based on this distinction, AirDefense is able to display alarms for unique events and suppress repetitive alarms for ongoing events. This provides better correlation between individual security events and individual alarms.


How an Alarm is Generated

Violations are reported internally to the appliance every minute as events.

The AirDefense wireless security research team maintains algorithms for correlating observed security events, to identify when a predefined high water mark for the event is reached. The high water mark, in its simplest terms, is a number of identical events that occur within a specific period of time. When the high water mark is reached, it triggers an alarm on the GUI.

Example-Generated Alarm

Three XYZ events within a 30-minute period defines the high-water mark for XYZ events. If the appliance detects three or more such events within any 30-minute period, an alarm is triggered.

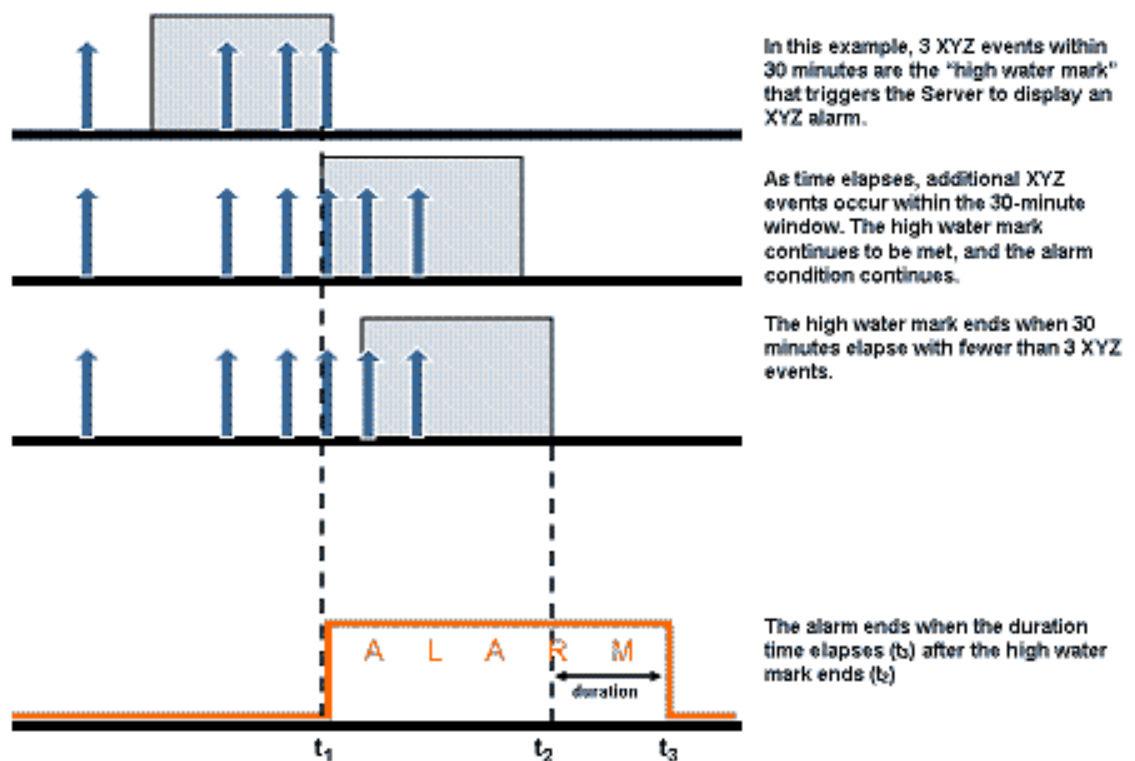

Duration of Alarm

The alarm stays active for a period of time after the security event ends. This period of time is called the duration. The duration is user-configurable, although AirDefense has determined default duration times correlated to the expected life-cycle of each specific


event. When the duration time ends, the alarm becomes inactive. You can use the forensic analysis to view historical alarms.

Configuration Tab

The **Configuration** tab allows you to initially set up AirDefense, configure devices for management, and perform other administrative tasks such as user and sensor administration. Once you configure your network with AirDefense, you can administer and monitor your network from one central location.

The following configuration categories allow you fully set up and manage AirDefense:

- Appliance Platform is used to initially set up AirDefense.
- Security & Compliance is used to define the security configurations of sanctioned wireless clients and monitor the wired network devices in your system.
- Network Assurance provides WLAN performance monitoring, and performs traffic analysis and RF analysis among other actions to determine coverage gaps. Use it to configure Live RF settings, create performance profiles, and set up environment monitoring.
- Infrastructure Management is used to configure devices so that they can communicate on your network and be managed by AirDefense.
- Operational Management is used to configure features that apply to the normal operations of AirDefense.
- Appliance Management is used to configure the AirDefense appliance.
- Account Management is used to set up user account parameters, including access, authentication and passwords.

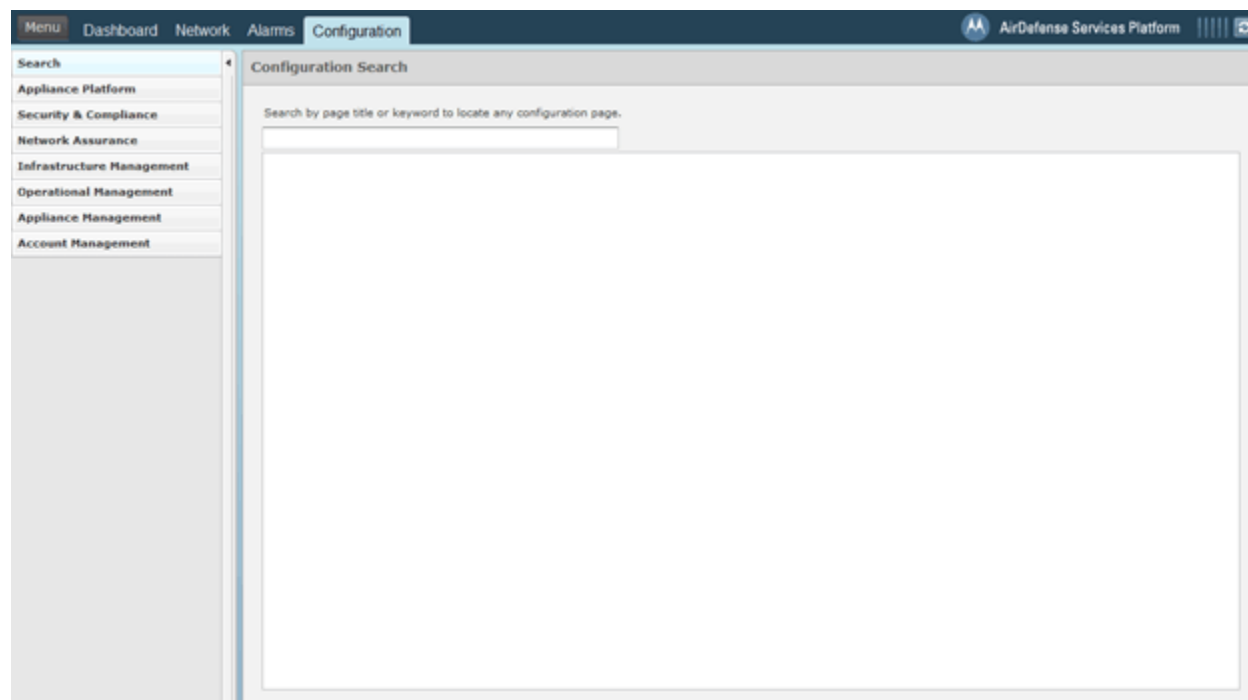


Search

This feature allows you to search the Configuration tab for quick location of a configuration feature.




To conduct a search, just start typing.

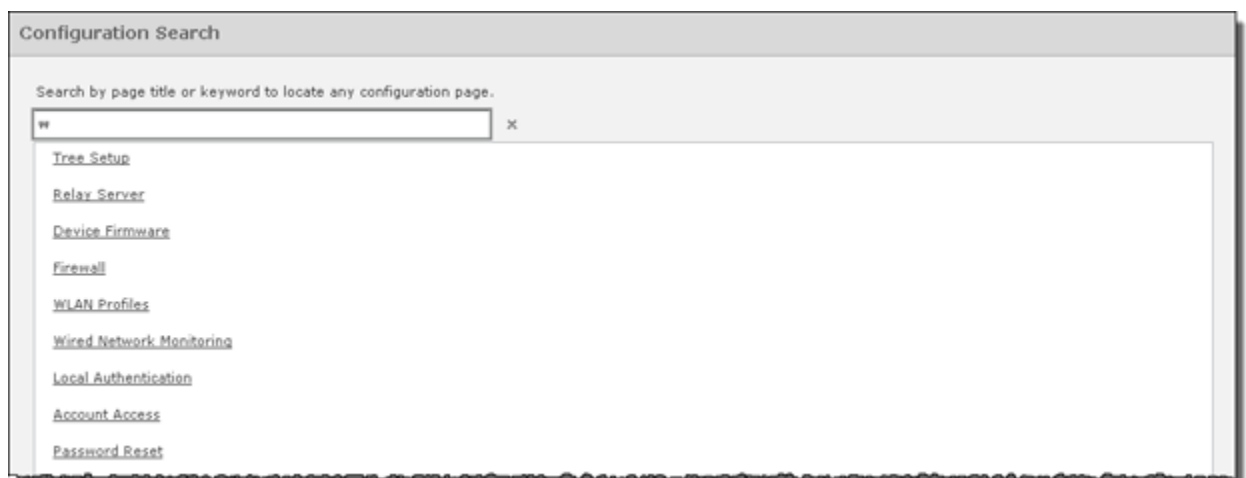

Typing just one character will list available features related to that character. To narrow your search, type more text.



Click the link for the feature to navigate to it.

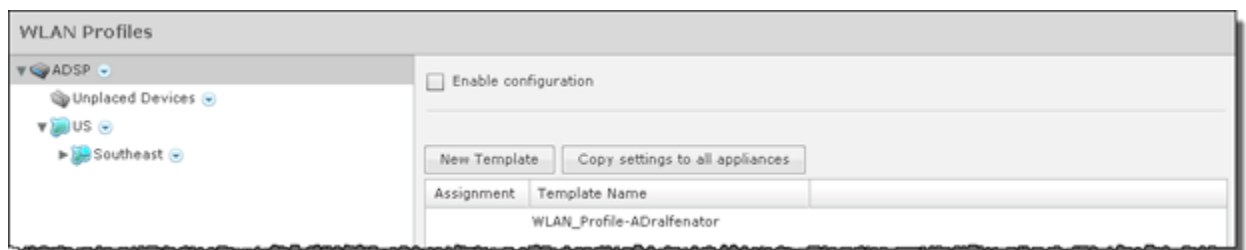

Appliance Platform

The Appliance Platform category includes all the necessary features that are needed to initially set up AirDefense.


Search
Appliance Platform
01. Appliance Licensing
02. Tree Setup
03. Security Profiles
04. Auto-Placement Rules
05. Auto-Licensing
06. Communication Settings
07. Polling
08. Relay Server
09. Import / Discover Devices
Security & Compliance
Network Assurance
Infrastructure Management
Operational Management
Appliance Management
Account Management

The Appliance Platform category allows you to:

- Appliance Licensing - License your appliance and devices.
- Tree Setup - Establish a network tree.
- Security Profiles - Create security profiles that will initiate WIPS.
- Auto-Placement Rules - Define Auto-Placement rules that will automatically place devices in your network tree.
- Auto-Licensing - Establish an import policy that controls how device licenses are applied during the import process.
- Communication Settings - Set up communication profiles that allow AirDefense to communicate with devices in your network.
- Polling - Determine how often AirDefense polls your devices for status information and sets the frequency.
- Relay Server - Set up a relay server that facilitates downloading/uploading configuration profiles to/from your devices. (Optional.)
- Import/Discover Devices - Schedule when to import devices using an import file or discover devices using SNMP.

Each feature is numbered. When initially setting up AirDefense, follow the numbered steps sequentially. Once you have completed the last step, AirDefense is set up for use.

The following flowchart shows the fundamental steps to initially configure AirDefense.

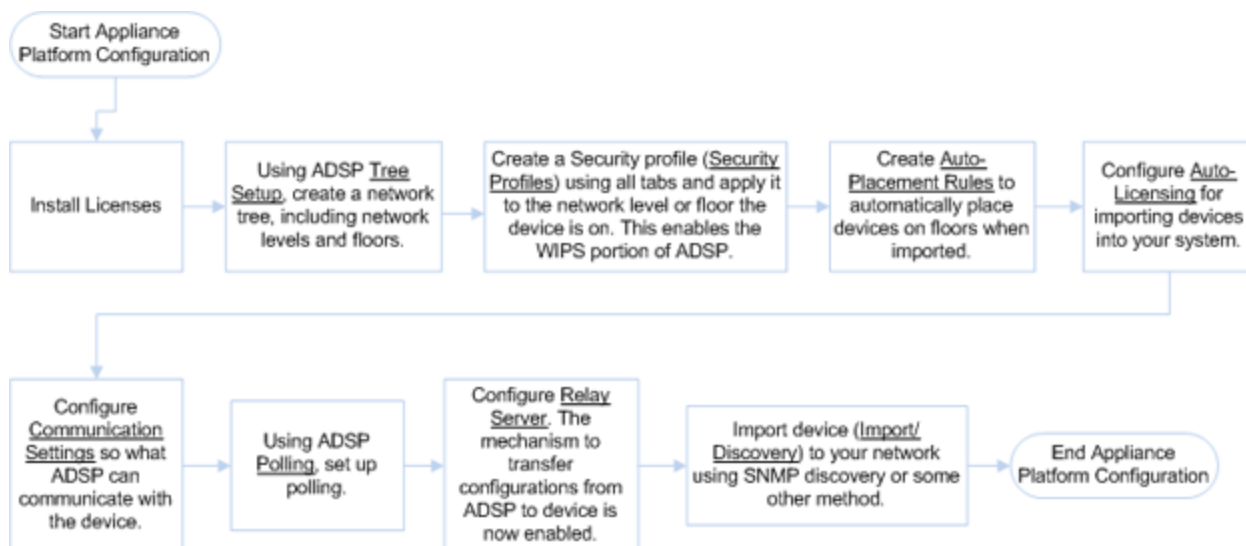


Appliance Licensing

The AirDefense GUI handles license management for AirDefense and any modules. Using Appliance Licensing, you can:

- View current license agreement information
- Add licenses
- Copy appliance MAC address
- Download appliance keys

View Current License Information

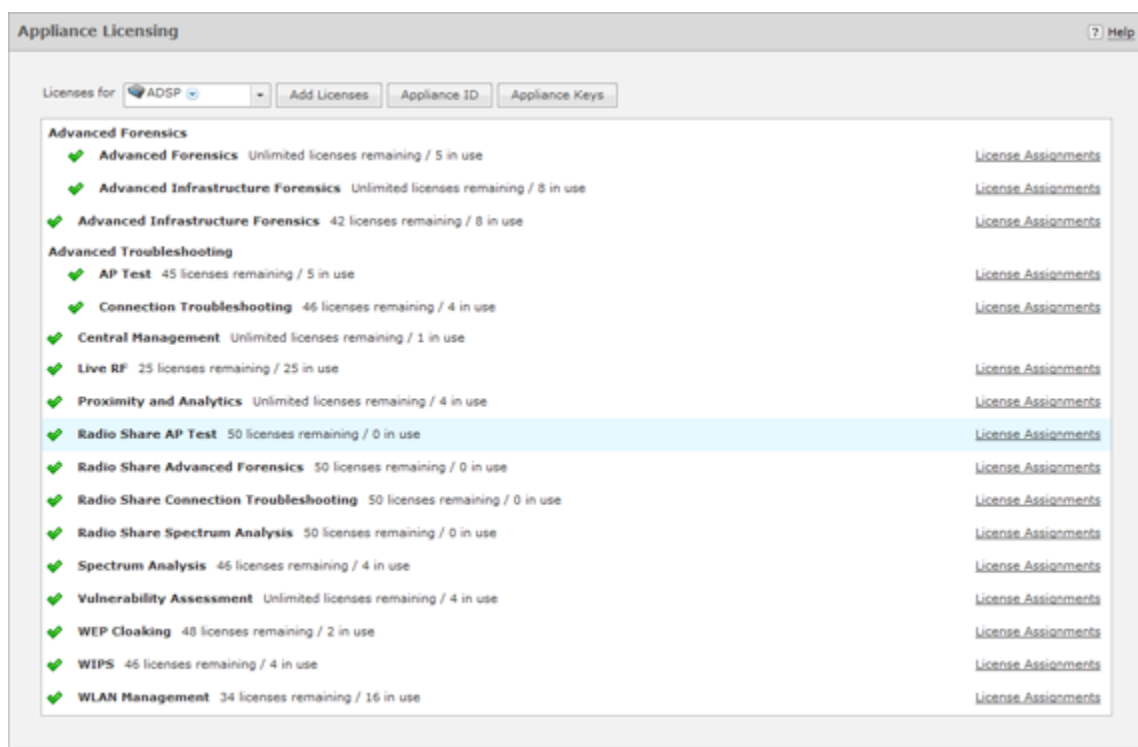

License information is displayed about WIPS (base license) and the following add-on modules:



Note

Modules are only displayed when they are installed.

- Advanced Forensics License, which includes:
 - Advanced Forensics
 - Advanced Infrastructure Forensics
- Advanced Troubleshooting License, which includes:
 - AP Test (available as a separate license)
- Assurance Suite License, which includes:
 - AP Test (available as a separate license)
 - Advanced Forensics
 - Advanced Infrastructure Forensics
 - Live RF (available as a separate license)
 - Spectrum Analysis (available as a separate license)
- Central Management License
- Proximity and Analytics License
- Radio Share Network Assurance License, which includes:
 - Radio Share AP Test (available as a separate license)
 - Radio Share Advanced Forensics (available as a separate license)


- Radio Share Spectrum Analysis (available as a separate license)
- Vulnerability Assessment License
- WEP Cloaking License
- WLAN Management License

License Status

License status is determined by:

- A green check mark indicates the license is OK.
- A yellow flag indicates the license requires attention. It may expire soon.
- A red X indicates the license has expired.


Clicking on a license will display the following information about the license.

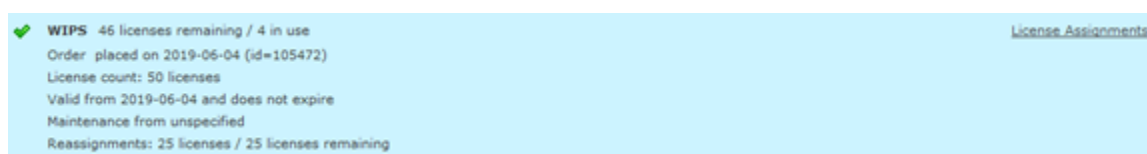

Field	Description
Order Date	Indicates the date the license was ordered and the license ID number.
License Count	Includes the following information: • The number of units. The number of active units cannot exceed this number. Unit counts may be 0, a specific number, or unlimited. • A style that specifies that the unit count is fixed or floating. Fixed licenses get consumed as they are used and are not released. Floating licenses get released when they are not being used anymore. • A unit identifier. Units may be Sensors, APs, switch, etc. • A maximum value limiting the number of units. • A warning limit used to display an alarm that the unit count is being approached and that user should consider purchasing additional licenses.
License Valid Date	Displays the expiration date and the start date of the license. A warning date is also displayed, indicating when the customer will be issued a warning that the license will soon expire. Unlimited indicates an expiration date of 9999-12-31.
Maintenance Date	Displays the expiration date and start date of the maintenance agreement with the customer. Unlimited indicates an expiration date of 9999-12-31.
Reassignments	Displays the number of licenses that you can reassign and how many reassignments that you have left.

Add Licenses

To install a license, click the **Add Licenses** button to begin.

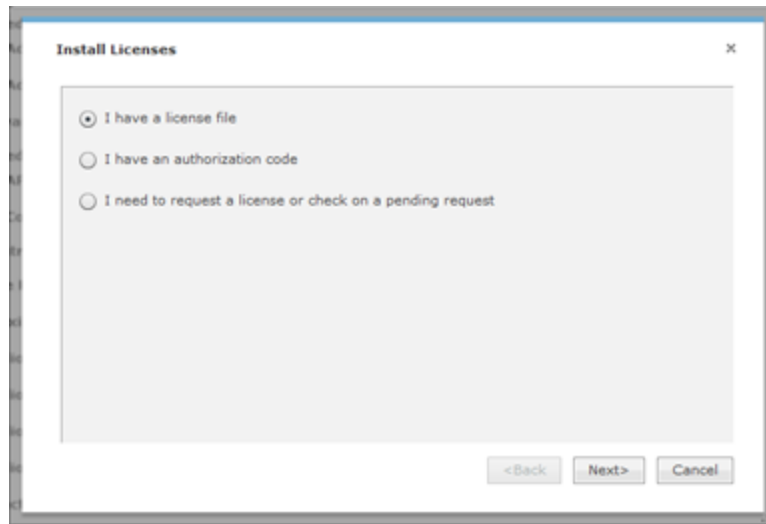


There are three ways to install a license:

- [Using a License File](#) on page 497
- [Using an Authorization Code](#) on page 498
- [Requesting a License](#) on page 499

Using a License File

A license file contains information about your license. If you have a license file, select the **I have a license file option** and then click **Next**.

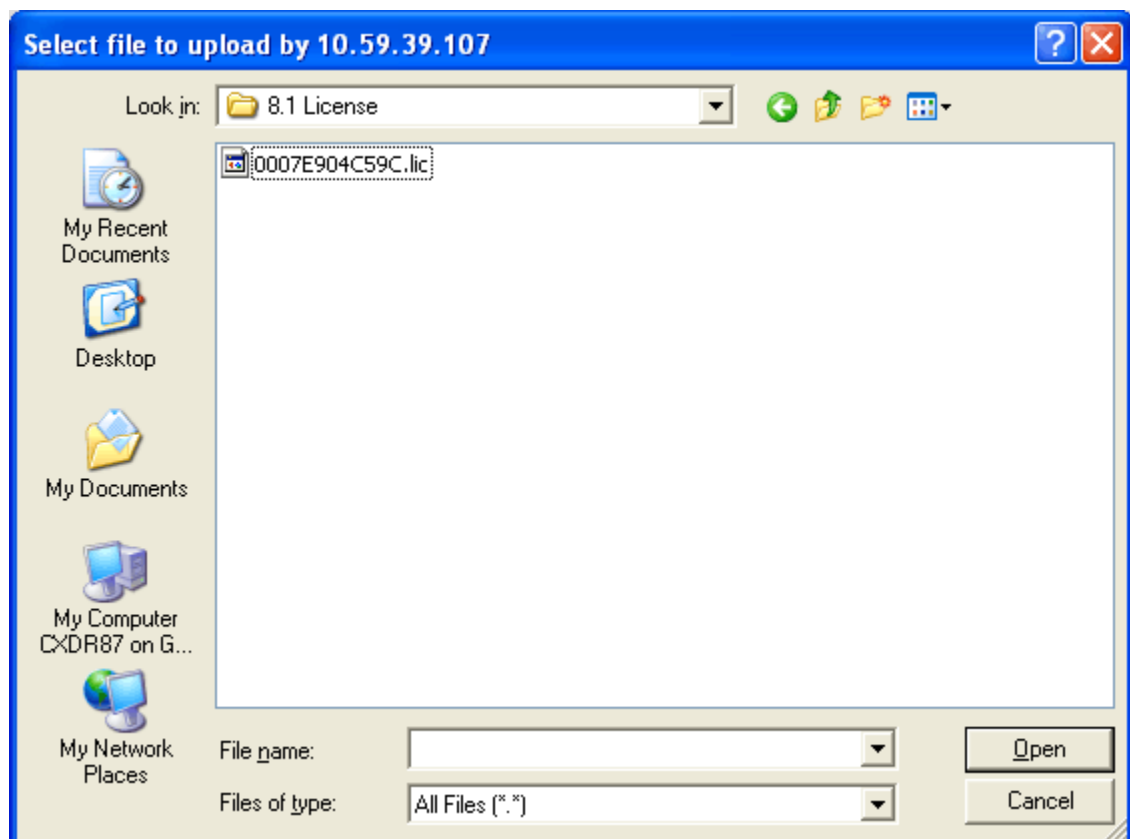


Navigate to the file and select it. Once you have selected the licensing file, click **Open**. The license information is updated.

Using an Authorization Code


To add licenses using authorization codes:

1. If you have an authorization code, select the **I have an authorization code** option and then click **Next**.

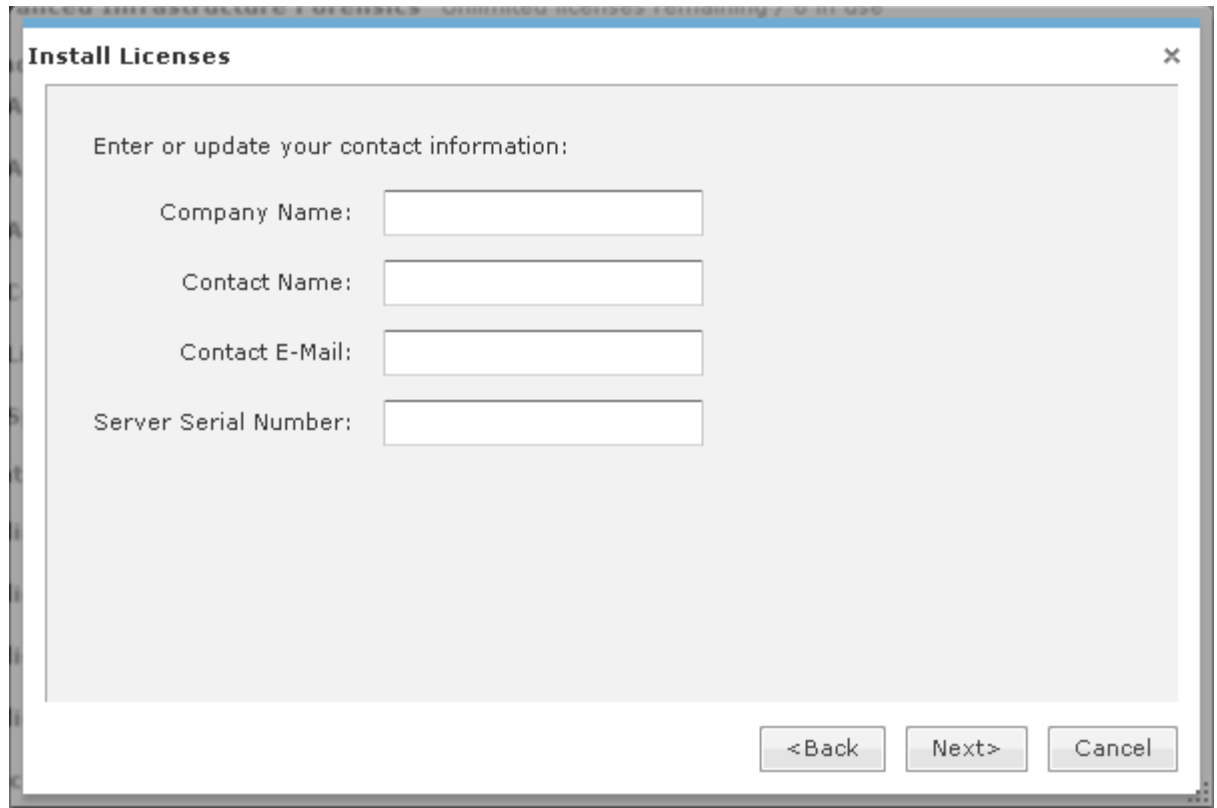

The screenshot shows a window titled "Install Licenses" with a close button (X) in the top right corner. Inside the window, there is a section titled "Enter or update your contact information:". Below this title are four text input fields, each preceded by a label: "Company Name:", "Contact Name:", "Contact E-Mail:", and "Server Serial Number:". At the bottom right of the window, there are three buttons: "<Back", "Next>", and "Cancel".

2. Enter your company name, contact name, email address, and server serial number. Click **Next**.

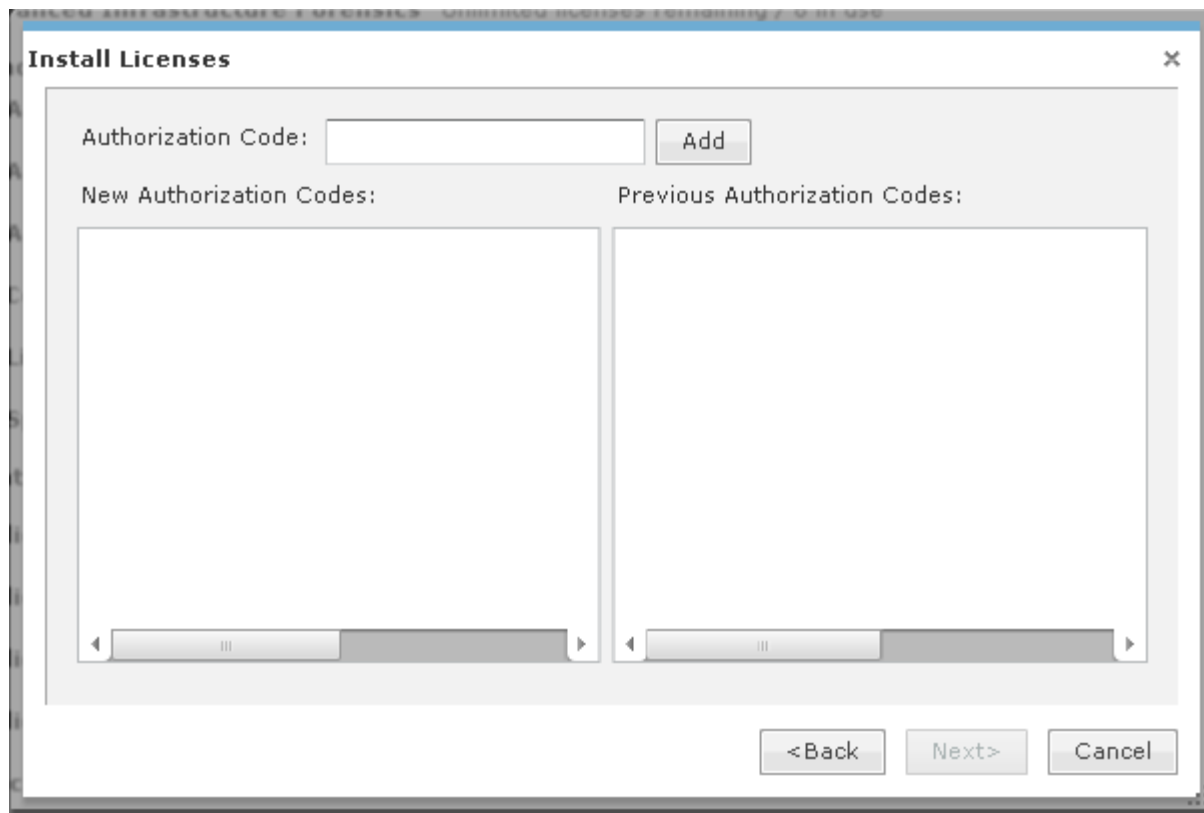

3. Enter your authorization code and then click the **Add** button. The authorization code is added to the **New Authorization Codes** list. Click **Next** to continue.

After the license is installed, the following message is displayed:

Licenses installed successfully.

Requesting a License

To request a license or to check if your requested license has been received:

1. Select the **I need to request a license** or check on a pending request option and then click **Next**.
2. Enter your company name, contact name, email address, and server serial number.
3. Click **Next**.

The system first checks to see if you have a pending license request. If a request has been made and the license has been received, it is installed.


After installation, the following message is displayed:

Licenses installed successfully.

4. If there are no pending request, follow the prompts to request a license.

Copy Appliance ID

You can display the appliances ID where you can copy it for later use. Click the **Appliance ID** button to display the ID.

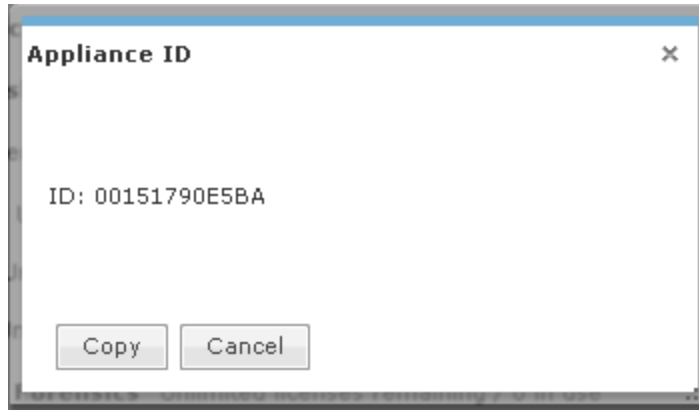


Once the ID is displayed, click the Copy button to copy the ID.

Download Appliance Keys

You can download appliance keys to your workstation from the Licenses window. Follow these steps to download appliance keys:

1. Click the **Appliance Keys** button.

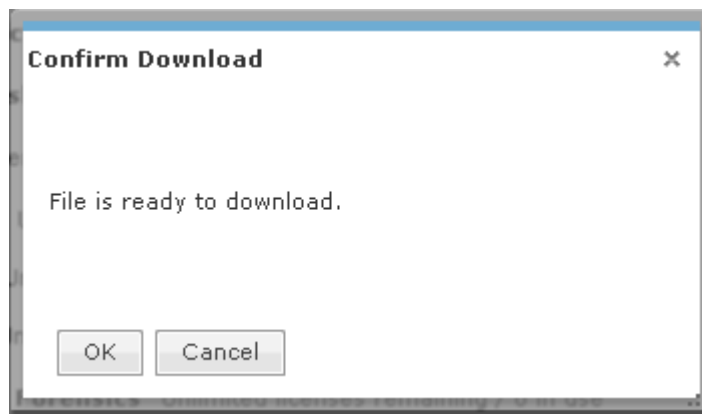

2. Click **OK**.
3. Navigate to the location where you want to save the appliance key file.
4. Click **Save**.

License Assignments

Use the **License Assignments** link to view which license is assigned to a device. You can also assign a license to a device. In case of a fixed license, you can assign a license to a device.




Note

Once you assign a fixed license to a device you cannot move it to another device.

View License Assignments

To view license assignments, click the **License Assignments** link. The **License Assignments** window displays.

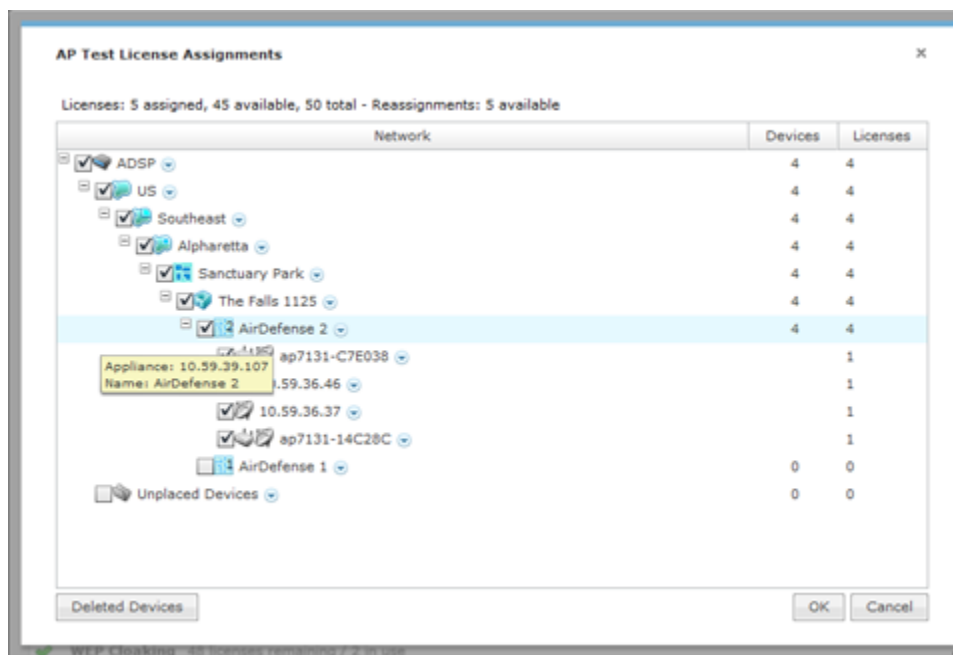

The following information is displayed:

- Total number of licenses
- Number of licenses assigned
- Number of licenses available
- Number of licenses available for reassignment
- List of licenses assigned to devices.

Assigning a License to a Device

This feature only allows you to assign a fixed license to a device. To do so, follow these steps:

1. Select a fixed license by clicking on the license name.
2. Click the **License Assignments** link. The **License Assignments** window displays.
3. Use the **Open Tree**  icon to open tree levels until the device that you want to assign a license to is displayed.
4. Click the checkbox for the device to select it.
5. Click the **OK** button. The fixed license is assigned to the device.

Open tree levels until all the devices that you want to assign a license to are displayed. Then, select the checkbox for each device to assign a license to each of these devices.

Tree Setup

Use the Tree Setup feature to configure your network tree.




Note

You must set up your network tree on order to take full advantage of the functionality of AirDefense!

Planning Your Network Tree

Your network tree automatically includes your appliance and any other appliance that you have added to your system. Each appliance can be expanded into a tree with five network levels and floors. Available network levels are:

- Country
- Region
- City
- Campus
- Building

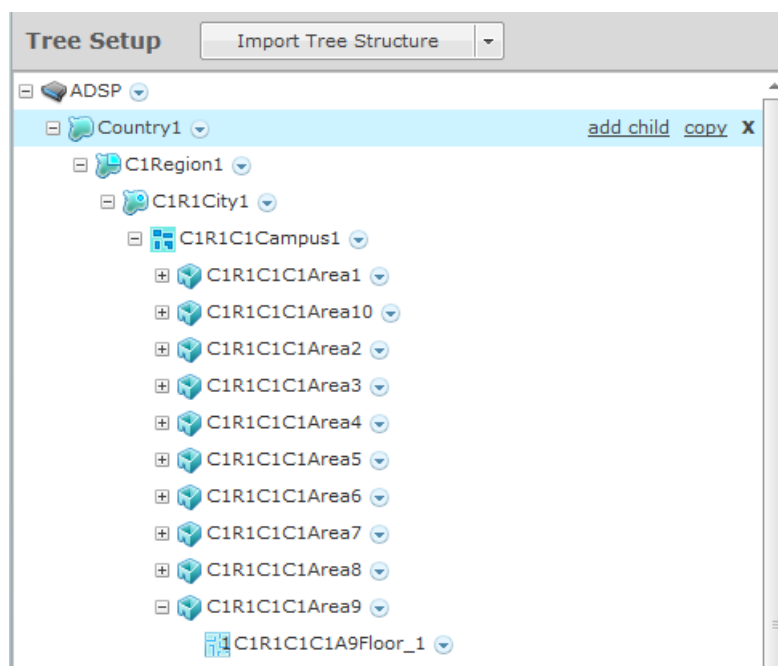

Deciding how to structure your network tree depends on:

- Whether you want to use triangulation for location tracking
- How you plan to apply policies to devices
- How the tree affects the scope in the UI

Triangulation Considerations

To use triangulation, you must load AirDefense appliance with a two-dimensional map of the floor your sensors are located on. Maps must be loaded at the floor level. You cannot use triangulation over multiple floors which means you cannot use sensors on different floors if you want to use triangulation.

Policy Considerations

When you are creating network levels, you should create profiles for similar devices that you expect to share common policies. Although you can certainly apply policies at the device level, it is a good practice to apply them at higher network levels, preferably at the appliance (AirDefense) level.

UI Scope Considerations

You control the scope of data you see at any time by selecting levels in the tree. If you want to view data from one area of your WLAN separately from data about the rest of the WLAN, such as different buildings/floors, you should consider how you can create network levels for that area. Then, viewing its data discretely is as easy as clicking on that node in the tree.

Combining Considerations

Example:

A company with four buildings with multiple floors plans to use triangulation. Two ADSP users each manage the WLAN security for one building, and a third user manages the two other buildings. An overall system security administrator oversees all users and buildings.

- Buildings A, B, C, and D = network level for each building
- Floors = network level for each floor in a building
- User management = select Scope Permissions for each user by editing User Accounts.
 - Building A is assigned to User 1
 - Building B is assigned to User 2
 - Building C and D are assigned to User 3
- For the overall administrator, select the system level in User Accounts.

Result:

Each user can see only the data for the building(s) he manages. Each user can apply policy and view data by floors within their building, and perform location tracking with triangulation by importing a map for each floor.

Building your Network Tree

While there are several important considerations when planning how to build your tree, actually building it is quite simple. Ideally, you should use **Tree Setup** under **Configuration > Appliance Platform** to build your tree. However, you can do it anywhere that there is access to the network tree. The person who installed AirDefense may have created all or part of your tree during setup. You can always revisit **Tree Setup** to add to or adjust your tree.

By default, your appliance is named ADSP. You add to your network tree starting at the appliance level. To begin defining your network tree, select (highlight) ADSP and then click the **add child** link on the right side of the highlighted area. A popup menu displays with a list of available network levels with the highest level at the top of the menu.



Create Network Levels

In **Tree Setup**, you add network levels by selecting an existing starting point in the tree and clicking the **add child** link. Any time you add a network level and an equivalent level already exists, it appears in the tree in alphabetical order.



Note

The menu will only display the network level that is available at the selected level. You cannot add a network level that is higher up in the network tree.

Click the network level that you want to add. The new level will be hidden under the parent level. Click the **Expand-Collapse**  button next to the parent to reveal the new network level. Then, select the folder representing the new level.



Note


If the parent of the new level already contain sensors, you cannot add a new level to it.

Click the network level that you want to add. The new level will be hidden under the parent level. Click the **Expand-Collapse**  button next to the parent to reveal the new network level. Then, select the folder representing the new level.




Note

If the parent of the new level already contain Sensors, you cannot add a new level to it.

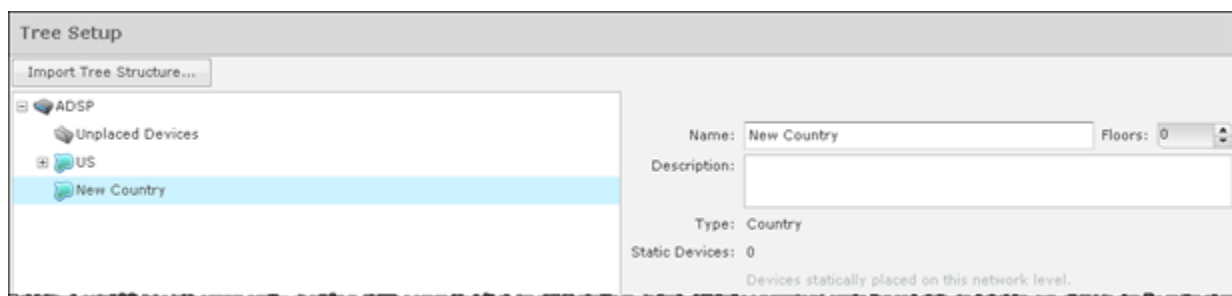

You can now name your new network level and give it a description. The name and description can be changed at any time. Repeat this process until you have defined your network tree.

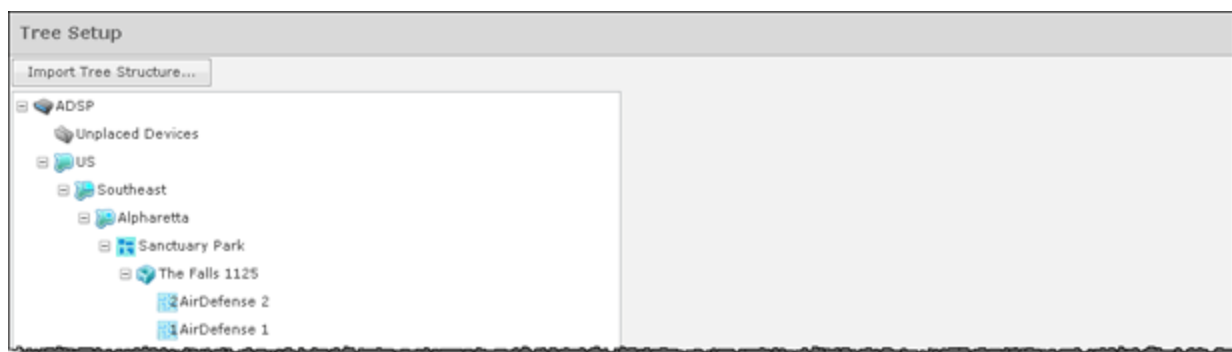

You can delete a network level by selecting (highlighting) it and then clicking the **Delete (X)** button on the right side of the highlighted area. A network level may not be deleted if contains static devices. Also, if the network level is the last level for an appliance, it may not be deleted.

Add Floors

You can add floors by selecting the building and then increasing the floor number using the **Floors** field.

A screenshot of a configuration form for 'The Falls 1125'. It includes a 'Name' field with the value 'The Falls 1125', a 'Floors' spinner set to '2', a 'Description' text area, a 'Type' dropdown set to 'Building', and a 'Static Devices' section showing '7' devices. A note at the bottom states 'Devices statically placed on this network level.'

Notice in the previous screenshot there are two floors (*AirDefense 1* and *AirDefense 2*) under the area (**The Falls 1125**). Floor numbers are displayed inside the **Floor** icon.

You can delete a floor by decreasing the floor number. The last floor is always deleted first.

Importing Your Network Tree

You can import a tree structure using the Import button. Comma delimited files are used to import a tree structure. The format of the file is:

```
record type (folder),server,Name,Description,Type,Floor
Number,Path(slash delimited)
```

There are different ways to create a comma delimited file but the most trouble-free way is to use a text editor, such as Notepad. Fields may be blank with no blank space between the commas (i.e., ,).

Examples:

```
folder,localhost,AirDefense 1,,Floor,1,US/Southeast/Alpharetta/Sanctuary Park/The Falls
1125
folder,localhost,AirDefense 2,,Floor,2,US/Southeast/Alpharetta/Sanctuary Park/The Falls
1125
```



Note

At this time, you can only import a tree structure to your local appliance. You do so by specifying localhost as your server.

You can edit existing tree structures using the **Import Tree Structure** button. Importing a new CSV files does not replace an existing tree structure; instead, you can use the commands add or delete at the end of an import line to incrementally add or remove scope levels from the existing tree structure.

The add and remove commands must be added to each line, separated by a comma, after the **Path** entry.

Examples:

```
folder,localhost,The Falls 1125,,Building,,US/Southeast/Alpharetta/Sanctuary Part/The
Falls 1125/Floor 2,add
folder,localhost,The Falls 1125,,Building,,US/Southeast/Alpharetta/Sanctuary Part/The
Falls 1125/Floor3,delete
```



Note

The add command is assumed when neither add or delete is used in a comma delimited file, and add is included in the default exportable CSV file.

The path to the new folder must be present in the existing tree or be previously defined in the import file. For example, in the previous example, the path US/Southeast/Alpharetta/Sanctuary Park/The Falls 1125 must already exist. Here is how you define that path:

```
folder,localhost,US,,Country,,
folder,localhost,Southeast,,Region,,US
folder,localhost,Alpharetta,,City,,US/Southeast folder,localhost,Sanctuary
Park,,Campus,,US/Southeast/Alpharetta
folder,localhost,The Falls 1125,,Building,,US/Southeast/Alpharetta/Sanctuary Park
```

Once you have finished building your network tree, click the **Apply** button to save your changes. This applies even when importing Auto-Placement rules with the Import Tree Structure button. You may click the **Reset** button to revert back to your previous network tree configuration.


Security Profiles

Security profiles are used to define the security configurations of sanctioned wireless clients on your wireless LAN. When a **Security Profile** is applied to your system, if the

Legacy Content Appliance Platform security thresholds for that profile are exceeded, a security alarm is generated. This allows you to monitor network security issues and address them in a timely manner. If there are no Security Profiles applied to your system, no security alarms are generated.


View Security Profiles

To access security profiles, go to **Configuration > Appliance Platform > Security Profiles**. Existing profiles are displayed in the right column.

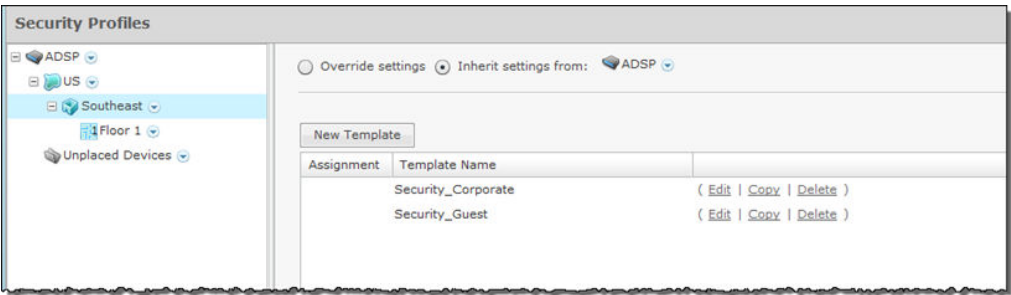

Modify Security Profiles

 You can edit, copy or delete any selected (highlighted) profile by clicking the appropriate link.




To copy or edit a profile, select (highlight) the **Security Profile**, click the **Copy** or **Edit** link, and then make changes in any of the three tabs. Click **OK** to save your changes.

Click the **Copy settings to all appliances** button to copy the defined Security Profiles and all profile assignments to all appliances in your system.



Note
You must have a Central Management license in order to copy settings to all appliances.

Click the **Apply** button to save your additions (changes). A confirmation overlay is displayed.

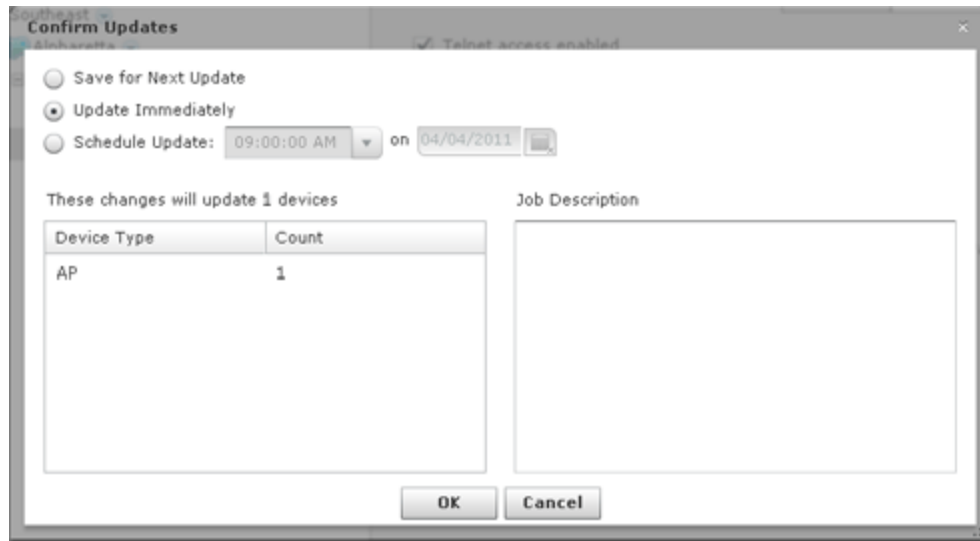

You have the option to save for the next update, update immediately or update later. If you choose to update later, you must supply a date and time. You can supply a description that will help identify the update later. A list of device types along with the number of affected devices that will be updated is displayed. Also, if applicable, a list of unsupported settings is displayed. Click **OK** to apply changes or **Cancel** to abort.

Updates to Security Profiles are treated as jobs and are included in **Job Status** under **Device Monitoring**. The description supplied in the confirmation helps identify jobs.

Click the **Reset** button to discard any additions (changes).

Add a New Security Profile


All profiles have three tabs that are used to set security threshold policies for your system, as follows:

- **General**—Names your Security Profile and specifies whether or not you want to:
 - Allow unsanctioned wireless clients.
 - Allow SSID broadcast to be seen in the beacon.
 - Enable wireless client isolation.
- **Privacy**—Enables privacy monitoring for:
 - Base 802.11 authentication (Open or Shared)
 - Extended 802.11 authentication (WPA, WPA2, or Symbol KeyGuard)
 - Advanced key generation
 - 802.11 encryption
 - Other encryption methods such as Cranite, AirFortress, IP-Sec, or other ethertypes.
- **Rates**—Selects transmit and receive data rates for BSSs to use.

Profiles are built using a template. Click the **New Template** button to add a new profile. Then, define your **Security Profile** using the **General**, **Privacy**, and **Rates** tabs. Once you have defined your Security Profile, click **OK** to save your profile or **Cancel** to exit without saving the profile.

General Tab

The **General** tab is where you name your Security Profile and specify whether or not you want to use certain functions.

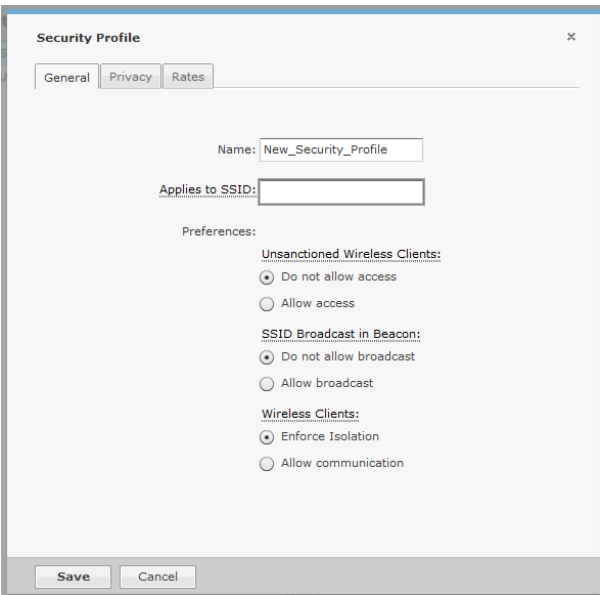

The **Name** field specifies the profile name. If you are adding or copying a Security Profile, ADSP gives the profile a default name beginning with New_Security_Profile and ending with a system generated number. You should change the default name to one that is more appropriate to its function. Once you save your profile, you cannot change the name.

The **Applies to SSID** field specifies a SSID that the Security Profile applies to. This must be a valid SSID used in your system. The **Preferences** are:

Preference	Description
Unsanctioned Wireless Clients	Choose to allow unsanctioned Wireless Clients or not to allow unsanctioned Wireless Clients in your system.
SSID Broadcast in Beacon	Choose to allow the BSS SSID to be broadcast in its beacon or not to allow the BSS SSID to be broadcast in its beacon. SSIDs are not passwords. Many BSSs allow their SSIDs to broadcast by default.
Wireless Clients	Choose to allow Wireless Clients to be isolated in your system or allow Wireless Clients to communicate in your system.

Privacy Tab

The **Privacy** tab contains options you can use to enter settings regarding transmission privacy.

Security Profile

General

Privacy

Rates

☒ Monitor Privacy Settings

Base 802.11 Authentication

☐ Open

☐ Shared

Advanced Key Generation

☐ PSK (pre-shared key)

☐ 802.1x EAP-FAST

☐ 802.1x EAP-TLS

☐ 802.1x EAP-TTLS

☐ 802.1x EAP-GTC

☐ 802.1x RSA/PKA

☐ 802.1x RSA/SID

☐ 802.1x PEAP

☐ 802.1x LEAP

☐ 802.1x Other EAP

Extended 802.11 Authentication

☐ WPA

☐ Symbol KeyGuard

☐ WPA2

802.11 Encryption

☐ Unencrypted Allowed

☐ TKIP

☐ WEP

☐ AES(CCMP)

Other Encryption

☐ Cranite

☐ IP-Sec

☐ AirFortress

☐ Other Ethertypes allowed

Save

Cancel

You must check the **Monitor Privacy Settings** checkbox to activate the functions. The functions are:

Function	Description
Base 802.11 Authentication	Open - When this checkbox is selected, open system authentication does not actually provide authentication; it only performs identity verification through the exchange of two messages between the initiator (Wireless Client) and the receiver (wireless). Shared - When selected, shared key authentication provides authentication by verifying that an initiator has knowledge of a shared secret. Under the 802.11 standard, it is assumed that the shared secret is sent to the wireless over a secure channel that is independent of 802.11. In practice, the shared key authentication secret is manually distributed and typed.
Extended 802.11 Authentication	WPA - Select to activate Wi-Fi Protected Access, which uses improved data encryption through the temporal key integrity protocol (TKIP). TKIP scrambles the keys using a hashing algorithm and, by adding an integrity-checking feature, ensures that the keys haven't been tampered with. WPA2 - Short for Wi-Fi Protected Access 2, this checkbox enables the follow on security method to WPA for wireless networks that provide stronger data protection and network access control. It provides enterprise and consumer Wi-Fi users with a high level of assurance that only authorized users can access their wireless networks. Based on the IEEE 802.11i standard, WPA2 provides government grade security by implementing the National Institute of Standards and Technology (NIST) FIPS 140-2 compliant AES encryption algorithm and 802.1x-based authentication. Symbol KeyGuard - When this checkbox is selected, it activates Symbol KeyGuard authentication protocols, which is provided by Symbol.

Function	Description
Advanced Key Generation	PSK (preshared key) - When selected, it activates the Pre-shared Key authentication. 802.1x EAP-FAST - When selected, it keys 802.1X EAP Flexible Authentication via Secure Tunneling. 802.1x EAP-TLS - When selected, it keys EAP Transport Level Security. 802.1x EAP-TTLS - When selected, it keys EAP Tunneled Transport Layer Security. 802.1x EAP-GTC - When selected, it keys EAP Generic Token Card. 802.1x RSA/PKA - When selected, it keys EAP RSA Public Key Authentication Protocol. 802.1x RSA/SID - When selected, it keys EAP RSA SecurID. 802.1x PEAP - When selected, it keys any 802.1X Protected Extensible Authentication Protocol (PEAP). 802.1x LEAP - When selected, it keys EAP Lightweight Extensible Authentication Protocol. 802.1x Other EAP - Keys any 802.1x EAP authentication/key distribution mechanism other than the types previously mentioned.
802.11 Encryption	Unencrypted Allowed - Select this checkbox to allow no 802.11 encryption for wireless traffic. TKIP - When selected, this enables the BSS to advertise support for Temporal Key Integrity Protocol (TKIP). WEP - When selected, causes the BSS and Wireless Client to use WEP as their encryption policy. AES (CCMP) - When selected, causes the BSS to advertise support for Advanced Encryption Standard (AES-CCMP).
Other Encryption	Cranite - When selected, enables AP usage of Layer 3 Cranite encryption. AirFortress - When selected enables AP usage of Layer 3 Airfortress encryption. IP-Sec - When selected, enables AP usage of Layer 3 IP security protocol as encryption. Other Ethertypes allowed - When selected, enables AP usage of other Layer 3 encryption mechanism which is not specified here.

Rates Tab

The **Rates** tab is where you can select transmit and receive data rates for BSSs to use.

Security Profile [X]

General Privacy **Rates**

☒ **Monitor Rates Settings**

☐ 1 Mbps
☐ 2 Mbps
☐ 5.5 Mbps
☐ 6 Mbps
☐ 9 Mbps
☐ 11 Mbps
☐ 12 Mbps
☐ 18 Mbps
☐ 22 Mbps
☐ 24 Mbps
☐ 33 Mbps
☐ 36 Mbps
☐ 48 Mbps
☐ 54 Mbps

1SS 2SS 3SS 4SS

(20 MHz, 1)

☐ 6.5 - 7.2 Mbps
☐ 13 - 21.7 Mbps
☐ 26 - 43.3 Mbps
☐ 52 - 72.2 Mbps
☐ 78 - 86 Mbps

(40 MHz, 1)

☐ 13.5-15 Mbps
☐ 27 - 45 Mbps
☐ 54 - 90 Mbps
☐ 108 - 150 Mbps
☐ 162 - 200 Mbps

(80 MHz, 1)

☐ 29-32 Mbps
☐ 58 - 97 Mbps
☐ 117 - 195 Mbps
☐ 234 - 325 Mbps
☐ 351 - 433 Mbps

Save Cancel

You must check the **Monitor Privacy Settings** checkbox to activate the settings. Select the transmit and receive data rates you want BSSs to use.

Apply a Security Profile

Once you have defined and added a Security Profile, you must apply it to your system

Security Profiles

ADSP

☒ Enable configuration

New Template Copy settings to all appliances

Assignment	Template Name	
☒	Security_Corporate	(Edit Copy Delete)
☐	Security_Guest	(Edit Copy Delete)




Note

You may select multiple Security Profiles by checking more than one checkbox.

You should always apply a Security Profile at the appliance level. When you do, the profile is inherited for all the other levels. Then, if you have a level that needs a different Security Profile, you can apply that profile to that level. For example, in the above screenshot, the Security Profile for AirDefense is the `Security_Corporate` profile. Then,

for a special case, you can override the Security Profile at the AirDefense level and apply the `Security_Guest` profile to the `Floor_1` network level.

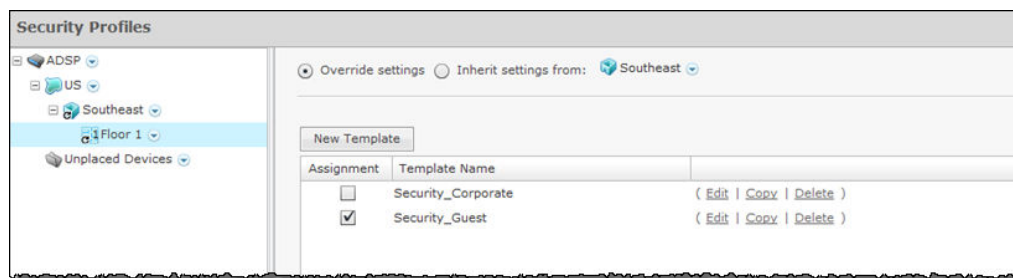

Note

The **Override settings** option is available when you select (highlight) a network level below the appliance level. Use the **Expand**  button to reveal the other levels.

Click the **Apply** button to save your changes. Click the **Reset** button to discard your changes.

Auto-Placement Rules

Auto-Placement rules determine where devices will be placed in the network tree when they are imported. Any device that has the specified parameter(s) and qualifying value(s) will be placed in the selected network level.

Auto-Placement Rules for Devices

Auto-Placement rules can be used in two ways: one method is for sensors and the other is for APs and switches.

- [Sensors](#) on page 514
- [APs and Switches](#) on page 514

Sensors

Auto-Placement rules for sensors are applied every 20 minutes. If a rule exists, new sensors in the **Unplaced Devices** folder are moved into a predefined scope level. This only happens to sensors seen in your network since the last 20 minute poll. Sensors seen before the last 20 minute poll are excluded.

APs and Switches

Auto-Placement rules for APs and switches are applied when APs or switches are manually added/imported into a system using the following conditions:

- If a rule exists, the AP or switch is moved into the predetermined scope level.
- If no rule exists, the AP or switch is moved into the **Unplaced Devices** folder.
- Adopted APs discovered from a controller but without an applicable auto-placement rule are placed in the same folder as the controller.

- If no Auto-Placement rules criteria match the device, it will be placed in the **Unplaced Devices** folder.
- IP based placement uses a single IP address for each device. The selected IP address for Auto-Placement is the first available address on the following ordered list of IP addresses learned by AirDefense.
 - The first IP address on the list is the Devices Management IP Address. This is the IP address that AirDefense uses to communicate with the device. Due to the use of NAT in the network, this IP address may be different than the actual configured IP address of the device.
 - The second IP address is the address that the switch provides to AirDefense for the AP. In adaptive or adopted mode where the AP is discovered through the switch, the system will use the IP address that the switch has provided for the AP. This IP address is only used by AirDefense for this purpose and is not saved by AirDefense. It is not used as a configured or managed IP address for the device, and it will not be displayed by AirDefense.
 - The switch's IP address will be used for Auto-Placement of the AP if the previous two IP addresses are not available. The switch's management address is the IP address that is used by AirDefense to communicate with the switch. It may NOT be the switch's configured IP address.

Auto-Placement Rules

Auto-placement rules determine where devices will be placed in the network tree when they are imported.

Rules for localhost

Sequence	Destination Folder
1	The Falls 1125 > AirDefense 2
2	The Falls 1125 > AirDefense 2
3	The Falls 1125 > AirDefense 1
4	The Falls 1125 > AirDefense 2
5	The Falls 1125 > AirDefense 2
6	The Falls 1125 > AirDefense 1
7	The Falls 1125 > AirDefense 2
8	The Falls 1125 > AirDefense 1

Place in Folder
 localhost

Device Selection Rules:

Parameter	Value



Note

Before you can define any Auto-Placement rules, the network tree must already be configured.

Add Auto-Placement Rules

Follow these steps to add a new auto-placement rule:


1. Click the **Add** button.

The new rule is added to the list of rules and is automatically selected (highlighted) in the **ADD** drop-down menu.



Note

You may optionally choose where you want the new rule to be placed by selecting a placement item from the drop-down menu. (Inset At End is the default.)

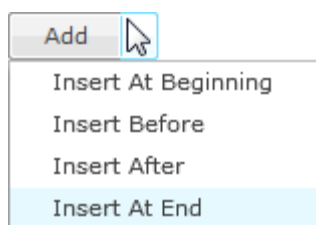

2. Using the **Place devices in scope** drop-down menu, select a scope to place devices when rule is applied.
3. Select one or more of the **Device Selection Rules**, and specify a value for each rule using the following criteria:

Field	Description
Network Address	The device's network address.
IP Range	A range of IP addresses that the device(s) must fall within.
MAC Address	A range of MAC addresses that the device(s) must fall within.
DNS Server	The DNS server that the device(s) are using. This parameter only works with sensors not APs and switches.
Uses DHCP	Specify whether or not DHCP is used (True or False). This parameter only works with sensors not APs and switches.
Device Name	The name of the device.
Model Name	The model number of the device.
Firmware Version	The firmware version the device has installed.
Serial Number	The serial number of the device.

- Click **Apply** to activate the new rule.



Note

You may click **Reset** to disregard any changes to the rules.

Auto-Placement rules are applied in sequence. You should prioritize your rules so that the most important ones are applied first. Use the **Move Up** or **Move Down** buttons to arrange the list of rules.

You may delete a selected (highlighted) rule by clicking the **Delete** button.

Click the **Place Unplaced Devices** button to move unplaced devices to a network folder using the existing Auto-Placement rules.

Click the **Apply** button to save any additions or changes. This applies even when importing Auto-Placement rules with the **Import** button.

Import Auto-Placement Rules

You can import Auto-Placement rules using the **Import** button. Comma delimited files are used to import Auto-Placement rules. The format of the file is:

```
autoplacement_rule,server,Path,Network Address,IP Range,MAC Address,DNS
Server,Uses DHCP, Device Name,Model Name,Firmware Version,Serial Number
```

There are different ways to create a comma delimited file but the most trouble-free way is to use a text editor, such as Notepad.

Things to Remember:

- The first field for importing Auto-Placement rules must be `autoplacement_rules`.
- At this time, the only valid server name is `localhost`.
- Fields may be blank with no blank space between the commas (i.e., „).
- Path names must begin with a slash (/) and include a slash (/) between network levels. Also, the path must already be present in the existing network tree.
- For fields with a range, you must include a range even if there is only one IP address or one MAC address (For Example `1.1.1.1-1.1.1.1`).

Example:

```
autoplacement_rule,localhost,/USA/AutoPlacementTest/
Floor1,,172.17.17.0-172.17.17.19,,,,,6.0.196.0
autoplacement_rule,localhost,/USA/AutoPlacementTest/
Floor6,,172.17.15.0-172.17.15.200,,,,,6.0.196.0
autoplacement_rule,localhost,/USA/AutoPlacementTest/Floor
4,172.17.18.0/24,172.17.18.100-172.17.18.101,
00:16:5d:20:47:60-00:16:5d:20:47:61,172.17.0.83,disable,BA-
Sensor-240,M520,5.2.0.11.1234567890
```

Auto-Licensing


Auto-Licensing allows you to select licenses to be assigned to devices upon discovery. You can define licensing rules for importing BSSs and Wireless Clients into your network system.

You may define Auto-Licensing at the appliance network level all the way down to the floor network level, but you should always define Auto-Licensing at the appliance level. Any network level below the appliance level will inherit the configuration. If you need to have a different configuration below the appliance level, use the **Override settings** option.



Note

The **Override settings** option is available when you select (highlight) a network level below the appliance level. Use the **Expand**  button to reveal the other levels.

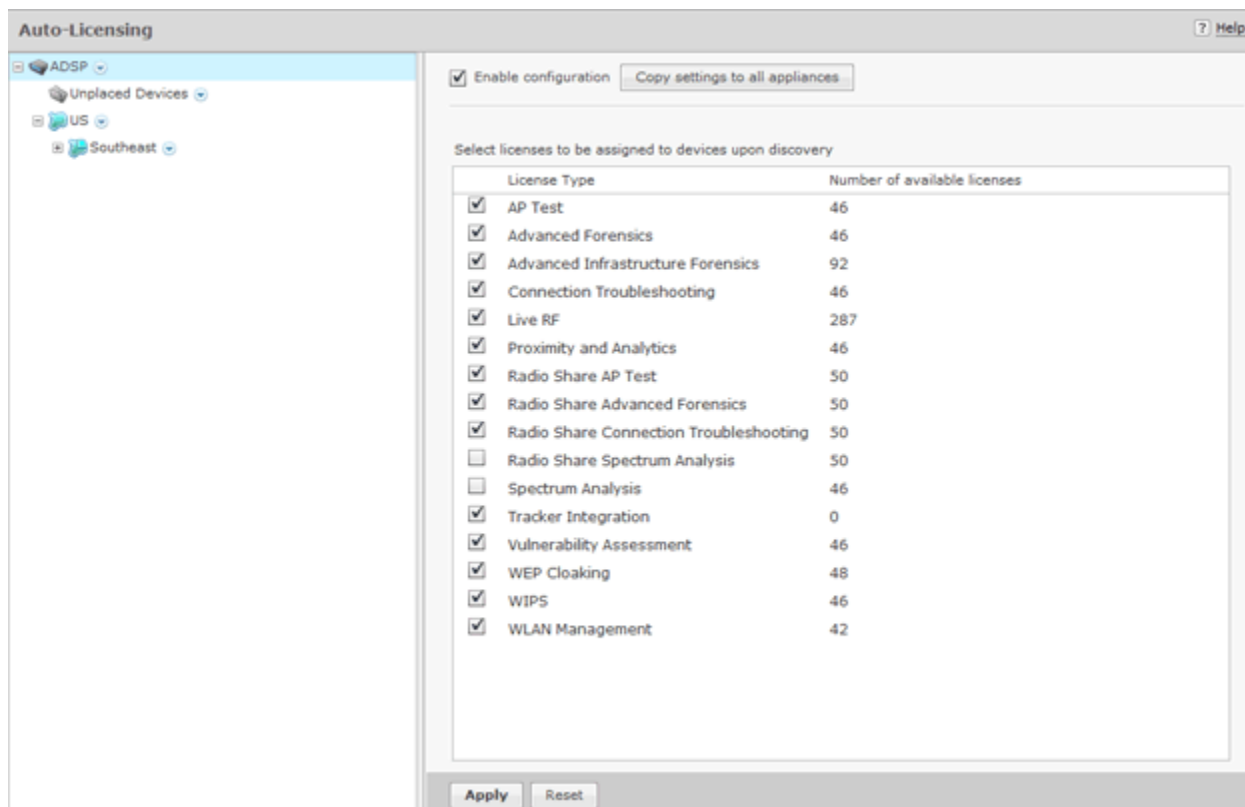

License Type	Number of available licenses
☒ AP Test	46
☒ Advanced Forensics	46
☒ Advanced Infrastructure Forensics	92
☒ Connection Troubleshooting	46
☒ Live RF	287
☒ Proximity and Analytics	46
☒ Radio Share AP Test	50
☒ Radio Share Advanced Forensics	50
☒ Radio Share Connection Troubleshooting	50
☐ Radio Share Spectrum Analysis	50
☐ Spectrum Analysis	46
☒ Tracker Integration	0
☒ Vulnerability Assessment	46
☒ WEP Cloaking	48
☒ WIPS	46
☒ WLAN Management	42

The following rules apply:

- Only selected licenses (identified by a checkmark) are assigned.
- You can narrow the scope by selecting a network level from the network tree.
- A license will not be assigned if there are no available licenses.
- After a license assignment, the number of licenses are reduced accordingly.

Click the **Apply** button to save your changes. A confirmation message **Successfully saved configuration** is displayed next to the **Reset** button. Click the **Reset** button to return rules as they were.

If there are multiple appliances in your system, once you have defined the device import rules, you can copy the configuration to all appliances in your system by clicking **Copy settings to all appliances** button.



Note


You must have a Central Management license in order to copy settings to all appliances.

Communication Settings Profile

The Communication Settings feature is used to configure SNMP connectivity and enable common features supported by APs and switches.

View Communication Settings Profile

To access communication settings, go to **Configuration > Appliance Platform > Communication Settings**. Existing profiles are displayed in the right column.

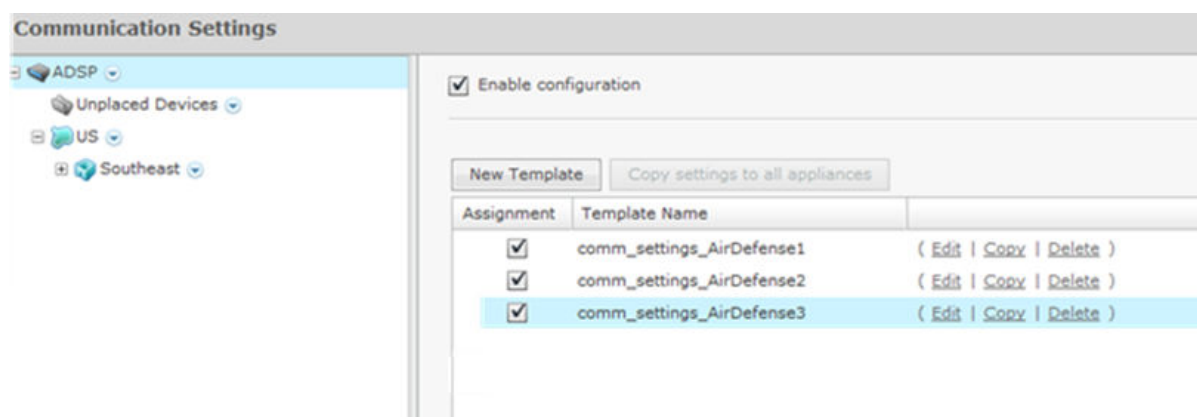

Modify Communication Settings Profile

You can edit, copy or delete any selected (highlighted) profile by clicking the appropriate link.

Assignment	Template Name	
☒	comm_settings_AirDefense1	(Edit Copy Delete)

To copy or edit a profile, select (highlight) the profile, click the **Copy** or **Edit** link, and then make changes in any of the three tabs. Click **Save** to save your changes.

The **Copy settings to all appliances** button will copy Communication Settings to all appliances in your system.



Note

It is recommended that you do not modify the default profiles for the following reason: when you apply a profile, ADSP will search the existing profiles list for the best match, starting at the top of the list and working its way down to the bottom of the list. In order for this event to work properly, the default profiles should not be changed.

Add a New Communications Settings Profile

Click the **New Template** button to add a new profile using the **Communication Settings Profile** window. Then configure your communication settings using the following tabs:

- [SNMP Tab](#) on page 520
- [Console Tab](#) on page 521
- [HTTP Tab](#) on page 522

SNMP Tab

Use the **SNMP** tab to configure connectivity settings for SNMP devices.

A screenshot of the 'Communication Settings Profile' window, specifically the 'SNMP' tab. The window has a title bar with a close button. Below the title bar, there's a 'Profile Name' field with the text 'New_comm_settings_pro'. Below that are three tabs: 'SNMP', 'Console', and 'HTTP', with 'SNMP' being the active tab. Under the tabs, there's a checkbox labeled 'Enable SNMP settings' which is checked. Below this is a 'Versions' dropdown menu set to 'V2'. Then there are two password fields: 'Read Community' and 'Write Community', both containing asterisks. To the right of these is a checkbox labeled 'Display Passwords' which is unchecked. Below the community strings are fields for 'Port' (161), 'Timeout in ms' (300), and 'Retries' (3). At the bottom, there's a 'User' field, followed by 'Auth Algorithm' (MD5) and 'Privacy Algorithm' (DES), each with a corresponding 'Passphrase' field. At the very bottom are 'Save' and 'Cancel' buttons.

The following SNMP fields can be set:

Field	Description
Profile Name	Enter a name that you want for the new profile. Once the profile is saved, its name cannot be changed when editing the profile.
Enable SNMP Settings	Select the checkbox to enable (default) SNMP communications settings.
Versions	Select V2 or V3 as the SNMP version used.
Read Community	Enter the Read Community string, which is used for the SNMP authentication. You also have an option to display passwords while typing them.

Field	Description
Write Community	Enter the Write Community string, which is used for the SNMP authentication.
Port	Enter the Simple Network Management Protocol number for the devices. This is normally set to 161, but it can be different.
Timeout in MS	Enter a timeout value in milliseconds to connect to a SNMP device.
Retries	Enter a maximum number of retries that can be made while attempting to connect to a SNMP device.
User	Enter the name of the V3 user, which is configured on the switch for SNMP V3 access.
Auth Algorithm	The authentication algorithm is a SNMP V3 parameter that must match what is set on the device. The options are MD5, SHA and None. You must also supply a passphrase which must also match what is set on the device.
Privacy algorithm	The privacy algorithm is a SNMP V3 parameter that must match what is set on the device. The options are DES, 3DES, AES128, AES192, AES256 and None. You must also supply a pass-phrase which must also match what is set on the device.

Console Tab

Use the **Console** tab to supply login credentials for devices that interface with a console.

The screenshot shows a 'Communication Settings Profile' dialog box with the 'Console' tab selected. The 'Profile Name' field contains 'New_comm_settings_pro'. Below the tabs, there is a checkbox for 'Enable Console settings' which is unchecked. Under this, there are input fields for 'User:', 'Password:', and 'Enable Password:'. To the right of the 'Password:' field is a checkbox for 'Display Passwords' which is also unchecked. Below these is a 'Protocol:' dropdown menu set to 'SSH' and a 'Port:' input field set to '22'. At the bottom of the dialog are 'Save' and 'Cancel' buttons.

The following fields must be set when using a console to interface with a device:

Field	Description
Enable Console Settings	Select this checkbox to enable Console communications settings.
User	The user name used to log into a device.
Password	The password used to log into a device. You also have an option to display passwords while typing them.
Enable Password	The enable password must be supplied in order to enter the enable mode.
Protocol	The protocol used to log into a device. The available options are SSH and Telnet.
Port	The port number that is used for communications. Port 22 is normally used but it may be another port number.

HTTP Tab

Use the **HTTP** tab is to configure login credentials for the devices that use a web UI to interface with them.

The screenshot shows a window titled "Communication Settings Profile" with a close button (X) in the top right corner. Inside the window, there is a "Profile Name" field containing the text "New_comm_settings_pro". Below this, there are three tabs: "SNMP", "Console", and "HTTP". The "HTTP" tab is currently selected. Under the "HTTP" tab, there is a checkbox labeled "Enable HTTP settings" which is unchecked. Below this checkbox are four fields: "User:" followed by an empty text box, "Password:" followed by an empty text box, "Protocol:" followed by a dropdown menu showing "HTTP", and "Port:" followed by a text box containing the number "80". To the right of the "Password:" field is a checkbox labeled "Display Password" which is also unchecked. At the bottom of the window, there are two buttons: "Save" and "Cancel".


The following fields must be set when using a web UI to interface with a device:

Field	Description
Enable HTTP Settings	Select this checkbox to enable HTTP communications settings.
User	The user name used to log into a device.
Password	The password used to log into a device. You also have an option to display passwords while typing them.
Protocol	The protocol used to log into a device. The available options are HTTP and HTTPS.
Port	The port number that is used for communications. Port 80 is normally used but it may be another port number.

Once you have configured your communication settings, click **Save** to save your profile or **Cancel** to exit without saving the profile.

Apply a Communication Settings Profile

Once you have defined a Communication Settings Profile, you must apply it to your system. To configure Communication Settings, you must first select the **Enable configuration** checkbox to activate the settings.

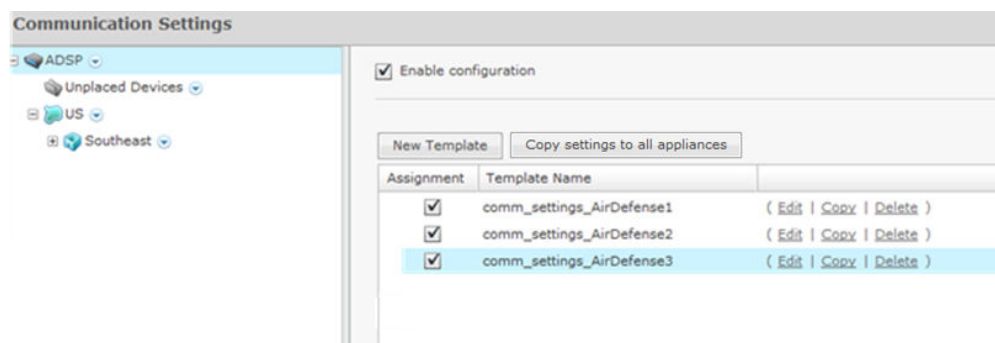


You should always configure Communication Settings at the appliance level. When you do, the configuration is inherited for all the other levels. Then, if you have a level that needs a different configuration, you can apply that profile to that level using the override feature.

For example, if most of the network devices require a console to interface with it, you can configure the Communication Settings for console interface at the appliance level. Then, if you have a small group of devices that require you to interface with it through a web UI, you can configure the Communication Settings for HTTP interface and override the appliance level configuration by selecting another network level.



Note

The **Override settings** option is available when you select (highlight) a network level below the appliance level. Use the **Expand**  button to reveal the other levels.

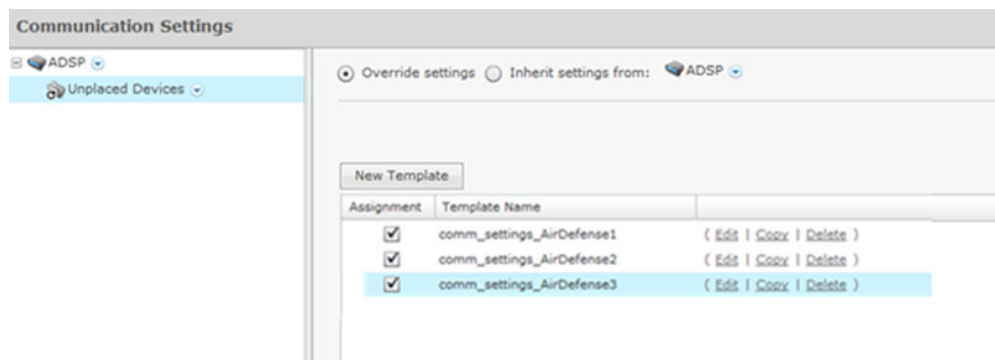

Note

You may select multiple **Communication Settings Profiles** by checking more than one checkbox. If more than one profile is selected, ADSP will attempt to find the best match to apply starting at the top of the list and working its way down to the bottom of the list.

Click the **Apply** button to save your changes. Click the **Reset** button to discard your changes.

Import Communications Settings

You may import Communications settings for a device using one of the following methods:

- Manually via **Menu > Import and Discovery**(see [Import and Discovery](#).)
- Through a schedule via **Configuration > Appliance Platform > Import/Discover Devices** (see [Import/Discover Devices](#) to learn how to set up a schedule)
- Through your appliance CLI with the import command (see [Import/Discover Devices](#) for command syntax).

Importing communications settings require a separate import file. You should not combine importing communications settings with importing devices. Also, when importing communications settings for a device, the device must be imported into ADSP first.

Comma delimited files are used to import communications settings. There are different ways to create a comma delimited file but the most trouble-free way is to use a text editor, such as Notepad.

The import file is used to populate the fields in the four communication settings tabs. You can populate as many of the fields as you like. The import file fields required the same values as the communication settings in the three tabs.

There are two records associated with communications settings:

- `comm_settings` - used to import a named Communication Settings Profile into the ADSP system.
- `comm_settings_loc` - used to apply previously-imported Communication Settings Profiles to a level in the ADSP (either a folder or specific device).

The fields for the `comm_settings` record are:

- Import type (must be `comm_settings`)
- Profile name
- SNMP version (1, 2, or 3)
- SNMP read community
- SNMP write community
- SNMPv3 username
- SNMPv3 authentication passphrase
- SNMPv3 privacy passphrase
- SNMPv3 authentication algorithm (None, MD5, or SHA)
- SNMPv3 privacy algorithm (3DES, DES, AES128, AES192, AES256, or None)
- SNMP port
- SNMP timeout (in milliseconds)
- SNMP number of retries
- Console user
- Console password
- Console enable password
- Console protocol (SSH or Telnet)
- Console port
- HTTP user
- HTTP password
- HTTP protocol (HTTP or HTTPS)
- HTTP port

Examples:

```
comm_settings,ProfileName,3,public,private,snmpV3user,snmpV3authpassphr,snmpV3privpassphr,MD5,3DES,161,300,4,Cisco,Cisco,Cisco,SSH,22,admin,adminpassword,https,443
```



Note

Although the above example is shown on multiple lines, all entries must be on a single line with no line breaks or carriage returns.

The fields for the `comm_settings_loc` record are:

- Import type (must be `comm_settings_loc`)
- Profile name
- MAC address or folder path (required field)
- Device type (ap, switch, or folder)

Once the communication settings are imported, they will override any inherited settings. To see the new communication settings, go to the device's properties and select **Communication Settings**.

Examples:


```
comm_settings_loc,ProfileName,00:23:04:5e:d3:00,ap
comm_settings_loc,ProfileName,/US/Southeast/AirDefense,folder3
```

**Note**

For communications settings applied to a folder, the final field (device type) must be folder.

Polling

ADSP uses a centralized Polling feature to manage configuration audits, status polling and data collections from one location.

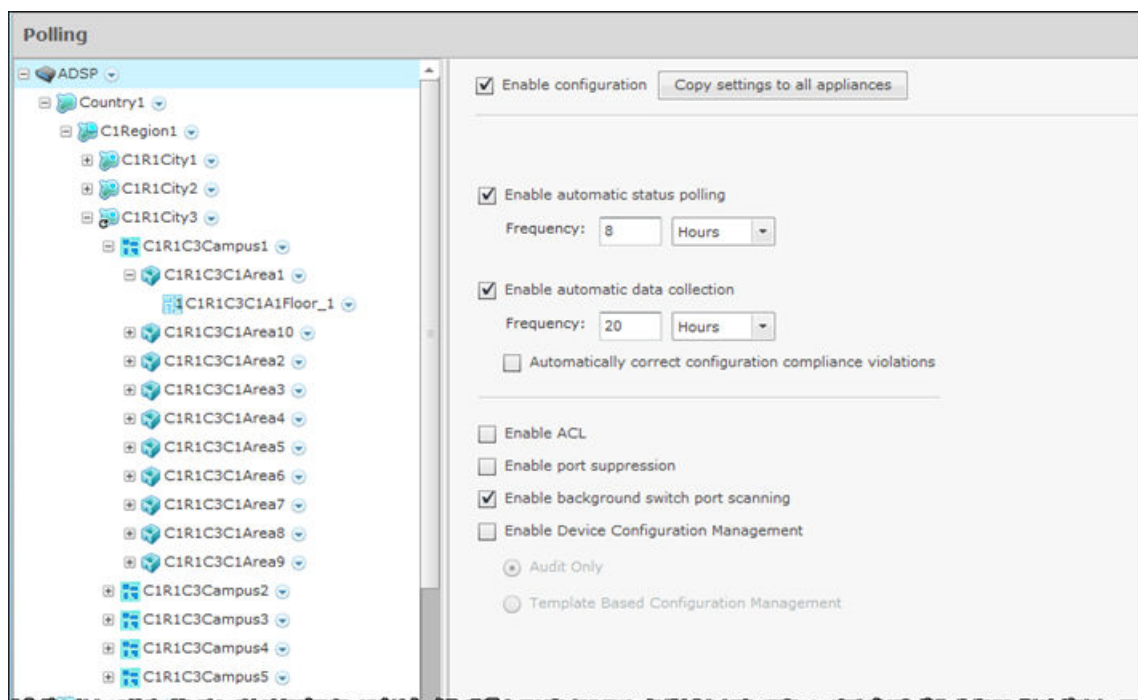

You have an option to enable polling for supported devices. When enabled, WMS automatically polls for device network status at an interval defined by a user supplied frequency value (default frequency is 1 hour).

You may configure polling at the appliance network level all the way down to the floor network level, but you should always configure polling at the appliance level. Any network level below the appliance level will inherit the configuration. If you need to have a different configuration below the appliance level, use the **Override settings** option.

**Note**

The **Override settings** option is available when you select (highlight) a network level below the appliance level. Use the **Expand**  button to reveal the other levels.

Select the **Enable automatic status polling** checkbox to enable polling for supported devices. When enabled, WMS automatically polls for device network status at an interval defined by the supplied **Frequency** value.

Each device model has an associated data collection profile which identifies the list of attributes collected periodically from the device. Select the **Enable automatic data collection** checkbox to collect these SNMP attributes at a **Frequency** defined by you. You can also select the **Automatically correct configuration compliance violations** checkbox to enable ADSP to correct configuration compliance violations by uploading the last approved configuration to the target device.

The following features can be enabled by selecting the appropriate checkbox:

- ACL
- Port suppression
- Background switch port scanning
- Device configuration management (must select Audit Only - configuration from device or Template Based Configuration Management - configuration from CLI profile).

If you have a Central Management license and there are multiple appliances in your system, after configuring polling, you can copy the configuration to all appliances in the system.

Click the **Apply** button to save your changes. Click the **Reset** button to discard your changes.

Import/Discover Devices

Import/Discover Devices is used to schedule imports from one of the following sources:

- Remote file
- SNMP discovery using a list of networks to scan.

Go to **Configuration > Appliance Platform > Import/Discover Devices**. Click the **Add** button to get started.

Imported APs, switches and sensors will be placed in the network tree according to Auto-Placement rules. Therefore, you must define the [auto-placement rules](#) before importing any of these devices.

All imported devices will be classified according to [auto-licensing](#) rules.

Wireless devices (BSS/wireless client) imported from a file will be added to the primary appliance or any other appliance (based on user selection). Wireless devices imported from infrastructure will be added to the appliance that includes the infrastructure device.

To set up a new import schedule, you must configure the settings and specify a schedule. Click **Apply** to save your device import schedule and add it to the device import list. Click **Reset** to discard any new changes/additions.

You can delete an scheduled import/discovery by selecting (highlighting) the schedule and then clicking the **Delete** button.

You can also import a device using your appliance CLI. This import file uses the file formats described under [Import Device File Formats](#) and the file formats for the individual Import buttons used through the GUI. The command to import devices from the appliance CLI is:

```
import -filename </path/to/import_file> -user <adsp_user> -folderId <folder_id>
```

where </path/to/import_file> is the name of the import file (preceded by the relative or full pathname), <adsp_user> is a valid ADSP user name, and <folder_id> identifies the folder to place the device. If <folder_id> is omitted, Auto-Placement rules are used.

Available Fields for Importing Switches Using a Remote File

Refer to the following table for more information:

Field	Description
Job Name	Name of your switch import job
Import Source	Remote File
Host	Host name or IP address
Protocol	Protocol used for communications
Path	Path name on the remote host
User	User name needed to log in
Password	Password needed to log in
Add to appliance	Appliance where you want to import device

Available Fields for SNMP Discovery

Before importing switches using SNMP discovery, you must enable SNMP on the device and verify that you can execute snmpwalk from the appliance. You will need

the IP address and community string for the device. To verify SNMP connectivity, from the appliance, run the following command against your target device:


```
snmpwalk -v2c -c public xxx.xxx.xxx.xxx (this is the IP address).
```

Refer to the following table for more information:

Field	Description
Job Name	Name of your switch import job
Import Source	SNMP Discovery
Networks	List of networks to scan
SNMP Port	Device SNMP port number; normally set to 161 but can be different
Timeout (ms)	Timeout in milliseconds to attempt import
Retries	Number of retries to attempt import
Version	SNMP version used: v1, v2c or v3
Read Community	Read Community string used for the SNMP authentication
Add to appliance	Appliance where you want to import device

Setting the Schedule

The **Schedule** tab allows you to set the schedule for importing devices.

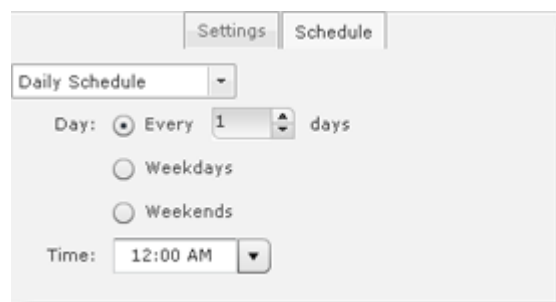

You can select One Time Schedule, Intra-Day Schedule, Daily Schedule, Weekly Schedule, or Monthly Schedule. Depending on the selected interval, fill in the related fields using the following table:

Field	Description
One Time Schedule	Choose a time for importing the device. Then, select a day.
Intra-Day Schedule	Select a time to begin importing the device. Then, select a frequency in hours.
Daily Schedule	Select a frequency in day, weekdays only, or weekends only. Then, select a time of day.

Field	Description
Weekly Schedule	Select a day or multiple days to import the device. Then, select a time of day.
Monthly Schedule	Choose the months that you want to import a device. Then, select a day of the month, the last day of the month, or a specific day of the week as it relates to the first, second, third, fourth, fifth, or last week of the month. Last, specify a time of day.

Import Device File Format

This section lists the various formats for importing devices.

BSS

Format

```
bss | name | description | mac | isBridge | sanctioned/unsanctioned/
ignored | performance profile | list of sec profiles
```

Example:

```
bss,name,desc,00:01:01:01:01:01,true,sanctioned,perfprofile,secprof1;secprof2
```



Note

The value `bss` must always be the first field.

Wireless Client

Format

```
station | name | description | mac | isWired | sanctioned/unsanctioned/
ignored | performance profile | list of sec profiles
```

Example:

```
station,name,desc,02:02:02:02:02:02,true,sanctioned,perfprofile,secprof1;secprof2
```



Note

The value `station` must always be the first field.

Format

```
ap | name | description | mac | ip | dnsName | model
```



Note

The `model` value is optional and can be left blank.

Example:

```
ap,apname,apdesc,03:03:03:03:03:03,10.10.10.10,ap.dns.name,AP650
```



Note

The value `ap` must always be the first field.

Switch

Format:

switch | name | description | mac | ip | switchType | dnsName | model



Note

model is optional and can be left blank. Also, if switch is a wired switch, model must be left blank.

Example:

```
switch,switchname,switchdesc,04:04:04:04:04:04,11.11.11.11,wireless,switch.dns.name,NX9600  
switch,switchname,switchdesc,05:05:05:05:05:05,11.11.11.11,wired,switch.dns.name,
```



Note

The value switch must always be the first field.

Device on Wire

Format:

dev_on_wire | device_MAC | device_IP | sanctioned/unsanctioned |
switch_MAC | switch_IP | ifIndex | ifName | ifDescr | vlanID

Example:

```
dev_on_wire,00:06:06:06:06:06,4.3.2.1,sanctioned,00:0d:bc:78:94:81,10.59.39.110,0,  
interface name,interface description,0
```



Note

The value dev_on_wire must always be the first field.

Security & Compliance

The Security & Compliance category includes the features that define the security configurations of sanctioned Wireless Clients and monitor the wired network devices in your system so that they stay in compliance with your policies.

Security Profiles

Security Profiles (also part of Appliance Platform) define the security configurations of sanctioned wireless clients on your wireless LAN. Refer to [Security Profiles](#) under the Appliance Platform topic.


Wired Network Monitoring

Wired Network Monitoring is used to monitor the wired network devices in your system. You can generate an alarm policy for your wired network by selecting any of the following conditions:


- New device detected on the wired network. Using the Known Vendors button, you can select the wired equipment vendors used in your network. Any vendor selected in the list will generate a lower severity alarm condition.
- Sanctioned wired device detected at different location in tree hierarchy than when originally discovered.

- Sanction device no longer observed. You must specify a minimum time for the device to have not been seen on your network.

To detect new devices on your network, existing devices must be classified as sanctioned. The **Mass Wired Network Device Classification** button opens a dialog where you can sanction all or a selection of devices at one time. Typically, this process should be done when you initially configure policies or after major network changes.

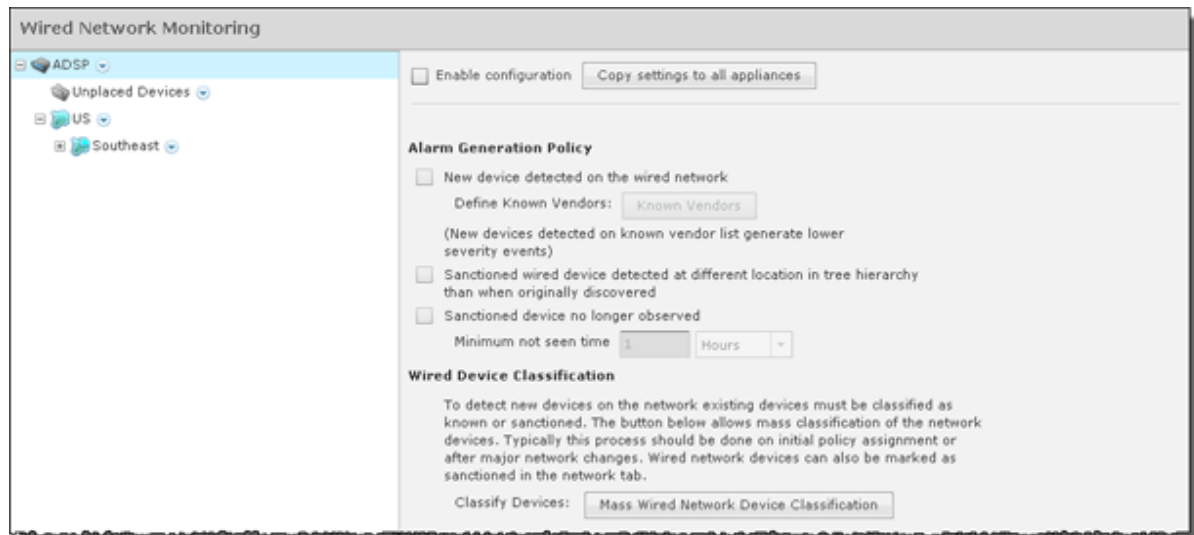

 To turn on **Wired Network Monitoring**, you should always enable it at the appliance level by selecting the **Enable configuration** checkbox. When you do, all the other network levels are also monitored.



Then, if you have a level that needs to be monitored using different settings, you can monitor that level by selecting the network level from the network tree, overriding the inherited *Wired Network Monitoring* (select **Override settings** radio button), and then defining different settings for *Wired Network Monitoring*.



Generate Alarm Policy for New Devices

You should generate an alarm policy for new devices detected on your wired network by following these steps:

After enabling monitoring, select the **New device detected on the wired network** checkbox.

☒ Enable configuration Copy settings to all appliances

Alarm Generation Policy

☒ New device detected on the wired network

Define Known Vendors: Known Vendors

(New devices detected on known vendor list generate lower severity events)

To authorize all detected devices for the first time, or at any major infrastructure change, click on the **Mass Wired Network Device Classification** button.

Classify Devices: Mass Wired Network Device Classification

The Sanction Devices dialog opens.

Sanction Devices


The selected devices will be sanctioned.

☐ Vendor	MAC Address Prefix	Device Count
☐ Symbol Technologies/Wholly owned Sub	00:15:70:00:00:00	35
☐ Motorola	00:23:68:00:00:00	23
☐ AirDefense, Inc.	00:16:5d:00:00:00	18
☐ Motorola	5c:0e:8b:00:00:00	11
☐ VMware, Inc.	00:50:56:00:00:00	10
☐ VMware, Inc.	00:0c:29:00:00:00	9
☐ Intel Corporation	00:0e:0c:00:00:00	8
☐ Extreme Networks	00:04:96:00:00:00	7
☐ Intel Corporate	00:15:17:00:00:00	7
☐ SYMBOL TECHNOLOGIES, INC.	00:a0:f8:00:00:00	5
☐ Intel Corporation	00:07:e9:00:00:00	5
☐ Senao International Co., Ltd.	00:02:6f:00:00:00	4
☐ APPLE COMPUTER INC.	08:00:07:00:00:00	3
☐ Brocade Communications Systems, Inc	74:8e:f8:00:00:00	3
☐ CADMUS COMPUTER SYSTEMS	08:00:27:00:00:00	3
☐ WW PCBA Test	00:0f:1f:00:00:00	3

OK Cancel

Select all the vendors you recognize as authorized and permanent for that site. (Help text is provided just above the **Mass Wired Network Device Classification** button.) Then, sanction devices detected at your site by clicking **OK**.


To have a finer control over alarms about new known vendor devices and new unknown vendor devices, you can utilize the Known Vendors classification tool. Click on the **Known Vendors** button to display a list of known vendors.

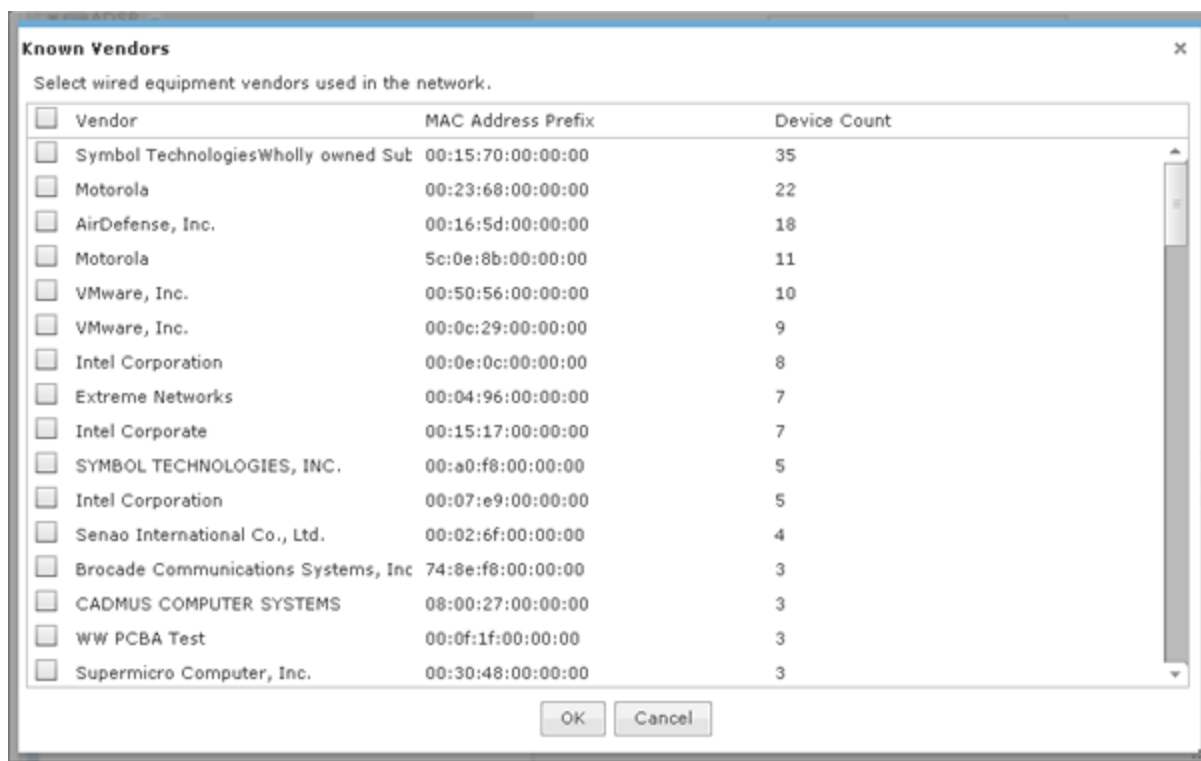

Select the approved vendors and click **OK**.

After configuring the **Wired Network Monitoring** options, click the **Apply** button to save your changes. Click the **Reset** button to discard your changes.

Once new devices are detected at your site, you will receive one of two alarms: *New Wired Device Detected Known Vendor* or *New Wired Device Detected Unknown Vendor*. Below is a screen shot of **Alarm Configuration**, where you can customize the criticality, duration, state and exception for each of the alarms.

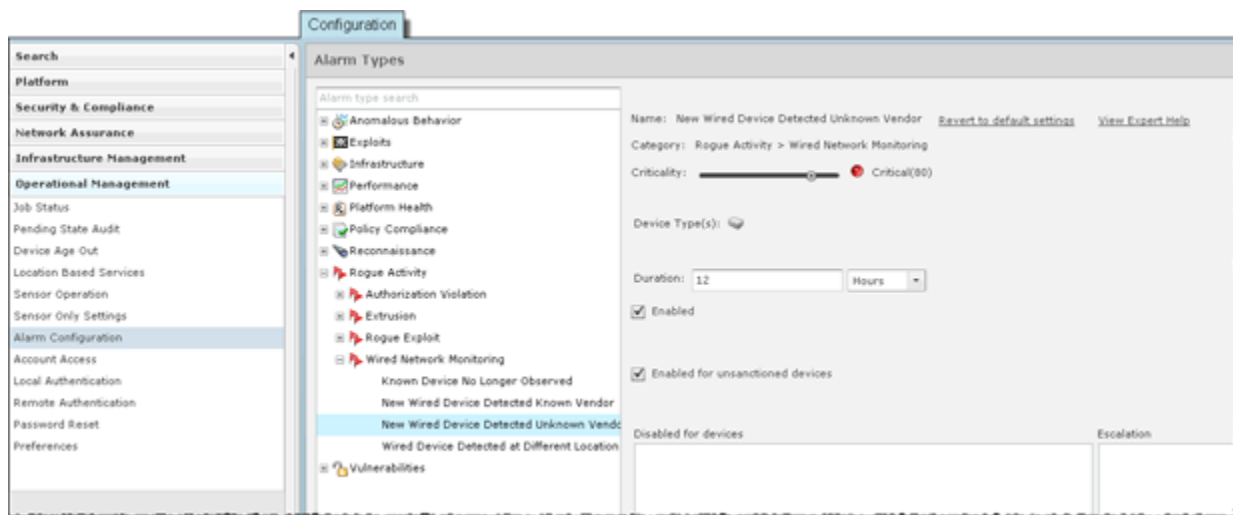

Network Assurance

The Network Assurance category allows you to:

- Configure Live RF settings to use when displaying Live RF heatmaps. This feature is only available with an Live RF license.
- Create Performance Profiles that are used to create and edit network performance threshold policies for BSSs and Wireless Clients.
- Set up Environment Monitoring that is used to monitor your system for unobserved devices and generate alarms for missing devices.

Performance Profiles


Performance Profiles are used to create network performance threshold policies for BSSs and wireless clients on your wireless LAN. When a Performance Profile is applied to your system, a performance alarm is generated if the performance thresholds for that profile are exceeded. If there are no Performance Profiles applied to your system, no performance alarms are generated.



Note
You should monitor new ADSP deployments for several weeks to determine normal network activity before configuring Performance Profiles.


View Performance Profiles

To access the Performance Profiles configuration screen, go to **Configuration > Network Assurance > Performance Profiles**. Existing Performance Profiles are displayed in the right column.

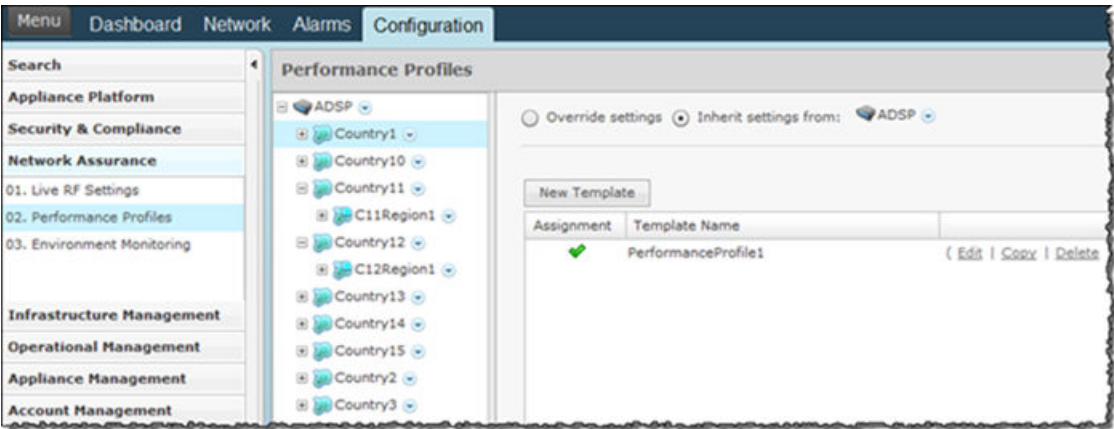

Edit Performance Profiles

Existing profiles are displayed in the table below the row of buttons.

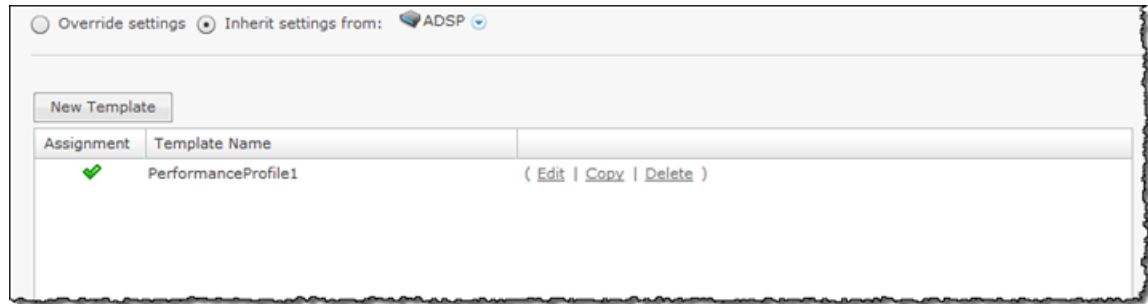

You can copy, edit or delete any selected (highlighted) profile by clicking the appropriate link.

- To edit a profile, select (highlight) the Performance Profile. Click the **Edit** link and then make changes in any of the four tabs. Click **Save** to save your changes.
- To copy a profile, select (highlight) the Performance Profile, click the **Copy** link. Click **Save** and the copied profile appears.
- To delete a profile, select (highlight) the Performance Profile, click the **Delete** link.

Updates to Performance Profiles are treated as jobs and are included in included in **Job Status** under **Configuration > Operational Management**. The description supplied in the confirmation helps identify jobs.

Add a New Performance Profile

Click the New Profile button to add a new profile. Define your Performance Profile using the **General**, **Cumulative**, **Wireless Clients**, and **BSS** tabs. Once you have defined your Performance Profile, click OK to save your profile or Cancel to exit without saving the profile.

All profiles have four tabs that are used to set performance threshold policies for your system:

- General - Names your Performance Profile and specifies whether or not you want to:
 - Use a short time slot
 - Allow streaming traffic
 - Enable protection mode.
- Cumulative - Assigns thresholds to network characteristics for all wireless clients and traffic in the APs BSS (Basic Service Set). ADSP generates an alarm if any of the thresholds are exceeded.
- Wireless Clients - Assigns thresholds that apply to any individual wireless client in the APs BSS and will typically be lower than the aggregate wireless client thresholds. ADSP generates an alarm if any single wireless client reaches one of these thresholds. From these alarms, you can identify the high bandwidth users, and the times they are using the network. You should base wireless client thresholds on either the normal transmission rate for your wireless LAN, or on arbitrary numbers designed to detect your high-bandwidth users.
- BSS - Assigns thresholds for transmitting data to/from BSSs. ADSP generates an alarm if any of the thresholds are exceeded.

General Tab

The **General** tab is where you name your Performance Profile and specify whether or not you want to use certain functions.

The **Name** field specifies the profile name. If you are adding or copying a Performance Profile, ADSP gives the profile the default name New_Performance_Profile. You should change the default name to one that is more appropriate to its function. Once you save your profile, you cannot change the name. The functions are:

Function	Description
Short Time Enabled	Choose Yes to allow short time slot capability as advertised in the Beacon, which when used on a pure 802.11g deployment, improves WLAN throughput by reducing wait time for transmitter to assure clear channel assessment. Choose No to disable.
Allow Streaming Traffic	Choose Yes to allow Streaming traffic in the wireless environment, such as video or audio traffic in wireless environment. It applies only to un-encrypted wireless traffic. Choose No to disable. Note: Streaming traffic applications consume large bandwidth and can adversely impact all other Wireless Clients connected on the Wireless LAN.
Protection Mode Enabled	Choose Yes to allow Protection Mode operation to be advertised in Beacon or Probe response. ProtectionMode operation is used to support mixed-mode operation of 802.11b/g protocols. Choose No to disable. Note: Use of Protection Mode in an 802.11g device can degrade the performance of the wireless network by introducing overhead to the network.

Cumulative Tab

The Cumulative tab is where you assign thresholds to network characteristics for all Wireless Clients and traffic in the APs BSS (Basic Service Set).



Note

Entering a 0 (zero) as a threshold disables alarm-generation for that threshold.

Performance Profile

General Cumulative Wireless Clients BSS

New Associations:	78
Total Associations:	51
Data Frames Seen:	51
Management Frames Seen:	60
Control Frames Seen:	23
Association Frames Seen:	6
Disassociation Frames Seen:	21
802.11 Authentication Frames Seen:	45
802.1x Authentication Frames Seen:	48
Deauthentication Frames Seen:	57
Probe Requests Seen:	4
Wired to Wireless Traffic %:	24% (6 frame min)
Wireless to Wired Traffic %:	74% (57 frame min)
Wireless station to station Traffic %:	39% (54 frame min)
Wired station to station Traffic %:	64% (100 frame min)
Low Speed Frames %:	51% (43 frame min)

Save Cancel

The thresholds are:

Threshold	Description
New Associations	Enter the maximum number of new associations per minute AirDefense will allow between a BSS and all Wireless Clients combined. Default = 20. Generally, this number should be low. Your Wireless Clients should associate with a BSS once in the morning when users log on, and rarely after that. In some cases, if the threshold value represents the actual number of Wireless Clients in a BSS, an alarm will be generated if the BSS goes off-line, forcing the Wireless Clients to re-associate with it. In no case should this value be greater than the actual number of Wireless Clients in a BSS. If the signal strength between a Wireless Client and a BSS is very low, the Wireless Client may repeatedly lose connectivity and then reconnect, increasing the number of associations per minute.
Total Associations	Enter the total number of Wireless Clients allowed to associate at any one time with a BSS. This number should reflect your actual number of Wireless Clients. AirDefense generates an alarm if it detects a greater number, assuming that the extra associations are made by hackers. Default = 15.
Data Frames Seen	Enter the maximum number of data frames per minute allowed to be transmitted from all Wireless Clients combined. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Management Frames Seen	Enter the maximum number of management frames per minute allowed to be transmitted from all Wireless Clients combined. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Control Frames Seen	Enter the maximum number of control frames per minute allowed to be transmitted from all Wireless Clients combined. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Association Frames Seen	Enter the maximum number of association frames allowed to be transmitted or received from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Disassociation Frames Seen	Enter the maximum number of disassociation frames allowed to be transmitted or received from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.

Threshold	Description
802.11 Authentication Frames Seen	Enter the maximum number of 802.11 authentication frames allowed to be transmitted or received from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
802.1x Authentication Frames Seen	Enter the maximum number of 802.1x authentication frames allowed to be transmitted or received from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Deauthentication Frames Seen	Enter the maximum number of de-authentication frames allowed to be transmitted or received from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Probe Requests Seen	Enter the maximum number of probe requests allowed to be transmitted or received from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Wired to Wireless Traffic %	Enter the maximum percentage of data, per minute, allowed into a BSS from the wired portion of your network. If AirDefense detects a greater number, it generates an alarm. Default = 60.
Wireless to Wired Traffic %	Enter the maximum percentage of data per minute allowed out of a BSS to a wired portion of your network. If AirDefense detects a greater number, it generates an alarm. Default = 60.
Wireless station to station Traffic %	Enter the maximum percentage of data per minute allowed to be transmitted within the BSS from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 50.
Wired station to station Traffic %	Enter the maximum percentage of data per minute allowed to be transmitted from a wired portion of the network to another wired portion of the network, using an AP as a bridge. If AirDefense detects a greater number, it generates an alarm. Default = 1.

Threshold	Description
Low Speed Frames %	802.11 protocols operate on a shared medium and use collision avoidance mechanism to access this medium. Excessive use of lower rates for transmitting frames is likely caused by stations which are either misconfigured to use lower rates or are too far from the APs to be able to support higher rates and cause alarms to be generated. Enter the maximum percentage of data per minute allowed for low speed frames to be transmitted or received from all stations. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Layer 3 Multicast Frames %	An alarm that is generated when the system has detected a high percentage of multicast traffic violating the policy thresholds. This may be a result of potential Layer 3 broadcast storm attacks on the network. Enter the maximum percentage of data per minute allowed for multicast frames to be transmitted or received within a BSS from all stations. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Layer 3 Broadcast Frames %	An alarm that is generated when the system has detected a high percentage of broadcast traffic violating the policy thresholds. This may be a result of potential Layer 3 broadcast storm attacks on the network. Enter the maximum percentage of data per minute allowed for broadcast frames to be transmitted or received within a BSS from all stations. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Retransmission Frames %	Enter the maximum percentage of retransmitted data frames allowed during a transmission of data within a BSS from all stations. If AirDefense detects a greater number, it generates an alarm. Default = 0.
PS Poll Frames Seen	An alarm is generated by a DOS attack using an excessive number of PS-POLL frames have been detected. Enter the maximum number of PS Poll frames to be seen within a BSS. If AirDefense detects a greater number, it generates an alarm. Default = 0.


Wireless Clients Tab

The Wireless Clients tab is where you assign BSS thresholds that apply to any individual Wireless Client. These thresholds will typically be lower than the aggregate Wireless Client thresholds. AirDefense generates an alarm if any single Wireless Client reaches one of these thresholds. From these alarms, you can identify the high bandwidth users, and the times they are using the network. You should base Wireless Client thresholds

on either the normal transmission rate for your wireless LAN, or on arbitrary numbers designed to detect your high-bandwidth users.



Note
Entering a 0 (zero) for any threshold-type disables that specific alarm.

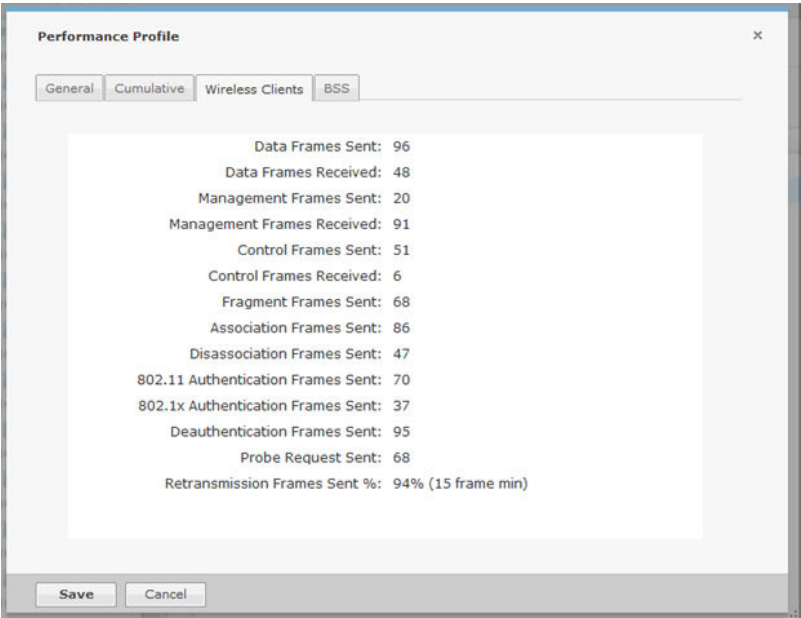

The thresholds are:

Threshold	Description
Traffic Sent %	Enter the maximum percentage of data per minute any Wireless Client is allowed transmit. If AirDefense detects a greater number, it generates an alarm. Default = 3
Traffic Received %	Enter the maximum percentage of data per minute any Wireless Client is allowed to receive. If AirDefense detects a greater number, it generates an alarm. Default = 30
Data Frames Sent	Enter the maximum number of data frames per minute any Wireless Client is allowed to transmit. If AirDefense detects a greater number, it generates an alarm. Default = 0
Data Frames Received	Enter the maximum number of data frames per minute any Wireless Client is allowed to receive. If AirDefense detects a greater number, it generates an alarm. Default = 0

Threshold	Description
Management Frames Sent	Enter the maximum number of management frames per minute any Wireless Client is allowed to transmit. If AirDefense detects a greater number, it generates an alarm. Management frames carry information related to negotiating network connections. If many more Management frames per minute than usual are detected, this could indicate a malicious disassociation or other form of Denial-of-Service attack Default = 0
Management Frames Received	Enter the maximum number of management frames per minute any Wireless Client is allowed to receive. If AirDefense detects a greater number, it generates an alarm. Default = 0
Control Frames Sent	Enter the maximum number of control frames per minute any Wireless Client is allowed to transmit. If AirDefense detects a greater number, it generates an alarm. Default = 0
Control Frames Received	Enter the maximum number of control frames per minute any Wireless Client is allowed to receive. If AirDefense detects a greater number, an alarm is generated. Control frames carry information about negotiating the 802.11 protocol for getting data onto the airwaves, and are transmitted at only 1 Mbs. Unusually high numbers of Control frames may indicate bandwidth and network problems. Default = 0
Fragment Frames Sent	Enter the maximum number of fragment frames per minute that are allowed from any Wireless Client. If AirDefense detects a greater number, it generates an alarm. Default = 1
Association Frames Sent	Enter the maximum number of association frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0
Disassociation Frames Sent	Enter the maximum number of disassociation frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0
802.11 Authentication Frames Sent	Enter the maximum number of 802.11 authentication frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0
802.1x Authentication Frames Sent	Enter the maximum number of 802.1x authentication frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0
Deauthentication Frames Sent	Enter the maximum number of deauthentication frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0

Threshold	Description
Probe Responses Sent	Enter the maximum number of probe requests allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0
Retransmission Frames Sent %	Enter the maximum percentage of data per minute that a station can retransmit as frames. If AirDefense detects a greater number, it generates an alarm. Default = 0

BSS Tab

The BSS tab is where you assign thresholds for transmitting data to/from BSSs.

Performance Profile

General Cumulative Wireless Clients **BSS**

Data Frames Sent: 14
 Data Frames Received: 20
 Management Frames Sent: 12
 Management Frames Received: 23
 Control Frames Sent: 99
 Control Frames Received: 49
 Fragment Frames Sent: 67
 Association Frames Sent: 32
 Disassociation Frames Sent: 27
 802.11 Authentication Frames Sent: 99
 802.1x Authentication Frames Sent: 59
 Deauthentication Frames Sent: 18
 Probe Response sent: 85
 Minimum Beacon Frames to be Sent: 41
 Retransmission Frames Sent %: 78% (14 frame min)

Save Cancel

The thresholds are:


Threshold	Description
Traffic Sent %	Enter the maximum percentage of data per minute BSSs are allowed to transmit. If AirDefense detects a greater number, it generates an alarm. Default = 60.
Traffic Received %	Enter the maximum percentage of data per minute BSSs are allowed to receive. If AirDefense detects a greater number, it generates an alarm. Default = 60.

Threshold	Description
Data Frames Sent	Enter the maximum number of data frames per minute this BSS is allowed to transmit. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Data Frames Received	Enter the maximum number of data frames per minute BSSs are allowed to receive. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Management Frames Sent	Enter the maximum number of management frames per minute BSSs are allowed to transmit. If AirDefense detects a greater number, it generates an alarm. Default = 20,000.
Management Frames Received	Enter the maximum number of management frames per minute BSSs are allowed to receive. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Control Frames Sent	Enter the maximum number of control frames per minute BSSs are allowed to transmit. If AirDefense detects a greater number, it generates an alarm. Default = 20,000.
Control Frames Received	Enter the maximum number of control frames per minute BSSs are allowed to receive. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Fragment Frames Sent	Enter the maximum number of fragment frames per minute BSSs may see before generating an alarm. Default = 1.
Association Frames Sent	Enter the maximum number of association frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Disassociation Frames Sent	Enter the maximum number of disassociation frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
802.11 Authentication Frames Sent	Enter the maximum number of 802.11 authentication frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
802.1x Authentication Frames Sent	Enter the maximum number of 802.1x authentication frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.

Threshold	Description
Deauthentication Frames Sent	Enter the maximum number of de-authentication frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Probe Responses Sent	Enter the maximum number of probe responses allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number, it generates an alarm. Default = 0.
Minimum Beacon Frames to be Sent	Enter the minimal number of beacon frames allowed to be transmitted from all Wireless Clients. If AirDefense detects a greater number it generates an alarm.
Retransmission Frames Sent %	Enter the maximum percentage of data per minute that a station can retransmit as frames. If AirDefense detects a greater number, it generates an alarm. Default = 0.

Apply a Performance Profile

Once you have defined a Performance Profile, to use it, you must apply it to your system.

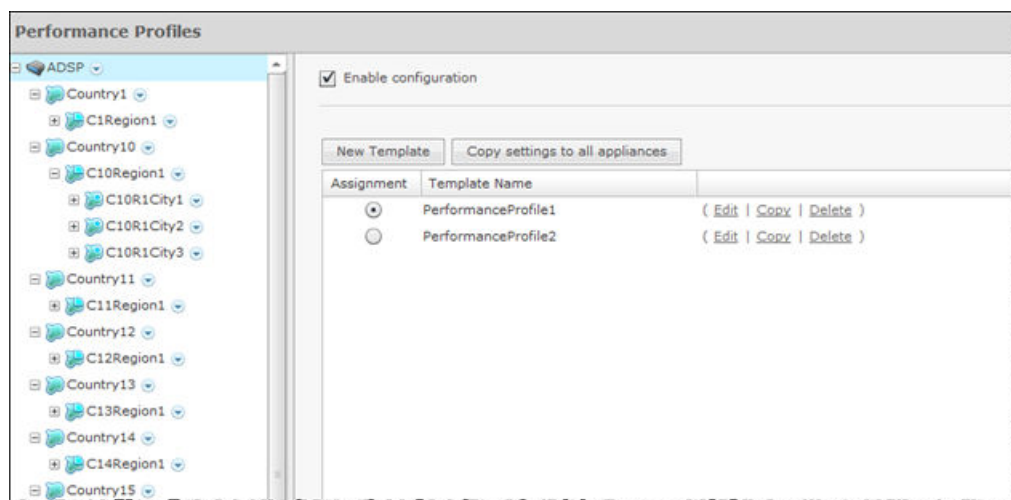


You should always apply a Performance Profile at the appliance level. When you do, the profile is inherited for all the other levels. Then, if you have a level that needs a different Performance Profile, you can apply that profile to that level.



Note

The **Override settings** option is available when you select (highlight) a network level below the appliance level. Use the Expand button to reveal the other levels.

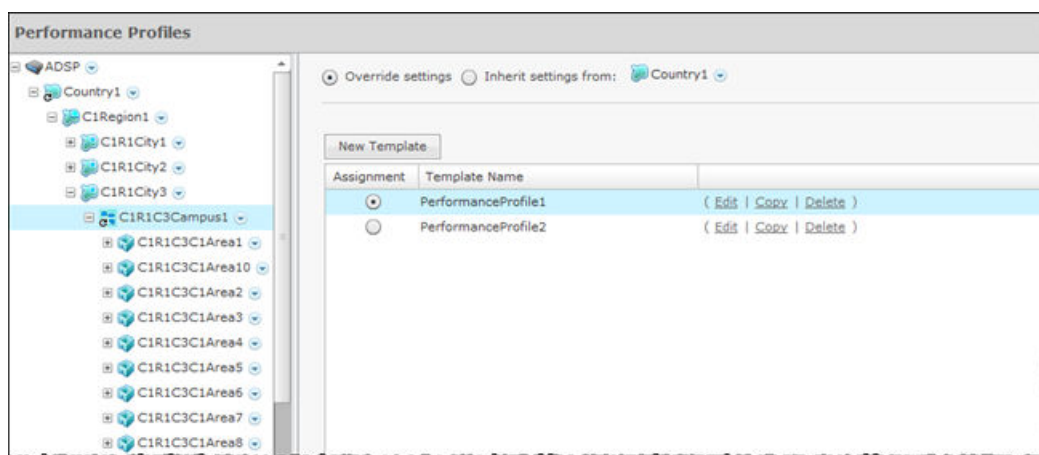


In this example, the *PerformanceProfile2* profile will be accessible to corporate-wide employees and guests while the *PerformanceProfile1* profile will be available employees and guests on *Campus1* of the facilities.

Click the **Apply** button at the bottom of the screen to save your changes. Click the **Reset** button to discard your changes.

Environment Monitoring

Environment Monitoring allows you to configure the thresholds for monitoring. If a threshold value is exceeded, an alarm is generated. You can also elect to monitor your system for unobserved devices and generate alarms for missing devices.

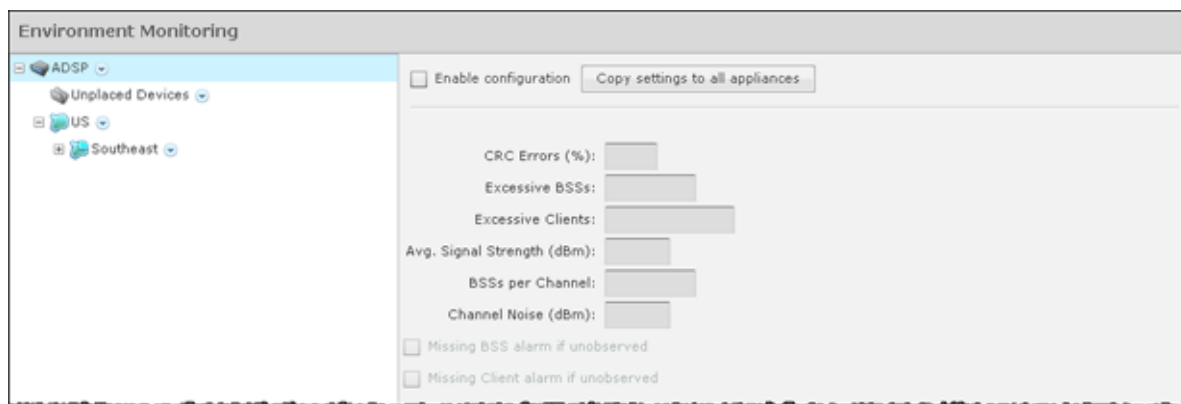

To apply Environment Monitoring to your system, you must first select the **Enable configuration** checkbox.

You should always monitor your system at the appliance level. When you do, all the other levels are also monitored. Then, if you have a level that needs to be monitored using different settings, you can monitor that level by overriding the inherited Environment Monitoring and defining different settings for Environment Monitoring.

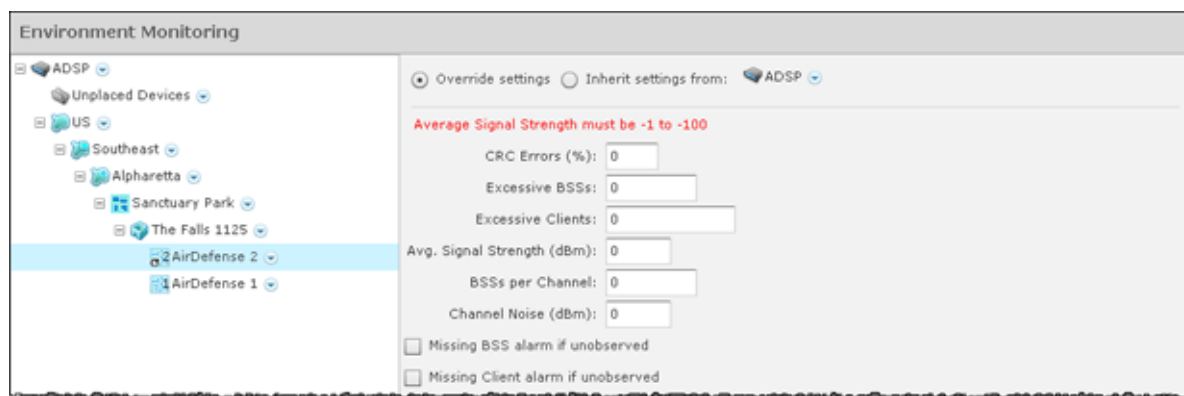


Figure 124: Second image

The following set of thresholds are monitored to see if any of value is exceeded. If a threshold value is exceeded, an alarm is generated.

Threshold	Description
CRC Errors	Cyclic redundancy check (CRC) errors should not exceed the specified percentage value.
Excessive BSSs	BSSs on your network are considered excessive if the specified value is exceeded.
Excessive Clients	Wireless clients on your network are considered excessive if the specified value is exceeded.
Avg. Signal Strength (dBm)	The average signal strength (in dBm) of APs on your network should not exceed the specified value.
BSSs per Channel	The number of BSSs on any particular channel should not exceed the specified value.
Channel Noise (dBm)	Channel noise is monitored to ensure that the noise does not exceed the specified value.
Missing BSS Alarm if unobserved	Option, when selected, generates a missing BSS alarm when any of the threshold values are exceeded.
Missing Client Alarm if unobserved	Option, when selected, generates a missing Client alarm when any of the threshold values are exceeded.

The **Copy settings to all appliances** button will copy the defined Environment Monitoring settings to all appliances in your system.



Note

You must have a Central Management license in order to copy settings to all appliances.

Click the **Apply** button to save your changes. Click the **Reset** button to discard your changes.

Anomaly Baseline View

This screens displays the computed baseline thresholds for the triggering Anomalous Behavior alarms.

Anomaly Baseline Types	Threshold
BSS Baselines	
Management Frames	1658
Control Frames	5867
Data Frames	3897
Associated Count	234
Management Bytes	477920
Control Bytes	82220
Data Bytes	3470536
Client Baselines	
Management Frames	3921
Control Frames	16494
Data Frames	4394
Management Bytes	1038206
Control Bytes	218587
Data Bytes	4455962

Anomalous Behavior Alarms (ABA) feature is only available for AirDefense Enterprise servers and does not require any specific license. This feature is enabled when you enable **Performance Profile**. ABA is calculated for sanctioned clients and BSS only. All other data is ignored.

The AirDefense server flags traffic behavior that deviates significantly from observed normal behavior. The server learns specific attributes of traffic monitored over a configurable period of time. It uses this information to flag any traffic that deviates significantly from its learned traffic behavior.

AirDefense ABA works in two phases.

- Background Learning Phase
- Live Data Threshold Comparison Phase

These phases are common to all alarms based on the anomaly detection paradigm. Each alarm type could have different learning parameters and custom threshold computation methods.

In the *Background Learning Phase*, the AirDefense server monitors the forensic data in the data store for a configured duration of time. It then computes a baseline behavior against which an event will be tested. The learning phase training window is sliding to enable including the live data being added to the forensic store. ABA learning happens at regular intervals during the day to compute thresholds for all anomalous alarms. The default learning interval for each alarm is 14 days. Thresholds are computed and stored in 5 minute windows. These learning interval configuration values cannot be modified. These thresholds are computed on the scope where performance profile is enabled. The scopes can be at *Site Level*, *Floor Level*, or *System Level*.

In the *Live Data Threshold Comparison Phase*, live data from the sensors is compared with the computed thresholds for the enabled scope. If the live data is above the computed threshold, its corresponding alarm is triggered. For example, if, in the live data, the total *AP Management Frames* in a location in a 5 minute interval exceeds the computed threshold value of the total *AP Management Frames* in the same 5 minute interval over the last 14 days, then the *AP Management Frame Anomalous Behavior Frames* alarm is raised.

ABA computation starts at 00:00 hour. The computed threshold values are not persistent across server reboots and restarts. In case a server is restarted or rebooted, threshold computation will commence at 00:00 hours. You will not have computed threshold value from the time the server was rebooted or restarted till the nearest 00:00 hour.

The following Anomalous Behavior Alarms are supported

- MU Management Frame Anomalous Behavior Frames
- MU Data Frame Anomalous Behavior Frames
- MU Control Frame Anomalous Behavior Frames
- AP Management Frame Anomalous Behavior Frames
- AP Data Frame Anomalous Behavior Frames
- AP Control Frame Anomalous Behavior Frames
- MU Management Frame Anomalous Behavior Bytes
- MU Data Frame Anomalous Behavior Bytes
- MU Control Frame Anomalous Behavior Bytes
- AP Management Frame Anomalous Behavior Bytes
- AP Data Frame Anomalous Behavior Bytes
- AP Control Frame Anomalous Behavior Bytes
- AP Anomalous Number of Connected MUs

Operational Management


The Operational Management category includes features that apply to the normal operations of AirDefense. The Operational Management category allows you to:

- Automatically respond to alarms in your system with a predetermined action.
- Configure alarms for your network environment.
- Specify an age out value that AirDefense uses to display devices in the Network tab.
- View and check on jobs initiated by users using AirDefense.
- Customize the frequency in which the location of various types of devices are scanned and calculated.
- Identify devices that are in a pending state. A WLAN Management license is required to access this feature.

- Configure network settings for legacy Sensors and WiNG 5.3 (and later) that are configured as a Sensor only device.
- Configure Sensor scan settings and Sensor in-line settings for Advanced Spectrum Analysis.

Alarm Action Manager

Alarm Action Manager allows you to automatically respond to alarms in your system with a predetermined action called an Action Rule. By automating your response to certain alarms, you are free to concentrate on other administrative task. You may define as many Action Rules as you need to manage your network.

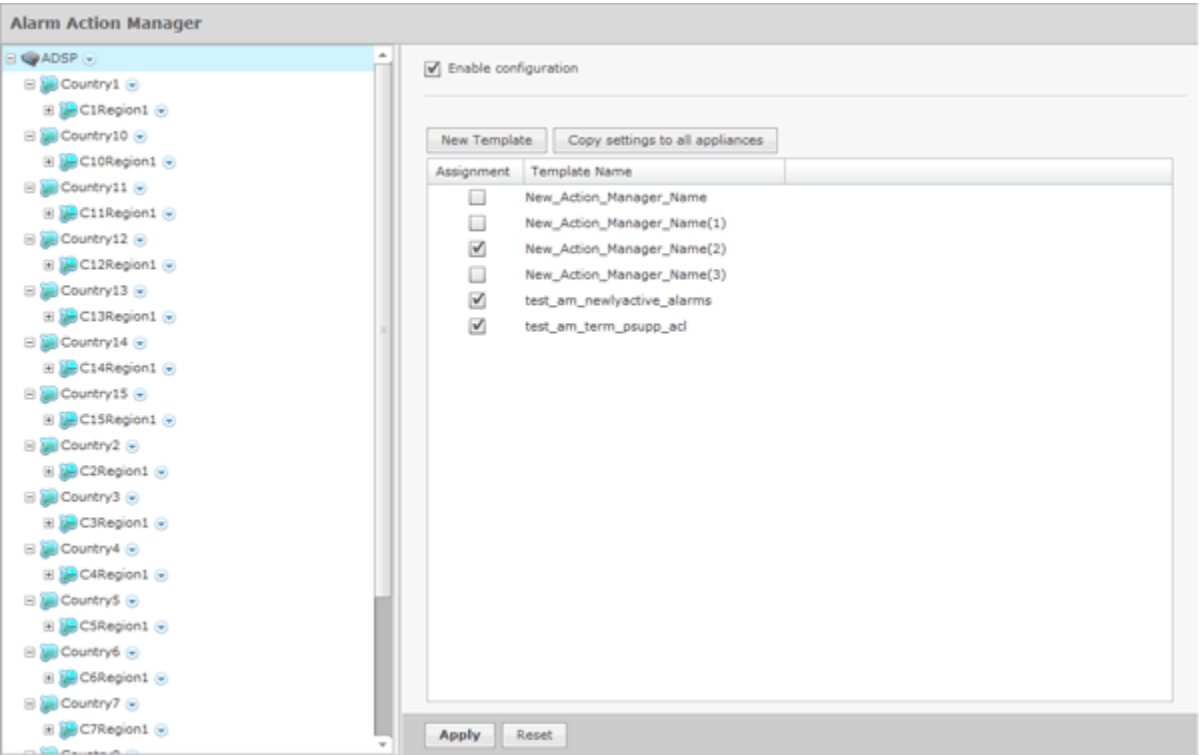

Action Rules are added to the Alarm Action Manager to define an action (response) to an alarm. Multiple actions may be assigned to a rule.


The Alarm Action Manager table displays one rule per row using the following columns:

Column	Description
Assignment	Specifies if a template defining an Action Rule is marked for use.
Template Name	The name of the template defining an Action Rule.


Once a template is added to the **Alarm Action Manager**, you can edit, copy, or delete it by selecting (highlighting) a template and then clicking on the appropriate link that appears to the right of the template.

Add an Action Rule

From the **Alarm Action Manager** screen, click **New Template** to configure a new action rule.

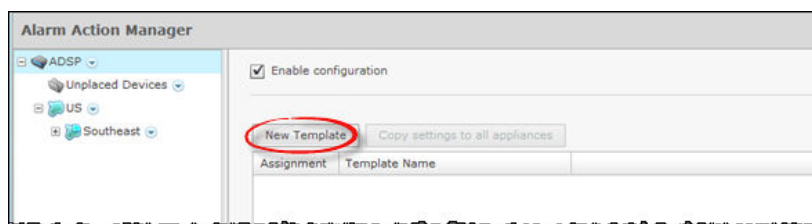


In the **Action Rule** field, give your action rule a name and select the **Enable profile** checkbox to enable the action rule.

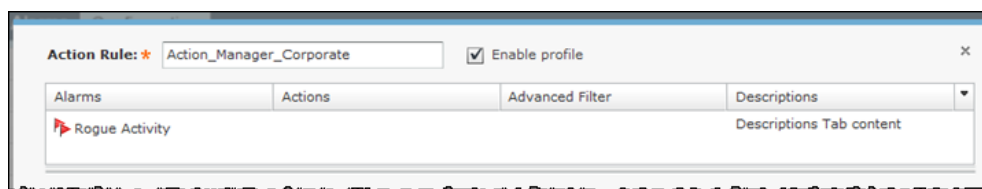

The **Action Rule Template** window has four tabs that are used to define an Action Rule: **Alarms**, **Actions**, **Advanced Filter**, and **Description**. Use each of these to configure the action rule.

Alarms Tab

The **Alarms** tab is where you identify the alarms that you want to generate for your Action Rule. You may select one or more alarms to generate when the conditions in the filter are met. In the following example, the **Rogue Activity** alarm is selected.

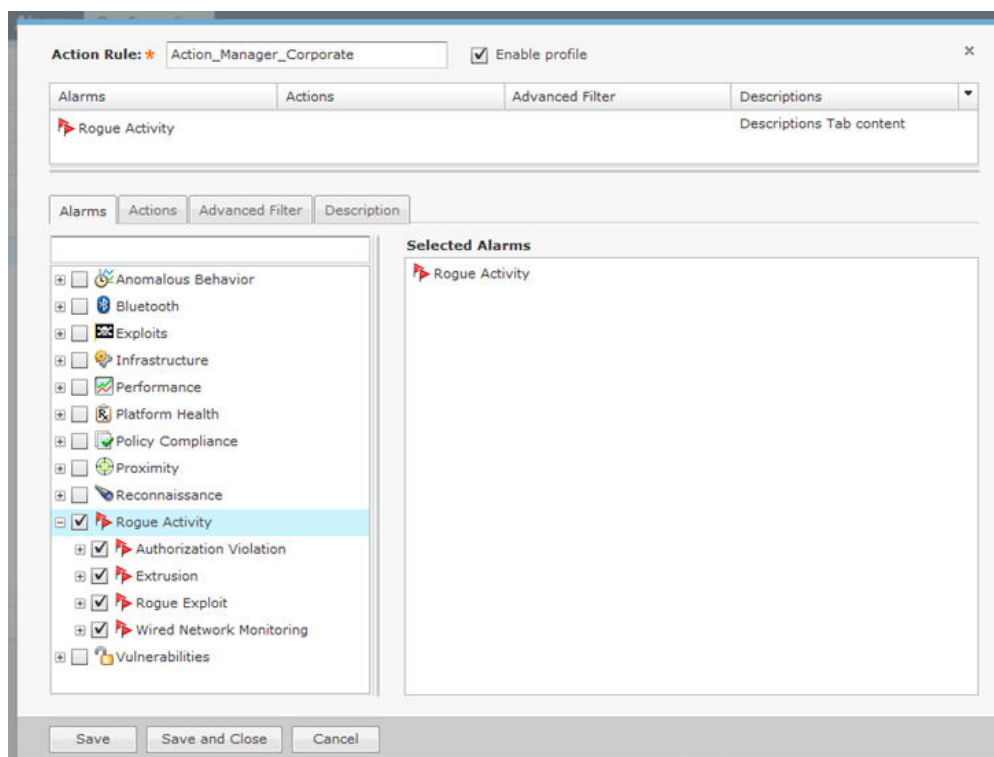

Click **Save** to save changes and go to the Actions tab.

Actions Tab

The **Actions** tab is where you define the actions for your Action Rules

The screenshot shows the 'Actions' tab in a web interface. On the left, there's a 'Search Actions' sidebar with a tree view. The tree is expanded to show 'Email' under 'Notifications'. The main area on the right is titled 'Email Notification' and contains several input fields: 'To: *', 'From: *', 'Subject:', 'Format:' (set to 'MailBasichtml'), and 'Priority:' (set to 'HIGH'). Below these fields are two radio buttons: 'Send email on alarm active' (selected) and 'Send email on alarm active, clear and expire'. A note above the 'To' field says 'Separate multiple addresses with semicolon'.

Actions are divided into the following three categories:

- **Notifications** - Generates an email or a report if certain conditions are met.
- **WIPS Mitigation** - Mitigates a WIPS condition according to the selected action.
- **Info Gathering** - Executes one or more actions to gather information about your system.

Each category has actions specific to it. When an action is selected (highlighted), the information to execute the action is displayed on the right. Each action has its own set of fields/options that are used to execute the action.

Notifications

The following actions are part of Notifications:

- The following fields should be filled: [Report.Email](#)
- The following fields should be filled: [Report](#)

Email

The Email action sends information about an alarm via email to a recipient if the conditions defined by the filter are met. To select the Email action, select **Notifications** > **Email** and then select `Email` from the **Search Actions**.

Action Rule: ★ ☒ Enable profile

Alarms Actions Advanced Filter Descriptions

Alarms Actions Advanced Filter Description

Search Actions

- Notifications
 - Email
 - Email
 - Report
 - WIPS Mitigation
 - Info Gathering

Email Notification

To: ★

Separate multiple addresses with semicolon

From: ★

Subject:

Format: MailSmartPhone

Priority: MEDIUM

☒ Send email on alarm active

☐ Send email on alarm active, clear and expire

Save Save and Close Cancel

The following fields should be filled:

Field	Description
To	Specifies the email address of the recipient.
From	Specifies the email address of the sender.
Subject	Gives a short description of the email.
Format	Specifies a format in which to send the email. Choose a format from the drop-down menu. Format: MailSmartPhone - MailSmartPhone - MailBasicText - MailBasicHtml - MailDetailedHtml - MailSMSText

Field	Description
Priority	Specifies a priority for the email. Choose a priority from the drop-down menu. Priority: MEDIUM ▼ HIGH MEDIUM LOW
Send email options	There are two options to send email: - Send email on alarm active - Send email on active alarms. - Send email on alarm active, clear and expire - Send email on active alarms, cleared alarms, and expired alarms.

Report

The Report action runs a specific report if the conditions defined in the filter are met. To select the Report action, select **Notifications > Report** and then select **Report** from the **Search Actions**.

The screenshot shows the 'New Action Manager' configuration window. At the top, the 'Action Rule' is set to 'New_Action_Manager_Name' and 'Enable profile' is checked. Below this is a tabbed interface with 'Alarms', 'Actions', 'Advanced Filter', and 'Descriptions'. The 'Actions' tab is selected, showing a search bar and a list of actions: 'Notifications', 'Email', 'Report', 'WIPS Mitigation', and 'Info Gathering'. The 'Report' action is selected. The configuration for the 'Report' action includes:

- Report Type:** Security Discovered Wireless Clients
- Scope Increase factor:** 1
- Run immediate for previous:** 1 Day(s)
- Run on alarm clear / expire:** (unselected)
- Duration of the alarm:** (unselected)
- For Previous:** (unselected)
- Publish:** SHARED
- report named:** (empty field)
- E-mail:** HTML
- report to:** (empty field)

At the bottom are buttons for 'Save', 'Save and Close', and 'Cancel'.

The following configuration fields are available:

Field	Description
Report Type	Specifies the type of report to run by selecting a report from the drop-down menu.
Scope Increase factor	Specifies the number of network levels to expand the scope. A value of 1 means only use the floor level. A value of 2 means use the floor and the floor's parent, and so forth.
Run immediate for previous	Executes the action immediately for the previous hours, days, or weeks.
Run on alarm clear / expire	Executes the action when a alarm clears or when a alarm expires. You have the option to execute for the duration of the alarm or for the previous hours, days, or weeks.
Publish	Specifies how to publish the report in Web Reporting: SHARED or PRIVATE. A shared report can be viewed by others. A private report can only be viewed by you. You should name the report to identify it.
E-mail	Specifies that you want to email the report when it runs. You have the option to email the report in one of the following formats: HTML, PDF, or CSV. You must furnish the email address of the person receiving the report.

WIPS Mitigation

The following actions are part of WIPS Mitigation:

- [ACL](#)
- [Port Suppression](#)
- [Termination](#)
- [SMNP Trap](#)

ACL

The ACL action enables the Access Control List on switches that meet the conditions defined in the filter. To select the ACL action, select **WIPS Mitigation > ACL** from **Search Actions**.

The **Scope Increase Factor** option specifies the number of network levels to expand the scope. A value of 1 means only use the floor level. A value of 2 means use the floor and the floor's parent, and so forth.

Port Suppression

The **Port Suppression** action is used to suppress communication between unauthorized devices and switches on your network. To select the Port Suppression action, select **WIPS Mitigation > Port Suppression** from the **Search Actions** menu tree.



Note

Before you can use Port Suppression, it must be enabled in **Configuration > Appliance Management > Appliance Settings**.

The screenshot shows the 'Action Rule' configuration window. At the top, the 'Action Rule' is named 'New_Action_Manager_Name' and the 'Enable profile' checkbox is checked. Below this are four tabs: 'Alarms', 'Actions', 'Advanced Filter', and 'Descriptions'. The 'Actions' tab is selected. On the left, under 'Search Actions', the 'WIPS Mitigation' category is expanded, and 'Port Suppression' is selected. The main area shows the 'Port Suppression' configuration. It includes a note: 'Please note that Port loops involving a large number of switches impose a burden on both the server and the network.' Below the note, there are two configuration options: 'Scope Increase factor' set to 1 and 'Device Limit' set to 10 (with a valid range of 1 - 65535). At the bottom are three buttons: 'Save', 'Save and Close', and 'Cancel'.


There are two options to configure: **Scope Increase Factor** and **Device Limit**.

The **Scope Increase Factor** option specifies the number of network levels to expand the scope. A value of 1 means only use the floor level. A value of 2 means use the floor and the floor's parent, and so forth.

The **Device Limit** option specifies a device limit. For instance, if you specify a device limit of 10 and more than 10 devices are connected to the port, the action will not be performed.

Termination

The **Termination** action is used to terminate devices that generate a certain alarm defined in the filter. To select the Termination action, select **WIPS Mitigation > Termination** from the **Search Actions**.

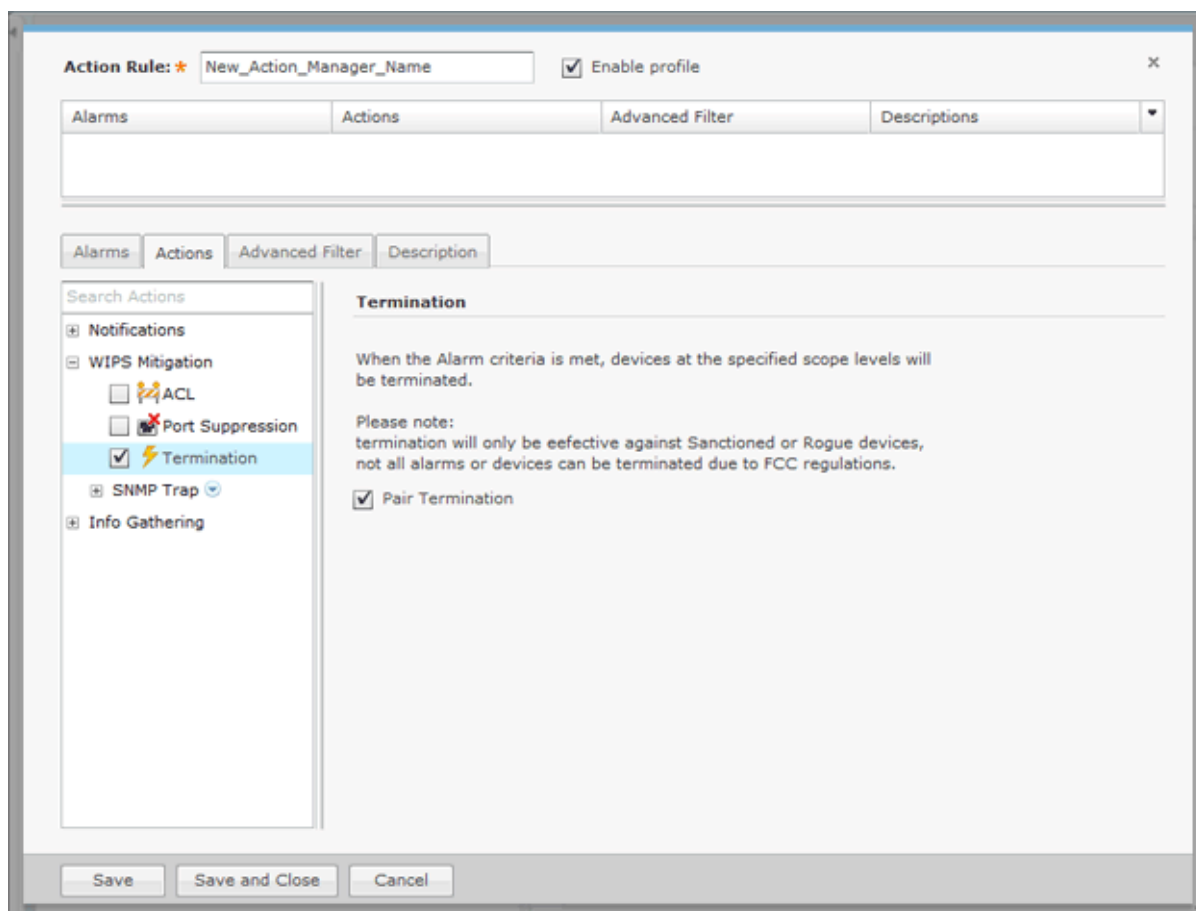

When **Pair Termination** is selected (the default state) and one of the following alarms is generated, the offending pair of devices are terminated:

- Ad-Hoc Connection between Sanctioned Stations
- Ad-Hoc Networking Extrusion Detected
- Sanctioned Client Association to Unsanctioned Virtual WiFi
- Unauthorized Roaming
- Unsanctioned Client Associated to Sanctioned Client running Virtual Wi-Fi
- Wireless Client Accidental Association.

GUI Configurations

Before you can use the **Termination** action, you must make the following GUI configurations:

1. Using the AirDefense GUI, go to **Configuration > Appliance Management > Appliance Settings**.



Note

If you are not a user with read/write permission to the **System Configuration** functional area, the settings in **Appliance Management** will not appear, and you cannot edit the **Appliance Settings**.

2. Select the check box for **Air Termination system**.
3. Select the check box for **Policy-based Air Termination system**.
4. Click the **Apply** button.

SNMP Trap

The **SNMP Trap** action sends an SNMP notification to your SNMP server if the conditions defined in the filter are met. To select the SNMP Trap action, go to **WIPS Mitigation > SNMP Trap** and then select SNMP Trap from the Search Actions.



Note

Before you can use the SNMP Trap action, you must enable SNMP trap. For information on enabling SNMP trap, see [Using ADSPAdmin to Configure ADSP](#).

Max Queue Size:

No queueing

No queueing

50


100

500

1000

The following fields should be filled:

Field	Description
Server Address	Specifies the IP address of your SNMP server.
SNMP Port	Specifies the port you want to use for SNMP Notifications.
Community String	Specifies the community string for the receiving SNMP server. The string is a series of characters manipulated as a group, in this instance for SNMP.

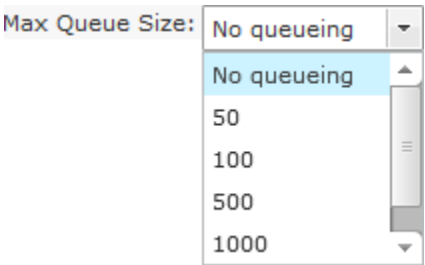Field	Description
Transport	Specifies the desired transport protocol. Choices are: • UDP: User Datagram Protocol • TCP: Transmission Control Protocol. Hint: Typically, UDP is the transport for SNMP traps. However, TCP can be useful for tunneling the traps over Secure Socket Layer (SSL).
Max Queue Size	Specifies the maximum queue size for the notification. Choose a size from the drop-down menu. 
Send Time	Specifies when to send the email by selecting one of the following conditions: • Send on alarm active • Send on alarm active, clear and expire • Send every x amount of minutes or hours.

Info Gathering

The following actions are part of Info Gathering:

- [AP Test](#) on page 561
- [Frame Capture](#) on page 562
- [Vulnerability Assessment](#) on page 564
- [Data Collection](#) on page 565
- [Live RF / Floor Plan](#) on page 565
- [Spectrum Analysis](#) on page 566
- [Sys Log](#) on page 567


AP Test



Note

AP Test is part of the *Advanced Troubleshooting* module and requires an Advanced Troubleshooting license for access.

The AP Test action runs an AP Test using the specified profile if the conditions defined in the filter are met. To select the AP Test action, select **Info Gathering** > **AP Test** from the **Search Actions**.

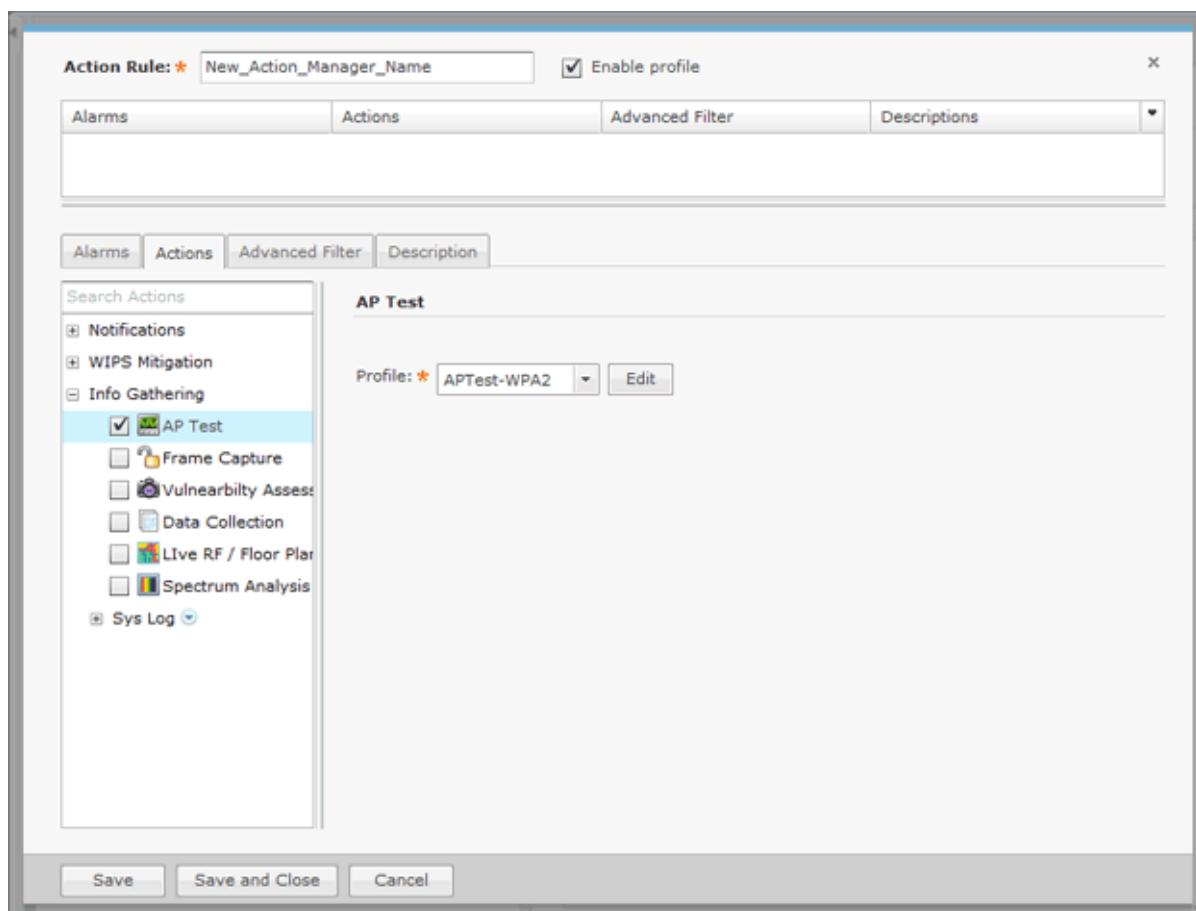


The following field is available:

Field	Description
Profile	Select a test profile from the drop-down menu. The Edit button can be used to modify the test profile. See Scheduled AP Tests on page 405 in The Menu chapter for details on how to schedule both automated and on-demand tests for APs.

Frame Capture

The Frame Capture action monitors and analyzes real-time data traffic flow from devices in your wireless LAN and saves the data in a file if the conditions defined in the filter are met. To select the **Frame Capture** action, select **Info Gathering > Frame Capture** from the Search Actions.

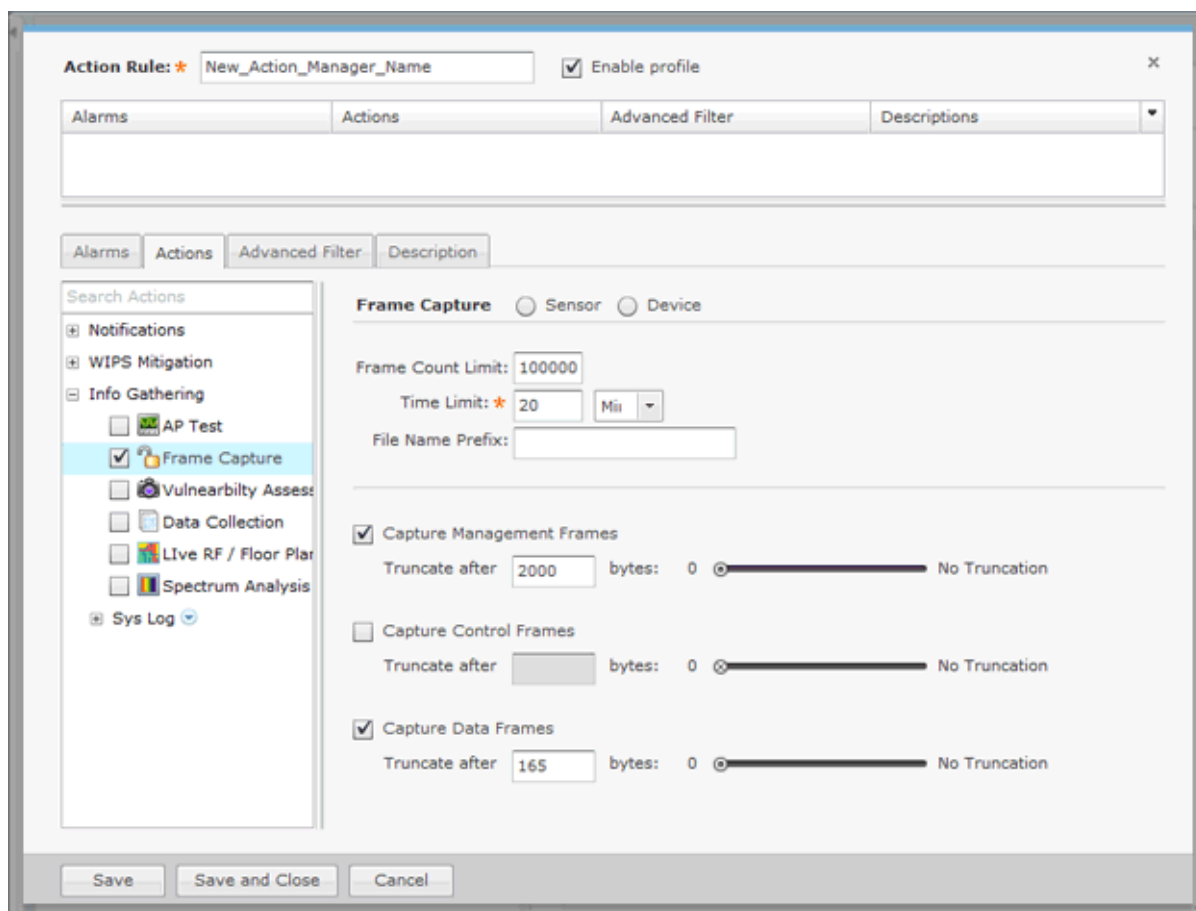

The following configuration fields are available:

Field	Description
Frame Capture	Limits the scope of the frame capture to a Sensor or a Device.
Frame Count Limit	Limits the total amount of frames to capture.
Time Limit	Specifies a time duration for the Frame Capture to run. You must enter x amount of minutes or hours.
File Name Prefix	Specifies a prefix for the file name. The prefix is added to a number sequence to make up the file name.
Capture Management Frames	Turns on capturing Management frames. Check the checkbox and slide the slider to specify when to stop capturing Management frames.
Capture Control Frames	Turns on capturing Control frames. Check the checkbox and slide the slider to specify when to stop capturing Control frames.
Capture Data Frames	Turns on capturing Data frames. Check the checkbox and slide the slider to specify when to stop capturing Data frames.

The captured file is stored in either - or, at times, both - of the following directories:


`/usr/local/smx/pcaptures` OR `/usr/local/smx/pcaptures/saved`.

Vulnerability Assessment



Note
Vulnerability Assessment requires a Vulnerability Assessment license for access.

The Vulnerability Assessment action runs a vulnerability assessment using the specified profile if the conditions defined in the filter are met. To select the Vulnerability Assessment action, select **Info Gathering > Vulnerability Assessment** from **Search Actions**.

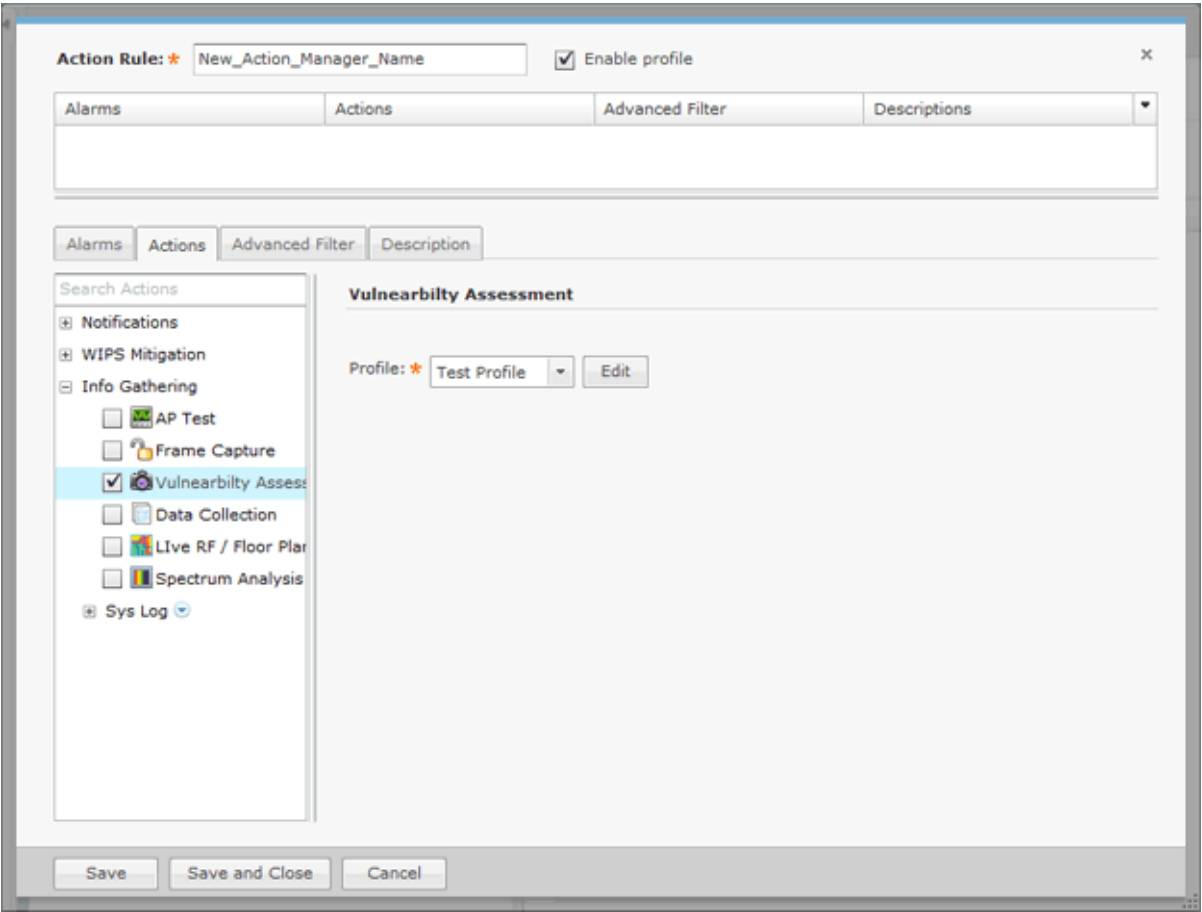

The following field is available:


Field	Description
Profile	Select an assessment profile from the drop-down menu. The Edit button can be used to modify the assessment profile. For more information on assessment profiles, refer to the for Vulnerability Assessment section in the Security chapter.

Once you enable a Vulnerability Assessment action rule for BSSs, a vulnerability assessment will only start when AirDefense detects a new alarm that was defined in the action rule. When the assessment is complete (after about 5 minutes), no other assessments will run until 10 minutes passes after the last vulnerability assessment was started. At that point, only another new alarm will trigger the Vulnerability Assessment

action rule. No other assessments will run until a new alarm is detected. Once a new alarm is detected, the cycle repeats itself.

Data Collection

The Data Collection action automatically corrects configuration compliance violations when the conditions defined in the filter are met. To select the Data Collection action, select **Info Gathering > Data Collection** from the **Search Actions**.

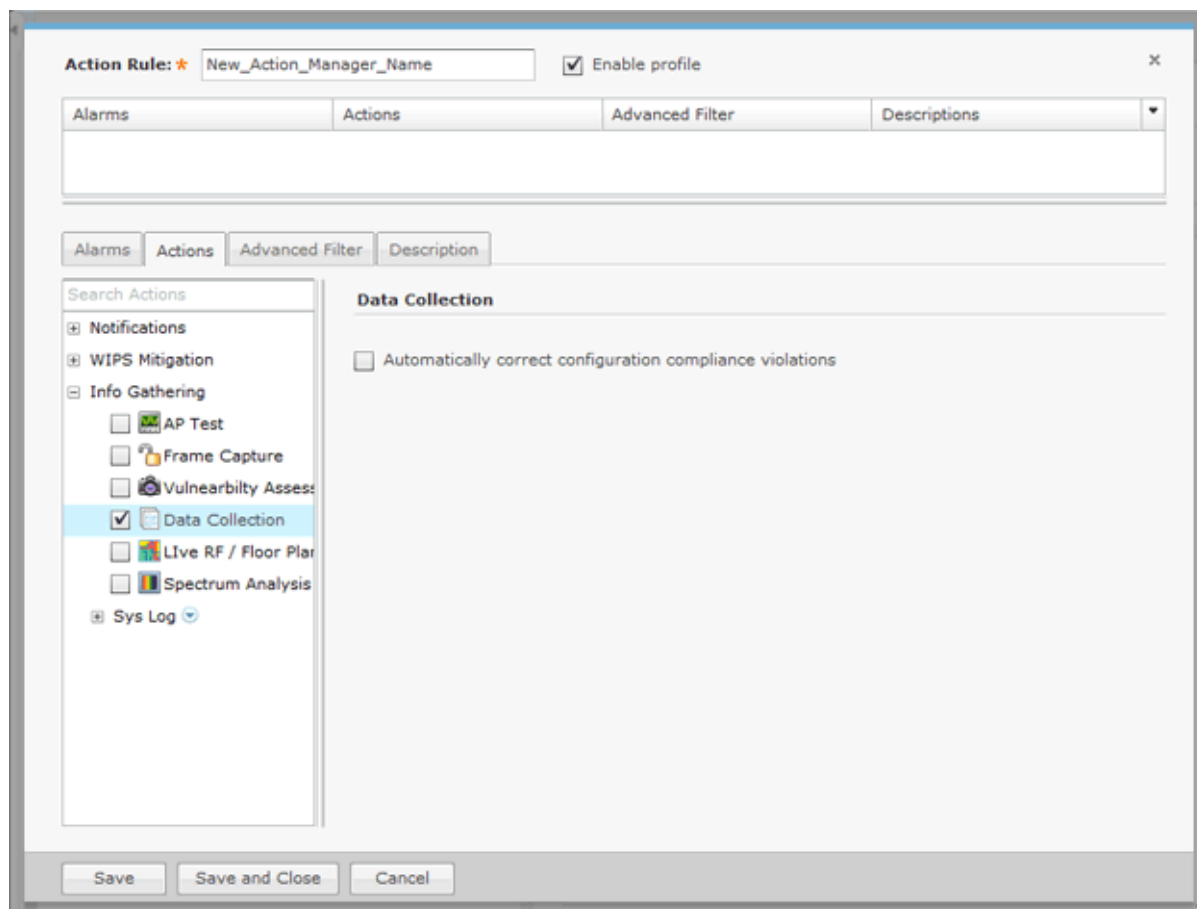

There is only one option: **Automatically correct configuration compliance violations**. When this option is selected and an alarm is generated by a device meeting the conditions specified in the filter, ADSP automatically uploads the last approved configuration to the device to correct any violations.


Live RF / Floor Plan



Note

Live RF / Floor Plan requires a Live RF license for access.

The Live RF / Floor Plan action runs an infrastructure device poll to update the heat map predictions in Live RF if the conditions defined in the filter are met. The next time the user accesses Live RF / Floor Plan they'll see the latest updates, and will be able to see whether or not any APs or Sensors are off line. To select the Live RF / Floor Plan action, select **Info Gathering > Live RF / Floor Plan** from the **Search Options**.

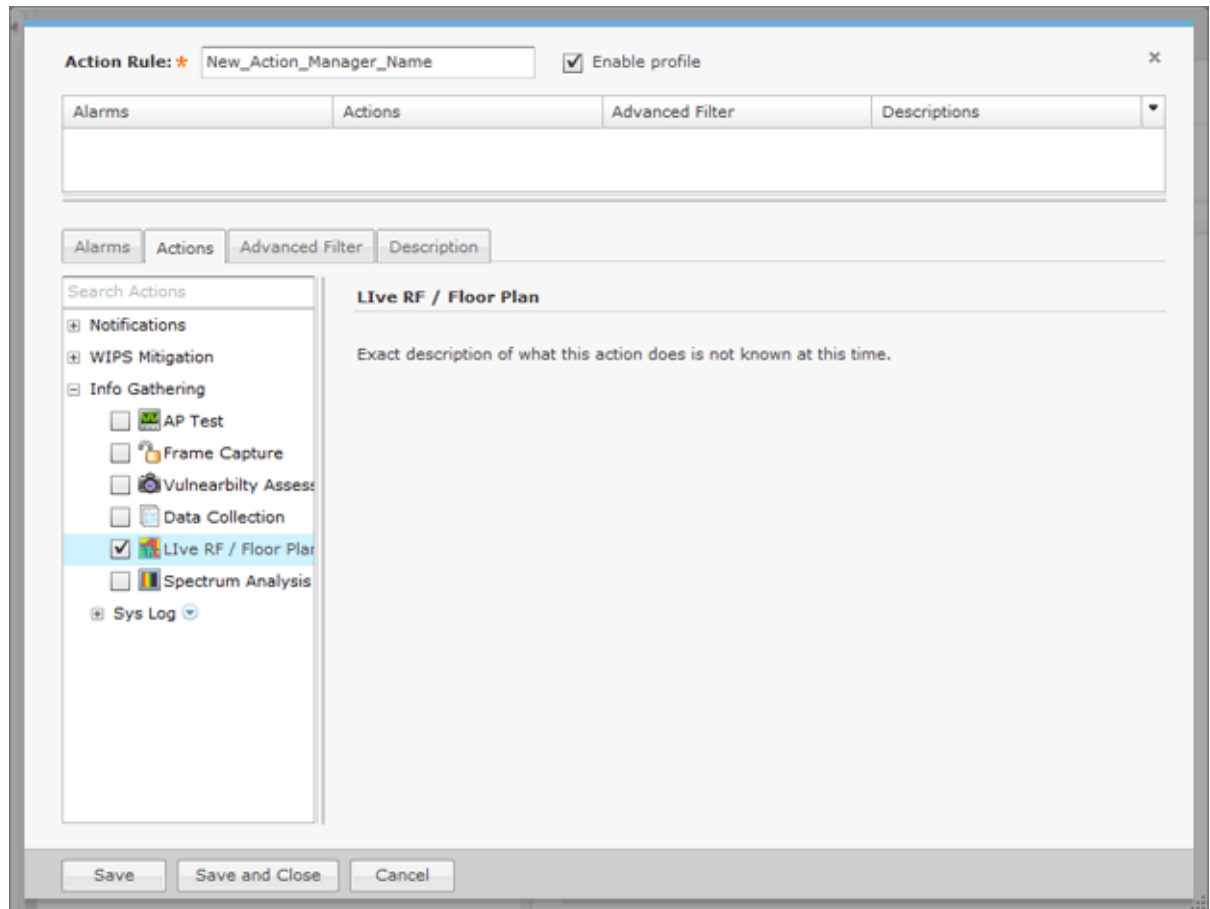

There are no configuration options for Live RF / Floor Plan.

Spectrum Analysis



Note

Spectrum Analysis requires a Spectrum Analysis license for access.

The Spectrum Analysis action runs a regular Spectrum Analysis or an Advanced Spectrum Analysis using the specified profile if the conditions defined in the filter are met. To select the Spectrum Analysis action, select **Info Gathering > Spectrum Analysis** from the Search Actions.

The screenshot shows the 'Spectrum Analysis' configuration window. At the top, there's an 'Action Rule' field with the value 'New_Action_Manager_Name' and a checked 'Enable profile' checkbox. Below this are tabs for 'Alarms', 'Actions', 'Advanced Filter', and 'Descriptions'. The 'Actions' tab is selected, showing a list of actions on the left: Notifications, WIPS Mitigation, Info Gathering (with sub-items: AP Test, Frame Capture, Vulnerability Assess, Data Collection, Live RF / Floor Plan, and Spectrum Analysis), and Sys Log. 'Spectrum Analysis' is selected. The main area is titled 'Spectrum Analysis' and contains a 'Time Limit' set to 5 minutes, a 'File Name Prefix' set to 'SA_', and two sub-tabs: 'Spectrum Settings' and 'Advanced Spectrum Settings'. Under 'Spectrum Settings', 'Full Scan' is selected. Under 'Advanced Spectrum Settings', 'Pulse Definition' is set with a 'Threshold' of -75 dBm and a 'Width' of 250 microseconds. At the bottom are 'Save', 'Save and Close', and 'Cancel' buttons.

The following fields are available:

Field	Description
Time Limit	Places a time limit on how long the Spectrum Analysis will run.
File Name Prefix	Defines a prefix for the Spectrum Analysis file. You may add to the prefix if you want to.
Spectrum Settings	Only used in regular Spectrum Analysis. These are the same Spectrum Settings described under Spectrum Settings .
Advanced Spectrum Settings	Only used in Advanced Spectrum Analysis. These are the Dedicated Scan Settings described under Advanced Spectrum Analysis . The In-Line Scan options cannot be changed. The Dedicated Scan options can be adjusted as needed.

Sys Log

The Sys Log action sends an alarm notification to your Sys Log server if the conditions defined in the filter are met. To select the Sys Log action, select **Info Gathering > Sys Log > Sys Log** from the **Search Options**.

Action Rule: ★ ☒ Enable profile

Alarms Actions Advanced Filter Descriptions

Alarms Actions Advanced Filter Description

Search Actions

- Notifications
- WIPS Mitigation
- Info Gathering
 - ☐ AP Test
 - ☐ Frame Capture
 - ☐ Vulnerability Assess
 - ☐ Data Collection
 - ☐ Live RF / Floor Plan
 - ☐ Spectrum Analysis
- Sys Log
 - ☒ Sys Log

Sys Log

Server Address: ★

Syslog Port: ★

Facility:

Format:

Email Send Time: Minute(s)



Priority Mapping:

- Severe:
- Critical:
- Major:
- Minor:
- Safe:

Save Save and Close Cancel

The following fields should be filled:

Field	Description
Server Address	Specifies the IP address of your Syslog server.
Syslog Port	Specifies the port you want to use for Syslog Notifications.

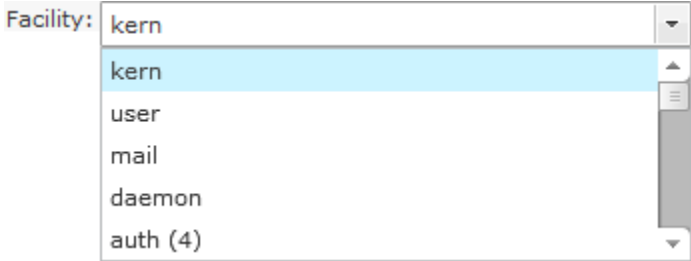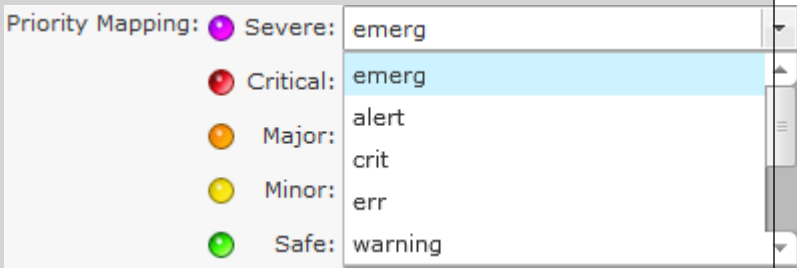Field	Description
Facility	Specifies a Syslog Facility which is an information field associated with a Syslog message. It is defined by the Syslog protocol. The intent of the facility is to provide an indication as to what part of the system the Syslog message originated. This facility can be very helpful to define rules that split messages, for example, to different log files based on the facility level. Choose a Syslog Facility from the drop-down menu. 
Format	Specifies the format of the notification. At this time, the only option is Syslog.
Email Send Time	Specifies when to send the email by selecting one of the following conditions: • On Alarm Activation • On Activation, clear or expire • Every x amount of minutes or hours.
Priority Map	The Priority Map enables you to change the name of the default priorities to an alternate selection. Click on the drop-down menu for the priority you would like to change and choose from the list. For example, if you want to change the priority for Severe, select an option from the Severe drop-down menu. 

Advanced Filter Tab

The Advanced Filter tab allows you to build a custom alarm filter or an expression to use as a alarm filter.

The following options are available:

- [Filter List](#) on page 570
- [Expression Editor](#) on page 573

Filter List

The Filter List lets you build an alarm filter from two or more conditions. To start a Filter List, click the **Filter List** radio button. Start off selecting when the filters (**When** statement) will be used. There are four options:


- All - All of the selected conditions must be met (logical 'and' operation).
- Any - One or more selected conditions must be met (logical 'or' operation).
- None (All) - None of the selected conditions are met (logical 'and' operation).
- None (Any) - One or more selected conditions are not met (logical 'or' operation).

The **When** statement works together with an **If** statement matching a filter with a value. The available filters are:

- AdditionalInfo
- Adhoc
- Associated
- AssociatedBSSClassification
- AssociatedBSSIP
- AssociatedBSSMAC
- AssociatedBSSName
- AssociatedBSSVendorPrefix
- Channel
- ConnectedToWired
- Criticality
- Device802_1XName
- DeviceAuditTime
- DeviceAuthentication
- DeviceCapabilities

- DeviceClassification
- DeviceClientType
- DeviceDHCP
- DeviceDNS
- DeviceEncryption
- DeviceFirmware
- DeviceFirstPolled
- DeviceFirstSeen
- DeviceIP
- DeviceLastAdoption
- DeviceLastDataPoll
- DeviceLastPolled
- DeviceLastSeen
- DeviceLastStatusPoll
- DeviceMAC
- DeviceManufacturer
- DeviceModel
- DeviceName
- DevicePolledID
- DevicePolledSSID
- DeviceProtocol
- DeviceSSID
- DeviceSensedID
- DeviceSensedSSID
- DeviceSerial
- DeviceType
- DeviceVendorPrefix
- SensorIP
- SensorMAC
- SensorName
- SignalStrength
- WatchList
- WiFiDirect.

When a filter is selected, an **Edit** button is displayed. Click the **Edit** button to select a mathematical comparison to indicate the relationship between the filter and a value that you specify. In the following example, the `Channel` filter has been selected.

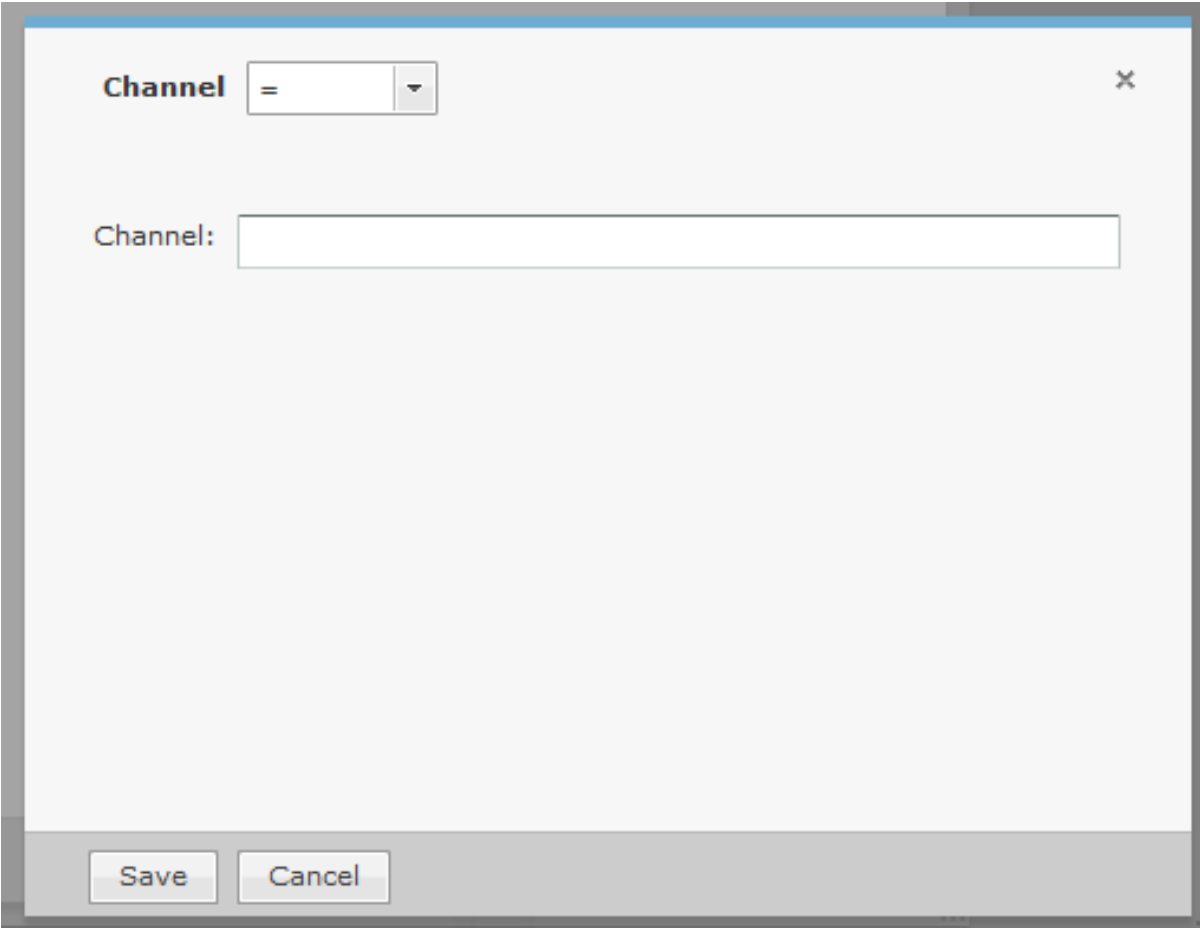

Click the drop-down menu to select the type of comparison. This will vary according to the selected filter. The type of comparison may be:

=	Is equal to
!=	Is not equal to
<	Is less than
<=	Is less than or equal to
>	Is greater than
>=	Is greater than or equal to
LIKE	Is similar to, matches some portion (Used for a partial match)
ILIKE	Case insensitive partial match
IN	Condition exists within the filter value (usually used when the filter combines two or more variables which must be compared in some way to create a trigger)

There will be one or more other fields to determine a value. This will vary according to the selected filter. Click **Save** to save the comparison.

The following screen shot shows an example of a Filter List.

Alarms Actions **Advanced Filter** Description

☒ Filter List ☐ Expression Editor

When All of these filters are met...

If Channel Edit X

And DeviceMAC Edit X

Add Another (limit: 25 filters)

You can have up to 25 filters. Click the **Add Another** button to add additional filters.

You can remove a filter by clicking the **X** next to the filter.

Expression Editor

The **Expression Editor** allows you to build a filter using expressions. An expression is made up of a field, operator (parentheses or quotation marks), and a value. The filters are the same as the ones used in the Filter List.

The operators (parentheses and quotation marks) are:

!	Logical NOT operator.
(	
)	
AND	Logical operator. Used to combine two expressions
OR	Logical operator. Use to choose one of two expressions
=	Is equal to
!=	Is not equal to
<	Is less than
<=	Is less than or equal to
>	Is greater than
>=	Is greater than or equal to
LIKE	Is similar to, matches some portion (Used for a partial match)
ILIKE	Case insensitive partial match
IN	Condition exists within the filter value (usually used when the filter combines two or more variables which must be compared in some way to create a trigger)

	Wildcard matching any character
NOT IN	Opposite of IN. Condition does not exist within the filter value.

You can use AND/OR or parentheses to create complex expressions.

The filter is selected from a drop-down menu while the operators (parentheses and quotation marks) are selected by clicking on them. The filter values vary depending on the filter just like in the Filter List.

You may type in part or all of the expression. If the expression is valid, a message Parsing successful. is displayed at the bottom of the window. If the expression is invalid, an error message is displayed.

Note the use of wild cards in the screen shot expression:

```
DeviceSSID LIKE ".*abc.*" AND DeviceManufacturer ILIKE ".*cisco" AND SensorMAC IN ("00:16:5d:.*")
```

When using wild cards with the operators `LIKE`, `ILIKE`, or `IN`, you must use `"."` notation instead of `"*"` notation. If you use the `"*"` notation, the **Action Rule** will fail.

Description Tab

Enter a description of the action on the **Description** tab.

Type a description and then click **Save** or **Save and Close**.

Apply an Alarm Action Manager Template

Once you have defined an **Alarm Action Manager** template, to use it, you must apply it to your system. To apply a template, you must first select the **Enable configuration** check box.

Assignment	Template Name	
☒	Action_Manager_Corporate	(Edit Copy Delete)
☐	Action_Manager_Guest	(Edit Copy Delete)



Note

You may select multiple **Alarm Action Manager** templates by checking more than one check box.


You should always apply an Alarm Action Manager template at the appliance level. When you do, the profile is inherited for all the other levels. Then, if you have a level that

needs a different Alarm Action Manager template, you can apply that template to that level. For example, in the above screen shot, the Alarm Action Manager template for the appliance is the `Action_Manager-Corporate` template and then for a special case (in the following screen shot) you could override the Alarm Action Manager template at the ADSP level and apply the `Action_Manager-Guest` template to the *Sanctuary Park* network level.



Note

The **Override** settings option is available when you select (highlight) a network level below the appliance level. Use the **Expand**  button to reveal the other levels.

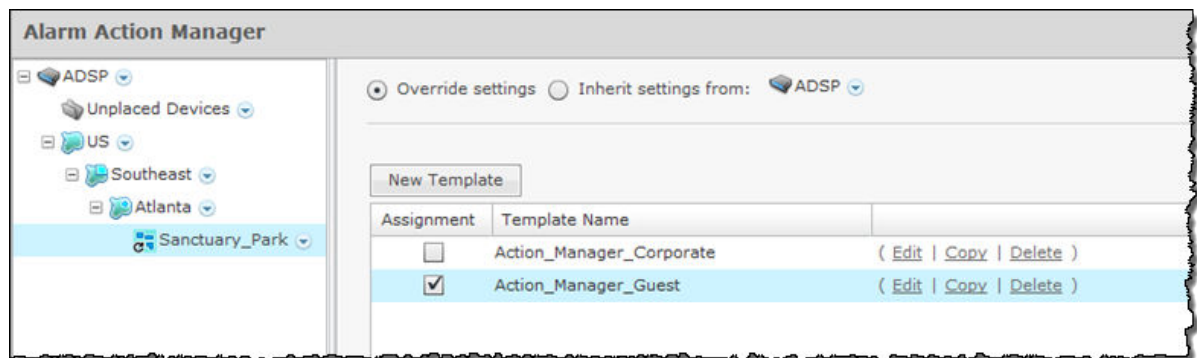

You can copy Alarm Action Manager templates to all your appliances by clicking the **Copy settings to all appliances** button.




Note

You must have a Central Management license in order to copy settings to all appliances.

Click the **Apply** button to save your changes. Click the **Reset** button to discard your changes.

Alarm Configuration

ADSP generates alarms when certain events or conditions occur in your wireless LAN that violate a policy or performance threshold. The Alarm Types feature allows you to configure alarms for your network environment. ADSP alarms are categorized into nine types so that you can easily identify them. To access this feature, go to **Configuration > Operational Management > Alarm Configuration**.

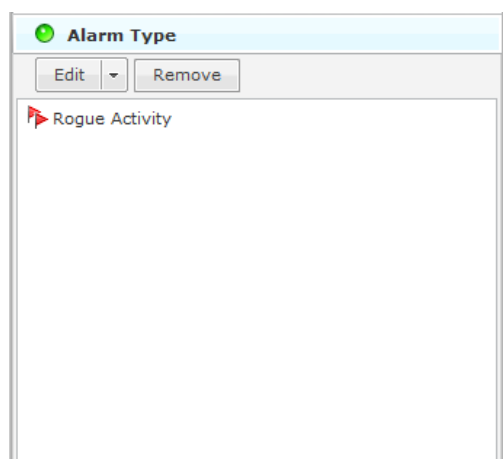

Each alarm type is broken down into sub-types and then the actual alarm. The alarm types are:


- Anomalous Behavior - Devices that operate outside of their normal behavior settings and generate events that could indicate anomalous or suspicious activity.
- Bluetooth - Bluetooth monitoring is a unique capability in AirDefense for 24x7 monitoring of Bluetooth devices in Enterprise environments.
- Exploits - Events caused by a potentially malicious user actively interacting on your Wireless LAN using a laptop/PC as a wireless attack platform.
- Infrastructure - Events that are generated based on the SNMP traps received from the infrastructure devices.
- Performance - Wireless LAN traffic that exceeds set performance thresholds for devices.
- Platform Health - Events that provide information about the state of the AirDefense Services Platform and the sensors which report back to the appliance.
- Policy Compliance - Wireless LAN traffic that violates established or default policies for devices.
- Proximity - Proximity Awareness & Analytics provide a number of key functions, including Presence Services, Wi-Fi Analytics, Locationing (RTLS) Services, and Historic Location Analysis.
- Reconnaissance - Monitors and tracks external devices that are attempting to monitor your Wireless LAN.
- Rogue Activity - Unauthorized devices detected by ADSP which pose a risk to the security of your network.
- Vulnerabilities - Devices that are detected to be susceptible to attack.

To configure an alarm, you must use the tree to drill down to the alarm and then make changes (see [Configuring Alarms](#)) or you can use Alarm type search. Just start typing related text until you see the alarm you are searching for.

Configuring Alarms

Before you can configure an alarm, you must drill down to it using the alarm tree. First, select an alarm type (such as Rogue Activity.) Click the + sign next to the alarm to

display the alarm sub-type(s). Drill down until you reach the actual alarm. When you click on the alarm, the following screen is displayed.

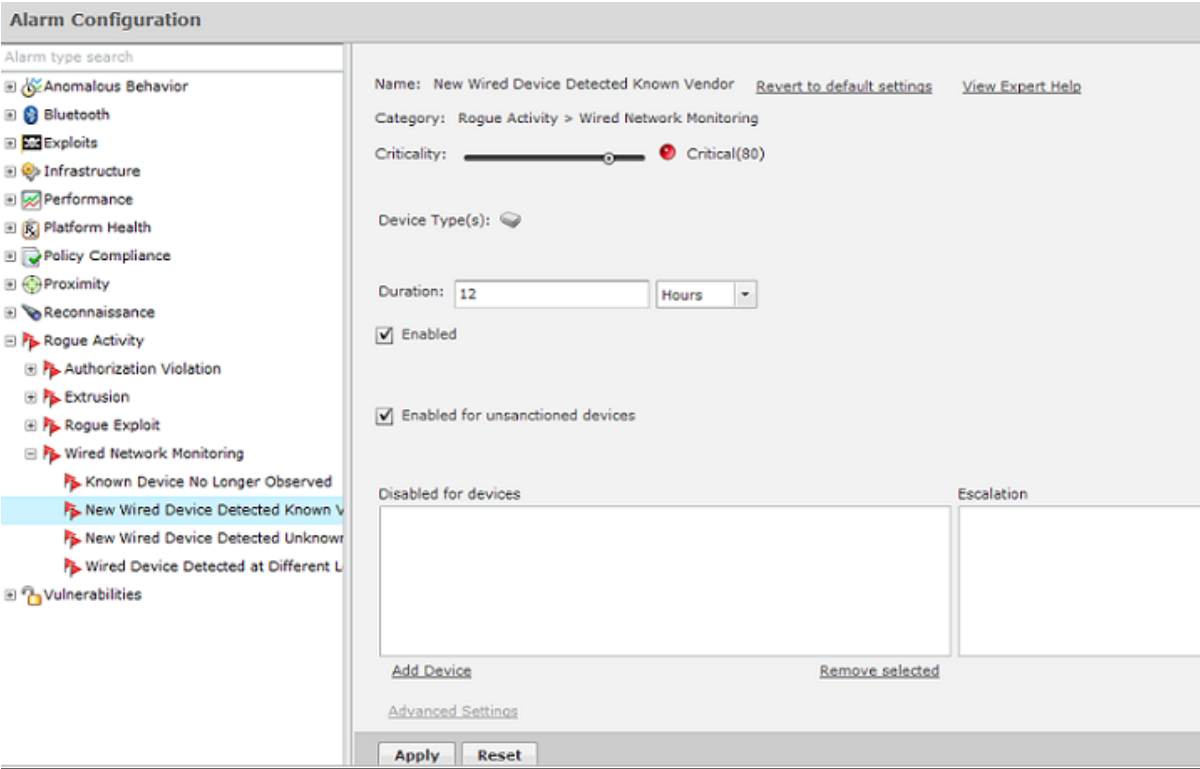

When an alarm is selected, the alarm configuration options are displayed on the right. You can view more information about an alarm by clicking the **View Expert Help** link. This will display another window where you can view the following alarm information by clicking the appropriate link:

- Summary - A summary description of the Alarm.
- Description - More detailed description of the alarm and what the likely cause is of the alarm.
- Investigation - Instructions for using tools and features in ADSP to investigate the Alarm.
- Mitigation - Suggestions on how to mitigate the problem detected.

You should change the options to fit your network environment. Available options are:

Option	Description
Name	The name of the alarm.
Criticality	Use the sliding scale to set the alarm criticality to a value between 0 and 100. The designated color will automatically adjust as you move up or down the scale for <i>Safe</i> , <i>Minor</i> , <i>Major</i> , <i>Critical</i> , and <i>Severe</i> . The new numerical value will be used to calculate the Threat Score .

Option	Description
Duration	An active alarm means that at least one condition occurred that triggered the alarm, and the condition still holds true. When the condition of the alarm no longer holds, the alarm will remain visible for an amount of time called the <i>Alarm Duration</i> . Although you can customize the alarm duration, the default values are recommended. After the condition and the alarm duration have expired, the alarm becomes inactive, although it will remain visible in the historical logs. (You can view the historical logs using Forensic Analysis .) You can also clear an alarm before the duration expires.
Enabled	If checked, the alarm is enabled for all devices.
Enabled for sanctioned	If checked, the alarm is enabled for authorized devices.
Enabled for unsanctioned devices	If checked, the alarm is enabled for unauthorized devices.
Enabled for neighboring devices	If checked, the alarm is enabled for ignored devices.
Disabled for devices	The alarm is disabled for any device listed in the table. Click the Add Device button to add a device to the list. You are prompted to enter the devices MAC address. Typing a partial MAC address will list all the devices matching your typed string. You can then select the device or devices that you want to select. When you click on a device, it is automatically added to the list. Typing the entire MAC address will list only the device matching that address. Clicking the Advanced link will display a Device Search dialog window. You can then search for a device using any combination of the following criteria: • Device name • MAC address • 802.1X name • DNS name • Vendor name • SSID • Protocol used. After selecting your search criteria, click the Search button to display a list of devices matching the search criteria. Click on the device or devices that you want to add to the device list. Click Close when you are done. You can return to the original window by clicking the Basic link where you can enter only the MAC address. Clicking the Remove selected link will remove the selected device from the list.
Advanced Settings	Depending on the alarm, this link may or may not be active. Its function varies according to the alarm. Normally, you will enter a value to place limits on an alarm.

Click **Apply** to save your changes. You can revert back to the original settings by clicking the **Reset** link.

The **Check Synchronization** button is used to check all appliances in the network to ensure they are using the same alarm configuration. (The synchronization features works basically the same way wherever the feature is implemented. Synchronizing Accounts has a good example of how the synchronization feature works.)

**Note**

You must have a Central Management license in order to use the Check Synchronization feature.

Anomalous Behavior Alarms

Behavior Alarms track atypical device behavior based on a long term forensic baseline of devices at that site. AirDefense utilizes the Forensic Datastore to monitor and store over 325 wireless statistics for each device on a minute-by-minute basis. Statistical analysis is performed over 2 weeks of this historical data to create a baseline of activity for devices. Events are generated when a device operates outside of its normal behavior to alert the administrator of anomalous or suspicious behavior.

For example, consider a user device that has a wireless usage behavior baseline of basic web and email access. A behavior event would be raised if this user then suddenly downloads significant amount of data after business hours, a time period when the station is not normally active. This anomalous behavior could be indicative of a stolen or spoofed identity, or disgruntled employee that may be downloading significant amounts of confidential and/or proprietary information. Behavior Alarms are broken down into the following two sub-types:

- BSS Abnormal Activity - Anomalous behavior events specific to BSSs.
- Wireless Client Abnormal Behavior - Anomalous behavior events specific to Wireless Clients.

Alarm Library

To view a list of Behavior alarms for each alarm sub-type, go to **Configuration > Operational Management > Alarm Configuration**, open **Anomalous Behavior**, and then open the alarm sub-type to see all the alarms associated with the sub-type.

Bluetooth Alarms

Bluetooth alarms provide 24x7 monitoring of Bluetooth devices in your network. The system can automatically detect security threats from unsanctioned Bluetooth devices and proactively notify administrators about the presence of these threats. The Bluetooth alarm sub-type is Bluetooth Devices:

- Rogue Bluetooth Device
- Rogue Bluetooth Device Out of Hours
- Unsanctioned Bluetooth Device

Alarm Library

To view a list of Bluetooth alarms for each alarm sub-type, go to **Configuration > Operational Management > Alarm Configuration**, open **Bluetooth**, and then open the alarm sub-type to see all the alarms associated with the sub-type.

Exploits Alarms

Exploits are events in which a user is actively interacting with the wireless network or wireless medium. By exploiting wireless vulnerabilities a malicious user could cause wireless network disruptions or use the wireless medium to gain access to corporate resources and confidential data. The vulnerabilities may exist due to network configuration, corporate policy, or an inherent flaw in the 802.11 protocol. A malicious user with basic computer skills, a laptop, and a CD drive can obtain various sets of open source tool kits which will transform the laptop into a fully configured wireless attack platform.

As time has progressed these tool kits have become increasingly easier to use while offering an increasingly sophisticated toolset. The bottom line is the wireless attack tools have become accessible to a broader range of users. Because exploits involve active interaction with the wireless network, AirDefense recommends timely action to understand and mitigate the threat to minimize security exposure. Exploits Alarms are broken down into the following three sub-types:

- **Active Attacks** - Active attacks subcategory includes active malicious interaction with the wireless network. Active attacks are severe and present a high security risk and potential for significant exposure. Because these events are active in the wireless network, timely investigation is recommended to prevent the attack from continuing. These events can be mitigated wirelessly to minimize and prevent continued exposure; mitigation can be initiated manually by the administrator or automatically if the system has been configured for policy-based termination.
- **DoS - Denial of Service (DoS)** events can cause significant disruption in the wireless networks by preventing a user from accessing a wireless resource. In wireless networks, DoS events can happen in two forms: the first form is a DoS attack directed at a specific device and the second form is a DoS attack directed at the wireless medium. Device level attacks will affect one or more devices depending on the attack setup; broadcast attacks for example can impact all stations associated to an SSID, whereas a more directed attack will only impact a single station leaving other stations connected to the SSID. In either case DoS attacks of this nature consume wireless bandwidth. The second type of attacks directed at the medium exploit inherent flaws in the 802.11 protocol impacting all devices on the channel by making the medium temporarily unusable. Denial of Service (DoS) attacks by themselves are of little use to a hacker or malicious user, but they may serve as the foundation for other more significant exploits.
- **Impersonation Attacks** - Many of the parameters in the 802.11 specification which are used to uniquely identify wireless networks and the wireless devices themselves are contained in clear unencrypted sections of the wireless traffic. Malicious users who listen to traffic in promiscuous mode are able to easily learn what these parameters are. Because the current 802.11 standard doesn't offer any validation of these parameters techniques called spoofing or identity theft have been developed to impersonate wireless devices to exploit wireless networks. Impersonation exploits

are performed through the use of tools which craft wireless traffic substituting some of the learned parameters into the transmitted traffic. Because the wireless devices are unable to distinguish the impersonated traffic from the legitimate traffic, all traffic is processed as legitimate traffic including the malicious traffic. Impersonation is the foundation of a significant percentage of basic and advanced wireless exploits and may be the first sign of a sophisticated attack.

Alarm Library

To view a list of Exploits alarms for each alarm sub-type, go to **Configuration > Operational Management > Alarm Configuration**, open **Exploits**, and then open the alarm sub-type to see all the alarms associated with the sub-type.

Infrastructure Alarms

Infrastructure Alarms alert you to events that are generated based on the SNMP traps received from the infrastructure devices. Each infrastructure device is capable of forwarding SNMP traps to alert the ADSP of significant events related to the device. Examples of SNMP traps include ColdStart indicating that a device has recently rebooted or CPU Limit Exceeded indicating that the CPU on a device has reached a critical level for a period of time. The SNMP traps received from infrastructure devices are configurable on a per device basis. Each trap includes a message defining the significant event and optional *varbinds* that provide additional information related to the event. Each infrastructure device includes settings for enabling a specific trap or group of traps, where the trap(s) should be forwarded and what community string should be used to allow the management station to process the trap (similar to a password). Each infrastructure device must be configured to enable the proper traps, the trap receiver (IP address of the Wireless Services Platform) and community string before the notifications will be processed. By default, the community string "public" should be used when enabling traps on an infrastructure device.



Note

To enable SNMP traps, you must use ADSPAdmin. Details are included in the AirDefense Services Platform 9.0 User Guide.

Infrastructure Alarms are broken down into the following nine sub-types:

- **Device Operation** - Device operation events are based on operations-related SNMP trap notifications from infrastructure devices. The alarms in this category indicate that a standard process or service on an infrastructure device has changed. Device operations can include a host of services from Dynamic Host Configuration Protocol (DHCP), cluster or redundancy control, Remote Authentication Dial-in User Service (RADIUS) server enablement or even Hotspot status changes. Events in this category assist in understanding if the proper services are running on an infrastructure device and if there may be any issues related to a specific service.
- **Device Status** - Device status events are based on operational status of an infrastructure device. The alarms in this category indicate whether a device is running, in what state a device may be operating, or if a device is currently offline. Device status events are not tied solely to the core infrastructure device such as a wireless controller, but also includes the adopted / port status. An may be denied

adoption due to a wireless controller configuration option and an incorrect network setup.

- **Diagnostics** - Diagnostics events are based on hardware and software status notifications received in the form of SNMP traps for an infrastructure device. The alarms in this category trigger when hardware and software resource limits are reached.
- **MIB-II** - MIB-II events are based on standard Management Information Base (MIB) II SNMP traps for an infrastructure device. MIB-II traps are defined in RFC 1098 as traps supported by all devices that use the MIB-II standard. While most devices will use MIB-II to define these traps - some devices have ported these traps into their 'private' or 'proprietary' MIBs as defined by the hardware vendor.
- **Others** - All the unregistered SNMP traps from infrastructure devices.
- **Performance** - Performance events are based on the infrastructure device performance as related to the wireless network. Events in this category provide critical information about wireless station behavior (authentication and association), interference or congestion, and wireless utilization levels in the environment.
- **Platform Events** - Platform events are based on configuration-related internal notifications and configuration-related SNMP traps received from infrastructure devices. The alarms in this category indicate that a configuration event has occurred on an infrastructure device including a configuration change, a configuration is out of compliance or that a configuration update has failed. Device configurations are monitored for changes on a periodic basis to ensure that the device configuration matches the assigned profile for a device based upon the folder where a device is located. If the configuration on the infrastructure device does not match an alert will trigger a notification of the configuration change. SNMP trap notifications from devices can also indicate if a configuration has changed.
- **Security** - Security events are based on wireless network security SNMP traps received from infrastructure devices. The alarms in this category indicate that a security-related event has occurred as detected by an infrastructure device. Wireless controllers and APs that have been dedicated as 'detectors' periodically scan the wireless network for neighboring APs, possible rogue devices, wireless intrusions and active wireless attacks.
- **Statistics** - Statistics events are based on wireless network and service statistic SNMP traps received from infrastructure devices. Infrastructure devices measure network service performance (Hotspot status) and statistical thresholds as set in a device configuration. Statistical events are triggered when a specific statistical threshold has been exceeded. Examples of statistical thresholds include packets per second, throughput, average retries, and packets dropped. Setting statistical thresholds are useful for measuring network performance on a per infrastructure device basis.

Alarm Library

To view a list of Infrastructure Alarms for each alarm sub-type, go to **Configuration > Operational Management > Alarm Configuration**, open **Infrastructure**, and then open the alarm sub-type to see all the alarms associated with the sub-type.

LBS Alarms

Location Based Services (LBS) alarms alert you to visitors with Wireless Clients entering or leaving your location. LBS Alarms are broken down into the following two types:

- PresenceA Wireless Client has been detected in the environment or has left the environment.
- Region PresenceA Wireless Client has met one of the following conditions:
 - Entered a predefined virtual region.
 - Exited a predefined virtual region.
 - Has been detected in a predefined virtual region for a specified amount of time.
 - Has been detected within a specified distance of a predefined virtual region.

Alarm Library

To view a list of LBS alarms for each alarm sub-type, go to **Configuration > Operational Management > Alarm Configuration**, open **LBS**, and then open the alarm sub-type to see all the alarms associated with the sub-type.

Performance Alarms

Performance Alarms alert you to events that provide critical information about the service levels of the wireless network. In a wireless environment, Performance events can be an indication of problems related to configuration, compatibility, congestion, coverage, potential interference sources, and utilization levels. Because 802.11 operates in a shared and unlicensed frequency spectrum, it is possible that performance issues may be the result of non 802.11 devices such as microwaves and cordless phones, or could be a result of a conflict with other 802.11 devices, including both valid devices as well as neighboring devices transmitting into the monitored airspace.

Performance Alarms are broken down into the following eight sub-types:

- AP Testing - AP Testing Events track network failures and provide proactive notification that the network resources may be unavailable. The alarms in this category indicate a failure of one of the test conditions. Any alarm should be considered a high priority event as it may be preventing the wireless applications from operating properly.

These connectivity tests can be run automatically or manually. The AP test uses the deployed sensors as a wireless station to connect to an AP and validate the available resources. The test validates wireless authentication, encryption, DHCP, ACL, firewall testing, general network connectivity and application availability testing.

- Configuration/Compatibility - 802.11 Wireless networks operate in unlicensed frequency ranges capable of operating in numerous different configurations. Monitoring the wireless devices operating configuration will ensure maximum compatibility and network performance.
- Congestion - 802.11 Wireless network operate in a shared and uncontrolled medium; congestion is inevitable as the number of wireless devices and bandwidth demands increase. AirDefense Enterprise proactively monitors for congestion problems to ensure maximum performance on the wireless network.

- Coverage - 802.11 Wireless networks operate in unlicensed frequencies; however the allowable power output by any single device has been regulated. This limits range and coverage capable by any single 802.11 capable wireless device. The main causes of coverage problems are related to deployments. AirDefense Enterprise provides detections of coverage problems to assist in troubleshooting specific areas of the wireless networks.
- LiveRF - LiveRF is a tool that uses live data from sensors and WLAN infrastructure to provide real-time visualizations of the environment. The use of live data feeds ensures the visualizations accurately represent environmental changes and transient issues which may not have been captured in the plan or site survey. Visualizations provided allow administrators to troubleshoot wireless connectivity, throughput issues, capacity problems and identify RF interference sources for a floor or entire building. All of this is performed from a central console, so troubleshooting can be performed without having to send administrators out to remote locations. LiveRF also allows runs in the background to automatically detect network problems based on thresholds defined by the administrator. The alarms in this category are a result of these proactive network problem detection capabilities.
- Potential Interference Sources - 802.11 devices operate in unlicensed frequency ranges, 2.4GHz for b/g and 5GHz for a-channels and are subject to interference from other devices utilizing the same frequency. Common examples of these devices are: microwave ovens, Bluetooth devices, baby monitors, cordless telephones, Zigbee devices, non 802.11 wireless security cameras and wireless USB devices (wireless keyboard and mouse).
- RF Spectrum Analysis - 802.11 Wireless networks operate in unlicensed frequencies. This includes any non 802.11 transmitters such as cordless phones, and Bluetooth share frequency spectrum with 802.11 wireless networks. A non 802.11 transmitter can impact the network by causing interference. Identifying the source is difficult with standard 802.11 hardware as these simply appear as noise. Spectrum Analysis can be used to identify the source of the interference and judge the impact the interferer will have on the wireless network.
- Utilization - 802.11 Wireless networks operate in a medium where all devices share the available bandwidth. Any single device is capable of impacting performance by using all available wireless resources. AirDefense Enterprise monitors over 50 performance related utilization statistics for the authorized wireless devices, to ensure that utilization related performance problems are discovered before causing significant wireless network performance degradation.

Alarm Library

To view a list of Performance alarms for each alarm sub-type, go to **Configuration > Operational Management > Alarm Configuration**, open **Performance**, and then open the alarm sub-type to see all the alarms associated with the sub-type.

Platform Health Alarms

Platform Health Alarms alert you to events that provide information about the state of the AirDefense Services Platform and the Sensors which report back to the appliance. Platform Health Alarms are broken down into the following three sub-types:

- License Manager - License events provide information about the features and functionality in the AirDefense that require a license to operate.
- Platform - Platform events provide operational and health information about the AirDefense appliance.
- Sensor - Sensor events provide operation and health information about the Sensors that are reporting back to the AirDefense appliance.

Alarm Library

To view a list of Platform Health alarms for each alarm sub-type, go to **Configuration > Operational Management > Alarm Configuration**, open **Platform Health**, and then open the alarm sub-type to see all the alarms associated with the sub-type.

Policy Compliance Alarms

Policy Compliance Alarms alert you to events that provide information about the observed operational configuration compared to the configured configuration. Policy discrepancies which are found allow configuration vulnerabilities to be corrected before they could be exploited. Sanctioned configuration problems account for a significant percentage of security vulnerabilities in any organization. Policy configuration problems typically result in significant security issues and should be addressed in a timely manner. Policy Compliance Alarms are broken down into the following eight sub-types:

- 802.11 Encryption - 802.11 Wireless networks operate in a shared medium; all devices within the range of the transmission can passively hear the sender. Encryption is implemented in wireless networks to allow for secure transmission of data, and to prevent eavesdroppers from reading the contents. ADSP monitors the authorized APs to ensure that the defined encryption mechanisms are always used and the network operates in compliance with the enterprise policy.
- Advanced Key Generation - 802.1x Authentication provides a mechanism to authenticate a user and/or computer against a network and generate the keys necessary to encrypt data; if required, the keys can be changed dynamically. ADSP monitors the authorized APs to ensure that the defined advanced key generation mechanisms are always used and the network operates in compliance with the enterprise policy.
- AirDefense Personal Policy Violation - AirDefense Personal is a client product designed to monitor the edge of the network. The edge of the network is defined by the mobile work force and their laptops that travel throughout the world to airports, hotspots, hotels, etc. As mobile workers travel they have confidential and proprietary corporate data to protect and can access the corporate network through a VPN (Virtual Private Network). User stations typically present the weakest security link to a malicious users. AirDefense Personal ensures that the enterprise policy is enforced any where, any time the client is using mobile resources, even when it is outside of the range of ADSP monitoring Sensors.

- Authentication - ADSP monitors 802.11 authentication as defined in the company policy against what has been observed in the air, allowing for notification of enterprise compliance policy violations.
- Environment - Environmental events allow for monitoring of generic operation wireless network activities. These events could have an impact on enterprise compliance, security and performance requirements.

ADSP Environment policy compliance includes alarms that alert you to Wi-Fi Direct devices that are violating your network compliance policy. Wi-Fi Direct is peer-to-peer networking which may present issues with corporate networks controlling Wi-Fi Direct devices. Being able to detect Wi-Fi Direct gives corporate personnel a tool to investigate and determine if there is a threat to their network.

- Global - Global events are generic informative events about observed behavior in the wireless network.
- Incorrect BSS Configuration Observed - BSSs typically have static configuration set by the administrator. A BSS which changes its configuration or is not using the default configuration could prevent authorized access or allow unauthorized access. Incorrect configuration events monitor the BSS configuration as observed through the air against defined operational policies.
- Other Encryption - 802.11 Wireless networks operate in a shared medium; all devices within the range of the transmission can passively hear the sender. Encryption is implemented in wireless networks to allow for secure transmission of data, and to prevent eavesdroppers from reading the contents. Other Encryption category allows for monitoring of 3rd party encryption that is not defined in the 802.11 specification, offering an additional level of security for the wireless network. ADSP monitors the authorized APs to ensure that the defined encryption mechanisms are always utilized and the network operates in compliance with the enterprise policy.

Alarm Library

To view a list of Policy Compliance alarms for each alarm sub-type, go to **Configuration > Operational Management > Alarm Configuration**, open **Policy Compliance**, and then open the alarm sub-type to see all the alarms associated with the sub-type.

Proximity

Proximity Awareness and Analytics alarms provide a number of key functions, including Presence Services, Wi-Fi Analytics, Locationing (RTLS) Services, and Historic Location Analysis. Proximity Alarms are broken down into the following sub-types:

- Location Subscribers - Web servers can be registered as Location Subscribers on an ADSP appliance. ADSP will then proactively push Proximity data to these subscriber servers as it becomes available. Alarms in this category describe communication failures with those subscriber servers.
- Presence - The Presence function supports identification of Wi-Fi devices using the sensors in the target environment. Presence allows the system user to prepare for arrival of the subject device in the target environment. Detection of devices is automatic and alerts the system that a device has been detected on site or in the facility. The presence function also supports the push of information using the API to external systems and applications which may use the information to trigger

additional actions. Presence is engineered for quick setup and does not require any information regarding the physical environment of the store or facility.

- **Region Events** - The Locationing function supports real-time tracking of Wi-Fi targets based on the Real-Time Locating System standard (RTLS). This capability allows solution operator to resolve the position of a target device to within a radius of three meters. The system will also track the target and, with additional information such as the physical layout of a facility, will enable the operator to support enhanced engagement based on defined boundaries, device profiles and behaviors. Real-life applications of the capability include: Geofencing, Prioritized Device Tracking, and Wi-Fi Device Inventory.

Alarm Library

To view a list of Proximity alarms for each alarm sub-type, go to **Configuration > Operational Management > Alarm Configuration**, open **Proximity**, and then open the alarm sub-type to see all the alarms associated with the sub-type.

Reconnaissance Alarms

Reconnaissance Alarms alert you to events that track devices which are actively attempting to locate wireless networks. 802.11 wireless networking operates in a shared medium in which the wireless signals are not constrained by the traditional physical boundaries. Signals may extend outside of building boundaries into parking lots or neighboring faculties enabling valid client devices, attackers or malicious users to receive the signals and discover available wireless networks. Wireless behavior from supplicants such as Windows XP zero configuration client (WZC) is an example of normal reconnaissance behavior where the client will continue to probe for all configured networks; this is normal reconnaissance activity that allows the clients to find networks which do not broadcast SSIDs.

Alternatively, reconnaissance may be used by a malicious user as the first step in an attack on a wireless network. Open source reconnaissance tools, such as Wellenreiter, Netstumbler, and Dstumbler, can be used to discover wireless networks. Some reconnaissance tools use active methods to detect wireless networks and are easily detected by ADSP, while other tools such as Kismet have transitioned to a passive or "listen only" mode, and cannot be detected by any WIDS platform. For customers operating in no-wireless environments, reconnaissance events are of medium to high importance, and should be investigated. For deployments in urban multi-tenant areas reconnaissance events are of minor importance, because of the increasing prevalence of wireless networks combined with the increasing sophistication of newer reconnaissance tools that operate in passive mode and cannot be detected. Reconnaissance Alarms are broken down into the following three sub-types:

- **Reconnaissance Tools** - Reconnaissance tools enable a user to discover available wireless devices in the vicinity of the user running the tool. While early versions of these tools use active methods to find available wireless resources, newer version are increasingly more sophisticated and have transitioned to passive or listen only mode and will go undetected.
- **Typical Client Activity** - In wireless networking clients actively search for the wireless networks they have been configured to connect to, enabling the clients to find the wireless APs that are in the vicinity of the station. Once a client connects to an AP,

it will continue to search for other resources, which may include different networks or resources with a higher signal strength. Reconnaissance activity in environments with deployed wireless networks is considered typical and is expected behavior from devices.

- Weakness - APs can be configured to make them more or less vulnerable to reconnaissance activity; some of these options include broadcasting the SSID in beacon, and options to respond to null probe requests. Configuring the AP to not respond to null probe requests and disable broadcasting the beacon in the SSID is a good security practice, which hides the wireless network identify from basic users, however it will do little to deter more advanced users attempting to discover the wireless network.

Alarm Library

To view a list of Reconnaissance alarms for each alarm sub-type, go to **Configuration > Operational Management > Alarm Configuration**, open **Reconnaissance**, and then open the alarm sub-type to see all the alarms associated with the sub-type.

Rogue Activity Alarms

Rogue Activity Alarms alert you to devices participating in unauthorized communication in your airspace. Events included in this category range from detection of a wireless device operating in the airspace to detection of the most severe risks, e.g., unsanctioned wireless device communicating with the wired network. ADSP makes a clear distinction between an unauthorized device which may be a neighboring device transmitting into the monitored airspace and a rogue device which is a device communicating with a device on the sanctioned wired network. This distinction is critical to understand and appropriately respond to the threat posed by each individual device. This advanced threat assessment capability allows the administrator to safely ignore neighboring APs while focusing his attention to real threats. Rogue Activity Alarms are broken down into the following four sub-types:

- Authorization Violation - ADSP monitors the airspace for all wireless devices. The authorization violation subcategory defines devices which have not been acknowledged as sanctioned enterprise wireless devices, ignored transient or neighboring devices.
- Extrusion Wireless technology increases the attack vectors that exist and present security challenges to an enterprise. Threats against infrastructure devices such as rogue APs, DoS attacks, and mis-configurations are some of the most well known and the primary focus to secure and protect against. Often overlooked are lesser known and more prevalent threats that exist against endpoints or wireless stations. The very nature of how these endpoints search for available wireless networks to connect and inability to validate authenticity of the network they are connecting to makes them vulnerable to forming unsanctioned connections. This process of a sanctioned wireless station connecting to an external unsanctioned network is known as an Extrusion. A successful Extrusion may take several forms but will always have the same effect of a sanctioned device forming L2 and L3 connection and should be considered a similar threat to a hacker connection directly to a laptop with a crossover cable.

ADSP Rogue Extrusion now includes alarms that alert you to Wi-Fi Direct devices on your network. Wi-Fi Direct is peer-to-peer networking which may present issues with corporate networks controlling Wi-Fi Direct devices. Being able to detect Wi-Fi Direct gives corporate personnel a tool to investigate and determine if there is a threat to their network.

- **Rogue Exploit** - Rogue Exploit sub-type contains alarms to detect true rogue activities by any unsanctioned wireless device communicating with the devices on the wired infrastructure. Examples include an unauthorized AP physically attached to the wired network (Rogue AP) or an unauthorized station on the wireless network connected to an authorized AP (Rogue Wireless Client).
- **Wired Network Monitoring - Rogue Activity** includes events for devices participating in unauthorized communication in your airspace. Examples of the type of event included in this category are detection of a wireless device operating in the airspace to detection of the most severe risks unsanctioned wireless device communicating with the wired network. AirDefense Enterprise makes a clear distinction between an unauthorized device, which may be a neighboring device transmitting into the monitored airspace, and a rogue device, a device which is communicating with a device on the sanctioned wired network. This distinction is critical to understand and appropriately respond to the threat posed by each individual device. This advanced threat assessment capabilities allows the administrator to safely ignore neighboring APs while focusing his attention to real threats.

Alarm Library

To view a list of Rogue Activity alarms for each alarm sub-type, go to **Configuration > Operational Management > Alarm Configuration**, open **Rogue Activity**, and then open the alarm sub-type to see all the alarms associated with the sub-type.

Vulnerabilities Alarms

Vulnerabilities Alarms alert you to weaknesses that are not actively exploited, but have been detected in the airspace. Weaknesses can potentially be exploited by both active and passive methods. For example, unencrypted wired side traffic leakage can be exploited passively by discovering wired-side device information, while rogue APs can be actively exploited by a station associating to it. Vulnerabilities provide an inherent security risk to the enterprise and should be carefully evaluated to understand the potential exposure that could occur if a vulnerability was exploited. Once a vulnerability is discovered options should be considered to remediate the vulnerability to prevent it from being exploited. Vulnerability Alarms are broken down into the following five sub-types:

- **Fuzzing** - An active attacking technique that is used to find vulnerabilities and flaws in vendor's wireless drivers. When a fuzzing attack occurs, a malicious user will generate valid 802.11 frames but will randomly change information in the frames in an attempt to discover vulnerabilities in the wireless driver. A successful fuzzing attack can have various outcomes, depending on the specifics of the attack and the vulnerability in the wireless driver. Possible outcomes include full root access of the attacked system, remote code execution, DoS attack, or kernel crash. In general, fuzzing attacks present significant risk to the enterprise. Because wireless drivers receive and process broadcast traffic, fuzzing attacks may not require a physical

connection but just physical proximity to the attacker to execute a successfully attack.

- **Predictive Problems** - Through passive wireless monitoring AirDefense will provide events indicating potential wireless security issues. Issues may be related to network or client configuration and may not currently be actively exploited, however the danger exists that they could be exploited. Predictive problem detection allows an administrator to take proactive measures to resolve security issues before a malicious user has the potential to exploit it.
- **Suspect Activity** - Suspect Activity captures wireless events or activity, though not a direct attack on the wireless network, suggest the potential for an exploit. Suspect activity events should be reviewed as they generate, often suspect activity would be accompanied by an other exploit events as it may be only one facet of malicious activity.
- **Vulnerability Assessment** - ADSP actively tests the security posture of the wireless infrastructure to determine if there are weaknesses that could allow a wireless user to access sensitive systems on the wired side. This is accomplished by allowing the user to perform scheduled or on-demand tests that allow the sensor to emulate a station (laptop or other wireless device), associate to one or more APs, and test different paths of access to the wired side. The alarms in this category indicate that a vulnerability has been found in the security posture and should be considered a high priority event, and could relate to the exposure of sensitive information such as cardholder information. This vulnerability may be the result of a firewall or wireless switch misconfiguration, or some other weakness in the layered defenses. A subsequent vulnerability report can be created based on these alarms. In addition, the Action Manager can be used to automatically disable an AP until the vulnerability has been remediated.
- **Wired Leakage** - In wireless networks unencrypted wired side traffic leakage into the air is a result of basic AP functionality. The AP at its most simplistic form is a bridge between the wired medium and the wireless medium, allowing wireless devices to communicate with devices on the bounded wired network. An AP typically works the same for traffic in the reverse direction, traffic from the wired network can be transmitted into the air, to specific devices as well as broadcast addresses. The security concern entails the broadcast or multi-cast wired traffic which the AP bridges into the air in clear text. All devices within range of the AP can passively listen to this traffic and gain information about network configuration, routing, and the devices on the wired network. This is problem is compounded when the AP is placed on a VLAN which has user systems NetBios traffic that can reveal a great deal about the networked devices. It is best practice to place the APs on a dedicated subnet which will limit the broadcast domain of the network to minimize wired side leakage.

Alarm Library

To view a list of Vulnerability Alarms for each alarm sub-type, go to **Configuration > Operational Management > Alarm Configuration**, open **Vulnerabilities**, and then open the alarm sub-type to see all the alarms associated with the sub-type.

Client Types

Client Types gives you the ability to:


- Add new client types to your system.
- Edit existing client types to change the icon or name.
- Remove existing client types from your system.



Manage Client Types


To manage Client Types:

1. Click the **New** button to add a new client type.

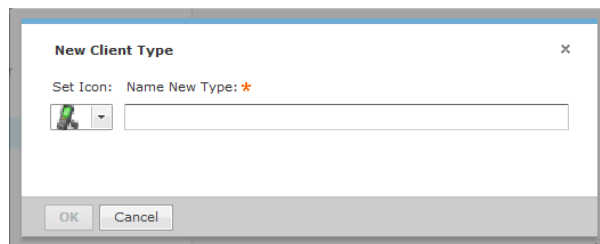


2. Select an icon by choosing an icon from the **Set Icon** drop-down menu, type in a new name in the **Name New Type** field, and then click **OK**.
A new Client Type is created.
3. To edit a client type select (highlight) the client type and then click the **Edit** button. You can change the client type icon or the client type name.

4. To remove a client type, select (highlight) the client type and then click the **Remove** button. Click **OK** to remove the client type.

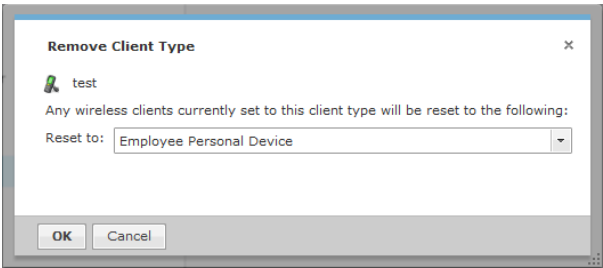

Device Action Manager

The Device Action Manager allows you to automatically apply rules to devices in your system. By automating your response to certain predefined conditions, you are free to concentrate on other administrative task; thus reducing management overhead. You may define as rules as you need to manage your network.

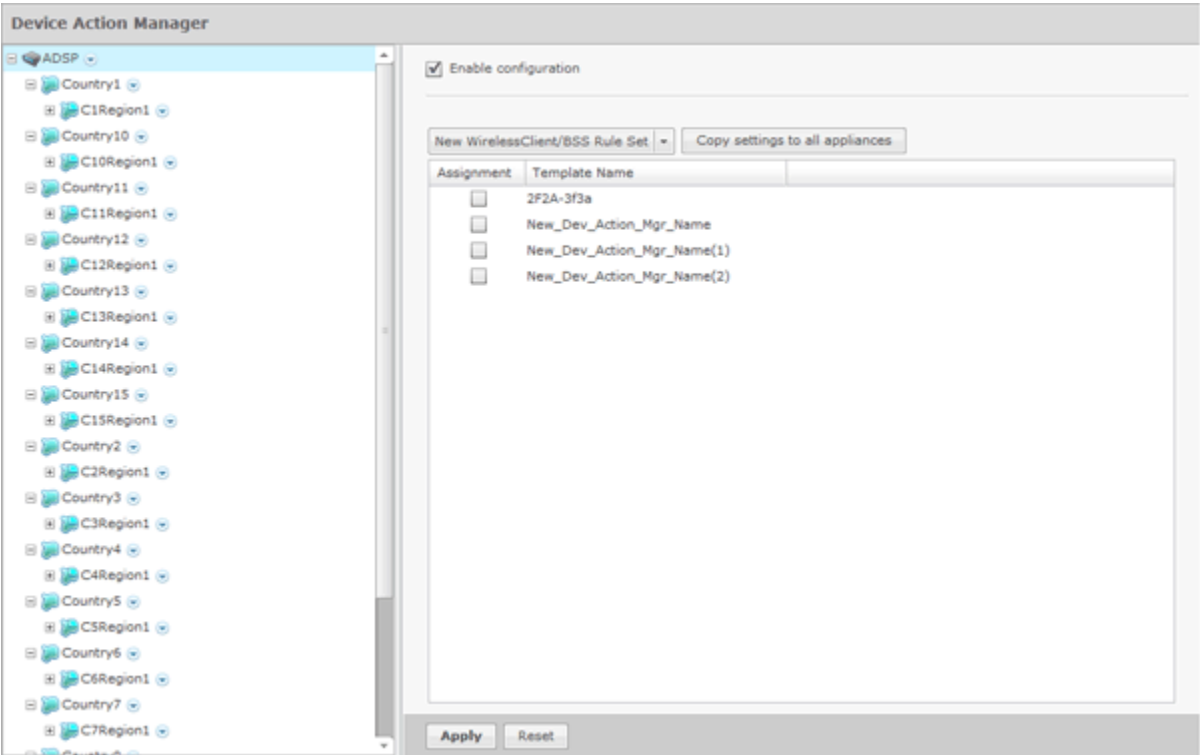

The Device Action Manager table displays one rule per row using the following columns:

Column	Description
Assignment	Specifies if a template defining a rule is marked for use.
Template Name	The name of the template defining a rule.

Once a template is added to the Device Action Manager, you can edit, copy, or delete it by selecting (highlighting) a template and then clicking on the appropriate link that appears to the right of the template.

The Device Action Manager supports two types of rule sets: one for Wireless Clients/BSSs and one for Infrastructure devices. AirDefense uses a dual purpose button to access the rule sets:

- New Wireless Client/BSS Rule Set
- New Infrastructure Device Rule Set.

Clicking the drop-down menu button displays a menu where you can select one of the rule sets. The last option that you select becomes the button.

Add a New Wireless Client/BSS/Unknown Devices Rule Set

The Wireless Client / BSS / Unknown Devices Rule Set window is where you add a Wireless Client/BSS Rule Set or edit an existing Wireless Client/BSS Rule Set.

WirelessClient / BSS / Unknown Devices Rule Set

Name: ★ New_Dev_Action_Mgr_Name Add Another Rule (Limit: 100 rules)

Rule_01 [dropdown] [x] Enable Click to add/edit description.

Filter(s)

When All [dropdown] of these filters are met...

If Select Filter... [dropdown] [x]

Add Another (limit: 25 filters)

Action(s)

Perform the following action(s):

Select action... [dropdown] [x]

Add Another (limit: 5 actions)

Save Save and Close Cancel

There are three things that you must do to define a Wireless Client / BSS / Unknown Devices Rule Set:

1. Name the rule set.
2. Select and define at least one filter. You may have up to ten filter. Click the **Add Another** button to add additional filters. Each added filter adds an and statement.

3. Select and define at least one action. You may have up to five actions. Click the **Add Another** button to add additional actions.

A rule set may have one or more rules. Each rule must have a least one filter and one action. Click the **Add Another Rule** button to add additional rules.

Configuring Filters

Configure your filters by using a **When** statement and an **If** statement. Begin by selecting when the filters (When statement) will be used. There are four options:

- All - All of the selected conditions must be met (logical and operation).
- Any - One or more selected conditions must be met (logical or operation).
- None (All) - None of the selected conditions are met (logical and operation).
- None (Any) - One or more selected conditions are not met (logical or operation).

The **When** statement works together with an **If** statement matching a filter with a value. The available filters are:

- Adhoc
- Associated
- AssociatedBSSClassification
- AssociatedBSSIP
- AssociatedBSSMAC
- AssociatedBSSName
- AssociatedBSSVendorPrefix
- Channel
- ConnectedToWired
- Device802_1XName
- DeviceAuthentication
- DeviceClassification
- DeviceClassificationInherit
- DeviceClientType
- DeviceEncryption
- DeviceFirstPolled
- DeviceFirstSeen
- DeviceIP
- DeviceLastPolled
- DeviceLastSeen
- DeviceMAC
- DeviceManufacturer
- DeviceName
- DevicePolledID
- DevicePolledName
- DevicePolledSSID

- DeviceProtocol
- DeviceSSID
- DeviceSensedID
- DeviceSensedSSID
- DeviceType
- DeviceVendorPrefix
- SensorIP
- SensorMAC
- SensorName
- SignalStrength
- WatchList
- WiFiDirect.

**Important**

In DeviceActionMgr, the filters order within the rule are order dependent. For example, if you want create a rule to sanction BSSs, the first filter would be DeviceType=Include BSS (this would ignore all clients), then DeviceManufacturer and then SSID. If you are using LIKE or ILIKE the % sign is a wildcard. (LIKE or ILIKE can also be used for wildcards.)

Selecting Filters

Select a filter by clicking the drop-down arrow next to the **Select Filter** box.


WirelessClient / BSS / Unknown Devices Rule Set

Name: * (Limit: 100 rules)

☐ **Rule_01** ☒ **Enable** [Click to add/edit description.](#)

Filter(s)	Action(s)
When All of these filters are met...	Perform the following action(s):
If AssociatedBSSMAC Edit ×	Select action...
AssociatedBSSIP AssociatedBSSMAC AssociatedBSSName AssociatedBSSVendorPrefix Channel ConnectedToWired Device802_1XName DeviceAuthentication DeviceClassification DeviceClassificationInherit DeviceClientType	Add Another (limit: 5 actions)

When you select a filter, an **Edit** button is displayed. Click the **Edit** button to select a mathematical comparison to indicate the relationship between the filter and a value that you specify.

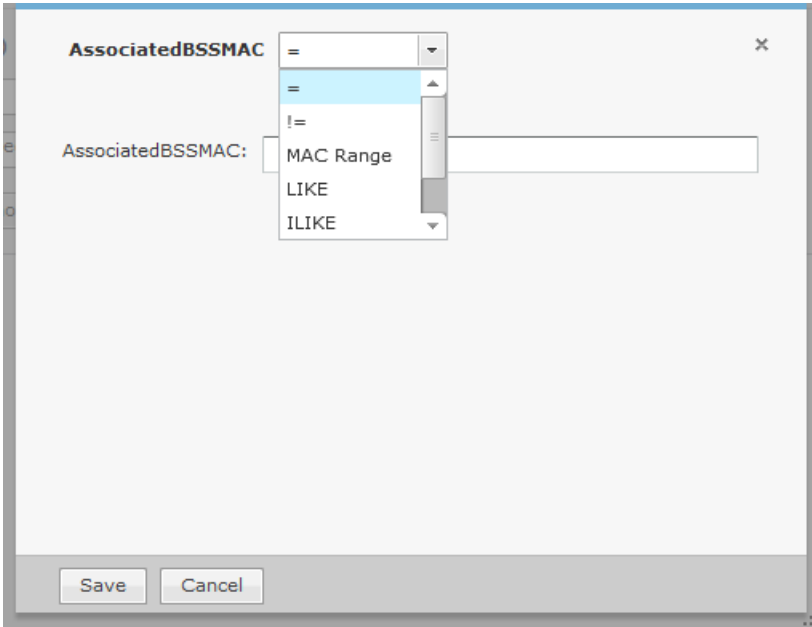

Click the drop-down menu to select the type of comparison. This will vary according to the selected filter. The type of comparison may be:

=	Is equal to
!=	Is not equal to
<	Is less than
<=	Is less than or equal to
MAC Range	Range to pick up MAC address.
>	Is greater than
>=	Is greater than or equal to
LIKE	Is similar to, matches some portion (Used for a partial match)
ILIKE	Case insensitive partial match
IN	Condition exists within the filter value (usually used when the filter combines two or more variables which must be compared in some way to create a trigger)

There will be one or more other fields to determine a value. This will vary according to the selected filter.

Click **Save** to save the comparison.

The following screen shot shows an example of a filter within a rule.

WirelessClient / BSS / Unknown Devices Rule Set

Name: (Limit: 100 rules)

Rule_01 ☒ Enable Click to add/edit description.

Filter(s)

When of these filters are met...

If

And

(limit: 25 filters)

Action(s)

Perform the following action(s):

(limit: 5 actions)

You can remove a statement by clicking the **X** next to the statement.


Actions

You may specify one or more actions to run when certain conditions are met as defined by the filter(s). Valid actions are:

- Classify Devices—Classifies devices using the filter(s) to determine which devices are to be classified
- Clear active alarm for active devices—Clears any active alarm if the conditions defined in the filter(s) are met.
- Set Client Type—Sets the Client Type for Wireless Clients as defined in the filter(s).
- ACL—Enables the Access Control List on switches that meet the conditions defined in the filter(s).
- Port Suppression—Suppresses communication between unauthorized devices and switches on your network as defined in the filter(s).
- Termination—Terminates devices that meet the conditions defined in the filter(s).
- AP Test—Runs an AP Test using the specified profile if the conditions defined in the filter(s) are met.
- Frame Capture—Monitors and analyzes real-time data traffic flow from devices in your wireless LAN and saves the data in a file if the conditions defined in the filter(s) are met


- Vulnerability Assessment—Runs an vulnerability assessment using the specified profile if the conditions defined in the filter(s) are met.
- Delete Device—Deletes any device from your system that meets the criteria defined in the filter(s).

When an action is selected, an **Edit** button is displayed. Click the **Edit** button to configure the action. Configuration will be different for each type of action. For example, selecting **Classify Devices** as your action displays the following dialog window.

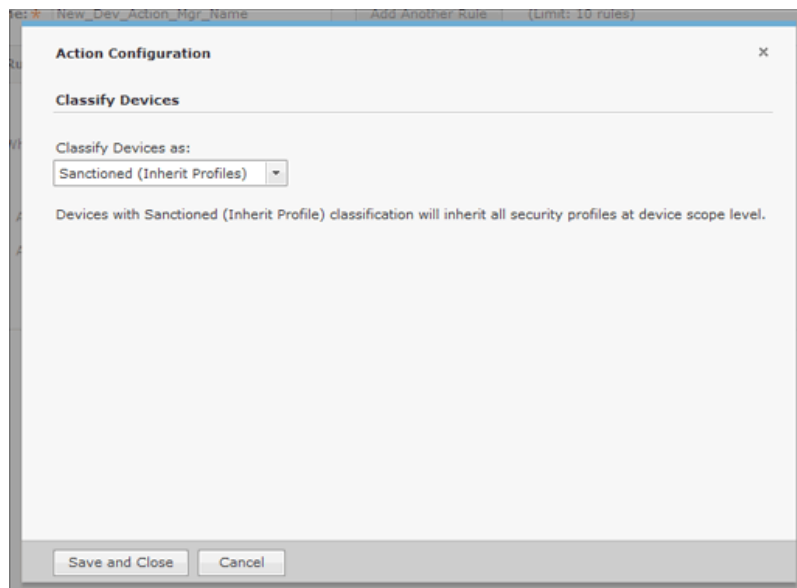

Classify Devices allows you to classify devices as: *Sanction (Inherit Profiles)*, *Unsanctioned*, *Neighboring*, or *Sanction (Assign Profiles)*. Click the **Save and Close** button to save the configuration and exit the dialog window.

The following screen shot shows an example of a fully defined filter and action.

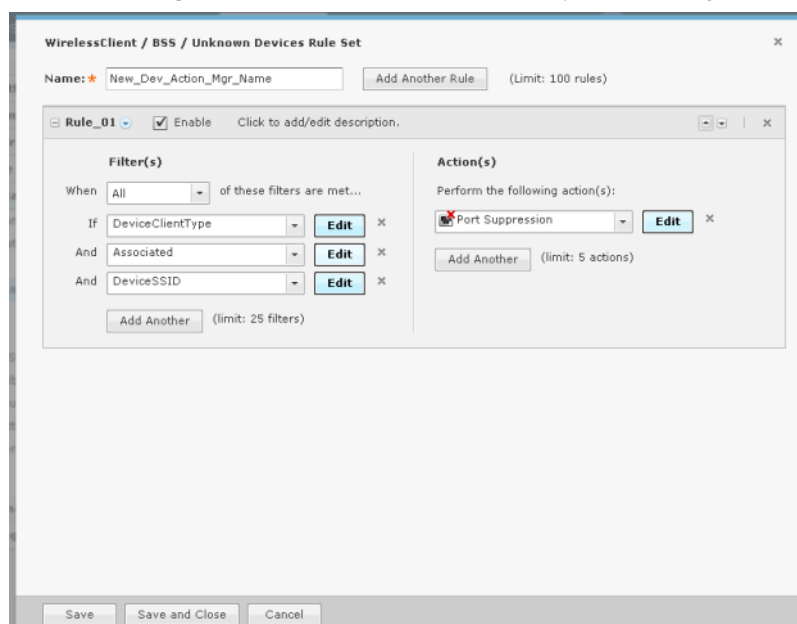


You can remove an action by clicking the **X** next to the action.

Click the **Save and Close** button to save the rule set and exit the window.

Add an Infrastructure Device Rule Set

The **Infrastructure Device Rule Set** window is where you add an **Infrastructure Device Rule Set** or edit an existing Infrastructure Device Rule Set.

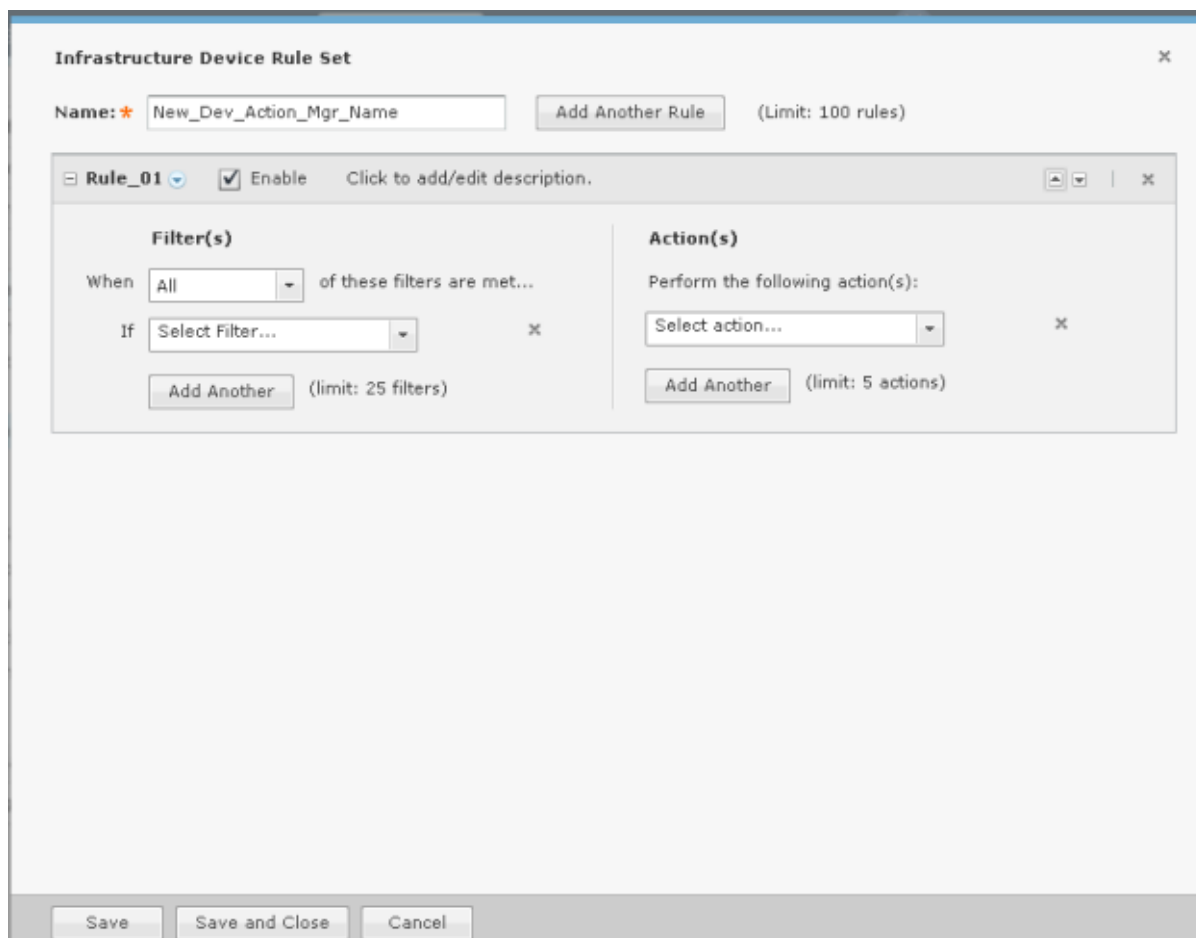

The screenshot shows the 'Infrastructure Device Rule Set' window. At the top, there is a title bar with a close button. Below it, the 'Name' field is set to 'New_Dev_Action_Mgr_Name', followed by an 'Add Another Rule' button and a '(Limit: 100 rules)' note. The main area is divided into two sections: 'Filter(s)' and 'Action(s)'. The 'Filter(s)' section has a 'When' dropdown set to 'All' and a text 'of these filters are met...'. Below it, an 'If' dropdown is set to 'Select Filter...' with an 'Add Another' button and a '(limit: 25 filters)' note. The 'Action(s)' section has a text 'Perform the following action(s):' and a 'Select action...' dropdown with an 'Add Another' button and a '(limit: 5 actions)' note. At the bottom, there are three buttons: 'Save', 'Save and Close', and 'Cancel'.

Basically, the Infrastructure Device Rule Set works the same as the Wireless Client / BSS / Unknown Devices Rule Set with differences in the filters and actions.

Filters

The available filters for the Infrastructure Device Rule Set are:

- DeviceCapabilities
- DeviceDHCP
- DeviceDNS
- DeviceFirmware
- DeviceFirstSeen
- DeviceIP
- DeviceLastDataPoll

- DeviceLastSeen
- DeviceLastStatusPoll
- DeviceMAC
- DeviceManufacturer
- DeviceModel
- DeviceName
- DevicePolledIP
- DeviceSensedIP
- DeviceSerial
- DeviceVendorPrefix


Actions

The available actions for the **Infrastructure Device Rule Set** are:

- Clear active alarm for active devices - Clears any active alarm if the conditions defined in the filter(s) are met.
- Frame Capture - Monitors and analyzes real-time data traffic flow from devices in your wireless LAN and saves the data in a file if the conditions defined in the filter(s) are met.
- Data Collection - Corrects configuration compliance violations when the conditions defined in the filter(s) are met.
- Live RF / Floor Plan - Runs an infrastructure device poll to update the heat map predictions in Live RF if the conditions defined in the filter(s) are met.
- ACL - Enables the Access Control List on switches that meet the conditions defined in the filter(s).
- Port Suppression - Suppresses communication between unauthorized devices and switches on your network as defined in the filter(s).
- SNMP Trap - Sends an SNMP notification to your SNMP server if the conditions defined in the filter(s) are met.
- Spectrum Analysis - Runs a regular Spectrum Analysis or an Advanced Spectrum Analysis using the specified profile if the conditions defined in the filter(s) are met.
- Delete Device - Deletes any device from your system that meets the criteria defined in the filter(s).
- EMail - Sends information about an alarm via email to a recipient if the conditions defined by the filter(s) are met.


Applying a Device Action Manager Template

Once you have defined **Device Action Manager** templates, to use them, you must apply them to your system.

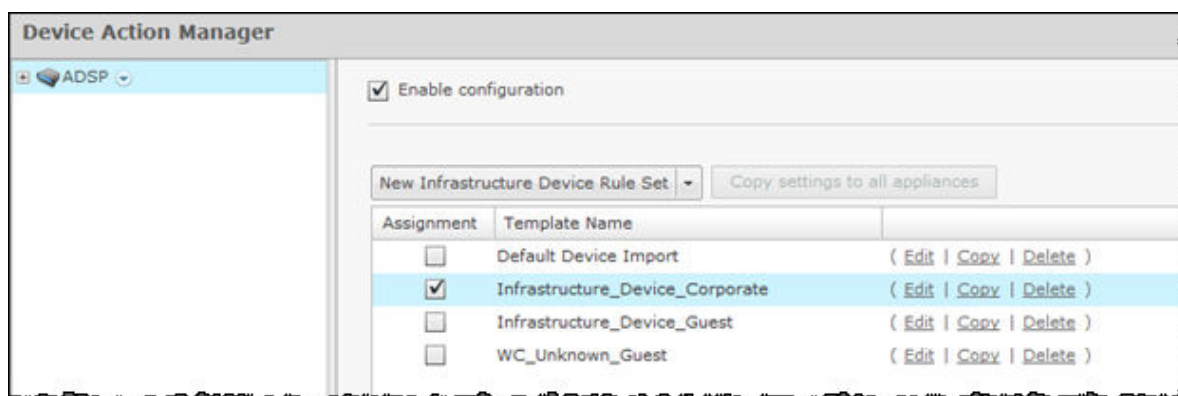**Note**

You may select multiple **Device Action Manager** templates by checking more than one checkbox.

You should always apply a **Device Action Manager** template at the appliance level. When you do, the profile is inherited for all the other levels. Then, if you have a level that needs a different Device Action Manager template, you can apply that template to that level. For example, in the above screen shot, the Device Action Manager templates for AirDefense could be the *Infrastructure_Device_Corporate* template; then for a special case (in the following screen shot) you could override the Device Action Manager templates at the AirDefense level and apply the *Infrastructure_Device_Guest* templates to the Sanctuary Park network level.

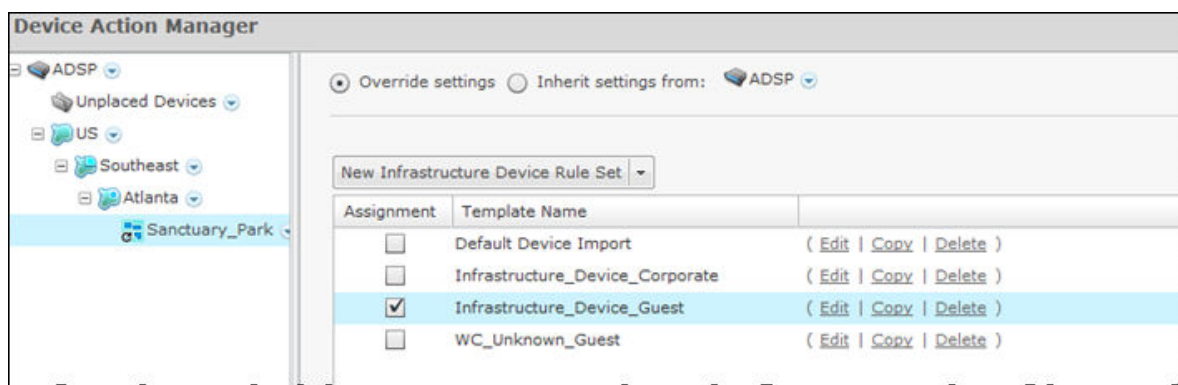**Note**

The **Override settings** option is available when you select (highlight) a network level below the appliance level. Use the **Expand**  button to reveal the other levels.

You can copy Device Action Manager templates to all your appliances by clicking the **Copy settings to all appliances** button.

**Note**

You must have a Central Management license in order to copy settings to all appliances.

Click the **Apply** button to save your changes. Click the **Reset** button to discard your changes.

Sequence of Rules in Rule Sets

After you add **Action Rules** to a **Rule Set**, you should consider the order in which they appear in the list. As AirDefense examines devices during auto-classification, it looks for the first match between a device and an Action Rule in the Rule Set. You should place the least restrictive Action Rule at the top of the list, and the most restrictive at the bottom of the list.

Device Age Out

Device Age Out allows you to specify an age out value that AirDefense uses to display devices in the **Network** tab. For your convenience, a table is displayed listing the devices seen on your network.

Device Age Out				
Sensed devices last seen observations				
BSSs	Sub Totals	Last 24 Hrs	Last 1-7 Days	Over 7 Days
Sanctioned	9	9	0	0
Unsanctioned	954	829	125	0
Neighbor	0	0	0	0
Sub Totals	963	838	125	0
Wireless Clients	Sub Totals	Last 24 Hrs	Last 1-7 Days	Over 7 Days
Sanctioned	0	0	0	0
Unsanctioned	251	190	61	0
Neighbor	0	0	0	0
Sub Totals	251	190	61	0
Unknown	Sub Totals	Last 24 Hrs	Last 1-7 Days	Over 7 Days
Sanctioned	0	0	0	0
Unsanctioned	775	648	127	0
Sub Totals	775	648	127	0
All Devices	1,989	1,676	313	0

Age out settings

You may enter a value between 1 hour and 7 days.

Unsanctioned BSSs
 Day(s) ▾

Ad-Hoc BSS
 Hours ▾

Unsanctioned Wireless Clients
 Day(s) ▾

Unsanctioned Unknown
 Day(s) ▾

You may set an age out value for any of the following devices:

- Unsanctioned BSSs
- Ad-Hoc BSSs
- Unsanctioned Wireless Client
- Unknown, unsanctioned devices.


Values are specified in hours or days with a minimum of 1 hour and a maximum of 7 days. If you enter an illegal value, the field is highlighted by a red box.

After specifying an age out value, if that value is exceeded, the device will no longer be displayed in the **Network** tab but it will still be seen by forensics. Also, all alarms associated with the device are removed and will not display in the **Alarms** tab.

Click the **Apply** button to apply any changes. Click the **Reset** button to discard any changes and revert back to the previous settings.

Job Status

Job Status allows you to view and check on jobs initiated by users using ADSP.

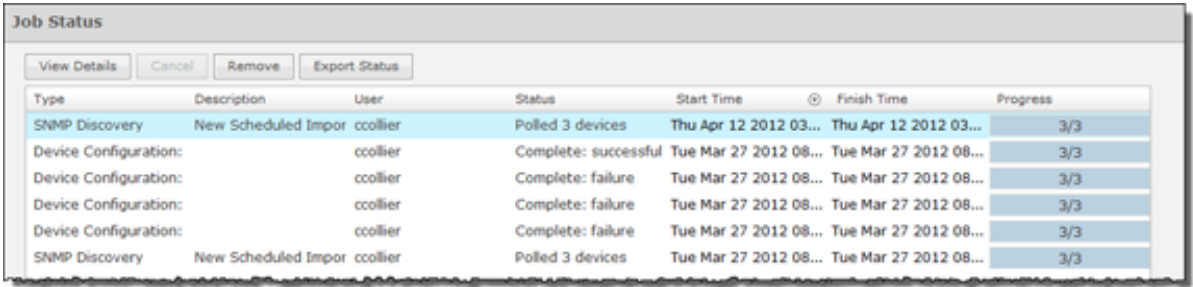

The screenshot shows a 'Job Status' window with a table of job entries. The table has seven columns: Type, Description, User, Status, Start Time, Finish Time, and Progress. The first row is highlighted in blue. Below the table are buttons for 'View Details', 'Cancel', 'Remove', and 'Export Status'.

Type	Description	User	Status	Start Time	Finish Time	Progress
SNMP Discovery	New Scheduled Import	ccollier	Polled 3 devices	Thu Apr 12 2012 03...	Thu Apr 12 2012 03...	3/3
Device Configuration:		ccollier	Complete: successful	Tue Mar 27 2012 08...	Tue Mar 27 2012 08...	3/3
Device Configuration:		ccollier	Complete: failure	Tue Mar 27 2012 08...	Tue Mar 27 2012 08...	3/3
Device Configuration:		ccollier	Complete: failure	Tue Mar 27 2012 08...	Tue Mar 27 2012 08...	3/3
Device Configuration:		ccollier	Complete: failure	Tue Mar 27 2012 08...	Tue Mar 27 2012 08...	3/3
SNMP Discovery	New Scheduled Import	ccollier	Polled 3 devices	Tue Mar 27 2012 08...	Tue Mar 27 2012 08...	3/3


Job statuses are displayed in table format with seven columns.

Column	Description
Type	The job type.
Description	A description of the job. This information is collected when a user inputs a description when confirming an update.
User	The name of the user who initiated the job.
Status	Gives status information such as scheduled jobs, jobs completed successfully, jobs in progress, jobs that have failed, etc.
Start Time	The date and time the job started.
Finish Time	The date and time the job completed.
Progress	Displays a ratio representing the number of tasks completed over the total number of tasks to complete the job.

Jobs more than 7 days old will age out of the system and will not be displayed. Jobs may be canceled by selecting (highlighting) the job and clicking the **Cancel** button. Jobs may be removed from the **Job Status** list by selecting (highlighting) the job and clicking the **Remove** button.

You can export a job's status by selecting (highlighting) the job and clicking the **Export Status** button. A window displays where you can name the file and specify where to save it.

You can view job details by clicking the **View Details** button.

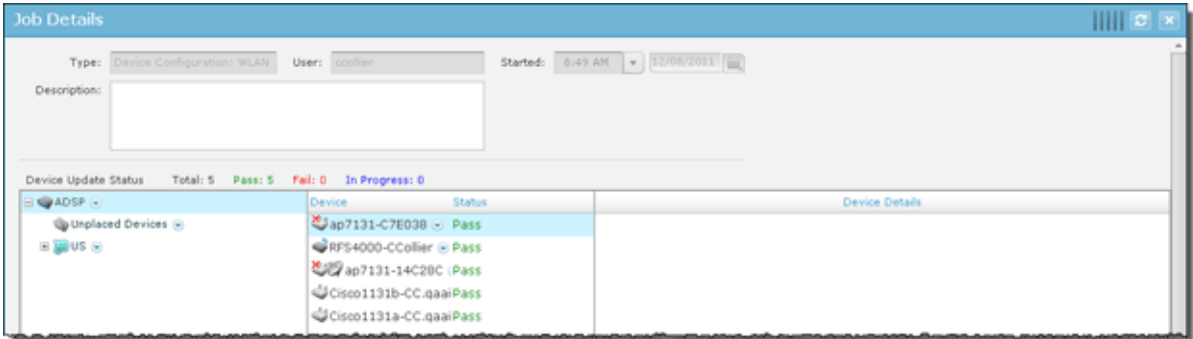

The screenshot shows a 'Job Details' window. At the top, it displays 'Type: Device Configuration: WLAN', 'User: ccollier', and 'Started: 8:49 AM 12/06/2011'. Below this is a 'Description' field. A 'Device Update Status' section shows 'Total: 5', 'Pass: 5', 'Fail: 0', and 'In Progress: 0'. A table lists devices and their status. A 'Device Details' button is on the right.

Device	Status
ap7131-C7E03B	Pass
RFS4000-CCollier	Pass
ap7131-14C20C	Pass
Cisco1131B-CC.qaa	Pass
Cisco1131a-CC.qaa	Pass

The **Job Details** overlay displays all the information displayed in Job Status plus some additional details such as:

- The date and time the job was scheduled.
- Which branches of the network tree are affected by the job.
- A list of the devices that are affected by the job along with a status for each device.
- Details about each affected device.

While viewing job details, you can:

- Export the job's status to a file on your workstation using the **Export Status** button.
- Cancel the job using the **Cancel Job** button.
- Save any changes such as changing the job description using the **Save Changes** button.

Close the Job Details overlay by clicking the **Close (X)** button.

Location Based Services

Use Location Based Services (LBS) to customize how frequently devices within specific locations are performing RF scans. For example, you may want to use a short frequency such as seconds to track high priority client devices, but use a lower frequency for tracking APs. For each device type, you will need to create and assign an LBS profile.




Note

A Proximity and Analytics license is required to access Location Based Services,

Location Based Services Profiles

The LBS profile provides information that allows AirDefense to track devices by location. To manage your LBS profiles, go to **Configuration > Operational Management > Location Based Services** to display the LBS screen.

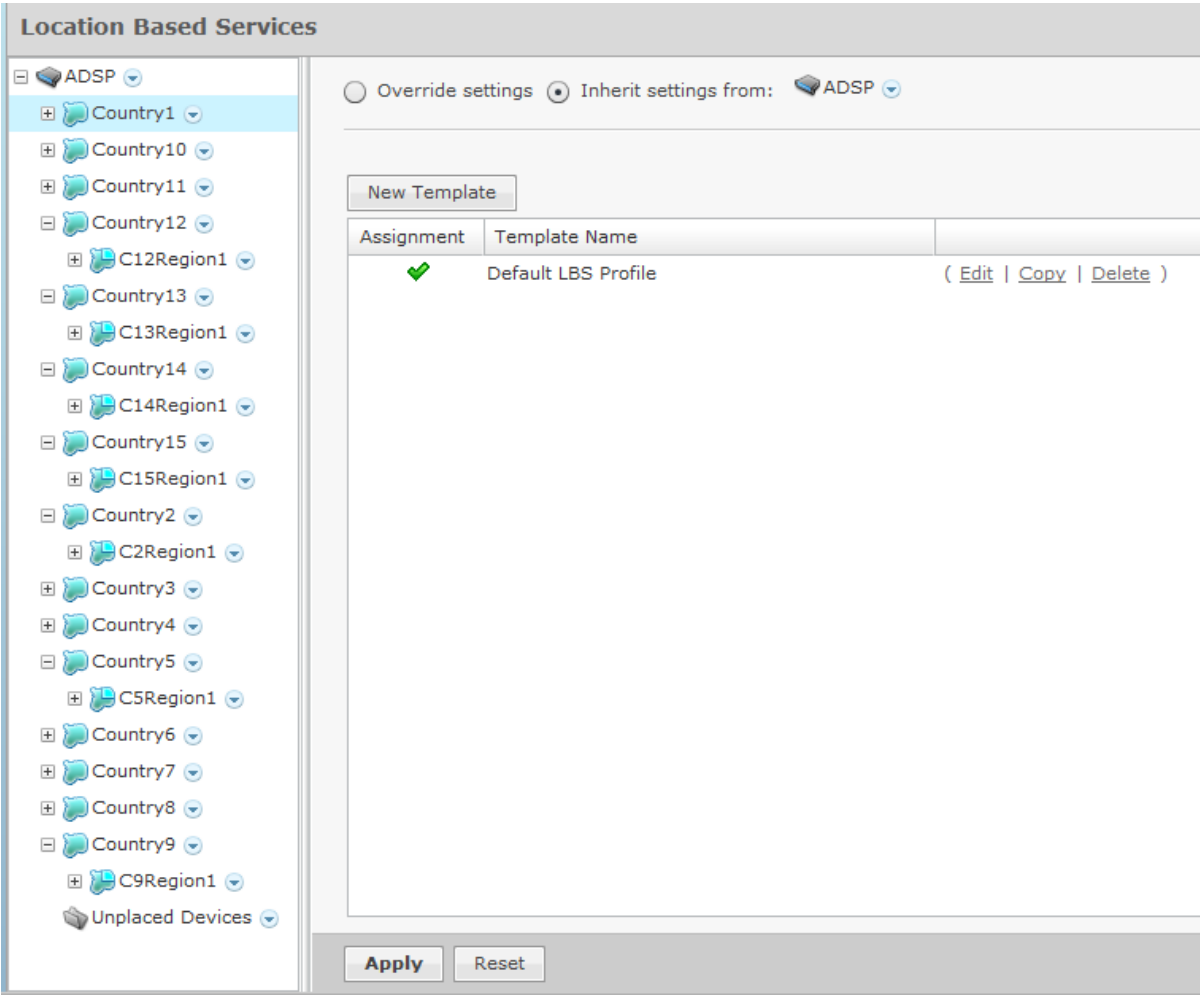

Add a New LBS Profile

From the **Location Based Services Profile** screen, click the **New Template** button to add a new profile. Enter the name for this new profile in the **Location Based Services Profile** field.

A LBS Profile consists of **Client Based Settings** and **Global LBS Settings** configuration.

- [Client Based Settings](#) on page 608
- [Global LBS Settings](#) on page 611

Client Based Settings

Select the **Client Based Settings** tab to define your LBS profile.

Use the **Copy Settings** button to copy the configuration of the selected **Client type configuration** to other client types. For more information see [Copy Settings](#) on page 609.


Use the **Set all client type priorities** button to set the tracking and prioritizing the devices in the order of their importance. For more information see [Set Client Type Priorities](#) on page 609.

Select the **Enable Client Type** check box to enable the selected client type configuration. Use the **Priority** drop down list to set the client type priority.

Select the **Only track devices connected to authorized BSSs** check box to ignore devices that are connected to unauthorized BSSs.

Copy Settings

You can copy settings for the selected client type(s). Select the client type you want to copy and click the **Copy Settings** tab. Select the client types you want to copy the settings to by checking their check boxes.

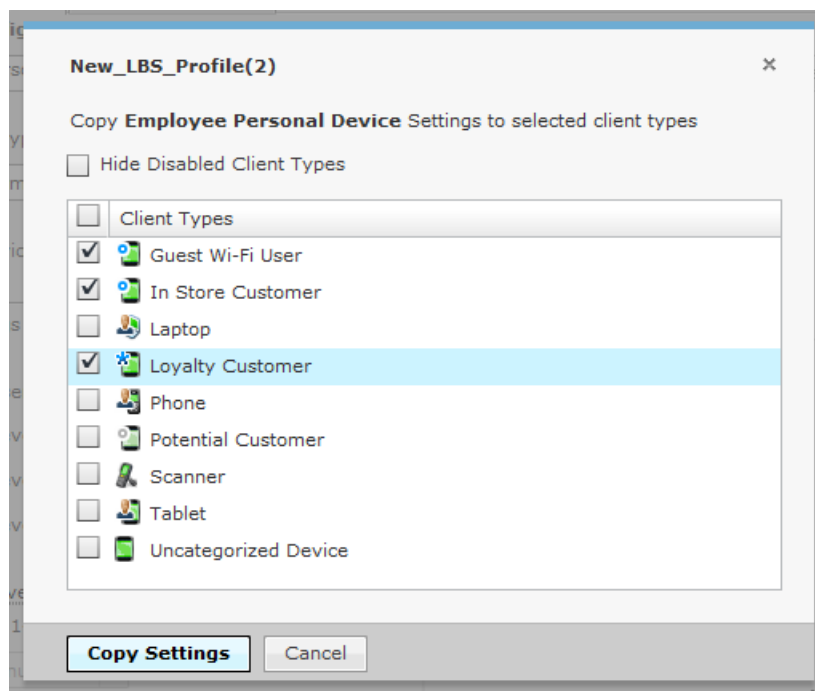


When finished selecting, click **Copy Settings** to copy the settings and return to the previous dialog box.

Set Client Type Priorities

Use the **Set all client type priorities** button to set the default priorities for the different client types.

Click the **Set all client type priorities** button to display a list of client types. On this screen you can select which client types you want to track and prioritize the devices in order of importance. The choices are *critical*, *high*, *normal*, and *low*. Select the check box of the client type you want to prioritize or select the check box at the top of the list for all clients types. If you do not wish to track a certain client type, leave the check box unchecked to disable that type. See the following example.

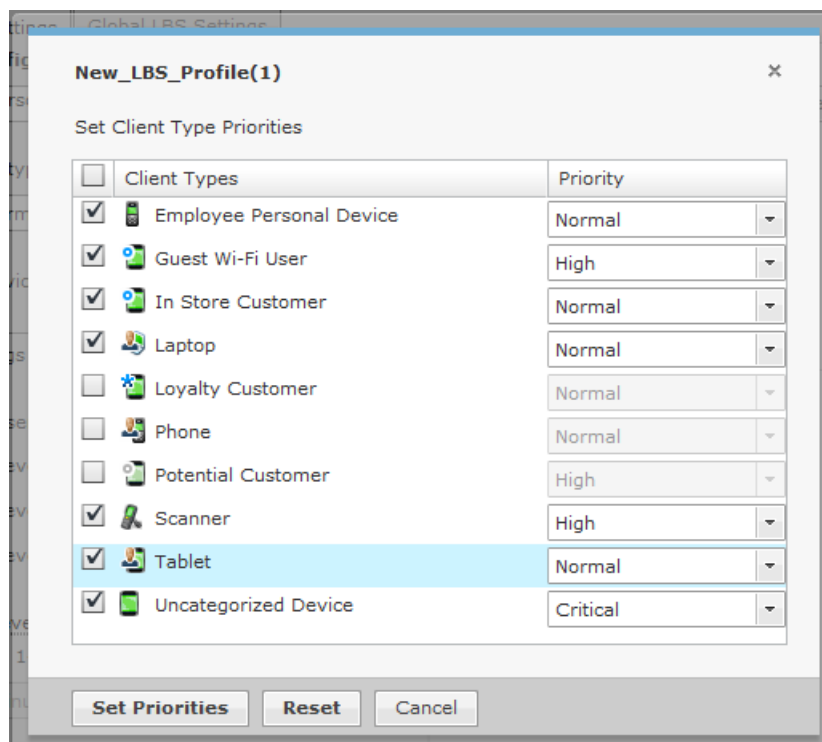

When finished, click **Set Priorities** to set your selected priorities and return to the previous dialog box. Use the **Reset** button to reset your priorities to their previous settings.

Presence Settings

Define the Client Based Settings for your Location Based Services profile using the following fields found in the Presence Settings tab:

Field	Description
Enable all Presence enter events	Enables the enter events that alerts ADSP that a device has entered the premises. Three enter events are available. Each enter event includes a RSSI threshold (in dBms) in which the device would have to exceed before triggering the presence event.
API preset event frequency	Enables the API preset event frequency. Set frequency between 1- 120 minutes or 1 - 59 seconds.
Presence age out	Sets the time span that a device's location is aged out of the system. Valid entries are 1 - 120 minutes.
Enable Presence exit events	Enables the exit events that alerts ADSP that a device has left the premises.

Location Tracking Settings

Define the Client Based Settings for your LBS profile using the following fields found in the Location Tracking Settings tab:

Field	Description
Select all Sources	Select the type of source to use (Wi-Fi Zones or Wi-Fi Positioning).
Enable all Virtual Region Events	Identifies which of the available virtual region events the given device can trigger: Enter, Exit, Proximity, and/or Contained.
Location Refresh Rate	Sets the rate at which the device type is to have its location updated by ADSP.
Confidence Limit	Sets the confidence level for seeing a tracked device in your network.
Location Age Out	Sets the time span that a device's location is considered valid. The specified time span must be greater than the Location Refresh Rate. Valid entries are 1 - 120 minutes or 2 - 59 seconds. Location Age Out must be greater than the Location Refresh Rate.

Global LBS Settings

Define the Global LBS Settings for your Location Based Services profile as follows:

Field	Description
Enable tracking non-associated wireless clients	Track wireless clients that are not associated to any wireless network.
Wi-Fi zone threshold	Wi-Fi zone location tracking will place a client on the sensor reporting the highest signal strength above the zone threshold. The threshold is specified as an RSSI value in dBm.

Apply LBS Profile

Once you have defined an LBS profile, to use it, you must apply it to your system. You should always apply an LBS profile at the AirDefense appliance level. You can also apply the LBS settings to all appliances in your system at the same time.

Edit LBS Profiles

You have the option to edit, copy or delete the LBS profiles as needed. Follow these steps:

1. Select (highlight) the LBS profile.
2. Click the **Edit**, **Copy**, or **Delete** link and make your changes.
3. Click **Save** to save your changes.

Copy Settings to all Appliances

Once you have defined an LBS profile, to use it, you must apply it to your system. You should always apply an LBS profile at the AirDefense appliance level. Click **Copy**

settings to all appliances to copy the defined LBS profile to all appliances in your system.



Note

You must have a Central Management license in order to copy settings to all appliances.

☒ Enable configuration

New Template

Copy settings to all appliances

Assignment	Template Name	
☒	Default LBS Profile	(Edit Copy Delete)
☐	New_LBS_Profile	(Edit Copy Delete)
☐	New_LBS_Profile(1)	(Edit Copy Delete)
☐	New_LBS_Profile(2)	(Edit Copy Delete)

Apply

Reset

Click **Apply** to save your changes. A confirmation is displayed the bottom of the screen:


Apply

Reset

Successfully saved configuration

Set Different Profile


If you have a level that needs a different LBS profile, you can apply a different profile to that level. The **Override settings** option is available when you select (highlight) a network level below the appliance level. Use the Expand button beside the AirDefense appliance icon to reveal the other levels.

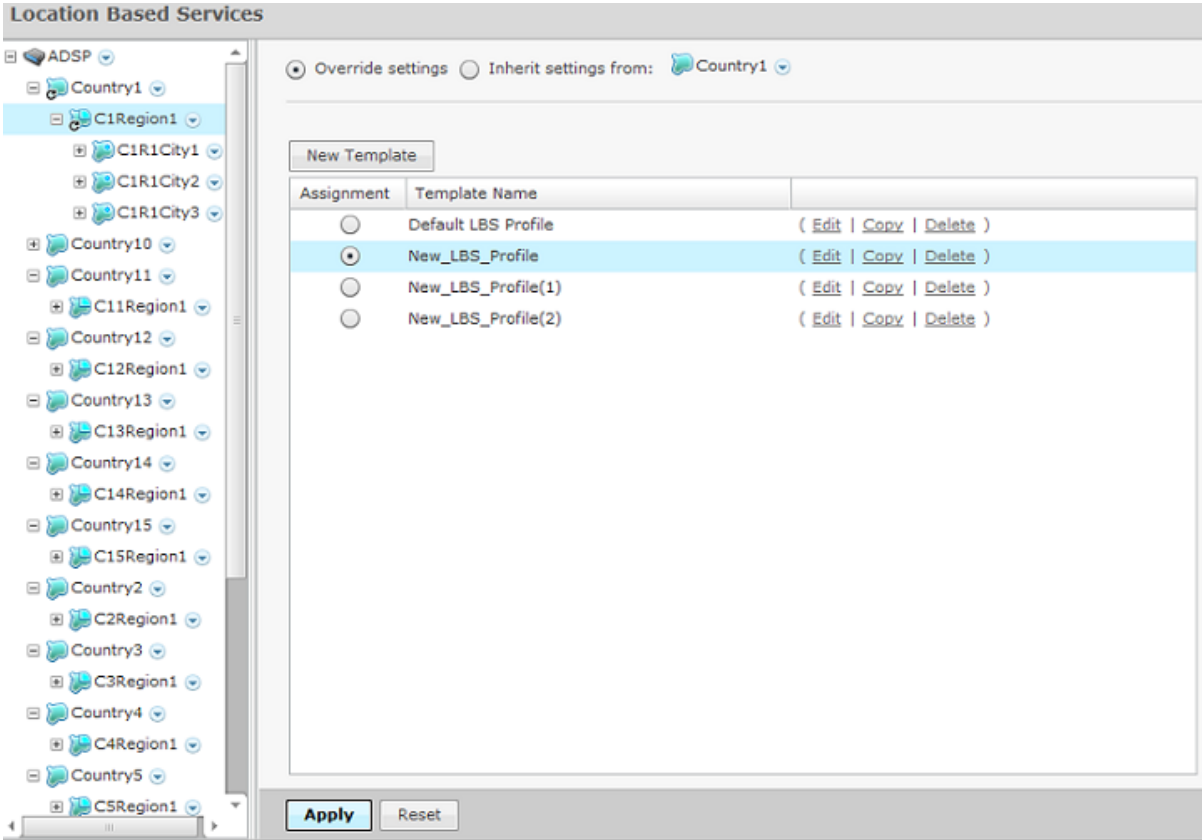

For example, in the above screen shot, the LBS profile for AirDefense shows as the *Default_LBS_Profile*. In the left column you have selected the *Country1* level and you can use the **Override settings** option and apply the *New_LBS_Profile* profile. Click **Apply** to save your changes.



Note
Updates to LBS profiles are treated as jobs and are included in **Job Status** under **Configuration > Operational Management**.

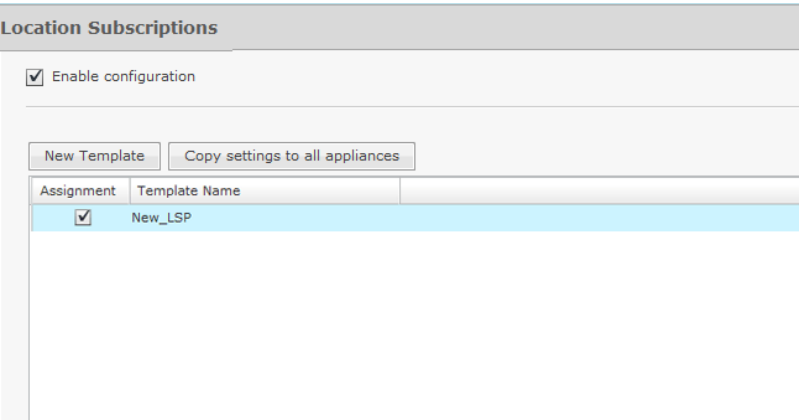

Location Subscriber Profiles

Use Location Subscriber Profiles to define subscriber profiles used in Proximity and Analytics. The profile specifies information for connecting to a third party application. Existing profiles are displayed in the table below the row of buttons.

Location Subscriptions

☒ Enable configuration

New Template

Copy settings to all appliances

Assignment	Template Name
☒	New_LSP

You can edit, copy or delete any selected (highlighted) profile by clicking the appropriate link. To edit or copy a profile, select (highlight) the profile, click the **Edit** or **Copy** link, and then make your changes. Click **Save** to save your changes.


The **Copy settings to all appliances** button will copy the defined Location Subscriber Profiles and all profile assignments to all appliances in your system.



Note

You must have a Central Management license in order to copy settings to all appliances.

Click **Apply** to save your additions (changes). A confirmation overlay is displayed.

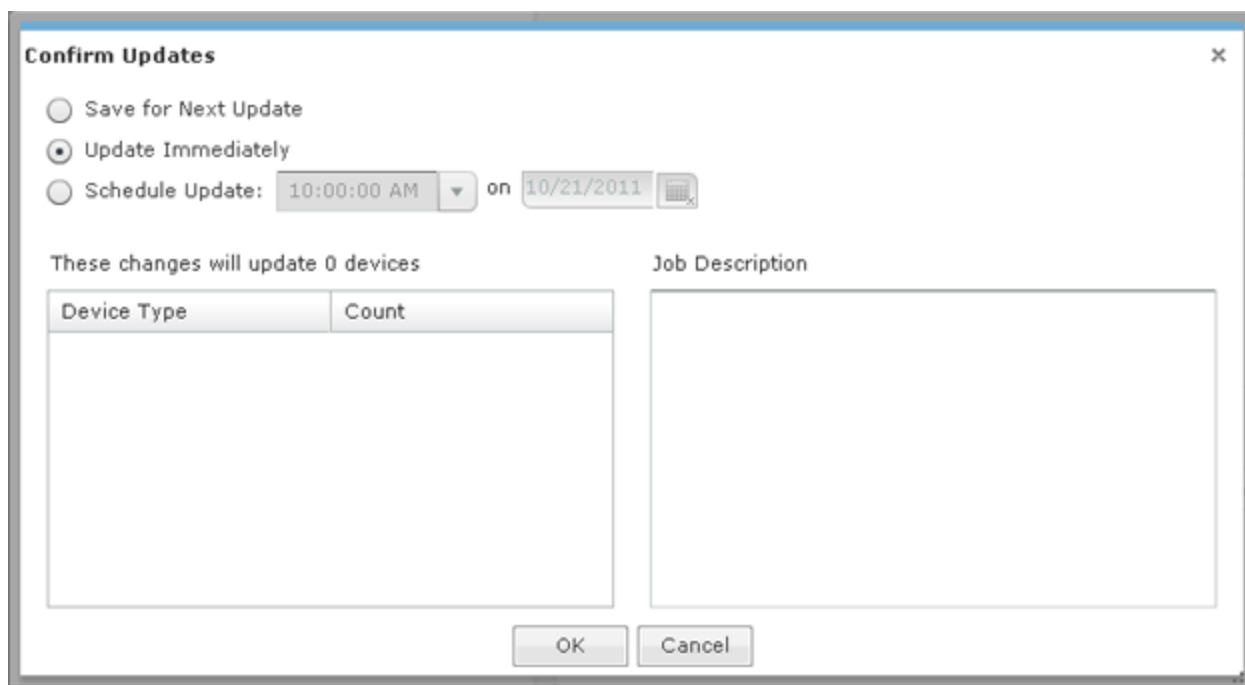

The image shows a 'Confirm Updates' dialog box with a title bar and a close button (X) in the top right corner. It contains three radio buttons for update options: 'Save for Next Update', 'Update Immediately' (which is selected), and 'Schedule Update:'. The 'Schedule Update' option is followed by a time dropdown set to '10:00:00 AM', the word 'on', and a date field set to '10/21/2011' with a calendar icon. Below these options, the text 'These changes will update 0 devices' is displayed. To the left of this text is a table with two columns: 'Device Type' and 'Count'. The table is currently empty. To the right of the table is a large text area labeled 'Job Description'. At the bottom of the dialog are 'OK' and 'Cancel' buttons.

Device Type	Count

You have the option to save for the next update, update immediately or update later. If you choose to update later, you must supply a date and time. You can supply a description that will help identify the update later. A list of device types along with the number of affected devices that will be updated is displayed. Also, if applicable, a list of unsupported settings is displayed. Click **OK** to apply changes or **Cancel** to abort.

Updates to Location Subscriber Profiles are treated as jobs and are included in **Job Status** under **Configuration > Operational Management**. The description supplied in the confirmation helps identify jobs.

Click **Reset** to discard any additions (changes).

Add a New Location Subscriber Profile

To add a new Location Subscription Profile:

1. Click **New Template** to add a new profile.

2. Name your Location Subscriber Profile in the **Subscriber Name** field and use the following tabs to define the profile:
 - Connection Settings
 - Location & Region Events
 - Presence Events
 - RSSI Data.



Note

These tabs are described in detail in the following sections.

3. Click **Save and Close** to save the profile and exit.
 You can also click **Save** to save the profile and leave it open for further modifications.
 Click **Cancel** to cancel any changes that are not saved and exit the profile.

Connection Settings

Use the Connections Settings tab to set up an secured connection to a third party application.

The screenshot shows the 'Connection Settings' tab of a configuration window. It is divided into two main sections. The left section contains fields for 'Subscriber Push URL' (with a 'https://' prefix and a text box), 'Single IP' (192.168.1.1:1234), 'FQDN' (example.com:1234), 'Format' (radio buttons for Binary and JSON, with Binary selected), 'Timeout' (a spinner set to 2000 milliseconds), 'Retry Limit' (a spinner set to 3), 'Username' (text box), 'Password' (text box), and a 'Display Password' checkbox. The right section contains an 'Enable Proxy Settings' checkbox, 'Host' (text box), 'Port' (text box), 'Username' (text box), 'Password' (text box), and another 'Display Password' checkbox. A 'Test Connection' button is located at the bottom left of the form.

The Connections Settings tab is divided into two parts: subscriber information (required) and proxy settings (optional).

The subscriber information supplies the information needed to make the connection to the third party application. Subscriber information includes the following fields:

Field	Description
Subscriber Push URL	Supplies the IP address (192.168.1.1:1234) or domain name (example.com:1234) used to connect to a third party application.
Format	Specifies the data exchange format (Binary or JSON).
Timeout	Specifies a timeout value for the connection to complete.
Retry Limit	Indicates the number of attempts to retry making a connection.
Username	Supplies the user name used to authenticate the connection.
Password	Specifies the password of the user making a connection. You may select the Display Password checkbox to reveal the password.

You can test the connection to see if it is working by clicking the **Test Connection** button.

Proxy settings allow you to configure a proxy if you are required to do so to access the Internet. Proxy settings include the following fields:

Field	Description
Enable Proxy Settings	Select the checkbox if users must use a proxy to access the third party application.
Host	The IP address of the proxy server.
Port	The port number used to communicate with the proxy server.
Username	A valid username used to authenticate a user to the proxy.
Password	The password of the user used for authentication. You may select the Display Password checkbox to reveal the password.

Location and Region Events

Use the Location & Region Events tab to stream location and region events to a third party application.

Field	Description
Enable location event stream	Select checkbox to turn on streaming location events to a third party application.
Enable region event stream	Select checkbox to turn on streaming regional events to a third party application.

Field	Description
Select all Sources	Select the type of source to use: Wi-Fi Zones (zone tracking) or Wi-Fi Positioning Zones (position tracking.) You can select both, but position tracking will take precedence. To see all the devices that have been placed on a sensor, select the 3rd button on the right side of the left pane. All the devices will be displayed. To move a zone-tracked device to the top of the stack, click on the device in the left hand pane.
Select all Events	Filters streaming by events. The event triggers are Enter, Exit, Proximity, and/or Contained. You may select all the triggers by selecting Filter by Event Type, or you may select one or more events separately. When filtering by events and a trigger occurs, location and region event information is sent to the third party application.
Select all Client Types	Filters streaming by client types. You may select all client types by selecting Select all Client Types, or you may select one or more client types separately. When a client type is detected, location and region event information for that particular client type is sent to the third party application.
Filter by Wireless Clients	Filter streaming using the MAC address of one or more Wireless Clients. When a specified Wireless Client is detected, location and event information for that Wireless Client is sent to the third party application. Typing part of a MAC address displays Wireless Clients matching the partial address.
Filter by Region	Filters streaming by regions. When a region is detected, such as specific section of a store, location and region event information for the third party application is limited to the specified area(s). Typing part of a region name displays regions matching the partial name.

Presence Events


Use the Presence Events tab to stream presence events to a third party application.

The screenshot shows the 'Presence Events' configuration tab. At the top, there are four tabs: 'Connection Settings', 'Location & Region Events', 'Presence Events' (selected), and 'RSSI Data'. Below the tabs, there is a checkbox labeled 'Enable presence event stream'. Under this, there are three main sections: 'Select all Events', 'Select all Client Types', and 'Filter by Wireless Client'. The 'Select all Events' section has a 'Select all' checkbox and five event triggers: 'Enter 1', 'Enter 2', 'Enter 3', 'Exit', and 'Contained', each with a checkbox. The 'Select all Client Types' section has a 'Select all' checkbox and a list of client types: 'Employee Personal Device', 'Guest Wi-Fi User', 'In Store Customer', 'Laptop', 'Loyalty Customer', 'Phone', 'Potential Customer', 'Scanner', 'Tablet', 'test', and 'Uncategorized Device', each with a checkbox. The 'Filter by Wireless Client' section has a search box labeled 'Search for MAC address' and a 'Delete' button.

Field	Description
Enable presence event stream	Select checkbox to turn on streaming presence events to a third party application.
Select all Events	Filters streaming by events. The event triggers are Enter 1, Enter 2, Enter 3, Exit, and/or Contained. You may select all the triggers by selecting Select all Event, or you may select one or more events separately. When filtering by events, when a trigger occurs, presence event information is sent to the third party application.
Select all Client Types	Filters streaming by client types. You may select all client types by selecting Select all Client Types, or you may select one or more client types separately. When a client type is detected, presence event information for that particular client type is sent to the third party application.
Filter by Wireless Client	Filter streaming using the MAC address of one or more Wireless Clients. When a specified Wireless Client is detected, presence event information for that Wireless Client is sent to the third party application. Typing part of a MAC address displays Wireless Clients matching the partial address.

RSSI Data


Use the RSSI Data tab to stream RSSI data to a third party application.

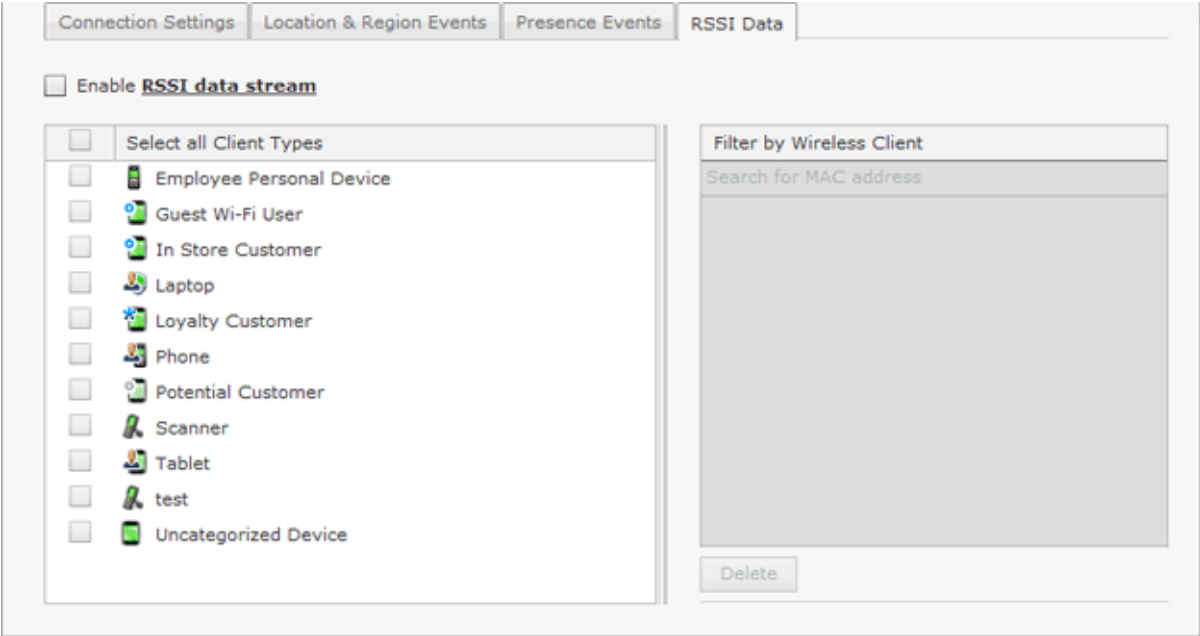

Field	Description
Enable RSSI data stream	Select checkbox to turn on streaming RSSI data to a third party application.
Select all Client Types	Filters streaming by client types. You may select all client types by selecting Select all Client Types, or you may select one or more client types separately. When a client type is detected, RSSI data for that particular client type is sent to the third party application.
Filter by Wireless Client	Filter streaming using the MAC address of one or more Wireless Clients. When a specified Wireless Client is detected, RSSI data for that Wireless Client is sent to the third party application. Typing part of a MAC address displays Wireless Clients matching the partial address.

Apply an Existing Location Subscriber Profile

Once you have defined a Location Subscriber Profile, you must apply it to your system.

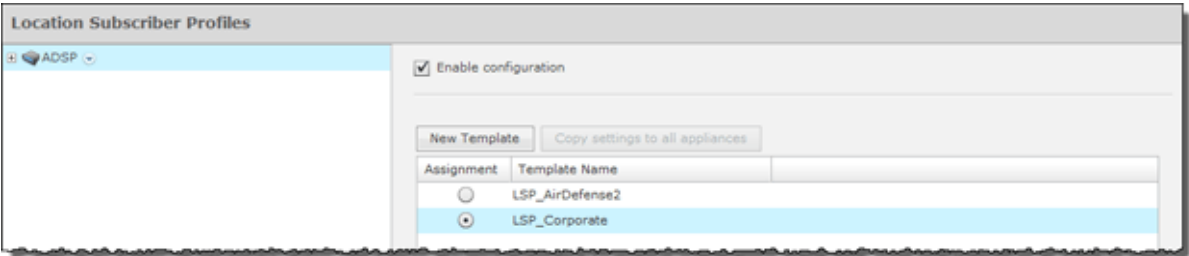


You should always apply a Location Subscriber Profile at the appliance level. When you do, the profile is inherited for all the other levels. Then, if you have a level that needs a different Location Subscriber Profile, you can apply that profile to that level. For example, in the above screen shot, the Location Subscriber Profile for AirDefense could be the *LSP_Corporate* profile and then for a special case (the following screen shot)

you could override the Location Subscriber profile at the AirDefense level and apply the *LSP_AirDefense2* profile to the AirDefense 2 floor.



Note
The Override settings option is available when you select (highlight) a network level below the appliance level. Use the Expand button to reveal the other levels.

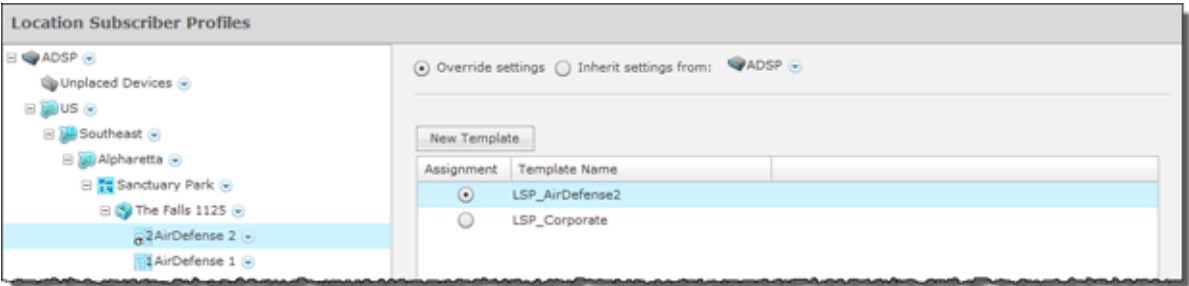

In this case, the *LSP_Corporate* profile will be accessible to corporate-wide employees and guest while the *LSP_AirDefense2* profile will be specific to employees and guests on Floor 2 of the AirDefense facilities. Click Reset to discard your changes.

Reference Material for Location Based Services


For detailed information on location based services, see the Proximity and Analytics Location Based Services Design and Configuration Guide. The configuration guide explains how to set up and use Location Based Services and conduct sensor surveys. To obtain a copy of the Proximity and Analytics Location Based Services Design and Configuration Guide, go to the Support website for product manuals at the following URL:

Pending State - Audit



Note
A WLAN Management license is required to access Pending State Audit.


Pending State Audit is used to identify any devices that are in a pending state. Devices in a pending state have been scheduled or need to be scheduled for configuration.

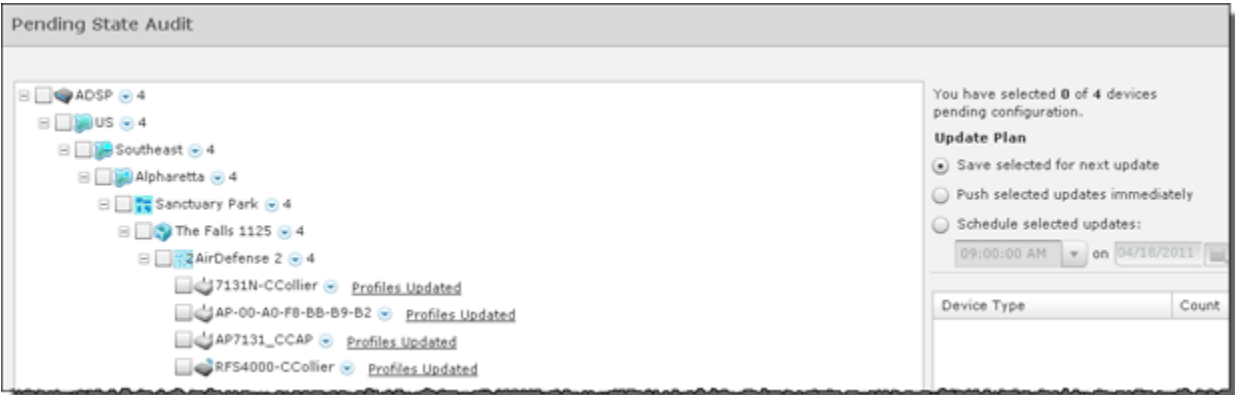

Folders with a checkmark identify that folder as having devices that in a pending state. Devices with a checkmark identify that the marked device is in a pending state.


You have the option to save for the next update, update immediately or update later. If you choose to update later, you must supply a date and time. You can supply a description that will help identify the update later using **Job Status** under **Operation Management**. A list of device types along with the number of affected devices that will be updated is displayed. Also, if applicable, a list of unsupported settings is displayed. Click **OK** to apply changes or **Cancel** to abort.

Click **Apply** to update the selected devices. A confirmation overlay is displayed.

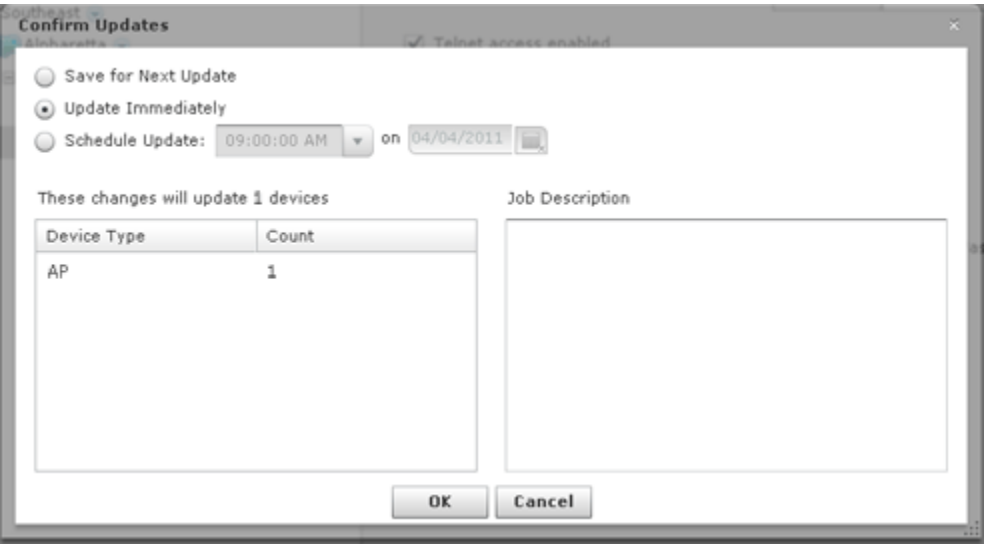

Sensor Only Settings

Sensor Only Settings are used to configure network settings for legacy sensors and WiNG 5.3 (or later) that are configured as a sensor only device. Legacy sensors include AP300, AirDefense M400, M510, and M520 sensors.

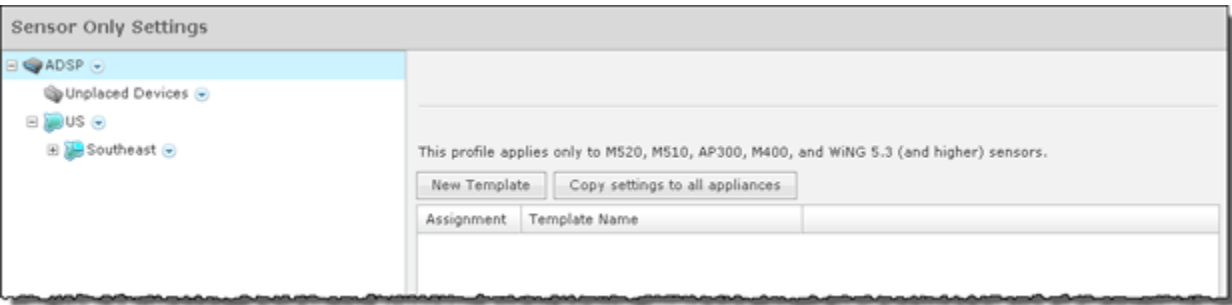

Existing profiles are displayed in the table below the row of buttons.

Assignment	Template Name	
☐	New_sensor_settings_pro	(Edit Copy Delete)

You can copy, edit or delete any selected (highlighted) profile by clicking the appropriate link.


To copy or edit a profile, select (highlight) the **Sensor Only Settings** profile, click the **Copy** or **Edit** link, and then make your changes. Click **Save** to save your changes.

The **Copy settings to all appliances** button will copy the defined Sensor Only Settings profiles and all profile assignments to all appliances in your system.

**Note**

You must have a Central Management license in order to copy settings to all appliances.

Click the **Apply** button to save your additions (changes). A confirmation overlay is displayed.

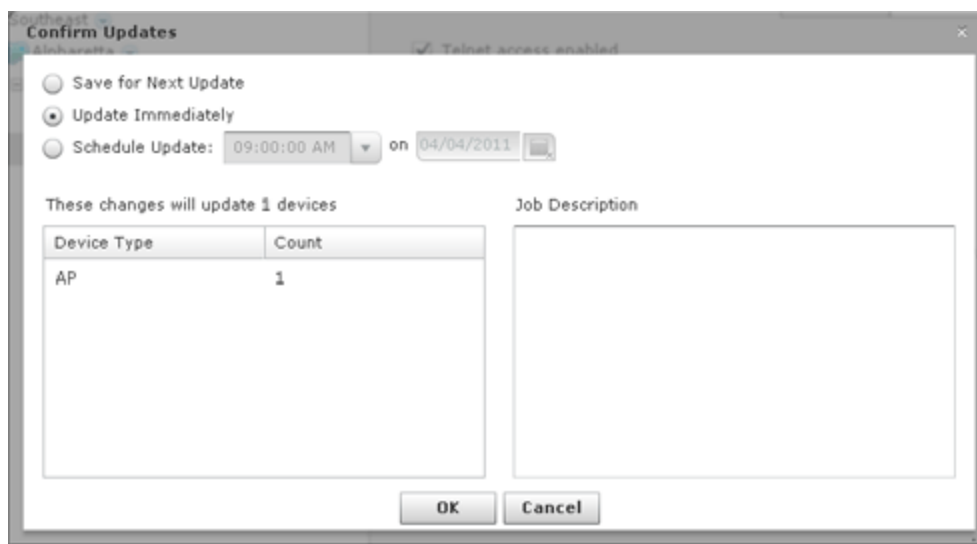

You have the option to save for the next update, update immediately or update later. If you choose to update later, you must supply a date and time. You can supply a description that will help identify the update later. A list of device types along with the number of affected devices that will be updated is displayed. Also, if applicable, a list of unsupported settings is displayed. Click **OK** to apply changes or **Cancel** to abort.

Click the **Reset** button to discard any additions (changes).

Add a New Sensor Settings Profile

Click the **New Template** button to add a new profile.

Define your Sensor Settings profile using the following fields are:


Field	Description
Primary Appliance	Specifies the IP address of the primary appliance.
Secondary Appliance	Specifies the IP address of the secondary appliance.
Sensor Admin Password	Specifies the admin password for your Sensors. Supplying this password is mandatory.
Sensor Monitor Password	Specifies the monitor password for your Sensors.
Link Speed	Selects the link speed. Link Speed Control enables you to set the Ethernet interface to either auto-negotiate (default), or to fix the interface to 10Mbps (Full or Half duplex) or 100Mbps (Full or Half duplex).
MTU	Specifies the Maximum Transmission Unit.
Enable IP Alias	Turns on IP aliasing.
CDP Interval with interval	Turns on CDP and then enter an interval in seconds.

Field	Description
Enable FIPS mode	FIPS Level Encryption is disabled by default. FIPS level encryption is generally not needed. If you want to use FIPS level encryption, select the checkbox. This setting controls the https encryption level between the Sensor and the browser. When selected, the Sensor will only allow AES encryption to the browser (Sensor UI). Only browsers that support this type of encryption will be able to connect to the Sensor UI (e.g. Firefox) once this setting is configured to yes. If you are using IE, do not select this option. Communication between the Sensor and the server is not affected by this setting, and is always negotiated for AES. Note: FIPS level encryption is incompatible with Internet Explorer.
Remote syslog to address	Selects if you want to use a remote Syslog host. You must enter the host IP address along with the port number.
Radio 1 (b/g) custom gain (dbi)	Increases the signal level of radio 1 antennas by the specified value (in dbi).
Radio 2 (a) custom gain (dbi)	Increases the signal level of radio 2 antennas by the specified value (in dbi).
Prevent Auto Adoption	Prevents a sensor from being adopted by a switch.

Once you have defined your Sensor Settings profile, click **Save** to save your profile or **Cancel** to exit without saving the profile.

Apply a Sensor Settings Profile

Once you have defined a Sensor Settings profile for your Sensors, you can now apply it to the Sensors in your network. A Sensor Settings profile can be applied to an appliance and all its network levels or it can be applied to a single network level. Any child network level automatically inherits the parent's Sensor Settings profile. A good practice is to apply a Sensor Settings profile to the appliance level. This profile should be generic as possible to fit a wide range of devices in your network. Then, if you have any special considerations, apply Sensor Settings profiles to individual network levels that must meet your predefined special configurations.

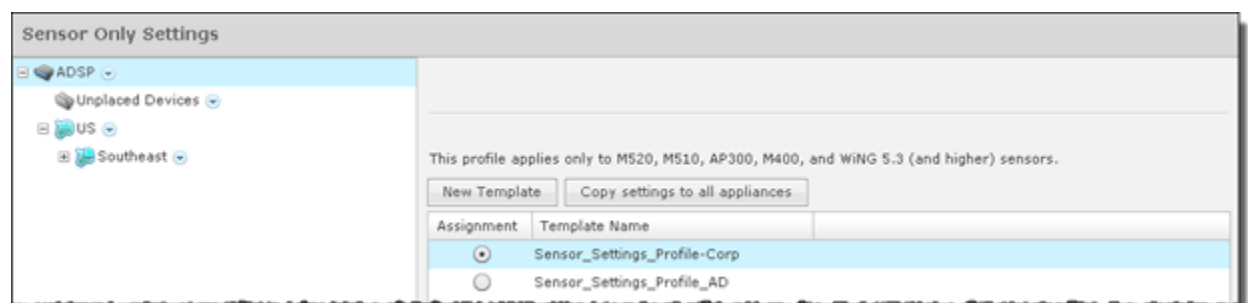


You should always apply a Sensor Only Settings Profile at the appliance level. When you do, the profile is inherited for all the other network levels. Then, if you have a level that needs a different Sensor Only Settings Profile, you can apply that profile to that level. For example, in the above screen shot, the Sensor Only Settings Profile for ADSP could be the `Sensor_Settings_Profile-Corp` profile and then for a special case (in the

following screen shot) you could override the Sensor Only Settings Profile at the ADSP level and apply the `Sensor_Settings_Profile_AD` profile to the AirDefense 2 floor.



Note

The Override settings option is available when you select (highlight) a network level below the appliance level. Use the Expand  button to reveal the other levels.

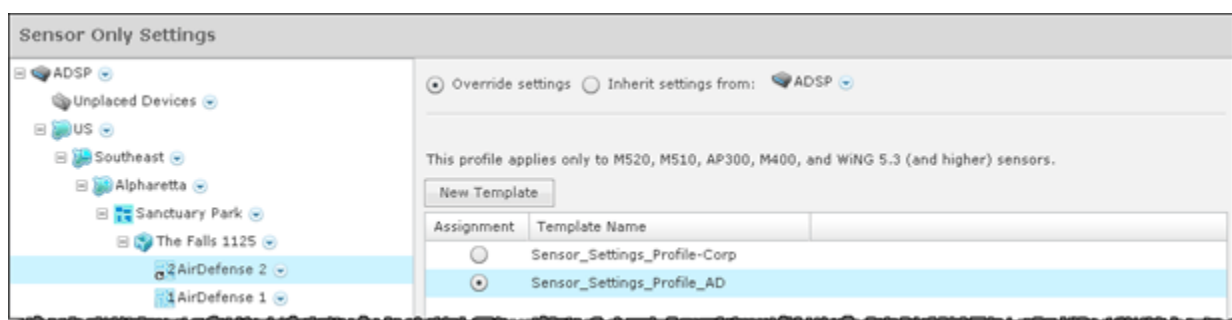


Click the Apply button to save your changes. Click the Reset button to discard your changes.

Sensor Operation

Sensor Operation settings allow you to:

- Enable Sensor-level options
- Configure the Sensor scan pattern
- Configure sensor settings for Advanced Spectrum Analysis.

To access the Sensor Operation settings, go to **Configuration > Operational Management > Sensor Operation**.

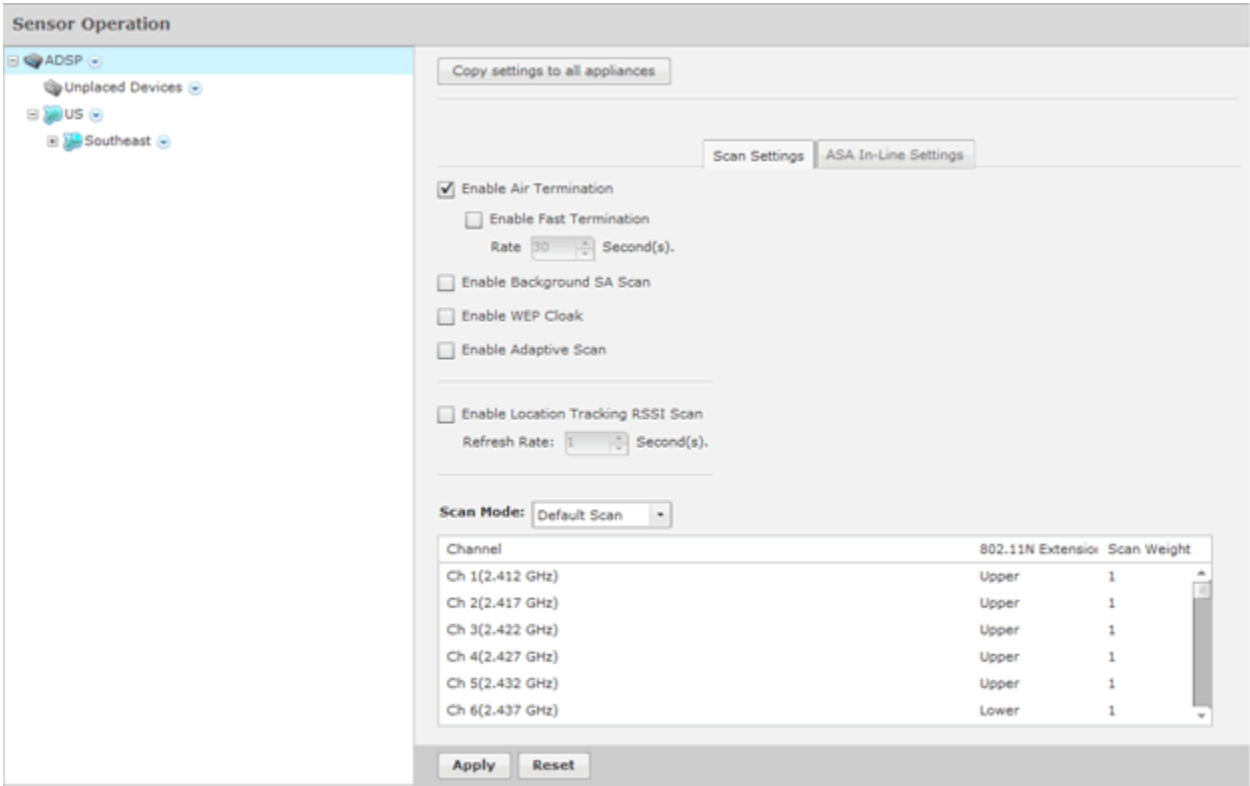

Use the **Scan Settings** and **ASA In-Line Settings** tabs to configure Sensor Operation. You can copy Sensor Operation configurations to all your appliances by clicking the **Copy settings to all appliances** button.



Note
You must have a Central Management license in order to copy settings to all appliances.

To save any configuration changes, click the **Apply** button. Clicking the **Reset** button resets all options back to their original settings.


Scan Settings

The **Scan Settings** tab is used to enable Sensor-level options and configure the Sensor scan pattern. Scan settings are configured at the appliance level of the network tree and inherited by all lower levels.

Channel	802.11N Extension	Scan Weight
Ch 1(2.412 GHz)	Upper	1
Ch 2(2.417 GHz)	Upper	1
Ch 3(2.422 GHz)	Upper	1
Ch 4(2.427 GHz)	Upper	1
Ch 5(2.432 GHz)	Upper	1
Ch 6(2.437 GHz)	Lower	1

The appliance level can be expanded to show the lower levels. If a lower level is selected from the tree, its scan settings are displayed on the right. If the scan settings are inherited from a parent level, the options are read only and grayed-out. If the scan settings are overridden, the options have read/write permission and can be edited. All tree levels that do not inherit the same settings as the selected node are displayed with gray text. The following options are available:

Feature/Function	Description
Enable Air Termination	Air Termination lets you terminate the connection between your wireless LAN and any or Station associated with it. By default, Air Termination is disabled. It can only be enabled in the Appliance Manager.
Enable Background SA Scan	Spectrum Analysis has the capability to run background scans. By default, background scans are disabled.
Enable WEP Cloak	WEP Cloaking is an add-on tool that injects noise into a WEP-protected environment by transmitting frames that appear to be sourced from valid devices but are encrypted with an invalid WEP key. By default, WEP Cloaking is disabled.
Enable Adaptive Scan	Initially scans the selected channels and then adjusts the scan to concentrate on the channels with the most traffic. By default, Adaptive Scan is disabled.

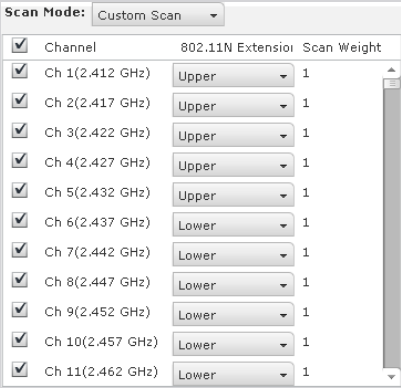Feature/Function	Description
Enable Location Tracking RSSI Scan	Devices can report RSSI scan data to ADSP. This option allows you to use that data in location tracking. Once this option is selected, you can adjust the location tracking refresh rate from 1 to 60 seconds. The optimal rate is 1 second. (You must have a Proximity and Analytics license before this option is visible.)
Scan Mode	You can choose channels to monitor by selecting one of the following scan modes: • Default Scan - the table displays the channels that will be scanned and is not editable. • Extended Channel Scan - the table displays all standard channels plus the extended channels that will be scanned. • Extended and Emergency Channel Scan - the table displays all channels including emergency channels that will be scanned. • Custom Scan - the table displays all available channels and allows you to select channels, select the 802.11N extension, and set scan weight for each selected channel.  A scan weight of 1 specifies that the selected channel will be scanned once during each scan rotation. A scan weight of 2 specifies that the selected channel will be scanned twice and so forth. The scan sequence is determined by the specified scan weights. All selected channels are initially scanned once during the scan rotation. Any selected channels that have weights of 2 or more are then scanned again at the end of each rotation period for the number of times specified by the weight value. For example, if channels 1, 6 and 11 are assigned scan weights of 1, 2 and 2, the channel scan sequence is 1-6-11-6-11. Another example is if channels 1, 5, 6 and 11 are assigned scan weights of 2, 1, 3 and 3, the channel scan sequence is 1-5-6-11-1-6-11-6-11. • Channel Lock - used to lock a Sensor on a specific channel for scanning. A drop-down menu is displayed where you can select a channel.

Feature/Function	Description
	Scan Mode: Channel Lock Ch 1 (2.412 GHz) Note: Note that all channels in the 2.4 and 5 GHz bands are grouped together.

ASA In-Line Settings

The ASA In-Line Settings tab is used to configure sensor settings for Advanced Spectrum Analysis.

These settings are for the ASA In-Line based scan, not for the Dedicated scan. There are four settings: two for 2.4 GHz band and two for 5GHz band. The values in the fields are the default settings. Normally, these levels are fine for normal use and should not have to be changed.

Threshold (dBm)—This is the master level control for ASA scanning. Any signal levels below the threshold during scanning will be dropped. Only levels greater than the threshold will be admitted for further processing.

Duty Cycle (dBm)—The duty cycle is a measure of % utilization for each frequency. 100% duty cycle for a frequency indicates the frequency is busy all the time. On the other hand, 0% duty cycle indicates the frequency is not used. The Duty Cycle controls the threshold level for duty cycle measurement. Only signal levels greater than the Duty Cycle threshold are counted in the duty cycle measurement.

Appliance Management

Topics under the Appliance Management category describe how to configure the AirDefense Enterprise appliance. Go to **Configuration > Appliance Management**.

The Appliance Management category allows you to:

- Back up, clear, or restore system configuration.
- View, create, and install security certificates for the ADSP appliance.
- Select the level of security for your certificates.
- Specify information needed by your appliance and enable key system features.
- Specify the language to be used on your appliance.
- Synchronize the configuration on your primary and secondary servers.
- Back up forensic information.

- Download configuration backup and/or system log files to your workstation.
- Validate certificates, and add or remove public keys.
- View status of any backup or restore that was initiated.
- Add customized banners to be shown each time users log into the system.

Appliance Settings

Use the **Appliance Settings** window to specify information needed by your appliance and to enable key system features.

➡ **Important**
You must be a user with read/write access to the System Configuration functional area to use this feature.

To access this window, go to **Configuration > Appliance Management > Appliance Settings**.

Appliance Settings

Port: 8543

Mail Relay Server: (IP address or fully qualified host name)

Max Connections: 201 (Total simultaneous application server connections)

☐ User Session Limit of 1 simultaneous sessions per user

☐ Air-Termination system

- ☐ Policy based Air-Termination system

☐ Port Suppression system

☐ Auto-Logout after 1 minute(s)

☒ Spectrum Scan Timeout after 10 minute(s)


☒ Sensor Cloaking Limit 3 simultaneous cloaked sensors

Function	Description
Port	Sets the UI port used for system access. Choose a port between 1024 and 65000. The system does not allow selection of a port that is already in use.
Mail Relay Server	Defines the mail relay host. Enter either an IP address or a fully qualified host name.
Max Connections	Specifies the maximum number of application server connections that can occur simultaneously.
User Session Limit	Limits the number of concurrent login sessions that a single user can have at one time.
Air Termination System	Enables termination of connections between the wireless LAN and associated authorized or unauthorized wireless clients. Yes enables Air Termination at the system level. No disables the feature (default). Note: This option is visible only to Admin users.

Function	Description
Policy-based Air Termination System	Enables automated Air Termination based on configured action plans and alarms. Yes enables policy-based termination. No disables the feature (default). Note: This option is visible only to Admin users.
Port Suppression System	Enables suppression of the network switch port through which a device is communicating, effectively shutting down the port. Yes enables port suppression. No disables the feature (default). Note: SNMP-managed switches must be added and full read/write privileges are required.
Auto-Logout Enabled	Enables automatic logout after a specified period of inactivity. Yes enables auto-logout and activates the Auto-Logout Timeout field. No disables the feature. Note: Users must log out and log back in for changes to take effect.
Auto-Logout Timeout (Minutes)	Specifies the number of minutes of inactivity before users are automatically logged out. This field is available only when Auto-Logout is enabled.
Spectrum Scan Timeout	Sets the timeout value for scanning during dedicated Spectrum Analysis. Valid values range from 1 to 120.
Sensor Cloaking Limit	Specifies the maximum number of sensors that can be cloaked simultaneously.

Backup / Restore Status

Backup / Restore Status allows you to view the status of your configuration backups and restores.

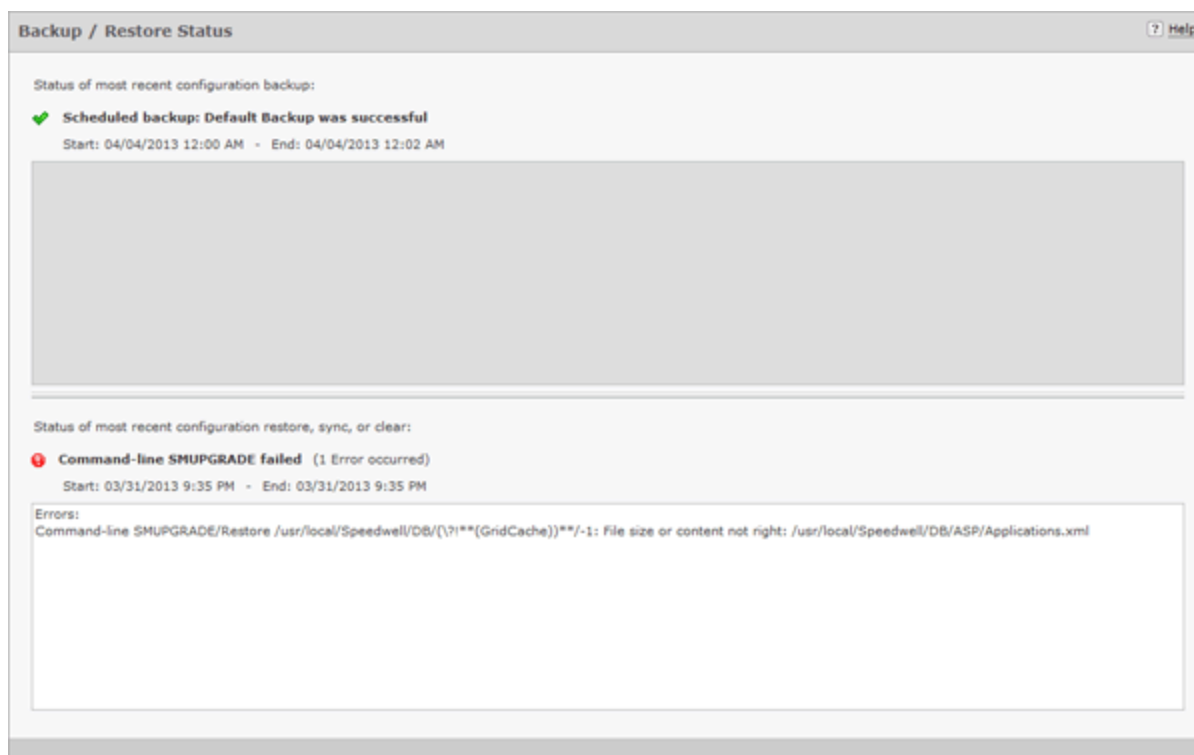

The top section displays status information about backups. The bottom section displays status information about configuration restores, synchronization, clear information, and upgrade information.

The following status information is displayed:


- A green checkmark  indicates that the backup/restore was successful.
- A red circle containing an exclamation mark  indicates that the backup/restore was unsuccessful.
- A start and end time is displayed to show you when the backup/restore started and when it ended.
- Any errors are displayed in the error window for each section.

Certificate / Key Validation

Certificate / Key Validation is where you validate certificates, and add or remove public keys.

Certificate Validation

The **Certificate Validation** tab allows you to validate certificate communications for your appliance and/or for any third party servers.

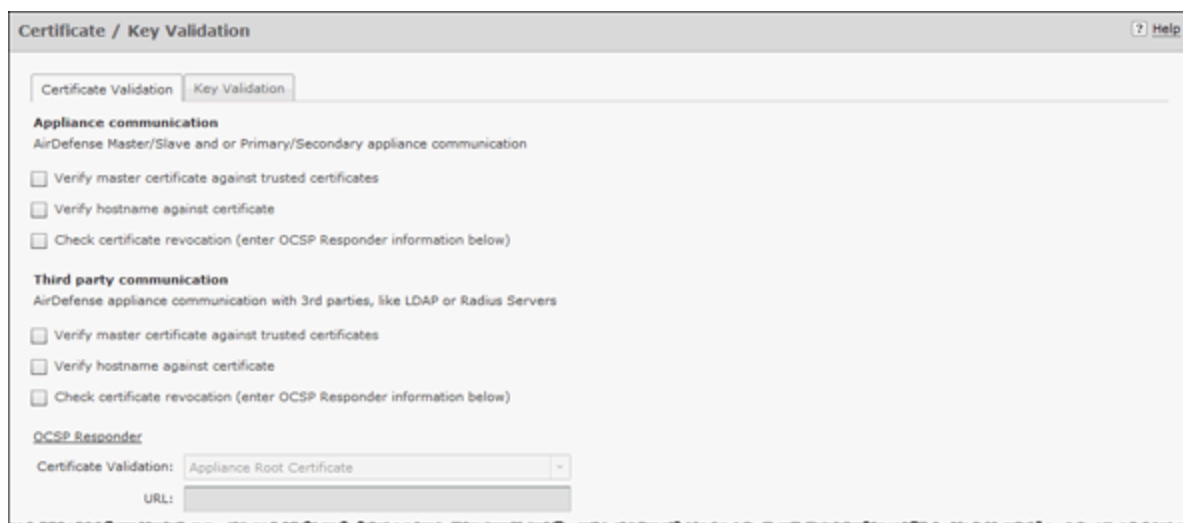

The screenshot shows the 'Certificate / Key Validation' window with the 'Certificate Validation' tab selected. It contains two sections: 'Appliance communication' and 'Third party communication', each with three checkboxes for verification. Below these is the 'OCSP Responder' section with a dropdown for 'Certificate Validation' and a text field for 'URL'.

Certificate / Key Validation Help

Certificate Validation **Key Validation**

Appliance communication
AirDefense Master/Slave and or Primary/Secondary appliance communication

☐ Verify master certificate against trusted certificates

☐ Verify hostname against certificate

☐ Check certificate revocation (enter OCSP Responder information below)

Third party communication
AirDefense appliance communication with 3rd parties, like LDAP or Radius Servers

☐ Verify master certificate against trusted certificates

☐ Verify hostname against certificate

☐ Check certificate revocation (enter OCSP Responder information below)

OCSP Responder

Certificate Validation: Appliance Root Certificate

URL:

There are three types of verifications for either appliance communications or third party communications. They are:


- Verify master certificate against trusted certificates
- Verify hostname against certificate
- Check certificate revocation.

Select the appropriate checkbox for each type of verification that you want to check. If the **Check certificate revocation** checkbox is selected, the OCSP Responder fields are activated. When activated, you must select the certificate type and enter its URL.

Clicking **Apply** validates your selections.

Key Validation

The **Key Validation** tab allows you to add and remove public keys for other servers.

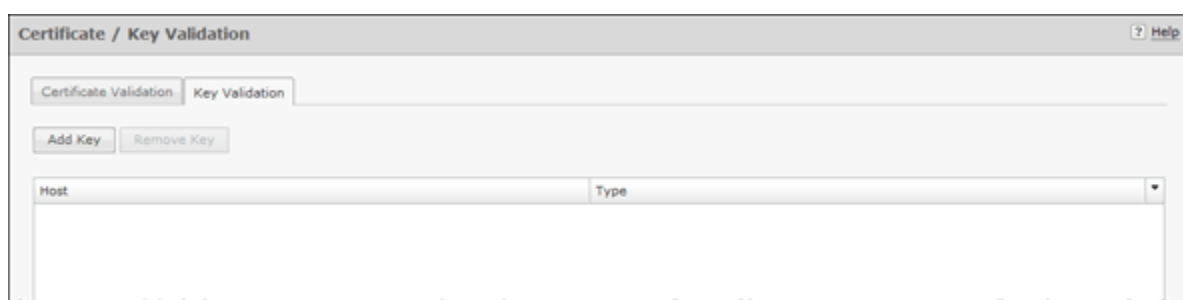

The screenshot shows the 'Certificate / Key Validation' window with the 'Key Validation' tab selected. It features 'Add Key' and 'Remove Key' buttons, and a table with columns for 'Host' and 'Type'.

Certificate / Key Validation Help


Certificate Validation **Key Validation**

Add Key **Remove Key**

Host	Type

To add a public key:

1. Click the **Add Key** button.

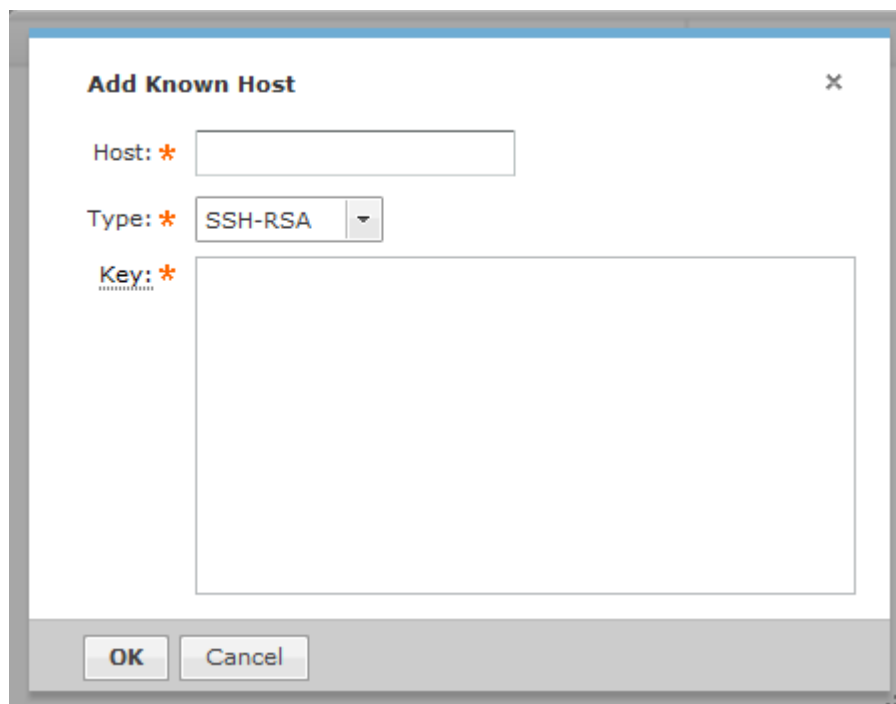

2. Type in the name of the other server.
3. Select the type of public key that you want to add (SSH-RSA or SSH-DSS).
4. Paste the public key into the **Key** field.

For example, if you possess the following public key:

```
----- BEGIN SSH2 PUBLIC KEY -----
AAAAB3NzaC1yc2EAAAABJQAAAIBrxx+YqQARTVMHfyyjisoQvBZoxvBMxf9CbXoo
VpWHBezQbm3anaav+4rEPIylcfFrIR/9o3/IdXT+arnXlrZ+7v3kBVx9SRWr5GY1
BtPFElVQi1PJz/tXTP3erWyoZ4mwsb0kmoFAPc9LBrwrLtSlkrXezZrKZMa4VzB9
yK6dAQ==
----- END SSH2 PUBLIC KEY -----
```

copy the actual key part and paste it into the **Key** field.

```
AAAAB3NzaC1yc2EAAAABJQAAAIBrxx+YqQARTVMHfyyjisoQvBZoxvBMxf9CbXoo
VpWHBezQbm3anaav+4rEPIylcfFrIR/9o3/IdXT+arnXlrZ+7v3kBVx9SRWr5GY1
BtPFElVQi1PJz/tXTP3erWyoZ4mwsb0kmoFAPc9LBrwrLtSlkrXezZrKZMa4VzB9
yK6dAQ==
```

5. Click **OK**.
6. To remove a public key, select (highlight) the key and then click the **Remove Key** button.

Certificate Manager

Certificates verify the authenticity of the AirDefense appliance. They can prevent hijacking of sessions between your browser and the AirDefense appliance, and can

even alert you to physical replacement of the AirDefense appliance. Certificates install into the AirDefense appliance and are sent by the appliance directly to your browser.



Important

AirDefense recommends using a security certificate for every AirDefense appliance in your network. Furthermore, we recommend that you replace the pre-installed security certificate from AirDefense with either a self-signed certificate or a root-signed certificate.

AirDefense supports the X.509 ITU-T (ITU Telecommunication Standardization Sector) standard for certificates. The supported encryption key lengths are 2048, 4096, and 8192. More information about the X.509 ITU-T standard can be found by searching the Internet.

Use the Certificate feature to view and create security certificates for the AirDefense appliance, and to perform other certificate-related tasks, such as installing certificates. You must be an Admin User to use this feature. You can access the iCertificates feature by following these steps:

View Certificate Details

To view certificate details:

1. Navigate to **Configuration > Appliance Management > Certificate Manager**.

The screenshot shows the 'Certificate Manager' web interface. At the top, there are two tabs: 'Appliance Certificates' (selected) and 'Trusted Certificates'. Below the tabs, a message states: 'The Key Store contains private keys and the certificates with their corresponding public keys.' This is followed by instructions: 'In order to add an SSL certificate to the AirDefense website follow these steps:' and a numbered list: 1. Generate a Certificate Signing Request (CSR), 2. Send the CSR to a Certificate Authority (CA) and get certificate files, 3. Import the certificate files received from the CA. Below the instructions, there is a 'Certificate Password:' label, a text input field, a 'View Certificates' button, a 'Display Password' checkbox, and a 'Change Password' link. The main content area is a large empty box. At the bottom, there is a row of buttons: 'Generate Request', 'Import New', 'Update', and 'Delete'.

2. Enter your certificate password.

**Note**

The first time you access Certificates use the default password (security). Immediately change the default password to one that is more secure. Do not continue to use the default password.

3. Click the **View Certificates** button.

Certificate Types

Every AirDefense appliance comes with an AirDefense certificate. However, there are three other certificates available; each represents a different level of security.

- Self-signed certificate
- Root-signed certificate
- SSL certificate.

The following table describes each of the certificate types:


Certificate	Description
AirDefense Certificate	The AirDefense certificate represents a minimal level of security. AirDefense ships the AirDefense appliance with a pre-installed security certificate. It is a working certificate that provides TLS encryption, but has not been verified and digitally signed by a root Certificate Authority (CA). The host name identified in the certificate will not match the actual host name of your AirDefense appliance. Unless the certificate meets all required criteria, you will receive one or more alert screens when you open a session with AirDefense.
Self-Signed Certificate	A self-signed certificate represents an intermediate level of security. A self-signed certificate (also called Tomcat Certificate) is a certificate that you must generate. In this certificate, you specify the host name of the AirDefense Server, but do not have the certificate verified and digitally signed by a root Certificate Authority. Unless the certificate meets all required criteria, you will receive one or more alert screens when you open a session with AirDefense.

Certificate	Description
Root-Signed Certificate	A root-signed certificate represents a high level of security. A root-signed certificate is a public certificate that is verified by a root Certificate Authority (CA). This is a digitally-signed certificate that ensures the authenticity of the AirDefense Server.
SSL Certificate	A SSL certificate represents the highest level of security. SSL certificates create a secure connection between a client and a server. The client is usually a web browser transmitting private information over the Internet. The URL for SSL connections start with https:// instead of http://.

View Certificates

There are two panels in the Certificates window. The left panel lists your current certificates. When you select (highlight) a certificate by clicking on it, information for that certificate is displayed in the right panel. The following information is available:

- Alias name
- Creation date
- Certificate details that include:
 - Certificate number
 - Owner information
 - Issuer information
 - Serial number
 - Validation period stating when the certificate became valid and when it ends
 - Certificate fingerprints.

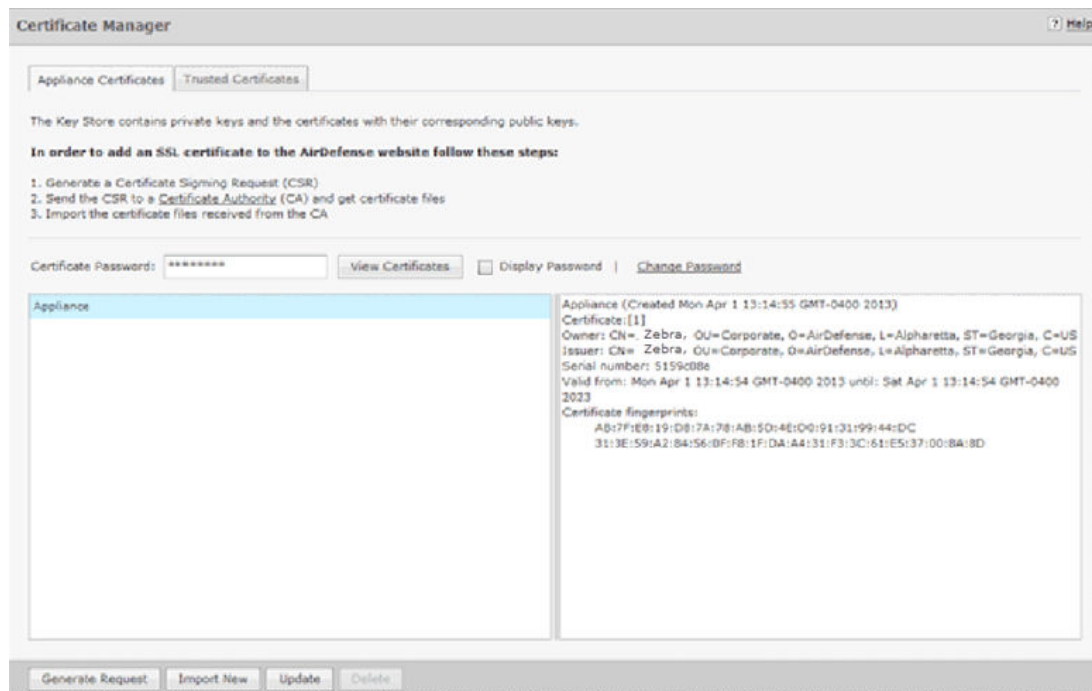

Sharing Certificates

AirDefense has a Central Management feature that allows you to monitor more than one appliance. In this situation, there will be a master appliance and a slave appliance. In order for this scenario to take place, you will need to share certificates between the master and the slave appliance.

There are two scenarios to sharing certificates after adding a slave appliance:

- Certificates on either the master appliance or slave appliance are in the default state.
- Certificates have been modified, changed, or imported on either appliance, and have been signed by a Certificate Authority (CA).

Sharing Certificates not in Default State

Sharing certificates not in the default state involves some extra steps. The following conditions must be met:

- The slave appliance must first be added using Add Devices under the Menu
- Both servers must be able to successfully ping each other
- Both master and slave must be running the same build
- The user name and passwords are entered correctly in Share certificate window, and the Alias field has the slave appliance IP address.

The procedure to sharing certificates in the default state is:



Note

This procedure assumes that you have added a certificate using the procedures under [Add Certificates](#).

1. Access the **Certificate Manager**.

2. In the **Appliance** field, select the slave appliance.
3. Type in the certificate password and then click **View Certificates**.
4. Click the **Share Appliance Certificate** button.

**Note**

The **Share Appliance Certificate** button is only visible after adding the slave appliance with **Add Devices**.

Share Appliance Certificates with Master

Slave Appliance

User Name: *

Password: *

Appliance Certificate Password: *

Trusted Certificate Password: *

Display Passwords

Master Appliance


Appliance Certificate Password: *

Trusted Certificate Password: *


Alias: * 172.17.0.20

Share Cancel

5. Fill in the above dialog window with the following information:
For the slave appliance:
 - The user name and password used to access the GUI
 - The appliance certificate password
 - The trusted certificate password.
For the master appliance:
 - The appliance certificate password
 - The trusted certificate password.
 - An alias that will show up in the trusted certificates on the slave. The default is the slave appliance IP address. This field is for identification purposes. You can change it to whatever you want it to be.
6. Click the **Share** button.

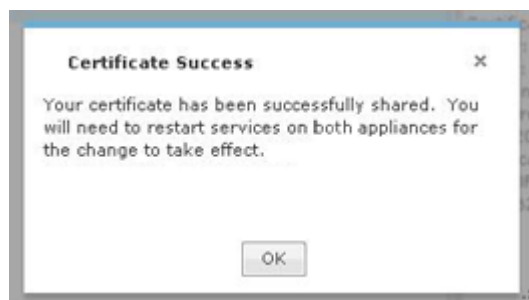

7. Click **OK**.
8. On the master appliance, access the **Trusted Certificate** tab.
9. In the **Appliance** field, select the master appliance.
10. Type in the certificate password and then click **View Certificates**.
11. Click the **Import New** button.

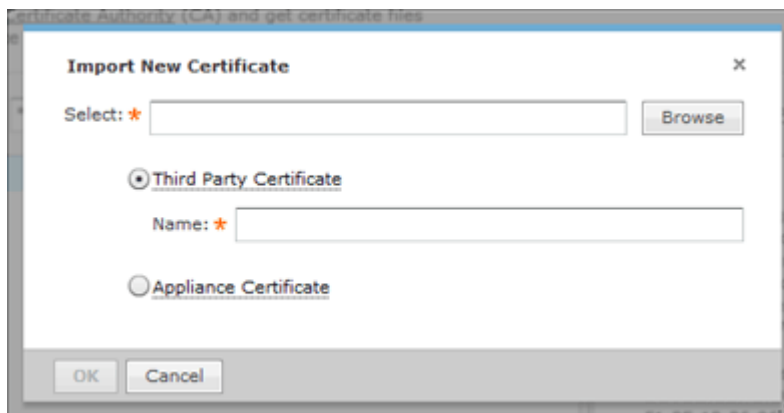

12. Browse to CA certificate and select it.
13. Click **OK**.
14. Restart the master appliance.
15. On the slave appliance, access the **Trusted Certificate** tab and then repeat steps 9 through 13.
16. Restart the slave appliance.
17. Check the master appliance to see that the slave appliance is now online.

Add Certificates

There are two types of certificates that you can add:

- Appliance Certificate
- Trusted Certificate.

Installation instructions for each type are included in their respective topics.

Appliance Certificates


The Appliance Certificates store private keys and the certificates with their corresponding public keys. There are three main steps to adding an appliance certificate. They are:

1. Generate a Certificate Signing Request (CSR).
2. Send the CSR to a Certificate Authority (CA) and get certificate files.
3. Import the certificate files received from the CA.


Generate Certificate Signing Request

To generate a Certificate Signing Request (CSR), do the following:

1. Click the **Generate Request** button. A window opens for you to confirm that you want to download the CSR.

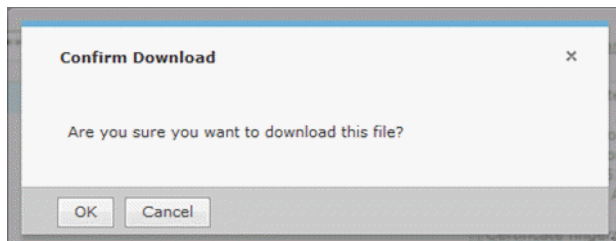

2. Click **OK**. A window opens for you to save your request.

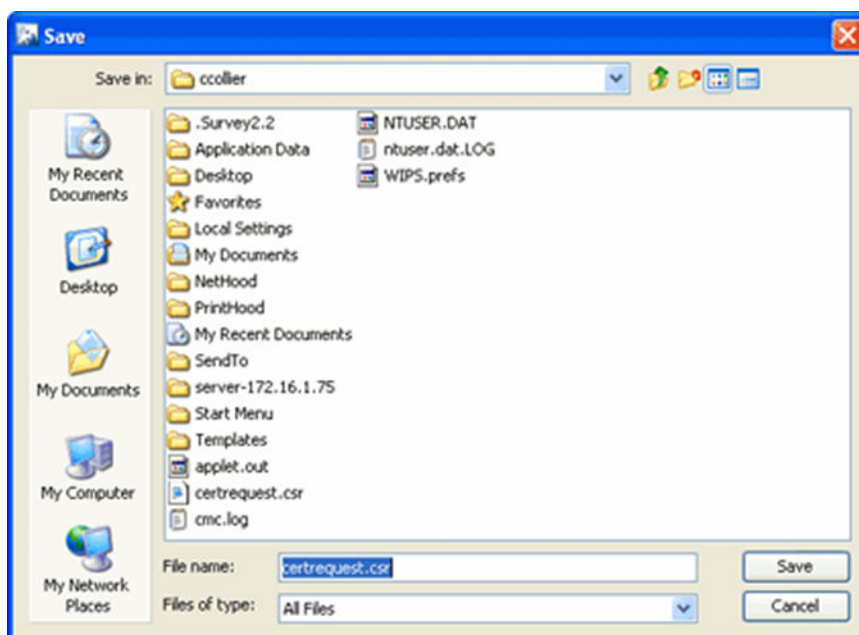

3. Navigate to in a convenient place such as your Desktop to save the CSR. The default name is `certrequest.csr`. You can use this name or change it.
4. Click **Save**.

Send CSR to a CA and Get Certificate Files

There is no set procedure on how to send a CSR to a CA and get the certificate files. This is dependent on the CA and their procedures.

The file save in Generate a CSR has the information that a CA needs to issue certificate files. You will have to present this information to the CA in some way.


Once you give the CA the information from the generated file, they will give you instructions on how to proceed, probably an email message. You will have to save the certificate files somewhere on your workstation such as your Desktop. There should be three certificates:

- Intermediate

- Root
- SSL which is the tomcat certificate.

Importing Certificate Files from CA

1. Click the **Import New** button. The **Import New Certificate** window displays.

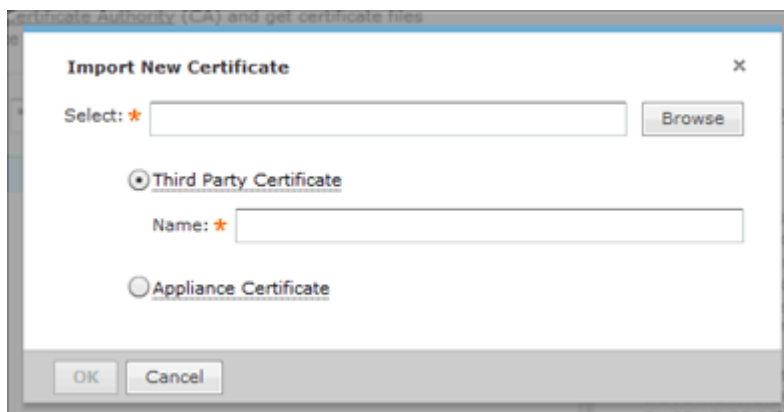


2. Click the **Browse** button to open the **Select file to upload** window.



Note

This is the procedure for a third party certificate. You also have the option of selecting an appliance certificate which includes private keys for the appliance, and is either self-signed or signed by a CA. Appliance certificates are always named Appliance.

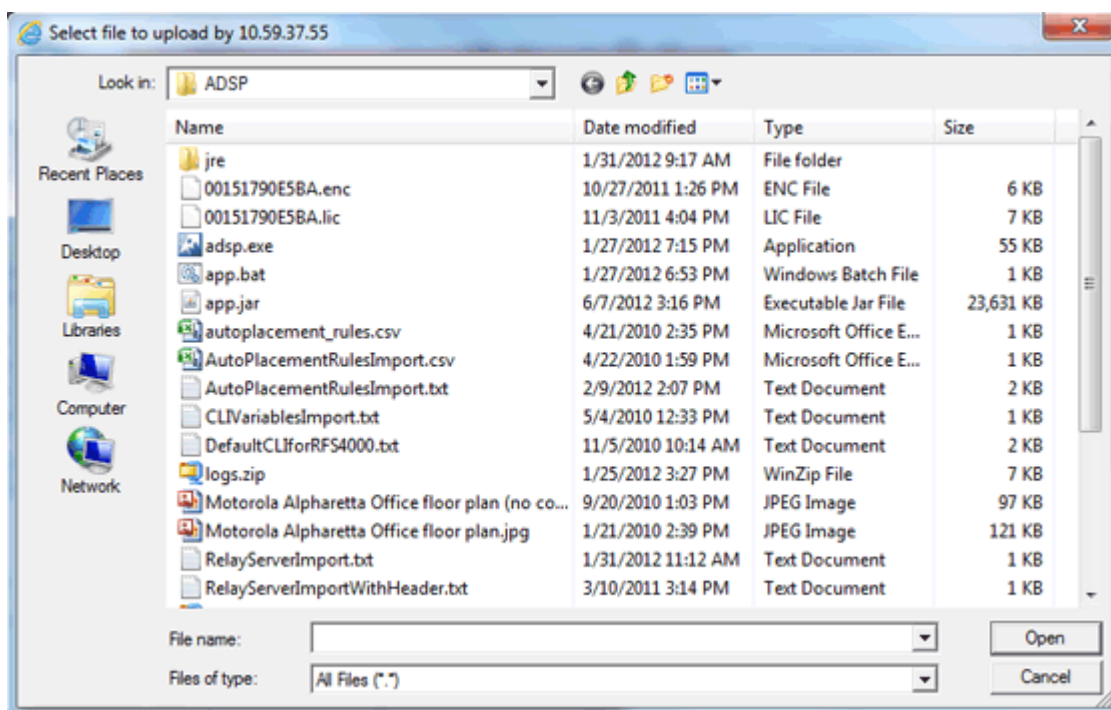

3. Navigate to the Intermediate certificate, select (highlight) it, and then click the **Open** button. The file name should now display in the **Select** field.

4. Type in a name for the certificate.
5. Click **OK**.
6. Repeat Steps 1 to 5 to import the Root certificate.
7. Repeat Steps 1 to 5 to import the SSL certificate.

**Note**

The name for the SSL certificate defaults to tomcat. You cannot change this name.

8. Click **OK**.


**Note**

You will have to restart tomcat services before the certificates are activated. The tomcat services are located on your ADSP appliance.


Import New Certificate

The Trusted Certificates store contains certificates from other parties (like AirDefense kAppliances, LDAP or Radius Servers) that you expect to communicate with, or from Certificate Authorities that you trust to identify other parties. Follow these steps to install a trusted certificate:

1. Click the **Import New** button. The **Import New Certificate** window displays.

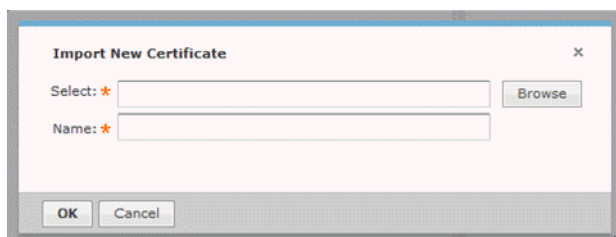

- Click the **Browse** button to open the **Select file to upload** window.

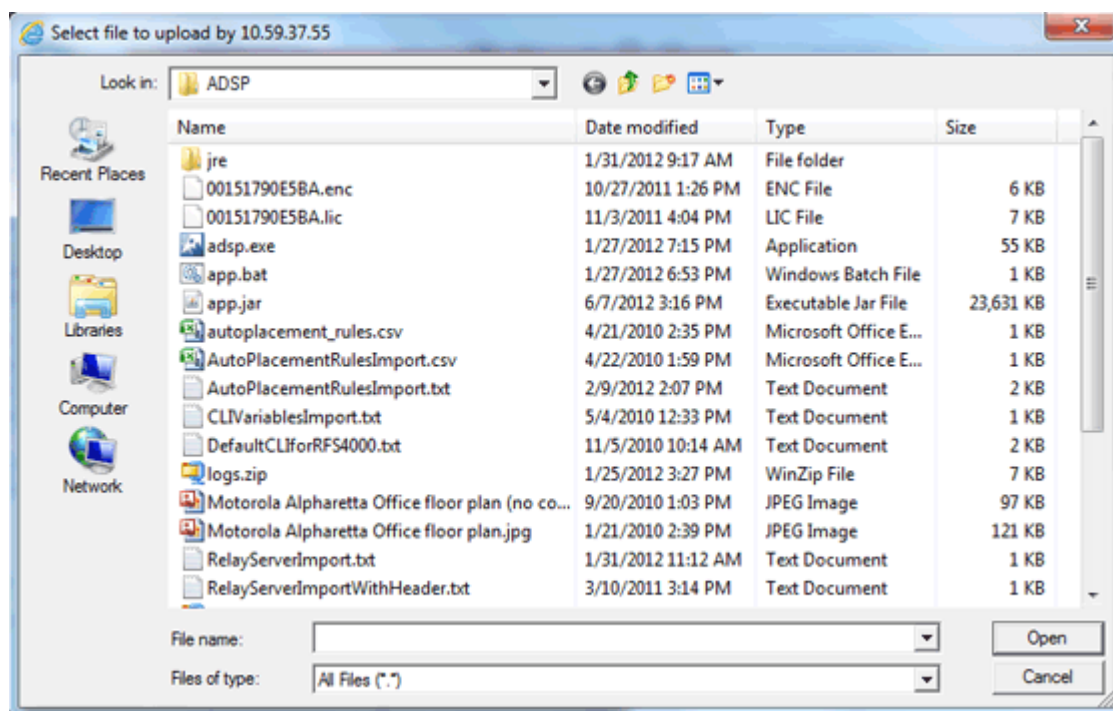

- Navigate to the trusted certificate, select (highlight) it, and then click the **Open** button. The file name should now display in the **Select** field.
- Type in a name for the certificate.
- Click **OK**.

Update Certificate Information


This topic discusses the process to update certificate information for certificates already stored in your appliance.

Changing Default Information

A certificate's default information is included with each certificate that you add.

To change the certificate's default information:

1. Click the **Update** button to display the **Update Appliance Certificate** window.

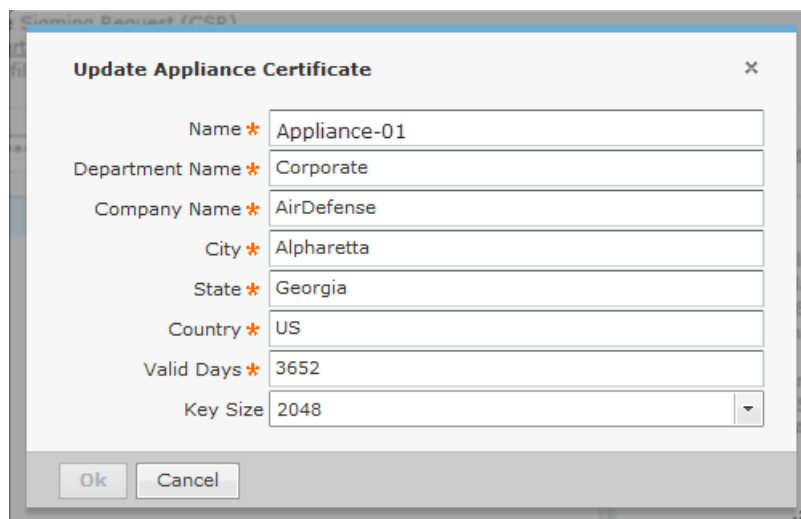

The following table describes the certificate information fields that can be modified:


Field	Description
Name	The hostname you assigned the AirDefense appliance.
Department Name	The department in which the AirDefense administrator is a member.
Company Name	The name of your company.
City	The city in which your company is located.
State	The State (full name - not abbreviated) in which the company is located.
Country	The two-character country code for the country in which the company is located.
Valid Days	The number of days a certificate is valid once you add it.
Key Size	The certificate encryption key length. Supported encryption key lengths are 2048, 4096, and 8192.

2. Once done, click the **OK** button.

Change Certificate Password

The **Certificates** window has a default password (security). You should change this password to a more secure password. To change the password:

1. Click the **Change Password** link.

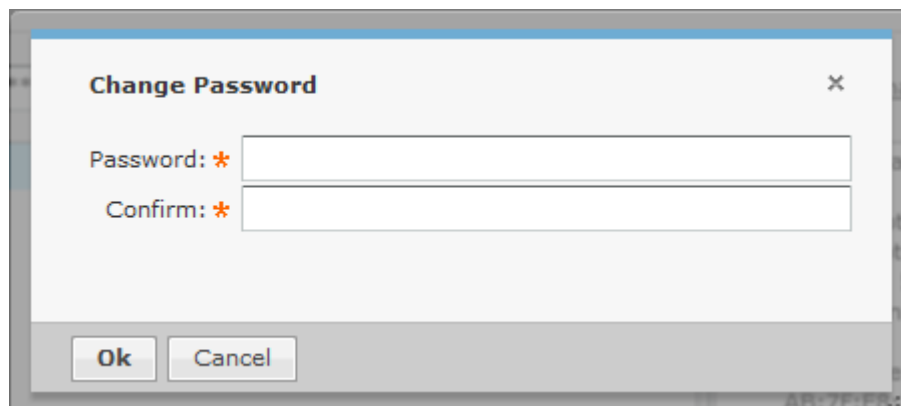A screenshot of a 'Change Password' dialog box. The dialog has a title bar with a close button (X). Inside, there are two text input fields. The first is labeled 'Password: *' and the second is labeled 'Confirm: *'. At the bottom, there are two buttons: 'Ok' and 'Cancel'.

2. Type the new password in the **Password** field.
3. Type the new password again in the **Confirm** field.
4. Click the **OK** button.

Export Certificates

Exporting a certificate allows you to store a copy of the certificate, the certificate trust list, and the certificate revocation list on a local computer.



Note

This information is required for Managed Services Provider (MSP) integration.

Depending on your browser, follow one of these procedures:



Note

 
Procedures for Internet Explorer and Firefox are included here. Other browsers will have similar buttons/links that allow you to export a certificate.

- [For Internet Explorer](#) on page 129
- [For Firefox](#) on page 130

For Internet Explorer

To export certificates using Microsoft™ Internet explorer:

1. Click **Certificate Error** near the top of Internet Explorer window.



2. Click the **View Certificates** link.
3. Access the **Details** tab.
4. Click the **Copy to File** button. The **Certificate Export Wizard** displays.
5. Click **Next**.
6. Select a file format for the certificate and then click **Next**.

7. Click the **Browse** button. Select a location on the local PC and specify a file name.
8. Click **Save**. The path and file name is displayed in the **File Name** field.
9. Click **Finish**.

For Firefox

To export certificate using Mozilla™ Firefox:

1. Click the area with the appliance ID located near the top the Firefox window.

10.59.39.107

2. Click the **More Information** button.
3. Click the **View Certificate** button.
4. Access the **Details** tab.
5. Click the **Export** button.
6. Select a location and specify a file name.
7. Click **Save**.

Configuration Backup

Configuration Backup allow you to backup up your appliance configuration to your workstation or to your appliance. There are two methods to accomplish this:

- [Manual Backups](#) on page 132
- [Automatic Backups](#) on page 133

The screenshot shows the 'Configuration Backup' web interface. At the top, there's a header 'Configuration Backup'. Below it, a row of buttons includes 'Backup Now', a checked checkbox for 'Enable Configuration Backup Scheduling', 'Add New Schedule', and 'Delete'. A table with two columns, 'Name' and 'Schedule', contains one entry: 'Default Backup' with the schedule 'Default Backup - Daily: Every 1 day at 12:00 AM'. Below the table, the interface is split into two panels. The 'Settings' panel on the left includes fields for 'Job Name', 'Destination' (radio buttons for 'Local' and 'Remote'), 'Host', 'Port', 'Protocol' (a dropdown menu showing 'SCP'), 'Path', 'User', 'Password' (with a 'Display Password' checkbox), and 'Retries' (a spinner set to 1, with '(Max: 5)' next to it). The 'Schedule' panel on the right includes a 'Frequency' dropdown (set to 'One Time Schedule'), 'Time' (a dropdown set to '12:00 AM'), and 'Date' (a date picker set to '04/03/2013'). At the bottom, there are 'Apply' and 'Reset' buttons.

How Backups Work

- All backups, scheduled or on-demand, create a backup file in `/usr/local/smx/backups`.
- Backups include more than the SQL database. Many configuration files (XML files) scattered throughout ADSP are also included. These files are included in the zip archive along with the database tables.
- If an on-demand backup is done to the desktop, the system performs a regular backup to `/usr/local/smx/backups` first and then copies that file to the desktop.
- If a scheduled backup is done to a remote device via SCP or FTP, the system performs a backup to `/usr/local/smx/backups` first and then copies that file to the remote system.
- Only the most current backup is kept. Previous backups are deleted from the `/usr/local/smx/backups` folder.
- The `/usr/local/smx/backups` directory is root protected. Users cannot delete the backup file. However, they can copy it to another location.
- The format of a backup file looks like:
`Backup_8.1.0-10_ECRT236.am.mot.com_20101018000011.zip.enc`. The name always includes the release, the server name, and the year-month-day-hour-minute-second. The `enc` at the end of the name indicates that the file is encrypted. Encrypted files can be emailed securely.


Backup Recommendations

- As a minimum, schedule a daily backup internal during non-peak hours.
- If there is an external server to backup to, schedule an external backup at least once a week and NOT at the same time as a local backup.
- NEVER direct a backup to `/usr/local/smx/backups` on a standby server. This will prevent synchronization from working properly.


Manual Backups

You can manually back up your server configuration to your workstation by following these steps:

1. Click the **Backup Now** button to display the **Backup Ready** window.

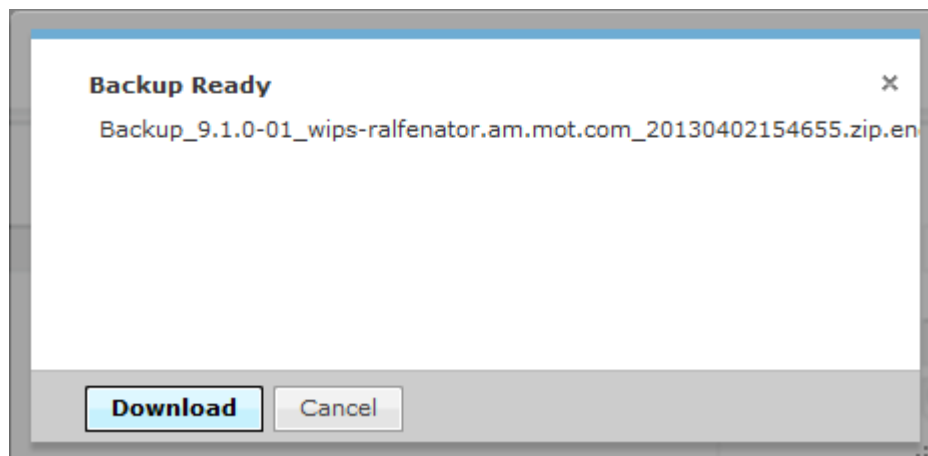

2. Click the **Download** button to open a window where you can select your destination directory (folder).

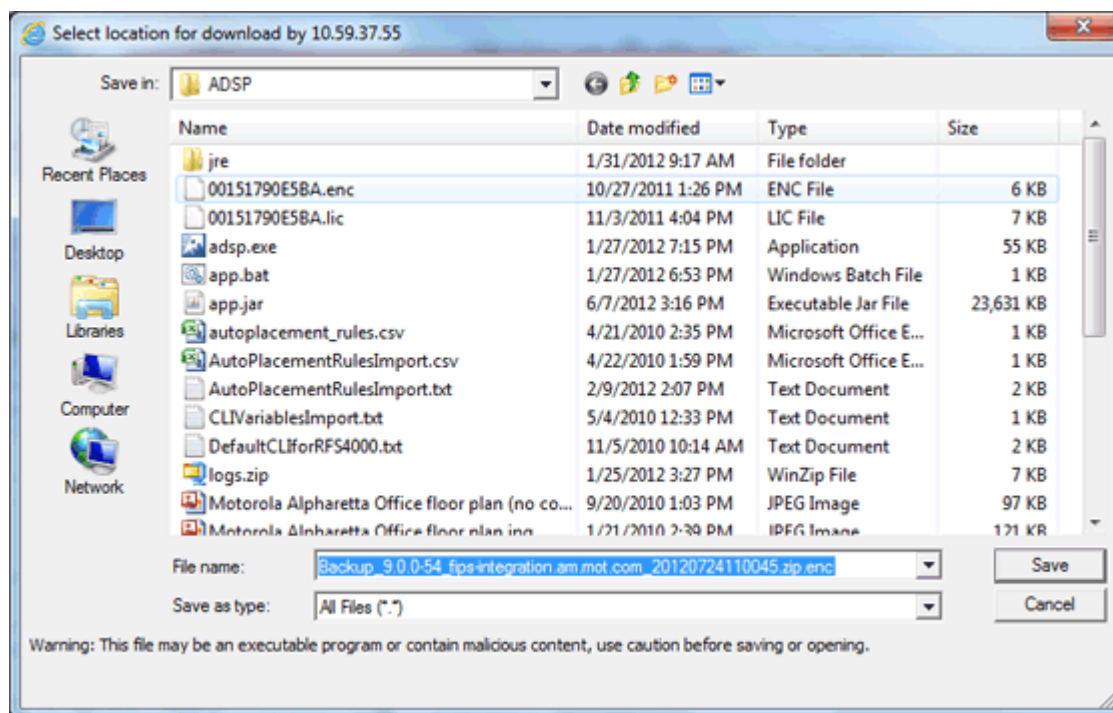

3. Navigate to the directory where you want to back up your server configuration.
4. Click **Save** to save the backup file in the selected directory.

Automatic Backups

Automatic Backups backs up your system configuration to your ADSP appliance.



Note

Do not configure the automatic backup time and the automatic synchronization time with the same values.

To schedule automatic backups, follow these steps:

1. Enable automatic backups by clicking the **Enable Configuration Backup Scheduling** checkbox to place a checkmark in the box.
2. Type in a name for the backup in the **Job Name** field.
3. Decide how often you want to run the backup by selecting *One Time Schedule*, *Intra-Day Schedule*, *Daily Schedule*, *Weekly Schedule*, or *Monthly Schedule* from the drop-down menu.
4. Depending on the interval you selected in the previous step, fill in the related fields using the following table:

Interval	Action
One Time Schedule	Choose a time for the backup by selecting a time from the Time drop-down menu. Then, select a day for the backup by clicking the Calendar button in the Date field and selecting a date.
Intra-Day Schedule	Select a time to begin the backup. Then, select a frequency in hours.
Daily Schedule	Select a frequency in day, weekdays only, or weekends only. Then, select a time of day.
Weekly Schedule	Choose a frequency in days. Then, select a day or multiple days to conduct the backup by clicking the checkbox next to the day to place a checkmark in the box.
Monthly Schedule	Choose the months that you want to run a backup by clicking the checkbox next to the month(s) to place a checkmark in the box(es). Then, select a day of the month to conduct the backup. Last, specify a time of day.

5. Click the **Apply** button to set the automatic backup schedule.
6. During an automatic backup, you can send the backup configuration to another AirDefense Enterprise server. Click the **Remote** checkbox to place a checkmark in the box and fill in the following fields:

Field	Description
Host	The name of the server where you want to back up the configuration. This can be an IP address or a DNS name defined by your DNS server.
Port	The port number to use during the backup.
Protocol	The file transfer protocol to use for backing up the configuration (SCP, SFTP, or HTTPS).

Field	Description
Path	The directory (folder) where to place the backup on the destination server.
User	The username used to log in on the destination server.
Password	The password used to log in on the destination server.
Verify Server Certificate/Key	Verifies that the server certificate (HTTPS connections) or server key (SCP and SFTP connections) is valid.
Retries	The number of times to retry the backup if a failure occurs. The maximum number is 5.


Configuration Clear

Use the Configuration Clear option to clear configuration data and set your appliance back to its default state when your system was first delivered.

You can either clear the complete configuration data and reset the system as it was first delivered or can clear specific configuration data.

The available options are:

1. Navigate to **Configuration > Appliance Management > Configuration Clear**.

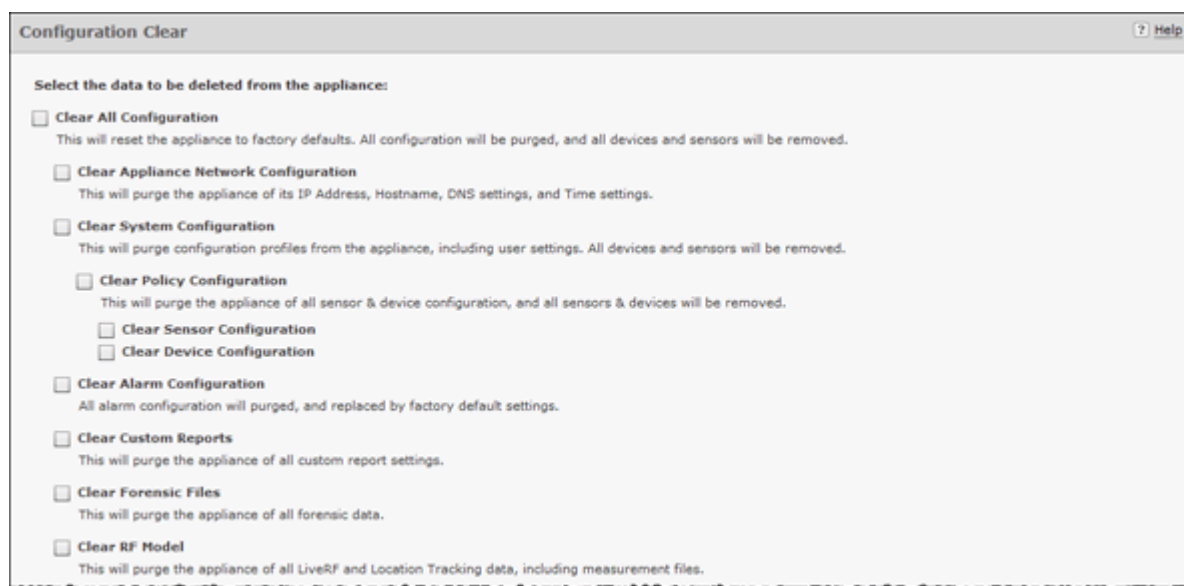


2. You can select from the following configuration options:

Option	Description
Clear All Configuration	Clears all configuration data, setting your server back to its original default state.
Clear Appliance Network Configuration	Clears the configuration for the appliance network. All network configuration is set back to default.

Option	Description
Clear System Configuration	Clears all system configuration data. This encompasses everything except what is covered by the other options. There are three other options associated with this option. • Clear Policy Configuration - Clears all policy configurations that you have changed. If you select this option, the Sensor and Device configurations will be automatically selected. • Clear Sensor Configuration - Clears all Sensor configurations that you customized. • Clear Device Configuration - Clears all device configurations that you customized.
Clear Alarm Configuration	Clears any configuration dealing with alarms and sets alarm configuration data back to default.
Clear Custom Reports	Clears any custom reports that you have created.
Clear Forensic Files	Clears (removes) any forensic data files that exists.
Clear RF Model	Clears the RF data used by Live RF and Location Tracking in the Floor Plan.

3. Select one or more options by placing a checkmark in the checkbox.
4. After selecting your options, click the **Next** button. A confirmation window is displayed.

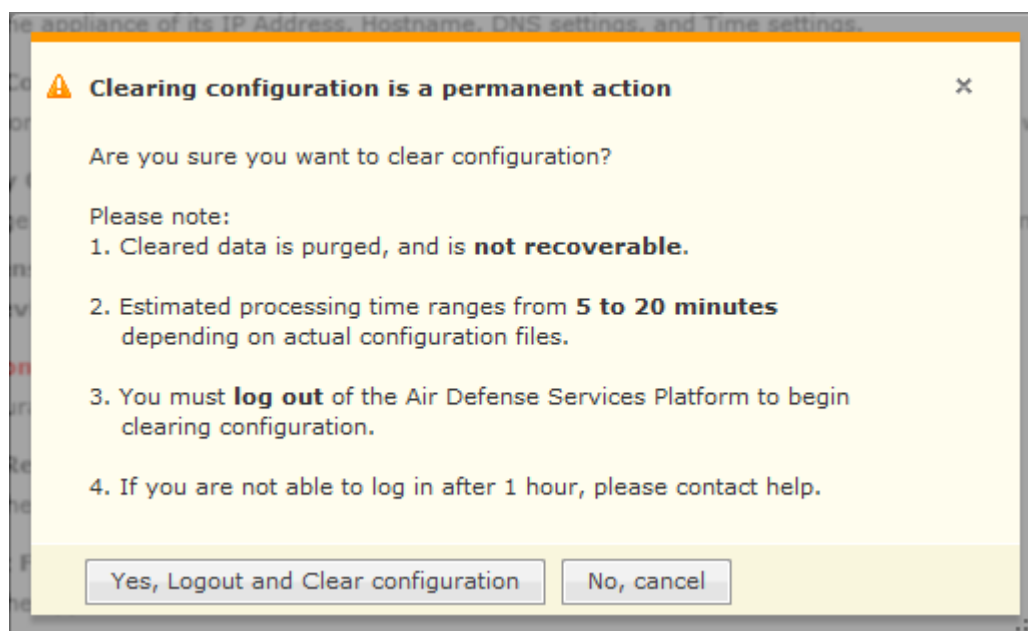

5. Select the **Yes, Logout and Clear configuration** button to confirm that you want to logout and clear the configuration data.




Note

Clicking the **No, cancel** button will cancel the clear operation.

Configuration Restore

You can restore a backup configuration that was previously saved to your workstation by using the Configuration Restore feature.

1. Navigate to **Configuration > Appliance Management > Configuration Restore**.

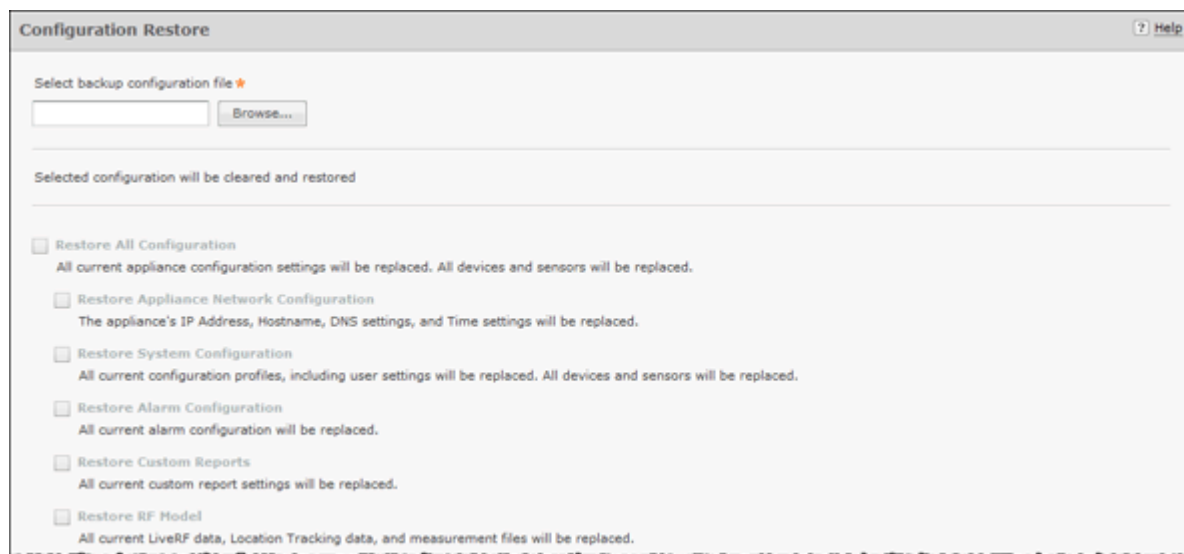

2. Click **Replace**.

A window opens that allows you to select the directory where your configuration backup is stored.

3. Navigate to the directory that contains the backup file and select the file.

4. Click **Open** to select the file.

The **Select backup configuration file** field displays the directory path and file name. The restore options become active.

5. Select the restore options that you want to restore. Refer to the following table for information on the options.

Option	Description
Restore All Configuration	Restores all configuration data from the backup file.
Restore Appliance Network Configuration	Restores the configuration for the appliance network.
Restore System Configuration	Restores all system configuration data. All sensors and devices are replaced.
Restore Alarm Configuration	Restores configuration related to alarms.
Restore Custom Reports	Restores any custom reports included in the backup.
Restore RF Model	Restores RF data used by Live RF and Location Tracking in the Floor Plan.

6. Click **Apply**.

The selected configuration is restored to the AirDefense server.


If you want to restore a configuration that was automatically backed up to the AirDefense server, download the backup file to your workstation before restoring it. See [Download Logs](#) for more information.

Download Logs


You can download configuration files that were automatically backed up to your Extreme AirDefense server to your workstation. Once the backed-up configuration is on your workstation, you can restore it. (See [Configuration Restore](#).)

To download a configuration, follow these steps:


1. Navigate to **Configuration > Appliance Management > Download Logs**.

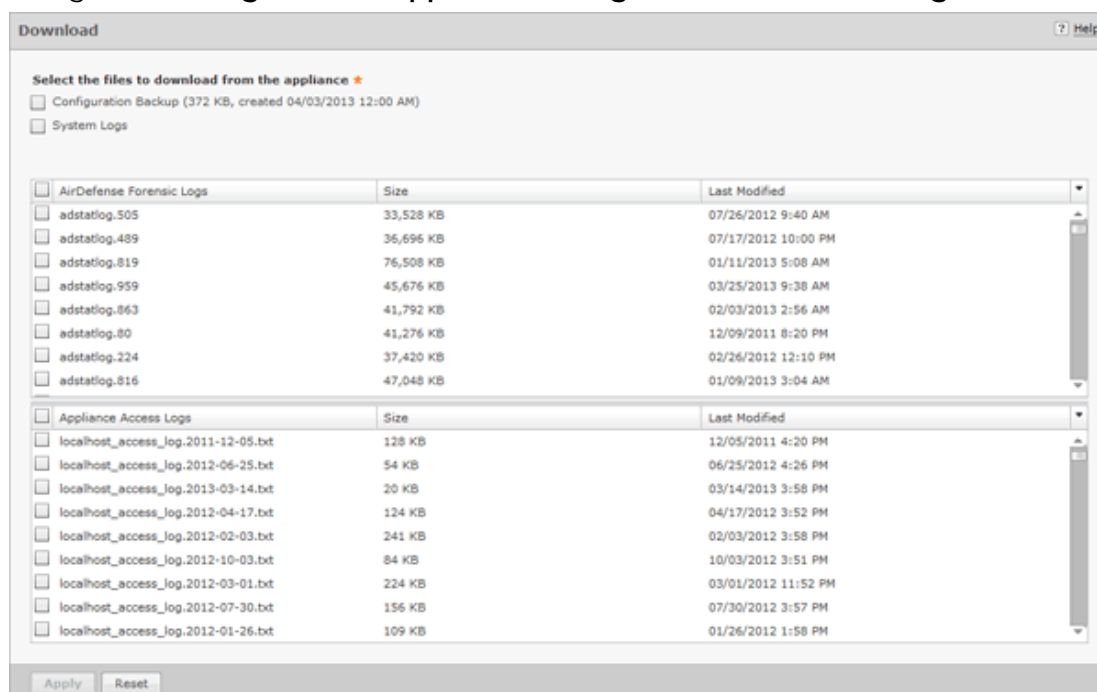

2. Select if you want to download a backup that exists on your appliance and/or the system logs.
3. You can download all forensic logs or all appliance access logs. Alternatively, you can choose the forensic logs or appliance access logs that you want to download.
4. Select **Apply**. A destination directory window is displayed.

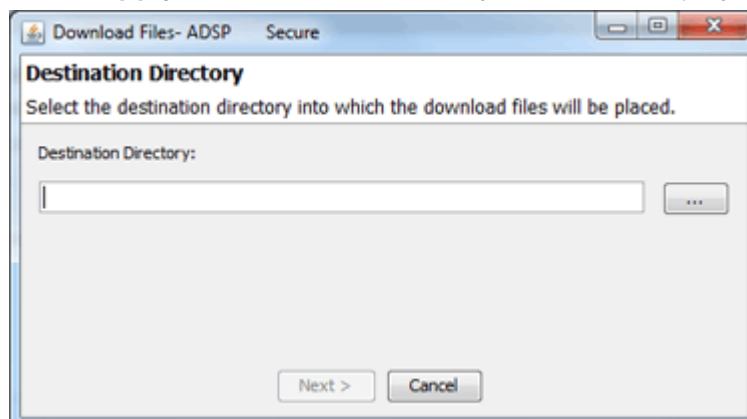

5. Select the **Browse** button to open a window where you can select your destination directory (folder).
6. Navigate to the directory where you want to download your server configuration.
7. Select **Select** to select the destination. The destination path displays in the **Destination Directory** field.
8. Select **Next**. The configuration is downloaded to the selected directory and a status window is displayed confirming the download.

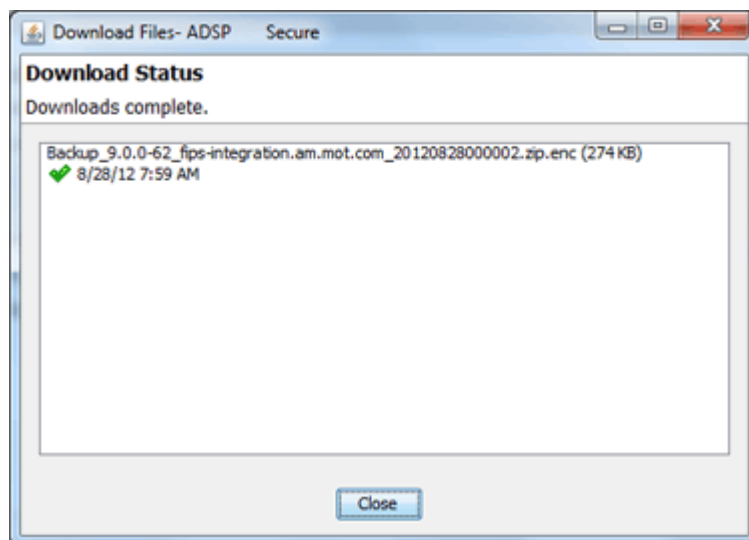

9. Select **Close**.

Forensic and Log Backup

The **Forensic And Log Backup** window enables you to set the various parameters for automatic backup of your forensic logs and system logs to different remote servers. To configure the same server, you must configure the same details for both forensic and system logs fields.

A screenshot of the "Forensic and Log Backup" configuration screen. The screen is divided into two main sections. The left section, titled "Enable Configuration Backup Scheduling", includes fields for Host, Port, Select Protocol (set to SCP), Path, User, Password, Retries (set to 1), and a checkbox for "Verify Server Certificate/Key". The right section, titled "Enable Automatic Log Backup", includes similar fields for Host, Port, Select Protocol, Path, User, Password, and Retries. Below these fields are five buttons for backup frequency: Daily, Weekly, Monthly, One Time, and Intra-Day (which is highlighted with a green border and a clock icon). At the bottom of the right section, there are fields for "Set Frequency" (set to 1), "hourly Choose Time" (set to 12:53 pm), and "Time". "APPLY" and "Reset" buttons are located at the top right of the screen.

Figure 125: Forensic And Log Backup Screen

Language Settings

Extreme AirDefense user interface can be localized in a few selected language. Use the **Language** screen to select the language for the user interface elements.

The following user interface elements can display their content in your selected language.

Login / SSH Banners

The **Banners** window is provided for ADSP users who wish to add their own customized agreement banner which will be shown each time users log into the system. Navigate to **Configuration > Appliance Management > Login / SSH Banners**.

Pre-Login banners are created in the **Pre-Login Banner** tab. Login banners are created in the **Login Banner** tab. SSH banners are created/edited in the **SSH Banner** tab.

- [Pre-Login Banner](#)
- [Login Banner](#)
- [SSH Banner](#)

Pre-Login Banner

The **Pre-Login Banner** tab is provided for AirDefense deployments who wish to display their own customized banner before allowing users to log into AirDefense. You could use this banner to force user to accept "Terms and Conditions".



To activate, select **Enable Pre-Login Banner** checkbox.

The *** (Please enter text)** field is available to enter text that users will see before logging into AirDefense. Text can be entered in HTML or text format.

Click **Apply** to save the pre-login banner.

Login Banner

The Login Banner tab is provided for ADSP users who wish to add their own customized agreement banner which will be shown each time users log into the system.

Banners Help

Pre-Login Banner Login Banner SSH Banner

☐ Enable Login Banner

At initial login, the following agreement will be presented to the user: * (Please enter text or HTML)

```
<html>
This is the <b>default</b> agreement.<br>
Replace this text with the <b>actual</b> agreement text.
</html>
```

The following buttons will appear below the agreement text.

Approve button label: *

Cancel button label: *

If the user clicks the "cancel" button, the following exit message will appear: * (Please enter text or HTML)

```
<html>
This application cannot run unless the agreement is accepted.
</html>
```

To activate, select **Enable Login Banner** field.


The following configuration options are available for customizing the Login Banner.

Function	Description
At initial login...	Enter the actual startup agreement text in this area; this text is what will appear when the ADSP application is first opened. Note: This text can be entered in HTML or text format.
Approve button label	Enter the actual text that will appear for the approve button on the Startup Agreement window. Default = I Agree
Cancel button label	Enter the actual text that will appear for the cancel button on the Startup Agreement window. Default = I Disagree
If the user clicks the...	Enter the actual text that will appear as a message dialog window when you choose to cancel the Startup Agreement. Note: This text can be entered in HTML or text format.

Click **Apply** to save the Login banner.

SSH Banner

The SSH Banner tab is provided for AirDefense users who wish to add their own customized text for users accessing the AirDefense appliance through SSH.

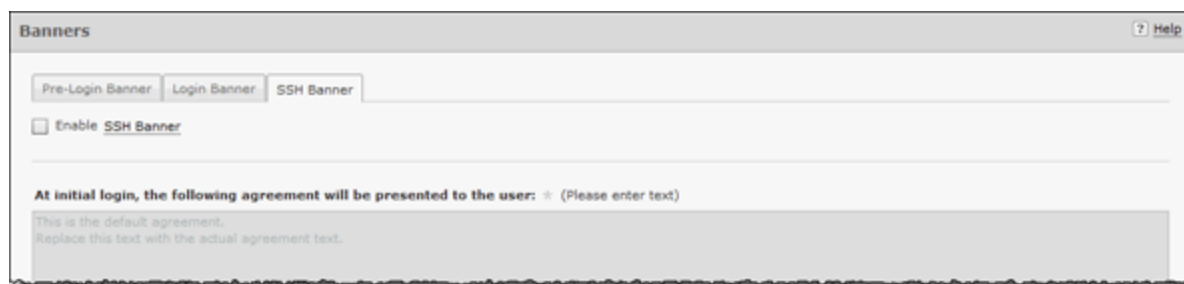

To activate, select **Enable SSH Banner** field.

The following configuration option is available for customizing the SSH Banner.

The **At initial login...** field is available to enter text that users will see when accessing the AirDefense appliance through SSH. Text can be entered in HTML or text format.

Click **Apply** to save the SSH banner.

Redundant Appliance Sync

AirDefense provides a feature that allows you to synchronize the configuration on your primary and secondary servers. There are two methods to accomplish this:

- [Manual Synchronization](#)
- [Automatic Synchronization](#)

The proper way to synchronize servers is to configure your primary server first and then synchronize your secondary server with your primary server. All configuration settings are copied from your primary server to your secondary server so that the two servers have the same configuration. Configuration settings from the primary server will override any configuration settings on the secondary server.

How Synchronization Works

- Synchronization will not work if there is no backup file or if there is a backup in progress.
- On the standby server, during either scheduled or on-demand synchronization, the standby server pulls the current backup from `/usr/local/smx/backups` on the primary server.
- NEVER schedule a synchronization or perform an on-demand synchronization at the same time a backup is occurring on the primary server.
- NEVER start an on-demand backup while synchronizing servers.
- The backup file is copied to `/usr/local/smx/backups` on the standby machine which brings up two important points:
 - NEVER schedule a local, remote or on-demand backup on the standby machine. If you do, it will overwrite the file transferred over from the primary server.
 - NEVER direct a backup from the primary server to `/usr/local/smx/backups` on a standby server. This will prevent synchronization from working properly.

- NEVER back up to the desktop from the standby server, because that process overwrites the existing file in `/usr/local/smx/backups`.
- As the second part of synchronization, the standby server runs a restore to itself using the file found in its own `/usr/local/smx/backups` directory. This should be the only file ever copied over from the primary server.

Synchronization Rules

- You should only back up the primary server. NEVER schedule or perform a backup on the standby server.
- Synchronization should only be done from the standby server. NEVER schedule or perform a synchronization on the primary server.
- Always schedule or perform a backup on the primary server one hour before scheduling a synchronization or performing an on-demand synchronization on the standby server. Backups require more time as the primary server continues collecting configuration data.
- NEVER schedule backups at the same time as a synchronization. This will NEVER work.
- Scheduled jobs should be included when backing up an appliance before synchronization. This will save you valuable time when restoring the backup on a new appliance. Unless you have backed up your scheduled jobs, you will have to recreate them on the new appliance.

Manual Synchronization

Follow these steps to manually synchronize your primary and secondary ADSP appliances:

1. On the secondary server, select the **Designate this as a Secondary (redundant) appliance** checkbox. The synchronization options activate.
2. Enter the IP address or DNS name of the primary server you want to synchronize with in the **Address** field.



Note

If using a DNS name, it must be defined by your DNS server.

3. Enter the port number of the primary server in the **Port** field.
4. Enter the username in the **Username** field that allows you to log in on the primary server you are synchronizing with.



Note

It is a good practice to setup an admin account (using the same username and password) on both the primary and secondary server.

5. Enter the password in the **Password** field that allows you to log in on the primary server you are synchronizing with.



Note

The **Password** must *not* contain a number sign (#).

6. Select whether you want to synchronize appliance name and/or synchronize mail relay.
7. Click the **Sync Now** button. Configuration files are downloaded to the secondary server.

Automatic Synchronization

Follow these steps to set up automatic synchronization of your primary and secondary ADSP appliances:



Note

Do not configure the automatic backup time and the automatic synchronization time with the same values.

1. Enable automatic synchronization by selecting the **Designate this as a Secondary (redundant) appliance** checkbox to place a checkmark in the box.
2. Enter the address, port, username, and password as described for manual synchronization.
3. Select whether you want to synchronize appliance name and/or synchronize mail relay.
4. Decide how often you want to run the synchronization by selecting *One Time Schedule*, *Intra-Day Schedule*, *Daily Schedule*, *Weekly Schedule*, or *Monthly Schedule* from the drop-down menu.

Depending on the interval you selected in the previous step, fill in the related fields using the following table:

Interval	Action
One Time Schedule	Choose a time for the synchronization by selecting a time from the Time drop-down menu. Then, select a day for the synchronization by clicking the Calendar button in the Date field and selecting a date.
Intra-Day Schedule	Select a time to begin the synchronization. Then, select a frequency in hours.
Daily Schedule	Select a frequency in day, weekdays only, or weekends only. Then, select a time of day.
Weekly Schedule	Choose a frequency in days. Then, select a day or multiple days to conduct the synchronization by clicking the checkbox next to the day to place a checkmark in the box.
Monthly Schedule	Choose the months that you want to run the synchronization by clicking the checkbox next to the month(s) to place a checkmark in the box(es). Then, select a day of the month to conduct the synchronization. Last, specify a time of day.

5. Click the **Apply** button to set the automatic synchronization schedule.

Appliance Replacement Considerations

Replacing an appliance should be done in such a way that no data is lost during the transition. Following these recommendations will help prevent data loss:

- Scheduled jobs should be included when backing up an appliance before synchronization. This will save you valuable time when restoring the backup on a new appliance. Unless you have backed up your scheduled jobs, you will have to recreate them on the new appliance.
- Hold onto the old appliance until you have retrieved all important data from the appliance's hard drive. Forensic data and other important data need to be backed up from the old appliance especially if you need the data for auditing purposes.
- You should install the new appliance on a lab network not connected to the LAN/WAN. Do not place the appliance on the WAN until you have restored the backed up configuration. The Sensors will connect to the appliance and your network tree will not be set up. Once connected to a lab network, you can either restore the primary's configuration file, or restore the configuration from a secondary appliance to the primary appliance. If the configuration is restored from the secondary appliance, you should then change the IP address of the new appliance to the one for the old appliance, reboot, and install the new appliance on the network.
- Once the new appliance is on the network, back up forensic data from the secondary appliance as required.
- ADSP restores the configuration long before the screen indicates that the process is complete. Executing a ping to the appliance will let you know exactly when the system is up. Once you receive a response, you can then log back in.

Account Management

Account Management allows you to:

- Create and modify user accounts and group accounts (Accounts Access feature)
- Authenticate users on the local appliance (Local Authentication feature)
- Change the password of the current user (Password Reset feature)
- Authenticate users by using the password stored on a RADIUS or LDAP server (Remote Authentication feature)
- Specify the user preferences that are used to set the ADSP auto refresh rate and to specify a proxy to access the server (User Preferences).

Account Access

You can use the Account Access feature to:

- View user account information.
- Add user accounts:
 - **New User Account** button.
 - **New Group Account** button.
- Edit user accounts (**Edit** link).

- Delete user accounts (**Delete** link).
- Synchronize user accounts (**Check Synchronization** button).



Note

You must be an Admin User to use the Account Access feature.

To access this feature, go to **Configuration > Account Management > Account Access**.

New User Account

Select the **New User Account** option from the drop-down menu to display the **New User Account** page.

New User Account

Username:

Full Name:

Description:

Authentication: ☒ Local
☐ Remote
☐ Remote with Local fall back

Account Security: ☐ Lock Account
☐ Lock after days inactivity
☐ Change password at next login

New Password:

Verify Password:

☐ Show Passwords

Password requirements:

1. Minimum of 6 characters
2. Maximum of 32 characters
3. Include uppercase letters
4. Include lowercase letters

Feature Permissions: Apply Template ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

Functional Area	No Access	Read Only	Read / Write
Device Tuning	☐	☐	☐
Alarm Management	☐	☐	☐
Alarm Criticality	☐	☐	☐
Appliance Management	☐	☐	☐
Network Management	☐	☐	☐
Threat Mitigation	☐	☐	☐
System Configuration	☐	☐	☐
Reporting	☐	☐	☐
Analysis Tools	☐	☐	☐
AP Test	☐	☐	☐
Vulnerability Assessment	☐	☐	☐
Connection Troubleshooting	☐	☐	☐
Proximity API	☐	☐	☐

Functional Role: ☒ Security ☒ Performance Monitoring and Troubleshooting
☒ Platform Monitoring ☒ Infrastructure Management
☒ Locationing

Scope Permissions: ☒ System

Save Cancel

View User Information

From the left frame of the user account screen, you can view the following information about existing user accounts:

- Username
- Full Name
- Description
- Authentication Method
- Functional Area Access

- Functional Role
- Scope Permissions.

Add or Edit User Accounts

Click the **New User Account** button to access the **New User Account** overlay.

New User Account

Username:

Full Name:

Description:

Authentication: ☒ Local
☐ Remote
☐ Remote with Local fall back

Account Security: ☐ Lock Account
☐ Lock after days inactivity
☐ Change password at next login

New Password:

Verify Password:

☐ Show Passwords



Password requirements:

- Minimum of 6 characters
- Maximum of 32 characters
- Include uppercase letters
- Include lowercase letters

Feature Permissions: Apply Template

Use the following table to configure the user account:

Field	Description
Username	The account name of the user.
Full Name	Enter a formal name of the user, if desired.
Description	Enter a description of the user account, if desired.

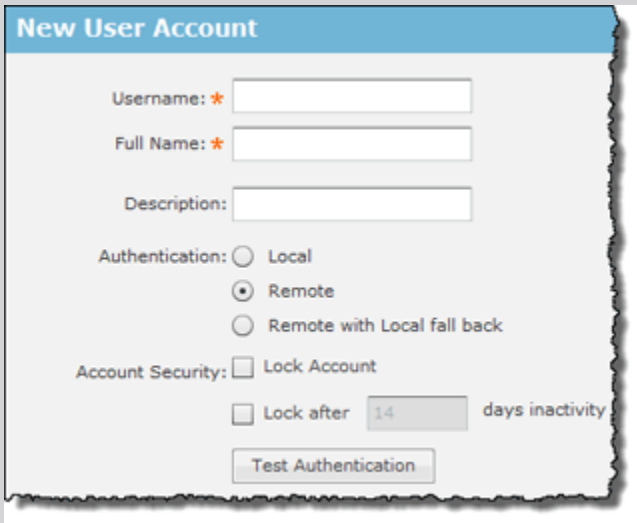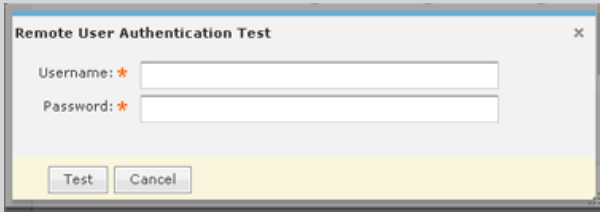Field	Description
Authentication	Select Local if the user will use Local Authentication. Select Remote if the user will use Remote Authentication. Select Remote with local fall back if the user will use Remote Authentication with local fall back. Note: At least one Administrator should be set to Local Authentication to avoid getting locked out of the system if a WLAN link is disconnected. When adding a remote user, Remote Authentication must be set up first. Once Remote Authentication is set up, select the Remote radio button.  You can test remote user authentication using the Test Authentication button.  Enter a username and password. Then, click the Test button. If the credentials are valid, you will receive a pass message. If the credentials are invalid, you will receive a failed message.
New Password	Enter a new password for the user. Note: Password must include lowercase letters and uppercase letters. Password must be 6-32 characters in length. Password may not contain spaces or tabs.
Verify Password	Enter the new password again to verify the password.
Lock Account	Check this checkbox if you want to lock the account.

Field	Description
Lock after x days inactivity	Check this checkbox if you want to lock the account after x amount of days of no use. Select the Show Passwords checkbox to reveal passwords.
Change password at next logon	Check this checkbox if you want to force the user to change password at the next logon. Select the Show Passwords checkbox to reveal passwords.
Feature Permissions	Limits users to specific functions within ADSP. Functional areas include: • Device Tuning • Alarm Management • Appliance Management • Alarm Criticality • Network Management • Threat Mitigation • System Configuration • Reporting • Analysis Tools • AP Test • Vulnerability Assessment • Connection Troubleshooting Note: Connection Troubleshooting is no longer supported. You can apply a template or you can select individual functions for users to access. The following templates are available: • Admin - Gives users read/write permission to all functional areas. • Guest - Gives users read permission to Alarm Management, Reporting, and Analysis Tools. No access is provided for the other functional areas. • Helpdesk - Gives users read/write permission to Help desk functionality. No access is provided for all other function areas. • Operation Center - Gives users read/write permission to all functional areas except Appliance Management, Network Management, and System Configuration. No access is provided for these three function areas.

Field	Description
Functional Roles	Gives access to the following Functional Roles: • Security - Manage security alarms • Platform Monitoring - Manage the alarms that monitor the platform (system) • Locationing - Manage the alarms triggered by Location Based Services • Performance Monitoring and Troubleshooting - Manage the alarms that monitor platform (system) performance and alarms generated by troubleshooting features such as AP Test • Infrastructure Management - Manage the alarms dealing with infrastructure management Select the appropriate checkbox(es).
Scope Permissions	Limits user operations to a specific scope within the network with the highest level being the entire system. You can drill down to the lowest level and limit user operations to a specific floor within the network or anywhere in-between.

Once you have configured the user options, click **Save** to save the user account. A message

The new User Account is created Successfully

is briefly displayed (top-right area of overlay) to confirm the account addition. AirDefense will alert you to any errors. You can display more information about the error by clicking on the error message.

Click the **X** next to the **Save** button to close the **New User Account** overlay panel.

Change User Passwords

If you are an Admin User, you can change passwords for other users. You do not need to know the current password. Additionally, all users can change their own password using **Password Reset** under **Configuration > Account Management**, but they must know their current password to change it. Non-admin users who have forgotten their password will need an Admin User to create a new one.

Password Criteria

Password must include lowercase letters, uppercase letters, numbers and symbols. Password must be 8-32 characters in length. Password may not contain spaces or tabs.

You should change the default admin account user password at your first opportunity. Leaving the default password on the system poses a security risk.	

User Roles

During installation, AirDefense sets up an Admin User account. The Admin User may create other user accounts (including Admin) or group accounts. All Admin Users have the ability to create additional accounts and change user or group accounts.

Default User Roles

AirDefense has four default role types with different levels of access to its functionality.

- Admin - Gives users read/write permission to all functional areas.
- Guest - Gives users read permission to Alarm Management, Reporting, and Analysis Tools. No access is provided for the other functional areas.
- Helpdesk - Gives users read/write permission with help desk functionality. No access is provided for all other function areas.
- Operation Center - Gives users read/write permission to all functional areas except Appliance Management, Network Management, and System Configuration. No access is provided for these three function areas

The Admin User can assign one of these default roles to each account or can customize a user role regardless if the account is a user account or group account.

Customized User Roles

You can customize roles by giving the account no access, read only access, or read/write access to the individual functional areas.

Feature Permissions: Apply Template ○○○○○○○○○○○○○○○○

Functional Area	No Access	Read Only	Read / Write
Device Tuning	☒	☐	☐
Alarm Management	☒	☐	☐
Alarm Criticality	☒	☐	☐
Appliance Management	☒	☐	☐
Network Management	☒	☐	☐
Threat Mitigation	☒	☐	☐
System Configuration	☒	☐	☐
Reporting	☒	☐	☐
Analysis Tools	☒	☐	☐
AP Test	☒	☐	☐
Vulnerability Assessment	☒	☐	☐
Connection Troubleshooting	☒	☐	☐

Capabilities for the individual functional areas are:

Functional Area	Capabilities (use of)
Device Tuning	• Setting annotations • Device profile configuration (existing)
Alarm Management	• Alarm configuration • View/Manage alarms that have triggered • Add notes to alarms • Acknowledge alarms • Clear alarms • Disable alarms on device
Appliance Management	Access to all settings under current appliance management, with the exception of functional areas covered by System Configuration
Alarm Criticality	Configure the scale of an alarm's criticalness.
Network Management	• Configure performance policy • Configure configuration policy • Configure monitoring policy • Configure infrastructure profiles • Configure sub-profiles • Action Manager use • Auto classification of devices • Network setup • Map configuration • Auto-Placement • Discovery policies • Manual modification to network tree hierarchy • Device placement • Inherited policy/profile assignment (network and device levels)
Threat Mitigation	• Manual termination • ACL • Port suppression
System Configuration	The configuration categories that affect the whole system
Reporting	• Reporting UI • Report builder
Analysis Tools	• Live View • LiveRF • Location Tracking • Spectrum Analysis • Advanced Forensics • Scope Forensics

Functional Area	Capabilities (use of)
AP Test	- On-demand or scheduled AP Test - AP Test profiles
Vulnerability Assessment	- On-demand or scheduled Vulnerability Assessment - Vulnerability Assessment profiles
Connection Troubleshooting	Note: Connection Troubleshooting is no longer supported.

AirDefense also tracks some functionality by account, regardless of role, such as keeping track of private vs shared reports and logging appliance activity.

Functional Roles

There are four functional roles for users:

- Security - Manage security alarms.
- Platform Monitoring - Manage the alarms that monitor the platform (system).
- Locationing - Manage the alarms triggered by Location Based Services.
- Performance Monitoring and Troubleshooting - Manage the alarms that monitor platform (system) performance and alarms generated by troubleshooting features such as AP Test.
- Infrastructure Management - Manage the alarms dealing with infrastructure management.

Scope Permissions

You can limit users to accessing and/or managing specific levels within the network tree. If you want users to have full access, give them permission to access the entire system. If you want users to only have access to a specific floor within a building, give them permission to access just that floor. You can limit access to any network level.

Add/Edit Group Accounts


Group accounts involve a group of users set up through remote authentication (either LDAP or RADIUS). When a user attempts to log into AirDefense that is a member of a group, AirDefense first uses local authentication to log in the user. If the user is not part of local authentication, remote authentication is used. Upon finding the user's credential using remote authentication, the group status is checked. If the user belongs to a group, AirDefense uses the group account to log the user into AirDefense.

Click the **New Group Account** button to access the **New Group Account** overlay.




Note

The **New Group Account** button is part of a multi-purpose button. Clicking the drop-down menu button displays a menu where you can select **New User Account** or **New Group Account**. The last option that you select becomes the button.

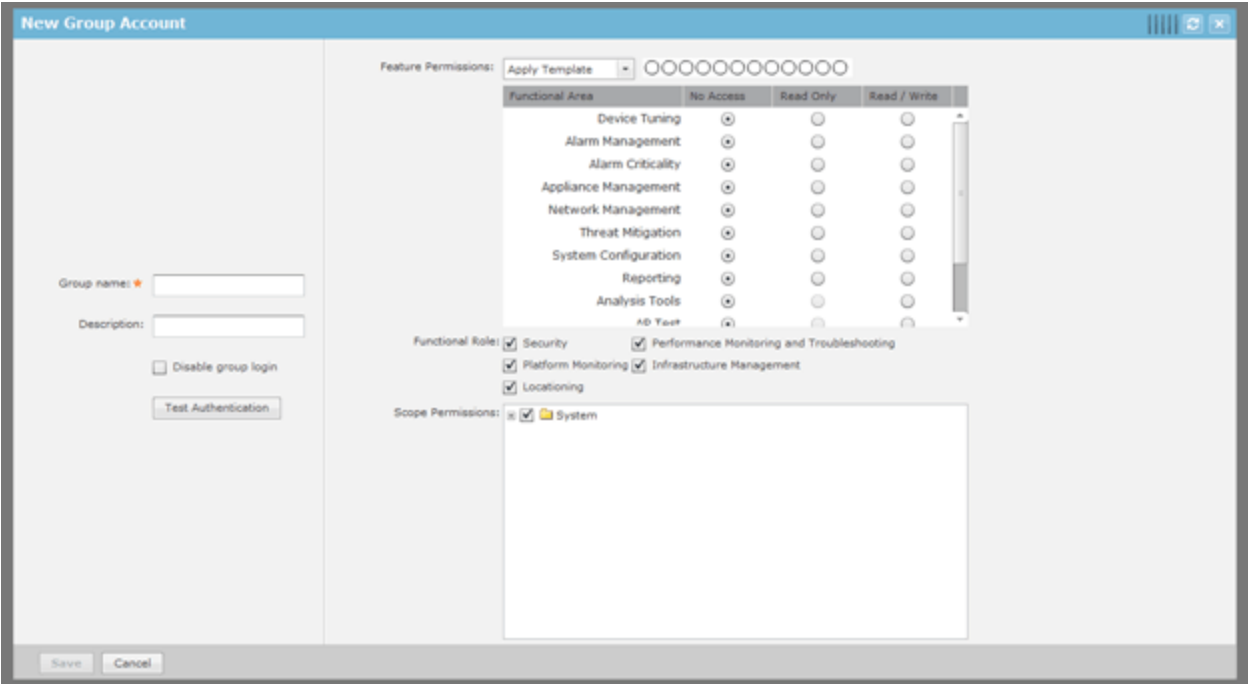

Use the following table to configure the user account:

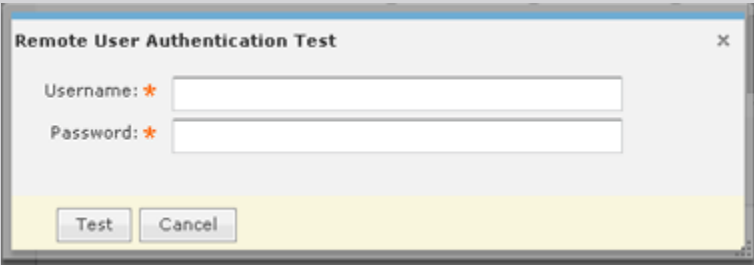Field	Description
Group Name	Enter the name of the group account.
Description	Enter a description of the group account, if desired.
Disable group login	Disable the current login group.
Test Authentication	Test remote user authentication using LDAP or RADIUS.  Enter a user's username and password. Then, click the Test button. If the credentials are valid, you will receive a pass message. If the credentials are invalid, you will receive a failed message.
Feature Permissions	Functions the same as in user accounts.
Functional Roles	Functions the same as in user accounts.
Scope Permissions	Functions the same as in user accounts.

Once you have configured the group options, click **Save** to save the group account. A message

The new Group Account is created Successfully

is briefly displayed (top-right area if overlay) to confirm the account addition. AirDefense will alert you to any errors. You can display more information about the error by clicking on the error message.

Click the **X** in the top-right corner to close the **New Group Account** overlay panel.

Edit, Copy, or Delete User Accounts

Roll over the account and click the **copy link** (shown below) to copy an account. Account information from the copied account is supplied when you copy an account.

guest (Guest) Guest User Account Admin ([Edit](#) | [Copy](#) | [Delete](#))

To delete a group or user account, select (highlight) the account and then click the Delete link.

Click the **Edit** link to edit an account or double-click on the account. Account information is already supplied when you edit an account.

The screen shot shows the **Edit User Account** overlay. If the account is a group account, the **Edit Group Account** overlay will display. The fields are the same as when you create a new account.

Edit User Account

Username:
 Full Name:
 Description:
 Authentication: ☒ Local
☐ Remote
☐ Remote with Local fall back
 Account Security: ☐ Lock Account
☐ Lock after days inactivity
☐ Change password at next login
 New Password:
 Verify Password:
☐ Show Passwords
 Password requirements:
 1. Minimum of 15 characters
 2. Maximum of 32 characters
 3. Include uppercase letters
 4. Include lowercase letters
 5. Include special characters

Feature Permissions: Apply Template [●●●●●●●●●●]

Functional Area	No Access	Read Only	Read / Write
Device Tuning	☐	☐	☒
Alarm Management	☐	☐	☒
Alarm Criticality	☐	☐	☒
Appliance Management	☐	☐	☒
Network Management	☐	☐	☒
Threat Mitigation	☐	☐	☒
System Configuration	☐	☐	☒
Reporting	☐	☐	☒
Analysis Tools	☐	☐	☒
AD Tool	☐	☐	☒

Functional Role: ☒ Security ☒ Performance Monitoring and Troubleshooting
☒ Platform Monitoring ☒ Infrastructure Management
☒ Locationing


Scope Permissions: ☒ System

Once you have configured the user or group options, click **Save** to save the user/group account. ADSP will alert you to any errors. You can display more information about the error by clicking on the error message.

Click the **X** in the top-right corner to close the overlay panel.

Synchronize Accounts

To synchronize accounts, go to **Configuration > Account Access** to display the **User Accounts** screen.

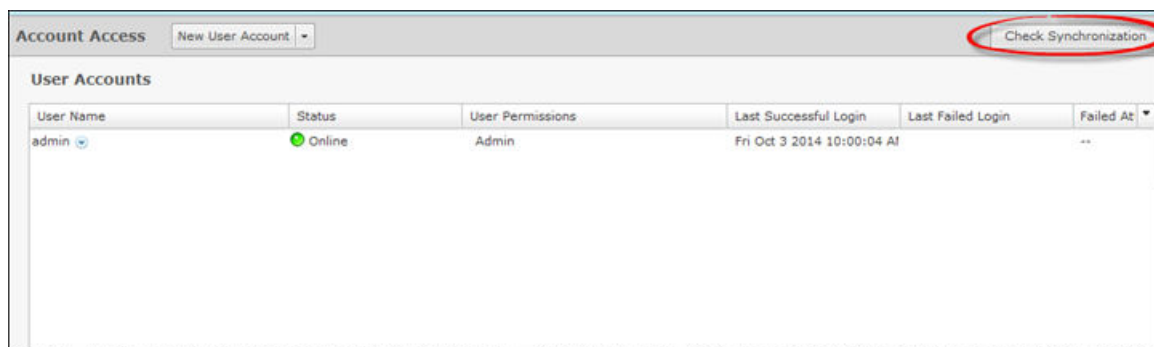


Note

You must have a Central Management license in order to use the Check Synchronization feature.

With a Central Management license, you can use the Check Synchronization feature to check all the accounts on all your managed appliances and list the differences. You then have the option of synchronizing selected appliances or synchronizing all appliances. Click **Check Synchronization** to see if all accounts on all appliances in your system are in sync.

If an appliance is out of sync with the primary appliance, a red asterisk (*) is displayed on the out of sync appliance. If you select (highlight) the out of sync appliance, a list of accounts are displayed that are out of sync on the selected appliance.

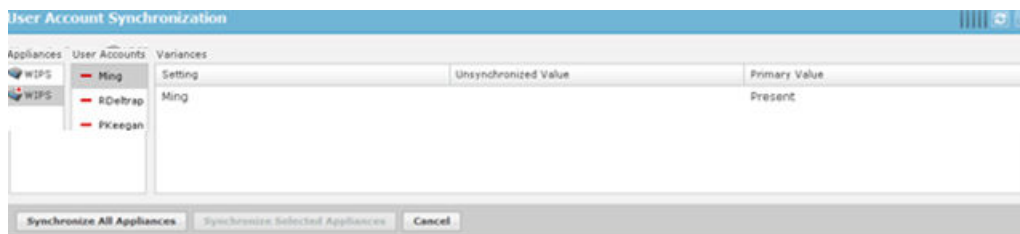


If you select (highlight) one of the user account, you will see the out of sync values. Click the **Synchronize All Appliances** button to add the missing accounts to all appliances in your system. Click the **Synchronize Selected Appliances** to add the missing accounts to the selected appliance(s).

Click the **X** in the top, right corner to exit the **User Account Synchronization** overlay.

Local Authentication

Local Authentication is used to authenticate users on the local appliance. It also allows you to manage password aging, password complexity, and account lockout criteria. To access this window, go to **Configuration > Account Management > Local Authentication**.

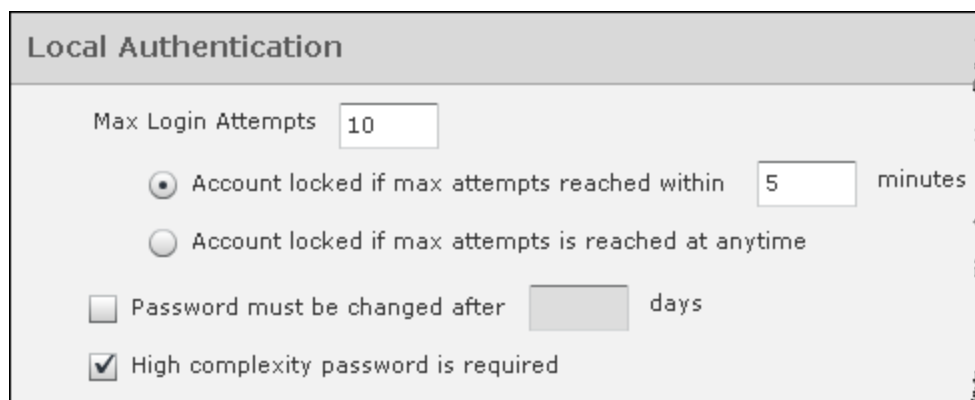

Local Authentication

Max Login Attempts

☒ Account locked if max attempts reached within minutes

☐ Account locked if max attempts is reached at anytime

☐ Password must be changed after days

☒ High complexity password is required

Field	Description
Max Login Attempts	The maximum amount of login attempts before a user is locked out of an account. You must also specify if the account is locked within a time limit or no time limit.
Password must be changed after x days	The number of days a password can be used before it expires. Once expired, users are required to change passwords.
High complexity password required	If checked, users are required to use a highly complex password when creating passwords.

After setting up the Local Authentication, click the **Apply** button to save the configuration. Click the **Reset** button to discard any changes and revert back to the previous settings.

The **Check Synchronization** button is used to check all appliances in the network to ensure they are using the same Local Authentication. (The synchronization features works basically the same way wherever the feature is implemented. Synchronizing Accounts has a good example of how the synchronization feature works.)


**Note**

You must have a Central Management license in order to use the Check Synchronization feature.

Click the **X** in the top, right corner to exit the **Local Authentication Synchronization** overlay.

Password Reset

Password Reset is used to change the password of the current user. To change information for other users, you must be a user with the role of Admin. To access Password Reset, go to **Configuration > Account Management > Password Reset**.

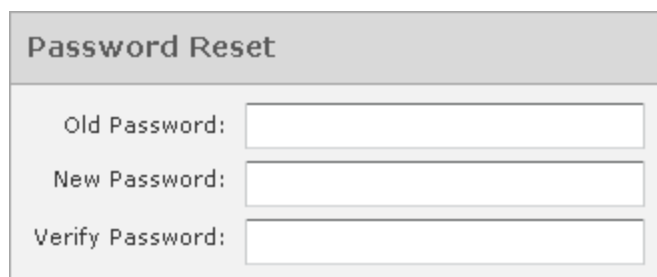A screenshot of a 'Password Reset' form. The form has a title 'Password Reset' at the top. Below the title, there are three input fields: 'Old Password:', 'New Password:', and 'Verify Password:'. Each label is followed by a text input box.

Password Reset	
Old Password:	
New Password:	
Verify Password:	

Field	Description
Old Password	Enter your current password here.
New Password	Enter your new user password here.
Verify Password	Enter your new password here again.

After entering your password information, click the **Apply** button to save your changes. Click the **Reset** button to discard any changes.

Remote Authentication

Remote Authentication is used to authenticate users by using the password stored on a RADIUS or LDAP server. This reduces the cost of managing different passwords across different systems and avoids replication of password data throughout multiple databases. To access this feature, go to **Configuration > Account Management > Remote Authentication**.

Remote authentication lets your organization consolidate authentication databases for easier administration. A potential problem with remote authentication may arise if the authentication server is not available because of network problems or problems on the appliance hosting the authentication service. For this reason, you should maintain one or more Admin user accounts with local authentication.

Setting users up for remote authentication is a three-step process:

1. Configure remote authentication on the AirDefense appliance.
2. Configure the authentication server.
3. Assign remote authentication to existing or new users.

To get started, click the **New** button. Remote Authentication fields are displayed so that you can set up Remote Authentication.

Remote Authentication [New] [Move Up] [Move Down] [Delete]

New_Auth_Source

Name:

Type:

☒ LDAP ☐ LDAPS

LDAP Server:

LDAP Port:

User Prefix: (Example: "CN=")

User Suffix: (Example: "DN=mycompany, DC=com")

☐ Use LDAP for external group based authentication

LDAP basics

Contact your LDAP administrator - be sure to follow your organization's protocol.

Prefix is added to the username to form the user distinguished name (DN).

Suffix is a DN that identifies the top entry in a locally held directory hierarchy. There is no requirement that you use a suffix.




Note

If you encounter problems, contact your LDAP administrator. He/she can advise you on how to fill in the fields. If you can, use an LDAP browser (<https://www.ldapadministrator.com/download.htm>) to login and browse. This will allow you to test your settings to see if they are right. There should also be errors in the LDAP server log that give more details on the problem.

Use the following table to enter data into the fields:

Field	Description
Name	Enter a configuration name.
Type	Select a server type from the drop-down menu: LDAP or RADIUS.
Protocol	Select a protocol type by clicking the appropriate radio button: LDAP or LDAPS. If the using a RADIUS server, the protocol type is selected from a drop-down menu. The options are PAP, CHAP, MSCHAP, or MSCHAPv2.
LDAP Server	Enter the IP Address of the LDAP server. This option only displays for LDAP servers.
RADIUS Server	Enter the IP Address of the RADIUS server. This option only displays for RADIUS servers.
LDAP Port	Enter the authorization server port number. This option only displays for LDAP servers.
RADIUS Port	Enter the authorization server port number. This option only displays for RADIUS servers.

Field	Description
Shared Secret	Enter the shared secret password for the RADIUS server. You can make passwords viewable by selecting the Display Passwords checkbox. This option only displays for RADIUS servers.
Timeout	Enter a timeout value for authentication. This option only displays for RADIUS servers.
Retries	Enter the number of times to retry authentication. This option only displays for RADIUS servers.
User Prefix	Enter the name of the windows domain for the server (e.g., qaairdefense\). User Prefix is optional. You can leave this field blank or you can supply a prefix ending in a backslash (\) or a double backslash (\\). You may have to experiment to see which option is valid for you.
User Suffix	Enter the Internet domain name for the server (User Suffix is optional.) You can leave this field blank or you can supply a suffix.

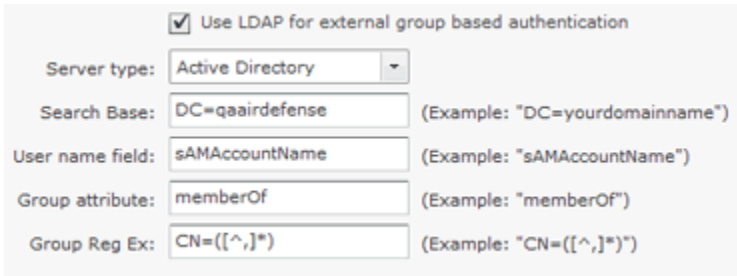Field	Description
Use LDAP for ...	This field is displayed if LDAP is chosen for the Type field. Select this checkbox if you are using external group based authentication. If checked, more fields are displayed. • Server type - For now, Active Directory is the only option. The information supplied in the other four fields are used in group identification for the Active Directory server type. • Search Base - Enter a string to find your domain name in the directory. Normally, the string is DC=yourdomainname. The Search Base field should be the same as the User Prefix field without any backslashes. • User field name - Enter a string to find your user name in the directory. Normally, the string is sAMAccountName. • Group attribute - Enter a string to find your group name in the directory. Normally, the string is memberOf. • Group Reg Ex - Enter a string that is used to strip out only unnecessary information and send what is left to AirDefense for use in group identification. Normally, the string is CN=([^,] *). If the LDAP administrator changes any of the strings from what is normally used, he/she must inform you of the string to use. Example:  The screenshot shows a configuration window with the following fields and values: ☒ Use LDAP for external group based authentication - Server type: Active Directory (dropdown) - Search Base: DC=qaairdefense (Example: "DC=yourdomainname") - User name field: sAMAccountName (Example: "sAMAccountName") - Group attribute: memberOf (Example: "memberOf") - Group Reg Ex: CN=([^,] *) (Example: "CN=([^,] *)")
Use RADIUS for ...	This field is displayed if RADIUS is chosen for the Type field. Select this checkbox if you are using external group based authentication. If checked, more options are displayed. • Group attribute - Displays a list of attributes to identify a group to ADSP. When an attribute is selected, values are inserted into the Vendor code, Attribute code and Group RegEx fields for AirDefense to use in group identification. You should not change any of the inserted values. Example:

Field	Description
	☒ Use RADIUS for external group based authentication Group attribute: Group-Name Vendor code: 0 Attribute code: 1030 Group RegEx: CN=([^\,]*)

After the entering the Remote Authentication data, click the Apply button to save the configuration. The configuration name is now displayed in the list on your left. If you highlight (click) a name in the list you can edit the fields for that configuration. You may also delete any highlighted configuration by clicking the Delete button. You can change the order of configuration preference using the Move Up or Move Down button.

You can test your Remote Authentication configuration using the Test Authentication button for user accounts or group accounts. For help using this button, see [Authentication](#) or [User Roles](#).

The **Check Synchronization** button is used to check all appliances in the network to ensure they are using the same Remote Authentication. (The synchronization features works basically the same way wherever the feature is implemented. [Synchronize Accounts](#) has a good example of how the synchronization feature works.)



Note
You must have a Central Management license in order to use the Check Synchronization feature.

Click the X in the top, right corner to exit the **Remote Authentication Synchronization** overlay.

User Preferences

User Preferences are used to specify the AirDefense auto refresh rate and to specify if a proxy should be used to access the appliance. Navigate to **Configuration > Account Management > User Preferences**.

User Preferences

Default View:

Auto Refresh:

Log Level:

Device Inactivity:

Copy MAC Formats:

- ☒ ff:ff:ff:ff:ff:ff
- ☒ FF-FF-FF-FF-FF-FF
- ☒ xxxx.xxxx.xxxx
- ☒ xxxxxxxx

Network New Column Preferences

☒ User refresh is required to populate data in the column.

☐ System will auto-refresh when columns are added.

☐ Don't show dialog in network tab again.

☒ Show Data Poll Job Initiation Dialog

☒ Show Diagnostic Log Job Initiation Dialog

☒ Show Import/Discovery "Run Now" Job Initiation Dialog

☒ Show Backup Download Job Initiation Dialog

☐ Use a proxy to access the server

Address:

Port:

☐ Proxy requires authentication

Username:

Password:

After defining your preferences, click the **Apply** button to save your changes. Click the **Reset** button to discard any changes.

Default View

Select the default view when logging into AirDefense. The following views are available:

- Dashboard tab
- Network tab
- Alarms tab
- Configuration tab.

Auto Refresh

AirDefense application data is automatically refreshed according to the refresh rate that you specify. The following rates are available:

- No auto refresh - Turn off automatic refresh.
- 10 minute refresh - Automatically refresh AirDefense data every 10 minutes.
- 5 minute refresh - Automatically refresh AirDefense data every 5 minutes.
- 1 minute refresh - Automatically refresh AirDefense data every minute (default).

Log Level

The **Log Level** field allows you to select one of the following levels for AirDefense to create log entries:

- Fatal
- Error
- Warning
- Info
- Debug
- All.

Device Inactivity

You can define your own device inactivity rule by setting the **Last seen within** prior time values for the **First/Last Seen** network filter by selecting one of the following values:

- 5 minutes
- 10 minutes (default)
- 20 minutes
- 30 minutes
- 1 hour
- 12 hours
- 24 hours
- 72 hours.

For instance, if the **Device Inactivity** is set to 10 minutes, the **Last seen within** prior time values for the First/Last Seen network filter are set as follows:

- The 0 – 5 minutes option is selected
- The 5 – 10 minutes option is selected
- All other options are deselected.

When viewing devices in the **Network** tab, the row of any device that is considered inactive will have lighter text than active devices.

Copy MAC Formats

Copy MAC Formats allows you to specify the formats you can use when copying a MAC address for a device in ADSP. You may select any or all of the following formats:

- ff:ff:ff:ff:ff:ff
- ff-ff-ff-ff-ff-ff
- ffff.ffff.ffff
- ffffffff

Once set, when you copy a device's MAC address, you will have a choice of formats. Now, when you select **Copy MAC** from a device's right-click menu, a menu is displayed with the available formats for that MAC address.

```
00:a0:f8:bb:c5:69
00-a0-f8-bb-c5-69
00a0.f8bb.c569
00a0f8bbc569
```

Use Proxy to Access Appliance

You can specify that users must use a proxy to access your AirDefense server. Select the **Use a proxy to access the server** checkbox, then enter the IP address and port number of the server. If authentication is required to access the server, select the **Proxy requires authentication** checkbox, then supply the **Username** and **Password**.

You can specify that users must use a proxy to access your AirDefense appliance. To do so, you must know the IP address and port number of the appliance. If authentication is required to access the appliance, you must also know the username and password.

Network New Column Preferences




Note

This feature operates only on columns affected by a system refresh (the **Sensor**, **AP**, **Associated Clients**, **Associated BSS**, **Adopted APs**, **Severity**, **Floor**, and **Scope** columns). Columns displaying only device information that does not change are not affected.

When adding a new column to the **Network** tab, you can set the following default refresh preferences:

- User refresh is required to populate data in the column. You will have to refresh ADSP before the column data is populated in an added column.
- System will auto-refresh when columns are added. ADSP automatically populates the column data when a column is added.
- Don't show dialog in network tab again. The dialog window will not display.

These preferences are displayed as a dialog window, unless **Don't show dialog in network tab again** has been selected, whenever a new column is added to the **Network** tab. When the dialog window is displayed, you can change the auto refresh preferences.

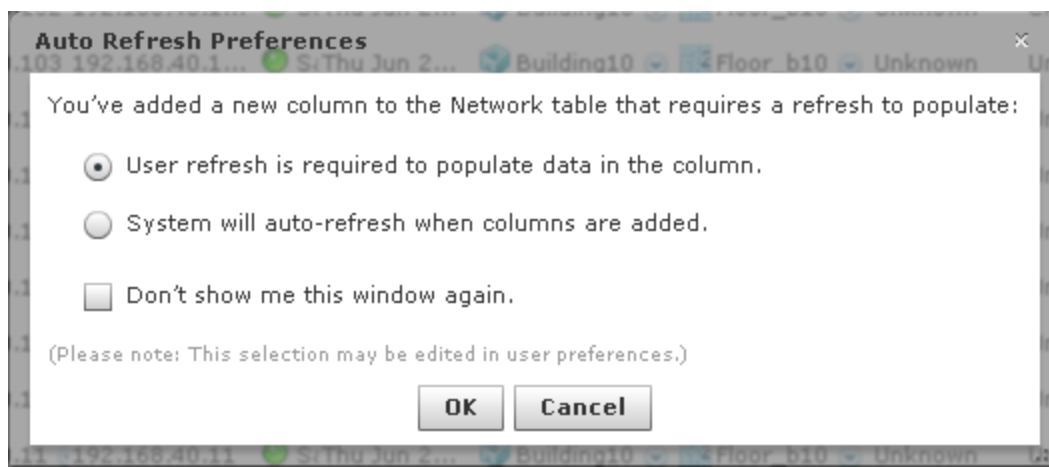


Click OK to save your changes.


Show Job Initiation Message Dialogs

You have option of displaying a message dialog when initiating certain jobs. The different options are:


- Show Data Poll Job Initiation Message Dialog - Displays the following dialog window when a data poll is manually initiated:

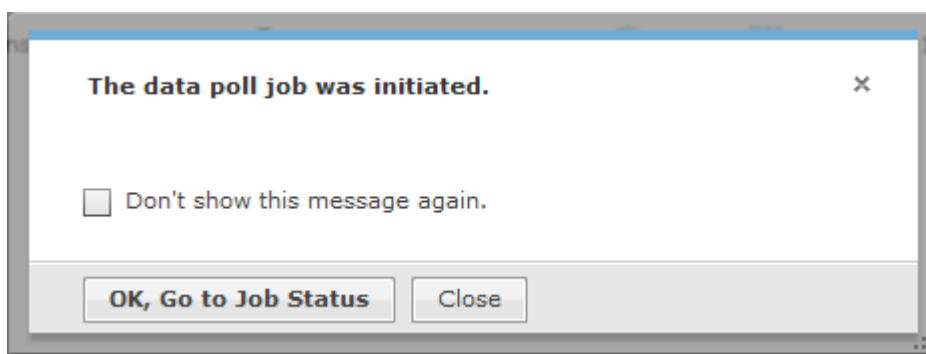


- Show Diagnostic Logs Job Initiation Message Dialog - Displays the following dialog window when manually retrieving the diagnostic log:

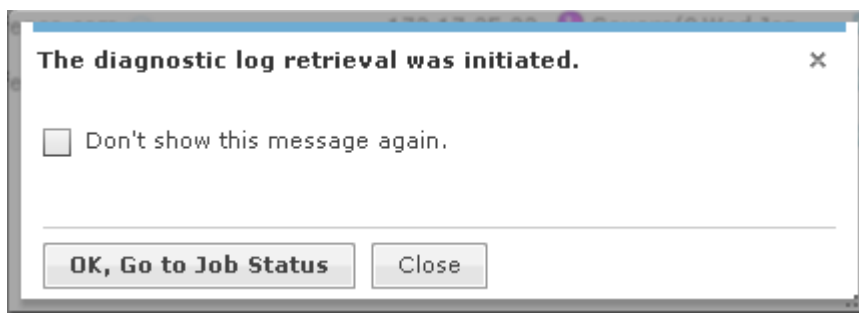

- Show Import/Discovery Job Initiation Message Dialog - Displays the following dialog window when an import/discover device is manually initiated:

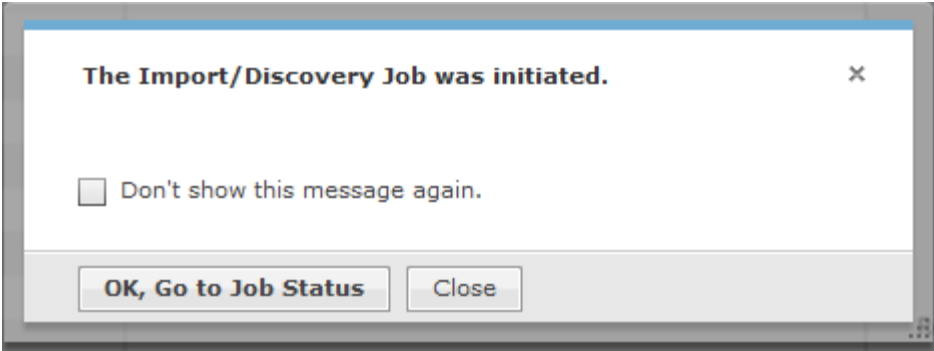

- Show Backup Download Job Initiation Message Dialog - Displays the following dialog window when a backup download job is manually initiated:

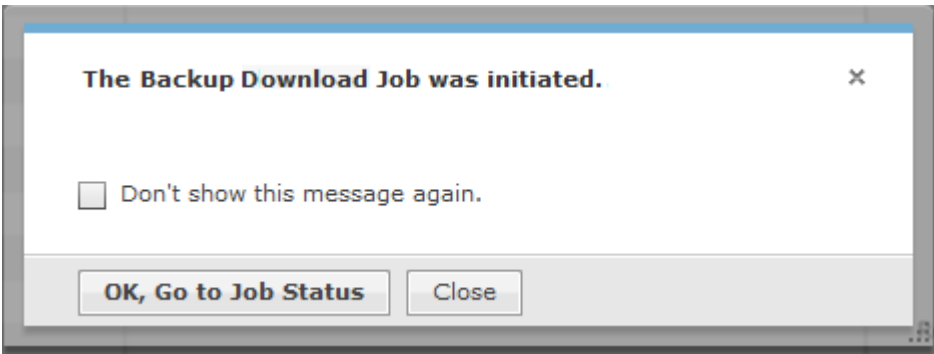

In all four cases, you are given the option of not showing the message again. You can also view the job status by clicking the **OK, Go to Job Status** button, or by navigating to **Configuration > Operational Management > Job Status** if you wish to view the job status later.

Job Status						
View Details Cancel Remove Export Status						
Type	Description	User	Status	Start Time	Finish Time	Progress
Data Poll	On Demand Data Poll	ccollier	Polled 1 devices	Tue May 15 2012 02...	Tue May 15 2012 02...	1/1
Device Configuration	On Demand Log Retri...	ccollier	Complete: successful	Tue May 15 2012 10...	Tue May 15 2012 10...	1/1
Data Poll	On Demand Data Poll	ccollier	Polled 1 devices	Tue May 15 2012 10...	Tue May 15 2012 10...	1/1
SNMP Discovery	New Scheduled Impor	ccollier	Polled 3 devices	Mon May 14 2012 0...	Mon May 14 2012 0...	3/3

Drop-down Menu Access


Drop-down menus are located throughout AirDefense. Whenever a device or network level is displayed, it has an associated drop-down menu. You can access the drop-down menu to get details on functions and properties. Click the drop-down menu button to display information on functions that operate on a single device or group of devices.

Devices Drop-down Menu

This section describes the available drop down menus for the different contexts in AirDefense.

APs Drop-down Menu

The APs drop-down menu contains functions that you can apply to the selected AP. Click the drop-down menu button  next to the AP name to display the drop-down menu.

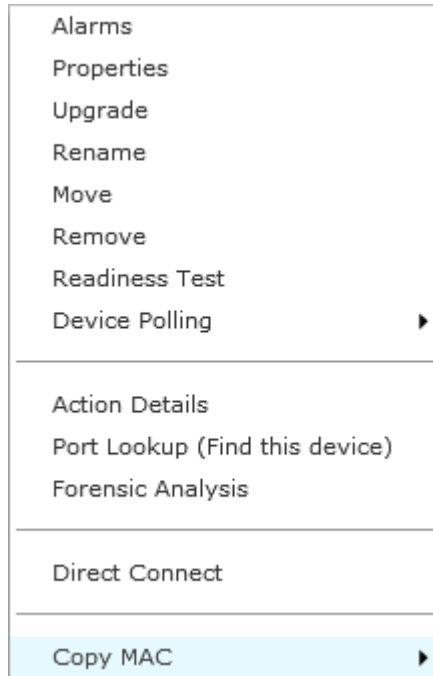


The drop-down menu for APs contains the following functions:

Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected AP. See Alarms
Properties	Opens the Properties overlay for the selected AP.
Upgrade	Upgrades the firmware for the selected AP.
Rename	Opens a dialog window to rename the selected AP.
Move	Moves the selected AP to another network level (floor). (See Move Devices for more information.)
Remove	Removes the selected AP from your network. (See Remove Devices for more information.)
Readiness Test	Validates that the AP is management ready (that is, it can be manage through ASDP). You are alerted of problem areas. (See Readiness Test on page 734 for more information.)
Device Polling	Conducts a compliance audit or a data poll on the selected AP.
Action Details	Displays a table listing specific actions that are occurring to devices seen on your WLAN.
Port Lookup	This feature is disabled unless you have a WIPS license.

Function	Description
Forensic Analysis	Opens the Forensic Analysis - Basic window for the specified .
Direct Connect	Accesses the user interface (UI) for the selected device.
Copy MAC	Copies the MAC address of the selected for later use.

APs - Properties

You can view the properties of an AP by clicking the drop-down menu button  and clicking Properties.

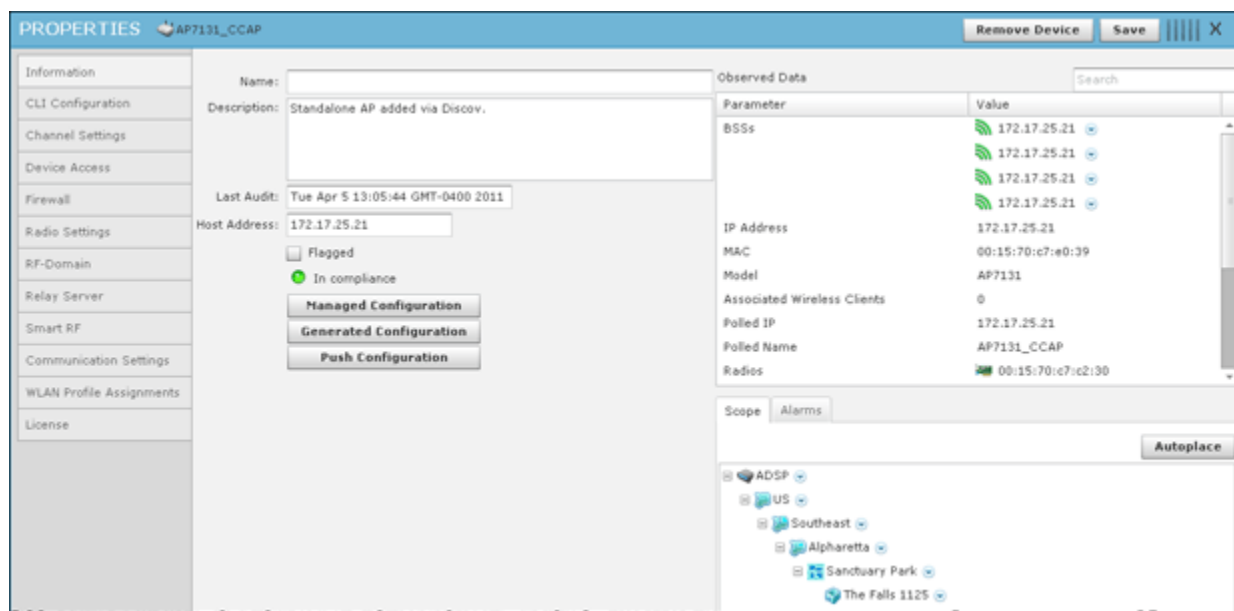

The following information is displayed:

Field	Description
Name	The name of the AP.
Description	A description of the AP.
Last Audit	The date and time of the last audit.
Host Address	IP address of the AP.
Flagged	Flag an AP that you want to bring attention to.

Field	Description
In compliance / Not in compliance	Status of the last compliance audit. Click the Managed Configuration button to display the configuration. Click the Generated Configuration button to display a generated configuration for a device. The generated configuration is the same configuration sent to a relay server to configure a device. Click the Push Configuration button to push the existing configuration out to the .
Observed Data	Data that AirDefense Services Platform observed about the . You can filter the observed data by entering significant text in the Search field.

The scope of the AP is shown under the **Scope** tab. The **Autoplace** button can be used to place the AP in a network folder using Auto-Placement rules.


Alarms related to the AP are shown in the **Alarms** tab. The **Actions** button can be used to perform one of the listed functions on a selected (highlighted) alarm.

Click the Delete Device button to remove a device from your network.

Click the Close buttonX to close the Properties overlay.

BSS Drop-down Menu

The BSS drop-down menu contains functions that you can apply to the selected BSS. Click the drop-down menu button  next to the BSS name to display the drop-down menu.

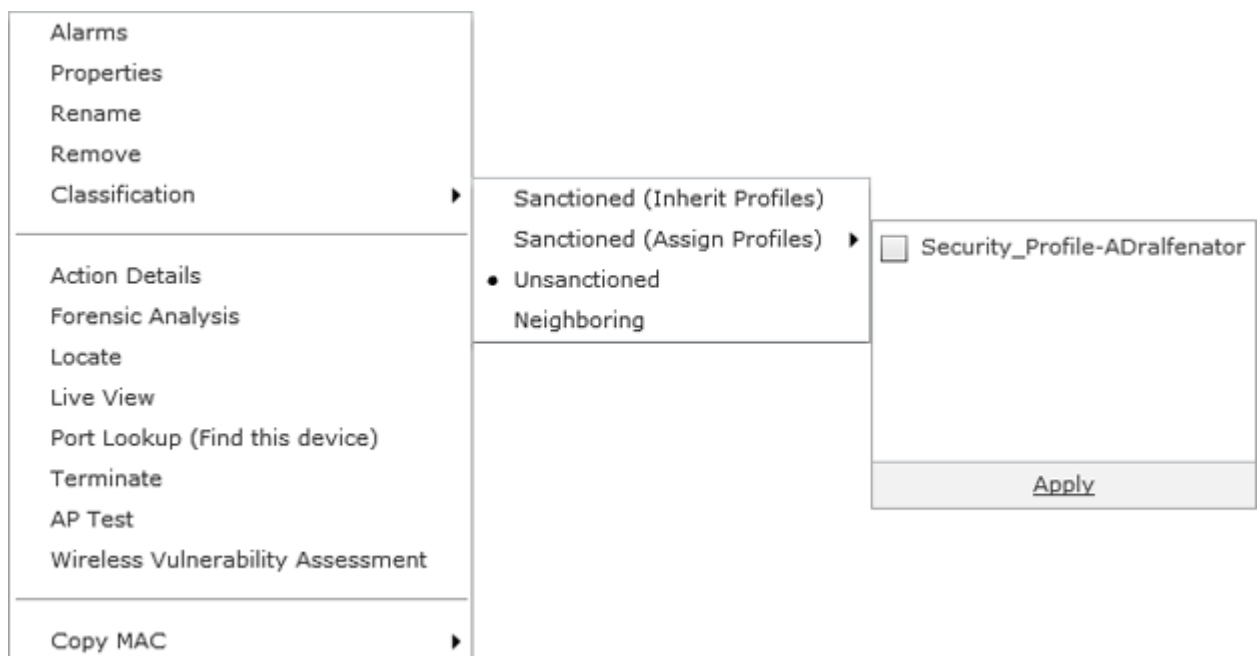


The drop-down menu for BSSs contains the following functions:

Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected BSS.
Properties	Opens the Properties overlay for the selected BSS.
Rename	Opens a dialog window to rename the selected BSS.
Remove	Removes the selected BSS from your network.
Classification	Classifies the BSS using one of the following classifications: • <i>Sanctioned (inherit)</i>—Classify the selected BSS as a sanctioned device that inherits its traits from wherever its location in the network tree. • <i>Sanctioned (override)</i>—Classify the selected BSS as a sanctioned device using traits that override the inherited traits. For example, a security profile can be applied to a BSS that overrides the inherited traits. When using this classification, select the profile and click the Apply link. • <i>Unsanctioned</i>—Classify the selected BSS as unsanctioned. • <i>Neighboring</i>—Classify the selected BSS as a neighboring device.
Action Details	Displays a table listing specific actions that are occurring to devices seen on your WLAN.
Forensic Analysis	Opens the Forensic Analysis-Basic on page 387 window for the specified BSS.
Locate	Opens the device Location tracking window so that you can quickly locate the selected BSS.
Live View	Opens the Live View on page 710 window for the selected BSS; allows you to analyze current WLAN activity on the device.
Port Lookup	Opens the Port Lookup on page 732 window where you can locate the physical port where the BSS is accessing your network.
Terminate	Opens the Termination options so that you can terminate the connection of the BSS to your network.
AP Test	Tracks network failures from an automated or manual AP connectivity test. (See Scheduled AP Tests on page 405 for more information.)
Wireless Vulnerability Assessment	Opens the Vulnerability Assessment window so that you can scan your wireless network for vulnerabilities. (See On-Demand Vulnerability Assessment on page 801 for more information.)
Copy MAC	Copies the MAC address of the selected BSS for later use.

BSS Properties

You can view the properties of a BSS by clicking the drop-down menu button  and clicking Properties.

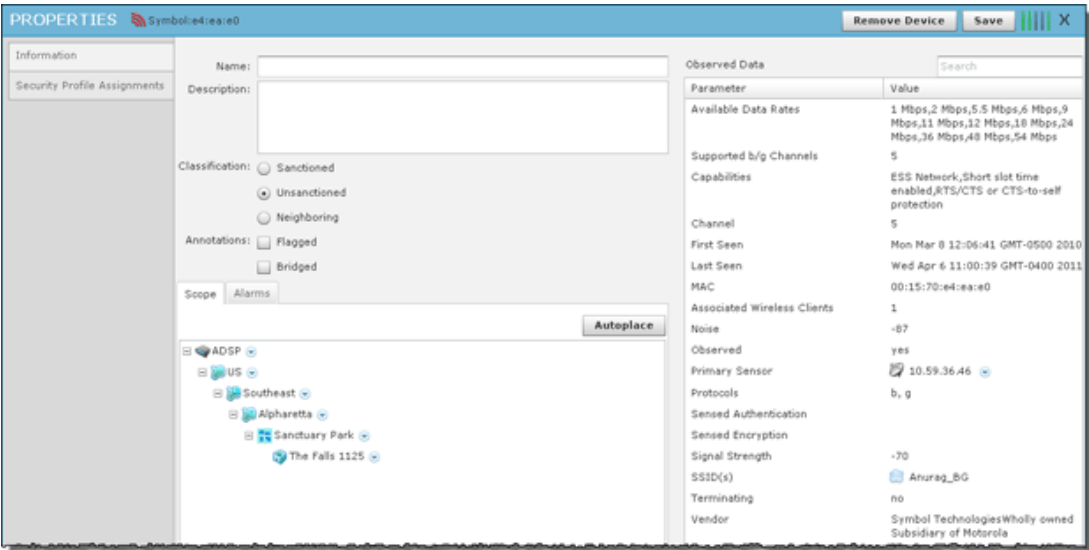

The following information is displayed:

Field	Description
Name	The name of the BSS.
Description	A description of the BSS.
Classification	The classification of the BSS: Sanctioned, Unsanctioned, or Neighboring.
Annotations	The annotations specified for the BSS: Flagged or Bridged.
Observed Data	Data that AirDefense observed about the BSS. You can filter the observed data by entering significant text in the Search field.

The scope of the BSS is shown under the **Scope** tab. The **Autoplace** button can be used to place the BSS in a network folder using Auto-Placement rules.

Alarms related to the BSS are shown in the **Alarms** tab. The **Actions** button can be used to perform one of the listed functions on a selected (highlighted) alarm.

You can view and/or override a BSS's configuration by selecting [Security Profiles](#) on page 506.

This configuration profile is located in the [Configuration Tab](#) on page 491.


If you make changes, click **Save** to save them.

Click the **Delete Device** button to delete a device from your network.

Click the **i** button to close the Properties overlay.


Wireless Clients Drop-down Menu

The Wireless Client drop-down menu contains functions that you can apply to the selected Wireless Client. Click the drop-down menu button  next to the Wireless Client name to display the drop-down menu.

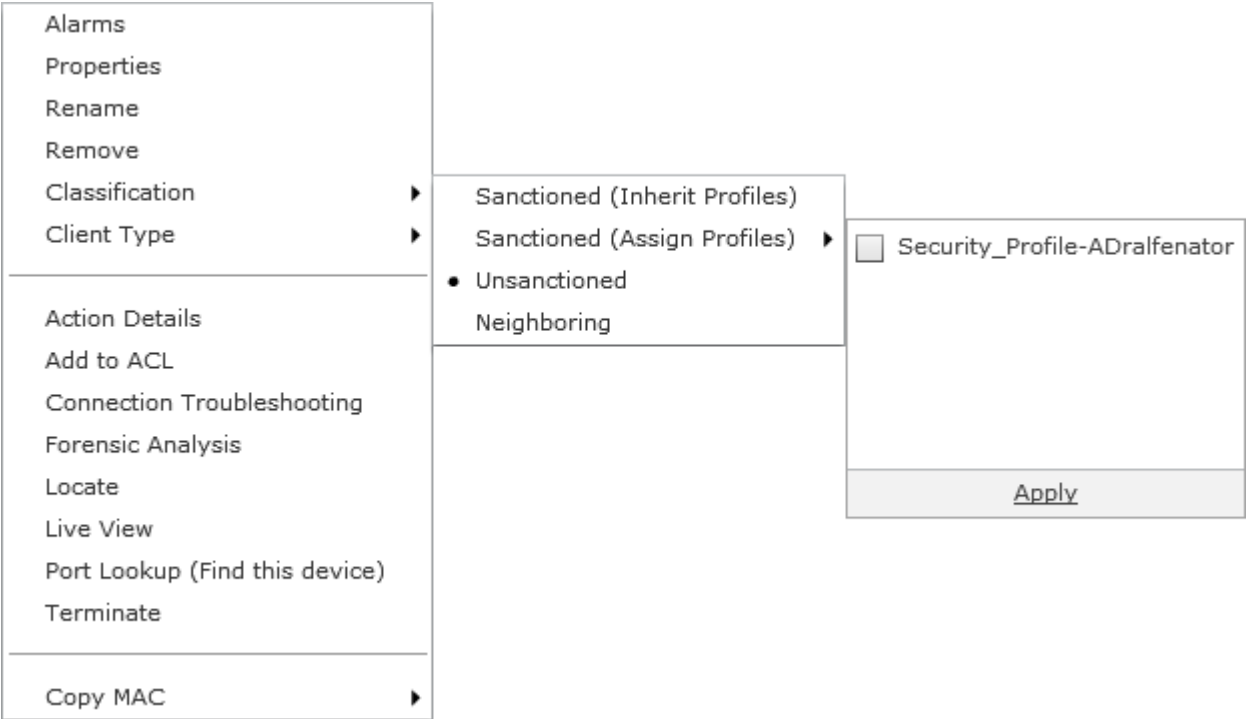

The drop-down menu for Wireless Clients contains the following functions:


Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected Wireless Client. See Alarms on page 476 for more information.
Properties	Opens the Properties overlay for the selected Wireless Client.
Rename	Opens a dialog window to rename the selected Wireless Client.
Remove	Removes the selected Wireless Client from your network. See Remove Devices on page 470 for more information.

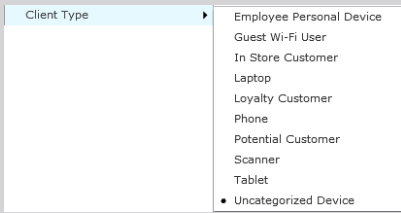Function	Description
Classification	Classifies the Wireless Client using one of the following classifications: • <i>Sanctioned (inherit)</i>— Classify the selected Wireless Client as a sanctioned device that inherits its traits from wherever its location in the network tree. • <i>Sanctioned (override)</i>— Classify the selected Wireless Client as a sanctioned device using traits that override the inherited traits. For example, a security profile can be applied to a Wireless Client that overrides the inherited traits. When using this classification, select the profile and click the Apply link. • <i>Unsanctioned</i>— Classify the selected Wireless Client as unsanctioned. • <i>Neighboring</i>— Classify the selected Wireless Client as a neighboring device.
Client Type	Client Type appears in the menu only when a Wireless Client is sanctioned. As default, Wireless Clients are assumed to be laptops, displaying a laptop icon. This menu item allows you to differentiate phones and hand-held devices from laptops in ADSP. • Employee Personal Device  • Guest Wi-Fi User  • In Store Customer  • Laptop  • Loyalty Customer  • Phone  • Potential Customer  • Scanner  • Tablet  • Uncategorized Device   • Select the appropriate device to represent a Wireless Client and use its icon for the selected Wireless Client throughout the GUI.
Action Details	Displays a table listing specific actions that are occurring to devices seen on your WLAN.
Add to ACL	Adds the selected Wireless Client to the Access Control List (ACL).

Function	Description
Forensic Analysis	Opens the Forensic Analysis-Basic on page 387 window for the specified Wireless Client.
Locate	Opens the Floor Plan and adds the Wireless Client to the Location Tracking list so that you can quickly locate the selected Wireless Client.
Live View	Opens the Live View on page 710 window for the selected Wireless Client; allows you to analyze current WLAN activity on the device.
Port Lookup	Opens the Port Lookup on page 732 window where you can locate the physical port where the Wireless Client is accessing your network.
Terminate	Opens the Termination options so that you can terminate the connection of the Wireless Client to your network. (See Terminate on page 748 for more information.)
Copy MAC	Copies the MAC address of the selected Wireless Client for later use.

Wireless Clients - Properties

You can view the properties of a Wireless Client by clicking the drop-down menu button  and clicking **Properties**.

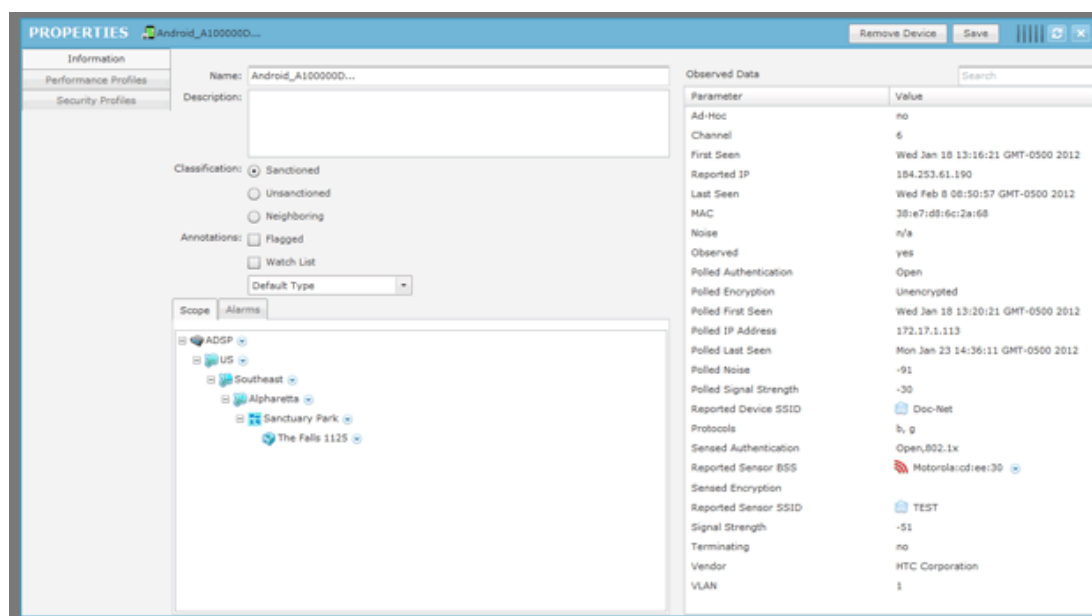

The following information is displayed:

Field	Description
Name	The name of the Wireless Client.
Description	A description of the Wireless Client.

Field	Description
Classification	The classification of the Wireless Client: Sanctioned, Unsanctioned, or Neighboring.
Annotations	The annotations specified for the Wireless Client: Flagged or Watch List. If the Wireless Client is a sanctioned device, a drop-down menu is added where you can designate the Wireless Client as one of the Client Types discussed previously.
Observed Data	Data that AirDefense Services Platform observed about the Wireless Client. You can filter the observed data by entering significant text in the Search field.

The scope of the Wireless Client is shown under the **Scope** tab.

Alarms related to the Wireless Client are shown in the **Alarms** tab. The **Actions** button can be used to perform one of the listed functions on a selected (highlighted) alarm.

You can view and/or override a Wireless Client's configuration by selecting:

- [Performance Profiles](#) on page 535
- [Security Profiles](#) on page 506.

These configuration settings (or profiles) are all located in the [Configuration Tab](#) on page 491.


If you make changes, click **Save** to save them.

Click the **Delete Device** button to delete a device from your network.

Click the **Close** button - X to close the **Properties** overlay.

Sensors Menu

The Sensors drop-down menu contains functions that you can apply to the selected Sensor. Click the drop-down menu button  next to the Sensor name to display the drop-down menu.

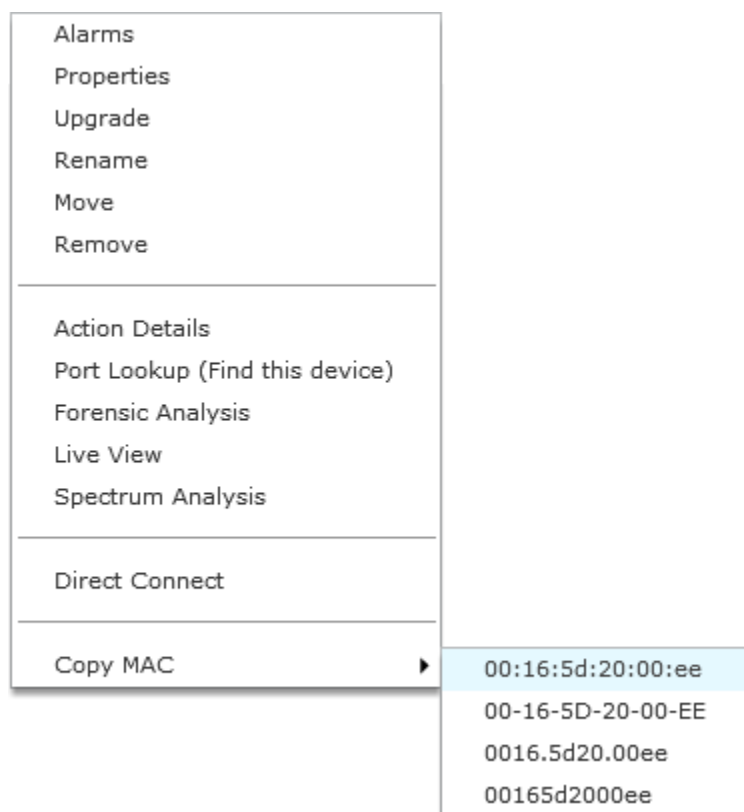


The drop-down menu for Sensors contains the following functions:

Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected Sensor.
Properties	Opens the Properties overlay for the selected Sensor.
Upgrade	Upgrades the firmware for the selected Sensor.
Rename	Opens a dialog window to rename the selected Sensor.
Move	Moves the selected Sensor to another network level (floor). (See Move Devices on page 470 for more information.)
Remove	Removes the selected Sensor from your network. See Remove Devices on page 470 for more information.
Action Details	Displays a table listing specific actions that are occurring to devices seen on your WLAN.
Port Lookup	This feature is disabled unless you have a WIPS license.
Forensic Analysis	Opens the Forensic Analysis-Basic on page 387 window for the specified Sensor.
Live View	Opens the Live View on page 710 window for the selected Sensor; allows you to analyze current WLAN activity on the device.

Function	Description
Spectrum Analysis	Accesses Spectrum View to identify and locate interference sources on your wireless network. (See Spectrum Analysis on page 737 for more information.)
Direct Connect	Accesses the user interface (UI) for the selected Sensor.
Copy MAC	Copies the MAC address of the selected Sensor for later use.

Sensor - Properties

You can view the properties of a Sensor by clicking the drop-down menu button  and clicking Properties.

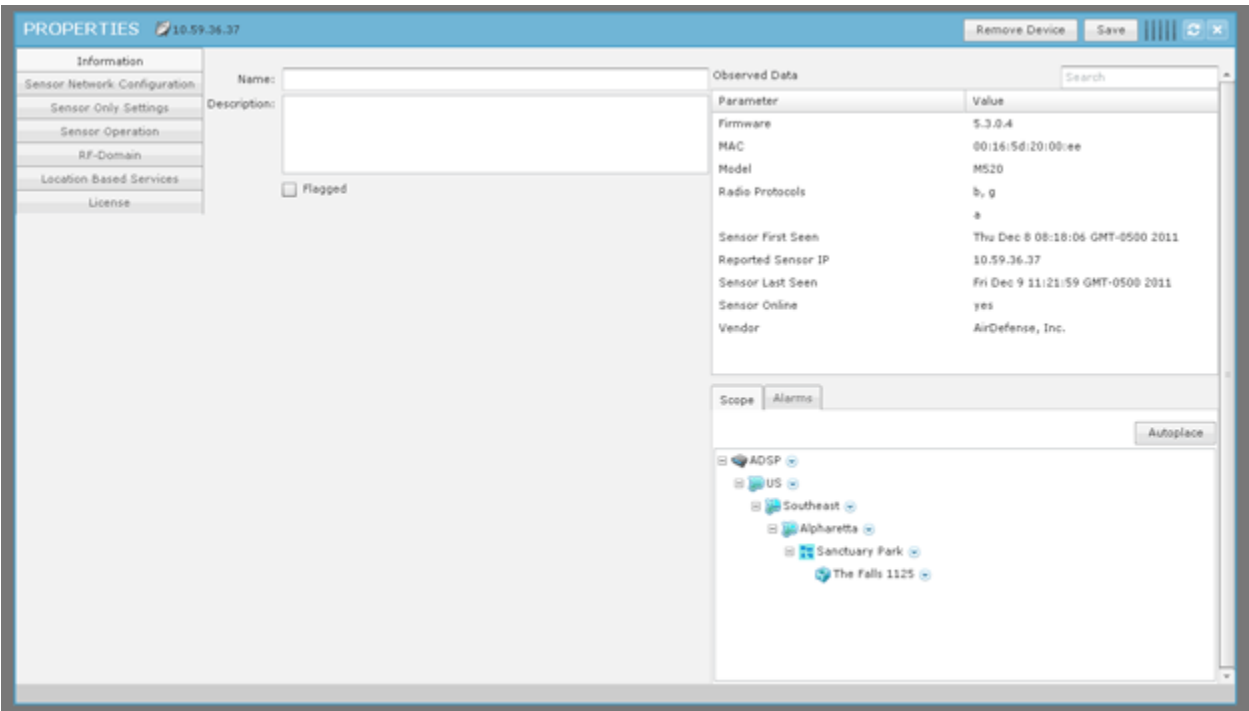

The following information is displayed:

Field	Description
Name	The name of the Sensor.
Description	A description of the Sensor.
Host Address	The IP address of the host.
Flagged	Flag a Sensor that you want to bring attention to.
Observed Data	Data that AirDefense Services Platform observed about the Sensor. You can filter the observed data by entering significant text in the Search field.

The scope of the Sensor is shown under the Scope tab. The Autoplace button can be used to place the Sensor in a network folder using Auto-Placement rules.

Alarms related to the Sensor are shown in the Alarms tab. The Actions button can be used to perform one of the listed functions on a selected (highlighted) alarm.

You can view and/or override a Sensor's configuration by selecting:

- [Sensor Network Configuration](#) on page 697
- [Sensor Only Settings](#) on page 623
- [Sensor Operation](#) on page 627
- [Location Based Services](#) on page 606

These configuration settings (or profiles), except Sensor Network Configuration, are all located in the [Configuration Tab](#) on page 491.


If you make changes, click **Save** to save them.

Click the **Delete Device** button to delete a device from your network.

Click the **Close** button—X to close the Properties overlay.

Sensor Network Configuration

Sensor Network Configuration is used to configure network settings for Sensors that are connected to your AirDefense Services Platform appliance.

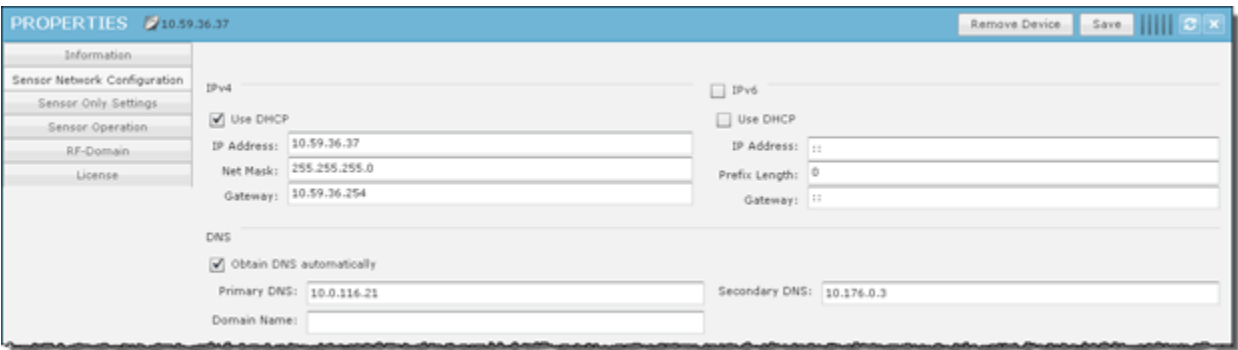

There are three configurable sections:

- [IPv4](#) on page 697
- [IPv6](#) on page 698
- [DNS](#) on page 698

IPv4

Field	Description
Use DHCP	Select the checkbox to enable DHCP, short for Dynamic Host Configuration Protocol, which is a protocol for assigning dynamic IP addresses to devices in a network.
IP Address	Manually enter a static IP address for the Sensor.
Net Mask	Manually enter the subnet to which the Sensor belongs.
Gateway	Manually assign a valid Gateway IP address to the Sensor.

IPv6

Select the IPv6 checkbox to activate the IPv6 options.

Field	Description
Use DHCP	Select the checkbox to enable DHCP.
IP Address	Manually enter a static IP address for the Sensor.
Prefix Length	Specify the static prefix length as a decimal value.
Gateway	Manually assign a valid static Gateway IP address to the sensor.

DNS

Field	Description
Obtain DNS Automatically	Select the checkbox automatically obtain DNS information.
Primary DNS	Manually enter an IP address for the primary DNS server.
Secondary DNS	Manually enter an IP address for the secondary DNS server.
Domain Name	Manually enter a domain name for your DNS server.

Wireless Switch Drop-down Menu

The Wireless Switch drop-down menu contains functions that you can apply to the selected Wireless Switch. Click the drop-down menu button  next to the Wireless Switch name to display the drop-down menu.

Alarms

Properties

Upgrade

Rename

Move

Remove

Readiness Test

Device Polling

Action Details

Port Lookup (Scan all MACs)

Forensic Analysis

Direct Connect

Copy MAC

Audit


Data Poll

The drop-down menu for Wireless Switches contains the following functions:

Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected Wireless Switch. See Alarms on page 476 for more information.
Properties	Opens the Properties overlay for the selected Wireless Switch.
Upgrade	Upgrades the firmware for the selected Wireless Switch.
Rename	Opens a dialog window to rename the selected Wireless Switch.
Move	Moves the selected Wireless Switch to another network level (floor). See Move Devices on page 470 for more information.
Remove	Removes the selected Wireless Switch from your network. See Remove Devices on page 470 for more information.
Readiness Test	Validates that the Wireless Switch is management ready (that is, it can be managed through ASDP). You are alerted of problem areas. (See Readiness Test on page 734 for more information.)
Device Polling	Conducts a compliance audit or a data poll on the selected Wireless Switch.
Action Details	Displays a table listing specific actions that are occurring to devices seen on your WLAN.
Port Lookup	Scans MAC Addresses to view a list of switch ports. See Port Lookup on page 732 for more information.
Forensic Analysis	Opens the Forensic AnalysisBasic window for the specified Wireless Switch. See Forensic Analysis-Basic on page 387 for more information.
Direct Connect	Accesses the user interface (UI) for the selected Wireless Switch.
Copy MAC	Copies the MAC address of the selected Wireless Switch for later use.

Wireless Switch - Properties

You can view the properties of a Wireless Switch by clicking the drop-down menu button  and clicking Properties.

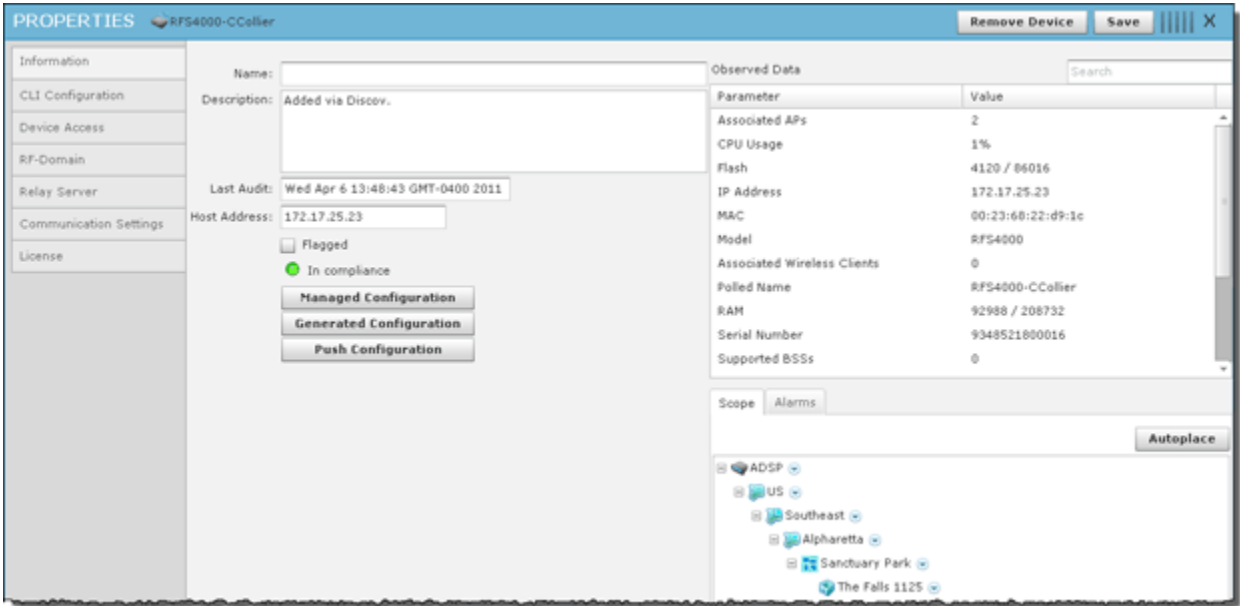

The following information is displayed:

Field	Description
Name	The name of the Wireless Switch.
Description	A description of the Wireless Switch.
Last Audit	The date and time of the last audit.
Host Address	The IP address of the Wireless Switch.
Flagged	Flag a Wireless Switch that you want to bring attention to.
In compliance / Not in compliance	Status of the last compliance audit. Click the Managed Configuration button to display the Wireless Switch configuration. Click the Generated Configuration button to display a generated configuration for a Wireless Switch. The generated configuration is the same configuration sent to a relay server to configure a Wireless Switch. Click the Push Configuration button to push the existing configuration out to the Wireless Switch.
Observed Data	Data that AirDefense Services Platform observed about the Wireless Switch. You can filter the observed data by entering significant text in the Search field.

The scope of the Wireless Switch is shown under the Scope tab. The Autoplace button can be used to place the Wireless Switch in a network folder using Auto-Placement rules.

Alarms related to the Wireless Switch are shown in the Alarms tab. The Actions button can be used to perform one of the listed functions on a selected (highlighted) alarm.


If you make changes, click **Save** to save them.

Click the **Delete Device** button to delete a device from your network.

Click the **Close** button X to close the Properties overlay.

Wired Switch Drop-down Menu

The Wired Switch drop-down menu contains functions that you can apply to the selected Wired Switch. Click the drop-down menu button  next to the Wired Switch name to display the drop-down menu.

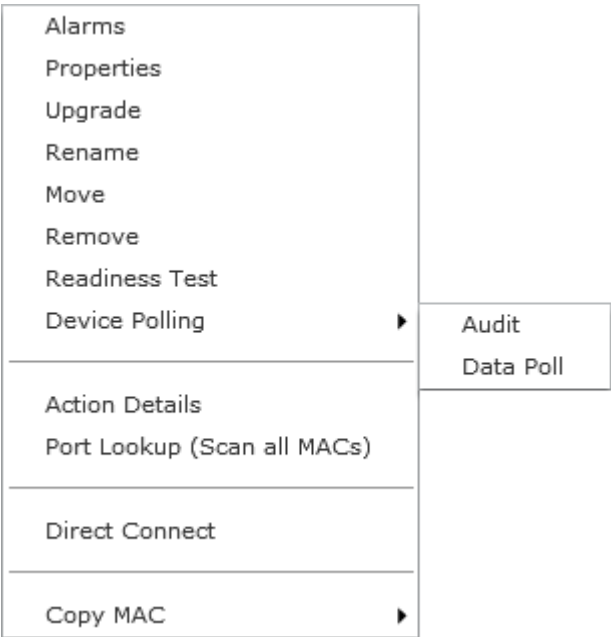

The drop-down menu for Wired Switches contains the following functions:

Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected Wired Switch. See Alarms on page 476 for more information.
Properties	Opens the Properties overlay for the selected Wired Switch.
Upgrade	Upgrades the firmware for the selected Wired Switch.
Rename	Opens a dialog window to rename the selected Wired Switch.
Move	Moves the selected Wired Switch to another network level (floor). See Move Devices on page 470 for more information.
Remove	Removes the selected Wired Switch from your network. See Remove Devices on page 470 for more information.
Readiness Test	Validates that the Wired Switch is management ready (that is, it can be manage through ASDP). You are alerted of problem areas. (See Readiness Test on page 734 for more information.)


Function	Description
Device Polling	Conducts a compliance audit or a data poll on the selected Wired Switch.
Action Details	Displays a table listing specific actions that are occurring to devices seen on your WLAN.
Port Lookup (Scan all MACs)	Scans MAC Addresses to view a list of switch ports. See Port Lookup on page 732 for more information.
Direct Connect	Access the user interface (UI) for the selected Wired Switch.
Copy MAC	Copies the MAC address of the selected Wired Switch for later use.

Wired Switch - Properties

You can view the properties of a Wired Switch by clicking the drop-down menu button



and clicking Properties.

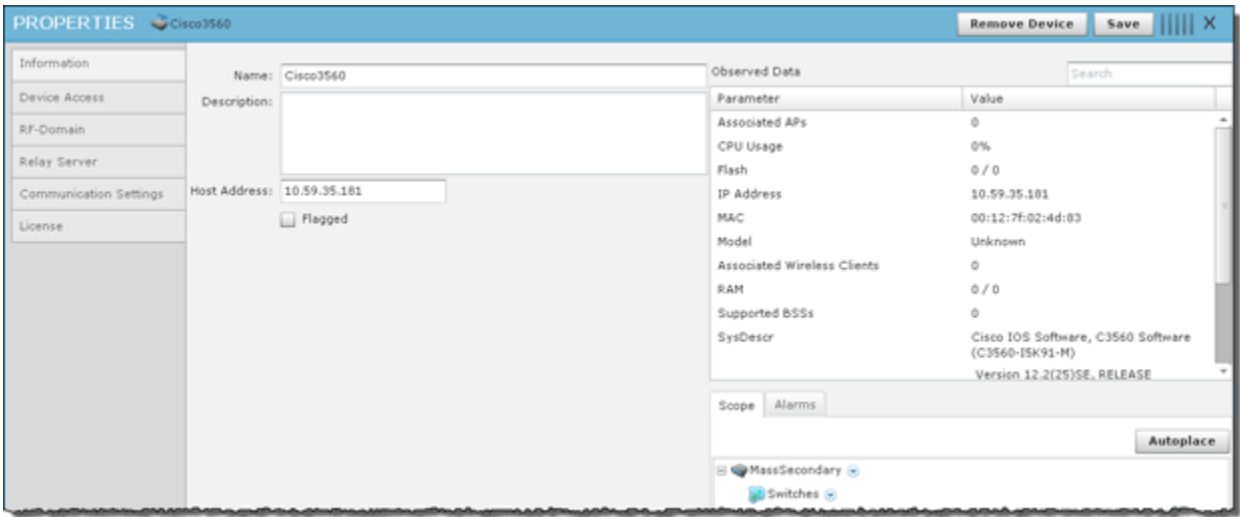

The following information is displayed:

Field	Description
Name	The name of the Wired Switch.
Description	A description of the Wired Switch.
Host Address	The IP address of the Wired Switch.
Flagged	Flag a Wired Switch that you want to bring attention to.
Observed Data	Data that AirDefense Services Platform observed about the Wired Switch. You can filter the observed data by entering significant text in the Search field.

The scope of the Wired Switch is shown under the Scope tab. The Autoplace button can be used to place the Wired Switch in a network folder using Auto-Placement rules.

Alarms related to the Wired Switch are shown in the Alarms tab. The Actions button can be used to perform one of the listed functions on a selected (highlighted) alarm.


If you make changes, click **Save** to save them.

Click the **Delete Device** button to delete a device from your network.

Click the **Close** button—X to close the Properties overlay.

Unknown Devices Drop-down Menu

The Unknown Devices drop-down menu contains functions that you can apply to the selected Unknown Device. Click the drop-down menu button  next to the Unknown Device name to display the drop-down menu.

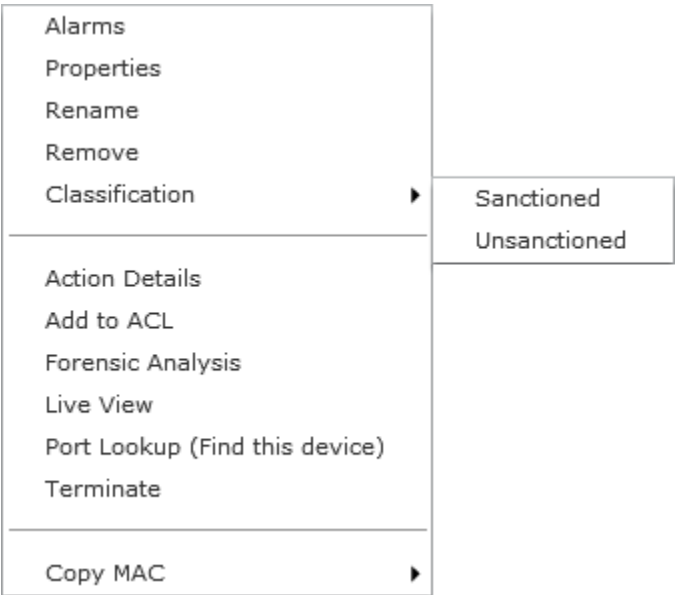


The drop-down menu for unknown devices contains the following functions:

Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected unknown device. See Alarms on page 476 for more information.
Properties	Opens the Properties overlay for the selected unknown device.
Rename	Opens a dialog window to rename the selected unknown device.
Remove	Removes the selected unknown device from your network. See Remove Devices on page 470 for more information.
Classification	Classifies the unknown device as Sanctioned or Unsanctioned.
Action Details	Displays a table listing specific actions that are occurring to devices seen on your WLAN.

Function	Description
Add to ACL	Adds the selected Unknown Device to the Access Control List (ACL).
Forensic Analysis	Opens the Forensic Analysis - Basic window for the specified unknown device.
Live View	Opens the Live View window for the selected unknown device; allows you to analyze current WLAN activity on the device.
Port Lookup	Opens the Port Lookup window where you can locate the physical port where the Unknown Device is accessing your network.
Terminate	Accesses the Terminate options so that you can terminate the connection of the Unknown Device to your network.
Copy MAC	Copies the MAC address of the selected unknown device for later use.

Unknown Devices - Properties

You can view the properties of an Unknown Device by clicking the drop-down menu button  and clicking Properties.

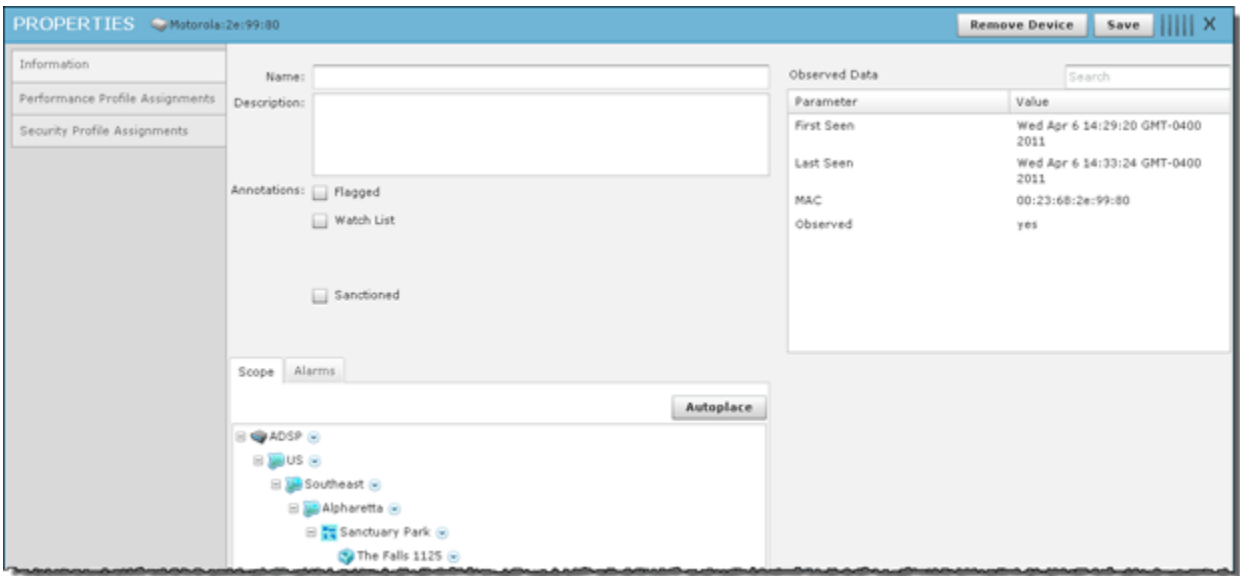

The following information is displayed:

Field	Description
Name	The name of the Unknown Device.
Description	A description of the Unknown Device.

Field	Description
Annotations	The annotations specified for the Unknown Device: Flagged, Watch List, or Sanctioned.
Observed Data	Data that AirDefense Services Platform observed about the Unknown Device. You can filter the observed data by entering significant text in the Search field.

The scope of the Unknown Device is shown under the Scope tab. The **Autoplace** button can be used to place the Unknown Device in a network folder using Auto-Placement rules.

Alarms related to the Unknown Device are shown in the **Alarms** tab. The **Actions** button can be used to perform one of the listed functions on a selected (highlighted) alarm.

You can view and/or override a Unknown Device's configuration by selecting:

- [Performance Profiles Assignments](#)
- [Security Profiles Assignments.](#)

These configuration settings (or profiles) are all located in the [Configuration Tab](#) on page 491.

If you make changes, **Save** to save them.

Click the **Delete Device** button to delete a device from your network.

Click the **Close** button X to close the Properties overlay.

WLSE Drop-down Menu

The WLSE drop-down menu contains functions that you can apply to the selected WLSE. Click the drop-down menu button  next to the WLSE name to display the drop-down menu.




The drop-down menu for WLSE devices contains the following functions:

Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected WLSE device. See Alarms on page 476 for more information.
Properties	Opens the Properties overlay for the selected WLSE device.
Rename	Opens a dialog window to rename the selected WLSE device.
Move	Moves the selected WLSE device to another network level (floor). See Move Devices on page 470 for more information.
Remove	Removes the selected WLSE device from your network. See Remove Devices on page 470 for more information. i
Readiness Test	Validates that the WLSE device is management ready (that is, it can be manage through ASDP). You are alerted of problem areas. (See Readiness Test on page 734 for more information.)
Action Details	Displays a table listing specific actions that are occurring to devices seen on your WLAN.
Direct Connect	Accesses the user interface (UI) for the selected WLSE device.
Copy MAC	Copies the MAC address of the selected WLSE device for later use.

WLSE - Properties

You can view the properties of a WLSE by clicking the drop-down menu button  and clicking Properties.

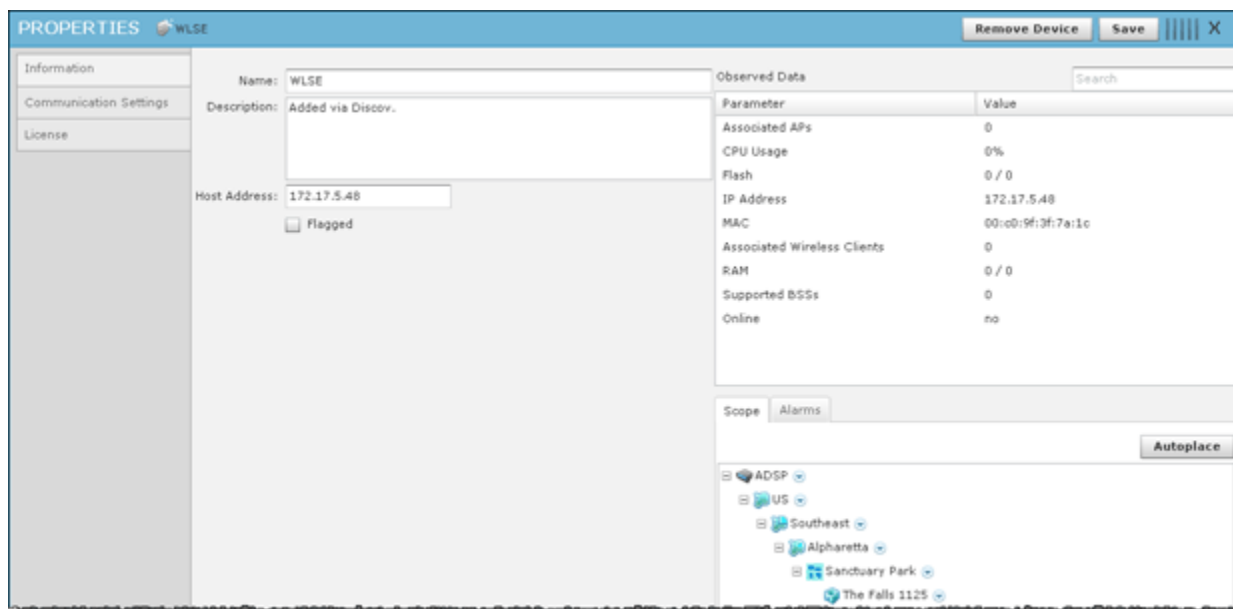

The following information is displayed:

Field	Description
Name	The name of the WLSE.
Description	A description of the WLSE.
Host Address	The IP address of the WLSE.
Flagged	Flag a WLSE that you want to bring attention to.
Observed Data	Data that AirDefense Services Platform observed about the WLSE. You can filter the observed data by entering significant text in the Search field.

The scope of the WLSE is shown under the Scope tab. The **Autoplace** button can be used to place the WLSE in a network folder using Auto-Placement rules.

Alarms related to the WLSE are shown in the **Alarms** tab. The **Actions** button can be used to perform one of the listed functions on a selected (highlighted) alarm.

You can view and/or override an WLSE's configuration by selecting Communication Settings. These configuration settings are all located in the [Configuration Tab](#) on page 491.

You can display valid licenses for a WLSE by selecting **License**.


If you make changes, click **Save** to save them.

Click the **Delete Device** button to delete a device from your network.

Click the **i** button X to close the Properties overlay.

AirWave Switch Drop Down Menu

The AirWave switch drop-down menu contains functions that you can apply to the selected AirWave switch. Click the drop-down menu button  next to the AirWave switch name to display the drop-down menu.

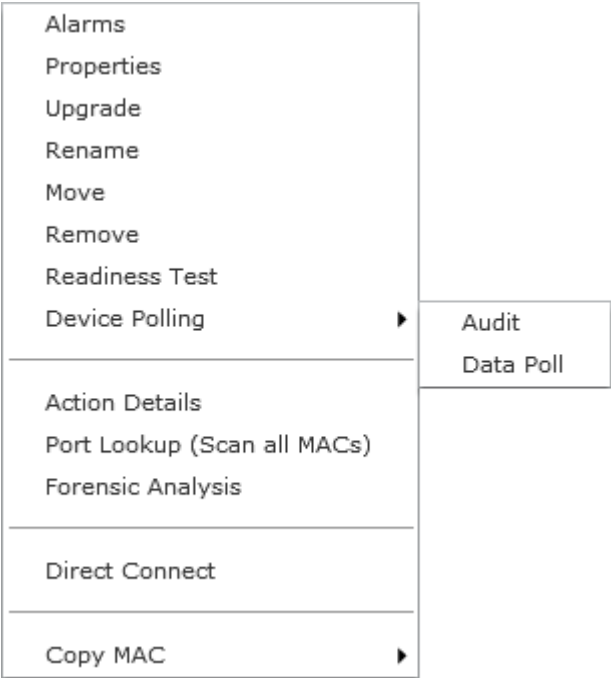


The drop-down menu for AirWave devices contains the following functions:

Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected AirWave device. See Alarms on page 476 for more information.
Properties	Opens the Properties overlay for the selected AirWave device.
Upgrade	Upgrade the firmware for the selected AirWave switch.
Rename	Opens a dialog window to rename the selected AirWave device.
Move	Moves the selected AirWave device to another network level (floor). See Move Devices on page 470 for more information.
Remove	Removes the selected AirWave device from your network. See Remove Devices on page 470 for more information.
Readiness Test	Validates that the AirWave device is management ready (that is, it can be manage through ASDP). You are alerted of problem areas. See Readiness Test on page 734 for more information.
Device Polling	Conduct a compliance audit on the selected AirWave switch.

Function	Description
Action Details	Displays a table listing specific actions that are occurring to devices seen on your WLAN.
Port Lookup (Scan all MACs)	Scan MAC addresses to view a list of switch ports. See Port Lookup for more information.
Forensic Analysis	Opens the Forensic Analysis—Basic window for the specified AirWave switch. See Forensic Analysis-Basic on page 387 for more information.
Direct Connect	Accesses the user interface (UI) for the selected AirWave device.
Copy MAC	Copies the MAC address of the selected AirWave device for later use.

AirWave Switch - Properties

You can view the properties of an AirWave switch by clicking the drop-down menu button  and clicking Properties.

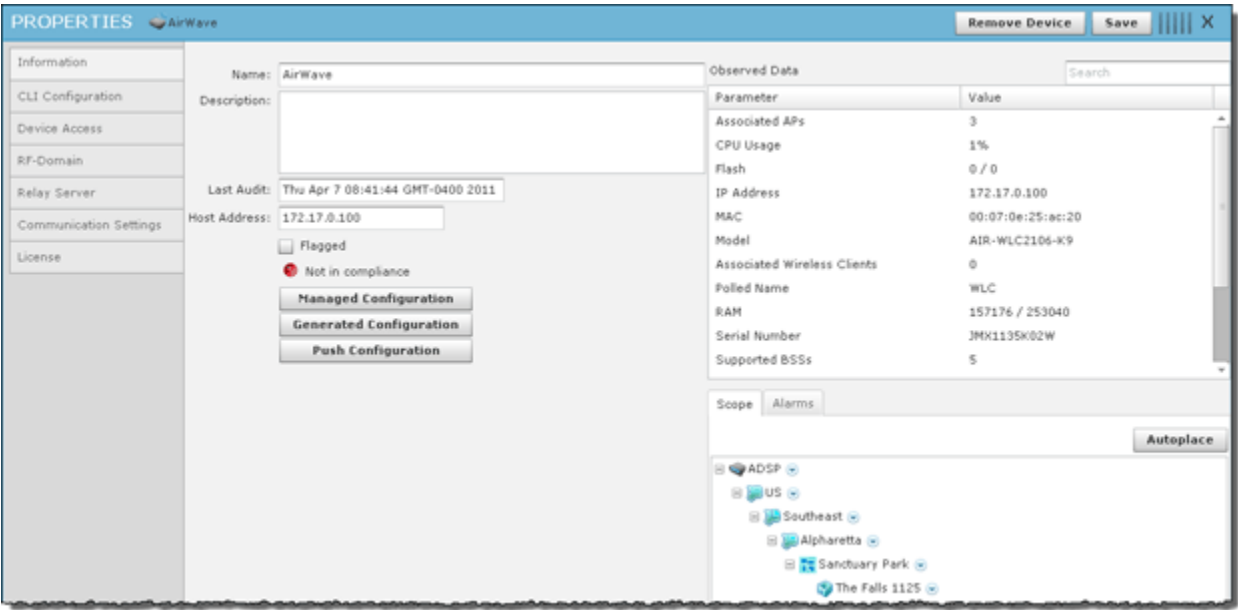

The following information is displayed:

Field	Description
Name	The name of the AirWave Switch.
Description	A description of the AirWave Switch.
Last Audit	The date and time of the last audit.
Host Address	The IP address of the AirWave Switch.
Flagged	Flag a AirWave Switch that you want to bring attention to.

Field	Description
In compliance / Not in compliance	Status of the last compliance audit. Click the Managed Configuration button to display the AirWave Switch configuration. Click the Generated Configuration button to display a generated configuration for a AirWave Switch. The generated configuration is the same configuration sent to a relay server to configure a AirWave Switch. Click the Push Configuration button to push the existing configuration out to the AirWave Switch.
Observed Data	Data that AirDefense Services Platform observed about the AirWave Switch. You can filter the observed data by entering significant text in the Search field.

The scope of the AirWave Switch is shown under the Scope tab. The Autoplace button can be used to place the AirWave Switch in a network folder using Auto-Placement rules.

Alarms related to the AirWave Switch are shown in the Alarms tab. The Actions button can be used to perform one of the listed functions on a selected (highlighted) alarm.

If you make changes, click **Save** to save them.

Click the **Delete Device** button to delete a device from your network.

Click the **Close** button X to close the Properties overlay.


Device Functions Requiring More Explanation

The device functions discussed here are drop-down menu functions that operate on devices and require more details on how to use them. Depending on the device, these functions may or may not appear in the drop-down menu. They are:

- Live View
- Locate
- Port Lookup
- Readiness Test
- Spectrum Analysis
- Terminate.


Live View

AirDefense gives you a Live View of the devices operating in your wireless LAN. Live View capability exists throughout the GUI, wherever a device icon appears. You access Live View by clicking on the drop-down menu button of the device  and selecting Live View, which automatically limits the data to the specific device you choose.

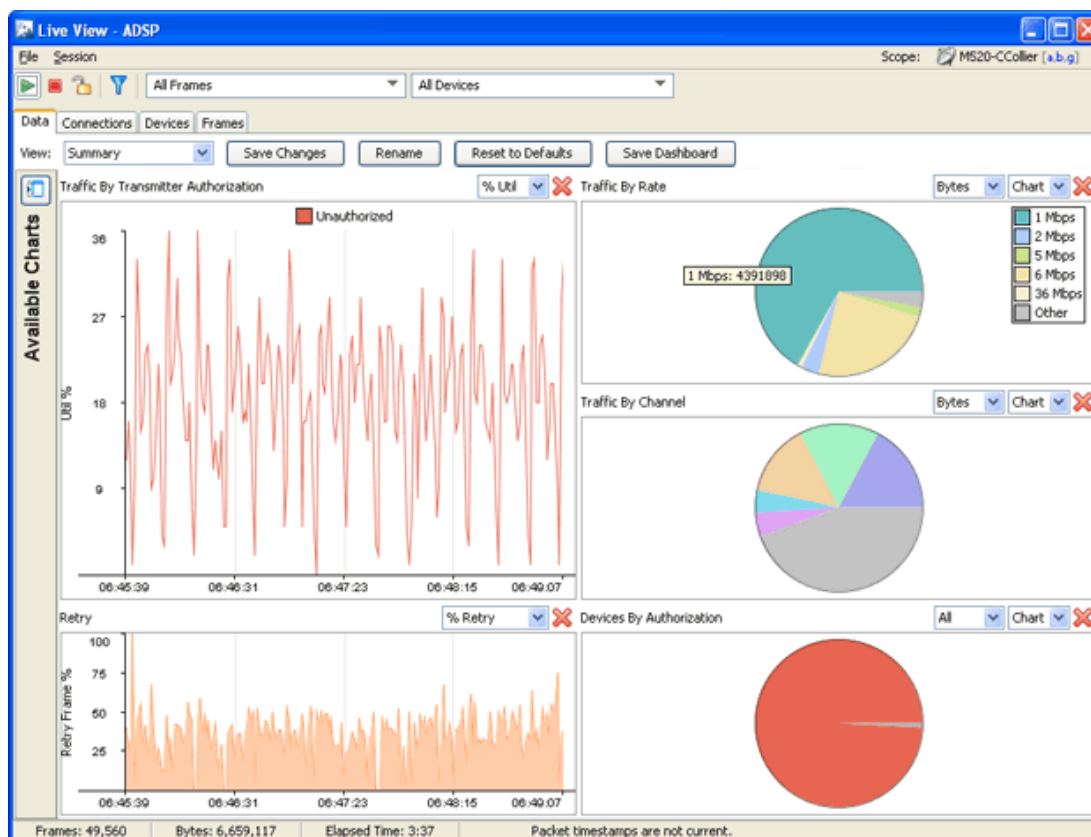

Only five Live View sessions can be running at one time. If you attempt to open more than five sessions, an error displays. A Live View window will open but the monitoring session will not start.

You cannot run Spectrum Analysis and Live View at the same time on any one sensor. If Spectrum Analysis is running and you attempt to start a Live Monitoring session on the same sensor, the following warning displays.

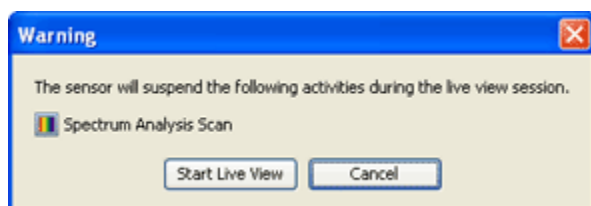


You can either start the monitoring session and suspend the Spectrum Analysis, or cancel the Live View session.

Live View consists of four main categories of information:

- Data
- Connections
- Devices
- Frames.

Common Area


 
The common area holds the menus and buttons that are common to the Live View window. It is located at the top of the window.



Menus

The following menu items are available:

Menu	Option	Description
File	Open	Opens a captured frame file for viewing. See Frame Capture Analysis on page 386 for more information.
File	Open...	
File	Save...	
File	Settings...	
File	Edit Filters...	
File	Schedule Frame Capture...	
File	Reduced Bandwidth Interface	
File	Run in Background	
File	Close	
	Save	Opens the Save Frame Capture popup window where you can save the temporary capture file to a permanent file on the server or to a file on your workstation. (See Frame Capture on page 726 for more information.)
	Settings	Opens the Live View Settings popup window where you can set options for your Live View sessions. (See Live View Settings on page 714 for more information.)
	Edit Filters	Opens the Live View Filter popup window where you can set options to filter data. (See Live View Filters on page 715 for more information.)
	Schedule Frame Capture	Schedule a Frame Capture session using the scheduler. See Automatic Frame Captures on page 727 for more information.

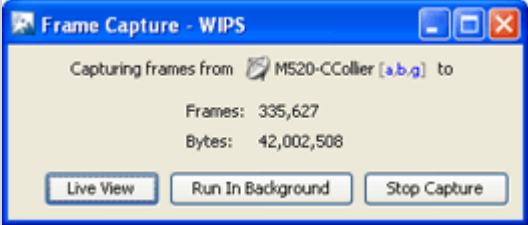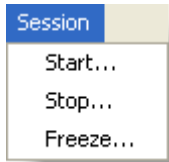Menu	Option	Description
	Reduced Bandwidth Interface	Shrinks the Frame Capture window and conserves bandwidth while running Live View.  While in the reduced bandwidth state, you can: • Return to the original Live View window by clicking Live View. • Run live view in the background by clicking Run in Background. • Stop capturing Live View frames and exit Live View by clicking Stop Capture.
	Run in Background	Exits Live View window and runs Live View in the background.
	Close	Exits the Live View session and closes the Live View window.
Session 	Start	Starts a Live View session.
	Stop	Stops a Live View session.
	Freeze	Freezes a Live View session. The data in the window freezes but Live View keeps collecting data to display later after you unfreeze the session.



Buttons

Button	Description
	Starts a Live View session.
	Stops a Live View session.

Button	Description
	Freezes a Live View session. The data in the window freezes but Live View keeps collecting data to display later after you unfreeze the session. Click the Freeze button again to unfreeze the session.
	Opens the Live View Filter popup window, where you can set options to filter data. (See Live View Filters on page 715 for more information.)

Drop-down Menus

The following are the drop down menus;

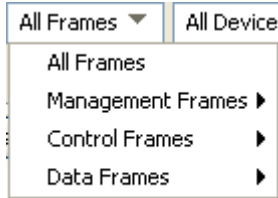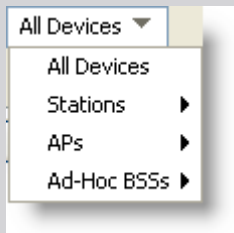Drop-down Menu	Description
	Acts as a quick filter to display only frames for the selected frame type. To view all types, select All Frames.
	Acts as a quick filter to display only frames for the selected device. To view all devices, select All Devices.


Live View Settings

Live View has four user adjustable settings. They are:

Setting	Description
Capture Size Limit	Sets the maximum amount of frames that can be captured during any one session.
Capture Management Frames	Sets the Live Monitoring sessions to capture management frames. If selected, you can also truncate management frames to a specific number of bytes or have no truncation.
Capture Control Frames	Sets the Live Monitoring sessions to capture control frames. If selected, you can also truncate control frames to a specific number of bytes or have no truncation.
Capture Data Frames	Sets the Live Monitoring sessions to capture data frames. If selected, you can also truncate data frames to a specific number of bytes or have no truncation.

To change the settings:


- Select **File > Settings** to display the **Live View Settings** popup window.

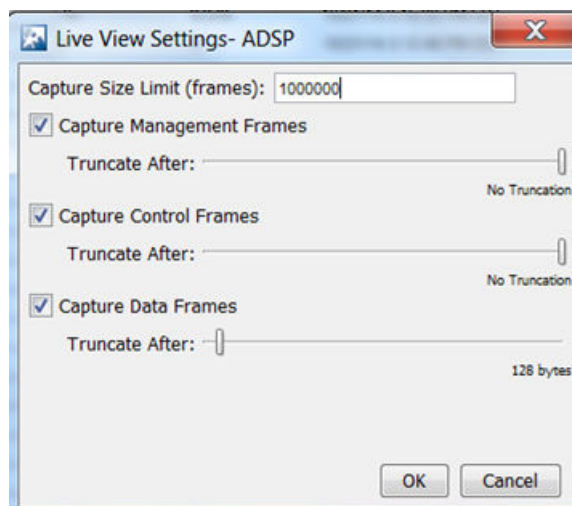

- Make your adjustments to the values in this screen.
- Click **OK**.

Live View Filters

You can limit what you see in Live View through the use of filters. Select **File > Edit Filters** or click the **Filter** button  to display the **Live View Filter** pop-up window.

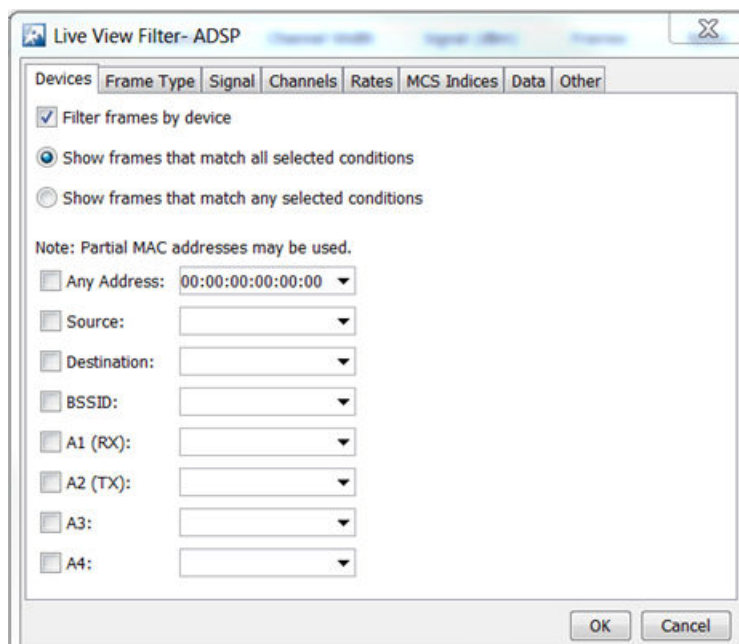


Frames may be filtered by any of the following methods:

Method	Description
Devices	To filter Live View frames by devices, go to the Devices tab and check Filter frames by device. Select any of the following conditions: • Any Address • Source • Destination • BSSID • A1 (RX) • A2 (TX) • A3 • A4 For every condition that you select, you must specify a MAC address. You have the option of displaying frames that match all of the selected conditions or displaying frames that match any of the selected conditions.
Frame Type	To filter by frame types, go to the Frame Type tab and check Filter frames by frame type . Then deselect any frame type that you do not want to display. You may filter out a whole category (Control, Management, or Data) or any of the sub-categories.
Signal Filters	To filter by signal strength, go to the Signal tab and check Filter frames by signal strength . Enter the minimum signal strength in dBm and the maximum signal strength in dBm. Live View will display only the signals within the specified range.
Channel Filters	To filter by channels, go to the Channels tab and check Filter frames by channel . Deselect the channels that you do not want to display. You may filter out a whole category of channels or individual channels.
Rates Filters	To filter by transmission rate, go to the Rates tab and check Filter frames by rate . Deselect any rate that you do not want to display.
MCS Indices	To filter by MCS Indices, go to the MCS Indices tab and check Filter frames by MCS Index . Deselect any index that you do not want to display.
Data Filters	To filter by data type, go to the Data tab and check Filter frames by data . Deselect any of the encryption types that you do not want to display and deselect any of the ether types that you do not want to display.
Other	To filter by other, go to the Other tab and check Filter frames by other . Enter the Mac address of the sensor you wish to filter by.

When you have set your filter criteria, click **OK** to save.

Data Tab

The **Data** tab provides a variety of charts that allows you to analyze different types of data transmitted and received to/from a particular device.

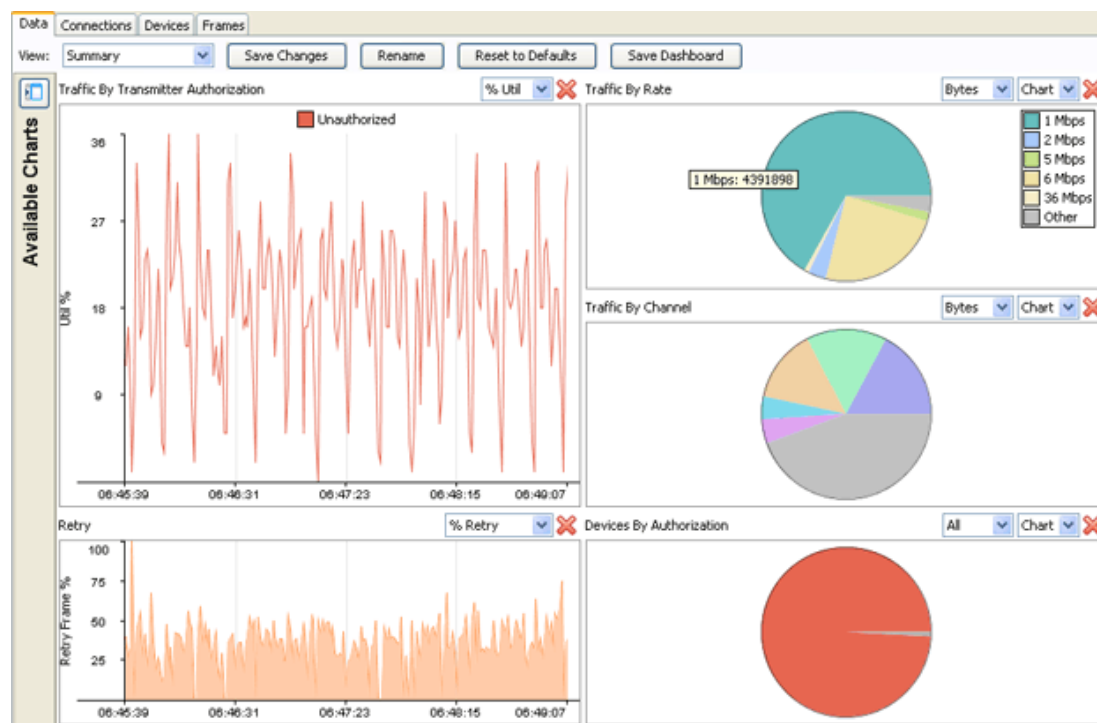


The **Data** tab focus can be changed by changing the view. Depending on the view that is selected different charts are displayed. There are four available views:

View	Description
Summary	Provides a summary of frame data using the following charts: • Traffic By Transmitter Authorization • Retry • Traffic By Rate • Traffic By Channel • Devices By Authorization. This is the default view.
Device Analysis	Changes the frame data focus to device information. Charts relating to device information are displayed.
Channel Analysis 2.4 Ghz (b/g/n)	Changes the frame data focus to channel information for 802.11b/g/n network traffic. Charts relating to channel information are displayed.
Channel Analysis 5 Ghz (a/n)	Changes the frame data focus to channel information for 802.11a/n network traffic. Charts relating to channel information are displayed.

Each view is customizable. You can add more charts to a view, rearrange the view, or remove charts from a view.

To add a chart to a view, click the **View Available Charts** button  to reveal the Available Charts.

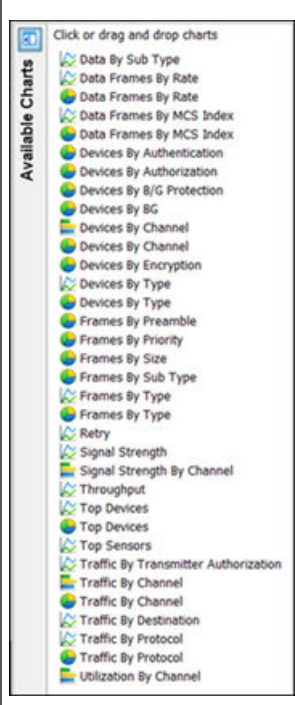 Click or drag and drop charts - Data By Sub Type - Data Frames By Rate - Data Frames By Rate - Data Frames By MCS Index - Data Frames By MCS Index - Devices By Authentication - Devices By Authentication - Devices By 8/G Protection - Devices By 8G - Devices By Channel - Devices By Channel - Devices By Encryption - Devices By Type - Devices By Type - Frames By Preamble - Frames By Priority - Frames By Size - Frames By Sub Type - Frames By Type - Frames By Type - Frames By Type - Retry - Signal Strength - Signal Strength By Channel - Throughput - Top Devices - Top Devices - Top Sensors - Traffic By Transmitter Authorization - Traffic By Channel - Traffic By Channel - Traffic By Destination - Traffic By Protocol - Traffic By Protocol - Utilization By Channel	Once the Available Charts are revealed, you can drag and drop a chart to the display area. You can display up to nine charts. To view a chart temporarily, click on the chart name. It will display superimposed over the current charts. Drop-down menus are available to customize the view of the charts. To hide Available Charts, click the Hide Available Charts  button.

To rearrange a view, you can drag and drop charts to another location.


To remove a chart, click the **Remove** button  associated with the chart.

Once you have customized the display to fit your needs, click the **Save Changes** button to save your arrangement. The customized view is saved on your ADSP server. Now, whenever you access Live View, you can access your customized arrangement. This is true even if you are accessing the GUI on another workstation.

You can change the name of a view by clicking the **Rename** button. Just type in the new name and click **OK**. This allows you to give a view a more descriptive name if you changed the view significantly.

To return a view to the original factory default, click the **Reset to Defaults** button.


You can save a PDF file with a snapshot of the data charts by clicking the **Dashboard** button. A dialog window opens where you can name the PDF file and specify an author's name.

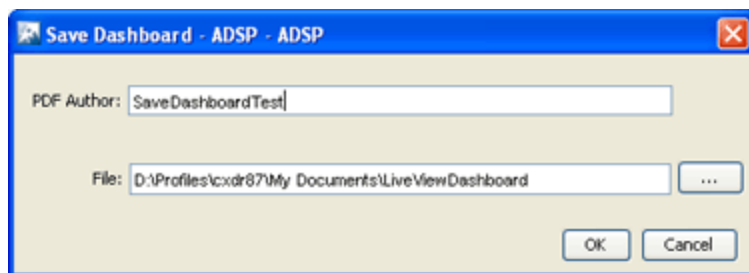

After supplying author's name and file name, click **OK**.

Connections Tab

The **Connections** tab displays device relationships (connections) between your wireless and wired networks with BSSs being the central point.

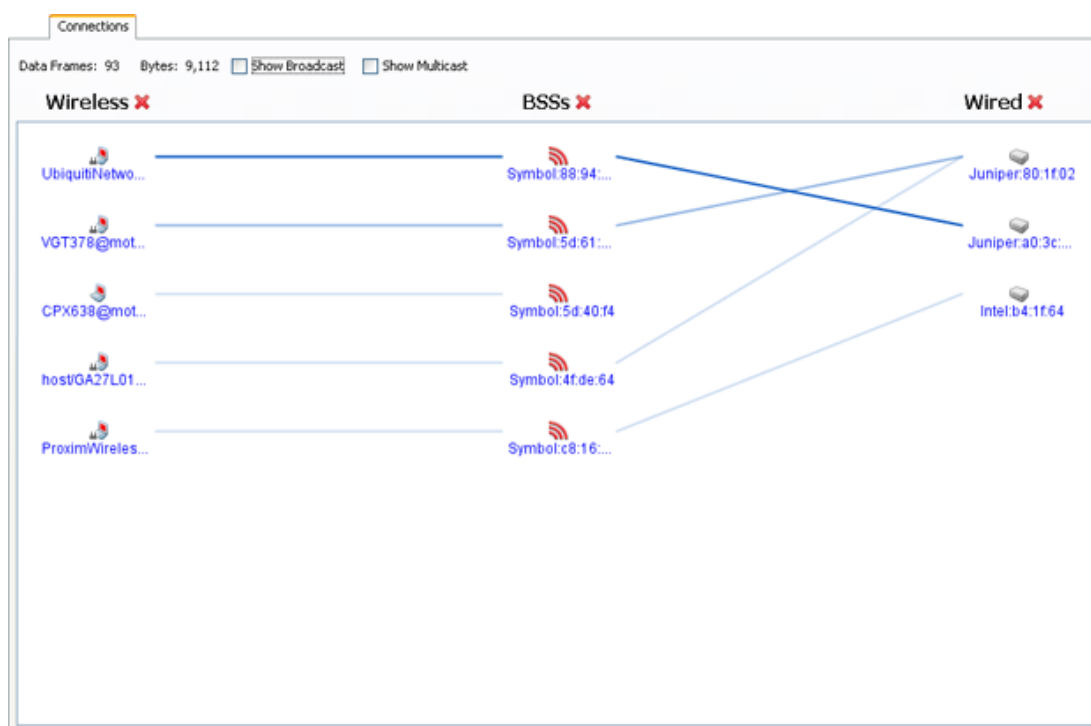

Options are provided to display devices with broadcast frames, devices with multicast frames, or both. Just select the checkbox for the option you want.

The **Data Frames** and **Bytes** fields display the count of data frames and bytes.


If more than 50,000 frames have been captured during the Live View session, only the most recent 50,000 frames are displayed.

Devices are listed in three columns: **Wireless** (wireless devices), **APs** and **Wired** (wired devices). Device columns may be disabled or re-enabled by using the hide (✖)/show (+) button next to the column name. For example, if the APs column is hidden, then connections will be shown directly from the source to the destination without the BSS in the middle.

A connection is defined as a set of devices referenced by a single data frame. Typically, a connection will involve three devices (source, destination, and BSS); but, in some cases may involve four devices (wireless bridging).

A line is defined as a link between two devices. Each connection is made up of multiple lines and each line may be part of multiple connections. The intensity and Z-order (whether a line is on top or bottom) of a line is based on the number of frames between the two devices.

Clicking on a device selects a connection involving that device. The devices and lines involved in the connection will be highlighted.

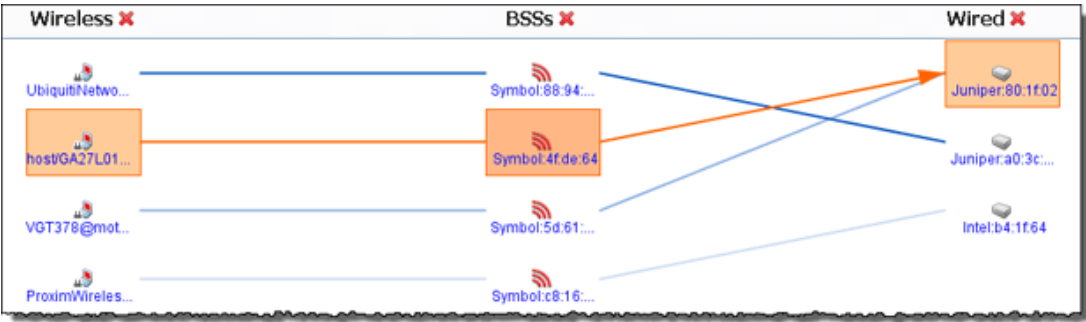


If you continue clicking on the device, the graph will cycle through the connections involving the selected device. Buttons are also provided to cycle through the connections.

Showing connection 1 of 2 including Cisco:35:37:a0  

The **Data Frames** and **Bytes** fields will only show the data corresponding to the selected connection.


Devices Tab

The **Devices** tab displays the devices that have been seen during a Live Monitoring session in tabular format.

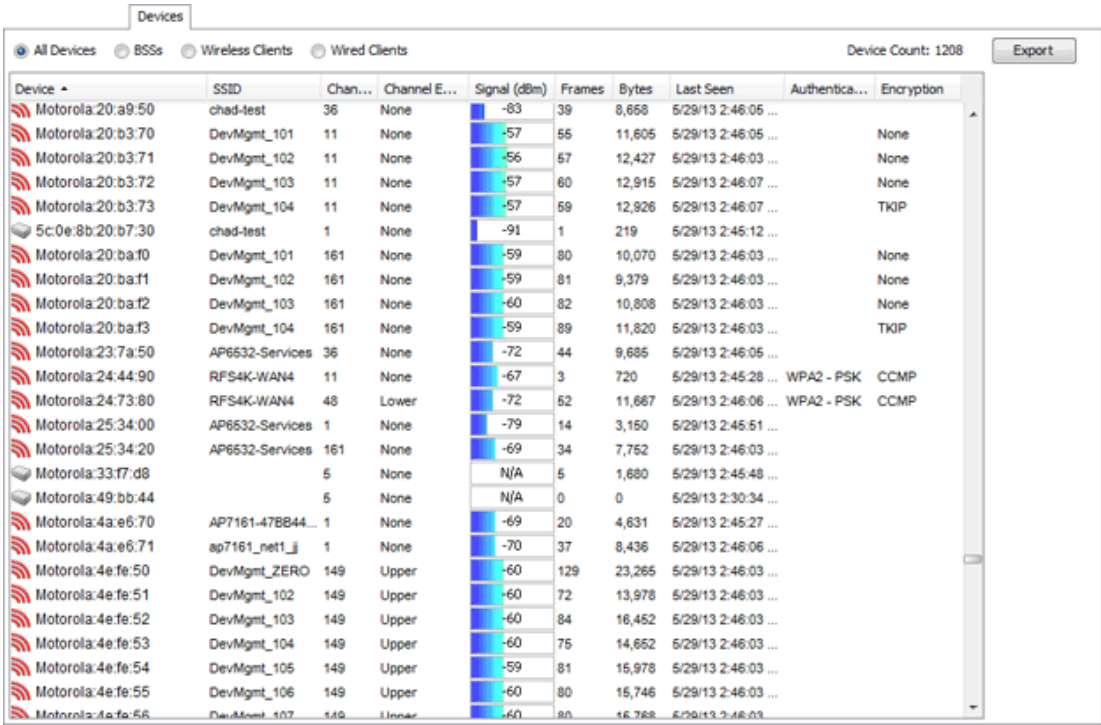

Options are provided to show all devices, only BSSs, Wireless Clients, or Wired Clients. If more than 50,000 frames have been captured during the live monitoring session, only the most recent 50,000 frames are displayed.

The **Export** button can be used to export device data to a CSV file.

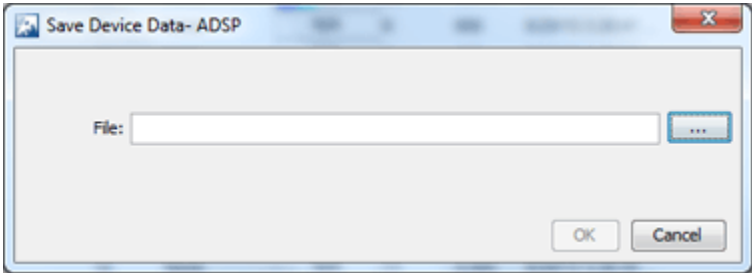

Just browse to a folder (directory) to save the file in, type in a name, and click the **Select** button. The name of the file is displayed in the **File** field. Now, click **OK** to save the file in the selected folder (directory).


The **Devices** table can be customized to display the following information:

Column	Description
Device	Lists the different devices that have been seen during the Live Monitoring session.
MAC Address	Displays the MAC address of the seen device.

Column	Description
SSID	Lists the Service Set Identifiers. An SSID is a 32-character unique identifier attached to the header of packets sent over a WLAN. The SSID acts as a password when a mobile device tries to connect to the BSS (Basic Service Set.)
Channel	Lists the WLAN channel that the device is operating on.
Channel Extension	Lists the WLAN channel extension that the device is operating on.
Signal (dBm)	Lists the device's signal strength connectivity on the WLAN.
Frames	Displays number the frames, which are the actual packets of 802.11 protocol, that have been observed by the ADSP sensor for the given device.
Bytes	Displays the byte count seen by the device.
First Seen	Displays the time and date the device was first seen.
Last Seen	Displays the time and date the device was last seen.
WEP IVs	Displays the number of unique WEP IVs seen by the device.
Authentication	Lists the authentication method used to authenticate the device.
Encryption	Displays the encryption method used by the device.

Column display and arrangement can be customized as follows:

You can hide or unhide a category by right-clicking in the column heading area, and uncheck or checking the checkbox for a category (see below).

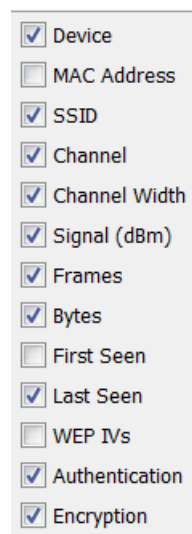

You can rearrange columns by clicking on a column heading and dragging it to a new position.

Frames Tab

The **Frames** tab displays the frames that were captured during a Live Monitoring session.

Frames

Time	Source	Destination	BSSID	Observe...	Channel...	Rate	Signal (d...	Size	Protocol
15:51:08.1...	Motorola:48:83:6c	Intel:a1:b3:2c	Motorola:48:83:6c44	None	6 Mbps	-67	213	Probe response	
15:51:08.1...	Symbol:c8:46:30	Broadcast	Symbol:c8:46:30 44	None	6 Mbps	-70	230	Beacon	
15:51:08.1...	Motorola:20:ba:f0	Broadcast	Motorola:20:ba:f0 44	None	6 Mbps	-83	160	Beacon	
15:51:08.1...	Symbol:c8:46:31	Broadcast	Symbol:c8:46:31 44	None	6 Mbps	-70	196	Beacon	
15:51:08.1...	Symbol:e4:ea:70	Broadcast	Symbol:e4:ea:70 44	None	6 Mbps	-76	97	Beacon	
15:51:08.1...	Motorola:48:83:6c	Broadcast	Motorola:48:83:6c44	None	6 Mbps	-67	202	Beacon	
15:51:08.1...	Symbol:c8:46:32	Broadcast	Symbol:c8:46:32 44	None	6 Mbps	-71	205	Beacon	
15:51:08.1...	Motorola:20:ba:f0	Broadcast	Motorola:20:ba:f0 44	None	6 Mbps	-83	160	Beacon	
15:51:08.2...	Symbol:c8:46:30	Broadcast	Symbol:c8:46:30 44	None	6 Mbps	-70	230	Beacon	
15:51:08.2...	Motorola:20:ba:f0	Broadcast	Motorola:20:ba:f0 44	None	6 Mbps	-83	160	Beacon	
15:51:08.2...	Motorola:43:cb:3c	Broadcast	Motorola:43:cb:3c13	None	1 Mbps	-74	212	Beacon	
15:51:08.2...	Symbol:c8:46:31	Broadcast	Symbol:c8:46:31 44	None	6 Mbps	-70	196	Beacon	
15:51:08.2...	Symbol:e4:ea:70	Broadcast	Symbol:e4:ea:70 44	None	6 Mbps	-76	97	Beacon	
15:51:08.2...	Motorola:48:83:6c	Broadcast	Motorola:48:83:6c44	None	6 Mbps	-67	202	Beacon	
15:51:08.2...	Motorola:43:cb:31	Broadcast	Motorola:43:cb:3113	None	1 Mbps	-75	232	Beacon	
15:51:08.2...	Symbol:c8:46:32	Broadcast	Symbol:c8:46:32 44	None	6 Mbps	-70	205	Beacon	
15:51:08.2...	Motorola:20:ba:f0	Broadcast	Motorola:20:ba:f0 44	None	6 Mbps	-83	160	Beacon	
15:51:09.3...	Motorola:43:db:1c	Broadcast	Motorola:43:db:1c11	None	1 Mbps	-72	148	Beacon	
15:51:09.3...	Cisco:df:3d:a0	Broadcast	Cisco:df:3d:a0 1	None	1 Mbps	-83	195	Beacon	
15:51:09.3...	Symbol:c8:3c:21	Broadcast	Symbol:c8:3c:21 1	None	1 Mbps	-82	207	Beacon	
15:51:09.3...	Cisco:0c:fc:8e	Broadcast	Cisco:0c:fc:8e 1	None	1 Mbps	-80	148	Beacon	

000080000000ffffffffff5c0e8b20ba

00105c0e8b20ba

002032000100000b4465764d676d745f3130

00303201088e129824b048606e0504000100

0040000712555349240d11340d1864111888

0050051895111e0b05000000093dad0f00a0

0060f800000000010000003139af4dd00700

007050f202000180dd1600a0f80101010000

0080000000000000000000000000dd10

Packet Information

802.11 Header

802.11 Body


The captured file is stored in either/or, at times, both of the following directories:

```
/usr/local/smx/pcaptiures
```

OR

```
/usr/local/smx/pcaptures/saved.
```

You can switch to the frames view by clicking the **Frames View**  button.

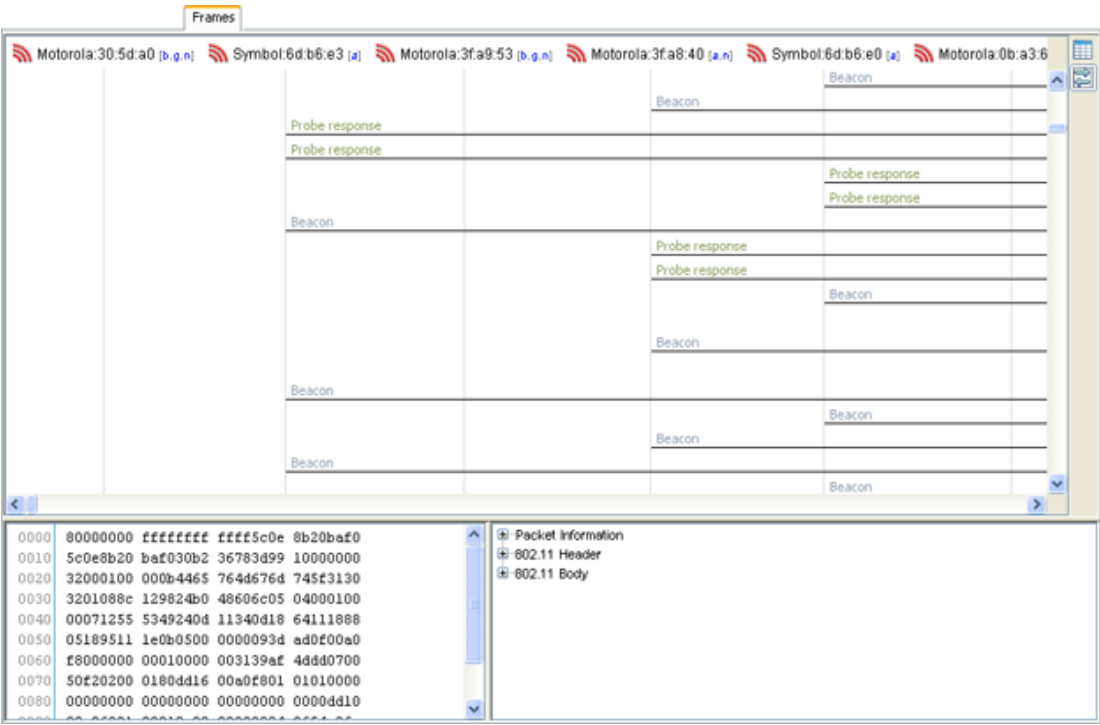

Click the **Data Table**  button to switch back to the table view.

If more than 50,000 frames have been captured during the live monitoring session, only the most recent 50,000 frames are displayed.

Frames data is displayed as follows:

- Frames table (located on top)
- Hex values for a selected frame (located on bottom left)
- Decodes for a selected frame (located on bottom right).

Table View


The frame table can be customized to display the following information:

Column	Description
Time	Displays the time the frame was seen.
Source	Lists the device where the frame originated.
Destination	Lists the device where the frame was sent.
BSSID	Displays the Basic Service Set Identifier.
Transmitter	Lists the device that transmitted the frame.
Receiver	Lists the device that actually received the frame.
Address 1	Lists the first address in the frame.
Address 2	Lists the second address in the frame.
Address 3	Lists the third address in the frame.

Column	Description
Address 4	Lists the fourth address in the frame.
Observed Channel	Lists the WLAN channel that the device is operating on.
Channel Extension	Lists the WLAN channel extension that the device is operating on.
Rate	Displays the data rate (in Mbps) being used by the device that sent the packet.
Signal (dBm)	Lists the device's signal strength connectivity on the WLAN.
Size	Displays the size of the frame.
802.11 Type	Displays the 802.11 protocol type used in the frame.
Protocol	Displays the protocol type used in the frame.
Sensor	Displays the MAC address of the sensor that observed the device that sent the packet.

Column display and arrangement can be customized as follows:

- Hide or unhide a category by right-clicking in the column heading area, and uncheck or checking the checkbox for a category (see below).

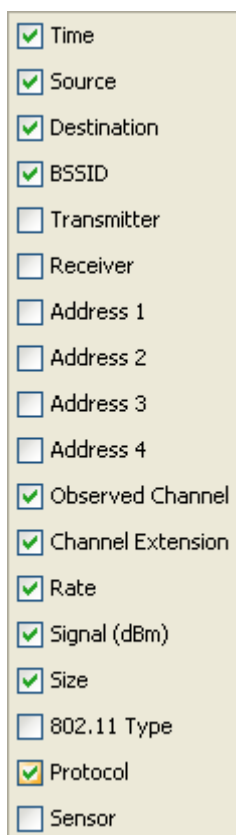

- Rearrange columns by clicking on a column heading and dragging it to a new position.

When a frame is selected (highlighted), the frame data is shown in the hex values and decodes areas.

The decodes area shows the 802.11 interpretation of the frame data in a tree structure. The hex values area and decodes area are linked so that selections in one area will follow the selections in the other.

Frames View

The devices from which the frames were captured are displayed across the top of the tab. A frame is selected by clicking anywhere on the line under the frame name. When selected, the frame is highlighted in blue.

When a frame is selected (highlighted), the frame data is shown in the hex values and decodes areas.

The decodes area shows the 802.11 interpretation of the frame data in a tree structure. The hex values area and decodes area are linked so that selections in one area will follow the selections in the other.


Frame Capture

There are two ways to capture frames from Live View:

- Manually
- or
- Automatically using the scheduler

Manual Frame Captures

Live View automatically saves session frame data in a temporary file on your ADSP server. You can save the temporary file to a permanent file on the server or to a file on your workstation. To save a file, first stop the session (click Stop button or select Session > Stop) and then select File > Save to display the Save Frame Capture popup window.

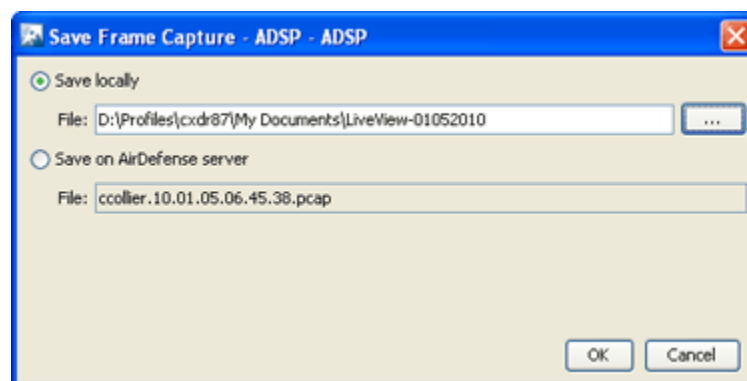

To save the file on your workstation:

1. Select the Save locally radio button.
2. Click the Select Destination button.
3. Navigate to the folder (directory) where you want to save the file.

4. Type a filename and then click **OK**. The file name along with the path displays in the **File** field.
5. Click **OK**.

Save Frame Capture to the Extreme AirDefense Server

To save the file on your AirDefense server:

1. Select the **Save on AirDefense** server radio button.



Note


The file name is selected automatically. You cannot change it.

2. Click **OK**.

Once the file is saved, you can view it using **Frame Capture Analysis**. You can access this feature by selecting **Menu > Frame Capture Analysis**.

Automatic Frame Captures

You can run automatic frame captures using the AirDefense Services Platform scheduler. Open the **Schedule Frame Capture** window by selecting **File > Schedule Frame Capture** from the **Live View** window.

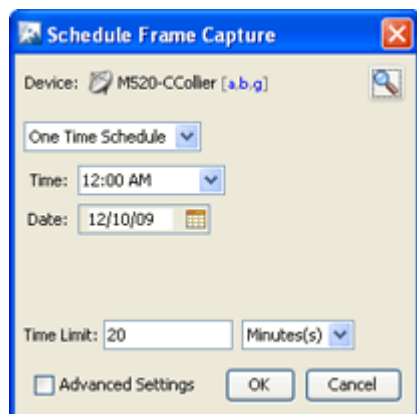

To schedule automatic frame captures, follow these steps:

1. Decide how often you want to run the frame capture by selecting **One Time Schedule**, **Intra-Day Schedule**, **Daily Schedule**, **Weekly Schedule**, or **Monthly Schedule** from the drop-down menu.
2. Depending on the interval you selected in the previous step, fill in the related fields using the following table:


Interval	Action
One Time Schedule	Choose a time for the backup by selecting a time from the Time drop-down menu. Then, select a day for the frame capture by clicking the Calendar button in the Date field and selecting a date.
Intra-Day Schedule	Select a time to begin the frame capture. Then, select a frequency in hours.

Interval	Action
Daily Schedule	Select a frequency in day, weekdays only, or weekends only. Then, select a time of day.
Weekly Schedule	Choose a frequency in days. Then, select a day or multiple days to conduct the frame capture by clicking the checkbox next to the day to place a checkmark in the box.
Monthly Schedule	Choose the months that you want to run a frame capture by clicking the checkbox next to the month(s) to place a checkmark in the box(es). Then, select a day of the month to conduct the frame capture. Last, specify a time of day.

- 3. Place a time limit on the frame capture by entering the time in the **Time Limit** field; then, select **Minute(s)** or **Hour(s)**.
- 4. Click **OK** to set the automatic frame capture schedule.

Advanced Settings

The **Advanced Settings** field adds additional fields to run your frame capture. Just select the **Advanced Settings** checkbox.

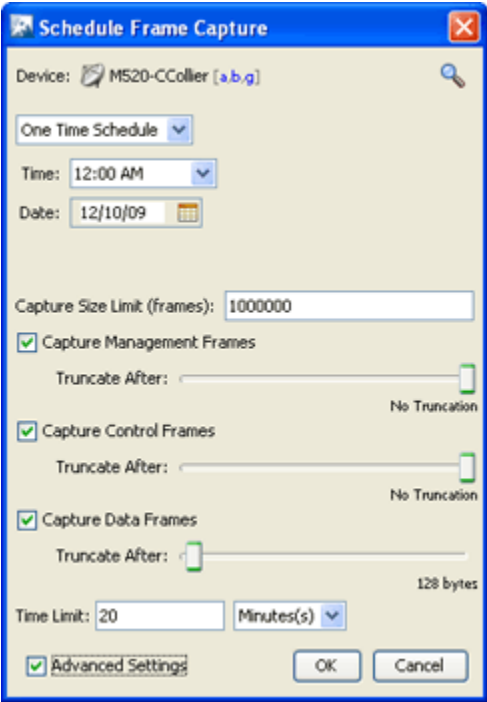

There are four additional fields in the Advance Schedule Frame Capture window. The steps to set a schedule are the same except you need to set the additional fields. There is a Capture Size Limit (frames) field where you can set a limit on how large the captured frame file can grow.

The three other fields are used to truncate the captured frame file for captured:

- Capture Management Frames

- Capture Control Frames
- Capture Data Frames.

If you want to truncate any of the above frames, place a checkmark in the checkbox next to field that you want to truncate. Then, move the slide-bar to make your adjustment. Moving the slider to the left reduces amount of bytes to capture. Moving the slider all the way to the right sets the field to no truncation.

If you remove the checkmark from the Advanced Settings checkbox, you are returned to the original Schedule Frame Capture window.

Location Tracking

Location Tracking is a technology that enables you to locate and track rogue devices that may be threatening your wireless LAN. Location Tracking uses the RSSI of the device as seen by at least three sensors to triangulate a position relative to the sensor locations. To use this feature, you must first import a building map and place at least three sensors on their corresponding location.

Things to Remember

- Location Tracking is not intended to be used on devices that are being terminated.
- In order to locate a device, a floor plan must already exist. (See Floor Plan.)
- In order for Location Tracking to open and function properly you must have:
 - One (minimum) AirDefense appliance.
 - Three (minimum) AirDefense compatible sensors per map loaded.

Importing Maps

To use the built-in Location Tracking feature, you will need to import a map first and place the sensors at their specific locations.



Note

Each map can be loaded by floor. You may have to re-arrange the sensors to accommodate a map for each floor. You will also need a minimum of three sensors per map.



Note


A map can only be linked to sensors on the same floor. In a multi floor building, sensors should be grouped by floors and each floor associated with its own map. At least 3 sensors per floor plan are required for location triangulation.

Example:

If a location has 2 floors, there must be at least three sensors on each floor (total of six) for Location Tracking to work.

Floor Manipulation Tools

The floor manipulation tools (located near the top-right side of the windows allow you to adjust the size of the floor plan image with a single click and/or move the floor plan image by dragging it to a new position.

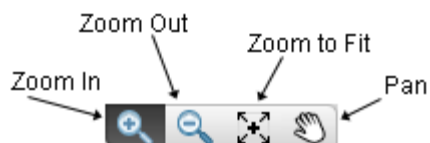

The following tools are available:

Tool	Description
	Click this tool to zoom in (enlarge the size) on a floor plan image. Each click will zoom closer.
	Click this tool to zoom out (reduce the size) from a floor plan image. Each click will zoom out further.
	Click this tool to fill the floor plan area with an image. Depending on the size of the image, the image will expand to fit or reduce to fit the floor plan area.
	Click this tool to move/re-position the floor plan image. After clicking the tool, use the hand (click and hold) to move/re-position the image.

Setting Images

Select an empty floor and then click the **Design Floorplan** link to import a map. This will open a sub-window and you can upload the appropriate map, which can be in *.gif*, *.jpg*, or *.bmp* files. Select the desired floor plan and select **Open**. The map is then displayed. Scale the image as directed and click **Next: Add to floor** when you are satisfied with the image.




Important

The Floor Plan single dimension limit (width or height) is 8192 pixels while the total pixel count (width x height) limit is 8,000,000 pixels. If the appliance has at least 2GB of memory, the total pixel count may be as high as 16,777,215 pixels but the single dimension limit is still 8192 pixels.


One or more maps or floor plans of the tracking coverage area are needed for this to work. You can obtain floor plans from any source, including producing your own by using drawing tools. Most applications will require multiple maps, for example, if you are setting up multiple buildings. You must supply a map for each floor in a building.

Accessing Location Tracking

You can open the **Location Tracking** window anywhere in the application when you select a BSS or wireless client and select **Locate** from the devices drop-down menu button . To track a device, the floor plan (map) must be loaded and sensors positioned on the map).

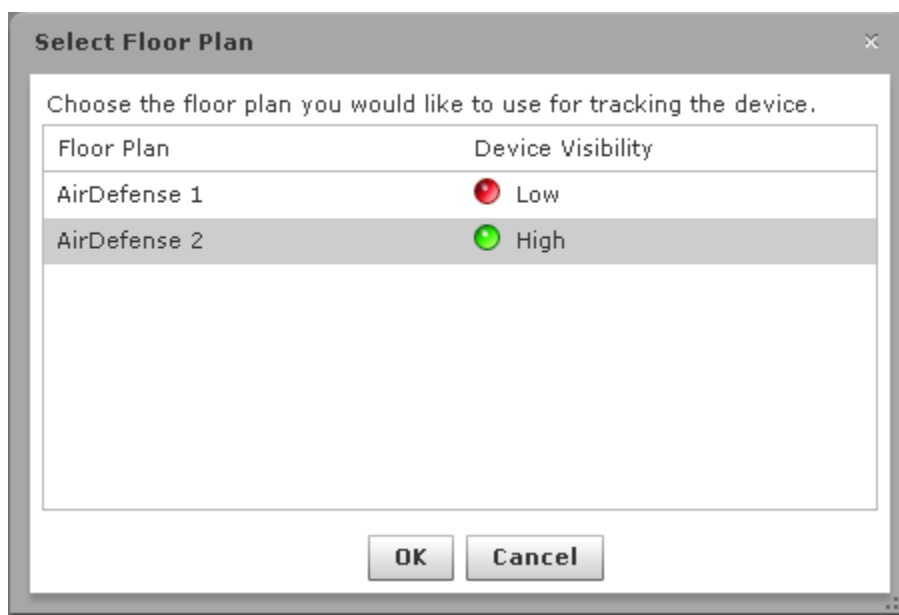

Select the **Floor Plan** with the highest visibility and then click **OK**. The **Floor Plan** displays showing the device being tracked.

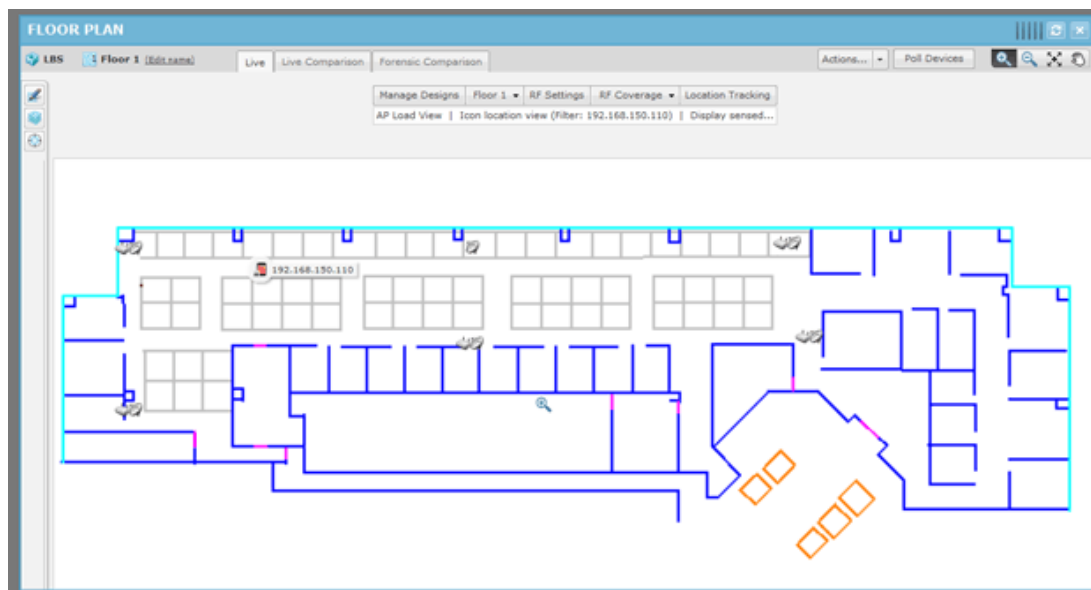

Clicking the **Refresh** button will refresh the **Floor Plan**. If the device has moved, you will see its new position in the Floor Plan.

The **Floor Plan** is also refreshed automatically (unless turned off) using **Menu > Auto Refresh**. The available refresh rates are:

- 30 seconds
- 1 minute
- 5 minutes.

You can place your cursor over the tracked device to display statistics and information about the device.

Port Lookup

Port Lookup allows you to quickly locate the physical port that an authorized/unauthorized device is using to connect to your network. If it is determined that a rogue wireless device is connected to the network, the wired-side port can be shut off to contain the rogue device threat.



Note

To use this feature, you will need to configure your system with all known managed SNMP switches.

Port Lookup is accessed from a device's drop-down menu and displays the **Switch Port Lookup** window. If the device you select is a BSS, the following window displays:

The screenshot shows the 'Switch Port Lookup - ADSP' window. Under 'Search Criteria', the 'Search Scope' is set to 'ADSP' and 'TODO (0 Switches)' is displayed. In the 'MACs to Find' section, the 'Selected Device' is '00:15:70:c4:60:33'. There are three checkboxes: 'Similar MACs offset by' (unchecked), 'Associated Stations' (unchecked), and 'Additional MACs' (unchecked). Below these are three list boxes. The first list box contains two entries: '00:15:70:c4:60:34' and '00:15:70:c4:60:32'. The second and third list boxes are empty. At the bottom are buttons for '< Back', 'Next >', and 'Close'.

If the device you select is a Wireless Client, the following window displays:

The screenshot shows the 'Switch Port Lookup - ADSP' window. Under 'Search Criteria', the 'Search Scope' is set to 'ADSP' and 'TODO (0 Switches)' is displayed. In the 'MACs to Find' section, the 'Selected Device' is '00:19:d2:49:46:c8'. There is one checkbox: 'Additional MACs' (unchecked). Below this is a single large list box that is currently empty. At the bottom are buttons for '< Back', 'Next >', and 'Close'.

The following table provides detail on the **Switch Port Lookup** window's functions and features.


Function/Feature	Description
Search Scope	A drop-down menu that allows you to limit the scope of your search.
Selected Device	A read-only field that displays the MAC address of the selected device.
Similar MACs offset by	This function appears only if selected device is a BSS. If checked, the search includes other BSSs with a MAC address similar to the selected station. The other stations are listed in the sub-window. Use this function to search for a range of MAC addresses. The range is set by the offset value that you select. For example, suppose you are performing Port Lookup for a device whose last 2 characters are :04, when you select 3 for Add MACs In Range, 3 tiers of MAC Addresses above and below the 04 address appear: 07, 06, 05 -- 04 -- 03, 02, 01. The default offset value is 1.
Associated Wireless Clients	This function appears only if selected device is a BSS. If checked, the search includes Wireless Clients that are connected to the AP. Any connected Wireless Clients are displayed in the sub-window.
Additional MACs	If checked, the search includes any additional MAC addresses that you specify.

Performing a Port Lookup

To perform Port Lookup

1. Click the  drop-down menu button for the suspect device and then select **Port Lookup** from the menu. The Switch Port Lookup window displays.
2. Select the search scope from the **Search Scope** drop-down menu.
3. If the suspect device is a BSS, decide if you want to include a range of similar MAC addresses and/or if you want to include **Wireless Clients** in your search, and check the appropriate checkbox(es).
4. If you want to include additional MACs in your search, check the **Additional MACs** checkbox and type in the MAC addresses that you want to include.

5. Click **Next**. The following window showing the search results displays.

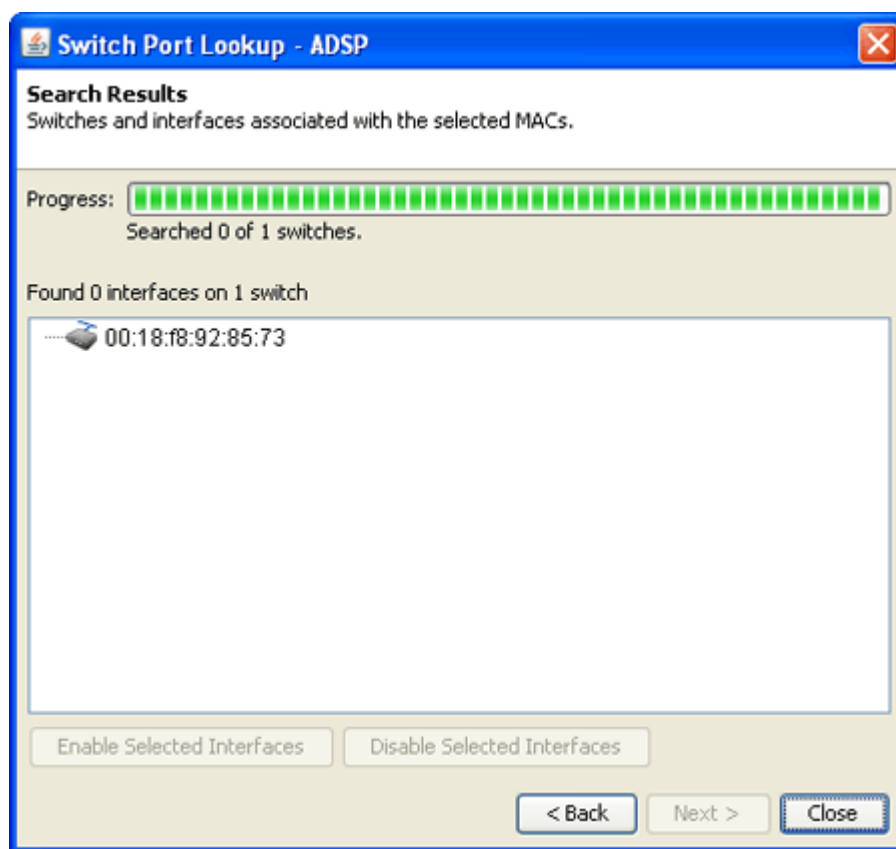


From this window, you can disable or enable a selected (highlighted) interface by clicking the appropriate button.

6. Click **Close** to exit.

Readiness Test

The **Readiness Test** checks the connections and the communication settings between AirDefense and devices in your network. The devices may be an AP, a Sensor, or a Switch. You may also run the Readiness Test to check a group of devices by using the network level as a starting point.


To access the Readiness Test, click **Readiness Test** from the drop-down menu of an AP, a Sensor, a Switch, or a network folder (level). A series of tests are run and displayed in a **Readiness Test** overlay.

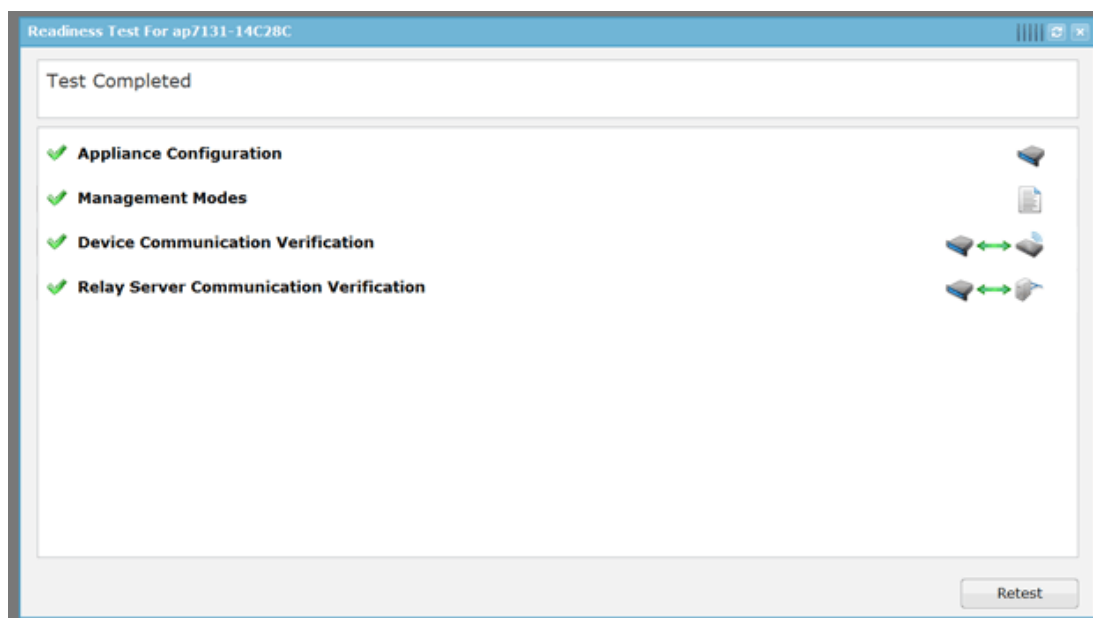

If you are running the Readiness Test from a device, it is run only on that device. If you are running the Readiness Test from a network folder (level), the test is run on all the devices included in that folder.

There are four categories of tests: Appliance Configuration, Management Modes, Device Communication Verification, and Relay Server Communication Verification. Each category can be expanded to review individual tests for that category by clicking the category. Each of the tested items is marked as a success - ✓, a problem - ✗, or a caution area - ⚠. If all the tests under a category are successful, the category is marked as a success. If one test under a category has a problem, the category is marked as a problem area. You can click on any category to display the tests for that category. If a test is marked as a problem or caution area, you can click on the test to navigate to the problem area and take action to correct the problem.

Appliance Configuration

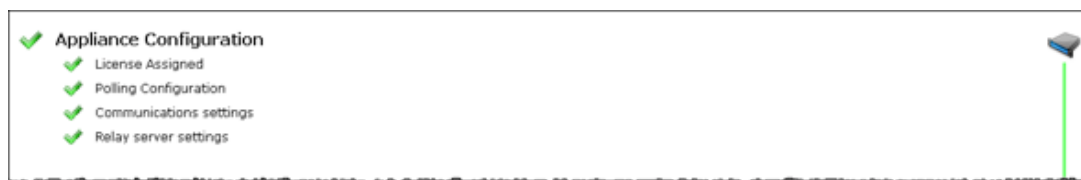

There are four tests for Appliance Configuration:

- License Assigned—validates that the number of licenses do not exceed the number of configured devices.
- Polling Configuration—validates that the folder or device selected inherits a configured polling profile.
- Communications settings—validates that the folder or device selected inherits a configured communication settings profile.
- Relay server settings—validates that the folder or device selected inherits a configured relay server profile.

Management Modes



There are eight tests for Management Modes:

- License Assigned—validates that the number of licenses do not exceed the number of configured devices.
- Polling Configuration—validates that the folder or device selected inherits a configured polling profile.
- Data Collection—validates that data collection is enabled when polling.
- SNMP Credentials—validates that the SNMP credentials are supplied for the communications settings.
- Firmware Upgrade Readiness—validates that firmware upgrades are in place and ready to be applied.
- Configuration Management Readiness—validates that device configuration management is enabled for the communications settings.
- Automatic Configuration Correction—validates that configuration compliance violations are automatically corrected when polling.
- UI Profile and Expansion Variable Readiness—validates that the folder or device selected inherits UI profiles and that the expansion variables exist for the profiles. UI profiles include Channel Settings, Device Access, Radio Settings, RF-Domain, WLAN Profiles.

Device Communication Verification



There are three tests for Device Communication Verification:

- SNMP Connection—validates that the folder or device selected inherits credentials for SNMP access to the device(s). Test is successful only if valid data can be returned.
- CLI Connection—validates that AirDefense can communicate with the selected device via the CLI.
- HTTP Connection—validates that AirDefense can communicate with the selected device via HTTP.

Relay Server Communication Verification



There are five tests for Relay Server Communication Verification:

- Relay server settings—validates that the folder or device selected inherits a configured relay server profile.
- Relay Server Connection Test— validates that the relay server can be reached.
- Relay Server Upload Test—validates that the relay server can upload CLI profiles.
- Relay Server Download Test—validates that the relay server can download CLI profiles.
- Relay Server Delete Test—validates that the relay server can delete CLI profiles.

Spectrum Analysis



Note

A Spectrum Analysis license is required to access this feature.

Spectrum Analysis gives you a tool to identify and locate interference sources on your wireless network. You must have a valid Spectrum Analysis license for each sensor that you wish to conduct an analysis from.

Spectrum Analysis supports two modes of operation:

- [Background Analysis](#) on page 737
- [Dedicated Analysis](#) on page 737

Background Analysis

When enabled, background analysis continually scans for interference sources as part of the normal scan pattern. An alarm is generated when interference is detected.


There are two ways to turn on background analysis:

- When a Spectrum Analysis license is applied to a Sensor, you are given an option to enable background scanning.
- In the **Sensor Operation** settings of the **Sensor Monitoring** category under the **Configuration** tab, there is an option to enable background scanning.


Dedicated Analysis

Dedicated analysis disables the normal scan pattern for a Sensor. Then, it conducts a detailed spectrum scan and displays the results in the Spectrum View window.

The **Spectrum View** window can only be accessed if the selected Sensor is licensed for Spectrum Analysis. If the Sensor does not support **Spectrum Analysis**, the following error popup is displayed:

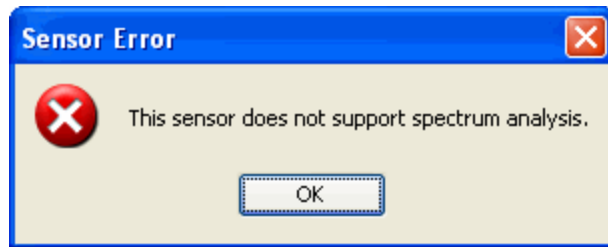


In addition, if you attempt to run Spectrum Analysis on an AP configured for client access (device configured as AP and Sensor), the following error popup may display:

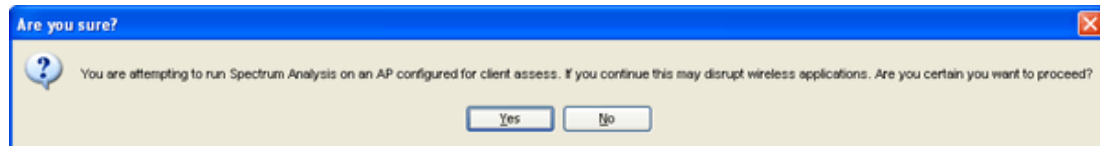

This usually will happen if you only have one radio turned on. If you continue, your wireless application may be disrupted but Spectrum Analysis will run.


To access the **Spectrum View** window, click the drop-down menu button  for a Sensor and then select **Spectrum Analysis** from the drop-down menu.

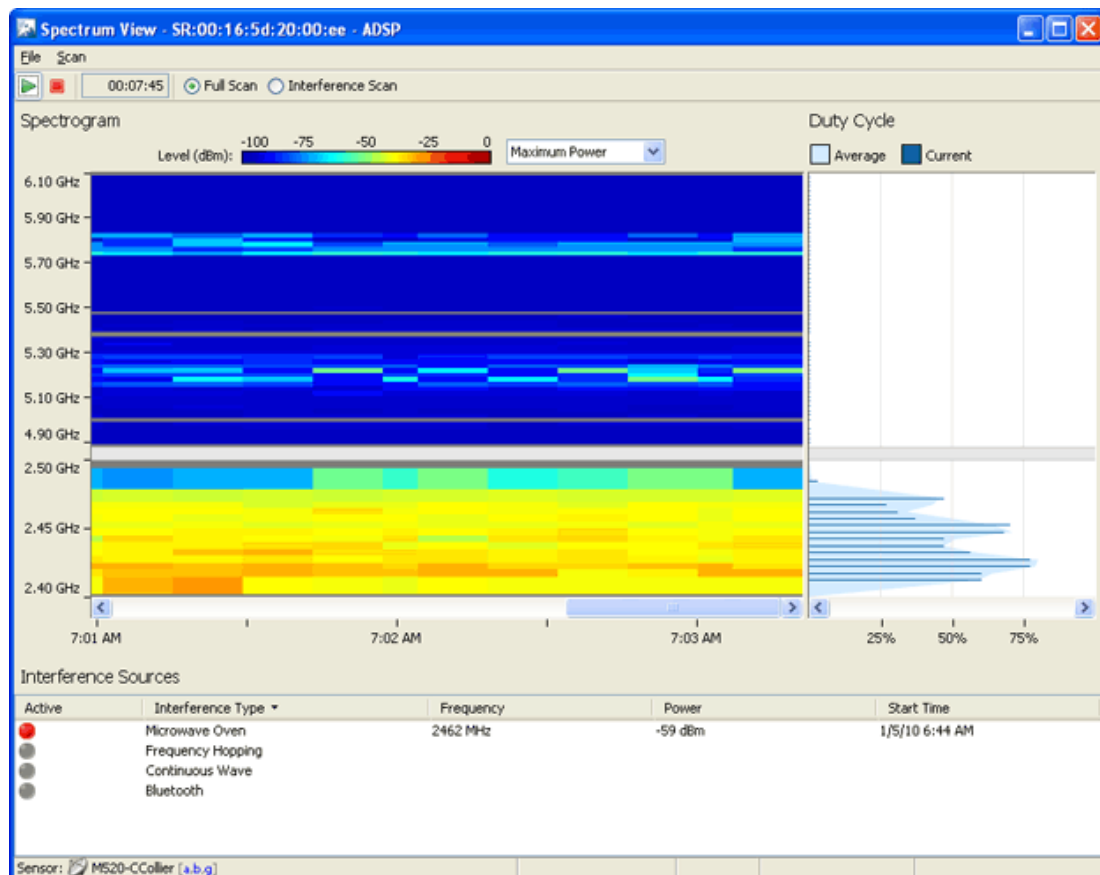

Select **File > Close** to exit the **Spectrum View** window. You will be prompted to save the scan to an ADSP file. An ADSP file can be opened by navigating to **Menu > Open > Spectrum Analysis**.

Scanning

A dedicated scan starts automatically when the Spectrum View window is opened. You are given a warning to alert you that running a dedicated scan will temporarily suspend Intrusion Detection.

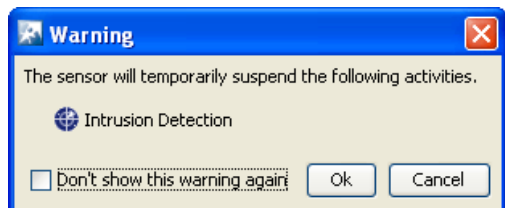

You must click OK to continue. You can turn the warning off by selecting the checkbox next to Don't show this warning again.

There are three conditions that may prevent a scan from starting. They are:


- The Sensor is already running a dedicated RF scan for any user
- Another user is running Live View on the Sensor
- Ten scans are already running (maximum supported).

You can stop a scan by clicking the Stop Scan button  or selecting **Scan > Stop Scan**.

A scan can be restarted by clicking the Start Scan button  or selecting **Scan > Start Scan**.

A counter is displayed next to the Stop Scan button to show how long the scan has been running.


The default scanning time is 10 minutes. Scanning time can be adjusted by selecting **Configuration > Appliance Management > Appliance Settings**. If a timeout occurs, the following Scan Timeout popup is displayed:

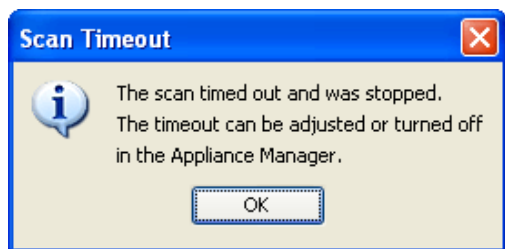

Click **OK** to close the popup

Spectrum Settings

Spectrum View lets you adjust the pulse definition via the Spectrum Settings window. To access the Spectrum Settings, select **File > Settings**.

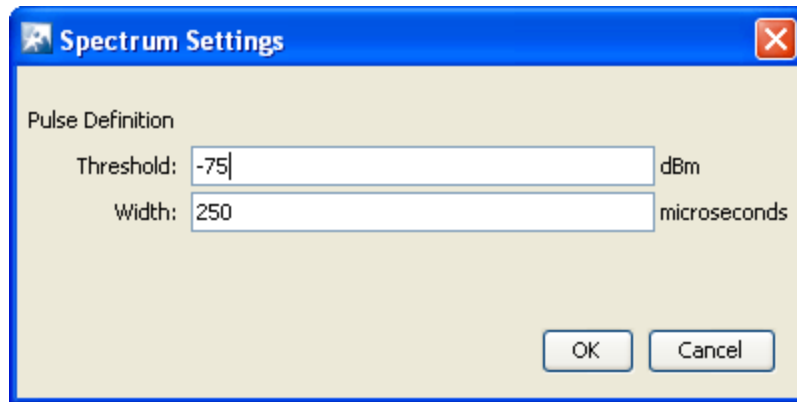

As you can see, there are two fields for pulse definition: **Threshold** and **Width**. You can adjust the pulse threshold by typing in a new value in dBm. You can adjust the pulse width by typing in a new value in microseconds. Click **OK** to set the new values and close the window.

Scanning Modes

There are two scanning modes:

- Full Scan
- Interference Scan

Full Scan scans the entire 2.4GHz bandwidth (in 5MHz steps) and 5GHz bandwidth (in 20MHz steps) with a short dwell time (around 50 ms). It supports limited classification of interference sources.

Interference Scan scans three frequencies in the 2.4GHz band and three frequencies in the 5GHz band with a longer dwell time (around 500 ms). It supports classification for all interference sources. To select a mode, select the appropriate radio button or select a mode from the Scan menu.

Spectrogram

Spectrogram shows the average power level measured at each of the frequencies in the scan settings over a period of time. The graph is cleared when a scan starts and updates regularly as data becomes available during the scan.

When a scan starts, data starts showing in the right side of the graph. As new data is scanned, the older data moves to the left. Once the graph is full, a horizontal scroll bar becomes visible.

You can display the frequency and power value by moving the cursor over points in the graph.

The **Duty Cycle** chart shows the duty cycle values for the most recent time slice and an average of the duty cycles across all time slices. When the cursor is placed over the **Duty Cycle** chart, the frequency and duty value is highlighted and displayed. Also, the status bar displays the frequency, duty value, average power, and average pulse power.

You can adjust the size of the **Spectrogram** and **Duty Cycle** chart by clicking and dragging the divider (left or right) between them. The size of the charts may

be adjusted along the X axis by dragging a divider which is shown between the spectrogram and the duty cycle chart.

Interference Sources

The Interference Sources table lists:

- Whether the interference source is active (red ball) at the moment or not (gray ball)



Note

An alarm is generated whenever an interference source is detected.

- The name of the interference source:
 - Microwave Oven
 - Frequency Hopping
 - Continuous Wave
 - Bluetooth
- The frequency of the interference source
- The power of the interference source
- The time when the interference source was first detected.

Each time a scan is started, the table clears and is updated when data becomes available.

Advanced Spectrum Analysis



Note

A Spectrum Analysis license is required to access this feature.


Advanced Spectrum Analysis is the next generation of Spectrum Analysis. Advanced Spectrum Analysis will only run on devices with the MB92 or newer chipsets. Currently, only the models AP621, AP622, AP6511, AP6521, AP6522, and AP8132 can run this enhanced version of Spectrum Analysis.



Note

If an AP6521 is configured in the AP/radioshare mode, Advanced Spectrum Analysis will only run if the Scan Type is In-Line.

The new version of Spectrum Analysis is accessed the same way. Just click the drop-down menu button for a Sensor  and then select Spectrum Analysis from the dropdown menu.

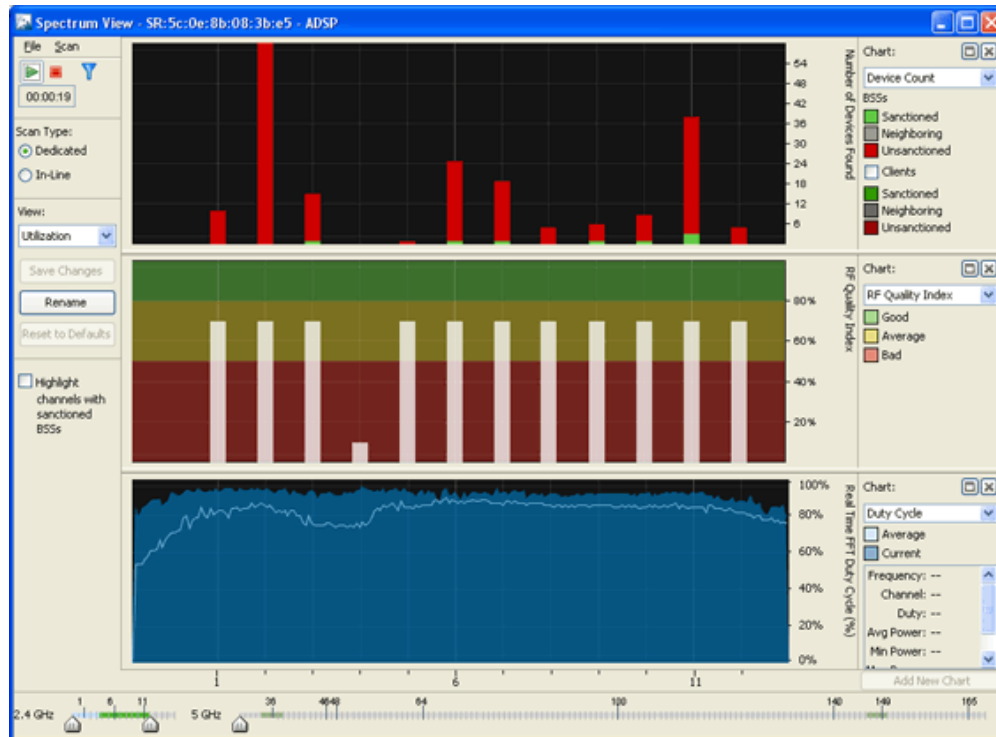


Select **File > Close** to exit the **Spectrum View** window. You will be prompted to save the scan to an AirDefense file. An AirDefense file can be opened by navigating to **Menu > Open > Spectrum Analysis**.

Scanning

A dedicated scan starts automatically when the Spectrum View window is opened. There are three conditions that may prevent a scan from starting. They are:

- The Sensor is already running a dedicated RF scan for any user
- Another user is running Live View on the Sensor
- Ten scans are already running (maximum supported).

If one of these conditions exists, a warning similar to this is displayed:

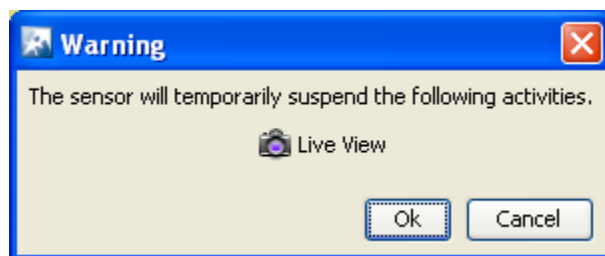


To continue, you will have to click **OK** to suspend the activity. Clicking **Cancel** will stop Advanced Spectrum Analysis from running.

You can stop a scan by clicking the Stop Scan  button or selecting **Scan > Stop Scan**. A new scan can be started by clicking the Start Scan  button or selecting **Scan > Start Scan**.


A counter is displayed next to the **Stop Scan** button to show how long the scan has been running.

The default scanning time is 10 minutes. Scanning time can be adjusted by selecting **Configuration > Appliance Management > Appliance Settings**. If a timeout occurs, the following **Scan Timeout** popup is displayed:

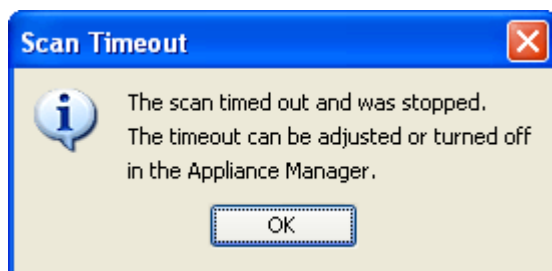

Click **OK** to close the popup.

You can change the scan time, threshold, or duty cycle for dedicated scans by navigating to **File > Dedicated Scan Settings**.

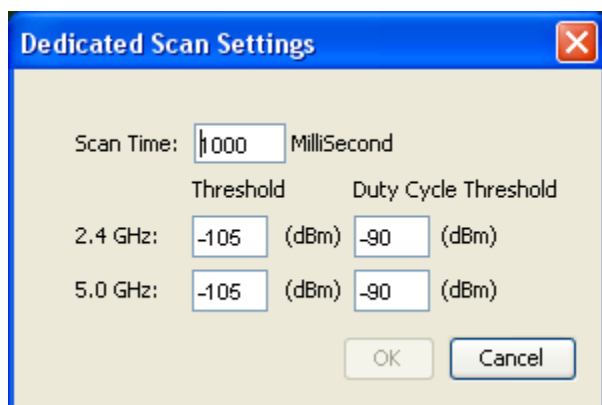

The scan time (default 1000) should be entered in milliseconds. The threshold (default -105 for 2.4 and 5 GHz) and duty cycle (default -90 for 2.4 and 5 GHz) should be entered in dBm. After making changes, click OK to confirm the changes or click Cancel to discard any changes.

Scan Type

Advanced Spectrum Analysis supports two types of scans:


- Dedicated Scan—Conducts a full detailed spectrum scan (default).

- In-Line Scan—Conducts a spectrum scan of all channels minus 802.11 details.

**Note**

To conduct an In-Line Scan, you must enable location tracking RSSI scan under **Configuration > Operational Management > Sensor Operation** and set the refresh rate to 1 second.

You can change the scan type by selecting the appropriate radio button. When the scan type is changed, a warning is displayed.

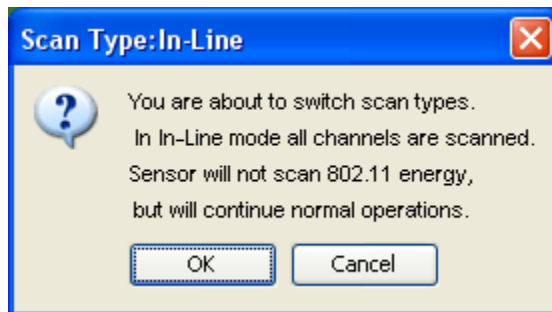

Click **OK** to confirm the scan type change.

Views

Advanced Spectrum Analysis has the following four views that display default charts for each view:

- Utilization—Displays charts that show how your network is being utilized. The default charts are:
 - Device Count
 - RF Quality Index
 - Duty Cycle.
- Physical Layer—Displays charts that highlight the physical layer of your network. The default charts are:
 - Spectrogram
 - Duty Cycle.
- Interference—Displays charts that show interference sources in your network. The default charts are:
 - Interference
 - Spectral Density.
- Spectrum Detail—Displays charts that show the spectrum details of your network. The default charts are:
 - Spectrogram
 - Real Time FFT (Fast Fourier Transform)
 - Spectral Density.

You can change which charts are displayed for each view using the **Charts** drop-down menu. Once you have changed charts and you want to save the changes, click the **Save Changes** button.

You can change the name of a view by clicking the **Rename** button. This allows you to name the views according to your needs. If for any reason you want to retrieve the default views, you can do so by clicking the **Reset to Defaults** button.

Selecting the **Highlight channels with sanctioned BSSs** checkbox highlights the channels with sanction BSSs in all the charts.

Chart Manipulation

The following chart manipulations are available:

- You can display a maximum of 3 charts. If only one or two charts are displayed, click the **Add New Chart** button to add another chart. If three charts are displayed the **Add New Chart** button is inactive.
- You can change a chart's height, by dragging the bar between the charts up or down.
- You can expand a chart to fill the entire chart area by clicking the **Expand**  button. Click the **Restore**  button to restore a chart to its original size.
- You can remove a chart from the chart area by clicking the Close  button.

The 2.4 and 5 GHz channel views are controlled by the sliders at the bottom of the window. The entire 2.4 GHz range is selected by default. By default, no channels in the 5 GHz range are selected.

Schedule Spectrum Analysis

You can schedule Spectrum Analysis for regular Spectrum Analysis or Advanced Spectrum Analysis by selecting **File > Schedule Spectrum Analysis**.

The screenshot shows a Windows-style dialog box titled "Schedule Spectrum Analysis". At the top, it displays "Device: 10.59.36.46 [a.b.g]" with a magnifying glass icon to its right. Below this is a "One Time Schedule" dropdown menu. The "Time:" field is set to "12:00 AM" and the "Date:" field is set to "2/14/12", with a calendar icon next to the date. The "Time Limit:" is set to "5" with a spinner control and the unit "Minute(s)". The "File Name Prefix:" field contains "SA_". There are two tabs: "Spectrum Settings" (selected) and "Advanced Spectrum Settings". Under "Spectrum Settings", there are two radio buttons: "Full Scan" (selected) and "Interference Scan". Below these is a "Pulse Definition" section with two input fields: "Threshold:" set to "-75" with the unit "dBm" to its right, and "Width:" set to "250" with the unit "microseconds" to its right. At the bottom right are "OK" and "Cancel" buttons.

The fields used to schedule a Spectrum Analysis are:

Field	Description
Schedule	There are five options to schedule an assessment. Depending on the option you select, you must fill in the related fields as follows: • One Time Schedule—Choose a time for the assessment by selecting a time from the Time drop-down menu. Then, select a day for the assessment by clicking the Calendar button in the Date field and selecting a date. • Intra-Day Schedule—Select a time to begin the assessment. Then, select a frequency in hours. • Daily Schedule—Select a frequency in day, weekdays only, or weekends only. Then, select a time of day. • Weekly Schedule—Choose a frequency in days. Then, select a day or multiple days to conduct the assessment by clicking the checkbox next to the day to place a checkmark in the box. • Monthly Schedule—Choose the months that you want to run a assessment by clicking the checkbox next to the month(s) to place a checkmark in the box(es). Then, select a day of the month to conduct the assessment. Last, specify a time of day.
Time Limit	Places a time limit on how long the Spectrum Analysis will run.
File Name Prefix	Defines a prefix for the Spectrum Analysis (ADSA) file that is saved when the Spectrum Analysis is complete. You may add to the prefix if you want to. The saved file can be opened by selecting Menu > Open > Spectrum Analysis .
Spectrum Settings	Only used in regular Spectrum Analysis. These are the same Spectrum Settings described under In the Sensor Operation settings of the Sensor Monitoring category under the Configuration tab, there is an option to enable background scanning..
Advanced Spectrum Settings	Only used in Advanced Spectrum Analysis. These are the Dedicated Scan Settings described under Each time a scan is started, the table clears and is updated when data becomes available..

You can switch devices by clicking **Search** button.

Device Search- ADSP

Scope: ADSP

Search Now

New Search

Criteria

MAC Address: [dropdown]

Name: [text box]

IP Address: [text box]

802.1x Username: [text box]

Vendor: [text box]

DNS Name: [text box]

SSID: [text box]

Supports 802.11a: ☐ Yes ☐ No ☒ Either

Supports 802.11b: ☐ Yes ☐ No ☒ Either

Supports 802.11g: ☐ Yes ☐ No ☒ Either

Supports 802.11n: ☐ Yes ☐ No ☒ Either

Results:

[Empty text area]

Close


When searching, you can supply additional information such as:

- Select the scope from the network tree
- The MAC address of the device
- The name of the device
- The IP address of the device
- The 802.1x username used for authentication
- The vendor name of the device
- The DNS name used by the device
- The SSID of the device
- Select whether or not the device supports the 802.11a, b, g, or n protocols.

Once you have entered the search criteria, click the **Search Now** button. The results are displayed in the Results area. Select the device that you want to run Spectrum Analysis on and then click **Close**.

Terminate

AirDefense lets you terminate the connection between your wireless LAN and any BSS or Wireless Client associated with it. In the case of BSSs, all Wireless Clients associated to the BSS are de-authenticated.

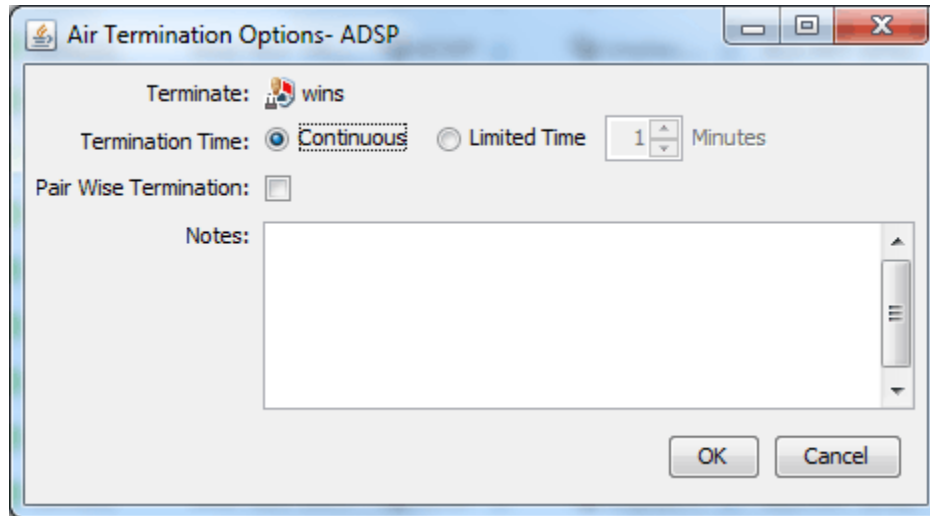


Network Level Drop-down Menus

Each network level has a drop-down menu containing functions that operate on the selected network level. You can configure the following network levels:

- Appliance
- Country
- Region
- City
- Campus
- Building
- Floor.


Appliance Level Drop-down Menu

The Appliance level drop-down menu contains functions that you can apply to the selected Appliance as well as the features included in the Menu. Click the drop-down menu button  next to the Appliance name to display the drop-down menu.

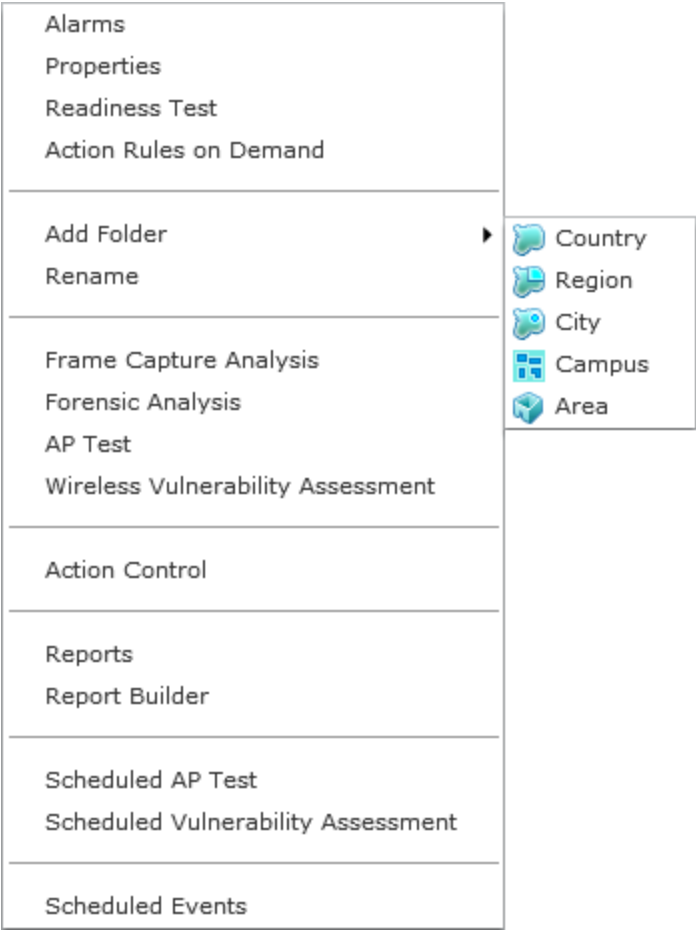


The drop-down menu for appliances contains the following functions:

Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected Appliance. See Alarms on page 476 for more information.
Properties	Opens the Properties overlay for the selected Appliance.
Readiness Test	Validates that devices in the appliance scope are management ready (that is, devices can be manage through ASDP). You are alerted of problem areas. (See Readiness Test on page 734 for more information.)

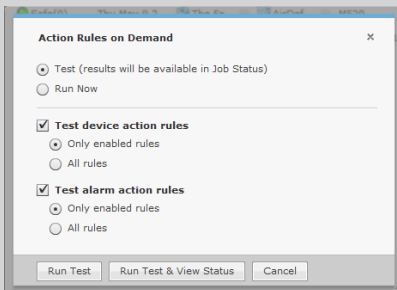Function	Description
Action Rules on Demand	Runs an on demand test on your alarm action rules and/or device action rules.  You can run the test and view the results later in Job Status on page 604, or you can run the test now and view the results now. There are two options for each type of test: • Only enabled rules-run test on the enabled rules. • All rules-run test on all rules (enabled or not). This option is deactivated on run now tests.
Add Folder	Adds a new folder to the network tree by selecting one of the available network levels. The added folder is given a generic name. You should rename the new folder.
Rename	Opens a dialog window to rename the selected Appliance.
Frame Capture Analysis	Accesses Frame Capture Analysis window. See Frame Capture Analysis on page 386 for more information.
Forensic Analysis	Accesses Forensic AnalysisBasic. See Forensic Analysis-Basic on page 387 for more information.
AP Test	Accesses Scheduled AP Tests. See Scheduled AP Tests on page 405 for more information.
Wireless Vulnerability Assessment	Accesses Scheduled Vulnerability Assessment. See Schedule a Vulnerability Assessment on page 409 for more information.
Action Control	Accesses Advanced vs. Basic Forensic Analysis.
Reports	Accesses Reports (Web Reporting Interface).
Report Builder	Accesses the Report Builder (Report Builder).
Scheduled AP Test	Accesses Scheduled AP Tests.
Scheduled Vulnerability Assessment	Accesses Scheduled Vulnerability Assessment.
Scheduled Events	Accesses Scheduled Events.


Country Level Drop-down Menu

The Country level drop-down menu contains functions that you can apply to the selected Country level. Click the drop-down menu button  next to the Country name to display the drop-down menu.

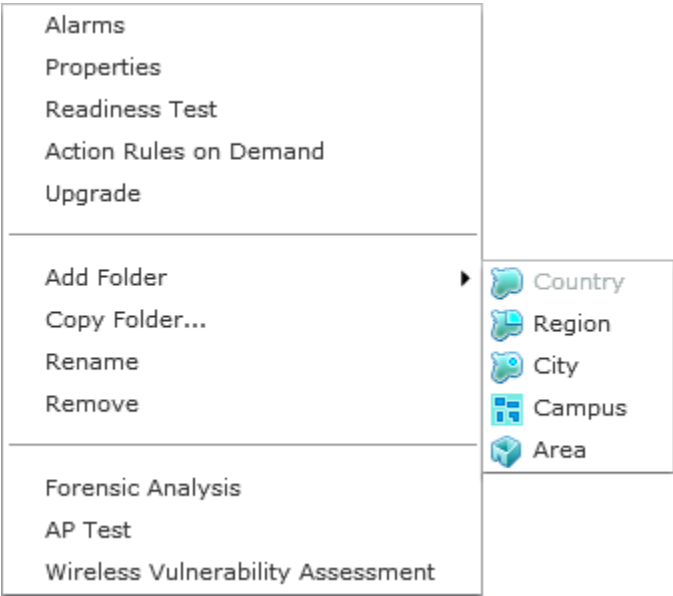


The drop-down menu for countries contains the following functions:

Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected Country. See Frame Capture Analysis on page 386 for more information.
Properties	Opens the Properties overlay for the selected Country.
Readiness Test	Validates that devices in the country scope are management ready (that is, devices can be manage through ASDP). You are alerted of problem areas. You are alerted of problem areas. (See Readiness Test on page 734 for more information.)
Action Rules on Demand	Runs an on demand test on your alarm action rules and/or device action rules. The screenshot shows a dialog box titled 'Action Rules on Demand'. It has two radio buttons at the top: 'Test (results will be available in Job Status)' (which is selected) and 'Run Now'. Below these are two sections. The first section is 'Test device action rules' with a checked checkbox and two radio buttons: 'Only enabled rules' (selected) and 'All rules'. The second section is 'Test alarm action rules' with a checked checkbox and two radio buttons: 'Only enabled rules' (selected) and 'All rules'. At the bottom are three buttons: 'Run Test', 'Run Test & View Status', and 'Cancel'. You can run the test and view the results later in Job Status on page 604, or you can run the test now and view the results now. There are two options for each type of test: • Only enabled rules-run test on the enabled rules. • All rules-run test on all rules (enabled or not). This option is deactivated on run now tests.
Upgrade	Upgrades the firmware for devices in the selected Country.

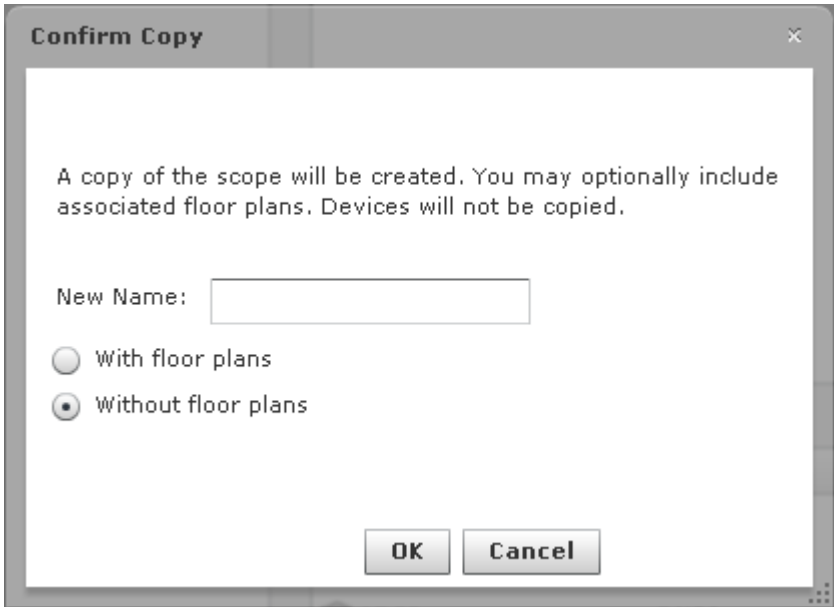
Function	Description
Add Folder	Adds a new folder to the network tree by selecting one of the available network levels. The added folder is given a generic name. You should rename the new folder.
Copy Folder	Copies the network scope of a Country.  The 'Confirm Copy' dialog box contains the following text: 'A copy of the scope will be created. You may optionally include associated floor plans. Devices will not be copied.' Below this text is a 'New Name:' label followed by a text input field. There are two radio buttons: 'With floor plans' (unselected) and 'Without floor plans' (selected). At the bottom right are 'OK' and 'Cancel' buttons. Enter a name for the country, select if you want the to include the floor plans or not, and click OK.
Rename	Opens a dialog window to rename the selected Country.
Remove	Removes the selected Country from your network.
Forensic Analysis	Accesses Forensic Analysis-Basic for this country. See Forensic Analysis-Basic on page 387 for more information.
AP Test	Accesses AP Tests (Scheduled AP Tests). See Scheduled AP Tests on page 405 for more information.
Wireless Vulnerability Assessment	Accesses Wireless Vulnerability Assessment. (Scheduled Vulnerability Assessment). See On-Demand Vulnerability Assessment on page 801 for more information.


Region Level Drop-down Menu

The Region level drop-down menu contains functions that you can apply to the selected Region level. Click the drop-down menu button  next to the Region name to display the drop-down menu.

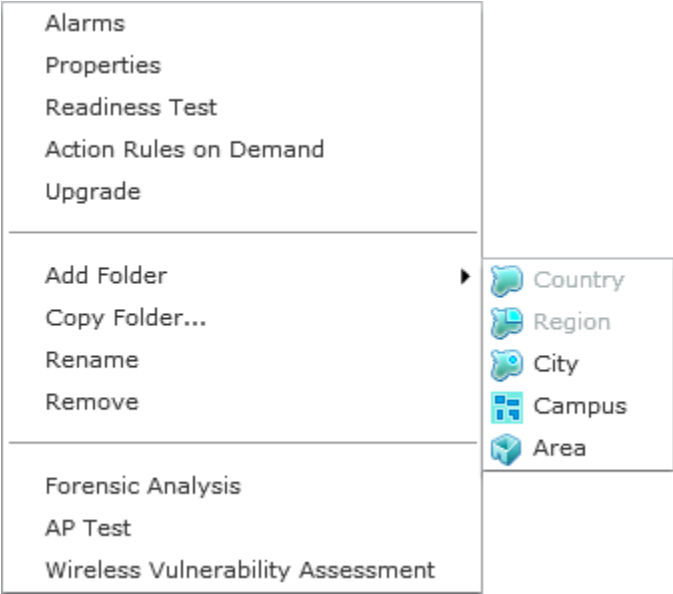


The drop-down menu for regions contains the following functions:

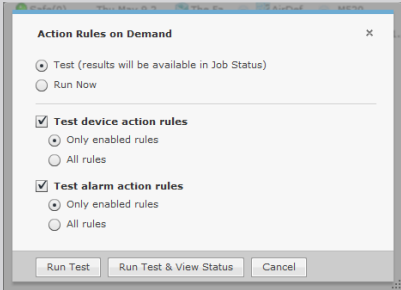Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected Region. See Alarms on page 476 for more information.
Properties	Opens the Properties overlay for the selected Region.
Readiness Test	Validates that devices in the region scope are management ready of problem areas. You are alerted of problem areas. (See Readiness Test on page 734 for more information.)
Action Rules on Demand	Runs an on demand test on your alarm action rules and/or device action rules.  You can run the test and view the results later in Job Status on page 604, or you can run the test now and view the results now. There are two options for each type of test: • Only enabled rules-run test on the enabled rules. • All rules-run test on all rules (enabled or not). This option is deactivated on run now tests.

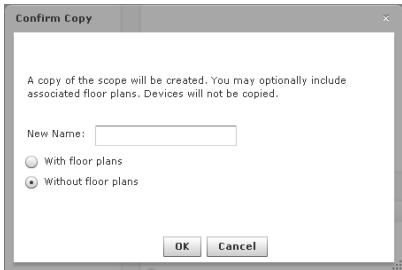
Function	Description
Upgrade	Upgrades the firmware for devices in the selected Region.
Add Folder	Adds a new folder to the network tree by selecting one of the available network levels. The added folder is given a generic name. You should rename the new folder.
Copy Folder	Copies the network scope of a Region.  Enter a name for the region, select if you want the to include the floor plans or not, and click OK.
Rename	Opens a dialog window to rename the selected Region.
Remove	Removes the selected Region from your network. See Remove Devices on page 470 for more information.
Forensic Analysis	Accesses Forensic Analysis—Basic. See Forensic Analysis-Basic on page 387 for more information.
AP Test	Accesses AP Test (Scheduled AP Tests). See Scheduled AP Test for more information.
Wireless Vulnerability Assessment	Accesses Wireless Vulnerability Assessment (Scheduled Vulnerability Assessment). See Wireless Vulnerability Assessment for more information.


City Level Drop-down Menu

The City level drop-down menu contains functions that you can apply to the selected City level. Click the drop-down menu button  next to the City name to display the drop-down menu.

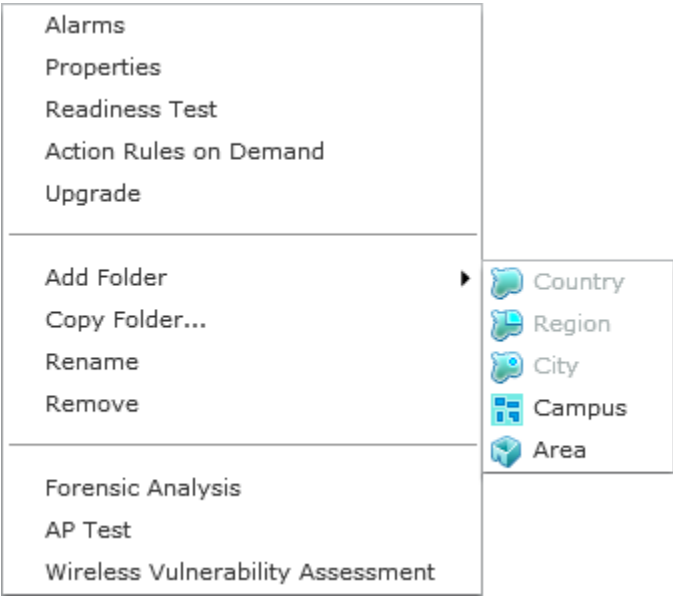


The drop-down menu for cities contains the following functions:

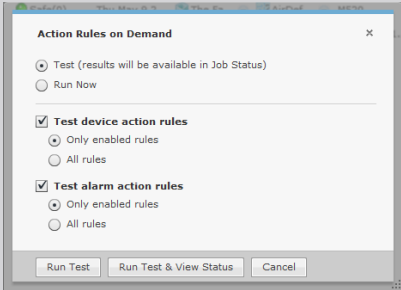Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected City. See Alarms on page 476 for more information.
Properties	Opens the Properties overlay for the selected City.
Readiness Test	Validates that devices in the city scope are management ready (that is, devices can be manage through ASDP). You are alerted of problem areas. (See Readiness Test on page 734 for more information.)
Action Rules on Demand	Runs an on demand test on your alarm action rules and/or device action rules.  You can run the test and view the results later in Job Status on page 604, or you can run the test now and view the results now. There are two options for each type of test: • Only enabled rules-run test on the enabled rules. • All rules-run test on all rules (enabled or not). This option is deactivated on run now tests.
Upgrade	Upgrades the firmware for devices in the selected City.


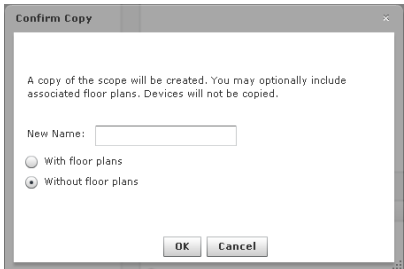
Function	Description
Add Folder	Adds a new folder to the network tree by selecting one of the available network levels. The added folder is given a generic name. You should rename the new folder.
Copy Folder	Copies the network scope of a City.  Enter a name for the city, select if you want the to include the floor plans or not, and click OK.
Rename	Opens a dialog window to rename the selected City.
Remove	Removes the selected City from your network.
Forensic Analysis	Accesses Forensic Analysis—Basic. See Forensic Analysis-Basic on page 387 for more information.
AP Test	Accesses AP Test (Scheduled AP Tests). See Scheduled AP Test for more information.
Wireless Vulnerability Assessment	Accesses Wireless Vulnerability Assessment. See Schedule a Vulnerability Assessment on page 409 for more information.

Campus Level Drop-down Menu

The Campus level drop-down menu contains functions that you can apply to the selected Campus level. Click the drop-down menu button  next to the Campus name to display the drop-down menu.

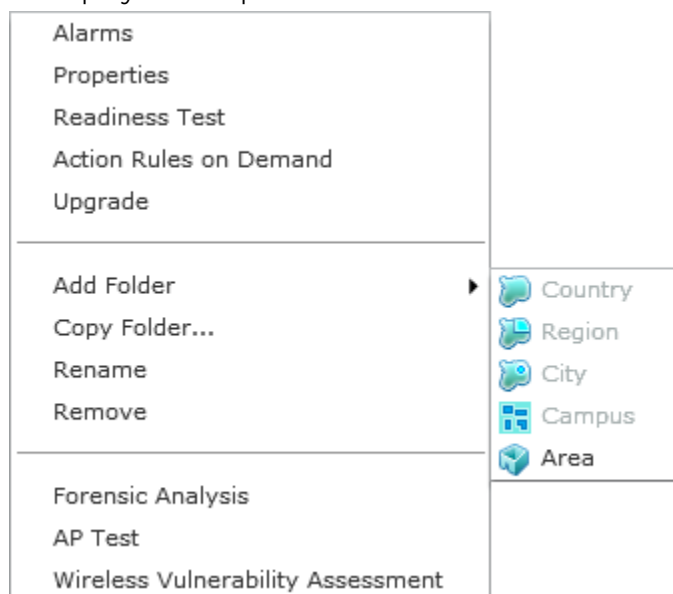

The drop-down menu for campuses contains the following functions:

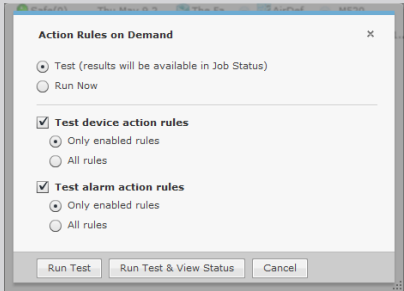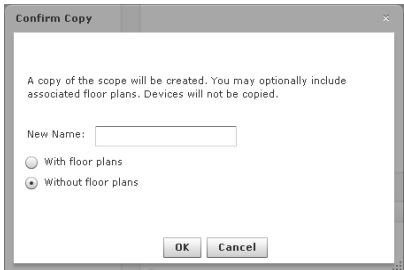Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected Campus. See Alarms on page 476 for more information.
Properties	Opens the Properties overlay for the selected Campus.
Readiness Test	Validates that devices in the campus scope are management ready (that is, devices can be managed through ASDP). You are alerted of problem areas. (See Readiness Test on page 734 for more information.)
Action Rules on Demand	Runs an on demand test on your alarm action rules and/or device action rules.  You can run the test and view the results later in Job Status on page 604, or you can run the test now and view the results now. There are two options for each type of test: • Only enabled rules-run test on the enabled rules. • All rules-run test on all rules (enabled or not). This option is deactivated on run now tests.
Upgrade	Upgrades the firmware for devices in the selected Campus.
Add Folder	Adds a new folder to the network tree by selecting one of the available network levels. The added folder is given a generic name. You should rename the new folder.
Copy Folder	Copies the network scope of a Campus.  Enter a name for the campus, select if you want the to include the floor plans or not, and click OK.
Rename	Opens a dialog window to rename the selected Campus.

Function	Description
Remove	Removes the selected Campus from your network.
Forensic Analysis	Accesses Forensic Analysis—Basic. See Forensic Analysis-Basic on page 387 for more information.
AP Test	Accesses AP Test (Scheduled AP Tests). See Scheduled AP Test for more information.
Wireless Vulnerability Assessment	Accesses Wireless Vulnerability Assessment (Scheduled Vulnerability Assessment). See Schedule a Vulnerability Assessment on page 409 for more information.



Area (Building) Level Drop-down Menu

The Area (Building) level drop-down menu contains functions that you can apply to the selected Area level. Click the drop-down menu button  next to the Area name to display the drop-down menu.

Alarms
Properties
Readiness Test
Action Rules on Demand
Live RF / Floor Plan
Upgrade
Copy Folder...
Rename
Remove
Forensic Analysis
AP Test
Wireless Vulnerability Assessment

The drop-down menu for buildings contain the following functions:

Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected Area. See Alarms on page 476 for more information.
Properties	Opens the Properties overlay for the selected Area.
Readiness Test	Validates that devices in the area scope are management ready (that is, devices can be manage through ASDP). You are alerted of problem areas. (See Readiness Test on page 734 for more information.)

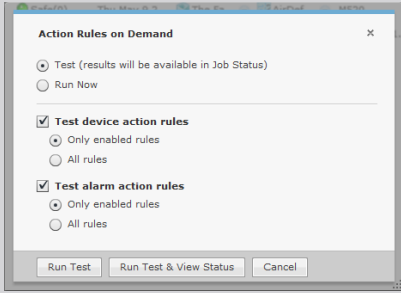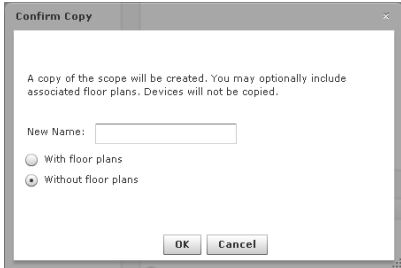Function	Description
Action Rules on Demand	Runs an on demand test on your alarm action rules and/or device action rules.  You can run the test and view the results later in Job Status on page 604, or you can run the test now and view the results now. There are two options for each type of test: • Only enabled rules-run test on the enabled rules. • All rules-run test on all rules (enabled or not). This option is deactivated on run now tests.
Live RF / Floor Plan	Views the floor plan for a area where you can manipulate the floor plan, add devices, and track devices.
Upgrade	Upgrades the firmware for devices in the selected Area.
Copy Folder	Copies the network scope of a Area.  Enter a name for the building, select if you want the to include the floor plans or not, and click OK.
Rename	Opens a dialog window to rename the selected Area.
Remove	Removes the selected Area from your network.
Forensic Analysis	Accesses Forensic Analysis—Basic. See Forensic Analysis-Basic on page 387 for more information.
AP Test	Accesses AP Test (Scheduled AP Tests). See Scheduled AP Test for more information.
Wireless Vulnerability Assessment	Accesses Wireless Vulnerability Assessment (Scheduled Vulnerability Assessment). See Schedule a Vulnerability Assessment on page 409 for more information.


Live RF/Floor Plan Level Drop-down Menu

The Live RF/Floor Plan level drop-down menu contains functions that you can apply to the selected floor level. Click the drop-down menu button  next to the Floor name to display the drop-down menu.

Alarms
Properties
Readiness Test
Action Rules on Demand
Live RF / Floor Plan
Upgrade
Rename
Forensic Analysis
AP Test
Wireless Vulnerability Assessment
Add Device

The drop-down menu for floors contain the following functions:

Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected Floor. See Alarms on page 476 for more information.
Properties	Opens the Properties overlay for the selected Floor.
Readiness Test	Validates that devices in the building scope are management ready (that is, devices can be managed through ASDP). You are alerted of problem areas. (See Readiness Test on page 734 for more information.)

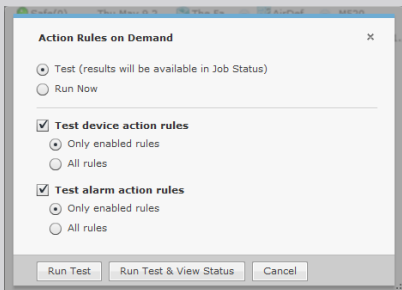Function	Description
Action Rules on Demand	Runs an on demand test on your alarm action rules and/or device action rules.  You can run the test and view the results later in Job Status on page 604, or you can run the test now and view the results now. There are two options for each type of test: • Only enabled rules-run test on the enabled rules. • All rules-run test on all rules (enabled or not). This option is deactivated on run now tests.
Live RF / Floor Plan	Views the floor plan for a building where you can manipulate the floor plan, add devices, and track devices.
Upgrade	Upgrades the firmware for devices in the selected Floor.
Rename	Opens a dialog window to rename the selected Floor.
Forensic Analysis	Accesses Forensic Analysis-Basic. See Forensic Analysis-Basic on page 387 for more information.
AP Test	Accesses AP Test (Scheduled AP Tests). See Scheduled AP Test for more information.
Wireless Vulnerability Assessment	Accesses Wireless Vulnerability Assessment (Scheduled Vulnerability Assessment). See Schedule a Vulnerability Assessment on page 409 for more information.
Add Device	Adds devices to the AirDefense Services Platform. Add devices to AirDefense. See Add Devices for more information.

Creating Floor Plans

You can use the Floor Plan to lay out floors in a building, view Live RF data, locate devices, add additional floors to a building, and plan where to place devices on a floor for maximum coverage. To create a floor plan:

1. Upload an background image to use as a guide to insert walls, cubicles, doors, elevators, etc.
2. Add additional floors if your building contains two or more floors.
3. Use the editing tools to insert walls, cubicles, doors, elevators, etc.

Maximum Size Allowed for a Scaled Floor Plan

There is a maximum size for the amount of territory covered in a floor plan. The maximum diagonal (line drawn from the bottom-left corner to the upper-right corner) is 1000 meters. If you scale the floor plan beyond a 1000 meter limit, regardless of the image size, the RF Modeling Engine crashes and generates an error message: Design bounds exceeding maximum design area.




Note

The maximum total amount of territory (real estate) for a scaled floor plan is determined by a diagonal line from the two furthest corners of the diagram. This line can be no longer than 1000 meters (3280 ft.) For a perfectly square floor plan, this represents a single side of no greater than 707.1 meters (2320 ft.) and a total area of 50,000 sq meters (538,196 sq ft.)

Uploading Background Image

The first time that you access a Floor Plan, you will need to upload a background image for your first floor. If you are accessing a Floor Plan from an area (building), the first floor is selected. If you are accessing a Floor Plan from a floor, that floor is selected.

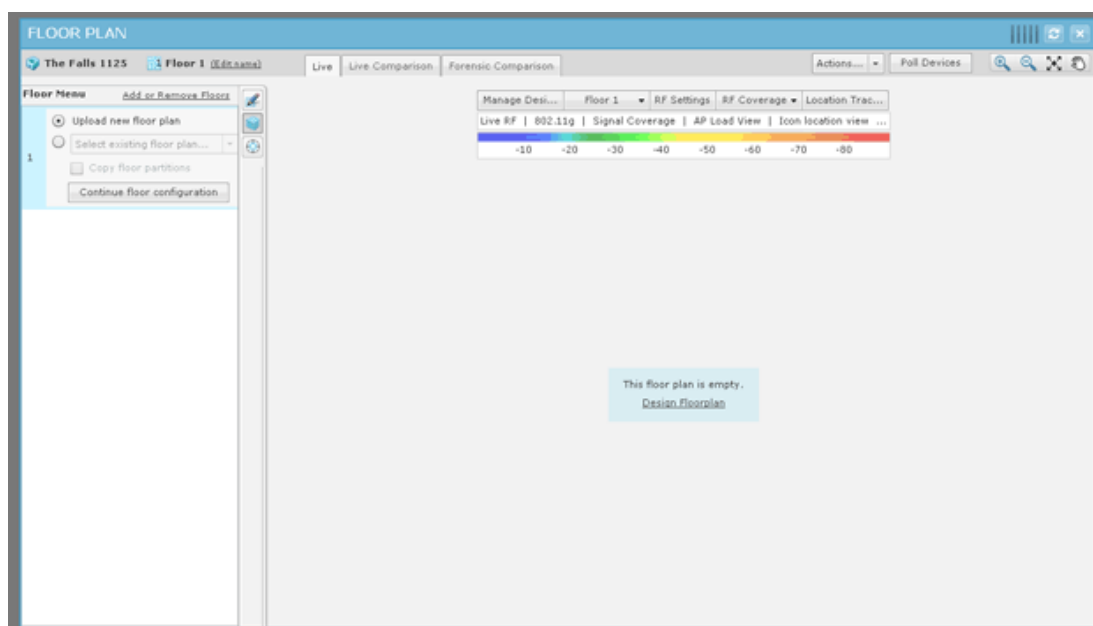


When the floor plan is complete, you will need to click the **Close** button X to save and close. The Floor Plan can then be viewed throughout AirDefense, and can be used to locate devices in your network and display Live RF data.


To upload a background image, click the **Continue floor configuration** button or the **Design Floorplan** link to get started.

**Note**


The Floor Plan single dimension limit (width or height) is 8192 pixels while the total pixel count (width x height) limit is 8,000,000 pixels. If the appliance has at least 2GB of memory, the total pixel count may be as high as 16,777,215 pixels but the single dimension limit is still 8192 pixels.

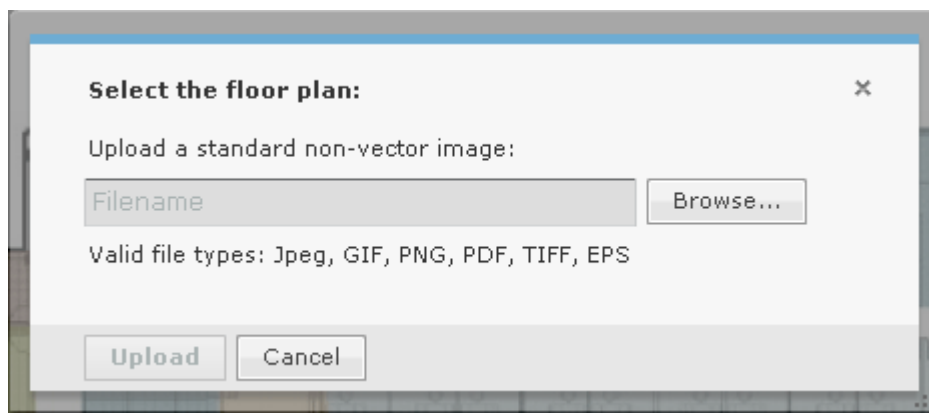

1. Click the **Browse** button.

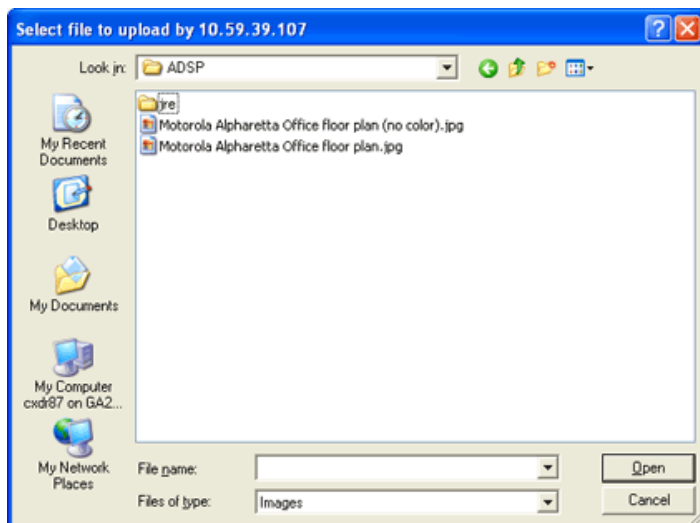


2. Browse to the location of the image, select it (usually a BMP, GIF, or JPG file), and then click **Open**. The **Upload** button is now active. Click it.

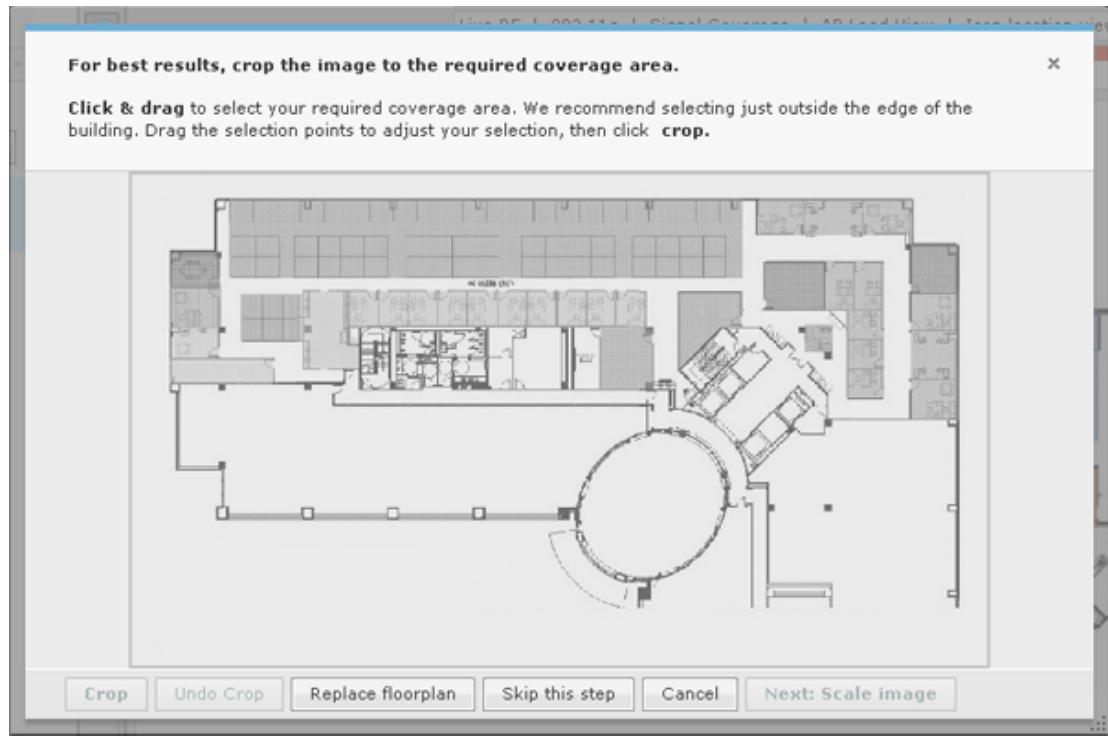

This is the Floor Plan wizard. You can use it to guide you through adding a floor to your Floor Plan.

3. You can crop the image to only show the area you are concerned with. Draw a rectangle around the area you want to crop by:
 - a. Clicking on a point in the image.
 - b. Dragging your mouse to draw the rectangle.
 - c. Clicking the end points of the rectangle.
4. Click the **Crop** button to complete cropping the image.

5. Click the **Next: Scale Image** button.

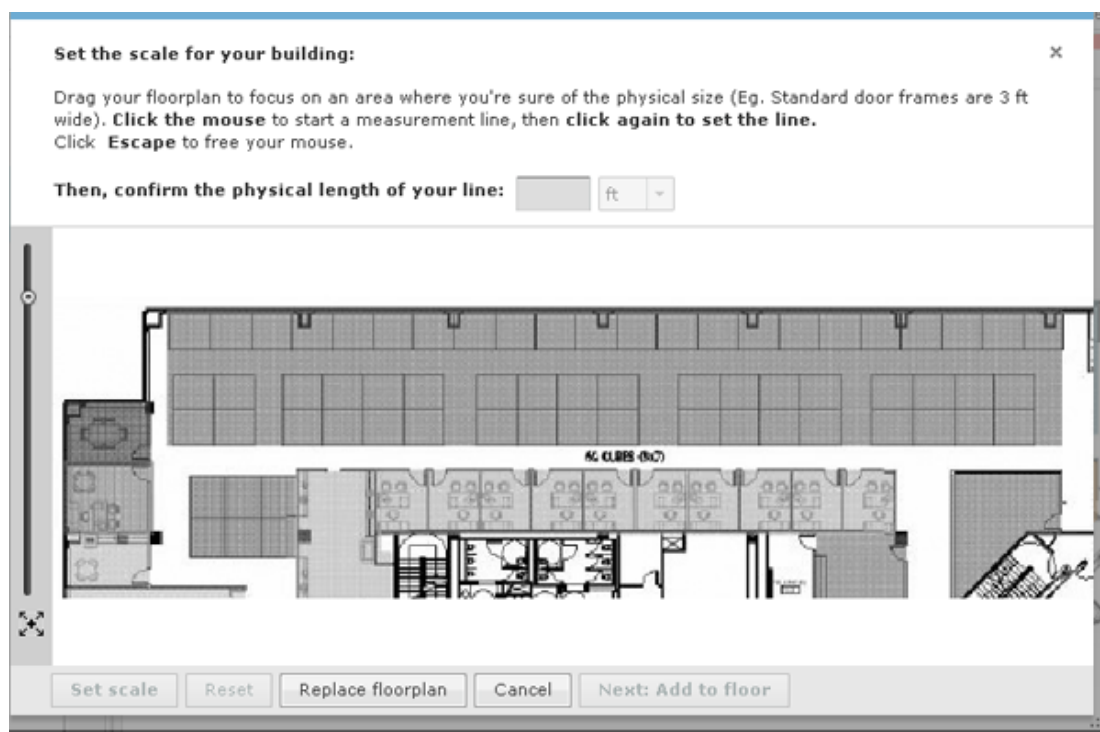


6. Scale your image by clicking on a point in the image, draw a line, and then click an end point. Enter the distance of the line which represents the actual length of the physical space in feet or meters. The **Set scale** button is activated. Click it to complete scaling.

- The **Next: Add to floor** button is activated. Click it to add the floor to your floor plan.

**Note**

You can undo any changes by clicking the **Cancel** button. You can remove an image by clicking the **Replace floor plan** button.

Your uploaded floor plan will look similar to the following one:

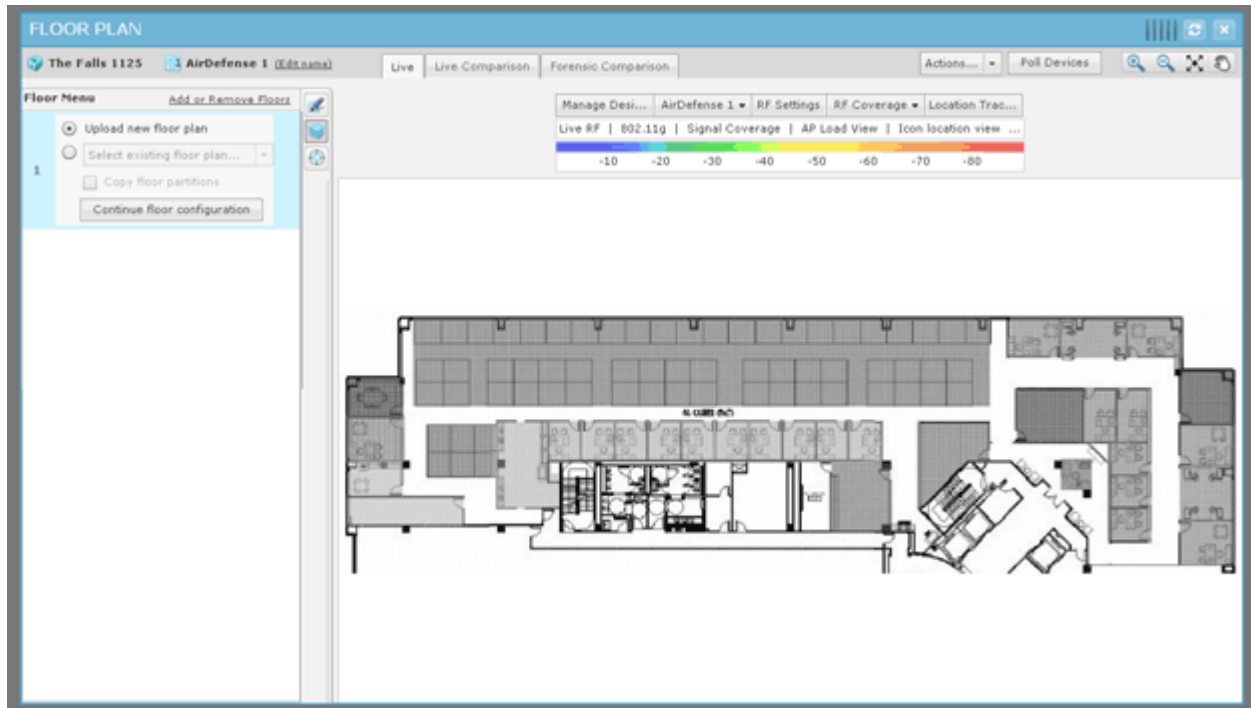

You can now use the editing tools to add walls, cubicles, doors, elevators, etc. This allows you to account for building obstacles when AirDefense does calculations to locate devices and/or to display Live RF data.


Add Additional Floors

To add an additional floor to your building:


- Reveal the existing floors by clicking anywhere on the **Floor Plan Toolbar**.

**Note**


Clicking the **Floor Plan Toolbar** also removes floor selection from view.

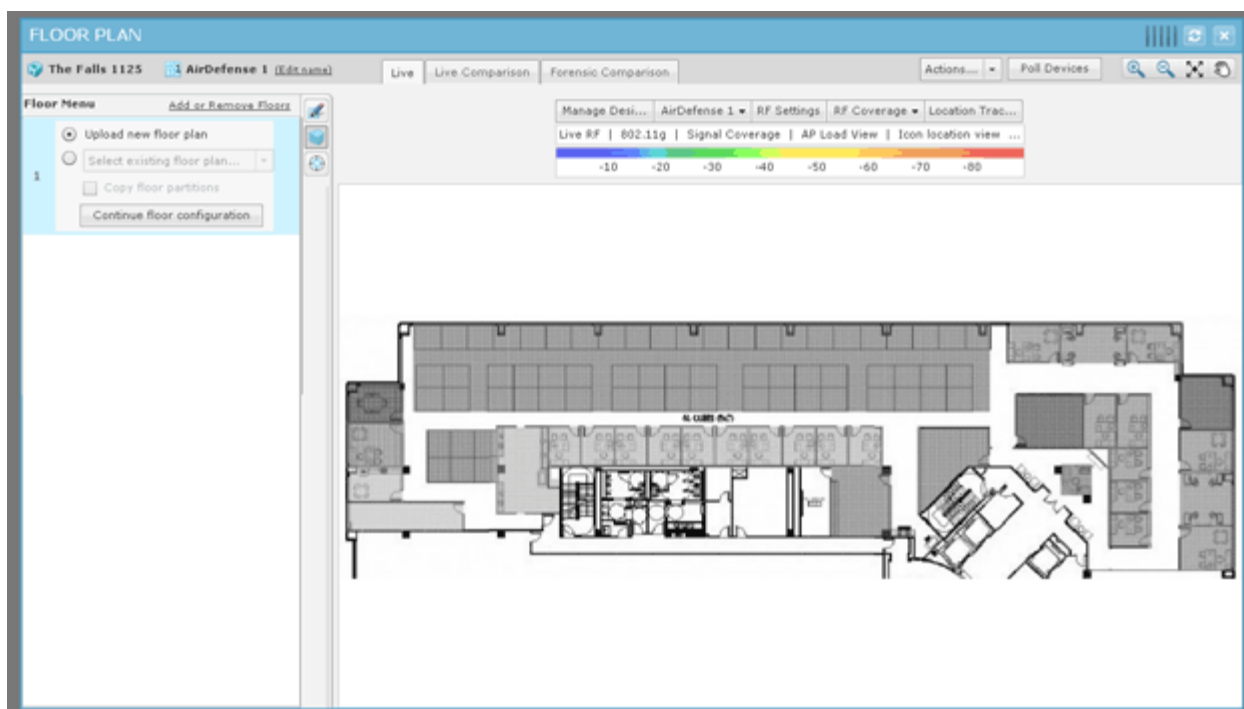

2. Click the **Add or Remove Floors** link. The following dialog box is displayed:

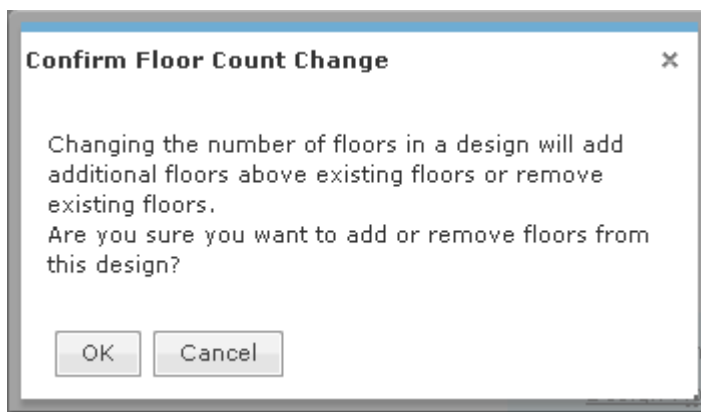


3. Click **OK** to continue to the following dialog box:

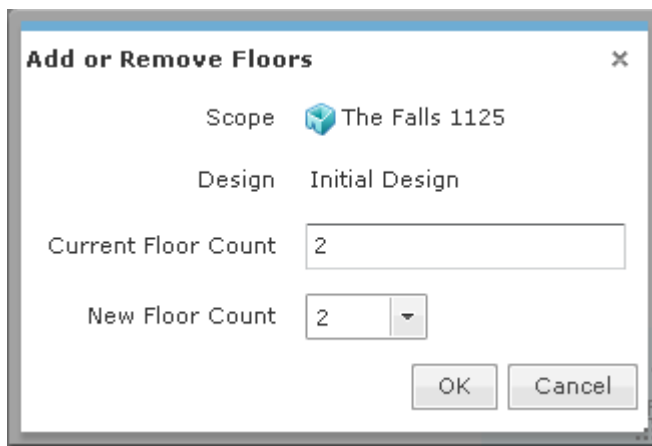

4. Click the **New Floor Count** drop-down and select a floor number.

If you increase the floor count, floors are added accordingly. You can have as many as 100 floors in a building. If you decrease the floor count, floors are removed starting at the top floor. Click OK to make the change.

5. After you add a floor, you will need to upload a background image for your floor or design a new floor plan. The following floor plan shows a building with two floors:

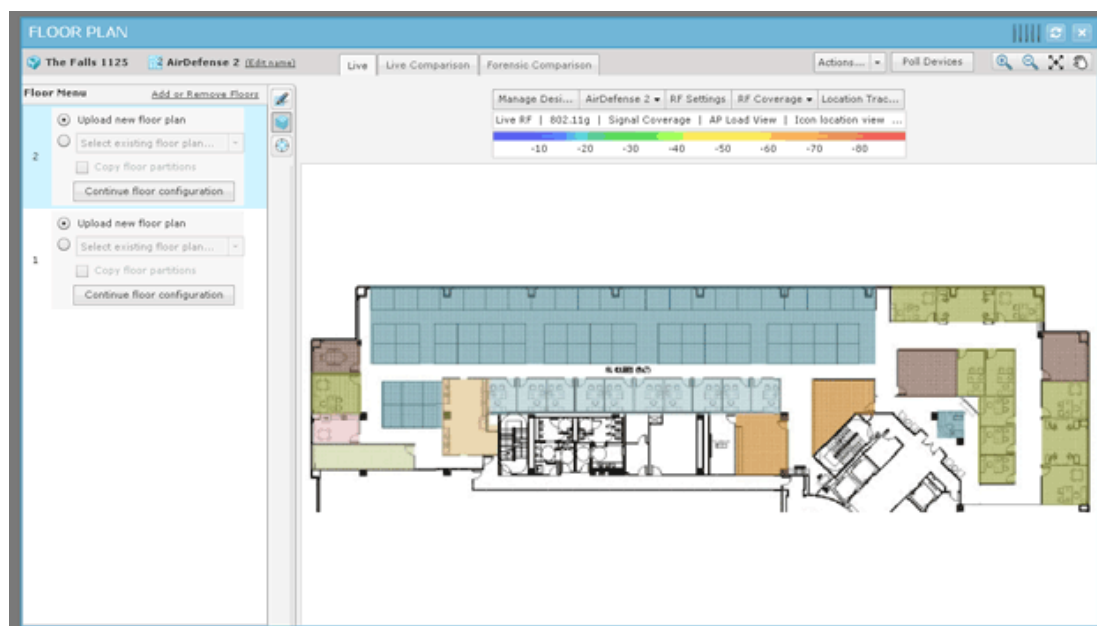


6. To access the different floors within a building, click the thumbnail image for the floor located in the left pane.

Edit Floor Plans

Editing a floor plan involves:

- Using the tools to design (draw) or alter the floor plan.
- Adding devices to your floor plan to view Live RF data and locate devices.
- Using the advanced controls to enhance the floor plan.

Click the Edit Mode  button (part of the Floor Plan toolbar) to edit a floor plan.

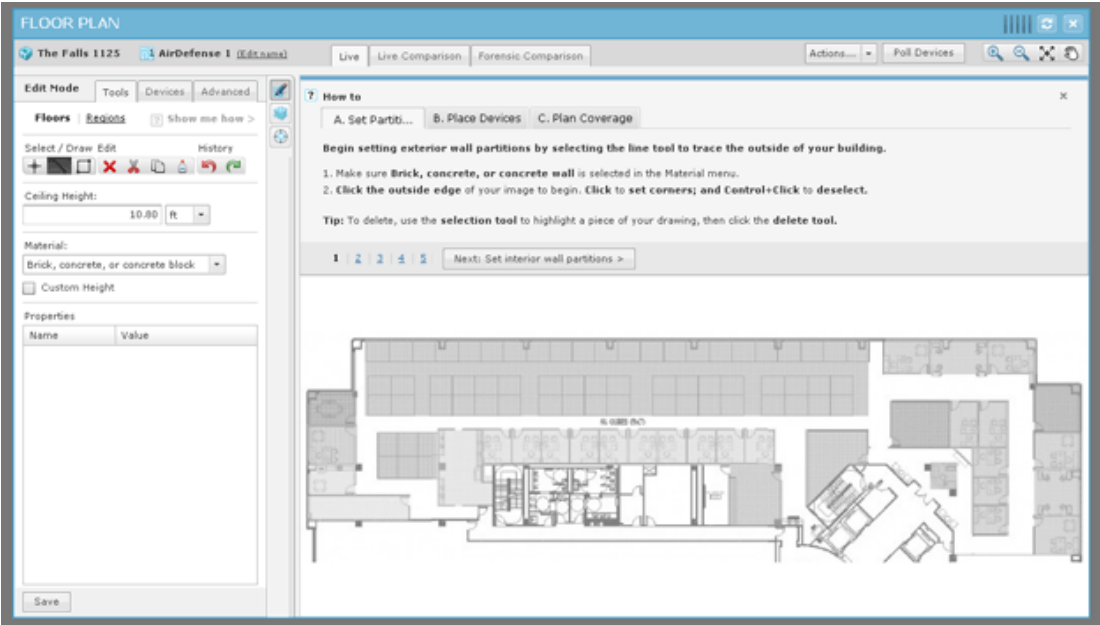

The first time you enter the Edit Mode the How to wizard is accessed. The How to wizard guides you step-by-step through the editing process to set up your Floor Plan. You can hide the How to wizard by clicking its **Close (X)** button and edit your Floor Plan as you like using the Tools, Devices, and Advanced tabs. If the How to wizard is hidden, you can access it by clicking the **Show me how** link.

While editing a floor plan, in addition to the editing tools, you have access to the [Floor Plan Actions](#) on page 775 and the [Context Label](#) on page 771.



Note
The Context Label is only visible when you hide the How to wizard.

You can switch between Floor Plan views using the following tabs:

Links	Description
Live	Displays a single floor with the Live RF heat map. This is where you edit your Floor Plan.
Live Comparison	Displays two views of the floor plan side-by-side so that you can make a comparison.
Forensic Comparison	Displays two heat maps for comparison: one with Live RF data and one with forensic RF data.

Click Save to save any changes.


Global Tools

Global tools are tools that are available on all Floor Plan pages. They are:


- Context Label
- Actions
- Floor manipulation.



Context Label


The Context Label, located near the top-center of the Floor Plan, controls the context of the Floor Plan.


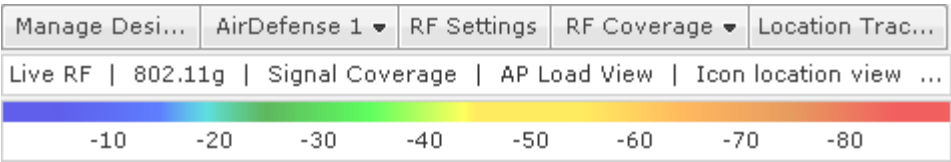


The Context Label shows you the following information:

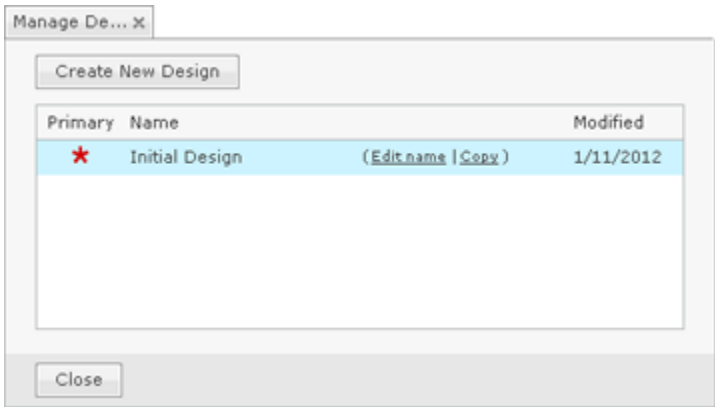Field	Description
Manage Designs	When this field is clicked, a list of existing designs is displayed:  You can edit or add to the list using the following actions: - Click the Primary field for a design to make it the primary design. - Click on the Edit name link to change the name. - Click the Copy button to create a new design identical to the selected design. A name for the new design is auto-generated and can be changed using the Edit name link. - Click the Remove (X) button (last column of a design) to remove a design. You cannot remove the primary design. An undo remove link is displayed when a design is removed in case you change your mind. - Click the Create New Design button to create a new design. A name for the new design is auto-generated and can be changed using the Edit name link. Click Close to exit the design manager.
Floor Selection	This field shows the selected floor. If you click the field, you can select another floor to view. 
RF Settings	RF Settings includes: - RF Mode setting - Protocol setting - AP Load View setting - Network Association Filter.

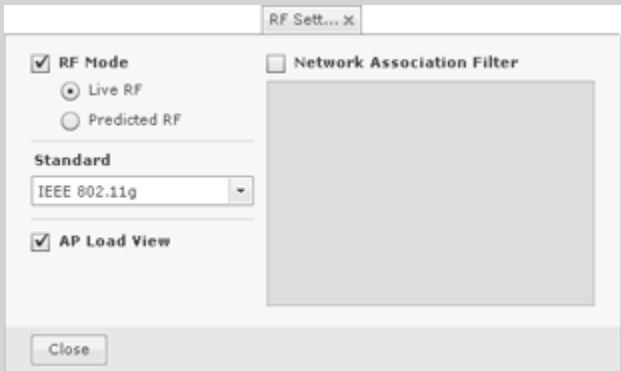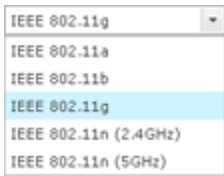
Field	Description
RF Mode Setting	The RF Mode setting determines if your heat maps display no RF data (deselected), Live RF data (selected), or Predicted RF data (selected). 
Protocol Setting	The Protocol setting allows you to filter RF data according to the selected protocol. 
AP Load View Setting	The AP Load View setting, when selected, displays a circle around any AP that has Wireless Clients associated with it. Layered on the circle is a smaller circle displaying the number of associated Wireless Clients.  Click on the smaller circle to display all the associated Wireless Clients in a table. 

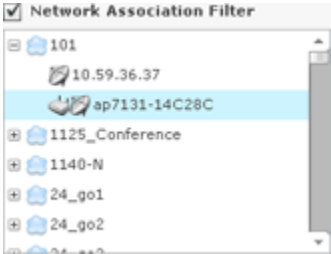Field	Description																										
Network Association Filter Setting	The Network Association Filter is where the network device association is shown in a network tree. You may select an entire SSID or individual devices. 																										
RF Coverage	This field lets you select the coverage visualization or application coverage for your heat maps. If you click the field, you can select another visualization or application.  <table><thead><tr><th>Application Coverage</th><th>Coverage Visualization</th></tr></thead><tbody><tr><td>Basic WiFi Connectivity</td><td>Channel Coverage</td></tr><tr><td>Location Tracking</td><td>Co-Channel Interference</td></tr><tr><td>Mobile Handhelds</td><td>Compliance Monitoring</td></tr><tr><td>Video Surveillance</td><td>Contributing Devices</td></tr><tr><td>Wireless VoIP Handsets</td><td>Coverage Hole</td></tr><tr><td></td><td>Coverage Overlap</td></tr><tr><td></td><td>Noise</td></tr><tr><td></td><td>Peak Data Rate</td></tr><tr><td></td><td>Rogue Detection</td></tr><tr><td></td><td>Signal Coverage</td></tr><tr><td></td><td>Signal To Interference</td></tr><tr><td></td><td>Termination</td></tr></tbody></table> Visualizations and applications are configured in Configuration > Network Assurance > Live RF Settings.	Application Coverage	Coverage Visualization	Basic WiFi Connectivity	Channel Coverage	Location Tracking	Co-Channel Interference	Mobile Handhelds	Compliance Monitoring	Video Surveillance	Contributing Devices	Wireless VoIP Handsets	Coverage Hole		Coverage Overlap		Noise		Peak Data Rate		Rogue Detection		Signal Coverage		Signal To Interference		Termination
Application Coverage	Coverage Visualization																										
Basic WiFi Connectivity	Channel Coverage																										
Location Tracking	Co-Channel Interference																										
Mobile Handhelds	Compliance Monitoring																										
Video Surveillance	Contributing Devices																										
Wireless VoIP Handsets	Coverage Hole																										
	Coverage Overlap																										
	Noise																										
	Peak Data Rate																										
	Rogue Detection																										
	Signal Coverage																										
	Signal To Interference																										
	Termination																										

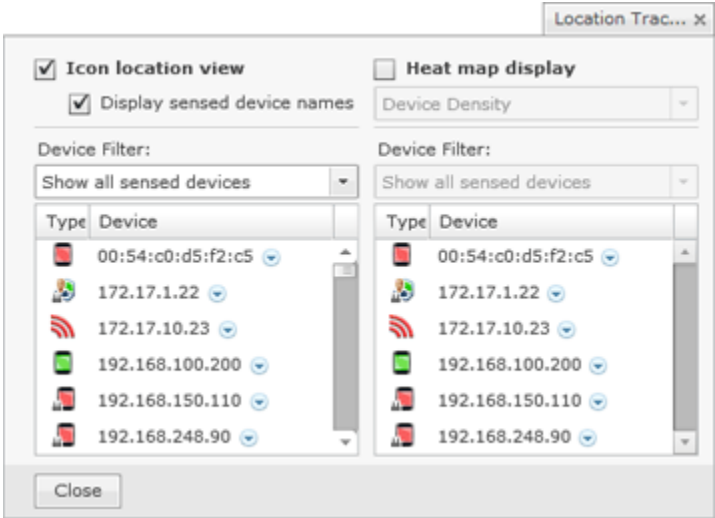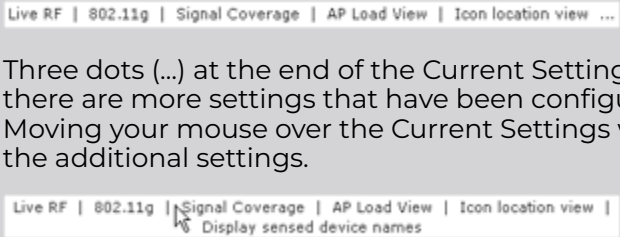Field	Description
Location Tracking	This field displays a list of devices being tracked grouped by device type.  If a device in the list is selected (highlighted) it is highlighted in the floor plan map. Location Tracking has two views: Icon location view and Heat map display. The Icon location view displays the most likely location for selected devices as an icon for each device. The Heat map display displays the most likely locations for the selected device as a color gradient ranging from red (most likely) to blue (least likely) locations.
Current Settings	This field gives you a quick view of the settings that have been set via the Context Label.  Three dots (...) at the end of the Current Settings indicate there are more settings that have been configured. Moving your mouse over the Current Settings will reveal the additional settings.
Color Chart	The color chart is a legend representing the signals displayed as RF data in the Floor Plan. Each color represents a signal strength (in dBm). 

Floor Plan Actions

The Floor Plan Actions feature contains a set of tools for generating a bill of materials and importing/exporting floor plan data.

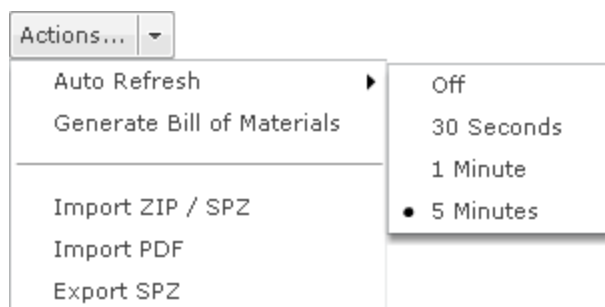


Auto Refresh

Auto Refresh works on both Live RF and location tracking. For Live RF, auto refresh uses the latest data (radio, power, channel, live status, etc.) AirDefense has about devices to refresh RF data. For location tracking, it refreshes the current position of the devices being tracked. There are four options for Auto Refresh:

- Off
- 30 seconds
- 1 minute
- 5 minutes

Generate Bill of Materials

Generate Bill of Materials creates a bill of materials for the selected design and places the output in a PDF file.

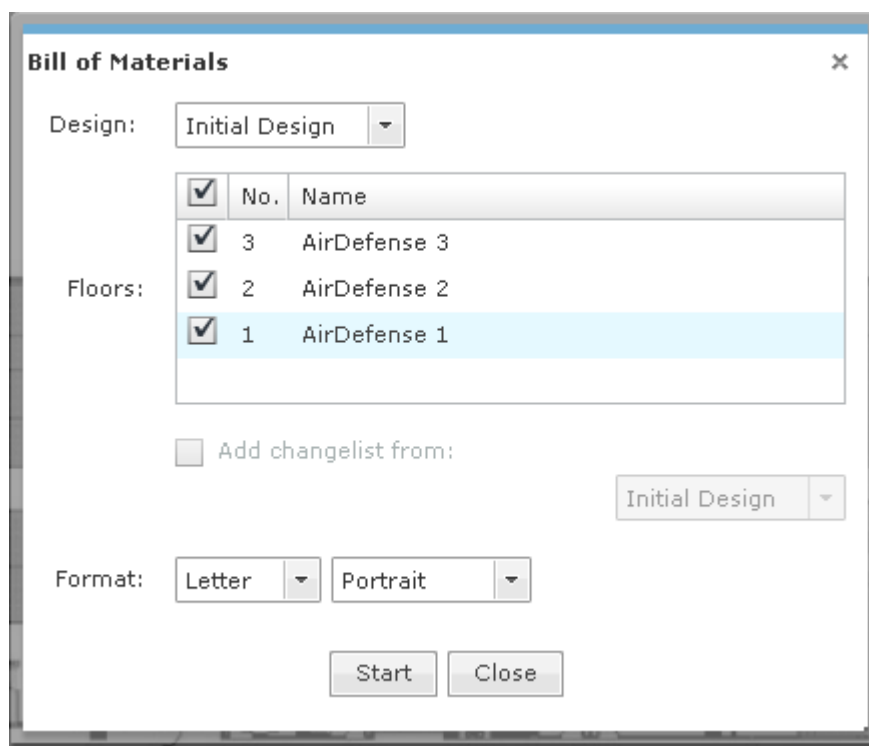

The following fields are available:

Field	Description
Design	Selects the design to use when generating the bill of materials.
Floors	Selects the floors of the design to use when generating the bill of materials. A checkmark selects the floors. The top checkbox, when checked, will select or deselect all of the floors.
Add changelist from	When selected, the output contains images for the selected design and an additional design that you select from the drop-down menu. The output will also contain device tables that show the differences between the two designs (devices added, removed, and/or changed).
Format	Selects a letter or legal page format, and whether you want portrait or landscape format.


Click **Start** to begin the process. A checklist is generated to indicate success or not. Click the link, **Click to choose where to save the PDF file.**, to specify where to place the generated PDF file and then click **Save** to save the file. If an error occurs, an error message is generated.

Import ZIP / SPZ


This section describes the different ways you can import and export floor plans.

LAN Planner

You can import a LAN Planner (or Outdoor Planner) design that has been exported to a ZIP file or a Speedwell (SPZ) file.

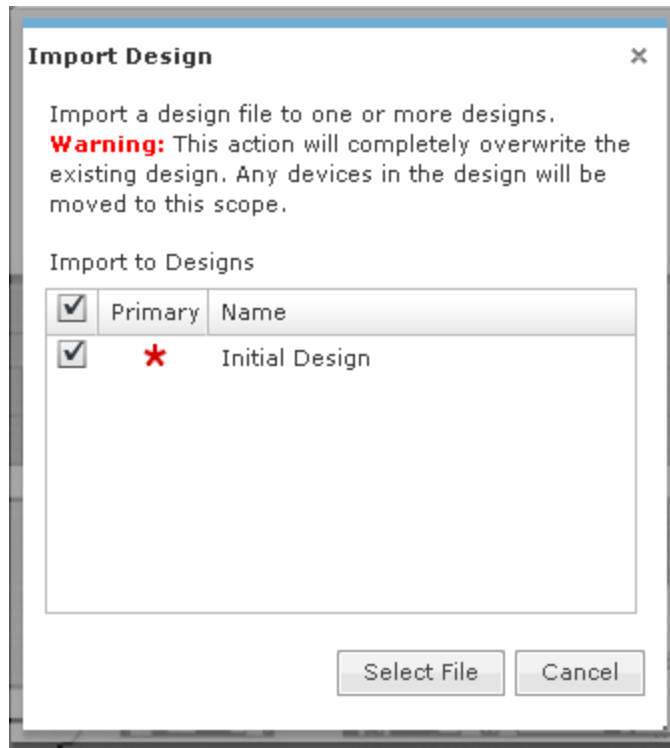

First select the design you want to replace (indicate with a checkmark) and then click the **Select File** button. Next, navigate to the file, select it, and then click **Open**. When the import is complete, a confirmation is displayed.

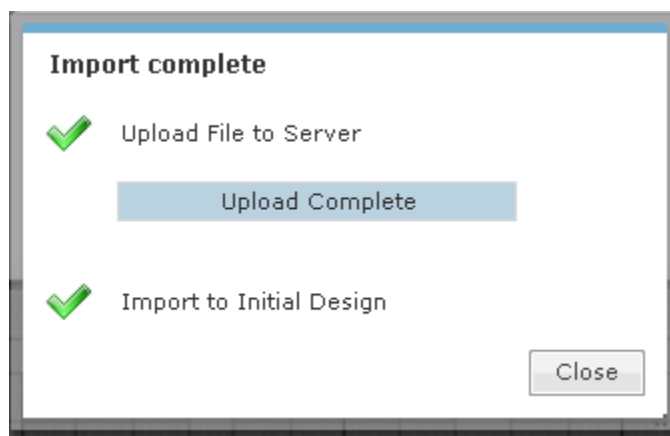

Click the **Close** button to return to the **Floor Plan**.




Note

LAN Planner and Outdoor Planner are legacy products that are no longer available for purchase. However, If you have the application, ADSP will support it.

Import PDF

Import PDF imports a design created in AutoCAD and exported to a PDF file.

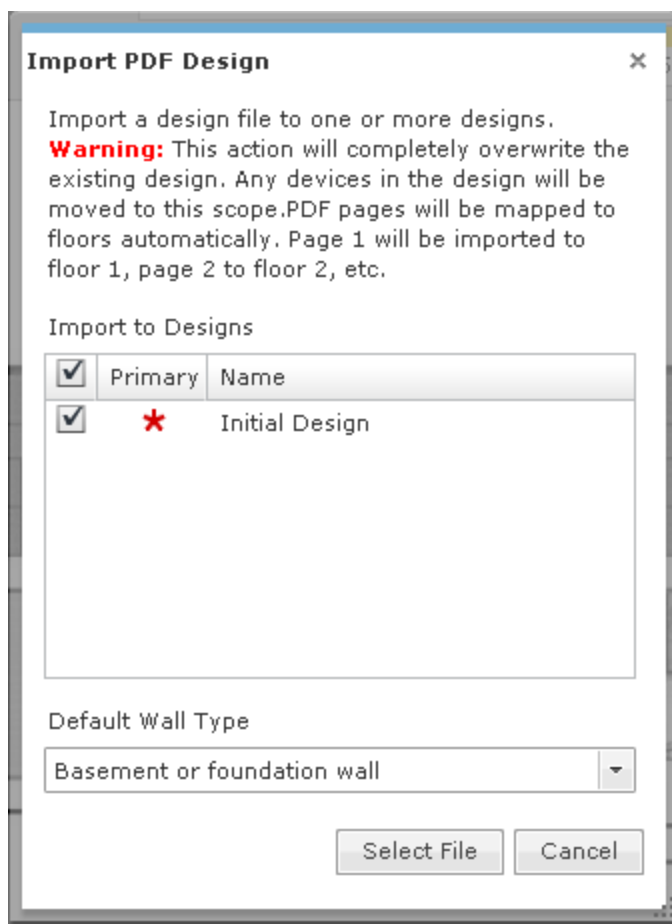

Basically, Import PDF works like Import ZIP / SPZ with the following exceptions:

- You can choose the default wall type with Import PDF as follow: Basement or foundation wall
- Brick, concrete, or concrete block
- Cubicle wall
- Drywall or sheetrock
- Elevator or metallic obstacle
- Glass door or window, no tint
- Metallic rack
- Wooden door.

Imported PDF pages are automatically mapped to existing floors. Page 1 is imported to floor 1, page 2 is imported to floor2, and so on.


Export Floor Plan to ZIP File




Note

Before exporting a floor plan design for a newly created or edited floor plan, you must leave the Editing page first. If you do not, DWG files will not export correctly.

1. Select **Export ZIP** to export the selected floor plan design to a ZIP file that can be imported into LAN Planner.

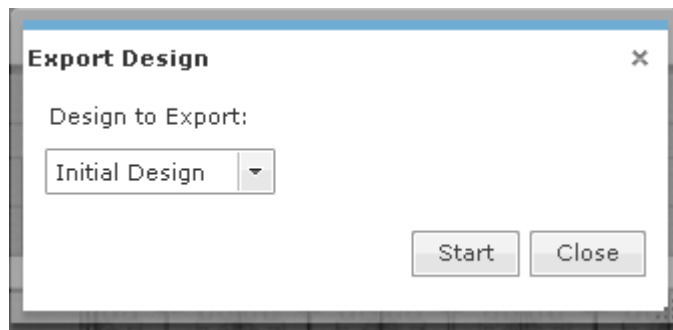


2. To begin, select a design from the drop-down menu and then click **Start**. A checklist is generated to indicate success or not.

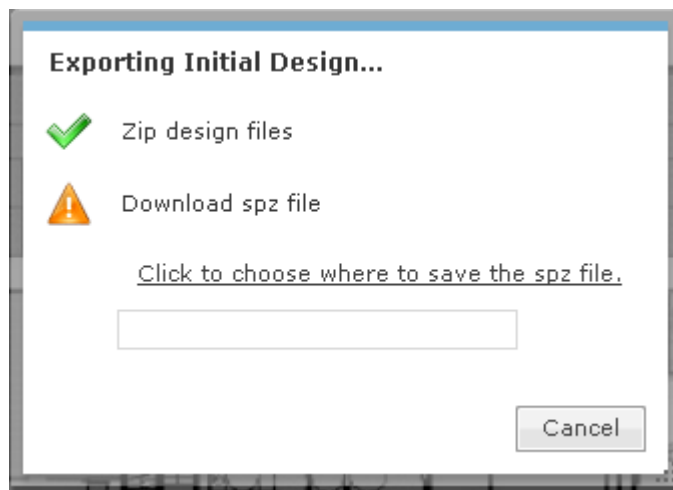

3. Click the link, **Click to choose where to save the ZIP file.**, to specify where to place the generated ZIP file and then click **Save** to save the file. If an error occurs, an error message is generated.

Floor Manipulation Tools

The floor manipulation tools (located near the top-right side of the windows allow you to adjust the size of the floor plan image with a single click and/or move the floor plan image by dragging it to a new position.

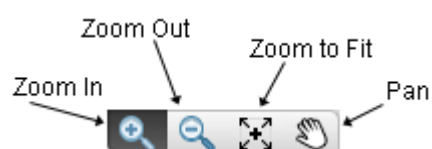

The following tools are available:


Tool	Description
	Click this tool to zoom in (enlarge the size) on a floor plan image. Each click will zoom closer.
	Click this tool to zoom out (reduce the size) from a floor plan image. Each click will zoom out further.
	Click this tool to fill the floor plan area with an image. Depending on the size of the image, the image will expand to fit or reduce to fit the floor plan area.
	Click this tool to move/re-position the floor plan image. After clicking the tool, use the hand (click and hold) to move/re-position the image.

Live Tab



Note
A Live RF license is required to access this feature.

The **Live** tab displays a heat map that represents signal coverage for APs placed on a **Floor Plan**. When the **Floor Plan** is accessed, if devices are in place, **Live RF** starts and a heat map is displayed.

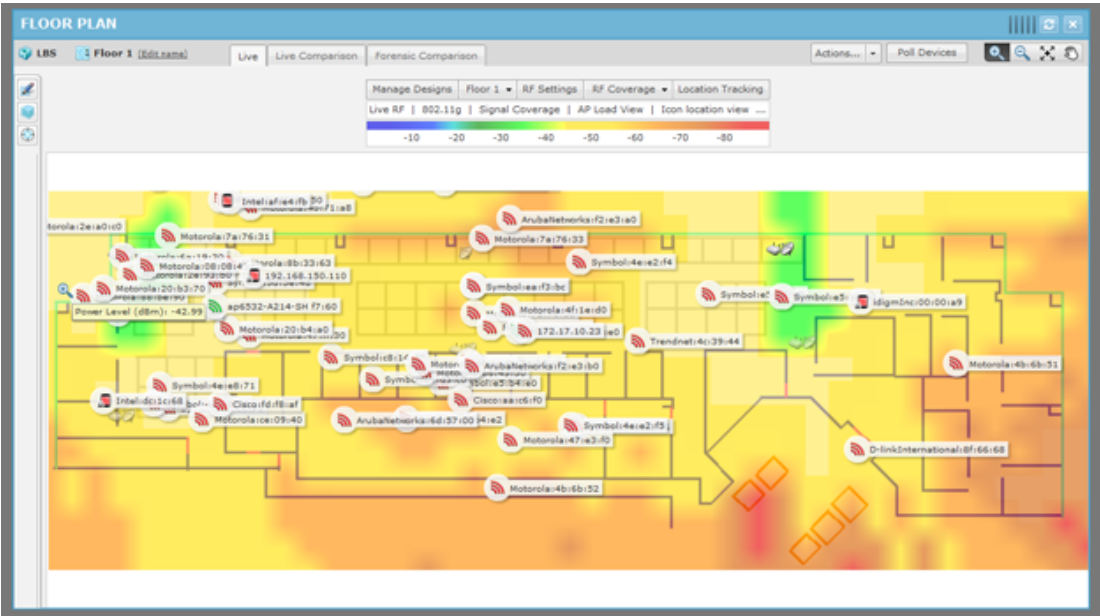

Live RF data is available on all **Floor Plan** pages. When the **Floor Plan** is refreshed either manually or automatically, RF data is updated using the latest data (radio, power, channel, live status, etc.) about the devices. This data comes from the last polling cycle for the devices. If the **Poll Devices** button is clicked, the devices are refreshed first by ADSP and then the RF data is updated and displayed in the **Floor Plan**.


Predictive RF

The **Floor Plan** also displays a Predictive RF heat map that represents predicted coverage for planned devices placed on a Floor Plan. You must first place planned devices on the Floor Plan using the **Devices** tab of the **Edit Mode**. Once you have the planned devices in place, click the **RF Selection** drop-down menu (top, right of the **Context Label**) and select **Predictive RF**.



Live Comparison Tab

The **Live Comparison** tab displays two views of the floor plan side-by-side so that you can make a comparison.

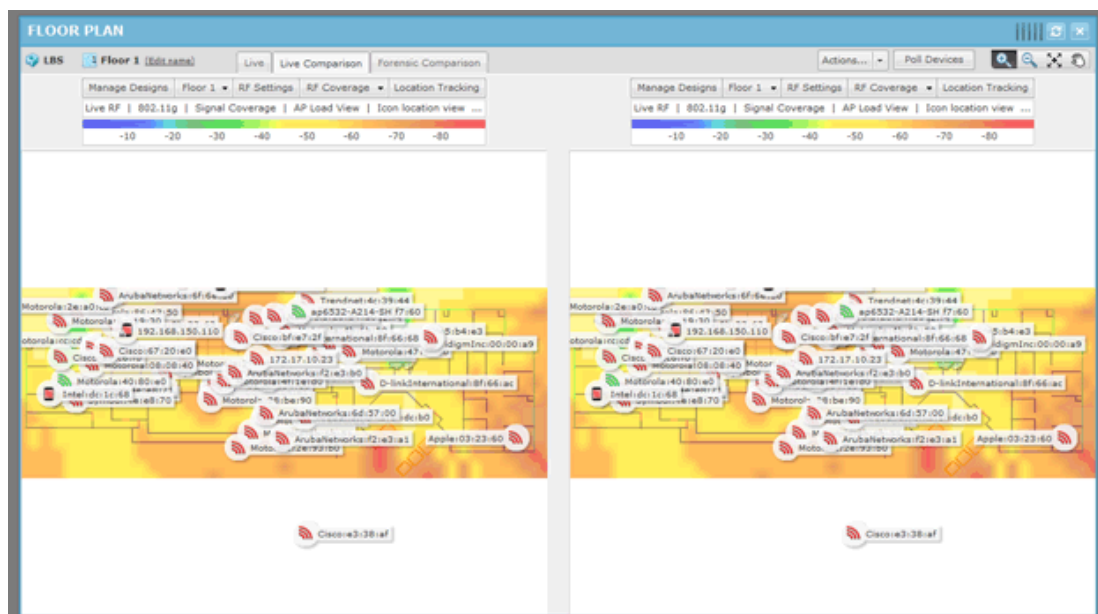


You have access to the **Context Label** where you can manipulate one or both of the images.


Floor manipulation tools are available so that you can zoom in/out or pan the images.

Forensic Comparison Tab

The **Forensic RF** tab visualizes forensic data to display coverage over a specific time range. Click the **Forensic RF** tab to display a historical heat map for signal coverage.

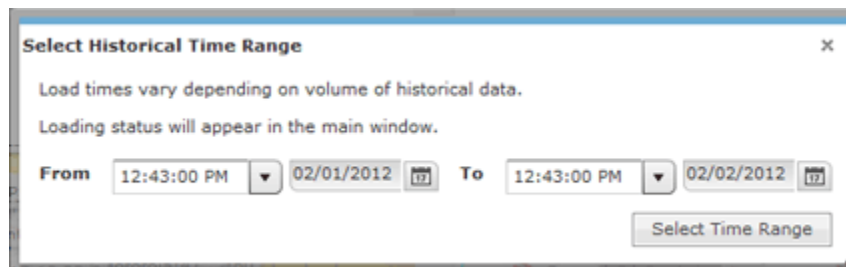

Specify a beginning time and date, specify an end time and date, and then click **Select Time Range** button.

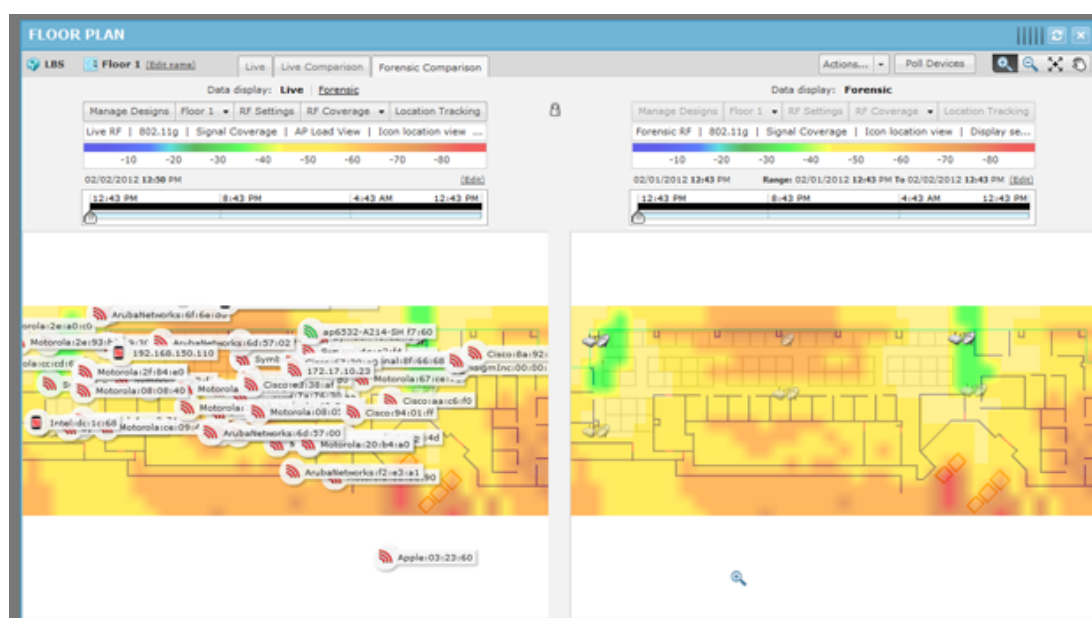

Two heat maps are displayed: one displaying Live RF for the current date and time, and one displaying Forensic RF for the specified time range. You can change the time range by clicking the **Edit** link and entering a new range. You can adjust the time range up or down within the specified range using the slider. Data points are displayed under the time line to indicate when changes occur. Move the slider to a data point to display the change in forensic data.

Tracking Rogue Devices


Tracking enables you to locate and track rogue devices that may be threatening your wireless LAN. In order for **Tracking** to open and function properly, you must have at least three sensors for each floor map that is loaded.



Note

Tracking is not intended to be used on devices that are being terminated.

To start tracking a device, click the **Location Tracking** button in the **Context Label**.

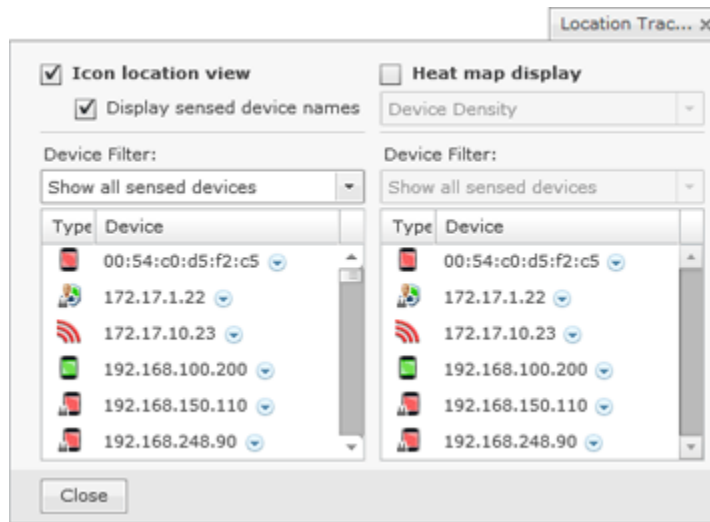


All sensed devices are displayed when Location Tracking (in the list of devices and the floor plan) is first accessed. You can group devices by type by selecting **Filter by device type** from the drop-down menu. You can search for devices by selecting **Search for devices** from the drop-down menu.

There are two views for Location Tracking:

- **Icon location view** displays the devices on the map by its icon and device name.
- **Heat map display** displays the likely location for a tracked device as a color gradient ranging from red (most likely) to blue (least likely) locations. The device icon is displayed on the map at the most likely location for the device. You can view **Heat map display** by **Device Density** or by **Single Device Probability**.

For either view, you can search for a device by selecting **Search for devices** and then clicking the **Add Device** button. The **Add Tracked Devices** dialog opens where you can type in a MAC address.

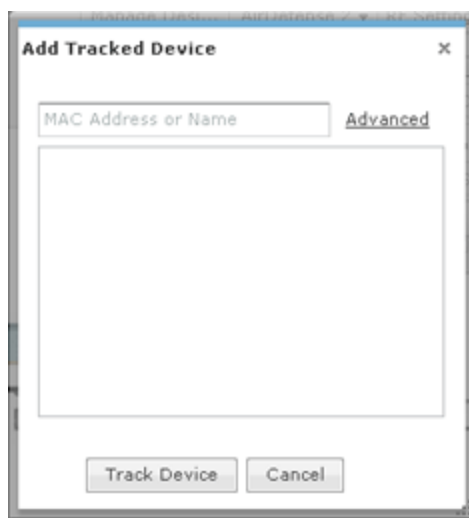

You can enter the complete MAC address or a part of it.



Note


The **Advanced** link is used to open a search dialog that gives you more options to find devices.

When you see the device listed, click on it and then click **Track Device**. The device is displayed in the tracked device list.




Note

You may select more than one device using the <Shift> key or the <Ctrl> key.

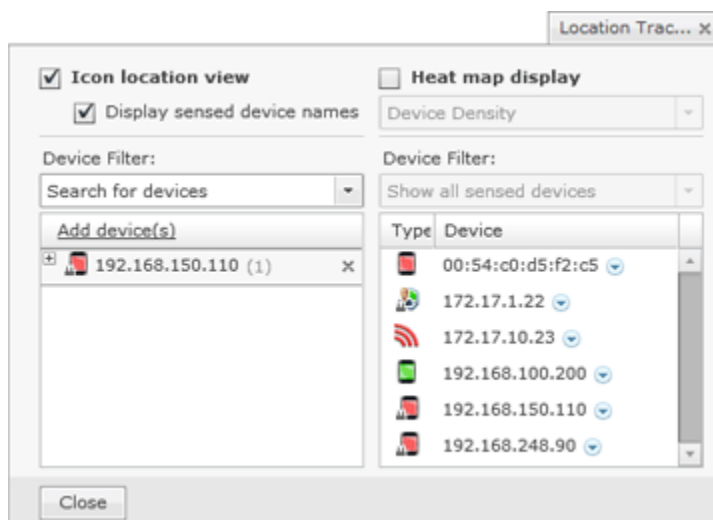


Click the **Close** button or anywhere outside the Location Tracking dialog to display the device in the Floor Plan.

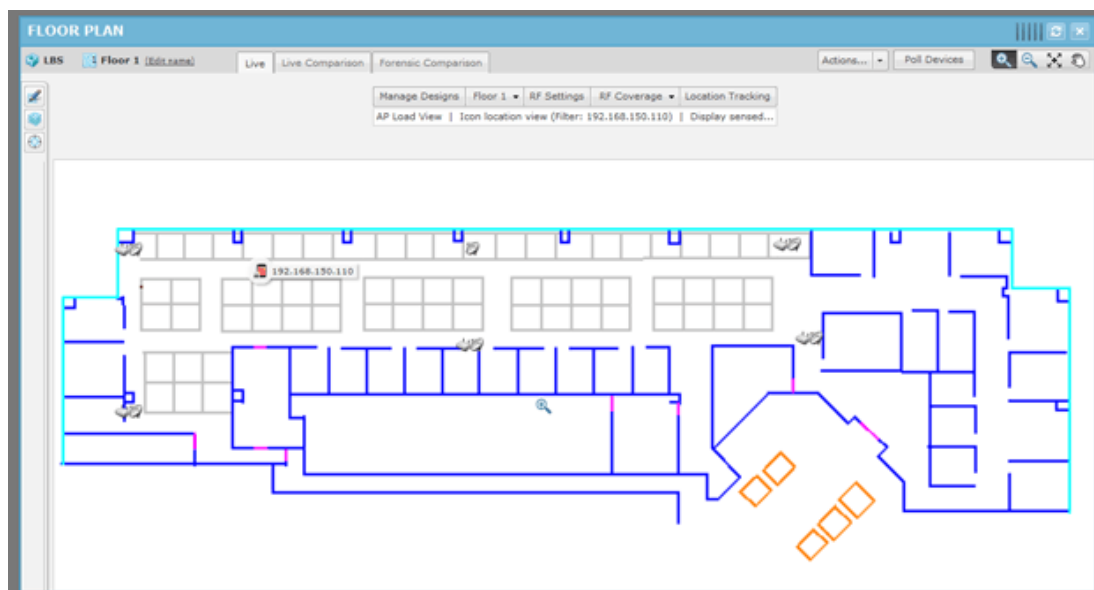


The **Floor Plan** shows the device being tracked. Click the **Refresh** button to refresh the image. If the device has moved, you will see its current position in the floor plan.

You can track more than one device by adding them as described above. Each time you add a device it is displayed in a list of tracked devices.

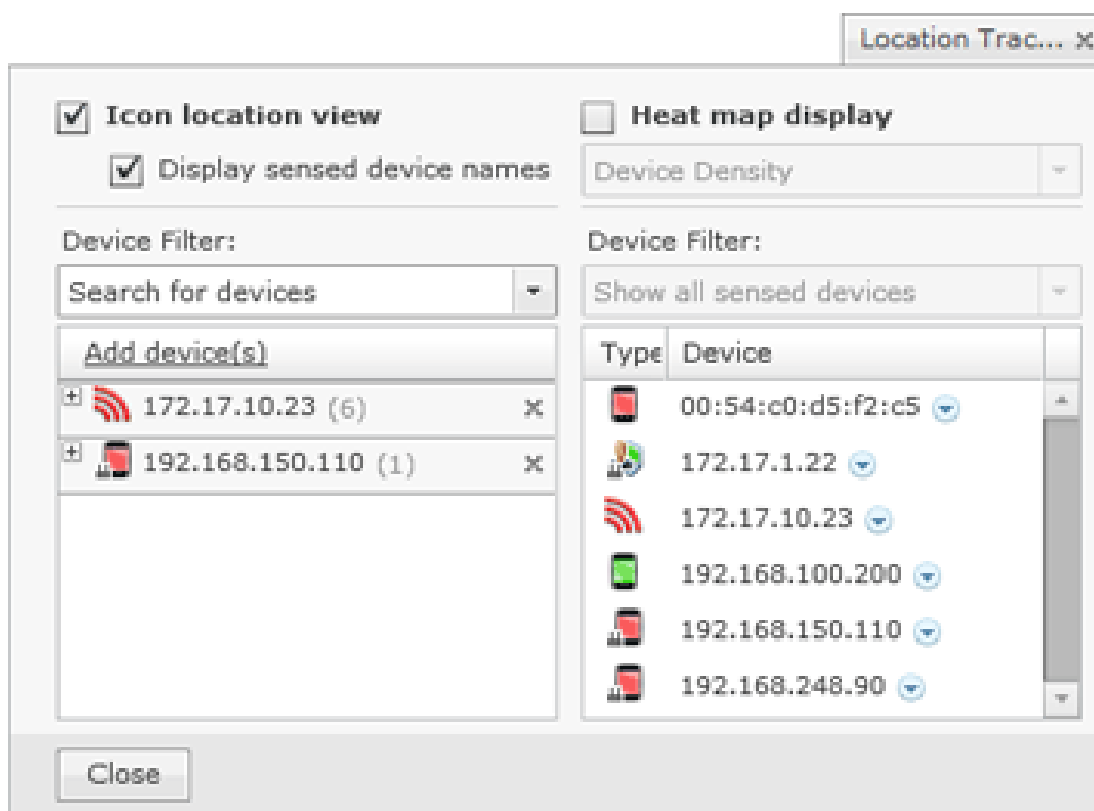

Click the **Close** button or anywhere outside the **Location Tracking** dialog to display the devices in the **Floor Plan**.

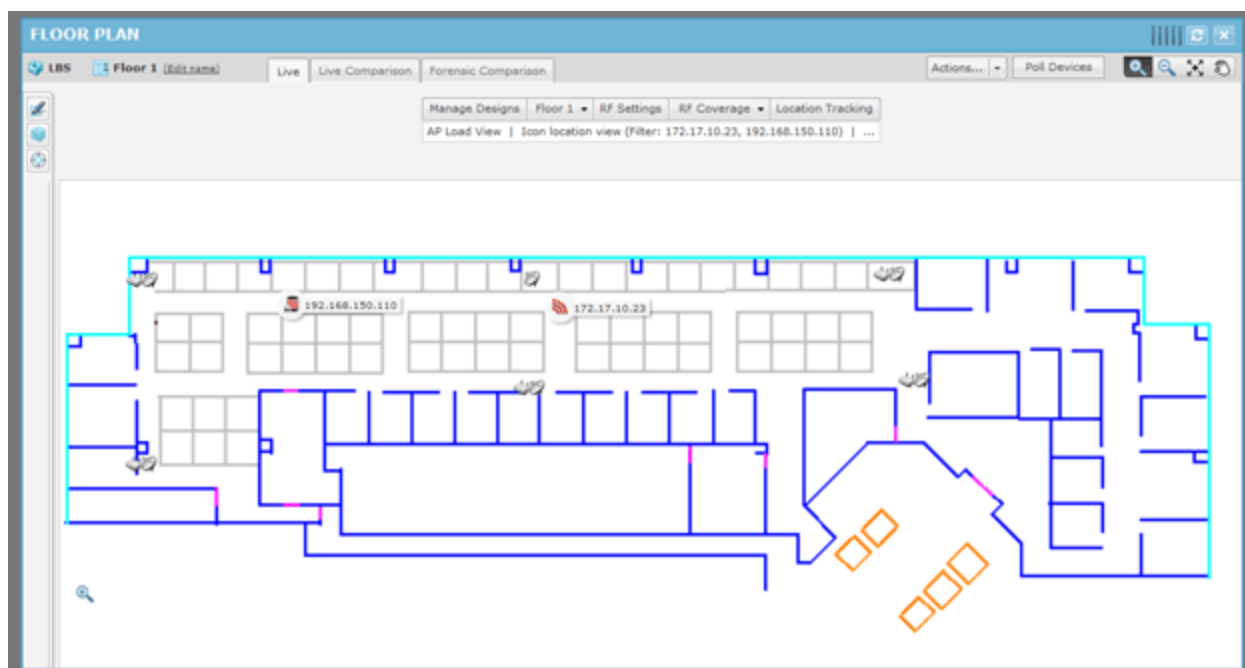

AP Assisted Tracking

In order to get AP assisted location tracking working with the NX and VX controllers, the WiOS controller must be enabled so that RSSI data can be passed to ADSP. There are procedures for BSSs and Wireless Clients tracking. Refer [BSS Tracking](#) and [Client Tracking](#).



Note

This is only for the controller infrastructure. The 5.x version of APs do not require this sort of configuration. The Cisco WLC does not require configuration to enable AP assisted location tracking.

BSS Tracking

For BSS tracking, the Enhanced Beacon table on the RFSX000 controller must be enabled.

1. Log into the RFSX000.
2. Navigate to **Security > Enhanced Probe/Beacon Table > Beacon Table**.
3. Select the **Enable Enhanced Beacon Table** check box.
4. In the **Channel Set** fields, enable the channels for each radio that you want to scan.
5. Leave the default values for **Scan Interval**, **Scan Time**, and **Maximum number of APs** fields.
6. Click **Apply**.
7. Navigate to **Network > Access Point Radios**.
8. Double-click on the B/G radio of the AP650.
9. Select the **Enable Enhanced Beacon Table** check box.
10. Click **Apply**.
11. Repeat [Step 9](#) and [Step 10](#) for the A radio.

12. Save the configuration.
13. Restart the controller. (If you are going to enable the enhanced probe table, follow the directions provided below before restarting the switch.)

Verify Location Tracking

To verify Location Tracking with this setup:

1. Navigate to **Security > Enhanced Probe/Beacon Table > Beacon Table**.
2. Click the **Beacon Found** tab.
Verify that this page is being populated with rogue AP and signal strength data.
3. In the **Portal MAC** column, verify that the radio MAC of your AP650 is displayed.
4. The column next to the **Portal MAC** column is the **Rogue AP MAC** detected by the portal.
5. Copy one the Rogue AP MAC addresses detected by the AP650 radio (A or B/G).
6. In AirDefense, drag the AP650 to a floor plan with 2 other sensors.
7. Attempt to track the device that matches the previously recorded MAC address.
If the target device is detected by the other 2 sensors, location tracking should work.

Client Tracking


In order to activate Wireless Client tracking, you must enable the Enhanced Probe table on the RFSX000 controller. This allows an AP to forward an MU probe request data to the controller.

You must manually enter the MAC address for each Wireless Client that you wish to track into the preferred Wireless Client (MU) list. If you want to track multiple rogue Wireless Clients, you have to input the MAC of each Wireless Client (MU) into the switch, and then wait until it is pushed into ADSP. Follow these steps:

1. Log in to the RFSX000.
2. Navigate to **Security > Enhanced Probe/Beacon Table > Probe Table**.
3. Select the **Enable Enhanced Probe Table** check box.
4. In the **Preferred MUs** section, click the **Add** button.
5. Enter the MAC address of the MU (Wireless Client) that you want to populate the **Probe Request** table with data.
6. Click **OK**.
7. Click **Apply**.
8. Navigate to **Network > Access Port Radios**.
9. Double-click on the B/G radio of the AP650.
10. Select the **Enable Enhanced Probe Table** check box.
11. Click **Apply**.
12. Repeat [Step 9](#), [Step 10](#), and [Step 11](#) for the A radio.
13. Restart the controller.

Unplaced Devices Level Drop-down Menu

The Unplaced Devices level drop-down menu contains functions that you can apply to the selected Unplaced Device level. Click the drop-down menu button  next to the Unplaced Devices name to display the drop-down menu.

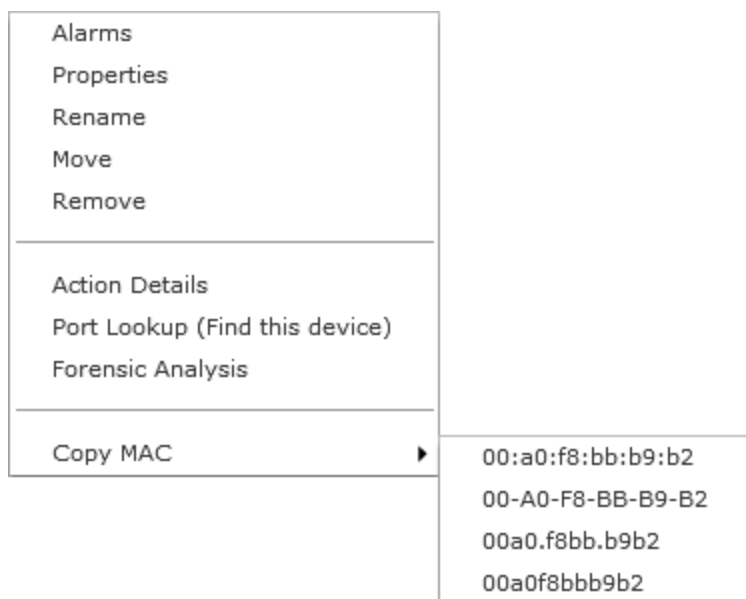

The drop-down menu for unplaced devices contains the following functions:


Function	Description
Alarms	Accesses the Alarms tab where you can view the alarms for the selected Unplaced Devices level. See Alarms on page 476 for more information.
Properties	Opens the Properties overlay for the selected Unplaced Devices level.
Rename	Opens a dialog window to rename the selected unplaced device.
Move	Moves the selected unplaced device to another network level (floor). See Move Devices on page 470 for more information.
Remove	Removes the selected unplaced device from your network. See Remove Devices on page 470 for more information.
Action Details	Displays a table listing specific actions that are occurring to devices seen on your WLAN.
Port Lookup (Find this device)	Opens the Port Lookup on page 732 window where you can locate the physical port where the unknown device is accessing your network.
Forensic Analysis	Accesses Forensic Analysis—Basic. See Forensic Analysis-Basic on page 387 for more information.
Copy MAC	Copies the MAC address of the selected unplaced device for later use.

Network Level Drop-down Menus

Each network level has a drop-down menu containing functions that operate on the selected network level. You can configure the following network levels:

- Appliance
- Country
- Region
- City
- Campus
- Building
- Floor.

Appliance Level

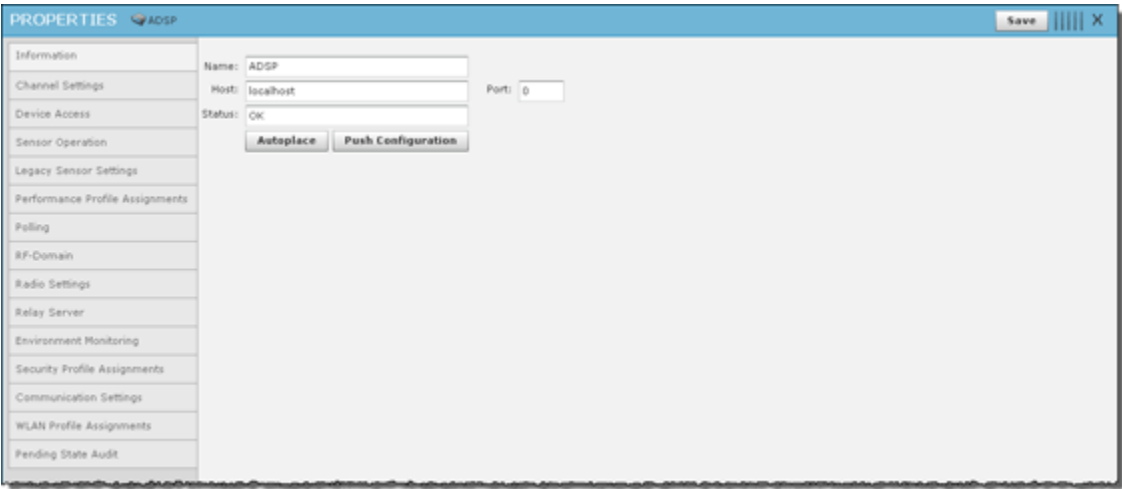

The following information is displayed:

Function	Description
Name	The name of the appliance.
Host	The host name of the appliance.
Port	The port number of the appliance.
Status	The status of the appliance in your network.

The **Autoplace** button is used to place all devices located in the selected network folder to the proper network level using Auto-Placement rules.

The **Push Configuration** button is used to push the existing configuration for all devices in the selected network folder out to their respective device.


You can view and/or override an appliance's configuration by selecting:

- [Sensor Operation](#) on page 627
- [Sensor Only Settings](#) on page 623
- [Performance Profiles](#) on page 535

- [Polling](#) on page 526
- [Environment Monitoring](#) on page 547
- [Security Profiles](#) on page 506
- [Communication Settings Profile](#) on page 519
- [Location Based Services](#) on page 606
- [Pending State - Audit](#) on page 622

These configuration settings (or profiles) are equivalent to the ones described earlier in the Configuration section of this chapter. You must save any changes that you make.

All Other Levels

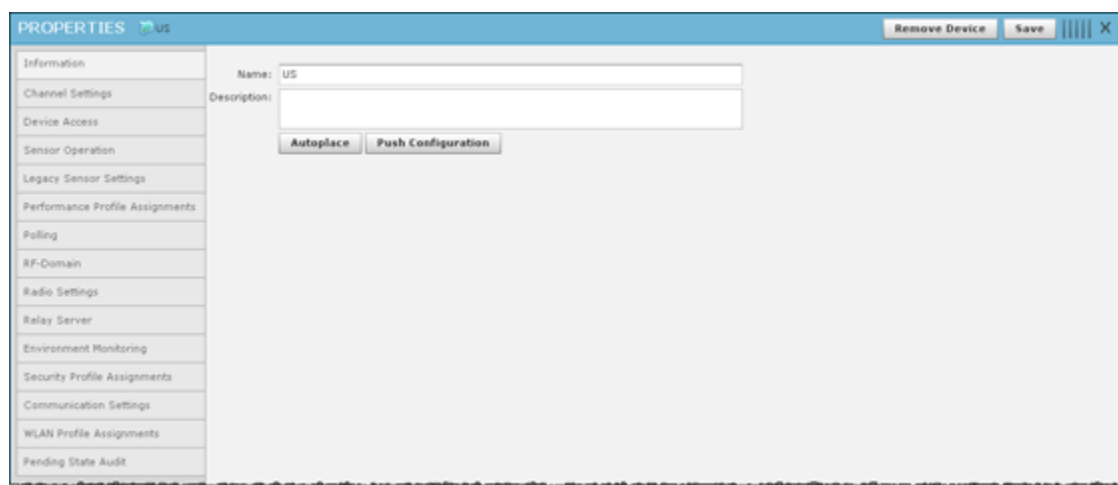

The following information is displayed:

Function	Description
Name	The name of the network level.
Description	A description of the network level.

The **Autoplace** button is used to place all devices located in the selected network folder to the proper network level using Auto-Placement rules.

The **Push Configuration** button is used to push the existing configuration for all devices in the selected network folder out to their respective device.

You can view and/or override a network level configuration by selecting:

- [Sensor Operation](#) on page 627
- [Sensor Only Settings](#) on page 623
- [Performance Profiles](#) on page 535
- [Polling](#) on page 526
- [Environment Monitoring](#) on page 283
- [Security Profiles](#) on page 531
- [Communication Settings Profile](#) on page 519

- [Location Based Services](#) on page 606
- [Pending State - Audit](#) on page 622

These configuration settings (or profiles) are equivalent to the ones described earlier in the Configuration section of this chapter. You must save any changes that you make.

Security

AirDefense has several modules that you can install to provide security for your network. You can enhance AirDefense with:

- The WIPS module that will eliminate detected rogues from your network
- The Advanced Forensic Analysis module that unlocks the more advanced features of Forensic Analysis
- The Vulnerability Assessment module that allows you to view your network through a hackers point of view
- The WEP Cloaking module that allows you to use your legacy equipment while you are upgrading to equipment with the latest technology



Note

Each of these modules require a separate license.

WIPS

By installing an AirDefense WIPS license, you add the ability to detect wireless attacks to your network and analyze anomalous behavior of devices in your network. Meaningful security problems are detected while events that cause false alarms are filtering out.

AirDefense WIPS protects your network from threats such as:

- Reconnaissance
 - Rogue APs
 - Open/mis-configured APs
 - Ad-Hoc networks
- Sniffing
 - Dictionary attacks
 - Leaky APs
 - WEP/WPA/LEAP cracking
- Masquerade
 - MAC spoofing
 - Evil twin attacks/Wi-Phishing attacks
- Insertion
 - Man-in-the-middle attack

- Multicast/broadcast injection
- Denial-of-service attacks
 - Disassociation
 - Duration field spoofing
 - RF jamming

AirDefense WIPS can mitigate wireless threats via the air by disabling wireless connections between intruders and authorized devices. A WIPS license enables the Air Termination feature which is extremely precise at ensuring that only the offending device is prohibited from operating.

Port suppression is also enable to identify switch ports that have offending devices connected to them. Once detected, the port is turned off to prevent the rogue device from accessing the network.

A WIPS license also enables **Sensor Monitoring** which is added to the **i** tab. Sensors are used to monitor your network for threats.

Planning Your Sensor Deployment

When adding a WIPS license, you should plan where you will be placing your sensors. AirDefense uses remote sensors to collect data transmitted by 802.11a-, b-, g-, and n-compliant devices and to send that data to a your central AirDefense appliance for analysis and correlation. Because the sensors are passive devices that function primarily in listen-only mode, a single sensor can monitor multiple APs.

You should leverage any site surveys you conduct for placement of s as aids to sensor placement decisions.

Keep the following considerations in mind when deploying your sensors.

Deployment Considerations

Building Structure

Many materials used in building construction may significantly impact the propagation of signals in the 2.4 GHz spectrum or the 5 GHz spectrum.

- Concrete reinforcement bars
- Elevator shafts
- Electric motors (for example, blowers and generators)
- Lighting fixtures.

Physical and Electromagnetic Interference

Many devices can interfere with sensors monitoring of the wireless network, including:

- Cordless phones and headsets
- Bluetooth devices

- Microwave ovens
- Consumer cordless devices (for example, surveillance cameras, baby monitors, and video transmission extenders).

Device Placement Considerations

Keep the following considerations in mind when you place devices:

- Device Density
- Device Requirements per Area
- Desired Monitoring and Intrusion Protection Functionality
- Assets to be Protected
- Sensor Quantity and Placement
- Power and Data Cabling

Device Density

You should consider the density of 802.11a, b, g, and n devices:

- Support of a high number of users
- Support of high bandwidth consumption
- Localization of wireless network service.

The sensors should be separated by at least 10 feet from any installed APs to avoid radio defense. The active transmissions of an AP can desensitize the sensor receiver radio on the same channel when placed in close proximity of an AP.

Device Requirements per Area

While a single AirDefense sensor can monitor a very large area, distributing multiple sensors in such an area can provide a much better idea of where a rogue device is physically located. By comparing the RSSI values each sensor detects, you can find the device more easily. Three or more sensors are required for the location tracking to work because triangulation is a requirement for the location tracking to work.

Desired Monitoring and Intrusion Protection Functionality

Your decisions about sensor placement should also take into account what functionality you plan to use. Five important functions that are dependent on sensor density or placement are:

- **WEP Cloaking**—For effective WEP Cloaking, several sensors should be deployed around the perimeter of a building. Higher sensor density will typically yield better protection for your legacy encryption devices.
- **Location Tracking**—To track a device, the device must be observed by three or more sensors on the same floor plan. Higher sensor density will typically yield more accurate results.
- **Connection Termination**—To terminate a devices connection to your network, the device must be in range of a sensor sending termination signals.

- **Policy Enforcement**—To ensure adherence to policies or to detect attacks against managed devices, sensors must be able to receive a representative sampling of traffic sent by all devices they are monitoring.
- **Rogue Detection**—Even sporadic emanations from wireless clients and s can reveal the presence of rogues. You need to place sensors where transmissions from rogue devices can be detected as soon as they enter the scanning area.

Assets to be Protected

- Wireless-capable devices that contain sensitive data must be protected.
- Wired networks protecting the wire from wireless breach. This approach is key to making wireless monitoring deployment decisions in very large installations, such as military bases, airports, power plants, campuses, etc.
- A common perception is that wireless devices must be detected and monitored throughout a given property. This becomes impractical in many cases. A more practical approach is one that protects the wired network while using more sane decisions for monitoring.

Sensor Quantity and Placement

Application choice will significantly impact the sensor density and sensor placement. For example, rogue detection in a no wireless zone needs fewer sensors as even sporadic emanations from a wireless device, at the lowest data rate and longest range, can reveal the presence of a rogue. As the applications become more complex, they may require a representative sample of frames or meet certain minimum signal level thresholds, increasing the sensor density requirement.

Using these factors in baseline decisions with regard to sensor placement, the following coverage area guidelines may be applied to establish an effective deployment.

Application	RSSI
Rogue Detection	> -90dBm
Policy Enforcement	> -80dBm
Mitigation (Termination)	> -70dBm
Location Tracking	Every device has to be seen by three or more sensors and/or infrastructure APs on the same floor plan.

Sensors that may be exposed to harsh environments can be placed in accessory enclosures (NEMA-4) that protect the sensor and provide code, regulatory compliance, or both.

Power and Data Cabling

Sensors are often placed in areas that take advantage of pre-existing power and data cabling. These areas include wiring closets and other areas where IDFs may be located. Where these locations are somewhat shielded from the wireless environment, the sensor may be extended to just outside of these spaces using standard power cords and pre-terminated data cables, obviating the need for additional, costly fixed runs.

Choosing facilities that come as close to centrally locating the sensors in the intended monitoring space should be done when practical. In instances where wiring closets, IDFs, or both are not ideally located for sensor placement, sensors may take advantage of Power Over Ethernet, either from a single power injector or a compliant switch. PoE injectors are available from Extreme Networks.

If there are gaps in coverage, or if deployment cost is a factor (due to the required density of sensors or the cost of wiring to place sensors in strategic locations), there are several relatively inexpensive remedies. Where wiring for placement in an ideal location is impractical, employ additional sensors to correct as necessary. FCC Rules regulate the use of antennas as aids to reception for the sensors, in regard to the sensors 802.11 component. If antennas would greatly enhance the overall deployment, contact Support for guidance on the best approach for antenna application, considering both regulatory guidelines and the physical design of the sensors.

In either case, always use facility floor plans to indicate where sensors are placed and to indicate areas where a coverage test was done.

Planning Your Sensor Placement

This section discusses the planning the placement of sensors.

Sensor Placement using ADSP

After you map out anticipated sensor locations, you can assess the effectiveness of coverage by correlating site survey data and assumptions discussed previously. You can also use the test procedure described here to validate sensor location.

Because sensors are passive devices that do not have the capability to transmit data, the process of determining sensor coverage depends on a reverse site survey process in which a device introduces a signal in your Wireless LAN, and then the signal is tracked through the facility using the deployed sensors.

Prerequisites for Sensor Placement

You will need the following documents to help determine sensor placement:

- Floor Plans
- Existing Site Surveys
- Wiring layouts
- Regulatory rules and codes for wiring, construction, materials, etc., where applicable.

You will need the following tools:

- A laptop running AirDefense Mobile 4.0, or later, or Site Scanner.
- An 802.11a/g/n wireless device (wireless client or access point). The ideal output power for this device (around 40 mW) would be that of a retail quality wireless client card or access point as these are likely rogue candidates.

**Note**

A soft access point on a laptop is often an ideal target because it can be Locked On a channel and is battery powered through being hosted on a laptop.

- Wiring layouts.
- Regulatory rules and codes for wiring, construction, materials, etc., where applicable.
- Access to all areas to be monitored is required during the survey.

Procedure

Follow these steps to plan your sensor placement:

1. Obtain Maps/Layouts of the facility and determine the traversal plan.
2. Start AirDefense Mobile.
3. Turn on the target device (could be a laptop/PDA with wireless client card). AirDefense Mobile should detect the target device.
4. Identify the target device in the AirDefense Mobile device tree.and use your mouse to right-click on it to display a list of options.
5. Use AirDefense Mobile Options to Lock On the channel on which the target device is discovered.
6. Right-click select the device in the Dashboard tree; select LiveView.
7. Focus on Signal Strength in the Decode tab in LiveView. Verify that the target device is being tracked by AirDefense Mobile.
8. When a wireless client (station) card is being used as a target, significant peaks and valleys are observable in signal strength as the card rotates through channels probing for any intrusion. The peaks are indicative of the effective signal strength relative to AirDefense Mobile.
9. Move the target device to the anticipated fringe where a neighboring sensor would become primary.
10. At the fringe of coverage, signal strength should be no less than -70 dBm to assure termination ability.
11. Move AirDefense Mobile to the anticipated location of the next sensor and use the same procedure to ensure that its anticipated coverage area is valid.

If the above sensor placement proves adequate from a coverage and cost of placement perspective, factors observed during this analysis may be extrapolated to other locations of similar construction.

Sensor Placement with WEP Cloaking

WEP Cloaking will typically require a higher density of sensor deployment than most other applications. This puts WEP cloaking in the highest category sensor density deployments similar to Location Tracking.

Considerations for Sensor Placement with WEP Cloaking

For effective WEP Cloaking, there are two important considerations:

- Spatial coverage - The sensors enabled with WEP Cloaking must at a minimum cover the same area as the s and wireless clients they are protecting.

For this requirement, you should leverage any site surveys you conduct or have conducted for placement of s as aids to sensor placement decisions. Another option is using a WLAN simulation tools such as LAN Planner.

For example, in a typical retail location most wireless point-of-sale devices will be in the front of the store near the check-out stations. Assuming the hacker would be outside of the building, sitting in the front parking lot, it would make sense to place at least 2 sensors in each of the corners in the front of the store. If there is public access from the back of the building or the retail location is surrounded by parking areas, you may want to consider additional sensors in the back for complete protection.

- Channel coverage - A single sensor should not be required to cloak more than 3 s at a time.

For effective cloaking there must be sufficient chaff WEP frames to confuse the statistical WEP cracking tools. At the same time, the sensors must perform regular Wireless IPS scanning on other channels. The sensors are designed to intelligently adjust their frequency scanning patterns. However, to maximize cloaking effectiveness and scan all other channels for possible intrusions, sensors should not be expected to cloak more than three APs, or more specifically three unique communication channels at a time.

For Adequate Protection

Typically it will take several sensors deployed at the perimeter of the building to adequately protect all wireless devices with WEP Cloaking. This also implies that, even in small stores, it may take more than one sensor for adequate WEP Cloaking protection; the higher the density of sensors you deploy, the better your legacy encryption devices will be protected. Any deployment should start with a site survey or RF simulation of the WLAN environment, followed by a mapping of sensor coverage to access point coverage of unique channels.

Sensor Placement with Location Tracking

Sensor density and sensor placement are the most important factors regarding overall positioning resolution. Due to the nature of high frequency signals (2.4 GHz and 5 GHz) and limited signal strength resolution in 802.11 devices, the positioning resolution and stability tends to be better near receivers/sensors. To achieve accurate results, follow these guidelines:

- Place at least three independent sensors on the same floor plan so the system can capture the RSSI values.
- Place a sensor in each area where accurate resolution is required or to increase overall sensor density to ensure high RSSI values.


Considerations for Sensor Placement with Location Tracking

Every site is unique in terms of actual sensor coverage; this section merely describes sensor placement and respective coverage in a simplified way. Actual signal propagation is a very complex issue due to environmental factors like the reflection/absorption properties of materials (walls, furniture), large moving object, etc.

- Sensors should be placed in corners, preferably in a way which minimizes random fluctuations in signal strength caused by people moving around, opening / closing doors, windows or large objects which may be moved during operation, etc.
- Sensors should not be placed in a straight line to eliminate the possibility of having two or more similar RSSI values from sensor combinations for different location, combined coverage areas for the sensors should not be symmetric.
- Place additional sensors in areas where accuracy is important to achieve repeatable and consistent positioning resolution, sensors should be placed so that they measure unique signal strengths and sensor combinations for each location considered significant.

IDS versus Location Tracking

Ideal sensor placement for Wireless IDS differs from that for Location Tracking.

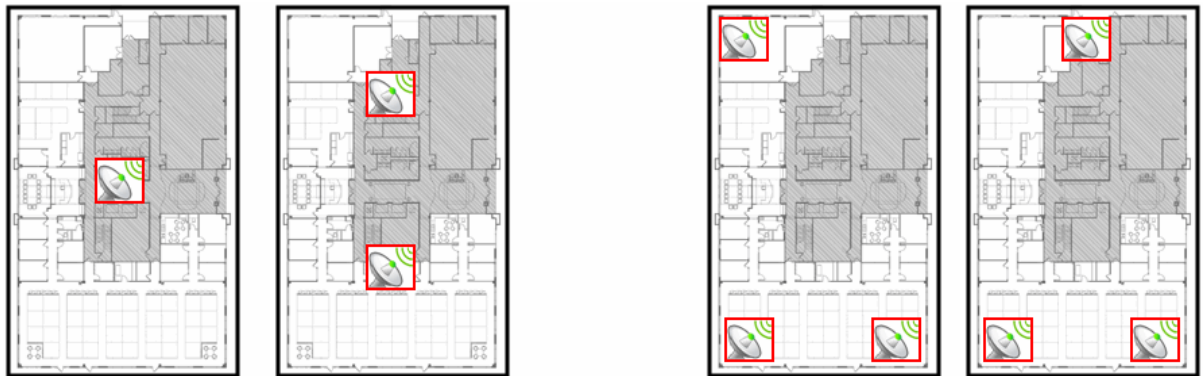

Example 1

You have a small office of 10,000 sq. ft. For Wireless IDS/IPS you would only need 1 sensor; to maximize the coverage it makes sense to place the sensor in the center of the building. When location tracking is needed in this same scenario, a minimum of 3 sensors for each floor plan would be required, and recommended placement is at the corners.

Example 2

You have a multi-floor building with 3 floors. Depending on floor construction the RF may travel through each floor. If only Wireless IDS/IPS is required, you may be able to leverage detection through the floor and ceiling and place sensors on every other floor. Depending on the floor characteristics, you may need a sensor on each floor, however it may make sense to off-set each sensor on each floor and take advantage of the detection through the floor and ceiling. If location tracking is needed, the same 3 sensors for each floor plan would be required and the recommended placement is 3 sensors in the corners of each floor.

Sensor Monitoring

AirDefense allows you to define system profiles that help monitor:

- Sensor performance
- Sensor security
- Sensor policies.

You should set up profiles to assist you in monitoring your system. If thresholds set in the profiles are exceeded, an alarm is generated for the violation which alerts you of the problem:



Note

Sensor monitoring profiles are described in detail in [Chapter 7, Configuration](#), or in the Configuration tab (online Help).

- Sensor Operation is used to:
 - Enable Sensor-level options
 - Configure the Sensor scan pattern
 - Configure sensor settings for Advanced Spectrum Analysis.

Navigation: **Configuration > Operational Management > Sensor Operation**

- Environment Monitoring is used to configure the thresholds for monitoring. If a threshold value is exceeded, an alarm is generated. You can also elect to monitor your system for unobserved devices and generate alarms for missing devices.

Navigation: **Configuration > Network Assurance > Environment Monitoring**

- Performance Profiles is used to create and edit network performance threshold policies for BSSs and wireless clients on your wireless LAN.

Navigation: **Configuration > Network Assurance > Performance Profiles**

- Security Profile is used to define the security configurations of sanctioned wireless clients on your wireless LAN.

Navigation: **Configuration > Appliance Platform > Security Profiles Configuration > Security & Compliance > Security Profiles**

- Wired Network Monitoring is used to monitor the wired network devices in your system and generate an alarm under certain conditions.

Navigation: **Configuration > Security & Compliance > Wired Network Monitoring**

Vulnerability Assessment

Using your existing sensor deployment, Vulnerability Assessment scans your wireless network for vulnerabilities utilizing a hacker's point-of-view. This allows you to:

- Identify network security issues before a hacker does
- Remotely scan for and discover wireless network vulnerabilities
- Generate alarms to bring attention to vulnerabilities.

The assessment is accomplished by using deployed sensors as a wireless client to connect to an AP and scan network resources. Vulnerability Assessment can be run automatically or manually, providing proactive notification that network resources may be compromised.

**Note**

Vulnerability Assessment is only supported on the legacy sensors M510 and M520 with firmware version 5.3 or later installed. Vulnerability Assessment is also supported on the AP650 and AP7131 sensors with WiNG 5.1 or later installed.


On-Demand Vulnerability Assessment

You can conduct an Vulnerability Assessment anytime you need by using an on-demand assessment. To initiate an on-demand assessment, click on the drop-down

menu button  for a BSS or network level, and select **Wireless Vulnerability Assessment**.

**Note**


When the scope is network level, all APs in the scope are assessed.

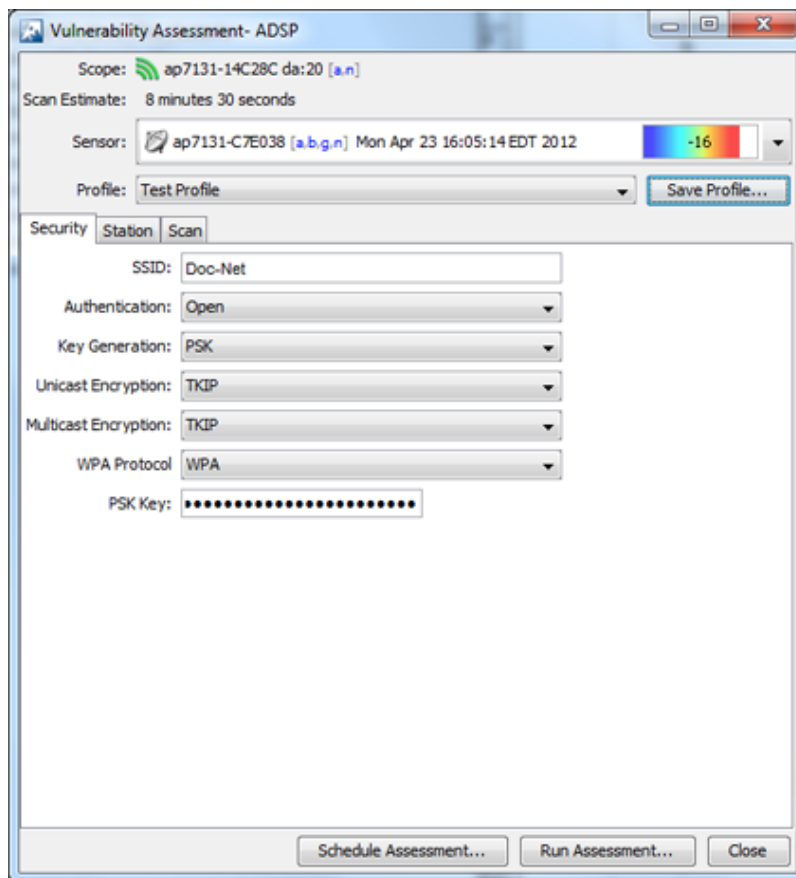

The **Vulnerability Assessment** window allows you to configure and run the assessment. After you have configured an assessment, you can save it as a profile. A profile can be selected later to run test on a similar scope.

Scheduled Vulnerability Assessment

Scheduled Vulnerability Assessments must be scheduled using the Schedule Vulnerability Assessment window. Navigate to **Menu > Scheduled Vulnerability Assessment**.

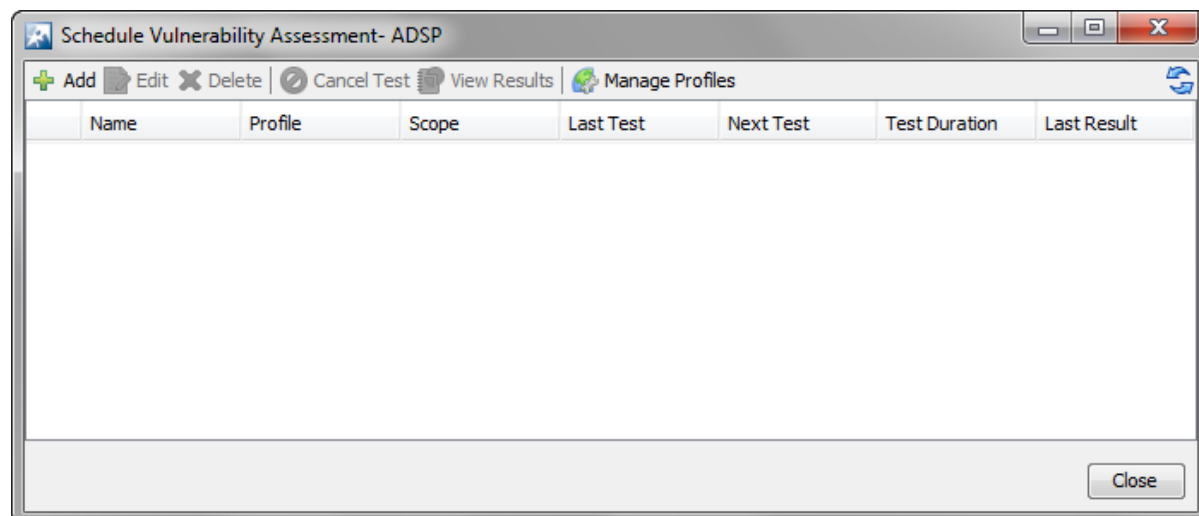

The **Scheduled Vulnerability Assessment** window displays a list of all scheduled assessments. From this window you can:

- Add, edit, delete, and cancel assessments.
- View detail assessment results.
- Manage the profiles that are used to run assessments on similar scopes.

For details on how to schedule Vulnerability Assessments and use the **Schedule Vulnerability Assessment** window, see the section [Scheduling AP Test or Vulnerability Assessment](#) on page 428.

WEP Cloaking

In order to extend the life of some older legacy equipment that only supports WEP encryption, AirDefense has implemented a feature known as WEP Cloaking. This technology injects noise into a WEP-protected environment by transmitting frames that appear to be sourced from valid devices but are encrypted with an invalid WEP key. This has very little impact on the devices that know the correct WEP key and serves to confuse any attackers which might be attempting to crack the WEP key.



Note


By default, the sensor is a passive wireless monitoring device and does not transmit (provided termination has not been enabled). Enabling the sensors for WEP Cloaking will cause the sensors to actively transmit on the channels of the devices it is protecting.

WEP Cloaking Overview

AirDefense sensors communicate with the AirDefense appliance to coordinate cloaking operation. The server can be configured to instruct a group of sensors to cloak

sanctioned devices in a given location. Sensors are designed to intelligently adjust their frequency scanning patterns to maximize cloaking effectiveness while performing regular Wireless IPS scanning on other channels. More than one sensor can cloak a single wireless device depending on spatial coverage.

Once configured for cloaking, sensors intelligently analyze local traffic and insert carefully timed cloaking frames as shown in the figure below. To attackers, who do not have the secret WEP key, these cloaking frames appear as legitimate WEP traffic between sanctioned devices. Sanctioned devices, configured with the production WEP key, automatically ignore the cloaking frames as their integrity test fails.

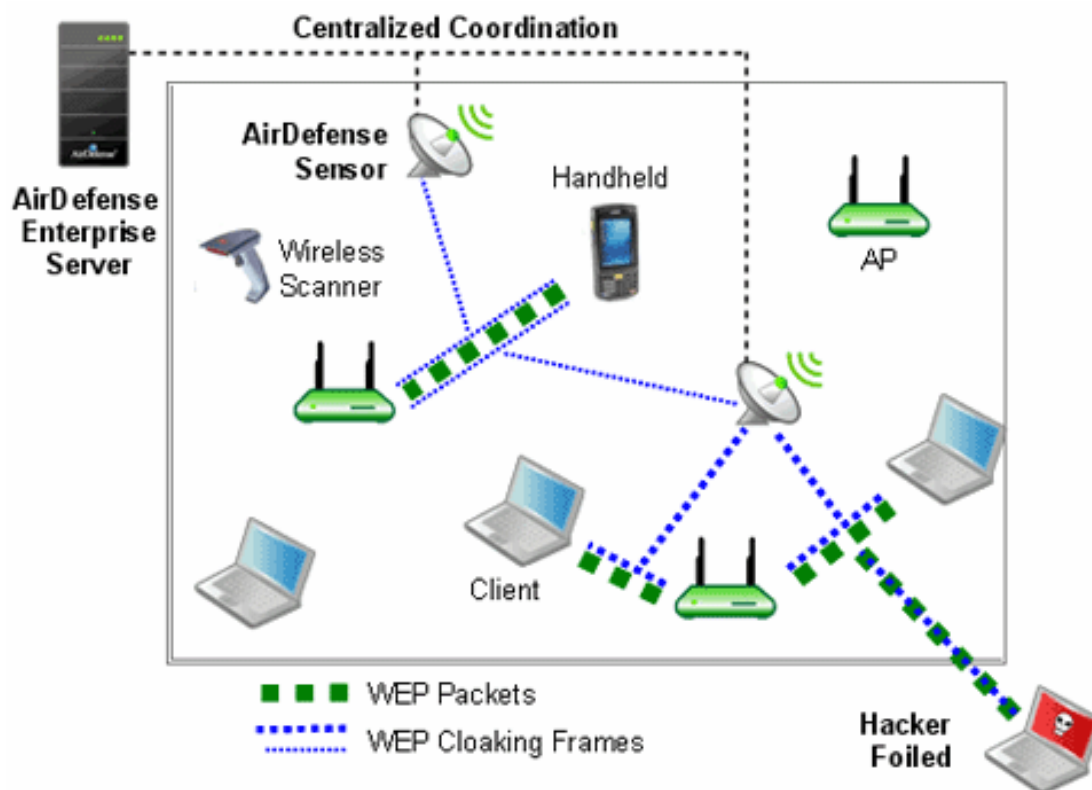

An attacker sniffing traffic will not be able to distinguish between cloaking frames and legitimate frames, and therefore, cannot filter out the cloaked frames. When statistical WEP cracking tools are run on the captured data, they simply fail to decode the key. The following figure shows a screenshot of Aircrack-ng with WEP Cloaking enabled.

```

Aircrack-ng

[00:10:45] Tested 1894657 keys (got 711357 IVs)

KB    depth  byte(vote)
0     0/ 1    01< 74> 99< 22> 95< 7> DA< 3> 2B< 3> 72< 0>
1     0/ 1    23< 107> 94< 40> 26< 18> F2< 16> DA< 15> 6A< 13>
2     0/ 1    45< 122> CA< 21> 6C< 3> 70< 1> 42< 0> AD< 0>
3     0/ 1    67< 124> 21< 15> 80< 10> 81< 5> 62< 3> B3< 3>
4     0/ 1    89< 45> B3< 9> 2A< 8> DD< 8> F4< 8> 45< 5>
5     1/ 2    AC< 10> 82< 7> B4< 5> 66< 1> 81< 0> F5< 0>
6     5/ 6    F6< 10> CB< 9> 6D< 9> FF< 7> 3C< 5> D2< 5>
7     0/ 1    97< 35> F4< 13> FF< 13> 3C< 12> F6< 11> E4< 11>
8     1/ 2    CB< 30> 4B< 10> 5D< 5> 28< 5> 08< 5> 2A< 5>
9     6/ 7    59< 15> 32< 13> 6B< 12> 1E< 11> 73< 11> 52< 9>
10    0/ 1    72< 61> 05< 30> EC< 20> 17< 16> CD< 15> EF< 14>
11    0/ 9    46< 43> 18< 32> 71< 31> 0C< 30> 4B< 26> 98< 25>

Attack failed. Possible reasons:

* Out of luck: you must capture more IVs. Usually, 104-bit WEP
  can be cracked with about one million IVs, sometimes more.

* If all votes seen equal, or if there are many negative votes,
  then the capture file is corrupted, or the key is not static.

* A false positive prevented the key from being found. Try to
  disable each Korek attack (-k 1 .. 17), raise the fudge factor
  (-f)

```

Ongoing Cloaking Ability

In the event of a wired network outage, even if sensors lose connection with the centralized server, they will continue to cloak. In addition, WEP Cloaking is optimized to not disturb the wireless environment or impact Wireless LAN performance. The sensors use countermeasures, correlation through the server, and mutual coordination over the air to maximize the effectiveness of cloaking with nominal wired and wireless bandwidth consumption.

Recommendations

- You should use a layered security approach to fortify your wireless network. AirDefense recommends that you follow these guidelines to secure a wireless network utilizing WEP wireless devices:
- Use WEP Cloaking to protect the wireless network using WEP Encryption.
- Enable policy-based termination on a Rogue Wireless Client and Replay Injection Attack alarms.
- If the devices support PSPF (Public Secure Packet Forwarding) mode, also referred to as AP isolation, you must enable it. PSPF mode prevents wireless client to wireless client communication and will limit the effectiveness of typical replay attack.
- When choosing your WEP key, it is best to use a randomly chosen hexadecimal key.
- Analyze the power output of APs to ensure that the AP is not transmitting any further than is necessary.
- Authorize only specific data rates:
 - Check the allowed data rates for each AP to ensure that unnecessary distant wireless associations do not provide wireless client access to the network through the AP. This would result in a low negotiated data rate.

- If the AP is 802.11b/g and the WEP wireless clients require 802.11b devices and not 802.11g, disable the AP from supporting data rates higher than 11 Mbps.
- Use a combination of VLANs, ACLs, and firewall rules to restrict wireless client access to wireless LANs. This adds multiple layers of security to the wired network to reduce the damaging consequences of a successful wireless breach.
- Use statically assigned wireless client IP addresses.
- Disable DNS.

Configure WEP Cloaking

Follow these steps to configure WEP Cloaking:

1. Go to **Configuration > Operational Management > Sensor Operation**.
2. Select a network level. If you want to enable WEP Cloaking for all levels, select the appliance level.
3. Select **Enable** for the WEP Cloak feature.
4. Click **Apply**.

The system automatically detects the APs to protect and starts WEP Cloaking.

ADSPAdmin

When performing initial AirDefense configuration, you have to use AirDefense's ADSPAdmin utility from the command line interface (CLI).

Once AirDefense is set up, use the Graphical User Interface (GUI) for ongoing configuration. The following functions are provided in ADSPAdmin:

- Manage
- Dbase
- Software
- Config

Accessing the ADSPAdmin Console

To use the **ADSPAdmin Config** program, you must:

1. Access the Command Line Interface.



Note

If your <Backspace> key does not work (^H is displayed instead), you need to change your terminal settings so that backspace works properly. As a temporary solution, you can use <Ctrl-Backspace> key combination.

2. Type `c`, then press `<Enter>` at the command prompt. The **Config** screen displays.

```
*** A D S P a d m i n ***

(C) Config

(IDS) Airids config
(IP) IP address config
(IPv6) IPv6 address config
(NETPORT) Network port speed/duplex config
(DNS) Define DNS servers
(BONDING) High Availability Ethernet config
(HNAME) Set hostname
(DNAME) Set domain name
(TIME) Time/Date config
(TZ) Set timezone
(NTP) Enable/disable NTP
(PING) Enable/disable ICMP Echo Request (ping) responses
(SNMPPA) Enable/disable reception Snmp agent requests
(SNMPC) Configure Snmp agent community string.
(SNMPT) Enable/disable SNMP trap reception
(HTTP) Enable/disable unencrypted sensor connections
(PANIC) Enable/disable reboot on system error
(UIPORT) Display network port for dashboard access

(Q) to quit (return to previous menu) ->
```

Manage System

Use the following included utilities to perform system management tasks:

ADSPadmin Utility	Use this utility to...
STATUS	Display the process and disk status of the system.
SYSLOG	Display system log entries resulting from authentication and sendmail failures.You can either display the logs on screen, or write logs to a text file (<i>syslogdata.txt</i>).
TRIMLOG	Truncate system log files when they become too large.
ADMU	Resets the administrator password back to the system default.
WHITELIST	Manages a list of IP addresses/address ranges that are allowed access to the AirDefense server.
PASSWD	Change the password of a Command Line User (<i>smxmgr</i> and <i>smxarchive</i>).
RESTART	Restart AirDefense processes Warning: This is not a full system reboot!

ADSPadmin Utility	Use this utility to...
REBOOT	Reboot AirDefense appliance Warning: This is a full system reboot!
HALT	Halt AirDefense (stop processes.)

Manage the Database

Use the following included utilities to manage AirDefense database.

ADSPadmin Utility	Use this utility to...
IRESTORE	Restore Forensics files.
IREPAIR	Repair Forensics files.
INTCK	Check integrity of databases.
OUI	Update vendor MAC address information in the database.
FIX7131	Handle AP7131 4.x to 5.x MAC address changes.

Software

Use this utility to check and upgrade the AirDefense software.

ADSPadmin Utility	Use this utility to...
SERVMOD	Update the current version of AirDefense software with feature enhancements or improvements.

Configure AirDefense

The ADSPadmin Config program area provides the following utilities for configuring AirDefense:

- IDS—Use this item to enable or disable SSLv3 support, Fast Termination, and MAC Spoof detection settings on the AirDefense appliance. These settings are required for AirDefense to work properly with some legacy systems.
- IP—use this to change the IP address, subnet mask, and default gateway of the AirDefense appliance.
- IPv6—use this to change the IPv6 address of the AirDefense appliance.
- NETPORT—use this to change network interface settings, and to toggle Auto-negotiation on and off.
- DNS—use this to add or delete a DNS name server (Domain Name Server).
- BONDING—use this to enable the High Availability Ethernet.
- HNAME—use this to change the name of the AirDefense appliance.
- DNAME—use this to change the domain to which the AirDefense appliance belongs.

- TIME—use this to configure the AirDefense appliances operating time and date.
- TZ—use this to configure the time zone in which the AirDefense appliance operates.
- NTP—use this to configure a specific network time server, instead of setting TIME and TZ.
- PING—use this to enable or disable ICMP echo request responses.
- SNMPA—use this to enable or disable reception SNMP agent requests.
- SNMPC—use this to configure SNMP agent community string.
- SNMPT—use this to enable or disable SNMP trap reception.
- HTTP—use this to enable or disable unencrypted Sensor connections.
- PANIC—use this to enable or disable reboot on a system error.
- UIPORT—use this to display the network port you are using for the GUI.
- SSLv3—use this to configure SSL version 3 support.

Configure IDS

Use the switches under IDS to enable AirDefense to work with some specific features. The following configurations are available under IDS:

- SSLv3—Use this switch to enable/disable support for *SSLv3*, *TLsv1.0* and *TLsv1.1* protocols. Recently these protocols were found vulnerable and we recommend that you do not use them. However, if your deployment has access points and sensors that support these protocols, we recommend that you enable this switch. Otherwise, you should evaluate the devices in your network and consider disabling support for *SSLv3*, *TLsv1.0* and *TLsv1.1* protocols using this switch.
- FTMODE—Use this switch to enable/disable Fast Termination. When enabled, AirDefense internally adjusts various operating parameters and configurations to support Fast Termination.
- SPOOF—Use this switch to enable/disable AirDefense's new *MAC Spoof Detection* algorithm. This algorithm uses Forensic data and forensic queries to raise the new "MAC Spoof Detected" alarm. If you are not interested in this new alarm, we recommend you disable this alarm using this switch. By default, this switch is enabled.

IP Address Configuration

To configure the IP address of your AirDefense server:

1. Type `ip`, then press `[Enter]` at the prompt to change the IP address, subnet mask, and default gateway of the AirDefense appliance you are logged onto. The IP configuration screen opens, displaying the current network configuration.
2. Type a new IP address at the prompt. Press `[Enter]`.
3. Type a new subnet mask. Press `[Enter]`.
4. Type a new gateway address. Press `[Enter]`. Your new values display in bold text.

5. Type `yes` at the prompt to commit the changes. This returns you to the previous network screen. AirDefense reboots on exit from ADSPAdmin.

**Important**

If you are logging in remotely using SSH, check these values carefully for accuracy before typing `yes` or `no` to commit the changes. Committing incorrect information will cause you to lose connectivity to the ADSP appliance when it reboots.

IPv6

To configure the IPv6 address of your AirDefense server:

1. Type `ipv6`, then press `[Enter]` at the prompt to change the IPv6 address. The IPv6 configuration screen opens, displaying the current network configuration.
2. If this is your first time using IPv6, you are prompted to enable IPv6. Just type `yes` and press `[Enter]`.
3. Type a new IPv6 address at the prompt. Press `[Enter]`.
4. Type `yes` at the prompt to commit the changes. This returns you to the previous network screen. AirDefense reboots on exit from the ADSPAdmin.

NETPORT

Use NETPORT to configure the network interface link speed, duplex setting, and to toggle Auto-negotiation on and off. The Auto-negotiation feature enables the AirDefense appliance to analyze the network and find the most efficient network interface available.

1. Type `netport`, then press `[Enter]` at the prompt. The Netport configuration screen opens, displaying the current network interface configuration.
2. At the prompt, press `[Enter]` to keep the Autonegotiation at its current status, or type in `on` or `off` to change the configuration. Press `[Enter]` again.

**Note**

The following steps appear only if the `off` option is selected.

3. At the prompt, press `[Enter]` to keep the current link speed, or type in the desired value. Choices are: `10`, `100`, or `1000` Mb/s. Press `[Enter]` again. The screen displays the duplex setting selections.
4. At the prompt, press `[Enter]` to keep the current duplex setting, or type in the desired setting. Choices are `half` (for half duplex) and `full` (for full duplex). Press `[Enter]` again. The screen displays the new network interface configuration.
5. At the prompt, type `yes` to commit the changes, or `no` to cancel the operation.
6. Press `[Enter]`. You are returned to the Config settings screen.

DNS Configuration

To configure the DNS servers of your AirDefense server:

1. Type `dns`, then press `[Enter]` at the prompt to define DNS servers. This adds or deletes a DNS name server (Domain Name Server). This is the name of the server you give to your DNS server. The **NameServer** screen opens, displaying your current DNS servers IP address in bold text.
 - To add an entry—type `a` at the prompt and type the IP address at the ensuing prompt. Press `[Enter]` to add the new DNS server to the list of nameServers.
 - To delete an entry—type `d` at the prompt. At the next prompt, type in the index number of the name server you want to delete. (If you delete a DNS server that is followed by other servers, all the ones with a lower preference will move up in priority.)
2. At the prompt, type `a` to add a new DNS server. To delete a server, type `d`.



Important

Multiple DNS servers process DNS requests in order. The first DNS server on the list (identified by the number 1) is the first to offer name resolution, the second DNS server on the list (identified by the number 2) is the second to process the request if the first is unable to do so. To change the order preference of multiple servers, you must delete them all, and re-enter them in the order you want them to process your DNS requests. The first DNS server you enter will become number 1 and the first to process name resolution.

3. Type `q`, then press `[Enter]` to quit and return to the main screen. You are prompted to save your changes.
4. Type `yes`, then press `[Enter]`.

Bonding Configuration

1. At the command prompt, type `bonding`, then press `[Enter]` to enable the High Availability Ethernet.
2. Type `b`, then press `[Enter]`. You will receive confirmation that bonding is enabled.
3. Type `q`, then press `[Enter]` to return to the **Config** settings screen.

hname Configuration



Note

The HNAME must be configured in the DNS server so that it can be resolved to an IP address. Also, the DNS server must be configured in ADSPadmin before the HNAME can be used in AirDefense.

1. At the command prompt, type `hname`, then press `[Enter]` to change the hostname. The current hostname is displayed.
2. Type in the new hostname for your AirDefense appliance, then press `[Enter]`. You are prompted to save your changes.
3. Type `yes`, then press `[Enter]`.

dname Configuration

To configure the DNAME value of your AirDefense server:



Note

If your system is set up to use DHCP, you will not be able to change the domain name using the ADSPAdmin Config program.

1. At the command prompt, type `dname`, then press `[Enter]` to change the domain name. The current domain name is displayed.
2. Type in the new domain name for your AirDefense appliance, then press `[Enter]`. You are prompted to save your changes.
3. Type `yes`, then press `[Enter]`.

Time Configuration



Important

Changing the system time/date could affect the integrity of the database. Any change will cause a system reboot on exit from ADSPAdmin. Setting AirDefense time consists of setting the Time and Date (TIME) and the Timezone (TZ), or alternately, enabling an NTP server (NTP). You must set the correct time, time of day, timezone, and date. You can also enable an NTP server when you first setup AirDefense. Changing the time configurations after your system has accumulated data can have an adverse affect on the integral state, time, and event associations that are essential to accurate data reporting.

1. Type `time`, then press `[Enter]` at the prompt to change the AirDefense appliances operating time and date.
2. The current date and time displays. You are prompted to enter a date in MMDDYYYY format. (Do not use colon (:), forward slash (/), or any other delimiters.)
3. Press `[Enter]`. You are prompted to enter a time in 24-hour HHMM or HHMMSS format. (Do not use colon (:) or any other delimiters.)
4. Press `[Enter]`. You are prompted to save your changes.
5. Type `yes`, then press `[Enter]`.

Time Zone Configuration

To configure a valid time zone (TZ) for your AirDefense server:



Important

Any change will cause a system reboot on exit from ADSPAdmin.

1. Type `tz`, then press `[Enter]` at the prompt to change the AirDefense appliances time zone. The **Time Zone** screen displays a list of global, continental regions. AirDefense prompts you to choose a global area in which your AirDefense appliance resides.
2. Enter the corresponding number (to the left of your region name). Press `[Enter]`. A list of nations appears.
3. Enter the abbreviation of your nationality (to the left of the nation) in which the AirDefense appliance resides. Press `[Enter]`. A list of nationalities appears.

4. Enter the number of the region within your nationality in which the AirDefense appliance resides. Press `[Enter]`. You are prompted to save your changes.
5. Type `yes`, press `[Enter]`. Typing `yes` or `no` reboots and clears the database on exit from ADSPadmin.

NTP Configuration

Instead of setting the AirDefense Time (TIME) and Timezone (TZ), you can enable automatic time synchronization with an NTP.

For example, if you change the AirDefense time such as when you move the AirDefense appliances location from the east to west coast of the United States, you must also locate a new network time server in the same time zone.

1. Type `ntp` at the command prompt to enable or disable a specific network time server (NTP). The NTP screen displays your current status in bold text, whether or not you are currently set to use NTP.
2. Type `e` to enable NTP. You are prompted to enter the IP address or fully qualified host name (hostname.domainname.com) of a network time server. Alternately, you can type `d` to disable NTP. No additional input is required, NTP is immediately disabled.
3. To save the network time server settings, type `q` to quit. You are prompted to save your settings.



Note

Entering an invalid time server generates an error and logs you out of ADSPadmin. Also, changing the time configurations after your AirDefense Appliance has accumulated data can have an adverse affect on the integral state, time, and event associations that are essential to accurate data reporting.

PING Config

You can enable PING by following these steps:

1. Type `ping` at the command prompt. A PING status message is displayed to alert you that PING is enabled or disabled.
2. At the prompt, type `e` to enable PING or `d` to disable.
3. Type `q` to return to the Config menu.

SNMP Agent Configuration

You can enable SNMP agent by following these steps:

1. Type `snmpa` at the command prompt. A SNMP agent status message is displayed to alert you that SNMP agent is enabled or disabled.
2. At the prompt, type `e` to enable SNMP agent.
3. Type `q` to return to the Config menu. You are prompted to save your changes.
4. Type `yes` and press `[Enter]` to save your changes (or `no` to disregard your changes). Status messages for iptables are displayed indicating if the status is OK or not.

5. Press `[Enter]` to display the Config menu.

SNMP Community String Configuration

You can configure the SNMP Community String by following these steps:

1. Type `snmpc` at the command prompt.
2. At the prompt, type the community string and press `[Enter]`. If you want to keep the current community string, just press `[Enter]` again.



Note

The default community string is *public*.

3. Type `yes` and press `[Enter]` to save your change (or `no` to disregard your change).

SNMP Trap Configuration

You can enable SNMP Trap reception by following these steps:

1. Type `snmpt` at the command prompt. A SNMP status message is displayed to alert you that SNMP trap reception is enabled or disabled.
2. At the prompt, type `e` to enable SNMP trap reception.
3. Type `q` to return to the Config menu. You are prompted to save your changes.
4. Type `yes` and press `[Enter]` to save your change (or `no` to disregard your change). Status messages for SNMP are displayed indicating if the status is OK or not.
5. Press `[Enter]` to display the Config menu.

The SNMP daemons are stopped and then restarted. The Config menu is displayed.

HTTP Configuration

You can enable HTTP unencrypted Sensor connections by following these steps:

1. Type `HTTP` at the command prompt. An HTTP status message is displayed to alert you that HTTP unencrypted Sensor connections are enabled or disabled.
2. At the prompt, type `e` to enable HTTP unencrypted Sensor connections.
3. Type `q` to return to the Config menu. You are prompted to save your changes.
4. Type `yes` and press `[Enter]` to save your changes (or `no` to disregard your change). Status messages for iptables are displayed indicating if the status is OK or not.
5. Press `[Enter]` to display the Config menu.

PANIC Configuration

You can enable reboot on a system error by following these steps:

1. Type `panic` at the command prompt. A message is displayed to alert you the reboot on system error is not currently enabled.
2. At the prompt, type `e` to enable reboot on system error.
3. Type `q` to return to the Config menu. You are prompted to save your changes.
4. Type `yes` and press `[Enter]` to save your changes (or `no` to disregard your changes).
5. Press `[Enter]` to display the Config menu.

UIPORT Configuration

UIPORT is used to display the network port that must be used to access the dashboard.

1. Type `UIPORT` at the command prompt to display the network port the GUI is currently using. The UIPORT screen displays the current UI port used for dashboard access.
2. Press `[Enter]` to return to the previous screen.

Troubleshooting

AirDefense provides modules and solution packages to assist you in troubleshooting your network. The individual modules are:

- [AP Testing](#)
- [Live RF](#)
- [Forensic RF](#)
- [Spectrum Analysis](#)

The available solution packages are:

- [Advanced Spectrum Analysis](#)
- [Advanced Troubleshooting](#)
- [Assurance Suite \(Network Assurance\)](#)
- [Radio Share Network Assurance](#)

AP Testing


AP Testing tracks network failures from an automated or manual AP connectivity test. Alarms are generated to indicate a failure of one of the test conditions in the test profile and should be considered a high priority event as it may be preventing the wireless applications from operating properly.

AP Testing is a tool that performs remote end to end network testing from a wireless perspective. The test is accomplished by using the deployed sensors as a wireless client to connect to an AP and validate the appropriate resources that can be reached. AP Testing allows validation of wireless authentication, encryption, DHCP, ACL and firewall testing general network connectivity, and application availability testing. These connectivity tests can be run automatically or manually providing proactive notification that the network resources may be unavailable.

See the [AP Testing](#) for details on how to schedule both automated and on-demand tests for APs.

Live RF

Live RF displays a heat map that represents signal coverage for APs placed on a floor plan. When the Floor Plan is accessed, if devices are in place, Live RF starts and a heat map is displayed.

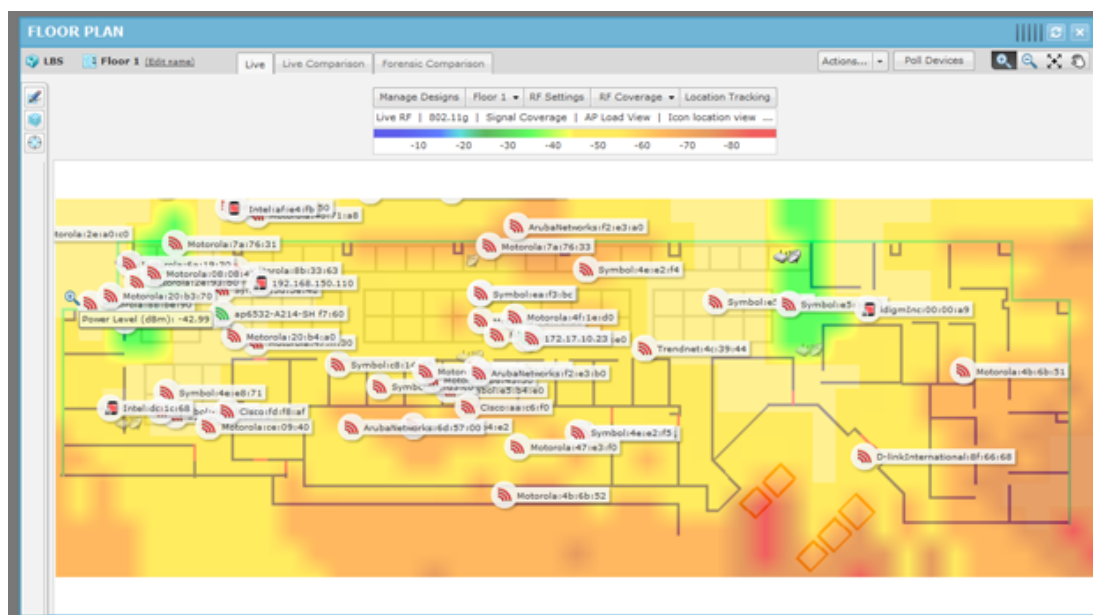

Live RF data is available on all Floor Plan pages. When the Floor Plan is refreshed (manually or automatically), RF data is updated using the latest data (radio, power, channel, live status, etc.) about the devices. This data comes from the last polling cycle for the devices. If the **Poll Devices** button is clicked, the devices are refreshed first by AirDefense and then the RF data is updated and displayed in the Floor Plan.

The heat map can be filtered according to:

- Visualization/Application—Uses the visualizations and applications that configured in **Configuration > Network Assurance > Live RF Settings**.
- Protocol—Uses one of the available protocols (802.11a, 802.11b, 802.11g, and 802.11n).
- Devices—Filters RF data by a single device, a group of devices determined by SSID, or all devices.

Forensic RF

The Forensic RF feature, included with the Live RF license, visualizes forensic data to display coverage over a specific time range.



Spectrum Analysis

The Spectrum Analysis module gives you a tool to identify and locate interference sources on your wireless network. The analysis is conducted using only AirDefense software; no extra hardware is required.




Note

You must have a valid Spectrum Analysis license for each sensor that you wish to conduct an analysis from.

Spectrum Analysis supports two modes of operation:


- Background Scanning
 - Part-time scanning of power spectral density (Layer 1), while sensor continues to scan for WIPS (Layer 2).
 - Generate 'RF Spectrum Analysis' alerts (Bluetooth, Microwave, Frequency Hopper, Continuous Wave)
- Dedicated Spectrum View
 - Sensor temporarily dedicated to Spectrum Analysis
 - While in Spectrum View the sensor provides no protocol analysis (after user-configured time period, sensor defaults back to WIPS)
 - Scanning options:
- Full Scan Mode—scan full 2.4-2.5 GHz and 4.9-6.1 GHz spectrum to identify presence of interference (scan more channels, spend less time on each channel)
- Interference Scan Mode—scan specific bands to classify type of interference source (scan fewer channels, spend more time on each channel)

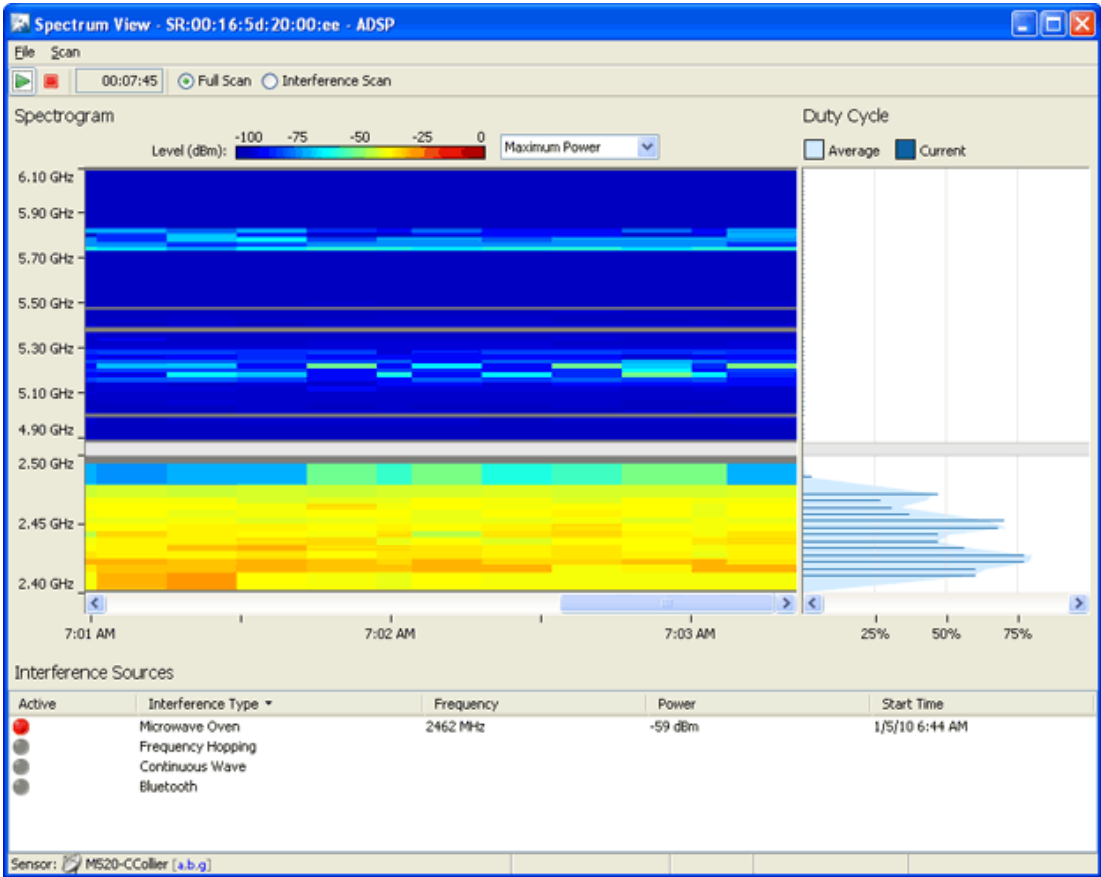

The [Spectrum Analysis](#) topic in Menu chapter fully explains how to use Spectrum Analysis.

Advanced Spectrum Analysis

Advanced Spectrum Analysis (ASA) is the next generation of Spectrum Analysis. ASA has four customizable views, each with its own set of default charts:

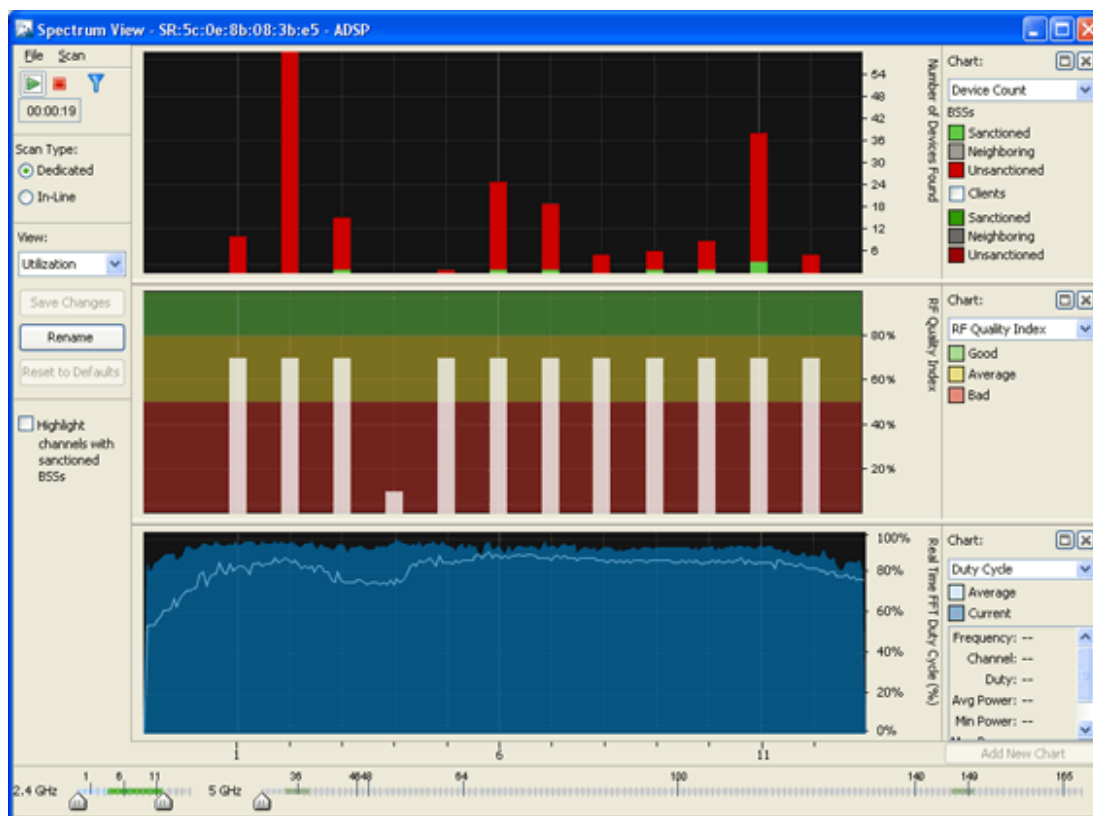

- Utilization—Displays charts showing how your network is being utilized. The default charts are:
 - Device Count
 - RF Quality Index
 - Duty Cycle.
- Physical Layer—Displays charts that highlight the physical layer of your network. The default charts are:
 - Spectrogram
 - Duty Cycle.
- Interference—Displays charts showing interference sources in your network. The default charts are:
 - Interference
 - Spectral Density.
- Spectrum Detail—Displays charts showing the spectrum details of your network. The default charts are:
 - Spectrogram
 - Real Time FFT (Fast Fourier Transform)

- Spectral Density.

**Note**

APs 7522 and 7532 do not support Spectrum Analysis or Advanced Spectrum Analysis when running in RadioShare mode. When the APs are configured as dedicated sensors, both SA and ASA are enabled and fully functional.

The [Advanced Spectrum Analysis](#) topic in Configuration chapter fully explains how to configure and use the Advanced Spectrum Analysis tool.

Advanced Troubleshooting

An Advanced Troubleshooting license gives you access to the AP test module. AP Test provides a way to remotely test connectivity to APs.

Assurance Suite (Network Assurance)

The Network Assurance solution includes several modules that assist you in:

- Improving your wireless network availability while reducing network downtime.
- Reducing expenses associated with wireless network performance and maintenance.
- Resolving problems via remote management.

With an Assurance Suite (Network Assurance) license, you receive the following modules:

- Advanced Troubleshooting which includes AP Test
- Advanced Forensics discussed under Security
- Live RF
- Spectrum Analysis.

You get all of these modules in one package without having to obtain an individual license for each module.

Radio Share Network Assurance

AirDefense has a Network Assurance solution that goes hand-in-hand with Sensor or AP radio sharing. With a Radio Share Network Assurance license, you receive the following modules:

- Radio Share Testing
- Radio Share Advanced Forensics
- Radio Share Client Connectivity Troubleshooting
- Radio Share Spectrum Analysis.

Customer Support

For more information on customer support see [Help and Support](#) on page 14 section in this document.

AirDefense Icons

AirDefense uses a large number of icons to represent the different states of devices managed by it. AirDefense icons can be broadly classified as:

- [AirDefense Application Icons](#)—Describes the various icons used to depict AirDefense's state.
- [Wireless Client Icons](#)—Describes the various icons used to depict the state of wireless clients identified in the AirDefense managed network.

AirDefense Application Icons

The following Icons are used in the AirDefense application. They are organized into the following categories:

- [Overlay Icons](#)—Describes the icons used as overlay to convey additional meaning to other icons
- [Dashboard Icons](#)—Describes the icons used on the AirDefense dashboard
- [Tree Icons](#)—Describes the various icons used to represent AirDefense tree hierarchy
- [Alarm Icons](#)—Describes the various icons used to represent the various alarms generated by AirDefense
- [Appliance Icons](#)—Describes the icons used to represent the state of the AirDefense Appliance
- [Switch Icons](#)—Describes the various icons used to represent the switches managed by the AirDefense Appliance
- [Sensor Icons](#)—Describes the various icons used to represent the state of sensors managed by the AirDefense Appliance
- [Access Point Icons](#)—Describes the various icons used to represent the state of access point managed by the AirDefense Appliance
- [BSS Icons](#)—Describes the various icons used to represent the different BSSs identified by AirDefense
- [Unknown Device Icons](#)—Describes the icons used to represent unknown devices identified by AirDefense
- [Manager Icons](#)—Describes the icons used to represent device managers identified by AirDefense
- [SSID Icons](#)—Describes the icon that indicates the SSID of a BSS

Overlay Icons

The following symbols are used in conjunction (as overlay) with the device icons to help identify them:

Symbol	Description
	Offline device
	Unlicensed device
	Device on wired network
	Device on wireless network
	Unmanaged device
	Part of a bridged network
	Associated to a network
	Participating in an Ad-Hoc network
	Wi-Fi Direct device

Dashboard Icons

The following icons represent the dashboard graphs and charts:

Icon	Description
	Displays Dashboard components as a pie chart.
	Displays Dashboard components as a column chart.
	Displays Dashboard components as a bar chart.
	Displays Dashboard components as a table.
	Displays Dashboard components as a line chart.

Tree Icons

The following icons describe the device in the tree view window:

Icon	Description
	This is the highest level in the tree. It represents the entire system.
	This is the second highest level in the tree. It represents an appliance.
	This is the third highest level in the tree. It represents the country.
	This is the fourth highest level in the tree. It represents a region
	This is the fifth highest level in the tree. It represents a city.
	This is the sixth highest level in the tree. It represents a campus.
	This is the seventh highest level in the tree. It represents an area or building.
	This is the lowest level in the tree. It represents a floor.
	This represents an unplaced device. It has not been placed in any tree level.

Alarm Icons

The following are the alarm icons:

Icon	Description
	Alarm—Icon for individual event.
	Behavior(Anomalous Behavior)—Indicates device is operating outside normal expectations.
	Exploits—Events caused by a potentially malicious user actively interacting on your Wireless LAN.
	Infrastructure—Events related to Infrastructure Management and Infrastructure Faults.
	Performance—Wireless LAN traffic that exceeds set performance thresholds for devices.

Icon	Description
	Platform Health—Events that provide information about the state of the AirDefense Services Platform and the Sensors which report back to the appliance.
	Policy Compliance—Events which indicate devices are not in compliance with the defined policy.
	Reconnaissance—Monitors and tracks external devices that are attempting to monitor your Wireless LAN.
	Rogue Activity—Unauthorized Devices detected by AirDefense which pose a risk to the security of your network.
	Vulnerability—Devices that are detected to be susceptible to attack.

Appliance Icons

The following icons indicate the state of the AirDefense appliance.

Icon	Description
	Online AirDefense appliance.
	Offline AirDefense appliance.

Switch Icons

These icons indicate the state of the switches managed by AirDefense.

Icon	Description
	A managed online switch seen on your wired network that has been configured for polling.
	An online switch seen on your wired network that is not managed by ADSP.
	A managed offline switch seen on your wired network that has been configured for polling.
	A managed online switch that you are planning to add to your wired network.
	A managed online switch seen on your wireless network that has been configured for polling.
	An online switch seen on your wireless network that is not managed by ADSP.

Icon	Description
	A managed offline switch seen on your wireless network that has been configured for polling.
	A managed online switch that you are planning to add to your wireless network.

Sensor Icons

These icons indicate the state of a sensor:

Icon	Description
	A Sensor that is functioning normally and is communicating with the AirDefense Server. To be online, the Sensor must be connected to the AirDefense Server.
	A Sensor that is not communicating with the AirDefense Server. If you did not intentionally take a Sensor off-line, check the Sensor's configuration settings.
	A Sensor that is not licensed with the AirDefense Server. Use the Licenses feature of the Appliance Manager to check the license status.
	A Sensor that is in the auto-connect mode. Note: The Sensor auto-connect mode is the fourth phase of zero touch. After 5 minutes of attempting zero touch discovery and an AP is not adopted by a switch or the default password has been changed, a Sensor will enter the auto-connect mode and attempt to connect the AP to the AirDefense appliance.
	A planned Sensor as seen in adding planned devices to a floor plan.
	A Sensor that is in radio share mode. Note: If the Sensor appears in a Java applet (standalone feature) and is in radio share mode, the ap_radioShare icon displays (not a Sensor icon).
	A Sensor that is in radio share mode and is not communicating with the AirDefense Server. If you did not intentionally take the Sensor off-line, check the Sensor's configuration settings.

Icons

These icons indicate an APs state and capabilities:

Icon	Description
	An online AP that is managed by AirDefense.
	An online AP that is not managed by AirDefense.
	An offline AP that is managed by AirDefense.
	A planned as related to adding planned devices to a floor plan.
	An AP that has a Sensor in radio share mode.

BSS Icons

These icons indicate the state of the BSS:

Icon	Description
	Sanction BSS—BSS that has been sanctioned by AirDefense.
	Unsanctioned BSS—BSS that has not been sanctioned by AirDefense.
	Neighboring BSS—BSS that is on a neighboring network.
	Ad-Hoc BSS—An ad-hoc network with one or more Wireless Clients connected to it.
	Not Observed BSS—BSS that has not been seen by a Sensor.
	Bridge Sanction BSS—Two or more BSSs that have been bridged and sanctioned by AirDefense.
	Bridge Unsanctioned BSS—Two or more BSSs that have been bridged and are not sanctioned by AirDefense.
	Bridge Neighboring BSS—Two or more BSSs that are bridged and on a neighboring network.
	Wi-Fi Direct Sanctioned BSS—Wi-Fi Direct BSS that has been sanctioned by AirDefense.

Icon	Description
	Wi-Fi Direct Unsanctioned BSS—Wi-Fi Direct BSS that has not been sanctioned by AirDefense.
	Wi-Fi Direct Neighboring BSS—Wi-Fi Direct BSS that is on a neighboring network.

Unknown Device Icons

These icons depict the status of unknown devices in the network:

Icon	Description
	Unknown device detected in your wireless traffic.
	Non-wireless device marked as a wired resource.

Manager Icons

These icons depict managers in the AirDefense network:

Icon	Description
	Wired Manager
	Wireless Manager

SSID Icon

This icon depicts the SSID information:

Icon	Description
	This is the Service Set Identifier to which the BSSs belong.

Wireless Client Icons

There are various types of Wireless Clients. Each type has its own set of icons to identify the Wireless Clients throughout the AirDefense GUI. The different types are:

- [Default or Un-categorized Devices](#)—Default (used to identify Wireless Clients that have not been associated with a specific type)
- [MCDs](#)—Describes the various icons used to represent the state of mobile computing devices carried by employees

- [VoIP Phones](#)—Describes the various icons used to represent the state of Voice Over Internet Protocol (VoIP) devices in the network
- [Laptops](#)—Describes the various icons used to represent the state of Laptops identified by AirDefense
- [Employee Laptops](#)—Describes the various icons used to represent the state of laptops assigned to employees as identified by AirDefense
- [Employee Phones](#)—Describes the various icons used to represent the state of mobile phones assigned to employees as identified by AirDefense
- [Employee Devices](#)—Describes the various icons used to represent the state of devices other than Laptops, MCDs, and Mobile Phones assigned to employees as identified by AirDefense
- [High Priority Visitor Devices](#)—Describes the various icons used to represent the state of devices identified as High Priority Visitor devices
- [Visitor Devices](#)—Describes the various icons used to represent the state of visitor devices
- [Low Priority Visitor Devices](#)—Describes the various icons used to represent the state of devices identified as belonging to Low Priority Visitors

Default or Uncategorized Devices

The following icons describe devices that are identified by AirDefense but are yet to be classified:

Icon	Description
	A Wireless Client that is sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	A Wireless Client that is not sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	A Wireless Client on a neighboring network that is currently probing but is not associated to a BSS.
	A Wireless Client that has not been seen by a Sensor and is currently probing but is not associated to a BSS.
	A Wireless Client that is sanctioned by AirDefense and is currently probing and is associated to a BSS.
	A Wireless Client that is not sanctioned by AirDefense and is currently probing and is associated to a BSS.
	A Wireless Client on a neighboring network that is currently probing and is associated to a BSS.
	One or more Wireless Clients that are sanctioned by AirDefense forming an Ad-Hoc network.

Icon	Description
	One or more Wireless Clients that are not sanctioned by AirDefense forming an Ad-Hoc network.
	One or more Wireless Clients on a neighboring network forming an Ad-Hoc network.
	A Wi-Fi Direct Wireless Client that is sanctioned by AirDefense.
	A Wi-Fi Direct Wireless Client that is not sanctioned by AirDefense.
	A Wi-Fi Direct Wireless Client on a neighboring network.

MCDs

These icons display MCD status:

Icon	Description
	A MCD that is sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	A MCD that is not sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	A MCD on a neighboring network that is currently probing but is not associated to a BSS.
	A MCD that has not been seen by a Sensor and is currently probing but is not associated to a BSS.
	A MCD that is sanctioned by AirDefense and is currently probing and is associated to a BSS.
	A MCD that is not sanctioned by AirDefense and is currently probing and is associated to a BSS.
	A MCD on a neighboring network that is currently probing and is associated to a BSS.
	One or more MCDs that are sanctioned by AirDefense forming an Ad-Hoc network.
	One or more MCDs that are not sanctioned by AirDefense forming an Ad-Hoc network.
	One or more MCDs on a neighboring network forming an Ad-Hoc network.

Icon	Description
	A Wi-Fi Direct MCD that is sanctioned by AirDefense.
	A Wi-Fi Direct MCD that is not sanctioned by AirDefense.
	A Wi-Fi Direct MCD on a neighboring network.

VoIP Phones

These icons display VoIP phone status:

Icon	Description
	A VoIP Phone that is sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	A VoIP Phone that is not sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	A VoIP Phone on a neighboring network that is currently probing but is not associated to a BSS.
	A VoIP Phone that has not been seen by a Sensor and is currently probing but is not associated to a BSS.
	A VoIP Phone that is sanctioned by AirDefense and is currently probing and is associated to a BSS.
	A VoIP Phone is not sanctioned by AirDefense and is currently probing and is associated to a BSS.
	A VoIP Phone on a neighboring network that is currently probing and is associated to a BSS.
	One or more VoIP Phones that are sanctioned by AirDefense forming an Ad-Hoc network.
	One or more VoIP Phones that are not sanctioned by AirDefense forming an Ad-Hoc network.

Icon	Description
	One or more VoIP Phones on a neighboring network forming an Ad-Hoc network.
	A Wi-Fi Direct VoIP Phone that is sanctioned by AirDefense.
	A Wi-Fi Direct VoIP Phone that is not sanctioned by AirDefense.
	A Wi-Fi Direct VoIP Phone on a neighboring network.

Laptops

These icons display the status of laptops in your network:

Icon	Description
	A Laptop that is sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	A Laptop that is not sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	A Laptop on a neighboring network that is currently probing but is not associated to a BSS.
	A Laptop that has not been seen by a Sensor and is currently probing but is not associated to a BSS.
	A Laptop that is sanctioned by AirDefense and is currently probing and is associated to a BSS.
	A Laptop is not sanctioned by AirDefense and is currently probing and is associated to a BSS.
	A Laptop on a neighboring network that is currently probing and is associated to a BSS.
	One or more Laptops that are sanctioned by AirDefense forming an Ad-Hoc network.
	One or more Laptops that are not sanctioned by AirDefense forming an Ad-Hoc network.
	One or more Laptops on a neighboring network forming an Ad-Hoc network.
	A Wi-Fi Direct Laptop that is sanctioned by AirDefense.

Icon	Description
	A Wi-Fi Direct Laptop that is not sanctioned by AirDefense.
	A Wi-Fi Direct Laptop on a neighboring network.

Employee Laptops

These icons display the status of laptops assigned to employees:

Icon	Description
	An Employee Laptop that is sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	An Employee Laptop that is not sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	An Employee Laptop on a neighboring network that is currently probing but is not associated to a BSS.
	An Employee Laptop that has not been seen by a Sensor and is currently probing but is not associated to a BSS.
	An Employee Laptop that is sanctioned by AirDefense and is currently probing and is associated to a BSS.
	An Employee Laptop is not sanctioned by AirDefense and is currently probing and is associated to a BSS.
	An Employee Laptop on a neighboring network that is currently probing and is associated to a BSS.
	One or more Employee Laptops that are sanctioned by AirDefense forming an Ad-Hoc network.
	One or more Employee Laptops that are not sanctioned by AirDefense forming an Ad-Hoc network.
	One or more Employee Laptops on a neighboring network forming an Ad-Hoc network.
	A Wi-Fi Direct Employee Laptop that is sanctioned by AirDefense.
	A Wi-Fi Direct Employee Laptop that is sanctioned by AirDefense.
	A Wi-Fi Direct Employee Laptop on a neighboring network.

Employee Phones

These icons display the status of mobile phones assigned to employees:

Icon	Description
	An Employee Phone that is sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	An Employee Phone that is not sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	An Employee Phone on a neighboring network that is currently probing but is not associated to a BSS.
	An Employee Phone that has not been seen by a Sensor and is currently probing but is not associated to a BSS.
	An Employee Phone that is sanctioned by AirDefense and is currently probing and is associated to a BSS.
	An Employee Phone is not sanctioned by AirDefense and is currently probing and is associated to a BSS.
	An Employee Phone on a neighboring network that is currently probing and is associated to a BSS.
	One or more Employee Phones that are sanctioned by AirDefense forming an Ad-Hoc network.
	One or more Employee Phones that are not sanctioned by AirDefense forming an Ad-Hoc network.
	One or more Employee Phones on a neighboring network forming an Ad-Hoc network.
	A Wi-Fi Direct Employee Phone that is sanctioned by AirDefense.
	A Wi-Fi Direct Employee Phone that is not sanctioned by AirDefense.
	A Wi-Fi Direct Employee Phone on a neighboring network.

Employee Devices

These icons display the status of other devices (other than laptops and mobile phones) assigned to employees:

Icon	Description
	An Employee Device that is sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	An Employee Device that is not sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	An Employee Device on a neighboring network that is currently probing but is not associated to a BSS.
	An Employee Device that has not been seen by a Sensor and is currently probing but is not associated to a BSS.
	An Employee Device that is sanctioned by AirDefense and is currently probing and is associated to a BSS.
	An Employee Device is not sanctioned by AirDefense and is currently probing and is associated to a BSS.
	An Employee Device on a neighboring network that is currently probing and is associated to a BSS.
	One or more Employee Devices that are sanctioned by AirDefense forming an Ad-Hoc network.
	One or more Employee Devices that are not sanctioned by AirDefense forming an Ad-Hoc network.
	One or more Employee Devices on a neighboring network forming an Ad-Hoc network.
	A Wi-Fi Direct Employee Device that is sanctioned by AirDefense.
	A Wi-Fi Direct Employee Device that is not sanctioned by AirDefense.
	A Wi-Fi Direct Employee Device on a neighboring network.

High Priority Visitor Devices

These icons display the status of high priority visitor devices in your network.

Icon	Description
	A High Priority Visitor Device that is sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	A High Priority Visitor Device that is not sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	A High Priority Visitor Device on a neighboring network that is currently probing but is not associated to a BSS.
	A High Priority Visitor Device that has not been seen by a Sensor and is currently probing but is not associated to a BSS.
	A High Priority Visitor Device that is sanctioned by AirDefense and is currently probing and is associated to a BSS.
	A High Priority Visitor Device is not sanctioned by AirDefense and is currently probing and is associated to a BSS.
	A High Priority Visitor Device on a neighboring network that is currently probing and is associated to a BSS.
	One or more High Priority Visitor Devices that are sanctioned by AirDefense forming an Ad-Hoc network.
	One or more High Priority Visitor Devices that are not sanctioned by AirDefense forming an Ad-Hoc network.
	One or more High Priority Visitor Devices on a neighboring network forming an Ad-Hoc network.
	A Wi-Fi Direct High Priority Visitor Device that is sanctioned by AirDefense.
	A Wi-Fi Direct High Priority Visitor Device that is not sanctioned by AirDefense.
	A Wi-Fi Direct High Priority Visitor Device on a neighboring network.

Visitor Devices

These icons display the status of visitor devices in your network.

Icon	Description
	A Visitor Device that is sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	A Visitor Device that is not sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	A Visitor Device on a neighboring network that is currently probing but is not associated to a BSS.
	A Visitor Device that has not been seen by a Sensor and is currently probing but is not associated to a BSS.
	A Visitor Device that is sanctioned by AirDefense and is currently probing and is associated to a BSS.
	A Visitor Device is not sanctioned by AirDefense and is currently probing and is associated to a BSS.
	A Visitor Device on a neighboring network that is currently probing and is associated to a BSS.
	One or more Visitor Devices that are sanctioned by AirDefense forming an Ad-Hoc network.
	One or more Visitor Devices that are not sanctioned by AirDefense forming an Ad-Hoc network.
	One or more Visitor Devices on a neighboring network forming an Ad-Hoc network.
	A Wi-Fi Direct Visitor Device that is sanctioned by AirDefense.
	A Wi-Fi Direct Visitor Device that is not sanctioned by AirDefense.
	A Wi-Fi Direct Visitor Device on a neighboring network.

Low Priority Visitor Devices

These icons display the status of low priority visitor devices in your network.

Icon	Description
	A Low Priority Visitor Device that is sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	A Low Priority Visitor Device that is not sanctioned by AirDefense and is currently probing but is not associated to a BSS.
	A Low Priority Visitor Device on a neighboring network that is currently probing but is not associated to a BSS.
	A Low Priority Visitor Device that has not been seen by a Sensor and is currently probing but is not associated to a BSS.
	A Low Priority Visitor Device that is sanctioned by AirDefense and is currently probing and is associated to a BSS.
	A Low Priority Visitor Device is not sanctioned by AirDefense and is currently probing and is associated to a BSS.
	A Low Priority Visitor Device on a neighboring network that is currently probing and is associated to a BSS.
	One or more Low Priority Visitor Devices that are sanctioned by AirDefense forming an Ad-Hoc network.
	One or more Low Priority Visitor Devices that are not sanctioned by AirDefense forming an Ad-Hoc network.
	One or more Low Priority Visitor Devices on a neighboring network forming an Ad-Hoc network.
	A Wi-Fi Direct Low Priority Visitor Device that is sanctioned by AirDefense.
	A Wi-Fi Direct Low Priority Visitor Device that is not sanctioned by AirDefense.
	A Wi-Fi Direct Low Priority Visitor Device on a neighboring network.