

## ExtremeLocation Essentials Release Notes

Version 5.0



Copyright © 2021 Extreme Networks, Inc. All rights reserved.

#### Legal Notice

Extreme Networks, Inc. reserves the right to make changes in specifications and other information contained in this document and its website without prior notice. The reader should in all cases consult representatives of Extreme Networks to determine whether any such changes have been made.

The hardware, firmware, software or any specifications described or referred to in this document are subject to change without notice.

#### Trademarks

Extreme Networks and the Extreme Networks logo are trademarks or registered trademarks of Extreme Networks, Inc. in the United States and/or other countries.

All other names (including any product names) mentioned in this document are the property of their respective owners and may be trademarks or registered trademarks of their respective companies/owners.

For additional information on Extreme Networks trademarks, see: <a href="https://www.extremenetworks.com/company/legal/trademarks">www.extremenetworks.com/company/legal/trademarks</a>

#### **Open Source Declarations**

Some software files have been licensed under certain open source or third-party licenses. Enduser license agreements and open source declarations can be found at: https:// www.extremenetworks.com/support/policies/open-source-declaration/



# **Table of Contents**

Preface	.4
Text Conventions	
Documentation and Training	5
Help and Support	6
Subscribe to Product Announcements	6
Send Feedback	6
Release Notes	.8
New Features	8
Open Defects	. 8
Closed Defects	8



# Preface

Read the following topics to learn about:

- The meanings of text formats used in this document.
- Where you can find additional information and help.
- How to reach us with questions and comments.

### **Text Conventions**

Unless otherwise noted, information in this document applies to all supported environments for the products in question. Exceptions, like command keywords associated with a specific software version, are identified in the text.

When a feature, function, or operation pertains to a specific hardware product, the product name is used. When features, functions, and operations are the same across an entire product family, such as ExtremeSwitching switches or SLX routers, the product is referred to as *the switch* or *the router*.

Icon	Notice type	Alerts you to
	Тір	Helpful tips and notices for using the product
	Note	Useful information or instructions
•	Important	Important features or instructions
<u> </u>	Caution	Risk of personal injury, system damage, or loss of data
	Warning	Risk of severe personal injury

#### Table 1: Notes and warnings

Convention	Description
screen displays	This typeface indicates command syntax, or represents information as it is displayed on the screen.
The words <i>enter</i> and <i>type</i>	When you see the word <i>enter</i> in this guide, you must type something, and then press the Return or Enter key. Do not press the Return or Enter key when an instruction simply says <i>type</i> .
Key names	Key names are written in boldface, for example <b>Ctrl</b> or <b>Esc</b> . If you must press two or more keys simultaneously, the key names are linked with a plus sign (+). Example: Press <b>Ctrl+Alt+Del</b>
Words in italicized type	Italics emphasize a point or denote new terms at the place where they are defined in the text. Italics are also used when referring to publication titles.
NEW!	New information. In a PDF, this is searchable text.

#### Table 3: Command syntax

Convention	Description	
bold text	Bold text indicates command names, keywords, and command options	
<i>italic</i> text	Italic text indicates variable content.	
[]	Syntax components displayed within square brackets are optional. Default responses to system prompts are enclosed in square brackets.	
{ <b>x</b>   <b>y</b>   <b>z</b> }	A choice of required parameters is enclosed in curly brackets separate by vertical bars. You must select one of the options.	
х   у	A vertical bar separates mutually exclusive elements.	
< >	Nonprinting characters, such as passwords, are enclosed in angle brackets.	
	Repeat the previous element, for example, <i>member</i> [ <i>member</i> ].	
	In command examples, the backslash indicates a "soft" line break. When a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash.	

## **Documentation and Training**

Find Extreme Networks product information at the following locations:

Current Product Documentation Release Notes Hardware and software compatibility for Extreme Networks products Extreme Optics Compatibility Other resources such as white papers, data sheets, and case studies

Extreme Networks offers product training courses, both online and in person, as well as specialized certifications. For details, visit www.extremenetworks.com/education/.

### **Help and Support**

If you require assistance, contact Extreme Networks using one of the following methods:

#### **Extreme Portal**

Search the GTAC (Global Technical Assistance Center) knowledge base; manage support cases and service contracts; download software; and obtain product licensing, training, and certifications.

#### The Hub

A forum for Extreme Networks customers to connect with one another, answer questions, and share ideas and feedback. This community is monitored by Extreme Networks employees, but is not intended to replace specific guidance from GTAC.

#### Call GTAC

For immediate support: (800) 998 2408 (toll-free in U.S. and Canada) or 1 (408) 579 2826. For the support phone number in your country, visit: www.extremenetworks.com/support/contact

Before contacting Extreme Networks for technical support, have the following information ready:

- Your Extreme Networks service contract number, or serial numbers for all involved Extreme Networks products
- A description of the failure
- A description of any actions already taken to resolve the problem
- A description of your network environment (such as layout, cable type, other relevant environmental information)
- Network load at the time of trouble (if known)
- The device history (for example, if you have returned the device before, or if this is a recurring problem)
- Any related RMA (Return Material Authorization) numbers

#### Subscribe to Product Announcements

You can subscribe to email notifications for product and software release announcements, Field Notices, and Vulnerability Notices.

- 1. Go to The Hub.
- 2. In the list of categories, expand the Product Announcements list.
- 3. Select a product for which you would like to receive notifications.
- 4. Select Subscribe.
- 5. To select additional products, return to the Product Announcements list and repeat steps 3 and 4.

You can modify your product selections or unsubscribe at any time.

## Send Feedback

The Information Development team at Extreme Networks has made every effort to ensure that this document is accurate, complete, and easy to use. We strive to improve our documentation to help you in your work, so we want to hear from you. We welcome all feedback, but we especially want to know about:

• Content errors, or confusing or conflicting information.

- Improvements that would help you find relevant information.
- Broken links or usability issues.

To send feedback, do either of the following:

- Access the feedback form at https://www.extremenetworks.com/documentation-feedback/.
- Email us at documentation@extremenetworks.com.

Provide the publication title, part number, and as much detail as possible, including the topic heading and page number if applicable, as well as your suggestions for improvement.



## **Release Notes**

New Features on page 8 Open Defects on page 8 Closed Defects on page 8

## **New Features**

ExtremeLocation Essentials 5.0 provides the following features and improvements.

Feature	Description
XLOC-379	Updated ExtremeLocation Essentials analytics presentation based on the Industry Vertical that is configured in ExtremeCloud IQ. From ExtremeCloud IQ, select <b>Global Settings</b> > <b>Account Details</b> > <b>Organization Information</b> and select from the <b>Industry</b> field. ExtremeLocation Essentials displays Device Classification tags and labels that are appropriate for the configured Industry Vertical.
XLOC-588	Wi-Fi assets are populated with hostname and username details.

#### **Table 4: Features and improvements**

## **Open Defects**

There are no open defects for ExtremeLocation Essentials v5.0.

## **Closed Defects**

#### Table 5: Closed Issues for ExtremeLocation Essentials 5.0

ID	Description
XLOC-609	A floor plan image is required for all floors. ExtremeLocation Essentials does not recognize a floor without a floor plan image.
XLOC-614	Corrected issue where on reset of VIQ, Live Devices were not being cleared on the ExtremeLocation Essentials > Summary page.