



# ExtremeCloud™ IQ - Site Engine Release Notes

01/2023  
22.09.13  
PN: 9037634-03  
Subject to Change Without Notice



Copyright © 2023 Extreme Networks, Inc. All Rights Reserved.

## Legal Notices

Extreme Networks, Inc., on behalf of or through its wholly-owned subsidiary, Enterasys Networks, Inc., reserves the right to make changes in specifications and other information contained in this document and its website without prior notice. The reader should in all cases consult representatives of Extreme Networks to determine whether any such changes have been made.

The hardware, firmware, software or any specifications described or referred to in this document are subject to change without notice.

## Trademarks

Extreme Networks and the Extreme Networks logo are trademarks or registered trademarks of Extreme Networks, Inc. in the United States and/or other countries.

All other names (including any product names) mentioned in this document are the property of their respective owners and may be trademarks or registered trademarks of their respective companies/owners.

For additional information on Extreme Networks trademarks, please see:  
[www.extremenetworks.com/company/legal/trademarks/](http://www.extremenetworks.com/company/legal/trademarks/)

## Contact

If you require assistance, contact Extreme Networks using one of the following methods.

- [Global Technical Assistance Center \(GTAC\) for Immediate Support](#)
  - **Phone:** 1-800-998-2408 (toll-free in U.S. and Canada) or 1-603-952-5000. For the Extreme Networks support phone number in your country, visit:  
[www.extremenetworks.com/support/contact](http://www.extremenetworks.com/support/contact)
  - **Email:** [support@extremenetworks.com](mailto:support@extremenetworks.com). To expedite your message, enter the product name or model number in the subject line.
- [GTAC Knowledge](#) — Get on-demand and tested resolutions from the GTAC Knowledgebase, or create a help case if you need more guidance.
- [The Hub](#) — A forum for Extreme customers to connect with one another, get questions answered, share ideas and feedback, and get problems solved. This community is monitored by Extreme Networks employees, but is not intended to replace specific guidance from GTAC.
- [Support Portal](#) — Manage cases, downloads, service contracts, product licensing, and training and certifications.



## Extreme Networks® Software License Agreement

---

This Extreme Networks Software License Agreement is an agreement ("Agreement") between You, the end user, and Extreme Networks, Inc. ("Extreme"), on behalf of itself and its Affiliates (as hereinafter defined and including its wholly owned subsidiary, Enterasys Networks, Inc. as well as its other subsidiaries). This Agreement sets forth Your rights and obligations with respect to the Licensed Software and Licensed Materials. BY INSTALLING THE LICENSE KEY FOR THE SOFTWARE ("License Key"), COPYING, OR OTHERWISE USING THE LICENSED SOFTWARE, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS AGREEMENT, WHICH INCLUDES THE LICENSE AND THE LIMITATION OF WARRANTY AND DISCLAIMER OF LIABILITY. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, RETURN THE LICENSE KEY TO EXTREME OR YOUR DEALER, IF ANY, OR DO NOT USE THE LICENSED SOFTWARE AND CONTACT EXTREME OR YOUR DEALER WITHIN TEN (10) DAYS FOLLOWING THE DATE OF RECEIPT FOR A REFUND. IF YOU HAVE ANY QUESTIONS ABOUT THIS AGREEMENT, CONTACT EXTREME, Attn: LegalTeam@extremenetworks.com.

1. **DEFINITIONS.** "Affiliates" means any person, partnership, corporation, limited liability company, or other form of enterprise that directly or indirectly through one or more intermediaries, controls, or is controlled by, or is under common control with the party specified. "Server Application" shall refer to the License Key for software installed on one or more of Your servers. "Client Application" shall refer to the application to access the Server Application. "Licensed Materials" shall collectively refer to the licensed software (including the Server Application and Client Application), Firmware, media embodying the software, and the documentation. "Concurrent User" shall refer to any of Your individual employees who You provide access to the Server Application at any one time. "Firmware" refers to any software program or code imbedded in chips or other media. "Licensed Software" refers to the Software and Firmware collectively.
2. **TERM.** This Agreement is effective from the date on which You install the License Key, use the Licensed Software, or a Concurrent User accesses the Server Application. You may terminate the Agreement at any time by destroying the Licensed Materials, together with all copies, modifications and merged portions in any form. The Agreement and Your license to use the Licensed Materials will also terminate if You fail to comply with any term of condition herein.
3. **GRANT OF SOFTWARE LICENSE.** Extreme will grant You a non-transferable, non-exclusive license to use the machine-readable form of the Licensed Software and the accompanying documentation if You agree to the terms and conditions of this Agreement. You may install and use the Licensed Software as permitted by the license type purchased as described below in License Types. The license type purchased is specified on the invoice issued to You by Extreme or Your dealer, if any. YOU MAY NOT USE, COPY, OR MODIFY THE LICENSED MATERIALS, IN WHOLE OR IN PART, EXCEPT AS EXPRESSLY PROVIDED IN THIS AGREEMENT.

---

#### 4. LICENSE TYPES.

- *Single User, Single Computer.* Under the terms of the Single User, Single Computer license, the license granted to You by Extreme when You install the License Key authorizes You to use the Licensed Software on any one, single computer only, or any replacement for that computer, for internal use only. A separate license, under a separate Software License Agreement, is required for any other computer on which You or another individual or employee intend to use the Licensed Software. A separate license under a separate Software License Agreement is also required if You wish to use a Client license (as described below).
- *Client.* Under the terms of the Client license, the license granted to You by Extreme will authorize You to install the License Key for the Licensed Software on your server and allow the specific number of Concurrent Users shown on the relevant invoice issued to You for each Concurrent User that You order from Extreme or Your dealer, if any, to access the Server Application. A separate license is required for each additional Concurrent User.

5. AUDIT RIGHTS. You agree that Extreme may audit Your use of the Licensed Materials for compliance with these terms and Your License Type at any time, upon reasonable notice. In the event that such audit reveals any use of the Licensed Materials by You other than in full compliance with the license granted and the terms of this Agreement, You shall reimburse Extreme for all reasonable expenses related to such audit in addition to any other liabilities You may incur as a result of such non-compliance, including but not limited to additional fees for Concurrent Users over and above those specifically granted to You. From time to time, the Licensed Software will upload information about the Licensed Software and the associated devices to Extreme. This is to verify the Licensed Software is being used with a valid license. By using the Licensed Software, you consent to the transmission of this information. Under no circumstances, however, would Extreme employ any such measure to interfere with your normal and permitted operation of the Products, even in the event of a contractual dispute.

6. RESTRICTION AGAINST COPYING OR MODIFYING LICENSED MATERIALS. Except as expressly permitted in this Agreement, You may not copy or otherwise reproduce the Licensed Materials. In no event does the limited copying or reproduction permitted under this Agreement include the right to decompile, disassemble, electronically transfer, or reverse engineer the Licensed Software, or to translate the Licensed Software into another computer language.

The media embodying the Licensed Software may be copied by You, in whole or in part, into printed or machine readable form, in sufficient numbers only for backup or archival purposes, or to replace a worn or defective copy. However, You agree not to have more than two (2) copies of the Licensed Software in whole or in part, including the original media, in your possession for said purposes without Extreme's prior written consent, and in no event shall You operate more copies of the Licensed Software than the specific licenses granted to You. You may not copy or reproduce the documentation. You agree to maintain appropriate records of the location of the original media and all copies of the Licensed Software, in whole or in part, made by You. You may modify the machine-readable form of the Licensed Software for (1) your own internal use or (2) to merge the Licensed Software into other program material to form a modular work for your own use, provided that such work remains modular, but on termination of this Agreement, You are required to completely remove the Licensed Software from any such modular work. Any portion of the Licensed Software included in any such modular work shall be used only on a single computer for internal purposes and shall remain subject to all the terms and conditions of this Agreement. You agree to include any copyright or other proprietary notice set forth on the label of the media embodying the Licensed Software on any copy of the Licensed Software in any form, in whole or in part,

---

or on any modification of the Licensed Software or any such modular work containing the Licensed Software or any part thereof.

7. TITLE AND PROPRIETARY RIGHTS

- a. The Licensed Materials are copyrighted works and are the sole and exclusive property of Extreme, any company or a division thereof which Extreme controls or is controlled by, or which may result from the merger or consolidation with Extreme (its "Affiliates"), and/or their suppliers. This Agreement conveys a limited right to operate the Licensed Materials and shall not be construed to convey title to the Licensed Materials to You. There are no implied rights. You shall not sell, lease, transfer, sublicense, dispose of, or otherwise make available the Licensed Materials or any portion thereof, to any other party.
- b. You further acknowledge that in the event of a breach of this Agreement, Extreme shall suffer severe and irreparable damages for which monetary compensation alone will be inadequate. You therefore agree that in the event of a breach of this Agreement, Extreme shall be entitled to monetary damages and its reasonable attorney's fees and costs in enforcing this Agreement, as well as injunctive relief to restrain such breach, in addition to any other remedies available to Extreme.

8. PROTECTION AND SECURITY. In the performance of this Agreement or in contemplation thereof, You and your employees and agents may have access to private or confidential information owned or controlled by Extreme relating to the Licensed Materials supplied hereunder including, but not limited to, product specifications and schematics, and such information may contain proprietary details and disclosures. All information and data so acquired by You or your employees or agents under this Agreement or in contemplation hereof shall be and shall remain Extreme's exclusive property, and You shall use your best efforts (which in any event shall not be less than the efforts You take to ensure the confidentiality of your own proprietary and other confidential information) to keep, and have your employees and agents keep, any and all such information and data confidential, and shall not copy, publish, or disclose it to others, without Extreme's prior written approval, and shall return such information and data to Extreme at its request. Nothing herein shall limit your use or dissemination of information not actually derived from Extreme or of information which has been or subsequently is made public by Extreme, or a third party having authority to do so.

You agree not to deliver or otherwise make available the Licensed Materials or any part thereof, including without limitation the object or source code (if provided) of the Licensed Software, to any party other than Extreme or its employees, except for purposes specifically related to your use of the Licensed Software on a single computer as expressly provided in this Agreement, without the prior written consent of Extreme. You agree to use your best efforts and take all reasonable steps to safeguard the Licensed Materials to ensure that no unauthorized personnel shall have access thereto and that no unauthorized copy, publication, disclosure, or distribution, in whole or in part, in any form shall be made, and You agree to notify Extreme of any unauthorized use thereof. You acknowledge that the Licensed Materials contain valuable confidential information and trade secrets, and that unauthorized use, copying and/or disclosure thereof are harmful to Extreme or its Affiliates and/or its/their software suppliers.

9. MAINTENANCE AND UPDATES. Updates and certain maintenance and support services, if any, shall be provided to You pursuant to the terms of an Extreme Service and Maintenance Agreement, if Extreme and You enter into such an agreement. Except as specifically set forth in such agreement, Extreme shall not be under any obligation to provide Software Updates, modifications, or enhancements, or Software maintenance and support services to You.

- 
10. DEFAULT AND TERMINATION. In the event that You shall fail to keep, observe, or perform any obligation under this Agreement, including a failure to pay any sums due to Extreme, or in the event that you become insolvent or seek protection, voluntarily or involuntarily, under any bankruptcy law, Extreme may, in addition to any other remedies it may have under law, terminate the License and any other agreements between Extreme and You.
- a. Immediately after any termination of the Agreement or if You have for any reason discontinued use of Software, You shall return to Extreme the original and any copies of the Licensed Materials and remove the Licensed Software from any modular works made pursuant to Section 3, and certify in writing that through your best efforts and to the best of your knowledge the original and all copies of the terminated or discontinued Licensed Materials have been returned to Extreme.
  - b. Sections 1, 7, 8, 10, 11, 12, 13, 14 and 15 shall survive termination of this Agreement for any reason.
11. EXPORT REQUIREMENTS. You are advised that the Software is of United States origin and subject to United States Export Administration Regulations; diversion contrary to United States law and regulation is prohibited. You agree not to directly or indirectly export, import or transmit the Software to any country, end user or for any Use that is prohibited by applicable United States regulation or statute (including but not limited to those countries embargoed from time to time by the United States government); or contrary to the laws or regulations of any other governmental entity that has jurisdiction over such export, import, transmission or Use.
12. UNITED STATES GOVERNMENT RESTRICTED RIGHTS. The Licensed Materials (i) were developed solely at private expense; (ii) contain "restricted computer software" submitted with restricted rights in accordance with section 52.227-19 (a) through (d) of the Commercial Computer Software-Restricted Rights Clause and its successors, and (iii) in all respects is proprietary data belonging to Extreme and/or its suppliers. For Department of Defense units, the Licensed Materials are considered commercial computer software in accordance with DFARS section 227.7202-3 and its successors, and use, duplication, or disclosure by the U.S. Government is subject to restrictions set forth herein.
13. LIMITED WARRANTY AND LIMITATION OF LIABILITY. The only warranty that Extreme makes to You in connection with this license of the Licensed Materials is that if the media on which the Licensed Software is recorded is defective, it will be replaced without charge, if Extreme in good faith determines that the media and proof of payment of the license fee are returned to Extreme or the dealer from whom it was obtained within ninety (90) days of the date of payment of the license fee.
- NEITHER EXTREME NOR ITS AFFILIATES MAKE ANY OTHER WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, WITH RESPECT TO THE LICENSED MATERIALS, WHICH ARE LICENSED "AS IS". THE LIMITED WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE EXPRESSLY DISCLAIMED, AND STATEMENTS OR REPRESENTATIONS MADE BY ANY OTHER PERSON OR FIRM ARE VOID. ONLY TO THE EXTENT SUCH EXCLUSION OF ANY IMPLIED WARRANTY IS NOT PERMITTED BY LAW, THE DURATION OF SUCH IMPLIED WARRANTY IS LIMITED TO THE DURATION OF THE LIMITED WARRANTY SET FORTH ABOVE. YOU ASSUME ALL RISK AS TO THE QUALITY, FUNCTION AND PERFORMANCE OF THE LICENSED MATERIALS. IN NO EVENT WILL EXTREME OR ANY OTHER PARTY WHO HAS BEEN INVOLVED IN THE CREATION, PRODUCTION OR DELIVERY OF THE LICENSED MATERIALS BE LIABLE FOR SPECIAL, DIRECT, INDIRECT, RELIANCE, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING LOSS OF DATA OR PROFITS OR FOR INABILITY TO USE THE LICENSED MATERIALS, TO ANY PARTY EVEN IF EXTREME OR SUCH OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN

---

NO EVENT SHALL EXTREME OR SUCH OTHER PARTY'S LIABILITY FOR ANY DAMAGES OR LOSS TO YOU OR ANY OTHER PARTY EXCEED THE LICENSE FEE YOU PAID FOR THE LICENSED MATERIALS. Some states do not allow limitations on how long an implied warranty lasts and some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to You. This limited warranty gives You specific legal rights, and You may also have other rights which vary from state to state.

14. JURISDICTION. The rights and obligations of the parties to this Agreement shall be governed and construed in accordance with the laws and in the State and Federal courts of the State of California, without regard to its rules with respect to choice of law. You waive any objections to the personal jurisdiction and venue of such courts. None of the 1980 United Nations Convention on the Limitation Period in the International Sale of Goods, and the Uniform Computer Information Transactions Act shall apply to this Agreement.
15. GENERAL.
  - a. This Agreement is the entire agreement between Extreme and You regarding the Licensed Materials, and all prior agreements, representations, statements, and undertakings, oral or written, are hereby expressly superseded and canceled.
  - b. This Agreement may not be changed or amended except in writing signed by both parties hereto.
  - c. You represent that You have full right and/or authorization to enter into this Agreement.
  - d. This Agreement shall not be assignable by You without the express written consent of Extreme. The rights of Extreme and Your obligations under this Agreement shall inure to the benefit of Extreme's assignees, licensors, and licensees.
  - e. Section headings are for convenience only and shall not be considered in the interpretation of this Agreement.
  - f. The provisions of the Agreement are severable and if any one or more of the provisions hereof are judicially determined to be illegal or otherwise unenforceable, in whole or in part, the remaining provisions of this Agreement shall nevertheless be binding on and enforceable by and between the parties hereto.
  - g. Extreme's waiver of any right shall not constitute waiver of that right in future. This Agreement constitutes the entire understanding between the parties with respect to the subject matter hereof, and all prior agreements, representations, statements and undertakings, oral or written, are hereby expressly superseded and canceled. No purchase order shall supersede this Agreement.
  - h. Should You have any questions regarding this Agreement, You may contact Extreme at the address set forth below. Any notice or other communication to be sent to Extreme must be mailed by certified mail to the following address:

Extreme Networks, Inc.  
145 Rio Robles  
San Jose, CA 95134 United States  
ATTN: General Counsel

---

# Table of Contents

ExtremeCloud™ IQ - Site Engine Release Notes .....	1
Extreme Networks® Software License Agreement .....	3
Table of Contents .....	8
22.09.13 Release Notes .....	11
Licensing Changes .....	11
Onboarding ExtremeCloud IQ - Site Engine from ExtremeCloud IQ in Connected Deployment Mode ..	12
Customer Found Defects and Known Issues .....	12
Customer Found Defects Addressed 22.09.13 .....	12
Customer Found Defects Addressed 22.09.12 .....	12
Customer Found Defects Addressed 22.09.11 .....	13
Customer Found Defects Addressed 22.09.10 .....	13
Known Issues Addressed in 22.09.12 .....	15
Known Issues Addressed in 22.09.11 .....	15
Known Issues Addressed in 22.09.10 .....	15
Addressed Vulnerabilities .....	16
22.09.13 ExtremeCloud IQ - Site Engine, ExtremeAnalytics, ExtremeControl images, and Application Analytics Traffic Sensor images: .....	16
22.09.12 ExtremeCloud IQ - Site Engine, ExtremeAnalytics, ExtremeControl images, and Application Analytics Traffic Sensor images: .....	16
22.09.12 ExtremeControl images: .....	16
22.09.12 ExtremeCloud IQ - Site Engine images: .....	17
22.09.11 ExtremeCloud IQ - Site Engine, ExtremeAnalytics, ExtremeControl images, and Application Analytics Traffic Sensor images: .....	17
22.09.10 ExtremeCloud IQ - Site Engine, ExtremeAnalytics, ExtremeControl images, and Application Analytics Traffic Sensor images: .....	17
Installation, Upgrade, and Configuration Changes .....	17
Installation Information .....	17
Installing Without an Internet Connection .....	18
Custom FlexViews .....	18



---

Custom MIBs and Images .....	18
Important Upgrade Information .....	19
Important Upgrade Considerations .....	20
License Renewal .....	21
Free Space Consideration .....	21
Site Discover Consideration .....	21
ExtremeAnalytics Upgrade Information .....	21
ExtremeControl Version 8.0 and later .....	22
Other Upgrade Information .....	22
Fabric Configuration Information .....	22
Certificate .....	22
Authentication Key .....	23
Service Configuration Change .....	23
CLIP Addresses .....	23
Gateway Address Configuration Change .....	23
Upgrading VSP-8600 .....	23
Removing Fabric Connect Configuration .....	23
Password Configuration .....	24
VRF Configuration .....	24
Device Configuration Information .....	24
VDX Device Configuration .....	24
VOSS/Fabric Engine Device Configuration .....	24
ERS Device Configuration .....	25
SLX Device Configuration .....	25
ExtremeXOS Device Configuration .....	26
Firmware Upgrade Configuration Information .....	26
Wireless Manager Upgrade Information .....	26
Server and Client System Requirements .....	27
ExtremeCloud IQ - Site Engine Server Requirements .....	27
ExtremeCloud IQ - Site Engine Client Requirements .....	27

---

ExtremeCloud IQ - Site Engine Server and Client Hardware Requirements .....	27
ExtremeCloud IQ - Site Engine Server Requirements .....	28
ExtremeCloud IQ - Site Engine Client Requirements .....	28
Virtual Engine Requirements .....	29
ExtremeCloud IQ - Site Engine Virtual Engine Requirements .....	29
ExtremeControl Virtual Engine Requirements .....	29
ExtremeAnalytics Virtual Engine Requirements .....	30
Fabric Manager Requirements .....	30
ExtremeControl Agent OS Requirements .....	31
ExtremeControl Supported End-System Browsers .....	32
ExtremeControl Engine Version Requirements .....	33
ExtremeControl VPN Integration Requirements .....	33
ExtremeControl SMS Gateway Requirements .....	33
ExtremeControl SMS Text Messaging Requirements .....	33
ExtremeAnalytics Requirements .....	33
Ekahau Maps Requirements .....	34
Guest and IoT Manager Requirements .....	34
Guest and IoT Manager Server OS Requirements .....	34
Guest and IoT Manager Outlook Add-in Client Requirements .....	34
Guest and IoT Manager Virtual Engine Requirements .....	34
Guest and IoT Manager Supported Browsers .....	34

## 22.09.13 Release Notes

ExtremeCloud IQ - Site Engine includes all the features and functionality of Extreme Management Center as well as issues that have been resolved and configuration changes for this release.

If you are an existing Extreme Management Center customer, contact your representative to have your Extreme Management Center license migrated to an ExtremeCloud IQ - Site Engine license. The ExtremeCloud IQ - Site Engine license also includes licensing for ExtremeAnalytics.

### IMPORTANT:

- For upgrade and installation requirements, as well as configuration considerations, see [ExtremeCloud IQ - Site Engine Configuration and Requirements](#).
- ExtremeCloud IQ - Site Engine version 22.09.13 consumes licenses from ExtremeCloud IQ in a connected deployment mode or from a license file in air gap deployment mode. ExtremeCloud IQ - Site Engine is a subscription-based -only licensing model. Existing NMS licenses do not provide access to ExtremeCloud IQ - Site Engine. You can view the status of your license by accessing [Administration > Licenses](#) after the installation is complete.
- ExtremeCloud IQ - Site Engine is not compatible with ExtremeCloud IQ Connect level account. Either the Evaluation or Pilot level is mandatory.
- In Connected mode, ports statistics are shared with ExtremeCloud IQ only for ports that are enabled to Collect Port Statistics.
- Onboarding ExtremeCloud IQ - Site Engine devices using an ExtremeCloud IQ HIQ account is not supported. You must use a VIQ Account to onboard ExtremeCloud IQ - Site Engine devices.

For information regarding the features supported by specific devices, see the [Firmware Support Matrix](#). Version 22.09.13 of ExtremeCloud IQ - Site Engine supports the devices listed in the matrix.

Devices that do not have serial numbers or MAC addresses in Extreme Management Center must be rediscovered after you upgrade to ExtremeCloud IQ - Site Engine before they can be onboarded to ExtremeCloud IQ.

**Connected mode only** - If your number of devices exceeds your licenses available, ExtremeCloud IQ - Site Engine transitions to a license violation state and your access to ExtremeCloud IQ - Site Engine is locked. To resolve the license shortage you need to access the Extreme Networks portal or ExtremeCloud IQ to evaluate the quantities of available Pilot and Navigator licenses versus the number of licenses required by ExtremeCloud IQ - Site Engine.

## Licensing Changes

Beginning with ExtremeCloud IQ - Site Engine version 21.04.10, your ExtremeAnalytics license is included as part of your ExtremeCloud IQ Pilot license. Separate licenses are no longer required.

For users upgrading from Extreme Management Center to ExtremeCloud IQ - Site Engine, note that the XIQ-NAC subscription must be used instead of IA-ES- license. For new users that complete an initial install of ExtremeCloud IQ - Site Engine, ExtremeControl licensing does not include end-system capabilities.

## Onboarding ExtremeCloud IQ - Site Engine from ExtremeCloud IQ in Connected Deployment Mode

After installing or upgrading to ExtremeCloud IQ - Site Engine, you need to [onboard](#) ExtremeCloud IQ - Site Engine to ExtremeCloud IQ. When the onboarding is complete, you can then access ExtremeCloud IQ - Site Engine.

Entering your ExtremeCloud IQ name and password are required during the first-time login to ExtremeCloud IQ - Site Engine.

---

**NOTE:**

If Extreme Management Center is onboarded to ExtremeCloud IQ, when you upgrade to ExtremeCloud IQ - Site Engine, you need to remove Extreme Management Center from ExtremeCloud IQ before onboarding ExtremeCloud IQ - Site Engine.

---

## Customer Found Defects and Known Issues

### Customer Found Defects Addressed 22.09.13

<b>ExtremeManagement CFDs Addressed</b>	<b>ID</b>
Device Grid will now show a checkmark if switch engine/fabric engine models match the reference image.	02685630

---

### Customer Found Defects Addressed 22.09.12

<b>ExtremeConnect CFDs Addressed</b>	<b>ID</b>
Connect Intune module failed to retrieve all managed devices via Graph API calls.	2594155

---

<b>ExtremeControl CFDs Addressed</b>	<b>ID</b>
The performance of the <b>End-System</b> table was improved by updating the database configuration scan level setting.	2650720

---

<b>ExtremeManagement CFDs Addressed</b>	<b>ID</b>
The HP SFTP script was added, and the HP scripts error checking was updated.	2620608
Configure Device(s) > Reload Device was not updating the information from the device.	2674527

---

<b>ExtremeManagement CFDs Addressed</b>	<b>ID</b>
The X435 Device Archives were failing.	2685850

## Customer Found Defects Addressed 22.09.11

<b>ExtremeManagement CFDs Addressed</b>	<b>ID</b>
OneView experienced slowness in several places including Configure Device and returning from the ExtremeAnalytics menu back to the Network menu. Customers with a large number of sites and devices will notice an improvement in performance from this fix.	2643067
Device status polling stopped intermittently.	2652250

## Customer Found Defects Addressed 22.09.10

<b>ExtremeCloud IQ - Site Engine CFDs Addressed</b>	<b>ID</b>
In port selection, all ports will be displayed. Guest VM ports are no longer hidden from the user.	2580520
The <b>Connect Intune</b> module failed to retrieve all managed devices via Graph API calls.	2594155
<b>SNMP Credential</b> not displaying all created profiles.	2604590
Vendor scans picked up Amazon Correta JDK/JRE after updating to a new version.	2608008
Archiving failed when devices that do not support archiving were inadvertently added to the archive. The devices are added when <b>Add to Archive</b> under <b>Network &gt; Devices</b> is enabled by default. Access Control Engine, Purview, Traffic Sensor, and Site Engine now ignore <b>Add to Archive</b> .	2610785
Incorrect directory paths caused long firmware refresh cycles and added 1000s of files. The option <b>Max Files Parsed</b> has been added to the <b>Firmware Refresh Settings</b> in <b>Inventory Manager</b> to control the maximum number of files to parse for the firmware refresh. The default is 1000.	2612088
NAC audit event displayed <code>SERVER</code> as the username in the audit log event when the Notification configuration was changed. The correct <i>username</i> now appears in the log.	2616897
Workflows executable by the restricted user are not allowed.	2617139
The ability to change the CLIP Address Interface Number at any time caused duplicate entries. Changing the number is no longer allowed once the update of the row completes.	2617196
The HP SFTP inventory script was not working. The HP switch rebooted before the firmware upgrade completed. An HP SFTP script has been added and the other HP scripts updated for error checking.	2620608
Pre-staged devices could not be saved when configuring in <b>Discovered</b> tab.	2646497

<b>ExtremeAnalytics CFDs Addressed</b>	<b>ID</b>
Passwords containing the \$ symbol caused the scripting engine to not working properly.	2608033
Tracked <b>Applications</b> were not showing up in various queries when selecting <b>All</b> .	2610241
Adding or removing a telemetry source was not saving the telemetry configuration change on the device.	2609137
<b>ExtremeControl CFDs Addressed</b>	<b>ID</b>
When you do not clear the search/filter in the <b>Events</b> table, the Access Control group editor and other areas are intermittently hindered. This issue is addressed by allowing only the Information, Source, and User fields to be used as the criteria, however, you can expand the criteria. Client, Event, and Source Host Name can be included by selecting each one in <b>Administration &gt; Alarms/Event Logs and Tables</b> under <b>Event Search Scope by Field</b> .	2405659
High NAC transaction per second rate caused web GUI experiences to be slower.	2408846
When running scheduled tasks ( <b>Task &gt; Scheduled Tasks</b> ), it is possible for a task to end up in an infinite wait time (freeze) situation. To prevent this from happening, enter timeout values for <b>SSH Key Exchange Timeout</b> and <b>SessionTimeout</b> in <b>Administration &gt; Options &gt; Tasks</b> . The default is 30 seconds.	2474298
Expiring certificate reports are no longer cleared immediately when other certificates in the chain are not expiring.	2549716
ServiceB did not allow traffic on all other interfaces except port 8445.	
It is recommended that you disconnect the ServiceB interface in the Hypervisor if the ServiceB interface is not being used.	2552429
The print page could not contain the \$usercontent1-6 variables.	2556018
Memory leaks and file descriptor exhaustion are fixed in the Connect Clearpass and many other modules which can impact ExtremeCloud IQ - Site Engine performance.	2568026
Access control returned an incorrect policy attribute when using nested attribute variables in policy mapping. The nested attributes are now being returned correctly.	2595787
ExtremeCloud IQ - Site Engine with larger databases were rebooting before all of these services started. To address this issue, the services start-up timer has been increased from a 30 minute default to a 90 minute default.	2599402
In some cases, the proxy authentication failed but showed as accepted. An engine property setting was added to configure the nac-proxy-failed module to prevent this scenario.	2603872
The North Bound Interface was not validating the switch IP addresses field in addLocationEntryToGroup. Wrong entries are now rejected.	2615348
The CA certificates were not easily identified in <b>Update AAA Trusted Certificate Authorities</b> because there was not enough information displayed. Fields <b>Serial Number</b> , <b>Valid From</b> , and <b>Valid To</b> were added to <b>Update AAA Trusted Certificate Authorities</b> to make CAs easier to identify.	2617151
The ability to manually set <b>Distributed Cache Enable</b> was removed in a previous release making cache distribution permanently active. However, this function did not survive updates. Now you must run the <b>Enforce</b> command on the updated engine to ensure that cache distribution works after an update, .	2617452
If a temporary connection issue occurred during a policy refresh, devices were removed from the policy domain.	2618875

<b>ExtremeControl CFDs Addressed</b>	<b>ID</b>
Access Control generated an error when the <b>Description</b> contained an ampersand(&).	2623522
The broken <b>Show Keywords Help</b> URL in <b>Access Control&gt; Notification&gt; Override Content</b> .	2624542

<b>ExtremeManagement CFDs Addressed</b>	<b>ID</b>
Mobile devices getting stuck on the Captive Portal registration screen .	2420426 2443140 2576704
Some of the ExtremeAnalytics Insight Dashboard gauges were slow to process their data. A <b>Loading . . .</b> message now displays so the user will not think there is an issue.	2433608 2444423 2435428 2581076
If the same username as the MAC address was used, Access Control detected the authentication type incorrectly for 802.1X TLS . The end system is properly detected now with the correct authentication type in the <b>End-Systems</b> table.	2484541
Connect was randomly sending RADIUS Accounting frames to the Fortigate device. This caused issues with the Fortigate device and should not be allowed. Connect/FortiGate accounting requests now uses incrementing packet ID numbers.	2609484

## Known Issues Addressed in 22.09.12

### ExtremeManagement Issues Addressed

The status information in ExtremeCloud IQ was not being updated in 22.09.10 and 22.09.11.

The java-based Policy Domain Evaluation Tool was decommissioned.

Export Server Log was not functioning. The error generated a `filename not found` message.

## Known Issues Addressed in 22.09.11

### ExtremeManagement Issues Addressed

The site tree was not populating due to an error, resulting in an empty tree.

## Known Issues Addressed in 22.09.10

### ExtremeControl Issues Addressed

Added out-of-the-box support for Reauthentication (RFC 3576) for wireless controllers E2122, VE6120K, VE6125K, and VE6120H.

Per User ACLs for VOSS/Fabric Engine used bit reverse mask.

ExtremeControl and ExtremeAnalytics alarms not working.

---

### ExtremeManagement Issues Addressed

---

The script *Factory script to update app-telemetry policy file* was enhanced to support the Universal Switch series.

---

The Network OS for XIQ Native APs is now officially defined as IQ Engine. This may impact custom workflows and scripts.

---

### ExtremeAnalytics Issues Addressed

---

The Analytics Engine MTU setting was not configurable in the GUI.

---

ExtremeAnalytics reported applications as Undefined-XX and application group as Undefined.

---

Deleting S-Series devices from flow sources produced a message that the DWR was successful and to enforce the device. This message has been removed because the S-Series devices do not have their Netflow configured by ExtremeCloud IQ - Site Engine.

---

## Addressed Vulnerabilities

This section presents the vulnerabilities addressed in 22.9. If you need more information on vulnerability testing, see [Security and Vulnerability Testing](#).

### 22.09.13 ExtremeCloud IQ - Site Engine, ExtremeAnalytics, ExtremeControl images, and Application Analytics Traffic Sensor images:

CVE-2022-2309, CVE-2022-3239, CVE-2022-3328, CVE-2022-3524, CVE-2022-3564, CVE-2022-3565, CVE-2022-3566, CVE-2022-3567, CVE-2022-3594, CVE-2022-3621, CVE-2022-37454, CVE-2022-39377, CVE-2022-3970, CVE-2022-40303, CVE-2022-40304, CVE-2022-41916, CVE-2022-42703, CVE-2022-43680, CVE-2022-45061

### 22.09.12 ExtremeCloud IQ - Site Engine, ExtremeAnalytics, ExtremeControl images, and Application Analytics Traffic Sensor images:

CVE-2020-16156, CVE-2021-0127, CVE-2021-0145, CVE-2021-0146, CVE-2021-33117, CVE-2021-33120, CVE-2022-20422, CVE-2022-21123, CVE-2022-21127, CVE-2022-21151, CVE-2022-21166, CVE-2022-21233, CVE-2022-2153, CVE-2022-2519, CVE-2022-2520, CVE-2022-2521, CVE-2022-2806, CVE-2022-2867, CVE-2022-2868, CVE-2022-2869, CVE-2022-2953, CVE-2022-2978, CVE-2022-2978, CVE-2022-29901, CVE-2022-3028, CVE-2022-32221, CVE-2022-34526, CVE-2022-3515, CVE-2022-35260, CVE-2022-3570, CVE-2022-35737, CVE-2022-3597, CVE-2022-3598, CVE-2022-3599, CVE-2022-3625, CVE-2022-3626, CVE-2022-3627, CVE-2022-3635, CVE-2022-36879, CVE-2022-39188, CVE-2022-40284, CVE-2022-40674, CVE-2022-40768, CVE-2022-41222, CVE-2022-42703, CVE-2022-42719, CVE-2022-42915, CVE-2022-42916, CVE-2022-43680

### 22.09.12 ExtremeControl images:

CVE-2022-31628, CVE-2022-31629, CVE-2022-31630, CVE-2022-37454



### 22.09.12 ExtremeCloud IQ - Site Engine images:

CVE-2022-21509, CVE-2022-21515, CVE-2022-21517, CVE-2022-21522, CVE-2022-21525, CVE-2022-21526, CVE-2022-21527, CVE-2022-21528, CVE-2022-21529, CVE-2022-21530, CVE-2022-21531, CVE-2022-21534, CVE-2022-21537, CVE-2022-21538, CVE-2022-21539, CVE-2022-21547, CVE-2022-21553, CVE-2022-21569, CVE-2022-21589, CVE-2022-21592, CVE-2022-21594, CVE-2022-21599, CVE-2022-21604, CVE-2022-21608, CVE-2022-21611, CVE-2022-21617, CVE-2022-21625, CVE-2022-21632, CVE-2022-21633, CVE-2022-21637, CVE-2022-21640, CVE-2022-39400, CVE-2022-39408, CVE-2022-39410

### 22.09.11 ExtremeCloud IQ - Site Engine, ExtremeAnalytics, ExtremeControl images, and Application Analytics Traffic Sensor images:

CVE-2018-11813, CVE-2018-16860, CVE-2019-12098, CVE-2020-17541, CVE-2020-19131, CVE-2020-19144, CVE-2020-35538, CVE-2021-3671, CVE-2021-4159, CVE-2021-4217, CVE-2021-43618, CVE-2021-46822, CVE-2022-0529, CVE-2022-0530, CVE-2022-0812, CVE-2022-1012, CVE-2022-1354, CVE-2022-1355, CVE-2022-20369, CVE-2022-2056, CVE-2022-2057, CVE-2022-2058, CVE-2022-2318, CVE-2022-2318, CVE-2022-26365, CVE-2022-26373, CVE-2022-2795, CVE-2022-2881, CVE-2022-2906, CVE-2022-2928, CVE-2022-2929, CVE-2022-3080, CVE-2022-3116, CVE-2022-3176, CVE-2022-32296, CVE-2022-33740, CVE-2022-33741, CVE-2022-33742, CVE-2022-33744, CVE-2022-36879, CVE-2022-38177, CVE-2022-38178

### 22.09.10 ExtremeCloud IQ - Site Engine, ExtremeAnalytics, ExtremeControl images, and Application Analytics Traffic Sensor images:

CVE-2020-35525, CVE-2021-20223, CVE-2020-35527, CVE-2022-31676, CVE-2022-2526, CVE-2022-35252, CVE-2021-33656, CVE-2021-33061, CVE-2021-33656, CVE-2022-1420, CVE-2022-1620, CVE-2022-1616, CVE-2022-1621, CVE-2022-0943, CVE-2022-1154, CVE-2022-1619

## Installation, Upgrade, and Configuration Changes

### Installation Information

There are two supported scenarios for onboarding ExtremeCloud IQ - Site Engine to ExtremeCloud IQ:

- After upgrading to ExtremeCloud IQ - Site Engine from Extreme Management Center.
- After Initial Installation of ExtremeCloud IQ - Site Engine.

There are three tiers of licenses for ExtremeCloud IQ - Site Engine and devices:

- Pilot
- Navigator
- No License

As you begin to onboard ExtremeCloud IQ - Site Engine and your devices, ExtremeCloud IQ will determine if you meet or exceed the license limits for each license type.

For complete installation instructions, see [ExtremeCloud IQ - Site Engine Suite Installation](#).

---

**IMPORTANT:**

The **Compliance** tab is available and supported by Extreme on an engine running the Linux operating system supplied by Extreme. Other Linux operating systems can support ExtremeCompliance functionality, but python version 2.7 or higher must be installed. Additionally ExtremeCompliance functionality requires the git, python2, python mysql module, python setuptools module, and python "pygtail" module packages be installed and related dependencies managed by the customer for their server's unique operating system and version.

---

## Installing Without an Internet Connection

If your Linux system requires an operating system upgrade, you are prompted to upgrade using either an internet connection or locally (without an internet connection) if no additional Ubuntu packages need to be installed.

!!! ATTENTION !!!

We can attempt to upgrade the OS without using the internet if there were no extra Ubuntu packages installed. If there were extraneous packages installed, the upgrade will fail with this method.

Do you want to attempt a local in-place upgrade of the OS and reboot when complete? (Y/n)

## Custom FlexViews

When reinstalling ExtremeCloud IQ - Site Engine Console, the installation program saves copies of any FlexViews you created or modified in the `<install directory>\.installer\backup\current\appdata\System\FlexViews` folder.

If you are deploying FlexViews via the ExtremeCloud IQ - Site Engine server, save them in the `appdata\VendorProfiles\Stage\MyVendorProfile\FlexViews\My FlexViews` folder.

## Custom MIBs and Images

If you are deploying MIBs via the ExtremeCloud IQ - Site Engine server, they are saved in the `appdata\VendorProfiles\Stage\MyVendorProfile\MIBs\` folder.

If you are deploying device images (pictures) via the ExtremeCloud IQ - Site Engine server, they are saved in the `appdata\VendorProfiles\Stage\MyVendorProfile\Images\` folder.

## Important Upgrade Information

ExtremeCloud IQ - Site Engine version 22.09.13 supports upgrades from Extreme Management Center 8.5.7 or ExtremeCloud IQ - Site Engine. The following table details which upgrades are needed for each NetSight, Extreme Management Center or ExtremeCloud IQ - Site Engine version prior to upgrading to ExtremeCloud IQ - Site Engine version 22.09.13.

**NOTE:** You can change deployment modes from air gap to connected or from connected to air gap after the upgrade.

Current Version			Upgrade to ExtremeCloud IQ - Site Engine version 22.9
	8.3.3	8.5.7	
ExtremeCloud IQ - Site Engine (all versions)			X
Extreme Management Center version 8.5.5, 8.5.6, or 8.5.7			X
Extreme Management Center version 8.5.0-8.5.4		X	X
Extreme Management Center version 8.4.4		X	X
*Extreme Management Center version 8.4.0-8.4.3		X	X
*Extreme Management Center version 8.2.x or 8.3.x		X	X

Current Version			Upgrade to ExtremeCloud IQ - Site Engine version 22.9
	8.3.3	8.5.7	
Extreme Management Center version 8.0.x or 8.1.x	X	X	X
NetSight version 7.1 or older	X	X	X

**IMPORTANT:**

A backup (**Administration** > [Backup/Restore](#)) of the database must be performed prior to the upgrade and saved to a safe location.

During the installation (if upgrading using the user interface installer), you have the option to backup additional user files by selecting a checkbox on the Previous Installation Detected screen. This option lets you backup user files such as Inventory Manager archive files not automatically backed up during the install because the backup could take several minutes.

## Important Upgrade Considerations

- If your network is using ExtremeAnalytics or ExtremeControl engines, Fabric Manager, or another add-on feature, you must first perform the ExtremeCloud IQ - Site Engine upgrade to version 22.09.13 and then upgrade the feature.
- The 4.xx version of the NAC Request Tool is not compatible with the 22.09.13 ExtremeCloud IQ - Site Engine server. If you are using the NAC Request Tool you need to upgrade the version of NAC Request Tool to version 22.09.13.
- To upgrade Traffic Sensor from version 21.x, a fresh installation is recommended. If the fresh installation cannot be used, then please check [Knowledge Base](#) for a special procedure.

**IMPORTANT:**

When performing an upgrade, be sure to back up the database prior to performing the upgrade, and save it to a safe location. Use the **Administration** > [Backup/Restore](#) tab to perform the backup.

- When upgrading the ExtremeCloud IQ - Site Engine server, ExtremeAnalyticsengine, or ExtremeControlengine to version 22.09.13, ensure the DNS server IP address is correctly configured.
- When upgrading to ExtremeCloud IQ - Site Engine version 22.09.13, if you adjusted the ExtremeCloud IQ - Site Engine memory settings and want them to be saved on upgrade, a flag (`-DcustomMemory`) needs to be added to the `/usr/local/Extreme_Networks/NetSight/services/nserver.cfg` file.

For example:

```
-Xms12g -Xmx24g -XX:HeapDumpPath=../../nsdump.hprof -  
XX:+HeapDumpOnOutOfMemoryError -XX:MetaspaceSize=128m -DcustomMemory
```

## License Renewal

Upgrading to ExtremeCloud IQ - Site Engine version 22.09.13 requires you to transition from perpetual to subscription-based license model. Existing NMS licenses do not provide access to ExtremeCloud IQ - Site Engine. If your perpetual licenses were not transitioned to subscription-based licenses, contact your Extreme Networks Representative for assistance.

## Free Space Consideration

When upgrading to ExtremeCloud IQ - Site Engine version 22.09.13, a minimum of 15 GB of free disk space is required on the ExtremeCloud IQ - Site Engineserver

To increase the amount of free disk space on the ExtremeCloud IQ - Site Engine server, perform the following:

- Decrease the number of ExtremeCloud IQ - Site Engine backups (by default, saved in the `/usr/local/Extreme_Networks/NetSight/backup` directory).
- Decrease the Data Persistence settings (**Administration > Options > Access Control > Data Persistence**).
- Remove unnecessary archives (**Network > Archives**).
- Delete the files in the `<installation directory>/NetSight/.installer` directory.

## Site Discover Consideration

Discovering devices via the **Site** tab using a **Range**, **Subnet**, or **Seed** discover might not successfully add all expected devices. To correct the issue, increase the **Length of SNMP Timeout** value on the **Administration > Options > Site** tab in the Discover First SNMP Request section.

## ExtremeAnalytics Upgrade Information

Enabling or disabling the disk flow export feature might cause enforce operations to time out. Enforcing again resolves the issue.

When you delete an ExtremeXOS/Switch Engine device that is configured as a flow source via the Flow Sources table of the **Analytics > Configuration > Engines > Configuration** tab from the Devices list on the **Network > Devices** tab, an error message is generated in the `server.log`. The message does not warn you that the device is in use as a flow source. Adding the device back in the Devices list on the **Network > Devices** tab or removing the device from the Flow Source table fixes the issue.

The Flow Sources table on the **Analytics > Configuration > engine > Configuration** tab may take a few minutes to load.

## ExtremeControl Version 8.0 and later

Beginning in version 8.0, ExtremeControl may fail to join Active Directory when accessing as a **Standard Domain User with Descendant Computer Objects ("Reset password" permissions only)** group member.

To allow this functionality, add the following permissions:

- Reset Password
- Validated write to DNS host name
- Validated write to service principal
- Read and write account restrictions
- Read and write DNS host name attributes
- Write servicePrincipalName

## Other Upgrade Information

Immediately after you install version 22.09.13 on the ExtremeControlengine, the date and time does not properly synchronize and the following error message displays:

```
WARNING: Unable to synchronize to a NTP server. The time might not be
correctly set on this device.
```

Ignore the error message and the date and time automatically synchronize after a short delay.

Additionally, the following message might display during the ExtremeControl upgrade to version 22.09.13:

### No domain specified

To stop domain-specific winbindd process, run `/etc/init.d/winbindd stop {example-domain.com}`

## Fabric Configuration Information

### Certificate

Fabric Manager might be unavailable via ExtremeCloud IQ - Site Engine after upgrading if the certificate is missing in ExtremeCloud IQ - Site Engine Trust store.

To ensure Fabric Manager is available, enter the Fabric Manager certificate in the ExtremeCloud IQ - Site Engine Trust store using **Generate Certificate** option. See [Add Fabric Manager Certificate](#) for the certificate procedure.

## Authentication Key

When you provision authentication keys for Fabric Attach, the key cannot be read back for security reasons. When the key is read from the device, it always shows "\*\*\*\*". For this reason, it might seem that there is a configuration mismatch when one does not exist.

## Service Configuration Change

If you change a configured service via the **Configure Device** window that references one of the following, and then enforce those changes to the device, the configuration on the device might change unexpectedly:

- MLT
- SMLT
- Port-specific settings to a port belonging to an MLT or SMLT

To prevent this merge, change rows in the **Enforce Preview** window where MLT or SMLT are in use from **Current** to **Desired**.

To correct the issue after enforcement, modify the service on the device via the CLI.

## CLIP Addresses

Using the CLIP Addresses table in the Configure Device window, you can enter addresses in both IPv4 and IPv6 formats. However, ExtremeCloud IQ - Site Engine version 22.09.13 only supports applying a single address (either IPv4 or IPv6) to a Loopback Interface.

## Gateway Address Configuration Change

In versions of ExtremeCloud IQ - Site Engine prior to 22.09.13, the Default Gateway IP Address is configured as part of the VLAN. In 22.09.13, the Default Gateway IP Address is configured as part of the VRF.

When enforcing VRFs to a device after upgrading to version 22.09.13, merge any **Default Gateway IP Addresses** from the device into the configuration of ExtremeCloud IQ - Site Engine to prevent incorrect configuration of the device.

## Upgrading VSP-8600

When upgrading from Extreme Management Center version 8.2 to version 8.3, manually reload previously discovered VSP-8600 devices to gain access to Fabric Connect features.

## Removing Fabric Connect Configuration

Removing a device's Fabric Connect configuration by setting the **Topology Definition** to **<None>** may fail if the device has Logical Interfaces assigned to ISIS.

## Password Configuration

Fabric Manager fails to onboard in ExtremeCloud IQ - Site Engine if the root password includes an ampersand (&) character. Additionally, if the Administration > Inventory Manager > SCP tab contains a password that includes an ampersand (&) in ExtremeCloud IQ - Site Engine, the Fabric Manager firmware does not download successfully.

Ensure you use a password without an ampersand (&) character.

## VRF Configuration

VOSS/Fabric Engine SNMP performance is adversely affected as the number of VRF configurations increases. This issue can be resolved by upgrading to VOSS/Fabric Engine release 8.1.1 or later or VSP-8600 series version 6.3.3 or later.

## Device Configuration Information

### VDX Device Configuration

To properly discover interfaces and links for VDX devices in ExtremeCloud IQ - Site Engine, enable `three-tuple-if` on the device.

---

To enable `three-tuple-if` on the device in ExtremeCloud IQ - Site Engine:

**NOTE:**

1. Access the **Network > Devices** tab.
2. Right-click on the device in the Devices table.
3. Select **Tasks > Config > VDX Config Basic Support**.

---

Additionally, for ExtremeCloud IQ - Site Engine to display VCS fabric , the NOS version must be 7.2.0a or later.

Rediscover VDX devices after upgrading to ExtremeCloud IQ - Site Engine.

### VOSS/Fabric Engine Device Configuration

Topology links from VOSS/Fabric Engine devices to other VOSS/Fabric Engine or ERS devices might not display in a topology map (or might display inconsistently). To ensure topology map links display correctly, verify that the VOSS/Fabric Engine device is configured to publish its management IP address in the autotopology (SONMP) data.

Ensure that the output of `show sys setting` command shows:

```
autotopology : on
ForceTopologyIpFlag : true
clipId-topology-ip : 0
```

If the output values displayed are different, configure the VOSS/Fabric Engine device to publish management IP address in SONMP data by executing the following CLI commands:



```
(config)# autotopology
(config)# sys force-topology-ip-flag enable
(config)# default sys clipId-topology-ip
```

The **Status** of LAG links in maps will start working after the next polling following an upgrade to ExtremeCloud IQ - Site Engine. You can initiate the polling of a device by performing a refresh/rediscovery of the device.

## ERS Device Configuration

ERS devices might automatically change VLAN configurations you define in ExtremeCloud IQ - Site Engine. To disable this, change the `vlan configcontrol` setting for ERS devices you add to ExtremeCloud IQ - Site Engine by entering the following in the device command line:

```
CLI commands
enable
config term
vlan configcontrol flexible
```

Additionally, configure all VLANs on the port for an ERS device with the same tag status (tagged or untagged). If enforcing to an ERS device on which a port has at least one VLAN as tagged, ExtremeCloud IQ - Site Engine adds all untagged VLANs to the tagged VLAN list and clears the untagged VLAN list.

Creating an archive for ERS devices using the **Network > Archives** tab does not complete successfully if Menu mode (cmd-interface menu) is used instead of CLI mode (cmd-interface cli). See [How To Set Default Management Interface To Either Menu or CLI Mode](#) to create the archive.

## SLX Device Configuration

When creating a ZTP+ Configuration for an SLX 9240 on which firmware version 18s.01.01 or 18s.01.02 is installed, the ZTP+ process fails if the **Administration Profile** value uses SSH or Telnet CLI credentials. ExtremeCloud IQ - Site Engine indicates that the SSH or CLI profile is not supported by the device.

To create a ZTP+ configuration for an SLX 9240:

1. Create a new Device Profile with the **CLI Credential** set to **< No Access >**.

---

**NOTE:** The SLX ZTP+ Connector does NOT support configuring CLI credentials on the device.

---

2. Create the ZTP+ Configuration and select the new **Device Profile** you created in Step 1 as the **Administration Profile**.
3. After the ZTP+ process successfully completes and the device is added to ExtremeCloud IQ - Site Engine, select a **Device Profile** that uses the correct CLI credentials for the SLX device in the **Administration Profile**.

## ExtremeXOS Device Configuration

ExtremeXOS/Switch Engine devices on which firmware version 30.3.1.6 is installed do not download and install new firmware versions successfully via the ZTP+ process. To correct the issue, access the **Network > Firmware** tab in ExtremeCloud IQ - Site Engine, select the ExtremeXOS device you are updating via ZTP+, and change the **Version** field in the Details right-panel from **builds/xos\_30.3/30.3.1.6** to **30.3.1.6**.

## Firmware Upgrade Configuration Information

ExtremeCloud IQ - Site Engine supports firmware downloads and uploads to devices using TFTP, FTP, SCP, and SFTP. However, before firmware images can be downloaded or uploaded from the server, ExtremeCloud IQ - Site Engine needs the root path or directory for each of the protocols. The following default root paths for each protocol are configurable from the **Administration > Options > Inventory Manager** tab:

Protocol Root Path:

- TFTP: /tftpboot/firmware/images/
- FTP: /tftpboot/firmware/images/
- SCP: /root/firmware/images/
- SFTP: /root/firmware/images/

To upload firmware images that are 2 GB or less to the server, use the ExtremeCloud IQ - Site Engine **Network > Firmware** tab. For files larger than 2 GB, use a third-party client (such as SCP, WinSCP, or FTP).

For example, to use SCP to upload a firmware image to the SCP root path on the server, enter the following:

- `scp <LOCAL_FIRMWARE_PATH> root@<ExtremeCloud IQ - Site Engine_SERVER_IP>:/root/firmware/images`
- Where:
  - `<ExtremeCloud IQ - Site Engine_SERVER_IP>`= IP Address to ExtremeCloud IQ - Site Engine Server
  - `<LOCAL_FIRMWARE_PATH>`= fully qualified path to a firmware image on the client machine

## Wireless Manager Upgrade Information

A High Availability pair cannot be added as a flow source if the WLAN(s) selected are not in common with both wireless controllers.

## Server and Client System Requirements

### IMPORTANT:

Wireless event collection is disabled by default in version 22.09.13 due to the increase in disk space usage required. To enable event collection, select **Enable Event Collection** **Event Analyze**. Then select **Administration > Options > [Event Analyzer](#)**.

Internet Explorer is not supported in ExtremeCloud IQ - Site Engine version 22.09.13.

### ExtremeCloud IQ - Site Engine Server Requirements

Manufacturer	Operating System
Linux	Red Hat Enterprise Linux WS and ES v6 and v7 Ubuntu 18.04
VMware® (ExtremeCloud IQ - Site Engine Virtual Engine)	VMware ESXi™ 6.0 server VMware ESXi™ 6.5 server VMware ESXi™ 6.7 server VMware ESXi™ 7.0 server vSphere (client only)™
Microsoft® Hyper-V (ExtremeCloud IQ - Site Engine Virtual Engine)	Windows® Server 2012 R2 Windows® Server 2016

These are the operating system requirements for the ExtremeCloud IQ - Site Engine server.

### ExtremeCloud IQ - Site Engine Client Requirements

These are the operating system requirements for remote ExtremeCloud IQ - Site Engine client machines.

Manufacturer	Operating System
Windows (qualified on the English version of the operating systems)	Windows® 10
Linux	Red Hat Enterprise Linux WS and ES v6 and v7 Ubuntu 18.04
Mac OS X®	El Capitan Sierra

## ExtremeCloud IQ - Site Engine Server and Client Hardware Requirements

These are the hardware requirements for the ExtremeCloud IQ - Site Engine server and ExtremeCloud IQ - Site Engine client machines.

**NOTES:** ExtremeControl and ExtremeAnalytics are not supported on Small ExtremeCloud IQ - Site Engine servers.

### ExtremeCloud IQ - Site Engine Server Requirements

	Small	Medium	Enterprise	Large Enterprise
Total CPUs	1	2	2	2
Total CPU Cores	8	16	24	24
Memory	16 GB	32 GB	64 GB	64 GB
Disk Size	240 GB	480 GB	960 GB	1.92 TB
IOPS	200	200	10,000	10,000
<b>Recommended scale based on server configuration:</b>				
Maximum APs	250	2,500	25,000	25,000
Maximum Wireless MUs	2,500	25,000	100,000	100,000
Maximum Managed Devices	100	1,000	10,000 air gap 8,000 connected	10,000 air gap 8,000 connected
ExtremeControl End-Systems	N/A	50,000	200,000	200,000
Statistics Retention (Days)	90	180	180	360
ExtremeAnalytics	No	Yes	Yes	Yes
MU Events	No	Yes	Yes	Yes

**IMPORTANT:** For optimal performance the CPU and Memory needs to reserved in the ESX Client and the virtual machine needs to be deployed using Thick Disk provisioning.

### ExtremeCloud IQ - Site Engine Client Requirements

	Requirements
CPU Speed	3.0 GHz Dual Core Processor
Memory	8 GB (4 GB for 32-bit OS)
Disk Size	300 MB (User's home directory requires 50 MB for file storage)
Java Runtime Environment (JRE) (Oracle Java only)	Version 8
Browser <sup>1</sup> (Enable JavaScript and Cookies)	Microsoft Edge (version 41.16.199.10000.0 in compatibility mode) Mozilla Firefox (version 34 or later <sup>2</sup> ) Google Chrome (version 33.0 or later)

<sup>1</sup>Browsers set to a zoom ratio of less than 100% might not display ExtremeCloud IQ - Site Engine properly (for example, missing borders around windows). Setting your browser to a zoom ratio of 100% corrects this issue.

<sup>2</sup>When accessing ExtremeCloud IQ - Site Engine using Firefox version 59.0.1 on a non-touchscreen system on which a Windows operating system is installed, the vertical scroll arrows do not display.

## Virtual Engine Requirements

The ExtremeCloud IQ - Site Engine, ExtremeControl, and ExtremeAnalytics virtual engines must be deployed on a VMWare or Hyper-V server with a disk format of VHDX.

- The VMWare ExtremeCloud IQ - Site Engine virtual engines are packaged in the .OVA file format (defined by VMware).
- The Hyper-V ExtremeCloud IQ - Site Engine virtual engines are packaged in the .ZIP file format.

### IMPORTANT:

For ESX and Hyper-V servers configured with AMD processors, the ExtremeAnalytics virtual engine requires AMD processors with at least Bulldozer based Opterons.

### ExtremeCloud IQ - Site Engine Virtual Engine Requirements

Specifications	Small	Medium	Enterprise
Total CPU Cores	8	16	24
Memory	16 GB	32 GB	64 GB
Disk Size	240 GB	480 GB	960 GB
IOPS	200	200	10,000

Recommended scale based on server configuration:

Maximum APs	250	2,500	25,000
Maximum Wireless MUs	2,500	25,000	100,000
Maximum Managed Devices	100	1,000	10,000 air gap 8,000 connected
ExtremeControl End-Systems	N/A	50,000	200,000
Statistics Retention (Days)	90	180	180
ExtremeAnalytics	No	Yes	Yes
MU Events	No	Yes	Yes

### IMPORTANT:

For optimal performance the CPU and Memory needs to reserved in the ESX Client and the virtual machine needs to be deployed using Thick Disk provisioning.

### ExtremeControl Virtual Engine Requirements

Specifications	Small	Medium	Enterprise	Large Enterprise
Total CPU Cores	8	16	16	20
Memory	12 GB	16 GB	32 GB	48 GB
Disk Size	40 GB	120 GB	120 GB	120 GB
IOPS	200	200	200	200

Recommended scale based on server configuration:

Specifications	Small	Medium	Enterprise	Large Enterprise
ExtremeControl End-Systems	3,000	6,000	9,000/12,000 <sup>1</sup>	12,000/24,000 <sup>2</sup>
Authentication	Yes	Yes	Yes	Yes
Captive Portal	No	Yes	Yes/No <sup>1</sup>	Yes/No <sup>2</sup>
Assessment	No	Yes	No	No

<sup>1</sup> The Enterprise ExtremeControlengine configuration supports two different scale options:

- Up to 9,000 end-systems if your network uses Captive Portal functionality.
- Up to 12,000 end-systems if your network does not use Captive Portal functionality.

<sup>2</sup> The Large Enterprise ExtremeControlengine configuration supports two different scale options:

- Up to 12,000 end-systems if your network uses Captive Portal functionality.
- Up to 24,000 end-systems if your network does not use Captive Portal functionality.

### IMPORTANT:

For optimal performance the CPU and Memory needs to reserved in the ESX Client and the virtual machine needs to be deployed using Thick Disk provisioning.

## ExtremeAnalytics Virtual Engine Requirements

Specifications	Small	Medium	Enterprise
Total CPU Cores	8	16	16
Memory	12 GB	32 GB	64 GB
Disk Size	40 GB	480 GB	960 GB
IOPS	200	10,000	10,000
Recommended scale based on server configuration:			
Flows Per Minute	250,000	500,000	750,000
End-Systems	10,000	20,000	30,000

### IMPORTANT:

The ESXi free license supports a maximum of 8 CPU cores, and the medium and enterprise ExtremeAnalytics virtual engine installations require 16 CPU cores. Sixteen CPU cores are only available by purchasing a permanent license. To use the ExtremeAnalytics virtual engine with an ESXi free license, adjust the number of CPU cores to 8.

To reduce the possibility of impaired functionality, ensure at least 4 GB of swap space is available for flow storage on the ExtremeAnalytics virtual engine. To verify the amount of available RAM on your Linux system, use the `free` command

## Fabric Manager Requirements

Specifications	Requirements
Total CPU Cores	4
Memory	9 GB

Specifications	Requirements
<b>Memory allocated to Java:</b>	
-Xms	4 GB
-Xmx	6 GB
<b>Disk Size</b>	60 GB

## ExtremeControl Agent OS Requirements

The table below outlines the supported operating systems for end-systems connecting to the network through an ExtremeControl deployment that is implementing agent-based assessment. Additionally, the end-system must support the operating system disk space and memory requirements as provided by Microsoft® and Apple®.

Manufacturer	Operating System	Operating System Disk Space	Available/Real Memory
<b>Windows<sup>1</sup></b>	Windows Vista	80 MB	40 MB (80 MB with Service Agent)
	Windows XP		
	Windows 2008		
	Windows 2003		
	Windows 7		
	Windows 8		
	Windows 8.1		
	Windows 10		
<b>Mac OS X</b>	Catalina	10 MB	120 MB
	Tiger		
	Snow Leopard		
	Lion		
	Mountain Lion		
	Mavericks		
	Yosemite		
	El Capitan		
	Sierra		

<sup>1</sup>Certain assessment tests require the Windows Action Center (previously known as Windows Security Center), which is supported on Windows XP SP2+, Windows Vista, and Windows 7, Windows 8, and Windows 8.1 operating systems.

ExtremeControl Agent support for Antivirus or Firewall products includes, but is not limited to, the following families of products:

- McAfee
- Norton
- Kaspersky
- Trend Micro
- Sophos

ExtremeControl Agent operating system support for the above products includes the latest Windows or Mac OS X versions currently available at the time of product release. The ExtremeControl Agent running on MAC Operating Systems requires Java Runtime Environment

(JRE) support. Some features of various products might not be supported. For additional information on specific issues, see [Known Restrictions and Limitations](#).

## ExtremeControl Supported End-System Browsers

The following table outlines the supported desktop and mobile end-system browsers connecting to the network through the Mobile Captive Portal of Extreme NetworksExtremeControl.

Medium	Browser	Version
Desktop	Microsoft Edge	41 and later
	Microsoft Internet Explorer	11 and later
	Mozilla Firefox	34 and later
	Google Chrome	33.0 and later
Mobile	Internet Explorer Mobile	11 and later (Windows Phone)
	Microsoft Edge	All versions
	Microsoft Windows 10 Touch Screen Native (Surface Tablet)	N/A
	iOS Native	9 and later
	Android Chrome	4.0 and later
	Android Native	4.4 and later
	Dolphin	All versions
	Opera	All versions

**NOTES:** A native browser indicates the default, system-installed browser. Although this might be Chrome (Android), this also includes the default, system-controlled browser used for a device's Captive Network Detection for a device. Typically, this is a non-configurable option for Wi-Fi Captive Network Detection, but default Android, Microsoft and iOS devices are tested for compatibility with the Mobile Captive Portal.

A mobile device can access the standard (non-mobile) version of the Captive Portal using any desktop-supported browsers available on a mobile device.

For other browsers, the Mobile Captive Portal requires the browser on the mobile device to be compatible with Webkit or Sencha Touch.

To confirm compatibility with Webkit or Sencha Touch, open `http://<ExtremeControlEngine IP>/mobile_screen_preview` using your mobile web browser.

- If the browser is compatible, the page displays properly.
- If the browser is not compatible with the Mobile Captive Portal, the following error displays:





## ExtremeControl Engine Version Requirements

For complete information on ExtremeControl engine version requirements, see [Important Upgrade Information](#).

## ExtremeControl VPN Integration Requirements

VPN concentrators are supported for use in ExtremeControl VPN deployment scenarios.

- Supported Functionality: Authentication and Authorization (policy enforcement)  
Cisco ASA  
Enterasys XSR
- Supported Functionality: Authentication  
Juniper SA (requires an S-Series Stand Alone (SSA) system in order to provide access control)

---

**NOTE:** For all ExtremeControl VPN Deployment scenarios, an S-Series Stand Alone (SSA) system is required to change authorization levels beyond the initial authorization, such as when using assessment.

---

## ExtremeControl SMS Gateway Requirements

The following SMS Gateways have been tested for interoperability with ExtremeControl:

- Clickatell
- Mobile Pronto

## ExtremeControl SMS Text Messaging Requirements

The following mobile service providers are supported by default for SMS text messaging in an ExtremeControl deployment. Additional service providers can be added:

AT&T	Sprint PCS
Alltel	SunCom
Bell Mobility (Canada)	T-Mobile
Cingular	US Cellular
Metro PCS	Verizon
Rogers (Canada)	Virgin Mobile (US and Canada)

## ExtremeAnalytics Requirements

To use an ExtremeSwitching X440-G2 switch as an Application Telemetry source for ExtremeAnalytics, install firmware version 22.4.1.4-patch2-5 or higher.

## Ekahau Maps Requirements

ExtremeCloud IQ - Site Engine supports importing Ekahau version 8.x maps in .ZIP format.

## Guest and IoT Manager Requirements

### Guest and IoT Manager Server OS Requirements

These are the operating system requirements for Guest and IoT Manager server:

Manufacturer	Operating System
VMware® (ExtremeCloud IQ - Site Engine Virtual Engine)	VMware ESXi™ 5.5 server VMware ESXi™ 6.0 server VMware ESXi™ 6.5 server vSphere (client only)™

### Guest and IoT Manager Outlook Add-in Client Requirements

These are the requirements for the Client Machines, which need to run Guest and IoT Manager Outlook Add-in.

Manufacturer	Operating System
Windows <sup>1</sup>	Windows 7 Windows 10
Mac OS X	Sierra High Sierra Mojave

<sup>1</sup>Microsoft® Outlook® 2016 is needed on Windows/Mac clients for the add-in to operate.

### Guest and IoT Manager Virtual Engine Requirements

The VMWare Guest and IoT Manager virtual engines are packaged in the .OVA file format (defined by VMware) and needs an x86, 64-bit capable environment

Specifications	Minimum	Recommended
Total CPU Cores	2	4
Memory	2 GB	4 GB
Disk Size	80 GB	80 GB
Interfaces	1 Physical NIC	3 Physical NICs

### Guest and IoT Manager Supported Browsers

The following table outlines the supported desktop and mobile browsers that can be used to launch Guest and IoT Manager Admin and Provisioner Web Application:

---

Medium	Browser	Version
Desktop	Microsoft Internet Explorer	11 and later
	Mozilla Firefox	63 and later
	Google Chrome	65 and later
	Microsoft Edge	42 and later
	Safari	12 and later
Mobile <sup>1</sup>	iOS Native	9 and later
	Android Chrome	65 and later
	US Browser	11.5 and later
	Opera	40 and later
	Firefox	63 and later

---

<sup>1</sup>Mobile Browsers are supported only for the Guest Self-Service Provisioning flow.

---

**NOTES:**

- A mobile device can access the Guest and IoT Manager Application by using any desktop-supported browsers available on a mobile device. Before login, make sure to select the **Desktop site** option in the browser options.
  - Browsers set to a zoom ratio of less than 100% might not display Guest and IoT Manager Application properly (for example, missing borders around windows). Setting your browser to a zoom ratio of 100% corrects this issue.
  - Guest and IoT Manager Application is best viewed in 1920 x 1080 resolution or higher. Lower resolutions might result in improper layouts in some cases.
  - If you are using self-signed certificates, they must be added in the Trusted Root Certificate store on the client machine or you might observe issues in the “print” use cases. This is only applicable for Microsoft Edge and Microsoft Internet Explorer browsers.
-