

# Nortel RTI Sensor

## Release 3.5.1.5 Release Notes

### February 27, 2007

For the Nortel RTI Sensor Release 3.5.1.5, these release notes describe:

[New Features and Functionality](#)

[Issues Resolved in Release 3.5.1.5](#)

[Upgrading Existing RTI Sensors](#)

[Uninstalling the Upgrade](#)

[Known Issues](#)

[Product Compatibility](#)

You can use this patch to upgrade from version 3.5.1 through version 3.5.1.3 to 3.5.1.5.

## II New Features and Functionality

Release 3.5.1.5 of the Nortel RTI Sensor does not include any new features or functionality. However, this release is cumulative from version 3.5.1, so be sure to review the release notes for previous releases for any new features they may have introduced.

## II Issues Resolved in Release 3.5.1.5

The following issue is resolved in Release 3.5.1.5:

Addressed an issue regarding the change to Daylight Savings Time in the United States and other countries.

**IMPORTANT!** This release is cumulative from version 3.5.1, so be sure to review the resolved issues in the release notes for previous releases.

## II Upgrading Existing RTI Sensors

This section offers some suggestions for planning and performing the upgrade of your RTI Sensor.

**WARNING!** As part of the installation process, your RTI Sensor is automatically rebooted.

**To plan your upgrade, read the following steps:**

1. Prepare for the upgrade. Make sure that:

you upgrade the Defense Center, if any, that manages the RTI Sensor to Release 4.5.1.5

your RTI Sensor is running one of the supported versions for the upgrade (that is, versions 3.5.1 through 3.5.1.3)

If you are running an earlier version, you can obtain upgrades from the [Nortel Support Site](#).

you have enough free disk space

The amount of free space required by the upgrade depends on the version you are upgrading from. For example, to upgrade from version 3.5.1, you must have at least 27 MB of free space on the / partition and 125 MB of free space on the /var partition to complete this upgrade successfully. To upgrade from version 3.5.1.3, you must have 15 MB of free space on the / partition and 50 MB of free space on the /var partition.

you plan your upgrade for a time when it will have the least impact on your deployment; be sure to schedule the upgrade during non-peak hours

2. Optionally, back up your event and configuration data and save it to a local computer.

Although the upgrade process retains event and configuration data, Nortel **strongly recommends** that you back the data up yourself before you perform the upgrade.

3. Perform the upgrade, as described in [Upgrading the RTI Sensor](#).

After you begin the upgrade, you can monitor its progress in the task queue ( **Operations > Monitoring > Task Status** ). **Do not** use the web interface to perform any other tasks until the upgrade has completed and the RTI Sensor reboots.

If the task queue stops updating with current status, manually refresh your browser. If you encounter issues with the upgrade, for example, if the task queue indicates that the upgrade has failed or if a manual refresh of the task queue shows no progress, **do not** restart the upgrade. Instead, contact Nortel Support.

4. Complete any required post-upgrade steps as described in [After You Upgrade](#).

## Upgrading the RTI Sensor

You can use the Defense Center to upgrade RTI Sensors. For more information, refer to the release notes for the Defense Center.

### To upgrade an RTI Sensor:

1. Download the RTI Sensor 3.5.1.5 upgrade script ( `Nortel_TPS_Real time_Intrusion__Patch_3. 5. 1. 3_to_3. 5. 1. 5_Upgrade-#. sh` ) from the [Nortel Support Site](#).

**WARNING!** Download files directly from the Support Site and **do not** transfer them by email. If you transfer an update file by email, it may become corrupted.

2. Select **Operations > Update**.

The Patch Management Update page appears.

3. Click **Upload Update** to browse to the location where you saved the upgrade script, then click **Upload**.

The upgrade appears in the Updates list.

4. Next to the upgrade you just uploaded, click **Install**.

5. Confirm that you want to install the upgrade and reboot the RTI Sensor.

The upgrade is installed and the RTI Sensor reboots.

**WARNING!** You can monitor the upgrade's progress in the task queue ( **Operations > Monitoring > Task Status** ). **Do not** use the web interface to perform any other tasks until the upgrade has completed and the RTI Sensor reboots. If the task queue stops updating with current status, manually refresh your browser. If you encounter issues with the upgrade, for example, if the task queue indicates that the upgrade has failed or if a manual refresh of the task queue shows no progress, **do not** restart the upgrade. Instead, contact Nortel Support.

6. After the upgrade finishes and the RTI Sensor reboots, log into the RTI Sensor.

7. Select **Operations > Help > About** and confirm that the software version is listed as 3.5.1.5.

## After You Upgrade

After you complete the upgrade, you **must**:

download and install the latest vulnerability database (VDB); make sure you install the VDB update on both the RTI Sensor and the Defense Center that manages it

Note that you can use the Defense Center to push and install the VDB on the RTI Sensor. For more information, refer to the RTI Sensor User Guide.

## II Uninstalling the Upgrade

Regardless of where you started, uninstalling the upgrade results in an RTI Sensor running Release 3.5.1.3. For information on uninstalling Release 3.5.1.3, refer to the notes for that release.

You **cannot** use the Defense Center to uninstall the upgrade from RTI Sensors.

**To uninstall the upgrade from the RTI Sensor:**

1. Select **Operations > Update**.

The Patch Management Update page appears.

2. Next to the uninstaller that matches the upgrade you want to remove, click **Install**.

3. Confirm that you want to uninstall the upgrade and reboot the RTI Sensor.

The upgrade is removed, the RTI Sensor reboots, and the RTI Sensor reverts to Release 3.5.1.3.

**WARNING!** You can monitor the uninstallation progress in the task queue ( **Operations > Monitoring > Task Status** ). If the task queue stops updating with current status, manually refresh your browser. If you encounter issues with the uninstallation, for example, if the task queue indicates that the uninstallation has failed or if a manual refresh of the task queue shows no progress, **do not** restart the uninstallation. Instead, contact Nortel Support.

4. After the uninstall finishes and the RTI Sensor reboots, log into the RTI Sensor.

5. Select **Operations > Help > About** and confirm that the software version is listed as Release 3.5.1.3.

## II Known Issues

There are no new known issues with Release 3.5.1.5. However, this release is cumulative from version 3.5.1, so be sure to review the known issues in the release notes for previous releases.

## II Product Compatibility

You must use Release 4.5.1.5 of the Defense Center to manage Release 3.5.1.5 of the Nortel RTI Sensor.

## II For Assistance

If you have any questions or require assistance with the Nortel Defense Center, Intrusion Sensor, RTI Sensor, or any of the software sensors, please contact Nortel Support.

Visit the Nortel Support Site at <http://www.nortel.com/support>.

Email Nortel Support at [support@nortel.com](mailto:support@nortel.com).

Thank you for using Nortel products.

## Legal Notices

© 2007 Nortel Networks, 4655 Great America Parkway, Santa Clara, CA 95054, USA. All rights reserved.

This document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this document may be reproduced in any form by any means without prior written authorization of Nortel, Inc. Documentation is provided "as is" without warranty of any kind, either express or implied, including any kind of implied or express warranty of noninfringement or the implied warranties of merchantability or fitness for a particular purpose.

**U.S. Government End Users**

This document is provided with a "commercial item" as defined by FAR 2.101 (Oct 1995) and contains "commercial technical data" and "commercial software documentation" as those terms are used in FAR 12.211-12.212 (Oct 1995). Government End Users are authorized to use this documentation only in accordance with those rights and restrictions set forth herein, consistent with FAR 12.211- 12.212 (Oct 1995), DFARS 227.7202 (JUN 1995) and DFARS 252.227-7015 (Nov 1995).

Nortel, Inc. reserves the right to change any products described herein at any time, and without notice. Nortel, Inc. assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by Nortel, Inc. The use and purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of Nortel, Inc.

Portions of this manual are © 2006 Sourcefire, Inc. All Rights Reserved. Any other trademarks appearing in this manual are owned by their respective companies.

## **Export**

This product, software and related technology is subject to U.S. export control and may be subject to export or import regulations in other countries. Purchaser must strictly comply with all such laws and regulations. A license to export or reexport may be required by the U.S. Department of Commerce.