

## Service Release Notes for WiNG 7.2.1.1-006R

**Please Note:** Service releases are made available to fix specific customer reported issues in a timely manner. Service releases are not as extensively tested as main releases (such as 7.2.1.1-006R). The next maintenance or manufacturing release will incorporate all qualifying and preceding service releases.

This document is an addendum to the release notes for the main release 7.2.1.0-015R.

### CONTENTS

<b>1. Resolved Issues .....</b>	<b>1</b>
<b>2. Important Notes.....</b>	<b>2</b>
<b>3. Platforms Supported .....</b>	<b>2</b>
<b>4. Firmware Upgrade/Downgrade Procedure .....</b>	<b>2</b>

### 1. RESOLVED ISSUES

This service release 7.2.1.1-006R contains critical fixes for Campus mode supported with ExtremeCloud Appliance 4.56.02 release and ExtremeLocation related fixes. Refer to ExtremeCloud Appliance 4.56.02.0030 Release Note for details.

Following is a list of SPRs/CRs fixed in this release:

CRID	Description
SPR-3492	AP 7612 iBeacon broadcast not waking up mobile devices
WING-38589	Clients Termination issue using Altea on AP 5xx in Campus mode
WING-39330	ExtremeLocation: Add support for linear EWMA for BLE devices
WING-39409	ExtremeLocation: AP 5xx in Campus Mode does not report any location data
WING-39417	ExtremeLocation: Wing ble report need to send average of rssi over configured rssi interval
WING-39418	ExtremeLocation: BLE Total count of devices seen are always 31

## 2. IMPORTANT NOTES

None.

## 3. PLATFORMS SUPPORTED

This release applies to all platforms released with WiNG 7.2.1.1-006R.

## 4. FIRMWARE UPGRADE/DOWNGRADE PROCEDURE

The method described in this section uses the Command Line Interface (CLI) procedures. To log into the CLI, either SSH, Telnet or serial access can be used.

**For detailed upgrade procedure – please refer to WiNG 7.2.1 release notes.**

### Upgrade from WiNG v7x.x.x to WiNG v7.2.1.1

1. Copy the controller image to your tftp/ftp server.
2. Use the **—upgrade ftp://<username>:<password>@<ip address of server>/<name of file>** , or **—upgrade tftp://<ip address of server>/<name of file>** command from CLI or **Switch->Firmware->Update Firmware** option from the GUI. You may need to specify the username and password for your ftp server.
3. Restart the controller. From CLI the command is **—reload**.