

**Service Release Notes for WiNG 7.4.1.2-003R**

**Please Note:** Service releases are made available to fix specific customer reported issues in a timely manner. Service releases are not as extensively tested as main releases (such as 7.4.1.1-001R). The next maintenance or manufacturing release will incorporate all qualifying and preceding service releases.

This document is an addendum to the release notes for the main release 7.4.1.1-001R.

**CONTENTS**

..... 1

**1. Resolved Issues ..... 1**

**2. Known issues ..... 2**

**2. Important Notes..... 2**

**3. Platforms Supported ..... 2**

**4. Firmware Upgrade/Downgrade Procedure ..... 2**

**1. RESOLVED ISSUES**

**Service Release 7.4.1.2-003R**

This service release is mainly for supporting ADSP support on 11ax APs. Support for Sensor added on AP3xx against Airdefense 10.4.1 releaes.

This release also contains some critical fixes listed below.

It also adds support for WS-AI-5Q04060, WS-AI-5Q05025, WS-AI-2Q05060 Sector antennas to AP510e.

**Following is a list of SPRs/CRs fixed in this release:**

CRID	Description
WING-43399	PMF/WPA3 client termination using role-based firewall not working
WING-43490	AP310/360 device types icon show up as a Red X in WiNG 7 GUI
WING-43593	BSS/WC termination is not happening on DFS channels using AP410 sensor

## 2. KNOWN ISSUES

CQ/ SPR	Headline	Comments

## 2. IMPORTANT NOTES

None

## 3. PLATFORMS SUPPORTED

This release applies to all platforms released with WiNG 7.4.1.1-001R.

## 4. FIRMWARE UPGRADE/DOWNGRADE PROCEDURE

The method described in this section uses the Command Line Interface (CLI) procedures. To log into the CLI, either SSH, Telnet or serial access can be used.

**For detailed upgrade procedure – please refer to WiNG 7.4.1.1 release notes.**

*Upgrade from WiNG v7x.x.x to WiNG v7.4.1.2*

1. Copy the controller image to your tftp/ftp server.
2. Use the **—upgrade ftp://<username>:<password>@<ip address of server>/<name of file>||**, or **—upgrade tftp://<ip address of server>/<name of file>** command from CLI or **Switch->Firmware->Update Firmware** option from the GUI. You may need to specify the username and password for your ftp server.
3. Restart the controller. From CLI the command is **—reload**.

---

© Extreme Networks. 2019. All rights reserved.