



# ExtremeWireless™ AP3000 Access Point Installation Guide

9037460-00 AB  
August 2023



Copyright © 2023 Extreme Networks, Inc. All rights reserved.

## Legal Notice

Extreme Networks, Inc. reserves the right to make changes in specifications and other information contained in this document and its website without prior notice. The reader should in all cases consult representatives of Extreme Networks to determine whether any such changes have been made.

The hardware, firmware, software or any specifications described or referred to in this document are subject to change without notice.

## Trademarks

Extreme Networks and the Extreme Networks logo are trademarks or registered trademarks of Extreme Networks, Inc. in the United States and/or other countries.

All other names (including any product names) mentioned in this document are the property of their respective owners and may be trademarks or registered trademarks of their respective companies/owners.

For additional information on Extreme Networks trademarks, see: [www.extremenetworks.com/company/legal/trademarks](https://www.extremenetworks.com/company/legal/trademarks)

## Open Source Declarations

Some software files have been licensed under certain open source or third-party licenses.

End-user license agreements and open source declarations can be found at: <https://www.extremenetworks.com/support/policies/open-source-declaration/>



# Table of Contents

---

<b>Preface.....</b>	<b>5</b>
Text Conventions.....	5
Documentation and Training.....	6
Help and Support.....	7
Subscribe to Product Announcements.....	7
Send Feedback.....	8
<b>AP3000 Overview.....</b>	<b>9</b>
New in this Guide.....	10
Product Specifications.....	10
Antennas.....	11
Radios.....	11
Ports and Connectors.....	11
Physical Dimensions.....	11
Environmental Specifications.....	11
Troubleshoot.....	12
Hardware Ports.....	12
LED Status .....	13
Power Profile.....	15
Supported Accessories.....	15
Supported Mounting Accessories.....	15
Supported Power Accessories.....	16
Other Accessories.....	17
Micro USB Console Port Information.....	17
MAC Address.....	18
Cleaning Guidelines for Radome.....	18
Purchase Order Information.....	19
<b>Access Point Installation.....</b>	<b>20</b>
Installation Work Flow.....	21
Box Contents.....	21
Install the Access Point on a Wall or a Flat Ceiling.....	22
Install the Access Point to a Wall with AH-ACC-BKT-AX-WL.....	22
Install the Access Point on a Silhouette Ceiling.....	23
Install the Access Point to a 9/16th T-bar Ceiling.....	26
Install the Access Point on a 15/16-inch T-bar.....	29
Install the Access Point on a Junction Box.....	32
Install the Access Point on a Beam.....	33
Connect a Power Supply.....	35
Lock Your Access Point.....	36
Post Installation.....	36
<b>Regulatory and Compliance Information.....</b>	<b>38</b>

---

Safety Guidelines.....	38
Professional Installation Instruction.....	39
Installation personnel.....	39
Instructions d'installation professionnelle.....	39
FCC Notice (Part 15 - Class B).....	39
FCC Radiation Exposure Statement.....	40
Conformité Européenne (CE) Information.....	41
CE Marking and European Area (EEA).....	41
Country of Manufacture.....	41
Brazil Anatel Statement.....	41
China Compliance Statement.....	41
Israel Regulatory Statement.....	42
Mexico Compliance Statement.....	42
Extreme Networks EU Importer Address.....	42
Extreme Networks UK Address.....	42
UK Statement and CE Statement.....	42
Industry Canada Notice.....	43
Thailand Regulatory Notice.....	44
Taiwan Regulatory Statement.....	45
European Waste Electrical and Electronic Equipment (WEEE) Notice.....	45
Supplement to Product Instructions.....	46
Declaration of Conformity in Languages of the European Community.....	47
<b>Index.....</b>	<b>50</b>



# Preface

---

Read the following topics to learn about:

- The meanings of text formats used in this document.
- Where you can find additional information and help.
- How to reach us with questions and comments.






## Text Conventions

---

Unless otherwise noted, information in this document applies to all supported environments for the products in question. Exceptions, like command keywords associated with a specific software version, are identified in the text.

When a feature, function, or operation pertains to a specific hardware product, the product name is used. When features, functions, and operations are the same across an entire product family, such as ExtremeSwitching switches or SLX routers, the product is referred to as *the switch* or *the router*.

**Table 1: Notes and warnings**

Icon	Notice type	Alerts you to...
	Tip	Helpful tips and notices for using the product
	Note	Useful information or instructions
	Important	Important features or instructions
	Caution	Risk of personal injury, system damage, or loss of data
	Warning	Risk of severe personal injury

**Table 2: Text**

Convention	Description
screen displays	This typeface indicates command syntax, or represents information as it is displayed on the screen.
The words <i>enter</i> and <i>type</i>	When you see the word <i>enter</i> in this guide, you must type something, and then press the Return or Enter key. Do not press the Return or Enter key when an instruction simply says <i>type</i> .
<b>Key names</b>	Key names are written in boldface, for example <b>Ctrl</b> or <b>Esc</b> . If you must press two or more keys simultaneously, the key names are linked with a plus sign (+). Example: Press <b>Ctrl+Alt+Del</b>
<i>Words in italicized type</i>	Italics emphasize a point or denote new terms at the place where they are defined in the text. Italics are also used when referring to publication titles.
<b>NEW!</b>	New information. In a PDF, this is searchable text.

**Table 3: Command syntax**

Convention	Description
<b>bold text</b>	Bold text indicates command names, keywords, and command options.
<i>italic text</i>	Italic text indicates variable content.
[ ]	Syntax components displayed within square brackets are optional. Default responses to system prompts are enclosed in square brackets.
{ <b>x</b>   <b>y</b>   <b>z</b> }	A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options.
<b>x</b>   <b>y</b>	A vertical bar separates mutually exclusive elements.
< >	Nonprinting characters, such as passwords, are enclosed in angle brackets.
...	Repeat the previous element, for example, <i>member[member...]</i> .
\	In command examples, the backslash indicates a “soft” line break. When a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash.

## Documentation and Training

Find Extreme Networks product information at the following locations:

[Current Product Documentation](#)

[Release Notes](#)

[Hardware and software compatibility](#) for Extreme Networks products  
[Extreme Optics Compatibility](#)  
[Other resources](#) such as white papers, data sheets, and case studies

Extreme Networks offers product training courses, both online and in person, as well as specialized certifications. For details, visit [www.extremenetworks.com/education/](http://www.extremenetworks.com/education/).

---

## Help and Support

---

If you require assistance, contact Extreme Networks using one of the following methods:

### Extreme Portal

Search the GTAC (Global Technical Assistance Center) knowledge base; manage support cases and service contracts; download software; and obtain product licensing, training, and certifications.

### The Hub

A forum for Extreme Networks customers to connect with one another, answer questions, and share ideas and feedback. This community is monitored by Extreme Networks employees, but is not intended to replace specific guidance from GTAC.

### Call GTAC

For immediate support: (800) 998 2408 (toll-free in U.S. and Canada) or 1 (408) 579 2826. For the support phone number in your country, visit: [www.extremenetworks.com/support/contact](http://www.extremenetworks.com/support/contact)

Before contacting Extreme Networks for technical support, have the following information ready:

- Your Extreme Networks service contract number, or serial numbers for all involved Extreme Networks products
- A description of the failure
- A description of any actions already taken to resolve the problem
- A description of your network environment (such as layout, cable type, other relevant environmental information)
- Network load at the time of trouble (if known)
- The device history (for example, if you have returned the device before, or if this is a recurring problem)
- Any related RMA (Return Material Authorization) numbers

## Subscribe to Product Announcements

You can subscribe to email notifications for product and software release announcements, Field Notices, and Vulnerability Notices.

1. Go to [The Hub](#).
2. In the list of categories, expand the **Product Announcements** list.
3. Select a product for which you would like to receive notifications.

4. Select **Subscribe**.
5. To select additional products, return to the **Product Announcements** list and repeat steps 3 and 4.

You can modify your product selections or unsubscribe at any time.

## Send Feedback

---

The Information Development team at Extreme Networks has made every effort to ensure that this document is accurate, complete, and easy to use. We strive to improve our documentation to help you in your work, so we want to hear from you. We welcome all feedback, but we especially want to know about:

- Content errors, or confusing or conflicting information.
- Improvements that would help you find relevant information.
- Broken links or usability issues.

To send feedback, do either of the following:

- Access the feedback form at <https://www.extremenetworks.com/documentation-feedback/>.
- Email us at [documentation@extremenetworks.com](mailto:documentation@extremenetworks.com).

Provide the publication title, part number, and as much detail as possible, including the topic heading and page number if applicable, as well as your suggestions for improvement.





# AP3000 Overview

---

- [New in this Guide](#) on page 10
- [Product Specifications](#) on page 10
- [Hardware Ports](#) on page 12
- [LED Status](#) on page 13
- [Power Profile](#) on page 15
- [Supported Accessories](#) on page 15
- [Micro USB Console Port Information](#) on page 17
- [MAC Address](#) on page 18
- [Cleaning Guidelines for Radome](#) on page 18
- [Purchase Order Information](#) on page 19

The AP3000 access point is an *indoor* access point with a Wi-Fi 6E dual radio and support for multiple Extreme Networks operating systems. It is designed for high density environments where a large number of people will access your network such as classrooms, warehouses, healthcare clinics, and manufacturing sites.

You can operate the AP across the 2.4 GHz and 5 GHz or the 5 GHz and 6 GHz bands. It is supported on the following platforms:

- ExtremeCloud™ IQ
- Extreme IQ Controller

The AP3000 ships with the AH-ACC-BKT-AX-TB mounting bracket for mounting the AP to a flat t-bar with flat ceiling tiles, flat surface, or a wall.

You do not have to use a country-specific SKU unless you are ordering for Israel or Egypt.



**Figure 1: The AP3000 Access point**

## New in this Guide

The following sections shows the recent documentation revisions for this guide. Use this information to locate the latest updates.

**Table 4: August 2023 Revisions**

Section	Description
<a href="#">Mexico Compliance Statement</a>	Updated for Compliance and Regulatory information.
<a href="#">Taiwan Regulatory Statement</a>	
<a href="#">Brazil Anatel Statement</a>	
<a href="#">Thailand Regulatory Notice</a>	
<a href="#">China Regulatory Notice</a>	
<a href="#">Israel Regulatory Notice</a>	
<a href="#">Country of Manufacture Notice</a>	

## Product Specifications

The AP3000 access point supports both PoE 802.3af and 802.3at. It is supported on the following platforms:

- ExtremeCloud™ IQ
- Extreme IQ Controller

## Antennas

The AP3000 has the following internal antennas:

- Four Wi-Fi internal antennas
- One Thread®; Zigbee®; Bluetooth® 5.3 Low Energy; IEEE 802.15.4

## Radios

The AP3000 has the following radios:

- Two 802.11ax radios (2X2 2.4GHz/2X2 6 GHz radio, and 2X2 5 GHz radio)
- One IoT Radio (2.4 GHz)
- Maximum users:
  - SSID per radio: 8 with a total of 16
  - Users per radio: 512 with a total of 1024

## Ports and Connectors:

The AP3000 has the following ports, connectors, and hardware features:

- One Kensington security slot:
- One USB 2.0 type A connector:
- Two Ethernet ports (ETH0 and ETH1)
  - ETH0: 2500/1000/100 Mbps auto-negotiation Ethernet port, RJ45, Power over Ethernet (PoE) at 802.3at and 802.3af. USB is not available with 802.3af.
  - ETH1: 1000/100/10 Mbps, RJ45

## Physical Dimensions

The AP3000 has the following dimensions and weight:

- Physical Specification: 16.2 cm x 16.2 cm x 3.6 cm (6.37 in. x 6.37 in. x 1.41 in.)
- Weight: 0.56 kg (1.2 lbs)

## Environmental Specifications

The following table shows the environmental operating conditions for the AP3000.

**Table 5: AP3000 Environmental specifications**

Specification	Range
Operating	0°C to 50°C (32°F to 122°F)
Storage	-40°C to 70°C (-40°F to 158°F)
Humidity	0% to 95% (non-condensing)


## Troubleshoot

The AP3000 has the following troubleshooting features:

- Console port: Micro USB
- One bi-color status light with white and amber indicators

## Hardware Ports


The AP3000 has several ports and hardware features to help you when you install the access point. Use the following diagrams and locate the ports and other hardware features.

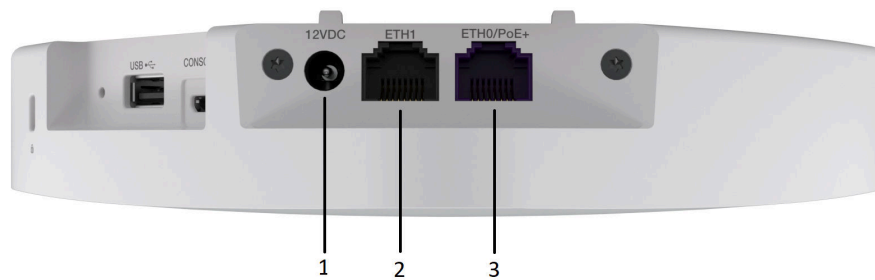

**Figure 2: AP3000 Hardware ports**

**Table 6: AP3000 Ports and Connections**

Item	Port	Description
1	12VDC	12-volts of direct current.
2	ETH1 port	1GB/1GE/100/10.
3	ETH0/PoE+ port	2.5GE/1GE/100 with PoE In.

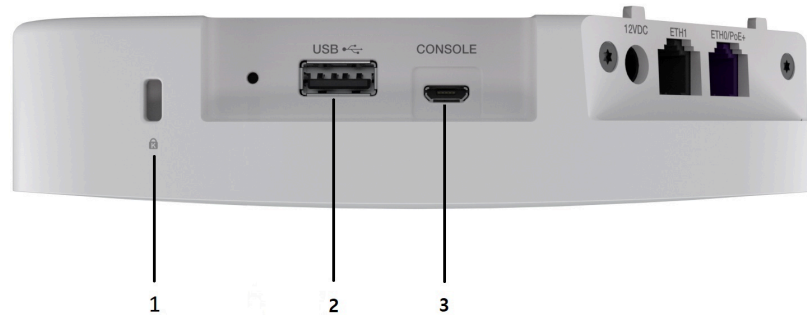


**Figure 3: AP3000 Hardware ports continued**

**Table 7: AP3000 Ports and Connections**

Item	Description	Use
1	Kensington security slot	A security feature used to secure your AP. This is an optional task, but it prevents someone from taking the AP.
2	2.0 USB type A port	Used with a thumb drive or other external device.
3	Console port	Micro USB console port for a serial connection between your management system and the access point. Use the port when you troubleshoot the AP. The best practice is to use the Extreme Networks micro USB cable (ACC-WIFI-MICRO-USB). When you connect to the device, the management station must have a VT100 emulation program, such as the terminal emulator TeraTerm Pro or Hilgraeve HyperTerminal. Set your baud rate to 115200.

## LED Status

The Extreme wireless access point has a LED status light that shows the AP's operating status. A solid white indicates that the AP is working normally. A solid or blinking amber indicates a potential issue.

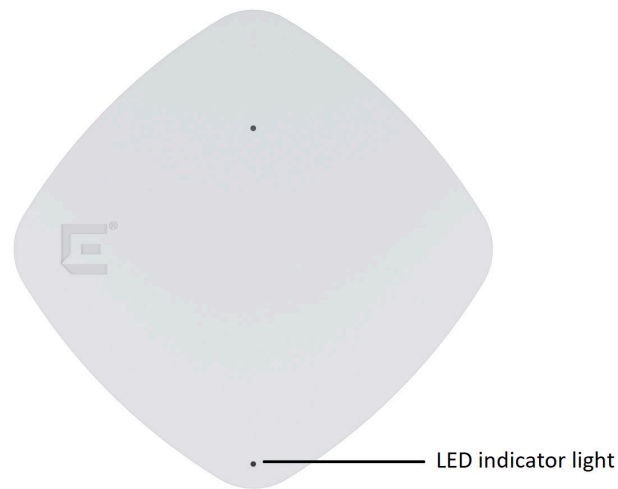

**Figure 4: AP3000 LED**

The following tables show the LED states based on your firmware.

**Table 8: IQ Engine Status LED Activity**

LED State	Description
Dark	AP is not being powered.
Solid white	Power is on and the access point is ready to use. The AP has a Control And Provisioning of Wireless Access Points (CAPWAP) connection to ExtremeCloud IQ.
Slow-blinking white	The AP has a CAPWAP connection to ExtremeCloud IQ, but it is operating on 802.3af power instead of 802.3at power.
Solid amber	The power is on and the access point is in start-up mode, or is running without a CAPWAP connection.
Slow-blinking amber	The AP does not have a CAPWAP connection to ExtremeCloud IQ. It is operating on 802.3af power instead of 802.3at power.
Fast-blinking amber	A IQ Engine firmware upgrade is in progress.

**Table 9: ExtremeWireless WiNG Status LED Activity**

LED State	Description
Dark	The AP is not being powered or the LED is turned off from the controller.
Solid white	The AP is starting up and a connection is being established to ExtremeCloud IQ Controller.

**Table 9: ExtremeWireless WiNG Status LED Activity (continued)**

LED State	Description
Slow-blinking white	The controller is taking over the AP or the controller has failed to take over the AP.
Flashing fading white	A location aid to help you find an AP. This setting is configured from the controller.
Solid amber	A firmware upgrade is in progress.
Fast-blinking amber	The AP is acquiring Dynamic Host Configuration Protocol (DHCP) IP address.

## Power Profile

The following table shows the AP3000 power profile. Use this information when you plan your installation.

**Table 10: AP3000 power profile**

AP3000	AF profile	AT and DC profile
Radio 0	2×2 (18 dBm)	2×2 (18 dBm)
Radio 1	2×2 (18 dBm)	2×2 (18 dBm)
BLE	On	On
USB (2.5W)	Off	On

## Supported Accessories

The AP3000 comes with the AH-ACC-BKT-AX-TB mounting bracket that can be used to mount the access point on flat surfaces, such as Prelude ceilings (15/16 in. ceiling grid), Suprafine ceilings (flat bottomed 9/16 in. ceiling grid), and walls. The ceiling tile sides must be flat.

## Supported Mounting Accessories

Purchase one of the following accessories if you are installing the access point on a surface other than a standard flat surface.

**Table 11: Supported accessories**

Item	Description
AH-ACC-BKT-AX-TB	Mounting bracket that can be used to mount the access point on flat surfaces such as Prelude ceilings (15/16 in. ceiling grid), Suprafine ceilings (flat bottomed 9/16 in. ceiling grid), and walls.  <b>Note:</b> AH-ACC-BKT-AX-TB is included with the access point.
AH-ACC-BKT-AX-IL	Mounting bracket for Interlude ceilings (9/16 in. wide T-bar with center protrusion).
AH-ACC-BKT-AX-SL	Mounting bracket for Silhouette ceilings (ceiling grid with 1/8 in. or 1/4 in. bottom opening).
AH-ACC-BKT-AX-WL	Mounting bracket for direct-to-wall installations when a 1.25 in. of space is desired between the wall and the access point.
ACC-BKT-TB-NF	Mounting bracket for 15/16 in. wide T-bars with sculpted ceiling tiles.
AH-ACC-BKT-916-KIT	Mounting bracket for 9/16 in. wide T-bars with sculpted ceiling tiles.
ACC-BKT-AX-TBW	Mounting bracket for 1.5 in. wide T-bars.
ACC-BKT-AX-BEAM	Mounting bracket for beam mounting.
ACC-BKT-AX-JB	Mounting bracket for junction box or wall mounting.

## Supported Power Accessories

You can power the access point through the ETH0 RJ45 Ethernet port. But if you need to power the AP with an external power supply, you can purchase a 12V DC power supply.

There is no wall mount bracket for the 12VDC power supply.

**Table 12: Power accessories**

Part number	Description
37215	PWR 12VDC, 2A (24W), 2.5 mm X 5.5 mm connector



## Other Accessories

The following table shows the additional accessories available for your access point.

Part number	Description
ACC-WIFI-MICRO-USB	<p>Extreme Networks micro USB cable.</p> <p><b>Note:</b> When you connect to the device using the micro USB Console port, the management station from which you connect to the device must have a VT100 emulation program, such as TeraTerm Pro (a free terminal emulator) or Hilgraeve HyperTerminal. Set your baud rate to 115200.</p>


## Micro USB Console Port Information

Use the console port to make a serial connection between your management system and the access point. You can order a micro USB console adapter for your access point using the part number ACC-WIFI-MICRO-USB.



### Note

When you connect to the Micro USB console port, the management station from which you connect to the device must have a VT100 emulation program, such as Tera Term Pro (a free terminal emulator) or Hilgraeve HyperTerminal® (provided with Windows operating systems from XP forward).

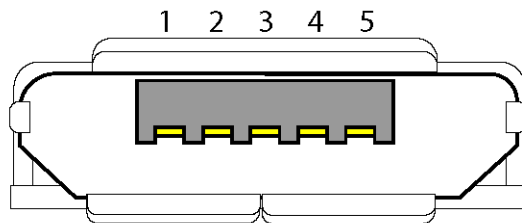

**Figure 5: Micro-B model Console Port Pin Information**

**Table 13: Micro-B USB Pin Information**

Pin number	Pin name and description
1	NC
2	RxD (input to access point)
3	TxD (output to terminal)
4	Signal (GND)
5	Signal (GND)

## MAC Address

The media access control address (MAC address) is located on the bottom of the access point. You can record the address for your company's records by scanning the code.



**Figure 6: Access Point MAC address**

## Cleaning Guidelines for Radome

You can use the following cleaning solutions:

- Hydrogen peroxide (a 3% solution)
- Chlorine bleach
- Sodium hypochlorite (a 0.05% solution)
- Ethyl alcohol (a 75% solution)
- Isopropyl alcohol (a 75% solution)
- White vinegar
- Sporidical (peracetic acid; a 0.5% solution)
- Water
- Baking soda (a 3:1 solution)
- Non-abrasive soap



**Note**

Do not wash the AP3000. You will damage the device and void the warranty. Instead you can wipe the radome with a damp cloth. But you must avoid the ports and connectors. Do not power wash the AP.

## Purchase Order Information

---

The AP3000 access point is sold with the AH-ACC-BKT-AX-TB mounting bracket. Use the information below when you order the AP.

**Table 14: Access point part number**

Part number	Description
AP3000-WW	Indoor Dual Radio Wi-Fi 6E AP, 2.4 GHz and 5 GHz or 5GHz and 6GHz, Multirate Port, Internal antennas. BLE/Zigbee. Includes AH-ACC-BKT-AX-TB mounting bracket. Domain: World SKU



# Access Point Installation

---

[Installation Work Flow](#) on page 21

[Box Contents](#) on page 21

[Install the Access Point on a Wall or a Flat Ceiling](#) on page 22

[Install the Access Point to a Wall with AH-ACC-BKT-AX-WL](#) on page 22

[Install the Access Point on a Silhouette Ceiling](#) on page 23

[Install the Access Point to a 9/16th T-bar Ceiling](#) on page 26

[Install the Access Point on a 15/16-inch T-bar](#) on page 29

[Install the Access Point on a Junction Box](#) on page 32

[Install the Access Point on a Beam](#) on page 33

[Connect a Power Supply](#) on page 35

[Lock Your Access Point](#) on page 36

[Post Installation](#) on page 36

The AP3000 access point is an indoor access point that can be installed on a ceiling rail, on non-standard ceilings, and on a wall. For more information about selecting the right access point bracket and accessory for your installation needs, see the *Extreme Networks 11.ax Access Points Accessories Guide*.

## Installation Work Flow

Use the information in the following table to help you install your access point.

**Table 15: Installation Work flow**

Steps	Action	Purpose
1	Verify the box contents.	Confirm that your AP and accessories arrived complete and undamaged.
2	Install the access point based on your needs. You can do any of the following: <ul style="list-style-type: none"> <li>Attach the AP to a standard ceiling rail.</li> <li>Attach the AP to a wall with AH-ACC-BKT-AX-WL.</li> <li>Attach the AP to a Silhouette ceiling.</li> <li>Attach the AP to an Interlude ceiling.</li> <li>Attach the AP to a junction Box.</li> <li>Attach the AP to a beam.</li> </ul>	Install the AP on a ceiling or wall, and connect the network cable. If you use Power over Ethernet, then the AP powers up. The AP begins a discovery process to determine its own IP address and the IP address of the controller. When the discovery process is successful, the AP registers with the controller.
3	(Optional) Connect to a power supply.	Connect to an external 12-volt DC power supply if you are not using Power over Ethernet (PoE).
4	(Optional) Lock the access point.	Secure the AP and prevent someone from removing it.
5	Complete the post-installation tasks and confirm registration.	Confirm that the AP registers with the controller, configure the AP for your network, and assign it to one or more Virtual Network Services (VNS).

## Box Contents

Your Extreme access point ships with everything that you need for a basic installation. All optional brackets and accessories are sold separately.

Confirm that you have received the following items before you install your device.

**Table 16: Hardware**

Quantity	Item
1	Extreme AP 3000 access point
1	Quick reference guide for your access point
1	AH-ACC-BKT-AX-TB mounting bracket
2	Phillips pan head wood screws
2	Screw-in anchors

---

## Install the Access Point on a Wall or a Flat Ceiling

---

### Before You Begin

Confirm that you have the following items:

- An AP3000 access point
- One AH-ACC-BKT-AX-TB mounting bracket. The bracket is used for flat surface wall or solid ceiling installation.
- Two M3.5 pan head wood screws and two screw-in anchors.

### About This Task

Follow these steps when you install the access point on a wall or solid ceiling.

### Procedure

1. Mark and drill two mounting holes.  
Use the AH-ACC-BKT-AX-TB mounting bracket as a template.
2. Attach the bracket to the wall.  
Use the two M3.5 pan head screws. Use push-in anchors or screw-in anchors for drywall or plastic board installations.
3. Attach the access point to the bracket  
Align the red dots on the bracket and the access point base.
4. Press and rotate the AP one-sixth turn clockwise.  
The AP clicks into place on the bracket.
5. Attach the network cable and power-up the AP.
  - If you use Power over Ethernet (PoE) then attach the network cable to the ETH0 port.
  - If you use Power Sourcing Equipment (PSE), then connect the power supply and attach the network cable to the ETH0 port.

---

## Install the Access Point to a Wall with AH-ACC-BKT-AX-WL

---

### Before You Begin

You need the following items:

- AP3000
- Three M3.5 screws and three screw-in anchors, shipped with the -WL bracket
- One AH-ACC-BKT-AX-WL bracket

### About This Task

Use the AH-ACC-BKT-AX-WL bracket when you need a 1.25 inch space between the wall and the access point.

### Procedure

1. Using the -WL bracket as a template, mark and drill mounting holes on the wall.

2. Bring the LAN cable from the wall through the bracket hole.  
Align the cable before attaching the bracket to the wall.

**Note**

A standard Ethernet cable can be used if you do not mind the cable being visible. To hide the Ethernet cable, a flat cable and a cable cap is required.

3. Attach the wall bracket to the wall using three M3.5 screws and three screw-in anchors.
4. Align the access point red dot against the three red dots on the -WL bracket.
5. Press and rotate the access point clockwise about one-sixth turn until it locks into place on the bracket.
6. Attach the network cable.

## Install the Access Point on a Silhouette Ceiling

---

### Before You Begin


You need the following items:

- AP3000
- AH-ACC-BKT-AX-SL bracket

### About This Task

You can mount the access point to a ceiling grid with 1/8 in. or 1/4 in. bottom opening.

Silhouette is an Armstrong Ceiling Solutions name.

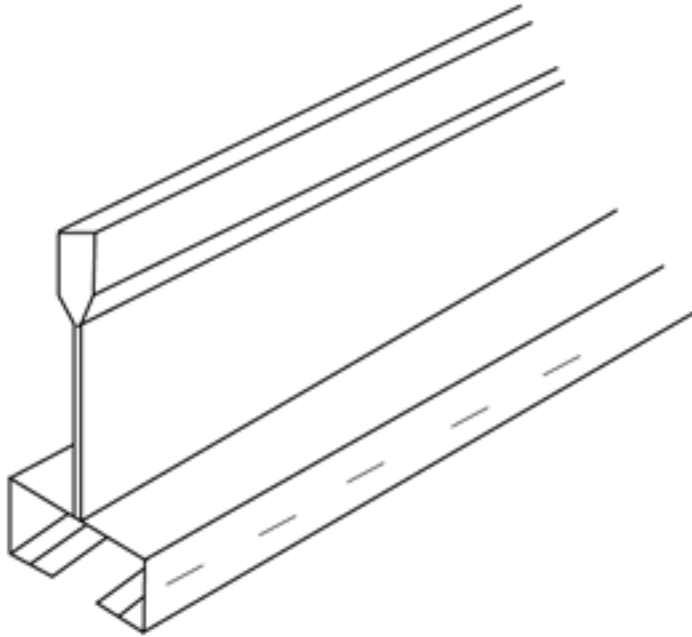

**Figure 7: Ceiling grid with 1/8 in. or 1/4 in. bottom openings**

#### Procedure

1. Remove the ceiling tiles.
2. Place the bracket on the ceiling rail in such a way that the accessory metal hinges are almost perpendicular to the sides of the ceiling rail with the ceiling rail over the center hole.
3. Lightly push onto to the ceiling rail and rotate the accessory clockwise until the hinges hook over the edge of the rail and the white tabs click in place.




#### Note

There are two white tabs in the back of the bracket that holds on to the ceiling rail in place. Use your finger to pull and unhook one side of the white tab if you want to remove the accessory from the ceiling rail.

Gently rotate the bracket counterclockwise and if there is resistance, the other white tab in the back of the accessory must also be released.



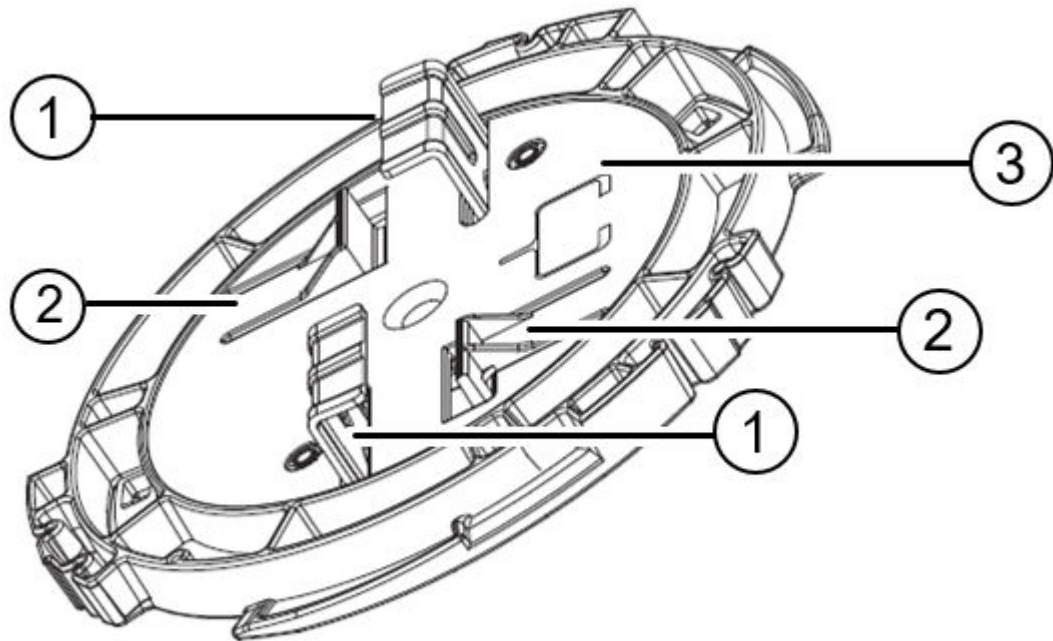

**Figure 8: AH-ACC-BKT-AX-SL accessory bracket**


Call out	Description
1	Metal hinges on the AH-ACC-BKT-AX-SL bracket.
2	White tabs on the AH-ACC-BKT-AX-SL bracket.
3	Drawing of 1/8 in. or 1/4 in. ceiling grid, for your reference.

- Align the red dot on the back of the access point against the accessory bracket red dot.



**Note**

The accessory has a circular tip that fits into the circular depression on the back of the access point.

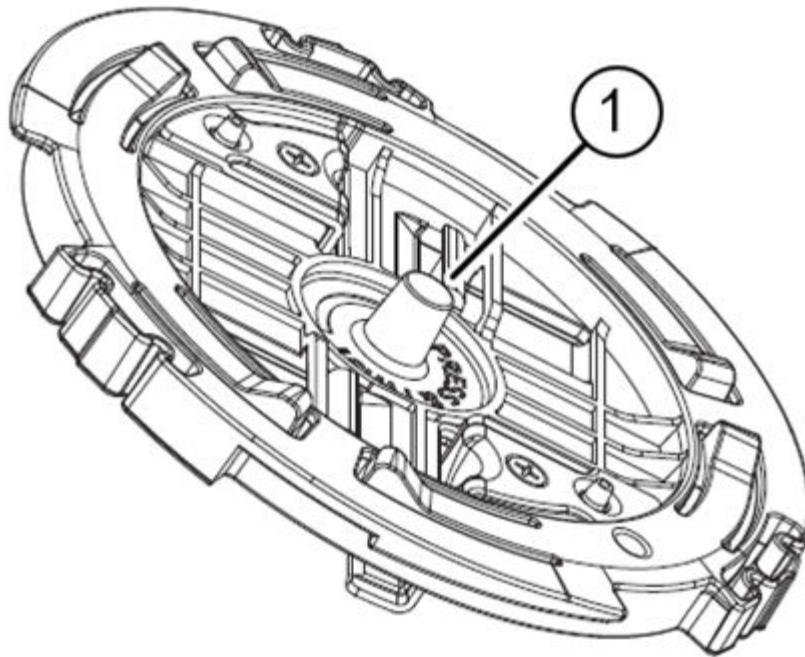

**Figure 9: AH-ACC-BKT-AX-SL accessory bracket circular tip**

Call out	Description
1	AH-ACC-BKT-AX-SL bracket circular tip

5. Press and rotate the access point clockwise until it locks into place on the accessory.
6. Connect the network cable.
7. Replace the ceiling tiles.

## Install the Access Point to a 9/16th T-bar Ceiling


### Before You Begin

You need the following items:

- AP3000
- One AH-ACC-BKT-AX-IL accessory bracket

### About This Task

You can mount the access point to a ceiling that has a 9/16 in. wide T-bar with a center protrusion.

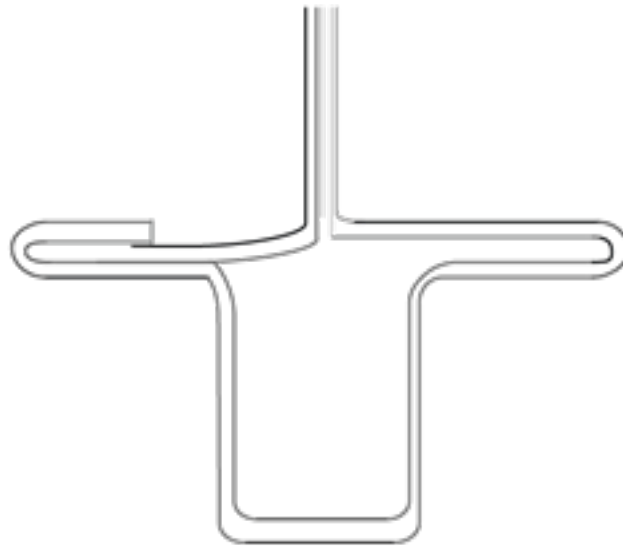

**Figure 10: 9/16 in. wide T-bar with protrusion**

#### Procedure


1. Remove the ceiling tiles.
2. Place the bracket on the ceiling rail in such a way that the accessory center is over the protrusion and the metal hinges are between perpendicular and about one-eighth of a turn from the sides of the ceiling rail.
3. Push up gently and rotate the bracket clockwise until the hinges hook over the edge of the rail and the white tabs click in place.



#### Note

There are two white tabs in the back of the accessory bracket that holds on to the ceiling rail in place. Use your finger to pull and unhook one side of the white tab if you want to remove the accessory from the ceiling rail.

Gently rotate the bracket counterclockwise and if there is resistance, the other white tab in the back of the accessory must also be released.

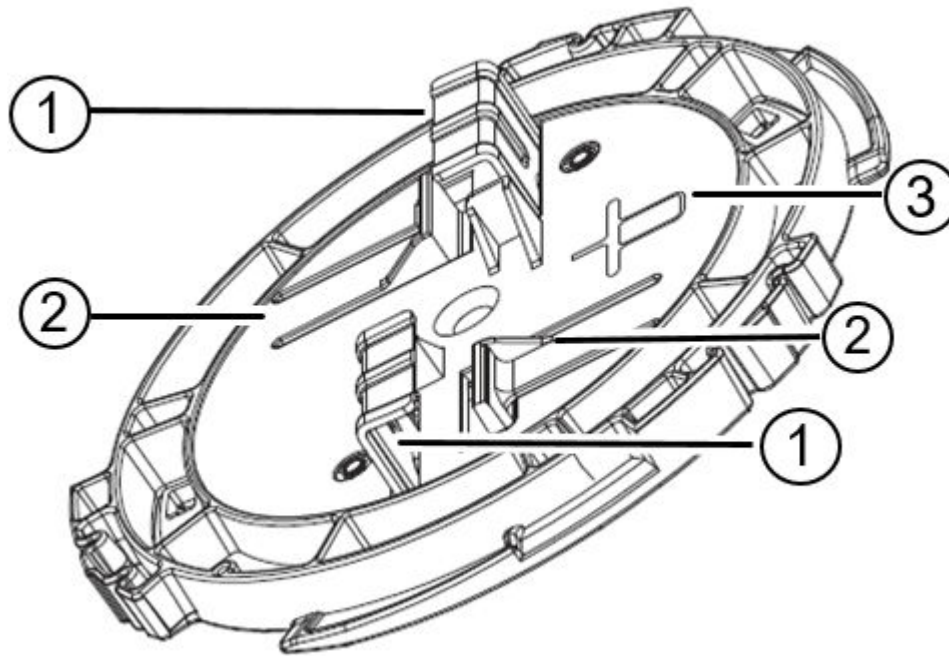

**Figure 11: AH-ACC-BKT-AX-IL accessory bracket**


Call out	Description
1	Metal hinges on the AH-ACC-BKT-AX-IL bracket.
2	White tabs on the AH-ACC-BKT-AX-IL bracket.
3	Drawing of 9/16 in. ceiling grid, for your reference.

4. Align the red dot on the back of the access point against the accessory red dot.



**Note**

The bracket has a circular tip that fits into the circular depression on the back of the access point.

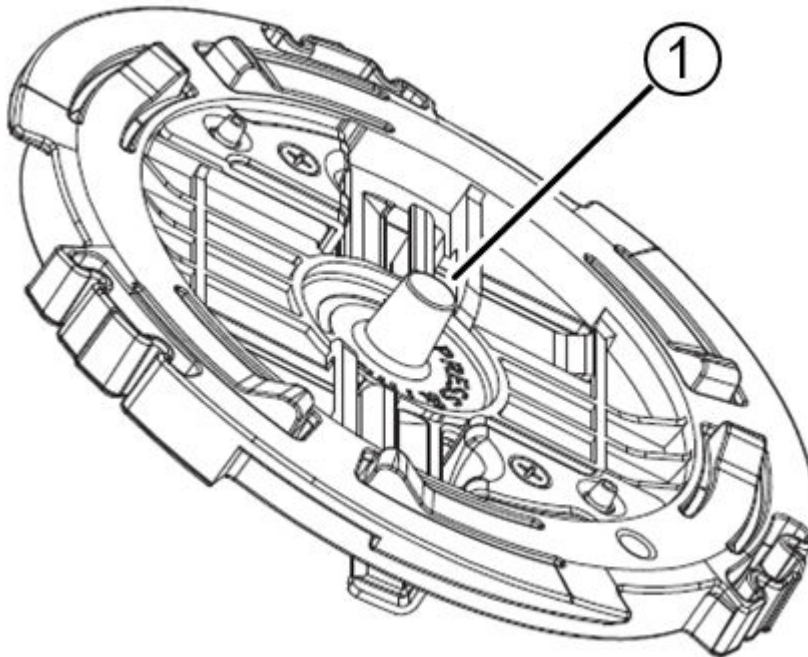

**Figure 12: AH-ACC-BKT-AX-IL accessory bracket circular tip**

Call out	Description
1	AH-ACC-BKT-AX-IL bracket circular tip

5. Press and rotate the access point clockwise about one-sixth of a turn until it locks into place on the accessory bracket.
6. Connect the network cable.
7. Place the cable cover over the Ethernet cable.
8. Replace the ceiling tiles.

## Install the Access Point on a 15/16-inch T-bar


### Before You Begin

Obtain the following items:

- One AP3000
- One ACC-BKT-TB-NF adapter
- One AH-ACC-BKT-AX-TB accessory

### About This Task

Use the ACC-BKT-TB-NF bracket when you install the AP on a suspended ceiling with 15/16-inch grid system.

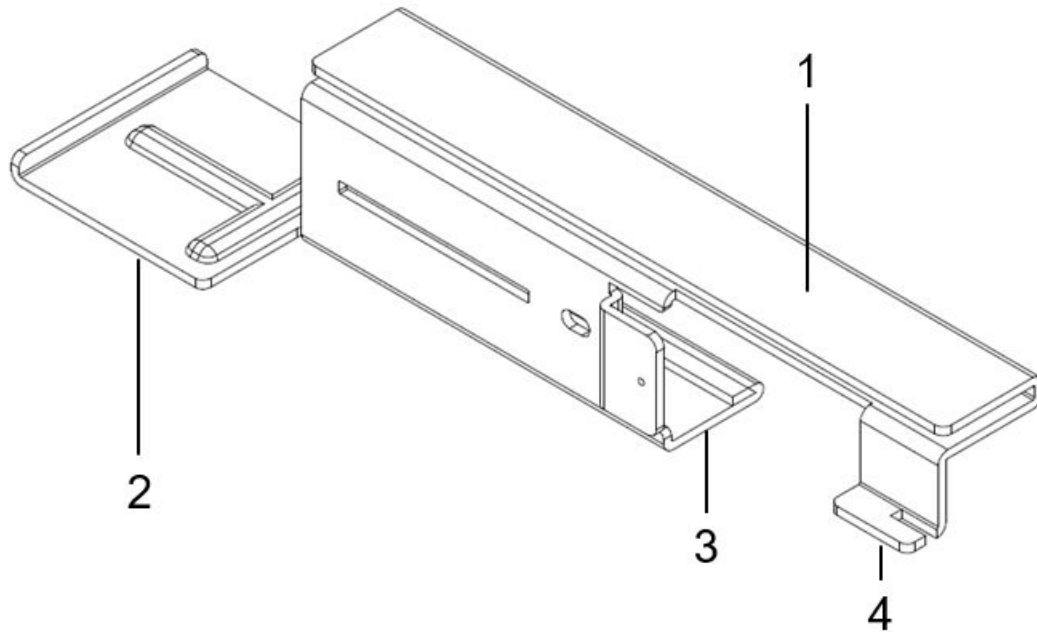


**Figure 13: ACC-BKT-TB-NF adapter**

Callout	Description
1	Adapter guide for ceiling rail attachment
2	Adapter end
3	Indent for - NF second part attachment
4	Adapter tabs

### Procedure

1. Remove the ceiling tiles.
2. Using the adapter guide on the top half of the ACC-BKT-TB-NF adapter, align and attach the -NF on to the ceiling rail.
3. Slide the other part of the -NF adapter onto the half attached to the ceiling rail.
4. Attach the AH-ACC-BKT-AX-TB accessory onto the -NF adapter.
  - a. Center the -TB accessory on the attached -NF parts.
  - b. Push up and rotate the -TB accessory clockwise until the metal hinges hook over the bottom halves of the -NF adapter ends and the plastic tabs on the -TB accessory click into place.

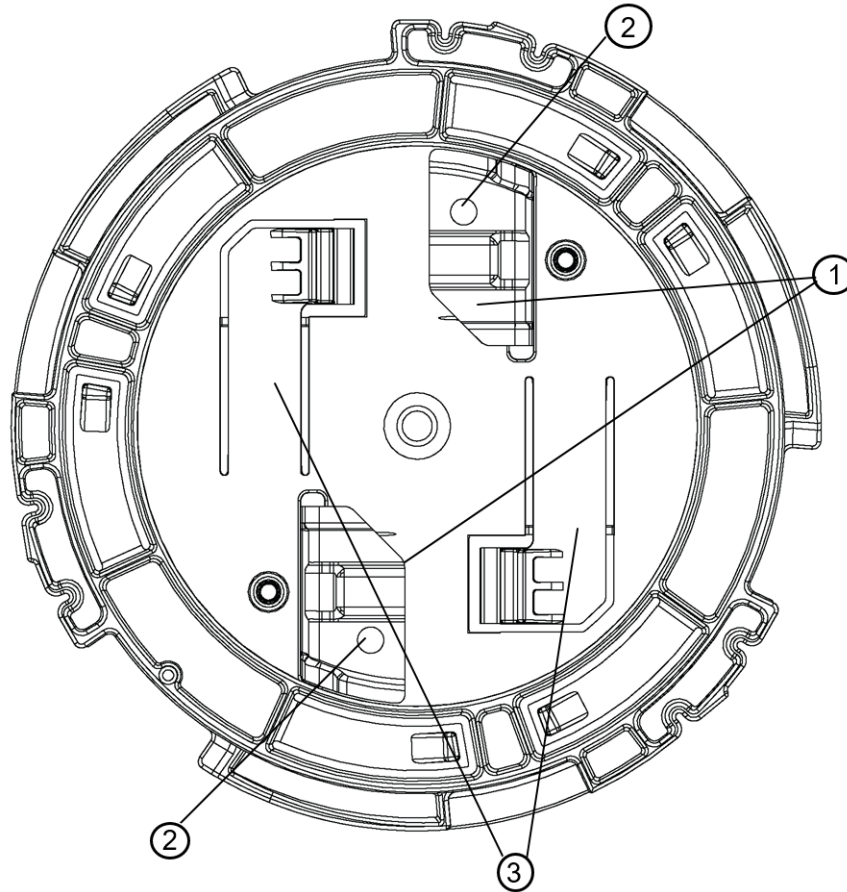

**Figure 14: AH-ACC-BKT-AX-TB accessory bracket**

Callout	Description
1	Metal hinges on the AH-ACC-BKT-AX-TB bracket
2	Mounting holes for wall mounting
3	White plastic tab on the AH-ACC-BKT-AX-TB bracket

5. Align the red dot on the back of the access point against the -TB bracket red dot.



**Note**

The bracket has a circular tip that fits into the circular depression on the back of the access point.

- 6. Press and rotate the access point one-eighth of a turn clockwise until it clicks into place on the accessory.
- 7. Connect the network cable.
- 8. Replace the ceiling tiles.

## Install the Access Point on a Junction Box

### Before You Begin

You need the following items:


- AP3000
- ACC-BKT-AX-JB for junction box mounting.

### About This Task

Install a access point to a junction box if you want to power the AP using an electrical connection.

The ACC-BKT-AX-JB accessory bracket is used when you need to install the access point on an indoor junction box. The ACC-BKT-AX-JB access has two parts:


- A metal part that attaches to the junction box (also called the sheet-metal junction box hole plate)

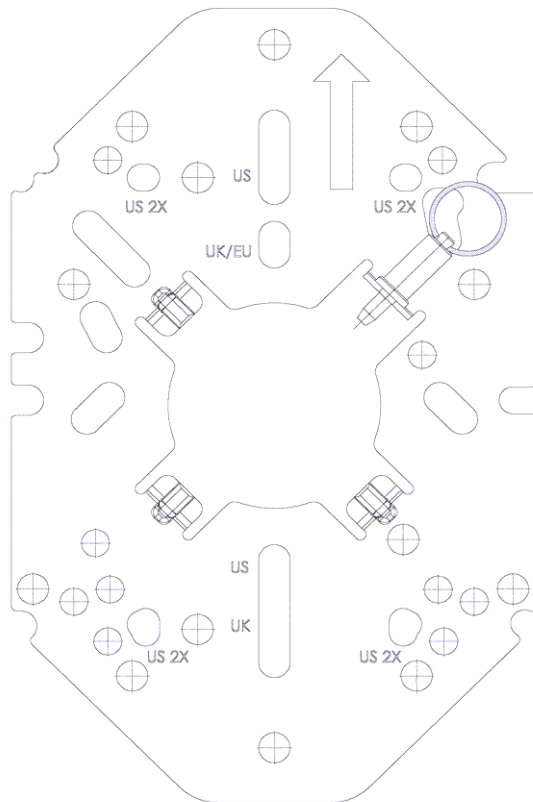

**Figure 15: ACC-BKT-AX-JB accessory bracket metal part**

- A plastic part that attaches to the metal part and the access point (also called the plastic twist plate)



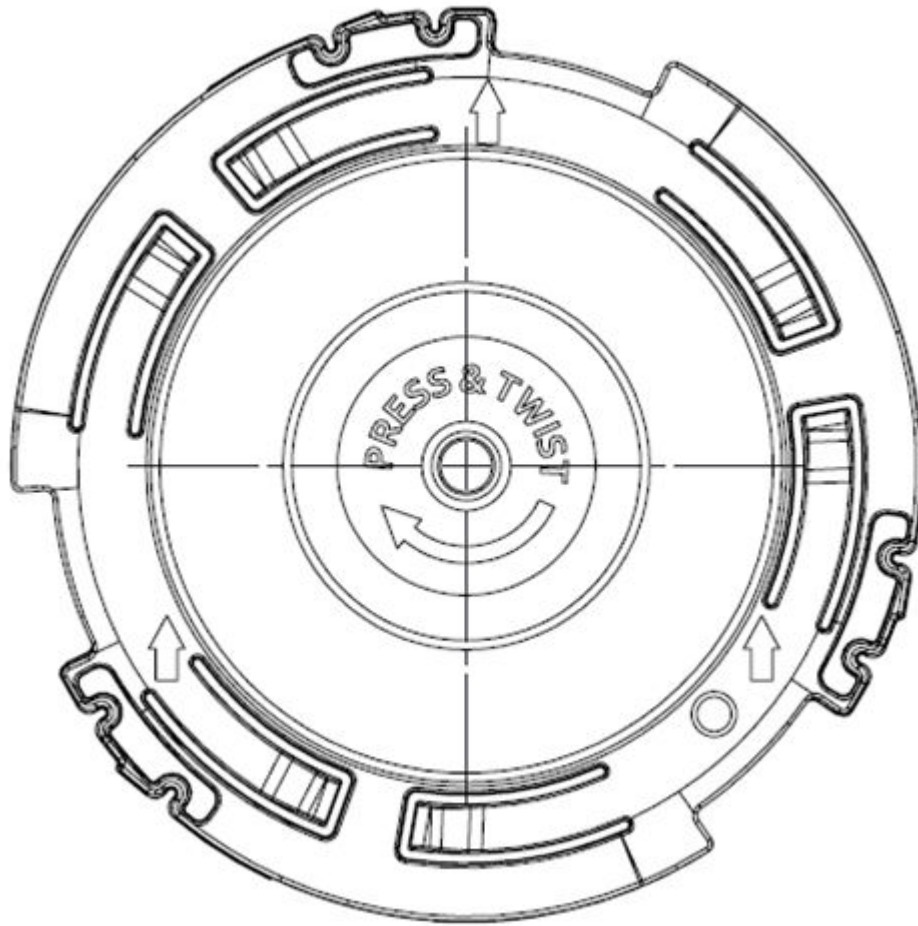

**Figure 16: ACC-BKT-AX-JB accessory bracket plastic part**

#### Procedure

1. Align the red dot on the back of the access point against the red dot on the plastic part.
2. Push the access point onto the plastic part and turn it clockwise until you hear it lock in place.
3. Insert the RJ45 cable connector to the Ethernet connector on the access point.

## Install the Access Point on a Beam

### Before You Begin

You need the following items:

- AP3000
- ACC-BKT-AX-BEAM mounting bracket

Find a location that supports the following requirements:

- The beam must be able to support the access point in all environmental conditions.
- The beam must be flat.

- Beam attachment area is at least 0.5 in. (12.7mm) wide and as long as the access point's largest dimension.
- Beam mounting surface is at least 0.040 in. (1.0 mm) thick, but less than 0.650 in. (16.5mm) thick.

### About This Task

If you are installing the access point in a warehouse or other industrial environments, then you might have to install the AP on a beam instead of a ceiling.

### Procedure

1. Align the red dot on the access point with the red dot on the accessory bracket.
2. Insert the plastic part posts into the access point back recess.
3. Push the access point onto the plastic part, and rotate the access point about one-sixth turn clockwise to make it lock in place.



#### Note


If you can turn or twist the access point, it was not locked in place properly. Remove the access point and attach it again until it locks in place.

4. Connect the network cable.
5. Open the top screw as necessary and place the beam clip onto a beam.



#### Note

You must hold the access point when attaching the beam clip.

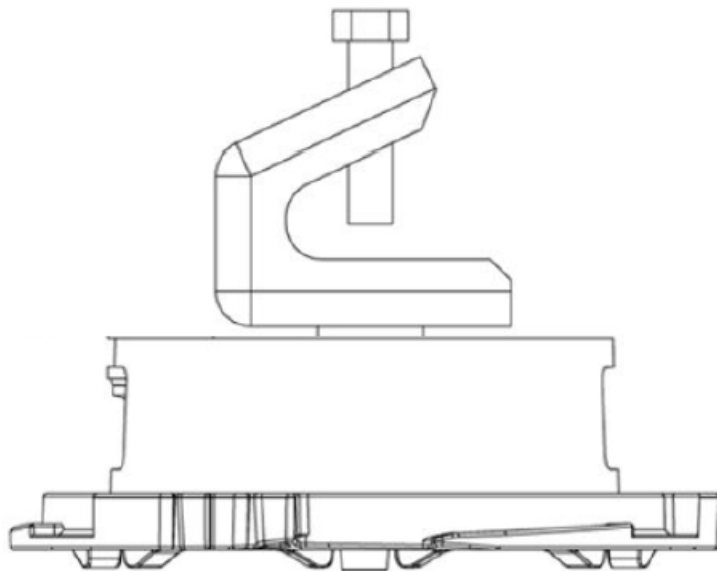

**Figure 17: ACC-BKT-AX-BEAM accessory bracket**

6. Tighten the beam clip top screw to a torque of 50 in-lbs.

## Connect a Power Supply

### Before You Begin

Obtain a Powertron 12VDC power supply. The power supply is ordered separately. See the table below.



#### Caution

Only use Extreme approved power supplies for your access point. Unapproved third-party components can damage your AP.

**Table 17: Power Accessory**

Part number	Description
37215	PWR 12VDC, 2A (24W), 2.5 mm X 5.5 mm connector

### About This Task

You can power the AP through the ETH0 RJ45 Ethernet port. But if you prefer an external power supply, then you can use the 12VDC power supply.


There is no wall mount bracket for the power supply.

See the [Power Profile](#) for power consumption specifications.



#### Note

Power over Ethernet (PoE) is disabled when you use an external power supply.

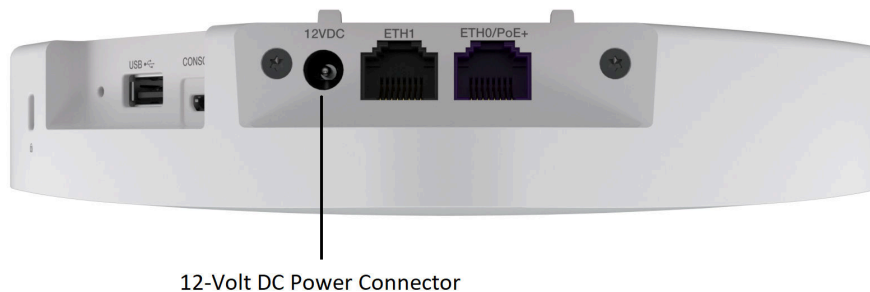

**Figure 18: AP3000 Power connector**

### Procedure

Plug the power supply into the 12-volt power connector.  
The LED lights up.

## Lock Your Access Point

---

### Before You Begin

You will need the following items:

- A 3 mm diameter security cable
- A lock to secure the cable

### About This Task

You can use the Kensington security slot to secure your access point. The security feature prevents someone from taking the AP.



### Procedure

1. Insert the safety cable through the security cable hole on the metal base of the access point.
2. Insert a lock through the looped ends of the cable and lock it in place.

## Post Installation

---

After you have installed the access point, you should do the following tasks:

- Network administrators might have to onboard the AP. See the "Onboarding" chapter in the User Guide for your platform, either *ExtremeCloud IQ User Guide* or *ExtremeCloud IQ Controller User Guide*.
- Confirm that the LED is white. A white LED indicates that your AP has powered up and registered with the controller. An amber light indicates a technical issue that requires a resolution. See [LED Status](#) on page 13 for an explanation of the LED states.
- Wireless APs are added to your network with the default settings. After the AP registers, you should configure the AP to meet your needs and assign it to one or more Virtual Network Services (VNS).

See the User Guide for your platform, either *ExtremeCloud IQ User Guide* or *ExtremeCloud IQ Controller User Guide*.



# Regulatory and Compliance Information

---

[Safety Guidelines](#) on page 38

[Professional Installation Instruction](#) on page 39

[FCC Notice \(Part 15 - Class B\)](#) on page 39

[FCC Radiation Exposure Statement](#) on page 40

[Conformité Européenne \(CE\) Information](#) on page 41

[CE Marking and European Area \(EEA\)](#) on page 41

[Country of Manufacture](#) on page 41

[Brazil Anatel Statement](#) on page 41

[China Compliance Statement](#) on page 41

[Israel Regulatory Statement](#) on page 42

[Mexico Compliance Statement](#) on page 42

[Extreme Networks EU Importer Address](#) on page 42

[Extreme Networks UK Address](#) on page 42

[UK Statement and CE Statement](#) on page 42

[Industry Canada Notice](#) on page 43

[Thailand Regulatory Notice](#) on page 44

[Taiwan Regulatory Statement](#) on page 45

[European Waste Electrical and Electronic Equipment \(WEEE\) Notice](#) on page 45

[Supplement to Product Instructions](#) on page 46

[Declaration of Conformity in Languages of the European Community](#) on page 47

Learn about safety guidelines, compliance notices, and regulatory information pertaining to various countries in which the device can be used.

## Safety Guidelines

---

The following safety guidelines are intended to protect your personal safety and prevent damage to the equipment.

**Important**

Only qualified personnel must perform installation procedures. Within the context of the safety notes in this documentation, qualified persons are defined as persons who are authorized to commission grounding, label devices, systems, and circuits in accordance with established safety practices and standards. A qualified person understands the requirements and risks involved with installing outdoor electrical equipment in accordance with national codes.

## Professional Installation Instruction

---

### Installation personnel

This product is designed for specific application and needs to be installed by a qualified personnel who has RF and related rule knowledge. The general user shall not attempt to install or change the setting.

### Instructions d'installation professionnelle

*Installation*

Ce produit est destiné à un usage spécifique et doit être installé par un personnel qualifié maîtrisant les radiofréquences et les règles s'y rapportant. L'installation et les réglages ne doivent pas être modifiés par l'utilisateur final.

*Procédure d'installation*

Consulter le manuel d'utilisation.

**Warning**

**Avertissement:** Choisir avec soin la position d'installation et s'assurer que la puissance de sortie ne dépasse pas les limites en vigueur. La violation de cette règle peut conduire à de sérieuses pénalités fédérales.

## FCC Notice (Part 15 - Class B)

---

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this

device must accept any interference received, including interference that may cause undesired operation.

**Note**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment uses, generates, and can radiate radio frequency energy and if not installed in accordance with the operator's manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the antenna of the receiving devices.
- Increase the separation between this equipment and receiving equipment.
- Connect this equipment into an outlet on a circuit different from that to which the receiving equipment is connected.
- Consult the dealer or an experienced radio or TV technician for help.

**Warning**

Changes or modifications made to this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FCC Radiation Exposure Statement

---

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Operation in the band 5925-7125 MHz subject to, (1) FCC regulations restrict the operation of this device to indoor use only, (2) the operation of this device is prohibited on oil platforms, cars, trains, boats, and aircraft, except that operation of this device is permitted in large aircraft while flying above 10,000 feet, and (3) operation of transmitters in the 5.925 GHz - 7.125 GHz band is prohibited for control of or communications with unmanned aircraft systems.

**Warning**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 47 cm between the radiator and your body.



## Conformité Européenne (CE) Information



### Warning

**CE co-location MPE Statement:** This equipment complies with CE radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

The device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

**Table 18: Selling Countries:**

	AT	BE	BG	HR	CY	CZ	DK
	EE	FI	FR	DE	EL	HU	IE
	IT	LV	LT	LU	MT	NL	PL
	PT	RO	SK	SI	ES	SE	UK (NI)

## CE Marking and European Area (EEA)



### Warning

This is a class B product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

## Country of Manufacture

**Manufacturer:** Senao Networks, Inc

**Address:** No. 500, Fusing 3rd Rd.,

Hwa-Ya Technology Park,

Kuei-Shan Dist.,

Taoyuan

## Brazil Anatel Statement

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores informações, consulte o site da ANATEL –[www.anatel.gov.br](http://www.anatel.gov.br)

## China Compliance Statement

核准□号 CMIIT ID 在□品□牌位置□□

## Israel Regulatory Statement

---

מספר אישור התאמה מטעם משרד התקשורת: 51-95969

חל איסור לבצע פעולות במכשיר שיש בהן כדי לשנות את תכונותיו האלחוטיות של המכשיר, ובכלל זה שינויי תוכנה, החלפת אנטנה מקורית או הוספת אפשרות לחיבור לאנטנה חיצונית, בלא קבלת אישור משרד התקשורת, בשל החשש להפרעות אלחוטיות.

חל איסור על הפעלת המכשיר מחוץ למבנה, בשל חשש להפרעות אלחוטיות.

## Mexico Compliance Statement

---

La operación de este equipo está sujeta a las siguientes dos condiciones

1. es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

## Extreme Networks EU Importer Address

---

Extreme Networks, Ireland Ops Ltd.

Rineanna House Shannon Industrial Estate

Shannon, V14CA36 Ireland

## Extreme Networks UK Address

---

Extreme Networks, UK Ltd.

250 Longwater Avenue Green Park

1st Floor

Reading, UK

## UK Statement and CE Statement

---

This equipment complies with the UK and EEA radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

The frequency and the maximum transmitted power in the UK and European Conformity are listed below:

CE	UK
2400-2483.5 MHz: 19.98 dBm	2400-2483.5 MHz: 19.98 dBm
2400-2483.5 MHz (802.15.4): 8.03dBm	2400-2483.5 MHz (802.15.4): 8.03 dBm
2400-2483.5 MHz (BLE®): 8.0 dBm	2400-2483.5 MHz (BLE®): 8.0 dBm
5150-5725 MHz: 29.96 dBm	5150-5725 MHz: 29.96 dBm
5725-5850 MHz: 13.97 dBm	5720-5850 MHz: 29.97 dBm
5945-6425 MHz: 22.99 dBm	5945-6425 MHz: 22.99 dBm

CE - The device is restricted to indoor use only when operating in the 5945 to 6425 MHz frequency range.

UK - The device is restricted to indoor use only when operating in the 5945 to 6425 MHz frequency range.

Hereby, Extreme Networks declares that the radio equipment AP3000 is in compliance with Radio Equipment Regulations 2017.

Operation on oil platforms, cars, trains, boats, and aircraft shall be prohibited except for on large aircraft flying above 10,000 ft.

For full text of the UK Declaration of Conformity, please contact Extreme Regulatory Compliance at [compliancerequest@extremenetworks.com](mailto:compliancerequest@extremenetworks.com).

## Industry Canada Notice

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exempts de licence qui sont conformes au (x) RSS (s) exemptés de licence d'Innovation, Sciences et Développement économique Canada. L'opération est soumise aux deux conditions suivantes:

- Cet appareil ne doit pas provoquer d'interférences.
- Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

Pour les produits disponibles aux États-Unis / Canada du marché, seul le canal 1 à 11 peuvent être exploités. Sélection d'autres canaux n'est pas possible.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

**Warning**

This EUT is compliance with SAR for general population/uncontrolled exposure limits in IC RSS-102 and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528.

**Warning**

**IC Déclaration d'exposition aux radiations:** Cet EUT est conforme au SAR pour les limites d'exposition de la population générale / non contrôlée dans IC RSS-102 et a été testé conformément aux méthodes et procédures de mesure spécifiées dans IEEE 1528.

**Warning**

**IC Radiation Exposure Statement:** This device has been tested and meets applicable limits for Radio Frequency (RF) exposure. This device was tested with a separation distance of 31 mm. Always keep the device away from your body to ensure exposure levels remain at or below the tested levels.

**Warning**

Cet appareil a été testé et respecte les limites applicables en matière d'exposition aux radiofréquences (RF). Cet appareil a été testé avec une distance de séparation de 25 mm. Gardez toujours l'appareil éloigné de votre corps pour vous assurer que les niveaux d'exposition restent égaux ou inférieurs aux niveaux testés.

## Thailand Regulatory Notice

---

อุปกรณ์ อสารทางวิทยน ความแรงของสนามแม่เหล็กไฟฟ้าตามมาตรฐานความปลอดภัยสำหรับ

การใช้อุปกรณ์สื่อสารทางวิทยนต่อสุขภาพของมนุษย์ที่ประกาศโดยคณะกรรมการโทรคมนาคมแห่งชาติ



เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคม หรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตวิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498



**nans.** | โทรคมนาคม  
กำกับดูแลเพื่อประชาชน  
Call Center 1200 (InSWi)


## Taiwan Regulatory Statement

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

本器材須經專業工程人員安裝及設定，始得設置使用，且不得直接販售給一般消費者。無線資訊傳輸設備避免影響附近雷達系統之操作。

請至此連結  讀中文  明: <https://www.extremenetworks.com/support/documentation>.

## European Waste Electrical and Electronic Equipment (WEEE) Notice

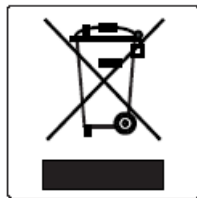

In accordance with Directive 2012/19/EU of the European Parliament on waste electrical and electronic equipment (WEEE):

1. The symbol above indicates that separate collection of electrical and electronic equipment is required.
2. When this product has reached the end of its serviceable life, it cannot be disposed of as unsorted municipal waste. It must be collected and treated separately.

3. It has been determined by the European Parliament that there are potential negative effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment.
4. It is the user's responsibility to utilize the available collection system to ensure WEEE is properly treated.

For information about the available collection system, please contact Extreme Environmental Compliance at [Green@extremenetworks.com](mailto:Green@extremenetworks.com).

## Supplement to Product Instructions

單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr <sup>+6</sup> )	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
金屬零件 (Metal Parts)	○	○	○	○	○	○
電路模組 (Circuit Modules)	—	○	○	○	○	○
電纜及電纜組件 (Cables & Cable Assemblies)	○	○	○	○	○	○
塑料和聚合物零件 (Plastic and Polymeric parts)	○	○	○	○	○	○

備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。  
 Note 1 : “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。  
 Note 2 : “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考3. “—”係指該項限用物質為排除項目。  
 Note 3 : The “—” indicates that the restricted substance corresponds to the exemption.

## Declaration of Conformity in Languages of the European Community

English	Hereby, Extreme Networks declares that the radio equipment type (AP3000/AP-3000WW) is in compliance with Directive 2014/53/EU. For full text of the EU Declaration of Conformity, contact Extreme Regulatory Compliance at <a href="mailto:compliancerequest@extremenetworks.com">compliancerequest@extremenetworks.com</a>
Finnish	Valmistaja Extreme Networks vakuuttaa täten että Radio LAN device (AP3000/AP-3000WW) tyyppinen laite on direktiivin 2014/53/EU oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen. EU-vaatimustenmukaisuusvaatimuksen täydellisestä tekstistä ota yhteyttä äärimmäisiin säädösten noudattamiseen osoitteessa <a href="mailto:compliancerequest@extremenetworks.com">compliancerequest@extremenetworks.com</a>
Dutch	Hierbij verklaart Extreme Networks dat het toestel Radio LAN device (AP3000/AP-3000WW) in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 2014/53/EU. Neem voor de volledige tekst van de EU-conformiteitsverklaring u contact opnemen met extreme regelgeving op <a href="mailto:compliancerequest@extremenetworks.com">compliancerequest@extremenetworks.com</a>
French	Par la présente Extreme Networks déclare que l'appareil Radio LAN device (AP3000/AP-3000WW) est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 2014/53/EU. Pour obtenir le texte intégral du processus de Déclaration de la conformité de l'UE, veuillez contacter la conformité réglementaire extrême à l'adresse suivante: <a href="mailto:compliancerequest@extremenetworks.com">compliancerequest@extremenetworks.com</a>
Swedish	Härmed intygar Extreme Networks att radioutrustningstypen (AP3000/AP-3000WW) överensstämmer med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 2014/53/ EU. För fullständig text av EU-försäkran om överensstämmelse, kontakta Extreme regelefterlevnad på <a href="mailto:compliancerequest@extremenetworks.com">compliancerequest@extremenetworks.com</a>

<p>Danish</p>	<p>Undertegnede Extreme Networks erklærer herved, at følgende udstyr Radio LAN device (AP3000/AP-3000WW) overholder de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU. For den fulde ordlyd af EU-overensstemmelseserklæringen bedes du kontakte Extreme Regulatory Compliance på <a href="mailto:compliancerequest@extremenetworks.com">compliancerequest@extremenetworks.com</a></p>
<p>German</p>	<p>Hiermit erklärt Extreme Networks die Übereinstimmung des "WLAN Wireless Controller bzw. Access Points" (AP3000/AP-3000WW) mit den grundlegenden Anforderungen und den anderen relevanten Festlegungen der Richtlinie 2014/53/EU. Für den vollständigen Wortlaut der EU-Konformitätserklärung wenden Sie sich bitte an extreme Regulatory Compliance unter <a href="mailto:compliancerequest@extremenetworks.com">compliancerequest@extremenetworks.com</a></p>
<p>Greek</p>	<p>ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Extreme Networks ΔΗΛΩΝΕΙ ΟΤΙ Radio LAN device (AP3000/AP-3000WW) ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 2014/53/EU. Για το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ, παρακαλούμε επικοινωνήστε με την ακραία κανονιστική συμμόρφωση στο <a href="mailto:compliancerequest@extremenetworks.com">compliancerequest@extremenetworks.com</a></p>
<p>Icelandic</p>	<p>Extreme Networks lýsir her með yfir að thessi bunadur, Radio LAN device (AP3000/AP-3000WW), uppfyllir allar grunnkröfur, sem gerdar eru í R&amp;TTE tilskipun ESB nr 2014/53/EU. Fyrir fullan texta í ESB yfirlýsingu um samræmi, vinsamlegast hafðu samband við Extreme Reglufylgni á <a href="mailto:compliancerequest@extremenetworks.com">compliancerequest@extremenetworks.com</a></p>
<p>Italian</p>	<p>Con la presente Extreme Networks dichiara che questo Radio LAN device (AP3000/AP-3000WW) è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 2014/53/EU. Per il testo integrale della Dichiarazione di conformità dell'UE, contattare Extreme Regulatory Compliance presso <a href="mailto:compliancerequest@extremenetworks.com">compliancerequest@extremenetworks.com</a></p>



Spanish	Por medio de la presente Extreme Networks declara que el Radio LAN device (AP3000/AP-3000WW) cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 2014/53/EU. Para obtener el texto completo de la Declaración de conformidad de la UE, póngase en contacto con Extreme Regulatory Compliance en <a href="mailto:compliancerequest@extremenetworks.com">compliancerequest@extremenetworks.com</a>
Portuguese	Extreme Networks declara que este Radio LAN device (AP3000/AP-3000WW) está conforme com os requisitos essenciais e outras disposições da Directiva 2014/53/EU. Para o texto integral da declaração de conformidade da UE, contacte a conformidade regulamentar extrema em <a href="mailto:compliancerequest@extremenetworks.com">compliancerequest@extremenetworks.com</a>
Malti	Hawnhekk, Extreme Networks, jiddikjara li dan Radio LAN device (AP3000/AP-3000WW) jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Direttiva 2014/53/EU. Għat-test sħiħ tad-dikjarazzjoni ta' konformità tal-UE, jekk jogħġbok ikkuntattja lill-konformità regolatorja <a href="mailto:compliancerequest@extremenetworks.com">compliancerequest@extremenetworks.com</a>



# Index

---

## A

- access point features 10–12
- access point overview 9
- announcements 7
- AP3000 access point overview 9
- AP3000 features 10–12

## B

- beam installation 33
- box contents
  - AP3000 access point 21
  - Quick Reference Guide 21
- Brazil Anatel 41

## C

- cleaning guidelines
  - safety guidelines 18
- console port information 17
- conventions
  - notice icons 5
  - text 5

## D

- documentation
  - feedback 8
  - location 6

## E

- EU importer address 42

## F

- FCC radiation exposure 40
- feedback 8

## I

- industry Canada notice 43
- installation process
  - box contents 20
  - how-to-install the access point 20
  - purchase order information 20
  - safety guidelines 20
  - work flow 21
- interlude ceiling installation 26

## J

- junction box installation 32

## M

- MAC address location 18
- Media Access Control address (MAC address) 18
- Mexico compliance statement 42
- Micro USB Console Port 17

## N

- New in this guide 10
- notices 5

## P

- part number 19
- ports and connections 12
- Post installation 36
- Power
  - power connection 35
  - power information 35
- power profile
  - 802.3af 15
  - 802.3at 15
- product announcements 7
- professional install 39
- Purchase Information 19

## R

- Restriction of Hazardous Substances information 46

## S

- safety guidelines 38
- secure the access point
  - safety cable installation 36
- Silhouette Ceiling installation 23
- standard ceiling installation 22
- status light activity
  - dark 13
  - white 13
- support, *see* technical support
- supported accessories 15–17

## T

Taiwan regulatory 45  
technical support  
    contacting 7  
Thailand regulatory 44

## U

UK address 42

## W

wall installation with AH-ACC-BKT-AX-WL 22  
warnings 5