

## Installing the Extreme Networks E1120 ExtremeCloud™ Appliance

**Electrical Hazard:** Only qualified personnel should perform installation procedures.

**Caution:** An antistatic wrist strap is required to perform the following procedures to minimize ESD damage to the devices involved.

These installation instructions provide a general outline to quickly install and configure the E1120 ExtremeCloud™ Appliance.

For product support, including documentation, visit:

[www.extremenetworks.com/documentation](http://www.extremenetworks.com/documentation)

### Verifying the E1120 Box Contents

Unpack your appliance and confirm that the carton contains the following contents:

- The E1120 Cloud Appliance
- Two mounting brackets
- Six bracket mount screws
- Console cable
- This *Quick Reference*


**Note:** The E1120 appliance does not include an AC power cord. To purchase the correct power cord for your location, refer to [www.extremenetworks.com/product/powercords/](http://www.extremenetworks.com/product/powercords/).

### Mounting the Appliance


**Caution:** An anti-static wrist strap is required to perform the following procedures to minimize ESD damage to the devices involved.

- 1 If you are installing the appliance in a rack:
  - Align the holes (three on each side) of the E1120 with the thru holes of each bracket (one on each side) and tighten six screws (see [Figure 1](#)).
  - Insert the rack mounting screws into the thru holes in the front of the E1120 bracket (three on each side) and through the holes in the rack (see [Figure 2](#)).
  - Torque the screws to 7.0 in-lbs.

**Figure 1 Attaching Brackets to the E1120**

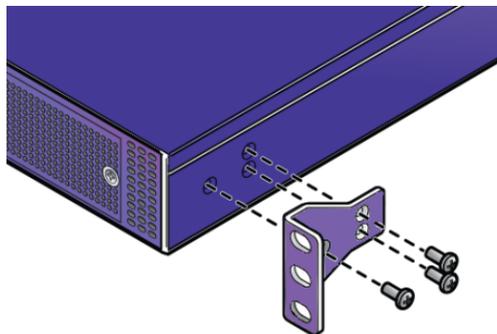

**Figure 2 Rack Mounting the E1120**

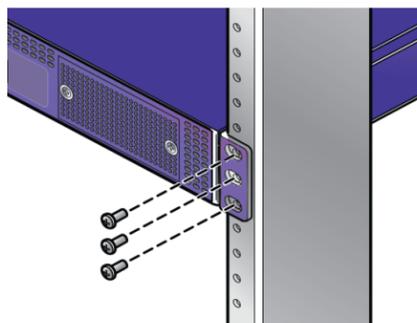


**Note:** The E1120 appliance does not include screws for mounting the unit to the rack. Please use screws appropriate to your rack on each side when securing the appliance to the rack.

- 2 If you are installing the appliance on a table, ensure at least 6 cm (2.4") of clearance on all sides of the appliance for proper ventilation.

### Connecting to Power


- 1 Connect the AC power cord (must be ordered separately) to the power supply ([Figure 3](#), item 4).
- 2 Plug the other end of the cable into a grounded electrical outlet or to a separate power source such as an uninterruptible power supply (UPS) or a power distribution unit (PDU).
- 3 Connect your laptop computer with a browser to the console port ([Figure 4](#), item 6).
- 4 Power on the appliance. The power switch is on the back panel as shown in [Figure 3](#), item 3.

**Figure 3 E1120 Back Panel**

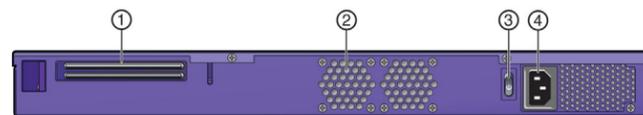

- |            |                   |
|------------|-------------------|
| 1 Not used | 3 Power Switch    |
| 2 CPU-Fan  | 4 AC Power Socket |

**Figure 4 E1120 Front Panel**

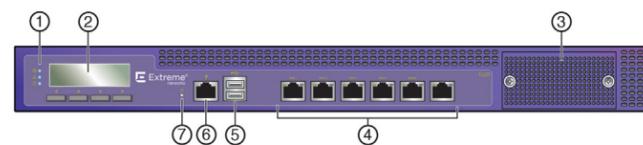


- |   |                           |
|---|---------------------------|
| 1 System Status LEDs (see <a href="#">Table 1</a> ) | 5 USB Ports (2 x USB 2.0) |
| 2 LCD System Panel with Keypad                      | 6 Console Port            |
| 3 Not used  | 7 Reset Switch            |
| 4 Ethernet Ports (see <a href="#">Figure 5</a> )    |                           |

**Note:** Although the appliance has two USB ports ([Figure 4](#), item 5), only one port can be in use at any one time.

**Note:** The LCD System Panel ([Figure 4](#), item 2) is only used to display short text strings (e.g., "Extreme E1120" and "Upgrade").

**Figure 5 E1120 Ethernet Ports**

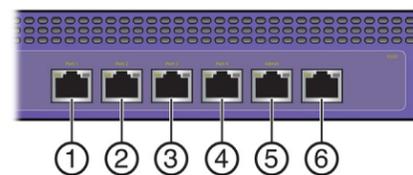

- |                          |                              |
|--------------------------|------------------------------|
| 1 Data Port 1: 1GbE RJ45 | 4 Data Port 4: 1GbE RJ45     |
| 2 Data Port 2: 1GbE RJ45 | 5 Mgmt Port: 1GbE RJ45 Admin |
| 3 Data Port 3: 1GbE RJ45 | 6 Not used, plugged          |

### System Status LED Indicator Codes

Power/Status/HDD LEDs ([Figure 4](#), item 1) on the front panel of the E1120 provide critical information including network and hard drive activity, and whether power is present. Refer to [Table 1](#) for descriptions of the LEDs functions.

**Table 1 Power/Status/HDD LEDs**

LED	Function
	Power: When this LED is on, it indicates power is supplied to the E1120 power supply unit. This LED should be illuminated when the system is operating.
	Status: When lit Green, it indicates operational state is normal. When lit Amber, it indicates a system malfunction.
	Hardisk (HDD): When this LED flashes, it indicates hard drive activity. Otherwise, the LED remains off.

### Power Supplies

**Table 2 E1120 Power Supply Specifications**

E1120 Model	Power Supply
<b>Fixed power supply with front-to-back airflow</b>	
FSP150-50LE	100-240Vac, 50-60Hz, 4-2A Max. Output Power: 150W

### E1120 Specifications

#### Temperature and Humidity

Operating: 5°C to 40°C (32°F to 104°F)  
Storage: -40°C to 70°C (-40°F to 158°F)  
Operating relative humidity: 0% to 95% (non-condensing)

### E1120 Dimensions

- Height: 44 mm (1.732")
- Width: 431 mm (16.969")
- Depth: 305 mm (12.008")

### Ethernet Port LED Indicator Codes

Each of the five Ethernet ports ([Figure 5](#)) provide two LED indicators—the LED to the left of the port identifies the speed of the network, and the LED to the right of the port displays network link activity (see [Table 3](#) for more information).

**Table 3 Management Port LEDs**

LED	Function
Network Speed	Off = 10Mbps
	Green = 100Mbps
	Amber = 1000Mbps
Activity/Link	Off = No Link
	Amber = Active link
	Blinking Amber = Network activity

### Initial Network Connection and Configuration

#### Configuring the Management Interface via Console Port

**Note:** The E1120 must be upgraded to the latest ExtremeCloud™ Appliance firmware before installing the appliance on the network.

- 1 Connect the laptop serial port to the appliance console port through the provided console cable. If the laptop does not support RS232 interface then obtain a USB to RS232 converter cable which then connects to the RJ45-DB9F cable.
- 2 Using PuTTY, TeraTerm, or other terminal emulator, connect to the serial port connection. Be sure that your serial connection is set properly:
  - 115200 baud

- 8 data bits
  - 1 stop bit
  - Parity none
  - Flow control none
- 3 Using the console session, perform the following:
    - At the password prompt, enter user: **admin**
    - For the initial password, enter: **abc123**
    - Press **ENTER**.
  - 4 Read the configuration script paragraph carefully. The configuration script will walk you through configuring the following:
    - Admin Password
    - Host Attributes Settings
    - Time Settings
    - SNMP Settings
    - Data Plane Settings
  - 5 At the end of each session, if you enter **Yes**, then it will move to the next session. If you answer **No**, the session configuration is repeated.
  - 6 Press **ENTER**.
  - 7 The Appliance Post Installation Configuration Menu pops up right after the last session is applied. Enter **6** to apply settings and exit or other number for repeating the setup.
  - 8 Connect to a port on which management access was enabled during the CLI Wizard Setup.
  - 9 Launch your web browser and in the browser address bar, type: **https://Your\_Mgmt\_Ipaddress:5825**. The ExtremeCloud™ Appliance's logon screen is displayed.
  - 10 On the logon screen, enter **Admin** and Password that was created when setting up the installation wizard.

**Note:** An installation wizard is available to help configure the E1120 for new deployments. Refer to the *ExtremeCloud Appliance User Guide* for more information.

### Configuring the Management Interface via the Management Port

You can retain the default IP address of the appliance's management interface if you do not intend to connect the appliance to your enterprise network. If you do intend to connect the appliance to your network follow these steps:

**Note:** The E1120 must be upgraded to the latest ExtremeCloud™ Appliance firmware before installing the appliance on the network.

- 1 Connect a laptop to the management port of the appliance.
- 2 Configure the Ethernet port of the laptop with a statically assigned unused IP address in the 192.168.10.0/24 subnet.
- 3 Launch your Web browser and in the browser address bar, type **https://192.168.10.1:5825** (192.168.10.1 is the default IP address on the appliance's management port). The ExtremeCloud™ Appliance's logon screen is displayed.
- 4 On the ExtremeCloud™ Appliance's logon screen, enter the following:
  - User name: enter **admin**
  - Password: enter **abc123**
  - Click **Login**.
- 5 Complete the installation to configure the E1120 for new deployments.
- 6 Disconnect your laptop from the appliance's management port.
- 7 Connect the appliance's management port to the enterprise Ethernet LAN.
- 8 Log on to Extreme Networks.

**Note:** The system is now visible to the enterprise network. Refer to the *ExtremeCloud Appliance User Guide* for more information.

## Regulatory and Compliance Information

### Federal Communications Commission (FCC) Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



**Note:** This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment uses, generates, and can radiate radio frequency energy and if not installed in accordance with the operator's manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause interference in which case the user will be required to correct the interference at his own expense.



**Warning:** Changes or modifications made to this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Industry Canada Notice

This digital apparatus does not exceed the class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

### Class A ITE Notice

**WARNING:** This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### Klasse A ITE Anmerkung

**WARNHINWEIS:** Dieses Produkt zählt zur Klasse A (Industriebereich). In Wohnbereichen kann es hierdurch zu Funkstörungen kommen, daher sollten angemessene Vorkehrungen zum Schutz getroffen werden.

### Product Safety

This product complies with the following: UL 60950-1, FDA 21 CFR 1040.10 and 1040.11, CAN/CSA-C22.2 No. 60950-1, EN 60950-1, EN 60825-1, EN 60825-2, IEC 60950-1, 2006/95/EC.

### Produktsicherheit

Dieses Produkt entspricht den folgenden Richtlinien: UL 60950-1, FDA 21 CFR 1040.10 and 1040.11, CAN/CSA-C22.2 No. 60950-1, EN 60950-1, EN 60825-1, EN 60825-2, IEC 60950-1, 2006/95/EC.

### Korea EMC Statement

이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

### Electromagnetic Compatibility (EMC)

This product complies with the following: FCC 47 CFR Part 15 (Class A), ICES-003 (Class A), EN 55022 (Class A), EN 55024, EN 61000-3-2, EN 61000-3-3, AS/NZS CISPR 22 (Class A), VCCI V-3, 2004/108/EC (EMC Directive)

### Elektro-magnetische Kompatibilität (EMC)

Dieses Produkt entspricht den folgenden Richtlinien: FCC 47 CFR Part 15 (Class A), ICES-003 (Class A), EN 55022 (Class A), EN 55024, EN 61000-3-2, EN 61000-3-3, AS/NZS CISPR 22 (Class A), VCCI V-3, 2004/108/EC (EMC Directive)

### VCCI Notice

This is a class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble

occurs, the user may be required to take corrective actions.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

### BSMI EMC Statement — Taiwan

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

警告使用者：  
此為甲類資訊技術設備，於居住環境中使用時，可能會造成射頻擾動，在此種情況下，使用者會被要求採取某些適當的對策。

警告：此為 A 級產品，在生活環境中，該產品可能會造成無線電干擾。在這種情況下，可能需要用戶對干擾採取切實可行的措施。

### Battery Warning — Taiwan

### 警告

如果更換不正確之電池型式會有爆炸的風險

請依製造商說明書處理用過之電池

### Battery Notice



**Warning:** This product contains a battery used to maintain product information. If the battery should need replacement it must be replaced by Service Personnel. Please contact Technical Support for assistance.

Risk of explosion if battery is replaced by an incorrect type. Dispose of expended battery in accordance with local disposal regulations.

**Avertissements:** Ce produit renferme une pile servant à conserver les renseignements sur le produit. Le cas échéant, faites remplacer la pile par le personnel du service de réparation. Veuillez communiquer avec l'assistance technique pour du soutien.

Il y a risque d'explosion si la pile est remplacée par un type de pile incorrect. Éliminez les piles usées en conformité aux règlements locaux d'élimination des piles.

### 产品说明书附件

### SUPPLEMENT TO PRODUCT INSTRUCTIONS

部件名称 (Parts)	有毒有害物质或元素 (Hazardous Substance)					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr <sup>6+</sup> )	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
金属部件 (Metal Parts)	×	○	○	○	○	○
电路模块 (Circuit Modules)	×	○	○	○	○	○
电缆及电缆组件 (Cables & Cable Assemblies)	○	○	○	○	○	○
电源适配器/电源供应器 (Power Adapter/Power Supply)	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。  
Indicates that the concentration of the hazardous substance in all homogeneous materials in the parts is below the relevant threshold of the SJ/T 11363-2006 standard.

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。  
Indicates that the concentration of the hazardous substance of at least one of all homogeneous materials in the parts is above the relevant threshold of the SJ/T 11363-2006 standard.

对销售之目的所售产品，本表显示，极进供应链的电子产品信息可能包含这些物质。注意：在所售产品中可能会也可能不会含有所有列出的部件。  
This table shows where these substances may be found in the supply chain of Extreme electronic information products, as of the date of sale of the enclosed product. Note that some of the component types listed above may or may not be a part of the enclosed product.

除非另外特别的标注，此标志为针对所涉及产品的环保使用期标志。某些零部件会有一个不同的环保使用期（例如，电池单元模块）贴在其产品上。  
此环保使用期限只适用于产品是在产品手册中所规定的条件下工作。  
The Environmentally Friendly Use Period (EFUP) for all enclosed products and their parts are per the symbol shown here, unless otherwise marked. Certain parts may have a different EFUP (for example, battery modules) and so are marked to reflect such. The Environmentally Friendly Use Period is valid only when the product is operated under the conditions defined in the product manual.



### Hazardous Substances

This product complies with the requirements of Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

### European Waste Electrical and Electronic Equipment (WEEE) Notice



In accordance with Directive 2012/19/EU of the European Parliament on waste electrical and electronic equipment (WEEE):

- 1 The symbol above indicates that separate collection of electrical and electronic equipment is required.
- 2 When this product has reached the end of its serviceable life, it cannot be disposed of as unsorted municipal waste. It must be collected and treated separately.
- 3 It has been determined by the European Parliament that there are potential negative effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment.
- 4 It is the users' responsibility to utilize the available collection system to ensure WEEE is properly treated.

For information about the available collection system, please contact Extreme Environmental Compliance at [Green@extremenetworks.com](mailto:Green@extremenetworks.com).

### Safety

Compliant with IEC 60950-1:2005 (Second Edition); Am1:2009 + Am2:2013, EN 60950-1:2006 + A1:2010 + A11:2009 + A12:2011 + A2:2013, UL 62950-1, 2nd Ed. 2011, CSA C22.2 No. 60950-1-07, 2nd Ed. 2011

# ExtremeCloud™ Appliance E1120

## Quick Reference

P/N 30137 E1120

## Notice

Copyright © 2018 Extreme Networks, Inc. All Rights Reserved.

## Legal Notices

Extreme Networks, Inc., on behalf of or through its wholly-owned subsidiary, Enterasys Networks, Inc., reserves the right to make changes in specifications and other information contained in this document and its website without prior notice. The reader should in all cases consult representatives of Extreme Networks to determine whether any such changes have been made.

The hardware, firmware, software or any specifications described or referred to in this document are subject to change without notice.

## Trademarks

Extreme Networks and the Extreme Networks logo are trademarks or registered trademarks of Extreme Networks, Inc. in the United States and/or other countries.

All other names (including any product names) mentioned in this document are the property of their respective owners and may be trademarks or registered trademarks of their respective companies/owners.

For additional information on Extreme Networks trademarks, please see: [www.extremenetworks.com/company/legal/trademarks/](http://www.extremenetworks.com/company/legal/trademarks/)

## Warranty

Warranty information for E1120 Appliance is located online at: [www.extremenetworks.com/go/warranty](http://www.extremenetworks.com/go/warranty)

## Support & Documentation

For product support, including documentation, visit: [www.extremenetworks.com/support/](http://www.extremenetworks.com/support/)

P/N 9035562-02