



ExtremeSwitching™

# Using CLI and EDM on Ethernet Routing Switch 3600 Series

Release  
6.2  
9035404  
May 2018

© 2018, Extreme Networks, Inc.  
All Rights Reserved.

#### Notice

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Extreme Networks, Inc. assumes no liability for any errors. Extreme Networks, Inc. reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

#### Documentation disclaimer

"Documentation" means information published in varying mediums which may include product information, operating instructions and performance specifications that are generally made available to users of products. Documentation does not include marketing materials. Extreme Networks shall not be responsible for any modifications, additions, or deletions to the original published version of Documentation unless such modifications, additions, or deletions were performed by or on the express behalf of Extreme Networks. End User agrees to indemnify and hold harmless Extreme Networks, Extreme Networks' agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

#### Link disclaimer

Extreme Networks is not responsible for the contents or reliability of any linked websites referenced within this site or Documentation provided by Extreme Networks. Extreme Networks is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Extreme Networks does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

#### Warranty

Extreme Networks provides a limited warranty on Extreme Networks hardware and software. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Extreme Networks' standard warranty language, as well as information regarding support for this product while under warranty is available to Extreme Networks customers and other parties through the Extreme Networks Support website: <http://www.extremenetworks.com/support> under the link "Policies" or such successor site as designated by Extreme Networks. Please note that if You acquired the product(s) from an authorized Extreme Networks Channel Partner outside of the United States and Canada, the warranty is provided to You by said Extreme Networks Channel Partner and not by Extreme Networks.

"Hosted Service" means an Extreme Networks hosted service subscription that You acquire from either Extreme Networks or an authorized Extreme Networks Channel Partner (as applicable) and which is described further in Hosted SAS or other service description documentation regarding the applicable hosted service. If You purchase a Hosted Service subscription, the foregoing limited warranty may not apply but You may be entitled to support services in connection with the Hosted Service as described further in your service description documents for the applicable Hosted Service. Contact Extreme Networks or Extreme Networks Channel Partner (as applicable) for more information.

#### Hosted Service

THE FOLLOWING APPLIES ONLY IF YOU PURCHASE AN EXTREME NETWORKS HOSTED SERVICE SUBSCRIPTION FROM EXTREME NETWORKS OR AN EXTREME NETWORKS CHANNEL PARTNER (AS APPLICABLE), THE TERMS OF USE FOR HOSTED SERVICES ARE AVAILABLE ON THE EXTREME NETWORKS WEBSITE, <https://extremeportal.force.com> OR SUCH SUCCESSOR SITE AS DESIGNATED BY EXTREME NETWORKS, AND ARE APPLICABLE TO ANYONE WHO ACCESSES OR USES THE HOSTED SERVICE. BY ACCESSING OR USING THE HOSTED SERVICE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE DOING SO (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THE TERMS OF USE. IF YOU ARE ACCEPTING THE TERMS OF USE ON BEHALF A COMPANY OR OTHER LEGAL ENTITY, YOU

REPRESENT THAT YOU HAVE THE AUTHORITY TO BIND SUCH ENTITY TO THESE TERMS OF USE. IF YOU DO NOT HAVE SUCH AUTHORITY, OR IF YOU DO NOT WISH TO ACCEPT THESE TERMS OF USE, YOU MUST NOT ACCESS OR USE THE HOSTED SERVICE OR AUTHORIZE ANYONE TO ACCESS OR USE THE HOSTED SERVICE.

#### Licenses

THE SOFTWARE LICENSE TERMS AVAILABLE ON THE EXTREME NETWORKS WEBSITE, <https://extremeportal.force.com> OR SUCH SUCCESSOR SITE AS DESIGNATED BY EXTREME NETWORKS, ARE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS EXTREME NETWORKS SOFTWARE, PURCHASED FROM EXTREME NETWORKS, INC., ANY EXTREME NETWORKS AFFILIATE, OR AN EXTREME NETWORKS CHANNEL PARTNER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH EXTREME NETWORKS OR AN EXTREME NETWORKS CHANNEL PARTNER. UNLESS OTHERWISE AGREED TO BY EXTREME NETWORKS IN WRITING, EXTREME NETWORKS DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN EXTREME NETWORKS, AN EXTREME NETWORKS AFFILIATE OR AN EXTREME NETWORKS CHANNEL PARTNER; EXTREME NETWORKS RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND EXTREME NETWORKS, INC. OR THE APPLICABLE EXTREME NETWORKS AFFILIATE ("EXTREME NETWORKS").

Extreme Networks grants You a license within the scope of the license types described below. Where the order documentation does not expressly identify a license type, the applicable license will be a Designated System License as set forth below in the Designated System(s) License (DS) section as applicable. The applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the documentation or other materials available to You. "Software" means computer programs in object code, provided by Extreme Networks or an Extreme Networks Channel Partner, whether as stand-alone products, pre-installed on hardware products, and any upgrades, updates, patches, bug fixes, or modified versions thereto. "Designated Processor" means a single stand-alone computing device. "Server" means a set of Designated Processors that hosts (physically or virtually) a software application to be accessed by multiple users. "Instance" means a single copy of the Software executing at a particular time: (i) on one physical machine; or (ii) on one deployed software virtual machine ("VM") or similar deployment.

#### License type(s)

Designated System(s) License (DS). End User may install and use each copy or an Instance of the Software only: 1) on a number of Designated Processors up to the number indicated in the order; or 2) up to the number of Instances of the Software as indicated in the order, Documentation, or as authorized by Extreme Networks in writing. Extreme Networks may require the Designated Processor(s) to be identified in the order by type, serial number, feature key, Instance, location or other specific designation, or to be provided by End User to Extreme Networks through electronic means established by Extreme Networks specifically for this purpose.

#### Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation, Software, Hosted Service, or hardware provided by Extreme Networks. All content on this site, the documentation, Hosted Service, and the product provided by Extreme Networks including the selection, arrangement and design of the content is owned either by Extreme Networks or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part,

including any code and software unless expressly authorized by Extreme Networks. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Extreme Networks can be a criminal, as well as a civil offense under the applicable law.

### Virtualization

The following applies if the product is deployed on a virtual machine. Each product has its own ordering code and license types. Note, unless otherwise stated, that each Instance of a product must be separately licensed and ordered. For example, if the end user customer or Extreme Networks Channel Partner would like to install two Instances of the same type of products, then two products of that type must be ordered.

### Third Party Components

"Third Party Components" mean certain software programs or portions thereof included in the Software or Hosted Service may contain software (including open source software) distributed under third party agreements ("Third Party Components"), which contain terms regarding the rights to use certain portions of the Software ("Third Party Terms"). As required, information regarding distributed Linux OS source code (for those products that have distributed Linux OS source code) and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply is available in the products, Documentation or on Extreme Networks' website at: <http://www.extremenetworks.com/support/policies/software-licensing> or such successor site as designated by Extreme Networks. The open source software license terms provided as Third Party Terms are consistent with the license rights granted in these Software License Terms, and may contain additional rights benefiting You, such as modification and distribution of the open source software. The Third Party Terms shall take precedence over these Software License Terms, solely with respect to the applicable Third Party Components to the extent that these Software License Terms impose greater restrictions on You than the applicable Third Party Terms.

The following applies only if the H.264 (AVC) codec is distributed with the product. THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM).

### Service Provider

THE FOLLOWING APPLIES TO EXTREME NETWORKS CHANNEL PARTNER'S HOSTING OF EXTREME NETWORKS PRODUCTS OR SERVICES. THE PRODUCT OR HOSTED SERVICE MAY USE THIRD PARTY COMPONENTS SUBJECT TO THIRD PARTY TERMS AND REQUIRE A SERVICE PROVIDER TO BE INDEPENDENTLY LICENSED DIRECTLY FROM THE THIRD PARTY SUPPLIER. AN EXTREME NETWORKS CHANNEL PARTNER'S HOSTING OF EXTREME NETWORKS PRODUCTS MUST BE AUTHORIZED IN WRITING BY EXTREME NETWORKS AND IF THOSE HOSTED PRODUCTS USE OR EMBED CERTAIN THIRD PARTY SOFTWARE, INCLUDING BUT NOT LIMITED TO MICROSOFT SOFTWARE OR CODECS, THE EXTREME NETWORKS CHANNEL PARTNER IS REQUIRED TO INDEPENDENTLY OBTAIN ANY APPLICABLE LICENSE AGREEMENTS, AT THE EXTREME NETWORKS CHANNEL PARTNER'S EXPENSE, DIRECTLY FROM THE APPLICABLE THIRD PARTY SUPPLIER.

WITH RESPECT TO CODECS, IF THE EXTREME NETWORKS CHANNEL PARTNER IS HOSTING ANY PRODUCTS THAT USE OR EMBED THE G.729 CODEC, H.264 CODEC, OR H.265 CODEC, THE EXTREME NETWORKS CHANNEL PARTNER ACKNOWLEDGES AND AGREES THE EXTREME NETWORKS CHANNEL PARTNER IS RESPONSIBLE FOR ANY AND ALL RELATED FEES AND/OR ROYALTIES. THE G.729 CODEC IS LICENSED BY SIPRO LAB TELECOM INC. SEE [WWW.SIPRO.COM/CONTACT.HTML](http://WWW.SIPRO.COM/CONTACT.HTML). THE H.264 (AVC) CODEC IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR

THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO: (I) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (II) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION FOR H.264 (AVC) AND H.265 (HEVC) CODECS MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM).

### Compliance with Laws

You acknowledge and agree that it is Your responsibility for complying with any applicable laws and regulations, including, but not limited to laws and regulations related to call recording, data privacy, intellectual property, trade secret, fraud, and music performance rights, in the country or territory where the Extreme Networks product is used.

### Preventing Toll Fraud

"Toll Fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of Toll Fraud associated with your system and that, if Toll Fraud occurs, it can result in substantial additional charges for your telecommunications services.

### Security Vulnerabilities

Information about Extreme Networks' security support policies can be found in the Global Technical Assistance Center Knowledgebase at <https://gtacknowledge.extremenetworks.com/>.

### Downloading Documentation

For the most current versions of Documentation, see the Extreme Networks Support website: <http://documentation.extremenetworks.com>, or such successor site as designated by Extreme Networks.

### Contact Extreme Networks Support

See the Extreme Networks Support website: <http://www.extremenetworks.com/support> for product or Hosted Service notices and articles, or to report a problem with your Extreme Networks product or Hosted Service. For a list of support telephone numbers and contact addresses, go to the Extreme Networks Support website: <http://www.extremenetworks.com/support/contact/> (or such successor site as designated by Extreme Networks), scroll to the bottom of the page, and select Contact Extreme Networks Support.

### Trademarks

The trademarks, logos and service marks ("Marks") displayed in this site, the Documentation, Hosted Service(s), and product(s) provided by Extreme Networks are the registered or unregistered Marks of Extreme Networks, Inc., its affiliates, its licensors, its suppliers, or other third parties. Users are not permitted to use such Marks without prior written consent from Extreme Networks or such third party which may own the Mark. Nothing contained in this site, the Documentation, Hosted Service(s) and product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Extreme Networks or the applicable third party.

Extreme Networks is a registered trademark of Extreme Networks, Inc.

All non-Extreme Networks trademarks are the property of their respective owners. Linux<sup>®</sup> is the registered trademark of Linus Torvalds in the U.S. and other countries.

For additional information on Extreme Networks trademarks, please see: <http://www.extremenetworks.com/company/legal/>

# Contents

<b>Chapter 1: Preface</b> .....	6
Purpose.....	6
Training.....	6
Providing Feedback to Us.....	6
Getting Help.....	6
Extreme Networks Documentation.....	7
Subscribing to Service Notifications.....	7
<b>Chapter 2: New in this document</b> .....	9
<b>Chapter 3: User interface fundamentals</b> .....	10
CLI concepts.....	10
CLI command modes.....	10
<b>CLI access procedures</b> .....	12
CLI help.....	13
CLI pipe filter.....	14
Enterprise Device Manager concepts.....	15
Tested browsers.....	16
Memory requirements.....	16
Online help.....	16
Interface components.....	16
Enterprise Device Manager procedures.....	29
Enabling the Web server using CLI.....	30
Disabling the Web server using CLI.....	30
Displaying the Web server status using CLI.....	30
Starting EDM.....	31
Using shortcut menus.....	31
Navigating around EDM.....	32
Undocking tabs.....	32
Docking tabs.....	33
Editing a dialog box.....	33
Inserting an entry in a dialog box.....	33
Deleting an entry from a dialog box.....	34
Editing an object using the shortcut menu.....	34
Editing file system elements.....	34
Configuring multiple interface ports using EDM - Example 1.....	35
Configuring multiple ports using EDM - Example 2.....	35
Graphing statistics.....	36
Getting EDM online help files for embedded EDM.....	37
<b>Chapter 4: Configuration files fundamentals</b> .....	39
CLI configuration files.....	39

Viewing current configuration using CLI.....	39
Saving current configuration to TFTP server using CLI.....	39
Saving current configuration to SFTP server using CLI.....	40
Saving current configuration to USB device using CLI.....	40
Saving current configuration to flash memory using CLI.....	41
Restoring system configuration from TFTP using CLI.....	41
Restoring system configuration from SFTP using CLI.....	42
Restoring system configuration from USB device using CLI.....	42
Downloading a configuration file automatically using CLI.....	42
Viewing USB files.....	43
Displaying USB file information using CLI.....	44
Downloading an ASCII configuration file from a TFTP server or USB device.....	44
CLI pipe filter functions.....	45
Enterprise Device Manager configuration files.....	49
ASCII configuration file management using EDM.....	50
Binary configuration file management using EDM.....	54
Saving current configuration to flash memory manually using EDM.....	57
Displaying USB file information using EDM.....	57

# Chapter 1: Preface

---

## Purpose

This document provides information about the Command Line Interface (CLI) and Enterprise Device Manager (EDM) for the Extreme Networks Ethernet Routing Switch 3600 Series.

---

## Training

Ongoing product training is available. For more information or to register, you can access the Web site at [www.extremenetworks.com/education/](http://www.extremenetworks.com/education/).

---

## Providing Feedback to Us

We are always striving to improve our documentation and help you work better, so we want to hear from you! We welcome all feedback but especially want to know about:

- Content errors or confusing or conflicting information.
- Ideas for improvements to our documentation so you can find the information you need faster.
- Broken links or usability issues.

If you would like to provide feedback to the Extreme Networks Information Development team about this document, please contact us using our short [online feedback form](#). You can also email us directly at [internalinfodev@extremenetworks.com](mailto:internalinfodev@extremenetworks.com)

---

## Getting Help

If you require assistance, contact Extreme Networks using one of the following methods:

- [GTAC \(Global Technical Assistance Center\) for Immediate Support](#)
  - Phone: 1-800-998-2408 (toll-free in U.S. and Canada) or +1 408-579-2826. For the support phone number in your country, visit: [www.extremenetworks.com/support/contact](http://www.extremenetworks.com/support/contact)

- Email: [support@extremenetworks.com](mailto:support@extremenetworks.com). To expedite your message, enter the product name or model number in the subject line.
- [GTAC Knowledge](#) – Get on-demand and tested resolutions from the GTAC Knowledgebase, or create a help case if you need more guidance.
- [The Hub](#) – A forum for Extreme customers to connect with one another, get questions answered, share ideas and feedback, and get problems solved. This community is monitored by Extreme Networks employees, but is not intended to replace specific guidance from GTAC.
- [Support Portal](#) – Manage cases, downloads, service contracts, product licensing, and training and certifications.

Before contacting Extreme Networks for technical support, have the following information ready:

- Your Extreme Networks service contract number and/or serial numbers for all involved Extreme Networks products
- A description of the failure
- A description of any action(s) already taken to resolve the problem
- A description of your network environment (such as layout, cable type, other relevant environmental information)
- Network load at the time of trouble (if known)
- The device history (for example, if you have returned the device before, or if this is a recurring problem)
- Any related RMA (Return Material Authorization) numbers

---

## Extreme Networks Documentation

To find Extreme Networks product guides, visit our documentation pages at:

Current Product Documentation

[www.extremenetworks.com/documentation/](http://www.extremenetworks.com/documentation/)

Archived Documentation (for previous versions and legacy products)

[www.extremenetworks.com/support/documentation-archives/](http://www.extremenetworks.com/support/documentation-archives/)

Release Notes

[www.extremenetworks.com/support/release-notes](http://www.extremenetworks.com/support/release-notes)

### Open Source Declarations

Some software files have been licensed under certain open source licenses. More information is available at: [www.extremenetworks.com/support/policies/software-licensing](http://www.extremenetworks.com/support/policies/software-licensing).

---

## Subscribing to Service Notifications

Subscribe to receive an email notification for product and software release announcements, Vulnerability Notices, and Service Notifications.

## About this task

You can modify your product selections at any time.

## Procedure

1. In an Internet browser, go to <http://www.extremenetworks.com/support/service-notification-form/>.
2. Type your first and last name.
3. Type the name of your company.
4. Type your email address.
5. Type your job title.
6. Select the industry in which your company operates.
7. Confirm your geographic information is correct.
8. Select the products for which you would like to receive notifications.
9. Click **Submit**.



## Chapter 2: New in this document

There are no new feature changes in this document.

# Chapter 3: User interface fundamentals

This chapter provides basic information to help you understand the interfaces you can use to configure and manage a switch. Available features depend on switch model and configuration.

---

## CLI concepts

Command Line Interface (CLI) is a text-based interface that you can use for switch configuration and management. CLI follows the industry standard used for device management across Extreme Networks products.

The command modes within CLI are listed in order of increasing privileges and each mode is based on the user logon permission level. User logon permission is determined by a logon password as supplied by your system administrator.

You can access CLI directly through a console connection, remotely through a dial-up modem connection, or in-band through a Telnet session.

You can use CLI interactively or use the `configure network` command to load and execute CLI scripts, to manually load the script in the console menu, or to automatically load the script at startup.

---

## CLI command modes

Command Line Interface (CLI) provides the following command modes:

- User EXEC
- Privileged EXEC
- Global Configuration
- Interface Configuration
- RIP Configuration
- Application Configuration

Mode access is determined by access permission levels and password protection.

If no password is set, you can enter CLI in User EXEC mode and use the `enable` command to move to the next level (Privileged EXEC mode). However, if you have read-only access, you cannot

progress beyond User EXEC mode, the default mode. If you have read-write access you can progress from the default mode through all of the available modes.

With sufficient permission, you can use the rules in the following table to move between the command modes.

**Table 1: CLI command modes**

Command mode and sample prompt	Entrance commands	Exit commands
User Executive Switch>	No entrance command, default mode	exit or logout
Privileged Executive Switch#	enable	exit or logout
Global Configuration Switch (config)#	From Privileged Executive mode, enter configure terminal	To return to Privileged Executive mode, enter end or exit To exit CLI completely, enter logout
Interface Configuration Switch (config-if)#	From Global Configuration mode: To configure a port, enter interface ethernet <port number> To configure a VLAN, enter interface vlan <vlan number> To configure a loopback, enter interface loopback <loopback number>	To return to Global Configuration mode, enter exit To return to Privileged Executive mode, enter end To exit CLI completely, enter logout
Router Configuration Switch (config-router)#	From Global Configuration mode: To configure RIP, enter router rip	To return to Global Configuration mode, enter exit To return to Privileged Executive mode, enter end

*Table continues...*

Command mode and sample prompt	Entrance commands	Exit commands
		To exit CLI completely, enter logout
Application Configuration Switch (config-app)#	From Global, or Interface Configuration mode, enter application	To return to Global Configuration mode, enter exit To return to Privileged Executive mode, enter end To exit CLI completely, enter logout

## CLI access procedures

### Before you begin

- Connect to the switch with a console cable, connected directly to the console port, or use Telnet.
- To connect to the switch remotely, through Telnet, ensure that you enable remote access, and that the switch IP address is valid.
- Use a terminal, or computer with a terminal emulator, as the CLI command station.
- If you use a console cable and console port, ensure that the terminal emulation program conforms to settings listed in the following table.

Property	Value
Baud Rate	9600 bps
Data Bits	8
Stop Bits	1
Parity	None
Flow Control	None
Terminal Protocol	VT100 and VT100/ANSI

## Opening an CLI session

### Procedure

1. Connect to the switch.
2. Enter the password, if applicable.
3. At the CLI Banner Screen, enter CTRL+Y.
4. To access CLI, from the main menu, press **c** or scroll to Command Line Interface.

5. Press **Enter**.

---

## CLI help

CLI help is available at all levels.

### CLI list

From the User EXEC mode, the CLI list command `show cli list` displays a detailed view of the CLI commands. Additionally, the verbose command, `show cli list verbose` lists the CLI syntax for each command.

### Command list

To obtain a list of all commands available from a prompt, enter a question mark (?).

### Command options

To obtain a list of all options for a command, at the prompt enter a portion of a command followed by a space and a question mark (?).

### Command names

To obtain a correct command name, at the prompt enter a portion of the command name, and then press the **Tab** key. The system displays the first unambiguous match for your selection. For example, when you enter `down` + **Tab**, the system displays `download`.

### Command modes

To obtain a list of CLI command modes available, enter `help modes`.

### Commands organized by mode

To obtain a list of CLI commands, organized by command mode, enter `help commands`. A short explanation of each command is included.

### Keystroke shortcuts

To make using CLI easier, use the keystroke shortcuts in the following table.

Key combination	Function
<b>Ctrl+A</b>	Start of line
<b>Ctrl+B</b>	Back 1 character
<b>Ctrl+C</b>	Abort command
<b>Ctrl+D</b>	Delete the character indicated by the cursor
<b>Ctrl+E</b>	End of line
<b>Ctrl+F</b>	Forward 1 character
<b>Ctrl+H</b>	Delete character left of cursor ( <b>Backspace</b> key)
<b>Tab</b>	Command or parameter completion

*Table continues...*

Key combination	Function
<b>Ctrl+K</b> and <b>Ctrl+R</b>	Redisplay line
<b>Ctrl+N</b> or <b>Down arrow</b>	Next history command
<b>Ctrl+P</b> or <b>Up arrow</b>	Previous history command
<b>Ctrl+T</b>	Transpose characters
<b>Ctrl+U</b>	Delete entire line
<b>Ctrl+W</b>	Delete word to left of cursor
<b>Ctrl+X</b>	Delete all characters to left of cursor
<b>Ctrl+z</b>	Exit Global Configuration mode to Privileged EXEC mode
<b>?</b>	Context sensitive help
<b>Esc+C</b> and <b>Exc+U</b>	Capitalize character at cursor
<b>Esc+l</b>	Change character at cursor to lower case
<b>Esc+B</b>	Move back 1 word
<b>Esc+D</b>	Delete 1 word to the right
<b>Esc+F</b>	Move 1 word forward

## CLI pipe filter

Pipe (|) is used to display only a subset of information in the command output. To filter the command output, type the existing CLI command followed by the pipe (|) symbol and then, the pipe filter command. The output contains only the lines specified in the pipe filter.

The following pipe filter functions are supported:

Filter function	Description
<b>count</b>	Counts the number of lines in the output of a command.
<b>match</b>	Displays only the output lines which match the given pattern.
<b>except</b>	Displays only the output lines which do not match the given pattern.
<b>find</b>	Displays the output of a command starting from the first line which matches the given pattern.
<b>no-more</b>	Temporarily disables pagination for the output of an CLI command. When the lines of output exceed the terminal length, the entire output of the command is displayed and message does not appear to continue or quit.
<b>head</b>	Limits the output of a command to the first few lines. If limit is not specified, the first 10 lines appear.
<b>tail</b>	Limits the output of a command to the last few lines. If a number is not specified the last 10 lines are shown.

To see if a command supports the CLI pipe filter functionality, enter the command followed by a question mark (?).

For more information about the functions, see [CLI pipe filter functions](#) on page 45.

## Enterprise Device Manager concepts

To manage the switch from a centralized location, using Configuration and Orchestration Manager PLUS (COM PLUS) 1.0 and higher, Extreme Networks offers optional, product-specific EDM plug-ins for COM that include other features such as centralized syslog, trap viewer, troubleshooting and diagnostic tools. For more information, or to purchase plug-ins, go to <https://extremeportal.force.com>.

The following table compares EDM functions in the embedded version to COM plug-in version.

**Table 2: EDM functions: embedded version compared to COM plug-in version**

EDM functions	Embedded version	Plug-in version
100% device configuration: device view, device-specific configuration	Yes, with COM PLUS 1.0.	Yes, with COM PLUS 1.0.
Stackable Device Web User Interface features	Yes	No
Centralized off-box multi-user element management: <ul style="list-style-type: none"> <li>• user and device credential manager</li> <li>• user preference</li> <li>• SSO-based user access control</li> <li>• user-based Device Access Control (read only and read-write)</li> <li>• authentication through third party (RADIUS, Microsoft AD, Sun AM)</li> </ul>	No	Yes
Centralized EDM plug-in management (downloadable install and uninstall, upgrade, patch, and inventory view)	No	Yes
User activity log and audit trail	No	Yes
Device performance monitoring and polling	Limited	High performance and low latency
Device-specific single device wizards and template	No	Yes
Centralized syslog and trap viewer	No	Yes

*Table continues...*

EDM functions	Embedded version	Plug-in version
Troubleshooting and diagnostic tools (ping, CLI Manager, path-trace)		

EDM is an embedded application that you can use for single device element management and configuration through a standard Web browser. Because EDM is embedded into Ethernet Routing Switch software, and the switch operates as a Web server, you do not require additional client software.

---

## Tested browsers

EDM has been tested with the following web browsers:

- Microsoft Internet Explorer 11.0
- Mozilla Firefox 45.0.2

---

## Memory requirements

If you install Configuration and Orchestration Manager on a PC to manage your switch, the PC must have at least 500 MB of free disk space.

There are no memory requirements to use EDM through a Web browser.

---

## Online help

Online help is context-sensitive and appears in a separate window in the Web browser.

To obtain help for the current topic, click the **help** button on the toolbar in the work area.

If you are not using EDM through COM, you need to download the help file to a TFTP server and configure the EDM Help file path.

---

## Interface components

This section describes Enterprise Device Manager interface components.

The Enterprise Device Manager window includes the following parts:

- Navigation tree toolbar
- Switch Summary View
- Device Physical View



- EDM window
- Navigation tree
- Menu bar
- Tool bar
- Work area

## Switch summary view

The EDM initial view displays a switch summary view in the work area.

The Switch Summary tab displays basic switch information. This information-only display derives from the configuration tab Edit, Chassis, Chassis.

Following is a list of the fields on the Switch Summary tab:

- hardware model
- hardware version
- firmware version
- software version
- system uptime
- system object identifier
- system contact
- system name
- system location

A Stack Information panel appears at the bottom of the switch summary view work area that provides a description of your switch or the units in your switch stack.

This information includes the following:

- Unit number (for stacks) – also lists which unit is the base unit in a stack
- Switch type
- Description
- Running software version

## Device Physical View

When you access EDM, the first panel in the work area displays a switch summary view. The tab behind the summary view is a real-time physical view of the front panel of a device or stack called the Device Physical View.

Objects in the Device Physical View are

- a stand-alone switch, called a unit
- a switch stack, called a chassis

## User interface fundamentals

- a port

From the Device Physical View you can

- determine the hardware operating status
- select a switch or a port to perform management tasks on specific objects or view fault, configuration, and performance information for specific objects

To select an object, click the object. The system outlines the object in yellow, indicating that the object is selected.

The conventions on the device view are similar to the actual switch appearance except that LEDs in Device Physical View do not blink. The LEDs and the ports are color-coded to reflect hardware status. Green indicates the port is up and running; red indicates that the port is disabled.

From the menu bar you can click the Device Physical View tab to open the Device Physical View any time during a session.

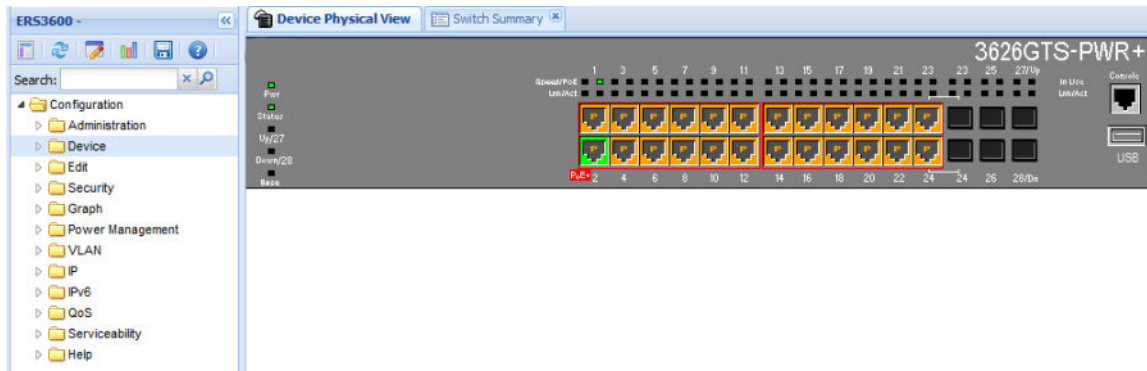


Figure 1: Device Physical View

### \* Note:

Depending on your hardware model, your switch may appear different than the figure shown in this section.


## EDM window

The EDM window contains the following parts:

1. navigation tree—the navigation pane on the left side of the window that displays available command folders in a tree format
2. menu bar—the area at the top of the window that displays primary and secondary tabs that you accessed during the session; the tabs remain available until you close them
3. toolbar—the area just below the menu bar that provides quick access to the most common operational commands such as **Apply**, **Refresh**, and **Help**
4. work area—the main area on the right side of the window that displays the dialog boxes where you view or configure switch parameters

**\* Note:**

Depending on your hardware model, information displayed may appear different than the figure shown in this section.

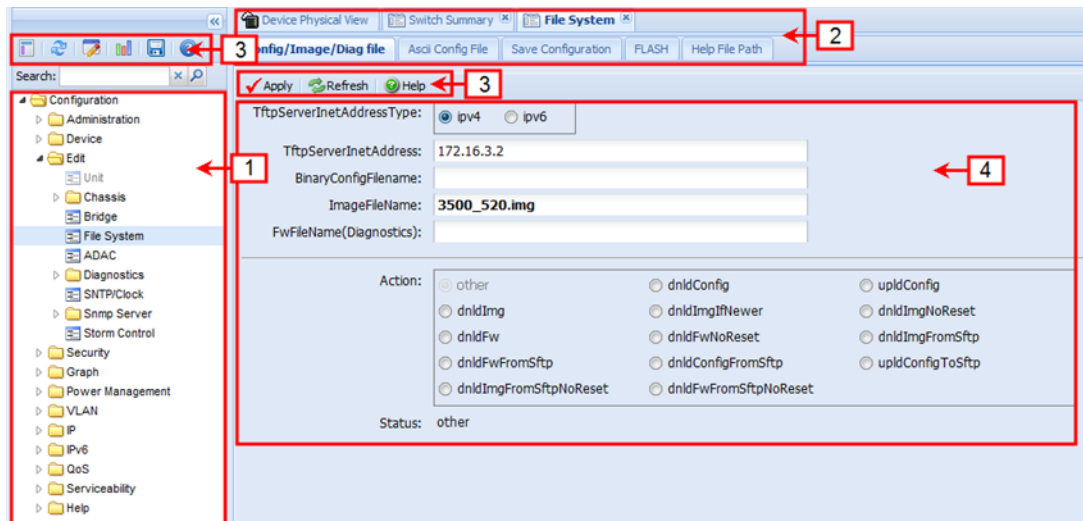

**Figure 2: EDM window**

## Navigation tree

The navigation tree displays available command topics as folders in a tree, as described in the table below.

**Table 3: Folders and subfolders in the navigation tree**

Folder	Description
Administration	Use the selections in the Administration folder to perform the following functions: <ul style="list-style-type: none"> <li>• Quick Start — sets up IP/Community/VLAN</li> <li>• Remote Access — enables or disables Telnet, SNMP, Web Page, and SSH</li> <li>• Run Script — configures parameters for the switch</li> <li>• MIB Web Page — performs a MIB Walk</li> </ul>
Device	Rediscover Device — Use the Rediscover Device selection to refresh the session. <p><b>⚠ Caution:</b></p> <p>All existing tabs are lost.</p>

*Table continues...*

## User interface fundamentals

Folder	Description
Edit	<p>Opens edit dialog boxes for the objects selected in the navigation tree. Use the selections in the Edit folder to view or change parameters for the currently-selected object.</p> <ul style="list-style-type: none"> <li>• Unit</li> <li>• Chassis: Chassis, Switch/Stack, Ports, and Environment</li> <li>• Bridge</li> <li>• File System</li> <li>• ADAC</li> <li>• Diagnostics: Port Mirrors, Topology, System Log. 802.1AB: LLDP, Port MED, Vendor Specific</li> <li>• SNTP/Clock</li> <li>• Fabric Attach</li> <li>• Snmp Server: MIB View, User, Community, Host, Notification Control</li> <li>• Storm Control</li> </ul>
Security	<p>Use the selections in the Security folder to view or change security settings.</p> <ul style="list-style-type: none"> <li>• General</li> <li>• MAC Security</li> <li>• DHCP Snooping</li> <li>• Dynamic ARP Inspection (DAI)</li> <li>• IP Source Guard (IPSG)</li> <li>• 802.1X/EAP</li> <li>• Web/Telnet/Console</li> <li>• SSH/SSL</li> <li>• RADIUS</li> <li>• TACACS+</li> </ul>
Graph	<p>Use the selections in the Graph folder to view statistics and produce graphs of the statistics on the following tabs:</p> <ul style="list-style-type: none"> <li>• Chassis</li> <li>• Port — to view or graph statistics for a port, first select a port on the Device Physical View.</li> </ul>
Power Management	<p>The Power Management tab is available only for switches equipped with Power over Ethernet (PoE). Use the tabs associated with the subfolders in the Power Management folder to view and configure Power over Ethernet (PoE) settings and to view and configure Energy Saver settings.</p>

*Table continues...*

Folder	Description
	Subfolders in the Power Management folder are: <ul style="list-style-type: none"> <li>• PoE</li> <li>• Energy Saver</li> </ul>
VLAN	Use the selections in the VLAN folder to configure or view information about the following: <ul style="list-style-type: none"> <li>• VLANs</li> <li>• Spanning Tree: Globals, STG, RSTP, MSTP</li> <li>• MLT/LACP</li> <li>• SLPP</li> </ul>
IP	Use the selections in the IP folder to set up IP functions on tabs in the following sub-folders: <ul style="list-style-type: none"> <li>• IP</li> <li>• TCP/UDP</li> <li>• RIP</li> <li>• IGMP</li> <li>• DHCP Relay</li> <li>• DHCP Server</li> <li>• UDP Forwarding</li> <li>• Policy</li> </ul>
IPv6	Use the selections in the IPv6 folder to set up IPv6 routing functions on tabs in the following sub-folders: <ul style="list-style-type: none"> <li>• IPv6</li> <li>• TCP/UDP</li> </ul>
QoS	Use the selections in the QoS folder to configure quality of service and set up QoS policies and filters using tabs in the following sub-folders: <ul style="list-style-type: none"> <li>• QoS Devices</li> <li>• QoS Rules</li> <li>• QoS</li> <li>• QoS Agent</li> <li>• QoS UBP/Traffic Profile</li> </ul>
Serviceability	Use the selections in the Serviceability folder to navigate to the following sub-folders: <ul style="list-style-type: none"> <li>• RMon for remote monitoring and configuration of               <ul style="list-style-type: none"> <li>- Alarms</li> <li>- Control</li> </ul> </li> </ul>

*Table continues...*

## User interface fundamentals

Folder	Description
	<ul style="list-style-type: none"> <li>• SLA Mon for Service Level Agreement monitoring</li> </ul>
Help	<p>Use the tabs associated with the subfolders in the Help folder to access help and support for the following:</p> <ul style="list-style-type: none"> <li>• Device Manager Basic</li> <li>• Extreme Portal</li> <li>• Legend: Up, Down, No Link, Standby, Testing, Unmanageable, and Loopback.</li> </ul>

To open a folder or sub-folder, you can click the arrowhead to the left of the folder or double-click the folder to display the available commands tabs.

To close a folder, click the arrowhead once.

To access a command tab, double-click the selection in the navigation tree.

### Navigation tree toolbar







You can use the toolbar above the navigation tree to perform common functions more easily.

Toolbar:




**Figure 3: Toolbar**

Following is a description of the toolbar button functions:

Button	Description
	Switch Summary – you can use the Switch Summary toolbar button to open or reopen the switch summary tab
	Refresh Status – in addition to the existing refresh methods you can use the Refresh Status toolbar button to refresh the device status
	Edit Selected – in addition to the existing edit methods, and depending on which object you select on the Device Physical View, you can use this toolbar button to open Edit > Chassis, Edit > Unit, or Edit > Ports tabs. If you do not select an object from the Device Physical View and you click the Edit Select toolbar button, the Edit > Chassis tab opens.
	Graph Selected – depending on which object you select on the Device Physical View, you can use this toolbar button to open Graph > Chassis or Graph > Port tabs. If you do not make a selection on the Device Physical View, or if you select Unit, the Graph > Chassis tab opens.
	Save Config — this button allows you to save the current configuration. A window appears asking if you want to save the configuration: click OK to save the configuration or click Cancel to cancel the Save operation.
	Help Setup Guide – this button connects you to the help setup guide for embedded EDM and it replaces the link that appeared on the top right of work panes.

Under the toolbar is the Search function window. You can use the Search function window to find a specific sub-folder or selection in the navigation tree.



**Figure 4: Search function window**


Enter the sub-folder or selection you are looking in the Search window and click the magnifying glass to perform the search. The navigation tree displays the sub-folder that best matches your search criteria.

## Menu bar

The menu bar appears above the work area and consists of two rows of tabs.

The top row displays tabs that were accessed from the navigation tree during the active session. The tabs in this row, called primary tabs, are docked and available to reopen on demand. The docked tabs appear in the sequence that you accessed them.

When you click a primary tab from the menu bar, the associated secondary tabs appear in the second row and the default dialog box appears in the work area. Click any secondary tab to display its associated dialog box.

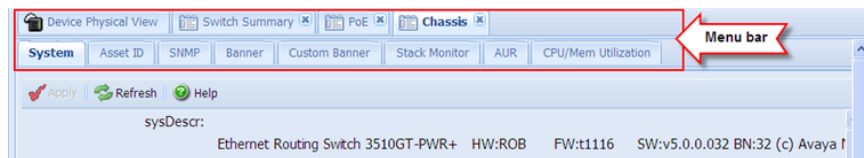

**Figure 5: Menu bar**

If you want to open a dialog without displacing the current open dialog, you can go to the tab on the menu bar and undock the tab by using your mouse to drag and drop it into the work area. You can drag the dialog box to any location on the screen and you can toggle between the open dialog boxes to compare information and make changes. When you no longer need the undocked tab, you can use the three buttons on the upper right side of the tab to temporarily shrink it, re-dock it, or close it.


In both rows of the menu bar, arrows can appear on the left and right sides when the number of open tabs exceeds the available space. You can use the arrows to scroll to a tab, or you can select the tab from the navigation tree.

To reduce the number of open tabs, you can click the X button on the top right of a tab to close it.

## Tool bar

The tool bar, located below the menu bar, contains buttons that provide quick access to commonly used operational commands. Depending on the tab selected, different buttons can appear.



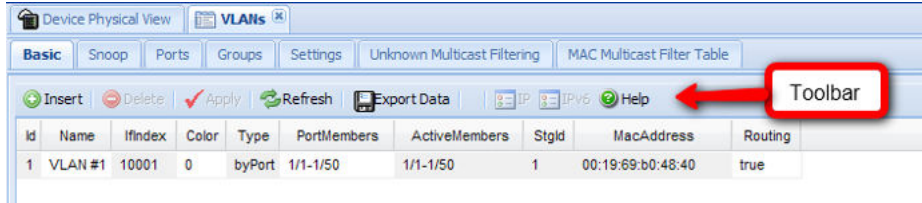



## User interface fundamentals



**Figure 6: Tool Bar**

The following table describes common tool bar buttons.

**Table 4: Common tool bar buttons**

Button	Name	Description
	Apply	Executes parameter changes
	Refresh	Refreshes screen data
	Help	Displays context-sensitive online help for the current dialog box
	Insert	Opens an insert dialog box Submits the entry from the insert dialog box The insert buttons appear only on panes where you can insert entries.
	Delete	Removes a selected entry
	Cancel	Cancels an operation

## Work area

The work area, on the right side of the EDM page, displays the switch Device Physical View and dialog boxes related to the menu selections in the navigation tree. You can use the work area to view and configure switch parameters from the dialog boxes that appear in the work area.

See the following figure for an example of the work area for the File System, Config/Image/Diag file dialog.



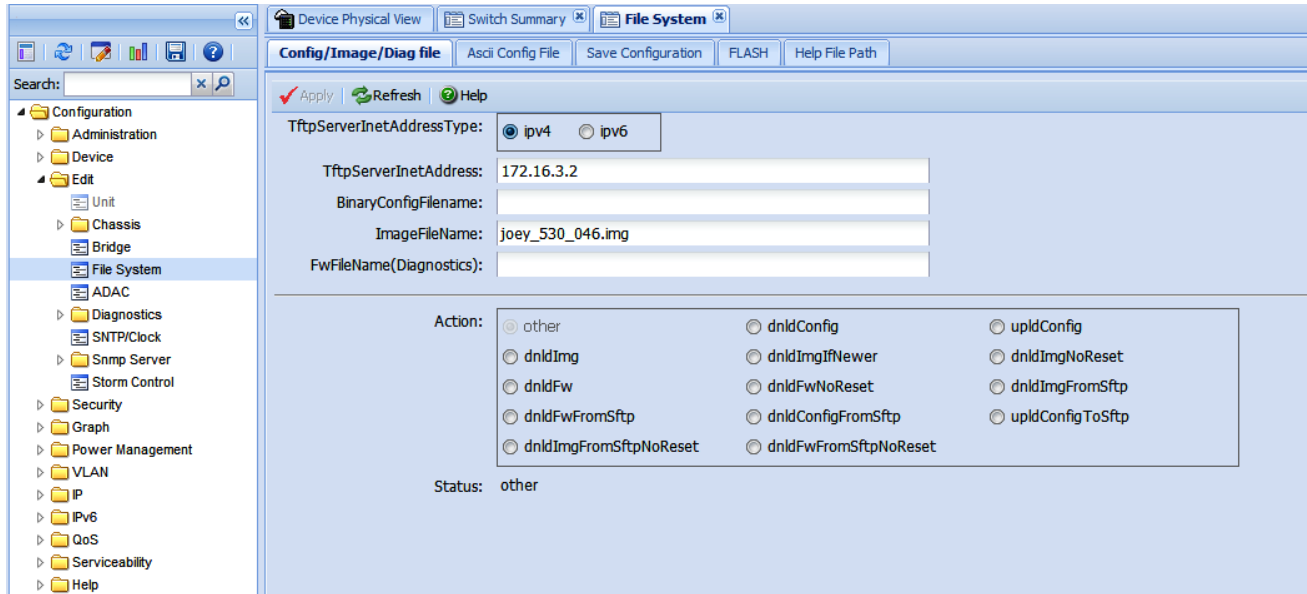


Figure 7: EDM work area

**\* Note:**

Depending on your hardware model, information displayed may appear different than the figure shown in this section.

## Single port configuration for EDM

**\* Note:**


Depending on your hardware model, information displayed may appear different than the figures shown in this section.

You can apply configuration changes to single ports by using one of the following methods:

- From the Device Physical View, you can right-click a port and select Edit from the drop-down menu, then click the appropriate tab.


The following figure displays the drop-down menu for the selected port in the Device Physical View.

## User interface fundamentals

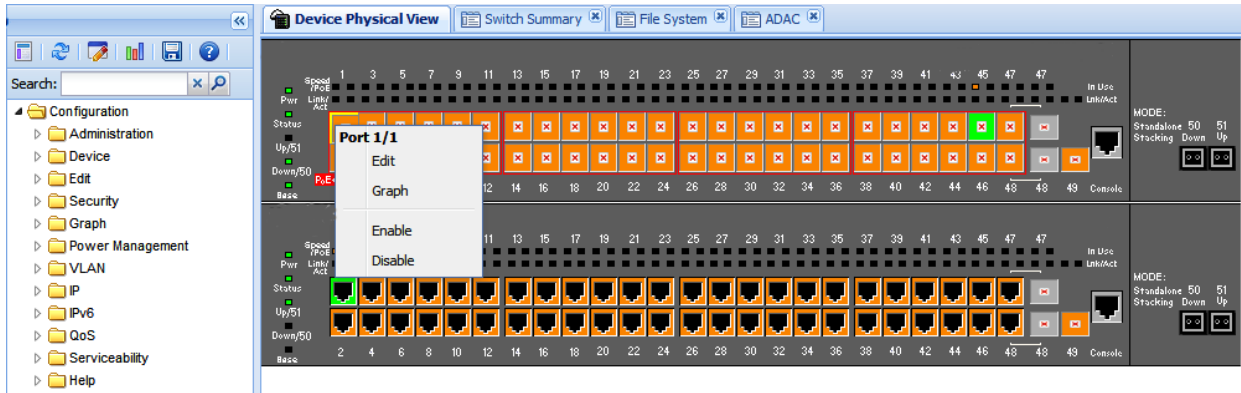

**Figure 8: Device Physical View - port edit**

The following figure displays the port edit work area with the VLAN tab selected.

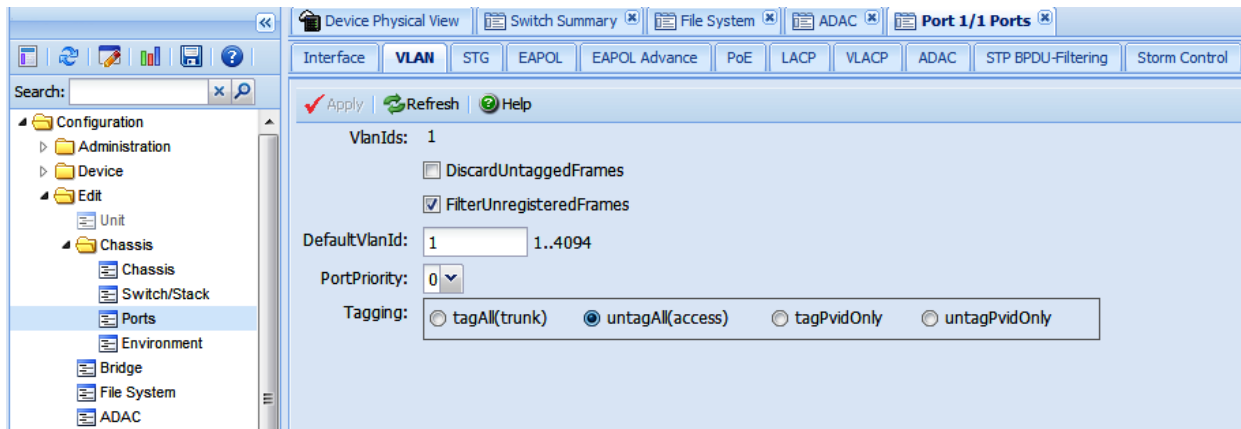

**Figure 9: Port edit -VLAN tab**

- From the Navigation tree you can select any tab from the Edit, Chassis, Ports work flow and double-click a cell under an editable parameter column heading in the appropriate port row of the table.

The following figure displays the Edit, Chassis, Ports work area with the Interface tab selected.

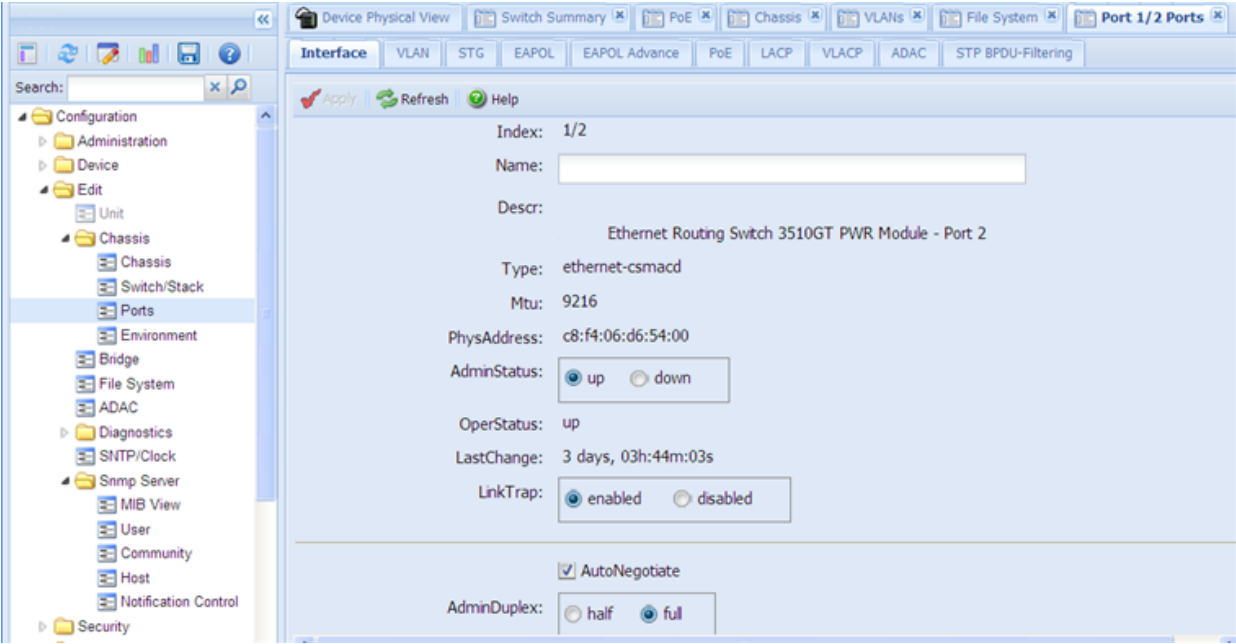


Figure 10: Edit, Chassis, Ports - Interface tab

- From the Navigation tree you can select a port-related tab from a specific, applicable feature work area (for example, VLAN, VLANs, Ports), and double-click a cell under an editable parameter column heading in the appropriate port row of the table.

The following figure displays the VLAN, VLANs, Ports tab work area.

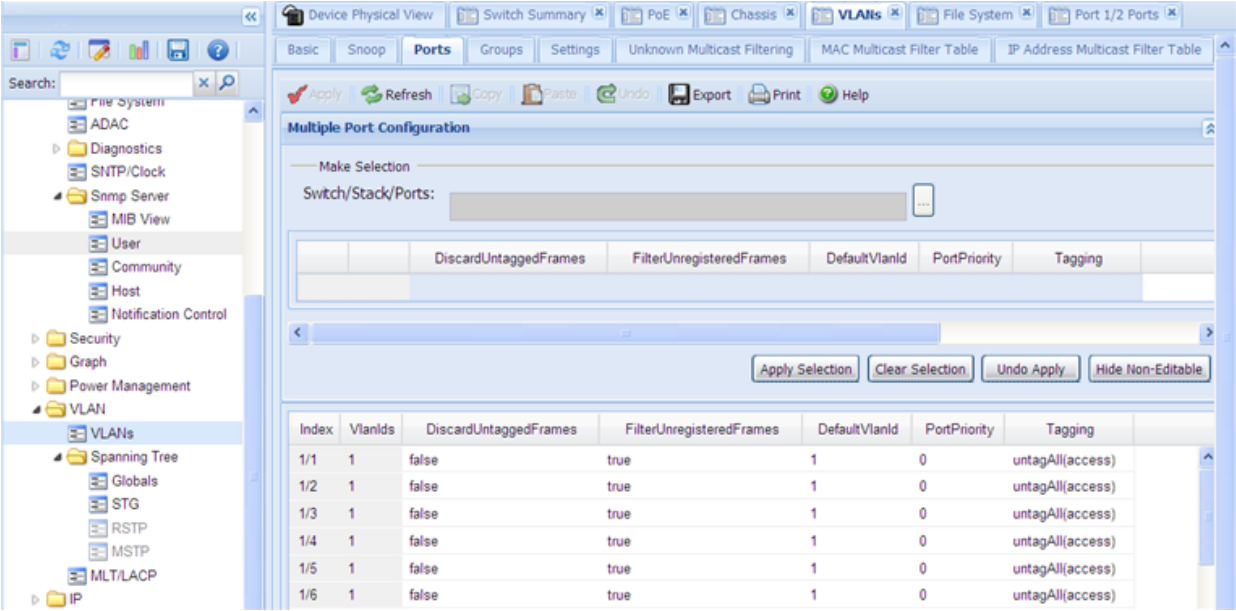


Figure 11: VLAN, VLANs - Ports tab

## Multiple Port Configuration for EDM

**\* Note:**

Depending on your hardware model, information displayed may appear different than the figures shown in this section.

When you need to apply the same configuration changes to more than one port, you can use the Multiple Port Configuration function available on all tabs in the Edit, Chassis, Ports work flow, or on port-related tabs for specific, applicable feature work areas (for example, VLAN, VLANs, Ports).

The following sections use the Edit, Chassis, Ports, Interface tab work area to describe the available Multiple Port Configuration functions.

In the work area for any of the Edit, Chassis, Ports tabs, the following two panes appear in the default view:


- Multiple Port Configuration pane—provides port selection for one port, several ports, or all ports, and configurable port parameters
- Tab work pane—displays existing configuration information for the feature and configurable cells for individual ports

With Multiple Port Configuration you can perform the following:

- Hide non-editable fields from the multiple configuration pane so that you choose to view only those fields that can be configured.
- Select an individual port or a group of ports from the Port Editor.
- Select all ports from the Port Editor.
- Double-click any or all of the editable fields to change the configuration parameter.
- Clear your selections.
- Apply your selections.
- Undo the application of your selections.


You can expand or collapse the Multiple Port Configuration pane by clicking the Multiple Port Configuration task bar. The Multiple Port Configuration pane is expanded by default.

The following figure displays the tabs available in the Edit, Chassis, Ports work flow, with the Interface tab selected and the Multiple Port Configuration pane expanded.

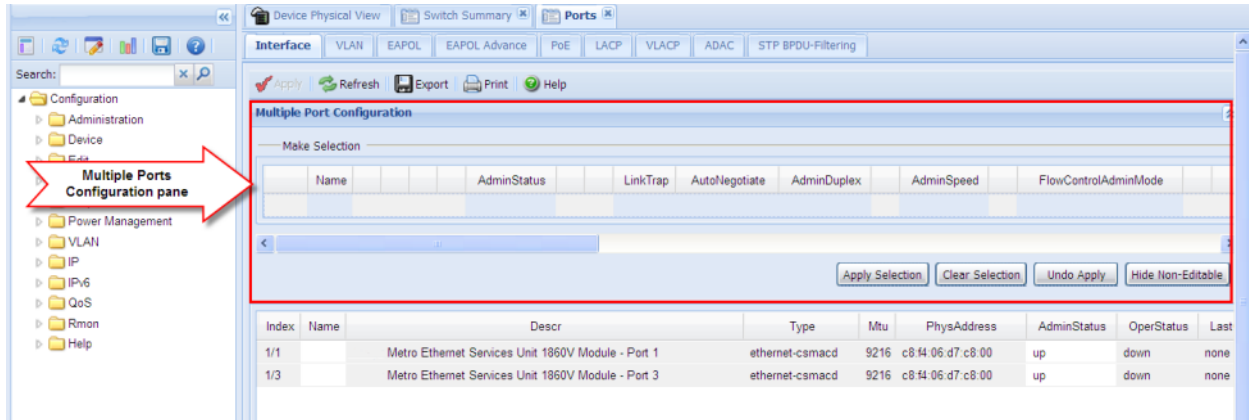

**Figure 12: Interface tab — Multiple Port Configuration pane expanded**


The following figure displays the Edit, Chassis, Ports, Interface tab with the Multiple Port Configuration pane collapsed.

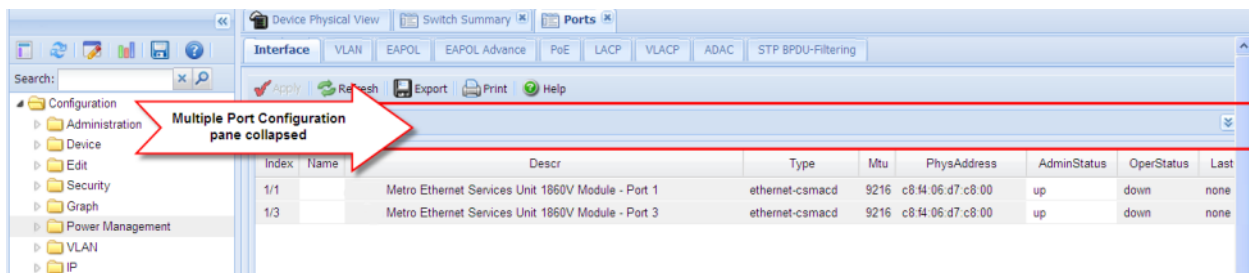

**Figure 13: Interface tab — Multiple Port Configuration pane collapsed**

Changes you make to a port configuration using Multiple Port Configuration are applied to the switch configuration only after you click **Apply** on the work area toolbar.

The following figure displays the location of the **Apply** button on the work area toolbar.

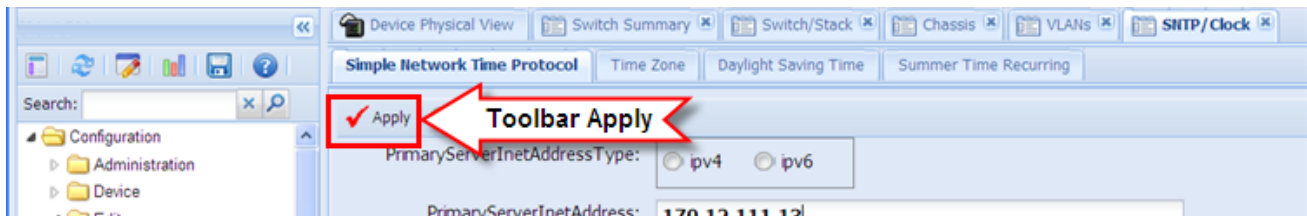

**Figure 14: Toolbar Apply button**

## Enterprise Device Manager procedures

This section contains procedures for starting and using Enterprise Device Manager (EDM) on your switch. You can use EDM software on the switch; you do not need to install a client-based application on your computer.

## Enabling the Web server using CLI

The Web server is enabled by default. If you have assigned an IP address to the switch you can access EDM.

If you have disabled the Web server, use this procedure to enable and manage the Web server using CLI. After you enable the Web server you can start EDM.

For more information about the Web server, see *Configuring Security on Ethernet Routing Switch 3600 Series*.

### Procedure

1. Enter Global Configuration mode:

```
enable  
configure terminal
```

2. At the command prompt, enter the following command:

```
web-server enable
```

---

## Disabling the Web server using CLI

Use this procedure to disable the Web server using CLI. After you disable the Web server, you cannot start EDM.

### Procedure

1. Enter Global Configuration mode:

```
enable  
configure terminal
```

2. At the command prompt, enter the following commands:

```
no web-server  
web-server disable
```

---

## Displaying the Web server status using CLI

Use the following procedure to display the status of the Web server using CLI.

### Procedure

1. Enter Global Configuration mode:

```
enable
```

```
configure terminal
```

2. At the command prompt, enter the following command:

```
show web-server
```

---

## Starting EDM

To configure and maintain your switch through a Web-based graphical user interface, start EDM.

### Before you begin

- Ensure that the switch is running.
- Note the switch IP address.
- Ensure that the Web server is enabled.
- Note the user name.
- Note the password.
- Open one of the supported Web browsers.

### Procedure

1. In a supported Web browser, enter the IP address of the switch using one of the following formats:
  - `http://<IP Address>`
  - `https://<IP Address>`
2. Enter the user name.
3. Enter the password.
4. Click **Log On**.

---

## Using shortcut menus

In the EDM Device Physical View you can use shortcut menus to edit objects and apply changes.

### Procedure

1. In the **Device Physical View**, select an object.
2. Right-click the object.
3. Select a function from the list.

## Shortcut menus field descriptions

Name	Description
<b>Unit</b>	
<b>Edit</b>	Display the Edit unit dialog box and tabs
<b>Refresh</b>	Refreshes switch status
<b>Refresh Port Tooltips</b>	Refreshes the port tooltip data. Port tooltip data contains: Slot/Port, PortName, and PortOperSpeed
<b>Port</b>	
<b>Edit</b>	Displays the Edit port dialog box and tabs
<b>Graph</b>	Displays the graph port dialog box and tabs
<b>Enable</b>	Enables the port administratively
<b>Disable</b>	Shuts down the port administratively

---

## Navigating around EDM

Use the following procedure to navigate around EDM.

### Procedure

1. In the navigation pane, click the arrowhead to the left of a folder to display the sub-level folders in the tree.
2. If there is a sub-folder, double-click the folder or click the arrowhead beside it, to open the sub-folder.
3. The primary tabs appear under the folders and sub-folders. Click a tab to open it in the work area.

---

## Undocking tabs

To improve certain types of configuration, you can view more than one tab at a time. To view more than one tab, you use the undock function to activate a previously-opened tab from the menu bar.

### Important:

When you undock a tab to make changes, then return to another open tab, in order to see the effects of the changes, you must click the **Refresh** button on the tool bar.

### Procedure

1. From the menu bar, drag and drop the tab you want to open.
2. To reposition the tab in the work area, click and drag the title bar of the tab.



---

## Docking tabs

You can re-dock an undocked tab using one of the following methods.

### Procedure

To re-dock a tab, do one of the following:

- On the undocked tab, click the dock-back button (the middle button on the top right of the panel)
- On the undocked tab, click the collapse button (left button on the top right of the panel) to temporarily minimize the panel.

---

## Editing a dialog box

Use this procedure to edit a dialog box.

### Procedure

1. In the work area, double-click the field you want to edit.
2. Select a value from the list of predetermined values or enter the value for a field without preset values.

 **Important:**

Enter an IP address in decimal format: <xxx> <xxx> <xxx> <xxx>.

Enter a MAC address in hexadecimal format: xx:xx:xx:xx:xx:xx.

Time is a value based on the delta from the switch boot-up time.

3. Click **Apply**.

---

## Inserting an entry in a dialog box

Use this procedure to insert an entry in a dialog box.

### Procedure

1. On the tool bar, click **Insert**.
2. Enter changes in the Insert dialog box.
3. Click **Insert** to submit the entry and return to the active tab in the work area.
4. On the toolbar, click **Apply** to commit the change to the configuration. The system refreshes the view and errors display in a browser popup.

## Deleting an entry from a dialog box

Use this procedure to delete an entry from a dialog box.

### Procedure

1. Highlight the entry.
2. Click **Delete**.

---

## Editing an object using the shortcut menu

You can edit objects in the Device Physical View from the navigation tree or the shortcut menu. Use this procedure to edit an object using the shortcut menu.

### About this task

Changes are not applied to the running configuration until you click **Apply**.

### Procedure

1. On the Device Physical View, you can
  - right click an object
  - press Ctrl+click to select several objects, then right click
  - click and drag to select a group of objects, then right click
  - click an entire device, then right click
2. From the list, click **Edit**.
3. Edit the applicable tab in the work area.
4. Click **Apply**.

---

## Editing file system elements

Use this procedure to edit file system elements.

### Procedure

1. Click the **Edit** arrowhead to open the Edit menu.
2. Double-click **File System** to open the File System tab in the work area.

## File System work area field descriptions

The following table describes the tabs in the File System work area.

Tab	Description
<b>Config/Image/Diag file</b>	Use this tab to view information about and acquire image, configuration, and firmware files.
<b>Ascii Config File</b>	Use this tab to acquire ASCII configuration files.
<b>Save Configuration</b>	Use this tab to save the current configuration manually or automatically.

---

## Configuring multiple interface ports using EDM - Example 1

Use this procedure as an example for configuring multiple interface ports using the Multiple Port Configuration function and the **Edit, Chassis, Ports, Interface** work flow.

### Before you begin

- Select ports on the Device Physical View.

### Procedure

1. In the navigation tree, double-click **Edit**.
2. In the Edit tree, double-click **Chassis**.
3. In the Chassis tree, click **Ports**.
4. Click the **Interface** tab.
5. To change the configuration of the selected ports, in the Multiple Port Configuration pane, double-click the cell beneath the column heading that represents the parameter you want to change and do one of the following:
  - Select a value from a drop-down list.
  - Type a value in the cell.
6. In the Make Selection pane, click **Apply Selection**. The changes appear in the table.
7. On the Interface tab toolbar, click **Apply** to apply the changes to the switch configuration.

---

## Configuring multiple ports using EDM - Example 2

Use this procedure to configure multiple ports using the Multiple Port Configuration functions and the **Security, MAC Security, AutoLearn** workflow. When you use this workflow you can select ports directly from the Multiple Port Configuration pane on the **Configuration** tab.

### Procedure

1. In the navigation tree, double-click **Security**.
2. In the Security tree, double-click **MAC Security**.
3. Click the **AutoLearn** tab.

## User interface fundamentals

4. In the work area, in the Make Selection section of the Multiple Port Configuration pane, click the Switch/Stack/Ports ellipsis (...) to open the Port Editor dialog.
5. In the Port Editor window, click the ports you want to configure.

 **Note:**

If you want to configure all ports, click **All**.

6. Click **OK** to return to the Make Selection pane.

The ports you selected appear in the Switch/Stack/Ports box.

7. To change the configuration of the selected ports, in the Multiple Port Configuration pane, double-click the cell beneath the column heading that represents the parameter you want to change and do one of the following:

- Select a value from a drop-down list.
- Type a value in the cell.

8. In the Make Selection pane, click **Apply Selection**.

The changes appear in the table.

9. On the **AutoLearn** tab toolbar, click **Apply** to apply the changes to the configuration.

---

## Graphing statistics

You can graph statistics for an entire device, a group of ports, or a single port.

### Before you begin

On a Device Physical View select one of the following:

- a port
- a group of ports
- a device

### Procedure

1. In the navigation tree, double-click **Graph**.
2. In the Graph tree, select one of the following:
  - **Chassis**
  - **Port**
3. In the work area, select a tab.
4. On the tab, select information to graph. To export the information to another application, on the task bar click **Export Data**.
5. To create the graph, on the task bar, click a graph type.

---

## Getting EDM online help files for embedded EDM

Because help files are not included with the embedded EDM software files on the switch, you need to download the help files to a TFTP destination and use CLI to configure a path from your switch to the help files.

If you are using COM to manage your switch, help resides with COM and you do not need to use these procedures.

### Downloading help files

Use this procedure to download help files.

#### Before you begin

- An available TFTP server — ensure that the TFTP path differs from the path you use to download switch software

#### Caution:

Do not install EDM help files on Flash.

#### Procedure

1. To obtain EDM help files for the embedded element manager, do one of the following;
  - Go to <https://extremeportal.force.com> and locate the help file for the appropriate product.
  - Select the help file from the software CD ROM contained in the Base Software License Kit.
2. Download the help file to a TFTP server.

### Configuring the path to the help files using CLI

Use this procedure to configure the path to the help files.

#### Procedure

1. Enter Global Configuration mode:

```
enable  
configure terminal
```
2. At the command prompt, enter the following command:

```
edm help-file-path <path name> <tftp address> <filename>
```

### Configuring the help file path using EDM

Use this procedure to configure the path to the help files.

#### Procedure

1. In the navigation tree, double-click **Edit** or click the Edit arrowhead to open the Edit menu.

## User interface fundamentals

2. Click **File System** to open the File System work area.
3. In the work area, click the **Help File Path** tab.
4. In the Path dialog box, enter the path to the help file storage location.

### Example

```
tftp://A.B.C.D/file_name
```

# Chapter 4: Configuration files fundamentals

This chapter provides fundamental information about working with configuration files.

Configuration files are ASCII text files that allow the administrator to change switch configuration quickly.

Procedures to manage binary configuration files are included in the Enterprise Device Manager section.

---

## CLI configuration files

You can use CLI to display, store, and retrieve configuration files, and to save the current configuration.

---

### Viewing current configuration using CLI

Use this procedure to view the current configuration.

#### Procedure

1. Enter Privileged EXEC mode:  
`enable`
2. At the command prompt, enter the following command:  
`show running-config`

---

### Saving current configuration to TFTP server using CLI

#### Procedure

1. Enter Privileged EXEC mode:  
`enable`
2. At the command prompt, enter the following command:

```
copy running-config tftp [address (<A.B.C.D> | <WORD>)] [filename <WORD>]
```

## Variable definitions

The following table describes the parameters for the `copy running-config` command.

Variable	Value
address<A.B.C.D>	Specifies the address of the TFTP server. <ul style="list-style-type: none"> <li>A.B.C.D — specifies the IP address</li> </ul>
filename<name>	Specifies the configuration file name.

## Variable definitions

The following table describes the parameters for the `copy running-config sftp` command.

Variable	Value
address<A.B.C.D>	Specifies the address of the TFTP server. <ul style="list-style-type: none"> <li>A.B.C.D — specifies the IP address</li> </ul>
filename<name>	Specifies the configuration file name.
module	Copies configuration of an application.
verbose	Copies entire configuration (defaults and non-defaults).

---

## Saving current configuration to SFTP server using CLI

### Procedure

1. Enter Privileged EXEC mode:

```
enable
```

2. At the command prompt, enter the following command:

```
copy running-config sftp [verbose] [module<applicationModules>]
[filename <WORD>] ([address {<A.B.C.D> | <ipv6addr>}]) username
<WORD> [password]
```

---

## Saving current configuration to USB device using CLI

### Procedure

1. Enter Privileged EXEC mode:

```
enable
```

2. At the command prompt, enter the following command:



```
copy running-config usb [filename <WORD>] [module
<applicationModules>] [verbose]
```

---

## Saving current configuration to flash memory using CLI

Use this procedure to save the current configuration to flash memory. Note that the system automatically issues the `copy config nvram` command periodically.

### Procedure

1. Enter Privileged EXEC mode:

```
enable
```

2. At the command prompt, enter the following command:

```
copy config nvram
```

#### \* Note:

The current configuration can also be saved to Non-Volatile RAM (NVRAM) using the `write memory` command or the `save config` command. Both of these commands are also issued from Privileged EXEC command mode.

---

## Restoring system configuration from TFTP using CLI

Use this procedure to restore the system configuration from TFTP.

### Procedure

1. Enter Privileged EXEC mode:

```
enable
```

2. At the command prompt, enter the following command:

```
copy tftp config address <A.B.C.D> filename <name>
```

## Variable definitions

The following table describes the parameters for the `copy tftp config` command.

Variable	Value
address <A.B.C.D>	Specifies the address of the TFTP server. <ul style="list-style-type: none"> <li>• A.B.C.D — specifies the IP address</li> </ul>
filename <name>	Specifies the configuration file name.

---

## Restoring system configuration from SFTP using CLI

### Procedure

1. Enter Privileged EXEC mode:

```
enable
```

2. At the command prompt, enter the following command:

```
copy sftp config address <A.B.C.D> | <WORD> filename <name> username
<WORD> [password]
```

---

## Restoring system configuration from USB device using CLI

### Procedure

1. Enter Privileged EXEC mode:

```
enable
```

2. At the command prompt, enter the following command:

```
copy config usb {filename <name> | unit <1-8>}
```

---

## Downloading a configuration file automatically using CLI

Use this procedure to configure a switch to automatically load a configuration file.

### Procedure

1. Enter Privileged EXEC mode:

```
enable
```

2. At the command prompt, enter the following command:

```
configure network load-on-boot {disable | use-bootp | use-config}
address <A.B.C.D> filename <name>
```

## Variable definitions

The following table describes the parameters for the `copy running-config` command.

Variable	Value
address <A.B.C.D>	Specifies the address of the TFTP server. • A.B.C.D — specifies the IP address
filename <name>	Specifies the configuration file name.

*Table continues...*

Variable	Value
username <WORD>	Specifies the username for downloading a configuration file automatically using CLI.
[password]	Specifies the password for downloading a configuration file automatically using CLI.

Use the definitions in the following table to use the configure **network load-on-boot** command.

Variable	Value
load-on-boot { <i>disable</i>   <i>use-bootp</i>   <i>use-config</i> }	<p>Specifies the setting to automatically load a configuration file when the system starts</p> <ul style="list-style-type: none"> <li>• <i>disable</i> — disables the automatic loading of the configuration file</li> <li>• <i>use-bootp</i> — specifies loading the ASCII configuration file at startup and using BootP to obtain values for the TFTP address and file name</li> <li>• <i>use-config</i> — specifies loading the ASCII configuration file at startup and using the locally configured values for the TFTP address and file name</li> </ul> <p>If you omit the variables, the system immediately downloads and runs the ASCII configuration file.</p>

---

## Viewing USB files

Use this procedure to display configuration files stored on a USB device in a unit in a stack.

### Before you begin

Insert a USB device in the base unit or in a stack unit.

### Procedure

1. Enter Privileged EXEC mode:  

```
enable
```
2. To display files on a USB device inserted in the base unit, enter the following command :  

```
show usb-files
```
3. To display files on a USB device inserted in a stack unit, enter the following command :  

```
show usb-files unit <unit_number>
```

---

## Displaying USB file information using CLI

### Before you begin

Insert USB device in the switch.

### Procedure

1. Enter Privileged EXEC mode:  
`enable`
2. Enter the following command:  
`show usb-host-port all`

### Example

---

## Downloading an ASCII configuration file from a TFTP server or USB device

Use this procedure to download an ASCII configuration file from a TFTP server or USB device to the local ASCII file system. You can then boot the system from the local file system. In a stack, the downloaded ASCII configuration file will be saved in all units.

### Procedure

1. Enter Global Configuration mode:  
`enable`  
`configure terminal`
2. To download from a TFTP server, enter the following command at the command prompt:  
`copy tftp config address <address> filename <filename>`
3. To download from a USB device, enter the following command at the command prompt:  
`copy usb config filename <filename>`

### Next steps

Proceed with the `boot script` command to boot the system with the local ASCII configuration file.

When the system boots successfully with an ASCII configuration file, the system configuration is saved to the binary configuration. If the system boot fails, the system resets and boots with the current binary configuration.

## Variable definitions

The following table describes the parameters for the `copy [tftp] [usb] script` command.

Variable	Value
address <A.B.C.D>	Specifies the address of the TFTP server. <ul style="list-style-type: none"> <li>A.B.C.D — specifies the IPv4 address</li> <li>WORD - specifies the IPv6 address</li> </ul>
filename <Word>	Specifies the name of the file to be retrieved.
block <1-2> [name <WORD>]	Specifies the block from which the ASCII configuration file is to be downloaded  If you do not specify a name for the block name, the default is the name of the file retrieved.

## CLI pipe filter functions

This section provides the supported pipe ( | ) filter functions.

### Count filter

This filter counts the number of lines in the output of a command.

#### Syntax

```
<CLI command> | count
```

#### Example

```
#show running-config | count
Count: 100 lines
```

### Display output matching a pattern

The match filter displays only the output lines that match the given pattern.

#### Syntax

```
<CLI command> | match <pattern> [field <number>] [ignore-case] [header <number>]
```

Parameter	Description
pattern	Specifies the regular expression to be matched against each line of output. Quotations are required if the parameter contains spaces.
field <number>	Specifies the field in each line to be matched against the pattern. Fields are separated by white spaces and are counted starting with 1 for the left-most field.
ignore-case	Specifies letters to be matched in the pattern regardless of case.
header <number>	Specifies a number of lines from the start of the output to be displayed unchanged before trying to match the pattern. Useful to keep the header of a table intact.

## Examples

```
#show interfaces | match 1000 header 3
      Status              Auto              Flow
Port Trunk Admin   Oper Link LinkTrap Negotiation  Speed  Duplex Control
-----
5          Enable Up    Up   Disabled Enabled   1000Mbps Full  Asymm
9          Enable Up    Up   Enabled  Enabled   1000Mbps Full  Asymm

#show interfaces | match disabled field 5 ignore-case
5          Enable Up    Up   Disabled Enabled   1000Mbps Full  Asymm
11         Enable Down  Down Disabled Enabled
```

## Ignore output that matches a pattern

The ignore filter displays only the output lines that do not match the given pattern. The lines matching the pattern are discarded.

### Syntax

```
<CLI command> | except <pattern> [field <number>] [ignore-case] [header <number>]
```

Parameter	Description
pattern	Specifies the regular expression to be matched against each line of output. Quotations are required if the parameter contains spaces.
field <number>	Specifies the field in each line to be matched against the pattern. Fields are separated by white spaces and are counted starting with 1 for the left-most field.
ignore-case	Specifies letters to be matched in the pattern regardless of case.
header <number>	Specifies a number of lines from the start of the output to be displayed unchanged before trying to match the pattern. Useful to keep the header of a table intact.

### Example

```
#show interfaces | except down ignore-case header 3
      Status              Auto              Flow
Port Trunk Admin   Oper Link LinkTrap Negotiation  Speed  Duplex Control
-----
5          Enable Up    Up   Disabled Enabled   1000Mbps Full  Asymm
9          Enable Up    Up   Enabled  Enabled   1000Mbps Full  Asymm
```

## Display output from the first match of a pattern

The find filter displays the output of a command starting from the first line that matches the given pattern.

### Syntax

```
<CLI command> | find <pattern> [field <number>] [ignore-case] [header <number>]
```

Parameter	Description
pattern	Specifies the regular expression to be matched against each line of output. Quotations are required if the parameter contains spaces.
field <number>	Specifies the field in each line to be matched against the pattern. Fields are separated by white spaces and are counted starting with 1 for the left-most field.
ignore-case	Specifies letters to be matched in the pattern regardless of case.
header <number>	Specifies a number of lines from the start of the output to be displayed unchanged before trying to match the pattern. Useful to keep the header of a table intact.

### Example

```
#show interfaces | find 47 header 3
      Status
Port Trunk Admin Oper Link LinkTrap Auto Negotiation Speed Duplex Flow Control
-----
47          Enable Down Down Enabled Enabled
48          Enable Down Down Enabled Enabled
49          Enable Down Down Enabled Disabled 10Gbps Full Asymm
50          Enable Down Down Enabled Disabled 10Gbps Full Asymm
51          Enable Down Down Enabled Disabled 10Gbps Full Asymm
52          Enable Down Down Enabled Disabled 10Gbps Full Asymm
```

## Do not paginate output of a single command

The no-more command filter temporarily disables pagination for the output of an CLI command. When the lines of output exceed the terminal length, you are not prompted to continue or to quit but the entire output of the command continues to be displayed. The effect is similar to setting terminal length 0 but only for the current command.

### Example

```
#show interfaces | no-more
```

## Display only the first few lines of output

The head filter limits the output of a command to the first few lines. If a number is not specified then the first 10 lines are shown.

### Syntax

```
<CLI command> | head [<number>]
```

Parameter	Description
<number>	Specifies the number of lines to keep from the beginning of the output.

### Example

```
#show interfaces | head
      Status
Port Trunk Admin Oper Link LinkTrap Auto Negotiation Speed Duplex Flow Control
-----
1          Enable Down Down Enabled Enabled
2          Enable Down Down Enabled Enabled
3          Enable Down Down Enabled Enabled
```

```

4          Enable  Down Down Enabled  Enabled
5          Enable  Up   Up   Disabled Enabled    1000Mbps Full   Asymm
6          Enable  Down Down Enabled  Enabled
7          Enable  Down Down Enabled  Enabled
    
```

## Display only the last few lines of output

The tail filter limits the output of a command to the last few lines. If a number is not specified, then the last 10 lines are shown.

### Syntax

<CLI command> | tail {[<number>] | from-line <number> } [header <number>]

Parameter	Description
<number>	Specifies the number of lines to keep from the end of the output.
from-line <number>	Specifies the line from which to start the output.
[header]	Same description as for the other commands which allow it.

### Example

```

#show interfaces | tail 3
50          Enable  Down Down Enabled  Disabled  10Gbps  Full   Asymm
51          Enable  Down Down Enabled  Disabled  10Gbps  Full   Asymm
52          Enable  Down Down Enabled  Disabled  10Gbps  Full   Asymm
    
```

## Regular expressions

Match, except, and find filters require a pattern parameter, which is a regular expression.

Pattern parameter	Description
regular expression	Zero or more branches separated by the pipe symbol ' '. It matches anything that matches one of the branches.
branch	Zero or more pieces, concatenated. For instance, it matches a match for the first, followed by a match for the second.
piece	An atom possibly followed by '*', '+', or '?'. An atom followed by '*' matches a sequence of 0 or more matches of the atom. An atom followed by '+' matches a sequence of 1 or more matches of the atom. An atom followed by '?' matches a match of the atom, or the null string.
atom	A regular expression in parentheses (matching a match for the regular expression), a range, '.' (matching any single character), '^' (matching the null string at the beginning of the input string), '\$' (matching the null string at the end of the input string), a '\' followed by a single character (matching that character), or a single character with no other significance (matching that character).
range	A sequence of characters enclosed in '['']. It normally matches any single character from the sequence. If the sequence begins with '^', it matches any single character not from the rest of the sequence. If two characters in the sequence are separated by '-', this is shorthand for the full list of ASCII characters between them (for example, '[0-9]' matches any decimal digit). To

*Table continues...*



Pattern parameter	Description
	include a literal `]' in the sequence, make it the first character (following a possible `^). To include a literal `-', make it the first or last character.
	If the pattern includes white spaces then it must be enclosed in quotation marks.
	To match characters which have a special meaning – one of <code>*.+?^\$()[]\</code> – they must be escaped. They must be preceded by a single backslash if the pattern is not in quotation marks and by double backslash if the pattern is enclosed in quotes.

### Regular expression examples

Regular expression	Description
est	Matches a string containing “est”. For example, “testing”.
A(d+)r	Matches a string containing an ‘A’ followed by at least one ‘d’ followed by ‘r’. For example, “Address”.
^1	Matches a ‘1’ only at the beginning of a line.
192\.[0-9]+\.[0-9]+\.[0-9]+	Matches a string representing a valid IPv4 address starting with 192.
“192\.[0-9]+\.[0-9]+\.[0-9]+”	Matches a string representing a valid IPv4 address starting with 192 when the pattern is enclosed in quotes.  The un-escaped ‘.’ means “any single character” which would make the regular expression accept invalid addresses as well.

---

## Enterprise Device Manager configuration files

You can use Enterprise Device Manager procedures in the following sections to:

- store the current switch ASCII configuration on a TFTP server
- retrieve an ASCII configuration file from a TFTP server to apply to a switch
- store a binary configuration file from a TFTP server
- retrieve a binary configuration file from a TFTP server
- manually save the current configuration to flash memory
- designate a configuration to download automatically at switch startup

You can check file upload transfer status of ASCII configuration files in the `ScriptLastStatusChange` field on the `Edit > File System > Ascii Config Script Files` tab. During upload transfer, the status is `manualUploadInProgress`. To check changes to file transfer status, click **Refresh**. After the file transfer is complete the status displays as either `manualUploadPassed` or `manualUploadFailed`.

You can check file download transfer status of ASCII configuration files in the `ScriptLastStatusChange` field on the **Ascii Config File** tab. During download transfer, the status is `manualDownloadInProgress`. To check changes to file transfer status, click **Refresh**. After the

file transfer is complete, the status displays as either `manualDownloadPassed` or `manualDownloadFailed`.

You can also designate an ASCII configuration file to download automatically at switch startup.

To control which ASCII configuration files load automatically, at switch startup use the fields in the table on the `Edit > File System > Ascii Config Script Files` .

The **Ascii Config Script Files** table provides a way to control which ASCII configuration files are loaded, and in which order, because you can designate the path to an ASCII configuration file, a boot priority value, and a script index priority for each entry in the table.

Depending on which script source you designate for an entry, the system uses the designated paths in the Ascii Config Script Files table in one of the following ways:

- The system uses BootP to download the designated ASCII configuration file from the network, according to the specified IP address and file name.
- The system downloads the designated ASCII configuration file from a TFTP or SFTP server, according to the specified IP address and file name.
- The system downloads the ASCII configuration file from a USB device, according to the specified file name.

In the **boot priority** column on the Ascii Config Script Files tab, if you designate a non-zero boot priority value for any but the first row, the switch attempts to load the configuration file at startup. The first entry in the configuration files table is assigned a fixed boot priority value of 0 and it is not available to load at startup.

The switch attempts to load each ASCII configuration file with a non-zero priority value, in ascending order, until a script file loads successfully. If ASCII configuration file boot priority values are equal, the switch attempts to load the configuration files according to their script index order.

In the **Script Source** column in the Ascii Config Script Files table, if you designate a USB device in a stand-alone switch as the load-on-boot path to the ASCII configuration file, the switch downloads the specified configuration file from the USB port of the switch.

If you designate a USB device in a stack unit as the load-on-boot path to the ASCII configuration file entry, the system downloads the specified configuration file from the USB port of the designated unit or, if no unit is designated, from the USB port of the base unit.

If the system cannot download the configuration file, or if the script does not execute successfully, the script operational status changes to `autoDownloadFailed` and the system downloads the next entry in the table.

When the configuration file downloads and executes without errors, the operational status for the entry changes to `autoDownloadPassed`.

---

## ASCII configuration file management using EDM

Use the following procedure to manage ASCII configuration files.

## Storing current ASCII configuration on a TFTP server using EDM

Use this procedure to store the current ASCII configuration on a TFTP server.

### Procedure

1. In the navigation tree, double-click **Edit** to open the Edit tree.
2. Double-click **File System**.
3. Click the **Ascii Config File** tab.
4. In **TftpServerInetAddressType** choose the TFTP server internet address type.
5. In **TFTPServerInetAddress**, enter the TFTP server IP address.
6. In **AsciiConfigFilename**, enter the configuration file name.
7. In **AsciiConfigManualUpload**, choose **uploadNow**.
8. On the toolbar, click **Apply**.

## Storing current ASCII configuration to SFTP server using EDM

Use this procedure to store the current ASCII configuration on a SFTP server.

### Procedure

1. In the navigation tree, double-click **Edit** to open the Edit tree.
2. Double-click **File System**.
3. Click the **Ascii Config File** tab.
4. In **TftpServerInetAddressType** choose the SFTP server internet address type.
5. In **TFTPServerInetAddress**, enter the SFTP server IP address.
6. In **AsciiConfigFilename**, enter the configuration file name.
7. In **AsciiConfigManualUpload**, choose **uploadToSftp**.
8. On the toolbar, click **Apply**.

### ASCII Config File field descriptions

The following table describes the fields on the Ascii Config File tab.

Name	Description
<b>TftpServerInetAddressType</b>	Specifies the IP version of the TFTP server address.
<b>TftpServerInetAddress</b>	Specifies the TFTP server IP address.
<b>AsciiConfigFilename</b>	Specifies the name of the ASCII configuration file.
<b>AsciiConfigManualUpload</b>	<ul style="list-style-type: none"> <li>• <b>uploadNow</b> — Initiates manual configuration upload</li> <li>• <b>uploadVerboseNow</b> —</li> <li>• <b>uploadToSftp</b> —</li> </ul>

## Downloading an ASCII configuration from a TFTP server using EDM

Use this procedure to download an ASCII configuration from a TFTP server.

### Procedure

1. In the navigation tree, double-click **Edit** to open the Edit tree.
2. Double-click **File System**.
3. Click the **Ascii Config File** tab.
4. In **TftpServerInetAddressType** field, choose the TFTP server internet address type .
5. In **TftpServerInetAddress** field, type the TFTP server IP address.
6. In **AsciiConfigFilename** field, type the configuration file name.
7. In **AsciiConfigManualDownload**, choose **downloadNow**.
8. On the toolbar, click **Apply**.

## Downloading an ASCII configuration from an SFTP server using EDM

### Procedure

1. In the navigation tree, double-click **Edit** to open the Edit tree.
2. Double-click **File System**.
3. Click the **Ascii Config File** tab.
4. In **TftpServerInetAddressType** field, choose the SFTP server internet address type .
5. In **TftpServerInetAddress** field, type the SFTP server IP address.
6. In **AsciiConfigFilename** field, type the configuration file name.
7. In **AsciiConfigManualDownload**, choose **downloadFromSftp**.
8. On the toolbar, click **Apply**.

## Downloading a configuration file automatically using EDM

Use this procedure to download a configuration file automatically.

### Procedure

1. In the navigation tree, double-click **Edit** to open the Edit tree.
2. Double-click **File System**.
3. Click the **Ascii Config File** tab.
4. In the **TftpServerInetAddressType** field, choose the TFTP server internet address type .
5. In the **AsciiConfigFilename** field, type the configuration file name.
6. In the **AsciiConfigAutoDownload** field, choose the automatic download source:
  - **useBootp**

- **useConfig**

7. On the toolbar, click **Apply**.

### ASCII Config File field descriptions

The following table describes the fields on the Ascii Config File tab.

Name	Description
<b>TftpServerInetAddressType</b>	Specifies the IP version of the TFTP server address.
<b>TftpServerInetAddress</b>	Specifies the TFTP server IP address.
<b>AsciiConfigFilename</b>	Specifies the name of the ASCII configuration file.
<b>AsciiConfigAutoDownload</b>	<ul style="list-style-type: none"> <li>• <b>disabled</b> — Disabled automatic loading of ASCII configuration file at startup</li> <li>• <b>useBootp</b> — Specifies loading the ASCII configuration file at startup and using BootP to obtain values for the TFTP address and file name</li> <li>• <b>useConfig</b> — Specifies loading the ASCII configuration file at startup and using the locally configured values for the TFTP address and file name</li> </ul>
<b>AsciiConfigAutoDldStatus</b>	Displays the configuration automatic download status

### Job aid—Config/Image/Diag file tab field descriptions

The following table provides information about fields on the Config/Image/Diag file tab.

Filename	Description
TftpServerInetAddressTyp	Specifies the IP version of the TFTP server address
TftpServerInetAddress	Specifies the TFTP server IP address
BinaryConfigFilename	Specifies the name of the binary configuration file
BinaryConfigUnitNumber	Specifies the unit number of a switch in a stack
ImageFileName	Specifies the software image file name
FWFileName(Diagnostics)	Specifies the diagnostics file name
Action	<ul style="list-style-type: none"> <li>• <b>dnldImg</b>—Downloads a new software image to the switch.</li> <li>• <b>dnldFw</b>—Downloads a new diagnostic software image to the switch.</li> <li>• <b>dnldFwFromSFTP</b>—Downloads a new diagnostic software image from SFTP</li> <li>• <b>dnldImgFromSftpNoReset</b>—Downloads the agent image from a SFTP server and does not reset the switch.</li> </ul>

*Table continues...*

Filename	Description
	<ul style="list-style-type: none"> <li>• <b>dnldConfig</b>—Downloads a configuration file to the switch.</li> <li>• <b>dnldImgIfNewer</b>—Downloads a new software image to the switch only if it is newer than the current image.</li> <li>• <b>dnldFwNoReset</b>—Downloads a new diagnostic software image to the switch without a switch reset.</li> <li>• <b>dnldConfigFromSftp</b>—Downloads a configuration to the switch from the SFTP server.</li> <li>• <b>dnldFwFromSftpNoReset</b>—Downloads the diagnostic image from a SFTP server and does not reset the switch.</li> </ul>
Status	Displays the status of the most recent action since last switch restart.

## Binary configuration file management using EDM

Use the following procedures to manage binary configuration files.

### Storing a binary configuration file on a TFTP server using EDM

Use this procedure to store a binary configuration file on a TFTP server.

#### Procedure

1. In the navigation tree, double-click **Edit** to open the Edit menu.
2. Double-click **File System**.
3. Click the **Config/Image/Diag file** tab.
4. In **TftpServerInetAddressType**, choose the TFTP server internet address type .
5. In **TftpServerInetAddress**, enter the TFTP server IP address.
6. In **BinaryConfigFilename**, enter the configuration file name.
7. In **Action**, select **upldConfig**.
8. On the toolbar, click **Apply**.

#### Config Image Diag file tab field descriptions

The following table describes the fields on the Config/Image/Diag file tab.

Name	Description
<b>TftpServerInetAddressType</b>	Specifies the IP version of the TFTP server address.
<b>TftpServerInetAddress</b>	Specifies the TFTP server IP address.
<b>BinaryConfigFilename</b>	Specifies the name of the binary configuration file.
<b>Action</b>	<ul style="list-style-type: none"> <li>• <b>dnldConfig</b>—Downloads a configuration file to the switch.</li> <li>• <b>upldConfig</b>—Uploads a configuration file to the switch from a designated location.</li> <li>• <b>dnldImg</b>—Downloads a new software image to the switch.</li> <li>• <b>dnldImgIfNewer</b>—Downloads a new software image to the switch only if it is newer than the current image.</li> <li>• <b>dnldImgNoReset</b>—Downloads a new software image to the switch without a switch reset.</li> <li>• <b>dnldFW</b>—Downloads a new diagnostic software image to the switch.</li> <li>• <b>dnldFwNoReset</b>—Downloads a new diagnostic software image to the switch without a switch reset.</li> </ul>
<b>Status</b>	Displays the status of the most recent action since the last switch restart.

## Storing a binary configuration file on a TFTP server using EDM

Use this procedure to store a binary configuration file on a TFTP server.

### Procedure

1. In the navigation tree, double-click **Edit** to open the Edit menu.
2. Double-click **File System**.
3. Click the **Config/Image/Diag file** tab.
4. In **BinaryConfigFilename**, enter the configuration file name.
5. In **BinaryConfigUnitNumber**, field enter the stack unit number or, for a stand-alone switch, enter 0.
6. In the **Action** field, click **upldConfigtoUsb**.
7. On the toolbar, click **Apply**.

## Downloading a binary configuration file on a TFTP server using EDM

Use this procedure to download a binary configuration file on a TFTP server.

**Procedure**

1. In the navigation tree, double-click **Edit** to open the Edit menu.
2. Double-click **File System**.
3. Click the **Config/Image/Diag file** tab.
4. In **TftpServerInetAddress**, enter the TFTP server IP address.
5. In **BinaryConfigFilename**, enter the configuration file name.
6. In **Action**, select **dnldConfig**.
7. On the toolbar, click **Apply**.

**Config Image Diag file tab field descriptions**

The following table describes the fields on the Config/Image/Diag file tab.

Name	Description
<b>TftpServerInetAddressType</b>	Specifies the IP version of the TFTP server address.
<b>TftpServerInetAddress</b>	Specifies the TFTP server IP address.
<b>BinaryConfigFilename</b>	Specifies the name of the binary configuration file.
<b>Action</b>	<ul style="list-style-type: none"> <li>• dnldConfig—Downloads a configuration file to the switch.</li> <li>• upldConfig—Uploads a configuration file to the switch from a designated location.</li> <li>• dnldImg—Downloads a new software image to the switch.</li> <li>• dnldImgIfNewer—Downloads a new software image to the switch only if it is newer than the current image.</li> <li>• dnldImgNoReset—Downloads a new software image to the switch without a switch reset.</li> <li>• dnldFW—Downloads a new diagnostic software image to the switch.</li> <li>• dnldFwNoReset—Downloads a new diagnostic software image to the switch without a switch reset.</li> </ul>

**Downloading an ASCII configuration from an SFTP server using EDM**

**Procedure**

1. In the navigation tree, double-click **Edit** to open the Edit tree.
2. Double-click **File System**.
3. Click the **Ascii Config File** tab.
4. In **TftpServerInetAddressType** field, choose the SFTP server internet address type .



5. In **TftpServerInetAddress** field, type the SFTP server IP address.
6. In **AsciiConfigFilename** field, type the configuration file name.
7. In **AsciiConfigManualDownload**, choose **downloadFromSftp**.
8. On the toolbar, click **Apply**.

---

## Saving current configuration to flash memory manually using EDM

Use this procedure to save the current configuration to flash memory manually.

### Procedure

1. In the navigation tree, double-click **Edit** to open the Edit tree.
2. Double-click **File System**.
3. Click the **Save Configuration** tab.
4. Deselect **AutosaveToNvramEnabled** — this option is enabled by default.
5. In **Action**, choose **copyConfigToNvram**.
6. On the toolbar, click **Apply**.

---

## Displaying USB file information using EDM

### About this task

Displays the general information of the files on a USB flash device.

### Procedure

1. From the navigation tree, click **Edit**.
2. Click **File System**.
3. Click the **USB Files** tab.