

# 5320 Series Extended Temperature Quick Reference

Follow these steps to get the switch ready for use.

For complete installation instructions for models 5320-24T-4X-XT and 5320-24T-24S-4XE-XT see the *5320 Series Hardware Installation Guide* at [www.extremenetworks.com/support/documentation](http://www.extremenetworks.com/support/documentation)

## Necessary Tools




- #2 Phillips screwdriver (magnetic screwdriver recommended)
- ESD-protective wrist strap

## 1 Prepare the Site


The installation site must meet the following requirements:

- Appropriately grounded power receptacles located within 1.8 m (6 ft).
- A readily accessible device for disconnecting power, such as a breaker or master switch.
- Network cabling within reach.
- Minimum clearance of at least 1.0 cm (0.39 in.) on all sides, for proper ventilation.
- Temperature between 0°C (32°F) and 60°C (140°F) -- or as noted in "Operating Temperature:" -- with fluctuations of less than 10°C (18°F) per hour.

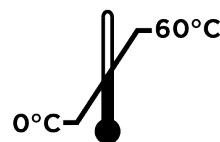

## 2 Unpack the Box

Remove the packing material, and verify that all of the following components are included:

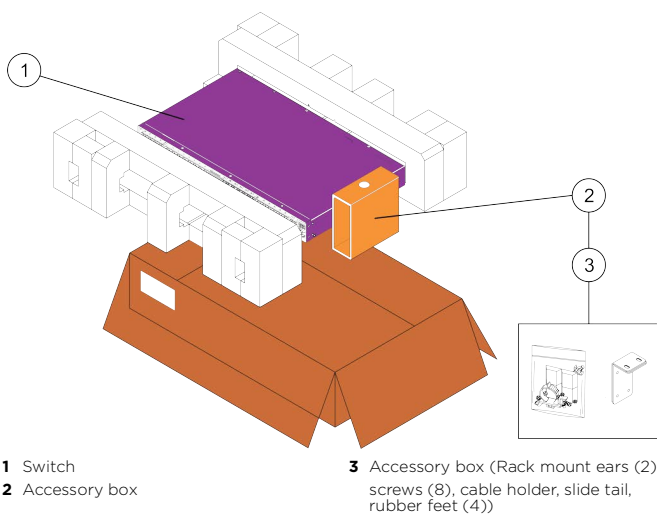

- Switch
- Accessory box
- Accessory box (Rack mount ears (2), screws (8), cable holder, slide tail, rubber feet (4))

If the switch appears to be damaged, contact Extreme Networks. See "Getting Help" for more information. Extreme Networks does not include power input cords with this product.

## 3 Install the 5320 Series XT

You can install any 5320 Series XT in a standard 19-inch equipment rack.

### Two-Post Rack Mount

The 5320 Series XT can be installed in a four-post rack, using just the two front posts or two back posts. This procedure uses a two-post mounting kit, which accommodates rack posts 3 inches or 6 inches wide. Rack ears can support both flush and mid-mount.

- Attach a mounting bracket to each side of the switch, using the screws provided. Align each mounting bracket so that the flange (ear) faces the front of the switch to flush-mount, or faces the rear of the switch to mid-mount.

Figure 1 5320 Series XT: Attach Flush-Mount Brackets


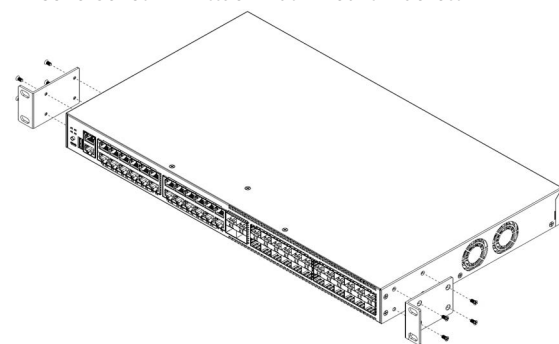


Figure 2 5320 Series XT: Attach Mid-Mount Brackets

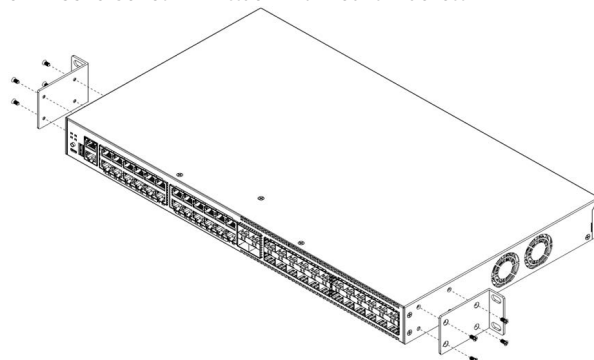

- With the mounting brackets attached, position the switch between the vertical rack rails of the 19-inch rack.
- Fasten the switch securely to the rack rails using four customer-supplied rack screws.

Figure 3 5320 Series XT: Flush-Mount in a Two-Post Rack


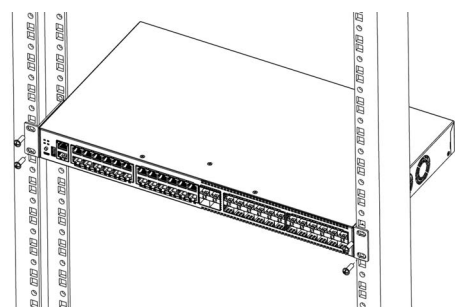


Figure 4 5320 Series XT: Mid-Mount in a Two-Post Rack



## 4 Install Transceivers

(Optional) Transceivers send and receive data over optical fiber rather than through electrical wires. You can insert transceivers or DAC cables into any of the switch's data ports.

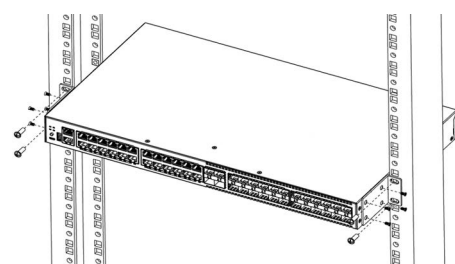

Note: Transceivers can be Class 1 or Class 1M laser devices.

To install a transceiver:

- Attach the ESD wrist strap to your wrist and connect the metal end to an appropriate ground point on the rack.
- Remove the transceiver from its packaging.
- If applicable, remove the protective dust cover from the connector.
- Hold the transceiver so that the connector will seat properly.
- Carefully align the transceiver with the port slot.
- Push the transceiver into the port slot until it clicks into place.

## 5 Connect Power

5320 Series XT switches run on AC power. Connect the switch to a primary power source.



Note: Installing the system as described in this guide meets the protective earth grounding requirements of the National Electrical Code (NEC), UL/CSA/IEC/EN 60950-1 standards. However, in some cases, it may be necessary to use an alternative grounding method. In these cases, a 14 AWG wire can be connected between the grounding lug on the chassis and a nearby building ground point.

### Connecting to the Primary Power Source

- To attach your 5320 Series XT to an AC power source, do the following:
- Connect the AC power cord to the AC power input socket on the power supply and an AC power outlet.
  - When power is connected, verify that the switch's power LEDs turn green. If the LEDs do not turn green, refer to *5320 Series Hardware Installation Guide* for troubleshooting information for models 5320-24T-24S-4XE-XT and 5320-24T-4X-XT.

The 5320 Series XT supports the option to attach an external 150W AC redundant power supply. To attach the RPS-150W-XT to a 5320 Series XT switch and an AC power source, see the *Redundant Power Supply Quick Reference*.

## 6 Update and Configure the Switch

Upgrade to a generally available (GA) version of the software before you use this unit. Switch Engine is the default operating system (OS) for the 5320 Series XT. To connect the switch to the network, upgrade it, and configure it for use, follow the steps in the *5320 Series Hardware Installation Guide*.


## Safety Notices




- Electrical Hazard:** Only qualified instructed or skilled personnel should perform installation, repair, or disassembly procedures.
- Risques d'électrocution:** Seul un personnel qualifié ou expérimenté peut effectuer les procédures d'installation, de réparation ou de démontage.
- Warning:** Extreme Networks power supplies do not have switches for turning the unit on and off. Before servicing, disconnect all power cords to remove power from the device. Make sure that these connections are easily accessible.
- Avertissement:** Les alimentations d'Extreme Networks n'ont pas d'interrupteurs pour allumer ou éteindre l'appareil. Avant l'entretien, débranchez tous les cordons d'alimentation pour couper l'alimentation de l'appareil. Assurez-vous que ces connexions sont facilement accessibles.
- Warning:** A dedicated listed circuit breaker rated at 15A is to be used for each power supply connection.
- Avertissement:** Un disjoncteur certifié 15A et dédié à l'installation doit être utilisé pour chaque connexion d'alimentation.
- Caution:** Before mounting the device, ensure that the rack can support it without compromising stability. Otherwise, personal injury or equipment damage may result.
- Caution:** Follow appropriate ESD procedures when unpacking and handling the switch. These include unpacking the switch in an ESD-safe environment and wearing appropriate ESD protective gear, such as ESD-safe footwear and ESD wrist straps where appropriate.
- Warning:** This unit must be installed indoors. The unit, AC power adapter, and its cables are not designed for outdoor use. **The PoE cables must not be distributed outside the building.**
- Caution:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Warning:** Do not use optical instruments to view the laser output. The use of optical instruments to view laser output increases eye hazard. Use only UL/CSA, IEC/EN60825-1/-2 recognized pluggable modules.
- Avertissement:** Ne pas utiliser d'instruments optiques pour regarder l'extrémité du laser. L'utilisation d'instruments optiques pour regarder l'extrémité du laser représente un danger pour les yeux. Utilisez uniquement des modules certifiés UL/CSA, IEC/EN60825-1/-2.

## Hardware Components

Figure 5 5320 Series XT: Front Panels  
Model 5320-24T-24S-4XE-XT

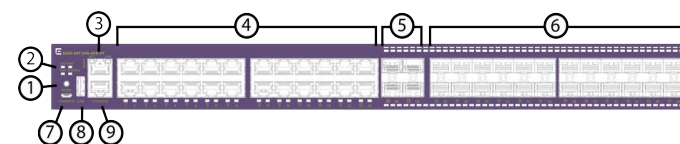


Model 5320-24T-4X-XT

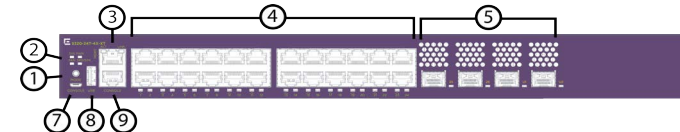

- Mode button
- System LEDs
- RJ-45 OOB management port
- 100fx/1G SFP ports
- Micro-B USB console port
- Type A USB port

- 10/100/1000BASE-T full/half duplex ports (MACsec capable on 5320-24T-24S-4XE-XT only)
- 1/10Gb SFP+ uplink/stack ports (MACsec capable on 5320-24T-24S-4XE-XT only)
- RJ-45 Serial console port

Figure 6 5320 Series XT: Rear Panel

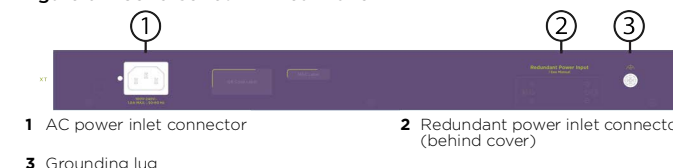

- AC power inlet connector
- Redundant power inlet connector (behind cover)
- Grounding lug

## Operating Conditions

### Operating Temperature:

0°C (32°F) to 60°C (140°F) up to 3000 m (10,000 ft)  
Temperature restrictions apply for some models at high altitudes. See the *5320 Series Hardware Installation Guide* for details.

### Storage Temperature:

-40°C to 70°C (-40°F to 158°F)

### Operating Relative Humidity:

5% to 95% (non-condensing)

## Interfaces

Each 5320 Series XT includes a USB Type B micro console port, an RJ-45 serial console port, a USB Type A port, and one fixed power supply unit. 5320 factory switches are pre-loaded with the Switch Engine OS. The following table lists the specific interfaces for each switch:

5320-24T-24S-4XE-XT	24 10/100/1000BaseT full/half duplex MACsec capable ports, 24 100fx/1G SFP ports, 4 1G/10G SFP+ ports, 2 fan modules, and an option to add an external 150W redundant AC PSU.
5320-24T-4X-XT	24 10/100/1000BaseT full/half duplex ports, 4 1G/10G SFP+ ports, 1 fan module, and an option to add an external 150W redundant AC PSU.

## Available Rack-Mount Kit

XN-2P-RMKIT-008	Two-post fixed rack-mount kit for 5320 Series XT models
-----------------	---

## Power Specifications

5320-24T-24S-4XE-XT	100-240Vac, 50-60 Hz, 1.0 A max. (for IPS) or 12Vdc, 5.0A max. (for RPS)
5320-24T-4X-XT	100-240Vac, 50-60 Hz, 0.7A max. (for IPS) or 12Vdc, 3.0A max. (for RPS)

## Power Supply Options

RPS-150W-XT	150W external redundant AC power supply, extended temperature, front-to-back airflow
-------------	--

## Available Console Cables and Bluetooth Adapter

XN-RJ45-USBC-CONSOLE-CBL	RJ45 to USB-C console cable (6ft)
XN-RJ45-USBA-CONSOLE-CBL	RJ45 to USB 2.0 Type A male console cable (6ft)
XN-RJ45-DB9-CONSOLE-CBL	RJ45 to DB9 console cable (6ft)
XN-MICRO-USB-USBA	Micro-USB 2.0 to USB 2.0 Type A cable (6.6 ft)
XN-USB-BT500-ADAPTER	Bluetooth 5.0 USB adapter

Note: Ordered separately

## Getting Help

For additional support related to 5320 Series XT switches or this document, contact Extreme Networks using one of the following methods:

<b>Product Documentation</b>	<a href="https://www.extremenetworks.com/documentation/">https://www.extremenetworks.com/documentation/</a>
<b>Global Technical Assistance Center (GTAC)</b>	Phone: 1-800-998-2408 (toll-free in U.S. and Canada) or +1-408-579-2826. For the support phone number in your country, visit: <a href="http://www.extremenetworks.com/support/contact/">http://www.extremenetworks.com/support/contact/</a>
<b>GTAC Knowledge</b>	Get on-demand and tested resolutions from the GTAC Knowledgebase, or create a help case if you need more guidance. Visit: <a href="https://gtacknowledge.extremenetworks.com/">https://gtacknowledge.extremenetworks.com/</a>
<b>The Hub</b>	A forum for Extreme customers to connect with one another, get questions answered, share ideas and feedback, and get problems solved. The community is monitored by Extreme Networks employees, but is not intended to replace specific guidance from GTAC. Visit: <a href="https://community.extremenetworks.com">https://community.extremenetworks.com</a>
<b>Support Portal</b>	Manage cases, downloads, service contracts, product licensing, and training and certifications. Visit: <a href="http://support.extremenetworks.com/">http://support.extremenetworks.com/</a>

## Notice

Copyright © 2023 Extreme Networks, Inc. All Rights Reserved.

### Legal Notices

Extreme Networks, Inc. reserves the right to make changes in specifications and other information contained in this document and its website without prior notice. The reader should in all cases consult representatives of Extreme Networks to determine whether any such changes have been made.

The hardware, firmware, software or any specifications described or referred to in this document are subject to change without notice.

### Trademarks

Extreme Networks and the Extreme Networks logo are trademarks or registered trademarks of Extreme Networks, Inc. in the United States and/or other countries.

All other names (including any product names) mentioned in this document are the property of their respective owners and may be trademarks or registered trademarks of their respective companies/owners. For additional information on Extreme Networks trademarks, please see: [www.extremenetworks.com/company/legal/trademarks/](http://www.extremenetworks.com/company/legal/trademarks/)

## Warranty

Warranty information for 5320 Series XT is located online at: [www.extremenetworks.com/support/policies/](http://www.extremenetworks.com/support/policies/)

## Regulatory and Compliance Information

### Federal Communications Commission (FCC) Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment uses, generates, and can radiate radio frequency energy and if not installed in accordance with the operator's manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause interference in which case the user will be required to correct the interference at his own expense.

**WARNING:** Changes or modifications made to this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Industry Canada Notice CAN ICES-003(A)/NMB-003(A)

This digital apparatus does not exceed the class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le Règlement sur le brouillage radioélectrique dicté par le Ministère des Communications du Canada.

### Class A ITE Notice

**WARNING:** This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

### Product Safety

This product complies with the following international safety standards:

- UL 62368-1
- UL 60950-1
- CAN/CSA C22.2 No. 62368-1:19, 3rd Ed

- CAN/CSA C22.2 No. 60950-1-07
- IEC/EN 62368-1
- 2014/35/EU
- CNS 15598-1
- IEC 60950-1
- GB 4943.1

### Optical Module Compliance

Extreme Networks pluggable optical modules and direct-attach cables meet the following regulatory requirements:

- UL and/or CSA registered component for North America
- Class 1 or Class 1M Laser Product
- FCC 21 CFR Chapter 1, Sub-chapter J in accordance with FDA & CDRH requirements
- IEC/EN 60825-1:2014, IEC/EN 60825-2:2004+A1+A2 or later, European Standard

### Korea EMC Statement

이 기기는 업무용 환경에서 사용할 목적으로 적

합성평가를 받은 기기로서 가정용 환경에서 사

용하는 경우 전파간섭의 우려가 있습니다.

### Australia (RCM)


**WARNING:** This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

### Electromagnetic Compatibility (EMC)

This product complies with the following: FCC 47 CFR Part 15 Subpart B Class A (US), ICES-003 (Canada), EN 55032 (ITE Emissions), EN 55035 (ITE Immunity), EN 61000-3-2 (Harmonics), EN 61000-3-3 (Flicker), 2014/30/EU (EMC Directive), EN 300 386 (Telecom), EN 55011 (ISM), RCM (Australia), VCCI (Japan), MSIP KCC (Korea), BSMI (Taiwan), ANATEL (Brazil), CQC (China), TEC (India).

### VCCI Notice

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

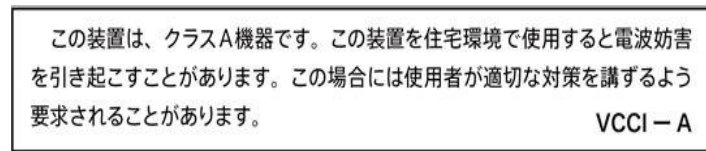

### BSMI EMC Statement – Taiwan

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Taiwan BSMI 報關義務人

申請人：愛爾蘭商極進網絡技術行動有限公司台灣分公司

地址：臺北市松山區南京東路4段126號5樓

警告：在居住环境中, 运行此设

备可能会造成无线电干扰。

警告:為避免電磁干擾, 本產品

不應安裝或使用於住宅環境。

### Battery Warning – Taiwan 警告

如果更換不正確之電池型式會有爆炸的風險，

請依製造商說明書處理用過之電池。



### Battery Notice

**Warning:** This product contains a battery used to maintain product information. If the battery should need replacement it must be replaced by Service Personnel. Please contact Technical Support for assistance.

Risk of explosion if battery is replaced by an incorrect type. Dispose of expended battery in accordance with local disposal regulations.

**Avertissement:** Ce produit renferme une pile servant à conserver les renseignements sur le produit. Le cas échéant, faites remplacer la pile par le personnel du service de réparation. Veuillez communiquer avec l'assistance technique pour du soutien.

Il y a risque d'explosion si la pile est remplacée par un type de pile incorrect. Éliminez les piles usées en conformité aux règlements locaux d'élimination des piles.

### Hazardous Substances- China and Taiwan BSMI RoHS

Guidance concerning the China and Taiwan BSMI RoHS (Restriction of Hazardous Substances) directive for this Extreme Networks® product can be obtained on request.

### Hazardous Substances - EU

This product complies with the requirements of Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

### European Waste Electrical and Electronic Equipment (WEEE) Notice



In accordance with Directive 2012/19/EU of the European Parliament on waste electrical and electronic equipment (WEEE):

- The symbol above indicates that separate collection of electrical and electronic equipment is required.
- When this product has reached the end of its serviceable life, it cannot be disposed of as unsorted municipal waste. It must be collected and treated separately.
- It has been determined by the European Parliament that there are potential negative effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment.
- It is the users' responsibility to utilize the available collection system to ensure WEEE is properly treated.

For information about the available collection system, please contact Extreme Customer Support at +353 61 705500 (Ireland).

# Extreme Networks

## 5320 Series Extended Temperature

### Quick Reference

## 5320-24T-24S-4XE-XT

## 5320-24T-4X-XT

### ExtremeCloud™ IQ

Scan to learn more about **ExtremeCloud IQ** and **ExtremeCloud IQ - Site Engine**.

Your new switch can be managed by ExtremeCloud IQ if cloud management is preferred as well as ExtremeCloud IQ - Site Engine if locally deployed management is preferred.



P/N 9037902-00 Rev. AA

