Ethernet Routing Switch
4800, 8800

Virtual Services Platform
4000, 7000, 8000, 9000

Engineering

> Shortest Path Bridging (802.1aq) Technical Configuration Guide

Avaya Data Solutions

Document Date: January 2015

Document Number: NN48500-617

Document Version: 3.0

© 2015 Avaya Inc.
All Rights Reserved.

Notices
While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

Documentation disclaimer
Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of this documentation unless such modifications, additions, or deletions were performed by Avaya. End User agree to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

Link disclaimer
Avaya is not responsible for the contents or reliability of any linked Web sites referenced within this site or documentation(s) provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warranty
Avaya provides a limited warranty on this product. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this product, while under warranty, is available to Avaya customers and other parties through the Avaya Support Web site: http://www.avaya.com/support
Please note that if you acquired the product from an authorized reseller, the warranty is provided to you by said reseller and not by Avaya.

Licenses
THE SOFTWARE LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE, HTTP://SUPPORT.AVAYA.COM/LICENSEINFO/ ARE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS AVAYA SOFTWARE, PURCHASED FROM AVAYA INC., ANY AVAYA AFFILIATE, OR AN AUTHORIZED AVAYA RESELLER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH AVAYA OR AN AUTHORIZED AVAYA RESELLER. UNLESS OTHERWISE AGREED TO BY AVAYA IN WRITING, AVAYA DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN AVAYA, AN AVAYA AFFILIATE OR AN AVAYA AUTHORIZED RESELLER, AND AVAYA RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND AVAYA INC. OR THE APPLICABLE AVAYA AFFILIATE ("AVAYA").

Copyright
Except where expressly stated otherwise, no use should be made of the Documentation(s) and Product(s) provided by Avaya. All content in this documentation(s) and the product(s) provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Avaya can be a criminal, as well as a civil offense under the applicable law.

Third Party Components
Certain software programs or portions thereof included in the Product may contain software distributed under third party agreements ("Third Party Components"), which may contain terms that expand or limit rights to use certain portions of the Product ("Third Party Terms"). Information regarding distributed Linux OS source code (for those Products that have distributed the Linux OS source code), and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply to them is available on the Avaya Support Web site: http://support.avaya.com/Copyright.

Trademarks
The trademarks, logos and service marks ("Marks") displayed in this site, the documentation(s) and product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the documentation(s) and product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party. Avaya is a registered trademark of Avaya Inc. All non-Avaya trademarks are the property of their respective owners.

Downloading documents
For the most current versions of documentation, see the Avaya Support. Web site: http://www.avaya.com/support

Contact Avaya Support
Avaya provides a telephone number for you to use to report problems or to ask questions about your product. The support telephone number is 1-800-242-2121 in the United States. For additional support telephone numbers, see the Avaya Web site: http:// www.avaya.com/support.

Abstract

This Technical Configuration Guide provides an overview and examples on configuring various items related to Shortest Path Bridging (SPB) support on the VSP 4000, VSP 7000, VSP 9000, ERS 4800, and ERS 8800.

Acronym Key

Throughout this guide the following acronyms will be used:

- AS : Autonomous System
- B-MAC : Backbone MAC
- B-VID : Backbone VLAN identifier
- BCB : Backbone Core Bridge
- BEB : Backbone Edge Bridge
- C-MAC : Customer MAC
- CFM : Connectivity Fault Management
- GRT : Global Route Table
- I-SID : Backbone Service Instance Identifier; IEEE 802.1ah
- IPVPN : IP Virtual Private Network
- IS-IS : Intermediate System to Intermediate System
- IST : Inter Switch Trunk (Avaya SMLT Clustering)
- L2 VSN : Layer 2 Virtual Services Network
- L3 VSN : Layer 3 Virtual Services Network
- LLDP : Link Layer Discovery Protocol; IEEE 802.1AB
- LSDB : Link State Data Base
- MAC : Media Access Control
- MLT : Multi Link Trunk
- BCB : Backbone Core Bridge
- SMLT : Split MLT (Avaya Clustering)
- SPB : Shortest Path Bridging
- SPBM : Shortest Path Bridging MAC
- TLV : Type Length Value
- VID : VLAN identifier
- VLACP : Virtual LACP
- VLAN : Virtual LAN
- VPN : Virtual Private Network

Revision Control

No	Date	Version	Revised By	Remarks
1	12/21/2010	1.0	PRMGT	Modifications to Software Baseline section
2	2/28/2011	1.1	PRMGT	Remove reference to BEB to BCB.
3	3/15/2011	1.2	PRMGT	Remove reference to InterISID Routing and Native IP shortcuts. Changed to InterVSN routing and GRT Shortcuts
4	4/14/2011	1.3	PRMGT	Added SPBM IP enabled for configuration example SPB L3 VSN in reference to ERS-1
5	8/25/2011	1.4	PRMGT	Changes to SPBM NNI SMLT diagrams
6	11/21/2011	1.5	John Vant Erve	Changed name from GRT shortcuts to IP Shortcuts. Added changes to CFM provisioning made in release 7.1.1.0. Note regarding SPB sys-name.
7	6/27/2012	1.6	John Vant Erve	Added SPB multicast related information and configuration examples. Added addition information pertaining to the VSP 9000.
8	4/8/2013	2.0	John Vant Erve	Added VSP 4000 and VSP 7000. Updated the configuration examples
9	8/8/2013	2.1	John Vant Erve	Adding configuration changes regarding Spanning Tree on SPB NNI ports in configuration examples
10	4/7/2014	2.2	John Vant Erve	Added ERS 4800 and VSP 8000.
11	12/5/2014	3.0	John Vant Erve	Add vIST, IPv6 Shortcuts, and ISIS accept policy.

Table of Contents

Figures 9
Tables 10
1. Overview 12
1.1 Evolution of Ethernet Bridging 12
1.2 SPB Benefits 14
2. SPB Terminology 17
2.1 SPB 17
2.2 SPBM 17
2.3 IS-IS 17
2.4 B-VLAN 17
2.5 B-MAC (System ID) 18
2.6 System ID Value 19
2.7 Backbone Edge Bridges (BEB) and Backbone Core Bridges (BCB) 20
2.8 Connectivity Fault Management (CFM) 20
3. SPB Support Topologies 23
3.1 SPB L2 VSN 23
3.2 SPB L3 VSN 24
3.3 Inter VSN Routing 25
3.4 SPB IP Shortcuts 26
4. UNI Types 27
4.1 L2VSN – C-VLAN UNI 27
4.2 L2VSN – Switched UNI 28
4.3 L2VSN – Transparent UNI 29
4.4 UNI Type – Example 30
5. Summary of SPB Features and Product Release Matrix 31
6. SPB Feature and License Matrix 32
7. Migration & Upgrades 33
7.1 Common Upgrade instructions 33
7.2 Upgrade from Pre-5.1 releases for the ERS 8800 33
7.3 Upgrade and SMLT Cluster 33
7.4 VSP 4000 and ERS 4850 33
7.5 VSP 7000 34
7.6 Activating SPB 36
7.7 Migrating traffic to SPB 38

7.8 Multicast 39
7.9 Migrating a VLAN to an L2 VSN 41
7.9.1 Migrating to Inter VSN Routing 41
7.10 VSP 9000 Notes 42
8. Field Introduction & Support Specifications 43
8.1 Hardware and Deployment Specifications 43
8.2 Installation and Commissioning Specifications 43
8.3 Interoperability and Backwards / Forward Compatibility Specifications 43
9. VSP 7000 – Fabric Interconnect 44
10. ISIS Metrics - Optional 46
11. ISIS Accept Policy 47
12. SPB SMLT BEB Design Best Practices 48
12.1 SMLT BEB – C-VLAN Guidelines for L2VSN 48
12.2 SMLT BEB – Virtual Inter-Switch Trunk (vIST) 49
12.3 SMLT BEB – ISIS Hello Timer Guidelines for ERS 8800 50
12.4 SMLT BEB – RSMLT 51
12.5 SMLT BEB – VLACP Guidelines 52
12.6 SMLT BEB – VSP 7000 Guidelines 53
12.7 SLPP Guard – ERS 4800 53
13. SPB NNI SMLT – migrating existing SMLT network to SPB 54
14. IS-IS TLV 58
15. SPB Best Practices 59
16. SPB Configuration 61
16.1 SPB Configuration 62
16.1.1 ERS 8800 – Converting from CLI to ACLI 62
16.1.2 SPB and IS-IS Core Configuration 62
16.1.3 SPB NNI Interface Configuration 65
16.1.4 CFM Configuration 67
16.1.5 VSP 7000 – Fabric Interconnect Mesh 68
16.1.6 SMLT – Normal IST 69
16.1.7 SMLT - Virtual IST (vIST) 71
16.1.8 L2VSN Configuration 73
16.1.9 SwitchedUNI Configuration 74
16.1.10 Transparent UNI Configuration 75
16.1.11 L3VSN Configuration 77
16.1.12 L3VSN – leaking routes between VRF's 79
16.1.13 IP Shortcuts 80

16.1.14 IP Shortcut– Suppress IST Network 81
16.1.15 IP Shortcuts – leaking routes between GRT and VRF 82
16.1.16 IP Shortcuts – redistribion of ISIS and OSPF 83
16.1.17 Inter-VSN Routing 85
16.1.18 IPv6 Shortcuts 87
16.1.19 SPB Multicast Configuration 89
16.1.20 Multicast 239.255.255/24 – UpnP Filtering 92
16.1.21 Connectivity Fault Management (CFM) Configuration 94
16.1.22 CFM Configuration Example – 7.1.1.x or higher 96
16.2 Using EDM 97
16.2.1 IS-IS and SPB Configuration 97
16.2.2 VSN Configuration 100
16.2.3 Connectivity Fault Management (CFM) Configuration – release 7.0 or 7.1.1. 103
17. Configuration Examples 107
17.1 SPB – Core Setup 107
17.1.1 Configuration 109
17.1.2 Configuration using EDM – Using 8005 as an example 138
17.1.3 Verify Operations 146
17.2 SMLT Configuration 172
17.2.1 Verify Operations 175
17.3 SPB L2 VSN Configuration 177
17.3.1 VLAN configuration 178
17.3.2 Layer 2 VSN configuration 179
17.4 VSP 7000 & ERS 4800 – In-band Management via L2VSN 186
17.5 Multicast over L2VSN 189
17.5.1 Enable SPB Multicast – Global 190
17.5.2 Enable IGMP 190
17.5.3 Verify Operations 192
17.6 Inter VSN Routing 199
17.7 Inter-ISID Configuration 200
17.7.1 VRF configuration 200
17.7.2 Verification 201
17.8 SPB L3 VSN – SMLT 206
17.8.1 SPB IP Enable 207
17.8.2 VLAN Configuration 208
17.8.3 IPVPN Configuration 209
17.8.4 Enable L3VSN Configuration 211
17.8.5 Enable direct interface redistribution 212

17.8.6 Verify Operations 213
17.9 Extending L3VSN to the VSP 7000 Cluster via L2VSN 224
17.9.1 L2VSN Configuration 225
17.9.2 VRF Configuration 225
17.9.3 Verify Operations 226
17.10 Multicast over L3VSN 229
17.10.1 Enable SPB Multicast – Global 230
17.10.2 Enable Multicast VPN 230
17.10.3 Enable L3 SPB Multicast 230
17.10.4 Enable IGMP 230
17.10.5 Edge Switch 231
17.10.6 Verify Operations 232
17.11 SPB IP Shortcuts 240
17.11.1 IS-IS Layer 3 configuration 241
17.11.2 ECMP 245
17.11.3 Local VLAN configuration 245
17.11.4 Verify Operations 247
17.12 Multicast over IP Shortcuts 251
17.12.1 IP Shortcuts Multicast configuration 252
17.12.2 Enable IP Multicast at VLAN level 252
17.13 Verify Operations 253
17.13.1 Global Settings 253
17.13.2 Verify IGMP cache/group and senders 254
17.13.3 Verify SPB Multicast Routes 256
17.13.4 Verify multicast TLV's 257
17.13.5 Trace Multicast Routes 259
18. Restrictions and Limitations 261
18.1 STP/RSTP/MSTP 261
18.2 SPB IS-IS 261
19. Reference Documentation 262

Figures

Figure 1: SPBM Service Type Encapsulations 15
Figure 2: SPB L2 VSN 23
Figure 3: SPB L3 VSN 24
Figure 4: Inter VSN Routing 25
Figure 5: SPB IP Shortcuts 26
Figure 7 – FI Rear Port Details 44
Figure 8: NNI - Triangle 54
Figure 9: NNI - SMLT Triangle A 54
Figure 10: NNI – SMLT Triangle B 55
Figure 11: NNI –Square A 55
Figure 12: NNI – Square B 55
Figure 13: NNI – SLT Square 55
Figure 14: NNI – SMLT Square 56
Figure 15: NNI – Full Mesh A 56
Figure 16: NNI – Full Mesh B 56
Figure 17: NNI – SMLT Full Mesh A 56
Figure 18: NNI – SMLT Full Mesh B 57

Tables

Table 1: IEEE Standards culminating with SPBM 13

Conventions

This section describes the text, image, and command conventions used in this document.

Symbols



Tip – Highlights a configuration or technical tip.



Note – Highlights important information to the reader.



Warning – Highlights important information about an action that may result in equipment damage, configuration or data loss.

Text

Bold text indicates emphasis.

Italic text in a Courier New font indicates text the user must enter or select in a menu item, button or command:

```
ERS5520-48T# show running-config
```

Output examples from Avaya devices are displayed in a Lucida Console font:

```
ERS5520-48T# show sys-info

Operation Mode:          Switch
MAC Address:             00-12-83-93-B0-00
PoE Module FW:           6370.4
Reset Count:             83
Last Reset Type:         Management Factory Reset
Power Status:            Primary Power
Autotopology:            Enabled
Pluggable Port 45:       None
Pluggable Port 46:       None
Pluggable Port 47:       None
Pluggable Port 48:       None
Base Unit Selection:     Non-base unit using rear-panel switch
sysDescr:                Ethernet Routing Switch 5520-48T-PWR
                         HW:02       FW:6.0.0.10  SW:v6.2.0.009
                         Mfg Date:12042004    HW Dev:H/W rev.02
```

1. Overview

1.1 Evolution of Ethernet Bridging

The evolution of Ethernet technologies continues with the IEEE 802.1aq standard of Shortest Path Bridging. This next generation virtualization technology will revolutionize the design, deployment and operations of the Enterprise Campus core networks along with the Enterprise Data Centre. The benefits of the technology will be clearly evident in its ability to provide massive scalability while at the same time reducing the complexity of the network. This will make network virtualization a much easier paradigm to deploy within the Enterprise environment.

Shortest Path Bridging brings the features and benefits required by Carrier grade deployments to the Enterprise market without the complexity of alternative technologies traditionally used in Carrier deployments (typically MPLS).

The IEEE has been working on Layer 2 virtualization techniques over the last decade. It had standardized a set of solutions that built on each other and continuously addressed the predecessor's disadvantages.

In 1998, IEEE 802.1Q provided a simple way to virtualize Layer 2 broadcast domains by using VLAN tagging to form Virtual LANs. The 12 bits that are available in the 802.1Q defined header provided the ability to separately transport 4096 individual virtual LANs.

The loop free topology had been provided through IEEE 802.1D spanning tree and later rapid spanning tree (RSTP) and multiple spanning tree (MSTP) extensions. However, spanning tree is not the technology of choice for large network deployments.

Carrier deployments wanted to leverage the cost points of Ethernet and wanted to use the virtual LAN technology. In order to improve scalability, the IEEE introduced the QinQ approach, where the header had been extended to provide a carrier tag attached to a customer tag (QinQ). This allowed the carrier to transport customer tagged traffic over its Ethernet based 802.1ad backbone. However in large deployments this technology did not scale well, because the carrier's backbone still "saw", and thus learned, all the end-customer MAC addresses (C-MAC).

In order to overcome this scaling limitation, the IEEE standardized 802.1ah (also known as Provider Backbone Bridging – BCB) in 2008 which introduced a new header encapsulation to hide the customer MAC addresses inside an additional backbone MAC header (MACinMAC encapsulation).

In addition to this, the new header also includes a service instance identifier (I-SID) with a length of 24 bits. This I-SID can be used to identify any virtualized traffic across an 802.1ah encapsulated frame. In 802.1ah, these I-SIDs are used to virtualize VLANs across a BCB network. The "hiding/encapsulating" of customer MAC addresses in backbone MAC addresses greatly improves network scalability (no end-user C-MAC learning required in the core) and also significantly improves network robustness (loops have no effect on the backbone infrastructure).

So BCB addressed the scaling issues of virtualizing and transporting VLANs across a provider backbone. Yet, within that backbone, even with BCB, the loop free topology still had to be provided by 802.1D Spanning Tree (or RSTP or MSTP).

With the latest 802.1aq Shortest Path Bridging MacInMac (SPBM) standard this final limitation is being lifted via the development of a new link-stated based technology.

Standard	Year	Name	Loop free Topology by:	Service IDs	Provisioning	Virtualization of
IEEE 802.1Q	1998	Virtual LANs (VLAN Tagging)	Spanning Tree SMLT	4096	Edge and Core	Layer 2
IEEE 802.1ad	2005	Provider Bridging (QinQ)	Spanning Tree SMLT	4096x4096	Edge and Core	Layer 2
IEEE 802.1ah	2008	Provider Backbone Bridging (MacInMac)	Spanning Tree SMLT	16 Million	Edge and Core	Layer 2
IEEE 802.1aq	2011	Shortest Path Bridging (SPBM)	Link-State-Protocol (IS-IS)	16 Million	Only Service Access Points	IEEE: Layer 2 IETF draft: Layer 3 Unicast & Multicast

Table 1: IEEE Standards culminating with SPBM

SPBM is based on the 802.1ah encapsulation schema but does not depend on spanning tree to provide a loop free Layer 2 domain, instead it uses the nodal based IS-IS topology protocol. The IEEE is reworking the spanning tree specification 802.1D to include the new SPB solution. The intention is that once the standard is implemented in network products, the network operator will be able to choose a shortest path bridging topology protocol or the legacy root tree based option.

In addition to the Layer 2 virtualization support that SPBM provides, the model is being extended to also support Layer 3 virtualization via the IETF Draft IP/SPB-Unbehagen. Where L2 virtualization associates an I-SID to an edge VLAN in such a way as to extend that VLAN across the backbone, with the L3 extension a VRF can also be associated to an I-SID in such a way as to extend a virtualized L3 routing instance across the backbone.

Avaya also enhanced the SPBM capability by adding multicast support which greatly simplify the multicast deployment and provide resiliency to multicast at the same time.

In summary, SPBM brings to the Enterprise network the features, functionalities and scalability demanded by carriers via the use of a single simple and dynamic link state routing protocol which is IS-IS.

1.2 SPB Benefits

The benefits that SPB brings to the Enterprise network can be listed as follows.

- Backbone provisioning simplicity

Provisioning an SPB core is as simple as enabling SPB and IS-IS globally on all the nodes and on the core facing links. The IS-IS protocol operates at layer 2, it does not need IP addresses configured on the links to form IS-IS adjacencies with neighboring switches (like OSPF does). Hence there is no need to configure any IP addresses on any of the core links.

- Natively provides virtualized Layer 2 services

Layer 2 virtualization is handled by the Backbone Edge Bridges (BEBs) where the end-user VLAN is mapped into a Backbone Service Instance Identifier (I-SID) by local provisioning. Any BEB that has the same I-SID configured can participate in the same L2 virtual services network (VSN). IS-IS within the SPB backbone is used as the Layer 2 routing protocol to forward traffic between the BEB and Provider Backbone Core Bridges (BCBs). Only the BEB has knowledge of the L2 VSN and corresponding MAC addresses. The BCB only has knowledge of each Backbone MAC address (B-MAC) used to send traffic across an SPB network.

- Natively provides virtualized routing services

Layer 3 virtualized routing is handled by the Backbone Edge Bridges (BEBs) where the end-user IPv4 enabled VLAN or VLANs are mapped to a Virtualized Routing and Forwarding (VRF) instance. The VRF in turn is mapped into a Backbone Service Instance Identifier (I-SID) by local provisioning. Any BEB that has the same I-SID configured can participate in the same L3 virtual service network (VSN). IS-IS within the SPB backbone is used as the Layer 2 routing protocol to forward traffic between the BEB and Backbone Core Bridges (BCB). Only the BEB has knowledge of the L3 VSN and corresponding IP/ARP/MAC addresses. The BCB only has knowledge of each Backbone MAC address (B-MAC) used send traffic across an SPB network.

- Adapts to any physical layer / fibre plant

IS-IS is a link-state protocol which will compute the shortest open path just like OSPF does. It can therefore be deployed on any regular (e.g. square or fully meshed core-to-distribution topologies) or irregular (e.g. ring topologies) fibre plants.

Whereas OSPF computes the shortest path to destination subnets and then populates the IP routing table with the results, IS-IS (as used with SPB) computes the shortest path to backbone node MAC addresses (B-MACs) and then populates the backbone MAC tables.

- Robust/Scalable link-state routing applied to MAC tables

With SPB, the MAC table is now only populated by the IS-IS control plane. The conventional Ethernet bridging behavior which consisted of (a) “learning” the MAC tables with the source MAC address of packets seen arriving on local ports and (b) flooding unknown and broadcast traffic to all ports no longer apply in an SPB backbone.

Furthermore, with SPB, IS-IS is leveraged to build source based forwarding trees for the delivery of multicast and broadcast traffic across the SPB backbone in such a way that the replication of broadcast/multicast traffic within the core is optimized to follow the shortest path from source to leaf nodes.

- Separation between Services and Backbone

Since SPB leverages the MACinMAC encapsulation of 802.1ah (BCB) only the nodes at the edge of the SPB backbone (the Backbone Edge Bridges - BEBs) need to learn the MAC addresses (C-MACs) used within the transported Customer VLANs (L2VSNs). These same nodes, when forwarding traffic into the SPB core will always re-encapsulate the service traffic in a Backbone MAC header with a destination B-

MAC corresponding to the destination SPB node across the backbone where the service traffic will get de-capsulated. The encapsulation used is shown in Figure 1. As such, the nodes within the SPB backbone will have no knowledge of the addresses used within the service VSNs (C-MACs or IP addresses) transported across and only need to provide reachability to the B-MAC addresses within the backbone.

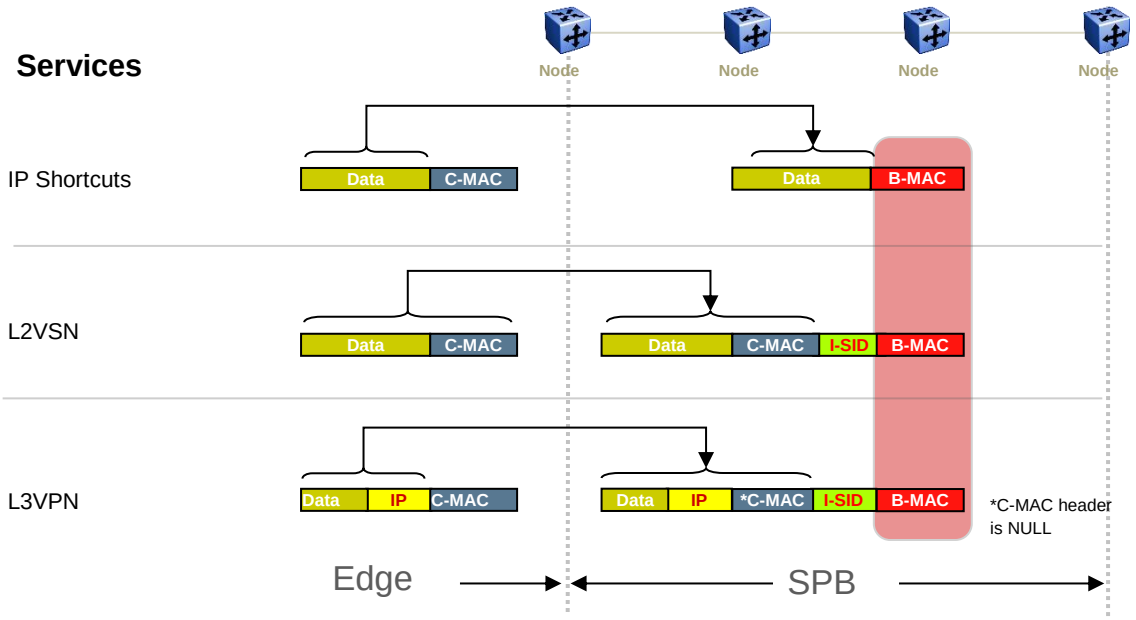


Figure 1: SPBM Service Type Encapsulations

- Connectivity Fault Management

Connectivity Fault Management (CFM) offers loopbacks and link trace for troubleshooting, and continuity checks for fast fault detection. Presently only the loopback and link trace features of CFM are supported. These commands allow operators, service providers and customers to verify the connectivity that they provide or utilize and to debug systems. This is accomplished through:

- Loopback messaging to an intermediate or endpoint within a domain for the purpose of fault verification. (LBM)
- Linktrace messaging to a maintenance endpoint with intermediate points responding to indicate the path of the traffic within a domain for the purpose of fault isolation. (LTM)
- End-point provisioning

The boundary between the MACinMAC SPB domain and 802.1Q domain is handled by the Backbone Edge Bridges (BEBs). At the BEBs, VLANs or VRFs are mapped into I-SIDs based on the local service provisioning.

Services (whether L2 or L3 VSNs) only need to be configured at the edge of the SPB backbone (on the BEBs). There is no provisioning needed on the core SPB nodes. This provides a robust carrier grade architecture where configuration on the core nodes never needs to be touched when adding new services.

- Service provisioning simplicity

The same simplicity extends to provisioning the services to run above the SPB backbone. Creating an L2VSN is as simple as associating an I-SID number with an edge VLAN; creating an L3VSN is as simple as associating an I-SID number with a VRF and configuring the desired IS-IS IP route redistribution within the newly created L3VSN.

- Multicast

Multicast over SPB is supported on the ERS 8800 beginning in the 7.2 release, on the VSP 4000 in the 3.1 release, the VSP 9000 in the 3.4 release and the VSP 8000 in the 4.1 release. Multicast is supported over SPB by globally enabling the feature and just enabling IGMP at the SPB edge. There is no need for any multicast routing protocols such as PIM, hence, multicast over SPB greatly simplifies multicast deployment. A multicast stream can be forwarded anywhere in a SPB network where IS-IS is used to advertise the stream to the rest of the fabric. Note that the stream is not forwarded until a receiver requests to join a specific multicast group and it is only forwarded to those receivers who requested it.

2. SPB Terminology

2.1 SPB

Shortest Path Bridging (SPB) is being standardized by the IEEE as the next evolution step. It provides shortest path forwarding using layer 2 to provide shortest path forwarding. SPB uses the IS-IS protocol operating at layer 2 allowing for large networks with fast convergence, equal cost paths, and easy provisioning without having to add complex addition protocols in the core to support virtualization of VLAN's or VRF's. In summary, all that is needed is to enable SPB and IS-IS in the core and all the virtualization is done on the edge.

2.2 SPBM

The 802.1aq standard supports two modes, SPB VID (SPBV) and SPB MAC (SPBM). Only SPBM supports true virtualization via the use of the 802.1ah MAC-in_MAC encapsulation. SPBV offers shortest path forwarding but with reduced functionality using 802.1ad Q-in-Q tagging for devices which cannot support the 802.1ah MAC-in-MAC encapsulation. All Avaya SPB capable switches support exclusively SPBM. SPBM virtualized services are delineated by I-SIDs where the I-SID is simply assigned at the BEB to either a VLAN for virtualized layer 2 services or to a VRF for virtualized layer 3 services.

In a SPBM network, each bridge advertises its own unique MAC address using IS-IS which is known as the system-id. The system-id can also be manually provisioned to ease in trouble shooting when looking at the layer 2 forwarding table.

2.3 IS-IS

Provisioning an SPB core is as simple as enabling SPB and IS-IS globally on all the nodes and configuring SPB IS-IS interfaces on the core facing links (NNI links). The IS-IS protocol operates at layer 2, it does not need IP addresses configured on the links to form IS-IS adjacencies with neighboring switches (like OSPF does). Hence, there is no need to configure any IP addresses on any of the core links.

IS-IS is a link-state protocol which will compute the shortest open path just like OSPF does. It can therefore be deployed on any regular (e.g. square or fully meshed core-to-distribution topologies) or irregular (e.g. ring topologies) fibre plants.

2.4 B-VLAN

Each SPBM network instance is associated with at least one backbone VLAN (B-VLAN) in the core SPBM network.

This VLAN is used for both control plane traffic and dataplane traffic.



Avaya recommends to always configuring two B-VLANs in the core to allow load distribution over both B-VLANs.

SPBM alters the behavior of the VLAN. When a B-VLAN is associated with an SPBM network the following VLAN attributes and behaviors are modified for the B-VLAN:

- Flooding is disabled
- Broadcasting is disabled

- Source address learning is disabled
- Unknown mac discard is disabled

Essentially the VLAN becomes a header indicating the SPBM network to use.

Modification of the VLAN behavior is necessary to ensure proper control over the SPBM traffic.



Although it is recommended to use BVIDs that are in the upper range, using a BVID less than 4000 may have to be used if tunneling SPB across an MPLS or IP network via a router GRE tunnel. For example, the Ayava Secure Router supports VLAN tunneling via GRE with a restriction of allowing only VLAN ID's of less than 4000.

2.5 B-MAC (System ID)

Whereas OSPF computes the shortest path to destination subnets and then populates the IP routing table with the results, IS-IS (as used with SPB) computes the shortest path to backbone node MAC addresses (B-MACs) and then populates the backbone MAC tables. The B-MAC addresses are advertised in IS-IS via one or more backbone VLAN IDs (B-VIDs). In summary, frames are forwarded using the System-Id as the Backbone Source Access (B-SA) to a specific node using the Backbone Destination Address (B-DA). Note that the backbone nodes will know how to reach all the B-MACs (IS-IS will have programmed the B-VID MAC tables according) while the Customer MACs (C-MACs) will only be learned on the appropriate BEB nodes which terminate the virtual services.

The SPB forwarding database (FDB) will contain a combination of unicast and multicast MAC addresses.

SPB uses source specific multicast trees. There has to be a unique multicast tree for every BEB across all B-VIDs provisioned and for every Service Instance (I-SID) which requires delivery of multicast/broadcast (L2VSNs and only L3VSNs if enabled for IP Multicast). In terms of IS-IS computation there will be as many multicast SPT trees as there are SPB nodes across each B-VID. These trees will then be further pruned into Service (I-SID) specific multicast SPTs based on which BEBs are configured with the corresponding I-SID. In the data plane every individual Service Specific multicast SPT will have a unique Multicast MAC address defined which is obtained by combining the ingress BEB Nick-name (referred to as the SP SourceID; 20 bits) with the I-SID service identifier (24 bits).

SPB Unicast FDB

```
CLI
ERS-8800:5# show isis spbm unicast-fib
ERS-8800:5# show isis spbm unicast-fib vlan <vlan-id>
ACLI
ERS-8800:5#show isis spbm unicast-fib
ERS-8800:5#show isis spbm unicast-fib vlan <vlan-id>
================================================================================
                          SPBM UNICAST FIB ENTRY INFO
================================================================================
DESTINATION        BVLAN  SYSID           HOST-NAME         OUTGOING     COST

ADDRESS                                                     INTERFACE
--------------------------------------------------------------------------------
```

```
02:be:b0:00:00:02  40    00be.b000.0002  ERS-2  2/2  10
02:be:b0:00:00:02  41    00be.b000.0002  ERS-2  2/2  10
02:be:b0:00:00:30  40    00be.b000.0030  ERS-3  2/2  20
02:be:b1:00:03:04  40    00be.b000.0030  ERS-3  2/2  20
02:be:b0:00:00:30  41    00be.b000.0030  ERS-3  2/2  20
02:be:b0:00:00:40  40    00be.b000.0040  ERS-4  2/2  20
02:be:b0:00:00:40  41    00be.b000.0040  ERS-4  2/2  20
02:be:b1:00:03:04  41    00be.b000.0040  ERS-4  2/2  20
```

SPB Multicast FDB

```
CLI
ERS-8800:5# show isis spbm multicast-fib
ERS-8800:5# show isis spbm multicast-fib vlan <vlan-id>
ACLI
ERS-8800:5#show isis spbm multicast-fib
ERS-8800:5#show isis spbm multicast-fib vlan <vlan-id>
================================================================================
                        SPBM MULTICAST FIB ENTRY INFO
================================================================================
MCAST DA           ISID   BVLAN  SYSID              HOST-NAME         OUTGOING
-INTERFACES
--------------------------------------------------------------------------------
03:00:01:00:03:e8  1000   40     0001.8128.87df     ERS-1             2/2,3/11
03:00:01:00:03:e9  1001   40     0001.8128.87df     ERS-1             2/2,3/12,3/13
03:00:04:00:03:e8  1000   40     0001.8129.1fdf     ERS-4             3/11
03:00:04:00:03:e9  1001   40     0001.8129.1fdf     ERS-4             3/12,3/13
03:00:03:00:03:e8  1000   40     0080.2dbe.23df     ERS-3             3/11
03:00:03:00:03:e9  1001   40     0080.2dbe.23df     ERS-3             3/12,3/13
```

2.6 System ID Value

The default switch behavior regarding System-Id is to use a MAC address within the MAC address range reserved for the switch. This ensures that there will be no de-stabilizing System-Id conflicts in the network. Avaya recommends the use of default System-Id values for this reason. To allow greater flexibility to customers, the use of configured System-Id values is also supported. When using configured System-Id values it is very critical to ensure that each SPB enabled switch in the network uses a unique ISIS System-Id value.

If you do decide to change the System ID, it is recommended to set the locally administered bit. The second least significant bit of the most significant byte of the MAC address should be set to 1 to indicate the MAC address as locally administered. For more details, please go to http://en.wikipedia.org/wiki/MAC_address.

2.7 Backbone Edge Bridges (BEB) and Backbone Core Bridges (BCB)

The BEB provides the boundary between the MACinMAC SPBM domain and virtualized service domain. At the BEBs, VLANs or VRFs are mapped into I-SIDs based on the local service provisioning. As such, all nodes within the SPBM backbone will have no knowledge of the addresses within the virtualized services VSNs (C-MAC or IP addresses). Only the BEB nodes will contain a C-MAC table (or FDB), and if configured, a VRF IP forwarding table. All backbone nodes will have no knowledge of the virtualized service VSNs, C-MAC and VRF addresses.

In the SPBM core, the bridges are referred to as Backbone Core Bridges (BCBs). BCBs forward encapsulated traffic based on the BMAC-DA.

2.8 Connectivity Fault Management (CFM)

Connectivity Fault Management (CFM) offers loopbacks and link trace for troubleshooting and continuity checks for fast fault detection - loopback and link trace features of CFM are supported. These commands allow operators, service providers and customers to verify the connectivity that they provide or utilize and to debug systems. This is accomplished through:

- Loopback messaging to an intermediate or endpoint within a domain for the purpose of fault verification. (LBM)
- Linktrace messaging to a maintenance endpoint with intermediate points responding to indicate the path of the traffic within a domain for the purpose of fault isolation. (LTM)

IEEE 802.1ag – Connectivity Fault Management (Per Service/VLAN OAM)

- Maintenance Domain – MD
  - MD is management domain on a network, typically owned and operated by a single entity MD are configured with Names and Levels, where the eight levels range from 0 to 7.
  - Hierarchal relationship exists between domains based on levels.
  - Recommended values of levels are as follows
    - Customers – Largest (e.g., 7)
    - Providers – In between (e.g., 3)
    - Operators – Smallest (e.g., 1)
- Maintenance Association
  - Maintenance Association (MA) is a set of MEPs, all of which are configured with the same MAID (Maintenance Association Identifier) and MD Level, each of which is configured with a MEPID unique within that MAID and MD Level, and all of which are configured with the complete list of MEPIDs”
- Maintenance End Point
  - Maintenance End Point (MEP), are Points at the edge of the domain, define the boundary for the domain A MEP sends and receives CFM frames through the relay function, drops all CFM frames of its level or lower that come from the wire side
- Maintenance Intermediate Point

  - Maintenance Intermediate Point (MIP), are Points internal to a domain, not at the boundary. MIPs are Passive points, respond only when triggered by CFM trace route and loop-back messages

- There are 5 message types for CFM
  - Continuity Check Message (CCM) – Not implemented.
  - Loopback Message (LBM)
  - Loopback Reply (LBR)
  - Linktrace Message (LTM)
  - Linktrace Reply (LTR)
- Raw loopback and linktrace messages can be generated using the following CLI commands:
  - CLI
    - lbm <mdName.maName.mepId.rmepMac>
    - ltm <mdName.maName.mepId.rmepMac>
  - ACLI
    - loopback <mdName> <maName> <mepId> <rmepMac>
    - linktrace <mdName> <maName> <mepId> <rmepMac>
- However, a set of L2 OAM commands which leverage the underlying CFM loopback and linktrace messages but provide a more user friendly interface and a simplified summary of the information which is carried in the CFM messages. These commands can also be executed against a target system name or IP address instead of a MAC address of MD.MA.MEP-id.
  - CLI
    - l2ping <vlan.RouterNodeName | vlan.SystemIdMac | ipaddress>
    - l2traceroute <vlan.RouterNodeName | vlan.SystemIdMac | ipaddress>
    - l2tracetree <vlan.isid | vlan.isid.RouterNodeName | vlan.isid.SystemIdMac>
  - ACLI
    - l2 ping <vlan> mac <SystemIdMac>
    - l2 ping <vlan> routernodename <RouterNodeName >
    - l2 traceroute vlan <vlan> mac <SystemIdMac>
    - l2 traceroute vlan <vlan> routernodename <RouterNodeName >
    - l2 traceroute ip-address < ipaddress> ?

      priority Priority <0-7>

      source-mode Source mode<nodal|noVlanMac|smltVirtual>

      ttl-value Ttl value <1-255>

      vrf Vrf

      <cr>
- Starting in software release 7.1.1 for the ERS 8800, release 3.4 for the VSP 9000, release 3.0 for the VSP 4000, 5.7 for the ERS 4800, and 10.2 for the VSP 7000, CFM commands will now automatically create a MEP and a MIP at a specific level for every SPB B-VLAN provisioned on the switch. Hence, you no longer have to configure explicit MEPs and MIPs and associated

VLANs with MEPs and MIPs. Previously configured MIPs and MEPs will still continue to work if you upgrade from either 7.0 or 7.1 to release 7.1.1.x. In summary:

- Auto-generated CFM commands create a MEP and a MIP at a specified level for every SPBM B-VLAN on the chassis
- No more having to configure explicit MEPs and MIPs and associate multiple VLANs with MEPs and MIPs
  - Previously configured MEPs and MIPS will continue to work
- Auto-generated MEPs and MIPs respond to l2ping, l2traceroute, and l2tracetree in the same manner as in 7.1
- CFM extended to support C-VLANs in addition to existing support for B-VLANs.
  - This enables you to isolate a connectivity fault in either the SPBM cloud or in a customer domain.

3. SPB Support Topologies

3.1 SPB L2 VSN

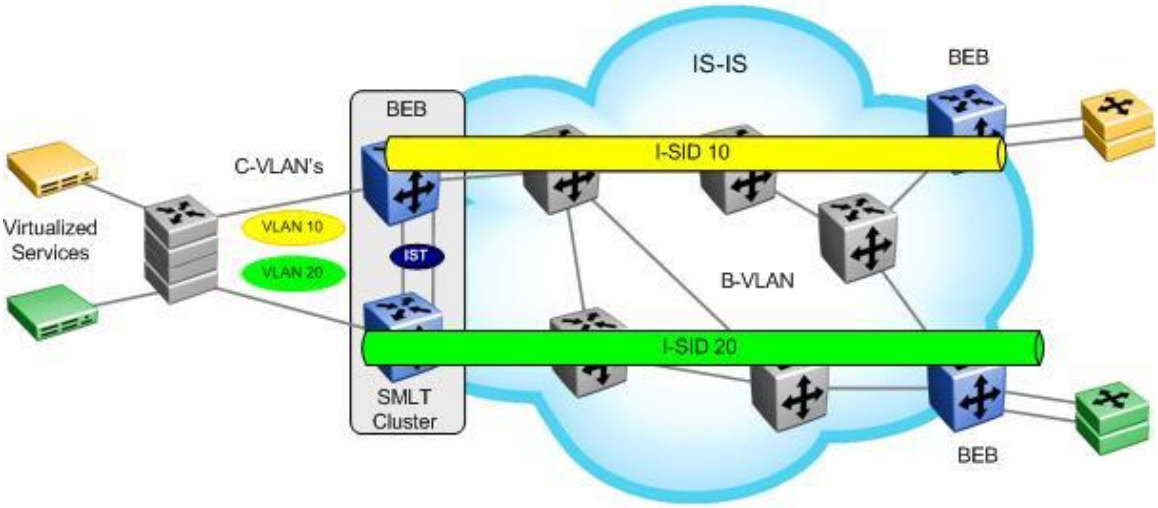


Figure 2: SPB L2 VSN

A SPB L2 VSN topology is simply made up of a number of Backbone Edge Bridges (BEB) used to terminate Layer 2 VSNs. The control plane uses IS-IS for forwarding at a Layer 2 level. Only the BEB bridges are aware of any VSN and associated MAC addresses while the backbone bridges simply forward traffic at the Backbone MAC (B-MAC) level. The backbone switches will know how to reach every B-MACs using the shortest path determined by IS-IS. Note that the backbone System ID or B-MAC can be manually provisioned to help ease trouble-shooting when looking at the B-MAC unicast forwarding table. In summary, all switches in the backbone will only learn B-MAC addresses to make forwarding decisions while the BEB will learn both the B-MACs and Customer MACs (C-MAC) for each VSN. A Backbone Service Instance Identifier (I-SID) will be assigned on the BEB to each VLAN. All VLANs in the network that share the same I-SID will be able to participate in the same VSN. If SMLT clusters are used, two backbone VLANs (B-VLAN) are required with a primary B-VLAN and a secondary B-VLAN. . In general two backbone VLANs should always be used (even if no SMLT cluster is in use) since the use of 2 backbone VLANs allows IS-IS to compute equal cost trees where if 2 shortest equal cost paths exist, SPB will load balance VSN traffic across both paths.

In summary:

- At minimum, one B-VLAN must be assigned to each SPB switch
    - For SMLT, two B-VLANs are required
- TLVs and sub-TLVs are used to identify SPB instance, link metric's, B-VLAN, B-MAC, and number of I-SID's

3.2 SPB L3 VSN

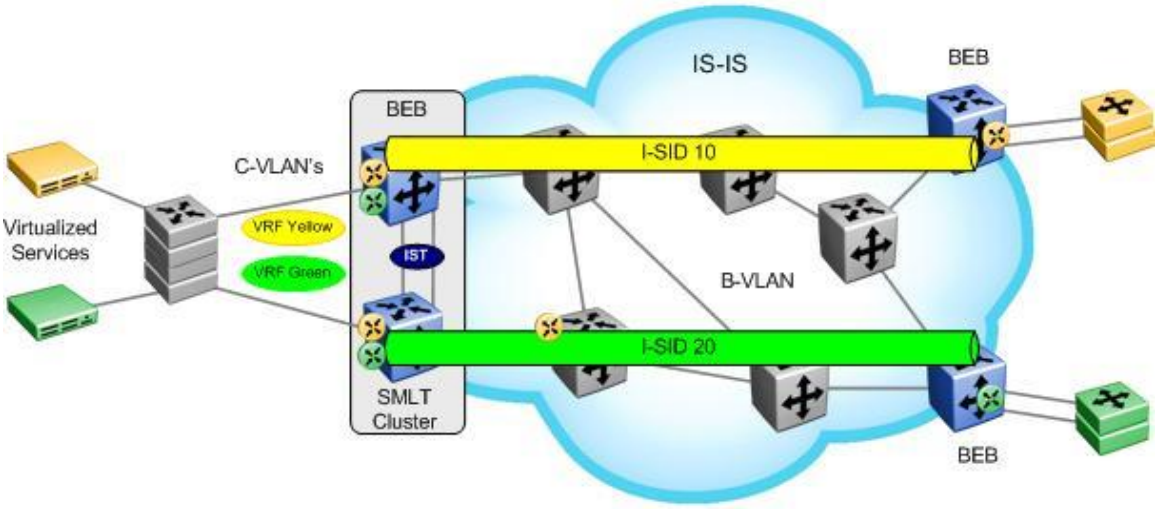


Figure 3: SPB L3 VSN

A SPB L3 VSN topology is very similar to a SPB L2 VSN topology with the exception that a Backbone Service Instance Identifier (I-SID) will be assigned at a Virtual Router (VRF) level instead of at a VLAN level. All VRFs in the network that share the same I-SID will be able to participate in the same VSN.

In summary:

- One or more VRFs are created on the BEB switches with an assigned I-SID
  - All VRFs that share the same I-SID can participate in the same VSN
- Route distribution of direct interfaces on VRF instances must be enabled to distribute VRF networks into IS-IS between BEB switches
- IS-IS IP routing must be enabled

3.3 Inter VSN Routing

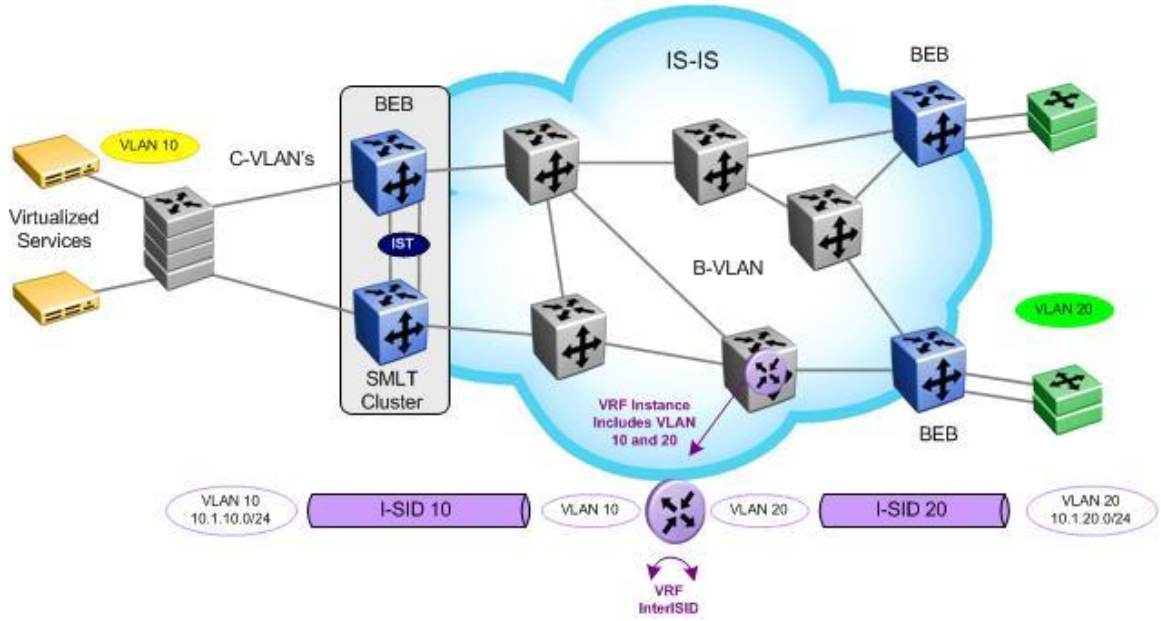


Figure 4: Inter VSN Routing

Inter VSN allows routing between IP networks on Layer 2 VLANs with different I-SIDs. As illustrated in the diagram above, routing between VLANs 10 and 20 occurs on one of the SPB core switches shown in the middle of the diagram. End users from the BEB switches as shown on the right and left of the diagram are able to forward traffic between the yellow and green VLANs (VLANs 10 & 20) via the VRF instance configured on the switch shown. Although the diagram illustrates a VRF configured on a BCB switch, Inter VSN can also be performed via GRT. Also, for redundancy, Inter VSN can also be configured on another switch with VRRP to eliminate a single point of failure.

Please note Inter VSN routing is only typically used when you have to extend a VLAN as L2VSNs for applications such as vMotion. Normally, is it recommended to route when you can by using either IP shortcuts or L3VSNs. As one of the requirements for vMotion is a shared network for the ESX hosts, we have no choice but to bridge traffic between the ESX hosts. In order to forward the server traffic to the clients and vise-versa, it is necessary to IP route the traffic either via IP shortcuts or via a VRF L3VSN.

3.4 SPB IP Shortcuts

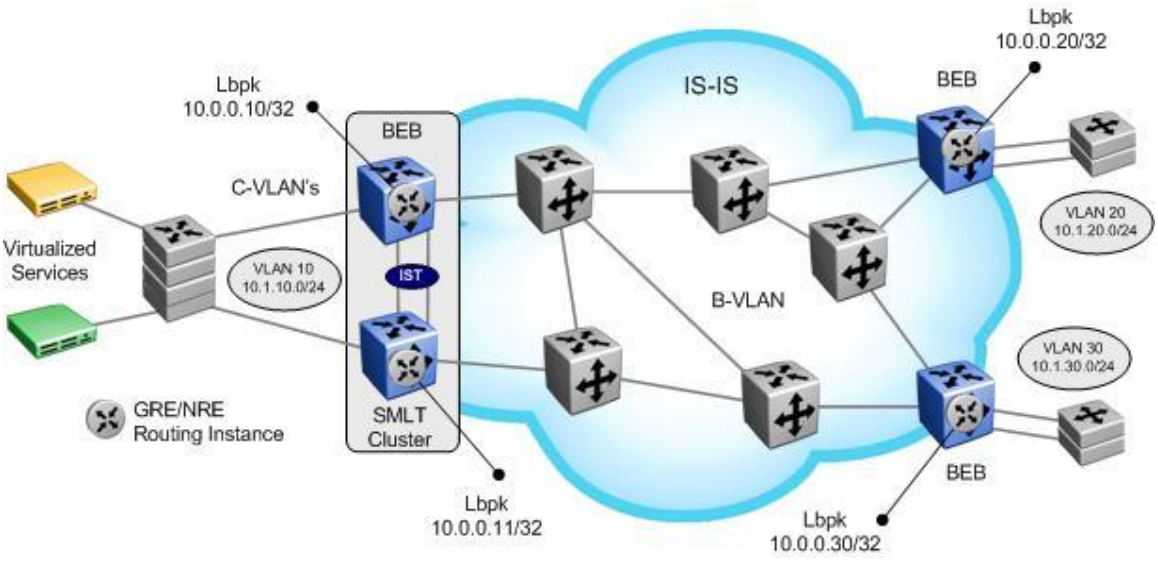


Figure 5: SPB IP Shortcuts


IP shortcuts allow routing between VLANs in the global routing table/network routing engine (GRT/NRE/VRF-0). No I-SID configuration is used. IP is enabled on the B-VLAN IS-IS instance on the BEB switches. This provides normal IP forwarding between BEB sites over an IS-IS backbone.

In summary:

- IP must be enabled on IS-IS where the IS-IS source address, which must be configured, is a circuitless/loopback IP address
    - The IS-IS source address is automatically injected into IS-IS
- IS-IS redistribution of direct (or OSPF, RIP, Static, BGP…) IP routes may be enabled as a simple mechanism to forward those networks between BEB neighbors
    - This will inject all direct (or OSPF, RIP, Static, BGP…) IP routes into IS-IS
    - In a SMLT cluster, in the case of direct IP route redistribution, a route policy (CLI) or route-map (ACLI) must be configured to match the IST IP subnet to prevent it from being advertised
- The Extended IP Reachability TLV 135 is used to distribute IP reachability between IS-IS peers

4. UNI Types


4.1 L2VSN – C-VLAN UNI

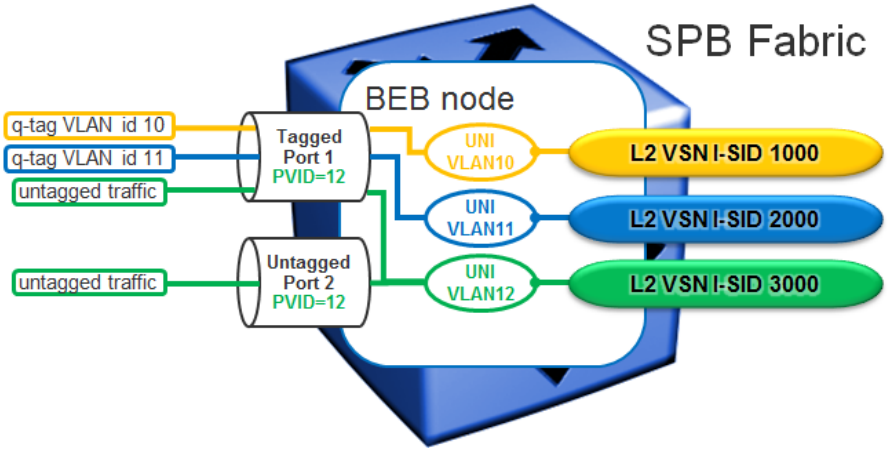

Port Type	VSP9000 VSP7000 ERS8000 VSP4000 VSP8000	ERS4800
Single Port	✓	✓
MLT/DMLT	✓	✓
LACP LAG	✓	✓
SMLT/SLT	✓	✗
SMLT/SLT LACP LAG	✓	✗


- UNI is a VLAN (Customer VLAN = C-VLAN)
- VLAN has global significance on the BEB
- VLAN performs L2 switching on local VLAN port members & transports over L2VSN for remote end-points
- Untagged traffic is assigned to VLAN corresponding to PVID configured on port
    - On tagged port, use UntagPVIDOnly mode to force PVID traffic to also go out untagged
- Supported in VSP9000, ERS8800, VSP7000, VSP4000, VSP8000, andERS4800

4.2 L2VSN – Switched UNI

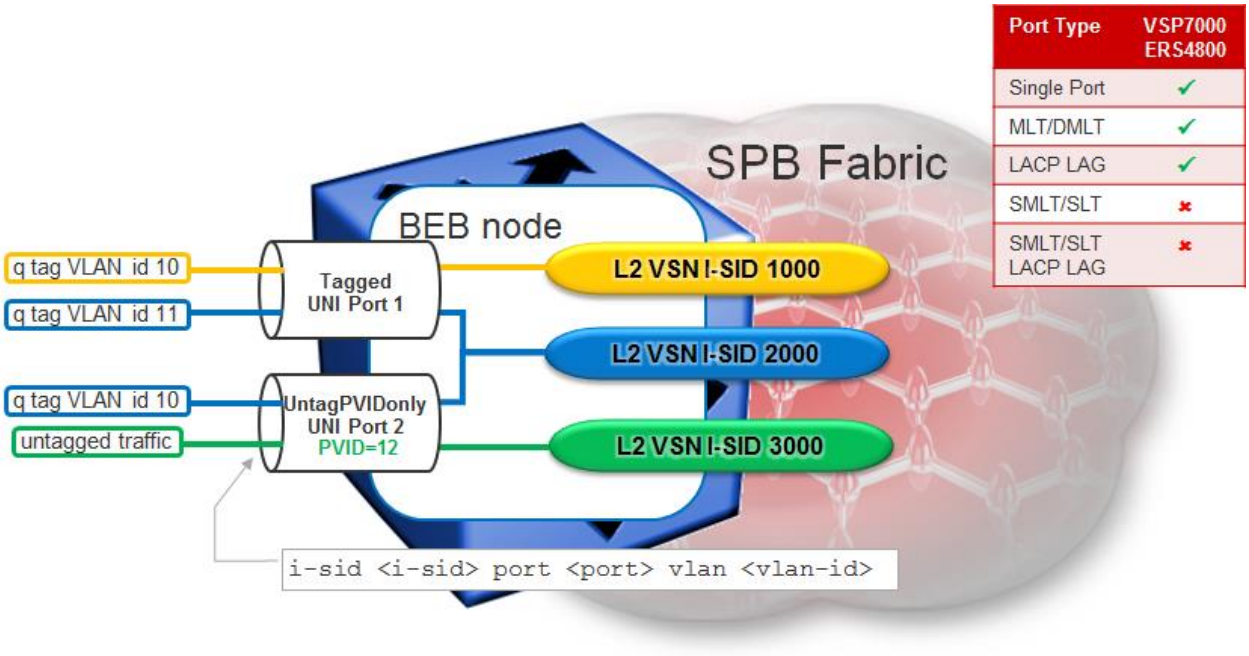

- UNI is a VLAN-id on an Ethernet port / MLT
- VLAN id has local significance on the Ethernet port / MLT
- Same VLAN-id can be re-used on different ports and belong to a different I-SID
- Different VLAN-id on same or different ports can be assigned to same I-SID
  - can do VLAN Mapping on local switch
- Untagged traffic can be picked up by setting the port to UntagPVIDonly and setting the PVID on the port
- Switched UNIs and CVLAN UNIs can be assigned to the same I-SID
- Supported in VSP7000 release 10.2 and ERS4800 release 5.7

4.3 L2VSN – Transparent UNI

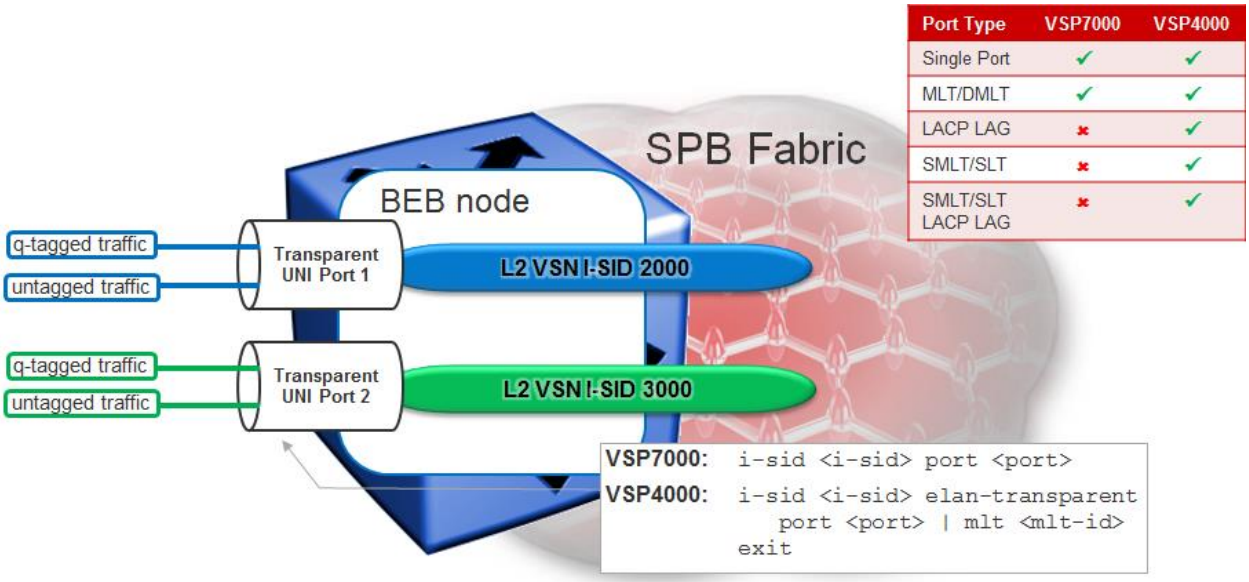

- UNI is an Ethernet port / MLT
- Ethernet UNI port / MLT is not VLAN tag aware
- Packets with or without a VLAN q-tag are transported into the L2VSN
- Untagged control traffic (STP, VLACP, LACP, LLDP, etc) is transparently forwarded
  - VLACP/LACP PDUs are forwarded (VSP4000: unless configured on UNI port / MLT)
  - Flow Control Pause frames remain link local and are not transported
- Reverse MAC learning is still used, so can be used with 3 or more end-points
- Supported in VSP7000 release 10.3 and VSP4000 release 3.1
- MLT Transparent UNI ports are supported (on VSP4000 even with LACP)
- Transparent UNIs should not be assigned to the same I-SID as Switched UNI or CVLAN UNIs
- Beginning in the 4.1 release for the VSP4000, Transparent UNI over SMLT is supported

4.4 UNI Type – Example

UNI Type	Port	VLAN	ISID	
Switched	1	10	1000	Each endpoint is uniquely identified by (Port, VLAN). The same port can send traffic to different I-SIDs from different VLANs. The same VLAN can map to one I-SID on one port and to another I-SID on another.
	1	11	1000	
	1	12	2000	
	2	11	1000	
	2	12	3000	
C-VLAN	All	14	4000	Map entire VLAN to an I-SID. All member ports can send and receive traffic to / from I-SID.
	All	15	1000	
Transparent	5	All	5000	All traffic from the port that creates the transparent UNI goes to a single I-SID, regardless of VLAN.
	10	All	5000	

- I-SID 1000 will receive traffic from: Port 1 on VLAN 10, port 1 & port 2 on VLAN 11 and from all port members of VLAN 15.
- I-SID 2000 will receive traffic from: Port 1 on VLAN 12
- I-SID 3000 will receive traffic from: Port 2 on VLAN 12
- I-SID 4000 will receive traffic from: All member ports for VLAN 14.
- I-SID 5000 will receive traffic from: All traffic from ports port 5 & Port 10

5. Summary of SPB Features and Product Release Matrix

Capability Feature Matrix	ERS 8800 (7.2)	VSP 9000 (4.0)	VSP 8000 (4.1)	VSP 7000 (10.3)	VSP 4000 (4.1)	ERS 4800 (5.8)
L2 VSN	Y	Y	Y	Y	Y	Y
L2 VSN with Multicast (IGMP)	Y	Y	Y	N	Y	5.9
L3 VSN	Y	Y	Y	N	Y	N
L3 VSN with Multicast (IGMP)	Y	Y	Y	N	Y	N
IP Shortcut Routing	Y	Y	Y	N	Y	N
IPv6 Shortcut Routing	N	N	Y	N	Y	N
IP Shortcut Routing with Multicast	Y	Y	Y	N	Y	N
Inter-VSN Routing	Y	Y	Y	N	Y	N
IPv6 Inter-VSN Routing	N	N	Y	N	Y	N
IPVPN-Lite over SPB	Y	N	N	N	N	N
Enterprise Fabric & Switch Cluster Interoperability	Y	Y	Y	Y	Y	N
Enterprise Fabric & Stackable Chassis Interoperability	N/A	N/A	N/A	Y	N	Y
Enterprise Fabric Connectivity Management (802.1ag)	Y	Y	Y	Y	Y	Y
CFM, L2 Ping, Traceroute, and Tracetree	Y	Y	Y	Y	Y	Y
BCB Mode (NNI-NNI)	Y	Y	Y	Y	Y	N
L2 Ping for Access VLAN (CVLAN)	Y	Y	4.2 (1H15)	10.4 (CY15)	Y	N
Switched UNI	N	tbd	5.0	Y	5.0	Y
Transparent UNI	N	N	4.2 (1H15)	Y	Y	N
ETREE	N	N	Y	N	Y	N
vIST	N	N	Y	N	Y	N

6. SPB Feature and License Matrix

Feature/Platform	ERS 4800 (5.8)	VSP 4000 (4.1)	VSP 7000 (10.3)	VSP 8000 (4.1)	ERS 8800 (7.2)	VSP 9000 (4.0)
L2 VSN	Base	Base	Base	Base	Premier	Premier
L3 VSN	N/A	Premier	N/A	TBD	Premier	Premier
IPv4 Shortcuts	N/A	Base	N/A	Base	Premier	Premier
Multicast L2 VSN	Base	Base	Base	TBD	Premier	Premier
Multicast L3 VSN	TBD	Premier	TBD	Premier	Premier	Premier
Multicast IP Shortcuts	TBD	Base	TBD	Base	Premier	Premier
BCB Mode (NNI-NNI)	N/A	Base	Base	Base	Premier	Premier
Inter-ISID Routing	N/A	Base	N/A	Base	Premier	Premier
ETREE	TBD	Base	TBD	Base	TBD	TBD
Switched UNI	Base	Base	Base	Base	N/A	TBD
Transparent UNI	TBD	Base	Base	TBD	TBD	TBD
VRF support	N/A	Base	N/A	Base	Premier	Premier
Dual homing into a Fabric (SMLT Edge)	TBD	TBD	Base	Base	Premier	Premier
IPv6 Shortcuts	N/A	Base	N/A	Base	TBD	TBD
IPv6 Inter-ISID Routing	N/A	Base	N/A	Base	TBD	TBD

7. Migration & Upgrades

This section describes the procedures and restrictions that apply when upgrading the software load from a prior ERS/VSP software release not supporting SPB. Also described are the procedures to follow when services are being migrated to a configuration that exercises the SPB features. These should be interpreted as additional and NOT as a replacement for procedures and restrictions that may be imposed by prior releases.

7.1 Common Upgrade instructions

- Verify that the hardware requirements are met.
- If the switch is an ERS 8800 and uses 2 CPU cards – both CPU cards need to be rebooted. Using 2 CPU cards with each CPU running a different release of the software is not supported.

7.2 Upgrade from Pre-5.1 releases for the ERS 8800

If the switch being upgraded is not an IST switch - SPB does not impose any additional upgrade procedures. If the switch being upgraded is an IST switch – then both IST peers need to up-graded simultaneously. Standard SMLT resiliency for services is not available until both the IST switches are up and running with the new version of software.

7.3 Upgrade and SMLT Cluster

If the switch being upgraded is not an IST switch - SPB does not impose any additional upgrade procedures. If the switch being upgraded is an IST switch – then it is possible to upgrade one IST peer at a time while providing SMLT based resiliency to services configured on the IST peer switches. While SMLT resiliency is provided during the upgrade – it is recommended that the both the IST peers should be upgraded in a single maintenance window.

7.4 VSP 4000 and ERS 4850

An ERS 4850 (Rev 10 or higher) can be converted to a VSP 4000 via a software conversion kit; a USB flash drive that contains the VSP 4000 run time software. The software conversion kit comes factory installed when ordering the VSP 4000 or can be included in the upgrade kit for an ERS 4850. Please note that only the ERS 4850 model, either an ERS 4850GTS or ERS 4850GTS-PWR+, can be converted. The VSP 4000 supports all the same SFP and SFP+ transceivers as the ERS 4850, but, does not support stacking. The VSP 4000 operating system is common with the VSP 9000 (release 3.3+) supporting the same ACLI, full logging, KHI, and Flight Recorder.

7.5 VSP 7000

The core of the Avaya VSP 7000 is a fifth generation Layer 3 Switching ASIC rated at 1,280Gbps. This provides the Avaya VSP 7000 with incredible capacity to support wire speed I/O and Avaya FI (Fabric Interconnect) Stacking concurrently.

The VSP 7000 delivers a new take on the traditional Top-of-Rack Switch requirement. For modest scenarios, switches can be horizontally interconnected, creating a single logical system spanning eight units/racks, or hundreds of VSP 7000s can be flexibly meshed for massive scale-out that uniquely delivers multi-hop and low-latency. Forming a single-tier, Avaya's Distributed ToR is a connectivity solution for the Data Center's primary requirement: high-performance, low- latency, Layer 2 east-west traffic. Utilizing the high-speed virtual backplane capacity, and invoking Ethernet's plug & play advantage, the VSP 7000 empowers simplified, one-touch, edge-only provisioning.

Fabric Interconnect can be used in two mutually exclusive modes:

- **Fabric Interconnect Stacking** where the rear ports are set as Fabric Interconnect Stack-mode. Up to 8 units create a vToR (virtual Top of Rack) or 16 units in a dToR (distributed Top of Rack) delivering up to 10Tbps using two SMLT clusters of 8 switches. For Fabric Interconnect Stack, the stack operates in the same manner as other Avaya stackable products and features many of the associated benefits of stacking (single IP address for FI stack, hot swap unit replacement, and distributed uplinks with distributed MLT and LAGs). By default, Fabric Interconnect (FI) ports on the rear of the VSP 7000 are configured for Stack-mode.
- **Fabric Interconnect Mesh** where the rear ports are configured as "rear-port" in either Standard (Raw) or SPB modes in which the Fabric Interconnect ports operate as multiple high-speed interconnects, allowing the creation of a fully flexible and scalable network mesh. Depending on the software release, SPB and/or SMLT is supported on the rear-ports as highlighted in the chart below. Standard is a Raw-mode that can support various port configurations and protocols, such as Inter-Switch Trunking (IST) for Switch Clustering and SMLT. Please note that rear-port Standard Mode does not support SPB on the rear ports.

Desired Deployment Model	Needed Rear-port Mode	SMLT (IST) Needed	SPB enabled	Virtual Servers (e.g. ESX) NIC teaming	Server NIC teaming (LACP)	Minimum Required Software
vToR FI Stacking	**Disabled** (= Stacking enabled)	**No**	**Can be**	**Yes** – Vport hashing on non-SLT ports	**Yes** – On DMLT ports (with or without LACP)	10.1.0 (10.3.0 if need to run SPB on uplinks)
dToR FI Stacking with SMLT	**Disabled** (= Stacking enabled)	**Yes**	**Can be**	**Yes** – Vport hashing on non-SLT ports - OR - IP hashing on SLT ports	**Yes** – On SLT ports (with or without LACP)	10.2.0 (10.3.0 if need to run SPB on uplinks & IST)
FI Mesh with SMLT	**Enabled in raw mode**	**Yes**	**No**	**Yes** – Vport hashing on non-SLT ports - OR - IP hashing on SLT ports	**Yes** – On SLT ports (with or without LACP)	10.2.0
SPB Mesh	**Enabled in SPBM mode**	**No**	**Yes**	**Yes** – Vport hashing on non-SLT ports	**No** – Use Active Standby NICs	10.2.0
SPB Mesh with SMLT	**Enabled in SPBM mode**	**Yes**	**Yes**	**Yes** – Vport hashing on non-SLT ports - OR - IP hashing on SLT ports	**Yes** – On SLT ports (with or without LACP)	10.3.0

In Fabric Interconnecting Stacking, with SPB enabled, 10.2.1 supports a maximum stack of 2; in the 10.3 release, a stack of 8 is supported. SMLT or IST over rear port Raw-mode is supported staring in release 10.2.1, however, SPB is not supported in rear port Raw-mode. LACP must be disabled on the rear ports prior to enabling an IST on them. In rear port SPB mode, IP routing cannot be enabled and the total number of rear ports is reduced by one - the switch uses port 40 as loopback when rear port SPB is enabled; please see section 9 for rear port numbering.

7.6 Activating SPB

Once the network is upgraded the following minimum steps must be followed before any services can be provisioned. SPB leverages the usage of default parameters and link metrics, system-id values etc., to minimize the number of configurations steps. Customers that desire to use non default parameters should do so in accordance with the configuration and engineering guidelines.

- ERS 8800
    - Activating SPB infrastructure reserves 600 multicast group ID (MGIDs) for SPB operation on the ERS 8800. This is in addition to any MGIDs that may be used for VLANs and IP multicast services. The “show sys mgid-usage” command should be used to check if the MGIDs required for SPB are available.
    - If the ERS 8800 is running in STG mode, verify that STG-63 is not current in use. SPB will use this STG.
    - If running in MSTP mode – verify that MSTI-62 is not currently in use. SPB will use this MSTI.
- VSP 9000
    - Activating SPB infrastructure reserves 100 multicast group ID (MGIDs) for SPB operation on the VSP 9000.
- VSP 9000, VSP 8000, VSP 7000, VSP 4000, ERS 4800, and ERS8800
    - SPB is not supported if the switch is in RSTP mode. Note that there is no reason to use the RSTP mode since it provides a sub-set of the functionality of MSTP mode and MSTP mode is able to operate in RSTP mode if it sees adjacent switches sending RSTP BPDUs.
- Identify two VLAN-ids to be used as B-VLANs by SPB, primary and secondary B-VLAN
    - Note, the same primary and secondary VLAN IDs must be provisioned on all SPB enabled switches so that all SPB bridges will load balance traffic accordingly
    - The IS-IS adjacencies will not come up if there is a discrepancy in the B-VLAN ids configuration between 2 nodes.
    - The Primary VLAN IDs is also used on all IS-IS messages
- Enable SPB globally.
- Assign a unique nickname to each switch.
    - An alarm will be logged if a duplicate nickname is provisioned in the network
- Assign a common Area ID
    - Note, the same Area ID must be provisioned on all SPB enabled switches in the same domain
- Assign a unique IS-IS system-name to each switch. While this is not strictly required – it will greatly aid in validating connectivity and when troubleshooting.
    - If the IS-IS sys-name is not provisioned, by default, the global system name is used as the IS-IS sys-name. If you do wish to set the IS-IS sys-name, it must be set to a value different than global system name.
- If configuring an IST switch, configure the system-id of the IST peer.
- Identify all the intended NNIs and configure and enable IS-IS on these ports (or MLTs).

- Please note that only one adjacency is supported between a pair of SPB bridges (one physical port or one MLT instance)

- Enable IS-IS globally.
- Configure IEEE 802.1ag (a.k.a CFM) in order to enable network connectivity troubleshooting tools.
- Verify basic SPB connectivity by checking the SBPM unicast-fib and the FDB entries for the B-VLANs.
- Verify basic SPB unicast connectivity using the l2ping and l2traceroute commands between all the switches in the network for both the B-VLANs.
- Verify that the path reported by the l2traceroute command is the same as the one calculated by IS-IS (use the *show isis spbm unicast-fib* command).
- SMLT Operation

ERS 8800 & VSP 7000	VSP 9000
Does not require you to configure C-VLANs on the IST MLT.	Requires the inclusion of IST MLT in the C-VLAN.
Traffic can pass between single-homed VLANs attached to IST peers if the IST is down.	Traffic cannot pass between single-homed VLANs attached to IST peers if the IST is down.
Decapsulates MAC-in-MAC traffic at the primary BEB or secondary BEB irrespective of whether the traffic is from the primary BVLAN or secondary B-VLAN.	Decapsulates MAC-in-MAC traffic at the primary BEB from the primary B-VLAN and traffic at the secondary BEB from the secondary B-VLAN. Requires the IST to be up to pass traffic between both IST switches for single-homed VLANs.

- vIST Operation
  - The vIST uses an SPBM tunnel to virtually connect two nodes that can be anywhere in the SPBM network
  - A L2VSN is required for the vIST VLAN
    - An IP address is added to the VLAN as you would do with a normal IST VLAN and you need to peer with the IP address to the neighboring IST switch
  - All C-VLANs must have an I-SID
    - Before you add the SMLT MLT instance or SMLT port members to a C-VLAN, an I-SID must be assigned to the C-VLAN
      - If you try to add a C-VLAN to an SMLT MLT instance or port members that become to an SMLT instance prior to adding an I-SID to the VLAN, you will be prompted with the following error message: *Error: SMLT VLAN must have i-sid association.*

7.7 Migrating traffic to SPB

Pre migration checks for configuration migration to SPB should include an audit to determine if the desired configuration and traffic is something that is supported by SPB. The following kinds of traffic are supported by SPB.


- Layer-2 bridged traffic.
- IPv4 unicast routed traffic on the Global Router.
- IPv4 unicast routed traffic using a VRF.
- IPv4 Unicast routed traffic using an IPVPN (ERS 8800 only).
- IPv4 multicast routed traffic. ERS8000 software release 7.2, VSP 4000 software release 3.1, and VSP 9000 release 3.4 add support for L2VSN, L3VSN and IP Shortcut. The VSP 8000 supports L2VSN and IP shortcuts and will support L3VSN and multicast in the 4.1 release
    - If a PIM router is connected to an SPB bridge, either use IGMP or static mroutes

The following traffic is not yet supported by SPB.

- IPv6 routed traffic (unicast or multicast) unless forward via L2VSN

Traffic which is not yet supported by SPB can continue to exist in parallel to SPB. For example IPv6 traffic can be routed by OSPFv3 which is configured on SMLT VLANs which can remain independent from SPB running on the same physical infrastructure.

7.8 Multicast

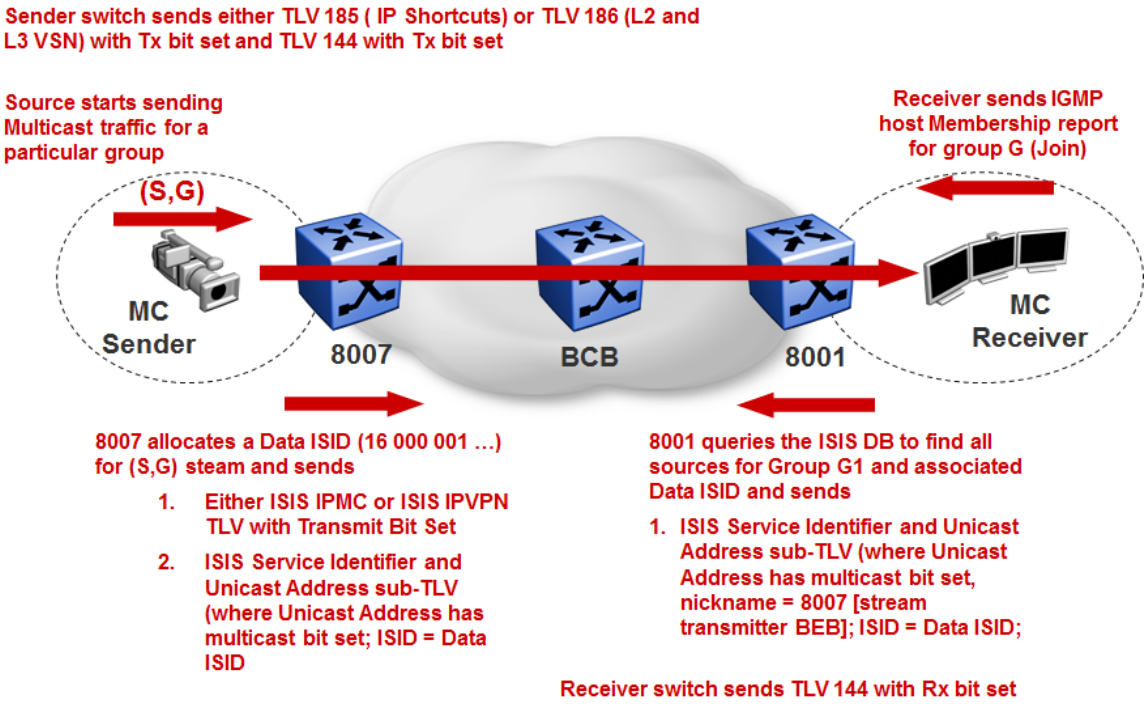

Multicast over SPB is supported in the 7.2 release for the ERS 8800, 3.1 for the VSP 4000, and the 3.4 release for the VSP 9000. If the VSP 9000 is used in the network, ensure that it is operating at release 3.3.x or higher

- SPB multicast supported over L2VSN
  - Simple provision by enabling SPB multicast globally and IGMP snooping at L2VSN VLAN level
  - Traffic does not cross L2VSN service boundary
  - By default, on a BEB UNI port, an IGMP querier address of 0.0.0.0 will be used. If the L2 edge switch does not support a 0.0.0.0 query address, any IP address can be provisioned the L2VSN VLAN as the query address
  - Any device in a L2VSN boundary can start a multicast stream
    - Note that you can still use any of the various IGMP features on the L2VSN VLAN such as allow or deny certain IGMP group addresses
  - Single-Homed BEB hashes between the two BVLAN's based on the ISID; odd ISID transmitted on Primary BVLAN, even ISID transmitted on Secondary BVLAN
  - SMLT BEB transmit on a single BVLAN; Primary SMLT BEB on primary BVLAN and Secondary SMLT BEB on Secondary BVLAN
- SPB multicast supported over L3VSN
  - All or a subset of VLANs within a L3VSN can exchange IP multicast traffic between themselves
  - Simply provision by enabling SPB multicast globally, enable MVPN on the VRF, and enable IP SPB Multicast on some or all of the VLANs within the L3VSN

        - Only those VLANs that have IP SPB Multicast enabled can pass multicast traffic
    - It is not a requirement to enable IP Shortcuts in order to support IP Multicast in the L3VSN
    - IPVPN creation and I-SID assignment for the IPVPN is required – but the IPVPN does not need to be enabled
    - Any device in the L3VSN can start a multicast stream
        - Note that you can still use any of the various IGMP features on the VRF VLAN such as allow or deny certain IGMP group addresses
    - SMLT operation – does not apply to the VSP 4000 or ERS 4800
        - On the Primary IST BEB
            - Primary BVLAN traffic is forwarded to the SMLT and Single Homed UNIs
            - Secondary BVLAN traffic is forwarded only to Single Homed UNIs
            - With SMLT Down on the Primary IST BEB, the primary IST BEB does not forward any primary BVLAN traffic to the SMLT
            - With SMLT Down on the Primary IST BEB, the Secondary IST BEB forwards both primary and secondary BVLAN traffic to the SMLT
        - On the Secondary IST BEB
            - Primary BVLAN traffic is forwarded only to Single Homed UNIs
            - Secondary BVLAN traffic is forwarded to the SMLT and Single Homed UNIs
- IP Shortcuts (GRT) with IP Multicast
    - All or a subset of VLANs within GRT can exchange IP multicast traffic between themselves
    - Simple provision by enabling SPB multicast globally and enabling IP SPB Multicast on some or all of the GRT VLANs
        - Only those VLANs that have IP SPB Multicast enabled can pass multicast traffic
    - It is not a requirement to enable IP Shortcuts in order to support IP multicast in the GRT using SPB
    - Any device in the GRT can start a multicast stream
        - Note that you can still use any of the various IGMP features on the GRT VLAN such as allow or deny certain IGMP group addresses

7.9 Migrating a VLAN to an L2 VSN

The following procedure can be used to provide L2 connectivity for a VLAN across the SPB core.

- Follow the pre-migration procedures checks described in the section “Common Procedures and Exclusions on Migration”
- Identify the UNI and NNI ports that are currently port members of the VLAN on all the switches in the network.
- On all the switches in the network which are currently connected by the VLAN – remove the NNI ports from the membership list of the VLAN. This step will cause service interruption.
- Make the VLAN an L2VSN using the “*vlan <vlan id> i-sid <isid value>*” ACLI command. Use the same value of i-sid on all the switches. This step should restore service.
- SMLT deployment
    - For the ERS 8800 & VSP 7000, the L2VSN VLAN cannot be a member of the IST. An error message will be recorded and logged if you try to add VLAN to the IST MLT instance
    - For the VSP 9000, the L2VSN VLAN must be a member of the IST. A warning message to this effect will always be displayed when an I-SID is assigned to a VLAN.
    - For a vIST, for the L2VSN C-VLAN, only the local SMLT ports are added. A separate L2VSN is used for the vIST VLAN.

7.9.1 Migrating to Inter VSN Routing

Inter VSN provides the ability to route traffic between extended VLANs where the VLANs have different I-SIDs. All of the traditional IPv4 unicast routing and gateway redundancy protocols (OSPF, RIP, BGP, VRRP, RSMLT etc) are supported on top of any VLAN that is mapped to an ISID. Please note that RSMLT will only work if the switches acting as redundant gateways are IST connected together.

Currently the only protocols which will not work on an IP interface assigned to a L2VSN VLAN are the following:

- IPv6 unicast & multicast routing (OSPFv3, MLD)
- IPv4 multicast routing (IGMP, PIM-SM, PIM-SSM)

Please note that RSMLT will only work if the switches acting as redundant gateways are IST connected together.

The high level procedure to migrate a configuration to use Inter-ISID routing is described below.

- Follow the pre-migration procedures checks described in the section “Common Procedures and Exclusions on Migration”
- For each VLAN in the SPB core
    - On all the switches where the VLAN is configured - remove all NNI ports
        - This will cause service interruption.
    - On all the switches where the VLAN is configured – map the VLAN to an ISID. This will restore L2 connectivity (the l2tracetree command can be used to validate L2 connectivity within the VLAN at this point). L3 will be restored once the routing protocols configured on top of the VLAN converge.

- Once all the VLANs identified for migration have been assigned an ISID – the configuration part of the migration is completed. At this point all the traffic flows should be back to normal.

7.10 VSP 9000 Notes

- VSP 9000 supports SPB NNI Interfaces on the 9024XL, 9048XS, and 9012QQ cards.
- For L2VSN services on an IST switch
  - If a L2VSN is configured on one IST switch, it must be configured on the peer IST switch as well (even if the IST peer has no UNI ports using the L2VSN).
  - The IST ports must be configured as member ports of the VLAN which is using the L2VSN; on the ERS 8800, the opposite is true, the IST ports must be removed from the VLAN using a L2VSN
  - You will see the messages below during configuration.
    - CAUTION: Adding I-SID to a VLAN on an IST switch requires configuring this ISID-VLAN pair on both IST peers and the IST MLT must be a member of the VLAN.
    - CAUTION: All VLANs with I-SIDs MUST be configured on both IST peers and IST MLT MUST be a member of all these VLANs.
- CFM simplified configuration is supported starting in release 3.4
- IPVPN-Lite over SPB is not supported in VSP 9000
- Multicast support for L2VSN, L3VSN, and IP Shortcuts is supported in the VSP 9000 3.4 release

8. Field Introduction & Support Specifications

8.1 Hardware and Deployment Specifications

SPB is supported on ERS 8600/8800 family of switches that have the following hardware.

- Line Cards – R, RS, and 88xx modules
- CP – 8692 with Supermezz or 8895

There are no other special considerations for hardware other than the overall requirements that apply all the features in ERS7.0 and ERS 7.1 releases.

SPB is supported on the VSP 9000 where only the 9024XL supports SPB NNI Interfaces. Any of the other VSP 9000 modules can be used as UNI ports.

In regards to the ERS 4800 and VSP 4000, please see section 7.4 above.

8.2 Installation and Commissioning Specifications

Please check the section on upgrades and migration for information on impact on existing features when SPB features are enabled.

8.3 Interoperability and Backwards / Forward Compatibility Specifications

For the ERS 8800 only, new SPBM 802.1aq TLVs have been defined by IANA after the 7.1.0.0 release. Release 7.1.0.x and 7.1.1.x both used pre-standard (draft) TLVs. In release 7.1.3.0, both the pre-standard (draft) and new 802.1aq standard TLVs are supported. In release 7.2 for the ERS 8800, only the new 802.1aq standard TLVs are supported.

9. VSP 7000 – Fabric Interconnect

The VSP 7000 by default operates in Fabric Interconnect stacking mode. The VSP 7000 can be provisioned in rear-port mode where the rear Fabric Interconnect ports will be treated as multiple virtual ports over the 4 physical Fabric Interconnect Ports. When in rear-port mode, the VSP 7000 operates in a standalone mode.

Two modes of operation are available in rear-port mode, standard or Shortest Path Bridging (SPB). Standard mode allows all the switch standard features minus SPB across the rear ports, i.e. Spanning Tree, OSPF, RIP, etc. In SPB mode, in the 10.2 release Shortest Path Bridging is supported while in the 10.3 both SPB and SMLT will be supported. Hence, when FI Mesh is required, rear-port mode with operational state of SPB needs to be provisioned. The diagram shows the FI port speeds available depending if Standard or SPB operational state is enabled.

To provide greater plug n 'play capability over the virtual ports when rear-port mode is enabled, LACP link aggregation and VLAN tagging are automatically enabled. This ensures that multiple virtual ports which may run within a single cable or if multiple FI cables are run in parallel that all virtual ports are automatically treated as one link. This simplifies any protocol adjacency such as IS-IS or OSPF. When you issue rear-ports mode all virtual ports will have their LACP state set to true, the LACP Admin Key to 4095 and LACP hashing mode be set to advance.



Color	Physical Fabric Interconnect Port	Rear Port Mode	Throughput	Ports
Black	FI Up (right) Top	Standard	240Gbps (x3 40GbE)	34, 35, 36
		SPB	240Gbps (x3 40GbE)	
Red	FI Down (left) Top	Standard	240Gbps (x3 40GbE)	38, 39, 40
		SPB	160Gbps (x2 40GbE)	38, 39
Blue	FI Up (right) Bottom	Standard	80Gbps (x1 40GbE)	33
		SPB	80Gbps (x1 40GbE)	
Blue	FI Down (left) Bottom	Standard	80Gbps (x1 40GbE)	37
		SPB	80Gbps (x1 40GbE)	

Figure 7 – FI Rear Port Details

In FI mesh, it is recommended to connect "like" color fabrics interconnect ports together, i.e. red port to an adjacent switch red port to get maximum possible throughput. You can connect any color ports together, i.e. a red port to a blue port, however, the port throughput will drop to the lower of two ports.

Rear-port interfaces 33-40 are regular ethernet 40 GbE interfaces. For some of the rear-ports multiple such 40 GbE interfaces are bundled together. As the rear-ports constitute a backplane

connection their throughput is shown in the table above for both transmit & receive (Full Duplex).

In rear-port SPB operational state, virtual port 40 is not available. Hence, the red port is reduced to 160Gbps.

In rear port mode, the front panel *Up* and *Down* LEDs blink in a quick pattern (125ms) to indicate rear-port mode is operational.

In the 10.2 release, SPBM is officially only supported in rear port SPB mode.

In the 10.2.1 release, SPB is supported in rear port SPB mode or in Fabric Connect Stacking mode (in a stack of two).

For more details, please refer to *Resilient Data Center Solutions Technical Configuration Guide*, publication number *NN48500-645*.

10. ISIS Metrics - Optional

You can configure the link metric to overwrite the default metric value. By configuring the metric, you can specify a preferred path. Low cost reflects high-speed media, and high cost reflects slower media. For the wide metric, the value ranges from 1 to 16,777,215.

- SPBM uses the L1-SPB metric defined in a new SPB sub-TLV
- The total cost of a path equals the sum of the cost of each link
- If a link has different metric values configured at each end of the link, SPBM will use the highest metric value
- The default value for wide metrics is 10

As an option, you can change the wide metric to the suggested values as shown in the table below to allow the switch to prefer the higher speed NNI links over the lower speed links.

Link Speed (Gbps)	Interface Type	ISIS L1-metric
1	Native Ethernet	2000
2	MLT bundle	1000
10	Native Ethernet	200
20	MLT bundle	100
40	Native Ethernet	50
80	MLT bundle / FI	25
100	Native Ethernet	20
120	MLT bundle / FI	17
160	MLT bundle	13

By default, all Fabric Interconnect ports operating in rear-port mode use the same LACP key (4095) on the VSP 7000. If you modify a rear-port metric, such as the SPBM-L1–Metric, the modification applies to all ports which have the same LACP key. If different metrics are to be used on specific rear-ports, you will need to set different LACP keys on those ports.

11. ISIS Accept Policy

Beginning in software release 4.1 for the VSP 4000/8000 and release 4.0 for the VSP 9000, IS-IS accept policies for IPv4 is introduced. Prior to this release, the ISIS IPv4 routes received over the SPB cloud are installed directly into the routing table. There is no ability to filter those routes and apply incoming route policies to them. Hence, networks that are being migrated from other routing protocols to ISIS/SPB are vulnerable to routing loops. ISIS accept policy functionality provides a way to avoid such loops.

You can create an IS-IS accept policy for the Global Routing Table (GRT) or a Virtual Routing and Forwarding (VRF) instance. You can create an IS-IS accept policy on a switch that operates at a global default level or for a specific advertising BEB. You can also use the filter mechanism for ISIS accept policies to redistribute routes between different VRFs, or between a VRF and the GRT.

ISIS policies can also use either a service instance identifier (I-SID) or an I-SID list to filter incoming traffic. For inter-VRF route redistribution, an I-SID value of 0 represents the GRT. For inter-VRF route redistribution between VRFs, the I-SID is the source VRF (or remote VRF).

You can filter traffic with ISIS accept policies by:

- advertising BEB
- I-SID or I-SID list (I-SID take precedence over an I-SID list)
- route-map


You can use IS-IS accept policies to apply at a global default level for all advertising Backbone Edge Bridges (BEBs) or for a specific advertising BEB.

IS-IS accept policies also allow you to use either a service instance identifier (I-SID) or an I-SID list to filter routes. The switch uses I-SIDs to define Virtual Services Networks (VSNs). I-SIDs identify and transmit virtualized traffic in an encapsulated SPBM frame. IS-IS accept policies can use I-SIDs or I-SID lists to filter the incoming virtualized traffic.

IS-IS accept policies can also apply route policies to determine what incoming traffic to accept into the routing table. With route policies the device can determine which routes to accept into the routing table based on the criteria you configure, which can give precedence to advertised routes from a particular protocol, route-source, route-type, or through other criteria.


12. SPB SMLT BEB Design Best Practices

12.1 SMLT BEB – C-VLAN Guidelines for L2VSN

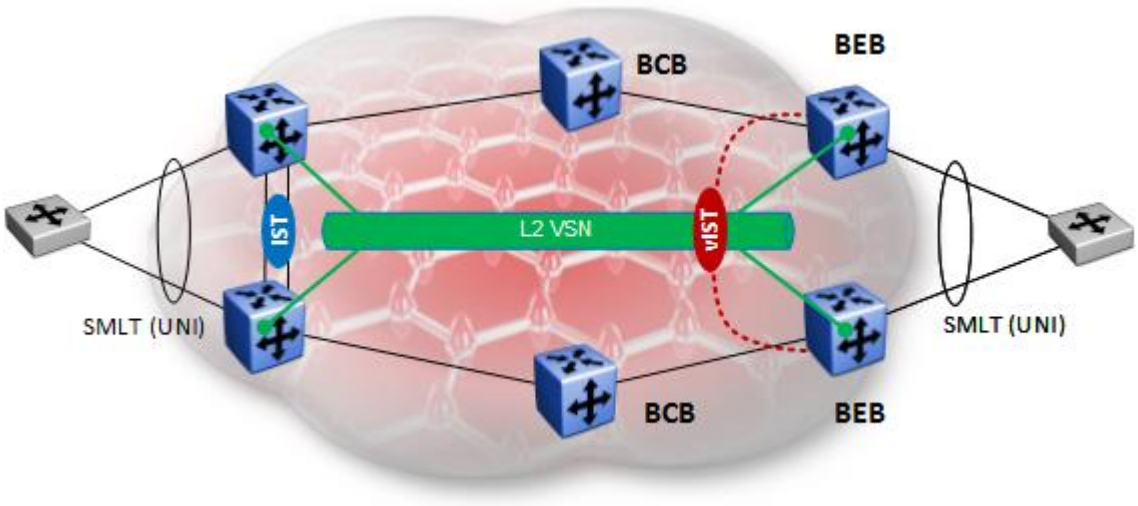

- Customer VLAN (CVLAN) has I-SID assigned and is thus L2 extended with L2VSN
- On the ERS 8800 and VSP 7000 the CVLAN cannot be configured on any NNI interface (including the IST)
- On the VSP 9000 the CVLAN cannot be configured on any NNI interface (except on the IST where it MUST be configured)
- On the VSP 4000 and VSP 8000 the CVLAN cannot be configured be configured on any NNI interface

12.2 SMLT BEB – Virtual Inter-Switch Trunk (vIST)

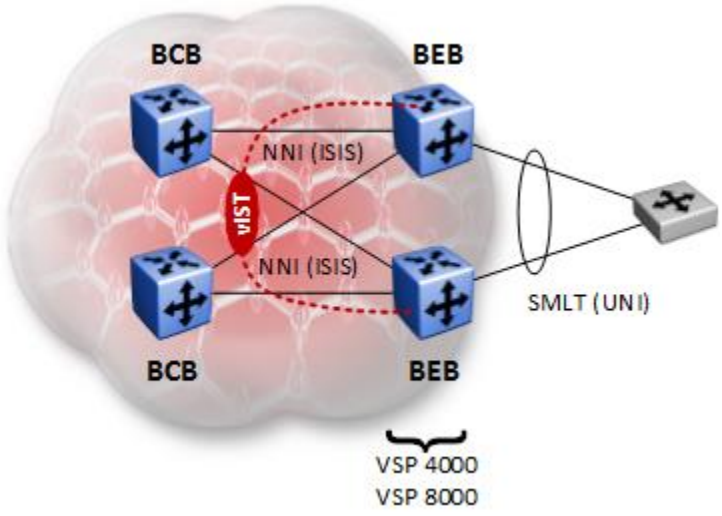


A traditional IST uses direct physical links configured as an MLT between a pair of cluster switches. Unlike a traditional IST, a vIST instead uses a virtual IST channel between a pair of cluster switches. This IST virtual channel is supported across the SPBM cloud and is not dependent on local physical ports. Hence, this eliminates the single point of failure with a dedicated MLT. The vIST always up as long as there is SPBM connectivity between the vIST peers. Also, the vIST devices do not have to be the same type.

For the vIST, an IST VLAN must be provisioned as would be required with a normal IST with an IPv4 address. In addition, an SPBM I-SID must be assigned to the vIST VLAN on both cluster switches. This I-SID value must be unique and cannot be assigned to other VLANs in the network.

For each C-VLAN provisioned, an SPBM I-SID must be assigned on both cluster switches irrregardless of the service (L2VSN, IP Shortcuts, or L3VSN). For an L2VSN service, this I-SID can be used on other BEB switches in the network to form an L2VSN service. For an IP Shortcuts or L3VSN service, this I-SID value must be unique and used only on the two vIST cluster switches. In addition, for an L3VSN service, a separate I-SID value is used to identify the L3VSN service.


12.3 SMLT BEB – ISIS Hello Timer Guidelines for ERS 8800

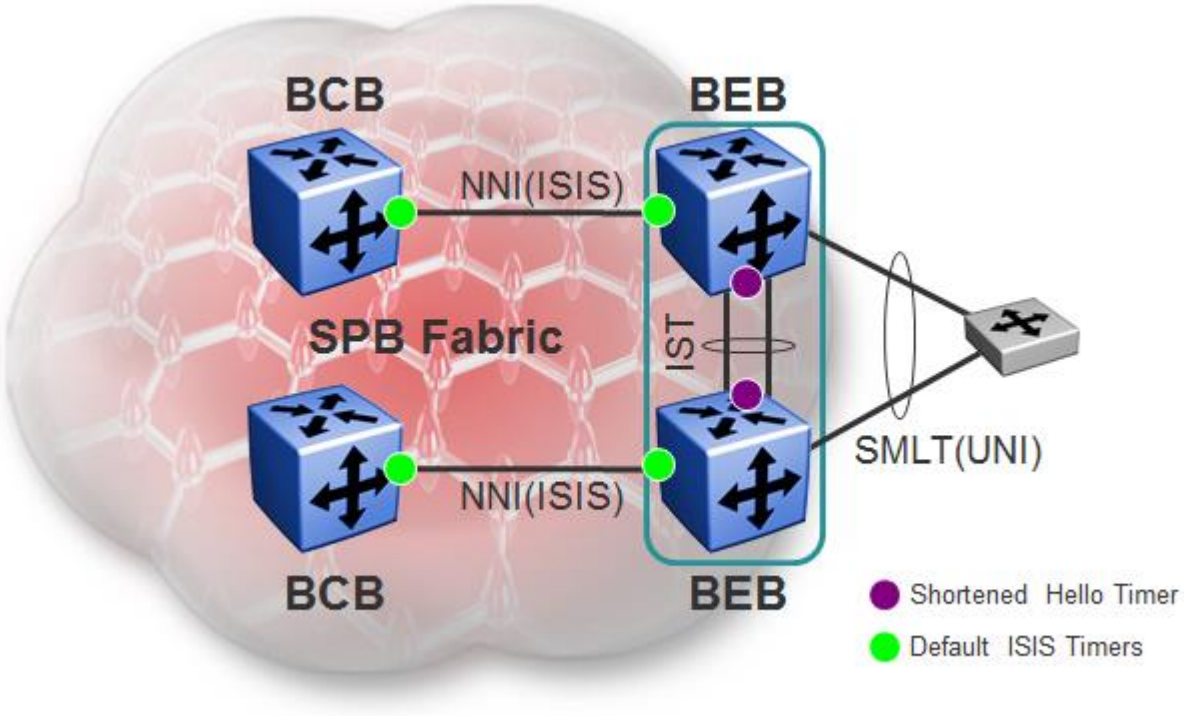


Connection Type	11-hello-interval	l1-hello-multiplier
IST – NNI ISIS	1 sec	27
NNI ISIS	9 sec (default)	3 (default)

- Please note that this recommended ISIS hello timer guideline only applies to the ERS 8800
- On the IST, ISIS is enabled on the MLT bundle
- Upon node restart, we need the ISIS adjacency over the IST MLT to come up before the IST comes up, therefore the ISIS Hello timer is reduced to 1 sec
- The hello multiplier is increased by the same factor to ensure the same time delay for an ISIS adjacency to transition in the down state
  - 1x27 = 9x3 = 27


12.4SMLT BEB – RSMLT

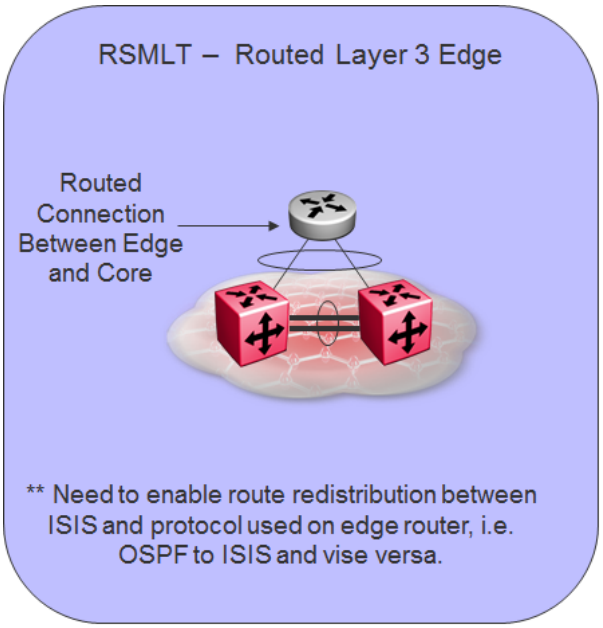

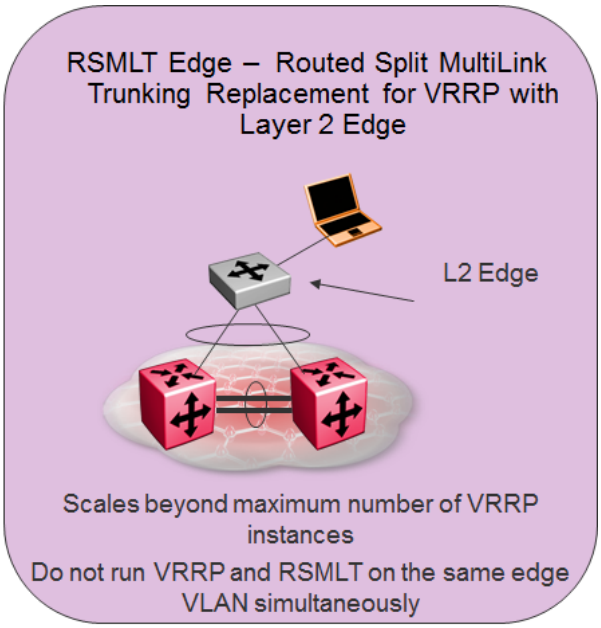

- Both RSMLT and RSMLT Edge is supported providing the SMLT cluster is either a VSP 9000 or ERS 8800 SMLT cluster
- For RSMLT, if the OSPF network has multiple entry points via multiple SPB nodes, OSPF route policies must be configured on the SPB BEB switches to deny OSPF routes from each remote BEB entry point to prevent routing loops. At this time, ISIS route policies are not supported

12.5 SMLT BEB – VLACP Guidelines

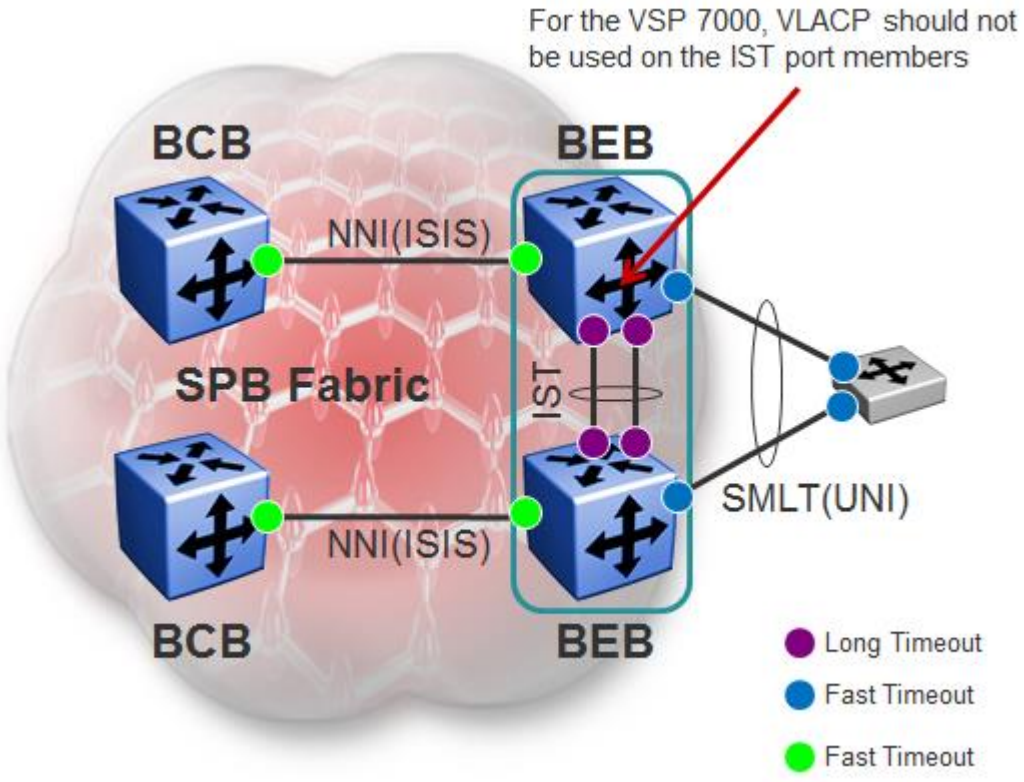

Connection Type	Fast Timer	Slow Timer	Timeout	Timeout Scale	ERS 8800 VSP 9000	VSP 7000
IST – NNI ISIS	N/A	10000	Long	3	√	X
SMLT (UNI)	500ms	N/A	Short	5	√	√
NNI (ISIS)	500ms	N/A	Short	5	√	√

- Enable VLACP on all NNI ISIS enabled interfaces
- IST (which is now also an NNI connection) uses same VLACP slow timers
  - This does not apply to the VSP 7000 where VLACP should not be enabled on the IST port members
- Core facing NNI interfaces use same VLACP timers as SMLT UNI connections


12.6 SMLT BEB – VSP 7000 Guidelines

For the VSP 7000, it is important to not enable the *filter-untagged-frame* option on the IST port members.

The default PVID of all IST ports must be the primary B-VLAN ID. This will happened automatically providing SPB is enabled first prior to enabling the IST. You can check the default PVID by entering the ACLI command *show vlan interface info <port list>.* To manually set the default PVID on the IST ports, use the ACLI command *vlan ports <port list> pvid <1-4096>.*

Also, it is recommended to not enable VLACP on the IST.

12.7 SLPP Guard – ERS 4800

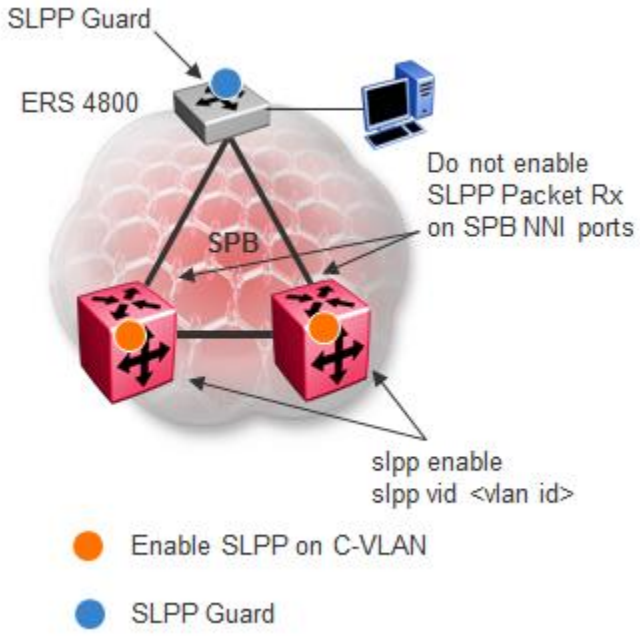

- On the ERS 4800 only, SLPP can enabled on the core bridges and in turn SLPP Guard can be enabled on the ERS 4800 for local port loop detection
    - The setting of the overload bit on the ERS 4800 allows it to operate as a stub node on the SPB network
        - This prevents traffic from one NNI port to be forwarded to another NNI port
    - Because of this feature, SLPP can be enabled on the core SPB bridges and in turn allowing SLPP Guard to be enabled on the ERS 4800
- Only enable SLPP on the C-VLAN on the core SPB bridges
    - Do not enable SLPP Packet Rx on core NNI ports
        - Never want to take these ports down

13. SPB NNI SMLT – migrating existing SMLT network to SPB

When migrating from a legacy SMLT network to SPBM, under certain circumstances, you may have to change the MLT configuration as only one adjacency (port or MLT) is allowed between a pair of SPB switches. Please see the drawings shown below illustrating the various options. Please note this section does not apply to the VSP 4000 or ERS 4800 as SMLT is not supported on these products.

Please note the green links shown illustrate active links with IS-IS enabled where the link is either a physical port or MLT bundle. Most of the topologies only really apply when migrating to SPB with a SMLT cluster.

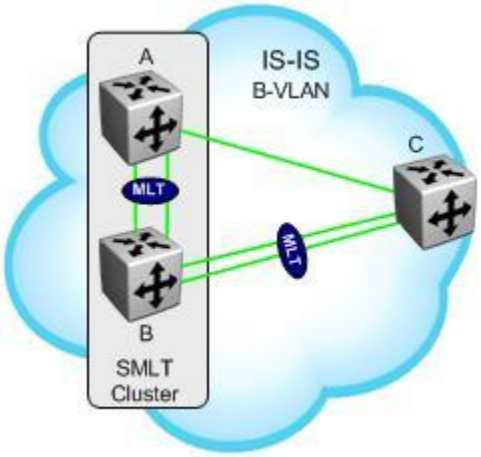


Figure 8: NNI - Triangle

In reference to switch C, it meets the requirement of only one link between a pair SPB switches as it only has IS-IS enabled on the port to switch A and on the MLT bundle to switch B.


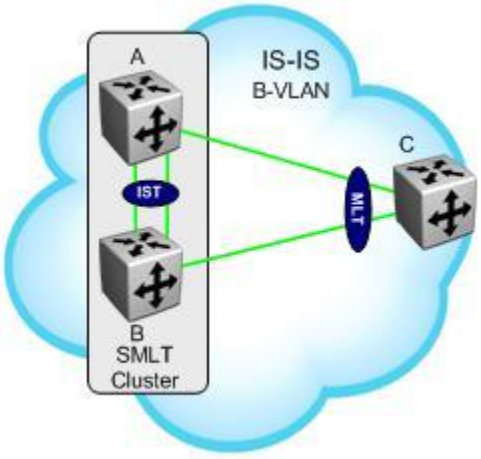


Figure 9: NNI - SMLT Triangle A

In reference to switch C, even though it has an MLT provisioned, IS-IS is provisioned on the physical ports to switch A and switch B. This type of configuration may show up when migrating to SPB where you may wish to not remove the MLT configuration. Please note that switch C can only be a ERS 8000 or VSP 9000.

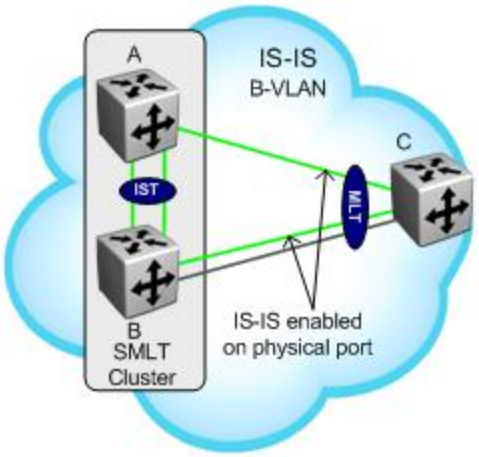

In reference to switch C, IS-IS cannot be enabled on the MLT bundle. If you wish to keep the MLT bundle, from switch C's perspective, enable IS-IS on the physical port to switch A and one of the physical ports to switch B. This applies when migrating from SMLT to SPB. If green field, then one should configure what is shown in figure 2.

Figure 10: NNI – SMLT Triangle B

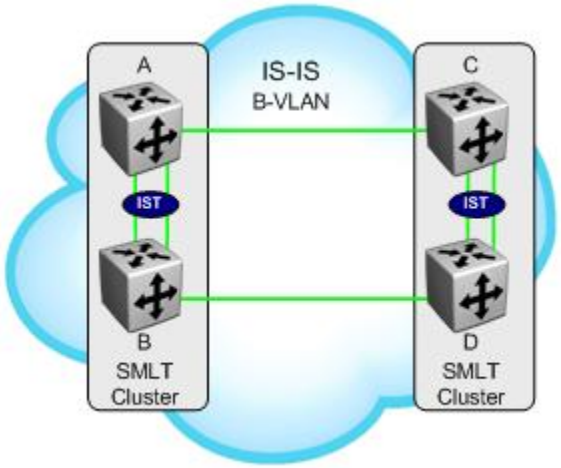


Figure 11: NNI –Square A

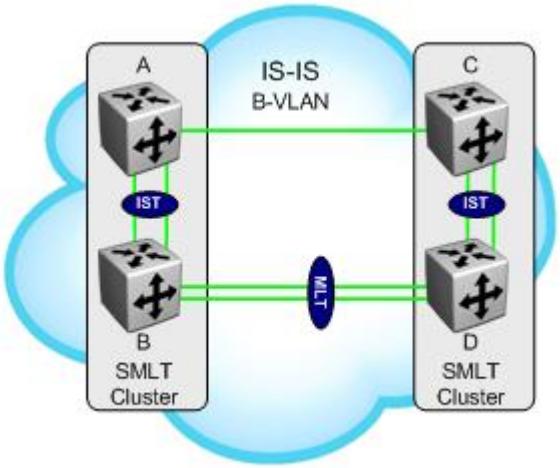


Figure 12: NNI – Square B


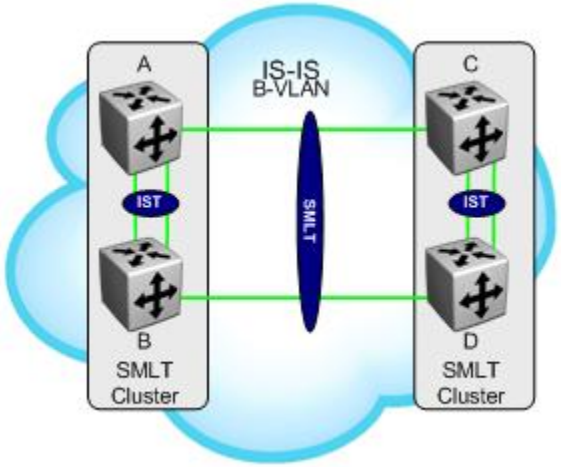


Figure 13: NNI – SLT Square

This diagram illustrates a likely scenario migrating from SMLT to SPB. The SMLT links could be made using regular MLT (with only one Ethernet port) or using SLT. In both cases, IS-IS should be enabled on the Ethernet port directly. You could enable IS-IS on the MLT (single port), but, this would not be recommended

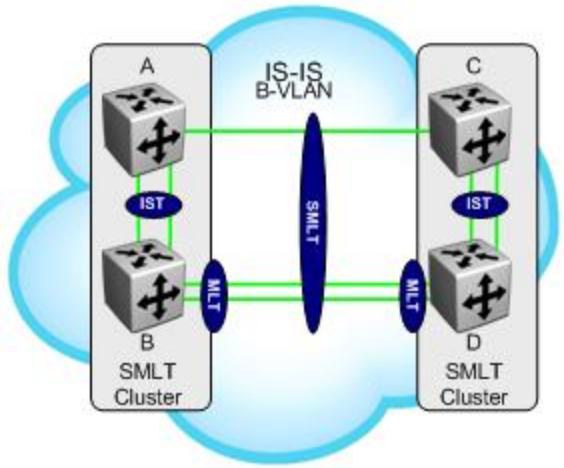

IS-IS is enabled on the link between nodes A and C. Between B and D, you cannot configure SPB on the MLT if it assigned with an SMLT ID. Once the SMLT ID is removed, then SPB can be enabled on the MLT.

Figure 14: NNI – SMLT Square

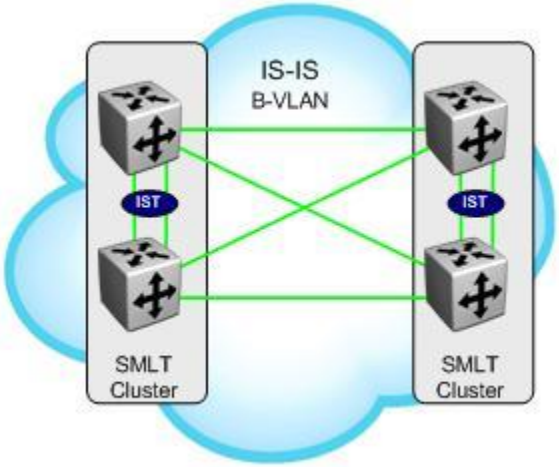


Figure 15: NNI – Full Mesh A


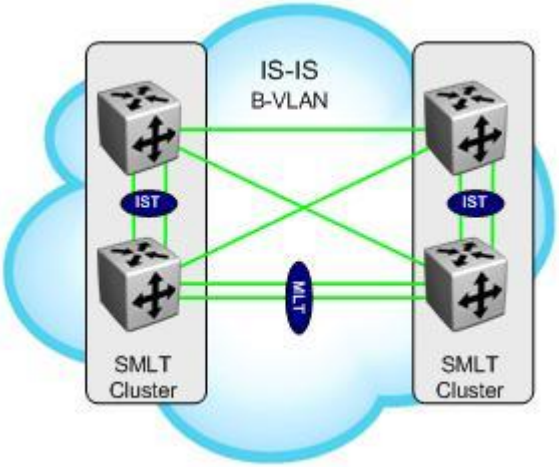


Figure 16: NNI – Full Mesh B

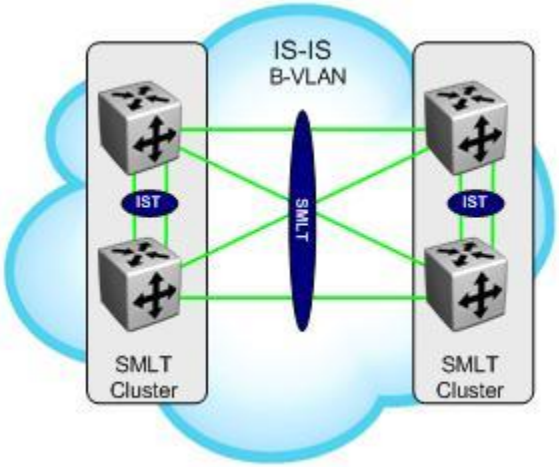

This diagram illustrates a common SMLT Full Mesh topology. Each switch has a local SMLT MLT defined with two Ethernet port members. When migrating this topology to SPB, IS-IS must not be enabled on the MLT instance, but, on the individual Ethernet ports which constitute it.

Figure 17: NNI – SMLT Full Mesh A

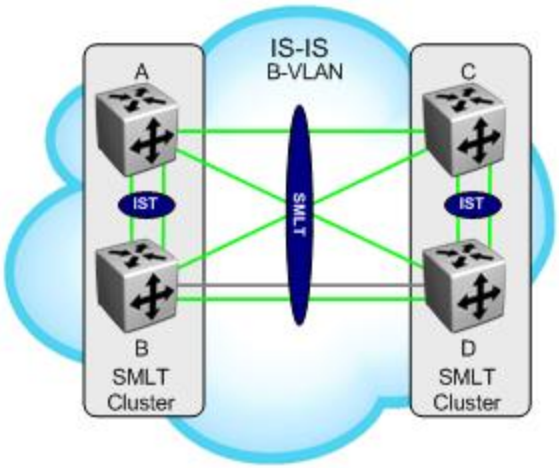


Figure 18: NNI – SMLT Full Mesh B

IS-IS should only be configured on one of the links between nodes B and D.

14. IS-IS TLV

SPB uses IS-IS TLV (Type Length Value) and sub TLVs parameters to carry information in Link State Advertisements to other SPB enabled bridges including SPB services as shown in the table below

TLV	Description	Usage
1	Area Addresses	IS-IS area
3	End System Neighbors	B-MAC & SysName of itsself
22	Extended IS Reachability	IS-IS adjacencies Sub-TLV 29: Link Metric for SPBM alone
129	Protocol Supported	SPBM
135	TE IP Reachability	IP Reachability for IP Shortcuts in GRT
143	SPBM Instance & BVIDs	Sub-TLV 6: BVIDs to ECT algorithm Used in IS-IS Hellos only
144	SPBM Instance, Nick-name, BVLANs & I-SIDs	Sub-TLV 1: SPBM Instance & Nick-name Sub-TLV 3: B-VLANs & L2VSN I-SIDs
184	SPBM IPVPN Reachability	IP Reachability for L3 VSNs
185	SPBM I-SID Constrained Source-Groups	IP Multicast stream availability for L2VSNs & L3VSNs
186	SPBM VRF-0/GRT Source-Groups	IP Multicast stream availability for GRT/VRF-0
236	IPv6 Reachability	IP Reachability for IPv6 Shortcuts in GRT

TLVs 1,3,22,129 & 135 are well known IS-IS TLVs which exited even before SPB was defined

TLVs 143 & 144 are new IS-IS TLVs defined for use by SPB

TLVs 184, 185 & 186 are new IS-IS TLVs defined in Avaya's IETF draft for SPB IP extensions

15. SPB Best Practices

The following are best practices when setting up SPB.

IS-IS

- Recommended to change the IS-IS SYS-ID (B-MAC) with an easy to recognize address to easily identify a switch. This will help with troubleshooting to easily recognize source and destination addresses
    - If you leave the SYS-ID with its default value, safe practice as it ensures no duplication in the network, it may be difficult to recognize the source and destination B-MAC for troubleshooting purposes
    - If you do change manually the SYS-ID, please take the necessary steps to ensure there is no duplication in the network
- Create two B-VLANs to allow load distribution over both B-VLANs. Even if SMLT is not used, this is still good practice as adding a new B-VLAN to an existing configuration requires that IS-IS to be disabled therefore disrupting the network

SPB

- Use a different IS-IS Nick Name on each switch that is easily recognizable
- If IP is enabled, i.e. IP shortcuts, it is required that an IS-IS IP source address be added

IST

- If the nodes are to form an SMLT Cluster, the IST must be already up and running before enabling IS-IS on it on the VSP 9000 and ERS 8000
- On the VSP 7000, SPB should be first configured prior to enabling the IST

SMLT

- Each switch in the cluster must be configured to peer with its neighbor.
- A virtual B-MAC will be automatically created based on the lowest SYS-ID in the cluster plus one
    - The virtual B-MAC is used as the source B-MAC when forwarding traffic received from an SMLT/SLT UNI port into the SPB fabric. This allows reverse MAC learning on the remote BEBs to map the SMLT learnt customer MAC address to an SMLT cluster rather than to an individual BEB switch forming that cluster
    - If you choose to use the automatic created virtual B-MAC, careful consideration must be taken to ensure that the SYS-ID if configured on of the cluster switches is greater than one compared to its peer
    - If you have chosen to manually change the IS-IS SYS-ID (B-MAC), then you should do the same for the virtual B-MAC.



Please note, the virtual B-MAC or any System ID created should not conflict with any other System ID or virtual B-MAC in the network. In other words, please ensure there is no duplication anywhere in your network of System ID's and virtual B-MACs.

A safe practice, which is also future proof, would be to leave the lowest byte in the SYS-ID as all zeroes.

- There is a consistency check in place to ensure that L2 VSN VLANs cannot be added to the IST or to any IS-IS enabled interface on the ERS 8800; does not apply for the IST MLT on a VSP 9000
- L3 VSN VLANs must still be added to the IST
- A L3 VSN VLAN can also be a L2 VSN VLAN
    - For example, an I-SID can be assigned to a VRF for L3 VSN. This does not restrict another I-SID using a different value from the one assigned to the VRF to be assigned to VLANs within the VRF

ISIS Adjacency

Physical or MLT links between IS-IS switches

- Only a single point to point IS-IS adjacency is supported between a pair of IS-IS switches
    - For example, if there are two ports between a pair of IS-IS switches, IS-IS should only be configured on one of the two ports (if configured on both, only one of those links will form an IS-IS adjacency)
    - If a single MLT is configured between a pair of IS-IS switches, all ports (1-8) in the MLT will be utilized – not that the MLT must be configured first and then IS-IS can be enabled on the MLT

CFM

- If not using the simplified CFM configuration commands:
    - The Domain name must be same on all switches in a IS-IS area
    - The Maintenance Association must the same on all switches in a IS-IS area
        - Two Maintenance Associations should be created, one for each B-VLAN to allow CFM testing over both B-VLANs
    - The MIP can be configured the same on all switches in a IS-IS area or uniquely defined per switch
- The MEP id should be unique to every switch in the SPB network



The MIP must be configured at the same level as the MEP on all switches in the SPB network.

16. SPB Configuration

For compatibility between the VSP 9000, VSP 4000, ERS 8800, ERS 4800, and VSP 7000, it is recommended to change the Spanning Tree mode to MSTP. By default, both the VSP 4000 and VSP 9000 support MSTP. This helps when using tools such as VLAN Manager in COM where the VLAN provisioned is broken down by Spanning Tree instance. To change the Spanning Tree mode to MSTP, please enter the following command:

ERS 8800

CLI

- 8800:5(config)#***boot config flags spanning-tree-mode mstp***

ACLI

- 8800:5# ***config bootconfig flags spanning-tree-mode mstp***

VSP 7000 & ERS 4800

- 7024XLS(config)#***spanning-tree mode mst***

Changing the Spanning Tree mode flag from default to MSTP on the ERS 8800 will result in a loss of configuration following the necessary reboot to activate the MSTP flag. This is because the syntax of certain commands in config.cfg (vlan creation & Spanning Tree port settings) changes in the two modes. It is therefore necessary to do a manual conversion of the config.cfg file (for example in a text editor using find & replace) in order to re-load the existing configuration file in MSTP mode.

16.1 SPB Configuration

16.1.1 ERS 8800 – Converting from CLI to ACLI

As the ERS 8000 supports CLI and ACLI, it is highly recommended to use ACLI as all other switches from Avaya only support ACLI. If you are presently using CLI, you can convert to ACLI using the following configuration.

```
ERS8800-1:5# copy /flash/config.cfg /flash/backup.cfg

ERS8800-1:5# save config file /flash/config_acli.cfg backup /flash/config.cfg mode
acli

ERS8800-1:5# config boot flags acli true


ERS8800-1:5 config boot choice primary config-file /flash/config_acli.cfg

ERS8800-1:5# save boot

ERS8800-1:5# boot -y
```

16.1.2 SPB and IS-IS Core Configuration

SPB and IS-IS core configuration

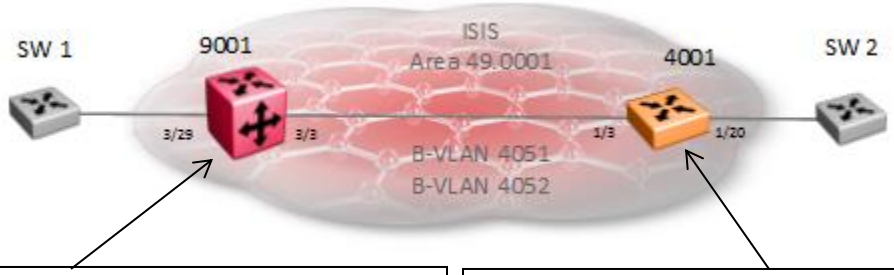


```
configure terminal
spbm
prompt 9001
router isis
  spbm 1
  spbm nick-name 0.90.01
  spbm b-vid 4051-4052 primary 4051
  manual-area 49.0001
exit
vlan create 4051 name BVLAN-1 type spbm-bvlan
vlan create 4052 name BVLAN-2 type spbm-bvlan
router isis enable
```

```
configure terminal
spbm
prompt 4001
router isis
  spbm 1
  spbm nick-name 0.40.01
  spbm b-vid 4051-4052 primary 4051
  manual-area 49.0001
exit
vlan create 4051 name BVLAN-1 type spbm-bvlan
vlan create 4052 name BVLAN-2 type spbm-bvlan
router isis enable
```

```
config terminal

spbm

prompt <word 0-255> **By default, becomes SPB System Name

router isis

       sys-name **Please see note above

       spbm 1

       system-id <xxxx.xxxx.xxxx - Optional, by default the base MAC is used>
```

```
        spbm 1 nick-name <x.xx.xx - 2.5 bytes>
        spbm 1 b-vid <prim vlan id,sec vlan id> primary <prim vlan id>
        manual-area <xx.xxxx.xxxx...xxxx - 1...13 bytes>
exit
vlan create <primary vlan-id> name "BVLAN-1" type spbm-bvlan
vlan create <secondary vlan-id> name "BVLAN-2" type spbm-bvlan
router isis enable
```

VSP 7000 & ERS 4800

```
config terminal
snmp-server name <word 0-31> **By default, becomes SPB System Name
vlan create <primary vlan-id> name "BVLAN-1" type spbm-bvlan
vlan create <secondary vlan-id> name "BVLAN-2" type spbm-bvlan
spbm
router isis
        sys-name **Please see note above
        spbm 1
        system-id <xxxx.xxxx.xxxx – Optional, by default the base MAC is used>
        spbm 1 nick-name <x.xx.xx - 2.5 bytes>
        spbm 1 b-vid <prim vlan id,sec vlan id> primary <prim vlan id>
        manual-area <xx.xxxx.xxxx...xxxx - 1...13 bytes>
exit
router isis enable
```

Please note, if the IS-IS sys-name is not provisioned, by default, the global system name is used as the IS-IS sys-name. If you do wish to set the IS-IS sys-name, it can be set to a value different than global system name.

The primary and secondary VLAN provisioning must be the same on all SPB bridges, i.e. if VLAN 4051 is provisioned as the primary B-VLAN and VLAN 4052 is provisioned as the secondary B-VLAN, then this must be repeated on all SPB bridges.

On the VSP 7000 and ERS 4800, the B-VLANs must be configured first prior to enabling SPB and ISIS.

By default, the SPB EtherType is set to 0x8100 on all Avaya switches when SPB is enabled. Please note this value is set on purpose to allow SPB to be transported across non-SPB networks, i.e. transparent VLAN service or a traditional Ethernet network. For SPB interopability between different vendors, this value will have to be changed to the STP standard EtherType value of 0x88a8 unless this vendor also supports a SPB EtherType value of 0x8100.

The default switch behavior regarding System-Id is to use a MAC address within the MAC address range reserved for the switch. This ensures that there will be no de-stabilizing System-Id conflicts in the network. Avaya recommends the use of default System-Id values for this reason. To allow greater flexibility to customers, the use of configured System-Id values is also supported. When using configured System-Id

values it is very critical to ensure that each SPB enabled switch in the network uses a unique ISIS System-Id value.

If you do decide to change the System ID, it is recommended to set the locally administered bit. The second least significant bit of the most significant byte of the MAC address should be set to 1 to indicate the MAC address as locally administered. For more details, please go to http://en.wikipedia.org/wiki/MAC_address.

Please note that if you change the System ID after ISIS has already been enabled, you must also change the nickname. If you do not wish to change the nickname, you will still need to temporary change the nickname. After you change the System ID and temporarily change the nickname, enable ISIS, disable ISIS, change the nickname back to the orginal value, and then enable ISIS again.

Verify Operations:

```
show running-config module isis
show running-config module spbm
show isis
show isis spbm
show isis system-id
show isis nick-name
show isis manual-area
show isis spbm
show isis spbm nick-name
show isis spbm unicast-fib
show isis spbm unicast-fib vlan <BVLAN ID>
show isis spbm unicast-tree <BVLAN ID>
show isis lsdb
```

16.1.3 SPB NNI Interface Configuration

SPB and IS-IS core interface configuration




```
configure terminal
interface gigabitethernet 3/3
  no shutdown
  no spanning-tree mstp force-port-state enable
  isis
  isis spbm 1
  isis enable
exit
```

```
configure terminal
interface gigabitethernet 1/3
  no shutdown
  no spanning-tree mstp force-port-state enable
  isis
  isis spbm 1
  isis enable
exit
```

```
interface gigabitethernet <slot/port>
   isis
   isis spbm 1
   isis enable
exit
interface mlt <mlt id>
   isis
   isis spbm 1
   isis enable
exit
```

```
ERS 4800 as of release 5.8 and VSP 7000 as of release 10.3:
interface ethernet <slot/port>
   isis
   isis spbm 1
   isis enable
exit
```

Please note that Spanning Tree should be disabled on all SPB NNI ports including all single ports or ports that are part of an MLT when the SBI NNI links are directly attached to another Avaya SPB switch. This does not apply to SMLT port members since SMLT disables Spanning Tree automatically.

As of release 10.3 for the VSP 7000 and 5.8 for the ERS 4800, the interface

configuration changed from *interface fastEthernet <ports>* to *interface ethernet <ports>*

On the VSP 9000, by default all ports are administratively disabled.


On the ERS 4800 and VSP 7000, for all MLT's, ISIS is enabled at the port level, i.e. on each port that is a member of the MLT.

Verify Operations:

```
show isis interface
show isis adjacencies
show isis lsdb tlv 22 detail
show isis int-l1-cntl-pkts
```

16.1.4 CFM Configuration

CFM configuration

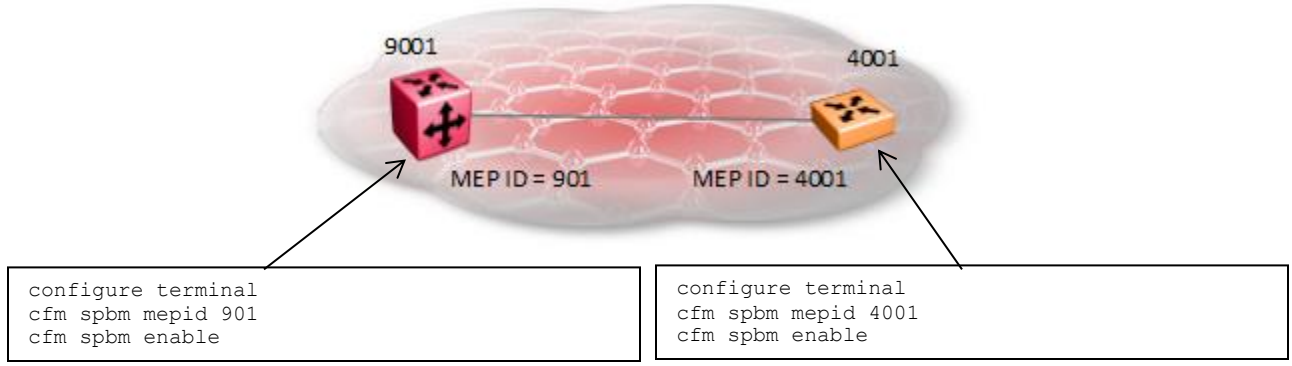


```
config terminal
cfm spbm mepid <1-8191>
cfm spbm enable
```

By default, the CFM a Maintenance Domain name of *spbm* is used while two Maintenance Associations are create using the two B-VLAN IDs.

Verify Operations:

```
show cfm <maintenance-domain|maintenance-association|maintenance-endpoint>
l2 ping vlan <BVLAN ID> routernodename <system-name>
l2 ping vlan <BVLAN ID> mac <system-id>
l2 traceroute vlan <BVLAN ID> routernodename <system-name>
l2 traceroute vlan <BVLAN ID> mac <system-id>
```

16.1.5 VSP 7000 – Fabric Interconnect Mesh

16.1.5.1 Rear Port Mode

In the 10.2 release, the VSP 7000 can be configured in Fabric Interconnect Mesh (FI) mode by setting the rear-port mode to SPB. This allows the VSP 7000 to run SPB via the rear ports using stacking cables to connect to other VSP 7000s. In the 10.2.1 release, SMLT is supported allowing for either SPB or SMLT to operate via the rear port. In the 10.3 release, both SPB and SMLT is supported via the rear ports.

Please refer to the *Resilient Data Center Solutions Technical Configuration Guide* publication number NN48500-645 for more details.

ACLI - L2 VSN

```
config terminal
rear-port mode enable spb
Enabling rear port mode will disable Fabric Interconnect Stack operation.
Switch configuration will be reset to partial-defaults. Continue(yes/no)?yes
--------------------------------------------------------------------------------
show rear-port mode
```

16.1.5.2 Rear Port Mode LACP Provisioning

By default when rear port mode is enabled, LACP is automatically enabled across all rear ports using a default LACP key of 4095. If you wish, you can change this value on one or more of the four rear ports. In SPB rear port mode, the port numbers for each rear port is as follows:


- FI Up (right) Bottom: Port 33
- FI Up (right) Top: Ports 34, 35, 36
- FI Down (left) Bottom: Port 37
- FI Down (left) Top: Ports 38, 39 (SPB) or ports 38, 39, 40 (Standard)

For example, to change the LACP on the *FI Up (right) Top* ports:

```
interface ethernet 34-36
lacp key 4094
exit
show lacp aggr
show lacp port aggr <aggr id>
show lacp debug member 34-36
```

16.1.6 SMLT – Normal IST

Enabling IST

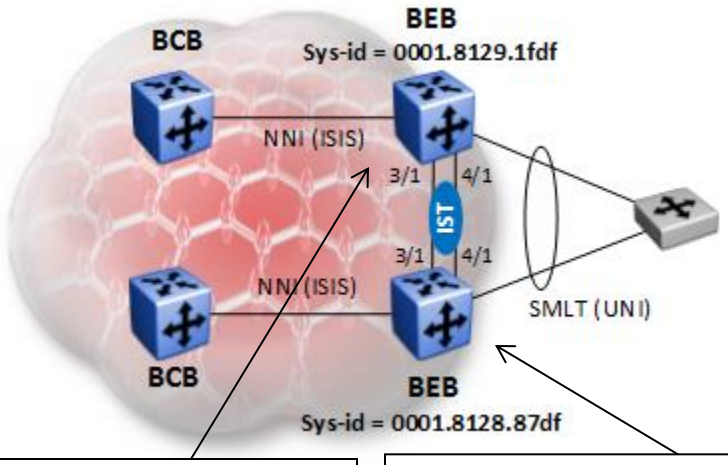


```
config terminal
mlt 1 enable name IST
mlt 1 member 3/1,4/1
interface mlt 1
   ist peer-ip 10.1.2.2 vlan 2
   ist enable
exit
vlan create 2 type port-mstprstp 0
vlan mlt 2 1
interface vlan 2
   ip address 10.1.2.1 255.255.255.252
exit
router isis
  spbm 1 smlt-peer-system-id 0001.8128.87df
exit
```

```
config terminal
mlt 1 enable name IST
mlt 1 member 3/1,4/1
interface mlt 1
   ist peer-ip 10.1.2.1 vlan 2
   ist enable
exit
vlan create 2 type port-mstprstp 0
vlan mlt 2 1
interface vlan 2
   ip address 10.1.2.2 255.255.255.252
exit
router isis
  spbm 1 smlt-peer-system-id 0001.8129.1fdf
exit
```

Enter the ALCI *show isis system-id* on each peer switch to get the System ID value for the *spbm 1 smlt-peer-system-id xxxx.xxxx.xxxx* command. Each switch in the cluster must peer with its peer's System ID value.

```
config terminal
mlt y enable name IST
mlt y member slot/port,slot/port
interface mlt y
   ist peer-ip <ip address of peer> vlan x
   ist enable
exit
vlan create x type port-mstprstp 0
vlan mlt x y
vlan members x slot/port-slot/port
interface vlan x
   ip address <ip address> <ip mask>
exit
```

```
router isis
   spbm 1 smlt-virtual-bmac <xx:xx:xx:xx:xx:xx – Optional, by default the lowest B-MAC
   in the cluster is used plus one>
   spbm 1 smlt-peer-system-id <xxxx.xxxx.xxxx - system id of peer>
exit
```


Verify Operations:

```
show mlt
show ist mlt
```

16.1.7 SMLT - Virtual IST (vIST)

The following shows how to provision the virtual IST. This feature will allow a SMLT cluster to have an IST between two cluster switches that does not require a physical connection between the cluster switches, i.e. an MLT with two or more ports.

Enabling vIST

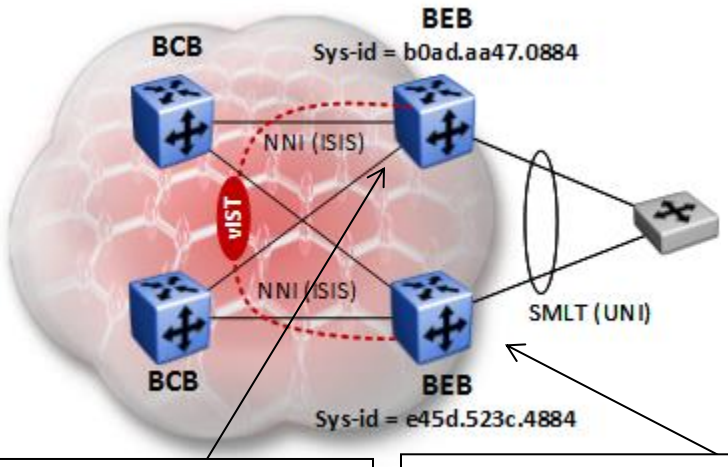


```
config terminal
router isis
   spbm 1 smlt-peer-system-id e45d.523c.4884
exit
vlan create 2 type port-mstprstp 0
vlan i-sid 2 2002
interface vlan 2
   ip address 10.1.82.1 255.255.255.252
exit
virtual-ist peer-ip 10.1.82.2 vlan 2
```

```
config terminal
router isis
   spbm 1 smlt-peer-system-id b0ad.aa47.0884
exit
vlan create 2 type port-mstprstp 0
vlan i-sid 2 2002
interface vlan 2
   ip address 10.1.82.2 255.255.255.252
exit
virtual-ist peer-ip 10.1.82.1 vlan 2
```

Enter the ALCI *show isis system-id* on each peer switch to get the System ID value for the *spbm 1 smlt-peer-system-id xxxx.xxxx.xxxx* command. Each switch in the cluster must peer with its peer's System ID value.


```
config terminal
router isis
   spbm 1 smlt-peer-system-id <xxxx.xxxx.xxxx - system id of peer>
   spbm 1 smlt-virtual-bmac <xx:xx:xx:xx:xx:xx - Optional, by default the lowest B-MAC
   in the cluster is used plus one>
exit
vlan create x type port-mstprstp 0
vlan i-sid x <i-isid number>
interface vlan x
   ip address <ip address>/<mask>
exit
virtual-ist peer-ip <ip address of peer> vlan x
```

Verify Operations:

```
show virtual-ist
```

16.1.8 L2VSN Configuration

L2 VSN

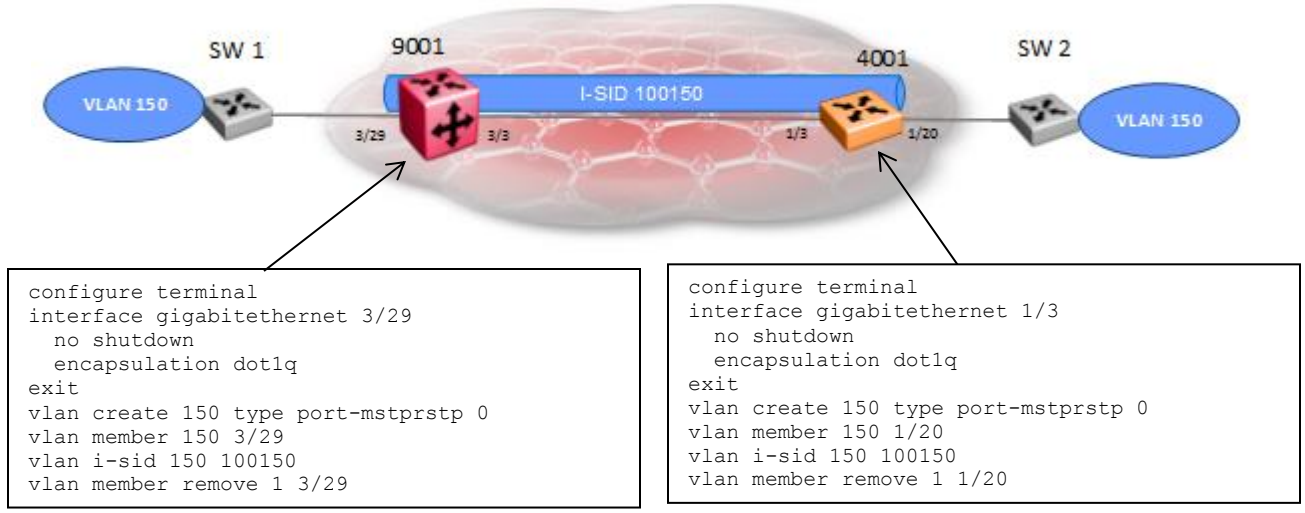


```
config terminal
vlan create <vlan id> type port-mstprstp 0
vlan members <vlan id> <slot/port>
vlan i-sid <vlan-id> <i-sid: 0..16000000>
```


Although you can use any number from 1 to 16,777,215 as an I-SID value, it is recommended not to use a value from 16,000,001 to 16,777,215. This range is used for Multicast over SPB.

Verify Operations:

```
show isis spbm i-sid all
show isis spbm i-sid all id <i-sid value>
show isis spbm multicast-fib i-sid <i-sid value>
show vlan i-sid
show isis lsdb tlv 144 detail
show isis lsdb sysid <system-id> tlv 144
All switches except VSP7000 and ERS4800:
show vlan mac-address-entry <C-VLAN id>
show vlan remote-mac-table <C-VLAN id>
VSP7000 and ERS4800:
show mac-address-table spbm i-sid
```

16.1.9 SwitchedUNI Configuration

Switched UNI

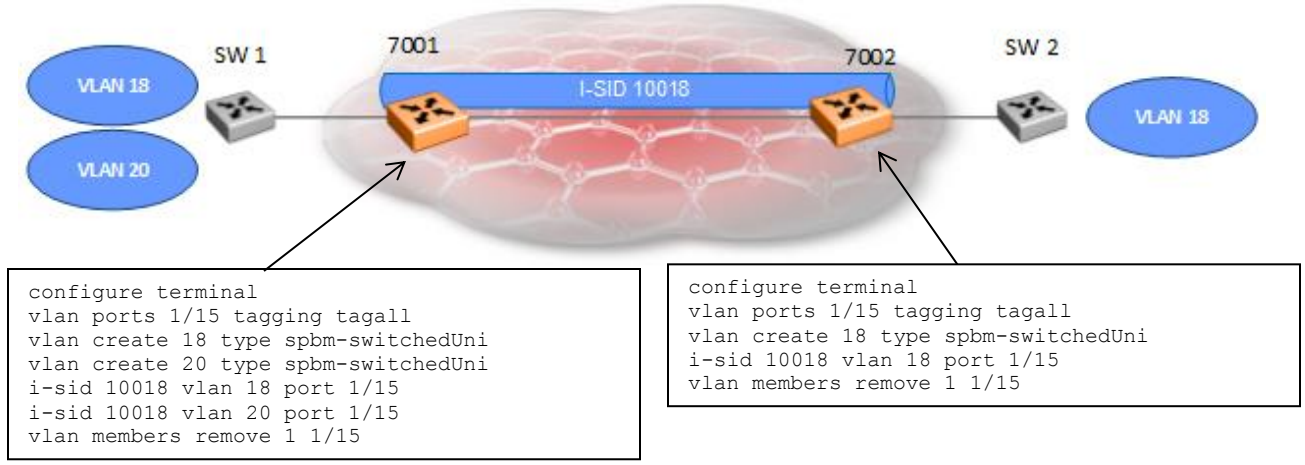


Please note that switches 7001 and 7002 are VSP7000 switches

```
config terminal
vlan create <vlan id> type spbm-switchedUni
i-sid <i-sid: 0..16000000> vlan <vlan-id> port <port member>
```

Although you can use any number from 1 to 16,777,215 as an I-SID value, it is recommended not to use a value from 16,000,001 to 16,777,215. This range is used for Multicast over SPB.

16.1.10 Transparent UNI Configuration

Transparent UNI

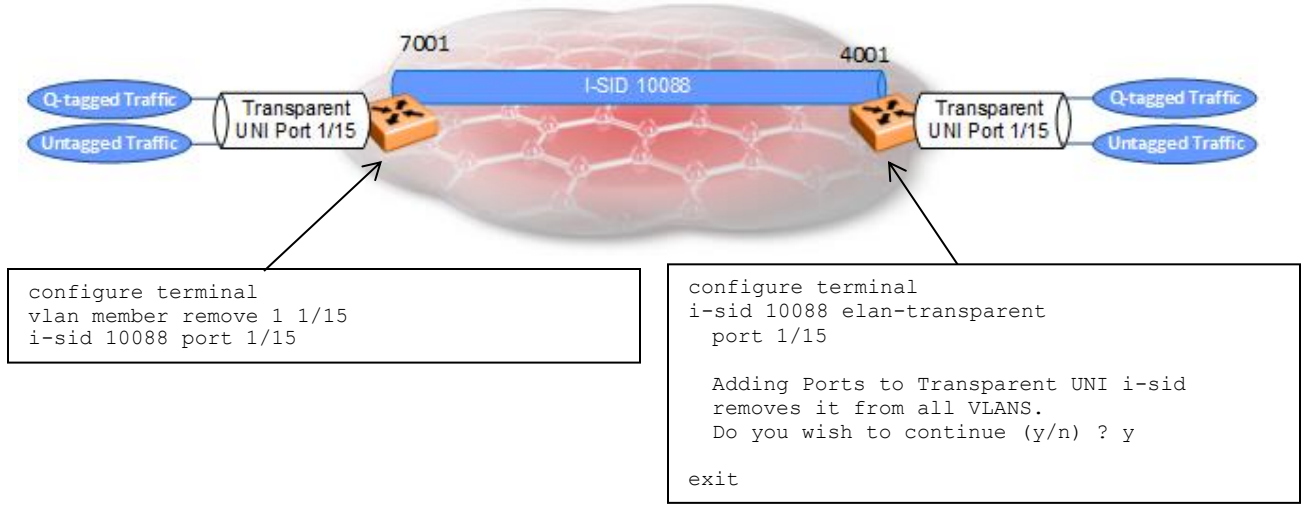

Please note that 7001 is a VSP7000 switch while 4001 is a VSP4000 switch.

VSP7000:


```
config terminal
i-sid <i-sid: 0..16000000> port <port member>
```

VSP4000:

```
i-sid <i-sid: 0..16000000> elan-transparent
  port <slot/port> | mlt <mlt-id>
exit
```

Although you can use any number from 1 to 16,777,215 as an I-SID value, it is recommended not to use a value from 16,000,001 to 16,777,215. This range is used for Multicast over SPB.

Transparent UNI - SMLT

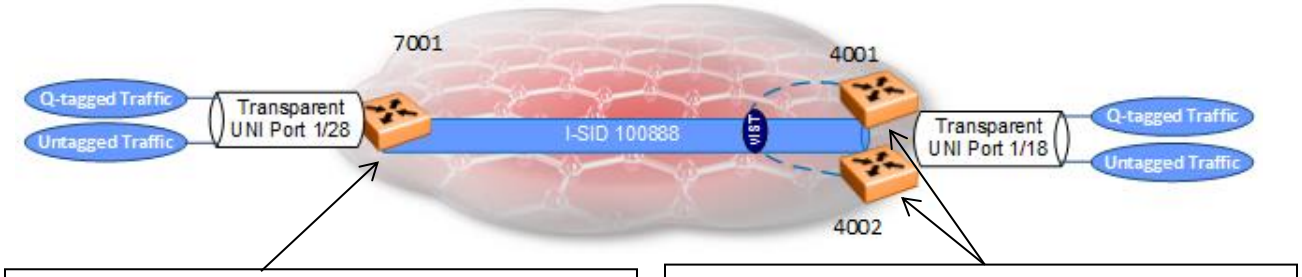


```
configure terminal
vlan member remove 1 1/28
i-sid 100888 port 1/28
```

```
configure terminal
mlt 6
mlt 6 member 1/18
interface mlt 6
  smlt
exit
i-sid 100888 elan-transparent
  mlt 6

  Adding MLT to Transparent UNI i-sid removes
  it from all VLANS.
  Do you wish to continue (y/n)? y

exit
```

Please note that 7001 is a VSP7000 switch while 4001 and 4002 are VSP4000 switches using vIST.

VSP7000:


```
config terminal
i-sid <i-sid: 0..16000000> port <port member>
```

VSP4000:

```
mlt <mlt-id>
mlt <mlt-id> member <port members>
interface mlt <mlt-id>
  smlt
exit
i-sid <i-sid: 0..16000000> elan-transparent
  mlt <mlt-id>
exit
```

16.1.11L3VSN Configuration

L3 VSN with direct interface redistribution

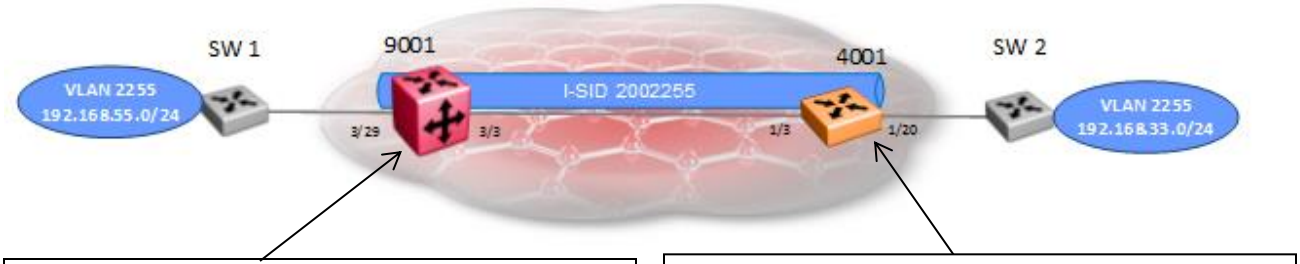


```
configure terminal
interface loopback 1
  ip address 1 10.1.90.1/255.255.255.255
exit
router isis
  ip-source-address 10.1.90.1
  spbm 1 ip enable
exit
ip vrf blue
interface gigabitethernet 3/29
  no shutdown
  encapsulation dot1q
exit
vlan create 2255 type port-mstprstp 0
vlan member 2255 3/29
interface vlan 2255
  vrf blue
  ip address 10.198.55.1 255.255.255.0
exit
router vrf blue
  ipvpn
  i-sid 2002255
  ipvpn enable
  isis redistribute direct
  isis redistribute direct enable
exit
isis apply redistribute direct vrf blue
vlan member remove 1 3/29
```

```
configure terminal
interface loopback 1
  ip address 1 10.1.40.1/255.255.255.255
exit
router isis
  ip-source-address 10.1.40.1
  spbm 1 ip enable
exit
ip vrf blue
interface gigabitethernet 1/20
  no shutdown
  encapsulation dot1q
exit
vlan create 2255 name type port-mstprstp 0
vlan members 2255 1/20
interface vlan 2255
  vrf blue
  ip address 10.198.33.1 255.255.255.0
exit
router vrf blue
  ipvpn
  i-sid 2002255
  ipvpn enable
  isis redistribute direct
  isis redistribute direct enable
exit
isis apply redistribute direct vrf blue
vlan member remove 1 1/20
```

```
config terminal
interface loopback <Interface id value; 1-256>
  ip address <Interface id value; 1-256>  <Ipv4address/mask>
exit
router isis
  ip-source-address <loopback ip>
  spbm 1 ip enable
exit
ip vrf <vrf-name>
vlan create <vlan id> type port-mstprstp 0
vlan members <vlan id> <slot/port>
interface vlan <vlan id>
```

```
  vrf <vrf-name>
  ip address <a.b.c.b mask>
exit
router vrf <vrf-name>
  ipvpn
  i-sid <i-sid: 0..16000000>
  ipvpn enable
  isis redistribute direct
  isis redistribute direct enable
exit
isis apply redistribute direct vrf <vrf-name>
```



Although you can use any number from 1 to 16,777,215 as an I-SID value, it is recommended not to use a value from 16,000,001 to 16,777,215. This range is used for Multicast over SPB.

Although the above example only show direct interface redistribution into ISIS, other protocols such as BGP, OSPF, RIP, and Static can also be enabled.


Verify Operations:

```
show isis spbm (verify SPB IP is enabled globally)
show ip ipvpn
show ip interface vrf <vrf name>
show ip route vrf <vrf name>
ping <ip address> vrf <vrf name> source <local source ip address>
l2 ping ip-address <ip address> vrf <vrf name>
l2 traceroute ip-address <ip address> vrf <vrf name>
show isis lsdb tlv 184 detail
show isis lsdb sysid <system id> tlv 184 detail
```

16.1.12L3VSN – leaking routes between VRF's

L3 VSN with two separate VRF's (red and blue) with one common shared VRF (shared). Allows routing from the red or blue VRF to the shared VRF and vise-versa, but, no routing between the red and blue VRF's. For all VRFs (red, blue, and shared), please see configuration step in the previous example titled *L3VSN Configuration*.

.

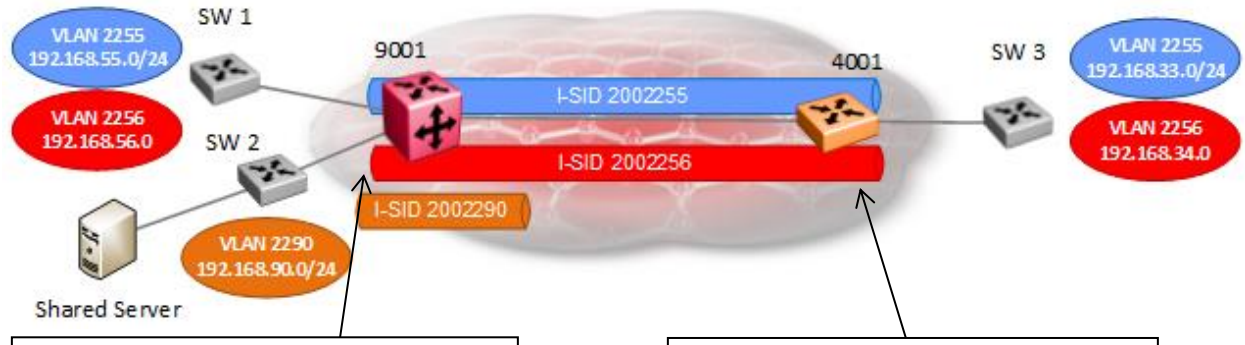


```
configure terminal
router vrf blue
  isis accept i-sid 2002290 enable
exit
isis apply accept vrf blue
router vrf red
  isis accept i-sid 2002290 enable
exit
isis apply accept vrf red
router vrf shared
  ip isid-list users list 2255,2256
  isis accept isid-list users enable
exit
isis apply accept vrf shared
```

```
configure terminal
router vrf blue
  isis accept i-sid 2002290 enable
exit
isis apply accept vrf blue
configure terminal
router vrf red
  isis accept i-sid 2002290 enable
exit
isis apply accept vrf red
```

Single I-SID:


```
config terminal
router vrf <vrf-name>
  isis accecpt i-sid < i-sid: 0..16000000> enable
exit
isis apply accept vrf <vrf-name>
```

I-SID List:

```
config terminal
router vrf <vrf-name>
  ip isid-list <isid-list name> list <List of i-sid values>
  isis accept isid-list <isid-list name> enable
exit
isis apply accept vrf <vrf-name>
```

16.1.13IP Shortcuts

IP Shortcuts with direct interface redistribution

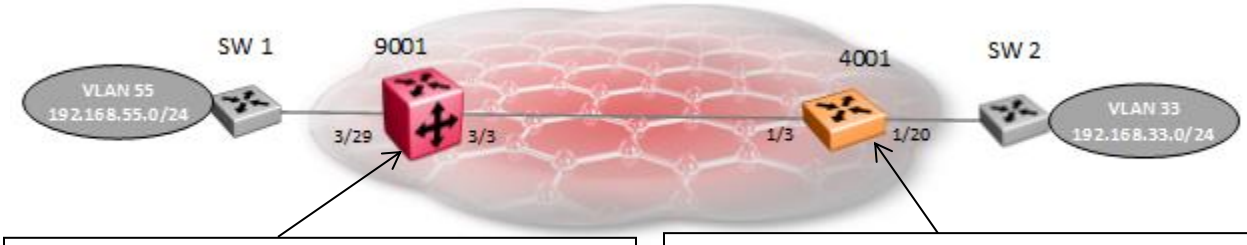


```
configure terminal
interface loopback 1
  ip address 1 10.1.90.1/255.255.255.255
exit
router isis
  ip-source-address 10.1.90.1
  spbm 1 ip enable
exit
interface gigabitethernet 3/29
  no shutdown
  encapsulation dot1q
exit
vlan create 55 type port-mstprstp 0
vlan member 55 3/29
interface vlan 55
  ip address 10.198.55.1 255.255.255.0
exit
router isis
  redistribute direct
  redistribute direct enable
exit
isis apply redistribute direct
vlan member remove 1 3/29
```

```
configure terminal
interface loopback 1
  ip address 1 10.1.40.1/255.255.255.255
exit
router isis
  ip-source-address 10.1.40.1
  spbm 1 ip enable
exit
interface gigabitethernet 1/20
  no shutdown
  encapsulation dot1q
exit
vlan create 33 name type port-mstprstp 0
vlan members 33 1/20
interface vlan 33
  ip address 10.198.33.1 255.255.255.0
exit
router isis
  redistribute direct
  redistribute direct enable
exit
isis apply redistribute direct
vlan member remove 1 1/20
```

```
config terminal
interface loopback < Interface id value; 1-256>
  ip address <Interface id value; 1-256>  <Ipv4address/mask>
exit
router isis
  ip-source-address <loopback ip>
  spbm 1 ip enable
exit
router isis
  redistribute direct
  redistribute direct enable
exit
isis apply redistribute direct
```

Although the above example only show direct interface redistribution into ISIS, other protocols such as BGP, OSPF, RIP, and Static can also be enabled.


Verify Operations:

```
show isis spbm (verify SPB IP is enabled globally)
show ip interface
show ip route
show isis spbm ip-unicast-fib
ping <ip address>
l2 ping <ip address>
l2 traceroute ip-address <ip address>
show isis lsdb tlv 135 detail
show isis lsdb sysid <system id> tlv 135 detail
```

16.1.14IP Shortcut– Suppress IST Network

When IP Shortcuts is enabled with the option of redistribution of direct interfaces into ISIS, all local networks will be advertised including the IST or vIST network used for the the IST VLAN. If you wish, you can suppress the IST network by simply adding a route map matching the IP subnet used for the IST or vIST.


Route-map to suppress the IST from being advertised if ISIS direct interface is enabled

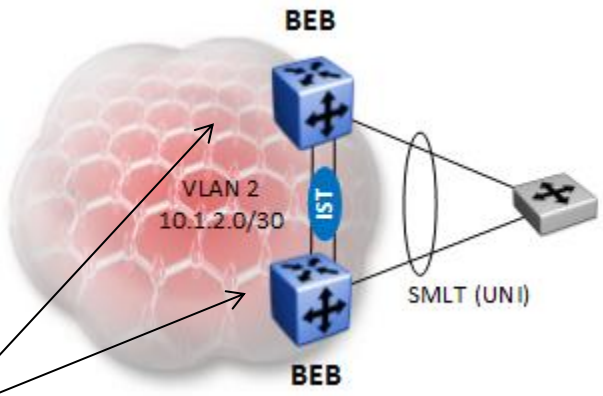


```
ip prefix-list "IST" 10.1.2.0/30
route-map "suppressIST" 1
  no permit
  enable
  match network "IST"
exit
route-map "suppressIST" 2
  enable
exit
router isis
  redistribute direct
  redistribute direct route-map "suppressIST"
  redistribute direct enable
exit
isis apply redistribute direct
```

16.1.15IP Shortcuts – leaking routes between GRT and VRF

IP Shortcuts and L3 VSN (VRF blue) where we wish to share the IP Shortcuts 192.168.55.0/24 subnet to the blue VRF.

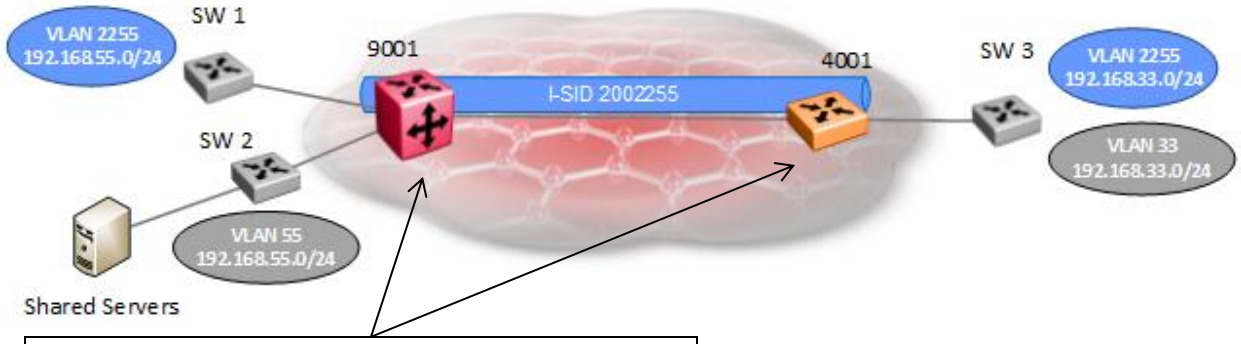



```
configure terminal
router vrf blue
ip prefix-list "shared" 192.168.55.0/24
route-map "shared_map" 1
  match network "shared"
  enable
exit
route-map "shared_map" 2
  no permit
  enable
exit
isis accept i-sid 0 route-map "shared_map"
isis accept i-sid 0 enable
exit
isis apply accept vrf blue
router isis
  accept i-sid 2002255 enable
exit
isis apply accept
```

For the blue VRF used in this example, to accept GRT IP Shortcut routes, we need to specify an I-SID of 0 for the ISIS accept policy.

16.1.16IP Shortcuts – redistribion of ISIS and OSPF


ERS 8000 – redistribution of ISIS into OSPF and vise-versa

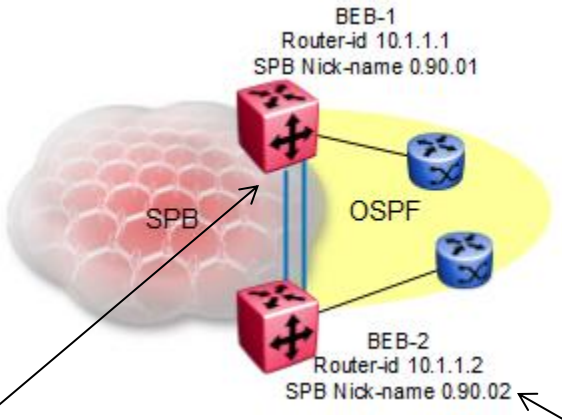


```
configure terminal
ip route preference protocol spbm-level1 130
route-map "reject" 1
  no permit
  enable
exit
router ospf
  as-boundary-router enable
  accept adv-rtr 10.1.1.2 enable route-policy
"reject"
  redistribute isis
  redistribute isis enable
exit
ip ospf apply accept adv-rtr 10.1.1.2
router isis
  redistribute ospf
  redistribute ospf enable
exit
isis apply redistribute ospf
ip ospf apply redistribute isis
```

```
configure terminal
ip route preference protocol spbm-level1 130
route-map "reject" 1
  no permit
  enable
exit
router ospf
  as-boundary-router enable
  accept adv-rtr 10.1.1.1 enable route-policy
"reject"
  redistribute isis
  redistribute isis enable
exit
ip ospf apply accept adv-rtr 10.1.1.1
router isis
  redistribute ospf
  redistribute ospf enable
exit
isis apply redistribute ospf
ip ospf apply redistribute isis
```

VSP 4000/8000/9000 – redistribution of ISIS into OSPF and vise-versa

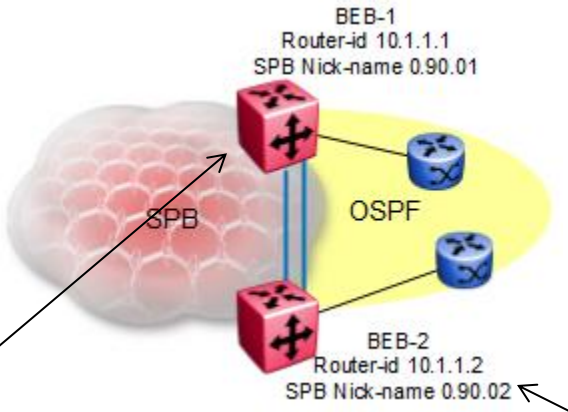



```
configure terminal
no ip route alternative
route-map "reject" 1
  no permit
  enable
exit
router ospf
  as-boundary-router enable
  redistribute isis
  redistribute isis enable
exit
router isis
  accept adv-rtr 0.90.02
  accept adv-rtr 0.90.02 route-map "reject"
  accept adv-rtr 0.90.02 enable
  redistribute ospf
  redistribute ospf enable
exit
isis apply accept
isis apply redistribute ospf
ip ospf apply redistribute isis
```

```
configure terminal
no ip route alternative
route-map "reject" 1
  no permit
  enable
exit
router ospf
  as-boundary-router enable
  redistribute isis
  redistribute isis enable
exit
router isis
  accept adv-rtr 0.90.01
  accept adv-rtr 0.90.01 route-map "reject"
  accept adv-rtr 0.90.01 enable
  redistribute ospf
  redistribute ospf enable
exit
isis apply accept
isis apply redistribute ospf
ip ospf apply redistribute isis
```

16.1.17Inter-VSN Routing

Inter-VSN Routing

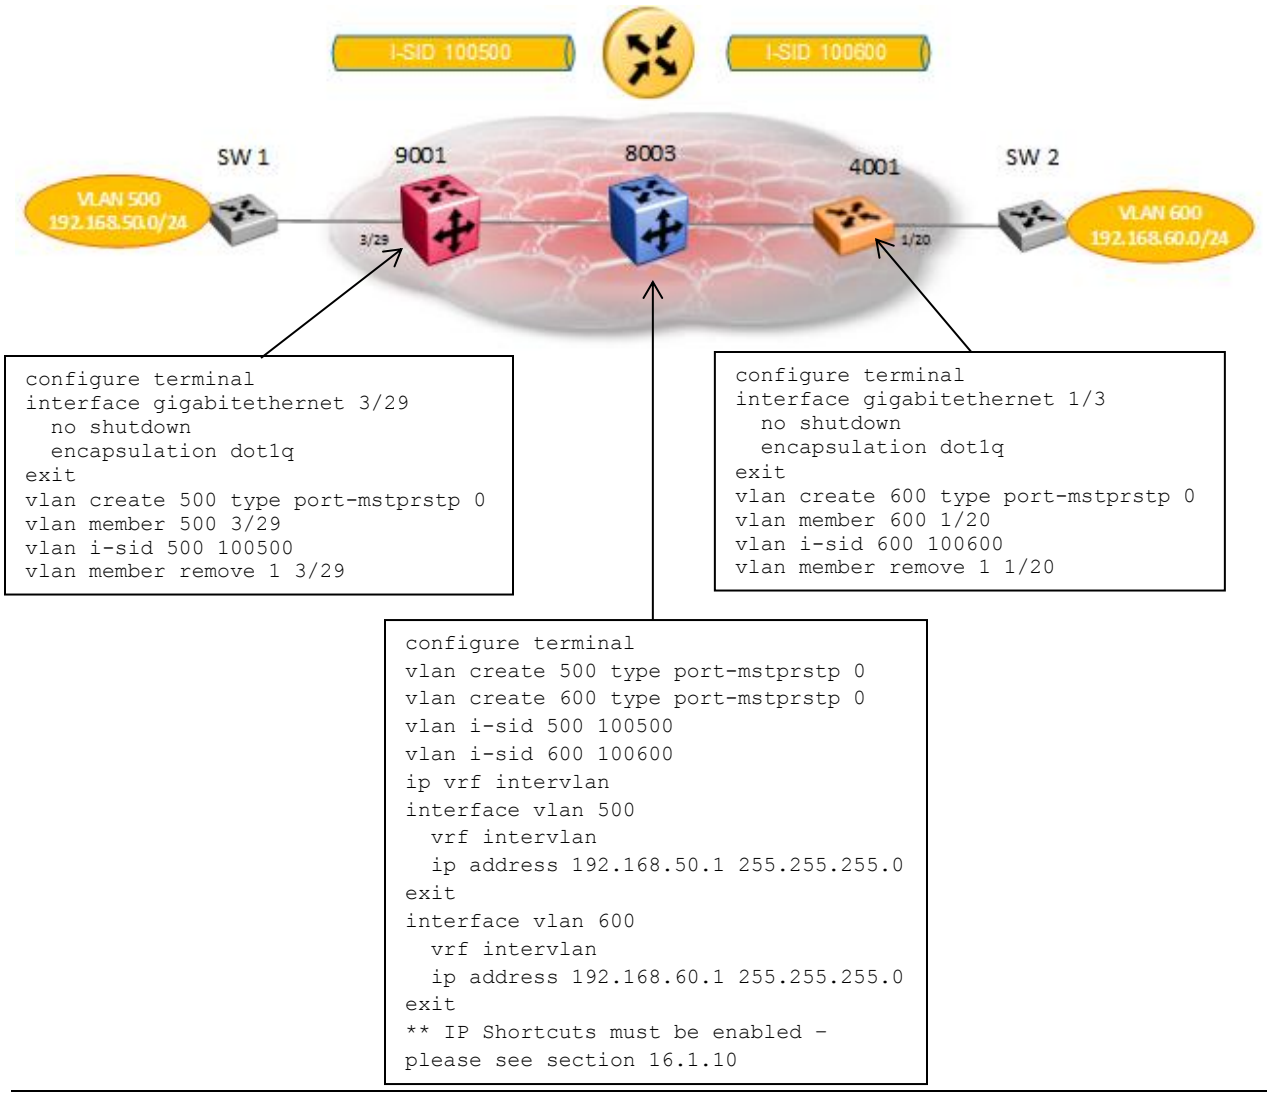


```
config terminal
vlan create <vlan id> type port-mstprstp 0
vlan i-sid <vlan-id> <i-sid: 0..16000000>
ip vrf <vrf-name>
interface vlan <vlan id>
  vrf <vrf-name>
  ip address <a.b.c.b mask>
exit
```

Although you can use any number from 1 to 16,777,215 as an I-SID value, it is recommended not to use a value from 16,000,001 to 16,777,215. This range is used for Multicast over SPB.


The VRF portion of the configuration can be added on any SPB switch in the network. For redundancy, the VRF portion of the configuration should be added on another SPB switch with VRRP Backup Master enabled.

For redundancy, it is recommended to enable Inter-ISID on another SPB switch in the network and enable VRRP with Backup Master.

```
config terminal
vlan create <vlan id> type port-mstprstp 0
vlan i-sid <vlan-id> <i-sid: 0..16000000>
ip vrf <vrf-name>
interface vlan <vlan id>
  vrf <vrf-name>
  ip address <a.b.c.b mask>
  ip vrrp address <Vrid> <a.b.c.d>
  ip vrrp <1-255 - Vrid> backup-master enable
  ip vrrp <1-255 - Vrid> priority <1-255>
  ip vrrp <Vrid> enable
exit
```

16.1.18IPv6 Shortcuts

IPv6 Shortcuts with direct interface redistribution

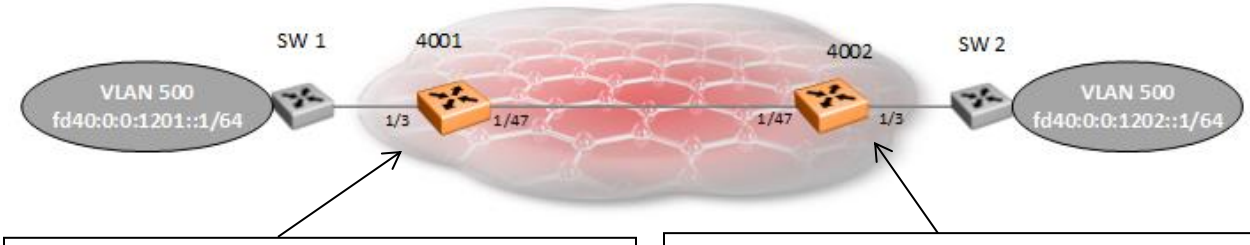


```
configure terminal
interface loopback 1
  ip address 1 10.4.4.1.1/255.255.255.255
  ipv6 interface address fd40::4:4:1/128
exit
router isis
  ip-source-address 10.1.90.1
  ipv6-source-address fd40::4:4:1
  spbm 1 ip enable
  spbm 1 ipv6 enable
exit
interface gigabitethernet 1/3
  no shutdown
  encapsulation dot1q
exit
vlan create 500 type port-mstprstp 0
vlan member 500 1/3
interface vlan 500
  ipv6 interface enable
  ipv6 interface address fd40:0:0:1201::1/64
exit
ipv6 forwarding
router isis
  ipv6 redistribute direct enable
exit
isis apply redistribute direct
vlan member remove 1 1/3
```

```
configure terminal
interface loopback 1
  ip address 1 10.4.4.2/255.255.255.255
  ipv6 interface address fd40::4:4:2/128
exit
router isis
  ip-source-address 10.1.40.1
  ipv6-source-address fd40::4:4:2
  spbm 1 ip enable
  spbm 1 ipv6 enable
exit
interface gigabitethernet 1/3
  no shutdown
  encapsulation dot1q
exit
vlan create 500 name type port-mstprstp 0
vlan members 500 1/3
interface vlan 500
  ipv6 interface enable
  ipv6 interface address fd40:0:0:1202::1/64
exit
ipv6forwarding
router isis
  ipv6 isis redistribute direct enable
exit
isis apply redistribute direct
vlan member remove 1 1/3
```

For IPv6 Shortcuts, IPv4 Shortcuts must be enabled with the addition of an IPv6 loopback address.

```
config terminal
interface loopback <Interface id value; 1-256>
  ip address <Interface id value; 1-256>  <Ipv4address/mask>
  ipv6 interface address <Ipv6address/prefix-len>
exit
router isis
  ip-source-address <loopback ip>
  ipv6-source-address <ipv6 loopback ip>
  spbm 1 ip enable
  spbm 1 ipv6 enable
exit
```

```
ipv6 forwarding
router isis
  redistribute direct
  redistribute direct enable
exit
isis apply redistribute direct
```



Although the above example only show direct interface redistribution into ISIS, other protocols such as BGP, OSPF, RIP, and Static can also be enabled.

Verify Operations:

```
show ipv6 interface
show ipv6 route
show isis spbm ipv6-unicast-fib
ping <ipv6 address>
l2 ping ip-address <ipv6 address>
l2 traceroute ip-address <ipv6 address>
show isis lsdb tlv 236 detail
show isis lsdb sysid <system id> tlv 236 detail
```

16.1.19SPB Multicast Configuration

16.1.19.1 L2VSN Multicast

Enabling SPM Multicast

```
config terminal
router isis
   spbm 1 multicast enable
exit
interface vlan <vlan id>
   ip igmp snoop
   ip igmp snoop-querier-addr <ip addr>
   ip igmp ssm-snoop **If IGMPv3 is required
   ip igmp version 3 **If IGMPv3 is required
exit
```

For multicast over L2VSN's, please note if the SPB bridge is connected to an edge switch, it may be necessary to add an IGMP query address. If you omit adding a query address, the SPB bridge will send IGMP queries with a source address of 0.0.0.0. Depending on the edge switch model, it may not accept a query with a source address of 0.0.0.0. This is the case if using an Avaya stackable edge switch that supports IGMPv3.

Verify Operations:

```
show isis spbm (verify multicast is enabled)
show ip igmp interface
show isis spbm ip-multicast-route all
show isis spbm ip-multicast-route vsn-isid <i-sid value>
show isis lsdb tlv 185 detail
show isis lsdb sysid <system id> tlv 185 detail
show ip igmp sender
The following commands can be performed on receiving BEB nodes:
show ip igmp cache
show ip igmp group
The following commands can be performed on sending BEB node:
l2 tracemroute source <ip addr of source> group <group ip address> vlan <C-VLAN id>
```

16.1.19.2 L3VSN Multicast

Enabling SPM Multicast

```
config terminal
router isis
   spbm 1 multicast enable
exit
router vrf <vrf name>
  mvpn enable
exit
interface vlan <vlan id>
   ip spb-multicast enable
   ip igmp version 3 **If IGMPv3 is required
exit
```

Verify Operations:

```
show isis spbm (verify multicast is enabled)
show ip igmp interface vrf <vrf name>
show isis spbm ip-multicast-route vrf <vrf name>
show isis spbm ip-multicast-route vrf <vrf name> group <group ip address>
show isis lsdb tlv 185 detail
show isis lsdb sysid <system id> tlv 185 detail
The following commands can be performed on the sending BEB node:
show ip igmp sender vrf <vrf name>
The following commands can be performed on receiving BEB nodes:
show ip igmp cache vrf <vrf name>
show ip igmp group vrf <vrf name>
```

16.1.19.3 IP Shortcuts Multicast

Enabling SPM Multicast

```
config terminal
router isis
   spbm 1 multicast enable
exit
interface vlan <vlan id>
   ip spb-multicast enable
   ip igmp version 3 **If IGMPv3 is required
```

```
exit
```

Verify Operations:

```
show isis spbm (verify multicast is enabled)
show ip igmp interface
show isis spbm ip-multicast-route
show isis spbm ip-multicast-route all
show isis spbm ip-multicast-route group <group ip address> source <source ip>
show isis lsdb tlv 186 detail
show isis lsdb sysid <system id> tlv 186 detail
The following commands can be performed on the sending BEB node:
show ip igmp sender
l2 tracemroute source <ip addr of source> group <group ip address>
The following commands can be performed on receiving BEB nodes:
show ip igmp cache
show ip igmp group
```

16.1.20 Multicast 239.255.255/24 – UpnP Filtering

Please be aware that if protocols use as Microsoft Univeral Play and Play (UPnP) are enabled, multicast addresses in the 239.255.255/24 may be seen by SPB bridges depending if protocols such as UPnP is enabled on a Microsoft host. If you wish to deny the 239.255.255/24 address space, either an IGMP acess list can be created at a VLAN level or an ACL can be created at a port level.

IGMP Access List – VSP 4000/8000/9000 and ERS 8000 assuming the local VLAN is using an IP subnet of 10.14.10.0/24.

```
ip prefix-list UPnP 239.255.255.0/24
interface vlan 10
ip igmp access-list "UPnP" 10.14.10.0/255.255.255.0 deny-both
exit
```

```
show ip igmp access
================================================================================
                          IGMP Access - GlobalRouter
================================================================================
INTERFACE  GRP PREFIX       HOSTADDR         HOSTMASK         ACCESSMODE
--------------------------------------------------------------------------------
Vlan10     UPnP             10.14.10.0       255.255.255.0    deny-both
```

ACL – VSP 4000/8000/9000

```
filter acl 1 type inPort
filter acl 1 enable
filter acl port 1 <port list>
filter acl set 1 default-action permit
filter acl ace 1 1
filter acl ace action 1 1 deny
filter acl ace ethernet 1 1 ether-type eq 0x800
filter acl ace ip 1 1 src-ip mask 239.255.255.0 8
filter acl ace 1 1 enable
filter acl ace 1 2
filter acl ace action 1 2 deny
filter acl ace ethernet 1 2 ether-type eq 0x800
filter acl ace ip 1 2 dst-ip mask 239.255.255.255 8
filter acl ace 1 2 enable
```

ACL – ERS 8000

```
filter act 1
```

```
filter act 1 ip srcIp,dstIp
filter act 1 ethernet etherType
filter apply act 1
filter acl 1 type inPort act 1
filter acl port 1 <port list>
filter acl set 1 default-action permit
filter acl ace 1 1
filter acl ace action 1 1 deny
filter acl ace ethernet 1 1 ether-type eq 0x800
filter acl ace ip 1 1 src-ip eq 239.255.255.0-239.255.255.255
filter acl ace 1 1 enable
filter acl ace 1 2
filter acl ace action 1 2 deny
filter acl ace ethernet 1 2 ether-type eq 0x800
filter acl ace ip 1 2 dst-ip eq 239.255.255.0-239.255.255.255
filter acl ace 1 2 enable
```

16.1.21 Connectivity Fault Management (CFM) Configuration

16.1.21.1 Manual CFM Configuation: Software releases 7.0 and 7.1 for the ERS 8800 and 3.3 for the VSP 9000

A Maintenance Domain (MD) up to 22 characters must be defined. To simplify the configuration when migrating to a future software release that support the simplified configuration for CFM, it is recommended to use a MD name of *spbm*. As two B-BVLANs are presently supported, a Maintenance Association (MA) for each B-VLAN must be defined if you wish to use CFM for testing on both of these B-BLANs. Assuming we have B-VLANs 4051 and 4052 defined, we will create two MA's with names of 4051 and 4052. If a Maintenance End Point (MEP) is defined, only a single value is supported for each MA.

CFM assuming MD = *spbm*, MA = *4051* & *4052*, and MEP = *2*

```
config terminal
cfm maintenance-domain spbm
cfm maintenance-association spbm 4051
cfm maintenance-association spbm 4052
cfm maintenance-endpoint spbm 4051 2 state enable
cfm maintenance-endpoint spbm 4052 2 state enable
vlan nodal-mep 4051 spbm 4051 2
vlan nodal-mep 4052 spbm 4052 2
```

16.1.21.2 Simplified CFM Configuration:

Starting in software release 7.1.1 for the ERS 8800, 3.4 for the VSP 9000, 10.2 for the VSP 7000, 5.7 for the ERS 4800, and 3.0 for the VSP 4000, CFM commands will automatically create a MEP and a MIP at a specific level for every SPB B-VLAN provisioned on the switch. Hence, you no longer have to configure explicit MEPs and MIPs and associated VLANs with MEPs and MIPs.

CFM – simplified configuration

```
config terminal
cfm cmac mepid <1-8191>
cfm cmac level <0-7>
cfm cmac enable
cfm spbm mepid <1-8191>
cfm spbm level <0-7>
cfm spbm enable
```


CMAC provisioning is only required on BEB where C-VLANs are terminated and is not supported at this time for the VSP 7000 or ERS 4800.

Verify results using default values


```
ERS-8800:5# show cfm md info
================================================================================
                          Maintenance Domain
================================================================================
Domain Name              Domain Index    Level Domain Type
--------------------------------------------------------------------------------
cmac                     1               4     NODAL
spbm                     2               4     NODAL

 Total number of Maintenance Domain entries: 2.
ERS-8800:5# show cfm mep info
========================================================================
                          Maintenance Endpoint Config
========================================================================
DOMAIN                   ASSOCIATION             MEP  ADMIN
NAME                     NAME                    ID
------------------------------------------------------------------------
cmac                     1                       1    enable
cmac                     10                      1    enable
spbm                     4051                    1    enable
spbm                     4052                    1    enable
================================================================================
                          Maintenance Endpoint Service
================================================================================
DOMAIN_NAME              ASSN_NAME               MEP_ID TYPE    SERVICE_DESCRIPTION
--------------------------------------------------------------------------------
cmac                     1                       1      nodal   Vlan 1,    Level 4
cmac                     10                      1      nodal   Vlan 10,   Level 4
spbm                     4051                    1      nodal   Vlan 4051, Level 4
spbm                     4052                    1      nodal   Vlan 4052, Level 4
```

16.1.22CFM Configuration Example – 7.1.1.x or higher

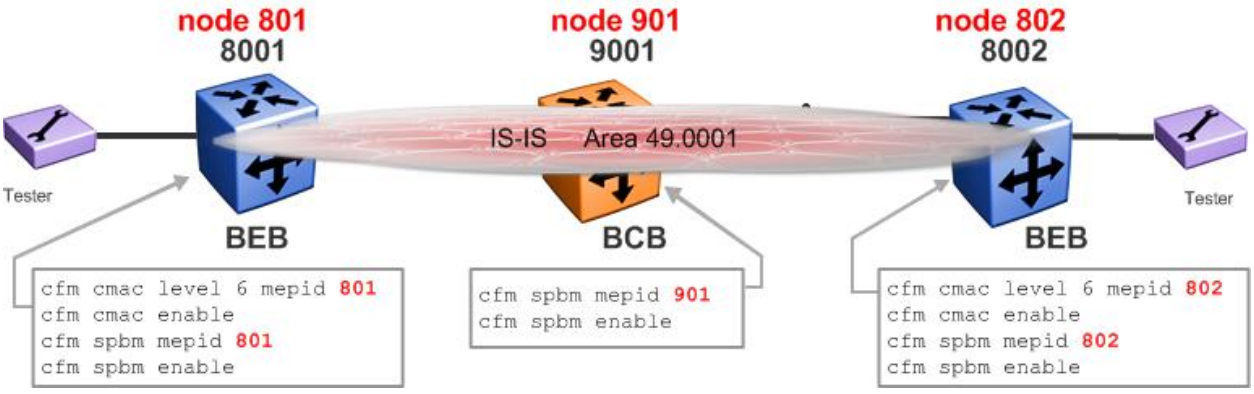

- This ensures that we get full OAM functionalities across:
  - SPB -> Backbone VLAN-ids (BVIDs) i.e. Infrastructure
  - CMAC -> Customer VLANs (CVLANs) i.e. Services
- If a node is acting as a BCB (i.e. it has no CVLANs) no point enabling CFM CMAC on it
- Use a higher level (6) on CMAC CFM
- Leave default level (4) on SPBM CFM

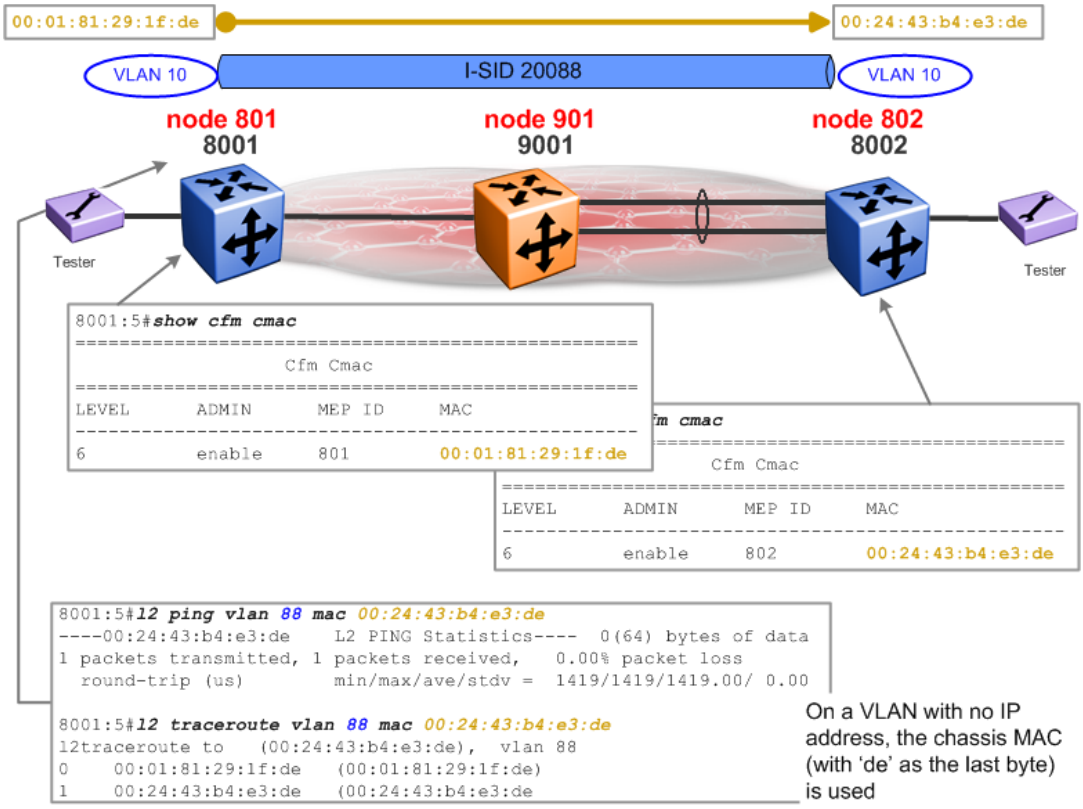

16.2 Using EDM

16.2.1 IS-IS and SPB Configuration


SPB and IS-IS core configuration

EDM


a) Configuration -> IS-IS -> SPBM -> Globals -> GlobalEnable = enable -> Apply



b) Configuration -> VLAN -> VLANs -> Basic -> Insert -> add Id, provide a Name if you wish and Type = spbm-bvlan -> Insert

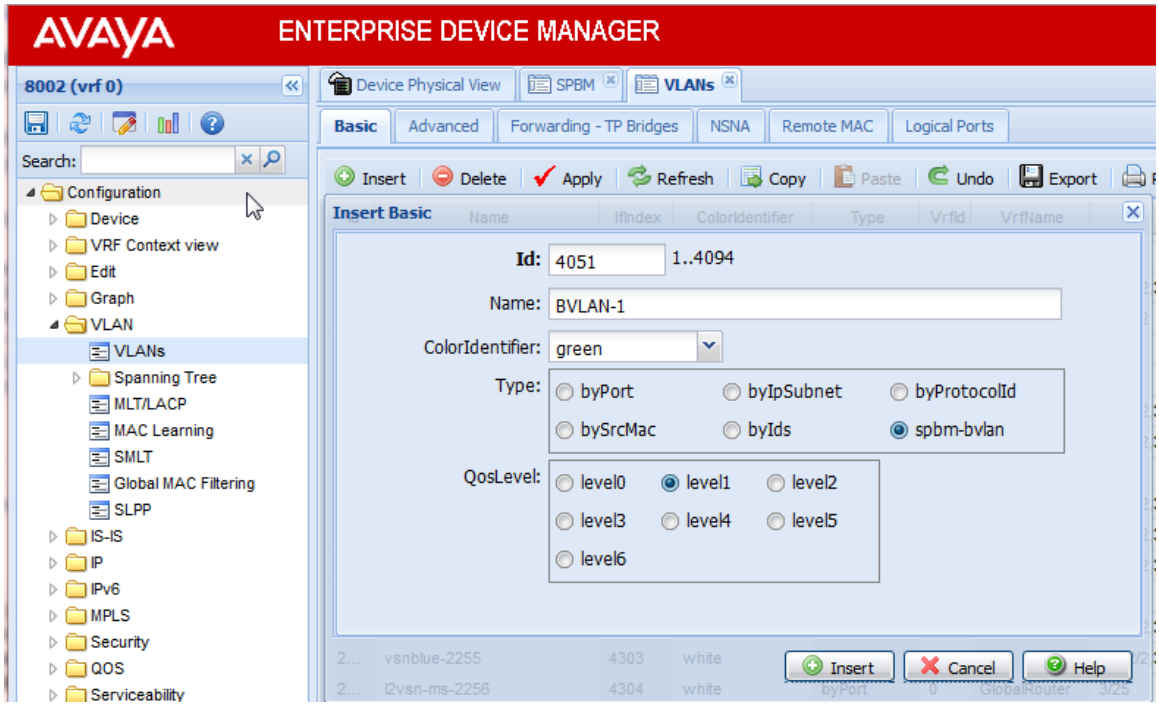


c) Configuration -> IS-IS -> SPBM -> SPBM -> Insert -> add Id, Node Nick Name, Primary VLAN (used with SMLT configurations), B-VLAN ID's, and click on *Insert* when done (configuration shown below is for an SMLT setup to B-VLANs 4051 and 4052)

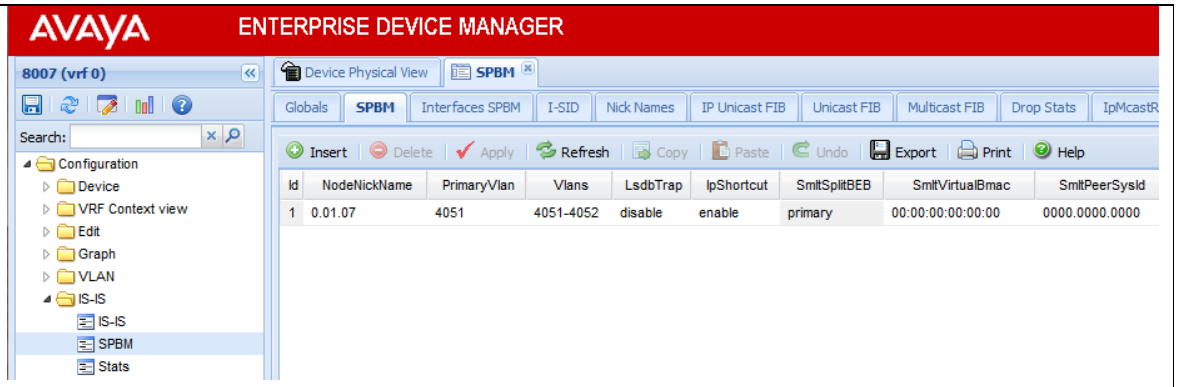

d) Configuration -> IS-IS -> IS-IS -> Interfaces -> Insert -> enter index number, select *Port* or *Mlt*, then AdminStatus = *off* (enable once SPBM is enabled in next step)




e) Configuration -> IS-IS -> IS-IS -> Interfaces -> <select index number from previous set> -> SPBM -> Insert -> enter SPBM id and state = enable -> Insert

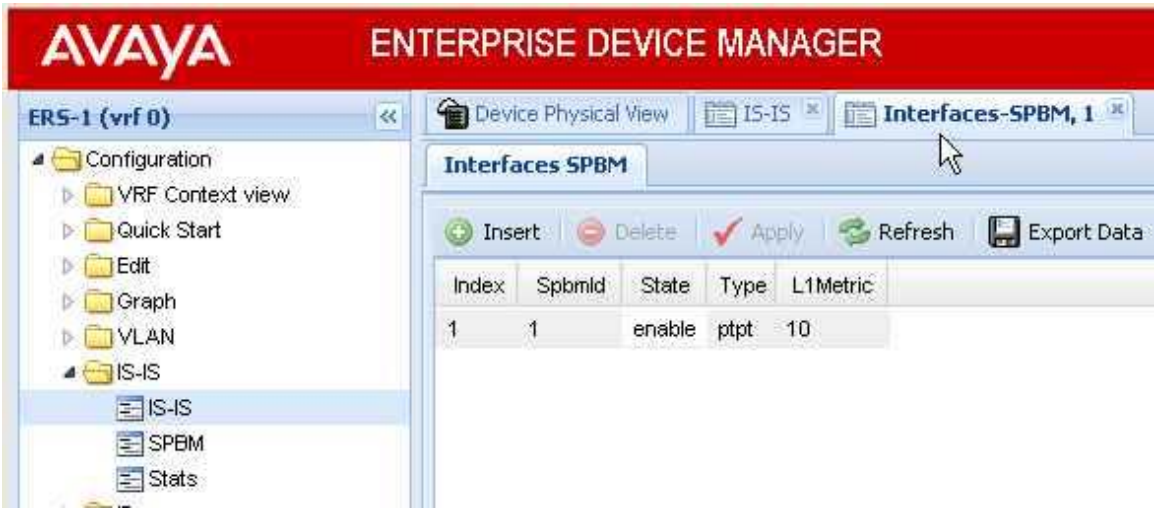


f) Configuration -> IS-IS -> IS-IS -> Interfaces -> <select index number from previous set> -> AdminState = on -> Apply



g) Configuration -> IS-IS -> IS-IS -> Manual Area -> Insert -> AreaAddr = <manual area id in format of xx.yyyy>

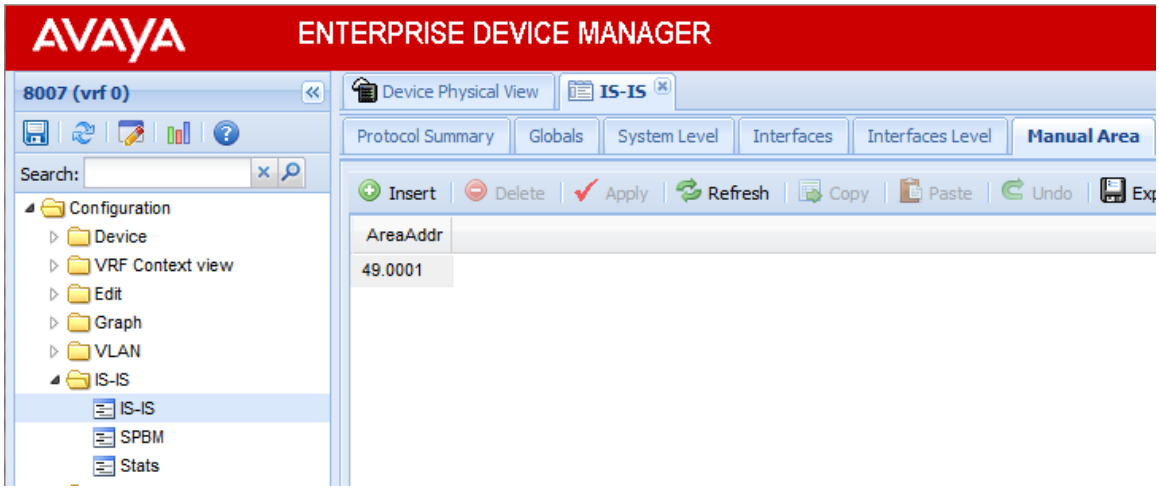

h) Configuration -> IS-IS -> IS-IS -> Globals -> AdminState = on -> Apply

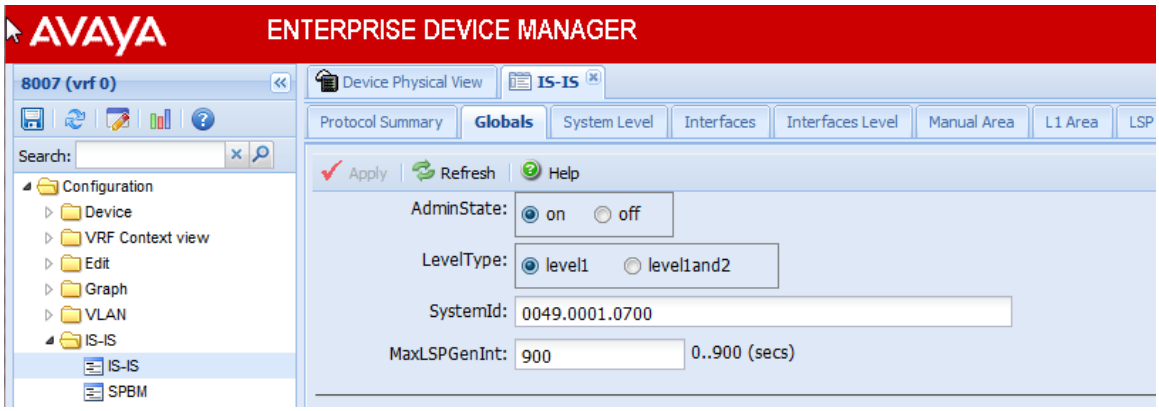


16.2.2 VSN Configuration

Extending a VLAN (L2VSN)

EDM

```
Configuration -> VLAN -> VLANs -> Advanced -> Select VLAN -> I-sid = <0..16777215>
-> Apply
```

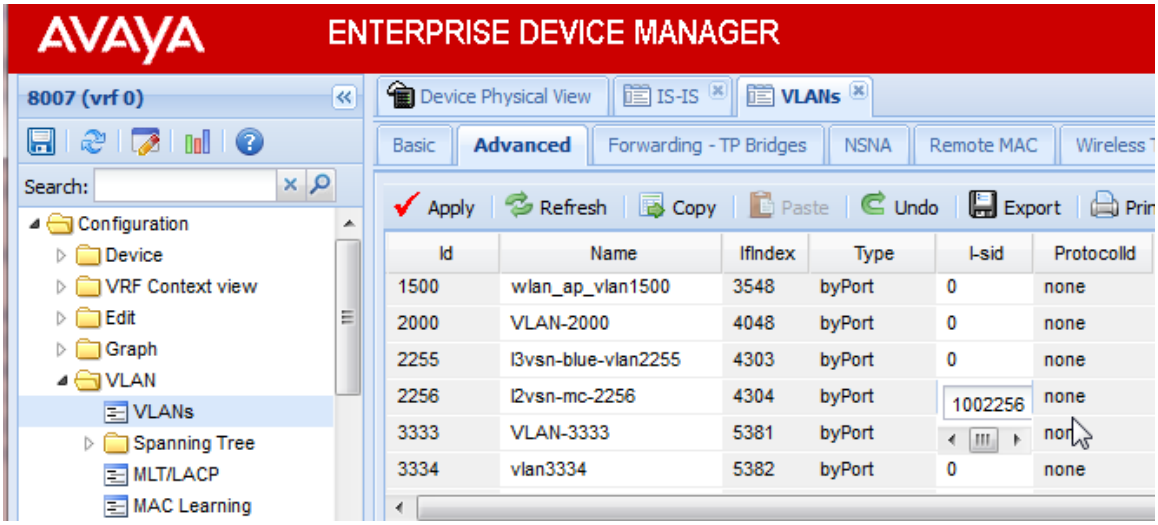

Extending a VLAN (L3VSN)

EDM

a) Configuration -> IP -> VRF -> Insert -> Enter ID, VRF name, any other options -> Insert



b) Configuration -> IP -> IP-VPN -> VPN -> Insert -> Select VRF ID -> Insert



c) Configuration -> IP -> IP-VPN -> VPN -> <select VrdId> -> IsidNumber =

```
0..16777215> -> Enable = true -> Apply
```




16.2.3 Connectivity Fault Management (CFM) Configuration – release 7.0 or 7.1.1.

Add Maintenance Domain (string up to 22 characters), Maintenance Association (string up to 22 characters), and maintenance end point (id from 1 to 8191). There may only be one MEP per SPB VLAN in the 7.1 release and CFM is only supported on SPB VLANs. When assigning a Maintenance Intermediate Point (MIP) level to an SPB VLAN, the value may be 0 to 7; there is only one MIP supported per SPB VLAN in the 7.1 release. It is recommended that MEP and MIP use the same level. The MEP level is configured under the Maintenance Domain of a given MEP

EDM


a) Configuration -> Edit -> Diagnostics -> CFM -> MD -> Insert -> enter Index ID, Name, Level -> Insert

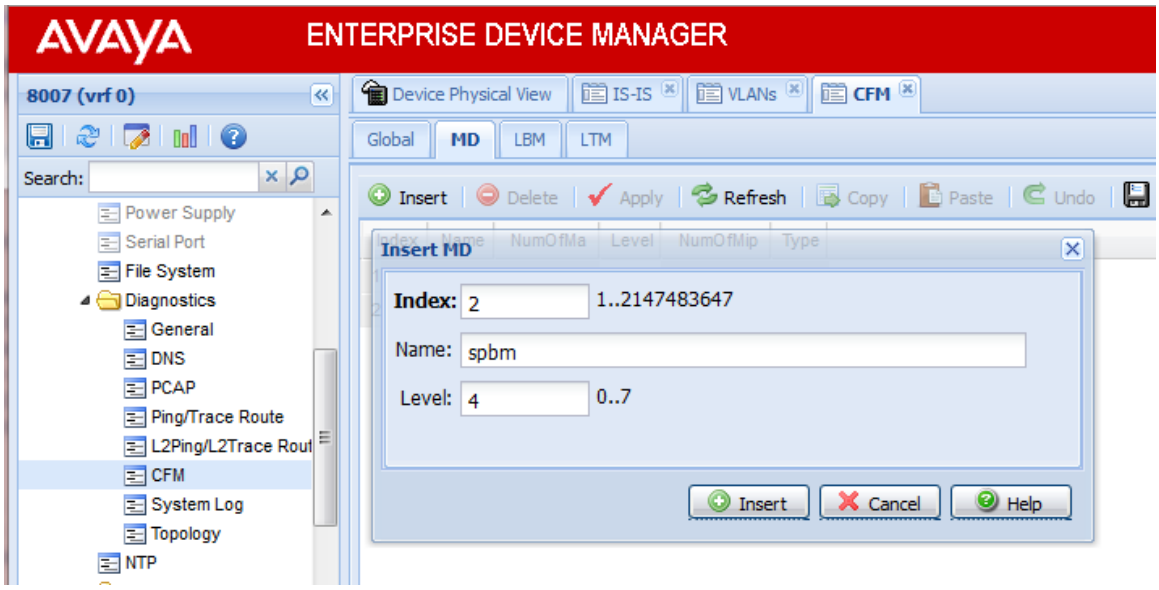


b) Configuration -> Edit -> Diagnostics -> CFM -> MD -> select MD instance -> MaintenanceAssociation -> Insert -> Enter MA index number and MA name -> Insert. Repeat for each B-VLAN, i.e. Association Index = 1 for B-VLAN 4051, and Association Index = 2 for B-VLAN 4052




c) Configuration -> Edit -> Diagnostics -> CFM -> MD -> select MD instance -> MaintenanceAssociation -> select MA index -> MaintenanceEndPoint -> Insert -> enter id, AdminState = enable -> Insert. Repeat for each B-VLAN. Please keep note of MA Id used as this will be required for next step

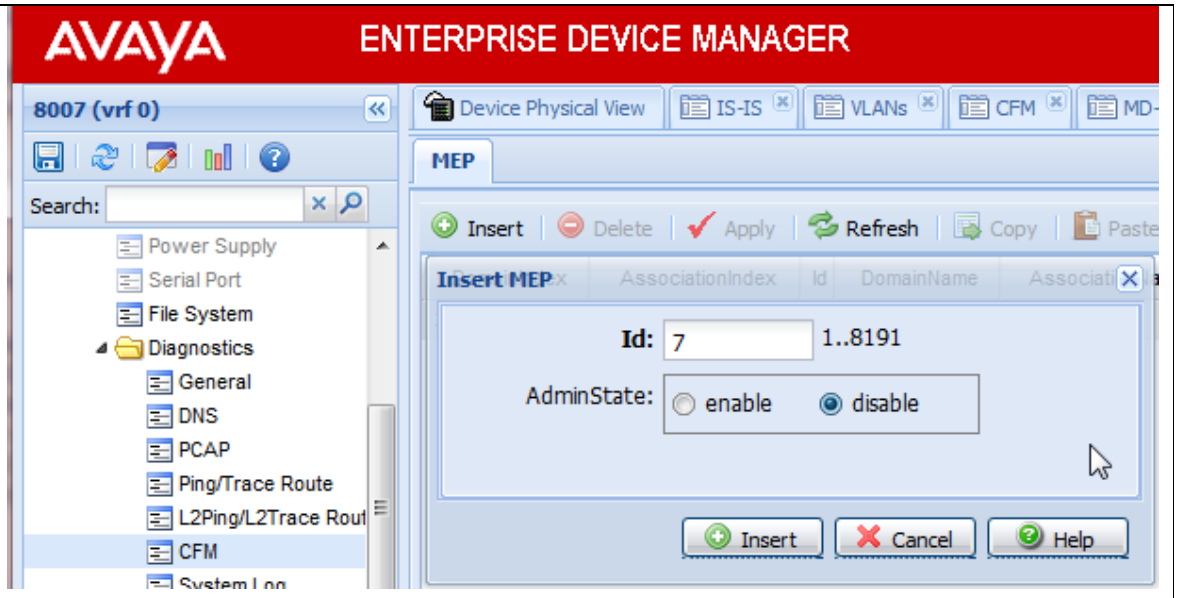


d) Configuration -> VLAN -> VLANs -> Advanced -> select B-VLAN -> Nodal -> NodalMepList = <md string>.<ma string>.<mep id>. Repeat for each B-VLAN.

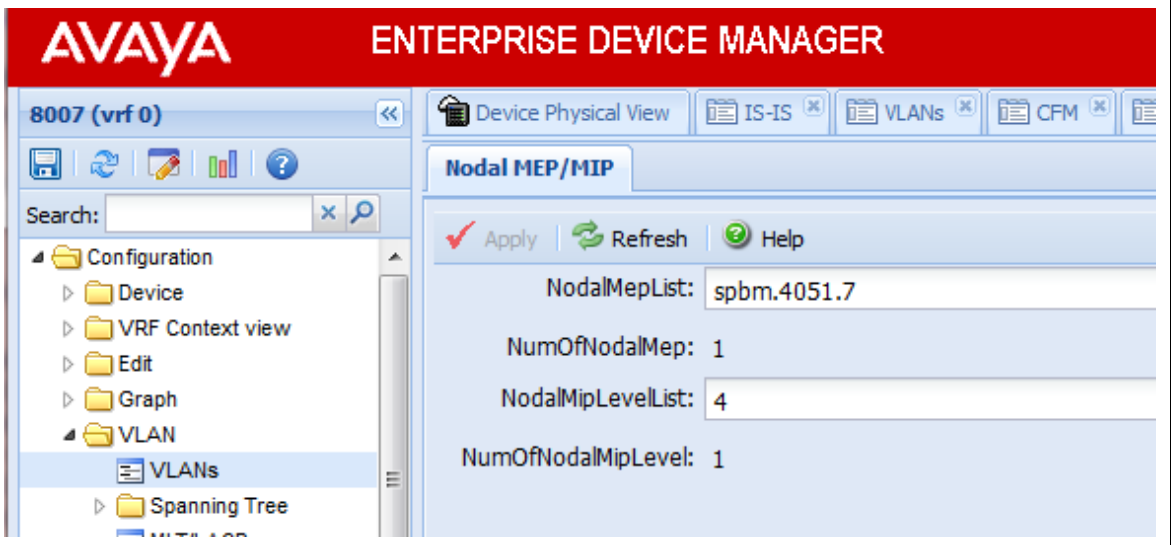

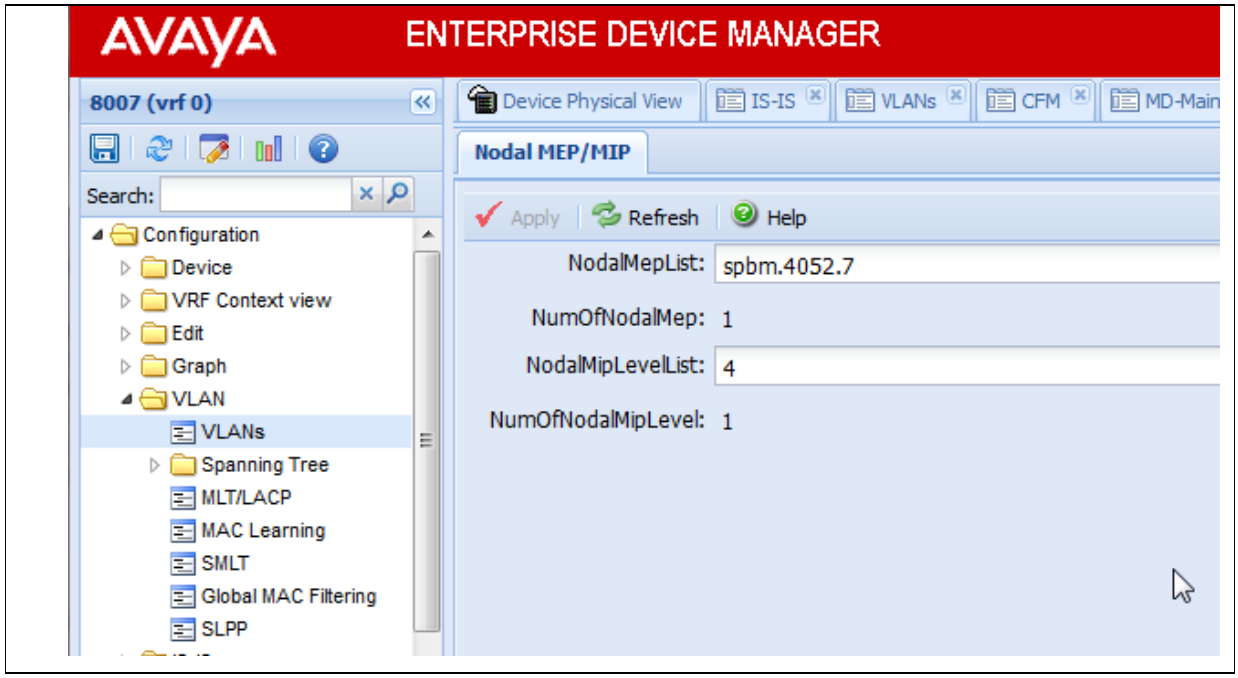
AVAYA
ENTERPRISE DEVICE MANAGER
8007 (vrf 0)
Search:
Configuration
Device
VRF Context view
Edit
Graph
VLAN
VLANs
Spanning Tree
MLT/LACP
MAC Learning
SMLT
Global MAC Filtering
SLPP
Device Physical View
IS-IS
VLANs
CFM
MD-Main
Nodal MEP/MIP
Apply
Refresh
Help
NodalMepList: spbm.4052.7
NumOfNodalMep: 1
NodalMipLevelList: 4
NumOfNodalMipLevel: 1

17. Configuration Examples

17.1 SPB – Core Setup

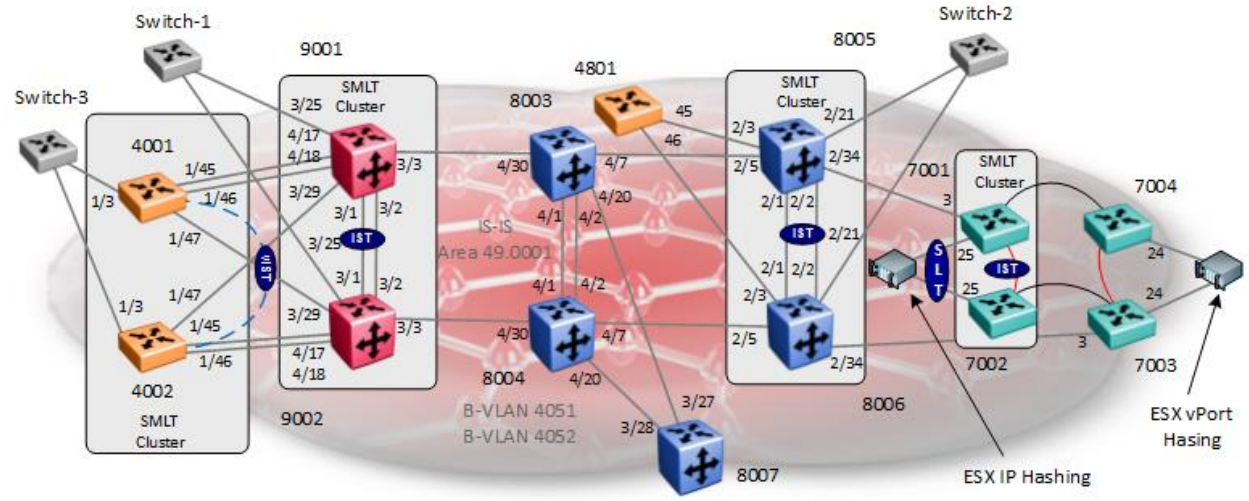

For this configuration example, we will show how to provision SPB on the following platforms:

- Common SBP Settings

Switch	Parameter	Value
All switches	B-VLANs	4051, 4052 where 4051 is the primary B-VLAN
	VLAN Names	BVLAN-1 and BVLAN-2
	IS-IS Area	49.0001
	IS-IS	Enable
	SPBM	Enable, using instance 1

- Unique SPB Settings Settings

Platform	System Name	Nick Name	CFM MEPID
VSP 4000	400x	0.40.0x	40x
VSP 7000	700x	0.70.0x	700x
VSP 9000	900x	0.90.0x	90x
ERS 4800	480x	0.48.0x	480x

ERS 8000	800x	0.80.0x	80x

- SMLT IST Settings

SMLT Cluster	VLAN	VLAN Members	Subnet	VLACP
9001 & 9002	2	3/1 & 3/2	10.5.2.0/30	Yes – Long timeout
8005 & 8006	2	2/1 & 2/2	10.2.1.0/30	Yes – Long timeout
7001 & 7002	2	38-39	10.70.2.0/30	No

- SMLT vIST Settings

SMLT Cluster	VLAN	Subnet
4001 & 4002	2	10.4.2.0/30



For compatibility between the VSP 9000 and VSP 4000 with the ERS 8800 and VSP 7000, it is recommended to change the Spanning Tree mode to MSTP on the ERS 8800 and VSP 7000. This allows, for example, COM's VLAN Wizard to dynamically add VLANs between the ERS 8800 and VSP 9000 as the Wizard adds VLANs by Spanning Tree instance.

17.1.1 Configuration

For this configuration example, all switches are provisioned using ACLI which is the default setting on all switches with the exception of the ERS 8000.

17.1.1.1 Configuration Mode

ACLI

```
config terminal
```

The ERS 8800 supports either CLI or ACLI. The VSP 4000, 7000, ERS 4800, and VSP 9000 only support ACLI. On an ERS 8800 switch, to change from CLI to ACLI, enter the CLI command *config boot flags acli true* and *save boot*. Prior to making the change, you should convert the configuration file to ACLI by entering the command *save config file /flash/config_acli.cfg backup /flash/config.cfg mode acli*. To change from ACLI to CLI, enter the ACLI command *no boot config flags acli* and *save boot*. Prior to making the change, you should convert the configuration file to CLI by entering the command *save config file /flash/config_cli.cfg backup /flash/config.cfg mode cli*.

17.1.1.2 Auto Save

On the VSP 7000 and ERS 4000 platforms, auto-save the configuration is enabled by default. If you wish, you can disable this feature and then manually save the configuration each you make a change.

ACLI

```
no autosave enable
```

To save the configuration, use either of the two command

```
write memory
```

```
save configuration
```

17.1.1.3 VSP 7000 – Rear Port Mode

Switch	Parameter	Value
Rear Port		
7001, 7002, 7003, 7004	Rear port mode	Enabled & SPB

For this example, the VSP 7000 is configured in Fabric Interconnect (FI) mode. Hence, we will change the rear-port mode to SPB.

Enable rear-port mode on switches 7001, 7002, 7003, and 7004

7001, 7002, 7003 & 7004:

```
rear-port mode enable spb
Enabling rear port mode will disable Fabric Interconnect Stack operation.
Switch configuration will be reset to partial-defaults. Continue(yes/no)?y
--------------------------------------------------------------------------------
show rear-port mode
Rear Port Mode:                Enabled SPB (Loopback Port Reserved)
Rear Port Operational State:   Operational SPB (Loopback Port Reserved)
```

17.1.1.4 Option: Change Spanning Tree mode to MSTP

For the ERS 8800, ERS 4800, and VSP 7000, we will change the Spanning Tree mode to MSTP. This is the default setting on the VSP 4000 and VSP 9000. When using tools such as VLAN Manager in COM, it is recommended to change the Spanning Tree mode to MSTP.

VSP 7000 & ERS 4800 Option – change spanning mode to MSTP on ERS 8000, VSP 7000, and ERS 4800 switches

4801, 7001, 7002, 7003 & 7004:

```
spanning-tree mode mst
New operational mode MSTP will take effect upon reset
7024XLS(config)#boot
Reboot the unit(s) (y/n) ? yRebooting . . .
show spanning-tree mode
Current STP Operation Mode: MSTP
```

ERS 8800 Option – change spanning mode to MSTP on switches 8003, 8004 ,8005 ,8006, and 8007

8003, 8004, 8005, 8006 & 8007:

```
ERS-8606:5(config)# boot config flags spanning-tree-mode mstp
Warning: Please save boot configuration and reboot the switch
         for this to take effect.
Warning: Please carefully save your configuration files before
```

```
        starting configuring the switch in RSTP or MSTP mode.
        The syntax used to create VLANs in any of these new
        modes is NOT COMPATIBLE with the default mode (STP)
ERS-8606:5(config)#save boot
ERS-8606:5(config)#boot -y
```

17.1.1.5 System Name

VSP 4000 Switches - Configure system name

prompt <4001|4002>

VSP 7000 Switches - Configure system name

snmp-server name <7001|7002|7003|7004>

ERS 8800 Switches - Configure system name

prompt <8003|8004|8005|8006|8007>

VSP 9000 Switches - Configure system name

```
prompt <9001|9002>
```

ERS 4800 Switches - Configure system name

```
snmp-server name 4801
```

17.1.1.6 Option – Configure out-of-band management interface

As an option on the ERS 8000, VSP 7000, and VSP 9000, an out-of-band management interface can be configured.

VSP 7000 Switches – Add out-of-band configuation

```
ip mgmt address <switch|stack> <ip address> netmask <subnet mask>
Either add a default gateway or static route(s)
ip mgmt default-gateway <gateway IP>
or
ip mgmt route <destination IP> <destination subnet mask> <gateway IP>
```

```
show mgmt-port status
show ip mgmt switch
show ip mgmt route
```

ERS 8000 Switches - Add out-of-band configuation

```
boot config net mgmt ip <ip address>/<subnet mask> cpu-slot <cpu slot number>
boot config net mgmt route add <ip address>/<subnet mask> <gateway IP>
save boot
```

```
show boot config net
```



Up to 5 static routes can be configured and no out-of-band default route is supported.

VSP 9000 Switches – Add out-of-band configuation

```
interface mgmtEthernet <slot|port>
ip address <ip address> <subnet mask>
exit
```

As an option, a management virtual IP address can be configured valid for both CPU's when two are used

```
sys mgmt-virtual-ip <ip address>/<subnet mask>
router vrf MgmtRouter
ip route <destination IP> <destination subnet mask> <gateway IP> weight <1-65535>
exit
```

```
show interfaces mgmtEthernet
show interfaces mgmtEthernet <config-L1|error|statistics>
show interfaces mgmtEthernet <config-L1|error|statistics> <slot|port>
show interfaces mgmtEthernet
show ip route vrf MgmtRouter
```

17.1.1.7 Enable VLACP Globlaly

VSP 4000, VSP 9000, and ERS 8000 Switches – Enable VLACP globally

```
vlacp enable
```

VSP 7000 & ERS 4800 Switches - Enable VLACP globally

```
vlacp enable
vlacp macaddress 180.c200.f
```

17.1.1.8 IST Configuration – SMLT Cluster switch 4001 & 4002, 9001 & 9002 and 8005 & 8006

Switch	Feature	Parameter	Value
9001, 9002 8005, 8006	IST	MLT ID	1
		VLAN	2
	VLACP (IST port members)	Timers	Long (slow)
		Time-out Scale	3
		VLACP MAC	01:80:c2:00:00:0f
		Slow periodic time	10000
9001	IST VLAN	IP address	10.5.2.1/30
		Ports	3/1,3/2
9002	IST VLAN	IP address	10.5.2.2/30
		Ports	3/1,3/2
8005	IST VLAN	IP address	10.2.1.1/30
		Ports	2/1,2/2
8006	IST VLAN	IP address	10.2.1.2/30
		Ports	2/1,2/2
4001	IST VLAN	VLAN ID	2
		IP address	10.4.2.1/30
4002	IST VLAN	VLAN ID	2
		IP address	10.4.2.12/30

For vIST on the VSP 4000, we only need to create the IST VLAN and add an IP address for now. For the VSP 7000, we will create the IST after we have provisioned SPBM.

VSP 9000 SMLT Cluster: Add IST MLT, VLAN 2 with IP address, and enable VLACP

```
9001:1(config)#vlan create 2 name "IST_vlan2" type port-mstprstp 0
9001:1(config)#mlt 1
9001:1(config)#mlt 1 name IST
9001:1(config)#mlt 1 member 3/1,3/2
9001:1(config)#mlt 1 encapsulation dot1q
9001:1(config)#vlan mlt 2 1
9001:1(config)#interface vlan 2
9001:1(config-if)#ip address 10.5.2.1 255.255.255.252
9001:1(config-if)#exit
9001:1(config)#interface mlt 1
9001:1(config-mlt)#ist peer-ip 10.5.2.2 vlan 2
9001:1(config-mlt)#ist enable
9001:1(config-mlt)#exit
9001:1(config)#interface gigabitEthernet 3/1,3/2
9001:1(config-if)#vlacp slow-periodic-time 10000 funcmac-addr 01:80:c2:00:00:0f
9001:1(config-if)#vlacp enable
9001:1(config-if)#exit
9001:1(config)#vlacp enable
--------------------------------------------------------------------------------
For 9002, use the same configuration as above except for the items shown below
--------------------------------------------------------------------------------
9002:1(config)#interface vlan 2
9002:1(config-if)#ip address 10.5.2.2 255.255.255.252
9002:1(config-if)#exit
9002:1(config)#interface mlt 1
9002:1(config-mlt)#ist peer-ip 10.5.2.1 vlan 2
9002:1(config-mlt)#ist enable
9002:1(config-mlt)#exit
```

ERS 8800 SMLT Cluster: Add IST MLT, VLAN 2 with IP address, and enable VLACP

```
8005:5(config)#vlan create 2 name "IST_VLAN" type port-mstprstp 0
8005:5(config)#mlt 1
8005:5(config)#mlt 1 name IST
8005:5(config)#mlt 1 member 2/1,2/2
8005:5(config)#mlt 1 encapsulation dot1q
8005:5(config)#vlan 2 mlt 1
8005:5(config)#interface vlan 2
8005:5(config-if)#ip create 10.2.1.1 255.255.255.0
8005:5(config-if)#exit
8005:5(config)#interface mlt 1
8005:5(config-mlt)#ist peer-ip 10.2.1.2 vlan 2
8005:5(config-mlt)#ist enable
8005:5(config-mlt)#exit
8005:5(config)#interface gigabitEthernet 2/1,2/2
8005:5(config-if)#vlacp slow-periodic-time 10000 funcmac-addr 01:80:c2:00:00:0f
8005:5(config-if)#vlacp enable
8005:5(config-if)#exit
8005:5(config)#vlacp enable
```

For 8006, use the same configuration as above except for the items shown below

---

```
8006:5(config)#interface vlan 2
8006:5(config-if)#ip create 10.2.1.2 255.255.255.0
8006:5(config-if)#exit
8006:5(config)#interface mlt 1
8006:5(config-mlt)#ist peer-ip 10.2.1.1 vlan 2
8006:5(config-mlt)#ist enable
8006:5(config-mlt)#exit
```

VSP 4000 SMLT Cluster: Add IST VLAN 2 with IP address

4001:

```
4001:1(config)#interface vlan 2
4001:1(config-if)#interface ip address 10.4.2.1 255.255.255.252
4001:1(config-if)#exit
```

4002:

```
4001:1(config)#interface vlan 2
4001:1(config-if)#interface ip address 10.4.2.2 255.255.255.252
4001:1(config-if)#exit
```

17.1.1.9 IS-IS and SPB Global Configuration

Switch	Parameter	Value
SPB		
All switches	B-VLANs	4051, 4052 where 4051 is the primary B-VLAN
	VLAN Names	BVLAN-1 and BVLAN-2
	IS-IS Area	49.0001
	IS-IS	Enable
	SPBM	Enable, using instance 1
4001	SPB Nick Name	0.40.01
	SPB System-Name	4001
	vIST Configuration	
	SMLT Peer System ID	a012.90d3.ec65 (System ID of 4002)
	I-SID	2002
	vIST peer	10.4.2.2
4002	SPB Nick Name	0.40.02
	SPB System-Name	4002
	vIST Configuration	
	SMLT Peer System ID	d4ea.0e10.e465 (System ID of 4001)
	I-SID	2002
	vIST peer	10.4.2.1
4801	SPB Nick Name	0.48.01
	SPB System-Name	4801
7001	SPB Nick Name	0.70.01
	SPB System-Name	7001

	SMLT Peer System-ID	3cb1.5bff.5fdf (System ID of 7002)
7002	SPB Nick Name	0.70.02
	SPB System-Name	7002
	SMLT Peer System-ID	fca8.41f6.37df (System ID of 7001)
7003	SPB Nick Name	0.70.03
	SPB System-Name	7003
7004	SPB Nick Name	0.70.04
	SPB System-Name	7004
8003	SPB Nick Name	0.80.03
	SPB System-Name	8003
8004	SPB Nick Name	0.80.04
	SPB System-Name	8004
8005	SPB Nick Name	0.80.05
	SPB System-Name	8005
	SMLT Peer System-ID	001e.1f48.f3df (System ID of 8006)
8006	SPB Nick Name	0.80.06
	SPB System-Name	8006
	SMLT Peer System-ID	0024.43b4.e3df (System ID of 8005)
8007	SPB Nick Name	0.80.07
	SPB System-Name	8007
9001	SPB Nick Name	0.90.01
	SPB System-Name	9001
	SMLT Peer System-ID	d4ea.0efd.e4ac (System ID of 9002)

9002	SPB Nick Name	0.90.01
	SPB System-Name	9002
	SMLT Peer System-ID	d4ea.0efd.e3df (System ID of 9001)

Please note for the VSP7000, it is recommended to provision SPB first prior to enabling the IST. The default PVID on all IST ports must be the primary B-VLAN ID. This will happen automatically as long as SPB is enabled prior to enabling the IST.

For the SMLT cluster switches, use the ACLI show *isis system-id command* on the peer cluster switch to get the System ID value.

SPBM Configuration – VSP 4000: Use the *show isis system-id* command on the peer cluster switch to get the smlt-peer-system-id value

```
4001:1(config)#spbm
4001:1(config)#router isis
4001:1(config-isis)#spbm 1
4001:1(config-isis)#spbm 1 nick-name 0.40.01
4001:1(config-isis)#spbm 1 b-vid 4051-4052 primary 4051
4001:1(config-isis)#spbm 1 smlt-peer-system-id a012.90d3.ec65
4001:1(config-isis)#manual-area 49.0001
4001:1(config-isis)#exit
4001:1(config)#vlan create 4051 name BVLAN-1 type spbm-bvlan
4001:1(config)#vlan create 4052 name BVLAN-2 type spbm-bvlan
4001:1(config)#vlan create 2 name "vlan2_IST" type port-mstprstp 0
4001:1(config)#vlan i-sid 2 2002
4001:1(config)#virtual-ist peer-ip 10.4.2.2 vlan 2
4001:1(config)#router isis enable
--------------------------------------------------------------------------------
For 4002, use the same configuration as above except for the items shown below
--------------------------------------------------------------------------------
4002:1(config)#router isis
4002:1(config-isis)#spbm 1 nick-name 0.40.02
4002:1(config-isis)#spbm 1 smlt-peer-system-id d4ea.0e10.e465
4002:1(config-isis)#exit
4002:1(config)#virtual-ist peer-ip 10.4.2.1 vlan 2
```

SPBM Configuration – VSP 7000: Use the *show isis system-id* command on the peer cluster switch to get the smlt-peer-system-id value for the SMLT cluster switches

```
7001(config)#vlan configcontrol automatic
7001(config)#vlan create 4051 name BVLAN-1 type spbm-bvlan
7001(config)#vlan create 4052 name BVLAN-2 type spbm-bvlan
7001(config)#spbm
7001(config)#router isis
7001(config-isis)#spbm 1
7001(config-isis)#spbm 1 b-vid 4051-4052 primary 4051
7001(config-isis)#spbm 1 smlt-peer-system-id 3cb1.5bff.5fdf
7001(config-isis)#spbm 1 nick-name 0.70.01
7001(config-isis)#manual-area 49.0001
7001(config-isis)#sys-name 7001
7001(config-isis)#exit
7001(config)#router isis enable
```

For switches 7002, 7003, and 7004, use the same configuration as above except for the items shown below

---

```
7002(config-isis)#spbm 1 nick-name 0.70.02
7002(config-isis)#spbm 1 smlt-peer-system-id fca8.41f6.37df
```

```
7003(config-isis)#spbm 1 nick-name 0.70.03
```

```
7004(config-isis)#spbm 1 nick-name 0.70.04
```

SPBM Configuration – ERS 8800: Use the *show isis system-id* command on the peer cluster switch to get the smlt-peer-system-id value for the SMLT cluster switches

```
8003:5(config)#spbm
8003:5(config)#router isis
8003:5(config-isis)#spbm 1
8003:5(config-isis)#spbm 1 nick-name 0.80.03
8003:5(config-isis)#spbm 1 b-vid 4051-4052 primary 4051
8003:5(config-isis)#manual-area 49.0001
8003:5(config-isis)#exit
8003:5(config)#vlan create 4051 name BVLAN-1 type spbm-bvlan
8003:5(config)#vlan create 4052 name BVLAN-2 type spbm-bvlan
8003:5(config)#router isis enable
```

For switches 8004, 8005, 8006, and 8007, use the same configuration as above except for the items shown below. Note that bridges 8005 and 8006 also has the additional configuration to support SPB over SMLT.

```
8004:5(config-isis)#spbm 1 nick-name 0.80.04
```

```
8005:5(config-isis)#spbm 1 nick-name 0.80.05
8005:5(config-isis)#spbm 1 smlt-peer-system-id 001e.1f48.f3df
```

```
8006:5(config-isis)#spbm 1 nick-name 0.80.06
8006:5(config-isis)#spbm 1 smlt-peer-system-id 0024.43b4.e3df
```

```
8007:5(config-isis)#spbm 1 nick-name 0.80.07
```

SPBM Configuration – VSP 9000: Use the *show isis system-id* command on the peer cluster switch to get the smlt-peer-system-id value

```
9001:1(config)#spbm
9001:1(config)#router isis
9001:1(config-isis)#spbm 1
9001:1(config-isis)#spbm 1 nick-name 0.90.01
9001:1(config-isis)#spbm 1 b-vid 4051-4052 primary 4051
9001:1(config-isis)#manual-area 49.0001
9001:1(config-isis)#spbm 1 smlt-peer-system-id d4ea.0efd.e4ac
9001:1(config-isis)#exit
9001:1(config)#vlan create 4051 name BVLAN-1 type spbm-bvlan
9001:1(config)#vlan create 4052 name BVLAN-2 type spbm-bvlan spbm
9001:1(config)#router isis enable
--------------------------------------------------------------------------------
For 9002, use the same configuration as above except for the items shown below
--------------------------------------------------------------------------------
9002:1(config-isis)#spbm 1 nick-name 0.90.02
9002:1(config-isis)#spbm 1 smlt-peer-system-id d4ea.0efd.e3df
```

SPBM Configuration – ERS 4800

```
4801(config)#vlan configcontrol automatic
4801(config)#vlan create 4051 name BVLAN-1 type spbm-bvlan
4801(config)#vlan create 4052 name BVLAN-2 type spbm-bvlan
4801(config)#spbm
4801(config)#router isis
4801(config-isis)#spbm 1
4801(config-isis)#spbm 1 b-vid 4051-4052 primary 4051
4801(config-isis)#spbm 1 nick-name 0.48.01
4801(config-isis)#manual-area 49.0001
4801(config-isis)#sys-name 4801
4801(config-isis)#exit
4801(config)#router isis enable
```

SPB must be globally enabled first prior to adding SPB VLANs. If you create any SPB VLANs prior to globally enabling SPB, all SPB VLAN must be deleted. Also note that for the VSP 7000 as of release 10.2, the two B-VLANs must first be created prior to adding the B-VLANs to the SPB configuration.

17.1.1.10 IS-IS SPB Interface Configuration

Please note that Spanning Tree should be disabled on all SPB NNI interfaces that are not configured as SMLT ports. SMLT by default will disable Spanning Tree.

VSP 4000 - SPB Interface Configuration

4001 & 4002: Same configuration on both switches

```
4001:1(config)#mlt 1 enable name 9001
4001:1(config)#mlt 1 member 1/45-1/46
4001:1(config)#mlt 1 encapsulation dot1q
4001:1(config)#interface mlt 1
4001:1(config-mlt)#isis
4001:1(config-mlt)#isis spbm 1
4001:1(config-mlt)#isis enable
4001:1(config-mlt)#exit
4001:1(config)#interface gigabitEthernet 1/47
4001:1(config-if)#isis
4001:1(config-if)#isis spbm 1
4001:1(config-if)#isis enable
4001:1(config-if)#exit
4001:1(config)#interface gigabitEthernet 1/45-1/47
4001:1(config-if)#no spanning-tree mstp force-port-state enable
Disabling CIST would also disable all other MST instances.
Are you sure you want to continue (y/n) ? y
4001:1(config-if)#exit
```

VSP 7000 - SPB Interface Configuration

Rear ports – for this configuration example, we are provisioning only the FI Red (ports 38 & 39) and Black FI (ports 34, 35, & 36) rear ports. We simply just need to select one of the rear ports and enable SPB as all ports are using the same LACP LAG. On switches 7001 & 7002, we are also configuring the FI Red ports as an SMLT IST interface, hence, we will need to disable LACP as an IST interface does not support LACP – we will perform this step latter in this configuration example. Note if you select all ports, i.e. 34-39, and enable SPBM, this will work, but, you will simply get an error message stating IS-IS is already enabled on port 39, 35, and 36 – simply just ignore this error message.

7003 and 7004: Same configuration on both switches

```
7003(config)#interface ethernet 34,38
7003(config-if)#isis
7003(config-if)#isis spbm 1
7003(config-if)#isis enable
7003(config-if)#spanning-tree mstp learning disable
```

7001 & 7003: Front Ports – Same configuration on both switches

```
7001(config)#interface ethernet 3,34
7001(config-if)#isis
7001(config-if)#isis spbm 1
```

```
7001(config-if)#isis enable
7001(config-if)#spanning-tree mstp learning disable
7001(config-if)#exit
```

ERS 8800 - SPB Interface Configuration

8003 & 8004: Same configuration on both switches

```
8003:5(config)#mlt 1 enable name isis_mlt_1
8003:5(config)#mlt 1 member 4/1-4/2
8003:5(config)#mlt 1 encapsulation dot1q
8003:5(config)#interface mlt 1
8003:5(config-mlt)#isis
8003:5(config-mlt)#isis spbm 1
8003:5(config-mlt)#isis enable
8003:5(config-mlt)#exit
8003:5(config)#interface GigabitEthernet 4/1-4/2
8003:5(config-if)#no spanning-tree mstp force-port-state enable
Disabling CIST would also disable all other MST instances.
Are you sure you want to continue (y/n) ? y
8003:5(config-if)#exit
8003:5(config)#interface GigabitEthernet 4/7,4/20,4/30
8003:5(config-if)#isis
8003:5(config-if)#isis spbm 1
8003:5(config-if)#isis enable
8003:5(config-if)#no spanning-tree mstp force-port-state enable
Disabling CIST would also disable all other MST instances.
Are you sure you want to continue (y/n) ? y
8003:5(config-if)#exit
```

8005 & 8006: Same configuration on both switches. Also, as MLT 1 is used for the IST, we will change the ISIS hello interval to 1 and hello multiplier to 27.

```
8005:5(config)#interface mlt 1
8005:5(config-mlt)#isis
8005:5(config-mlt)#isis spbm 1
8005:5(config-mlt)#isis enable
8005:5(config-mlt)#isis l1-hello-interval 1
8005:5(config-mlt)#isis l1-hello-multiplier 27
8005:5(config-mlt)#exit
8005:5(config)#interface GigabitEthernet 2/5,2/34
8005:5(config-if)#isis
8005:5(config-if)#isis spbm 1
```

```
8005:5(config-if)#isis enable
8005:5(config-if)#no spanning-tree mstp  force-port-state enable
Disabling CIST would also disable all other MST instances.
Are you sure you want to continue (y/n) ? y
8005:5(config-if)#exit
```

8007:

```
8007:5(config)#interface GigabitEthernet 3/27,3/28
8007:5(config-if)#isis
8007:5(config-if)#isis spbm 1
8007:5(config-if)#isis enable
8007:5(config-if)#no spanning-tree mstp  force-port-state enable
Disabling CIST would also disable all other MST instances.
Are you sure you want to continue (y/n) ? y
8007:5(config-if)#exit
```

VSP 9000 - SPB Interface Configuration

9001 & 9002: Same configuration on both switches.

```
9001:1(config)#interface mlt 1
9001:1(config-mlt)#isis
9001:1(config-mlt)#isis spbm 1
9001:1(config-mlt)#isis enable
9001:1(config-mlt)#exit
9001:1(config)#interface gigabitEthernet 3/3,3/29
9001:1(config-if)#isis
9001:1(config-if)#isis spbm 1
9001:1(config-if)#isis enable
9001:1(config-if)#no spanning-tree mstp force-port-state enable
Disabling CIST would also disable all other MST instances.
Are you sure you want to continue (y/n) ? y
9001:1(config-if)#exit
9001:1(config)#mlt 8 enable
9001:5(config)#mlt 8 member 4/17,4/18
9001:5(config)#mlt 8 encapsulation dot1q
9001:5(config)#interface mlt 8
9001:5(config-mlt)#isis
9001:5(config-mlt)#isis spbm 1
9001:5(config-mlt)#isis enable
9001:5(config-mlt)#exit
9001:5(config)#interface gigabitEthernet 4/17,4/18
```

```
9001:5(config-if)#no shutdown
9001:5(config-if)#no spanning-tree mstp force-port-state enable
Disabling CIST would also disable all other MST instances.
Are you sure you want to continue (y/n) ? y
9001:5(config-if)#exit
```

ERS 4800 - SPB Interface Configuration

```
4801(config)#interface ethernet 45,46
4801(config-if)#isis
4801(config-if)#isis spbm 1
4801(config-if)#isis enable
4801(config-if)#spanning-tree mstp learning disable
```

17.1.1.11 Remove default VLAN from all SPB ports

Note this section only applies to the ERS 4800 and VSP 7000.

ERS 4800 - Remove default VLAN from ISIS port members

```
4801(config)#vlan members remove 1 45,46
```

VSP 7000 - Remove default VLAN from ISIS port members

7001 & 7003: Same configuration on both switches

```
7001(config)#vlan members remove 1 3,34-39
```

17.1.1.12 Other best practice items – VLACP and discard untagged frames

For added protection and faster link failure detection, it is recommended to also enable VLACP on all IS-IS ports. VLACP is already enabled on the IST port member so the rest of this configuration covers the IS-IS ports.

VSP 4000 - Interface Configuration

4001 & 4002: Same configuration on both switches

```
4001:1(config)#interface gigabitEthernet 1/45-1/47
4001:1(config-if)#untagged-frames-discard
4001:1(config-if)#vlacp fast-periodic-time 500 timeout short timeout-scale 5 funcmac-addr 01:80:c2:00:00:0f
4001:1(config-if)#vlacp enable
4001:1(config-if)#exit
```

VSP 7000 - Interface Configuration

7001 & 7003: Same configuration on both switches

```
7001(config)#vlan ports 3 filter-untagged-frame enable
7001(config)#interface ethernet 3
7001(config-if)#vlacp timeout short
7001(config-if)#vlacp timeout-scale 5
7001(config-if)#vlacp enable
7001(config-if)#exit
```

ERS 8800 - Interface Configuration

8003 & 8004: Same configuration on both switches

```
8003:5(config)#interface gigabitEthernet 4/1,4/2,4/7,4/20,4/30
8003:5(config-if)#untagged-frames-discard
8003:5(config-if)#vlacp fast-periodic-time 500 timeout short timeout-scale 5 funcmac-addr 01:80:c2:00:00:0f
8003:5(config-if)#vlacp enable
8003:5(config-if)#exit
```

8005 & 8006: Same configuration on both switches

```
8005:5(config)#interface gigabitEthernet 2/5,2/34
8005:5(config-if)#untagged-frames-discard
8005:5(config-if)#vlacp fast-periodic-time 500 timeout short timeout-scale 5 funcmac-addr 01:80:c2:00:00:0f
8005:5(config-if)#vlacp enable
8005:5(config-if)#exit
```

8007:

```
8007:5(config)#interface gigabitEthernet 3/27,3/28
8007:5(config-if)#untagged-frames-discard
8007:5(config-if)#vlacp fast-periodic-time 500 timeout short timeout-scale 5 funcmac-addr 01:80:c2:00:00:0f
8007:5(config-if)#vlacp enable
8007:5(config-if)#exit
```

VSP 9000 - Interface Configuration

9001 & 9002: Same configuration on both switches

```
9001:1(config)#interface GigabitEthernet 3/3,3/29,4/17,4/18
9001:1(config-if)#untagged-frames-discard
9001:1(config-if)#vlacp fast-periodic-time 500 timeout short timeout-scale 5 funcmac-addr 01:80:c2:00:00:0f
9001:1(config-if)#vlacp enable
9001:1(config-if)#exit
```

ERS 4800 - Interface Configuration

```
4801(config)#vlan ports 45,46 filter-untagged-frame enable
```

```
4801(config)#interface ethernet 3
4801(config-if)#vlacp timeout short
4801(config-if)#vlacp timeout-scale 5
4801(config-if)#vlacp enable
4801(config-if)#exit
```

17.1.1.13 IST Configuration – SMLT Cluster switch 7001 & 7002

The following port based VLANs will be configured on the SMLT Switch cluster

Switch	Feature	Parameter	Value
7001 & 7002	IST	MLT ID	1
		VLAN	2
		VLAN Port Members	38 & 39
7001 & 7002	LACP	Aggregation	Disable on ports 38-39
		Mode	Off on ports 38-39
7001	IST VLAN	IP address	10.70.2.5/30
		Ports	38,39
7002	IST VLAN	IP address	10.70.2.6/30
		Ports	38,39

For the VSP 7000, it is important to not enable the *filter-untagged-frame* option on the IST port members. Also, the default PVID of all IST ports must be the primary B-VLAN ID; for this example, this will be B-VLAN ID 4051. This will happened automatically providing SPB is enable first prior to enabling the IST.

Also, it is recommended to not enable VLACP on the IST.

Please note that Spanning Tree should be disabled on all SPB NNI interfaces that are not configured as SMLT ports. SMLT by default will disable Spanning Tree.

Since we will be adding an IST interface via the red rear ports, ports 38 & 39, we will have to disable LACP on these ports and add an MLT.

VSP 7000 – Disable LACP on ports 38 & 39

7001 & 7002: Same configuration on both switches

```
7001(config)#interface ethernet 38,39
7001(config-if)#no lacp aggregation enable
7001(config-if)#lacp mode off
7001(config-if)#exit
```

Prior to enabling the IST, LACP must be disabled on the rear port member that are being used for the IST

VSP 7000 – Create MLT to be used by IST

7001 & 7002: Same configuration on both switches

```
7001(config)#mlt 1 name IST enable member 38,39 learning disable
```

Verify MLT configuration

```
7001(config)#show mlt 1
Id Name              Members                 Bpdu    Mode            Status   Type
-- ----------------- ----------------------- ------ -------------- -------- ------
1  IST               38-39                   All    Basic           Enabled Trunk
```

VSP 7000 – SPB Interface Configuration

7001 & 7002: Same configuration on both switches

```
7001(config)#interface ethernet 38,39
7001(config-if)#isis
7001(config-if)#isis spbm 1
7001(config-if)#isis enable
7001(config-if)#spanning-tree mstp learning disable
7001(config-if)#exit
```

VSP 7000 – Remove default VLAN from SPB ports

7001 & 7002: Same configuration on both switches

```
7001(config)#vlan members remove 1 38,39
```

VSP 7000 – Add IST VLAN 2 and IP address

7001 & 7002: Same configuration on both switches

```
7001(config)#vlan create 2 name ist type port
7001(config)#vlan members 2 38,39
7001(config)#vlan members remove 1 38,39
```

IP configuration on 7001

```
7001(config)#interface vlan 2
7001(config-if)#ip address 10.70.2.5 255.255.255.252
7001(config-if)#exit
```

IP configuration on 7002

```
7002(config)#interface vlan 2
7002(config-if)#ip address 10.70.2.6 255.255.255.252
7002(config-if)#exit
```

VSP 7000 – Create IST

```
7001(config)#interface mlt 1
7001(config-if)#ist peer-ip 10.70.2.6 vlan 2
7001(config-if)#ist enable
7002(config-if)#exit
--------------------------------------------------------------------------------
7002(config)#interface mlt 1
7002(config-if)#ist peer-ip 10.70.2.5 vlan 2
7002(config-if)#ist enable
7002(config-if)#exit
--------------------------------------------------------------------------------
Verify IST Operation assuming the SMLT cluster peer is also configured
7001(config)#show ist
MLT ID Enabled Running Master Peer IP Address Vlan ID
------ ------- ------- ------ --------------- -------
1      YES     YES     NO     10.70.2.2       2
7001(config)#show smlt
================================================================================
                                        MLT SMLT Info
================================================================================
MLT    SMLT     ADMIN    CURRENT
ID     ID       TYPE     TYPE
--------------------------------------------------------------------------------
1               ist      ist
```

Verify the default VLAN is now the primary B-VLAN ID. Also, make sure the Filter Untagged Frames option is disabled.

```
7001(config)#show vlan interface info 38,39
      Filter     Filter
     Untagged Unregistered
Port  Frames     Frames     PVID PRI    Tagging     Name
---- -------- ------------ ---- --- ------------ ----------------
38   No       Yes          4051 0   TagAll       Port 38
39   No       Yes          4051 0   TagAll       Port 39
```

17.1.1.14 ISIS L1-metric – Optional

As an option, we can change the default metric on the FI rear ports and SPB front ports to reflect the actual port speeds.

VSP 7000 – ISIS L1 Metric

Switches 7001 and 7003: Same configuration on both switches

```
7001(config)#interface ethernet 3
7001(config-if)#isis spbm 1 l1-metric 200
7001(config-if)#exit
7001(config)#interface ethernet 34
7001(config-if)#isis spbm 1 l1-metric 17
7001(config-if)#exit
7001(config)#interface ethernet 38
7001(config-if)#isis spbm 1 l1-metric 25
7001(config-if)#exit
```

Switches 7002 and 7004: Same configuration on both switches

```
7002(config)#interface ethernet 34
7002(config-if)#isis spbm 1 l1-metric 17
7002(config-if)#exit
7002(config)#interface ethernet 38
7002(config-if)#isis spbm 1 l1-metric 25
7002(config-if)#exit
```

17.1.1.15 Connectivity Fault Management (CFM) Configuration

Switch	Parameter	Value
CFM		
All bridges	CFM	Enabled
	*Maintenance Domain Name	spbm
	*Maintenance Association Name	4051
	*Maintenance Association Name	4052
4001	Maintenance End Point (MEP) ID	401
4002	Maintenance End Point (MEP) ID	402
4801	Maintenance End Point (MEP) ID	4801
7001	Maintenance End Point (MEP) ID	7001
7002	Maintenance End Point (MEP) ID	7002
7003	Maintenance End Point (MEP) ID	7003
7004	Maintenance End Point (MEP) ID	7004
8003	Maintenance End Point (MEP) ID	803
8004	Maintenance End Point (MEP) ID	804
8005	Maintenance End Point (MEP) ID	805
8006	Maintenance End Point (MEP) ID	806
8007	Maintenance End Point (MEP) ID	807
9001	Maintenance End Point (MEP) ID	901
9002	Maintenance End Point (MEP) ID	902

* Default values on all switches

VSP 4000 - CFM Configuration

4001:

```
4001:1(config)#cfm spbm mepid 401
4001:1(config)#cfm spbm enable
```

4002:

```
4002:1(config)#cfm spbm mepid 402
4002:1(config)#cfm spbm enable
```

VSP 7000 – CFM Configuration

7001:

```
7001(config)#cfm spbm mepid 7001
7001(config)#cfm spbm enable
```

7002:

```
7002(config)#cfm spbm mepid 7002
7002(config)#cfm spbm enable
```

7003:

```
7003(config)#cfm spbm mepid 7003
7003(config)#cfm spbm enable
```

7004:

```
7004(config)#cfm spbm mepid 7004
7004(config)#cfm spbm enable
```

ERS 8800 - CFM Configuration

8003:

```
8003:5(config)#cfm spbm mepid 803
8003:5(config)#cfm spbm enable
```

8004:

```
8004:5(config)#cfm spbm mepid 804
8004:5(config)#cfm spbm enable
```

8005:

```
8005:5(config)#cfm spbm mepid 805
8005:5(config)#cfm spbm enable
8005:5(config)#cfm cmac mepid 805
8005:5(config)#cfm cmac enable
```

8006:

```
8006:5(config)#cfm spbm mepid 806
8006:5(config)#cfm spbm enable
8006:5(config)#cfm cmac mepid 806
```

```
8006:5(config)#cfm cmac enable
```

8007:

```
8006:5(config)#cfm spbm mepid 807
8006:5(config)#cfm spbm enable
8006:5(config)#cfm cmac mepid 807
8006:5(config)#cfm cmac enable
```

VSP 9000 - CFM Configuration assuming 3.4 or higher is used

9001:

```
9001:1(config)#cfm spbm mepid 901
9001:1(config)#cfm spbm enable
9001:1(config)#cfm cmac mepid 901
9001:1(config)# cfm cmac enable
```

9002:

```
9002:1(config)# cfm spbm mepid 902
9002:1(config)#cfm spbm enable
9002:1(config)#cfm cmac mepid 902
9002:1(config)# cfm cmac enable
```

17.1.1.16 QoS

QoS by default is enabled on all NNI interfaces. Depending on the switch, QoS may still have to be enabled on the UNI interface or filters must be used to provide end-to-end QoS.

On the VSP 4000, VSP 8000, and VSP 9000, the interface level parameters *802.1p-override disable*, *enable-diffserv enable* and no *access-diffserv enable* are the default settings. On an UNI interface, this has the overall result of honoring p-bits for bridge traffic and DSCP values for routed traffic. Note that on the ERS 8000, all of these settings are disabled by default; the *enable-diffserv* parameter must be enabled for the ERS 8000 to behave the same as the VSP 9000 and VSP 4000. Note that with these settings, on any untagged L2 port, i.e. a port member of a C-VLAN used for an L2VSN, as there is no p-bit to determine the QoS level, either the port or VLAN QoS level determines the QoS classification. To be safe, it is recommended to enable the *802.1p-override* parameter. This has the net effect of honoring the DSCP value for L2 traffic so it makes no difference if the ingress port is tagged or untagged.

VSP 4000, VSP 9000, and ERS 8800 – QoS Configuration

VSP 4000 & VSP 9000: All C-VLAN port members – L2 and L3

```
interface gigabitEthernet <slot/port>
qos 802.1p-override enable
```

ERS 8000: All C-VLAN port members – L2 and L3

```
interface gigabitEthernet <slot/port>
qos 802.1p-override enable
enable-diffserv enable
```

If you do not wish to trust the incoming traffic, i.e. remark all traffic to Best Effort and use ACL's to remark traffic, you need to enable the *access-diffserv* paramter

VSP 4000, VSP 9000, and ERS 8000:

```
interface gigabitEthernet <slot/port>
access-diffserv enable
```

On the VSP 7000, by default, all ports are members of the default interface group *allQoSPolicyIfcs* has an interface class of trusted resulting in all traffic being trusted. This results in honoring the DSCP value and updating the 802.1 p-bit value based on the DSCP mapping table. If you wish to not trust the incoming traffic and use Traffic Profiles to remark traffic, you need to create an interface group of *untrusted*.

```
qos if-group name <word> class untrusted
qos if-assign port <port list> name <word>
```

17.1.2 Configuration using EDM – Using 8005 as an example


If using EDM to config SPB, please follow the steps shown below. The following configuration is in reference to 9002 and assumes the base configuration has been configured – i.e. VLAN and SMLT configuration

17.1.2.1 SPB and B-VLAN Configuration


8005 - Step 1 – Via EDM, go to Configuration -> IS-IS -> SPBM -> Global and enable SPBM globally




8005: Step 2 – Via EDM, go to Configuration -> VLAN -> VLANs -> Basic -> Insert to add primary B-VLAN 4051 (make sure to select Type: spbm-bvlan)

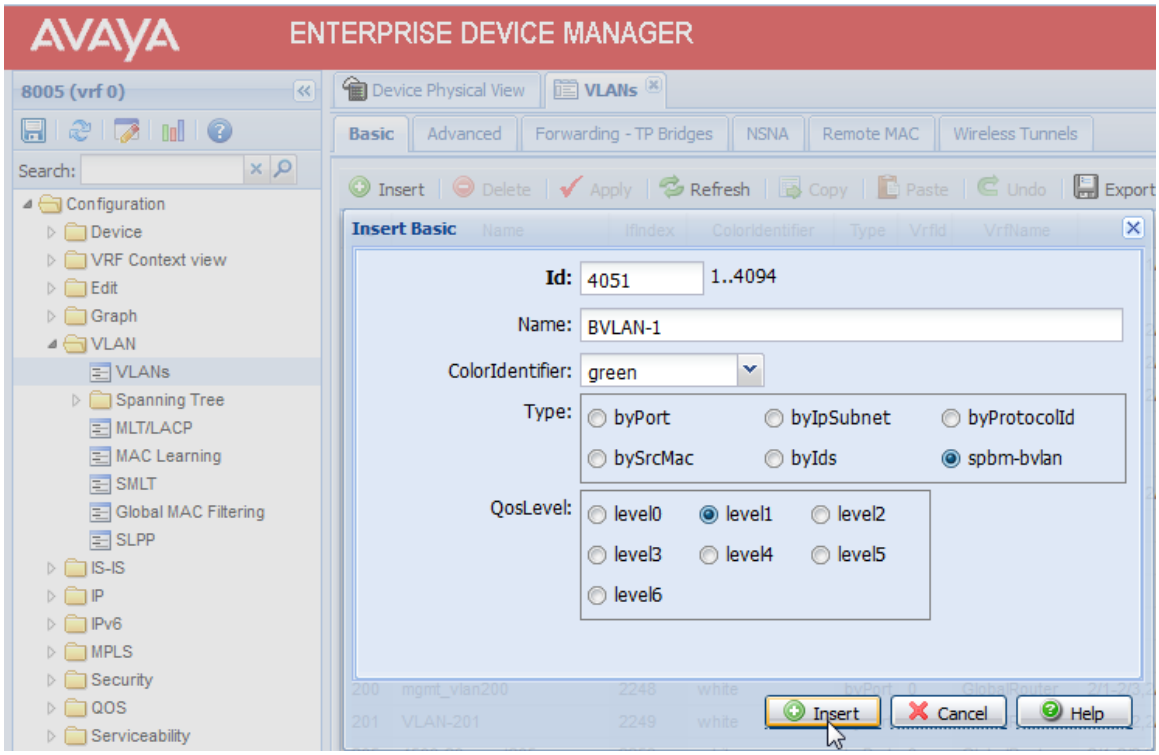


8005: Step 3 – Via EDM, go to Configuration -> VLAN -> VLANs -> Basic -> Insert to add secondary B-VLAN 4052 (make sure to select Type: spbm-bvlan)

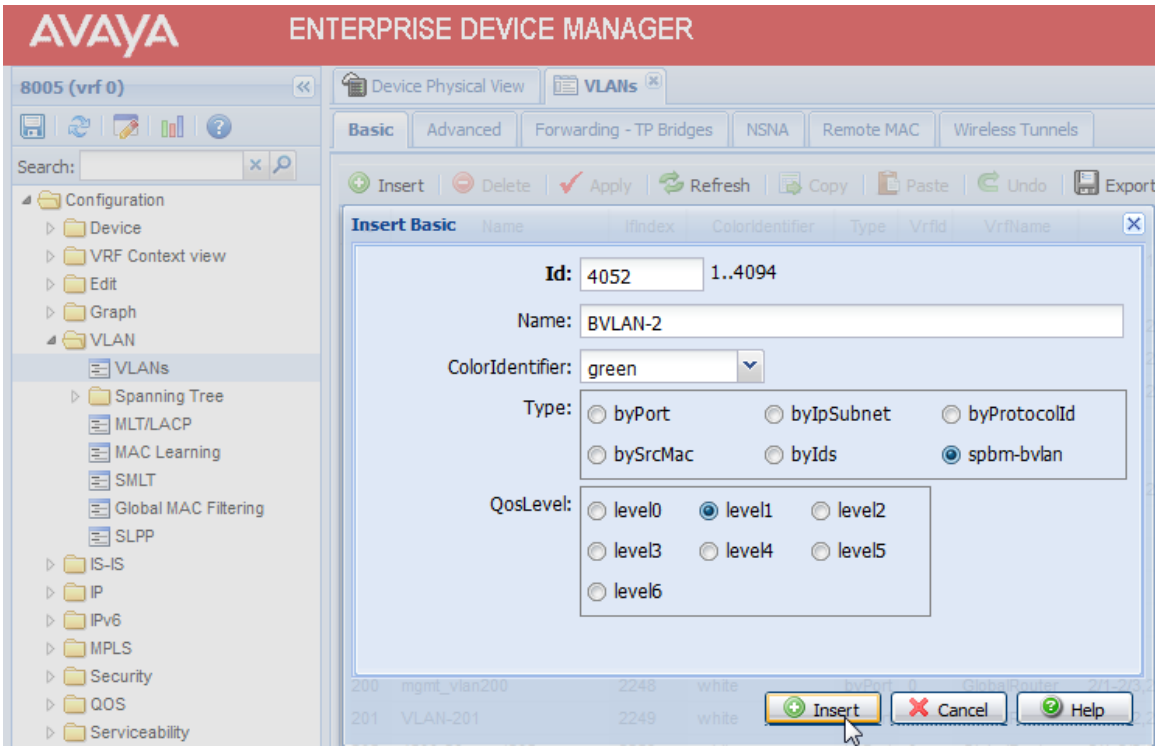


8005: Step 4 – Via EDM, go to Configuration -> IS-IS -> IS-IS -> Global, add the SPBM System ID and set the Admin State to enable

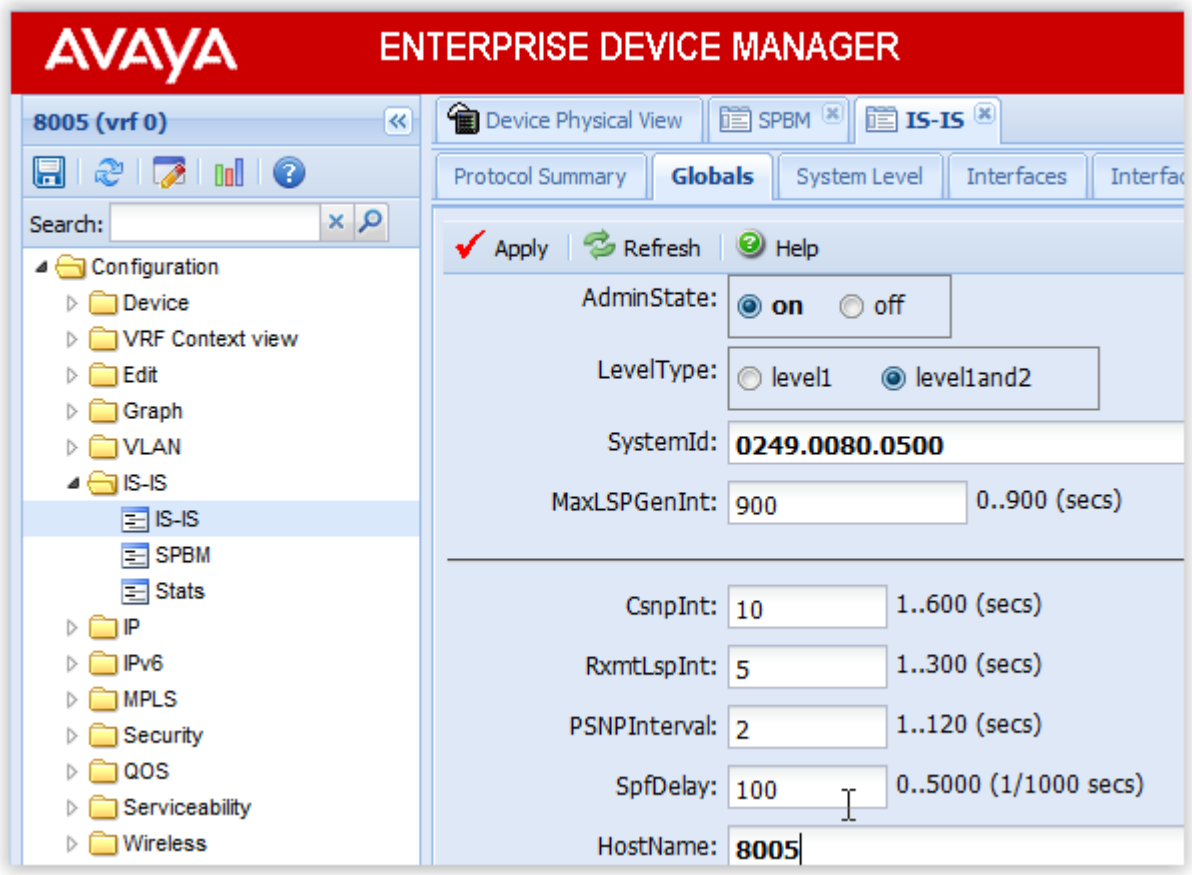


8005: Step 5 – Via EDM, go to Configuration -> IS-IS -> SPBM -> SPBM, add the SPBM node nickname, primary VLAN, and both primary and secondary VLANs as ERS-3 is part of an SMLT cluster

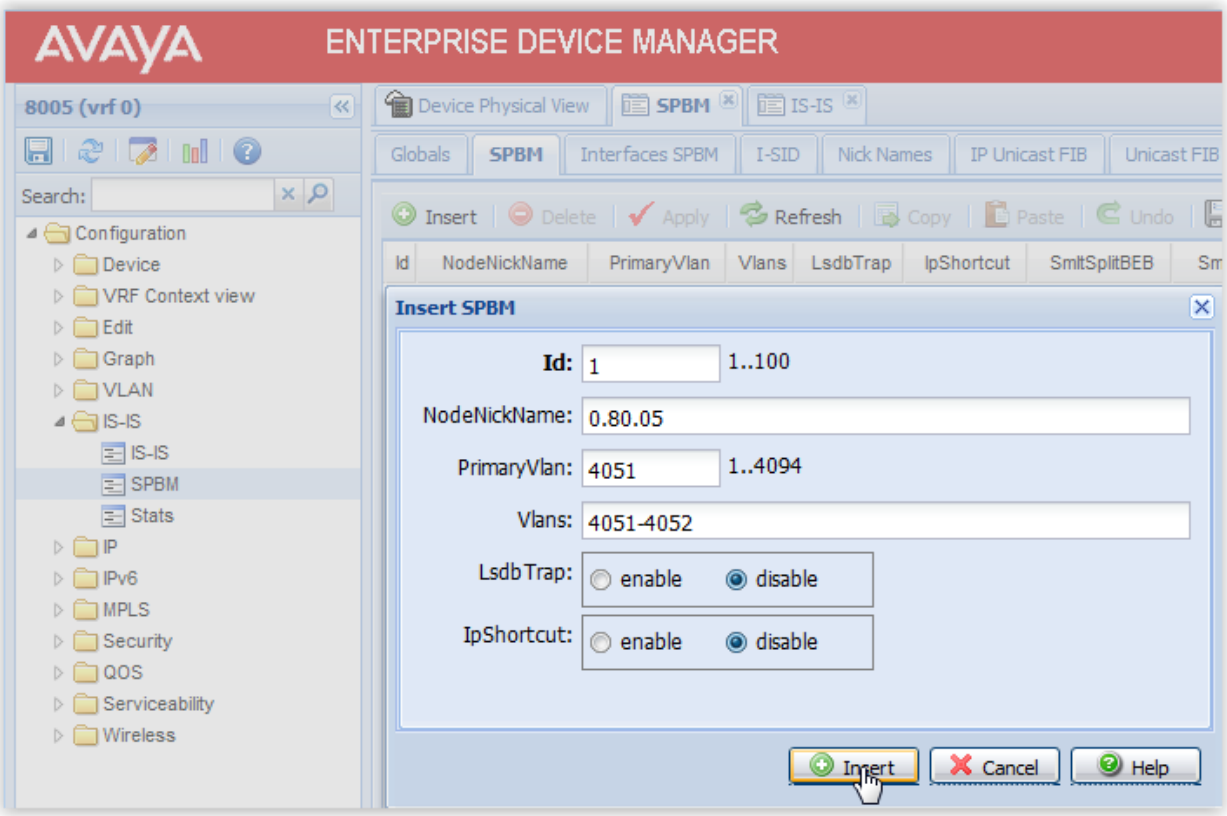

8005: Step 6 – Via EDM, go to Configuration -> IS-IS -> IS-IS -> Manual Area to add the IS-IS area which in our example is area 49.0001

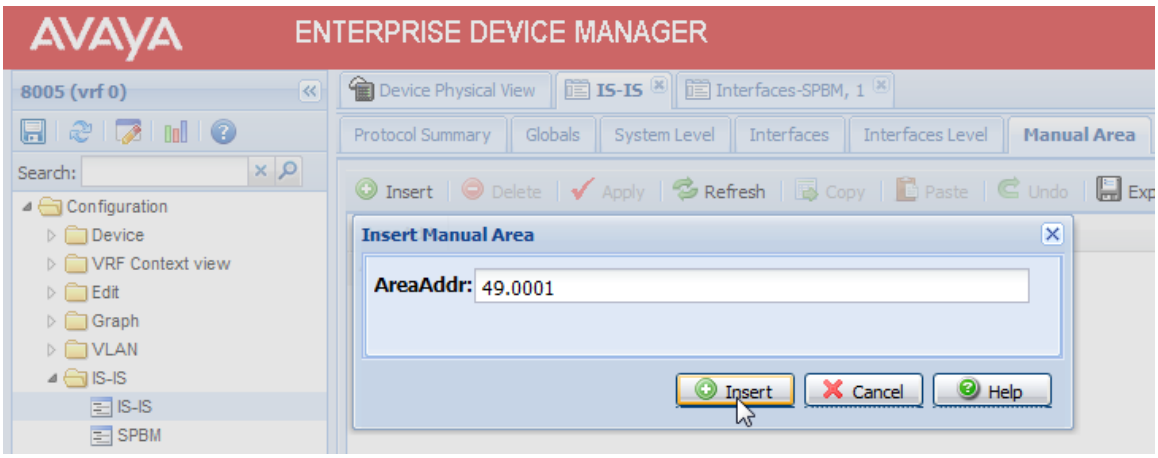


8005: Step 7 – Via EDM, go to Configuration -> IS-IS -> SPBM -> SPBM and change the and SMLT peer B-MAC (001e.1f48.f3df) – use the ACLI *show isis system-id* command on the peer cluster switch to get the System ID value

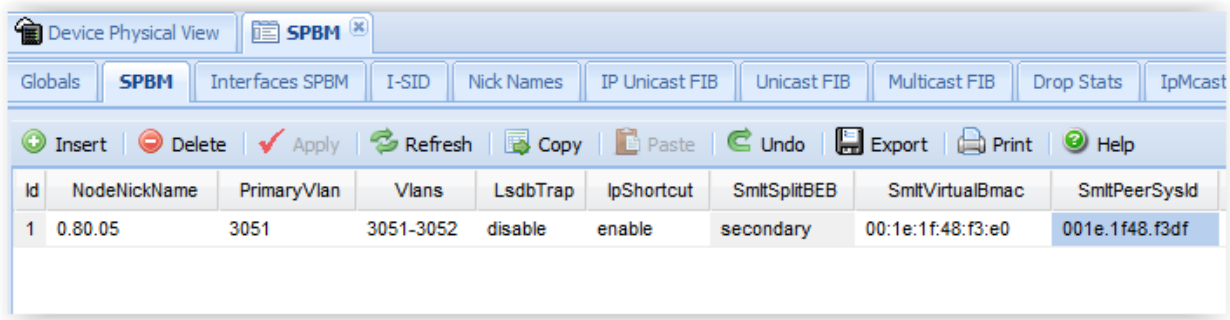

17.1.2.2 IS-IS and SPB Configuration


8005: Step 1 – Via EDM, go to Configuration -> IS-IS -> IS-IS -> Interfaces to add IS-IS on all appropriate interfaces; in regards to 8005, this will the IST interface, port 2/5 and 2/34. Do not enable IS-IS (AdminState = off) until SPBM is enabled on the interface

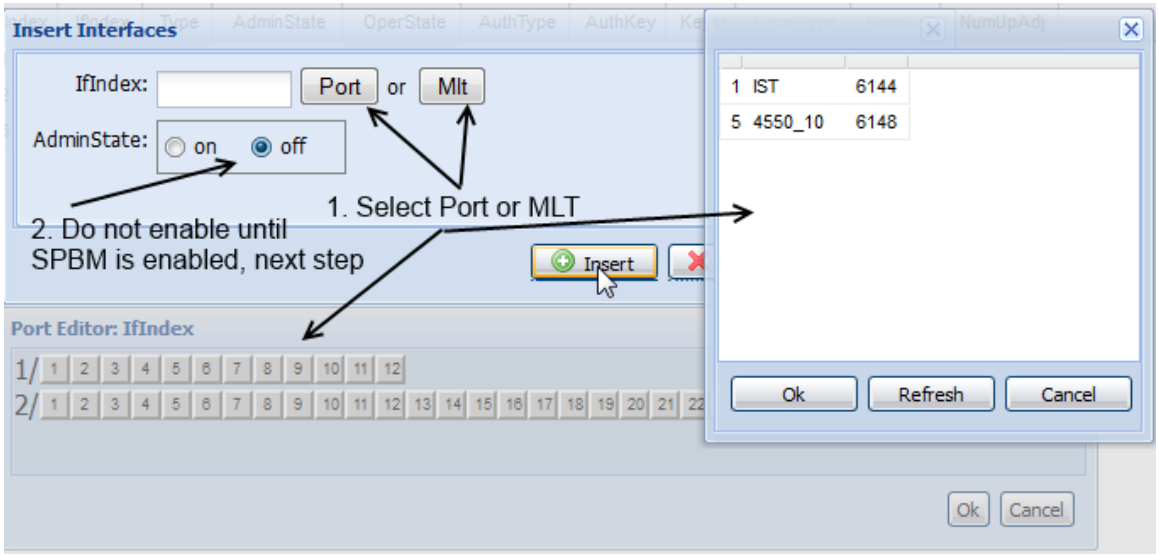


8005: Step 2 – Via EDM, go to Configuration -> IS-IS -> IS-IS -> Interfaces, select interface and then click on SPBM



8005: Step 4 – Via SBPM windows, select SPBM Id of 1 and enable SPBM

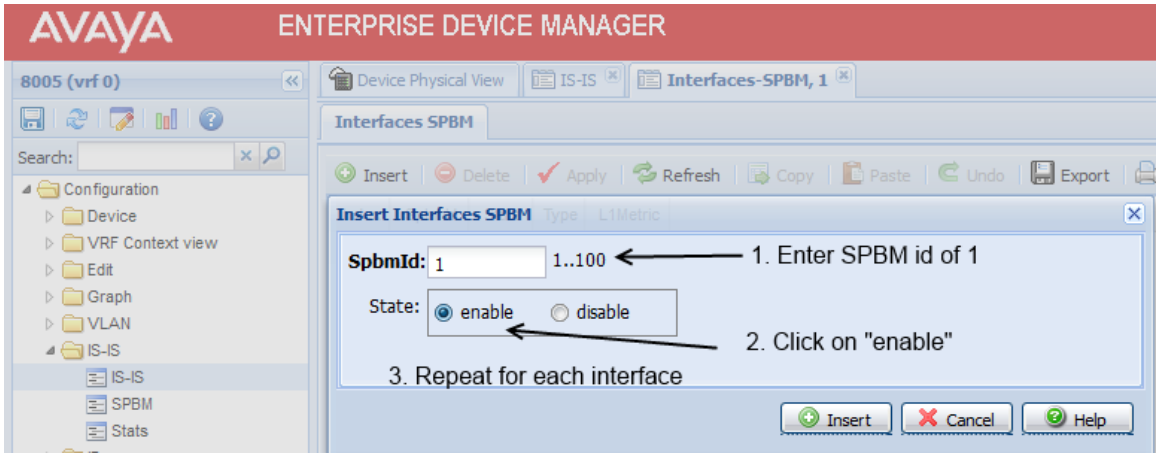

8005: Step 4 – Via EDM, go back to Configuration -> IS-IS -> IS-IS -> Interface and enable IS-IS on each interface

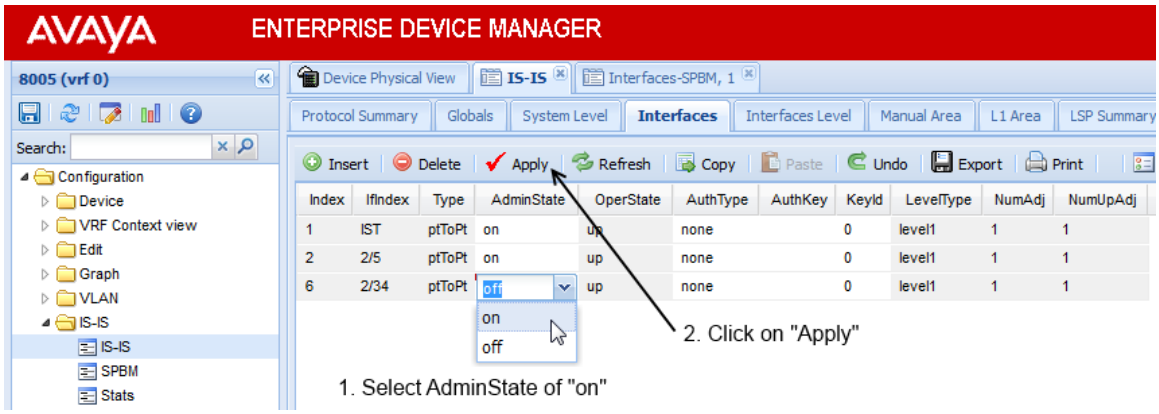

17.1.3 Verify Operations

17.1.3.1 Global Settings

Step 1 – Verify IS-IS global settings:

```
8800:5#show isis
```

Results: Example from 8003. Admin state should show *enabled* and in our case the configured B-MAC address of *0080.2dbe.23df* should be displayed.

8003:

```
================================================================================
                              ISIS General Info
================================================================================
                            AdminState : enabled
                            RouterType : Level 1
                             System ID : 0080.2dbe.23df
                  Max LSP Gen Interval : 900
                                Metric : wide
                 Overload-on-startup : 20
                              Overload : false
                         Csnp Interval : 10
                         PSNP Interval : 2
                    Rxmt LSP Interval : 5
                             spf-delay : 100
                           Router Name : 8003
                    ip source-address :
                    Num of Interfaces : 4
                Num of Area Addresses : 1
```

Step 2 – Verify IS-IS network information

```
show isis net
```

Results: From all switches

4001:

```
================================================================================
                                ISIS Net Info
================================================================================
NET
--------------------------------------------------------------------------------
49.0001.d4ea.0e10.e465.00
```

4002:

```
================================================================================
                                ISIS Net Info
================================================================================
NET
--------------------------------------------------------------------------------
49.0001.a012.90d3.ec65.00
```

7001:

```
================================================================================
                                ISIS Net Info
================================================================================
NET
--------------------------------------------------------------------------------
49.0001.fca8.41f6.37df.00
```

7002:

```
================================================================================
                                ISIS Net Info
```

```
================================================================================
NET
--------------------------------------------------------------------------------
49.0001.3cb1.5bff.5fdf.00
```

7003:

```
================================================================================
                                ISIS Net Info
================================================================================
NET
--------------------------------------------------------------------------------
49.0001.7030.1823.7fdf.00
```

7004:

```
================================================================================
                                ISIS Net Info
================================================================================
NET
--------------------------------------------------------------------------------
49.0001.7030.1823.9bdf.00
```

9001:

```
================================================================================
                                ISIS Net Info
================================================================================
NET
--------------------------------------------------------------------------------
49.0001.d4ea.0efd.e3df.00
```

9002:

```
================================================================================
```

ISIS Net Info

==========

NET

49.0001.d4ea.0efd.e4ac.00

8003:

==========

ISIS Net Info

==========

NET

49.0001.0080.2dbe.23df.00

8004:

==========

ISIS Net Info

==========

NET

49.0001.00e0.7bbc.23df.00

8005:

==========

ISIS Net Info

==========

NET

49.0001.0024.43b4.e3df.00

8006:

```
================================================================================
                                ISIS Net Info
================================================================================
NET
--------------------------------------------------------------------------------
49.0001.001e.1f48.f3df.00
```

8007:

```
================================================================================
                                ISIS Net Info
================================================================================
NET
--------------------------------------------------------------------------------
49.0001.00e0.7bb3.07df.00
```

4801:

```
================================================================================
                                ISIS Net Info
================================================================================
NET
--------------------------------------------------------------------------------
49.0001.ccf9.54b4.ac21.00
```

On each switch, verify the following:

Option	Verify
System ID	This is the unique MAC address which will be used by SPB to build adjacencies and forwarding.
NET	Should be displayed as ***49.0001.<system id>.00*** where 49.0001 is the IS-IS area ID

17.1.3.2 Verify IS-IS Interface and Adjacencies

Step 1 – Verify IS-IS interfaces:

```
show isis interface
```

Results: From switch 4001 and 7002

4001:

```
================================================================================
                                ISIS Interfaces
================================================================================
IFIDX      TYPE    LEVEL     OP-STATE  ADM-STATE  ADJ    UP-ADJ  SPBM-L1-METRIC

--------------------------------------------------------------------------------
Mlt1       pt-pt   Level 1   UP        UP         1      1       10
Port1/47   pt-pt   Level 1   UP        UP         1      1       10
```

7001:

```
================================================================================
                                ISIS Interfaces
================================================================================
IFIDX      TYPE    LEVEL     OP-STATE  ADM-STATE  ADJ    UP-ADJ  SPBM-L1-METRIC

--------------------------------------------------------------------------------
Trunk: 64  pt-pt   Level 1   UP        UP          1     1       10
Port: 3    pt-pt   Level 1   UP        UP          1     1       10
Trunk: 63  pt-pt   Level 1   UP        UP          1     1       10

7001#show mlt
Id Name             Members                Bpdu   Mode           Status  Type
-- ---------------- ---------------------- ------ -------------- ------- ------
63 Trunk #31        38-39                  Single DynLag/Basic   Enabled Trunk
64 Trunk #32        34-36                  Single DynLag/Basic   Enabled Trunk
```

Step 2 – Verify IS-IS adjacencies

```
show isis adjacencies
```

Results: From switch 4001 and 7002

4001:

```
================================================================================
                                ISIS Adjacencies
================================================================================
INTERFACE L STATE        UPTIME PRI HOLDTIME SYSID             HOST-NAME
--------------------------------------------------------------------------------
Mlt1      1 UP         21:01:51 127       22 d4ea.0efd.e3df    9001
Port1/47  1 UP       1d 19:57:51 127       23 d4ea.0efd.e4ac    9002

--------------------------------------------------------------------------------
 2 out of 2 interfaces have formed an adjacency
--------------------------------------------------------------------------------
```

7001:

```
================================================================================
                                ISIS Adjacencies
================================================================================
INTERFACE L STATE        UPTIME PRI HOLDTIME SYSID             HOST-NAME

================================================================================
Trunk: 64 1 UP     28d 13:12:00 127       17  7030.1823.7fdf   7003
Port: 3   1 UP         20:25:01 127       18  0024.43b4.e3df   8005
Trunk: 63 1 UP     14d 19:15:40 127       18  fca8.41f6.37df   7001
--------------------------------------------------------------------------------
 3 interfaces have formed an adjacency
--------------------------------------------------------------------------------
```

On each switch, verify the following:

Option	Verify
IS-IS Interface	
TYPE	The value displayed should be ***pt-pt*** which indicates Point to Point
OP-STATE ADM-STATE	The value displayed should be ***UP*** which indicates that IS-IS have been configured and is operational for the interface index shown
IS-IS Adjacencies	
STATE HOST-NAME	Should be displayed as ***UP*** indicating there is an adjacency with its neighbor as shown via ***HOST-NAME***

17.1.3.3 Verify IS-IS SPB Information

Step 1 – Verify IS-IS interfaces

```
show isis spbm
```

Results: From switch 4001, 7002, 9001, 8003, 8005, and 8007

4001:

```
================================================================================
                                ISIS SPBM Info
================================================================================
SPBM        B-VID       PRIMARY     NICK      LSDB      IP        MULTICAST
INSTANCE                VLAN        NAME      TRAP
--------------------------------------------------------------------------------
1           4051-4052   4051        0.40.01   disable   enable    disable
```

7002:

```
============================================================
                  ISIS SPBM Info
============================================================
SPBM       B-VID          PRIMARY      NICK             LSDB
INSTANCE                  VLAN         NAME             TRAP
============================================================
1          4051-4052      4051         0.70.02          FALSE
```

9001:

```
================================================================================
                                ISIS SPBM Info
================================================================================
SPBM        B-VID       PRIMARY     NICK      LSDB      IP        MULTICAST
INSTANCE                VLAN        NAME      TRAP
--------------------------------------------------------------------------------
1           4051-4052   4051        0.90.01   disable   enable    enable

================================================================================
                             ISIS SPBM SMLT Info
================================================================================
SPBM        SMLT-SPLIT-BEB       SMLT-VIRTUAL-BMAC     SMLT-PEER-SYSTEM-ID
INSTANCE
```

```
--------------------------------------------------------------------------------
1          primary              d4:ea:0e:fd:e3:e0    d4ea.0efd.e4ac
```

8003:

```
================================================================================
                                ISIS SPBM Info
================================================================================
SPBM       B-VID      PRIMARY    NICK     LSDB     IP       MULTICAST
INSTANCE              VLAN       NAME     TRAP
--------------------------------------------------------------------------------
1          4051-4052  4051       0.80.03  disable  enable   disable

================================================================================
                             ISIS SPBM SMLT Info
================================================================================
SPBM       SMLT-SPLIT-BEB       SMLT-VIRTUAL-BMAC     SMLT-PEER-SYSTEM-ID
INSTANCE
--------------------------------------------------------------------------------
1          primary              00:00:00:00:00:00
```

8005:

```
================================================================================
                                ISIS SPBM Info
================================================================================
SPBM       B-VID      PRIMARY    NICK     LSDB     IP       MULTICAST
INSTANCE              VLAN       NAME     TRAP
--------------------------------------------------------------------------------
1          4051-4052  4051       0.80.05  disable  enable   enable

================================================================================
                             ISIS SPBM SMLT Info
================================================================================
SPBM       SMLT-SPLIT-BEB       SMLT-VIRTUAL-BMAC     SMLT-PEER-SYSTEM-ID
INSTANCE
--------------------------------------------------------------------------------
1          primary              00:1e:1f:48:f3:e0    001e.1f48.f3df
```

8007:

```
================================================================================
                                ISIS SPBM Info
================================================================================
SPBM        B-VID       PRIMARY     NICK      LSDB      IP        MULTICAST
INSTANCE                VLAN        NAME      TRAP
--------------------------------------------------------------------------------
1           4051-4052   4051        0.80.07   disable   enable    enable

================================================================================
                              ISIS SPBM SMLT Info
================================================================================
SPBM        SMLT-SPLIT-BEB        SMLT-VIRTUAL-BMAC      SMLT-PEER-SYSTEM-ID
INSTANCE
--------------------------------------------------------------------------------
   1           primary               00:00:00:00:00:00
```

Step 2 – show isis spbm unicast-fib

```
show isis spbm unicast-fib
```

Results: From switch 8007

8007:

```
================================================================================
                          SPBM UNICAST FIB ENTRY INFO
================================================================================
DESTINATION         BVLAN  SYSID            HOST-NAME         OUTGOING     COST
ADDRESS                                                      INTERFACE
--------------------------------------------------------------------------------
00:80:2d:be:23:df   4051   0080.2dbe.23df   8003              3/27         10
02:80:03:ff:ff:ff   4051   0080.2dbe.23df   8003              3/27         10
00:80:2d:be:23:df   4052   0080.2dbe.23df   8003              3/27         10
02:80:03:ff:ff:ff   4052   0080.2dbe.23df   8003              3/27         10
00:e0:7b:b3:07:df   4051   00e0.7bb3.07df   8007              cpp          0
02:80:07:ff:ff:ff   4051   00e0.7bb3.07df   8007              cpp          0
00:e0:7b:b3:07:df   4052   00e0.7bb3.07df   8007              cpp          0
02:80:07:ff:ff:ff   4052   00e0.7bb3.07df   8007              cpp          0
00:e0:7b:bc:23:df   4051   00e0.7bbc.23df   8004              3/28         10
02:80:04:ff:ff:ff   4051   00e0.7bbc.23df   8004              3/28         10
00:e0:7b:bc:23:df   4052   00e0.7bbc.23df   8004              3/28         10
02:80:04:ff:ff:ff   4052   00e0.7bbc.23df   8004              3/28         10
02:40:02:ff:ff:ff   4051   a012.90d3.ec65   4002              3/27         30
a0:12:90:d3:ec:65   4051   a012.90d3.ec65   4002              3/27         30
a0:12:90:d3:ec:66   4051   a012.90d3.ec65   4002              3/27         30
```

a0:12:90:d3:ec:65	4052	a012.90d3.ec65	4002	3/28	30
a0:12:90:d3:ec:66	4052	a012.90d3.ec65	4002	3/28	30
a0:12:90:d3:ec:66	4051	d4ea.0e10.e465	4001	3/27	30
d4:ea:0e:10:e4:65	4051	d4ea.0e10.e465	4001	3/27	30
02:40:01:ff:ff:ff	4052	d4ea.0e10.e465	4001	3/28	30
a0:12:90:d3:ec:66	4052	d4ea.0e10.e465	4001	3/28	30
d4:ea:0e:10:e4:65	4052	d4ea.0e10.e465	4001	3/28	30
02:80:05:ff:ff:ff	4051	b0ad.aa47.0884	8005	3/27	20
00:24:43:b4:e3:df	4051	0024.43b4.e3df	8005	3/27	20
00:1e:1f:48:f3:e0	4051	0024.43b4.e3df	8005	3/27	20
00:24:43:b4:e3:df	4052	0024.43b4.e3df	8005	3/27	20
00:1e:1f:48:f3:e0	4052	0024.43b4.e3df	8005	3/27	20
02:80:06:ff:ff:ff	3052	e45d.523c.4884	8006	3/28	20
00:1e:1f:48:f3:e0	4051	001e.1f48.f3df	8006	3/28	20
00:1e:1f:48:f3:df	4051	001e.1f48.f3df	8006	3/28	20
00:1e:1f:48:f3:e0	4052	001e.1f48.f3df	8006	3/28	20
00:1e:1f:48:f3:df	4052	001e.1f48.f3df	8006	3/28	20
fc:a8:41:f6:37:df	4051	fca8.41f6.37df	7001	3/27	220
3c:b1:5b:ff:5f:e0	4052	fca8.41f6.37df	7001	3/28	220
fc:a8:41:f6:37:df	4052	fca8.41f6.37df	7001	3/28	220
3c:b1:5b:ff:5f:df	4051	3cb1.5bff.5fdf	7002	3/27	237
3c:b1:5b:ff:5f:e0	4051	3cb1.5bff.5fdf	7002	3/27	237
3c:b1:5b:ff:5f:df	4052	3cb1.5bff.5fdf	7002	3/28	237
70:30:18:23:7f:df	4051	7030.1823.7fdf	7003	3/28	30
70:30:18:23:7f:df	4052	7030.1823.7fdf	7003	3/28	30
70:30:18:23:9b:df	4051	7030.1823.9bdf	7004	3/28	40
70:30:18:23:9b:df	4052	7030.1823.9bdf	7004	3/28	40
02:90:01:ff:ff:ff	4051	d4ea.0efd.e3df	9001	3/27	20
d4:ea:0e:fd:e3:df	4051	d4ea.0efd.e3df	9001	3/27	20
d4:ea:0e:fd:e3:e0	4051	d4ea.0efd.e3df	9001	3/27	20
02:90:01:ff:ff:ff	4052	d4ea.0efd.e3df	9001	3/27	20
d4:ea:0e:fd:e3:df	4052	d4ea.0efd.e3df	9001	3/27	20
d4:ea:0e:fd:e3:e0	4052	d4ea.0efd.e3df	9001	3/27	20
02:90:02:ff:ff:ff	4051	d4ea.0efd.e4ac	9002	3/28	20
d4:ea:0e:fd:e3:e0	4051	d4ea.0efd.e4ac	9002	3/28	20
d4:ea:0e:fd:e4:ac	4051	d4ea.0efd.e4ac	9002	3/28	20
02:90:02:ff:ff:ff	4052	d4ea.0efd.e4ac	9002	3/28	20
d4:ea:0e:fd:e3:e0	4052	d4ea.0efd.e4ac	9002	3/28	20
d4:ea:0e:fd:e4:ac	4052	d4ea.0efd.e4ac	9002	3/28	20

On each switch, verify the following:

Option	Verify
IS-IS SPB	

B-VID PRIMARY VLAN	The B-VLAN is displayed should be ***4051*** and ***4052*** where the primary B-VLAN should be ***4051***
NICK NAME	The value displayed should be as follows per this configuration example: • 4001: ***0.40.01*** • 4001: ***0.40.02*** • 7001: ***0.70.01*** • 7002: ***0.70.02*** • 7003: ***0.70.03*** • 7004: ***0.70.04*** • 9001: ***0.90.01*** • 9002: ***0.90.02*** • 8003: ***0.80.03*** • 8004: ***0.80.04*** • 8005: ***0.80.05*** • 8006: ***0.80.06*** • 8007: ***0.80.07***
SPB Unicast FIB	
FIB ENTRY	For each host, there should be a destination forwarding entry via both B-VLANs. Note that the default metric is 10 for all links.

17.1.3.4 Verify IS-IS Link-State Database

Step 1 – Show IS-IS LSDB

```
show isis lsdb
```

Results: From switches 4001 and 9001

4001:

```
================================================================================
                                ISIS LSDB
================================================================================
LSP ID                    LEVEL     LIFETIME  SEQNUM     CHKSUM     HOST-NAME
--------------------------------------------------------------------------------
0080.2dbe.23df.00-00      1         748       0x1545     0xbc63     8003
00e0.7bbc.23df.00-00      1         1068      0x1191     0xbc2      8004
0024.43b4.e3df.00-00      1         978       0xae9      0x8e34     8005
001e.1f48.f3df.00-00      1         930       0x1555     0x90c3     8006
00e0.7bb3.07df.00-00      1         1090      0x23c      0x1dcb     8007
d4ea.0e10.e465.00-00      1         1175      0x144a     0xabc      4001
d4ea.0e10.e465.00-01      1         1175      0x11d9     0x7421     4001
d4ea.0e10.e465.00-02      1         1175      0x1085     0x9890     4001
```

```
d4ea.0e10.e465.00-03          1         1175      0xafd       0xa41     4001
a012.90d3.ec65.00-00          1         355       0x11f8      0xfb1c    4002
a012.90d3.ec65.00-01          1         355       0x11cd      0xb1ec    4002
a012.90d3.ec65.00-02          1         355       0x1073      0xb77f    4002
a012.90d3.ec65.00-03          1         355       0xaf6       0x3619    4002
fca8.41f6.37df.00-00          1         945       0x76c       0x68d7    7001
3cb1.5bff.5fdf.00-00          1         1072      0x1d1f      0xfaff    7002
7030.1823.7fdf.00-00          1         1168      0x1d1c      0x89ae    7003
7030.1823.9bdf.00-00          1         335       0x1d1b      0xf8a3    7004
d4ea.0efd.e3df.00-00          1         647       0xc1        0x3177    9001
d4ea.0efd.e4ac.00-00          1         650       0xbd        0x9a1a    9002
--------------------------------------------------------------------------------
Level-1 : 19 out of 19 Total Num of LSP Entries
Level-2 : 0 out of 0 Total Num of LSP Entries
--------------------------------------------------------------------------------
```

9001:

```
================================================================================
                                  ISIS LSDB
================================================================================
LSP ID                        LEVEL     LIFETIME  SEQNUM      CHKSUM    HOST-NAME
--------------------------------------------------------------------------------
0080.2dbe.23df.00-00          1         832       0x1545      0xbc63    8003
00e0.7bbc.23df.00-00          1         1142      0x1191      0xbc2     8004
0024.43b4.e3df.00-00          1         1056      0xae9       0x8e34    8005
001e.1f48.f3df.00-00          1         1009      0x1555      0x90c3    8006
00e0.7bb3.07df.00-00          1         1165      0x23c       0x1dcb    8007
d4ea.0e10.e465.00-00          1         371       0x1449      0xcbb     4001
d4ea.0e10.e465.00-01          1         371       0x11d8      0x7620    4001
d4ea.0e10.e465.00-02          1         371       0x1084      0x9a8f    4001
d4ea.0e10.e465.00-03          1         371       0xafc       0xc40     4001
a012.90d3.ec65.00-00          1         451       0x11f8      0xfb1c    4002
a012.90d3.ec65.00-01          1         451       0x11cd      0xb1ec    4002
a012.90d3.ec65.00-02          1         451       0x1073      0xb77f    4002
a012.90d3.ec65.00-03          1         451       0xaf6       0x3619    4002
fca8.41f6.37df.00-00          1         1024      0x76c       0x68d7    7001
3cb1.5bff.5fdf.00-00          1         1147      0x1d1f      0xfaff    7002
7030.1823.7fdf.00-00          1         357       0x1d1b      0x8bad    7003
7030.1823.9bdf.00-00          1         431       0x1d1b      0xf8a3    7004
d4ea.0efd.e3df.00-00          1         736       0xc1        0x3177    9001
d4ea.0efd.e4ac.00-00          1         737       0xbd        0x9a1a    9002
```

```
--------------------------------------------------------------------------------
Level-1 : 19 out of 19 Total Num of LSP Entries
Level-2 : 0 out of 0 Total Num of LSP Entries
--------------------------------------------------------------------------------
```

On each switch, verify the following:

Option	Verify
LSP ID HOST-NAME	For each switch, the LSDB table should have a LSP ID entry for each neighbor including its own LSP ID for a total of seven entries

17.1.3.5 Verify IS-IS LSP Details

Step 1 – Show IS-IS LSDB details

show isis lsdb ?

```
  detail  show isis lsdb detailed information
  level   show isis lsdb information by level
  local   show isis local lsdb information
  lspid   show isis lsdb information by lspid
  sysid   show isis lsdb information by system-id
  tlv     show isis lsdb by tlv type
  <cr>
```

show isis lsdb tlv ?

```
   <1-186>  Enter tlv type: 1(Area Addresses), 3(End System Neighbors), 5(Prefix
            Neighbors), 22(TE Neighbors), 128(IP Addresses), 129(Protocol
            Supported), 135(TE IP Reachability), 137(Host Name), 144(Multi
            Topology), 180(SPBM Instance), 183(ISID), 184(IPVPN
            Reachability),185(IPVPN Multicast), 186 (IPMC Multicast)
```

Results: From 4001

4001: Example showing SPB Host names

```
4001:1#show isis lsdb tlv 137 detail

================================================================================
                              ISIS LSDB (DETAIL)
================================================================================
--------------------------------------------------------------------------------

Level-1 LspID: 0080.2dbe.23df.00-00     SeqNum: 0x00001546      Lifetime:    604
        Chksum: 0xba64  PDU Length: 225
        Host_name: 8003
        Attributes:     IS-Type 1
TLV:137 Host_name: 8003


Level-1 LspID: 00e0.7bbc.23df.00-00     SeqNum: 0x00001192      Lifetime:    924
        Chksum: 0x9c3   PDU Length: 173
```

```
        Host_name: 8004
        Attributes:     IS-Type 1
TLV:137 Host_name: 8004


Level-1 LspID: 0024.43b4.e3df.00-00     SeqNum: 0x00000aea      Lifetime:   834
        Chksum: 0x8c35  PDU Length: 841
        Host_name: 8005
        Attributes:     IS-Type 1
TLV:137 Host_name: 8005


Level-1 LspID: 001e.1f48.f3df.00-00     SeqNum: 0x00001556      Lifetime:   788
        Chksum: 0x8ec4  PDU Length: 818
        Host_name: 8006
        Attributes:     IS-Type 1
TLV:137 Host_name: 8006


Level-1 LspID: 00e0.7bb3.07df.00-00     SeqNum: 0x0000023d      Lifetime:   949
        Chksum: 0x1bcc  PDU Length: 466
        Host_name: 8007
        Attributes:     IS-Type 1
TLV:137 Host_name: 8007


Level-1 LspID: d4ea.0e10.e465.00-00     SeqNum: 0x0000144b      Lifetime:  1005
        Chksum: 0x8bd   PDU Length: 124
        Host_name: 4001
        Attributes:     IS-Type 1
TLV:137 Host_name: 4001


Level-1 LspID: a012.90d3.ec65.00-00     SeqNum: 0x000011fa      Lifetime:  1085
        Chksum: 0xf71e  PDU Length: 124
        Host_name: 4002
        Attributes:     IS-Type 1
TLV:137 Host_name: 4002
```

```
Level-1 LspID: fca8.41f6.37df.00-00     SeqNum: 0x0000076d      Lifetime:   784
        Chksum: 0x66d8  PDU Length: 124
        Host_name: 7001
        Attributes:     IS-Type 1
TLV:137 Host_name: 7001

Level-1 LspID: 3cb1.5bff.5fdf.00-00     SeqNum: 0x00001d20      Lifetime:   911
        Chksum: 0xf801  PDU Length: 195
        Host_name: 7002
        Attributes:     IS-Type 1
TLV:137 Host_name: 7002

Level-1 LspID: 7030.1823.7fdf.00-00     SeqNum: 0x00001d1d      Lifetime:  1007
        Chksum: 0x87af  PDU Length: 179
        Host_name: 7003
        Attributes:     IS-Type 1
TLV:137 Host_name: 7003

Level-1 LspID: 7030.1823.9bdf.00-00     SeqNum: 0x00001d1d      Lifetime:  1082
        Chksum: 0xf4a5  PDU Length: 176
        Host_name: 7004
        Attributes:     IS-Type 1
TLV:137 Host_name: 7004

Level-1 LspID: d4ea.0efd.e3df.00-00     SeqNum: 0x000000c2      Lifetime:   506
        Chksum: 0x2f78  PDU Length: 829
        Host_name: 9001
        Attributes:     IS-Type 1
TLV:137 Host_name: 9001

Level-1 LspID: d4ea.0efd.e4ac.00-00     SeqNum: 0x000000be      Lifetime:   508
        Chksum: 0x981b  PDU Length: 796
        Host_name: 9002
```

```
        Attributes:     IS-Type 1
TLV:137 Host_name: 9002
```

4001: Example, to view ISIS adjacencies in reference to SPB bridge 9001

```
4001:1#show isis lsdb lspid d4ea.0efd.e3df.00-00 tlv 22 detail

================================================================================
                              ISIS LSDB (DETAIL)
================================================================================
--------------------------------------------------------------------------------

Level-1 LspID: d4ea.0efd.e3df.00-00     SeqNum: 0x000000c2      Lifetime:   773
        Chksum: 0x2f78  PDU Length: 829
        Host_name: 9001
        Attributes:     IS-Type 1
TLV:22  Extended IS reachability:
        Adjacencies: 4
        TE Neighbors: 4
                0080.2dbe.23df.00 (8003)        Metric:10
                        SPBM Sub TLV:
                                port id: 194 num_port 1
                                Metric: 10
                d4ea.0efd.e4ac.00 (9002)        Metric:10
                        SPBM Sub TLV:
                                port id: 6144 num_port 1
                                Metric: 10
                a012.90d3.ec65.00 (4002)        Metric:10
                        SPBM Sub TLV:

                                port id: 220 num_port 1
                                Metric: 10
                d4ea.0e10.e465.00 (4001)        Metric:10
                        SPBM Sub TLV:
                                port id: 6151 num_port 1
                                Metric: 10
```

17.1.3.6 Verify CFM Configuration

Step 1 – Verify CFM Maintenance Domain

```
show cfm maintenance-domain
```

Results: The following is shown from 8003 perspective which should be the same on all switches

4001:

```
================================================================================
                          Maintenance Domain
================================================================================
Domain Name              Domain Index    Level Domain Type
--------------------------------------------------------------------------------
spbm                     1               4     NODAL

 Total number of Maintenance Domain entries: 1.
```

Step 2 – Verify CFM Maintenance Association Configuration and Status

```
show cfm maintenance-association
```

Results: The following is shown from 4001 perspective which should be the same on all switches

4001:

```
================================================================================
                        Maintenance Association Status
================================================================================
Domain Name             Assn Name               Domain Idx  Assn Idx
--------------------------------------------------------------------------------
spbm                    4051                    1           1
spbm                    4052                    1           2

 Total number of Maintenance Association entries: 2.

================================================================================
                        Maintenance Association config
================================================================================
Domain Name             Assn Name
--------------------------------------------------------------------------------
spbm                    4051
spbm                    4052

 Total number of MA entries: 2.
```

Step 3 – Verify CFM Maintenance Endpoint Configuration and Status

```
show cfm maintenance-endpoint
```

Results: The following is shown from 8003 perspective; the information should be the same on all switches except for the MEP ID (1 for 9001, 2 for 9002, 3 for 8003, 4 for 8004, 5 for 8005, 6 for 8006, 7 for 8007)

4001:

```
================================================================================
                        Maintenance Endpoint Config
================================================================================
DOMAIN                  ASSOCIATION             MEP  ADMIN
NAME                    NAME                    ID
--------------------------------------------------------------------------------
spbm                    4051                    401   enable
spbm                    4052                    401   enable
 Total number of MEP entries: 2.
================================================================================
                        Maintenance Endpoint Service
================================================================================
DOMAIN_NAME             ASSN_NAME               MEP_ID TYPE    SERVICE_DESCRIPTION
--------------------------------------------------------------------------------
spbm                    4051                    401     nodal   Vlan 4051, Level 4
spbm                    4052                    401     nodal   Vlan 4052, Level 4

 Total number of MEP entries: 2.
```

On 4001 as used in this example, verify the following information:

Option	Verify
DOMAIN NAME	Should be displayed with a name of ***spbm*** as configured in this example
Assn Name ASSOCIATION NAME	Should be displayed with a name of ***4051*** and ***4052*** as configured in this example
SERVICE_DESCRIPTION	Should be displayed as ***Vlan 4051 & Vlan 4052, Level 4*** if CFM is operational and configured correctly where Level 4 is the default CFM level

17.1.3.7 Use CFM Command to verify operations

Step 1 – Use L2 ping command to verify network connectivity to neighbors. The neighbor format is BVID.Remote Router Name for CLI

```
l2 ping vlan <vlan id> routernodename <Router Node Name>
```

Results: The following is shown from 9001 perspective pinging switch 4001

4001:

```
4001:1#l2 ping vlan 4051 routernodename 8007

 Please wait for l2ping to complete or press any key to abort

----00:e0:7b:b3:07:df    L2 PING Statistics----  0(64) bytes of data
1 packets transmitted, 1 packets received,   0.00% packet loss
  round-trip (us)        min/max/ave/stdv =  4479/4479/4479.00/ 0.00

4001:1#l2 ping vlan 4052 routernodename 8007

 Please wait for l2ping to complete or press any key to abort

----00:e0:7b:b3:07:df    L2 PING Statistics----  0(64) bytes of data
1 packets transmitted, 1 packets received,   0.00% packet loss
  round-trip (us)        min/max/ave/stdv =  2996/2996/2996.00/ 0.00
```

Step 2 – Use L2 traceroute command to verify network route to neighbors

```
l2 traceroute vlan <vlan id> routernodename <Router Node Name>
```

Results: The following is shown from 4001 perspective to switch 7001

4001:

```
4001:1#l2 traceroute vlan 4051 routernodename 7001

 Please wait for l2traceroute to complete or press any key to abort

l2traceroute to 7001  (3c:b1:5b:ff:5f:e0),  vlan 4051
0    4001                (d4:ea:0e:10:e4:65)
1    9001                (d4:ea:0e:fd:e3:df)
2    8003                (00:80:2d:be:23:df)
3    8005                (00:24:43:b4:e3:df)
4    7001                (3c:b1:5b:ff:5f:e0)
```

Step 3 – Use L2 traceroute command to verify network route to neighbors; for example, diverse route to a SMLT virtual B-MAC

```
l2 traceroute vlan <vlan id> mac <Mac>
```

Results: The following is shown from 4001 perspective to SMLT virtual B-MAC of SMLT cluster 8005 & 8006

4001:

```
4001:1#l2 traceroute vlan 4051 mac 00:1e:1f:48:f3:e0
 Please wait for l2traceroute to complete or press any key to abort
l2traceroute to   (00:1e:1f:48:f3:e0),  vlan 4051
0    4001                (d4:ea:0e:10:e4:65)
1    9001                (d4:ea:0e:fd:e3:df)
2    8003                (00:80:2d:be:23:df)
3    8005                (00:24:43:b4:e3:df)

4001:1#l2 traceroute vlan 4052 mac 00:1e:1f:48:f3:e0
 Please wait for l2traceroute to complete or press any key to abort
l2traceroute to   (00:1e:1f:48:f3:e0),  vlan 4052
0    4001                (d4:ea:0e:10:e4:65)
1    9002                (d4:ea:0e:fd:e4:ac )
2    8004                (00:e0:7b:bc:23:df)
3    8006                (00:1e:1f:48:f3:df)
```

Verify the following information:

Option	Verify
L2 PING Statistics	If everything has been configured correctly and during normal operations, the packets received should display ***0.00% packet loss***
LBMs lost	If everything has been configured correctly and during normal operations, the LBMs loss should display ***0.00%***

17.1.3.8 Verify vIST

Step 1 – Verify the vIST is up and running

show virtual-ist

Results:

4001:

```
================================================================================
                                  IST Info
================================================================================
PEER-IP              VLAN     ENABLE    IST
ADDRESS              ID       IST       STATUS
--------------------------------------------------------------------------------
10.4.2.2             2        true      up


NEGOTIATED                                  MASTER/
DIALECT      IST STATE                      SLAVE
--------------------------------------------------------------------------------
v4.0         Up                             Slave
```

Step 2 – Verify the vIST statistics

show virtual-ist stat

Results:


4001:

```
================================================================================
                           IST Message Statistics
================================================================================
PROTOCOL MESSAGE            COUNT
```

```
--------------------------------------------------------------------------------

Ist Down                 :  5
Hello Sent               :  94208
Hello Recv               :  94099
Learn MAC Address Sent   :  10663
Learn MAC Address Recv   :  4596
MAC Address AgeOut Sent  :  1286
MAC Address AgeOut Recv  :  248
MAC Address Expired Sent :  0
MAC Address Expired Recv :  0
Delete Mac Address Sent  :  2
Delete Mac Address Recv  :  0
Smlt Down Sent           :  0
Smlt Down Recv           :  1
Smlt Up Sent             :  8
Smlt Up Recv             :  6
Send MAC Address Sent    :  4
Send MAC Address Recv    :  4
IGMP Sent                :  3
IGMP Recv                :  0
Port Down Sent           :  0
Port Down Recv           :  0
Request MAC Table Sent   :  4
Request MAC Table Recv   :  5
Unknown Msg Type Recv    :  0
Mlt Table Sync Req Sent  :  0
Mlt Table Sync Req Recv  :  0
Mlt Table Sync Sent      :  4
Mlt Table Sync Recv      :  4
Port Update Sent         :  0
Port Update Recv         :  0
Entry Update Sent        :  0
Entry Update Recv        :  0
Dialect Negotiate Sent   :  6
Dialect Negotiate Recv   :  4
Update Response Sent     :  0
Update Response Recv     :  0
Transaction Que HiWaterM :  0
Poll Count Hi Water Mark :  61
```

17.2 SMLT Configuration

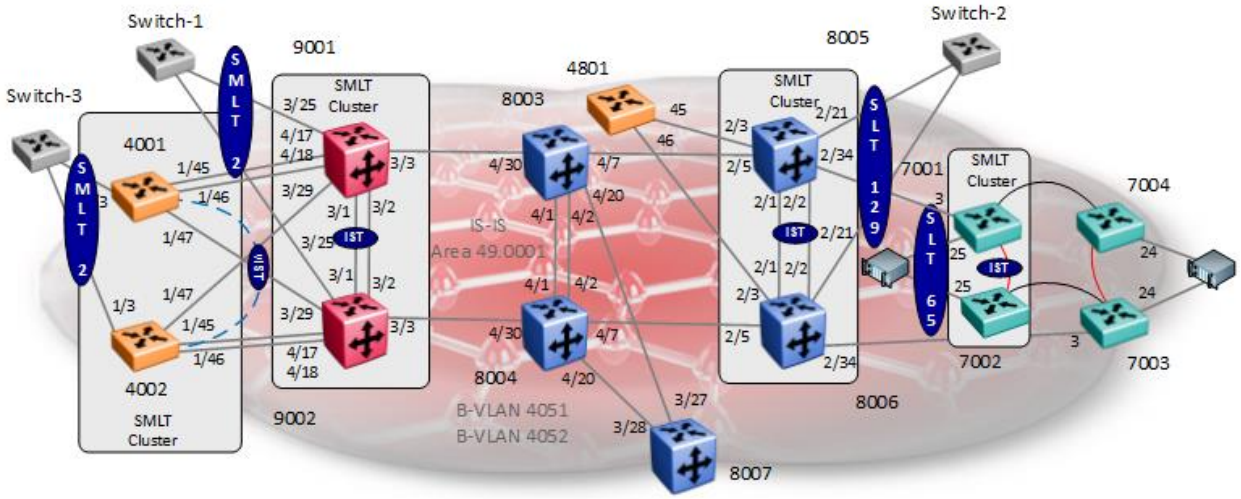

Assuming the edge switches are Avaya stackable switches, we will also enable VLACP, VLAN tagging, SLPP, and untagged frames discard as per the SMLT best practices. For this example, we will create SMLT id 2 on the SMLT cluster 9001 & 9002, SMLT id 2 on the SMLT cluster 4001 & 4001, SLT 129 on the SMLT cluster 8005 & 8006, and SLT 65 on the SMLT cluster 7001 & 7002.

4001 & 4002 SMLT Cluster Switches – SMLT on port 1/3

4001 & 4002: Same configuration on both switches

```
4001:1(config)#mlt 2 enable
4001:1(config)#mlt 2 member 1/3
4001:1(config)#mlt 2 encapsulation dot1q
4001:1(config)#interface mlt
4001:1(config-mlt)#smlt
4001:1(config-mlt)#exit
4001:1(config)#vlan members remove 1 1/3
4001:1(config)#interface gigabitEthernet 1/3
4001:1(config-if)#no shutdown
```

As per SMLT best practices, we will also enable VLACP, untagged frames discard, and SLPP. Note that VLACP will have to also be enabled on Switch-3.

```
4001:1(config)#interface GigabitEthernet 1/3
4001:1(config-if)#untagged-frames-discard
4001:1(config-if)#vlacp fast-periodic-time 500 timeout short timeout-scale 5
funcmac-addr 01:80:c2:00:00:0f
4001:1(config-if)#vlacp enable
4001:1(config-if)#slpp
```

```
4001:1(config-if)#slpp packet-rx packet-rx-threshold 5
4001:1(config-if)#exit
4001:1(config)#slpp enable
4001:1(config)#slpp vid 1155
```

For 4002, use the same configuration as above except for the items shown below

---

```
4002:1(config-if)#slpp packet-rx packet-rx-threshold 50
```

8005 & 8006 SMLT Cluster Switches – SLT on port 2/21 using SLT id 129

8005 & 8006: Same configuration on both switches

```
8005:5(config)#interface GigabitEthernet 2/21
8005:5(config-if)#encapsulation dot1q
8005:5(config-if)#smlt 129
8005:5(config-if)#exit
8005:5(config)#vlan members remove 1 2/21
```

As per SMLT best practices, we will also enable VLACP, untagged frames discard, and SLPP. Note that VLACP will have to also be enabled on Switch-2.

```
8005:5(config)#interface GigabitEthernet 2/21
8005:5(config-if)#untagged-frames-discard
8005:5(config-if)#vlacp fast-periodic-time 500 timeout short timeout-scale 5
funcmac-addr 01:80:c2:00:00:0f
8005:5(config-if)#vlacp enable
8005:5(config-if)#slpp
8005:5(config-if)#slpp packet-rx packet-rx-threshold 5
8005:5(config-if)#exit
8005:5(config)#slpp enable
8005:5(config)#slpp vid 2256
```

For 8006, use the same configuration as above except for the items shown below

---

```
8006:5(config-if)#slpp packet-rx packet-rx-threshold 50
```

9001 & 9002 SMLT Cluster Switches – SMLT on port 3/25

9001 & 9002: Same configuration on both switches

```
9001:1(config)#mlt 2 enable
9001:1(config)#mlt 2 member 3/25
9001:1(config)#mlt 2 encapsulation dot1q
9001:1(config-mlt)#interface mlt 2
9001:1(config-mlt)#smlt
9001:1(config-mlt)#exit
9001:1(config)#vlan members remove 1 3/25
9001:1(config)#interface gigabitEthernet 3/25
9001:1(config-if)#no shutdown
```

As per SMLT best practices, we will also enable VLACP, untagged frames discard, and SLPP. Note that VLACP will have to also be enabled on Switch-1.

```
9001:1(config)#interface gigabitEthernet 3/25
9001:1(config)#untagged-frames-discard
9001:1(config)#slpp packet-rx
9001:1(config-if)#vlacp fast-periodic-time 500 timeout short timeout-scale 5 funcmac-addr 01:80:c2:00:00:0f
9001:1(config-if)#vlacp enable
9001:1(config-if)#exit
9001:1(config)#slpp enable
9001:1(config)#slpp vid 1155
```

For 9002, use the same configuration as above except for the items shown below

---

```
9002:1(config-if)#slpp packet-rx packet-rx-threshold 50
```

7001 & 7002 SMLT Cluster Switches - SLT on port 25 using SLT id 65 assuming the server uses an tagged port

7001 & 7002: Same configuration on both switches

```
7001(config)#vlan ports 25 tag tagall
7001(config)#vlan configcontrol automatic
7001(config)#vlan members remove 1 25
7001(config)#interface ethernet 25
7001(config-if)#smlt 65
7001(config-if)#exit
```

17.2.1 Verify Operations

Assuming a local VLAN have been provisioned on the SMLT cluster switches and also on the edge switch or server (next step for example via the L2VSN configuration), the SMLT state should be up and operational.

17.2.1.1 Verify SMLT

Step 1 – Show SMLT state

```
show smlt mlt
show smlt gigabitethernet (on ERS 8000 to display SLT)
show smlt ethernet (on VSP 7000 to display SLT)
```

EDM

```
Configuration -> IS-IS -> SPBM -> I-SID
```

Results:

4001: (4002 will be the same)

```
================================================================================
                                Mlt SMLT Info
================================================================================
MLT    ADMIN     CURRENT
ID     TYPE      TYPE
--------------------------------------------------------------------------------
2      smlt      smlt
```

9001: (9002 will be the same)

```
================================================================================
                                Mlt SMLT Info
================================================================================
MLT    ADMIN     CURRENT
ID     TYPE      TYPE
--------------------------------------------------------------------------------
2      smlt      smlt
```

8005: (8006 will be the same)

```
================================================================================
                                  SMLT Info
================================================================================
PORT   SMLT      ADMIN     CURRENT
NUM    ID        TYPE      TYPE
```

```
--------------------------------------------------------------------------------
2/21  129       smlt      smlt
```


7001: (7002 will be the same)

```
================================================================================
                                        SLT Info
================================================================================
PORT   SMLT      ADMIN     CURRENT
NUM    ID        TYPE      TYPE
--------------------------------------------------------------------------------
25       65       slt      slt
```

On each switch, verify the following:

Option	Verify
CURRENT TYPE	Depending on the switch, either ***SMLT*** or ***SLT*** should be displayed indicating that the local VLAN, port members, and SMLT ID are configured on both switches and the correct VLAN and ports are also configured on the edge switch

17.3 SPB L2 VSN Configuration

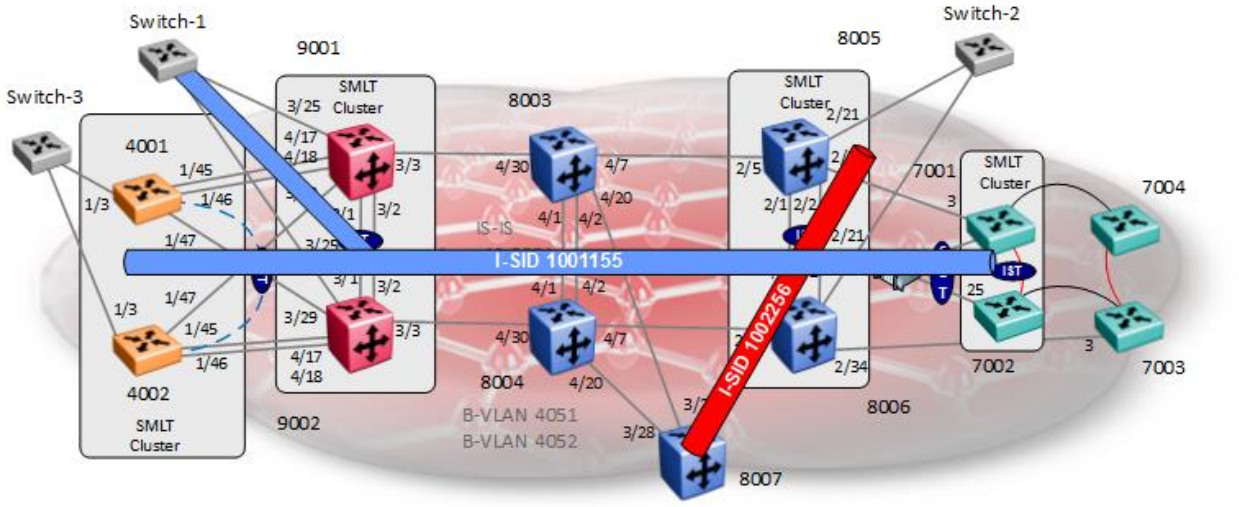

For this example, we will configure the following:

- L2 VSN VLANs
  - VLAN ID = 1155 configured on SMLT cluster switches 4001 & 4002, 9001 & 9002, and 7001 & 7002 using I-SID = 1001155
    - The L2VSN is provisioned on SMLT cluster switches 9001 & 9002 for edge switch Switch-1
    - The L2VSN is provisioned on SMLT cluster switches 4001 & 4002 for edge switch Switch-3
    - The L2VSN is provisioned on SMLT cluster switches 7001 & 7002 for edge server
  - VLAN ID = 2256 configured on switches 8005, 8006 and 8007 using I-SID = 1002256
    - The L2VSN is provisioned on SMLT cluster switches 8005 & 8006 for edge switch Switch-2

This example is a continuation from the base setup used in Section 17.1 and 17.2 for the SMLT configuration.

17.3.1 VLAN configuration

4001 & 4002 SMLT Cluster Switches

4001 & 4002: Same configuration on both switches

```
4001:1(config)#vlan create 1155 type port-mstprstp 0
4001:1(config)#vlan mlt 1155 2
```

8005 & 8006 SMLT Cluster Switches

8005 & 8006: Same configuration on both switches

```
8005:5(config)#vlan create 2256 name VSN-Red type port-mstprstp 0
8005:5(config)#vlan members add 2256 2/21
```

8007

```
8007:5(config)#vlan create 2256 name VSN-Red type port-mstprstp 0
8007:5(config)#vlan ports 4/25 tagging tagall
8007:5(config)#vlan members add 2256 4/35
8007:5(config)#vlan members remove 1 4/35
```

9001 & 9002 SMLT Cluster Switches

9001 & 9002: Same configuration on both switches

```
9001:1(config)#vlan create 1155 name VSN-Blue type port-mstprstp 0
9001:1(config)#vlan mlt 1155 2
9001:1(config)#vlan mlt 1155 1
```

7001 & 7002 SMLT Cluster Switches - SLT on port 25 using SLT id 65 assuming the server uses an untagged port

7001 & 7002: Same configuration on both switches

```
7001(config)#vlan create 1155 name VSN-Blue type port
7001(config)#vlan configcontrol automatic
7001(config)#vlan members add 1155 10
```

17.3.2 Layer 2 VSN configuration

VSP 4000 Switches

4001 & 4002: Same configuration on both switches

```
4001:1(config)#vlan i-sid 1155 1001155
```

VSP 7000 Switches

7001 & 7002: Same configuration on both switches

```
7001(config)#vlan i-sid 1155 1001155
```

SMLT Cluster Switches – 8005 & 8006

8005 & 8006: Same configuration on both switches

```
8005:5(config)#vlan i-sid 2256 1002256
```

ERS 8800 Switch - 8007

```
8007:5(config)#vlan i-sid 2256 1002256
```

VSP 9000 Switches

9001 & 9002: Same configuration on 9001 and 9002

```
9001:1(config)# vlan i-sid 1155 1001155
```

17.3.2.1 Verify IS-IS I-SID

Step 1 – Show IS-IS I-SID

```
show isis spbm i-sid all
show isis spbm i-sid all <id|nick-name|vlan>
```

EDM

Configuration -> IS-IS -> SPBM -> I-SID

Results:

4001: (4002 will be the same)

```
================================================================================
                                SPBM ISID INFO
================================================================================
ISID       SOURCE NAME    VLAN    SYSID                 TYPE          HOST_NAME
--------------------------------------------------------------------------------
1001155 0.40.01         4051    d4ea.0e10.e465        config        4001
1001155 0.40.02         4052    a012.90d3.ec65        discover      4002
1001155 0.70.01         4051    fca8.41f6.37df        discover      7001
1001155 0.70.02         4052    3cb1.5bff.5fdf        discover      7002
1001155 0.90.01         4051    d4ea.0efd.e3df        discover      9001
1001155 0.90.02         4052    d4ea.0efd.e4ac        discover      9002
```

8005: (8006 will be the same)

```
================================================================================
                                SPBM ISID INFO
================================================================================
ISID    SOURCE NAME     VLAN    SYSID                 TYPE          HOST_NAME
--------------------------------------------------------------------------------
1002256    0.80.05        4051    0024.43b4.e3df        config        8005
1002256    0.80.06        4052    001e.1f48.f3df        discover      8006
1002256    0.80.07        4052    00e0.7bb3.07df        discover      8007
```

8007:

```
================================================================================
                                SPBM ISID INFO
================================================================================
ISID    SOURCE NAME     VLAN    SYSID                 TYPE          HOST_NAME
--------------------------------------------------------------------------------
1002256 0.80.05         4051    0024.43b4.e3df        discover      8005
```

```
1002256 0.80.06         4052    001e.1f48.f3df       discover     8006
1002256 0.80.07         4052    00e0.7bb3.07df       config       8007
```

On each switch, verify the following:

Option	Verify
ISID TYPE	For switches 4001, 4002, 7001, 7002, 9001, and 9002, for example, in reference to ISID ***1001155***, TYPE should show ***config*** in reference its own SYSID and ***discover*** to each neighbor. For switches 8005, 8006 and 8007, for example, in reference to ISID ***1002256***, TYPE should show ***config*** in reference its own SYSID and ***discover*** to each neighbor.

17.3.2.2 Show IS-IS LSP Details pertaining to I-SIDs provisioned

In an IS-IS network, each IS router advertises one or more IS-IS Link State Protocol Data Units (LSPs) with routing information. Within each LSP, there is a fixed header and a number of TLVs with encoded information. The following command is used to show details of a LSP in detail to a specific neighbor displaying the encoded information in the TLVs.

Step 1 – Show IS-IS I-SID

```
show isis lsdb lspid <is-is system id>.00-00 detail
show isis lsdb lspid <is-is system id>.00-00 tlv 144 sub-tlv 3 detail
```

Results: From 9001 for perspective for 7001

9001:

```
9001:1#show isis lsdb lspid fca8.41f6.37df.00-00 tlv 144 sub-tlv 3 detail
================================================================================
                              ISIS LSDB (DETAIL)
================================================================================
--------------------------------------------------------------------------------

Level-1 LspID: fca8.41f6.37df.00-00     SeqNum: 0x000007d7      Lifetime:   406
        Chksum: 0x986d  PDU Length: 160
        Host_name: 7001
        Attributes:     IS-Type 1
TLV:144 SUB-TLV 3       ISID:
                Instance: 0
                Metric: 0
                B-MAC: fc-a8-41-f6-37-df
                BVID:4051
                Number of ISID's:1
```

```
        1001155(Both)


Instance: 0
Metric: 0
B-MAC: 00-e0-7b-b3-07-df
BVID:4052

Number of ISID's:1
        1001155(Rx)
```

In reference to 7001 as used in this example from 9001, verify the following:

Option	Verify
Level 1	As this example is in reference 7001, IS-IS LDP ID of ***fca8.41f6.37df.00-00*** should be displayed with its Host Name of ***7001***.
TLV:144 Sub-tlv 3	TLV 144 sub-tlv 3 is the SPBM ISID TLV. The SPBM instance is set to ***0*** indicating only one instance is supported today. The BMAC entry is the advertising MAC address which for this example should be the BMAC of 8005 displayed as ***fc-a8-41-f6-37-df***. For BVID, VLAN IDs of ***4051*** and ***4052*** should be displayed as these are the two VLANs used in this configuration with BVID 4051 being the primary. For each BVID, I-SID ***1001155*** should be displayed

17.3.2.3 Unknown unicast or multicast/broadcast traffic

The multicast addresses are built out of two pieces. Each SPB node must be configured with a unique Nick-name that is carried in the IS-IS link state database and is used to form the first portion of the multicast MAC address (with the multicast bit set: multicast address is Nickname & “3”). The second portion is the I-SID id converted to hex forming the Multicast MAC address.

For example, in reference to 8005:

- Nickname = 0.80.05
- I-SID = 1002256 (0x0f:4b:10)
- Multicast address = 03:08:05:0f:4b:10 for I-SID 1002256

Step 1 – Display Multicast address used for unknown unicast or multicast/broadcast traffic

```
show isis spbm multicast-fib
```

EDM

```
Configuration -> IS-IS -> SPBM -> Multicast FIB
```

Results: The following is shown from 8005

```
8005:3#show isis spbm multicast-fib i-sid 1002256
================================================================================
                        SPBM MULTICAST FIB ENTRY INFO
================================================================================
MCAST DA           ISID      BVLAN  SYSID           HOST-NAME       OUTGOING-INTERFACES
--------------------------------------------------------------------------------
03:08:05:0f:4b:10  1002256   4051   0024.43b4.e3df  8005            2/5,IST,2/21
03:08:06:0f:4b:10  1002256   4052   001e.1f48.f3df  8006
03:08:07:0f:4b:10  1002256   4052   00e0.7bb3.07df  8007
```

On each switch, verify the following information:

Option	Verify
MCAST DA	Verify that the correct multicast address for each switch I-SID 10011155 • 4001: ***03:04:01:0f:46:c3*** • 9001: ***03:09:01:0f:46:c3*** • 9002: ***03:09:02:0f:46:c3*** • 7001: ***03:07:01:0f:46:c3*** • 7002: ***03:07:02:0f:46:c3*** I-SID 1002256 • 8005: ***03:08:05:0f:4b:10*** • 8006: ***03:08:06:0f:4b:10*** • 8007: ***03:08:07:0f:4b:10***

17.3.2.4 MAC Address Table

Step 1 – Display MAC address table, local or remote

ERS 8800 & VSP 9000:

```
show vlan mac-address-entry <vlan id>
show vlan mac-address-entry 2256
```

EDM

```
Configuration -> VLAN -> VLANs -> Forwarding
```

VSP 7000:

```
show mac-address-table spbm
show mac-address-table spbm i-sid <1-16777215>
```

Results: The following is shown from 4001 and 7001

```
4001:1#show vlan mac-address-entry 1155

================================================================================
                                   Vlan Fdb
================================================================================
VLAN            MAC                              SMLT
ID   STATUS     ADDRESS            INTERFACE  REMOTE TUNNEL
1155 learned    00:0c:29:35:62:a4  9001       false  7002
1155 learned    00:0c:29:9b:a8:31  9001       false  9001
1155 learned    00:0c:29:d6:81:e5  MLT-2      false  -
1155 learned    00:18:71:ea:31:bb  9001       false  7001

4001:1#show vlan remote-mac-table 1155

================================================================================
                              Vlan Remote Mac Table
================================================================================
VLAN STATUS  MAC-ADDRESS        DEST-MAC           BVLAN DEST-SYSNAME      PORTS     SMLTREMOTE
--------------------------------------------------------------------------------
1155 learned 00:0c:29:35:62:a4  3c:b1:5b:ff:5f:df  4051  7002              9001      false
1155 learned 00:0c:29:9b:a8:31  d4:ea:0e:fd:e3:df  4051  9001              9001      false
1155 learned 00:18:71:ea:31:bb  3c:b1:5b:ff:5f:e0  4051  7001              9001      false

7001#show mac-address-table spbm i-sid 1001155
Mac Address Table Aging Time: 300
```

```
Learning Enabled Ports ALL
Number of addresses: 4

MAC Address       I-SID    Source    Vid  BVid Dest-MAC          Dest-Sys-Name
----------------- -------- --------- ---- ---- ----------------- -------------
00-0C-29-35-62-A4 1001155  Trunk 31       4051 3C-B1-5B-FF-5F-DF 7002
00-0C-29-9B-A8-31 1001155  Trunk 31       4051 D4-EA-0E-FD-E3-DF 9001
00-0C-29-D6-81-E5 1001155  Trunk 31       4051 D4-EA-0E-10-E4-65 4001
00-18-71-EA-31-BB 1001155  Port 10   1155
```

In reference to each switch, verify the following information:

Option	Verify
MAC Address INTERFACE	The MAC address displayed will vary depending on the MAC address of the end-user device. The interface should display ***I-SID-1001155*** for MAC addressed from I-SID 1001155 and ***I-SID-1002256*** for MAC addressed from I-SID 1002256
DEST-MAC	For remote entries, the remote B-MAC address of the SPB switch should be shown as the remote destination MAC.

17.4 VSP 7000 & ERS 4800 – In-band Management via L2VSN

An L2VLSN can be created to provide in-band management for the VSP 7000 and ERS 4800. For example, let's assume we wish to use the 10.12.11/0/24 subnet to manage the VSP 7000 and ERS 4800. On bridges 8005 and 8006, we will enable VRRP with backup-master to provide routing to the rest of the network. We will also have to enable IP Shortcuts on both 8005 and 8006 – please see section 17.10.

Switch	Parameter	Value
L2VSN – for in-band management		
8005, 8006 7001, 7002, 7003, 7004 4801	Mgmt VLAN	101
	I-SID	1000101
8005	IP Address	10.12.11.2/24
8006	IP Address	10.12.11.3/24
7001	IP address	10.12.11.11/24
7002	IP address	10.12.11.12/24
7003	IP address	10.12.11.13/24
7004	IP address	10.12.11.14/24
4801	IP address	10.12.11.15/24
IP Configuration – 8005 and 8006		
8005 8006	VRRP ID	11
	VRRP VIP	10.12.11.1
	Backup Master	Enable
8005	VRRP Priority	150

Please note, for the VSP 7000, if you also use the out-of-management management interface, you cannot have two default gateways – that is one for the in-band and another for the out-of-band management interfaces. If you also use the out-of-band management interface, please use static routes and use a default route on the in-band interface.

VSP 7000: Add in-band L2VSN and IP address

```
7001(config)#vlan create 101 name mgmt-101 type port
7001(config)#vlan mgmt 101
7001(config)#ip address 10.12.11.11 netmask 255.255.255.0 default-gateway 10.12.11.1
7001(config)#vlan i-sid 101 1000101
```

For switches 7002, 7003, and 7004, use the same configuration as above except for the items shown below

---

```
7002(config)#ip address 10.12.11.12 netmask 255.255.255.0 default-gateway 10.12.11.1
```

```
7003(config)#ip address 10.12.11.13 netmask 255.255.255.0 default-gateway 10.12.11.1
```

```
7004(config)#ip address 10.12.11.14 netmask 255.255.255.0 default-gateway 10.12.11.1
```

```
7004(config)#show ip
Bootp/DHCP Mode: Disabled
                          Configured        In Use        Last BootP/DHCP
                        --------------- --------------- --------------------
Stack IP Address:       0.0.0.0                         0.0.0.0
Switch IP Address:      10.12.11.14     10.12.11.14     0.0.0.0
Switch Subnet Mask:     255.255.255.0   255.255.255.0   0.0.0.0
Mgmt Stack IP Address:  0.0.0.0
Mgmt Switch IP Address: 10.136.56.54    10.136.56.54
Mgmt Subnet Mask:       255.255.255.0   255.255.255.0
Mgmt Def Gateway:       0.0.0.0
Default Gateway:        10.12.11.1      10.12.11.1      0.0.0.0
```

ERS 4800: Add in-band L2VSN and IP address

```
4801(config)#vlan create 101 name mgmt-101 type port
4801(config)#vlan mgmt 101
4801(config)#ip address 10.12.11.15 netmask 255.255.255.0 default-gateway 10.12.11.1
4801(config)#vlan i-sid 101 1000101
```

```
4801(config)#show ip
Bootp/DHCP Mode: Disabled

                          Configured        In Use        Last BootP/DHCP
                         --------------- --------------- --------------------
Stack IP Address:        0.0.0.0                         0.0.0.0
Switch IP Address:       10.12.11.15     10.12.11.15     0.0.0.0
Switch Subnet Mask:      255.255.255.0   255.255.255.0   0.0.0.0
Default Gateway:         10.12.11.1      10.12.11.1      0.0.0.0
```

8005 & 8006: Add in-band L2VSN and IP address


```
8005:5(config)#vlan create 101 type port-mstprstp 0
8005:5(config)#vlan i-sid 101 1000101
8005:5(config)#interface Vlan 101
8005:5(config-if)#ip address 10.12.11.2 255.255.255.0
8005:5(config-if)#ip vrrp address 11 10.12.11.1
8005:5(config-if)#ip vrrp 11 backup-master enable priority 150
8005:5(config-if)#ip vrrp 11 enable
8005:5(config-if)#exit
```

For 8006, use the same configuration as above except for the items shown below

---

```
8005:5(config-if)#ip address 10.12.11.3 255.255.255.0
8005:5(config-if)#ip vrrp 11 backup-master enable
```

17.5 Multicast over L2VSN

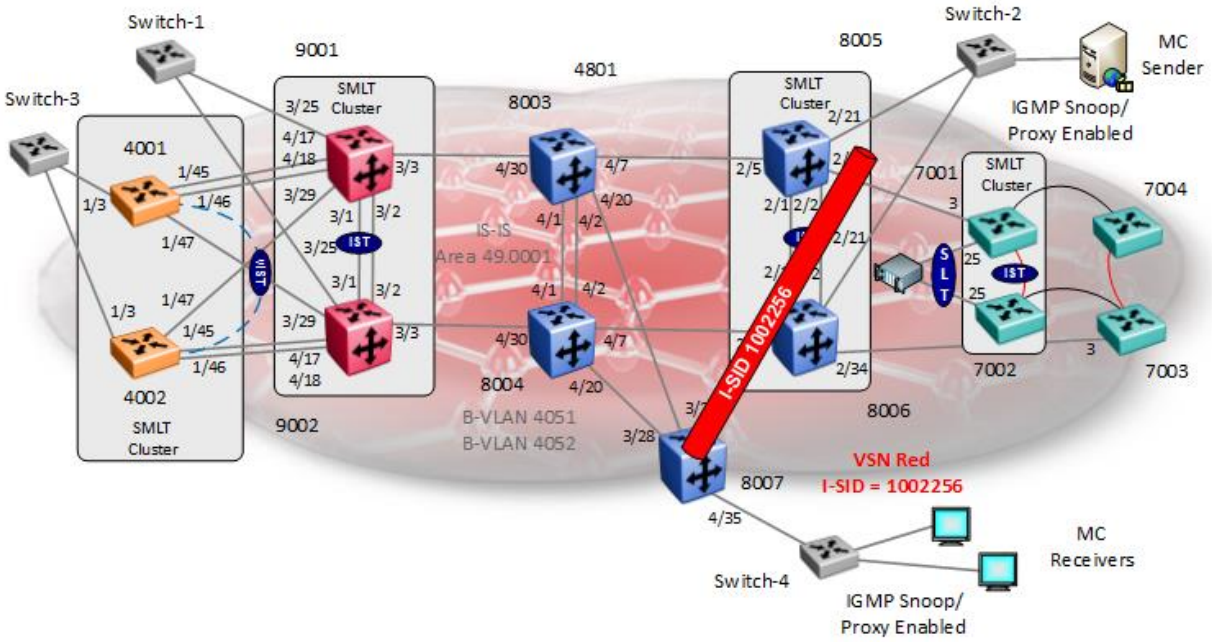

Continuing from example used in Section 17.2, we will simple enable multicast support for L2VSN i-sid 1002256.

17.5.1 Enable SPB Multicast – Global

ERS 8800 Switches

8005, 8006 & 8007: Same configuration on all switches

```
8005:5(config)#router isis
8005:5(config-isis)#spbm 1 multicast enable
8005:5(config-isis)#exit
```

17.5.2 Enable IGMP

17.5.2.1 Enable IGMPv2 at VLAN level

ERS 8800 Switches

8005 & 8006: Same configuration on both switches

```
8005:5(config)#interface vlan 2256
8005:5(config-if)#ip igmp proxy
8005:5(config-if)#ip igmp snooping
8005:5(config-if)#ip igmp snoop-querier-addr 192.168.156.1
8005:5(config-if)#exit
## If IGMPv3 is used:
8005:5(config-if)#ip igmp ssm-snoop
8005:5(config-if)#ip igmp version 3
```

8007:

```
8007:5(config)#interface vlan 2256
8007:5(config-if)#ip igmp proxy
8007:5(config-if)#ip igmp snooping
8007:5(config-if)#ip igmp snoop-querier-addr 192.168.56.1
8007:5(config-if)#exit
## If IGMPv3 is used:
8007:5(config-if)#ip igmp ssm-snoop
8007:5(config-if)#ip igmp version 3
```

Please note, if the ERS 8800 is connected to an edge switch, it may be necessary to add an IGMP query address. If you omit adding a query address, the ERS 8800 will send IGMP queries with a source address of 0.0.0.0. Depending on the edge switch model, it may not accept a query with a source address of 0.0.0.0.

17.5.2.2 Edge Switch

Assuming the edge switch is an Avaya stackable switch with the latest firmware, enable IGMP snoop and proxy.

Avaya Stackable Switches

```
ACLI
ERS-Stackable(config)#interface vlan 2256
ERS-Stackable(config-if)#ip igmp snoop
ERS-Stackable(config-if)#ip igmp proxy
## If IGMPv3 is used:
ERS-Stackable(config-if)#ip igmp version 3
```

17.5.3 Verify Operations

17.5.3.1 Global Settings

Step 1 – Verify SPB multicast is enabled

```
show isis spbm multicast
```

Results:

8007: (8005 and 8006 should be the same)

```
================================================================================
                                ISIS SPBM Info
================================================================================
SPBM        B-VID       PRIMARY     NICK      LSDB      IP        MULTICAST
INSTANCE                VLAN        NAME      TRAP
--------------------------------------------------------------------------------
1           4051-4052   4051        0.80.07   disable   enable    enable
```

Step 2 – Verify IGMP interfaces

```
show ip igmp interface
```

Results:

8007: (results from 8005 and 8006 will be same except for the querier address)

```
================================================================================
                        IGMP Interface - GlobalRouter
================================================================================
       QUERY               OPER             QUERY    WRONG             LASTMEM
IF     INTVL STATUS VERS. VERS QUERIER     MAXRSPT QUERY JOINS ROBUST QUERY MODE
--------------------------------------------------------------------------------
V2256  125    active 2     2    192.168.56.1 100     0     12    2      10    snoop-spb
```

17.5.3.2 Verify IGMP cache/group and senders

Assuming the multicast sender is using IGMPv3 (source IP 10.5.41.20@232.2.2.2) connect to Switch-2 off SPB bridges 8005 & 8006 with a receiver (10.5.41.10) connected to Switch-3 off SPB bridges 8007.

Step 1 – Verify SPB multicast is enabled

```
show ip igmp cache
show ip igmp group
```

Results:

8007:

```
8007:3#show ip igmp cache
================================================================================
                          IGMP Cache - GlobalRouter
================================================================================
GRPADDR         INTERFACE  LASTREPORTER    EXPIRYTIME        VERSION1HOSTTIMER  TYPE
STATICP
ORTS
--------------------------------------------------------------------------------
232.2.2.2       Vlan2256   10.7.30.5       0day,00h:04m:08s  0day,00h:00m:00s   DYNAMIC NULL

8007:3#show ip igmp group
================================================================================
                          IGMP Group - GlobalRouter
================================================================================
GRPADDR         INPORT          MEMBER          EXPIRATION TYPE
--------------------------------------------------------------------------------
232.2.2.2       V2256-4/35      10.5.41.10      54         Dynamic
```

Step 2 – Verify IGMP sender

```
show ip igmp sender
```

Results:

8007:

```
8007:3#show ip igmp sender
================================================================================
                          IGMP Sender - GlobalRouter
================================================================================
                                          PORT/
GRPADDR         IFINDEX    MEMBER         MLT        STATE
--------------------------------------------------------------------------------
232.2.2.2       Vlan 2256  10.5.41.20     spb        NOTFILTERED
```

17.5.3.3 Verify SPB Multicast Routes

Step 1 – Verify all SPB multicast routes

```
show isis spbm ip-multicast-route all
```

Results:

8007:

```
8007:3#show isis spbm ip-multicast-route all
================================================================================================
                                        SPBM IP-MULTICAST ROUTE INFO ALL
================================================================================================
Type     VrfName     Vlan   Source          Group      VSN-ISID    Data ISID   BVLAN Source-
BEB
                     Id
------------------------------------------------------------------------------------------------
snoop    GRT         2256   10.5.41.20      232.2.2.2  1002256     16000002    4051  8005
snoop    GRT         2256   10.5.41.20      232.2.2.2  1002256     16000002    4052  8006
------------------------------------------------------------------------------------------------
```

Step 2 – Verify SPB multicast routes pertaining to VLAN 2256 / i-sid 1002256

```
show isis spbm ip-multicast-route vlan 2256
show isis spbm ip-multicast-route vsn-isid 1002256
```

Results:

8007:

```
8007:3#show isis spbm ip-multicast-route vlan 2256
================================================================================================
                      SPBM IP-MULTICAST ROUTE INFO - VLAN ID : 2256, VSN-ISID : 1002256
================================================================================================
Source          Group           Data ISID   BVLAN Source-BEB
------------------------------------------------------------------------------------------------
10.5.41.20      232.2.2.2       16000002    4051  8005
10.5.41.20      232.2.2.2       16000002    4052  8006
```

17.5.3.4 Verify multicast TLV's

Assuming the multicast sender is using IGMPv3 (source IP 10.5.41.20@232.2.2.2) connect to Switch-2 off SPB bridges 8005 & 8006 with a receiver (10.5.41.10) connected to Switch-4 off SPB bridges 8007. TLV 185 in relationship to bridges 8005 and 8006 should have the Tx bit set and also send TLV 144 with the Tx bit set. Each multicast group should have its own unique data ISID with a value of 1600000x. The receiver switches (8007) should have TLV 144 with the Rx bit set.

Step 1 – Verify IP multicast source, group addresses, and Tx bit set on the BEB bridge where the multicast source is located via TLV 185

```
show isis lsdb tlv 185 detail
```

Results:

8005:

```
8005:3#show isis lsdb tlv 185 detail
================================================================================
                                ISIS LSDB (DETAIL)
================================================================================
--------------------------------------------------------------------------------

Level-1 LspID: 0024.43b4.e3df.00-00     SeqNum: 0x00000bb5      Lifetime:    375
        Chksum: 0xb302  PDU Length: 889
        Host_name: 8005
        Attributes:     IS-Type 1
TLV:185 SPBM IPVPN :
                VSN ISID:1002256
                BVID    :4051
                        Metric:0
                        IP Source Address: 10.5.41.20
                        Group Address    : 232.2.2.2
                        Data ISID        : 16000002
                        TX               : 1


Level-1 LspID: 001e.1f48.f3df.00-00     SeqNum: 0x00001621      Lifetime:    662
        Chksum: 0x4cf8  PDU Length: 866
        Host_name: 8006
        Attributes:     IS-Type 1
TLV:185 SPBM IPVPN :
                VSN ISID:1002256
                BVID    :4052
```

```
Metric:0
IP Source Address: 10.5.41.20
Group Address    : 232.2.2.2
Data ISID        : 16000002
TX               : 1
```

Step 2 – Verify on the BEB bridges where the multicast receivers are located via TLV 144, the Rx bit is set with a B-MAC of 03-08-05-00-00-00 & 03-08-06-00-00-00 (03 indicated multicast while 08-05 & 08-06 are the Nick Names of BEB bridges 8005 & 8006 with the multicast source). On the BEB bridges where the source is located, the Tx bit should be set

```
show isis lsdb tlv 144 detail
show isis lsdb lspid tlv 144 sub-tlv 3 detail
show isis lsdb lspid <lsp id> tlv 144 detail
show isis lsdb lspid <lsp id> tlv 144 sub-tlv 3 detail
```

Results:

```
8005:3#show isis lsdb lspid 00e0.7bb3.07df.00-00 tlv 144 sub-tlv 3 detail
================================================================================
                              ISIS LSDB (DETAIL)
================================================================================
--------------------------------------------------------------------------------
Level-1 LspID: 00e0.7bb3.07df.00-00     SeqNum: 0x00000311      Lifetime:  1032
        Chksum: 0xf022  PDU Length: 502
        Host_name: 8007
        Attributes:     IS-Type 1
TLV:144 SUB-TLV 3       ISID:
                Instance: 0
                Metric: 0
                B-MAC: 00-e0-7b-b3-07-df
                BVID:4051
                Number of ISID's:1


                        1002256(Rx)


                Instance: 0
                Metric: 0
                B-MAC: 00-e0-7b-b3-07-df
                BVID:4052
```

```
Number of ISID's:1

        1002256(Both)

Instance: 0
Metric: 0
B-MAC: 03-08-05-00-00-00
BVID:4051
Number of ISID's:1
        16000002(Rx)

Instance: 0
Metric: 0
B-MAC: 03-08-06-00-00-00
BVID:4052
Number of ISID's:1
        16000002(Rx)
```

17.5.3.5 Trace Multicast Routes

On the switch where the multicast sender is located, in our example this would be switch 8007, you can trace the multicast route by specifying the source, group, and VLAN.

Step 1 – Verify all SPB multicast routes


```
l2 tracemroute source <source address> group <group address> vlan <C-VLAN id>
```

Results: Since the multicast source is via bridges 8005 & 8006, we will use the following command to view the multicast route for group address 232.2.2.2

```
8005:3#l2 tracemroute source 10.5.41.20 group 232.2.2.2 vlan 2256
 Please wait for l2tracemroute to complete or press any key to abort
Source : 10.5.41.20
Group  : 232.2.2.2
VLAN   : 2256
BMAC   : 03:08:05:f4:24:03
B-VLAN : 4051
I-SID  : 16000003
================================================================================
1   8005             00:24:43:b4:e3:df -> 8003             00:80:2d:be:23:df
2   8003             00:80:2d:be:23:df -> 8007             00:e0:7b:b3:07:df

8006:3#l2 tracemroute source 10.5.41.20 group 232.2.2.2 vlan 2256
Please wait for l2tracemroute to complete or press any key to abort
Source : 10.5.41.20
Group  : 232.2.2.2
VLAN   : 2256
BMAC   : 03:08:06:f4:24:03
B-VLAN : 4052
I-SID  : 16000003
================================================================================
1   8006             00:1e:1f:48:f3:df -> 8004             00:e0:7b:bc:23:df
2   8004             00:e0:7b:bc:23:df -> 8007             00:e0:7b:b3:07:df
```

17.6 Inter VSN Routing

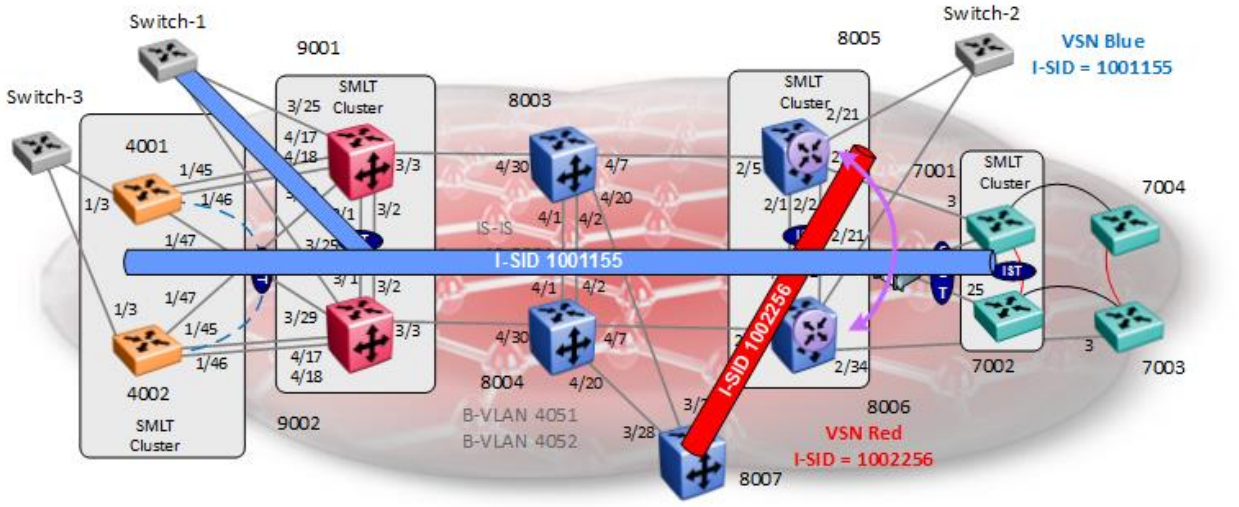

Continuing from configuration example 16.2 (L2VSN), assuming we wish to route between the Layer 2 Red and Blue Layer 2 VSNs. This can be accomplished by creating a VRF instance and adding the appropriate VLANs. For redundancy purposes, we can also create a VRF between two SPB bridges and run VRRP between for redundancy. We will enable Inter VSN routing by adding a VRF instance and then adding the Blue VSN and Red VSN on 8005 and 8006 and run VRRP between them. The end result will allow user or servers to forward traffic between Red and Blue VSNs.

In summary, we will configure the following:

- Use the base configuration from configuration example 15.2
- On SPB bridges 8005 and 8006, we will add the following:
    - A VRF instance named *inter-isid* with the following
        - 8005
            - Add an IP address of 10.5.40.2 to VLAN 1155 with a VRRP VIP of 10.5.40.1 and VRRP backup master enabled
            - Add an IP address of 10.5.41.2/24 to VLAN 2256 with a VRRP VIP of 10.5.41.1 and VRRP backup master enabled
        - 8006
            - Add an IP address of 10.5.40.3/24 to VLAN 1155 with a VRRP VIP of 10.5.40.1 and VRRP backup master enabled
            - Add an IP address of 10.5.41.3/24 to VLAN 2256 with a VRRP VIP of 10.5.41.1 and VRRP backup master enabled

17.7 Inter-ISID Configuration

In addition to the configuration to the configuration used in 13.2, we will add the following configuration.

17.7.1 VRF configuration

8005 & 8006 – Create VRF and add IP addressing to VLANs 1155 and 2256, enable VRRP with backup master, and make 8005 VRRP master for VLAN 1155

8005:

```
8005:5(config)#ip vrf inter-isid
8005:5(config)#interface vlan 1155
8005:5(config-if)#vrf inter-isid
8005:5(config-if)#ip address 10.5.40.2 255.255.255.0
8005:5(config-if)#ip vrrp address 10.5.40.1
8005:5(config-if)#ip vrrp 55 backup-master enable priority 150
8005:5(config-if)#ip vrrp 55 enable
8005:5(config-if)#exit
8005:5(config)#interface vlan 2256
8005:5(config-if)#vrf inter-isid
8005:5(config-if)#ip address 10.5.41.2 255.255.255.0
8005:5(config-if)#ip vrrp address 10.5.41.1
8005:5(config-if)#ip vrrp 56 backup-master enable
8005:5(config-if)#ip vrrp 56 enable
8005:5(config-if)#exit
```

```
--------------------------------------------------------------------------------
For 8006, use the same configuration as above except for the items shown below
--------------------------------------------------------------------------------
```

```
8005:5(config)#interface vlan 1155
8005:5(config-if)#ip address 10.5.40.3 255.255.255.0
8005:5(config-if)#ip vrrp 55 backup-master enable
!
8005:5(config)#interface vlan 2256
8005:5(config-if)#ip address 10.5.41.3 255.255.255.0
8005:5(config-if)#ip vrrp 56 backup-master enable priority 150
```

17.7.2 Verification

17.7.2.1 IP Route and ARP Table

Step 1 – Verify route table for VRF inter-isid

```
show ip route vrf inter-isid
```

Results:

```
8005 8006#show ip route vrf inter-isid
Response from 8005:

================================================================================================
                                IP Route - VRF inter-isid
================================================================================================
                                                NH                INTER
DST             MASK            NEXT            VRF         COST FACE   PROT AGE TYPE PRF
------------------------------------------------------------------------------------------------
10.5.40.0       255.255.255.0   10.5.40.2        -          1    1155   LOC  0   DB   0
10.5.41.0       255.255.255.0   10.5.41.2        -          1    2256   LOC  0   DB   0

2 out of 2 Total Num of Route Entries, 2 Total Num of Dest Networks displayed.
------------------------------------------------------------------------------------------------
TYPE Legend:
I=Indirect Route, D=Direct Route, A=Alternative Route, B=Best Route, E=Ecmp Route,
U=Unresolved Route, N=Not in HW, F=Replaced by FTN, V=IPVPN Route, S=SPBM Route
PROTOCOL Legend:
v=Inter-VRF route redistributed

Response from 8006:
================================================================================================
                                IP Route - VRF inter-isid
================================================================================================
                                                NH                INTER
DST             MASK            NEXT            VRF         COST FACE   PROT AGE TYPE PRF
------------------------------------------------------------------------------------------------
10.5.40.0       255.255.255.0   10.5.40.3        -          1    1155   LOC  0   DB   0
10.5.41.0       255.255.255.0   10.5.41.3        -          1    2256   LOC  0   DB   0

2 out of 2 Total Num of Route Entries, 2 Total Num of Dest Networks displayed.
------------------------------------------------------------------------------------------------
TYPE Legend:
```

```
I=Indirect Route, D=Direct Route, A=Alternative Route, B=Best Route, E=Ecmp Route,
U=Unresolved Route, N=Not in HW, F=Replaced by FTN, V=IPVPN Route, S=SPBM Route
PROTOCOL Legend:
v=Inter-VRF route redistributed
```

Step 2 – Verify VRRP operations

show ip vrrp vrf inter-isid

Results:

```
8005 8006# show ip vrrp vrf inter-isid
Response from 8005:
================================================================================
                          VRRP Info - VRF inter-isid
================================================================================

VRID  P/V   IP              MAC                STATE    CONTROL  PRIO  ADV
--------------------------------------------------------------------------------
55    1155  10.5.40.1       00:00:5e:00:01:37  Master   Enabled  150   1
56    2256  10.5.41.1       00:00:5e:00:01:38  Back Up  Enabled  100   1

VRID  P/V   MASTER          UP TIME               HLD DWN  CRITICAL IP (ENABLED)
--------------------------------------------------------------------------------
55    1155  10.5.40.2       0 day(s), 00:07:56    0        0.0.0.0          (No)
56    2256  10.5.41.3       0 day(s), 00:06:34    0        0.0.0.0          (No)

VRID  P/V   BACKUP MASTER   BACKUP MASTER STATE   FAST ADV (ENABLED)
--------------------------------------------------------------------------------
55    1155  enable          down                  200       (NO)
56    2256  enable          up                    200       (NO)


Response from 8006:
================================================================================
                          VRRP Info - VRF inter-isid
================================================================================

VRID  P/V   IP              MAC                STATE    CONTROL  PRIO  ADV
--------------------------------------------------------------------------------
55    1155  10.5.40.1       00:00:5e:00:01:37  Back Up  Enabled  100   1
```

```
56    2256  10.5.41.1       00:00:5e:00:01:38  Master   Enabled  150   1

VRID  P/V   MASTER          UP TIME               HLD DWN  CRITICAL IP (ENABLED)
-------------------------------------------------------------------------------
55    1155  10.5.40.2       0 day(s), 00:07:57    0        0.0.0.0          (No)
56    2256  10.5.41.3       0 day(s), 00:06:35    0        0.0.0.0          (No)

VRID  P/V   BACKUP MASTER   BACKUP MASTER STATE   FAST ADV (ENABLED)
-------------------------------------------------------------------------------
55    1155  enable          up                    200       (NO)
56    2256  enable          down                  200       (NO)
```

Step 3 – Verify ARP table

```
show ip arp vrf inter-isid
```

Results:

```
8005 8006#show ip arp vrf inter-isid
Response from 8005:
================================================================================
                            IP Arp - VRF inter-isid
================================================================================
IP_ADDRESS      MAC_ADDRESS        VLAN    PORT       TYPE    TTL(10 Sec)
--------------------------------------------------------------------------------
10.5.40.2       00:24:43:b4:e2:25  1155    -        LOCAL   2160
10.5.40.255     ff:ff:ff:ff:ff:ff  1155    -        LOCAL   2160
10.5.41.2       00:24:43:b4:e2:2d  2256    -        LOCAL   2160
10.5.41.255     ff:ff:ff:ff:ff:ff  2256    -        LOCAL   2160
10.5.40.1       00:00:5e:00:01:37  1155    -        LOCAL   2160
10.5.41.1       00:00:5e:00:01:38  2256    -        LOCAL   2160
10.5.41.10      00:0c:29:26:b5:af  2256  I-SID-1002256  DYNAMIC 2118
10.5.41.3       00:1e:1f:48:f2:2d  2256  I-SID-1002256  DYNAMIC 2118
10.5.40.3       00:1e:1f:48:f2:24  1155  I-SID-1001155  DYNAMIC 2118
10.5.41.20      00:0c:29:d9:96:59  2256    2/21       DYNAMIC 2121
10.5.40.52      00:0c:29:9b:a8:31  1155  I-SID-1001155  DYNAMIC 2154
10.5.40.51      00:0c:29:35:62:a4  1155  I-SID-1001155  DYNAMIC 2160
10.5.40.5       00:0c:29:d6:81:e5  1155  I-SID-1001155  DYNAMIC 2159
Response from 8006:
================================================================================
                            IP Arp - VRF inter-isid
```

```
================================================================================
IP_ADDRESS      MAC_ADDRESS        VLAN    PORT       TYPE    TTL(10 Sec)
--------------------------------------------------------------------------------
10.5.40.3       00:1e:1f:48:f2:24  1155    -        LOCAL   2160
10.5.40.255     ff:ff:ff:ff:ff:ff  1155    -        LOCAL   2160
10.5.41.3       00:1e:1f:48:f2:2d  2256    -        LOCAL   2160
10.5.41.255     ff:ff:ff:ff:ff:ff  2256    -        LOCAL   2160
10.5.40.1       00:00:5e:00:01:37  1155    -        LOCAL   2160
10.5.41.1       00:00:5e:00:01:38  2256    -        LOCAL   2160
10.5.41.10      00:0c:29:26:b5:af  2256  I-SID-1002256  DYNAMIC 2160
10.5.41.20      00:0c:29:d9:96:59  2256    2/21      DYNAMIC 2160
10.5.40.52      00:0c:29:9b:a8:31  1155  I-SID-1001155  DYNAMIC 2124
10.5.40.51      00:0c:29:35:62:a4  1155  I-SID-1001155  DYNAMIC 2143
10.5.40.5       00:0c:29:d6:81:e5  1155  I-SID-1001155  DYNAMIC 2159
```

17.7.2.2 MAC Address Table

Step 1 – Verify MAC table for VRF inter-isid


```
show vlan mac-address-entry <vlan id>
```

Results:

```
8005#show vlan mac-address-entry 1155
================================================================================
                                  Vlan Fdb
================================================================================
VLAN            MAC                                          QOS     SMLT
ID   STATUS     ADDRESS            INTERFACE        MONITOR LEVEL   REMOTE
--------------------------------------------------------------------------------
1155 self       00:00:5e:00:01:37  Port-cpp         false   1       false
1155 learned    00:0c:29:35:62:a4  I-SID-1001155    false   1       false
1155 learned    00:0c:29:9b:a8:31  I-SID-1001155    false   1       false
1155 learned    00:0c:29:d6:81:e5  I-SID-1001155    false   1       false
1155 learned    00:18:71:ea:31:bb  I-SID-1001155    false   1       false
1155 learned    00:1e:1f:48:f2:24  I-SID-1001155    false   1       true
1155 self       00:24:43:b4:e2:25  Port-cpp         false   1       false
8005#show vlan mac-address-entry 2256
================================================================================
                                  Vlan Fdb
================================================================================
VLAN            MAC                                          QOS     SMLT
ID   STATUS     ADDRESS            INTERFACE        MONITOR LEVEL   REMOTE
--------------------------------------------------------------------------------
```

```
2256 self       00:00:5e:00:01:38  Port-cpp         false   1      false
2256 learned    00:0c:29:26:b5:af  I-SID-1002256    false   1      false
2256 learned    00:0c:29:d9:96:59  Port-2/21        false   1      false
2256 learned    00:1e:1f:48:f2:2d  I-SID-1002256    false   1      true
2256 self       00:24:43:b4:e2:2d  Port-cpp         false   1      false
```

17.8 SPB L3 VSN – SMLT

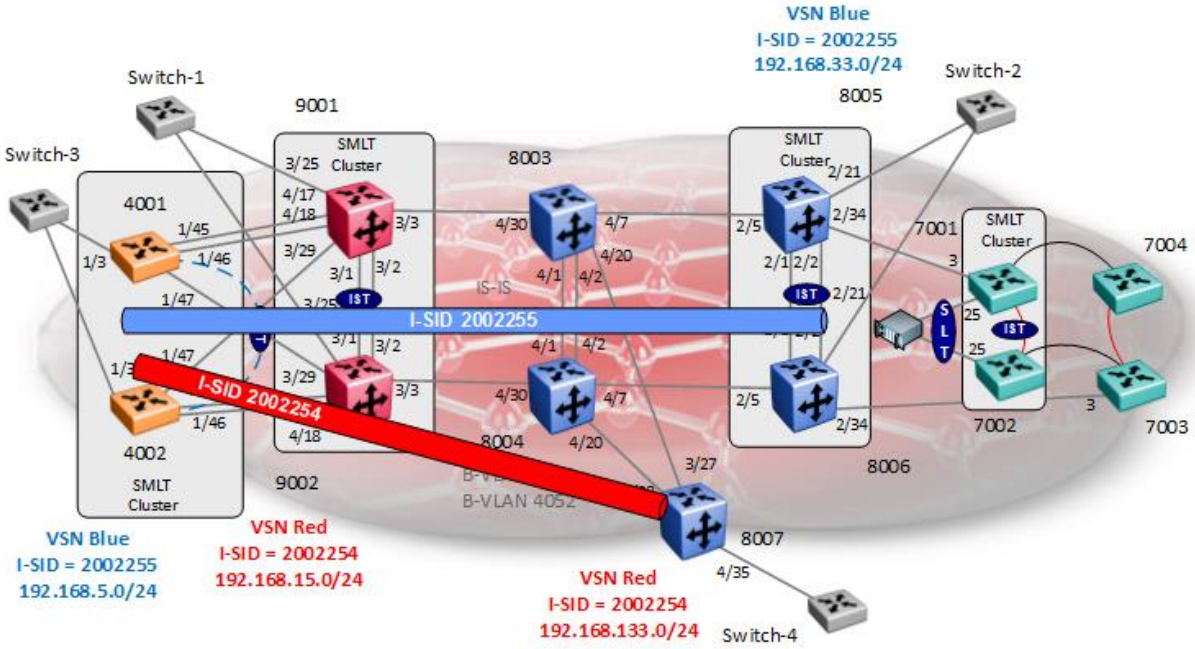

For this example, we will configure the SMLT switch cluster with the following:

- SPB IP
  - SPB IP parameter must be enabled BEB switches SMLT cluster switches 4001 & 4002, 8005 & 8006, and standalone switch 8007
  - An IS-IS source IP address must be configured (loopback/curcuitless IP address)
- VRF's - BEB Nodes only
  - VRF Red
    - VLAN ID = 2254 configured on switches 4001, 4002 and 8007
    - Assign I-SID 2002254 to VRF Red
    - On the vIST cluster 4001 and 4002, we will also need to assign an I-SID to the VLAN where we will use I-SID 3002254
  - VRF Blue
    - VLAN ID = 2255 configured on switches 4001, 4002, 8005, and 8006
    - Assign I-SID 2002255 to VRF Blue
    - On the vIST cluster 4001 and 4002, we will also need to assign an I-SID to the VLAN where we will use I-SID 3002255

This example is a continuation from the base setup used in Section 17.1 and 17.2 for the SMLT configuration.

17.8.1 SPB IP Enable

17.8.1.1 IS-IS Layer 3 configuration

4001

```
4001:1(config)#interface loopback 1
4001:1(config-if)#ip address 1 10.4.4.1/255.255.255.255
4001:1(config-if)#exit
4001:1(config)#router isis
4001:1(config-isis)#ip-source-address 10.4.4.1
4001:1(config-isis)#spbm 1 ip enable
4001:1(config-isis)#exit
```

4002

```
4002:1(config)#interface loopback 1
4002:1(config-if)#ip address 1 10.4.4.2/255.255.255.255
4002:1(config-if)#exit
4002:1(config)#router isis
4002:1(config-isis)#ip-source-address 10.4.4.2
4002:1(config-isis)#spbm 1 ip enable
4002:1(config-isis)#exit
```

8005

```
8005:5(config)#interface loopback 1
8005:5(config-if)#ip address 1 10.1.1.5/255.255.255.255
8005:5(config-if)#exit
8005:5(config)#router isis
8005:5(config-isis)#ip-source-address 10.1.1.5
8005:5(config-isis)#spbm 1 ip enable
8005:5(config-isis)#exit
```

8006

```
8006:5(config)#interface loopback 1
8006:5(config-if)#ip address 1 10.1.1.6/255.255.255.255
8006:5(config-if)#exit
8006:5(config)#router isis
8006:5(config-isis)#ip-source-address 10.1.1.6
8006:5(config-isis)#spbm 1 ip enable
8006:5(config-isis)#exit
```

8007

```
8007:5(config)#interface loopback 1
8007:5(config-if)#ip address 1 10.1.1.7/255.255.255.255
8007:5(config-if)#exit
8007:5(config)#router isis
8007:5(config-isis)#ip-source-address 10.1.1.7
8007:5(config-isis)#spbm 1 ip enable
8007:5(config-isis)#exit
```

17.8.1.2 VRF Configuration

4001 and 4002

4001 & 4002: Same configuration on both switches

```
4001:1(config)#ip vrf blue
4001:1(config)#ip vrf red
```

8005 & 8006

8005 & 8006: Same configuration on both switches

```
8005:5(config)#ip vrf blue
```

8007

```
8007:5(config)#ip vrf red
```

17.8.2 VLAN Configuration

4001 and 4001 – Add VLAN and I-SID identifier for the vIST

4001 & 4002: Same configuration on both switches assuming we are using the SMLT configuration via MLT 2

```
4001:1(config)#vlan create 2254 name vsnred-2254 type port-mstprstp 0
4001:1(config)#vlan i-sid 2254 3002254
4001:1(config)#vlan create 2255 name vsnblue-2255 type port-mstprstp 0
4001:1(config)#vlan i-sid 2255 3002255
4001:1(config)#vlan mlt 2254 2
4001:1(config)#vlan mlt 2255 2
```

8005 and 8006

8005 & 8006: Same configuration on both switches assuming we are using SLT 129 via port 2/21 and MLT 1 for the IST

```
8005:5(config)#vlan create 2255 name "vsnblue-2255" type port-mstprstp 0
8005:5(config)# vlan members add 2255 2/21
```

8007

```
8007:5(config)#vlan create 2254 name "vsnred-2254" type port-mstprstp 0
8007:5(config)#vlan ports 4/35 tagging tagAll
8007:5(config)# vlan members add 2254 4/35
8007:5(config)# vlan members remove 1 4/35
```

17.8.3 IPVPN Configuration

4001 and 4002 - Add IP address and VRF to VLANs 2254 & 2255

4001:

```
4001:1(config)#interface vlan 2254
4001:1(config-if)#vrf red
4001:1(config-if)#ip address 192.168.15.1 255.255.255.0
4001:1(config-if)#ip rsmlt
4001:1(config-if)#ip rsmlt holdup-timer 9999
4001:1(config-if)#exit
4001:1(config)#interface vlan 2255
4001:1(config-if)#vrf blue
4001:1(config-if)#ip address 192.168.5.1 255.255.255.0
4001:1(config-if)#ip rsmlt
4001:1(config-if)#ip rsmlt holdup-timer 9999
4001:1(config-if)#exit
4001:1(config)#ip rsmlt edge-support
```

For 4002, use the same configuration as above except for the items shown below

---

```
4002:1(config)#interface vlan 2254
4002:1(config-if)#ip address 192.168.15.2 255.255.255.0
4002:1(config)#interface vlan 2255
4002:1(config-if)#ip address 192.168.5.2 255.255.255.0
```

8005 and 8006 - Add IP address and VRF to VLANs 2254 and 2555, enable RSMLT Edge by setting the holdup timer to infinity (9999), and enable RSMT edge support globally

8005:

```
8005:5(config)#interface vlan 2255
8005:5(config-if)#vrf blue
8005:5(config-if)#ip address 192.168.33.1 255.255.255.0
8005:5(config-if)#ip rsmlt
8005:5(config-if)#ip rsmlt holdup-timer 9999
8005:5(config-if)#exit
8005:5(config)#ip rsmlt edge-support
```

For 8006, use the same configuration as above except for the items shown below

---

```
8006:5(config)#interface vlan 2255
8006:5(config-if)#ip address 192.168.33.2 255.255.255.0
```

8007 - Add IP address and VRF to VLAN 2254

```
8007:5(config)#interface vlan 2254
8007:5(config-if)#vrf red
8007:5(config-if)#ip address 192.168.133.1 255.255.255.0
8007:5(config-if)#exit
```

17.8.4 Enable L3VSN Configuration

4001 and 4002 - Enable L3 IPVPN and i-sid to VRF red and blue

4001 & 4002: Same configuration on both switches

```
4001:1(config)#router vrf red
4001:1(router-vrf)#ipvpn
4001:1(router-vrf)#i-sid 2002254
4001:1(router-vrf)#ipvpn enable
4001:1(router-vrf)#exit
4001:1(config)#router vrf blue
4001:1(router-vrf)#ipvpn
4001:1(router-vrf)#i-sid 2002255
4001:1(router-vrf)#ipvpn enable
4001:1(router-vrf)#exit
```

8005 and 8006 - Enable L3 IPVPN and i-sid to VRF blue

8005 & 8006: Same configuration on both switches

```
8005:5(config)#router vrf blue
8005:5(router-vrf)#ipvpn
8005:5(router-vrf)#i-sid 2002255
8005:5(router-vrf)#ipvpn enable
8005:5(router-vrf)#exit
```

8007 - Enable L3 IPVPN and i-sid to VRF red

```
8007:5(config)#router vrf red
8007:5(router-vrf)#ipvpn
8007:5(router-vrf)#i-sid 2002254
8007:5(router-vrf)#ipvpn enable
8007:5(router-vrf)#exit
```

17.8.5 Enable direct interface redistribution

4001 and 4002 - Redistribute IP Networks via IS-IS – Direct Interfaces

4001 & 4002: Same configuration on both switches

```
4001:1(config)#router vrf red
4001:1(router-vrf)#isis redistribute direct
WARNING: Routes will not be injected until apply command is issued after enable
command
4001:1(router-vrf)#isis redistribute direct enable
4001:1(router-vrf)#exit
4001:1(config)#router vrf blue
4001:1(router-vrf)#isis redistribute direct
WARNING: Routes will not be injected until apply command is issued after enable
command
4001:1(router-vrf)#isis redistribute direct enable
4001:1(router-vrf)#exit
4001:1(config)#isis apply redistribute direct vrf red
4001:1(config)#isis apply redistribute direct vrf blue
```

8005 and 8006 - Redistribute IP Networks via IS-IS – Direct Interfaces

8005 & 8006: Same configuration on both

```
8005:5(config)#router vrf blue
8005:5(router-vrf)#isis redistribute direct
WARNING: Routes will not be injected until apply command is issued after enable
command
8005:5(router-vrf)#isis redistribute direct enable
8005:5(router-vrf)#exit
8005:5(config)#isis apply redistribute direct vrf red
8005:5(config)#isis apply redistribute direct vrf blue
```

8007 - Redistribute IP Networks via IS-IS – Direct Interfaces

```
8007:5(config)#router vrf red
8007:5(router-vrf)#isis redistribute direct
WARNING: Routes will not be injected until apply command is issued after enable
command
8007:5(router-vrf)#isis redistribute direct enable
8007:5(router-vrf)#exit
8007:5(config)#isis apply redistribute direct vrf red
```

17.8.6 Verify Operations

17.8.6.1 Verify RSMLT Information

4001 & 4002 and 8005 & 8006 - Verify RSMLT is up and operational for both VRF instances

```
show ip rsmlt vrf red
show ip rsmlt vrf blue
```

Results:

```
8005 8006#show ip rsmlt vrf blue
Response from 8005:
================================================================================
                        Ip Rsmlt Local Info - VRF blue
================================================================================
VID   IP              MAC               ADMIN   OPER  HDTMR  HUTMR
--------------------------------------------------------------------------------
2255  192.168.33.1    00:24:43:b4:e2:23 Enable  Up    60     infinity
VID   SMLT ID                              SLT ID
--------------------------------------------------------------------------------
2255     5                                   129
VID   IPv6            MAC               ADMIN   OPER  HDTMR  HUTMR
--------------------------------------------------------------------------------
VID   SMLT ID                              SLT ID
--------------------------------------------------------------------------------
================================================================================
                        Ip Rsmlt Peer Info - VRF blue
================================================================================
VID   IP              MAC               ADMIN   OPER  HDTMR  HUTMR
--------------------------------------------------------------------------------
2255  192.168.33.2    00:1e:1f:48:f2:22 Enable  Up    60     infinity
VID   HDT REMAIN  HUT REMAIN  SMLT ID                          SLT ID

--------------------------------------------------------------------------------
2255  60          infinity      5                              129
VID   IPv6            MAC               ADMIN   OPER  HDTMR  HUTMR
--------------------------------------------------------------------------------
VID   HDT REMAIN  HUT REMAIN  SMLT ID                          SLT ID
--------------------------------------------------------------------------------

Response from 8006:
================================================================================
                        Ip Rsmlt Local Info - VRF blue
```

```
================================================================================
VID   IP              MAC               ADMIN   OPER  HDTMR  HUTMR
--------------------------------------------------------------------------------
2255  192.168.33.2    00:1e:1f:48:f2:22 Enable  Up    60     infinity
VID   SMLT ID                              SLT ID
--------------------------------------------------------------------------------
2255     5                                  129
VID   IPv6            MAC               ADMIN   OPER  HDTMR  HUTMR
--------------------------------------------------------------------------------
VID   SMLT ID                              SLT ID
--------------------------------------------------------------------------------
================================================================================
                        Ip Rsmlt Peer Info - VRF blue
================================================================================
VID   IP              MAC               ADMIN   OPER  HDTMR  HUTMR
--------------------------------------------------------------------------------
2255  192.168.33.1    00:24:43:b4:e2:23 Enable  Up    60     infinity
VID   HDT REMAIN  HUT REMAIN  SMLT ID                            SLT ID
--------------------------------------------------------------------------------
2255  60          infinity     5                                 129
VID   IPv6            MAC               ADMIN   OPER  HDTMR  HUTMR
--------------------------------------------------------------------------------
VID   HDT REMAIN  HUT REMAIN  SMLT ID                            SLT ID
--------------------------------------------------------------------------------
```

On each SMLT cluster switch, verify the following:

Option	Verify
VID	The value displayed should be ***2254*** for vrf red and ***2255*** for vrf blue as per the VLAN ID used in this configuration example.
ADMIN	The value displayed should be ***Enable*** which indicates that RSMLT has been enabled for this interface
OPER	Should be displayed as ***Up*** indicating that RSMLT is operational
HUTMR	Should be displayed as ***infinity*** as we configured this interface as a RSMLT Edge interface with a holdup-timer timer value of 9999
SLT ID	The value displayed should be ***129*** for SMLT cluster 8005 & 8005 as per the SMLT ID's used in this example

17.8.6.2 Verify IS-IS I-SID

Show IS-IS I-SID pertaining to the vIST

```
show isis spbm i-sid all id <3002254|3002255>
```

Results:

4001 & 4002:

```
4001:1#show isis spbm i-sid all id 3002254

================================================================================
                                SPBM ISID INFO
================================================================================
ISID      SOURCE NAME   VLAN   SYSID                TYPE         HOST_NAME
--------------------------------------------------------------------------------
3002254 0.40.01         4051   d4ea.0e10.e465       config       4001
3002254 0.40.02         4052   a012.90d3.ec65       discover     4002

4001:1#show isis spbm i-sid all id 3002255

================================================================================
                                SPBM ISID INFO
================================================================================
ISID      SOURCE NAME   VLAN   SYSID                TYPE         HOST_NAME
--------------------------------------------------------------------------------
3002255 0.40.01         4051   d4ea.0e10.e465       config       4001
3002255 0.40.02         4052   a012.90d3.ec65       discover     4002
```

Show IS-IS I-SID pertaining to each vrf instance

```
show ip ipvpn
```

Results:

4001 & 4002:

```
4001:1#show ip ipvpn

          VRF Name             : blue
          Ipvpn-state          : enabled
          I-sid                : 2002255

          VRF Name             : red
          Ipvpn-state          : enabled
          I-sid                : 2002254
```

8005 & 8006:

```
8005:5#show ip vrf ipvpn
          VRF Name              : blue
          Ipvpn-state           : enabled
          I-sid                 : 2002255
```

8007:

```
8007:5#show ip vrf ipvpn
          VRF Name              : red
          Ipvpn-state           : enabled
          I-sid                 : 2002254
```

On each switch, verify the following:

Option	Verify
VRF Name Ipvpn-state I-sid	For the VRF Name of ***blue***, the Ipvpn-state should display ***enabled*** with an I-sid value of ***2002255***. For the VRF Name of ***red***, the Ipvpn-state should display ***enabled*** with an I-sid value of ***2002254***.

17.8.6.3 Show IS-IS SPB IP Unicast Forwarding database

Show IS-IS SPB IP Unicast FIB using i-sid 2002254 and 2002255 as used in this configuration example

```
show isis spbm ip-unicast-fib id <i-sid id>
```

Results: Example from 4002

4002:

```
4002:1(config)#show isis spbm ip-unicast-fib id 2002255
================================================================================================
                                    SPBM IP-UNICAST FIB ENTRY INFO
================================================================================================
          VRF     DEST                                      OUTGOING  SPBM    PREFIX  IP ROUTE
VRF       ISID    ISID    Destination       NH BEB     VLAN INTERFACE COST    COST    PREFERENCE
------------------------------------------------------------------------------------------------
blue      2002255 2002255 192.168.5.0/24    4001       4051 1/47      20       1       7
blue      2002255 2002255 192.168.5.0/24    4001       4052 9001      20       1       7
blue      2002255 2002255 192.168.33.0/24   8005       4051 1/47      30       1      7
blue      2002255 2002255 192.168.33.0/24   8005       4052 1/47      30       1       7
blue      2002255 2002255 192.168.33.0/24   8006       4051 9001      30       1       7
blue      2002255 2002255 192.168.33.0/24   8006       4052 9001      30       1      7

4002:1(config)#show isis spbm ip-unicast-fib id 2002254
================================================================================================
                                    SPBM IP-UNICAST FIB ENTRY INFO
================================================================================================
          VRF     DEST                                      OUTGOING  SPBM    PREFIX  IP ROUTE
VRF       ISID    ISID    Destination       NH BEB     VLAN INTERFACE COST    COST    PREFERENCE
------------------------------------------------------------------------------------------------
red       2002255 2002255 192.168.15.0/24    4001       4051 1/47      20       1       7
red       2002255 2002255 192.168.15.0/24    4001       4052 9001      20       1       7
red       2002254 2002255 192.168.133.0/24   8007       4051 1/47      30       1       7
red       2002254 2002255 192.168.133.0/24   8007       4052 9001      30       1       7
```

17.8.6.4 Show IS-IS LSP Details

In a IS-IS network, each IS router advertises one or more IS-IS Link State Protocol Data Units (LSPs) with routing information. Within each LSP, there is a fixed header and a number of TLVs with encoded information. The following command is used to show details of a LSP in detail to a specific neighbor displaying the encoded information in the TLVs.

Show IS-IS LSP details

```
show isis lsdb tlv 184 detail
show isis lsdb lspid <is-is system id>.00-00 tlv 184 detail
```

Results: Example from 4002

4002:

```
4002:1#show isis lsdb tlv 184 detail

================================================================================
                              ISIS LSDB (DETAIL)
================================================================================
--------------------------------------------------------------------------------
Level-1 LspID: d4ea.0e10.e465.00-03     SeqNum: 0x00000009      Lifetime:  1027
        Chksum: 0xbdc0  PDU Length: 89
        Host_name: 4001
        Attributes:     IS-Type 1
TLV:184 SPBM IPVPN Reachability:
                Vrf ISID:2002255
                        Metric:1        Prefix Length:24
                        IP Address: 192.168.5.0

                Vrf ISID:2002254
                        Metric:1        Prefix Length:24
                        IP Address: 192.168.15.0


Level-1 LspID: a012.90d3.ec65.00-03     SeqNum: 0x0000000a      Lifetime:  1181
        Chksum: 0xe990  PDU Length: 89
        Host_name: 4002
        Attributes:     IS-Type 1
TLV:184 SPBM IPVPN Reachability:
                Vrf ISID:2002255
                        Metric:1        Prefix Length:24
                        IP Address: 192.168.5.0
```

```
                Vrf ISID:2002254
                        Metric:1        Prefix Length:24
                        IP Address: 192.168.15.0


Level-1 LspID: 0024.43b4.e3df.00-00     SeqNum: 0x000023c1      Lifetime:  1182
        Chksum: 0x56dd  PDU Length: 772
        Host_name: 8005
        Attributes:     IS-Type 1
TLV:184 SPBM IPVPN Reachability:
                Vrf ISID:2002255
                        Metric:1        Prefix Length:24
                        IP Address: 192.168.33.0


Level-1 LspID: 001e.1f48.f3df.00-00     SeqNum: 0x000023b6      Lifetime:  1183
        Chksum: 0xee6   PDU Length: 797
        Host_name: 8006
        Attributes:     IS-Type 1
TLV:184 SPBM IPVPN Reachability:
                Vrf ISID:2002255
                        Metric:1        Prefix Length:24
                        IP Address: 192.168.33.0


Level-1 LspID: 00e0.7bb3.07df.00-00     SeqNum: 0x000000d4      Lifetime:   921
        Chksum: 0x8c2d  PDU Length: 395
        Host_name: 8007
        Attributes:     IS-Type 1
TLV:184 SPBM IPVPN Reachability:
                Vrf ISID:2002254
                        Metric:1        Prefix Length:24
                        IP Address: 192.168.133.0
```

In reference to 4002, verify the following:

Option	Verify
Level 1 TLV:184	As this example, in reference to 4002, for the blue vrf I-SID 2002255, we should learns routes***192.168.33.0/24*** from ***4001*** and ***192.168.33.0/24*** from ***8005*** and ***8006*** and for the red vrf I-SID ***2002254***, we should learn routes ***192.168.15.0/24*** from ***4001*** and ***192.168.133.0/24*** from ***8007***.

17.8.6.5 IP Route Table

Use the following command to display the routes for each VRF instance

Display IP route table for each VRF instance

```
show ip route vrf blue
show ip route vrf red
```

Results: Example from 4002

4002:

```
4002:1#show ip route vrf red
================================================================================================
                                        IP Route - VRF red
================================================================================================
                                                    NH                    INTER
DST             MASK            NEXT                VRF/ISID         COST FACE  PROT AGE TYPE
PRF
------------------------------------------------------------------------------------------------
192.168.15.0    255.255.255.0   192.168.15.2        -                1    2254  LOC  0   DB   0
192.168.133.0   255.255.255.0   8007                red              30   4051  ISIS 0   IBSV 7

2 out of 2 Total Num of Route Entries, 2 Total Num of Dest Networks displayed.
------------------------------------------------------------------------------------------------
TYPE Legend:
I=Indirect Route, D=Direct Route, A=Alternative Route, B=Best Route, E=Ecmp Route,
U=Unresolved Route, N=Not in HW, F=Replaced by FTN, V=IPVPN Route, S=SPBM Route
PROTOCOL Legend:
v=Inter-VRF route redistributed

4002:1#show ip route vrf blue
================================================================================================
                                        IP Route - VRF blue
================================================================================================
                                                    NH                    INTER
DST             MASK            NEXT                VRF/ISID         COST FACE  PROT AGE TYPE
PRF
------------------------------------------------------------------------------------------------
192.168.5.0     255.255.255.0   192.168.5.2         -                1    2255  LOC  0   DB   0
192.168.33.0    255.255.255.0   8005                blue             30   4051  ISIS 0   IBSV 7

2 out of 2 Total Num of Route Entries, 2 Total Num of Dest Networks displayed.
```

In reference to each switch, verify the following information:

Option	Verify
Next PROT TYPE	All local interfaces should display ***LOC*** whereas all learned routes should display ***ISIS*** with the appropriate next-hop address and type of ***IBSV***. The next hop ISIS System-name should be displayed for remote networks

17.8.6.6 Verify VRF L3 operations

Step 1 - Use ping command to verify network connectivity to neighbors

```
ping <host> vrf <value> source <source ip>
```

Results: Example from 4002

4002:

```
4002:1#ping 192.168.133.1 vrf red source 192.168.15.2
192.168.133.1 is alive
4002:1#ping 192.168.33.1 vrf blue source 192.168.5.2
192.168.33.1 is alive
4002:1#ping 192.168.33.2 vrf blue source 192.168.5.2
192.168.33.2 is alive
```

Step 2 - Use traceroute command to verify network connectivity to neighbors

```
traceroute <host> vrf <value> source <source ip>
```

Results: Example from 4002

4002:

```
4002:1#traceroute 192.168.133.1 vrf red source 192.168.15.2
traceroute to 192.168.133.1, 30 hops max, 56 byte packets (vrf red)
 1  192.168.133.1  1.997 ms 2.773 ms 1.808 ms
4002:1#traceroute 192.168.33.1 vrf blue source 192.168.5.2
traceroute to 192.168.33.1, 30 hops max, 56 byte packets (vrf blue)
 1  192.168.33.1  1.847 ms 2.424 ms 1.706 ms
```

Step 3 - Use l2 traceroute command to verify network connectivity to neighbors

```
L2 traceroute ip-address <host> vrf <value>
```

Results: Example from 4002

4002:

```
4002:1#l2 traceroute ip-address 192.168.133.1 vrf red

 Please wait for l2trace to complete or press any key to abort

L2 Trace  Statistics : IP 192.168.133.1, paths found 1
================================================================
8007  (00:e0:7b:b3:07:df),  vlan 4051

0    4002                (a0:12:90:d3:ec:65)
1    9001                (d4:ea:0e:fd:e3:df)
2    8003                (00:80:2d:be:23:df)
3    8007                (00:e0:7b:b3:07:df)

4002:1#l2 traceroute ip-address 192.168.33.1 vrf blue

 Please wait for l2trace to complete or press any key to abort

L2 Trace  Statistics : IP 192.168.33.1, paths found 1
================================================================
8005  (00:24:43:b4:e3:df ),  vlan 4051

0    4002                (a0:12:90:d3:ec:65)
1    9001                (d4:ea:0e:fd:e3:df)
2    8003                (00:80:2d:be:23:df)
3    8005                (00:24:43:b4:e3:df )
```

Step 3 - Verify ARP and local MAC entry for local hosts

```
show ip arp vrf <vrf name>
show vlan mac-address-entry <vlan id>
```


Results: Example from 4002 for vrf blue

4002:

```
4002:1#show ip arp vrf blue
================================================================================================
                                    IP Arp - VRF blue
================================================================================================
IP_ADDRESS      MAC_ADDRESS        VLAN  PORT                TYPE    TTL(10 Sec) TUNNEL
------------------------------------------------------------------------------------------------
192.168.5.1     d4:ea:0e:10:e4:8b  2255  9001                DYNAMIC 1711  4001
192.168.5.2     d4:ea:0e:15:30:88  2255  -                   LOCAL   2160
192.168.5.255   ff:ff:ff:ff:ff:ff  2255  -                   LOCAL   2160

4002:1#show vlan mac-address-entry 2255
================================================================================
                                    Vlan Fdb
================================================================================
VLAN            MAC                           SMLT
ID   STATUS     ADDRESS            INTERFACE  REMOTE TUNNEL
--------------------------------------------------------------------------------
2255 learned    d4:ea:0e:10:e4:8b  9001       true   4001
2255 self       d4:ea:0e:15:30:88  Port-cpp   false  -
```

17.9 Extending L3VSN to the VSP 7000 Cluster via L2VSN

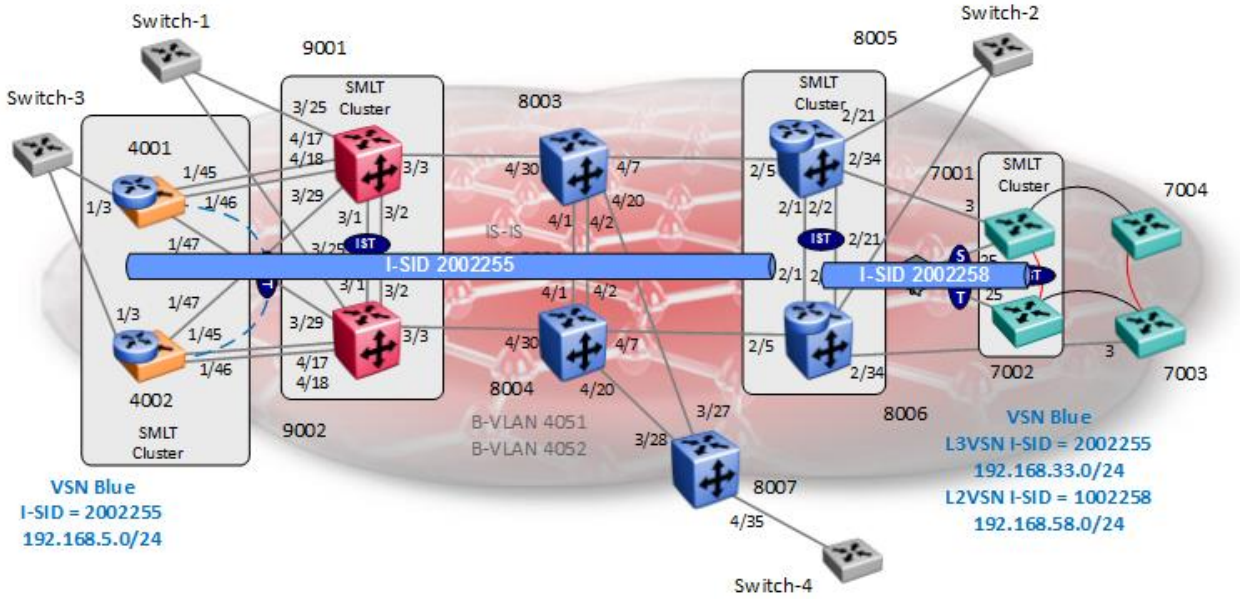

Continuing from the L3VSN example in Section 17.8, we will extend the blue vrf to the VSP 7000 7001 & 7002 SMLT cluster by adding a L2VSN between SPB bridges 8005 & 8006 and 7001 & 7002 and then adding the L2VSN VLAN provisioned on SPB bridges 8005 and 8006 to the blue vrf. For redundancy, we will also enable VRRP with Backup Master on 8005 & 8006.

In summary, we will configure the following:

L2VSN

- Assign I-SID 1002558 to local VLAN 2558 on SPB bridges 8005 & 8006, and 7001 & 7002
  - On bridges 8005 and 8006
    - Add VLAN 2258 to the blue vrf configured in Section 17.8
    - For VLAN 2258, add IP subnet 192.168.58.0/24 with a VRRP virtual IP address of 192.168.58.1 and VRRP Backup Master enabled

17.9.1 L2VSN Configuration

8005 and 8006

8005 & 8006: Same configuration on both switches

```
8005:5(config)#vlan create 2258 type port-mstprstp 0
8005:5(config)#vlan i-sid 2258 1002258
```

7001 and 7002 – Assuming we are using local ports 11. Please see section 17.2 for the SMLT configuration

7001 & 7002: Same configuration on both switches

```
7001(config)#vlan create 2258 type port
7001(config)#vlan configcontrol automatic
7001(config)#vlan members add 2258 25
7001(config)#vlan i-sid 2258 1002258
```

17.9.2 VRF Configuration

8005 and 8006

8005:

```
8005:5(config)#interface vlan 2258
8005:5(config-if)#vrf blue
8005:5(config-if)#ip address 192.168.58.2 255.255.255.0
8005:5(config-if)#ip vrrp address 58 192.168.58.1
8005:5(config-if)#ip vrrp 58 backup-master enable
8005:5(config-if)#ip vrrp 58 enable
8005:5(config-if)#exit
```

8006 will have the same configuration except for the items shown below assuming also that we wish to make 8006 the VRRP master

---

```
8006:5(config-if)#vrf blue
8006:5(config-if)#ip address 192.168.58.3 255.255.255.0
8006:5(config-if)#ip vrrp 58 backup-master enable priority 150
```

17.9.3 Verify Operations

17.9.3.1 Verify L2VSN Operations

Verify L2VSN is configured and discovered

```
show isis spbm i-sid all id 1002258
```

Results: Example from switch 7001

```
7001#show isis spbm i-sid all id 1002258
================================================================================
                              SPBM ISID INFO
================================================================================
ISID      SOURCE NAME   VLAN   SYSID            TYPE       HOST-NAME
================================================================================
1002258   0.70.01       4051   fca8.41f6.37df   config     7001
1002258   0.70.02       4052   3cb1.5bff.5fdf   discover   7002
1002258   0.80.05       4051   0024.43b4.e3df   discover   8005
1002258   0.80.06       4052   001e.1f48.f3df   discover   8006
```

17.9.3.2 Verify VRRP Operations

8005 & 8006 - Verify RSMLT is up and operational for both VRF instances

```
show ip vrrp address vrid <1-255> vrf <name>
```

Results:

```
8005 8006#show ip vrrp address vrid 58 vrf blue
Response from 8005:
================================================================================
                              VRRP Info - VRF blue
================================================================================

VRID  P/V   IP              MAC               STATE    CONTROL  PRIO  ADV
--------------------------------------------------------------------------------
58    2558  192.168.58.1    00:00:5e:00:01:3a  Back Up  Enabled  100   1

VRID  P/V   MASTER          UP TIME               HLD DWN  CRITICAL IP (ENABLED)
--------------------------------------------------------------------------------
58    2558  192.168.58.3    0 day(s), 01:43:08    0        0.0.0.0         (No)

VRID  P/V   BACKUP MASTER   BACKUP MASTER STATE   FAST ADV (ENABLED)
```

```
--------------------------------------------------------------------------------
58    2558  enable          up                   200       (NO)


Response from 8006:
================================================================================
                              VRRP Info - VRF blue
================================================================================

VRID  P/V   IP              MAC                STATE    CONTROL  PRIO  ADV
--------------------------------------------------------------------------------
58    2558  192.168.58.1    00:00:5e:00:01:3a  Master   Enabled  150   1

VRID  P/V   MASTER          UP TIME               HLD DWN  CRITICAL IP (ENABLED)
--------------------------------------------------------------------------------
58    2558  192.168.58.3    0 day(s), 01:43:23    0        0.0.0.0          (No)

VRID  P/V   BACKUP MASTER   BACKUP MASTER STATE   FAST ADV (ENABLED)
--------------------------------------------------------------------------------
58    2558  enable          down                 200       (NO)
```

On each 8005 and 8006, verify the following:

Option	Verify
IP	Under IP, the VRRP address of ***192.168.58.1*** should be shown.
Master	As bridge 8005 has been configured with a VRRP priority of ***150***, it's interface IP address of ***192.168.58.3*** should be shown as master.
State Backup Master State	Bridge 8005 should have a state of ***Backup*** while 8006 should have a state of ***Master*** as it has the higher VRRP priority under ***State***. Likewise, under ***Backup Master State***, 8005 should disply ***up*** while 8006 should display ***down***.
Backup Master	Both 8005 and 8006 should display ***enable*** to indicate that VRRP Backup Master has been enabled.

17.9.3.3 IP Route Table

Use the following command to display the routes for each VRF instance

Display IP route table for each VRF instance

```
show ip route vrf blue
```


Results: Example from 4002 where the 192.168.58.0/24 should be populated

4002:

```
4002:1#show ip route vrf blue

=================================================================================================
                                        IP Route - VRF blue
=================================================================================================
                                                    NH                    INTER
DST             MASK            NEXT                VRF/ISID        COST FACE  PROT AGE TYPE
PRF
-------------------------------------------------------------------------------------------------
192.168.5.0     255.255.255.0   192.168.5.2         -               1    2255  LOC  0   DB    0
192.168.33.0    255.255.255.0   8005                blue            30   4051  ISIS 0   IBSV  7
192.168.58.0    255.255.255.0   8005                blue            30   4051  ISIS 0   IBSV  7
```

17.10 Multicast over L3VSN

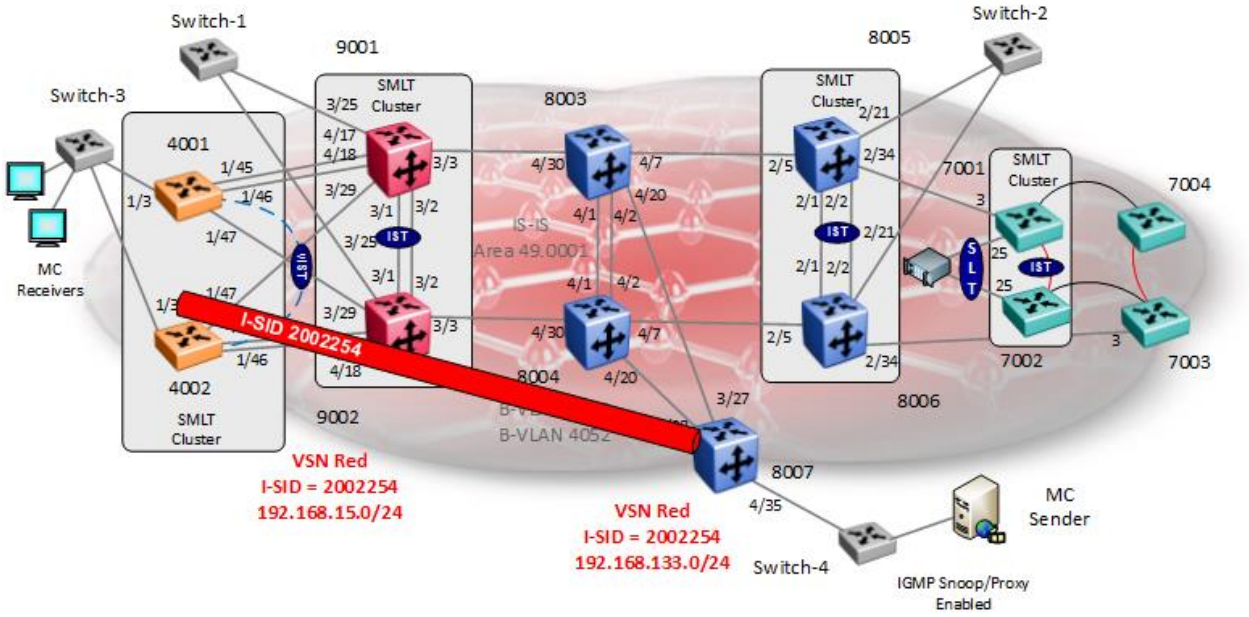

Continuing form example used in Section 17.8, we will simple enable multicast support for L3VSN I-SID 2002254 (red vrf) between SPB bridges 4001, 4002, and 8007.

17.10.1Enable SPB Multicast – Global

17.10.1.1 IS-IS Layer 3 configuration

4001, 4002 and 8007: Enable SPB Multicast, global

4001, 4002, and 8007: Same configuration on all switches

```
4001:1(config)#router isis
4001:1(config)#spbm 1 multicast enable
4001:1(config)#exit
```

17.10.2Enable Multicast VPN

4001, 4002 and 8007: Enable multicast VPN

4001, 4002, and 8007: Same configuration on all switches

```
4001:1(config)#router vrf red
4001:1(router-vrf)#mvpn enable
4001:1(router-vrf)#exit
```

17.10.3Enable L3 SPB Multicast

4001, 4002, and 8007: Enable L3 SPB multicast at VLAN level

4001, 4002, and 8007: Same configuration on all switches

```
4001:1(config)#interface vlan 2254
4001:1(config-if)#ip spb-multicast enable
4001:1(config-if)#exit
```

17.10.4Enable IGMP

17.10.4.1 Enable IGMPv2 at VLAN level

Default setting, no configuration required

17.10.4.2 Enable IGMPv3 at VLAN level

4001, 4002, and 8007: Enable IGMPv3, i.e. on VLAN 2254

4001, 4002, and 8007: Same configuration on all switches

```
4001:1(config)#interface vlan 2254
4001:1(config-if)#ip igmp compatibility-mode
4001:1(config-if)#ip igmp version 3
```

17.10.5Edge Switch

Assuming the edge switch is an Avaya stackable switch with the latest firmware, enable IGMP snoop and proxy.

Switch-3 & Switch-4: Enable IGMPv3, i.e. on VLAN 2254

```
ERS-Stackable(config)#interface vlan 2254
ERS-Stackable(config-if)#ip igmp snoop
ERS-Stackable(config-if)#ip igmp proxy
## If IGMPv3 is used:
ERS-Stackable(config-if)#ip igmp version 3
```

17.10.6 Verify Operations

17.10.6.1 Global Settings

Verify SPB multicast is enabled

```
show isis spbm multicast
```

Results: From 4001 & 4002

```
4001 4002# show isis spbm multicast
Response from 4001:
                              multicast : enable
                      fwd-cache-timeout : 210


Response from 4002:
                              multicast : enable
                      fwd-cache-timeout : 210
```

17.10.6.2 Verify IGMP interfaces

Verify IGMP interfaces

```
show ip igmp interface vrf <vrf name>
```

Results: From 4001 & 4002

```
4001 4002# show ip igmp interface vrf red
Response from 4001:

================================================================================
                            Igmp Interface - VRF red
================================================================================
       QUERY              OPER            QUERY    WRONG            LASTMEM
IF     INTVL STATUS VERS. VERS QUERIER    MAXRSPT QUERY JOINS ROBUST QUERY MODE
--------------------------------------------------------------------------------
V2254  125    active 2     2    192.168.15.1 100     0     0     2      10    routed-spb

1 out of 1 entries displayed


Response from 4002:
```

```
================================================================================
                          Igmp Interface - VRF red
================================================================================
       QUERY              OPER            QUERY   WRONG            LASTMEM
IF     INTVL STATUS VERS. VERS QUERIER    MAXRSPT QUERY JOINS ROBUST QUERY MODE
--------------------------------------------------------------------------------
V2254  125    active 2     2    192.168.15.2 100     0     0     2      10    routed-spb

1 out of 1 entries displayed
```

17.10.6.3 Verify IGMP cache/group and senders

Assuming the multicast sender connect to Switch-4 off SPB bridges 8007 is sending a multicast stream of 232.1.1.1 with a receiver connected to Switch-3 off SPB SMLT cluster bridges 4001 & 4002 .

Step 1 - Verify IGMP cache / group

```
show ip igmp cache vrf <vrf name>
show ip igmp group vrf <vrf name>
```

Results:

```
4001 4002# show ip igmp cache vrf red
Response from 4001:
================================================================================================================


================================================================================
                            IGMP Cache - VRF red
================================================================================
================================================================================================================
GRPADDR         INTERFACE LASTREPORTER    EXPIRATION              V1HOSTTIMER TYPE    STATICPORTS
----------------------------------------------------------------------------------------------------------------
239.1.1.1       Vlan2254  192.168.15.100  0 day(s), 00h:03m:46s   0           DYNAMIC NULL


Response from 4002:
================================================================================================================


================================================================================
                            IGMP Cache - VRF red
================================================================================
================================================================================================================
GRPADDR         INTERFACE LASTREPORTER    EXPIRATION              V1HOSTTIMER TYPE    STATICPORTS
```

```
-------------------------------------------------------------------------------------------
239.1.1.1       Vlan2254  192.168.15.100  0 day(s), 00h:03m:47s   0           DYNAMIC NULL

4001 4002# show ip igmp group vrf red
Response from 4001:

===============================================================================
                              Igmp Group - VRF red
===============================================================================
GRPADDR          INPORT          MEMBER          EXPIRATION TYPE
-------------------------------------------------------------------------------
239.1.1.1        V2254-1/3       192.168.15.100  138        Dynamic


Response from 4002:

===============================================================================
                              Igmp Group - VRF red
===============================================================================
GRPADDR          INPORT          MEMBER          EXPIRATION TYPE
-------------------------------------------------------------------------------
239.1.1.1        V2254-1/3       192.168.15.100  139        Dynamic
```

Step 2 - Verify IGMP sender

```
show ip igmp sender vrf <vrf name>
```

Results: From 8007

```
8007:5#show ip igmp sender vrf red
================================================================================
                            IGMP Sender - VRF red
================================================================================
                                          PORT/
GRPADDR         IFINDEX    MEMBER         MLT        STATE
--------------------------------------------------------------------------------
239.1.1.1       Vlan 2254  192.168.133.100 4/35       NOTFILTERED
```

17.10.6.4 Verify SPB Multicast Routes

Verify all SPB multicast routes

```
show isis spbm ip-multicast-route vrf <vrf name>
show isis spbm ip-multicast-route vrf <vrf name> detail
show isis spbm ip-multicast-route vrf <vrf name> group <IP addr>
show isis spbm ip-multicast-route vrf <vrf name> group <IP addr> detail
show isis spbm ip-multicast-route vrf <vrf name> group <IP addr> source <ip>
show isis spbm ip-multicast-route vrf <vrf name> group <IP addr> source <ip>
detail
```

Results: From 4001 & 4002

```
4001 4002# show isis spbm ip-multicast-route vrf red detail
Response from 4001:

================================================================================================
                    SPBM IP-MULTICAST ROUTE INFO - VRF NAME : red, VSN-ISID : 2002254
================================================================================================
Source          Group           Data ISID  BVLAN NNI Rcv        UNI Rcvrs         Source-BEB
------------------------------------------------------------------------------------------------
192.168.133.100 239.1.1.1       16000005   4051  -               V2254:1/3          8007

Response from 4002i:

================================================================================================
SPBM IP-MULTICAST ROUTE INFO - VRF NAME : red, VSN-ISID : 2002254
================================================================================================
Source          Group           Data ISID  BVLAN NNI Rcv        UNI Rcvrs         Source-BEB
------------------------------------------------------------------------------------------------
192.168.133.100 239.1.1.1       16000005   4051  -               V2254:1/3          8007
```

17.10.6.5 Verify multicast TLV's

Assuming we have a sender via switch 8007 and receivers via the two SMLT clusters. TLV 185 in relationship to switch 8007 should have the Tx bit set and also send TLV 144 with the Tx bit set. Each multicast group should have its own unique data ISID with a value of 1600000x. The receiver switches (9001, 9002, 8005, and 8006) should have TLV 144 with the Rx bit set.

Step 1 - Verify IP multicast source, group addresses, and Tx bit set on the BEB bridge where the multicast source is located via TLV 185

```
show isis lsdb tlv 185 detail
```

Results: From 4001 persective taken from 8007

```
4001:1#show isis lsdb sysid 00e0.7bb3.07df tlv 185 detail

================================================================================
                              ISIS LSDB (DETAIL)
================================================================================
--------------------------------------------------------------------------------

Level-1 LspID: 00e0.7bb3.07df.00-00     SeqNum: 0x000002de      Lifetime:   981
        Chksum: 0x5251  PDU Length: 443
        Host_name: 8007
        Attributes:     IS-Type 1
TLV:185 SPBM IPVPN :
                VSN ISID:2002254
                BVID    :4051
                        Metric:0 q
                        IP Source Address: 192.168.133.100
                        Group Address    : 239.1.1.1
                        Data ISID        : 16000005
                        TX               : 1
```

Step 2 - Verify on the BEB bridges where the multicast receivers are located via TLV 144, the Rx bit is set with a B-MAC of 03-01-07-00-00-00 (03 indicated multicast while 01-07 is the Nick Name of BEB bridge 8007 with the multicast source). On the BEB bridges where the source is located, the Tx bit should be set

```
show isis lsdb tlv 144 detail
show isis lsdb lspid tlv 144 sub-tlv 3 detail
show isis lsdb lspid <lsp id> tlv 144 detail
show isis lsdb lspid <lsp id> tlv 144 sub-tlv 3 detail
```

Results: Receiver is via SPB bridge 4001

```
4001:1#show isis lsdb sysid d4ea.0e10.e465 tlv 144 sub-tlv 3 detail
================================================================================
                              ISIS LSDB (DETAIL)
================================================================================
--------------------------------------------------------------------------------
|
|
Level-1 LspID: d4ea.0e10.e465.00-05     SeqNum: 0x0000000a      Lifetime:  1121
        Chksum: 0xf575  PDU Length: 49
        Host_name: 4001
        Attributes:     IS-Type 1
TLV:144 SUB-TLV 3       ISID:
                Instance: 0
                Metric: 0
                B-MAC: 03-80-07-00-00-00
                BVID:4051
                Number of ISID's:1
                        16000005(Rx)
```

17.10.6.6 Trace Multicast Routes

On the switch where the multicast sender is located, in our example this would be switch 8007, you can trace the multicast route by specifying the source, group, and VLAN.

Verify all SPB multicast routes

```
l2 tracemroute source <source address> group <group address> vlan <C-VLAN id>
vrf <vrf name>
```

Results: Since the multicast source is via switch 8007, we will use the following command to view the multicast route for group address 239.1.1.1


```
8007:5#l2 tracemroute source 192.168.133.100 group 239.1.1.1 vrf red

Please wait for l2tracemroute to complete or press any key to abort

Source : 192.168.133.100
Group  : 239.1.1.1
VRF    : red  ID 1
BMAC   : 03:80:07:f4:24:05
B-VLAN : 4051
I-SID  : 16000005

================================================================================
1   8007             00:e0:7b:b3:07:df -> 8003             00:80:2d:be:23:df
2   8003             00:80:2d:be:23:df -> 9001             00:01:81:29:1f:df
3   9001             00:01:81:29:1f:df   -> 4001            d4:ea:0e:10:e4:65
3   9001             00:01:81:29:1f:df   -> 4002            a0:12:90:d3:ec:65
```

17.11 SPB IP Shortcuts

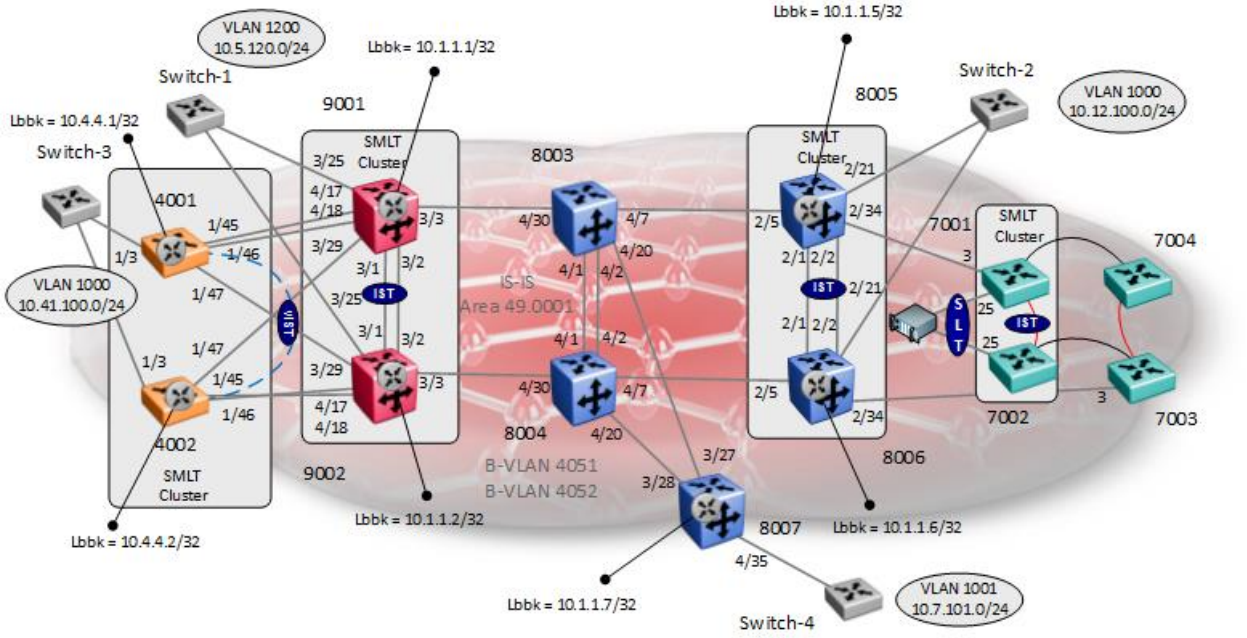

- SPB IP
  - SPB IP parameter must be enabled on BEB bridges 4001, 4002, 9001, 9002, 8005, 8006, and 8007
  - An IS-IS source IP address must be configured (loopback/curcuitless IP address)
- IP Configuration
  - CLIP/Loopback #1 as shown in the above diagram
  - Local VLAN and IP addressing as shown in the above diagram
  - Redistribution of direct interfaces to IS-IS (SPB) on each BEB bridge
    - Please note, on the SMLT cluster, a route policy must be create to deny the IST subnet as by default, all local interfaced will be redistributed into IS-IS unless if you wish to distribute the IST network

This example is a continuation from the base setup used in Section 17.1 and SMLT configuration in Section 17.2.

17.11.1IS-IS Layer 3 configuration

VSP 4000 Switches - Create Loopback IP address for the IS-IS source address and enable SPB IP

4001:

```
4001:1(config)#interface loopback 1
4001:1(config-if)#ip address 10.4.4.1/32
4001:1(config-if)#exit
4001:1(config)#router isis
4001:1(config-isis)#ip-source-address 10.4.4.1
4001:1(config-isis)#spbm 1 ip enable
4001:1(config-isis)#exit
```

4002:

```
4002:1(config)#interface loopback 1
4002:1(config-if)#ip address 10.4.4.2/32
4002:1(config-if)#exit
4002:1(config)#router isis
4002:1(config-isis)#ip-source-address 10.4.4.2
4002:1(config-isis)#spbm 1 ip enable
4002:1(config-isis)#exit
```

VSP 9000 Switches - Create Loopback IP address for the IS-IS source address and enable SPB IP

9001:

```
9001:1(config)#interface loopback 1
9001:1(config-if)#ip address 10.1.1.1/32
9001:1(config-if)#exit
9001:1(config)#router isis
9001:1(config-isis)#ip-source-address 10.1.1.1
9001:1(config-isis)#spbm 1 ip enable
9001:1(config-isis)#exit
```

9002:

```
9002:1(config)#interface loopback 1
9002:1(config-if)#ip address 10.1.1.2/32
9002:1(config-if)#exit
9002:1(config)#router isis
9002:1(config-isis)#ip-source-address 10.1.1.2
9002:1(config-isis)#spbm 1 ip enable
9002:1(config-isis)#exit
```

ERS 8800 Switches - Create Loopback IP address for the IS-IS source address and enable SPB IP

8005:

```
8005:5(config)#interface loopback 1
8005:5(config-if)#ip address 10.1.1.5/32
8005:5(config-if)#exit
8005:5(config)#router isis
8005:5(config-isis)#ip-source-address 10.1.1.5
8005:5(config-isis)#spbm 1 ip enable
8005:5(config-isis)#exit
```

8006:

```
8006:5(config)#interface loopback 1
8006:5(config-if)#ip address 10.1.1.6/32
8006:5(config-if)#exit
8006:5(config)#router isis
8006:5(config-isis)#ip-source-address 10.1.1.6
8006:5(config-isis)#spbm 1 ip enable
8006:5(config-isis)#exit
```

8007:

```
8007:5(config)#interface loopback 1
8007:5(config-if)#ip address 10.1.1.7/32
8007:5(config-if)#exit
8007:5(config)#router isis
8007:5(config-isis)#ip-source-address 10.1.1.7
8007:5(config-isis)#spbm 1 ip enable
8007:5(config-isis)#exit
```

17.11.1.1 Redistribute direct interfaces

For the SMLT cluster switches, we will also add a policy to suppress the IST interface

VSP 4000 Switches - Create Loopback IP address for the IS-IS source address, enable SPB IP, and create route-map to suppress the IST network

4001 and 4002: Same configuration on both switches

```
4001:1(config)#ip prefix-list IST 10.4.2.0/30
4001:1(config)#route-map suppressIST 1
4001:1(route-map)#no permit
4001:1(route-map)#enable
4001:1(route-map)#match network "IST"
4001:1(route-map)#exit
4001:1(config)#route-map suppressIST 2
4001:1(route-map)#enable
4001:1(route-map)#match protocol local
4001:1(route-map)#exit
4001:1(config)#router isis
4001:1(config-isis)#redistribute direct
4001:1(config-isis)#redistribute direct route-map suppressIST
4001:1(config-isis)#redistribute direct enable
4001:1(config-isis)#exit
4001:1(config)#isis apply redistribute direct
```

VSP 9000 Switches - Create Loopback IP address for the IS-IS source address, enable SPB IP, and create route-map to suppress the IST network

9001 and 9002: Same configuration on both switches

```
9001:1(config)#ip prefix-list IST 10.5.2.0/30
9001:1(config)#route-map suppressIST 1
9001:1(route-map)#enable
9001:1(route-map)#match network IST
9001:1(route-map)#exit
9001:1(config)#route-map suppressIST 1 deny
9001:1(config)#route-map suppressIST 2
9001:1(route-map)#enable
9001:1(route-map)#match protocol local
9001:1(route-map)#exit
9001:1(config)#router isis
9001:1(config-isis)#redistribute direct
9001:1(config-isis)#redistribute direct route-map suppressIST
```

```
9001:1(config-isis)#redistribute direct enable
9001:1(config-isis)#exit
9001:1(config)#isis apply redistribute direct
```

8005 and 8006 - Create Loopback IP address for the IS-IS source address, enable SPB IP, and create route policy to suppress the IST network

8005 and 8006: Same configuration on both switches

```
8005:5(config)#ip prefix-list IST 10.2.1.0/30
8005:5(config)#route-map suppressIST 1
8005:5(route-map)#no permit
8005:5(route-map)#enable
8005:5(route-map)#match network IST
8005:5(route-map)#exit
8005:5(config)#route-map suppressIST 2
8005:5(route-map)#enable
8005:5(route-map)#match protocol local
8005:5(route-map)#exit
8005:5(config)#router isis
8005:5(config-isis)#redistribute direct
8005:5(config-isis)#redistribute direct route-map suppressIST
8005:5(config-isis)#redistribute direct enable
8005:5(config-isis)#exit
8005:5(config)#isis apply redistribute direct
```

8007 - Create Loopback IP address for the IS-IS source address and enable SPB IP

8007:

```
8007:5(config)#router isis
8007:5(config-isis)#redistribute direct
8007:5(config-isis)#redistribute direct
8007:5(config-isis)#redistribute direct enable
8007:5(config-isis)#exit
8007:5(config)#isis apply redistribute direct
```

17.11.2ECMP

Enable ECMP using the following command

- ip ecmp

17.11.3 Local VLAN configuration

VSP 4000 Switches - Create local VLAN, add I-SID for the vIST, add IP address to VLAN, and ether enable RSMLT Edge or VRRP with Backup Master. For this example, we will enable RSMLT Edge

4001:

```
4001:1(config)#vlan create 1000 type port-mstprstp 0
4001:1(config)#vlan i-sid 1000 3001000
4001:1(config)#vlan mlt 1000 2
4001:1(config)#interface vlan 1000
4001:1(config-if)#ip address 10.41.100.1 255.255.255.0
4001:1(config-if)#ip rsmlt
4001:1(config-if)#ip rsmlt holdup-timer 9999
4001:1(config-if)#exit
4001:1(config)#ip rsmlt edge-support
```

4002: Same configuration as 4001 except for the IP address

```
4002:1(config-if)#ip address 10.41.100.2 255.255.255.0
```

8005 & 8006 SMLT Cluster Switches

8005:

```
8005:5(config)#vlan create 1000 type port-mstprstp 0
8005:5(config)#vlan members add 1000 2/21
8005:5(config)#interface vlan 1000
8005:5(config-if)#ip address 10.12.100.1 255.255.255.0
8005:5(config-if)#ip rsmlt
8005:5(config-if)#ip rsmlt holdup-timer 9999
8005:5(config-if)#exit
8005:5(config)#ip rsmlt edge-support
```

8006: Same configuration as 8005 except for the IP address

```
8005:5(config-if)#ip address 10.12.100.1 255.255.255.0
```

9001 & 9002 SMLT Cluster Switches

9001 & 9002: Same configuration on both switches

```
9001:1(config)#vlan create 1200 type port-mstprstp 0
9001:1(config)#vlan mlt 1000 2
9001:1(config)#vlan mlt 1000 1
9001:1(config)#interface vlan 1000
9001:1(config-if)#ip address 10.12.100.1 255.255.255.0
9001:1(config-if)#ip rsmlt
9001:1(config-if)#ip rsmlt holdup-timer 9999
9001:1(config-if)#exit
9001:1(config)#ip rsmlt edge-support
```

9002: Same configuration as 9001 except for the IP address

```
9001:1(config-if)#ip address 10.5.120.1 255.255.255.0
```

8007

```
8007:5(config)#vlan create 1001 type port-mstprstp 0
8007:5(config)#vlan members add 1001 4/35
8005:5(config)#interface vlan 1001
8005:5(config-if)#ip address 10.7.101.1 255.255.255.0
8005:5(config-if)#exit
```

17.11.4Verify Operations

17.11.4.1 Verify IP Route Table

Verify IP Routes

```
show ip route
```

Results: From bridge 4001

4001:

```
================================================================================
                            IP Route - GlobalRouter
================================================================================
                                                    NH          INTER
DST              MASK            NEXT               VRF    COST FACE   PROT AGE TYPE PRF
--------------------------------------------------------------------------------
10.1.1.1         255.255.255.255 9001        GlobalRouter     10   4051  ISIS 0   IBSE 7
10.1.1.1         255.255.255.255 9001        GlobalRouter     10   4052  ISIS 0   IBSE 7
10.1.1.2         255.255.255.255 9002        GlobalRouter     10   4051  ISIS 0   IBSE 7
10.1.1.2         255.255.255.255 9002        GlobalRouter     10   4052  ISIS 0   IBSE 7
10.1.1.5         255.255.255.255 8005        GlobalRouter     30   4051  ISIS 0   IBSE 7
10.1.1.5         255.255.255.255 8005        GlobalRouter     30   4052  ISIS 0   IBSE 7
10.1.1.6         255.255.255.255 8006        GlobalRouter     30   4051  ISIS 0   IBSE 7
10.1.1.6         255.255.255.255 8006        GlobalRouter     30   4052  ISIS 0   IBSE 7
10.1.1.7         255.255.255.255 8007        GlobalRouter     30   4051  ISIS 0   IBSE 7
10.1.1.7         255.255.255.255 8007        GlobalRouter     30   4052  ISIS 0   IBSE 7
10.4.4.1         255.255.255.255 10.4.4.1    -                1    0     LOC  0   DB   0
10.4.4.2         255.255.255.255 4002        GlobalRouter     20   4051  ISIS 0   IBSE 7
10.4.4.2         255.255.255.255 4002        GlobalRouter     20   4052  ISIS 0   IBSE 7
10.5.120.0       255.255.255.0   9001        GlobalRouter     10   4051  ISIS 0   IBSE 7
10.5.120.0       255.255.255.0   9002        GlobalRouter     10   4051  ISIS 0   IBSE 7
10.5.120.0       255.255.255.0   9001        GlobalRouter     10   4052  ISIS 0   IBSE 7
10.5.120.0       255.255.255.0   9002        GlobalRouter     10   4052  ISIS 0   IBSE 7
10.7.101.0       255.255.255.0   8007        GlobalRouter     30   4051  ISIS 0   IBSE 7
10.7.101.0       255.255.255.0   8007        GlobalRouter     30   4052  ISIS 0   IBSE 7
10.12.100.0      255.255.255.0   8005        GlobalRouter     30   4051  ISIS 0   IBSE 7
10.12.100.0      255.255.255.0   8006        GlobalRouter     30   4051  ISIS 0   IBSE 7
10.12.100.0      255.255.255.0   8005        GlobalRouter     30   4052  ISIS 0   IBSE 7
10.12.100.0      255.255.255.0   8006        GlobalRouter     30   4052  ISIS 0   IBSE 7
10.41.100.0      255.255.255.0   10.41.100.1  -               1    1000  LOC  0   DB   0


--------------------------------------------------------------------------------
```

```
TYPE Legend:
I=Indirect Route, D=Direct Route, A=Alternative Route, B=Best Route, E=Ecmp Route,
U=Unresolved Route, N=Not in HW, F=Replaced by FTN, V=IPVPN Route, S=SPBM Route
PROTOCOL Legend:
v=Inter-VRF route redistributed
```



To display the B-MAC for the attribute “NEXT”, enter the CLI command *show ip route info spbm-nh-as-mac* or ACLI command *show ip route spbm-nh-as-mac*.

17.11.4.2 Verify IS-IS SPB IP Unicast FIB

Verify IP Routes from remote BEBs

```
show isis spbm ip-unicast-fib
```

Results: From bridge 4001

4001:

```
================================================================================
                        SPBM IP-UNICAST FIB ENTRY INFO
================================================================================
                                                          OUTGOING  SPBM       PREFIX
VRF       ISID    Destination       NH BEB              VLAN INTERFACE COST       COST
--------------------------------------------------------------------------------
GRT       -       10.1.1.1/32       9001                4051 9001      10         1
GRT       -       10.1.1.1/32       9001                4052 9001      10         1
GRT       -       10.1.1.2/32       9002                4051 1/47      10         1
GRT       -       10.1.1.2/32       9002                4052 1/47      10         1
GRT       -       10.1.1.5/32       8005                4051 9001      30         1
GRT       -       10.1.1.5/32       8005                4052 9001      30         1
GRT       -       10.1.1.6/32       8006                4051 1/47      30         1
GRT       -       10.1.1.6/32       8006                4052 1/47      30         1
GRT       -       10.1.1.7/32       8007                4051 9001      30         1
GRT       -       10.1.1.7/32       8007                4052 1/47      30         1
GRT       -       10.4.4.2/32       4002                4051 9001      20         1
GRT       -       10.4.4.2/32       4002                4052 1/47      20         1
GRT       -       10.5.120.0/24     9001                4051 9001      10         1
GRT       -       10.5.120.0/24     9001                4052 9001      10         1
GRT       -       10.5.120.0/24     9002                4051 1/47      10         1
GRT       -       10.5.120.0/24     9002                4052 1/47      10         1
GRT       -       10.7.101.0/24     8007                4051 9001      30         1
```

GRT	-	10.7.101.0/24	8007	4052 1/47	30	1
GRT	-	10.12.100.0/24	8005	4051 9001	30	1
GRT	-	10.12.100.0/24	8005	4052 9001	30	1
GRT	-	10.12.100.0/24	8006	4051 1/47	30	1
GRT	-	10.12.100.0/24	8006	4052 1/47	30	1
GRT	-	10.41.100.0/24	4002	4051 9001	20	1
GRT	-	10.41.100.0/24	4002	4052 1/47	20	1

17.11.4.3 Verify IS-IS Extended IP Reachability TLV (135)

IS-IS uses TLV 135 for extended IP reachability. You can view TLV 135 details by issuing the command shown below.

Verify TLV 135 details

```
show isis lsdb tlv 135 detail
show isis lsdb lspid <isis system id>.00-00 tlv 135 detail
show isis lsdb sysid <isis system id> tlv 135 detail
```

Results: From bridge 8007


4001:

```
4001:1#show isis lsdb lspid 00e0.7bb3.07df.00-00 tlv 135 detail

================================================================================
                              ISIS LSDB (DETAIL)
================================================================================
--------------------------------------------------------------------------------

Level-1 LspID: 00e0.7bb3.07df.00-00     SeqNum: 0x000004f9      Lifetime:  1123
        Chksum: 0xa95b  PDU Length: 425
        Host_name: 8007
        Attributes:     IS-Type 1
TLV:135 TE IP Reachability: 19
                Metric: 1       Prefix Length: 32
                UP/Down Bit: FALSE              Sub TLV Bit: FALSE
                IP Address: 10.1.1.7
                Metric: 1       Prefix Length: 24
                UP/Down Bit: FALSE              Sub TLV Bit: FALSE
                IP Address: 10.7.101.0
```

17.12 Multicast over IP Shortcuts

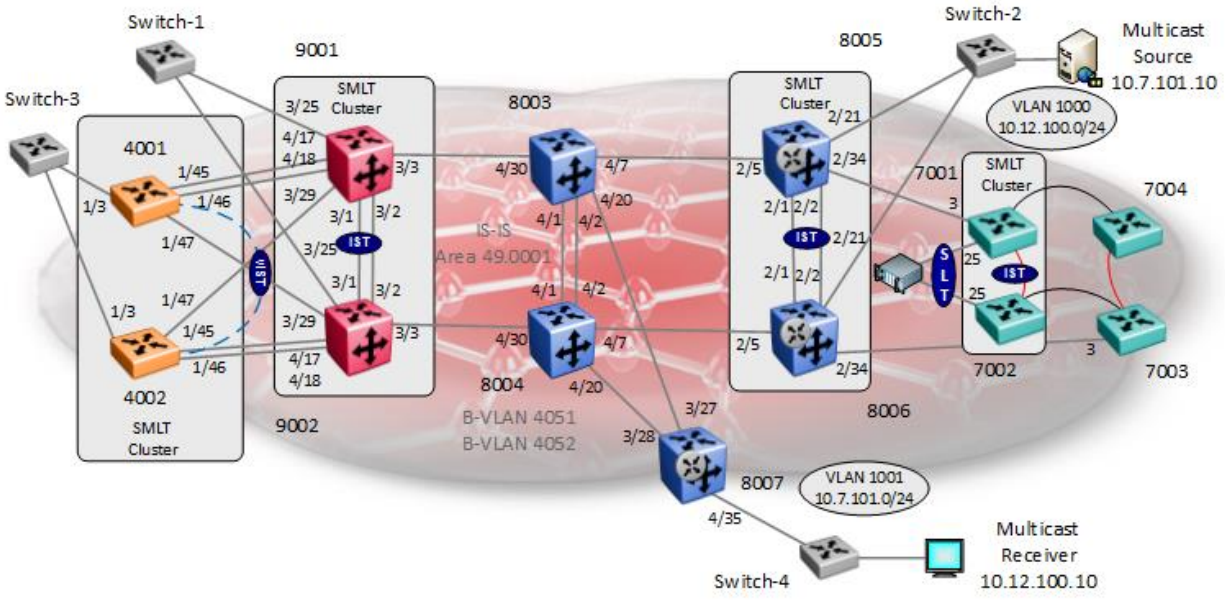

Continuing form example used in Section 17.11, we will simple enable multicast support for IP Shortcuts on all SPB bridges.

17.12.1IP Shortcuts Multicast configuration

Enable IP multicast globally

4001, 4002, 9001, 9002, 8005, 8006, and 8007: Same configuration on all switches

```
8005:5(config)#router isis
8005:5(config-isis)#spbm 1 multicast enable
8005:5(config-isis)#exit
```

17.12.2Enable IP Multicast at VLAN level

Enable IP multicast at VLAN level

4001, 4002, 9001, 9002, 8005, 8006, and 8007: Same configuration on all switches

```
8005:5(config)#interface vlan 1000
8005:5(config-isis)#ip spb-multicast enable
8005:5(config-isis)#exit
--------------------------------------------------------------------------------
Enable IGMPv3 if used, default is IGMPv2
--------------------------------------------------------------------------------
8005:5(config)#interface vlan 1000
8005:5(config-if)#ip igmp version 3
```

Enable IP multicast at VLAN level

4001, 4002, 9001, 9002, 8005, 8006, and 8007: Same configuration on both switches

```
8007:5(config)#interface vlan 1001
8007:5(config-isis)#ip spb-multicast enable
8007:5(config-isis)#exit
--------------------------------------------------------------------------------
Enable IGMPv3 if used, default is IGMPv2
--------------------------------------------------------------------------------
8007:5(config)#interface vlan 1001
8007:5(config-if)#ip igmp version 3
```

17.13 Verify Operations

17.13.1 Global Settings

Verify SPB multicast is enabled

```
show isis spbm multicast
```

Results: From bridge 8007

8007:

```
================================================================================
                                ISIS SPBM Info
================================================================================
SPBM        B-VID       PRIMARY     NICK      LSDB      IP        MULTICAST
INSTANCE                VLAN        NAME      TRAP
--------------------------------------------------------------------------------
1           4051-4052   4051        0.80.07   disable   enable    enable


================================================================================
                             ISIS SPBM SMLT Info
================================================================================
SPBM        SMLT-SPLIT-BEB        SMLT-VIRTUAL-BMAC      SMLT-PEER-SYSTEM-ID
INSTANCE
--------------------------------------------------------------------------------
1           primary               00:00:00:00:00:00
```

17.13.2Verify IGMP cache/group and senders

Assuming the multicast sender connect to Switch-2 (via 8005 and 8006) is sending a multicast stream using a group address of 232.1.1.1 while a receivers off Switch-3 joins this group.

Step 1 - Verify IGMP cache / group

```
show ip igmp cache
show ip igmp group
```

Results: From bridge 8007

8007:

```
8007:5#show ip igmp cache
================================================================================
                          IGMP Cache - GlobalRouter
================================================================================
GRPADDR         INTERFACE  LASTREPORTER    EXPIRYTIME        VERSION1HOSTTIMER  TYPE
STATICPORTS
--------------------------------------------------------------------------------
232.1.1.1       Vlan1001   10.7.101.10     0day,00h:03m:41s  0day,00h:00m:00s   DYNAMIC NULL


1 out of 1 entries displayed


8007:5#show ip igmp group
================================================================================
                          IGMP Group - GlobalRouter
================================================================================
GRPADDR         INPORT          MEMBER          EXPIRATION TYPE
--------------------------------------------------------------------------------
232.1.1.1       V1001-4/35      10.7.101.10     217        Dynamic


1 out of 1 group Receivers displayed
```

Step 2 - Verify IGMP sender

```
show ip sender
```

Results: From 8005 and 8006 – the SPB bridge where the sender is located

```
8005 8006> show ip igmp sender
Response from 8005:
================================================================================
                           IGMP Sender - GlobalRouter
================================================================================
                                          PORT/
GRPADDR         IFINDEX    MEMBER         MLT        STATE
--------------------------------------------------------------------------------
232.1.1.1       Vlan 1000  10.12.100.10   2/21       NOTFILTERED

1 out of 1 entries displayed

Response from 8006:
================================================================================
                           IGMP Sender - GlobalRouter
================================================================================
                                          PORT/
GRPADDR         IFINDEX    MEMBER         MLT        STATE
--------------------------------------------------------------------------------
232.1.1.1       Vlan 1000  10.12.100.10   2/21       NOTFILTERED

1 out of 1 entries displayed
```

17.13.3Verify SPB Multicast Routes

Assuming the multicast sender connect to switch 8007 is sending multicast stream 232.1.1.1 while the receivers joins this group.

Verify IGMP cache / group

```
show isis spbm ip-multicast-route
show isis spbm ip-multicast-route all
show isis spbm ip-multicast-route info detail
show isis spbm ip-multicast-route info group <IP addr>
show isis spbm ip-multicast-route info group <IP addr> detail
show isis spbm ip-multicast-route info group <IP addr> source <ip>
show isis spbm ip-multicast-route info group <IP addr> source <ip> detail
```

Results: From bridge 8007

8007:

```
================================================================================================
                                        SPBM IP-MULTICAST ROUTE INFO
================================================================================================
Source          Group           Data ISID  BVLAN Source-BEB
------------------------------------------------------------------------------------------------
10.12.100.10    232.1.1.1       16000008   4051  8005
10.12.100.10    232.1.1.1       16000009   4052  8006

------------------------------------------------------------------------------------------------
 Total Number of SPBM IP MULTICAST ROUTE Entries: 2
------------------------------------------------------------------------------------------------
```

17.13.4Verify multicast TLV's

Assuming we have a sender via the SMLT cluster 8005 and 8006 and a receiver via 8007. TLV 186 in relationship to switch 8005 & 8006 should have the Tx bit set and also send TLV 144 with the Tx bit set. Each multicast group should have its own unique data ISID with a value of 1600000x. The receiver bridges (8007) should have TLV 144 with the Rx bit set.

Step 1 - Verify IP multicast source, group addresses, and Tx bit set on the BEB bridge where the multicast source is located via TLV 186.

```
show isis lsdb tlv 186 detail
```

Results: From bridge 8007

```
8007:5#show isis lsdb tlv 186 detail
================================================================================
                              ISIS LSDB (DETAIL)
================================================================================
--------------------------------------------------------------------------------

Level-1 LspID: 0024.43b4.e3df.00-00     SeqNum: 0x00000da4      Lifetime:   422
        Chksum: 0xfb52  PDU Length: 903
        Host_name: 8005
        Attributes:     IS-Type 1
TLV:186 SPBM IP Multicast:
                GRT ISID
                        Metric:0
                        IP Source Address: 10.12.100.10
                        Group Address    : 232.1.1.1
                        Data ISID        : 16000008
                        BVID             : 4051
                        TX               : 1
                        Route Type       : Internal


Level-1 LspID: 001e.1f48.f3df.00-00     SeqNum: 0x00001810      Lifetime:   646
        Chksum: 0x8556  PDU Length: 880
        Host_name: 8006
        Attributes:     IS-Type 1
                GRT ISID
                        Metric:0
                        IP Source Address: 10.12.100.10
                        Group Address    : 232.1.1.1
                        Data ISID        : 16000009
```

```
                        BVID            : 4052
                        TX              : 1
                        Route Type      : Internal
```

Step 2 – Verify on the BEB bridges where the multicast receivers are located via TLV 144, the Rx bit is set with a B-MAC of 03-08-05-00-00-00 and 03-08-06-00-00-00 (03 indicated multicast while 08-05 is the Nick Name of BEB bridge 8005 and 08-06 is the Nick Name of the BEB bridge 8006 with the multicast source). On the BEB bridges where the source is located, the Tx bit should be set

```
show isis lsdb tlv 144 detail
show isis lsdb lspid tlv 144 sub-tlv 3 detail
show isis lsdb lspid <lsp id> tlv 144 detail
show isis lsdb lspid <lsp id> tlv 144 sub-tlv 3 detail
```

Results: From bridge 8007

```
8007:5#show isis lsdb lspid 0024.43b4.e3df.00-00 tlv 144 detail
================================================================================
                              ISIS LSDB (DETAIL)
================================================================================
--------------------------------------------------------------------------------

Level-1 LspID: 0024.43b4.e3df.00-00     SeqNum: 0x00000da5      Lifetime:   950
        Chksum: 0xf953  PDU Length: 903
        Host_name: 8005
        Attributes:     IS-Type 1
                Instance: 0
                Metric: 0
                B-MAC: 03-00-00-00-00-00
                BVID:4051
                Number of ISID's:1
                        16000008(Tx)
8007> show isis lsdb lspid 001e.1f48.f3df.00-00 tlv 144 detail
================================================================================
                              ISIS LSDB (DETAIL)
================================================================================
--------------------------------------------------------------------------------

Level-1 LspID: 001e.1f48.f3df.00-00     SeqNum: 0x00001811      Lifetime:  1124
        Chksum: 0x8357  PDU Length: 880
        Host_name: 8006
        Attributes:     IS-Type 1
```

```
                Instance: 0
                Metric: 0
                B-MAC: 03-00-00-00-00-00
                BVID:4052
                Number of ISID's:1
                        16000009(Tx)

8007:5#show isis lsdb lspid 00e0.7bb3.07df.00-00 tlv 144 detail
================================================================================
                              ISIS LSDB (DETAIL)
================================================================================
--------------------------------------------------------------------------------

Level-1 LspID: 00e0.7bb3.07df.00-00     SeqNum: 0x00000504      Lifetime:  1136
        Chksum: 0x4ca2  PDU Length: 461
        Host_name: 8007
        Attributes:     IS-Type 1
TLV:144 SUB-TLV 1       SPBM INSTANCE:
                Instance: 0
                Metric: 0
                B-MAC: 03-08-05-00-00-00
                BVID:4051
                Number of ISID's:1
                        16000008(Rx)


                Instance: 0
                Metric: 0
                B-MAC: 03-08-06-00-00-00
                BVID:4052
                Number of ISID's:1
                        16000009(Rx)
```

17.13.5Trace Multicast Routes

On the switch where the multicast sender is located, in our example this would be switch 8005 and 8006, you can trace the multicast route by specifying the source, group, and VLAN.

Verify all SPB multicast routes

```
l2 tracemroute source <source address> group <group address> vlan <C-VLAN id>
```

Results: From bridge 8007

```
8005 8006> l2 tracemroute source 10.12.100.10 group 232.1.1.1
Response from 8005:
 Please wait for l2tracemroute to complete or press any key to abort
Source : 10.12.100.10
Group  : 232.1.1.1
VRF    : GRT  ID 0
BMAC   : 03:08:05:f4:24:08
B-VLAN : 4051
I-SID  : 16000008
================================================================================
1   8005             00:24:43:b4:e3:df -> 8003             00:80:2d:be:23:df
2   8003             00:80:2d:be:23:df -> 8007             00:e0:7b:b3:07:df

Response from 8006:
 Please wait for l2tracemroute to complete or press any key to abort
Source : 10.12.100.10
Group  : 232.1.1.1
VRF    : GRT  ID 0
BMAC   : 03:08:06:f4:24:09
B-VLAN : 4052
I-SID  : 16000009
================================================================================
1   8006             00:1e:1f:48:f3:df -> 8004             00:e0:7b:bc:23:df
2   8004             00:e0:7b:bc:23:df -> 8007             00:e0:7b:b3:07:df
```

18. Restrictions and Limitations

18.1 STP/RSTP/MSTP

- SPB is not supported in RSTP mode
- C-VLAN level loop across SPB NNI ports can't be detected and need to be solved at provisional level.
- SPB NNI ports are not part of L2VSN C-VLAN and BPDU are not transmitted over the SPB tunnel. SPB can only guarantee loop-free topologies consisting of the NNI ports.
- SPB uses STG/MSTI 62 internally so 62 can't be used by other VLAN/MSTI. If STG/MSTI 62 is used in the configuration on non-SPB customer network, then STG/MSTI 61 is used internally.
- When an ISIS interface is created, MSTP is automatically disabled for MSTI-62 allowing traffic for the B-VLAN to be forwarded and not blocked. This also allows traffic for other VLANs other than the BVLANs to co-exist with SPBM on the same interface.
- SPB B-VLANs need to be configured on all bridges as well in the same MSTP region. This is required by MSTP itself to generate the correct digest. In MSTP mode, when a C-VLAN is created on the BEB, make sure the same VLAN is created on all switches in the same MSTP region to have correct digest.

18.2 SPB IS-IS

- IP IS-IS

IP over IS-IS is not supported. IS-IS protocol is only to facilitate SPB.

- Level 1 IS-IS Only

SPB only use level 1 IS-IS. Level 2 IS-IS is currently not supported.

- Wide Metric Only

IS-IS standard defines wide (32bit) metric and narrow (8 bits) metrics. Only wide metric is supported.

- IS-IS HA – ERS 8800 and VSP 9000

SPB support full HA (High Availability). SPB and IS-IS configuration and dynamic information (adjacencies, LSPs etc.) are all HA synced to the standby CPU to ensure seamless switchover.

Switching between the CPUs is very quick - there is a sub-second second gap between the active CPU down and the standby CPU up.

To avoid IS-IS adjacencies bounce during switchover, the default hello interval value of 9 seconds and hello multiple of 3 are good for most normal configurations. They may need to be increased depending on overall system load.

- IS-IS sys-name

By default, the IS-IS sys-name is derived from the global system name setting. If you do set the IS-IS sys-name parameter, please ensure that a different value from the global system name is used.

19. Reference Documentation

Document Title	Publication Number	Description

© 2015 Avaya Inc. All Rights Reserved.

Avaya and the Avaya Logo are trademarks of Avaya Inc. and are registered in the United States and other countries. All trademarks identified by ®, TM or SM are registered marks, trademarks, and service marks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners. Avaya may also have trademark rights in other terms used herein. References to Avaya include the Nortel Enterprise business, which was acquired as of December 18, 2009.