

ExtremeWireless 802.11ax Wi-Fi 6E AP3000 Indoor Access Point

AP3000 Overview

The AP3000 access point is an indoor model 802.11ax Wi-Fi 6E access point. The AP3000 comes with internal antennas, built-in dual-band radios, two band-locked radios, four dual-band WiFi internal antennas, and one Thread®; Zigbee®; Bluetooth® Low Energy (BLE®) antenna.

The AP3000 can be mounted on a flat surface such as a wall, solid flat ceiling, to a junction box or a gang box, and can be installed on a suspended ceiling or a drop ceiling.

The AP3000 access point has the following features:

- Radios:
 - Two 802.11ax radios (2X2 2.4GHz, 2X2 6 GHz radio, and 2X2 5 GHz radio)
 - One IoT Radio (2.4 GHz)
- Console port: Micro USB
- Two Ethernet ports (ETH0 and ETH1)
 - ETH0: 2500/1000/100 Mbps auto-negotiation Ethernet port, RJ45, Power over Ethernet (PoE) at 802.3at
 - ETH1: 1000/100/10 Mbps, RJ45
- One bi-color status light
- One reset button
- One Kensington lock
- One USB 2.0 type A connector
- Power: PoE 802.3af and 802.3at (see [Table 1](#) for details)
- Antennas: Four Wi-Fi internal antennas and one Thread®; Zigbee®; Bluetooth® 5.3 Low Energy; IEEE 802.15.4
- Operating temperature: 0°C to +50°C (32°F to +122°F)
- Storage temperature -40°C to +70°C (-40°F to +158°F)
- Relative humidity: 0% to 95% non-condensing

Table 1 AP3000 Power source

Power source	Description
Power over Ethernet (PoE)	Power is provided through the 2.5G Ethernet port of AP3000, compliant to be powered with 802.3af to provide full functionality without USB. To enable USB, use 802.3at.
External 12V DC power supply (optional; ordering part #37215-PWR 12VDC/2A, 2.5mm x 5.5mm connector)	Power is provided through an external DC power supply plugged into an AC source.

Figure 1 Top view of AP3000



Figure 2 AP3000 access point hardware components

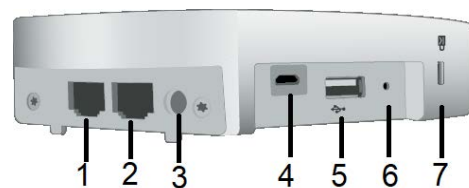


Table 2 Side ports on the AP3000 access point

Callout	Description
1	ETH0/PoE+
2	ETH1
3	12VDC
4	Console port
5	USB port
6	Reset button
7	Kensington security slot

Status LED Activity Description

The access point has one status light on top of the chassis. The status light conveys operational states for system power, firmware updates, Ethernet and wireless interface activity, and major alarms.

IQ Engine Status LED Activity

- Dark: Power is off.
- Solid white: The device power is on and the access point is ready to use. The device has successfully established a Control And Provisioning of Wireless Access Points (CAPWAP) connection to **ExtremeCloud IQ** and is operating normally.
- Slow-blinking white: The device has a CAPWAP connection to **ExtremeCloud IQ**, but is operating on 802.3af power instead of 802.3at power.
- Solid amber: The device power is on and the access point is in boot up mode, or is running without a CAPWAP connection.
- Slow-blinking amber: The device has no CAPWAP connection to **ExtremeCloud IQ**, and is operating on 802.3af power instead of 802.3at power.
- Fast-blinking amber: The device is updating its IQ Engine firmware.

ExtremeCloud IQ Controller Status LED Activity

- Dark: Power is off or the LED has been turned off.
- Solid white: The device is booting or already taken over by the controller.
- Slow-blinking white: The device is in the process of being taken over by the controller or has failed to be taken over by the controller.
- Flashing fading white: Configuration pushes down to access point from controller helping an user to locate the access point location using visual inspection.
- Solid amber: The access point is upgrading its firmware.
- Fast-blinking amber: The access point is acquiring DHCP IP

Micro USB Console Ports

Through the console port, you can make a serial connection between your management system and the access point. Use the SKU ACC-WIFI-MICRO-USB when you order the Micro USB cable.

Note: The best practice is to use the Extreme Networks micro USB cable (part number ACC-WIFI-MICRO-USB). When you connect to the device using the micro USB Console port, the management station from which you connect to the device must have a VT100 emulation program, such as TeraTerm Pro (a free terminal emulator) or Hilgraeve HyperTerminal. Set your baud rate to 115200.

AP3000 Box Contents

Ensure that the following items shipped with your access point.

Table 3 Contents of the AP3000 Box

Quantity	Item
1	AP3000 access point
1	AP3000 Quick Reference
1	AH-ACC-BKT-AX-TB mounting bracket
2	Phillips pan head wood screws
2	Screw-in anchors

All optional brackets and accessories are sold separately. For detailed installation instructions about all mounting procedures, refer to the *ExtremeWireless Access Point AP3000 Installation Guide* in the [Extreme Networks Documentation Support](#) site.

Install the Access Point

Electrical Hazard: Only qualified personnel should perform installation procedures.

Use these instructions as guidelines for mounting and connecting the AP3000 access point easily and safely. The AP3000 comes with the AH-ACC-BKT-AX-TB mounting bracket that can be used to mount the access point on flat surfaces such as solid flat ceilings or wood walls.

Note: The mounting procedures for installing the access point on non-standard ceilings are covered in the *ExtremeWireless Access Point AP3000 Installation Guide*.

Install the Access Point on a Wall or a Flat Ceiling

Use the AH-ACC-BKT-AX-TB mounting bracket for flat surface wall or solid ceiling installation.

Pre-installation checklist:

The following hardware is required for installing the AH-ACC-BKT-AX-TB accessory on a wall or a solid ceiling:

- An AP3000 access point
- One AH-ACC-BKT-AX-TB mounting bracket. The bracket can be used with 15/16-inch T-bar.
- Two M3.5 pan head wood screws and two screw-in anchors

Note: The wood screws and screw-in anchors come in a separate plastic bag.

Follow these steps when you install the access point on a wall or solid ceiling

- Using the AH-ACC-BKT-AX-TB mounting bracket as a template, mark and drill two mounting holes.
- Attach the bracket to the wall using two M3.5 pan head wood screws. Use push-in anchors or screw-in anchors for drywall or plastic board installations on vertical walls.

Note: Screw-in anchors must be used for ceiling installations.

- Attach the access point to the bracket by aligning the red dot on the bracket and the access point.
- Press and rotate the access point 1/8 turn clockwise until it clicks into place on the accessory.

Note: For wall installation, the 'E' logo must be on the left side of the access point as shown in [Figure 1](#).

- Attach the Cat5e RJ45 cable to the ETH0 port on the access point.

Install the Access Point on a Non-Standard Ceiling Grid or a Wall

For non-standard ceiling grid installation or wall installation instructions, refer to the *Wi-Fi 6 802.11ax Access Points Accessories Guide*. The access point can be installed on a non-standard ceiling grid using the following accessories:

Table 4 Non-standard ceiling grid and wall accessories information

Bracket part number	Description
AH-ACC-BKT-AX-TB	Mounting bracket for Prelude ceilings (15/16 in. ceiling grid), Suprafine ceilings (9/16 in. ceiling grid), and walls. The ceiling tile sides must be flat
AH-ACC-BKT-AX-IL	Mounting bracket for Interlude (9/16 wide T-bar with protrusion) ceilings
AH-ACC-BKT-AX-SL	Mounting bracket for Silhouette ceilings (ceiling grid with 1/8 in. or 1/4 in. bottom opening)
ACC-BKT-AX-JB	Junction box or wall mounting for indoor access points
ACC-BKT-AX-BEAM	Beam mounting for indoor access points
AH-ACC-BKT-AX-WL	Mounting bracket for direct-to-wall installations when a 1.25 inches of space is desired between the wall and the access point

Note: The default bracket for wall installation is the ACC-BKT-AX-TB bracket. Order the -TB bracket for new wall installations.

Lock the Access Point after Installation (Optional)

Use the Kensington lock on the side of the access point to secure the AP. The lock prevents someone from removing the AP from the mounting accessory.

Connect a Power Supply

If you need to power the AP3000 access point with an external 12V DC power supply, you can plug the power cord into the power connector on the back of the access point by the RJ-45 connector (see [Table 2](#)).

There is no wall mount for the 12V DC power supply. The power LED on the front face of the access point is lit when the power supply is connected. For information about optional power supplies, refer to the *ExtremeWireless Access Point AP3000 Installation Guide*.

Professional Installation Instruction Installation personnel

This product is designed for specific application and needs to be installed by a qualified personnel who has RF and related rule knowledge. The general user shall not attempt to install or change the setting.

Installation procedure

Refer to the *ExtremeWireless Access Point AP3000 Installation Guide*.

Warning: Select the installation position and ensure that the final output power does not exceed the limit set forth in relevant rules. The violation of the rule could lead to serious federal penalty.

Instructions d'installation professionnelle Installation

Ce produit est destine a un usage specifique et doit etre installe par un personnel qualifie maitrisant les radiofrequences et les regles s'y rapportant. L'installation et les réglages ne doivent pas etre modifiés par l'utilisateur final.

Procédure d'installation

Consulter le manuel d'utilisation *ExtremeWireless Access Point AP3000 Installation Guide*.

Warning: Avertissement: Choisir avec soin la position d'installation et s'assurer que la puissance de sortie ne depasse pas les limites en vigueur. La violation de cette regle peut conduire a de serieuses penalites federales.

Regulatory and Compliance Information Safety Guidelines

This section contains notices that are intended to protect your personal safety and to prevent damage to the equipment.

Qualified Personnel:

Electrical Hazard: Only qualified personnel should perform installation procedures. Within the context of the safety notes in this documentation, qualified persons are defined as persons who are authorized to commission, ground and label devices, systems, and circuits in accordance with established safety practices and standards. A qualified person understands the requirements and risks involved with installing outdoor electrical equipment in accordance with national codes.

Federal Communications Commission (FCC) Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

! Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Operation in the band 5925-7125 MHz subject to, (1) FCC regulations restrict the operation of this device to indoor use only, (2) the operation of this device is prohibited on oil platforms, cars, trains, boats, and aircraft, except that operation of this device is permitted in large aircraft while flying above 10,000 feet, and (3) operation of transmitters in the 5.925 GHz - 7.125 GHz band is prohibited for control of or communications with unmanned aircraft systems.


! Warning: FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 47 cm between the radiator and your body.

Conformité Européenne (CE) Information

! Warning: CE co-location MPE Statement: This equipment complies with CE radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

The device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

Selling Countries:

	AT	BE	BG	HR	CY	CZ	DK
	EE	FI	FR	DE	EL	HU	IE
	IT	LV	LT	LU	MT	NL	PL
	PT	RO	SK	SI	ES	SE	UK (NI)

CE Marking and European Area (EEA)

! Warning: This is a Class B product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Other Countries

Brazil

Este produto está homologado pela ANATEL, de acordo com os procedimentos regulamentados pela Resolução nº. 242/2000 e atende aos requisitos técnicos aplicados. Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores informações, consulte o site da ANATEL - www.anatel.gov.br

Mexico Compliance Statement

La operacion de este equipo esta sujeta a las siguientes dos condiciones
 1 es posible que este equipo o dispositivo no cause interferencia perjudicial y
 2 este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operacion no deseada.

The operation of this equipment is subject to the following two conditions:
 1 It is possible that this equipment or device does not cause disruptive interference and
 2 This equipment or device must accept any interference, including interference that may cause undesired operation.

Extreme Networks EU Importer Address

Extreme Networks, Ireland Ops Ltd.
 Rineanna House Shannon Industrial Estate
 Shannon, V14CA36 Ireland

Extreme Networks, UK Ltd.

250 Longwater Avenue Green Park
 1st Floor
 Reading, UK

UK Statement and CE Statement

This equipment complies with the UK and EEA radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. The frequency and the maximum transmitted power in the UK and European Conformity are listed below:

CE	UK
2400-2483.5 MHz: 19.98 dBm	2400-2483.5 MHz: 19.98 dBm
2400-2483.5 MHz (802.15.4): 8.03dBm	2400-2483.5 MHz (802.15.4): 8.03 dBm
2400-2483.5 MHz (BLE®): 8.0 dBm	2400-2483.5 MHz (BLE®): 8.0 dBm
5150-5725 MHz: 29.96 dBm	5150-5725 MHz: 29.96 dBm
5725-5850 MHz: 13.97 dBm	5720-5850 MHz: 29.97 dBm
5945-6425 MHz: 22.99 dBm	5945-6425 MHz: 22.99 dBm

CE - The device is restricted to indoor use only when operating in the 5945 to 6425 MHz frequency range.

UK - The device is restricted to indoor use only when operating in the 5945 to 6425 MHz frequency range.

Hereby, Extreme Networks declares that the radio equipment AP3000-WW is in compliance with Radio Equipment Regulations 2017. Operation on oil platforms, cars, trains, boats, and aircraft shall be prohibited except for on large aircraft flying above 10,000 ft. For full text of the UK Declaration of Conformity, please contact Extreme Regulatory Compliance at compliancerequest@extremenetworks.com.

Industry Canada Notice

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation in the band 5925 to 7125 MHz subject to the following two conditions: (1) IC regulations restrict the operation of this device to indoor use only, and (2) the operation of this device is prohibited on oil platforms, cars, trains, boats, and aircraft, except that operation of this device is permitted in large aircraft while flying above 10,000 feet.

Cet appareil contient un ou des émetteurs/récepteurs exempts de licence conformes aux RSS exempts de licence d'Innovation, Sciences et Développement économique Canada.

Fonctionnement dans la bande 5925 à 7125 MHz sous réserve des deux conditions suivantes: (1) Les réglementations de la IC limitent le fonctionnement de cet appareil à une utilisation en intérieur uniquement, et (2) le fonctionnement de cet appareil est interdit sur les plates-formes pétrolières, les voitures, les trains, les bateaux et les avions, sauf que le fonctionnement de cet appareil est autorisé dans de grandes avion en vol au-dessus de 10 000 pieds..

! Caution: The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

! Caution: Avertissement: les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

RSS-247 (6.4)

Where applicable, antenna types, antenna models, and worst-case tilt angles necessary to remain compliant with the e.i.r.p. elevation mask requirement set forth in section 6.2.2.3 shall be clearly indicated.

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- 1 This device may not cause interference.
- 2 This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1 L'appareil ne doit pas produire de brouillage;
- 2 L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

! Caution: This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment must be installed and operated with minimum distance 28 cm between the radiator and your body.

! Caution: Avertissement:Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 28cm de distance entre la source de rayonnement et votre corps.

Taiwan Regulatory Statement

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。
 本器材須經專業工程人員安裝及設定，始得設置使用，且不得直接販售給一般消費者。
 無線資訊傳輸設備避免影響附近雷達系統之操作。

請至此連結閱讀中文說明: <https://www.extremenetworks.com/support/documentation/>.

European Waste Electrical and Electronic Equipment (WEEE) Notice



In accordance with Directive 2012/19/EU of the European Parliament on waste electrical and electronic equipment (WEEE):

- 1 The symbol above indicates that separate collection of electrical and electronic equipment is required.
- 2 When this product has reached the end of its serviceable life, it cannot be disposed of as unsorted municipal waste. It must be collected and treated separately.

- 3 It has been determined by the European Parliament that there are potential negative effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment.
- 4 It is the users' responsibility to utilize the available collection system to ensure WEEE is properly treated. For information about the available collection system, please contact Extreme Environmental Compliance at Green@extremenetworks.com.

Supplement to Product Instructions

單元 Unit	限制物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁶⁺)	多溴聯苯 Polybrominated biphenyls (PBBs)	多溴二苯醚 Polybrominated diphenyl ethers (PBDEs)
金屬零件 (Metal Parts)	○	○	○	○	○	○
電路模組 (Circuit Modules)	—	○	○	○	○	○
電纜及電纜組件 (Cables & Cable Assemblies)	○	○	○	○	○	○
塑料和聚合物零件 (Plastic and Polymeric parts)	○	○	○	○	○	○

備考1: "超出0.1 wt%" 及 "超出0.01 wt%" 係指限制物質之百分比含量超出百分比含量基準值。
 Note 1: "Exceeding 0.1 wt%" and "exceeding 0.01 wt%" indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.
 備考2: "○" 係指該項限制物質之百分比含量未超出百分比含量基準值。
 Note 2: "○" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.
 備考3: "—" 係指該項限制物質為排除項目。
 Note 3: The "-" indicates that the restricted substance corresponds to the exemption.

Declaration of Conformity in Languages of the European Community

English Hereby, Extreme Networks, declares that the radio equipment type (AP3000-WW) is in compliance with Directive 2014/53/EU. For full text of the EU Declaration of Conformity, please contact Extreme Regulatory Compliance at compliancerequest@extremenetworks.com

Finnish Täten Extreme Networks vakuuttaa, että Radio laite tyyppi (AP3000-WW) on direktiivin 2014/53/EU mukainen.EU vaatimustenmukaisuusvakuutuksen täydellisestä tekstistä ota yhteyttä äärimmäisiin viranomais säädöksiin osoitteessa compliancerequest@extremenetworks.com

Dutch Extreme Networks verklaart hierbij dat het type radioapparaatuur (AP3000-WW) in overeenstemming is met richtlijn 2014/53/EU.Voor de volledige tekst van de EU-conformiteitsverklaring u contact opnemen met extreme regelgeving op compliancerequest@extremenetworks.com

French Par la présente, Extreme Networks déclare que le type d'équipement radio (AP3000-WW) est conforme à la directive 2014/53/UE.Pour le texte intégral de la Déclaration de conformité de l'UE, veuillez communiquer avec Extreme Regulatory Compliance à compliancerequest@extremenetworks.com

Swedish Härmed intygar Extreme Networks att radioutrustning typ (AP3000-WW) överensstämmer med direktiv 2014/53/EU.För fullständig text av EU-försäkran om överensstämmelse, vänligen kontakta Extreme regelfletterlevnad på compliancerequest@extremenetworks.com

Danish Herved erklærer Extreme Networks, at radioudstyrs typen (AP3000-WW) er i overensstemmelse med direktiv 2014/53/EU.For den fulde ordlyd af EU-overensstemmelseserklæringen bedes du kontakte Extreme Regulatory Compliance på compliancerequest@extremenetworks.com

German Dabei erklárt Extreme Networks, dass der Funkgerátetyp (AP3000-WW) mit der Richtlinie 2014/53/EU im Einklang steht.Für den vollständigen Wortlaut der EU-Konformitätserklärung wenden Sie sich bitte an extreme Regulatory Compliance unter compliancerequest@extremenetworks.com

Greek Με την παρούσα, ακραία δίκτυα δηλώνουν ότι ο τύπος του ραδιοεξοπλισμού (AP3000-WW) συμμορφώνεται με την οδηγία 2014/53/EE.Για το πλήρες κείμενο της δήλωσης συμμόρφωσης EE, παρακαλούμε επικοινωνήστε με την ακραία κανονιστική συμμόρφωση στο compliancerequest@extremenetworks.com

Icelandic Hérleendis, Extreme Networks, lýsa því yfir að útværpsbúnaðargerðin (AP3000-WW) sé í samræmi við tilskipun 2014/53/ESB.Fyrir fullan texta í ESB yfirlysingum samræmi, vinsamlegast hafðu samband við Extreme Reglufylgni á compliancerequest@extremenetworks.com

Italian Di conseguenza, Extreme Networks dichiara che il tipo di apparecchiature radio (AP3000-WW) è conforme alla direttiva 2014/53/EU.Per il testo integrale della Dichiarazione di conformità dell'UE, contattate Extreme Regulatory Compliance presso compliancerequest@extremenetworks.com

Spanish Por la presente, Extreme Networks declara que el tipo de equipo radioeléctrico (AP3000-WW) cumple con la Directiva 2014/53/UE.Para obtener el texto completo de la Declaración de conformidad de la UE, póngase en contacto con Extreme Regulatory Compliance en compliancerequest@extremenetworks.com

Portuguese Por este meio, a Extreme Networks declara que o tipo de equipamento de rádio (AP3000-WW) está em conformidade com a Diretiva 2014/53/UE.Para obter o texto integral da Declaração de Conformidade da UE, contacte o cumprimento regulamentar extremo em compliancerequest@extremenetworks.com

Malti B' dan, netwerks estremi, jiddikjara li t-tip ta ' taghmir tar-radju (AP3000-WW) huwa konformi mad-Direttiva 2014/53/UE.Ghat-test shih tad-dikjarazzjoni ta ' konformità tal-UE, jekk joghgbok ikkuntattja lill-konformità regulatorja compliancerequest@extremenetworks.com

Extreme Wireless™ Indoor Access Point

Quick Reference

AP3000

Scan to Download the ExtremeCloud IQ Companion Mobile Application

Commission, monitor, and troubleshoot devices easily with **ExtremeCloud IQ Companion** Mobile Application (supported on iOS and Android). Use your mobile device camera to scan the serial number, capture installation images, assign or change device location, and network policy. The **ExtremeCloud IQ Companion** Mobile Application enables you to access the device CLI for troubleshooting and view device and client status.



ExtremeCloud IQ Companion
iOS Mobile Application



ExtremeCloud IQ Companion
Android Mobile Application

Scan for Product Support Details



ExtremeCloud IQ Companion
Mobile Application Onboarding



Documentation

Notice

Copyright © 2023 Extreme Networks, Inc. All Rights Reserved.

Legal Notices

Extreme Networks, Inc. reserves the right to make changes in specifications and other information contained in this document and its website without prior notice. The reader should in all cases consult representatives of Extreme Networks to determine whether any such changes have been made.

The hardware, firmware, software or any specifications described or referred to in this document are subject to change without notice.

Trademarks

Extreme Networks and the Extreme Networks logo are trademarks or registered trademarks of Extreme Networks, Inc. in the United States and/or other countries.

All other names (including any product names) mentioned in this document are the property of their respective owners and may be trademarks or registered trademarks of their respective companies/owners.

For additional information on Extreme Networks trademarks, please see: www.extremenetworks.com/company/legal/trademarks/

Documentation, Installation Videos, and Support

For product support, including Documentation and Installation Videos, visit: www.extremenetworks.com/documentation

