

53-1003033-02
9 December, 2013



Multi-Service IronWare

Routing Configuration Guide

Supporting Multi-Service IronWare R05.6.00

BROCADE

Copyright © 2013 Brocade Communications Systems, Inc. All Rights Reserved.

ADX, AnyIO, Brocade, Brocade Assurance, the B-wing symbol, DCX, Fabric OS, ICX, MLX, MyBrocade, OpenScript, VCS, VDX, and Vyatta are registered trademarks, and HyperEdge, The Effortless Network, and The On-Demand Data Center are trademarks of Brocade Communications Systems, Inc., in the United States and/or in other countries. Other brands, products, or service names mentioned may be trademarks of their respective owners.

Notice: This document is for informational purposes only and does not set forth any warranty, expressed or implied, concerning any equipment, equipment feature, or service offered or to be offered by Brocade. Brocade reserves the right to make changes to this document at any time, without notice, and assumes no responsibility for its use. This informational document describes features that may not be currently available. Contact a Brocade sales office for information on feature and product availability. Export of technical data contained in this document may require an export license from the United States government.

The authors and Brocade Communications Systems, Inc. shall have no liability or responsibility to any person or entity with respect to any loss, cost, liability, or damages arising from the information contained in this book or the computer programs that accompany it.

The product described by this document may contain "open source" software covered by the GNU General Public License or other open source license agreements. To find out which open source software is included in Brocade products, view the licensing terms applicable to the open source software, and obtain a copy of the programming source code, please visit <http://www.brocade.com/support/oscd>.

Brocade Communications Systems, Incorporated

Corporate and Latin American Headquarters
Brocade Communications Systems, Inc.
130 Holger Way
San Jose, CA 95134
Tel: 1-408-333-8000
Fax: 1-408-333-8101
E-mail: info@brocade.com

Asia-Pacific Headquarters
Brocade Communications Systems China HK, Ltd.
No. 1 Guanghua Road
Chao Yang District
Units 2718 and 2818
Beijing 100020, China
Tel: +8610 6588 8888
Fax: +8610 6588 9999
E-mail: china-info@brocade.com

European Headquarters
Brocade Communications Switzerland Sàrl
Centre Swissair
Tour B - 4ème étage
29, Route de l'Aéroport
Case Postale 105
CH-1215 Genève 15
Switzerland
Tel: +41 22 799 5640
Fax: +41 22 799 5641
E-mail: emea-info@brocade.com

Asia-Pacific Headquarters
Brocade Communications Systems Co., Ltd. (Shenzhen WFOE)
Citic Plaza
No. 233 Tian He Road North
Unit 1308 - 13th Floor
Guangzhou, China
Tel: +8620 3891 2000
Fax: +8620 3891 2111
E-mail: china-info@brocade.com

Document History

Title	Publication number	Summary of changes	Date
<i>Multi-Service IronWare Routing Configuration Guide</i>	53-1003033-01	Release 05.5.00c document updated with enhancements in Release 05.6.00	30 September, 2013
<i>Multi-Service IronWare Routing Configuration Guide</i>	53-1003033-02	Release 05.6.00 document updated with enhancements in Release 05.6.00a	9 December, 2013

Contents

About This Document

Audience	xxiii
Supported hardware and software	xxiv
Supported software	xxiv
Document conventions	xxv
Text formatting	xxv
Notes, cautions, and danger notices	xxv
Notice to the reader	xxvi
Related publications	xxvi
Getting technical help or reporting errors	xxvii

Chapter 1

BGP (IPv4)

Overview of BGP4	4
Relationship between the BGP4 route table and the IP route table	4
How BGP4 selects a path for a route (BGP best path selection algorithm)	5
BGP4 message types	7
Implementation of BGP4	9
Memory considerations	9
Grouping of RIB-out peers	10
BGP4 Restart	10
BGP4 Peer notification during a management module switchover	11
BGP4 neighbor local AS	12
BGP4 null0 routing	13
Configuring BGP4	14
Enabling and disabling BGP4	18
Disabling BGP4	18
Entering and exiting the address family configuration level	19
Aggregating routes advertised to BGP4 neighbors	19
Configuring the device to always compare Multi-Exit Discriminators	20
Disabling or re-enabling comparison of the AS-Path length	21
Redistributing IBGP routes	21

BGP router reflector	21
Configuring BGP router reflector	22
Disabling or re-enabling client-to-client route reflection	25
Configuring a route reflector	25
Enabling or disabling comparison of device IDs	26
Configuring confederations	26
Four-byte Autonomous System Numbers (AS4)	29
Enabling AS4 numbers	30
BGP4 AS4 attribute errors	34
Error logs	34
Specifying a maximum AS path length	35
Setting a global maximum AS path limit	36
Setting a maximum AS path limit for a peer group or neighbor	36
BGP4 max-as error messages	36
Configuring route flap dampening	37
Originating the default route	38
Changing the default local preference	38
Changing the default metric used for redistribution	39
Changing the default metric used for route cost	39
Changing administrative distances	39
Requiring the first AS to be the neighbor AS	40
Enabling fast external fallover	42
Setting the local AS number	42
Setting the local AS number for VRF instances	42
Configuring BGP4 multipath load sharing	43
Customizing BGP4 multipath load sharing	44
Enhancements to BGP4 load sharing	44
Configuring a static BGP4 network	45
Configuring paths without MEDs as the least favorable	46
Configuring BGP4 neighbors	47
Auto shutdown of BGP4 neighbors on initial configuration	52
Removing route dampening from suppressed routes	53
Encrypting BGP4 MD5 authentication keys	54
Advertising IPv4 routes between IPv6 BGP peers	56
Configuring a BGP4 peer group	60
Peer group parameters	60
Administratively shutting down a session with a BGP4 neighbor ..	63
Specifying a list of networks to advertise	63

Using the IP default route as a valid next-hop for a BGP4 route	64
Enabling next-hop recursion	65
Modifying redistribution parameters	67
Using a table map to set the tag value	70
Changing the Keep Alive Time and Hold Time	71
Changing the BGP4 next-hop update timer	71
Changing the device ID	71
Adding a loopback interface	72
Changing the maximum number of paths for BGP4 load sharing	73
Configuring route reflection parameters	73
Filtering	76
Filtering AS-paths	76
Filtering communities	78
Defining and applying IP prefix lists	80
Defining neighbor distribute lists	81
Defining route maps	81
Route-map continue clauses for BGP4 routes	91
Specifying route-map continuation clauses	91
Dynamic route filter update	93
Configuring cooperative BGP4 route filtering	96
Configuring route flap dampening	98
Generating traps for BGP4	102
Updating route information and resetting a neighbor session	103
Clearing traffic counters	109
Clearing route flap dampening statistics	109
Removing route flap dampening	110
Clearing diagnostic buffers	110
Configuring BGP4 Restart	111
Configuring BGP4 null0 routing	112
Generalized TTL Security Mechanism support	116

Displaying BGP4 information	117
Displaying summary BGP4 information	117
Displaying the active BGP4 configuration	120
Displaying summary neighbor information	120
Displaying BGP4 neighbor information.....	122
Displaying peer group information	131
Displaying summary route information	131
Displaying the BGP4 route table.....	132
Displaying BGP4 route-attribute entries.....	139
Displaying the routes BGP4 has placed in the IP route table	140
Displaying route flap dampening statistics	141
Displaying the active route map configuration	142
Displaying BGP4 restart neighbor information	143
Displaying AS4 details	143
Displaying route-map continue clauses	151

Chapter 2

OSPF version 2 (IPv4)

OSPF point-to-point links	158
Designated routers in multi-access networks	158
Designated router election in multi-access networks	159
OSPF RFC 1583 and 2328 compliance	160
Reduction of equivalent AS external LSAs	160
Support for OSPF RFC 2328 Appendix E	162
OSPF graceful restart	163
Hitless upgrade support for OSPF graceful restart	164
OSPF Stub Router Advertisement.....	164
OSPF Shortest Path First throttling.....	164
IETF RFC and internet draft support.....	165
Dynamic OSPF activation and configuration	166
OSPF VRF-Lite for customer-edge routers	166

Configuring OSPF	167
Configuration rules	167
OSPF parameters	167
Enable OSPF on the router	168
Assign OSPF areas	169
Assign a totally stubby area	170
Assigning an area range (optional)	173
Assigning an area cost (optional parameter)	173
Assigning interfaces to an area	175
Setting all OSPFv2 interfaces to the passive state	175
Modify interface defaults	175
Change the timer for OSPF authentication changes	178
Block flooding of outbound LSAs on specific OSPF interfaces	179
Assign virtual links	180
Modify virtual link parameters	182
Changing the reference bandwidth for the cost on OSPF interfaces	184
Define redistribution filters	185
Modify default metric for redistribution	187
Enable route redistribution	187
Disable or re-enable load sharing	189
Configure external route summarization	190
Configure default route origination	191
Supported match and set conditions	192
OSPF non-stop routing	193
Synchronization of critical OSPF elements	193
Link state database synchronization	193
Neighbor router synchronization	194
Interface synchronization	194
BFD with OSPF NSR	195
Standby module operations	195
Neighbor database	195
LSA database	195
Enabling and disabling NSR	196
Limitations of NSR	196

Adding additional parameters	196
Disabling configuration	197
OSPF distribute list	198
Modify SPF timers	200
Modify redistribution metric type	201
Modify administrative distance.....	201
Configure OSPF group Link State Advertisement (LSA) pacing	202
OSPF ABR type 3 LSA filtering	203
Displaying the configured OSPF area prefix list.....	205
Modify OSPF traps generated	206
Modify OSPF standard compliance setting	207
Modify exit overflow interval	208
Specify types of OSPF Syslog messages to log	208
Configuring an OSPF network type.....	209
Configuring OSPF Graceful Restart.....	209
Configuring OSPF router advertisement.....	211
Configuring OSPF shortest path first throttling	213
Displaying OSPF information	214
Displaying general OSPF configuration information	215
Displaying CPU utilization and other OSPF tasks.....	218
Displaying OSPF area information	219
Displaying OSPF neighbor information.....	220
Displaying OSPF interface information.....	222
Displaying OSPF interface brief information	224
Displaying OSPF route information.....	226
Displaying OSPF database information	228
Displaying OSPF external link state information	230
Displaying OSPF database-summary information.....	231
Displaying OSPF database link state information	231
Displaying OSPF ABR and ASBR information	232
Displaying OSPF trap status	233
Viewing Configured OSPF point-to-point links	233
Displaying OSPF virtual neighbor and link information.....	235
Clearing OSPF neighbors.....	236
Displaying an OSPF Graceful Restart information.....	236
Displaying OSPF Router Advertisement information	237
Displaying the OSPF area translator status information.....	238
Clearing OSPF information	239
Clearing OSPF neighbors.....	239
Disabling and re-enabling the OSPF process.....	239
Clearing OSPF routes.....	239
Commands	240

Chapter 3

IS-IS (IPv4)

Relationship to IP route table	249
Intermediate systems and end systems	249
Domain and areas	250
Level-1 routing and Level-2 routing	250
Neighbors and adjacencies	251
Designated IS	251
Three-way handshake for point-to-point adjacencies	253
IS-IS CLI levels	253
Global configuration level	253
Address family configuration level	254
Interface level	254
Enabling IS-IS globally	254
Globally configuring IS-IS on a device	255
Setting the overload bit	256
Configuring authentication	257
Changing the IS-IS level globally	260
Disabling or re-enabling display of hostname	260
Changing the Sequence Numbers PDU interval	261
Changing the maximum LSP lifetime	261
Changing the LSP refresh interval	262
Changing the LSP generation interval	262
Changing the LSP interval and retransmit interval	262
Changing the SPF timer	263
Configuring the IS-IS PSPF exponential back-off feature	263
Configuring the IS-IS flooding mechanism	264
Globally disabling or re-enabling hello padding	264
Logging adjacency changes	265
Logging invalid LSP packets received	265
Disabling partial SPF optimizations	265
Disabling incremental SPF optimizations	266
IS-IS incremental shortcut LSP SPF optimization	266
Configuring IPv4 address family route parameters	267
Changing the metric style	267
Changing the maximum number of load sharing paths	267
Enabling advertisement of a default route	268
Changing the administrative distance for IPv4 IS-IS	269
Configuring summary addresses	270
Redistributing routes into IPv4 IS-IS	270
Changing the default redistribution metric	271
Globally change the default redistribution metric	271
Configuration steps	271
ISIS Show command	272
Redistributing static IPv4 routes into IPv4 IS-IS	272
Redistributing directly connected routes into IPv4 IS-IS	273
Redistributing RIP routes into IPv4 IS-IS	273
Redistributing OSPF routes into IPv4 IS-IS	273
Redistributing BGP4+ routes into IPv4 IS-IS	274
Redistributing IPv4 IS-IS routes within IPv4 IS-IS	274

Configuring IS-IS point-to-point over Ethernet	275
Brocade IS-IS Router A configuration	275
Brocade IS-IS Router B configuration	275
Displaying IS-IS point-to-point configuration	276
Configuring IS-IS over a GRE IP tunnel	276
Configuration considerations	277
Configuring IS-IS over a GRE IP tunnel	277
Displaying IS-IS over GRE IP tunnel	278
IS-IS Non-Stop Routing	279
Overview	279
Limitations	280
Enabling and disabling IS-IS NSR	280
Displaying the IS-IS NSR status	281
Configuring ISIS properties on an interface	285
Disabling and enabling IS-IS on an interface	285
Disabling or re-enabling formation of adjacencies	286
Setting the priority for designated IS election	286
Limiting access to adjacencies with a neighbor	287
Changing the IS-IS level on an interface	287
Disabling and enabling hello padding on an interface	287
Changing the hello interval	288
Changing the hello multiplier	288
DIS hello interval	288
Changing the metric added to advertised routes	288
Displaying IPv4 IS-IS information	289
Displaying ISIS general information	289
Displaying the IS-IS configuration in the running-config	293
Displaying the name mappings	294
Displaying neighbor information	294
Displaying IS-IS Syslog messages	296
Displaying interface information	297
Displaying route information	301
Displaying LSP database entries	302
Displaying traffic statistics	306
Displaying error statistics	307
Displaying the IS-IS SPF Log	310
Clearing the IS-IS SPF Log	312
Triggering the router to run SPF	312
Clearing IS-IS information	313
Clearing a specified LSP from IS-IS database	314

Chapter 4

RIP (IPv4)

RIP parameters and defaults	316
RIP global parameters	316
RIP interface parameters	317

Configuring RIP parameters	318
Enabling RIP	318
Configuring metric parameters	318
Changing the administrative distance	319
Configuring redistribution	319
Configuring route learning and advertising parameters	321
Changing the route loop prevention method	322
Suppressing RIP route advertisement on a VRRP or VRRPE backup interface	323
Using prefix lists and route maps as route filters	323
Setting RIP timers	324
Displaying RIP Information	325

Chapter 5

Policy-Based Routing (IPv4)

Configuration considerations	330
Configuring a PBR policy	331
Configure the route map	331
Enabling PBR	335
Configuration examples	336
Basic example	336
Setting the next hop	336
Setting the next hop to a GRE tunnel	337
Setting the output interface to the null interface	338
Selectively applying normal routing to packets	338
Applying IPv6 PBR next hop VLAN flooding	339
LAG formation	339
Policy based routing with the preserve VLAN option	340
Configuring a physical interface to accept all VLAN packets for PBR	340
Configuration considerations	340
Configuring policy based routing with the preserve VLAN option	340
Configuration examples	341
Preserve VLAN IDs and forwarding to single destination	341
Preserve VLAN IDs and replicate to multiple ports within a VLAN	342
Specify an interface as a PBR next-hop	342
Show telemetry command	342
Policy-based routing support for preserve VLAN	343
Configuration considerations	344

Chapter 6

MBGP

Configuration considerations	347
--	-----

	Configuring MBGP	347
	Setting the maximum number of multicast routes supported	347
	Enabling MBGP	348
	Adding MBGP neighbors	349
	Optional configuration tasks	350
	Displaying MBGP information	353
	Displaying summary MBGP information	354
	Displaying the active MBGP configuration	354
	Displaying MBGP neighbors	356
	Displaying MBGP routes	358
	Displaying the IP Multicast Route Table	358
	Displaying MBGP Attribute Entries	359
	Displaying dampened paths	360
	Displaying MBGP filtered routes	361
	Displaying MBGP flap statistics	362
	Displaying MBGP peer groups	363
	Clearing MBGP information	364
	Clearing route flap dampening information	364
	Clearing route flap statistics	364
	Clearing local information	364
	Clearing BGP neighbor information	365
	Clearing BGP routes	365
	Clearing traffic counters	365
Chapter 7	Multi-VRF	
	Overview of Multi-VRF	367
	Benefits and applications of Multi-VRF	370
	Summary	372
	Configuring Multi-VRF	372
	Configuration 1	374
	Configuration 2	377
Chapter 8	Inter-VRF Routing	
	Features & benefits	382
	Configuration considerations	384
	Tie breaker rules	384
	Maximum route limitations	385
	Configuring Inter-VRF routing	385
	Show commands	386
	Clearing IP routes	391
	Configuring the number of VRFs for IPv4 and IPv6	392
	Modified CLI commands	392

Chapter 9	Management VRF	
	Management VRF overview	395
	Source interface and management VRF compatibility	396
	Supported management applications	396
	Configuring a global management VRF	399
	Configuration notes	399
	Configuring Management interface under a user defined VRF400	
	Displaying the management VRF information.	400
Chapter 10	Basic IPv6 Connectivity	
	Enabling IPv6 routing	408
	Configuring IPv6 on each interface	408
	Configuring a global or unique local IPv6 unicast address.	408
	Configuring a link-local IPv6 address	410
	Configuring IPv6 anycast addresses	410
	Configuring IPv6 127 bit mask address.	411
	Configuring the management port for an IPv6 automatic address configuration	411
	IPv6 host support	411
	IPv6 host supported features	411
	Restricting SNMP access to an IPv6 node.	412
	Specifying an IPv6 SNMP trap receiver	412
	Restricting Telnet access by specifying an IPv6 ACL	413
	Restricting SSH access by specifying an IPv6 ACL	413
	Restricting Web management access by specifying an IPv6 ACL	414
	Restricting SNMP access by specifying an IPv6 ACL	414
	Restricting Web management access to your device to a specific IPv6 host	415
	Specifying an IPv6 Syslog server	415
	Viewing IPv6 SNMP server addresses	416
	Disabling router advertisement and solicitation messages	416
	IPv6 Non stop routing and graceful restart.	417
	Limitations	417
	Supported protocols	418
	Restart global timers	418
	Configuring NSR and graceful restart on OSPFv3.	419
	Configuring Non Stop Routing on IS-IS.	422
	Configuring BGP graceful restart	422
	IPv6 Hitless OS upgrade	425
	Configuring IPv4 and IPv6 protocol stacks	426
	Configuring IPv6 Domain Name Server (DNS) resolver	427
	Defining a DNS entry	427
	IPv6 Non-Stop Routing support	428
	Limitations	428
	Configuring IPv6 NSR support	429

ECMP load sharing for IPv6	429
Disabling or re-enabling ECMP load sharing for IPv6	429
Changing the maximum number of load sharing paths for IPv6	430
DHCP relay agent for IPv6	430
DHCPv6 Relay Agent Prefix Delegation Notification	430
Configuring DHCP for IPv6 relay agent	432
Configuring DHCPv6 Relay Agent Prefix Delegation Notification	432
Displaying the DHCPv6 Relay Agent Prefix Delegation Notification information	434
Enabling support for network-based ECMP load sharing for IPv6	438
Displaying ECMP load-sharing information for IPv6	438
Configuring IPv6 ICMP	439
Configuring ICMP rate limiting	439
Enabling ICMP redirect messages	440
Disabling or re-enabling ICMP redirect messages	441
Disabling ICMP error messages for source-routed IPv6 packets	441
Enabling ICMP error messages for an unreachable address	441
Enabling ICMP messages for an unreachable route	442
Enabling ICMP error messages for IPv6 packets with hop-limit 0	442
Enabling ICMP error messages for multicast Too Big packets	442
Enabling ICMP error messages for CES/CER devices	443
Configuring IPv6 neighbor discovery	443
Neighbor solicitation and advertisement messages	444
Router advertisement and solicitation messages	444
Neighbor redirect messages	445
Setting neighbor solicitation parameters for duplicate address detection	445
Setting IPv6 router advertisement parameters	446
Controlling prefixes advertised in IPv6 router advertisement messages	447
Configuring the Domain Name of DNS suffix	448
Configuring the recursive DNS server addresses and lifetime multiplier	448
Setting flags in IPv6 router advertisement messages	449
Configuring reachable time for remote IPv6 nodes	450
IPv6 source routing security enhancements	450
Complete filtering of IPv6 source-routed packets	450
Selective filtering of IPv6 source-routed packets using ACLs	452
Complete and selective filtering combination and order of application	453
Configuration examples for complete and selective filtering of source routed packets	453
Changing the IPv6 MTU	456
Configuring static neighbor entries	457

	Limiting the number of hops an IPv6 packet can traverse	458
	QoS for IPv6 traffic	458
	Configuring the rate limit for IPv6 subnet traffic.	459
	Clearing global IPv6 information	459
	Clearing the IPv6 cache.	459
	Clearing IPv6 neighbor information	460
	Clearing IPv6 routes from the IPv6 route table	460
	Clearing IPv6 traffic statistics	460
	Clearing statistics for IPv6 subnet rate limiting.	461
	Displaying global IPv6 information.	461
	Displaying IPv6 cache information	461
	Displaying IPv6 interface information.	462
	Displaying interface counters for all ports	464
	Displaying IPv6 neighbor information.	465
	Displaying the IPv6 route table.	467
	Displaying local IPv6 devices	472
	Displaying IPv6 TCP information	473
	Displaying IPv6 traffic statistics	477
	Displaying statistics for IPv6 subnet rate limiting	480
	Displaying IPv6 information for Router Advertisement Options	481
	Displaying IPv6 interface information for Router Advertisement Options	482
	Commands	483
Chapter 11	IPv6 Addressing	
	IPv6 addressing overview.	487
	IPv6 address types.	488
	IPv6 stateless auto-configuration	489
Chapter 12	IPv6 Prefix List	
	Configuring an IPv6 prefix list	491
	Displaying prefix list information	492
	IPv6 ND Prefix Suppress.	493
	Configuring IPv6 Prefix Suppress	493
	IPv6 ND Router Advertisement Control	494
Chapter 13	Managing a Device Over IPv6	
	Using the IPv6 copy command.	497
	Copying a file to an IPv6 TFTP server	498
	Copying a file from an IPv6 TFTP server.	499

Using the IPv6 ncopy command	500
Copying a primary or secondary boot image from flash memory to an IPv6 TFTP server	500
Copying the running or startup configuration to an IPv6 TFTP server	501
Uploading files from an IPv6 TFTP server	501
Using the IPv6 ping command	502
Using the IPv6 traceroute command	503
Using Telnet	504
Using the IPv6 Telnet command	504
Establishing a Telnet session from an IPv6 host	505
Using Secure Shell	505

Chapter 14 Static IPv6 Routes

Configuring a static IPv6 route	507
Configuring a IPv6 static multicast route	509
BFD for Static Routes	510
Configuration considerations	510
Configuring BFD for static routes	511
Show commands	512

Chapter 15 BGP4+ (IPv6)

Address family configuration level	514
Configuring BGP4+	515
Enabling BGP4+	515
Configuring BGP4+ neighbors using global or unique local IPv6 addresses	516
Adding BGP4+ neighbors using link-local addresses	517
Configuring a BGP4+ peer group	518
Advertising the default BGP4+ route	520
Importing routes into BGP4+	521
Redistributing prefixes into BGP4+	522
Aggregating routes advertised to BGP4 neighbors	522
Using route maps	523
Enabling next-hop recursion	523
Clearing BGP4+ information	525
Removing route flap dampening	525
Clearing route flap dampening statistics	526
Clearing BGP4+ local route information	526
Clearing BGP4+ neighbor information	526
Clearing and resetting BGP4+ routes in the IPv6 route table	529
Clearing traffic counters for all BGP4+ neighbors	529
Clearing BGP4+VPNv6 neighbor information	530
Clearing BGP4+ VRF6 information	530

Displaying BGP4+ information	531
Displaying the BGP4+ route table.	531
Displaying BGP4+ route information	537
Displaying BGP4+ route-attribute entries.	538
Displaying the BGP4+ running configuration.	540
Displaying dampened BGP4+ paths.	541
Displaying filtered-out BGP4+ routes	541
Displaying route flap dampening statistics	546
Displaying BGP4+ neighbor information	547
Displaying BGP4+ peer group configuration information	569
Displaying BGP4+ summary	570
Displaying BGP4+VPNv6 information.	571
Displaying BGP4+VRF6 information.	581
Configuring BGP4+ graceful restart.	592
Displaying BGP4+ graceful restart neighbor information	594
Commands	595

Chapter 16

OSPF version 3 (IPv6)

OSPF Version 3	632
Link-state advertisement types for OSPFv3	633
Configuring OSPFv3	633
Enabling OSPFv3	634
Assigning OSPFv3 areas	634
Assigning an area cost for OSPFv3 (optional parameter)	640
Specifying a network type	641
Configuring virtual links.	642
Changing the reference bandwidth for the cost on OSPFv3 interfaces	644
Redistributing routes into OSPFv3	645
Filtering OSPFv3 routes.	649
Configuring default route origination	652
Modifying Shortest Path First timers	653
Modifying administrative distance	653
Configuring the OSPFv3 LSA pacing interval	654
Modifying exit overflow interval.	655
Modifying external link state database limit	655
Setting all OSPFv3 interfaces to the passive state	656
Modifying OSPFv3 interface defaults	656
Disabling or re-enabling event logging	657
IPsec for OSPFv3	657
Configuring IPsec for OSPFv3	658
Configuring OSPFv3 Graceful Restart Helper mode	665
Configuring OSPFv3 NSR.	666
Configuring OSPFv3 max-metric router LSA.	666

Displaying OSPFv3 information	668
General OSPF configuration information	669
Displaying OSPFv3 area information	669
Displaying OSPFv3 database information	670
Displaying IPv6 interface information.	676
Displaying IPv6 OSPFv3 interface information	677
Displaying OSPFv3 memory usage.	681
Displaying OSPFv3 neighbor information.	683
Displaying routes redistributed into OSPFv3	685
Displaying OSPFv3 route information	686
Displaying OSPFv3 SPF information	687
Displaying OSPFv3 GR Helper mode information	690
Displaying OSPFv3 NSR information	691
Displaying OSPFv3 max-metric router LSA information.	691
Displaying IPv6 OSPF virtual link information	691
Displaying OSPFv3 virtual neighbor information	692
IPsec examples	693
OSPFv3 clear commands	703
Clearing all OSPFv3 data.	703
Clearing all OSPFv3 packet counters	703
Scheduling Shortest Path First (SPF) calculation	703
Clearing all redistributed routes from OSPF.	704
Clearing OSPF neighbors.	704
Commands	705

Chapter 17

IS-IS (IPv6)

IPv6 IS-IS single-topology mode	710
IS-IS CLI levels	710
Global configuration level	711
Address family configuration level	711
Interface level.	712
Configuring IPv6 IS-IS	712
Enabling IPv6 IS-IS globally.	712
Enabling IS-IS and assigning an IPv6 address to an interface	713
Configuring IPv6 IS-IS single topology	714
Globally configuring IS-IS on a device	714

Configuring IPv6 specific address family route parameters	715
Changing the maximum number of load sharing paths	715
Enabling advertisement of a default route	715
Changing the administrative distance for IPv6 IS-IS	716
Configuring summary prefixes	717
Redistributing routes into IPv6 IS-IS	717
Changing the default redistribution metric	718
Globally change the default redistribution metric	718
Configuration steps	718
ISIS Show command	719
Redistributing static IPv6 routes into IPv6 IS-IS	720
Redistributing directly connected routes into IPv6 IS-IS	720
Redistributing RIPng routes into IPv6 IS-IS	721
Redistributing OSPF version 3 routes into IPv6 IS-IS	721
Redistributing BGP4+ routes into IPv6 IS-IS	721
Redistributing IPv6 IS-IS routes within IPv6 IS-IS	721
Disabling and re-enabling IPv6 protocol-support consistency checks	722
Configuring IS-IS properties on an interface	723
Changing the metric added to advertised routes	723
IPv6 IS-IS Non-Stop Routing	723
Overview	723
Configuring IS-IS NSR	724
Displaying IPv6 IS-IS information	725
Displaying IPv6 IS-IS information	725
Displaying the IPv6 IS-IS configuration in the running configuration	726
Displaying IPv6 IS-IS error statistics	727
Displaying LSP database entries	728
Displaying the system ID to name mappings	734
Displaying IPv6 IS-IS interface information	735
Displaying IPv6 IS-IS memory usage	737
Displaying IPv6 IS-IS neighbor information	738
Displaying IPv6 IS-IS redistribution information	740
Displaying the IPv6 IS-IS route information	740
Displaying IPv6 IS-IS traffic statistics	741
IPv6 IS-IS Multi-Topology	742
Configuration considerations for IPv6 IS-IS MT	743
Migrating to IPv6 IS-IS MT	743
Maintaining MT adjacencies	744
New TLV attributes	744
Enabling IPv6 IS-IS MT	744
Configuring the IS-IS IPv6 PSPF exponential back-off feature	745
Changing the SPF timer	745
Changing the metric added value	746
Configuration example to deploy IPv6 IS-IS MT	747

Chapter 18

RIPng (IPv6)

Configuring RIPng	750
Enabling RIPng	750
Configuring RIPng timers	751
Configuring route learning and advertising parameters	752
Redistributing routes into RIPng	753
Controlling distribution of routes through RIPng	754
Configuring poison reverse parameters	754
Clearing RIPng routes from IPv6 route table	755
Displaying RIPng information	755
Displaying RIPng configuration	755
Displaying RIPng routing table	757

Chapter 19

Policy-Based Routing (IPv6)

Configuration considerations	759
Considerations specific to Brocade NetIron CES and Brocade NetIron CER	761
Configuring an IPv6 PBR policy	761
Configuring the route map	761
Enabling IPv6 PBR	764
LAG formation	765
Configuration examples	766
Basic example	766
Combined example	766
Selectively applying normal routing to packets	766
Displaying IPv6 PBR information	767
Displaying IPv6 accounting information	767
Displaying IPv6 PBR route map information	768
Displaying IPv6 ACL and route map information on the Brocade NetIron CES and Brocade NetIron CER	768
Policy based routing with the preserve VLAN option	769
Configuring a physical interface to accept all VLAN packets for PBR	769
Configuration considerations	770
Configuring policy based routing with the preserve VLAN option	770
Configuration examples	770
Preserve VLAN IDs and forwarding to specific egress port	770
Preserve VLAN IDs and forwarding to multiple ports within a VLAN	771
Applying IPv6 PBR next hop VLAN flooding	771
Policy-based routing support for preserve VLAN	772
Configuration considerations	772

Chapter 20

VRRP and VRRP-E

Overview of VRRP	774
Standard VRRP	774
Enhancements to VRRP	777
Overview of VRRP-E	782
ARP behavior with VRRP-E	783
Comparison of VRRP and VRRP-E	783
VRRP and VRRP-E parameters	784
Configuring parameters specific to VRRP	787
Configuring the VRRP version	787
Configuring the Owner for IPv4	788
Configuring the Owner for IPv6	788
Configuring a Backup for IPv4	789
Configuring a Backup for IPv6	789
Configuration rules and feature limitations for VRRP	790
Configuring parameters specific to VRRP-E	790
Configuring IPv4 VRRP-E	790
Configuring IPv6 VRRP-E	791
Configuration rules and feature limitations for VRRP-E	792
Configuring additional VRRP and VRRP-E parameters	792
Authentication type	793
Suppressing RIP advertisements on backup routers for the backup up interface	794
Hello interval	795
Dead interval	795
Backup hello message state and interval	796
Track port	796
Track priority	797
Backup preempt	797
Master router abdication and reinstatement	798
VRRP-extended slow start	798
VRRP-extended scale timer	799
Enable and Disable password display	800
Displaying VRRP and VRRP-E information for IPv4	800
Displaying summary information	800
Displaying detailed information	802
Displaying statistics	805
Displaying VRRP and VRRP-E information for IPv6	806
Displaying summary information	806
Displaying detailed information	807
Displaying statistics	807
Displaying configuration information for VRRP and VRRP-E	808
Clearing VRRP or VRRP-E statistics	809

Configuration examples	809
VRRP example for IPv4	809
VRRP example for IPv6	810
VRRP-E example for IPv4	812
VRRP-E example for IPv6	813
VRRP-E Extension for Server Virtualization	815
VRRP-E Extension for server virtualization configuration example	816
Packets from the local subnet of the virtual IP address	817
IPv4 VRF support	817
Configuration considerations	817

About This Document

Audience

This document is designed for system administrators with a working knowledge of Layer 2 and Layer 3 switching and routing.

If you are using a Brocade device, you should be familiar with the following protocols if applicable to your network – IP, RIP, OSPF, BGP, ISIS, IGMP, PIM, MPLS, and VRRP.

Supported hardware and software

The following hardware platforms are supported by this release of this guide:

TABLE 1 Supported devices

Brocade NetIron XMR Series	Brocade MLX Series	NetIron CES 2000 and NetIron CER 2000 Series
Brocade NetIron XMR 4000	Brocade MLX-4	Brocade NetIron CES 2024C
Brocade NetIron XMR 8000	Brocade MLX-8	Brocade NetIron CES 2024F
Brocade NetIron XMR 16000	Brocade MLX-16	Brocade NetIron CES 2048C
Brocade NetIron XMR 32000	Brocade MLX-32	Brocade NetIron CES 2048CX
	Brocade MLXe-4	Brocade NetIron CES 2048F
	Brocade MLXe-8	Brocade NetIron CES 2048FX
	Brocade MLXe-16	Brocade NetIron CER 2024C
	Brocade MLXe-32	Brocade NetIron CER-RT 2024C
		Brocade NetIron CER 2024F
		Brocade NetIron CER-RT 2024F
		Brocade NetIron CER 2048C
		Brocade NetIron CER-RT 2048C
		Brocade NetIron CER 2048CX
		Brocade NetIron CER-RT 2048CX
		Brocade NetIron CER 2048F
		Brocade NetIron CER-RT 2048F
		Brocade NetIron CER 2048FX
		Brocade NetIron CER-RT 2048FX

Supported software

For the complete list of supported features and the summary of enhancements and configuration notes for this release, refer to the *Multi-Service IronWare R05.6.00 Release Notes*.

Document conventions

This section describes text formatting conventions and important notice formats used in this document.

Text formatting

The narrative-text formatting conventions that are used are as follows:

bold text	Identifies command names
	Identifies the names of user-manipulated GUI elements
	Identifies keywords
	Identifies text to enter at the GUI or CLI
<i>italic text</i>	Provides emphasis
	Identifies variables
	Identifies document titles
<code>code text</code>	Identifies CLI output

For readability, command names in the narrative portions of this guide are presented in bold: for example, **show version**.

Notes, cautions, and danger notices

The following notices and statements are used in this manual. They are listed below in order of increasing severity of potential hazards.

NOTE

A note provides a tip, guidance or advice, emphasizes important information, or provides a reference to related information.



CAUTION

A Caution statement alerts you to situations that can be potentially hazardous to you or cause damage to hardware, firmware, software, or data.



DANGER

A Danger statement indicates conditions or situations that can be potentially lethal or extremely hazardous to you. Safety labels are also attached directly to products to warn of these conditions or situations.

Notice to the reader

This document may contain references to the trademarks of the following corporations. These trademarks are the properties of their respective companies and corporations.

These references are made for informational purposes only.

Corporation	Referenced Trademarks and Products
Microsoft Corporation	Internet Explorer
Mozilla Corporation	Mozilla Firefox
Sun Microsystems	Java Runtime Environment

Related publications

For the latest edition of these documents, which contain the most up-to-date information, see Documentation at <http://www.brocade.com/ethernetproducts>

- *Multi-Service IronWare Administration Guide*
- *Multi-Service IronWare Security Configuration Guide*
- *Multi-Service IronWare Switching Configuration Guide*
- *Multi-Service IronWare Routing Configuration Guide*
- *Multi-Service IronWare Traffic Management Configuration Guide*
- *Multi-Service IronWare Multicast Configuration Guide*
- *Multi-Service IronWare Multiprotocol Label Switch (MPLS) Configuration Guide*
- *Multi-Service IronWare Software Defined Networking (SDN) Guide*
- *Brocade MLX Series and NetIron Family YANG Guide*
- *Brocade MLX Series and NetIron XMR Series Diagnostic Reference*
- *Unified IP MIB Reference*
- *Multi-Service IronWare Software Upgrade Procedures for Brocade MLX Series and NetIron Family devices*
- *Brocade MLXe Series Installation Guide*
- *Brocade MLX Series and Brocade NetIron XMR Installation Guide*
- *Brocade NetIron CES 2000 Series and Brocade NetIron CER 2000 Series Hardware Installation Guide*

Getting technical help or reporting errors

To contact Technical Support, go to <http://www.brocade.com/services-support/index.page> for the latest e-mail and telephone contact information.

BGP (IPv4)

Table 2 displays the individual devices and the BGP4 features they support.

TABLE 2 Supported BGP4 features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
BGP4	Yes	Yes	No	No	Yes	Yes	Yes
BGP4 Restart	Yes	Yes	No	No	Yes	Yes	Yes
BGP4 Restart Helper Mode	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Redistributing IBGP Routes	Yes	Yes	No	No	Yes	Yes	Yes
Client-to-Client Routes	Yes	Yes	No	No	Yes	Yes	Yes
Route Flap Dampening	Yes	Yes	No	No	Yes	Yes	Yes
Originating the Default Route	Yes	Yes	No	No	Yes	Yes	Yes
Multipath Load Sharing	Yes	Yes	No	No	Yes	Yes	Yes
Using the IP Default Route as a Valid Next Hop for a BGP4 Route	Yes	Yes	No	No	Yes	Yes	Yes
Next-Hop Recursion	Yes	Yes	No	No	Yes	Yes	Yes
Next-Hop Update Timer	Yes	Yes	No	No	Yes	Yes	Yes
Generalized TTL Security Mechanism Support	Yes	Yes	No	No	Yes	Yes	Yes

TABLE 2 Supported BGP4 features (Continued)

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CER 2000 Series BASE package	Brocade Netron CER 2000 Series ME_PREM package	Brocade Netron CER 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
Enhanced per-neighbor debug statements and new per-neighbor BGP4 debug filters	Yes	Yes	No	No	No	No	No
BGP4 Peer Notification During a Management Module Switchover	Yes	Yes	No	No	No	No	No
Auto Shutdown of BGP4 Neighbors on Initial Configuration	Yes	Yes	No	No	Yes	Yes	Yes
New encryption code for passwords, authentication keys, and community strings	Yes	Yes	No	No	No	No	No
BGP4 MD5 Authentication	Yes	Yes	No	No	Yes	Yes	Yes
Route redistribution to other protocols	Yes	Yes	No	No	Yes	Yes	Yes
BGP4 Peer Group	Yes	Yes	No	No	Yes	Yes	Yes
BGP4 Route Reflectors	Yes	Yes	No	No	Yes	Yes	Yes
BGP4 Neighbor Local-AS	Yes	Yes	No	No	Yes	Yes	Yes
BGP4 Local-AS for VRF	Yes	Yes	No	No	Yes	No	No

TABLE 2 Supported BGP4 features (Continued)

Features supported	Brocade NetIron XMR Series	Brocade MLX Series	Brocade NetIron CES 2000 Series BASE package	Brocade NetIron CES 2000 Series ME_PREM package	Brocade NetIron CES 2000 Series L3_PREM package	Brocade NetIron CER 2000 Series Base package	Brocade NetIron CER 2000 Series Advanced Services package
BGP4 Processing Optimization for Administratively Down Peers	Yes	Yes	No	No	Yes	Yes	Yes
BGP4 Outbound Policy Processing Optimization	Yes	Yes	No	No	Yes	Yes	Yes
Requiring the First AS to be the Neighbor's AS	Yes	Yes	Yes	No	Yes	Yes	Yes
Four-byte AS Numbers (AS4)	Yes	Yes	Yes	No	Yes	Yes	Yes
BGP4 AS4 Confederation Error Checking	Yes	Yes	No	No	No	No	No
RTM Scalability Enhancement	Yes	Yes	No	No	No	No	No
Route Map Continue Clause	Yes	Yes	Yes	No	Yes	Yes	Yes
Static BGP4 Networks	Yes	Yes	Yes	No	Yes	Yes	Yes
Limiting Advertisement of a Static BGP4 Network	Yes	Yes	No	No	Yes	Yes	Yes
Use IGP cost instead of BGP MED value	Yes	Yes	Yes	Yes	Yes	Yes	Yes

This chapter provides details on how to configure Border Gateway Protocol version 4 (BGP4).

NOTE

BGP4 commands that are supported in IPv4 are listed in [Table 3](#).


Overview of BGP4

BGP4 is the standard Exterior Gateway Protocol (EGP) used on the Internet to route traffic between Autonomous Systems (AS) and to maintain loop-free routing. An autonomous system is a collection of networks that share the same routing and administration characteristics. For example, a corporate Intranet consisting of several networks under common administrative control might be considered an AS. The networks in an AS can but do not need to run the same routing protocol to be in the same AS, nor do they need to be geographically close.

Devices within an AS can use different Interior Gateway Protocols (IGPs) such as RIP, IS-IS, and OSPF to communicate with one another. However, for devices in different ASs to communicate, they need to use an EGP. BGP4 is the standard EGP used by Internet devices and therefore is the EGP implemented on the device.

Figure 1 shows a simple example of two BGP4 ASs. Each AS contains three BGP4 devices. All of the BGP4 devices within an AS communicate using IBGP. BGP4 devices communicate with other ASs using EBGP. Notice that each of the devices also is running an Interior Gateway Protocol (IGP). The devices in AS1 are running OSPF and the devices in AS2 are running RIP. The device can be configured to redistribute routes among BGP4, IS-IS, RIP, and OSPF. They also can redistribute static routes.

FIGURE 1 Example BGP4 ASs

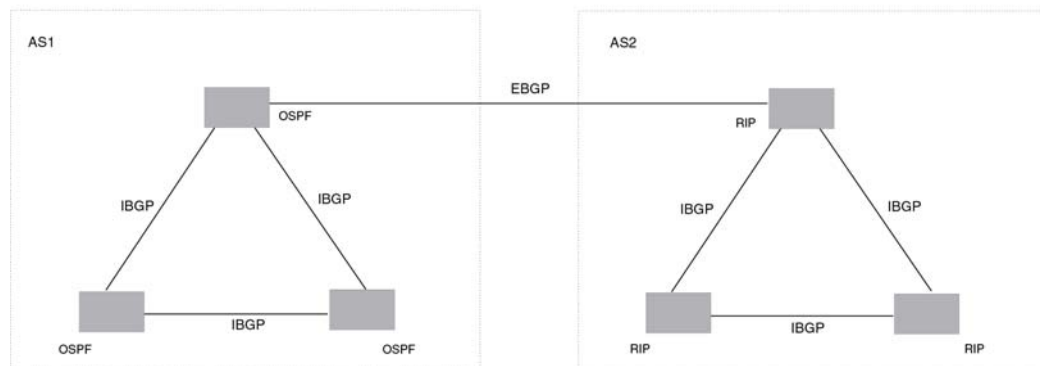

Relationship between the BGP4 route table and the IP route table

The device BGP4 route table can have multiple routes or paths to the same destination, which are learned from different BGP4 neighbors. A BGP4 neighbor is another device that also is running BGP4. BGP4 neighbors communicate using Transmission Control Protocol (TCP) port 179 for BGP4 communication. When you configure the device for BGP4, one of the configuration tasks you perform is to identify the device's BGP4 neighbors.

Although a device's BGP4 route table can have multiple routes to the same destination, the BGP4 protocol evaluates the routes and chooses only one of the routes to send to the IP route table. The route that BGP4 chooses and sends to the IP route table is the **preferred route**. This route is what the device advertises to other BGP4 neighbors. If the preferred route goes down, BGP4 updates the route information in the IP route table with a new BGP4 preferred route.

NOTE

If IP load sharing is enabled and you enable multiple equal-cost paths for BGP4, BGP4 can select more than one equal-cost path to a destination.

A BGP4 route consists of the following information:

- **Network number (prefix)** – A value comprised of the network mask bits and an IP address (*IP address/ mask bits*); for example, 10.215.129.0/18 indicates a network mask of 18 bits applied to the IP address 10.215.129.0. When a BGP4 device advertises a route to one of its neighbors, it uses this format.
- **AS-path** – A list of the other ASs through which a route passes. BGP4 devices can use the AS-path to detect and eliminate routing loops. For example, if a route received by a BGP4 device contains the AS that the device is in, the device does not add the route to its own BGP4 table. (The BGP4 RFCs refer to the AS-path as “AS_PATH”, and RFC 4893 uses “AS4_PATH” in relation to AS4s.)
- **Additional path attributes** – A list of additional parameters that describe the route. The route MED and next hop are examples of these additional path attributes.

NOTE

The device re-advertises a learned best BGP4 route to the device’s neighbors even when the route table manager does not select that route for installation in the IP route table. This can happen if a route from another protocol, for example, OSPF, is preferred. The best BGP4 route is the route that BGP4 selects based on comparison of the BGP4 route path’s attributes.

After a device successfully negotiates a BGP4 session with a neighbor (a BGP4 peer), the device exchanges complete BGP4 route tables with the neighbor. After this initial exchange, the device and all other RFC 1771-compliant BGP4 devices send UPDATE messages to inform neighbors of new, changed, or no longer feasible routes. BGP4 devices do not send regular updates. However, if configured to do so, a BGP4 device does regularly send KEEPALIVE messages to its peers to maintain BGP4 sessions with them if the device does not have any route information to send in an UPDATE message. Refer to [“BGP4 message types”](#) on page 7 for information about BGP4 messages.

How BGP4 selects a path for a route (BGP best path selection algorithm)

When multiple paths for the same route prefix are known to a BGP4 device, the device uses the following algorithm to weigh the paths and determine the optimal path for the route. The optimal path depends on various parameters, which can be modified.

1. Is the next hop accessible through an Interior Gateway Protocol (IGP) route? If not, ignore the route.

NOTE

By default, the device does not use the default route to resolve BGP4 next hop. Refer to [“Enabling next-hop recursion”](#) on page 65 and [“Using the IP default route as a valid next-hop for a BGP4 route”](#) on page 64.

2. Use the path with the largest weight.
3. If the weights are the same, prefer the path with the largest local preference.

4. Prefer the route that was originated locally (by this device).
5. If the local preferences are the same, prefer the path with the shortest AS-path. An AS-SET counts as 1. A confederation path length, if present, is not counted as part of the path length.

NOTE

This step can be skipped if **BGP4-as-path-ignore** is configured.

6. If the AS-path lengths are the same, prefer the path with the lowest origin type. From low to high, route origin types are valued as follows:
 - IGP is lowest.
 - EGP is higher than IGP but lower than INCOMPLETE.
 - INCOMPLETE is highest.
7. If the paths have the same origin type, prefer the path with the lowest MED. For a definition of MED, refer to [“Configuring the device to always compare Multi-Exit Discriminators”](#) on page 20”.
 - The device compares the MEDs of two otherwise equivalent paths **if and only if** the routes were learned from the same neighboring AS. This behavior is called **deterministic MED**. Deterministic MED is always enabled and cannot be disabled.

You can also enable the device to always compare the MEDs, regardless of the AS information in the paths. To enable this comparison, enter the **always-compare-med** command at the BGP4 configuration level of the CLI. This option is disabled by default.

NOTE

By default, value 0 (most favorable) is used in MED comparison when the MED attribute is not present. The default MED comparison results in the device favoring the route paths that are missing their MEDs. You can use the **med-missing-as-worst** command to make the device regard a BGP4 route with a missing MED attribute as the least favorable path, when comparing the MEDs of the route paths.

NOTE

MED comparison is not performed for internal routes originated within the local AS or confederation unless the **compare-med-empty-aspath** command is configured.

8. Prefer paths in the following order:
 - Routes received through EBGp from a BGP4 neighbor outside of the confederation
 - Routes received through EBGp from a BGP4 device within the confederation OR Routes received through IBGP.
9. If all the comparisons above are equal, prefer the route with the lowest IGP metric to the BGP4 next hop. This is the closest internal path inside the AS to reach the destination.
10. If the internal paths also are the same and BGP4 load sharing is enabled, load share among the paths. Otherwise go to step 11.

NOTE

The device supports BGP4 load sharing among multiple equal-cost paths. BGP4 load sharing enables the device to balance traffic across the multiple paths instead of choosing just one path based on device ID. For EBGp routes, load sharing applies only when the paths are from neighbors within the same remote AS. EBGp paths from neighbors in different ASs are not compared, unless multipath **multi-as** is enabled.

11. If **compare-router ID** is enabled, prefer the path that comes from the BGP4 device with the lowest device ID. If a path contains originator ID attributes, then originator ID is substituted for the ROUTER ID in the decision.
12. Prefer the path with the minimum cluster list length.
13. If the route is a BGP4 VRF instance, prefer the route with the smallest RD value.
14. Prefer the route that comes from the lowest BGP4 neighbor address.

BGP4 message types

BGP4 devices communicate with neighbors (other BGP4 devices) using the following types of messages:

- OPEN
- UPDATE
- KEEPALIVE
- NOTIFICATION
- ROUTE REFRESH

OPEN message

After a BGP4 device establishes a TCP connection with a neighboring BGP4 device, the devices exchange OPEN messages. An open message indicates the following:

- **BGP4 version** – Indicates the version of the protocol that is in use on the device. BGP4 version 4 supports Classless Interdomain Routing (CIDR) and is the version most widely used in the Internet. Version 4 also is the only version supported on the device.
- **AS number** – An autonomous system number (ASN) identifies the AS to which the BGP4 device belongs. The number can be up to four bytes.

Hold Time – The number of seconds a BGP4 device will wait for an UPDATE or KEEPALIVE message (described below) from a BGP4 neighbor before assuming that the neighbor is not operational. BGP4 devices exchange UPDATE and KEEPALIVE messages to update route information and maintain communication. If BGP4 neighbors are using different Hold Times, the lowest Hold Time is used by the neighbors. If the Hold Time expires, the BGP4 device closes the TCP connection to the neighbor and clears any information it has learned and cached from the neighbor.

You can configure the Hold Time to be 0, in which case a BGP4 device will consider neighbors to always be up. For directly-attached neighbors, you can configure the device to immediately close the TCP connection to the neighbor and clear entries learned from an EBGp neighbor if the interface to that neighbor goes down. This capability is provided by the fast external fail over feature, which is disabled by default.

- **BGP4 Identifier** – The device ID. The BGP4 Identifier (device ID) identifies the BGP4 device to other BGP4 devices. The device use the same device ID for OSPF and BGP4. If you do not set a device ID, the software uses the IP address on the lowest numbered loopback interface configured on the device. If the device does not have a loopback interface, the default device ID is the lowest numbered IP address configured on the device.
- **Parameter list** – An optional list of additional parameters used in peer negotiation with BGP4 neighbors.

UPDATE message

After BGP4 neighbors establish a BGP4 connection over TCP and exchange their BGP4 routing tables, they do not send periodic routing updates. Instead, a BGP4 neighbor sends an update to a neighbor when it has a new route to advertise or routes have changed or become unfeasible. An UPDATE message can contain the following information:

- **Network Layer Reachability Information (NLRI)** – The mechanism by which BGP4 supports Classless Interdomain Routing (CIDR). An NLRI entry consists of an IP prefix that indicates a network being advertised by the UPDATE message. The prefix consists of an IP network number and the length of the network portion of the number. For example, an UPDATE message with the NLRI entry 10.215.129.0/18 indicates a route to IP network 10.215.129.0 with network mask 255.255.192.0. The binary equivalent of this mask is 18 consecutive one bits, thus “18” in the NLRI entry.
- **Path attributes** – Parameters that indicate route-specific information such as AS path information, route preference, next hop values, and aggregation information. BGP4 uses path attributes to make filtering and routing decisions.
- **Unreachable routes** – A list of routes that have been in the sending device BGP4 table but are no longer feasible. The UPDATE message lists unreachable routes in the same format as new routes: *IP address/CIDR prefix*.

KEEPALIVE message

BGP4 devices do not regularly exchange UPDATE messages to maintain BGP4 sessions. For example, if a device configured to perform BGP4 routing has already sent the latest route information to peers in UPDATE messages, the device does not send more UPDATE messages. Instead, BGP4 devices send KEEPALIVE messages to maintain BGP4 sessions. KEEPALIVE messages are 19 bytes long and consist only of a message header. They do not contain routing data.

BGP4 devices send KEEPALIVE messages at a regular interval, called the Keep Alive Time. The default Keep Alive Time is 60 seconds.

A parameter related to the Keep Alive Time is the Hold Time. The Hold Time for a BGP4 device determines how many seconds the device waits for a KEEPALIVE or UPDATE message from a BGP4 neighbor before deciding that the neighbor is not operational. The Hold Time is negotiated when BGP4 devices exchange OPEN messages, the lower Hold Time is then used by both neighbors. For example, if BGP4 device A sends a Hold Time of 5 seconds and BGP4 device B sends a Hold Time of 4 seconds, both devices use 4 seconds as the Hold Time for their BGP4 session. The default Hold Time is 180 seconds. Generally, the Hold Time is configured to three times the value of the Keep Alive Time.

If the Hold Time is 0, a BGP4 device assumes that a neighbor is alive regardless of how many seconds pass between receipt of UPDATE or KEEPALIVE messages.

NOTIFICATION message

When you close the BGP4 session with a neighbor, the device detects an error in a message received from the neighbor, or an error occurs on the device, the device sends a NOTIFICATION message to the neighbor. No further communication takes place between the BGP4 device that sent the NOTIFICATION and the neighbors that received the NOTIFICATION.

REFRESH message

BGP4 sends a REFRESH message to a neighbor to request that the neighbor resend route updates. This type of message can be useful if an inbound route filtering policy has been changed.

Implementation of BGP4

BGP4 is described in RFC 1771 and the latest BGP4 drafts. The implementation fully complies with RFC 1771 and supports the following:

- RFC 1745 (OSPF Interactions)
- RFC 1997 (BGP4 Communities Attributes)
- RFC 2385 (TCP MD5 Signature Option)
- RFC 2439 (Route Flap Dampening)
- RFC 4456 (Route Reflection)
- RFC 2842 and 3392 (Capability Advertisement)
- RFC 3065 (BGP4 Confederations)
- RFC 2858 (Multiprotocol Extensions)
- RFC 2918 (Route Refresh Capability)
- RFC 3392 (BGP4 Capability Advertisement)
- Draft-ietf-idr-restart-10.txt (restart mechanism for BGP4)

Memory considerations

BGP4 can handle a very large number of routes and therefore requires a lot of memory. For example, in a typical configuration with a single BGP4 neighbor, receiving a full internet route table, a BGP4 device may need to hold up to millions of route updates. Many configurations, especially those involving more than one neighbor, can require the device to hold even more routes. The device provides dynamic memory allocation for BGP4 data. BGP4 devices automatically allocate memory when needed to support BGP4 neighbors, routes and route attribute entries. Dynamic memory allocation is performed automatically by the software and does not require a reload.

As a guideline, a device with a 2 GB Management module can accommodate 150 – 200 neighbors, with the assumption that the device receives about one million routes total from all neighbors and sends about eight million routes total to neighbors. For each additional one million incoming routes, the capacity for outgoing routes decreases by about two million.

Grouping of RIB-out peers

To improve efficiency in the calculation of outbound route filters, the device groups BGP4 peers together based on their outbound policies. To reduce RIB-out memory usage, the device then groups the peers within an outbound policy group according to their RIB-out routes. All peers sharing a single RIB-out route (up to 32 peers per group) also share a single physical RIB-out entry, resulting in as much as a 30-fold memory usage reduction.

NOTE

RIB-out peer grouping is not shared between different VRFs or address families, and is not supported for VPNV4 or L2VPN peers.

BGP4 Restart

The Restart feature supports high-availability routing. With this feature enabled, disruptions in forwarding are minimized and route flapping is diminished to provide continuous service during the time that a device is performing a restart.

Under normal operation, restarting a BGP4 device causes the network to be reconfigured. In this situation, routes available through the restarting device are first deleted when the device goes down, and are then rediscovered and added back to the routing tables when the device is back up and running. In a network with devices that regularly restart, performance can degrade significantly and limit availability of network resources. BGP4 restart dampens the network response and limits route flapping by allowing routes to remain available between devices during a restart. BGP4 Restart operates between a device and peers, and must be configured on each participating device.

A BGP4 device with Restart enabled advertises this capability to establish peering relationships with other devices. After a restart begins, all of the routes from the restarting device are marked as stale by neighbor devices, but continue to be used for the length of time configured for the restart timer. After the device is restarted, it begins to receive routing updates from the peers. When the restarting device receives the end-of-RIB marker that indicates it has received all of the BGP4 route updates, all of the routes are recomputed and newly computed routes replace the routes labeled as stale in the route map. If the device does not come back up within the time configured for the purge timer, the routes marked stale are removed.

NOTE

A second management module must be installed for the device to function as a restart device. If the device functions as a restart helper device only, there is no requirement for a secondary management module.

The implementation of BGP4 Restart supports the following Internet Draft:

- Draft-ietf-idr-restart-10.txt: restart mechanism for BGP4

For details concerning configuration of the BGP4 Restart feature, refer to [“Configuring BGP4 Restart”](#) on page 111.

BGP4 Peer notification during a management module switchover

The BGP4 Peer notification process restores BGP4 adjacency quickly and allows packet forwarding between the newly active management module and the BGP4 peers. The handling of TCP packets with an MD5 digest prevents the silent dropping of TCP packets without triggering a RESET packet.

The BGP4 peer notification process operates effectively when implemented for the following processes that involve the intentional switching of the active status from one management module to another:


- **System Reload** – When a device undergoes the reload process, both management modules and all interface modules are rebooted. All BGP4 sessions are terminated BEFORE the system triggers the hardware reset.
- **Switchover Requested by User** – Switching over to a standby management module can be triggered by the **switchover**, **reset**, **reload**, and **hitless-reload** commands. When these commands are executed, the active management module resets the BGP4/TCP sessions with BGP4 neighbors before transferring control to the standby management module.

NOTE

Graceful-restart-enabled BGP4 sessions are not reset. The BGP4 graceful-restart protocol allows a BGP4 session to reconnect gracefully without going through the normal process.

Figure 2 describes the procedure used between the management modules in a device and a BGP4 neighbor device.

FIGURE 2 Management module switchover behavior for BGP4 peer notification

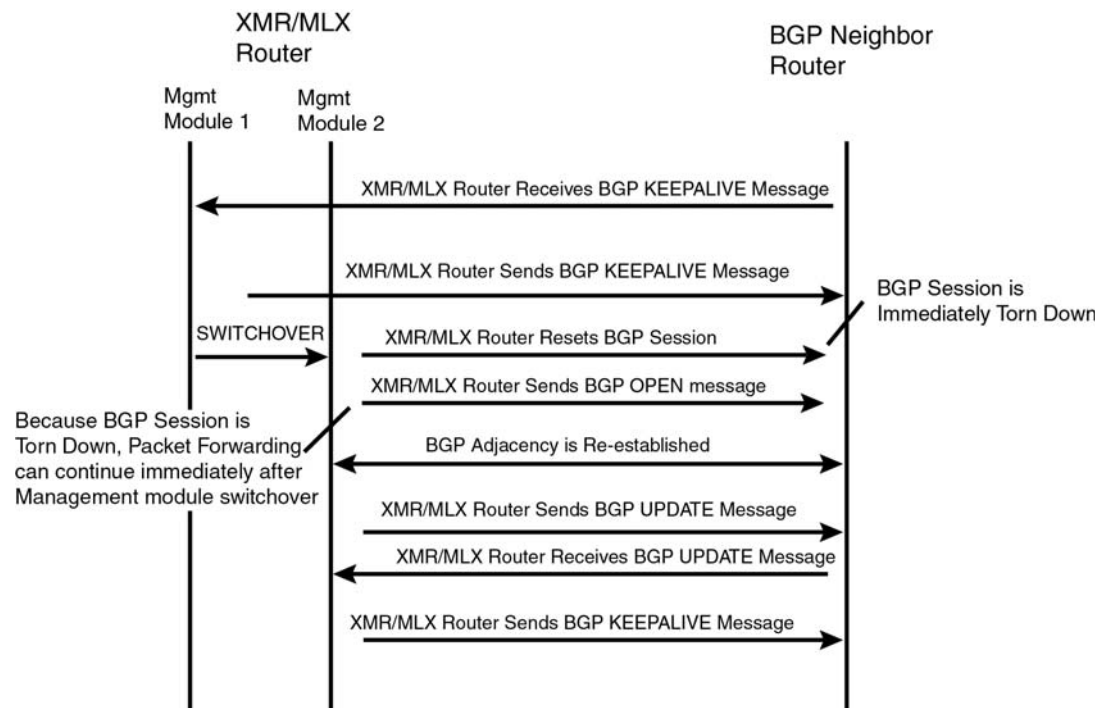

If the active management module fails due to a fault, the management module does not have the opportunity to reset BGP4 sessions with neighbors as described for intentional failovers, and illustrated in [Figure 2](#). In this situation the management module will reboot, or the standby management module becomes the new active management module. Since the new active management module does not have the TCP/BGP4 information needed to reset the previous sessions, a remote BGP4 peer session is only reset when it sends a BGP4/TCP keep-alive packet to this device, or when the BGP4 hold-time expires.


To help reduce the reconnection time after a management module failover or system reload, if an incoming TCP packet contains an MD5 digest, and no matching TCP session is found, the device attempts to find a matching BGP4 peer based on the IP address. If a BGP4 peer configuration can be found, the device looks up the MD5 password configured for the peer, and uses it to send a RESET packet.

BGP4 neighbor local AS


This feature allows you to configure a device so that it adds a peer to an AS that is different from the AS to which it actually belongs. This feature is useful when an ISP is acquired by another ISP. In this situation, customers of the acquired ISP might not want to (or might not be able to) adjust their configuration to connect to the AS of the acquiring provider.

For example, in [Figure 3](#), Customer C is connected to ISP-A which is in AS 100 and ISP-B which is in AS 200.

FIGURE 3 Example of customer connected to two ISPs

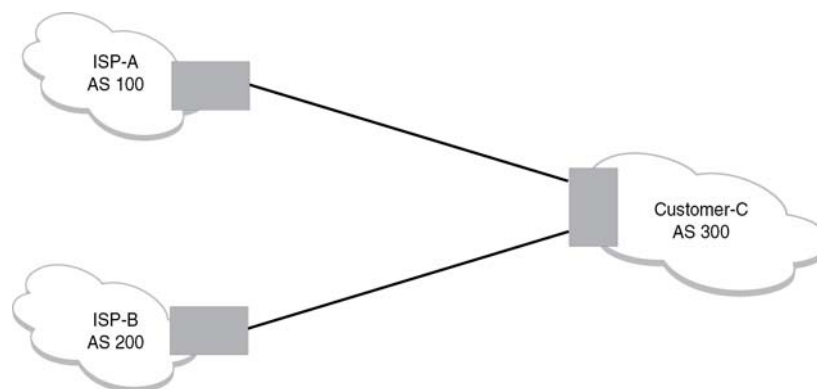

In the example shown in [Figure 4](#), ISP-A has purchased ISP-B. The AS associated with ISP-B changes to AS 100. If Customer C cannot or does not want to change their configuration or peering relationship with ISP-B, a peer with Local-AS configured with the value 200 can be established on ISP-B.

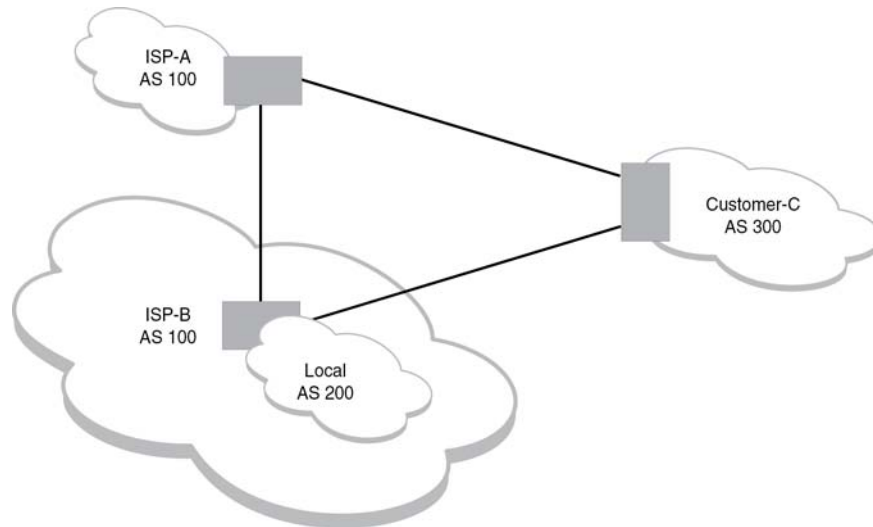FIGURE 4 Example of Local AS configured on ISP-B

A Local AS is configured using the BGP4 **neighbor** command, as described in [“Configuring BGP4 neighbors”](#) on page 47. To confirm that a Local AS has been configured use the **show ip bgp neighbors** command, as described in [“Displaying BGP4 neighbor information”](#) on page 122.


BGP4 null0 routing

BGP4 considers the null0 route in the routing table (for example, static route) as a valid route, and can use the null0 route to resolve the next hop. If the next hop for BGP4 resolves into a null0 route, the BGP4 route is also installed as a null0 route in the routing table.

The null0 routing feature allows network administrators to block certain network prefixes using null0 routes and route-maps, directing a remote device to drop all traffic for a network prefix by redistributing a null0 route into BGP4.

Figure 5 shows a topology for a null0 routing application example.

FIGURE 5 SAMPLE null0 routing application

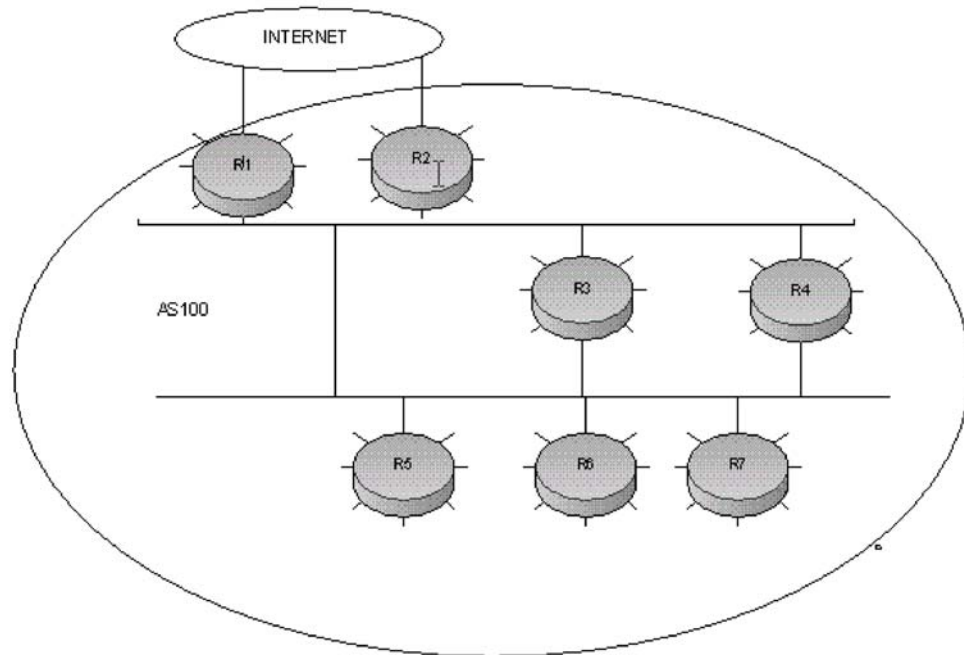

Refer to “[Configuring BGP4 null0 routing](#)” on page 112 for an example of how to configure a null0 routing application to stop denial of service attacks from remote hosts on the Internet.

Configuring BGP4

Once you activate BGP4, you can configure the BGP4 options. There are two configuration levels: global and address family.

At the global level, all BGP4 configurations apply to IPv4 and IPv6. Enter this layer using the **device BGP4** command

Under the global level, you specify an **address family**. Address families separate IPv4 and IPv6 BGP4 configurations. Go to this level by entering the **address-family** command at the device BGP4 level. The command requires you to specify the IPv4 or IPv6 network protocol.

The **address family** command also requires you to select a sub-address family, which is the type of routes for the configuration. Specify multicast or unicast routes.

Table 3 shows the commands that are available at the various BGP4 configuration levels.

TABLE 3 IPv4 BGP4 commands for different configuration levels

Command	Global (IPv4 and IPv6)	IPv4 address family unicast	IPv4 address family multicast	See
address-family	x	x	x	"Entering and exiting the address family configuration level" on page 19
aggregate-address		x	x	"Aggregating routes advertised to BGP4 neighbors" on page 19
always-compare-med	x			"Configuring the device to always compare Multi-Exit Discriminators" on page 20
always-propagate		x		
as-path-ignore	x			"Disabling or re-enabling comparison of the AS-Path length" on page 21
bfd		x		
bfd-enable		x		
bgp-redistribute-internal	x			"Redistributing IBGP routes" on page 21
client-to-client-reflection	x	x	x	"Disabling or re-enabling client-to-client route reflection" on page 25
cluster-id		x		"Configuring a route reflector" on page 25
compare-med-empty-as-path	x			"Configuring the device to always compare Multi-Exit Discriminators" on page 20
compare-routerid	x			"Enabling or disabling comparison of device IDs" on page 26
confederation	x			"Configuring confederations" on page 26
dampening		x	x	"Configuring route flap dampening" on page 37
default-information-originate		x	x	"Originating the default route" on page 38
default-local-preference	x			"Changing the default local preference" on page 38
default-metric		x	x	"Changing the default metric used for redistribution" on page 39
distance	x			"Changing administrative distances" on page 39
enforce-first-as	x			"Requiring the first AS to be the neighbor AS" on page 40
exit-address-family	x	x	x	"Entering and exiting the address family configuration level" on page 19
fast-external-fallover	x			"Enabling fast external fallover" on page 42
graceful-restart		x		"Configuring BGP4 Restart" on page 111
install-igp-cost		x		
local-as	x			"Setting the local AS number" on page 42

TABLE 3 IPv4 BGP4 commands for different configuration levels (Continued)

Command	Global (IPv4 and IPv6)	IPv4 address family unicast	IPv4 address family multicast	See
log-dampening-debug		x		
maxas-limit		x		
maximum-paths		x		“Configuring BGP4 multipath load sharing” on page 43
med-missing-as-worst	x			“Configuring paths without MEDs as the least favorable” on page 46
multipath		x		“Configuring paths without MEDs as the least favorable” on page 46
next-hop-mpls		x		
neighbor	x	x	x	“Configuring BGP4 neighbors” on page 47 “Configuring a BGP4 peer group” on page 60
network		x	x	“Specifying a list of networks to advertise” on page 63
next-hop-enable-default		x		“Using the IP default route as a valid next-hop for a BGP4 route” on page 64
next-hop-recursion		x		“Enabling next-hop recursion” on page 65
redistribute		x	x	“Modifying redistribution parameters” on page 67
rib-route-limit		x		“Grouping of RIB-out peers” on page 10
show	x	x	x	“Displaying BGP4 information” on page 117
static-network				
table-map		x	x	“Using a table map to set the tag value” on page 70
timers	x			“Changing the Keep Alive Time and Hold Time” on page 71
update-time		x	x	“Changing the BGP4 next-hop update timer” on page 71

Parameter changes that take effect immediately

The following parameter changes take effect immediately:

- Enable or disable BGP4.
- Set or change the local AS.
- Add neighbors.
- Change the update timer for route changes.
- Disable or enable fast external failover.
- Specify individual networks that can be advertised.
- Change the default local preference, default information originate setting, or administrative distance.
- Enable or disable use of a default route to resolve a BGP4 next-hop route.

- Enable or disable MED (metric) comparison.
- Require the first AS in an update from an EBGP neighbor to be the neighbor AS.
- Change MED comparison parameters.
- Disable comparison of the AS-Path length.
- Enable comparison of the device ID.
- Enable next-hop recursion.
- Change the default metric.
- Disable or re-enable route reflection.
- Configure confederation parameters.
- Disable or re-enable load sharing.
- Change the maximum number of load sharing paths.
- Change other load-sharing parameters.
- Define route flap dampening parameters.
- Add, change, or negate redistribution parameters (except changing the default MED; see below).
- Add, change, or negate route maps (when used by the **network** command or a redistribution command).
- Aggregate routes.
- Apply maximum AS path limit settings for UPDATE messages.

Parameter changes that take effect after resetting neighbor sessions

The following parameter changes take effect only after the BGP4 sessions on the device are cleared, or reset using the “soft” clear option (refer to [“Closing or resetting a neighbor session”](#) on page 108):

- Change the Hold Time or Keep Alive Time.
- Add, change, or negate filter tables that affect inbound and outbound route policies.
- Apply maximum AS path limit settings to the RIB.

Parameter changes that take effect after disabling and re-enabling redistribution

Changing the default MED (metric) change takes effect only after you disable and then re-enable redistribution.

Enabling and disabling BGP4

BGP4 is disabled by default. To enable BGP4, you must perform the following steps.

1. Enable the BGP4 protocol.
2. Set the local AS number.

NOTE

BGP4 is not functional until you specify the local AS number.

3. Add each BGP4 neighbor (peer BGP4 device) and identify the AS the neighbor is in.
4. Save the BGP4 configuration information to the system configuration file.

For example, enter commands such as the following.

```
Brocade> enable
Brocade# configure terminal
Brocade(config)# router bgp
BGP4: Please configure 'local-as' parameter in order to enable BGP4.
Brocade(config-bgp)# local-as 10
Brocade(config-bgp)# write memory
```

Syntax: router bgp

The **router bgp** command enables the BGP4 protocol.

For information on the local AS number, refer to [“Setting the local AS number”](#) on page 42.

NOTE

By default, the Brocade device ID is the IP address configured on the lowest numbered loopback interface. If the device does not have a loopback interface, the default device ID is the lowest numbered IP interface address configured on the device. For more information, refer to [“Changing the device ID”](#) on page 71. If you change the device ID, all current BGP4 sessions, OSPF adjacencies, and OSPFv3 adjacencies are cleared.

NOTE

When BGP4 is enabled on a device, resetting the system is unnecessary. The protocol is activated when you enable it. The device begins a BGP4 session with a BGP4 neighbor when you add the neighbor.

Disabling BGP4

If you disable BGP4, the device removes all the running configuration information for the disabled protocol from the running configuration. To restore the BGP4 configuration, you must reload the software to load the BGP4 configuration from the startup configuration. When you save the startup configuration file after disabling the protocol, all of the BGP4 configuration information for the disabled protocol is removed from the startup configuration file.

The CLI displays a warning message such as the following.

```
Brocade(config)# no router bgp
router bgp mode now disabled and runtime configuration is erased. All bgp config
data will be lost when writing to flash!
```

The Web Management Interface does not display a warning message.

If you are testing a BGP4 configuration and may need to disable and re-enable the protocol, you should make a backup copy of the startup configuration file containing the BGP4 configuration information. If you remove the configuration information by saving the configuration after disabling the protocol, you can restore the BGP4 configuration by copying the backup copy of the startup configuration file onto the flash memory.

To disable BGP4 without losing the BGP4 configuration information, remove the local AS (for example, by entering the **no local-as num** command). When you remove the local AS, BGP4 retains the other configuration information but will not become operational until you reset the local AS.

Entering and exiting the address family configuration level

The BGP4 address family contains a unicast or multicast sub-level.

To go to the IPv4 BGP4 unicast address family configuration level, enter the following command.

```
Brocade(config-bgp)# address-family ipv4 unicast
Brocade(config-bgp)#
```

NOTE

The CLI prompt for the global BGP4 level and the BGP4 address-family IPv4 unicast level is the same.

To go to the IPv4 BGP4 multicast address family configuration level, enter the following command.

```
Brocade(config-bgp)# address-family ipv4 multicast
Brocade(config-bgp-ipv4m)#
```

Syntax: [no] address-family ipv4 unicast [vrf vrf-name] | ipv4 multicast

The default is the IPv4 unicast address family level.

The **vrf** option allows you to configure a unicast instance for the VRF specified by the *vrf-name* variable.

To exit an address family configuration level, enter the following command.

```
Brocade(config-bgp)# exit-address-family
Brocade(config-bgp)#
```

Syntax: [no] exit-address-family

Aggregating routes advertised to BGP4 neighbors

By default, the device advertises individual routes for all networks. The aggregation feature allows you to configure the device to aggregate routes from a range of networks into a single network prefix. For example, without aggregation, the device will individually advertise routes for networks 10.95.1.0/24, 10.95.2.0/24, and 10.95.3.0/24. You can configure the device to end a single, aggregate route for the networks instead. The aggregate route can be advertised as 10.95.0.0/16.

To aggregate routes for 10.157.22.0/24, 10.157.23.0/24, and 10.157.24.0/24, enter the following command.

```
Brocade(config-bgp)# aggregate-address 10.157.0.0 255.255.0.0
```

Syntax: [no] aggregate-address ip-addr ip-mask [as-set] [summary-only] [suppress-map map-name] [advertise-map map-name] [attribute-map map-name]

The *ip-addr* and *ip-mask* parameters specify the aggregate value for the networks. Specify 0 for the host portion and for the network portion that differs among the networks in the aggregate. For example, to aggregate 10.0.1.0/24, 10.0.2.0/24, and 10.0.3.0/24, enter the IP address 10.0.0.0 and the network mask 255.255.0.0.

The **as-set** parameter causes the device to aggregate AS-path information for all the routes in the aggregate address into a single AS-path.

The **summary-only** parameter prevents the device from advertising more specific routes contained within the aggregate route.

The **suppress-map** *map-name* parameter prevents the more specific routes contained in the specified route map from being advertised.

The **advertise-map** *map-name* parameter configures the device to advertise the more specific routes in the specified route map.

The **attribute-map** *map-name* parameter configures the device to set attributes for the aggregate routes based on the specified route map.

NOTE

For the **suppress-map**, **advertise-map**, and **attribute-map** parameters, the route map must already be defined. Refer to “[Defining route maps](#)” on page 81 for information on defining a route map.

Configuring the device to always compare Multi-Exit Discriminators

A Multi-Exit Discriminator (MED) is a value that the BGP4 algorithm uses when it compares multiple paths received from different BGP4 neighbors in the same AS for the same route. In BGP4, a MED for a route is equivalent to its metric.

BGP4 compares the MEDs of two otherwise equivalent paths **if and only if** the routes were learned from the same neighboring AS. This behavior is called **deterministic MED**. Deterministic MED is always enabled and cannot be disabled.

You can enable the device to always compare the MEDs, regardless of the AS information in the paths. For example, if the device receives UPDATES for the same route from neighbors in three ASs, the device can compare the MEDs of all the paths together instead of comparing the MEDs for the paths in each AS individually.

To enable this comparison, enter the **always-compare-med** command at the BGP4 configuration level of the CLI. This option is disabled by default.

By default, value 0 (most favorable) is used in MED comparison when the MED attribute is not present. The default MED comparison results in the device favoring route paths that do not have their MEDs. Use the **med-missing-as-worst** command to force the device to regard a BGP4 route with a missing MED attribute as the least favorable route.

NOTE

MED comparison is not performed for internal routes originated within the local AS or confederation unless the **compare-med-empty-asp** command is configured.

To configure the device to always compare MEDs, enter the following command.

```
Brocade(config-bgp)# always-compare-med
```


Syntax: [no] always-compare-med

The following BGP4 command directs BGP4 to take the MED value into consideration even if the route has an empty as-path path attribute.

```
Brocade(config)# router bgp
Brocade(config-bgp-router)# compare-med-empty-aspath
```

Syntax: [no] compare-med-empty-aspath

Disabling or re-enabling comparison of the AS-Path length

AS-Path comparison is Step 5 in the algorithm that BGP4 uses to select the next path for a route. Comparison of the AS-Path length is enabled by default. To disable it, enter the following command at the BGP4 configuration level of the CLI.

```
Brocade(config-bgp)# as-path-ignore
```

Syntax: [no] as-path-ignore

This command disables comparison of the AS-Path lengths of otherwise equal paths. When you disable AS-Path length comparison, the BGP4 algorithm shown in [“How BGP4 selects a path for a route \(BGP best path selection algorithm\)”](#) on page 5 skips from Step 4 to Step 6.

Redistributing IBGP routes

By default, in default VRF instance, the device does not allow redistribute IBGP routes from BGP4 into RIP, OSPF, or IS-IS. This behavior helps eliminate routing loops. In non-default VRF instances, by default, the device does allow redistribution IBGP routes from BGP4 into RIP, OSPF.

To enable the device to redistribute BGP4 routes into OSPF, RIP, or IS-IS, enter the following command.

```
Brocade(config-bgp)# bgp-redistribute-internal
```

Syntax: [no] bgp-redistribute-internal

To disable redistribution of IBGP routes into RIP, IS-IS, and OSPF, enter the following command.

```
Brocade(config-bgp)# no bgp-redistribute-internal
```

BGP router reflector

A BGP router selects a preferred BGP4 route for a specific prefix learned from multiple peers by using the BGP best path selection algorithm, and installs the BGP4 route in the Routing Table Manager (RTM). The BGP router marks the preferred BGP4 route as the best route, and advertises the route to other BGP4 neighbors. Generally, the RTM route table size is larger than the number of unique BGP4 routes in the BGP4 route table. All preferred BGP4 routes are installed in RTM and are marked as the best BGP4 routes.

However, in certain configurations it is possible that the total number of preferred BGP4 routes may exceed the RTM route table size limit. Therefore, some preferred BGP4 routes may not be installed in the RTM, and the BGP router is not able to forward traffic correctly for those BGP4 routes. Those BGP4 routes are not considered as the best BGP4 routes, and are not advertised to other BGP4 neighbors because traffic miss-forwarding or packet drop can occur.

When a BGP router is configured as only a route reflector server, and is not placed directly in the forwarding path, it is possible to mark all preferred BGP4 routes as the best routes to be advertised to other BGP4 neighbors even if the routes are not installed in the RTM. To support the behavior of a BGP router as a route reflector server in such a scenario, use the **always-propagate** command and the **rib-route-limit** command. The following section, “[Configuring BGP router reflector](#)” describes these commands in more detail.

NOTE

The **always-propagate** command and the **rib-route-limit** command are supported on Brocade MLX series, Brocade NetIron XMR, Brocade NetIron CER, and Brocade NetIron CES devices.

Configuring BGP router reflector

The **always-propagate** command enables a router to mark a preferred BGP4 route not installed in the RTM as the best route, and advertise the route to other BGP4 neighbors. The same process for outbound route policy continues to apply to all best BGP4 routes. The **rib-route-limit** command limits the number of BGP4 Routing Information Base (RIB) routes that can be installed in the RTM. The RTM must be able to reserve enough entries for Interior Gateway Protocol (IGP) routes because the IGP routes are required by BGP4 to resolve BGP4 next-hop entries. If the RTM is not able to reserve enough entries for IGP routes, BGP4 RIB routes can fill the entire RTM with only BGP4 route entries. The **rib-route-limit** command enables IGP and BGP4 route entries to be installed in the RTM.

NOTE

The **always-propagate** command and the **rib-route-limit** command are configurable in any order under the BGP4 address family configuration level.

Perform the following steps to advertise a preferred BGP4 route not installed in the RTM.

1. Configure a BGP4 unicast route. Enter a command such as the following.

```
Brocade(config-bgp)#address-family ipv4 unicast
```

Syntax: **address-family ipv4 unicast** [**vrf vrf-name**] | **ipv4 multicast** | **ipv6 unicast** | **ipv6 multicast**

NOTE

To configure a BGP4 unicast route for a specified VRF instance, use the **vrf vrf-name** parameter. The **vrf vrf-name** parameter allows you to create a VPN routing or forwarding instance specified by the **vrf-name** variable. The **vrf-name** variable specifies the name of the VRF instance you want to create.

2. Enter the **always-propagate** command to enable a preferred BGP4 route (not installed in the RTM) to be advertised to other BGP4 neighbors.

```
Brocade(config-bgp)#always-propagate
```

Syntax: **always-propagate**

3. Enter the **rib-route-limit** command to set the maximum number of BGP4 rib routes that can be installed in the RTM.

```
Brocade(config-bgp)#rib-route-limit 500
```

Syntax: **rib-route-limit** *decimal*

The *decimal* variable specifies the maximum number of BGP4 rib routes that can be installed in the RTM. The user may enter any number for the *decimal* variable for the **rib-route-limit** command. By default, there is no limit. If the **rib-route-limit** command is set to 0, no BGP4 routes are installed in the RTM. If a BGP4 route is not installed in the RTM because of the configuration set by the **rib-route-limit** command, the **always-propagate** command must be enabled for preferred BGP4 routes to be advertised to the BGP4 neighbors.

If the **rib-route-limit** command is configured to a value that is below the number of BGP4 routes already installed in the RTM, the following warning message is displayed on the console.

```
Brocade(config-bgp)# rib-route-limit 250
The new limit is below the current bgp rib route count. Please use Clear ip bgp
routes command to remove bgp rib routes.
```

You can only use one of the following commands to clear all BGP4 routes in the RTM, and reset the routes for preferred BGP4 routes to be reinstalled in the RTM. Depending on the type of route the **rib-route-limit** command is used for, select from one of the following commands:

- **clear ip bgp routes** command. This command is used to clear IPv4 BGP unicast routes.
- **clear ipv6 bgp routes** command. This command is used to clear IPv6 BGP unicast routes.
- **clear ip mbgp routes** command. This command is used to clear IPv4 MBGP multicast routes.
- **clear ipv6 mbgp routes** command. This command is used to clear IPv6 MBGP multicast routes.

NOTE

Brocade does not guarantee that the same number of preferred BGP4 routes will be reinstalled in the RTM.

4. To exit the BGP4 unicast or multicast address family configuration, enter the following command.

```
Brocade(config-bgp-ipv4m)#exit-address-family
```

Syntax: **exit-address-family**

When you enter the **exit-address-family** command at the address family configuration level, you return to the BGP4 unicast address family configuration level (the default BGP4 level).

Displaying configuration for BGP router reflector

To display the configuration for preferred BGP4 routes not installed in the RTM, use the **show ip bgp route** command as shown in the following example.

BGP router reflector

```
Brocade(config-bgp)# show ip bgp route
Total number of BGP Routes: 333422
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH m:NOT-INSTALLED-MULTIPATH
S:SUPPRESSED F:FILTERED s:STALE
Prefix          Next Hop          MED          LocPrf        Weight Status
...5           10.12.0.0/24      10.100.100.4          100           0      E
      AS_PATH: 48 1994 65148 21948 6461 1239 4837 4808 17431 18245...
```

Syntax: show ip bgp route

In the previous output, BGP4 receives 333,422 routes and the **rib-route-limit** command is configured to 300,000 routes. The **always-propagate** command has not been enabled. However, because the **rib-route-limit** command is configured to allow for 300,000 routes in the RTM, BGP4 installs only 300,000 routes of the 333,422 routes received in the RTM. When the **always-propagate** command is enabled, a preferred BGP4 route not installed in the RTM is now considered as the best BGP4 route to be advertised to other peers. The route is identified by the letter “b” (for NOT-INSTALLED-BEST) in the Status field. However, when the **always-propagate** command is not enabled, the status field displays only the default letter “E”, as displayed for BGP4 route 10.12.0.0/24. The letter “B” or “b” is missing from the Status field.

NOTE

The description of the status “b: NOT-INSTALLED-BEST” has changed. The status description for “b: NOT-INSTALLED-BEST” is now: The routes received from the neighbor are the best BGP4 routes to their destinations, but were nonetheless not installed in the IP route table due to the **rib-route-limit** option (or RTM route table size limit), and the **always-propagate** option to allow the propagating of those best BGP routes.

NOTE

Traffic loss on a BGP4 route occurs when a device is advertising preferred BGP4 routes not installed in the RTM as part of the forwarding path.

Because the BGP4 route 10.12.0.0/24 is not considered as the best BGP4 route, the route is not advertised to other BGP4 neighbors.

```
Brocade(config-bgp)# show ip bgp route 10.12.0.0/24
Number of BGP Routes matching display condition : 1
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH m:NOT-INSTALLED-MULTIPATH
S:SUPPRESSED F:FILTERED s:STALE
Prefix          Next Hop          MED          LocPrf        Weight Status
1              10.12.0.0/24      10.100.100.4          100           0      E
      AS_PATH: 48 1994 65148 21948 6461 1239 4837 4808 17431 18245
Last update to IP routing table: 0h16m2s
No path is selected as BEST route
```

Syntax: show ip bgp route ip-address/prefix

After enabling the **always-propagate** command, the BGP4 route is now considered the best BGP4 route, even though the route is not installed in the RTM. Because the **rib-route-limit** command was configured to allow for only 300,000 routes in the RTM some preferred BGP4 routes are not installed in the RTM, and are not advertised to other BGP4 neighbors. By enabling the

always-propagate command, the router is now able to advertise those preferred BGP4 routes to other BGP4 neighbors. In the following example, the Status field displays “bE” indicating that the route is now considered the best BGP4 route for forwarding and will be advertised to other BGP4 neighbors.

```
Brocade(config-bgp)# show ip bgp route 10.12.0.0/24
Number of BGP Routes matching display condition : 1
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH m:NOT-INSTALLED-MULTIPATH
S:SUPPRESSED F:FILTERED s:STALE
Prefix           Next Hop           MED           LocPrf        Weight Status
1 10.12.0.0/24     10.100.100.4      100           0             bE
  AS_PATH: 48 1994 65148 21948 6461 1239 4837 4808 17431 18245
Last update to IP routing table: 0h12m53s
Route is to be sent to 1 peers:
10.0.0.14 (6)
```

For an explanation of the fields displayed in the output of the **show ip bgp route** command, refer to [Table 11](#) on page 135.

Disabling or re-enabling client-to-client route reflection

By default, the clients of a route reflector are not required to be fully meshed. Routes from a client are reflected to other clients. However, if the clients are fully meshed, route reflection is not required between clients.

If you need to disable route reflection between clients, enter the **no client-to-client-reflection** command. When this feature is disabled, route reflection does not occur between clients does still occur between clients and non-clients.

```
Brocade(config-bgp)# no client-to-client-reflection
```

Enter the following command to re-enable the feature.

```
Brocade(config-bgp)# client-to-client-reflection
```

Syntax: [no] **client-to-client-reflection**

Configuring a route reflector

You can configure one cluster ID on the device so that all route-reflector clients for the device become members of the cluster.

To configure a device with cluster id 1, enter the following command.

```
Brocade(config-bgp)# cluster-id 1
```

Syntax: [no] **cluster-id num | ip-addr**

The *num | ip-addr* parameters specify the cluster ID (1 – 4294967295) or an IP address. The default is the device ID.

NOTE

If the cluster contains more than one route reflector, you need to configure the same cluster ID on all the route reflectors in the cluster. The cluster ID helps route reflectors avoid loops within the cluster.

Enabling or disabling comparison of device IDs

Device ID comparison is Step 11 in the algorithm BGP4 uses to select the next path for a route.

NOTE

Comparison of device IDs is applicable only when BGP4 load sharing is disabled.

When device ID comparison is enabled, the path comparison algorithm compares the device IDs of the neighbors that sent the otherwise equal paths:

- If BGP4 load sharing is disabled (maximum-paths 1), the device selects the path that came from the neighbor with the lower device ID.
- If BGP4 load sharing is enabled, the device load shares among the remaining paths. In this case, the device ID is not used to select a path.

NOTE

Device ID comparison is disabled by default.

To enable device ID comparison, enter the **compare-routerid** command at the BGP4 configuration level of the CLI.

```
Brocade(config-bgp)# compare-routerid
```

Syntax: [no] **compare-routerid**

For more information, refer to “[How BGP4 selects a path for a route \(BGP best path selection algorithm\)](#)” on page 5.

Configuring confederations

A **confederation** is a BGP4 Autonomous System (AS) that has been subdivided into multiple, smaller ASs. Subdividing an AS into smaller ASs simplifies administration and reduces BGP4-related traffic, which in turn reduces the complexity of the Interior Border Gateway Protocol (IBGP) mesh among the BGP4 devices in the AS.

The implementation of this feature is based on RFC 3065.

Normally, all BGP4 devices within an AS must be fully meshed, so that each BGP4 device has BGP4 sessions to all the other BGP4 devices within the AS. This is feasible in smaller ASs, but becomes unmanageable in ASs containing many BGP4 devices.

When you configure BGP4 devices into a confederation, all the devices within a sub-AS (a subdivision of the AS) use IBGP and must be fully meshed. However, devices use EBGp to communicate between different sub-ASs.

Another way to reduce the complexity of an IBGP mesh is to use route reflection. However, if you want to run different Interior Gateway Protocols (IGPs) within an AS, you must configure a confederation. You can run a separate IGP within each sub-AS.


To configure a confederation, configure groups of BGP4 devices into sub-ASs. A sub-AS is simply an AS. The term “sub-AS” distinguishes ASs within a confederation from ASs that are not in a confederation. For the viewpoint of remote ASs, the confederation ID is the AS ID. Remote ASs do not know that the AS represents multiple sub-ASs with unique AS IDs.

NOTE

You can use any valid AS numbers for the sub-ASs. If your AS is connected to the Internet, it is recommended that you use numbers from within the private AS range (64512 – 65535). These are private ASs numbers and BGP4 devices do not propagate these AS numbers to the Internet.

Figure 6 shows an example of a BGP4 confederation.

FIGURE 6 Example BGP4 confederation

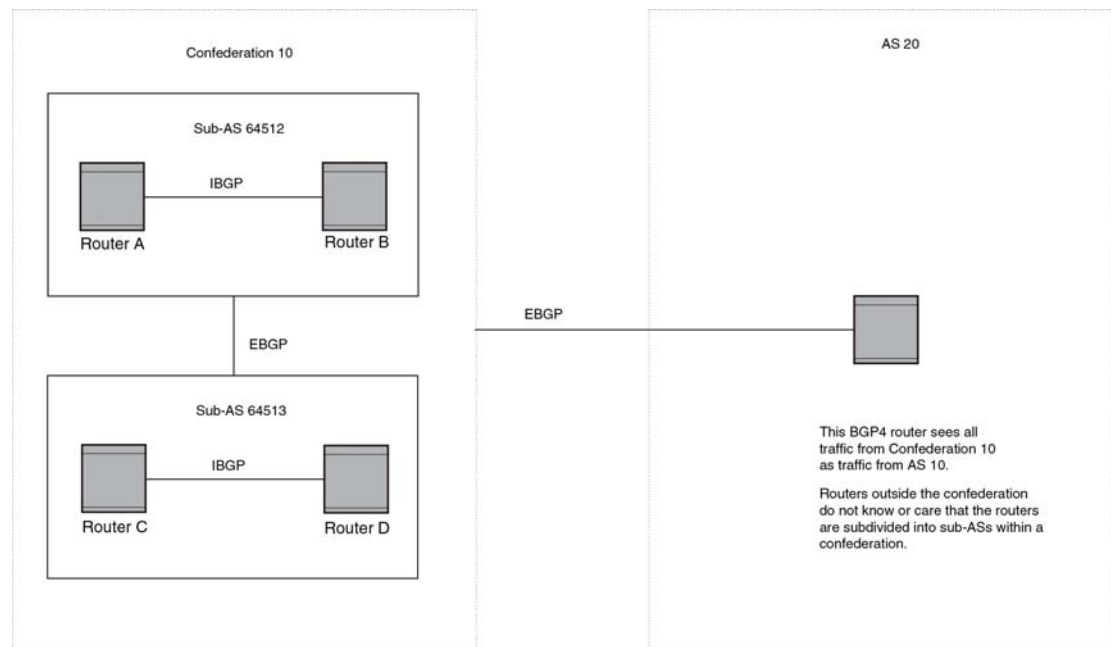

In this example, four devices are configured into two sub-ASs, each containing two of the devices. The sub-ASs are members of confederation 10. Devices within a sub-AS must be fully meshed and communicate using IBGP. In this example, devices A and B use IBGP to communicate. Devices C and D also use IBGP. However, the sub-ASs communicate with one another using EBGP. For example, device A communicates with device C using EBGP. The devices in the confederation communicate with other ASs using EBGP.

Devices in other ASs are unaware that devices A – D are configured in a confederation. In fact, when devices in confederation 10 send traffic to devices in other ASs, the confederation ID is the same as the AS number for the devices in the confederation. Thus, devices in other ASs see traffic as coming from AS 10 and are unaware that the devices in AS 10 are subdivided into sub-ASs within a confederation.

Configuring a BGP4 confederation

To configure a BGP4 configuration, perform these configuration tasks on each BGP4 device within the confederation:

Configuring confederations

- Configure the local AS number. The local AS number indicates membership in a sub-AS. All BGP4 devices with the same local AS number are members of the same sub-AS. BGP4 devices use the local AS number when communicating with other BGP4 devices in the confederation.
- Configure the confederation ID. The confederation ID is the AS number by which BGP4 devices outside the confederation recognize the confederation. A BGP4 device outside the confederation is not aware of, and does not care that BGP4 devices are in multiple sub-ASs. A BGP4 device uses the confederation ID to communicate with devices outside the confederation. The confederation ID must differ from the sub-AS numbers.
- Configure the list of the sub-AS numbers that are members of the confederation. All devices within the same sub-AS use IBGP to exchange device information. Devices in different sub-ASs within the confederation use EBGP to exchange device information.

The following command examples show how to implement the confederation shown in [Figure 6](#).

To configure four devices to be members of confederation 10 (consisting of sub-ASs 64512 and 64513), enter commands such as the following.

Commands for Device A

```
BrocadeA(config)# router bgp
BrocadeA(config-bgp)# local-as 64512
BrocadeA(config-bgp)# confederation identifier 10
BrocadeA(config-bgp)# confederation peers 64512 64513
BrocadeA(config-bgp)# write memory
```

Syntax: [no] **local-as** *num*

The *num* parameter with the **local-as** command indicates the AS number for the BGP4 devices within the sub-AS. You can specify a number in the range 1 – 4294967295. It is recommended that you use a number within the range of well-known private ASs, 64512 – 65535.

Syntax: [no] **confederation identifier** *num*

The *num* parameter with the **confederation identifier** command indicates the confederation number. The confederation ID is the AS number by which BGP4 devices outside the confederation recognize the confederation. A BGP4 device outside the confederation is not aware of, and does not care that your BGP4 devices are in multiple sub-ASs. BGP4 devices use the confederation ID when communicating with devices outside the confederation. The confederation ID must be different from the sub-AS numbers. For the *num* parameter, you can specify a number in the range 1 – 4294967295.

Syntax: [no] **confederation peers** *num* [*num* ...]

The *num* parameter with the **confederation peers** command indicates the sub-AS numbers for the sub-ASs in the confederation. You can list all sub-ASs in the confederation. You must specify all the sub-ASs with which this device has peer sessions in the confederation. All the devices within the same sub-AS use IBGP to exchange device information. Devices in different sub-ASs within the confederation use EBGP to exchange device information. The *num* is a number in the range 1 – 4294967295.

Commands for Device B

```
BrocadeB(config)# router bgp
BrocadeB(config-bgp)# local-as 64512
BrocadeB(config-bgp)# confederation identifier 10
BrocadeB(config-bgp)# confederation peers 64512 64513
BrocadeB(config-bgp)# write memory
```


Commands for Device C

```

BrocadeC(config)# router bgp
BrocadeC(config-bgp)# local-as 64513
BrocadeC(config-bgp)# confederation identifier 10
BrocadeC(config-bgp)# confederation peers 64512 64513
BrocadeC(config-bgp)# write memory

```

Commands for Device D

```

BrocadeD(config)# router bgp
BrocadeD(config-bgp)# local-as 64513
BrocadeD(config-bgp)# confederation identifier 10
BrocadeD(config-bgp)# confederation peers 64512 64513
BrocadeD(config-bgp)# write memory

```

Four-byte Autonomous System Numbers (AS4)

This section describes the reasons for enabling four-byte autonomous system numbers (AS4s). AS4s are supported by default. You can specify and view AS4s by default and using the enable facility described in this section. However, because not all devices in a network are always capable of utilizing AS4s, the act of enabling them on the local device initiates a facility for announcing the capability and negotiating its use with neighbors. If you do not enable AS4s on a device, other devices do not know that this device is sending them.

The system uses a hierarchy to prioritize the utilization of the AS4 capability. The prioritization depends on the CLI configuration commands. AS4s can be enabled and configured at the level of a neighbor, a peer group, or globally for the entire device, according to the following bottom-up hierarchy:

- If a neighbor has no configuration for AS4s but it belongs to a peer group, the neighbor uses the configuration from the peer group. For example, if you configure a neighbor but do not include a specification for AS4s, one of the following applies:
 - The neighbor uses the AS4 configuration for a peer group if it belongs to a peer group.
 - The neighbor uses the device configuration if it does not belong to a peer group or the peer group has no AS4 configuration.
- If a peer group has no configuration for AS4s, it can use the global configuration of the device. If the device has no configuration for AS4s, then a neighbor or peer group without a configuration for AS4s use the device default—no announcement or negotiation of AS4s.
- If a neighbor belongs to peer group with an AS4 configuration but you want that neighbor to be disabled or have a different AS4 configuration, the neighbor AS4 configuration overrides the peer group configuration. For example, you can ensure that neighbor has no AS4 announcement and negotiation activity even though the peer group is enabled for AS4 capability.

NOTE

The configuration for AS4 can be enabled, disabled, or can have no explicit configuration.

CLI commands allow you to disable AS4s on an entity whose larger context has AS4s enabled. For example, you can use a CLI command to disable AS4s on a neighbor that is a member of a peer group that is enabled for AS4s. Refer to [“Enabling AS4 numbers”](#) on page 30.

Normally, AS4s are sent only to a device, peer group, or neighbor that is similarly configured for AS4s. If a AS4 is configured for a local-AS, the system signals this configuration by sending AS_TRANS in the My Autonomous System field of the OPEN message. However, if the AS4 capability for a neighbor is disabled, the local device does not send the four-octet Autonomous System number capability to the neighbor.

Enabling AS4 numbers

This section describes how to enable the announcement and negotiation of AS4s and describes the different types of notation that you can use to represent a AS4.

You can enable AS4s on a device, a peer group, and a neighbor. For global configuration, the **capability** command in the BGP4 configuration context enables or disables AS4 support. For a peer group or a neighbor, **capability** is a keyword for the **neighbor** command. In addition to enabling AS4s for a neighbor or a peer group, you can also use the combination of the **capability** keyword and the optional **enable** or **disable** keyword to disable this feature in a specific case where the AS4s are enabled for a larger context. The [“Neighbor configuration of AS4s”](#) section illustrates this capability.

Global AS4 configuration

To enable AS4s globally, use the **capability** command in the BGP4 configuration context, as shown.

```
Brocade(config-bgp)# capability as4 enable
```

Syntax: [no] **capability as4 enable | disable**

The no form of the **capability** command deletes the announcement and negotiation configuration of AS4s (if it has been enabled) at the global level. Using the regular form of the command with the **disable** keyword has the same effect on the global configuration. Disabling or using the no form of the command does not affect the configuration at the level of a peer or neighbor.

The consequences of choosing between the **enable** or **disable** keyword are reflected in the output of the **show running configuration** command.

Peer group configuration of AS4s

To enable AS4s for a peer group, use the **capability** keyword with the **neighbor** command in the BGP4 configuration context, as the following example for the Peergroup_1 peer group illustrates.

```
Brocade(config-bgp)# neighbor Peergroup_1 capability as4 enable
```

Syntax: [no] **neighbor peer-group-name capability as4 enable | disable**

The **no** form of the **neighbor** command along with the **capability as4** keywords disables the announcement and negotiation of AS4s in the named peer group. Using the regular form of the command with the **disable** keyword has the same effect on the neighbor configuration.

The consequences using the **enable** or **disable** keywords are reflected in the output of the **show running configuration** command. However, if the peer group configuration omits an explicit AS4 argument, the **show running configuration** output will not contain AS4 information.

Neighbor configuration of AS4s

To enable AS4s for a neighbor, use the **capability** and **as4** keywords with the **neighbor** command in the BGP4 configuration context, as the following example for IP address 10.1.1.1 illustrates.

```
Brocade(config-bgp)# neighbor 10.1.1.1 capability as4 enable
```

Syntax: [no] **neighbor IP address capability as4 enable | disable**

The **no** form of the **neighbor** command with the **capability as4** keywords deletes the neighbor-enable for AS4s.

The consequences of using the **enable** or **disable** keywords are reflected in the output of the **show running configuration** command. However, if the neighbor configuration omits an explicit AS4 argument, the **show running configuration** output will not contain AS4 information.

To disable AS4s on a particular neighbor within a peer group that is enabled for AS4s, enter a command similar to the following.

```
Brocade(config-bgp)# neighbor 10.1.1.1 capability as4 disable
```

Specifying the local AS number

The local autonomous system number (ASN) identifies the AS where the BGP4 device resides.

Normally, AS4s are sent only to a device, peer group, or neighbor that is similarly configured for AS4s. Typically, if you try to set up a connection from an AS4-enabled device to a device that processes only two-byte ASNs, the connection fails to come up unless you specify the reserved ASN 23456 as the local ASN to send to the far-end device.

To set the local AS number, enter commands such as the following.

```
Brocade(config)# router bgp
BGP4: Please configure 'local-as' parameter in order to enable BGP4.
Brocade(config-bgp)# local-as 100000
Brocade(config-bgp)# write memory
```

Syntax: [no] **local-as** *num*

The *num* parameter specifies a local ASN in the range 1 – 4294967295. No default exists for *num*. ASNs 64512 – 65535 are the well-known private BGP4 AS numbers and are not advertised to the Internet community.

Route-map set commands and AS4s

You can prepend an AS4 number to an AS path or make the AS number a tag attribute for a route map, as shown here.

```
Brocade(config-routemap test)# set as-path prepend 7701000
```

Syntax: [no] **set as-path prepend** *num, num, ...* | **tag**

Use the **no** form of this command to remove the configuration.

NOTE

If the AS path for a route map has prepended ASNs and you want to use the **no** form of the command to delete the configuration, you must include the prepended ASNs in the **no set as-path** entry. For example, if 70000 and 70001 have been prepended to a route map, enter **no set as-path prepend 70000 70001**. As a shortcut, in the configuration context of a particular route map, you can also copy and paste ASNs from the output of **show** commands, such as **show route-map** or **show ip bgp route**.

Use the **prepend** keyword to prepend one or more ASNs. The maximum number of ASNs that you can prepend is 16. The range for each ASN is 1 – 4294967295.

Entering the **tag** keyword sets the tag as an AS-path attribute.

You can specify a route target (rt) or a site of origin (soo) for an extended community, as shown in the following example.

```
Brocade(config-routemap test)# set extcommunity rt 7701000:10
```

Syntax: [no] set extcommunity rt asn:nn | ip-address:nn | soo asn:nn | ip-address:nn

The **rt** keyword specifies a route target in the form of a route ID. The route ID can be an ASN or IP address. The second part of the route ID is a user-specific numeric variable *nn*. The ASN can be a maximum of 4 bytes (in the range 1 – 4294967295). If you specify an AS4 or IP address, the *nn* variable is limited to a maximum length of 2 bytes. If the feature for announcing and negotiating AS4 is disabled, *nn* can be 4 bytes.

The **soo** keyword specifies a site or origin in the form of a route ID. The route ID can be an ASN4 or IP address. The second part of the route ID is a user-specific numeric variable *nn*. The AS4 can be a maximum of 4 bytes (in the range 1 – 4294967295). If you specify an AS4 or IP address, the *nn* variable is limited to a maximum length of 2 bytes. If the feature for announcing and negotiating AS4 is disabled, *nn* can be 4 bytes.

Clearing BGP4 routes to neighbors

You can clear BGP4 connections using the AS4 as an argument with the **clear ip bgp neighbor** command in the configuration context level of the CLI, as shown.

```
Brocade(config)# clear ip bgp neighbor 80000
```

Syntax: clear ip bgp neighbor all | ip-addr | peer-group-name | as-num
[last-packet-with-error | notification-errors | [soft [in | out]] | soft-outbound]

The neighbor specification is either **all**, *ip-addr*, *peer-group-name*, or *as-num*. The **all** parameter specifies all neighbors. The *ip-addr* parameter specifies a neighbor by its IP interface with the device. The *peer-group-name* specifies all neighbors in a specific peer group. The *as-num* parameter specifies all neighbors within the specified AS. After choosing one mandatory parameter, you can choose an optional parameter.

The **soft [in | out]** parameter determines whether to refresh the routes received from the neighbor or the routes sent to the neighbor. If you do not specify **in** or **out**, the device performs a soft refresh in both options:

- **soft in** performs one of the following actions on inbound routes, according to other configuration settings:
 - If you enabled soft reconfiguration for the neighbor or peer group, **soft in** updates the routes by comparing the route policies against the route updates that the device has stored. Soft reconfiguration does not request additional updates from the neighbor or otherwise affect the session with the neighbor.
 - If you did not enable soft reconfiguration, **soft in** requests the entire BGP4 route table on the neighbor (Adj-RIB-Out), then applies the filters to add, change, or exclude routes.
 - If a neighbor does not support dynamic refresh, **soft in** resets the neighbor session.
- **soft out** updates all outbound routes and then sends the entire BGP4 route table for the device (Adj-RIB-Out) to the neighbor after the device changes or excludes the routes affected by the filters.
- The **soft-outbound** parameter updates all outbound routes by applying the new or changed filters, but sends only the existing routes affected by the new or changed filters to the neighbor.

NOTE

Use **soft-outbound** only if the outbound policy is changed. The **soft-outbound** parameter updates all outbound routes by applying the new or changed filters. However, the device sends to the neighbor only the existing routes that are affected by the new or changed filters. The **soft out** parameter updates all outbound routes and then sends the entire BGP4 route table on the device to the neighbor after the device changes or excludes the routes affected by the filters.

AS4 notation

A AS4 can appear in either a plain or a dot notation format in the output of **show** commands. To select one of these formats, specify the format before entering the **show** command. This section defines these formats and describes how to select a format. The section [“Formats of AS4s in show command output”](#) on page 151 contains examples of output in the various formats. The following notations are currently supported:

- With the default **asplain**, the ASN is a decimal integer in the range 1 – 4294967295.
- With **asdot+**, all ASNs are two integer values joined by a period character in the following format:
 <high order 16-bit value in decimal>.<low order 16-bit value in decimal>
 Using asdot+ notation, an AS number of value 65526 is represented as the string “0.65526,” and an AS number of value 65546 is represented as the string “1.10.”
- With **asdot**, an ASN less than 65536 uses asplain notation (and represents AS number values equal to or greater than 65536 using asdot+ notation). Using asdot notation, ASN 65526 is represented as the string “65526,” and ASN 65546 is represented as the string “1.10”.

NOTE

You can enter AS numbers in any format. However, if you want the asdot or asdot+ format to appear in the output of a **show** command, you must specify these in the CLI.

NOTE

Remember that AS path matching that uses regular expression is based on the configured AS format.

The following command sequences show how to enable the different notations for AS4s and how these notations appear in the output display.

To see ASNs in asplain, use the **show ip bgp** command.

```
Brocade(config)# show ip bgp
Total number of BGP Routes: 1
Status codes: s suppressed, d damped, h history, * valid, > best, i internal, S
stale
Origin codes: i - IGP, e - EGP, ? - incomplete
Network          Next Hop          Metric LocPrf Weight Path
*> 10.1.1.0/24    192.168.1.5       1      100    0      90000 100 200 65535
65536 65537 65538 65539 75000 ?
```

To specify **asdot** notation before displaying IP BGP4 information, use the **as-format** command.

```
Brocade(config)# as-format asdot
Brocade(config)# show ip bgp
Total number of BGP Routes: 1
Status codes: s suppressed, d damped, h history, * valid, > best, i internal, S
stale
Origin codes: i - IGP, e - EGP, ? - incomplete
Network          Next Hop          Metric LocPrf Weight Path
*> 10.1.1.0/24    192.168.1.5      1      100    0      1.24464 100 200 65535
1.0 1.1 1.2 1.3 1.9464 ?
```

Syntax: [no] **as-format asplain** | **asdot** | **asdot+**

The default is **asplain** and can be restored using the **no** version of the command, if the CLI is currently using **asdot** or **asdot+**.

To activate **asdot+** notation, enter **as-format asdot+** in the CLI.

```
Brocade(config)# as-format asdot+
Brocade(config)# show ip bgp
Total number of BGP Routes: 1
Status codes: s suppressed, d damped, h history, * valid, > best, i internal, S
stale
Origin codes: i - IGP, e - EGP, ? - incomplete
Network          Next Hop          Metric LocPrf Weight Path
*> 10.1.1.0/24    192.168.1.5      1      100    0      1.24464 0.100 0.200
0.65535 1.0 1.1 1.2 1.3 1.9464 ?
```

BGP4 AS4 attribute errors

This section describes the handling of the confederation path segments in the AS4_PATH attribute, and also specifies the error handling for the new attributes.

To support AS4, the following attributes: AS4_PATH and AS4_Aggregator were specified in RFC 4893. Confederation path segments in an AS4_PATH are discarded and if there are any other errors such as: *attribute length, flag, confederation segments after AS_SEQ/AS_SET, Invalid segment types* and *More than one AS4_PATH* in these new attributes, the attribute is discarded and the error is logged.

Error logs

The device generates a log when it encounters attribute errors in AS4_PATH and AS4_AGGREGATOR.

NOTE

Logging of errors is rate-limited to not more than one message for every two minutes. Some errors may be lost due to this rate-limiting.

Sample log messages for various attribute errors are shown here.

Attribute length error (ignore the AS4_PATH)

```
SYSLOG: Sep  9 19:02:03:<11>mu2, BGP: From Peer 192.168.1.1 received invalid
AS4_PATH attribute length (3) - entire AS4_PATH ignored
```

Attribute flag error (ignore the AS4_PATH)

```
SYSLOG: Sep  9 19:02:03:<11>mu2, BGP: From Peer 192.168.1.1 received invalid
AS4_PATH attribute flag (0x40) - entire AS4_PATH ignored
```

Confederation segments after AS_SEQ/AS_SET (ignore the AS4_PATH)

```
SYSLOG: Sep  9 19:02:03:<11>mu2, BGP: From Peer 192.168.1.1 received invalid
Confed info in AS4_PATH (@byte 43) - entire AS4_PATH ignored
```

Invalid segment types (ignore the AS4_PATH)

```
SYSLOG: Sep  9 19:02:03:<11>mu2, BGP: From Peer 192.168.1.1 received incorrect Seq
type/len in AS4_PATH (@byte 41) - entire AS4_PATH ignored
```

More than one AS4_PATH (Use the first one and ignore the others)

```
SYSLOG: Sep  9 19:02:03:<11>mu2, BGP: From Peer 192.168.1.1 received multiple
AS4_PATH attributes - used first AS4_PATH attribute only
```

Specifying a maximum AS path length

You can use the **maxas-limit in** command to configure a router running BGP4 to discard routes that exceed a specified AS path limit. This limit can be configured globally, for peer groups, and for BGP neighbors.

When you configure the **maxas-limit in** setting, the behavior of the router changes to first check the length of the AS paths in the UPDATE messages and then to apply the inbound policy. If the AS path exceeds the configured length, then the router performs the following actions:

- Does not store the route in the RIB and does not forward the NLRIs and attributes contained in the UPDATE message for that route
- Logs an error
- Processes the withdrawn NLRIs in the same update message

If a route from a peer exceeds the configured Maximum AS path limit, the router also removes the same route from that peer, if it exists, from its own RIB.

After a maximum AS path length is configured, the maximum AS path limit applies to all new inbound routes. To update previously stored routes, you must perform an inbound soft reset for all of the address families activated for that particular BGP neighbor session.

NOTE

If the neighbor soft-reconfiguration feature is enabled, you must perform a hard reset on the router to impose the maximum length limit.

NOTE

Maxas-limit is checked against the received AS_PATH and AS4_PATH attributes.

BGP routers check for and, if configured, apply the **maxas-limit in** setting in the following order:

1. Neighbor value
2. Peer group value
3. Global value

In a case where a neighbor has no maximum AS limit, a peer group has a value of 3 configured, and the system has a value of 9 configured, all of the routers in the peer group will only use the peer group value; the global value will never be used.

Setting a global maximum AS path limit

The syntax for the global maximum AS path limit command is:

```
[no] maxas-limit in num
```

The **maxas-limit** keyword specifies the limit on the AS numbers in the as-path attribute. The **in** keyword allows the as-path attribute from any neighbor imposing a limit on AS numbers received. The default maximum length for the global system is 300. The range is 0 – 300. The **no** keyword removes the configuration at the global level.

NOTE

The router applies the BGP4 maximum AS path limit on a per virtual router basis.

To configure the global Maximum AS path limit to 15, enter the following command:

```
Brocade(config-bgp)# maxas-limit in 15
```

Setting a maximum AS path limit for a peer group or neighbor

To set maximum AS path limit for a peer group or a neighbor, the syntax is:

```
neighbor [ip-addr | peer-group-name] maxas-limit in [num | disable]
```

By default, neighbors or peer groups have no configured maximum values. The range is 0 – 300. The **disable** keyword is used to stop a neighbor from inheriting the configuration from the peer-group or global and to the use system default value.

To configure a peer group named “PeerGroup1” and set a maximum AS path value of 7, enter the following commands:

```
Brocade(config-bgp)# neighbor PeerGroup1 peer-group
Brocade(config-bgp)# neighbor PeerGroup1 maxas-limit in 7
```

BGP4 max-as error messages

This section lists error log messages that you might see when the router receives routes that exceed the configured AS segment limit or the internal memory limit. The log messages can contain a maximum of 30 ASNs. If a message contains more than 30 ASNs, the message is truncated and an ellipsis appears.

Maximum AS path limit error

```
SYSLOG: <11>Jan 1 00:00:00 mu1, BGP: From Peer 192.168.1.2 received Long AS_PATH= AS_CONFED_SET(4) 1 2 3 AS_CONFED_SEQUENCE(3) 4 AS_SET(1) 5 6 7 AS_SEQ(2) 8 9 attribute length (9) More than configured MAXAS-LIMIT 7
```

Memory limit error

```
SYSLOG: <11>Jan 1 00:00:00 mu1, BGP: From Peer 192.168.1.2 received Long AS_PATH
```



```
H= AS_CONFED_SET(4) 1 2 3 AS_CONFED_SEQUENCE(3) 4 AS_SET(1) 5 6 7 AS_SEQ(2) 8 9
attribute length (9) Exceeded internal memory limit
```

NOTE

The router generates a log message one time every two minutes. Because of this rate limit, it is possible that some errors might not appear in the log. In this case, you can use the **debug ip bgp events** command to view errors pertaining to the **maxas-limit** value and the actual AS path attributes received.

Configuring route flap dampening

Route flap dampening reduces the amount of route state changes propagated by BGP4 due to unstable routes. This in turn reduces processing requirements.

To enable route flap dampening using the default values, enter the following command.

```
Brocade(config-bgp)# dampening
```

Syntax: `[no] dampening [half-life reuse suppress max-suppress-time]`

The *half-life* parameter specifies the number of minutes after which the penalty for a route becomes half its value. The route penalty allows routes that have remained stable for a period despite earlier instability to eventually become eligible for use again. The decay rate of the penalty is proportional to the value of the penalty. After the half-life expires, the penalty decays to half its value. A dampened route that is no longer unstable can eventually again become eligible for use. You can configure the half-life to be from 1 - 45 minutes. The default is 15 minutes.

The *reuse* parameter specifies how low a penalty for a route must be before the route becomes eligible for use again, after being suppressed. You can set the reuse threshold to a value from 1 - 20000. The default is 750 (0.75, or three-fourths, of the penalty assessed for a one flap).

The *suppress* parameter specifies how high the penalty for a route can be before the device suppresses the route. You can set the suppression threshold to a value from 1 - 20000. The default is 2000 (more than two flaps).

The *max-suppress-time* parameter specifies the maximum number of minutes that a route can be suppressed regardless of how unstable it is. You can set the maximum suppression time to a value from 1 - 255 minutes. The default is 40 minutes.

This example shows how to change the dampening parameters.

```
Brocade(config-bgp)# dampening 20 200 2500 40
```

This command changes the half-life to 20 minutes, the reuse threshold to 200, the suppression threshold to 2500, and the maximum number of minutes a route can be dampened to 40.

NOTE

To change any of the parameters, you must specify all the parameters with the command. To want to leave any parameters unchanged, enter their default values.

Originating the default route

By default, the device does not originate and advertise a default route using BGP4. A BGP4 default route is the IP address 0.0.0.0 and the route prefix 0 or network mask 0.0.0.0. For example, 0.0.0.0/0 is a default route.

NOTE

The device checks for the existence of an IGP route for 0.0.0.0/0 in the IP route table before creating a local BGP4 route for 0.0.0.0/0.

To configure the device to originate and advertise a default BGP4 route, enter this command.

```
Brocade(config-bgp)# default-information-originate
```

Syntax: [no] default-information-originate

Changing the default local preference

When the device uses the BGP4 algorithm to select a route to send to the IP route table, one of the parameters the algorithm uses is the local preference. Local preference indicates a degree of preference for a route relative to other routes. BGP4 neighbors can send the local preference value as an attribute of a route in an UPDATE message.

Local preference applies only to routes within the local AS. BGP4 devices can exchange local preference information with neighbors who also are in the local AS, but BGP4 devices do not exchange local preference information with neighbors in remote ASs.

The default local preference is 100. For routes learned from EBGp neighbors, the default local preference is assigned to learned routes. For routes learned from IBGP neighbors, the local preference value is not changed for the route.

When the BGP4 algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen.

NOTE

To set the local preference for individual routes, use route maps. Refer to [“Defining route maps”](#) on page 81. Refer to [“How BGP4 selects a path for a route \(BGP best path selection algorithm\)”](#) on page 5 for information about the BGP4 algorithm.

To change the default local preference to 200, enter the following command.

```
Brocade(config-bgp)# default-local-preference 200
```

Syntax: [no] default-local-preference *num*

The *num* parameter indicates the preference and can be a value from 0 – 4294967295.

Changing the default metric used for redistribution

The device can redistribute directly connected routes, static IP routes, RIP routes, IS-IS routes, and OSPF routes into BGP4. By default, BGP4 uses zero (0) for direct connected routes and the metric (MED) value of IGP routes in the IP route table. The MED is a global parameter that specifies the cost that will be applied to all routes, if assigned, when they are redistributed into BGP4. When routes are selected, lower metric values are preferred over higher metric values. The default, the BGP4 MED value is not assigned.

NOTE

RIP, IS-IS, and OSPF also have default metric parameters. The parameters are set independently for each protocol and have different ranges.

To change the default metric to 40, enter the following command.

```
Brocade(config-bgp)# default-metric 40
```

Syntax: [no] default-metric *value*

The *value* indicates the metric and can be a value from 0 – 4294967295.

Changing the default metric used for route cost

By default, BGP4 uses the BGP MED value as the route cost when adding the route to the RTM. However, you can configure BGP4 to use the IGP cost instead.

NOTE

It is recommended that you change the default to IGP cost only in mixed-vendor environments, and that you change it on all Brocade devices in the environment.

To change the route cost default from BGP MED to IGP cost, enter a command such as the following:

```
Brocade(config-bgp)# install-igp-cost
```

Syntax: [no] install-igp-cost

Use the **no** form of the command to revert to the default of BGP MED.

Changing administrative distances

Because the device can learn about networks from various protocols, including the EBGp portion of BGP4, and IGP's such as OSPF, IS-IS, and RIP, the routes to a network may differ depending on the protocol from which the routes were learned.

To select one route over another based on the source of the route information, the device can use the administrative distances assigned to the sources. The administrative distance is a protocol-independent metric that IP devices use to compare routes from different sources.

The device re-advertises a learned best BGP4 route to neighbors even when the route table manager does not also select that route for installation in the IP route table. The best BGP4 route is the BGP4 path that BGP4 selects based on comparison of the paths' BGP4 route parameters. Refer to [“How BGP4 selects a path for a route \(BGP best path selection algorithm\)”](#) on page 5.

Requiring the first AS to be the neighbor AS

When selecting a route from among different sources (BGP4, OSPF, RIP, IS-IS, static routes, and so on), the software compares the routes on the basis of the administrative distance for each route. If the administrative distance of the paths is lower than the administrative distance of paths from other sources (such as static IP routes, RIP, or OSPF), the BGP4 paths are installed in the IP route table.

The default administrative distances on the device are:

- Directly connected – 0 (this value is not configurable)
- Static – 1 is the default and applies to all static routes, including default routes. This can be assigned a different value.
- EBGp – 20
- OSPF – 110
- IS-IS – 115
- RIP – 120
- IBGP – 200
- Local BGP4 – 200
- Unknown – 255 (the device will not use this route)

Lower administrative distances are preferred over higher distances. For example, if the device receives routes for the same network from OSPF and from RIP, the device will prefer the OSPF route by default. The administrative distances are configured in different places in the software. The device re-advertises a learned best BGP4 route to neighbors by default, regardless of whether the administrative distance for the route is lower than the administrative distances of other routes from different route sources to the same destination:

- To change the EBGp, IBGP, and Local BGP4 default administrative distances, refer to the instructions in this section.
- To change the default administrative distance for OSPF, RIP, IS-IS, refer to [“Changing administrative distances”](#) on page 39.

To change the default administrative distances for EBGp, IBGP, and Local BGP4, enter a command such as the following.

```
Brocade(config-bgp)# distance 200 200 200
```

Syntax: [no] **distance** *external-distance internal-distance local-distance*

The *external-distance* sets the EBGp distance and can be a value from 1 – 255.

The *internal-distance* sets the IBGP distance and can be a value from 1 – 255.

The *local-distance* sets the Local BGP4 distance and can be a value from 1 – 255.

Requiring the first AS to be the neighbor AS

By default, a device does not require the first AS listed in the AS_SEQUENCE field of an AS path update message from EBGp neighbors to be the AS of the neighbor that sent the update. However, you can enable the device to have this requirement. You can enable this requirement globally for the device, or for a specific neighbor or peer group. This section describes how to enable this requirement.

When you configure the device to require that the AS an EBGp neighbor is in be the same as the first AS in the AS_SEQUENCE field of an update from the neighbor, the device accepts the update only if the AS numbers match. If the AS numbers do not match, the device sends a notification message to the neighbor and closes the session. The requirement applies to all updates received from EBGp neighbors.

The hierarchy for enforcement of this feature is: a neighbor will try to use the enforce-first-as value if one is configured; if none is configured, the neighbor will try to use the configured value for a peer group. If neither configuration exists, enforcement is simply that of the global configuration (which is disabled by default).

To enable this feature globally, enter the **enforce-first-as** command at the BGP4 configuration level of the CLI.

```
Brocade(config-bgp)# enforce-first-as
```

Syntax: [no] **enforce-first-as**

To enable this feature for a specific neighbor, enter the following command at the BGP4 configuration level.

```
Brocade(config-bgp)# neighbor 10.1.1.1 enforce-first-as enable
```

Syntax: [no] **neighbor ip-address enforce-first-as [enable | disable]**

The *ip-address* value is the IP address of the neighbor.

When the first-as requirement is enabled, its status appears in the output of the **show running configuration** command. The optional last keyword choice of **enable** or **disable** lets you specify whether the output of the **show running configuration** command includes the configuration of the first-as requirement. This option allows the **show running configuration** command output to show what is actually configured.

To enable this feature for a peer group, enter the following command at the BGP4 configuration level.

```
Brocade(config-bgp)# neighbor Peergroup1 enforce-first-as enable
```

Syntax: [no] **neighbor peer-group-name enforce-first-as [enable | disable]**

The *peer-group-name* value is the name of the peer group.

When the first-as requirement is enabled, its status appears in the output of the show running configuration command. The optional last keyword choice, that of **enable** or **disable**, lets you specify whether the output of the show running configuration command includes the configuration of the first-as requirement: this option helps the show running command output to show what you have actually configured.

The following example shows a running configuration with the first-as enforcement items (for global, peer group, and neighbor) in bold.

```
Brocade(config)# router bgp
BGP4: Please configure 'local-as' parameter in order to enable BGP4.
Brocade(config-bgp)# local-as 1

Brocade(config-bgp)# enforce-first-as
Brocade(config-bgp)# neighbor abc peer-group
Brocade(config-bgp)# neighbor abc remote-as 2
Brocade(config-bgp)# neighbor abc enforce-first-as disable
Brocade(config-bgp)# neighbor 192.168.1.2 peer-group abc
Brocade(config-bgp)# neighbor 192.168.1.2 enforce-first-as enable
```

Enabling fast external fallover

BGP4 devices rely on KEEPALIVE and UPDATE messages from neighbors to signify that the neighbors are alive. For BGP4 neighbors that are two or more hops away, such messages are the only indication that the BGP4 protocol has concerning the alive state of the neighbors. As a result, if a neighbor becomes non-operational, the device waits until the Hold Time expires or the TCP connection fails before concluding that the neighbor is not operational and closing its BGP4 session and TCP connection with the neighbor.

The device waits for the Hold Time to expire before ending the connection to a directly-attached BGP4 neighbor that becomes non-operational.

For directly-attached neighbors, the device immediately senses loss of a connection to the neighbor from a change of state of the port or interface that connects the device to the neighbor. For directly-attached EBGP neighbors, the device uses this information to immediately close the BGP4 session and TCP connection to locally attached neighbors that become non-operational.

NOTE

The fast external failover feature applies only to directly attached EBGP neighbors. The feature does not apply to IBGP neighbors.

To enable fast external fallover, enter the following command.

```
Brocade(config-bgp)# fast-external-fallover
```

To disable fast external fallover again, enter the following command.

```
Brocade(config-bgp)# no fast-external-fallover
```

Syntax: [no] fast-external-fallover

Setting the local AS number

The local autonomous system number (ASN) identifies the AS in which the BGP4 device resides.

To set the local AS number, enter commands such as the following.

```
Brocade(config)# router bgp
BGP4: Please configure 'local-as' parameter in order to enable BGP4.
Brocade(config-bgp)# local-as 10
Brocade(config-bgp)# write memory
```

Syntax: [no] local-as *num*

The *num* parameter specifies a local AS number in the range 1 – 4294967295. It has no default. AS numbers 64512 – 65535 are the well-known private BGP4 AS numbers and are not advertised to the Internet community.

Setting the local AS number for VRF instances

The local autonomous system (AS) number identifies the AS in which the BGP4 device resides.

In releases prior to NetIron R05.3.00, you can assign only a single BGP AS number for the entire system, including instances of BGP VRF. In NetIron R05.3.00, you can assign different BGP AS numbers for each VRF instance. If you do not assign an AS number, the BGP VRF instances use the default BGP AS number, as in previous releases.

The **local-as** command is available under the “global BGP” CLI level and “address-family ipv4 unicast vrf” CLI level.

To set the local as number for a VRF, enter commands such as the following.

```
Brocade(config-bgp)#address-family ipv4 unicast vrf vrf-name
Brocade(config-bgp)#local-as num
```

Syntax: [no] **local-as** *num*

The *num* parameter specifies a local AS number in the range 1 – 4294967295. It has no default. AS numbers 64512 – 65535 are the well-known private BGP4 AS numbers and are not advertised to the Internet community.

The configuration takes effect immediately and the BGP VRF instance is reset. All BGP peering within the VRF is reset, and take the new AS number.

The local AS number for the VRF instance, if configured, is displayed in the **show running-config** and **show ip bgp config** command output.

Enter the **show ip bgp config** command:

```
Brocade#show ip bgp config
Current BGP configuration:

router bgp
  local-as 100
  neighbor 10.10.10.10 remote-as 200

  address-family ipv4 unicast
  exit-address-family

  address-family ipv4 multicast
  exit-address-family

  address-family ipv6 unicast
  exit-address-family

  address-family ipv6 multicast
  exit-address-family

  address-family vpnv4 unicast
  exit-address-family

  address-family l2vpn vpls
  exit-address-family

  address-family ipv4 unicast vrf vrf_a
  local-as 300
  neighbor 10.111.111.111 remote-as 400
  exit-address-family
end of BGP configuration
```

Configuring BGP4 multipath load sharing

To change the maximum number of BGP4 shared paths, enter commands such as the following.

```
Brocade(config)# router bgp
Brocade(config-bgp)# maximum-paths 4
Brocade(config-bgp)# write memory
```

Syntax: [no] **maximum-paths** *number* | **use-load-sharing**

The *number* parameter specifies the maximum number of paths across which the device can balance traffic to a given BGP4 destination. The *number* value range is 2 to 32 and the default is 1.

NOTE

The maximum number of paths supported by the BR-MLX-10Gx24-DM module is 16.

When the **use-load-sharing** option is used in place of the *number* variable, the maximum IP ECMP path value is determined solely by the value configured using the **ip load-sharing** command.

Customizing BGP4 multipath load sharing

By default, when BGP4 Multipath load sharing is enabled, both IBGP and EBGp paths are eligible for load sharing, while paths from different neighboring ASs are not eligible. You can change load sharing to apply only to IBGP or EBGp paths, or to support load sharing among paths from different neighboring ASs.

To enable load sharing of IBGP paths only, enter the following command at the BGP4 configuration level of the CLI.

```
Brocade(config-bgp)# multipath ibgp
```

To enable load sharing of EBGp paths only, enter the following command at the BGP4 configuration level of the CLI.

```
Brocade(config-bgp)# multipath ebgp
```

To enable load sharing of paths from different neighboring ASs, enter the following command at the BGP4 configuration level of the CLI.

```
Brocade(config-bgp)# multipath multi-as
```

Syntax: [no] **multipath ebgp** | **ibgp** | **multi-as**

The **ebgp** | **ibgp** | **multi-as** parameter specifies the change you are making to load sharing:

- **ebgp** – Load sharing applies only to EBGp paths. Load sharing is disabled for IBGP paths.
- **ibgp** – Load sharing applies only to IBGP paths. Load sharing is disabled for EBGp paths.
- **multi-as** – Load sharing is enabled for paths from different ASs.

By default, load sharing applies to EBGp and IBGP paths, and does not apply to paths from different neighboring ASs.

Enhancements to BGP4 load sharing

Enhancements to BGP4 Load Sharing allows support for load sharing of BGP4 routes in IP ECMP even if the BGP4 multipath load sharing feature is not enabled through the **use-load-sharing** option to the **maximum-paths** command. Using the following commands, you can also set separate values for IGMP and EGMP multipath load sharing.

To set the number of equal-cost multipath IBGP routes or paths that will be selected, enter commands such as the following.

```
Brocade(config)# router bgp
```

```
Brocade(config-bgp)# maximum-paths ibgp
```

Syntax: [no] **maximum-paths ibgp** *number*

The *number* variable specifies the number of equal-cost multipath IBGP routes that will be selected. The range is 2 to 32. If the value is set to 1, BGP4 level equal-cost multipath is disabled for IBGP routes.

To set the number of equal-cost multipath EBGP routes or paths that will be selected, enter commands such as the following.

```
Brocade(config)# router bgp
Brocade(config-bgp)# maximum-paths ebgp
```

Syntax: [no] **maximum-paths ebgp** *num*

The *number* variable specifies the number of equal-cost multipath EBGP routes that will be selected. The range is 2 to 32. If the value is set to 1, BGP4 level equal-cost multipath is disabled for EBGP routes.

Configuring a static BGP4 network

This feature allows you to configure a static network in BGP4, creating a stable BGP4 network in the core. While a route configured with this feature will never flap unless it is manually deleted, a “static” BGP4 network will not interrupt the normal BGP4 decision process on other learned routes being installed into the RTM (Routing Table Manager). Consequently, when there is a route that can be resolved, it will be installed into the RTM.

To configure a static BGP4 network, enter commands such as the following.

```
Brocade(config)# router bgp
Brocade(config-bgp)# static-network 10.157.22.26/16
```

Syntax: [no] **static-network** *ipAddressPrefix/mask*

The *ipAddress/mask* variable is the IPv4 address prefix and mask of the static BGP4 network you are creating.

Using the **no** option uninstalls a route (that was previously installed) from BGP4 RIB-IN and removes the corresponding drop route from the RTM. If there is a new best route, it is advertised to peers if necessary. Otherwise, a withdraw message is sent.

NOTE

The BGP4 network route and the BGP4 static network route are mutually exclusive. They cannot be configured with the same prefix and mask.

When you configure a route using the **static-network** command, BGP4 automatically generates a local route in BGP4 RIB-IN, and installs a NULL0 route in the RTM if there is no other valid route with the same prefix/mask learned from any peer. Otherwise, the learned BGP4 route will be installed in the RTM. In either situation, the new locally generated route will be the best route in RIB-IN and will be advertised to peers if it passes the per-peer outbound policies.

Setting an administrative distance for a static BGP4 network

When a static BGP4 network route is configured, its type is *local BGP4 route* and has a default administrative distance value of 200. To change the administrative distance value, change the value of all local BGP4 routes using the **distance** command at the router bgp level of the CLI, and set a new value for local routes as described in “[Changing administrative distances](#)” on page 39. You can also assign a specific administrative distance value for each static network using the **distance** option as shown.

Configuring paths without MEDs as the least favorable

```
Brocade(config)# router bgp
Brocade(config-bgp)# static-network 10.157.22.26/16 distance 100
```

Syntax: [no] **static-network** *ipAddressPrefix/mask* **distance** *distance-value*

The *ipAddress/mask* variable is the IPv4 address prefix and mask of the static BGP4 network for which you are setting an administrative distance.

The *distance-value* sets the administrative distance of the static BGP4 network route. The range for this value is 1 – 255.

Limiting advertisement of a static BGP4 network to selected neighbors

You can control the advertisement of a static BGP4 network to BGP4 neighbors that are configured as Service Edge Devices. When this feature is configured for a BGP4 neighbor, static BGP4 network routes that are installed in the routing table as DROP routes are not advertised to that neighbor. When this feature is configured, the route is only advertised to identified Service Edge devices if it is installed as a forward route, such as the routes described in these steps.

1. There is a learned route from a customer BGP4 peering.
2. There is a valid learned route from another Services Edge device as a result of a customer route present on that device.

To configure a BGP4 neighbor to limit the advertisement of Static BGP4 Network routes, enter the **static-network-edge** command as shown.

```
Brocade(config)# router bgp
Brocade(config-bgp)# neighbor 10.2.3.4 static-network-edge
```

Syntax: [no] **neighbor** *ip-address* | *peer-group-name* **static-network-edge**

The *ip-addr* | *peer-group-name* variable indicates whether you are configuring an individual neighbor or a peer group. If you specify a neighbor IP address, you are configuring that individual neighbor. If you specify a peer group name, you are configuring a peer group. Refer to [“Configuring a BGP4 peer group”](#) on page 60.

Configuring paths without MEDs as the least favorable

During MED comparison, by default, the device favors a lower MED over a higher MED. Since the device assigns the value 0 to a route path MED if the MED value is missing, the default MED comparison results in the device favoring the route paths that do not have MEDs.

To configure the device to favor a route with a MED over a route that does not have a MED, enter the following command at the BGP4 configuration level of the CLI.

```
Brocade(config-bgp)# med-missing-as-worst
```

Syntax: [no] **med-missing-as-worst**

NOTE

This command affects route selection only when route paths are selected based on MED comparison. It is still possible for a route path without a MED to be selected based on other criteria. For example, a route path with no MED can be selected if its weight is larger than the weights of the other route paths.

Configuring BGP4 neighbors

Because BGP4 does not contain a peer discovery process, for each BGP4 neighbor (peer), you must indicate the IP address and the AS number of each neighbor. Neighbors that are in different ASs communicate using EBGP. Neighbors within the same AS communicate using IBGP.

NOTE

If the device has multiple neighbors with similar attributes, you can simplify configuration by configuring a peer group, then adding individual neighbors to it. The configuration steps are similar, except you specify a peer group name instead of a neighbor IP address when configuring the neighbor parameters, then add individual neighbors to the peer group. Refer to [“Configuring a BGP4 peer group”](#) on page 60.

NOTE

The device attempts to establish a BGP4 session with a neighbor as soon as you enter a command specifying the IP address of the neighbor. If you want to completely configure the neighbor parameters before the device establishes a session with the neighbor, you can administratively shut down the neighbor. Refer to [“Administratively shutting down a session with a BGP4 neighbor”](#) on page 63.

To add a BGP4 neighbor with an IP address 10.157.22.26 remote-as 100, enter the following command.

```
Brocade(config-bgp)# neighbor 10.157.22.26 remote-as 100
```

The neighbor's *ip-addr* must be a valid IP address.

The **neighbor** command has additional parameters, as shown in the following syntax:

```
Syntax: [no] neighbor {ip-addr | peer-group-name}
{
  [activate]
  [advertisement-interval seconds]
  [allows-in num ]
  [bfd holdover-interval num ]
  [bfd min-tx num min-rx num multiplier num ]
  [capability as4 [enable | disable] ]
  [capability orf prefixlist [send | receive] ]
  [default-originate [route-map map-name] ]
  [description string]
  [distribute-list in | out num,num,... | acl-num localin | out]
  [ebgp-btsh]
  [ebgp-multihop num ]
  [enforce-first-as]
  [filter-list access-list-name [ in | out ]]
  [local-as as-num [no-prepend] ]
  [maxas-limit in [num | disable]
  [maximum-prefix num [ threshold ] [teardown]
  [next-hop-self]
  [password string]
  [peer-group group-name ]
  [prefix-list string in | out]
  [remote-as as-number]
  [remove-private-as]
```

```

[route-map in | out map-name]
[route-reflector-client]
[send-community]
[shutdown [generate-rib-out] ]
[soft-reconfiguration inbound]
[static-network-edge]
[timers keep-alive num hold-time num]
[unsuppress-map map-name]
[update-source ip-addr | ethernet slot/portnum | loopback num | ve num]
[weight num]
[send-label]
}

```

The *ip-addr* | *peer-group-name* parameter indicates whether you are configuring an individual neighbor or a peer group. If you specify a neighbor IP address, you are configuring that individual neighbor. If you specify a peer group name, you are configuring a peer group. Refer to “[Configuring a BGP4 peer group](#)” on page 60.

`activate` allows exchange of routes in the current family mode.

advertisement-interval *seconds* configures an interval in seconds over which the specified neighbor or peer group will hold all route updates before sending them. At the expiration of the timer, the routes are sent as a batch. The default value for this parameter is zero. Acceptable values are 0 to 600 seconds.

allows-in *num* disables the AS_PATH check function for routes learned from a specified location. BGP4 usually rejects routes that contain an AS number within an AS_PATH attribute to prevent routing loops. In an MPLS or VPN hub and spoke topology this can prevent legitimate routes from being accepted. The **allows-in** option stops this blockage. *num* specifies the number of occurrences of the AS number.

capability as4 [**enable** | **disable**] enables the capability of processing AS4s. The optional keywords **enable** | **disable** specify whether the feature should be changed from its current state. For example, if this neighbor belongs to a peer group that is enabled for AS4s but you want disable it on the current interface, use the command and include the **disable** keyword.

capability orf prefixlist [**send** | **receive**] configures cooperative device filtering. The **send** | **receive** parameter specifies the support you are enabling:

- **send** – The device sends the IP prefix lists as Outbound Route Filters (ORFs) to the neighbor.
- **receive** – The device accepts filters as Outbound Route Filters (ORFs) from the neighbor.

If you do not specify either **send** or **receive**, both capabilities are enabled. The **prefixlist** parameter specifies the type of filter you want to send to the neighbor.

For more information, refer to “[Configuring cooperative BGP4 route filtering](#)” on page 96.

NOTE

The current release supports cooperative filtering only for filters configured using IP prefix lists.

default-originate [**route-map** *map-name*] configures the device to send the default route 0.0.0.0 to the neighbor. If you use the route-map *map-name* parameter, the route map injects the default route conditionally, based on the match conditions in the route map.

description *string* specifies a name for the neighbor. You can enter an alphanumeric text string up to 80 characters long.

distribute-list in | out num,num,... specifies a distribute list to be applied to updates to or from the specified neighbor. The **in | out** keywords specify whether the list is applied on updates received from the neighbor, or sent to the neighbor. The *num,num,...* parameter specifies the list of address-list filters. The device applies the filters in the order in which you list them and stops applying the filters in the distribute list when a match is found.

To use an IP ACL instead of a distribute list, you can specify **distribute-list acl-num in | out**. In this case, *acl-num* is an IP ACL.

NOTE

By default, if a route does not match any of the filters, the device denies the route. To change the default behavior, configure the last filter as **permit any any**.

NOTE

The address filter must already be configured. Refer to [“Defining and applying IP prefix lists”](#) on page 80.

ebgp-btsh enables GTSM protection for the specified neighbor. For details, see [“Generalized TTL Security Mechanism support”](#) on page 116.

ebgp-multihop [num] specifies that the neighbor is more than one hop away and that the session type with the neighbor is EBGp-multihop. This option is disabled by default. The *num* parameter specifies the TTL you are adding for the neighbor. You can specify a number from 0 – 255. The default is 0. If you leave the EBGp TTL value set to 0, the software uses the IP TTL value.

enforce-first-as ensures, for this neighbor, that the first AS listed in the AS_SEQUENCE field of an AS path update message from EBGp neighbors is the AS of the neighbor that sent the update. For details, refer to [“Requiring the first AS to be the neighbor AS”](#) on page 40.

filter-list in | out num,num,... specifies an AS-path filter list or a list of AS-path ACLs. The **in | out** keywords specify whether the list is applied on updates received from the neighbor or sent to the neighbor. If you specify **in** or **out**, The *num,num,...* parameter specifies the list of AS-path filters. The device applies the filters in the order in which you list them and stops applying the filters in the AS-path filter list when a match is found.

Alternatively, you can specify **filter-list acl-num in | out | weight** to use an AS-path ACL instead of an AS-path filter list. In this case, *acl-num* is an AS-path ACL.

NOTE

By default, if an AS-path does not match any of the filters or ACLs, the device denies the route. To change the default behavior, configure the last filter or ACL as **permit any any**.

NOTE

The AS-path filter or ACL must already be configured. Refer to [“Filtering AS-paths”](#) on page 76.

local-as as-num assigns a local AS number with the value specified by the *as-num* variable to the neighbor being configured. The *as-number* has no default value. Its range is 1 – 4294967295.

NOTE

When the **local-as** option is used, the device automatically prepends the local AS number to the routes that are received from the EBGp peer; to disable this behavior, include the **no-prepend** keyword.

maxas-limit in num | disable specifies that the router discard routes that exceed a maximum AS path length received in UPDATE messages. You can specify a value from 0 – 300. The default value is 300. The **disable** keyword is used to stop a neighbor from inheriting the configuration from the peer-group or global and to the use system default value.

maximum-prefix num specifies the maximum number of IP network prefixes (routes) that can be learned from the specified neighbor or, if configured at peer group level, per neighbor in the peer group. You can specify a value from 0 to 4294967295. The default is 0 (unlimited).

- The *num* value is the maximum number. The range is 0 – 4294967295. The default is 0 (unlimited).
- The *threshold* parameter specifies the percentage of the value you specified for the **maximum-prefix num**, at which you want the software to generate a Syslog message. You can specify a value from 1 (one percent) to 100 (100 percent). The default is 100.
- The **teardown** parameter tears down the neighbor session if the maximum-prefix limit is exceeded. The session remains shutdown until you clear the prefixes using the **clear ip bgp neighbor all** or **clear ip bgp neighbor ip-addr** command, or change the maximum-prefix configuration for the neighbor. The software also generates a Syslog message.

next-hop-self specifies that the device should list itself as the next hop in updates sent to the specified neighbor. This option is disabled by default.

password string specifies an MD5 password for securing sessions between the device and its neighbor. You can enter a string up to 80 characters long. The string can contain any alphanumeric characters and spaces if the words in the password are placed inside quotes.

The system creates an MD5 hash of the password and use it for securing sessions between the device and its neighbors. To display the configuration, the system uses a 2-way encoding scheme to be able to retrieve the original password that was entered.

By default, password is encrypted. If you want password to be in clear text, insert a **0** between **password** and *string*.

```
Brocade(config-bgp)# neighbor 10.157.22.26 password 0 marmalade
```

The system adds an encryption code followed by the encrypted text of the original password. For example, the following portion of the code has the encrypted code “2”.

```
password 2 $IUA2Pwc9LW9VIW9zVQ=="
```

One of the following may be displayed:

- 0 = the password is not encrypted and is in clear text
- 1 = the password uses proprietary simple cryptographic 2-way algorithm (only for Brocade NetIron CES devices)
- 2 = the password uses proprietary base64 cryptographic 2-way algorithm (only for Brocade NetIron XMR and Brocade MLX series devices)

peer-group group-name assigns the neighbor to the specified peer group.

prefix-list string in | out specifies an IP prefix list. You can use IP prefix lists to control routes to and from the neighbor. IP prefix lists are an alternative method to AS-path filters. The **in | out** keywords specify whether the list is applied on updates received from the neighbor or sent to the neighbor. The filters can use the same prefix list or different prefix lists. To configure an IP prefix list, refer to [“Defining and applying IP prefix lists”](#) on page 80.

remote-as as-number specifies the AS in which the remote neighbor resides. The *as-number* has no default value. The range is 1 – 4294967295.

remove-private-as configures the device to remove private AS numbers from update messages the device sends to this neighbor. The device will remove AS numbers 64512 – 65535 (the well-known BGP4 private AS numbers) from the AS-path attribute in update messages the device sends to the neighbor. This option is disabled by default.

route-map in | out *map-name* specifies a route map the device will apply to updates sent to or received from the specified neighbor. The **in | out** keywords specify whether the list is applied on updates received from the neighbor or sent to the neighbor.

NOTE

The route map must already be configured. Refer to “[Defining route maps](#)” on page 81.

route-reflector-client specifies that this neighbor is a route-reflector client of the device. Use the parameter only if this device is going to be a route reflector. For information, refer to “[Configuring a route reflector](#)” on page 25. This option is disabled by default.

send-community enables sending the community attribute in updates to the specified neighbor. By default, the device does not send the community attribute.

shutdown administratively shuts down the session with this neighbor. Shutting down the session lets you configure the neighbor and save the configuration without actually establishing a session with the neighbor.

When a peer is put into the shutdown state, ribout routes are not produced for that peer. You can elect to produce ribout routes using the **generate-rib-out** option. This option is disabled by default.

soft-reconfiguration inbound enables the soft reconfiguration feature, which stores all the route updates received from the neighbor. If you request a soft reset of inbound routes, the software performs the reset by comparing the policies against the stored route updates, instead of requesting the neighbor BGP4 route table or resetting the session with the neighbor. Refer to “[Using soft reconfiguration](#)” on page 103.

static-network-edge controls the advertisement of a static BGP4 network to BGP4 neighbors that are configured as Service Edge Devices. For more information, refer to “[Limiting advertisement of a static BGP4 network to selected neighbors](#)” on page 46.

timers keep-alive num hold-time num overrides the global settings for the Keep Alive Time and Hold Time. For the Keep Alive Time, you can specify 0 – 65535 seconds. For the Hold Time, you can specify 0 or a number in the range 3 – 65535 (1 and 2 are not allowed). If you set the Hold Time to 0, the device waits indefinitely for messages from a neighbor without concluding that the neighbor is non-operational. The defaults for these parameters are the currently configured global Keep Alive Time and Hold Time. For more information about these parameters, refer to “[Changing the Keep Alive Time and Hold Time](#)” on page 71.

unsuppress-map map-name removes route suppression from neighbor routes when those routes have been suppressed due to aggregation. Refer to “[Removing route dampening from suppressed routes](#)” on page 53.

update-source ip-addr | ethernet slot/portnum | loopback num | ve num configures the device to communicate with the neighbor through the specified interface. There is no default.

weight num specifies a weight the device will add to routes received from the specified neighbor. BGP4 prefers larger weights over smaller weights. The default weight is 0.

The **send-label** keyword enables IPv6 label capability for the IPv4 peers.

Auto shutdown of BGP4 neighbors on initial configuration

You can use the global **auto-shutdown-new-neighbors** command within the **router bgp** configuration to disable establishment of the BGP4 connection with a remote peer when the peer is first configured, as follows.

```
Brocade(config)# router bgp
Brocade(config-bgp)# auto-shutdown-new-neighbors
```

Once all of the configuration parameters for the peer are complete, you can start the BGP4 session establishment process using the **no** option with the existing peer shutdown option command to disable the peer shutdown state.

```
Brocade(config)# router bgp
Brocade(config-bgp)# no neighbor 10.1.1.1 shutdown
```

Syntax: **[no] neighbor ip-address shutdown**

If auto shutdown of BGP4 neighbors is enabled and you want to disable it to allow a new BGP4 peer configured to establish a connection with remote peers, use the **no** option with the command.

```
Brocade(config)# router bgp
Brocade(config-bgp)# no auto-shutdown-new-neighbors
```

Syntax: **[no] auto-shutdown-new-neighbors**

The default state for auto shutdown of BGP4 neighbors is disabled.

NOTE

When the **auto-shutdown-new-neighbors** value is changed, the value of the shutdown parameter for any of the existing configured neighbors is not changed. Any new BGP4 neighbor configured after the setting of the **auto-shutdown-new-neighbors** command will have the shutdown state set to the current value of the **auto-shutdown-new-neighbors** command. Previously configured peer group parameters are not affected by the **auto-shutdown-new-neighbors** command.

When a new peer group is created and new neighbors belonging to this peer group are being configured, you can use the **peer group shutdown** parameter to prevent the establishment of connections with remote peers.

Using the auto shutdown of BGP4 neighbors during a configuration

To control when a newly-configured BGP4 neighbor establishes a BGP4 session, use the **auto-shutdown-new-neighbors** command.

```
Brocade(config)# router bgp
Brocade(config-bgp)# auto-shutdown-new-neighbors
Brocade(config-bgp)# neighbor 10.1.1.1 remote-as 200
```

Once all of the BGP4 neighbor configuration parameters are configured, use the following commands to establish the BGP4 session.

```
Brocade(config)# router bgp
Brocade(config-bgp)# no neighbor 10.1.1.1 shutdown
```


Removing route dampening from suppressed routes

You can selectively unsuppress specific routes that have been suppressed due to aggregation, and allow these routes to be advertised to a specific neighbor or peer group.

```
Brocade(config-bgp)# aggregate-address 10.1.0.0 255.255.0.0 summary-only
Brocade(config-bgp)# show ip bgp route 10.1.0.0/16 longer
Number of BGP Routes matching display condition : 2
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
Prefix          Next Hop          Metric      LocPrf      Weight Status
1      10.1.0.0/16      0.0.0.0          101          32768  BAL
AS_PATH:
2      10.1.44.0/24    10.2.0.1          1           101          32768  BLS
AS_PATH:
```

In this example, the **aggregate-address** command configures an aggregate address of 10.1.0.0 255.255.0.0 and the **summary-only** parameter prevents the device from advertising more specific routes contained within the aggregate route.

Entering a **show ip bgp route** command for the aggregate address 10.1.0.0/16 shows that the more specific routes aggregated into 10.1.0.0/16 have been suppressed. In this case, the route to 10.1.44.0/24 has been suppressed. If you enter this command, the display shows that the route is not being advertised to the BGP4 neighbors.

```
Brocade(config-bgp)# show ip bgp route 10.1.44.0/24
Number of BGP Routes matching display condition : 1
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
Prefix          Next Hop          Metric      LocPrf      Weight Status
1      10.1.44.0/24    10.2.0.1          1           101          32768  BLS
AS_PATH:
Route is not advertised to any peers
```

To override the **summary-only** parameter and allow a specific route to be advertised to a neighbor, enter commands such as the following:

```
Brocade(config)# ip prefix-list Unsuppress1 permit 10.1.44.0/24
Brocade(config)# route-map RouteMap1 permit 1
Brocade(config-routemap RouteMap1)# exit
Brocade(config)# router bgp
Brocade(config-bgp)# neighbor 10.1.0.2 unsuppress-map RouteMap1
Brocade(config-bgp)# clear ip bgp neighbor 10.1.0.2 soft-out
```

The **ip prefix-list** command configures an IP prefix list for network 10.1.44.0/24, which is the route you want to unsuppress. The next two commands configure a route map that uses the prefix list as input. The **neighbor** command enables the device to advertise the routes specified in the route map to neighbor 10.1.0.2. The **clear** command performs a soft reset of the session with the neighbor so that the device can advertise the unsuppressed route.

Syntax: [no] **neighbor** *ip-addr* | *peer-group-name* **unsuppress-map** *map-name*

The **show ip bgp route** command verifies that the route has been unsuppressed.

Configuring BGP4 neighbors

```
Brocade(config-bgp)# show ip bgp route 10.1.44.0/24
Number of BGP Routes matching display condition : 1
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
Prefix          Next Hop          MED LocPrf      Weight Status
1      10.1.44.0/24    10.2.0.1         1      101      32768 BLS
AS_PATH:
Route is advertised to 1 peers:
10.1.0.2(4)
```

Encrypting BGP4 MD5 authentication keys

When you configure a BGP4 neighbor or neighbor peer group, you can specify an MD5 authentication string to authenticate packets exchanged with the neighbor or peer group of neighbors.

For added security, by default, the software encrypts the display of the authentication string. The software also provides an optional parameter to disable encryption of the authentication string, on an individual neighbor or peer group basis. By default, MD5 authentication strings are displayed in encrypted format in the output of the following commands:

- **show running-config** (or **write terminal**)
- **show configuration**
- **show ip bgp config**

When encryption of the authentication string is enabled, the string is encrypted in the CLI regardless of the access level you are using.

When you save the configuration to the startup configuration file, the file contains the new BGP4 command syntax and encrypted passwords or strings.

NOTE

It is recommended that you save a copy of the startup configuration file for each device you plan to upgrade.

Encryption example

The following commands configure a BGP4 neighbor and a peer group, and specify MD5 authentication strings (passwords) to authenticate packets exchanged with the neighbor or peer group.

```
Brocade(config-bgp)# local-as 2
Brocade(config-bgp)# neighbor xyz peer-group
Brocade(config-bgp)# neighbor xyz password abc
Brocade(config-bgp)# neighbor 10.10.200.102 peer-group xyz
Brocade(config-bgp)# neighbor 10.10.200.102 password test
```

The BGP4 configuration commands appear in the following format as a result of the **show ip bgp configuration** command.

```
Brocade(config-bgp)# show ip bgp configuration
Current BGP configuration:
router bgp
  local-as 2
  neighbor xyz peer-group
  neighbor xyz password 2 $b24tbw==
  neighbor 10.10.200.102 peer-group xyz
  neighbor 10.10.200.102 remote-as 1
  neighbor 10.10.200.102 password 2 $on-o
```

In this output, the software has converted the commands that specify an authentication string into the new syntax (described below), and has encrypted display of the authentication strings.

Syntax: [no] **neighbor ip-addr |peer-group-name password string**

The *ip-addr | peer-group-name* parameters indicate whether you are configuring an individual neighbor or a peer group. If you specify the IP address of a neighbor, you are configuring that individual neighbor. If you specify a peer group name, you are configuring a peer group.

The **password string** parameter specifies an MD5 authentication string to secure sessions between the device and the neighbor. You can enter a string of up to 80 characters. The string can contain any alphanumeric characters, but must be placed inside quotes if it contains a space.

The system creates an MD5 hash of the password and uses it to secure sessions between the device and the neighbors. To display the configuration, the system uses a 2-way encoding scheme to retrieve the original password.

By default, password is encrypted. If you want the password to be in clear text, insert a **0** between **password** and *string*.

```
Brocade(config-bgp)# neighbor 10.157.22.26 password 0 admin
```

The system adds an encryption code followed by the encrypted text of the original password. For example, the following portion of the code has the encrypted code "2".

```
password 2 $IUa2Pwc9LW9VIW9zVQ=="
```

```
Brocade(config-bgp)# neighbor 10.157.22.26 password 0 marmalade
```

Displaying the authentication string

To display the authentication string, enter the following commands.

```
Brocade(config)# enable password-display
Brocade(config)# show ip bgp neighbors
```

The **enable password-display** command enables display of the authentication string, but only in the output of the **show ip bgp neighbors** command. String display is still encrypted in the startup configuration file and running configuration.

Advertising IPv4 routes between IPv6 BGP peers

This feature transports IPv6 routes over an IPv4 BGP session. If you have an existing IPv4 BGP mesh, you can use it to transport IPv6 routes instead of creating a new IPv6 BGP mesh.

First, configure peering using the IPv4 addresses under IPv6 address family, i.e enabling the IPv6 address family for the IPv4 neighbor. Since the advertised next hop is usually unreachable, set the next hop with a static route or with an inbound or outbound route-map.

For example, IPv6 Router 1 (IP address 192.168.1.1) and IPv6 Router 2 (IP address 192.168.12) are connected through an IPv4 network. To configure the IPv4 peers to advertise the IPv6 routes, enter the following commands.

On Router 1, enter the following:

```
R1(config-bgp)#show ip bgp config

router bgp
local-as 1
neighbor 192.168.1.2 remote-as 2

R1(config-bgp)#address-family ipv6 unicast
R1(config-bgp)#neighbor 192.168.1.2 activate
R1(config-bgp)#neighbor 192.168.1.2 route-map in t5
exit-address-family

address-family vpv4 unicast
exit-address-family

R1(config-bgp)#show route-map
route-map t5 permit 1
set ipv6 next-hop 2001:db8::2
```

On Router2, enter the following:

```
R2(config-bgp)#show ip bgp config
router bgp
local-as 1
neighbor 192.168.1.1 remote-as 1

address-family ipv6 unicast
redistribute static
neighbor 192.168.1.1 activate
exit-address-family
!
```

Configuring BGP IPv6 over BGP IPv4 neighbor settings

Use the **neighbor** command in the `bgp ipv6 unicast address family` level to configure various BGP IPv6 over IPv4 neighbor settings.

Syntax: `neighbor x.x.x.x`
`[activate]`
`[allows-in]`
`[capability]`
`[filter-list]`
`[maximum-prefix]`
`[peer-group]`
`[prefix-list]`
`[remote-as]`
`[route-map]`
`[route-reflector-client]`
`[send-community]`
`[unsuppress-map]`
`[weight]`

The `x.x.x.x` parameter is the IP address in the `x.x.x.x` format.

The **activate** parameter allows exchange of route in the current family mode.

The **allows-in** parameter accepts the as-path with my AS present in it.

The **capability** parameter advertises the capability to the peer.

The **filter-list** parameter establishes BGP filters.

The **maximum-prefix** parameter displays the maximum number of prefix accepts from this peer.

The **peer-group** parameter assigns a peer-group to the neighbor.

The **prefix-list** parameter displays the prefix list for filtering routes.

The **remote-as** parameter specifies a BGP neighbor.

The **route-map** parameter applies the route map to a neighbor.

The **route-reflector-client** configures a neighbor as route reflector client.

The **send-community** parameter displays the sent community attribute to this neighbor.

The **unsuppress-map** parameter displays the route-map to selectively unsuppress suppressed routes.

The **weight** parameter sets the default weight for routes from this neighbor.

Displaying neighbor information

To display IPv6 unicast route summary information, enter the **show ip bgp ipv6 summary** command:

```
R1(config-bgp)#show ip bgp ipv6 summary
BGP4 Summary
Router ID: 10.1.1.1 Local AS Number: 1
Confederation Identifier: not configured
Confederation Peers:
Maximum Number of IP ECMP Paths Supported for Load Sharing: 1
Number of Neighbors Configured: 1, UP: 1
Number of Routes Installed: 1, Uses 86 bytes
Number of Routes Advertising to All Neighbors: 0 (0 entries)
Number of Attribute Entries Installed: 1, Uses 90 bytes
Neighbor Address AS# State Time Rt:Accepted Filtered Sent ToSend
192.168.1.2 2 ESTAB 0h 1m51s 1 0 0 0
```

Syntax: `show ip bgp ipv6 summary`

Configuring BGP4 neighbors

To display IPv6 unicast router information with respect to the IPv4 neighbor, enter the **show ip bgp ipv6 neighbors** command:

```
R1(config-bgp)#show ip bgp ipv6 neighbors
Total number of BGP Neighbors: 1
1 IP Address: 192.168.1.2, AS: 2 (EBGP), RouterID: 10.1.1.2, VRF: default-vrf
State: ESTABLISHED, Time: 0h8m33s, KeepAliveTime: 60, HoldTime: 180
KeepAliveTimer Expire in 17 seconds, HoldTimer Expire in 135 seconds
UpdateSource: Loopback 1
RefreshCapability: Received
.....
Neighbor NLRI Negotiation:
Peer Negotiated IPV6 unicast capability
Peer configured for IPV6 unicast Routes
Neighbor ipv6 MPLS Label Capability Negotiation:
Neighbor AS4 Capability Negotiation:
TCP Connection state: ESTABLISHED, flags:00000033 (0,0)
```

Syntax: **show ip bgp ipv6 neighbors**
 [last-packet-with-error]
 [routes-summary]
 [x.x.x.x]

The **neighbors** parameter provides details on TCP and BGP neighbor connections.
The **last-packet-with-error** parameter displays the last packet received with error.
The **routes-summary** parameter displays the routes summary.

The x.x.x.x parameter is the neighbor IP address. The following sub-parameters are available for the x.x.x.x parameter:

- [advertised routes]**
- [flap-statistics]**
- [last-packet-with-error]**
- [received]**
- [received-routes]**
- [rib-out-routes]**
- [routes]**
- [routes-summary]**

The **advertised-routes** parameter displays routes advertised to a neighbor.
The **flap-statistics** parameter displays flap statistics for a neighbor.
The **last-packet-with-error** parameter displays the last packet received with error.
The **received** parameter displays the received ORF from neighbor.
The **received-routes** parameter displays the received routes from neighbor.
The **rib-out-routes** parameter displays RIB-out routes for a neighbor.
The **routes** parameter displays routes learned from neighbor.
The **routes-summary** parameter displays routes summary for a neighbor.

To display IPv6 multicast route information with respect to IPv4 neighbors, enter the `show ip mbgp ipv6 neighbors` command.

Syntax: `show ip mbgp ipv6 neighbors`
 `[summary]`
 `[last-packet-with-error]`
 `[routes-summary]`
 `[x.x.x.x]`

The **summary** parameter displays a summary of BGP neighbor status.

The **last-packet-with-error** parameter displays the last packet received with error.

The **routes-summary** parameter displays routes summary for a neighbor.

The `x.x.x.x` parameter is the neighbor IP address. Use the following sub-parameters to display details on TCP and BGP neighbor connections:

The **advertised-routes** parameter displays routes advertised to a neighbor.

The **flap-statistics** parameter displays flap statistics for a neighbor.

The **last-packet-with-error** parameter displays the last packet received with error.

The **received** parameter displays the received ORF from neighbor.

The **received-routes** parameter displays the received routes from neighbor.

The **rib-out-routes** parameter displays RIB-out routes for a neighbor.

The **routes** parameter displays routes learned from neighbor.

The **routes-summary** parameter displays routes summary for a neighbor.

Clearing IPv6 route information

To clear IPv6 unicast route information with respect to IPv4 neighbors, enter the `clear ip bgp ipv6 neighbor` command.

Syntax: `clear ip bgp ipv6`
 `[6pe]`
 `[dampening]`
 `[flap-statistics]`
 `[l2vpn]`
 `[local]`
 `[routes]`
 `[traffic]`
 `[ipv6]`
 `[vpn4]`
 `[vrf]`
 `[neighbor] [1-4294967295 | A.B.C.D | peer group name | all]`

The **6pe** parameter clears information for 6pe address family.

The **dampening** parameter clears route flap dampening information.

The **flap-statistics** parameter clears route flap statistics.

The **l2vpn** parameter clears information for l2vpn address family.

The **local** parameter clears local information.

The **routes** parameter clears BGP routes.

The **traffic** parameter clears BGP traffic counters.

The **ipv6** parameter clears information for ipv6 address family.

The **vpn4** parameter clears information for VPNV4 address family.

The **vrf** parameter clears information for a VPN Routing/Forwarding instance.

The neighbor parameter has the following sub-parameters:

- as number* identifies neighbors with the specified AS number, 1-4294967295
- A.B.C.D* identifies the neighbor IP address
- peer group name* clears the peer group name identified using ASCII string
- all* clears all BGP neighbors

To clear IPv6 multicast route information with respect to IPv4 neighbor, enter the **clear ip mgbp ipv6 neighbor** command.

Syntax: **clear ip mgbp ipv6** [*neighbor as number*] | [*A.B.C.D*] | [*peer group name*] | [**all**]

The neighbor parameter has the following sub-parameters:

- as number* identifies neighbors with the specified AS number, 1-4294967295
- A.B.C.D* identifies the neighbor IP address
- peer group name* clears the peer group name identified using ASCII string
- all* clears all BGP neighbors

Configuring a BGP4 peer group

A **peer group** is a set of BGP4 neighbors that share common parameters. The benefits of peer groups are:

- **Simplified neighbor configuration** – You can configure a set of neighbor parameters and then apply them to multiple neighbors. You do not need to configure the common parameters individually on each neighbor.
- **Flash memory conservation** – Using peer groups instead of individually configuring all the parameters for each neighbor requires fewer configuration commands in the startup configuration file.

You can perform the following tasks on a peer-group basis:

- Reset neighbor sessions
- Perform soft-outbound resets (the device updates outgoing route information to neighbors but does not entirely reset the sessions with those neighbors)
- Clear BGP4 message statistics
- Clear error buffers

Peer group parameters

You can set all neighbor parameters in a peer group. When you add a neighbor to the peer group, the neighbor receives all the parameter settings you set in the group, except parameter values you have explicitly configured for the neighbor. If you do not set a neighbor parameter in the peer group and the parameter also is not set for the individual neighbor, the neighbor uses the default value.

Configuration rules

The following rules apply to peer group configuration:

- You must configure a peer group before you can add neighbors to the peer group.

- If you remove a parameter from a peer group, the value for that parameter is reset to the default for all the neighbors within the peer group, unless you have explicitly set that parameter on individual neighbors. In this case, the value you set on the individual neighbors applies to those neighbors, while the default value applies to neighbors for which you have not explicitly set the value.

NOTE

If you enter a command to remove the remote AS parameter from a peer group, the software makes sure that the peer group does not contain any neighbors. If the peer group contains neighbors, the software does not allow you to remove the remote AS so that the neighbors in the peer group that are using the remote AS do not lose connectivity to the device.

You can override neighbor parameters on an individual neighbor basis:

- If you do not specify a parameter for an individual neighbor, the neighbor uses the value in the peer group.
- If you set the parameter for the individual neighbor, that value overrides the value you set in the peer group.
- If you add a parameter to a peer group that already contains neighbors, the parameter value is applied to neighbors that do not already have the parameter explicitly set. If a neighbor has the parameter explicitly set, the explicitly set value overrides the value you set for the peer group.
- If you remove the setting for a parameter from a peer group, the value for that parameter changes to the default value for all the neighbors in the peer group that do not have that parameter individually set.

Configuring a peer group

To configure a peer group, enter commands such as the following at the BGP4 configuration level.

```
Brocade(config-bgp)# neighbor PeerGroup1 peer-group
Brocade(config-bgp)# neighbor PeerGroup1 description "EastCoast Neighbors"
Brocade(config-bgp)# neighbor PeerGroup1 remote-as 100
Brocade(config-bgp)# neighbor PeerGroup1 distribute-list out 1
Brocade(config-bgp)# neighbor PeerGroup1 capability as4 enable|disable
```

The commands in this example configure a peer group called "PeerGroup1" and set the following parameters for the peer group:

- A description, "EastCoast Neighbors"
- A remote AS number, 100
- A distribute list for outbound traffic
- The capability of PeerGroup1 to utilize a four-byte AS number

The software applies these parameters to each neighbor you add to the peer group. You can override the description parameter for individual neighbors. If you set the description parameter for an individual neighbor, the description overrides the description configured for the peer group.

Syntax: `neighbor peer-group-name peer-group`

The *peer-group-name* parameter specifies the name of the group and can be up to 80 characters long. The name can contain special characters and internal blanks. If you use internal blanks, you must use quotation marks around the name. For example, the command **neighbor "My Three Peers" peer-group** is valid, but the command **neighbor My Three Peers peer-group** is not valid.

Syntax: `[no] neighbor ip-addr | peer-group-name`
`[default-originate [route-map map-name]]`
`[description string]`
`[distribute-list in | out num,num,... | acl-num in | out]`
`[ebgp-multihop [num]]`
`[filter-list in | out num,num,... | acl-num in | out | weight]`
`[maxas-limit in [num | disable]`
`[maximum-prefix num [threshold] [teardown]]`
`[next-hop-self]`
`[password string]`
`[prefix-list string in | out]`
`[remote-as as-number]`
`[remove-private-as]`
`[route-map in | out map-name]`
`[route-reflector-client]`
`[send-community]`
`[soft-reconfiguration inbound]`
`[shutdown]`
`[timers keep-alive num hold-time num]`
`[update-source loopback num ethernet slot/portnum | loopback num | ve num]`
`[weight num]`
`[local-as as-num]`

The `ip-addr | peer-group-name` parameters indicate whether you are configuring a peer group or an individual neighbor. You can specify a peer group name or IP address with the **neighbor** command. If you specify a peer group name, you are configuring a peer group. If you specify a neighbor IP address, you are configuring that individual neighbor. Use the `ip-addr` parameter if you are configuring an individual neighbor instead of a peer group. Refer to “[Configuring BGP4 neighbors](#)” on page 47 and “[Configuring a BGP4 peer group](#)” on page 60.

The remaining parameters are the same ones supported for individual neighbors. Refer to “[Configuring BGP4 neighbors](#)” on page 47 and “[Configuring a BGP4 peer group](#)” on page 60.

Applying a peer group to a neighbor

After you configure a peer group, you can add neighbors to the group. When you add a neighbor to a peer group, you are applying all the neighbor attributes specified in the peer group to the neighbor.

To add neighbors to a peer group, enter commands such as the following.

```
Brocade(config-bgp)# neighbor 192.168.1.12 peer-group PeerGroup1
Brocade(config-bgp)# neighbor 192.168.2.45 peer-group PeerGroup1
Brocade(config-bgp)# neighbor 192.168.3.69 peer-group PeerGroup1
```

The commands in this example add three neighbors to the peer group “PeerGroup1”. As members of the peer group, the neighbors automatically receive the neighbor parameter values configured for the peer group. You also can override the parameters on an individual neighbor basis. For neighbor parameters not specified for the peer group, the neighbors use the default values.

Syntax: `[no] neighbor ip-addr peer-group peer-group-name`

The `ip-addr` parameter specifies the IP address of the neighbor.

The `peer-group-name` parameter specifies the peer group name.

NOTE

You must add the peer group before you can add neighbors to it.

Administratively shutting down a session with a BGP4 neighbor

You can prevent the device from starting a BGP4 session with a neighbor by administratively shutting down the neighbor. This option is very useful for situations in which you want to configure parameters for a neighbor, but are not ready to use the neighbor. You can shut the neighbor down as soon as you have added it the device, configure the neighbor parameters, then allow the device to reestablish a session with the neighbor by removing the shutdown option from the neighbor.

When you apply the option to shut down a neighbor, the option takes place immediately and remains in effect until you remove it. If you save the configuration to the startup configuration file, the shutdown option remains in effect even after a software reload.

The software also contains an option to end the session with a BGP4 neighbor and clear the routes learned from the neighbor. Unlike this clear option, the option for shutting down the neighbor can be saved in the startup configuration file and can prevent the device from establishing a BGP4 session with the neighbor even after reloading the software.

NOTE

If you notice that a particular BGP4 neighbor never establishes a session with the device, check the running configuration and startup configuration files for that device to see whether the configuration contains a command that is shutting down the neighbor. The neighbor may have been shut down previously by an administrator.

To shut down a BGP4 neighbor, enter commands such as the following.

```
Brocade(config)# router bgp
Brocade(config-bgp)# neighbor 10.157.22.26 shutdown
Brocade(config-bgp)# write memory
```

Syntax: [no] neighbor *ip-addr* shutdown [generate-rib-out]

The *ip-addr* parameter specifies the IP address of the neighbor.

Specifying a list of networks to advertise

By default, the device sends BGP4 routes only for the networks you either identify with the **network** command or are redistributed into BGP4 from OSPF, IS-IS, RIP, or connected routes.

NOTE

The exact route must exist in the IP route table before the device can create a local BGP4 route.

To configure the device to advertise network 10.157.22.0/24, enter the following command.

```
Brocade(config-bgp)# network 10.157.22.0 255.255.255.0
```

Syntax: [no] network *ip-addr ip-mask* [route-map *map-name*] | [weight *num*] | [backdoor]

The *ip-addr* is the network number and the *ip-mask* specifies the network mask.

The **route-map** *map-name* parameter specifies the name of the route map you want to use to set or change BGP4 attributes for the network you are advertising. The route map must already be configured. If it is not, the default action is to deny redistribution.

The **weight** *num* parameter specifies a weight to be added to routes to this network.

The **backdoor** parameter changes the administrative distance of the route to this network from the EBGp administrative distance (20 by default) to the Local BGP4 weight (200 by default), tagging the route as a backdoor route. Use this parameter when you want the device to prefer IGP routes such as RIP or OSPF routes over the EBGp route for the network.

Specifying a route map when configuring BGP4 network advertising

You can specify a route map when you configure a BGP4 network to be advertised. The device uses the route map to set or change BGP4 attributes when creating a local BGP4 route.

NOTE

You must configure the route map *before* you can specify the route map name in a BGP4 network configuration; otherwise, the route is not imported into BGP4.

To configure a route map, and use it to set or change route attributes for a network you define for BGP4 to advertise, enter commands such as the following.

```
Brocade(config)# route-map set_net permit 1
Brocade(config-routemap set_net)# set community no-export
Brocade(config-routemap set_net)# exit
Brocade(config)# router bgp
Brocade(config-bgp)# network 10.100.1.0/24 route-map set_net
```

The first two commands in this example create a route map named “set_net” that sets the community attribute for routes that use the route map to “NO_EXPORT”. The next two commands change the CLI to the BGP4 configuration level. The last command configures a network for advertising from BGP4, and associates the “set_net” route map with the network. When BGP4 originates the 10.100.1.0/24 network, BGP4 also sets the community attribute for the network to “NO_EXPORT”.

For more information, refer to “[Defining route maps](#)” on page 81.

Using the IP default route as a valid next-hop for a BGP4 route

By default, the device does not use a default route to resolve a BGP4 next-hop route. If the IP route lookup for the BGP4 next-hop does not result in a valid IGP route (including static or direct routes), the BGP4 next-hop is considered to be unreachable and the BGP4 route is not used.

In some cases, such as when the device is acting as an edge device, you can allow the device to use the default route as a valid next-hop. To do so, enter the following command at the BGP4 configuration level of the CLI.

```
Brocade(config-bgp)# next-hop-enable-default
```

Syntax: [no] next-hop-enable-default

Enabling next-hop recursion

For each BGP4 route learned, the device performs a route lookup to obtain the IP address of the next-hop for the route. A BGP4 route is eligible for addition in the IP route table only if the following conditions are true:

- The lookup succeeds in obtaining a valid next-hop IP address for the route.
- The path to the next-hop IP address is an IGP path or a static route path.

By default, the software performs only one lookup for the next-hop IP address for the BGP4 route. If the next-hop lookup does not result in a valid next-hop IP address, or the path to the next-hop IP address is a BGP4 path, the software considers the BGP4 route destination to be unreachable. The route is not eligible to be added to the IP route table.

The BGP4 route table can contain a route with a next-hop IP address that is not reachable through an IGP route, even though the device can reach a hop farther away through an IGP route. This can occur when the IGP does not learn a complete set of IGP routes, so the device learns about an internal route through IBGP instead of through an IGP. In this case, the IP route table will not contain a route that can be used to reach the BGP4 route destination.

To enable the device to find the IGP route to the next-hop gateway for a BGP4 route, enable recursive next-hop lookups. With this feature enabled, if the first lookup for a BGP4 route results in an IBGP path that originated within the same AS, rather than an IGP path or static route path, the device performs a lookup on the next-hop IP address for the next-hop gateway. If this second lookup results in an IGP path, the software considers the BGP4 route to be valid and adds it to the IP route table. Otherwise, the device performs another lookup on the next-hop IP address of the next-hop for the next-hop gateway, and so on, until one of the lookups results in an IGP route.

NOTE

You must configure a static route or use an IGP to learn the route to the EBGP multihop peer.

Enabling recursive next-hop lookups

The recursive next-hop lookups feature is disabled by default.

To enable recursive next-hop lookups, enter the following command at the BGP4 configuration level of the CLI.

```
Brocade(config-bgp)# next-hop-recursion
```

Syntax: [no] next-hop-recursion

Example when recursive route lookups are disabled

The output here shows the results of an unsuccessful next-hop lookup for a BGP4 route. In this case, next-hop recursive lookups are disabled. This example is for the BGP4 route to network 10.0.0.0/24.

Enabling next-hop recursion

```
Brocade# show ip bgp route
Total number of BGP Routes: 5
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED
Prefix          Next Hop      MED      LocPrf      Weight Status
1 0.0.0.0/0      10.1.0.2      0         100          0      BI
   AS_PATH: 65001 4355 701 80
2 10.10.0.0/24  10.0.0.1      1         100          0      BI
   AS_PATH: 65001 4355 1
3 10.40.0.0/24  10.1.0.2      0         100          0      BI
   AS_PATH: 65001 4355 701 1 189
4 10.0.0.0/24   10.0.0.1      1         100          0      I
   AS_PATH: 65001 4355 3356 7170 1455
5 10.25.0.0/24  10.157.24.1   1         100          0      I
   AS_PATH: 65001 4355 701
```

In this example, the device cannot reach 10.0.0.0/24, because the next-hop IP address for the route is an IBGP route instead of an IGP route, and is considered unreachable by the device. The IP route table entry for the next-hop gateway for the BGP4 route's next-hop gateway (10.0.0.1/24) is shown here.

```
Brocade# show ip route 10.0.0.1
Total number of IP routes: 37
Network Address  Gateway      Port      Cost      Type
10.0.0.0         10.0.0.1     1/1       1         B
```

Since the route to the next-hop gateway is a BGP4 route, and not an IGP route, it cannot be used to reach 10.0.0.0/24. In this case, the device tries to use the default route, if present, to reach the subnet that contains the BGP4 route next-hop gateway.

```
Brocade# show ip route 10.0.0.0/24
Total number of IP routes: 37
Network Address  Gateway      Port      Cost      Type
0.0.0.0         10.0.0.202   1/1       1         S
```

Example when recursive route lookups are enabled

When recursive next-hop lookups are enabled, the device continues to look up the next-hop gateways along the route until the device finds an IGP route to the BGP4 route destination.

```
Brocade# show ip bgp route
Total number of BGP Routes: 5
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED
Prefix          Next Hop      MED      LocPrf      Weight Status
1 0.0.0.0/0      10.1.0.2      0         100          0      BI
   AS_PATH: 65001 4355 701 80
2 10.10.0.0/24  10.0.0.1      1         100          0      BI
   AS_PATH: 65001 4355 1
3 10.40.0.0/24  10.1.0.2      0         100          0      BI
   AS_PATH: 65001 4355 701 1 189
4 10.0.0.0/24   10.0.0.1      1         100          0      BI
   AS_PATH: 65001 4355 3356 7170 1455
5 10.25.0.0/24  10.157.24.1   1         100          0      I
   AS_PATH: 65001 4355 701
```

The first lookup results in an IBGP route, to network 10.0.0.0/24.

```
Brocade# show ip route 10.0.0.1
Total number of IP routes: 38
  Network Address    Gateway          Port    Cost    Type
  10.0.0.0           10.0.0.1        1/1     1       B
  AS_PATH: 65001 4355 1
```

Since the route to 10.0.0.1/24 is not an IGP route, the device cannot reach the next hop through IP, and so cannot use the BGP4 route. In this case, since recursive next-hop lookups are enabled, the device next performs a lookup for the next-hop gateway to 10.0.0.1's next-hop gateway, 10.0.0.1.

```
Brocade# show ip bgp route 10.0.0.0
Number of BGP Routes matching display condition : 1
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED
  Prefix            Next Hop        MED      LocPrf    Weight Status
  1 10.0.0.0/24      10.0.0.1        1        100       0      BI
  AS_PATH: 65001 4355 1
```

The next-hop IP address for 10.0.0.1 is not an IGP route, which means the BGP4 route destination still cannot be reached through IP. The recursive next-hop lookup feature performs a lookup on the next-hop gateway for 10.0.0.1

```
Brocade# show ip route 10.0.0.1
Total number of IP routes: 38
  Network Address    Gateway          Port    Cost    Type
  10.0.0.0           0.0.0.0         1/1     1       D
  AS_PATH: 65001 4355 1
```

This lookup results in an IGP route that is a directly-connected route. As a result, the BGP4 route destination is now reachable through IGP, which means the BGP4 route can be added to the IP route table. The IP route table with the BGP4 route is shown here.

```
Brocade# show ip route 10.0.0.0/24
Total number of IP routes: 38
  Network Address    Gateway          Port    Cost    Type
  10.0.0.0           10.0.0.1        1/1     1       B
  AS_PATH: 65001 4355 1
```

The device can use this route because it has an IP route to the next-hop gateway. Without recursive next-hop lookups, this route would not be in the IP route table.

Modifying redistribution parameters

By default, the device does not redistribute route information between BGP4 and the IP IGP (RIP, IS-IS, and OSPF). You can configure the device to redistribute OSPF, IS-IS, or RIP routes, directly connected routes, or static routes into BGP4.

To enable redistribution of all OSPF routes and directly attached routes into BGP4, enter the following commands.

Modifying redistribution parameters

```
Brocade(config)# router bgp
Brocade(config-bgp)# redistribute ospf
Brocade(config-bgp)# redistribute connected
Brocade(config-bgp)# write memory
```

Syntax: [no] **redistribute connected** | **ospf** | **rip** | **isis** | **static**

The **connected** parameter indicates that you are redistributing routes to directly attached devices into BGP4.

The **ospf** parameter indicates that you are redistributing OSPF routes into BGP4.

NOTE

Entering **redistribute ospf** simply redistributes internal OSPF routes. To redistribute external OSPF routes also, use the **redistribute ospf match external...** command. Refer to [“Redistributing OSPF external routes”](#) on page 69.

The **rip** parameter indicates that you are redistributing RIP routes into BGP4.

The **isis** parameter indicates that you are redistributing IS-IS routes into BGP4.

The **static** parameter indicates that you are redistributing static routes into BGP4.

Redistributing connected routes

To configure BGP4 to redistribute directly connected routes, enter the following command.

```
Brocade(config-bgp)# redistribute connected
```

Syntax: [no] **redistribute connected** [**metric num**] [**route-map map-name**]

The **connected** parameter indicates that you are redistributing routes to directly attached devices into BGP4.

The **metric num** parameter changes the metric. You can specify a value from 0 – 4294967295. The default is not assigned.

The **route-map map-name** parameter specifies a route map to be consulted before adding the RIP route to the BGP4 route table.

NOTE

The route map you specify must already be configured on the device. Refer to [“Defining route maps”](#) on page 81 for information about defining route maps.

Redistributing RIP routes

To configure BGP4 to redistribute RIP routes and add a metric of 10 to the redistributed routes, enter the following command.

```
Brocade(config-bgp)# redistribute rip metric 10
```

Syntax: [no] **redistribute rip** [**metric num**] [**route-map map-name**]

The **rip** parameter indicates that you are redistributing RIP routes into BGP4.

The **metric num** parameter changes the metric. You can specify a value from 0 – 4294967295. The default is not assigned.

The **route-map map-name** parameter specifies a route map to be consulted before adding the RIP route to the BGP4 route table.

NOTE

The route map you specify must already be configured on the device. Refer to [“Defining route maps”](#) on page 81 for information about defining route maps.

Redistributing OSPF external routes

To configure the device to redistribute OSPF external type 1 routes, enter the following command.

```
Brocade(config-bgp)# redistribute ospf match external1
```

Syntax: [no] redistribute ospf [match internal | external1 | external2] [metric num] [route-map map-name]

The **ospf** parameter indicates that you are redistributing OSPF routes into BGP4.

The match **internal | external1 | external2** parameters apply only to OSPF. These parameters specify the types of OSPF routes to be redistributed into BGP4. The default is internal.

NOTE

If you do not enter a value for the **match** parameter, (for example, you enter **redistribute ospf** only) then only internal OSPF routes will be redistributed.

The **metric num** parameter changes the metric. You can specify a value from 0 – 4294967295. The default is not assigned.

The **route-map map-name** parameter specifies a route map to be consulted before adding the OSPF route to the BGP4 route table.

NOTE

The route map you specify must already be configured on the device. Refer to [“Defining route maps”](#) on page 81 for information about defining route maps.

NOTE

If you use both the **redistribute ospf route-map map-name** command and the **redistribute ospf match internal | external1 | external2** command, the software uses only the route map for filtering.

Redistributing IS-IS

To configure the device to redistribute IS-IS routes, enter the following command.

```
Brocade(config-bgp)# redistribute isis level-1
```

Syntax: [no] redistribute isis level-1 | level-1-2 | level-2 [metric num] [route-map map-name]

The **isis** parameter indicates that you are redistributing IS-IS routes into BGP4.

The **level-1** parameter redistributes IS-IS routes only within the area the routes.

The **level-2** parameter redistributes IS-IS routes between areas within a domain.

The **level-1-2** parameter redistributes IS-IS routes within the area of the routes and between areas within a domain.

The **metric num** parameter changes the metric. You can specify a value from 0 – 4294967295. The default is not assigned.

The **route-map** *map-name* parameter specifies a route map to be consulted before adding the OSPF route to the BGP4 route table.

Redistributing static routes

To configure the device to redistribute static routes, enter the following command.

```
Brocade(config-bgp)# redistribute static
```

Syntax: [no] **redistribute static** [**metric** *num*] [**route-map** *map-name*]

The **static** parameter indicates that you are redistributing static routes into BGP4.

The **metric** *num* parameter changes the metric. You can specify a value from 0 – 4294967295. The default is 0.

The **route-map** *map-name* parameter specifies a route map to be consulted before adding the static route to the BGP4 route table.

NOTE

The route map you specify must already be configured on the device. Refer to [“Defining route maps”](#) on page 81 for information about defining route maps.

Using a table map to set the tag value

Route maps that contain set statements change values in routes when the routes are accepted by the route map. For inbound route maps (route maps that filter routes received from neighbors), the routes are changed before they enter the BGP4 route table.

For tag values, if you do not want the value to change until a route enters the IP route table, you can use a table map to change the value. A table map is a route map that you have associated with the IP routing table. The device applies the set statements for tag values in the table map to routes before adding them to the route table.

To configure a table map, you first configure the route map, then identify it as a table map. The table map does not require separate configuration. You can have one table map.

NOTE

Use table maps only for setting the tag value. Do not use table maps to set other attributes. To set other route attributes, use route maps or filters.

To create a route map and identify it as a table map, enter commands such as following. These commands create a route map that uses an address filter. For routes that match the IP prefix list filter, the route map changes the tag value to 100 and is then considered as a table map. This route map is applied only to routes the device places in the IP route table. The route map is not applied to all routes. This example assumes that IP prefix list p11 has already been configured.

```
Brocade(config)# route-map TAG_IP permit 1
Brocade(config-routemap TAG_IP)# match ip address prefix-list p11
Brocade(config-routemap TAG_IP)# set tag 100
Brocade(config-routemap TAG_IP)# router bgp
Brocade(config-bgp)# table-map TAG_IP
```

Changing the Keep Alive Time and Hold Time

The Keep Alive Time specifies how frequently the device will send KEEPALIVE messages to its BGP4 neighbors. The Hold Time specifies how long the device will wait for a KEEPALIVE or UPDATE message from a neighbor before concluding that the neighbor is dead. When the device concludes that a BGP4 neighbor is dead, the device ends the BGP4 session and closes the TCP connection to the neighbor.

The default Keep Alive time is 60 seconds. The default Hold Time is 180 seconds.

NOTE

Generally, you should set the Hold Time to three times the value of the Keep Alive Time.

NOTE

You can override the global Keep Alive Time and Hold Time on individual neighbors. Refer to [“Configuring BGP4 neighbors”](#) on page 47 and [“Configuring a BGP4 peer group”](#) on page 60.

To change the Keep Alive Time to 30 and Hold Time to 90, enter the following command.

```
Brocade(config-bgp)# timers keep-alive 30 hold-time 90
```

Syntax: [no] **timers keep-alive** *num* **hold-time** *num*

For each keyword, *num* indicates the number of seconds. The Keep Alive Time can be 0 – 65535. The Hold Time can be 0 or 3 – 65535 (1 and 2 are not allowed). If you set the Hold Time to 0, the device waits indefinitely for messages from a neighbor without concluding that the neighbor is dead.

Changing the BGP4 next-hop update timer

By default, the device updates the BGP4 next-hop tables and affected BGP4 routes five seconds after IGP route changes. You can change the update timer to a value from 1 – 30 seconds.

To change the BGP4 update timer value to 15 seconds, for example, enter a command such as the following at the BGP4 configuration level of the CLI.

```
Brocade(config-bgp)# update-time 15
```

Syntax: [no] **update-time** *secs*

The *secs* parameter specifies the number of seconds and can be from 0 – 30. The default is 5. The value of 0 permits fast BGP4 convergence for situations such as link-failure or IGP route changes. Setting the value to 0 starts the BGP4 route calculation in sub-second time. All other values from 1 to 30 are still calculated in seconds.

Changing the device ID

The OSPF and BGP4 protocols use device IDs to identify devices that are running the protocols. A device ID is a valid, unique IP address and sometimes is an IP address configured on the device. The device ID cannot be an IP address in use by another device.

By default, the device ID on a device is one of the following:

Adding a loopback interface

- If the device has loopback interfaces, the default device ID is the IP address on the lowest numbered loopback interface configured on the device. For example, if you configure loopback interfaces 1, 2, and 3 as follows, the default device ID is 10.9.9.9/24:
 - Loopback interface 1, 10.9.9.9/24
 - Loopback interface 2, 10.4.4.4/24
 - Loopback interface 3, 10.1.1.1/24
- If the device does not have any loopback interfaces, the default device ID is the lowest numbered IP interface address configured on the device.

NOTE

A device uses the same device ID for both OSPF and BGP4. If the device is already configured for OSPF, you may want to use the device ID that already assigned to the device rather than set a new one. To display the current device ID, enter the **show ip** CLI command at any CLI level.

To change the device ID, enter a command such as the following.

```
Brocade(config)# ip router-id 10.157.22.26
```

Syntax: [no] ip router-id *ip-addr*

The *ip-addr* can be any valid, unique IP address.

NOTE

You can specify an IP address used for an interface on the device, but do not specify an IP address that is being used by another device.

Adding a loopback interface

You can configure the device to use a loopback interface instead of a specific port or virtual routing interface to communicate with a BGP4 neighbor. A loopback interface adds stability to the network by working around route flap problems that can occur due to unstable links between the device and neighbors.

Loopback interfaces are always up, regardless of the states of physical interfaces. Loopback interfaces are especially useful for IBGP neighbors (neighbors in the same AS) that are multiple hops away from the device. When you configure a BGP4 neighbor on the device, you can specify whether the device uses the loopback interface to communicate with the neighbor. As long as a path exists between the device and the neighbor, BGP4 information can be exchanged. The BGP4 session is not associated with a specific link, but is instead associated with the virtual interfaces.

NOTE

If you configure the device to use a loopback interface to communicate with a BGP4 neighbor, the peer IP address on the remote device pointing to your loopback address must be configured.

To add a loopback interface, enter commands such as the following.

```
Brocade(config-bgp)# exit
Brocade(config)# int loopback 1
Brocade(config-lbif-1)# ip address 10.0.0.1/24
```

Syntax: [no] interface loopback *num*

The *num* value can be from 1 - 64.

Changing the maximum number of paths for BGP4 load sharing

Load sharing enables the device to balance traffic to a route across multiple equal-cost paths of the same route type (EBGP or IBGP).

To configure the device to perform BGP4 load sharing:

- Enable IP load sharing if it is disabled.
- Set the maximum number of BGP4 load sharing paths. The default maximum number is 1, which means no BGP4 load sharing takes place by default. Refer to [“Configuring BGP4 multipath load sharing”](#) on page 43.

NOTE

The maximum number of BGP4 load sharing paths cannot be greater than the maximum number of IP load sharing paths.

How load sharing affects route selection

During evaluation of multiple paths to select the best path to a given destination (for installment in the IP route table), the device performs a final comparison of the internal paths. The following events occur when load sharing is enabled or disabled:

- When load sharing is disabled, the device prefers the path with the lower device ID if the **compare-routerid** command is enabled.
- When load sharing and BGP4 load sharing are enabled, the device balances the traffic across multiple paths instead of choosing just one path based on device ID.

Refer to [“How BGP4 selects a path for a route \(BGP best path selection algorithm\)”](#) on page 5 for a description of the BGP4 algorithm.

When you enable IP load sharing, the device can load-balance BGP4 or OSPF routes across up to four equal paths by default. You can change the number of load sharing paths to a value between 2 and 32.

Configuring route reflection parameters

Normally, all the BGP4 devices within an AS are fully meshed. Since each device has an IBGP session with each of the other BGP4 devices in the AS, each device has a route for each IBGP neighbor. For large ASs containing many IBGP devices, the IBGP route information in each fully-meshed IBGP device may introduce too much administrative overhead.

To avoid this overhead, you can organize your IGP devices into clusters:

- A **cluster** is a group of IGP devices organized into route reflectors and route reflector clients. You configure the cluster by assigning a cluster ID on the route reflector and identifying the IGP neighbors that are members of that cluster. All configuration for route reflection takes place on the route reflectors. Clients are unaware that they are members of a route reflection cluster. All members of the cluster must be in the same AS. The cluster ID can be any number from 1 – 4294967295, or an IP address. The default is the device ID.

NOTE

If the cluster contains more than one route reflector, you need to configure the same cluster ID on all the route reflectors in the cluster. The cluster ID helps route reflectors avoid loops within the cluster.

- A **route reflector** is an IGP device configured to send BGP4 route information to all the clients (other BGP4 devices) within the cluster. Route reflection is enabled on all BGP4 devices by default but does not take effect unless you add route reflector clients to the device.
- A **route reflector client** is an IGP device identified as a member of a cluster. You identify a device as a route reflector client on the device that is the route reflector, not on the client. The client itself requires no additional configuration. In fact, the client does not know that it is a route reflector client. The client just knows that it receives updates from its neighbors and does not know whether one or more of those neighbors are route reflectors.


NOTE

Route reflection applies only among IBGP devices within the same AS. You cannot configure a cluster that spans multiple ASs.

Figure 7 shows an example of a route reflector configuration. In this example, two devices are configured as route reflectors for the same cluster, which provides redundancy in case one of the reflectors becomes unavailable. Without redundancy, if a route reflector becomes unavailable, the clients for that router are cut off from BGP4 updates.

AS1 contains a cluster with two route reflectors and two clients. The route reflectors are fully meshed with other BGP4 devices, but the clients are not fully meshed and rely on the route reflectors to propagate BGP4 route updates.

FIGURE 7 A route reflector configuration

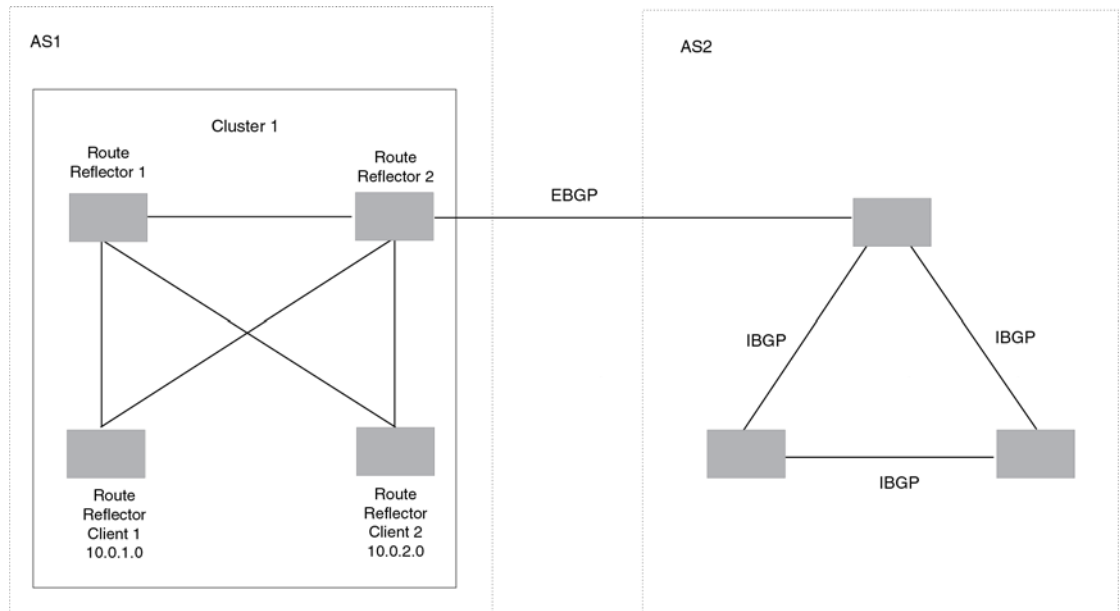

Support for RFC 4456

Route reflection is based on RFC 4456. This updated RFC helps eliminate routing loops that are possible in some implementations of the older specification, RFC 1966. These instances include:

- The device adds the route reflection attributes only if it is a route reflector, and only when advertising IBGP route information to other IBGP neighbors. The attributes are not used when communicating with EBGP neighbors.
- A device configured as a route reflector sets the ORIGINATOR_ID attribute to the device ID of the device that originated the route. The route reflector sets this attribute only if this is the first time the route is being reflected (sent by a route reflector).
- If a device receives a route with an ORIGINATOR_ID attribute value that is the same as the ID of the device, the device discards the route and does not advertise it. By discarding the route, the device prevents a routing loop.
- The first time a route is reflected by a device configured as a route reflector, the route reflector adds the CLUSTER_LIST attribute to the route. Other route reflectors that receive the route from an IBGP neighbor add their cluster IDs to the front of the routes CLUSTER_LIST. If the route reflector does not have a cluster ID configured, the device adds its device ID to the front of the CLUSTER_LIST.
- If a device configured as a route reflector receives a route with a CLUSTER_LIST that contains the cluster ID of the route reflector, the route reflector discards the route.

Configuration procedures

NOTE

All configuration for route reflection takes place on the route reflectors, not on the clients.

Enter the following commands to configure a device as route reflector 1 in “[Route filters used by each protocol](#)” on page 93. To configure route reflector 2, enter the same commands on the device that will be route reflector 2. The clients require no configuration for route reflection.

```
Brocade(config-bgp)# cluster-id 1
```

Syntax: [no] **cluster-id** *num* | *ip-addr*

The *num* | *ip-addr* parameters specify the cluster ID and can be a number from 1 – 4294967295, or an IP address. The default is the device ID. You can configure one cluster ID on the device. All route-reflector clients for the device are members of the cluster.

NOTE

If the cluster contains more than one route reflector, you need to configure the same cluster ID on all the route reflectors in the cluster. The cluster ID helps route reflectors avoid loops in the cluster.

To add an IBGP neighbor to the cluster, enter the following command:

```
Brocade(config-bgp)# neighbor 10.0.1.0 route-reflector-client
```

Syntax: [no] **neighbor** *ip-addr* **route-reflector-client**

For more information about the **neighbor** command, refer to “[Configuring BGP4 neighbors](#)” on page 47 and “[Configuring a BGP4 peer group](#)” on page 60.

Filtering

This section describes how to configure filters for AS-paths, communities, and other BGP4 attributes.

Filtering AS-paths

You can filter updates received from BGP4 neighbors based on the contents of the AS-path list accompanying the updates. For example, to deny routes that have the AS 10.3.2.1 in the AS-path from entering the BGP4 route table, you can define a filter.

The device provides the following methods for filtering on AS-path information:

- AS-path filters - refer to [“Setting the local AS number”](#) on page 42.
- AS-path ACLs

NOTE

The device cannot support AS-path filters and AS-path ACLs at the same time. Use one method or the other, but do not mix methods.

NOTE

Once you define a filter or ACL, the default action for updates that do not match a filter is **deny**. To change the default action to **permit**, configure the last filter or ACL as **permit any any**.

AS-path filters or AS-path ACLs can be referred to by the filter list number of a BGP4 neighbor as well as by match clauses in a route map.

Defining an AS-path ACL

To configure an AS-path list that uses “acl 1”, enter a command such as the following.

```
Brocade(config)# ip as-path access-list acl1 permit 100
Brocade(config)# router bgp
Brocade(config-bgp)# neighbor 10.10.10.1 filter-list acl1 in
```

Syntax: [no] ip as-path access-list *string* [seq *seq-value*] deny | permit *regular-expression*

The **ip as-path** command configures an AS-path ACL that permits routes containing AS number 100 in their AS paths. The **neighbor** command then applies the AS-path ACL to advertisements and updates received from neighbor 10.10.10.1. In this example, the only routes the device permits from neighbor 10.10.10.1 are those whose AS-paths contain AS-path number 100.

The *string* parameter specifies the ACL name. (If you enter a number, the CLI interprets the number as a text string.)

The **seq seq-value** parameter is optional and specifies the sequence number for the AS-path list. If you do not specify a sequence number, the software numbers in increments of 5, beginning with number 5. The software interprets the entries in an AS-path list in numerical order, beginning with the lowest sequence number.

The **deny | permit** parameter specifies the action the software takes if the AS-path list for a route matches a match clause in this ACL. To configure the AS-path match clauses in a route map, use the match as-path command. Refer to [“Matching based on AS-path ACL”](#) on page 85.

The *regular-expression* parameter specifies the AS path information you want to permit or deny to routes that match any of the match clauses within the ACL. You can enter a specific AS number or use a regular expression.

The **neighbor** command uses the **filter-list** parameter to apply the AS-path ACL to the neighbor. Refer to “Configuring BGP4 neighbors” on page 47 and “Configuring a BGP4 peer group” on page 60.

Using regular expressions

Use a regular expression for the *as-path* parameter to specify a single character or multiple characters as a filter pattern. If the AS-path matches the pattern specified in the regular expression, the filter evaluation is true; otherwise, the evaluation is false.

You can also include special characters that influence the way the software matches the AS-path against the filter value.

To filter on a specific single-character value, enter the character for the *as-path* parameter. For example, to filter on AS-paths that contain the letter “z”, enter the following command:

```
Brocade(config-bgp)# ip as-path access-list acl1 permit z
```

To filter on a string of multiple characters, enter the characters in brackets. For example, to filter on AS-paths that contain “x”, “y”, or “z”, enter the following command.

```
Brocade(config-bgp)# ip as-path access-list acl1 permit [xyz]
```

Special characters

When you enter a single-character expression or a list of characters, you also can use the special characters listed in Table 4. The description for each character includes an example. Some special characters must be placed in front of the characters they control and others must be placed after the characters they control. The examples show where to place the special character.

TABLE 4 BGP4 special characters for regular expressions

Character	Operation
.	The period matches on any single character, including a blank space. For example, the following regular expression matches for “aa”, “ab”, “ac”, and so on, but not just “a”. a.
*	The asterisk matches on zero or more sequences of a pattern. For example, the following regular expression matches on an AS-path that contains the string “1111” followed by any value: 1111*
+	The plus sign matches on one or more sequences of a pattern. For example, the following regular expression matches on an AS-path that contains a sequence of “g”s, such as “deg”, “degg”, “deggg”, and so on: deg+
?	The question mark matches on zero occurrences or one occurrence of a pattern. For example, the following regular expression matches on an AS-path that contains “dg” or “deg”: de?g
^	A caret (when not used within brackets) matches on the beginning of an input string. For example, the following regular expression matches on an AS-path that begins with “3”: ^3

TABLE 4 BGP4 special characters for regular expressions (Continued)

Character	Operation
\$	A dollar sign matches on the end of an input string. For example, the following regular expression matches on an AS-path that ends with “deg”: deg\$
_	An underscore matches on one or more of the following: <ul style="list-style-type: none"> • , (comma) • { (left curly brace) • } (right curly brace) • ((left parenthesis) •) (right parenthesis) • The beginning of the input string • The end of the input string • A blank space For example, the following regular expression matches on “100” but not on “1002”, “2100”, and so on. _100_
[]	Square brackets enclose a range of single-character patterns. For example, the following regular expression matches on an AS-path that contains “1”, “2”, “3”, “4”, or “5”: [1-5] You can use the following expression symbols within the brackets. These symbols are allowed only inside the brackets: <ul style="list-style-type: none"> • ^ - The caret matches on any characters except the ones in the brackets. For example, the following regular expression matches on an AS-path that does not contain “1”, “2”, “3”, “4”, or “5”: [^1-5] • - The hyphen separates the beginning and ending of a range of characters. A match occurs if any of the characters within the range is present. Refer to the example above.
	A vertical bar (sometimes called a pipe or a “logical or”) separates two alternative values or sets of values. The AS-path can match one or the other value. For example, the following regular expression matches on an AS-path that contains either “abc” or “defg”: (abc) (defg) NOTE: The parentheses group multiple characters to be treated as one value. Refer to the following row for more information about parentheses.
()	Parentheses allow you to create complex expressions. For example, the following complex expression matches on “abc”, “abcabc”, or “abcabcabcdefg”, but not on “abcdefgdefg”: ((abc)+) ((defg)?)

To filter for a special character instead of using the special character as described in [Table 4](#), enter “\” (backslash) in front of the character. For example, to filter on AS-path strings containing an asterisk, enter the asterisk portion of the regular expression as “*”.

```
Brocade(config-bgp)# ip as-path access-list acl2 deny \*
```

To use the backslash as a string character, enter two slashes. For example, to filter on AS-path strings containing a backslash, enter the backslash portion of the regular expression as “\\”.

```
Brocade(config-bgp)# ip as-path access-list acl2 deny \\
```

Filtering communities

You can filter routes received from BGP4 neighbors based on community names.

A community is an optional attribute that identifies the route as a member of a user-defined class of routes. Community names are arbitrary values made of two five-digit integers joined by a colon. You determine what the name means when you create the community name as a route attribute. Each string in the community name can be a number from 0 – 65535.

This format allows you to easily classify community names. For example, a common convention used in community naming is to configure the first string as the local AS and the second string as the unique community within that AS. Using this convention, communities 1:10, 1:20, and 1:30 can be easily identified as member communities of AS 1.

The device provides the following methods for filtering on community information.

- Community filters - refer to “[Filtering communities](#)” on page 78.
- Community list ACLs

NOTE

The device cannot actively support community filters and community list ACLs at the same time. Use one method or the other but do not mix methods.

NOTE

Once you define a filter or ACL, the default action for communities that do not match a filter or ACL is **deny**. To change the default action to **permit**, configure the last filter or ACL entry as **permit any any**.

Community filters or ACLs can be referred to by match clauses in a route map.

Defining a community ACL

To configure community ACL 1, enter a command such as the following. This command configures a community ACL that permits routes that contain community 123:2.

NOTE

Refer to “[Matching based on community ACL](#)” on page 85 for information about how to use a community list as a match condition in a route map.

```
Brocade(config)# ip community-list 1 permit 123:2
```

Syntax: [no] ip community-list standard *string* [seq seq-value] deny | permit *community-num*

Syntax: [no] ip community-list extended *string* [seq seq-value] deny | permit *community-num* | *regular-expression*

The *string* parameter specifies the ACL name. (If you enter a number, the CLI interprets the number as a text string.)

The **standard** or **extended** parameter specifies whether you are configuring a standard or extended community ACL. The difference between standard and extended communities is that a standard community ACL does not support regular expressions and an extended one does.

The **seq seq-value** parameter is optional and specifies the sequence number for the community list. You can configure up to 199 entries in a community list. If you do not specify a sequence number, the software numbers the entries in increments of 5, beginning with number 5. The software interprets the entries in a community list in numerical order, beginning with the lowest sequence number.

The **deny | permit** parameters specify the action the software takes if a route community list matches a match clause in this ACL. To configure the community-list match clauses in a route map, use the **match community** command. Refer to [“Matching based on community ACL”](#) on page 85.

The *community-num* parameter specifies the community type or community number. This parameter can have the following values:

- *num:num* – A specific community number
- **internet** – The Internet community
- **no-export** – The community of sub-ASs within a confederation. Routes with this community can be exported to other sub-ASs within the same confederation but cannot be exported outside the confederation to other ASs or otherwise sent to EBGp neighbors.
- **local-as** – The local sub-AS within the confederation. Routes with this community can be advertised only within the local subAS.
- **no-advertise** – Routes with this community cannot be advertised to any other BGP4 devices at all.

The *regular-expression* parameter specifies a regular expression for matching on community names. For information about regular expression syntax, refer to [“Using regular expressions”](#) on page 77. You can specify a regular expression only in an extended community ACL.

To use a community-list filter, use route maps with the **match community** parameter.

Defining and applying IP prefix lists

An IP prefix list specifies a list of networks. When you apply an IP prefix list to a neighbor, the device sends or receives only a route whose destination is in the IP prefix list. The software interprets the prefix lists in order, beginning with the lowest sequence number.

To configure an IP prefix list and apply it to a neighbor, enter commands such as the following.

```
Brocade(config)# ip prefix-list Routesfor20 permit 10.20.0.0/24
```

```
Brocade(config)# router bgp
```

```
Brocade(config-bgp)# neighbor 10.10.10.1 prefix-list Routesfor20 out
```

These commands configure an IP prefix list named Routesfor20, which permits routes to network 10.20.0.0/24. The **neighbor** command configures the device to use IP prefix list Routesfor20 to determine which routes to send to neighbor 10.10.10.1. The device sends routes that go to 10.20.x.x to neighbor 10.10.10.1 because the IP prefix list explicitly permits these routes to be sent to the neighbor.

Syntax: `[no] ip prefix-list name [seq seq-value] [description string] deny | permit network-addr/mask-bits [ge ge-value] [le le-value]`

The *name* parameter specifies the prefix list name. Use this name when applying the prefix list to a neighbor.

The **description string** parameter is a text string describing the prefix list.

The **seq seq-value** parameter is optional and specifies the sequence number of the IP prefix list. If you do not specify a sequence number, the software numbers the entries in increments of 5, beginning with prefix list entry 5. The software interprets the prefix list entries in numerical order, beginning with the lowest sequence number.

The **deny | permit** parameter specifies the action the software takes if a neighbor route is in this prefix list.

The *network-addr/mask-bits* parameters specify the network number and the number of bits in the network mask.

You can specify a range of prefix length for prefixes that are more specific than *network-addr/mask-bits*.

The prefix-list matches only on this network unless you use the **ge** *ge-value* or **le** *le-value* parameters.

- If you specify only **ge** *ge-value*, the mask-length range is from *ge-value* to 32.
- If you specify only **le** *le-value*, the mask-length range is from length to *le-value*.

The *ge-value* or *le-value* you specify must meet the following condition:

$$\text{length} < \text{ge-value} \leq \text{le-value} \leq 32$$

If you do not specify **ge** *ge-value* or **le** *le-value*, the prefix list matches only on the exact network prefix you specified with the *network-addr/mask-bits* parameter.

For the syntax of the **neighbor** command shown in this example, refer to “[Configuring BGP4 neighbors](#)” on page 47 and “[Configuring a BGP4 peer group](#)” on page 60.

Defining neighbor distribute lists

A neighbor distribute list is a list of BGP4 address filters or ACLs that filter the traffic to or from a neighbor.

To configure a distribute list that uses ACL 1, enter a command such as the following.

```
Brocade(config-bgp)# neighbor 10.10.10.1 distribute-list 1 in
```

This command configures the device to use ACL 1 to select the routes that the device will accept from neighbor 10.10.10.1.

Syntax: [no] **neighbor** *ip-addr* **distribute-list** *name-or-num* **in** | **out**

The *ip-addr* parameter specifies the neighbor.

The *name-or-num* parameter specifies the name or number of a standard, extended, or named ACL.

The **in** | **out** parameters specify whether the distribute list applies to inbound or outbound routes:

- **in** – controls the routes the device will accept from the neighbor.
- **out** – controls the routes sent to the neighbor.

Defining route maps

A **route map** is a named set of match conditions and parameter settings that the device can use to modify route attributes and to control redistribution of the routes into other protocols. A route map consists of a sequence of **instances**. If you think of a route map as a table, an instance is a row in that table. The device evaluates a route according to route map instances in ascending numerical order. The route is first compared against instance 1, then against instance 2, and so on. When a match is found, the device stops evaluating the route.

Route maps can contain **match clauses** and **set** statements. Each route map contains a **permit** or **deny** action for routes that match the match clauses:

- If the route map contains a **permit** action, a route that matches a match statement is permitted; otherwise, the route is denied.

- If the route map contains a **deny** action, a route that matches a match statement is denied.
- If a route does not match any match statements in the route map, the route is denied. This is the default action. To change the default action, configure the last match statement in the last instance of the route map to **permit any any**.
- If there is no match statement, the software considers the route to be a match.
- For route maps that contain address filters, AS-path filters, or community filters, if the action specified by a filter conflicts with the action specified by the route map, the route map action takes precedence over the filter action.

If the route map contains set clauses, routes that are permitted by the route map match statements are modified according to the set clauses.

Match statements compare the route against one or more of the following:

- The route BGP4 MED (metric)
- A sequence of AS-path filters
- A sequence of community filters
- A sequence of address filters
- The IP address of the next hop device
- The route tag
- For OSPF routes only, the route type (internal, external type-1, or external type-2)
- An AS-path ACL
- A community ACL
- An IP prefix list
- An IP ACL

For routes that match all of the match statements, the route map set clauses can perform one or more of the following modifications to the route attributes:

- Prepend AS numbers to the front of the route AS-path. By adding AS numbers to the AS-path, you can cause the route to be less preferred when compared to other routes based on the length of the AS-path.
- Add a user-defined tag and an automatically calculated tag to the route.
- Set the community attributes.
- Set the local preference.
- Set the MED (metric).
- Set the IP address of the next-hop device.
- Set the origin to IGP or INCOMPLETE.
- Set the weight.
- Set a BGP4 static network route.

When you configure parameters for redistributing routes into BGP4, one of the optional parameters is a route map. If you specify a route map as one of the redistribution parameters, the device matches the route against the match statements in the route map. If a match is found and if the route map contains set clauses, the device sets the attributes in the route according to the set clauses.

To create a route map, you define instances of the map by a sequence number.

To define a route map, use the procedures in the following sections.

Entering the route map into the software

To add instance 1 of a route map named “GET_ONE” with a permit action, enter the following command.

```
Brocade(config)# route-map GET_ONE permit 1
Brocade(config-route-map GET_ONE)#
```

Syntax: [no] route-map *map-name* permit | deny *num*

As shown in this example, the command prompt changes to the route map level. You can enter the match and set clauses at this level. Refer to [“Specifying the match conditions”](#) on page 84 and [“Setting parameters in the routes”](#) on page 88.

The *map-name* is a string of characters that names the map. Map names can be up to 80 characters in length.

The **permit** | **deny** parameter specifies the action the device will take if a route matches a match statement:

- If you specify **deny**, the device does not advertise or learn the route.
- If you specify **permit**, the device applies the match and set clauses associated with this route map instance.

The *num* parameter specifies the instance of the route map you are defining.

To delete a route map, enter a command such as the following. When you delete a route map, all the permit and deny entries in the route map are deleted.

```
Brocade(config)# no route-map Map1
```

This command deletes a route map named Map1. All entries in the route map are deleted.

To delete a specific instance of a route map without deleting the rest of the route map, enter a command such as the following.

```
Brocade(config)# no route-map Map1 permit 10
```

This command deletes the specified instance from the route map but leaves the other instances of the route map intact.

Specifying the match conditions

Use the following command to define the match conditions for instance 1 of the route map GET_ONE. This instance compares the route updates against BGP4 address filter 11.

```
Brocade(config-routemap GET_ONE)# match address-filters 11
```

Syntax: [no] match
 [as-path *name*]
 [community *acl exact-match*] |
 [extcommunity *acl* |
 [ip address *acl* | prefix-list *string*] |
 [ip route-source *acl* | prefix *name*]
 [metric *num*] |
 [next-hop *address-filter-list*] |
 [route-type internal | external-type1 | external-type2] | [level-1 | level-2 | level-1-2]
 [tag *tag-value*] |
 interface *interface interface interface ..*
 protocol bgp static-network
 protocol bgp external
 protocol bgp internal

The **as-path** *num* parameter specifies an AS-path ACL. You can specify up to five AS-path ACLs. To configure an AS-path ACL, use the **ip as-path access-list** command. Refer to “[Defining an AS-path ACL](#)” on page 76.

The **community** *num* parameter specifies a community ACL.

NOTE

The ACL must already be configured.

The **community** *acl exact-match* parameter matches a route if (and only if) the route community attributes field contains the same community numbers specified in the match statement.

The **extcommunity** *acl* parameter identifies a set of sites and VRFs that may receive routes that are tagged with the configured route target and site of origin.

The **ip address** | **next-hop** *acl-num* | **prefix-list** *string* parameters specify an ACL or IP prefix list. Use this parameter to match based on the destination network or next-hop gateway. To configure an IP ACL for use with this command, use the **ip access-list** command.

The **ip route-source** *acl* | **prefix** *name* parameters match based on the source of a route (the IP address of the neighbor from which the device learned the route).

The **metric** *num* parameter compares the route MED (metric) to the specified value.

The **next-hop** *address-filter-list* parameter compares the IP address of the route next-hop to the specified IP address filters. The filters must already be configured.

The **route-type** **internal** | **external-type1** | **external-type2** parameters apply only to OSPF routes. These parameters compare the route type to the specified value. The **level-1** parameter compares IS-IS routes only with routes within the same area. The **level-2** parameter compares IS-IS routes only with routes in different areas, but within a domain. The **level-1-2** parameter compares IS-IS routes with routes in the same area and in different areas, but within a domain.

The **tag** *tag-value* parameter compares the route tag to the specified tag value.

The **protocol bgp static-network** parameter matches on BGP4 static network routes.

The **protocol bgp external** parameter matches on eBGP (external) routes.

The **protocol bgp internal** parameter matches on iBGP (internal) routes.

The following sections contain examples of how to configure route maps that include match statements that match on ACLs.

Matching based on AS-path ACL

To construct a route map that matches based on AS-path ACL 1, enter the following commands.

```
Brocade(config)# route-map PathMap permit 1
Brocade(config-routemap PathMap)# match as-path 1
```

Syntax: [no] match as-path *string*

The *string* parameter specifies an AS-path ACL and can be a number from 1 – 199. You can specify up to five AS-path ACLs. To configure an AS-path ACL, use the **ip as-path access-list** command. Refer to “[Defining an AS-path ACL](#)” on page 76.

Matching based on community ACL

To construct a route map that matches based on community ACL 1, enter the following commands.

```
Brocade(config)# ip community-list 1 permit 123:2
Brocade(config)# route-map CommMap permit 1
Brocade(config-routemap CommMap)# match community 1
```

Syntax: [no] match community *string*

The *string* parameter specifies a community list ACL. To configure a community list ACL, use the **ip community-list** command. Refer to “[Defining a community ACL](#)” on page 79.

Matching based on excommunity ACL

To construct a route map that matches based on BGP Extended Community attributes in the incoming BGP routes, enter the following commands.

```
Brocade(config)#ip extcommunity-list 1 permit rt 1:3 soo 1:1
Brocade(config)#route-map ExtCommMap permit 20
Brocade(config-routemap ExCommMap)# match extcommunity 1
```

Syntax: [no] match extcommunity *string*

The *string* parameter specifies a community list ACL. To configure a community list ACL, use the **ip community-list** command. Refer to “[Defining a community ACL](#)” on page 79.

Matching based on destination network

You can use the results of an IP ACL or an IP prefix list as the match condition.

To construct a route map that matches based on destination network, enter commands such as the following.

```
Brocade(config)# route-map NetMap permit 1
Brocade(config-routemap NetMap)# match ip address 1
```

Syntax: [no] match ip address *ACL-name-or-num*

Syntax: [no] match ip address prefix-list *name*

The *ACL-name-or-num* parameter with the first command specifies an IP ACL and can be a number from 1 – 199 or the ACL name if it is a named ACL. Multiple ACLs may be added when separated by spaces. To configure an IP ACL, use the **ip access-list** or **access-list** command.

The *name* parameter with the second command specifies an IP prefix list name. To configure an IP prefix list, refer to “[Defining and applying IP prefix lists](#)” on page 80.

Matching based on next-hop device

You can use the results of an IP ACL or an IP prefix list as the match condition.

To construct a route map that matches based on the next-hop device, enter commands such as the following.

```
Brocade(config)# route-map HopMap permit 1
Brocade(config-routemap HopMap)# match ip next-hop 2
```

Syntax: [no] **match ip next-hop** *string*

Syntax: [no] **match ip next-hop prefix-list** *name*

The *string* parameter with the first command specifies an IP ACL and can be a number from 1 – 199 or the ACL name if it is a named ACL. To configure an IP ACL, use the **ip access-list** or **access-list** command.

The *name* parameter with the second command specifies an IP prefix list name. To configure an IP prefix list, refer to “[Defining and applying IP prefix lists](#)” on page 80.

Matching based on the route source

To match a BGP4 route based on its source, use the **match ip route-source** command.

```
Brocade(config)# access-list 10 permit 192.168.6.0 0.0.0.255
Brocade(config)# route-map bgp1 permit 1
Brocade(config-routemap bgp1)# match ip route-source 10
```

The first command configures an IP ACL that matches on routes received from 192.168.6.0/24. The remaining commands configure a route map that matches on all BGP4 routes advertised by the BGP4 neighbors whose addresses match addresses in the IP prefix list. You can add a set clause to change a route attribute in the routes that match. You also can use the route map as input for other commands, such as the **neighbor** and **network** commands and some show commands.

Syntax: [no] **match ip route-source** *acl* | **prefix-list** *name*

The *acl* | *prefix-list name* parameters specify the name or ID of an IP ACL, or an IP prefix list.

Matching on routes containing a specific set of communities

The device can match routes based on the presence of a community name or number in a route. To match based on a set of communities, configure a community ACL that lists the communities, then compare routes against the ACL.

```
Brocade(config)# ip community-list standard std_1 permit 12:34 no-export
Brocade(config)# route-map bgp2 permit 1
Brocade(config-routemap bgp2)# match community std_1 exact-match
```

The first command configures a community ACL that contains community number 12:34 and community name no-export. The remaining commands configure a route map that matches the community attributes field in BGP4 routes against the set of communities in the ACL. A route matches the route map only if the route contains all the communities in the ACL and no other communities.

Syntax: [no] match community *acl* exact-match

The *acl* parameter specifies the name of a community list ACL. You can specify up to five ACLs. Separate the ACL names or IDs with spaces.

```
Brocade(config)# ip community-list standard std_2 permit 23:45 56:78
Brocade(config)# route-map bgp3 permit 1
Brocade(config-routemap bgp3)# match community std_1 std_2 exact-match
```

These commands configure an additional community ACL, *std_2*, that contains community numbers 23:45 and 57:68. Route map *bgp3* compares each BGP4 route against the sets of communities in ACLs *std_1* and *std_2*. A BGP4 route that contains **either but not both** sets of communities matches the route map. For example, a route containing communities 23:45 and 57:68 matches. However, a route containing communities 23:45, 57:68 and 12:34, or communities 23:45, 57:68, 12:34, and no-export does not match. To match, the route communities must be the same as those in exactly one of the community ACLs used by the match community statement.

Matching based on BGP4 static network

The **match** option has been added to the **route-map** command that allows you to match on a BGP4 static network. In the following example, the route-map is configured to match on the BGP4 static network. The device is then configured to advertise to the core BGP4 peer (IP address 192.168.6.0) only the BGP4 static routes and nothing else.

```
Brocade(config)# route-map policygroup3 permit 10
Brocade(config-routemap policygroup3)# match protocol bgp static-network
Brocade(config-routemap policygroup3)# set local-preference 150
Brocade(config-routemap policygroup3)# set community no-export
Brocade(config-routemap policygroup3)# exit
Brocade(config)# router bgp
Brocade(config-bgp)# neighbor 192.168.6.0 route-map out policymap3
```

Syntax: [no] match protocol bgp [external|internal|static-network]

The **match protocol bgp external** option will match the eBGP routes.

The **match protocol bgp internal** option will match the iBGP routes.

The **match protocol bgp static-network** option will match the static-network BGP4 route, applicable at BGP4 outbound policy only.

Matching based on interface

The **match** option has been added to the **route-map** command that distributes any routes that have their next hop out one of the interfaces specified. This feature operates with the following conditions:

- The **match interface** option can only use the interface name (for example ethernet 1/2) and not the IP address as an argument.
- The **match interface** option is only effective during redistribution and does not apply for other route map usage such as: bgp outbound route update policy.

- The **match interface** option can be applied to other types of redistribution such as redistributing OSPF routes to BGP4, or filtering out all OSPF routes that point to a specific interface.

To configure the match-interface option, use the following command.

```
Brocade(config)# route-map test-route permit 99
Brocade(config-routemap test-route)# match interface ethernet 1/1 eth 3/2
Brocade(config-routemap test-route)# exit
```

Syntax: [no] **match interface** *interface interface...*

The *interface* variable specifies the interface that you want to use with the **match interface** command. Up to 5 interfaces of the following types can be specified:

- **ethernet** *slot/port*
- **loopback** *loopback-number*
- **null0**
- **tunnel** *tunnel-ID*
- **ve** *ve-ID*

Setting parameters in the routes

Use the following command to define a set clause that prepends an AS number to the AS path on each route that matches the corresponding match statement.

```
Brocade(config-routemap GET_ONE)# set as-path prepend 65535
```

Syntax: [no] **set**

```
[as-path [prepend as-num,as-num,...]] |
[automatic-tag] |
[comm-list acl delete] |
[community num:num | num | additive | local-as | no-advertise | no-export] |
[dampening [half-life reuse suppress max-suppress-time]]
[ip next hop ip-addr]
[ip next-hop peer-address] |
[local-preference num] |
[metric [+ | -] num | none] |
[metric-type type-1 | type-2] | external
[metric-type internal] |
[next-hop ip-addr] |
[origin igp | incomplete] |
[tag] |
[weight num]
```

The **as-path prepend** *num,num,...* parameter adds the specified AS numbers to the front of the AS-path list for the route. The range of num values is 1 – 65535 for two-byte ASNs and 1 – 4294967295 if AS4s have been enabled.

The **automatic-tag** parameter calculates and sets an automatic tag value for the route.

NOTE

This parameter applies only to routes redistributed into OSPF.

The **comm-list** parameter deletes a community from the community attributes field for a BGP4 route.

The **community** parameter sets the community attribute for the route to the number or well-known type you specify.

The **dampening** [*half-life reuse suppress max-suppress-time*] parameter sets route dampening parameters for the route. The *half-life* parameter specifies the number of minutes after which the route penalty becomes half its value. The *reuse* parameter specifies how low a route penalty must become before the route becomes eligible for use again after being suppressed. The *suppress* parameter specifies how high a route penalty can become before the device suppresses the route. The *max-suppress-time* parameter specifies the maximum number of minutes that a route can be suppressed regardless of how unstable it is. For information and examples, refer to [“Configuring route flap dampening”](#) on page 37.

The **ip next hop ip-addr** parameter sets the next-hop IP address for route that matches a match statement in the route map.

The **ip next-hop peer-address** parameter sets the BGP4 next hop for a route to the neighbor address.

The **local-preference num** parameter sets the local preference for the route. You can set the preference to a value from 0 – 4294967295.

The **metric [+ | -] num | none** parameter sets the MED (metric) value for the route. The default MED value is 0. You can set the preference to a value from 0 – 4294967295.

- **set metric num** – Sets the metric for the route to the number you specify.
- **set metric + num** – Increases route metric by the number you specify.
- **set metric - num** – Decreases route metric by the number you specify.
- **set metric none** – Removes the metric from the route (removes the MED attribute from the BGP4 route).

The **metric-type type-1 | type-2** parameter changes the metric type of a route redistributed into OSPF.

The **metric-type internal** parameter sets the route MED to the same value as the IGP metric of the BGP4 next-hop route. The parameter does this when advertising a BGP4 route to an EBGp neighbor.

The **next-hop ip-addr** parameter sets the IP address of the route next-hop device.

The **origin igp incomplete** parameter sets the route’s origin to IGP or INCOMPLETE.

The **tag** parameter is a keyword that sets the tag to be an AS-path attribute.

NOTE

This parameter applies only to routes redistributed into OSPF.

NOTE

You also can set the tag value using a table map. The table map changes the value only when the device places the route in the IP route table instead of changing the value in the BGP4 route table. Refer to [“Using a table map to set the tag value”](#) on page 70.

The **weight num** parameter sets the weight for the route. The range for the weight value is 0 – 4294967295.

Setting a BGP4 route MED to equal the next-hop route IGP metric

To set a route's MED to the same value as the IGP metric of the BGP4 next-hop route, when advertising the route to a neighbor, enter commands such as the following.

```
Brocade(config)# access-list 1 permit 192.168.9.0 0.0.0.255
Brocade(config)# route-map bgp4 permit 1
Brocade(config-routemap bgp4)# match ip address 1
Brocade(config-routemap bgp4)# set metric-type internal
```

The first command configures an ACL that matches on routes with destination network 192.168.9.0. The remaining commands configure a route map that matches on the destination network in ACL 1, then sets the metric type for those routes to the same value as the IGP metric of the BGP4 next-hop route.

Syntax: [no] set metric-type internal

Setting the next-hop of a BGP4 route

To set the next-hop address of a BGP4 route to a neighbor address, enter commands such as the following.

```
Brocade(config)# route-map bgp5 permit 1
Brocade(config-routemap bgp5)# match ip address 1
Brocade(config-routemap bgp5)# set ip next-hop peer-address
```

These commands configure a route map that matches on routes whose destination network is specified in ACL 1, and sets the next hop in the routes to the neighbor address (inbound filtering) or the local IP address of the BGP4 session (outbound filtering).

Syntax: [no] set ip next-hop peer-address

The value that the software substitutes for **peer-address** depends on whether the route map is used for inbound filtering or outbound filtering:

- When you use the **set ip next-hop peer-address** command in an inbound route map filter, **peer-address** substitutes for the neighbor IP address.
- When you use the **set ip next-hop peer-address** command in an outbound route map filter, **peer-address** substitutes for the local IP address of the BGP4 session.

NOTE

You can use this command for a peer group configuration.

Deleting a community from a BGP4 route

To delete a community from a BGP4 route's community attributes field, enter commands such as the following.

```
Brocade(config)# ip community-list standard std_3 permit 12:99 12:86
Brocade(config)# route-map bgp6 permit 1
Brocade(config-routemap bgp6)# match ip address 1
Brocade(config-routemap bgp6)# set comm-list std_3 delete
```

The first command configures a community ACL containing community numbers 12:99 and 12:86. The remaining commands configure a route map that matches on routes whose destination network is specified in ACL 1, and deletes communities 12:99 and 12:86 from those routes. The route does not need to contain all the specified communities in order for them to be deleted. For example, if a route contains communities 12:86, 33:44, and 66:77, community 12:86 is deleted.

Syntax: `[no] set comm-list acl delete`

The `acl` parameter specifies the name of a community list ACL.

Route-map continue clauses for BGP4 routes

A continuation clause in a route-map directs program flow to skip over route-map instances to another, user-specified instance. If a matched instance contains a continue clause, the system looks for the instance that is identified in the continue clause.

The continue clause in a matching instance initiates another traversal at the instance that you specify in the continue clause. The system records all of the matched instances and, if no deny statements are encountered, proceeds to execute the set clauses of the matched instances.

If the system scans all route map instances but finds no matches, or if a deny condition is encountered, then it does not update the routes. Whenever a matched instance contains a deny parameter, the current traversal terminates, and none of the updates specified in the set clauses of the matched instances in both current and previous traversals are applied to the routes.

This feature supports a more programmable route map configuration and route filtering scheme for BGP4 peering. It can also execute additional instances in a route map after an instance is executed with successful match clauses. You can configure and organize more modular policy definitions to reduce the number of instances that are repeated within the same route map.

This feature currently applies to BGP4 routes only. For protocols other than BGP4, continue statements are ignored.

Specifying route-map continuation clauses

This section describes the configuration of route-map continuation clauses. The following sequence of steps (with referenced items in the screen output in bold) is described:

- The configuration context for a route-map named `test` is entered.
- Two route-map **continue** statements are added to route-map `test`.
- The **show route-map** output displays the modified route-map `test`.
- Subsequent **neighbor** commands identify the route map `test` in the inbound and outbound directions for the neighbor at 10.8.8.3.
- The **show ip bgp config** output shows inbound and outbound route-map `test` for the neighbor at 10.8.8.3.

```

Brocade(config-bgp)# route-map test permit 1
Brocade(config-routemap test)# match metric 10
Brocade(config-routemap test)# set weight 10
Brocade(config-routemap test)# continue 2
Brocade(config-routemap test)# route-map test permit 2
Brocade(config-routemap test)# match tag 10
Brocade(config-routemap test)# set weight 20
Brocade(config-routemap test)# continue 3
Brocade(config-routemap test)# router bgp
Brocade(config-bgp)# exit
Brocade(config-bgp)# show route-map test
route-map test permit 1
  match metric 10
  set weight 10
  continue 2
route-map test permit 2
  match tag 10
  set weight 20
  continue 3
Brocade(config-bgp)# neighbor 10.8.8.3 route-map in test
Brocade(config-bgp)# neighbor 10.8.8.3 route-map out test
Brocade(config-bgp)# show ip bgp config
Current BGP configuration:
router bgp
  local-as 100
  neighbor 10.8.8.3 remote-as 200
  address-family ipv4 unicast
  neighbor 10.8.8.3 route-map in test
  neighbor 10.8.8.3 route-map out test
  exit-address-family
  address-family ipv4 multicast
  exit-address-family
  address-family ipv6 unicast
  exit-address-family
  address-family ipv6 multicast
  exit-address-family
  address-family vpnv4 unicast
  exit-address-family
end of BGP configuration

```

Syntax: [no] route-map *map-name* permit | deny *num*

The **no** form of the command deletes the route map. The *map-name* is a string of up to 80 characters that specifies the map.

The **permit** option means the device applies match and set clauses associated with this route map instance.

The **deny** option means that any match causes the device to ignore the route map.

The *num* parameter specifies the instance of the route map defined in the route-map context that the CLI enters. Routes are compared to the instances in ascending numerical order. For example, a route is compared to instance 1, then instance 2, and so on.

Syntax: [no] continue [*instance-number*]

The **continue** command is entered in the context of a route-map instance. The **[no]** form of the command deletes the continue clause specified by *instance-number*. The instance number range is 0 – 4294967295, and the occurrences of *instance-number* must be in ascending numeric order. If you specify a continue clause without an instance number, it means “continue to the next route-map instance.”

Syntax: **[no] neighbor** *ip-addr* | *peer-group-name* [**route-map in** | **out** *map-name*]

This syntax shows only the **neighbor** parameters that apply to this example. The *ip-addr* or *peer-group-name* identifies the neighbor, and the **[route-map in | out map-name]** option lets you specify a route map and direction to apply to the neighbor.

Dynamic route filter update

Routing protocols use various route filters to control the distribution of routes. Route filters are used to filter routes received from and advertised to other devices. Protocols also use route-map policies to control route redistribution from other routing protocols. In addition, route filter policies are used to select routes to be installed in the routing tables, and used by forwarding engine to forward traffic.

There are currently 6 different types of route filters defined for use in a device:

- Access List (ACL)
- Prefix-List
- BGP4 as-path Access-list
- BGP4 community-list
- BGP4 extended community-list
- Route-map

Not every protocol uses all of these route filters. A protocol will usually use two or three filter types. The filters used by BGP4, OSPF, RIP, IS-IS, RIPng, OSPFv3, MSDP, and MCast protocols are described in [Table 5](#).

TABLE 5 Route filters used by each protocol

Protocol	Route map	Prefix list	Community- list	Extended community- list	As-path access- list	ACL
BGP4	X	X	BGP4 does not use Community- List filters directly. It does use them indirectly through route-map filters that contain Community-List filters.	BGP4 does not directly use Extended Community-List filters, but indirectly uses them through route-map filters that contain Extended Community-List filters.	X	X
OSPF	X	X	X	X	X	X
RIP	X	X	X	X	X	
IS-IS	X	X	X	X	X	
RIPng		X				
OSPFv3	X	X	X	X	X	
MSDP	X					
MCast						X

When a route filter is changed (created, modified or deleted) by a user, the filter change notification will be sent to all relevant protocols, so that protocols can take appropriate actions. For example if BGP4 is using a route-map (say MapX) to control the routes advertised to a particular peer, the change of route-map (MapX) will cause BGP4 to re-evaluate the advertised routes, and make the appropriate advertisements or withdrawals according to the new route-map policy.

A route filter change action can happen in three ways.

1. A new filter is defined (created).

This filter name may be already referenced by an application. The application needs to be notified of the addition of the new filter, and will bind to and use the new filter. In general, if a filter name is referenced by an application, but is not actually defined, the application assumes the default **deny** action for the filter.

2. An existing filter is undefined (removed).

If the deleted filter is already used and referenced by an application, the application will unbind itself from the deleted filter.

3. An existing filter is modified (updated).

If the filter is already used and referenced by an application, the application will be notified.

Protocols are automatically notified when a route filter is created, deleted or modified. In addition, when a protocol is notified of a filter change, appropriate steps are taken to apply the new or updated filter to existing routes.

Commands for dynamic route filter updating

In order to allow multiple filter updates to be processed together by applications, the device waits 10 seconds by default before notifying applications of the filter change. You can force an immediate update notification or modify the time delay from when a change is made to a route filter to when the protocols are notified.

Route filter update delay settings can be configured using the commands shown here.

Setting a time delay for route filter update notification

Set the amount of time that the device waits before sending filter addition, deletion and modification notification to protocols using the following command.

```
Brocade(config)# filter-change-update-delay 100
```

Syntax: [no] **filter-change-update-delay** *delay-time*

The *delay-time* variable specifies the amount of time in seconds that the device waits before sending filter addition, deletion and modification notification to protocols. The valid range is 0 to 600 seconds. If you set the value to 0, filter change notifications will not be automatically sent to protocols. The default value is 10 seconds.

NOTE

The **filter-change-update-delay** command also affects a route map that is being used in a PBR policy.

Performing an immediate route filter update

To force an immediate filter update to the relevant protocols, use the following command.

```
Brocade(config)# clear filter-change-update
```

Syntax: **clear filter-change-update**

This command forces an immediate filter update regardless of the `filter-change-update-delay` setting. It can also be used to simultaneously submit multiple change notifications when the `filter-change-update-delay` is set to 0. When changes are complete, run the **clear filter-change-update** command to update protocols.

NOTE

There may be delays in sending route filter change notifications to applications, and delays in applying the new or updated filter to all existing routes retroactively. However any *new* routes or changes to existing routes will be subject to the new filters.

Filter update delay and BGP

The **filter-changes-update-delay** command applies (remove only) to changes of filters that are already used or referenced by applications. If the content of a filter is changed, the new filter action takes effect after **filter-changes-update-delay** for existing routes. The notification delay also applies to situations where the usage or reference of a filter is changed in BGP.

For example, the following BGP neighbor command sets or changes the route-map filter on a neighbor:

```
Brocade(config-bgp)# neighbor x.x.x.x route-map map_abc out
```

In this case, the router applies the route-map “map_abc” to the peer, and updates the neighbor out-bound routes after a delay.

If the *delay-time* is 0, BGP does not start peer out-bound policy updates immediately.

Use the **clear filter-change-update** or **clear ip bgp neighbor x.x.x.x soft-out** commands to trigger BGP policy updates.

Similarly, the **filter-changes-update-delay** command also applies to the neighbor in-bound policy change.

NOTE

The auto-update action for a BGP peer filter is newly introduced in release 3.5. In previous releases, a user needs to manually issue the **clear ip bgp neighbor x.x.x.x soft out** command to cause the router to apply the new route-map retroactively to existing routes.

The general guideline is to define a policy *first*, then apply it to a BGP peer.

BGP4 policy processing order

The order of application of policies when processing inbound and outbound route advertisements on the device is:

1. Ip prefix-list
2. Outbound Ip prefix-list ORF, if negotiated
3. Outbound extended-community ORF, if negotiated
4. Filter-list (using As-path access-list)
5. Distribute list (using IP ACL - IPv4 unicast only)
6. Route-map

Configuring cooperative BGP4 route filtering

By default, the device performs all filtering of incoming routes locally, on the device itself. You can use cooperative BGP4 route filtering to cause the filtering to be performed by a neighbor before it sends the routes to the device. Cooperative filtering conserves resources by eliminating unnecessary route updates and filter processing. For example, the device can send a deny filter to a neighbor, which the neighbor uses to filter out updates before sending them to the device. The neighbor saves the resources it would otherwise use to generate the route updates, and the device saves the resources it would use to filter out the routes.

When you enable cooperative filtering, the device advertises this capability in its Open message to the neighbor when initiating the neighbor session. The Open message also indicates whether the device is configured to send filters, receive filters, or both, and the types of filters it can send or receive. The device sends the filters as Outbound Route Filters (ORFs) in route refresh messages.

To configure cooperative filtering, perform the following tasks on the device and on the BGP4 neighbor:

- Configure the filter.

NOTE

Cooperative filtering is currently supported only for filters configured using IP prefix lists.

- Apply the filter as an *inbound* filter to the neighbor.
- Enable the cooperative route filtering feature on the device. You can enable the device to send ORFs to the neighbor, to receive ORFs from the neighbor, or both. The neighbor uses the ORFs you send as outbound filters when it sends routes to the device. Likewise, the device uses the ORFs it receives from the neighbor as outbound filters when sending routes to the neighbor.
- Reset the BGP4 neighbor session to send and receive ORFs.
- Perform these steps on the other device.

NOTE

If the device has inbound filters, the filters are still processed even if equivalent filters have been sent as ORFs to the neighbor.

Enabling cooperative filtering

To configure cooperative filtering, enter commands such as the following.

```
Brocade(config)# ip prefix-list Routesfrom10234 deny 10.20.0.0/24
Brocade(config)# ip prefix-list Routesfrom10234 permit 0.0.0.0/0 le 32
Brocade(config)# router bgp
Brocade(config-bgp)# neighbor 10.2.3.4 prefix-list Routesfrom1234 in
Brocade(config-bgp)# neighbor 10.2.3.4 capability orf prefixlist send
```

The first two commands configure statements for the IP prefix list Routesfrom10234. The first command configures a statement that denies routes to 10.20.20./24. The second command configures a statement that permits all other routes. Once you configure an IP prefix list statement, all routes not explicitly permitted by statements in the prefix list are denied.

The next two commands change the CLI to the BGP4 configuration level, then apply the IP prefix list to neighbor 10.2.3.4. The last command enables the device to send the IP prefix list as an ORF to neighbor 10.2.3.4. When the device sends the IP prefix list to the neighbor, the neighbor filters out the 10.20.0.x routes from its updates to the device. This assumes that the neighbor is also configured for cooperative filtering.

Syntax: [no] neighbor *ip-addr* | *peer-group-name* capability orf prefixlist [send | receive]

The *ip-addr* | *peer-group-name* parameters specify the IP address of a neighbor or the name of a peer group of neighbors.

The **send** | **receive** parameters specify the support you are enabling:

- **send** – The device sends the IP prefix lists to the neighbor.
- **receive** – The device accepts filters from the neighbor.

If you do not specify the capability, both capabilities are enabled.

The **prefixlist** parameter specifies the type of filter you want to send to the neighbor.

NOTE

The current release supports cooperative filtering only for filters configured using IP prefix lists.

Sending and receiving ORFs

Cooperative filtering affects neighbor sessions that start after the filtering is enabled, but do not affect sessions that are already established.

To activate cooperative filtering, reset the session with the neighbor. This is required because the cooperative filtering information is exchanged in Open messages during the start of a session.

To place a prefix-list change into effect after activating cooperative filtering, perform a soft reset of the neighbor session. A soft reset does not end the current session, but sends the prefix list to the neighbor in the next route refresh message.

NOTE

Make sure cooperative filtering is enabled on the device and on the neighbor before you send the filters.

To reset a neighbor session and send ORFs to the neighbor, enter a command such as the following.

```
Brocade# clear ip bgp neighbor 10.2.3.4
```

This command resets the BGP4 session with neighbor 10.2.3.4 and sends the ORFs to the neighbor. If the neighbor sends ORFs to the device, the device accepts them if the send capability is enabled.

To perform a soft reset of a neighbor session and send ORFs to the neighbor, enter a command such as the following.

```
Brocade# clear ip bgp neighbor 10.2.3.4 soft in prefix-list
```

Syntax: clear ip bgp neighbor *ip-addr* [soft in prefix-filter | soft in prefix-list]

If you use the **soft in prefix-filter** parameter, the device sends the updated IP prefix list to the neighbor as part of its route refresh message to the neighbor.

NOTE

If the device or the neighbor is not configured for cooperative filtering, the command sends a normal route refresh message.

Displaying cooperative filtering information

You can display the following cooperative filtering information:

- The cooperative filtering configuration on the device.
- The ORFs received from neighbors.

To display the cooperative filtering configuration on the device, enter a command such as the following. The line shown in bold type shows the cooperative filtering status.

```
Brocade# show ip bgp neighbor 10.10.10.1
1  IP Address: 10.10.10.1, AS: 65200 (IBGP), RouterID: 10.10.10.1
   State: ESTABLISHED, Time: 0h0m7s, KeepAliveTime: 60, HoldTime: 180
   RefreshCapability: Received
   CooperativeFilteringCapability: Received
   Messages:   Open      Update  KeepAlive Notification Refresh-Req
     Sent      : 1        0       1          0           1
     Received: 1        0       1          0           1
   Last Update Time: NLRI      Withdraw      NLRI      Withdraw
                   Tx: ---      ---          Rx: ---      ---
   Last Connection Reset Reason:Unknown
   Notification Sent:      Unspecified
   Notification Received: Unspecified
   TCP Connection state: ESTABLISHED
   Byte Sent:   110, Received: 110
   Local host:  10.10.10.2, Local Port: 8138
   Remote host: 10.10.10.1, Remote Port: 179
   ISentSeq:    460  SendNext:    571  TotUnAck:    0
   TotSent:    111  ReTrans:    0    UnAckSeq:    571
   IRcvSeq:    7349 RcvNext:    7460  SendWnd:    16384
   TotalRcv:   111  DupliRcv:  0    RcvWnd:    16384
   SendQue:    0    RcvQue:    0    CngstWnd:   5325
```

Syntax: `show ip bgp neighbor ip-addr`

To display the ORFs received from a neighbor, enter a command such as the following:

```
Brocade# show ip bgp neighbor 10.10.10.1 received prefix-filter
ip prefix-list 10.10.10.1: 4 entries
  seq 5 permit 10.10.0.0/16 ge 18 le 28
  seq 10 permit 10.20.10.0/24
  seq 15 permit 10.0.0.0/8 le 32
  seq 20 permit 10.10.0.0/16 ge 18
```

Syntax: `show ip bgp neighbor ip-addr received prefix-filter`

Configuring route flap dampening

A route flap is a change in the state of a route, from up to down or down to up. A route state change causes changes in the route tables of the devices that support the route. Frequent route state changes can cause Internet instability and add processing overhead to the devices that support the route.

Route flap dampening helps reduce the impact of route flap by changing the way a BGP4 device responds to route state changes. When route flap dampening is configured, the device suppresses unstable routes until the number of route state changes drops enough to meet an acceptable degree of stability. The Brocade implementation of route flap dampening is based on RFC 2439.

Route flap dampening is disabled by default. You can enable the feature globally or on an individual route basis using route maps.

NOTE

The device applies route flap dampening only to routes learned from EBGp neighbors.

The route flap dampening mechanism is based on penalties. When a route exceeds a configured penalty value, the device stops using that route and stops advertising it to other devices. The mechanism also allows route penalties to reduce over time if route stability improves.

The route flap dampening mechanism uses the following parameters:

- **Suppression threshold** – Specifies the penalty value at which the device stops using the route. Each time a route becomes unreachable or is withdrawn by a BGP4 UPDATE from a neighbor, the route receives a penalty of 1000. By default, when a route penalty is greater than 2000, the device stops using the route. By default, if a route goes down more than twice, the device stops using the route. You can set the suppression threshold to a value from 1 – 20000. The default is 2000.
- **Half-life** – Once a route has been assigned a penalty, the penalty decreases exponentially and decreases by half after the half-life period. The default half-life period is 15 minutes. The software reduces route penalties every five seconds. For example, if a route has a penalty of 2000 and does not receive any more penalties during the half-life, the penalty is reduced to 1000 after the half-life expires. You can configure the half-life to be from 1 – 45 minutes. The default is 15 minutes.
- **Reuse threshold** – Specifies the minimum penalty a route can have and still be suppressed by the device. If the route penalty falls below this value, the device un-suppresses the route and can use it again. The software evaluates the dampened routes every ten seconds and un-suppresses the routes that have penalties below the reuse threshold. You can set the reuse threshold to a value from 1 – 20000. The default is 750.
- **Maximum suppression time** – Specifies the maximum number of minutes a route can be suppressed regardless of how unstable the route has been before this time. You can set the parameter to a value from 1 – 20000 minutes. The default is four times the half-life. When the half-life value is set to its default (15 minutes), the maximum suppression time defaults to 60 minutes.

You can configure route flap dampening globally or for individual routes using route maps. If you configure route flap dampening parameters globally and also use route maps, the settings in the route maps override the global values.

Using a route map to configure route flap dampening for specific routes

Route maps enable you to fine tune route flap dampening parameters for individual routes. To configure route flap dampening parameters using route maps, configure BGP4 address filters for each route you want to set the dampening parameters for, then configure route map entries that set the dampening parameters for those routes. The following sections show examples.

Using a route map to configure route flap dampening for a specific neighbor

You can use a route map to configure route flap dampening for a specific neighbor by performing the following tasks:

- Configure an empty route map with no match or set clauses. This route map does not specify particular routes for dampening but does allow you to enable dampening globally when you refer to this route map from within the BGP4 configuration level.
- Configure another route map that explicitly enables dampening. Use a set clause within the route map to enable dampening. When you associate this route map with a specific neighbor, the route map enables dampening for all routes associated with the neighbor. You also can use match clauses within the route map to selectively perform dampening on some routes from the neighbor.

NOTE

You still need to configure the first route map to enable dampening globally. The second route map does not enable dampening by itself; it just applies dampening to a neighbor.

- Apply the route map to the neighbor.

To enable route flap dampening for a specific BGP4 neighbor, enter commands such as the following.

```
Brocade(config)# route-map DAMPENING_MAP_ENABLE permit 1
Brocade(config-routemap DAMPENING_MAP_ENABLE)# exit
Brocade(config)# route-map DAMPENING_MAP_NEIGHBOR_A permit 1
Brocade(config-routemap DAMPENING_MAP_NEIGHBOR_A)# set dampening
Brocade(config-routemap DAMPENING_MAP_NEIGHBOR_A)# exit
Brocade(config)# router bgp
Brocade(config-bgp)# dampening route-map DAMPENING_MAP_ENABLE
Brocade(config-bgp)# neighbor 10.10.10.1 route-map in DAMPENING_MAP_NEIGHBOR_A
```

In this example, the first command globally enables route flap dampening. This route map does not contain any match or set clauses. At the BGP4 configuration level, the **dampening route-map** command refers to the DAMPENING_MAP_ENABLE route map created by the first command, thus enabling dampening globally.

The third and fourth commands configure a second route map that explicitly enables dampening. Notice that the route map does not contain a match clause. The route map implicitly applies to all routes. Since the route map will be applied to a neighbor at the BGP4 configuration level, the route map will apply to all routes associated with the neighbor.

Although the second route map enables dampening, the first route map is still required. The second route map enables dampening for the neighbors to which the route map is applied. However, unless dampening is already enabled globally by the first route map, the second route map has no effect.

The last two commands apply the route maps. The **dampening route-map** command applies the first route map, which enables dampening globally. The **neighbor** command applies the second route map to neighbor 10.10.10.1. Since the second route map does not contain match clauses for specific routes, the route map enables dampening for all routes received from the neighbor.

Removing route dampening from a route

You can un-suppress routes by removing route flap dampening from the routes. The device allows you to un-suppress all routes at once or un-suppress individual routes.

To un-suppress all the suppressed routes, enter the following command at the Privileged EXEC level of the CLI.

```
Brocade# clear ip bgp dampening
```

Syntax: `clear ip bgp dampening [ip-addr ip-mask]`

The *ip-addr* parameter specifies a particular network.

The *ip-mask* parameter specifies the network's mask.

To un-suppress a specific route, enter a command such as the following.

```
Brocade# clear ip bgp dampening 10.157.22.0 255.255.255.0
This command un-suppresses only the routes for network 10.157.22.0/24.
```

Displaying and clearing route flap dampening statistics

The software provides many options for displaying and clearing route flap statistics.

Displaying route flap dampening statistics

To display route dampening statistics or all the dampened routes, enter the following command at any CLI level.

```
Brocade# show ip bgp flap-statistics
Total number of flapping routes: 414
      Status Code  >:best d:damped h:history *:valid
      Network      From      Flaps Since      Reuse      Path
h> 10.50.206.0/23  10.90.213.77  1      0 :0 :13 0 :0 :0  65001 4355 1 701
h> 10.255.192.0/20 10.90.213.77  1      0 :0 :13 0 :0 :0  65001 4355 1 7018
h> 10.252.165.0/24 10.90.213.77  1      0 :0 :13 0 :0 :0  65001 4355 1 7018
h> 10.50.208.0/23  10.90.213.77  1      0 :0 :13 0 :0 :0  65001 4355 1 701
h> 10.33.0.0/16     10.90.213.77  1      0 :0 :13 0 :0 :0  65001 4355 1 701
*> 10.17.220.0/24  10.90.213.77  1      0 :1 :4  0 :0 :0  65001 4355 701 62
```

Syntax: `show ip bgp flap-statistics [regular-expression regular-expression | address mask [longer-prefixes] | neighbor ip-addr] as-path-filter num`

The **regular-expression** *regular-expression* parameter is a regular expression. Regular expressions are the same ones supported for BGP4 AS-path filters. Refer to [“Using regular expressions”](#) on page 77.

The *address mask* parameters specify a particular route. If you also use the optional **longer-prefixes** parameter, all statistics for routes that match the specified route or have a longer prefix than the specified route are displayed. For example, if you specify **10.157.0.0 longer**, all routes with the prefix 10.157. or longer (such as 10.157.22.) are displayed.

The **neighbor** *ip-addr* parameter displays route flap dampening statistics only for routes learned from the specified neighbor. You also can display route flap statistics for routes learned from a neighbor by entering the following command: **show ip bgp neighbor ip-addr flap-statistics**.

The **as-path-filter** *num* parameter specifies one or more filters. Only the routes that have been dampened and that match the specified filter or filters are displayed.

This display shows the following information.

TABLE 6 Route flap dampening statistics

This field...	Displays...
Total number of flapping routes	The total number of routes in the BGP4 route table that have changed state and have been marked as flapping routes.
Status code	Indicates the dampening status of the route, which can be one of the following: <ul style="list-style-type: none"> • > – This is the best route among those in the BGP4 route table to the route destination. • d – This route is currently dampened, and unusable. • h – The route has a history of flapping and is unreachable now. • * – The route has a history of flapping but is currently usable.
Network	The destination network of the route.
From	The neighbor that sent the route to the device.
Flaps	The number of flaps the route has experienced.
Since	The amount of time since the first flap of this route.
Reuse	The amount of time remaining until this route will be un-suppressed and can be used again.
Path	Shows the AS-path information for the route.

You also can display all dampened routes by entering the **show ip bgp dampened-paths** command.

Clearing route flap dampening statistics

Clearing the dampening statistics for a route does not change the dampening status of the route. To clear all the route dampening statistics, enter the following command at any level of the CLI.

```
Brocade# clear ip bgp flap-statistics
```

Syntax: **clear ip bgp flap-statistics** [**regular-expression** *regular-expression* | *address mask* | **neighbor** *ip-addr*]

The parameters are the same as those for the **show ip bgp flap-statistics** command (except the **longer-prefixes** option is not supported). Refer to “[Configuring route flap dampening](#)” on page 37.

NOTE

The **clear ip bgp dampening** command not only clears statistics but also un-suppresses the routes. Refer to “[Configuring route flap dampening](#)” on page 37.

Generating traps for BGP4

You can enable and disable SNMP traps for BGP4. BGP4 traps are enabled by default.

To enable BGP4 traps after they have been disabled, enter the following command.

```
Brocade(config)# snmp-server enable traps bgp
```

Syntax: [**no**] **snmp-server enable traps bgp**

Use the **no** form of the command to disable BGP4 traps.

Updating route information and resetting a neighbor session

The following sections describe how to update route information with a neighbor, reset a session with a neighbor, and close a session with a neighbor.

Any change to a policy (ACL, route map, and so on) is automatically applied to outbound routes that are learned from a BGP4 neighbor or peer group after the policy change occurs. However, you must reset the neighbor to update existing outbound routes.

Any change to a policy is automatically applied to inbound routes that are learned after the policy change occurs. However, to apply the changes to existing inbound routes (those inbound routes that were learned before the policy change), you must reset the neighbors to update the routes using one of the following methods:

- Request the complete BGP4 route table from the neighbor or peer group. You can use this method if the neighbor supports the refresh capability (RFCs 2842 and 2858). Most devices today support this capability.
- Clear (reset) the session with the neighbor or peer group. This is the only method you can use if soft reconfiguration is enabled for the neighbor.

You also can clear and reset the BGP4 routes that have been installed in the IP route table. Refer to [“Clearing and resetting BGP4 routes in the IP route table”](#) on page 109.

Using soft reconfiguration

The **soft reconfiguration** feature applies policy changes without resetting the BGP4 session. Soft reconfiguration does not request the neighbor or group to send the entire BGP4 table, nor does the feature reset the session with the neighbor or group. Instead, soft reconfiguration stores all the route updates received from the neighbor or group. When you request a soft reset of inbound routes, the software performs route selection by comparing the policies against the stored route updates, instead of requesting the neighbor BGP4 route table or resetting the session with the neighbor.

When you enable the soft reconfiguration feature, it sends a refresh message to the neighbor or group if the neighbor or group supports dynamic refresh. Otherwise, the feature resets the neighbor session. This step is required to ensure that the soft reconfiguration feature has a complete set of updates to use, and occurs only once, when you enable the feature. The feature accumulates all the route updates from the neighbor, eliminating the need for additional refreshes or resets when you change policies in the future.

To use soft reconfiguration:

- Enable the feature.
- Make the policy changes.
- Apply the changes by requesting a soft reset of the inbound updates from the neighbor or group.

Enabling soft reconfiguration

To configure a neighbor for soft reconfiguration, enter a command such as the following.

```
Brocade(config-bgp)# neighbor 10.10.200.102 soft-reconfiguration inbound
```

This command enables soft reconfiguration for updates received from 10.10.200.102. The software dynamically resets the session with the neighbor, then retains all route updates from the neighbor following the reset.

Syntax: `[no] neighbor ip-addr | peer-group-name soft-reconfiguration inbound`

NOTE

The syntax related to soft reconfiguration is shown. For complete command syntax, refer to [“Configuring BGP4 neighbors”](#) on page 47 and [“Configuring a BGP4 peer group”](#) on page 60.

Placing a policy change into effect

To place policy changes into effect, enter a command such as the following.

```
Brocade(config-bgp)# clear ip bgp neighbor 10.10.200.102 soft in
```

This command updates the routes by comparing the route policies against the route updates that the device has stored. The command does not request additional updates from the neighbor or otherwise affect the session with the neighbor.

Syntax: `clear ip bgp neighbor ip-addr | peer-group-name soft in`

NOTE

If you do not specify `in`, the command applies to both inbound and outbound updates.

NOTE

The syntax related to soft reconfiguration is shown. For complete command syntax, refer to [“Dynamically refreshing routes”](#) on page 106.

Displaying the filtered routes received from the neighbor or peer group

When you enable soft reconfiguration, the device saves all updates received from the specified neighbor or peer group, including updates that contain routes that are filtered out by the BGP4 route policies in effect on the device. To display the routes that have been filtered out, enter the following command at any level of the CLI.

```
Brocade# show ip bgp filtered-routes
Searching for matching routes, use ^C to quit...
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
      E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
Prefix      Next Hop      MED      LocPrf      Weight Status
1      10.3.0.0/8      192.168.4.106      100      0      EF
      AS_PATH: 65001 4355 701 80
2      10.4.0.0/8      192.168.4.106      100      0      EF
      AS_PATH: 65001 4355 1
3      10.60.212.0/22      192.168.4.106      100      0      EF
      AS_PATH: 65001 4355 701 1 189
```

The routes displayed are the routes that were filtered out by the BGP4 policies on the device. The device did not place the routes in the BGP4 route table, but did keep the updates. If a policy change causes these routes to be permitted, the device does not need to request the route information from the neighbor, but instead uses the information in the updates.

Syntax: `show ip bgp filtered-routes [ip-addr] | [as-path-access-list num] | [detail] | [prefix-list string] [longer-prefixes]`

The `ip-addr` parameter specifies the IP address of the destination network.

The `as-path-access-list num` parameter specifies an AS-path ACL. Only the routes permitted by the AS-path ACL are displayed.

The **detail** parameter displays detailed information for the routes. (The example shows summary information.) You can specify any of the other options after **detail** to further refine the display request.

The **prefix-list string** parameter specifies an IP prefix list. Only routes permitted by the prefix list are displayed.

If you also use the optional **longer-prefixes** parameter, then all statistics for routes that match the specified route or have a longer prefix than the specified route are displayed. For example, if you specify `10.157.0.0 longer`, then all routes with the prefix `10.157` or that have a longer prefix (such as `10.157.22`) are displayed.

NOTE

The syntax for displaying filtered routes is shown. For complete command syntax, refer to [“Displaying the BGP4 route table”](#) on page 132.

Displaying all the routes received from the neighbor

To display all the route information received in route updates from a neighbor since you enabled soft reconfiguration, enter a command such as the following at any level of the CLI.

```
Brocade# show ip bgp neighbor 192.168.4.106 routes
      There are 97345 received routes from neighbor 192.168.4.106
Searching for matching routes, use ^C to quit...
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
      E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
Prefix          Next Hop          MED          LocPrf        Weight Status
1      10.3.0.0/8          192.168.4.106
      AS_PATH: 65001 4355 701 80
2      10.4.0.0/8          192.168.4.106
      AS_PATH: 65001 4355 1
3      10.60.212.0/22     192.168.4.106
      AS_PATH: 65001 4355 701 1 189
4      10.6.0.0/8          192.168.4.106
      AS_PATH: 65001 4355 701 1 189
```

Syntax: `show ip bgp neighbors ip-addr received-routes [detail]`

The **detail** parameter displays detailed information for the routes. This example shows summary information.

NOTE

The syntax for displaying received routes is shown. For complete command syntax, refer to [“Displaying BGP4 neighbor information”](#) on page 122.

Dynamically requesting a route refresh from a BGP4 neighbor

You can easily apply changes to filters that control BGP4 routes received from or advertised to a neighbor, without resetting the BGP4 session between the device and the neighbor. For example, if you add, change, or remove a BGP4 IP prefix list that denies specific routes received from a neighbor, you can apply the filter change by requesting a route refresh from the neighbor. If the neighbor also supports dynamic route refreshes, the neighbor resends its Adj-RIB-Out, its table of BGP4 routes. Using the route refresh feature, you do not need to reset the session with the neighbor.

The route refresh feature is based on the following specifications:

- RFC 2842. This RFC specifies the Capability Advertisement, which a BGP4 device uses to dynamically negotiate a capability with a neighbor.
- RFC 2858 for Multi-protocol Extension.
- RFC 2918, which describes the dynamic route refresh capability

The dynamic route refresh capability is enabled by default and cannot be disabled. When the device sends a BGP4 OPEN message to a neighbor, the device includes a Capability Advertisement to inform the neighbor that the device supports dynamic route refresh.

NOTE

The option for dynamically refreshing routes received from a neighbor requires the neighbor to support dynamic route refresh. If the neighbor does not support this feature, the option does not take effect and the software displays an error message. The option for dynamically re-advertising routes to a neighbor does not require the neighbor to support dynamic route refresh.

Dynamically refreshing routes

The following sections describe how to refresh BGP4 routes dynamically to put new or changed filters into effect.

To request a dynamic refresh of all routes from a neighbor, enter a command such as the following.

```
Brocade(config-bgp)# clear ip bgp neighbor 192.168.1.170 soft in
```

This command asks the neighbor to send its BGP4 table (Adj-RIB-Out) again. The device applies its filters to the incoming routes and adds, modifies, or removes BGP4 routes as necessary.

Syntax: `clear ip bgp neighbor all | ip-addr | peer-group-name | as-num [soft-outbound | soft [in | out]]`

The **all** | *ip-addr* | *peer-group-name* | *as-num* parameters specify the neighbor. The *ip-addr* parameter specifies a neighbor by its IP interface with the device. The *peer-group-name* specifies all neighbors in a specific peer group. The *as-num* parameter specifies all neighbors within the specified AS. The **all** parameter specifies all neighbors.

The **soft-outbound** parameter updates all outbound routes by applying the new or changed filters, but sends only the existing routes affected by the new or changed filters to the neighbor.

The **soft [in | out]** parameter specifies whether you want to refresh the routes received from the neighbor or sent to the neighbor:

- **soft in** does one of the following:
 - If you enabled soft reconfiguration for the neighbor or peer group, **soft in** updates the routes by comparing the route policies against the route updates that the device has stored. Soft reconfiguration does not request additional updates from the neighbor or otherwise affect the session with the neighbor. Refer to [“Using soft reconfiguration”](#) on page 103.
 - If you did not enable soft reconfiguration, **soft in** requests the entire BGP4 route table for the neighbor (Adj-RIB-Out), then applies the filters to add, change, or exclude routes.
 - If a neighbor does not support dynamic refresh, **soft in** resets the neighbor session.
- **soft out** updates all outbound routes, then sends the entire BGP4 router table for the device (Adj-RIB-Out) to the neighbor, after changing or excluding the routes affected by the filters.

If you do not specify **in** or **out**, the device performs both options.

NOTE

The **soft-outbound** parameter updates all outbound routes by applying the new or changed filters, but sends only the existing routes affected by the new or changed filters to the neighbor. The **soft out** parameter updates all outbound routes, then sends the entire BGP4 route table for the device (Adj-RIB-Out) to the neighbor, after changing or excluding the routes affected by the filters. Use **soft-outbound** if only the outbound policy is changed.

To dynamically resend all the device BGP4 routes to a neighbor, enter a command such as the following.

```
Brocade(config-bgp)# clear ip bgp neighbor 192.168.1.170 soft out
```

This command applies filters for outgoing routes to the device BGP4 route table (Adj-RIB-Out), changes or excludes routes accordingly, then sends the resulting Adj-RIB-Out to the neighbor.

NOTE

The device does not automatically update outbound routes using a new or changed outbound policy or filter when a session with the neighbor goes up or down. Instead, the device applies a new or changed policy or filter when a route is placed in the outbound queue (Adj-RIB-Out).

To place a new or changed outbound policy or filter into effect, you must enter a **clear ip bgp neighbor** command regardless of whether the neighbor session is up or down. You can enter the command without optional parameters or with the **soft out** or **soft-outbound** option. Either way, you must specify a parameter for the neighbor (*ip-addr*, *as-num*, *peer-group-name*, or **all**).

Displaying dynamic refresh information

You can use the **show ip bgp neighbors** command to display information for dynamic refresh requests. For each neighbor, the display lists the number of dynamic refresh requests the device has sent to or received from the neighbor and indicates whether the device received confirmation from the neighbor that the neighbor supports dynamic route refresh.

The RefreshCapability field indicates whether this device has received confirmation from the neighbor that the neighbor supports the dynamic refresh capability. The statistics in the Message Sent and Message Received rows under Refresh-Req indicate how many dynamic refreshes have been sent to and received from the neighbor. The statistic is cumulative across sessions.

```

Brocade(config-bgp)# show ip bgp neighbor 10.4.0.2
1  IP Address: 10.4.0.2, AS: 5 (EBGP), RouterID: 100.0.0.1
   Description: neighbor 10.4.0.2
   State: ESTABLISHED, Time: 0h1m0s, KeepAliveTime: 0, HoldTime: 0
   PeerGroup: pg1
   Mutihop-EBGP: yes, ttl: 1
   RouteReflectorClient: yes
   SendCommunity: yes
   NextHopSelf: yes
   DefaultOriginate: yes (default sent)
   MaximumPrefixLimit: 90000
   RemovePrivateAs: : yes
   RefreshCapability: Received
Route Filter Policies:
  Distribute-list: (out) 20
  Filter-list: (in) 30
  Prefix-list: (in) pf1
  Route-map: (in) setnp1 (out) setnp2
Messages:      Open      Update  KeepAlive  Notification  Refresh-Req
  Sent       : 1         1         1           0              0
  Received: 1         8         1           0              0
Last Update Time: NLRI      Withdraw      NLRI      Withdraw
                  Tx: 0h0m59s  ---          Rx: 0h0m59s  ---
Last Connection Reset Reason:Unknown
Notification Sent:      Unspecified
Notification Received: Unspecified
TCP Connection state: ESTABLISHED
Byte Sent:  115, Received: 492
Local host: 10.4.0.1, Local Port: 179
Remote host: 10.4.0.2, Remote Port: 8053
ISentSeq:  52837276  SendNext:  52837392  TotUnAck:      0
TotSent:    116  ReTrans:    0  UnAckSeq:  52837392
IRcvSeq:  2155052043  RcvNext:  2155052536  SendWnd:    16384
TotalRcv:    493  DupliRcv:    0  RcvWnd:    16384
SendQue:      0  RcvQue:      0  CngstWnd:   1460

```

Closing or resetting a neighbor session

You can close a neighbor session or resend route updates to a neighbor.

If you make changes to filters or route maps and the neighbor does not support dynamic route refresh, use the following methods to ensure that neighbors contain only the routes you want them to contain:

- If you close a neighbor session, the device and the neighbor clear all the routes they learned from each other. When the device and neighbor establish a new BGP4 session, they exchange route tables again. Use this method if you want the device to relearn routes from the neighbor and resend its own route table to the neighbor.
- If you use the soft-outbound option, the device compiles a list of all the routes it would normally send to the neighbor at the beginning of a session. However, before sending the updates, the device also applies the filters and route maps you have configured to the list of routes. If the filters or route maps result in changes to the list of routes, the device sends updates to advertise, change, or even withdraw routes on the neighbor as needed. This ensures that the neighbor receives only the routes you want it to contain. Even if the neighbor already contains a route learned from the device that you later decided to filter out, using the soft-outbound option removes that route from the neighbor.

You can specify a single neighbor or a peer group.

To close a neighbor session and thus flush all the routes exchanged by the device and the neighbor, enter the following command.

```
Brocade# clear ip bgp neighbor all
```

Syntax: `clear ip bgp neighbor all | ip-addr | peer-group-name | as-num [soft-outbound | soft [in | out]]`

The `all | ip-addr | peer-group-name | as-num` parameters specify the neighbor. The `ip-addr` parameter specifies a neighbor by its IP interface with the device. The `peer-group-name` specifies all neighbors in a specific peer group. The `as-num` parameter specifies all neighbors within an AS and has a range of 1 – 4294967295. The `all` keyword specifies all neighbors.

To resend routes to a neighbor without closing the neighbor session, enter a command such as the following.

```
Brocade# clear ip bgp neighbor 10.0.0.1 soft out
```

Clearing and resetting BGP4 routes in the IP route table

To clear BGP4 routes from the IP route table and reset the routes, enter a command such as the following.

```
Brocade# clear ip bgp routes
```

Syntax: `clear ip bgp routes [ip-addr/prefix-length]`

Clearing traffic counters

You can clear the counters (reset them to 0) for BGP4 messages.

To clear the BGP4 message counter for all neighbors, enter the following command.

```
Brocade# clear ip bgp traffic
```

Syntax: `clear ip bgp traffic`

To clear the BGP4 message counter for a specific neighbor, enter a command such as the following.

```
Brocade# clear ip bgp neighbor 10.0.0.1 traffic
```

To clear the BGP4 message counter for all neighbors within a peer group, enter a command such as the following.

```
Brocade# clear ip bgp neighbor PeerGroup1 traffic
```

Syntax: `clear ip bgp neighbor all | ip-addr | peer-group-name | as-num traffic`

The `all | ip-addr | peer-group-name | as-num` parameters specify the neighbor. The `ip-addr` parameter specifies a neighbor by its IP interface with the device. The `peer-group-name` specifies all neighbors in a specific peer group. The `as-num` parameter specifies all neighbors within the specified AS. The `all` parameter specifies all neighbors.

Clearing route flap dampening statistics

Clearing the dampening statistics for a route does not change the dampening status of the route.

To clear all the route dampening statistics, enter the following command at any level of the CLI.

```
Brocade# clear ip bgp flap-statistics
```

Syntax: `clear ip bgp flap-statistics` [**regular-expression** *regular-expression* | *address mask* | **neighbor** *ip-addr*]

The parameters are the same as those for the `show ip bgp flap-statistics` command (except the **longer-prefixes** option is not supported). Refer to “[Displaying route flap dampening statistics](#)” on page 141.

NOTE

The `clear ip bgp dampening` command not only clears statistics but also un-suppresses the routes. Refer to “[Displaying route flap dampening statistics](#)” on page 141.

Removing route flap dampening

You can un-suppress routes by removing route flap dampening from the routes. The device allows you to un-suppress all routes at once or un-suppress individual routes.

To un-suppress all the suppressed routes, enter the following command at the Privileged EXEC level of the CLI.

```
Brocade# clear ip bgp dampening
```

Syntax: `clear ip bgp dampening` [*ip-addr ip-mask*]

The *ip-addr* parameter specifies a particular network.

The *ip-mask* parameter specifies the network’s mask.

To un-suppress a specific route, enter a command such as the following:

```
Brocade# clear ip bgp dampening 10.157.22.0 255.255.255.0
```

This command un-suppresses only the routes for network 10.157.22.0/24.

Clearing diagnostic buffers

The device stores the following BGP4 diagnostic information in buffers:

- The first 400 bytes of the last packet received that contained an error
- The last NOTIFICATION message either sent or received by the device

To display these buffers, use options with the `show ip bgp neighbors` command. Refer to “[Displaying BGP4 neighbor information](#)” on page 122.

This information can be useful if you are working with Brocade Technical Support to resolve a problem. The buffers do not identify the system time when the data was written to the buffer. If you want to ensure that diagnostic data in a buffer is recent, you can clear the buffers. You can clear the buffers for a specific neighbor or for all neighbors.

If you clear the buffer containing the first 400 bytes of the last packet that contained errors, all the bytes are changed to zeros. The Last Connection Reset Reason field of the BGP4 neighbor table also is cleared.

If you clear the buffer containing the last NOTIFICATION message sent or received, the buffer contains no data.

You can clear the buffers for all neighbors, for an individual neighbor, or for all the neighbors within a specific peer group.

To clear these buffers for neighbor 10.0.0.1, enter the following commands.

```
Brocade# clear ip bgp neighbor 10.0.0.1 last-packet-with-error
Brocade# clear ip bgp neighbor 10.0.0.1 notification-errors
```

Syntax: `clear ip bgp neighbor all | ip-addr | peer-group-name | as-num last-packet-with-error | notification-errors`

The `all | ip-addr | peer-group-name | as-num` parameters specify the neighbor. The `ip-addr` parameter specifies a neighbor by its IP interface with the device. The `peer-group-name` specifies all neighbors in a specific peer group. The `as-num` parameter specifies all neighbors within the specified AS. The `all` parameter specifies all neighbors.

Configuring BGP4 Restart

BGP4 Restart can be configured for a global routing instance or for a specified Virtual Routing and Forwarding (VRF) instance. The following sections describe how to enable the BGP4 Restart feature.

Configuring BGP4 restart for the global routing instance

Use the following command to enable the BGP4 restart feature globally on a device.

```
Brocade(config)# router bgp
Brocade(config-bgp)# graceful-restart
```

Syntax: `[no] graceful-restart`

Configuring BGP4 Restart for a VRF

Use the following command to enable the BGP4 restart feature for a specified VRF.

```
Brocade(config)# router bgp
Brocade(config-bgp)# address-family ipv4 unicast vrf blue
Brocade(config-bgp-ipv4u-vrf)# graceful-restart
```

Syntax: `[no] graceful-restart`

Configuring timers for BGP4 Restart (optional)

You can optionally configure the following timers to change their values from the default values:

- Restart Timer
- Stale Routes Timer
- Purge Timer

The `seconds` variable sets the maximum restart wait time advertised to neighbors. Possible values are 1– 3600 seconds. The default value is 120 seconds.

Configuring the restart timer for BGP4 Restart

Use the following command to specify the maximum amount of time a device will maintain routes from and forward traffic to a restarting device.

```
Brocade(config-bgp)# graceful-restart restart-time 150
```

Syntax: [no] **graceful-restart restart-time** *seconds*

The *seconds* variable sets the maximum restart wait time advertised to neighbors. Possible values are 1 - 3600 seconds. The default value is 120 seconds.

Configuring BGP4 Restart stale routes timer

Use the following command to specify the maximum amount of time a helper device will wait for an end-of-RIB message from a peer before deleting routes from that peer.

```
Brocade(config-bgp)# graceful-restart stale-routes-time 120
```

Syntax: [no] **graceful-restart stale-routes-time** *seconds*

The *seconds* variable sets the maximum time before a helper device cleans up stale routes. Possible values are 1 - 3600 seconds. The default value is 360 seconds.

Configuring BGP4 Restart purge timer

Use the following command to specify the maximum amount of time a device will maintain stale routes in its routing table before purging them.

```
Brocade(config-bgp)# graceful-restart purge-time 900
```

Syntax: [no] **graceful-restart purge-time** *seconds*

The *seconds* variable sets the maximum time before a restarting device cleans up stale routes. Possible values are 1 - 3600 seconds. The default value is 600 seconds.

For information about displaying BGP4 restart neighbor information, refer to [“Displaying BGP4 restart neighbor information”](#) on page 143.

Configuring BGP4 null0 routing

BGP4 null0 routing is described in [“BGP4 null0 routing”](#) on page 13. The following example configures a null0 routing application to stop denial of service attacks from remote hosts on the Internet.

Configuration steps

1. Select a device, for example, device 6, to distribute null0 routes throughout the BGP4 network.
2. Configure a route-map to match a particular tag (50) and set the next-hop address to an unused network address (192.168.0.1).
3. Set the local-preference to a value higher than any possible internal or external local-preference (50).
4. Complete the route map by setting origin to IGP.
5. On device 6, redistribute the static routes into BGP4, using route-map *route-map-name* (redistribute static route-map block user).
6. On device 1, (the device facing the Internet), configure a null0 route matching the next-hop address in the route-map (ip route 192.168.0.1/32 null0).
7. Repeat step 3 for all devices interfacing with the Internet (edge corporate devices). In this case, device 2 has the same null0 route as device 1.

- On device 6, configure the network prefixes associated with the traffic you want to drop. The static route IP address references a destination address. You must point the static route to the egress port, (for example, Ethernet 3/7), and specify the tag 50, matching the route-map configuration.

Configuration examples

Device 6

The following configuration defines specific prefixes to filter:

```
Brocade(config)# ip route 10.0.0.40/29 ethernet 3/7 tag 50
Brocade(config)# ip route 10.0.0.192/27 ethernet 3/7 tag 50
Brocade(config)# ip route 10.014.0/23 ethernet 3/7 tag 50
```

The following configuration redistributes routes into BGP4.

```
Brocade(config)# router bgp
Brocade(config-bgp-router)# local-as 100
Brocade(config-bgp-router)# neighbor <router1_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router2_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router3_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router4_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router5_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router7_int_ip address> remote-as 100
Brocade(config-bgp-router)# redistribute static route-map blockuser
Brocade(config-bgp-router)# exit
```

The following configuration defines the specific next hop address and sets the local preference to preferred.

```
Brocade(config)# route-map blockuser permit 10
Brocade(config-routemap blockuser)# match tag 50
Brocade(config-routemap blockuser)# set ip next-hop 192.168.0.1
Brocade(config-routemap blockuser)# set local-preference 1000000
Brocade(config-routemap blockuser)# set origin igp
Brocade(config-routemap blockuser)# exit
```

NOTE

A match tag can take up to 16 tags. During the execution of a route-map, a match on any tag value in the list is considered a successful match.

Device 1

The following configuration defines the null0 route to the specific next hop address. The next hop address 192.168.0.1 points to 10.178.1.101, which gets blocked.

```
Brocade(config)# ip route 192.168.0.1/32 null0
Brocade(config)# router bgp
local-as 100
Brocade(config-bgp-router)# neighbor <router2_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router3_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router4_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router5_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router6_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router7_int_ip address> remote-as 100
```

Device 2

The following configuration defines a null0 route to the specific next hop address. The next hop address 192.168.0.1 points to 10.178.1.101, which gets blocked.

Filtering

```
Brocade(config)# ip route 192.168.0.1/32 null0
Brocade(config)# router bgp
Brocade(config-bgp-router)# local-as 100
Brocade(config-bgp-router)# neighbor <router1_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router3_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router4_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router5_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router6_int_ip address> remote-as 100
Brocade(config-bgp-router)# neighbor <router7_int_ip address> remote-as 100
```

Show commands

After configuring the null0 application, you can display the output using **show** commands.

Device 6

Show ip route static output for device 6.

```
Brocade# show ip route static
Type Codes - B:BGp D:Connected S:Static R:RIP O:OSPF; Cost - Dist/Metric
      Destination          Gateway          Port          Cost          Type
1      10.0.0.40/29         DIRECT          eth 3/7        1/1           S
2      10.0.0.192/27       DIRECT          eth 3/7        1/1           S
3      10.0.14.0/23        DIRECT          eth 3/7        1/1           S
Brocade#
```

Device 1 and 2

Show ip route static output for device 1 and device 2.

```
Brocade# show ip route static
Type Codes - B:BGp D:Connected S:Static R:RIP O:OSPF; Cost - Dist/Metric
      Destination          Gateway          Port          Cost          Type
1      192.168.0.1/32      DIRECT          drop          1/1           S
Brocade#
```

Device 6**Show BGP4 routing table output for Device-6**

```

Brocade#show ip bgp route
Total number of BGP Routes: 126
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED E:EBGP
H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED s: STALE

```

	Prefix	Next Hop	MED	LocPrf	Weight	Status
1	10.0.1.0/24 AS_PATH:	10.4.1.3	0	100	0	BI
.
9	10.0.0.16/30 AS_PATH: 85	10.9.1.3		100	0	I
10	10.0.0.40/29 AS_PATH:	192.168.0.1	1	1000000	32768	BL
11	10.0.0.80/28	10.9.1.3		100	0	I
.
.
36	10.0.0.96/28 AS_PATH: 50	10.3.1.3		100	0	I
37	10.0.0.192/27 AS_PATH:	192.168.0.1	1	10000000	32768	BL
.
64	10.0.7.0/24 AS_PATH: 10	10.7.1.3		100	0	I
65	10.0.14.0/23 AS_PATH: ..	192.168.0.1	1	1000000	32768	BL

Device 1 and 2

The **show ip route** output for device 1 and device 2 shows “drop” under the Port column for the network prefixes you configured with null0 routing

```

Brocade#show ip route
Total number of IP routes: 133
Type Codes - B: BGP D: Connected S: Static R: RIP O: OSPF; Cost - Dist/Metric
  Destination Gateway Port Cost Type
1 10.9.1.24/32 DIRECT loopback 1 0/0 D
2 10.30.1.0/24 DIRECT eth 2/7 0/0 D
3 10.40.1.0/24 DIRECT eth 2/1 0/0 D
.
.
13 10.110.0.6/31 10.90.1.3 eth 2/2 20/1 B
14 10.110.0.16/30 10.90.1.3 eth 2/2 20/1 B
15 10.110.0.40/29 DIRECT drop 200/0 B
.
.
42 10.115.0.192/27 DIRECT drop 200/0 B
43 10.115.1.128/26 10.30.1.3 eth 2/7 20/1 B
.
.
69 10.120.7.0/24 10.70.1.3 eth 2/10 20/1 B
70 10.120.14.0/23 DIRECT drop 200/0 B
.
.
.
.
131 10.144.0.0/12 10.80.1.3 eth 3/4 20/1 B
132 12.168.0.1/32 DIRECT drop 1/1 S
Brocade#

```

Generalized TTL Security Mechanism support

The device supports the Generalized TTL Security Mechanism (GTSM) as defined in RFC 3682. GTSM protects the device from attacks of invalid BGP4 control traffic that is sent to overload the CPU or hijack the BGP4 session. GTSM protection applies to EBGP neighbors only.

When GTSM protection is enabled, BGP4 control packets sent by the device to a neighbor have a Time To Live (TTL) value of 255. In addition, the device expects the BGP4 control packets received from the neighbor to have a TTL value of either 254 or 255. For multihop peers (where the **ebgp-multihop** option is configured for the neighbor), the device expects the TTL for BGP4 control packets received from the neighbor to be greater than or equal to 255, minus the configured number of hops to the neighbor. If the BGP4 control packets received from the neighbor do not have the anticipated value, the device drops them.

For more information on GTSM protection, see RFC 3682.

To enable GTSM protection for neighbor 192.168.9.210 (for example), enter the following command.

```
Brocade(config-bgp-router)# neighbor 192.168.9.210 ebgp-btsh
```

Syntax: [no] **neighbor ip-addr | peer-group-name ebgp-btsh**

NOTE

For GTSM protection to work properly, it must be enabled on both the device and the neighbor.

Displaying BGP4 information

You can display the following configuration information and statistics for BGP4 protocol:

- Summary BGP4 configuration information for the device
- Active BGP4 configuration information (the BGP4 information in the running configuration)
- Neighbor information
- Peer-group information
- Information about the paths from which BGP4 selects routes
- Summary BGP4 route information
- The device's BGP4 route table
- Route flap dampening statistics
- Active route maps (the route map configuration information in the running configuration)
- BGP4 Restart Neighbor Information
- AS4 support and asdot notation

Displaying summary BGP4 information

You can display the local AS number, the maximum number of routes and neighbors supported, and some BGP4 statistics. You can also display BGP4 memory usage for:

- BGP4 routes installed
- Routes advertising to all neighbors (aggregated into peer groups)
- Attribute entries installed

The **show ip bgp summary** command output has the following limitations:

- If a BGP4 peer is not configured for an address-family, the peer information is not displayed.
- If a BGP4 peer is configured for an address-family but not negotiated for an address-family after the BGP4 peer is in the established state, the **show ip bgp summary** command output shows **(NoNeg)** at the end of the line for this peer.
- If a BGP4 peer is configured and negotiated for that address-family, its display is the same as in previous releases.

To view summary BGP4 information for the device, enter the following command at any CLI prompt

```
Brocade# show ip bgp summary
BGP4 Summary
Router ID: 10.10.1.14 Local AS Number: 100
Confederation Identifier: not configured
Confederation Peers:
Maximum Number of IP ECMP Paths Supported for Load Sharing: 1
Number of Neighbors Configured: 67, UP: 67
Number of Routes Installed: 258088, Uses 22195568 bytes
Number of Routes Advertising to All Neighbors: 17,035844 (3,099146 entries),
Uses 192,147052 bytes
Number of Attribute Entries Installed: 612223, Uses 55100070 bytes
Neighbor Address AS# State Time Rt:Accepted Filtered Sent ToSend
10.0.100.2 100 ESTABp 0h28m24s 0 0 258087 0
10.0.101.2 100 ESTAB 0h28m24s 0 0 258087 0
10.2.3.4 200 ADMDN 0h44m56s 0 0 0 2
```

Syntax: **show ip bgp summary**

This display shows the following information.

TABLE 7 BGP4 summary information

This field...	Displays...
Router ID	The device's device ID.
Local AS Number	The BGP4 AS number for the device.
Confederation Identifier	The AS number of the confederation in which the device resides.
Confederation Peers	The numbers of the local ASs contained in the confederation. This list matches the confederation peer list you configure on the device.
Maximum Number of Paths Supported for Load Sharing	The maximum number of route paths across which the device can balance traffic to the same destination. The feature is enabled by default but the default number of paths is 1. You can increase the number from 2 – 8 paths. Refer to “Configuring BGP4 multipath load sharing” on page 43.
Number of Neighbors Configured	The number of BGP4 neighbors configured on this device, and currently in established state.
Number of Routes Installed	The number of BGP4 routes in the device BGP4 route table and the route or path memory usage.
Number of Routes Advertising to All Neighbors	The total of the RtSent and RtToSend columns for all neighbors, the total number of unique ribout group entries, and the amount of memory used by these groups.
Number of Attribute Entries Installed	The number of BGP4 route-attribute entries in the device route-attributes table and the amount of memory used by these entries. To display the route-attribute table, refer to “Displaying BGP4 route-attribute entries” on page 139.
Neighbor Address	The IP addresses of the BGP4 neighbors for this device.
AS#	The AS number.

TABLE 7 BGP4 summary information (Continued)

This field...	Displays...
State	<p>The state of device sessions with each neighbor. The states are from this perspective of the device, not the neighbor. State values are based on the BGP4 state machine values described in RFC 1771 and can be one of the following for each device:</p> <ul style="list-style-type: none"> • IDLE – The BGP4 process is waiting to be started. Usually, enabling BGP4 or establishing a neighbor session starts the BGP4 process. • ADMND – The neighbor has been administratively shut down. Refer to “Administratively shutting down a session with a BGP4 neighbor” on page 63. • CONNECT – BGP4 is waiting for the connection process for the TCP neighbor session to be completed. • ACTIVE – BGP4 is waiting for a TCP connection from the neighbor. Note: If the state frequently changes between CONNECT and ACTIVE, there may be a problem with the TCP connection. • OPEN SENT – BGP4 is waiting for an Open message from the neighbor. • OPEN CONFIRM – BGP4 has received an Open message from the neighbor and is now waiting for either a KEEPALIVE or NOTIFICATION message. If the device receives a KEEPALIVE message from the neighbor, the state changes to Established. If the message is a NOTIFICATION, the state changes to Idle. • ESTABLISHED – BGP4 is ready to exchange UPDATE packets with the neighbor. <p>Operational States:</p> <p>Additional information regarding the operational states of the BGP4 states described above may be added as described in the following:</p> <ul style="list-style-type: none"> • (+) – is displayed if there is more BGP4 data in the TCP receiver queue. Note: If you display information for the neighbor using the show ip bgp neighbor ip-addr command, the TCP receiver queue value will be greater than 0. • (-) – indicates that the session has gone down and the software is clearing or removing routes. • (*) – indicates that the inbound or outbound policy is being updated for the peer. • (s) – indicates that the peer has negotiated restart, and the session is in a stale state. • (r) – indicates that the peer is restarting the BGP4 connection, through restart. • (^) – on the standby MP indicates that the peer is in the ESTABLISHED state and has received restart capability (in the primary MP). • (<) – indicates that the device is waiting to receive the “End of RIB” message the peer. • (p) – indicates that the neighbor ribout group membership change is pending or in progress
Time	The time that has passed since the state last changed.
Accepted	The number of routes received from the neighbor that this device installed in the BGP4 route table. Usually, this number is lower than the RoutesRcvd number. The difference indicates that this device filtered out some of the routes received in the UPDATE messages.
Filtered	<p>The routes or prefixes that have been filtered out:</p> <ul style="list-style-type: none"> • If soft reconfiguration is enabled, this field shows how many routes were filtered out (not placed in the BGP4 route table) but retained in memory. • If soft reconfiguration is not enabled, this field shows the number of BGP4 routes that have been filtered out.

TABLE 7 BGP4 summary information (Continued)

This field...	Displays...
Sent	The number of BGP4 routes the device has sent to the neighbor.
ToSend	The number of routes the device has queued to advertise and withdraw to a neighbor.

Displaying the active BGP4 configuration

To view the active BGP4 configuration information contained in the running configuration without displaying the entire running configuration, enter the following command at any level of the CLI.

```
Brocade# show ip bgp config
router bgp
  local-as 200
neighbor 10.102.1.1 remote-as 200
neighbor 10.102.1.1 ebgp-multihop
neighbor 10.102.1.1 update-source loopback 1
neighbor 192.168.2.1 remote-as 100
neighbor 10.200.2.2 remote-as 400
neighbor 2001:db8::1:1 remote-as 200
neighbor 2001:db8::1:2 remote-as 400
neighbor 2001:db8::1 remote-as 300

address-family ipv4 unicast
no neighbor 2001:db8::1:1 activate
no neighbor 2001:db8::1:2 activate
no neighbor 2001:db8::1 activate
exit-address-family

address-family ipv4 multicast
exit-address-family

address-family ipv6 unicast
redistribute static
neighbor 2001:db8::1:1 activate
neighbor 2001:db8::1:2 activate
neighbor 2001:db8::1 activate
exit-address-family
end of BGP configuration
```

Syntax: `show ip bgp config`

Displaying summary neighbor information

The `show ip bgp neighbor` command output has the following limitations.

1. If BGP4 peer is not configured for an address-family, the peer information will NOT be displayed.
2. If BGP4 peer is configured for an address-family, it will display the same as in previous releases.

To display summary neighbor information, enter a command such as the following at any level of the CLI.

```

Brocade# show ip bgp neighbor 192.168.4.211 routes-summary
1  IP Address: 192.168.4.211
Routes Accepted/Installed:1, Filtered/Kept:11, Filtered:11
  Routes Selected as BEST Routes:1
    BEST Routes not Installed in IP Forwarding Table:0
  Unreachable Routes (no IGP Route for NEXTHOP):0
  History Routes:0

NLRIs Received in Update Message:24, Withdraws:0 (0), Replacements:1
  NLRIs Discarded due to
    Maximum Prefix Limit:0, AS Loop:0
    Invalid Nexthop:0, Invalid Nexthop Address:0.0.0.0
    Duplicated Originator_ID:0, Cluster_ID:0

Routes Advertised:0, To be Sent:0, To be Withdrawn:0
NLRIs Sent in Update Message:0, Withdraws:0, Replacements:0

Peer Out of Memory Count for:
  Receiving Update Messages:0, Accepting Routes(NLRI):0
  Attributes:0, Outbound Routes(RIB-out):0
    
```

Syntax: show ip bgp neighbors [ip-addr] | [route-summary]

This display shows the following information.

TABLE 8 BGP4 route summary information for a neighbor

This field...	Displays...
IP Address	The IP address of the neighbor.
Routes Received	How many routes the device has received from the neighbor during the current BGP4 session: <ul style="list-style-type: none"> Accepted or Installed – Number of received routes the device accepted and installed in the BGP4 route table. Filtered or Kept – Number of routes that were filtered out, but were retained in memory for use by the soft reconfiguration feature. Filtered – Number of received routes filtered out.
Routes Selected as BEST Routes	The number of routes that the device selected as the best routes to their destinations.
BEST Routes not Installed in IP Forwarding Table	The number of routes received from the neighbor that are the best BGP4 routes to their destinations, but were not installed in the IP route table because the device received better routes from other sources (such as OSPF, RIP, or static IP routes).
Unreachable Routes	The number of routes received from the neighbor that are unreachable because the device does not have a valid RIP, OSPF, or static route to the next-hop.
History Routes	The number of routes that are down but are being retained for route flap dampening purposes.
NLRIs Received in Update Message	The number of routes received in Network Layer Reachability (NLRI) format in UPDATE messages: <ul style="list-style-type: none"> Withdraws – Number of withdrawn routes the device has received. Replacements – Number of replacement routes the device has received.

TABLE 8 BGP4 route summary information for a neighbor (Continued)

This field...	Displays...
NLRIs Discarded due to	<p>Indicates the number of times the device discarded an NLRI for the neighbor due to the following reasons:</p> <ul style="list-style-type: none"> • Maximum Prefix Limit – The configured maximum prefix amount had been reached. • AS Loop – An AS loop occurred. An AS loop occurs when the BGP4 AS-path attribute contains the local AS number. • maxas-limit aspath – The number of route entries discarded because the AS path exceeded the configured maximum length or exceeded the internal memory limits. • Invalid Nexthop – The next-hop value was not acceptable. • Duplicated Originator_ID – The originator ID was the same as the local device ID. • Cluster_ID – The cluster list contained the local cluster ID, or the local device ID (see above) if the cluster ID is not configured.
Routes Advertised	<p>The number of routes the device has advertised to this neighbor:</p> <ul style="list-style-type: none"> • To be Sent – The number of routes queued to send to this neighbor. • To be Withdrawn – The number of NLRIs for withdrawing routes the device has queued to send to this neighbor in UPDATE messages.
NLRIs Sent in Update Message	<p>The number of NLRIs for new routes the device has sent to this neighbor in UPDATE messages:</p> <ul style="list-style-type: none"> • Withdraws – Number of routes the device has sent to the neighbor to withdraw. • Replacements – Number of routes the device has sent to the neighbor to replace routes the neighbor already has.
Peer Out of Memory Count for	<p>Statistics for the times the device has run out of BGP4 memory for the neighbor during the current BGP4 session:</p> <ul style="list-style-type: none"> • Receiving Update Messages – The number of times UPDATE messages were discarded because there was no memory for attribute entries. • Accepting Routes (NLRI) – The number of NLRIs discarded because there was no memory for NLRI entries. This count is not included in the Receiving Update Messages count. • Attributes – The number of times there was no memory for BGP4 attribute entries. • Outbound Routes (RIB-out) – The number of times there was no memory to place a “best” route into the neighbor route information base (Adj-RIB-Out) for routes to be advertised.

Displaying BGP4 neighbor information

You can display configuration information and statistics for BGP4 neighbors of the device.

To view BGP4 neighbor information, including the values for all the configured parameters, enter the following command.

NOTE

The display shows all the configured parameters for the neighbor. Only the parameters that have values different from their defaults are shown.

```

Brocade(config-bgp)# show ip bgp neighbor 10.4.0.2
Total number of BGP neighbors:
1  IP Address: 10.4.0.2, AS: 5 (EBGP), RouterID: 10.0.0.1
   Description: neighbor 10.4.0.2
Local AS: 101
State: ESTABLISHED, Time: 0h1m0s, KeepAliveTime: 0, HoldTime: 0
PeerGroup: pg1
Multihop-EBGP: yes, ttl: 1
RouteReflectorClient: yes
SendCommunity: yes
NextHopSelf: yes
DefaultOriginate: yes (default sent)
MaximumPrefixLimit: 90000
RemovePrivateAs: : yes
RefreshCapability: Received
Route Filter Policies:
Distribute-list: (out) 20
Filter-list: (in) 30
Prefix-list: (in) pf1
Route-map: (in) setnp1 (out) setnp2
Messages:      Open      Update  KeepAlive  Notification  Refresh-Req
Sent          : 1        1        1           0              0
Received: 1      8        1           0              0
Last Update Time: NLRI      Withdraw      NLRI      Withdraw
                  Tx: 0h0m59s  ---          Rx: 0h0m59s  ---
Last Connection Reset Reason: Unknown
Notification Sent:      Unspecified
Notification Received: Unspecified
TCP Connection state: ESTABLISHED
Local host: 10.4.0.1, Local Port: 179
Remote host: 10.4.0.2, Remote Port: 8053
ISentSeq: 52837276 SendNext: 52837392 TotUnAck: 0
TotSent: 116 ReTrans: 0 UnAckSeq: 52837392
IRcvSeq: 2155052043 RcvNext: 2155052536 SendWnd: 16384
TotalRcv: 493 DupliRcv: 0 RcvWnd: 16384
SendQue: 0 RcvQue: 0 CngstWnd: 1460

```

This example shows how to display information for a specific neighbor, by specifying the neighbor's IP address with the command. Since none of the other display options are used, all of the information is displayed for the neighbor. The number in the far left column indicates the neighbor for which information is displayed. When you list information for multiple neighbors, this number makes the display easier to read.

The TCP statistics at the end of the display show status for the TCP session with the neighbor. Most of the fields show information stored in the Transmission Control Block (TCB) for the TCP session between the device and the neighbor. These fields are described in detail in section 3.2 of RFC 793, "Transmission Control Protocol Functional Specification".

Syntax: `show ip bgp neighbors [ip-addr [advertised-routes [detail [ip-addr/mask-bits]]]] | [attribute-entries [detail]] | [flap-statistics] | [last-packet-with-error] | [received prefix-filter] | [received-routes] | [routes [best] | [detail [best] | [not-installed-best] | [unreachable]]] | [rib-out-routes [ip-addr/mask-bits | ip-addr net-mask | detail]] | [routes-summary]`

The `ip-addr` option lets you narrow the scope of the command to a specific neighbor.

The `advertised-routes` option displays only the routes that the device has advertised to the neighbor during the current BGP4 session.

The **attribute-entries** option shows the attribute-entries associated with routes received from the neighbor.

The **flap-statistics** option shows the route flap statistics for routes received from or sent to the neighbor.

The **last-packet-with-error** option displays the last packet from the neighbor that contained an error. The packet contents are displayed in decoded (human-readable) format.

The **received prefix-filter** option shows the Outbound Route Filters (ORFs) received from the neighbor. This option applies to cooperative route filtering.

The **received-routes** option lists all the route information received in route updates from the neighbor since the soft reconfiguration feature was enabled. Refer to [“Using soft reconfiguration”](#) on page 103.

The **routes** option lists the routes received in UPDATE messages from the neighbor. You can specify the following additional options:

- **best** – Displays the routes received from the neighbor that the device selected as the best routes to their destinations.
- **not-installed-best** – Displays the routes received from the neighbor that are the best BGP4 routes to their destinations, but were not installed in the IP route table because the device received better routes from other sources (such as OSPF, RIP, or static IP routes).
- **unreachable** – Displays the routes that are unreachable because the device does not have a valid RIP, OSPF, or static route to the next hop.
- **detail** – Displays detailed information for the specified routes. You can refine your information request by also specifying one of the options (**best**, **not-installed-best**, or **unreachable**).

The **rib-out-routes** option lists the route information base (RIB) for outbound routes. You can display all routes or specify a network address.

The **routes-summary** option displays a summary of the following information:

- Number of routes received from the neighbor
- Number of routes accepted by this device from the neighbor
- Number of routes this device filtered out of the UPDATES received from the neighbor and did not accept
- Number of routes advertised to the neighbor
- Number of attribute entries associated with routes received from or advertised to the neighbor.

This display shows the following information.

TABLE 9 BGP4 neighbor information

This field...	Displays...
Total Number of BGP4 Neighbors	The number of BGP4 neighbors configured.
IP Address	The IP address of the neighbor.
AS	The AS the neighbor is in.
EBGP or IBGP	Whether the neighbor session is an IBGP session, an EBGP session, or a confederation EBGP session: <ul style="list-style-type: none"> • EBGP – The neighbor is in another AS. • EBGP_Confed – The neighbor is a member of another sub-AS in the same confederation. • IBGP – The neighbor is in the same AS.

TABLE 9 BGP4 neighbor information (Continued)

This field...	Displays...
RouterID	The neighbor device ID.
Description	The description you gave the neighbor when you configured it on the device.
Local AS	The value (if any) of the Local AS configured.
State	<p>The state of the session with the neighbor. The states are from the device perspective, not the neighbor perspective. The state values are based on the BGP4 state machine values described in RFC 1771 and can be one of the following for each device:</p> <ul style="list-style-type: none"> • IDLE – The BGP4 process is waiting to be started. Usually, enabling BGP4 or establishing a neighbor session starts the BGP4 process. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • ADMND – The neighbor has been administratively shut down. Refer to “Administratively shutting down a session with a BGP4 neighbor” on page 63. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • CONNECT – BGP4 is waiting for the connection process for the TCP neighbor session to be completed. • ACTIVE – BGP4 is waiting for a TCP connection from the neighbor. <p>NOTE: If the state frequently changes between CONNECT and ACTIVE, there may be a problem with the TCP connection.</p> <ul style="list-style-type: none"> • OPEN SENT – BGP4 is waiting for an Open message from the neighbor. • OPEN CONFIRM – BGP4 has received an OPEN message from the neighbor and is now waiting for either a KEEPALIVE or NOTIFICATION message. If the device receives a KEEPALIVE message from the neighbor, the state changes to Established. If the message is a NOTIFICATION, the state changes to Idle. • ESTABLISHED – BGP4 is ready to exchange UPDATE messages with the neighbor. • If there is more BGP4 data in the TCP receiver queue, a plus sign (+) is also displayed. <p>NOTE: If you display information for the neighbor using the show ip bgp neighbor ip-addr command, the TCP receiver queue value will be greater than 0.</p>
Time	The amount of time this session has been in the current state.
KeepAliveTime	The keep alive time, which specifies how often this device sends keepalive messages to the neighbor. Refer to “Changing the Keep Alive Time and Hold Time” on page 71.
HoldTime	The hold time, which specifies how many seconds the device will wait for a keepalive or update message from a BGP4 neighbor before deciding that the neighbor is not operational. Refer to “Changing the Keep Alive Time and Hold Time” on page 71.
PeerGroup	The name of the peer group the neighbor is in, if applicable.
Multihop-EBGP	Whether this option is enabled for the neighbor.
RouteReflectorClient	Whether this option is enabled for the neighbor.
SendCommunity	Whether this option is enabled for the neighbor.
NextHopSelf	Whether this option is enabled for the neighbor.
DefaultOriginate	Whether this option is enabled for the neighbor.

TABLE 9 BGP4 neighbor information (Continued)

This field...	Displays...
MaximumPrefixLimit	Maximum number of prefixes the device will accept from this neighbor.
RemovePrivateAs	Whether this option is enabled for the neighbor.
RefreshCapability	Whether this device has received confirmation from the neighbor that the neighbor supports the dynamic refresh capability.
CooperativeFilteringCapability	Whether the neighbor is enabled for cooperative route filtering.
Distribute-list	Lists the distribute list parameters, if configured.
Filter-list	Lists the filter list parameters, if configured.
Prefix-list	Lists the prefix list parameters, if configured.
Route-map	Lists the route map parameters, if configured.
Messages Sent	The number of messages this device has sent to the neighbor. The display shows statistics for the following message types: <ul style="list-style-type: none"> • Open • Update • KeepAlive • Notification • Refresh-Req
Messages Received	The number of messages this device has received from the neighbor. The message types are the same as for the Message Sent field.
Last Update Time	Lists the last time updates were sent and received for the following: <ul style="list-style-type: none"> • NLRIs • Withdraws

TABLE 9 BGP4 neighbor information (Continued)

This field...	Displays...
Last Connection Reset Reason	<p>The reason the previous session with this neighbor ended. The reason can be one of the following:</p> <p>Reasons described in the BGP4 specifications:</p> <ul style="list-style-type: none"> • Message Header Error • Connection Not Synchronized • Bad Message Length • Bad Message Type • OPEN Message Error • Unsupported Version Number • Bad Peer AS Number • Bad BGP4 Identifier • Unsupported Optional Parameter • Authentication Failure • Unacceptable Hold Time • Unsupported Capability • UPDATE Message Error • Malformed Attribute List • Unrecognized Well-known Attribute • Missing Well-known Attribute • Attribute Flags Error • Attribute Length Error • Invalid ORIGIN Attribute • Invalid NEXT_HOP Attribute • Optional Attribute Error • Invalid Network Field • Malformed AS_PATH • Hold Timer Expired • Finite State Machine Error • Rcv Notification
Last Connection Reset Reason (cont.)	<p>Reasons specific to the implementation:</p> <ul style="list-style-type: none"> • Reset All Peer Sessions • User Reset Peer Session • Port State Down • Peer Removed • Peer Shutdown • Peer AS Number Change • Peer AS Confederation Change • TCP Connection KeepAlive Timeout • TCP Connection Closed by Remote • TCP Data Stream Error Detected

TABLE 9 BGP4 neighbor information (Continued)

This field...	Displays...
Notification Sent	<p>If the device receives a notification message from the neighbor, the message contains an error code corresponding to one of the following errors. Some errors have subcodes that clarify the reason for the error. Where applicable, the subcode messages are listed underneath the error code messages.</p> <ul style="list-style-type: none"> • Message Header Error: <ul style="list-style-type: none"> • Connection Not Synchronized • Bad Message Length • Bad Message Type • Unspecified • Open Message Error: <ul style="list-style-type: none"> • Unsupported Version • Bad Peer As • Bad BGP4 Identifier • Unsupported Optional Parameter • Authentication Failure • Unacceptable Hold Time • Unspecified • Update Message Error: <ul style="list-style-type: none"> • Malformed Attribute List • Unrecognized Attribute • Missing Attribute • Attribute Flag Error • Attribute Length Error • Invalid Origin Attribute • Invalid NextHop Attribute • Optional Attribute Error • Invalid Network Field • Malformed AS Path • Unspecified • Hold Timer Expired • Finite State Machine Error • Cease • Unspecified
Notification Received	See above.

TABLE 9 BGP4 neighbor information (Continued)

This field...	Displays...
TCP Connection state	<p>The state of the connection with the neighbor. The connection can have one of the following states:</p> <ul style="list-style-type: none"> • LISTEN – Waiting for a connection request. • SYN-SENT – Waiting for a matching connection request after having sent a connection request. • SYN-RECEIVED – Waiting for a confirming connection request acknowledgment after having both received and sent a connection request. • ESTABLISHED – Data can be sent and received over the connection. This is the normal operational state of the connection. • FIN-WAIT-1 – Waiting for a connection termination request from the remote TCP, or an acknowledgment of the connection termination request previously sent. • FIN-WAIT-2 – Waiting for a connection termination request from the remote TCP. • CLOSE-WAIT – Waiting for a connection termination request from the local user. • CLOSING – Waiting for a connection termination request acknowledgment from the remote TCP. • LAST-ACK – Waiting for an acknowledgment of the connection termination request previously sent to the remote TCP (which includes an acknowledgment of its connection termination request). • TIME-WAIT – Waiting for enough time to pass to be sure the remote TCP received the acknowledgment of its connection termination request. • CLOSED – There is no connection state.
Byte Sent	The number of bytes sent.
Byte Received	The number of bytes received.
Local host	The IP address of the device.
Local port	The TCP port the device is using for the BGP4 TCP session with the neighbor.
Remote host	The IP address of the neighbor.
Remote port	The TCP port the neighbor is using for the BGP4 TCP session with the device.
ISentSeq	The initial send sequence number for the session.
SendNext	The next sequence number to be sent.
TotUnAck	The number of sequence numbers sent by the device that have not been acknowledged by the neighbor.
TotSent	The number of sequence numbers sent to the neighbor.
ReTrans	The number of sequence numbers that the device retransmitted because they were not acknowledged.
UnAckSeq	The current acknowledged sequence number.
IRcvSeq	The initial receive sequence number for the session.
RcvNext	The next sequence number expected from the neighbor.
SendWnd	The size of the send window.
TotalRcv	The number of sequence numbers received from the neighbor.
DupliRcv	The number of duplicate sequence numbers received from the neighbor.
RcvWnd	The size of the receive window.

TABLE 9 BGP4 neighbor information (Continued)

This field...	Displays...
SendQue	The number of sequence numbers in the send queue.
RcvQue	The number of sequence numbers in the receive queue.
CngstWnd	The number of times the window has changed.

Displaying route information for a neighbor

You can display routes based on the following criteria:

- A summary of the routes for a specific neighbor.
- Routes received from the neighbor that the device selected as the best routes to their destinations.
- Routes received from the neighbor that are the best BGP4 routes to their destinations, but were not installed in the IP route table because the device received better routes from other sources (such as OSPF, RIP, or static IP routes).
- Routes that are unreachable because the device does not have a valid RIP, OSPF, or static route to the next hop.
- Routes for a specific network advertised by the device to the neighbor.
- The Routing Information Base (RIB) for a specific network advertised to the neighbor. You can display the RIB regardless of whether the device has already sent it to the neighbor.

Displaying summary route information

To display summary route information, refer to “[show ip bgp neighbors \[ip-addr\] | \[route-summary\]](#)” on page 121.

Displaying advertised routes

To display the routes the device has advertised to a specific neighbor for a specific network, enter a command such as the following at any level of the CLI.

```
Brocade# show ip bgp neighbors 192.168.4.211 advertised-routes
      There are 2 routes advertised to neighbor 192.168.4.211
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST I:IBGP L:LOCAL
      Network      Next Hop      Metric      LocPrf      Weight      Status
1      10.102.0.0/24  192.168.2.102  12          32768       BL
2      10.200.1.0/24   192.168.2.102  0          32768       BL
```

You also can enter a specific route.

```
Brocade# show ip bgp neighbors 192.168.4.211 advertised 10.1.1.0/24
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST I:IBGP L:LOCAL
      Network      Next Hop      Metric      LocPrf      Weight      Status
1      10.200.1.0/24   192.168.2.102  0          32768       BL
```

Syntax: `show ip bgp neighbor ip-addr advertised-routes [ip-addr/prefix]`

For information about the fields in this display, refer to [Table 10](#). The fields in this display also appear in the `show ip bgp` display.

Displaying the routes with destinations that are unreachable

To display BGP4 routes with destinations that are unreachable using any of the BGP4 paths in the BGP4 route table, enter a command such as the following at any level of the CLI:

```
Brocade(config-bgp)# show ip bgp neighbor 192.168.4.211 routes unreachable
```

Syntax: `show ip bgp neighbor ip-addr routes unreachable`

For information about the fields in this display, refer to [Table 10](#). The fields in this display also appear in the `show ip bgp` display.

Displaying the Adj-RIB-Out for a neighbor

To display the current BGP4 Routing Information Base (Adj-RIB-Out) for a specific neighbor and a specific destination network, enter a command such as the following at any level of the CLI.

```
Brocade# show ip bgp neighbor 192.168.4.211 rib-out-routes 192.168.1.0/24
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST I:IBGP L:LOCAL
      Prefix          Next Hop      Metric      LocPrf      Weight Status
1      10.200.1.0/24    0.0.0.0       0           101         32768  BL
```

The Adj-RIB-Out contains the routes that the device either has most recently sent to the neighbor or is about to send to the neighbor.

Syntax: `show ip bgp neighbor ip-addr rib-out-routes [ip-addr/prefix]`

For information about the fields in this display, refer to [Table 10](#). The fields in this display also appear in the `show ip bgp` display.

Displaying peer group information

To display peer-group information, enter a command such as the following at the Privileged EXEC level of the CLI.

```
Brocade# show ip bgp peer-group pg1
1  BGP peer-group is pg
   Description: peer group abc
   SendCommunity: yes
   NextHopSelf: yes
   DefaultOriginate: yes
   Members:
     IP Address: 192.168.10.10, AS: 65111
```

Syntax: `show ip bgp peer-group [peer-group-name]`

Only the parameters that have values different from their defaults are listed.

Displaying summary route information

To display summary statistics for all the routes in the device's BGP4 route table, enter a command such as the following at any level of the CLI.

Displaying BGP4 information

```
Brocade# show ip bgp routes summary
  Total number of BGP routes (NLRIs) Installed      : 20
  Distinct BGP destination networks                 : 20
  Filtered BGP routes for soft reconfig            : 100178
  Routes originated by this router                  : 2
  Routes selected as BEST routes                   : 19
  BEST routes not installed in IP forwarding table  : 1
  Unreachable routes (no IGP route for NEXTHOP)    : 1
  IBGP routes selected as best routes              : 0
  EBGp routes selected as best routes              : 17
```

Syntax: show ip bgp routes summary

This display shows the following information.

TABLE 10 BGP4 summary route information

This field...	Displays...
Total number of BGP4 routes (NLRIs) Installed	Number of BGP4 routes the device has installed in the BGP4 route table.
Distinct BGP4 destination networks	Number of destination networks the installed routes represent. The BGP4 route table can have multiple routes to the same network.
Filtered BGP4 routes for soft reconfig	Number of route updates received from soft-reconfigured neighbors or peer groups that have been filtered out but retained. For information about soft reconfiguration, refer to “Using soft reconfiguration” on page 103.
Routes originated by this device	Number of routes in the BGP4 route table that this device originated.
Routes selected as BEST routes	Number of routes in the BGP4 route table that this device has selected as the best routes to the destinations.
BEST routes not installed in IP forwarding table	Number of BGP4 routes that are the best BGP4 routes to their destinations but were not installed in the IP route table because the device received better routes from other sources (such as OSPF, RIP, or static IP routes).
Unreachable routes (no IGP route for NEXTHOP)	Number of routes in the BGP4 route table whose destinations are unreachable because the next-hop is unreachable.
IBGP routes selected as best routes	Number of “best” routes in the BGP4 route table that are IBGP routes.
EBGP routes selected as best routes	Number of “best” routes in the BGP4 route table that are EBGp routes.

Displaying the BGP4 route table

BGP4 uses filters that you define as well as the algorithm described in [“How BGP4 selects a path for a route \(BGP best path selection algorithm\)”](#) on page 5 to determine the preferred route to a destination. BGP4 sends only the preferred route to the IP table. To view all the learned BGP4 routes, you can display the BGP4 table.

To view the BGP4 route table, enter the following command.


```

Brocade# show ip bgp routes
Total number of BGP Routes: 97371
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED
Prefix          Next Hop      MED      LocPrf      Weight      Status
1      10.3.0.0/8      192.168.4.106      100      0      BE
      AS_PATH: 65001 4355 701 80
2      10.4.0.0/8      192.168.4.106      100      0      BE
      AS_PATH: 65001 4355 1
3      10.60.212.0/22  192.168.4.106      100      0      BE
      AS_PATH: 65001 4355 701 1 189
4      10.6.0.0/8      192.168.4.106      100      0      BE
      AS_PATH: 65001 4355 3356 7170 1455
5      10.8.1.0/24     192.168.4.106      0      100      0      BE
      AS_PATH: 65001

```

Syntax: `show ip bgp routes` *[[network] ip-addr | num | [age secs] | [as-path-access-list num] | [best] | [cidr-only] | [community num | no-export | no-advertise | internet | local-as] | [community-access-list num] | [community-list num | [detail option] | [filter-list num, num,...] | [next-hop ip-addr] | [no-best] | [not-installed-best] | [prefix-list string] | [regular-expression regular-expression] | [route-map map-name] | [summary] | [unreachable]*

The *ip-addr* option displays routes for a specific network. The **network** keyword is optional. You can enter the network address without entering **network** in front of it.

The *num* option specifies the table entry with which you want the display to start. For example, if you want to list entries beginning with table entry 100, specify 100.

The **age** secs parameter displays only the routes that have been received or updated more recently than the number of seconds you specify.

The **as-path-access-list** *num* parameter filters the display using the specified AS-path ACL.

The **best** parameter displays the routes received from the neighbor that the device selected as the best routes to their destinations.

The **cidr-only** option lists only the routes whose network masks do not match their class network length.

The **community** option lets you display routes for a specific community. You can specify **local-as**, **no-export**, **no-advertise**, **internet**, or a private community number. You can specify the community number as either two five-digit integer values of up to 1– 65535, separated by a colon (for example, 12345:6789) or a single long integer value.

The **community-access-list** *num* parameter filters the display using the specified community ACL.

The **community-list** option lets you display routes that match a specific community filter.

The **detail** option lets you display more details about the routes. You can refine your request by also specifying one of the other display options after the detail keyword.

The **filter-list** option displays routes that match a specific address filter list.

The **next-hop** *ip-addr* option displays the routes for a given next-hop IP address.

The **no-best** option displays the routes for which none of the routes to a given prefix were selected as the best route. The IP route table does not contain a BGP4 route for any of the routes listed by the command.

The **not-installed-best** option displays the routes received from the neighbor that are the best BGP4 routes to their destinations, but were not installed in the IP route table because the device received better routes from other sources (such as OSPF, RIP, or static IP routes).

The **prefix-list** *string* parameter filters the display using the specified IP prefix list.

The **regular-expression** *regular-expression* option filters the display based on a regular expression. Refer to “Using regular expressions” on page 77.

The **route-map** *map-name* parameter filters the display by using the specified route map. The software displays only the routes that match the match clauses in the route map. Software disregards the route map’s set clauses.

The **summary** option displays summary information for the routes.

The **unreachable** option displays the routes that are unreachable because the device does not have a valid RIP, OSPF, or static route to the next-hop.

Displaying the best BGP4 routes

To display all the BGP4 routes in the device’s BGP4 route table that are the best routes to their destinations, enter a command such as the following at any level of the CLI

```
Brocade# show ip bgp routes best
Searching for matching routes, use ^C to quit...
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
Prefix          Next Hop          MED          LocPrf        Weight Status
1 10.3.0.0/8      192.168.4.106    100           0             BE
   AS_PATH: 65001 4355 701 80
2 10.4.0.0/8      192.168.4.106    100           0             BE
   AS_PATH: 65001 4355 1
3 10.60.212.0/22 192.168.4.106    100           0             BE
   AS_PATH: 65001 4355 701 1 189
4 10.6.0.0/8      192.168.4.106    100           0             BE
   AS_PATH: 65001 4355 3356 7170 1455
5 10.2.0.0/16     192.168.4.106    100           0             BE
   AS_PATH: 65001 4355 701
```

Syntax: show ip bgp routes best

For information about the fields in this display, refer to [Table 10](#). The fields in this display also appear in the **show ip bgp** display.

Displaying BGP4 routes whose destinations are unreachable

To display BGP4 routes whose destinations are unreachable using any of the BGP4 paths in the BGP4 route table, enter a command such as the following at any level of the CLI.

```
Brocade# show ip bgp routes unreachable
Searching for matching routes, use ^C to quit...
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED
Prefix          Next Hop          Metric        LocPrf        Weight Status
1 10.8.8.0/24     192.168.5.1      0             101           0
   AS_PATH: 65001 4355 1
```

Syntax: show ip bgp routes unreachable

For information about the fields in this display, refer to [Table 10](#). The fields in this display also appear in the `show ip bgp` display.

Displaying information for a specific route

To display BGP4 network information by specifying an IP address within the network, enter a command such as the following at any level of the CLI.

```
Brocade# show ip bgp 10.3.4.0
Number of BGP Routes matching display condition : 1
Status codes: s suppressed, d damped, h history, * valid, > best, i internal
Origin codes: i - IGP, e - EGP, ? - incomplete
   Network          Next Hop          Metric LocPrf Weight Path
*> 10.3.4.0/24      192.168.4.106          100    0    65001 4355 1 1221 ?
   Last update to IP routing table: 0h11m38s, 1 path(s) installed:
     Gateway          Port
     192.168.2.1      2/1
   Route is advertised to 1 peers:
     10.20.20.2(65300)
```

Syntax: `show ip bgp [route] ip-addr/prefix [longer-prefixes] | ip-addr`

If you use the `route` option, the display for the information is different, as shown in the following example.

```
Brocade# show ip bgp route 10.3.4.0
Number of BGP Routes matching display condition : 1
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
      E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
   Prefix          Next Hop          MED      LocPrf      Weight Status
1    10.3.4.0/24    192.168.4.106          100        0        BE
   AS_PATH: 65001 4355 1 1221
   Last update to IP routing table: 0h12m1s, 1 path(s) installed:
     Gateway          Port
     192.168.2.1      2/1
   Route is advertised to 1 peers:
     10.20.20.2(65300)
```

These displays show the following information.

TABLE 11 BGP4 network information

This field...	Displays...
Number of BGP4 Routes matching display condition	The number of routes that matched the display parameters you entered. This is the number of routes displayed by the command.
Status codes	A list of the characters the display uses to indicate the route's status. The status code appears in the left column of the display, to the left of each route. The status codes are described in the command's output. NOTE: This field appears only if you <i>do not</i> enter the <code>route</code> option.
Prefix	The network address and prefix.
Next Hop	The next-hop device for reaching the network.
Metric	The value of the route's MED attribute. If the route does not have a metric, this field is blank.

TABLE 11 BGP4 network information (Continued)

This field...	Displays...
LocPrf	The degree of preference for this route relative to other routes in the local AS. When the BGP4 algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 – 4294967295.
Weight	The value that this device associates with routes from a specific neighbor. For example, if the device receives routes to the same destination from two BGP4 neighbors, the device prefers the route from the neighbor with the larger weight.
Path	The route AS path. NOTE: This field appears only if you <i>do not</i> enter the route option.
Origin code	A character that indicates the route origin. The origin code appears to the right of the AS path (Path field). The origin codes are described in the command output. NOTE: This field appears only if you <i>do not</i> enter the route option.
Status	The route status, which can be one or more of the following: <ul style="list-style-type: none"> • A – AGGREGATE. The route is an aggregate route for multiple networks. • B – BEST. BGP4 has determined that this is the optimal route to the destination. NOTE: If the “b” is lowercase, the software was not able to install the route in the IP route table. <ul style="list-style-type: none"> • b – NOT-INSTALLED-BEST. The routes received from the neighbor are the best BGP4 routes to their destinations, but were not installed in the IP route table because the device received better routes from other sources (such as OSPF, RIP, or static IP routes). • C – CONFED_EBGP. The route was learned from a neighbor in the same confederation and AS, but in a different sub-AS within the confederation. • D – DAMPED. This route has been dampened (by the route dampening feature), and is currently unusable. • H – HISTORY. Route dampening is configured for this route, and the route has a history of flapping and is unreachable now. • I – INTERNAL. The route was learned through BGP4. • L – LOCAL. The route originated on this device. • M – MULTIPATH. BGP4 load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with “B”. NOTE: If the “m” is lowercase, the software was not able to install the route in the IP route table. <ul style="list-style-type: none"> • S – SUPPRESSED. This route was suppressed during aggregation and thus is not advertised to neighbors. NOTE: This field appears only if you enter the route option.

Displaying route details

This example shows the information displayed when you use the **detail** option. In this example, the information for one route is shown.

```
Brocade# show ip bgp routes detail
Total number of BGP Routes: 2
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
      E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED
1     Prefix: 10.5.0.0/24, Status: BME, Age: 0h28m28s
      NEXT_HOP: 10.1.1.2, Learned from Peer: 10.1.0.2 (5)
      LOCAL_PREF: 101, MED: 0, ORIGIN: igp, Weight: 10
      AS_PATH: 5
      Adj_RIB_out count: 4, Admin distance 20
```

Syntax: show ip bgp routes detail

These displays show the following information.

TABLE 12 BGP4 route information

This field...	Displays...
Total number of BGP4 Routes	The number of BGP4 routes.
Status codes	A list of the characters that indicate route status. The status code is appears in the left column of the display, to the left of each route. The status codes are described in the command's output.
Prefix	The network prefix and mask length.
Status	<p>The route status, which can be one or more of the following:</p> <ul style="list-style-type: none"> • A – AGGREGATE. The route is an aggregate route for multiple networks. • B – BEST. BGP4 has determined that this is the optimal route to the destination. <p>NOTE: If the “b” is lowercase, the software was not able to install the route in the IP route table.</p> <ul style="list-style-type: none"> • b – NOT-INSTALLED-BEST. The routes received from the neighbor are the best BGP4 routes to their destinations, but were not installed in the IP route table because the device received better routes from other sources (such as OSPF, RIP, or static IP routes). • C – CONFED_EBGP. The route was learned from a neighbor in the same confederation and AS, but in a different sub-AS within the confederation. • D – DAMPED. This route has been dampened (by the route dampening feature), and is currently unusable. • H – HISTORY. Route dampening is configured for this route, and the route has a history of flapping and is unreachable now. • I – INTERNAL. The route was learned through BGP4. • L – LOCAL. The route originated on this device. • M – MULTIPATH. BGP4 load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with “B”. <p>NOTE: If the “m” is lowercase, the software was not able to install the route in the IP route table.</p> <ul style="list-style-type: none"> • S – SUPPRESSED. This route was suppressed during aggregation and thus is not advertised to neighbors.
Age	The last time an update occurred.

TABLE 12 BGP4 route information (Continued)

This field...	Displays...
Next_Hop	The next-hop device for reaching the network.
Learned from Peer	The IP address of the neighbor that sent this route.
Local_Pref	The degree of preference for this route relative to other routes in the local AS. When the BGP4 algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 – 4294967295.
MED	The route metric. If the route does not have a metric, this field is blank.
Origin	<p>The source of the route information. The origin can be one of the following:</p> <ul style="list-style-type: none"> • EGP – The routes with these attributes came to BGP4 through EGP. • IGP – The routes with these attributes came to BGP4 through IGP. • INCOMPLETE – The routes came from an origin other than one of the above. For example, they may have been redistributed from OSPF or RIP. <p>When BGP4 compares multiple routes to select the best route, IGP is preferred over EGP and both are preferred over INCOMPLETE.</p>
Weight	The value this device associates with routes from a specific neighbor. For example, if the device receives routes to the same destination from two BGP4 neighbors, the device prefers the route from the neighbor with the larger weight.
Atomic	<p>Whether network information in this route has been aggregated and this aggregation has resulted in information loss.</p> <p>NOTE: Information loss under these circumstances is a normal part of BGP4 and does not indicate an error.</p>
Aggregation ID	The device that originated this aggregation.
Aggregation AS	The AS in which the network information was aggregated. This value applies only to aggregated routes and is otherwise 0.
Originator	The originator of the route in a route reflector environment.
Cluster List	The route-reflector clusters through which this route has passed.
Learned From	The IP address of the neighbor from which the device learned the route.
Admin Distance	The administrative distance of the route.
Adj_RIB_out	The number of neighbors to which the route has been or will be advertised. This is the number of times the route has been selected as the best route and placed in the Adj-RIB-Out (outbound queue) for a BGP4 neighbor.
Communities	The communities the route is in.

Displaying BGP4 route-attribute entries

The route-attribute entries table lists the sets of BGP4 attributes stored in device memory. Each set of attributes is unique and can be associated with one or more routes. In fact, the device typically has fewer route attribute entries than routes.

To display the IP route table, enter the following command.

```
Brocade# show ip bgp attribute-entries
```

Syntax: show ip bgp attribute-entries

This example shows the information displayed by this command. A zero value indicates that the attribute is not set.

```
Brocade# show ip bgp attribute-entries
Total number of BGP Attribute Entries: 7753
1   Next Hop  :192.168.11.1      MED :0              Origin:IGP
    Originator:0.0.0.0          Cluster List:None
    Aggregator:AS Number :0      Router-ID:0.0.0.0   Atomic:FALSE
    Local Pref:100              Communities:Internet
    AS Path   :(65002) 65001 4355 2548 3561 5400 6669 5548
2   Next Hop  :192.168.11.1      Metric :0           Origin:IGP
    Originator:0.0.0.0          Cluster List:None
    Aggregator:AS Number :0      Router-ID:0.0.0.0   Atomic:FALSE
    Local Pref:100              Communities:Internet
    AS Path   :(65002) 65001 4355 2548
```

This display shows the following information.

TABLE 13 BGP4 route-attribute entries information

This field...	Displays...
Total number of BGP4 Attribute Entries	The number of routes contained in this BGP4 route table.
Next Hop	The IP address of the next-hop device for routes that have this set of attributes.
Metric	The cost of the routes that have this set of attributes.
Origin	<p>The source of the route information. The origin can be one of the following:</p> <ul style="list-style-type: none"> • EGP – The routes with these attributes came to BGP4 through EGP. • IGP – The routes with these attributes came to BGP4 through IGP. • INCOMPLETE – The routes came from an origin other than one of the above. For example, they may have been redistributed from OSPF or RIP. <p>When BGP4 compares multiple routes to a destination to select the best route, IGP is preferred over EGP and both are preferred over INCOMPLETE.</p>
Originator	The originator of the route in a route reflector environment.
Cluster List	The route-reflector clusters through which this set of attributes has passed.
Aggregator	<p>Aggregator information:</p> <ul style="list-style-type: none"> • AS Number shows the AS in which the network information in the attribute set was aggregated. This value applies only to aggregated routes and is otherwise 0. • Router-ID shows the device that originated this aggregator.

TABLE 13 BGP4 route-attribute entries information (Continued)

This field...	Displays...
Atomic	Whether the network information in this set of attributes has been aggregated <i>and</i> this aggregation has resulted in information loss. <ul style="list-style-type: none"> • TRUE – Indicates information loss has occurred • FALSE – Indicates no information loss has occurred NOTE: Information loss under these circumstances is a normal part of BGP4 and does not indicate an error.
Local Pref	The degree of preference for routes that use these attributes relative to other routes in the local AS.
Communities	The communities to which routes with these attributes belong.
AS Path	The ASs through which routes with these attributes have passed. The local AS is shown in parentheses.

Displaying the routes BGP4 has placed in the IP route table

The IP route table indicates the routes it has received from BGP4 by listing “BGP” as the route type.

To display the IP route table, enter the following command.

```
Brocade# show ip route
```

Syntax: `show ip route [ip-addr | num | bgp | ospf | rip | isis]`

This example shows the information displayed by this command. Notice that most of the routes in this example have type “B”, indicating that their source is BGP4.

```
Brocade# show ip route
Type Codes - B:BGP D:Connected I:ISIS S:Static R:RIP O:OSPF; Cost - Dist/Metric
      Destination          Gateway          Port      Cost    Type
1      10.130.130.0/24      10.11.11.1      ve 1      200/0    B
2      10.130.131.0/24      10.11.11.1      ve 1      200/0    B
```


Displaying route flap dampening statistics

To display route dampening statistics or all the dampened routes, enter the following command at any level of the CLI.

```
Brocade# show ip bgp flap-statistics
Total number of flapping routes: 414
  Status Code  >:best d:damped h:history *:valid
  Network      From          Flaps Since    Reuse    Path
h> 10.50.206.0/23 10.90.213.77 1    0 :0 :13 0 :0 :0 65001 4355 1 701
h> 10.255.192.0/20 10.90.213.77 1    0 :0 :13 0 :0 :0 65001 4355 1 7018
h> 10.252.165.0/24 10.90.213.77 1    0 :0 :13 0 :0 :0 65001 4355 1 7018
h> 10.50.208.0/23 10.90.213.77 1    0 :0 :13 0 :0 :0 65001 4355 1 701
h> 10.33.0.0/16 10.90.213.77 1    0 :0 :13 0 :0 :0 65001 4355 1 701
*> 10.17.220.0/24 10.90.213.77 1    0 :1 :4 0 :0 :0 65001 4355 701 62
```

Syntax: `show ip bgp flap-statistics` [**regular-expression** *regular-expression* | *address mask* [longer-prefixes] | **neighbor** *ip-addr* | **filter-list** *num...*]

The **regular-expression** *regular-expression* parameter is a regular expression. The regular expressions are the same ones supported for BGP4 AS-path filters. Refer to “Using regular expressions” on page 77.

The *address mask* parameters specify a particular route. If you also use the optional **longer-prefixes** parameter, all statistics for routes that match the specified route or have a longer prefix than the specified route are displayed. For example, if you specify **10.157.0.0 longer**, all routes with the prefix 10.157 or that have a longer prefix (such as 10.157.22) are displayed.

The **neighbor** *ip-addr* parameter displays route flap dampening statistics only for routes learned from the specified neighbor. You can also display route flap statistics for routes learned from a neighbor by entering the `show ip bgp neighbor ip-addr flap-statistics` command.

The **filter-list** *num* parameter specifies one or more filters. Only routes that have been dampened and that match the specified filters are displayed.

This display shows the following information.

TABLE 14 Route flap dampening statistics

This field...	Displays...
Total number of flapping routes	The total number of routes in the BGP4 route table that have changed state and have been marked as flapping routes.
Status code	The dampening status of the route, which can be one of the following: <ul style="list-style-type: none"> • > – This is the best route among those in the BGP4 route table to the route destination. • d – This route is currently dampened, and thus unusable. • h – The route has a history of flapping and is unreachable now. • * – The route has a history of flapping but is currently usable.
Network	The destination network of the route.
From	The neighbor that sent the route to this device.
Flaps	The number of flaps (state changes) the route has experienced.
Since	The amount of time since the first flap of this route.
Reuse	The amount of time remaining until this route will be un-suppressed and thus be usable again.
Path	The AS-path information for the route.

You can display all dampened routes by entering the **show ip bgp dampened-paths** command.

Displaying the active route map configuration

You can view the active route map configuration (contained in the running configuration) without displaying the entire running configuration by entering the following command at any level of the CLI.

```
Brocade# show route-map
route-map permitnet4 permit 10
  match ip address prefix-list plist1
route-map permitnet1 permit 1
  match ip address prefix-list plist2
route-map setcomm permit 1
  set community 1234:2345 no-export
route-map test111 permit 111
  match address-filters 11
  set community 11:12 no-export
route-map permit1122 permit 12
  match ip address 11
route-map permit1122 permit 13
  match ip address std_22
```

This example shows that the running configuration contains six route maps. Notice that the match and set statements within each route map are listed beneath the command for the route map itself. In this simplified example, each route map contains only one match or set statement.

To display the active configuration for a specific route map, enter a command such as the following, which specifies a route map name.

```
Brocade# show route-map setcomm
route-map setcomm permit 1
  set community 1234:2345 no-export
```

This example shows the active configuration for a route map named "setcomm".

Syntax: **show route-map** [*map-name*]

Displaying BGP4 restart neighbor information

To display BGP4 restart information for BGP4 neighbors, enter the **show ip bgp neighbors** command.

```
Brocade# show ip bgp neighbors
Total number of BGP Neighbors: 6
1  IP Address: 10.50.50.10, AS: 20 (EBGP), RouterID: 10.10.10.20, VRF: default
   State: ESTABLISHED, Time: 0h0m18s, KeepAliveTime: 60, HoldTime: 180
   KeepAliveTimer Expire in 34 seconds, HoldTimer Expire in 163 seconds
   Minimum Route Advertisement Interval: 0 seconds
   RefreshCapability: Received
   GracefulRestartCapability: Received
     Restart Time 120 sec, Restart bit 0
     afi/safi 1/1, Forwarding bit 0
   GracefulRestartCapability: Sent
     Restart Time 120 sec, Restart bit 0
     afi/safi 1/1, Forwarding bit 1
   Messages:   Open   Update   KeepAlive Notification Refresh-Req
```

The text in bold is the BGP4 restart information for the specified neighbor.

Displaying AS4 details

This section describes the use of the following **show** commands, which produce output that includes information about AS4s. Information that reflects AS4s appears in **bold**.

- **show ip bgp neighbor** shows whether the AS4 capability is enabled.
- **show ip bgp attribute-entries** shows AS4 path values and extended community values.
- **show ip bgp** shows the route entries with two and AS4 path information.
- **show ip extcommunity-list** shows the members of the extended community.
- **show route-map** shows the presence of any AS4 configuration data.
- **show ip as-path-access-lists** shows the presence of any AS4 configuration data.
- **show ip bgp config** shows the presence of any AS4 configuration data.

Route entries with four-byte path information

The **show ip bgp** command without of any optional parameters display AS4 path information, as indicated by the bold text in this example.

```
Brocade# show ip bgp
Total number of BGP Routes: 1
Status codes: s suppressed, d damped, h history, * valid, > best, i internal, S
stale
Origin codes: i - IGP, e - EGP, ? - incomplete
   Network          Next Hop          Metric LocPrf Weight Path
*> 10.1.1.0/24      192.168.1.5       1      100    0      90000 100 200 65535
65536 65537 65538 65539 75000
Syntax: show ip bgp
```

Current AS numbers

To display current AS numbers, use the **show ip bgp neighbors** command at any level of the CLI.

Displaying BGP4 information

```

Brocade# show ip bgp neighbors
neighbors          Details on TCP and BGP neighbor connections
Total number of BGP Neighbors: 1
1  IP Address: 192.168.1.1, AS: 7701000 (IBGP), RouterID: 192.168.1.1, VRF
default-vrf
State: ESTABLISHED, Time: 0h3m33s, KeepAliveTime: 60, HoldTime: 180
KeepAliveTimer Expire in 49 seconds, HoldTimer Expire in 177 seconds
Minimal Route Advertisement Interval: 0 seconds
RefreshCapability: Received
Messages:   Open      Update  KeepAlive  Notification  Refresh-Req
Sent       : 1         0        5           0              0
Received: 1         1         5           0              0
Last Update Time: NLRI      Withdraw      NLRI      Withdraw
Tx: ---      ---      Rx: 0h3m33s  ---
Last Connection Reset Reason:Unknown
Notification Sent:      Unspecified
Notification Received: Unspecified
Neighbor NLRI Negotiation:
Peer Negotiated IPV4 unicast capability
Peer configured for IPV4 unicast Routes
Neighbor AS4 Capability Negotiation:
Peer Negotiated AS4 capability
Peer configured for AS4 capability
Neighbor ipv6 MPLS Label Capability Negotiation:
Peer Negotiated ipv6 MPLS Label capability
Peer configured for ipv6 MPLS Label capability
As-path attribute count: 1
Outbound Policy Group:
ID: 1, Use Count: 1
TCP Connection state: ESTABLISHED, flags:00000044 (0,0)
Maximum segment size: 1460
TTL check: 0, value: 0, rcvd: 64
Byte Sent: 148, Received: 203
Local host: 192.168.1.2, Local Port: 179
Remote host: 192.168.1.1, Remote Port: 8041
ISentSeq: 1656867 SendNext: 1657016 TotUnAck: 0
TotSent: 149 ReTrans: 19 UnAckSeq: 1657016

```

Syntax: show ip bgp neighbors

The information related to AS4s and 6PE neighbors is shown in bold text in the previous output.

[Table 15](#) describes the output parameters of the **show ip bgp neighbors** command.

TABLE 15 Output parameters of the **show ip bgp neighbors** command

Field	Description
Total number of BGP Neighbors	Shows the total number of BGP neighbors.
IP Address	Shows the IPv4 address of the neighbor.
AS	Shows the Autonomous System (AS) in which the neighbor resides.
EBGP or IBGP	Shows whether the neighbor session is an IBGP session, an EBGP session, or a confederation EBGP session: <ul style="list-style-type: none"> EBGP – The neighbor is in another AS. EBGP_Confed – The neighbor is a member of another sub-AS in the same confederation. IBGP – The neighbor is in the same AS.
RouterID	Shows the router ID of the neighbor.

TABLE 15 Output parameters of the `show ip bgp neighbors` command (Continued)

Field	Description
VRF	Shows the status of the VRF instance.
State	Shows the state of the router session with the neighbor. The states are from the router's perspective of the session, not the neighbor's perspective. The state can be one of the following values: <ul style="list-style-type: none"> • IDLE – The BGP4 process is waiting to be started. Usually, enabling BGP4 or establishing a neighbor session starts the BGP4 process. A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • ADMND – The neighbor has been administratively shut down. A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • CONNECT – BGP4 is waiting for the connection process for the TCP neighbor session to be completed. • ACTIVE – BGP4 is waiting for a TCP connection from the neighbor. <p>NOTE: If the state frequently changes between CONNECT and ACTIVE, there may be a problem with the TCP connection.</p> <ul style="list-style-type: none"> • OPEN SENT – BGP4 is waiting for an Open message from the neighbor. • OPEN CONFIRM – BGP4 has received an Open message from the neighbor and is now waiting for either a KeepAlive or Notification message. If the router receives a KeepAlive message from the neighbor, the state changes to ESTABLISHED. If the message is a Notification, the state changes to IDLE. • ESTABLISHED – BGP4 is ready to exchange Update messages with the neighbor. If there is more BGP data in the TCP receiver queue, a plus sign (+) is also displayed.
Time	Shows the amount of time this session has been in its current state.
KeepAliveTime	Shows the keepalive time, which specifies how often this router sends KeepAlive messages to the neighbor.
HoldTime	Shows the hold time, which specifies how many seconds the router will wait for a KeepAlive or Update message from a BGP4 neighbor before deciding that the neighbor is dead.
KeepAliveTimer Expire	Shows the time when the keepalive timer is set to expire.
HoldTimer Expire	Shows the time when the hold timer is set to expire.
Minimal Route Advertisement Interval	Shows the minimum time elapsed between the route advertisements to the same neighbor.
RefreshCapability	Shows whether the router has received confirmation from the neighbor that the neighbor supports the dynamic refresh capability.
Messages Sent and Received	Shows the number of messages this router has sent to and received from the neighbor. The display shows statistics for the following message types: <ul style="list-style-type: none"> • Open • Update • KeepAlive • Notification • Refresh-Req
Last Update Time	Shows the list of last time updates were sent and received for the following: <ul style="list-style-type: none"> • NLRIs • Withdraws

TABLE 15 Output parameters of the `show ip bgp neighbors` command (Continued)

Field	Description
Last Connection Reset Reason	Shows the reason for ending the previous session with this neighbor. The reason can be one of the following: <ul style="list-style-type: none"> No abnormal error has occurred. Reasons described in the BGP specifications: <ul style="list-style-type: none"> Message Header Error Connection Not Synchronized Bad Message Length Bad Message Type OPEN Message Error Unsupported Version Number Bad Peer AS Number Bad BGP Identifier Unsupported Optional Parameter Authentication Failure Unacceptable Hold Time Unsupported Capability UPDATE Message Error Malformed Attribute List Unrecognized Well-known Attribute Missing Well-known Attribute Attribute Flags Error Attribute Length Error Invalid ORIGIN Attribute Invalid NEXT_HOP Attribute
Last Connection Reset Reason (continued)	<ul style="list-style-type: none"> Reasons described in the BGP specifications (continued): <ul style="list-style-type: none"> Optional Attribute Error Invalid Network Field Malformed AS_PATH Hold Timer Expired Finite State Machine Error Rcv Notification Reset All Peer Sessions User Reset Peer Session Port State Down Peer Removed Peer Shutdown Peer AS Number Change Peer AS Confederation Change TCP Connection KeepAlive Timeout TCP Connection Closed by Remote <p>TCP Data Stream Error Detected</p>

TABLE 15 Output parameters of the `show ip bgp neighbors` command (Continued)

Field	Description
Notification Sent	<p>Shows an error code corresponding to one of the following errors if the device sends a Notification message from the neighbor. Some errors have subcodes that clarify the reason for the error. The subcode messages are listed underneath the error code messages, wherever applicable.</p> <ul style="list-style-type: none"> • Message Header Error <ul style="list-style-type: none"> • Connection Not Synchronized • Bad Message Length • Bad Message Type • Unspecified • Open Message Error <ul style="list-style-type: none"> • Unsupported Version • Bad Peer AS • Bad BGP Identifier • Unsupported Optional Parameter • Authentication Failure • Unacceptable Hold Time • Unspecified • Update Message Error <ul style="list-style-type: none"> • Malformed Attribute List • Unrecognized Attribute • Missing Attribute • Attribute Flag Error • Attribute Length Error • Invalid Origin Attribute • Invalid NextHop Attribute • Optional Attribute Error • Invalid Network Field • Malformed AS Path • Unspecified • Hold Timer Expired • Finite State Machine Error • Cease • Unspecified
Notification Received	Shows an error code corresponding to one of the listed errors in the Notification Sent field if the device receives a Notification message from the neighbor.
Neighbor NLRI Negotiation	<p>Shows the state of the device's NLRI negotiation with the neighbor. The states can be one of the following:</p> <ul style="list-style-type: none"> • Peer negotiated IPV4 unicast capability • Peer negotiated IPV6 unicast capability • Peer configured for IPV4 unicast routes • Peer configured for IPV6 unicast routes
Neighbor IPv6 MPLS Label Capability Negotiation	<p>Shows the state of the device's IPv6 MPLS label capability negotiation with the neighbor. The states can be one of the following:</p> <ul style="list-style-type: none"> • Peer negotiated IPv6 MPLS Label capability • Peer configured for IPv6 MPLS Label capability
Neighbor AS4 Capability Negotiation	<p>Shows the state of the device's AS4 capability negotiation with the neighbor. The states can be one of the following:</p> <ul style="list-style-type: none"> • Peer negotiated AS4 capability • Peer configured for AS4 capability

TABLE 15 Output parameters of the `show ip bgp neighbors` command (Continued)

Field	Description
As-path attribute count	Shows the count of the AS-path attribute.
Outbound Policy Group	Shows the ID and the count used in the outbound policy group.
TCP Connection state	Shows the state of the connection with the neighbor. The connection can have one of the following states: <ul style="list-style-type: none"> • LISTEN – Waiting for a connection request. • SYN-SENT – Waiting for a matching connection request after having sent a connection request. • SYN-RECEIVED – Waiting for a confirming connection request acknowledgment after having both received and sent a connection request. • ESTABLISHED – Data can be sent and received over the connection. This is the normal operational state of the connection. • FIN-WAIT-1 – Waiting for a connection termination request from the remote TCP, or an acknowledgment of the connection termination request previously sent. • FIN-WAIT-2 – Waiting for a connection termination request from the remote TCP. • CLOSE-WAIT – Waiting for a connection termination request from the local user. • CLOSING – Waiting for a connection termination request acknowledgment from the remote TCP. • LAST-ACK – Waiting for an acknowledgment of the connection termination request previously sent to the remote TCP (which includes an acknowledgment of its connection termination request). • TIME-WAIT – Waiting for the specific time to ensure that the remote TCP received the acknowledgment of its connection termination request. • CLOSED – There is no connection state.
Maximum segment size	Shows the TCP maximum segment size.
TTL check	Shows the TCP TTL check.
Byte Sent	Shows the number of bytes sent.
Byte Received	Shows the number of bytes received.
Local host	Shows the IPv4 address of the router.
Local port	Shows the TCP port that the device is using for the BGP4 TCP session with the neighbor.
Remote host	Shows the IPv4 address of the neighbor.
Remote port	Shows the TCP port the neighbor is using for the BGP4 TCP session with the router.
ISentSeq	Shows the initial send sequence number for the session.
SendNext	Shows the next sequence number to be sent.
TotUnAck	Shows the count of sequence numbers sent by the router that have not been acknowledged by the neighbor.
TotSent	Shows the count of the sequence numbers sent to the neighbor.
ReTrans	Shows the count of the sequence numbers that the device retransmitted because they were not acknowledged.
UnAckSeq	Shows the current acknowledged sequence number.
IRcvSeq	Shows the initial receive sequence number for the session.
RcvNext	Shows the next sequence number expected from the neighbor.

TABLE 15 Output parameters of the `show ip bgp neighbors` command (Continued)

Field	Description
SendWnd	Shows the size of the send window.
TotalRcv	Shows the count of the sequence numbers received from the neighbor.
DupliRcv	Shows the count of the duplicate sequence numbers received from the neighbor.
RcvWnd	Shows the size of the receive window.
SendQue	Shows the count of the sequence numbers in the send queue.
RcvQue	Shows the count of the sequence numbers in the receive queue.
CngstWnd	Shows the number of times the window has changed.

Attribute entries

Use the `show ip bgp attribute-entries` command to see AS4 path values and extended community values, as the following example illustrates. The extended community values in bold reflect AS4s.

```

Brocade# show ip bgp attribute-entries
      Total number of BGP Attribute Entries: 18 (0)
1      Next Hop  :192.168.1.6          MED :1          Origin:INCOMP
      Originator:0.0.0.0          Cluster List:None
      Aggregator:AS Number :0      Router-ID:0.0.0.0      Atomic:None
      Local Pref:100              Communities:Internet
      Extended Community: SOO 300000:3
      AS Path   :90000 80000 (length 11)
      Address: 0x10e4e0c4 Hash:489 (0x03028536), PeerIdx 0
      Links: 0x00000000, 0x00000000, nlri: 0x10f4804a
      Reference Counts: 1:0:1, Magic: 51
2      Next Hop  :192.168.1.5          Metric  :1          Origin:INCOMP
      Originator:0.0.0.0          Cluster List:None
      Aggregator:AS Number :0      Router-ID:0.0.0.0      Atomic:None
      Local Pref:100              Communities:Internet
      Extended Community: RT 200000:2
      AS Path   :90000 75000 (length 11)
      Address: 0x10e4e062 Hash:545 (0x0301e8f6), PeerIdx 0
      Links: 0x00000000, 0x00000000, nlri: 0x10f47ff0
      Reference Counts: 1:0:1, Magic: 49
    
```

Syntax: `show ip bgp attribute-entries`

Extended community

Support for AS4s is reflected in the values for extended community, as shown by the bold text in this output for the `show ip extcommunity-list` command.

```

Brocade# show ip extcommunity-list
ip extcommunity access list 1:
  permit RT 100000:123 SOO 150000:456
mu2#show route-map
route-map test permit 1
  match extcommunity 1
  set ip next-hop 192.168.1.15
route-map test permit 2
  set ip next-hop 192.168.1.101
    
```

Syntax: `show ip extcommunity-list`

AS-path prepend and extended community information

The AS-path prepend and extended community information is shown in this example of the **show route-map** command.

```
Brocade# show route-map
route-map test permit 1
  match ip address 1
  set as-path prepend 75000
  set extcommunity RT 100000:123
  set extcommunity SOO 150000:456
route-map test permit 2
  match ip address 2
  set as-path prepend 80000
Syntax: show route-map [name]
```

The optional *name* parameter lets you name a specific route.

Running configuration

AS4s appear in the display of a running configuration, as shown.

```
Brocade# show ip bgp config
Current BGP configuration:
router bgp
  local-as 7701000
  confederation identifier 120000
  confederation peers 80000
  neighbor 192.168.1.2 remote-as 80000
```

Access lists that contain AS4s

AS4s that exist in access lists are displayed by the command, as shown.

```
Brocade# show ip as-path-access-lists
ip as-path access list abc: 1 entries
  seq 10 permit _75000_
ip as-path access list def: 1 entries
  seq 5 permit _80000_
```

Formats of AS4s in show command output

To display the asdot and asdot+ notation for AS4s, enter the **as-format asdot** or **as-format asdot+** commands before you enter the **show ip bgp** command.

```
Brocade# as-format asdot
Brocade-mu2(config)# show ip bgp
Total number of BGP Routes: 1
Status codes: s suppressed, d damped, h history, * valid, > best, i internal, S
stale
Origin codes: i - IGP, e - EGP, ? - incomplete
   Network      Next Hop      Metric LocPrf Weight Path
*> 10.1.1.0/24   192.168.1.5    1      100     0      1.24464 100 200 655
5 1.0 1.1 1.2 1.3 1.9464 ?
```

Syntax: as-format asdot

```
Brocade# as-format asdot+
Brocade# show ip bgp
Total number of BGP Routes: 1
Status codes: s suppressed, d damped, h history, * valid, > best, i internal, S
stale
Origin codes: i - IGP, e - EGP, ? - incomplete
   Network      Next Hop      Metric LocPrf Weight Path
*> 10.1.1.0/24   192.168.1.5    1      100     0      1.24464 0.100 0.200
0.65535 1.0 1.1 1.2 1.3 1.9464?
```

Syntax: as-format asdot

Displaying route-map continue clauses

This section contains examples of route-map continuation clauses. Both the route map and the routes to which it applies are described.

This example is a simple illustration of route-map continue clauses. If the match clause of either route map instance 5 or 10 matches, the route map traversal continues at instance 100.

```
route-map test permit 5
  match community my_community1
  set comm-list delete my_community1
  continue 100
route-map test permit 10
  match community my_community2
  set comm-list delete my_community2
  continue 100
route-map test permit 100
  match as-path my_aspath
  set community 1234:5678 additive
```

The following example shows the route map “test.” The **show ip bgp route** output shows the consequences of the action in instance 1 (set weight = 10); instance 2 (metric becomes 20); and instance 5 (prepend as_path 300).

Displaying BGP4 information

```
Brocade# show route-map test
route-map test permit 1
  set weight 10
  continue 2
route-map test permit 2
  set metric 20
  continue 3
route-map test permit 3
  set community 10:20
  continue 4
route-map test permit 4
  set community 30:40
  continue 5
route-map test permit 5
  set as-path prepend 300
  continue 6
```

```
Brocade(config-routemap test)# show ip bgp route
Total number of BGP Routes: 1
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
      E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH m:NOT-INSTALLED-MULTIPATH
      S:SUPPRESSED F:FILTERED s:STALE
Prefix      Next Hop      Metric      LocPrf      Weight Status
1          10.8.8.0/24      10.8.8.3      20          100         10      BE
      AS_PATH: 300 200
```

Syntax: `show route-map map-name`

The *map-name* is the name of the route map.

Syntax: `show ip bgp route`

In the following example, the continue clause of instance 1 has been changed so that program flow jumps to instance 5. The resulting BGP4 route only has the weight updated and as-path prepended. These changes show route-map *route name*

Syntax: `route-map`

Syntax: `[no] continue instance number`

Syntax: `show ip bgp route`

In this example, a match clause has been added to instance 8. Because the match clause of instance 8 does not get fired, the search for the next instance continues to the end of the route-map. The set statements set the weight to 10, prepend 300, prepend 100 to the as-path, set the community to none, and set the local preference to 70. The results of this route-map traversal appear in the output of the **show ip bgp route** command.

```

Brocade# show route-map test
route-map test permit 1
  set weight 10
  continue 5
route-map test permit 2
  set metric 20
  continue 3
route-map test permit 3
  set community 10:20
  continue 4
route-map test permit 4
  set community 30:40
  continue 5
route-map test permit 5
  set as-path prepend 300
  continue 6
route-map test permit 6
  set as-path prepend 100
  continue 7
route-map test permit 7
  set community none
  set local-preference 70
  continue 8
route-map test deny 8
  match metric 60
  set metric 40
  continue 9
Brocade(config-routemap test)# show ip bgp route
Total number of BGP Routes: 1
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
      E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH m:NOT-INSTALLED-MULTIPATH
      S:SUPPRESSED F:FILTERED s:STALE
Prefix          Next Hop          Metric      LocPrf      Weight Status
1      10.8.8.0/24      10.8.8.3        0           70          10      BE
      AS_PATH: 100 300 200

```

Syntax: show route-map

Syntax: show ip bgp route

For this example, an existing route map is displayed by the **show route-map** command, then the addition of instance 8 adds a deny parameter but no match clause. As a result, no incoming routes are accepted (see last line of the show output).

Displaying BGP4 information

```
Brocade# show route-map test
route-map test permit 1
  set weight 10
  continue 5
route-map test permit 2
  set metric 20
  continue 3
route-map test permit 3
  set community 10:20
  continue 4
route-map test permit 4
  set community 30:40
  continue 5
route-map test permit 5
  set as-path prepend 300
  continue 6
route-map test permit 6
  set as-path prepend 100
  continue 7
route-map test permit 7
  set community none
  set local-preference 70
  continue 8
Brocade(config-routemap test)#route-map test deny 8
Brocade(config-routemap test)#set metric 40
Brocade(config-routemap test)#continue 9
Brocade(config-routemap test)#show ip bgp route
BGP Routing Table is empty
```

Syntax: `show route-map map-name`

OSPF version 2 (IPv4)

Table 16 displays the individual devices and the OSPF features they support.

TABLE 16 Supported OSPF features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
OSPF	Yes	Yes	No	Yes	Yes	Yes	Yes
OSPF Graceful Restart	Yes	Yes	No	No	No	No	No
OSPF Graceful Restart helper-mode	Yes	Yes	No	Yes	Yes	Yes	Yes
OSPF Dynamic Metric Calculation for LAGs/VE	Yes	Yes	No	Yes	Yes	Yes	Yes
OSPF Point-to-Point Links	Yes	Yes	No	Yes	Yes	Yes	Yes
OSPF Non-Broadcast	Yes	Yes	No	Yes	Yes	Yes	Yes
Router LSAs (Type 1)	Yes	Yes	No	Yes	Yes	Yes	Yes
Network LSAs (Type 2)	Yes	Yes	No	Yes	Yes	Yes	Yes
Interarea prefix LSAs for ABRs (Type 3)	Yes	Yes	No	Yes	Yes	Yes	Yes
Interarea router LSAs for ASBRs (Type 4)	Yes	Yes	No	Yes	Yes	Yes	Yes
Autonomous system external LSAs (Type 5)	Yes	Yes	No	Yes	Yes	Yes	Yes
Link LSAs (Type 8)	Yes	Yes	No	Yes	Yes	Yes	Yes
Intra-area prefix LSAs (Type 9)	Yes	Yes	No	Yes	Yes	Yes	Yes

TABLE 16 Supported OSPF features (Continued)

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
OSPF Distribute List	Yes	Yes	No	Yes	Yes	Yes	Yes
OSPF Administrative Distance Control Using Route Maps	Yes	Yes	No	Yes	Yes	Yes	Yes
OSPF Type 3 Inter-Area Summary-LSA Filter	Yes	Yes	No	No	Yes	Yes	Yes
OSPF Non-stop routing (NSR)	Yes	Yes	No	No	No	No	No
OSPFv3 Virtual-Link Enhancement: Dynamic Tunnel Calculation	Yes	Yes	No	Yes	Yes	Yes	Yes
New encryption code for passwords, authentication keys, and community strings	Yes	Yes	No	No	No	No	No
Support for the show ip ospf interface command with interface filters	Yes	Yes	Yes	Yes	Yes	Yes	Yes
OSPF VRF-Lite for CE routers	Yes	Yes	Yes	Yes	Yes	Yes	Yes
OSPFv2 interfaces to passive state globally	Yes	Yes	No	Yes	Yes	Yes	Yes

OSPF is a link-state routing protocol. The protocol uses link-state advertisements (LSA) to update neighboring routers regarding its interfaces and information on those interfaces. The router floods these LSAs to all neighboring routers to update them regarding the interfaces. Each router maintains an identical database that describes its area topology to help a router determine the shortest path between it and any neighboring router.

The Brocade device supports the following types of LSAs, which are described in RFC 2328 and 3101:

- Router link
- Network link
- Summary link
- Autonomous system (AS) summary link
- AS external link
- Not-So-Stubby Area (NSSA) external link

OSPF is built upon a hierarchy of network components. The highest level of the hierarchy is the **Autonomous System (AS)**. An autonomous system is defined as a number of networks, all of which share the same routing and administration characteristics.


An AS can be divided into multiple **areas** as shown in [Figure 8](#) on page 158. Each area represents a collection of contiguous networks and hosts. Areas limit the area to which link-state advertisements are broadcast, thereby limiting the amount of flooding that occurs within the network. An area is represented in OSPF by either an IP address or a number.

You can further limit the broadcast area of flooding by defining an area range. The area range allows you to assign an aggregate value to a range of IP addresses. This aggregate value becomes the address that is advertised instead all of the individual addresses it represents being advertised. You can assign up to 32 ranges in an OSPF area.

An OSPF router can be a member of multiple areas. Routers with membership in multiple areas are known as **Area Border Routers (ABRs)**. Each ABR maintains a separate topological database for each area the router is in. Each topological database contains all of the LSA databases for each router within a given area. The routers within the same area have identical topological databases. The ABR is responsible for forwarding routing information or changes between its border areas.

An **Autonomous System Boundary Router (ASBR)** is a router that is running multiple protocols and serves as a gateway to routers outside an area and those operating with different protocols. The ASBR is able to import and translate different protocol routes into OSPF through a process known as **redistribution**. For more details on redistribution and configuration examples, refer to [“Enable route redistribution”](#) on page 187.

FIGURE 8 OSPF operating in a network

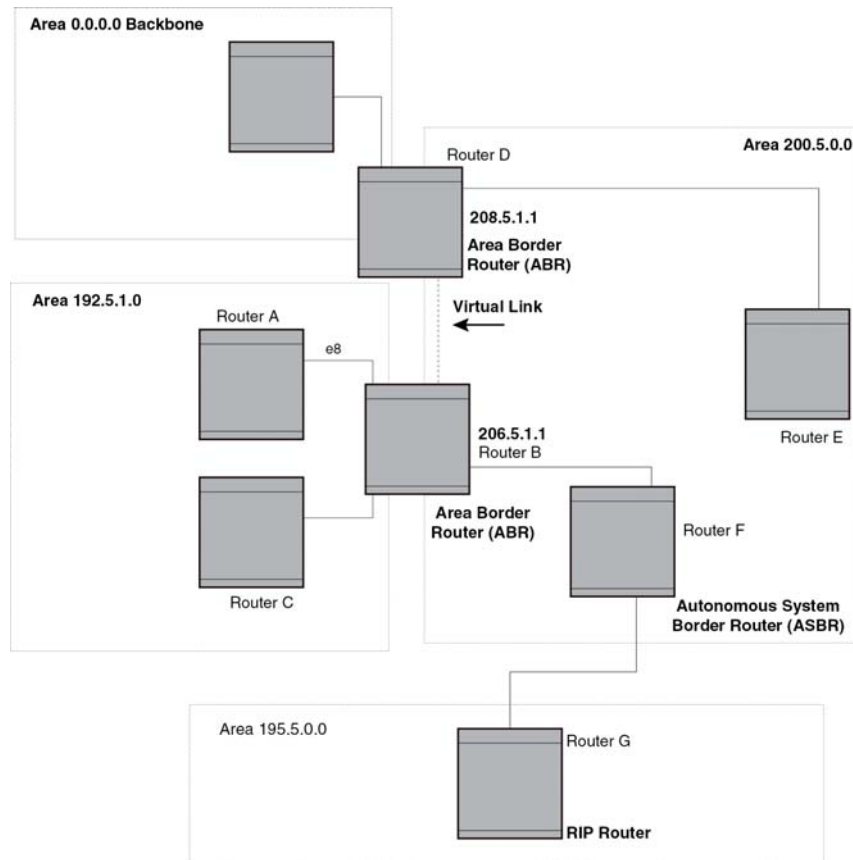

OSPF point-to-point links

In an OSPF point-to-point network, where a direct Layer 3 connection exists between a single pair of OSPF routers, there is no need for Designated and Backup Designated Routers, as is the case in OSPF multi-access networks. Without the need for Designated and Backup Designated routers, a point-to-point network establishes adjacency and converges faster. The neighboring routers become adjacent whenever they can communicate directly. In contrast, in broadcast and non-broadcast multi-access (NBMA) networks, the Designated Router and Backup Designated Router become adjacent to all other routers attached to the network.

To configure an OSPF point-to-point link, refer to [“Configuring an OSPF network type”](#) on page 209.


Designated routers in multi-access networks

In a network that has multiple routers attached, OSPF elects one router to serve as the designated router (DR) and another router on the segment to act as the backup designated router (BDR). This arrangement minimizes the amount of repetitive information that is forwarded on the network by forwarding all messages to the designated router and backup designated routers responsible for forwarding the updates throughout the network.

Designated router election in multi-access networks

In a network with no designated router and no backup designated router, the neighboring router with the highest priority is elected as the DR, and the router with the next largest priority is elected as the BDR, as shown in [Figure 9](#)

FIGURE 9 Designated and backup router election

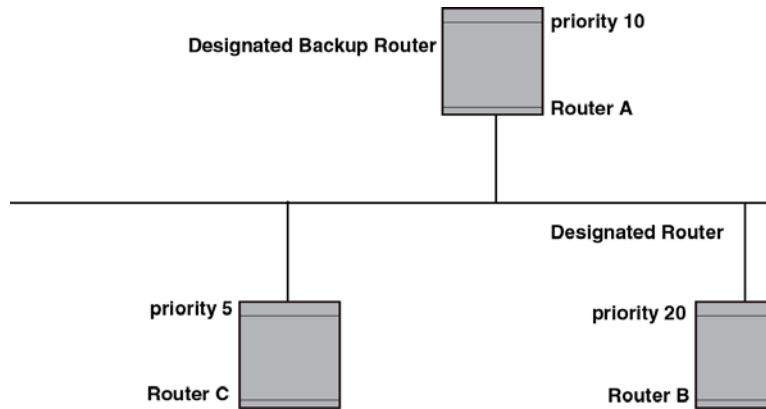


If the DR goes off-line, the BDR automatically becomes the DR. The router with the next highest priority becomes the new BDR. This process is shown in [Figure 10](#).

NOTE

Priority is a configurable option at the interface level. You can use this parameter to help bias one router as the DR.

FIGURE 10 Backup designated router becomes designated router

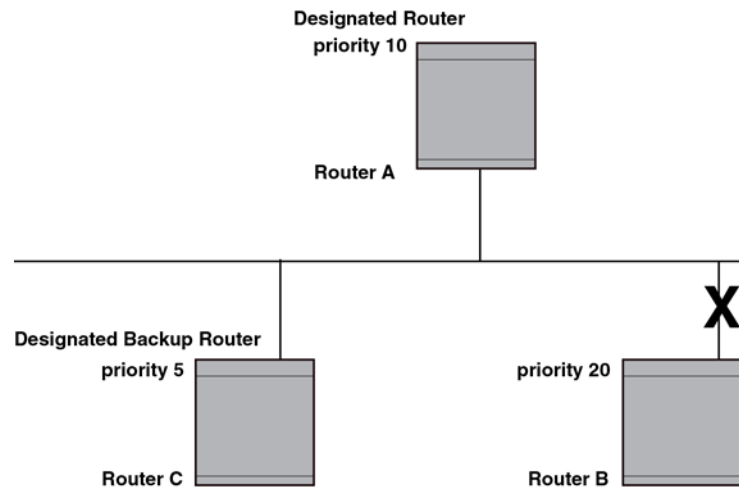

If two neighbors share the same priority, the router with the highest router ID is designated as the DR. The router with the next highest router ID is designated as the BDR.

NOTE

By default, the Brocade device's router ID is the IP address configured on the lowest numbered loopback interface. If the device does not have a loopback interface, the default router ID is the lowest numbered IP address configured on the device.

When multiple routers on the same network are declaring themselves as DRs, then both priority and router ID are used to select the designated router and backup designated routers.

When only one router on the network claims the DR role despite neighboring routers with higher priorities or router IDs, this router remains the DR. This is also true for BDRs.

The DR and BDR election process is performed when one of the following events occurs:

- an interface is in a waiting state and the wait time expires
- an interface is in a waiting state and a hello packet is received that addresses the BDR
- a change in the neighbor state occurs, such as:
 - a neighbor state transitions from ATTEMPT state to a higher state
 - communication to a neighbor is lost
 - a neighbor declares itself to be the DR or BDR for the first time

OSPF RFC 1583 and 2328 compliance

Brocade devices are configured, by default, to be compliant with the RFC 1583 OSPF V2 specification. Brocade devices can also be configured to operate with the latest OSPF standard, RFC 2328.

NOTE


For details on how to configure the system to operate with the RFC 2328, refer to [“Modify OSPF standard compliance setting”](#) on page 207.

Reduction of equivalent AS external LSAs

An OSPF ASBR uses AS External link advertisements (AS External LSAs) to originate advertisements of a route learned from another routing domain, such as a BGP4 or RIP domain. The ASBR advertises the route to the external domain by flooding AS External LSAs to all the other OSPF routers (except those inside stub networks) within the local OSPF Autonomous System (AS).

In some cases, multiple ASBRs in an AS can originate equivalent LSAs. The LSAs are equivalent when they have the same cost, the same next hop, and the same destination. The device optimizes OSPF by eliminating duplicate AS External LSAs in this case. The device with the lower router ID flushes the duplicate External LSAs from its database and thus does not flood the duplicate External LSAs into the OSPF AS. AS External LSA reduction therefore reduces the size of the link state database on the device. The AS External LSA reduction is described in RFC 2328

[Figure 11](#) shows an example of the AS External LSA reduction feature. In this example, Routers D and E are OSPF ASBRs, and thus communicate route information between the OSPF AS, which contains Routers A, B, and C, and another routing domain, which contains Router F. The other routing domain is running another routing protocol, such as BGP4 or RIP. Routers D, E, and F, therefore, are each running both OSPF and either BGP4 or RIP.

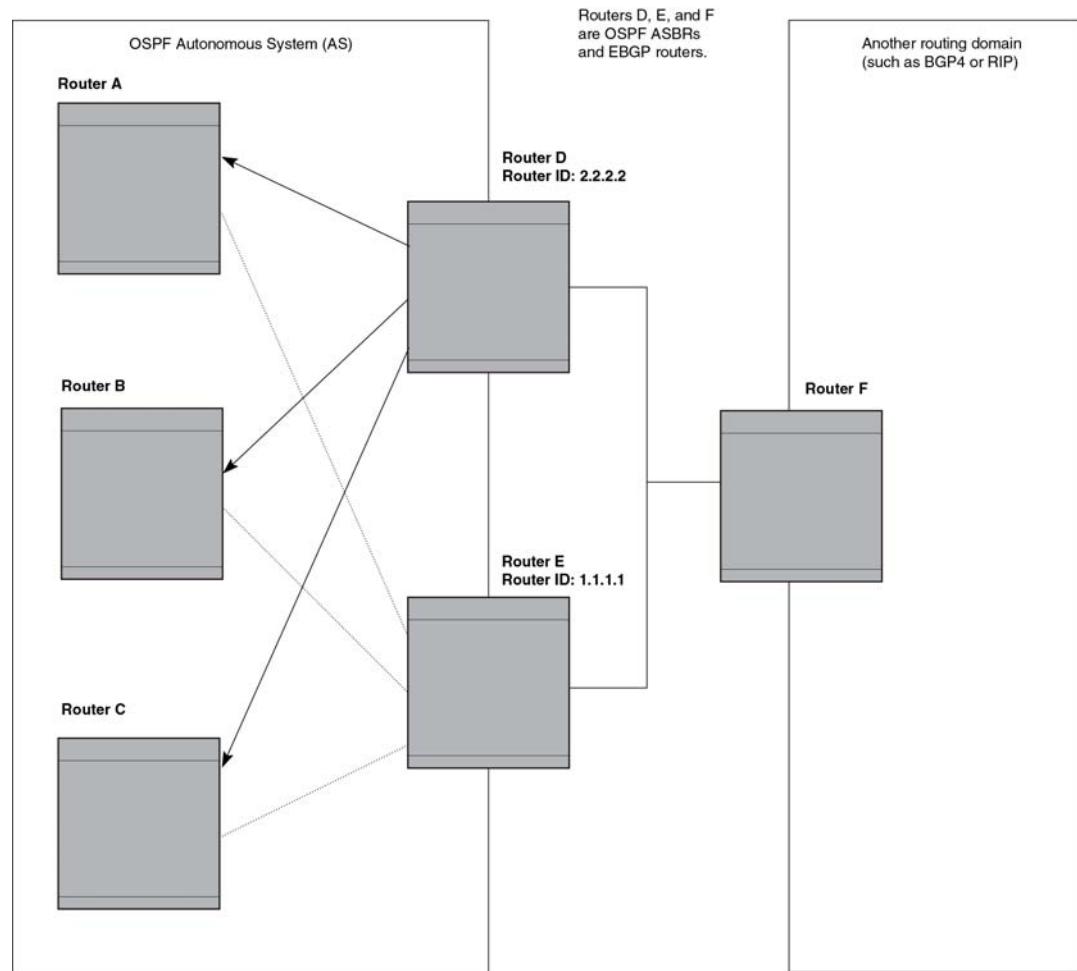FIGURE 11 AS External LSA reduction

Notice that both Router D and Router E have a route to the other routing domain through Router F.

OSPF eliminates the duplicate AS External LSAs. When two or more devices are configured as ASBRs have equal-cost routes to the same next-hop router in an external routing domain, the ASBR with the highest router ID floods the AS External LSAs for the external domain into the OSPF AS, while the other ASBRs flush the equivalent AS External LSAs from their databases. As a result, the overall volume of route advertisement traffic within the AS is reduced and the devices that flush the duplicate AS External LSAs have more memory for other OSPF data. In [Figure 11](#), since Router D has a higher router ID than Router E, Router D floods the AS External LSAs for Router F to Routers A, B, and C. Router E flushes the equivalent AS External LSAs from its database.

Algorithm for AS external LSA reduction

[Figure 11](#) shows an example in which the normal AS External LSA reduction feature is in effect. The behavior changes under the following conditions:

- There is one ASBR advertising (originating) a route to the external destination, but one of the following happens:
 - A second ASBR comes on-line

- A second ASBR that is already on-line begins advertising an equivalent route to the same destination.

In either case above, the router with the higher router ID floods the AS External LSAs and the other router flushes its equivalent AS External LSAs. For example, if Router D is offline, Router E is the only source for a route to the external routing domain. When Router D comes on-line, it takes over flooding of the AS External LSAs to Router F, while Router E flushes its equivalent AS External LSAs to Router F.

- One of the ASBRs starts advertising a route that is no longer equivalent to the route the other ASBR is advertising. In this case, the ASBRs each flood AS External LSAs. Since the LSAs either no longer have the same cost or no longer have the same next-hop router, the LSAs are no longer equivalent, and the LSA reduction feature no longer applies.
- The ASBR with the higher router ID becomes unavailable or is reconfigured so that it is no longer an ASBR. In this case, the other ASBR floods the AS External LSAs. For example, if Router D goes off-line, then Router E starts flooding the AS with AS External LSAs for the route to Router F.

Support for OSPF RFC 2328 Appendix E

Brocade devices support Appendix E in OSPF RFC 2328. Appendix E describes a method to ensure that an OSPF router generates unique link state IDs for type-5 (External) link state advertisements (LSAs) in cases where two networks have the same network address but different network masks.

NOTE

Support for Appendix E of RFC 2328 is enabled automatically and cannot be disabled. No user configuration is required.

Normally, an OSPF router uses the network address alone for the link state ID of the link state advertisement (LSA) for the network. For example, if the router needs to generate an LSA for network 10.1.2.3 255.0.0.0, the router generates ID 10.1.2.3 for the LSA.

However, suppose that an OSPF router needs to generate LSAs for all the following networks:

- 10.0.0.0 255.0.0.0
- 10.0.0.0 255.255.0.0
- 10.0.0.0 255.255.255.0

All three networks have the same network address, 10.0.0.0. Without support for RFC 2328 Appendix E, an OSPF router uses the same link state ID, 10.0.0.0, for the LSAs for all three networks. For example, if the router generates an LSA with ID 10.0.0.0 for network 10.0.0.0 255.0.0.0, this LSA conflicts with the LSA generated for network 10.0.0.0 255.255.0.0 or 10.0.0.0 255.255.255.0. The result is multiple LSAs that have the same ID but that contain different route information.

When appendix E is supported, the router generates the link state ID for a network as the following steps.

1. Does an LSA with the network address as its ID already exist?
 - No – Use the network address as the ID.
 - Yes – Go to [step 2](#).

2. Compare the networks that have the same network address, to determine which network is more specific. The more specific network is the one that has more contiguous one bits in its network mask. For example, network 10.0.0.0 255.255.0.0 is more specific than network 10.0.0.0 255.0.0.0, because the first network has 16 ones bits (255.255.0.0) whereas the second network has only 8 ones bits (255.0.0.0).
 - For the less specific network, use the networks address as the ID.
 - For the more specific network, use the network's broadcast address as the ID. The broadcast address is the network address, with all ones bits in the host portion of the address. For example, the broadcast address for network 10.0.0.0 255.255.0.0 is 10.0.255.255.

If this comparison results in a change to the ID of an LSA that has already been generated, the router generates a new LSA to replace the previous one. For example, if the router has already generated an LSA for network with ID 10.0.0.0 for network 10.0.0.0 255.255.255.0, the router must generate a new LSA for the network, if the router needs to generate an LSA for network 10.0.0.0 255.255.0.0 or 10.0.0.0 255.0.0.0.

OSPF graceful restart

The OSPF Graceful Restart feature provides support for high-availability routing. With this feature enabled, disruptions in forwarding are minimized and route flapping diminished to provide continuous service during times when a router experiences a restart.

With OSPF graceful restart enabled, a restarting router sends special LSAs to its neighbors called grace LSAs. These LSAs are sent to neighbors either before a planned OSPF restart or immediately after an unplanned restart. The grace LSA specifies a grace period for the neighbors of the restarting router to continue using the existing routes to and through the router after a restart. The restarting router comes up, it continues to use its existing OSPF routes as if nothing has occurred. In the background, the router re-acquires its neighbors prior to the restart and recalculates its OSPF routes and replaces them with new routes as necessary. Once the grace period has passed, the adjacent routers return to normal operation.

OSPF Graceful Restart can be enabled in the following configurations:

- **Configuring OSPF Graceful Restart for the Global Instance** – In this configuration all OSPF neighbors other than those used by VRFs are made subject to the Graceful Restart capability. The restart timer set globally does not apply to Graceful Restart on a configured VRF.
- **Configuring OSPF Graceful Restart per VRF** – In this configuration all OSPF neighbors for the specified VRF are made subject to the Graceful Restart capability. The restart timer set for a specific VRF only applies to that VRF.

NOTE

If a 32-slot Brocade NetIron XMR or Brocade MLX series system running a version 03.6.00 or later application image is configured for OSPF graceful restart and intended to be used in switchover or hitless upgrade, the OSPF dead-interval needs to be changed to 60 seconds on OSPF interfaces to ensure that the graceful restart process succeeds without a timeout. Instructions for changing the OSPF dead-interval are provided in [“Modify interface defaults”](#) on page 175.

Hitless upgrade support for OSPF graceful restart

OSPF graceful restart experiences minimal packet loss during hitless upgrade on a non-default VRF. On a default VRF, there is no packet loss during hitless upgrade.

OSPF Stub Router Advertisement

OSPFv2 Stub Router Advertisement is an open standard based feature and it is specified in RFC 3137. This feature, introduced in version 03.2.00, provides a user with the ability to gracefully introduce and remove an OSPFv2 router from the network by controlling when the data traffic can start and stop flowing through the router in case where there are other OSPFv2 routers present on the network providing alternative paths for the traffic. This feature does not work if there is no alternative for the traffic through other OSPFv2 routers. The router can control the data traffic flowing through it by changing the cost of the paths passing through the configured router. By setting the path cost high the traffic will be redirected to other OSPFv2 routers providing a lower cost path. This change in path cost is accomplished by setting the metric of the links advertised in the Router LSA to a maximum value. When the OSPFv2 router is ready to forward the traffic the links are advertised with the real metric value instead of the maximum value.

The feature is useful for avoiding a loss of traffic during short periods when adjacency failures are detected and traffic is rerouted. Using this feature, traffic can be rerouted before an adjacency failure occurs due to common services interruptions such as a router being shutdown for maintenance.

The feature is also useful during router startup because it gives the router enough time to build up its routing table before forwarding traffic. This can be useful where BGP is enabled on the router because it takes time for the BGP routing table to converge.

Version 03.5.00 of the Multi-Service IronWare software introduced an enhancement that allows you to configure and set a metric value for the following LSA types:

- Summary (type 3 and type 4)
- External (type 5 and type 7)
- Opaque (type 10, TE link)

Configuration of this feature is described in [“Configuring OSPF router advertisement”](#) on page 211.

OSPF Shortest Path First throttling

Version 03.2.00 of the Multi-Service IronWare software introduced rapid triggering of SPF calculations with exponential back-off to offer the advantages of rapid convergence without sacrificing stability. As the delay increases, multiple topology changes can occur within a single SPF. This dampens network activity due to frequent topology changes.

This scheduling method starts with an initial value after which a configured delay time is followed. If a topology change event occurs the SPF is schedule after the time specified by the initial value, the router starts a timer for the time period specified by a configured hold time value. If no topology events occur during this hold time, the router returns to using the initial delay time.

If a topology event occurs during the hold time period, the next hold time period is recalculated to a value that is double the initial value. If no topology events occur during this extended hold time, the router resets to its initial value. If an event occurs during this extended hold time, the next hold time is doubled again. The doubling occurs as long as topology events occur during the calculated hold

times until a configured maximum delay time value is reached or no event occurs (which resets the router to the initial hold time). The maximum value is then held until the hold time expires without a topology change event occurring. At any time that a hold time expires without a topology change event occurring, the router reverts to the initial hold value and begins the process all over again.

For example if you set the initial delay timer to 100 milliseconds, the hold timer to 300 and the maximum hold timer to 2000 milliseconds, the following would occur:

If a topology change occurs the initial delay of 100 milliseconds will be observed. If a topology change occurs during the hold time of 300 milliseconds the hold time is doubled to 600 milliseconds. If a topology change event occurs during the 600 millisecond period, the hold time is doubled again to 1200 milliseconds. If a topology change event occurs during the 1200 millisecond period, the hold time is doubled to 2400 milliseconds. Because the maximum hold time is specified as 2000, the value will be held at 2000. This 2000 millisecond period will then repeat as long as topology events occur within the maximum 2000 millisecond hold time. When a maximum hold time expires without a topology event occurring, the router reverts to the initial delay time and the cycle repeats as described.

The purpose of this feature is to use longer SPF scheduling values during network topology instability.

Configuration of this feature is described in [“Configuring OSPF shortest path first throttling”](#) on page 213.

IETF RFC and internet draft support

The implementation of OSPF Graceful Restart supports the following IETF RFC:

- RFC 3623: Graceful OSPF Restart

NOTE

A secondary management module must be installed for the device to function as a graceful restart device. If the device functions as a graceful restart helper device only, there is no requirement for a secondary management module.

For details on how to configure OSPF Graceful Restart, refer to [“Configuring OSPF Graceful Restart”](#) on page 209.

Dynamic OSPF activation and configuration

OSPF is automatically activated when you enable it. The protocol does not require a software reload.

You can configure and save the following OSPF changes without resetting the system:

- All OSPF interface-related parameters (for example: area, hello timer, router dead time cost, priority, re-transmission time, transit delay)
- All area parameters
- All area range parameters
- All virtual-link parameters
- All global parameters
- creation and deletion of an area, interface or virtual link
- Changes to address ranges
- Changes to global values for redistribution
- Addition of new virtual links

OSPF VRF-Lite for customer-edge routers

When a type 3, 5, or 7 LSA is sent from a provider edge (PE) router to a customer edge (CE) router, the DN (down) bit in the LSA options field must be set. This prevents any type 3, 5, or 7 LSA messages sent from the CE router to the PE router from being distributed any farther. The PE router ignores messages with the DN bit set and does not add these routes to the VRF routing table.

When you enable VRF-Lite on the CE router, the DN setting is ignored, allowing the CE router to add these routes to the VRF routing table.

To enable VRF-Lite, enter commands such as the following:

```
Brocade(config)# router ospf vrf 1
Brocade(config-ospf-router-vrf-1)# vrf-lite-capability
```

Syntax: [no] vrf-lite-capability

Use the **no** form of the command to disable VRF-Lite. This applies to the VRF instance only. It does not apply to the default VRF.

NOTE

For vpn4 external routes to be installed on CE routers, the domain-tags on PE routers must be different than the domain-tags on CE routers.

NOTE

This command applies to CE routers only. This command does not apply to PE routers.

Configuring OSPF

To begin using OSPF on the router, perform the steps outlined below.

1. Enable OSPF on the router.
2. Assign the areas to which the router will be attached.
3. Assign individual interfaces to the OSPF areas.
4. Configure route map for route redistribution, if desired.
5. Enable redistribution, if desired.
6. Modify default global and port parameters as required.
7. Modify OSPF standard compliance, if desired.

Configuration rules

The configuration rules are as follows:

- If a router is to operate as an ASBR, you must enable the ASBR capability at the system level.
- Redistribution must be enabled on routers configured to operate as ASBRs.
- All router ports must be assigned to one of the defined areas on an OSPF router. When a port is assigned to an area, all corresponding subnets on that port are automatically included in the assignment.

OSPF parameters

You can modify or set the following global and interface OSPF parameters.

Global parameters

The global OSPF parameters are as follows:

- Modify OSPF standard compliance setting.
- Assign an area.
- Define an area range.
- Define the area virtual link.
- Set global default metric for OSPF.
- Change the reference bandwidth for the default cost of OSPF interfaces.
- Disable or re-enable load sharing.
- Enable or disable default-information-originate.
- Modify Shortest Path First (SPF) timers
- Define external route summarization
- Define redistribution metric type.
- Define redistribution route maps.
- Enable redistribution.
- Change the LSA pacing interval.

- Modify OSPF Traps generated.
- Modify database overflow interval.
- Stub Router advertisement
- Set all the OSPFv2 interfaces to the passive state.

Interface parameters

The interface OSPF parameters are as follows:

- Assign interfaces to an area.
- Define the authentication key for the interface.
- Change the authentication-change interval
- Modify the cost for a link.
- Modify the dead interval.
- Modify MD5 authentication key parameters.
- Modify the priority of the interface.
- Modify the retransmit interval for the interface.
- Modify the transit delay of the interface.

NOTE

You set global level parameters at the OSPF CONFIG Level of the CLI. To reach that level, enter **router ospf...** at the global CONFIG Level. Interface parameters for OSPF are set at the interface CONFIG Level using the CLI command, **ip ospf...**

Enable OSPF on the router

When you enable OSPF on the router, the protocol is automatically activated. To enable OSPF on the router, use the following method.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)#
```

This command launches you into the OSPF router level where you can assign areas and modify OSPF global parameters.

Note regarding disabling OSPF

If you disable OSPF, the device removes all the configuration information for the disabled protocol from the running configuration. Moreover, when you save the configuration to the startup configuration file after disabling one of these protocols, all the configuration information for the disabled protocol is removed from the startup configuration file.

The CLI displays a warning message such as the following.

```
Brocade(config-ospf-router)# no router ospf
router ospf mode now disabled. All ospf config data will be lost when writing to
flash!
```

If you have disabled the protocol but have not yet saved the configuration to the startup configuration file and reloaded the software, you can restore the configuration information by re-entering the **router ospf** command to enable the protocol. If you have already saved the configuration to the startup configuration file and reloaded the software, the information is gone.

If you are testing an OSPF configuration and are likely to disable and re-enable the protocol, you might want to make a backup copy of the startup configuration file containing the protocol's configuration information. This way, if you remove the configuration information by saving the configuration after disabling the protocol, you can restore the configuration by copying the backup copy of the startup configuration file onto the flash memory.

Assign OSPF areas

Once OSPF is enabled on the system, you can assign areas. Assign an IP address or number as the **area ID** for each area. The area ID is representative of all IP addresses (subnets) on a router port. Each port on a router can support one area.

An area can be **normal**, a **stub**, or a **Not-So-Stubby Area (NSSA)**:

- **Normal** – OSPF routers within a normal area can send and receive External Link State Advertisements (LSAs).
- **Stub** – OSPF routers within a stub area cannot send or receive External LSAs. In addition, OSPF routers in a stub area must use a default route to the area's Area Border Router (ABR) or Autonomous System Boundary Router (ASBR) to send traffic out of the area.
- **NSSA** – The ASBR of an NSSA can import external route information into the area.
 - ASBRs redistribute (import) external routes into the NSSA as type 7 LSAs. Type-7 External LSAs are a special type of LSA generated only by ASBRs within an NSSA, and are flooded to all the routers within only that NSSA.
 - ABRs translate type 7 LSAs into type 5 External LSAs, which can then be flooded throughout the AS. You can configure address ranges on the ABR of an NSSA so that the ABR converts multiple type-7 External LSAs received from the NSSA into a single type-5 External LSA.

When an NSSA contains more than one ABR, OSPF elects one of the ABRs to perform the LSA translation for NSSA. OSPF elects the ABR with the highest router ID. If the elected ABR becomes unavailable, OSPF automatically elects the ABR with the next highest router ID to take over translation of LSAs for the NSSA. The election process for NSSA ABRs is automatic.

Example

To set up the OSPF areas shown in [Figure 8](#) on page 158, use the following method.

```
Brocade(config-ospf-router)# area 192.5.1.0
Brocade(config-ospf-router)# area 200.5.0.0
Brocade(config-ospf-router)# area 195.5.0.0
Brocade(config-ospf-router)# area 0.0.0.0
Brocade(config-ospf-router)# write memory
```

Syntax: `[no] area num | ip-addr`

The `num | ip-addr` parameters specify the area number, which can be a number or in IP address format. If you specify a number, the number can be from 0 – 2,147,483,647.

In versions of the Multi-Service IronWare software prior to version 03.2.01, up to 18 OSPF areas are supported. Version 03.2.01 of the Multi-Service IronWare software and later support up to 200 OSPF areas

Assign a totally stubby area

By default, the device sends summary LSAs (LSA type 3) into stub areas. You can further reduce the number of link state advertisements (LSA) sent into a stub area by configuring the device to stop sending summary LSAs (type 3 LSAs) into the area. You can disable the summary LSAs when you are configuring the stub area or later after you have configured the area.

This feature disables origination of summary LSAs, but the device still accepts summary LSAs from OSPF neighbors and floods them to other neighbors. The device can form adjacencies with other routers regardless of whether summarization is enabled or disabled for areas on each router.

When you enter a command to disable the summary LSAs, the change takes effect immediately. If you apply the option to a previously configured area, the device flushes all of the summary LSAs it has generated (as an ABR) from the area.

NOTE

This feature applies only when the device is configured as an Area Border Router (ABR) for the area. To completely prevent summary LSAs from being sent to the area, disable the summary LSAs on each OSPF router that is an ABR for the area.

To disable summary LSAs for a stub area, enter commands such as the following.

```
Brocade(config-ospf-router)# area 40 stub 99 no-summary
```

Syntax: [no] area *num* | *ip-addr* stub *cost* [no-summary]

The *num* | *ip-addr* parameter specifies the area number, which can be a number or in IP address format. If you specify a number, the number can be from 0 – 2,147,483,647.

The **stub cost** parameter specifies an additional cost for using a route to or from this area and can be from 1 – 16777215. There is no default. Normal areas do not use the cost parameter.

The **no-summary** parameter applies only to stub areas and disables summary LSAs from being sent into the area.

Assign a Not-So-Stubby Area (NSSA)


The OSPF Not So Stubby Area (NSSA) feature enables you to configure OSPF areas that provide the benefits of stub areas, but that also are capable of importing external route information. OSPF does not flood external routes from other areas into an NSSA, but does translate and flood route information from the NSSA into other areas such as the backbone.

NSSAs are especially useful when you want to summarize Type-5 External LSAs (external routes) before forwarding them into an OSPF area. The OSPF specification (RFC 2328) prohibits summarization of Type-5 LSAs and requires OSPF to flood Type-5 LSAs throughout a routing domain. When you configure an NSSA, you can specify an address range for aggregating the external routes that the NSSA's ABR exports into other areas.

The implementation of NSSA is based on RFC 3101.

Figure 12 shows an example of an OSPF network containing an NSSA.

FIGURE 12 OSPF network containing an NSSA

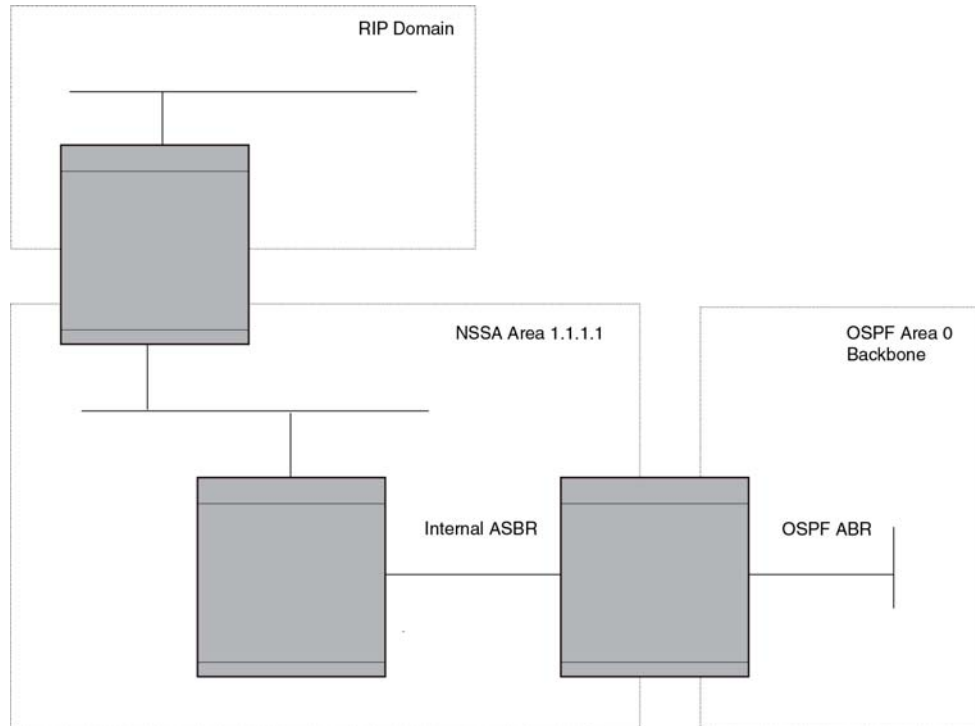

This example shows two routing domains, a RIP domain and an OSPF domain. The ASBR inside the NSSA imports external routes from RIP into the NSSA as Type-7 LSAs, which the ASBR floods throughout the NSSA.

The ABR translates the Type-7 LSAs into Type-5 LSAs. If an area range is configured for the NSSA, the ABR also summarizes the LSAs into an aggregate LSA before flooding the Type-5 LSAs into the backbone.

Since the NSSA is partially “stubby” the ABR does not flood external LSAs from the backbone into the NSSA. To provide access to the rest of the Autonomous System (AS), the ABR generates a default Type-7 LSA into the NSSA.

Configuring an NSSA

To configure OSPF area 10.1.1.1 as an NSSA, enter the following commands.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# area 10.1.1.1 nssa 1
Brocade(config-ospf-router)# write memory
```

Syntax: `[no] area area-id nssa` `[[nssa-ext-metric] [default-information-originate [metric metric-value | metric-type type-value]] [no-redistribution] [translator-always] [translator-interval stability-interval]]`

The `area-id` parameter specifies the area and has the format `xx` or `xx.xxxx`. For example, `49` and `49.2211` are valid area IDs.

The `nssa-ext-metric` parameter specifies the NSSA's advertised external route metric.

The **default-information-originate metric** *metric-value* parameter indicates the cost of the default LSA that originated into the NSSA area. The range is from 1 to 16777215.

The **default-information-originate metric-type** *type-value* parameter indicates the default external LSA type that originated into the NSSA area. The default type is type-2.

The **no-summary** option directs the router to not import type-3 summary LSAs into the NSSA area. The default operation is to import summary LSAs into an NSSA area.

The **no-redistribution** option prevents a NSSA Area Border Router (ABR) from generating external (type-7) LSA into an NSSA area. By default redistribution is enabled in a NSSA.

NOTE

Use this option when an ASBR generates type-5 LSA into normal areas and does not generate type-7 LSA into NSSA area.

The **translator-always** option configures the translator-role. By default, **translator-always** option is not set. The translator role by default is candidate.

The **translator-interval stability-interval** parameter configures the time interval for which an elected NSSA translator continues to perform its duties even after its NSSA translator role has been deposited by another router. By default, the stability-interval is 40 seconds and its range is from 10 to 60 seconds.

NOTE

The device does not inject the default route into an NSSA by default.

To configure additional parameters for OSPF interfaces in the NSSA, use the **ip ospf area...** command at the interface level of the CLI.

Disabling the router to perform translations for NSSA LSAs

In version 03.2.01 of the Multi-Service IronWare software, a command was added to allow you to disable the router to perform translations for NSSA LSAs. When this command is used, type 7 NSSA external LSAs are not translated into type 5 external LSAs. This command is useful when the router is an area border router with many NSSA areas, and does not need to export the NSSA external routes into the backbone.

The following command enables this feature.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# no nssa-translator
```

Syntax: [no] nssa-translator

Configuring an address range for the NSSA

If you want the ABR that connects the NSSA to other areas to summarize the routes in the NSSA before translating them into Type-5 LSAs and flooding them into the other areas, configure an address range. The ABR creates an aggregate value based on the address range. The aggregate value becomes the address that the ABR advertises instead of advertising the individual addresses represented by the aggregate. You can configure up to 32 ranges in an OSPF area.

To configure an address range in NSSA 10.1.1.1, enter the following commands. This example assumes that you have already configured NSSA 10.1.1.1.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# area 10.1.1.1 range 10.157.22.1 255.255.0.0
Brocade(config-ospf-router)# write memory
```


Syntax: `[no] area num | ip-addr range ip-addr ip-mask [advertise | not-advertise]`

The `num | ip-addr` parameter specifies the area number, which can be in IP address format. If you specify a number, the number can be from 0 – 2,147,483,647.

The **range** `ip-addr` parameter specifies the IP address portion of the range. The software compares the address with the significant bits in the mask. All network addresses that match this comparison are summarized in a single route advertised by the router.

The `ip-mask` parameter specifies the portions of the IP address that a route must contain to be summarized in the summary route. In the example above, all networks that begin with 209.157 are summarized into a single route.

The **advertise | not-advertise** parameter specifies whether you want the device to send type 3 LSAs for the specified range in this area. The default is **advertise**.

Assigning an area range (optional)

You can assign a **range** for an area, but it is not required. Ranges allow a specific IP address and mask to represent a range of IP addresses within an area, so that only that reference range address is advertised to the network, instead of all the addresses within that range. Each area can have up to 32 range addresses.

Example

To define an area range for subnets on 10.45.5.1 and 10.45.6.2, enter the following command.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# area 10.45.5.1 range 10.45.0.0 255.255.0.0
Brocade(config-ospf-router)# area 10.45.6.2 range 10.45.0.0 255.255.0.0
```

Syntax: `[no] area num | ip-addr range ip-addr ip-mask`

The `num | ip-addr` parameter specifies the area number, which can be in IP address format.

The **range** `ip-addr` parameter specifies the IP address portion of the range. The software compares the address with the significant bits in the mask. All network addresses that match this comparison are summarized in a single route advertised by the router.

The `ip-mask` parameter specifies the portions of the IP address that a route must contain to be summarized in the summary route. In the example above, all networks that begin with 193.45 are summarized into a single route.

Assigning an area cost (optional parameter)

You can assign a **cost** for an area, but it is not required. To consolidate and summarize routes at an area boundary, use the **area range cost** command in router configuration mode.

If the **cost** parameter is specified, it will be used (overriding the computed cost) to generate the summary LSA. If the **cost** parameter is not specified, then the existing range metric computation max or min cost of routes falling under this range will be used to generate summary LSA.

NOTE

The **area** should be already configured before using this command.

Example

Creates an area range entry with ip address 10.1.1.1 and network mask 255.255.255.0 with the area-id 10.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# area 10 range 10.1.1.1 255.255.255.0
```

Modifies the address range status to **DoNotAdvertise**. Neither the individual intra-area routes falling under range nor the ranged prefix is advertised as summary LSA.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# area 10 range 10.1.1.1 255.255.255.0 not-advertise
```

Modifies the address range status to advertise and a Type 3 summary link-state advertisement (LSA) can be generated for this address range.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)#area 10 range 10.1.1.1 255.255.255.0 advertise
```

Modifies the address range status to advertise and assign cost for this area range to 10.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)#area 10 range 10.1.1.1 255.255.255.0 advertise cost
10
```

Modifies the address range status to not-advertise and cost from 10 to 5.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# area 10 range 10.1.1.1 255.255.255.0 not-advertise
cost 5
```

Removes the cost from the area range. The area range will be advertised with computed cost which is the max/min(based on RFC 1583 compatibility) of all individual intra-area routes falling under this range.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# no area 10 range 10.1.1.1 255.255.255.0 cost 5
```

Removes the area range.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# no area 10 range 10.1.1.1 255.255.255.0
```

NOTE

This command does not work in incremental fashion. So both the optional parameters have to be configured each time. Otherwise it will take the default value.

Syntax: `[no] area num | ip-addr range ip-addr ip-mask [advertise | not-advertise] cost cost-value`

The *num* | *ip-addr* parameter specifies the area number, which can be in IP address format.

The **range** *ip-addr* parameter specifies the IP address portion of the range. The software compares the address with the significant bits in the mask. All network addresses that match this comparison are summarized in a single route advertised by the router.

The *ip-mask* parameter specifies the portions of the IP address that a route must contain to be summarized in the summary route. In the example above, all networks that begin with 193.45 are summarized into a single route.

The **advertise** parameter sets the address range status to advertise and generates a Type 3 summary link-state advertisement (LSA). If at least a single route falls under the range, a ranged LSA will be advertised.

The `not-advertise` parameter sets the address range status to `DoNotAdvertise`. Neither the individual intra-area routes falling under range nor the ranged prefix is advertised as summary LSA.

The **cost** `cost-value` parameter specifies the cost-value to be used while generating type-3 summary LSA. If the cost value is configured, then configured cost is used while generating the summary LSA. If the cost value is not configured, then computed range cost will be used. The cost-value ranges from 1 - 16777215.

To disable this function, use the **no** form of this command.

Assigning interfaces to an area

Once you define OSPF areas, you can assign interfaces to the areas. All router ports must be assigned to one of the defined areas on an OSPF router. When a port is assigned to an area, all corresponding subnets on that port are automatically included in the assignment.

To assign interface 1/8 of Router A to area 10.5.0.0 and then save the changes, enter the following commands.

```
RouterA(config)# interface e 1/8
RouterA(config-if-e10000-1/8)# ip ospf area 10.5.0.0
RouterA(config-if-e10000-1/8)# write memory
```

Setting all OSPFv2 interfaces to the passive state

You can set all the Open Shortest Path First Version 2 (OSPFv2) interfaces to the default passive state using the **default-passive-interface** command. When you configure the interfaces as passive, the interfaces drop all the OSPFv2 control packets.

To set all the OSPFv2 interfaces to passive, enter the following command.

```
Brocade# configure terminal
Brocade(config)# router ospf vrf A
Brocade(config-ospf-router-vrf-A)# default-passive-interface
```

Syntax: `[no] default-passive-interface`

Modify interface defaults

OSPF has interface parameters that you can configure. For simplicity, each of these parameters has a default value. No change to these default values is required except as needed for specific network configurations.

Port default values can be modified using the following CLI commands at the interface configuration level of the CLI:

- **ip ospf area** *ip-addr*
- **ip ospf auth-change-wait-time** *secs*
- **ip ospf authentication-key** *string*
- **ip ospf cost** *num*
- **ip ospf database-filter** *all out*
- **ip ospf dead-interval** *value*
- **ip ospf hello-interval** *value*

- `ip ospf md5-authentication key-activation-wait-time num | key-id num key string`
- `ip ospf mtu-ignore`
- `ip ospf passive`
- `ip ospf active`
- `ip ospf priority value`
- `ip ospf retransmit-interval value`
- `ip ospf transmit-delay value`

For a complete description of these parameters, see the summary of OSPF port parameters in the next section.

OSPF interface parameters

The following parameters apply to OSPF interfaces:

TABLE 17 OSPF interface parameter output descriptions.

Table 0.1:

area	Assigns an interface to a specific area. You can assign either an IP address or number to represent an OSPF Area ID. If you assign a number, it can be any value from 0 – 2,147,483,647.
auth-change-wait-time	OSPF gracefully implements authentication changes to allow all routers to implement the change and thus prevent disruption to neighbor adjacencies. During the authentication-change interval, both the old and new authentication information is supported. The default authentication-change interval is 300 seconds (5 minutes). You change the interval to a value from 0 – 14400 seconds.
authentication-key <i>string</i>	By default, the authentication key is encrypted. If you want the authentication key to be in clear text, insert a 0 between key and <i>string</i> . For example, Brocade (config-if-e10000-1/8)# ip ospf authentication-key 0 morningadmin The software adds a prefix to the authentication key string in the configuration. For example, the following portion of the code has the encrypted code “2”. ip ospf authentication-key 2 \$on-o The prefix can be one of the following: <ul style="list-style-type: none"> • 0 = the key string is not encrypted and is in clear text • 1 = the key string uses proprietary simple cryptographic 2-way algorithm • 2 = the key string uses proprietary base64 cryptographic 2-way algorithm (only for Brocade NetIron XMR and Brocade MLX series devices)
cost	Indicates the overhead required to send a packet across an interface. You can modify the cost to differentiate between 100 Mbps, 1Gbps, and 10 Gbps. The default cost is calculated by dividing 100 million by the bandwidth. For 10 Mbps links, the cost is 10. The cost for 100 Mbps, 1Gbps, and 10 Gbps links is 1, because the speed of 100 Mbps and 10Gbps was not in use at the time the OSPF cost formula was devised.
database-filter	Blocks all outbound LSAs on the OSPF interface.

Table 0.1:

dead-interval:	Indicates the number of seconds that a neighbor router waits for a hello packet from the current router before declaring the router down. The value can be from 40– 65535 seconds. The default is 40 seconds. Beginning with version 03.2.00 of the Multi-Service IronWare software, the rules described in “Rules for OSPF dead interval and hello interval timers” on page 178 apply regarding this timer.
hello-interval	Represents the length of time between the transmission of hello packets. The value can be from 1 – 65535 seconds. The default is 10 seconds. Beginning with version 03.2.00 of the Multi-Service IronWare software, the rules described in “Rules for OSPF dead interval and hello interval timers” on page 178 apply regarding this timer.
MD5-authentication activation wait time	The number of seconds the device waits until placing a new MD5 key into effect. The wait time provides a way to gracefully transition from one MD5 key to another without disturbing the network. The wait time can be from 0 – 14400 seconds. The default is 300 seconds (5 minutes).
MD5-authentication key <i>string</i>	<p>The MD5 key is a number from 1 – 255 and identifies the MD5 key that is being used. This parameter is required to differentiate among multiple keys defined on a router.</p> <p>By default, the authentication key is encrypted. If you want the authentication key to be in clear text, insert a 0 between key and <i>string</i>. For example,</p> <pre>Brocade(config-if-e10000-1/8)# ip ospf 1 md-5-authentication key-id 5 key 2 morningadmin</pre> <p>The software adds a prefix to the authentication key string in the configuration. For example, the following portion of the code has the encrypted code “2”.</p> <pre>ip ospf 1 md-5-authentication key-id 5 key 2 \$on-o</pre> <p>The prefix can be one of the following:</p> <ul style="list-style-type: none"> • 0 = the key string is not encrypted and is in clear text • 1 = the key string uses proprietary simple cryptographic 2-way algorithm. • 2 = the key string uses proprietary base64 cryptographic 2-way algorithm (only for Brocade Netron XMRBrocade MLX series devices)
mtu-ignore	A database description packet is rejected if the interface MTU specified in the DBD packet is greater than the MTU of the interface shared between the neighbors. To disable the mismatch condition set “mtu-ignore”. By default, the mismatch detection is enabled
passive	<p>When you configure an OSPF interface to be passive, that interface does not send or receive OSPF route updates. By default, all OSPF interfaces are active and thus can send and receive OSPF route information. Since a passive interface does not send or receive route information, the interface is in effect a stub network. OSPF interfaces are active by default.</p> <p>Note: This option affects all IP subnets configured on the interface. If you want to disable OSPF updates only on some of the IP subnets on the interface, use the ospf-ignore or ospf-passive parameter with the ip address command.</p>

Table 0.1:

active	When you configure an OSPFv2 interface to be active, that interface sends or receives all the control packets and forms the adjacency. By default, the ip ospf active command is disabled. Whenever you configure the OSPF interfaces to be passive using the default-passive-interface command, all the OSPF interfaces stop sending and receiving control packets. To send and receive packets over specific interfaces, you can use the ip ospf active command.
priority	Allows you to modify the priority of an OSPF router. The priority is used when selecting the designated router (DR) and backup designated routers (BDRs). The value can be from 0 – 255. The default is 1. If you set the priority to 0, the device does not participate in DR and BDR election.
retransmit-interval	The time between retransmissions of link-state advertisements (LSAs) to adjacent routers for this interface. The value can be from 0 – 3600 seconds. The default is 5 seconds.
transit-delay	The time it takes to transmit Link State Update packets on this interface. The value can be from 0 – 3600 seconds. The default is 1 second.

Rules for OSPF dead interval and hello interval timers

Beginning with version 03.2.00 of the Multi-Service IronWare software, the following rules apply regarding these timers:

- If both the **hello-interval** and **dead-interval** parameters are configured, they will each be set to the values that you have configured.
- If the **hello-interval** parameter is configured, but not the **dead-interval** parameter, the **dead-interval** parameter will be set to a value that is 4 times the value set for the **hello-interval**.
- If the **dead-interval** parameter is configured, but not the **hello-interval** parameter, the **hello-interval** parameter will be set to a value that is 1/4 the value set for the **dead-interval**. The minimum value for the **hello-interval** is 1.

Change the timer for OSPF authentication changes

When you make an OSPF authentication change, the software uses the authentication-change timer to gracefully implement the change. The software implements the change in the following ways:

- **Outgoing OSPF packets** – After you make the change, the software continues to use the old authentication to send packets, during the remainder of the current authentication-change interval. After this, the software uses the new authentication for sending packets.
- **Inbound OSPF packets** – The software accepts packets containing the new authentication and continues to accept packets containing the older authentication for two authentication-change intervals. After the second interval ends, the software accepts packets only if they contain the new authentication key.

The default authentication-change interval is 300 seconds (5 minutes). You change the interval to a value from 0 – 14400 seconds.

OSPF provides graceful authentication change for all the following types of authentication changes in OSPF:

- Changing authentication methods from one of the following to another of the following:

- Simple text password
- MD5 authentication
- No authentication
- Configuring a new simple text password or MD5 authentication key
- Changing an existing simple text password or MD5 authentication key

To change the authentication-change interval, enter a command such as the following at the interface configuration level of the CLI.

```
Brocade(config-if-e10000-2/5)# ip ospf auth-change-wait-time 400
```

Syntax: [no] ip ospf auth-change-wait-time secs

The secs parameter specifies the interval and can be from 0 - 14400 seconds. The default is 300 seconds (5 minutes).

NOTE

For backward compatibility, the `ip ospf md5-authentication key-activation-wait-time seconds` command is still supported.

Block flooding of outbound LSAs on specific OSPF interfaces

By default, the device floods all outbound LSAs on all the OSPF interfaces within an area. You can configure a filter to block outbound LSAs on an OSPF interface. This feature is particularly useful when you want to block LSAs from some, but not all, of the interfaces attached to the area.

This command blocks all outbound LSAs. Beginning with version 03.6.00, the command has been enhanced to provide options for selective blocking of LSAs.

After you apply filters to block the outbound LSAs, the filtering occurs during the database synchronization and flooding. When a filtering configuration is changed on a interface, all adjacencies on the interface are set to the Extstart state to restart the database exchange process. In cases where an LSA has already been flooded on an interface prior to application of the LSA filter, the LSA will not be flushed out from the remote neighbors. In this situation the user must clear the link state database and the adjacencies on all remote neighbors to flush out the leaked LSAs or wait for the LSAs to be aged out.

If you remove the filters, the blocked LSAs are automatically re-flooded. You do not need to reset OSPF to re-flood the LSAs.

NOTE

You cannot block LSAs on virtual links, and LSA filtering is not supported on sham links.

To apply a filter to an OSPF interface to block flooding of outbound LSAs on the interface, enter the following command at the Interface configuration level for that interface.

```
Brocade(config-if-e10000-1/1)# ip ospf database-filter all out
```

The command in this example blocks all outbound LSAs on the OSPF interface configured on port 1/1.

Syntax: [no] ip ospf database-filter {all | all-external [allow-default | allow-default-and-type4] | all-summary-external [allow-default | allow-default-and-type4] out

The **all** parameter directs the router to block all outbound LSAs on the OSPF interface.

The **all-external** option (introduced in version 03.6.00) directs the router to allow the following LSAs: Router, Network, Opq-Area-TE, Opq-Link-Graceful and Type-3 Summary while it blocks all Type-4 and Type-5 LSAs unless directed by one of the following keywords:

allow-default – allows only Type-5 default LSAs.

allow-default-and-type4 – allows Type-5 default LSAs and all Type 4 LSAs.

The **all-summary-external** option (introduced in version 03.6.00) directs the router to allow the following LSAs: Router, Network, Opq-Area-TE and Opq-Link-Graceful while it blocks all Type-3, Type-4 and Type-5 LSAs unless directed by one of the following keywords:

allow-default – allows only Type-3 or Type-5 default LSAs.

allow-default-and-type4 – allows Type-3 or Type-5 default LSAs and all Type 4 LSAs.

All Type-7 LSAs are always filtered if the **ip ospf database-filter** command is enabled.

By default, OSPF LSA filtering is disabled on all interfaces.

To remove the filter, enter a command such as the following.

```
Brocade(config-if-e10000-1/1)# no ip ospf database-filter all out
```

Assign virtual links

All ABRs (area border routers) must have either a direct or indirect link to the OSPF backbone area (0.0.0.0 or 0). If an ABR does not have a physical link to the area backbone, the ABR can configure a **virtual link** to another router within the same area, which has a physical connection to the area backbone.

The path for a virtual link is through an area shared by the neighbor ABR (router with a physical backbone connection), and the ABR requiring a logical connection to the backbone.

Two parameters fields must be defined for all virtual links—transit area ID and neighbor router:

- The **transit area ID** represents the shared area of the two ABRs and serves as the connection point between the two routers. This number should match the area ID value.
- The **neighbor router** field is the router ID (IP address) of the router that is physically connected to the backbone, when assigned from the router interface requiring a logical connection. When assigning the parameters from the router with the physical connection, the router ID is the IP address of the router requiring a logical connection to the backbone.

NOTE

By default, the Brocade device's router ID is the IP address configured on the lowest numbered loopback interface. If the device does not have a loopback interface, the default router ID is the lowest numbered IP address configured on the device. When you establish an area virtual link, you must configure it on both of the routers (both ends of the virtual link).

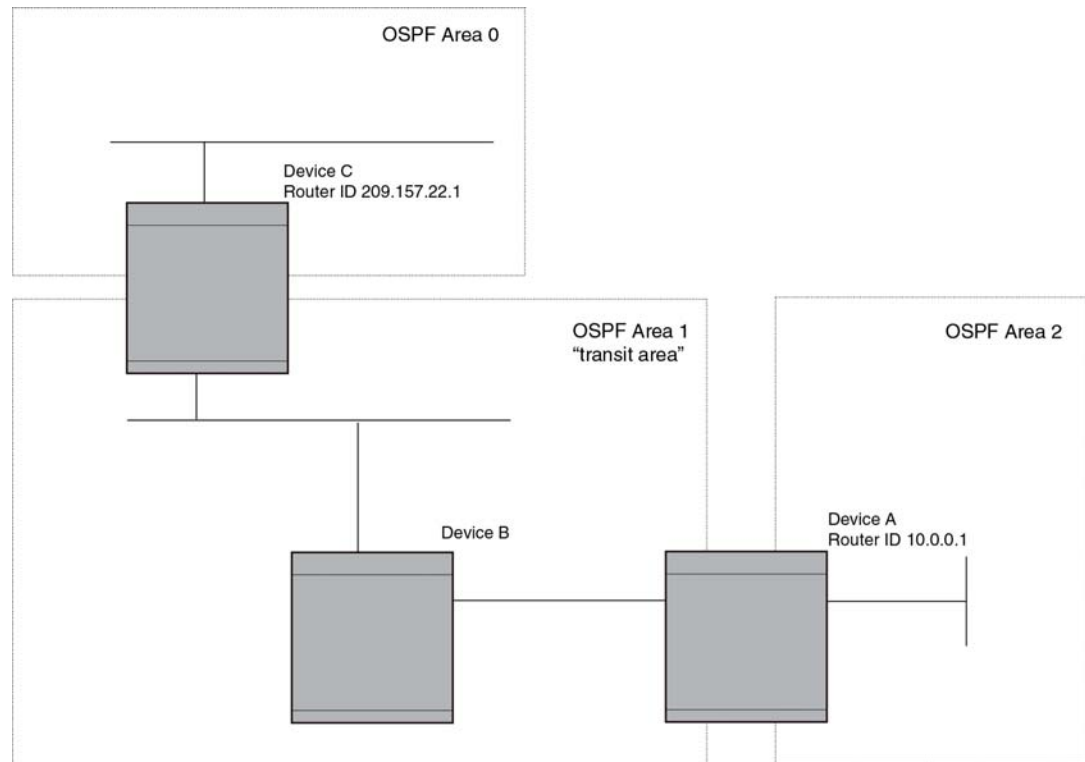
FIGURE 13 Defining OSPF virtual links within a network**Example**

Figure 13 shows an OSPF area border router, Device A, that is cut off from the backbone area (area 0). To provide backbone access to Device A, you can add a virtual link between Device A and Device C using area 1 as a transit area. To configure the virtual link, you define the link on the router that is at each end of the link. No configuration for the virtual link is required on the routers in the transit area.

To define the virtual link on Device A, enter the following commands.

```
Brocade A(config)# router ospf
Brocade A(config-ospf-router)# area 2
Brocade A(config-ospf-router)# area 1
Brocade A(config-ospf-router)# area 1 virtual-link 10.157.22.1
Brocade A(config-ospf-router)# write memory
```

Enter the following commands to configure the virtual link on Device C.

```
Brocade C(config)# router ospf
Brocade C(config-ospf-router)# area 0
Brocade C(config-ospf-router)# area 1
Brocade C(config-ospf-router)# area 1 virtual-link 10.0.0.1
```

Syntax: [no] area *ip-addr* | *num* virtual-link *router-id*
 [authentication-key *string* | dead-interval *num* | hello-interval *num* | retransmit-interval
num | transmit-delay *num* | md5-authentication key-activation-wait-time *num* |
 md5-authentication key-id *num* key [0|1] *string*]

The **area** *ip-addr* | *num* parameters specify the transit area.

The **virtual-link** *router-id* parameter specifies the router ID of the OSPF router at the remote end of the virtual link. To display the router ID on a device, enter the **show ip** command.

Refer to “[Modify virtual link parameters](#)” on page 182 for descriptions of the optional parameters.

Modify virtual link parameters

OSPF has some parameters that you can modify for virtual links. Notice that these are the same parameters as the ones you can modify for physical interfaces.

You can modify default values for virtual links using the following CLI command at the **OSPF router level** of the CLI, as shown in the following syntax:

Syntax: **[no] area** *ip-addr* | *num* **virtual-link** *router-id*
dead-interval *num* | **hello-interval** *num* | **retransmit-interval** *num* | **transmit-delay** *num* |
authentication-key *string* |
md5-authentication key *key-string* |
md5-authentication key-activation-wait-time *num*

The parameters are described in the following table.

Virtual link parameter descriptions

You can modify the following virtual link interface parameters:

TABLE 18 Virtual link parameter descriptions.

Table 0.2:

<i>area ip-addr</i> <i>num</i>	The IP address or number of the transit area.
<i>virtual-link router-id</i>	The router ID of the OSPF router at the remote end of the virtual link.
<i>dead-interval num</i>	The number of seconds that a neighbor router waits for a hello packet from the current router before declaring the router down. The value can be from 1 – 65535 seconds. The default is 40 seconds. Refer to “ Rules for OSPF dead interval and hello interval timers ” on page 178 for more information about this timer.
<i>hello-interval num</i>	The length of time between the transmission of hello packets. The range is 1 – 65535 seconds. The default is 10 seconds.
<i>retransmit-interval num</i>	The interval between the re-transmission of link state advertisements to router adjacencies for this interface. The range is 0 – 3600 seconds. The default is 5 seconds.

Table 0.2:

transmit-delay <i>num</i>	The period of time it takes to transmit Link State Update packets on the interface. The range is 0 – 3600 seconds. The default is 1 second.
authentication-key <i>string</i>	<p>This parameter allows you to assign different authentication encryption methods on a port-by-port basis. OSPF supports three methods of authentication for each interface: none, simple encryption, and base 64 encryption. Only one encryption method can be active on an interface at a time.</p> <p>The simple encryption and base 64 encryption methods requires you to configure an alphanumeric password on an interface. The password can be up to eight characters long. All OSPF packets transmitted on the interface contain this password. All OSPF packets received on the interface are checked for this password. If the password is not present, then the packet is dropped.</p> <p>By default, the authentication key is encrypted. If you want the authentication key to be in clear text, insert a 0 between key and <i>string</i>. For example,</p> <pre>Brocade C(config-ospf-router)# area 1 virtual-link 10.0.0.1 authentication-key 0 afternoon</pre> <p>The software adds a prefix to the authentication key string in the configuration. For example, the following portion of the code has the encrypted code “2”.</p> <pre>area 1 virtual-link 10.12.12.25 authentication-key 2 \$on-o</pre> <p>The prefix can be one of the following:</p> <ul style="list-style-type: none"> • 0 = the key string is not encrypted and is in clear text • 1 = the key string uses proprietary simple cryptographic 2-way algorithm • 2 = the key string uses proprietary base64 cryptographic 2-way algorithm (only for Brocade NetIron XMR and Brocade MLX series devices)
md5-authentication key <i>string</i>	<p>The MD5 key is a number from 1 – 255 and identifies the MD5 key that is being used. This parameter is required to differentiate among multiple keys defined on a router. When MD5 is enabled, the key-string is an alphanumeric password of up to 16 characters that is later encrypted and included in each OSPF packet transmitted. You must enter a password in this field when the system is configured to operate with either simple or MD5 authentication.</p> <p>By default, the MD5 authentication key is encrypted. If you want the authentication key to be in clear text, insert a 0 between key and <i>string</i>. For example,</p> <pre>Brocade C(config-ospf-router)# area 1 virtual-link 10.0.0.1 md5-authentication key-id 5 key evening</pre> <p>The software adds a prefix to the authentication key string in the configuration. For example, the following portion of the code has the encrypted code “2”.</p> <pre>area 1 virtual-link 10.12.12.25 md-5-authentication key-id 5 key 2 \$on-o</pre> <p>The prefix can be one of the following:</p> <ul style="list-style-type: none"> • 0 = the key string is not encrypted and is in clear text • 1 = the key string uses proprietary simple cryptographic 2-way algorithm • 2 = the key string uses proprietary base64 cryptographic 2-way algorithm (only for Brocade NetIron XMR and Brocade MLX series devices)
md5-authentication wait time	<p>This parameter determines when a newly configured MD5 authentication key is valid. This parameter provides a graceful transition from one MD5 key to another without disturbing the network. All new packets transmitted after the key activation wait time interval use the newly configured MD5 Key. OSPF packets that contain the old MD5 key are accepted for up to five minutes after the new MD5 key is in operation.</p> <p>The range for the key activation wait time is from 0 – 14400 seconds. The default value is 300 seconds.</p>

Changing the reference bandwidth for the cost on OSPF interfaces

Each interface on which OSPF is enabled has a cost associated with it. The device advertises its interfaces and their costs to OSPF neighbors. For example, if an interface has an OSPF cost of ten, the device advertises the interface with a cost of ten to other OSPF routers.

By default, an interface's OSPF cost is based on the port speed of the interface. The cost is calculated by dividing the reference bandwidth by the port speed. The default reference bandwidth is 100 Mbps, which results in the following default costs:

- 10 Mbps port – 10
- All other port speeds – 1

You can change the reference bandwidth, to change the costs calculated by the software.

The software uses the following formula to calculate the cost:

$$\text{Cost} = \text{reference-bandwidth} / \text{interface-speed}$$

If the resulting cost is less than 1, the software rounds the cost up to 1. The default reference bandwidth results in the following costs:

- 10 Mbps port's cost = $100/10 = 10$
- 100 Mbps port's cost = $100/100 = 1$
- 1000 Mbps port's cost = $100/1000 = 0.10$, which is rounded up to 1
- 10 Gbps port's cost = $100/10000 = 0.01$, which is rounded up to 1

The bandwidth for interfaces that consist of more than one physical port is calculated as follows:

- LAG group – The combined bandwidth of all the ports.
- Virtual interface – The combined bandwidth of all the ports in the port-based VLAN that contains the virtual interface.

The default reference bandwidth is 100 Mbps. You can change the reference bandwidth to a value from 1 – 4294967.

If a change to the reference bandwidth results in a cost change to an interface, the device sends a link-state update to update the costs of interfaces advertised by the device.

NOTE

If you specify the cost for an individual interface, the cost you specify overrides the cost calculated by the software.

Interface types to which the reference bandwidth does not apply

Some interface types are not affected by the reference bandwidth and always have the same cost regardless of the reference bandwidth in use:

- The cost of a loopback interface is always 1.
- The cost of a virtual link is calculated using the Shortest Path First (SPF) algorithm and is not affected by the auto-cost feature.
- The bandwidth for tunnel interfaces is 9 Kbps and is also subject to the auto-cost reference bandwidth setting.

Changing the reference bandwidth

To change the reference bandwidth, enter a command such as the following at the OSPF configuration level of the CLI.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# auto-cost reference-bandwidth 500
```

The reference bandwidth specified in this example results in the following costs:

- 10 Mbps port's cost = $500/10 = 50$
- 100 Mbps port's cost = $500/100 = 5$
- 1000 Mbps port's cost = $500/1000 = 0.5$, which is rounded up to 1

The costs for 10 Mbps and 100 Mbps ports change as a result of the changed reference bandwidth. Costs for higher-speed interfaces remain the same.

Syntax: [no] auto-cost reference-bandwidth *num* | use-active-ports

The *num* parameter specifies the reference bandwidth and can be a value from 1 – 4294967. The default is 100.

To restore the reference bandwidth to its default value and thus restore the default costs of interfaces to their default values, enter the following command.

```
Brocade(config-ospf-router)# no auto-cost reference-bandwidth
```

Determining cost calculation for active ports only on LAG and VE interfaces

The default operation is for cost calculation of OSPF interfaces to be based upon all configured ports. There is also an option for the **auto-cost reference-bandwidth** command for the calculation of OSPF costs on active ports of LAG and VE interfaces. This option allows you to calculate cost based on the ports that are currently active. The following example enables cost calculation for currently active ports.

```
Brocade(config-ospf-router)# auto-cost use-active-ports
```

The **use-active-ports** option enables cost calculation for currently active ports only. This option does not have any effect on non-VE or non-LAG interfaces. The default operation is for costs to be based on configured ports.

Define redistribution filters

Route redistribution imports and translates different protocol routes into a specified protocol type. On the device, redistribution is supported for static routes, IS-IS, OSPF, RIP, and BGP4. OSPF redistribution supports the import of static, IS-IS, RIP, and BGP4 routes into OSPF routes.


NOTE

The device advertises the default route into OSPF even if redistribution is not enabled, and even if the default route is learned through an IBGP neighbor. IBGP routes (including the default route) are not redistributed into OSPF by OSPF redistribution (for example, by the OSPF **redistribute** command).

In [Figure 14](#) on page 186, an administrator wants to configure the device acting as the ASBR (Autonomous System Boundary Router) between the RIP domain and the OSPF domain to redistribute routes between the two domains.

NOTE

The ASBR must be running both RIP and OSPF protocols to support this activity.

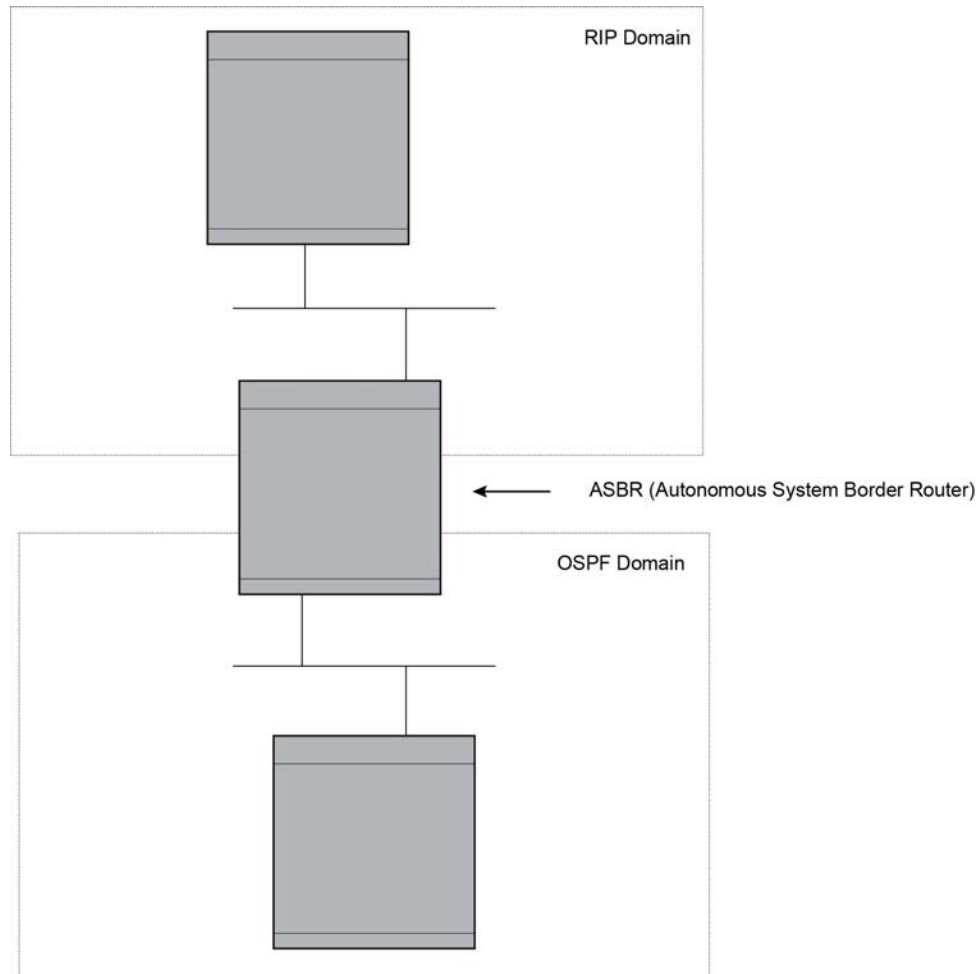FIGURE 14 Redistributing OSPF and static routes to RIP routes

You also have the option of specifying import of just IS-IS, RIP, OSPF, BGP4, or static routes, as well as specifying that only routes for a specific network or with a specific cost (metric) be imported, as shown in the command syntax below.

Syntax: [no] redistribute bgp | connected | rip | static [route-map map-name]

NOTE

Prior to software release 04.1.00, the **redistribution** command is used instead of **redistribute**.

For example, to enable redistribution of RIP and static IP routes into OSPF, enter the following commands.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# redistribute rip
Brocade(config-ospf-router)# redistribute static
Brocade(config-ospf-router)# write memory
```

Modify default metric for redistribution

The default metric is a global parameter that specifies the cost applied to all OSPF routes by default. The default value is 10. You can assign a cost from 1 – 65535.

NOTE

You also can define the cost on individual interfaces. The interface cost overrides the default cost.

To assign a default metric of 4 to all routes imported into OSPF, enter the following commands.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# default-metric 4
```

Syntax: default-metric *value*

The *value* can be from 1 – 15. The default is 10.

Enable route redistribution

NOTE

Do not enable redistribution until you have configured the redistribution route map. Otherwise, you might accidentally overload the network with routes you did not intend to redistribute.

To enable redistribution of RIP and static IP routes into OSPF, enter the following commands.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# redistribute rip
Brocade(config-ospf-router)# redistribute static
Brocade(config-ospf-router)# write memory
```

Example using a route map

To configure a route map and use it for redistribution of routes into OSPF, enter commands such as the following.

```
Brocade(config)# ip route 10.1.0.0 255.255.0.0 10.95.7.30
Brocade(config)# ip route 10.2.0.0 255.255.0.0 10.95.7.30
Brocade(config)# ip route 10.3.0.0 255.255.0.0 10.95.7.30
Brocade(config)# ip route 10.4.0.0 255.255.0.0 10.95.6.30
Brocade(config)# ip route 10.5.0.0 255.255.0.0 10.95.6.30
Brocade(config)# ip route 10.6.0.0 255.255.0.0 10.95.6.30
Brocade(config)# ip route 10.7.0.0 255.255.0.0 10.95.6.30 5
Brocade(config)# route-map abc permit 1
Brocade(config-routemap abc)# match metric 5
Brocade(config-routemap abc)# set metric 8
Brocade(config-routemap abc)# router ospf
Brocade(config-ospf-router)# redistribute static route-map abc
```

The commands in this example configure some static IP routes, then configure a route map and use the route map for redistributing static IP routes into OSPF.

The **ip route** commands configure the static IP routes. The **route-map** command begins configuration of a route map called “abc”. The number indicates the route map entry (called the “instance”) you are configuring. A route map can contain multiple entries. The software compares routes to the route map entries in ascending numerical order and stops the comparison once a match is found.

The **match** command in the route map matches on routes that have 5 for their metric value (cost). The **set** command changes the metric in routes that match the route map to 8.

The **redistribute static** command enables redistribution of static IP routes into OSPF, and uses route map “abc” to control the routes that are redistributed. In this example, the route map allows a static IP route to be redistributed into OSPF only if the route has a metric of 5, and changes the metric to 8 before placing the route into the OSPF route table.

The following command shows the result of the redistribution. Since only one of the static IP routes configured above matches the route map, only one route is redistributed. Notice that the route’s metric is 5 before redistribution but is 8 after redistribution.

```
Brocade# show ip ospf database external
```

Index	Aging	LS ID	Router	Netmask	Metric	Flag
1	2	10.4.0.0	10.10.10.60	ffff0000	80000008	0000

Syntax: [no] redistribute bgp | connected | rip | isis [level-1 | level-1-2 | level-2] | static [route-map map-name]

The **bgp | connected | rip | isis | static** parameter specifies the route source.

The **route-map map-name** parameter specifies the route map name. The following match parameters are valid for OSPF redistribution:

- **match ip address | next-hop acl-num**
- **match metric num**
- **match tag tag-value**

NOTE

A match tag can take up to 16 tags. During the execution of a route-map a match on any tag value in the list is considered a successful match.

The following set parameters are valid for OSPF redistribution:

- **set ip next hop ip-addr**
- **set metric [+ | -]num | none**
- **set metric-type type-1 | type-2**
- **set tag tag-value**

NOTE

You must configure the route map before you configure a redistribution that uses the route map.

NOTE

When you use a route map for route redistribution, the software disregards the permit or deny action of the route map.

NOTE


For an external route that is redistributed into OSPF through a route map, the metric value of the route remains the same unless the metric is set by a **set metric** command inside the route map. The **default-metric num** command has no effect on the route. This behavior is different from a route that is redistributed without using a route map. For a route redistributed without using a route map, the metric is set by the **default-metric num** command.

Disable or re-enable load sharing

Brocade devices can load share among up to eight equal-cost IP routes to a destination. By default, IP load sharing is enabled. The default is 4 equal-cost paths but you can specify from 2 – 8 paths.

The router software can use the route information it learns through OSPF to determine the paths and costs. [Figure 15](#) shows an example of an OSPF network containing multiple paths to a destination (in this case, R1).

FIGURE 15 Example OSPF network with four equal-cost paths

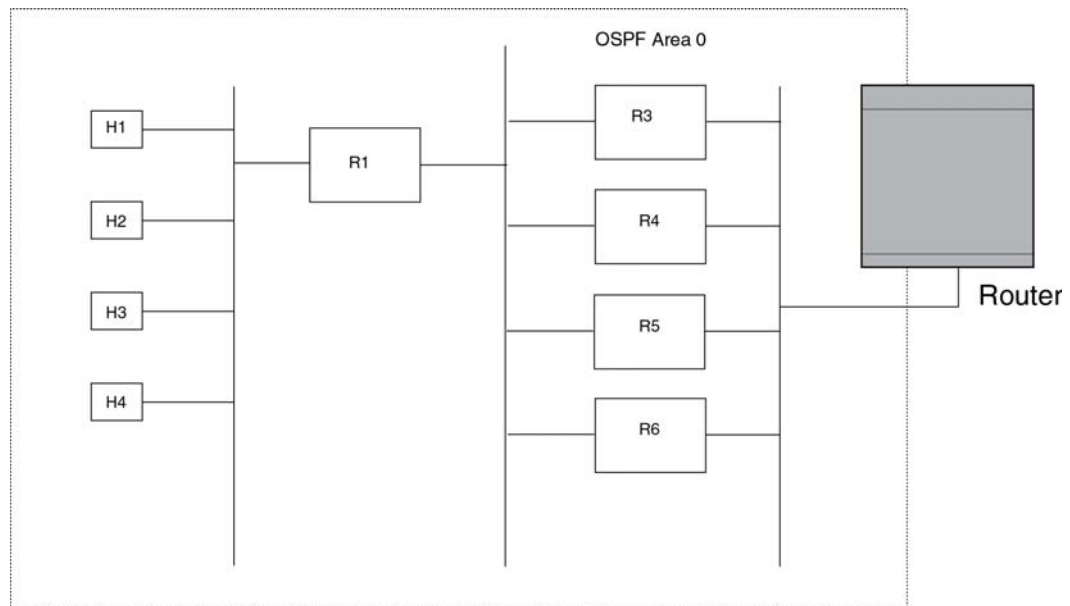

In the example in [Figure 15](#), the device has four paths to R1:

- Router ->R3
- Router ->R4
- Router ->R5
- Router ->R6

Normally, the device will choose the path to the R1 with the lower metric. For example, if the metric for R3 is 1400 and the metric for R4 is 600, the device will always choose R4.

However, suppose the metric is the same for all four routers in this example. If the costs are the same, the router now has four equal-cost paths to R1. To allow the router to load share among the equal cost routes, enable IP load sharing. The software supports four equal-cost OSPF paths by default when you enable load sharing. You can specify from 2 – 8 paths.

NOTE

The device is not source routing in these examples. The device is concerned only with the paths to the next-hop routers, not the entire paths to the destination hosts.

OSPF load sharing is enabled by default when IP load sharing is enabled.

Configure external route summarization

When the device is an OSPF Autonomous System Boundary Router (ASBR), you can configure it to advertise one external route as an aggregate for all redistributed routes that are covered by a specified address range.

When you configure an address range, the range takes effect immediately. All the imported routes are summarized according to the configured address range. Imported routes that have already been advertised and that fall within the range are flushed out of the AS and a single route corresponding to the range is advertised.

If a route that falls within a configured address range is imported by the device, no action is taken if the device has already advertised the aggregate route; otherwise the device advertises the aggregate route. If an imported route that falls within a configured address range is removed by the device, no action is taken if there are other imported routes that fall within the same address range; otherwise the aggregate route is flushed.

You can configure up to 32 address ranges. The device sets the forwarding address of the aggregate route to zero and sets the tag to zero.

If you delete an address range, the advertised aggregate route is flushed and all imported routes that fall within the range are advertised individually.

If an external LSDB overflow condition occurs, all aggregate routes are flushed out of the AS, along with other external routes. When the device exits the external LSDB overflow condition, all the imported routes are summarized according to the configured address ranges.

NOTE

If you use redistribution filters in addition to address ranges, the device applies the redistribution filters to routes first, then applies them to the address ranges.

NOTE

If you disable redistribution, all the aggregate routes are flushed, along with other imported routes.

NOTE

This option affects only imported, type 5 external routes. A single type 5 LSA is generated and flooded throughout the AS for multiple external routes. Type 7-route redistribution is not affected by this feature. All type 7 routes will be imported (if redistribution is enabled). To summarize type 7 LSAs or exported routes, use NSSA address range summarization.

To configure a summary address for OSPF routes, enter commands such as the following.

```
Brocade(config-ospf-router)# summary-address 10.1.0.0 255.255.0.0
```

The command in this example configures summary address 10.1.0.0, which includes addresses 10.1.1.0, 10.1.2.0, 10.1.3.0, and so on. For all of these networks, only the address 10.1.0.0 is advertised in external LSAs.

Syntax: `summary-address ip-addr ip-mask`

The *ip-addr* parameter specifies the network address.

The *ip-mask* parameter specifies the network mask.

To display the configured summary addresses, enter the following command at any level of the CLI.

```
Brocade)# show ip ospf config
OSPF Redistribution Address Ranges currently defined:
Range-Address      Subnetmask
10.0.0.0           255.0.0.0
10.0.1.0           255.255.255.0
10.0.2.0           255.255.255.0
```

Syntax: show ip ospf config

Configure default route origination

When the device is an OSPF Autonomous System Boundary Router (ASBR), you can configure it to automatically generate a default external route into an OSPF routing domain. This feature is called “default route origination” or “default information origination”.

By default, the device does not advertise the default route into the OSPF domain. If you want the device to advertise the OSPF default route, you must explicitly enable default route origination.

When you enable OSPF default route origination, the device advertises a type 5 default route that is flooded throughout the AS (except stub areas and NSSAs). In addition, internal NSSA ASBRs advertise their default routes as translatable type 7 default routes.

The device advertises the default route into OSPF even if OSPF route redistribution is not enabled, and even if the default route is learned through an IBGP neighbor. The router will not, however, originate default if the active default route is learned from an OSPF router in the same domain.

NOTE

The device never advertises the OSPF default route, regardless of other configuration parameters, unless you explicitly enable default route origination using the following method.

If the device is an ASBR, you can use the “always” option when you enable the default route origination. The always option causes the ASBR to create and advertise a default route if it does not already have one configured.

If default route origination is enabled and you disable it, the default route originated by the device is flushed. Default routes generated by other OSPF routers are not affected. If you re-enable the feature, the feature takes effect immediately and thus does not require you to reload the software.

NOTE

The ABR (device) will not inject the default route into an NSSA by default and the command described in this section will not cause the device to inject the default route into the NSSA. To inject the default route into an NSSA, use the **area num | ip-addr nssa default-information-originate** command. Refer to [“Assign a Not-So-Stubby Area \(NSSA\)”](#) on page 170.

To enable default route origination, enter the following command.

```
Brocade(config-ospf-router)# default-information-originate
```

To disable the feature, enter the following command.

```
Brocade(config-ospf-router)# no default-information-originate
```

Syntax: [no] default-information-originate [always] [metric value] [metric-type type]

The **always** parameter advertises the default route regardless of whether the router has a default route. This option is disabled by default.

The **metric value** parameter specifies a metric for the default route. If this option is not used, the default metric is used for the route.

The **metric-type type** parameter specifies the external link type associated with the default route advertised into the OSPF routing domain. The *type* can be one of the following:

- type1 – Type 1 external route
- type2 – Type 2 external route

If you do not use this option, the default redistribution metric type is used for the route type.

NOTE

If you specify a metric and metric type, the values you specify are used even if you do not use the **always** option.

The **route-map** parameter overrides other options. If **set** commands for **metric** and **metric-type** are specified in the route-map, the command-line values of metric and metric-type if specified, are ignored” for clarification.

The **route-map rmap** parameter specifies the route map reference.

The corresponding route-map should be created before configuring the **route-map** option along with the **default-information-originate**. If the corresponding route-map was not been created beforehand, then the an error message will be displayed stating that the route-map must be created.

NOTE

The route-map option cannot be used with a non-default address in the match conditions. The default-route LSA shall not be generated if a default route is not present in the routing table and a **match ip address** condition for an existing non-default route is configured in the route-map. The **match ip-address** command in the route-map is a no-op operation for the default information originate command.

Supported match and set conditions

Table 19 and Table 20 list the supported **match** and **set** conditions of a normal route-map configuration:

TABLE 19 Match Conditions

Match Conditions	
ip nexthop prefix-list	<i>prefixList</i>
ip nexthop	<i>accessList</i>
interface	<i>interfaceName</i>
metric	<i>metricValue</i>
tag	<i>routeTagValue</i>
protocol-type	<i>protocol route type and (or) sub-type value</i>
route-type	<i>route type (IS-IS sub-type values)</i>

TABLE 20 Set Conditions

Set Conditions:	
metric	<i>metricValue</i>
metric-type	<i>type1/type2</i>
tag	<i>routeTagValue</i>

OSPF non-stop routing

The graceful restart feature supported by open shortest path first (OSPF) maintains area topology and dataflow. Though the network requires neighboring routers to support graceful restart and perform hitless failover, the graceful restart feature may not be supported by all routers in the network. To eliminate this dependency, the non-stop routing (NSR) feature is supported on Brocade NetIron XMR and Brocade MLX series devices. NSR does not require support from neighboring routers to perform hitless failover.

If the active management module fails, the standby management module takes over and maintains the current OSPF routes, link-state advertisements (LSAs), and neighbor adjacencies, so that there is no loss of existing traffic to the OSPF destination.

Synchronization of critical OSPF elements

All types of LSAs and the neighbor information are synchronized to the standby module using the NSR synchronization library and IPC mechanism to transmit and receive packets.

Link state database synchronization

When the active management module fails, the standby management module takes over from the active management module with the identical OSPF link state database it had before the failure to ensure non-stop routing. The next shortest path first (SPF) run after switchover yields the same result in routes as the active module had before the failure and OSPF protocol requires that all routers in the network to have identical databases.

LSA delayed acknowledging

When an OSPF router receives LSAs from its neighbor, it acknowledges the LSAs. After the acknowledgement is received, the neighbor removes this router from its retransmission list and stops resending the LSAs.

In the case of NSR, the router fails after receiving the LSA from its neighbor and has acknowledged that neighbor upon receipt of an LSA, and the LSA synchronization to the standby module is completed. In this case, the standby module when taking over from the active module does not have that LSA in its database and the already acknowledged neighbor does not retransmit that LSA. For this reason, the NSR-capable router waits for LSA synchronization of the standby module to complete (Sync-Ack) and then acknowledges the neighbor that sent the LSA.

LSA syncing and packing

When the LSA processing is completed on the active management module and the decision is made to install the LSA in its link state database (LSDB), OSPF synchronizes that LSA to the standby module. OSPF checks the current state of the database entry whether or not it is marked for deletion. After checking the database state, OSPF packs the LSA status and other necessary information needed for direct installation in the standby OSPF LSDB along with the LSA portion. When the LSA reaches the standby module, OSPF checks the database entry state in the buffer and takes appropriate action, such as adding, overwriting, updating, or deleting the LSA from the LSDB.

Neighbor router synchronization

When the neighbor router is added in the active management module, it is synchronized and added to the standby module. When the neighbor is deleted in the active module, it is synchronized to the standby and deleted in the standby. When the neighbor router state becomes 2WAY or FULL, the neighbor router is synchronized to the standby module. The following attributes of the neighbor router is synchronized to the standby module:

- Neighbor router id
- Neighbor router ip address
- Destination router or backup destination router information
- Neighbor state 2WAY or FULL
- MD5 information
- Neighbor priority

Limitations

- If a neighbor router is inactive for 30 seconds, and if the standby module takes over in another 10 seconds, the neighbor router cannot be dropped. The inactivity timer starts again and takes another 40 seconds to drop the neighbor router.
- In standby module, the valid neighbor states are LOADING, DOWN, 2WAY, and FULL. If the active management processor (MP) fails when the neighbor state is LOADING, the standby module cannot continue from LOADING, but the standby can continue from 2WAY and tries to establish adjacency between the neighboring routers.
- The minimum OSPF dead-interval timer value is 40 seconds (default dead-interval value). When the dead-interval value is configured less than this minimum value, OSPF NSR cannot be supported.

Interface synchronization

Interface information is synchronized for interfaces such as PTPT, broadcast, and non-broadcast. Interface wait time is not synchronized to the standby module. If an interface waits for 30 seconds to determine the identity of designated router (DR) or backup designated router (BDR), and if the standby module takes over, the wait timer starts again and takes another 40 seconds for the interface state to change from waiting to BDR, DR, or DROther.

BFD with OSPF NSR

Bidirectional forwarding detection (BFD) supports MP switchover and all BFD sessions for OSPF with graceful OSPF NSR, which are in the up state after the switchover. The BFD sessions for OSPF that do not use OSPF NSR are cleared before the switchover and then re-established on the new active MP after the MP switchover.

In case the active MP learns an OSPF neighbor and then restarts before a new BFD session is established, the standby module will not have a BFD session for the new OSPF neighbor. To overcome this and to support OSPF NSR with BFD, the following functions are supported when the active MP restarts:

- During MP switchover, BFD checks whether OSPF NSR is enabled. If OSPF NSR is enabled, the existing BFD sessions for OSPF is maintained during the switchover.
- OSPF sets up or clears the BFD sessions after OSPF neighbor transition.
- After the switchover, BFD sessions correspond with the active OSPF neighbor.

Standby module operations

The standby management module with OSPF configuration performs the following functions.

Neighbor database

Neighbor information is updated in the standby module based on updates from the active module. Certain neighbor state and interface transitions are synchronized to the standby module. By default, the neighbor timers on the standby module are disabled.

LSA database

The standby module processes LSA synchronization events from the active module and unpacks the LSA synchronization information to directly install it in its LSDB as the LSA has already been processed on the active module. The information required to install all types of LSAs (and special LSAs such as Grace LSAs) is packed by OSPF on the active module in the synchronization buffer, so that you can directly install LSAs on the standby module without extra processing.

The standby module is not allowed to originate any LSAs of its own. This is to maintain all information consistently from the active module. The active module synchronizes self-originated LSAs to the standby module.

LSA aging is not applicable on the standby module. During synchronization from the active, the current LSA age is recorded and the new database timestamp is created on the standby to later derive the LSA age as needed.

When the active module sends the LSAs to the standby module, based on the message, the standby module deletes or updates its link state database with the latest information.

LSA acknowledging or flooding are not done on the standby module. When the LSA synchronization update arrives from the active module, it will be directly installed into the LSDB.

Enabling and disabling NSR

To enable NSR for OSPF, enter the following command.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# nonstop-routing
```

To disable NSR for OSPF, enter the following command.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# no nonstop-routing
```

Syntax: [no] nonstop-routing

If you enter the **graceful-restart** command when NSR is already enabled, the command is rejected with the following message:

```
Error - Please disable NSR before enabling Graceful Restart
```

Similarly, if you enter the **nonstop-routing** command when graceful restart is already enabled, the command is rejected and the following message is displayed:

```
Error - Please disable Graceful Restart before enabling NSR
```

Limitations of NSR

Following are the limitations of NSR:

- Configurations that occur before the switchover are lost due to the CLI synchronization.
- Sham links are not supported.
- OSPF adjacency over GRE tunnels is not supported.
- Changes in the neighbor state or interface state before or during a switchover do not take effect.
- Traffic counters are not synchronized because the neighbor and LSA database counters are recalculated on the standby module during synchronization.
- LSA acknowledging is delayed because it has to wait until standby acknowledging occurs.
- Depending on the sequence of redistribution or new LSAs (from neighbors), the LSAs accepted within the limits of the database may change after switchover.
- In NSR hitless failover, after switchover, additional flooding-related protocol traffic is generated to the directly connected neighbors.
- OSPF startup timers, database overflow, and max-metric, are not applied during NSR switchover.

Adding additional parameters

Previously, to add new parameters, the old configuration had to be undone and the newer configuration had to be recreated. In release 04.1.00 however, to add new parameters, the existing configuration need not be undone or removed. Any successive configuration changes with new parameters is appended to the existing configuration. If the same parameter is entered again with a different value, then the corresponding parameter value is updated.

Example

```
Brocade(config-ospf-router)#default-information-originate route-map defaultToOspf
Brocade(config-ospf-router)#default-information-originate always
Brocade(config-ospf-router)#default-information-originate metric 200
```

In the above example, **default-information-originate** is enabled with the **route-map** parameter for the first CLI and then the **always** and **metric** is appended to the existing configuration. The running configuration of the above three split commands would be as follows:

```
Brocade(config-ospf-router)#default-information-originate always metric 200
route-map defaultToOspf
```

Disabling configuration

To disable the **route-map** parameter from the configuration, enter the following command:

```
Brocade(config-ospf-router)# no default-information-originate route-map
defaultToOspf
```

The above CLI would retain the configuration with **default-information-originate** alone and **route-map** option would get reset or removed.

The following commands with any or all of the options will remove the options from the **default-information-originate** command if any of the options are configured:

```
Brocade(config-ospf-router)#no default-information-originate always
Brocade(config-ospf-router)#no default-information-originate always route-map
test
Brocade(config-ospf-router)#no default-information-originate always route-map
test metric 200
Brocade(config-ospf-router)#no default-information-originate always route-map
test metric 200 metric-type type1
```

In the following example, the parameters of the **default-information-originate** command are reset if they are configured and if none of the parameters are configured then, these commands will have no effect.

To disable the origination of default route, issue the command with “**no**” option and without any other options. This would remove the configuration of the **default information origination** even if any of the above mentioned options are configured.

Syntax: **[no] default-information-originate [always] [metric *metric value*] [metric-type *metric-type*] [route-map *rmap-name*]**

The **always** parameter advertises the default route regardless of whether the router has a default route. This option is disabled by default.

The **metric value** parameter specifies a metric for the default route. If this option is not used, the default metric is used for the route.

The **metric-type type** parameter specifies the external link type associated with the default route advertised into the OSPF routing domain. The *type* can be one of the following:

- type1 – Type 1 external route
- type2 – Type 2 external route

If you do not use this option, the default redistribution metric type is used for the route type.

NOTE

If you specify a metric and metric type, the values you specify are used even if you do not use the **always** option.

The **route-map** parameter overrides other options. If **set** commands for **metric** and **metric-type** are specified in the route-map, the command-line values of metric and metric-type if specified, are ignored for clarification.

The **route-map** *rmap* parameter specifies the route map reference.

The corresponding route-map should be created before configuring the **route-map** option along with the **default-information-originate**. If the corresponding route-map was not been created beforehand, then the an error message will be displayed stating that the route-map must be created.

OSPF distribute list

This feature of Multi-Service IronWare configures a distribution list to explicitly deny specific routes from being eligible for installation in the IP route table. By default, all OSPF routes in the OSPF route table are eligible for installation in the IP route table. This feature does not block receipt of LSAs for the denied routes. The Layer 3 Switch still receives the routes and installs them in the OSPF database. The feature only prevents the software from installing the denied OSPF routes into the IP route table.

The OSPF distribution list can be managed using ACLs or Route Maps to identify routes to be denied as described in the following sections:

- Configuring an OSPF Distribution List using ACLs
- Configuring an OSPF Distribution List using Route Maps

Configuring an OSPF distribution list using ACLs

To configure an OSPF distribution list using ACLs:

- Configure an ACL that identifies the routes you want to deny. Using a standard ACL lets you deny routes based on the destination network, but does not filter based on the network mask. To also filter based on the destination network's network mask, use an extended ACL.
- Configure an OSPF distribution list that uses the ACL as input

Examples

In the following example, the first three commands configure a standard ACL that denies routes to any 10.x.x.x destination network and allows all other routes for eligibility to be installed in the IP route table. The last three commands change the CLI to the OSPF configuration level and configure an OSPF distribution list that uses the ACL as input. The distribution list prevents routes to any 10.x.x.x destination network from entering the IP route table. The distribution list does not prevent the routes from entering the OSPF database.

```
Brocade(config)# ip access-list standard no_ip
Brocade(config-std-nacl)# deny 10.0.0.0 0.255.255.255
Brocade(config-std-nacl)# permit any
Brocade(config)# router ospf
Brocade(config-ospf-router) # area 0
Brocade(config-ospf-router) # distribute-list no_ip in
```

In the following example, the first three commands configure an extended ACL that denies routes to any 172.31.39.x destination network and allows all other routes for eligibility to be installed in the IP route table. The last three commands change the CLI to the OSPF configuration level and configure an OSPF distribution list that uses the ACL as input. The distribution list prevents routes to any 172.31.39.x destination network from entering the IP route table. The distribution list does not prevent the routes from entering the OSPF database.

```
Brocade(config)# ip access-list extended DenyNet39
Brocade(config-ext-nacl)# deny ip 172.31.39.0 0.0.0.255 any
Brocade(config-ext-nacl)# permit ip any any
Brocade(config)# router ospf
Brocade(config-ospf-router) # area 0
Brocade(config-ospf-router) # distribute-list DenyNet39 in
```

In the following example, the first command configures a numbered ACL that denies routes to any 172.31.39.x destination network and allows all other routes for eligibility to be installed in the IP route table. The last three commands change the CLI to the OSPF configuration level and configure an OSPF distribution list that uses the ACL as input. The distribution list prevents routes to any 172.31.39.x destination network from entering the IP route table. The distribution list does not prevent the routes from entering the OSPF database.

```
Brocade(config)# ip access-list 100 deny ip 172.31.39.0 0.0.0.255 any
Brocade(config)# ip access-list 100 permit ip any any
Brocade(config)# router ospf
Brocade(config-ospf-router) # area 0
Brocade(config-ospf-router) # distribute-list 100 in
```

Syntax: [no] **distribute-list** *acl-name* | *acl-number* in

The **distribute-list** command is applied globally to all interfaces on the router where it is executed.

Configuring an OSPF distribution list using route maps

You can manage an OSPF Distribution List using route maps that apply match operations as defined by an ACL or an IP prefix list. Additionally, you can also use other options available within the route maps and ACLs to further control the contents of the routes that OSPF provides to the IP route table. This section describes an example where an OSPF distribute list uses a route map to specify an OSPF Admin Distance for routes identified by an IP Prefix list.

To configure an OSPF distribution list using route maps:

- Configure a route map that identifies the routes you want to manage.
- Optionally configure an OSPF Admin Distance to apply to the OSPF routes
- Configure an OSPF distribution list that uses the route map as input

Example

In the following example, the first two commands identify two routes using the **ip prefix-list test1** command. Next, a **route-map** is created that uses the **prefix-list test1** to identify the two routes and the **set distance** command to set the OSPF Admin Distance of those routes to 200. A **distribute-list** is then configured under the OSPF configuration that uses the **route map** titled “setdistance” as input.

```
Brocade(config)# ip prefix-list test1 seq 5 permit 10.100.1.0/24
Brocade(config)# ip prefix-list test1 seq 10 permit 10.100.2.0/24
Brocade(config)# route-map setdistance permit 1
Brocade(config-routemap setdistance)# match ip address prefix-list test1
```

Adding additional parameters

```
Brocade(config-routemap setdistance)# set distance 200
Brocade(config-routemap setdistance)# exit
Brocade(config)# router ospf
Brocade(config-ospf-router)# area 0
Brocade(config-ospf-router)# area 1
Brocade(config-ospf-router)# distribute-list route-map setdistance in
Brocade(config-ospf-router)# exit
```

Once this configuration is implemented, the routes identified by the **ip prefix-list** command and matched in the Route Map will have their OSPF Admin Distance set to 200. This is displayed in the output from the **show ip route** command, as shown in the following.

```
Brocade# show ip route
Total number of IP routes: 4
Type Codes - B:BGP D:Connected I:ISIS S:Static R:RIP O:OSPF; Cost - Dist/Metric
      Destination      Gateway      Port      Cost      Type
1      10.1.1.0/24      DIRECT      eth 1/1    0/0      D
2      10.100.1.0/24    10.1.1.1    eth 1/1    200/2    O
3      10.100.2.0/24    10.1.1.1    eth 1/1    200/10   O2
4      10.100.6.0/24    10.1.1.1    eth 1/1    110/2    O
```

Routes 2 and 3 demonstrate the actions of the example configuration as both display an OSPF Admin Distance value of 200. Note that the value is applied to both OSPF learned routes that match the route-map configuration: internal (route 2) and external (route 3). The other OSPF internal route (route 4) that does not match the route-map continues to have the default OSPF admin distance of 110.

The following is an example of the **distribute-list** command applied with route-map **setdistance** set as the input.

```
Brocade(config-ospf-router)# distribute-list route-map setdistance in
```

Syntax: [no] **distribute-list route-map** *routemap-name* in

The *routemap-name* variable specifies the name of the route map being used to define the OSPF Distribute List.

The **distribute-list** command is applied to all OSPF LSAs on the router where it is executed.

NOTE

A Route Map used with the **distribute-list** command can use either the **ip prefix-list** command (as shown in the example) or an ACL to define the routes.

The **set distance** command that is used in association with a Route Map configuration.

Modify SPF timers

The device uses the following timers when calculating the shortest path for OSPF routes:

- **SPF delay** – When the device receives a topology change, the software waits before it starts a Shortest Path First (SPF) calculation. By default, the software waits 0 (zero) seconds. You can configure the SPF delay to a value from 0 – 65535 seconds. If you set the SPF delay to 0 seconds, the software immediately begins the SPF calculation after receiving a topology change.

- **SPF hold time** – The device waits for a specific amount of time between consecutive SPF calculations. By default, the device waits zero seconds. You can configure the SPF hold time to a value from 0 – 65535 seconds. If you set the SPF hold time to 0 seconds, the software does not wait between consecutive SPF calculations.

You can set the delay and hold time to lower values to cause the device to change to alternate paths more quickly in the event of a route failure. Note that lower values require more CPU processing time.

You can change one or both of the timers.

To change the SPF delay and hold time, enter commands such as the following.

```
Brocade(config-ospf-router)# timers spf 10 20
```

The command in this example changes the SPF delay to 10 seconds and changes the SPF hold time to 20 seconds.

To set the timers back to their default values, enter a command such as the following.

```
Brocade(config-ospf-router)# no timers spf 10 20
```

Syntax: `[no] timers spf delay hold-time`

The *delay* parameter specifies the SPF delay.

The *hold-time* parameter specifies the SPF hold time.

NOTE

OSPF incrementally updates the OSPF routing table when new Type-3 or Type-4 Summary, Type-5 External, or Type-7 External NSSA LSAs are received.

Modify redistribution metric type

The redistribution metric type is used by default for all routes imported into OSPF unless you specify different metrics for individual routes using redistribution filters. Type 2 specifies a big metric (three bytes). Type 1 specifies a small metric (two bytes). The default value is type 2.

To modify the default value to type 1, enter the following command.

```
Brocade(config-ospf-router)# metric-type type1
```

Syntax: `[no] metric-type type1 | type2`

The default is **type2**.

Modify administrative distance

The device can learn about networks from various protocols, including Border Gateway Protocol version 4 (BGP4), RIP, IS-IS, and OSPF. Consequently, the routes to a network may differ depending on the protocol from which the routes were learned. The default administrative distance for OSPF routes is 110.

The router selects one route over another based on the source of the route information. To do so, the router can use the administrative distances assigned to the sources. You can bias the decision the device makes by changing the default administrative distance for OSPF routes.

Configuring administrative distance based on route type

You can configure a unique administrative distance for each type of OSPF route. For example, you can use this feature to prefer a static route over an OSPF inter-area route but you also want to prefer OSPF intra-area routes to static routes.

The distance you specify influences the choice of routes when the device has multiple routes for the same network from different protocols. The device prefers the route with the lower administrative distance.

You can specify unique default administrative distances for the following route types:

- Intra-area routes
- Inter-area routes
- External routes

The default for all these OSPF route types is 110.

NOTE

This feature does not influence the choice of routes within OSPF. For example, an OSPF intra-area route is always preferred over an OSPF inter-area route, even if the intra-area route's distance is greater than the inter-area route's distance.

To change the default administrative distances for inter-area routes, intra-area routes, and external routes, enter the following command.

```
Brocade(config-ospf-router)# distance external 100
Brocade(config-ospf-router)# distance inter-area 90
Brocade(config-ospf-router)# distance intra-area 80
```

Syntax: [no] distance external | inter-area | intra-area *distance*

The **external | inter-area | intra-area** parameter specifies the route type for which you are changing the default administrative distance.

The *distance* parameter specifies the new distance for the specified route type. Unless you change the distance for one of the route types using commands such as those shown above, the default is 110.

To reset the administrative distance to its system default (110), enter a command such as the following.

```
Brocade(config-ospf-router)# no distance external 100
```

Configure OSPF group Link State Advertisement (LSA) pacing

The device paces LSA refreshes by delaying the refreshes for a specified time interval instead of performing a refresh each time an individual LSA refresh timer expires. The accumulated LSAs constitute a group, which the device refreshes and sends out together in one or more packets.

The pacing interval, which is the interval at which the device refreshes an accumulated group of LSAs, is configurable to a range from 10 – 1800 seconds (30 minutes). The default is 240 seconds (four minutes). Thus, every four minutes, the device refreshes the group of accumulated LSAs and sends the group together in the same packets.

Usage guidelines

The pacing interval is inversely proportional to the number of LSAs the device is refreshing and aging. For example, if you have approximately 10,000 LSAs, decreasing the pacing interval enhances performance. If you have a very small database (40 – 100 LSAs), increasing the pacing interval to 10 – 20 minutes might enhance performance slightly.

Changing the LSA pacing interval

To change the LSA pacing interval, use the following CLI method.

To change the LSA pacing interval to two minutes (120 seconds), enter the following command.

```
Brocade(config-ospf-router)# timers lsa-group-pacing 120
```

Syntax: [no] **timers lsa-group-pacing secs**

The secs parameter specifies the number of seconds and can be from 10 – 1800 (30 minutes). The default is 240 seconds (four minutes).

To restore the pacing interval to its default value, enter the following command.

```
Brocade(config-ospf-router)# no timers lsa-group-pacing
```

OSPF ABR type 3 LSA filtering

OSPF ABR Type 3 LSA filtering increases the ability of an ABR that is running the OSPF protocol to filter type 3 link-state advertisements (LSAs) that are sent between different OSPF areas. Only packets with specified prefixes will be sent from one area to another area and all packets with other prefixes will be prohibited.

Type 3 LSAs refer to summary links and are sent by ABRs to advertise destinations outside the area. OSPF ABR Type 3 LSA filtering gives the administrator improved control of route distribution between OSPF areas.

Usage and configuration guidelines

- The “area prefix-list” command is only applicable to the ABRs. If the router is not an ABR the configuration is accepted however it will start working only after router is made ABR.
- With this feature enabled in the “in” direction, all type 3 LSAs originated by the ABR to this area, based on information from all other areas, are filtered by the prefix list. Type 3 LSAs that were originated as a result of the area range command in another area are treated like any other type 3 LSA that was originated individually. Any prefix that does not match an entry in the prefix list is implicitly denied.
- With this feature enabled in the “out” direction, all type 3 LSAs advertised by the ABR, based on information from this area to all other areas, are filtered by the prefix list. If the area range command has been configured for this area, Type 3 LSAs that corresponds to the area range command are treated like any other type 3 LSA.
- Prefixes that are not permitted by the prefix list are implicitly denied.
- The following table displays the behavior for prefix list configurations

TABLE 21 Behavior for prefix list configurations

IP prefix list	OSPF area prefix list	Event	Filtering done
XXX	Not defined	None	No (permit all)
Not defined	Defined	None	Yes (deny all)
Not defined	Defined	IP prefix list defined	Recalculation
Defined (no rules configured)	Defined	None	Implicit deny (deny all)
Defined (rules configured)	Defined	IP prefix list deleted	Recalculation and deny all
Defined (rules configured)	Defined	IP prefix list rule added or modified or deleted	Recalculation
Defined (rules configured)	Defined	Area prefix list deleted	Recalculation and permit all

Configuring an OSPF area prefix list

To filter prefixes advertised in type 3 link-state advertisements (LSAs) between (OSPF) areas of an Area Border Router (ABR), use the area prefix-list command in router configuration mode. To change or cancel the filter, use the no form of this command.

Configuring OSPF ABR type 3 LSA filtering

To filter inter-area routes into a specified area, use the following commands beginning in router configuration mode.

To configure the router to run an OSPF process, enter commands such as the following.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)#
```

To filter prefixes advertised in type 3 link-state advertisements (LSAs) between (OSPF) areas of an Area Border Router (ABR), use the area prefix-list command in router configuration mode. To change or cancel the filter, use the no form of this command.

```
Brocade(config-ospf-router)# area 1 prefix-list area in
```

To configure the switch to filter inter-area routes out of the specified area, enter a command such as the following.

```
Brocade(config-ospf-router)# area 10.10.10.1 prefix-list Routesfor20 out
```

Syntax: [no] area {area-id | area_ip} prefix-list prefix-list-name {in | out}

The *prefix-list-name* variable specifies the prefix list name.

The **area** {area-id | area_ip} parameter specifies the area id in different formats.

The **in** keyword specifies that prefix list is applied to prefixes advertised to the specified area from other areas.

The **out** keyword specifies that prefix list is applied to prefixes advertised out of the specified area to other areas.

Defining and applying IP prefix lists

An IP prefix list specifies a list of networks. When you apply an IP prefix list to an area, the Brocade device sends or receives only a route whose destination is in the IP prefix list. The software interprets the prefix lists in order, beginning with the lowest sequence number.

To configure an IP prefix list and apply it to an area, enter commands such as the following.

```
Brocade(config)# ip prefix-list Routesfor20 permit 20.20.0.0/24
Brocade(config)# router ospf
Brocade(config-ospf-router)# area 10.10.10.1 prefix-list Routesfor20 out
```

These commands configure an IP prefix list named Routesfor20, which permits routes to network 20.20.0.0/24. The **area** command configures the device to use IP prefix list Routesfor20 to determine which routes to send to area 10.10.10.1. The device sends routes that go to 20.20.x.x to area 10.10.10.1 because the IP prefix list explicitly permits these routes to be sent to the area.

Syntax: `ip prefix-list name [seq seq-value] [description string] {deny | permit} network-addr/mask-bits [ge ge-value] [le le-value]`

The *name* variable specifies the prefix list name. You use this name when applying the prefix list to a neighbor.

The **seq seq-value** parameter is optional and specifies the IP prefix list's sequence number. If you do not specify a sequence number, the software numbers them in increments of 5, beginning with prefix list entry 5. The software interprets the prefix list entries in numerical order, beginning with the lowest sequence number.

The **description string** parameter is a text string describing the prefix list.

The **deny | permit** parameter specifies the action the software takes if a neighbor's route is in this prefix list.

The prefix-list matches only on this network unless you use the **ge ge-value** or **le le-value** parameters. (See below.)

The *network-addr/mask-bits* variable specifies the network number and the number of bits in the network mask.

You can specify a range of prefix length for prefixes that are more specific than *network-addr/mask-bits*.

- If you specify only **ge ge-value**, then the mask-length range is from *ge-value* to 32.
- If you specify only **le le-value**, then the mask-length range is from length to *le-value*.
- The *ge-value* or *le-value* you specify must meet the following condition.

length <ge-value <= le-value <= 32

If you do not specify **ge ge-value** or **le le-value**, the prefix list matches only on the exact network prefix you specify with the *network-addr/mask-bits* parameter.

Displaying the configured OSPF area prefix list

To display the prefix-lists attached to the areas, enter the following command.

Adding additional parameters

```
Brocade(config)# show ip ospf config
Router OSPF: Enabled
Graceful Restart: Disabled, timer 120
Graceful Restart Helper: Enabled
Redistribution: Disabled
Default OSPF Metric: 10
OSPF Auto-cost Reference Bandwidth: Disabled
OSPF Redistribution Metric: Type2
OSPF External LSA Limit: 14447047
OSPF Database Overflow Interval: 0
RFC 1583 Compatibility: Enabled
Router id: 10.5.5.1
Interface State Change Trap: Enabled
Virtual Interface State Change Trap: Enabled
Neighbor State Change Trap: Enabled
Virtual Neighbor State Change Trap: Enabled
Interface Configuration Error Trap: Enabled
Virtual Interface Configuration Error Trap: Enabled
Interface Authentication Failure Trap: Enabled
Virtual Interface Authentication Failure Trap: Enabled
Interface Receive Bad Packet Trap: Enabled
Virtual Interface Receive Bad Packet Trap: Enabled
Interface Retransmit Packet Trap: Disabled
Virtual Interface Retransmit Packet Trap: Disabled
Originate LSA Trap: Disabled
Originate MaxAge LSA Trap: Disabled
Link State Database Overflow Trap: Disabled
Link State Database Approaching Overflow Trap: Disabled
OSPF Area currently defined:
Area-ID Area-Type Cost Prefix List In Prefix List Out
0 normal 0
1 normal 0 Area_1_Pfx_list in Area_1_Pfx_List_Out
```

Syntax: `show ip ospf config`

Displaying the configured IP prefix list

To only display the configured ip prefix-list, enter a command such as the following.

```
Brocade# show ip prefix-lists
ip prefix-list abc: 2 entries
seq 5 deny 2.3.4.0/24
seq 10 permit 4.5.0.0/16.
```

Syntax: `show ip prefix-lists [prefix-list-name]`

The *prefix-list-name* parameter specifies the name of the prefix list. You use this name when applying the prefix list to an area.

Modify OSPF traps generated

OSPF traps as defined by RFC 1850 are supported on device.

You can disable all or specific OSPF trap generation by entering the following CLI command.

```
Brocade(config)# no snmp-server trap ospf
```

To later re-enable the trap feature, enter **snmp-server trap ospf**.

To disable a specific OSPF trap, enter the command as **no snmp-server trap ospf ospf-trap**.

These commands are at the OSPF router Level of the CLI.

Here is a summary of OSPF traps supported on device, their corresponding CLI commands, and their associated MIB objects from RFC 1850. The first list are traps enabled by default:

- **interface-state-change-trap** – [MIB object: OspflfstateChange]
- **virtual-interface-state-change-trap** – [MIB object: OspfVirtIfStateChange]
- **neighbor-state-change-trap** – [MIB object: ospfNbrStateChange]
- **virtual-neighbor-state-change-trap** – [MIB object: ospfVirtNbrStateChange]
- **interface-config-error-trap** – [MIB object: ospflfConfigError]
- **virtual-interface-config-error-trap** – [MIB object: ospfVirtIfConfigError]
- **interface-authentication-failure-trap** – [MIB object: ospflfAuthFailure]
- **virtual-interface-authentication-failure-trap** – [MIB object: ospfVirtIfAuthFailure]
- **interface-receive-bad-packet-trap** – [MIB object: ospflfrxBadPacket]
- **virtual-interface-receive-bad-packet-trap** – [MIB object: ospfVirtIfRxBadPacket]

The following traps are disabled by default.

- **interface-retransmit-packet-trap** – [MIB object: ospfTxRetransmit]
- **virtual-interface-retransmit-packet-trap** – [MIB object: ospfVirtIfTxRetransmit]
- **originate-lsa-trap** – [MIB object: ospfOriginateLsa]
- **originate-maxage-lsa-trap** – [MIB object: ospfMaxAgeLsa]
- **link-state-database-overflow-trap** – [MIB object: ospfLsdbOverflow]
- **link-state-database-approaching-overflow-trap** – [MIB object: ospfLsdbApproachingOverflow]

Example

To stop an OSPF trap from being collected, use the CLI command: **no trap ospf-trap**, at the Router OSPF level of the CLI. To disable reporting of the neighbor-state-change-trap, enter the following command.

```
Brocade(config-ospf-router)# no trap neighbor-state-change-trap
```

Example

To reinstate the trap, enter the following command.

```
Brocade(config-ospf-router)# trap neighbor-state-change-trap
```

Syntax: [no] trap *ospf-trap*

Modify OSPF standard compliance setting

The device is configured, by default, to be compliant with the RFC 1583 OSPF V2 specification.

To configure a router to operate with the latest OSPF standard, RFC 2328, enter the following commands.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# no rfc1583-compatibility
```

Syntax: [no] rfc1583-compatibility

Modify exit overflow interval

If a database overflow condition occurs on a router, the router eliminates the condition by removing entries that originated on the router. The exit overflow interval allows you to set how often a device checks to see if the overflow condition has been eliminated. The default value is 0. The range is 0 – 86400 seconds (24 hours). If the configured value of the database overflow interval is zero, then the router never leaves the database overflow condition.

To modify the exit overflow interval to 60 seconds, enter the following command.

```
Brocade(config-ospf-router)# database-overflow-interval 60
```

Syntax: [no] database-overflow-interval *value*

The *value* can be from 0 – 86400 seconds. The default is 0 seconds.

Specify types of OSPF Syslog messages to log

You can specify which kinds of OSPF-related Syslog messages are logged. By default, the only OSPF messages that are logged are those indicating possible system errors. If you want other kinds of OSPF messages to be logged, you can configure the device to log them.

For example, to specify that all OSPF-related Syslog messages be logged, enter the following commands.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# log all
```

Syntax: [no] log all | adjacency [dr-only] | bad_packet [checksum] | database | memory | retransmit

The **log** command has the following options:

The **all** option causes all OSPF-related Syslog messages to be logged. If you later disable this option with the **no log all** command, the OSPF logging options return to their default settings.

The **adjacency** option logs essential OSPF neighbor state changes, especially on error cases. This option is disabled by default. The **dr-only** sub-option (added in version 03.3.00) only logs essential OSPF neighbor state changes where the interface state is designated router (DR).

NOTE

For interfaces where the designated router state is not applicable, such as point-to-point and virtual links, OSPF neighbor state changes will always be logged irrespective of the setting of the **dr-only** sub-option.

NOTE

A limitation with the **dr-only** sub-option is that when a DR/BDR election is underway, OSPF neighbor state changes pertaining to non-DR/BDR routers are not logged. Logging resumes once a DR is elected on that network.

The **bad_packet checksum** option logs all OSPF packets that have checksum errors. This option is enabled by default.

The **bad_packet** option logs all other bad OSPF packets. This option is disabled by default.

The **database** option logs OSPF LSA-related information. This option is disabled by default.

The **memory** option logs abnormal OSPF memory usage. This option is enabled by default.

The **retransmit** option logs OSPF retransmission activities. This option is disabled by default.

Configuring an OSPF network type

To configure an OSPF network, enter commands such as the following.

```
Brocade(config)# interface eth 1/5
Brocade(config-if-1/5)# ip ospf network point-to-point
This command configures an OSPF point-to-point link on Interface 5 in slot 1.
```

Syntax: [no] ip ospf network point-to-point | broadcast | non-broadcast

The **point-to-point** option configures the network type as a point to point connection.

NOTE

Brocade devices support numbered point-to-point networks, meaning the OSPF router must have an IP interface address which uniquely identifies the router over the network. Brocade devices do not support unnumbered point-to-point networks.

The **broadcast** option configures the network type as a broadcast connection. This is the default option for Ethernet, VE and Loopback interfaces.

The **non-broadcast** option configures the network type as a non-broadcast connection. This allows you to configure the interface to send OSPF traffic to its neighbor as unicast packets rather than multicast packets. This can be useful in situations where multicast traffic is not feasible (for example when a firewall does not allow multicast packets).

On a non-broadcast interface, the routers at either end of this interface must configure non-broadcast interface type and the neighbor IP address. There is no restriction on the number of routers sharing a non-broadcast interface (for example, through a hub/switch).

To configure an OSPF interface as a non-broadcast interface, you enable the feature on a physical interface or a VE, following the **ip ospf area** statement, and then specify the IP address of the neighbor in the OSPF configuration. The non-broadcast interface configuration must be done on the OSPF routers at either end of the link.

For example, the following commands configure VE 20 as a non-broadcast interface.

```
Brocade(config)# int ve 20
Brocade(config-vif-20)# ip address 10.1.20.4/24
Brocade(config-vif-20)# ip ospf area 0
Brocade(config-vif-20)# ip ospf network non-broadcast
```

The following commands specify 10.1.20.1 as an OSPF neighbor address. The address specified must be in the same sub-net as the non-broadcast interface.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# neighbor 10.1.20.1
```

For example, to configure the feature in a network with three routers connected by a hub or switch, each router must have the linking interface configured as a non-broadcast interface, and the two other routers must be specified as neighbors.

Configuring OSPF Graceful Restart

OSPF Graceful Restart can be enabled in the following configurations:

- **Configuring OSPF Graceful Restart for the Global Instance** – In this configuration all OSPF neighbors other than those used by VRFs are made subject to the Graceful Restart capability. The restart timer set globally does not apply to Graceful Restart on a configured VRF.
- **Configuring OSPF Graceful Restart per VRF** – In this configuration all OSPF neighbors for the specified VRF are made subject to the Graceful Restart capability. The restart timer set for a specific VRF only applies to that VRF.

Configuring OSPF Graceful Restart for the global instance

OSPF Graceful restart can be configured for the global instance or for a specified Virtual Routing and Forwarding (VRF) instance. Configuring OSPF Graceful restart for the global instance does not configure it for any VRFs. The following sections describe how to enable the OSPF graceful restart feature for the global instance on a device.

Use the following command to enable the graceful restart feature for the global instance on a device.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# graceful-restart
```

Syntax: [no] graceful-restart

Configuring OSPF Graceful Restart time for the global instance

Use the following command to specify the maximum amount of time advertised to a neighbor router to maintain routes from and forward traffic to a restarting router.

```
Brocade(config) router ospf
Brocade(config-ospf-router)# graceful-restart restart-time 120
```

Syntax: [no] graceful-restart restart-time seconds

The *seconds* variable sets the maximum restart wait time advertised to neighbors.

Possible values are 10 - 1800 seconds.

The default value is 120 seconds.

Disabling OSPF Graceful Restart helper mode for the global instance

By default, a router supports other restarting routers as a helper. You can prevent your router from participating in OSPF Graceful Restart by using the following command.

```
Brocade(config) router ospf
Brocade(config-ospf-router)# graceful-restart helper-disable
```

Syntax: [no] graceful-restart helper-disable

This command disables OSPF Graceful Restart helper mode.

The default behavior is to help the restarting neighbors.

Configuring OSPF Graceful Restart per VRF

The following sections describe how to enable the OSPF Graceful Restart feature on a specified VRF.

Use the following command to enable the graceful restart feature on a specified VRF.

```
Brocade(config)# router ospf vrf blue
Brocade(config-ospf-router)# graceful-restart
```

Syntax: [no] graceful-restart

Configuring OSPF Graceful Restart time per VRF

Use the following command to specify the maximum amount of time advertised to an OSPF neighbor router to maintain routes from and forward traffic to a restarting router.

```
Brocade(config) router ospf vrf blue
Brocade(config-ospf-router)# graceful-restart restart-time 120
```

Syntax: [no] graceful-restart restart-time *seconds*

The *seconds* variable sets the maximum restart wait time advertised to OSPF neighbors of the VRF.

Possible values are 10 - 1200 seconds.

The default value is 60 seconds.

Disabling OSPF Graceful Restart helper mode per VRF

You can prevent your router from participating in OSPF Graceful Restart with VRF neighbors by using the following command.

```
Brocade(config) router ospf vrf blue
Brocade(config-ospf-router)# graceful-restart helper-disable
```

Syntax: [no] graceful-restart helper-disable

This command disables OSPF Graceful Restart helper mode.

The default behavior is to help the restarting neighbors.

For information about how to display OSPF Graceful Restart Information, refer to [“Displaying an OSPF Graceful Restart information”](#) on page 236.

Configuring OSPF router advertisement

You can configure OSPF router advertisement in the **router ospf** mode or **router ospf vrf** mode as shown in the following examples.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# max-metric router-lsa all-vrfs on-startup 30 link
all
Brocade(config)# router ospf vrf blue
Brocade(config-ospf-router)# max-metric router-lsa on-startup 30 link all
```

Syntax: [no] max-metric router-lsa [all-vrfs] [on-startup { *time* | wait-for-bgp}] [summary-lsa *metric-value*] [external-lsa *metric-value*] [te-lsa *metric-value*] [all-lsas] [link {ptp | stub | transit | all }]

The **all-vrfs** parameter specifies that the command will be applied to all VRF instances of OSPFv2. Note: this command is supported only for VRFs that are already configured when the **max-metric router-lsa all-vrfs** command is issued. Any new OSPF instance configured after the **max-metric router-lsa all-vrfs** configuration is completed requires that the **max-metric** command be configured again to take in the new OSPF instance.

The **on-startup** parameter specifies that the OSPF router advertisement be performed at the next system startup. This is an optional parameter.

When using the **on-startup** option you can set a *time* in seconds for which the specified links in Router LSA will be advertised with the metric set to a maximum value of 0xFFFF. Optional values for *time* are 5 to 86400 seconds. There is no default value for *time*.

The **wait-for-bgp** option for the **on-startup** parameter directs OSPF to wait for either 600 seconds or until BGP has finished route table convergence (whichever event happens first), before advertising the links with the normal metric.

Using the **link** parameter you can specify the type of links for which the maximum metric is to be advertised. The default value is for maximum metric to be advertised for transit links only. This is an optional parameter.

With release 03.5.00 of the Multi-Service IronWare, additional options are supported that allow you to select the following LSA types and set the required metric:

The **summary-lsa** option specifies that the metric for all summary type 3 and type 4 LSAs will be modified to the specified *metric-value* or the default value. The range of possible values for the *metric-value* variable are 1 to 16777214 (Hex: 0x00001 to 0x00FFFFE). The default value is 16711680 (Hex: 0x00FF0000).

The **external-lsa** option specifies that the metric for all external type 5 and type 7 LSAs will be modified to the specified *metric-value* or a default value. The range of possible values for the *metric-value* variable are 1 to 16777214 (Hex: 0x00001 to 0x00FFFFE). The default value is 16711680 (Hex: 0x00FF0000).

The **te-lsa** option specifies that the TE metric field in the TE metric sub tlv for all type 10 Opaque LSAs LINK TLV originated by the router will be modified to the specified *metric-value* or a default value. The range of possible values for the *metric-value* variable are 1 to 4294967295 (Hex: 0x00001 to 0xFFFFFFFF). The default value is 4294967295 (Hex: 0xFFFFFFFF). This parameter only applies to the default instance of OSPF.

Examples

The following examples of the command `max-metric router-lsa` command demonstrate how it can be used:

The following command indicates that OSPF is being shutdown and that all links in the router LSA should be advertised with the value 0xFFFF and the metric value for all external and summary LSAs is set to 0xFF0000 until OSPF is restarted. This configuration will not be saved.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# max-metric router-lsa external-lsa summary-lsa link
all
```

The following command indicates that OSPF is being shutdown and that all links in the router LSA should be advertised with the value 0xFFFF and the metric value for all external and summary LSAs should be set to 0xFF0000 until OSPF is restarted. Also, if OSPF TE is enabled then all LINK TLVs advertised by the router in Opaque LSAs should be updated with the TE Metric set to 0xFFFFFFFF and the available bandwidth set to 0. This configuration will not be saved.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# max-metric router-lsa all-lsas link all
```

The following command indicates that OSPF is being shutdown and that all links in the router LSA should be advertised with the value 0xFFFF and the metric value for all summary LSAs should be set to 0xFFFFFE until OSPF is restarted. This configuration will not be saved.


```
Brocade(config)# router ospf
Brocade(config-ospf-router)# max-metric router-lsa summary-lsa 16777214 link all
```

The following command turns off the advertisement of special metric values in all Router, Summary, and External LSAs.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# no max-metric router-lsa
```

Configuring OSPF shortest path first throttling

To set OSPF shortest path first throttling to the values in the previous example, use the following command.

```
Brocade(config-ospf-router)# timer throttle spf 200 300 2000
```

Syntax: `[no] timer throttle spf initial-delay hold-time max-hold-time`

The *initial-delay* variable sets the initial value for the SPF delay in milliseconds. Possible values are between 0 and 65535 milliseconds.

The *hold-time* variable sets the minimum hold time between SPF calculations after the initial delay. This value will be doubled after hold-time expires until the max-hold-time is reached. Possible values are between 0 and 65535 milliseconds.

The *max-hold-time* variable sets the maximum hold time between SPF calculations Possible values are between 0 and 65535 milliseconds.

NOTE

The hold time values that you specify are rounded up to the next highest 100 ms value. For example, any value between 0 and 99 will be configured as 100 ms.

Command replacement

This command overlaps in functionality with the `timer throttle spf` command which will be phased out from the Multi-Service IronWare software. To use this command to replicate the exact functionality of the `timer throttle spf` command configure it as shown in the following.

```
Brocade(config-ospf-router)# timer throttle spf 1000 5000 5000
```

Displaying OSPF Router Advertisement

Using the `show ip ospf` command you can display the current OSPF Router Advertisement configuration. The text show below in bold is displayed for an OSPF Router Advertisement configuration.

```
Brocade#show ip ospf
OSPF Version                Version 2
Router Id                    10.10.10.10
ASBR Status                  No
ABR Status                    No          (0)
Redistribute Ext Routes from
External LSA Counter         5
External LSA Checksum Sum    0002460e
Originate New LSA Counter    5
Rx New LSA Counter           8
```

Displaying OSPF information

```
External LSA Limit           14447047
Database Overflow Interval   0
Database Overflow State :   NOT OVERFLOWED
RFC 1583 Compatibility :    Enabled
Originating router-LSAs with maximum metric
  Condition: Always Current State: Active
  Link Type: PTP STUB TRANSIT
Additional LSAs originated with maximum metric:
  LSA Type           Metric Value
  AS-External        16711680
  Type 3 Summary     16711680
  Type 4 Summary     16711680
  Opaque-TE         4294967295
```

Displaying OSPF information

You can display the following OSPF information:

- Trap, area, and interface information – refer to [“Displaying general OSPF configuration information”](#) on page 215.
- CPU utilization statistics – refer to [“Displaying CPU utilization and other OSPF tasks”](#) on page 218.
- Area information – refer to [“Displaying OSPF area information”](#) on page 219.
- Neighbor information – refer to [“Displaying OSPF neighbor information”](#) on page 220.
- Interface information – refer to [“Displaying OSPF interface information”](#) on page 222.
- Route information – refer to [“Displaying OSPF route information”](#) on page 226.
- External link state information – refer to [“Displaying OSPF external link state information”](#) on page 230.
- Database Information – refer to [“Displaying OSPF database information”](#) on page 228
- Link state information – refer to [“Displaying OSPF database link state information”](#) on page 231.
- Virtual Neighbor information – refer to [“Displaying OSPF virtual neighbor and link information”](#) on page 235.
- Virtual Link information – refer to [“Displaying OSPF virtual link information”](#) on page 236.
- ABR and ASBR information – refer to [“Displaying OSPF ABR and ASBR information”](#) on page 232.
- Trap state information – refer to [“Displaying OSPF trap status”](#) on page 233.
- OSPF Point-to-Point Links – refer to [“Viewing Configured OSPF point-to-point links”](#) on page 233.
- OSPF Graceful Restart information refer to [“Displaying an OSPF Graceful Restart information”](#) on page 236.
- OSPF Router Advertisement information refer to [“Displaying OSPF Router Advertisement information”](#) on page 237.

Displaying general OSPF configuration information

To display general OSPF configuration information, enter the following command at any CLI level.

```

Brocade# show ip ospf config
Router OSPF: Enabled
Nonstop Routing: Disabled
Graceful Restart: Disabled
Graceful Restart Helper: Enabled
Graceful Restart Time: 120
Graceful Restart Notify Time: 0

Redistribution: Disabled
Default OSPF Metric: 50
OSPF Auto-cost Reference Bandwidth: Disabled
Default Passive Interface: Enabled
OSPF Redistribution Metric: Type2
OSPF External LSA Limit: 1447047

OSPF Database Overflow Interval: 0

RFC 1583 Compatibility: Enabled

Router id: 10.95.11.128

Interface State Change Trap: Enabled
Virtual Interface State Change Trap: Enabled
Neighbor State Change Trap: Enabled
Virtual Neighbor State Change Trap: Enabled
Interface Configuration Error Trap: Enabled
Virtual Interface Configuration Error Trap: Enabled
Interface Authentication Failure Trap: Enabled
Virtual Interface Authentication Failure Trap: Enabled
Interface Receive Bad Packet Trap: Enabled
Virtual Interface Receive Bad Packet Trap: Enabled
Interface Retransmit Packet Trap: Disabled
Virtual Interface Retransmit Packet Trap: Disabled
Originate LSA Trap: Disabled
Originate MaxAge LSA Trap: Disabled
Link State Database Overflow Trap: Disabled
Link State Database Approaching Overflow Trap: Disabled

OSPF Area currently defined:
Area-ID          Area-Type Cost
0                 normal    0

OSPF Interfaces currently defined:
Ethernet Interface: 3/1-3/2
ip ospf md5-authentication-key-activation-wait-time 300
ip ospf cost 0

```

Syntax: show ip ospf config

The information related to the OSPF interface state is shown in bold text in the previous output.

[Table 22](#) describes the output parameters of the **show ip ospf config** command.

TABLE 22 Output parameters of the **show ip ospf config** command

Field	Description
Router OSPF	Shows whether or not the router OSPF is enabled.
Nonstop Routing	Shows whether or not the non-stop routing is enabled.
Graceful Restart	Shows whether or not the graceful restart is enabled.
Graceful Restart Helper	Shows whether or not the OSPF graceful restart helper mode is enabled.
Graceful Restart Time	Shows the maximum restart wait time advertised to neighbors.
Graceful Restart Notify Time	Shows the graceful restart notification time.
Redistribution	Shows whether or not the redistribution is enabled.
Default OSPF Metric	Shows the default OSPF metric value.
OSPF Auto-cost Reference Bandwidth	Shows whether or not the auto-cost reference bandwidth option is enabled.
Default Passive Interface	Shows whether or not the default passive interface state is enabled.
OSPF Redistribution Metric	Shows the OSPF redistribution metric type, which can be one of the following: <ul style="list-style-type: none"> • Type1 • Type2
OSPF External LSA Limit	Shows the external LSA limit value.
OSPF Database Overflow Interval	Shows the database overflow interval value.
RFC 1583 Compatibility	Shows whether or not the RFC 1583 compatibility is enabled.
Router id	Shows the ID of the OSPF router.
OSPF traps	Shows whether or not the following OSPF traps generation is enabled. <ul style="list-style-type: none"> • Interface State Change Trap • Virtual Interface State Change Trap • Neighbor State Change Trap • Virtual Neighbor State Change Trap • Interface Configuration Error Trap • Virtual Interface Configuration Error Trap • Interface Authentication Failure Trap • Virtual Interface Authentication Failure Trap • Interface Receive Bad Packet Trap • Virtual Interface Receive Bad Packet Trap • Interface Retransmit Packet Trap • Virtual Interface Retransmit Packet Trap • Originate LSA Trap • Originate MaxAge LSA Trap • Link State Database Overflow Trap • Link State Database Approaching Overflow Trap
Area-ID	Shows the area ID of the interface.
Area-Type	Shows the area type, which can be one of the following: <ul style="list-style-type: none"> • nssa • normal • stub
Cost	Shows the cost of the area.

TABLE 22 Output parameters of the **show ip ospf config** command (Continued)

Field	Description
Ethernet Interface	Shows the OSPF interface.
ip ospf md5-authentication-key- activation-wait-time	Shows the wait time of the device until placing a new MD5 key into effect.
ip ospf area	Shows the area of the interface.
ip ospf cost	Shows the overhead required to send a packet across an interface.

Displaying CPU utilization and other OSPF tasks

You can display CPU utilization statistics for OSPF and other tasks.

To display CPU utilization statistics, enter the following command.

```
Brocade#show tasks
```

Task Name	Pri	State	PC	Stack	Size	CPU Usage(%)	task id	task vid
idle	0	ready	00001904	04058fa0	4096	99	0	0
monitor	20	wait	0000d89c	0404bd80	8192	0	0	0
int	16	wait	0000d89c	04053f90	16384	0	0	0
timer	15	wait	0000d89c	04057f90	16384	0	0	0
dbg	30	wait	0000d89c	0404ff08	8192	0	0	0
flash	17	wait	0000d89c	0409ff90	8192	0	0	0
wd	31	wait	0000d89c	0409df80	8192	0	0	0
boot	17	wait	0000d89c	04203e28	65536	0	0	0
main	3	wait	0000d89c	2060cf38	65536	0	0	1
itc	6	wait	0000d89c	20612ae8	16384	0	0	1
tmr	5	wait	0000d89c	20627628	16384	0	0	1
ip_rx	5	wait	0000d89c	2062ff48	16384	0	0	1
scp	5	wait	0000d89c	20635628	16384	0	0	1
console	5	wait	0000d89c	2063e618	32768	0	0	1
vlan	5	wait	0000d89c	20648618	16384	0	0	1
mac_mgr	5	wait	0000d89c	20657628	16384	0	0	1
mrp_mgr	5	wait	0000d89c	2065c628	16384	0	0	1
vsrp	5	wait	0000d89c	20663620	16384	0	0	1
snms	5	wait	0000d89c	20667628	16384	0	0	1
rtm	5	wait	0000d89c	20674628	16384	0	0	1
rtm6	5	wait	0000d89c	2068a628	16384	0	0	1
ip_tx	5	ready	0000d89c	206a9628	16384	0	0	1
rip	5	wait	0000d89c	20762628	16384	0	0	1
bgp	5	wait	0000d89c	207e6628	16384	0	0	1
bgp_io	5	wait	0000d89c	2082ef00	16384	0	0	1
ospf	5	wait	0000d89c	20832628	16384	1	0	1
ospf_r_calc	5	wait	0000d89c	2089ff10	16384	0	0	1
isis_task	5	wait	0000d89c	208a3628	16384	0	0	1
isis_spf	5	wait	0000d89c	208a8f10	16384	0	0	1
mcast	5	wait	0000d89c	208ac628	16384	0	0	1
vrrp	5	wait	0000d89c	208b4628	16384	0	0	1
ripng	5	wait	0000d89c	208b9628	16384	0	0	1
ospf6	5	wait	0000d89c	208c3628	16384	0	0	1
ospf6_rt	5	wait	0000d89c	208c7f08	16384	0	0	1
mcast6	5	wait	0000d89c	208cb628	16384	0	0	1
l4	5	wait	0000d89c	208cf620	16384	0	0	1
stp	5	wait	0000d89c	209a7620	16384	0	0	1
snmp	5	wait	0000d89c	209c3628	32768	0	0	1
rmon	5	wait	0000d89c	209cc628	32768	0	0	1
web	5	wait	0000d89c	209d6628	32768	0	0	1
lACP	5	wait	0000d89c	209da628	16384	0	0	1
dot1x	5	wait	0000d89c	209e0620	16384	0	0	1
hw_access	5	wait	0000d89c	209e6628	16384	0	0	1

Syntax: show tasks

The displayed information shows the following:

TABLE 23 CLI display of show tasks

This field...	Displays...
Task Name	Name of task running on the device.
Pri	Priority of the task in comparison to other tasks
State	Current state of the task
PC	current instruction for the task
Stack	Stack location for the task
Size	Stack size of the task
CPU Usage(%)	Percentage of the CPU being used by the task
task id	Task's ID number assigned by the operating system.
task vid	A memory domain ID.

Displaying OSPF area information

To display OSPF area information, enter the following command at any CLI level.

```
Brocade# show ip ospf area
Indx Area      Type  Cost  SPFR  ABR  ASBR  LSA  Chksum(Hex)
1  0.0.0.0    normal  0    1    0    0    1    0000781f
2  10.147.60.0 normal  0    1    0    0    1    0000fee6
3  10.147.80.0 stub    1    1    0    0    2    000181cd
```

Syntax: `show ip ospf area [area-id] | [num]`

The *area-id* parameter shows information for the specified area.

The *num* parameter displays the entry that corresponds to the entry number you enter. The entry number identifies the entry's position in the area table.

This display shows the following information.

TABLE 24 CLI display of OSPF area information

This field...	Displays...
Index	The row number of the entry in the router's OSPF area table.
Area	The area number.
Type	The area type, which can be one of the following: <ul style="list-style-type: none"> nssa normal stub
Cost	The area's cost.
SPFR	The SPFR value.
ABR	The ABR number.
ASBR	The ASBR number.

TABLE 24 CLI display of OSPF area information (Continued)

This field...	Displays...
LSA	The LSA number.
Chksum(Hex)	The checksum for the LSA packet. The checksum is based on all the fields in the packet except the age field. The device uses the checksum to verify that the packet is not corrupted.

Displaying OSPF neighbor information

To display OSPF neighbor information, enter the following command at any CLI level.

```
Brocade# show ip ospf neighbor
```

Port	Address	Pri	State	Neigh Address	Neigh ID	Ev	Op	Cnt
v10	10.1.10.1	1	FULL/DR	10.1.10.2	10.65.12.1	5	2	0
v11	10.1.11.1	1	FULL/DR	10.1.11.2	10.65.12.1	5	2	0
v12	10.1.12.1	1	FULL/DR	10.1.12.2	10.65.12.1	5	2	0
v13	10.1.13.1	1	FULL/DR	10.1.13.2	10.65.12.1	5	2	0
v14	10.1.14.1	1	FULL/DR	10.1.14.2	10.65.12.1	5	2	0

Syntax: `show ip ospf neighbor [router-id ip-addr | num | extensive]`

The **router-id** *ip-addr* parameter displays only the neighbor entries for the specified router.

The *num* parameter displays only the entry in the specified index position in the neighbor table. For example, if you enter “1”, only the first entry in the table is displayed.

The **extensive** option displays detailed information about the neighbor.

These displays show the following information.

TABLE 25 CLI display of OSPF neighbor information

Field	Description
Port	The port through which the device is connected to the neighbor.
Address	The IP address of the port on which this device is connected to the neighbor.
Pri	The OSPF priority of the neighbor. <ul style="list-style-type: none"> For multi-access networks, the priority is used during election of the Designated Router (DR) and Backup designated Router (BDR). For point-to-point links, this field shows one of the following values: <ul style="list-style-type: none"> 1 = point-to-point link 3 = point-to-point link with assigned subnet

TABLE 25 CLI display of OSPF neighbor information (Continued)

Field	Description
State	<p>The state of the conversation between the device and the neighbor. This field can have one of the following values:</p> <ul style="list-style-type: none"> • Down – The initial state of a neighbor conversation. This value indicates that there has been no recent information received from the neighbor. • Attempt – This state is only valid for neighbors attached to non-broadcast networks. It indicates that no recent information has been received from the neighbor. • Init – A Hello packet has recently been seen from the neighbor. However, bidirectional communication has not yet been established with the neighbor. (The router itself did not appear in the neighbor's Hello packet.) All neighbors in this state (or higher) are listed in the Hello packets sent from the associated interface. • 2-Way – Communication between the two routers is bidirectional. This is the most advanced state before beginning adjacency establishment. The Designated Router and Backup Designated Router are selected from the set of neighbors in the 2-Way state or greater. • ExStart – The first step in creating an adjacency between the two neighboring routers. The goal of this step is to decide which router is the master, and to decide upon the initial Database Description (DD) sequence number. Neighbor conversations in this state or greater are called adjacencies. • Exchange – The router is describing its entire link state database by sending Database Description packets to the neighbor. Each Database Description packet has a DD sequence number, and is explicitly acknowledged. Only one Database Description packet can be outstanding at any time. In this state, Link State Request packets can also be sent asking for the neighbor's more recent advertisements. All adjacencies in Exchange state or greater are used by the flooding procedure. In fact, these adjacencies are fully capable of transmitting and receiving all types of OSPF routing protocol packets. • Loading – Link State Request packets are sent to the neighbor asking for the more recent advertisements that have been discovered (but not yet received) in the Exchange state. • Full – The neighboring routers are fully adjacent. These adjacencies will now appear in router links and network link advertisements.
Neigh Address	<p>The IP address of the neighbor.</p> <p>For point-to-point links, the value is as follows:</p> <ul style="list-style-type: none"> • If the Pri field is "1", this value is the IP address of the neighbor router's interface. • If the Pri field is "3", this is the subnet IP address of the neighbor router's interface.
Neigh ID	The neighbor router's ID.
Ev	The number of times the neighbor's state changed.
Opt	The sum of the option bits in the Options field of the Hello packet. This information is used by Brocade technical support. Refer to Section A.2 in RFC 2178 for information about the Options field in Hello packets.
Cnt	The number of LSAs that were retransmitted.

Displaying OSPF interface information

To display OSPF interface information, enter the following command at any CLI level

```
Brocade# show ip ospf interface ethernet 1/11

Ethernet 1/11 admin up, oper up
  IP Address 10.1.1.15, Area 0
  Database Filter: Not Configured
  State active(default passive), Pri 1, Cost 1, Options 2,Type broadcast
Events 2
Timers(sec): Transmit 1, Retrans 5, Hello 10, Dead 40
DR: Router ID 192.168.254.1      Interface Address 10.1.1.1
BDR: Router ID 10.0.0.15       Interface Address 10.1.1.15
Neighbor Count = 1, Adjacent Neighbor Count= 1
Neighbor:      10.1.1.1 (DR)
Authentication-Key: None
MD5 Authentication: Key None, Key-Id None, Auth-change-wait-time 300
```

If you specify an interface that is not configured within a specified VRF, then the following error message will display as shown in the example below:

```
Brocade# show ip ospf vrf one interface ethernet 1/1
Error: Interface(eth 1/1) not part of VRF(one)
```

NOTE

You cannot display multiple ports for any interfaces. For example, when displaying OSPF interface information on ethernet 1/1 only one port can displayed at a given time.

Syntax: `show ip ospf [vrf vrf-name] interface [ip-addr] [brief] [ethernet port | loopback number | tunnel number | ve number]`

The [**vrf vrf-name**] parameter displays information for VRF, or a specific vrf-name.

The [**ip-addr**] parameter displays the OSPF interface information for the specified IP address.

The [**brief**] parameter displays interface information in the brief mode. Refer to “[Displaying OSPF interface brief information](#)” on page 224.

The **ethernet | loopback | tunnel | ve** parameter specifies the interface for which to display information. If you specify an Ethernet interface, you can also specify the port number associated with the interface. If you specify a loopback, tunnel, or VE interface, you can also specify the number associated with the interface.

The following table defines the highlighted fields shown in the above example output of the **show ip ospf interface ethernet** command.

TABLE 26 Output of the **show ip ospf interface** command

This field	Displays
Interface	The type of interface type and the port number or number of the interface.
IP Address	The IP address of the interface.
Area	The OSPF area configured on the interface

TABLE 26 Output of the **show ip ospf interface** command (Continued)

This field	Displays
Database Filter	The router's configuration for blocking outbound LSAs on an OSPF interface as described in "Block flooding of outbound LSAs on specific OSPF interfaces" on page 179. If Not Configured is displayed, there is no outbound LSA filter configured. This is the default condition.
State	The state of the interface. Possible states include the following: <ul style="list-style-type: none"> • DR – The interface is functioning as the Designated Router for OSPFv2. • BDR – The interface is functioning as the Backup Designated Router for OSPFv2. • Loopback – The interface is functioning as a loopback interface. • P2P – The interface is functioning as a point-to-point interface. • Passive – The interface is up but it does not take part in forming an adjacency. • Waiting – The interface is trying to determine the identity of the BDR for the network. • None – The interface does not take part in the OSPF interface state machine. • Down – The interface is unusable. No protocol traffic can be sent or received on such a interface. • DR other – The interface is a broadcast or NBMA network on which another router is selected to be the DR. • Active - The interface sends or receives all the OSPFv2 control packets and forms the adjacency.
default	Shows whether or not the default passive state is set.
Pri	The link ID as defined in the router-LSA. This value can be one of the following: 1 = point-to-point link 3 = point-to-point link with an assigned subnet
Cost	The configured output cost for the interface.
Options	OSPF Options (Bit7 - Bit0): <ul style="list-style-type: none"> • unused:1 • opaque:1 • summary:1 • dont_propagate:1 • nssa:1 • multicast:1 • externals:1 • tos:1
Type	The area type, which can be one of the following: <ul style="list-style-type: none"> • Broadcast • Point to Point • non-broadcast • Virtual Link
Events	OSPF Interface Event: <ul style="list-style-type: none"> • Interface_Up = 0x00 • Wait_Timer = 0x01 • Backup_Seen = 0x02 • Neighbor_Change = 0x03 • Loop_Indication = 0x04 • Unloop_Indication = 0x05 • Interface_Down = 0x06 • Interface_Passive = 0x07
Timer intervals	The interval, in seconds, of the transmit-interval, retransmit-interval, hello-interval, and dead-interval timers.

TABLE 26 Output of the **show ip ospf interface** command (Continued)

This field	Displays
DR	The router ID (IPv4 address) of the DR.
BDR	The router ID (IPv4 address) of the BDR.
Neighbor Count	The number of neighbors to which the interface is connected.
Adjacent Neighbor Count	The number of adjacent neighbor routers.
Neighbor:	The IP address of the neighbor.

Displaying OSPF interface brief information

The following command introduced in version 03.3.00 is used to display the OSPF database brief information.

```
Brocade# show ip ospf interface brief
Number of Interfaces is 1
Interface Area IP Addr/Mask Cost State Nbrs(F/C)
eth 1/2 0 10.1.1.2/24 1 down 0/0
```

[Table 27](#) defines the fields shown in the above example output of the **show ip ospf interface brief** command.

TABLE 27 Output of the **show ip ospf interface brief** command

This field	Displays
Interface	The interface through which the router is connected to the neighbor.
Area	The OSPF Area that the interface is configured in.
IP Addr/Mask	The IP address and mask of the interface.
Cost	The configured output cost for the interface.

TABLE 27 Output of the `show ip ospf interface brief` command (Continued)

This field	Displays
State	<p>The state of the conversation between the router and the neighbor. This field can have one of the following values:</p> <ul style="list-style-type: none"> • Down – The initial state of a neighbor conversation. This value indicates that there has been no recent information received from the neighbor. • Attempt – This state is only valid for neighbors attached to non-broadcast networks. It indicates that no recent information has been received from the neighbor. • Init – A Hello packet has recently been seen from the neighbor. However, bidirectional communication has not yet been established with the neighbor. (The router itself did not appear in the neighbor's Hello packet.) All neighbors in this state (or higher) are listed in the Hello packets sent from the associated interface. • 2-Way – Communication between the two routers is bidirectional. This is the most advanced state before beginning adjacency establishment. The Designated Router and Backup Designated Router are selected from the set of neighbors in the 2-Way state or greater. • ExStart – The first step in creating an adjacency between the two neighboring routers. The goal of this step is to decide which router is the master, and to decide upon the initial Database Description (DD) sequence number. Neighbor conversations in this state or greater are called adjacencies. • Exchange – The router is describing its entire link state database by sending Database Description packets to the neighbor. Each Database Description packet has a DD sequence number, and is explicitly acknowledged. Only one Database Description packet can be outstanding at any time. In this state, Link State Request packets can also be sent asking for the neighbor's more recent advertisements. All adjacencies in Exchange state or greater are used by the flooding procedure. In fact, these adjacencies are fully capable of transmitting and receiving all types of OSPF routing protocol packets. • Loading – Link State Request packets are sent to the neighbor asking for the more recent advertisements that have been discovered (but not yet received) in the Exchange state. • Full – The neighboring routers are fully adjacent. These adjacencies will now appear in router links and network link advertisements.
Nbrs(F/C)	<p>The number of adjacent neighbor routers. The number to the left of the "/" are the neighbor routers that are fully adjacent and the number to the right represents all adjacent neighbor routers.</p>

Displaying OSPF route information

To display OSPF route information, enter the following command at any CLI level.

```
Brocade#show ip ospf route
```

```
OSPF Area 0x00000000 ASBR Routes 1:
```

Destination	Mask	Path_Cost	Type2_Cost	Path_Type		
10.65.12.1	255.255.255.255	1	0	Intra		
Adv_Router	Link_State	Dest_Type	State	Tag	Flags	
10.65.12.1	10.65.12.1	Asbr	Valid	0	6000	
Paths	Out_Port	Next_Hop	Type	State		
1	v49	10.1.49.2	OSPF	21 01		
2	v12	10.1.12.2	OSPF	21 01		
3	v11	10.1.11.2	OSPF	21 01		
4	v10	10.1.10.2	OSPF	00 00		

```
OSPF Area 0x00000041 ASBR Routes 1:
```

Destination	Mask	Path_Cost	Type2_Cost	Path_Type		
10.65.12.1	255.255.255.255	1	0	Intra		
Adv_Router	Link_State	Dest_Type	State	Tag	Flags	
10.65.12.1	10.65.12.1	Asbr	Valid	0	6000	
Paths	Out_Port	Next_Hop	Type	State		
1	v204	10.65.5.251	OSPF	21 01		
2	v201	10.65.2.251	OSPF	20 d1		
3	v202	10.65.3.251	OSPF	20 cd		
4	v205	10.65.6.251	OSPF	00 00		

```
OSPF Area Summary Routes 1:
```

Destination	Mask	Path_Cost	Type2_Cost	Path_Type		
10.65.0.0	255.255.0.0	0	0	Inter		
Adv_Router	Link_State	Dest_Type	State	Tag	Flags	
10.1.10.1	0.0.0.0	Network	Valid	0	0000	
Paths	Out_Port	Next_Hop	Type	State		
1	1/1	0.0.0.0	DIRECT	00 00		

```
OSPF Regular Routes 208:
```

Destination	Mask	Path_Cost	Type2_Cost	Path_Type		
10.1.10.0	255.255.255.252	1	0	Intra		
Adv_Router	Link_State	Dest_Type	State	Tag	Flags	
10.1.10.1	10.1.10.2	Network	Valid	0	0000	
Paths	Out_Port	Next_Hop	Type	State		
1	v10	0.0.0.0	OSPF	00 00		

Destination	Mask	Path_Cost	Type2_Cost	Path_Type		
10.1.11.0	255.255.255.252	1	0	Intra		
Adv_Router	Link_State	Dest_Type	State	Tag	Flags	
10.1.10.1	10.1.11.2	Network	Valid	0	0000	
Paths	Out_Port	Next_Hop	Type	State		
1	v11	0.0.0.0	OSPF	00 00		

Syntax: `show ip ospf routes [ip-addr]`

The *ip-addr* parameter specifies a destination IP address. If you use this parameter, only the route entries for that destination are shown.

This display shows the following information.

TABLE 28 CLI display of OSPF route information

This field...	Displays...
Destination	The IP address of the route's destination.
Mask	The network mask for the route.
Path_Cost	The cost of this route path. (A route can have multiple paths. Each path represents a different exit port for the device.)
Type2_Cost	The type 2 cost of this path.
Path_Type	The type of path, which can be one of the following: <ul style="list-style-type: none"> • Inter – The path to the destination passes into another area. • Intra – The path to the destination is entirely within the local area. • External1 – The path to the destination is a type 1 external route. • External2 – The path to the destination is a type 2 external route.
Adv_Router	The OSPF router that advertised the route to this device.
Link-State	The link state from which the route was calculated.
Dest_Type	The destination type, which can be one of the following: <ul style="list-style-type: none"> • ABR – Area Border Router • ASBR – Autonomous System Boundary Router • Network – the network
State	The route state, which can be one of the following: <ul style="list-style-type: none"> • Changed • Invalid • Valid <p>This information is used by Brocade technical support.</p>
Tag	The external route tag.
Flags	State information for the route entry. This information is used by Brocade technical support.
Paths	The number of paths to the destination.
Out_Port	The router port through which the device reaches the next hop for this route path.
Next_Hop	The IP address of the next-hop router for this path.
Type	The route type, which can be one of the following: <ul style="list-style-type: none"> • OSPF • Static Replaced by OSPF
State	State information for the path. This information is used by Brocade technical support.

Displaying the routes that have been redistributed into OSPF

You can display the routes that have been redistributed into OSPF. To display the redistributed routes, enter the following command at any level of the CLI.

```
Brocade# show ip ospf redistribute route
10.0.0 255.255.0.0 static
10.1.0.0 255.255.0.0 static
10.11.61.0 255.255.255.0 connected
10.1.0.0 255.255.0.0 static
```

In this example, four routes have been redistributed. Three of the routes were redistributed from static IP routes and one route was redistributed from a directly connected IP route.

Syntax: `show ip ospf redistribute route [ip-addr ip-mask]`

The `ip-addr ip-mask` parameter specifies a network prefix and network mask. Here is an example.

```
Brocade# show ip ospf redistribute route 10.1.0.0 255.255.0.0
10.2.0.0 255.255.0.0 static
```

Displaying OSPF database information

The following command introduced in version 03.2.00 is used to display the OSPF database.

```
Brocade#show ip ospf database
Graceful Link States
```

```
Area Interface Adv Rtr Age Seq(Hex) Prd Rsn Nbr Intf IP
0 eth 1/2 10.2.2.2 7 80000001 60 SW 10.1.1.2
```

```
Router Link States
```

Index	AreaID	Type	LS ID	Adv Rtr	Seq(Hex)	Age	Cksum
1	0	Rtr	10.2.2.2	10.2.2.2	80000003	93	0xac6c
2	0	Rtr	10.1.1.1	10.1.1.1	80000005	92	0x699e
3	0	Net	10.1.1.2	10.2.2.2	80000002	93	0xbd73
4	0	OpAr	10.0.0.3	10.1.1.1	80000005	83	0x48e7
5	0	OpAr	10.0.0.2	10.2.2.2	80000006	80	0x50da
6	10.111.111.111	Rtr	10.1.1.1	10.1.1.1	80000004	142	0x0a38
7	10.111.111.111	Summ	10.1.1.1	10.1.1.1	80000001	147	0x292b
8	10.111.111.111	OpAr	10.0.0.2	10.1.1.1	80000002	179	0x063f

```
Type-5 AS External Link States
```

Index	Age	LS ID	Router	Netmask	Metric	Flag	Fwd Address
1	147	10.9.1.13	10.1.1.1	ffffffff	0000000a	0000	0.0.0.0
2	147	10.9.1.26	10.1.1.1	ffffffff	0000000a	0000	0.0.0.0

Syntax: `show ip ospf database`

This display shows the information described in [Table 29](#).

TABLE 29 CLI display of OSPF database information

This field...	Displays...
Area	The OSPF area that the interface configured for OSPF graceful restart is in.
Interface	The interface that is configured for OSPF graceful restart.

TABLE 29 CLI display of OSPF database information (Continued)

This field...	Displays...
Prd	Grace Period: The number of seconds that the router's neighbors should continue to advertise the router as fully adjacent, regardless of the state of database synchronization between the router and its neighbors. Since this time period began when grace-LSA's LS age was equal to 0, the grace period terminates when either: <ul style="list-style-type: none"> • the LS age of the grace-LSA exceeds the value of a Grace Period • the grace-LSA is flushed.
Rsn	Graceful restart reason: The reason for the router restart defined as one of the following: <ul style="list-style-type: none"> • UK – unknown • RS – software restart • UP – software upgrade or reload • SW – switch to redundant control processor
Nbr Intf IP	The IP address of the OSPF graceful restart neighbor.
Index	ID of the entry
Aging	The age of the LSA, in seconds.
Area ID	ID of the OSPF area
Type	Link state type of the route.
LS ID	The ID of the link-state advertisement from which the router learned this route.
Adv Rtr	ID of the advertised route.
Seq(Hex)	The sequence number of the LSA. The OSPF neighbor that sent the LSA stamps the LSA with a sequence number. This number enables the device and other OSPF routers to determine which LSA for a given route is the most recent.
Age	The age of the LSA in seconds.
Chksum	The checksum for the LSA packet. The checksum is based on all the fields in the packet except the age field. The device uses the checksum to verify that the packet is not corrupted.
Router	The router IP address.
Netmask	The subnet mask of the network.
Metric	The cost (value) of the route
Flag	State information for the route entry. This information is used by Brocade technical support.

Displaying OSPF external link state information

To display external link state information, enter the following command at any CLI level.

```
Brocade#show ip ospf database external-link-state
Index Aging LS ID Router Netmask Metric Flag
1 591 10.65.13.0 10.65.12.1 fffffff0 8000000a 0000
2 591 10.65.16.0 10.65.12.1 fffffff0 8000000a 0000
3 591 10.65.14.0 10.65.12.1 fffffff0 8000000a 0000
4 591 10.65.17.0 10.65.12.1 fffffff0 8000000a 0000
5 592 10.65.12.0 10.65.12.1 fffffff0 8000000a 0000
6 592 10.65.15.0 10.65.12.1 fffffff0 8000000a 0000
7 592 10.65.18.0 10.65.12.1 fffffff0 8000000a 0000
```

Syntax: `show ip ospf database external-link-state [advertise num | extensive | link-state-id ip-addr | router-id ip-addr | sequence-number num(Hex)]`

The **advertise num** parameter displays the hexadecimal data in the specified LSA packet. The *num* parameter identifies the LSA packet by its position in the router's External LSA table. To determine an LSA packet's position in the table, enter the **show ip ospf external-link-state** command to display the table.

The **extensive** option displays the LSAs in decrypted format.

NOTE

You cannot use the **extensive** option in combination with other display options. The entire database is displayed.

The **link-state-id ip-addr** parameter displays the External LSAs for the LSA source specified by *IP-addr*.

The **router-id ip-addr** parameter shows the External LSAs for the specified OSPF router.

The **sequence-number num(Hex)** parameter displays the External LSA entries for the specified hexadecimal LSA sequence number.

This display shows the following information.

TABLE 30 CLI display of OSPF external link state information

This field...	Displays...
Index	ID of the entry
Aging	The age of the LSA, in seconds.
LS ID	The ID of the link-state advertisement from which the device learned this route.
Router	The router IP address.
Netmask	The subnet mask of the network.
Metric	The cost (value) of the route
Flag	State information for the route entry. This information is used by Brocade technical support.

Displaying OSPF database-summary information

To display database-summary information, enter the following command at any CLI level.

```
Brocade#show ip ospf database database-summary
Area ID      Router  Network Sum-Net  Sum-ASBR  NSSA-Ext  Opq-Area  Subtotal
0.0.0.0      104    184     19      42        0         0         349
AS External
Total        104    184     19      42        0         0         657
```

Syntax: show ip ospf database database-summary

TABLE 31 CLI display of OSPF database summary information

This field...	Displays...
Area ID	The area number.
Router	The number of router link state advertisements in that area.
Network	The number of network link state advertisements in that area.
Sum-Net	The number of summary link state advertisements in that area.
Sum-ASBR	The number of summary autonomous system boundary router (ASBR) link state advertisements in that area
NSSA-Ext	The number of not-so-stubby
Opq-area	the number of Type-10 (area-scope) Opaque LSA.s

Displaying OSPF database link state information

To display database link state information, enter the following command.

```
Brocade# show ip ospf database link-state
Index Area ID      Type  LS ID          Adv Rtr          Seq(Hex) Age  Cksum
1      0              Rtr  10.1.10.1     10.1.10.1       800060ef 3   0x4be2
2      0              Rtr  10.65.12.1    10.65.12.1      80005264 6   0xc870
3      0              Net  10.1.64.2     10.65.12.1      8000008c 1088 0x06b7
4      0              Net  10.1.167.2    10.65.12.1      80000093 1809 0x86c8
5      0              Net  10.1.14.2     10.65.12.1      8000008c 1088 0x2ec1
6      0              Net  10.1.117.2    10.65.12.1      8000008c 1087 0xbccb
7      0              Net  10.1.67.2     10.65.12.1      8000008c 1088 0xe4d5
8      0              Net  10.1.170.2    10.65.12.1      80000073 604  0xa5c6
9      0              Net  10.1.17.2     10.65.12.1      8000008c 1088 0x0ddf
10     0              Net  10.1.120.2    10.65.12.1      8000008c 1087 0x9be9
11     0              Net  10.1.70.2     10.65.12.1      8000008c 1088 0xc3f3
12     0              Net  10.1.173.2    10.65.12.1      80000017 1087 0x3d88
13     0              Net  10.1.20.2     10.65.12.1      8000008c 1088 0xebfd
14     0              Net  10.1.123.2    10.65.12.1      8000008c 1087 0x7a08
15     0              Net  10.1.73.2     10.65.12.1      8000008c 1088 0xa212
16     0              Net  10.1.176.2    10.65.12.1      80000025 1087 0xffb4
17     0              Net  10.1.23.2     10.65.12.1      8000008c 1088 0xca1c
18     0              Net  10.1.126.2    10.65.12.1      8000008c 1087 0x5926
```

Syntax: show ip ospf database link-state [advertise num | asbr [ip-addr] [adv-router ip-addr] | extensive | link-state-id ip-addr | network [ip-addr] [adv-router ip-addr] | nssa [ip-addr] [adv-router ip-addr] | router [ip-addr] [adv-router ip-addr] | router-id ip-addr | self-originate | sequence-number num(Hex) | summary [ip-addr] [adv-router ip-addr]

The **advertise** *num* parameter displays the hexadecimal data in the specified LSA packet. The *num* parameter identifies the LSA packet by its position in the router's LSA table. To determine an LSA packet's position in the table, enter the **show ip ospf link-state** command to display the table.

The **asbr** option shows ASBR LSAs.

The **extensive** option displays the LSAs in decrypted format.

NOTE

You cannot use the **extensive** option in combination with other display options. The entire database is displayed.

The **link-state-id** *ip-addr* parameter displays the LSAs for the LSA source specified by *IP-addr*.

The **network** option shows network LSAs.

The **nssa** option shows NSSA LSAs.

The **router-id** *ip-addr* parameter shows the LSAs for the specified OSPF router.

The **sequence-number** *num(Hex)* parameter displays the LSA entries for the specified hexadecimal LSA sequence number.

The **self-originate** option shows self-originated LSAs.

The **summary** option shows summary information.

TABLE 32 CLI display of OSPF database link state information

This field...	Displays...
Index	ID of the entry
Area ID	ID of the OSPF area
Type LS ID	Link state type of the route
Adv Rtr	ID of the advertised route
Seq(Hex)	The sequence number of the LSA. The OSPF neighbor that sent the LSA stamps the LSA with a sequence number. This number enables the device and other OSPF routers to determine which LSA for a given route is the most recent.
Age	The age of the LSA in seconds.
Cksum	The checksum for the LSA packet. The checksum is based on all the fields in the packet except the age field. The device uses the checksum to verify that the packet is not corrupted.

Displaying OSPF ABR and ASBR information

To display OSPF ABR and ASBR information, enter the following command at any CLI level.

```
Brocade# show ip ospf border-routers
```

Syntax: **show ip ospf border-routers** [*ip-addr*]

The *ip-addr* parameter displays the ABR and ASBR entries for the specified IP address.

```
Brocade# show ip ospf border-routers
```

	router ID	router type	next hop router	outgoing interface	Area
1	10.65.12.1	ABR	10.1.49.2	v49	0
1	10.65.12.1	ASBR	10.1.49.2	v49	0
1	10.65.12.1	ABR	10.65.2.251	v201	65
1	10.65.12.1	ASBR	10.65.2.251	v201	65

Syntax: show ip ospf border-routers

TABLE 33 CLI display of OSPF border routers

This field...	Displays...
(Index)	Displayed index number of the border router.
Router ID	ID of the OSPF router
Router type	Type of OSPF router: ABR or ASBR
Next hop router	ID of the next hop router
Outgoing interface	ID of the interface on the router for the outgoing route.
Area	ID of the OSPF area to which the OSPF router belongs

Displaying OSPF trap status

All traps are enabled by default when you enable OSPF. To disable or re-enable an OSPF trap, refer to [“Modify OSPF traps generated”](#) on page 206.

To display the state of each OSPF trap, enter the following command at any CLI level.

```
Brocade# show ip ospf trap
Interface State Change Trap:           Enabled
Virtual Interface State Change Trap:    Enabled
Neighbor State Change Trap:           Enabled
Virtual Neighbor State Change Trap:    Enabled
Interface Configuration Error Trap:    Enabled
Virtual Interface Configuration Error Trap: Enabled
Interface Authentication Failure Trap:  Enabled
Virtual Interface Authentication Failure Trap: Enabled
Interface Receive Bad Packet Trap:     Enabled
Virtual Interface Receive Bad Packet Trap: Enabled
Interface Retransmit Packet Trap:      Disabled
Virtual Interface Retransmit Packet Trap: Disabled
Originate LSA Trap:                   Disabled
Originate MaxAge LSA Trap:            Disabled
Link State Database Overflow Trap:     Disabled
Link State Database Approaching Overflow Trap: Disabled
```

Syntax: show ip ospf trap

Viewing Configured OSPF point-to-point links

You can use the **show ip ospf interface** command to display OSPF point-to-point information. Enter the following command at any CLI level.

Displaying OSPF information

```
Brocade# show ip ospf interface 192.168.1.1
Ethernet 2/1,OSPF enabled
IP Address 192.168.1.1, Area 0
OSPF state ptr2ptr, Pri 1, Cost 1, Options 2, Type pt-2-pt Events 1
Timers(sec): Transit 1, Retrans 5, Hello 10, Dead 40
DR: Router ID 0.0.0.0 Interface Address 0.0.0.0
BDR: Router ID 0.0.0.0 Interface Address 0.0.0.0
Neighbor Count = 0, Adjacent Neighbor Count= 1
Neighbor: 10.2.2.2
Authentication-Key:None
MD5 Authentication: Key None, Key-Id None, Auth-change-wait-time 300
```

Syntax: show ip ospf interface [ip-addr]

The *ip-addr* parameter displays the OSPF interface information for the specified IP address.

The following table defines the highlighted fields shown in the above example output of the show ip ospf interface command

TABLE 34 Output of the show ip ospf interface command


This field	Displays
IP Address	The IP address of the interface.
OSPF state	The OSPF state of the interface.
Pri	The router priority.
Cost	The configured output cost for the interface.
Options	OSPF Options (Bit7 - Bit0): <ul style="list-style-type: none">• unused:1• opaque:1• summary:1• dont_propagate:1• nssa:1• multicast:1• externals:1• tos:1
Type	The area type, which can be one of the following: <ul style="list-style-type: none">• Broadcast = 0x01• NBMA = 0x02• Point to Point = 0x03• Virtual Link = 0x04• Point to Multipoint = 0x05
Events	OSPF Interface Event: <ul style="list-style-type: none">• Interface_Up = 0x00• Wait_Timer = 0x01• Backup_Seen = 0x02• Neighbor_Change = 0x03• Loop_Indication = 0x04• Unloop_Indication = 0x05• Interface_Down = 0x06• Interface_Passive = 0x07
Adjacent Neighbor Count	The number of adjacent neighbor routers.
Neighbor:	The IP address of the neighbor.

Displaying OSPF virtual neighbor and link information

You can display OSPF virtual neighbor and virtual link information. For example, the following show run display shows the configuration in [Figure 16](#).

```
Brocade#show run
Current configuration:
!
ver V2.2.1T143
module 1 rx-bi-1g-24-port-fiber
module 2 rx-bi-10g-4-port
module 6 rx-bi-10g-4-port
module 7 rx-bi-1g-24-port-copper
!
!
no spanning-tree
!
vlan 1 name DEFAULT-VLAN
!
!
clock summer-time
clock timezone us Pacific
hostname R11-RX8
router ospf
  area 2
  area 1
  area 1 virtual-link 10.1.1.10
```

FIGURE 16 OSPF virtual neighbor and virtual link example

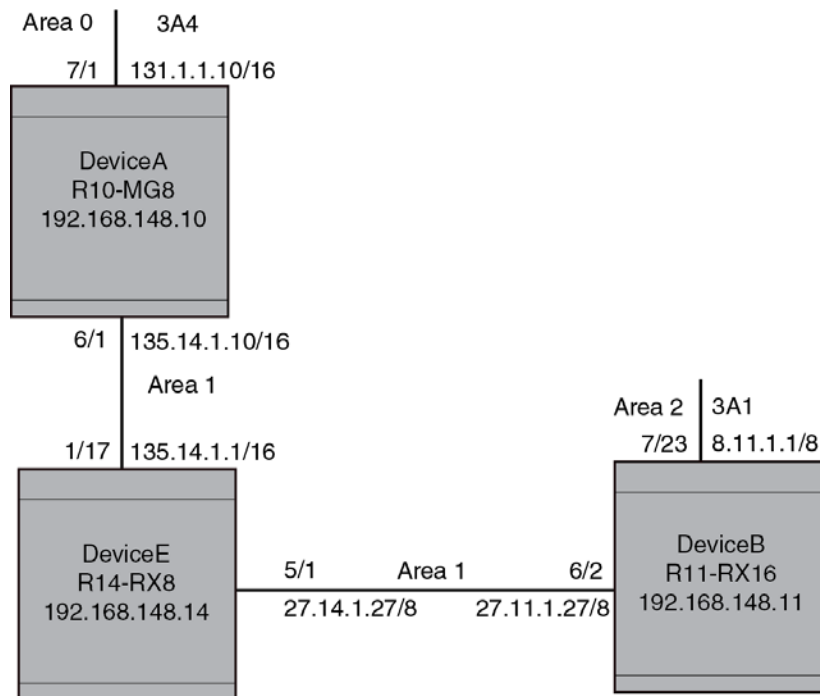

Displaying OSPF virtual neighbor

Use the **show ip ospf virtual neighbor** command to display OSPF virtual neighbor information. The following example relates to the configuration in [Figure 16](#).

```
Brocade# show ip ospf virtual neighbor
Indx Transit Area      Router ID      Neighbor address options
1      1                  10.1.1.10     10.14.1.10     2
      Port   Address      state          events          count
      6/2   10.11.1.27  FULL          5                0
```

Syntax: **show ip ospf virtual neighbor** [*num*]

The *num* parameter displays the table beginning at the specified entry number.

Displaying OSPF virtual link information

Use the **show ip ospf virtual link** command to display OSPF virtual link information. The output below represents the virtual links configured in [Figure 16](#).

```
Brocade# show ip ospf virtual link
Indx Transit Area      Router ID      Transit(sec) Retrans(sec) Hello(sec)
1      1                  10.1.1.10     1              5           10
      Dead(sec)      events          state          Authentication-Key
      40              1              ptr2ptr       None
      MD5 Authentication-Key:      None
      MD5 Authentication-Key-Id:  None
      MD5 Authentication-Key-Activation-Wait-Time:      300
```

Syntax: **show ip ospf virtual link** [*num*]

The *num* parameter displays the table beginning at the specified entry number.

Clearing OSPF neighbors

You can clear all OSPF neighbors or a specified OSPF neighbor using the following command.

```
Brocade# clear ip ospf neighbor all
```

Syntax: **clear ip ospf neighbor all** | *ip-address*

Selecting the **all** option clears all of the OSPF neighbors on the router.

The *ip-address* variable allows you to clear a specific OSPF neighbor.

Displaying an OSPF Graceful Restart information

To display OSPF Graceful Restart information for OSPF neighbors use the **show ip ospf neighbors** command as shown in the following.

```
Brocade#show ip ospf neighbors
Port Address      Pri State          Neigh Address  Neigh ID      Ev Opt Cnt
2/7  10.50.50.10    0  FULL/OTHER     10.50.50.1    10.10.10.30   21 66  0
      < in graceful restart state, helping 1, timer 60 sec >
```

Use the following command to display Type 9 Graceful LSAs on a router.

```
Brocade#show ip ospf database grace-link-state
```



```
Graceful Link States
Area Interface Adv Rtr Age Seq(Hex) Prd Rsn Nbr Intf IP
0 eth 1/2 10.2.2.2 7 80000001 60 SW 10.1.1.2
```

This display shows the following information.

TABLE 35 CLI display of OSPF database grace link state information

This field...	Displays...
Area	The OSPF area that the interface configured for OSPF graceful restart is in.
Interface	The interface that is configured for OSPF graceful restart.
Adv Rtr	ID of the advertised route.
Age	The age of the LSA in seconds.
Seq(Hex)	The sequence number of the LSA. The OSPF neighbor that sent the LSA stamps the LSA with a sequence number. This number enables the device and other OSPF routers to determine which LSA for a given route is the most recent.
Prd	Grace Period: The number of seconds that the router's neighbors should continue to advertise the router as fully adjacent, regardless of the state of database synchronization between the router and its neighbors. Since this time period began when grace-LSA's LS age was equal to 0, the grace period terminates when either: <ul style="list-style-type: none"> the LS age of the grace-LSA exceeds the value of a Grace Period the grace-LSA is flushed.
Rsn	Graceful restart reason: The reason for the router restart defined as one of the following: <ul style="list-style-type: none"> UK – unknown RS – software restart UP – software upgrade or reload SW – switch to redundant control processor
Nbr Intf IP	The IP address of the OSPF graceful restart neighbor.

Displaying OSPF Router Advertisement information

Using the **show ip ospf** command you can display the current OSPF Router Advertisement configuration. The text show below in bold is displayed for an OSPF Router Advertisement configuration.

```
Brocade# show ip ospf
OSPF Version                Version 2
Router Id                   10.10.10.10
ASBR Status                 No
ABR Status                  No          (0)
Redistribute Ext Routes from
External LSA Counter        5
External LSA Checksum Sum   0002460e
Originate New LSA Counter   5
Rx New LSA Counter          8
External LSA Limit          14447047
Database Overflow Interval  0
Database Overflow State :   NOT OVERFLOWED
RFC 1583 Compatibility :    Enabled
```

Displaying OSPF information

```
Originating router-LSAs with maximum metric
Condition: Always Current State: Active
Link Type: PTP STUB TRANSIT
Additional LSAs originated with maximum metric:
  LSA Type           Metric Value
  AS-External        16711680
  Type 3 Summary     16711680
  Type 4 Summary     16711680
  Opaque-TE          4294967295
```

The 03.5.00 release of the Multi-Service IronWare enhances the **show ip ospf** command to display LSAs that have been configured with a maximum metric as described in [“Configuring OSPF router advertisement”](#) on page 211 as shown above in bold.

Displaying the OSPF area translator status information

Run the **show ip ospf area** command at the OSPF router level, to display the status of the area translator.

```
Brocade (config)# router ospf
Brocade (config-ospf-router)#show ip ospf area
Number of Areas is 3, NSSA area 2
Indx Area      Type  Cost   SPFR   ABR   ASBR  LSA   Chksum(Hex)  Translator
1     1         nssa  1      56    1     1    10802 153598b6     Candidate
2     0         normal 0      56    0     0     4    0001a1f0     --
3     2         nssa  7      56    0     0     798  018c972d     Elected
```

Syntax: show ip ospf area

[Table 36](#) describes the fields from the output of **show ip ospf area** command.

TABLE 36 Output display of **show ip ospf area** command

This field...	Displays...
Indx	The row number of the entry in the router's OSPF area table.
Area	The area number.
Type	The area type, which can be one of the following: <ul style="list-style-type: none">• nssa• normal• stub
Cost	The area's cost.
SPFR	The SPFR value. Number of times the SPF has run for this area.
ABR	The ABR number.
ASBR	The ASBR number.
LSA	The LSA number.
Chksum (hex)	The checksum for the LSA packet. The checksum is based on all the fields in the packet except the age field. The device uses the checksum to verify that the packet is not corrupted.
Translator	The translator role. The types of translator roles are: <ul style="list-style-type: none">• Candidate• Elected

Clearing OSPF information

You can use the **clear ip ospf** commands to clear OSPF data on an router as described in the following:

- neighbor information – refer to “[Clearing OSPF neighbors](#)” on page 239.
- reset the OSPF process – “[Disabling and re-enabling the OSPF process](#)” on page 239.
- clear and re-add OSPF routes – “[Clearing OSPF routes](#)” on page 239.

Clearing OSPF neighbors

You can use the following command to delete and relearn all OSPF neighbors, all OSPF neighbors for a specified interface or a specified OSPF neighbor.

```
Brocade# clear ip ospf neighbor all
```

Syntax: **clear ip ospf** [**vrf** *vrf-name*] **neighbor all** [*interface*] | *interface* | *ip-address* [*interface*]

Selecting the **all** option without specifying an interface clears all of the OSPF neighbors on the router.

The *interface* variable specifies the interface that you want to clear all of the OSPF neighbors on. The following types of interfaces can be specified:

- ethernet *slot/port*
- tunnel *tunnel-ID*
- ve *ve-ID*

The *ip-address* variable allows you to clear a specific OSPF neighbor.

Disabling and re-enabling the OSPF process

You can use the following command to disable and re-enable the OSPF process on a router.

```
Brocade# clear ip ospf all
```

Syntax: **clear ip ospf** [**vrf** *vrf-name*] **all**

This command resets the OSPF process and brings it back up after releasing all memory used while retaining all configurations.

Clearing OSPF routes

You can use the following command to clear all OSPF routes or to clear a specific OSPF route.

```
Brocade# clear ip ospf routes all
```

Syntax: **clear ip ospf** [**vrf** *vrf-name*] **routes all** | *ip-address/prefix-length*

Selecting the **all** option resets the OSPF routes including external routes, and OSPF internal routes.

The *ip-address/prefix-length* variable specifies a particular route to delete and then reschedules the SPF calculation.

Commands

The following commands support the features described in this chapter:

- [area prefix-list](#)
- [ip prefix-list](#)
- [show ip prefix-lists](#)

area prefix-list

Filters prefixes advertised in type 3 link-state advertisements (LSAs) between Open Shortest Path First (OSPF) areas of an Area Border Router (ABR). The **no** form of this command changes or cancels the filter.

Syntax **area** {*area-id* | *area_ip*} **prefix-list** *prefix-list-name* {**in** | **out**}
no area {*area-id* | *area_ip*} **prefix-list** *prefix-list-name* {**in** | **out**}

Command Default

Parameters

<i>area-id</i>	Identifies the area where filtering is configured in number format.
<i>area-ip</i>	Identifies the area where filtering is configured in IP address format.
<i>prefix-list-name</i>	Name of the prefix list.
in	Prefix list applies to prefixes advertised to the specified area from other areas.
out	Prefix list applies to prefixes advertised out of the specified area to other areas.

Command Modes Router OSPF subconfiguration mode.

Usage Guidelines With this feature enabled in the **in** direction, all type 3 LSAs originated by the ABR to this area, based on information from all other areas, are filtered by the prefix list. Type 3 LSAs that were originated as a result of the **area range** command in another area are treated like any other type 3 LSA that was originated individually. Any prefix that does not match an entry in the prefix list is implicitly denied.

With this feature enabled in the **out** direction, all type 3 LSAs advertised by the ABR, based on information from this area to all other areas, are filtered by the prefix list.. If the **area range** command has been configured for this area, Type 3 LSAs that correspond to the area range command are treated like any other type 3 LSA.

Prefixes that are not permitted by the prefix list are implicitly denied.

The **area prefix-list** command is only applicable to the ABRs. If the router is not an ABR the configuration is accepted, however it will start working only after the router is made an ABR.

Examples The following example filters prefixes that are sent from all other areas in to area “1” using the prefix list “area_1”.

```
Brocade(config-ospf-router)# area 1 prefix-list area_1 in
```

The following example configures the device to use the prefix list “Routesfor20” to determine which routes to send out to area “10.10.10.1”

```
Brocade(config-ospf-router)# area 10.10.10.1 prefix-list Routesfor20 out
```

History

Release	Command History
---------	-----------------

Multi-Service IronWare R05.5.00	This command was introduced
---------------------------------	-----------------------------

area prefix-list

**Related
Commands** **area range**

ip prefix-list

Creates a prefix list or adds a prefix-list entry. The **no** form of this command deletes a prefix-list entry.

Syntax	ip prefix-list <i>name</i> [seq <i>seq-value</i>] [description <i>string</i>] { deny permit } <i>network-addr/mask-bits</i> [ge <i>ge-value</i>] [le <i>le-value</i>] no ip prefix-list <i>name</i> [seq <i>seq-value</i>] [description <i>string</i>] { deny permit } <i>network-addr/mask-bits</i> [ge <i>ge-value</i>] [le <i>le-value</i>]	
Command Default		
Parameters	<i>name</i>	Specifies the prefix list name.
	seq <i>seq-value</i>	(Optional) The sequence number of the prefix-list entry. If you do not specify a sequence number, a default seq-value is applied beginning with prefix-list entry 5. Subsequent unnumbered entries are incremented by 5. The prefix-list entries are interpreted in numerical order, beginning with the lowest sequence number.
	description <i>string</i>	(Optional) Text string describing the prefix list.
	deny	The software denies access if the neighbor route is in this prefix list.
	permit	The software permits access if the neighbor route is in this prefix list.
	<i>network-addr/mask-bits</i>	Specifies the network address and the number of bits in the network mask.
	ge <i>ge-value</i>	(Optional) If you specify only ge <i>ge-value</i> , then the mask-length range is from <i>ge-value</i> to 32. If you specify both ge <i>ge-value</i> and le <i>le-value</i> , the ge <i>ge-value</i> must meet the condition: $\text{length} < \text{ge-value} \leq \text{le-value} \leq 32$. If you do not specify ge <i>ge-value</i> or le <i>le-value</i> , the prefix list matches only on the exact network prefix you specify with the <i>network-addr>/<mask-bits</i> parameter.
	le <i>le-value</i>	(Optional) If you specify only le <i>le-value</i> , then the mask-length range is from length to <i>le-value</i> . If you specify both ge <i>ge-value</i> and le <i>le-value</i> , the ge <i>ge-value</i> must meet the condition: $\text{length} < \text{ge-value} \leq \text{le-value} \leq 32$. If you do not specify ge <i>ge-value</i> or le <i>le-value</i> , the prefix list matches only on the exact network prefix you specify with the <i>network-addr>/<mask-bits</i> parameter.
Command Modes	Global configuration mode.	
Usage Guidelines	An IP prefix list specifies a list of networks. When you apply an IP prefix list to an area, the device sends or receives only a route whose destination is in the IP prefix list. The software interprets the prefix lists in order, beginning with the lowest sequence number.	

ip prefix-list

Examples The following example configures an IP prefix list “Routesfor20”, which permits routes to network “20.20.0.0/24”. The **area** command configures the device to use the IP prefix list “Routesfor20” to determine which routes to send to area “10.10.10.1”. The device sends routes that go to “20.20.x.x” to area “10.10.10.1” because the IP prefix list explicitly permits these routes to be sent to the area.

```
Brocade(config)# ip prefix-list Routesfor20 permit 20.20.0.0/24
Brocade(config)# router ospf
Brocade(config-ospf-router)# area 10.10.10.1 prefix-list Routesfor20 out
```

History

Release	Command History
---------	-----------------

Related Commands	show ip prefix-lists
------------------	----------------------

show ip prefix-lists

Displays information about configured prefix lists / a specific prefix list

Syntax `show ip prefix-lists [prefix-list-name]`

**Command
Default**

Parameters *prefix-list-name* Name of a specific prefix list

**Command
Modes** User EXEC mode
Privileged EXEC mode

**Usage
Guidelines**

**Command
Output** The `show ip prefix-lists` command displays the following information:

Output field	Description
ip prefix-list	Name of the prefix list, number of entries on the prefix list and details of each prefix-list entry

Examples The following example displays the configured ip prefix list:

```
Brocade# show ip prefix-lists
ip prefix-list abc: 2 entries
seq 5 deny 2.3.4.0/24
seq 10 permit 4.5.0.0/16.
```

History

Release	Command History
---------	-----------------

**Related
Commands**

show ip prefix-lists

IS-IS (IPv4)

Table 37 displays the individual Brocade devices and the IPv4 IS-IS features they support.

TABLE 37 Supported Brocade IPv4 IS-IS features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
IS-IS	Yes	Yes	No	Yes	Yes	Yes	Yes
Level-1 Routing	Yes	Yes	No	Yes	Yes	Yes	Yes
Level-2 Routing	Yes	Yes	No	Yes	Yes	Yes	Yes
Restart helper-mode	Yes	Yes	No	Yes	Yes	Yes	Yes
Broadcast Pseudonode	Yes	Yes	No	Yes	Yes	Yes	Yes
Three-Way Handshake for Point-to-Point Adjacencies	Yes	Yes	No	Yes	Yes	Yes	Yes
IS-IS PSPF Exponential back-off	Yes	Yes	No	Yes	Yes	Yes	Yes
New encryption code for passwords, authentication keys, and community strings	Yes	Yes	No	No	No	No	No
IS-IS Flooding	Yes	Yes	No	Yes	Yes	Yes	Yes
IS-IS Point-to-Point over Ethernet	Yes	Yes	No	Yes	Yes	Yes	Yes
IS-IS over a GRE IP Tunnel	Yes	Yes	No	No	No	No	No
Formation of Adjacencies	Yes	Yes	No	Yes	Yes	Yes	Yes
IS-IS Blackhole Avoidance (Setting the Overload Bit)	Yes	Yes	No	Yes	Yes	Yes	Yes

TABLE 37 Supported Brocade IPv4 IS-IS features (Continued)

Features supported	Brocade Netiron XMR Series	Brocade MLX Series	Brocade Netiron CES 2000 Series BASE package	Brocade Netiron CES 2000 Series ME_PREM package	Brocade Netiron CES 2000 Series L3_PREM package	Brocade Netiron CER 2000 Series Base package	Brocade Netiron CER 2000 Series Advanced Services package
Priority for Designated IS Election	Yes	Yes	No	Yes	Yes	Yes	Yes
Limiting Access to Adjacencies With a Neighbor	Yes	Yes	No	Yes	Yes	Yes	Yes
Changing the IS-IS Level on an Interface	Yes	Yes	No	Yes	Yes	Yes	Yes
Disabling and Enabling Hello Padding on an Interface	Yes	Yes	No	Yes	Yes	Yes	Yes
Displaying IPv4 IS-IS Information	Yes	Yes	No	Yes	Yes	Yes	Yes
IS-IS SPF Scaling	Yes	Yes	No	No	No	No	No
Disabling and enabling IS-IS graceful restart helper mode for IPv4 and IPv6	Yes	Yes	No	Yes	Yes	Yes	Yes

The Intermediate System to Intermediate System (IS-IS) protocol is a link-state Interior Gateway Protocol (IGP) that is based on the International Standard for Organization/International Electrotechnical Commission (ISO/IEC) Open Systems Internet Networking model (OSI). In IS-IS, an intermediate system (router) is designated as either a Level 1 or Level 2 router. A Level 1 router routes traffic only within the area in which the router resides. A Level 2 router routes traffic between areas within a routing domain.

The implementation of IS-IS is based on the following specifications and draft specifications:

- ISO/IEC 10589 – “Information Technology – Telecommunication and information exchange between systems – Intermediate system to Intermediate system intra-domain routing information exchange protocol for use in conjunction with the protocol for providing the connection less-mode Network Service (ISO 8473)”, 1992
- ISO/IEC 8473 – “Information processing systems – Data Communications – Protocols for providing the connectionless-mode network service”, 1988
- ISO/IEC 9542 – “Information Technology – Telecommunication and information exchange between systems – End system to Intermediate system intra-domain routing information exchange protocol for use in conjunction with the protocol for providing the connection less-mode Network Service (ISO 8473)”, 1988
- RFC 1195 – “Use of OSI IS-IS for Routing in TCP/IP and Dual Environments”, 1990.

- RFC 2763 – “Dynamic Host Name Exchange Mechanism for IS-IS”, 2000.
- RFC 2966 – “Domain-wide Prefix Distribution with Two-Level IS-IS”, 2000
- RFC 3373 – “Three-Way Handshake for Intermediate System to Intermediate System (IS-IS) Point-to-Point Adjacencies”, 2002
- Portions of the Internet Draft “IS-IS extensions for Traffic Engineering” draft-ieff-isis-traffic-02.txt (dated 2000), that describe the Extended IP reachability type-length-value (TLV type 135) and the extended Intermediate System (IS) reachability TLV (TLV type 22). These portions provide support for the wide metric version of IS-IS. No other portion is supported on Brocade’s implementation of IS-IS.

NOTE

The Brocade device does not support routing of Connectionless-Mode Network Protocol (CLNP) packets. The Brocade device uses IS-IS for TCP/IP only.

Relationship to IP route table

The IS-IS protocol has the same relationship to the Brocade device’s IP route table that OSPF has to the IP route table. The IS-IS routes are calculated and first placed in the IS-IS route table. The routes are then transferred to the IP route table.

The protocol sends the best IS-IS path for a given destination to the IP route table for comparison to the best paths from other protocols to the same destination. The CPU selects the path with the lowest administrative distance and places that path in the IP route table:

- If the path provided by IS-IS has the lowest administrative distance, then the CPU places that IS-IS path in the IP route table.
- If a path to the same destination supplied by another protocol has a lower administrative distance, the CPU installs the other protocol’s path in the IP route table instead.

The **administrative distance** is a protocol-independent value from 1 – 255. Each path sent to the CPU, regardless of the source of the path (IS-IS, OSPF, static IP route, and so on) has an administrative distance.

Each route source has a default administrative distance. The default administrative distance for IS-IS is 115.

You can change the administrative distance for IS-IS and other routes sources.

Intermediate systems and end systems


IS-IS uses the following categories to describe devices within an IS-IS routing domain (similar to an OSPF Autonomous System):

- **Intermediate System (IS)** – A device capable of forwarding packets from one device to another within the domain. In Internet Protocol (IP) terminology, an IS is a router.
- **End System (ES)** – A device capable of generating or receiving packets within the domain. In IP terminology, an ES is an end node or IP host.

When you configure IS-IS on a Brocade device, the device is an IS.

Figure 17 shows an example of an IS-IS network.

FIGURE 17 An IS-IS network contains Intermediate Systems (ISs) and host systems

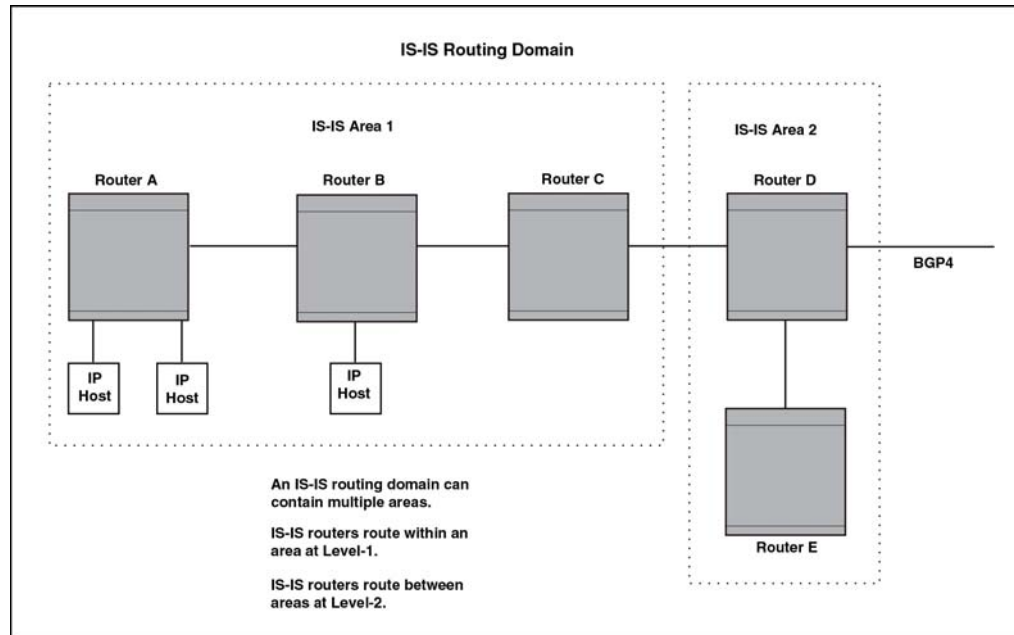

NOTE

Since the implementation of IS-IS does not route OSI traffic but instead routes IP traffic, IP hosts are shown instead of ESs.

The other basic IS-IS concepts illustrated in this figure are explained in the following sections.

Domain and areas

IS-IS is an IGP, and thus applies only to routes within a single routing domain. However, you can configure multiple areas within a domain. A Brocade device can be a member of one area for each Network Entity Title (NET) you configure on the Brocade device. The NET contains the area ID for the area the NET is in.

In Figure 17, Routers A, B, and C are in area 1. Routers D and E are in area 2. All the routers are in the same domain.

Level-1 routing and Level-2 routing

You can configure an IS-IS router such as a Brocade device to perform one or both of the following levels of IS-IS routing:

NOTE

The ISO/IEC specifications use the spelling “routing”, but this document uses the spelling “routing” to remain consistent with other Brocade documentation.

- **Level-1** – A Level-1 router routes traffic only within the area the router is in. To forward traffic to another area, the Level-1 router sends the traffic to its nearest Level-2 router.

- **Level-2** – A Level-2 router routes traffic between areas within a domain.

In [Figure 17](#) on page 250, Routers A and B are Level-1s only. Routers C and D are Level-1 and Level-2 ISs. Router E is a Level-1 IS only.

Neighbors and adjacencies

A Brocade device configured for IS-IS forms an **adjacency** with each of the IS-IS devices to which it is directly connected. An adjacency is a two-way direct link (a link without router hops) over which the two devices can exchange IS-IS routes and other protocol-related information. The link is sometimes called a “circuit”. The devices with which the Brocade device forms adjacencies are its **neighbors**, which are other ISs.

In [Figure 17](#) on page 250, Router A has an IS-IS adjacency with Router B. Likewise, Router B has an IS-IS adjacency with Router A and Router C.

Designated IS

A **Designated IS** is an IS-IS router that is responsible for gathering and distributing link state information to other Level-1 or Level-2 ISs within the same broadcast network (LAN). The Level-1 and Level-2 Designated ISs within a broadcast network are independent, although the same Brocade device can be a Level-1 Designated IS and a Level-2 Designated IS at the same time.

The Designated IS is elected based on the priority of each IS in the broadcast network. When an IS becomes operational, it sends a Level-1 or Level-2 Hello PDU to advertise itself to other ISs. If the IS is configured to be both a Level-1 and a Level-2 IS, the IS sends a separate advertisement for each level:


- The Level-1 IS that has the highest priority becomes the Level-1 Designated IS for the broadcast network.
- The Level-2 IS that has the highest priority becomes the Level-2 Designated IS for the broadcast network.

If the Designated IS becomes unavailable (for example, is rebooted), the IS with the next highest priority becomes the new IS. If two or more ISs have the highest priority, the IS with the highest MAC address becomes the Designated IS.

The priority is an interface parameter. Each interface that is enabled for IS-IS can have a different priority.

Figure 18 shows an example of the results of Designated IS elections. For simplicity, this example shows four of the five routers in Figure 17 on page 250, with the same domain and areas.

FIGURE 18 Each broadcast network has a Level-1 Designated IS and a Level-2 Designated IS

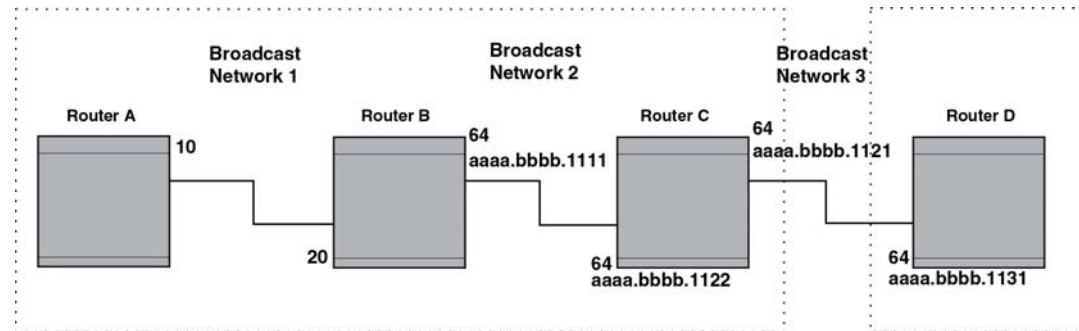

Designated IS election has the following results in this network topology:

- Router B is the Level-1 Designated IS for broadcast network 1
- Router C is the Level-1 Designated IS for broadcast network 2
- Router D is the Level-2 Designated IS for broadcast network 3

In this example, the IS-IS priorities for the IS-IS interfaces in broadcast network 1 have been changed by an administrator. The priorities for the interfaces in the other broadcast networks are still set to the default (64). When there is a tie, IS-IS selects the interface with the highest MAC address.

Broadcast pseudonode

In a broadcast network, the Designated IS maintains and distributes link state information to other ISs by maintaining a **pseudonode**. A pseudonode is a logical host representing all the Level-1 or Level-2 links among the ISs in a broadcast network. Level-1 and Level-2 have separate pseudonodes, although the same device can be the pseudonode for Level-1 and Level-2.

Route calculation and selection

The Designated IS uses a **Shortest Path First (SPF)** algorithm to calculate paths to destination ISs and ESs. The SPF algorithm uses Link State PDUs (LSPDUs) received from other ISs as input, and creates the paths as output.

After calculating the paths, the Designated IS then selects the best paths and places them in the IS-IS route table. The Designated IS uses the following process to select the best paths.

1. Prefer the Level-1 path over the Level-2 path.
2. If there is no Level-1 path, prefer the internal Level-2 path over the external Level-2 path.
3. If there is still more than one path, prefer the path with the lowest metric.
4. If there is more than one path with the lowest metric, load share among the paths.

After selecting the best path to a destination, the software places the path in the IS-IS route table.

Three-way handshake for point-to-point adjacencies

Support was provided for Three-Way Handshake for Point-to-Point adjacencies as described in RFC 3373. This feature provides three-way handshake mechanisms on point-to-point interfaces for the following benefits:

- Identifies neighbor restarts within the holding time period
- Identifies uni-directional link failures and stops forming of an adjacency with a peer where such link failures occur.

NOTE

This feature is the default operation and cannot be turned off. Brocade devices with this feature are fully backward compatible with Brocade devices running an earlier release.

IS-IS CLI levels

The CLI includes various levels of commands for IS-IS. [Figure 19](#) diagrams these levels.

FIGURE 19 IS-IS CLI levels



The IS-IS CLI levels are as follows:

- A global level for the configuration of the IS-IS protocol. At this level, all IS-IS configurations at this level apply to IPv4 and IPv6. You enter this layer using the **router isis** command.
 - Under the global level, you specify an address family. Address families to separate the IS-IS configurations for IPv4 and IPv6. You enter configurations that are for a specific You enter this level by entering the **address-family** command at the router isis level.
 - Under the address family level, you select a sub-address family, which is the type of routes for the configuration. For IS-IS, you specify **unicast**.
- An interface level.

Global configuration level

You enter the global configuration level of IS-IS by entering the following command.

```
Brocade(config)#router isis
Brocade(config-isis-router)#
```

Syntax: [no] router isis

The **(config-isis-router)#** prompt indicates that you are at the global level for IS-IS. A configuration that you enter at this level applies to both IS-IS IPv4 and IS-IS IPv6.

Address family configuration level

The Brocade device's implementation of IS-IS includes the address family configuration level. Address families allow you to configure IPv4 IS-IS unicast settings that are separate and distinct from IPv6 IS-IS unicast settings (when IPv6 is supported).

Under the address family level, Brocade devices currently support the unicast address family configuration level only. The Brocade device enters the IPv4 IS-IS unicast address family configuration level when you enter the following command while at the global IS-IS configuration level.

```
Brocade(config-isis-router)# address-family ipv4 unicast
Brocade(config-isis-router-ipv4u)#
```

Syntax: `address-family ipv4 unicast`

The `(config-isis-router-ipv4u)#` prompt indicates that you are at the IPv4 IS-IS unicast address family configuration level. While at this level, you can access several commands that allow you to configure IPv4 IS-IS unicast settings.

NOTE

Each address family configuration level allows you to access commands that apply to that particular address family only. To enable a feature in a particular address family, you must specify any associated commands for that feature in that particular address family. You cannot expect the feature, which you may have configured in the IPv4 IS-IS unicast address family, to work in the IPv6 IS-IS unicast address family unless it is explicitly configured in the IPv6 IS-IS unicast address family.

To exit from the ipv4 IS-IS unicast address family configuration level, enter the following command.

```
Brocade(config-isis-router-ipv4u)# exit-address-family
Brocade(config-isis-router)#
```

Entering this command returns you to the global IS-IS configuration level.

Interface level

Some IS-IS definitions are entered at the interface level. To enable IS-IS at the interface level, enter the following command.

```
Brocade(config)# interface ethernet 2/3
Brocade(config-if-e1000-2/3)#ip router isis
```

Syntax: `[no] ip router isis`

Enabling IS-IS globally

To configure IPv4 IS-IS, perform the tasks listed below.

1. Globally enable IS-IS by entering the following command.

```
Brocade(config)# router isis
ISIS: Please configure NET!
```

Once you enter **router isis**, the device enters the IS-IS router configuration level.

Syntax: `[no] router isis`

To disable IS-IS, use the **no** form of this command.

- If you have not already configured a NET for IS-IS, enter commands such as the following.

```
Brocade(config-isis-router)# net 49.2211.0000.00bb.cccc.00
Brocade(config-isis-router)#
```

The commands in the example above configure a NET that has the area ID 49.2211, the system ID 0000.00bb.cccc (the device's base MAC address), and SEL value 00.

Syntax: `[no] net area-id.system-id.sel`

The *area-id* parameter specifies the area and has the format `xx` or `xx.xxxx`. For example, 49 and 49.2211 are valid area IDs.

The *system-id* parameter specifies the Brocade device's unique IS-IS router ID and has the format `xxxx.xxxx.xxxx`. You can specify any value for the system ID. A common practice is to use the device's base MAC address as the system ID. The base MAC address is also the MAC address of port 1. To determine the base MAC address, enter the following command at any level of the CLI: **show interfaces brief**. The base MAC address is listed in the first row of information, in the MAC column.

You must use the same system ID in all the NETs on the Brocade device.

NOTE

The parameter descriptions above are the recommended values for the NET. However, the CLI accepts any value that fits within the following lengths and formats:

`xx.xxxx.xxxx.xxxx.00` – minimum length of NET

`xx.xxxx.xxxx.xxxx.xxxx.xxxx.xxxx.xxxx.00` – maximum length of NET

The *sel* parameter specifies the NSAP Selector (SEL). This value must always be 00 (two zeros). The value 00 indicates that this address is an NET.

To delete a NET, use the **no** form of this command.

- Configure IS-IS parameters. Refer to the sections [“Globally configuring IS-IS on a device”](#) on page 255, [“Configuring IPv4 address family route parameters”](#) on page 267, and [“Configuring ISIS properties on an interface”](#) on page 285.

None of the IS-IS parameters require a software reload to places changes into effect and most parameter changes take effect immediately. However, changes for the following parameters take effect only after you disable and then re-enable redistribution:

- Change the default metric.
- Add, change, or negate route redistribution parameters.

Some IS-IS parameter changes take effect immediately while others do not take full effect until you disable, then re-enable route redistribution.

Globally configuring IS-IS on a device

This section describes how to change the global IS-IS parameters. These parameter settings apply to both IS-IS IPv4 and IS-IS IPv6.

Setting the overload bit

If an IS's resources are overloaded and are preventing the IS from properly performing IS-IS routing, the IS can inform other ISs of this condition by setting the overload bit in LSPDUs sent to other ISs from 0 (off) to 1 (on).

When an IS is overloaded, other ISs will not use the overloaded IS to forward traffic. An IS can be in the overload state for Level-1, Level-2, or both as described in the following section:

- If an IS is in the overload state for Level-1, other Level-1 ISs stop using the overloaded IS to forward Level-1 traffic. However, the IS can still forward Level-2 traffic, if applicable.
- If an IS is in the overload state for Level-2, other Level-2 ISs stop using the overloaded IS to forward Level-2 traffic. However, the IS can still forward Level-1 traffic, if applicable.
- If an IS is in the overload state for both levels, the IS cannot forward traffic at either level.

By default, the Brocade device automatically sets the overload bit to 1 (on) in its LSPDUs to other ISs if an overload condition occurs.

You can set the overload bit on to administratively shut down IS-IS without disabling the protocol. Setting the overload bit on is useful when you want to make configuration changes without removing the Brocade device from the network.

In addition, you can configure the Brocade device to set the overload bit on for a specific number of seconds during startup, to allow IS-IS to become fully active before the device begins IS-IS routing. By default, there is no delay (0 seconds).

To immediately set the overload bit on, enter the following command.

```
Brocade(config-isis-router)# set-overload-bit
```

This command administratively shuts down IS-IS by configuring the Brocade device to immediately set the overload bit to 1 (on) in all LSPs sent to other ISs.

To configure the Brocade device to temporarily set the overload bit on after a software reload, enter a command such as the following.

```
Brocade(config-isis-router)# set-overload-bit on-startup 5
```

This command configures the Brocade device to set the overload bit on in all its IS-IS LSPs sent to other ISs during the first five seconds following a successful software reload. After the five seconds expire, the Brocade device resets the overload bit to off in all its IS-IS LSPs.

Syntax: [no] **set-overload-bit** [on-startup secs]

The **on-startup secs** parameter specifies the number of seconds following a reload to set the overload bit on. You can specify a number from 5 – 86400 (24 hours).

A new option has been added to the **set-overload-bit** command to prevent route black holing in support of RFC 3277. With this option set, the behavior of IS-IS will be changed during a device reboot. During a device reboot, IS-IS sets the overload bit in its LSPDUs until BGP has converged.

This feature is configured using the **set-overload-bit** command as shown in the following.

```
Brocade(config-isis-router)# set-overload-bit on-startup wait-for-bgp 1000
```

Syntax: [no] **set-overload-bit on-startup wait-for-bgp max-bgp-wait-time**

The *max-bgp-wait-time* variable is the maximum time IS-IS will wait for BGP convergence to complete. Once this time has been exceeded without BGP converging, IS-IS will exit the overload state. The default value is 600 seconds (10 minutes), possible values range: 5 to 86400 seconds.

Configuring authentication

By default, a Brocade device does not authenticate packets sent to or received from an end system (ES) or other intermediate system (IS). In previous releases, the Multi-Service IronWare software let you configure area, domain, and circuit passwords to direct the Brocade device to check for a password in packets sent from the device.

The new method of configuring an authentication password introduces the option of using the Hashed Message Authentication codes - Message Digest 5 (HMAC-MD5) algorithm.

This implementation is in conformance with RFC 3567 - Intermediate System to Intermediate System (IS-IS) Cryptographic Authentication.

NOTE

The commands for setting the password used in previous versions of the Multi-Service IronWare software are now hidden in the CLI, however they are backward compatible and will operate in this release.

Configuring IS-IS authentication at the Router IS-IS mode

To configure IS-IS authentication at the Router IS-IS mode on a Brocade device, you must perform the following tasks:

- Configure IS-IS Authentication Mode
- Configure IS-IS Authentication Key
- Disable IS-IS Authentication Check (optional)

Configuring IS-IS authentication mode

The following commands configure the IS-IS for the authentication mode.

```
Brocade(config)# router isis
Brocade(config-isis-router)# auth-mode md5 level-1
```

Syntax: [no] auth-mode [cleartext | md5] [level-1 | level-2]

The **cleartext** parameter specifies that the IS-IS PDUs will be authenticated using a cleartext password.

The **md5** parameter specifies that the IS-IS PDUs will be authenticated using the Hashed Message Authentication codes - Message Digest 5 (HMAC-MD5) algorithm.

The **level-1** parameter specifies that the authentication type-length-value (TLV) tuple be added to the L1 LSP, L1 CSNP, and LI PSNP packets.

The **level-2** parameter specifies that the authentication TLV tuple be added to the L2 LSP, L2 CSNP, and L2 PSNP packets.

NOTE

If the IS-IS interface is configured for point-to-point, the level-1 interface-level IS-IS authentication configuration is applied.

Configuring IS-IS authentication key

The following commands configure an authentication key to be used with the mode specified in [“Configuring IS-IS authentication mode”](#).

```
Brocade(config)# router isis
```

```
Brocade(config-isis-router)# auth-mode md5 level-1
Brocade(config-isis-router)# auth-key supervisor level-1
Brocade(config-isis-router)# auth-key supervisor level-2
```

Syntax: [no] auth-key *string* [level-1 | level-2]

The *string* variable specifies a text string that is used as an authentication password. The authentication mode must be configured before this value can be configured.

By default, the authentication key is encrypted. If you want the authentication key to be in clear text, insert a **0** between **auth-key** and *string*.

Example

```
Brocade(config-isis-router)# auth-key 0 supervisor level-1
```

The software adds a prefix to the authentication key string in the configuration. For example, the following portion of the code has the encrypted code “2”.

```
auth-key 2 $on-n level-1
```

The prefix can be one of the following:

- 0 = the key string is not encrypted and is in clear text
- 1 = the key string uses proprietary simple cryptographic 2-way algorithm (only for Brocade NetIron CES)
- 2 = the key string uses proprietary base64 cryptographic 2-way algorithm (only for Brocade NetIron XMR and Brocade MLX series devices)

The **level-1** parameter specifies that the authentication key specified here is used to authenticate the L1 LSP, L1 CSNP and LI PSNP packets.

The **level-2** parameter specifies that the authentication key specified here is used to authenticate the L2 LSP, L2 CSNP and L2 PSNP packets.

You must enter a configuration for both level-1 and level-2 in order to enter the auth-key string.

NOTE

If the authentication mode is reset for the level specified, the authentication key must also be reset.

Disabling IS-IS authentication checking

When transitioning from one authentication mode to another, changing the authentication mode can cause packets to drop because only some of the routers have been reconfigured. During such a transition, it can be useful to disable IS-IS authentication checking temporarily until all routers are reconfigured and the network is stable.

You can use the following commands to disable IS-IS authentication checking.

```
Brocade(config)# router isis
Brocade(config-isis-router)# no auth-check level-1
```

Syntax: [no] auth-check [level-1 | level-2]

This command enables and disables IS-IS authentication checking. The default is enabled and the **[no]** parameter disables authentication checking.

The **level-1** parameter specifies that authentication checking is enabled/ disabled for L1 LSP, L1 CSNP and LI PSNP packets.

The **level-2** parameter specifies that authentication checking is enabled/disabled for L2 LSP, L2 CSNP and L2 PSNP packets.

Configuring IS-IS MD5 authentication on a specified interface

To configure IS-IS MD5 authentication on a specified interface on a Brocade device, you must perform the following tasks:

- Configure IS-IS Interface Authentication Mode for a Specified Interface
- Configure IS-IS Authentication Key on the Interface
- Disable IS-IS Authentication Check on an Interface (optional)

Configuring IS-IS authentication mode for a specified interface

The following commands configure the IS-IS for the authentication mode on a specified interface.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e10000-3/1)# isis auth-mode md5 level-1
```

Syntax: [no] isis auth-mode [cleartext | md5] [level-1 | level-2]

The **cleartext** parameter specifies that the IS-IS PDUs will be authenticated using a cleartext password.

The **md5** parameter specifies that the IS-IS PDUs authenticated using the Hashed Message Authentication codes - Message Digest 5 (HMAC-MD5) algorithm.

The **level-1** parameter specifies that the authentication TLV tuple be added to the L1 Hello packets.

The **level-2** parameter specifies that the authentication TLV tuple be added to the L2 Hello packets.

NOTE

If either level-1 or level-2 are not specified, the configuration is applied to both level-1 and level-2.

Configuring an IS-IS authentication key for a specified interface

The following commands configure an authentication key to be used with the mode specified in [“Configuring IS-IS authentication mode for a specified interface”](#).

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e10000-3/1)# isis auth-key supervisor level-1
```

Syntax: [no] isis auth-key key [level-1 | level-2]

The **key** value specifies a text string that is used as an authentication password. The authentication mode must be configured before this value can be configured.

The **level-1** parameter specifies that the authentication key specified here is used to authenticate the L1 Hello packets.

The **level-2** parameter specifies that the authentication key specified here is used to authenticate the L2 Hello packets.

NOTE

If either level-1 or level-2 are not specified, the configuration is applied to both level-1 and level-2.

NOTE

If the authentication mode is reset for the level specified, the authentication key must also be reset.

NOTE

The **isis auth-key** command allows the user to configure more 80 characters, but only the first 80 characters are used.

Disabling IS-IS authentication checking on a specified interface

When transitioning from one authentication mode to another, changing the authentication mode can cause packets to drop because only some of the routers have been reconfigured. During such a transition, it can be useful to disable IS-IS authentication checking temporarily until all routers are reconfigured and the network is stable.

You can use the following commands to disable IS-IS authentication checking on a specified interface.

```
Brocade(config)# interface ethernet 3/1
Brocade(if-e10000-3/1)# no isis auth-check level-1
```

Syntax: [no] isis auth-check [level-1 | level-2]

This command enables and disables IS-IS authentication checking. The default is enabled and the [no] parameter disables authentication checking.

The **level-1** parameter specifies that authentication checking is enabled/ disabled for L1 Hello packets.

The **level-2** parameter specifies that authentication checking is enabled/disabled for L2 Hello packets.

NOTE

If either level-1 or level-2 are not specified, the configuration is applied to both level-1 and level-2.

Changing the IS-IS level globally

By default, a Brocade device can operate as both a Level-1 and IS-IS Level-2 router. To globally change the level supported from Level-1 and Level-2 to Level-1 only, enter the following command.

```
Brocade(config-isis-router)# is-type level-1
```

Syntax: [no] is-type level-1 | level-1-2 | level-2

The **level-1 | level-1-2 | level-2** parameter specifies the IS-IS type. If you want to re-enable support for both IS-IS types, re-enter the command you entered to change the IS-IS type, and use “no” in front of the command.

To change the IS-IS on an interface, refer to [“Changing the IS-IS level on an interface”](#) on page 287.

Disabling or re-enabling display of hostname

Brocade’s implementation of IS-IS supports RFC 2763, which describes a mechanism for mapping IS-IS system IDs to the hostnames of the devices with those IDs. For example, if you set the hostname on the Brocade device to “IS-IS Router 1”, the mapping feature uses this name instead of the Brocade device’s IS-IS system ID in the output of the following commands:

- **show isis database**
- **show isis interface**
- **show isis neighbor**

The Brocade device's hostname is displayed in each CLI command prompt, for example.

```
Brocade(config-isis-router)#
```

The name mapping feature is enabled by default. If you want to disable name mapping, enter the following command.

```
Brocade(config-isis-router)# no hostname
```

Syntax: [no] hostname

To display the name mappings, enter the **show isis hostname** command.

Changing the Sequence Numbers PDU interval

A **Complete Sequence Numbers PDU (CSNP)** is a complete list of the LSPs in the Designated IS' link state database. The CSNP contains a list of all the LSPs in the database, as well as other information that helps IS neighbors determine whether their LSP databases are in sync with one another. The Designated IS sends CSNPs to the broadcast interface. Level-1 and Level-2 each have their own Designated IS.

A **Partial Sequence Numbers PDU (PSNP)** is a partial list of LSPs. ISs other than the Designated IS (that is, the non-Designated ISs) send PSNPs to the broadcast interface.

The CSNP interval specifies how often the Designated IS sends a CSNP to the broadcast interface. Likewise, the PSNP interval specifies how often other ISs (non-Designated ISs) send a PSNP to the broadcast interface.

The interval you can configure on the Brocade device applies to both Level-1 and Level-2 CSNPs and PSNPs. The default interval is 10 seconds. You can set the interval to a value from 0 – 65535 seconds.

To change the interval, enter a command such as the following.

```
Brocade(config-isis-router)# csnp-interval 15
```

Syntax: [no] csnp-interval secs

The secs parameter specifies the interval and can be from 0 – 65535 seconds. The default is 10 seconds.

NOTE

PSNP has a default interval of 2 seconds and is not configurable.

Changing the maximum LSP lifetime

The maximum LSP lifetime is the maximum number of seconds an unrefreshed LSP can remain in the Brocade device's LSP database. The maximum LSP lifetime can be from 1 – 65535 seconds. The default is 1200 seconds (20 minutes).

To change the maximum LSP lifetime to 2400 seconds, enter a command such as the following.

```
Brocade(config-isis-router)# max-lsp-lifetime 2400
```

Syntax: [no] max-lsp-lifetime secs

The secs parameter specifies the maximum LSP lifetime and can be from 1 – 65535 seconds. The default is 1200 seconds (20 minutes).

NOTE

The **max-lsp-lifetime** and the **lsp-refresh-interval** must be set in such a way that the LSPs are refreshed before the **max-lsp-lifetime** expires; otherwise, the Brocade device's originated LSPs may be timed out by its neighbors. Refer to [“Changing the LSP refresh interval”](#) on page 262.

Changing the LSP refresh interval

The LSP refresh interval is the maximum number of seconds the Brocade device waits between sending updated LSPs to its IS-IS neighbors. The interval can be from 1 – 65535 seconds. The default is 900 seconds.

To change the LSP refresh interval to 20000 seconds, enter a command such as the following.

```
Brocade(config-isis-router)# lsp-refresh-interval 20000
```

Syntax: [no] **lsp-refresh-interval** secs

The secs parameter specifies the maximum refresh interval and can be from 1 – 65535 seconds. The default is 900 seconds (15 minutes).

Changing the LSP generation interval

The LSP generation interval is the minimum number of seconds the Brocade device waits between sending updated LSPs to its IS-IS neighbors. The interval can be from 1 – 120 seconds. The default is 10 seconds.

To change the LSP generation interval to 45 seconds, enter a command such as the following.

```
Brocade(config-isis-router)# lsp-gen-interval 45
```

Syntax: [no] **lsp-gen-interval** secs

The secs parameter specifies the minimum refresh interval and can be from 1 – 120 seconds. The default is 10 seconds.

Changing the LSP interval and retransmit interval

You LSP interval is the rate of transmission, in milliseconds of the LSPs. The retransmit interval is the time the device waits before it retransmits LSPs. To define an LSP interval, enter a command such as the following.

```
Brocade(config-isis-router)# lsp-interval 45
```

Syntax: [no] **lsp-interval** milliseconds

Enter 1 – 4294967295 milliseconds for the LSP interval. The default is 33 milliseconds.

To define an interval for retransmission of LSPs enter a command such as the following.

```
Brocade(config-isis-router)# retransmit-interval 3
```

Syntax: [no] **retransmit-interval** seconds

Enter 0 – 65535 seconds for the retransmission interval. The default is 5 seconds.

Changing the SPF timer

Every IS maintains a Shortest Path First (SPF) tree, which is a representation of the states of each of the IS's links to ESs and other ISs. If the IS is both a Level-1 and Level-2 IS, it maintains separate SPF trees for each level.

To ensure that the SPF tree remains current, the IS updates the tree at regular intervals following a change in network topology or the link state database. By default, the Brocade device recalculates its IS-IS tree every five seconds following a change. You can change the SPF timer to a value from 1 – 120 seconds.

NOTE

This command has been superseded by the IS-IS PSPF Exponential back-off feature.

To change the SPF interval, enter a command such as the following.

```
Brocade(config-isis-router)# spf-interval 30
```

Syntax: [no] spf-interval secs

The secs parameter specifies the interval and can be from 1 – 120 seconds. The default is 5 seconds.

Configuring the IS-IS PSPF exponential back-off feature

The Brocade device uses the exponential back-off mechanism to provide a more responsive approach to running the PSPF calculations. With this new feature, there is a new configurable command called **partial-spf-interval** that allows you to schedule PSPF processing as described in the following.

An **initial-wait** interval can be configured as a wait time after an LSP change until the first PSPF calculation. Optionally, this value is followed by another configurable variable called the **second-wait** interval that is used as a wait time between the first and second PSPF calculations. The **second-wait** interval (if configured) is then increased in multiples of 2 until it reaches the maximum hold time as configured by the **max-wait** variable. Once reached, the maximum hold time remains the hold interval between PSPF calculations until there are no further changes in the network. When there are no network changes in a hold down period, the gap between PSPF calculations returns to the **initial-wait** interval and the process begins again.

If an **initial-wait** interval is configured without a **second-wait** interval, the **max-wait** variable is used for the second and all subsequent intervals.

If the **initial-wait** and **second-wait** intervals are not configured, the **max-wait** variable is used for the first and all subsequent intervals.

The IS-IS PSPF exponential back-off mechanism is configured using the **partial-spf-interval** command, as shown in the following.

```
Brocade(config-isis-router)# partial-spf-interval 60 1000 5000
```

Syntax: [no] partial-spf-interval max-wait initial-wait second-wait

The **max-wait** variable specifies the maximum interval between PSPF recalculations. The range of acceptable values is 0 – 120000 milliseconds. The default is 5000 milliseconds (5 seconds).

The **initial-wait** variable is an optional value that specifies the wait time after an LSP change until the first PSPF calculation. The range of acceptable values is 0 – 120000 milliseconds. The default for this variable is value of the **max-wait** time.

The *second-wait* variable is an optional value that specifies the wait time between the first and second PSPF calculations. If this optional value is configured, it will be doubled with each PSPF recalculation until the value is equal to the *spf-max-wait* value. The range of acceptable values is 0 – 120000 milliseconds. The default for this variable is value of the **max-wait** time.

Configuring the IS-IS flooding mechanism

The IS-IS fast flooding feature allows you to configure IS-IS on the router to flood Link State PDUs to other routers in the network before running SPF. This improves database synchronization by allowing LSP changes to be propagated to neighbors before running SPF. The IS-IS fast-flood feature is implemented using the fast-flood command as shown in the following.

```
Brocade(config-isis-router)# fast-flood 10
```

Syntax: **[no] fast-flood** *lsp-count*

The *lsp-count* variable sets the number of LSPs that trigger SPF that must be flooded before running SPF. The SPF run will be delayed until the configured number of LSPs have been flooded. If the number of changed LSPs is less than the configured number, then only the changed LSPs are flooded. The variable can be set to the following values: 1 - 25. This variable is optional and will be set to a value of 4 if not specified.

Globally disabling or re-enabling hello padding

By default, the Brocade device adds extra data to the end of a hello packet to make the packet the same size as the maximum length of PDU the Brocade device supports.

The padding applies to the following types of hello packets:

- ES hello (ESH PDU)
- IS hello (ISH PDU)
- IS to IS hello (IIH PDU)

The padding consists of arbitrarily valued octets. A padded hello PDU indicates the largest PDU that the Brocade device can receive. Other ISs that receive a padded hello PDU from the Brocade device can therefore ensure that the IS-IS PDUs they send the Brocade device. Similarly, if the Brocade device receives a padded hello PDU from a neighbor IS, the Brocade device knows the maximum size PDU that the Brocade device can send to the neighbor.

When padding is enabled, the maximum length of a Hello PDU sent by the Brocade device is 1514 bytes.

If you need to disable padding, you can do so globally or on individual interfaces. Generally, you do not need to disable padding unless a link is experiencing slow performance. If you enable or disable padding on an interface, the interface setting overrides the global setting.

To globally disable padding of IS-IS hello PDUs, enter the following command.

```
Brocade(config-isis-router)# no hello padding
```

This command disables all hello PDU padding on the Brocade device. To re-enable padding, enter the following command.

```
Brocade(config-isis-router)# hello padding
```

Syntax: **[no] hello padding** **[point-to-point]**

By default, hello padding is enabled. Enter the **no** form of the command to disable hello padding.

The **point-to-point** option enables hello PDU padding on Point-to-Point interfaces.

To disable hello padding on an interface, refer to [“Disabling and enabling hello padding on an interface”](#) on page 287.

Logging adjacency changes

The Brocade device can be configured to log changes in the status of an adjacency with another IS. Logging of the adjacency changes is disabled by default. To enable or disable them, use either of the following methods.

To enable logging of adjacency changes, enter the following command.

```
Brocade(config-isis-router)# log adjacency
```

Syntax: [no] log adjacency

To disable logging of adjacency changes, enter the following command.

```
Brocade(config-isis-router)# no log adjacency
```

Logging invalid LSP packets received

The Brocade device can be configured to provide logging of invalid LSP packets. Logging of the invalid LSP packets is disabled by default. To enable or disable this function, use either of the following methods.

To enable logging of invalid LSP packets, enter the following command.

```
Brocade(config-isis-router)# log invalid-lsp-packets
```

Syntax: [no] log invalid-lsp-packets

To disable logging of invalid LSP packets, enter the following command.

```
Brocade(config-isis-router)# no log invalid-lsp-packets
```

Disabling partial SPF optimizations

IS-IS employs certain partial SPF optimizations to make partial changes to the routing table in network change situations where the topology of the network has not changed but where there may be changes in the IP networks advertised by routers. These optimizations are termed partial SPF optimizations.

You can optionally configure IS-IS to perform a full SPF calculation when any network (non-topology) change occurs by using the **disable-partial-spf-opt** command. When **disable-partial-spf-opt** is configured, IS-IS always runs full SPF for all such network changes.

To disable partial SPF calculations for IS-IS, enter the following command.

```
Brocade(config-isis-router)# disable-partial-spf-opt
```

Syntax: [no] disable-partial-spf-opt

To restore partial SPF optimizations, use the **no** form of this command.

Disabling incremental SPF optimizations

In the event of certain topology changes (for instance non-local adjacency flaps), IS-IS employs incremental SPF optimizations to efficiently update the routing table. An incremental SPF is faster and takes fewer CPU cycles than a full SPF.

You can optionally configure IS-IS to perform a full SPF calculation when any network topology change occurs by using the **disable-incremental-spf-opt** command. When **disable-incremental-spf-opt** is configured, IS-IS always runs full SPF for all such network topology changes.

To disable incremental SPF optimizations for IS-IS, enter the following command.

```
Brocade(config-isis-router)# disable-incremental-spf-opt
```

Syntax: [no] **disable-incremental-spf-opt**

To restore incremental SPF optimizations, use the **no** form of this command.

NOTE

If you disable the partial SPF optimizations (by using the **disable-partial-spf-opt** command), IS-IS automatically disables the incremental SPF optimizations and always runs full SPF, too. However, the reverse is not true: disabling incremental SPF optimizations does not disable partial optimizations.

IS-IS incremental shortcut LSP SPF optimization

IS-IS can be configured to use an incremental shortcut LSP SPF optimization algorithm. Incremental shortcut LSP SPF optimization is more efficient when updating the routes in cases where the shortcut LSP state change does not influence the topology. Incremental Shortcut LSP SPF Optimizations are on by default.

NOTE

If you disable the partial SPF optimizations (by using the **disable-partial-spf-opt** command), IS-IS automatically disables the incremental SPF optimizations and always runs full SPF, too. However, the reverse is not true: disabling incremental SPF optimizations does not disable partial optimizations.

Configuration considerations

Incremental Shortcut SPF optimizations will not be applicable to LSP shortcuts with metrics configured on them

Incremental Shortcut SPF optimizations will not be applicable to LSP shortcuts with negative relative metrics configured.

Incremental Shortcut SPF optimizations will not be applicable to announced LSP shortcuts.

Disabling IS-IS Incremental Shortcut LSP SPF Optimization

To disable incremental shortcut LSP SPF optimization, enter the following commands at the global configuration mode.

```
Brocade((config)#router isis  
Brocade(config-isis-router)#disable-inc-stct-spf-opt
```

Syntax: [no] **disable-inc-stct-spf-opt**

To restore incremental shortcut LSP SPF optimization, use the **no** form of this command.

Configuring IPv4 address family route parameters

This section describes how to modify the IS-IS parameters for the IS-IS IPv4 unicast address family. To enter the IPv4 unicast address family, refer to the “[Address family configuration level](#)” on page 254.

Changing the metric style

The metric style specifies the Types, Lengths, and Values (TLVs) an IS-IS LSP can have. The TLVs specify the types of data, the maximum length of the data, and the valid values for the data. One of the types of data the TLVs control is a route’s default-metric. By default, the Brocade device uses the standard IS-IS TLVs, which allows metric values from 1 – 63. The default metric style is called “narrow.” You can increase the range of metric values supported by the Brocade device by changing the metric style to wide. The wide metric style allows metric values in the range 1 – 16777215.

To change the metric style to wide, enter the following command.

```
Brocade(config-isis-router-ipv4)# metric-style wide
```

This command changes the metric style for both Level-1 and Level-2.

Syntax: **[no] metric-style wide [level-1 | level-2]**

The **level-1 | level-2** parameter specifies the levels to which the change applies. If not specified, the changes are applied to both levels.

Changing the maximum number of load sharing paths

By default, IPv4 IS-IS can calculate and install four equal-cost paths into the IPv4 forwarding table. You can change the number of paths IPv4 IS-IS can calculate and install in the IPv4 forwarding table to a value from 1 to 32. If you change the number of paths to one, the Brocade device does not load share multiple route paths learned from IPv4 IS-IS.

NOTE

The maximum number of paths supported by the BR-MLX-10Gx24-DM module is 16.

For example, to change the number of paths IPv4 IS-IS can calculate and install in the IPv4 forwarding table to three, enter the following command at the IPv4 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv4u)# maximum-paths 4
```

Syntax: **[no] maximum-paths number**

The *number* parameter specifies the number of paths IPv4 IS-IS can calculate and install in the IPv4 forwarding table. The *number* value range is 2 to 32.

NOTE

The value specified in *number* is limited by the IP load-sharing value specified in the **ip load-sharing** command.

To return to the default number of maximum paths, enter the **no** form of this command.

Enabling advertisement of a default route

By default, the Brocade device does not generate or advertise a default route to its neighboring ISs. A default route is not advertised even if the device's IPv4 route table contains a default route. You can enable the device to advertise a default route to all neighboring ISs using one of the following methods. By default, the feature originates the default route at Level 2 only. However, you can apply a route map to originate the default route to Level 1 only or at both Level 1 and Level 2.

NOTE

This feature requires the presence of a default route in the IPv4 route table.

To enable the Brocade device to advertise a default route that is originated a Level 2, enter the following command at the IPv4 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv4u)# default-information-originate
```

This command enables the device to advertise a default route into the IPv4 IS-IS area to which the device is attached.

Syntax: **[no] default-information-originate [route-map name]**

The **route-map name** parameter allows you to specify the level on which to advertise the default route. You can specify one of the following:

- Advertise to Level-1 ISs only.
- Advertise to Level-2 ISs only.
- Advertise to Level-1 and Level-2 ISs.

NOTE

The route map must be configured before you can use the route map as a parameter with the **default-information-originate** command.

To use a route map to specify the router to advertise a default route to Level 1, enter commands such as the following at the Global CONFIG level.

```
Brocade(config)# route-map default_level1 permit 1
Brocade(config-routemap default_level1)# set level level-1
Brocade(config-routemap default_level1)# exit
Brocade(config)# router isis
Brocade(config-isis-router)# address-family ipv4 unicast
Brocade(config-isis-router-ipv4u)# default-information-originate route-map
default_level1
```

These commands configure a route map to set the default advertisement level to Level 1 only.

Syntax: **[no] route-map map-name permit | deny sequence-number**

Syntax: **[no] set level level-1 | level-1-2 | level-2**

For this use of a route map, use the **permit** option and do not specify a **match** statement. Specify a **set** statement to set the level to one of the following:

- **level-1** – Level 1 only.
- **level-1-2** – Level 1 and Level 2.
- **level-2** – Level 2 only (default).

Matching based on IS-IS protocol type

The **match** option has been added to the **route-map** command that allows IS-IS routes to be matched based on level-1 or level-2 or all IS-IS routes.

```
Brocade(config-routemap test)# match protocol isis level-1
```

Syntax: [no] match protocol isis {level-1|level-2}

The **match protocol isis level-1** option can be used to match the IS-IS Level-1 routes.

The **match protocol isis level-2** option can be used to match the IS-IS Level-2 routes.

Changing the administrative distance for IPv4 IS-IS

When the Brocade device has paths from multiple routing protocols to the same destination, it compares the administrative distances of the paths and selects the path with the lowest administrative distance to place in the IPv4 route table.

For example, if the Brocade device has a path from RIP, from OSPF, and IPv4 IS-IS to the same destination, and all the paths are using their protocols' default administrative distances, the device selects the OSPF path, because that path has a lower administrative distance than the RIP and IPv4 IS-IS paths.

Here are the default IPv4 administrative distances on the Brocade device:

- Directly connected – 0 (this value is not configurable)
- Static – 1 (applies to all static routes, including default routes)
- EBGP – 20
- OSPF – 110
- IPv4 IS-IS – 115
- RIP – 120
- IBGP – 200
- Local BGP – 200
- Unknown – 255 (the device will not use this route)

Lower administrative distances are preferred over higher distances. For example, if the Brocade device receives routes for the same network from IPv4 IS-IS and from RIP, it will prefer the IPv4 IS-IS route by default.

To change the administrative distance for IPv4 IS-IS routes, enter the following command at the IPv4 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv4u)# distance 100
```

Syntax: [no] distance *number*

This command changes the administrative distance for all IPv4 IS-IS routes to 100.

The *number* parameter specifies the administrative distance. You can specify a value from 1 – 255. (Routes with a distance value of 255 are not installed in the routing table.) The default for IPv4 IS-IS is 115.

Configuring summary addresses

You can configure summary addresses to aggregate IS-IS route information. Summary addresses can enhance performance by reducing the size of the Link State database, reducing the amount of data the Brocade device needs to send to its neighbors, and reducing the CPU cycles used for IS-IS.

When you configure a summary address, the address applies only to Level-2 routes by default. You can specify Level-1 only, Level-2 only, or Level-1 and Level-2 when you configure the address.

To configure a summary address, enter a command such as the following.

```
Brocade(config-isis-router-ipv4u)# summary-address 192.168.0.0 255.255.0.0
```

This command configures a summary address for all Level-2 IS-IS route destinations between 192.168.1.0 – 192.168.255.255.

Syntax: `[no] summary-address ip-addr subnet-mask [level-1 | level-1-2 | level-2]`

The *ip-addr subnet-mask* parameters specify the aggregate address. The mask indicates the significant bits in the address. Ones are significant, and zeros allow any value. In the command example above, the mask 255.255.0.0 matches on all addresses that begin with 192.168 and contain any values for the final two octets.

The **level-1 | level-1-2 | level-2** parameter specifies the route types to which the aggregate route applies. The default is **level-2**.

Redistributing routes into IPv4 IS-IS

To redistribute routes into IPv4 IS-IS, you can perform the following configuration tasks:

- Change the default redistribution metric (optional).
- Configure the redistribution of a particular route type into IPv4 IS-IS (mandatory).

The Brocade device can redistribute routes from the following route sources into IPv4 IS-IS:

- BGP4+.
- RIP.
- OSPF.
- Static IPv4 routes.
- IPv4 routes learned from directly connected networks.

The Brocade device can also redistribute Level-1 IPv4 IS-IS routes into Level-2 IPv4 IS-IS routes, and Level-2 IPv4 IS-IS routes into Level-1 IPv4 IS-IS routes.

Route redistribution from other sources into IPv4 IS-IS is disabled by default. When you enable redistribution, the device redistributes routes only into Level 2 by default. You can specify Level 1 only, Level 2 only, or Level 1 and Level 2 when you enable redistribution.

The device automatically redistributes Level-1 routes into Level-2 routes. Thus, you do not need to enable this type of redistribution. You also can enable redistribution of Level-2 routes into Level-1 routes.

The device attempts to use the redistributed route's metric as the route's IPv4 IS-IS metric. For example, if an OSPF route has an OSPF cost of 20, the device uses 20 as the route's IPv4 IS-IS metric. The device uses the redistributed route's metric as the IPv4 IS-IS metric unless the route does not have a valid metric. In this case, the device assigns the default metric value to the route. For information about the default metric, refer to the [“Changing the default redistribution metric”](#) section, which follows this section.

Changing the default redistribution metric

When IPv4 IS-IS redistributes a route from another route source (such as OSPF, BGP4+, or a static IPv4 route) into IPv4 IS-IS, it uses the route's metric value as its metric when the metric is not modified by a route map or metric parameter and the default redistribution metric is set to its default value of 0. You can change the default metric to a value from 0 – 65535.

NOTE

The implementation of IS-IS does not support the optional metric types Delay, Expense, or Error.

For example, to change the default metric to 20, enter the following command at the IPv4 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv4u)# default-metric 20
```

Syntax: `[no] default-metric value`

The *value* parameter specifies the default metric. You can specify a value from 0 – 65535. The default is 0.

To restore the default value for the default metric, enter the **no** form of this command.

Globally change the default redistribution metric

You can change the metric value for a specific interface by using the **isis metric** command or **isis ipv6 metric** command. This feature allows you to change the metric value globally for all the active ISIS interfaces using one command.

You can still configure the interface level metric. If ISIS metric is configured on the interface, it will take the precedence over the global configuration.

Configuration steps

1. Configure router ISIS using the `router isis` command.
2. Go to the appropriate address-family using `address-family [ipv4/ipv6] unicast` command.
3. Configure default metric using `default-link-metric <value>` command.

Configuration example

The following global configuration example ISIS default metric is for the IPv4 address-family. It can be similarly configured for IPv6 address-family.

```
Brocade(config)#router isis
Brocade(config-isis-router)#address-family ipv4 unicast
Brocade(config-isis-router-ipv4u)# default-link-metric 40
```

Syntax: `[no] default-link-metric value [level-1 | level-2]`

The *value* parameter is the default-link-metric value to be set for the given address-family. This is a required parameter for this command. There is no default value for this parameter. For metric-style narrow: 1 to 63. For metric-style wide: 1 to 16777215.

The *level* parameter is an optional parameter used to set the default-metric for only one of the levels. If this parameter is not given, the default-link-metric will be applied to both level-1 and level-2.

The `[no]` version of command will revert the metric value to default, which is 10.

Metric behavior with change in metric-style

There are two types of metric styles in ISIS, narrow metric and wide metric. The range of the metric value is different in both of these styles. If there is a change in the metric-style configuration, the default-link-metric will also change with it. The new value of the default-link-metric will be equal to the minimum of a) configured value and b) the maximum value supported for the new metric-style.

If the metric style changes from narrow metric to wide metric, there will be no change in the value of default-link-metric.

If the metric style changes from wide metric to narrow metric, and if the value of default-link-metric is greater than 63, the default-link-metric will now take the value 63, as it is the maximum supported in the narrow metric.

ISIS Show command

The `show isis` command and `show ipv6 isis` command output has been modified to reflect the default-link-metric configured.

```
Brocade#sh isis
....
  Default redistribution metric: 0
  Default link metric for level-1: 33
  Default link metric for level-2: 5
  Protocol Routes redistributed into IS-IS:
....
Brocade#
```

Redistributing static IPv4 routes into IPv4 IS-IS

To redistribute static IPv4 routes from the IPv4 static route table into IPv4 IS-IS routes, enter the following command at the IPv4 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv4u)# redistribute static
```

This command configures the Brocade device to redistribute all static IPv4 routes into Level-2 IS-IS routes.

Syntax: `[no] redistribute static [level-1 | level-1-2 | level-2] | metric num | metric-type [external | internal] | route-map name`

The `level-1`, `level-1-2`, and `level-2` keywords restrict redistribution to the specified IPv4 IS-IS level.

The **metric** *num* parameter changes the metric. You can specify a value from 0 - 4294967295.

The **metric-type** **external** | **internal** parameter restricts redistribution to one of the following:

- **external** – The metric value is not comparable to an IPv4 IS-IS internal metric and is always higher than the IPv4 IS-IS internal metric.
- **internal** – The metric value is comparable to metric values used by IPv4 IS-IS. This is the default.

The **route-map** *name* parameter restricts redistribution to those routes that match the specified route map. The route map must already be configured before you use the route map name with the **redistribute** command. For example, to configure a route map that redistributes only the static IPv4 routes to the destination networks 192.168.0.0/24, enter commands such as the following:

```
Brocade(config)# access-list 10 permit 192.168.0.0 0.0.255.255
Brocade(config)# route-map static permit 1
Brocade(config-route-map static)# match ip address 10
Brocade(config-route-map static)# router isis
Brocade(config-isis-router)# address-family ipv4 unicast
Brocade(config-isis-router-ipv4u)# redistribute static route-map static
```

Redistributing directly connected routes into IPv4 IS-IS

To redistribute directly connected IPv4 routes into IPv4 IS-IS routes, enter the following command at the IPv4 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv4u)# redistribute connected
```

This command configures the Brocade device to redistribute all directly connected routes in the IPv4 route table into Level-2 IPv4 IS-IS.

Syntax: **[no] redistribute connected** [**level-1** | **level-1-2** | **level-2**] | **metric** *number* | **metric-type** [**external** | **internal**] | **route-map** *name*

The parameters are the same as the parameters for the **redistribute static** command.

Redistributing RIP routes into IPv4 IS-IS

To redistribute RIP routes into IPv4 IS-IS, enter the following command at the IPv4 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv4u)# redistribute rip
```

This command configures the Brocade device to redistribute all RIP routes into Level-2 IS-IS.

Syntax: **[no] redistribute rip** [**level-1** | **level-1-2** | **level-2**] | **metric** *number* | **metric-type** [**external** | **internal**] | **route-map** *name*

The parameters are the same as the parameters for the **redistribute static** command.

Redistributing OSPF routes into IPv4 IS-IS

To redistribute OSPF routes into IPv4 IS-IS, enter the following command at the IPv4 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv4u)# redistribute ospf
```

This command configures the Brocade device to redistribute all OSPF routes into Level-2 IPv4 IS-IS.

Syntax: [no] redistribute ospf [level-1 | level-1-2 | level-2] |
match [external1 | external2 | internal] |
metric *number* |
metric-type [external | internal] |
route-map *name*

Most of the parameters are the same as the parameters for the **redistribute static** command. However, the **redistribute ospf** command also has the **match external1 | external2 | internal** parameter. This parameter specifies the OSPF route type you want to redistribute into IPv4 IS-IS. By default, the **redistribute ospf** command redistributes only internal routes.

- **external1** – An OSPF type 1 external route.
- **external2** – An OSPF type 2 external route.
- **internal** – An internal route calculated by OSPF.

Redistributing BGP4+ routes into IPv4 IS-IS

To redistribute BGP4+ routes into IPv4 IS-IS, enter the following command at the IPv4 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv4u)# redistribute bgp
```

This command configures the device to redistribute all its BGP4 routes into Level-2 IPv4 IS-IS.

Syntax: [no] redistribute bgp [level-1 | level-1-2 | level-2] |
metric *number* | metric-type [external | internal] |
route-map *name*

The parameters are the same as the parameters for the **redistribute static** command.

Redistributing IPv4 IS-IS routes within IPv4 IS-IS

In addition to redistributing routes from other route sources into IPv4 IS-IS, the Brocade device can redistribute Level 1 IPv4 IS-IS routes into Level 2 IPv4 IS-IS routes, and Level 2 IPv4 IS-IS routes into Level 1 IPv4 IS-IS routes. By default, the device redistributes routes from Level 1 into Level 2.

NOTE

The Brocade device automatically redistributes Level 1 routes into Level 2 routes, even if you do not enable redistribution.

For example, to redistribute all IPv4 IS-IS routes from Level 2 into Level 1, enter the following command at the IPv4 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv4u)# redistribute isis level-2 into level-1
```

The device automatically redistributes Level-1 routes into Level 2.

Syntax: [no] redistribute isis level-1 into level-2 | level-2 into level-1 [prefix-list *name*]

The **level-1 into level-2 | level-2 into level-1** parameter specifies the direction of the redistribution:

- **level-1 into level-2** – Redistributes Level 1 routes into Level 2. This is the default.
- **level-2 into level-1** – Redistributes Level 2 routes into Level 1.


The **prefix-list name** specifies an IP prefix list.

Configuring IS-IS point-to-point over Ethernet

IS-IS uses its neighbor's MAC address to form an adjacency and stores the neighbors MAC address to recognize the adjacency in the future. This is no problem with directly adjacent routers but can become a problem when adjacency is required between routers that are more than one hop away. To accommodate an IS-IS network with this type of configuration, the IS-IS Point-to-Point over Ethernet feature has been developed.

Using the IS-IS Point-to-Point feature over ethernet, routers that are several hops away or available through an IP GRE tunnel (as described in [“Configuring IS-IS over a GRE IP tunnel”](#) on page 277) can form an IS-IS adjacency. It can be used when only two IS's are part of the broadcast network. This feature is configured at the interface level of the routers that are forming an adjacency. For example, [Figure 20](#) shows two Brocade devices several hops away from each other that are configured for IS-IS adjacency.

FIGURE 20 IS-IS Point-to-Point configuration

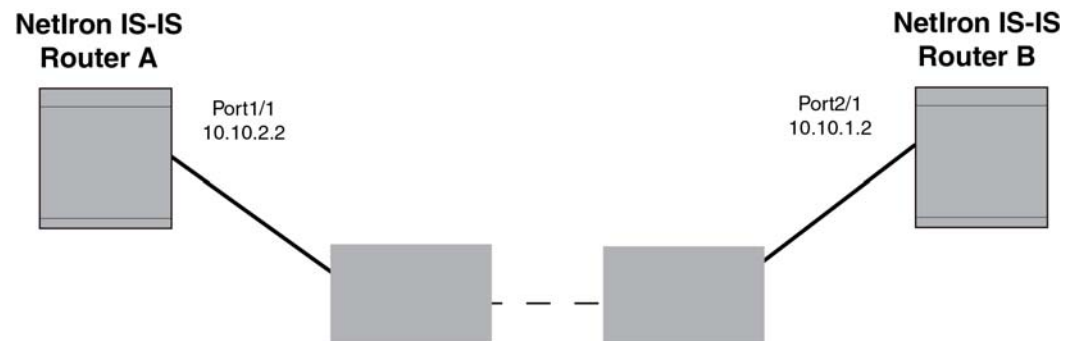

You can use the commands in the following configurations to enable the IS-IS Point-to-Point feature:

Brocade IS-IS Router A configuration

To configure Brocade IS-IS Router A for the IS-IS Point-to-Point feature use the following commands.

```
Brocade(config)# interface ethernet 1/1
Brocade(config-if-e10000-1/1)# ip router isis
Brocade(config-if-e10000-1/1)# ip address 10.10.2.2
Brocade(config-if-e10000-1/1)# isis point-to-point
```

Brocade IS-IS Router B configuration

To configure Brocade IS-IS Router B for the IS-IS Point-to-Point feature use the following commands.

```
Brocade(config)# interface ethernet 2/1
Brocade(config-if-e10000-2/1)# ip router isis
Brocade(config-if-e10000-2/1)# ip address 10.10.1.2
Brocade(config-if-e10000-2/1)# isis point-to-point
```

Syntax: [no] isis point-to-point

Displaying IS-IS point-to-point configuration

Use the **show isis interface** command to determine if IS-IS point-to-point is configured on an interface. In the example below, the lines in bold identify IS-IS point-to-point configuration.

```
Brocade# show isis interface
Total number of IS-IS Interfaces: 2
Interface : v128 Local Circuit Number: 0000000c
  Circuit Type : PTP Circuit Mode : LEVEL-1-2
  Circuit State: UP Passive State: FALSE
  MTU : 1497
  Level-1 Metric: 10, Level-1 Priority: 64
  Circuit State Changes: 1 Circuit Adjacencies State Changes: 1
  Rejected Adjacencies: 0
  Circuit Authentication Fails: 0 Bad LSP 0
  Control Messages Sent: 45600 Control Messages Received: 6778
  IP Enabled: TRUE
  IP Address and Subnet Mask:
    10.1.1.1 255.255.255.0
  IPv6 Enabled: FALSE
```

To determine if IS-IS point-to-point link is being used by ISs, use the **show isis neighbor** command.

```
Brocade# show isis neighbor
System Id   Interface  SNPA           State Holdtime Type Pri StateChgeTime
SFO-RX16   eth1/1     0000.00db.0eee UP    10      ISL2 64 0 :5 :5 :12
SFO-RX16   eth1/1     0000.00db.0eee UP    10      ISL1 64 0 :5 :5 :12
SFO-RX16   ve 128     0000.0000.0005 UP    30      PTPT 127 0 :4 :46:59
```

Configuring IS-IS over a GRE IP tunnel

As described in [“Configuring IS-IS point-to-point over Ethernet”](#) on page 275, IS-IS adjacency can be established over ethernet between routers that are more than one hop away using the IS-IS Point-to-Point feature. IS-IS over a GRE IP tunnel extends this capability by allowing you to configure IS-IS adjacency between routers on either end of a GRE IP tunnel. To configure IS-IS over a GRE IP Tunnel you must configure the following:

- Configure the routers that you want to establish adjacency for IS-IS point-to-point as described in [“Configuring IS-IS point-to-point over Ethernet”](#) on page 275.
- Configure a GRE IP Tunnel.
- Configure the routers used for the GRE IP Tunnel for IS-IS using the **router isis** command.
- Configure the tunnel interfaces on the routers used for the GRE IP Tunnel for IS-IS point-to-point using the **isis point-to-point** command.

Configuration considerations


The configuration considerations are as follows:

- When a GRE tunnel is configured, you cannot configure the same routing protocol on the tunnel through which the device learns the route to the tunnel destination. For example, if a device learns the tunnel destination route through the OSPF protocol, you cannot configure the OSPF protocol on the same Tunnel and vice-versa. When a tunnel has OSPF configured, the device cannot learn the tunnel destination route through OSPF. This will cause the system to become unstable.
- When you have keepalive configured on both sides of a GRE tunnel, we recommend that you disable the tunnel before changing any tunnel configurations. You can then re-enable the tunnel to restore it to normal functionality.
- When configuring a GRE IP Tunnel, the device must be configured with one of the following CAM Profiles: ipv4, ipv6, mpls-l3vpn, ipv4-vpn, multi-service-2 or mpls-l3vpn-2.

Configuring IS-IS over a GRE IP tunnel

Figure 21 displays a network configured for IS-IS over a GRE IP tunnel. In the example, Brocade IS-IS Router A and Brocade IS-IS Router B are configured for adjacency. Routers Brocade C and Brocade D are configured with a GRE IP tunnel. Following the illustration are examples of the configurations required for IS-IS over a GRE IP tunnel.

FIGURE 21 IS-IS over a GRE IP tunnel

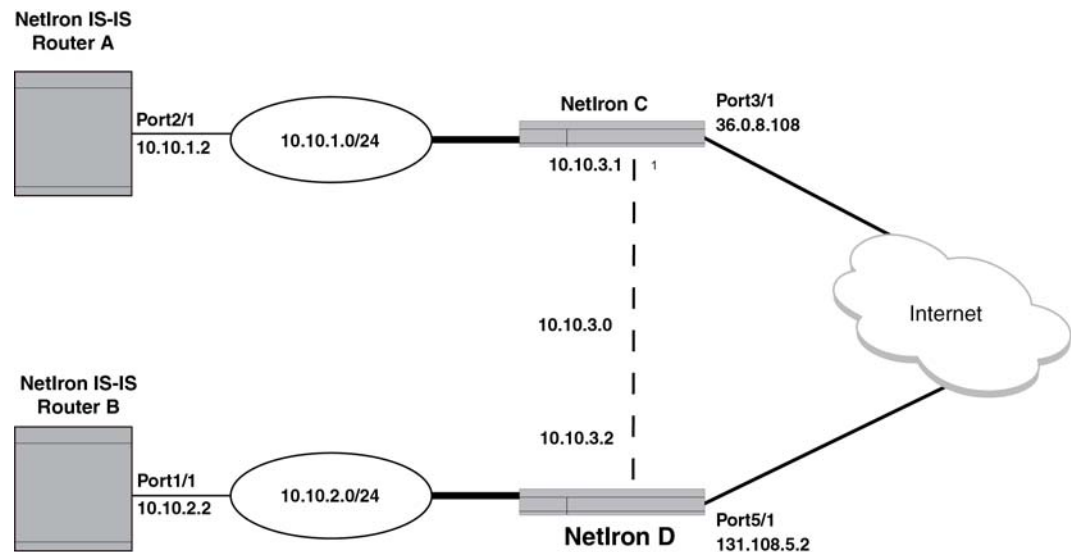

The following examples describe the configurations that support IS-IS over a GRE IP tunnel for each of the routers in Figure 21.

Brocade IS-IS Router A configuration

To configure Brocade IS-IS Router A for the IS-IS Point-to-Point feature use the following commands.

```
Brocade(config)# interface ethernet 2/1
Brocade(config-if-e10000-2/1)# ip router isis
Brocade(config-if-e10000-2/1)# ip address 10.10.1.2
Brocade(config-if-e10000-2/1)# isis point-to-point
```

Brocade IS-IS Router B configuration

To configure Brocade IS-IS Router B for the IS-IS Point-to-Point feature use the following commands.

```
Brocade(config)# interface ethernet 1/1
Brocade(config-if-e10000-1/1)# ip router isis
Brocade(config-if-e10000-1/1)# ip address 10.10.2.2
Brocade(config-if-e10000-1/1)# isis point-to-point
```

Brocade C configuration

To configure the Brocade C router for the IS-IS over a GRE IP tunnel feature, use the following commands.

```
Brocade(config)# router isis
Brocade(config-isis-router)# exit
Brocade(config)# interface tunnel 1
Brocade(config-tnif-1) tunnel source 10.0.8.108
Brocade(config-tnif-1) tunnel destination 10.108.5.2
Brocade(config-tnif-1) tunnel mode gre ip
Brocade(config-tnif-1) isis point-to-point
Brocade(config-tnif-1) ip address 10.10.3.1/24
Brocade(config-tnif-1) exit
Brocade(config) ip route 10.10.2.0/24 10.10.3.1
```

Brocade D configuration

To configure the Brocade D router for the S-IS over a GRE IP tunnel feature, use the following commands.

```
Brocade(config)# router isis
Brocade(config-isis-router)# exit
Brocade(config)# interface tunnel 1
Brocade(config-tnif-1) tunnel source ethernet 5/1
Brocade(config-tnif-1) tunnel destination 10.0.8.108
Brocade(config-tnif-1) tunnel mode gre ip
Brocade(config-tnif-1) isis point-to-point
Brocade(config-tnif-1) ip address 10.10.3.2/24
Brocade(config-tnif-1) exit
Brocade(config) ip route 10.10.1.0/24 10.10.3.1
```

Displaying IS-IS over GRE IP tunnel

You can use the **show isis interface** command to determine if IS-IS point-to-point is configured on a tunnel interface. In the example below, the lines in bold identify IS-IS point-to-point configuration in the `gre_tnl 1` interface.

```
Brocade# show isis interface
Total number of IS-IS Interfaces: 2
Interface : gre_tnl 1
  Circuit State: UP Circuit Mode: LEVEL-1-2
  Circuit Type : PTP Passive State: FALSE
  Circuit Number: 0x02, MTU: 1497
  Level-1 Metric: 10, Level-1 Priority: 64
  Level-1 Auth-mode: None
  Level-2 Auth-mode: None
  Level-1 Metric: 10, Level-1 Priority: 50
  Level-1 Hello Interval: 10 Level-1 Hello Multiplier: 3
```

```

Level-1 Designated IS: XMR1-02 Level-1 DIS Changes: 0
Level-2 Metric: 10, Level-2 Priority: 50
Level-2 Hello Interval: 10 Level-2 Hello Multiplier: 3
Level-2 Designated IS: MLX2-02 Level-2 DIS Changes: 0
Circuit State Changes: 1 Circuit Adjacencies State Changes: 1
Rejected Adjacencies: 0
Circuit Authentication L1 failures: 0
Circuit Authentication L2 failures: 0
Bad LSPs 0
Control Messages Sent: 318 Control Messages Received: 229
IP Enabled: TRUE
IP Address and Subnet Mask:
10.50.50.20          255.255.255.0
IPv6 Enabled: FALSE

```

To determine if IS-IS point-to-point link is being used by ISs, use the **show isis neighbor** command. In the example below, the line in bold identifies a point-to-point configuration on the XMR1 system for the gre_tnl 1 interface.

```

Brocade# show isis neighbor
Total number of IS-IS Neighbors: 3
System Id      Interface  SNPA          State Holdtime Type  Pri   StateChgeTime
0000.0000.0004 eth 6/2    0000.0076.4805 UP    30    ISL1  0    0 :0 :8 :42
0000.0000.0004 eth 6/2    0000.0076.4805 UP    30    ISL2  0    0 :0 :8 :42
XMR1          gre_tnl 1 0000.0000.0005 UP   30   PTPT 127 0 :0 :9 :16

```

You can use the **show ip route isis** command to determine if next hop is a tunnel. For example.

```

Brocade# show ip route isis
Type Codes - B:BGP D: Connected I: ISIS S: Static R: RIP O:O SPF; Cost - Dist/Metric
      Destination      Gateway      Port      Cost      Type
1      10.30.30.0/24     10.50.50.10 gre_tnl 1   115/20    IL1
2      10.100.100.0/24   10.50.50.10 gre_tnl 1   115/20    IL1
3      10.100.101.0/24   10.50.50.10 gre_tnl 1   115/20    IL1
4      10.100.102.0/24   10.50.50.10 gre_tnl 1   115/20    IL1
5      10.100.103.0/24   10.50.50.10 gre_tnl 1   115/20    IL1
6      10.100.104.0/24   10.50.50.10 gre_tnl 1   115/20    IL1
7      10.100.105.0/24   10.50.50.10 gre_tnl 1   115/20    IL1
8      10.100.106.0/24   10.50.50.10 gre_tnl 1   115/20    IL1
9      10.100.107.0/24   10.50.50.10 gre_tnl 1   115/20    IL1

```

IS-IS Non-Stop Routing

Overview

NOTE

IS-IS Non-Stop Routing (NSR) is applicable only to IPv4 routes computed by IS-IS and does not apply to IPv6 routes.

NOTE

IS-IS NSR is not supported on the Brocade NetIron CES and Brocade NetIron CER platforms.

IS-IS Non-Stop Routing (NSR) enables the IS-IS router to maintain topology and data flow to avoid re-convergence in the network during a processor switchover or hitless-reload event. The IS-IS Bidirectional Forwarding Detection (BFD) sessions survive the switchover and hitless-reload conditions. In general, a router restart causes its peer to remove the routes originated from the router and reinstalls them. This IS-IS NSR feature enables the router to maintain neighbors and LSA database with its peer on the event of a router restart.

In IS-IS NSR, the processor switchovers and the hitless-reloads are treated the same as they are during startup and the overload bit is set in the same way as it is after a reboot. For more information on overload bit setup, refer to [“Setting the overload bit”](#) on page 256.

NOTE

IS-IS NSR is independent of Graceful Restart (GR) and GR help role mechanisms.

Limitations

- The IS-IS over GRE tunnel feature does not support IS-IS NSR. The GRE tunnel interface types are not supported.
- The IS-IS shortcuts are not supported because they depend on the MPLS tunnel.
- If the IS-IS hellos are forwarded at Layer 2 and the device executes a hitless-reload, hellos will not be forwarded for a brief time. The IS-IS adjacencies are lost for 12 seconds and there will be data traffic loss.
- The configuration events that occur close to switchover or hitless-reload may get lost due to CLI synchronization issues.
- The neighbor or interface state changes close to switchover or hitless-reload cannot be handled.
- The IS-IS neighbor hold timer is restarted upon IS-IS NSR switchover or hitless-reload.
- The traffic counters are not synchronized because the neighbor and LSP database counters are recalculated on the standby module during synchronization.
- With IS-IS NSR enabled, after switchover or hitless-reload to standby MP, IS-IS routes, LSP database and neighbor adjacencies are maintained so that there will be no loss of existing traffic to the IS-IS destinations.
- The IS-IS NSR hitless failover event may not be completely invisible to the network because, after switchover, additional flooding of CSNP packets will occur in the directly connected neighbors.

Enabling and disabling IS-IS NSR

To globally enable IS-IS NSR, enter the following commands.

```
Brocade(config)# router isis
Brocade(config-isis-router)# nonstop-routing
```

To globally disable IS-IS NSR, enter the following commands.

```
Brocade(config)# router isis
Brocade(config-isis-router)# no nonstop-routing
```

Syntax: [no] nonstop-routing

Disabling and enabling IS-IS graceful restart helper mode

Graceful Restart allows for the forwarding of data packets to continue along known routes while the routing protocol information is being restored following a processor switchover.

NOTE

The IS-IS GR helper mode is enabled by default on the the router and there is no configuration required.

To disable IS-IS graceful restart (GR) helper mode, enter the following commands.

```
Brocade(config)# router isis
Brocade(config-isis-router)# graceful-restart helper-disable
```

To enable the disabled IS-IS graceful restart (GR) helper mode, enter the following commands.

```
Brocade(config)# router isis
Brocade(config-isis-router)# no graceful-restart helper-disable
```

[no] graceful-restart helper-disable

Displaying the IS-IS NSR status

To display the IS-IS NSR status, enter the following command.

```
Brocade(config-isis-router)# show isis
IS-IS Routing Protocol Operation State: Enabled
IS-Type: Level-2
System ID: cccc.bbbb.aaaa
Manual area address(es):
    22.6666
Level-1-2 Database State: On
Administrative Distance: 210
Maximum Paths: 4
Default redistribution metric: 0
Protocol Routes redistributed into IS-IS:
    None
Number of Routes redistributed into IS-IS: 0
Level-1 Auth-mode: None
Level-2 Auth-mode: None
Metric Style Supported for Level-1: Narrow
Metric Style Supported for Level-2: Narrow
Graceful-Restart Helper support enabled
IS-IS Partial SPF Optimizations: Enabled
Timers:
    L1 SPF: Max-wait 5s Init-wait 5000ms Second-wait 5000ms
    L2 SPF: Max-wait 5s Init-wait 5000ms Second-wait 5000ms
    L1 SPF will run in 800msec
    L2 SPF is not scheduled
    PSPF: Max-wait 5000ms Init-wait 2000ms Second-wait 5000ms
    PSPF will run in 300msec
    LSP: max-lifetime 45s, refresh-interval 7s, gen-interval 10s
        retransmit-interval 5s, lsp-interval 33ms
    SNP: csnp-interval 10s, psnp-interval 2s
Global Hello Padding : Enabled
Global Hello Padding For Point to Point Circuits: Enabled
Ptpt Three Way HandShake Mechanism: Enabled
BGP Ipv4 Converged: FALSE, Ipv6 Converged: FALSE
IS-IS Traffic Engineering Support: Disabled
```

IS-IS Non-Stop Routing

```

No ISIS Shortcuts Configured
BFD: Disabled
NSR: Enabled
  NSR State: Normal
  Standby MP: Ready
  Sync State: Enabled
Interfaces with IPv4 IS-IS configured:
  ethernet 2/1 ve 20 ve 165 loopback 1 loopback 2 loopback 3
  
```

The following table describes the output of the **show isis** command.

TABLE 38 Output from the **show isis** command

This field...	Displays...
IS-IS Routing Protocol Operation State	This field indicates the operating state of IS-IS and the possible states includes the following: <ul style="list-style-type: none"> • Enabled – IS-IS is enabled. • Disabled – IS-IS is disabled.
IS-Type	This field indicates the intermediate system type and the possible types includes the following: <ul style="list-style-type: none"> • Level 1 only – The Brocade device routes traffic only within the area in which it resides. • Level 2 only – The Brocade device routes traffic between areas of a routing domain. • Level 1-2 – The Brocade device routes traffic within the area in which it resides and between areas of a routing domain.
System ID	This field indicates the unique IS-IS router ID. Typically, the router base MAC address is used as the system ID.
Manual area address(es)	This field indicates the Area address(es) of the Brocade device.
Level-1-2 Database State	This field indicates the state of the Level 1-2 Database: <ul style="list-style-type: none"> • On • Off
Administrative Distance	This field specifies the current setting of the IS-IS administrative distance.
Maximum Paths	This field specifies the number of paths IS-IS can calculate and install in the forwarding table.
Default redistribution metric	This field specifies the value of the default redistribution metric, which is the IS-IS cost of redistributing the route into IS-IS.
Number of Routes redistributed into IS-IS	This field specifies the number of routes distributed into IS-IS.
Level-1 Auth-mode	This field indicates one of the following authentication modes set for Level-1 on the router: <ul style="list-style-type: none"> • None • md5 • cleartext
Level-2 Auth-mode	This field indicates one of the following authentication modes set for Level-2 on the router: <ul style="list-style-type: none"> • None • md5 • cleartext

TABLE 38 Output from the **show isis** command (Continued)

This field...	Displays...
Metric Style Supported for Level-1	This field indicates the metric style supported for Level-1 and the following values are supported: <ul style="list-style-type: none"> • Wide – Wide Metric Style • Narrow – Narrow Metric Style
Metric Style Supported for Level-2	This field indicates the metric style supported for Level-2 and the following values are supported: <ul style="list-style-type: none"> • Wide – Wide Metric Style • Narrow – Narrow Metric Style
IS-IS Graceful restart helper mode	This field indicates the IS-IS GR helper mode function and the parameter can contain one of the following values: <ul style="list-style-type: none"> • Enabled • Disabled
IS-IS Partial SPF Optimizations	This field indicates the IS-IS partial SPF optimization and the parameter can contain one of the following values: <ul style="list-style-type: none"> • Enabled • Disabled
Timers: L1 or L2 SPF:	The following values are displayed individually for IS-IS levels 1 and 2.
max-wait	This field indicates the maximum time gap that will occur between running of SPF calculations. It is the value configured as the spf-max-wait variable in the spf-interval command as described in “Configuring the IS-IS PSPF exponential back-off feature” on page 263.
Init-wait	This field indicates the initial time gap between an SPF event and the first running of SPF. This value reflects the spf-initial-time variable that is configured using the spf-interval command as described in “Configuring the IS-IS PSPF exponential back-off feature” on page 263.
Second-wait	This field indicates the interval between the first running of SPF and the first recalculation of the SPF tree. If this optional value is configured, it will be doubled with each recalculation of the SPF tree until the value is equal to the max-wait value This value reflects the spf-second-wait variable that is configured using the spf-interval command as described in “Configuring the IS-IS PSPF exponential back-off feature” on page 263.
SPF run status.	This field is not specifically labeled but it is displayed directly under the SPF timers. It can be any of the three values shown below: <ul style="list-style-type: none"> • SPF is running • SPF will run in sec where the sec variable is a value in seconds until the next time that SPF will be run. • SPF is not scheduled
Timers: PSPF:	
max-wait	This field indicates the maximum time gap that will occur between running of PSPF calculations. It is the value configured as the max-wait value in the partial-spf-interval command as described in “Configuring the IS-IS PSPF exponential back-off feature” on page 263.
Init-wait	This field indicates the initial time gap between the wait time after an LSP change until the first PSPF calculation. This value reflects the initial-wait variable that is configured using the partial-spf-interval command as described in “Configuring the IS-IS PSPF exponential back-off feature” on page 263.

TABLE 38 Output from the **show isis** command (Continued)

This field...	Displays...
Second-wait	This field indicates the wait time between the first and second PSPF calculations. If this optional value is configured, it will be doubled with each PSPF recalculation until the value is equal to the max-wait value. This value reflects the second-wait variable that is configured using the partial-spf-interval command as described in “Configuring the IS-IS PSPF exponential back-off feature” on page 263.
PSPF run status.	This field is not specifically labeled but it is displayed directly under the PSPF timers. It can be any of the three values shown below: <ul style="list-style-type: none"> • PSPF is running • PSPF will run in sec where the sec variable is a value in seconds until the next time that PSPF will be run. • PSPF is not scheduled
Timers: LSP:	
max-lifetime	This field indicates the maximum number of seconds an unrefreshed LSP can remain in the Brocade device's LSP database. The default value is 1000 sec.
refresh-interval	This field indicates the maximum number of seconds that a Brocade device waits between sending updated LSPs to its IS-IS neighbors. The default value is 1 sec.
gen-interval	This field indicates the minimum number of seconds that a Brocade device waits between sending updated LSPs to its IS-IS neighbors. The default value is 10 sec.
retransmit-interval	This field indicates the amount of time the Brocade device waits before it retransmits LSPs. The default value is 5 sec.
lsp-interval	This field indicates the rate of transmission (in milliseconds) of the LSPs. The default rate is 33 ms.
Timers: SNP:	
csnp-interval	This field indicates how often the designated IS sends a CSNP to the broadcast interface. The default value is 10 sec.
psnp-interval	This field indicates how often the IS sends a PSNP. The default value is 2 sec.
Global Hello Padding	The value can be: <ul style="list-style-type: none"> • Enabled • Disabled
Global Hello Padding For Point to Point Circuits	The value can be: <ul style="list-style-type: none"> • Enabled • Disabled
Ptpt Three Way HandShake Mechanism	The value can be: <ul style="list-style-type: none"> • Enabled • Disabled
IS-IS Traffic Engineering Support	The value can be: <ul style="list-style-type: none"> • Enabled • Disabled

TABLE 38 Output from the **show isis** command (Continued)

This field...	Displays...
BFD	The value can be: <ul style="list-style-type: none"> • Enabled • Disabled
Interfaces with IPv4 IS-IS configured	This field specifies the interfaces on which IPv4 IS-IS is configured.
NSR state	This field indicates the state of the IS-IS NSR and takes the following values: <ul style="list-style-type: none"> • Normal - This indicates that the switchover is either complete or the switchover event is not triggered. • SwitchOver Detected - This indicates that the switchover event is recognized by the IS-IS. • All Card Done - This is an internal event after which the IS-IS starts sending hellos to its neighbors and schedules SPF. • SPF Run Complete - This indicates that the SPF run and updating of the IS-IS routes to RTM is complete. • Wait for BGP - This event indicates that the IS-IS is waiting for redistribution to complete. After redistribution to IS-IS is complete, the IS-IS NSR state will change to Normal.
Standby MP	This field indicates the standby MP is active, ready, or inactive: <ul style="list-style-type: none"> • Active - This indicates the standby MP is active. • Inactive - This indicates the standby MP is either down or not present. • Ready - This indicates the standby MP is ready to accept configuration updates or database updates.
Sync State	This field indicates whether the synchronization state is enabled or disabled. The state changes depending on whether or not the Non Stop-Routing command is configured under the router IS-IS.
Interfaces with IPv4 IS-IS configured	This field specifies the interfaces configured with IPv4 IS-IS.

Configuring ISIS properties on an interface

This section describe the IS-IS parameters for an interface.

Disabling and enabling IS-IS on an interface

In addition to enabling IS-IS globally, you also must enable the protocol on the individual interfaces connected to ISs or ESs. To enable IS-IS locally on specific interfaces, enter commands such as the following.

```
Brocade(config)# interface ethernet 1/1
Brocade(config-if-1/1)# ip router isis
Brocade(config-if-1/1)# exit
Brocade(config)# interface pos 2/3
Brocade(config-if-2/3)# ip router isis
```

These commands enable IS-IS on ports 1/1 and 2/3. The NET configured above (at the IS-IS configuration level) applies to both interfaces.

Syntax: [no] ip router isis

Disabling or re-enabling formation of adjacencies

When you enable IS-IS on any type of interface except a loopback interface, the interface also is enabled to send advertisements and form an adjacency with an IS at the other end of the link by default. Adjacency formation and advertisements are disabled by default on loopback interfaces.

You can enable or disable adjacency formation and advertisements on an interface.

NOTE

The Brocade device advertises an IS-IS interface to its area regardless of whether adjacency formation is enabled.

To disable IS-IS adjacency formation on an interface, enter commands such as the following.

```
Brocade(config)# interface ethernet 2/8
Brocade(config-if-e1000-2/8)# isis passive
```

This command disables IS-IS adjacency formation on port 2/8. The device still advertises this IS-IS interface into the area, but does not allow the port to form an adjacency with the IS at the other end of the link.

Syntax: [no] isis passive

Setting the priority for designated IS election

The priority of an IS-IS interface determines the priority of the interface for being elected as a Designated IS. Level-1 has a Designated IS and Level-2 has a Designated IS. The Level-1 and Level-2 Designated ISs are independent, although the same device can become both the Level-1 Designated IS and the Level-2 Designated IS.

By default, the Level-1 and Level-2 priority is 64. You can configure an interface's priority to a value from 1 – 127. You can configure the same priority for both Level-1 and Level-2 or you can configure a different priority for each level. In case of a tie (if two or more devices have the highest priority within a given level), the device with the highest MAC address becomes the Designated IS for that level.

NOTE

You can set the IS-IS priority on an individual interface basis only. You cannot set the priority globally.

To set the IS-IS priority on an interface, enter commands such as the following.

```
Brocade(config)# interface ethernet 2/8
Brocade(config-if-e1000-2/8)# isis priority 127
```

This command sets the IS-IS priority on port 1/1 to 127. Since the command does not specify Level-1 or Level-2, the new priority setting applies to both IS-IS levels.

Syntax: [no] isis priority *num* [level-1 | level-2]

The *num* parameter specifies the priority and can be from 1 – 127. A higher numeric value means a higher priority. The default is 64.

The **level-1 | level-2** parameter applies the priority to Level-1 only or Level-2 only. By default, the priority is applied to both levels.

Limiting access to adjacencies with a neighbor

In addition to limiting access to an area (level-1) or domain (level-2), you can limit access to forming an IS-IS adjacency on a specific interface by entering a password at the interface configuration level. To enter this password, enter a command such as the following.

```
Brocade(config)# interface ethernet 2/8
Brocade(config-if-e1000-2/8)# isis password my-password
```

Syntax: [no] isis password *string*

The *string* parameter specifies the password. You can enter an alphanumeric string up to 80 characters long. The password can contain blank spaces. If you use a blank space in the password, you must use quotation marks (“ ”) around the entire password; for example, **isis password “admin 2”**.

Changing the IS-IS level on an interface

The section [“Changing the IS-IS level globally”](#) on page 260 explains how to change the IS-IS level globally. By default, a Brocade device can operate as both a Level-1 and IS-IS Level-2 router. You can change the IS-IS type on an individual interface to be Level-1 only or Level-2 only. You also can reset the type to both Level-1 and Level-2.

NOTE

If you change the IS-IS type on an individual interface, the type you specify must also be specified globally. For example, if you globally set the type to Level-2 only, you cannot set the type on an individual interface to Level-1. The software accepts the setting but the setting does not take effect.

To change the IS-IS type on a specific interface, enter commands such as the following.

```
Brocade(config)# interface ethernet 2/8
Brocade(config-if-e1000-2/8)# isis circuit-type level-1
```

Syntax: [no] isis circuit-type **level-1 | level-1-2 | level-2**

The **level-1 | level-1-2 | level-2** parameter specifies the IS-IS type. If you want to re-enable support for both IS-IS types, re-enter the command you entered to change the IS-IS type, and use “no” in front of the command.

Disabling and enabling hello padding on an interface

The section [“Globally disabling or re-enabling hello padding”](#) on page 264 explains what hello padding is, why it is important and how to globally disable or enable it on a device. You can also disable hello padding on a specific interface by entering commands such as the following.

```
Brocade(config)# interface ethernet 2/8
Brocade(config-if-e1000-2/8)# no isis hello padding
```

Syntax: [no] isis hello padding

By default, hello padding is enabled. Enter the **no** form of the command to disable hello padding.

Changing the hello interval

The hello interval controls how often an IS-IS interface sends hello messages to its IS-IS neighbors. The default interval is 10 seconds for Level-1 and Level-2. You can change the hello interval for one or both levels to a value from 1 – 65535 seconds.

To change the hello interval for Ethernet interface 2/8, enter commands such as the following.

```
Brocade(config)# interface ethernet 2/8
Brocade(config-if-e1000-2/8)# isis hello-interval 20
```

This command changes the hello interval to 20 seconds. By default, the change applies to Level-1 and Level-2.

Syntax: [no] isis hello-interval *num* [level-1 | level-2]

The *num* parameter specifies the interval, and can be from 1 – 65535 seconds. The default is 10 seconds.

The **level-1 | level-2** parameter applies the change to only the level you specify. If you do not use this parameter, the change applies to both levels.

Changing the hello multiplier

The hello multiplier is the number by which an IS-IS interface multiplies the hello interval to obtain the hold time for Level-1 and Level-2 IS-to-IS hello PDUs. The default multiplier is 3. You can set the multiplier to a value in the range 3 – 1000.

To change the hello multiplier for Ethernet interface 2/8, enter commands such as the following.

```
Brocade(config)# interface ethernet 2/8
Brocade(config-if-e1000-2/8)# isis hello-multiplier 50
```

This command changes the hello interval to 50. By default, the change applies to both Level-1 and Level-2.

Syntax: [no] isis hello-multiplier *num* [level-1 | level-2]

The *num* parameter specifies the multiplier, and can be from 3 – 1000. The default is 3.

The **level-1 | level-2** parameter applies the change to only the level you specify. If you do not use this parameter, the change applies to both levels.

DIS hello interval

The DIS hello interval value is derived from the hello interval configured under the interface. The default ISIS hellos interval is 10 sec. The default DIS hello interval is $10/3 = 3.33$ sec. The default values of the DIS hello interval is not changed.

However, if you configure a hello interval of 20 for an interface, then the DIS hello interval for the interface becomes $20/3 = 6.67$ sec.

The DIS hello multiplier is the same as the hello multiplier configured under the interface.

Changing the metric added to advertised routes

When the Brocade device originates an IS-IS route or calculates a route, the Brocade device adds a metric (cost) to the route. Each IS-IS interface has a separate metric value. The default is 10.

The Brocade device applies the interface-level metric to routes originated on the interface and also when calculating routes. The Brocade device does not apply the metric to link-state information that the Brocade device receives from one IS and floods to other ISs.

The default interface metric is 10. You can change the metric on an individual interface to a value in one of the following ranges:

- 1 – 63 for the narrow metric style (the default metric style for IPv4 ISIS)
- 1 – 16777215 for the wide metric style (the default metric style for IPv4 ISIS)

NOTE

If the metric value you want to use is higher than 63 but you have not changed the metric style to wide, change the metric style first, then set the metric. The IS-IS neighbors that will receive the advertisements also must be enabled to receive wide metrics.

To change the IS-IS metric on an interface, use the following CLI method.

```
Brocade(config)# interface ethernet 2/8
Brocade(config-if-e1000-2/8)# isis metric 15
```

Syntax: [no] isis metric *num* [level-1 | level-2]

The *num* parameter specifies the metric. The range of values you can specify depends on the metric style. You can specify 1 – 63 for the narrow metric style or 1 – 16777215 for the wide metric style. The default in either case is 10.

The **level-1 | level-2** parameter applies the change to only the level you specify. If you do not use this parameter, the change applies to both levels.

Displaying IPv4 IS-IS information

You can display the following information:

- General IS-IS Information – [“Displaying ISIS general information”](#) on page 289
- The active configuration (the IS-IS commands in the running-config) – refer to [“Displaying the IS-IS configuration in the running-config”](#) on page 293
- Name mappings – [“Displaying the name mappings”](#) on page 294
- Neighbor information – [“Displaying neighbor information”](#) on page 294
- Neighbor adjacency changes – [“Displaying IS-IS Syslog messages”](#) on page 296
- Interface information – [“Displaying interface information”](#) on page 297
- Route information – [“Displaying route information”](#) on page 301
- LSP database entries – [“Displaying LSP database entries”](#) on page 302
- Traffic statistics – [“Displaying traffic statistics”](#) on page 306
- Error statistics – [“Displaying error statistics”](#) on page 307
- IS-IS Log – [“Displaying the IS-IS SPF Log”](#) on page 310

Displaying ISIS general information

To display general IPv4 IS-IS information, enter the following command at any CLI level.

Displaying IPv4 IS-IS information

```

Brocade#show isis
  IS-IS Routing Protocol Operation State: Enabled
IS-Type: Level-1-2
System ID: 0000.0011.1111
Manual area address(es):
47
Level-1-2 Database State: On
Administrative Distance: 115
Maximum Paths: 4
Default redistribution metric: 0
Protocol Routes redistributed into IS-IS:
Static
Number of Routes redistributed into IS-IS: 11
Level-1 Auth-mode: None
Level-2 Auth-mode: None
Metric Style Supported for Level-1: Wide
Metric Style Supported for Level-2: Wide
IS-IS Partial SPF Optimizations: Enabled
Timers:
L1 SPF: Max-wait 120s Init-wait 100ms Second-wait 120000ms
L2 SPF: Max-wait 100s Init-wait 100ms Second-wait 100000ms
L1 SPF is not scheduled
L2 SPF is not scheduled
PSPF: Max-wait 120000ms Init-wait 120000ms Second-wait 120000ms
PSPF is not scheduled
  LSP: max-lifetime 1200s, refresh-interval 900s, gen-interval 10s
  retransmit-interval 5s, lsp-interval 33ms
SNP: csnp-interval 10s, psnp-interval 2s
Global Hello Padding : Enabled
Global Hello Padding For Point to Point Circuits: Enabled
Ptpt Three Way HandShake Mechanism: Enabled
IS-IS Traffic Engineering Support: Disabled
BFD: Disabled
Interfaces with IPv4 IS-IS configured:
eth 1/1

```

Syntax: show isis

This display shows the following information.

TABLE 39 IS-IS neighbor information

This field...	Displays...
IS-IS Routing Protocol Operation State	The operating state of IS-IS. Possible states include the following: <ul style="list-style-type: none"> • Enabled – IS-IS is enabled. • Disabled – IS-IS is disabled.
IS-Type	The intermediate system type. Possible types include the following: <ul style="list-style-type: none"> • Level 1 only – The Brocade device routes traffic only within the area in which it resides. • Level 2 only – The Brocade device routes traffic between areas of a routing domain. • Level 1-2 – The Brocade device routes traffic within the area in which it resides and between areas of a routing domain.
System ID	The unique IS-IS router ID. Typically, the Brocade device's base MAC address is used as the system ID.
Manual area address(es)	Area address(es) of the Brocade device.

TABLE 39 IS-IS neighbor information (Continued)

This field...	Displays...
Level-1-2 Database State	The state of the Level 1-2 Database: <ul style="list-style-type: none"> • On • Off
Administrative Distance	The current setting of the IS-IS administrative distance.
Maximum Paths	The number of paths IS-IS can calculate and install in the forwarding table
Default redistribution metric	The value of the default redistribution metric, which is the IS-IS cost of redistributing the route into IS-IS.
Number of Routes redistributed into IS-IS	The number of routes distributed into IS-IS.
Level-1 Auth-mode	One of the following authentication modes set for Level-1 on the router: <ul style="list-style-type: none"> • None • md5 • cleartext
Level-2 Auth-mode	One of the following authentication modes set for Level-2 on the router: <ul style="list-style-type: none"> • None • md5 • cleartext
Metric Style Supported for Level-1	The following values are supported: <ul style="list-style-type: none"> • Wide – Wide Metric Style • Narrow – Narrow Metric Style
Metric Style Supported for Level-2	The following values are supported: <ul style="list-style-type: none"> • Wide – Wide Metric Style • Narrow – Narrow Metric Style
IS-IS Partial SPF Optimizations	This parameter can contain one of the following values: <ul style="list-style-type: none"> • Enabled • Disabled
Timers: L1 or L2 SPF:	These values are displayed individually for IS-IS levels 1 and 2.
max-wait	The maximum time gap that will occur between running of SPF calculations. It is the value configured as the <code>spf-max-wait</code> variable in the <code>spf-interval</code> command as described in “Configuring the IS-IS P SPF exponential back-off feature” on page 263.
Init-wait	The initial time gap between an SPF event and the first running of SPF. This value reflects the <code>spf-initial-time</code> variable that is configured using the <code>spf-interval</code> command as described in “Configuring the IS-IS P SPF exponential back-off feature” on page 263.
Second-wait	The interval between the first running of SPF and the first recalculation of the SPF tree. If this optional value is configured, it will be doubled with each recalculation of the SPF tree until the value is equal to the max-wait value This value reflects the <code>spf-second-wait</code> variable that is configured using the <code>spf-interval</code> command as described in “Configuring the IS-IS P SPF exponential back-off feature” on page 263.

TABLE 39 IS-IS neighbor information (Continued)

This field...	Displays...
SPF run status.	<p>This field is not specifically labeled but is displayed directly under the SPF timers.) It can any of the three values shown below:</p> <ul style="list-style-type: none"> • SPF is running • SPF will run in sec where the sec variable is a value in seconds until the next time that SPF will be run. • SPF is not scheduled
Timers: PSPF:	
max-wait	<p>The maximum time gap that will occur between running of PSPF calculations. It is the value configured as the max-wait value in the partial-spf-interval command as described in “Configuring the IS-IS PSPF exponential back-off feature” on page 263.</p>
Init-wait	<p>The initial time gap between the wait time after an LSP change until the first PSPF calculation. This value reflects the initial-wait variable that is configured using the partial-spf-interval command as described in “Configuring the IS-IS PSPF exponential back-off feature” on page 263.</p>
Second-wait	<p>The wait time between the first and second PSPF calculations. If this optional value is configured, it will be doubled with each PSPF recalculation until the value is equal to the max-wait value This value reflects the second-wait variable that is configured using the partial-spf-interval command as described in “Configuring the IS-IS PSPF exponential back-off feature” on page 263.</p>
PSPF run status.	<p>This field is not specifically labeled but is displayed directly under the PSPF timers. It can any of the three values shown below:</p> <ul style="list-style-type: none"> • PSPF is running • PSPF will run in sec where the sec variable is a value in seconds until the next time that PSPF will be run. • PSPF is not scheduled
Timers: LSP:	
max-lifetime	<p>The maximum number of seconds an unrefreshed LSP can remain in the Brocade device’s LSP database. The default value is 1000 sec.</p>
refresh-interval	<p>The maximum number of seconds that a Brocade device waits between sending updated LSPs to its IS-IS neighbors. The default value is 1 sec.</p>
gen-interval	<p>The minimum number of seconds that a Brocade device waits between sending updated LSPs to its IS-IS neighbors. The default value is 10 sec.</p>
retransmit-interval	<p>The amount of time the Brocade device waits before it retransmits LSPs. The default value is 5 sec.</p>
lsp-interval	<p>The rate of transmission (in milliseconds) of the LSPs. The default rate is 33 ms.</p>
Timers: SNP:	
csnp-interval	<p>How often the designated IS sends a CSNP to the broadcast interface. The default value is 10 sec.</p>
psnp-interval	<p>How often the IS sends a PSNP. The default value is 2 sec.</p>

TABLE 39 IS-IS neighbor information (Continued)

This field...	Displays...
Global Hello Padding	This value can be: <ul style="list-style-type: none"> • Enabled • Disabled
Global Hello Padding For Point to Point Circuits	This value can be: <ul style="list-style-type: none"> • Enabled • Disabled
Ptpt Three Way HandShake Mechanism	This value can be: <ul style="list-style-type: none"> • Enabled • Disabled
IS-IS Traffic Engineering Support	This value can be: <ul style="list-style-type: none"> • Enabled • Disabled
BFD	This value can be: <ul style="list-style-type: none"> • Enabled • Disabled
Interfaces with IPv4 IS-IS configured	Interfaces on which IPv4 IS-IS is configured.

Displaying the IS-IS configuration in the running-config

You can display the global IS-IS configuration commands that are in effect on the Brocade device using the following CLI method.

NOTE

The running-config does not list the default values. Only commands that change a setting or add configuration information are displayed.

To list the global IS-IS configuration commands in the Brocade device's running-config, enter the following command at any level of the CLI.

```
Brocade# show isis config

router isis
 net 20.00e0.5200.0001.00
end
```

The running-config shown in this example contains the command that enables IS-IS and a command that configures a NET.

To display the interface configuration information in the running-config, enter one of the following commands at any level of the CLI:

- **show running-config**
- **write terminal**

Syntax: show isis config

Displaying the name mappings

To display the mappings, enter the following command at any level of the CLI.

```
Brocade# show isis hostname
Total number of entries in IS-IS Hostname Table: 1
  System ID      Hostname      * = local IS
* 0000.00cc.dddd XMR
```

Syntax: show isis hostname

The table in this example contains one mapping, for this Brocade device. The Brocade device's IS-IS system ID is "0000.00cc.dddd" and its hostname is "XMR". The display contains one entry for each IS that supports name mapping.

NOTE

Name mapping is enabled by default. When name mapping is enabled, the output of the **show isis database**, **show isis interface**, and **show isis neighbor** commands uses the host name instead of the system ID. To disable mapping so that these displays use the system ID instead, refer to ["Disabling or re-enabling display of hostname"](#) on page 260.

Displaying neighbor information

To display IS-IS neighbor information, enter the following command at any level of the CLI

```
Brocade# show isis neighbor
Total number of IS-IS Neighbors: 2
System ID      Interface SNPA   State Holdtime Type Pri StateChgeTime Protocol
00e0.52b5.7800 Ether2/4 00e0.52b5.7843 UP    10  ISL2 64  0  :0 :16:8 M-ISIS
00e0.52b5.7800 Ether2/4 00e0.52b5.7843 UP    10  ISL1 64  0  :0 :16:8 ISIS
```

Syntax: show isis neighbor [detail]

The **detail** option displays more details for each neighbor.

This display shows the following information.

TABLE 40 IS-IS neighbor information

This field...	Displays...
Total number of IS-IS Neighbors	The number of ISs with which the Brocade device has formed IS-IS adjacencies.
System ID	The System ID of the neighbor or the hostname of the neighbor.
Interface	The Brocade device port or virtual interface attached to the neighbor.
SNPA	The Subnetwork Point of Attachment (SNPA), which is the MAC address of the Brocade device port or virtual interface attached to the neighbor.
State	The state of the adjacency with the neighbor. The state can be one of the following: <ul style="list-style-type: none"> DOWN – The adjacency is down. INIT – The adjacency is being established and is not up yet. UP – The adjacency is up.
Holdtime	The neighbor's advertised hold time.

TABLE 40 IS-IS neighbor information (Continued)

This field...	Displays...
Type	The IS-IS type of the adjacency. The type can be one of the following: <ul style="list-style-type: none"> • ISL1 – Level-1 IS • ISL2 – Level-2 IS • ES – ES <p>NOTE: The Brocade device forms a separate adjacency for each IS-IS type. Thus, if the Brocade device has both types of IS-IS adjacencies with the neighbor, the display contains a separate row of information for each adjacency.</p>
Pri	The priority of this IS to be elected as the Designated IS in this broadcast network.
StateChgeTime	The amount of time that has passed since the adjacency last changed state.
Protocol	The routing protocol supported by the neighbor. The protocol can be one of the following: <ul style="list-style-type: none"> • MT-ISIS – Multi-Topology is enabled on the neighbor. • ISIS – Multi-Topology is not enabled on the neighbor.

To display IS-IS neighbor detail information, enter the following command at any level of the CLI.

```
Brocade# show isis neighbor detail
Total number of IS-IS Neighbors: 1
System ID Interface SNPA State Holdtime Type Pri StateChgeTime Protocol
Core2 ve 501 0900.2b00.0005 UP 30 PTPT 127 0 :0 :46:41 M-ISIS
3-Way HandShake TLV received: circuit-id 2
Area Address(es): 00.0000
Adj Usage L1
Protocols Supported: IP IPv6
IP Address: 191.28.1.2, circuit-id 2
```

Syntax: `show isis neighbor [detail]`

The **detail** option displays more information about each neighbor.

[Table 41](#) describes the output parameters of the **show isis neighbor detail** command.

TABLE 41 IS-IS neighbor information

This field...	Displays...
Total number of IS-IS Neighbors	The number of ISs with which the Brocade device has formed IS-IS adjacencies.
System ID	The System ID of the neighbor or the hostname of the neighbor.
Interface	The Brocade device port or virtual interface attached to the neighbor.
SNPA	The Subnetwork Point of Attachment (SNPA), which is the MAC address of the Brocade device port or virtual interface attached to the neighbor.
State	The state of the adjacency with the neighbor. The state can be one of the following: <ul style="list-style-type: none"> • DOWN – The adjacency is down. • INIT – The adjacency is being established and is not up yet. • UP – The adjacency is up.
Holdtime	The neighbor’s advertised hold time.

TABLE 41 IS-IS neighbor information (Continued)

This field...	Displays...
Type	The IS-IS type of the adjacency. The type can be one of the following: <ul style="list-style-type: none"> • ISL1 – Level-1 IS • ISL2 – Level-2 IS • ES – ES <p>NOTE: The Brocade device forms a separate adjacency for each IS-IS type. Thus, if the Brocade device has both types of IS-IS adjacencies with the neighbor, the display contains a separate row of information for each adjacency.</p>
Pri	The priority of this IS to be elected as the Designated IS in this broadcast network.
StateChgeTime	The amount of time that has passed since the adjacency last changed state.
3-Way Handshake TLV received	The received 3-way handshake TLV for the interface.
Area Address (es)	The address of the area.
Protocols Supported	The topology supported by the neighbor.
IP Address	The IP address assigned to the neighbor interface.
Adj Usage L1	The adjacency level used by the neighbor.
circuit ID	The ID of the IS-IS circuit running on the neighbor interface.
Protocol	The routing protocol supported by the neighbor. The protocol can be one of the following: <ul style="list-style-type: none"> • MT-ISIS – Multi-Topology is enabled on the neighbor. • ISIS– Multi-Topology is not enabled on the neighbor.

Displaying IS-IS Syslog messages

When logging is enabled, the Brocade device generates Syslog messages and SNMP traps for the following IS-IS events:

- Overload state (the Brocade device entering or leaving the overload state)
- Memory overrun (IS-IS is demanding more memory than is available)

You also can enable the Brocade device to generate Syslog messages and SNMP traps when an adjacency with a neighbor comes up or goes down. To enable logging of adjacency changes, refer to [“Logging adjacency changes”](#) on page 265.

To display Syslog entries, enter the following command at any level of the CLI.

```
Brocade# show logging

Syslog logging: enabled (0 messages dropped, 0 flushes, 0 overruns)
  Buffer logging: level ACDMEINW, 3 messages logged
  level code: A=alert C=critical D=debugging M=emergency E=error
              I=informational N=notification W=warning

Static Log Buffer:

Dynamic Log Buffer (50 lines):
00d00h00m42s:N:BGP Peer 10.147.202.10 UP (ESTABLISHED)
00d00h00m18s:N:ISIS L2 ADJACENCY UP 0000.0034.1234 on interface 2/8
00d00h00m08s:N:ISIS L1 ADJACENCY UP 0000.0034.1234 on interface 2/8
00d00h00m08s:N:ISIS L2 ADJACENCY UP 0000.00de.5520 on interface 5/1
00d00h00m00s:I:Warm start
```

The messages in this example indicate that the software has been reloaded (Warm start) and adjacencies between the Brocade device and three ISs have come up.

Syntax: `show logging`

Displaying interface information

To display information about the Brocade device's IS-IS interfaces, enter the `show isis` commands at any level of the CLI, as the examples in this section illustrate.

The following is an example of the `show isis interface` command for an Ethernet Interface module configured for a Circuit Type BCAST.

```
Brocade(config-if-e10000-1/1)#show isis interface
Total number of IS-IS Interfaces: 1
Interface: eth 1/1
Circuit State: UP Circuit Mode: LEVEL-1-2
Circuit Type: BCAST Passive State: FALSE
Circuit Number: 0x01, MTU: 1500
Level-1 Auth-mode: None
Level-2 Auth-mode: None
Level-1 Metric: 10, Level-1 Priority: 64
Level-1 Hello Interval: 5 Level-1 Hello Multiplier: 3
Level-1 Designated IS: mu2-01 Level-1 DIS Changes: 3
Level-2 Metric: 10, Level-2 Priority: 64
Level-2 Hello Interval: 5 Level-2 Hello Multiplier: 3
Level-2 Designated IS: mu2-01 Level-2 DIS Changes: 3
Next IS-IS LAN Level-1 Hello in 1 seconds
Next IS-IS LAN Level-2 Hello in 4 seconds
Number of active Level-1 adjacencies: 0
Number of active Level-2 adjacencies: 0
Circuit State Changes: 1 Circuit Adjacencies State Changes: 0
Rejected Adjacencies: 0
Circuit Authentication L1 failures: 0
Circuit Authentication L2 failures: 0
Bad LSPs: 0
Control Messages Sent: 63 Control Messages Received: 27
Hello Padding: Enabled
IP Enabled: TRUE
IP Addresses:
10.1.1.2/24
```

Displaying IPv4 IS-IS information

```
IPv6 Enabled: TRUE
IPv6 Addresses:
1000::1/32
IPv6 Link-Local Addresses:
fe80::200:ff:fe02:c000
MPLS TE Enabled: FALSE
```

The following is an example of the **show isis interface** command for a POS Interface module configured with a Circuit Type: PTP.

```
Brocade#show isis interface
Total number of IS-IS Interfaces: 1
Interface: eth 1/1
Circuit State: UP Circuit Mode: LEVEL-1-2
Circuit Type: PTP Passive State: FALSE
Circuit Number: 0x01, MTU: 1500
Level-1 Auth-mode: None
Level-1 Metric: 10
Level-1 Hello Interval: 5 Level-1 Hello Multiplier: 3
Level-2 Metric: 10
Circuit State Changes: 1 Circuit Adjacencies State Changes: 0
Rejected Adjacencies: 0
Circuit Authentication L1 failures: 0
Bad LSPs: 0
Control Messages Sent: 9 Control Messages Received: 1
Hello Padding: Enabled
IP Enabled: TRUE
IP Addresses:
10.1.1.2/24
IPv6 Enabled: TRUE
IPv6 Addresses:
1000::1/32
IPv6 Link-Local Addresses:
fe80::200:ff:fe02:c000
MPLS TE Enabled: FALSE
```

Syntax: **show isis interface** [**brief** | **ethernet slot-number/port-number** | **pos slot-number/port-number** | **loopback number** | **ve number**]

This display shows the following information.

TABLE 42 IS-IS interface information

This field...	Displays...
Total number of IS-IS interfaces	The number of interfaces on which IS-IS is enabled.
Interface	The port or virtual interface number to which the information listed below applies.
Circuit State	The state of the circuit, which can be one of the following: <ul style="list-style-type: none">• DOWN• UP
Circuit Mode	The IS-IS type in use on the circuit. The mode can be one of the following: <ul style="list-style-type: none">• LEVEL-1• LEVEL-2• LEVEL-1-2

TABLE 42 IS-IS interface information (Continued)

This field...	Displays...
Circuit Type	The type of IS-IS circuit running on the interface. The circuit type can be one of the following: <ul style="list-style-type: none"> • BCAST (broadcast). • PTP (Point-to-Point)
Passive State	The passive state determines whether the interface is allowed to form an IS-IS adjacency with the IS at the other end of the circuit. The state can be one of the following: <ul style="list-style-type: none"> • FALSE – The passive option is disabled. The interface can form an adjacency with the IS at the other end of the link. • TRUE – The passive option is enabled. The interface cannot form an adjacency, but can still advertise itself into the area.
Circuit Number	The ID that the instance of IS-IS running on the interface applied to the circuit between this interface and the interface at the other end of the link.
MTU	The maximum length supported for IS-IS PDUs sent on this interface.
Level-1 Auth-mode	One of the following authentication modes set for Level-1 on the router: <ul style="list-style-type: none"> • None • md5 • cleartext
Level-2 Auth-mode	One of the following authentication modes set for Level-2 on the router: <ul style="list-style-type: none"> • None • md5 • cleartext <p>This parameter is not displayed for interfaces that are configured with a Point-to-Point circuit type. This is because separate Level-2 Hello messages are not sent on Point-to-Point interfaces. Consequently, "Hello Interval", "Hello Multiplier", and "Authentication" parameters should always be configured in the Level-1 mode for Point-to-Point interfaces.</p>
Level-1 Metric	The default-metric value that the Brocade device inserts in IS-IS Level-1 PDUs for this interface.
Level-1 Priority	The priority of this IS to be elected as the Designated IS for Level-1 in this broadcast network.
Level-1 Hello Interval	The number of seconds the software waits between sending Level-1 hello PDUs to the IS at the other end of the circuit.
Level-1 Hello Multiplier	The number by which the software multiplies the hello interval to calculate the hold time set in Level-1 Hello PDUs sent on the circuit.
Level-1 Designated IS	The NET of the Level-1 Designated IS.
Level-1 DIS Changes	The number of times the NET of the Level-1 Designated IS has changed.
Level-2 Metric	The default-metric value that the Brocade device inserts in IS-IS Level-2 PDUs for this interface.
Level-2 Priority	The priority of this IS to be elected as the Designated IS for Level-2 in this broadcast network.
Level-2 Hello Interval	The number of seconds the software waits between sending Level-2 Hello messages to the IS at the other end of the circuit.

TABLE 42 IS-IS interface information (Continued)

This field...	Displays...
Level-2 Hello Multiplier	The number by which the software multiplies the hello interval to calculate the hold time set for Level-2 Hello PDUs sent on this circuit. This parameter is not displayed for interfaces that are configured with a Point-to-Point circuit type. This is because separate Level-2 Hello messages are not sent on Point-to-Point interfaces. Consequently, "Hello Interval", "Hello Multiplier", and "Authentication" parameters should always be configured in the Level-1 mode for Point-to-Point interfaces.
Level-2 Designated IS	The NET of the Level-2 Designated IS.
Level-2 DIS Changes	The number of times the NET of the Level-2 Designated IS has changed.
Next IS-IS LAN Level-1 Hello	Number of seconds before next Level-1 Hello PDU will be transmitted by the Brocade device.
Next IS-IS LAN Level-2 Hello	Number of seconds before next Level-2 Hello PDU will be transmitted by the Brocade device.
Number of active Level-1 adjacencies	The number of ISs with which this interface has an active Level-1 adjacency.
Number of active Level-2 adjacencies	The number of ISs with which this interface has an active Level-2 adjacency.
Circuit State Changes	The number of times the state of the circuit has changed.
Circuit State Adjacencies Changes	The number of times an adjacency has started or ended on this circuit.
Rejected Adjacencies	The number of adjacency attempts by other ISs rejected by the Brocade device.
Circuit Authentication L1 failures	The number of times the Brocade device rejected a circuit because the authentication did not match the authentication configured for Level-1 on the Brocade device.
Circuit Authentication L2 failures	The number of times the Brocade device rejected a circuit because the authentication did not match the authentication configured for Level-2 on the Brocade device. This parameter is not displayed for interfaces that are configured with a Point-to-Point circuit type. This is because separate Level-2 Hello messages are not sent on Point-to-Point interfaces. Consequently, "Hello Interval", "Hello Multiplier", and "Authentication" parameters should always be configured in the Level-1 mode for Point-to-Point interfaces.
Bad LSP	The number of times the interface received a bad LSP from an IS at the other end of the circuit. The following conditions can cause an LSP to be bad: <ul style="list-style-type: none"> • Invalid checksum • Invalid length • Invalid lifetime value
Control Messages Sent	The number of IS-IS control PDUs sent on this interface.
Control Messages Received	The number of IS-IS control PDUs received on this interface.
Hello Padding:	The Hello Padding configuration, which can be: <ul style="list-style-type: none"> • Enabled • Disabled
IP Enabled	If set to TRUE, the IP protocol is enabled for this circuit.
IP Address and Subnet Mask	The IP address and subnet mask for this interface.

TABLE 42 IS-IS interface information (Continued)

This field...	Displays...
IPv6 Enabled	If set to TRUE, the IPv6 protocol is enabled for this circuit.
IPv6 Address and Subnet Mask	The IPv6 address and subnet mask for this interface.
IPv6 Link-Local Addresses	The IPv6 link local address for this interface.
MPLS TE Enabled:	If set to TRUE, MPLS Traffic Engineering protocol is enabled for this circuit.
BFD Enabled:	If set to TRUE, BiDirectional Forwarding Detection is enabled for this circuit.

Displaying route information

To display the routes in the Brocade device's IS-IS route table, use either of the following methods.

To display information about the routes in the Brocade device's IS-IS route table, enter the following command at any level of the CLI.

```
Brocade# show isis routes
Total number of IS-IS routes: 173
Destination      Mask           Cost  Type Tag      Flags
10.0.0.0         255.255.255.0  21    L2   00000000 00000242
  Path: 1       Next Hop IP: 10.1.1.1      Interface: 7/1
10.0.0.0         255.255.255.255  30    L2   00000000 00000242
  Path: 1       Next Hop IP: 10.1.1.1      Interface: 7/1
10.0.0.1         255.255.255.255  30    L2   00000000 00000242
  Path: 1       Next Hop IP: 10.1.1.1      Interface: 7/1
10.0.10.0        255.255.255.0   30    L2   00000000 00000242
  Path: 1       Next Hop IP: 10.1.1.1      Interface: 7/1
```

Syntax: show isis routes [ip-address subnet-mask | ip-address/prefix]

You may enter **ip-address subnet-mask** or **ip-address/prefix** if you want information for a specific route.

Example

```
Brocade# show isis routes 10.0.111.0 255.255.255.0
10.0.111.0      255.255.255.0   21    L2   00000000 00000242
  Path: 1       Next Hop IP: 10.1.1.1      Interface: 7/1
```

This display shows the following information.

TABLE 43 IS-IS route information

This field...	Displays...
Total number of IS-IS routes	The total number of routes in the Brocade device's IS-IS route table. The total includes Level-1 and Level-2 routes.
Destination	The IP destination of the route.
Mask	The subnet mask for the destination address.
Cost	The IS-IS default metric for the route, which is the cost of using this route to reach the next-hop router to this destination.
Type	The route type, which can be one of the following: <ul style="list-style-type: none"> • L1 – Level-1 route • L2 – Level-2 route

TABLE 43 IS-IS route information (Continued)

This field...	Displays...
Tag	The tag value associated with the route.
Path	The path number in the table. The IS-IS route table can contain multiple equal-cost paths to the same destination, in which case the paths are numbered consecutively. When IP load sharing is enabled, the Brocade device can load balance traffic to the destination across the multiple paths.
Next Hop IP	The IP address of the next-hop interface to the destination.
Interface	The Brocade device interface (port or virtual interface) attached to the next hop.
Flags	Values used by Brocade technical support for troubleshooting.

Displaying LSP database entries

Use the following methods to display summary or detailed information about the entries in the LSP database.

NOTE

The Brocade device maintains separate LSP databases for Level-1 LSPs and Level-2 LSPs.

Displaying summary information

To display summary information for all the LSPs in the Brocade device's LSP databases, enter the following command at any level of the CLI.

```
Brocade)# show isis database
IS-IS Level-1 Link State Database
LSPID                LSP Seq Num  LSP Checksum  LSP Holdtime  ATT/P/OL
XMR-1.00-00          0x0000000c  0xd048        963            1/0/0
XMR-1.01-00          0x00000004  0x09b0        957            0/0/0
XMR-1.02-00          0x00000001  0xc57b        961            0/0/0
XMR.00-00*           0x0000000b  0x23fb        1030           1/0/0

IS-IS Level-2 Link State Database
LSPID                LSP Seq Num  LSP Checksum  LSP Holdtime  ATT/P/OL
XMR-1.00-00          0x0000000d  0x7d97        964            1/0/0
XMR-1.01-00          0x00000004  0x09b0        958            0/0/0
XMR-1.02-00          0x00000001  0x200f        962            0/0/0
XMR.00-00*           0x0000000b  0x5647        1030           1/0/0
0000.0100.0003.00-00 0x0000001f  0x761a        932            0/0/0
0000.0100.0003.00-01 0x0000001d  0x9c9d        606            0/0/0
```

The command in this example shows information for the LSPs in the Brocade device's Level-1 and Level-2 LSP databases. Notice that the display groups the Level-1 and Level-2 LSPs separately.

Syntax: `show isis database [lsp-id | detail | I1 | I2 | level1 | level2]`

The *lsp-id* parameter displays summary information about a particular LSP. Specify an LSPID for which you want to display information in HHHH.HHHH.HHHH.HH-HH format, for example, 3333.3333.3333.00-00. You can also enter name.HH-HH, for example, XMR.00-00.

The **detail** parameter displays detailed information about the LSPs. Refer to [“Displaying detailed information”](#) on page 304.

The **I1** and **level1** parameters display the Level-1 LSPs only. You can use either parameter.

The **I2** and **level2** parameters display the Level-2 LSPs only. You can use either parameter.

The **show isis database** summary display shows the following information.

TABLE 44 IS-IS summary LSP database information

This field...	Displays...
LSPID	The LSP ID, which consists of the source ID (6 bytes), the pseudonode (1 byte), and LSPID (1 byte). NOTE: If the address has an asterisk (*) at the end, this indicates that the LSP is locally originated.
LSP Seq Num	The sequence number of the LSP.
LSP Checksum	The checksum calculated by the device that sent the LSP and used by the Brocade device to verify that the LSP was not corrupted during transmission over the network.
LSP Holdtime	The maximum number of seconds during which the LSP will remain valid. NOTE: The IS that originates the LSP sets the timer for the LSP. As a result, LSPs do not all have the same amount of time remaining when they enter the Brocade device's LSP database.
ATT	A 4-bit value extracted from bits 4 - 7 in the Attach field of the LSP.
P	The value in the Partition option field of the LSP. The field can have one of the following values: <ul style="list-style-type: none"> • 0 - The IS that sent the LSP does not support partition repair. • 1 - The IS that sent the LSP supports partition repair.
OL	The value in the LSP database overload field of the LSP. The field can have one of the following values: <ul style="list-style-type: none"> • 0 - The overload bit is off. • 1 - The overload bit is on, indicating that the IS that sent the LSP is overloaded and should not be used as a IS-IS transit router for that level.

Displaying detailed information

To display detailed information for all the LSPs in the Brocade device's LSP databases, enter the following command at any level of the CLI.

```

Brocade# show isis database detail
IS-IS Level-1 Link State Database
LSPID                LSP Seq Num  LSP Checksum  LSP Holdtime  ATT/P/OL
XMR.00-00*           0x0000000b  0x23fb        971            1/0/0
  Area Address: 49
  NLPID: CC(IP)
  Hostname: XMR14
  IP Address: 10.1.1.1
  IPv6 Address: 2001:db8::14
  Metric: 10    IP-Internal 10.1.1.0/24      Up-bit: 0
  Metric: 10    IS XMR.01

IS-IS Level-2 Link State Database
LSPID                LSP Seq Num  LSP Checksum  LSP Holdtime  ATT/P/OL
XMR.00-00*           0x0000000d  0x7d97        903            1/0/0
  Area Address: 49
  NLPID: IPv6IP
  Hostname: XMR14
  IP address: 10.1.1.1
  IPv6 address: 2001:db8::14
  Flooding to 1 interface: eth 1/7
  Metric: 10    IP-Internal 10.1.1.0/24      Up-bit: 0
  Metric: 10    IP-Internal 10.85.1.0/24    Up-bit: 0
  Metric: 10    IS XMR.01
  Metric: 10    IS XMR.02
    
```

TABLE 45 IS-IS detailed LSP database information

This field...	Displays...
LSPID	Refer to the description of the summary display.
LSP Seq Num	Refer to the description of the summary display.
LSP Checksum	Refer to the description of the summary display.
LSP Holdtime	Refer to the description of the summary display.
ATT or P or OL	Refer to the description of the summary display.
Area Address	The address of the area.
NLPID	The Network Layer Protocol Identifier (NLPID), which specifies the protocol the IS that sent the LSP is using. Usually, this value is "CC(IP)".
IP address	The IP address of the interface that sent the LSP. The Brocade device can use this address as the next hop in routes to the addresses listed in the rows below.

TABLE 45 IS-IS detailed LSP database information (Continued)

This field...	Displays...
Destination addresses	<p>The rows of information below the IP address row are the destinations advertised by the LSP. The Brocade device can reach these destinations by using the IP address listed above as the next hop.</p> <p>Each destination entry contains the following information:</p> <ul style="list-style-type: none"> • Metric – The value of the default metric, which is the IS-IS cost of using the IP address above as the next hop to reach this destination. • Device type – The device type at the destination. The type can be one of the following: <ul style="list-style-type: none"> • End System – The device is an ES. • IP-Internal – The device is an ES within the current area. The IP address and subnet mask are listed. • IS – The device is another IS. The NET (NSAP address) is listed. • IP-Extended – Same as IP-Internal, except the device uses the extended TLV fields described in draft-ietf-isis-traffic-02.txt to carry the information. • IS-Extended – Same as IS, except the device uses the extended TLV fields described in draft-ietf-isis-traffic-02.txt to carry the information.
Flooding to <i>num</i> interface:	Identifies the number of interfaces on which the specific LSP entry will be flooded and identifies the interfaces.
Acking to <i>num</i> interface:	Identifies the number of interfaces on which the specific LSP entry will be acknowledged and identifies the interfaces.

Displaying database summary information

The following command is used to display the ISIS database.

```

Brocade# show isis database summary
IS-IS Level-1 Link State Database Summary
Number of LSPs :                2
Number of LSPs loading :        0
Number of LSP fragments :       0
Number of Pseudo LSPs :         1
Number of Pseudo LSP fragments : 0
Number of My LSPs :              1
Number of My LSP fragments :     0
Number of My Pseudo LSPs :      0
Number of My Pseudo LSP fragments : 0
Sum of LSPs Checksum :          0x00018004

IS-IS Level-2 Link State Database Summary

Number of LSPs :                2
Number of LSPs loading :        0
Number of LSP fragments :       0
Number of Pseudo LSPs :         1
Number of Pseudo LSP fragments : 0
Number of My LSPs :              1
Number of My LSP fragments :     0
Number of My Pseudo LSPs :      0
Number of My Pseudo LSP fragments : 0
Sum of LSPs Checksum :          0x00019775

```

Table 46 defines the fields shown in the above example output of the **show ip ospf interface brief** command.

TABLE 46 Output of the **show isis database summary** command

This field	Displays
Number of LSPs	Total number of LSPs in database (includes those in the loading state).
Number of LSPs loading	Number of LSPs pending a full LSP update. This value is generally non-zero during adjacency formation.
Number of LSP fragments	The number of LSPs with a non-zero LSP number (a fragment of an LSP)
Number of Pseudo LSPs	The number of pseudo LSPs.
Number of Pseudo LSP fragments	The number of pseudo LSPs with a non-zero LSP number (a fragment of an LSP).
Number of My LSPs	Total number of LSPs originated by this router.
Number of My LSP fragments	The number of LSPs originated by this router with a non-zero LSP number (a fragment of an LSP)
Number of My Pseudo LSPs	The number of pseudo LSPs originated by this router.
Number of My Pseudo LSP fragments	The number of pseudo LSPs originated by this router with a non-zero LSP number (a fragment of an LSP).
Sum of LSPs Checksum	Total checksum of all LSPs in database (including those in loading state). This number should be the same across ISIS routers during periods of network stability.

Displaying traffic statistics

The Brocade device maintains statistics for common IS-IS PDU types. To display the statistics, use either of the following methods.

To display IS-IS PDU statistics, enter the following command at any level of the CLI.

```
Brocade# show isis traffic
                Message Received      Message Sent
Level-1 Hellos      1029                115
Level-2 Hellos      1027                112
Level-1 LSP          6                   3
Level-2 LSP          6                   3
Level-1 CSNP         0                   0
Level-2 CSNP         0                   0
Level-1 PSNP         107                 0
Level-2 PSNP         107                 0
```

Syntax: show isis traffic

This display shows the following information.

TABLE 47 IS-IS traffic statistics

This field...	Displays...
Level-1 Hellos	The number of Level-1 hello PDUs sent and received by the Brocade device.
Level-2 Hellos	The number of Level-2 hello PDUs sent and received by the Brocade device.
Level-1 LSP	The number of Level-1 link-state PDUs sent and received by the Brocade device.

TABLE 47 IS-IS traffic statistics (Continued)

This field...	Displays...
Level-2 LSP	The number of Level-2 link-state PDUs sent and received by the Brocade device.
Level-1 CSNP	The number of Level-1 Complete Sequence Number PDUs (CSNPs) sent and received by the Brocade device.
Level-2 CSNP	The number of Level-2 CSNPs sent and received by the Brocade device.
Level-1 PSNP	The number of Level-1 Partial Sequence Number PDUs (PSNPs) sent and received by the Brocade device.
Level-2 PSNP	The number of Level-2 PSNPs sent and received by the Brocade device.

Displaying error statistics

To display IS-IS error statistics, enter the following command at any level of the CLI.

```
Brocade# show isis counts
Area Mismatch: 0
Max Area Mismatch: 0
System ID Length Mismatch: 0
LSP Sequence Number Skipped: 0
LSP Max Sequence Number Exceeded: 0
Level-1 Database Overload: 0
Level-2 Database Overload: 0
Our LSP Purged: 0
PDU Drop Count
CSNP Auth Failures : [L1: 100] [L2: 0]
PSNP Auth Failures : [L1: 100] [L2: 0]
HELLO Auth Failures : [L1: 100] [L2: 0]
Adjacency not found : [L1: 100] [L2: 200]
Adjacency Level Mismatch : [L1: 100] [L2: 200]
IS Level Mismatch : [L1: 100] [L2: 200]
Length Too Short : [L1: 100] [L2: 200]
Length Too Large : [L1: 100] [L2: 200]
Max Area Check Failure : [L1: 100] [L2: 200]
Zero Checksum : [L1: 100] [L2: 200]
Checksum Mismatch : [L1: 100] [L2: 200]
Invalid Length : [L1: 100] [L2: 200]
```

Syntax: show isis counts

This display shows the following information.

TABLE 48 IS-IS error statistics

This field...	Displays...
Area Mismatch	The number of times the Brocade device interface was unable to create a Level-1 adjacency with a neighbor because the Brocade device interface and the neighbor did not have any areas in common.
Max Area Mismatch	The number of times the Brocade device received a PDU whose value for maximum number of area addresses did not match the Brocade device's value for maximum number of area addresses.
System ID Length Mismatch	The number of times the Brocade device received a PDU whose ID field was a different length than the ID field length configured on the Brocade device.

TABLE 48 IS-IS error statistics (Continued)

This field...	Displays...
LSP Sequence Number Skipped	The number of times the Brocade device received an LSP with a sequence number that was more than 1 higher than the sequence number of the previous LSP received from the same neighbor.
LSP Max Sequence Number Exceeded	The number of times the Brocade device attempted to set an LSP sequence number to a value higher than the highest number in the CSNP sent by the Designated IS.
Level-1 Database Overload	The number of times the Level-1 state on the Brocade device changed from Waiting to On or from On to Waiting. <ul style="list-style-type: none"> • Waiting to On – This change can occur when the Brocade device recovers from a previous Level-1 LSP database overload and is again ready to receive new LSPs. • On to Waiting – This change can occur when the Brocade device's Level-1 LSP database is full and the Brocade device receives an additional LSP, for which there is no room.
Level-2 Database Overload	The number of times the Level-2 state on the Brocade device changed from Waiting to On or from On to Waiting. <ul style="list-style-type: none"> • The change from Waiting to On can occur when the Brocade device recovers from a previous Level-2 LSP database overload and is again ready to receive new LSPs. • The change from On to Waiting can occur when the Brocade device's Level-2 LSP database is full and the Brocade device receives an additional LSP, for which there is no room.
Our LSP Purged	The number of times the Brocade device received an LSP that was originated by the Brocade device itself and had age zero (aged out).
PDU Drop Count	
CSNP Auth Failures	The number of CSNP Authentication failures recorded for Level-1 and Level-2. This counter will only be displayed if it has a value greater than zero.
PSNP Auth Failures	The number of PSNP Authentication failures recorded for Level-1 and Level-2. This counter appears only if it has a value greater than 0.
HELLO Auth Failures	The number of HELLO Authentication failures recorded for Level-1 and Level-2. This counter will only be displayed if it has a value greater than zero.
Adjacency not found	The number of PDUs dropped at both Level-1 and Level-2 because there is no valid adjacency on the interface where they were received. This counter will only be displayed if it has a value greater than zero.
Adjacency Level Mismatch	The number of PDUs dropped at both Level-1 and Level-2 because the adjacency from which the PDU is received has a different level than the PDU level. This counter will only be displayed if it has a value greater than zero.
IS Level Mismatch	The number of PDUs dropped at both Level-1 and Level-2 because the IS-IS router level mismatches with the PDU level received. This counter will only be displayed if it has a value greater than zero.
Length Too Short	The number of PDUs dropped at both Level-1 and Level-2 because the received PDU length is less than the standard PDU header length. This counter will only be displayed if it has a value greater than zero.

TABLE 48 IS-IS error statistics (Continued)

This field...	Displays...
Length Too Long	The number of PDUs dropped at both Level-1 and Level-2 because the received PDU length is greater than the MTU of the link. This counter will only be displayed if it has a value greater than zero.
Max Area Check Failure	The number of PDUs dropped at both Level-1 and Level-2 because the received PDU has a maximum area count different than what is configured on this IS-IS router. This counter will only be displayed if it has a value greater than zero.
Zero Checksum	The number of PDUs dropped at both Level-1 and Level-2 because the received PDU has a zero checksum. This counter will only be displayed if it has a value greater than zero.
Checksum Mismatch	The number of PDUs dropped at both Level-1 and Level-2 because the received PDU has a checksum different than the computed checksum on the received PDU. This counter will only be displayed if it has a value greater than zero.
Invalid Length	The number of PDUs dropped at both Level-1 and Level-2 because the received PDU has a different length than what is advertised in the PDU header. This counter will only be displayed if it has a value greater than zero.

Displaying the IS-IS SPF Log

The `show isis spf-log` command displays the IS-IS Log, as shown in the following.

```
Brocade#show isis spf-log detail
ISIS Level-1 SPF Log
When      Duration  Nodes  Count  Last-Trigger-LSP      Trigger
0h1m57s   0         3      2      mu1.00-00              Adjacency Change
  Ipv4 Route updates: 4000 Ipv6 Route updates: 0
    First Trigger: 0h1m45s      Adj TLV Changed in LSP mu2.00-00
    Last Trigger : 0h1m45s      Adj TLV Changed in LSP mu1.00-00
0h2m3s    0         3      2      mu2.00-00              New LSP
  Ipv4 Route updates: 4000 Ipv6 Route updates: 0
    First Trigger: 1h42m45s     Adjacency mu2 is added
    Last Trigger : 1h42m45s     New LSP mu2.00-00 Appeared in database
0h2m9s    0         0      3      mu1.00-00              New LSP
  Ipv4 Route updates: 4000 Ipv6 Route updates: 0
    First Trigger: 1h42m45s     Interface ve 3 is Up
    Last Trigger : 1h42m45s     New LSP mu1.00-00 Appeared in database
1h5m12s   0ms      0      1      XMR16.00-00           ISTCT_SPF Computation
ISIS Level-2 SPF Log
When      Duration  Nodes  Count  Last-Trigger-LSP      Trigger
0h2m9s    0         0      3      mu1.00-00              New LSP
  Ipv4 Route updates: 4000 Ipv6 Route updates: 0
    First Trigger: 1h42m45s     Interface ve 3 is Up
    Last Trigger : 1h42m45s     New LSP mu1.00-00 Appeared in database
0h2m21s   0         0      6      mu1.00-00              New LSP
  Ipv4 Route updates: 4000 Ipv6 Route updates: 0
    First Trigger: 1h42m45s     Interface eth 1/1 is Up
    Last Trigger : 1h42m45s     New LSP mu1.00-00 Appeared in database
0h3m21s   0         0      3      mu1.00-00              Adjacency Change
  Ipv4 Route updates: 4000 Ipv6 Route updates: 0
    First Trigger: 1h42m45s     New LSP mu1.00-00 Appeared in database
    Last Trigger : 1h42m45s     Adj TLV is Changed in LSP mu1.00-00
```

Syntax: `show isis spf-log {detail | level-1 [detail] | level-2 [detail]}`

This display shows the following information.

TABLE 49 IS-IS SPF log information

This field...	Displays...
When	When (in hours: minutes : seconds) a full SPF calculation occurred. The last 20 occurrences are logged.
Duration	The time required to complete this SPF run, Elapsed time is normal clock time (not CPU time). Other options for this field are: <ul style="list-style-type: none"> Running – the SPF is still running and the duration will be updated after the SFP has run. Pending – the event is pending and another SPF will be run once the currently executing SPF has completed.
Nodes	The number of routers and pseudonodes (LANs) that make up the topology calculated in this SPF run.
Count	The number of events that triggered this SPF run. When a topology change has occurred, multiple link-state packets (LSPs) are received in a short time. Since a router waits about 5 seconds before running a full SPF run, it can include all new information. This count includes the number of events (such as receiving new LSPs) that occurred while the router was waiting the 5 second interval before running full SPF.

TABLE 49 IS-IS SPF log information (Continued)

This field...	Displays...
Last Trigger LSP	When a full SPF calculation is triggered by the arrival of a new LSP, the router stores the LSP ID. The LSP ID can provide a clue about the source of routing instability in an area. If multiple LSPs in a single level are causing SPF runs, only the LSP ID of the last received LSP is recorded.
Triggers	The reason that a full SPF calculations was triggered. Table 50 describes each of the triggers that can be displayed in this field.

For a description of the trigger types, refer to the following table.

TABLE 50 Trigger types and description

Trigger	Description
Alternate Route Check	PSPF deleted an IPv4 or IPv6 route. Full SPF must run to find the alternate route.
Route Change in L1 SPF Run	The L1 SPF run added or deleted an IPv4 or IPv6 route. The L2 SPF must run to accommodate this change.
LSP Purged	An LSP was purged. A full SPF calculation must process this change.
LSP Added	A new LSP has appeared in the database. A full SPF calculation is needed to process this new LSP.
Summary Address Change	A summary address configuration change has occurred.
Adjacency State Change	An adjacency was added or deleted.
Admin Distance Change	The administrative distance configuration has changed.
LSP Header Change	The LSP header (attached or overload bits) is changed.
IS Neighbor TLV Change	An IS neighbor TLV was added or deleted in an LSP.
Area Address TLV Change	The area address TLV changed.
Interface IP Address Change	The IP address configuration changed.
IP Address TLV Change	An IP address TLV changed in the LSP.
IPv6 Address TLV Change	An IPv6 address TLV changed in the LSP.
IS-IS Level Change	The IS-IS level configuration changed.
Interface Metric Change	The IS-IS interface metric configuration changed.
LSP Changed - PSPF Disabled	The LSP changed and PSPF is disabled.
LSP Overload Bit Change	The overload bit in the LSP header changed.
Interface State Change	The interface state changed to up or down.
Redist Prefix-List Change	The redistribution list configuration changed.
Redist Policy Change	The redistribution policy configuration changed.
Maximum Path Change	The IS-IS maximum path configuration changed.
IP Load Sharing Change	The IP load sharing configuration changed.
User Cleared IS-IS Route	The user cleared a specific IS-IS route.
User Cleared IS-IS Routes	The user cleared all IS-IS routes.
Neighbor NLPID Change	NLPID set is changed in received hellos.
ISIS Enable	IS-IS was enabled.

TABLE 50 Trigger types and description (Continued)

Trigger	Description
ISTCT_SPF Computation	The user issued the disable-incremental-stct-spf-opt command.
User Cleared IS-IS All	The user issued the clear isis all command.
Interface Config Change	ISIS was enabled or disabled on a port.
User Trigger	The user issued the clear isis spf-trigger command.
Recompute InterLeve Routes	The neighbor IS-type is changed either from L1 to L12 or L12 to L1
Exited Overload State	IS-IS exited from an overload condition.

By using the **detail** option with the **show isis spf-log** command, you can display more detail about the total number of IPv4 and IPv6 route updates and the reason for the first and last SPF events. Like SPF events, the incremental SPF events are displayed. However, for incremental SPF, only the first trigger is displayed, as the example below illustrates. In addition, the logging changes include the number of RTM updates that were carried out in each SPF or incremental SPF run.

To show details about the RTM updates, use the **show isis spf-log detail** command, as follows.

```
Brocade#show isis spf-log detail
ISIS Level-2 SPF Log
  When      Duration Nodes Count Last-Trigger-LSP      Trigger
2h38m9s    0ms        3      2      XMR14.00-00          Adjacency State Change
  Ipv4 Route updates: 4000 Ipv6 Route updates: 0
    First Trigger: 2h39m23s loopback 1 State Changed to Up
    Last Trigger : 2h38m14s Adjacency 0000.0000.0001 Added
2h41m17s  0ms        26      1      XMR14.00-00          IS Neighbor TLV Change
  Ipv4 Route updates: 1 Ipv6 Route updates: 0
    First Trigger: 2h41m2s ISPF Run
```

Syntax: `show isis spf-log detail`

Clearing the IS-IS SPF Log

You can clear the IS-IS SPF Log accumulated since the last software reload or last clearing of the SPF Log through use of the following command.

```
Brocade# isis clear spf-log
```

Syntax: `clear isis spf-log [level-1 | level-2]`

When the **level-1** or **level-2** options are used, only the log for the specified level is cleared. If not specified, both will be cleared.

Triggering the router to run SPF

You can trigger the router to run the SPF calculations through use of the following command.

```
Brocade# clear isis spf-trigger
```

Syntax: `clear isis spf-trigger [level-1 | level-2]`

When the **level-1** or **level-2** options are used, the SPF calculation is only triggered for the specified level. If not specified, the SPF calculation will be triggered for both.

Clearing IS-IS information

To clear the IS-IS information that the Brocade device has accumulated since the last time you cleared information or reloaded the software, use either of the following methods.

To clear IS-IS information, enter the **clear isis all** command at any level of the CLI except the User EXEC level.

```
Brocade# clear isis all
```

This command clears all the following:

- Neighbors (closes the Brocade device's adjacencies with its IS-IS neighbors)
- Routes
- PDU statistics
- Error statistics

Syntax: **clear isis all | counts | neighbor | route** [*ip-address subnet-mask | ip-address/prefix*] | **traffic**

The **all** parameter clears all the IS-IS information. Using this option is equivalent to entering separate commands with each of the other options.

The **counts** parameter clears the error statistics.

The **neighbor** parameter closes the Brocade device's adjacencies with its IS-IS neighbors and clears neighbor statistics.

The **route** [*ip-address subnet-mask | ip-address/prefix*] parameter clears the IS-IS route table or the specified matching route.

The **traffic** parameter clears the PDU statistics.

NOTE

The **traffic** option also clears the values displayed in the **show isis interface** command's Control Messages Sent and Control Messages Received fields.

The **neighbor** option of the **clear isis** command has been enhanced as described in the following:

Syntax: **clear isis neighbor all** [*ethernet slot/port | pos slot/port | tunnel tunnel-id | ve port-number*]

The **all** option directs the router to clear all neighbors on all IS-IS interfaces or clear all neighbors on an interface specified using one of the following options:

ethernet *slot/port* – clears all IS-IS neighbors on the specified Ethernet interface.

pos *slot/port* – clears all IS-IS neighbors on the specified POS interface.

ve *port-no* – clears all IS-IS neighbors on the specified virtual interface.

tunnel *tunnel-port* – clears all IS-IS neighbors on the specified tunnel interface.

Syntax: **clear isis neighbor sys-id** [*ethernet slot/port | pos slot/port | tunnel tunnel-id | ve port-number*]

Clearing a specified LSP from IS-IS database

This command directs the router to clear the IS-IS neighbor specified by the *sys-id* variable on all possible interfaces or to clear the IS-IS neighbor specified by the *sys-id* variable on an interface specified using one of the following options:

ethernet *slot/port* – clears the specified IS-IS neighbor on the specified Ethernet interface.

pos *slot/port* – clears the specified IS-IS neighbor on the specified POS interface.

ve *port-no* – clears the specified IS-IS neighbor on the specified virtual interface.

tunnel *tunnel-port* – clears the specified IS-IS neighbor on the specified tunnel interface.

Clearing a specified LSP from IS-IS database

A new command has been added that allows you to clear a specified LSP from the IS-IS database. Running this command causes the regeneration of the specified LSP where this LSP was originated by this router. For example, to clear the LSP named "XMR-1.00-00" from the IS-IS database, enter the following command.

```
Brocade# clear isis database XMR-1.00-00
```

Syntax: `clear isis database lsp-id [level-1 | level-2 | level-1-2]`

The *lsp-id* parameter displays summary information about a particular LSP. Specify an LSPID for which you want to display information in HHHH.HHHH.HHHH.HH-HH format, for example, 3333.3333.3333.00-00. You can also enter name.HH-HH, for example, XMR.00-00.

The **level-1** parameter limits you to clear level-1 LSPs only.

The **level-2** parameter limits you to clear level-2 LSPs only.

The **level-1-2** parameter clears level-1 and level-2 LSPs. This is the default.

NOTE

The **clear isis all** command should be used to regenerate the complete database.

RIP (IPv4)

Table 51 displays the individual Brocade devices and the RIP features they support.

TABLE 51 Supported Brocade RIP features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
RIP V1	Yes	Yes	Yes	Yes	Yes	Yes	Yes
RIP V1 compatible with V2	Yes	Yes	Yes	Yes	Yes	Yes	Yes
RIP Version 2 (the default)	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Administrative Distances	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Redistribution	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Route Learning and Advertising Parameters	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Changing the Route Loop Prevention Method	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Suppressing RIP Route Advertisement on a VRRP or VRRPE Backup Interface	Yes	Yes	Yes	Yes	Yes	Yes	Yes
RIP Timers	Yes	Yes	Yes	Yes	Yes	Yes	Yes
RIP Filters	Yes	Yes	Yes	Yes	Yes	Yes	Yes

Routing Information Protocol (RIP) is an IP route exchange protocol that uses a **distance vector** (a number representing distance) to measure the cost of a given route. The **cost** is a distance vector because the cost often is equivalent to the number of router hops between the Brocade device and the destination network.

A Brocade device can receive multiple paths to a destination. The software evaluates the paths, selects the best path, and saves the path in the IP route table as the route to the destination. Typically, the best path is the path with the fewest hops. A hop is another router through which packets must travel to reach the destination. If the Brocade device receives a RIP update from another router that contains a path with fewer hops than the path stored in the Brocade device's route table, the Brocade device replaces the older route with the newer one. The Brocade device then includes the new path in the updates it sends to other RIP routers, including Brocade devices.

RIP routers, including the Brocade device, also can modify a route's cost, generally by adding to it, to bias the selection of a route for a given destination. In this case, the actual number of router hops may be the same, but the route has an administratively higher cost and is thus less likely to be used than other, lower-cost routes.

A RIP route can have a maximum cost of 15. Any destination with a higher cost is considered unreachable. Although limiting to larger networks, the low maximum hop count prevents endless loops in the network.

A Brocade device supports the following RIP versions:

- Version 1
- V1 compatible with V2
- Version 2 (the default)

RIP parameters and defaults

The following tables list the RIP parameters, their default values, and where to find configuration information.

RIP global parameters

[Table 52](#) lists the global RIP parameters and their default values, and indicates where you can find configuration information.

TABLE 52 RIP global parameters

Parameter	Description	Default	See page...
RIP state	The global state of the protocol NOTE: You also must enable the protocol on individual interfaces. Globally enabling the protocol does not allow interfaces to send and receive RIP information. Refer to Table 53 on page 317.	Disabled	page 318
Administrative distance	The administrative distance is a numeric value assigned to each type of route on the Brocade device. When the Brocade device is selecting from among multiple routes (sometimes of different origins) to the same destination, the Brocade device compares the administrative distances of the routes and selects the route with the lowest administrative distance.	120	page 319

TABLE 52 RIP global parameters (Continued)

Parameter	Description	Default	See page...
Redistribution	RIP can redistribute routes from other routing protocols such as OSPF and BGP4 into RIP. A redistributed route is one that a router learns through another protocol, then distributes into RIP.	Disabled	page 319
Redistribution metric	RIP assigns a RIP metric (cost) to each external route redistributed from another routing protocol into RIP. This parameter applies to routes that are redistributed from other protocols into RIP.	1 (one)	page 321
Learning default routes	The Brocade device can learn default routes from its RIP neighbors. NOTE: You also can enable or disable this parameter on an individual interface basis. Refer to Table 53 on page 317.	Disabled	page 321
Advertising and learning with specific neighbors	The Brocade device learns and advertises RIP routes with all its neighbors by default. You can prevent the Brocade device from advertising routes to specific neighbors or learning routes from specific neighbors.	Learning and advertising permitted for all neighbors	page 322

RIP interface parameters

[Table 53](#) lists the interface-level RIP parameters and their default values, and indicates where you can find configuration information.

TABLE 53 RIP interface parameters

Parameter	Description	Default	See page...
RIP state and version	The state of the protocol and the version that is supported on the interface. The version can be one of the following: <ul style="list-style-type: none"> • Version 1 only • Version 2 only • Version 1, but also compatible with version 2 NOTE: : You also must enable RIP globally.	Disabled	page 318
Metric	A numeric cost the Brocade device adds to RIP routes learned on the interface. This parameter applies only to RIP routes.	1 (one)	page 319
Learning default routes	Locally overrides the global setting. Refer to Table 52 on page 316.	Disabled	page 321

TABLE 53 RIP interface parameters (Continued)

Parameter	Description	Default	See page...
Loop prevention	<p>The method a Brocade device uses to prevent routing loops caused by advertising a route on the same interface as the one on which the Brocade device learned the route.</p> <ul style="list-style-type: none"> • Split horizon – The Brocade device does not advertise a route on the same interface as the one on which the Brocade device learned the route. • Poison reverse – The Brocade device assigns a cost of 16 (“infinite” or “unreachable”) to a route before advertising it on the same interface as the one on which the Brocade device learned the route. 	<p>Split Horizon</p> <p>NOTE: Disabling poison reverse enables split horizon on the interface.</p>	page 322
Advertising and learning specific routes	You can control the routes that a Brocade device learns or advertises.	The Brocade device learns and advertises all RIP routes on all interfaces.	page 323

Configuring RIP parameters

Use the following procedures to configure RIP parameters on a system-wide and individual interface basis.

Enabling RIP

RIP is disabled by default. To enable RIP, you must enable it globally and also on individual interfaces on which you want to advertise RIP. Globally enabling the protocol does not enable it on individual interfaces. You can enable the protocol on physical interfaces as well as virtual routing interfaces. When you enable RIP on a port, you also must specify the version (version 1 only, version 2 only, or version 1 compatible with version 2).

To enable RIP globally, enter the following command.

```
Brocade(config)# router rip
```

Syntax: [no] router rip

After globally enabling the protocol, you must enable it on individual interfaces. To enable RIP on an interface, enter commands such as the following.

```
Brocade(config)# interface ethernet 1/1
Brocade(config-if-e1000-1/1)# ip rip v1-only
```

Syntax: [no] ip rip v1-only | v1-compatible-v2 | v2-only

Configuring metric parameters

By default, a Brocade device port increases the cost of a RIP route that is learned or advertised on the port by one. You can configure individual ports to add more than one to a learned or advertised route's cost.

Changing the cost of routes learned or advertised on a port

By default, a Brocade device port increases the cost of a RIP route that is learned on the port. The Brocade device increases the cost by adding one to the route's metric before storing the route.

You can change the amount that an individual port adds to the metric of RIP routes learned on the port.

To increase the metric for learned routes, enter commands such as the following.

```
Brocade(config-if-e1000-1/1)# ip rip metric-offset 5 in
```

The command configures port 1/1 to add 5 to the cost of each route it learns.

Syntax: [no] ip rip metric-offset *num* in | out

The number is 1-16. A route with a metric of 16 is unreachable. Use 16 only if you do not want the route to be used. In fact, you can prevent the Brocade device from using a specific port for routes learned through that port by setting its metric to 16.

In applies to routes the port learns from RIP neighbors.

Out applies to routes the port advertises to its RIP neighbors.

Changing the administrative distance

By default, the Brocade device assigns the default RIP administrative distance (120) to RIP routes. When comparing routes based on administrative distance, the Brocade device selects the route with the lower distance. You can change the administrative distance for RIP routes.

To change the administrative distance for RIP routes, enter a command such as the following.

```
Brocade(config-rip-router)# distance 140
```

The command changes the administrative distance to 140 for all RIP routes.

Syntax: [no] distance *number*

The number is 1 - 255.

Configuring redistribution

You can configure the Brocade device to redistribute routes learned through OSPF or BGP4, connected into RIP, or static routes. When you redistribute a route from one of these other protocols into RIP, the Brocade device can use RIP to advertise the route to its RIP neighbors.

To configure redistribution, perform the following tasks:

- Configure redistribution filters. You can configure filters to permit or deny redistribution for a route based on its origin (OSPF, BGP4, and so on), the destination network address, and the route's metric. You also can configure a filter to set the metric based on these criteria.
- Change the default redistribution metric (optional). The Brocade device assigns a RIP metric of one to each redistributed route by default. You can change the default metric to a value up to 16.

Configuring redistribution filters

RIP redistribution filters apply to all interfaces. Use route maps to define how you want to deny or permit redistribution.

NOTE

The default redistribution action is permit, even after you configure and apply redistribution filters to the virtual routing interface. If you want to tightly control redistribution, apply a filter to deny all routes as the last filter (the filter with the highest ID), then apply filters to allow specific routes.

A **route map** is a named set of match conditions and parameter settings that the Brocade device can use to modify route attributes and to control redistribution of the routes into other protocols. A route map consists of a sequence of up to 50 **instances**. The Brocade device evaluates a route according to a route map's instances in ascending numerical order. The route is first compared against instance 1, then against instance 2, and so on. If a match is found, the Brocade device stops evaluating the route against the route map instances.

Route maps can contain **match** statements and **set** statements. Each route map contains a "permit" or "deny" action for routes that match the match statements:

- If the route map contains a permit action, a route that matches a match statement is permitted; otherwise, the route is denied.
- If the route map contains a deny action, a route that matches a match statement is denied.
- If a route does not match any match statements in the route map, the route is denied. This is the default action. To change the default action, configure the last match statement in the last instance of the route map to "permit any any".
- If there is no match statement, the software considers the route to be a match.
- For route maps that contain address filters, AS-path filters, or community filters, if the action specified by a filter conflicts with the action specified by the route map, the route map's action takes precedence over the individual filter's action.

If the route map contains set statements, routes that are permitted by the route map's match statements are modified according to the set statements.

In RIP, the match statements are based on prefix lists and access control lists. Set statements are based on tag values and metric values.

To configure redistribution filters, enter a command such as the following.

```
Brocade(config-rip-router)#redistribute bgp route-map longroute
```

Syntax: [no] redistribute connected | bgp | ospf | static [metric value | route-map name]

The **connected** parameter applies redistribution to connected types.

The **bgp** parameter applies redistribution to BGP4 routes.

The **ospf** parameter applies redistribution to OSPF routes.

The **static** parameter applies redistribution to IP static routes.

The **metric value** parameter sets the RIP metric value 1- 15 that will be applied to the routes imported into RIP.

The **route-map name** parameter indicates the route map's name.

Matching based on RIP protocol type

The **match** option has been added to the **route-map** command that allows statically configured routes or the routes learned from the IGP protocol RIP.

To configure the route map to match to RIP, enter a command such as the following.

```
Brocade(config-routemap test)# match protocol rip
```

Syntax: [no] match protocol rip

Changing the default redistribution metric

When the Brocade device redistributes a route into RIP, the software assigns a RIP metric (cost) to the route. By default, the software assigns a metric of one to each route that is redistributed into RIP. You can increase the metric that the Brocade device assigns, up to 15.

To change the RIP metric the Brocade device assigns to redistributed routes, enter a command such as the following.

```
Brocade(config-rip-router)# default-metric 10
```

This command assigns a RIP metric of 10 to each route that is redistributed into RIP.

Syntax: [no] default-metric 1-15

Configuring route learning and advertising parameters

By default, a Brocade device learns routes from all its RIP neighbors and advertises RIP routes to those neighbors.

You can configure the following learning and advertising parameters:

- **Learning and advertising of RIP default routes** – The Brocade device learns and advertises RIP default routes by default. You can disable learning and advertising of default routes on a global or individual interface basis.
- **Learning of standard RIP routes** – By default, the Brocade device can learn RIP routes from all its RIP neighbors. You can configure RIP neighbor filters to explicitly permit or deny learning from specific neighbors.

Enabling learning of RIP default routes

By default, the Brocade device does not learn default RIP routes. You can enable learning of RIP default routes on a global or interface basis.

To enable learning of default RIP routes on a global basis, enter the following command.

```
Brocade(config-rip-router)# learn-default
```

Syntax: [no] learn-default

To enable learning of default RIP routes on an interface, enter commands such as the following.

```
Brocade(config)# interface ethernet 1/1
Brocade(config-if-e10000-1/1)# ip rip learn-default
```

Syntax: [no] ip rip learn-default

Configuring a RIP neighbor filter

By default, a Brocade device learns RIP routes from all its RIP neighbors. Neighbor filters allow you to specify the neighbor routers from which the Brocade device can receive RIP routes. Neighbor filters apply globally to all ports.

To configure a RIP neighbor filters, enter a command such as the following.

```
Brocade(config-rip-router)# neighbor 1 deny any
```

Syntax: [no] neighbor filter-num permit | deny source-ip-address | any

This command configures the Brocade device so that the device does not learn any RIP routes from any RIP neighbors.

The following commands configure the Brocade device to learn routes from all neighbors except 192.168.1.170. Once you define a RIP neighbor filter, the default action changes from learning all routes from all neighbors to denying all routes from all neighbors except the ones you explicitly permit. Thus, to deny learning from a specific neighbor but allow all other neighbors, you must add a filter that allows learning from all neighbors. Make sure you add the filter to permit all neighbors as the last filter (the one with the highest filter number). Otherwise, the software can match on the permit all filter before a filter that denies a specific neighbor, and learn routes from that neighbor.

```
Brocade(config-rip-router)# neighbor 2 deny 192.168.1.170
Brocade(config-rip-router)# neighbor 1024 permit any
```

Changing the route loop prevention method

RIP uses the following methods to prevent routing loops:

- **Split horizon** – The Brocade device does not advertise a route on the same interface as the one on which the Brocade device learned the route. This is the default.
- **Poison reverse** – The Brocade device assigns a cost of 16 (“infinite” or “unreachable”) to a route before advertising it on the same interface as the one on which the Brocade device learned the route.

These loop prevention methods are configurable on a global basis as well as on an individual interface basis. One of the methods is always in effect on an interface enabled for RIP. Thus, if you disable one method, the other method is enabled.

NOTE

These methods are in addition to RIP’s maximum valid route cost of 15.

To disable poison reverse and enable split horizon on a global basis, enter the following command.

```
Brocade(config-rip-router)# no poison-reverse
```

Syntax: [no] poison-reverse

To disable poison reverse and enable split horizon on an interface, enter commands such as the following.

```
Brocade(config-if-e10000-1/1)# no ip rip poison-reverse
```

Syntax: [no] ip rip poison-reverse

To disable split horizon and enable poison reverse on an interface, enter the command such as the following.

```
Brocade(config-if-e10000-1/1)# ip rip poison-reverse
```

You can configure the Brocade device to avoid routing loops by advertising local RIP routes with a cost of 16 (“infinite” or “unreachable”) when these routes go down.

```
Brocade(config-rip-router)# poison-local-routes
```

Syntax: [no] poison-local-routes

Suppressing RIP route advertisement on a VRRP or VRRPE backup interface

NOTE

This section applies only if you configure the Brocade device for Virtual Router Redundancy Protocol (VRRP) or VRRP Extended (VRRPE).

Normally, a VRRP or VRRPE Backup includes route information for the virtual IP address (the backed up interface) in RIP advertisements. As a result, other routers receive multiple paths for the backed up interface and might sometimes unsuccessfully use the path to the Backup rather than the path to the Master.

You can prevent the Backups from advertising route information for the backed up interface by enabling suppression of the advertisements.

To suppress RIP advertisements for the backed up interface in Router2, enter the following commands.

```
Brocade(config)# router rip
Brocade(config-rip-router)# use-vrrp-path
```

Syntax: [no] use-vrrp-path

The syntax is the same for VRRP and VRRPE.

Using prefix lists and route maps as route filters

You can configure prefix lists to permit or deny specific routes, then apply them globally or to individual interfaces and specify whether the lists apply to learned routes (in) or advertised routes (out).

You can configure route maps to permit or deny specific routes, then apply a route map to an interface, and specify whether the map applies to learned routes (in) or advertised routes (out).

NOTE

A route is defined by the destination’s IP address and network mask.

NOTE

By default, routes that do not match a prefix list are learned or advertised. To prevent a route from being learned or advertised, you must configure a prefix list to deny the route.

To configure a prefix list, enter commands such as the following.

```
Brocade(config)# ip prefix-list list1 permit 10.53.4.1 255.255.255.0
Brocade(config)# ip prefix-list list2 permit 10.53.5.1 255.255.255.0
Brocade(config)# ip prefix-list list3 permit 10.53.6.1 255.255.255.0
Brocade(config)# ip prefix-list list4 deny 10.53.7.1 255.255.255.0
```

The prefix lists permit routes to three networks, and deny the route to one network.

Since the default action is permit, all other routes (routes not explicitly permitted or denied by the filters) can be learned or advertised.

Syntax: `[no] ip prefix-list name permit | deny source-ip-address | any source-mask | any`

To apply a prefix list at the global level of RIP, enter commands such as the following.

```
Brocade(config-rip-router)# prefix-list list1 in
```

Syntax: `[no] prefix-list name in | out`

To apply prefix lists to a RIP interface, enter commands such as the following.

```
Brocade(config-if-e1000-1/2)# ip rip prefix-list list2 in
Brocade(config-if-e1000-1/2)# ip rip prefix-list list3 out
```

Syntax: `[no] ip rip prefix-list name in | out`

In applies the prefix list to routes the Brocade device learns from its neighbor on the interface.

Out applies the prefix list to routes the Brocade device advertises to its neighbor on the interface.

The commands apply RIP list2 route filters to all routes learned from the RIP neighbor on port 1/2 and applies the lists to all routes advertised on port 1/2.

To apply a route map to a RIP interface, enter commands such as the following.

```
Brocade(config-if-e1000-1/2)# ip rip route-map map1 in
```

Syntax: `[no] ip rip route-map name in | out`

The **route-map name** can be a prefix list or an ACL. Setting this command can change the metric.

In applies the route map to routes the Brocade device learns from its neighbor on the interface.

Out applies the route map to routes the Brocade device advertises to its neighbor on the interface.

The commands apply route map map1 as route filters to routes learned from the RIP neighbor on port 1/2.

Setting RIP timers

You can set basic update timers for the RIP protocol. The protocol must be enabled in order to set the timers.

To set the timers.

```
Brocade(config) router rip
Brocade(config-rip-router)# timers 50
```

Syntax: `[no] timers seconds`

Possible values: 3 - 21845 seconds

Default: 30 seconds

The command specifies how often RIP update messages are sent.

Displaying RIP Information

To display RIP filters, enter the following command at any CLI level.

```
Brocade# show ip rip
RIP Summary
Default port 520
Administrative distance is 120
Updates every 30 seconds, expire after 180
Holddown lasts 180 seconds, garbage collect after 120
Last broadcast 2, Next Update 26
Need trigger update 0, Next trigger broadcast 3
Minimum update interval 25, Max update Offset 5
Split horizon is on; poison reverse is off
Import metric 1
Prefix List, Inbound : Not set
Prefix List, Outbound : Not set
Route-map, Inbound : Not set
Route-map, Outbound : Not set
Redistribute:
  No Neighbors are configured in RIP Neighbor Filter Table
```

Syntax: `show ip rip`

See [Table 54](#) on page 326 for display information.

Displaying RIP Information

To display RIP filters for a specific interface, enter the following command.

```
Brocade#show ip rip interface
Interface eth 1/20
Rip Mode : Version 2 Running: TRUE
Route summarization disabled
Split horizon is on; poison reverse is off
Default routes not accepted
Metric-offset, Inbound 1
Metric-offset, Outbound 0
Prefix List, Inbound : Not set
    Prefix List, Outbound : Not set
Route-map, Inbound : Not set
Interface ve 10
RIP Mode : Compatible Running: TRUE
Route summarization disabled
Split horizon is off; poison reverse is on
Default routes not accepted
Metric-offset, Inbound 1
Metric-offset, Outbound 0
Prefix List, Inbound : Not set
    Prefix List, Outbound : Not set
Route-map, Inbound : Not set
Route-map, Outbound : Not set
Interface ve 20
RIP Mode : Version1 Running: TRUE
Route summarization enabled
Split horizon is off; poison reverse is on
Default routes not accepted
Metric-offset, Inbound 1
Metric-offset, Outbound 0
Prefix List, Inbound : Not set
    Prefix List, Outbound : Not set
Route-map, Inbound : Not set
Route-map, Outbound : Not set
```

Syntax: `show ip rip interface ifName`

This display shows the following information.

TABLE 54 CLI display of neighbor filter information

This field...	Displays...
RIP Summary area	Shows the current configuration of RIP on the device.
Statis metric	Shows the static metric configuration. “.not defined” means the route map has not been distributed.
OSPF metric	Shows what OSPF route map has been applied.
Neighbor Filter Table area	
Index	The filter number. You assign this number when you configure the filter.

TABLE 54 CLI display of neighbor filter information (Continued)

This field...	Displays...
Action	<p>The action the Brocade device takes for RIP route packets to or from the specified neighbor:</p> <ul style="list-style-type: none"> deny – If the filter is applied to an interface’s outbound filter group, the filter prevents the Brocade device from advertising RIP routes to the specified neighbor on that interface. If the filter is applied to an interface’s inbound filter group, the filter prevents the Brocade device from receiving RIP updates from the specified neighbor. permit – If the filter is applied to an interface’s outbound filter group, the filter allows the Brocade device to advertise RIP routes to the specified neighbor on that interface. If the filter is applied to an interface’s inbound filter group, the filter allows the Brocade device to receive RIP updates from the specified neighbor.
Neighbor IP Address	The IP address of the RIP neighbor.

To display RIP route information, enter the following command.

```
Brocade#show ip rip route
RIP Routing Table - 35 entries:
 10.0.0.0/8, from 10.1.0.2, ve 10 (2)
     RIP, metric 4, tag 0, timers: aging 17 holddown -163
 10.0.0.0/8, from 10.1.0.2, ve 10 (6)
     RIP, metric 16, tag 0, timers: holddown 19 garbage 19
 10.1.1.0/24, from 10.0.0.0, eth 1/20 (34)
     MCAST, metric 1, tag 0, timers: none
 10.1.0.0/24, from 10.0.0.0, ve 10 (1)
     MCAST, metric 1, tag 0, timers: none
```

Syntax: show ip rip route

To display current running configuration for interface 1/20, enter the following command.

```
Brocade#show running-config interface ethernet 1/20
interface ethernet 1/20
 enable
 ip ospf area 0
 ip ospf priority 0
 ip rip v2-only
 ip address 10.1.1.2/24
 ipv6 address 2000::1/32
 ipv6 enable
!
```

To display current running configuration for ve 10, enter the following command.

```
Brocade#show running-config interface ve 10
interface ve 10
 bfd interval 50 min-rx 50 multiplier 3
 ip ospf area 2
 ip rip v1-compatible-v2
 ip rip poison-reverse
 ip address 10.1.0.1/24
 ipv6 address 2001:db8:1::14/64
!
```

Displaying RIP Information

To display current running configuration for ve 20, enter the following command.

```
Brocade#show running-config interface ve 20
interface ve 20
 ip ospf area 1
 ip rip v1-only
 ip rip poison-reverse
 ip address 10.2.0.1/24
!
```

Policy-Based Routing (IPv4)

Table 55 displays the individual Brocade devices and the Policy-Based Routing features they support.

TABLE 55 Supported Brocade Policy-Based routing features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
Policy-Based Routing (PBR)	Yes	Yes	No	Yes	Yes	Yes	Yes
Policy based routing with the preserve VLAN option	Yes	Yes	No	No	No	No	No
Next Hop VLAN Flooding	Yes	Yes	No	No	No	No	No
Policy-Based Routing over a GRE Tunnel	Yes	Yes	No	Yes	Yes	Yes	Yes
Policy-Based Routing over a GRE interface	Yes	Yes	No	Yes	Yes	Yes	Yes
Setting the Output Interface to the Null Interface	Yes	Yes	No	Yes	Yes	Yes	Yes
Selectively Applying Normal Routing to Packets	Yes	Yes	No	Yes	Yes	Yes	Yes
Configure the Route Map	Yes	Yes	No	Yes	Yes	Yes	Yes
Policy-based routing support for preserve VLAN	Yes	Yes	No	No	No	No	No

Policy-Based Routing (PBR) allows you to use ACLs and route maps to selectively modify and route IP packets in hardware. The ACLs classify the traffic. Route maps that match on the ACLs set routing attributes for the traffic.

A PBR policy specifies the next hop for traffic that matches the policy. Using standard ACLs with PBR, you can route IP packets based on their source IP address. With extended ACLs, you can route IP packets based on all of the match criteria in the extended ACL.

You can configure the Brocade device to perform the following types of PBR based on a packet's Layer 3 and Layer 4 information:

- Select the next-hop gateway.
- Send the packet to the null interface (null0).

When a PBR policy has multiple next hops to a destination, PBR selects the first live next hop specified in the policy that is up. If none of the policy's direct routes or next hops is available, the packets are forwarded as per the routing table.

Configuration considerations

The configuration considerations are as follows:

- A PBR policy on an interface takes precedence over a global PBR policy.
- You cannot apply PBR on a port if that port already has inbound ACLs, inbound ACL-based rate limiting, or TOS-based QoS.
- The number of route maps that you can define is limited by the system memory. When a route map is used in a PBR policy, the PBR policy uses up to 200 instances of a Layer 3 route map, up to 5 ACLs in a matching policy of each route map instance.

The following two conditions can cause more than 200 Layer 3 route-map instances to be used.

1. If one or more of first 200 instances have deny clause.
2. If the access-list used in the first 200 instances is not configured.

- ACLs with the **log** option configured should not be used for PBR purposes.
- PBR ignores implicit **deny ip any any** ACL entries, to ensure that for route maps that use multiple ACLs, the traffic is compared to all the ACLs. However, if an explicit **deny ip any any** is configured, traffic matching this clause will be routed normally using Layer 3 paths and will not be compared to any ACL clauses that follow this clause.
- PBR always selects the first next hop from the next hop list that is up. If a PBR policy's next hop goes down, the policy uses another next hop if available. If no next hops are available, the device routes the traffic in the normal way.
- Any changes to route maps or ACL definitions will be effective immediately for the interfaces where the PBR routemap is applied. There is no need to rebind. However, rebinding is required if a change is made to an IPv6 ACL.
- If a PBR policy is applied globally, inbound ACLs, inbound ACL-based rate-limiting or TOS-based QoS cannot be applied to any port on the device.
- If an IPv4 option packet matches a **deny** ACL filter with the **option** keyword, the packet will be forwarded based on Layer-3 destination. If the **ignore-options** command is configured on the incoming physical port, the packet will be forwarded based on its Layer-3 destination in hardware, otherwise the packet will be sent to the CPU for software forwarding.

- If an IPv4 option packet matches a **permit** ACL filter with the option keyword, it is hardware-forwarded based on its PBR next-hop (if available). If no PBR next-hop is available, the packet is either software or hardware-forwarded (depending on whether **ignore-options** is configured), based on an IP forwarding decision.
- Policy Based Routing (PBR) currently does not support the IPv4 and IPv6 features for changing the MTU.
- Where the next hop is a GRE tunnel:
 - Packets that are larger than the tunnel's MTU are subject to IP fragmentation and PBR processing of the fragmented packets.
 - For route changes of the tunnel destination, the appropriate information is automatically propagated to the PBR feature. Depending on the configuration of the route map, a route change can change the active next hop of the PBR if it leads to the active next hop going down which triggers a new next hop selection process.
- PBR route-map cannot be applied on VPLS, VLL, or VLL-Local endpoints and vice-versa.
- PBR policies are not supported on Layer-3 VPNs.
- In a PBR route-map definition, if even one route-map instance contains a “set next-hop-flood-vlan” statement, all instances of that route-map will apply to both routed and switched traffic.
- Flooding traffic to a POS interface is not allowed. It can only be flooded to Ethernet ports on the VLAN, including the default VLAN.
- When an incoming port is POS then the SA of the outgoing flooded packets will be 0.
- IPv6 PBR to flood VLAN is not supported for switched traffic for the Brocade NetIron CES and Brocade NetIron CER.

Configuring a PBR policy

To configure PBR, you define the policies using IP ACLs and route maps, then enable PBR globally or on individual interfaces. The device programs the ACLs into the Layer 4 CAM on the interfaces and routes traffic that matches the ACLs according to the instructions in the route maps.

To configure a PBR policy:

- Configure ACLs that contain the source IP addresses for the IP traffic you want to route using PBR.
- Configure a route map that matches on the ACLs and sets the route information.
- Apply the route map to an interface.

Configure the route map

After you configure the ACLs, you can configure a PBR route map that matches based on the ACLs and sets routing information in the IP traffic.

NOTE

The “match” and “set” statements described in this section are the only route-map statements supported for PBR. Other route-map statements described in the documentation apply only to the protocols with which they are described.

NOTE

If none of the clauses of an IPv4 PBR routemap definition contains both 'match' and 'set' statements together, PBR doesn't work and normal routing takes place.

To configure a PBR route map, enter commands such as the following:

```
Brocade(config)# route-map test-route permit 99
Brocade(config-routemap test-route)# match ip address 99
Brocade(config-routemap test-route)# set ip next-hop 192.168.2.1
Brocade(config-routemap test-route)# exit
```

The commands in this example configure an entry in a route map named “test-route”. The **match** statement matches on IP information in ACL 99. The **set** statement changes the next-hop IP address for packets that match to 192.168.2.1.

Syntax: [no] route-map *map-name* permit | deny *num*

The *map-name* is a string of characters that names the map. Map names can be up to 32 characters in length. You can define an unlimited number of route maps on the Brocade device, as long as system memory is available.

The **permit | deny** parameter specifies the action the Brocade device will take if a route matches a match statement:

- If you specify a **deny** routemap instance, it is ignored and not programmed in Layer- 4 CAM.
- If you specify **permit**, the Brocade device applies the match and set statements associated with this route map instance.

The *num* parameter specifies the instance of the route map you are defining. Routes are compared to the instances in ascending numerical order. For example, a route is compared to instance 1, then instance 2, and so on.

PBR uses up to 200 Layer 3 route map instances for comparison and ignores the rest.

Syntax: [no] match ip address *ACL-num-or-name*

The *ACL-num-or-name* parameter specifies a standard or extended ACL number or name. Multiple ACLs may be added when separated by spaces.

Setting the next hop

Traffic that matches a match statement in the route map is forwarded as defined by **set** commands. Multiple **set** commands can be configured and when a match condition is met, the device works sequentially through the list of **set** commands until it finds the first “next hop” that is operational and uses it. If that “next hop” goes down, the next hop as defined in a **set** command is chosen and if all next hop interfaces in the list are down, the packet is routed as determined in the IP Route Table. If a next hop interface that was down comes back up, the next hop selection process begins again and restarts its selection process from the top of the list.

Options for setting the next hop are described in the following:

- Setting the Next Hop to an IP Address
- Setting the Next Hop to a GRE Tunnel
- Setting the Next Hop to a GRE Interface
- Setting the Next Hop to a Null Interface
- Setting the Next Hop to an LSP

- Setting the Next Hop to VLAN Flooding

Setting the next hop to an IP address

You can set the next hop to an IP address as shown in the following:

```
Brocade(config)# route-map net10web permit 101
Brocade(config-routemap net10web)# match ip address 101
Brocade(config-routemap net10web)# set ip next-hop 10.1.1.1
```

Syntax: [no] set ip next-hop *ip-address*

The *ip-address* variable specifies the IP address of the next-hop IP address for traffic that matches a match statement in the route map.

NOTE

If the IP address used in this command is the IP address of a configured GRE tunnel, the configuration will still be accepted but the next-hop selection will never choose this next-hop so it will not become active. If you want to set the next hop using a GRE tunnel, you must use the **set next-hop-ip-tunnel** command.

Setting the next hop to a GRE tunnel

You can set the next hop to a GRE Tunnel as shown in the following:

```
Brocade(config)# interface tunnel 1
Brocade(config-tnif-1)# tunnel mode gre ip
Brocade(config-tnif-1)# tunnel source ethernet 1/2
Brocade(config-tnif-1)# tunnel destination 10.0.8.108
Brocade(config-tnif-1)# ip address 10.10.3.2/24
Brocade(config-tnif-1)# exit
```

Syntax: [no] set next-hop-ip-tunnel *tunnel-id*

This command sets the next hop to the GRE tunnel identified by the *tunnel-id* variable. Only GRE tunnels are supported by this command. The system will verify if a valid GRE tunnel with the specified *tunnel-id* variable exists. If the *tunnel-id* variable points to a tunnel other than a GRE tunnel or to a non-existent tunnel, the configuration will be rejected.

Values for the *tunnel-id* variable can be from 1 to the maximum number of allowed Tunnel IDs in the system. The maximum number of Tunnel IDs allowed is set using the **system-max ip-tunnels** command.

For additional examples using this command, refer to [“Setting the next hop to a GRE tunnel”](#) on page 337.

Setting the next hop to a GRE physical interface

NOTE

This command is recommended only for use on the BR-MLX 24x10G-DM module.

You can set the next hop to a GRE physical interface as shown in the following:

Syntax: [no] set ip next-hop *physical ip interface*

This command sets the next hop to the GRE interface identified by the *physical ip interface* variable. Only GRE physical interfaces are supported by this command. The system will verify if a valid GRE interface with the specified *physical ip interface* variable exists.

Setting the next hop to a Null0 interface

NOTE

This feature is not currently supported on the Brocade NetIron CES or Brocade NetIron CER.

Sending traffic to a Null0 Interface drops the traffic. You can set the next hop to a Null0 interface as shown in the following.

```
Brocade(config)# route-map file-13 permit 56
Brocade(config-routemap file-13)# match ip address 56
Brocade(config-routemap file-13)# set interface null0
```

Syntax: [no] set interface null0

Setting the next hop to an LSP

You can set the next hop to an LSP as shown in the following.

```
Brocade(config)# route-map pbrmap permit 10
Brocade(config-routemap pbrmap)# match ip address 101
Brocade(config-routemap pbrmap)# set next-hop-lsp t3
```

Syntax: [no] set next-hop-lsp *lsp-name*

This command allows you to forward matching traffic to an RSVP -signalled LSP that is specified by the *lsp-name* variable.

Setting next hop VLAN flooding

This feature supports the ability to use PBR to forward traffic to a VLAN through use of the “set” command. Using this feature, matched traffic can be flooded on all ports of the VLAN except the incoming physical port. Any PBR policy that contains the **set next-flood-vlan** statement applies to both routed and switched traffic. This means that if any instance in a PBR route-map contains the **set next-flood-vlan** statement, all instances of that route-map will be applied to both routed and switched traffic.

NOTE

Always use Transparent VLAN Flooding for the VLAN that is specified in the **set next-flood-vlan** configuration.

This feature supports IPv6 traffic. The behavioral differences when deployed on a Brocade NetIron CES or Brocade NetIron CER as compared to when deployed on a Brocade MLX Series or Brocade NetIron XMR are described in [Table 56](#).

The following example floods all traffic matched from ACL 101 on all ports of VLAN 10 except the incoming physical port.

```
Brocade(config)# access-list 101 permit ip any any
Brocade(config)# route-map calea permit 10
Brocade(config-routemap calea)# match ip address 101
Brocade(config-routemap calea)# set next-flood-vlan 10
Brocade(config-routemap calea)# exit
```

Syntax: [no] set next-flood-vlan *vlan-id* [**outgoing da** *mac-address*]

If the VLAN specified by the *vlan-id* variable is not configured, the PBR route-map set statement will fall through to the next configured set statement. If no valid next-hop is available, the packet is forwarded as per L2/L3 forwarding decision. If the VLAN specified by the *vlan-id* variable has no valid outgoing ports, (such as when all ports in the VLAN are down or when the VLAN is empty) matching packets will be dropped.

The `no set next-hop-flood-vlan vlan-id outgoing-da mac-address` command deletes only the `outgoing-da` option from the set statement. It does not delete the set statement itself. To delete the set statement, the user would have to specify the `no set next-hop-flood-vlan vlan-id` command.

In the case of traffic incoming on MPLS uplink, PBR to VLAN flooding is only supported for IPv4 traffic, and not for MPLS traffic.

TABLE 56 Behavioral differences of VLAN flooding per platform

Scenario	Brocade Netron CES/Brocade Netron CER	Brocade MLX Series/Brocade Netron XMR
Support for Switched Traffic	Not Supported	Supported
If the <code>outgoing-da</code> option is not set	Packet floods with original SA/DA	Switched traffic: Packet floods with original SA/DA. Routed traffic (L3 CAM miss): Packet floods with original SA/DA. Routed traffic (L3 CAM hit): Packet floods with original SA and DA as next-hop MAC.
If the <code>outgoing-da</code> option is set	DA: Configured <code>outgoing-da</code> SA: Outgoing port MAC	DA: Configured <code>outgoing-da</code> SA: Original SA
In <code>set next-hop-flood-vlan</code> , if the VLANID is configured but no ports are added or all ports are down	Go to next set statement.	Drop matching packets.

Enabling PBR

After you configure the ACLs and route map entries, you can enable PBR globally, on individual interfaces, or both as described in this section. To enable PBR, you apply a route map you have configured for PBR globally or locally.

Enabling PBR globally

To enable PBR globally, enter a command such as the following at the global CONFIG level.

```
Brocade(config)# ip policy route-map test-route
```

This command applies a route map named “test-route” to all interfaces on the device for PBR.

Syntax: `[no] ip policy route-map map-name`

Enabling PBR locally

To enable PBR locally, enter commands such as the following.

```
Brocade(config)# interface ve 1
Brocade(config-vif-1)# ip policy route-map test-route
```

The commands in this example change the CLI to the Interface level for virtual interface 1, then apply the “test-route” route map to the interface. You can apply a PBR route map to Ethernet ports, or virtual interfaces.

Syntax: `[no] ip policy route-map map-name`

Enter the name of the route map you want to use for the route-map `map-name` parameter.

Configuration examples

This section presents configuration examples for:

- “Basic example” on page 336
- “Setting the next hop” on page 336
- “Setting the output interface to the null interface” on page 338
- “Selectively applying normal routing to packets” on page 338

Basic example

The following commands configure and apply a PBR policy that routes HTTP traffic received on virtual routing interface 1 from the 10.10.10.x/24 network to 10.5.5.x/24 through next-hop IP address 10.1.1.1 or, if 10.1.1.x is unavailable, through 10.2.2.1.

```
Brocade(config)# access-list 101 permit tcp 10.10.10.0 10.0.0.255 eq http
10.5.5.0 10.0.0.255
Brocade(config)# route-map net10web permit 101
Brocade(config-route-map net10web)# match ip address 101
Brocade(config-route-map net10web)# set ip next-hop 10.1.1.1
Brocade(config-route-map net10web)# set ip next-hop 10.2.2.1
Brocade(config-route-map net10web)# exit
Brocade(config)# vlan 10
Brocade(config-vlan-10)# tagged ethernet 1/1 to 1/4

Brocade(config-vlan-10)# router-interface ve 1
Brocade(config)# interface ve 1
```

Setting the next hop

The following commands configure the Brocade device to apply PBR to traffic from IP subnets 10.157.23.x, 10.157.24.x, and 10.157.25.x. In this example, route maps specify the next-hop gateway for packets from each of these subnets:

- Packets from 10.157.23.x are sent to 192.168.2.1.
- Packets from 10.157.24.x are sent to 192.168.2.2.
- Packets from 10.157.25.x are sent to 192.168.2.3.

The following commands configure three standard ACLs. Each ACL contains one of the ACLs listed above. Make sure you specify **permit** instead of deny in the ACLs, so that the Brocade device permits the traffic that matches the ACLs to be further evaluated by the route map. If you specify **deny**, the traffic that matches the **deny** statements are routed normally. Notice that these ACLs specify **any** for the destination address.

```
Brocade(config)# access-list 50 permit 10.157.23.0 10.0.0.255
Brocade(config)# access-list 51 permit 10.157.24.0 10.0.0.255
Brocade(config)# access-list 52 permit 10.157.25.0 10.0.0.255
```

The following commands set an RSVP-signalled LSP as the next hop.

```
Brocade(config)# access-list 101 permit tcp any any
Brocade(config)# access-list 101 deny ip any any
Brocade(config)# router mpls
Brocade(config-mpls)# mpls-interface ethernet 6/1
Brocade(config-mpls)# lsp t3
```

```

Brocade(config-mpls-lsp-t3)# to 10.1.1.1
Brocade(config-mpls-lsp-t3)# enable
Brocade(config)# route-map pbrmap permit 10
Brocade(config-routemap pbrmap)# match ip address 101
Brocade(config-routemap pbrmap)# set next-hop-lsp t3

```

The following commands configure three entries in a route map called “test-route”. The first entry (permit 50) matches on the IP address information in ACL 50 above. For IP traffic from subnet 10.157.23.0/24, this route map entry sets the next-hop IP address to 192.168.2.1.

```

Brocade(config)# route-map test-route permit 50
Brocade(config-routemap test-route)# match ip address 50
Brocade(config-routemap test-route)# set ip next-hop 192.168.2.1
Brocade(config-routemap test-route)# exit

```

The following commands configure the second entry in the route map. This entry (permit 51) matches on the IP address information in ACL 51 above. For IP traffic from subnet 10.157.24.0/24, this route map entry sets the next-hop IP address to 192.168.2.2.

```

Brocade(config)# route-map test-route permit 51
Brocade(config-routemap test-route)# match ip address 51
Brocade(config-routemap test-route)# set ip next-hop 192.168.2.2
Brocade(config-routemap test-route)# exit

```

The following commands configure the third entry in the test-route route map. This entry (permit 52) matches on the IP address information in ACL 52 above. For IP traffic from subnet 10.157.25.0/24, this route map entry sets the next-hop IP address to 192.168.2.3.

```

Brocade(config)# route-map test-route permit 52
Brocade(config-routemap test-route)# match ip address 52
Brocade(config-routemap test-route)# set ip next-hop 192.168.2.3
Brocade(config-routemap test-route)# exit

```

The following command enables PBR by globally applying the test-route route map to all interfaces.

```

Brocade(config)# ip policy route-map test-route

```

Alternatively, you can enable PBR on specific interfaces, as shown in the following example. The commands in this example configure IP addresses in the three source subnets identified in ACLs 50, 51, and 52, then apply route map test-route the interface.

```

Brocade(config)# interface ve 1
Brocade(config-vif-1)# ip address 10.157.23.1/24
Brocade(config-vif-1)# ip address 10.157.24.1/24
Brocade(config-vif-1)# ip address 10.157.25.1/24
Brocade(config-vif-1)# ip policy route-map test-route

```

Setting the next hop to a GRE tunnel

This section describes how to configure a Brocade device to apply PBR to traffic on port 1/4 from subnets 10.12.13.x and 10.15.16.x. Packets from these subnets are then sent to a next hop that is a GRE tunnel. In this configuration, two GRE tunnels are configured to provide redundancy. If the first tunnel in the configuration (Tunnel 1) is down, traffic will be routed to the second tunnel (Tunnel 2). In situations where both tunnels are down, traffic from the subnets will be routed as directed from the IP route table.

```

Brocade(config)# interface ethernet 1/4
Brocade(config-if-e1000-1/1)# ip policy route-map test1
Brocade(config-if-e1000-1/1)# exit

```

Configuration examples

```
Brocade(config)# interface tunnel 1
Brocade(config-tnif-1)# tunnel mode gre ip
Brocade(config-tnif-1)# tunnel source ethernet 1/2
Brocade(config-tnif-1)# tunnel destination 10.0.8.108
Brocade(config-tnif-1)# ip address 10.10.3.2/24
Brocade(config-tnif-1)# exit

Brocade(config)# interface tunnel 2
Brocade(config-tnif-2)# tunnel mode gre ip
Brocade(config-tnif-2)# tunnel source ethernet 2/2
Brocade(config-tnif-2)# tunnel destination 10.0.9.108
Brocade(config-tnif-2)# ip address 10.10.4.2/24
Brocade(config-tnif-2)# exit
Brocade(config)# access-list 99 permit 10.12.13.0 10.0.0.255
Brocade(config)# access-list 99 permit 10.15.16.0 10.0.0.255

Brocade(config)# route-map test1 permit 5
Brocade(config-routemap test1)# match ip address 99
Brocade(config-routemap test1)# set next-hop-ip-tunnel 1
Brocade(config-routemap test1)# set next-hop-ip-tunnel 2
```

Setting the output interface to the null interface

The following commands configure a PBR to send all traffic from 10.168.1.204 to the null interface, thus dropping the traffic instead of forwarding it.

```
Brocade(config)# access-list 56 permit 10.168.1.204 0.0.0.0
```

The following commands configure an entry in a route map called “file-13”. The first entry (permit 56) matches on the IP address information in ACL 56 above. For IP traffic from the host 10.168.1.204/32, this route map entry sends the traffic to the null interface instead of forwarding it, thus sparing the rest of the network the unwanted traffic.

```
Brocade(config)# route-map file-13 permit 56
Brocade(config-routemap file-13)# match ip address 56
Brocade(config-routemap file-13)# set interface null0
Brocade(config-routemap file-13)# exit
```

The following command enables PBR by globally applying the route map to all interfaces.

```
Brocade(config)# ip policy route-map file-13
```

Alternatively, you can enable the PBR on specific interfaces, as shown in the following example. The commands in this example configure IP addresses in the source subnet identified in ACL 56, then apply route map file-13 to the interface.

```
Brocade(config)# interface ethernet 3/11
Brocade(config-if-e10000-3/11)# ip address 192.168.1.204/32
Brocade(config-if-e10000-3/11)# ip policy route-map file-13
```

Selectively applying normal routing to packets

This example demonstrates how to configure PBR to route all TCP traffic from a host normally while routing all other traffic from the same host through the PBR next hop. In this example, the IP address of the host is 192.168.2.2.

To route TCP traffic from 192.168.2.2 normally, configure a **deny** ACL clause and define it as a **permit route-map** entry as shown in the following.

```

Brocade(config)# access-list 112 deny tcp host 192.168.2.2 any
Brocade(config)# access-list 112 permit ip host 192.168.2.2 any
Brocade(config)# route-map mymap2 permit 10
Brocade(config-routemap mymap2)# match ip address 112
Brocade(config-routemap mymap2)# set ip next-hop 10.1.1.2

```

Applying IPv6 PBR next hop VLAN flooding

This example demonstrates how to configure matched traffic to be flooded on all ports of the VLAN except the incoming physical port.

ACL configuration

```

Brocade(config)#ipv6 access-list ipv6acl-3
Brocade(config-ipv6-access-list ipv6acl-3)#permit ipv6 2001:db8:1::/64
2001:db8:2::/64
Brocade(config-ipv6-access-list ipv6acl-3)#deny ipv6 any 2001:db8:2::/64
Brocade(config-ipv6-access-list ipv6acl-3)#exit

```

Route-map configuration

```

Brocade(config)#route-map pbr-2 permit 1
Brocade(config-routemap pbr-2)#match ipv6 address ipv6acl-3
Brocade(config-routemap pbr-2)#set next-hop-flood-vlan 30
Brocade(config-routemap pbr-2)#set next-hop-flood-vlan 40 outgoing-da
0000.1234.5678
Brocade(config-routemap pbr-2)#set next-hop-flood-vlan 20
Brocade(config-routemap pbr-2)#set ipv6 next-hop 2001:db8::2

```

Apply route-map

```

Brocade(config)#interface ethernet 1/3
Brocade(config-if-e1000-1/3)#ipv6 policy route-map pbr-2
Brocade(config)#interface ve 10
Brocade(config-vif-10)#ipv6 policy route-map pbr-2

```

LAG formation

When a LAG is formed, all ports must have the same PBR configuration before deployment, during deployment the configuration on the primary port is replicated to all ports and on undeployment each port inherits the same PBR configuration.

Policy based routing with the preserve VLAN option

When an IP packet matches the PBR policy with the **preserve-vlan** option, the Layer 2 and Layer 3 information is retained (for example, the VLAN information and the MAC address are retained). TTL is not decremented. A packet is sent to the configured next hop. IP packets not matching the PBR policy with **preserve-vlan** will be dropped. If none of the policy's direct routes or next hops is available, the packets are forwarded as per the routing table.

Configuring a physical interface to accept all VLAN packets for PBR

The **allow-all-vlan pbr** command configures a physical interface to accept all VLAN packets for the purpose of PBR. This command reduces configuration complexity since the physical interface does not have to be configured individually in multiple VLAN interfaces.

Syntax: `allow-all-vlan pbr`

NOTE

The **allow-all-vlan pbr** command cannot be applied to a VE.

Configuration considerations

- The command **allow-all-vlan pbr** cannot be configured when the physical port is configured with an IPv4 address, MPLS, VPLS, VLL, ICL, Layer 3 VPN; or when the port is part of other VLAN.
- The route map with **preserve-vlan** set policies cannot be configured globally.
- A route map used for PBR with a preserve VLAN policy must have the **preserve-vlan** keyword configured for each set policy.

Configuring policy based routing with the preserve VLAN option

The interface, on which PBR with **preserve-vlan** is configured, should be part of the VLANs through which packets are expected. A route map policy with set policies to preserve VLAN can be applied on a physical port or on a VE port.

Preserve VLAN option as part of a set policy

In a route map set policy configuration, the **preserve-vlan** keyword is used to preserve the packet.

Syntax: `set ip next-hop ip-address preserve-vlan`

Syntax: `set next-hop-flood-vlan vlan-id preserve-vlan`

Syntax: `set interface ethernet slot/port preserve-vlan`

Configuring a rule-name for a route-map

You can use the **rule-name** field in the route-map to organize and extract information about PBR configurations.


```
Brocade(config-routemap test)# rule-name test permit 20
```

Syntax: `[no] rule-name rule_name`

The `rule_name` parameter is the name assigned to a specific instance in a route-map. The rule-name may be up to 127 characters in length.

The `[no]` version of the command removes the name assigned to this instance.

Output example

```
Brocade(config)# route-map xGW_map permit 1
Brocade(config-routemap xGW_map permit 1)# rule-name xGW_path1
Brocade(config-routemap xGW_map permit 1)# match ip address xGW_Filter1
Brocade(config-routemap xGW_map permit 1)# match ipv6 address xGW_Filter1
Brocade(config-routemap xGW_map permit 1)# set next-hop-flood-vlan 2
preserve-vlan
```

```
Brocade(config)#route-map xGW_map permit 2
Brocade(config-routemap xGW_map permit 2)# rule-name xGW_path2
Brocade(config-routemap xGW_map permit 2)# match ip address xGW_Filter2
Brocade(config-routemap xGW_map permit 2)# set interface ethernet 15/1
preserve-vlan
```

Limitations

- The same rule names can be used in multiple route maps.
- For each route-map instance, there can be one rule-name configured.
- Within each route-map the rule name has to be unique.
- The show commands will show all the route-maps configured with the same rule name at the same time.
- The maximum number of rule names that can be configured in a system is 4096.

Configuration examples

This section presents the following configuration examples:

- [“Preserve VLAN IDs and forwarding to single destination”](#) on page 341
- [“Preserve VLAN IDs and replicate to multiple ports within a VLAN”](#) on page 342

Preserve VLAN IDs and forwarding to single destination

1. Configure the access list for IPv4.

```
Brocade(config)# access-list 101 permit ip any any
```

2. Configure the route map with a set policy to preserve VLAN for IPv4 traffic.

```
Brocade(config)# route-map map4 permit 10
Brocade(config-routemap map4ve)# match ip address 101
Brocade(config-routemap map4ve)# set ip next-hop 192.168.2.1 preserve-vlan
Brocade(config-routemap map4ve)# exit
```

3. Apply route map to physical or VE interface.

```
Brocade(config)# interface e1/1
Brocade(config-if-e1000-1/1)# allow-all-vlan pbr
```

```
Brocade(config-if-e1000-1/1)# ip policy route-map map4
Brocade(config-if-e1000-1/1)# exit
Brocade(config)# int ve 20
Brocade(config-vif-20)# ip policy route-map map4
```

Preserve VLAN IDs and replicate to multiple ports within a VLAN

1. Configure the route map with set policies to preserve VLAN for IPv4 traffic.

```
Brocade(config)# route-map test permit 100
Brocade(config-routemap test)# match ip address 101
Brocade(config-routemap test)# set next-hop-flood-vlan 200 preserve-vlan
Brocade(config-routemap test)# route-map test permit 300
Brocade(config-routemap test)# exit
```

2. Apply the route map to physical or VE interface.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e1000-3/1)# allow-all-vlan pbr
Brocade(config-if-e1000-3/1)# ip policy route-map test
Brocade(config-if-e1000-3/1)# exit
Brocade(config-)# int ve 10
Brocade(config-vif-10)# ip policy route-map test
```

Specify an interface as a PBR next-hop

Within a route-map instance, there can be only one match statement but multiple **set interface** statements. If there are multiple **set interface** statements configured, the first one in the configured order will be used to forward traffic. If the actively used interface is down, the next interface in the configuration order will take over. If the previously down interface comes back up, the traffic will be reverted to the first interface.

Configure the route map with set policies to preserve VLAN interface.

```
Brocade(config)# route-map test permit 100
Brocade(config-routemap test)# set interface ethernet 3/1 preserve vlan
```

Syntax: **set interface ethernet *slot/port* preserve-vlan**

The **[no]** version of the command removes the set command from the route-map.

Show telemetry command

To display information related to the telemetry configuration, use the **show telemetry [detail] rule-name** command.

```
Brocade(config)# show telemetry rule-name
```

Syntax: **show telemetry [detail] rule-name [*rule_name*]**

The *rule_name* parameter is the rule name for which the information is to be displayed.

For detail mode output, the list of ports will be fully expanded and displayed if the ports are LAG or VLAN ports.

For the output VLAN and output ports information, the command will show the active ports or VLANs that are currently being used for traffic forwarding.

Output examples

The following example shows the output of the **show telemetry rule-name** command.

```
Brocade(config#) show telemetry rule-name
Paths with leading * are configured but disabled, entries with + is for IPv6
```

Rule Name	Input	Route-map Policy	ACL Match	Output VLAN	Output Port(s)
*test-traffic	N/A	Testing	TestACL	N/A	N/A
*xGW_path1	N/A	other_map	xGW_Filter2	N/A	N/A
xGW_path1	10/1 10/2	xGW_map	xGW_Filter1	2	N/A
xGW_path1	+10/1	xGW_map	xGW_Filter1	2	N/A
xGW_path2	10/1 10/2	xGW_map	xGW_Filter2	None	4/1
xGW_path2	+10/1	xGW_map		None	4/1

```
show telemetry rule-name test_traffic
Paths with leading * are configured but disabled, entries with + is for IPv6
```

Rule Name	Input	Route-map Policy	ACL Match	Output VLAN	Output Port(s)
*test-traffic	N/A	TestMap	TestACL	N/A	N/A

The following example shows the output of the **show telemetry detail rule-name** command.

```
Brocade(config#) show telemetry detail rule-name
```

```
Rule name: test-traffic (disabled)
Input: None
Route-map Policy: Testing
IPv4 ACL match: Test_filter1
Output: None
```

```
Rule Name: xGW_Path1
Input: IPv4 - 10/1 10/2 IPv6 - 10/1
Route-map Policy: xGW_map
IPv4 ACL match: xGW_Filter1
IPv6 ACL match: xGW_Filter1
Output: IPv4 - VLAN 2 IPv6 - VLAN 2
```

```
Rule Name: xGW_Path2
Input: IPv4 - 10/1, 10/2 IPv6 - 10/1
Route-map Policy: xGW_map
IPv4 ACL match: xGW_Filter2
Output: IPv4 - 2/2 4/1 IPv6 - 2/2 4/1
```

Policy-based routing support for preserve VLAN

NOTE

Policy-based routing support for preserve VLAN is supported only on Brocade NetIron XMR and Brocade MLX Series routers. This feature is now supported on the BR-MLX-10GX24 module.

Previously, PBR transparent VLAN flooding (TVF) replaced the ingress traffic's VLAN ID with the egress TVF VLAN ID, while flooding the egress TVF VLAN. Policy-based routing support for preserve VLAN allows the ingress packet VLAN header (VLAN ID and priority) to be preserved, while simultaneously flooding the PBR TVF VLAN.

The PBR TVF VLAN egress ports can be in strict tagged VLAN mode or dual VLAN mode. When PBR TVF VLAN egress ports are in strict tagged VLAN mode, the ingress tagged packets flood as "tagged" with the original VLAN ID and priority preserved. The ingress untagged packets flood as "tagged" with the default VLAN ID. When the PBR TVF VLAN egress ports are in dual VLAN mode, the ingress tagged packets flood as "tagged" with the original VLAN ID and priority preserved. The ingress untagged packets flood as "untagged".

Configuration considerations

Consider the following when policy-based routing is supported for preserve VLAN:

- To preserve the ingress VLAN priority value, the ingress VLAN and the port QoS feature should not be configured at the same time.
- IPv4 and IPv6 ACL VLAN ID matches are supported for both ingress and egress ACLs.
- An egress ACL is supported to filter traffic.
- Policy-based routing support for the preserve VLAN option does not affect the feature implementation of policy-based routing support for the preserve VLAN.

MBGP

Table 57 displays the individual Brocade devices and the Multi-protocol Border Gateway Protocol (MBGP) features they support.

TABLE 57 Supported Brocade MBGP features

Features supported	Brocade NetronXMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
MBGP	Yes	Yes	No	No	Yes	Yes	Yes
Advertising Routes from the Local AS to MBGP	Yes	Yes	No	No	Yes	Yes	Yes
Network Prefix to Advertise	Yes	Yes	No	No	Yes	Yes	Yes
Redistribution of Directly-Connected Multicast Routes into MBGP	Yes	Yes	No	No	Yes	Yes	Yes
Static IP Multicast Routes	Yes	Yes	No	No	Yes	Yes	Yes
Aggregating Routes Advertised to BGP4 Neighbors	Yes	Yes	No	No	Yes	Yes	Yes
Displaying MBGP Information	Yes	Yes	No	No	Yes	Yes	Yes
Clearing MBGP Information	Yes	Yes	No	No	Yes	Yes	Yes
IPv6 Support	Yes	Yes	No	No	Yes	Yes	Yes
VRF Support	Yes	Yes	No	No	Yes	Yes	Yes
IPv4 Multicast	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 Multicast	Yes	Yes	No	No	No	No	No

This chapter provides details on how to configure **Multi-protocol Border Gateway Protocol (MBGP)**. MBGP is an extension to BGP that allows a router to support separate unicast and multicast topologies. BGP4 cannot support a multicast network topology that differs from the network's unicast topology. MBGP allows you to support a multicast topology that is distinct from the network's unicast topology. For example, if you want to dedicate a link on your Internet router to multicast traffic, use MBGP to handle the routes on that link.

NOTE


The IPv6 multicast address family for MBGP is supported. However, only static mroutes and directly connected routes over IPv6 multicast enabled interfaces may be enabled for distribution.

MBGP provides the following benefits:

- You can support a network whose multicast topology is different from its unicast topology. Even if the unicast and multicast networks have the same topologies, you can support different sets of routing policies for unicast and multicast.
- You can use BGP4's powerful feature set with MBGP.

Figure 22 shows an example of a network that contains both a unicast topology and a multicast topology. The unicast and multicast router in this example receives unicast and multicast routes from the Internet. The router advertises the multicast routes to the multicast router and advertises the unicast routes to the unicast router. Likewise, the unicast and multicast router can advertise unicast routes received from the unicast router to the Internet, and can advertise multicast routes received from the multicast router to the Internet.

FIGURE 22 MBGP used when multicast topology is different from unicast topology

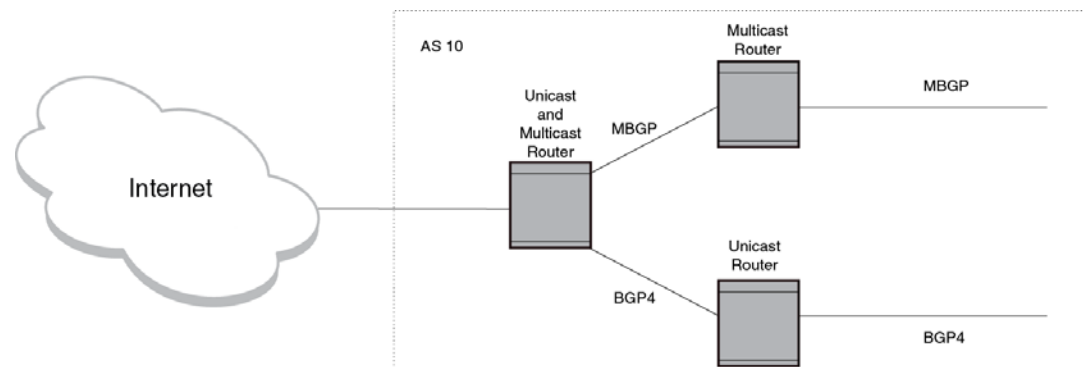

An MBGP router learns MBGP routes from its neighbors in other ASs. An MBGP router also can advertise MBGP routes to its neighbors. The implementation of MBGP enables you to advertise multicast routes from the following sources:

- Explicitly configured network prefixes
- Static IP multicast routes
- Directly-connected multicast routes redistributed into MBGP.

You can configure an aggregate address to aggregate network prefixes into a single, more general prefix for advertisement.

MBGP is described in detail in RFC 2858.

Configuration considerations

The configuration considerations are as follows:

- MBGP does not redistribute DVMRP routes. It redistributes static routes only.
- You cannot redistribute MBGP routes into BGP4.
- By default, the Brocade device does not place any limit on the number of multicast routes. You can configure the device to place a limit on the number of multicast routes by using the **ip max-mroute** command.
- IPv4 multicast RPF on Brocade NetIron CER and Brocade NetIron CES devices is based on VLAN.
- IPv4 and IPv6 multicast RPF on Brocade MLX series and Brocade NetIron XMR devices is based on VLAN and port.

Configuring MBGP

1. Optional – Set the maximum number of multicast routes supported by the Brocade device.
2. Enable MBGP by doing the following:
 - Enable PIM Sparse Mode (PIM SM) or PIM Dense Mode (PIM DM) globally and on the individual Reverse Path Forwarding (RPF) interfaces. PIM must be running on the Brocade device in order for the device to send multicast prefixes to other multicast devices.
 - Enable BGP4. If this is the first time you have configured BGP4 on this device, you also need to specify the local AS number.
3. Identify the neighboring MBGP routers.
4. Optional – Configure an MBGP default route.
5. Optional – Configure an IP multicast static route.
6. Optional – Configure an MBGP aggregate address.
7. Optional – Configure a route map to apply routing policy to multicast routes.
8. Save the configuration changes to the startup-config file.

Setting the maximum number of multicast routes supported

NOTE

This procedure requires a software reload to place the change into effect.

You can use the following runtime command to define the maximum number of multicast routes supported. This parameter can be defined for the default VRF using the following command.

```
Brocade(config)# ip max-mroute
Brocade(config)# write memory
Brocade(config)# end
Brocade# reload
```

These commands increase the maximum number of multicast routes supported, save the configuration change to the startup-config file, and reload the software to place the change into effect.

Syntax: [no] ip max-mroute *num*

The *num* parameter specifies the number of multicast routes and can be from 1024 – 153,600.

To define the maximum number of multicast routes for a specified VRF, use the following commands.

```
Brocade(config)# vrf blue
Brocade(config-vrf-blue)# ip max-mroute
```

Syntax: [no] vrf *vrf-name*

Syntax: [no] ip max-mroute *num*

The *vrf* parameter specifies the virtual routing instance (VRF) specified by the variable *vrf-name*

The *num* parameter specifies the number of multicast routes. This value can range from 1024 to the maximum routes supported by the system, subject to a maximum of 153,600 routes.

Enabling MBGP

To make use of MBGP4, you must enable PIM SM or DM and BGP4. Enter commands such as the following.

```
Brocade> enable
Brocade# configure terminal
Brocade(config)# router pim
Brocade(config)# interface ethernet 1/1
Brocade(config-if-1/1)# ip address 10.1.1.1/24
Brocade(config-if-1/1)# ip pim
Brocade(config-if-1/1)# exit
Brocade(config)# router bgp
BGP4: Please configure 'local-as' parameter in order to enable BGP4.
Brocade(config-bgp)# local-as 10
```

NOTE

For IPv6 address family, make sure you enter the IPv6 versions of the commands.

The commands in this example configure PIM DM globally and on port 1/1, then enable BGP4. Once you enable PIM DM or PIM SM both globally and on the individual RPF interfaces, and enable BGP4, support for MBGP is automatically enabled.

Once MBGP is enabled, MBGP parameters are configured under the IPv4 multicast address family. Enter the following command to enter the IPv4 multicast address family level.

```
Brocade(config-bgp)#address-family ipv4 multicast
Brocade(config-bgp-ipv4m)#
```

Syntax: [no] address-family ipv4 multicast

To enable MBGP for IPv6, enter the following command.

```
Brocade(config-bgp)#address-family ipv6 multicast
Brocade(config-bgp-ipv6m)#
```

Syntax: [no] address-family ipv6 multicast

Adding MBGP neighbors

To add an MBGP neighbor, enter a command such as the following.

```
Brocade(config-bgp-ipv4m)#neighbor 10.2.3.4 remote-as 44
```

This command adds a router with IP address 10.2.3.4 as an MBGP neighbor.

The **remote-as 44** parameter specifies that the neighbor is in remote BGP4 AS 44. The Brocade device will exchange only multicast routes with the neighbor.

NOTE

If the Brocade device has multiple neighbors with similar attributes, you can simplify configuration by configuring a peer group, then adding individual neighbors to it. The configuration steps are similar, except you specify a peer group name instead of a neighbor IP address when configuring the neighbor parameters, then add individual neighbors to the peer group.

The command is the same as the command for configuring a unicast BGP neighbor, except in MBGP, the command is entered in the IPv4 multicast address family level. Here is the full syntax for the neighbor command.

Syntax: `[no] neighbor ip-addr | peer-group-name`
`[default-originate [route-map map-name]]`
`[description string]`
`[distribute-list in | out num,num,... | acl-num in | out]`
`[ebgp-multihop [num]]`
`[filter-list in | out num,num,... | acl-num in | out | weight]`
`[maximum-prefix num [threshold] [teardown]]`
`[next-hop-self]`
`[password [0 | 1] string]`
`[prefix-list string in | out]`
`[remote-as as-number]`
`[remove-private-as]`
`[route-map in | out map-name]`
`[route-reflector-client]`
`[send-community]`
`[soft-reconfiguration inbound]`
`[shutdown [generate-rib-out]]`
`[timers keep-alive num hold-time num]`
`[update-source loopback num]`
`[weight num]`

The `ip-addr | peer-group-name` parameter indicates whether you are configuring an individual neighbor or a peer group. If you specify a neighbor's IP address, you are configuring that individual neighbor. If you specify a peer group name, you are configuring a peer group. Make sure you enter the IP address in the correct address family format.

The **remote-as as-number** parameter specifies the AS the MBGP neighbor is in. The `as-number` can be a number from 1 – 65535. There is no default.

NOTE

The Brocade device attempts to establish a BGP4 session with a neighbor as soon as you enter a command specifying the neighbor's IP address. If you want to completely configure the neighbor parameters before the Brocade device establishes a session with the neighbor, you can administratively shut down the neighbor.

Optional configuration tasks

The following sections describe how to perform some optional BGP4 configuration tasks.

NOTE

This section shows some of the more common optional tasks, including all the tasks that require you to specify that they are for MBGP. Most tasks are configured only for BGP4 but apply both to BGP4 and MBGP.

Advertising routes from the local AS to MBGP

You can configure the Brocade device to advertise directly-connected and static multicast routes from the local AS to other ASs using the following methods:

- **For directly-connected routes:**
 - Enable redistribution of directly-connected multicast routes.
- **For indirectly-connected routes:**
 - Configure static IP multicast routes. The corresponding IP route must be present in the IP multicast table.
 - Explicitly configure network prefixes to advertise (**network** command).

NOTE

You can configure the device to advertise directly-connected networks into MBGP using the **network** command. You are not required to use redistribution or configure static multicast routes.

Configuring a network prefix to advertise

By default, the Brocade device advertises MBGP routes only for the networks you identify using the network command or that are redistributed into MBGP from IP multicast route tables.

NOTE

The exact route must exist in the IP multicast route table so that the Brocade device can create a local MBGP route.

To configure the Brocade device to advertise network 10.95.22.0/24 as a multicast route, enter the following command.

```
Brocade(config-bgp-ipv4m)# network 10.95.22.0 255.255.255.0
```

Syntax: **[no] network** *ip-addr ip-mask* **[route-map** *map-name* **]** **[backdoor]** **[weight** *num* **]**

The *ip-addr* is the network number and the *ip-mask* specifies the network mask.

NOTE

For IPv6 address family, make sure you enter the IP address in IPv6 format.

The **route-map** *map-name* parameter specifies the name of the route map you want to use to set or change BGP4 attributes for the network you are advertising. The route map must already be configured.

The **backdoor** parameter changes the administrative distance of the route to this network from the EBGp administrative distance (20 by default) to the Local BGP weight (200 by default), thus tagging the route as a backdoor route.

The **weight num** parameter specifies a weight to be added to routes to this network.

Enabling redistribution of directly-connected multicast routes into MBGP

To redistribute a directly-connected multicast route into MBGP enable redistribution of directly-connected routes into MBGP, using a route map to specify the routes to be redistributed.

Example

```
Brocade(config)# access-list 10 permit 10.95.22.0 0.0.0.255
Brocade(config)# route-map mbgpmmap permit 1
Brocade(config-route-map mbgpmmap)# match ip address 10
Brocade(config-route-map mbgpmmap)# exit
Brocade(config)# router bgp
Brocade(config-bgp-ipv4m)# redistribute connected route-map mbgpmmap
```

The first command configures an IP ACL for use in the route map. The ACL matches on the destination network for the route to be redistributed. The next four commands configure a route map that matches on routes to the multicast network specified in IP ACL 10. The Brocade device redistributes routes that match the route map into MBGP.

Syntax: [no] redistribute [connected | static] [metric num] [route-map map-name]

The **connected** parameter indicates that you are redistributing routes to directly attached devices into MBGP.

The **static** parameter indicates that you are redistributing static mroutes into MBGP.

The **metric num** parameter changes the metric. You can specify a value from 0 – 4294967295. The default is 0.

The **route-map map-name** parameter specifies a route map to be consulted before redistributing the routes into MBGP.

NOTE

The route map you specify must already be configured.

NOTE

For IPv6 address family, make sure you enter the IPv6 versions of the commands.

Configuring static IP multicast routes

To configure static IP multicast routes, enter commands such as the following.

```
Brocade(config)# ip mroute 10.95.10.0 255.255.255.0 interface ethernet 1/2
Brocade(config)# ip mroute 0.0.0.0 0.0.0.0 interface ethernet 2/3
```

The commands in this example configure two static multicast routes. The first route is for a specific source network, 10.95.10.0/24. If the Brocade device receives multicast traffic for network 10.95.10.0/24, the traffic must arrive on port 1/2. The second route is for all other multicast traffic. Traffic from multicast sources other than 10.95.10.0/24 must arrive on port 2/3.

If you configure more than one static multicast route, the Brocade device always uses the most specific route that matches a multicast source address. Thus, if you want to configure a multicast static route for a specific multicast source and also configure another multicast static route for all other sources, you can configure two static routes as shown in this example.

Syntax: `[no] ip mroute ip-addr ip-mask [next-hop-ip-addr | ethernet slot/port | ve nu | tunnel num | null0] [cost] [distance num]`

The **ip-addr** and **ip-mask** parameters specifies the PIM source for the route. Also, for IPv6 address family, make sure you enter the IP address in IPv6 format.

The **ethernet slot/port** parameter specifies a physical port.

The **ve num** parameter specifies a virtual interface.

The **tunnel num** parameter specifies a GRE tunnel interface that is being configured. The GRE tunnel interface is enabled under the router PIM configuration.

The **null0** parameter is the same as dropping the traffic.

The **distance num** parameter sets the administrative distance for the route.

The **cost** parameter specifies the cost metric of the route. Possible values are: 1 - 6. Default value: 1

NOTE

Regardless of the administrative distances, the Brocade device always prefers directly connected routes over other routes.

Aggregating routes advertised to BGP4 neighbors

By default, the Brocade device advertises individual MBGP routes for all the multicast networks. The aggregation feature allows you to configure the Brocade device to aggregate routes in a range of networks into a single CIDR number. For example, without aggregation, the Brocade device will individually advertise routes for networks 10.95.10.0/24, 10.95.20.0/24, and 10.95.30.0/24. You can configure the Brocade device to instead send a single, aggregate route for the networks. The aggregate route would be advertised as 10.95.0.0/16.

To aggregate MBGP routes for 10.95.10.0/24, 10.95.20.0/24, and 10.95.30.0/24, enter the following command.

```
Brocade(config-bgp-router)# aggregate-address 10.95.0.0 255.255.0.0
```

Syntax: `[no] aggregate-address ip-addr ip-mask [as-set] [summary-only] [suppress-map map-name] [advertise-map map-name] [attribute-map map-name]`

The **ip-addr** and **ip-mask** parameters specify the aggregate value for the networks. Also, for IPv6 address family, make sure you enter the IP address in IPv6 format.

The **as-set** parameter causes the Brocade device to aggregate AS-path information for all the routes in the aggregate address into a single AS-path.

The **summary-only** parameter prevents the Brocade device from advertising more specific routes contained within the aggregate route.

The **suppress-map map-name** parameter prevents the more specific routes contained in the specified route map from being advertised.

The **advertise-map map-name** parameter configures the Brocade device to advertise the more specific routes in the specified route map.

The **attribute-map map-name** parameter configures the Brocade device to set attributes for the aggregate routes based on the specified route map.

NOTE

For the **suppress-map**, **advertise-map**, and **attribute-map** parameters, the route map must already be defined.

Displaying MBGP information

All of the BGP show commands have MBGP equivalents. Use **mbgp** instead of **bgp** in the command syntax. For example, to display the MBGP route table, enter the **show ip mbgp routes** command instead of the **show ip bgp routes** command.

Table 58 lists the MBGP show commands and describes their output.

TABLE 58 MBGP show commands for IPv4

Command	Description
show ip mbgp summary	Displays summary configuration information and statistics.
show ip mbgp config	Shows the configuration commands in the running-config.
show ip mbgp neighbors	Displays information about MBGP neighbors.
show ip mbgp peer-group	Displays information about MBGP peer groups.
show ip mbgp routes	Displays MBGP routes.
show ip mbgp ip-addr[/prefix]	Displays a specific MBGP route.
show ip mbgp attribute-entries	Displays MBGP route attributes.
show ip mbgp dampened-paths	Displays MBGP paths that have been dampened by route flap dampening.
show ip mbgp flap-statistics	Displays route flap dampening statistics.
show ip mbgp filtered-routes	Displays routes that have been filtered out.
show ip mbgp vpn4	Displays VPN-IPv4 address family information
show ip mbgp vrf	Displays IPv4 address family information for a VPN Routing/Forwarding instance

Table 59 lists the show commands available to display MBGP IPv6 information:

TABLE 59 MBGP show commands for IPv6

Command	Description
show ipv6 mbgp summary	Displays summary configuration information and statistics.
show ipv6 mbgp config	Shows the configuration commands in the running-config.
show ipv6 mbgp neighbors	Displays information about MBGP neighbors.
show ip mbgp peer-group	Displays information about MBGP peer groups.
show ipv6 mbgp routes	Displays MBGP routes.
show ipv6 mbgp ip-addr[/prefix]	Displays a specific MBGP route.
show ipv6 mbgp attribute-entries	Displays MBGP route attributes.
show ipv6 mbgp dampened-paths	Displays MBGP paths that have been dampened by route flap dampening.

TABLE 59 MBGP show commands for IPv6 (Continued)

Command	Description
show ipv6 mbgp flap-statistics	Displays route flap dampening statistics.
show ipv6 mbgp filtered-routes	Displays routes that have been filtered out.

The following sections show examples of some of the MBGP show commands. An example of the **show ip mroute** and the **show ipv6 mroute** commands are also included. Both of the commands display the multicast route table.

Displaying summary MBGP information

To display a summary of MBGP IPv4 information, enter the following command at any CLI prompt.

```
Brocade# show ip mbgp summary
  BGP4 Summary
  Router ID: 10.9.9.1   Local AS Number : 200
  Confederation Identifier : not configured
  Confederation Peers:
  Maximum Number of Paths Supported for Load Sharing : 1
  Number of Neighbors Configured : 1, UP: 1
  Number of Routes Installed : 5677
  Number of Routes Advertising to All Neighbors : 5673
  Number of Attribute Entries Installed : 3
  Neighbor Address  AS#   State   Time      Rt:Accepted Filtered Sent   ToSend
  10.1.1.2         200  ESTAB  0h24m54s  3         0       5673  0
```

Syntax: show ip mbgp summary

NOTE

This command's display looks similar to the display for the **show ip bgp config** command. However, the **show ip mbgp config** command lists only the MBGP neighbors, whereas the **show ip bgp config** command lists only the BGP neighbors.

To display a summary of MBGP IPv6 information, enter the following command at any CLI prompt.

```
Brocade# show ipv6 mbgp summary
  BGP4 Summary
  Router ID: 10.1.1.1   Local AS Number: 100
  Confederation Identifier: not configured
  Confederation Peers:
  Maximum Number of IP ECMP Paths Supported for Load Sharing: 1
  Number of Neighbors Configured: 1, UP: 1
  Number of Routes Installed: 4, Uses 344 bytes
  Number of Routes Advertising to All Neighbors: 7, Uses 308 bytes
  Number of Attribute Entries Installed: 2, Uses 184 bytes
  Neighbor Address  AS#   State   Time      Rt:Accepted Filtered Sent   ToSend
  2001:db8::2      200  ESTAB  0h39m50s  4         0       3     0
```

Syntax: show ipv6 mbgp summary

Displaying the active MBGP configuration

To display the active MBGP IPv4 configuration information contained in the running-config without displaying the entire running-config, enter the following command at any level of the CLI.

```
Brocade# show ip mbgp config
Current BGP configuration:

router bgp
  local-as 200
  neighbor 10.1.1.2 remote-as 200

  address-family ipv4 unicast
  no neighbor 10.1.1.2 activate
  exit-address-family

  address-family ipv4 multicast
  redistribute connected
  redistribute static
  neighbor 10.1.1.2 activate
  exit-address-family

  address-family ipv6 unicast
  exit-address-family
end of BGP configuration
```

Syntax: show ip mbgp config

NOTE

This command displays exactly the same information as the **show ip bgp config** command. Each command displays both the BGP and MBGP configuration commands that are in the running-config.

To display the active MBGP IPv6 configuration information contained in the running-config without displaying the entire running-config, enter the following command at any level of the CLI.

```
Brocade# show ipv6 mbgp config
Current BGP configuration:

router bgp
  local-as 100
  neighbor 2001:db8::2 remote-as 200

  address-family ipv4 unicast
  no neighbor 2001:db8::2 activate
  exit-address-family

  address-family ipv4 multicast
  exit-address-family

  address-family ipv6 unicast
  exit-address-family

  address-family ipv6 multicast
  neighbor 2001:db8::2 activate
  redistribute connected
  redistribute static
  exit-address-family

  address-family vpnv4 unicast
  exit-address-family
end of BGP configuration
```

Syntax: show ipv6 mbgp config

Displaying MBGP neighbors

To view MBGP IPv4 neighbor information including the values for all the configured parameters, enter the **show ip mbgp neighbor** command. This display is similar to the **show ip bgp neighbor** display but has additional fields that apply only to MBGP. These fields are shown in bold type in the example and are explained below.

NOTE

The display shows all the configured parameters for the neighbor. Only the parameters that have values different from their defaults are shown.

```

Brocade # show ip mbgp neighbor 10.7.7.2
      Total number of BGP Neighbors: 1
1  IP Address: 10.1.1.2, Remote AS: 200 (IBGP), RouterID: 10.8.8.1
   State: ESTABLISHED, Time: 0h33m26s, KeepAliveTime: 60, HoldTime: 180
     KeepAliveTimer Expire in 9 seconds, HoldTimer Expire in 161 seconds
     PeerGroup: mbgp-mesh
     MD5 Password: $Gsig@U\
     NextHopSelf: yes
     RefreshCapability: Received
Messages:   Open      Update  KeepAlive  Notification  Refresh-Req
Sent       : 2        3264     17         0              0
Received:  1         1        34         0              0
Last Update Time: NLRI          Withdraw      NLRI          Withdraw
                  Tx: ---          ---          Rx: ---          ---
Last Connection Reset Reason:Unknown
Notification Sent:      Unspecified
Notification Received: Unspecified
Neighbor NLRI Negotiation:
  Peer Negotiated IPV4 multicast capability
  Peer configured for IPV4 multicast Routes
TCP Connection state: ESTABLISHED, MD5-Password: *****
TTL check: 0, value: 0, rcvd: 64
Byte Sent:   284418, Received: 767
Local host:  10.1.1.1, Local Port: 179
Remote host: 10.1.1.2, Remote Port: 8137
ISentSeq:    2763573  SendNext:    3047992  TotUnAck:      0
TotSent:     284419  ReTrans:     0      UnAckSeq:      3047992
IRcvSeq:     3433336  RcvNext:     3434104  SendWnd:        65000
TotalRcv:    768    DupliRcv:    0      RcvWnd:        65000
SendQue:     0      RcvQue:     0      CngstWnd:      1440
  
```

Syntax: **show ip mbgp neighbors** [*ip-addr*]

The *ip-addr* parameter specifies the neighbor's IP address.

To view MBGP IPv6 neighbor information including the values for all the configured parameters, enter the following command.

NOTE

The display shows all the configured parameters for the neighbor. Only the parameters that have values different from their defaults are shown.

Displaying MBGP information

```
Brocade # show ipv6 mbgp neighbor 2001:db8::2
1  IP Address: 2001:db8::2, AS: 200 (EBGP), RouterID: 10.2.2.2, VRF: default-vrf
   State: ESTABLISHED, Time: 0h47m45s, KeepAliveTime: 60, HoldTime: 180
     KeepAliveTimer Expire in 19 seconds, HoldTimer Expire in 163 seconds
   Minimal Route Advertisement Interval: 0 seconds
     RefreshCapability: Received
Messages:   Open   Update   KeepAlive   Notification   Refresh-Req
   Sent      : 7     4       201         6               0
   Received: 7     3       207         0               0
Last Update Time: NLRI           Withdraw      NLRI           Withdraw
                  Tx: 0h49m43s   ---          Rx: 0h47m45s   ---
Last Connection Reset Reason:Unknown
Notification Sent:      Unspecified
Notification Received: Unspecified
Neighbor NLRI Negotiation:
  Peer Negotiated IPV6 multicast capability
  Peer configured for IPV6 multicast Routes
TCP Connection state: ESTABLISHED, flags:00000044 (0,0)
TTL check: 0, value: 0, rcvd: 0
Byte Sent:   1071, Received: 1291
Local host:  2001:db8::1, Local Port: 179
Remote host: 2001:db8::2, Remote Port: 8202
ISentSeq:    679044370  SendNext:    679045442  TotUnAck:      0
TotSent:     1072     ReTrans:     0      UnAckSeq:    679045442
IRcvSeq:    678124443  RcvNext:     678125735  SendWnd:       65000
TotalRcv:   1292     DupliRcv:   0      RcvWnd:       65000
SendQue:    0      RcvQue:     0      CngstWnd:    1440
```

Syntax: show ipv6 mbgp neighbors [*ipv6-addr*]

The *ipv6-addr* parameter specifies the neighbor's IPv6 address.

Both examples show how to display information for a specific neighbor, by specifying the neighbor's IP address with the command. The number in the far left column, for example 1, on the first line following the issued command, is similar to an index that indicates the neighbor for which the information is displayed. When you list information for multiple neighbors, this number makes the display easier to read.

The Neighbor NLRI Negotiation section (shown in bold type) lists the types of routes that this Brocade device can exchange with the MBGP neighbor.

The TCP statistics at the end of the display show status for the TCP session with the neighbor. Most of the fields show information stored in the Brocade device's Transmission Control Block (TCB) for the TCP session between the Brocade device and its neighbor. These fields are described in detail in section 3.2 of RFC 793, "Transmission Control Protocol Functional Specification".

Displaying MBGP routes

To display the MBGP IPv4 route table, enter the following command.

```
Brocade#show ip mbgp route
Total number of BGP Routes: 2
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
       E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED s:STALE
Prefix      Next Hop      Metric      LocPrf      Weight      Status
1  10.8.8.0/24  10.1.1.2    0           100         0           BI
   AS_PATH:
2  10.1.1.0/24  10.1.1.2    0           100         0           BI
   AS_PATH:
```

Syntax: show ip mbgp routes

To display the MBGP IPv6 route table, enter the following command.

```
Brocade#show ipv6 mbgp route
Total number of BGP Routes: 4
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
       E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH m: NOT-INSTALLED-MULTIPATH
       S:SUPPRESSED F:FILTERED s:STALE
Prefix      Next Hop      Metric      LocPrf      Weight      Status
1  2001:db8:3::/64  2001:db8::2  0           100         0           BE
   AS_PATH: 200
2  2001:db8:4::/64  2001:db8::2  0           100         0           BE
   AS_PATH: 200
3  2001:db8:5::/64  2001:db8::2  0           100         0           BE
   AS_PATH: 200
4  2001:db8:17::1/128 2001:db8::2  100         100         0           BE
   AS_PATH: 200 700
```

Syntax: show ipv6 mbgp routes

Displaying the IP Multicast Route Table

To display the IPv4 multicast route table, enter the following command.

```
Brocade#show ip mroute
Type Codes - B:BGP D:Connected S:Static; Cost - Dist/Metric
Destination      Gateway      Port      Cost      Type
1  10.9.9.0/30     DIRECT      loopback 1  0/0      D
2  10.1.1.0/24     DIRECT      ve 220    0/0      D
3  10.1.2.0/24     DIRECT      ve 1      0/0      D
4  10.1.3.0/24     DIRECT      ve 2      0/0      D
5  10.1.4.0/24     DIRECT      ve 3      0/0      D
6  10.1.5.0/24     DIRECT      ve 4      0/0      D
7  10.1.6.0/24     DIRECT      ve 5      0/0      D
8  10.1.7.0/24     DIRECT      ve 6      0/0      D
9  10.1.8.0/24     DIRECT      ve 7      0/0      D
10 10.1.9.0/24     DIRECT      ve 8      0/0      D
11 10.8.8.0/24     10.1.1.2   eth 4/1   200/0    B
12 10.31.1.0/24    10.1.1.2   eth 4/1   200/0    B
```

Syntax: show ip mroute [ip-addr ip-mask | bgp | static]

The *ip-addr ip-mask* options display IPv4 multicast route information for a specific destination address only.

The **bgp** parameter displays IPv4 multicast route information for BGP routes only.

The **static** parameter displays IPv4 multicast route information for static routes only.

To display the IPv6 multicast route table, enter the following command.

```
Brocade#show ipv6 mroute
  IPv6 Routing Table - 6 entries:
Type Codes - B:BGP C: Connected I:ISIS L:Local O:OSPF R:RIP S:Static
OSPF Type: i - Inter, 1 - External Type1, 2 - External Type2, e - External
Type IPv6 Prefix                Next Hop Router                Interface  Dis/Metric
B  2001:db8:3::/64                2001:db8:4::2                  eth 4/4    20/1
C  2001:db8:4::/64                ::                              eth 4/4    0/0
B  2001:db8:5::/64                2001:db8:4::2                  eth 4/4    20/1
C  2001:db8:7::/64                ::                              eth 4/2    0/0
C  2001:db8:10::1/128             ::                              loopback 1 0/0
B  2001:db8:17::1/128             2001:db8:4::2                  eth 4/4    20/2
```

Syntax: `show ipv6 mroute [ip-addr ip-mask | bgp | static]`

The *ip-addr ip-mask* options display IPv6 multicast route information for a specific destination address only.

The **bgp** parameter displays IPv6 multicast route information for BGP routes only.

The **static** parameter displays IPv6 multicast route information for static routes only.

Displaying MBGP Attribute Entries

To display MBGP Attributes for IPv4.

```
Brocade#show ip mbgp attribute-entries
      Total number of BGP Attribute Entries: 4
1      Next Hop :10.4.3.7          Metric :0                      Origin:INCOMP
      Originator:0.0.0.0          Cluster List:None
      Aggregator:AS Number :0      Router-ID:0.0.0.0             Atomic:None
      Local Pref:100              Communities:Internet
      AS Path :700 (length 3)
      Address: 0x27ace0c4 Hash:241 (0x0300067a)
      Links: 0x00000000, 0x00000000, nlri: 0x27b4e874
      Reference Counts: 3:0:0, Magic: 19
2      Next Hop :10.4.3.7          Metric :1                      Origin:INCOMP
      Originator:0.0.0.0          Cluster List:None
      Aggregator:AS Number :0      Router-ID:0.0.0.0             Atomic:None
      Local Pref:100              Communities:Internet
      AS Path :700 (length 3)
      Address: 0x27acel84 Hash:242 (0x0300067a)
      Links: 0x00000000, 0x00000000, nlri: 0x27b4e8ce
      Reference Counts: 1:0:0, Magic: 20
3      Next Hop :10.4.4.1          Metric :300                    Origin:INCOMP
      Originator:0.0.0.0          Cluster List:None
      Aggregator:AS Number :0      Router-ID:0.0.0.0             Atomic:None
      Local Pref:100              Communities:Internet
      AS Path :100 (length 3)
      Address: 0x27ace064 Hash:615 (0x030001ca)
      Links: 0x00000000, 0x00000000, nlri: 0x27b4e27a
      Reference Counts: 3:0:0, Magic: 18
```

Syntax: show ip mbgp attribute-entries

To display MBPG attributes for IPv6, enter the following command.

```

Brocade#show ipv6 mbgp attribute-entries
      Total number of BGP Attribute Entries: 10
1     Next Hop  :2001:db8::1          Metric   :100          Origin:INCOMP
      Originator:0.0.0.0              Cluster List:None
      Aggregator:AS Number :0         Router-ID:0.0.0.0   Atomic:None
      Local Pref:100                  Communities:Internet
      AS Path   :100 (length 3)
      Address: 0x27c9643c Hash:415 (0x030001ca)
      Links: 0x00000000, 0x00000000, nlri: 0x00000000
      Reference Counts: 0:0:3, Magic: 16
2     Next Hop  :2001:db8::7          Metric   :0           Origin:INCOMP
      Originator:0.0.0.0              Cluster List:None
      Aggregator:AS Number :0         Router-ID:0.0.0.0   Atomic:None
      Local Pref:100                  Communities:Internet
      AS Path   :700 (length 3)
      Address: 0x27c961b4 Hash:496 (0x0300067a)
      Links: 0x00000000, 0x00000000, nlri: 0x27b4e43c
      Reference Counts: 4:0:0, Magic: 8
3     Next Hop  :2001:db8::7          Metric   :1           Origin:INCOMP
      Originator:0.0.0.0              Cluster List:None
      Aggregator:AS Number :0         Router-ID:0.0.0.0   Atomic:None
      Local Pref:100                  Communities:Internet
      AS Path   :700 (length 3)
      Address: 0x27c9628c Hash:497 (0x0300067a)
      Links: 0x00000000, 0x00000000, nlri: 0x27b4e496
      Reference Counts: 1:0:0, Magic: 10
    
```

Syntax: show ipv6 mbgp attribute-entries

Displaying dampened paths

To display MBGP dampened paths for IPv4.

```

Brocade#show ip mbgp dampened-paths
      Status Code >:best d:damped h:history *:valid
      Network      From      Flp Since  Reuse  Pnlty rIdx dBlk
*d  10.108.1.0/24  10.4.4.1  5  0 :2 :31 0 :41:50 3590 3  0
*d  10.101.1.0/24  10.4.4.1  5  0 :2 :31 0 :41:50 3590 3  0
*d  10.106.1.0/24  10.4.4.1  5  0 :2 :31 0 :41:50 3590 3  0
*d  10.10.1.0/24   10.4.4.1  5  0 :2 :31 0 :41:50 3590 3  0
*d  10.104.1.0/24  10.4.4.1  5  0 :2 :31 0 :41:50 3590 3  0
*d  10.109.1.0/24  10.4.4.1  5  0 :2 :31 0 :41:50 3590 3  0
*d  10.107.1.0/24  10.4.4.1  5  0 :2 :31 0 :41:50 3590 3  0
*d  10.105.1.0/24  10.4.4.1  5  0 :2 :31 0 :41:50 3590 3  0
*d  10.110.1.0/24  10.4.4.1  5  0 :2 :31 0 :41:50 3590 3  0
*d  10.103.1.0/24  10.4.4.1  5  0 :2 :31 0 :41:50 3590 3  0
    
```

Syntax: show ip dampened-paths

To display MBGP dampened paths for IPv6.

```
Brocade#show ipv6 mbgp dampened-paths
      Status Code >:best d:damped h:history *:valid
      Network          From          Flaps Since    Reuse    Path
*d 2001:db8:2010::1/128 2001:db8:2004::1      3         0 :2 :25 0 :37:10 100
*d 2001:db8:1005::/64   2001:db8:2004::1      3         0 :2 :25 0 :37:10 100
*d 2001:db8:1003::/64   2001:db8:2004::1      3         0 :2 :25 0 :37:10 100
*d 2001:db8:1008::/64   2001:db8:2004::1      3         0 :2 :25 0 :37:10 100
*d 2001:db8:2008::/64   2001:db8:2004::1      3         0 :2 :25 0 :37:10 100
*d 2001:db8:1001::/64   2001:db8:2004::1      3         0 :2 :25 0 :37:10 100
*d 2001:db8:1006::/64   2001:db8:2004::1      3         0 :2 :25 0 :37:10 100
*d 2001:db8:1010::/64   2001:db8:2004::1      3         0 :2 :25 0 :37:10 100
*d 2001:db8:1004::/64   2001:db8:2004::1      3         0 :2 :25 0 :37:10 100
*d 2001:db8:2004::/64   2001:db8:2004::1      3         0 :2 :25 0 :37:10 100
```

Syntax: show ipv6 mbgp dampened-paths

Displaying MBGP filtered routes

To display MBGP filtered routes for IPv4.

```
Brocade#show ip mbgp filtered-routes
Searching for matching routes, use ^C to quit...
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
      E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH m: NOT-INSTALLED-MULTIPATH
      S:SUPPRESSED F:FILTERED s:STALE
      Prefix          Next Hop          Metric    LocPrf    Weight Status
1   10.7.7.7/32        10.4.3.7          0         100       0       EF
      AS_PATH: 700
2   10.168.1.0/24     10.4.3.7          1         100       0       EF
      AS_PATH: 700
3   10.4.3.0/24       10.4.3.7          0         100       0       EF
      AS_PATH: 700
4   10.4.2.0/24       10.4.3.7          0         100       0       EF
      AS_PATH: 700
```

Syntax: show ip mbgp filtered-routes

To display MBGP filtered routes for IPv6.

```
Brocade#show ipv6 mbgp filtered-routes
Searching for matching routes, use ^C to quit...
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
      E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH m: NOT-INSTALLED-MULTIPATH
      S:SUPPRESSED F:FILTERED s:STALE
      Prefix          Next Hop          Metric    LocPrf    Weight Status
1   2001:db8:2003::/64 2001:db8:2003::7    0         100       0       EF
      AS_PATH: 700
2   2001:db8:2017::1/128 2001:db8:2003::7    0         100       0       EF
      AS_PATH: 700
3   2001:db8:2020::/64 2001:db8:2003::7    0         100       0       EF
      AS_PATH: 700
4   2001:db8:2070::/64 2001:db8:2003::7    0         100       0       EF
      AS_PATH: 700
```

Syntax: show ipv6 mbgp filtered-routes

Displaying MBGP flap statistics

To display MBGP flap statistics for IPv4.

```

Brocade#show ip mbgp flap-statistics
Total number of flapping routes: 10
      Status Code  >:best d:damped h:history *:valid
      Network      From          Flp Since      Reuse   Pnlty rIdx dBlk
*d 10.108.1.0/24   10.4.4.1      5  0 :2 :15 0 :42:0 3621 3  0
*d 10.101.1.0/24   10.4.4.1      5  0 :2 :15 0 :42:0 3621 3  0
*d 10.106.1.0/24   10.4.4.1      5  0 :2 :15 0 :42:0 3621 3  0
*d 10.10.1.0/24    10.4.4.1      5  0 :2 :15 0 :42:0 3621 3  0
*d 10.104.1.0/24   10.4.4.1      5  0 :2 :15 0 :42:0 3621 3  0
*d 10.109.1.0/24   10.4.4.1      5  0 :2 :15 0 :42:0 3621 3  0
*d 10.107.1.0/24   10.4.4.1      5  0 :2 :15 0 :42:0 3621 3  0
*d 10.105.1.0/24   10.4.4.1      5  0 :2 :15 0 :42:0 3621 3  0
*d 10.110.1.0/24   10.4.4.1      5  0 :2 :15 0 :42:0 3621 3  0
*d 10.103.1.0/24   10.4.4.1      5  0 :2 :15 0 :42:0 3621 3  0
    
```

Syntax: show ip mbgp flap-statistics

To display MBGP flap statistics for IPv6.

```

Brocade#show ipv6 mbgp flap-statistics
Total number of flapping routes: 14
      Status Code  >:best d:damped h:history *:valid
      Network      From          Flaps Since      Reuse   Path
h 2001:db8:2010::1/128 2001:db8:2004::1 1  0 :0 :49 0 :0 :0 100
h 2001:db8:1005::/64 2001:db8:2004::1 1  0 :0 :49 0 :0 :0 100
h 2001:db8:1003::/64 2001:db8:2004::1 1  0 :0 :49 0 :0 :0 100
h 2001:db8:1008::/64 2001:db8:2004::1 1  0 :0 :49 0 :0 :0 100
h 2001:db8:2008::/64 2001:db8:2004::1 1  0 :0 :49 0 :0 :0 100
h 2001:db8:1001::/64 2001:db8:2004::1 1  0 :0 :49 0 :0 :0 100
h 2001:db8:1006::/64 2001:db8:2004::1 1  0 :0 :49 0 :0 :0 100
h 2001:db8:1010::/64 2001:db8:2004::1 1  0 :0 :49 0 :0 :0 100
h 2001:db8:1004::/64 2001:db8:2004::1 1  0 :0 :49 0 :0 :0 100
h 2001:db8:2004::/64 2001:db8:2004::1 1  0 :0 :49 0 :0 :0 100
    
```

Syntax: show ipv6 mbgp flap-statistics

Displaying MBGP peer groups

To display MBGP Peer Groups for IPv4.

```
Brocade#show ip mbgp peer-group
1  BGP peer-group is group_one
    Address family : IPV4 Unicast
    Address family : IPV4 Multicast
    Address family : IPV6 Unicast
    Address family : IPV6 Multicast
    Route Filter Policies:
      Route-map: (out) wtest
    Members:
      IP Address: 2001:db8:2003::7, AS: 700
      IP Address: 2001:db8:2004::1, AS: 100
2  BGP peer-group is v4_group_one
    Address family : IPV4 Unicast
    Address family : IPV4 Multicast
    Address family : IPV6 Unicast
    Address family : IPV6 Multicast
    Members:
      IP Address: 10.4.3.7, AS: 700
      IP Address: 10.4.4.1, AS: 100
```

Syntax: show ip mbgp peer-group

To display the MBGP Peer Groups for IPv6.

```
Brocade#show ipv6 mbgp peer-group
1  BGP peer-group is group_one
    Address family : IPV4 Unicast
    Address family : IPV4 Multicast
    Address family : IPV6 Unicast
    Address family : IPV6 Multicast
    Route Filter Policies:
      Route-map: (out) wtest
    Members:
      IP Address: 2001:db8:2003::7, AS: 700
      IP Address: 2001:db8:2004::1, AS: 100
2  BGP peer-group is v4_group_one
    Address family : IPV4 Unicast
    Address family : IPV4 Multicast
    Address family : IPV6 Unicast
    Address family : IPV6 Multicast
    Members:
      IP Address: 10.4.3.7, AS: 700
      IP Address: 10.4.4.1, AS: 100
```

Syntax: show ipv6 mbgp peer-group

Clearing MBGP information

Use the commands in this section to clear MBGP information.

Clearing route flap dampening information

To clear MBGP IPv4 route flap dampening information, enter the following command.

```
Brocade#clear ip mbgp dampening
```

Syntax: clear ip mbgp dampening

To clear MBGP IPv6 route flap dampening information, enter the following command.

```
Brocade#clear ipv6 mbgp dampening
```

Syntax: clear ipv6 mbgp dampening

To clear MBGP IPv4 route local information, enter the following command.

```
Brocade#clear ip mbgp local
```

Syntax: clear ip mbgp local

To clear MBGP IPv6 route local information, enter the following command.

```
Brocade#clear ipv6 mbgp local
```

Syntax: clear ipv6 mbgp local

To clear MBGP IPv4 neighbor information, enter the following command.

```
Brocade#clear ip mbgp neighbor
```

Syntax: clear ip mbgp neighbor

To clear MBGP IPv6 route neighbor information, enter the following command.

```
Brocade#clear ipv6 mbgp neighbor
```

Syntax: clear ipv6 mbgp neighbor

Clearing route flap statistics

To clear MBGP IPv4 route flap statistics, enter the following command.

```
Brocade#clear ip mbgp flap-statistics
```

Syntax: clear ip mbgp flap-statistics

To clear MBGP IPv6 route flap statistics, enter the following command.

```
Brocade#clear ipv6 mbgp flap-statistics
```

Syntax: clear ipv6 mbgp flap-statistics

Clearing local information

To clear MBGP IPv4 local information, enter the following command.

```
Brocade#clear ip mbgp local
```


Syntax: `clear ip mbgp local`

To clear MBGP IPv6 local information, enter the following command.

```
Brocade#clear ipv6 mbgp local
```

Syntax: `clear ipv6 mbgp local`

Clearing BGP neighbor information

To clear MBGP IPv4 BGP neighbor, enter the following command.

```
Brocade#clear ip mbgp neighbor
```

Syntax: `clear ip mbgp neighbor`

To clear MBGP IPv6 BGP neighbor, enter the following command.

```
Brocade#clear ipv6 mbgp neighbor
```

Syntax: `clear ipv6 mbgp neighbor`

Clearing BGP routes

To clear MBGP IPv4 BGP routes, enter the following command.

```
Brocade#clear ip mbgp routes
```

Syntax: `clear ip mbgp routes`

To clear MBGP IPv6 BGP routes, enter the following command.

```
Brocade#clear ipv6 mbgp routes
```

Syntax: `clear ipv6 mbgp routes`

Clearing traffic counters

To clear MBGP IPv4 BGP traffic counters, enter the following command.

```
Brocade#clear ip mbgp traffic
```

Syntax: `clear ip mbgp traffic`

To clear MBGP IPv6 BGP traffic counters, enter the following command.

```
Brocade#clear ipv6 mbgp traffic
```

Syntax: `clear ipv6 mbgp traffic`

Clearing MBGP information

Multi-VRF

Overview of Multi-VRF

Table 60 displays the individual Brocade devices and the Multi-VRF features they support.

TABLE 60 Supported Brocade Multi-VRF features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
Multi-VRF IPv4	Yes	Yes	No	Yes	Yes	Yes	Yes
Multi-VRF IPv6	Yes	Yes	No	No	Yes	No	Yes
Multi-VRF for IPv4 Unicast - Static routing	Yes	Yes	No	Yes	Yes	Yes	Yes
Multi-VRF for IPv4 Unicast - RIP	Yes	Yes	No	Yes	Yes	Yes	Yes
Multi-VRF for IPv4 Unicast - OSPF	Yes	Yes	No	Yes	Yes	Yes	Yes
Multi-VRF for IPv4 Unicast - BGP	Yes	Yes	No	No	Yes	Yes	Yes
Multi-VRF for IBGP	Yes	Yes	No	No	Yes	Yes	Yes

Virtual Private Networks (VPNs) have been a key application in networking for a long time. Many possible solutions have been proposed over the last several years. Among the many requirements driving this need have been the need for secure transport of sensitive information and controlling information access to those who need it. In large enterprises, particularly those distributed across disparate locations, sensitivity to information pertinent to a department drives the requirement for an IT manager to logically demarcate information flows to be within that department. The need for privacy is another driver behind deployment of VPN solutions.

VPN technologies can be broadly classified into two types:

- secure VPNs
- trusted VPNs.

Secure VPNs require traffic to be encrypted and authenticated and are most important when communication occurs across an infrastructure that is not trusted (e.g. over the public Internet). The most commonly deployed types of secure VPNs are IPsec VPNs and SSL (Secure Sockets Layer) VPNs. Both offer encryption of data streams. While IPsec VPNs operate at the network layer and require special client software, SSL VPNs are more application centric and can generally work with any SSL-enabled browser.

Trusted VPNs ensure integrity and privacy of the data transfers but do not provide any encryption capabilities. Trusted VPNs are most useful when the goal is to leverage a shared infrastructure to allow virtual networks to be built. Examples of such “trusted VPN” technologies include IP or MPLS based Layer 2 VPNs (VPLS, VLL), BGP or MPLS VPNs, ATM or Frame Relay circuits, Layer 2 Tunneling Protocol (L2TP), etc. In short, all these technologies allow a shared infrastructure to be used without compromising the privacy needs of different users or user groups.

Central to Multi-VRF is the ability to maintain multiple “Virtual Routing and Forwarding” (VRF) tables on the same Provider Edge (PE) Router. Multi-VRF uses multiple instances of a routing protocol such as BGP or OSPF to exchange route information for a VPN among peer PE routers. The Multi-VRF capable PE router maps an input customer interface to a unique VPN instance. The router maintains a different VRF table for each VPN instance on that PE router. Multiple input interfaces may also be associated with the same VRF on the router, if they connect to sites belonging to the same VPN. This input interface can be a physical interface or a virtual Ethernet interface on a port.

Multi-VRF routers communicate with one another by exchanging route information in the VRF table with the neighboring PE router. This exchange of information among the PE routers is done using BGP or OSPF. The PE routers that communicate with one another should be directly connected at Layer 3. Customers connect to PE routers in the network using Customer Edge (CE) routers as shown in [Figure 23](#).


Different routing protocols may be used for exchanging information between the PE-PE routers and between the adjacent PE-CE routers. Further, different PE-CE routing protocols may be used in a VPN to exchange customer routes with the various customer sites in that VPN. The routes learned from the PE-CE protocol are added to the corresponding VRF instance and redistributed through the PE-PE protocol to the peer router in the backbone network.

[Figure 23](#) depicts a network using Multi-VRF to provide connectivity among sites that belong to multiple VPNs. To share the VPN route table information with remote PEs, each PE creates separate virtual interfaces and run different instances of the PE-PE routing protocol for each VRF.

NOTE

Some vendors also use the terminology of “Multi-VRF CE” or “VRF-Lite” for this technology.

FIGURE 23 A Network deploying Multi-VRF

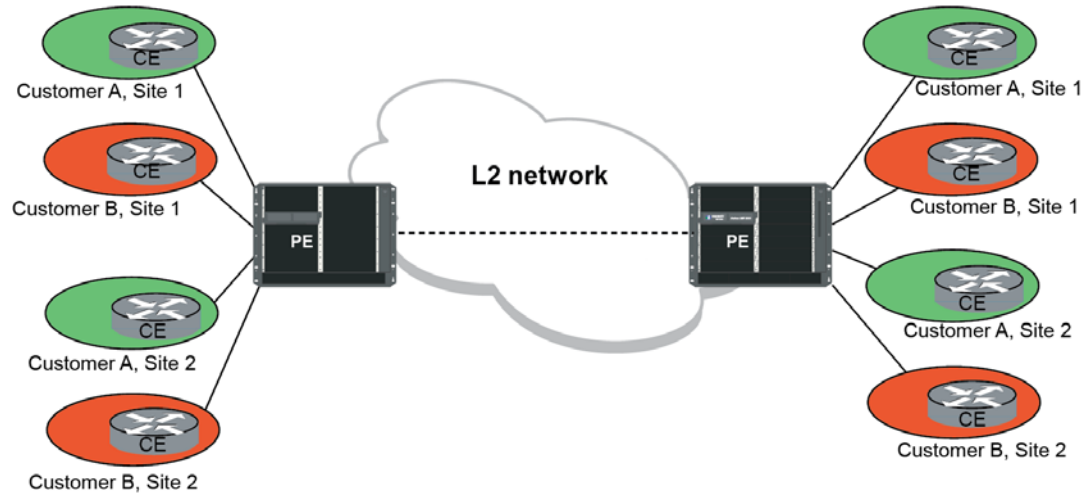

Multi-VRF and BGP or MPLS VPNs share some common aspects. For instance, in both cases the edge router maintains a VRF for all directly connected sites that are part of the same VPN. Also in both cases, the PE and CE routers share customer route information using a variety of PE-CE routing protocols, such as OSPF, RIP, E-BGP or static routes. Overlapping address spaces among different VPNs are allowed for both.

There are however, several differences between the two VPN technologies. The fundamental difference between the two technologies is that Multi-VRF requires that peering PE routers be directly connected at Layer 3. A Layer 2 network however, can be present between these directly-connected PE routers. BGP or MPLS VPNs do not have this restriction. In BGP or MPLS VPNs, the MPLS network determines the path to the peer router. In order to distinguish between devices with overlapping IP addresses, route targets are used in BGP or MPLS VPNs. Multi-VRF uses the input interface to uniquely identify the associated VPN, which is why the two PE routers should be directly connected at Layer 3. [Table 61](#) compares Multi-VRF and BGP or MPLS VPNs in more detail

TABLE 61 Comparison between Multi-VRF and BGP or MPLS VPNs

	Multi-VRF	BGP or MPLS VPN
PE-PE Routing Protocol	BGP, OSPF, RIP or Static routing	BGP
PE-CE Routing Protocol	BGP, OSPF, RIP or Static routing	BGP, OSPF, RIP or Static routing
PE-PE Routing Connectivity	PE Routers should be directly connected at Layer 3	PE Routers are interconnected through an IP or MPLS Network
Determination of VRF Instance	Based on input interface only	Based on route target (network interface) or input interface (CE)
Number of Routing Protocol Instances (PE to PE)	Unique routing protocol instance for each VRF instance	Single routing protocol instance
Controlling Advertisement of Routes	No need for route targets to be used. Advertisement on one VRF is independent of advertisement in other VRFs.	Route targets used to identify the customer VPN in advertised routes. The destination PE filters the routes advertised from a peer PE by comparing the route target with the VPNs maintained locally on that PE.
Number of VRF Instances	Unique VRF instance for each VPN	Unique VRF instance for each VPN

TABLE 61 Comparison between Multi-VRF and BGP or MPLS VPNs

Overlapping Private Addresses allowed over VPNs?	Yes	Yes
Scalability	Reasonably Scalable	Highly Scalable
MPLS Required	No	Yes

Benefits and applications of Multi-VRF

Multi-VRF provides a reliable mechanism for a network administrator to maintain multiple virtual routers on the same device. The goal of providing isolation among different VPN instances is accomplished without the overhead of heavyweight protocols used in secure VPN technologies or the administrative complexity of MPLS VPNs. It is particularly effective when operational staff has expertise in managing IP networks but may not have the same familiarity in managing MPLS networks. Overlapping address spaces can be maintained among the different VPN instances.

As the two examples in the following sections demonstrate, the simplicity of Multi-VRF allows for several interesting applications.

Example of Multi-VRF usage in an enterprise data center


[Figure 24](#) displays an example of Multi-VRF in an enterprise data center. Each server farm is used for a dedicated application or set of applications. For security reasons, only specific servers in this farm may be allowed to communicate with other servers. Access in some cases may be completely prohibited whereas in other cases access may be allowed through the firewall. Each server is placed on a different subnet. To ensure optimal performance of the data center, trusted servers should be allowed to communicate directly whereas un-trusted servers should not be allowed to directly communicate at all. While [Figure 24](#) shows a limited number of servers; in practice, the number of servers used for this application can run from the tens to the hundreds.

A common way to configure this example is by using Policy Based Routing (PBR). However, because PBR can become very difficult to administer and manage as the network begins to grow, it may require frequent configuration changes which is prone to introducing operator errors.

MPLS VPNs can also be used to configure this example. However, it may be too heavy-weight for what needs to be accomplished in this scenario. In addition, operational staff in enterprise data centers may not always be conversant with administering MPLS.

Secure VPN technologies like IP-Sec are not required here because the infrastructure is already secure. Therefore, the overhead of encryption is not needed.

Multi-VRF is an ideal solution for an application like this example. The servers that are allowed to communicate can be placed in the same Multi-VRF instance. If server access is to be controlled at a more granular level (e.g. at the application layer), then traffic from specific applications on that server can be sent on a specific tagged interface to the router in Cluster A. As shown in [Figure 24](#), a highly redundant cluster is achieved by ensuring that no single node becomes a point of failure within this network.

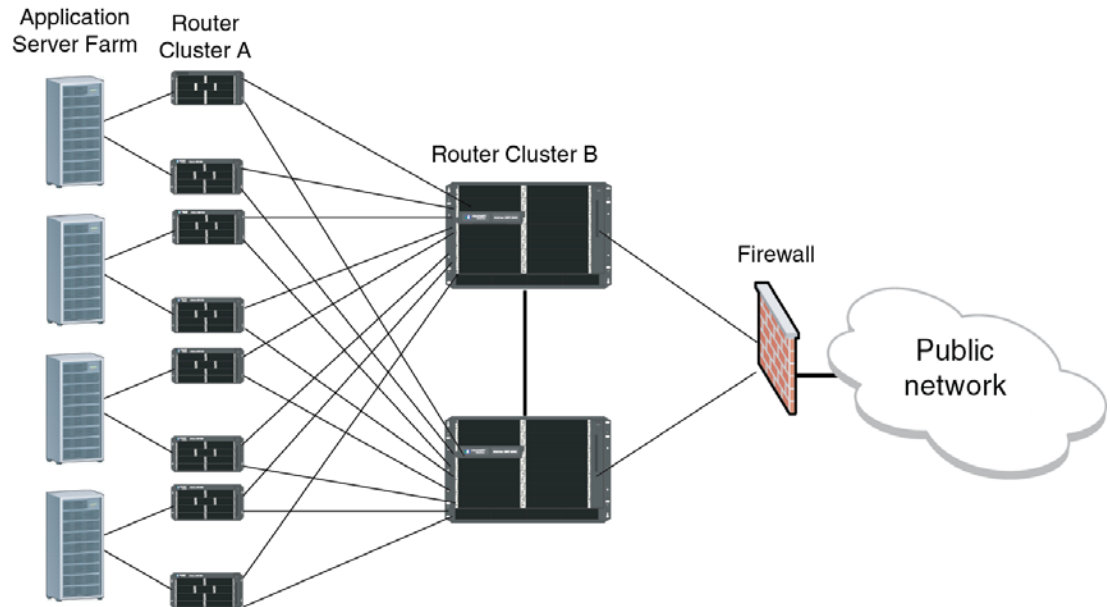
FIGURE 24 Example of Multi-VRF usage in an enterprise data center application

Example of Multi-VRF usage in a service provider network

Figure 25 depicts the use of Multi-VRF in a typical service provider application. This service provider owns a Layer 2 network connecting the PEs and offers managed VPN services to end users. As shown in Figure 25, a host of PE-CE routing protocols can be used—E-BGP, OSPF, RIP or Static Routing.

It is also possible that a site (such as site 2) may have several customers in close geographical proximity as in a business park. This may warrant a dedicated MTU to be placed on-site, which is owned by the service provider. In such a scenario, the different customers may share the same MTU and still use overlapping private address spaces. The MTU is a switch that adds a unique VLAN tag for each connected customer. The PE router (labeled PE2) maps a Layer 3 tagged interface to a unique VRF. Thus, it could be sharing routes using OSPF with one CE and just using Static Routing with another CE (both of these may occur over different virtual interfaces on the same physical interface).

Layer 3 BGP or MPLS VPNs could also be used in a network such as the above. However, if one of the PE routers does not support MPLS or if the operational staff is not conversant with MPLS operations, Multi-VRF provides an alternative mechanism to achieve the same objective.

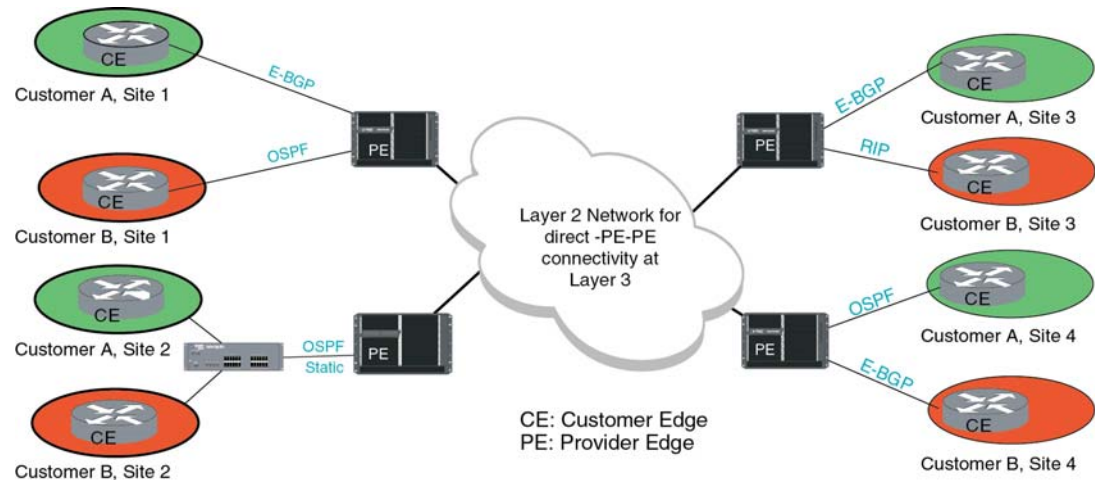FIGURE 25 Multi-VRF in a service provider application

Summary

Multi-VRF provides a reliable mechanism for trusted virtual private networks to be built over a shared infrastructure. The ability to maintain multiple virtual routing or forwarding tables allows overlapping private IP addresses to be maintained across VPNs and accomplish goals very similar to that those of more complex VPN technologies such as BGP or MPLS VPNs.


Configuring Multi-VRF

Configuration of the Multi-VRF feature uses the following commands that are defined in *Configuring BGP VPNs on a PE in the Multi-Service IronWare MPLS Configuration Guide*.

- Defining a VRF routing instance – This procedure describes how to define a VRF using the **vrf** command.
- Assigning a Route Distinguisher to a VRF – This procedure describes how to define a Route Distinguisher (RD). The RD sets a unique identity to an instance of a VRF. As such, it allows the same IP address to be used in different VPNs without creating any conflict.
- Assigning a VRF routing instance to an interface – This procedure describes how to assign a VRF to one or more virtual or physical interfaces.
- Assigning a VRF routing instance to a LAG interface – This procedure describes how to assign a VRF to a LAG interface.

The main difference between configurations described in *Configuring BGP VPNs on a PE* and Multi-VRF is that there is no MPLS configuration required for Multi-VRF. This section provides a common Multi-VRF configuration with two possible methods to achieve that configuration.

The diagram in [Figure 26](#) shows a typical network utilizing the multi-VRF feature to implement layer 3 VPNs across 2 directly connected (at layer3) PE routers.

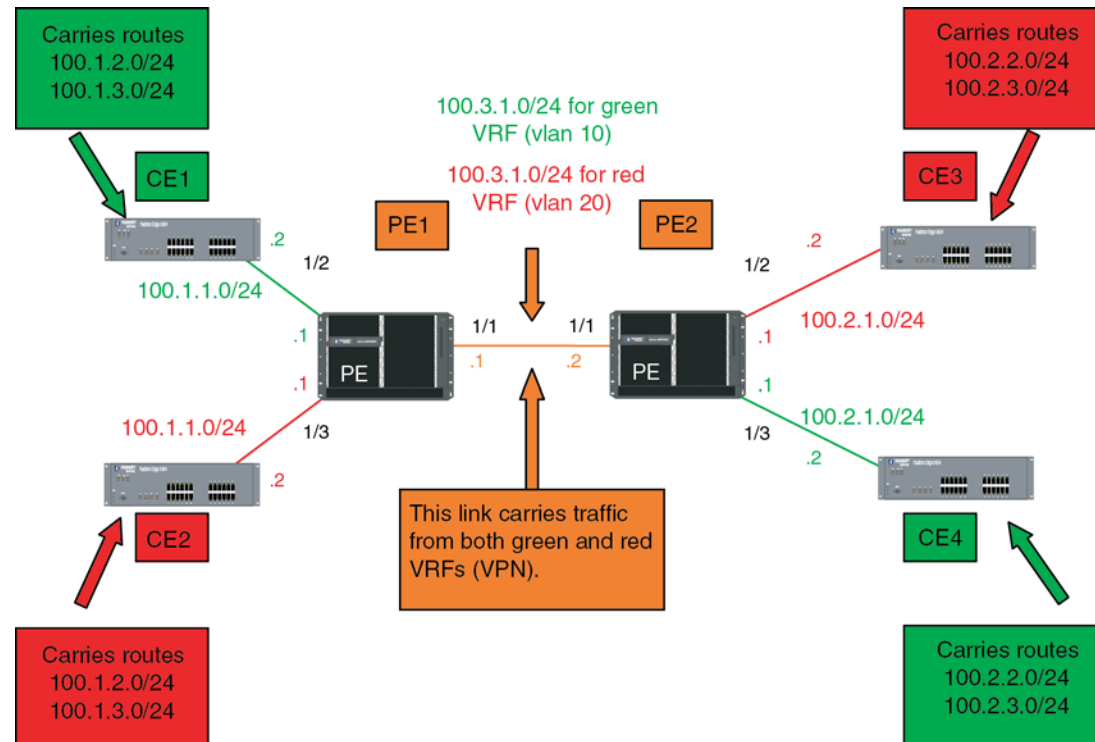FIGURE 26 Example network topology with both RED and GREEN VPNs

In the diagram in [Figure 26](#), CE1 and CE4 are customer edge (CE) routers for the “green” VPN, while CE2 and CE3 belong to “red” VPN. These CE routers can be any routers or layer 3 switches that are capable of running one or many dynamic routing protocols such as BGP, OSPF or RIP or even simple static routing.

The 2 PE routers have to be routers that are capable of supporting VRF routing (either with or without MPLS support). In this example, we use two Brocade Brocade NetIron XMR devices. They connect all four CE routers together with a single link between the two of them. Note that this single link between the 2 PEs could also be replaced by a layer-2 switched network if direct physical connection between the PEs is not possible. The only requirement for the connections is that the 2 PEs have to be “directly connected” at layer 3.

Both the customer RED and customer GREEN networks (or VPN) consist of internal routes with overlapping IP address ranges. Thus, traffic communication within each customers’ VPN across the 2 PE routers, i.e. between CE1 and CE4, and between CE2 and CE3, must be separated using VRFs.


The following sections provide two examples of how to set-up the network shown in [Figure 26](#) using different routing protocol configurations:

- **Configuration 1** – eBGP Configured between PE1 and PE2 with OSPF (Area 0) Configured between PEs and CEs
- **Configuration 2** – OSPF (Area 0) Configured between PE1 and PE2 with OSPF (Area 1 and Area 2) Configured between PEs and CEs

Configuration 1

As shown in [Figure 27](#), eBGP is configured between PE1 and PE2 and OSPF (Area 0) is configured between PEs and CEs.

FIGURE 27 eBGP configured between PE1 and PE2 with OSPF (Area 0) configured between PEs and CEs

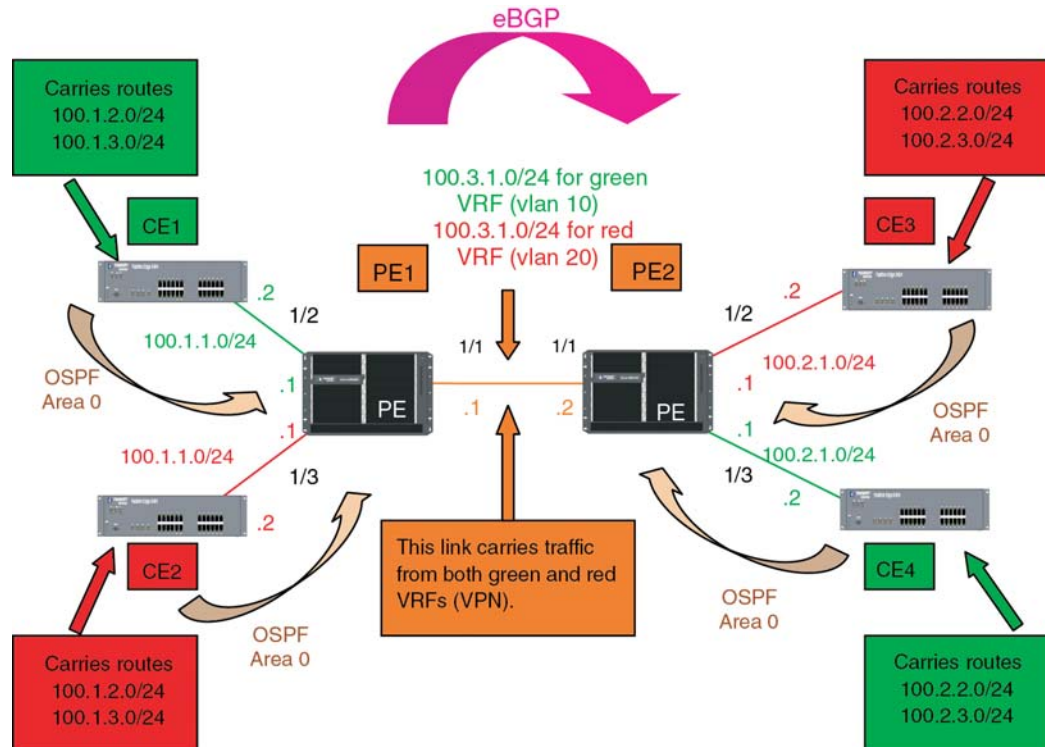

The following configuration examples for PE1, PE2, CE1, CE2, CE3, and CE4 describe how to create the example shown in [Figure 27](#).

PE1 configuration

In this configuration, VLANs 10 and 20 are created as a link on a tagged port (e 1/10) between PE1 and PE2. Two VRFs (“RED” and “GREEN”) are then defined with each having a unique Route Distinguisher (RD). VRF “Green” is assigned an RD value of 10:10, and VRF “Red” is assigned an RD value of 20:20.

In the BGP configuration, PE1 is defined in Local AS1. VRFs “Green” and “Red” are configured and both “Green” and “Red” have the same IP network address assigned (10.3.1.2/24). This is possible because each of the BGP VRF instances have their own separate BGP tables. This is also the same IP network address that will be assigned to VRFs “Green” and “Red” on PE2 within Local AS 2. Redistribution of OSPF routes from PE1’s CE peers is enabled to all for their advertisement to PE2.

Both VRFs are configured in Area “0” and directed to redistribute their routes to BGP. The physical interfaces (e 1/2 and e 1/3) to the CEs are assigned to the correct VRF and are configured with the same IP address (10.1.1.1/24) and OSPF Area “0”.

The virtual Interfaces (ve10 and ve20) are configured with the same IP address (10.3.1.1/24) and for VRF forwarding in the appropriate VRF (Green or Red).

```

Brocade(config)# vlan 10
Brocade(config-vlan-10)# tagged e 1/1
Brocade(config-vlan-10)# router-interface ve 10
Brocade(config-vlan-10)# vlan 20
Brocade(config-vlan-20)# tagged e 1/1
Brocade(config-vlan-20)# router-interface ve 20
Brocade(config-vlan-20)# exit
Brocade(config)# vrf green
Brocade(config-vrf-green) rd 10:10
Brocade(config-vrf-green) vrf red
Brocade(config-vrf-red) rd 20:20
Brocade(config-vrf-red) exit-vrf
Brocade(config)# router bgp
Brocade(config-bgp)# local-as 1
Brocade(config-bgp)# address-family ipv4 unicast vrf green
Brocade(config-bgp-ipv4u-vrf)# neighbor 10.3.1.2 remote-as 2
Brocade(config-bgp-ipv4u-vrf)# network 10.3.1.0/24
Brocade(config-bgp-ipv4u-vrf)# redistribute ospf match internal
Brocade(config-bgp-ipv4u-vrf)# redistribute ospf match external1
Brocade(config-bgp-ipv4u-vrf)# redistribute ospf match external2
Brocade(config-bgp-ipv4u-vrf)# exit
Brocade(config)# router bgp
Brocade(config-bgp)# address-family ipv4 unicast vrf red
Brocade(config-bgp-ipv4u-vrf)# neighbor 10.3.1.2 remote-as 2
Brocade(config-bgp-ipv4u-vrf)# network 10.3.1.0/24
Brocade(config-bgp-ipv4u-vrf)# redistribute ospf match internal
Brocade(config-bgp-ipv4u-vrf)# redistribute ospf match external1
Brocade(config-bgp-ipv4u-vrf)# redistribute ospf match external2
Brocade(config-bgp-ipv4u-vrf)# exit
Brocade(config)# router ospf vrf green
Brocade(config-ospf-router-vrf-green)# area 0
Brocade(config-ospf-router-vrf-green)# redistribution bgp
Brocade(config-ospf-router-vrf-green)# exit
Brocade(config)# router ospf vrf red
Brocade(config-ospf-router-vrf-red)# area 0
Brocade(config-ospf-router-vrf-red)# redistribution bgp
Brocade(config-ospf-router-vrf-red)# exit
Brocade(config)# interface ethernet 1/2
Brocade(config-if-e1000-1/2)# vrf forwarding green
Brocade(config-if-e1000-1/2)# ip ospf area 0
Brocade(config-if-e1000-1/2)# ip address 10.1.1.1/24
Brocade(config-if-e1000-1/2)# interface ethernet 1/3
Brocade(config-if-e1000-1/3)# vrf forwarding red
Brocade(config-if-e1000-1/3)# ip ospf area 0
Brocade(config-if-e1000-1/3)# ip address 10.1.1.1/24
Brocade(config-if-e1000-1/3)# exit
Brocade(config)# interface ve 10
Brocade(config-vif-10)# vrf forwarding green
Brocade(config-vif-10)# ip address 10.3.1.1/24
Brocade(config-vif-10)# Interface ve 20
Brocade(config-vif-10)# vrf forwarding red
Brocade(config-vif-10)# ip address 10.3.1.1/24

```

PE2 Configuration:

The PE2 configuration is a mirror image of the PE1 configuration. The only difference is that the BGP neighbor is port 1/1 on PE1 which has an IP address of 10.3.1.1. This is used in the BGP configuration.

Configuring Multi-VRF

```
Brocade(config)# vlan 10
Brocade(config-vlan-10)# tagged e 1/1
Brocade(config-vlan-10)# router-interface ve 10
Brocade(config-vlan-10)# vlan 20
Brocade(config-vlan-20)# tagged e 1/1
Brocade(config-vlan-20)# router-interface ve 20
Brocade(config-vlan-20)# exit-vrf
Brocade(config)# vrf green
Brocade(config-vrf-green) rd 10:10
Brocade(config-vrf-green) vrf red
Brocade(config-vrf-red) rd 20:20
Brocade(config-vrf-red) exit
Brocade(config)# router bgp
Brocade(config-bgp)# local-as 1
Brocade(config-bgp)# address-family ipv4 unicast vrf green
Brocade(config-bgp-ipv4u-vrf)# neighbor 10.3.1.1 remote-as 2
Brocade(config-bgp-ipv4u-vrf)# network 10.3.1.0/24
Brocade(config-bgp-ipv4u-vrf)# redistribute ospf match internal
Brocade(config-bgp-ipv4u-vrf)# redistribute ospf match external1
Brocade(config-bgp-ipv4u-vrf)# redistribute ospf match external2
Brocade(config-bgp-ipv4u-vrf)# exit
Brocade(config)# router bgp
Brocade(config-bgp)# address-family ipv4 unicast vrf red
Brocade(config-bgp-ipv4u-vrf)# neighbor 10.3.1.1 remote-as 2
Brocade(config-bgp-ipv4u-vrf)# network 10.3.1.0/24
Brocade(config-bgp-ipv4u-vrf)# redistribute ospf match internal
Brocade(config-bgp-ipv4u-vrf)# redistribute ospf match external1
Brocade(config-bgp-ipv4u-vrf)# redistribute ospf match external2
Brocade(config-bgp-ipv4u-vrf)# exit
Brocade(config)# router ospf vrf green
Brocade(config-ospf-router-vrf-green)# area 0
Brocade(config-ospf-router-vrf-green)# redistribution bgp
Brocade(config-ospf-router-vrf-green)# exit
Brocade(config)# router ospf vrf red
Brocade(config-ospf-router-vrf-red)# area 0
Brocade(config-ospf-router-vrf-red)# redistribution bgp
Brocade(config-ospf-router-vrf-red)# exit
Brocade(config)# interface ethernet 1/2
Brocade(config-if-e1000-1/2)# vrf forwarding green
Brocade(config-if-e1000-1/2)# ip ospf area 0
Brocade(config-if-e1000-1/2)# ip address 10.1.1.1/24
Brocade(config-if-e1000-1/2)# interface ethernet 1/3
Brocade(config-if-e1000-1/3)# vrf forwarding red
Brocade(config-if-e1000-1/3)# ip ospf area 0
Brocade(config-if-e1000-1/3)# ip address 10.1.1.1/24
Brocade(config-if-e1000-1/3)# exit
Brocade(config)# interface ve 10
Brocade(config-vif-10)# vrf forwarding green
Brocade(config-vif-10)# ip address 10.3.1.1/24
Brocade(config-vif-10)# Interface ve 20
Brocade(config-vif-10)# vrf forwarding red
Brocade(config-vif-10)# ip address 10.3.1.1/24
```

CE 1 and CE 2 configurations

The CE1 and CE2 router configurations are exactly the same. Both are configured in OSPF Area 0 with route redistribution enabled. The IP addresses: 10.1.2.1/32 and 10.1.3.1/32 are configured for the Loopback1 interface allowing them to carry routes from these networks.

```

Brocade(config)# router ospf
Brocade(config-ospf-router)# area 0
Brocade(config-ospf-router)# redistribution connected
Brocade(config-ospf-router)# exit
Brocade(config)# interface loopback 1
Brocade(config-lbif-1)# ip address 10.1.2.1/32
Brocade(config-lbif-1)# ip address 10.1.3.1/32
Brocade(config-lbif-1)# interface ethernet 1/1
Brocade(config-if-e1000-1/1)# ip ospf area 0
Brocade(config-if-e1000-1/1)# ip address 10.1.1.2/24

```

CE 3 and CE 4 configurations

The CE3 and CE4 router configurations are exactly the same. Both are configured in OSPF Area 0 with route redistribution enabled. The IP addresses: 10.2.2.1/32 and 10.2.3.1/32 are configured for the Loopback1 interface allowing them to carry routes from these networks.

```


Brocade(config)# router ospf
Brocade(config-ospf-router)# area 0
Brocade(config-ospf-router)# redistribution connected
Brocade(config-ospf-router)# exit
Brocade(config)# interface loopback 1
Brocade(config-lbif-1)# ip address 10.2.2.1/32
Brocade(config-lbif-1)# ip address 10.2.3.1/32
Brocade(config-lbif-1)# interface ethernet 1/1
Brocade(config-if-e1000-1/1)# ip ospf area 0
Brocade(config-if-e1000-1/1)# ip address 10.2.1.2/24

```

Configuration 2

As shown in [Figure 28](#), OSPF (Area 0) is configured between PE1 and PE2 and OSPF (Area 1 and Area 2) is configured between PEs and CEs. The biggest difference between this configuration and Configuration 1 is that OSPF is used between the 2 PEs instead of eBGP. Otherwise most of the configuration is the same as Configuration 1.

FIGURE 28 OSPF (Area 0) configured between PE1 and PE2 with OSPF (Area 1 and Area 2) configured between PEs and CEs

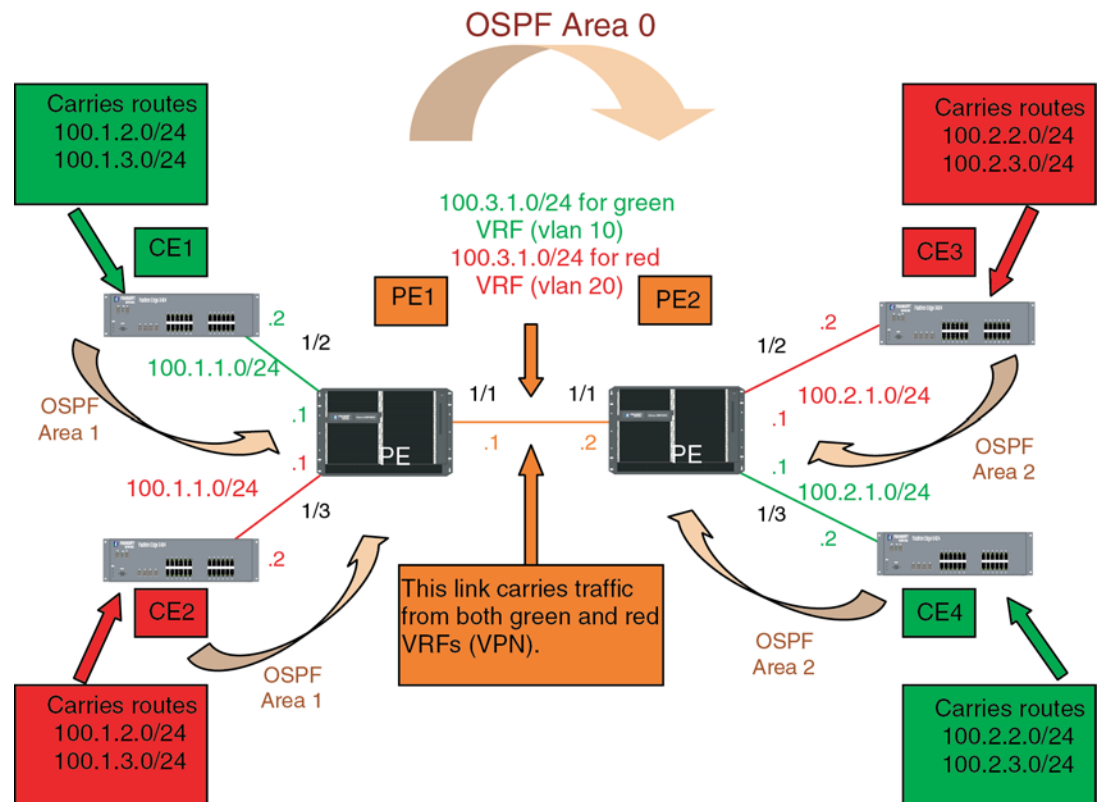

The following configuration examples for PE1, PE2, CE1, CE2, CE3, and CE4 describe how to create the example shown in Figure 28.

PE1 configuration:

In this configuration, VLANs 10 and 20 are created as a link on a tagged port (e 1/10) between PE1 and PE2. Two VRFs (“RED” and “GREEN”) are then defined with each having a unique Route Distinguisher (RD). VRF “Green” is assigned an RD value of 10:10, and VRF “Red” is assigned an RD value of 20:20.

Because OSPF is the only routing protocol used in this set-up, multiple OSPF areas are used. Area 0 is configured between the two PEs. Area 1 is configured PE1 and CE’s 1 and 2. Area 0 is configured between the two PEs. Area 2 is configured PE2 and CE’s 3 and 4.

The virtual Interfaces (ve10 and ve20) are configured with the same IP address (10.3.1.1/24) and for VRF forwarding in the appropriate VRF (Green or Red). Both are also configured in OSPF Area 0.

```

Brocade(config)# vlan 10
Brocade(config-vlan-10)# tagged e 1/1
Brocade(config-vlan-10)# router-interface ve 10
Brocade(config-vlan-10)# vlan 20
Brocade(config-vlan-20)# tagged e 1/1
Brocade(config-vlan-20)# router-interface ve 20
Brocade(config-vlan-20)# exit-vrf
Brocade(config)# vrf green
Brocade(config-vrf-green) rd 10:10
Brocade(config-vrf-green) vrf red
    
```

```

Brocade(config-vrf-red) rd 20:20
Brocade(config-vrf-red) exit-vrf
Brocade(config)# router ospf vrf green
Brocade(config-ospf-router-vrf-green)# area 0
Brocade(config-ospf-router-vrf-green)# area 1
Brocade(config-ospf-router-vrf-green)# exit
Brocade(config)# router ospf vrf red
Brocade(config-ospf-router-vrf-red)# area 0
Brocade(config-ospf-router-vrf-red)# area 1
Brocade(config-ospf-router-vrf-red)# exit
Brocade(config)# interface ethernet 1/2
Brocade(config-if-e1000-1/2)# vrf forwarding green
Brocade(config-if-e1000-1/2)# ip ospf area 1
Brocade(config-if-e1000-1/2)# ip address 10.1.1.1/24
Brocade(config-if-e1000-1/2)# interface ethernet 1/3
Brocade(config-if-e1000-1/3)# vrf forwarding red
Brocade(config-if-e1000-1/3)# ip ospf area 1
Brocade(config-if-e1000-1/3)# ip address 10.1.1.1/24
Brocade(config-if-e1000-1/3)# exit
Brocade(config)# interface ve 10
Brocade(config-vif-10)# vrf forwarding green
Brocade(config-vif-10)# ip ospf area 0
Brocade(config-vif-10)# ip address 10.3.1.1/24
Brocade(config-vif-10)# Interface ve 20
Brocade(config-vif-20)# vrf forwarding red
Brocade(config-vif-20)# ip ospf area 0
Brocade(config-vif-20)# ip address 10.3.1.1/24

```

PE2 configuration:

The PE2 configuration is a mirror image of the PE1 configuration. The only difference is that PE2 connects to CE3 and CE 4 in OSPF Area 2.

```

Brocade(config)# vlan 10
Brocade(config-vlan-10)# tagged e 1/1
Brocade(config-vlan-10)# router-interface ve 10
Brocade(config-vlan-10)# vlan 20
Brocade(config-vlan-20)# vlan 20
Brocade(config-vlan-20)# tagged e 1/1
Brocade(config-vlan-20)# router-interface ve 20
Brocade(config-vlan-20)# exit
Brocade(config)# vrf green
Brocade(config-vrf-green) rd 10:10
Brocade(config-vrf-green) vrf red
Brocade(config-vrf-red) rd 20:20
Brocade(config-vrf-red) exit
Brocade(config)# router ospf vrf green
Brocade(config-ospf-router-vrf-green)# area 0
Brocade(config-ospf-router-vrf-green)# area 2
Brocade(config-ospf-router-vrf-green)# exit
Brocade(config)# router ospf vrf red
Brocade(config-ospf-router-vrf-red)# area 0
Brocade(config-ospf-router-vrf-red)# area 2
Brocade(config-ospf-router-vrf-red)# exit
Brocade(config)# interface ethernet 1/2
Brocade(config-if-e1000-1/2)# vrf forwarding red
Brocade(config-if-e1000-1/2)# ip ospf area 2
Brocade(config-if-e1000-1/2)# ip address 10.2.1.1/24
Brocade(config-if-e1000-1/2)# interface ethernet 1/3

```

Configuring Multi-VRF

```
Brocade(config-if-e1000-1/3)# vrf forwarding green
Brocade(config-if-e1000-1/3)# ip ospf area 2
Brocade(config-if-e1000-1/3)# ip address 10.2.1.1/24
Brocade(config-if-e1000-1/3)# exit
Brocade(config)# interface ve 10
Brocade(config-vif-10)# vrf forwarding green
Brocade(config-vif-10)# ip ospf area 0
Brocade(config-vif-10)# ip address 10.3.1.1/24
Brocade(config-vif-10)# Interface ve 20
Brocade(config-vif-20)# vrf forwarding red
Brocade(config-vif-20)# ip ospf area 0
Brocade(config-vif-20)# ip address 10.3.1.1/24
```

CE 1 and CE 2 configurations

The CE1 and CE2 router configurations are exactly the same. Both are configured in OSPF Area 1 with route redistribution enabled. The IP addresses: 10.1.2.1/24 and 10.1.3.1/24 are configured for the Loopback1 interface allowing them to carry routes from these networks.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# area 1
Brocade(config-ospf-router)# redistribution connected
Brocade(config-ospf-router)# exit
Brocade(config)# interface loopback 1
Brocade(config-lbif-1)# ip address 10.1.2.1/24
Brocade(config-lbif-1)# ip address 10.1.3.1/24
Brocade(config-lbif-1)# interface ethernet 1/1
Brocade(config-if-e1000-1/1)# ip ospf area 1
Brocade(config-if-e1000-1/1)# ip address 10.1.1.2/24
```

CE 3 and CE 4 configurations

The CE3 and CE4 router configurations are exactly the same. Both are configured in OSPF Area 2 with route redistribution enabled. The IP addresses: 10.2.2.1/24 and 10.2.3.1/24 are configured for the Loopback1 interface allowing them to carry routes from these networks

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# area 2
Brocade(config-ospf-router)# redistribution connected
Brocade(config-ospf-router)# exit
Brocade(config)# interface loopback 1
Brocade(config-lbif-1)# ip address 10.1.2.1/24
Brocade(config-lbif-1)# ip address 10.1.3.1/24
Brocade(config-lbif-1)# interface ethernet 1/1
Brocade(config-if-e1000-1/1)# ip ospf area 2
Brocade(config-if-e1000-1/1)# ip address
```


Inter-VRF Routing

Table 62 displays the individual Brocade devices and the Inter-VRF Routing features they support.


TABLE 62 Supported Brocade Inter-VRF features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
Inter-VRF Routing IPv4	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Inter-VRF Routing IPv6	Yes	Yes	Yes	Yes	Yes	Yes	Yes

Inter-VRF routing overview


Inter-VRF routing feature permits routes from one VRF to import into other VRFs. This feature is useful in cases where all the VRFs share the same path to reach the external domain, but each VRF can still keep its internal routing information limited to its own VRF. Currently, Brocade Netron series routers permit static routes to be configured across VRFs. User can configure to import routes from one VRF to other VRFs through configuration. Figure 29 depicts a network using inter-VRF to provide connectivity among sites that belong to multiple VPNs. To share the VPN routing table information with remote PEs, each PE creates separate virtual interfaces and runs different instances of the PE-PE routing protocol for each VRF.

FIGURE 29 A Network deploying Inter-VRF

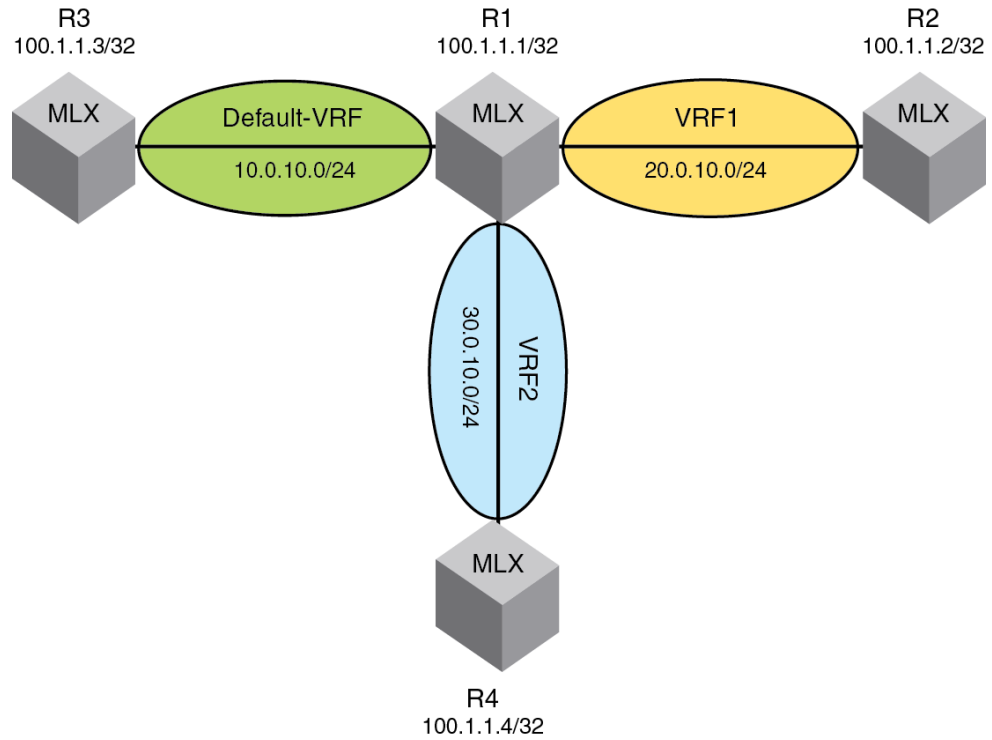


Following are the route entries and routing tables in Router R1.

FIGURE 30 Router R1 route-entries and route-tables

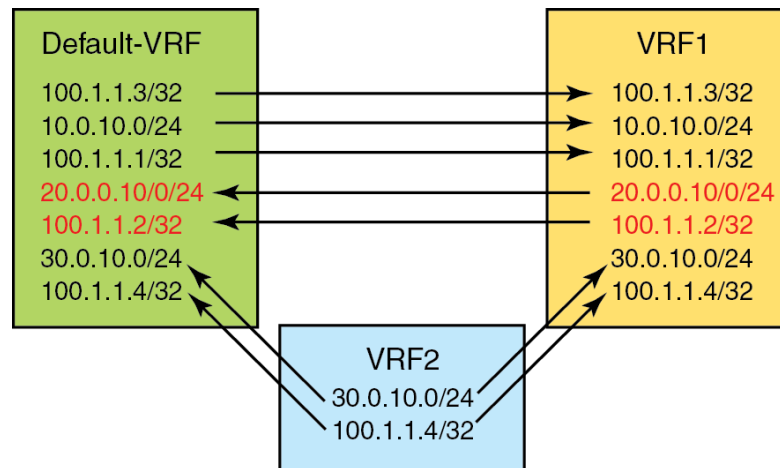

Features & benefits

Inter-VRF routing feature allows customers to selectively access each other's networks through configuration. It allows all VRFs to share the same path to the external domain while keeping internal routing information separate.

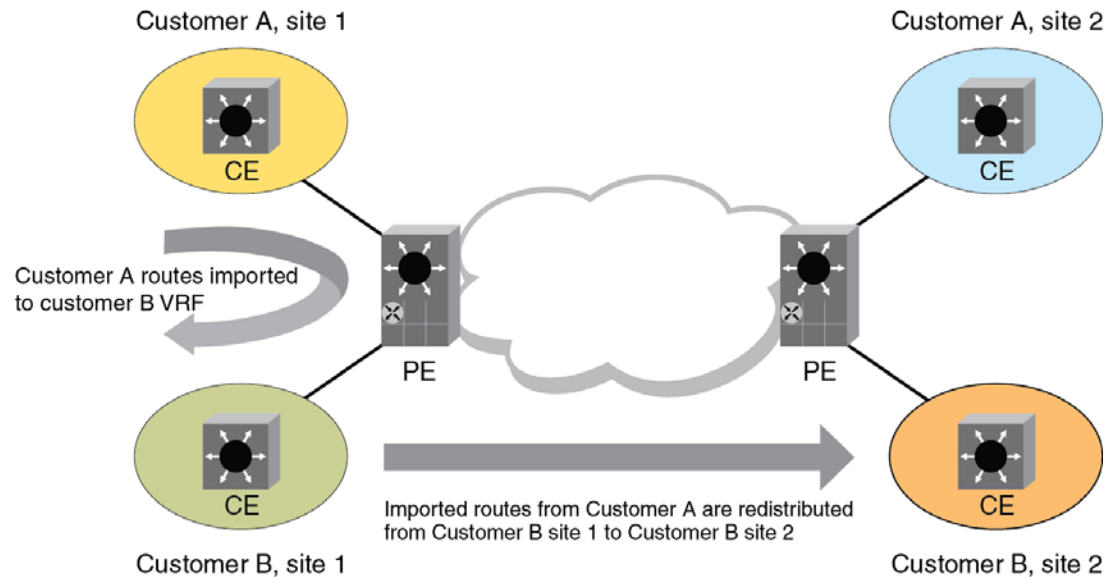FIGURE 31 Inter-VRF routing topology

To import routes from multiple VRFs, multiple import commands need to be defined. The filtering criteria for routes to be imported are specified using route-maps by the user. Routes can be filtered based on BGP attributes, interfaces, IP addresses, next hops, metrics, metric types, protocols, route types and tags which are supported by our existing route-map infrastructure.

Routes from multiple (default 50) VRFs can be selectively imported into a target destination VRF. Imported routes can be redistributed using routing protocols.

Configuring IPv6 inter-VRF routing is very similar to configuring inter-VRF routing for IPv4. The behavior and CLI syntax of route-maps is the same between IPv4 and IPv6 address families.

The route-map attributes that are used for filtering the routes are:

TABLE 63 IPv4 Route-map handling

Attributes used for filtering routes	Attributes set using a route map
IP address (Prefix list, Access list)	
Next hop (Prefix list, Access list)	Metric value
Metric value	Nexthop
Tag type	Distance
Route type	Tag
BGP attributes (AS path, Community, Ext community access list)	
Interface type	
Protocol type	

TABLE 64 IPv6 Route-map handling

Attributes used for filtering routes	Attributes set using a route map
IP address (Prefix list)	
Next hop (Prefix list)	Metric value
Metric value	Nexthop
Tag type	Distance
Route type	Tag
BGP attributes (AS path, Community, Ext community access list)	
Interface type	
Protocol type	

Configuration considerations

These are the things to consider while configuring the Brocade device:

- Import configuration commands allow specifying a non-existing source VRF. Routes will be imported dynamically when the source VRF is created.
- If the route-map is empty, then no course of actions are applied while importing the routes.
- If you change the configuration of a route-map, then all the VRFs which are configured to use this route-map will be processed again.

Tie breaker rules

The rules in the sequence below apply to break the tie when the same routes are imported from multiple VRFs including the local route:

- If routes are originated from different protocols, then the protocol with the best administrative distance will be used to break the tie.
- If the routes' origin (protocol) are the same, then the metric value will be used to break the tie.

- If the metric value is the same, then routes learned in local VRF will be used to break the tie.
- If the metric value is the same, and a local VRF route is not available, then the lowest nexthop address will be used to break the tie.
- If the nexthop address is the same, then the oldest route will be used to break the tie.

Maximum route limitations

When importing routes from other VRFs, there may be a chance that routes are not added due to a limitation on the number of routes that the destination VRF can support. This may happen in the following cases:

9. The source VRF is importing more routes than the destination VRF can support.
10. The destination VRF is configured to limit the number of routes with a configuration command such as `address-family ipv4 max-route` or `address-family ipv6 max-route`.
11. While processing the route-map changes, you exceed the number of routes that the VRF can support because you process the new set of routes before deleting the old set of routes.

For any of the above situations, execute the `clear ip route VRF dest-vrf-name` followed by the `import src-vrf-name` command to recover.

Configuring Inter-VRF routing

The following configuration steps allow the VRF VPN to import IPv4 routes from the **default-vrf brcd-sj**.

```
Brocade(config)#vrf vpn
Brocade(config-vrf-vpn)#address-family ipv4
Brocade(config-vrf-vpn-ipv4)#import routes vrf default-vrf route-map brcd-sj
```

The following configuration allows the default-vrf to import IPv4 routes from the non-default VRF VPN after satisfying conditions specified in the route-map brcd-sj.

```
Brocade(config)#ip import routes vrf vpn route-map brcd-sj
```

From non-default VRF, user can configure the command in address-family mode.

Syntax: `import routes vrf vrf-name route-map route-map-name`

This command imports the IPv4 routes from src-vrf to dest-vrf. The route-map import-map is applied while importing the routes.

Syntax: `import routes vrf src-vrf route-map import-map`

From default VRF the commands for IPv4 and IPv6 are as below.

These commands import the IPv4 and IPv6 routes from src-vrf to default-vrf using the route-map import-map.

```
Brocade(config)#ip import routes vrf src-vrf route-map import-map>
Brocade(config)#ipv6 import routes vrf src-vrf route-map import-map
```

TABLE 65 Route-map for non-default & default VRF

This field...	Displays
src-vrf	The source VRF from where the routes have been imported to the destination VRF. The "-" in the src-vrf column output denotes the route is local route.
import-map	Route-map which has clauses to filter the routes coming from src-vrf.
Defaults	By default no routes will be imported in to dest-vrf.
Range	User can configure a maximum of 50 import commands for a given VRF per address-family. If user tries to configure more than 50 commands then the configuration will be rejected and an error message will be generated.
No	The no command removes the configuration and all the routes imported from src-vrf will be removed in the dest-vrf.

NOTE

Warning message will be displayed when import route is issued for non-existing VRF as follows: "VRF *vrf-name* is not created yet"

NOTE

Warning message will be displayed when VRF is getting deleted by the user and exports routes to other VRFs: "All IPv4 and IPv6 export routes in VRF one have been removed"

Show commands

Use the following commands to display the IPv4 and IPv6 routing configuration on the device and to include the maximum allowed import VRFs.

```
Brocade# show ip
```

This command will display the maximum IPv4 allowed import VRFs and list of import VRFs to default-vrf. The following is an example of this enhancement to **show ip**.

```
Brocade(config)#show ip
Global Settings
IP CAM Mode: static IPVPN CAM Mode: static
  ttl: 64, arp-age: 10, bootp-relay-max-hops: 4, icmp-error-rate: 400
  IP Router-Id: 10.0.0.1  load-sharing path: 4
  enabled : UDP-Broadcast-Forwarding ICMP-Redirect ICMP-MPLS-Response
Source-Route Load-Sharing
  RARP RIP BGP4 IS-IS OSPF VRRP
  disabled: Directed-Broadcast-Forwarding drop-arp-pending-packets IRDP
Proxy-ARP RPF-Check RPF
-Exclude-Default VRRP-Extended VSRP
Configured Static Routes: 15
Maximum allowed import VRFs: 2048
```

```
Brocade# show ipv6
```

This command will display the maximum IPv6 allowed import VRFs and list of IPv6 import VRFs to default-vrf.

Displaying the IP route table for a specified VRF

To display the IP routes for a specified VRF, enter the following command at any CLI level for IPv4 and IPv6 respectively.

```
Brocade# show ip route vrf one
Brocade# show ipv6 route vrf one
```

Syntax: `show ip route vrf vrf-name [num] | [ip-addr] | [bgp] | [connected] |[isis] | [ospf] |[rip] | [static] | [tags]`

Syntax: `show ipv6 route vrf vrf-name [num] | [ip-addr] | [bgp] | [connected] |[isis] | [ospf] |[rip] | [static] | [tags] | nexthop nexthop_id | ref-routes`

The `vrf-name` parameter specifies the VRF for which you want to display the IP routes.

The **nexthop** option displays the next-hop information for all next hops in the routing table or for a specific entry. The `nexthop_id` parameter is a specific nexthop entry from the next hop table.

The **ref-routes** option allows you to display IPv6 routes in the forwarding table that refer to the specified nexthop entry.

The following table lists the information displayed by the `show ip/ipv6 route vrf` command.

TABLE 66 CLI display of IP route-table

This field...	Displays
Total number of IP routes	The total number of IP routes that are in the specified VRP routing-table.
Destination	The destination network of the route.
NetMask	The network mask of the destination address.
Gateway	The next-hop router.
Port	The port through which this Brocade device sends packets to reach the route's destination.
Cost	The route's cost.
Type	The route type, which can be one of the following: <ul style="list-style-type: none"> • B – The route was learned from BGP. • D – The destination is directly connected to this Brocade device. • R – The route was learned from RIP. • S – The route is a static route. • * – The route is a candidate default route. • O – The route is an OSPF route. Unless you use the ospf option to display the route table, “O” is used for all OSPF routes. If you do use the ospf option, the following type codes are used: <ul style="list-style-type: none"> • O – OSPF intra area route (within the same area). • IA – The route is an OSPF inter area route (a route that passes from one area into another). • E1 – The route is an OSPF external type 1 route. • E2 – The route is an OSPF external type 2 route.

TABLE 66 CLI display of IP route-table

This field...	Displays
Uptime	The amount of time since the route was last modified. The format of this display parameter may change depending upon the age of the route to include the seconds (s), minutes (m), hours (h), and days (d), as described in the following: 400d – Only days (d) displayed 20d23h – days (d) and hours (h) displayed 14h33m – hours (h) and minutes (m) displayed 10m59s – minutes (m) and seconds (s) displayed
src-vrf	The source VRF from where the routes have been imported to the destination VRF. The "-" in the src-vrf column output denotes the route is local route.

Displaying the IP route table for a specified VRF import, local or summary

To display the IP routes for a specified VRF import or from local VRF or all VRFs summary, enter the following command at any CLI level for IPv4 and IPv6 respectively.

```
Brocade# show ip route vrf one import/local/summary
Brocade# show ipv6 route vrf one import/local/summary
```

Syntax: `show ip route vrf [import | local | summary] vrf-name [num] | [ip-addr] | [bgp] | [connected] | [isis] | [ospf] | [rip] | [static] | [tags]`

Syntax: `show ipv6 route vrf [import | local | summary] vrf-name [num] | [ip-addr] | [bgp] | [connected] | [isis] | [ospf] | [rip] | [static] | [tags] | nexthop nexthop_id | ref-routes`

The *vrf-name* parameter specifies the VRF for which you want to display the IP routes.

The **nexthop** option displays the next-hop information for all next hops in the routing table or for a specific entry. The *nexthop_id* parameter is a specific nexthop entry from the next hop table.

The **ref-routes** option allows you to display IPv6 routes in the forwarding table that refer to the specified nexthop entry.

“CLI display of IP route-table” lists the information displayed by these commands.

Displaying IPv4 routes in VRF one

To display IP information for a specified VRF, enter the following command at any level of the CLI.

```
Brocade(config)#show ip route vrf one
Total number of IP routes: 4
Type Codes - B:BGP D:Connected I:ISIS O:OSPF R:RIP S:Static; Cost - Dist/Metric
BGP Codes - i:iBGP e:eBGP
ISIS Codes - L1:Level-1 L2:Level-2
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2 s:Sham Link
      Destination      Gateway      Port      Cost      Type Uptime  src-vrf
1      10.0.0.0/8        10.25.104.1  eth1/1     20         O     4d1h    c
2      10.1.0.0/16        10.25.103.1  eth2/1     20         O     3d1h    b
3      10.20.0.0/8         10.25.104.1  eth1/1     20         O     4d1h    -
4      10.40.0.0/8         10.25.105.1  eth2/1     20         O     3d1h    default
```


Displaying IPv4 routes in VRF one import

To display IP information for a specified VRF import, enter the following command at any level of the CLI.

```

Brocade(config)#show ip route vrf one import
Type Codes - B:BGP D:Connected I:ISIS O:OSPF R:RIP S:Static; Cost - Dist/Metric
BGP Codes - i:iBGP e:eBGP
ISIS Codes - L1:Level-1 L2:Level-2
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2 s:Sham Link

```

	Destination	Gateway	Port	Cost	Type	Uptime	src-vrf
1	10.0.0.0/8	10.25.104.1	eth1/1	20	O	4d1h	c
2	10.1.0.0/16	10.25.103.1	eth2/1	20	O	3d1h	b
3	10.40.0.0/8	10.25.105.1	eth2/1	20	O	3d1h	default

Displaying outputs routed from other VRF

To display all the other VRFs from where the routes will be imported into this VRF, enter the following command at any level of the CLI.

Syntax: `show ip vrf vrf-name`

```

Brocade#show ip vrf one
VRF one, default RD 1001:11, Table ID 2 IFL ID 131070
Label: 500000, Label-Switched Mode: OFF
IP Router-Id: 10.1.1.2
  Interfaces:
    e2/8
    No Export VPN route-target communities
    No Import VPN route-target communities
    No import route-map
    No export route-map

  Address Family IPv4
    Max Routes: 5120
    Imports routes from VRF: a, b, c, d
    No Export VPN route-target communities
    No Import VPN route-target communities
  Address Family IPv6
    Max Routes: 128
    Imports routes from VRF: a, b
    No Export VPN route-target communities
    No Import VPN route-target communities

```

Configuring routes from multiple VRFs

This example shows the sequence of commands in configuring routes from multiple VRFs.

```

Brocade# vrf a
Brocade# rd 1111:11
Brocade# address-family ipv4
Brocade# import routes vrf b route-map import-map
Brocade# import routes vrf c route-map import-map
Brocade# exit-address-family
Brocade# address-family ipv6
Brocade# import routes vrf b route-map import-v6map
Brocade# exit-address-family
Brocade# exit-vrf

```

Configuring Inter-VRF routing

```
Brocade# route-map import-map permit 10
Brocade# match ip address prefix-list export
Brocade# route-map import-map permit 15
Brocade# match ip address prefix-list loop
```

NOTE

If the configuration of a route-map is changed, then the VRFs which are configured to use the respective route-map will be processed again.

Displaying IPv6 routes in VRF one from local

To display IP information for a specified VRF for IPv6 routes from the local VRF, enter the following command at any level of the CLI.

```
Brocade(config)#show ipv6 route vrf one local
Type Codes - B:BGP C:Connected I:ISIS L:Local O:OSPF R:RIP S:Static
BGP Codes - i:iBGP e:eBGP
ISIS Codes - L1:Level-1 L2:Level-2
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2
Destination      Gateway                      Port    Cost    Type    Uptime    src-vrf
                3000:/8  fe80::768e:f8ff:fe2a:d063  eth1/3  20      O        4d1h     -
```

Displaying IPv6 imported routes summary

To display IP information for all VRFs summary for IPv6 routes, enter the following command at any level of the CLI.

```
Brocade(config)#show ipv6 route vrf one import vrf summary
IPv6 Routing Table - 10 entries:
  0 connected, 0 static, 0 RIP, 10 OSPF, 0 BGP, 0 ISIS
Number of prefixes:
/64:10
```

NOTE

An error will be displayed when an attempt to match the source VRF name with the import VRF name.

Displaying IPv6 routes in VRF one imported from another VRF

To display IP information for a specified VRF import routes from VRF two, enter the following command at any level of the CLI.

```
Brocade(config)#show ipv6 route vrf one import vrf b
Type Codes - B:BGP C:Connected I:ISIS L:Local O:OSPF R:RIP S:Static
BGP Codes - i:iBGP e:eBGP
ISIS Codes - L1:Level-1 L2:Level-2
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2
Destination      Gateway                      Port    Cost    Type    Uptime    src-vrf
                2000:/8  fe80::768e:f8ff:fe2a:d062  eth1/2  20      O        4d1h     -
```

Clearing IP routes

You can clear the entire routing-table or specific individual routes as needed.

To clear all routes from the IPv4 routing-table, enter the following command at any level of the CLI.

```
Brocade# clear ip route
```

To clear route 10.157.22.0/24 from the IPv4 routing table, enter:

```
Brocade# clear ip route 10.157.22.0/24
```

Syntax: `clear [ip | ipv6] route [ip-addr ip-mask | ip-addr/mask-bits] [import | local | import vrf vrf-name] | nexthop nexthop_id`

The following examples illustrate the use of the **clear route** command:

```
Brocade# clear ip route vrf one [<IP address> <Mask>] import
```

Clears the imported IPv4 routes from all other VRFs. When this command is issued with an IP address and mask, then the imported routes matching the address and mask from other VRFs are cleared.

```
Brocade# clear ip route vrf one [<IP address> <Mask> local]
```

Clears the IPv4 routes from specific VRF. When this command is issued with an IP address and mask only, then the local routes matching the address and mask are cleared, otherwise this option is not available.

```
Brocade# clear ip route vrf one [<IP address> <Mask>] import vrf two
```

Clears the imported IPv4 routes from VRF two. When this command is issued with an IP address and mask, then imported routes matching the address and mask from VRF two are cleared.

```
Brocade# clear ip route vrf one [<IP address> <Mask>] import vrf default-vrf
```

Clears the imported IPv4 routes from the default-vrf. When this command is issued with an IP address and mask, then imported routes matching the address and mask from the default VRF are cleared.

```
Brocade# clear ipv6 route
```

Clears all routes from the IPv6 routing-table.

```
Brocade# clear ipv6 route 10.157.22.0/24
```

Clears route 10.157.22.0/24 from the IPv6 routing-table.

```
Brocade# clear ipv6 route vrf one [IPv6 addr/Prefix length] import vrf two
```

Clears the imported IPv6 routes from VRF two. When this command is issued with an IPv6 address and prefix length, then the imported routes matching the IPv6 address and prefix length from VRF two are removed.

```
Brocade# clear ipv6 route vrf one [IPv6 addr/Prefix length] import vrf default-vrf
```

Clears the imported IPv6 routes from the default-vrf. When this command is issued with an IPv6 address and prefix length, then the imported routes matching the IPv6 address and prefix length from the default VRF are removed.

```
Brocade# clear ipv6 route nexthop nexthop_ID
```

Clears the imported IPv6 routes for the specified nexthop ID on the interface module (LP).

Configuring the number of VRFs for IPv4 and IPv6

To limit the number of imported IPv4 or IPv6 routes into any VRF including the default VRF, the following command is available in the global configuration mode and not available in any individual VRF mode. Changes in the value in the global configuration mode will be effective in all VRFs.

```
Brocade(config)# [ip|ipv6] max-import-vrfs 1-2048
```

The **no** command will set the value to the default value, which is 50.

If you configure **ip max-import-vrfs** to a number which is less than the currently imported routes in the IPv4 or IPv6 address family for any VRF, then the following error will be displayed and the configuration will not be accepted.

```
Brocade(config)# [ip|ipv6] max-import-vrfs 2
Error: VRF one has 3 import commands configured in ipv4/ipv6 address families
```

The configured non-default value of **ip/ipv6 max-import-vrfs** may be displayed using the **show ip** or **show ip vrf-name** commands.

NOTE

A system maximum of 1000 import commands (including all VRFs, IPv4 and IPv6 address families) can be defined.

Modified CLI commands

The Inter-vrf routing feature makes it possible to import OSPF routes from one VRF to another VRF. There may be a need to advertise the imported OSPF routes back to the OSPF domain as external routes. This requires redistribution of OSPF into OSPF again, which was not supported in prior releases. With the introduction of redistribution, the following configuration is supported:

```
Brocade(config-ospf-router)#redistribute ospf route-map <route-map-name>
  bgp          Border Gateway Protocol (BGP)
  connected    Connected
  isis         Intermediate System to Intermediate System (IS-IS)
  rip          Routing Information Protocol (RIP)
  static       Static routes
  ospf        OSPF routes (new addition)
```

This command is applicable to OSPF, RIP and BGP. Currently IS-IS does not support VRFs and it is not possible to have IS-IS running in multiple VRFs.

If you configure to import the same protocol routes into the same protocol, then RTM will send back protocol routes belonging to other VRFs.

Redistribution of a protocol into itself is supported for the following protocols:

- IPv4

1. OSPF->OSPF
 - a. route-map option
 2. BGP->BGP
 - a. route-map option
 - b. Metric option
 3. RIP->RIP
 - a. route-map option
 - b. Metric option
- IPv6
1. OSPF->OSPF
 - a. route-map option

Prior to this release in non-default VRF, redistribution of BGP, RIP and IS-IS routes into OSPFv3 is not supported. Similarly, in non-default VRF redistribution of IS-IS routes into BGP is also not supported.

This support is added during the implementation of this feature Inter-vrf Routing.

OSPF and OSPFv3 use default value, while advertising the redistributed routes in their LSA, if the metric was not configured either in route-map or by metric CLI configuration. The default value is 10 for OSPF and 0 for OSPFv3.

NOTE

BGP IPv6 and RIPng cannot be enabled in a VRF.

Modified CLI commands

Management VRF

Table 67 displays the individual devices and the management Virtual Routing and Forwarding (VRF) features they support.

TABLE 67 Supported Netron management Virtual Routing and Forwarding (VRF) features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
IPv4 management VRF	Yes	Yes	Yes	Yes	Yes	Yes	Yes
IPv6 management VRF	Yes	Yes	No	No	No	No	No
Configuring Management Interface under a user defined VRF	Yes	Yes	Yes	Yes	Yes	Yes	Yes

Management VRF overview

The management VRF is used to provide secure management access to the device by sending inbound and outbound management traffic through the VRF specified as a global management VRF and through the out-of-band management port, thereby isolating management traffic from the network data traffic.

By default, the inbound traffic is unaware of VRF and allows incoming packets from any VRF, including the default VRF. The outbound traffic is only through the default VRF. The default VRF consists of out-of-band management port and all the LP ports that do not belong to any other VRFs.

Any VRF, except the default VRF, can be configured as a management VRF. When a management VRF is configured, the management traffic is allowed through the ports belonging to the specified VRF and the out-of-band management port. The management traffic through the ports belonging to the other VRFs and the default VRF are dropped and the rejection statistics are incremented.

If the management VRF is not configured, the management applications will follow the default behavior. The management VRF configuration is applicable for both IPv4 and IPv6 management traffic.

NOTE

The IPv6 management VRF is not supported on Brocade Netron CES and Brocade Netron CER devices.

The management VRF is supported by the following management applications:

- SNMP server
- SNMP trap generator
- Telnet server
- SSH server
- Telnet client
- RADIUS client
- TACACS+ client
- TFTP
- SCP
- Syslog

NOTE

The management VRF is not applicable to inbound and outbound traffic of the **ping** and **traceroute** commands. These commands use the VRF specified in the command or the default VRF, if no VRF is specified.

Source interface and management VRF compatibility

There is a source interface configuration associated with the management applications. When a source interface is configured, the management applications use the lowest configured IP address of the specified interface as source IP address in all the outgoing packets. If the configured interface is not part of the management VRF, the response packet will not reach the destination. If the compatibility check fails while configuring either the management VRF or the source interface, the following warning message will be displayed. However, the configuration command will be accepted.

```
The source-interface for Telnet, TFTP is not part of the management-vrf
```

Supported management applications

This section explains the management VRF support provided by the management applications.

SNMP server

When the management VRF is configured, the SNMP server receives SNMP requests and sends SNMP responses only through the ports belonging to the management VRF and through the out-of-band management port.

Any change in the management VRF configuration becomes immediately effective for the SNMP server.

SNMP trap generator

When the management VRF is configured, the SNMP trap generator sends traps to trap hosts through the ports belonging to the management VRF and through the out-of-band management port.

Any change in the management VRF configuration becomes immediately effective for the SNMP trap generator.

NOTE

The SNMP source interface configuration command **snmp-server trap-source** must be compatible with the management VRF configuration. Refer to [“Source interface and management VRF compatibility”](#) on page 396.

Telnet server

When the management VRF is configured, the incoming Telnet connection requests are allowed only from the ports belonging to the management VRF and from the out-of-band management port. Management VRF enforcement is only done during the establishment of a connection. Once the connection is established, no further management VRF enforcement is done.

To allow the incoming Telnet connection requests only from the management VRF and not from the out-of-band management port, enter the following command.

```
Brocade(config)# telnet strict-management-vrf
```

The previous command is applicable only when the management VRF is configured. If not, the command issues the following warning message.

```
Warning - Management-vrf is not configured.
```

For the Telnet server, changes in the management VRF configuration or configuring the **telnet strict-management-vrf** command will not affect the existing Telnet connections and the changes will be applied only to the new incoming connection requests.

SSH server

When the management VRF is configured, the incoming SSH connection requests are allowed only from the ports belonging to the management VRF and from the out-of-band management port. Management VRF enforcement is only done during the establishment of a connection. Once the connection is established, no further management VRF enforcement is done.

To allow the incoming SSH connection requests only from the management VRF and not from the out-of-band management port, enter the following command.

```
Brocade(config)# ip ssh strict-management-vrf
```

The previous command is applicable only when the management VRF is configured. If not, the command issues the following warning message.

```
Warning - Management-vrf is not configured.
```

For the SSH server, changes in the management VRF configuration or configuring the **ip ssh strict-management-vrf** command will not affect the existing SSH connections and the changes will be applied only to the new incoming connection requests.

Telnet client

When the VRF name is specified in the **telnet vrf** command, the Telnet client initiates Telnet requests only from the ports belonging to the specified VRF.

To configure the VRF name in outbound Telnet sessions, enter the following command at the privileged EXEC level:

```
Brocade(config)# telnet vrf red 10.157.22.39
```

Syntax: `telnet vrf vrf-name IPv4 address | ipv6 IPv6 address`

The `vrf-name` variable specifies the name of the pre-configured VRF.

NOTE

The IPv6 management VRF is not supported on Brocade NetIron CES and Brocade NetIron CER devices.

RADIUS client

When the management VRF is configured, the RADIUS client will send RADIUS requests or receive responses only through the ports belonging to the management VRF and through the out-of-band management port.

Any change in the management VRF configuration will be immediately effective for the RADIUS client.

NOTE

The RADIUS source interface configuration command `ip radius source-interface` must be compatible with the management VRF configuration. Refer to [“Source interface and management VRF compatibility”](#) on page 396.

TACACS+ client

When the management VRF is configured, the TACACS+ client establishes connections with TACACS+ servers only through the ports belonging to the management VRF and the out-of-band management port.

For the TACACS+ client, any change in the management VRF configuration will not affect the existing TACACS+ connections and the changes will be applied only to the new TACACS+ connections.

NOTE

The TACACS+ source interface configuration command `ip tacacs source-interface` must be compatible with the management VRF configuration. Refer to [“Source interface and management VRF compatibility”](#) on page 396.

TFTP

When the management VRF is configured, TFTP will send or receive the data and acknowledgements only through the ports belonging to the management VRF and through the out-of-band management port.

Any change in the management VRF configuration will be immediately effective for TFTP. You cannot change in the management VRF configuration while TFTP is in progress.

NOTE

The TFTP source interface configuration command `ip tftp source-interface` must be compatible with the management VRF configuration. Refer to [“Source interface and management VRF compatibility”](#) on page 396.

SCP

SCP uses SSH as underlying transport. The behavior of SCP is similar to the SSH server. For more information, refer to [“SSH server”](#) on page 397.

Syslog

When the management VRF is configured, the Syslog module sends log messages only through the ports belonging to the management VRF and the out-of-band management port.

Any change in the management VRF configuration will be immediately effective for Syslog.

NOTE

The Syslog source interface configuration command **ip syslog source-interface** must be compatible with the management VRF configuration. Refer to [“Source interface and management VRF compatibility”](#) on page 396.

Configuring a global management VRF

To configure a VRF as a global management VRF, enter the following command.

```
Brocade(config)# management-vrf mvrf
```

Syntax: [no] **management-vrf** *vrf-name*

The *vrf-name* parameter specifies the name of the pre-configured VRF. If the VRF is not pre-configured, the command execution fails and displays the following error message.

```
Error - VRF <vrf-name> doesn't exist
```

When the management VRF is configured, the software generates the following Syslog message.

```
SYSLOG: VRF <vrf-name> has been configured as management-vrf
```

Enter the **no** form of the command to remove the management VRF. When the management VRF is deleted, the software generates the following Syslog message.

```
SYSLOG: VRF <vrf-name> has been un-configured as management-vrf
```

Configuration notes

Consider the following configuration notes:

- If there is a management VRF already configured, you must remove the existing management VRF configuration before configuring a new one. If not, the system displays the following error message.

```
Brocade(config)# management-vrf red
Error - VRF mvrf already configured as management-vrf
```

- If you try to delete a management VRF that was not configured, the system displays the following error message.

```
Brocade(config)# no management-vrf red
Error - VRF red is not the current management-vrf
```

Displaying the management VRF information

- The deletion or modification of the VRF will fail if the specified VRF is currently configured as the management VRF. Attempting to do so causes the system to return the following error message.

```
Brocade(config)# no vrf mvrf
Error - Cannot modify/delete a VRF which is configured as management-vrf
```

Configuring Management interface under a user defined VRF

You can add the management interface to a VRF instance of your choice. Previously the management interface was only be a member of a default-vrf in the system and this cannot be changed.

Configuration steps

1. Define a VRF. Please refer to the NetIron configuration guide for details on how to define a VRF. Following is an example.

```
Brocade(config)# vrf mgmt
Brocade(config)# rd 1:1
Brocade(config)# address-family ipv4
Brocade(config)# ip route 0.0.0.0/0 10.25.120.1
Brocade(config)# exit-address-family
exit-vrf
```

You have now created a VRF named 'mgmt'.

2. Go to the management interface and use the following command to make the management interface part of the mgmt VRF.

```
Brocade(config-if-mgmt-1)# vrf forwarding mgmt
```

You can use the **no vrf forwarding** xxx command to place the management interface under default-vrf.

NOTE

By default, the management interface will be in the default-vrf.

Syntax: vrf forwarding

forwarding - enables forwarding on the specified (current) interface

NOTE

You must execute these commands at the interface configuration level, for example,
Brocade(**config-if-mgmt-1**)#

Displaying the management VRF information

To display IP Information for a specified VRF, enter the following command at any level of the CLI.

```
Brocade(config)# show vrf mvrf
Total number of VRFs configured: 1
Status Codes - A:active, D:pending deletion, I:inactive
Name           Default RD      IFL ID  vrf|v4|v6      Routes Interfaces
a               1:1            131071  A | A | A       14
```

Total number of IPv4 unicast route for all non-default VRF is 12
 Total number of IPv6 unicast route for all non-default VRF is 2

```
Brocade#show vrf a
VRF a, default RD 1:1, Table ID 1 IFL ID 131071
Label: (Not Allocated), Label-Switched Mode: OFF
Configured as management-vrf
IP Router-Id: 10.2.2.2
No interfaces
  No Export VPN route-target communities
  No Import VPN route-target communities
  No import route-map
  No export route-map

Address Family IPv4
  Max Routes: 5120
  Number of Unicast Routes: 12
  No Export VPN route-target communities
  No Import VPN route-target communities
Address Family IPv6
  Max Routes: 128
  Number of Unicast Routes: 2
  No Export VPN route-target communities
  No Import VPN route-target communities
```

Syntax: `show vrf vrf-name`

The `vrf-name` parameter specifies the VRF for which you want to display IP information.

[Table 68](#) displays a description of the output from the `show vrf` command.

TABLE 68 Output from the `show vrf` command

This field...	Displays...
VRF <code>vrf-name</code>	The name of the VRF.
default RD	The default route distinguisher for the VRF.
Table ID	The table ID for the VRF.
Routes	The total number of IPv4 and IPv6 Unicast routes configured on this VRF.
IFL ID	The Internal Forwarding Lookup Identifier (IFL-ID) for ports in the VRF instance.
Label	The unique VRF label that has been assigned to the specified VRF.
Label-Switched Mode	Indicates whether Label-Switched Mode is ON or OFF.
Configured as management-vrf	Indicates that the specified VRF is configured as a management VRF.
IP Router-Id	The 32-bit number that uniquely identifies the router.
Number of Unicast Routes	The number of Unicast routes configured on this VRF.

TABLE 68 Output from the **show vrf** command (Continued)

This field...	Displays...
import route-map	The name of the import route-map, if any, that is configured for this management VRF.
export route-map	The name of the export route-map if a route-map has been configured for this management VRF.

The **show who** command displays information about the management VRF from which the Telnet and SSH connection has been established.

```

Brocade(config)# show who
Console connections:
    established, monitor enabled, privilege super-user, in config mode
    1 minutes 47 seconds in idle
Telnet server status: Enabled
Telnet connections (inbound):
    1    established, client ip address 10.53.1.181, user is lab, privilege
super-user
        using vrf default-vrf.
        2 minutes 46 seconds in idle
    2    established, client ip address 10.20.20.2, user is lab, privilege
super-user
        using vrf mvrf.
        16 seconds in idle
    3    closed
    4    closed
    5    closed
Telnet connections (outbound):
    6    established, server ip address 10.20.20.2, from Telnet session 2, ,
privilege super-user
        using vrf mvrf.
        12 seconds in idle
    7    closed
    8    closed
    9    closed
    10   closed
SSH server status: Enabled
SSH connections:
    1    established, client ip address 10.53.1.181, privilege super-user
        using vrf default-vrf.
        you are connecting to this session
        3 seconds in idle
    2    established, client ip address 10.20.20.2, privilege super-user
        using vrf mvrf.
        48 seconds in idle
    3    closed
    4    closed
    5    closed
    6    closed
    7    closed
    8    closed
    9    closed
    10   closed
    11   closed
    12   closed
    13   closed
    14   closed
    15   closed
    
```

```
16      closed
```

Syntax: show who

To display the packets and sessions rejection statistics due to failure in management VRF validation, enter the following command.

```
Brocade(config)# show management-vrf

Management VRF name : mvrfr
Management Application Rx Drop Pkts Tx Drop Pkts
SNMP Engine           36         0
RADIUS Client         0         8
TFTP Client           0         4
SNMP Notifications   -         55
SysLogs               -         78

TCP Connection rejects:
Telnet                : 1
SSH                   : 1
TACACS+ Client       : 8
```

Syntax: show management-vrf

Table 69 displays a description of the output from the **show management-vrf** command.

TABLE 69 Output from the **show management-vrf** command

This field...	Displays...
Management VRF name	Displays the configured management VRF name.
Management Application	Displays the management application names.
Rx Drop Pkts	Displays the number of packets dropped in the inbound traffic.
Tx Drop Pkts	Displays the number of packets dropped in the outbound traffic.
TCP Connection rejects	Displays the number of TCP connections per application rejected due to management VRF validation.

Make sure that the management VRF is configured before executing the **show management-vrf** command. If not, the system will display the following error message.

```
Error - Management VRF is not configured.
```

To clear the management VRF rejection statistics, enter the following command.

```
Brocade(config)# clear management-vrf-stats
```

Syntax: clear management-vrf-stats

Displaying the management VRF information

Basic IPv6 Connectivity

Table 70 displays the individual Brocade devices and the basic IPv6 Connectivity features they support.

TABLE 70 Supported basic IPv6 connectivity features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
IPv6 Routing	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 Anycast Addresses	Yes	Yes	No	No	No	No	No
IPv6 Host Support	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 Non stop routing and graceful restart	Yes	Yes	Yes	No	No	No	No
Restricting SNMP Access to an IPv6 Node	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 Domain Name Server (DNS) Resolver	Yes	Yes	No	Yes	Yes	Yes	Yes
ECMP Load Sharing for IPv6	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 ICMP	Yes	Yes	No	Yes	Yes	Yes	Yes
DHCPv6	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 Neighbor Discovery	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 Source Routing Security	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 MTU	Yes	Yes	No	Yes	Yes	Yes	Yes
Static Neighbor Entries	Yes	Yes	No	Yes	Yes	Yes	Yes

TABLE 70 Supported basic IPv6 connectivity features (Continued)

Features supported	Brocade Netiron XMR Series	Brocade MLX Series	Brocade Netiron CES 2000 Series BASE package	Brocade Netiron CES 2000 Series ME_PREM package	Brocade Netiron CES 2000 Series L3_PREM package	Brocade Netiron CER 2000 Series Base package	Brocade Netiron CER 2000 Series Advanced Services package
Limiting the Number of Hops an IPv6 Packet Can Traverse	Yes	Yes	No	Yes	Yes	Yes	Yes
QoS for IPv6 Traffic	Yes	Yes	Yes	Yes	Yes	Yes	Yes
IPv6 Non-Stop Routing (NSR) Support	Yes	Yes	No	No	No	No	No
DNS Queries of IPv4 and IPv6 DNS Servers	Yes	Yes	No	Yes	Yes	Yes	Yes
Displaying IPv6 Traffic Statistics	Yes	Yes	No	No	No	No	No
Displaying the IPv6 Route Table	Yes	Yes	No	Yes	Yes	Yes	Yes
Rate Limit for IPv6 Subnet Traffic	Yes	Yes	No	No	No	No	No
DHCPv6 Relay Agent Prefix Delegation Notification	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 Router Advertisement Options for DNS Configuration	Yes	Yes	No	Yes	Yes	Yes	Yes
127-bit IPv6 address	Yes	Yes	Yes	Yes	Yes	Yes	Yes

This chapter explains how to get a Brocade device up and running with IPv6. To configure basic IPv6 connectivity, you must do the following:

- Enable IPv6 routing globally.
- Configure an IPv6 address or explicitly enable IPv6 on each Brocade device interface over which you plan to forward IPv6 traffic.
- Configure IPv4 and IPv6 protocol stacks. (This step is mandatory only if you want a Brocade device interface to send and receive both IPv4 and IPv6 traffic.)

The following configuration tasks are optional:

- Configure IPv6 Domain Name Server (DNS) resolver.
- Configure equal-cost multipath (ECMP) routing Load Sharing for IPv6.
- Configure IPv6 Internet Control Message Protocol (ICMP).
- Configure the IPv6 neighbor discovery feature.
- Change the IPv6 maximum transmission unit (MTU).
- Configure static neighbor entries.
- Limit the hop count of an IPv6 packet.
- Configure Quality of Service (QoS) for IPv6 traffic.

Enabling IPv6 routing

By default, IPv6 routing is enabled. If forwarding of IPv6 traffic globally on the device has been disabled, you can enable it by entering the following command.

```
Brocade(config)# ipv6 unicast-routing
```

Syntax: [no] ipv6 unicast-routing

To disable the forwarding of IPv6 traffic globally on the device, enter the **no** form of this command.

NOTE

Downgrading from release 04.1.00 to an earlier release of the software can impact IPv6 routing. In earlier versions of the Multi-Service IronWare software, IPv6 routing was disabled by default. As of release 04.1.00, IPv6 routing is enabled by default and therefore does not appear in the configuration. If you are downgrading from 04.1.00 to an earlier version of the software and want IPv6 routing to be enabled, you must add the line “ipv6 unicast-routing” to the configuration.

Configuring IPv6 on each interface

To forward IPv6 traffic on an interface, the interface must have an IPv6 address, or IPv6 must be explicitly enabled. By default, an IPv6 address is not configured on an interface.

If you choose to configure a global or unique local IPv6 unicast address (ULA) for an interface, IPv6 is also enabled on the interface. Further, when you configure a global or unique local IPv6 unicast address, you must decide on one of the following in the low-order 64 bits:

- A manually configured interface ID.
- An automatically computed EUI-64 interface ID.

If you prefer to assign a link-local IPv6 address to the interface, you must explicitly enable IPv6, which causes a link-local address to be automatically computed for the interface. If preferred, you can override the automatically configured link-local address with an address that you manually configure.

This section provides the following information:

- Configuring a global or unique local IPv6 unicast address with a manually configured or automatically computed interface ID for an interface.
- Automatically or manually configuring a link-local address for an interface.
- Configuring IPv6 anycast addresses

Configuring a global or unique local IPv6 unicast address

Configuring a global or unique local IPv6 unicast address on an interface does the following:

- Automatically configures an interface ID (a link-local address), if specified.
- Enables IPv6 on that interface.

Additionally, the configured interface automatically joins the following required multicast groups for that link:

- Solicited-node multicast group FF02:0:0:0:1:FF00::/104 for each unicast address assigned to the interface.
- All-nodes link-local multicast group FF02::1
- All-routers link-local multicast group FF02::2

The neighbor discovery feature sends messages to these multicast groups. For more information, refer to “[Configuring IPv6 neighbor discovery](#)” on page 443.

Configuring a global or unique local IPv6 unicast address with a manually configured interface ID

To configure a global or unique local IPv6 unicast address, including a manually configured interface ID, for an interface, enter commands such as the following.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 address 2001:DB8:12D:1300:240:D0FF:
FE48:4672/64
```

These commands configure the global prefix 2001:DB8:12d:1300::/64 and the interface ID::240:D0FF:FE48:4672, and enable IPv6 on Ethernet interface 3/1.

Syntax: `ipv6 address ipv6-prefix/prefix-length`

You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

Configuring a global or unique local IPv6 unicast address with an automatically computed EUI-64 interface ID

To configure a global or unique local IPv6 unicast address with an automatically computed EUI-64 interface ID in the low-order 64-bits, enter commands such as the following.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 address 2001:DB8:12D:1300::/64 eui-64
```

These commands configure the global prefix 2001:DB8:12d:1300::/64 and an interface ID, and enable IPv6 on Ethernet interface 3/1.

Syntax: `[no] ipv6 address ipv6-prefix/prefix-length eui-64`

You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The **eui-64** keyword configures the global or unique local unicast address with an EUI-64 interface ID in the low-order 64 bits. The interface ID is automatically constructed in IEEE EUI-64 format using the interface’s MAC address.

Configuring a link-local IPv6 address

To explicitly enable IPv6 on an interface without configuring a global or unique local unicast address for the interface, enter commands such as the following.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 enable
```

These commands enable IPv6 on Ethernet interface 3/1 and specify that the interface is assigned an automatically computed link-local address.

Syntax: [no] ipv6 enable

NOTE

When configuring VLANs that share a common tagged interface with a Virtual Ethernet (VE) interface, it is recommended that you override the automatically computed link-local address with a manually configured unique address for the interface. If the interface uses the automatically computed address, which in the case of VE interfaces is derived from a global MAC address, all VE interfaces will have the same MAC address.

To override a link-local address that is automatically computed for an interface with a manually configured address, enter commands such as the following.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 address FE80::240:D0FF:FE48:4672 link-local
```

These commands explicitly configure the link-local address FE80::240:D0FF:FE48:4672 for Ethernet interface 3/1.

Syntax: [no] ipv6 address *ipv6-address* link-local

You must specify the *ipv6-address* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The **link-local** keyword indicates that the Brocade device interface should use the manually configured link-local address instead of the automatically computed link-local address.

Configuring IPv6 anycast addresses

In IPv6, an **anycast** address is an address for a set of interfaces that belong to different nodes. Sending a packet to an anycast address results in the delivery of the packet to the closest interface that has an anycast address.

An anycast address looks similar to a unicast address, because it is allocated from the unicast address space. If you assign an IPv6 unicast address to multiple interfaces, it is an anycast address. On the device, you configure an interface assigned an anycast address to recognize the address as an anycast address.

For example, the following commands configure an anycast address on interface 2/1.

```
Brocade(config)# int e 2/1
Brocade(config-if-e100-2/1)# ipv6 address 2001:db8::6/64 anycast
```

Syntax: [no] ipv6 address *ipv6-prefix* | *prefix-length* [anycast]

IPv6 anycast addresses are described in detail in RFC 1884. See RFC 2461 for a description of how the IPv6 Neighbor Discovery mechanism handles anycast addresses.

Configuring IPv6 127 bit mask address

With 127 bit mask we will have 127 bits in the network part of the address, and 1 bit in the host part of the address. With 1 bit in the host part, we can have only two IPv6 addresses, one for each host. With 127 bit mask we consider 0 and 1 as host address and eliminates subnet-anycast for the configured network from that link.

NOTE

The 127 bit mask address supports only inter-router Point-to-Point links.

Benefits of using 127 bit mask:

- Eliminates the Ping-pong issue
- Reduces the impact of Denial of Service (DOS) attacks
- Saves IPv6 address space

For example, the following commands configure an 127 bit mask IPv6 address:

```
Brocade(config)# interface ethernet 1/1
Brocade(config-if-e10000-1/1)#enable
Brocade(config-if-e10000-1/1)#vrf forwarding green
Brocade(config-if-e10000-1/1)#ipv6 address 10:1:1::1/127
Brocade(config-if-e10000-1/1)#ipv6 enable
Brocade(config-if-e10000-1/1)#ipv6 ospf area 0

Brocade(config)# interface ethernet 1/2
Brocade(config-if-e10000-1/2)#enable
Brocade(config-if-e10000-1/2)#ip address 8.8.8.1/24
Brocade(config-if-e10000-1/2)#ipv6 address 1:1:1:1:1::/127
Brocade(config-if-e10000-1/2)#ipv6 enable
```

Configuring the management port for an IPv6 automatic address configuration

You can configure the management port to automatically obtain an IPv6 address. The process is the same for all ports and is described in detail in the [“Configuring a global or unique local IPv6 unicast address with an automatically computed EUI-64 interface ID”](#) on page 409

IPv6 host support

You can configure the device to be an IPv6 host. An IPv6 host has interfaces with IPv6 addresses, but does not have IPv6 routing enabled.

This section lists supported and unsupported IPv6 host features.

IPv6 host supported features

The following IPv6 host features are supported:

- Automatic address configuration

NOTE

Automatic IPv6 address configuration is supported, however, automatic configuration of an IPv6 *global* address is supported only if there is an IPv6 router present on the network. Manual IPv6 address configuration is not supported.

- HTTP/HTTPS over IPv6
- IPv6 ping
- Telnet using an IPv6 address
- TFTP using an IPv6 address
- Trace route using an IPv6 address
- Name to IPv6 address resolution using IPv6 DNS Server
- IPv6 access lists
- IPv6 debugging
- SSH version 1 over IPv6
- SNMP over IPv6
- Logging (Syslog) over IPv6
- MLD version 1 and version 2

See [“Supported basic IPv6 connectivity features”](#) on page 405 for additional support information

Restricting SNMP access to an IPv6 node

You can restrict SNMP access (which includes Brocade Network Advisor access) to a specified IPv6 host. Enter a command such as the following.

```
Brocade(config)# snmp-client ipv6 2001:DB8:efff:89::23
```

Syntax: [no] `snmp-client ipv6 ipv6-address`

The *ipv6-address* must be in hexadecimal format using 16-bit values between colons, as documented in RFC 2373.

NOTE

You cannot use the following IPv6 addresses with the `snmp-client ipv6 ipv6-address` command: `::` (unspecified address), `ff02::01` (all nodes address), and `ff02:02` (all routers address)).

Specifying an IPv6 SNMP trap receiver

You can specify an IPv6 host to be a trap receiver so that all SNMP traps are sent to the same SNMP trap receiver or set of receivers, typically one or more host devices on the network. Enter a command such as the following.

```
Brocade(config)# snmp-server host ipv6 2001:DB8:89::13
```

Syntax: [no] `snmp-server host ipv6 ipv6-address`

The *ipv6-address* must be in hexadecimal format using 16-bit values between colons, as documented in RFC 2373.

Restricting Telnet access by specifying an IPv6 ACL

You can specify an IPv6 ACL to restrict Telnet access to management functions on the device. Enter commands similar to the following.

```
(config)# ipv6 access-list acl1
(config-ipv6-access-list acl1)# deny ipv6 host 2000:2382::e0bb:2 any
(config-ipv6-access-list acl1)# deny ipv6 2001:DB8::ff89/128 any
(config-ipv6-access-list acl1)# permit ipv6 any any
(config-ipv6-access-list acl1)# exit
(config)# telnet access-group ipv6 acl1
```

This example configures and applies an IPv6 ACL named “acl1”, which denies Telnet access to the device from the specified IPv6 addresses, but allows access from any other IPv6 address.

```
(config)# ipv6 access-list acl2
(config-ipv6-access-list acl2)# permit ipv6 host 2000:2382::e0bb:2 any
(config-ipv6-access-list acl2)# deny ipv6 any any
(config-ipv6-access-list acl2)# exit
```

This example configures and applies an IPv6 ACL named “acl2”, which allows Telnet access to the device only from the specified IPv6 address, and denies access from any other IPv6 address.

Syntax: `telnet access-group ipv6 ipv6-acl-name`

The *ipv6-acl-name* is a valid IPv6 ACL.

Restricting SSH access by specifying an IPv6 ACL

You can configure an IPv6 ACL to restrict SSH access to management functions on the device. Enter commands such as the following.

```
(config)# ipv6 access-list acl1
(config-ipv6-access-list acl1)# deny ipv6 host 2000:2382::e0bb:2 any
(config-ipv6-access-list acl1)# deny ipv6 2001:DB8::ff89/128 any
(config-ipv6-access-list acl1)# permit ipv6 any any
(config-ipv6-access-list acl1)# exit
(config)# ssh access-group ipv6 acl1
```

This example configures and applies an IPv6 ACL named “acl1”, which denies SSH access to the device from the specified IPv6 addresses, but allows access from any other IPv6 address.

```
(config)# ipv6 access-list acl2
(config-ipv6-access-list acl2)# permit ipv6 host 2000:2382::e0bb:2 any
(config-ipv6-access-list acl2)# deny ipv6 any any
(config-ipv6-access-list acl2)# exit
(config)# ssh access-group ipv6 acl2
```

This example configures and applies an IPv6 ACL named “acl2”, which allows SSH access to the device only from the specified IPv6 address, and denies access from any other IPv6 address.

Syntax: `[no] ssh access-group ipv6 ipv6-acl-name`

The *ipv6-acl-name* is a valid IPv6 ACL.

Restricting Web management access by specifying an IPv6 ACL

You can configure an IPv6 ACL to restrict Web management access to management functions on the device. Enter commands such as the following.

```
(config)# ipv6 access-list acl1
(config-ipv6-access-list acl1)# deny ipv6 host 2000:2382::e0bb:2 any
(config-ipv6-access-list acl1)# deny ipv6 2001:DB8::ff89/128 any
(config-ipv6-access-list acl1)# permit ipv6 any any
(config-ipv6-access-list acl1)# exit
(config)# web access-group ipv6 acl1
```

This example configures and applies an IPv6 ACL named “acl1”, which denies Web management access to the device from the specified IPv6 addresses, but allows access from any other IPv6 address.

```
(config)# ipv6 access-list acl2
(config-ipv6-access-list acl2)# permit ipv6 host 2000:2382::e0bb:2 any
(config-ipv6-access-list acl2)# deny ipv6 any any
(config-ipv6-access-list acl2)# exit
```

This example configures and applies an IPv6 ACL named “acl2”, which allows Web management access to the device only from the specified IPv6 address, and denies access from any other IPv6 address.

Syntax: `web access-group ipv6 ipv6-acl-name`

The *ipv6-acl-name* variable is a valid IPv6 ACL.

Restricting SNMP access by specifying an IPv6 ACL

You can configure an IPv6 ACL to restrict Web management access to management functions on the device.

NOTE

The syntax for configuring ACLs for SNMP access differs from the syntax for controlling Telnet, SSH, and Web management access using ACLs.

```
Brocade(config)# ipv6 access-list aclro
Brocade(config-ipv6-access-list aclro)# deny ipv6 host 2000:2382::e0bb:2 any
Brocade(config-ipv6-access-list aclro)# deny ipv6 2001:DB8::ff89/128 any
Brocade(config-ipv6-access-list aclro)# permit ipv6 any any
Brocade(config-ipv6-access-list aclro)# exit
Brocade(config)# ipv6 access-list aclrw
Brocade(config-ipv6-access-list aclrw)# permit ipv6 host 2000:2382::e0bb:2 any
Brocade(config-ipv6-access-list aclrw)# deny ipv6 any any
Brocade(config-ipv6-access-list aclrw)# exit
Brocade(config)# snmp-server community public ro ipv6 aclro
Brocade(config)# snmp-server community private rw ipv6 aclrw
Brocade(config)# write memory
```

These commands configure IPv6 ACLs *aclro* and *aclrw*, then apply these ACLs to community strings. ACL *aclro* controls read-only access using the “public” community string. ACL *aclrw* controls read-write access using the “private” community string.

Syntax: `[no] snmp-server community string {ro | rw} ipv6 ipv6-acl-name`

The *string* specifies the SNMP community string you must enter for SNMP access.

The **ro** parameter indicates that the community string is for read-only (“get”) access. The **rw** parameter indicates the community string is for read-write (“set”) access.

The **ipv6** parameter indicates that you are applying an IPv6 access list.

The *ipv6-acl-name* variable specifies the IPv6 access list name.

NOTE

When **snmp-server community** is configured, all incoming SNMP packets are validated first by their community strings and then by their bound ACLs. Packets are permitted if no filters are configured for an ACL.

Restricting Web management access to your device to a specific IPv6 host

You can restrict Web management access to your device to a specific IPv6 host only. Enter commands such as the following.

```
Brocade(config)# web client ipv6 2001:db8:e0bb::2
```

Syntax: [no] **web client ipv6** *ipv6-address*

The *ipv6-address* must be in hexadecimal format using 16-bit values between colons, as documented in RFC 2373.

Specifying an IPv6 Syslog server

To specify an IPv6 Syslog server, enter a command such as the following.

```
Brocade(config)# log host ipv6 2001:db8:e0bb::4
```

Syntax: [no] **log host ipv6** *ipv6-address* [*udp-port-num*]

The *ipv6-address* must be in hexadecimal using 16-bit values between colons, as documented in RFC 2373.

The *udp-port-num* optional parameter specifies the UDP application port used for the Syslog facility.

Viewing IPv6 SNMP server addresses

Many **show** commands display IPv6 addresses for IPv6 SNMP servers. This example shows output for the **show snmp server** command.

```
Brocade# show snmp server

      Contact:
      Location:
Community(ro): .....

Traps
      Warm/Cold start: Enable
      Link up: Enable
      Link down: Enable
      Authentication: Enable
Locked address violation: Enable
      Power supply failure: Enable
      Fan failure: Enable
      Temperature warning: Enable
      STP new root: Enable
      STP topology change: Enable
      vsrp: Enable

Total Trap-Receiver Entries: 4

Trap-Receiver IP-Address          Port-Number Community
-----
1          10.147.201.100          162          .....
2          2001:db8:4000::200      162          .....
3          10.147.202.100          162          .....
4          2001:db8:3000::200      162          .....
```

Disabling router advertisement and solicitation messages

Router advertisement and solicitation messages enable a device to discover other devices on the same link. By default, router advertisement and solicitation message generation is enabled. To disable this feature, configure an IPv6 access list that denies them. Enter commands such as the following.

```
Brocade(config)# ipv6 access-list rtradvert
Brocade(config-ipv6-access-list rtradvert)# deny icmp any any
router-advertisement
Brocade(config-ipv6-access-list rtradvert)# deny icmp any any router-solicitation
Brocade(config-ipv6-access-list rtradvert)# permit ipv6 any any
```

IPv6 Non stop routing and graceful restart

At times, routers may need to restart or may undergo failover. Traditionally during a restart or failover, sessions with the restarting devices are tore down and re-established. Traffic is disrupted due to route deletion and addition in the forwarding plane. Graceful Restart (GR) and Non Stop Routing (NSR) are two different mechanisms to prevent routing protocol re-convergence during a processor switchover.

When Graceful Restart is used, peer networking devices are informed, via protocol extensions that the router is undergoing a restart condition. Peer devices, known as “helper” devices, will continue to forward to the restarting router until a “grace period”, within which the adjacency is re-established.

When Non Stop Routing is used, peer networking devices have no knowledge of any event on the router that is switching over. All information needed to continue the routing protocol peering state is transferred to the standby processor so it can continue immediately upon a switchover. Since NSR does not require the help of neighboring routers during restart, NSR capable routers can be deployed independently in an existing network.

Limitations

- Configuration events that occur at the same time as the switchover may get lost due to the CLI synchronization.
- Neighbor, interface, or NSSA translation state changes 'close' to and during the switchover will not be handled.
 - Due to the core-reset of the LP, dead-timers below 40 seconds are not supported.
 - Number of neighbors supported may be limited depending on how many packets LP can send upon completion of the core-reset, due to competition with LP-sync-updates to get OSPF neighbor packets sent out.
- Traffic counters will not be synced. Neighbor and LSA DB counters will be recalculated on Standby during sync.
- There may be a slowdown of LSA acking due to the wait for the ack from Standby before acking the received LSAs.
- OSPF Database Overflow condition for External LSAs - depending on the sequence of redistribution or new LSAs (from neighbors), the LSAs accepted within the limits of the database may change upon switchover.
- The NSR hitless failover event may not be completely transparent to the network as after switchover additional flooding related protocol traffic will be generated to the directly connected neighbors.
- OSPF Startup Timers will not be applied upon NSR switchover.

Supported protocols

The following protocols support both failover and Hitless Operating system Switchover (HLOS) for each protocol.

TABLE 71 IPv6 Supported protocols for non-stop routing and graceful restart

Protocol	Mechanism
OSPFv3	Non-stop routing, Graceful restart helper
IS-IS IPv6	Non-stop routing
BGP IPv6	Graceful restart

Restart global timers

Restart contains two global timers, **max-hold-timer** and the **protocols-converge-timer**, that:

- Limit the amount of time used for re-syncing routes between the backup Management module and Interface modules (LPs) within the same chassis
- Allow a buffer time for protocols to converge and solve dependencies among each other

If the protocol-based restart features are configured when a Management module (MP) performs a switchover to its backup, routes are maintained on the LPs through the protocol-based restart processes for a specified period of time while the new MP learns the network routes. Once the MP learns all of its routes, the routes from the MP are synced with the routes on the LPs.

Graceful-restart IPv6 max-hold-timer

The **graceful-restart ipv6 max-hold-timer** command defines the time that a Brocade device waits before sync up forwarding information is sent to the LP.

Use the **graceful-restart ipv6 max-hold-timer** command to set the max-hold-timer value.

```
Brocade(config)# graceful-restart ipv6 max-hold-timer 300
```

Syntax: `[no] graceful-restart ipv6 max-hold-timer hold-interval`

The *hold-time* variable is the maximum hold time in seconds before sync up forwarding information is sent to the LP. The acceptable range is 30 to 3600 seconds. The default is 300 seconds.

Graceful-restart IPv6 protocols-converge-timer

The **graceful-restart ipv6 protocols-converge-timer** command defines the time that a Brocade device waits for restarting protocols to converge at the final step in the restart process. In a heavily loaded system where BGP/OSPF/GRE/Static protocols can have a dependency on each other, their restart procedures may also depend on each other. This timer allows protocols to solve inter-dependencies after individual restart processes and before routing modules sync up new forwarding information to the interface module. The default value of 5 seconds will work in most cases, but if a system is heavily loaded and has protocols that depend on each other, it is recommended to increase this value.

Use the **graceful-restart ipv6 protocols-converge-timer** command to set the timer value.

```
Brocade(config)# graceful-restart ipv6 protocols-converge-timer 20
```

Syntax: `[no] graceful-restart ipv6 protocols-converge-timer convergence-interval`

The *hold-time* variable is the maximum hold time in seconds before management routing modules sync up new forwarding information to interface modules during restart. The range of permissible values is 0 to 1200 seconds. The default value is 5 seconds.

Configuring NSR and graceful restart on OSPFv3

OSPFv3 supports nonstop routing and graceful-restart helper mode. Nonstop routing and graceful-restart helper mode can be configured both in legacy router mode or VRF mode. The following commands are used to configure NSR and graceful-restart helper mode.

```
Brocade(config-ospf6-router)#nonstop-routing
```

Syntax: `[no] nonstop-routing`

The **nonstop routing** command enables nonstop routing in OSPFv3.

NSR OSPFv3 is only supported on Brocade MLX series and Brocade NetIron XMR devices. Graceful restart helper mode is supported on Brocade MLX series and Brocade NetIron XMR devices and Brocade NetIron CER and Brocade NetIron CES devices.

Use the **graceful-restart helper** command to configure or disable helper mode.

```
Brocade(config-ospf6-router)#graceful-restart helper
```

Syntax: `[no] graceful-restart helper [disable | strict-lsa-checking]`

The **graceful-restart helper disable** command disables the graceful-restart helper capability. By default it is enabled.

The **strict-lsa-checking** command exits helper mode upon a change in topology during a graceful restart.

Show commands

Show running-configuration

This command shows the running configuration.

```
Brocade#show running-config
...
ip router-id 10.1.1.1
!
ipv6 router ospf
 area 0
  nonstop-routing
!
...
!
ipv6 router ospf vrf red
 graceful-restart helper strict-lsa-checking
!
...
ipv6 router ospf vrf blue
 area 0
 graceful-restart helper disable
!
```

Syntax: show running-config

Show ipv6 ospf

This command shows the IPv6 OSPF configuration.

```
Brocade#show ipv6 ospf
OSPFv3 Process number 0 with Router ID 0x10010101(10.1.1.1)
Running 0 days 3 hours 11 minutes 42 seconds
Number of AS scoped LSAs is 9
Sum of AS scoped LSAs Checksum is 00006cc6
External LSA Limit is 250000
Route calculation executed 1 times
Pending outgoing LSA count 0
Authentication key rollover interval 300 seconds
Number of areas in this router is 1
High Priority Message Queue Full count: 0
BFD is disabled
Graceful restart helper is enabled, strict lsa checking is disabled
Nonstop Routing is enabled
```

Syntax: show ipv6 ospf

Show ipv6 ospf vrf vrf name

This command shows the IPv6 OSPF configuration on a specific VRF.

```
Brocade#show ipv6 ospf vrf red
OSPFv3 Process number 0 with Router ID 0x10020202(10.2.2.2)
Running 0 days 8 hours 32 minutes 14 seconds
Number of AS scoped LSAs is 4
Sum of AS scoped LSAs Checksum is 00007d93
External LSA Limit is 250000
Route calculation executed 1 times
Pending outgoing LSA count 0
Authentication key rollover interval 300 seconds
Number of areas in this router is 1
High Priority Message Queue Full count: 0
BFD is disabled
Graceful restart helper is enabled, strict lsa checking is enabled
Nonstop Routing is disabled
```

```
Brocade#show ipv6 ospf vrf blue
OSPFv3 Process number 0 with Router ID 0x10020202(10.2.2.2)
Running 0 days 8 hours 32 minutes 14 seconds
Number of AS scoped LSAs is 4
Sum of AS scoped LSAs Checksum is 00007d93
External LSA Limit is 250000
Route calculation executed 1 times
Pending outgoing LSA count 0
Authentication key rollover interval 300 seconds
Number of areas in this router is 1
High Priority Message Queue Full count: 0
BFD is disabled
Graceful restart helper is disabled, strict lsa checking is disabled
Nonstop Routing is disabled
```

Syntax: show ipv6 ospf vrf vrf name

Show ipv6 ospf database

This command shows the IPv6 OSPF database configuration.

```
Brocade#show ipv6 ospf database
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace

Area ID          Type LSID          Adv Rtr          Seq(Hex) Age  Cksum Len  Sync
0                Rtr  0                10.1.1.1         800004cb 264 e06e 40  Yes
0                Iap  0                10.1.1.1         800004dc 264 9de4 52  Yes
0                Grc  1                10.2.2.2         80000001 17  a8a6 32  Yes
```

Syntax: show ipv6 ospf database**Show ipv6 ospf data summary**

This command displays the IPv6 OSPF data summary.

```
Brocade(config-ospf6-router)#show ipv6 ospf data summary
AS scope:
          Active  MaxAge
ASExternal      0          0
Area 0 scope:
          Active  MaxAge
Router          1          0
Network         0          0
InterPrefix     0          0
InterRouter     0          0
Type7           0          0
IntraPrefix     1          0
Other           0          0
Total           0          0
Interface scope (over 1 interfaces):
          Active  MaxAge
Link      0          0
Grace   1          0
Other     0          0
Total    1          0
Total: 3 LSAs, 3 Active LSAs, 0 MaxAge LSAs
```

Syntax: show ipv6 ospf data summary**Show ipv6 ospf database grace**

This command shows the IPv6 OSPF LSA timer grace period configuration.

```
Brocade#show ipv6 ospf database grace
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix Grc:Grace

Area ID          Type LSID          Adv Rtr          Seq(Hex) Age  Cksum Len
0                Grc  1                10.4.4.4         80000001 17  a8a6 36
Restart duration: 150
Restart Reason: Software Reload
```

Syntax: show ipv6 ospf database grace

Configuring Non Stop Routing on IS-IS

NOTE

IPv6 IS-IS NSR is not supported on the Brocade NetIron CES and Brocade NetIron CER platforms.

IS-IS IPv6 supports nonstop routing. The following command is used to configure NSR. Further configuration details are available in Chapter 54.

```
Brocade(config-isis-router)#nononstop-routing
```

Syntax: [no] nonstop-routing

The **nonstop routing** command enables nonstop routing in IS-IS IPv6.

Show commands

Show isis

This command shows the IS-IS configuration.

```
Brocade#show isis
IS-IS Routing Protocol Operation State: Enabled
IS-Type: Level-1-2
...
Global Hello Padding For Point to Point Circuits: Enabled
Ptpt Three Way HandShake Mechanism: Enabled
BGP Ipv4 Converged: FALSE, Ipv6 Converged: FALSE
IS-IS Traffic Engineering Support: Disabled
No ISIS Shortcuts Configured
BFD: Disabled
NSR: Enabled
  NSR State: Normal
  Standby MP: Active
  Sync State: Enabled
Interfaces with IPv4 IS-IS configured:
None
...
```

Configuring BGP graceful restart

BGP IPv6 supports graceful restart.

- BGP informs Graceful Restart capability to its peer.
- BGP peers retains BGP routing information and help Graceful Restart process.

The following command is used to configure graceful restart.

```
Brocade(config-bgp-router)#graceful-restart
```

Syntax: [no] graceful-restart [purge-time] [restart-time] [stale-routes-time]

The **graceful-restart** command enables graceful restart for the address-family. The **purge-time** command is used to configure the maximum time in seconds before stale routes are purged. The **purge-time** cannot be less than the time set for the **stale-routes-time**.

The **restart-time** command is used to configure the maximum restart time advertised to neighbors in seconds. The **stale-routes-time** command is used to configure the maximum wait time in seconds for BGP EOR marker.

Show commands

Show running-configuration

This command shows the running configuration.

```
Brocade#show running-config
Current BGP configuration:

router bgp
  local-as 200
  neighbor 2001:DB8:22::6 remote-as 100

  address-family ipv4 unicast
    graceful-restart stale-routes-time 100
    graceful-restart purge-time 100
    graceful-restart
  no neighbor 2001:DB8:22::6 activate
  exit-address-family

  address-family ipv4 multicast
  exit-address-family

  address-family ipv6 unicast
    graceful-restart restart-time 160
    graceful-restart stale-routes-time 120
    graceful-restart purge-time 120
    graceful-restart
  neighbor 2001:DB8:22::6 activate
  exit-address-family

  address-family ipv6 multicast
  exit-address-family

  address-family l2vpn vpls
  exit-address-family
end of BGP configuration
```

Show ipv6 bgp neighbors IP address

This command shows the running configuration.

```
Brocade#show ipv6 bgp neighbors 2001:DB8:22::6

1  IP Address: 2001:DB8:22::6, AS: 100 (EBGP), RouterID: 10.6.6.6, VRF:
default-vrf
  State: ESTABLISHED, Time: 2h24m36s, KeepAliveTime: 60, HoldTime: 180
  KeepAliveTimer Expire in 16 seconds, HoldTimer Expire in 142 seconds
  Minimal Route Advertisement Interval: 0 seconds
  RefreshCapability: Received
  GracefulRestartCapability: Sent
    Restart Time 160 sec, Restart bit 0
    afi/safi 2/1, Forwarding bit 0
  Messages:      Open      Update  KeepAlive Notification Refresh-Req
    Sent         : 1        1      164         0           0
```

IPv6 Non stop routing and graceful restart

```
Received: 1      0      164      0      0
Last Update Time: NLRI      Withdraw      NLRI      Withdraw
Tx: ---      ---      Rx: ---      ---
Last Connection Reset Reason:Unknown
Notification Sent:      Unspecified
Notification Received: Unspecified
Neighbor NLRI Negotiation:
  Peer Negotiated IPV6 unicast capability
  Peer configured for IPV6 unicast Routes
Neighbor ipv6 MPLS Label Capability Negotiation:
Neighbor AS4 Capability Negotiation:
Outbound Policy Group:
  ID: 2, Use Count: 1
BFD:Disabled
TCP Connection state: ESTABLISHED, flags:00000044 (0,0)
Maximum segment size: 1440
```


Syntax: Show ipv6 bgp neighbors *IP address*

IPv6 Hitless OS upgrade

OSPFv3, IS-IS IPv6, and BGP IPv6 support both failover and Hitless Operating System Switchover (HLOS). HLOS provides a platform support mechanism to upgrade image without disrupting routing and forwarding service.

The process of syncing routes between a new MP and its LPs using the new timers are illustrated in [Figure 32](#) and described in the following steps.

FIGURE 32 IPv6 HLOS operation

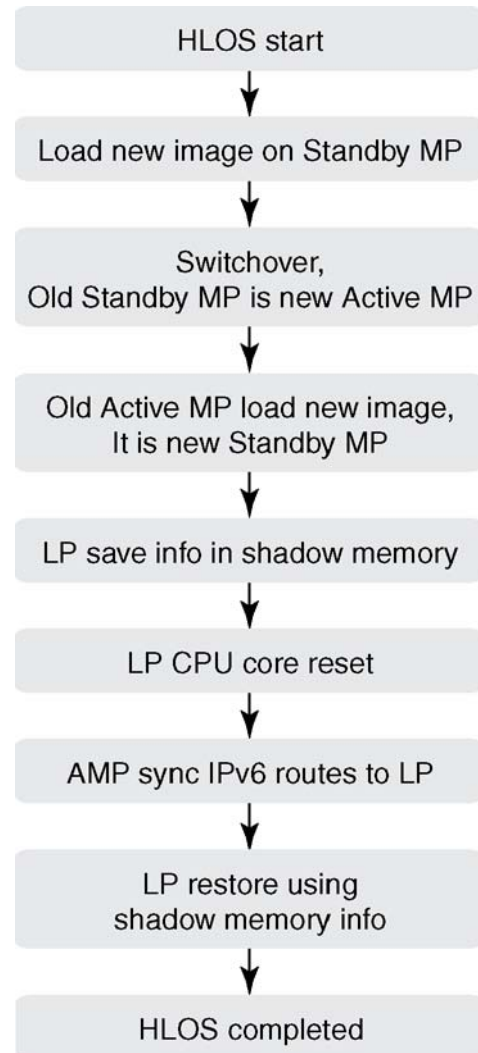

1. HLOS starts and the Standby MP is rebooted with a new image.
2. System switches over and the Standby MP takes role of the Active MP.
3. The old Active MP is rebooted with the new image and it takes the role of the Standby MP.
4. Once the Active and Standby MP are in sync, the LP backs up the necessary IPv6 route information.
5. The LP CPU core resets, once the core reset is complete the LP receives IPv6 route information from Active MP.

6. The LP restores the complete IPv6 routes using the information synced from the Active MP to the LP and the backed up information on the LP.
7. HLOS complete.

Configuring IPv4 and IPv6 protocol stacks

If a device is deployed as an endpoint for an IPv6 over IPv4 tunnel, you must configure the device to support IPv4 and IPv6 protocol stacks. Each interface that sends and receives IPv4 and IPv6 traffic must be configured with an IPv4 address and an IPv6 address. You can also explicitly enable IPv6 using the **ipv6 enable** command. Refer to [“Configuring a link-local IPv6 address”](#) on page 410.)

To configure an interface to support both IPv4 and IPv6 protocol stacks, enter commands such as the following.

```
Brocade(config)# ipv6 unicast-routing
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ip address 192.168.1.1 255.255.255.0
Brocade(config-if-e100-3/1)# ipv6 address 2001:DB8:12d:1300::/64 eui-64
```

These commands globally enable IPv6 routing on the device, and configure an IPv4 address and an IPv6 address for Ethernet interface 3/1.

Syntax: **[no] ipv6 unicast-routing**

To disable IPv6 traffic globally on the Brocade device, enter the **no** form of this command.

Syntax: **[no] ip address ip-address sub-net-mask [secondary]**

You must specify the *ip-address* parameter using 8-bit values in dotted decimal notation.

You can specify the *sub-net-mask* parameter in either dotted decimal notation or as a decimal value preceded by a slash mark (/).

The **secondary** keyword specifies that the configured address is a secondary IPv4 address.

To remove the IPv4 address from the interface, enter the **no** form of this command.

Syntax: **[no] ipv6 address ipv6-prefix/prefix-length [eui-64]**

This syntax specifies a global or unique local IPv6 unicast address. For information about configuring a link-local IPv6 address, refer to [“Configuring a link-local IPv6 address”](#) on page 410.

You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The **eui-64** keyword configures the global or unique local unicast address with an EUI-64 interface ID in the low-order 64 bits. The interface ID is automatically constructed in IEEE EUI-64 format using the MAC address of the interface. If you do not specify the **eui-64** keyword, you must manually configure the 64-bit interface ID as well as the 64-bit network prefix. For more information about manually configuring an interface ID, refer to [“Configuring a global or unique local IPv6 unicast address”](#) on page 408.

Configuring IPv6 Domain Name Server (DNS) resolver

The Domain Name Server (DNS) resolver feature lets you use a host name to perform Telnet, ping, and traceroute commands. You can also define a DNS domain on a device to recognize all hosts within that domain. After you define a domain name, the device automatically appends the appropriate domain to the host and forwards it to the domain name server.

For example, if the domain “example.com” is defined on a device, and you want to initiate a ping to host “EXC01” on that domain, you only need to reference the host name instead of the host name and the domain name. For example, enter either of the following commands to initiate the ping.

```
Brocade# ping exc01
Brocade# ping exc01.example.com
```

Defining a DNS entry

You can define up to four DNS servers for each DNS entry. The first entry serves as the primary default address. If a query to the primary address is not resolved after three attempts, the next gateway address is queried (up to three times). This process continues for each defined gateway address until the query is resolved. The order in which the default gateway addresses are polled is the same as the order in which you enter them.

To define the domain name *example.com* on a device and then define four possible default DNS gateway addresses, using IPv4 addressing, enter the following commands.

```
Brocade(config)# ip dns domain-name example.com
Brocade(config)# ip dns server-address 10.157.22.199 10.96.7.15 10.95.7.25
10.98.7.15
```

Syntax: [no] ip dns server-address *ip-addr* [*ip-addr*] [*ip-addr*] [*ip-addr*]

In this example, the first IP address in the command becomes the primary gateway address and all others are secondary addresses. Because IP address 10.98.7.15 is the last address listed, it is also the last address consulted to resolve a query.

Defining an IPv6 DNS entry

IPv6 defines new DNS record types to resolve queries for domain names to IPv6 addresses, as well as IPv6 addresses to domain names. Devices running IPv6 software support AAAA DNS records, which are defined in RFC 1886.

AAAA DNS records are analogous to the A DNS records used with IPv4. A complete IPv6 address is stored in each record. AAAA records have a type value of 28.

To establish an IPv6 DNS entry for the device, enter the following command.

```
Brocade(config)# ipv6 dns domain-name example.com
```

Syntax: [no] ipv6 dns domain-name *domain name*

To define an IPv6 DNS server address, enter the following command.

```
Brocade(config)# ipv6 dns server-address 2001:DB8::1
```

Syntax: [no] ipv6 dns server-address *ipv6-addr* [*ipv6-addr*] [*ipv6-addr*] [*ipv6-addr*]

For example, in a configuration where *ftp6.example.com* is a server with an IPv6 protocol stack, when a user pings *ftp6.example.com*, the device attempts to resolve the AAAA DNS record. In addition, if the DNS server does not have an IPv6 address, as long as it is able to resolve AAAA records, it can still respond to DNS queries.

DNS queries of IPv4 and IPv6 DNS servers

IPv4 and IPv6 DNS record queries search through IPv4 and IPv6 DNS servers are described here.

For IPv4 DNS record queries:

- Loop through all configured IPv4 DNS servers.
- If no IPv4 DNS servers are configured, then loop through all configured IPv6 DNS servers (if any).

For IPv6 DNS record queries:

- Loop through all configured IPv6 DNS servers.
- If no IPv6 DNS servers are configured, then loop through all configured IPv4 DNS servers (if any).

IPv6 Non-Stop Routing support

When IPv6 Non-Stop-Routing (NSR) is used, peer networking devices do not have knowledge of any event on the switching over router. All information needed to continue the routing protocol peering state is transferred to the standby processor so it can pick up immediately upon a switchover. As NSR does not need the help of neighboring routers during restart, the NSR-capable routers can be deployed independently in an existing network.

This section describes support for IPv6 Non-Stop-Routing (NSR) on Brocade MLX series and Brocade NetIron XMR devices. The scope of this section is for IPv6 unicast routing only.

Limitations

- Configuration events that occur closer to switchover may get lost due to CLI synchronization issues.
- Neighbor, interface, or NSSA translation state changes that occur close to and during the switchover will not be handled.
- Counters - Traffic counters will not be synchronized. Neighbor and LSA DB counters will be recalculated on Standby during sync and thus not synchronized.
- OSPF Database Overflow condition for External LSAs - depending on the sequence of redistribution or new LSAs (from neighbors) the LSAs accepted within the limits of the database may change upon switchover.
- The NSR hitless failover event may not be completely transparent to the network as after switchover additional flooding related protocol traffic will be generated to the directly connected neighbors.
- OSPF Startup Timers - will not be applied upon NSR switchover.

Configuring IPv6 NSR support

Use the following commands to configure IPv6 Non-Stop Routing support.

The **graceful-restart ipv6 max-hold-timer** sets the hold interval.

```
Brocade(config)#graceful-restart ipv6 max-hold-timer 100
```

Syntax: **[no] graceful-restart ipv6 max-hold-timer** *hold-interval*

The acceptable range for the maximum hold time before sync up forwarding information is 30 to 3600 seconds. The default is 300 seconds.

The **graceful-restart ipv6 protocols-converge-timer** sets the convergence interval. The default setting is 5 seconds.

```
Brocade(config)#no graceful-restart ipv6 protocol-convergence-timer 50
```

Syntax: **[no] graceful-restart ipv6 protocols-converge-timer** *convergence-interval*

The acceptable range for the maximum time for protocols to converge after a graceful restart is 0 to 1200 seconds. The default protocol convergence time is 5seconds.

ECMP load sharing for IPv6

IPv6 ECMP load sharing is hardware-managed. If there is more than one path to a given destination, a hash is calculated based on the source MAC address, destination MAC address, source IPv6 address, destination IPv6 address, and TCP/UDP source port and destination port (if the packet is also a TCP and UDP packet). This hash is used to select one of the paths.

Disabling or re-enabling ECMP load sharing for IPv6

ECMP load sharing for IPv6 is enabled by default. To disable the feature, enter the following command.

```
Brocade(config)# no ipv6 load-sharing
```

To re-enable the feature after disabling it, enter the following command.

```
Brocade(config)# ipv6 load-sharing 4
```

Syntax: **[no] ipv6 load-sharing** *number*

The *number* parameter specifies the number of ECMP load sharing paths. Enter a value between 2 and 32 for *number* to set the maximum number of paths. The default value is 4.

NOTE

The maximum number of paths supported by the BR-MLX-10Gx24-DM module is 16.

Changing the maximum number of load sharing paths for IPv6

By default, IPv6 ECMP load sharing balances traffic across up to four equal paths. You can change the maximum number of paths to a value between 2 and 32.

To change the number of ECMP load sharing paths for IPv6, enter the following command:

```
Brocade(config)# ipv6 load-sharing 8
```

Syntax: [no] **ipv6 load-sharing** *number*

The *number* parameter specifies the number of ECMP load sharing paths. Enter a value between 2 and 32 for *number* to set the maximum number of paths. The default value is 4.

NOTE

The maximum number of paths supported by the BR-MLX-10Gx24-DM module is 16.

DHCP relay agent for IPv6

A client locates a DHCP server using a reserved, link-scoped multicast address. Direct communication between client and the server requires that they be attached by the same link. In some situations where ease-of-management, economy, and scalability are concerns, you can allow a DHCPv6 client to send a message to a DHCP server using a DHCPv6 relay agent. A DHCPv6 relay agent, which may reside on the client link, but is transparent to the client, relays messages between the client and the server.


When the relay agent receives a message, it creates a new relay-forward message, inserts the original DHCPv6 message, and sends the relay-forward message as the DHCP server.

DHCPv6 Relay Agent Prefix Delegation Notification

DHCPv6 Relay Agent Prefix Delegation Notification feature allows a DHCPv6 server to dynamically delegate IPv6 prefixes to a DHCPv6 client using the DHCPv6 Prefix Delegation (PD) option. DHCPv6 prefix delegation enables an Internet service provider (ISP) to automate the process of assigning prefixes to a customer premises equipment (CPE) network. The CPE then assigns IPv6 subnets from the delegated IPv6 prefix to its downstream customer interfaces.

This feature description is shown in [Figure 33](#).

FIGURE 33 DHCPv6 Relay Agent Prefix Delegation Notification

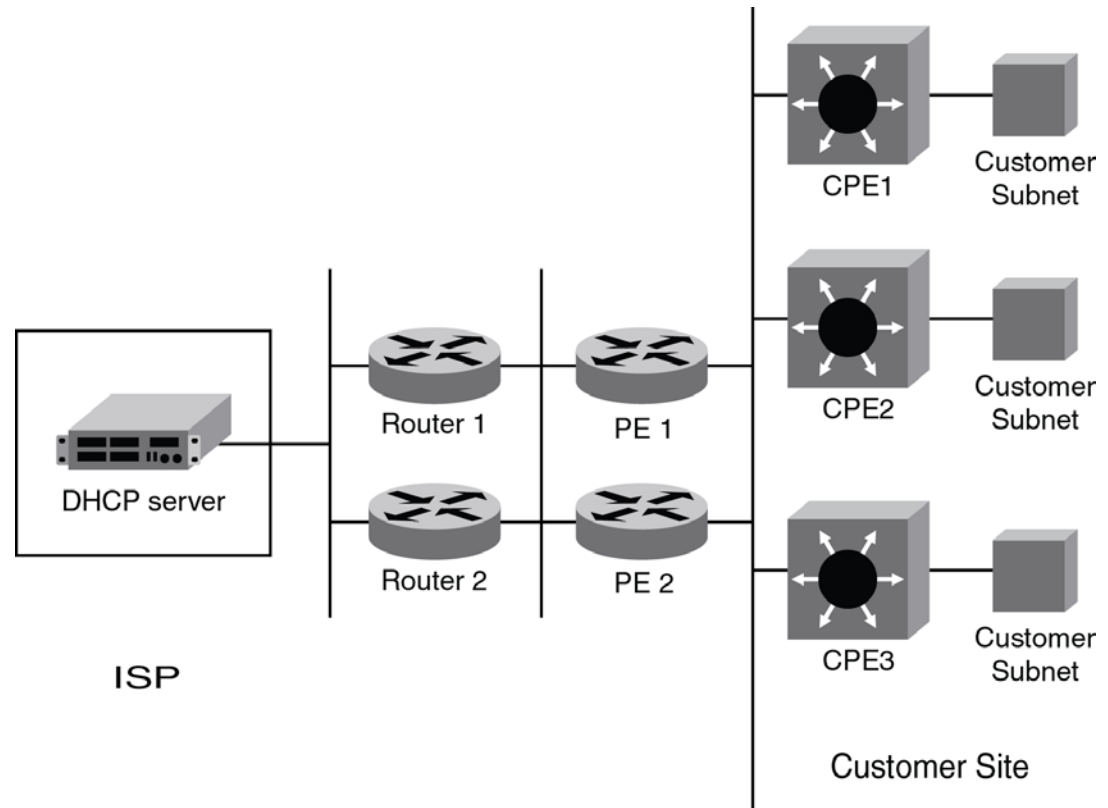

A route is added to the IPv6 route table on the provider edge router (PE) for the delegated prefix to be delegated to requesting routers. The delegating router chooses a prefix for delegation and responds with it to the requesting router, to the external network and to enable the correct forwarding of the IPv6 packets for the delegated IPv6 prefix. Adding the delegated prefix to the IPv6 route table ensures that the unicast Reverse Path Forwarding (uRPF) works correctly.

Since the PE is also a DHCPv6 relay agent (it relays DHCPv6 messages between the CPE and the DHCP server), it examines all DHCPv6 messages relayed between the CPE and the DHCP server and gathers information about a delegated prefix and then manages the advertisement of this delegated prefix to the external network.

DHCPv6 Relay Agent Prefix Delegation Notification limitations

The following limitations apply to the DHCPv6 Relay Agent Prefix Delegation Notification.

- The PD notification fails when the DHCPv6 messages between a DHCPv6 server and a DHCPv6 client containing the PD option are not relayed via the DHCPv6 relay agent.
- If the delegated prefix is released or renewed by the client at the time when the DHCPv6 relay agent is down or rebooting, then this release or renewal of the delegated prefix will not be detected by the relay agent.
- If there is no sufficient disk space on a flash disk, then the system may not store all the delegated prefixes in the IPv6 route table.

Upgrade and downgrade considerations

- When a router is upgraded to the version of software that supports this feature, the saved information about delegated prefixes will be examined and if the delegated prefix lifetime is not expired, then the prefix will be added to the IPv6 static route table.
- When a router is downgraded to the version of software that does not support this feature, the saved information about delegated prefixes is retained and it cannot be used. If the delegated prefix lifetime is not expired, then the prefix will be added to the IPv6 static route table.

Configuring DHCP for IPv6 relay agent

You can enable the DHCP for IPv6 relay agent function and specify the relay destination address (i.e. the DHCP server) on an interface by entering this command at the interface level.

```
Brocade(config)# interface ethernet 2/3
Brocade(config-if-e10000-2/3)#ipv6 dhcp-relay-destination 2001:DB8::2
```

Syntax: [no] **ipv6 dhcp-relay-destination** *ipv6-address*

Specify the *ipv6-address* as a destination address to which client messages are forwarded and which enables DHCP for IPv6 relay service on the interface. A maximum of 16 relay destination addresses may be entered.

Configuring DHCPv6 Relay Agent Prefix Delegation Notification

To set the number of delegated prefixes that can be learned at the global system level, use the **ipv6 dhcp-relay maximum-delegated-prefixes** command.

By default, the DHCPv6 Relay Agent Prefix Delegation Notification is enabled when the DHCPv6 relay agent feature is enabled on an interface. User can disable the DHCPv6 Relay Agent Prefix Delegation Notification at system or interface level by setting **ipv6 dhcp-relay maximum-delegated-prefixes** to 0 at system level or interface level as required.

NOTE

There should be a minimum free space of 7 MB in the flash memory to save information about delegated prefixes in flash on both the Active and Standby management processor

```
Brocade(config)# ipv6 dhcp-relay maximum-delegated-prefixes 5000
```

Syntax: [no] **ipv6 dhcp-relay maximum-delegated-prefixes** *value*

The *value* parameter is used to limit the maximum number of prefixes that can be learnt at the global level. The range is from 0 to 100000. The default value varies for different platforms.

Use the **no ipv6 dhcp-relay maximum-delegated-prefixes** command to set the parameter to the default value of the specified platform. See [Table 72](#) for more information.

Enabling DHCPv6 Relay Agent Prefix Delegation notification on an interface

To set the number of delegated prefixes that can be learned at the interface level, use the **ipv6 dhcp-relay maximum-delegated-prefixes** command. This command limits the maximum number of prefixes that can be learnt on the interface.

```
Brocade(config-if-eth2/1)# ipv6 dhcp-relay maximum-delegated-prefixes 4000
```

Syntax: [no] **ipv6 dhcp-relay maximum-delegated-prefixes** *value*

The *value* parameter is used to limit the maximum number of prefixes that can be delegated. The range is from 0 to 20000. The default value is 20000.

Use the **no ipv6 dhcp-relay maximum-delegated-prefixes** command to set the parameter to the default value of the specified platform. See [Table 72](#) for more information.

[Table 72](#) lists the default and maximum prefix values for different platforms.

TABLE 72 Default and maximum values for different platforms

Platform	Default Maximum System Prefixes supported	Maximum System Prefixes supported	Default Maximum Interface Prefixes supported	Maximum interface Prefixes supported	Default Maximum IPv6 Route	Maximum IPv6 routes that can be supported
Brocade NetIron CES	1000	8000	250	2000	1024	8192
Brocade NetIron CER	8000	100000	2000	20000	8192	131072
Brocade MLX and MLXe series	32000	100000	8000	20000	32768	114688
Brocade NetIron XMR	60000	100000	20000	20000	65536	245760

Assigning the administrative distance to DHCPv6 static routes

To assign the administrative distance to DHCPv6 static routes installed in IPv6 route table for the delegated prefixes on the interface, use the **ipv6 dhcp-relay distance** command at the interface level. The administrative distance value has to be set so that it does not replace the same IPv6 static route configured by the user.

```
Brocade(config-if-eth2/1)# ipv6 dhcp-relay distance 25
```

Syntax: [no] **ipv6 dhcp-relay distance** *value*

The *value* parameter is used to assign the administrative distance to DHCPv6 static routes on the interface. The range is from 1 to 255. The default value is 10. If the value is set to 255, then the delegated prefixes for this interface will not be installed in the IPv6 static route table.

Use the **no ipv6 dhcp-relay distance** command to set the parameter to a default value of 10.

Displaying the DHCPv6 Relay Agent Prefix Delegation Notification information

Enter the **show ipv6 dhcp-relay delegated-prefixes** command to display information about the delegated prefixes.

```
Brocade#show ipv6 dhcp-relay delegated-prefixes vrf red

IPv6 DHCP Relay Delegated Prefixes Table - 2 entries VRF: red

IPv6 Prefix          Client          Interface      ExpireTime
-----
2001:db8:aaa::/48    2001:db8:103:10:1::8    eth 1/3        3h24m10s
2001:db8:bbb::/48    2001:db8:104:10:1::6    eth 1/4        0m28s
Brocade#
```

Syntax: **show ipv6 dhcp-relay delegated-prefixes vrf** *vrf-name* { *X::X:X/M* | **client-id** *client ipv6 address* | **interface** *interface-id* }

The **vrf** *vrf-name* parameter is used to display the DHCPv6 delegated prefixes for a specific VRF.

The *X::X:X/M* parameter is used to display the specified delegated prefix information.

The **client-id** *client ipv6 address* parameter is used to display the delegated prefix for the specific client.

The **interface** *interface-id* parameter is used to display delegated prefixes for the specified outgoing interface.

[Table 73](#) describes the fields from the output of **show ipv6 dhcp-relay delegated-prefixes** command.

TABLE 73 Output from the show ipv6 dhcp-relay delegated-prefixes command

Field	Description
IPv6 Prefix	The IPv6 prefix delegated to the client.
Client	The IPv6 address of the client.
Interface	The interface on which the DHCPv6 messages are relayed to the client.
ExpireTime	The remaining lifetime of the delegated prefix.

Displaying the DHCPv6 Relay configured destinations

Enter the **show ipv6 dhcp-relay destinations** command to display information about the delegated prefixes' configured destinations for a specific interface.

```

Brocade#show ipv6 dhcp-relay destinations
DHCPv6 Relay Destinations:
Interface ve 100:
  Destination                OutgoingInterface
  2001:db8:1::39             NA
Interface ve 101:
  Destination                OutgoingInterface
  2001:db8:1::39             NA
Interface ve 102:
  Destination                OutgoingInterface
  2001:db8:1::39             NA

```

Syntax: show ipv6 dhcp-relay destinations

Table 74 describes the fields from the output of **show ipv6 dhcp-relay destinations** command.

TABLE 74 Output from the show ipv6 dhcp-relay destinations command

Field	Description
Destination	The configured destination IPv6 address.
OutgoingInterface	The interface on which packets will be relayed if the destination relay address is local link or multicast.

Displaying the DHCPv6 Relay Agent options

Enter the **show ipv6 dhcp-relay options** command to display information about the relay options available to the prefixed delegates for a specific interface.

```

Brocade# show ipv6 dhcp-relay options
DHCPv6 Relay Options Information:
Interface  Interface-Id  Remote-Id
ve 100     No                No
ve 101     Yes               No
ve 102     No                Yes

```

Syntax: show ipv6 dhcp-relay options

Table 75 describes the fields from the output of **show ipv6 dhcp-relay options** command.

TABLE 75 Output from the show ipv6 dhcp-relay options command

Field	Description
Interface	The interface name.
Interface-Id	The interface ID option. Yes or No indicates if the option is used or not.
Remote-Id	The remote ID option. Yes or No indicates if the option is used or not.

Displaying the DHCPv6 Relay prefix delegation information

Enter the **show ipv6 dhcp-relay prefix-delegation-information** command to display additional information about the DHCPv6 prefix delegation.

```

Brocade#show ipv6 dhcp prefix-delegation-information
DHCPv6 Relay Prefix Delegation Notification Information:
  Interface Current Maximum AdminDistance
  ve 100    20      20000    10
  ve 101    4000    20000    10
  ve 102    0        20000    10
  ve 103    0        20000    10
  ve 104    0        20000    10
  ve 105    0        20000    10

```

Syntax: show ipv6 dhcp-relay prefix-delegation-information

Table 76 describes the fields from the output of the **show ipv6 dhcp-relay prefix-delegation-information** command.

TABLE 76 Output from the show ipv6 dhcp-relay prefix-delegation-information command

Field	Description
Interface	The interface name.
Current	The number of delegated prefixes currently learned on the interface.
Maximum	The maximum number of delegated prefixes that can be learned on the interface.
AdminDistance	The current administrative distance used for prefixes learned on this interface when added to the IPv6 static route table.

Displaying the DHCPv6 Relay information for an interface

Enter the **show ipv6 dhcp-relay interface** command to display DHCPv6 relay information for a specific interface.

```

Brocade#show ipv6 dhcp-relay interface ve 100
DHCPv6 Relay Information for interface ve 100:
Destinations:
  Destination                      OutgoingInterface
  2001:db8:1::39                    NA
Options:
Interface-Id: No      Remote-Id:No
Prefix Delegation Notification:
Current:0 Maximum:20000 AdminDistance:10

```

Syntax: show ipv6 dhcp-relay interface *interface type*

The *interface type* is interface type such as ethernet, POS, or VE and the specific port number.

Table 77 describes the fields from the output of the **show ipv6 dhcp-relay interface** command.

TABLE 77 Output from the show ipv6 dhcp-relay interface command

Field	Description
Destinations	The DHCPv6 relay destination configured on the interface. <ul style="list-style-type: none"> • Destination: The configured destination IPv6 address. • OutgoingInterface: The interface on which packet will be relayed if the destination relay address is link local or multicast.
Options	The current information about DHCPv6 relay options for the interface. <ul style="list-style-type: none"> • Interface-Id: The interface ID option indicating if the option is used or not. • Remote-Id : The remote ID option indicating if the option is used or not.
Prefix Delegation Notification	This current information about the DHCPv6 Prefix Delegation for the interface. <ul style="list-style-type: none"> • Interface: The name of the interface. • Current - The number of delegated prefixes currently learned on the interface. • Maximum - The maximum number of delegated prefixes that can be learned on the interface. • AdminDistance - The administrative distance used for prefixes learned on the specific interface when added to IPv6 Static Route table.

Clearing the DHCPv6 delegated prefixes

To clear the DHCPv6 delegated prefixes for specific VRFs, use the **clear ipv6 dhcp-relay delegated-prefixes** command at the privilege level.

```
Brocade# clear ipv6 dhcp-relay delegated-prefixes vrf VRF1
```

Syntax: clear ipv6 dhcp-relay delegated-prefixes {vrf vrf-name} { X:X::X:X/M | all | interface interface-id }

The **vrf vrf-name** parameter is used to clear the DHCPv6 delegated prefixes for a specific VRF. If this parameter is not provided, then the information for the default VRF is cleared.

The **X:X::X:X/M** parameter is used to clear the specified delegated prefix and remove the corresponding route permanently from the router.

The **all** parameter is used to clear all the delegated prefixes and remove the corresponding routes permanently from the router for the VRF.

The **interface interface-id** parameter is used to clear all the delegated prefixes and remove the corresponding routes permanently from the router for the specified outgoing interface.

Clearing the DHCPv6 packet counters

To clear all DHCPv6 packet counters, use the **clear ipv6 dhcp-relay statistics** command at the privilege level.

```
Brocade# clear ipv6 dhcp-relay statistics
```

Syntax: clear ipv6 dhcp-relay statistics

Enabling support for network-based ECMP load sharing for IPv6

If network-based ECMP load sharing is configured, traffic is distributed across equal-cost paths based on the destination network address. Routes to each network are stored in CAM and accessed when a path to a network is required. Because multiple hosts are likely to reside on a network, this method uses fewer CAM entries than load sharing by host. When you configure network-based ECMP load sharing, you can choose either of the following CAM modes:

- **Dynamic mode** – In the dynamic mode, routes are entered into the CAM dynamically using a flow-based scheme, where routes are only added to the CAM as they are required. Once routes are added to the CAM, they can be aged-out when they are not in use. Because this mode conserves CAM, it is useful for situations where CAM resources are stressed or limited.
- **Static mode** – In the static mode, routes are entered into the CAM whenever they are discovered. Routes are not aged once routes are added to the CAM and can be aged-out when they are not in use.

IPv6 VPN CAM supports ECMP load sharing, which is created for IPv6 VPN routes.

Configuring the CAM mode to support network-based ECMP load sharing for IPv6

To configure the CAM mode to support network-based ECMP load sharing for IPv6, enter a command such as the following at the Global Configuration level.

```
Brocade(config)# cam-mode ipv6 dynamic
```

Syntax: [no] cam-mode ipv6 [dynamic | static | host]

The **dynamic** parameter configures the device for network-based ECMP load sharing using the dynamic CAM mode.

The **static** parameter configures the device for network-based ECMP load sharing using the static CAM mode.

The **host** parameter configures the device for host-based ECMP load sharing using the dynamic CAM mode.

You must restart the device for this command to take effect.

Displaying ECMP load-sharing information for IPv6

To display the status of ECMP load sharing for IPv6, enter the following command.

```
Brocade# show ipv6
Global Settings
unicast-routing enabled, ipv6 allowed to run, hop-limit 64
reverse-path-check disabled
urpf-exclude-default disabled
session-logging-age 5
No Inbound Access List Set
No Outbound Access List Set
Prefix-based IPv6 Load-sharing is Enabled, Number of load share paths: 4
source-route disabled, forward-source-route disabled
Configured Static Routes: 66
```

```
Configured Static Mroutes: 66
RIP: enabled
OSPF (default VRF): enabled
BGP: enabled, 1 active neighbor(s) configured
```

Syntax: show ipv6

You can display the entries in the IPv6 forwarding cache by entering the **show ipv6 cache** command.

```
Brocade# show ipv6 cache
Total number of IPv6 and IPv6 VPN cache entries: 3
  IPv6 Address                Next Hop                Interface
1      6000::                   LOCAL                   ve 60
2      6000::2                 LOCAL                   ve 60
3      fe80::768e:f8ff:fe2a:6200 LOCAL                   ve 60
```

Syntax: **show ipv6 cache** [*index-number* | *ipv6-prefix/prefix-length* | *ipv6-address* | **ethernet port** | **ve number** | **tunnel number**]

Configuring IPv6 ICMP

ICMP for IPv6 provides error and informational messages. The stateless auto-configuration, neighbor discovery, and path MTU discovery features use ICMP messages.

This section explains how to configure the following IPv6 ICMP options:

- ICMP rate limiting
- ICMP redirects
- ICMP unreachable address or route messages
- ICMP error messages for source-routed IPv6 packets
- ICMP error messages for an unreachable address
- ICMP messages for an unreachable route
- ICMP error messages for IPv6 packets with hop-limit 0
- ICMP error messages for CES/CER devices

Configuring ICMP rate limiting

You can limit the rate at which IPv6 ICMP error messages are sent out on a network. For this rate-limiting implementation, IPv6 ICMP uses a token bucket algorithm.

The algorithm works using a *virtual bucket* that contains a number of tokens, where each token represents the ability to send one ICMP error message. Tokens are placed in the bucket at a specified interval until the maximum allowed number of tokens is reached. For each error message ICMP sends, a token is removed from the bucket. ICMP generates a series of error messages until the bucket is empty. When the bucket is empty, further error messages cannot be sent until a new token is placed in the bucket.

You can adjust the following elements related to the token bucket algorithm:

- The interval at which tokens are added to the bucket. The default is 100 milliseconds.
- The maximum number of tokens in the bucket. The default is 10 tokens.

For example, to adjust the interval to 1000 milliseconds and the number of tokens to 100 tokens, enter the following command.

```
Brocade(config)# ipv6 icmp error-interval 1000 100
```

Syntax: [no] **ipv6 icmp error-interval** *interval* [*number-of-tokens*]

The interval at which tokens are placed in the bucket has a range of 0 – 2147483647 milliseconds.

NOTE

If you keep the default interval (100 milliseconds), output from the **show run** command does not show the setting of the **ipv6 icmp error-interval** command. In addition, if you configure the interval value to a number that does not evenly divide into 100000 (100 milliseconds), the system rounds the value up to the next higher value that does divide evenly. For example, if you specify an interval value of 150, the system rounds it to 200.

ICMP rate limiting is enabled by default. To disable ICMP rate limiting, set the interval to 0.

Enabling ICMP redirect messages

To enable ICMP redirect messages, you need to configure icmp redirect at both global level and the interface level. You can enable or disable a device to transmit ICMP redirect messages from a global level and the interface level.

To enable the ICMP redirect messages from global level, enter the following commands.

Syntax: [no] **ipv6 icmp redirects**

By default, IPv6 redirect is disabled and the device does not send an ICMP redirect message to a neighboring host to inform it of a better first-hop device on a path to a destination. (For more information about how ICMP redirect messages are implemented for IPv6, refer to [“Configuring IPv6 neighbor discovery”](#) on page 443.)

To enable the sending of ICMP redirect messages on interface 3/1, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 redirects
```

To disable the ICMP redirect messages from Ethernet interface 3/1, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# no ipv6 redirects
```

Syntax: [no] **ipv6 redirects**

Use the **show ipv6 interface interface port-number** command to verify that the sending of ICMP redirect messages is enabled on a particular interface.

Disabling or re-enabling ICMP redirect messages

You can disable or re-enable a device to transmit ICMP redirect messages from an interface. By default, a device sends an ICMP redirect message to a neighboring host to inform it of a better first-hop device on a path to a destination. No further configuration is required to enable the sending of ICMP redirect messages. (For more information about how ICMP redirect messages are implemented for IPv6, refer to “[Configuring IPv6 neighbor discovery](#)” on page 443.)

For example, to disable the ICMP redirect messages from Ethernet interface 3/1, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# no ipv6 redirects
```

Syntax: [no] ipv6 redirects

To re-enable the sending of ICMP redirect messages on Ethernet interface 3/1, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 redirects
```

Use the **show ipv6 interface** *interface port-number* command to verify that the sending of ICMP redirect messages is enabled on a particular interface.

Disabling ICMP error messages for source-routed IPv6 packets

By default, ICMP error messages are transmitted to announce discarded IPv6 source-routed packets that were addressed to one of the IPv6 addresses of a device. By default, these packets are discarded in software, as described in “[Software filtering of IPv6 source-routed packets](#)” on page 451.

You can disable or re-enable the sending of ICMP error messages for discarded, IPv6 source-routed packets by using the **ipv6 icmp source-route** command. Use the **no** form of this command to disable the transmission of these error messages. The following example illustrates the disabling operation.

```
Brocade(config)# no ipv6 icmp source-route
```

Syntax: [no] ipv6 icmp source-route

Enabling ICMP error messages for an unreachable address

By default, the ICMPv6 destination unreachable messages with the code for an unreachable address are not sent for a discarded IPv6 packet. You can enable the sending of these messages by using the **ipv6 icmp unreachable address** command. This command applies globally.

For example, to enable ICMPv6 error messages for unreachable address on the current device, enter the following command.

```
Brocade(config)# ipv6 icmp unreachable address
```

Syntax: [no] ipv6 icmp unreachable address

Use the **no** parameter in front of the **ipv6 icmp unreachable address** command to disable the sending of ICMPv6 destination unreachable messages with the code is address unreachable.

Enabling ICMP messages for an unreachable route

By default, the ICMPv6 destination unreachable messages with the code for an unreachable route are not sent for a discarded IPv6 packet. You can enable the sending of these messages by using the **ipv6 icmp unreachable route** command.

For example, to enable ICMPv6 error messages for unreachable route on the current device, enter the following command.

```
Brocade(config)# ipv6 icmp unreachable route
```

Syntax: [no] **ipv6 icmp unreachable route**

Use the **no** parameter in front of the **ipv6 icmp unreachable route** command to disable the sending of ICMPv6 destination unreachable messages with the code for destination unreachable.

Enabling ICMP error messages for IPv6 packets with hop-limit 0

By default, a Brocade MLX\XMR series box does not respond to an IPv6 packet with hop-limit 0, and drops it at the hardware. You can enable or disable a device to respond to such packets with a proper ICMPv6 error message using the **ipv6 icmp hop-limit-zero** command from the global config mode.

NOTE

This command is available only on Brocade MLX\XMR series routers.

For example, to enable ICMPv6 error messages for IPv6 routed packets with hop-limit 0, enter the following command:

```
Brocade(config)#ipv6 icmp hop-limit-zero
```

Syntax: [no] **ipv6 icmp hop-limit-zero**

Use the **show running-configuration** command to see if this is enabled or disabled. Use the **no** parameter in front of the **ipv6 icmp hop-limit-zero** command to disable the sending of ICMP error messages for IPv6 Routed packet with hop-limit 0.

Enabling ICMP error messages for multicast Too Big packets

By default, the brocade box will not send an ICMPv6 Packet Too Big error message for the multicast packets. You can enable or disable (default behavior) a device to send the ICMPv6 Packet Too Big error messages for the IPv6 packets sent to multicast address destination using the **ipv6 icmp packet-too-big-for-multicast** command from the global config mode.

NOTE

This command is available on Brocade MLX\XMR and CES\CER series boxes.

For example, to enable a device to send the ICMPv6 Packet Too Big error messages for the IPv6 packets sent to multicast address destination, enter the following command:

```
Brocade(config)#ipv6 icmp packet-too-big-for-multicast
```

Syntax: [no] ipv6 icmp packet-too-big-for-multicast

Use the **show running-configuration** command to see if this is enabled or disabled. Use the **no** parameter in front of the **ipv6 icmp packet-too-big-for-multicast** command to disable the sending of ICMPv6 Packet Too Big error message for the multicast packets.

Enabling ICMP error messages for CES/CER devices

By default, the Brocade CES/CER devices do not generate error message for many of the ICMPv6 error cases. You can enable or disable a device to generate error message in all the error conditions using the **ipv6 icmp generate-error-message** command from the global config mode.

NOTE

Enabling this command enables all the IPv6 packets will be sent to the CPU. This command is available only on Brocade CES/CER series devices.

For example, to enable a device to generate error message in all the error conditions, enter the following command:

```
Brocade(config)#ipv6 icmp generate-error-message
```

Syntax: [no] ipv6 icmp generate-error-message

Use the **show running-configuration** command to see if this is enabled or disabled. Use the **no** parameter in front of the **ipv6 icmp generate-error-message** command to disable device to generate error message in all the error conditions.

Configuring IPv6 neighbor discovery

The neighbor discovery feature for IPv6 uses IPv6 ICMP messages to do the following:

- Determine the link-layer address of a neighbor on the same link.
- Verify that a neighbor is reachable.
- Track neighbor devices.

An IPv6 host is required to listen for and recognize the following addresses, which identify this host:

- Link-local address.
- Assigned unicast address.
- Loopback address.
- All-nodes multicast address.
- Solicited-node multicast address.
- Multicast address to all other groups to which it belongs.

You can adjust the following IPv6 neighbor discovery features:

- Neighbor solicitation messages for duplicate address detection.

- Router advertisement messages:
 - Interval between router advertisement messages.
 - Value that indicates a device is advertised as a default device (for use by all nodes on a given link).
 - Prefixes advertised in router advertisement messages.
 - Flags for host stateful autoconfiguration.
- The time that an IPv6 node considers a remote node reachable (for use by all nodes on a given link).

The default maximum value for IPv6 neighbor discovery (ND) entries is 4096 for Brocade NetIron XMR and Brocade MLX series devices.

The memory is allocated for IPv4 and IPv6 separately. The maximum IPv4 ARP and IPv6 ND entries can be supported together.

Neighbor solicitation and advertisement messages

Neighbor solicitation and advertisement messages enable a node to determine the link-layer address of another node (neighbor) on the same link. (This function is similar to the function provided by the Address Resolution Protocol [ARP] in IPv4.) For example, node 1 on a link wants to determine the link-layer address of node 2 on the same link. To do so, node 1, the source node, multicasts a neighbor solicitation message. The neighbor solicitation message, which has a value of 135 in the Type field of the ICMP packet header, contains the following information:

- **Source address:** IPv6 address of node 1 interface that sends the message.
- **Destination address:** solicited-node multicast address (FF02:0:0:0:1:FF00::/104) that corresponds the IPv6 address of node 2.
- Link-layer address of node 1.
- A query for the link-layer address of node 2.

After receiving the neighbor solicitation message from node 1, node 2 replies by sending a neighbor advertisement message, which has a value of 136 in the Type field of the ICMP packet header. The neighbor advertisement message contains the following information:

- **Source address:** IPv6 address of the node 2 interface that sends the message.
- **Destination address:** IPv6 address of node 1.
- Link-layer address of node 2.

After node 1 receives the neighbor advertisement message from node 2, nodes 1 and 2 can now exchange packets on the link.

After the link-layer address of node 2 is determined, node 1 can send neighbor solicitation messages to node 2 to verify that it is reachable. Also, nodes 1, 2, or any other node on the same link can send a neighbor advertisement message to the all-nodes multicast address (FF02::1) if there is a change in their link-layer address.

Router advertisement and solicitation messages

Router advertisement and solicitation messages enable a node on a link to discover the devices on the same link.

Each configured interface on a link sends out a router advertisement message, which has a value of 134 in the Type field of the ICMP packet header, periodically to the all-nodes link-local multicast address (FF02::1).

A configured interface can also send a router advertisement message in response to a router solicitation message from a node on the same link. This message is sent to the unicast IPv6 address of the node that sent the router solicitation message.

At system startup, a host on a link sends a router solicitation message to the all-routers multicast address (FF01). Sending a router solicitation message, which has a value of 133 in the Type field of the ICMP packet header, enables the host to automatically configure its IPv6 address immediately instead of awaiting the next periodic router advertisement message.

Because a host at system startup typically does not have a unicast IPv6 address, the source address in the router solicitation message is usually the unspecified IPv6 address (0:0:0:0:0:0). If the host has a unicast IPv6 address, the source address is the unicast IPv6 address of the host interface sending the router solicitation message.

Entering the **ipv6 unicast-routing** command automatically enables the sending of router advertisement messages on all configured interfaces. You can configure several router advertisement message parameters. For information about disabling router advertisement messages and the router advertisement parameters you can configure, refer to [“Configuring reachable time for remote IPv6 nodes”](#) on page 450 and [“Setting IPv6 router advertisement parameters”](#) on page 446.

Neighbor redirect messages

After forwarding a packet, by default, a device can send a neighbor redirect message to a host to inform it of a better first-hop device. The host receiving the neighbor redirect message will then readdress the packet to the better device.

A device sends a neighbor redirect message only for unicast packets, only to the originating node, and to be processed by the node.

A neighbor redirect message has a value of 137 in the Type field of the ICMP packet header.

Setting neighbor solicitation parameters for duplicate address detection

Although the stateless autoconfiguration feature assigns the 64-bit interface ID portion of an IPv6 address using the MAC address of the host’s NIC, duplicate MAC addresses can occur. Therefore, the duplicate address detection feature verifies that a unicast IPv6 address is unique before it is assigned to a host interface by the stateless autoconfiguration feature. Duplicate address detection verifies that a unicast IPv6 address is unique.

If duplicate address detection identifies a duplicate unicast IPv6 address, the address is not used. If the duplicate address is the link-local address of the host interface, the interface stops processing IPv6 packets.

You can configure the following neighbor solicitation message parameters that affect duplicate address detection while it verifies that a tentative unicast IPv6 address is unique:

- The number of consecutive neighbor solicitation messages that duplicate address detection sends on an interface. By default, duplicate address detection sends three neighbor solicitation messages without any follow-up messages.

- The interval in seconds at which duplicate address detection sends a neighbor solicitation message on an interface. By default, duplicate address detection sends a neighbor solicitation message every 1 second.

NOTE

For the interval at which duplicate address detection sends a neighbor solicitation message on an interface, the device uses seconds as the unit of measure instead of milliseconds.

For example, to change the number of neighbor solicitation messages sent on Ethernet interface 3/1 to two and the interval between the transmission of the two messages to 9 seconds, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 nd dad attempt 2
Brocade(config-if-e100-3/1)# ipv6 nd ns-interval 9
```

Syntax: [no] ipv6 nd dad attempt *number*

Syntax: [no] ipv6 nd ns-interval *number*

For the number of neighbor solicitation messages, you can specify between 0-255 attempts. Configuring a value of 0 disables duplicate address detection processing on the specified interface. To restore the number of messages to the default value, use the **no** form of this command.

For the interval between neighbor solicitation messages, you can specify between 0 and 4294967 seconds. Not recommended for very short intervals in normal IPv6 operation. When a non-default value is configured, the configured time is both advertised and used by the device itself. To restore the default interval, use the **no** form of this command.

Setting IPv6 router advertisement parameters

You can adjust the following parameters for router advertisement messages:

- The interval (in seconds) at which an interface sends router advertisement messages. By default, an interface sends a router advertisement message every 200 seconds.
- The “router lifetime” value, which is included in router advertisements sent from a particular interface. The value (in seconds) indicates if the device is advertised as a default device on this interface. If you set the value of this parameter to 0, the device is not advertised as a default device on an interface. If you set this parameter to a value that is not 0, the device is advertised as a default device on this interface. By default, the device lifetime value included in device advertisement messages sent from an interface is 1800 seconds.

When adjusting these parameter settings, it is recommended that the interval between device advertisement transmission be less than or equal to the device lifetime value if the device is advertised as a default device. For example, to adjust the interval of device advertisements to 300 seconds and the device lifetime value to 1900 seconds on Ethernet interface 3/1, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 nd ra-interval 300
Brocade(config-if-e100-3/1)# ipv6 nd ra-lifetime 1800
```

Syntax: [no] ipv6 nd ra-interval *number*

Syntax: `[no] ipv6 nd ra-lifetime number`

The *number* parameter in both commands indicates any numerical value.

Possible range value for `ipv6 nd ra-interval number` is 3 to 1800 seconds.

Possible range value for `ipv6 nd ra-lifetime number` is 3 to 1800 seconds.

To restore the default interval or device lifetime value, use the **no** form of the respective command.

Controlling prefixes advertised in IPv6 router advertisement messages

By default, router advertisement messages include prefixes configured as addresses on interfaces using the `ipv6 address` command. You can use the `ipv6 nd prefix-advertisement` command to control exactly which prefixes are included in router advertisement messages. Along with which prefixes the router advertisement messages contain, you can also specify the following parameters:

- **Valid lifetime** – (Mandatory) The time interval (in seconds) in which the specified prefix is advertised as valid. The default is 2592000 seconds (30 days). When the timer expires, the prefix is no longer considered to be valid.
- **Preferred lifetime** – (Mandatory) The time interval (in seconds) in which the specified prefix is advertised as preferred. The default is 604800 seconds (7 days). When the timer expires, the prefix is no longer considered to be preferred.
- **Onlink flag** – (Optional) If this flag is set, the specified prefix is assigned to the link upon which it is advertised. Nodes sending traffic to addresses that contain the specified prefix consider the destination to be reachable on the local link.
- **Autoconfiguration flag** – (Optional) If this flag is set, the stateless auto configuration feature can use the specified prefix in the automatic configuration of 128-bit IPv6 addresses for hosts on the local link.

For example, to advertise the prefix `2001:DB8:a487:7365::/64` in router advertisement messages sent out on Ethernet interface `3/1` with a valid lifetime of 1000 seconds, a preferred lifetime of 800 seconds, and the Onlink and Autoconfig flags set, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 nd prefix-advertisement 2001:DB8:a487:7365::/64
1000 800 onlink autoconfig
```

Syntax: `[no] ipv6 nd prefix-advertisement ipv6-prefix/prefix-length valid-lifetime preferred-lifetime [autoconfig] [onlink]`

You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The valid lifetime and preferred lifetime is a numerical value between 0 – 4294967295 seconds. The default valid lifetime is 2592000 seconds (30 days), while the default preferred lifetime is 604800 seconds (7 days).

To remove a prefix from the router advertisement messages sent from a particular interface, use the **no** form of this command.

Configuring the Domain Name of DNS suffix

This section provides information about the IPv6 RA option that allows IPv6 routers to advertise domain names of DNS suffixes (the DNS name excluding the host) to IPv6 hosts in a local area network. This option to configure domain names is valid for any network that supports the use of ND6. The domain names that are advertised by routers are sent through RA messages to IPv6 hosts.

This option is supported only when IPv6 routing is active on the network. The newly configured domain name can be used as long as the RA router lifetime has not expired.

Configuration considerations

- A maximum of 4 domain names and their corresponding lifetime-multiplier values can be configured at the global configuration level.
- A maximum of 4 domain names and their corresponding lifetime-multiplier values can be configured per interface.
- The domain name that is configured on the interface overrides all other domain name configurations at the system level for this interface.

By default, the domain name of the DNS suffix and the lifetime multiplier information is not configured. The following examples are used to configure the domain names of a DNS suffix for a lifetime-multiplier value of 200.

```
Brocade(config)# ipv6 nd ra-domain-name brocade.com lifetime-multiplier 200
Brocade(config-if-e10000-1/10)# ipv6 nd ra-domain-name brocade.com
lifetime-multiplier 200
```

Syntax: [no] ipv6 nd ra-domain-name *string* [lifetime-multiplier *decimal*]

The *string* parameter specifies the domain name of the DNS suffix.

The **lifetime-multiplier** is the percentage value of the maximum router advertisement interval. The maximum router advertisement interval is the maximum time that can be allowed between sending unsolicited RA messages for DNS name resolution for a DNS entry. The **lifetime-multiplier** value is calculated as twice the RA lifetime. The maximum router advertisement interval percentage range is 100 through 200%. The default value for maximum router advertisement interval is 200%.

To disable the advertisement of the specified domain name of DNS suffix in the RA message, use the **no** form of the respective command.

Configuring the recursive DNS server addresses and lifetime multiplier

This section provides information about the IPv6 RA attribute that allows IPv6 routers to advertise recursive DNS server addresses and lifetime multiplier values to IPv6 hosts in a local area network. This option to configure recursive DNS server addresses is valid for any network that supports the use of neighbor discovery (ND6). The recursive server addresses that are advertised by routers are sent through RA messages and are used to translate domain names to IP addresses.

This option is supported only when IPv6 routing is active on the network. The newly configured recursive DNS server address can be used as long as the RA router lifetime has not expired.

Configuration considerations

- A maximum of 4 recursive DNS server addresses and their corresponding lifetime-multiplier values can be configured at the global configuration level.
- A maximum of 4 recursive DNS server addresses and their corresponding lifetime-multiplier values can be configured per interface.
- The recursive DNS server address that is configured on the interface overrides all other recursive DNS server configurations at the system level for this interface.

By default, the recursive DNS server address and the lifetime multiplier information is not configured. The following examples configure the recursive DNS address for a lifetime-multiplier value of 200.

```
Brocade(config)# ipv6 nd ra-dns-server 2001:DC8:200::3 lifetime-multiplier 200
Brocade(config-if-e100-3/1)# ipv6 nd ra-dns-server 2001:DC8:200::3
lifetime-multiplier 200
```

Syntax: [no] `ipv6 nd ra-dns-server ipv6-address [lifetime-multiplier decimal]`

The `ipv6-address` parameter specifies the global IPv6 address of the DNS server.

The **lifetime-multiplier** is the percentage value of the maximum router advertisement interval. The maximum router advertisement interval is the maximum time that can be allowed between sending unsolicited RA messages for DNS name resolution for a DNS entry. The lifetime-multiplier decimal value is calculated as twice the RA lifetime. The percentage range is 100 through 200%. The default value for the maximum router advertisement interval is 200%.

To disable the advertisement of the specified server address in the RA message, use the **no** form of the command.

Setting flags in IPv6 router advertisement messages

An IPv6 router advertisement message can include the following flags:

- **Managed Address Configuration** — This flag indicates to hosts on a local link if they should use the stateful autoconfiguration feature to get IPv6 addresses for their interfaces. If the flag is set, the hosts use stateful autoconfiguration to get addresses as well as non-IPv6-address information. If the flag is not set, the hosts do not use stateful autoconfiguration to get addresses and if the hosts can get non-IPv6-address information from stateful autoconfiguration is determined by the setting of the Other Stateful Configuration flag.
- **Other Stateful Configuration** — This flag indicates to hosts on a local link if they can get non-IPv6 address autoconfiguration information. If the flag is set, the hosts can use stateful autoconfiguration to get non-IPv6-address information.

NOTE

When determining if hosts can use stateful autoconfiguration to get non-IPv6-address information, a set Managed Address Configuration flag overrides an unset Other Stateful Configuration flag. In this situation, the hosts can obtain non address information. However, if the Managed Address Configuration flag is not set and the Other Stateful Configuration flag is set, then the setting of the Other Stateful Configuration flag is used.

By default, the Managed Address Configuration and Other Stateful Configuration flags are not set in router advertisement messages. For example, to set these flags in router advertisement messages sent from Ethernet interface 3/1, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 nd managed-config-flag
Brocade(config-if-e100-3/1)# ipv6 nd other-config-flag
```

Syntax: [no] ipv6 nd managed-config-flag

Syntax: [no] ipv6 nd other-config-flag

To remove either flag from router advertisement messages sent on an interface, use the **no** form of the respective command.

Configuring reachable time for remote IPv6 nodes

You can configure the duration (in seconds) that a device considers a remote IPv6 node reachable. By default, an interface uses the value of 30 seconds.

The router advertisement messages sent by an interface include the amount of time specified by the **ipv6 nd reachable-time** command so that nodes on a link use the same reachable time duration. By default, the messages include a default value of 0.

NOTE

The device uses seconds, instead of milliseconds, for the interval at which it sends router advertisement messages.

It is not recommended to configure a short reachable time duration, because a short duration causes the IPv6 network devices to process the information at a greater frequency.

For example, to configure the reachable time of 40 seconds for Ethernet interface 3/1, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 nd reachable-time 40
```

Syntax: [no] ipv6 nd reachable-time *seconds*

For the *seconds* parameter, you can specify between 0-3600 seconds. To restore the default time, use the **no** form of this command.

IPv6 source routing security enhancements

The IPv6 specification (RFC 2460) specifies support for IPv6 source-routed packets using a type 0 Routing extension header, requiring device and host to process the type 0 routing extension header. However, this requirement may leave a network open to a DoS attack.

A security enhancement disables sending IPv6 source-routed packets to IPv6 devices either completely or selectively as described in the following sections. (This enhancement conforms to RFC 5095.)

Complete filtering of IPv6 source-routed packets

Brocade devices are configured to drop all IPv6 source-routed packets in hardware and software as described:

- **Hardware** – IPv6 source-routed packets that contain a type 0 routing extension header immediately after the IPv6 header are dropped in hardware by default.
- **Software** – IPv6 source-routed packets addressed to any IPv6 address on a device (regardless of where the routing extension header is located) are dropped in software by default.

Details of hardware and software filtering of IPv6 source-routed packets is provided in the following.

Hardware filtering of IPv6 source-routed packets

All IPv6 source-routed packets that contain a type 0 routing extension header immediately after the IPv6 header are automatically dropped in hardware. This filtering is performed on both IPv6 packets that require forwarding and IPv6 packets addressed to one of the IPv6 addresses on the device without sending an ICMP error message. This filtering behavior is enabled by default. Consequently, if you want a the device to process IPv6 source-routed packets that contain a type 0 routing extension header immediately after the IPv6 header you must direct it to perform this action through use of the **ipv6 forward-source-route** command, as shown in the following.

```
Brocade(config)# ipv6 forward-source-route
```

Syntax: [no] ipv6 forward-source-route

The default condition is for source-routed packets to be dropped. If you enable forwarding using this command, you can return to the default state by using the **no** option in front of the command.

NOTE

Source routed, IPv6 packets where the type 0 routing extension header does not follow directly after the IPv6 header are not automatically dropped in hardware.

Software filtering of IPv6 source-routed packets

By default, all IPv6 source-routed packets addressed to any IPv6 address on a Brocade device are dropped by software (regardless of where the Routing Extension Header resides). You can enable the forwarding of these packets by using the **ipv6 source-route** command, as the following example shows.

```
Brocade(config)# ipv6 source-route
```

Syntax: [no] ipv6 source-route

The default condition is to disallow the forwarding of source-routed packets to IPv6 addresses. If you enable forwarding by using this command, you can return to the default state by using the **no** option of the command.

The **ipv6 forward-source-route** command must be enabled for the **ipv6 source-route** command to operate.

By default, ICMP error messages are sent for packets dropped by software. You can use the **ipv6 icmp source-route** command to disable the generation of ICMPv6 parameter problem for software discarded IPv6 source-routed packets addressed to one of the IPv6 addresses of a device. This is described in [“Disabling ICMP error messages for source-routed IPv6 packets”](#) on page 441.

Selective filtering of IPv6 source-routed packets using ACLs

You can selectively filter IPv6 source-routed packets using ACLs. This is accomplished by creating an IPv6 ACL that specifies a type 0 routing extension header. This is done using the **routing-header-type** option when configuring an IPv6 ACL. An example of an IPv6 ACL that selectively drops IPv6 source-routed packets is shown in the following.

```
Brocade(config)# ipv6 access-list deny-access1
Brocade(config-ipv6-access-list deny-access1)#deny ipv6 any any
routing-header-type 0
```

As with complete filtering, selective filtering can be done in both hardware and software as described:

- **Hardware** – Inbound and outbound IPv6 source-routed packets that contain a type 0 routing extension header immediately after the IPv6 header can be selectively dropped in hardware through use of an IPv6 ACL and bound to an interface using the **ipv6 traffic-filter** command.
- **Software** – Inbound IPv6 source-routed packets that contain a routing extension header anywhere in a packet can be selectively dropped in software using an IPv6 ACL and bound to interfaces using the **ipv6 access-class** command.

Details about how to configure selective hardware and software filtering of IPv6 source-routed packets are provided in the following.

Selective hardware filtering of IPv6 source-routed packets

Both inbound and outbound IPv6 source-routed packets that contain a type 0 routing extension header immediately after the IPv6 header can be selectively dropped in hardware using an IPv6 ACL. source-routed packets dropped in hardware are dropped without an ICMP error message being sent. To apply an IPv6 ACL with the **routing-header-type** option for hardware filtering, you must apply the IPv6 ACL to specific ports using the **ipv6 traffic-filter** command as shown in the following example.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 traffic-filter deny-access1 in
```

Additionally, you must also enable forwarding using the **ipv6 forward-source-route** command (as shown in the following) to allow any forwarding of IPv6 source-routed packets.

```
Brocade(config)# ipv6 forward-source-route
```

Selective software filtering of IPv6 source-routed packets

Inbound IPv6 source-routed packets that contain a routing extension header anywhere in a packet can be selectively dropped in software using an IPv6 ACL. source-routed packets dropped in software generate ICMP Destination Unreachable error messages.

NOTE

This filtering only applies to packets addressed to one of the IPv6 addresses of the device.

To apply an IPv6 ACL with the **routing-header-type** option for software filtering, you must apply the IPv6 ACL system wide using the **ipv6 access-class** command.

```
Brocade(config)# # ipv6 access-class deny-access1 in
```


Additionally, you must also enable forwarding using the **ipv6 forward-source-route** and **ipv6 source-route** commands (as shown in the following) to allow any forwarding of IPv6 source-routed packets.

```
Brocade(config)# ipv6 forward-source-route
Brocade(config)# ipv6 source-route
```

Complete and selective filtering combination and order of application

If the complete filtering of IPv6 source-routed packets is enabled (the default state) then selective filtering cannot be performed. Consequently, you must use the **ipv6 forward-source-route** and **ipv6 source-route** commands to allow IPv6 source-routed packets when you are selectively allowing some IPv6 source-routed packets.

The following configuration of complete hardware and software filtering can be used with selective filtering if the commands are configured in the correct order:

- When the **ipv6 forward-source-route** command is configured, IPv6 source-routed packets that contain a type 0 routing extension header immediately after the IPv6 header are not dropped by hardware.
- All IPv6 source-routed packets addressed to any IPv6 address on a Brocade device (regardless of where the Routing Extension Header is located) are dropped by software. This is the default configuration.

When using the **ipv6 forward-source-route** and **ipv6 source-route** commands as described, the filtering is performed in the order described below.

1. Inbound filtering is performed on the receiving interface using an ACL applied using the **ipv6 traffic-filter** command. This filtering is performed using hardware.
2. Complete filtering for IPv6 source route. This filtering is performed by the CPU.
3. Selective filtering using an IPv6 ACL applied on a system-wide basis using the **ipv6 access-class** command.
4. Selective filtering by hardware using an IPv6 ACL bound to an interface for outbound traffic using the **ipv6 traffic-filter** command.

Configuration examples for complete and selective filtering of source routed packets

The following examples demonstrate how to use this feature for different purposes:

- Dropping all IPv6 Source Routed Packets on all Ports
- Dropping all IPv6 Source Routed Packets on a Specified Port
- Silently Dropping all IPv6 Source Routed Packets Addressed to IPv6 Addresses
- Dropping all IPv6 Source Routed Packets Addressed to IPv6 Addresses from a Specified Source
- Allowing IPv6 Source Routed Packets from a Specified Source on a Specified Interface

Each of these examples are described in detail in the following sections.

Dropping all IPv6 source-routed packets on all ports

By default, all IPv6 source-routed packets received on all device ports are dropped.

Dropping all IPv6 source-routed packets on a specified port

The following example shows a configuration that will drop all IPv6 source-routed packets received on port 1/1 of a device.

In this example, the IPv6 ACL is configured to drop any IPv6 packet with a type 0 routing header immediately after the IPv6 header.

```
Brocade(config)# ipv6 access-list deny-access1
Brocade(config-ipv6-access-list deny-access1)# deny any any ipv6
routing-header-type 0
Brocade(config-ipv6-access-list deny-access1)# permit ipv6 any any
Brocade(config-ipv6-access-list deny-access1)# exit
```

The default is for the device to drop all IPv6 source-routed packets in hardware and software. Forwarding of these packets must be explicitly enabled using the **ipv6 forward-source-route** and **ipv6 source-route** commands as shown.

```
Brocade(config)# ipv6 forward-source-route
Brocade(config)# ipv6 source-route
```

The IPv6 ACL must then be bound to the interface it is intended to filter as shown in the following example for the Ethernet 1/1 interface.

```
Brocade(config)# interface ethernet 1/1
Brocade(config-if-e100-1/1)# ipv6 traffic-filter deny-access1 in
```

Silently dropping all IPv6 source-routed packets sent to IPv6 addresses

The following configuration drops all IPv6 source-routed packets addressed to the IPv6 addresses on a device without sending an ICMP error message.

ICMPv6 parameter problem error messages are sent for dropped IPv6 source-routed packets addressed to the IPv6 addresses on the device. To disable these messages, use the **no** option with the **ipv6 icmp source-route** command.

```
Brocade(config)# no ipv6 icmp source-route
```

By default, the device drops all IPv6 source-routed packets in hardware and software. Use the **ipv6 forward-source-route** command to enable the forwarding of IPv6 source-routed packets with a type 0 routing extension header immediately after the IPv6 header, as shown in this example.

```
Brocade(config)# ipv6 forward-source-route
```

Dropping all IPv6 source-routed packets to IPv6 addresses from a specified source

This configuration demonstrates how to drop all IPv6 source-routed packets sent from a specified IPv6 address.

In this example, IPv6 ACL is configured to deny IPv6 source-routed packets with a destination address of 2001:DB8:1, and permit any other IPv6 packets.

```

Brocade(config)# ipv6 access-list deny-access2
Brocade(config-ipv6-access-list deny-access2)# deny host 2001:DB8:1 any
routing-header-type 0
Brocade(config-ipv6-access-list deny-access2)# permit ipv6 any any
Brocade(config-ipv6-access-list deny-access2)# exit

```

The IPv6 ACL is then applied globally to the device for inbound traffic using the **ipv6 access-class** command as shown.

```

Brocade(config)#ipv6 access-class deny-access2 in

```

By default, the device drops all IPv6 source-routed packets in hardware and software. Use the **ipv6 forward-source-route** and **ipv6 source-route** commands to enable forwarding of IPv6 source-routed packets, as shown.

```

Brocade(config)# ipv6 forward-source-route
Brocade(config)# ipv6 source-route

```

Allowing IPv6 source-routed packets from a specified source on a specified interface

The following configuration allows IPv6 source-routed packets sent from a specified source and addressed to the IPv6 address on the device to be received on port 1/1. Source-routed packets received on all other ports are denied.

NOTE

This configuration only works when the routing header type 0 appears immediately after the IPv6 header.

The following IPv6 ACL is configured to permit IPv6 source route packets that have a source address of 2001:DB8:1, deny any IPv6 source route packets with any other source address, and permit all other IPv6 packets.

```

Brocade(config)# ipv6 access-list allow-access
Brocade(config-ipv6-access-list allow-access)# permit ipv6 host 2001:DB8:1 any
routing-header-type 0
Brocade(config-ipv6-access-list allow-access)# deny any any routing-header-type 0
Brocade(config-ipv6-access-list allow-access)# permit ipv6 any any
Brocade(config-ipv6-access-list allow-access)# exit

```

Because this example permits IPv6 source-routed packets on a single specified interface, they must be explicitly dropped on all other interfaces on the Brocade device. The following IPv6 ACL is configured drop all source-routed packets.

```

Brocade(config)# ipv6 access-list drop-access
Brocade(config-ipv6-access-list drop-access)# deny any any routing-header-type 0
Brocade(config-ipv6-access-list drop-access)# permit ipv6 any any
Brocade(config-ipv6-access-list drop-access)# exit

```

The IPv6 ACL “allow-access” is bound to interface 1/1 where the IPv6 source-routed packets are permitted.

```

Brocade(config)# interface ethernet 1/1
Brocade(config-if-e100-1/1)# ipv6 traffic-filter allow-access
Brocade(config-if-e100-1/1)#exit

```

The IPv6 ACL “drop-access” is bound to all other interfaces on the device to drop IPv6 source-routed packets. The next example shows the “drop-access” ACL being bound to interface 1/2.

Changing the IPv6 MTU

```
Brocade(config)# interface ethernet 1/2
Brocade(config-if-e100-1/2)# ipv6 traffic-filter drop-access in
Brocade(config-if-e100-1/2)#exit
...
```

The IPv6 ACL “drop-access” must be bound to all other interfaces on the device.

By default, the device drops all IPv6 source-routed packets in hardware and software as described in [“Complete filtering of IPv6 source-routed packets”](#) on page 450. Use the **ipv6 forward-source-route** and **ipv6 source-route** commands to enable forwarding of IPv6 source-routed packets.

```
Brocade(config)# ipv6 forward-source-route
Brocade(config)# ipv6 source-route
```

Changing the IPv6 MTU

The IPv6 MTU is the maximum length of an IPv6 packet that can be transmitted on a particular interface. If an IPv6 packet is longer than an MTU, the host that originated the packet breaks the packet into fragments and transmits the fragments in multiple packets that are shorter than the configured MTU. You can configure the MTU on individual interfaces. Per RFC 2460, the minimum IPv6 MTU for any interface is 1280 bytes.

NOTE

The maximum number of unique MTUs that can be configured on a Brocade NetIron CES or Brocade NetIron CER device is 12.

To configure the MTU on interface 3/1 to 1280 bytes, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 mtu 1280
```

Syntax: [no] **ipv6 mtu** *bytes*

You can specify between 1284 – (**default-max-frame-size** minus 18). If a non-default value is configured for an interface, router advertisements include an MTU option. The minimum values you can configure are: 1298 (**IP6_MIN_MTU** + 18) for Ethernet ports.

You can configure IPv6 MTU for to be greater than 1500 bytes, although the default remains at 1500 bytes.

At the global CLI level, use the **ipv6 global-mtu** command. To define IPv6 MTU globally, enter.

```
Brocade(config)#ipv6 global-mtu 1300
```

Syntax: [no] **ipv6 global-mtu** *value*

NOTE

After the configuration of **ipv6 global-mtu**, the system needs to be rebooted to enable the management ethernet controller to reconfigure it.

To define IPv6 MTU on an interface, enter.

```
Brocade(config-if-e1000-2/1)#ipv6 mtu
```

Syntax: **ipv6 mtu** *value*

NOTE

If the size of a jumbo packet received on a port is equal to the maximum frame size of - 18 (Layer 2 MAC header + CRC) and if this value is greater than the IPv4/IPv6 MTU of the outgoing port, it will be forwarded to the CPU.

How to determine the actual IPv6 MTU value

An IPv6 port can obtain an MTU value from any of the following sources:

- Default IP MTU setting
- Global MTU Setting
- Interface MTU Setting

An interface determines the actual MTU value through these processes.

1. If an IPv6 interface MTU value is configured, that value is used.
2. If an IPv6 interface MTU value is not configured and an IPv6 global MTU value is configured, the configured global MTU value is used.
3. If neither an IPv6 interface MTU value or an IPv6 global MTU value are configured, the default IPv6 MTU value of 1500 is used.

Configuring static neighbor entries

In some cases, a neighbor cannot be reached using neighbor discovery. In this situation, you can add a static entry to the IPv6 neighbor discovery cache, which causes a neighbor to be reachable at all times without using neighbor discovery. (A static entry in the IPv6 neighbor discovery cache functions like a static ARP entry in IPv4.)

For example, to add a static entry for a neighbor with the IPv6 address 2001:DB8:2678::2 and link-layer address 0000.002b.8641 that is reachable through Ethernet interface 3/1, enter the following command.

```
Brocade(config)# ipv6 neighbor 2001:DB8:2678::2 ethernet 3/1 0000.002b.8641
```

Syntax: `[no] ipv6 neighbor ipv6-address ethernet port | ve ve-number [ethernet port] link-layer-address`

The `ipv6-address` parameter specifies the address of the neighbor.

The `ethernet | ve` parameter specifies the interface through which to reach a neighbor. If you specify an Ethernet interface, you must also specify the port number. If you specify a VE, specify the VE number and then the Ethernet port numbers associated with the VE. The link-layer address is a 48-bit hardware address of the neighbor.

If you attempt to add an entry that already exists in the neighbor discovery cache, the software changes the already existing entry to a static entry.

To remove a static IPv6 entry from the IPv6 neighbor discovery cache, use the `no` form of this command.

Limiting the number of hops an IPv6 packet can traverse

By default, the maximum number of hops an IPv6 packet can traverse is 64. You can change this value to between 1 – 255 hops. For example, to change the maximum number of hops to 70, enter the following command.

```
Brocade(config)# ipv6 hop-limit 70
```

Syntax: [no] **ipv6 hop-limit** *number*

The number of hops can be from 1 – 255.

QoS for IPv6 traffic

Configuring QoS for IPv6 traffic is generally the same as it is for IPv4 traffic. The QoS policies you configure on the device apply to both incoming IPv6 and IPv4 traffic. ACLs can be used to perform QoS for IPv6 traffic for the following values:

- dscp
- fragments
- priority-force
- priority-mapping
- source routing
- drop-precedence
- drop-precedence force

To enable QoS for IPv6 traffic, enter the following commands.

```
Brocade(config)# port-priority
Brocade(config)# write memory
Brocade(config)# end
Brocade# reload
```

Syntax: [no] **port-priority**

NOTE

You must save the configuration and reload the software to place the change into effect. This applies whether you are enabling QoS for IPv6 or IPv4 traffic.

The **port-priority** command globally enables QoS for IPv6 traffic on all interfaces. On Brocade devices, when QoS is enabled with the **port-priority** command, the device inserts a value in the internal header based on a combination of the following information:

- 802.1p priority
- Interface priority (if configured)
- VLAN priority (if configured)
- The DSCP field in the Type of Service (ToS) header

Configuring the rate limit for IPv6 subnet traffic

To set the rate limit for IPv6 subnet addresses, enter the **ipv6 rate-limit subnet policy-map** command.

```
Brocade(config)# ipv6 rate-limit subnet policy-map policy1
```

Syntax: [no] **ipv6 rate-limit subnet policy-map** *policy-map*

The *policy-map* variable is the name you will use to reference the policy map and it can be a character string up to 64 characters long.

Clearing global IPv6 information

You can clear the following global IPv6 information:

- Entries from the IPv6 cache.
- Entries from the IPv6 neighbor table.
- IPv6 routes from the IPv6 route table.
- IPv6 traffic statistics.
- IPv6 session flows

Clearing the IPv6 cache

You can remove all entries from the IPv6 cache or specify an entry based on the following:

- IPv6 prefix.
- IPv6 address.
- Interface type.

For example, to remove entries for IPv6 address 2000:e0ff::1, enter the following command at any configuration level of the CLI.

```
Brocade# clear ipv6 cache 2000:e0ff::1
```

Syntax: **clear ipv6 cache** [*ipv6-prefix/prefix-length* | *ipv6-address* | **ethernet** *port* | **tunnel** *number* | **ve** *number*] [**vrf** *vrf-name*]

You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

You must specify the *ipv6-address* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The **ethernet** | **tunnel** | **ve** parameter specifies the interfaces for which you can remove cache entries. If you specify an Ethernet interface, you must also specify the port number associated with the interface. If you specify a VE or tunnel interface, also specify the VE or tunnel number, respectively.

The *vrf-name* parameter specifies the VRF for which you want to clear the cache entry. If no *vrf* parameter is entered, the default VRF is used.

Clearing IPv6 neighbor information

You can remove all entries from the IPv6 neighbor table or specify an entry based on the following:

- IPv6 prefix.
- IPv6 address.
- Interface type.

For example, to remove entries for Ethernet interface 3/1, enter the following command at the Privileged EXEC level or any of the CONFIG levels of the CLI.

```
Brocade# clear ipv6 neighbor ethernet 3/1
```

Syntax: `clear ipv6 neighbor [ipv6-prefix/prefix-length | ipv6-address | ethernet port | ve number]`

You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

You must specify the *ipv6-address* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The **ethernet** | **ve** parameter specifies the interfaces for which you can remove cache entries. If you specify an Ethernet interface, you must also specify the port number associated with the interface. If you specify a VE, you must also specify the VE number.

Clearing IPv6 routes from the IPv6 route table

You can clear all IPv6 routes or only those routes associated with a particular IPv6 prefix from the IPv6 route table and reset the routes.

For example, to clear IPv6 routes associated with the prefix 2000:7838::/32, enter the following command at any configuration level of the CLI.

```
Brocade# clear ipv6 route 2000:7838::/32
```

Syntax: `clear ipv6 route [ipv6-prefix/prefix-length] | nexthop nexthop_ID`

The *ipv6-prefix/prefix-length* parameter clears routes associated with a particular IPv6 prefix. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The **nexthop** option clears the nexthop information for all next hops in the routing table or for a specific entry. The *nexthop_id* parameter is a specific nexthop entry from the next hop table.

Clearing IPv6 traffic statistics

To clear all IPv6 traffic statistics (reset all fields to zero), enter the following command at the Privileged EXEC level or any of the Config levels of the CLI.

```
Brocade(config)# clear ipv6 traffic
```

Syntax: `clear ipv6 traffic`

Clearing statistics for IPv6 subnet rate limiting

To clear the rate limit statistics for IPv6 subnet addresses, enter the **clear rate-limit ipv6 subnet** command at the configuration level.

Syntax: **clear rate-limit ipv6 subnet**

Displaying global IPv6 information

You can display output for the following global IPv6 parameters:

- IPv6 cache.
- IPv6 interfaces.
- IPv6 neighbors.
- IPv6 route table.
- Local IPv6 routers.
- IPv6 TCP connections and the status of individual connections.
- IPv6 traffic statistics.
- IPv6 session flows

Displaying IPv6 cache information

The IPv6 cache contains an IPv6 host table with indices to the next hop gateway and the interface on which the route was learned.

To display IPv6 cache information, enter the following command at any CLI level.

```
Brocade# show ipv6 cache
Total number of IPv6 and IPv6 VPN cache entries: 3
   IPv6 Address                Next Hop                Interface
1      6000::                     LOCAL                   ve 60
2      6000::2                   LOCAL                   ve 60
3      fe80::768e:f8ff:fe2a:6200 LOCAL                   ve 60
```

Syntax: **show ipv6 cache** [*index-number* | *ipv6-prefix/prefix-length* | *ipv6-address* | **ethernet port** | **ve number** | **tunnel number**][*vrf vrf-name*]

The *index-number* parameter restricts the display to the entry for the specified index number and subsequent entries.

The *ipv6-prefix/prefix-length* parameter restricts the display to the entries for the specified IPv6 prefix. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The **ethernet** | **ve** | **tunnel** parameter restricts the display to the entries for the specified interface. The *ipv6-address* parameter restricts the display to the entries for the specified IPv6 address. You must specify this parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The **vrf** *vrf-name* parameter specifies the VRF for which you want to display the cache entry. If a vrf parameter is not entered, then the default VRF is used.

If you specify an Ethernet interface, also specify the port number associated with the interface. If you specify a VE interface, you must also specify the VE number. If you specify a tunnel interface, you must also specify the tunnel number.

This display shows the following information.

TABLE 78 IPv6 cache information fields

This field...	Displays...
Total number of cache entries	The number of entries in the cache table.
IPv6 Address	The host IPv6 address.
Next Hop	The next hop, which can be one of the following: <ul style="list-style-type: none"> • Direct – The next hop is directly connected to the device. • Local – The next hop is originated on this device. • <i>ipv6 address</i> – The IPv6 address of the next hop.
Port	The port on which the entry was learned.

Displaying IPv6 interface information

To display IPv6 interface information, enter the following command at any CLI level.

```
Brocade# show ipv6 interface
Brocade# show ipv6 interface
Type Codes - I:ISIS O:OSPF R:RIP
Interface      Stat/Prot IGPs IPv6 Address      VRF
eth 2/4        down/down
                2001:db8:2017::c017:101/64
                default-vrf

ve 60          up/up
                fe80::768e:f8ff:fe2a:6200
                6000::2/64
                6000::/64 [Anycast]
                default-vrf
```

Syntax: `show ipv6 interface [interface [port-number | number]]`

The *interface* parameter displays detailed information for a specified interface. For the interface, you can specify the **Ethernet**, **loopback**, **tunnel**, or **VE** keywords. If you specify an Ethernet interface, you must also specify the port number associated with the interface. If you specify a loopback, tunnel, or VE interface, you must also specify the number associated with the interface.

This display shows the following information.

TABLE 79 General IPv6 interface information fields

This field...	Displays...
Routing protocols	A one-letter code that represents a routing protocol that can be enabled on an interface.
Interface	The interface type, and the port number or number of the interface.
Status	The status of the interface. The entry in the Status field will be either “up/up” or “down/down”.

TABLE 79 General IPv6 interface information fields (Continued)

This field...	Displays...
Routing	The routing protocols enabled on the interface.
Global Unicast Address	The global unicast address of the interface.

Displaying IPv6 interface information for a specified interface

To display detailed information for a specific interface, enter a command such as the following at any CLI level.

```

Brocade# show ipv6 interface ethernet 3/1
Brcoade# show ipv6 interface ethernet 2/2
Interface Ethernet 2/2 is up, line protocol is up
  IPv6 is enabled, link-local address is fe80::768e:f8ff:fe2a:6231 [Preferred]
  Global unicast address(es):
    180::1 [Preferred], subnet is 180::/64
    180:: [Anycast], subnet is 180::/64
  Joined group address(es):
    ff02::1:ff00:1
    ff02::1:ff00:0
    ff02::1:ff2a:6231
Port belongs to VRF: default-vrf
  MTU is 1500 bytes
  ICMP redirects are disabled
  ND DAD is enabled, number of DAD attempts: 3
  ND reachable time is 30000 Milliseconds
  ND advertised reachable time is 0 seconds
  ND retransmit interval is 1000 milliseconds
  ND advertised retransmit interval is 0 milliseconds
  ND next router advertisement will be sent in 270 seconds
  ND router advertisements live for 1800 seconds
  No Inbound Access List Set
  No Outbound Access List Set
  IPv6 RPF mode: None IPv6 RPF Log: Disabled
This display shows the following information.
    
```

TABLE 80 Detailed IPv6 interface information fields

This field...	Displays...
Interface/line protocol status	The status of interface and line protocol. If you have disabled the interface with the disable command, the status will be “administratively down”. Otherwise, the status is either “up” or “down”.
IPv6 status/link-local address	The status of IPv6. The status is either “enabled” or “disabled”. Displays the link-local address, if one is configured for the interface.
Global unicast address(es)	Displays the global unicast addresses, if one or more are configured for the interface.
Joined group address(es)	The multicast addresses that a device interface listens for and recognizes.
MTU	The setting of the maximum transmission unit (MTU) configured for the IPv6 interface. The MTU is the maximum length an IPv6 packet can have to be transmitted on the interface. If an IPv6 packet is longer than an MTU, the host that originated the packet fragments the packet and transmits its contents in multiple packets that are shorter than the configured MTU.

TABLE 80 Detailed IPv6 interface information fields

This field...	Displays...
ICMP	The setting of the ICMP redirect parameter for the interface.
ND	The setting of the various neighbor discovery parameters for the interface.
Access List	The inbound and outbound access lists applied to the interface.
Routing protocols	The routing protocols enabled on the interface.
RxPkts	The number of packets received at the specified port. This field supports IPv4 and IPv6 packet and byte counters.
TxPkts	The number of packets transmitted from the specified port. This field supports IPv4 and IPv6 packet and byte counters.
RxBytes	The number of bytes received at the specified port. This field supports IPv4 and IPv6 packet and byte counters.s
TxBytes	The number of bytes transmitted from the specified port. This field supports IPv4 and IPv6 packet and byte counters.

Displaying interface counters for all ports

Previous versions of the Multi-Service IronWare software support IPv4 and IPv6 packet and byte counters. The contents of these counters can be displayed for all ports on a device or per port. Output from the **show ipv6 interface ethernet** command includes packet and byte counter information on a per-port basis. Refer to [“Displaying IPv6 interface information for a specified interface”](#) on page 463.

The default byte counters include the 20-byte per-packet Ethernet overhead. You can configure a device to exclude the 20-byte per-packet Ethernet overhead from byte accounting using the **vlan-counter exclude-overhead** command.

IPv4 and IPv6 commands display the interface counters for all ports on a Brocade device. The following example displays packet and byte counter information for all ports.

```
Brocade# show ipv6 interface counters
Interface      RxPkts      TxPkts      RxBytes      TxBytes
eth 3/3       200         200         850000       850000
eth 3/4       500         500         40000        40000
```

Syntax: show ipv6 interface counters

[Table 81](#) describes the fields that display interface counter statistics.

TABLE 81 Interface counter display statistics

This field...	Displays...
Interface	The interface for which counter statistics are being displayed.
RxPkts	The number of packets received at the specified port.
TxPkts	The number of packets transmitted from the specified port.
RxBytes	The number of bytes received at the specified port.
TxBytes	The number of bytes transmitted from the specified port.

Clearing the interface counters

Use the following command to clear all interface counters on a Brocade device.

```
Brocade# clear ipv6 interface counters
```

Syntax: `clear ipv6 interface counters`

Use the following command to clear the interface counters for a specified port.

```
Brocade# clear ipv6 interface ethernet 3/2
```

Syntax: `clear ipv6 interface ethernet port-number`

The **port-number** variable specifies the slot and port number for which you want to clear the interface counters.

Displaying IPv6 neighbor information

You can display the IPv6 neighbor table, which contains an entry for each IPv6 neighbor with which the device exchanges IPv6 packets.

To display the IPv6 neighbor table, enter the following command at any CLI level.

Displaying global IPv6 information

```
Brocade(config)# show ipv neighbor ethernet 3/11
Total number of Neighbor entries: 1
Entries on interface eth 3/11 :
  IPv6 Address                               VLAN LinkLayer-Addr State Age Port R
1    128::                                   1    0024.3898.0f0a *REACH 422 3/11 0
```

```
Brocade(config)#
Brocade(config)# show ipv neighbor ethernet 3/11
Total number of Neighbor entries: 1
Entries on interface eth 3/11 :
  IPv6 Address                               VLAN LinkLayer-Addr State Age Port R
1    128::                                   1    0024.3898.0f0a *REACH 432 3/11 0
```

After I Ping the neighbor

```
Brocade(config)# ping ipv6 128::
Sending 1, 16-byte ICMPv6 Echo to 128::
timeout 5000 msec, Hop Limit 64
Type Control-c to abort
Reply from 128::: bytes=16 time=2ms Hop Limit=64
Success rate is 100 percent (1/1), round-trip min/avg/max=2/2/2 ms.
```

```
Brocade(config)#
Brocade(config)# show ipv neighbor ethernet 3/11
Total number of Neighbor entries: 2
Entries on interface eth 3/11 :
  IPv6 Address                               VLAN LinkLayer-Addr State Age Port R
1    128::                                   1    0024.3898.0f0a *REACH 429493/11 0
2    fe80::224:38ff:fe98:f0a                 1    0024.3898.0f0a STALE 264 3/11 1
```

```
Brocade(config)#
Brocade(config)# show ipv neighbor ethernet 3/11
Total number of Neighbor entries: 2
Entries on interface eth 3/11 :
  IPv6 Address                               VLAN LinkLayer-Addr State Age Port R
1    128::                                   1    0024.3898.0f0a *REACH 42949 3/11 0
2    fe80::224:38ff:fe98:f0a                 1    0024.3898.0f0a STALE 266 3/11 1
```

```
Brocade(config)# show ipv neighbor ethernet 3/11
Total number of Neighbor entries: 2
Entries on interface eth 3/11 :
  IPv6 Address                               VLAN LinkLayer-Addr State Age Port R
1    128::                                   1    0024.3898.0f0a *REACH 35 3/11 0
2    fe80::224:38ff:fe98:f0a                 1    0024.3898.0f0a STALE 60 3/11 1
```

Syntax: `show ipv6 neighbor [ipv6-prefix/prefix-length | ipv6-address | interface [port | number]]`

The *ipv6-prefix/prefix-length* parameters restrict the display to the entries for the specified IPv6 prefix. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The *ipv6-address* parameter restricts the display to the entries for the specified IPv6 address. You must specify this parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The *interface* parameter restricts the display to the entries for the specified Brocade device interface. For this parameter, you can specify the **Ethernet** or **VE** keywords. If you specify an Ethernet interface, you must also specify the port number associated with the interface. If you specify a VE interface, you must also specify the VE number.

This display shows the following information.

TABLE 82 IPv6 neighbor information fields

This field...	Displays...
Total number of neighbor entries	The total number of entries in the IPv6 neighbor table.
IPv6 Address	The 128-bit IPv6 address of the neighbor.
Link-Layer Address	The 48-bit interface ID of the neighbor.
State	The current state of the neighbor. Possible states are as follows: <ul style="list-style-type: none"> • INCOMPLETE – Address resolution of the entry is being performed. • REACH – The forward path to the neighbor is functioning properly. • STALE – This entry has remained unused for the maximum interval. While stale, no action takes place until a packet is sent. • DELAY – This entry has remained unused for the maximum interval, and a packet was sent before another interval elapsed. • PROBE – Neighbor solicitation are transmitted until a reachability confirmation is received.
Age	The number of seconds the entry has remained unused. If this value remains unused for the number of seconds specified by the ipv6 nd reachable-time command (the default is 30 seconds), the entry is removed from the table.
Port	The port on which the entry was learned.
R	Determines if the neighbor is a device or host: 0 – Indicates that the neighbor is a host. 1 – Indicates that the neighbor is a device.

Displaying the IPv6 route table

To display the IPv6 route table, enter the following command at any CLI level.

```
Brocade# show ipv6 route
IPv6 Routing Table - 2 entries:
Type Codes - B:BGP C:Connected I:ISIS L:Local O:OSPF R:RIP S:Static
BGP Codes - i:iBGP e:eBGP
ISIS Codes - L1:Level-1 L2:Level-2
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2
STATIC Codes - d:DHCPv6
Type IPv6 Prefix          Next Hop Router Interface  Dis/Metric Uptime  src-vrf
C    2001:db8::/64         ::          eth 1/7    0/0      45m18s  -
C    2001:db8:0:25::/64    ::          loopback 1 0/0      1h0m    -
L    2001:db8:0:25::1/128 ::          loopback 1 0/0      13m18s  -
C    2001:db8:2000::/64   ::          eth 1/13   0/0      1h0m    -
```

Syntax: `show ipv6 route [ipv6-address | ipv6-prefix/prefix-length | bgp | connect | ospf | rip | isis | static | summary | tags | nexthop nexthop_id | ref-routes]`

The *ipv6-address* parameter restricts the display to the entries for the specified IPv6 address. You must specify the *ipv6-address* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The *ipv6-prefix/prefix-length* parameters restrict the display to the entries for the specified IPv6 prefix. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The **bgp** keyword restricts the display to entries for BGP4+ routes.

The **connect** keyword restricts the display to entries for directly connected interface IPv6 routes.

The **isis** keyword restricts the display to entries for IPv6 IS-IS routes.

The **ospf** keyword restricts the display to entries for OSPFv3 routes.

The **rip** keyword restricts the display to entries for RIPng routes.

The **static** keyword restricts the display to entries for static IPv6 routes.

The **summary** keyword displays a summary of the prefixes and different route types.

The **tags** keyword displays the label information for the IPv6 routes.

The **nexthop** option displays the next-hop information for all next hops in the routing table or for a specific entry. The *nexthop_id* parameter is a specific nexthop entry from the next hop table.

The **ref-routes** option allows you to display IPv6 routes in the forwarding table that refer to the specified nexthop entry.

The following table lists the information displayed by the **show ipv6 route** command.

TABLE 83 IPv6 route table fields

This field...	Displays...
Number of entries	The number of entries in the IPv6 route table.
Type	The route type, which can be one of the following: <ul style="list-style-type: none"> • B – The route is learned from BGP4+. • C – The destination is directly connected to the device. • I – The route is learned from IPv6 IS-IS. • L – The route is the host address of a loopback interface that is assigned an ipv6 address. • O – The route is learned from OSPFv3. • R – The route is learned from RIPng. • S – The route is a static route.
OSPF Type	<ul style="list-style-type: none"> • i – an internal route calculated by OSPF. • 1 – An OSPF type 1 external route. • 2 – An OSPF type 2 external route. • e – an external route calculated by OSPF.
IPv6 Prefix	The destination network of the route.
Next-Hop Router	The next-hop device.
Interface	The interface through which this device sends packets to reach the route destination.
Dis/Metric	The administrative distance and metric value of the route.

To display a summary of the IPv6 route table, enter the following command at any CLI level.


```
Brocade# show ipv6 route summary
IPv6 Routing Table - 7 entries:
  4 connected, 2 static, 0 RIP, 1 OSPF, 0 BGP
Number of prefixes:
  /16: 1 /32: 1 /64: 3 /128: 2
```

Table 84 lists the information displayed by the **show ipv6 route summary** command.

TABLE 84 IPv6 route table summary fields

This field...	Displays...
Number of entries	The number of entries in the IPv6 route table.
Number of route types	The number of entries for each route type.
Number of prefixes	A summary of prefixes in the IPv6 route table, sorted by prefix length.

To display the label information for the IPv6 route, enter the following command.

```
Brocade# show ipv6 route tags
IPv6 Routing Table - 4 entries:
Type Codes - B:BGP C:Connected I:ISIS L:Local O:OSPF R:RIP S:Static
BGP Codes - i:iBGP e:eBGP
ISIS Codes - L1:Level-1 L2:Level-2
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2
Type IPv6 Prefix          Next Hop Router      Interface    Dis/Metric    Uptime
S    2001:db8:1::/64      2001:db8:1111::2    eth 1/1      1/1           1h3m
label information: 794624(IN)
Bi  2001:db8:2::/64      ::                    lsp toPE-4   200/1         30m20s
label information: 794624(OUT)
C    2001:db8:1111::/64   ::                    eth 1/1      0/0           1h4m
label information: 794624(IN)
Bi   2001:db8:2222::/64   ::                    lsp toPE-4   200/0         30m20s
label information: 794624(OUT)
```

The label information for the IPv6 route is shown in bold text in the previous output.

Table 85 describes the output parameters of the **show ipv6 route tags** command.

TABLE 85 Output parameters of the **show ipv6 route tags** command

Field	Description
Number of entries	Shows the number of entries in the IPv6 route table.
Type Codes	Shows the route type, which can be one of the following: <ul style="list-style-type: none"> • B – The route is learned from BGP4+. • C – The destination is directly connected to the router. • I – The route is learned from IPv6 IS-IS. • L – The route is the host address of a loopback interface that is assigned an IPv6 address.
Type Codes (continued)	<ul style="list-style-type: none"> • O – The route is learned from OSPFv3. • R – The route is learned from RIPng. • S – The route is a static route.
BGP Codes	Shows the BGP type, which can be one of the following: <ul style="list-style-type: none"> • i - An IBGP route. • e - An EBGP route.
ISIS Codes	Shows the IS-IS type, which can be one of the following: <ul style="list-style-type: none"> • L1 - An IS-IS level 1 route. • L2 - An IS-IS level 2 route.
OSPF Codes	Shows the OSPF type, which can be one of the following: <ul style="list-style-type: none"> • i – An internal route calculated by OSPF. • 1 – An OSPF type 1 external route. • 2 – An OSPF type 2 external route. • e – An external route calculated by OSPF.
IPv6 Prefix	Shows the destination network of the route.
Next Hop Router	Shows the address of the next hop router.
Interface	Shows the interface through which this router sends the IPv6 packets to reach the destination.
Dis/Metric	Shows the administrative distance and metric value of the IPv6 route.
Uptime	Shows the amount of time the interface has been running.
label information	Shows the label information for the IPv6 route.

Using the nexthop option

You can display nexthop information for all next hops in the routing table or for a specific entry. To display all the nexthop entries, use the **show ipv6 route nexthop** command, and then use the option to display the next hop for a specific table entry.

```

Brocade# show ipv6 route nexthop
Total number of IPv6 nexthop entries: 261; Forwarding Use: 259
      NextHopIp      Port      RefCount      ID      Age
1      ::            eth 1/2      1/1           1       973
2      ::            drop        1/1          65536    1013
5      ::            ve 257      1/1           898     973
6      ::            ve 279      1/1           920     973
7      ::            ve 299      1/1           940     973
8      192:::1        eth 1/2      255959/255960 65538    1109
...

```

Syntax: `show ipv6 route nexthop nexthop_id`

The *nexthop_id* is under the column labeled ID in the output of the `show ip route nexthop` command. In the following example, the output of the `show ip route nexthop` command is displayed for a nexthop ID 65538.

```

Brocade# show ipv6 route nexthop 65538
      NextHopIp      Port      RefCount      ID      Age
1      192:::1        eth 1/2      255950/255951 65538    1384

```

Displaying IPv6 routes with nexthop ID

By using the `nexthop` option with the `ref-routes` keyword, you can display IPv6 routes in the forwarding table that refer to a specified nexthop entry, as the following example illustrates (using nexthop ID 65538).

```

Brocade#show ipv6 route nexthop 65538 ref-routes
Type Codes - B:BGP D:Connected I:ISIS O:OSPF R:RIP S:Static; Cost - Dist/Metric
ISIS Codes - L1:Level-1 L2:Level-2
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2 s:Sham Link
      Destination      Gateway      Port      Cost      Type      Uptime
1      3::/64             300:300::2  eth 1/2    20/0      B         15m27s
2      4::/64             300:300::2  eth 1/2    20/0      B         18m17s
3      4:21:103::0/126    300:300::2  eth 1/2    20/0      B         15m48s
4      4:23:112::0/126    300:300::2  eth 1/2    20/0      B         19m12s
5      4:23:113::0/126    300:300::2  eth 1/2    20/0      B         19m12s
6      4:23:114::0/126    300:300::2  eth 1/2    20/0      B         19m12s

```

Syntax: `show ipv6 route nexthop nexthop_id ref-routes`

Description of command output fields

The following table lists the information in the `show ipv6 route` command output when you run the `show ipv6 route nexthop nexthop_id ref-routes` command.

This display shows the following information.

TABLE 86 show ipv6 route nexthop ref-routes information fields

This field...	Displays...
Destination	The destination network of the IPv6 route.
Gateway	The next-hop router.
Port	The port through which this device sends packets to reach the route's destination.
Cost	The route's cost.
Type	The route type, which can be one of the following: <ul style="list-style-type: none"> • B – The route was learned from BGP. • D – The destination is directly connected to this Brocade device. • I – The route is an ISIS route. • O – The route is an OSPF route. • R – The route was learned from RIP. • S – The route is a static route. • * – The route is a candidate default route.
Uptime	The amount of time since the route was last modified. The format of this display parameter may change depending upon the age of the route to include the seconds (s), minutes (m), hours (h), and days (d), as described in the following: <ul style="list-style-type: none"> • 400d – Only days (d) displayed • 20d23h – days (d) and hours (h) displayed • 14h33m – hours (h) and minutes (m) displayed • 10m59s – minutes (m) and seconds (s) displayed

Displaying IPv6 routes using the detail option

By using the **detail** option with the **show ipv6 route** command, you can display the nexthop entry and the reference count. The following command output is displayed for a nexthop ID 65538.

```
Brocade#show ipv6 route nexthop 65538 ref-routes
Type Codes - B:BGP D:Connected I:ISIS O:OSPF R:RIP S:Static; Cost - Dist/Metric
ISIS Codes - L1:Level-1 L2:Level-2
OSPF Codes - i:Inter Area 1:External Type 1 2:External Type 2 s:Sham Link
  Destination      Gateway           Port           Cost      Type      Uptime
1   3::/64           300:300::2      eth 1/2       20/0      B         15m27s
2   4::/64           300:300::2      eth 1/2       20/0      B         18m17s
3   4:21:103::0/126 300:300::2      eth 1/2       20/0      B         15m48s
4   4:23:112::0/126 300:300::2      eth 1/2       20/0      B         19m12s
NextHop Entry ID:65538, Paths: 1, Ref_Count:256001/256002
```

Syntax: show ipv6 route *specific-route* detail

Displaying local IPv6 devices

The device can function as an IPv6 host, if you configure IPv6 addresses on the interfaces but do not enable IPv6 routing using the **ipv6 unicast-routing** command.

From the IPv6 host, you can display information about IPv6 devices to which the host is connected. The host learns about the devices through their router advertisement messages. To display information about the IPv6 devices connected to an IPv6 host, enter the following command at any CLI level.

```
Brocade# show ipv6 router
Router fe80::2e0:80ff:fe46:3431 on Ethernet 50, last update 0 min
Hops 64, Lifetime 1800 sec
Reachable time 0 msec, Retransmit time 0 msec
```

Syntax: show ipv6 router

If you configure your device to function as an IPv6 device (configure IPv6 addresses on the interfaces and enable IPv6 routing using the **ipv6 unicast-routing** command) and then enter the **show ipv6 router** command, you will receive the following output.

```
No IPv6 router in table
```

Meaningful output for this command is generated for devices configured to function as IPv6 hosts only.

This display shows the following information.

TABLE 87 IPv6 local router information fields

This field...	Displays...
Router <i>ipv6 address on interface port</i>	The IPv6 address for a particular interface.
Last update	The amount of elapsed time (in minutes) between the current and previous updates received from a device.
Hops	The default value that should be included in the Hop Count field of the IPv6 header for outgoing IPv6 packets. The hops value applies to the device for which you are displaying information and should be followed by IPv6 hosts attached to the device. A value of 0 indicates that the device leaves this field unspecified.
Lifetime	The amount of time (in seconds) that the device is useful as the default device.
Reachable time	The amount of time (in milliseconds) that a device assumes a neighbor is reachable after receiving a reachability confirmation. The reachable time value applies to the device for which you are displaying information and should be followed by IPv6 hosts attached to the device. A value of 0 indicates that the device leaves this field unspecified.
Retransmit time	The amount of time (in milliseconds) between retransmissions of neighbor solicitation messages. The retransmit time value applies to the device for which you are displaying information and should be followed by IPv6 hosts attached to the device. A value of 0 indicates that the device leaves this field unspecified.

Displaying IPv6 TCP information

You can display the following IPv6 TCP information:

- General information about each TCP connection on the device, including the percentage of free memory for each of the internal TCP buffers.
- Detailed information about a specified TCP connection.

Displaying global IPv6 information

To display general information about each TCP connection on the device, enter the following command at any CLI level.

```
Brocade# show ipv6 tcp connections
Local IP address:port <-> Remote IP address:port TCP state
192.168.182.110:23 <-> 192.168.8.186:4933 ESTABLISHED
192.168.182.110:8218 <-> 192.168.182.106:179 ESTABLISHED
192.168.182.110:8039 <-> 192.168.2.119:179 SYN-SENT
192.168.182.110:8159 <-> 192.168.2.102:179 SYN-SENT
2001:db8::110:179 <-> 2001:db8::106:8222 ESTABLISHED (1440)
Total 5 TCP connections
```

```
TCP MEMORY USAGE PERCENTAGE
FREE TCB = 98 percent
FREE TCP QUEUE BUFFER = 99 percent
FREE TCP SEND BUFFER = 97 percent
FREE TCP RECEIVE BUFFER = 100 percent
FREE TCP OUT OF SEQUENCE BUFFER = 100 percent
```

Syntax: show ipv6 tcp connections

This display shows the following information.

TABLE 88 General IPv6 TCP connection fields

This field...	Displays...
Local IP address:port	The IPv4 or IPv6 address and port number of the local interface over which the TCP connection occurs.
Remote IP address:port	The IPv4 or IPv6 address and port number of the remote interface over which the TCP connection occurs.
TCP state	The state of the TCP connection. Possible states include the following: <ul style="list-style-type: none">• LISTEN – Waiting for a connection request.• SYN-SENT – Waiting for a matching connection request after having sent a connection request.• SYN-RECEIVED – Waiting for a confirming connection request acknowledgment after having both received and sent a connection request.• ESTABLISHED – Data can be sent and received over the connection. This is the normal operational state.• FIN-WAIT-1 – Waiting for a connection termination request from the remote TCP, or an acknowledgment of the connection termination request previously sent.• FIN-WAIT-2 – Waiting for a connection termination request from the remote TCP.• CLOSE-WAIT – Waiting for a connection termination request from the local user.• CLOSING – Waiting for a connection termination request acknowledgment from the remote TCP.• LAST-ACK – Waiting for an acknowledgment of the connection termination request previously sent to the remote TCP (which includes an acknowledgment of its connection termination request).• TIME-WAIT – Waiting for enough time to pass to be sure the remote TCP received the acknowledgment of its connection termination request.• CLOSED – There is no connection state.
FREE TCB = <i>percentage</i>	The percentage of free TCP control block (TCB) space.

TABLE 88 General IPv6 TCP connection fields (Continued)

This field...	Displays...
FREE TCB QUEUE BUFFER = <i>percentage</i>	The percentage of free TCB queue buffer space.
FREE TCB SEND BUFFER = <i>percentage</i>	The percentage of free TCB send buffer space.
FREE TCB RECEIVE BUFFER = <i>percentage</i>	The percentage of free TCB receive buffer space.
FREE TCB OUT OF SEQUENCE BUFFER = <i>percentage</i>	The percentage of free TCB out of sequence buffer space.

To display detailed information about a specified TCP connection, enter a command such as the following at any CLI level.

```
Brocade# show ipv6 tcp status 2001:db8::110 179 2001:db8::106 8222
TCP: TCB = 0x217fc300
TCP: 2001:db8::110:179 <-> 2001:db8::106:8222: state: ESTABLISHED Port: 1
  Send: initial sequence number = 242365900
  Send: first unacknowledged sequence number = 242434080
  Send: current send pointer = 242434080
  Send: next sequence number to send = 242434080
  Send: remote received window = 16384
  Send: total unacknowledged sequence number = 0
  Send: total used buffers 0
  Receive: initial incoming sequence number = 740437769
  Receive: expected incoming sequence number = 740507227
  Receive: received window = 16384
  Receive: bytes in receive queue = 0
  Receive: congestion window = 1459
```

Syntax: `show ipv6 tcp status local-ip-address local-port-number remote-ip-address remote-port-number`

The *local-ip-address* parameter can be the IPv4 or IPv6 address of the local interface over which the TCP connection is taking place.

The *local-port-number* parameter is the local port number over which a TCP connection is taking place.

The *remote-ip-address* parameter can be the IPv4 or IPv6 address of the remote interface over which the TCP connection is taking place.

The *remote-port-number* parameter is the local port number over which a TCP connection is taking place.

This display shows the following information.

TABLE 89 Specific IPv6 TCP connection fields

This field...	Displays...
TCB = <i>location</i>	The location of the TCB.
<i>local-ip-address local-port-number remote-ip-address remote-port-number state port</i>	This field provides a general summary of the following: <ul style="list-style-type: none"> • The local IPv4 or IPv6 address and port number. • The remote IPv4 or IPv6 address and port number. • The state of the TCP connection. For information on possible states, refer to Table 88 on page 474. • The port numbers of the local interface.
Send: initial sequence number = <i>number</i>	The initial sequence number sent by the local device.
Send: first unacknowledged sequence number = <i>number</i>	The first unacknowledged sequence number sent by the local device.
Send: current send pointer = <i>number</i>	The current send pointer.
Send: next sequence number to send = <i>number</i>	The next sequence number sent by the local device.
Send: remote received window = <i>number</i>	The size of the remote received window.
Send: total unacknowledged sequence number = <i>number</i>	The total number of unacknowledged sequence numbers sent by the local device.
Send: total used buffers <i>number</i>	The total number of buffers used by the local device in setting up the TCP connection.
Receive: initial incoming sequence number = <i>number</i>	The initial incoming sequence number received by the local device.
Receive: expected incoming sequence number = <i>number</i>	The incoming sequence number expected by the local device.
Receive: received window = <i>number</i>	The size of the local device receive window.
Receive: bytes in receive queue = <i>number</i>	The number of bytes in the local device receive queue.
Receive: congestion window = <i>number</i>	The size of the local device receive congestion window.

Displaying IPv6 traffic statistics

To display IPv6 traffic statistics, enter the following command at any CLI level.

```
Brocade# show ipv6 traffic
IP6 Statistics
 36947 received, 66818 sent, 0 forwarded, 36867 delivered, 0 rawout
 0 bad vers, 23 bad scope, 0 bad options, 0 too many hdr
 0 no route, 0 can't forward, 0 redirect sent, 0 source routed
 0 frag rcv, 0 frag dropped, 0 frag timeout, 0 frag overflow
 0 reassembled, 0 fragmented, 0 ofragments, 0 can't frag
 0 too short, 0 too small, 11 not member
 0 no buffer, 66819 allocated, 21769 freed
 0 forward cache hit, 46 forward cache miss

ICMP6 Statistics
Received:
 0 dest unreachable, 0 pkt too big, 0 time exceeded, 0 param prob
 2 echo req, 1 echo reply, 0 mem query, 0 mem report, 0 mem red
 0 router soli, 2393 router adv, 106 nei soli, 3700 nei adv, 0 redirect
 0 bad code, 0 too short, 0 bad checksum, 0 bad len
 0 reflect, 0 nd toomany opt, 0 badhopcount
Sent:
 0 dest unreachable, 0 pkt too big, 0 time exceeded, 0 param prob
 1 echo req, 2 echo reply, 0 mem query, 0 mem report, 0 mem red
 0 router soli, 2423 router adv, 3754 nei soli, 102 nei adv, 0 redirect
 0 error, 0 can't send error, 0 too freq
Sent Errors:
 0 unreachable no route, 0 admin, 0 beyond scope, 0 address, 0 no port
 0 source address policy, 0 reject route
 0 pkt too big, 0 time exceed transit, 0 time exceed reassembly
 0 param problem header, 0 nexthead, 0 option, 0 redirect, 0 unknown

UDP Statistics
 470 received, 7851 sent, 6 no port, 0 input errors

TCP Statistics
 57913 active opens, 0 passive opens, 57882 failed attempts
 159 active resets, 0 passive resets, 0 input errors
 565189 in segments, 618152 out segments, 171337 retransmission
```

Syntax: show ipv6 traffic

This display shows the following information.

TABLE 90 IPv6 traffic statistics fields

This field...	Displays...
IPv6 statistics	
received	The total number of IPv6 packets received by the device.
sent	The total number of IPv6 packets originated and sent by the device.
forwarded	The total number of IPv6 packets received by the Brocade device and forwarded to other devices.
delivered	The total number of IPv6 packets delivered to the upper layer protocol.
rawout	This information is used by Brocade Technical Support.

TABLE 90 IPv6 traffic statistics fields (Continued)

This field...	Displays...
bad vers	The number of IPv6 packets dropped by the device because the version number is not 6.
bad scope	The number of IPv6 packets dropped by the device because of a bad address scope.
bad options	The number of IPv6 packets dropped by the device because of bad options.
too many hdr	The number of IPv6 packets dropped by the device because the packets had too many headers.
no route	The number of IPv6 packets dropped by the device because there was no route.
can not forward	The number of IPv6 packets the device could not forward to another device.
redirect sent	This information is used by Brocade Technical Support.
source routed	The number of IPv6 source-routed packets dropped.
frag recv	The number of fragments received by the device.
frag dropped	The number of fragments dropped by the device.
frag timeout	The number of fragment timeouts that occurred.
frag overflow	The number of fragment overflows that occurred.
reassembled	The number of fragmented IPv6 packets that the device reassembled.
fragmented	The number of IPv6 packets fragmented by the device to accommodate the MTU of this device or of another device.
ofragments	The number of output fragments generated by the device.
can not frag	The number of IPv6 packets the device could not fragment.
too short	The number of IPv6 packets dropped because they are too short.
too small	The number of IPv6 packets dropped because they do not have enough data.
not member	The number of IPv6 packets dropped because the recipient is not a member of a multicast group.
no buffer	The number of IPv6 packets dropped because there is no buffer available.
forward cache miss	The number of IPv6 packets received for which there is no corresponding cache entry.
ICMP6 statistics	
Some ICMP statistics apply to both Received and Sent, some apply to Received only, some apply to Sent only, and some apply to Sent Errors only.	
Applies to Received and Sent	
dest unreachable	The number of Destination Unreachable messages sent or received by the device.
pkt too big	The number of Packet Too Big messages sent or received by the device.
time exceeded	The number of Time Exceeded messages sent or received by the device.
param prob	The number of Parameter Problem messages sent or received by the device.
echo req	The number of Echo Request messages sent or received by the device.
echo reply	The number of Echo Reply messages sent or received by the device.

TABLE 90 IPv6 traffic statistics fields (Continued)

This field...	Displays...
mem query	The number of Group Membership Query messages sent or received by the device.
mem report	The number of Membership Report messages sent or received by the device.
mem red	The number of Membership Reduction messages sent or received by the device.
router soli	The number of Router Solicitation messages sent or received by the device.
router adv	The number of Router Advertisement messages sent or received by the device.
nei soli	The number of Neighbor Solicitation messages sent or received by the device.
nei adv	The number of Router Advertisement messages sent or received by the device.
redirect	The number of redirect messages sent or received by the device.
Applies to Received Only	
bad code	The number of Bad Code messages received by the device.
too short	The number of Too Short messages received by the device.
bad checksum	The number of Bad Checksum messages received by the Brocade device.
bad len	The number of Bad Length messages received by the device.
nd toomany opt	The number of Neighbor Discovery Too Many Options messages received by the device.
badhopcount	The number of Bad Hop Count messages received by the device.
Applies to Sent Only	
error	The number of Error messages sent by the device.
can not send error	The number of times the device encountered errors in ICMP error messages.
too freq	The number of times the device has exceeded the frequency of sending error messages.
Applies to Sent Errors Only	
unreach no route	The number of Unreachable No Route errors sent by the device.
admin	The number of Admin errors sent by the device.
beyond scope	The number of Beyond Scope errors sent by the device.
address	The number of Address errors sent by the device.
no port	The number of No Port errors sent by the device.
pkt too big	The number of Packet Too Big errors sent by the device.
source address policy	The number of ICMPv6 destination unreachable messages sent with code 5 because an IPv6 packet is dropped by an Access Control policy and the IPv6 source address of a packet matches the source address filtering policy.
reject route	The number of ICMPv6 destination unreachable messages sent code 6 because an IPv6 packet is dropped due to the destination address in the packet matching a route that has been configured to drop the packet.
time exceed transit	The number of Time Exceed Transit errors sent by the device.
time exceed reassembly	The number of Time Exceed Reassembly errors sent by the device.
param problem header	The number of Parameter Problem Header errors sent by the device.

TABLE 90 IPv6 traffic statistics fields (Continued)

This field...	Displays...
nextheader	The number of Next Header errors sent by the device.
option	The number of Option errors sent by the device.
redirect	The number of Redirect errors sent by the device.
unknown	The number of Unknown errors sent by the device.
UDP statistics	
received	The number of UDP packets received by the device.
sent	The number of UDP packets sent by the device.
no port	The number of UDP packets dropped because the packet did not contain a valid UDP port number.
input errors	This information is used by Brocade Technical Support.
TCP statistics	
active opens	The number of TCP connections opened by the device by sending a TCP SYN to another device.
passive opens	The number of TCP connections opened by the device in response to connection requests (TCP SYNs) received from other devices.
failed attempts	This information is used by Brocade Technical Support.
active resets	The number of TCP connections the device reset by sending a TCP RESET message to the device at the other end of the connection.
passive resets	The number of TCP connections the device reset because the device at the other end of the connection sent a TCP RESET message.
input errors	This information is used by Brocade Technical Support.
in segments	The number of TCP segments received by the device.
out segments	The number of TCP segments sent by the device.
retransmission	The number of segments that the device retransmitted because the retransmission timer for the segment had expired before the device at the other end of the connection had acknowledged receipt of the segment.

Displaying statistics for IPv6 subnet rate limiting

Run the **show rate-limit ipv6 subnet** and **show rate-limit protocol** commands to display information about IPv6 rate limiting.

```
Brocade# show rate-limit ipv6 subnet

Fwd:          252                Drop:  155 bytes
Re-mark:      0                 Total: 407 bytes
```

Syntax: **show rate-limit ipv6-subnet**

[Table 91](#) describes the fields from the output of **show rate-limit ipv6 subnet** command.

TABLE 91 Output from the **show rate-limit ipv6 subnet** command

Field	Description
Fwd	IPv6 traffic that has been forwarded after the device was started or the counter was reset due to the rate limit policy.
Drop	IPv6 traffic that has been dropped after the device was started or the counter was reset due to the rate limit policy.
Re-mark	The number of IPv6 packets whose priority has been remarked as a result of exceeding the bandwidth available in the CIR bucket for the specific rate limit policy.
Total	IPv6 traffic that has been carried on the interface after the device was started or the counter was reset due to the rate limit policy.

```

Brocade# show rate-limit protocol
Index                0
In use               TRUE
Protocol             0 (arp)
Policy Map           abc
Index                2
In use               TRUE
Protocol             2 (ipv6 subnet)
Policy Map           abc
    
```

Syntax: show rate-limit protocol

[Table 92](#) describes the fields from the output of **show rate-limit protocol** command.

TABLE 92 Output from the **show rate-limit protocol** command

Field	Description
Index	Numeric index of the protocol supported by the device.
In use	Whether the protocol is in use or not (True: In use / False: Not in use)
Protocol	Protocol name (0: arp / 2: IPv6 subnet)
Policy Map	The rate limit policy applied on this protocol.

Displaying IPv6 information for Router Advertisement Options

Run the **show ipv6** command to display IPv6 information about the newly configured DNS recursive server addresses, domain name suffixes, and the corresponding lifetime values on an IPv6 host network.

Displaying global IPv6 information

```
Brocade# show ipv6
Global Settings
  IPv6 Router-Id: 2.2.2.1   load-sharing path: 4
  unicast-routing enabled, ipv6 allowed to run, hop-limit 64
  reverse-path-check disabled
  host drop cam limit disabled
  urpf-exclude-default disabled
  session-logging-age 5
  No Inbound Access List Set
  No Outbound Access List Set
  source-route disabled, forward-source-route disabled, icmp-redirect disabled
OSPF (default VRF): enabled
BGP: enabled, 1 active neighbor(s) configured
  ND6 RA DNS Attributes
    ipv6 nd ra-dns-server abcd:abcd:abcd::3 lifetime 122
    ipv6 nd ra-dns-server 1::1 lifetime 150
    ipv6 nd ra-dns-server abcd:abcd:abcd::2 lifetime 196
    ipv6 nd ra-dns-server abcd:abcd:abcd::1 lifetime 200
    ipv6 nd ra-domain-name brocade.com.abc.123.abbbc lifetime 102
    ipv6 nd ra-domain-name abc-011223.brocade.com lifetime 141
    ipv6 nd ra-domain-name abc.com lifetime 155
    ipv6 nd ra-domain-name abcd.com.abc.123 lifetime 200
Brocade#
```

Syntax: show ipv6

Displaying IPv6 interface information for Router Advertisement Options

Run the **show ipv6 interface** command to display IPv6 interface information about the newly configured DNS recursive server addresses, domain name suffixes, and the corresponding lifetime values on an IPv6 host network.

```

Brocade# show ipv6 interface ethernet 2/1
Interface Ethernet 2/1 is up, line protocol is up
IPv6 is enabled, link-local address is fe80::224:38ff:fe90:e430 [Preferred]
Global unicast address(es):
  7:7:7::1 [Preferred], subnet is 7:7:7::/64
  7:7:7:: [Anycast], subnet is 7:7:7::/64
Joined group address(es):
  ff02::1:ff00:1
  ff02::1:ff00:0
  ff02::1:ff90:e430
  ff02::2
  ff02::1
Port belongs to VRF: default-vrf
MTU is 1500 bytes
ICMP redirects are disabled
ND DAD is enabled, number of DAD attempts: 3
ND reachable time is 30000 Milliseconds
ND advertised reachable time is 0 seconds
ND retransmit interval is 1000 milliseconds
ND advertised retransmit interval is 0 milliseconds
ND next router advertisement will be sent in 258 seconds
ND router advertisements live for 1800 seconds
No Inbound Access List Set
No Outbound Access List Set
IPv6 RPF mode: None IPv6 RPF Log: Disabled
RxPkts:          0                      TxPkts:    63
RxBytes:         0                      TxBytes:  12010
IPv6 unicast RPF drop: 0
IPv6 unicast RPF suppressed drop: 0
ND6 RA DNS Attributes
  ipv6 nd ra-dns-server 11::1176 lifetime 176
  ipv6 nd ra-dns-server 11::11 lifetime 200
  ipv6 nd ra-domain-name abc.com.abb lifetime 150
  ipv6 nd ra-domain-name abc-aaa.com lifetime 199
  ipv6 nd ra-domain-name abc.com lifetime 200
Brocade#

```

Syntax: show ipv6 interface

Commands

The following commands support the features described in this chapter:

- [ipv6 nd ra-dns-server](#)
- [ipv6 nd ra-domain-name](#)

ipv6 nd ra-dns-server

Advertises the recursive Domain Name System (DNS) server address and the lifetime multiplier information to IPv6 hosts in the Router Advertisement (RA) message. The **no** form of this command disables the advertisement of the specified server address in the RA message.

Syntax	ipv6 nd ra-dns-server <i>ipv6-address</i> [lifetime-multiplier <i>decimal</i>] no ipv6 nd ra-dns-server <i>ipv6-address</i> [lifetime-multiplier <i>decimal</i>]
Command Default	By default, the recursive DNS server address and the lifetime multiplier information is not configured.
Parameters	<i>ipv6-address</i> Specifies the global IPv6 address of the DNS server. lifetime-multiplier <i>decimal</i> Specifies the percentage value of maximum router advertisement interval. The maximum router advertisement interval is the maximum time that can be allowed between sending unsolicited RA messages for DNS name resolution. The lifetime-multiplier <i>decimal</i> value is calculated as percentage of the RA lifetime. The maximum router advertisement interval percentage range is 100 through 200% and the default value is 200%.
Command Modes	Global configuration mode Interface configuration mode
Usage Guidelines	You can configure a maximum of four recursive DNS server addresses and corresponding lifetime multiplier values at a given instance.

NOTE

The **ipv6 nd ra-dns-server** command at the interface configuration level takes precedence over global configuration. In other words, if at least one DNS server address is configured on an interface, it will override other DNS server address configurations at the global configuration.

Examples The following examples configure the recursive DNS address for a lifetime-multiplier value of 200.

```
Brocade(config)# ipv6 nd ra-dns-server 2001:DC8:200::3 lifetime 200
Brocade(config-if-e10000-1/10)# ipv6 nd ra-dns-server 2001:DC8:200::3 lifetime 200
```

History

Release	Command History
<i>Multi-Service IronWare R05.5.00</i>	This command was introduced.

Related Commands	ipv6 nd ra-domain-name ipv6 nd global-suppress-ra ipv6 nd send-ra
-------------------------	--

ipv6 nd ra-domain-name

Configures the domain name of the Domain Name System (DNS) suffix and the lifetime multiplier information to IPv6 hosts in the Router Advertisement (RA) message. The **no** form of this command disables the advertisement of the specified domain name of DNS suffix in the RA message.

Syntax	ipv6 nd ra-domain-name <i>string</i> [lifetime-multiplier <i>decimal</i>] no ipv6 nd ra-domain-name <i>string</i> [lifetime-multiplier <i>decimal</i>]
Command Default	By default, the domain name of the DNS suffix and the lifetime multiplier information is not configured.
Parameters	<i>string</i> Specifies the domain name of the DNS suffix. lifetime-multiplier <i>decimal</i> Specifies the percentage value of maximum router advertisement interval. The maximum router advertisement interval is the maximum time that can be allowed between sending unsolicited RA messages for DNS name resolution. The lifetime-multiplier <i>decimal</i> value is calculated as percentage of the RA lifetime. The maximum router advertisement interval percentage range is 100 through 200% and the default value is 200%.
Command Modes	Global configuration mode Interface configuration mode
Usage Guidelines	You can configure a maximum of four different domain names of DNS suffix and corresponding lifetime multiplier values at a given instance. The domain name of a DNS suffix at the global configuration level is used on all IPv6 routed interfaces that do not have a domain name of DNS suffix configured on them.

NOTE

The **ipv6 nd ra-domain-name** command at the interface configuration takes precedence over global configuration. In other words, if at least one DNS server address is configured on an interface, it will override other DNS server address configurations at the global configuration.

Examples The following examples configure the domain names of a DNS suffix for a lifetime-multiplier value of 200.

```
Brocade(config)# ipv6 nd ra-domain-name brocade.com lifetime 200
Brocade(config-if-e10000-1/10)# ipv6 nd ra-domain-name brocade.com lifetime 200
```

History

Release	Command History
Multi-Service IronWare R05.5.00	This command was introduced.

Related Commands	ipv6 nd ra-dns-server ipv6 nd global-suppress-ra ipv6 nd send-ra
-------------------------	---

ipv6 nd ra-domain-name

IPv6 Addressing

IPv6 addressing overview

Table 93 displays the individual devices and the IPv6 Addressing features they support.

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
IPv6 Addressing	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 Address Unicast	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 Address Multicast	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 Address Anycast	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 Stateless auto-configuration	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 Address in the Configuration	Yes	Yes	No	Yes	Yes	Yes	Yes

This chapter includes overview information about the following topics:

- IPv6 addressing.
- The IPv6 stateless auto-configuration feature, which enables a host on a local link to automatically configure its interfaces with new and globally unique IPv6 addresses associated with its location.

A limitation of IPv4 is its 32-bit addressing format, which is unable to satisfy potential increases in the number of users, geographical needs, and emerging applications. To address this limitation, IPv6 introduces a new 128-bit addressing format.

An IPv6 address is composed of 8 fields of 16-bit hexadecimal values separated by colons (:).

Figure 34 shows the IPv6 address format.

FIGURE 34 IPv6 address format

HHHH = Hex Value 0000 – FFFF

As shown in [Figure 34](#), HHHH is a 16-bit hexadecimal value, while H is a 4-bit hexadecimal value. The following is an example of an IPv6 address:

```
2001:DB8:0000:0000:002D:D0FF:FE48:4672
```

Note that the sample IPv6 address includes hexadecimal fields of zeros. To make the address less cumbersome, you can do the following:

- Omit the leading zeros; for example, 2001:DB8:0:0:2D:D0FF:FE48:4672.
- Compress the successive groups of zeros at the beginning, middle, or end of an IPv6 address to two colons (::) once per address; for example, 2001:DB8::2D:D0FF:FE48:4672.

When specifying an IPv6 address in a command syntax, keep the following in mind:

- You can use the two colons (::) once in the address to represent the longest successive hexadecimal fields of zeros.
- The hexadecimal letters in the IPv6 addresses are not case-sensitive.

As shown in [Figure 34](#), the IPv6 network prefix is composed of the left-most bits of the address. As with an IPv4 address, you can specify the IPv6 prefix using the *prefix* or *prefix-length* format, where the following applies:

The *prefix* parameter is specified as 16-bit hexadecimal values separated by a colon.

The *prefix-length* parameter is specified as a decimal value that indicates the left-most bits of the IPv6 address.

The following is an example of an IPv6 prefix:

```
2001:DB8:49EA:D088::/64
```

IPv6 address types

As with IPv4 addresses, you can assign multiple IPv6 addresses to a Brocade device interface. [Table 94](#) presents the three major types of IPv6 addresses that you can assign to a Brocade device interface.

A major difference between IPv4 and IPv6 addresses is that IPv6 addresses support **scope**, which describes the topology in which the address may be used as a unique identifier for an interface or set of interfaces.

Unicast and multicast addresses support scoping as follows:

- **Unicast addresses support two types of scope:** global scope and local scope. In turn, local scope supports link-local addresses. [Table 94](#) describes global and link-local addresses and the topologies in which they are used.
- Multicast addresses support a scope field, which [Table 94](#) describes.

TABLE 94 IPv6 address types

Address type	Description	Address structure
Unicast	An address for a single interface. A packet sent to a unicast address is delivered to the interface identified by the address.	<p>Depends on the type of the unicast address:</p> <ul style="list-style-type: none"> • Aggregatable global address — An address equivalent to a global or public IPv4 address. The address structure is as follows: a fixed prefix of 2000::/3 (001), a 45-bit global routing prefix, a 16-bit subnet ID, and a 64-bit interface ID. • Unique local address — An address used within a site or intranet. For more information on ULAs, refer to RFC 4193. • Link-local address — An address used between directly connected nodes on a single network link. The address structure is as follows: a fixed prefix of FE80::/10 (1111 1110 10) and a 64-bit interface ID. • IPv4-compatible address — An address used in IPv6 transition mechanisms that tunnel IPv6 packets dynamically over IPv4 infrastructures. The address embeds an IPv4 address in the low-order 32 bits and the high-order 96 bits are zeros. The address structure is as follows: 0:0:0:0:0:A.B.C.D. • Loopback address — An address (0:0:0:0:0:0:0:1 or ::1) that a Brocade device can use to send an IPv6 packet to itself. You cannot assign a loopback address to a physical interface. • Unspecified address — An address (0:0:0:0:0:0:0:0 or ::) that a node can use as a source address only until the node has its own address that is auto-configured.
Multicast	An address for a set of interfaces belonging to different nodes. Sending a packet to a multicast address results in the delivery of the packet to all interfaces in the set.	A multicast address has a fixed prefix of FF00::/8 (1111 1111). The next 4 bits define the address as a permanent or temporary address. The next 4 bits define the scope of the address (node, link, site, organization, global).
Anycast	An address for a set of interfaces belonging to different nodes. Sending a packet to an anycast address results in the delivery of the packet to the closest interface identified by the address.	<p>An anycast address looks similar to a unicast address, because it is allocated from the unicast address space. If you assign a unicast address to multiple interfaces, it is an anycast address. An interface assigned an anycast address must be configured to recognize the address as an anycast address.</p> <p>An anycast address can be assigned to a router only.</p> <p>An anycast address must not be used as the source address of an IPv6 packet.</p>

A Brocade device automatically configures a link-local unicast address for an interface by using the prefix of FE80::/10 (1111 1110 10) and a 64-bit interface ID. The 128-bit IPv6 address is then subjected to duplicate address detection to ensure that the address is unique on the link. If desired, you can override this automatically configured address by explicitly configuring an address.

IPv6 stateless auto-configuration

Brocade devices use the IPv6 stateless auto-configuration feature to enable a host on a local link to automatically configure its interfaces with new and globally unique IPv6 addresses associated with its location. The automatic configuration of a host interface is performed without the use of a server, such as a Dynamic Host Configuration Protocol (DHCP) server, or manual configuration.

The automatic configuration of a host interface works in the following way: a router on a local link periodically sends router advertisement messages containing network-type information, such as the 64-bit prefix of the local link and the default route, to all nodes on the link. When a host on the link receives the message, it takes the local link prefix from the message and appends a 64-bit interface ID, thereby automatically configuring its interface. (The 64-bit interface ID is derived from the MAC address of the host's NIC.) The 128-bit IPv6 address is then subjected to duplicate address detection to ensure that the address is unique on the link.

The duplicate address detection feature verifies that a unicast IPv6 address is unique before it is assigned to a host interface by the stateless auto configuration feature. Duplicate address detection uses neighbor solicitation messages to verify that a unicast IPv6 address is unique.

NOTE

For the stateless auto configuration feature to work properly, the advertised prefix length in router advertisement messages must always be 64 bits.

The IPv6 stateless auto-configuration feature can also automatically reconfigure a host's interfaces if you change the ISP for the host's network. (The host's interfaces must be renumbered with the IPv6 prefix of the new ISP.)

The renumbering occurs in the following way: a router on a local link periodically sends advertisements updated with the prefix of the new ISP to all nodes on the link. (The advertisements still contain the prefix of the old ISP.) A host can use the addresses created from the new prefix and the existing addresses created from the old prefix on the link. When you are ready for the host to use the new addresses only, you can configure the lifetime parameters appropriately using the **ipv6 nd prefix-advertisement** command. During this transition, the old prefix is removed from the router advertisements. At this point, only addresses that contain the new prefix are used on the link.

IPv6 Prefix List

Table 95 displays the individual devices and the IPv6 Prefix List features they support.

TABLE 95 Supported IPv6 prefix list features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
IPv6 Prefix List	Yes	Yes	No	Yes	Yes	Yes	Yes
Displaying Prefix List Information	Yes	Yes	No	Yes	Yes	Yes	Yes
ND6 IPv6 Prefix Suppress	Yes	Yes	No	Yes	Yes	Yes	Yes

Configuring an IPv6 prefix list

Brocade devices support IPv6 prefix lists, which you can use for basic traffic filtering. You can configure up to 100 IPv6 prefix lists.

An IPv6 prefix list is composed of one or more conditional statements that pose an action (permit or deny) if a packet matches a specified prefix. In prefix lists with multiple statements, you can specify a sequence number for each statement. The specified sequence number determines the order in which the statement appears in the prefix.

You can configure an IPv6 prefix list on a global basis, then use it as input to other commands or processes, such as route aggregation, route redistribution, route distribution, route maps, and so on. When a Brocade device interface sends or receives an IPv6 packet, it applies the statements within the IPv6 prefix list in their order of appearance to the packet. As soon as a match occurs, the device takes the specified action (permit or deny the packet) and stops further comparison for that packet.

You can use permit statements in the prefix list to specify the traffic that you want to send to the other feature. If you use deny statements, the traffic specified by the deny statements is not supplied to the other feature.

To configure an IPv6 prefix list and use it as input to the RIPng **distribute-list** command, enter commands such as the following.

```
Brocade(config)# ipv6 prefix-list routesfor2001 permit 2001:db8::/32
Brocade(config)# ipv6 router rip
Brocade(config-ripng-router)# distribute-list prefix-list routesfor2001 out
ethernet 3/1
```

Displaying prefix list information

These commands permit the inclusion of routes with the IPv6 prefix 2001:db8::/32 in RIPng routing updates sent from Ethernet interface 3/1.

Syntax: `[no] ipv6 prefix-list name [seq sequence-number] deny ipv6-prefix/prefix-length | permit ipv6-prefix/prefix-length | description string [ge ge-value] [le le-value]`

The *name* parameter specifies the prefix list name. You use this name when using the prefix list as input to command or route map.

The **seq** *seq-number* parameter is optional and specifies the IPv6 prefix list's sequence number. If you do not specify a sequence number, the software numbers them in increments of 5, beginning with prefix list entry 5. The Brocade device interprets the prefix list entries in numerical order, beginning with the lowest sequence number.

The **description** *string* parameter is a text string describing the prefix list.

The **deny** *ipv6-prefix/prefix-length* | **permit** *ipv6-prefix/prefix-length* parameters specify the action the Brocade device takes if a packet contains a route specified in this prefix list.

You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The prefix list matches only on the specified prefix/prefix length unless you use the **ge** *prefix-length* or **le** *prefix-length* parameters. (See below.)

You can specify a range of prefix lengths for prefixes that are more specific than *ipv6-prefix/prefix-length*.

- If you specify only **ge** *ge-value*, then the range is from *ge-value* to 128.
- If you specify only **le** *le-value*, then the range is from *le-value* to the *prefix-length* parameter.

The *ge-value* or *le-value* you specify must meet the following condition.

$prefix-length < ge-value \leq le-value \leq 128$

If you do not specify **ge** *ge-value* or **le** *le-value*, the prefix list matches only on the exact prefix you specify with the *ipv6-prefix/prefix-length* parameter.

To delete the prefix list entry, use the **no** form of this command.

Displaying prefix list information

To display the IPv6 prefix lists configured on a Brocade device, enter the following command at any level of the CLI.

```
Brocade(config)# show ipv6 prefix-lists
ipv6 prefix-list routesFor2001: 1 entries
  seq 5 permit 2001:db8::/32
```

Syntax: `show ipv6 prefix-lists [name]`

The *name* parameter restricts the display to the specified prefix list. Specify the name of the prefix list that you want to display.

IPv6 ND Prefix Suppress

Brocade devices support IPv6 ND Prefix Suppress, which is useful in a LAN where multiple hosts are connected to a router(s). Prefix Suppress performs these functions:

- Advertisement of on-link prefix information is suppressed in router advertisement (RA) messages.
- Hosts are prevented from auto configuring based on the prefix in the RA message.
- DHCPv6 is used for security and accountability.
- Advertisement of identical prefixes by multiple routers is suppressed.
- Global Suppress option suppresses IPv6 addresses defined on an interface from getting advertised in the RA message.

NOTE

When the user configures the Global Suppress option, an RA is generated with all deprecated IPv6 address entries that are not advertised in subsequent RA messages.

- Prefix advertisement entry in the RA message is advertised if a duplicate entry exists in the prefix advertisement list and IPv6 address list

Configuring the suppress option to specific IPv6 addresses defined on an interface generates deprecated IPv6 address entries (i.e. with preferred lifetime = 0 hours and valid lifetime = 2 hours) in RA messages. When a host receives deprecated IPv6 address entries, the address is forbidden for new sessions although existing sessions can continue using the address.

Deprecated entries are advertised in the following scenarios:

- Suppress option is configured for IPv6 address entries.
- Prefix advertisement entries are un-configured.
- IPv6 address entries are un-configured.

Configuring IPv6 Prefix Suppress

Command syntax for configuring the suppress option for an IPv6 address entry:

```
(config-if-x)#[no] ipv6 nd address <ipv6-address> suppress
```

Command syntax for configuring the suppress option for all IPv6 address entries:

```
(config-if-x)#[no] ipv6 nd address suppress
```

Command syntax for Show IPv6 interface output is modified to display individual or globally suppressed entries:

```
Router-A# show ipv6 interface ethernet 1/2
    MTU is 1500 bytes
    ICMP redirects are disabled
    ND DAD is enabled, number of DAD attempts: 3
    ND reachable time is 30000 Milliseconds
    ND advertised reachable time is 0 seconds
    ND retransmit interval is 1000 milliseconds
    ND advertised retransmit interval is 0 milliseconds
    ND next router advertisement will be sent in 2 seconds
```

```
ND router advertisements live for 1800 seconds
ND suppress-ra disabled
ND address-prefixes suppressed in router advertisement - all
ND address-prefixes suppressed in router advertisement -
300::1/64
Router-A#
```

Command syntax for debugging IPv6 Prefix Suppress:

```
Router-A# debug ipv6 ra
```

NOTE

No additional debug commands are added for this feature. Debug commands available for IPv6 ND can be used for this feature.

Configuration Considerations for IPv6 Prefix Suppress

The following considerations should be considered prior to configuring IPv6 Prefix Suppress:

- Suppress option is not configurable for a non-existent IPv6 address entry. As a result, the suppress option is not applicable to future references.
- Suppress option is not supported for suppressing prefix advertisement entries.

NOTE

The user may un-configure the prefix advertisement entry so it is not advertised in the RA message.

- Configuration of the suppress option is not allowed for a duplicate entry in any combination.
- When multiple IPv6 addresses of the same subnet are defined on an interface, apply the suppress option on individual entries.

IPv6 ND Router Advertisement Control

IPv6 ND Router Advertisement Control allows for disabling sending out router advertisements at the interface level. The **no ipv6 nd suppress-ra** command at the interface level allows the user to disable and enable the sending of the ND Router Advertisement on an interface. By default, the sending of ND Router Advertisement (RA) is enabled on all interfaces, except for the tunnel and loopback interfaces, providing that the IPv6 Unicast Routing is enabled and the interfaces are active for IPv6.

The IPv6 ND Router Advertisement Control gives the ability to quickly turn off the sending of IPv6 ND Router Advertisement message on an IPv6 enabled interfaces.

By default,

- The ND Router Advertisement is enabled.
- Interface is enabled to send ND Router Advertisements.
- The **ipv6 nd suppress-ra** and **ipv6 nd send-ra** interface commands, when configured, override the system and VRF global **ipv6 nd global-suppress-ra** command.

Users sometimes require the ability to quickly turn off the sending of IPv6 ND Router Advertisement message on an IPv6 enabled interfaces. This is achieved by providing the following additional configuration command at interface level:

```
Brocade(config-if-e10000-1/1)#no ipv6 nd suppress-ra
```

The **ipv6 nd send-ra** command is a new interface level command added as part of this enhancement. This allows the user to configure the sending of RA messages on some selected interfaces when the **ipv6 nd global-suppress-ra** command is set to disable the sending of RA messages on all other interfaces.

Syntax: [no]ipv6 nd suppress-ra

IPv6 ND Prefix Suppress

Managing a Device Over IPv6

Table 96 displays the individual Brocade devices and the supported features on how to Manage a Device Over IPv6.

TABLE 96 Supported Brocade IPv6 routes features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
IPv6 copy Command	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Copying a File from an IPv6 TFTP Server	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Using the IPv6 ncopy Command	Yes	Yes	Yes	Yes	Yes	Yes	Yes
IPv6 Ping Command	Yes	Yes	Yes	Yes	Yes	Yes	Yes
IPv6 Traceroute Command	Yes	Yes	Yes	Yes	Yes	Yes	Yes
IPv6 Telnet	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Secure Shell	Yes	Yes	Yes	Yes	Yes	Yes	Yes

You can perform system management tasks for the device using the **copy**, **ncopy**, **ping**, **telnet**, and **traceroute** commands and Secure Shell (SSH). These commands and SSH now function over IPv6.

This section describes the IPv6-related syntax added to the commands and SSH. It does not describe the already existing command syntax for IPv4.

Using the IPv6 copy command

The **copy** command for IPv6 allows you to do the following:

- Copy a file from a specified source to an IPv6 TFTP server.
- Copy a file from an IPv6 TFTP server to a specified destination.

Copying a file to an IPv6 TFTP server

You can copy a file from the following sources to an IPv6 TFTP server:

- Flash memory.
- Running configuration.
- Startup configuration.

Copying a file from flash memory

For example, to copy the primary or secondary boot image from the device's flash memory to an IPv6 TFTP server, enter a command such as the following.

```
Brocade# copy flash tftp ipv6 2001:db8:e0ff:7837::3 test.img secondary
```

This command copies the secondary boot image named test.img from flash memory to a TFTP server with the IPv6 address of 2001:db8:e0ff:7837::3.

Syntax: `copy flash tftp ipv6 source-file-name primary | secondary`

The *ipv6-address* parameter specifies the address of the TFTP server. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The *source-file-name* parameter specifies the name of the file you want to copy to the IPv6 TFTP server.

The **primary** keyword specifies the primary boot image, while the **secondary** keyword specifies the secondary boot image.

Copying a file from the running or startup configuration

For example, to copy the running configuration to an IPv6 TFTP server, enter a command such as the following.

```
Brocade# copy running-config tftp ipv6 2001:db8:e0ff:7837::3 newrun.cfg
```

This command copies the running configuration to a TFTP server with the IPv6 address of 2001:db8:e0ff:7837::3 and names the file on the TFTP server newrun.cfg.

Syntax: `copy running-config | startup-config tftp ipv6 destination-file-name`

Specify the **running-config** keyword to copy the running configuration file to the specified IPv6 TFTP server.

Specify the **startup-config** keyword to copy the startup configuration file to the specified IPv6 TFTP server.

The *tftp ipv6-address* parameter specifies the address of the TFTP server. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The *destination-file-name* parameter specifies the name of the file that is copied to the IPv6 TFTP server.

Copying a file from an IPv6 TFTP server

You can copy a file from an IPv6 TFTP server to the following destinations:

- Flash memory.
- Running configuration.
- Startup configuration.

Copying a file to flash memory

For example, to copy a boot image from an IPv6 TFTP server to the primary or secondary storage location in the device's flash memory, enter a command such as the following.

```
Brocade# copy tftp flash ipv6 2001:db8:e0ff:7837::3 test.img secondary
```

This command copies an application image named test.img from an IPv6 TFTP server with the IPv6 address of 2001:db8:e0ff:7837::3 to the secondary storage location in the device's flash memory.

Syntax: `copy tftp flash ipv6 source-file-name primary | secondary`

The *ipv6-address* parameter specifies the address of the TFTP server. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The *source-file-name* parameter specifies the name of the file you want to copy from the IPv6 TFTP server.

The **primary** keyword specifies the primary storage location in the device's flash memory, while the **secondary** keyword specifies the secondary storage location in the device's flash memory.

Copying a file to the running or startup configuration

For example, to copy a configuration file from an IPv6 TFTP server to the router's running or startup configuration, enter a command such as the following.

```
Brocade# copy tftp running-config ipv6 2001:db8:e0ff:7837::3 newrun.cfg overwrite
```

This command copies the newrun.cfg file from the IPv6 TFTP server and overwrites the router's running configuration file with the contents of newrun.cfg.

NOTE

To activate this configuration, you must reload (reset) the device.

Syntax: `copy tftp running-config | startup-config ipv6 source-file-name [overwrite]`

Specify the **running-config** keyword to copy the running configuration from the specified IPv6 TFTP server.

Specify the **startup-config** keyword to copy the startup configuration from the specified IPv6 TFTP server.

The *ipv6-address* parameter specifies the address of the TFTP server. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The *source-file-name* parameter specifies the name of the file that is copied from the IPv6 TFTP server.

The **overwrite** keyword specifies that the device should overwrite the current configuration file with the copied file. If you do not specify this parameter, the device copies the file into the current running or startup configuration but does not overwrite the current configuration.

NOTE

You cannot use the overwrite option from non-console sessions, because it will disconnect the session.

When a configuration file is loaded using the `copy tftp running-config` command, the following commands within the configuration file are supported.

- isis metric command - refer to [“Configuring IPv6 IS-IS” on page 712](#).
- set-overload-bit command - refer to [“Setting the overload bit” on page 256](#).
- admin-group - refer to the *Multi-Service IronWare Multiprotocol Label Switch (MPLS) Configuration Guide*.
- cspf-group - refer to the *Multi-Service IronWare Multiprotocol Label Switch (MPLS) Configuration Guide*.
- bypass-lsp - refer to the *Multi-Service IronWare Multiprotocol Label Switch (MPLS) Configuration Guide*.

Using the IPv6 ncopy command

The **ncopy** command for IPv6 allows you to do the following:

- Copy a primary or secondary boot image from flash memory to an IPv6 TFTP server.
- Copy the running configuration to an IPv6 TFTP server.
- Copy the startup configuration to an IPv6 TFTP server
- Upload various files from an IPv6 TFTP server.

Copying a primary or secondary boot image from flash memory to an IPv6 TFTP server

For example, to copy the primary or secondary boot image from the device's flash memory to an IPv6 TFTP server, enter a command such as the following.

```
Brocade# ncopy flash primary tftp ipv6 2001:db8:e0ff:7837::3 primary.img
```

This command copies the primary boot image named `primary.img` from flash memory to a TFTP server with the IPv6 address of `2001:db8:e0ff:7837::3`.

Syntax: `ncopy flash primary | secondary tftp ipv6 source-file-name`

The **primary** keyword specifies the primary boot image, while the **secondary** keyword specifies the secondary boot image.

The **tftp ipv6-address** parameter specifies the address of the TFTP server. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The **source-file-name** parameter specifies the name of the file you want to copy from flash memory.

Copying the running or startup configuration to an IPv6 TFTP server

For example, to copy a device's running or startup configuration to an IPv6 TFTP server, enter a command such as the following.

```
Brocade# ncopy running-config tftp ipv6 2001:db8:e0ff:7837::3 bakrun.cfg
```

This command copies a device's running configuration to a TFTP server with the IPv6 address of 2001:db8:e0ff:7837::3 and names the destination file bakrun.cfg.

Syntax: `ncopy running-config | startup-config tftp ipv6 destination-file-name`

Specify the **running-config** keyword to copy the device's running configuration or the **startup-config** keyword to copy the device's startup configuration.

The **tftp ipv6-address** parameter specifies the address of the TFTP server. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The *destination-file-name* parameter specifies the name of the running configuration that is copied to the IPv6 TFTP server.

Uploading files from an IPv6 TFTP server

You can upload the following files from an IPv6 TFTP server:

- Primary boot image.
- Secondary boot image.
- Running configuration.
- Startup configuration.

Uploading a primary or secondary boot image from an IPv6 TFTP server

For example, to upload a primary or secondary boot image from an IPv6 TFTP server to a device's flash memory, enter a command such as the following.

```
Brocade# ncopy tftp ipv6 2001:db8:e0ff:7837::3 primary.img flash primary
```

This command uploads the primary boot image named primary.img from a TFTP server with the IPv6 address of 2001:db8:e0ff:7837::3 to the device's primary storage location in flash memory.

Syntax: `ncopy tftp ipv6 source-file-name flash primary | secondary`

The **tftp ipv6-address** parameter specifies the address of the TFTP server. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The *source-file-name* parameter specifies the name of the file you want to copy from the TFTP server.

The **primary** keyword specifies the primary location in flash memory, while the **secondary** keyword specifies the secondary location in flash memory.

Uploading a running or startup configuration from an IPv6 TFTP server

For example to upload a running or startup configuration from an IPv6 TFTP server to a device, enter a command such as the following.

```
Brocade# ncopy tftp ipv6 2001:db8:e0ff:7837::3 newrun.cfg running-config
```

This command uploads a file named newrun.cfg from a TFTP server with the IPv6 address of 2001:db8:e0ff:7837::3 to the device.

Syntax: `ncopy tftp ipv6 source-file-name running-config | startup-config`

The `tftp ipv6-address` parameter specifies the address of the TFTP server. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The `source-file-name` parameter specifies the name of the file you want to copy from the TFTP server.

Specify the **running-config** keyword to upload the specified file from the IPv6 TFTP server to the device. The device copies the specified file into the current running configuration but does not overwrite the current configuration.

Specify the **startup-config** keyword to upload the specified file from the IPv6 TFTP server to the device. The device copies the specified file into the current startup configuration but does not overwrite the current configuration.

Using the IPv6 ping command

The **ping** command allows you to verify the connectivity from a device to an IPv6 device by performing an ICMP for IPv6 echo test.

For example, to ping a device with the IPv6 address of 2001:db8:847f:a385:34dd::45 from the device, enter the following command.

```
Brocade# ping ipv6 2001:db8:847f:a385:34dd::45
```

Syntax: `ping ipv6 ipv6-address [outgoing-interface [port | ve number]] [source ipv6-address] [count number] [timeout milliseconds] [ttl number] [size bytes] [quiet] [numeric] [no-fragment] [verify] [data 1-to-4 byte hex] [brief]`

The `ipv6-address` parameter specifies the address of the router. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The **outgoing-interface** keyword specifies a physical interface over which you can verify connectivity. If you specify a physical interface, such as an Ethernet interface, you must also specify the port number of the interface. If you specify a virtual interface, such as a VE, you must specify the number associated with the VE.

The **source** `ipv6-address` parameter specifies an IPv6 address to be used as the origin of the ping packets.

The **count** `number` parameter specifies how many ping packets the router sends. You can specify from 1 - 4294967296. The default is 1.

The **timeout** `milliseconds` parameter specifies how many milliseconds the router waits for a reply from the pinged device. You can specify a timeout from 1 - 4294967296 milliseconds. The default is 5000 (5 seconds).

The **tll** *number* parameter specifies the maximum number of hops. You can specify a TTL from 1 - 255. The default is 64.

The **size** *bytes* parameter specifies the size of the ICMP data portion of the packet. This is the payload and does not include the header. You can specify from 0 - 4000. The default is 16.

The **no-fragment** keyword turns on the “don't fragment” bit in the IPv6 header of the ping packet. This option is disabled by default.

The **quiet** keyword hides informational messages such as a summary of the ping parameters sent to the device and instead only displays messages indicating the success or failure of the ping. This option is disabled by default.

The **verify** keyword verifies that the data in the echo packet (the reply packet) is the same as the data in the echo request (the ping). By default the device does not verify the data.

The **data** *1 - 4 byte hex* parameter lets you specify a specific data pattern for the payload instead of the default data pattern, “abcd”, in the packet's data payload. The pattern repeats itself throughout the ICMP message (payload) portion of the packet.

NOTE

For parameters that require a numeric value, the CLI does not check that the value you enter is within the allowed range. Instead, if you do exceed the range for a numeric value, the software rounds the value to the nearest valid value.

The **brief** keyword causes ping test characters to be displayed. The following ping test characters are supported:

! Indicates that a reply was received.

. Indicates that the network server timed out while waiting for a reply.

U Indicates that a destination unreachable error PDU was received.

I Indicates that the user interrupted ping.

Using the IPv6 traceroute command

The **traceroute** command allows you to trace a path from the device to an IPv6 host.

The CLI displays trace route information for each hop as soon as the information is received. Traceroute requests display all responses to a minimum TTL of 1 second and a maximum TTL of 30 seconds. In addition, if there are multiple equal-cost routes to the destination, the device displays up to three responses.

For example, to trace the path from the device to a host with an IPv6 address of 2001:db8:349e:a384::34, enter the following command.

```
Brocade# traceroute ipv6 2001:db8:349e:a384::34
```

Syntax: `traceroute ipv6 ipv6-address`

The *ipv6-address* parameter specifies the address of a host. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

Using Telnet

This section explains how to do the following:

- Use the **telnet** command to establish a Telnet session from the device to a remote IPv6 host.
- Establish a Telnet session from a remote IPv6 host to the device.

Using the IPv6 Telnet command

The **telnet** command allows a Telnet connection from a device to a remote IPv6 host using the console. Up to five read-access and one write-access inbound Telnet session are supported on the router at one time. Up to five simultaneous outbound Telnet sessions can also be supported from the console session, from inbound Telnet sessions, from inbound SSH sessions or from a Web session.

To see the Telnet sessions currently open on the device, enter the **show telnet** command; to see both the open Telnet and open SSH sessions, enter the **show who** command as shown below.

```
Brocade# show who
Console connections:
    established
    3 days 17 hours 31 minutes 27 seconds in idle
Telnet server status: Enabled
Telnet connections (inbound):
  1    established, client ip address 10.53.1.86
      you are connecting to this session
      1 seconds in idle
  2    established, client ip address 10.53.1.86
      7 seconds in idle
  3    closed
  4    closed
  5    closed
Telnet connections (outbound):
  6    established, server ip address 10.47.2.200, from Telnet session 1
      4 seconds in idle
  7    closed
  8    closed
  9    closed
 10    closed
SSH server status: Enabled
SSH connections:
  1    closed
  2    closed
  3    closed
  4    closed
...
```

Syntax: show who

To establish a Telnet connection to a remote host, use the **telnet** command. The following example will establish an outbound Telnet connection to a remote host with the IPv6 address of 2001:db8:3de2:c37::6.

```
Brocade# telnet 2001:db8:3de2:c37::6
```

Syntax: **telnet** *ipv6-address* [*port-number* | **outgoing-interface ethernet port** | *ve number*]

The *ipv6-address* parameter specifies the address of a remote host. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The *port-number* parameter specifies the port number on which the device establishes the Telnet connection. You can specify a value between 1 - 65535. If you do not specify a port number, the device establishes the Telnet connection on port 23.

If the IPv6 address you specify for the **telnet** *ipv6-address* command is a link-local address, you must specify the **outgoing-interface** ethernet *port | ve number* parameter. This parameter specifies the interface that must be used to reach the remote host. If you specify an Ethernet interface, also specify the port number associated with the interface. If you specify a VE interface, also specify the VE number.

Establishing a Telnet session from an IPv6 host

To establish a Telnet session from an IPv6 host to the device, open your Telnet application and specify the IPv6 address of the router.

Using Secure Shell

Secure Shell (SSH) is a mechanism that allows secure remote access to management functions on the device. SSH provides a function similar to Telnet. You can log into and configure the device using a publicly or commercially available SSH client program, just as you can with Telnet. However, unlike Telnet, which provides no security, SSH provides a secure, encrypted connection to the device.

To open an SSH session from an IPv6 host running an SSH client program to the device, open your SSH client program and specify the IPv6 address of the router.

Using Secure Shell

Static IPv6 Routes

Table 97 displays the individual Brocade devices and the IPv6 Routes features they support.

TABLE 97 Supported Brocade IPv6 routes features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
Static IPv6 Route	Yes	Yes	No	Yes	Yes	Yes	Yes
IPv6 Static Multicast Route	Yes	Yes	No	Yes	Yes	Yes	Yes
BFD for Static Routes	Yes	Yes	Yes	Yes	Yes	Yes	Yes

This chapter describes how to configure a static IPv6 route. A **static IPv6 route** is a manually configured route, which creates a path between two IPv6 devices. A static IPv6 route is similar to a static IPv4 route. Static IPv6 routes have their advantages and disadvantages; for example, a static IPv6 route does not generate updates, which reduces processing time for an IPv6 router. Conversely, if a static IPv6 route fails or if you want to change your network topology, you might need to manually reconfigure the static IPv6 route.

Configuring a static IPv6 route

You can configure a static IPv6 route to be redistributed into a routing protocol, but you cannot redistribute routes learned by a routing protocol into the static IPv6 routing table.

Before configuring a static IPv6 route, you must enable the forwarding of IPv6 traffic on the Brocade device using the **ipv6 unicast-routing** command and enable IPv6 on at least one interface by configuring an IPv6 address or explicitly enabling IPv6 on that interface.

To configure a static IPv6 route for a destination network with the prefix 2001:db8::0/32, a next-hop gateway with the global address 2001:db8:0:ee44::1, and an administrative distance of 110, enter the following command.

```
Brocade(config)# ipv6 route 2001:db8::0/32 2001:db8:0:ee44::1 distance 110
```

Syntax: **[no] ipv6 route** *dest-ipv6-prefix/prefix-length next-hop-ipv6-address [metric] [distance number]*

To configure a static IPv6 route for a destination network with the prefix 2001:db8::0/32 and a next-hop gateway with the link-local address fe80::1 that the Brocade device can access through Ethernet interface 3/1, enter the following command.

Configuring a static IPv6 route

```
Brocade(config)# ipv6 route 2001:db8::0/32 ethernet 1 fe80::1
```

Syntax: [no] ipv6 route *dest-ipv6-prefix/prefix-length* [ethernet slot/port | ve num | null0]
next-hop-ipv6-address [metric] [tag num] [distance number]

To configure a static IPv6 route for a destination network with the prefix 2001:db8::0/32 and a next-hop gateway that the Brocade device can access through tunnel 1, enter the following command.

```
Brocade(config)# ipv6 route 2001:db8::0/32 tunnel 1
```

Syntax: [no] ipv6 route *dest-ipv6-prefix/prefix-length interface port* [metric] [distance number]

Table 98 describes the parameters associated with this command and indicates the status of each parameter.

TABLE 98 Static IPv6 route parameters

Parameter	Configuration details	Status
The IPv6 prefix and prefix length of the route's destination network.	You must specify the <i>dest-ipv6-prefix</i> parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the <i>prefix-length</i> parameter as a decimal value. A slash mark (/) must follow the <i>ipv6-prefix</i> parameter and precede the <i>prefix-length</i> parameter.	Mandatory for all static IPv6 routes.
The route's next-hop gateway, which can be one of the following: <ul style="list-style-type: none"> The IPv6 address of a next-hop gateway. A tunnel interface. 	You can specify the next-hop gateway as one of the following types of IPv6 addresses: <ul style="list-style-type: none"> A global address. A link-local address. If you specify a global address, you do not need to specify any additional parameters for the next-hop gateway. If you specify a link-local address, you must also specify the interface through which to access the address. You can specify one of the following interfaces: <ul style="list-style-type: none"> An Ethernet interface. A tunnel interface. A virtual interface (VE). If you specify an Ethernet interface, also specify the port number associated with the interface. If you specify a VE or tunnel interface, also specify the VE or tunnel number. You can also specify the next-hop gateway as a tunnel interface. If you specify a tunnel interface, also specify the tunnel number.	Mandatory for all static IPv6 routes.
The route's metric.	You can specify a value from 1 – 16.	Optional for all static IPv6 routes. (The default metric is 1.)

TABLE 98 Static IPv6 route parameters (Continued)

Parameter	Configuration details	Status
Tag number	This parameter specifies the tag value of the route.	The possible values are 0 - 4294967295. The default is 0.
The route's administrative distance.	You must specify the distance keyword and any numerical value.	Optional for all static IPv6 routes. (The default administrative distance is 1.)

A metric is a value that the Brocade device uses when comparing this route to other static routes in the IPv6 static route table that have the same destination. The metric applies only to routes that the device has already placed in the IPv6 static route table.

The administrative distance is a value that the Brocade device uses to compare this route with routes from other route sources that have the same destination. (The device performs this comparison before placing a route in the IPv6 route table.) This parameter does not apply to routes that are already in the IPv6 route table. In general, a low administrative distance indicates a preferred route. By default, static routes take precedence over routes learned by routing protocols. If you want a dynamic route to be chosen over a static route, you can configure the static route with a higher administrative distance than the dynamic route.

Configuring a IPv6 static multicast route

IPv6 multicast routes allow you to control the network path used by multicast traffic. Static multicast routes are especially useful when the unicast and multicast topologies of a network are different. You can avoid the need to make the topologies similar by instead configuring static multicast routes.

NOTE

This feature is not supported for DVMRP.

You can configure more than one static IPv6 multicast route. The Brocade device by default uses the most specific route that matches a multicast source address. You can also specify route preference using the **route-preference** command as described in the *Configuring IP Multicast Protocols* chapter in the *Multi-Service IronWare IP Multicast Configuration Guide*. Thus, if you want to configure a multicast static route for a specific multicast source and also configure another multicast static route for all other sources, you can configure two static routes.

To configure a IPv6 mroute for a destination network with the prefix 2001:db8::0/32, a next-hop gateway with the global address 2001:db8:0:ee44::1, and an administrative distance of 110, enter the following command.

```
Brocade(config)# ipv6 mroute 2001:db8::0/32 2001:db8:0:ee44::1 distance 110
```

Syntax: [no] ipv6 mroute dest-ipv6-prefix/prefix-length next-hop-ipv6-address
next-hop-enable-default next-hop-recursion [metric] [distance number] [tag number]

Syntax: [no] ipv6 mroute ipv6-addr interface ethernet slot/portnum | ve num | tunnel num
[distance num] [tag number]

The *ipv6-addr* command specifies the next-hop IP address.

NOTE

In IPv6 multicasting, a route is handled in terms of its source, rather than its destination.

You can use the **ethernet slot/portnum** parameter to specify a physical port or the **ve num** parameter to specify a virtual interface.

NOTE

The **ethernet slot/portnum** parameter does not apply to PIM SM.

The **next-hop-enable-default** parameter sets the default route to resolve the static route nexthop.

The **next-hop-recursion** parameter sets the static route to resolve the static route nexthop.

The **distance num** parameter sets the administrative distance for the route. When comparing multiple paths for a route, the Brocade device prefers the path with the lower administrative distance.

NOTE

Regardless of the administrative distances, the Brocade device always prefers directly connected routes over other routes.

BFD for Static Routes

BFD enables prompt detection of faults in the bidirectional path between two BFD peers. BFD for Static Routes allows you to detect failures that impact the forwarding path of a static route. This feature supports both single hop and multi-hop BFD Static Routes for both IPv4 and IPv6.

Static routes and BFD neighbors are configured separately. A static route is automatically associated with a static BFD neighbor if the static route's next-hop exactly matches the neighbor address of the static BFD neighbor and the BFD monitoring is enabled for the static route.

When a static BFD neighbor is configured, BFD asks the routing table manager (RTM) if there is a route to the neighbor. If a route exists, and if the route is directly connected, then BFD initiates a single hop session. If the route is not directly connected, BFD establishes a multi-hop session. Once the session comes up, BFD adds the corresponding static routes to RTM. If no route exists, then BFD will not add the corresponding static routes to RTM.

When the BFD session goes down because the BFD neighbor is no longer reachable, static routes monitored by BFD are removed from the RTM. The removed routes can be added back if the BFD neighbor becomes reachable again. Single-hop BFD sessions use the BFD timeout values configured on the outgoing interface. Timeout values of multi-hop BFD sessions are specified along with each BFD neighbor. Multiple static routes going to the same BFD neighbor use the same BFD session and timeout values.

Configuration considerations

- In a multi-hop session, the protocol must be stated in the command `IProute next-hop protocol`.
- BFD multi-hop is supported for a nexthop resolved through OSPF, BGP, ISIS, RIP, and MPLS.
- BFD multi-hop is not supported for a nexthop resolved through Default Route.
- BFD for static routes is not supported for static routes with an LSP name as nexthop.
- Upon reboot, the router will first bring up the static BFD sessions, and then install the static routes in the routing table manager (RTM). There may be a delay of 90 seconds before the BFD sessions become available.
- BFD is not supported in MCT.

- BFD for static routes will not support interface-based static routes for both IPv4 and IPv6.

Configuring BFD for static routes

The following example assumes the configured interface Ethernet 1/1 is as follows:

```
interface ethernet 1/1
    bfd interval 100 min-rx 100 multiplier 5
    ip address 10.0.0.1/24
```

Single hop configuration

To configure BFD for static routes, configure BFD neighbors using the following commands. BFD neighbors can be configured in unassociated mode using this command.

The following example uses interface ethernet 1/1 as the outgoing interface and uses the BFD intervals on ethernet 1/1. The next hop address 10.0.0.5 is the BFD neighbor and the configured address 10.0.0.1 on Ethernet 1/1 is the local address.

```
Brocade(config)#ip route static-bfd 10.0.0.5 10.0.0.1
```

Syntax to configure BFD Static neighbor for IPv4:

Syntax: [no] ip route [vrf vrf-name] static-bfd neighbor-ip-address local-ip-address interval tx-rate min-rx rx-rate multiplier value

Syntax to configure BFD Static neighbor for IPv6:

Syntax: [no] ipv6 route [vrf vrf-name] static-bfd neighbor-ipv6-address local-ipv6-address interval tx-rate min-rx rx-rate multiplier value

The **no** version of the command removes the BFD monitoring by removing the BFD static neighbor 10.0.0.5 and eliminating the BFD session, while keeping the static route in the RTM, and retaining the existing traffic to IP route 20.0.0.0. You only need to specify the BFD neighbor address and the local address when removing a BFD neighbor.

To enable BFD for static routes use the following command. The BFD parameter allows you to enable BFD monitoring for the static route.

```
Brocade(config)#ip route 20.0.0.0/24 10.0.0.5 bfd
```

Syntax to enable BFD monitoring for IPv4:

Syntax: [no] ip route Destination IP address Next hop Router IP address> ... bfd

Syntax to enable BFD monitoring for IPv6:

Syntax: [no] ipv6 route Destination IPv6 address Next hop Router IPv6 address ... bfd

The **no** version of the command removes BFD monitoring from the static route.

Multi-hop configuration

The following example shows a multi-hop configuration using the commands explained in the single hop section.

```
Brocade(config)#ip route static-bfd 30.0.0.5 10.0.0.1 interval 90 min-rx 90
multiplier 3
```

```
Brocade(config)#ip route 20.0.0.0/24 30.0.0.5 bfd
```

The **multi-hop BFD** session to the next hop (BFD neighbor) 30.0.0.5 uses the TX and RX intervals of 90ms.

When configuring **multi-hop static route** and **multi-hop bfd neighbor**, the protocol by which the nexthop is to be resolved must be stated using the IP route next-hop command.

Show commands

The `show ip static route` and `show ipv6 static route` command output indicates that BFD monitoring is enabled by the **b** next to the static route.

```
Brocade# show ip static route
IP Static Routing Table - 3 entries:
STATIC Codes - b:BFD monitoring
  IP Prefix          Next Hop          Interface  Dis/Metric/Tag  Name
*  0.0.0.0/0         10.37.73.129     -          1/1/0
  0.0.0.0/0         10.37.73.1       -          1/1/0
b 100.0.0.0/8       10.0.0.2         -          1/1/0
b 150.0.0.0/8       20.0.0.3         -          1/1/0
Brocade#
```

```
Brocade# show ipv6 static route
IPv6 Static Routing Table - 2 entries:
STATIC Codes - b:BFD monitoring
  IPv6 Prefix        Interface  Next Hop Router  Met/Dis/Tag  Name
b 100::/64          eth 1/5   10::2           1/1/0
b 150::/64          eth 1/5   20::3           1/1/0
Brocade#
```

The `show bfd applications` output indicates that BFD monitoring is enabled by the **static** and **static6**.

```
Brocade# show bfd applications
Registered Protocols Count: 4
  Protocol  VRFID    Parameter  HoldoverInterval
static6   0        1           0
static    0        1           0
  bgp       1        0           0
  ospf     0        0           0
Brocade#
```

The `show bfd neighbors details` output indicates that BFD monitoring is enabled by the **static** and **static6**.

```
Brocade# show bfd neighbors details 20.0.0.3
NeighborAddress      State  Interface  Holddown  Interval  R/H
20.0.0.3             UP    eth 1/5    300000    100000    Y/M
Registered Protocols(Protocol/VRFID): static/0
Local: Disc: 3, Diag: 0, Demand: 0 Poll: 0
  MinTxInterval: 100000, MinRxInterval: 100000, Multiplier: 3
Remote: Disc: 5, Diag: 0, Demand: 0 Poll: 0
  MinTxInterval: 100000, MinRxInterval: 100000, Multiplier: 3
Stats: RX: 89596 TX: 87853 SessionUpCount: 1 at SysUpTime: 0:5:10:53.575
Session Uptime: 0:1:0:16.300, LastSessionDownTimestamp: 0:0:0:0.0
Tx Port: eth 1/1(eth 1/1),Rx Port: eth 1/1(eth 1/1)
Using PBIF Assist: Y
Brocade#
```

BGP4+ (IPv6)

Table 99 displays the individual Brocade devices and the BGP+ features they support.

TABLE 99 Supported BGP4+ features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
BGP4+	Yes	Yes	No	No	Yes	Yes	Yes
Configuring BGP4+ Neighbors Using Global or Unique Local IPv6 Addresses	Yes	Yes	No	No	Yes	Yes	Yes
Importing Routes into BGP4+	Yes	Yes	No	No	Yes	Yes	Yes
Advertising the Default BGP4+ Route	Yes	Yes	No	No	Yes	Yes	Yes
Clearing BGP4+ Information	Yes	Yes	No	No	Yes	Yes	Yes
Displaying BGP4+ Information	Yes	Yes	No	No	Yes	Yes	Yes
Using the IP default route as a valid next-hop for a BGP4+ route	Yes	Yes	No	No	Yes	Yes	Yes
Enabling next-hop recursion	Yes	Yes	No	No	Yes	Yes	Yes
BGP4+ Graceful Restart	Yes	Yes	Yes	Yes	Yes	Yes	Yes

TABLE 99 Supported BGP4+ features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
BGP VPNv6 Support	Yes	Yes	No	Yes	Yes	No	Yes
BGP VRF6 Support	Yes	Yes	Yes	Yes	Yes	Yes	Yes

The implementation of IPv6 supports multi protocol BGP (MBGP) extensions, which allow IPv6 BGP (known as **BGP4+**) to distribute routing information for protocols such as IPv4 BGP. The supported protocols are identified by address families. (For information about address families, refer to “[Address family configuration level](#)” on page 514.) The extensions allow a set of BGP4+ peers to exchange routing information for multiple address families and sub-address families.

IPv6 MBGP functions similarly to IPv4 MBGP except for the following enhancements:

- An IPv6 unicast address family and network layer reachability information (NLRI).
- Next hop attributes that use IPv6 addresses.

NOTE

The implementation of BGP4+ supports the advertising of routes among different address families. However, it supports BGP4+ unicast routes only; it does not currently support BGP4+ multicast routes.

Address family configuration level

The implementation of BGP4+ includes a new configuration level: address family. For IPv6, Brocade devices currently support the BGP4+ multicast and unicast address family configuration levels. The device enters the BGP4+ unicast address family configuration level when you enter the following command while at the global BGP configuration level:

```
Brocade(config-bgp)# address-family ipv6 unicast
Brocade(config-bgp-ipv6u)#
```

The **(config-bgp-ipv6u)#** prompt indicates that you are at the BGP4+ unicast address family configuration level.

While at the BGP4+ unicast address family configuration level, you can access several commands that allow you to configure BGP4+ unicast routes. The commands that you enter at this level apply only to IPv6 unicast address family only. You can generate a configuration for BGP4+ unicast routes that is separate and distinct from configurations for IPv4 unicast routes and IPv4 BGP multicast routes.

NOTE

The commands that you can access while at the IPv6 unicast address family configuration level are also available at the IPv4 unicast and multicast address family configuration levels. Where relevant, this section discusses and provides IPv6-unicast-specific examples. You must first configure IPv6 unicast-routing in order for any IPv6 routing protocol to be active.

NOTE

Each address family configuration level allows you to access commands that apply to that particular address family only. To enable a feature in a particular address family, you must specify any associated commands for that feature in that particular address family. You cannot expect the feature, which you may have configured in the BGP4 unicast address family, to work in the BGP4+ unicast address family unless it is explicitly configured in the BGP4+ unicast address family.

To exit from the IPv6 unicast address family configuration level, enter the following command:

```
Brocade(config-bgp-ipv6u)# exit-address-family
Brocade(config-bgp)#
```

Entering this command returns you to the global BGP configuration level.

Configuring BGP4+

Before enabling BGP4+ on a device, you must enable the forwarding of IPv6 traffic on the device using the **ipv6 unicast-routing** command and enable IPv6 on at least one interface by configuring an IPv6 address or explicitly enabling IPv6 on that interface.

To configure BGP4+, you must do the following:

- Enable BGP4+.
- Configure BGP4+ neighbors using one of the following methods:
 - Add one neighbor at a time (neighbor uses global or unique local IPv6 address).
 - Add one neighbor at a time (neighbor uses a link-local IPv6 address).
 - Create a peer group and add neighbors individually.

The following configuration tasks are optional:

- Advertise the default route.
- Import specified routes into BGP4+.
- Redistribute prefixes into BGP4+.
- Aggregate routes advertised to BGP4 neighbors.
- Use route maps.

Enabling BGP4+

To enable BGP4+, enter commands such as the following:

```
Brocade(config)# router bgp
BGP: Please configure 'local-as' parameter in order to run BGP4.
Brocade(config-bgp)# local-as 1000
```

These commands enables BGP4+ and configures the autonomous system (1000) in which your device resides.

Syntax: **[no]** router bgp

To disable BGP, enter the **no** form of this command.

Syntax: local-as *number*

Specify the AS number in which the device you are configuring resides.

After enabling BGP4+, you can add neighbors to a BGP4+ device by entering a commands such as the following:

```
Brocade(config-bgp)# address-family ipv6 unicast
Brocade(config-bgp-ipv6u)# neighbor 2001:db8:e0ff:783a::4 remote-as 1001
Brocade(config-bgp-ipv6u)# neighbor 2001:db8:e0ff:783a::5 remote-as 1001
```

These commands add two neighbors with global IPv6 addresses 2001:db8:e0ff:783a::4 and 2001:db8:e0ff:783a::5 in AS 1001.

NOTE

The example above adds IPv6 neighbors at the BGP4+ unicast address family configuration level. These neighbors, by default, are enabled to exchange BGP4+ unicast prefixes. However, if you add IPv6 neighbors while at the global BGP configuration or IPv4 BGP unicast address family configuration level, the neighbors will not exchange BGP4+ unicast prefixes until you explicitly enable them to do so by entering the **neighbor ipv6-address | peer-group-name activate** command at the BGP4+ unicast address family configuration level.

This section provides minimal information about adding BGP4+ neighbors, because its focus is to provide information about configuring BGP4+.

Configuring BGP4+ neighbors using global or unique local IPv6 addresses

To configure BGP4+ neighbors using global or unique local IPv6 addresses, you must add the IPv6 address of a neighbor in a remote AS to the BGP4+ neighbor table of the local device. You must repeat this procedure for each neighbor that you want to add to a local device.

For example, to add the IPv6 address 2001:db8:93e8:cc00::1 of a neighbor in remote AS 4500 to the BGP4+ neighbor table of a device, enter the following commands:

```
Brocade(config-bgp)# address-family ipv6 unicast
Brocade(config-bgp-ipv6u)# neighbor 2001:db8:93e8:cc00::1 remote-as 4500
```

Syntax: **neighbor ipv6-address remote-as as-number**

NOTE

The example above adds an IPv6 neighbor at the BGP4+ unicast address family configuration level. This neighbor, by default, is enabled to exchange BGP4+ unicast prefixes. However, if you add an IPv6 neighbor while at the global BGP configuration or IPv4 BGP unicast address family configuration level, the neighbor will not exchange BGP4+ unicast prefixes until you explicitly enable it to do so by entering the **neighbor ipv6-address | peer-group-name activate** command at the BGP4+ unicast address family configuration level.

The *ipv6-address* parameter specifies the IPv6 address of the neighbor. You must specify the *ipv6-address* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The *as-number* parameter indicates the number of the AS in which the neighbor resides.

To delete the neighbor from the BGP4+ neighbor table, enter the **no** form of this command.

Adding BGP4+ neighbors using link-local addresses

To configure BGP4+ neighbors that use link-local addresses, you must do the following:

- Add the IPv6 address of a neighbor in a remote AS to the BGP4+ neighbor table of the local device.
- Identify the neighbor interface over which the neighbor and local device will exchange prefixes.
- Configure a route map to set up a global next hop for packets destined for the neighbor.

Adding BGP4+ neighbor

To add the IPv6 link-local address `fe80:4398:ab30:45de::1` of a neighbor in remote AS 1000 to the BGP4+ neighbor table of a device, enter the following commands:

```
Brocade(config-bgp)# address-family ipv6 unicast
Brocade(config-bgp-ipv6u)# neighbor fe80:4398:ab30:45de::1 remote-as 1000
```

Syntax: `neighbor ipv6-address remote-as as-number`

NOTE

The example above adds an IPv6 neighbor at the BGP4+ unicast address family configuration level. This neighbor, by default, is enabled to exchange BGP4+ unicast prefixes. However, if you add an IPv6 neighbor while at the global BGP configuration or IPv4 BGP unicast address family configuration level, the neighbor will not exchange BGP4+ unicast prefixes until you explicitly enable it to do so by entering the `neighbor ipv6-address | peer-group-name activate` command at the BGP4+ unicast address family configuration level.

The `ipv6-address` parameter specifies the IPv6 link-local address of the neighbor. A link-local address has a fixed prefix of `FE80::/10`. You must specify the `ipv6-address` parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The `as-number` parameter indicates the number of the AS in which the neighbor resides.

To delete the neighbor from the BGP4+ neighbor table, enter the `no` form of this command.

Identifying a neighbor interface

To specify Ethernet interface 3/1 as the neighbor interface over which the neighbor and local device will exchange prefixes, enter the following command:

```
Brocade(config-bgp)# neighbor fe80:4398:ab30:45de::1 update-source ethernet 3/1
```

Syntax: `neighbor ipv6-address update-source ipv6-address | ethernet slot | port | loopback number | ve number`

The `ipv6-address` parameter specifies the IPv6 link-local address of the neighbor. A link-local address has a fixed prefix of `FE80::/10`. You must specify the `ipv6-address` parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The `ipv4-address` parameter specifies the IPv4 address of the update source.

The `ethernet | loopback | ve` parameter specifies the neighbor interface over which the neighbor and local device will exchange prefixes. If you specify an Ethernet interface, also specify the port number associated with the interface. If you specify a loopback or VE interface, also specify the loopback or VE number.

Configuring a route map

To configure a route map that filters routes advertised to a neighbor or sets up a global next hop for packets destined for the neighbor with the IPv6 link-local address fe80:4393:ab30:45de::1, enter commands such as the following (start at the BGP4+ unicast address family configuration level):

```
Brocade(config-bgp-ipv6u)# neighbor fe80:4398:ab30:45de::1 route-map out next-hop
Brocade(config-bgp-ipv6u)# exit
Brocade(config)# route-map next-hop permit 10
Brocade(config-route-map)# match ipv6 address prefix-list next-hop-ipv6
Brocade(config-route-map)# set ipv6 next-hop 2001:db8:3764::34
```

This route map applies to the BGP4+ unicast address family under which the **neighbor ipv6-address route-map** command is entered. This route map applies to the outgoing routes on the neighbor with the IPv6 link-local address fe80:4393:ab30:45de::1. If an outgoing route on the neighbor matches the route map, the route is distributed through the next hop router with the global IPv6 address 2001:db8:3764::34.

Syntax: **neighbor ipv6-address route-map** [**in** | **out**] *name*

The *ipv6-address* parameter specifies the IPv6 link-local address of the neighbor. A link-local address has a fixed prefix of FE80::/10. You must specify the *ipv6-address* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The **in** keyword applies the route map to incoming routes. The **out** keyword applies the route map to outgoing routes.

The *name* parameter specifies a route map name.

Syntax: **route-map name deny | permit sequence-number**

The *name* parameter specifies a route map name.

The **deny** keyword denies the distribution of routes that match the route map. The **permit** keyword permits the distribution of routes that match the route map.

The *sequence-number* parameter specifies a sequence number for the route map statement.

Syntax: **match ipv6 address prefix-list name**

The **match ipv6 address prefix-list** command distributes any routes that have a destination IPv6 address permitted by a prefix list.

The *name* parameter specifies an IPv6 prefix list name.

Syntax: **set ipv6 next-hop ipv6-address**

The *ipv6-address* parameter specifies the IPv6 global address of the next-hop router. You must specify the *ipv6-address* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

Configuring a BGP4+ peer group

If a peer group has multiple neighbors with similar attributes, you can configure a peer group, then add neighbors to the group instead of configuring neighbors individually for all parameters as described in [“Configuring BGP4+ neighbors using global or unique local IPv6 addresses”](#) on page 516 and [“Adding BGP4+ neighbors using link-local addresses”](#) on page 517.

NOTE

You can add IPv6 neighbors only to an IPv6 peer group. You cannot add an IPv4 neighbor to an IPv6 peer group and vice versa. IPv6 and IPv6 peer groups must remain separate.

To configure a BGP4+ peer group, you must perform the tasks listed below.

1. Create a peer group.
2. Add a neighbor to the local device.
3. Assign the IPv6 neighbor to the peer group.
4. Activate the IPv6 neighbor and peer group.

Creating a BGP4+ peer group

To create a peer group named “peer_group1,” enter the following commands:

```
Brocade(config-bgp)# address-family ipv6 unicast
Brocade(config-bgp-ipv6u)# neighbor peer_group1 peer-group
```

Syntax: `neighbor peer-group-name peer-group`

Specify a name for the peer group.

To delete the peer group, enter the **no** form of this command.

Adding a neighbor to a local device

To add the IPv6 address 2001:db8:89::23 of a neighbor in remote AS 1001 to the BGP4+ neighbor table of a device, enter the following command:

```
Brocade(config-bgp-ipv6u)# neighbor 2001:db8:89::23 remote-as 1001
```

NOTE

The example above adds an IPv6 neighbor at the BGP4+ unicast address family configuration level. This neighbor, by default, is enabled to exchange BGP4+ unicast prefixes. However, if you add an IPv6 neighbor while at the global BGP configuration or IPv4 BGP unicast address family configuration level, the neighbor will not exchange BGP4+ unicast prefixes until you explicitly enable it to do so by entering the `neighbor ipv6-address | peer-group-name activate` command at the BGP4+ unicast address family configuration level.

Syntax: `neighbor ipv6-address remote-as as-number`

The *ipv6-address* parameter specifies the IPv6 address of the neighbor. You must specify the *ipv6-address* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The *as-number* parameter indicates the number of the AS in which the neighbor resides.

To delete the neighbor from the BGP4+ neighbor table, enter the **no** form of this command.

Assigning IPv6 neighbor to peer group

To assign an already configured neighbor (2001:db8:89::23) to the peer group peer_group1, enter the following command at the BGP4+ unicast address family configuration level:

```
Brocade(config-bgp-ipv6u)# neighbor 2001:db8:89::23 peer-group peer_group1
```

Syntax: `neighbor ipv6-address peer-group peer-group-name`

The *ipv6-address* parameter specifies the IPv6 address of the neighbor. You must specify the *ipv6-address* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The **peer-group** *peer-group-name* parameter indicates the name of the already created peer group.

To delete the mapping of the neighbor IPv6 address to the peer group, enter the **no** form of this command.

Activating the IPv6 neighbor/peer group

By default, a peer group is activated only in “address-family ipv4 unicast” mode. To activate the neighbor/peer group in “address-family ipv6-unicast” mode, use the **activate** command:

```
Brocade(config-bgp-ipv6u)# neighbor 2001:db8:89::23 activate
Brocade(config-bgp-ipv6u)# neighbor peer_group1 activate
```

Syntax: `neighbor ipv6-address | peer-group-name activate`

The *peer-group-name* parameter indicates the name of the already created peer group.

The following peer-group attributes/route policies are inherited by a group member when the peer-group is active in an ipv6 address-family:

- activate (address family)
- prefix-list
- route-map
- distribute-list
- filter-list
- unsuppress-map
- originate-default
- route-reflect-client
- weight
- max-prefix
- send-community
- send-extended-community

To deactivate the neighbor/peer group, enter the **no** form of this command.

Advertising the default BGP4+ route

By default, the BGP4+ device does not originate and advertise a default BGP4+ route. A default route is the IPv6 address :: and the route prefix 0; that is, ::/0.

You can enable the BGP4+ device to advertise the default BGP4+ route by specifying the **default-information-originate** command at the BGP4+ unicast address family configuration level. Before entering this command, the default route `::/0` must be present in the IPv6 route table.

To enable the BGP4+ device to advertise the default route, enter the following command:

```
Brocade(config-bgp-ipv6u)# default-information-originate
```

Syntax: `[no] default-information-originate`

You can also enable the BGP4+ device to send the default route to a particular neighbor by specifying the **neighbor ipv6-address default-originate** command at the BGP4+ unicast address family configuration level. This command does not require the presence of the default route `::/0` in the IPv6 route table.

For example, to enable the BGP4+ device to send the default route to a neighbor with the IPv6 address of `2001:db8:89::23`, enter a command such as the following:

```
Brocade(config-bgp-ipv6u)# neighbor 2001:db8:89::23 default-originate
```

Syntax: `[no] neighbor ipv6-address default-originate [route-map name]`

The *ipv6-address* parameter specifies a neighbor by its IPv6 address. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

Specifying the optional **route-map name** parameter injects the default route conditionally, based on the match conditions in the route map.

Importing routes into BGP4+

By default, the device does not import routes into BGP4+. This section explains how to use the **network** command to enable the importing of specified routes into BGP4+.

NOTE

The routes imported into BGP4+ must first exist in the IPv6 unicast route table.

For example, to import the IPv6 prefix `2001:db8::/32` into the BGP4+ database, enter the following command at the BGP4+ unicast address family configuration level:

```
Brocade(config-bgp-ipv6u)# network 2001:db8::/32
```

Syntax: `network ipv6-prefix/prefix-length [route-map name]`

You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

You can specify the optional **route-map name** parameter if you want to change attributes of a route when importing it into BGP4+.

To disable the importing of a specified route, enter the **no** form of this command without the route-map parameter.

Redistributing prefixes into BGP4+

You can configure the device to redistribute routes from the following sources into BGP4+:

- Static IPv6 routes
- Directly connected IPv6 networks
- OSPFv3
- RIPng
- IS-IS

You can redistribute routes in the following ways:

- By route types, for example, the device redistributes all IPv6 static and RIPng routes.
- By using a route map to filter which routes to redistribute, for example, the device redistributes specified IPv6 static and RIPng routes only.

For example, to configure the redistribution of all RIPng routes into the BGP4+ unicast database, enter the following commands at the BGP4+ address family configuration level:

```
Brocade(config-bgp-ipv6u)# redistribute rip
```

Syntax: `redistribute protocol [level-1 | level-1-2 | level-2] [match external1 | external2 | internal] [metric metric-value] [route-map name]`

The *protocol* parameter can be **connected**, **ospf**, **rip**, **static**, or **ISIS**.

If you specify **ospf** as the protocol, you can optionally specify the redistribution of external 1, external 2, or internal routes. (The default is internal.)

The **metric** *metric-value* parameter specifies the metric used for the redistributed route. If a value is not specified for this option, and no value is specified using the **default-metric** command at the BGP4+ unicast address family configuration level, the metric value for the IPv6 static, RIPng, or IPv6 OSPF route is used. Use a value consistent with the destination protocol.

The *name* parameter specifies a route map name.

Aggregating routes advertised to BGP4 neighbors

By default, a device advertises individual BGP4+ routes for all the networks. The aggregation feature allows you to configure a device to aggregate routes in a range of networks into a single IPv6 prefix. For example, without aggregation, a device will individually advertise routes for networks 2001:db8:0001:0000::/64, 2001:db8:0002:0000::/64, 2001:db8:0003:0000::/64 and so on. You can configure the device to instead send a single, aggregate route for the networks. The aggregate route would be advertised as 2001:db8::/64 to BGP4 neighbors.

To aggregate BGP4+ routes for 2001:db8:0001:0000::/64, 2001:db8:0002:0000::/64 and 2001:db8:0003:0000::/64, enter the following command.

```
Brocade(config-bgp-ipv6u)# aggregate-address 2001:db8::/64 summary-only
```

Syntax: `aggregate-address ipv6-prefix/prefix-length [as-set] [summary-only] [suppress-map map-name] [advertise-map map-name] [attribute-map map-name]`

The *ipv6-prefix/prefix-length* parameter specifies the aggregate value for the networks. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The **as-set** keyword causes the device to aggregate AS-path information for all the routes in the aggregate address into a single AS-path.

The **summary-only** keyword prevents the device from advertising more specific routes contained within the aggregate route.

The **suppress-map** *map-name* parameter prevents the more specific routes contained in the specified route map from being advertised.

The **advertise-map** *map-name* parameter configures the device to advertise the more specific routes in the specified route map.

The **attribute-map** *map-name* parameter configures the device to set attributes for the aggregate routes based on the specified route map.

NOTE

For the **suppress-map**, **advertise-map**, and **attribute-map** parameters, the route map must already be defined.

To remove an aggregate route from a BGP4 neighbor advertisement, use the **no** form of this command without any parameters.

Using route maps

You can use a route map to filter and change values in BGP4+ routes. Currently, you can apply a route map to IPv6 unicast routes that are independent of IPv4 routes.

To configure a route map to match on IPv6 unicast routes, enter commands such as the following.

```
Brocade(config)# router bgp
Brocade(config-bgp)# address-family ipv6 unicast
Brocade(config-bgp-ipv6u)# neighbor 2001:db8:df78::67 remote-as 1001
Brocade(config-bgp-ipv6u)# neighbor 2001:db8:df78::67 route-map in map1
Brocade(config-bgp-ipv6u)# exit
Brocade(config)# ipv6 prefix-list ipv6_uni seq 10 permit 2001:db8::/32
Brocade(config)# route-map map1 permit 10
Brocade(config-routemap-map1)# match ipv6 address prefix-list ipv6_uni
```

This example configures a route map named “map1” that permits incoming IPv6 unicast routes that match the prefix list named “ipv6_uni” (2001:db8::/32). Note that you apply the route map while at the BGP4+ unicast address family configuration level.

Enabling next-hop recursion

For each BGP4+ route learned, the device performs a route lookup to obtain the IP address of the next-hop for the route. A BGP4+ route is eligible for addition in the IP route table only if the following conditions are true:

- The lookup succeeds in obtaining a valid next-hop IP address for the route.

- The path to the next-hop IP address is an IGP path or a static route path.

By default, the software performs only one lookup for the next-hop IP address for the BGP4+ route. If the next-hop lookup does not result in a valid next-hop IP address, or the path to the next-hop IP address is a BGP4+ path, the software considers the BGP4+ route destination to be unreachable. The route is not eligible to be added to the IP route table.

The BGP4+ route table can contain a route with a next-hop IP address that is not reachable through an IGP route, even though the device can reach a hop farther away through an IGP route. This can occur when the IGPs do not learn a complete set of IGP routes, so the device learns about an internal route through IBGP instead of through an IGP. In this case, the IP route table will not contain a route that can be used to reach the BGP4+ route destination.

To enable the device to find the IGP route to the next-hop gateway for a BGP4+ route, enable recursive next-hop lookups. With this feature enabled, if the first lookup for a BGP4+ route results in an IBGP path that originated within the same AS, rather than an IGP path or static route path, the device performs a lookup on the next-hop IP address for the next-hop gateway. If this second lookup results in an IGP path, the software considers the BGP4+ route to be valid and adds it to the IP route table. Otherwise, the device performs another lookup on the next-hop IP address of the next-hop for the next-hop gateway, and so on, until one of the lookups results in an IGP route.

You must configure a static route or use an IGP to learn the route to the EBGP multihop peer.

Enabling recursive next-hop lookups

The recursive next-hop lookups feature is disabled by default.

To enable recursive next-hop lookups, enter the following command at the BGP4+ address family configuration level of the CLI.

```
Brocade(config-bgp-ipv6u)# next-hop-recursion
```

Syntax: [no] next-hop-recursion

Example when recursive route lookups are disabled

The output here shows the results of an unsuccessful next-hop lookup for a BGP4+ route. In this case, next-hop recursive lookups are disabled. This example is for the BGP4+ route to network 10.240.0.0/24.

In this example, the device cannot reach 10.240.0.0/24, because the next-hop IP address for the route is an IBGP route instead of an IGP route, and is considered unreachable by the device. The IP route table entry for the next-hop gateway for the BGP4+ route's next-hop gateway (10.102.0.1/24) is shown here.

Since the route to the next-hop gateway is a BGP4+ route, and not an IGP route, it cannot be used to reach 10.240.0.0/24. In this case, the device tries to use the default route, if present, to reach the subnet that contains the BGP4+ route next-hop gateway.

Example when recursive route lookups are enabled

When recursive next-hop lookups are enabled, the device continues to look up the next-hop gateways along the route until the device finds an IGP route to the BGP4+ route destination.

The first lookup results in an IBGP route, to network 10.102.0.0/24.

Since the route to 10.102.0.1/24 is not an IGP route, the device cannot reach the next hop through IP, and so cannot use the BGP4+ route. In this case, since recursive next-hop lookups are enabled, the device next performs a lookup for the next-hop gateway to 10.102.0.0.1's next-hop gateway, 10.0.0.1.

The next-hop IP address for 10.102.0.1 is not an IGP route, which means the BGP4+ route destination still cannot be reached through IP. The recursive next-hop lookup feature performs a lookup on the next-hop gateway for 10.0.0.1

.This lookup results in an IGP route that is a directly-connected route. As a result, the BGP4+ route destination is now reachable through IGP, which means the BGP4+ route can be added to the IP route table. The IP route table with the BGP4+ route is shown here.

The device can use this route because it has an IP route to the next-hop gateway. Without recursive next-hop lookups, this route would not be in the IP route table.

Syntax:] next-hop-enable-default

Clearing BGP4+ information

This section contains information about clearing the following for BGP4+:

- Route flap dampening.
- Route flap dampening statistics.
- Neighbor information.
- BGP4+ routes in the IPv6 route table.
- Neighbor traffic counters.

NOTE

The **clear** commands implemented for BGP4+ correspond to the **clear** commands implemented for IPv4 BGP. For example, you can specify the **clear ipv6 bgp flap-statistics** command for IPv6 and the **clear ip bgp flap-statistics** for IPv4.

Removing route flap dampening

You can un-suppress routes by removing route flap dampening from the routes. The device allows you to un-suppress all routes at once or un-suppress individual routes.

To un-suppress all the suppressed routes, enter the following command at the Privileged EXEC level or any of the Config levels of the CLI.

```
Brocade# clear ipv6 bgp dampening
```

Syntax: **clear ipv6 bgp dampening** [*ipv6-prefix/prefix-length*]

You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

To un-suppress a specific route, enter a command such as the following.

Clearing BGP4+ information

```
Brocade# clear ipv6 bgp dampening 2001:db8::/32
```

This command un-suppresses only the routes for network 2001:db8::/32.

Clearing route flap dampening statistics

The device allows you to clear all route flap dampening statistics or statistics for a specified IPv6 prefix or a regular expression.

NOTE

Clearing the dampening statistics for a route does not change the dampening status of the route.

To clear all the route dampening statistics, enter the following command at the Privileged EXEC level or any of the Config levels of the CLI.

```
Brocade# clear ipv6 bgp flap-statistics
```

Syntax: `clear ipv6 bgp flap-statistics [ipv6-prefix/prefix-length | neighbor ipv6-address | regular-expression regular-expression]`

The *ipv6-prefix/prefix-length* parameter clears route flap dampening statistics for a specified IPv6 prefix. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The **neighbor** *ipv6-address* parameter clears route flap dampening statistics only for routes learned from the neighbor with the specified IPv6 address.

The **regular-expression** *regular-expression* parameter is a regular expression.

Clearing BGP4+ local route information

You can clear locally imported or routes redistributed into BGP4+.

To clear all local route information, enter the following command at the Privileged EXEC level or any of the Config levels of the CLI.

```
Brocade# clear ipv6 bgp local routes
```

Syntax: `clear ipv6 bgp local routes`

Clearing BGP4+ neighbor information

You can perform the following tasks related to BGP4+ neighbor information:

- Clear diagnostic buffers.
- Reset a session to send and receive Outbound Route Filters (ORFs).
- Close a session, or reset a session and resend or receive an update.
- Clear traffic counters.
- Clear route flap dampening statistics.

Clearing BGP4+ neighbor diagnostic buffers

You can clear the following BGP4+ neighbor diagnostic information in buffers:

- The first 400 bytes of the last packet that contained an error.
- The last NOTIFICATION message either sent or received by the neighbor.

To display these buffers, use the **last-packet-with-error** keyword with the **show ipv6 bgp neighbors** command. For more information about this command, refer to “[Displaying last error packet from a BGP4+ neighbor](#)” on page 557.

You can clear the buffers for all neighbors, for an individual neighbor, or for all the neighbors within a specific peer group or AS.

To clear these buffers for neighbor 2001:db8:37::1, enter the following commands at the Privileged EXEC level or any of the Config levels of the CLI.

```
Brocade# clear ipv6 bgp neighbor 2001:db8:37::1 last-packet-with-error
Brocade# clear ipv6 bgp neighbor 2001:db8:37::1 notification-errors
```

Syntax: **clear ipv6 bgp neighbor** *all* | *ipv6-address* | *peer-group-name* | *as-number*
last-packet-with-error | **notification-errors**

The **all** | *ipv6-address* | *peer-group-name* | *as-num* specifies the neighbor. The *ipv6-address* parameter specifies a neighbor by its IPv6 address. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373. The *peer-group-name* specifies all neighbors in a specific peer group. The *as-num* parameter specifies all neighbors within the specified AS. The **all** keyword specifies all neighbors.

The **last-packet-with-error** keyword clears the buffer containing the first 400 bytes of the last packet that contained errors.

The **notification-errors** keyword clears the notification error code for the last NOTIFICATION message sent or received.

Resetting a BGP4+ neighbor session to send and receive ORFs

You can perform a hard or soft reset of a BGP4+ neighbor session to send or receive ORFs.

To perform a hard reset of a neighbor session and send ORFs to the neighbor, enter a command such as the following.

```
Brocade# clear ipv6 bgp neighbor 2001:db8:38::1
```

This command resets the BGP4+ session with neighbor 2001:db8:38::1 and sends the ORFs to the neighbor when the neighbor comes up again. If the neighbor sends ORFs to the device, the accepts them if the send capability is enabled.

To perform a soft reset of a neighbor session and send ORFs to the neighbor, enter a command such as the following.

```
Brocade(config)# clear ipv6 bgp neighbor peer_group1 soft in prefix-list
```

Syntax: **clear ipv6 bgp neighbor** *ipv6-address* | *peer-group-name* [**soft in prefix-filter**]

The *ipv6-address* parameter specifies a neighbor by its IPv6 address. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The *peer-group-name* specifies all neighbors in a specific peer group.

If you use the **soft in prefix-filter** keyword, the device sends an updated IPv6 prefix list to the neighbor as part of its route refresh message to the neighbor.

Closing or resetting a BGP4+ neighbor session

You can close a neighbor session or resend route updates to a neighbor. You can specify all neighbors, a single neighbor, or all neighbors within a specific peer group or AS.

If you close a neighbor session, the device and the neighbor clear all the routes they learned from each other. When the and neighbor establish a new BGP4+ session, they exchange route tables again. Use this method if you want the device to relearn routes from the neighbor and resend its own route table to the neighbor.

If you use the **soft-outbound** keyword, the device compiles a list of all the routes it would normally send to the neighbor at the beginning of a session. However, before sending the updates, the also applies the filters and route maps you have configured to the list of routes. If the filters or route maps result in changes to the list of routes, the sends updates to advertise, change, or even withdraw routes on the neighbor as needed. This ensures that the neighbor receives only the routes you want it to contain. Even if the neighbor already contains a route learned from the that you later decided to filter out, using the soft-outbound option removes that route from the neighbor. If no change is detected from the previously sent routes, an update is not sent.

For example, to close all neighbor sessions and thus flush all the routes exchanged by the device and all neighbors, enter the following command at the Privileged EXEC level or any of the Config levels of the CLI.

```
Brocade# clear ipv6 bgp neighbor all
```

Syntax: `clear ipv6 bgp neighbor all | ipv6-address | peer-group-name | as-number [soft-outbound | soft [in | out]]`

The **all | ipv6-address | peer-group-name | as-number** specifies the neighbor. The *ipv6-address* parameter specifies a neighbor by its IPv6 address. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373. The *peer-group-name* specifies all neighbors in a specific peer group. The *as-number* parameter specifies all neighbors within the specified AS. The **all** keyword specifies all neighbors.

Use the **soft-outbound** keyword to perform a soft reset of a neighbor session and resend only route update changes to a neighbor.

Use the **soft in** parameter to perform a soft reset of a neighbor session and requests a route update from a neighbor.

Use the **soft out** parameter to perform a soft reset of a neighbor session and resend all routes to a neighbor.

Clearing BGP4+ neighbor traffic counters

You can clear the BGP4+ message counter (reset them to 0) for all neighbors, a single neighbor, or all neighbors within a specific peer group or AS.

For example, to clear the BGP4+ message counter for all neighbors within an AS 1001, enter a command such as the following at the Privileged EXEC level or any of the Config levels of the CLI.

```
Brocade# clear ipv6 bgp neighbor 1001 traffic
```

Syntax: `clear ipv6 bgp neighbor all | ipv6-address | peer-group-name | as-number traffic`

The `all | ipv6-address | peer-group-name | as-number` specifies the neighbor. The `ipv6-address` parameter specifies a neighbor by its IPv6 address. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373. The `peer-group-name` specifies all neighbors in a specific peer group. The `as-number` parameter specifies all neighbors within the specified AS. The `all` keyword specifies all neighbors.

Specify the `traffic` keyword to clear the BGP4+ message counter.

Clearing BGP4+ neighbor route flap dampening statistics

The device allows you to clear all route flap dampening statistics for a specified BGP4+ neighbor.

NOTE

Clearing the dampening statistics for a neighbor does not change the dampening status of a route.

To clear all of the route flap dampening statistics for a neighbor, enter a command such as the following at the Privileged EXEC level or any of the Config levels of the CLI.

```
Brocade# clear ipv6 bgp neighbor 2001:db8:47::1 flap-statistics
```

Syntax: `clear ipv6 bgp neighbor ipv6-address flap-statistics`

The `ipv6-address` parameter specifies a neighbor by its IPv6 address. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

Specify the `flap-statistics` keyword to clear route flap dampening statistics for the specified neighbor.

Clearing and resetting BGP4+ routes in the IPv6 route table

You can clear all BGP4+ routes or only those routes associated with a particular IPv6 prefix from the IPv6 route table and reset the routes. When cleared, the BGP4+ routes are removed from the IPv6 main route table and then restored again.

For example, to clear all BGP4+ routes and reset them, enter the following command at the Privileged EXEC level or any of the Config levels of the CLI.

```
Brocade# clear ipv6 bgp routes
```

Syntax: `clear ip bgp routes [ipv6-prefix/prefix-length]`

The `ipv6-prefix/prefix-length` parameter clears routes associated with a particular IPv6 prefix. You must specify the `ipv6-prefix` parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the `prefix-length` parameter as a decimal value. A slash mark (/) must follow the `ipv6-prefix` parameter and precede the `prefix-length` parameter.

Clearing traffic counters for all BGP4+ neighbors

To clear the message counters (reset them to 0) for all BGP4+ neighbors, enter the following command.

```
Brocade# clear ipv6 bgp traffic
```

Syntax: `clear ipv6 bgp traffic`

Clearing BGP4+VPNv6 neighbor information

To clear the local information for all BGP4+ VPNv6 neighbors, enter the following command.

```
Brocade(config)# clear ip bgp vpnv6 neighbor 200 soft in
```

Syntax: `clear ip bgp vpnv6 neighbor { as-number { soft | soft-outbound } | ip-address { soft | soft-outbound } } | all { soft | soft-outbound }`

Clearing BGP4+ VRF6 information

You can perform the following tasks related to BGP4+ VRF6 information:

- Clearing local information
- Clearing BGP neighbor
- Clearing BGP routes
- Clearing BGP traffic counters

Clearing BGP4+ VRF6 local information

To clear the local information for all BGP4+ VRF6 neighbors, enter the following command.

```
Brocade# clear ipv6 bgp vrf red local routes
```

Syntax: `clear ipv6 bgp vrf vrf-name local routes`

Clearing BGP4+ VRF6 neighbor information

To clear the neighbor information for all BGP4+ VRF6 neighbors, enter the following command.

```
Brocade# clear ipv6 bgp vrf vrf1 neighbor
```

Syntax: `clear ipv6 bgp vrf vrf-name neighbor`

Clearing BGP4+ VRF6 routes

To clear the BGP4+ routes, enter the following command.

```
Brocade# clear ipv6 bgp vrf vrf1 routes
```

Syntax: `clear ipv6 bgp vrf vrf-name routes`

Clearing BGP4+ VRF6 traffic counters

To clear the message counters (reset them to 0) for all BGP4+ neighbors, enter the following command.

```
Brocade# clear ipv6 bgp vrf vrf1 traffic
```

Syntax: `clear ipv6 bgp vrf vrf-name traffic`

Displaying BGP4+ information

You can display the following BGP4+ information:

- BGP4+ route table.
- BGP4+ route information.
- BGP4+ route-attribute entries.
- BGP4+ configuration information.
- Dampened BGP4+ paths.
- Filtered-out BGP4+ routes.
- BGP4+ route flap dampening statistics.
- BGP4+ neighbor information.
- BGP4+ peer group configuration information.
- BGP4+ summary information.

NOTE

The **show** commands implemented for BGP4+ correspond to the **show** commands implemented for IPv4 BGP. For example, you can specify the **show ipv6 bgp** command for IPv6 and the **show ip bgp** command for IPv4. Also, the displays for the IPv4 and IPv6 versions of the **show** commands are similar except where relevant, IPv6 neighbor addresses replace IPv4 neighbor addresses, IPv6 prefixes replace IPv4 prefixes, and IPv6 next-hop addresses replace IPv4 next-hop addresses.

Displaying the BGP4+ route table

BGP4+ uses filters you define, as well as an algorithm to determine the preferred route to a destination. BGP4+ sends only the preferred route to the device's IPv6 table. However, if you want to view all the routes BGP4+ knows about, you can display the BGP4+ table.

To display the BGP4+ route table, enter the following command at any level of the CLI.

```
Brocade# show ipv6 bgp routes
Total number of BGP Routes: 4
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH m:NOT-INSTALLED-MULTIPATH
S:SUPPRESSED F:FILTERED s:STALE
Prefix          Next Hop          MED      LocPrf      Weight Status
1      2001:db8:1::/64   2001:db8:1111::2   1        100         32768  BL
      AS_PATH:
2      2001:db8:2::/64   2001:db8::30.30.30.1  1        100          0  BI
      AS_PATH:
3      2001:db8:1111::/64  ::                0        100         32768  BL
      AS_PATH:
4      2001:db8:2222::/64  2001:db8::30.30.30.1  0        100          0  BI
```

AS_PATH:

Table 100 describes the output parameters of the **show ipv6 bgp routes** command.

TABLE 100 Output parameters of the **show ipv6 bgp routes** command

Field	Description
Number of BGP4+ Routes	The number of routes displayed by the command.
Status codes	A list of the characters the display uses to indicate the route's status. The status code appears in the Status column of the display. The status codes are described in the command's output.
Prefix	The route's prefix.
Next Hop	For normal IPv6 routes, next hop is the next hop IPv6 router to reach the destination. For the 6PE routes, next hop is the IPv4-mapped IPv6 address of the peer 6PE router.
Metric	The value of the route's MED attribute. If the route does not have a metric, this field is blank.
LocPrf	The degree of preference for the advertised route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 – 4294967295.
Weight	The value that this device associates with routes from a specific neighbor. For example, if the receives routes to the same destination from two BGP4+ neighbors, the prefers the route from the neighbor with the larger weight.
Status	<p>The route's status, which can be one or more of the following:</p> <ul style="list-style-type: none"> • A – AGGREGATE. The route is an aggregate route for multiple networks. • B – BEST. BGP4+ has determined that this is the optimal route to the destination. • b – NOT-INSTALLED-BEST – BGP4+ has determined that this is the optimal route to the destination but did not install it in the IPv6 route table because the device received better routes from other sources (such as OSPFv3, RIPng, or static IPv6 routes). • C – CONFED_EBGP. The route was learned from a neighbor in the same confederation and AS, but in a different sub-AS within the confederation. • D – DAMPED. This route has been dampened (by the route dampening feature), and is currently unusable. • E – EBGP. The route was learned through a in another AS. • H – HISTORY. Route dampening is configured for this route, and the route has a history of flapping and is unreachable now. • I – IBGP. The route was learned through a in the same AS. • L – LOCAL. The route originated on this. • M – MULTIPATH. BGP4+ load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with "B". <p>NOTE: If the "m" is shown in lowercase, the software was not able to install the route in the IPv6 route table.</p> <ul style="list-style-type: none"> • S – SUPPRESSED. This route was suppressed during aggregation and thus is not advertised to neighbors.
AS-PATH	The AS-path information for the route.

Syntax: **show ipv6 bgp routes** [*ipv6-prefix/prefix-length* | *table-entry-number* | **age** *seconds* | **as-path-access-list** *name* | **as-path-filter** *number* | **best** | **cidr-only** | [**community** *number* | **no-export** | **no-advertise** | **internet** | **local-as**] | **community-access-list** *name* |

community-filter *number* | **detail** [*option*] | **local** | **neighbor** *ipv6-address* | **nexthop** *ipv6-address* | **no-best** | **prefix-list** *name* | **regular-expression** *regular-expression* | **route-map** *name* | **summary** | **unreachable**]

You can use the following options with the **show ipv6 bgp routes** command to determine the content of the display:

The *ipv6-prefix/prefix-length* parameter displays routes for a specific network. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The *table-entry-number* parameter specifies the table entry with which you want the display to start. For example, if you specify 100, the display shows entry 100 and all entries subsequent to entry 100.

The **age** *seconds* parameter displays only the routes that have been received or updated more recently than the number of seconds you specify.

The **as-path-access-list** *name* parameter filters the display using the specified AS-path ACL.

The **as-path-filter** *number* parameter filters the display using the specified AS-path filter.

The **best** keyword displays the routes received from neighbors that the device selected as the best routes to their destinations.

The **cidr-only** keyword lists only the routes whose network masks do not match their class network length.

The **community** *number* parameter lets you display routes for a specific community. You can specify **local-as**, **no-export**, **no-advertise**, **internet**, or a private community number. You can specify the community number as either two five-digit integer values of up to 1– 65535, separated by a colon (for example, 12345:6789) or a single long integer value.

The **community-access-list** *name* parameter filters the display using the specified community ACL.

The **community-filter** *number* parameter lets you display routes that match a specific community filter.

The **detail** *option* parameter lets you display more details about the routes. You can refine your request by also specifying one of the other parameters after the **detail** keyword.

The **local** keyword displays routes that are local to the device.

The **neighbor** *ipv6-address* parameter displays routes learned from a specified BGP4+ neighbor.

The **nexthop** *ipv6-address* parameter displays the routes for a specified next-hop IPv6 address. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The **no-best** keyword displays the routes for which none of the routes to a given prefix were selected as the best route. The IPv6 route table does not contain a BGP4+ route for any of the routes listed using this option.

The **prefix-list** *name* parameter filters the display using the specified IPv6 prefix list.

The **regular-expression** *regular-expression* parameter filters the display based on a regular expression.

The **route-map** *name* parameter filters the display using the specified route map. The software displays only the routes that match the match statements in the route map. The software disregards the route map's set statements.

The **summary** keyword displays summary information for the routes.

The **unreachable** keyword displays the routes that are unreachable because the device does not have a valid RIPng, OSPFv3, or static IPv6 route to the next hop.

To display details about BGP4+ routes, enter the following command at any level of the CLI.

```
Brocade# show ipv6 bgp route detail
Total number of BGP Routes: 4
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
      E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH m:NOT-INSTALLED-MULTIPATH
      S:SUPPRESSED F:FILTERED s:STALE
1 Prefix: 2001:db8:1::/64, Status: BL, Age: 0h1m14s
  NEXT_HOP: 2001:db8:1111::2, Learned from Peer: Local Router
  In-Label: 794624
  LOCAL_PREF: 100, MED: 1, ORIGIN: incomplete, Weight: 32768
  AS_PATH:
  Adj_RIB_out count: 1, Admin distance 1
2 Prefix: 2001:db8:2::/64, Status: BI, Age: 0h0m8s
  NEXT_HOP: 2001:db8::ffff:30:1, Metric: 1, Learned from Peer: 10.30.30.1 (1)
  Out-Label: 794624
  LOCAL_PREF: 100, MED: 1, ORIGIN: incomplete, Weight: 0
  AS_PATH:
3 Prefix: 2001:db8:1111::/64, Status: BL, Age: 0h2m26s
  NEXT_HOP: ::, Learned from Peer: Local Router
  In-Label: 794624
  LOCAL_PREF: 100, MED: 0, ORIGIN: incomplete, Weight: 32768
  AS_PATH:
  Adj_RIB_out count: 1, Admin distance 1
4 Prefix: 2001:db8:2222::/64, Status: BI, Age: 0h0m35s
  NEXT_HOP: 2001:db8::ffff:30:1, Metric: 1, Learned from Peer: 10.30.30.1 (1)
  Out-Label: 794624
  LOCAL_PREF: 100, MED: 0, ORIGIN: incomplete, Weight: 0
  AS_PATH:
```

The information related to the MPLS inner label in the 6PE packet is shown in bold text in the previous output.

[Table 101](#) describes the output parameters of the **show ipv6 bgp route detail** command.

TABLE 101 Output parameters of the **show ipv6 bgp route detail** command

Field	Description
Number of BGP4+ Routes advertised to specified neighbor (appears only in display for all routes)	For information about this field, refer to Table 102 on page 538.
Status codes	For information about this field, refer to Table 102 on page 538.
Prefix	For information about this field, refer to Table 102 on page 538.
Status	For information about this field, refer to Table 102 on page 538.
Age	The age of the advertised route, in seconds.
Next Hop	For information about this field, refer to Table 102 on page 538.
Learned from Peer	The IPv6 address of the neighbor from which this route is learned. "Local Router" indicates that the device itself learned the route.
In-Label	The MPLS inner label in the 6PE packet received from the MPLS network.
Out-Label	The MPLS inner label in the 6PE packet sent to the MPLS network.

TABLE 101 Output parameters of the **show ipv6 bgp route detail** command (Continued)

Field	Description
LOCAL_PREF	For information about this field, refer to Table 102 on page 538.
MED	The value of the advertised route's MED attribute. If the route does not have a metric, this field is blank.
Origin	<p>The source of the route information. The origin can be one of the following:</p> <ul style="list-style-type: none"> • A – AGGREGATE. The route is an aggregate route for multiple networks. • B – BEST. BGP4+ has determined that this is the optimal route to the destination. • b – NOT-INSTALLED-BEST – BGP4+ has determined that this is the optimal route to the destination but did not install it in the IPv6 route table because the device received better routes from other sources (such as OSPFv3, RIPng, or static IPv6 routes). • C – CONFED_EBGP. The route was learned from a neighbor in the same confederation and AS, but in a different sub-AS within the confederation. • D – DAMPED. This route has been dampened (by the route dampening feature), and is currently unusable. • EGP – The routes with this set of attributes came to BGP4+ through EGP. • H – HISTORY. Route dampening is configured for this route, and the route has a history of flapping and is unreachable now. • IGP – The routes with this set of attributes came to BGP4+ through IGP. • L – LOCAL. The route originated on this device. • M – MULTIPATH. BGP4+ load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with “B”. <p>NOTE: If the “m” is shown in lowercase, the software was not able to install the route in the IPv6 route table.</p> <ul style="list-style-type: none"> • S – SUPPRESSED. This route was suppressed during aggregation and thus is not advertised to neighbors.
Weight	For information about this field, refer to Table 102 on page 538.
AS-PATH	For information about this field, refer to Table 102 on page 538.
Adj_RIB_out count	The number of neighbors to which the route has been or will be advertised. This is the number of times the route has been selected as the best route and placed in the Adj-RIB-Out (outbound queue) for a BGP4+ neighbor.
Admin Distance	The administrative distance of the route.

Syntax: `show ipv6 bgp routes detail [ipv6-prefix/prefix-length | table-entry-number | age seconds | as-path-access-list name | as-path-filter number | best | cidr-only | [community number | no-export | no-advertise | internet | local-as] | community-access-list name | community-filter number | local | neighbor ipv6-address | nexthop ipv6-address | no-best | prefix-list name | regular-expression regular-expression | route-map name | summary | unreachable]`

You can use the following options with the **show ipv6 bgp routes detail** command to determine the content of the display.

The *ipv6-prefix/prefix-length* option displays details about routes for a specific network. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The *table-entry-number* parameter specifies the table entry with which you want the display to start. For example, if you specify 100, the display shows entry 100 and all entries subsequent to entry 100.

The **age seconds** parameter displays only the routes that have been received or updated more recently than the number of seconds you specify.

The **as-path-access-list name** parameter filters the display using the specified AS-path ACL.

The **as-path-filter number** parameter filters the display using the specified AS-path filter.

The **best** keyword displays the routes received from neighbors that the device selected as the best routes to their destinations.

The **cidr-only** keyword lists only the routes whose network masks do not match their class network length.

The **community number** parameter lets you display routes for a specific community. You can specify **local-as**, **no-export**, **no-advertise**, **internet**, or a private community number. You can specify the community number as either two five-digit integer values of up to 1– 65535, separated by a colon (for example, 12345:6789) or a single long integer value.

The **community-access-list name** parameter filters the display using the specified community ACL.

The **community-filter number** parameter lets you display routes that match a specific community filter.

The **detail** keyword lets you display more details about the routes. You can refine your request by also specifying one of the other parameters after the **detail** keyword.

The **local** keyword displays routes that are local to the device.

The **neighbor ipv6-address** parameter displays routes learned from a specified BGP4+ neighbor.

The **nexthop ipv6-address** option displays the routes for a specified next-hop IPv6 address. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The **no-best** keyword displays the routes for which none of the routes to a given prefix were selected as the best route. The IPv6 route table does not contain a BGP4+ route for any of the routes listed using this option.

The **prefix-list name** parameter filters the display using the specified IPv6 prefix list.

The **regular-expression regular-expression** parameter filters the display based on a regular expression.

The **route-map name** parameter filters the display using the specified route map. The software displays only the routes that match the match statements in the route map. The software disregards the route map's set statements.

The **summary** keyword displays summary information for the routes.

The **unreachable** keyword displays the routes that are unreachable because the device does not have a valid RIPng, OSPFv3 or static IPv6 route to the next hop.

Displaying BGP4+ route information

You can display all BGP4+ routes known by a device, only those routes that match a specified prefix, or routes that match a specified or longer prefix.

To display all BGP4+ routes known by the device, enter the following command at any level of the CLI.

```
Brocade# show ipv6 bgp
Total number of BGP Routes: 2
Status codes: s suppressed, d damped, h history, * valid, > best, i internal
Origin codes: i - IGP, e - EGP, ? - incomplete
   Network           Next Hop           Metric LocPrf Weight Path
*>  2001:db8::/32      ::                  1       100   32768  ?
*>  2001:db8:1234::/48  ::                  1       100   32768  ?
```

Syntax: show ipv6 bgp ipv6-prefix/prefix-length [longer-prefixes]

The *ipv6-prefix/prefix-length* parameter allows you to display routes that match a specified BGP prefix only. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The **longer-prefixes** keyword allows you to display routes that match a specified or longer BGP prefix. For example, if you specify **2001:db8::/32 longer-prefixes**, then all routes with the prefix 2001:db8::/32 or that have a longer prefix (such as 2001:db8:e016::/48) are displayed.

To display only those routes that match prefix 2001:db8::/32, enter the following command at any level of the CLI.

```
Brocade# show ipv6 bgp 2001:db8::/32
Number of BGP Routes matching display condition : 1
Status codes: s suppressed, d damped, h history, * valid, > best, i internal
Origin codes: i - IGP, e - EGP, ? - incomplete
   Network           Next Hop           MED LocPrf Weight Path
*>  2001:db8::/32      ::                  1       100   32768  ?
      Route is advertised to 1 peers:
      2001:db8:4::110 (65002)
```

For example, to display routes that match prefix 2001:db8::/32 or longer, enter the following command at any level of the CLI.

Displaying BGP4+ information

```
Brocade# show ipv6 bgp 2001:db8::/32 longer-prefixes
Number of BGP Routes matching display condition : 3
Status codes: s suppressed, d damped, h history, * valid, > best, i internal
Origin codes: i - IGP, e - EGP, ? - incomplete
  Network          Next Hop      MED LocPrf Weight Path
*> 2001:db8::/32   ::           1    100   32768 ?
*> 2001:db8:1234::/48 ::           1    100   32768 ?
*> 2001:db8:e0ff::/48 ::           1    100   32768 ?
    Route is advertised to 1 peers:
    2001:db8:4::110(65002)
```

These displays show the following information.

TABLE 102 BGP4+ route information

This field...	Displays...
Total number of BGP Routes (appears in display of all BGP routes only)	The number of routes known by the device.
Number of BGP Routes matching display condition (appears in display that matches specified and longer prefixes)	The number of routes that matched the display parameters you entered. This is the number of routes displayed by the command.
Status codes	A list of the characters the display uses to indicate the route's status. The status code appears in the left column of the display, to the left of each route. The status codes are described in the command's output.
Origin codes	A character the display uses to indicate the route's origin. The origin code appears to the right of the AS path (Path field). The origin codes are described in the command's output.
Network	The network prefix and prefix length.
Next Hop	The next-hop router for reaching the network from the device.
MED	The value of the route's MED attribute. If the route does not have a metric, this field is blank.
LocPrf	The degree of preference for this route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 – 4294967295.
Weight	The value that this device associates with routes from a specific neighbor. For example, if the receives routes to the same destination from two BGP4+ neighbors, the prefers the route from the neighbor with the larger weight.
Path	The route's AS path.

Displaying BGP4+ route-attribute entries

The route-attribute entries table lists sets of BGP4+ attributes stored in the device's memory. Each set of attributes is unique and can be associated with one or more routes. In fact, the typically has fewer route attribute entries than routes.

To display the IPv6 route-attribute entries table, enter the following command.

```

Brocade# show ipv6 bgp attribute-entries
Total number of BGP Attribute Entries: 378
1   Next Hop   :::                               MED :1                               Origin:INCOMP
    Originator:0.0.0.0             Cluster List:None
    Aggregator:AS Number :0        Router-ID:0.0.0.0                     Atomic:None
    Local Pref:100                 Communities:Internet
    AS Path   :(65002) 65001 4355 2548 3561 5400 6669 5548
    Address: 0x27a4cdb0 Hash:877 (0x03000000) Reference Counts: 2:0:2
...

```

NOTE

Portions of this display are truncated for brevity. The purpose of this display is to show all possible fields that might display rather than to show complete output.

Syntax: show ipv6 bgp attribute-entries

For information about display displaying route-attribute entries for a specified BGP4+ neighbor, refer to “[Displaying BGP4+ neighbor route-attribute entries](#)” on page 555.

This display shows the following information.

TABLE 103 BGP4+ route-attribute entries information

This field...	Displays...
Total number of BGP Attribute Entries	The number of entries contained in the device’s BGP4+ route-attribute entries table.
Next Hop	The IPv6 address of the next hop router for routes that have this set of attributes.
MED	The cost of the routes that have this set of attributes.
Origin	<p>The source of the route information. The origin can be one of the following:</p> <ul style="list-style-type: none"> • EGP – The routes with this set of attributes came to BGP4+ through EGP. • IGP – The routes with this set of attributes came to BGP4+ through IGP. • INCOMPLETE – The routes came from an origin other than one of the above. For example, they may have been redistributed from OSPFv3 or RIPng. <p>When BGP4+ compares multiple routes to a destination to select the best route, IGP is preferred over EGP, and both are preferred over INCOMPLETE.</p>
Originator	The originator of the route in a route-reflector environment.
Cluster List	The route-reflector clusters through which this set of attributes has passed.
Aggregator	<p>Aggregator information:</p> <ul style="list-style-type: none"> • AS Number shows the AS in which the network information in the attribute set was aggregated. This value applies only to aggregated routes and is otherwise 0. • Router-ID shows the router that originated this aggregator.
Atomic	<p>Whether the network information in this set of attributes has been aggregated and this aggregation has resulted in information loss:</p> <ul style="list-style-type: none"> • TRUE – Indicates information loss has occurred • FALSE – Indicates no information loss has occurred • None – Indicates this attribute is not present. <p>NOTE: Information loss under these circumstances is a normal part of BGP4+ and does not indicate an error.</p>
Local Pref	The degree of preference for routes that use this set of attributes relative to other routes in the local AS.

TABLE 103 BGP4+ route-attribute entries information (Continued)

This field...	Displays...
Communities	The communities that routes with this set of attributes are in.
AS Path	The ASs through which routes with this set of attributes have passed. The local AS is shown in parentheses.
Address	For debugging purposes only.
Hash	For debugging purposes only.
Reference Counts	For debugging purposes only.

Displaying the BGP4+ running configuration

To view the active BGP4+ configuration information contained in the running configuration without displaying the entire running configuration, enter the following command at any level of the CLI.

```
Brocade# show ipv6 bgp config
Current BGP configuration:
router bgp
  local-as 1000
  neighbor peer_group1 peer-group
  neighbor 2001:db8:e0ff:783a::3 remote-as 1001
  neighbor 2001:db8:edd3:8389::1 remote-as 1002
  neighbor 2001:db8:80::23 peer-group peer_group1
  neighbor 2001:db8:80::23 remote-as 1003
  address-family ipv6 unicast
  no neighbor 2001:db8:e0ff:783a::3 activate
  no neighbor 2001:db8:edd3:8389::1 activate
  no neighbor 2001:db8:80::23 activate
  exit-address-family

  address-family vpnv4
  exit-address-family

  address-family l2vpn
  network 2001:db8::/32
  neighbor peer_group1 activate
  neighbor 2001:db8:edd3:8389::1 activate
  exit-address-family

end
```

Syntax: show ipv6 bgp config

Displaying dampened BGP4+ paths

To display BGP4+ paths that have been dampened (suppressed) by route flap dampening, enter the following command at any level of the CLI.

```
Brocade# show ipv6 bgp dampened-paths
Status Code >:best d:damped h:history *:valid
      Network From Flaps Since Reuse Path
*d 2001:db8:8::/45 2001:db8:1::1 1 0 :1 :14 0 :2 :20 100 1002 1000
*d 2001:db8:1::/48 2001:db8:1::1 1 0 :1 :14 0 :2 :20 100 1002 1000
*d 2001:db8:4::/46 2001:db8:1::1 1 0 :1 :14 0 :2 :20 100 1002 1000
*d 2001:db8:2::/47 2001:db8:1::1 1 0 :1 :14 0 :2 :20 100 1002 1000
*d 2001:db8:0:8000::/49 2001:db8:1::1 1 0 :1 :14 0 :2 :20 100 1002 1000
*d 2001:db8:17::/64 2001:db8:1::1 1 0 :1 :18 0 :2 :20 100
```

Syntax: show ipv6 bgp dampened-paths

This display shows the following information.

TABLE 104 Dampened BGP4+ path information

This field...	Displays...
Status codes	A list of the characters the display uses to indicate the path's status. The status code appears in the left column of the display, to the left of each route. The status codes are described in the command's output. The status column displays a "d" for each dampened route.
Network	The destination network of the route.
From	The IPv6 address of the advertising peer.
Flaps	The number of times the path has flapped.
Since	The amount of time (in hh:mm:ss) since the first flap of this route.
Reuse	The amount of time (in hh:mm:ss) after which the path is available again.
Path	The AS path of the route.

Displaying filtered-out BGP4+ routes

When you enable the soft reconfiguration feature, the device saves all updates received from the specified neighbor or peer group. The saved updates include those that contain routes that are filtered out by the BGP4+ route policies.

You can display a summary or more detailed information about routes that have been filtered out by BGP4+ route policies.

To display a summary of the routes that have been filtered out by BGP4+ route policies, enter the following command at any level of the CLI.

Displaying BGP4+ information

```

Brocade# show ipv6 bgp filtered-routes
Searching for matching routes, use ^C to quit...
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
        E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
Prefix           Next Hop           MED LocPrf       Weight Status
1      2001:db8:3000::/48 2001:db8::110      100      0      EF
        AS_PATH: 65001 4355 701 80
2      2001:db8:4000::/48 2001:db8::110      100      0      EF
        AS_PATH: 65001 4355 1
3      2001:db8:5000::/48 2001:db8::110      100      0      EF
        AS_PATH: 65001 4355 701 1 189

```

The routes displayed by the command are the routes that the device's BGP policies filtered out. The did not place the routes in the BGP4+ route table, but did keep the updates. If a policy change causes these routes to be permitted, the user does not need to request the route information from the neighbor, but instead uses the information in the updates.

Syntax: `show ipv6 bgp filtered-routes [ipv6-prefix/prefix-length [longer-prefixes] | [as-path-access-list name] | [prefix-list name]`

The *ipv6-prefix/prefix-length* parameter displays the specified IPv6 prefix of the destination network only. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The **longer-prefixes** keyword allows you to display routes that match a specified or longer IPv6 prefix. For example, if you specify **2001:db8::/32 longer-prefixes**, then all routes with the prefix 2001:db8::/32 or that have a longer prefix (such as 2001:db8:e016::/48) are displayed.

The **as-path-access-list** *name* parameter specifies an AS-path ACL. Specify an ACL name. Only the routes permitted by the AS-path ACL are displayed.

The **prefix-list** *name* parameter specifies an IPv6 prefix list. Only the routes permitted by the prefix list are displayed.

This display shows the following information.

TABLE 105 Summary of filtered-out BGP4+ route information

This field...	Displays...
Number of BGP4+ Routes matching display condition	The number of routes that matched the display parameters you entered. This is the number of routes displayed by the command.
Status codes	A list of the characters the display uses to indicate the route's status. The status code appears in the left column of the display, to the left of each route. The status codes are described in the command's output. The status column displays an "F" for each filtered route.
Prefix	The network address and prefix.
Next Hop	The next-hop router for reaching the network from the device.
MED	The value of the route's MED attribute. If the route does not have a metric, this field is blank.
LocPrf	The degree of preference for this route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 - 4294967295.

TABLE 105 Summary of filtered-out BGP4+ route information (Continued)

This field...	Displays...
Weight	The value that this device associates with routes from a specific neighbor. For example, if the receives routes to the same destination from two BGP4+ neighbors, the prefers the route from the neighbor with the larger weight.
Status	<p>The route's status, which can be one or more of the following:</p> <ul style="list-style-type: none"> • A – AGGREGATE – The route is an aggregate route for multiple networks. • B – BEST – BGP4+ has determined that this is the optimal route to the destination. • b – NOT-INSTALLED-BEST – BGP4+ has determined that this is the optimal route to the destination but did not install it in the IPv6 route table because the device received better routes from other sources (such as OSPFv3, RIPng, or static IPv6 routes). • C – CONFED_EBGP – The route was learned from a neighbor in the same confederation and AS, but in a different sub-AS within the confederation. • D – DAMPED – This route has been dampened (by the route dampening feature), and is currently unusable. • E – EBGP – The route was learned through a in another AS. • H – HISTORY – Route dampening is configured for this route, and the route has a history of flapping and is unreachable now. • I – IBGP – The route was learned through a in the same AS. • L – LOCAL – The route originated on this device. • M – MULTIPATH – BGP4+ load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with “B”. <p>NOTE: If the “m” is shown in lowercase, the software was not able to install the route in the IPv6 route table.</p> <ul style="list-style-type: none"> • S – SUPPRESSED – This route was suppressed during aggregation and thus is not advertised to neighbors. • F – FILTERED – This route was filtered out by BGP4+ route policies on the device, but the device saved updates containing the filtered routes.

Displaying BGP4+ information

To display detailed information about the routes that have been filtered out by BGP4+ route policies, enter the following command at any level of the CLI.

```
Brocade# show ipv6 bgp filtered-routes detail
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
1 Prefix: 2001:db8:1::/64, Status: EF, Age: 0h0m10s
  NEXT_HOP: 2001:db8:1::1, Learned from Peer: 2001:db8:1::1 (100)
  LOCAL_PREF: 100, MED: 0, ORIGIN: incomplete, Weight: 0
  AS_PATH: 100
2 Prefix: 2001:db8:18::/64, Status: EF, Age: 0h0m10s
  NEXT_HOP: 2001:db8:1::1, Learned from Peer: 2001:db8:1::1 (100)
  LOCAL_PREF: 100, MED: 0, ORIGIN: incomplete, Weight: 0
  AS_PATH: 100
3 Prefix: 2001:db8:1::/64, Status: EF, Age: 0h0m10s
  NEXT_HOP: 2001:db8:1::1, Learned from Peer: 2001:db8:1::1 (100)
  LOCAL_PREF: 100, MED: 0, ORIGIN: incomplete, Weight: 0
  AS_PATH: 100
4 Prefix: 2001:db8:1::/64, Status: EF, Age: 0h0m10s
  NEXT_HOP: 2001:db8:1::1, Learned from Peer: 2001:db8:1::1 (100)
  LOCAL_PREF: 100, MED: 0, ORIGIN: incomplete, Weight: 0
  AS_PATH: 100
5 Prefix: 2001:db8:11::1/128, Status: EF, Age: 0h0m10s
  NEXT_HOP: 2001:db8:1::1, Learned from Peer: 2001:db8:1::1 (100)
  LOCAL_PREF: 100, MED: 0, ORIGIN: igp, Weight: 0
  AS_PATH: 100
6 Prefix: 2001:db8:17::/64, Status: EF, Age: 0h0m10s
  NEXT_HOP: 2001:db8:1::1, Learned from Peer: 2001:db8:1::1 (100)
  LOCAL_PREF: 100, MED: 0, ORIGIN: incomplete, Weight: 0
  AS_PATH: 100
```

Syntax: `show ipv6 bgp filtered-routes detail [ipv6-prefix/prefix-length [longer-prefixes] | [as-path-access-list name] | [prefix-list name]`

The *ipv6-prefix/prefix-length* parameter displays the specified IPv6 prefix of the destination network only. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The **longer-prefixes** keyword allows you to display routes that match a specified or longer IPv6 prefix. For example, if you specify **2001:db8::/32 longer-prefixes**, then all routes with the prefix 2001:db8::/32 or that have a longer prefix (such as 2001:db8:e016::/48) are displayed.

The **as-path-access-list** *name* parameter specifies an AS-path ACL. Only the routes permitted by the AS-path ACL are displayed.

The **prefix-list** *name* parameter specifies an IPv6 prefix list. Only the routes permitted by the prefix list are displayed.

This display shows the following information.

TABLE 106 Detailed filtered-out BGP4+ route information

This field...	Displays...
Status codes	A list of the characters the display uses to indicate the route's status. The Status field display an "F" for each filtered route.
Prefix	For information about this field, refer to Table 105 on page 542.
Status	For information about this field, refer to Table 105 on page 542.
Age	The age of the route, in seconds.
Next hop	For information about this field, refer to Table 105 on page 542.
Learned from peer	The IPv6 address of the neighbor from which this route is learned. "Local Router" indicates that the device itself learned the route.
Local pref	For information about this field, refer to Table 105 on page 542.
MED	The value of the advertised route's MED attribute. If the route does not have a metric, this field is blank.
Origin	<p>The source of the route information. The origin can be one of the following:</p> <ul style="list-style-type: none"> • A – AGGREGATE – The route is an aggregate route for multiple networks. • B – BEST – BGP4+ has determined that this is the optimal route to the destination. • b – NOT-INSTALLED-BEST – BGP4+ has determined that this is the optimal route to the destination but did not install it in the IPv6 route table because the device received better routes from other sources (such as OSPFv3, RIPng, or static IPv6 routes). • C – CONFED_EBGP – The route was learned from a neighbor in the same confederation and AS, but in a different sub-AS within the confederation. • D – DAMPED – This route has been dampened (by the route dampening feature), and is currently unusable. • E – EBGP – The route was learned through a in another AS. • H – HISTORY – Route dampening is configured for this route, and the route has a history of flapping and is unreachable now. • I – IBGP – The route was learned through a in the same AS. • L – LOCAL – The route originated on this device. • M – MULTIPATH – BGP4+ load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with "B". <p>NOTE: If the "m" is shown in lowercase, the software was not able to install the route in the IPv6 route table.</p> <ul style="list-style-type: none"> • S – SUPPRESSED – This route was suppressed during aggregation and thus is not advertised to neighbors. • F – FILTERED – This route was filtered out by BGP4+ route policies on the device, but the saved updates containing the filtered routes.
Weight	For information about this field, refer to Table 105 on page 542.
AS path	The ASs through which routes with this set of attributes have passed. The local AS is shown in parentheses.

Displaying route flap dampening statistics

To display route dampening statistics for all dampened routes, enter the following command at any level of the CLI.

```
Brocade# show ipv6 bgp flap-statistics
Total number of flapping routes: 14
      Status Code  >:best d:damped h:history *:valid
      Network      From          Flaps Since   Reuse   Path
h>  2001:db8:2::/48  2001:db8:23::47  1      0 :0 :13 0 :0 :0  65001 4355 1 701
*>  2001:db8:34::/48  2001:db8:23::47  1      0 :1 :4  0 :0 :0  65001 4355 701 62
```

Syntax: `show ipv6 bgp flap-statistics [ipv6-prefix/prefix-length [longer-prefixes] | as-path-filter number | neighbor ipv6-address | regular-expression regular-expression]`

The *ipv6-prefix/prefix-length* parameter displays statistics for the specified IPv6 prefix only. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The **longer-prefixes** keyword allows you to display statistics for routes that match a specified or longer IPv6 prefix. For example, if you specify **2001:db8::/32 longer-prefixes**, then all routes with the prefix 2001:db8::/32 or that have a longer prefix (such as 2001:db8::e016:/48) are displayed.

The **as-path-filter** *number* parameter specifies an AS path filter to display. Specify a filter number.

The **neighbor** *ipv6-address* parameter displays statistics for routes learned from the specified neighbor only. You also can display route flap statistics for routes learned from a neighbor by entering the following command: **show ipv6 bgp neighbor ipv6-address flap-statistics**.

The **regular-expression** *regular-expression* parameter is a regular expression. The regular expressions are the same ones supported for BGP4 AS-path filters.

You can also display route flap dampening statistics for a specified IPv6 neighbor. For more information, refer to [“Displaying route flap dampening statistics for a BGP4+ neighbor”](#) on page 557.

This display shows the following information.

TABLE 107 Route flap dampening statistics

This field...	Displays...
Total number of flapping routes	The total number of routes in the device's BGP4+ route table that have changed state and thus have been marked as flapping routes.
Status code	Indicates the dampening status of the route, which can be one of the following: <ul style="list-style-type: none"> • > – This is the best route among those in the BGP4+ route table to the route's destination. • d – This route is currently dampened, and thus unusable. • h – The route has a history of flapping and is unreachable now. • * – The route has a history of flapping but is currently usable.
Network	The destination network of the route.
From	The IPv6 address of the advertising peer.
Flaps	The number of flaps (state changes) the route has experienced.
Since	The amount of time (in hh:mm:ss) since the first flap of this route.

TABLE 107 Route flap dampening statistics

This field..	Displays..
Reuse	The amount of time (in hh:mm:ss) after which the path is again available.
Path	The AS path of the route.

You also can display all the dampened routes by using the **show ipv6 bgp dampened-paths** command. For more information, refer to [“Displaying dampened BGP4+ paths”](#) on page 541.

Displaying BGP4+ neighbor information

You can display the following information about a device’s BGP4+ neighbors:

Configuration information and statistics:

- Router advertisements.
- Route-attribute entries.
- Route flap dampening statistics.
- The last packet containing an error.
- Received Outbound Route Filters (ORFs).
- Routes received from a neighbor.
- BGP4+ Routing Information Base (RIB).
- Received best, not installed best, and unreachable routes.
- Route summary.

Displaying IPv6 neighbor configuration information and statistics

To display BGP4+ neighbor configuration information and statistics, enter the following command at any level of the CLI.

```
Brocade# show ipv6 bgp neighbor 2001:db8::110
1  IP Address: 2001:db8::110, AS: 65002 (EBGP), RouterID: 10.1.1.1
   State: ESTABLISHED, Time: 5d20h38m54s, KeepAliveTime: 60, HoldTime: 180
     RefreshCapability: Received
Messages:   Open      Update  KeepAlive  Notification  Refresh-Req
Sent       : 1         2        8012       0              0
Received: 1         0        7880       0              0
Last Update Time: NLRI      Withdraw      NLRI      Withdraw
Tx: ---          ---          Rx: ---          ---
Last Connection Reset Reason:Unknown
Notification Sent:      Unspecified
Notification Received: Unspecified
Neighbor NLRI Negotiation:
Peer Negotiated IPV6 unicast capability
Peer configured for IPV6 unicast Routes
TCP Connection state: ESTABLISHED
Byte Sent: 152411, Received: 149765
Local host: 2001:db8::106, Local Port: 8222
Remote host: 2001:db8::110, Remote Port: 179
ISentSeq: 740437769 SendNext: 740590181 TotUnAck: 0
TotSent: 152412 ReTrans: 0 UnAckSeq: 740590181
IRcvSeq: 242365900 RcvNext: 242515666 SendWnd: 16384
TotalRcv: 149766 DupliRcv: 0 RcvWnd: 16384
SendQue: 0 RcvQue: 0 CngstWnd: 1440
...
```

NOTE

Portions of this display are truncated for brevity. The purpose of this display is to show all possible fields that might display rather than to show complete output.

The display shows all the configured parameters for the neighbor. Only the parameters that have values different from their defaults are shown.

In this example, the number in the far left column indicates the neighbor for which information is displayed. When you list information for multiple neighbors, this number makes the display easier to read.

The TCP statistics at the end of the display show status for the TCP session with the neighbor. Most of the fields show information stored in the device's Transmission Control Block (TCB) for the TCP session between the device and its neighbor. These fields are described in detail in section 3.2 of RFC 793, "Transmission Control Protocol Functional Specification".

Syntax: `show ipv6 bgp neighbor [ipv6-address]`

The *ipv6-address* parameter allows you to display information for a specified neighbor only. You must specify the *ipv6-address* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

This display shows the following information.

TABLE 108 BGP4+ neighbor configuration information and statistics

This field...	Displays...
IP Address	The IPv6 address of the neighbor.
AS	The AS in which the neighbor resides.
EBGP or IBGP	Whether the neighbor session is an IBGP session, an EBGP session, or a confederation EBGP session: <ul style="list-style-type: none"> • EBGP – The neighbor is in another AS. • EBGP_Confed – The neighbor is a member of another sub-AS in the same confederation. • IBGP – The neighbor is in the same AS.
RouterID	The neighbor's router ID.
State	<p>The state of the device's session with the neighbor. The states are from the perspective of the session, not the neighbor's perspective. The state values can be one of the following:</p> <ul style="list-style-type: none"> • IDLE – The BGP4+ process is waiting to be started. Usually, enabling BGP4 or establishing a neighbor session starts the BGP4+ process. <ul style="list-style-type: none"> • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • ADMND – The neighbor has been administratively shut down. <ul style="list-style-type: none"> • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • CONNECT – BGP4+ is waiting for the connection process for the TCP neighbor session to be completed. • ACTIVE – BGP4+ is waiting for a TCP connection from the neighbor. <p>NOTE: If the state frequently changes between CONNECT and ACTIVE, there may be a problem with the TCP connection.</p> <ul style="list-style-type: none"> • OPEN SENT – BGP4+ is waiting for an Open message from the neighbor. • OPEN CONFIRM – BGP4+ has received an OPEN message from the neighbor and is now waiting for either a KEEPALIVE or NOTIFICATION message. If the device receives a KEEPALIVE message from the neighbor, the state changes to Established. If the message is a NOTIFICATION, the state changes to Idle. • ESTABLISHED – BGP4+ is ready to exchange UPDATE messages with the neighbor. <ul style="list-style-type: none"> • If there is more BGP data in the TCP receiver queue, a plus sign (+) is also displayed. <p>NOTE: If you display information for the neighbor using the show ipv6 bgp neighbor ipv6-address command, the TCP receiver queue value will be greater than 0.</p>
Time	The amount of time this session has been in its current state.
KeepAliveTime	The keep alive time, which specifies how often this device sends keep alive messages to the neighbor.
HoldTime	The hold time, which specifies how many seconds the device will wait for a KEEPALIVE or UPDATE message from a BGP4+ neighbor before deciding that the neighbor is dead.
RefreshCapability	Whether the device has received confirmation from the neighbor that the neighbor supports the dynamic refresh capability.
Messages Sent and Received	<p>The number of messages this device has sent to and received from the neighbor. The display shows statistics for the following message types:</p> <ul style="list-style-type: none"> • Open • Update • KeepAlive • Notification • Refresh-Req

TABLE 108 BGP4+ neighbor configuration information and statistics (Continued)

This field...	Displays...
Last Update Time	Lists the last time updates were sent and received for the following: <ul style="list-style-type: none"> • NLRI's • Withdraws
Last Connection Reset Reason	The reason the previous session with this neighbor ended. The reason can be one of the following: <ul style="list-style-type: none"> • No abnormal error has occurred. • Reasons described in the BGP specifications: <ul style="list-style-type: none"> • Message Header Error • Connection Not Synchronized • Bad Message Length • Bad Message Type • OPEN Message Error • Unsupported Version Number • Bad Peer AS Number • Bad BGP Identifier • Unsupported Optional Parameter • Authentication Failure • Unacceptable Hold Time • Unsupported Capability • UPDATE Message Error • Malformed Attribute List • Unrecognized Well-known Attribute • Missing Well-known Attribute • Attribute Flags Error • Attribute Length Error • Invalid ORIGIN Attribute • Invalid NEXT_HOP Attribute • Optional Attribute Error • Invalid Network Field • Malformed AS_PATH • Hold Timer Expired • Finite State Machine Error • Rcv Notification
Last Connection Reset Reason (cont.)	<ul style="list-style-type: none"> • Reasons specific to the implementation: <ul style="list-style-type: none"> • Reset All Peer Sessions • User Reset Peer Session • Port State Down • Peer Removed • Peer Shutdown • Peer AS Number Change • Peer AS Confederation Change • TCP Connection KeepAlive Timeout • TCP Connection Closed by Remote • TCP Data Stream Error Detected

TABLE 108 BGP4+ neighbor configuration information and statistics (Continued)

This field...	Displays...
Notification Sent	<p>If the device receives a NOTIFICATION message from the neighbor, the message contains an error code corresponding to one of the following errors. Some errors have subcodes that clarify the reason for the error. Where applicable, the subcode messages are listed underneath the error code messages.</p> <ul style="list-style-type: none"> • Message Header Error <ul style="list-style-type: none"> • Connection Not Synchronized • Bad Message Length • Bad Message Type • Unspecified • Open Message Error <ul style="list-style-type: none"> • Unsupported Version • Bad Peer As • Bad BGP Identifier • Unsupported Optional Parameter • Authentication Failure • Unacceptable Hold Time • Unspecified • Update Message Error <ul style="list-style-type: none"> • Malformed Attribute List • Unrecognized Attribute • Missing Attribute • Attribute Flag Error • Attribute Length Error • Invalid Origin Attribute • Invalid NextHop Attribute • Optional Attribute Error • Invalid Network Field • Malformed AS Path • Unspecified • Hold Timer Expired • Finite State Machine Error • Cease • Unspecified
Notification Received	See above.
Neighbor NLRI Negotiation	<p>The state of the device's NLRI negotiation with the neighbor. The states can include the following:</p> <ul style="list-style-type: none"> • Peer negotiated IPv6 unicast capability. • Peer configured for IPv6 unicast routes. • Peer negotiated IPv4 unicast capability. • Peer negotiated IPv4 multicast capability.

TABLE 108 BGP4+ neighbor configuration information and statistics (Continued)

This field...	Displays...
TCP Connection state	The state of the connection with the neighbor. The connection can have one of the following states: <ul style="list-style-type: none"> • LISTEN – Waiting for a connection request. • SYN-SENT – Waiting for a matching connection request after having sent a connection request. • SYN-RECEIVED – Waiting for a confirming connection request acknowledgment after having both received and sent a connection request. • ESTABLISHED – Data can be sent and received over the connection. This is the normal operational state of the connection. • FIN-WAIT-1 – Waiting for a connection termination request from the remote TCP, or an acknowledgment of the connection termination request previously sent. • FIN-WAIT-2 – Waiting for a connection termination request from the remote TCP. • CLOSE-WAIT – Waiting for a connection termination request from the local user. • CLOSING – Waiting for a connection termination request acknowledgment from the remote TCP. • LAST-ACK – Waiting for an acknowledgment of the connection termination request previously sent to the remote TCP (which includes an acknowledgment of its connection termination request). • TIME-WAIT – Waiting for enough time to pass to be sure the remote TCP received the acknowledgment of its connection termination request. • CLOSED – There is no connection state.
Byte Sent	The number of bytes sent.
Byte Received	The number of bytes received.
Local host	The IPv6 address of the device.
Local port	The TCP port the Brocade device is using for the BGP4+ TCP session with the neighbor.
Remote host	The IPv6 address of the neighbor.
Remote port	The TCP port the neighbor is using for the BGP4+ TCP session with the device.
ISentSeq	The initial send sequence number for the session.
SendNext	The next sequence number to be sent.
TotUnAck	The number of sequence numbers sent by the device that have not been acknowledged by the neighbor.
TotSent	The number of sequence numbers sent to the neighbor.
ReTrans	The number of sequence numbers that the device retransmitted because they were not acknowledged.
UnAckSeq	The current acknowledged sequence number.
IRcvSeq	The initial receive sequence number for the session.
RcvNext	The next sequence number expected from the neighbor.
SendWnd	The size of the send window.
TotalRcv	The number of sequence numbers received from the neighbor.
DupliRcv	The number of duplicate sequence numbers received from the neighbor.
RcvWnd	The size of the receive window.
SendQue	The number of sequence numbers in the send queue.

TABLE 108 BGP4+ neighbor configuration information and statistics (Continued)

This field...	Displays...
RcvQue	The number of sequence numbers in the receive queue.
CngstWnd	The number of times the window has changed.

Displaying routes advertised to a BGP4+ neighbor

You can display a summary or detailed information about the following:

- All routes a device has advertised to a neighbor.
- A specified route a device has advertised to a neighbor.

For example, to display a summary of all routes a device has advertised to neighbor 2001.db8::110, enter the following command at any level of the CLI.

```
Brocade# show ipv6 bgp neighbor 2001:db8::110 advertised-routes
      There are 2 routes advertised to neighbor 2001:db8::110
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST E:EBGP I:IBGP L:LOCAL
Prefix      Next Hop      MED LocPrf      Weight Status
1    2001:db8:1234::/48  ::          1              32768  BL
      AS_PATH:
2    2001:db8:2002::/48  ::          1              32768  BL
      AS_PATH:
```

Syntax: `show ipv6 bgp neighbor ipv6-address advertised-routes [detail] ipv6-prefix/prefix-length`

The *ipv6-address* parameter displays routes advertised to a specified neighbor. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The **detail** keyword displays detailed information about the advertised routes. If you do not specify this keyword, a summary of the advertised routes displays.

The *ipv6-prefix/prefix-length* parameter displays the specified route advertised to the neighbor only. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

This display shows the following information.

TABLE 109 Summary of route information advertised to a BGP4+ neighbor

This field...	Displays...
Number of BGP4+ Routes advertised to specified neighbor (appears only in display for all routes)	The number of routes displayed by the command.
Status codes	A list of the characters the display uses to indicate the route's status. The status code appears in the Status column of the display. The status codes are described in the command's output.
Prefix	The advertised route's prefix.
Next Hop	The next-hop for reaching the advertised route from the device.
MED	The value of the advertised route's MED attribute. If the route does not have a metric, this field is blank.

TABLE 109 Summary of route information advertised to a BGP4+ neighbor (Continued)

This field...	Displays...
LocPrf	The degree of preference for the advertised route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference range is 0 - 4294967295.
Weight	The value that this device associates with routes from a specific neighbor. For example, if the receives routes to the same destination from two BGP4+ neighbors, the prefers the route from the neighbor with the larger weight.
Status	The advertised route's status, which can be one or more of the following: <ul style="list-style-type: none"> • A - AGGREGATE. The route is an aggregate route for multiple networks. • B - BEST. BGP4+ has determined that this is the optimal route to the destination. • b - NOT-INSTALLED-BEST - BGP4+ has determined that this is the optimal route to the destination but did not install it in the IPv6 route table because the device received better routes from other sources (such as OSPFv3, RIPng, or static IPv6 routes). • E - EBGP. The route was learned through a in another AS. • I - IBGP. The route was learned through a in the same AS. • L - LOCAL. The route originated on this device.
AS-PATH	The AS-path information for the route.

For example, to display details about all routes a device has advertised to neighbor 2001:db8::110, enter the following command at any level of the CLI.

```
Brocade# show ipv6 bgp neighbor 2001:db8::110 advertised-routes detail
There are 2 routes advertised to neighbor 2001:db8::110
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST E:EBGP I:IBGP L:LOCAL
1 Prefix: 2001:db8:1::/48, Status: BL, Age: 6d13h28m7s
  NEXT_HOP: 2001:db8::106, Learned from Peer: Local Router
  LOCAL_PREF: none, MED: 1, ORIGIN: incomplete, Weight: 32768
  AS_PATH:
  Adj_RIB_out count: 1, Admin distance 190
2 Prefix: 2001:db8::/32, Status: BL, Age: 6d13h31m22s
  NEXT_HOP: 2001:db8::106, Learned from Peer: Local Router
  LOCAL_PREF: none, MED: 1, ORIGIN: incomplete, Weight: 32768
  AS_PATH:

  Adj_RIB_out count: 1, Admin distance 190
```

This display shows the following information.

TABLE 110 Detailed route information advertised to a BGP4+ neighbor

This field...	Displays...
Number of BGP4+ Routes advertised to specified neighbor (appears only in display for all routes)	For information about this field, refer to Table 109 on page 553.
Status codes	For information about this field, refer to Table 109 on page 553.
Prefix	For information about this field, refer to Table 109 on page 553.
Status	For information about this field, refer to Table 109 on page 553.
Age	The age of the advertised route, in seconds.

TABLE 110 Detailed route information advertised to a BGP4+ neighbor (Continued)

This field...	Displays...
Next Hop	For information about this field, refer to Table 109 on page 553.
Learned from Peer	The IPv6 address of the neighbor from which this route is learned. "Local Router" indicates that the device itself learned the route.
LOCAL_PREF	For information about this field, refer to Table 109 on page 553.
MED	The value of the advertised route's MED attribute. If the route does not have a metric, this field is blank.
Origin	<p>The source of the route information. The origin can be one of the following:</p> <ul style="list-style-type: none"> • EGP – The routes with this set of attributes came to BGP4+ through EGP. • IGP – The routes with this set of attributes came to BGP4+ through IGP. • INCOMPLETE – The routes came from an origin other than one of the above. For example, they may have been redistributed from OSPFv3 or RIPng. <p>When BGP4+ compares multiple routes to a destination to select the best route, IGP is preferred over EGP and both are preferred over INCOMPLETE.</p>
Weight	For information about this field, refer to Table 109 on page 553.
AS-PATH	The AS-path information for the route.
Adj RIB out count	The number of routes in the device's current BGP4+ Routing Information Base (Adj-RIB-Out) for a specified neighbor.
Admin distance	The administrative distance of the route.

Displaying BGP4+ neighbor route-attribute entries

The route-attribute entries table lists sets of BGP4+ attributes stored in the device's memory. Each set of attributes is unique and can be associated with one or more routes. In fact, the typically has fewer route attribute entries than routes.

For example, to display the route-attribute entries table for a BGP4+ neighbor 2001:db8::110, enter the following command.

```
Brocade# show ipv6 bgp neighbor
      Total number of BGP Attribute Entries: 1
1      Next Hop :2001:db8::106      Metric :1      Origin:INCOMP
      Originator:0.0.0.0      Cluster List:None
      Aggregator:AS Number :0      Router-ID:0.0.0.0      Atomic:None
      Local Pref:100      Communities:Internet
      AS Path :65001
      Address: 0x26579354 Hash:332 (0x0301fcd4) Reference Counts: 2:0:0
```

Syntax: `show ipv6 bgp neighbor ipv6-address attribute-entries`

The `ipv6-address` parameter displays the route attribute entries for a specified neighbor. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

This display shows the following information.

TABLE 111 BGP4+ neighbor route-attribute entries information

This field...	Displays...
Total number of BGP Attribute Entries	The number of route attribute entries for the specified neighbor.
Next Hop	The IPv6 address of the next hop router for routes that have this set of attributes.
Metric	The cost of the routes that have this set of attributes.
Origin	<p>The source of the route information. The origin can be one of the following:</p> <ul style="list-style-type: none"> • EGP – The routes with this set of attributes came to BGP4+ through EGP. • IGP – The routes with this set of attributes came to BGP4+ through IGP. • INCOMPLETE – The routes came from an origin other than one of the above. For example, they may have been redistributed from OSPFv3 or RIPng. <p>When BGP4+ compares multiple routes to a destination to select the best route, IGP is preferred over EGP and both are preferred over INCOMPLETE.</p>
Originator	The originator of the route in a route reflector environment.
Cluster List	The route-reflector clusters through which this set of attributes has passed.
Aggregator	<p>Aggregator information:</p> <ul style="list-style-type: none"> • AS Number shows the AS in which the network information in the attribute set was aggregated. This value applies only to aggregated routes and is otherwise 0. • Router-ID shows the that originated this aggregator.
Atomic	<p>Whether the network information in this set of attributes has been aggregated <i>and</i> this aggregation has resulted in information loss:</p> <ul style="list-style-type: none"> • TRUE – Indicates information loss has occurred • FALSE – Indicates no information loss has occurred • None – Indicates the attribute is not present. <p>Note: Information loss under these circumstances is a normal part of BGP4+ and does not indicate an error.</p>
Local Pref	The degree of preference for routes that use this set of attributes relative to other routes in the local AS.
Communities	The communities that routes with this set of attributes are in.
AS Path	The ASs through which routes with this set of attributes have passed. The local AS is shown in parentheses.
Address	For debugging purposes only.
Hash	For debugging purposes only.
Reference Counts	For debugging purposes only.

Displaying route flap dampening statistics for a BGP4+ neighbor

To display route flap dampening statistics for a specified BGP4+ neighbor, enter the following command at any level of the CLI.

```
Brocade# show ipv6 bgp neighbor 2001:db8::110 flap-statistics
Total number of flapping routes: 14
  Status Code  >:best d:damped h:history *:valid
  Network      From          Flaps Since    Reuse    Path
h> 2001:db8:2::/48 10.90.213.77  1      0 :0 :13 0 :0 :0 65001 4355 1 701
*> 2001:db8:34::/48 10.90.213.77  1      0 :1 :4  0 :0 :0 65001 4355 701 62
```

Syntax: `show ipv6 bgp neighbor ipv6-address flap-statistics`

The *ipv6-address* parameter displays the route flap dampening statistics for a specified neighbor. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

This display shows the following information.

TABLE 112 Route flap dampening statistics for a BGP4+ neighbor

This field...	Displays...
Total number of flapping routes	The total number of routes in the neighbor's BGP4+ route table that have changed state and thus have been marked as flapping routes.
Status code	Indicates the status of the route, which can be one of the following: <ul style="list-style-type: none"> • > - This is the best route among those in the neighbor's BGP4+ route table to the route's destination. • d - This route is currently dampened, and thus unusable. • h - The route has a history of flapping and is unreachable now. • * - The route has a history of flapping but is currently usable.
Network	The destination network of the route.
From	The IPv6 address of the advertising peer.
Flaps	The number of flaps (state changes) the route has experienced.
Since	The amount of time (in hh:mm:ss) since the first flap of this route.
Reuse	The amount of time (in hh:mm:ss) after which the path is again available.
Path	The AS path of the route.

You also can display all the dampened routes by using the `show ipv6 bgp dampened-paths` command. For more information, refer to “[Displaying dampened BGP4+ paths](#)” on page 541.

Displaying last error packet from a BGP4+ neighbor

You can display information about the last packet that contained an error from any of a device's neighbors. The displayed information includes the error packet's contents decoded in a human-readable format.

For example, to display information about the last error packet from any of a device's neighbors, enter the following command.

Displaying BGP4+ information

```
Brocade# show ipv6 bgp neighbor last-packet-with-error
Total number of BGP Neighbors: 266
No received packet with error logged for any neighbor
```

Syntax: `show ipv6 bgp neighbor last-packet-with-error`

This display shows the following information.

TABLE 113 Last error packet information for BGP4+ neighbors

This field...	Displays...
Total number of BGP Neighbors	The total number of configured neighbors for a device.
Last error	The error packet's contents decoded in a human-readable format or notification that no packets with an error were received.

Displaying Outbound Route Filters received from a BGP4+ neighbor

You can display the Outbound Route Filters (ORFs) received from a BGP4+ neighbor. This option applies to cooperative route filtering feature.

For example, to display the ORFs received from neighbor 2001:db8::110, enter the following command.

```
Brocade# show ipv6 bgp neighbor 2001:db8::110 received prefix-filter
ip prefix-list 2001:db8::110: 4 entries
  seq 5 permit 2001:db8:3::45/16 ge 18 le 28
  seq 10 permit 2001:db8::4::88/24
  seq 15 permit 2001:db8:5::37/8 le 32
  seq 20 permit 2001:db8:6::83/16 ge 18
```

Syntax: `show ipv6 bgp neighbor ipv6-address received prefix-filter`

The *ipv6-address* parameter displays the prefix filter learned from a specified neighbor. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

Displaying routes received from a BGP4+ neighbor

You can display a summary or detailed route information received in route updates from a specified BGP4+ neighbor since you enabled the soft reconfiguration feature.

For example, to display a summary of the route information received in route updates from neighbor 2001:db8::10, enter the following command at any level of the CLI.

```

Brocade# show ipv6 bgp neighbor 2001:db8::10 received-routes
There are 4 received routes from neighbor 2001:db8::10
Searching for matching routes, use ^C to quit...
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
    PrefixNext HopMetricLocPrfWeightStatus
1  2001:db8:2002::/642001:db8::10 01000BE
AS_PATH: 400
2  2001:db8:2003::/642001:db8::10 11000BE
AS_PATH: 400
3  2001:db8:2004::/642001:db8::10 11000BE
AS_PATH: 400
4  2001:db8:2005::/642001:db8::10 11000BE
AS_PATH: 400
    
```

Syntax: `show ipv6 bgp neighbor ipv6-address received-routes [detail]`

The *ipv6-address* parameter displays route information received from a specified neighbor. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The **detail** keyword displays detailed route information. If you do not specify this parameter, a summary of route information displays.

This display shows the following information.

TABLE 114 Summary of route information received from a BGP4+ neighbor

This field...	Displays...
Number of BGP4+ Routes received from a neighbor	The number of routes displayed by the command.
Status codes	A list of the characters the display uses to indicate the route's status. The status code appears in the Status column of the display. The status codes are described in the command's output.
Prefix	The received route's prefix.
Next Hop	The IPv6 address of the next device that is used when forwarding a packet to the received route.
MED	The value of the route's MED attribute. If the route does not have a metric, this field is blank.
LocPrf	The degree of preference for the advertised route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 – 4294967295.

TABLE 114 Summary of route information received from a BGP4+ neighbor (Continued)

This field...	Displays...
Weight	The value that this device associates with routes from a specific neighbor. For example, if the receives routes to the same destination from two BGP4+ neighbors, the prefers the route from the neighbor with the larger weight.
Status	<p>The advertised route's status, which can be one or more of the following:</p> <p>A – AGGREGATE. The route is an aggregate route for multiple networks.</p> <p>B – BEST. BGP4+ has determined that this is the optimal route to the destination.</p> <p>b – NOT-INSTALLED-BEST – BGP4+ has determined that this is the optimal route to the destination but did not install it in the IPv6 route table because the device received better routes from other sources (such as OSPFv3, RIPng, or static IPv6 routes).</p> <p>D – DAMPED. This route has been dampened (by the route dampening feature), and is currently unusable.</p> <p>E – EBGp. The route was learned through a in another AS.</p> <p>H – HISTORY. Route dampening is configured for this route, and the route has a history of flapping and is unreachable now.</p> <p>I – IBGP. The route was learned through a in the same AS.</p> <p>L – LOCAL. The route originated on this device.</p> <p>M – MULTIPATH. BGP4+ load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with "B".</p> <p>NOTE: If the "m" is shown in lowercase, the software was not able to install the route in the IPv6 route table.</p> <p>S – SUPPRESSED. This route was suppressed during aggregation and thus is not advertised to neighbors.</p> <p>F – FILTERED. This route was filtered out by BGP4+ route policies on the device, but the saved updates containing the filtered routes.</p>

For example, to display details about routes received from neighbor 2001:db8:1::1, enter the following command at any level of the CLI.

```

Brocade# show ipv6 bgp neighbor 2001:db8:1::1 received-routes detail
There are 4 received routes from neighbor 2001:db8:1::1
Searching for matching routes, use ^C to quit...
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
1 Prefix: 2001:db8:1000:1::/64, Status: BI, Age: 0h17m25s
NEXT_HOP: 2001:db8:1::1, Learned from Peer: 2001:db8:1::1 (100)
LOCAL_PREF: 100, MED: 0, ORIGIN: incomplete, Weight: 0
AS_PATH:
Adj_RIB_out count: 1, Admin distance 200
2 Prefix: 2001:db8:1::/64, Status: I, Age: 0h17m25s
NEXT_HOP: 2001:db8:1::1, Learned from Peer: 2001:db8:1::1 (100)
LOCAL_PREF: 100, MED: 0, ORIGIN: incomplete, Weight: 0
AS_PATH:
3 Prefix: 2001:db8:11::1/128, Status: BI, Age: 0h17m25s
NEXT_HOP: 2001:db8:1::1, Learned from Peer: 2001:db8:1::1 (100)
LOCAL_PREF: 100, MED: 0, ORIGIN: igp, Weight: 0
AS_PATH:
Adj_RIB_out count: 1, Admin distance 200
4 Prefix: 2001:db8:17::/64, Status: BI, Age: 0h17m25s
NEXT_HOP: 2001:db8:1::1, Learned from Peer: 2001:db8:1::1 (100)
LOCAL_PREF: 100, MED: 0, ORIGIN: incomplete, Weight: 0
AS_PATH:
Adj_RIB_out count: 1, Admin distance 200
    
```

This display shows the following information.

TABLE 115 Detailed route information received from a BGP4+ neighbor

This field...	Displays...
Number of BGP4+ routes received from a neighbor	For information about this field, refer to Table 114 on page 559.
Status codes	For information about this field, refer to Table 114 on page 559.
Prefix	For information about this field, refer to Table 114 on page 559.
Status	For information about this field, refer to Table 114 on page 559.
Age	The age of the route, in seconds.
Next hop	The next-hop router for reaching the route from the device.
Learned from peer	The IPv6 address of the neighbor from which this route is learned. "Local Router" indicates that the device itself learned the route.
Local pref	For information about this field, refer to Table 114 on page 559.
MED	The value of the route's MED attribute. If the route does not have a metric, this field is blank.
Origin	<p>The source of the route information. The origin can be one of the following:</p> <ul style="list-style-type: none"> • EGP – The routes with this set of attributes came to BGP4+ through EGP. • IGP – The routes with this set of attributes came to BGP4+ through IGP. • INCOMPLETE – The routes came from an origin other than one of the above. For example, they may have been redistributed from OSPFv3 or RIPng. <p>When BGP4+ compares multiple routes to a destination to select the best route, IGP is preferred over EGP and both are preferred over INCOMPLETE.</p>
Weight	For information about this field, refer to Table 114 on page 559.
AS Path	For information about this field, refer to Table 114 on page 559.

TABLE 115 Detailed route information received from a BGP4+ neighbor (Continued)

This field...	Displays...
Adj RIB out count	The number of routes in the device's current BGP4+ Routing Information Base (Adj-RIB-Out) for a specified neighbor.
Admin distance	The administrative distance of the route.

Displaying the Adj-RIB-Out for a BGP4+ neighbor

You can display a summary or detailed information about the following:

- All routes in a device's current BGP4+ Routing Information Base (Adj-RIB-Out) for a specified neighbor.
- A specified route in a device's current BGP4+ RIB for a specified neighbor.

The RIB contains the routes that the device either has most recently sent to the neighbor or is about to send to the neighbor.

For example, to display a summary of all routes in a device's RIB for neighbor 2001:db8::110, enter the following command at any level of the CLI.

```
Brocade# show ipv6 bgp neighbor 2001:db8::110 rib-out-routes
      There are 2 RIB_out routes for neighbor 2001:db8::110
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST E:EBGP I:IBGP L:LOCAL
Prefix          Next Hop      Metric    LocPrf    Weight Status
1      2001:db8:1234::/48  ::          1         100      32768  BL
      AS_PATH:
2      2001:db8:2002::/48  ::          1         100      32768  BL
      AS_PATH:
```

Syntax: `show ipv6 bgp neighbor ipv6-address rib-out-routes [ipv6-prefix/prefix-length | detail [ipv6-prefix/prefix-length network-mask]]`

The *ipv6-address* parameter displays the RIB routes for a specified neighbor. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The *ipv6-prefix/prefix-length* parameter displays the specified RIB route for the neighbor. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The **detail** *ipv6-prefix/prefix-length network-mask* parameter displays detailed information about the specified RIB routes. If you do not specify this parameter, a summary of the RIB routes displays. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter. You must specify the *network-mask* parameter using 8-bit values in dotted decimal notation.

This display shows the following information.

TABLE 116 Summary of RIB route information for a BGP4+ neighbor

This field...	Displays...
Number of RIB_out routes for a specified neighbor (appears only in display for all RIB routes)	The number of RIB routes displayed by the command.
Status codes	A list of the characters the display uses to indicate the route's status. The status code appears in the Status column of the display. The status codes are described in the command's output.
Prefix	The RIB route's prefix.
Next Hop	The next-hop router for reaching the route from the device.
MED	The value of the advertised route's MED attribute. If the route does not have a metric, this field is blank.
LocPrf	The degree of preference for the route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 - 4294967295.
Weight	The value that this device associates with routes from a specific neighbor. For example, if the receives routes to the same destination from two BGP4+ neighbors, the prefers the route from the neighbor with the larger weight.
Status	The RIB route's status, which can be one or more of the following: <ul style="list-style-type: none"> • A - AGGREGATE. The route is an aggregate route for multiple networks. • B - BEST. BGP4+ has determined that this is the optimal route to the destination. • E - EBGp. The route was learned through a in another AS. • I - IBGP. The route was learned through a in the same AS. • L - LOCAL. The route originated on this device.
AS-PATH	The AS-path information for the route.

For example, to display details about all RIB routes for neighbor 2001:db8::110, enter the following command at any level of the CLI.

```

Brocade# show ipv6 bgp neighbor 2001:db8::110 rib-out-routes detail
                There are 2 RIB_out routes for neighbor 2001:db8::110
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST E:EBGP I:IBGP L:LOCAL
1   Prefix: 2001:db8:1234::/48, Status: BL, Age: 6d18h17m53s
    NEXT_HOP: ::, Learned from Peer: Local Router
    LOCAL_PREF: 100, MED: 1, ORIGIN: incomplete, Weight: 32768
    AS_PATH:
      Adj_RIB_out count: 1, Admin distance 190
2   Prefix: 2001:db8:2002::/48, Status: BL, Age: 6d18h21m8s
    NEXT_HOP: ::, Learned from Peer: Local Router
    LOCAL_PREF: 100, MED: 1, ORIGIN: incomplete, Weight: 32768
    AS_PATH:
      Adj_RIB_out count: 1, Admin distance 190
      Adj_RIB_out count: 1, Admin distance 190

```

This display shows the following information.

TABLE 117 Detailed RIB route information for a BGP4+ neighbor

This field...	Displays...
Number of RIB_out routes for a specified neighbor (appears only in display for all routes)	For information about this field, refer to Table 116 on page 563.
Status codes	For information about this field, refer to Table 116 on page 563.
Prefix	For information about this field, refer to Table 116 on page 563.
Status	For information about this field, refer to Table 116 on page 563.
Age	The age of the RIB route, in seconds.
Next Hop	For information about this field, refer to Table 116 on page 563.
Learned from Peer	The IPv6 address of the neighbor from which this route is learned. "Local Router" indicates that the device itself learned the route.
LOCAL_PREF	For information about this field, refer to Table 116 on page 563.
MED	The value of the RIB route's MED attribute. If the route does not have a metric, this field is blank.
Origin	<p>The source of the route information. The origin can be one of the following:</p> <ul style="list-style-type: none"> • EGP – The routes with this set of attributes came to BGP4+ through EGP. • IGP – The routes with this set of attributes came to BGP4+ through IGP. • INCOMPLETE – The routes came from an origin other than one of the above. For example, they may have been redistributed from OSPFv3 or RIPng. <p>When BGP4+ compares multiple routes to a destination to select the best route, IGP is preferred over EGP and both are preferred over INCOMPLETE.</p>
Weight	For information about this field, refer to Table 116 on page 563.
AS-PATH	For information about this field, refer to Table 116 on page 563.

Displaying the best and unreachable routes received from a BGP4+ neighbor

You can display a summary or detailed information about the following types of BGP4+ routes received from a specified neighbor:

- **Best routes** – The "best" routes to their destinations, which are installed in the device's IPv6 route table.
- **Unreachable** – The routes whose destinations are unreachable using any of the BGP4+ paths in the IPv6 route table.

For example, to display a summary of the best routes to a destination received from neighbor 2001:db8::106, enter the following command.


```

Brocade# show ipv6 bgp neighbor 2001:db8::106 routes best
      There are 2 accepted routes from neighbor 2001:db8::106
Searching for matching routes, use ^C to quit...
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
      E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
Prefix          Next Hop          MED LocPrf      Weight Status
1      2001:db8:2002::/48      2001:db8::106      1      100          0      BE
      AS_PATH: 65001
2      2001:db8:2002:1234::/64 2001:db8::106      1      100          0      BE
      AS_PATH: 65001
    
```

Syntax: `show ipv6 bgp neighbor ipv6-address routes best | detail [best | unreachable] | unreachable`

The *ipv6-address* parameter displays the routes for a specified neighbor. You must specify this address in hexadecimal using 16-bit values between colons as documented in RFC 2373.

The **best** keyword displays the “best” routes, which are installed in the IPv6 route table.

The **unreachable** keyword displays the routes whose destinations are unreachable using any of the BGP4+ paths in the IPv6 route table.

The **detail** keyword displays detailed information about the routes. If you do not specify this parameter, a summary of the routes displays.

This display shows the following information.

TABLE 118 Summary of best and unreachable routes from a BGP4+ neighbor

This field...	Displays...
Number of accepted routes from a specified neighbor	The number of routes displayed by the command.
Status codes	A list of the characters the display uses to indicate the route’s status. The status code appears in the Status column of the display. The status codes are described in the command’s output.
Prefix	The route’s prefix.
Next Hop	The next-hop router for reaching the route from the device.
MED	The value of the route’s MED attribute. If the route does not have a metric, this field is blank.
LocPrf	The degree of preference for the route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 – 4294967295.
Weight	The value that this device associates with routes from a specific neighbor. For example, if the receives routes to the same destination from two BGP4+ neighbors, the prefers the route from the neighbor with the larger weight.

TABLE 118 Summary of best and unreachable routes from a BGP4+ neighbor (Continued)

This field...	Displays...
Status	<p>The route's status, which can be one or more of the following:</p> <ul style="list-style-type: none"> • A – AGGREGATE. The route is an aggregate route for multiple networks. • B – BEST. BGP4+ has determined that this is the optimal route to the destination. • C – CONFED_EBGP. The route was learned from a neighbor in the same confederation and AS, but in a different sub-AS within the confederation. • D – DAMPED. This route has been dampened (by the route dampening feature), and is currently unusable. • E – EBGP. The route was learned through a in another AS. • H – HISTORY. Route dampening is configured for this route, and the route has a history of flapping and is unreachable now. • I – IBGP. The route was learned through a in the same AS. • L – LOCAL. The route originated on this device. • M – MULTIPATH. BGP4+ load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with “B”. <p>NOTE: If the “m” is shown in lowercase, the software was not able to install the route in the IPv6 route table.</p> <ul style="list-style-type: none"> • S – SUPPRESSED. This route was suppressed during aggregation and thus is not advertised to neighbors. • F – FILTERED. This route was filtered out by BGP4+ route policies on the device, but the saved updates containing the filtered routes.
AS-PATH	The AS-path information for the route.

For example, to display detailed information about the best routes to a destination received from neighbor 2001:db8::106, enter the following command.

```

Brocade# show ipv6 bgp neighbor 2000:4::106 routes detail best
      There are 2 accepted routes from neighbor 2000:4::106
Searching for matching routes, use ^C to quit...
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
      E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH S:SUPPRESSED F:FILTERED
1      Prefix: 2001:db8::/32, Status: BE, Age: 18h48m56s
      NEXT_HOP: 2001:db8::106, Learned from Peer: 2001:db8::106 (65001)
      LOCAL_PREF: 100, MED: 1, ORIGIN: incomplete, Weight: 0
      AS_PATH: 65001
2      Prefix: 2001:db8:1234::/48, Status: BE, Age: 18h48m56s
      NEXT_HOP: 2001:db8::106, Learned from Peer: 2001:db8::106 (65001)
      LOCAL_PREF: 100, MED: 1, ORIGIN: incomplete, Weight: 0
      AS_PATH: 65001
    
```

This display shows the following information.

TABLE 119 Detailed best and unreachable routes from a BGP4+ neighbor

This field...	Displays...
Number of accepted routes from a specified neighbor (appears only in display for all routes)	For information about this field, refer to Table 118 on page 565.
Status codes	For information about this field, refer to Table 118 on page 565.
Prefix	For information about this field, refer to Table 118 on page 565.
Status	For information about this field, refer to Table 118 on page 565.

TABLE 119 Detailed best and unreachable routes from a BGP4+ neighbor (Continued)

This field...	Displays...
Age	The age of the route, in seconds.
Next Hop	For information about this field, refer to Table 118 on page 565.
Learned from Peer	The IPv6 address of the neighbor from which this route is learned. "Local Router" indicates that the device itself learned the route.
LOCAL_PREF	For information about this field, refer to Table 118 on page 565.
MED	The value of the RIB route's MED attribute. If the route does not have a metric, this field is blank.
Origin	<p>The source of the route information. The origin can be one of the following:</p> <ul style="list-style-type: none"> • EGP – The routes with this set of attributes came to BGP4+ through EGP. • IGP – The routes with this set of attributes came to BGP4+ through IGP. • INCOMPLETE – The routes came from an origin other than one of the above. For example, they may have been redistributed from OSPFv3 or RIPng. <p>When BGP4+ compares multiple routes to a destination to select the best route, IGP is preferred over EGP and both are preferred over INCOMPLETE.</p>
Weight	For information about this field, refer to Table 118 on page 565.
AS-PATH	For information about this field, refer to Table 118 on page 565.

Displaying IPv6 neighbor route summary information

You can display route summary information for all neighbors or a specified neighbor only.

For example, to display summary information for neighbor 2001:db8::110, enter the following command at any level of the CLI.

```

Brocade# show ipv6 bgp neighbor 2001:db8::110 routes-summary
1  IP Address: 2001:db8::110
Routes Accepted/Installed:0, Filtered/Kept:0, Filtered:0
  Routes Selected as BEST Routes:0
    BEST Routes not Installed in IP Forwarding Table:0
  Unreachable Routes (no IGP Route for NEXTHOP):0
  History Routes:0

NLRIs Received in Update Message:0, Withdraws:0 (0), Replacements:0
  NLRIs Discarded due to
    Maximum Prefix Limit:0, AS Loop:0
    Invalid Nexthop:0, Invalid Nexthop Address:0.0.0.0
    Duplicated Originator_ID:0, Cluster_ID:0

Routes Advertised:2, To be Sent:0, To be Withdrawn:0
NLRIs Sent in Update Message:2, Withdraws:0, Replacements:0

Peer Out of Memory Count for:
  Receiving Update Messages:0, Accepting Routes(NLRI):0
  Attributes:0, Outbound Routes(RIB-out):0 Outbound Routes Holder:0
    
```

Syntax: `show ipv6 bgp neighbor [ipv6-address] routes-summary`

This display shows the following information.

TABLE 120 BGP4+ neighbor route summary information

This field...	Displays...
IP Address	The IPv6 address of the neighbor
Routes Received	How many routes the device has received from the neighbor during the current BGP4+ session: <ul style="list-style-type: none"> Accepted or Installed – Indicates how many of the received routes the device accepted and installed in the BGP4+ route table. Filtered or Kept – Indicates how many routes were filtered out, but were nonetheless retained in memory for use by the soft reconfiguration feature. Filtered – Indicates how many of the received routes were filtered out.
Routes Selected as BEST Routes	The number of routes that the device selected as the best routes to their destinations.
BEST Routes not Installed in IPv6 Forwarding Table	The number of routes received from the neighbor that are the best BGP4+ routes to their destinations, but were nonetheless not installed in the IPv6 route table because the device received better routes from other sources (such as OSPFv3, RIPng, or static IPv6 routes).
Unreachable Routes	The number of routes received from the neighbor that are unreachable because the device does not have a valid RIPng, OSPFv3, or static IPv6 route to the next hop.
History Routes	The number of routes that are down but are being retained for route flap dampening purposes.
NLRIs Received in Update Message	The number of routes received in Network Layer Reachability (NLRI) format in UPDATE messages: <ul style="list-style-type: none"> Withdraws – The number of withdrawn routes the device has received. Replacements – The number of replacement routes the device has received.
NLRIs Discarded due to	Indicates the number of times the device discarded an NLRI for the neighbor due to the following reasons: <ul style="list-style-type: none"> Maximum Prefix Limit – The device's configured maximum prefix amount had been reached. AS Loop – An AS loop occurred. An AS loop occurs when the BGP4+ AS-path attribute contains the local AS number. Invalid Nexthop Address – The next hop value was not acceptable. Duplicated Originator_ID – The originator ID was the same as the local router ID. Cluster_ID – The cluster list contained the local cluster ID, or contained the local router ID (see above) if the cluster ID is not configured.
Routes Advertised	The number of routes the device has advertised to this neighbor: <ul style="list-style-type: none"> To be Sent – The number of routes the device has queued to send to this neighbor. To be Withdrawn – The number of NLRIs for withdrawing routes the device has queued up to send to this neighbor in UPDATE messages.

TABLE 120 BGP4+ neighbor route summary information (Continued)

This field...	Displays...
NLRIs Sent in Update Message	<p>The number of NLRIs for new routes the device has sent to this neighbor in UPDATE messages:</p> <ul style="list-style-type: none"> • Withdraws – The number of routes the device has sent to the neighbor to withdraw. • Replacements – The number of routes the device has sent to the neighbor to replace routes the neighbor already has.
Peer Out of Memory Count for	<p>Statistics for the times the device has run out of BGP4+ memory for the neighbor during the current BGP4+ session:</p> <ul style="list-style-type: none"> • Receiving Update Messages – The number of times UPDATE messages were discarded because there was no memory for attribute entries. • Accepting Routes(NLRI) – The number of NLRIs discarded because there was no memory for NLRI entries. This count is not included in the Receiving Update Messages count. • Attributes – The number of times there was no memory for BGP4+ attribute entries. • Outbound Routes (RIB-out) – The number of times there was no memory to place a “best” route into the neighbor’s route information base (Adj-RIB-Out) for routes to be advertised. • Outbound Routes Holder – For debugging purposes only.

Displaying BGP4+ peer group configuration information

You can display configuration information for all peer groups or a specified peer group configured on a device.

For example, to display configuration information for a peer group named peer1, enter the following command at any level of the CLI.

```

Brocade# show ipv6 bgp peer-group peer1
1  BGP peer-group is pg1, Remote AS: 65002
   Description: device group 1
   NextHopSelf: yes
   Address family : IPV4 Unicast
   Address family : IPV4 Multicast
   Address family : IPV6 Unicast
Members:
  IP Address: 10.169.102.2
  IP Address: 10.169.100.2
  IP Address: 10.169.101.2
  IP Address: 10.169.103.2
  IP Address: 10.169.104.2
  IP Address: 10.169.105.2
  IP Address: 10.169.106.2
  IP Address: 10.169.107.2
  IP Address: 10.169.108.2
  IP Address: 10.169.109.2
  IP Address: 10.169.110.2
  IP Address: 10.169.111.2
  IP Address: 10.169.112.2
    
```

Syntax: `show ipv6 bgp peer-group [peer-group-name]`

The display shows only parameters that have values different from their default settings.

Displaying BGP4+ summary

To view summary BGP4+ information for the device, enter the following command at any level of the CLI.

```
Brocade# show ipv6 bgp summary
BGP4 Summary
Router ID: 10.223.223.223   Local AS Number : 65001
Confederation Identifier : not configured
Confederation Peers:
Maximum Number of Paths Supported for Load Sharing : 1
Number of Neighbors Configured : 1
Number of Routes Installed : 2
Number of Routes Advertising to All Neighbors : 2
Number of Attribute Entries Installed : 1
Neighbor Address AS#   State   Time      Rt:Accepted Filtered Sent   ToSend
2001:db8::110      65002 ESTAB   21h32m32s  0         0         2     0
```

Syntax: show ipv6 bgp summary

This display shows the following information.

TABLE 121 BGP4+ summary information

This field...	Displays...
Router ID	The device's router ID.
Local AS Number	The BGP4+ AS number in which the device resides.
Confederation Identifier	The AS number of the confederation in which the device resides.
Confederation Peers	The numbers of the local ASs contained in the confederation. This list matches the confederation peer list you configure on the device.
Maximum Number of Paths Supported for Load Sharing	The maximum number of route paths across which the device can balance traffic to the same destination. The feature is enabled by default but the default number of paths is 1. You can increase the number from 2 – 8 paths.
Number of Neighbors Configured	The number of BGP4+ neighbors configured on this device.
Number of Routes Installed	The number of BGP4+ routes in the device's BGP4+ route table. To display the BGP4+ route table, refer to “Displaying the BGP4+ route table” on page 531.
Number of Routes Advertising to All Neighbors	The total of the RtSent and RtToSend columns for all neighbors.
Number of Attribute Entries Installed	The number of BGP4+ route-attribute entries in the route-attributes table. To display the route-attribute table, refer to “Displaying BGP4+ route-attribute entries” on page 538.
Neighbor Address	The IPv6 addresses of this BGP4+ neighbors.
AS#	The AS number.

TABLE 121 BGP4+ summary information (Continued)

This field...	Displays...
State	<p>The state of this neighbor session with each neighbor. The states are from this perspective of the session, not the neighbor's perspective. The state values can be one of the following for each:</p> <ul style="list-style-type: none"> • IDLE – The BGP4+ process is waiting to be started. Usually, enabling BGP4+ or establishing a neighbor session starts the BGP4+ process. <ul style="list-style-type: none"> • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • ADMND – The neighbor has been administratively shut down. <ul style="list-style-type: none"> • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • CONNECT – BGP4+ is waiting for the connection process for the TCP neighbor session to be completed. • ACTIVE – BGP4+ is waiting for a TCP connection from the neighbor. <p>NOTE: If the state frequently changes between CONNECT and ACTIVE, there may be a problem with the TCP connection.</p> <ul style="list-style-type: none"> • OPEN SENT – BGP4+ is waiting for an Open message from the neighbor. • OPEN CONFIRM – BGP4+ has received an OPEN message from the neighbor and is now waiting for either a KEEPALIVE or NOTIFICATION message. If the receives a KEEPALIVE message from the neighbor, the state changes to Established. If the message is a NOTIFICATION, the state changes to Idle. • ESTABLISHED – BGP4+ is ready to exchange UPDATE packets with the neighbor. <ul style="list-style-type: none"> • If there is more BGP data in the TCP receiver queue, a plus sign (+) is also displayed. <p>NOTE: If you display information for the neighbor using the show ipv6 bgp neighbor ipv6-address command, the TCP receiver queue value will be greater than 0.</p>
Time	The time that has passed since the state last changed.
Accepted	The number of routes received from the neighbor that this installed in the BGP4+ route table. Usually, this number is lower than the RoutesRcvd number. The difference indicates that this filtered out some of the routes received in the UPDATE messages.
Filtered	<p>The routes or prefixes that have been filtered out.</p> <ul style="list-style-type: none"> • If soft reconfiguration is enabled, this field shows how many routes were filtered out (not placed in the BGP4+ route table) but retained in memory. • If soft reconfiguration is not enabled, this field shows the number of BGP4+ routes that have been filtered out.
Sent	The number of BGP4+ routes that the has sent to the neighbor.
ToSend	The number of routes the has queued to send to this neighbor.

Displaying BGP4+VPNv6 information

You can display the following information about a device's BGP4+ VPNv6 feature:

- BGP4+VPNv6 neighbor information
- BGP4+VPNv6 routing table information
- BGP4+VPNv6 route label information
- BGP4+VPNv6 summary information

Displaying BGP4+VPNv6 neighbor information

To view BGP4+ configuration information and statistics for IPv4 neighbors with VPNv6 capability negotiated, enter the following command.

```
Brocade(config-bgp-vpn4u)#show ip bgp vpnv6 neighbors
1 IP Address: 40.0.0.4, AS: 100 (IBGP), RouterID: 4.4.4.4, VRF:
default-vrf
  State: ESTABLISHED, Time: 0h4m1s, KeepAliveTime: 60, HoldTime: 180
  KeepAliveTimer Expire in 31 seconds, HoldTimer Expire in 149 seconds
  Minimal Route Advertisement Interval: 0 seconds
  RefreshCapability: Received
Address Family : VPNv6 Unicast
  SendExtendedCommunity: yes
  Messages:      Open      Update  KeepAlive  Notification  Refresh-Req
    Sent       : 1         0       5           0              0
    Received: 1         0       5           0              0
  Last Update Time: NLRI      Withdraw      NLRI      Withdraw
                  Tx: ---      ---          Rx: ---      ---
  Last Connection Reset Reason:Unknown
  Notification Sent:      Unspecified
  Notification Received: Unspecified
  Neighbor NLRI Negotiation:
    Peer Negotiated VPNv6 unicast capability
    Peer configured for VPNv6 unicast Routes
  Neighbor ipv6 MPLS Label Capability Negotiation:
  Neighbor AS4 Capability Negotiation:
  Outbound Policy Group:
    ID: 6, Use Count: 1
  TCP Connection state: ESTABLISHED, flags:00000033 (0,0)
  Maximum segment size: 1460
  TTL check: 0, value: 0, rcvd: 64
  Byte Sent: 140, Received: 140
```

Syntax: show ip bgp vpnv6 neighbors

Table 122 provides information about the command's output.

TABLE 122 BGP4+ VPNv6 neighbor information

This field...	Displays...
IP Address	The IP address of the neighbor.
AS	The AS the neighbor is in.
EBGP or IBGP	Whether the neighbor session is an IBGP session, an EBGP session, or a confederation EBGP session: <ul style="list-style-type: none"> • EBGP – The neighbor is in another AS. • EBGP_Confed – The neighbor is a member of another sub-AS in the same confederation. • IBGP – The neighbor is in the same AS.
RouterID	The neighbor's ID.

TABLE 122 BGP4+ VPNv6 neighbor information (Continued)

This field...	Displays...
State	<p>The state of the session with the neighbor. The states are from the perspective of this device of the session, not the perspective of the neighbor. The state values are based on the BGP4 state machine values described in RFC 1771 and can be one of the following for each device:</p> <ul style="list-style-type: none"> • IDLE – The BGP4 process is waiting to be started. Usually, enabling BGP4 or establishing a neighbor session starts the BGP4 process. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • ADMND – The neighbor has been administratively shut down. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • CONNECT – BGP4 is waiting for the connection process for the TCP neighbor session to be completed. • ACTIVE – BGP4 is waiting for a TCP connection from the neighbor. <p>NOTE: When the state frequently changes between CONNECT and ACTIVE, there may be a problem with the TCP connection.</p> <ul style="list-style-type: none"> • OPEN SENT – BGP4 is waiting for an Open message from the neighbor. • OPEN CONFIRM – BGP4 has received an OPEN message from the neighbor and is now waiting for either a KEEPALIVE or NOTIFICATION message. When the device receives a KEEPALIVE message from the neighbor, the state changes to Established. When the message is a NOTIFICATION, the state changes to Idle. • ESTABLISHED – BGP4 is ready to exchange UPDATE messages with the neighbor. • When there is more BGP data in the TCP receiver queue, a plus sign (+) is also displayed. <p>NOTE: When the user displays information for the neighbor using the show ip bgp neighbor ip-addr command, the TCP receiver queue value is greater than 0.</p>
Time	The amount of time this session has been in its current state.
KeepAliveTime	The KeeAliveTime, which specifies how often this device sends keep alive messages to the neighbor.
HoldTime	The hold time, which specifies how many seconds the device waits for a KEEPALIVE or UPDATE message from a BGP4 neighbor before deciding that the neighbor is dead.
Minimal Route Advertisement Interval	The minimum time elapse between route advertisements to the same neighbor.
RefreshCapability	Indicates whether this Brocade device has received confirmation from the neighbor that the neighbor supports the dynamic refresh capability.
SendExtenedCommunity:	Capability to send extended community route targets to peer for filtering.
Messages Sent	<p>The number of messages this device has sent to the neighbor. The display shows statistics for the following message types:</p> <ul style="list-style-type: none"> • Open • Update • KeepAlive • Notification • Refresh-Req

TABLE 122 BGP4+ VPNv6 neighbor information (Continued)

This field...	Displays...
Messages Received	The number of messages this device has received from the neighbor. The message types are the same as for the Message Sent field.
Last Update Time	Lists the last time updates were sent and received for the following: <ul style="list-style-type: none"> • NLRIs • Withdraws
Last Connection Reset Reason	The reason the previous session with this neighbor ended. The reason can be one of the following: <ul style="list-style-type: none"> • Reasons described in the BGP specifications: <ul style="list-style-type: none"> • Message Header Error • Connection Not Synchronized • Bad Message Length • Bad Message Type • OPEN Message Error • Unsupported Version Number • Bad Peer AS Number • Bad BGP Identifier • Unsupported Optional Parameter • Authentication Failure • Unacceptable Hold Time • Unsupported Capability • UPDATE Message Error • Malformed Attribute List • Unrecognized Well-known Attribute • Missing Well-known Attribute • Attribute Flags Error • Attribute Length Error • Invalid ORIGIN Attribute • Invalid NEXT_HOP Attribute • Optional Attribute Error • Invalid Network Field • Malformed AS_PATH • Hold Timer Expired • Finite State Machine Error • Rcv Notification
Last Connection Reset Reason (cont.)	<ul style="list-style-type: none"> • Reasons specific to the implementation: <ul style="list-style-type: none"> • Reset All Peer Sessions • User Reset Peer Session • Port State Down • Peer Removed • Peer Shutdown • Peer AS Number Change • Peer AS Confederation Change • TCP Connection KeepAlive Timeout • TCP Connection Closed by Remote • TCP Data Stream Error Detected

TABLE 122 BGP4+ VPNv6 neighbor information (Continued)

This field...	Displays...
Notification Sent	<p>When the device receives a NOTIFICATION message from the neighbor, the message contains an error code corresponding to one of the following errors. Some errors have subcodes that clarify the reason for the error. Where applicable, the subcode messages are listed underneath the error code messages.</p> <ul style="list-style-type: none"> • Message Header Error: <ul style="list-style-type: none"> • Connection Not Synchronized • Bad Message Length • Bad Message Type • Unspecified • Open Message Error: <ul style="list-style-type: none"> • Unsupported Version • Bad Peer As • Bad BGP Identifier • Unsupported Optional Parameter • Authentication Failure • Unacceptable Hold Time • Unspecified • Update Message Error: <ul style="list-style-type: none"> • Malformed Attribute List • Unrecognized Attribute • Missing Attribute • Attribute Flag Error • Attribute Length Error • Invalid Origin Attribute • Invalid NextHop Attribute • Optional Attribute Error • Invalid Network Field • Malformed AS Path • Unspecified • Hold Timer Expired • Finite State Machine Error • Cease • Unspecified
Notification Received	See above.
Neighbor NLRI Negotiation	<p>Shows the state of the router's NLRI negotiation with the neighbor. The states can be one of the following:</p> <ul style="list-style-type: none"> • Peer negotiated IPv4 unicast capability • Peer negotiated IPv6 unicast capability • Peer configured for IPv4 unicast routes • Peer configured for IPv6 unicast routes
Neighbor IPv6 MPLS Label Capability Negotiation	<p>Shows the state of the router's IPv6 MPLS label capability negotiation with the neighbor. The states can be one of the following:</p> <ul style="list-style-type: none"> • Peer negotiated IPv6 MPLS Label capability • Peer configured for IPv6 MPLS Label capability
Neighbor AS4 Capability Negotiation	<p>Shows the state of the router's AS4 capability negotiation with the neighbor. The states can be one of the following:</p> <ul style="list-style-type: none"> • Peer negotiated AS4 capability • Peer configured for AS4 capability
Outbound Policy Group	Shows the ID and the count used in the outbound policy group.

TABLE 122 BGP4+ VPNv6 neighbor information (Continued)

This field...	Displays...
TCP Connection state	<p>The state of the connection with the neighbor. The connection can have one of the following states:</p> <ul style="list-style-type: none"> • LISTEN – Waiting for a connection request. • SYN-SENT – Waiting for a matching connection request after having sent a connection request. • SYN-RECEIVED – Waiting for a confirming connection request acknowledgment after having both received and sent a connection request. • ESTABLISHED – Data can be sent and received over the connection. This is the normal operational state of the connection. • FIN-WAIT-1 – Waiting for a connection termination request from the remote TCP, or an acknowledgment of the connection termination request previously sent. • FIN-WAIT-2 – Waiting for a connection termination request from the remote TCP. • CLOSE-WAIT – Waiting for a connection termination request from the local user. • CLOSING – Waiting for a connection termination request acknowledgment from the remote TCP. • LAST-ACK – Waiting for an acknowledgment of the connection termination request previously sent to the remote TCP (which includes an acknowledgment of its connection termination request). • TIME-WAIT – Waiting for enough time to pass to be sure the remote TCP received the acknowledgment of its connection termination request. • CLOSED – There is no connection state.
Byte Sent	The number of bytes sent.
Byte Received	The number of bytes received.
Local host	The IP address of the device.
Local port	The TCP port the device is using for the BGP4 TCP session with the neighbor.
Remote host	The IP address of the neighbor.
Remote port	The TCP port the neighbor is using for the BGP4 TCP session with the device.
SentSeq	The initial send sequence number for the session.
SendNext	The next sequence number to be sent.
TotUnAck	The number of sequence numbers sent by the device that have not been acknowledged by the neighbor.
TotSent	The number of sequence numbers sent to the neighbor.
ReTrans	The number of sequence numbers that the device retransmitted because they were not acknowledged.
UnAckSeq	The current acknowledged sequence number.
IRcvSeq	The initial receive sequence number for the session.
RcvNext	The next sequence number expected from the neighbor.
SendWnd	The size of the send window.

TABLE 122 BGP4+ VPNv6 neighbor information (Continued)

This field...	Displays...
TotalRcv	The number of sequence numbers received from the neighbor.
DupliRcv	The number of duplicate sequence numbers received from the neighbor.
RcvWnd	The size of the receive window.
SendQue	The number of sequence numbers in the send queue.
RcvQue	The number of sequence numbers in the receive queue.
CngstWnd	The number of times the window has changed.

Displaying BGP4+VPNv6 routing table information

To view BGP4+ VPNv6 routing table information for IPv4 neighbors, enter the following command.

```
Brocade#(config-mpls-if-e1000-2/5)#show ip bgp vpnv6 routes
Total number of BGP Routes: 4
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
      E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH
m:NOT-INSTALLED-MULTIPATH
      S:SUPPRESSED F:FILTERED s:STALE
      Prefix      Next Hop          MED      LocPrf      Weight Status
Route Distinguisher: 1:1
1      10::41/128     ::FFFF:40:0:0:2   3         100         0      I
      AS_PATH:
2      30::/64        ::FFFF:40:0:0:2   3         100         0      I
      AS_PATH:
3      40::/64        ::FFFF:40:0:0:2   3         100         0      I
      AS_PATH:
4      100::/64       ::FFFF:40:0:0:2   3         100         0      I
      AS_PATH:
```

Syntax: show ip bgp vpnv6 routes

[Table 123](#) provides information about the command output.

TABLE 123 BGP4+ VPNv6 route information

This field...	Displays...
Total number of BGP Routes	The number of BGP4+ routes the Brocade device has installed in the BGP4 route table.
Status	<p>The route status, which can be one or more of the following:</p> <ul style="list-style-type: none"> • A – AGGREGATE. The route is an aggregate route for multiple networks. • B – BEST. BGP4 has determined that this is the optimal route to the destination. <p>NOTE: If the “b” is lowercase, the software was not able to install the route in the IP route table.</p> <ul style="list-style-type: none"> • b – NOT-INSTALLED-BEST. The routes received from the neighbor are the best BGP4 routes to their destinations, but were not installed in the IP route table because the device received better routes from other sources (such as OSPF, RIP, or static IP routes). • C – CONFED_EBGP. The route was learned from a neighbor in the same confederation and AS, but in a different sub-AS within the confederation. • D – DAMPED. This route has been dampened (by the route dampening feature), and is currently unusable. • H – HISTORY. Route dampening is configured for this route, and the route has a history of flapping and is unreachable now. • I – INTERNAL. The route was learned through BGP4. • L – LOCAL. The route originated on this device. • M – MULTIPATH. BGP4 load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with “B”. <p>NOTE: If the “m” is lowercase, the software was not able to install the route in the IP route table.</p> <ul style="list-style-type: none"> • S – SUPPRESSED. This route was suppressed during aggregation and thus is not advertised to neighbors.
Prefix	The IP address and network mask of the destination network of the route.
AS_PATH	The BGP AS_PATH path attribute.
Next Hop	The IP address of the next-hop router.
MED	The Multi-exit Discriminator (MED) associated with the route. The MED applies to routes that have multiple paths through the same AS. The best route is the route with the lowest MED.
LocPrf	The degree of preference for this route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 – 4294967295.
Weight	The value that this route associates with routes from a specific neighbor. For example, if the Brocade device receives routes to the same destination from two BGP4 neighbors, the device prefers the route from the neighbor with the larger weight.
Status	The route’s status. Refer to “ Status ” on page 590.

Displaying BGP4+VPNv6 route label information

To view BGP4+ route label information for IPv4 neighbors, enter the following command.

```

Brocade#show ip bgp vpnv6 tags
      Network      Next Hop          In-Label Out-Label
Route Distinguisher: 1:1
  10::41/128      ::FFFF:40:0:0:2  -         500002
  30::/64         ::FFFF:40:0:0:2  -         500002
  40::/64         ::FFFF:40:0:0:2  -         500002
  100::/64        ::FFFF:40:0:0:2  -         500002
    
```

Syntax: show ip bgp vpnv6 tags

Table 124 provides information about the command output.

TABLE 124 BGP4+ VPNv6 route label information

This field...	Displays...
Network	IP address or mask of the destination network of the route.
Next Hop	The next-hop device for reaching the network from this device.
In-Label	Local assigned MPLS label value.
Out-Label	Learned MPLS label value.
Route Distinguisher	<p>A unique ID that is prefixed on any address being routed or advertised from a Virtual Routing and Forwarding (VRF) instance. The RD can be defined as either ASN-relative or IP address-relative as described:</p> <ul style="list-style-type: none"> • ASN-relative - Composed of the local ASN number followed by a “:” (colon) and a unique arbitrary number. For example: 3:6 • IP address-relative - Composed of the local IP address followed by a “:” (colon) and a unique arbitrary number.

Displaying BGP4+VPNv6 summary information

To view the BGP4+ VPNv6 overall information, enter the following command.

```

Brocade(config-bgp-ipv4u-vrf)#show ip bgp vpnv6 summary
  BGP4 Summary
  Router ID: 2.2.2.2   Local AS Number: 100
  Confederation Identifier: not configured
  Confederation Peers:
  Maximum Number of IP ECMP Paths Supported for Load Sharing: 1
  Number of Neighbors Configured: 2, UP: 1
  Number of Routes Installed: 0
  Number of Routes Advertising to All Neighbors: 2 (2 entries), Uses 96
  bytes
  Number of Attribute Entries Installed: 1, Uses 90 bytes
  Neighbor Address  AS#      State   Time      Rt:Accepted Filtered Sent
  ToSend
  20.0.0.3         100     ESTAB   1h42m 5s  0        0        0
  1
  40.0.0.4         100     ESTAB   0h28m57s 0        0        1
  0
    
```

Syntax: show ip bgp vpnv6 summary

Table 125 provides information about the command output.

TABLE 125 BGP4+ VPNv6 summary information

This field...	Displays...
Router ID	The device's ID.
Local AS Number	The BGP4+ AS number for the device.
Confederation Identifier	The AS number of the confederation in which the device resides.
Confederation Peers	The numbers of the local ASs contained in the confederation. This list matches the confederation peer list you configure on the device.
Maximum Number of IP ECMP Path Supported for Load Sharing	The maximum number of IP ECMP route paths across which the device can balance traffic to the same destination.
Number of Neighbors Configured	The number of BGP4+ neighbors configured on this device, and currently in established state.
Number of Routes Installed	The number of BGP4+ routes in the device BGP4 route table and the route or path memory usage.
Number of Routes Advertising to All Neighbors	The total of the RtSent and RtToSend columns for all neighbors, the total number of unique ribout group entries, and the amount of memory used by these groups.
Number of Attribute Entries Installed	The number of BGP4+ route-attribute entries in the device route-attributes table and the amount of memory used by these entries.
Neighbor Address	The IP addresses of the BGP4 neighbors for this device.
AS#	The AS number.

This field...	Displays...
State	<p>The state of the session with the neighbor. The states are from the perspective of this device of the session, not the perspective of the neighbor. The state values are based on the BGP4 state machine values described in RFC 1771 and can be one of the following for each device:</p> <ul style="list-style-type: none"> • IDLE – The BGP4 process is waiting to be started. Usually, enabling BGP4 or establishing a neighbor session starts the BGP4 process. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • ADMND – The neighbor has been administratively shut down. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • CONNECT – BGP4 is waiting for the connection process for the TCP neighbor session to be completed. • ACTIVE – BGP4 is waiting for a TCP connection from the neighbor. <p>NOTE: When the state frequently changes between CONNECT and ACTIVE, there may be a problem with the TCP connection.</p> <ul style="list-style-type: none"> • OPEN SENT – BGP4 is waiting for an Open message from the neighbor. • OPEN CONFIRM – BGP4 has received an OPEN message from the neighbor and is now waiting for either a KEEPALIVE or NOTIFICATION message. When the device receives a KEEPALIVE message from the neighbor, the state changes to Established. When the message is a NOTIFICATION, the state changes to Idle. • ESTABLISHED – BGP4 is ready to exchange UPDATE messages with the neighbor. • When there is more BGP data in the TCP receiver queue, a plus sign (+) is also displayed.
Time	The time that has passed since the state last changed.
Accepted	The number of routes received from the neighbor that this device installed in the BGP4 route table. Usually, this number is lower than the RoutesRcvd number. The difference indicates that this device filtered out some of the routes received in the UPDATE messages.
Filtered	The routes or prefixes that have been filtered out.
Sent	The number of BGP4 routes the device has sent to the neighbor.
ToSend	The number of routes the device has queued to advertise and withdraw to a neighbor.

Displaying BGP4+VRF6 information

You can display the following information about a device's BGP4+ VRF6 feature:

- BGP4+VRF6 neighbor information
- BGP4+VRF6 nexthop information
- BGP4+ VRF6 peer group information
- BGP4+ VRF6 route information
- BGP4+ VRF6 summary information

Displaying BGP4+VRF6 neighbor information

To view BGP4+ configuration information about a specified VRF6's neighbors, enter the following command.

```
Brocade#show ipv6 bgp vrf abc neighbors
Total number of BGP Neighbors: 1
1  IP Address: 3:3:3::3, AS: 100 (IBGP), RouterID: 3.3.3.3, VRF: abc
   State: ESTABLISHED, Time: 0h2m48s, KeepAliveTime: 60, HoldTime: 180
     KeepAliveTimer Expire in 47 seconds, HoldTimer Expire in 120 seconds
   Minimal Route Advertisement Interval: 0 seconds
     UpdateSource: Loopback 1
     RefreshCapability: Received
   Messages:      Open      Update  KeepAlive  Notification  Refresh-Req
     Sent       : 2         0         4           0              0
     Received: 1         1         3           0              0
   Last Update Time: NLRI      Withdraw      NLRI      Withdraw
     Tx: ---      ---      Rx: 0h2m48s  ---
   Last Connection Reset Reason:Unknown
   Notification Sent:      Unspecified
   Notification Received: Unspecified
   Neighbor NLRI Negotiation:
     Peer Negotiated IPV6 unicast capability
     Peer configured for IPV6 unicast Routes
   Neighbor ipv6 MPLS Label Capability Negotiation:
   Neighbor AS4 Capability Negotiation:
   Outbound Policy Group:
     ID: 2, Use Count: 2
   BFD:Disabled
   TCP Connection state: ESTABLISHED, flags:00000044 (0,0)
   Maximum segment size: 1440
   TTL check: 0, value: 0, rcvd: 63
     Byte Sent: 121, Received: 205
```

Syntax: `show ipv6 bgp vrf vrf-name neighbors`

The `vrf-name` parameter specifies the VRF6 name whose neighbor information needs to be displayed.

[Table 126](#) provides information about the command's output.

TABLE 126 BGP4+ VRF6 neighbor information

This field...	Displays...
IP Address	The IP address of the neighbor.
AS	The AS the neighbor is in.
EBGP or IBGP	Whether the neighbor session is an IBGP session, an EBGP session, or a confederation EBGP session: <ul style="list-style-type: none"> • EBGP – The neighbor is in another AS. • EBGP_Confed – The neighbor is a member of another sub-AS in the same confederation. • IBGP – The neighbor is in the same AS.
RouterID	The neighbor's ID.

TABLE 126 BGP4+ VRF6 neighbor information (Continued)

This field...	Displays...
State	<p>The state of the session with the neighbor. The states are from the perspective of this device of the session, not the perspective of the neighbor. The state values are based on the BGP4 state machine values described in RFC 1771 and can be one of the following for each device:</p> <ul style="list-style-type: none"> • IDLE – The BGP4 process is waiting to be started. Usually, enabling BGP4 or establishing a neighbor session starts the BGP4 process. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • ADMND – The neighbor has been administratively shut down. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • CONNECT – BGP4 is waiting for the connection process for the TCP neighbor session to be completed. • ACTIVE – BGP4 is waiting for a TCP connection from the neighbor. <p>NOTE: When the state frequently changes between CONNECT and ACTIVE, there may be a problem with the TCP connection.</p> <ul style="list-style-type: none"> • OPEN SENT – BGP4 is waiting for an Open message from the neighbor. • OPEN CONFIRM – BGP4 has received an OPEN message from the neighbor and is now waiting for either a KEEPALIVE or NOTIFICATION message. When the device receives a KEEPALIVE message from the neighbor, the state changes to Established. When the message is a NOTIFICATION, the state changes to Idle. • ESTABLISHED – BGP4 is ready to exchange UPDATE messages with the neighbor. • When there is more BGP data in the TCP receiver queue, a plus sign (+) is also displayed. <p>NOTE: When the user displays information for the neighbor using the show ip bgp neighbor ip-addr command, the TCP receiver queue value is greater than 0.</p>
Time	The amount of time this session has been in its current state.
KeepAliveTime	The KeeAliveTime, which specifies how often this device sends keep alive messages to the neighbor.
HoldTime	The hold time, which specifies how many seconds the device waits for a KEEPALIVE or UPDATE message from a BGP4 neighbor before deciding that the neighbor is dead.
Messages Sent	<p>The number of messages this device has sent to the neighbor. The display shows statistics for the following message types:</p> <ul style="list-style-type: none"> • Open • Update • KeepAlive • Notification • Refresh-Req
Messages Received	The number of messages this device has received from the neighbor. The message types are the same as for the Message Sent field.
Last Update Time	<p>Lists the last time updates were sent and received for the following:</p> <ul style="list-style-type: none"> • NLRIs • Withdraws

TABLE 126 BGP4+ VRF6 neighbor information (Continued)

This field...	Displays...
Last Connection Reset Reason	<p>The reason the previous session with this neighbor ended. The reason can be one of the following:</p> <ul style="list-style-type: none"> • Reasons described in the BGP specifications: <ul style="list-style-type: none"> • Message Header Error • Connection Not Synchronized • Bad Message Length • Bad Message Type • OPEN Message Error • Unsupported Version Number • Bad Peer AS Number • Bad BGP Identifier • Unsupported Optional Parameter • Authentication Failure • Unacceptable Hold Time • Unsupported Capability • UPDATE Message Error • Malformed Attribute List • Unrecognized Well-known Attribute • Missing Well-known Attribute • Attribute Flags Error • Attribute Length Error • Invalid ORIGIN Attribute • Invalid NEXT_HOP Attribute • Optional Attribute Error • Invalid Network Field • Malformed AS_PATH • Hold Timer Expired • Finite State Machine Error • Rcv Notification
Last Connection Reset Reason (cont.)	<ul style="list-style-type: none"> • Reasons specific to the implementation: <ul style="list-style-type: none"> • Reset All Peer Sessions • User Reset Peer Session • Port State Down • Peer Removed • Peer Shutdown • Peer AS Number Change • Peer AS Confederation Change • TCP Connection KeepAlive Timeout • TCP Connection Closed by Remote • TCP Data Stream Error Detected

TABLE 126 BGP4+ VRF6 neighbor information (Continued)

This field...	Displays...
Notification Sent	<p>When the device receives a NOTIFICATION message from the neighbor, the message contains an error code corresponding to one of the following errors. Some errors have subcodes that clarify the reason for the error. Where applicable, the subcode messages are listed underneath the error code messages.</p> <ul style="list-style-type: none"> • Message Header Error: <ul style="list-style-type: none"> • Connection Not Synchronized • Bad Message Length • Bad Message Type • Unspecified • Open Message Error: <ul style="list-style-type: none"> • Unsupported Version • Bad Peer As • Bad BGP Identifier • Unsupported Optional Parameter • Authentication Failure • Unacceptable Hold Time • Unspecified • Update Message Error: <ul style="list-style-type: none"> • Malformed Attribute List • Unrecognized Attribute • Missing Attribute • Attribute Flag Error • Attribute Length Error • Invalid Origin Attribute • Invalid NextHop Attribute • Optional Attribute Error • Invalid Network Field • Malformed AS Path • Unspecified • Hold Timer Expired • Finite State Machine Error • Cease • Unspecified
Notification Received	See above.
Neighbor NLRI Negotiation	<p>Shows the state of the router's NLRI negotiation with the neighbor. The states can be one of the following:</p> <ul style="list-style-type: none"> • Peer negotiated IPv4 unicast capability • Peer negotiated IPv6 unicast capability • Peer configured for IPv4 unicast routes • Peer configured for IPv6 unicast routes
Neighbor IPv6 MPLS Label Capability Negotiation	<p>Shows the state of the router's IPv6 MPLS label capability negotiation with the neighbor. The states can be one of the following:</p> <ul style="list-style-type: none"> • Peer negotiated IPv6 MPLS Label capability • Peer configured for IPv6 MPLS Label capability
Neighbor AS4 Capability Negotiation	<p>Shows the state of the router's AS4 capability negotiation with the neighbor. The states can be one of the following:</p> <ul style="list-style-type: none"> • Peer negotiated AS4 capability • Peer configured for AS4 capability
Outbound Policy Group	Shows the ID and the count used in the outbound policy group.

TABLE 126 BGP4+ VRF6 neighbor information (Continued)

This field...	Displays...
BFD	Shows whether or not Bidirectional Forwarding Detection (BFD) is enabled on the device.
TCP Connection state	The state of the connection with the neighbor. The connection can have one of the following states: <ul style="list-style-type: none"> • LISTEN – Waiting for a connection request. • SYN-SENT – Waiting for a matching connection request after having sent a connection request. • SYN-RECEIVED – Waiting for a confirming connection request acknowledgment after having both received and sent a connection request. • ESTABLISHED – Data can be sent and received over the connection. This is the normal operational state of the connection. • FIN-WAIT-1 – Waiting for a connection termination request from the remote TCP, or an acknowledgment of the connection termination request previously sent. • FIN-WAIT-2 – Waiting for a connection termination request from the remote TCP. • CLOSE-WAIT – Waiting for a connection termination request from the local user. • CLOSING – Waiting for a connection termination request acknowledgment from the remote TCP. • LAST-ACK – Waiting for an acknowledgment of the connection termination request previously sent to the remote TCP (which includes an acknowledgment of its connection termination request). • TIME-WAIT – Waiting for enough time to pass to be sure the remote TCP received the acknowledgment of its connection termination request. • CLOSED – There is no connection state.
Byte Sent	The number of bytes sent.
Byte Received	The number of bytes received.
Local host	The IP address of the device.
Local port	The TCP port the device is using for the BGP4 TCP session with the neighbor.
Remote host	The IP address of the neighbor.
Remote port	The TCP port the neighbor is using for the BGP4 TCP session with the device.
SentSeq	The initial send sequence number for the session.
SendNext	The next sequence number to be sent.
TotUnAck	The number of sequence numbers sent by the device that have not been acknowledged by the neighbor.
TotSent	The number of sequence numbers sent to the neighbor.
ReTrans	The number of sequence numbers that the device retransmitted because they were not acknowledged.
UnAckSeq	The current acknowledged sequence number.
IRcvSeq	The initial receive sequence number for the session.

TABLE 126 BGP4+ VRF6 neighbor information (Continued)

This field...	Displays...
RcvNext	The next sequence number expected from the neighbor.
SendWnd	The size of the send window.
TotalRcv	The number of sequence numbers received from the neighbor.
DupliRcv	The number of duplicate sequence numbers received from the neighbor.
RcvWnd	The size of the receive window.
SendQue	The number of sequence numbers in the send queue.
RcvQue	The number of sequence numbers in the receive queue.
CngstWnd	The number of times the window has changed.

Displaying BGP4+VRF6 nexthop information

To view BGP4+ VRF6 nexthop information for a specified VRF6, enter the following command.

```
Brocade#show ipv6 bgp vrf abc nexthop
```

```
safi : BGP IPV6 UNICAST SAFI
Type Codes - B:BGP D:Connected I:ISIS L:Local O:OSPF R:RIP S:Static
OSPF Codes - i:Internal 1:External Type 1 2:External Type 2

Next Hop      Type Cost  ResolveSchema  Router IP          Port
3:3:3::3     Oi  2      IPv4/6         fe80::200:ff:fe02:0  eth 1/2
```

Syntax: `show ipv6 bgp vrf vrf-name nexthop`

The *vrf-name* parameter specifies the VRF6 name whose nexthop information needs to be displayed.

[Table 127](#) provides information about the command's output.

TABLE 127 BGP4+ VRF6 nexthop information

This field...	Displays...
safi	Subsequent address family ID.
Type Codes	Type of route.
OSPF Codes	Type of OSPF route
Next Hop	The next-hop IP address.
Type	Type of route.
Cost	Metric of route.
ResolveSchema	Method to resolve nexthop
Router IP	The router IP address.
Port	The port number of the interface.

Displaying BGP4+ VRF6 peer group information

To view BGP4+ VRF6 peer group information for a specified VRF6, enter the following command.

```
Brocade(config-bgp-ipv6u-vrf)#show ipv6 bgp vrf 2 peer-group pgl
1 BGP peer-group is pgl, Remote AS: 200
Address family : IPV4 Unicast
no activate
DefaultOriginate: yes
Address family : IPV4 Multicast
no activate
Address family : IPV6 Unicast
activate
Address family : IPV6 Multicast
no activate
Address family : VPNV4 Unicast
no activate
Address family : VPNV6 Unicast
no activate
Address family : L2VPN VPLS
no activate
Members:
IP Address: 2::2
IP Address: 11::2, AS: 300
```

Syntax: `show ipv6 bgp vrf vrf-name peer-group`

The *vrf-name* parameter specifies the VRF6 name whose nexthop information needs to be displayed.

Displaying BGP4+ VRF6 route information

To display route information for all the VRF6 routes in the device's BGP4+ route table, enter the following command.


```

Brocade#show ipv6 bgp vrf vrf2001 route
Total number of BGP Routes: 13
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
      E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH
m:NOT-INSTALLED-MULTIPATH
      S:SUPPRESSED F:FILTERED s:STALE

```

	Prefix	Next Hop	MED	LocPrf	Weight	Status
1	40:4:1::/64	::	0	100	32768	BL
	AS_PATH:					
2	44:4:1::/64	::ffff:7.7.7.1	0	100	0	BI
	AS_PATH:					
3	44:4:1::/64	::ffff:12.2.1.10	0	100	0	I
	AS_PATH:					
4	44:4:1::/64	::ffff:12.2.1.6	0	100	0	I
	AS_PATH:					
5	44:4:2::/64	::ffff:7.7.7.1	0	100	0	BI
	AS_PATH:					
6	44:4:2::/64	::ffff:12.2.1.10	0	100	0	I
	AS_PATH:					
7	44:4:2::/64	::ffff:12.2.1.6	0	100	0	I
	AS_PATH:					
8	44:5:1::/64	::ffff:7.7.7.1	3	100	0	BI
	AS_PATH:					
9	44:5:1::/64	::ffff:12.2.1.6	3	100	0	I
	AS_PATH:					
10	44:5:1::/64	::ffff:12.2.1.10				

Syntax: show ipv6 bgp vrf vrf-name routes

Displaying BGP4+ information

This field...	Displays...
Total number of BGP Routes	The number of BGP4+ routes the Brocade device has installed in the BGP4 route table.
Status	<p>The route status, which can be one or more of the following:</p> <ul style="list-style-type: none">• A – AGGREGATE. The route is an aggregate route for multiple networks.• B – BEST. BGP4 has determined that this is the optimal route to the destination. <p>NOTE: If the “b” is lowercase, the software was not able to install the route in the IP route table.</p> <ul style="list-style-type: none">• b – NOT-INSTALLED-BEST. The routes received from the neighbor are the best BGP4 routes to their destinations, but were not installed in the IP route table because the device received better routes from other sources (such as OSPF, RIP, or static IP routes).• C – CONFED_EBGP. The route was learned from a neighbor in the same confederation and AS, but in a different sub-AS within the confederation.• D – DAMPED. This route has been dampened (by the route dampening feature), and is currently unusable.• H – HISTORY. Route dampening is configured for this route, and the route has a history of flapping and is unreachable now.• I – INTERNAL. The route was learned through BGP4.• L – LOCAL. The route originated on this device.• M – MULTIPATH. BGP4 load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with “B”. <p>NOTE: If the “m” is lowercase, the software was not able to install the route in the IP route table.</p> <ul style="list-style-type: none">• S – SUPPRESSED. This route was suppressed during aggregation and thus is not advertised to neighbors.
Prefix	The IP address and network mask of the destination network of the route.
AS_PATH	The BGP AS_PATH path attribute.
Next Hop	The IP address of the next-hop router.
MED	The Multi-exit Discriminator (MED) associated with the route. The MED applies to routes that have multiple paths through the same AS. The best route is the route with the lowest MED.
LocPrf	The degree of preference for this route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 – 4294967295.
Weight	The value that this route associates with routes from a specific neighbor. For example, if the Brocade device receives routes to the same destination from two BGP4 neighbors, the device prefers the route from the neighbor with the larger weight.
Status	The route's status. Refer to “ Status ” on page 590.

Displaying BGP4+ VRF6 summary information

To display summary statistics for all the VRF6 routes in the device's BGP4+ route table for a specified VRF, enter the following command.

```

Brocade#show ipv6 bgp vrf abc summary
  BGP4 Summary
Router ID: 1.1.1.1   Local AS Number: 100
Confederation Identifier: not configured
Confederation Peers:
Maximum Number of IP ECMP Paths Supported for Load Sharing: 1
Number of Neighbors Configured: 1, UP: 1
Number of Routes Installed: 3, Uses 258 bytes
Number of Routes Advertising to All Neighbors: 0 (0 entries)
Number of Attribute Entries Installed: 1, Uses 90 bytes
Neighbor Address  AS#      State   Time     Rt:Accepted Filtered Sent
ToSend
  3:3:3::3        100     ESTAB   0h15m23s  3       0       0
    
```

Syntax: `show ipv6 bgp vrf vrf-name summary`

The *vrf-name* parameter specifies the VRF6 name whose summary information needs to be displayed.

Table 128 provides information about the command’s output.

TABLE 128 BGP4+ VRF6 nexthop information

This field...	Displays...
Router ID	The device’s ID.
Local AS Number	The BGP4+ AS number for the device.
Confederation Identifier	The AS number of the confederation in which the device resides.
Confederation Peers	The numbers of the local ASs contained in the confederation. This list matches the confederation peer list you configure on the device.
Maximum Number of IP ECMP Path Supported for Load Sharing	The maximum number of IP ECMP route paths across which the device can balance traffic to the same destination.
Number of Neighbors Configured	The number of BGP4+ neighbors configured on this device, and currently in established state.
Number of Routes Installed	The number of BGP4+ routes in the device BGP4 route table and the route or path memory usage.
Number of Routes Advertising to All Neighbors	The total of the RtSent and RtToSend columns for all neighbors, the total number of unique ribout group entries, and the amount of memory used by these groups.
Number of Attribute Entries Installed	The number of BGP4+ route-attribute entries in the device route-attributes table and the amount of memory used by these entries.
Neighbor Address	The IP addresses of the BGP4 neighbors for this device.
AS#	The AS number.

TABLE 128 BGP4+ VRF6 nexthop information (Continued)

This field...	Displays...
State	<p>The state of the session with the neighbor. The states are from the perspective of this device of the session, not the perspective of the neighbor. The state values are based on the BGP4 state machine values described in RFC 1771 and can be one of the following for each device:</p> <ul style="list-style-type: none"> • IDLE – The BGP4 process is waiting to be started. Usually, enabling BGP4 or establishing a neighbor session starts the BGP4 process. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • ADMND – The neighbor has been administratively shut down. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • CONNECT – BGP4 is waiting for the connection process for the TCP neighbor session to be completed. • ACTIVE – BGP4 is waiting for a TCP connection from the neighbor. <p>NOTE: When the state frequently changes between CONNECT and ACTIVE, there may be a problem with the TCP connection.</p> <ul style="list-style-type: none"> • OPEN SENT – BGP4 is waiting for an Open message from the neighbor. • OPEN CONFIRM – BGP4 has received an OPEN message from the neighbor and is now waiting for either a KEEPALIVE or NOTIFICATION message. When the device receives a KEEPALIVE message from the neighbor, the state changes to Established. When the message is a NOTIFICATION, the state changes to Idle. • ESTABLISHED – BGP4 is ready to exchange UPDATE messages with the neighbor. • When there is more BGP data in the TCP receiver queue, a plus sign (+) is also displayed.
Time	The time that has passed since the state last changed.
Accepted	The number of routes received from the neighbor that this device installed in the BGP4 route table. Usually, this number is lower than the RoutesRcvd number. The difference indicates that this device filtered out some of the routes received in the UPDATE messages.
Filtered	The routes or prefixes that have been filtered out.
Sent	The number of BGP4 routes the device has sent to the neighbor.
ToSend	The number of routes the device has queued to advertise and withdraw to a neighbor.

Configuring BGP4+ graceful restart

BGP4+ Graceful Restart (GR) can be configured for a global routing instance or for a specified Virtual Routing and Forwarding (VRF) instance. The following sections describe how to enable the BGP4+ Graceful Restart feature.

NOTE

Graceful restart is not supported for multicast. Only IPv4 and IPv6 are supported.

BGP4+ Graceful Restart is fully supported by Brocade MLX series and Brocade NetIron XMR devices. The Brocade NetIron CER and Brocade NetIron CES devices only support helper mode.

BGP4+ Graceful Restart can be executed in both IPv4 and IPv6 address families. Depending on the remote neighbor address family, the command and its parameters will be taken from the IPv4 family or IPv6 family.

When the **graceful restart** command is enabled, the BGP graceful restart capability is negotiated with neighbors in the BGP OPEN message when the session is established. If the neighbor also advertises support for graceful restart, then graceful restart is activated for that neighbor session. If the neighbor does not advertise support for graceful restart, then graceful restart is not activated for that neighbor session even though it is enabled locally. If the neighbor has not sent graceful restart parameters, the restarting router will not wait for the neighbor to start route-calculation, but graceful restart will be enabled.

Configuring BGP4+ graceful restart for the global routing instance

Use the following command to enable the BGP4+ graceful restart feature globally on a device.

```
Brocade(config)# router bgp
Brocade(config-bgp)# graceful-restart
```

Syntax: [no] graceful-restart

Configuring BGP4+ graceful restart on IPv4 VRF

Use the following command to enable the BGP4 restart feature for a specified VRF.

```
Brocade(config)# router bgp
Brocade(config-bgp)# address-family ipv4 unicast vrf blue
Brocade(config-bgp-ipv4u-vrf)# graceful-restart
```

Syntax: [no] graceful-restart

Configuring timers for BGP4+ graceful restart (optional)

You can optionally configure the following timers to change their values from the default values:

- Restart Timer
- Stale Routes Timer
- Purge Timer

Configuring the restart timer for BGP4+ graceful restart

Use the following command to specify the maximum amount of time a device will maintain routes from and forward traffic to a restarting device.

```
Brocade(config-bgp)# graceful-restart restart-timer 150
```

Syntax: [no] graceful-restart restart-timer *seconds*

The *seconds* variable sets the maximum restart wait time advertised to neighbors. The allowable range is 1 to 3600 seconds. The default value is 120 seconds.

Configuring BGP4+ graceful restart stale routes timer

Use the following command to specify the maximum amount of time a helper device will wait for an end-of-RIB message from a peer before deleting routes from that peer.

Configuring BGP4+ graceful restart

```
Brocade(config-bgp)# graceful-restart stale-routes-time 120
```

Syntax: [no] graceful-restart stale-routes-time seconds

The *seconds* variable sets the maximum time before a helper device cleans up stale routes. The allowable range is 1 to 3600 seconds. The default value is 360 seconds.

Configuring BGP4+ graceful restart purge timer

Use the following command to specify the maximum amount of time a device will maintain stale routes in its routing table before purging them.

```
Brocade(config-bgp)# graceful-restart purge-time 900
```

Syntax: [no] graceful-restart purge-time seconds

The *seconds* variable sets the maximum time before a restarting device cleans up stale routes. The allowable range is 1 to 3600 seconds. The default value is 600 seconds.

For information about displaying BGP4 restart neighbor information, refer to [“Displaying BGP4+ graceful restart neighbor information”](#) on page 594.

Displaying BGP4+ graceful restart neighbor information

To display BGP4+ graceful restart information for BGP4 and BGP4+ neighbors, enter the **show ip bgp neighbors** command.

```
Brocade# show ip bgp neighbors
Total number of BGP Neighbors: 6
1  IP Address: 10.50.50.10, AS: 20 (EBGP), RouterID: 10.10.10.20, VRF: default
   State: ESTABLISHED, Time: 0h0m18s, KeepAliveTime: 60, HoldTime: 180
     KeepAliveTimer Expire in 34 seconds, HoldTimer Expire in 163 seconds
     Minimum Route Advertisement Interval: 0 seconds
     RefreshCapability: Received
     GracefulRestartCapability: Received
       Restart Time 120 sec, Restart bit 0
       afi/safi 1/1, Forwarding bit 0
     GracefulRestartCapability: Sent
       Restart Time 120 sec, Restart bit 0
       afi/safi 1/1, Forwarding bit 1
   Messages:    Open    Update  KeepAlive Notification Refresh-Req
```

The text in bold is the BGP4 restart information for the specified neighbor.

Commands

The following commands support the features described in this chapter:

- `address-family ipv6 unicast vrf`
- `address-family vpnv6 unicast`
- `clear ip bgp vpnv6 neighbor`
- `clear ipv6 bgp vrf`
- `neighbor capability orf`
- `neighbor remote-as`
- `show ip bgp vpnv6 neighbors`
- `show ip bgp vpnv6 routes`
- `show ip bgp vpnv6 summary`
- `show ip bgp vpnv6 tags`
- `show ipv6 bgp vrf neighbors`
- `show ipv6 bgp vrf nexthop`
- `show ipv6 bgp vrf peer-group`
- `show ipv6 bgp vrf routes`
- `show ipv6 bgp vrf summary`

address-family ipv6 unicast vrf

Configures the BGP commands for a specific VRF neighbor.

Syntax	address-family ipv6 unicast vrf <i>vrf-name</i>	
Command Default	None	
Parameters	<i>vrf-name</i>	The vrf option allows you to configure a unicast instance for the VRF specified by the vrf-name variable.
Command Modes	BGP interface configuration mode	
Usage Guidelines	The address-family ipv6 unicast vrf command is used to configure the BGP commands for a specific VRF neighbor.	
Examples	The following example explains how to configure address-family for vpnv6 unicast.	
	<pre> Brocade(config-bgp)#address-family vpnv6 unicast Brocade(config-bgp-vpnv6u)#? address-family Enter Address Family command mode bfd Set BFD global parameters for BGP4 bfd-enable Enable BFD for BGP4 clear Clear table/statistics/keys cls Clear screen end End Configuration level and go to Privileged level exit Exit current level exit-address-family Exit Address Family command mode neighbor Specify a neighbor router no Undo/disable commands quit Exit to User level rr-group Partition the network by forming RR groups show Display system information write Write running configuration to flash or terminal </pre>	
	Release	Command History
	<i>Multi-Service IronWare R05.5.00</i>	This command was introduced.
Related Commands	clear ipv6 bgp vrf	

address-family vpnv6 unicast

Configures the IPv6 address family and allows BGP peers to accept the address family-specific configuration.

Syntax	address-family vpnv6 unicast
Command Default	None
Parameters	None
Command Modes	BGP interface configuration mode
Usage Guidelines	The address-family vpnv6 unicast command is used to configure the IPv6 address family and for BGP peers to accept address family specific configuration.
Examples	<p>The following example explains how to configure address-family for vpnv6 unicast.</p> <pre> Brocade(config-bgp)#address-family vpnv6 unicast Brocade(config-bgp-vpnv6u)#? address-family Enter Address Family command mode bfd Set BFD global parameters for BGP4 bfd-enable Enable BFD for BGP4 clear Clear table/statistics/keys cls Clear screen end End Configuration level and go to Privileged level exit Exit current level exit-address-family Exit Address Family command mode neighbor Specify a neighbor router no Undo/disable commands quit Exit to User level rr-group Partition the network by forming RR groups show Display system information write Write running configuration to flash or terminal </pre>
Release	Command History
	<i>Multi-Service IronWare R05.5.00</i> This command was introduced.
Related Commands	<p>neighbor ipv4-address remote-as as-number activate</p> <p>neighbor capability orf</p> <p>clear ip bgp vpnv6 neighbor</p>

clear ip bgp vpnv6 neighbor

clear ip bgp vpnv6 neighbor

Clears the information specific to BGP VPNv6 neighbors

Syntax	clear ip bgp vpnv6 neighbor { <i>as-number</i> { soft soft-outbound } <i>ip-address</i> { soft soft-outbound } all { soft soft-outbound } }
Command Default	None
Parameters	<i>as-number</i> neighbors with the AS number <i>ip-address</i> Neighbor IP address all Clears all BGP neighbors soft Soft reconfiguration soft-outbound Soft reconfiguration outbound update, and send only updated routes
Command Modes	Global configuration mode
Usage Guidelines	Use the clear ip bgp vpnv6 neighbor command to clear information specific to BGP VPNv6 neighbors.

NOTE

The **clear ip bgp vpnv6 neighbor** command does not support *damped-path* and *flap-statistics* options for VPNv4 and VPNv6 address families.

Examples The following example explains how to clear BGP VPNv6 neighbor information.

```
Brocade(config-bgp)#clear ip bgp vpnv6
```

Release

Command History

Multi-Service IronWare R05.5.00 This command was introduced.

Related Commands	address-family vpnv6 neighbor ipv4-address remote-as as-number activate neighbor capability orf
-------------------------	--

clear ipv6 bgp vrf

Clears IPV6 neighbor information for a specific VRF

Syntax `clear ipv6 bgp local [routes]`

Command Default None

Parameters

routes	Clears local route information
local	Clears local information

Command Modes Global configuration mode

Usage Guidelines The **clear ipv6 bgp local** command clears the local route information for IPv6 neighbor for a specific VPN routing/ forwarding instance.

Examples The following **clear** commands are provided with the VRF option.

```
Brocade(config)#clear ipv6 bgp red
```

Release**Command History**

Multi-Service IronWare R05.5.00 This command was introduced.

Related Commands `address-family ipv6 unicast vrf vrf-name`

neighbor capability orf

neighbor capability orf

Configures outbound route filtering capability to neighbor.

Syntax	neighbor <i>ipv4-address</i> capability orf { prefixlist [receive send] extendedcommunity [receive send-vrf-filter] }
	neighbor <i>ipv6-address</i> capability orf { prefixlist [receive send] extendedcommunity [receive send-vrf-filter] }
	neighbor <i>name</i> capability orf { prefixlist [receive send] }
Command Default	None
Parameters	<i>ipv4-address</i> Neighbor IPv4 address <i>ipv6-address</i> Neighbor IPv6 address <i>name</i> Peer group name capability Advertise capability to the peer orf Advertise ORF capability to the peer prefixlist Advertise prefix list ORF capability to this neighbor extendedcommunity Advertise extended-community ORF capability to this neighbor receive Capability to receive the ORF from this neighbor send Capability to send the ORF to this neighbor send-vrf-filter Capability to send the ORF (local VRF route targets) to this neighbor
Command Modes	BGP interface configuration mode
Usage Guidelines	The neighbor ipv4 address capability orf command configures the outbound route filtering capability to the neighbor.
Examples	<p>The following example explains configuration for advertising prefix list ORF capability to this neighbor.</p> <pre>Brocade(config)#router bgp Brocade(config-bgp)#address-family vpnv6 unicast Brocade(config-bgp-vpnv6u)#neighbor 10.10.10.1 capability orf prefixlist ? receive Capability to RECEIVE the ORF from this neighbor send Capability to SEND the ORF to this neighbor <cr Brocade(config-bgp-vpnv6u)#neighbor 10.10.10.1 capability orf prefixlist receive</pre> <p>The following example explains configuration for advertising extended-community ORF capability to this neighbor.</p> <pre>Brocade(config)#router bgp Brocade(config-bgp)#address-family vpnv6 unicast Brocade(config-bgp-vpnv6u)#neighbor 1.1::1.1 capability orf extended-community ? receive Capability to RECEIVE the ORF from this neighbor send-vrf-filter Capability to SEND the ORF (local VRF route targets) to</pre>

this neighbor

```
Brocade(config-bgp-vpn6)#neighbor 1.1::1.1 capability orf extended-community
send-vrf-filter
```

The following example explains configuring outbound route filtering capability to peers.

```
Brocade(config)#router bgp
Brocade(config-bgp)#address-family vpn6 unicast
Brocade(config-bgp-vpn6)#neighbor blue capability orf prefixlist ?
receive    Capability to RECEIVE the ORF from this neighbor
  send      Capability to SEND the ORF to this neighbor
  <cr>
Brocade(config-bgp-vpn6)#neighbor blue capability orf prefixlist send
```

History

Release	Command History
---------	-----------------

Multi-Service IronWare R05.5.00	This command was introduced.
---------------------------------	------------------------------

Related Commands

address-family vpn6
neighbor ipv4-address remote-as as-number
clear ip bgp vpn6 neighbor

neighbor remote-as

neighbor remote-as

Configures the neighbor router in the VPNv6 unicast address family.

Syntax `neighbor ipv4-address remote-as as-number`

Command Default None

Parameters

<code>ipv4-address</code>	Neighbor IP address
<code>remote-as</code>	Specifies a BGP neighbor
<code>as-number</code>	AS number of a remote neighbor

Command Modes Global configuration mode

Usage Guidelines The **neighbor remote-as** command is used to configure neighbor router in VPNv6 unicast address family. Only IPv4 neighbors are supported.

Examples The following example explains how to configure neighbor router in VPNv6 unicast address family.

```
Brocade(config-bgp-vpn6)#neighbor 10.0.0.1 remote-as 100
```

History

Release	Command History
Multi-Service IronWare R05.5.00	This command was introduced.

Related Commands

- `address-family vpnv6`
- `neighbor capability orf`
- `clear ip bgp vpnv6 neighbor`

show ip bgp vpnv6 neighbors

Displays BGP4+ configuration information for IPv4 neighbors

Syntax `show ip bgp vpnv6 neighbors`

Parameters None

Command Modes Privileged EXEC mode

Usage Guidelines The `show ip bgp vpnv6 neighbors` command displays BGP4+ configuration information and statistics for IPv4 neighbors with VPNv6 capability negotiated.

Command Output The `show ip bgp vpnv6 neighbors` command displays the following information:

Output field	Description
IP Address	The IP address of the neighbor.
AS	The AS the neighbor is in.
EBGP or IBGP	Whether the neighbor session is an IBGP session, an EBGP session, or a confederation EBGP session: <ul style="list-style-type: none"> • EBGP – The neighbor is in another AS. • EBGP_Confed – The neighbor is a member of another sub-AS in the same confederation. • IBGP – The neighbor is in the same AS.
RouterID	The neighbor's ID.
State	The state of the session with the neighbor. The states are from the perspective of this device of the session, not the perspective of the neighbor. The state values are based on the BGP4 state machine values described in RFC 1771 and can be one of the following for each device: <ul style="list-style-type: none"> • IDLE – The BGP4 process is waiting to be started. Usually, enabling BGP4 or establishing a neighbor session starts the BGP4 process. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • ADMND – The neighbor has been administratively shut down. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • CONNECT – BGP4 is waiting for the connection process for the TCP neighbor session to be completed. • ACTIVE – BGP4 is waiting for a TCP connection from the neighbor. <p>NOTE: When the state frequently changes between CONNECT and ACTIVE, there may be a problem with the TCP connection.</p> <ul style="list-style-type: none"> • OPEN SENT – BGP4 is waiting for an Open message from the neighbor. • OPEN CONFIRM – BGP4 has received an OPEN message from the neighbor and is now waiting for either a KEEPALIVE or NOTIFICATION message. When the device receives a KEEPALIVE message from the neighbor, the state changes to Established. When the message is a NOTIFICATION, the state changes to Idle. • ESTABLISHED – BGP4 is ready to exchange UPDATE messages with the neighbor. • When there is more BGP data in the TCP receiver queue, a plus sign (+) is also displayed. <p>NOTE: When the user displays information for the neighbor using the <code>show ip bgp neighbor ip-addr</code> command, the TCP receiver queue value is greater than 0.</p>

show ip bgp vpv6 neighbors

Output field	Description
Time	The amount of time this session has been in its current state.
KeepAliveTime	The KeeAliveTime, which specifies how often this device sends keep alive messages to the neighbor.
HoldTime	The hold time, which specifies how many seconds the device waits for a KEEPALIVE or UPDATE message from a BGP4 neighbor before deciding that the neighbor is dead.
Minimal Route Advertisement Interval	The minimum time elapse between route advertisements to the same neighbor.
RefreshCapability	Indicates whether this Brocade device has received confirmation from the neighbor that the neighbor supports the dynamic refresh capability.
SendExtenedCommunity:	Capability to send extended community route targets to peer for filtering.
Messages Sent	The number of messages this device has sent to the neighbor. The display shows statistics for the following message types: <ul style="list-style-type: none">• Open• Update• KeepAlive• Notification• Refresh-Req
Messages Received	The number of messages this device has received from the neighbor. The message types are the same as for the Message Sent field.
Last Update Time	Lists the last time updates were sent and received for the following: <ul style="list-style-type: none">• NLRIs• Withdraws

Output field	Description
Last Connection Reset Reason	<p>The reason the previous session with this neighbor ended. The reason can be one of the following:</p> <ul style="list-style-type: none"> • Reasons described in the BGP specifications: <ul style="list-style-type: none"> • Message Header Error • Connection Not Synchronized • Bad Message Length • Bad Message Type • OPEN Message Error • Unsupported Version Number • Bad Peer AS Number • Bad BGP Identifier • Unsupported Optional Parameter • Authentication Failure • Unacceptable Hold Time • Unsupported Capability • UPDATE Message Error • Malformed Attribute List • Unrecognized Well-known Attribute • Missing Well-known Attribute • Attribute Flags Error • Attribute Length Error • Invalid ORIGIN Attribute • Invalid NEXT_HOP Attribute • Optional Attribute Error • Invalid Network Field • Malformed AS_PATH • Hold Timer Expired • Finite State Machine Error • Rcv Notification
Last Connection Reset Reason (cont.)	<ul style="list-style-type: none"> • Reasons specific to the implementation: <ul style="list-style-type: none"> • Reset All Peer Sessions • User Reset Peer Session • Port State Down • Peer Removed • Peer Shutdown • Peer AS Number Change • Peer AS Confederation Change • TCP Connection KeepAlive Timeout • TCP Connection Closed by Remote • TCP Data Stream Error Detected

show ip bgp vpnv6 neighbors

Output field	Description
Notification Sent	<p>When the device receives a NOTIFICATION message from the neighbor, the message contains an error code corresponding to one of the following errors. Some errors have subcodes that clarify the reason for the error. Where applicable, the subcode messages are listed underneath the error code messages.</p> <ul style="list-style-type: none">• Message Header Error:<ul style="list-style-type: none">• Connection Not Synchronized• Bad Message Length• Bad Message Type• Unspecified• Open Message Error:<ul style="list-style-type: none">• Unsupported Version• Bad Peer As• Bad BGP Identifier• Unsupported Optional Parameter• Authentication Failure• Unacceptable Hold Time• Unspecified• Update Message Error:<ul style="list-style-type: none">• Malformed Attribute List• Unrecognized Attribute• Missing Attribute• Attribute Flag Error• Attribute Length Error• Invalid Origin Attribute• Invalid NextHop Attribute• Optional Attribute Error• Invalid Network Field• Malformed AS Path• Unspecified• Hold Timer Expired• Finite State Machine Error• Cease• Unspecified
Notification Received	See above.
Neighbor NLRI Negotiation	<p>Shows the state of the router's NLRI negotiation with the neighbor. The states can be one of the following:</p> <ul style="list-style-type: none">• Peer negotiated IPv4 unicast capability• Peer negotiated IPv6 unicast capability• Peer configured for IPv4 unicast routes• Peer configured for IPv6 unicast routes
Neighbor IPv6 MPLS Label Capability Negotiation	<p>Shows the state of the router's IPv6 MPLS label capability negotiation with the neighbor. The states can be one of the following:</p> <ul style="list-style-type: none">• Peer negotiated IPv6 MPLS Label capability• Peer configured for IPv6 MPLS Label capability
Neighbor AS4 Capability Negotiation	<p>Shows the state of the router's AS4 capability negotiation with the neighbor. The states can be one of the following:</p> <ul style="list-style-type: none">• Peer negotiated AS4 capability• Peer configured for AS4 capability
Outbound Policy Group	Shows the ID and the count used in the outbound policy group.

Output field	Description
TCP Connection state	<p>The state of the connection with the neighbor. The connection can have one of the following states:</p> <ul style="list-style-type: none"> • LISTEN – Waiting for a connection request. • SYN-SENT – Waiting for a matching connection request after having sent a connection request. • SYN-RECEIVED – Waiting for a confirming connection request acknowledgment after having both received and sent a connection request. • ESTABLISHED – Data can be sent and received over the connection. This is the normal operational state of the connection. • FIN-WAIT-1 – Waiting for a connection termination request from the remote TCP, or an acknowledgment of the connection termination request previously sent. • FIN-WAIT-2 – Waiting for a connection termination request from the remote TCP. • CLOSE-WAIT – Waiting for a connection termination request from the local user. • CLOSING – Waiting for a connection termination request acknowledgment from the remote TCP. • LAST-ACK – Waiting for an acknowledgment of the connection termination request previously sent to the remote TCP (which includes an acknowledgment of its connection termination request). • TIME-WAIT – Waiting for enough time to pass to be sure the remote TCP received the acknowledgment of its connection termination request. • CLOSED – There is no connection state.
Byte Sent	The number of bytes sent.
Byte Received	The number of bytes received.
Local host	The IP address of the device.
Local port	The TCP port the device is using for the BGP4 TCP session with the neighbor.
Remote host	The IP address of the neighbor.
Remote port	The TCP port the neighbor is using for the BGP4 TCP session with the device.
SentSeq	The initial send sequence number for the session.
SendNext	The next sequence number to be sent.
TotUnAck	The number of sequence numbers sent by the device that have not been acknowledged by the neighbor.
TotSent	The number of sequence numbers sent to the neighbor.
ReTrans	The number of sequence numbers that the device retransmitted because they were not acknowledged.
UnAckSeq	The current acknowledged sequence number.
IRcvSeq	The initial receive sequence number for the session.
RcvNext	The next sequence number expected from the neighbor.
SendWnd	The size of the send window.
TotalRcv	The number of sequence numbers received from the neighbor.
DupliRcv	The number of duplicate sequence numbers received from the neighbor.
RcvWnd	The size of the receive window.
SendQue	The number of sequence numbers in the send queue.
RcvQue	The number of sequence numbers in the receive queue.
CngstWnd	The number of times the window has changed.

show ip bgp vpnv6 neighbors

Examples The following example displays BGP4+ neighbor information:

```
Brocade(config-bgp-vpnv4u)#show ip bgp vpnv6 neighbors
1 IP Address: 40.0.0.4, AS: 100 (IBGP), RouterID: 4.4.4.4, VRF: default-vrf
  State: ESTABLISHED, Time: 0h4m1s, KeepAliveTime: 60, HoldTime: 180
    KeepAliveTimer Expire in 31 seconds, HoldTimer Expire in 149 seconds
  Minimal Route Advertisement Interval: 0 seconds
  RefreshCapability: Received
  Address Family : VPNV6 Unicast
  SendExtendedCommunity: yes
  Messages:      Open      Update  KeepAlive  Notification  Refresh-Req
    Sent       : 1         0       5           0              0
    Received: 1         0       5           0              0
  Last Update Time: NLRI      Withdraw      NLRI      Withdraw
                  Tx: ---      ---          Rx: ---      ---
  Last Connection Reset Reason:Unknown
  Notification Sent:      Unspecified
  Notification Received: Unspecified
  Neighbor NLRI Negotiation:
    Peer Negotiated VPNv6 unicast capability
    Peer configured for VPNv6 unicast Routes
  Neighbor ipv6 MPLS Label Capability Negotiation:
  Neighbor AS4 Capability Negotiation:
  Outbound Policy Group:
    ID: 6, Use Count: 1
  TCP Connection state: ESTABLISHED, flags:00000033 (0,0)
  Maximum segment size: 1460
  TTL check: 0, value: 0, rcvd: 64
  Byte Sent: 140, Received: 140
  Local host: 40.0.0.2, Local Port: 8142
  Remote host: 40.0.0.4, Remote Port: 179
  ISentSeq: 1305546854 SendNext: 1305546995 TotUnAck: 0
  TotSent: 141 ReTrans: 0 UnAckSeq: 1305546995
```

History

Release

Command History

Multi-Service IronWare R05.5.00 This command was introduced.

Related Commands

show ip bgp vpnv6 routes

show ip bgp vpnv6 tags

show ip bgp vpnv6 summary

show ip bgp vpnv6 routes

Displays the BGP4+ VPNv6 routing table information for IPv4 neighbors

Syntax	show ip bgp vpnv6 routes
Parameters	None
Command Modes	Privileged EXEC mode
Usage Guidelines	The show ip bgp vpnv6 routes command displays the BGP4+ VPNv6 routing table information for IPv4 neighbors.
Command Output	The show ip bgp vpnv6 routes command displays the following information:

Output field	Description
Total number of BGP Routes	The number of BGP4+ routes the Brocade device has installed in the BGP4 route table.
Status	<p>The route status, which can be one or more of the following:</p> <ul style="list-style-type: none"> • A – AGGREGATE. The route is an aggregate route for multiple networks. • B – BEST. BGP4 has determined that this is the optimal route to the destination. <p>NOTE: If the “b” is lowercase, the software was not able to install the route in the IP route table.</p> <ul style="list-style-type: none"> • b – NOT-INSTALLED-BEST. The routes received from the neighbor are the best BGP4 routes to their destinations, but were not installed in the IP route table because the device received better routes from other sources (such as OSPF, RIP, or static IP routes). • C – CONFED_EBGP. The route was learned from a neighbor in the same confederation and AS, but in a different sub-AS within the confederation. • D – DAMPED. This route has been dampened (by the route dampening feature), and is currently unusable. • H – HISTORY. Route dampening is configured for this route, and the route has a history of flapping and is unreachable now. • I – INTERNAL. The route was learned through BGP4. • L – LOCAL. The route originated on this device. • M – MULTIPATH. BGP4 load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with “B”. <p>NOTE: If the “m” is lowercase, the software was not able to install the route in the IP route table.</p> <ul style="list-style-type: none"> • S – SUPPRESSED. This route was suppressed during aggregation and thus is not advertised to neighbors.
Prefix	The IP address and network mask of the destination network of the route.
AS_PATH	The BGP AS_PATH path attribute.
Next Hop	The IP address of the next-hop router.
MED	The Multi-exit Discriminator (MED) associated with the route. The MED applies to routes that have multiple paths through the same AS. The best route is the route with the lowest MED.

show ip bgp vpnv6 routes

Output field	Description
LocPrf	The degree of preference for this route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 – 4294967295.
Weight	The value that this route associates with routes from a specific neighbor. For example, if the Brocade device receives routes to the same destination from two BGP4 neighbors, the device prefers the route from the neighbor with the larger weight.
Status	The route's status. Refer to "Status".

Examples The following example displays BGP4+ VPNv6 route information:

```

Brocade#(config-mpls-if-e1000-2/5)#show ip bgp vpnv6 routes
Total number of BGP Routes: 4
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH m:NOT-INSTALLED-MULTIPATH
S:SUPPRESSED F:FILTERED s:STALE
  Prefix      Next Hop      MED      LocPrf      Weight Status
Route Distinguisher: 1:1
1      10::41/128    ::FFFF:40:0:0:2    3          100         0          I
   AS_PATH:
2      30::/64      ::FFFF:40:0:0:2    3          100         0          I
   AS_PATH:
3      40::/64      ::FFFF:40:0:0:2    3          100         0          I
   AS_PATH:
4      100::/64     ::FFFF:40:0:0:2    3          100         0          I
   AS_PATH:

```

History

Release	Command History
Multi-Service IronWare R05.5.00	This command was introduced.

Related Commands

- show ip bgp vpnv6 neighbors
- show ip bgp vpnv6 tags
- show ip bgp vpnv6 summary

show ip bgp vpnv6 summary

Displays the BGP4+ VPNv6 overall information

Syntax `show ip bgp vpnv6 summary`

Parameters None

Command Modes Privileged EXEC mode

Usage Guidelines The `show ip bgp vpnv6 summary` command displays the BGP4+ VPNv6 overall information.

Command Output The `show ip bgp vpnv6 summary` command displays the following information:

Output field	Description
Router ID	The device's ID.
Local AS Number	The BGP4+ AS number for the device.
Confederation Identifier	The AS number of the confederation in which the device resides.
Confederation Peers	The numbers of the local ASs contained in the confederation. This list matches the confederation peer list you configure on the device.
Maximum Number of IP ECMP Path Supported for Load Sharing	The maximum number of IP ECMP route paths across which the device can balance traffic to the same destination.
Number of Neighbors Configured	The number of BGP4+ neighbors configured on this device, and currently in established state.
Number of Routes Installed	The number of BGP4+ routes in the device BGP4 route table and the route or path memory usage.
Number of Routes Advertising to All Neighbors	The total of the RtSent and RtToSend columns for all neighbors, the total number of unique ribout group entries, and the amount of memory used by these groups.
Number of Attribute Entries Installed	The number of BGP4+ route-attribute entries in the device route-attributes table and the amount of memory used by these entries.
Neighbor Address	The IP addresses of the BGP4 neighbors for this device.
AS#	The AS number.

show ip bgp vpnv6 summary

Output field	Description
State	<p>The state of the session with the neighbor. The states are from the perspective of this device of the session, not the perspective of the neighbor. The state values are based on the BGP4 state machine values described in RFC 1771 and can be one of the following for each device:</p> <ul style="list-style-type: none"> • IDLE – The BGP4 process is waiting to be started. Usually, enabling BGP4 or establishing a neighbor session starts the BGP4 process. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • ADMND – The neighbor has been administratively shut down. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • CONNECT – BGP4 is waiting for the connection process for the TCP neighbor session to be completed. • ACTIVE – BGP4 is waiting for a TCP connection from the neighbor. <p>NOTE: When the state frequently changes between CONNECT and ACTIVE, there may be a problem with the TCP connection.</p> <ul style="list-style-type: none"> • OPEN SENT – BGP4 is waiting for an Open message from the neighbor. • OPEN CONFIRM – BGP4 has received an OPEN message from the neighbor and is now waiting for either a KEEPALIVE or NOTIFICATION message. When the device receives a KEEPALIVE message from the neighbor, the state changes to Established. When the message is a NOTIFICATION, the state changes to Idle. • ESTABLISHED – BGP4 is ready to exchange UPDATE messages with the neighbor. • When there is more BGP data in the TCP receiver queue, a plus sign (+) is also displayed.
Time	The time that has passed since the state last changed.
Accepted	The number of routes received from the neighbor that this device installed in the BGP4 route table. Usually, this number is lower than the RoutesRcvd number. The difference indicates that this device filtered out some of the routes received in the UPDATE messages.
Filtered	The routes or prefixes that have been filtered out.
Sent	The number of BGP4 routes the device has sent to the neighbor.
ToSend	The number of routes the device has queued to advertise and withdraw to a neighbor.

Examples The following example displays BGP4+ summary information:

```

Brocade(config-bgp-ipv4u-vrf)#show ip bgp vpnv6 summary
BGP4 Summary
Router ID: 2.2.2.2   Local AS Number: 100
Confederation Identifier: not configured
Confederation Peers:
Maximum Number of IP ECMP Paths Supported for Load Sharing: 1
Number of Neighbors Configured: 2, UP: 1
Number of Routes Installed: 0
Number of Routes Advertising to All Neighbors: 2 (2 entries), Uses 96 bytes
Number of Attribute Entries Installed: 1, Uses 90 bytes
Neighbor Address  AS#           State      Time      Rt:Accepted Filtered Sent
ToSend
20.0.0.3         100          ESTAB     1h42m 5s   0         0         0         1
40.0.0.4         100          ESTAB     0h28m57s  0         0         1         0
  
```


History

Release

Command History

Multi-Service IronWare R05.5.00 This command was introduced.

**Related
Commands**

show ip bgp vpnv6 neighbors

show ip bgp vpnv6 routes

show ip bgp vpnv6 tags

show ip bgp vpnv6 tags

show ip bgp vpnv6 tags

Displays the BGP4+ route label information for IPv4 neighbors

Syntax show ip bgp vpnv6 tags

Parameters None

Command Modes Privileged EXEC mode

Usage Guidelines The **show ip bgp vpnv6 tags** command displays the BGP4+ route label information for IPv4 neighbors.

Command Output The **show ip bgp vpnv6 tags** command displays the following information:

Output field	Description
LocPrf	The degree of preference for this route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 – 4294967295.
Weight	The value that this route associates with routes from a specific neighbor. For example, if the Brocade device receives routes to the same destination from two BGP4 neighbors, the device prefers the route from the neighbor with the larger weight.
LocPrf	The degree of preference for this route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 – 4294967295.
Weight	The value that this route associates with routes from a specific neighbor. For example, if the Brocade device receives routes to the same destination from two BGP4 neighbors, the device prefers the route from the neighbor with the larger weight.
LocPrf	The degree of preference for this route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 – 4294967295.

Examples The following example displays BGP4+ VPNv6 route label information:

```
Brocade#show ip bgp vpnv6 tags
      Network      Next Hop          In-Label Out-Label
Route Distinguisher: 1:1
 10::41/128      ::FFFF:40:0:0:2    -         500002
 30::/64         ::FFFF:40:0:0:2    -         500002
 40::/64         ::FFFF:40:0:0:2    -         500002
100::/64        ::FFFF:40:0:0:2    -         500002
```

History

Release	Command History
Multi-Service IronWare R05.5.00	This command was introduced.

Related Commands show ip bgp vpnv6 neighbors
show ip bgp vpnv6 routes

show ip bgp vpnv6 tags

show ip bgp vpnv6 summary

show ipv6 bgp vrf neighbors

show ipv6 bgp vrf neighbors

Displays BGP4+ configuration information about a specified VRF6's neighbors

Syntax `show ipv6 bgp vrf vrf-name neighbors`

Parameters `vrf-name` Specifies the VRF6 name whose neighbor information needs to be displayed.

Command Modes Privileged EXEC mode

Usage Guidelines The `show ipv6 bgp vrf neighbors` command displays details about the BGP4+ VRF6's neighbors.

Command Output The `show ipv6 bgp vrf neighbors` command displays the following information:

Output field	Description
IP Address	The IP address of the neighbor.
AS	The AS the neighbor is in.
EBGP or IBGP	Whether the neighbor session is an IBGP session, an EBGP session, or a confederation EBGP session: <ul style="list-style-type: none">• EBGP – The neighbor is in another AS.• EBGP_Confed – The neighbor is a member of another sub-AS in the same confederation.• IBGP – The neighbor is in the same AS.
RouterID	The neighbor's ID.
State	The state of the session with the neighbor. The states are from the perspective of this device of the session, not the perspective of the neighbor. The state values are based on the BGP4 state machine values described in RFC 1771 and can be one of the following for each device: <ul style="list-style-type: none">• IDLE – The BGP4 process is waiting to be started. Usually, enabling BGP4 or establishing a neighbor session starts the BGP4 process.• A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes.• ADMND – The neighbor has been administratively shut down.• A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes.• CONNECT – BGP4 is waiting for the connection process for the TCP neighbor session to be completed.• ACTIVE – BGP4 is waiting for a TCP connection from the neighbor. NOTE: When the state frequently changes between CONNECT and ACTIVE, there may be a problem with the TCP connection. <ul style="list-style-type: none">• OPEN SENT – BGP4 is waiting for an Open message from the neighbor.• OPEN CONFIRM – BGP4 has received an OPEN message from the neighbor and is now waiting for either a KEEPALIVE or NOTIFICATION message. When the device receives a KEEPALIVE message from the neighbor, the state changes to Established. When the message is a NOTIFICATION, the state changes to Idle.• ESTABLISHED – BGP4 is ready to exchange UPDATE messages with the neighbor.• When there is more BGP data in the TCP receiver queue, a plus sign (+) is also displayed. NOTE: When the user displays information for the neighbor using the <code>show ip bgp neighbor ip-addr</code> command, the TCP receiver queue value is greater than 0.

Output field	Description
Time	The amount of time this session has been in its current state.
KeepAliveTime	The KeepAliveTime, which specifies how often this device sends keep alive messages to the neighbor.
HoldTime	The hold time, which specifies how many seconds the device waits for a KEEPALIVE or UPDATE message from a BGP4 neighbor before deciding that the neighbor is dead.
Messages Sent	The number of messages this device has sent to the neighbor. The display shows statistics for the following message types: <ul style="list-style-type: none"> • Open • Update • KeepAlive • Notification • Refresh-Req
Messages Received	The number of messages this device has received from the neighbor. The message types are the same as for the Message Sent field.
Last Update Time	Lists the last time updates were sent and received for the following: <ul style="list-style-type: none"> • NLRIs • Withdraws
Last Connection Reset Reason	The reason the previous session with this neighbor ended. The reason can be one of the following: <ul style="list-style-type: none"> • Reasons described in the BGP specifications: <ul style="list-style-type: none"> • Message Header Error • Connection Not Synchronized • Bad Message Length • Bad Message Type • OPEN Message Error • Unsupported Version Number • Bad Peer AS Number • Bad BGP Identifier • Unsupported Optional Parameter • Authentication Failure • Unacceptable Hold Time • Unsupported Capability • UPDATE Message Error • Malformed Attribute List • Unrecognized Well-known Attribute • Missing Well-known Attribute • Attribute Flags Error • Attribute Length Error • Invalid ORIGIN Attribute • Invalid NEXT_HOP Attribute • Optional Attribute Error • Invalid Network Field • Malformed AS_PATH • Hold Timer Expired • Finite State Machine Error • Rcv Notification

show ipv6 bgp vrf neighbors

Output field	Description
Last Connection Reset Reason (cont.)	<ul style="list-style-type: none">• Reasons specific to the implementation:<ul style="list-style-type: none">• Reset All Peer Sessions• User Reset Peer Session• Port State Down• Peer Removed• Peer Shutdown• Peer AS Number Change• Peer AS Confederation Change• TCP Connection KeepAlive Timeout• TCP Connection Closed by Remote• TCP Data Stream Error Detected
Notification Sent	<p>When the device receives a NOTIFICATION message from the neighbor, the message contains an error code corresponding to one of the following errors. Some errors have subcodes that clarify the reason for the error. Where applicable, the subcode messages are listed underneath the error code messages.</p> <ul style="list-style-type: none">• Message Header Error:<ul style="list-style-type: none">• Connection Not Synchronized• Bad Message Length• Bad Message Type• Unspecified• Open Message Error:<ul style="list-style-type: none">• Unsupported Version• Bad Peer As• Bad BGP Identifier• Unsupported Optional Parameter• Authentication Failure• Unacceptable Hold Time• Unspecified• Update Message Error:<ul style="list-style-type: none">• Malformed Attribute List• Unrecognized Attribute• Missing Attribute• Attribute Flag Error• Attribute Length Error• Invalid Origin Attribute• Invalid NextHop Attribute• Optional Attribute Error• Invalid Network Field• Malformed AS Path• Unspecified• Hold Timer Expired• Finite State Machine Error• Cease• Unspecified
Notification Received	See above.
Neighbor NLRI Negotiation	<p>Shows the state of the router's NLRI negotiation with the neighbor. The states can be one of the following:</p> <ul style="list-style-type: none">• Peer negotiated IPv4 unicast capability• Peer negotiated IPv6 unicast capability• Peer configured for IPv4 unicast routes• Peer configured for IPv6 unicast routes

Output field	Description
Neighbor IPv6 MPLS Label Capability Negotiation	Shows the state of the router's IPv6 MPLS label capability negotiation with the neighbor. The states can be one of the following: <ul style="list-style-type: none"> Peer negotiated IPv6 MPLS Label capability Peer configured for IPv6 MPLS Label capability
Neighbor AS4 Capability Negotiation	Shows the state of the router's AS4 capability negotiation with the neighbor. The states can be one of the following: <ul style="list-style-type: none"> Peer negotiated AS4 capability Peer configured for AS4 capability
Outbound Policy Group	Shows the ID and the count used in the outbound policy group.
BFD	Shows whether or not Bidirectional Forwarding Detection (BFD) is enabled on the device.
TCP Connection state	The state of the connection with the neighbor. The connection can have one of the following states: <ul style="list-style-type: none"> LISTEN – Waiting for a connection request. SYN-SENT – Waiting for a matching connection request after having sent a connection request. SYN-RECEIVED – Waiting for a confirming connection request acknowledgment after having both received and sent a connection request. ESTABLISHED – Data can be sent and received over the connection. This is the normal operational state of the connection. FIN-WAIT-1 – Waiting for a connection termination request from the remote TCP, or an acknowledgment of the connection termination request previously sent. FIN-WAIT-2 – Waiting for a connection termination request from the remote TCP. CLOSE-WAIT – Waiting for a connection termination request from the local user. CLOSING – Waiting for a connection termination request acknowledgment from the remote TCP. LAST-ACK – Waiting for an acknowledgment of the connection termination request previously sent to the remote TCP (which includes an acknowledgment of its connection termination request). TIME-WAIT – Waiting for enough time to pass to be sure the remote TCP received the acknowledgment of its connection termination request. CLOSED – There is no connection state.
Byte Sent	The number of bytes sent.
Byte Received	The number of bytes received.
Local host	The IP address of the device.
Local port	The TCP port the device is using for the BGP4 TCP session with the neighbor.
Remote host	The IP address of the neighbor.
Remote port	The TCP port the neighbor is using for the BGP4 TCP session with the device.
SentSeq	The initial send sequence number for the session.
SendNext	The next sequence number to be sent.
TotUnAck	The number of sequence numbers sent by the device that have not been acknowledged by the neighbor.
TotSent	The number of sequence numbers sent to the neighbor.
ReTrans	The number of sequence numbers that the device retransmitted because they were not acknowledged.
UnAckSeq	The current acknowledged sequence number.

show ipv6 bgp vrf neighbors

Output field	Description
IRcvSeq	The initial receive sequence number for the session.
RcvNext	The next sequence number expected from the neighbor.
SendWnd	The size of the send window.
TotalRcv	The number of sequence numbers received from the neighbor.
DupliRcv	The number of duplicate sequence numbers received from the neighbor.
RcvWnd	The size of the receive window.
SendQue	The number of sequence numbers in the send queue.
RcvQue	The number of sequence numbers in the receive queue.
CngstWnd	The number of times the window has changed.

Examples The following example displays BGP4+ neighbor information:

```
Brocade#show ipv6 bgp vrf abc neighbors
Total number of BGP Neighbors: 1
1 IP Address: 3:3:3::3, AS: 100 (IBGP), RouterID: 3.3.3.3, VRF: abc
  State: ESTABLISHED, Time: 0h2m48s, KeepAliveTime: 60, HoldTime: 180
    KeepAliveTimer Expire in 47 seconds, HoldTimer Expire in 120 seconds
  Minimal Route Advertisement Interval: 0 seconds
    UpdateSource: Loopback 1
    RefreshCapability: Received
  Messages:      Open      Update  KeepAlive  Notification  Refresh-Req
    Sent       : 2         0         4           0             0
    Received: 1         1         3           0             0
  Last Update Time: NLRI          Withdraw          NLRI          Withdraw
                  Tx: ---          ---              Rx: 0h2m48s    ---
  Last Connection Reset Reason:Unknown
  Notification Sent:      Unspecified
  Notification Received: Unspecified
  Neighbor NLRI Negotiation:
    Peer Negotiated IPV6 unicast capability
    Peer configured for IPV6 unicast Routes
  Neighbor ipv6 MPLS Label Capability Negotiation:
  Neighbor AS4 Capability Negotiation:
  Outbound Policy Group:
    ID: 2, Use Count: 2
  BFD:Disabled
  TCP Connection state: ESTABLISHED, flags:00000044 (0,0)
  Maximum segment size: 1440
  TTL check: 0, value: 0, rcvd: 63
  Byte Sent: 121, Received: 205

Local host: 1:1:1::1, Local Port: 179
Remote host: 3:3:3::3, Remote Port: 8041
ISentSeq: 28769169 SendNext: 28769291 TotUnAck: 0
TotSent: 122 ReTrans: 0 UnAckSeq: 28769291
IRcvSeq: 29018467 RcvNext: 29018673 SendWnd: 64981
TotalRcv: 206 DupliRcv: 0 RcvWnd: 65000
SendQue: 0 RcvQue: 0 CngstWnd: 3060

FRR Forwarding State: Pri(active), Backup(up)
```


show ipv6 bgp vrf neighbors

History

Release

Command History

Multi-Service IronWare R05.5.00 This command was introduced.

**Related
Commands**

show ipv6 bgp vrf nexthop

show ipv6 bgp vrf peer-group

show ipv6 bgp vrf routes

show ipv6 bgp vrf summary

show ipv6 bgp vrf nexthop

show ipv6 bgp vrf nexthop

Displays BGP4+ nexthop information for a specified VRF6

Syntax `show ipv6 bgp vrf vrf-name nexthop`

Parameters `vrf-name` Specifies the VRF6 name whose nexthop information needs to be displayed.

Command Modes Privileged EXEC mode

Usage Guidelines The `show ipv6 bgp vrf nexthop` command displays details about the BGP4+ VRF6's nexthop.

Command Output The `show ipv6 bgp vrf nexthop` command displays the following information:

Output field	Description
safi	Subsequent address family ID.
Type Codes	Type of route.
OSPF Codes	Type of OSPF route
Next Hop	The next-hop IP address.
Type	Type of route.
Cost	Metric of route.
ResolveSchema	Method to resolve nexthop
Router IP	The router IP address.
Port	The port number of the interface.

Examples The following example displays BGP4+ nexthop information:

```
Brocade#show ipv6 bgp vrf abc nexthop

safi : BGP IPV6 UNICAST SAFI
Type Codes - B:BGP D:Connected I:ISIS L:Local O:OSPF R:RIP S:Static
OSPF Codes - i:Internal 1:External Type 1 2:External Type 2

Next Hop          Type Cost  ResolveSchema Router IP          Port
3:3:3::3         Oi    2      IPv4/6         fe80::200:ff:fe02:0 eth 1/2
```

History

Release	Command History
Multi-Service IronWare R05.5.00	This command was introduced.

Related Commands

- `show ipv6 bgp vrf neighbors`
- `show ipv6 bgp vrf peer-group`
- `show ipv6 bgp vrf routes`
- `show ipv6 bgp vrf summary`

show ipv6 bgp vrf peer-group

Displays BGP4+ peer-group information for a specified VRF6

Syntax `show ipv6 bgp vrf vrf-name peer-group`

Parameters `vrf-name` Specifies the VRF6 name whose peer-group information needs to be displayed.

Command Modes Privileged EXEC mode

Usage Guidelines The `show ipv6 bgp vrf peer-group` command displays details about the BGP4+ VRF6's peer-group.

Command Output The `show ipv6 bgp vrf peer-group` command displays the following information:

Output field	Description
Remote AS	Specifies the AS in which the remote neighbor resides.
Address family	The IP address family type. For example: IPV4 Unicast, or VPNV4 Unicast, or L2VPN VPLS.
DefaultOriginate	Whether this option is enabled for the neighbor.
IP Address	Peer group IP address.

Examples The following example displays BGP4+ peer group information:

```
Brocade(config-bgp-ipv6u-vrf)#show ipv6 bgp vrf 2 peer-group pgl
1 BGP peer-group is pgl, Remote AS: 200
Address family : IPV4 Unicast
no activate
DefaultOriginate: yes
Address family : IPV4 Multicast
no activate
Address family : IPV6 Unicast
activate
Address family : IPV6 Multicast
no activate
Address family : VPNV4 Unicast
no activate
Address family : VPNV6 Unicast
no activate
Address family : L2VPN VPLS
no activate
Members:
IP Address: 2::2
IP Address: 11::2, AS: 300
```

History

Release	Command History
Multi-Service IronWare R05.5.00	This command was introduced.

Related Commands `show ipv6 bgp vrf neighbors`

show ipv6 bgp vrf peer-group

show ipv6 bgp vrf nexthop

show ipv6 bgp vrf routes

show ipv6 bgp vrf summary

show ipv6 bgp vrf routes

Displays the VRF6 summary statistics for all the VRF6 routes

Syntax `show ipv6 bgp vrf vrf-name routes`

Parameters `vrf-name` Specifies the VRF6 name whose route information needs to be displayed.

Command Modes Privileged EXEC mode

Usage Guidelines The `show ipv6 bgp vrf routes` command displays the VRF6 route information for all the VRF6 routes in the device's BGP4+ route table for a specified VRF.

Command Output The `show ipv6 bgp vrf routes` command displays the following information:

Output field	Description
Total number of BGP Routes	The number of BGP4+ routes the Brocade device has installed in the BGP4 route table.
Status	<p>The route status, which can be one or more of the following:</p> <ul style="list-style-type: none"> A – AGGREGATE. The route is an aggregate route for multiple networks. B – BEST. BGP4 has determined that this is the optimal route to the destination. <p>NOTE: If the “b” is lowercase, the software was not able to install the route in the IP route table.</p> <ul style="list-style-type: none"> b – NOT-INSTALLED-BEST. The routes received from the neighbor are the best BGP4 routes to their destinations, but were not installed in the IP route table because the device received better routes from other sources (such as OSPF, RIP, or static IP routes). C – CONFED_EBGP. The route was learned from a neighbor in the same confederation and AS, but in a different sub-AS within the confederation. D – DAMPED. This route has been dampened (by the route dampening feature), and is currently unusable. H – HISTORY. Route dampening is configured for this route, and the route has a history of flapping and is unreachable now. I – INTERNAL. The route was learned through BGP4. L – LOCAL. The route originated on this device. M – MULTIPATH. BGP4 load sharing is enabled and this route was selected as one of the best ones to the destination. The best route among the multiple paths also is marked with “B”. <p>NOTE: If the “m” is lowercase, the software was not able to install the route in the IP route table.</p> <ul style="list-style-type: none"> S – SUPPRESSED. This route was suppressed during aggregation and thus is not advertised to neighbors.
Prefix	The IP address and network mask of the destination network of the route.
AS_PATH	The BGP AS_PATH path attribute.
Next Hop	The IP address of the next-hop router.
MED	The value of the advertised route's MED attribute. If the route does not have a metric, this field is blank.

show ipv6 bgp vrf routes

Output field	Description
LocPrf	The degree of preference for this route relative to other routes in the local AS. When the BGP4+ algorithm compares routes on the basis of local preferences, the route with the higher local preference is chosen. The preference can have a value from 0 - 4294967295.
Weight	The value that this route associates with routes from a specific neighbor. For example, if the Brocade device receives routes to the same destination from two BGP4 neighbors, the device prefers the route from the neighbor with the larger weight.
Status	The route's status. Refer to "Status".

Examples The following example displays BGP4+ route information:

```

Brocade#show ipv6 bgp vrf vrf2001 routes
Total number of BGP Routes: 13
Status A:AGGREGATE B:BEST b:NOT-INSTALLED-BEST C:CONFED_EBGP D:DAMPED
E:EBGP H:HISTORY I:IBGP L:LOCAL M:MULTIPATH m:NOT-INSTALLED-MULTIPATH
S:SUPPRESSED F:FILTERED s:STALE
Prefix      Next Hop      MED      LocPrf      Weight      Status
1  40:4:1::/64  ::          0          100         32768      BL
   AS_PATH:
2  44:4:1::/64  ::ffff:7.7.7.1  0          100         0          BI
   AS_PATH:
3  44:4:1::/64  ::ffff:12.2.1.10  0          100         0          I
   AS_PATH:
4  44:4:1::/64  ::ffff:12.2.1.6  0          100         0          I
   AS_PATH:
5  44:4:2::/64  ::ffff:7.7.7.1  0          100         0          BI
   AS_PATH:
6  44:4:2::/64  ::ffff:12.2.1.10  0          100         0          I
   AS_PATH:
7  44:4:2::/64  ::ffff:12.2.1.6  0          100         0          I
   AS_PATH:
8  44:5:1::/64  ::ffff:7.7.7.1  3          100         0          BI
   AS_PATH:
9  44:5:1::/64  ::ffff:12.2.1.6  3          100         0          I
   AS_PATH:
10 44:5:1::/64  ::ffff:12.2.1.10  3          100         0          I
   AS_PATH:
11 44:5:2::/64  ::ffff:7.7.7.1  3          100         0          BI
   AS_PATH:
12 44:5:2::/64  ::ffff:12.2.1.6  3          100         0          I
   AS_PATH:
13 44:5:2::/64  ::ffff:12.2.1.10  3          100         0          I
   AS_PATH:

```

History

Release	Command History
Multi-Service IronWare R05.5.00	This command was introduced.

show ipv6 bgp vrf routes

**Related
Commands**

- show ipv6 bgp vrf neighbors
- show ipv6 bgp vrf nexthop
- show ipv6 bgp vrf summary
- show ipv6 bgp vrf peer-group

show ipv6 bgp vrf summary

show ipv6 bgp vrf summary

Displays the VRF6 summary statistics for all the VRF6 routes

Syntax `show ipv6 bgp vrf vrf-name summary`

Parameters *vrf-name* Specifies the VRF6 name whose summary statistics needs to be displayed.

Command Modes Privileged EXEC mode

Usage Guidelines The `show ipv6 bgp vrf summary` command displays the VRF6 summary statistics for all the VRF6 routes in the device's BGP4+ route table for a specified VRF.

Command Output The `show ipv6 bgp vrf summary` command displays the following information:

Output field	Description
Router ID	The device's ID.
Local AS Number	The BGP4+ AS number for the device.
Confederation Identifier	The AS number of the confederation in which the device resides.
Confederation Peers	The numbers of the local ASs contained in the confederation. This list matches the confederation peer list you configure on the device.
Maximum Number of IP ECMP Path Supported for Load Sharing	The maximum number of IP ECMP route paths across which the device can balance traffic to the same destination.
Number of Neighbors Configured	The number of BGP4+ neighbors configured on this device, and currently in established state.
Number of Routes Installed	The number of BGP4+ routes in the device BGP4 route table and the route or path memory usage.
Number of Routes Advertising to All Neighbors	The total of the RtSent and RtToSend columns for all neighbors, the total number of unique ribout group entries, and the amount of memory used by these groups.
Number of Attribute Entries Installed	The number of BGP4+ route-attribute entries in the device route-attributes table and the amount of memory used by these entries.
Neighbor Address	The IP addresses of the BGP4 neighbors for this device.
AS#	The AS number.

Output field	Description
State	<p>The state of the session with the neighbor. The states are from the perspective of this device of the session, not the perspective of the neighbor. The state values are based on the BGP4 state machine values described in RFC 1771 and can be one of the following for each device:</p> <ul style="list-style-type: none"> • IDLE – The BGP4 process is waiting to be started. Usually, enabling BGP4 or establishing a neighbor session starts the BGP4 process. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • ADMND – The neighbor has been administratively shut down. • A minus sign (-) indicates that the session has gone down and the software is clearing or removing routes. • CONNECT – BGP4 is waiting for the connection process for the TCP neighbor session to be completed. • ACTIVE – BGP4 is waiting for a TCP connection from the neighbor. <p>NOTE: When the state frequently changes between CONNECT and ACTIVE, there may be a problem with the TCP connection.</p> <ul style="list-style-type: none"> • OPEN SENT – BGP4 is waiting for an Open message from the neighbor. • OPEN CONFIRM – BGP4 has received an OPEN message from the neighbor and is now waiting for either a KEEPALIVE or NOTIFICATION message. When the device receives a KEEPALIVE message from the neighbor, the state changes to Established. When the message is a NOTIFICATION, the state changes to Idle. • ESTABLISHED – BGP4 is ready to exchange UPDATE messages with the neighbor. • When there is more BGP data in the TCP receiver queue, a plus sign (+) is also displayed.
Time	The time that has passed since the state last changed.
Accepted	The number of routes received from the neighbor that this device installed in the BGP4 route table. Usually, this number is lower than the RoutesRcvd number. The difference indicates that this device filtered out some of the routes received in the UPDATE messages.
Filtered	The routes or prefixes that have been filtered out.
Sent	The number of BGP4 routes the device has sent to the neighbor.
ToSend	The number of routes the device has queued to advertise and withdraw to a neighbor.

Examples The following example displays BGP4+ summary information:

```

Brocade#show ipv6 bgp vrf abc summary
BGP4 Summary
Router ID: 1.1.1.1   Local AS Number: 100
Confederation Identifier: not configured
Confederation Peers:
Maximum Number of IP ECMP Paths Supported for Load Sharing: 1
Number of Neighbors Configured: 1, UP: 1
Number of Routes Installed: 3, Uses 258 bytes
Number of Routes Advertising to All Neighbors: 0 (0 entries)
Number of Attribute Entries Installed: 1, Uses 90 bytes
Neighbor Address  AS#           State      Time      Rt:Accepted Filtered Sent
ToSend
3:3:3::3         100        ESTAB     0h15m23s  3         0         0

```

History

Release	Command History
Multi-Service IronWare R05.5.00	This command was introduced.

show ipv6 bgp vrf summary

**Related
Commands**

show ipv6 bgp vrf neighbors

show ipv6 bgp vrf nexthop

show ipv6 bgp vrf routes

show ipv6 bgp vrf peer-group

OSPF version 3 (IPv6)

Table 129 displays the individual Brocade devices and the OSPF Version 3 features they support.

TABLE 129 Supported Brocade OSPF Version 3 features

Features supported	Brocade NetronXMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
OSPF Version 3	Yes	Yes	No	Yes	Yes	Yes	Yes
Link-State Advertisement Router LSAs (Type 1)	Yes	Yes	No	Yes	Yes	Yes	Yes
Link-State Advertisement Network LSAs (Type 2)	Yes	Yes	No	Yes	Yes	Yes	Yes
Link-State Advertisement Interarea-prefix LSAs for ABRs (Type 3)	Yes	Yes	No	Yes	Yes	Yes	Yes
Link-State Advertisement Interarea-router LSAs for ASBRs (Type 4)	Yes	Yes	No	Yes	Yes	Yes	Yes
Link-State Advertisement Autonomous system external LSAs (Type 5)	Yes	Yes	No	Yes	Yes	Yes	Yes
Link-State Advertisement Link LSAs (Type 8)	Yes	Yes	No	Yes	Yes	Yes	Yes
Link-State Advertisement	Yes	Yes	No	Yes	Yes	Yes	Yes
Intra-area prefix LSAs (Type 9)	Yes	Yes	No	Yes	Yes	Yes	Yes
IPsec for OSPFv3	Yes	Yes	No	Yes	Yes	Yes	Yes

TABLE 129 Supported Brocade OSPF Version 3 features (Continued)

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
New encryption code for passwords, authentication keys, and community strings	Yes	Yes	No	Yes	Yes	Yes	Yes
Redistributing Routes into OSPFv3	Yes	Yes	No	Yes	Yes	Yes	Yes
Filtering OSPFv3 Routes	Yes	Yes	No	Yes	Yes	Yes	Yes
Default Route Origination	Yes	Yes	No	Yes	Yes	Yes	Yes
Shortest Path First Timers	Yes	Yes	No	Yes	Yes	Yes	Yes
Event Logging	Yes	Yes	No	Yes	Yes	Yes	Yes
OSPFv3 interfaces to passive state globally	Yes	Yes	No	Yes	Yes	Yes	Yes
OSPFv3 GR Helper mode	Yes	Yes	Yes	Yes	Yes	Yes	Yes
OSPFv3 NSR Helper Support	Yes	Yes	No	No	No	No	No
Maximum Metric for OSPFv3 Router LSAs	Yes	Yes	No	Yes	Yes	No	Yes

Open Shortest Path First (OSPF) is a link-state routing protocol. OSPF uses link-state advertisements (LSAs) to update neighboring routers about its interfaces and information on those interfaces. The device floods LSAs to all neighboring routers to update them about the interfaces. Each router maintains an identical database that describes its area topology to help a router determine the shortest path between it and any neighboring router.

OSPF Version 3

IPv6 supports OSPF Version 3 (OSPFv3), which functions similarly to OSPF Version 2 (OSPFv2), the current version that IPv4 supports, except for the following enhancements:

- Support for IPv6 addresses and prefixes.

- Ability to configure several IPv6 addresses on a device interface. (OSPFv3 imports all or none of the address prefixes configured on a router interface. You cannot select the addresses to import.)
- Ability to run one instance of OSPF Version 2 and one instance of OSPFv3 concurrently on a link.
- IPv6 link-state advertisements (LSAs).

This section describes the commands that are specific to OSPFv3.

NOTE

Although OSPF Version 2 and OSPF 3 function similarly to each other, Brocade has implemented the user interface for each version independently of the other. Therefore, any configuration of OSPFv2 features will not affect the configuration of OSPFv3 features and vice versa.

Link-state advertisement types for OSPFv3

OSPFv3 supports the following types of LSAs:

- Router LSAs (Type 1)
- Network LSAs (Type 2)
- Interarea-prefix LSAs for ABRs (Type 3)
- Interarea-router LSAs for ASBRs (Type 4)
- Autonomous system external LSAs (Type 5)
- Link LSAs (Type 8)
- Intra-area-prefix LSAs (Type 9)

For more information about these LSAs, refer to RFC 2740.

Configuring OSPFv3

To configure OSPFv3, you must perform the following steps.

- Enable OSPFv3 globally.
- Assign OSPF areas.
- Assign device interfaces to an OSPF area.

The following configuration tasks are optional:

- Configure a virtual link between an Area Border Router (ABR) without a physical connection to a backbone area and the device in the same area with a physical connection to the backbone area.
- Change the reference bandwidth for the cost on OSPFv3 interfaces.
- Configure the redistribution of routes into OSPFv3.
- Configure default route origination.
- Modify the shortest path first (SPF) timers.
- Modify the administrative distances for OSPFv3 routes.
- Configure the OSPFv3 LSA pacing interval.

- Modify how often the device checks on the elimination of the database overflow condition.
- Modify the external link state database limit.
- Modify the default values of OSPFv3 parameters for device interfaces.
- Disable or re-enable OSPFv3 event logging.
- Set all the OSPFv3 interfaces to the passive state.

Enabling OSPFv3

Before enabling the device to run OSPFv3, you must perform the following steps.

- Enable the forwarding of IPv6 traffic on the device using the **ipv6 unicast-routing** command.
- Enable IPv6 on each interface over which you plan to enable OSPFv3. You enable IPv6 on an interface by configuring an IPv6 address or explicitly enabling IPv6 on that interface.

By default, OSPFv3 is disabled. To enable OSPFv3 for a default Virtual Routing and Forwarding (VRF), you must enable it globally.

To enable OSPFv3 globally, enter the following command.

```
Brocade(config)# ipv6 router ospf
Brocade(config-ospf6-router)#
```

After you enter this command, the device enters the IPv6 OSPF configuration level, where you can access several commands that allow you to configure OSPFv3.

Syntax: [no] ipv6 router ospf [vrf]

To disable OSPFv3, enter the **no** form of this command. If you disable OSPFv3, the device removes all the configuration information for the disabled protocol from the running-configuration file. Moreover, when you save the configuration to the startup-config file after disabling one of these protocols, all the configuration information for the disabled protocol is removed from the startup-config file.

When you disable OSPFv3, the following warning message is displayed on the console.

```
Brocade(config-ospf6-router)# no ipv6 router ospf
ipv6 router ospf mode now disabled. All ospf config data will be lost when writing
to flash!
```

If you have disabled the protocol but have not yet saved the configuration to the startup-config file and reloaded the software, you can restore the configuration information by re-entering the command to enable the protocol (for example, **ipv6 router ospf**). If you have already saved the configuration to the startup-config file and reloaded the software, the configuration information is gone. If you are testing an OSPF configuration and are likely to disable and re-enable the protocol, you should make a backup copy of the startup-config file containing the protocol configuration information. This way, if you remove the configuration information by saving the configuration after disabling the protocol, you can restore the configuration by copying the backup copy of the startup-config file onto the flash memory.

Assigning OSPFv3 areas

After OSPFv3 is enabled, you can assign OSPFv3 areas. You can assign an IPv6 address or a number as the *area ID* for each area. The area ID is representative of all IPv6 addresses (subnets) on a device interface. Each device interface can support one area.

Once OSPFv3 is enabled on the system, you can assign areas. Assign an IPv6 address or number as the **area ID** for each area. The area ID is representative of all IP addresses (subnets) on a router port. Each port on a router can support one area.

An area can be **normal**, a **stub**, or a **Not-So-Stubby Area (NSSA)**:

- **Normal** – OSPFv3 routers within a normal area can send and receive External Link State Advertisements (LSAs).
- **Stub** – OSPFv3 routers within a stub area cannot send or receive External LSAs. In addition, OSPF routers in a stub area must use a default route to the area's Area Border Router (ABR) or Autonomous System Boundary Router (ASBR) to send traffic out of the area.
- **NSSA** – The ASBR of an NSSA can import external route information into the area.
 - ASBRs redistribute (import) external routes into the NSSA as type 7 LSAs. Type-7 External LSAs are a special type of LSA generated only by ASBRs within an NSSA, and are flooded to all the routers within only that NSSA.
 - ABRs translate type 7 LSAs into type 5 External LSAs, which can then be flooded throughout the AS. You can configure address ranges on the ABR of an NSSA so that the ABR converts multiple type-7 External LSAs received from the NSSA into a single type-5 External LSA.

When an NSSA contains more than one ABR, OSPFv3 elects one of the ABRs to perform the LSA translation for NSSA. OSPF elects the ABR with the highest router ID. If the elected ABR becomes unavailable, OSPFv3 automatically elects the ABR with the next highest router ID to take over translation of LSAs for the NSSA. The election process for NSSA ABRs is automatic.

For example, to set up OSPFv3 areas 2001:db8::32, 2001:db8::32, 2001:db8::15, and 2001:db8::64, enter the following commands.

```
Brocade(config-ospf6-router)# area 2001:db8::32
Brocade(config-ospf6-router)# area 2001:db8::32
Brocade(config-ospf6-router)# area 2001:db8::15
Brocade(config-ospf6-router)# area 2001:db8::64
```

Syntax: [no] *area number | ipv6-address*

The *number | ipv6-address* parameter specifies the area number, which can be a number or in IPv6 address format. If you specify a number, the number can be from 0 through 2,147,483,647.

NOTE

You can assign only one area on a device interface.

Assigning a totally stubby area

By default, the device sends summary LSAs (type 3 LSAs) into stub areas. You can reduce the number of LSAs sent into a stub area by configuring the device to stop sending summary LSAs into the area. You can disable the summary LSAs when you are configuring the stub area or later after you have configured the area.

This feature disables origination of summary LSAs into a stub area, but the device still accepts summary LSAs from OSPF neighbors and floods them to other areas. The device can form adjacencies with other routers regardless of whether summarization is enabled or disabled for areas on each router.

When you disable the summary LSAs, the change takes effect immediately. If you apply the option to a previously configured area, the device flushes all of the summary LSAs it has generated (as an ABR) from the area.

NOTE

This feature applies only when the device is configured as an Area Border Router (ABR) for the area. To completely prevent summary LSAs from being sent to the area, disable the summary LSAs on each OSPF router that is an ABR for the area.

For example, to disable summary LSAs for stub area 40 and specify an additional metric of 99, enter the following command.

```
Brocade(config-ospf6-router)# area 40 stub 99 no-summary
```

Syntax: `[no] area number | ipv6-address stub metric [no-summary]`

The `number | ipv6-address` parameter specifies the area number, which can be a number or in IPv6 address format. If you specify a number, the number can be from 0 through 2,147,483,647.

The `stub metric` parameter specifies an additional cost for using a route to or from this area and can be from 1 through 16777215. There is no default. Normal areas do not use the cost parameter.

The `no-summary` parameter applies only to stub areas and disables summary LSAs from being sent into the area.

Assign a Not-So-Stubby Area (NSSA)

The OSPF Not So Stubby Area (NSSA) feature enables you to configure OSPF areas that provide the benefits of stub areas, but that also are capable of importing external route information. OSPF does not flood external routes from other areas into an NSSA, but does translate and flood route information from the NSSA into other areas such as the backbone.

NSSAs are especially useful when you want to summarize Type-5 External LSAs (external routes) before forwarding them into an OSPF area. The OSPF specification (RFC 2328) prohibits summarization of Type-5 LSAs and requires OSPF to flood Type-5 LSAs throughout a routing domain. When you configure an NSSA, you can specify an address range for aggregating the external routes that the NSSAs ABR exports into other areas.

Since the NSSA is partially “stubby” the ABR does not flood external LSAs from the backbone into the NSSA. To provide access to the rest of the Autonomous System (AS), the ABR generates a default Type-7 LSA into the NSSA.

Configuring an NSSA

Using the `area area-id nssa` command, you can block the generation of type-3 and type-7 LSAs into an NSSA. This command also provides an option to configure the NSSA translator role.

Configuration examples

The following example creates an NSSA area with an area-id 100. If the router is an ABR then a type-3 summary LSA will be originated into the NSSA area and if the router is an ASBR then type-7 NSSA external LSA will be generated into NSSA area with a default external metric value of 10. The routers NSSA translator role will be set to candidate and it will participate in NSSA translation election.

```
Brocade(config-ospf6-router)# area 100 nssa
```


The following example modifies the NSSA area 100 wherein type-7 NSSA external LSA will not be originated into NSSA area. But the type-3 summary LSAs will still be originated into NSSA area.

```
Brocade(config-ospf6-router)# area 100 nssa no-redistribution
```

The following example modifies the NSSA area 100 wherein origination of type-3 summary LSAs (apart from type-3 default summary) will be blocked into NSSA area. The CLI works in incremental fashion and the origination of type-7 LSA will be continued to be blocked as 'no-redistribution' option was enabled in the previous command.

```
Brocade(config-ospf6-router)#area 100 nssa no-summary
```

The following example modifies the NSSA area 100 wherein origination of the self-router acts as NSSA translator. The generation of type-3 & type-7 LSA will still be blocked into NSSA area.

```
Brocade(config-ospf6-router)#area 100 nssa translator-always
```

The following example modifies the NSSA area 100 wherein origination of type-3 summary will be allowed, but origination of type-7 LSA will still be blocked. Also the self-router will still act as NSSA translator-always.

```
Brocade(config-ospf6-router)#no area 100 nssa no-summary
```

Although the NSSA configuration can be done in an incremental fashion during show-run, all the configuration options will be displayed in just one line. For example, the output of the **show run** would be:

```
Brocade(config-ospf6-router)#area 100 nssa no-redistribution translator-always
```

The following example deletes the NSSA area 100.

```
Brocade(config-ospf6-router)#no area 100
```

Syntax: **[no] area** *area-id* **nssa** **[[*stub-metric*] [default-information-originate [*metric* *metric-value* | *metric-type* *type-value*]] [no-summary] [no-redistribution] [translator-always] [translator-interval *stability-interval*]]**

The *area-id* parameter specifies the area number, which can be a number or in IP address format. If you specify a number, the number can be from 0 to 2,147,483,647.

The **nssa** *stub-metric* parameter configures an area as a not-so-stubby-area (NSSA). The *stub-metric* will be the metric used for generating default LSA in a NSSA. The range of the value is 1 to 1048575. The default value is 10.

The **default-information-originate** parameter generates a default route into an NSSA. If no-summary option is enabled then a type-3 default LSA will be generated into NSSA else a type-7 LSA will be generated into NSSA. By default the **default-information-originate** parameter is not set.

The **metric** *metric-value* parameter specifies the cost of the default LSA originated into the NSSA area. The range is 1 to 1048575. There is no default

The **metric-type** *type-value* parameter specifies the type of the default external LSA originated into the NSSA area. It can be either type-1 or type-2. The default is type-1.

The **no-summary** parameter prevents an NSSA ABR from generating a type-3 summary into an NSSA. By default the summary LSA is originated into NSSA.

The **no-redistribution** parameter prevents an NSSA ABR from generating external (type-7) LSA into an NSSA area. This is used in the case where an ASBR should generate type-5 LSA into normal areas and should not generate type-7 LSA into NSSA area. By default, redistribution is enabled in a NSSA.

The **translator-always** parameter configures the translator-role. When configured on an ABR, this causes the router to unconditionally assume the role of an NSSA translator. By default, translator-always is not set, the translator role by default is candidate.

The **translator-interval stability-interval** parameter configures the time interval for which an elected NSSA translator continues to perform its duties even after its NSSA translator role has been disposed by another router. By default the stability-interval is 40 seconds and its range will be 10 to 60 seconds.

Disabling the router to perform translations for NSSA LSAs

The **nssa-translator** command allows you to disable the router from performing translations for NSSA LSAs. When this command is used, type 7 NSSA external LSAs are not translated into type 5 external LSAs. This command is useful when the router is an area border router with many NSSA areas, and does not need to export the NSSA external routes into the backbone.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# no nssa-translator
```

Syntax: [no] nssa-translator

Configuring an address range for the NSSA

If you want the ABR that connects the NSSA to other areas to summarize the routes in the NSSA before translating them into Type-5 LSAs and flooding them into the other areas, configure an address range. The ABR creates an aggregate value based on the address range. The aggregate value becomes the address that the ABR advertises instead of advertising the individual addresses represented by the aggregate. You can configure up to 32 ranges in an OSPF area.

To configure an address range in NSSA 10.1.1.1, enter the following commands. This example assumes that you have already configured NSSA 10.1.1.1.

```
Brocade(config)# router ospf
Brocade(config-ospf-router)# area 10.1.1.1 range 10.157.22.1 255.255.0.0
Brocade(config-ospf-router)# write memory
```

Syntax: [no] area *num* | *ip-addr range ip-addr ip-mask* [advertise | not-advertise]

The *num* | *ip-addr* parameter specifies the area number, which can be in IP address format. If you specify a number, the number can be from 0 – 2,147,483,647.

The **range ip-addr** parameter specifies the IP address portion of the range. The software compares the address with the significant bits in the mask. All network addresses that match this comparison are summarized in a single route advertised by the router.

The *ip-mask* parameter specifies the portions of the IP address that a route must contain to be summarized in the summary route. In the example above, all networks that begin with 209.157 are summarized into a single route.

The **advertise | not-advertise** parameter specifies whether you want the device to send type 3 LSAs for the specified range in this area. The default is **advertise**.

Assigning an area cost for OSPFv3 (optional parameter)

You can assign a **cost** for an area, but it is not required. To consolidate and summarize routes at an area boundary, use the **area range cost** command in router configuration mode.

If the **cost** parameter is specified, it will be used (overriding the computed cost) to generate the summary LSA. If the **cost** parameter is not specified, then the existing range metric computation max or min cost of routes falling under this range will be used to generate summary LSA.

NOTE

The **area** should be already configured before using this command.

Example

Creates an area range entry with prefix 2001:db8::1/64 with the area-id 10.

```
Brocade(config)# ipv6 router ospf
Brocade(config-ospf6-router)# area 10 range 2001:db8::1/64
```

Modifies the address range status to DoNotAdvertise. Neither the individual intra-area routes falling under range nor the ranged prefix is advertised as summary LSA.

```
Brocade(config)# ipv6 router ospf
Brocade(config-ospf6-router)# area 10 range 2001:db8::1/64 not-advertise
```

Modifies the address range status to advertise and a Type 3 summary link-state advertisement (LSA) can be generated for this address range.

```
Brocade(config)# ipv6 router ospf
Brocade(config-ospf6-router)# area 10 range 2001:db8::1/64 advertise
```

Modifies the address range status to advertise and assign cost for this area range to 10.

```
Brocade(config)# ipv6 router ospf
Brocade(config-ospf6-router)# area 10 range 2001:db8::1/64 advertise cost 10
```

Modifies the address range status to not-advertise and cost from 10 to 5.

```
Brocade(config)# ipv6 router ospf
Brocade(config-ospf6-router)# area 10 range 2001:db8::1/64 not-advertise cost 5
```

Removes the cost from the area range. The area range will be advertised with computed cost which is the max/min (based on RFC 1583 compatibility) of all individual intra-area routes falling under this range.

```
Brocade(config)# ipv6 router ospf
Brocade(config-ospf6-router)# no area 10 range 2001:db8::1/64 cost 5
```

Removes the area range.

```
Brocade(config)# ipv6 router ospf
Brocade(config-ospf6-router)# no area 10 range 2001:db8::1/64
```

NOTE

This command does not work in incremental fashion. So both the optional parameters have to be configured each time. Otherwise it will take the default value.

Syntax: `[no] area num | ipv6-addr range ip-addr ip-mask [advertise | not-advertise] cost cost-value`

The `num | ipv6-addr` parameter specifies the area number, which can be in IP address format.

The **range** `ipv6-addr` parameter specifies the IP address portion of the range. The software compares the address with the significant bits in the mask. All network addresses that match this comparison are summarized in a single route advertised by the router.

The `ipv6-mask` parameter specifies the portions of the IPv6 address that a route must contain to be summarized in the summary route. In the example above, all networks that begin with 193.45 are summarized into a single route.

The **advertise** parameter sets the address range status to advertise and generates a Type 3 summary link-state advertisement (LSA). If at least a single route falls under the range, a ranged LSA will be advertised.

The not-advertise parameter sets the address range status to DoNotAdvertise. Neither the individual intra-area routes falling under range nor the ranged prefix is advertised as summary LSA.

The **cost** `cost-value` parameter specifies the cost-value to be used while generating type-3 summary LSA. If the cost value is configured, then configured cost is used while generating the summary LSA. If the cost value is not configured, then computed range cost will be used. The cost-value ranges from 1 to 16777215.

To disable this function, use the **no** form of this command.

Assigning interfaces to an area

After you define OSPFv3 areas, you must assign device interfaces to the areas. All device interfaces must be assigned to one of the defined areas on an OSPF router. When an interface is assigned to an area, all corresponding subnets on that interface are automatically included in the assignment.

For example, to assign Ethernet interface 3/1 to area 10.5.0.0, enter the following commands.

```
Brocade(config)# interface Ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 ospf area 10.5.0.0
```

Syntax: `[no] ipv6 ospf area number | ipv4-address`

The `number | ipv4-address` parameter specifies the area number, which can be a number or in IPv4 address format. If you specify a number, the number can be from 0 through 2,147,483,647.

To remove the interface from the specified area, use the **no** form of this command.

Specifying a network type

You can specify a point-to-point or broadcast network type for any OSPF interface of the following types: Ethernet, or VE interface. To specify the network type for an OSPF interface, use the following commands.

```
Brocade(config)# interface eth 3/1
Brocade(config-if-e100-3/1)# ipv6 ospf network broadcast
```

Syntax: `[no] ipv6 ospf network point-to-point | broadcast`

The **point-to-point** parameter specifies that the OSPF interface will support point-to-point networking.

The **broadcast** parameter specifies that the OSPF interface will support broadcast networking. This is the default setting for Ethernet and VE interfaces.

The **no** form of the command disables the command configuration.

Configuring virtual links

All ABRs must have either a direct or indirect link to an OSPF backbone area (0.0.0.0 or 0). If an ABR does not have a physical link to a backbone area, you can configure a virtual link from the ABR to another router within the same area that has a physical connection to the backbone area.

The path for a virtual link is through an area shared by the neighbor ABR (router with a physical backbone connection) and the ABR requiring a logical connection to the backbone.

Two parameters must be defined for all virtual links — transit area ID and neighbor router:

- The transit area ID represents the shared area of the two ABRs and serves as the connection point between the two routers. This number should match the area ID value.
- The neighbor router is the router ID (IPv4 address) of the router that is physically connected to the backbone when assigned from the router interface requiring a logical connection. The neighbor router is the router ID (IPv4 address) of the router requiring a logical connection to the backbone when assigned from the router interface with the physical connection.

NOTE

By default, the router ID is the IPv4 address configured on the lowest-numbered loopback interface. If the device does not have a loopback interface, the default router ID is the lowest-numbered IPv4 address configured on the device.

When you establish an area virtual link, you must configure it on both ends of the virtual link. For example, imagine that ABR1 in areas 1 and 2 is cut off from the backbone area (area 0). To provide backbone access to ABR1, you can add a virtual link between ABR1 and ABR2 in area 1 using area 1 as a transit area. To configure the virtual link, you define the link on the router that is at each end of the link. No configuration for the virtual link is required on the routers in the transit area.

To define the virtual link on ABR1, enter the following command on ABR1.

```
Brocade(config-ospf6-router)# area 1 virtual-link 10.157.22.1
```

To define the virtual link on ABR2, enter the following command on ABR2.

```
Brocade(config-ospf6-router)# area 1 virtual-link 10.0.0.1
```

Syntax: `[no] area number | ipv4-address virtual-link router-id`

The *number* | *ipv4-address* parameter specifies the transit area ID, area number, which can be a number, or in IPv4 address format. If you specify a number, the number can be from 0 through 2,147,483,647.

The *router-id* parameter specifies the router ID of the OSPF router at the remote end of the virtual link. To display the router ID on a router, enter the show ip command.

Assigning a virtual link source address

When routers at both ends of a virtual link communicate with one another, the source address included in the packets must be a global IPv6 address. The Multi-Service IronWare software automatically selects a global IPv6 address for each transit area and advertises this address into the transit area of the Intra-area-prefix LSA. The automatically selected global IPv6 address for a transit area is the first global IPv6 address of any loopback interface in the transit area. If no global IPv6 address is available on a loopback interface in the area, then the first global IPv6 address of the lowest-numbered interface in the UP state (belonging to the transit area) will be assigned. If no global IPv6 address is configured on any of the OSPF interfaces in the transit area, then the virtual links in the transit area will not operate. The automatically selected IPv6 global address is updated whenever the previously selected IPv6 address of the interface changes, is removed, or if the interface goes down.

NOTE

The existing selected virtual link address will not change because the global IPv6 address is now available on a loopback interface or a lower-numbered interface in the transit area. To force the global IPv6 address for the virtual link to be the global IPv6 address of a newly configured loopback, or a lower-numbered interface in the area, you will have to either disable the existing selected interface or remove the currently selected global IPv6 address from the interface.

Modifying virtual link parameters

You can modify the following virtual link parameters:

- **Dead-interval:** The number of seconds that a neighbor router waits for a hello packet from the device before declaring the router is down. The range is from 1 through 65535 seconds. The default is 40 seconds.
- **Hello-interval:** The length of time between the transmission of hello packets. The range is from 1 through 65535 seconds. The default is 10 seconds.
- **Retransmit-interval:** The interval between the retransmission of link state advertisements to router adjacencies for this interface. The range is from 0 through 3600 seconds. The default is 5 seconds.
- **Transmit-delay:** The period of time it takes to transmit Link State Update packets on the interface. The range is from 0 through 3600 seconds. The default is 1 second.

NOTE

The values of the **dead-interval** and **hello-interval** parameters must be the same at both ends of a virtual link. Therefore, if you modify the values of these parameters at one end of a virtual link, you must make the same modifications on the other end of the link.

The values of the other virtual link parameters do not require synchronization.

For example, to change the **dead-interval** parameter to 60 seconds on the virtual links defined on ABR1 and ABR2, enter the following command on ABR1.

```
Brocade(config-ospf6-router)# area 1 virtual-link 10.157.22.1
dead-interval 60
```

Enter the following command on ABR2.

```
Brocade(config-ospf6-router)# area 1 virtual-link 10.0.0.1 dead-interval 60
```

Syntax: `[no] area number | ipv4-address virtual-link router-id [dead-interval seconds | hello-interval seconds | retransmit-interval seconds | transmit-delay seconds]`

The `area number | ipv4-address` parameter specifies the transit area ID.

The `router-id` parameter specifies the router ID of the OSPF router at the remote end of the virtual link. To display the router ID on a device, enter the `show ip` command.

The `dead-interval`, `hello-interval`, `retransmit-interval`, and `transmit-delay` parameters are described earlier in this section.

Changing the reference bandwidth for the cost on OSPFv3 interfaces

Each interface on which OSPFv3 is enabled has a cost associated with it. The device advertises its interfaces and their costs to OSPFv3 neighbors. For example, if an interface has an OSPF cost of 10, the device advertises the interface with a cost of 10 to other OSPF routers.

By default, OSPF cost of an interface is based on the port speed of the interface. The software uses the following formula to calculate the cost.

$$\text{Cost} = \text{reference-bandwidth} / \text{interface-speed}$$

By default, the reference bandwidth is 100 Mbps. If the resulting cost is less than 1, the software rounds the cost up to 1. The default reference bandwidth results in the following costs:

- 10 Mbps port cost = $100/10 = 10$
- 100 Mbps port cost = $100/100 = 1$
- 1000 Mbps port cost = $100/1000 = 0.10$, which is rounded up to 1
- 155 Mbps port cost = $100/155 = 0.65$, which is rounded up to 1
- 622 Mbps port cost = $100/622 = 0.16$, which is rounded up to 1
- 2488 Mbps port cost = $100/2488 = 0.04$, which is rounded up to 1

The interfaces that consist of more than one physical port is calculated as follows:

- LAG group – The combined bandwidth of all the ports.
- Virtual (Ethernet) interface – The combined bandwidth of all the ports in the port-based VLAN that contains the virtual interface.

You can change the default reference bandwidth from 100 Mbps to a value from 1 through 4294967 Mbps.

If a change to the reference bandwidth results in a cost change to an interface, the device sends a link-state update to update the costs of interfaces advertised by the device.

NOTE

If you specify a cost for an interface, your specified cost overrides the cost that the software calculates.

Some interface types are not affected by the reference bandwidth and always have the same cost regardless of the reference bandwidth in use:

- The cost of a loopback interface is always 1.
- The cost of a virtual link is calculated using the Shortest Path First (SPF) algorithm and is not affected by the auto-cost feature.

- The bandwidth for tunnel interfaces is 9 Kbps and is subject to the auto-cost feature. For example, to change the reference bandwidth to 500, enter the following command.

```
Brocade(config-ospf6-router)# auto-cost reference-bandwidth 500
```

The reference bandwidth specified in this example results in the following costs:

- 10 Mbps port cost = $500/10 = 50$
- 100 Mbps port cost = $500/100 = 5$
- 1000 Mbps port cost = $500/1000 = 0.5$, which is rounded up to 1
- 155 Mbps port cost = $500/155 = 3.23$, which is rounded up to 4
- 622 Mbps port cost = $500/622 = 0.80$, which is rounded up to 1
- 2488 Mbps port cost = $500/2488 = 0.20$, which is rounded up to 1

The costs for 10 Mbps, 100 Mbps, and 155 Mbps ports change as a result of the changed reference bandwidth. Costs for higher-speed interfaces remain the same.

Syntax: `[no] auto-cost reference-bandwidth number`

The *number* parameter specifies the reference bandwidth in the range from 1 through 4294967. The default is 100.

To restore the reference bandwidth to its default value and thus restore the default costs of the interfaces to their default values, enter the **no** form of this command.

Redistributing routes into OSPFv3

In addition to specifying which routes are redistributed into OSPFv3, you can configure the following aspects related to route redistribution:

- Default metric.
- Metric type.
- Advertisement of an external aggregate route.

Configuring route redistribution into OSPFv3

You can configure the device to redistribute routes from the following sources into OSPFv3:

- IPv6 static routes
- Directly connected IPv6 networks
- BGP4+
- IPv6 IS-IS
- RIPng

You can redistribute routes in the following ways:

- By route types, for example, the device redistributes all IPv6 static and RIPng routes.
- By using a route map to filter which routes to redistribute, for example, the device redistributes specified IPv6 static and RIPng routes only.

For example, to configure the redistribution of all IPv6 static, RIPng, and IPv6 IS-IS level-1 and level-2 routes, enter the following commands.

```
Brocade(config-ospf6-router)# redistribute static
Brocade(config-ospf6-router)# redistribute rip
Brocade(config-ospf6-router)# redistribute isis level-1-2
```

Syntax: `[no] redistribute bgp | connected | isis [level-1 | level-1-2 | level-2] | rip | static [metric number | metric-type type]`

The **bgp** | **connected** | **isis** | **rip** | **static** keywords specify the route source.

The **level-1** | **level-1-2** | **level-2** keywords (for IPv6 IS-IS only) allow you to specify that the device redistributes level-1 routes only, level-2 routes only, or both level-1 and level-2 routes.

The **metric number** parameter specifies the metric used for the redistributed route. If a value is not specified for this option, and the value for the **default-metric** command is set to 0, its default metric, then routes redistributed from the various routing protocols will have the metric value of the protocol from which they are redistributed. For information about the **default-metric** command, refer to [“Modifying default metric for routes redistributed into OSPF Version 3”](#) on page 647.

The **metric-type type** parameter specifies an OSPF metric type for the redistributed route. You can specify external type 1 or external type 2. If a value is not specified for this option, the device uses the value specified by the **metric-type** command. For information about modifying the default metric type using the **metric-type** command, refer to [“Modifying metric type for routes redistributed into OSPF Version 3”](#) on page 648.

For example, to configure a route map and use it for redistribution of routes into OSPFv3, enter commands such as the following.

```
Brocade(config)# ipv6 route 2001:db8:1::/32 2001:db8:343e::23
Brocade(config)# ipv6 route 2001:db8:2::/32 2001:db8:343e::23
Brocade(config)# ipv6 route 2001:db8:3::/32 2001:db8:343e::23 metric 5
Brocade(config)# route-map abc permit 1
Brocade(config-route-map abc)# match metric 5
Brocade(config-route-map abc)# set metric 8
Brocade(config-route-map abc)# ipv6 router ospf
Brocade(config-ospf6-router)# redistribute static route-map abc
```

The commands in this example configure some static IPv6 routes and a route map, and use the route map for redistributing the static IPv6 routes into OSPFv3.

The **ipv6 route** commands configure the static IPv6 routes. The route-map command begins configuration of a route map called “abc”. The number indicates the route map entry (called the “instance”) you are configuring. A route map can contain multiple entries. The software compares packets to the route map entries in ascending numerical order and stops the comparison once a match is found.

The **match** command in the route map matches on routes that have 5 for their metric value (cost). The **set** command changes the metric in routes that match the route map to 8.

The **redistribute** command configures the redistribution of static IPv6 routes into OSPFv3, and uses route map “abc” to control the routes that are redistributed. In this example, the route map allows a static IPv6 route to be redistributed into OSPF only if the route has a metric of 5, and changes the metric to 8 before placing the route into the OSPF route redistribution table.

Syntax: `[no] redistribute bgp | connected | isis | rip | static [route-map map-name]`

The **bgp** | **connected** | **isis** | **rip** | **static** keywords specify the route source.

The **route-map** *map-name* parameter specifies the route map name. The following match parameters are valid for OSPFv3 redistribution:

- **match ip address** | **next-hop** *acl-number*
- **match metric** *number*
- **match tag** *tag-value*

The following set parameters are valid for OSPF redistribution:

- **set ip next hop** *ipv4-address*
- **set metric** [+ | -] *number* | none
- **set metric-type** type-1 | type-2
- **set tag** *tag-value*

NOTE

You must configure the route map before you configure a redistribution filter that uses the route map.

NOTE

When you use a route map for route redistribution, the software disregards the permit or deny action of the route map.

NOTE

For an external route that is redistributed into OSPFv3 through a route map, the metric value of the route remains the same unless the metric is set by a **set metric** command inside the route map or the **default-metric** *num* command. For a route redistributed without using a route map, the metric is set by the metric parameter if set or the **default-metric** *num* command if the metric parameter is not set.

Modifying default metric for routes redistributed into OSPF Version 3

The default metric is a global parameter that specifies the cost applied by default to routes redistributed into OSPFv3. The default value is 0.

If the **metric** parameter for the **redistribute** command is not set and the **default-metric** command is not set, the metric is set to 1, its default value, then routes redistributed from the various routing protocols will have the metric value of the protocol from which they are redistributed. For information about the **redistribute** command, refer to [“Configuring route redistribution into OSPFv3”](#) on page 645.

NOTE

You also can define the cost on individual interfaces. The interface cost overrides the default cost. For information about defining the cost on individual interfaces, refer to [“Modifying OSPFv3 interface defaults”](#) on page 656 and [“Changing the reference bandwidth for the cost on OSPFv3 interfaces”](#) on page 644.

To assign a default metric of 4 to all routes imported into OSPFv3, enter the following command.

```
Brocade(config-ospf6-router)# default-metric 4
```

Syntax: [no] **default-metric** *number*

You can specify a value from 0 – 65535. The default is 0.

To restore the **default metric** to the default value, use the **no** form of this command.

Modifying metric type for routes redistributed into OSPF Version 3

The device uses the **metric-type** parameter by default for all routes redistributed into OSPFv3 unless you specify a different metric type for individual routes using the **redistribute** command. (For more information about using the **redistribute** command, refer to “[Redistributing routes into OSPFv3](#)” on page 645.)

A type 1 route specifies a small metric (two bytes), while a type 2 route specifies a big metric (three bytes). The default value is type 2.

To modify the default value of type 2 to type 1, enter the following command.

```
Brocade(config-ospf6-router)# metric-type type1
```

Syntax: [no] **metric-type type1 | type2**

To restore the metric type to the default value, use the **no** form of this command.

Configuring external route summarization

When the device is an OSPF Autonomous System Boundary Router (ASBR), you can configure it to advertise one external route as an aggregate for all redistributed routes that are covered by a specified IPv6 address range.

When you configure an address range, the range takes effect immediately. All the imported routes are summarized according to the configured address range. Imported routes that have already been advertised and that fall within the range are flushed out of the AS and a single route corresponding to the range is advertised.

If a route that falls within a configured address range is imported by the device, no action is taken if the device has already advertised the aggregate route; otherwise, the device advertises the aggregate route. If an imported route that falls within a configured address range is removed by the device, no action is taken if there are other imported routes that fall within the same address range; otherwise the aggregate route is flushed.

You can configure up to 32 address ranges. The device sets the forwarding address of the aggregate route to zero and sets the tag to zero.

If you delete an address range, the advertised aggregate route is flushed and all imported routes that fall within the range are advertised individually.

If an external link state database overflow (LSDB) condition occurs, all aggregate routes are flushed out of the AS, along with other external routes. When the device exits the external LSDB overflow condition, all the imported routes are summarized according to the configured address ranges.

NOTE

If you use redistribution filters in addition to address ranges, the device applies the redistribution filters to routes first, then applies them to the address ranges.

NOTE

If you disable redistribution, all the aggregate routes are flushed, along with other imported routes.

NOTE

This option affects only imported, type 5 external routes. A single type 5 LSA is generated and flooded throughout the AS for multiple external routes.

To configure the summary address 2001:db8::/24 for routes redistributed into OSPFv3, enter the following command.

```
Brocade(config-ospf6-router)# summary-address 2001:db8::/24
```

In this example, the summary prefix 2001:db8::/24 includes addresses 2001:db8::/1 through 2001:db8::/24. Only the address FEC0::/24 is advertised in an external link-state advertisement.

Syntax: `summary-address ipv6-prefix/prefix-length`

You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

Filtering OSPFv3 routes

You can filter the routes to be placed in the OSPFv3 route table by configuring distribution lists. OSPFv3 distribution lists can be applied globally or to an interface.

The functionality of OSPFv3 distribution lists is similar to that of OSPFv2 distribution lists. However, unlike OSPFv2 distribution lists, which filter routes based on criteria specified in an Access Control List (ACL), OSPFv3 distribution lists can filter routes using information specified in an IPv6 prefix list or a route map.

Configuration examples

The following sections show examples of filtering OSPFv3 routes using prefix lists globally and for a specific interface, as well as filtering OSPFv3 routes using a route map.

You can configure the device to use all three types of filtering. When you do this, filtering using route maps has higher priority over filtering using global prefix lists. Filtering using prefix lists for a specific interface has lower priority than the other two filtering methods.

The example in this section assumes the following routes are in the OSPFv3 route table.

Configuring OSPFv3

```
Brocade# show ipv6 ospf route
```

```
Current Route count: 5
  Intra: 3 Inter: 0 External: 2 (Type1 0/Type2 2)
  Equal-cost multi-path: 0
  Destination                Options   Area          Cost Type2 Cost
  Next Hop Router            Outgoing Interface
*IA 2001:db8:1::/64          ----- 10.0.0.1      0 0
  ::                          ve 10
*E2 2001:db8:2::/64          ----- 0.0.0.0      10 0
  fe80::2e0:52ff:fe00:10     ve 10
*IA 2001:db8:3::/64          V6E---R-- 0.0.0.0      11 0
  fe80::2e0:52ff:fe00:10     ve 10
*IA 2001:db8:4::/64          ----- 0.0.0.0      10 0
  ::                          ve 11
*E2 2001:db8:5::/64          ----- 0.0.0.0      10 0
  fe80::2e0:52ff:fe00:10     ve 10
```

Configuring an OSPFv3 distribution list using an IPv6 prefix list as input

The following example illustrates how to use an IPv6 prefix list is used to filter OSPFv3 routes.

To specify an IPv6 prefix list called filterOspfRoutes that denies route 2001:db8:2::/64, enter the following commands.

```
Brocade(config)# ipv6 prefix-list filterOspfRoutes seq 5 deny 2001:db8:2::/64
Brocade(config)# ipv6 prefix-list filterOspfRoutes seq 7 permit ::/0 ge 1 le 128
```

Syntax: `ipv6 prefix-list name [seq seq-value] [description string] deny | permit
ipv6-addr/mask-bits [ge ge-value] [le le-value]`

To configure a distribution list that applies the filterOspfRoutes prefix list globally.

```
Brocade(config)# ipv6 router ospf
Brocade(config-ospf6-router)# distribute-list prefix-list filterOspfRoutes in
```

Syntax: `[no] distribute-list prefix-list name in [ethernet slot/port | ve num | loopback num]`

After this distribution list is configured, route 2001:db8:2::/64 would be omitted from the OSPFv3 route table.

```
Brocade# show ipv6 ospf route
```

```
Current Route count: 4
  Intra: 3 Inter: 0 External: 1 (Type1 0/Type2 1)
  Equal-cost multi-path: 0
  Destination                Options   Area          Cost Type2 Cost
  Next Hop Router            Outgoing Interface
*IA 2001:db8:1::/64          ----- 10.0.0.1      0 0
  ::                          ve 10
*IA 2001:db8:3::/64          V6E---R-- 0.0.0.0      11 0
  fe80::2e0:52ff:fe00:10     ve 10
*IA 2001:db8:4::/64          ----- 0.0.0.0      10 0
  ::                          ve 11
*E2 2001:db8:5::/64          ----- 0.0.0.0      10 0
  fe80::2e0:52ff:fe00:10     ve 10
```

The following commands specify an IPv6 prefix list called filterOspfRoutesVe that denies route 2001:db8:3::/64.

```
Brocade(config)# ipv6 prefix-list filterOspfRoutesVe seq 5 deny 2001:db8:3::/64
Brocade(config)# ipv6 prefix-list filterOspfRoutesVe seq 10 permit ::/0 ge 1 le 128
```

The following commands configure a distribution list that applies the filterOspfRoutesVe prefix list to routes pointing to virtual interface 10.

```
Brocade(config)# ipv6 router ospf
Brocade(config-ospf6-router)# distribute-list prefix-list filterOspfRoutesVe in
ve 10
```

After this distribution list is configured, route 2001:db8:3::/64, pointing to virtual interface 10, would be omitted from the OSPFv3 route table.

```
Brocade# show ipv6 ospf route
```

```
Current Route count: 4
  Intra: 3 Inter: 0 External: 1 (Type1 0/Type2 1)
  Equal-cost multi-path: 0
  Destination          Options  Area          Cost Type2 Cost
  Next Hop Router      Outgoing Interface
*IA 2001:db8:1::/64    ----- 10.0.0.1      0 0
  ::                   ve 10
*E2 2001:db8:2::/64    ----- 0.0.0.0       10 0
  fe80::2e0:52ff:fe00:10 ve 10
*IA 2001:db8:4::/64    ----- 0.0.0.0       10 0
  ::                   ve 11
*E2 2001:db8:5::/64    ----- 0.0.0.0       10 0
  fe80::2e0:52ff:fe00:10 ve 10
```

Configuring an OSPFv3 distribution list using a route map as input

The following commands configure a route map that matches internal routes.

```
Brocade(config)# route-map allowInternalRoutes permit 10
Brocade(config-routemap allowInternalRoutes)# match route-type internal
```

The following commands configure a distribution list that applies the allowInternalRoutes route map globally to OSPFv3 routes.

```
Brocade(config)# ipv6 router ospf
Brocade(config-ospf6-router)# distribute-list route-map allowinternalroutes in
```

Syntax: [no] distribute-list route-map *name* in

After this distribution list is configured, the internal routes would be included, and the external routes would be omitted from the OSPFv3 route table.

```
Brocade# show ipv6 ospf route
```

```
Current Route count: 3
  Intra: 3 Inter: 0 External: 0 (Type1 0/Type2 0)
  Equal-cost multi-path: 0
  Destination                Options   Area          Cost Type2 Cost
  Next Hop Router            Outgoing Interface
*IA 2001:db8:3001::/64      ----- 10.0.0.1      0 0
  ::                          ve 10
*IA 2001:db8:3015::/64      V6E---R-- 0.0.0.0      11 0
  fe80::2e0:52ff:fe00:10    ve 10
*IA 2001:db8:3020::/64      ----- 0.0.0.0      10 0
  ::                          ve 11
```

Configuring default route origination

When the device is an OSPF Autonomous System Boundary Router (ASBR), you can configure it to automatically generate a default external route into an OSPFv3 routing domain. This feature is called “default route origination” or “default information origination.”

By default, the device does not advertise the default route into the OSPFv3 domain. If you want the device to advertise the OSPF default route, you must explicitly enable default route origination.

When you enable OSPF default route origination, the device advertises a type 5 default route that is flooded throughout the AS (except stub areas).

The device advertises the default route into OSPF even if OSPF route redistribution is not enabled, and even if the default route is learned through an IBGP neighbor. The router will not, however, originate default if the active default route is learned from an OSPF router in the same domain.

NOTE

The device does not advertise the OSPF default route, regardless of other configuration parameters, unless you explicitly enable default route origination.

If default route origination is enabled and you disable it, the default route originated by the device is flushed. Default routes generated by other OSPF routers are not affected. If you re-enable the feature, the feature takes effect immediately and thus does not require you to reload the software.

For example, to create and advertise a default route with a metric of 2 and as a type 1 external route, enter the following command.

```
Brocade(config-ospf6-router)# default-information-originate always metric 2
metric-type type1
```

Syntax: [no] default-information-originate [always] [metric *value*] [metric-type *type*]

The **always** keyword originates a default route regardless of whether the device has learned a default route. This option is disabled by default.

The **metric value** parameter specifies a metric for the default route. If this option is not used, the value of the **default-metric** command is used for the route. For information about this command, refer to “[Modifying default metric for routes redistributed into OSPF Version 3](#)” on page 647.

The **metric-type type** parameter specifies the external link type associated with the default route advertised into the OSPF routing domain. The *type* can be one of the following:

- 1 – Type 1 external route

- 2 – Type 2 external route

If you do not use this option, the default redistribution metric type is used for the route type.

NOTE

If you specify a metric and metric type, the values are used even if you do not use the always option.

To disable default route origination, enter the **no** form of the command.

Modifying Shortest Path First timers

The device uses the following timers when calculating the shortest path for OSPFv3 routes:

- **SPF delay** – When the device receives a topology change, the software waits before it starts a Shortest Path First (SPF) calculation. By default, the software waits 5 seconds. You can configure the SPF delay to a value from 0 – 65535 seconds. If you set the SPF delay to 0 seconds, the software immediately begins the SPF calculation after receiving a topology change.
- **SPF hold time** – The device waits a specific amount of time between consecutive SPF calculations. By default, it waits 10 seconds. You can configure the SPF hold time to a value from 0 – 65535 seconds. If you set the SPF hold time to 0 seconds, the software does not wait between consecutive SPF calculations.

You can set the SPF delay and hold time to lower values to cause the device to change to alternate paths more quickly if a route fails. Note that lower values for these parameters require more CPU processing time.

You can change one or both of the timers.

NOTE

If you want to change only one of the timers, for example, the SPF delay timer, you must specify the new value for this timer as well as the current value of the SPF hold timer, which you want to retain. The device does not accept only one timer value.

NOTE

If you configure SPF timers between 0-100, they will default to 0 and be displayed incorrectly in the running configuration.

To change the SPF delay to 10 seconds and the SPF hold to 20 seconds, enter the following command.

```
Brocade(config-ospf6-router)# timers spf 10 20
```

Syntax: `timers spf delay hold-time`

For the *delay* and *hold-time* parameters, specify a value from 0 – 65535 seconds.

To set the timers back to their default values, enter the **no** version of this command.

Modifying administrative distance

The device can learn about networks from various protocols, including BGP4+, IPv6 IS-IS, RIPng, and OSPFv3. Consequently, the routes to a network may differ depending on the protocol from which the routes were learned. By default, the administrative distance for OSPFv3 routes is 110.

The device selects one route over another based on the source of the route information. To do so, the device can use the administrative distances assigned to the sources. You can influence the device's decision by changing the default administrative distance for OSPFv3 routes.

Configuring administrative distance based on route type

You can configure a unique administrative distance for each type of OSPFv3 route. For example, you can use this feature to influence the device to prefer a static route over an OSPF inter-area route and to prefer OSPF intra-area routes to static routes.

The distance you specify influences the choice of routes when the device has multiple routes to the same network from different protocols. The device prefers the route with the lower administrative distance.

You can specify unique default administrative distances for the following OSPFv3 route types:

- Intra-area routes
- Inter-area routes
- External routes

The default for all of these OSPFv3 route types is 110.

NOTE

This feature does not influence the choice of routes within OSPFv3. For example, an OSPF intra-area route is always preferred over an OSPF inter-area route, even if the intra-area route's distance is greater than the inter-area route's distance.

For example, to change the default administrative distances for intra-area routes to 80, inter-area routes to 90, and external routes to 100, enter the following commands.

```
Brocade(config-ospf6-router)# distance intra-area 80
Brocade(config-ospf6-router)# distance inter-area 90
Brocade(config-ospf6-router)# distance external 100
```

Syntax: `distance external | inter-area | intra-area distance`

The **external** | **inter-area** | **intra-area** keywords specify the route type for which you are changing the default administrative distance.

The *distance* parameter specifies the new distance for the specified route type. You can specify a value from

1 - 255.

To reset the administrative distance of a route type to its system default, enter the **no** form of this command.

Configuring the OSPFv3 LSA pacing interval

The device paces OSPFv3 LSA refreshes by delaying the refreshes for a specified time interval instead of performing a refresh each time an individual LSA's refresh timer expires. The accumulated LSAs constitute a group, which the device refreshes and sends out together in one or more packets.

The pacing interval, which is the interval at which the device refreshes an accumulated group of LSAs, is configurable to a range from 10 – 1800 seconds (30 minutes). The default is 240 seconds (four minutes). Thus, every four minutes, the device refreshes the group of accumulated LSAs and sends the group together in the same packets.

The pacing interval is inversely proportional to the number of LSAs the device is refreshing and aging. For example, if you have approximately 10,000 LSAs, decreasing the pacing interval enhances performance. If you have a very small database (40 – 100 LSAs), increasing the pacing interval to 10 – 20 minutes might enhance performance only slightly.

To change the OSPFv3 LSA pacing interval to two minutes (120 seconds), enter the following command.

```
Brocade(config)# ipv6 router ospf
Brocade(config-ospf6-router)# timers lsa-group-pacing 120
```

Syntax: `[no] timers lsa-group-pacing seconds`

The *seconds* parameter specifies the number of seconds and can be from 10 – 1800 (30 minutes). The default is 240 seconds (four minutes).

To restore the pacing interval to its default value, use the **no** form of the command.

Modifying exit overflow interval

If a database overflow condition occurs on the device, the device eliminates the condition by removing entries that originated on the device. The exit overflow interval allows you to set how often a device checks to see if the overflow condition has been eliminated. The default value is 0. If the configured value of the database overflow interval is 0, then the device never leaves the database overflow condition.

For example, to modify the exit overflow interval to 60 seconds, enter the following command.

```
Brocade(config-ospf6-router)# database-overflow-interval 60
```

Syntax: `database-overflow-interval seconds`

The *seconds* parameter can be a value from 0 – 86400 seconds (24 hours).

To reset the exit overflow interval to its system default, enter the **no** form of this command.

Modifying external link state database limit

By default, the link state database can hold a maximum of 2000 entries for external (type 5) LSAs. You can change the maximum number of entries from 500 – 8000. After changing this limit, make sure to save the running-config file and reload the software. The change does not take effect until you reload or reboot the software.

For example, to change the maximum number entries from the default of 2000 to 3000, enter the following command.

```
Brocade(config-ospf6-router)# external-lsdb-limit 3000
```

Syntax: `external-lsdb-limit entries`

The *entries* parameter can be a numerical value from 500 – 8000 seconds.

To reset the maximum number of entries to its system default, enter the **no** form of this command.

Setting all OSPFv3 interfaces to the passive state

You can set all the Open Shortest Path First Version 3 (OSPFv3) interfaces to the default passive state using the **default-passive-interface** command. When you configure the interfaces as passive, the interfaces drop all the OSPFv3 control packets.

To set all the OSPFv3 interfaces to passive, enter the following commands.

```
Brocade# configure terminal
Brocade(config)# ipv6 router ospf vrf A
Brocade(config-ospf6-router-vrf-A)# default-passive-interface
```

Syntax: [no] **default-passive-interface**

Modifying OSPFv3 interface defaults

OSPFv3 has interface parameters that you can configure. For simplicity, each of these parameters has a default value. No change to these default values is required except as needed for specific network configurations.

You can modify the default values for the following OSPF interface parameters:

- **Cost:** Indicates the overhead required to send a packet across an interface. You can modify the cost to differentiate between 100 Mbps and 1000 Mbps (1 Gbps) links. The command syntax is **ipv6 ospf cost number**. The default cost is calculated by dividing 100 million by the bandwidth. For 10 Mbps links, the cost is 10. The cost for both 100 Mbps and 1000 Mbps links is 1, because the speed of 1000 Mbps was not in use at the time the OSPF cost formula was devised.
- **Dead-interval:** Indicates the number of seconds that a neighbor router waits for a hello packet from the device before declaring the router down. The command syntax is **ipv6 ospf dead-interval seconds**. The value can be from 1 – 2147483647 seconds. The default is 40 seconds.
- **Hello-interval:** Represents the length of time between the transmission of hello packets. The command syntax is **ipv6 ospf hello-interval seconds**. The value can be from 1 – 65535 seconds. The default is 10 seconds.
- **Instance:** Indicates the number of OSPFv3 instances running on an interface. The command syntax is **ipv6 ospf instance number**. The value can be from 0 – 255. The default is 1.
- **MTU-ignore:** Allows you to disable a check that verifies the same MTU is used on an interface shared by neighbors. The command syntax is **ipv6 ospf mtu-ignore**. By default, the mismatch detection is enabled.
- **Network:** Allows you to configure the OSPF network type. The command syntax is **ipv6 ospf network [point-to-multipoint]**. The default setting of the parameter depends on the network type.
- **Passive:** When you configure an OSPF interface to be passive, that interface does not send or receive OSPF route updates. This option affects all IPv6 subnets configured on the interface. The command syntax is **ipv6 ospf passive**. By default, all OSPF interfaces are active and thus can send and receive OSPF route information. Since a passive interface does not send or receive route information, the interface is in effect a stub network.

- **Active:** When you configure an OSPFv3 interface to be active, that interface sends or receives all the control packets and forms the adjacency. By default, the **ipv6 ospf active** command is disabled. Whenever you configure the OSPFv3 interfaces to be passive using the **default-passive-interface** command, all the OSPFv3 interfaces stop sending and receiving control packets. To send and receive packets over specific interfaces, you can use the **ipv6 ospf active** command.
- **Priority:** Allows you to modify the priority of an OSPF router. The priority is used when selecting the designated router (DR) and backup designated routers (BDRs). The command syntax is **ipv6 ospf priority number**. The value can be from 0 – 255. The default is 1. If you set the priority to 0, the router does not participate in DR and BDR election.
- **Retransmit-interval:** The time between retransmissions of LSAs to adjacent routers for an interface. The command syntax is **ipv6 ospf retransmit-interval seconds**. The value can be from 0 – 3600 seconds. The default is 5 seconds.
- **Transmit-delay:** The time it takes to transmit Link State Update packets on this interface. The command syntax is **ipv6 ospf transmit-delay seconds**. The range is 0 – 3600 seconds. The default is 1 second.

Disabling or re-enabling event logging

OSPFv3 supports the logging of OSPFv3 events. The log-status change command controls the generation of all OSPFv3 logs. You can disable or re-enable the logging of events related to OSPFv3, such as neighbor state changes and database overflow conditions. By default, the device logs these events.

To disable the logging of events, enter the following command.

```
Brocade(config-ospf6-router)# no log-status-change
```

Syntax: [no] log-status-change

To re-enable the logging of events, enter the following command.

```
Brocade(config-ospf6-router)# log-status-change
```

IPsec for OSPFv3

This section describes the implementation of Internet Protocol Security (IPsec) for securing OSPFv3 traffic. For background information and configuration steps, refer to “[Configuring IPsec for OSPFv3](#)” on page 658.

IPsec is available for OSPFv3 traffic only and only for packets that are “for-us.” A for-us packet is addressed to one of the IPv6 addresses on the device or to an IPv6 multicast address. Packets that are just forwarded by the line card do not receive IPsec scrutiny.

Brocade devices support the following components of IPsec for IPv6-addressed packets:

- Authentication through Encapsulating Security Payload (ESP) in transport mode
- HMAC-SHA1-96 as the authentication algorithm
- Manual configuration of keys
- Configurable rollover timer

IPsec can be enabled on the following logical entities:

- Interface
- Area
- Virtual link

With respect to traffic classes, this implementation of IPsec uses a single security association (SA) between the source and destination to support all traffic classes and so does not differentiate between the different classes of traffic that the DSCP bits define.

Instructions for configuring IPsec on these entities appear in [“Configuring IPsec for OSPFv3”](#) on page 658.

IPsec on a virtual link is a global configuration. Interface and area IPsec configurations are more granular.

Among the entities that can have IPsec protection, the interfaces and areas can overlap. The interface IPsec configuration takes precedence over the area IPsec configuration when an area and an interface within that area use IPsec. Therefore, if you configure IPsec for an interface and an area configuration also exists that includes this interface, the interface’s IPsec configuration is used by that interface. However, if you disable IPsec on an interface, IPsec is disabled on the interface even if the interface has its own, specific authentication. Refer to [“Disabling IPsec on an interface”](#) on page 664.

For IPsec, the system generates two types of databases. The *security association database (SAD)* contains a security association for each interface or one global database for a virtual link. Even if IPsec is configured for an area, each interface that uses the area’s IPsec still has its own security association in the SAD. Each SA in the SAD is a generated entry that is based on your specifications of an authentication protocol (ESP in the current release), destination address, and a security policy index (SPI). The SPI number is user-specified according to the network plan. Consideration for the SPI values to specify must apply to the whole network.

The system-generated security policy databases (SPDs) contain the security policies against which the system checks the for-us packets. For each for-us packet that has an ESP header, the applicable security policy in the security policy database (SPD) is checked to see if this packet complies with the policy. The IPsec task drops the non-compliant packets. Compliant packets continue on to the OSPFv3 task.

Configuring IPsec for OSPFv3

This section describes how to configure IPsec for an interface, area, and virtual link. It also describes how to change the key rollover timer if necessary and how to disable IPsec on a particular interface for special purposes.

By default, OSPFv3 IPsec authentication is disabled. The following IPsec parameters are configurable:

- ESP security protocol
- Authentication
- HMAC-SHA1-96 authentication algorithm
- Security parameter index (SPI)
- A 40-character key using hexadecimal characters
- An option for not encrypting the keyword when it appears in **show** command output
- Key rollover timer
- Specifying the key add remove timer

NOTE

In the current release, certain keyword parameters must be entered even though only one keyword choice is possible for that parameter. For example, the only authentication algorithm in the current release is HMAC-SHA1-96, but you must nevertheless enter the keyword for this algorithm. Also, ESP currently is the only authentication protocol, but you must still enter the **esp** keyword. This section describes all keywords.

General considerations

The IPsec component generates security associations and security policies based on certain user-specified parameters. The parameters are described with the syntax of each command in this section and also pointed out in the section with the **show** command examples, “[IPsec examples](#)” on page 693. User-specified parameters and their relation to system-generated values are as follows:

- **Security association:** based on your entries for *security policy index* (SPI), *destination address*, and *security protocol* (currently ESP), the system creates a security association for each interface or virtual link.
- **Security policy database:** based on your entries for SPI, *source address*, *destination addresses*, and *security protocol*, the system creates a security policy database for each interface or virtual link.
- You can configure the same SPI and key on multiple interfaces and areas, but they still have unique IPsec configurations because the SA and policies are added to each separate security policy database (SPD) that is associated with a particular interface. If you configure an SA with the same SPI in multiple places, the rest of the parameters associated with the SA — such as key, cryptographic algorithm, and security protocol, and so on — must match. If the system detects a mismatch, it displays an error message.
- IPsec authentication for OSPFv3 requires the use of multiple SPDs, one for each interface. A virtual link has a separate, global SPD. The authentication configuration on a virtual link must be different from the authentication configuration for an area or interface, as required by RFC4552. The interface number is used to generate a non-zero security policy database identifier (SPDID), but for the global SPD for a virtual link, the system-generated SPDID is always zero. As a hypothetical example, the SPD for interface eth 1/1 might have the system-generated SPDID of 1, and so on.
- If you change an existing key, you must also specify a different SPI value. For example, in an interface context where you intend to change a key, you must type a different SPI value — which occurs before the key parameter on the command line — before you type the new key. The example in “[Configuring IPsec for OSPFv3](#)” illustrates this requirement.
- The old key is active for twice the current configured key-rollover-interval for the inbound direction. In the outbound direction, the old key remains active for a duration equal to the key-rollover-interval. If the key-rollover-interval is set to 0, the new key immediately takes effect for both directions. For a description of the key-rollover-interval, refer to the “[Changing the key rollover timer](#)” on page 664section.

Interface and area IPsec considerations

This section describes the precedence of interface and area IPsec configurations.

If you configure an interface IPsec by using the **ipv6 ospf authentication** command in the context of a specific interface, that interface’s IPsec configuration overrides the area configuration of IPsec.

If you configure IPsec for an area, all interfaces that utilize the area-wide IPsec (where interface-specific IPsec is not configured) nevertheless receive an SPD entry (and SPDID number) that is unique for the interface.

The area-wide SPI that you specify is a constant for all interfaces in the area that use the area IPsec, but the use of different interfaces results in an SPDID and an SA that are unique to each interface. (Recall from “IPsec for OSPFv3” on page 657 that the security policy database depends partly on the source IP address, so a unique SPD for each interface results.)

Considerations for IPsec on virtual links

The IPsec configuration for a virtual link is global, so only one security association database and one security policy database exist for virtual links if you choose to configure IPsec for virtual links.

The virtual link IPsec SAs and policies are added to all interfaces of the transit area for the outbound direction. For the inbound direction, IPsec SAs and policies for virtual links are added to the global database.

NOTE

The security association (SA), security protocol index (SPI), security protocol database (SPD), and key have mutual dependencies, as the subsections that follow describe.

Specifying the key rollover timer

Configuration changes for authentication takes effect in a controlled manner through the key rollover procedure as specified in RFC 4552, Section 10.1. The key rollover timer controls the timing of the existing configuration changeover. The key rollover timer can be configured in the IPv6 router OSPF context, as the following example illustrates.

```
Brocade (config-ospf6-router) #key-rollover-interval 200
```

Syntax: `key-rollover-interval time`

The range for the key-rollover-interval is 0 – 14400 seconds. The default is 300 seconds.

Specifying the key add remove timer

The **key-add-remove** timer is used in an environment where interoperability with other vendors is required on a specific interface. This parameter is used to determine the interval time when authentication addition and deletion will take effect.

The **key-add-remove-interval** timer can be used to set the required value globally, or on a specific interface as needed. Interface configuration takes preference over system level configuration.

By default, the **key-add-remove-interval** is set to 300 seconds to smoothly interoperate with Brocade routers.

To set the **key-add-remove-interval** globally to 100 seconds, enter the following commands:

```
Brocade (config-ospf6-router) # key-add-remove-interval 100
```

To set the **key-add-remove-interval** to 100 seconds at a specific interface, enter the following commands:

```
Brocade (config-if-e1000-1/10) #ipv6 ospf authentication ipsec
key-add-remove-interval 100
```


Syntax: `[no] ipv6 ospf authentication ipsec key-add-remove-interval range`

The **no** form of this command sets the `key-add-remove-interval` back to a default of 300 seconds.

The **ipv6** command is available in the configuration interface context for a specific interface.

The **ospf** keyword identifies OSPFv3 as the protocol to receive IPsec security.

The **authentication** keyword enables authentication.

The **ipsec** keyword specifies IPsec as the authentication protocol.

The *range* is a value between 0 and 14400 seconds.

This command is not set by default and **key-add-remove-interval** is set to the same value as **key-rollover-interval** .

The **key-add-remove-interval** settings are displayed in the show command output as displayed in [“General OSPF configuration information”](#) on page 669 and [“Displaying IPv6 OSPFv3 interface information in full mode”](#) on page 678.

NOTE

This command will not resolve the issue completely on a network where Brocade Routers running software that does not support **key-add-remove-interval** (earlier versions of NetIron R05.3.00) and other vendor’s routers are present. In this case, disabling and enabling the interface or setting **key-rollover-interval** to 0 will resolve the issue.

Configuring IPsec on a interface

For IPsec to work, the IPsec configuration must be the same on all the routers to which an interface connects.

For multicast, IPsec does not need or use a specific destination address – the destination address is “do not care,” and this status is reflected by the lone pair of colons (::) for destination address in the **show** command output.

To configure IPsec on an interface, proceed as in the following example.

NOTE

The IPsec configuration for an interface applies to the inbound and outbound directions. Also, the same authentication parameters must be used by all routers on the network to which the interface is connected, as described in section 7 of RFC 4552.

```
Brocade(config-if-e10000-1/2)#ipv6 ospf auth ipsec spi 429496795 esp sha1
abcdef12345678900987654321fedcba12345678
```

Syntax: `[no] ipv6 ospf authentication ipsec spi spinum esp sha1 [no-encrypt] key`

The **no** form of this command deletes IPsec from the interface.

The **ipv6** command is available in the configuration interface context for a specific interface.

The **ospf** keyword identifies OSPFv3 as the protocol to receive IPsec security.

The **authentication** keyword enables authentication.

The **ipsec** keyword specifies IPsec as the authentication protocol.

The **spi** keyword and the *spinum* variable specify the security parameter that points to the security association. The near-end and far-end values for *spinum* must be the same. The range for *spinum* is decimal 256 – 4294967295.

The mandatory **esp** keyword specifies ESP (rather than authentication header) as the protocol to provide packet-level security. In the current release, this parameter can be **esp** only.

The **sha1** keyword specifies the HMAC-SHA1-96 authentication algorithm. This mandatory parameter can be only the **sha1** keyword in the current release.

Including the optional **no-encrypt** keyword means that when you display the IPsec configuration, the key is displayed in its unencrypted form and also saved as unencrypted.

The key variable must be 40 hexadecimal characters. To change an existing key, you must also specify a different SPI value. You cannot just change the key without also specifying a different SPI, too. For example, in an interface context where you intend to change a key, you must type a different SPI value – which occurs before the key parameter on the command line – before you type the new key. The example in “[Configuring IPsec for OSPFv3](#)” illustrates this requirement.

If **no-encrypt** is not entered, then the key will be encrypted. This is the default. The system adds the following in the configuration to indicate that the key is encrypted:

- **encrypt** = the key string uses proprietary simple cryptographic 2-way algorithm (only for Brocade NetIron CES and Brocade NetIron CER devices).
- **encryptb64** = the key string uses proprietary base64 cryptographic 2-way algorithm (only for Brocade NetIron XMR and Brocade MLX series devices)

This example results in the configuration shown in the screen output that follows. Note that because the optional **no-encrypt** keyword was omitted, the display of the key has the encrypted form by default.

```
interface ethernet 1/2
  enable
  ip address 10.3.3.1/8
  ipv6 address 2001:db8:3::1/64
  ipv6 ospf area 1
  ipv6 ospf authentication ipsec spi 429496795 esp sha1 encryptb64
  $ITJkQG5HWnw4M09tWVd
```

Configuring IPsec for an area

This application of the **area** command (for IPsec) applies to all of the interfaces that belong to an area unless an interface has its own IPsec configuration. (As described in “[Disabling IPsec on an interface](#)” on page 664, the interface IPsec can be operationally disabled if necessary.) To configure IPsec for an area in the IPv6 router OSPF context, proceed as in the following example.

```
Brocade(config-ospf6-router)#area 2 auth ipsec spi 400 esp sha1
abcef12345678901234fedcba098765432109876
```

Syntax: **area** *area-id* **authentication ipsec spi** *spinum* **esp sha1** [**no-encrypt**] *key*

The **no** form of this command deletes IPsec from the area.

The **area** command and the *area-id* variable specify the area for this IPsec configuration. The *area-id* can be an integer in the range 0 – 2,147,483,647 or have the format of an IP address.

The **authentication** keyword specifies that the function to specify for the area is packet authentication.

The **ipsec** keyword specifies that IPsec is the protocol that authenticates the packets.

The **spi** keyword and the *spinum* variable specify the index that points to the security association. The near-end and far-end values for spinum must be the same. The range for *spinum* is decimal 256 – 4294967295.

The mandatory **esp** keyword specifies ESP (rather than authentication header) as the protocol to provide packet-level security. In the current release, this parameter can be **esp** only.

The **sha1** keyword specifies the HMAC-SHA1-96 authentication algorithm. This mandatory parameter can be only the **sha1** keyword in the current release.

Including the optional **no-encrypt** keyword means that the 40-character key is not encrypted upon either its entry or its display. The key must be 40 hexadecimal characters.

If **no-encrypt** is not entered, then the key will be encrypted. This is the default. The system adds the following in the configuration to indicate that the key is encrypted:

- **encrypt** = the key string uses proprietary simple cryptographic 2-way algorithm (only for Brocade Netron CES and Brocade Netron CER devices).
- **encryptb64** = the key string uses proprietary base64 cryptographic 2-way algorithm (only for Brocade Netron XMR and Brocade MLX series devices)

The configuration in the preceding example results in the configuration for area 2 that is illustrated in the following.

```
ipv6 router ospf
  area 0
  area 1
  area 2
  area 2 auth ipsec spi 400 esp sha1 abcef12345678901234fedcba098765432109876
```

Configuring IPsec for a virtual link

IPsec on a virtual link has a global configuration.

To configure IPsec on a virtual link, enter the IPv6 router OSPF context of the CLI and proceed as the following example illustrates. (Note the **no-encrypt** option in this example.)

```
Brocade(config-ospf6-router)#area 1 vir 10.2.2.2 auth ipsec spi 360 esp sha1
no-encrypt 1234567890098765432112345678990987654321
```

Syntax: **[no]** **area** *area-id* **virtual** *nbrid* **authentication ipsec spi** *spinum* **esp sha1** **[no-encrypt]** *key*

The **no** form of this command deletes IPsec from the virtual link.

The **area** command and the *area-id* variable specify the area is to be configured. The *area-id* can be an integer in the range 0 – 2,147,483,647 or have the format of an IP address.

The **virtual** keyword indicates that this configuration applies to the virtual link identified by the subsequent variable *nbrid*. The variable *nbrid* is in dotted decimal notation of an IP address.

The **authentication** keyword specifies that the function to specify for the area is packet authentication.

The **ipsec** keyword specifies that IPsec is the protocol that authenticates the packets.

The **spi** keyword and the *spinum* variable specify the index that points to the security association. The near-end and far-end values for spinum must be the same. The range for *spinum* is decimal 256 – 4294967295.

The mandatory **esp** keyword specifies ESP (rather than authentication header) as the protocol to provide packet-level security. In the current release, this parameter can be **esp** only.

The **sha1** keyword specifies the HMAC-SHA1-96 authentication algorithm. This mandatory parameter can be only the **sha1** keyword in the current release.

Including the optional **no-encrypt** keyword means that the 40-character key is not encrypted in **show** command displays. If **no-encrypt** is not entered, then the key will be encrypted. This is the default. The system adds the following in the configuration to indicate that the key is encrypted:

- **encrypt** = the key string uses proprietary simple cryptographic 2-way algorithm (only for Brocade Netron CES and Brocade Netron CER devices).
- **encryptb64** = the key string uses proprietary base64 cryptographic 2-way algorithm (only for Brocade Netron XMR and Brocade MLX series devices)

This example results in the following configuration.

```
area 1 virtual-link 10.2.2.2
area 1 virtual-link 10.2.2.2 authentication ipsec spi 360 esp sha1 no-encrypt 12
34567890098765432112345678990987654321
```

Disabling IPsec on an interface

For the purpose of troubleshooting, you can operationally disable IPsec on an interface by using the **ipv6 ospf authentication ipsec disable** command in the CLI context of a specific interface. This command disables IPsec on the interface whether its IPsec configuration is the area's IPsec configuration or is specific to that interface. The output of the **show ipv6 ospf interface command** shows the current setting for the disable command.

To disable IPsec on an interface, go to the CLI context of the interface and proceed as in the following example.

```
Brocade(config-if-e10000-1/2)#ipv6 ospf auth ipsec disable
```

Syntax: [no] **ipv6 ospf authentication ipsec disable**

The **no** form of this command restores the area and interface-specific IPsec operation.

Changing the key rollover timer

Configuration changes for authentication takes effect in a controlled manner through the key rollover procedure as specified in RFC 4552, Section 10.1. The key rollover timer controls the timing of the configuration changeover. The key rollover timer can be configured in the IPv6 router OSPF context, as the following example illustrates.

```
Brocade(config-ospf6-router)#key-rollover-interval 200
```

Syntax: **key-rollover-interval** *time*

The range for the key-rollover-interval is 0 – 14400 seconds. The default is 300 seconds.

Clearing IPsec statistics

This section describes the **clear ipsec statistics** command for clearing statistics related to IPsec. The command resets to 0 the counters (which you can view as a part of IP Security Packet Statistics). The counters hold IPsec packet statistics and IPsec error statistics. The following example illustrates the **show ipsec statistics** output.

```
Brocade#show ipsec statistics
                    IPSECURITY Statistics
secEspCurrentInboundSAs 1      ipsecEspTotalInboundSAs: 2
secEspCurrentOutboundSA 1      ipsecEspTotalOutboundSAs: 2
                    IPSECURITY Packet Statistics
secEspTotalInPkts:      20      ipsecEspTotalInPktsDrop: 0
secEspTotalOutPkts:    84
                    IPSECURITY Error Statistics
secAuthenticationErrors 0
secReplayErrors:        0      ipsecPolicyErrors:      13
secOtherReceiveErrors: 0      ipsecSendErrors:        0
secUnknownSpiErrors:   0
```

To clear the statistics, enter the **clear ipsec statistics** command as in the following example.

```
Brocade#clear ipsec statistics
```

Syntax: clear ipsec statistics

This command takes no parameters.

Configuring OSPFv3 Graceful Restart Helper mode

To enable the graceful restart (GR) helper capability, use the **graceful-restart helper** command in the OSPFv6 interface mode. Graceful restart for OSPFv3 helper mode is enabled by default.

```
Brocade(config-ospf6-router)# graceful-restart helper strict-lsa-checking
```

Syntax: [no] graceful-restart helper {disable | strict-lsa-checking}

The **disable** keyword is used to disable the graceful-restart helper capability. By default, it is enabled.

The **strict-lsa-checking** keyword is used to enable the graceful-restart helper router to terminate restart supporting any topology change. By default, it is disabled.

[Table 130](#) lists the specific **graceful-restart helper** command examples to enable or disable certain operations using the **graceful restart helper** command.

TABLE 130 OSPFv3 area information fields

Task	Configuration example
Disabling graceful restart helper on a router	<pre>Brocade (config-ospf6-router) #graceful-restart helper disable</pre> <p>NOTE: Graceful restart for OSPFv3 helper mode is enabled by default.</p>
Enabling graceful restart helper on a router	<pre>Brocade (config-ospf6-router) #no graceful-restart helper disable</pre>

TABLE 130 OSPFv3 area information fields (Continued)

Task	Configuration example
Enabling LSA checking option on the helper	Brocade(config-ospf6-router)#graceful-restart helper strict-lsa-checking
Enabling graceful restart per VRF NOTE: Graceful-restart-helper option can be enabled or disabled per VRF in OSPFv3. If configured outside VRF, then it is applicable to the default VRF instance of OSPFv3.	Brocade(config-ospf6-router-vrf-red)#graceful-restart helper strict-lsa-checking

Configuring OSPFv3 NSR

In graceful restart, the restarting neighbors need to help build the routing information during the failover, but the graceful restart helper may not be supported by all routers in a network. Hence to eliminate this dependency, the non-stop routing (NSR) feature is supported on Brocade NetIron XMR and Brocade MLX series devices. NSR does not require support from neighboring routers to perform hitless failover.

To enable NSR for OSPFv3, use the **nonstop-routing** command in the OSPFv6 interface mode.

```
Brocade(config)# ipv6 router ospf
Brocade(config-ospf6-router)# nonstop-routing
```

To disable NSR for OSPFv3, use the **no** form of the **nonstop-routing** command.

Syntax: [no] nonstop-routing

Configuring OSPFv3 max-metric router LSA

The OSPFv3 max-metric router LSA feature enables OSPFv3 to advertise its locally generated router LSAs with a maximum metric to direct transit traffic away from the router, while still routing for directly connected networks. By advertising the maximum metric, the router will not attract transit traffic. A router which does not handle transit traffic and only forwards packets destined for its directly connected links is known as a stub router. In OSPFv3 networks, a device could be placed in a stub router role by advertising large metrics for its connected links, so that the cost of a path through the device becomes larger than that of an alternative path.

You can configure OSPFv3 max-metric router LSA in either startup or non-startup mode. Configuring max-metric on startup may be helpful on ASBRs where protocols such as BGP converge after OSPF converges. Configuring max-metric on non-startup may be helpful in database overflow scenarios.

Max metric router LSA is configured in an incremental fashion. To configure OSPFv3 to advertise router LSAs with the cost of point-to-point and transit links set to 65535, enter the following command.

```
Brocade(config-ospf6-router)# max-metric router-lsa
```

To modify OSPFv3 to advertise intra-area-prefix LSAs with the cost of stubs set to 65535 and the cost of external LSAs set to 16711680, enter the following command:

```
Brocade(config-ospf6-router)# max-metric router-lsa include-stub external-lsa
```

To modify OSPFv3 to advertise summary type-3 and type-4 LSAs with the cost set to 10000, enter the following command. Executing this command will not alter the existing **include-stub** and **external-lsa** configuration.

```
Brocade(config-ospf6-router)# max-metric router-lsa summary-lsa 10000
```

Although max-metric router LSA configuration is done in an incremental fashion, the **show run** command displays the configuration in just one line. For example, after executing the three configuration commands above, the output of the **show run** command would be:

```
Brocade(config-ospf6-router)# max-metric router-lsa include-stub summary-lsa
10000 external-lsa
```

To remove the **include-stub** and **summary-lsa** options from this configuration, enter the following command.

```
Brocade(config-ospf6-router)#no max-metric router-lsa include-stub summary-lsa
```

The output of **show run** would then be:

```
Brocade(config-ospf6-router)# max-metric router-lsa external-lsa
```

By default, when max-metric router LSA is configured, OSPFv3 always advertises the maximum metric for router LSAs and external LSAs. To modify OSPFv3 to advertise the max-metric for a period of 60 seconds only on startup, enter the following command.

```
Brocade(config-ospf6-router)# max-metric router-lsa on-startup 60
```

The output of **show run** would then be:

```
Brocade(config-ospf6-router)# max-metric router-lsa external-lsa on-startup 60
```

OSPFv3 can also be configured to advertise the max-metric for stub on startup using the following command:

```
Brocade(config-ospf6-router-v)# max-metric router-lsa include-stub
```

OSPFv3 would then be configured to advertise the max-metric for stub, router LSA and summary LSA on startup and the output of **show run** would be:

```
Brocade(config-ospf6-router)# max-metric router-lsa include-stub external-lsa
on-startup 60
```

To remove the **on-startup** option alone, so that OSPFv3 will always advertise the max-metric for router LSA, intra-area-prefix LSA and summary LSA, enter the following command:

```
Brocade(config-ospf6-router)# no max-metric router-lsa on-startup
```

The output of **show run** would then be:

```
Brocade(config-ospf6-router)# max-metric router-lsa include-stub external-lsa
```

Syntax: **[no] max-metric router-lsa [include-stub] [summary-lsa [max-metric-value]] [external-lsa [max-metric-value]] [on-startup {seconds | wait-for-bgp}]**

The **router-lsa** parameter configures the device to advertise the maximum metric for point-to-point and transit links. The maximum metric value is 65535.

The **include-stub** parameter specifies the advertisement of the maximum metric value (65535) for point-to-point and broadcast stub links in the intra-area-prefix LSA.

NOTE

You cannot specify a maximum metric value with the **include-stub** parameter. If you specify **include-stub**, point-to-point and broadcast stub links in the intra-area-prefix LSA are advertised at a value of 65535.

The **summary-lsa** [*max-metric-value*] parameter configures the maximum metric value for inter-area-prefix type-3 and type-4 LSAs. The range is from 1 through 16777215. The default value is 16711680.

NOTE

Setting the *max-metric-value* for **summary-lsa** to 16777215 makes the route unreachable.

The **external-lsa** [*max-metric-value*] parameter configures the maximum metric value for external type-5 and type-7 LSAs. The range is from 1 through 16777215. The default value is 16711680.

NOTE

Setting the *max-metric-value* for **external-lsa** to 16777215 makes the route unreachable.

The **on-startup** {*seconds* | **wait-for-bgp**} parameter specifies the advertisement of the maximum metric for a limited period only, on startup. The *seconds* variable specifies the length of time in seconds. The range is from 5 through 86400. The **wait-for-bgp** parameter specifies that the maximum metric is advertised until BGP converges or for 600 seconds. When the **on-startup** option is not specified, a device configured with **max-metric router-lsa** always advertises the max-metric.

The **no** form of the command removes the configuration.

NOTE

The **on-startup** configuration does not apply to NSR restarts.

Displaying OSPFv3 information

You can display the information for the following OSPFv3 parameters:

- Areas
- Link state databases
- Interfaces
- Memory usage
- Neighbors
- Redistributed routes
- Routes
- SPF
- Virtual links
- Virtual neighbors
- IPsec
- key-add-remove interval

General OSPF configuration information

To indicate whether the Brocade device is operating as ASBR or not, enter the following command at any CLI level.

```
Brocade#show ipv6 ospf
OSPFv3 Process number 0 with Router ID 0x10010101(10.1.1.1)
Running 0 days 0 hours 1 minutes 53 seconds
Number of AS scoped LSAs is 3
Sum of AS scoped LSAs Checksum is fabdd4de
External LSA Limit is 250000
Database Overflow Interval is 10
Database Overflow State is NOT OVERFLOWED
Route calculation executed 0 times
Pending outgoing LSA count 0
Authentication key rollover interval 30 seconds
Authentication key add/remove interval 0 seconds
Number of areas in this router is 4
Router is operating as ABR
Router is operating as ASBR, Redistribute: CONNECTED
High Priority Message Queue Full count: 0
BFD is disabled
```

The output of the **show ipv6 ospf** command will indicate if the Brocade device is operating as ASBR. If the device is not operating as ASBR, then there will be no information about redistribution in the output.

Displaying OSPFv3 area information

To display global OSPFv3 area information for the device, enter the following command at any CLI level.

```
Brocade# show ipv6 ospf area
Area 0:
  Interface attached to this area: loopback 2 ethe 3/2 tunnel 2
  Number of Area scoped LSAs is 6
  Statistics of Area 0:
    SPF algorithm executed 16 times
    SPF last updated: 335256 sec ago
    Current SPF node count: 3
      Router: 2 Network: 1
    Maximum of Hop count to nodes: 2
  ...
```

Syntax: **show ipv6 ospf area** [*area-id*]

You can specify the *area-id* parameter in the following formats:

- As an IPv4 address, for example, 192.168.1.1.
- As a numerical value from 0 – 2,147,483,647.

The *area-id* parameter restricts the display to the specified OSPF area.

This display shows the following information.

TABLE 131 OSPFv3 area information fields

This field...	Displays...
Area	The area number.
Interface attached to this area	The router interfaces attached to the area.
Number of Area scoped LSAs is <i>N</i>	Number of LSAs (<i>N</i>) with a scope of the specified area.
SPF algorithm executed is <i>N</i>	The number of times (<i>N</i>) the OSPF Shortest Path First (SPF) algorithm is executed within the area.
SPF last updated	The interval in seconds that the SPF algorithm was last executed within the area.
Current SPF node count	The current number of SPF nodes in the area.
Router	Number of router LSAs in the area.
Network	Number of network LSAs in the area.
Indx	The row number of the entry in the router's OSPF area table.
Statistics of Area	The number of the area whose statistics are displayed.
Maximum hop count to nodes.	The maximum number of hop counts to an SPF node within the area.

Displaying OSPFv3 database information

You can display a summary of the device's link state database or detailed information about a specified LSA type. This command will display the type-7 LSAs in brief.

To display a summary of a device's link state database, enter the following command at any CLI level.

```
Brocade# show ipv6 ospf database
```

```
LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix
```

```
Area ID   Type LSID   Adv Rtr      Seq(Hex) Age   Cksum Len Sync
0         Iap  0         10.1.1.1    80000001 3    343d 52 Yes
```

```
Area ID   Type LSID   Adv Rtr      Seq(Hex) Age   Cksum Len Sync
0         Iap  0         10.2.2.2    80000001 8    c61d 58 No
```

Syntax: `show ipv6 ospf database [advrtr ipv4-address | as-external [advrtr ipv4-address | link-id number] | extensive | inter-prefix [advrtr ipv4-address | link-id number] | inter-router [advrtr ipv4-address | link-id number] | intra-prefix [advrtr ipv4-address | link-id number] | link [advrtr ipv4-address | link-id number] | link-id number | network [advrtr ipv4-address | link-id number] | router [advrtr ipv4-address | link-id number]]`

The **advrtr** *ipv4-address* parameter displays detailed information about the LSAs for a specified advertising router only.

The **as-external** keyword displays detailed information about the AS externals LSAs only.

The **extensive** keyword displays detailed information about all LSAs in the database.

The **inter-prefix** keyword displays detailed information about the inter-area prefix LSAs only.

The **inter-router** keyword displays detailed information about the inter-area router LSAs only.

The **intra-prefix** keyword displays detailed information about the intra-area prefix LSAs only.

The **link** keyword displays detailed information about the link LSAs only.

The **link-id number** parameter displays detailed information about the specified link LSAs only.

The **network number** displays detailed information about the network LSAs only.

The **router number** displays detailed information about the router LSAs only.

The **scope area-id** parameter displays detailed information about the LSAs for a specified area, AS, or link.

This display shows the following information.

TABLE 132 OSPFv3 database summary fields

This field...	Displays...
Area ID	The OSPF area in which the device resides.
Type	Type of LSA. LSA types can be the following: <ul style="list-style-type: none"> • Rtr – Router LSAs (Type 1). • Net – Network LSAs (Type 2). • Inap – Inter-area prefix LSAs for ABRs (Type 3). • Inar – Inter-area router LSAs for ASBRs (Type 4). • Extn – AS external LSAs (Type 5). • Link – Link LSAs (Type 8). • lap – Intra-area prefix LSAs (Type 9).
LS ID	The ID of LSA in Decimal.
Adv Rtr	The device that advertised the route.
Seq(Hex)	The sequence number of the LSA. The OSPF neighbor that sent the LSA stamps it with a sequence number to enable the device and other OSPF routers to determine which LSA for a given route is the most recent.
Age	The age of the LSA, in seconds.
Chksum	A checksum for the LSA packet. The checksum is based on all the fields in the packet except the age field. The device uses the checksum to verify that the packet is not corrupted.
Len	The length, in bytes, of the LSA.
Sync	Sync status with the slave management processor (MP).

For example, to display detailed information about all LSAs in the database, enter the **Show ipv6 ospf database advrtr** command will display the type-7 LSAs in detail.

Displaying OSPFv3 information

```
Brocade(config-ospf6-router)#show ipv6 ospf database advrtr 10.4.4.4

LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix

Area ID      Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len
1            Iap 0          10.4.4.4     80000001 1085 99fa 44
  Number of Prefix: 1
  Referenced LS Type: Router
  Referenced LS ID: 0
  Referenced Advertising Router: 10.4.4.4
  Prefix Options: Metric: 1
  Prefix: 2001:db8:11::/64

LSA Key - Rtr:Router Net:Network Inap:InterPrefix Inar:InterRouter
          Extn:ASExternal Grp:GroupMembership Typ7:Type7 Link:Link
          Iap:IntraPrefix

Area ID      Type LSID      Adv Rtr      Seq(Hex) Age  Cksum Len
1            Typ7 1          10.4.4.4     80000001 394  a8a6 36
  Bits: N--
  Metric: 1
  Prefix Options:
  Referenced LSType: 0
  Prefix: 2001:db8:99::/64
```

For example, to display detailed information about all LSAs in the database, enter the following command at any CLI level.

```

Brocade# show ipv6 ospf database extensive
Area ID          Type LS ID    Adv Rtr          Seq(Hex) Age  Cksum  Len
0                Link 00000031 10.1.1.1         80000001 35   6db9   56
  Router Priority: 1
  Options: V6E---R--
  LinkLocal Address: fe80::1
  Number of Prefix: 1
  Prefix Options:
  Prefix: 2001:db8:3002::/64
...
Area ID          Type LS ID    Adv Rtr          Seq(Hex) Age  Cksum  Len
0                Iap 00000159 10.223.223.223 800000ab 357  946b   56
  Number of Prefix: 2
  Referenced LS Type: Network
  Referenced LS ID: 00000159
  Referenced Advertising Router: 10.223.223.223
  Prefix Options: Metric: 0
  Prefix: 2001:db8:2000:4::/64
  Prefix Options: Metric: 0
  Prefix: 2001:db8:46a::/64
Area ID          Type LS ID    Adv Rtr          Seq(Hex) Age  Cksum  Len
0                Rtr 00000039 10.223.223.223 800000b1 355  8f2d   40
  Capability Bits: --E-
  Options: V6E---R--
  Type: Transit Metric: 1
  Interface ID: 00000058 Neighbor Interface ID: 00000058
  Neighbor Router ID: 10.223.223.223
Area ID          Type LS ID    Adv Rtr          Seq(Hex) Age  Cksum  Len
0                Net 000001f4 10.223.223.223 800000ab 346  190a   32
  Options: V6E---R--
  Attached Router: 10.223.223.223
  Attached Router: 10.1.1.1
...
Area ID          Type LS ID    Adv Rtr          Seq(Hex) Age  Cksum  Len
N/A             Extn 000001df 10.223.223.223 800000af 368  0aa8   32
  Bits: E
  Metric: 00000001
  Prefix Options:
  Referenced LSType: 0
  Prefix: 2001:db8::/32
Area ID          Type LS ID    Adv Rtr          Seq(Hex) Age  Cksum  Len
1                Inap 0000011d 10.1.1.188      80000001 124  25de   36
  Metric: 2
  Prefix Options:
  Prefix: 2001:db8:2::/64
Area ID          Type LS ID    Adv Rtr          Seq(Hex) Age  Cksum  Len
0                Inar 0000005b 10.1.1.198      80000001 990  dbad   32
  Options: V6E---R--
  Metric: 1
  Destination Router ID:10.1.1.188

```

NOTE

Portions of this display are truncated for brevity. The purpose of this display is to show all possible fields that might display rather than to show complete output.

The fields that display depend upon the LSA type as shown in the following.

TABLE 133 OSPFv3 detailed database information fields

This field...	Displays...
Router LSA (Type 1) (Rtr) Fields	
Capability Bits	A bit that indicates the capability of the device. The bit can be set to one of the following: B – The device is an area border router. E – The device is an AS boundary router. V – The device is a virtual link endpoint. W – The device is a wildcard multicast receiver.
Options	A 24-bit field that enables IPv6 OSPF routers to support the optional capabilities. When set, the following bits indicate the following: V6 – The device should be included in IPv6 routing calculations. E – The device floods AS-external-LSAs as described in RFC 2740. MC – The device forwards multicast packets as described in RFC 1586. N – The device handles type 7 LSAs as described in RFC 1584. R – The originator is an active router. DC –The device handles demand circuits.
Type	The type of interface. Possible types can be the following: Point-to-point – A point-to-point connection to another router. Transit – A connection to a transit network. Virtual link – A connection to a virtual link.
Metric	The cost of using this router interface for outbound traffic.
Interface ID	The ID assigned to the router interface.
Neighbor Interface ID	The interface ID that the neighboring router has been advertising in hello packets sent on the attached link.
Neighbor Router ID	The router ID (IPv4 address) of the neighboring router that advertised the route. (By default, the router ID is the IPv4 address configured on the lowest numbered loopback interface. If the device does not have a loopback interface, the default router ID is the lowest numbered IPv4 address configured on the device.)

TABLE 133 OSPFv3 detailed database information fields (Continued)

This field...	Displays...
Network LSA (Type 2) (Net) Fields	
Options	A 24-bit field that enables IPv6 OSPF routers to support the optional capabilities. When set, the following bits indicate the following: V6 – The device should be included in IPv6 routing calculations. E – The device floods AS-external-LSAs as described in RFC 2740. MC – The device forwards multicast packets as described in RFC 1586. N – The device handles type 7 LSAs as described in RFC 1584. R – The originator is an active router. DC –The device handles demand circuits.
Attached Router	The address of the neighboring router that advertised the route.
Inter-Area Prefix LSA (Type 3) (Inap) Fields	
Metric	The cost of the route.
Prefix Options	An 8-bit field describing various capabilities associated with the prefix.
Prefix	The IPv6 prefix included in the LSA.
Inter-Area Router LSA (Type 4) (Inar) Fields	
Options	A 24-bit field that enables IPv6 OSPF routers to support the optional capabilities. When set, the following bits indicate the following: V6 – The device should be included in IPv6 routing calculations. E – The device floods AS-external-LSAs as described in RFC 2740. MC – The device forwards multicast packets as described in RFC 1586. N – The device handles type 7 LSAs as described in RFC 1584. R – The originator is an active router. DC –The device handles demand circuits.
Metric	The cost of the route.
Destination Router ID	The ID of the router described in the LSA.
AS External LSA (Type 5) (Extn) Fields	
Bits	The bit can be set to one of the following: <ul style="list-style-type: none"> • E – If bit E is set, a Type 2 external metric. If bit E is zero, a Type 1 external metric. • F – A forwarding address is included in the LSA. • T – An external route tag is included in the LSA.
Metric	The cost of this route, which depends on bit E.
Prefix Options	An 8-bit field describing various capabilities associated with the prefix.
Referenced LS Type	If non-zero, an LSA with this LS type is associated with the LSA.
Prefix	The IPv6 prefix included in the LSA.
Link LSA (Type 8) (Link) Fields	
Router Priority	The router priority of the interface attaching the originating router to the link.
Options	The set of options bits that the router would like set in the network LSA that will be originated for the link.
Link Local Address	The originating router's link-local interface address on the link.
Number of Prefix	The number of IPv6 address prefixes contained in the LSA.

TABLE 133 OSPFv3 detailed database information fields (Continued)

This field...	Displays...
Prefix Options	An 8-bit field of capabilities that serve as input to various routing calculations: <ul style="list-style-type: none"> • NU – The prefix is excluded from IPv6 unicast calculations. • LA – The prefix is an IPv6 interface address of the advertising router. • MC – The prefix is included in IPv6 multicast routing calculations. • P – NSSA area prefixes are readvertised at the NSSA area border.
Prefix	The IPv6 prefix included in the LSA.
Intra-Area Prefix LSAs (Type 9) (Iap) Fields	
Number of Prefix	The number of prefixes included in the LSA.
Referenced LS Type, Referenced LS ID	Identifies the router-LSA or network-LSA with which the IPv6 address prefixes are associated.
Referenced Advertising Router	The address of the neighboring router that advertised the route.
Prefix Options	An 8-bit field describing various capabilities associated with the prefix.
Metric	The cost of using the advertised prefix.
Prefix	The IPv6 prefix included in the LSA.
Number of Prefix	The number of prefixes included in the LSA.

Displaying IPv6 interface information

You can use the following command to display a summary of IPv6 Interface information.

```
Brocade# show ipv6 interface
Type Codes - I:ISIS O:OSPF R:RIP
Interface Stat/Prot IGPs IPv6 Address VRF
eth 3/20 up/up fe80::2c0:12ff:fe34:5073 default-vrf
2001:db8:1000::1/64
2001:db8:1000::/64 [Anycast]
```

Syntax: `show ipv6 interface [ethernet port | loopback number | tunnel number | ve number]`

The **ethernet | loopback | tunnel | ve** parameter specifies the interface for which to display information. If you specify an Ethernet interface, also specify the port number associated with the interface. If you specify a loopback, tunnel, or VE interface, also specify the number associated with the interface.

This display shows the following information.

TABLE 134 Summary of IPv6 interface information

Field	Description
Type Codes	Shows the routing protocol enabled on the interface. The routing protocol can be one of the following: <ul style="list-style-type: none"> • R – RIP • O – OSPF • I – IS-IS
Interface	Shows the type, slot, and port number of the interface.

TABLE 134 Summary of IPv6 interface information (Continued)

Field	Description
Stat/Prot	Shows the status of the link and the protocol for the interface. The status can be one of the following: <ul style="list-style-type: none"> • Up • Down
IGPs	Shows the type of the Interior Gateway Protocols (IGPs) enabled on the interface.
IPv6 Address	Shows the link local IPv6 address configured for the interface.
VRF	Specifies the VRF type applied to the interface.

Displaying IPv6 OSPFv3 interface information

IPv6 Interface information can be displayed in either a brief or full mode. The following sections describe the command to display these modes and the resulting output:

- Displaying IPv6 OSPFv3 Interface Information in Brief Mode
- Displaying IPv6 OSPFv3 Interface Information in Full Mode

Displaying IPv6 OSPFv3 interface information in brief mode

You can use the following command to display a summary of IPv6 Interface information.

```
Brocade# show ipv6 ospf interface brief
Interface Area      Status Type Cost  State      Nbrs (F/C)
eth 1/1    0                up   BCST 1   DROther  1/1
loopback 1 0                up   BCST 1   Loopback 0/0
```

Syntax: show ipv6 ospf interface brief

This display shows the following information.

TABLE 135 Summary of OSPFv3 interface brief information

This field...	Displays...
Interface	The interface type, and the port number or number of the interface.
Area	The OSPF area configured on the interface.
Status	The status of the link and the protocol. Possible status include the following: <ul style="list-style-type: none"> • Up. • Down.
Type	The type of OSPFv3 circuit running on the interface. Possible types include the following: <ul style="list-style-type: none"> • BCST- Broadcast interface type • P2P- Point-to-point interface type • UNK- The interface type is not known at this time
Cost	The overhead required to send a packet across an interface.

TABLE 135 Summary of OSPFv3 interface brief information (Continued)

This field...	Displays...
State	The state of the interface. Possible states include the following: <ul style="list-style-type: none"> • DR – The interface is functioning as the Designated Router for OSPFv3. • BDR – The interface is functioning as the Backup Designated Router for OSPFv3. • Loopback – The interface is functioning as a loopback interface. • P2P – The interface is functioning as a point-to-point interface. • Passive – The interface is up but it does not take part in forming an adjacency. • Waiting – The interface is trying to determine the identity of the BDR for the network. • None – The interface does not take part in the OSPF interface state machine. • Down – The interface is unusable. No protocol traffic can be sent or received on such a interface. • DR other – The interface is a broadcast or NBMA network on which another router is selected to be the DR.
Nbrs (F/C)	The number of adjacent neighbor routers. The number to the left of the “/” are the neighbor routers that are fully adjacent and the number to the right represents all adjacent neighbor routers.

Displaying IPv6 OSPFv3 interface information in full mode

You can display detailed information about all OSPFv3 interfaces by using the **show ipv6 ospf interface** command, as the following truncated example illustrates.

```

Brocade#show ipv6 ospf interface
eth 1/3 is down, type BROADCAST
  Interface is disabled
eth 1/8 is up, type BROADCAST
  IPv6 Address:
    2001:db8:18:18:18::1/64
    2001:db8:18:18::/64
  Instance ID 255, Router ID 10.1.1.1
  Area ID 1, Cost 1
  State Active(default passive) DR, Transmit Delay 1 sec, Priority 1
Timer intervals :
  Hello 10, Hello Jitter 10  Dead 40, Retransmit 5
Authentication: Enabled
KeyRolloverTime(sec): Configured: 30 Current: 0
KeyRolloverState: NotActive
Outbound: SPI:121212, ESP, SHA1
  Key:12345678901234567890123456789012345678901234567890
Inbound: SPI:121212, ESP, SHA1
  Key:12345678901234567890123456789012345678901234567890
DR:10.2.2.2 BDR:10.1.1.1  Number of I/F scoped LSAs is 2
DRElection:      1 times, DelayedLSAck:      83 times
Neighbor Count = 1,  Adjacent Neighbor Count= 1
  Neighbor:
    10.2.2.2 (DR)
Statistics of interface eth 1/8:
  Type      tx          rx          tx-byte     rx-byte
Unknown    0           0           0           0
Hello      1415        1408        56592       56320
DbDesc     3           3           804         804
LSReq      1           1           28          28
LSUpdate   193        121        15616       9720
LSAck      85         109        4840        4924
OSPF messages dropped,no authentication: 0
    
```

```
eth 2/2 is up, type POINT-TO-POINT
  IPv6 Address:
    2001:db8:22:22::1/64
    2001:db8:22:22::/64
    2001:db8:202:202::1/64
    2001:db8:202:202::/64
  Instance ID 0, Router ID 10.1.1.1
  Area ID 100, Cost 1
  State P2P, Transmit Delay 1 sec, Priority 1
  Timer intervals:
    Hello 10, Hello Jitter 10  Dead 40, Retransmit 5
  Authentication: Enabled
  KeyRolloverTime(sec): Configured: 30 Current: 0
  KeyRolloverState: NotActive
  Outbound: SPI:11022, ESP, SHA1
    Key:1234567890123456789012345678901234567890
  Inbound: SPI:11022, ESP, SHA1
    Key:1234567890123456789012345678901234567890
  DR:0.0.0.0 BDR:0.0.0.0  Number of I/F scoped LSAs is 2
  .....
```

You can display detailed OSPFv3 information about a specific interface using the following command at any level of the CLI.

Syntax: `show ipv6 ospf interface [ethernet slot/port | loopback number | tunnel number | ve number]`

This display shows the following information.

TABLE 136 Detailed OSPFv3 interface information

This field...	Displays...
Interface status	The status of the interface. Possible status includes the following: <ul style="list-style-type: none"> • Up. • Down.
Type	The type of OSPFv3 circuit running on the interface. Possible types include the following: <ul style="list-style-type: none"> • BROADCAST • POINT TO POINT UNKNOWN • POINT TO POINT
IPv6 Address	The IPv6 address assigned to the interface.
Instance ID	An identifier for an instance of OSPFv3.
Router ID	The IPv4 address of the device. By default, the router ID is the IPv4 address configured on the lowest numbered loopback interface. If the device does not have a loopback interface, the default router ID is the lowest numbered IPv4 address configured on the device.
Area ID	The IPv4 address or numerical value of the area in which the interface belongs.
Cost	The overhead required to send a packet through the interface.
default	Shows whether or not the default passive state is set.

TABLE 136 Detailed OSPFv3 interface information (Continued)

This field...	Displays...
State	The state of the interface. Possible states include the following: <ul style="list-style-type: none"> • DR – The interface is functioning as the Designated Router for OSPFv3. • BDR – The interface is functioning as the Backup Designated Router for OSPFv3. • Loopback – The interface is functioning as a loopback interface. • P2P – The interface is functioning as a point-to-point interface. • Passive – The interface is up but it does not take part in forming an adjacency. • Waiting – The interface is trying to determine the identity of the BDR for the network. • None – The interface does not take part in the OSPF interface state machine. • Down – The interface is unusable. No protocol traffic can be sent or received on such a interface. • DR other – The interface is a broadcast or NBMA network on which another router is selected to be the DR. • Active - The interface sends or receives all the OSPFv3 control packets, and forms the adjacency.
Transmit delay	The amount of time, in seconds, it takes to transmit Link State Updates packets on the interface.
Priority	The priority used when selecting the DR and the BDR. If the priority is 0, the interface does not participate in the DR and BDR election.
Timer intervals	The interval, in seconds, of the hello-interval, dead-interval, and retransmit-interval timers.
DR	The router ID (IPv4 address) of the DR.
BDR	The router ID (IPv4 address) of the BDR.
Number of I/F scoped LSAs	The number of interface LSAs scoped for a specified area, AS, or link.
DR Election	The number of times the DR election occurred.
Delayed LSA Ack	The number of the times the interface sent a delayed LSA acknowledgement.
Neighbor Count	The number of neighbors to which the interface is connected.
Adjacent Neighbor Count	The number of neighbors with which the interface has formed an active adjacency.

TABLE 136 Detailed OSPFv3 interface information (Continued)

This field...	Displays...
Neighbor	The router ID (IPv4 address) of the neighbor. This field also identifies the neighbor as a DR or BDR, if appropriate.
Interface statistics	The following statistics are provided for the interface: <ul style="list-style-type: none"> Unknown – The number of Unknown packets transmitted and received by the interface. Also, the total number of bytes associated with transmitted and received Unknown packets. Hello – The number of Hello packets transmitted and received by the interface. Also, the total number of bytes associated with transmitted and received Hello packets. DbDesc – The number of Database Description packets transmitted and received by the interface. Also, the total number of bytes associated with transmitted and received Database Description packets. LSReq – The number of link-state requests transmitted and received by the interface. Also, the total number of bytes associated with transmitted and received link-state requests. LSUpdate – The number of link-state updates transmitted and received by the interface. Also, the total number of bytes associated with transmitted and received link-state requests. LSAck – The number of link-state acknowledgements transmitted and received by the interface. Also, the total number of bytes associated with transmitted and received link-state acknowledgements.

Displaying OSPFv3 memory usage

To display information about OSPFv3 memory usage, enter the following command at any level of the CLI.

```

Brocade# show ipv6 ospf memory
Total Static Memory Allocated : 5829 bytes
Total Dynamic Memory Allocated : 0 bytes
Memory Type                Size      Allocated  Max-alloc  Alloc-Fails
MTYPE_OSPF6_TOP            0         0           0           0
MTYPE_OSPF6_LSA_HDR        0         0           0           0
MTYPE_OSPF6_RMAP_COMPILED  0         0           0           0
MTYPE_OSPF6_OTHER          0         0           0           0
MTYPE_THREAD_MASTER        0         0           0           0
MTYPE_OSPF6_AREA           0         0           0           0
MTYPE_OSPF6_AREA_RANGE     0         0           0           0
MTYPE_OSPF6_SUMMARY_ADDRE  0         0           0           0
MTYPE_OSPF6_IF             0         0           0           0
MTYPE_OSPF6_NEIGHBOR       0         0           0           0
MTYPE_OSPF6_ROUTE_NODE     0         0           0           0
MTYPE_OSPF6_ROUTE_INFO     0         0           0           0
MTYPE_OSPF6_PREFIX         0         0           0           0
MTYPE_OSPF6_LSA            0         0           0           0
MTYPE_OSPF6_VERTEX         0         0           0           0
MTYPE_OSPF6_SPFTREE        0         0           0           0
MTYPE_OSPF6_NEXTHOP        0         0           0           0
MTYPE_OSPF6_EXTERNAL_INFO  0         0           0           0
MTYPE_THREAD               0         0           0           0
    
```

Syntax: show ipv6 ospf memory

Displaying OSPFv3 information

This display shows the following information.

TABLE 137 OSPFv3 memory usage information

This field...	Displays...
Total Static Memory Allocated	A summary of the amount of static memory allocated, in bytes, to OSPFv3.
Total Dynamic Memory Allocated	A summary of the amount of dynamic memory allocated, in bytes, to OSPFv3.
Memory Type	The type of memory used by OSPFv3. (This information is for use by Brocade technical support in case of a problem.)
Size	The size of a memory type.
Allocated	The amount of memory currently allocated to a memory type.
Max-alloc	The maximum amount of memory that was allocated to a memory type.
Alloc-Fails	The number of times an attempt to allocate memory to a memory type failed.

Displaying OSPFv3 neighbor information

You can display a summary of OSPFv3 neighbor information for the device or detailed information about a specified neighbor.

To display a summary of OSPFv3 neighbor information for the device, enter the following command at any CLI level.

```
Brocade# show ipv6 ospf neighbor
RouterID          Pri State      DR              BDR              Interface [State]
10.1.1.1          1 Full       10.223.223.223 10.1.1.1         ethe 3/2 [DR]
```

Syntax: `show ipv6 ospf neighbor [router-id ipv4-address]`

The `router-id ipv4-address` parameter displays only the neighbor entries for the specified router.

This display shows the following information.

TABLE 138 Summary of OSPFv3 neighbor information

Field	Description
Router ID	The IPv4 address of the neighbor. By default, the router ID is the IPv4 address configured on the lowest numbered loopback interface. If the device does not have a loopback interface, the default router ID is the lowest numbered IPv4 address configured on the device.
Pri	The OSPFv3 priority of the neighbor. The priority is used during election of the DR and BDR.
State	The state between the device and the neighbor. The state can be one of the following: <ul style="list-style-type: none"> • Down • Attempt • Init • 2-Way • ExStart • Exchange • Loading • Full
DR	The router ID (IPv4 address) of the DR.
BDR	The router ID (IPv4 address) of the BDR.
Interface [State]	The interface through which the router is connected to the neighbor. The state of the interface can be one of the following: <ul style="list-style-type: none"> • DR – The interface is functioning as the Designated Router for OSPFv3. • BDR – The interface is functioning as the Backup Designated Router for OSPFv3. • Loopback – The interface is functioning as a loopback interface. • P2P – The interface is functioning as a point-to-point interface. • Passive – The interface is up but it does not take part in forming an adjacency. • Waiting – The interface is trying to determine the identity of the BDR for the network. • None – The interface does not take part in the OSPF interface state machine. • Down – The interface is unusable. No protocol traffic can be sent or received on such a interface. • DR other – The interface is a broadcast or NBMA network on which another router is selected to be the DR.

Displaying OSPFv3 information

For example, to display detailed information about a neighbor with the router ID of 10.1.1.1, enter the following command at any CLI level.

```
Brocade# show ipv6 ospf neighbor router-id 10.3.3.3
RouterID      Pri State   DR          BDR          Interface[State]
10.3.3.3      1 Full 10.3.3.3    10.1.1.1     ve 10 [BDR]
DbDesc bit for this neighbor: --s
Nbr Iindex of this router: 1
Nbr DRDecision: DR 10.3.3.3, BDR 10.1.1.1
Last received DbDesc: opt:xxx ifmtu:0 bit:--s seqnum:0
Number of LSAs in DbDesc retransmitting: 0
Number of LSAs in SummaryList: 0
Number of LSAs in RequestList: 0
Number of LSAs in RetransList: 0
SeqnumMismatch 0 times, BadLSReq 0 times
OnewayReceived 0 times, InactivityTimer 0 times
DbDescRetrans 0 times, LSReqRetrans 0 times
LSUpdateRetrans 1 times
LSAReceived 12 times, LSUpdateReceived 6 times
```

This display shows the following information.

TABLE 139 Detailed OSPFv3 neighbor information

Field	Description
Router ID	For information about this field, refer to Table 138 on page 683.
Pri	For information about this field, refer to Table 138 on page 683.
State	For information about this field, refer to Table 138 on page 683.
DR	For information about this field, refer to Table 138 on page 683.
BDR	For information about this field, refer to Table 138 on page 683.
Interface [State]	For information about this field, refer to Table 138 on page 683.
DbDesc bit...	The Database Description packet, which includes 3 bits of information: <ul style="list-style-type: none"> The first bit can be “i” or “-”. “i” indicates the inet bit is set. “-” indicates the inet bit is not set. The second bit can be “m” or “-”. “m” indicates the more bit is set. “-” indicates the more bit is not set. The third bit can be “m” or “s”. An “m” indicates the master. An “s” indicates standby.
Index	The ID of the LSA from which the neighbor learned of the router.
DR Decision	The router ID (IPv4 address) of the neighbor’s elected DR and BDR.
Last Received Db Desc	The content of the last database description received from the specified neighbor.
Number of LSAs in Db Desc retransmitting	The number of LSAs that need to be retransmitted to the specified neighbor.
Number of LSAs in Summary List	The number of LSAs in the neighbor’s summary list.
Number of LSAs in Request List	The number of LSAs in the neighbor’s request list.
Number of LSAs in Retransmit List	The number of LSAs in the neighbor’s retransmit list.
Seqnum Mismatch	The number of times sequence number mismatches occurred.

TABLE 139 Detailed OSPFv3 neighbor information (Continued)

Field	Description
BadLSReq	The number of times the neighbor received a bad link-state request from the device.
One way received	The number of times a hello packet, which does not mention the router, is received from the neighbor. This omission in the hello packet indicates that the communication with the neighbor is not bidirectional.
Inactivity Timer	The number of times that the neighbor's inactivity timer expired.
Db Desc Retransmission	The number of times sequence number mismatches occurred.
LSReqRetrans	The number of times the neighbor retransmitted link-state requests to the device.
LSUpdateRetrans	The number of times the neighbor retransmitted link-state updates to the device.
LSA Received	The number of times the neighbor received LSAs from the device.
LS Update Received	The number of times the neighbor received link-state updates from the device.

Displaying routes redistributed into OSPFv3

You can display all IPv6 routes or a specified IPv6 route that the device has redistributed into OSPFv3.

To display all IPv6 routes that the device has redistributed into OSPFv3, enter the following command at any level of the CLI.

```
Brocade# show ipv6 ospf redistribute route
Id      Prefix                               Protocol  Metric Type  Metric
snIpAsPathAccessListStringRegularExpression
1       2001:db8::/32                       Static   Type-2   1
2       2001:db8:1234::/48                   Static   Type-2   1
```

Syntax: `show ipv6 ospf redistribute route [ipv6-prefix]`

The *ipv6-prefix* parameter specifies an IPv6 network prefix. (You do not need to specify the length of the prefix.)

For example, to display redistribution information for the prefix 2001:db8::, enter the following command at any level of the CLI.

```
Brocade# show ipv6 ospf redistribute route 2001:db8::
Id      Prefix                               Protocol  Metric Type  Metric
1       2001:db8::/32                       Static   Type-2   1
```

These displays show the following information.

TABLE 140 OSPFv3 redistribution information

This field...	Displays...
ID	An ID for the redistributed route.
Prefix	The IPv6 routes redistributed into OSPFv3.

TABLE 140 OSPFv3 redistribution information (Continued)

This field...	Displays...
Protocol	The protocol from which the route is redistributed into OSPFv3. Redistributed protocols can be the following: <ul style="list-style-type: none"> • BGP – BGP4+. • RIP – RIPv6. • IS-IS – IPv6 IS-IS. • Static – IPv6 static route table. • Connected – A directly connected network.
Metric Type	The metric type used for routes redistributed into OSPFv3. The metric type can be the following: <ul style="list-style-type: none"> • Type-1 – Specifies a small metric (2 bytes). • Type-2 – Specifies a big metric (3 bytes).
Metric	The value of the default redistribution metric, which is the OSPF cost of redistributing the route into OSPFv3.

Displaying OSPFv3 route information

You can display the entire OSPFv3 route table for the device or only the route entries for a specified destination.

To display the entire OSPFv3 route table for the device, enter the following command at any level of the CLI.

```
Brocade#sh ipv6 ospf route
Current Route count: 4
  Intra: 4 Inter: 0 External: 0 (Type1 0/Type2 0)
  Equal-cost multi-path: 0
  OSPF Type: IA- Intra, OA - Inter, E1 - External Type1, E2 - External Type2
Destination          Cost      E2Cost    Tag      Flags    Dis
IA 2001:db8:200:1::1/128 0         0         0        00000003 110
Next_Hop_Router      Outgoing_Interface Adv_Router
::                   loopback 1         10.1.2.1
Destination          Cost      E2Cost    Tag      Flags    Dis
IA 2001:db8:300:1::1/128 0         0         0        00000003 110
Next_Hop_Router      Outgoing_Interface Adv_Router
::                   loopback 2         10.1.2.1
Destination          Cost      E2Cost    Tag      Flags    Dis
IA 2001:db8:400:1::1/128 0         0         0        00000003 110
Next_Hop_Router      Outgoing_Interface Adv_Router
::                   loopback 1         10.1.2.1
Destination          Cost      E2Cost    Tag      Flags    Dis
IA 2001:db8:500:1::1/128 0         0         0        00000003 110
Next_Hop_Router      Outgoing_Interface Adv_Router
::                   loopback 2         10.1.2.1
```

Syntax: `show ipv6 ospf routes [ipv6-prefix]`

The *ipv6-prefix* parameter specifies a destination IPv6 prefix. (You do not need to specify the length of the prefix.) If you use this parameter, only the route entries for this destination are shown.

For example, to display route information for the destination prefix 2000:4::, enter the following command at any level of the CLI.

```

Brocade# show ipv6 ospf route 2000::
Destination          Cost      E2Cost      Tag      Flags      Dis
IA 2000::/64        1         0           0        00000003   110
  Next_Hop_Router      Outgoing_Interface Adv_Router
  ::                   eth 1/1         10.1.1.1
    
```

These displays show the following information.

TABLE 141 OSPFv3 route information

This field...	Displays...
Current Route Count (Displays with the entire OSPFv3 route table only)	The number of route entries currently in the OSPFv3 route table.
Intra/Inter/External (Type1/Type2) (Displays with the entire OSPFv3 route table only)	The breakdown of the current route entries into the following route types: <ul style="list-style-type: none"> • Inter – The number of routes that pass into another area. • Intra – The number of routes that are within the local area. • External1 – The number of type 1 external routes. • External2 – The number of type 2 external routes.
Equal-cost multi-path (Displays with the entire OSPFv3 route table only)	The number of equal-cost routes to the same destination in the OSPFv3 route table. If load sharing is enabled, the router equally distributes traffic among the routes.
Destination	The IPv6 prefixes of destination networks to which the device can forward IPv6 packets. “*IA” indicates the next router is an intra-area router.
Cost	The type 1 cost of this route.
E2 Cost	The type 2 cost of this route.
Tag	The route tag for this route.
Flags	Flags associated with this route.
Dis	Administrative Distance for this route.
Next-Hop Router	The IPv6 address of the next router a packet must traverse to reach a destination.
Outgoing Interface	The router interface through which a packet must traverse to reach the next-hop router.
Adv_Router	The IP address of the advertising router.

Displaying OSPFv3 SPF information

You can display the following OSPFv3 SPF information:

- SPF node information for a specified area.
- SPF table for a specified area.
- SPF tree for a specified area.

Displaying OSPFv3 information

For example, to display information about SPF nodes in area 0, enter the following command at any level of the CLI.

```
Brocade# show ipv6 ospf spf node area 0
SPF node for Area 0
SPF node 10.223.223.223, cost: 0, hops: 0
  nexthops to node:
  parent nodes:
  child nodes: 10.223.223.223:88

SPF node 10.223.223.223:88, cost: 1, hops: 1
  nexthops to node:    :: ethe 3/2
  parent nodes: 10.223.223.223
  child nodes: 10.1.1.1:0

SPF node 10.1.1.1:0, cost: 1, hops: 2
  nexthops to node:    fe80::2e0:52ff:fe91:bb37 ethe 3/2
  parent nodes: 10.223.223.223:88
  child nodes:
```

Syntax: `show ipv6 ospf spf node area [area-id]`

The **node** keyword displays SPF node information.

The **area** *area-id* parameter specifies a particular area. You can specify the *area-id* in the following formats:

- As an IPv4 address; for example, 192.168.1.1.
- As a numerical value from 0 – 2,147,483,647.

This display shows the following information.

TABLE 142 OSPFv3 SPF node information

This field...	Displays...
SPF node	Each SPF node is identified by its router ID (IPv4 address). If the node is a child node, it is additionally identified by an interface on which the node can be reached appended to the router ID in the format <i>router-id:interface-id</i> .
Cost	The cost of traversing the SPF node to reach the destination.
Hops	The number of hops needed to reach the parent SPF node.
Next Hops to Node	The IPv6 address of the next hop-router or the router interface through which to access the next-hop router.
Parent Nodes	The SPF node's parent nodes. A parent node is an SPF node at the highest level of the SPF tree, which is identified by its router ID.
Child Nodes	The SPF node's child nodes. A child node is an SPF node at a lower level of the SPF tree, which is identified by its router ID and interface on which the node can be reached.

For example, to display the SPF table for area 0, enter the following command at any level of the CLI.

```
Brocade# show ipv6 ospf spf table area 0
  SPF table for Area 0
  Destination          Bits Options  Cost  Nexthop                               Interface
R 10.1.1.1             ---- V6E---R-    1  fe80::2e0:52ff:fe91:bb37             ethe 3/2
N 10.223.223.223[88]  ---- V6E---R-    1  :::                                     ethe 3/2
```

Syntax: `show ipv6 ospf spf table area area-id`

The **table** parameter displays the SPF table.

The **area area-id** parameter specifies a particular area. You can specify the *area-id* in the following formats:

- As an IPv4 address, for example, 192.168.1.1.
- As a numerical value from 0 – 2,147,483,647.

This display shows the following information.

TABLE 143 OSPFv3 SPF table

This field...	Displays...
Destination	The destination of a route, which is identified by the following: <ul style="list-style-type: none"> • “R”, which indicates the destination is a router. “N”, which indicates the destination is a network. • An SPF node’s router ID (IPv4 address). If the node is a child node, it is additionally identified by an interface on which the node can be reached appended to the router ID in the format <i>router-id:interface-id</i>.
Bits	A bit that indicates the capability of the device. The bit can be set to one of the following: <ul style="list-style-type: none"> • B – The device is an area border router. • E – The device is an AS boundary router. • V – The device is a virtual link endpoint. • W – The device is a wildcard multicast receiver.
Options	A 24-bit field that enables IPv6 OSPF routers to support the optional capabilities. When set, the following bits indicate the following: <ul style="list-style-type: none"> V6 – The router should be included in IPv6 routing calculations. E – The router floods AS-external-LSAs as described in RFC 2740. MC – The router forwards multicast packets as described in RFC 1586. N – The router handles type 7 LSAs as described in RFC 1584. R – The originator is an active router. DC –The router handles demand circuits.
Cost	The cost of traversing the SPF node to reach the destination.
Next hop	The IPv6 address of the next hop-router.
Interface	The router interface through which to access the next-hop router.

Displaying OSPFv3 information

For example, to display the SPF tree for area 0, enter the following command at any level of the CLI.

```
Brocade# show ipv6 ospf spf tree area 0
  SPF tree for Area 0
+- 10.223.223.223 cost 0
   +- 10.223.223.223:88 cost 1
      +- 10.1.1.1:0 cost 1
```

Syntax: `show ipv6 ospf spf tree area area-id`

The **tree** keyword displays the SPF table.

The **area area-id** parameter specifies a particular area. You can specify the *area-id* in the following formats:

- As an IPv4 address; for example, 192.168.1.1.
- As a numerical value from 0 – 2,147,483,647.

In this sample output, consider the SPF node with the router ID 10.223.223.223 to be the top (root) of the tree and the local router. Consider all other layers of the tree (10.223.223.223:88 and 10.1.1.1:0) to be destinations in the network. Therefore, traffic destined from router 10.223.223.223 to router 10.1.1.1:0 must first traverse router 10.223.223.223:88.

Displaying OSPFv3 GR Helper mode information

Run the **show ipv6 ospf** command to display information about the graceful restart helper mode

```
Brocade# (config-ospf6-router)#show ipv6 ospf
OSPFv3 Process number 0 with Router ID 0x10010101(10.1.1.1)
Running 0 days 0 hours 18 minutes 21 seconds
Number of AS scoped LSAs is 0
Sum of AS scoped LSAs Checksum is 00000000
External LSA Limit is 250000
Database Overflow Interval is 10
Database Overflow State is NOT OVERFLOWED
Nonstop-routing is ENABLED
Route calculation executed 0 times
Pending outgoing LSA count 0
Authentication key rollover interval 300 seconds
Number of areas in this router is 1
High Priority Message Queue Full count: 0
BFD is disabled
Graceful restart helper is enabled, strict lsa checking enabled
```

Displaying OSPFv3 NSR information

Run the **show ipv6 ospf** command to display information about the NSR support.

```
Brocade# (config-ospf6-router)#show ipv6 ospf
OSPFv3 Process number 0 with Router ID 0x10010101(10.1.1.1)
Running 0 days 0 hours 18 minutes 21 seconds
Number of AS scoped LSAs is 0
Sum of AS scoped LSAs Checksum is 00000000
External LSA Limit is 250000
Database Overflow Interval is 10
Database Overflow State is NOT OVERFLOWED
Nonstop-routing is ENABLED
Route calculation executed 0 times
Pending outgoing LSA count 0
Authentication key rollover interval 300 seconds
Number of areas in this router is 1
High Priority Message Queue Full count: 0
BFD is disabled
Graceful restart helper is enabled, strict lsa checking enabled
```

Displaying OSPFv3 max-metric router LSA information

Run the **show ipv6 ospf** command to display information about the max-metric router LSA configuration on a device.

```
Brocade(config-ospf6-router)# show ipv6 ospf
OSPFv3 Process number 0 with Router ID 0x01010101(1.1.1.1)
Running 0 days 0 hours 11 minutes 56 seconds
Number of AS scoped LSAs is 0
Sum of AS scoped LSAs Checksum is 00000000
External LSA Limit is 250000
Database Overflow Interval is 10
Database Overflow State is NOT OVERFLOWED
Route calculation executed 1 times
Pending outgoing LSA count 0
Authentication key rollover interval 300 seconds
Number of areas in this router is 1
High Priority Message Queue Full count: 0
BFD is disabled
Graceful restart helper is disabled
Originate LSAs with maximum metric on startup, rem time 58 sec
Include stub
Additional LSAs originated with maximum metric:
  LSA Type           Metric Value
  Summary            16711680
  External            16711680
```

Displaying IPv6 OSPF virtual link information

To display OSPFv3 virtual link information on a device, enter the following command.

Displaying OSPFv3 information

```
Brocade# show ipv6 ospf virtual-link
Index Transit Area ID Router ID Interface Address State
1 1 10.1.1.1 201:db8::2 P2P
```

Syntax: show ipv6 ospf virtual-link

This display shows the following information.

TABLE 144 OSPFv3 virtual link information

This field...	Displays...
Index	An index number associated with the virtual link.
Transit Area ID	The ID of the shared area of two ABRs that serves as a connection point between the two routers.
Router ID	Router ID of the router at the other end of the virtual link (virtual neighbor).
Interface Address	The local address used to communicate with the virtual neighbor.
State	The state of the virtual link. Possible states include the following: <ul style="list-style-type: none">• P2P – The link is functioning as a point-to-point interface.• DOWN – The link is down.

Displaying OSPFv3 virtual neighbor information

To display OSPFv3 virtual neighbor information for the device, enter the following command at the enabled level of the CLI.

```
Brocade#show ipv6 ospf virtual-neighbor
Index Router ID Address State Interface
1 10.14.14.14 2001:db8:44:44::4 Full eth 1/8
Option: 00-00-00 QCount: 0 Timer: 408
2 10.14.14.14 2001:db8:44:44::4 Full tunnel 256
Option: 00-00-00 QCount: 0 Timer: 43
```

Syntax: show ipv6 ospf virtual-neighbor [brief]

The [brief] option results in an output that omits the Option, QCount, and Timer fields. The command output shows the following information.

TABLE 145 OSPFv3 virtual neighbor information

This field...	Displays...
Index	An index number associated with the virtual neighbor.
Router ID	IPv4 address of the virtual neighbor.
Address	The IPv6 address to be used for communication with the virtual neighbor.

TABLE 145 OSPFv3 virtual neighbor information (Continued)

This field...	Displays...
State	The state between the device and the virtual neighbor. The state can be one of the following: <ul style="list-style-type: none"> • Down • Attempt • Init • 2-Way • ExStart • Exchange • Loading • Full
Interface	The IPv6 address of the virtual neighbor.
Option	The bits set in the virtual-link hello or database descriptors.
QCount	The number of packets that are in the queue and ready for transmission. If the system is stable, this number should always be 0.
Timer	A timer that counts down until a hello packet should arrive. If “timers” elapses and a hello packet has not arrived, the VL neighbor is declared to be down.

IPsec examples

This section contains examples of IPsec configuration and the output from the IPsec-specific **show** commands. In addition, IPsec-related information appears in general **show** command output for interfaces and areas.

The **show** commands that are specific to IPsec are:

- **show ipsec sa**
- **show ipsec policy**
- **show ipsec statistics**

The other **show** commands with IPsec-related information are:

- **show ipv6 ospf area**
- **show ipv6 ospf interface**
- **show ipv6 ospf vrf**

Showing IPsec security association information

The **show ipsec sa** command displays the IPsec security association databases, as follows.

```
Brocade#show ipsec sa
IPSEC Security Association Database(Entries:8)
SPDID(vrf:if) Dir Encap SPI Destination AuthAlg EncryptAlg
1:ALL in ESP 512 2001:db8:1::1 sha1 Null
1:e1/1 out ESP 302 :: sha1 Null
1:e1/1 in ESP 302 FE80:: sha1 Null
1:e1/1 out ESP 512 2001:db8:1::2 sha1 Null
2:ALL in ESP 512 2001:db8:1::1 sha1 Null
2:e1/2 out ESP 302 :: sha1 Null
2:e1/2 in ESP 302 FE80:: sha1 Null
2:e1/2 out ESP 512 2001:db8:1::2 sha1 Null
```

Syntax: `show ipsec sa`

Showing IPsec policy

The **show ipsec policy** command displays the database for the IPsec security policies. The fields for this **show** command output appear in the screen output example that follows. However, you should understand the layout and column headings for the display before trying to interpret the information in the example screen.

Each policy entry consists of two categories of information:

- The policy information
- The SA used by the policy

The policy information line in the screen begins with the heading Ptype and also has the headings Dir, Proto, Source (Prefix:TCP/UDP Port), and Destination (Prefix:TCP/UDPPort). The SA line contains the SPDID, direction, encapsulation (always ESP in the current release), the user-specified SPI, For readability, the policy information is described in [Table 146](#), and SA-specific information is in [Table 147](#).

```

Brocade#show ipsec policy
IPSEC Security Policy Database(Entries:8)
PType  Dir Proto Source(Prefix:TCP/UDP Port)
        Destination(Prefix:TCP/UDPPort)
SA: SPDID(vrf:if) Dir Encap SPI      Destination
use   in  OSPF FE80::/10:any
        ::/0:any
SA: 2:e1/2      in  ESP  302      FE80::
use   out OSPF FE80::/10:any
        ::/0:any
SA: 2:e1/2      out ESP  302      ::
use   in  OSPF FE80::/10:any
        ::/0:any
SA: 1:e1/1      in  ESP  302      FE80::
use   out OSPF FE80::/10:any
        ::/0:any
SA: 1:e1/1      out ESP  302      ::
use   in  OSPF 2001:db8:1:1::1/128:any
        2001:db8:1:1::2/128:any
SA: 1:ALL      in  ESP  512      2001:db8:1:1::2
use   out OSPF 2001:db8:1:1::2/128:any
        2001:db8:1:1::1/128:any
SA: 1:e1/1      out ESP  512      2001:db8:1:1::1
    
```

Syntax: `show ipsec policy`

This command takes no parameters.

TABLE 146 IPsec policy information

This field...	Displays...
PType	This field contains the policy type. Of the existing policy types, only the “use” policy type is supported, so each entry can have only “use.”
Dir	The direction of traffic flow to which the IPsec policy is applied. Each direction has its own entry.

TABLE 146 IPsec policy information (Continued)

This field...	Displays...
Proto	The only possible routing protocol for the security policy in the current release is OSPFv3.
Source	The source address consists of the IPv6 prefix and the TCP or UDP port identifier.
Destination	The destination address consists of the IPv6 prefix. Certain logical elements have a bearing on the meaning of the destination address and its format, as follows: For IPsec on an interface or area, the destination address is shown as a prefix of 0xFE80 (link local). The solitary "::" (no prefix) indicates a "do not-care" situation because the connection is multicast. In this case, the security policy is enforced without regard for the destination address. For a virtual link (SPDID = 0), the address is required.

TABLE 147 SA used by the policy

This field...	Displays...
SA	This heading points at the SA-related headings for information used by the security policy. Thereafter, on each line of this part of the IPsec entry (which alternates with lines of policy information Table 146), "SA:" points at the fields under those SA-related headings. The remainder of this table describes each of the SA-related items.
SPDID	The security policy database identifier (SPDID) consists of two parts; the first part is an VRF id and the second part is an interface ID. The SPDID 0/ALL is a global database for the default VRF that applies to all interfaces.
Dir	The Dir field is either 'in' for inbound or "out" for outbound.
Encap	The type of encapsulation in the current release is ESP.
SPI	Security parameter index.
Destination	The IPv6 address of the destination endpoint. From the standpoint of the near interface and the area, the destination is not relevant and therefore appears as ::/0:any. For a virtual link, both the inbound and outbound destination addresses are relevant.

Showing IPsec statistics

The **show ipsec statistics** command displays the error and other counters for IPsec, as this example shows.

```
Brocade#show ipsec statistics
                               IPSECURITY Statistics
secEspCurrentInboundSAs 1      ipsecEspTotalInboundSAs: 2
secEspCurrentOutboundSA 1      ipsecEspTotalOutboundSAs: 2
                               IPSECURITY Packet Statistics
secEspTotalInPkts:      19      ipsecEspTotalInPktsDrop: 0
secEspTotalOutPkts:    83
                               IPSECURITY Error Statistics
secAuthenticationErrors 0
secReplayErrors:        0      ipsecPolicyErrors:      13
secOtherReceiveErrors: 0      ipsecSendErrors:        0
secAuthenticationErrors 0
secReplayErrors:        0      ipsecPolicyErrors:      13
secOtherReceiveErrors: 0      ipsecSendErrors:        0
secUnknownSpiErrors:    0
```

Syntax: `show ipsec statistics`

This command takes no parameters.

Displaying IPsec configuration for an area

The `show ipv6 ospf area [area-id]` command includes information about IPsec for one area or all areas. In the following example, the IPsec information is in bold. IPsec is enabled in the first area (area 0) in this example but not in area 3. Note that in area 3, the IPsec key was specified as not encrypted.

```

Brocade(config-ospf6-router)#show ipv6 ospf area
Area 0:
  Authentication: Not Configured
  Active interface(s)attached to this area: eth 1/1
  Inactive interface(s)attached to this area: None
  Number of Area scoped LSAs is 2
  Sum of Area LSAs Checksum is 00021139
  Statistics of Area 1:
    SPF algorithm executed 1 times
    SPF last updated: 111 sec ago
    Current SPF node count: 1
      Router: 1 Network: 0
      Maximum of Hop count to nodes: 0
Area 1: Area is NSSA, no redistribution
  Authentication: Not Configured
  NSSA translator status: Enabled, NSSA translator interval: 40 sec
  Active interface(s)attached to this area: eth 1/1
  Inactive interface(s)attached to this area: None
  Number of Area scoped LSAs is 2
  Sum of Area LSAs Checksum is 00021139
  Statistics of Area 1:
    SPF algorithm executed 1 times
    SPF last updated: 111 sec ago
    Current SPF node count: 1
      Router: 1 Network: 0
      Maximum of Hop count to nodes: 0
Area 2: Area is stub
  Authentication: Not Configured
  Active interface(s)attached to this area: None
  Inactive interface(s)attached to this area: None
  Number of Area scoped LSAs is 0
  Sum of Area LSAs Checksum is 00000000
  Statistics of Area 2:
    SPF algorithm executed 0 times
    SPF last updated: 89562 sec ago
    Current SPF node count: 0
      Router: 0 Network: 0
      Maximum of Hop count to nodes: 0
Area 3: Area is NSSA, no summary
  Authentication: Not Configured
  NSSA translator status: Elected, NSSA translator interval: 60 sec
  Active interface(s)attached to this area: eth 1/4
  Inactive interface(s)attached to this area: None
  Number of Area scoped LSAs is 1
  Sum of Area LSAs Checksum is 00023299
  Statistics of Area 1:
    SPF algorithm executed 1 times
    SPF last updated: 111 sec ago
    Current SPF node count: 1
      Router: 1 Network: 0
      Maximum of Hop count to nodes: 0

```

Syntax: `show ipv6 ospf area [area-id]`

The *area-id* parameter restricts the display to the specified OSPF area. You can specify the *area-id* parameter in the following formats:

- An IPv6 address, for example, 2001:db8::10

- A numerical value in the range 0 – 2,147,483,647

TABLE 148 Area configuration of IPsec

This field...	Displays...
Authentication	This field shows whether or not authentication is configured. If this field says "Not Configured," the IPsec-related fields (bold in example screen output) are not displayed at all.
KeyRolloverTime	The number of seconds between each initiation of a key rollover. This field shows the configured and current times.
KeyRolloverState	Can be: Not active: key rollover is not active. Active phase 1: rollover is in its first interval. Active phase 2: rollover is in its second interval.
Current	Shows current SPI, authentication algorithm (currently ESP only), encryption algorithm (currently SHA1 only), and the current key.
New	Shows new SPI (if changed), authentication algorithm (currently ESP only), encryption algorithm (currently SHA1 only), and the new key.
Old	Shows old SPI (if changed), authentication algorithm (currently ESP only), encryption algorithm (currently SHA1 only), and the old key.

Displaying IPsec for an interface

To see IPsec configuration for a particular interface or all interfaces, use the **show ipv6 ospf interface** command as in the following example (IPsec information in bold).

```

Brocade#show ipv6 ospf interface
eth 1/3 is down, type BROADCAST
  Interface is disabled

eth 1/8 is up, type BROADCAST
  IPv6 Address:
    2001:db8:18:18:18::1/64
    2001:db8:18:18::/64
  Instance ID 255, Router ID 10.1.1.1
  Area ID 1, Cost 1
  State BDR, Transmit Delay 1 sec, Priority 1
  Timer intervals :
    Hello 10, Hello Jitter 10 Dead 40, Retransmit 5
Authentication: Enabled
KeyRolloverTime(sec): Configured: 30 Current: 0
KeyRolloverState: NotActive
Outbound: SPI:121212, ESP, SHA1
Key:1234567890123456789012345678901234567890
Inbound: SPI:121212, ESP, SHA1
Key:1234567890123456789012345678901234567890
DR:10.2.2.2 BDR:10.1.1.1 Number of I/F scoped LSAs is 2
DRElection: 1 times, DelayedLSAck: 83 times
Neighbor Count = 1, Adjacent Neighbor Count= 1
Neighbor:
  10.2.2.2 (DR)
Statistics of interface eth 1/8:
Type tx rx tx-byte rx-byte
Unknown 0 0 0 0
Hello 1415 1408 56592 56320
DbDesc 3 3 804 804
LSReq 1 1 28 28
LSUpdate 193 121 15616 9720
LSAck 85 109 4840 4924
OSPF messages dropped,no authentication: 0

```

Syntax: **show ipv6 ospf interface** [ethernet slot/port | loopback number | tunnel number | ve number]

TABLE 149 Area configuration of IPsec

This field...	Displays...
Authentication	This field shows whether or not authentication is configured. If this field says "Not Configured," the IPsec-related fields (bold in example screen output) are not displayed at all.
KeyRolloverTime	The number of seconds between each initiation of a key rollover. This field shows the configured and current times.
KeyRolloverState	Can be: Not active: key rollover is not active. Active phase 1: rollover is in its first interval. Active phase 2: rollover is in its second interval.

TABLE 149 Area configuration of IPsec (Continued)

This field...	Displays...
Current	Shows current SPI, authentication algorithm (currently ESP only), encryption algorithm (currently SHA1 only), and the current key.
New (Inbound or Outbound)	Shows new SPI (if changed), authentication algorithm (currently ESP only), encryption algorithm (currently SHA1 only), and the new key.
Old (Inbound or Outbound)	Shows old SPI (if changed), authentication algorithm (currently ESP only), encryption algorithm (currently SHA1 only), and the old key.
OSPF messages dropped	Shows the number of packets dropped because the packets failed authentication (for any reason).

Displaying IPsec for a virtual link

To display IPsec for a virtual link, run the **show ipv6 ospf virtual-link brief** or **show ipv6 ospf virtual-link** command, as the following examples illustrate.

```

Brocade#show ipv6 ospf virtual-link brief
Index Transit Area ID Router ID Interface Address State
1 1 10.14.14.14 2001:db8::1:1:1::1 P2P

Brocade#show ipv6 ospf virtual-link
Transit Area ID Router ID Interface Address State
1 10.14.14.14 2001:db8:1:1:1::1 P2P
Timer intervals(sec) :
Hello 10, Hello Jitter 10, Dead 40, Retransmit 5, TransmitDelay 1
DelayedLSAck: 5 times
Authentication: Configured
KeyRolloverTime(sec): Configured: 10 Current: 0
KeyRolloverState: NotActive
Outbound: SPI:100004, ESP, SHA1
Key:1234567890123456789012345678901234567890
Inbound: SPI:100004, ESP, SHA1
Key:1234567890123456789012345678901234567890
Statistics:
Type tx rx tx-byte rx-byte
Unknown 0 0 0 0
Hello 65 65 2600 2596
DbDesc 4 4 2752 2992
LSReq 1 1 232 64
LSUpdate 11 5 1040 1112
LSAck 5 8 560 448
OSPF messages dropped,no authentication: 0
Neighbor: State: Full Address: 2001:db8:44:44::4 Interface: eth 2/2
    
```

Syntax: show ipv6 ospf virtual-link [brief]

The optional [brief] keyword limits the display to the Transit, Area ID, Router ID, Interface Address, and State fields for each link.

Changing a key

In this example, the key is changed. Note that the SPI value is changed from 300 to 310 to comply with the requirement that the SPI is changed when the key is changed.

Initial configuration command.

```

Brocade(config-if-e10000-1/3)#ipv6 ospf auth ipsec spi 300 esp sha1
no-encrypt 12345678900987655431234567890aabbccdddef
    
```


Command for changing the key.

```
Brocade(config-if-e10000-1/3)#ipv6 ospf auth ipsec spi 310 esp sha1
no-encrypt 989898989009876554321234567890aabbccdddef
```

Displaying IPv6 OSPF information for a VRF

To display IPv6 OSPF information for a VRF or all VRF interfaces, use the **show ipv6 ospf vrf** command as in the following example.

```
Brocade#show ipv6 ospf vrf red
OSPFv3 Process number 0 with Router ID 0x10020202(10.2.2.2)
Running 0 days 0 hours 5 minutes 49 seconds
Number of AS scoped LSAs is 0
Sum of AS scoped LSAs Checksum is 00000000
External LSA Limit is 250000
Database Overflow Interval is 10
Database Overflow State is NOT OVERFLOWED
Route calculation executed 0 times
Pending outgoing LSA count 0
Authentication key rollover interval 30 seconds
Number of areas in this router is 4
Router is operating as ABR
Router is operating as ASBR, Redistribute: CONNECTED
High Priority Message Queue Full count: 0
BFD is disabled
```

Syntax: **show ipv6 ospf vrf** *vrf-name* **area** [*area-id*] | [*virtual-links*]

The *vrf-name* parameter specifies the VRF that you want the OSPF area information for.

The *area-id* parameter shows information for the specified area.

The *virtual-link* parameter displays the entry that corresponds to the IP address you enter.

Use the **show ipv6 ospf vrf** command to display the currently selected IPv6 global address for use by the Virtual Links in each transit area.

Displaying OSPFv3 information

```
Brocade#show ipv6 ospf vrf red area
Area 3:
Authentication: Not Configured
Interface attached to this area:
Number of Area scoped LSAs is 3
Sum of Area LSAs Checksum is 0001a6c4
Statistics of Area 3:
SPF algorithm executed 3 times
SPF last updated: 302 sec ago
Current SPF node count: 1
Router: 1 Network: 0
Maximum of Hop count to nodes: 0
Area 2:
Authentication: Not Configured
Interface attached to this area:
Number of Area scoped LSAs is 3
Sum of Area LSAs Checksum is 000192d6
Statistics of Area 2:
SPF algorithm executed 3 times
SPF last updated: 302 sec ago
Current SPF node count: 1
Router: 1 Network: 0
Maximum of Hop count to nodes: 0
Area 1:
Authentication: Not Configured
Interface attached to this area: eth 1/1
Number of Area scoped LSAs is 6
Sum of Area LSAs Checksum is 00046630
Statistics of Area 1:
SPF algorithm executed 3 times
SPF last updated: 302 sec ago
Current SPF node count: 3
Router: 2 Network: 1
Maximum of Hop count to nodes: 2
Global IPv6 Address used by Virtual Links in this area:10:1:1::2
Area 0.0.0.0 :
Authentication: Not Configured
Interface attached to this area: VLink 1
Number of Area scoped LSAs is 6
Sum of Area LSAs Checksum is 0002cc53
```

Syntax: `show ipv6 ospf vrf vrf-name area [area-id] | [virtual-links]`

Use the **show ipv6 ospf vrf neighbor** command to display the currently selected neighbor for use by the Virtual Links in each transit area.

```
Brocade#sh ipv6 ospf vrf red neighbor
Total number of neighbors in all states: 1
Number of neighbors in state Full      : 1
```

Type	tx	rx	tx-byte	rx-byte
Unknown	0	0	0	0
Hello	32	32	1276	1280
DbDesc	2	2	116	116
LSReq	1	1	52	52
LSUpdate	2	2	184	200
LSAck	2	2	112	112

```
OSPF messages dropped,no authentication: 0
Neighbor: State: Full Address: 2001:db8:1::1 Interface: eth 1/1
```

OSPFv3 clear commands

The following OSPFv3 clear commands are supported.

Clearing all OSPFv3 data

You can use the **ospf all** command to clear all OSPF data by disabling and enabling the OSPFv3 processes as shown in the following.

```
Brocade# clear ipv6 ospf all
```

Syntax: clear ipv6 ospf all

Clearing all OSPFv3 packet counters

You can use the **ospf traffic** command to clear all OSPFv3 packet counters as shown in the following.

```
Brocade# clear ipv6 ospf traffic
```

Syntax: clear ipv6 ospf traffic

Scheduling Shortest Path First (SPF) calculation

You can use the **ospf force-spf** command to perform the SPF calculation without clearing the OSPF database, as shown in the following.

```
Brocade# clear ipv6 ospf force-spf
```

Syntax: clear ipv6 ospf force-spf

Clearing all redistributed routes from OSPF

You can use the **ospf redistribution** command to clear all redistributed routes from OSPF, as shown in the following.

```
Brocade# clear ipv6 ospf redistribution
```

Syntax: clear ipv6 ospf redistribution

Clearing OSPF neighbors

You can use the **ospf neighbor** command to delete and relearn OSPF neighbors, as shown in the following:

- Clearing all OSPF Neighbors
- Clearing OSPF Neighbors Attached to a Specified Interface

Clearing all OSPF neighbors

You can use the **ospf neighbor all** command to delete and relearn all OSPF neighbors, as shown in the following.

```
Brocade# clear ipv6 ospf neighbor all
```

Syntax: clear isv6 ospf neighbor all

Clearing OSPF neighbors attached to a specified interface

You can use the **ospf neighbor interface** command to delete and relearn the OSPF neighbors attached to a specified interface, as shown in the following.

```
Brocade# clear ipv6 ospf neighbor interface ethernet 1/1
```

Syntax: clear isv6 ospf neighbor interface ethernet *slot/port* | **ve** *port-no* | **tunnel** *tunnel-port* [*nbrid*]

Specify the interface options as shown in the following options.

ethernet *slot/port* – clears OSPF neighbors on the specified Ethernet interface.

ve *port-no* – clears OSPF neighbors on the specified virtual interface.

tunnel *tunnel-port* – clears OSPF neighbors on the specified tunnel interface.

Specifying the *nbrid* variable limits the **clear ipv6 ospf neighbor** command to an individual OSPF neighbor attached to the interface.

Clearing OSPF counters

You can use the **ospf counts** command to clear OSPF neighbor's counters as described in the following:

- Clearing all OSPF Counters
- Clearing the OSPF Counters for a Specified Neighbor
- Clearing the OSPF Counters for a Specified Interface

Clearing all OSPF counters

You can clear all OSPF counters using the **clear ipv6 counts** command, as shown in the following.

```
Brocade# clear ipv6 ospf counts
```

Syntax: clear ipv6 ospf counts**Clearing OSPF counters for a specified neighbor**

You can clear all OSPF counters for a specified neighbor using the **clear ipv6 counts neighbor** command, as shown in the following.

```
Brocade# clear ipv6 ospf counts neighbor 10.10.10.1
```

Syntax: clear ipv6 ospf counts neighbor nbrid

The *nbrid* variable specifies the neighbor ID of the OSPF neighbor whose counters you want to clear.

Clearing OSPF counters for a specified interface

You can clear all OSPF counters for a specified interface using the **clear ipv6 counts neighbor interface** command, as shown in the following.

```
Brocade# clear ipv6 ospf counts interface ethernet 3/1
```

Syntax: clear ipv6 ospf counts neighbor interface ethernet slot/port | ve port-no | tunnel tunnel-port [nbrid]

Specify the interface options as shown in the following options.

ethernet slot/port – clears OSPF counters for OSPF neighbors on the specified Ethernet interface.

ve port-no – clears OSPF counters for OSPF neighbors on the specified virtual interface.

tunnel tunnel-port – clears OSPF counters for OSPF neighbors on the specified tunnel interface.

Using an *nbrid* value limits the displayed output to an individual OSPF neighbor attached to the interface.

Commands

The following commands support the features described in this chapter:

- [max-metric router-lsa](#)

max-metric router-lsa

Configures a device that is running the Open Shortest Path First (OSPF) protocol to advertise its locally generated router LSAs with a maximum metric. The **no** form of this command removes the configuration.

Syntax	max-metric router-lsa [include-stub] [summary-lsa [<i>max-metric-value</i>]] [external-lsa [<i>max-metric-value</i>]] [on-startup { <i>seconds</i> wait-for-bgp }] no max-metric router-lsa [include-stub] [summary-lsa [<i>max-metric-value</i>]] [external-lsa [<i>max-metric-value</i>]] [on-startup { <i>seconds</i> wait-for-bgp }]	
Command Default		
Parameters	router-lsa	Configures the device to advertise the maximum metric for point-to-point and transit links. The maximum metric value is 65535
	include-stub	(Optional) Specifies the advertisement of the maximum metric (65535) for point-to-point and broadcast stub links in the intra-area-prefix LSA. You cannot specify a maximum metric value with the include-stub parameter. If you specify include-stub , point-to-point and broadcast stub links in the intra-area-prefix LSA are advertised at a value of 65535.
	summary-lsa [<i>max-metric-value</i>]	(Optional) Specifies the metric for advertising inter-area-prefix type-3 and type-4 LSAs. The range is from 1 through 16777215. The default value is 16711680. Setting the <i>max-metric-value</i> for summary-lsa to 16777215 makes the route unreachable.
	external-lsa [<i>max-metric-value</i>]	(Optional) Specifies the metric for advertising external type-5 and type-7 LSAs. The range is from 1 through 16777215. The default value is 16711680. Setting the <i>max-metric-value</i> for external-lsa to 16777215 makes the route unreachable.
	on-startup	(Optional) Specifies the period to advertise the maximum metric on startup. If the on-startup option is not specified, a device configured with max-metric router-lsa always advertises the max-metric.
	<i>seconds</i>	Specifies the period in seconds. The range is from 5 through 86400.
	wait-for-bgp	Specifies that the maximum metric is advertised until BGP converges or for 600 seconds.
Command Modes	Router OSPF subconfiguration mode.	
Usage Guidelines	Configuration is done in an incremental fashion. The on-startup configuration does not apply to restarts.	
Examples	The following example configures OSPFv3 to advertise router LSAs with the cost of point-to-point and transit links set to 65535. <pre>Brocade(config-ospf6-router)# max-metric router-lsa</pre>	

The following example modifies OSPFv3 to advertise intra-area-prefix LSAs with the cost of stubs set to 16777215 and the cost of external LSAs set to 16711680.

```
Brocade(config-ospf6-router)# max-metric router-lsa include-stub external-lsa
```

The following example modifies OSPFv3 to advertise summary type-3 and type-4 LSAs with the cost set to 10000.

```
Brocade(config-ospf6-router)# max-metric router-lsa summary-lsa 10000
```

The following example removes the **include-stub** and **summary-lsa** options from the OSPFv3 configuration.

```
Brocade(config-ospf6-router)# no max-metric router-lsa include-stub summary-lsa
```

The following example configures OSPFv3 to advertise the max-metric for stub on startup.

```
Brocade(config-ospf6-router)# max-metric router-lsa include-stub
```

The following example removes the **on-startup** configuration, so that OSPFv3 will always advertise the max-metric for router LSA, intra-area-prefix LSA and summary LSA.

```
Brocade(config-ospf6-router)# no max-metric router-lsa on-startup
```

History

Release

Command History

Multi-Service IronWare R05.6.00 This command was introduced

Related Commands

show ipv6 ospf

max-metric router-lsa

IS-IS (IPv6)

Table 150 displays the individual Brocade devices and the IPv6 IS-IS features they support.

TABLE 150 Supported Brocade IPv6 IS-IS features


Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
IPv6 IS-IS	Yes	Yes	No	Yes	Yes	Yes	Yes
Redistributing BGP4+ Routes into IPv6 IS-IS	Yes	Yes	No	Yes	Yes	Yes	Yes
Redistributing RIPng Routes into IPv6 IS-IS	Yes	Yes	No	Yes	Yes	Yes	Yes
Redistributing OSPFv3 Routes into IPv6 IS-IS	Yes	Yes	No	Yes	Yes	Yes	Yes
Redistributing Static IPv6 Routes into IPv6 IS-IS	Yes	Yes	No	Yes	Yes	Yes	Yes
Redistributing IPv6 routes learned from directly connected networks	Yes	Yes	No	Yes	Yes	Yes	Yes
Nonstop routing support	Yes	Yes	No	No	No	No	No
IPv6 Protocol-Support Consistency Checks	Yes	Yes	No	Yes	Yes	Yes	Yes
IS-IS Multi-Topology	Yes	Yes	No	Yes	Yes	Yes	Yes

A description of the IS-IS protocol is provided in [Chapter 3, “IS-IS \(IPv4\)”](#). This chapter describes the specific requirements for configuring a device for IPv6 IS-IS.

IPv6 IS-IS single-topology mode

IPv6 IS-IS supports single-topology mode, which means that you can run IPv6 IS-IS concurrently with other network protocols such as IPv4 IS-IS throughout a topology. However, when implementing a single topology, all routers in an area (Level 1 routing) or domain (Level 2 routing) must be configured with the same set of network protocols on all its interfaces, even on loopback interfaces. You can configure IPv4 IS-IS only, IPv6 IS-IS only, or both IPv4 IS-IS and IPv6 IS-IS (Figure 35). For example, to successfully implement both IPv4 and IPv6 IS-IS in an area, you must configure both IPv4 and IPv6 IS-IS on all router interfaces in the area.

FIGURE 35 IPv6 IS-IS in single-topology mode

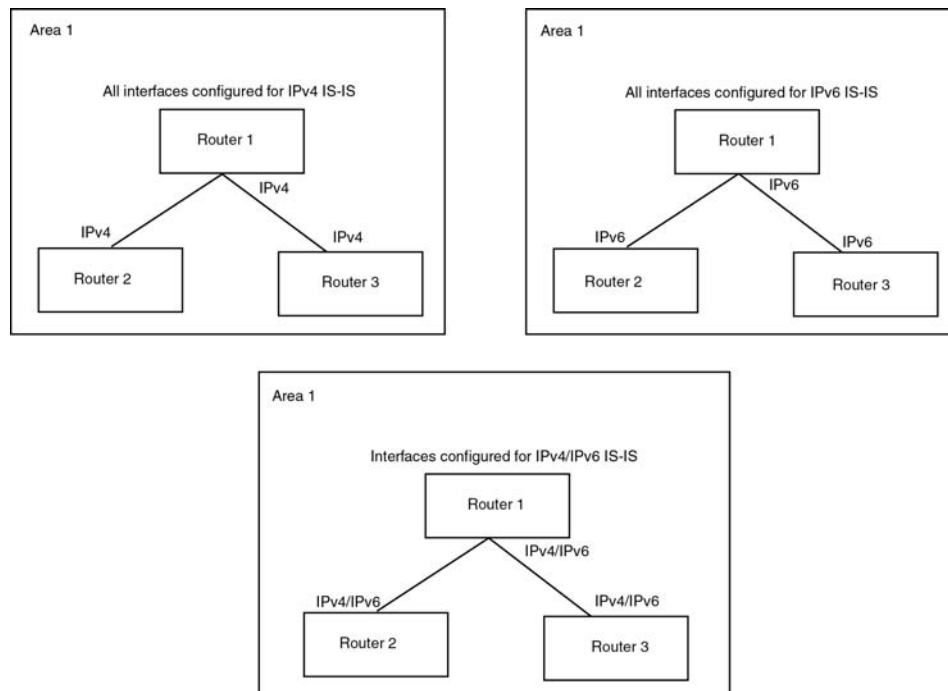


A single shortest path first (SPF) per level computes the IPv4 and IPv6 routes. The use of a single SPF indicates that both IPv4 and IPv6 IS-IS routing protocols must share a common network topology

The implementation of IPv4 IS-IS supports type, length, and value (TLV) parameters to advertise reachability to IPv4 networks. The TLVs specify the types of data, the maximum length of the data, and the valid values for the data. IPv6 IS-IS advertises its information using new TLV parameters. The new TLV parameters for IPv6 support an extended default metric value.

In a single topology, if both IPv4 and IPv6 are configured on an interface, metric-style must be set to wide in both address families. Narrow is the default for IPv4. Wide is the default for IPv6.

IS-IS CLI levels

The CLI includes various levels of commands for IS-IS. Figure 36 diagrams these levels that includes the levels used for IPv6 IS-IS.

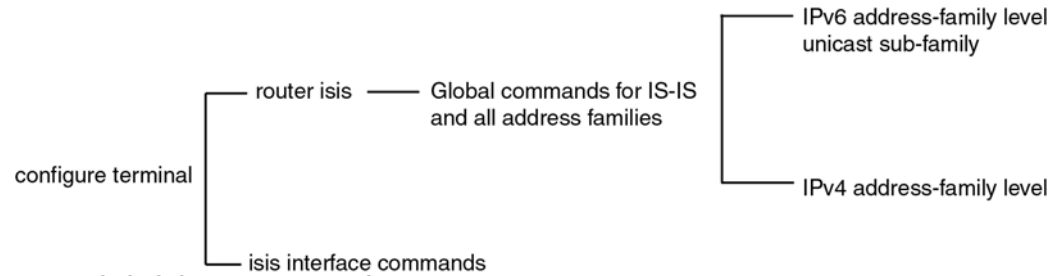FIGURE 36 IPv6 IS-IS CLI levels

The IPv6 IS-IS CLI levels are as follows:

- A global level for the configuration of the IS-IS protocol. At this level, all IS-IS configurations at this level apply to IPv4 and IPv6. You enter this layer using the **router isis** command.
 - Under the global level, you specify an address family. Address families separate the IS-IS configuration IPv6 and IPv4. You enter configurations that are for a specific You enter this level by entering the **address-family** command at the router IS-IS level.
 - Under the address family level, you select a sub-address family, which is the type of routes for the configuration. For IS-IS, you specify **unicast**.
 - An interface level

Global configuration level

You enter the global configuration level of IS-IS by entering the following command:

```
Brocade(config)#router isis
Brocade(config-isis-router)#
```

Syntax: router isis

The **(config-isis-router)#** prompt indicates that you are at the global level for IS-IS. Configurations you enter at this level apply to both IS-IS IPv4 and IS-IS IPv6.

Address family configuration level

The implementation of IPv6 IS-IS includes a new configuration level: address family. You enter IS-IS definitions for IPv6 IS-IS under this level. Address-family allows you to create configurations for IPv6 IS-IS unicast routes that are separate and distinct from configurations for IPv4 IS-IS unicast routes.

Under the address family level, Brocade devices support the unicast address family configuration level only. The device enters the IPv6 IS-IS unicast address family configuration level when you enter the following command while at the global IS-IS configuration level:

```
Brocade(config-isis-router)# address-family ipv6 unicast
Brocade(config-isis-router-ipv6u)#
```

Syntax: address-family ipv6 unicast

The **(config-isis-router-ipv6u)#** prompt indicates that you are at the IPv6 IS-IS unicast address family configuration level. While at this level, you can access several commands that allow you to configure IPv6 IS-IS unicast routes.

NOTE

Each address family configuration level allows you to access commands that apply to that particular address family only. To enable a feature in a particular address family, you must specify any associated commands for that feature in that particular address family. You cannot expect the feature, which you may have configured in the IPv4 IS-IS unicast address family, to work in the IPv6 IS-IS unicast address family unless it is explicitly configured in the IPv6 IS-IS unicast address family.

To exit from the IPv6 IS-IS unicast address family configuration level, enter the following command:

```
Brocade(config-isis-router-ipv6u)# exit-address-family
Brocade(config-isis-router)#
```

Entering this command returns you to the global IS-IS configuration level.

Interface level

Some IS-IS definitions are entered at the interface level. To change to the interface level for IS-IS configuration, enter the following command.

```
Brocade(config)# interface ethernet 2/3
Brocade(config-if-e1000-2/3)#ipv6 router isis
```

Syntax: `ipv6 router isis`

Configuring IPv6 IS-IS

Enabling IPv6 IS-IS globally

Follow the steps listed below to configure IPv6 IS-IS globally.

1. You must enable the forwarding of IPv6 traffic on the device using the **ipv6 unicast-routing** command. Enter a command such as the following:

```
Brocade#configure terminal
Brocade(config)# ipv6 unicast-routing
```

Syntax: `[no] ipv6 unicast-routing`

2. Globally enable IS-IS by entering the following command:

```
Brocade(config)# router isis
ISIS: Please configure NET!
```

Once you enter **router isis**, the device enters the IS-IS router configuration level.

Syntax: `[no] router isis`

To disable IS-IS, use the **no** form of this command.

3. If you have not already configured a NET for IS-IS, enter commands such as the following:

```
Brocade(config-isis-router)# net 49.2211.0000.00bb.cccc.00
Brocade(config-isis-router)#
```

The commands in the example above configure a NET that has the area ID 49.2211, the system ID 0000.00bb.cccc (the device's base MAC address), and SEL value 00.

Syntax: `[no] net area-id.system-id.sel`

The *area-id* parameter specifies the area and has the format *xx* or *xx.xxxx*. For example, 49 and 49.2211 are valid area IDs.

The *system-id* parameter specifies the device's unique IS-IS router ID and has the format *xxxx.xxxx.xxxx*. You can specify any value for the system ID. A common practice is to use the device's base MAC address as the system ID. The base MAC address is also the MAC address of port 1. To determine the base MAC address, enter the following command at any level of the CLI: **show interfaces brief**. The base MAC address is listed in the first row of information, in the MAC column.

You must use the same system ID in all the NETs on the device.

NOTE

The parameter descriptions above are the recommended values for the NET. However, the CLI accepts any value that fits within the following lengths and formats:

xx.xxxx.xxxx.xxxx.00 – minimum length of NET

xx.xxxx.xxxx.xxxx.xxxx.xxxx.xxxx.xxxx.00 – maximum length of NET

The *sel* parameter specifies the NSAP Selector (SEL). This value must always be 00 (two zeros). The value 00 indicates that this address is an NET.

To delete a NET, use the **no** form of this command.

4. Configure an IPv6 IS-IS single topology. Refer to [“Configuring IPv6 IS-IS single topology”](#) on page 714.
5. Configure IS-IS parameters. Refer to the sections [“Globally configuring IS-IS on a device”](#) on page 714, [“Configuring IPv6 specific address family route parameters”](#) on page 715, and [“Configuring IS-IS properties on an interface”](#) on page 723.

Enabling IS-IS and assigning an IPv6 address to an interface

To configure IPv6 IS-IS on the desired device interfaces, enter commands such as the following:

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 address 2001:db8:12d:1300::/64 eui-64
Brocade(config-if-e100-3/1)# ipv6 router isis
```

The commands in this example assign the global IPv6 prefix 2001:db8:12d:1300::/64 to Ethernet interface 3/1 and enable IPv6 IS-IS on the interface.

Syntax: **ipv6 address** *ipv6-prefix/prefix-length* [**eui-64**]

You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The **eui-64** keyword configures the global or unique local address with an EUI-64 interface ID in the low-order 64 bits. The interface ID is automatically constructed in IEEE EUI-64 format using the interface's MAC address.

Syntax: [**no**] **ipv6 router isis**

To disable IPv6 IS-IS on an interface, use the **no** form of this command.

The following configuration tasks are optional:

- Configure IPv6 route parameters.
- Redistribute routes from other route sources into IPv6 IS-IS.
- Perform IPv6 IS-IS adjacency checks.
- Disable partial SPF calculations.

Configuring IPv6 IS-IS single topology

If your IS-IS single topology will support both IPv6 and IPv4, you can configure both IPv6 and IPv4 on an IS-IS interface for Level 1, Level 2, or both Level 1 and Level 2. However, if you configure both IPv6 and IPv4 on an IS-IS interface, they must be configured to run on the same level. For example, you can configure IPv6 to run on Level 1 on an interface and IPv4 to also run on Level 1 on the same interface. However, you cannot configure IPv6 to run on Level 1 on an interface and IPv4 to run to Level 2 on the same interface.

To configure an IPv6 IS-IS single topology, you must perform the tasks listed below.

1. Globally enable IS-IS and configure at least one Network Entity Title (NET). The NET is the device's network interface with IS-IS. You can configure up to three NETs on a device.
2. Configure the desired device interfaces with an IPv6 address and enable IPv6 IS-IS on the device interfaces.
3. Configure IS-IS parameters. Refer to the sections [“Globally configuring IS-IS on a device”](#) on page 714, [“Configuring IPv6 specific address family route parameters”](#) on page 715, and [“Configuring IS-IS properties on an interface”](#) on page 723.

Globally configuring IS-IS on a device

The following configuration tasks described in [Chapter 3, “IS-IS \(IPv4\)”](#), apply to IS-IS IPv6 configuration:

- Setting the Overload Bit
- Configuring Authentication
- Changing the IS-IS Level Globally
- Disabling or Re-enabling Display of Hostname
- Changing the Sequence Numbers PDU Interval
- Changing the Maximum LSP Lifetime
- Changing the LSP Refresh Interval
- Changing the LSP Generation Interval
- Changing the LSP Interval and Retransmit
- Changing the SPF Timer
- Globally Disabling or Re-Enabling Hello Padding
- Logging Adjacency Changes
- Disabling Partial SPF Calculations

Configuring IPv6 specific address family route parameters

This section describes how to modify the IS-IS the parameters for the IS-IS IPv6 address family.

Changing the maximum number of load sharing paths

By default, IPv6 IS-IS can calculate and install four equal-cost paths into the IPv6 forwarding table. You can change the number of paths IPv6 IS-IS can calculate and install in the IPv6 forwarding table to an amount from

1 – 8. If you change the number of paths to one, the device does not load share route paths learned from IPv6 IS-IS.

For example, to change the number of paths IPv6 IS-IS can calculate and install in the IPv6 forwarding table to three, enter the following command at the IPv6 IS-IS unicast address family configuration level:

```
Brocade(config-isis-router-ipv6u)# maximum-paths 8
```

Syntax: [no] **maximum-paths** *number*

The *number* parameter specifies the number of paths IPv6 IS-IS can calculate and install in the IPv6 forwarding table. The *number* value range is 2 to 32 and the default is 1.

NOTE

The maximum number of paths supported by the BR-MLX-10Gx24-DM module is 16.

To return to the default number of maximum paths, enter the **no** form of this command.

Enabling advertisement of a default route

By default, the device does not generate or advertise a default route to its neighboring ISs. A default route is not advertised even if the device's IPv6 route table contains a default route. You can enable the device to advertise a default route to all neighboring ISs using one of the following methods. By default, the feature originates the default route at Level 2 only. However, you can apply a route map to originate the default route to Level 1 only or at both Level 1 and Level 2.

NOTE

This feature requires the presence of a default route in the IPv6 route table.

To enable the device to advertise a default route that is originated a Level 2, enter the following command at the IPv6 IS-IS unicast address family configuration level:

```
Brocade(config-isis-router-ipv6u)# default-information-originate
```

This command enables the device to advertise a default route into the IPv6 IS-IS area to which the device is attached.

Syntax: [no] **default-information-originate** [**route-map** *name*]

The **route-map** *name* parameter allows you to specify the level on which to advertise the default route. You can specify one of the following:

- Advertise to Level-1 ISs only.
- Advertise to Level-2 ISs only.
- Advertise to Level-1 and Level-2 ISs.

NOTE

The route map must be configured before you can use the route map as a parameter with the **default-information-originate** command.

To use a route map to configure the device to advertise a default route to Level 1, enter commands such as the following at the Global CONFIG level:

```
Brocade(config)# route-map default_level1 permit 1
Brocade(config-routemap default_level1)# set level level-1
Brocade(config-routemap default_level1)# router isis
Brocade(config-isis-router)# address-family ipv6 unicast
Brocade(config-isis-router-ipv6u)# default-information-originate route-map
default_level1
```

These commands configure a route map to set the default advertisement level to Level 1 only.

Syntax: [no] route-map *map-name* permit | deny *sequence-number*

Syntax: [no] set level level-1 | level-1-2 | level-2

For this use of a route map, use the **permit** option and do not specify a **match** statement. Specify a **set** statement to set the level to one of the following:

- **level-1** – Level 1 only.
- **level-1-2** – Level 1 and Level 2.
- **level-2** – Level 2 only (default).

Changing the administrative distance for IPv6 IS-IS

When the device has paths from multiple routing protocols to the same destination, it compares the administrative distances of the paths and selects the path with the lowest administrative distance to place in the IPv6 route table.

For example, if the device has a path from RIPng, from OSPFv3, and IPv6 IS-IS to the same destination, and all the paths are using their protocols' default administrative distances, the device selects the OSPFv3 path, because that path has a lower administrative distance than the RIPng and IPv6 IS-IS paths.

Here are the default IPv6 administrative distances on the device:

- Directly connected – 0 (this value is not configurable)
- Static – 1 (applies to all static routes, including default routes)
- EBGP – 20
- OSPFv3 – 110
- IPv6 IS-IS – 115
- RIPng – 120
- IBGP – 200
- Local BGP – 200
- Unknown – 255 (the device will not use this route)

Lower administrative distances are preferred over higher distances. For example, if the device receives routes for the same network from IPv6 IS-IS and from RIPng, it will prefer the IPv6 IS-IS route by default.

To change the administrative distance for IPv6 IS-IS routes, enter the following command at the IPv6 IS-IS unicast address family configuration level:

```
Brocade(config-isis-router-ipv6u)# distance 100
```

Syntax: [no] distance *number*

This command changes the administrative distance for all IPv6 IS-IS routes to 100.

The *number* parameter specifies the administrative distance. You can specify a value from 1 – 255. (Routes with a distance value of 255 are not installed in the routing table.) The default for IPv6 IS-IS is 115.

Configuring summary prefixes

You can configure summary prefixes to aggregate IPv6 IS-IS route information. Summary prefixes can enhance performance by reducing the size of the Link State database, reducing the amount of data a router needs to send to its neighbors, and reducing the CPU cycles used for IPv6 IS-IS.

When you configure a summary prefix, the prefix applies only to Level-2 routes by default. You can specify Level-1 only, Level-2 only, or Level-1 and Level-2 when you configure the prefix.

For example, to configure a summary prefix of 2001:db8::/32 to be advertised to Level-1 routes only, enter the following command at the IPv6 IS-IS unicast address family configuration level:

```
Brocade(config-isis-router-ipv6u)# summary-prefix 2001:db8::/32 level-1
```

Syntax: [no] summary-prefix *ipv6-prefix/prefix-length* [level-1 | level-1-2 | level-2-only]

The *ipv6-prefix/prefix-length* parameter specifies the aggregate address. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The **level-1 | level-1-2 | level-2-only** parameter specifies the route types to which the aggregate route applies. The default is **level-2-only**.

Redistributing routes into IPv6 IS-IS

To redistribute routes into IPv6 IS-IS, you can perform the following configuration tasks:

- Change the default redistribution metric (optional).
- Configure the redistribution of a particular route type into IPv6 IS-IS (mandatory).

The device can redistribute routes from the following route sources into IPv6 IS-IS:

- BGP4+.
- RIPng.
- OSPFv3.
- Static IPv6 routes.
- IPv6 routes learned from directly connected networks.

The device can also redistribute Level-1 IPv6 IS-IS routes into Level-2 IPv6 IS-IS routes, and Level-2 IPv6 IS-IS routes into Level-1 IPv6 IS-IS routes.

Route redistribution from other sources into IPv6 IS-IS is disabled by default. When you enable redistribution, the device redistributes routes only into Level 2 by default. You can specify Level 1 only, Level 2 only, or Level 1 and Level 2 when you enable redistribution.

The device automatically redistributes Level-1 routes into Level-2 routes. Thus, you do not need to enable this type of redistribution. You also can enable redistribution of Level-2 routes into Level-1 routes.

The device attempts to use the redistributed route's metric as the route's IPv6 IS-IS metric. For example, if an OSPFv3 route has an OSPF cost of 20, the device uses 20 as the route's IPv6 IS-IS metric. The device uses the redistributed route's metric as the IPv6 IS-IS metric unless the route does not have a valid metric. In this case, the device assigns the default metric value to the route. For information about the default metric, refer to the "Changing the Default Redistribution Metric" section, which follows this section.

Changing the default redistribution metric

When IPv6 IS-IS redistributes a route from another route source (such as OSPFv3, BGP4+, or a static IPv6 route) into IPv6 IS-IS, it uses the route's metric value as its metric when the metric is not modified by a route map or metric parameter and the default redistribution metric is set to its default value of 0. You can change the default metric to a value from 0 – 65535.

NOTE

The implementation of IS-IS does not support the optional metric types Delay, Expense, or Error.

For example, to change the default metric to 20, enter the following command at the IPv6 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv6u)# default-metric 20
```

Syntax: `[no] default-metric number`

The *number* parameter specifies the default metric. You can specify a value from 0 – 65535. The default is 0.

To restore the default value for the default metric, enter the **no** form of this command.

Globally change the default redistribution metric

The `default-link-metric` command allows you to change the metric value globally for all the active ISIS interfaces using one command. You can still configure the interface level metric. If ISIS metric is configured on the interface, it will take the precedence over the global configuration.

Configuration steps

1. Configure router ISIS using the `router isis` command.
2. Go to the appropriate address-family using `address-family [ipv4/ipv6] unicast` command.
3. Configure default metric using `default-link-metric <value>` command.

Configuration example

The following global configuration example is for the IPv4 address-family. It can be similarly configured for IPv6 address-family.

```
Brocade(config)#router isis
Brocade(config-isis-router)#address-family ipv4 unicast
Brocade(config-isis-router-ipv4u)# default-link-metric 40
```

Syntax: [no] default-link-metric *value* [level-1 | level-2]

The *value* parameter is the default-link-metric value to be set for the given address-family. This is a required parameter for this command. There is no default value for this parameter. For metric-style narrow: 1 to 63. For metric-style wide: 1 to 16777215.

The *level* parameter is an optional parameter used to set the default-metric for only one of the levels. If this parameter is not given, the default-link-metric will be applied to both level-1 and level-2.

The [no] version of command will revert the metric value to default, which is 10.

IPv6 metric behavior with multi-topology configuration

The default-link-metric for IPv6 will depend upon the multi-topology configuration.

No multi-topology: The IPv6 default-link-metric will be same as that configured for IPv4 address-family.

Multi-topology: The IPv6 default-link-metric will be equal to the value configured for IPv6 address-family.

Multi-topology transition: The IPv6 default-link-metric will be equal to the value configured for IPv6 address-family.

Metric behavior with change in metric-style

There are two types of metric styles in ISIS, narrow metric and wide metric. The range of the metric value is different in both of these styles. If there is a change in the metric-style configuration, the default-link-metric will also change with it. The new value of the default-link-metric will be equal to the minimum of a) configured value and b) the maximum value supported for the new metric-style.

If the metric style changes from narrow metric to wide metric, there will be no change in the value of default-link-metric. If the metric style changes from wide metric to narrow metric, and if the value of default-link-metric is greater than 63, the default-link-metric will now take the value 63, as it is the maximum supported in the narrow metric.

NOTE

When ISIS is configured in Multi-topology, and if all the routers are not using multi-topology in the network, then configure **multi-topology transition** instead of **multi-topology**.

ISIS Show command

The show isis command and show ipv6 isis command output has been modified to reflect the default-link-metric configured.

```
Brocade#sh ipv6 isis
```

```
....  
Default redistribution metric: 0  
Default link metric for level-1: 15  
Default link metric for level-2: 9  
Protocol Routes redistributed into IS-IS:
```

Redistributing static IPv6 routes into IPv6 IS-IS

To redistribute static IPv6 routes from the IPv6 static route table into IPv6 IS-IS routes, enter the following command at the IPv6 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv6u)# redistribute static
```

This command configures the device to redistribute all static IPv6 routes into Level-2 IS-IS routes.

Syntax: [no] redistribute static [level-1 | level-1-2 | level-2 | metric *number* | metric-type external | internal | route-map *name*]

The **level-1**, **level-1-2**, and **level-2** keywords restrict redistribution to the specified IPv6 IS-IS level.

The **metric number** parameter changes the metric. You can specify a value from 0 - 4294967295.

The **metric-type external | internal** parameter restricts redistribution to one of the following:

- **external** – The metric value is not comparable to an IPv6 IS-IS internal metric and is always higher than the IPv6 IS-IS internal metric.
- **internal** – The metric value is comparable to metric values used by IPv6 IS-IS. This is the default.

The **route-map name** parameter restricts redistribution to those routes that match the specified route map. The route map must already be configured before you use the route map name with the **redistribute** command. For example, to configure a route map that redistributes only the static IPv6 routes to the destination networks 2001:db8::/32, enter commands such as the following.

```
Brocade(config)# ipv6 access-list static permit any 2001:db8::/32  
Brocade(config)# route-map static permit 1  
Brocade(config-routemap static)# match ip address static  
Brocade(config-routemap static)# router isis  
Brocade(config-isis-router)# address-family ipv6 unicast  
Brocade(config-isis-router-ipv6u)# redistribute static route-map static
```

Redistributing directly connected routes into IPv6 IS-IS

To redistribute directly connected IPv6 routes into IPv6 IS-IS routes, enter the following command at the IPv6 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv6u)# redistribute connected
```

This command configures the device to redistribute all directly connected routes in the IPv6 route table into Level-2 IPv6 IS-IS.

Syntax: [no] redistribute connected [level-1 | level-1-2 | level-2 | metric *number* | metric-type external | internal | route-map *name*]

The parameters are the same as the parameters for the **redistribute static** command.

Redistributing RIPng routes into IPv6 IS-IS

To redistribute RIPng routes into IPv6 IS-IS, enter the following command at the IPv6 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv6u)# redistribute rip
```

This command configures the device to redistribute all RIPng routes into Level-2 IS-IS.

Syntax: `[no] redistribute rip [level-1 | level-1-2 | level-2 | metric number | metric-type external | internal | route-map name]`

The parameters are the same as the parameters for the **redistribute static** command.

Redistributing OSPF version 3 routes into IPv6 IS-IS

To redistribute OSPFv3 routes into IPv6 IS-IS, enter the following command at the IPv6 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv6u)# redistribute ospf
```

This command configures the device to redistribute all OSPFv3 routes into Level-2 IPv6 IS-IS.

Syntax: `[no] redistribute ospf [level-1 | level-1-2 | level-2 | match external1 | external2 | internal | metric number | metric-type external | internal | route-map name]`

Most of the parameters are the same as the parameters for the **redistribute static** command. However, the **redistribute ospf** command also has the **match external1 | external2 | internal** parameter. This parameter specifies the OSPF route type you want to redistribute into IPv6 IS-IS. By default, the **redistribute ospf** command redistributes only internal routes:

- **external1** – An OSPF type 1 external route.
- **external2** – An OSPF type 2 external route.
- **internal** – An internal route calculated by OSPF.

Redistributing BGP4+ routes into IPv6 IS-IS

To redistribute BGP4+ routes into IPv6 IS-IS, enter the following command at the IPv6 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv6u)# redistribute bgp
```

This command configures the device to redistribute all its BGP4 routes into Level-2 IPv6 IS-IS.

Syntax: `[no] redistribute bgp [level-1 | level-1-2 | level-2 | metric number | metric-type external | internal | route-map name]`

The parameters are the same as the parameters for the **redistribute static** command.

Redistributing IPv6 IS-IS routes within IPv6 IS-IS

In addition to redistributing routes from other route sources into IPv6 IS-IS, the device can redistribute Level 1 IPv6 IS-IS routes into Level 2 IPv6 IS-IS routes, and Level 2 IPv6 IS-IS routes into Level 1 IPv6 IS-IS routes. By default, the device redistributes routes from Level 1 into Level 2.

NOTE

The device automatically redistributes Level 1 routes into Level 2 routes, even if you do not enable redistribution.

For example, to redistribute all IPv6 IS-IS routes from Level 2 into Level 1, enter the following command at the IPv6 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv6u)# redistribute isis level-2 into level-1
```

The device automatically redistributes Level-1 routes into Level 2.

Syntax: [no] redistribute isis level-1 into level-2 | level-2 into level-1 [prefix-list name]

The **level-1 into level-2 | level-2 into level-1** parameter specifies the direction of the redistribution:

- **level-1 into level-2** – Redistributes Level 1 routes into Level 2. This is the default.
- **level-2 into level-1** – Redistributes Level 2 routes into Level 1.

The optional **prefix-list name** parameter allows you to specify the IPv6 prefixes that you want redistributed from Level 1 into Level 2 and from Level 2 into Level 1. Specify the name of the IPv6 prefix list that contains the desired prefixes.

For example, to redistribute the IPv6 prefix 2001:db8::/32 from Level 2 into Level 1, enter commands such as the following.

```
Brocade(config)# ipv6 prefix-list routesfor2001 permit 2001:db8::/32
Brocade(config)# router isis
Brocade(config-isis-router)# address-family ipv6 unicast
Brocade(config-isis-router-ipv6u)# redistribute isis level-2 into level-1
prefix-list routesfor2001
```

Disabling and re-enabling IPv6 protocol-support consistency checks

As discussed in “[IPv6 IS-IS single-topology mode](#)” on page 710, an IS-IS single topology must be configured to run the same set of network protocols (IPv4 IS-IS only, IPv6 IS-IS only, or both IPv4 IS-IS and IPv6 IS-IS).

By default, IS-IS performs consistency checks on hello packets. If a hello packet does not have the same configured network protocols, IS-IS rejects the packet. For example, a hello packet from a router running IPv4 and IPv6 IS-IS will be rejected by a router running either IPv4 IS-IS only or IPv6 IS-IS only, and the two routers will not become adjacent.

To allow two routers running different sets of network protocols to form an adjacency, enter the following command at the IPv6 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv6u)# no adjacency-check
```

This command disables the IPv6 IS-IS consistency check.

Syntax: [no] adjacency-check

To re-enable the consistency check, enter the following command at the IPv6 IS-IS unicast address family configuration level.

```
Brocade(config-isis-router-ipv6u)# adjacency-check
```

Configuring IS-IS properties on an interface

The parameter settings for configuring IS-IS properties on a device apply to both IS-IS IPv4 and IS-IS IPv6 except for “[Changing the metric added to advertised routes](#)” as described below. For details on how to perform all other IS-IS properties on an Interface, refer to [Chapter 3, “IS-IS \(IPv4\)”](#)

Changing the metric added to advertised routes

When the device originates an IS-IS route or calculates a route, the device adds a metric (cost) to the route. Each IS-IS interface has a separate metric value. The default is 10.

The device applies the interface-level metric to routes originated on the interface and also when calculating routes. The device does not apply the metric to link-state information that the device receives from one IS and floods to other ISs.

The default interface metric is 10. You can change the metric on an individual interface to a value in one of the following ranges:

- 1 – 63 for the narrow metric style (the default metric style)
- 1 – 16777215 for the wide metric style

NOTE

If the metric value you want to use is higher than 63 but you have not changed the metric style to wide, change the metric style first, then set the metric. The IS-IS neighbors that will receive the advertisements also must be enabled to receive wide metrics.

To change the IS-IS metric on an interface, use the following CLI method.

```
Brocade(config-isis-router)# interface ethernet 2/8
Brocade(config-if-e1000-2/8)# isis metric 44
```

Syntax: `[no] isis metric num`

The *num* parameter specifies the metric. The range of values you can specify depends on the metric style. You can specify 1 – 63 for the narrow metric style or 1 – 16777215 for the wide metric style. The default in either case is 10.

When IPv6 IS-IS is enabled in a single topology, you must set the metric-style to be wide if you want to use an interface metric greater than 63.

IPv6 IS-IS Non-Stop Routing

Overview

NOTE

IPv6 IS-IS NSR is not supported on the Brocade NetIron CES and Brocade NetIron CER platforms.

IPv6 IS-IS Non-Stop Routing (NSR) enables the IPv6 IS-IS router to maintain topology and data flow to avoid re-convergence in the network during a processor switchover or hitless-reload event. The IS-IS Bidirectional Forwarding Detection (BFD) sessions survive the switchover and hitless-reload conditions. In general, a router restart causes its peer to remove the routes originated from the router and reinstalls them. This IS-IS NSR feature enables the router to maintain neighbors and LSA database with its peer on the event of a router restart. This feature is compatible with IPv4 IS-IS NSR.

NOTE

IPv6 IS-IS NSR is independent of Graceful Restart (GR) and GR help role mechanisms.

Limitations

- The IS-IS over GRE tunnel feature does not support IS-IS NSR. The GRE tunnel interface types are not supported.
- The IS-IS shortcuts are not supported because they depend on the MPLS tunnel.
- If the IS-IS hellos are forwarded at Layer 2 and the device executes a hitless-reload, hellos will not be forwarded for a brief time. The IS-IS adjacencies are lost for 12 seconds and there will be data traffic loss.
- The configuration events that occur close to switchover or hitless-reload may get lost due to CLI synchronization issues.
- The neighbor or interface state changes close to switchover or hitless-reload cannot be handled.
- The IS-IS neighbor hold timer is restarted upon IS-IS NSR switchover or hitless-reload.
- The traffic counters are not synchronized because the neighbor and LSP database counters are recalculated on the standby module during synchronization.
- With IS-IS NSR enabled, after switchover or hitless-reload to standby MP, IS-IS routes, LSP database and neighbor adjacencies are maintained so that there will be no loss of existing traffic to the IS-IS destinations.
- The IS-IS NSR hitless failover event may not be completely invisible to the network because, after switchover, additional flooding of CSNP packets will occur in the directly connected neighbors.

Configuring IS-IS NSR

To globally enable IS-IS NSR, enter the following commands.

```
Brocade(config)# router isis
Brocade(config-isis-router)# nonstop-routing
```

To globally disable IS-IS NSR, enter the following commands.

```
Brocade(config)# router isis
Brocade(config-isis-router)# no nonstop-routing
```

Syntax: [no] nonstop-routing

Displaying IPv6 IS-IS information

You can display the following information about IPv6 IS-IS:

- General IPv6 IS-IS information.
- IPv6 IS-IS configuration information.
- IPv6 IS-IS error statistics.
- LSP database entries.
- IS-IS system ID to hostname mappings.
- IPv6 IS-IS interface information.
- IPv6 IS-IS memory usage information.
- IPv6 IS-IS neighbor information.
- IPv6 IS-IS path information.
- IPv6 IS-IS redistribution information.
- IPv6 IS-IS route information.
- IPv6 IS-IS traffic statistics.

Displaying IPv6 IS-IS information

To display general IPv6 IS-IS information, enter the following command at any CLI level.

```
Brocade# show ipv6 isis
IS-IS Routing Protocol Operation State: Enabled
IS-Type: Level-1-2
System ID: 0000.0055.0008
Manual area address(es):
  49.8585
Interfaces with Integrated IS-IS for IPv6 configured:
  Interface 4/1   Interface 4/2   Interface 4/11  Interface 4/12
  Interface 4/13  Interface 4/14  Interface 4/15  Interface 4/16
  Interface 4/17  Interface 4/35  Interface 4/36  Interface 4/37
  Interface 4/38  Interface v43   Interface v44   Interface lb1
Following Routes are Redistributed into IS-IS for IPv6:
CONNECTED
Number of Routes redistributed into IS-IS: 1
Domain password: None
Area password: None
IS-IS for IPV6 Route Administrative Distance: 115
Hold Time Between Two SPF Calculations: 5
Global Hello Padding: Enabled
```

Syntax: `show ipv6 isis`

This display shows the following information.

TABLE 151 IPv6 IS-IS information fields

This field...	Displays...
IS-IS Routing Protocol Operation State	The operating state of IPv6 IS-IS. Possible states include the following: <ul style="list-style-type: none"> • Enabled – IPv6 IS-IS is enabled. • Disabled – IPv6 IS-IS is disabled.
IS Type	The intermediate system type. Possible types include the following: <ul style="list-style-type: none"> • Level 1 only – The device routes traffic only within the area in which it resides. • Level 2 only – The device routes traffic between areas of a routing domain. • Level 1-2 – The device routes traffic within the area in which it resides and between areas of a routing domain.
System ID	The unique IS-IS router ID. Typically, the device’s base MAC address is used as the system ID.
Manual area address(es)	Area address(es) of the device.
Interfaces with Integrated IS-IS for IPv6 configured	Interfaces on which IPv6 IS-IS is configured.
Following Routes are Redistributed into IS-IS for IPv6	Routes that are redistributed into IPv6 IS-IS. Possible routes include the following: <ul style="list-style-type: none"> • BGP – BGP4+ routes are redistributed into IPv6 IS-IS. • RIP – RIPng routes are redistributed into IPv6 IS-IS. • OSPF – OSPFv3 routes are redistributed into IPv6 IS-IS. • STATIC – Static IPv6 routes are redistributed into IPv6 IS-IS. • CONNECTED – IPv6 routes learned from directly connected networks are redistributed into IPv6 IS-IS.
Number of Routes redistributed into IS-IS	The number of routes distributed into IS-IS
Domain password	The domain password, if one is configured.
Area password	The domain password, if one is configured.
IS-IS IPv6 Route Administrative Distance	The current setting of the IPv6 IS-IS administrative distance.
Hold Time Between Two SPF Calculations	The setting of the SPF timer, which causes the device to recalculate the SPF tree of its IPv6 IS-IS links following a change in topology or the link state database.
Global Hello Padding	The setting of the global hello padding feature, which can be one of the following: <ul style="list-style-type: none"> • Disabled – Global padding for hello packets is disabled. • Enabled – Global padding for hello packets is enabled.

Displaying the IPv6 IS-IS configuration in the running configuration

You can display the IPv6 IS-IS commands that are in effect on the device.

NOTE

The running configuration does not list the default values. Only commands that change a setting or add configuration information are displayed.

To display the IPv6 IS-IS configuration, enter the following command at any CLI level.

```
Brocade# show ipv6 isis config
Current ISIS configuration:
router isis
 net 49.6561.0000.0022.2222.00

 address-family ipv4 unicast
 distance 135
 redistribute static
 exit-address-family

 address-family ipv6 unicast
 redistribute static
 exit-address-family

end
```

Syntax: `show ipv6 isis config`

The running configuration shown in this example contains the following commands:

- Global IPv6 IS-IS commands that enable IS-IS.
- Address family commands that configure IPv4 IS-IS unicast routes.
- Address family commands that configure IPv6 IS-IS unicast routes.

Displaying IPv6 IS-IS error statistics

To display IPv6 IS-IS error statistics, enter the following command at any level of the CLI.

```
Brocade# show ipv6 isis counts
Area Mismatch: 0
Max Area Mismatch: 0
System ID Length Mismatch: 0
Authentication Fail: 0
Corrupted LSP: 0
LSP Sequence Number Skipped: 0
LSP Max Sequence Number Exceeded: 0
Level-1 Database Overload: 0
Level-2 Database Overload: 0
Our LSP Purged: 0
```

Syntax: `show ipv6 isis counts`

This display shows the following information.

TABLE 152 IPv6 IS-IS error statistics

This field...	Displays...
Area Mismatch	The number of times the device interface was unable to create a Level-1 adjacency with a neighbor because the device interface and the neighbor did not have any areas in common.
Max Area Mismatch	The number of times the device received a PDU with a value for maximum number of area addresses that did not match the device's value for maximum number of area addresses.
System ID Length Mismatch	The number of times the device received a PDU with an ID field that was a different length than the ID field length configured on the device.

TABLE 152 IPv6 IS-IS error statistics (Continued)

This field...	Displays...
Authentication Fail	The number of times authentication failed because the device was configured to authenticate IPv6 IS-IS packets in the packet's domain or area, but the packet did not contain the correct password.
Corrupted LSP	The number of times the device detected a corrupted LSP in the device's memory.
LSP Sequence Number Skipped	The number of times the device received an LSP with a sequence number that was more than 1 higher than the sequence number of the previous LSP received from the same neighbor.
LSP Max Sequence Number Exceeded	The number of times the device attempted to set an LSP sequence number to a value higher than the highest number in the CSNP sent by the Designated IS.
Level-1 Database Overload	The number of times the Level-1 state on the device changed from Waiting to On or from On to Waiting: <ul style="list-style-type: none"> • Waiting to On – This change can occur when the device recovers from a previous Level-1 LSP database overload and is again ready to receive new LSPs. • On to Waiting – This change can occur when the device's Level-1 LSP database is full and the device receives an additional LSP, for which there is no room.
Level-2 Database Overload	The number of times the Level-2 state on the device changed from Waiting to On or from On to Waiting: <ul style="list-style-type: none"> • The change from Waiting to On can occur when the device recovers from a previous Level-2 LSP database overload and is again ready to receive new LSPs. • The change from On to Waiting can occur when the device's Level-2 LSP database is full and the device receives an additional LSP, for which there is no room.
Our LSP Purged	The number of times the device received an LSP that was originated by the device itself and had age zero (aged out).

Displaying LSP database entries

You can display summary or detailed information about the entries in the LSP database.

NOTE

The device maintains separate LSP databases for Level 1 LSPs and Level 2 LSPs.

To display summary information about the entries in the LSP database, enter the following command at any level of the CLI.

```

Brocade# show ipv6 isis database
IS-IS Level-1 Link State Database
LSPID                LSP Seq Num  LSP Checksum  LSP Holdtime  ATT/P/OL
Router1.00-00        0x00000003  0x9a6b        574            0/0/0
Router2.00-00*       0x00000002  0x609d        540            0/0/0
Router2.01-00*       0x00000001  0x0fcf        539            0/0/0

IS-IS Level-2 Link State Database
LSPID                LSP Seq Num  LSP Checksum  LSP Holdtime  ATT/P/OL
Router1.00-00        0x00000003  0xe2da        574            0/0/0
Router2.00-00*       0x00000002  0x0585        540            0/0/0
Router2.01-00*       0x00000001  0x0fcf        539            0/0/0
    
```

The command in this example displays information for the LSPs in the device’s Level-1 and Level-2 LSP databases. Notice that the display groups the Level-1 and Level-2 LSPs separately.

Syntax: `show ipv6 isis database [HHHH.HHHH.HHHH.HH-HH | detail | I1 | I2 | level1 | level2]`

The `HHHH.HHHH.HHHH.HH-HH` parameter restricts the display to the entry for the specified LSPID. (The LSPID consists of the source ID (HHHH.HHHH.HHHH), the pseudonode (HH-), and LSPID (-HH). To determine the device’s source ID, use the `show ipv6 isis` command. For more information, refer to “[Displaying IPv6 IS-IS information](#)” on page 725. To determine the pseudonode and LSPID, use the `show ipv6 isis database` command.

NOTE

Name mapping is enabled by default. When name mapping is enabled, the output of the `show ipv6 isis database` command uses the hostname instead of the system ID. To disable mapping so that these displays use the system ID instead, enter the `no hostname` command at the IS-IS router configuration level.

The `detail` parameter displays detailed information about the LSPs. The detailed information display is discussed later in this section.

The `I1` and `level1` parameters restrict the display to the Level-1 LSP entries. You can use these parameters interchangeably.

The `I2` and `level2` parameters restrict the display to the Level-2 LSP entries. You can use these parameters interchangeably.

This display shows the following information.

TABLE 153 IPv6 IS-IS summary LSP database information

This field...	Displays...
LSPID	The LSP ID, which consists of the source ID (HHHH.HHHH.HHHH), the pseudonode (HH-), and LSPID (-HH). Note: If the address has an asterisk (*) at the end, this indicates that the LSP is locally originated.
LSP Seq Num	The sequence number of the LSP.
LSP Checksum	The checksum calculated by the device that sent the LSP and used by the device to verify that the LSP was not corrupted during transmission over the network.
LSP Holdtime	The maximum number of seconds during which the LSP will remain valid. Note: The IS that originates the LSP starts the timer for the LSP. As a result, LSPs do not all have the same amount of time remaining when they enter the device’s LSP database.

TABLE 153 IPv6 IS-IS summary LSP database information (Continued)

This field...	Displays...
ATT	A 4-bit value extracted from bits 4 – 7 in the Attach field of the LSP.
P	The value in the Partition option field of the LSP. The field can have one of the following values: <ul style="list-style-type: none"> • 0 – The IS that sent the LSP does not support partition repair. • 1 – The IS that sent the LSP supports partition repair.
OL	The value in the LSP database overload field of the LSP. The field can have one of the following values: <ul style="list-style-type: none"> • 0 – The overload bit is off. • 1 – The overload bit is on, indicating that the IS that sent the LSP is overloaded and should not be used as a Level-2 router.

You can display the detailed information of all the LSPs in the LSP databases with IS-IS MT transition support enabled or disabled, by entering the following command at any level of the CLI.

The following example shows the output for the **show ipv6 isis database detail** command without the transition support.

```

Brocade# show ipv6 isis database detail
IS-IS Level-1 Link State Database
LSPID                               Seq Num      Checksum     Holdtime    ATT/P/OL
Dist1.00-00                          0x000001b2   0x0ed4       1183        0/0/0
  Area Address: 00.0000
  NLPID: IPv6 IP
  Topology: IPv6(Ovld:0 Att:0) IPv4
  Hostname: Dist1
  IP address: 101.1.1.1
  IPv6 address: 2000:56:1::1:1:1
  Metric: 10      IP-Extended 191.56.1.0/24      Up: 0 Subtlv: 0
  Metric: 10      IP-Extended 191.25.1.0/24      Up: 0 Subtlv: 0
  Metric: 10      IP-Extended 191.1.5.1/32       Up: 0 Subtlv: 0
  Metric: 10      IPv6 (MT-IPv6) 2000:56:1:0:0:1::/96  Up: 0 Subtlv: 0
  Metric: 10      IPv6 (MT-IPv6) 2000:25:1:0:0:1::/96  Up: 0 Subtlv: 0
  Metric: 10      IPv6 (MT-IPv6) 2000:1:1::5:1/128  Up: 0 Subtlv: 0
  Metric: 10      IS (MT-IPv6) Dist2.00
  Metric: 10      IS (MT-IPv6) Edge2.00
  Metric: 10      IS-Extended Dist2.00
  Metric: 10      IS-Extended Edge2.00
LSPID                               Seq Num      Checksum     Holdtime    ATT/P/OL
Core2.00-00                          0x00000049   0xee12       1174        0/0/0
  Area Address: 00.0000
  NLPID: IPv6 IP
  Topology: IPv6(Ovld:0 Att:0) IPv4
  Hostname: Core2
  IP address: 102.1.1.2
  IPv6 address: 2000:28:1::1:1:2
  Metric: 10      IP-Extended 191.28.1.0/24      Up: 0 Subtlv: 0
  Metric: 10      IP-Extended 191.68.1.0/24      Up: 0 Subtlv: 0
  Metric: 10      IP-Extended 191.1.8.1/32       Up: 0 Subtlv: 0
  Metric: 10      IPv6 (MT-IPv6) 2000:28:1:0:0:1::/96  Up: 0 Subtlv: 0
  Metric: 10      IPv6 (MT-IPv6) 2000:68:1:0:0:1::/96  Up: 0 Subtlv: 0
  Metric: 10      IPv6 (MT-IPv6) 2000:1:1::8:1/128  Up: 0 Subtlv: 0
  Metric: 10      IS (MT-IPv6) Dist2.12
  Metric: 10      IS (MT-IPv6) Core2.3c
  Metric: 10      IS (MT-IPv6) Core2.3d
  Metric: 10      IS (MT-IPv6) Edge2.00
    
```

Displaying IPv6 IS-IS information

```

Metric: 10      IS-Extended Dist2.12
Metric: 10      IS-Extended Core2.3c
Metric: 10      IS-Extended Core2.3d
Metric: 10      IS-Extended Edge2.00
LSPID                               Seq Num      Checksum     Holdtime     ATT/P/OL
Edge2.00-00*                         0x00000190   0x88a9       1080         0/0/0
  Area Address: 00.0000
  NLPID: IPv6 IP
  Topology: IPv6(Ovld:0 Att:0) IPv4
  Hostname: Edge2
  IP address: 101.1.1.2
  IPv6 address: 2000:28:1::1:1:1
  Metric: 10      IP-Extended 101.1.0.0/16      Up: 0 Subtlv: 0
  Metric: 10      IP-Extended 191.1.2.1/32      Up: 0 Subtlv: 0
  Metric: 10      IP-Extended 191.28.1.0/24     Up: 0 Subtlv: 0
  Metric: 10      IP-Extended 191.25.1.0/24     Up: 0 Subtlv: 0
  Metric: 10      IPv6 (MT-IPv6) 2000:1:1::2:1/128 Up: 0 Subtlv: 0
  Metric: 10      IS-Extended Dist1.00
LSPID                               Seq Num      Checksum     Holdtime     ATT/P/OL
Dist2.00-00                          0x000001b5   0x4780       1191         0/0/0
  Area Address: 00.0000
  NLPID: IPv6 IP
  Topology: IPv6(Ovld:0 Att:0) IPv4
  Hostname: Dist2
  IP address: 102.1.1.1
  IPv6 address: 2000:56:1::1:1:2
  Metric: 10      IP-Extended 191.56.1.0/24      Up: 0 Subtlv: 0
  Metric: 10      IP-Extended 192.68.1.0/31      Up: 0 Subtlv: 0
  Metric: 10      IP-Extended 191.68.1.0/24      Up: 0 Subtlv: 0
  Metric: 10      IP-Extended 191.69.1.0/24      Up: 0 Subtlv: 0
  Metric: 10      IP-Extended 191.1.6.1/32      Up: 0 Subtlv: 0
  Metric: 10      IPv6 (MT-IPv6) 2000:56:1:0:0:1::/96 Up: 0 Subtlv: 0
  Metric: 10      IPv6 (MT-IPv6) 2000:68:1:0:0:1::/96 Up: 0 Subtlv: 0
  Metric: 10      IPv6 (MT-IPv6) 2000:1:1::6:1/128 Up: 0 Subtlv: 0
  Metric: 10      IS (MT-IPv6) Dist2.12
  Metric: 10      IS (MT-IPv6) Dist2.45
  Metric: 10      IS (MT-IPv6) Dist2.46
  Metric: 10      IS (MT-IPv6) Dist1.00
  Metric: 10      IS-Extended Dist2.12
  Metric: 10      IS-Extended Dist2.3a
  Metric: 10      IS-Extended Dist2.45
  Metric: 10      IS-Extended Dist2.46
  Metric: 10      IS-Extended Dist1.00
LSPID                               Seq Num      Checksum     Holdtime     ATT/P/OL
Dist2.12-00                          0x00000008   0xea06       1190         0/0/0
  Metric: 0      IS-Extended Dist2.00
  Metric: 0      IS-Extended Core2.00

```

The following example shows the output for the **show ipv6 isis database detail** command with transition support enabled.

```

Brocade# show ipv6 isis database detail
IS-IS Level-1 Link State Database
LSPID                               Seq Num      Checksum     Holdtime     ATT/P/OL
Dist1.00-00                         0x000001b3   0x8019       1066         0/0/0
  Area Address: 00.0000
  NLPID: IPv6 IP
  Topology: IPv6(Ovld:0 Att:0) IPv4
  Hostname: Dist1
  IP address: 101.1.1.1

```

Displaying IPv6 IS-IS information

```

Metric: 10      IP-Extended 191.56.1.0/24      Up: 0 Subtlv: 0
Metric: 10      IP-Extended 191.25.1.0/24      Up: 0 Subtlv: 0
Metric: 10      IP-Extended 191.1.5.1/32      Up: 0 Subtlv: 0
Metric: 10      IPv6 Reachablity 2000:56:1:0:0:1::/96  Up: 0 Subtlv: 0
Metric: 10      IPv6 Reachablity 2000:25:1:0:0:1::/96  Up: 0 Subtlv: 0
Metric: 10      IPv6 Reachablity 2000:1:1:::5:1/128  Up: 0 Subtlv: 0
Metric: 10      IPv6 (MT-IPv6) 2000:56:1:0:0:1::/96  Up: 0 Subtlv: 0
Metric: 10      IPv6 (MT-IPv6) 2000:25:1:0:0:1::/96  Up: 0 Subtlv: 0
Metric: 10      IPv6 (MT-IPv6) 2000:1:1:::5:1/128  Up: 0 Subtlv: 0
Metric: 10      IS (MT-IPv6) Dist2.00
Metric: 10      IS (MT-IPv6) Edge2.00
Metric: 10      IS-Extended Dist2.00
Metric: 10      IS-Extended Edge2.00
LSPID                               Seq Num      Checksum      Holdtime      ATT/P/OL
Core2.00-00                          0x0000004a   0x3bd1        1086           0/0/0
  Area Address: 00.0000
  NLPID: IPv6 IP
  Topology: IPv6(Ovld:0 Att:0) IPv4
  Hostname: Core2
  IP address: 102.1.1.2
  IPv6 address: 2000:28:1::1:1:2
Metric: 10      IP-Extended 191.28.1.0/24      Up: 0 Subtlv: 0
Metric: 10      IP-Extended 191.68.1.0/24      Up: 0 Subtlv: 0
Metric: 10      IP-Extended 191.1.8.1/32      Up: 0 Subtlv: 0
Metric: 10      IPv6 Reachablity 2000:28:1:0:0:1::/96  Up: 0 Subtlv: 0
Metric: 10      IPv6 Reachablity 2000:68:1:0:0:1::/96  Up: 0 Subtlv: 0
Metric: 10      IPv6 Reachablity 2000:1:1:::8:1/128  Up: 0 Subtlv: 0
Metric: 10      IPv6 (MT-IPv6) 2000:28:1:0:0:1::/96  Up: 0 Subtlv: 0
Metric: 10      IPv6 (MT-IPv6) 2000:68:1:0:0:1::/96  Up: 0 Subtlv: 0
Metric: 10      IPv6 (MT-IPv6) 2000:1:1:::8:1/128  Up: 0 Subtlv: 0
Metric: 10      IS (MT-IPv6) Dist2.12
Metric: 10      IS (MT-IPv6) Edge2.00
Metric: 10      IS-Extended Dist2.12
Metric: 10      IS-Extended Edge2.00
LSPID                               Seq Num      Checksum      Holdtime      ATT/P/OL
Edge2.00-00*                          0x00000191   0xdba2        1055           0/0/0
  Area Address: 00.0000
  NLPID: IPv6 IP
  Topology: IPv6(Ovld:0 Att:0) IPv4
  Hostname: Edge2
  IP address: 101.1.1.2
  IPv6 address: 2000:28:1::1:1:1
Metric: 10      IP-Extended 101.1.0.0/16      Up: 0 Subtlv: 0
Metric: 10      IP-Extended 191.28.1.0/24      Up: 0 Subtlv: 0
Metric: 10      IP-Extended 191.25.1.0/24      Up: 0 Subtlv: 0
Metric: 10      IP-Extended 191.1.2.1/32      Up: 0 Subtlv: 0
Metric: 10      IPv6 Reachablity 2000:1:1:::2:1/128  Up: 0 Subtlv: 0
Metric: 10      IPv6 (MT-IPv6) 2000:1:1:::2:1/128  Up: 0 Subtlv: 0
Metric: 10      IS-Extended Dist1.00
LSPID                               Seq Num      Checksum      Holdtime      ATT/P/OL
Dist2.00-00                          0x000001b6   0x24b8        1100           0/0/0
  Area Address: 00.0000
  NLPID: IPv6 IP
  Topology: IPv6(Ovld:0 Att:0) IPv4
  Hostname: Dist2
  IP address: 102.1.1.1
  IPv6 address: 2000:56:1::1:1:2
Metric: 10      IP-Extended 191.56.1.0/24      Up: 0 Subtlv: 0
Metric: 10      IP-Extended 191.68.1.0/24      Up: 0 Subtlv: 0
Metric: 10      IP-Extended 191.69.1.0/24      Up: 0 Subtlv: 0

```


Displaying IPv6 IS-IS information

```

Metric: 10      IP-Extended 191.1.6.1/32      Up: 0 Subtlv: 0
Metric: 10      IP-Extended 192.68.1.0/31      Up: 0 Subtlv: 0
Metric: 10      IPv6 Reachablity 2000:56:1:0:0:1::/96  Up: 0 Subtlv: 0
Metric: 10      IPv6 Reachablity 2000:68:1:0:0:1::/96  Up: 0 Subtlv: 0
Metric: 10      IPv6 Reachablity 2000:1:1::6:1/128  Up: 0 Subtlv: 0
Metric: 10      IPv6 (MT-IPv6) 2000:56:1:0:0:1::/96  Up: 0 Subtlv: 0
Metric: 10      IPv6 (MT-IPv6) 2000:68:1:0:0:1::/96  Up: 0 Subtlv: 0
Metric: 10      IPv6 (MT-IPv6) 2000:1:1::6:1/128  Up: 0 Subtlv: 0
Metric: 10      IS (MT-IPv6) Dist2.12
Metric: 10      IS (MT-IPv6) Dist1.00
Metric: 10      IS-Extended Dist2.12
Metric: 10      IS-Extended Dist2.3a
Metric: 10      IS-Extended Dist1.00
LSPID                               Seq Num      Checksum     Holdtime     ATT/P/OL
Dist2.12-00                          0x00000009   0xe807       1100         0/0/0
    Metric: 0      IS-Extended Dist2.00
    Metric: 0      IS-Extended Core2.00

```

Syntax: `show ipv6 isis database detail [I1 | I2 | level1 | level2]`

The **I1** and **level1** options restrict the display to the level 1 LSP entries. You can use these options interchangeably.

The **I2** and **level2** options restrict the display to the level 2 LSP entries. You can use these options interchangeably.

For example, to display details about level 1 LSPs only, enter the following command at any CLI level.

```
Brocade# show ipv6 isis database detail l1
```

[Table 154](#) describes the output parameters of the `show ipv6 isis database detail` command.

TABLE 154 Output parameters of the `show ipv6 isis database detail` command

Field	Description
LSPID	The LSP ID, which consists of the source ID (HHHH.HHHH.HHHH), the pseudonode (HH-), and the LSPID (-HH). NOTE: An asterisk (*) at the end of the address indicates that the LSP is locally originated.
Seq Num	The sequence number of the LSP.
Checksum	The checksum calculated by the device that sent the LSP and used by the device to verify that the LSP was not corrupted during transmission over the network.
Holdtime	The maximum number of seconds during which the LSP remains valid. NOTE: The IS that originates the LSP starts the timer for the LSP. As a result, all LSPs do not have the same amount of time remaining when they enter the device LSP database.
ATT/P/OL	A 4-bit value extracted from 4 through 7 bits in the Attach field of the LSP.
Area Address	The address of the area.

TABLE 154 Output parameters of the `show ipv6 isis database detail` command (Continued)

Field	Description
TLVs	The remaining output displays the type, length, and value (TLV) parameters included in the LSPs. These parameters advertise reachability to IPv6 devices or networks. For example: <ul style="list-style-type: none"> • A router identified as an IS and with its host name can be reached using the default metric. • An end system within the current area identified as an IP-Extended and with the IP address, can be reached using the default metric. • An IPv6 prefix is up and can be reached using the default metric.
NLPID	The Network Layer Protocol Identifier (NLPID), which specifies the protocol the IS that sent the LSP is using. Usually, this value is “cc” but can also be “iso”.
Hostname	The host name of the router that contains the LSP database is displayed.
IPv6 address	The IPv6 address of the interface that sent the LSP. The device can use this address as the next hop in routes to the addresses listed in the following rows.
IP address	The IP address of the interface that sent the LSP. The device can use this address as the next hop in routes to the addresses listed in the following rows.
Destination addresses	The rows of information following the IP address row are the destinations advertised by the LSP. The device can reach these destinations by using the previously listed IP address as the next hop. Each destination entry contains the following information: <ul style="list-style-type: none"> • Metric – The value of the default metric, which is the IS-IS cost of using the previous IP address as the next hop to reach this destination. • Device type – The device type at the destination. The type can be one of the following: <ul style="list-style-type: none"> • End System – The device is an ES. • IP-Internal – The device is an ES within the current area. The IP address and subnet mask are listed. • IS – The device is another IS. The NET (NSAP address) is listed. • IP-Extended – Same as IP-Internal, except the device uses the extended TLV fields described in draft-ietf-isis-traffic-02.txt to carry the information. • IS-Extended – Same as IS, except the device uses the extended TLV fields described in draft-ietf-isis-traffic-02.txt to carry the information. • MT-IPv6 - The device uses the IPv6 Multi-Topology TLV fields to carry the information.
Topology	The topology of the interface.

Displaying the system ID to name mappings

IS-IS maps the IS-IS system IDs to the hostnames of the devices with those IS. To display these mappings, enter the following command at any level of the CLI.

```
Brocade# show ipv6 isis hostname
Total number of entries in IS-IS Hostname Table: 2
  System ID      Hostname      * = local IS
  * 0000.0022.2222 Router2
    0000.0011.1111 Router1
```

Syntax: `show ipv6 isis hostname`

This example contains two mappings for this device. The device's IS-IS system ID is "2222.2222.2222" and its hostname is "Router2". The display contains an entry for another router. The display contains one entry for each IS that supports name mapping.

NOTE

Name mapping is enabled by default. When name mapping is enabled, the output of the **show ipv6 isis database** and **show ipv6 isis neighbor** commands uses the hostname instead of the system ID. To disable mapping so that these displays use the system ID instead, enter the **no hostname** command at the IS-IS router configuration level.

Displaying IPv6 IS-IS interface information

To display information about the interfaces on which IPv6 IS-IS is enabled, enter the following command at any level of the CLI.

```
Brocade# show ipv6 isis interface
Total number of IS-IS Interfaces: 4

Interface : 2/1      Local Circuit Number: 00000001
Circuit Type : BCAST Circuit Mode : LEVEL-1-2
Circuit State: UP Passive State: FALSE
MTU : 1497
Level-1 Metric: 10, Level-1 Priority: 64
Level-1 Hello Interval: 10 Level-1 Hello Multiplier: 3
Level-1 Designated IS: Router2.01-22      Level-1 DIS Changes: 8
Level-2 Metric: 10, Priority: 64
Level-2 Hello Interval: 10 Level-2 Hello Multiplier: 3
Level-2 Designated IS: Router2.01-00 Level-2 DIS Changes: 8
Next IS-IS LAN Level-1 Hello in 1 seconds
Next IS-IS LAN Level-2 Hello in 1 seconds
Number of active Level-1 adjacencies: 1
Number of active Level-2 adjacencies: 1
Circuit State Changes: 0 Circuit Adjacencies State Changes: 2
Rejected Adjacencies: 0
Circuit Authentication Fails: 0 Bad LSP 0
Control Messages Sent: 1696 Control Messages Received: 159
IP Enabled: TRUE
IP Address and Subnet Mask:
    10.0.0.2          255.0.0.0
    10.147.201.150   255.255.255.0
IPv6 Enabled: TRUE
IPv6 Address :
    2001:db8::2
. . .
```

NOTE

The latter part of this display is truncated for brevity. The purpose of this display is to show all possible fields that might display rather than to show complete output.

Syntax: **show ipv6 isis interface**

This display shows the following information.

TABLE 155 IPv6 IS-IS interface information

This field...	Displays...
Total number of IS-IS interfaces	The number of interfaces on which IPv6 IS-IS is enabled.
Interface	The port or virtual interface number to which the information listed below applies.
Local Circuit Number	The ID that the instance of IPv6 IS-IS running on the interface applied to the circuit between this interface and the interface at the other end of the link.
Circuit Type	The type of IS-IS circuit running on the interface. The circuit type can be one of the following: <ul style="list-style-type: none"> • BCAST – broadcast • PTP – point-to-point
Circuit Mode	The IS-IS type in use on the circuit. The mode can be one of the following: <ul style="list-style-type: none"> • LEVEL-1 • LEVEL-2 • LEVEL-1-2
Circuit State	The state of the circuit, which can be one of the following: <ul style="list-style-type: none"> • DOWN • UP
Passive State	The state of the passive option, which determines whether the interface is allowed to form an IS-IS adjacency with the IS at the other end of the circuit. The state can be one of the following: <ul style="list-style-type: none"> • FALSE – The passive option is disabled. The interface can form an adjacency with the IS at the other end of the link. • TRUE – The passive option is enabled. The interface cannot form an adjacency, but can still advertise itself into the area.
MTU	The maximum length supported for IS-IS PDUs sent on this interface.
Level-1 Metric	The default-metric value that the device inserts in IS-IS Level-1 PDUs originated on this interface.
Level-1 Priority	The priority of this IS to be elected as the Designated IS for Level-1 in this broadcast network.
Level-1 Hello Interval	The number of seconds the software waits between sending Level-1 hello PDUs to the IS at the other end of the circuit.
Level-1 Hello Multiplier	The number by which the software multiplies the hello interval to calculate the hold time for Level-1 Hello messages received on the circuit.
Level-1 Designated IS	The NET of the Level-1 Designated IS.
Level-1 DIS Changes	The number of times the NET of the Level-1 Designated IS has changed.
Level-2 Metric	The default-metric value that the device inserts in IS-IS Level-2 PDUs originated on this interface.
Level-2 Priority	The priority of this IS to be elected as the Designated IS for Level-2 in this broadcast network.
Level-2 Hello Interval	The number of seconds the software waits between sending Level-2 Hello messages to the IS at the other end of the circuit.
Level-2 Hello Multiplier	The number by which the software multiplies the hello interval to calculate the hold time for Level-2 LSPs received on the circuit.
Level-2 Designated IS	The NET of the Level-2 Designated IS.
Level-2 DIS Changes	The number of times the NET of the Level-2 Designated IS has changed.

TABLE 155 IPv6 IS-IS interface information (Continued)

This field...	Displays...
Next IS-IS LAN Level-1 Hello	Number of seconds before next Level-1 Hello message will be transmitted by the device.
Next IS-IS LAN Level-2 Hello	Number of seconds before next Level-2 Hello message will be transmitted by the device.
Number of active Level-1 adjacencies	The number of ISs with which this interface has an active Level-1 adjacency.
Number of active Level-2 adjacencies	The number of ISs with which this interface has an active Level-2 adjacency.
Circuit State Changes	The number of times the state of the circuit has changed.
Circuit State Adjacencies Changes	The number of times an adjacency has started or ended on this circuit.
Rejected Adjacencies	The number of adjacency attempts by other ISs rejected by the device.
Circuit Authentication Fails	The number of times the device rejected a circuit because the authentication did not match the authentication configured on the device.
Bad LSP	The number of times the interface received a bad LSP from an IS at the other end of the circuit. The following conditions can cause an LSP to be bad: <ul style="list-style-type: none"> • Invalid checksum • Invalid length • Invalid lifetime value
Control Messages Sent	The number of IS-IS control PDUs sent on this interface.
Control Messages Received	The number of IS-IS control PDUs received on this interface.
IP Enabled	The state of IP on the interface, which can be one of the following: <ul style="list-style-type: none"> • TRUE – IP is enabled. • FALSE – IP is disabled.
IP Address and Subnet Mask	The IP address(es) and sub-net masks configured on this interface.
IPv6 Enabled	The state of IPv6 on the interface, which can be one of the following: <ul style="list-style-type: none"> • TRUE – IPv6 is enabled. • FALSE – IPv6 is disabled.
IPv6 Address	The IPv6 address(es) configured on this interface.

Displaying IPv6 IS-IS memory usage

To display information about IPv6 IS-IS memory usage, enter the following command at any level of the CLI.

```

Brocade# show ipv6 isis memory
Total Static Memory Allocated : 1333 bytes
Total Dynamic Memory Allocated : 157952 bytes
Memory Type                Size      Allocated  Max-alloc  Alloc-Fails
MTYPE_ISIS_IP6_SUMMARY_PR  0         0          0          0
MTYPE_ISIS_OTHER           20        0          1          0
MTYPE_ISIS_IP6_ROUTE_NODE  21        22         1024       0
MTYPE_ISIS_IP6_ROUTE_INFO  12        17         1024       0
MTYPE_ISIS_IP6_NEXTHOP     24        2          256        0
MTYPE_ISIS_IP6_REDIS_ROUT  12        5          256        0
    
```

Syntax: show ipv6 isis memory

This display shows the following information.

TABLE 156 IPv6 IS-IS memory usage information

This field...	Displays...
Total Static Memory Allocated	A summary of the amount of static memory allocated, in bytes, to IPv6 IS-IS.
Total Dynamic Memory Allocated	A summary of the amount of dynamic memory allocated, in bytes, to IPv6 IS-IS.
Memory Type	The type of memory used by IPv6 IS-IS. (This information is for use by Brocade technical support in case of a problem.)
Size	The size of a memory type.
Allocated	The amount of memory currently allocated to a memory type.
Max-alloc	The maximum amount of memory that was allocated to a memory type.
Alloc-Fails	The number of times an attempt to allocate memory to a memory type failed.

Displaying IPv6 IS-IS neighbor information

You can display a summary or detailed information for all neighbors with which the device has formed an IS-IS adjacency.

To display a summary of all IPv6 IS-IS neighbors of a device, enter the following command at any level of the CLI.

```
Brocade# show ipv6 isis neighbor
Total number of IS-IS Neighbors: 2
System Id      Interface  SNPA          State Holdtime Type Pri StateChgeTime
Router1        Ether 3/2  0000.0000.0020 UP    30      ISL2 64  0  :0 :14:1
Router1        Ether 3/2  0000.0000.0020 UP    30      ISL1 64  0  :0 :14:1
```

Syntax: show ipv6 isis neighbor [detail]

This display shows the following information.

TABLE 157 Summary of IPv6 IS-IS neighbor information

This field...	Displays...
Total number of IS-IS Neighbors	The number of ISs with which the device has formed an IS-IS adjacency.
System ID	The system ID of the neighbor. Note: Name mapping is enabled by default. When name mapping is enabled, the output of the show ipv6 isis neighbor command uses the hostname instead of the system ID. To disable mapping so that these displays use the system ID instead, enter the no hostname command at the IS-IS router configuration level. For more information about performing this task, refer to the “ Chapter 3, “IS-IS (IPv4)” ”.
Interface	The device port or virtual interface attached to the neighbor.
SNPA	The Subnetwork Point of Attachment (SNPA), which is the MAC address of the device physical or virtual interface attached to the neighbor.

TABLE 157 Summary of IPv6 IS-IS neighbor information (Continued)

This field...	Displays...
State	The state of the adjacency with the neighbor. The state can be one of the following: <ul style="list-style-type: none"> DOWN – The adjacency is down. INIT – The adjacency is being established and is not up yet. UP – The adjacency is up.
Holdtime	The time between transmissions of IS-IS hello messages.
Type	The IS-IS type of the adjacency. The type can be one of the following: <ul style="list-style-type: none"> ISL1 – Level-1 IS ISL2 – Level-2 IS PTP – Point-to-Point IS ES – ES <p>Note: The device forms a separate adjacency for each IS-IS type. Thus, if the device has both types of IS-IS adjacencies with the neighbor, the display contains a separate row of information for each adjacency.</p>
Pri	The priority of this IS to be elected as the Designated IS in this broadcast network.
StateChgeTime	The amount of time that has passed since the adjacency last changed state.

To display detailed information about all IPv6 IS-IS neighbors of a device, enter the following command at any level of the CLI.

```
Brocade# show ipv6 isis neighbor detail
Total number of IS-IS Neighbors: 2
System ID      Interface  SNPA                State Holdtime Type Pri StateChgeTime
Router1       Ether 3/2  0000.0000.0020     UP    30      ISL2 64  0   :0 :14:5
Area Address(es): 49.6561
IP Address(es): 10.0.0.1
IPv6 Address: fe80::2e0:52ff:fe00:20
Circuit ID: 10.2222.2222.01
System ID      Interface  SNPA                State Holdtime Type Pri StateChgeTime
Router1       Ether 3/2  0000.0000.0020     UP    30      ISL1 64  0   :0 :14:5
Area Address(es): 49.6561
IP Address(es): 10.0.0.1
IPv6 Address: fe80::2e0:52ff:fe00:20
Circuit ID: 10.2222.2222.01
```

This display shows the following information.

TABLE 158 Detailed IPv6 IS-IS neighbor information

This field...	Displays...
Total number of IS-IS Neighbors	For information about this field, refer to Table 157 on page 738.
System ID	For information about this field, refer to Table 157 on page 738.
Interface	For information about this field, refer to Table 157 on page 738.
SNPA	For information about this field, refer to Table 157 on page 738.
State	For information about this field, refer to Table 157 on page 738.
Holdtime	For information about this field, refer to Table 157 on page 738.
Type	For information about this field, refer to Table 157 on page 738.
Pri	For information about this field, refer to Table 157 on page 738.

TABLE 158 Detailed IPv6 IS-IS neighbor information (Continued)

This field...	Displays...
StateChgeTime	For information about this field, refer to Table 157 on page 738.
Area Address(es)	The address(es) of areas to which the neighbor interface belongs.
IP Address(es)	The IP address(es) assigned to the neighbor interface.
IPv6 Address	The IPv6 address(es) assigned to the neighbor interface.
Circuit ID	The ID of the IS-IS circuit running on the neighbor interface.

Displaying IPv6 IS-IS redistribution information

To display information about the IPv6 routes redistributed into IPv6 IS-IS, enter the following command at any level of the CLI.

```
Brocade# show ipv6 isis redistributed-routes
Prefix                               Protocol  Level      Metric
2001:db8:1002::/48                   Static   Level-2    1
2001:db8:2002::/48                   Static   Level-2    1
2001:db8:3002::/48                   Static   Level-2    1
2001:db8:4002::/48                   Static   Level-2    1
2001:db8:5002::/48                   Static   Level-2    1
```

Syntax: show ipv6 isis redistributed-routes

This display shows the following information.

TABLE 159 IPv6 IS-IS redistribution information

This field...	Displays...
Prefix	The IPv6 routes redistributed into IPv6 IS-IS.
Protocol	The protocol from which the route is redistributed into IPv6 IS-IS. Possible protocols include the following: <ul style="list-style-type: none"> • BGP – BGP4+. • RIP – RIPng. • OSPF – OSPFv3. • Static – IPv6 static route table. • Connected – A directly connected network.
Level	The IS-IS level into which a route is redistributed. Possible levels include the following: <ul style="list-style-type: none"> • Level-1 • Level-2 • Level-1-2
Metric	The value of the default redistribution metric, which is the IS-IS cost of redistributing the route into IPv6 IS-IS.

Displaying the IPv6 IS-IS route information

To display the routes in the device's IPv6 IS-IS route table, enter the following command at any level of the CLI.


```

Brocade# show ipv6 isis routes
ISIS IPv6 Routing Table
Total Routes: 17 Level1: 17 Level2: 0 Equal-cost multi-path: 0
Type IPv6 Prefix Next Hop Router Interface Cost
L1 2001:db8:1:1000::/48 fe80::2e0:52ff:fe00:20 ethe 3/2 20
L1 2001:db8:1:2000::/48 fe80::2e0:52ff:fe00:20 ethe 3/2 20
L1 2001:db8:1:3000::/48 fe80::2e0:52ff:fe00:20 ethe 3/2 20
L1 2001:db8:1:4000::/48 fe80::2e0:52ff:fe00:20 ethe 3/2 20
L1 2001:db8:1:5000::/48 fe80::2e0:52ff:fe00:20 ethe 3/2 20
L1 2001:db8:2:1000::/48 fe80::2e0:52ff:fe00:20 ethe 3/2 30
L1 2001:db8:2:2000::/48 fe80::2e0:52ff:fe00:20 ethe 3/2 30
L1 2001:db8:2:3000::/48 fe80::2e0:52ff:fe00:20 ethe 3/2 30
L1 2001:db8:2:4000::/48 fe80::2e0:52ff:fe00:20 ethe 3/2 30
    
```

Syntax: show ipv6 isis routes

This display shows the following information.

TABLE 160 IPv6 IS-IS route information

This field...	Displays...
Total Routes	The total number of routes in the device's IPv6 IS-IS route table. The total includes Level-1 and Level-2 routes.
Level1	The total number of Level-1 routes in the IPv6 IS-IS route table.
Level2	The total number of Level-1 routes in the IPv6 IS-IS route table.
Equal-cost multi-path	The total number of equal-cost routes to the same destination in the IPv6 IS-IS route table. If load sharing is enabled, the device equally distributes traffic among the routes.
Type	The route type, which can be one of the following: <ul style="list-style-type: none"> • L1 - Level-1 route • L2 - Level-2 route
IPv6 Prefix	The IPv6 prefix of the route.
Next Hop Router	The IPv6 address of the next-hop interface to the destination.
Interface	The device interface (physical or virtual interface) attached to the next hop.
Cost	The IPv6 IS-IS default metric for the route, which is the cost of using this route to reach the next-hop router to this destination.

Displaying IPv6 IS-IS traffic statistics

The device maintains statistics for common IS-IS PDU types. To display the IPv6 traffic statistics, enter the following command at any level of the CLI.

```

Brocade# show ipv6 isis traffic
Message Received Message Sent
Level-1 Hellos 98 1171
Level-2 Hellos 96 1170
PTP Hellos 0 0
Level-1 LSP 3 6
Level-2 LSP 3 6
Level-1 CSNP 1 110
Level-2 CSNP 1 110
Level-1 PSNP 0 0
Level-2 PSNP 0 0
    
```

Syntax: show ipv6 isis traffic

This display shows the following information.

TABLE 161 IPv6 IS-IS traffic statistics

This field...	Displays...
Level-1 Hellos	The number of Level-1 hello PDUs sent and received by the device.
Level-2 Hellos	The number of Level-2 hello PDUs sent and received by the device.
PTP Hellos	The number of point-to-point hello PDUs sent and received by the device.
Level-1 LSP	The number of Level-1 link-state PDUs sent and received by the device.
Level-2 LSP	The number of Level-2 link-state PDUs sent and received by the device.
Level-1 CSNP	The number of Level-1 Complete Sequence Number PDUs (CSNPs) sent and received by the device.
Level-2 CSNP	The number of Level-2 CSNPs sent and received by the device.
Level-1 PSNP	The number of Level-1 Partial Sequence Number PDUs (PSNPs) sent and received by the device.
Level-2 PSNP	The number of Level-2 PSNPs sent and received by the device.


IPv6 IS-IS Multi-Topology

IPv6 IS-IS supports Multi-Topology (MT) mode, which allows you to configure both IPv4 and IPv6 topologies on the router interfaces in an area or a domain. However, when implementing an MT, all routers in an area (Level 1 routing) or a domain (Level 2 routing) can be configured with a set of independent topologies on all their interfaces, even on loopback interfaces. All routers in an area or a domain use the same type of IPv6 support, either single-topology or MT. In a network, the Shortest Path First (SPF) is calculated for each configured topology.

[Figure 37](#) depicts a non-congruent topology with IPv6 IS-IS MT enabled. Router 1 is an IPv4 and IPv6 dual stack router, Router 2 is an IPv6 router, and Router 3 is an IPv4 router. All the routers (Router 1, Router 2, and Router 3) in the Area 1 are configured with a set of independent topologies.

FIGURE 37 IS-IS non-congruent topology**Area 1**

All interfaces are IPv6 IS-IS MT enabled

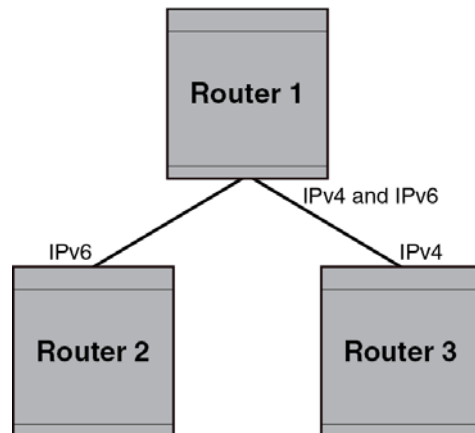

Configuration considerations for IPv6 IS-IS MT

The following are the configuration considerations:

- The wide metric style must be configured before enabling IPv6 IS-IS MT.
- IPv4, IPv6, or IPv4 and IPv6 configured on the same interface must run on the same IS-IS level.
- Enabling or disabling IPv6 IS-IS MT clears all adjacencies, LSP databases, and IPv6 IS-IS routes.
- All routers on a point-to-point or a broadcast interface must support at least one common topology (IPv4 or IPv6), when MT is enabled.

Migrating to IPv6 IS-IS MT

The following steps must be performed to migrate from a non-MT environment to an MT environment.

1. Assume that the entire network is not an IPv6 IS-IS MT environment, and ensure that all the routes are correct.
2. Use the **multi-topology transition** command to enable transition mode on each router one by one, and ensure that all the routes are correct.
3. After all the routers are in transition mode, use the **no multi-topology transition** command to disable transition mode on each router one by one. Ensure that all the routes are correct.
4. Change the topology to make IPv4 and IPv6 different.

Maintaining MT adjacencies

With the extension of IPv6 IS-IS MT, the new type, length, and value (TLV) parameters are added into the IS to IS hello (IIH) packets that advertise the topologies of the interface. In IPv6 IS-IS MT, the router advertises its information using the new TLV parameters such as MT ID TLV, MT IS Reachability TLV, MT Reachable IPv4 TLV, and MT Reachable IPv6 TLV. The TLVs specify the types of data, the maximum length of the data, and the valid values for the data.

Forming adjacencies on the point-to-point interfaces

On a point-to-point interface, adjacencies are formed with IS-IS routers that do not implement MT extensions. If two peers share at least one common topology, then an adjacency is formed between the peers.

Forming adjacencies on the broadcast interfaces

On a broadcast interface, all the MT-enabled routers advertise their MT capability TLV in their IIH packets. The MT-enabled IS-IS routers form adjacency with any IS-IS routers whether or not MT is enabled. A peering MT-disabled IS-IS router does not form adjacency when NLPID TLVs do not match.

New TLV attributes

The new TLV parameters to support the IPv6 IS-IS MT extension are MT ID TLV, MT IS Reachability TLV, MT Reachable IPv4 TLV, and MT Reachable IPv6 TLV.

Enabling IPv6 IS-IS MT

When you enable IPv6 IS-IS MT in an area or a domain, the MT-enabled router runs IPv6 IS-IS in multi SPF mode. You can enable IPv6 IS-IS MT transition mode in an area or a domain using the **transition** option of the **multi-topology** command. The **transition** option allows the network operating in IPv6 IS-IS single-topology support mode to continue to work while upgrading routers to include IPv6 IS-IS MT support. When you enable transition mode, the router advertises both the single-topology TLVs and MT TLVs.

When transition mode is not enabled, the routers operating in single-topology mode do not establish IPv6 connectivity with the routers operating in MT mode.

To enable IPv6 IS-IS MT, enter the following command at the IPv6 unicast address family configuration level.

```
Brocade(config-isis-router-ipv6u)# multi-topology
```

Syntax: [no] multi-topology

The [no] form of the command disables IPv6 IS-IS MT.

To enable IPv6 IS-IS MT with transition support, enter the following command at the IPv6 unicast address family configuration level.

```
Brocade(config-isis-router-ipv6u)# multi-topology transition
```

Syntax: [no] multi-topology [transition]

The **transition** option allows the network to undergo transition from IPv6 IS-IS single-topology mode to IPv6 IS-IS MT mode. By default, the transition mode is off.

The **[no]** form of the command disables the transition support.

Configuring the IS-IS IPv6 PSPF exponential back-off feature

The exponential back-off mechanism allows you to schedule PSPF processing for IPv6 IS-IS MT. An initial-hold-time interval is the wait time after an LSP change until the first PSPF calculation. Optionally, this value is followed by another configurable variable called the exponential-hold-time interval that is used as a wait time between the first and second PSPF calculations.

The exponential-hold-time interval is increased in multiples of two until it reaches the maximum hold time as configured by the max-hold-time variable. Once reached, the maximum hold time remains the hold interval between PSPF calculations until there are no further changes in the network. When there are no network changes in a hold down period, the gap between PSPF calculations returns to the initial-hold-time interval and the process begins again.

If the initial-hold-time interval is configured without an exponential-hold-time, the max-hold-time variable is used for the second and all subsequent intervals.

If the initial-hold-time and exponential-hold-time intervals are not configured, the max-hold-time variable is used for the first and all subsequent intervals.

To configure the minimum time between the two consecutive partial route calculations for IPv6 IS-IS MT, enter the following command under the IPv6 unicast address family configuration level.

```
Brocade(config-isis-router-ipv6u)# partial-spf-interval 60 1000 5000
```

Syntax: **[no] partial-spf-interval** *max-hold-time initial-hold-time exponential-hold-time*

The *max-hold-time* variable specifies the maximum hold time between two Partial Shortest Path First (PSPF) calculations. The range is from 0 through 120000 milliseconds. The default value is 5000 milliseconds.

The *initial-hold-time* variable is an optional value that specifies the hold time after an LSP change until the first PSPF calculation. The range is from 0 through 120000 milliseconds. The default value is 2000 milliseconds.

The *exponential-hold-time* variable is an optional value that specifies the hold time between the first and second PSPF calculations. The range is from 0 through 120000 milliseconds. The default value is 5000 milliseconds.

The **[no]** form of the command resets all parameters to their default values.

Changing the SPF timer

You can configure the minimum time between two consecutive SPF computations for IPv6 IS-IS MT, by entering the following command under the IPv6 unicast address family configuration level.

```
Brocade(config-isis-router-ipv6u)# spf-interval 5 2000 2000
```

Syntax: **[no] spf-interval** *max-hold-time initial-hold-time exponential-hold-time*

The *max-hold-time* variable specifies the maximum time gap between consecutive SPF calculations. The range is from 0 through 120 seconds. The default value is five seconds.

The *initial-hold-time* variable specifies the initial time gap between an SPF event and the first running of SPF. The range is from 0 through 120000 milliseconds. The default value is 5000 milliseconds.

The *exponential-hold-time* variable specifies the interval between two SPF calculations. The range is from 0 through 120000 milliseconds. The default value is 5000 milliseconds.

The **[no]** form of the command resets all parameters to their default values.

Changing the metric added value

When the device calculates a route, the device adds a metric (cost) to the route. Each IS-IS interface has a separate metric value. In IPv6 IS-IS MT, different metrics are configured on an interface for IPv4 and IPv6. When the metric value is configured for an interface, it rebuilds the route LSP and triggers IPv6 IS-IS MT SPF calculation.

To configure the metric value for an interface under IPv6 IS-IS MT, enter the following command.

```
Brocade(config-if-e10000-1/4)# isis ipv6 metric 15
```

Syntax: **[no] isis ipv6 metric value [level-1 | level-2]**

The *value* variable specifies the metric. The metric range depends on the metric style. You can specify the range from 1 through 63 for the narrow metric style and from 1 through 16777215 for the wide metric style. The default value for both styles is 10.

The **level-1** option specifies that the level 1 router routes traffic only within an area. To forward traffic to another area, the level 1 router sends the traffic to its nearest level-2 router.


The **level-2** option specifies that the level 2 router routes traffic between the areas within a domain. The **level-1 | level-2** options apply the change to only the level you specify. If you do not use one of the options, the change applies to both the levels.

The **no** form of the command resets all parameters to their default values.

Configuration example to deploy IPv6 IS-IS MT

Figure 38 shows an example of a non-congruent topology enabled with IPv6 IS-IS MT. Router D1 supports both the IPv4 and IPv6 topologies, router D2 supports both the IPv4 and IPv6 topologies, router E2 supports an IPv4 topology, and router C2 supports both the IPv4 and IPv6 topologies.

FIGURE 38 IPv6 IS-IS MT configuration

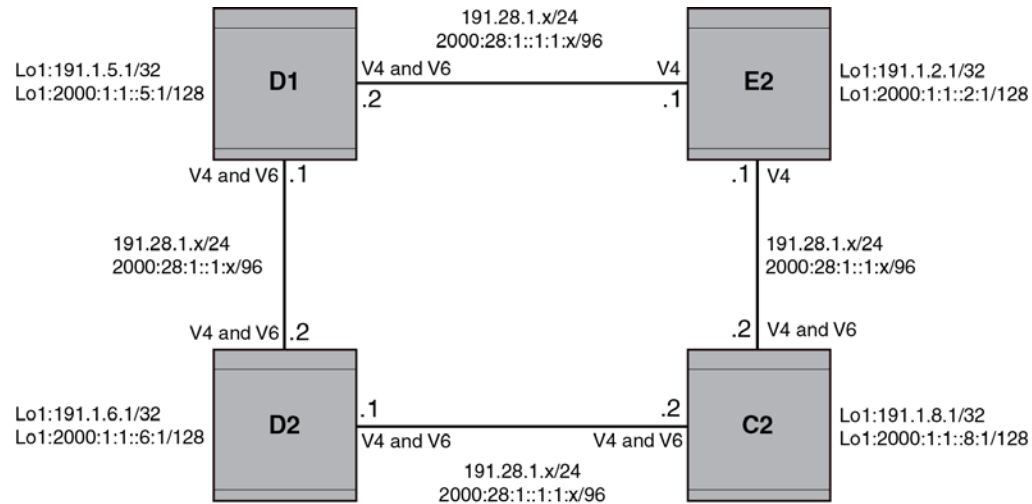

Configuration commands to enable IPv6 IS-IS MT on router D1

The following commands enable IPv6 IS-IS MT on router D1.

```
Brocade(config)# router isis
Brocade(config-isis-router)# net 00.0000.001b.ed03.1400.00
Brocade(config-isis-router)# address-family ipv4 unicast
Brocade(config-isis-router-ipv4u)# metric-style wide
Brocade(config-isis-router-ipv4u)# exit-address-family
Brocade(config-isis-router)# address-family ipv6 unicast
Brocade(config-isis-router-ipv6u)# multi-topology
Brocade(config-isis-router-ipv6u)# exit-address-family
```

Configuration commands to enable IPv6 IS-IS MT on router D2

The following commands enable IPv6 IS-IS MT on router D2.

```
Brocade(config)# router isis
Brocade(config-isis-router)# net 00.0000.001b.ed04.4400.00
Brocade(config-isis-router)# address-family ipv4 unicast
Brocade(config-isis-router-ipv4u)# metric-style wide
Brocade(config-isis-router-ipv4u)# exit-address-family
Brocade(config-isis-router)# address-family ipv6 unicast
Brocade(config-isis-router-ipv6u)# multi-topology
Brocade(config-isis-router-ipv6u)# exit-address-family
```

Configuration commands to enable IPv6 IS-IS MT on router E2

The following commands enable IPv6 IS-IS MT on router E2.

```
Brocade(config)# router isis
```

```
Brocade(config-isis-router)# net 00.0000.001b.ed04.4000.00
Brocade(config-isis-router)# address-family ipv4 unicast
Brocade(config-isis-router-ipv4u)# metric-style wide
Brocade(config-isis-router-ipv4u)# exit-address-family
Brocade(config-isis-router)# address-family ipv6 unicast
Brocade(config-isis-router-ipv6u)# multi-topology
Brocade(config-isis-router-ipv6u)# exit-address-family
```

Configuration commands to enable IPv6 IS-IS MT on router C2

The following commands enable IPv6 IS-IS MT on router C2.

```
Brocade(config)# router isis
Brocade(config-isis-router)# net 00.0000.001b.ed04.0000.00
Brocade(config-isis-router)# address-family ipv4 unicast
Brocade(config-isis-router-ipv4u)# metric-style wide
Brocade(config-isis-router-ipv4u)# exit-address-family
Brocade(config-isis-router)# address-family ipv6 unicast
Brocade(config-isis-router-ipv6u)# multi-topology
Brocade(config-isis-router-ipv6u)# exit-address-family
```

To display current running configuration for the router D2, enter the following command.

```
Brocade# show running-config
router isis
net 00.0000.001b.ed04.4400.00
address-family ipv4 unicast
metric-style wide
exit-address-family
address-family ipv6 unicast
multi-topology
exit-address-family
End
```


RIPng (IPv6)

Table 162 displays the individual Brocade devices and the RIPng features they support.

TABLE 162 Supported Brocade RIPng features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
RIPng	Yes	Yes	No	Yes	Yes	Yes	Yes
RIPng Timers	Yes	Yes	No	Yes	Yes	Yes	Yes
Default Route Learning and Advertising	Yes	Yes	No	Yes	Yes	Yes	Yes
Redistributing Routes Into RIPng	Yes	Yes	No	Yes	Yes	Yes	Yes
Controlling Distribution of Routes through RIPng	Yes	Yes	No	Yes	Yes	Yes	Yes
Distribution of Routes through RIPng	Yes	Yes	No	Yes	Yes	Yes	Yes
Poison Reverse Parameters	Yes	Yes	No	Yes	Yes	Yes	Yes
RIPng VRF	Yes	Yes	No	Yes	Yes	No	Yes

Routing Information Protocol (RIP) is an IP route exchange protocol that uses a distance vector (a number representing a distance) to measure the cost of a given route. RIP uses a hop count as its cost or metric.

IPv6 RIP, known as *Routing Information Protocol Next Generation* or *RIPng*, functions similarly to IPv4 RIP version 2. RIPng supports IPv6 addresses and prefixes.

In addition, some new commands that are specific to RIPng have been implemented. This chapter describes the commands that are specific to RIPng. This section does not describe commands that apply to both IPv4 RIP and RIPng.

RIPng maintains a *Routing Information Database (RIB)*, which is a local route table. The local RIB contains the lowest-cost IPv6 routes learned from other RIP routers. In turn, RIPng attempts to add routes from its local RIB into the main IPv6 route table.

This chapter describes the following:

- How to configure RIPng.

- How to clear RIPng information from the RIPng route table.
- How to display RIPng information and statistics.

Configuring RIPng

To configure RIPng, you must do the following:

- Enable RIPng globally on the Brocade device and on individual device interfaces.

The following configuration tasks are optional:

- Change the default settings of RIPng timers.
- Configure how the device learns and advertises routes.
- Configure which routes are redistributed into RIPng from other sources.
- Configure how the device distributes routes through RIPng.
- Configure poison reverse parameters.

Enabling RIPng

Before configuring the device to run RIPng, you must do the following:

- Enable the forwarding of IPv6 traffic on the device using the **ipv6 unicast-routing** command.
- Enable IPv6 on each interface over which you plan to enable RIPng. You enable IPv6 on an interface by configuring an IPv6 address or explicitly enabling IPv6 on that interface.

By default, RIPng is disabled. To enable RIPng, you must enable it globally on the Brocade device and also on individual device interfaces.

NOTE

Enabling RIPng globally on the Brocade device does not enable it on individual device interfaces.

To enable RIPng globally, enter the following command.

```
Brocade(config-rip-router)#ipv6 router rip
Brocade(config-ripng-router)#
```

After you enter this command, the device enters the RIPng configuration level, where you can access several commands that allow you to configure RIPng.

Syntax: [no] ipv6 router rip

To disable RIPng globally, use the **no** form of this command.

After enabling RIPng globally, you must enable it on individual Brocade device interfaces. You can enable it on physical as well as virtual routing interfaces. For example, to enable RIPng on Ethernet interface 3/1, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 rip enable
```

Syntax: [no] ipv6 rip enable

To disable RIPng on an individual device interface, use the **no** form of this command.

Enabling RIPng for a VRF instance

To enable RIPng for a specific VRF instance, enter the following commands:

```
Brocade(config)#ipv6 router rip vrf red
Brocade(config-ripng-router-vrf-red)#
```

Syntax: [no] ipv6 router rip vrf *vrf-name*

vrf-name is the specified VRF name for the RIPng. If the *vrf-name* is not specified, RIPng is configured using the default VRF.

To disable the RIPng for a specific VRF instance, use the **no** form of the command.

Configuring RIPng timers

Table 163 describes the RIPng timers and provides their defaults.

Timer	Description	Default
Update	Amount of time (in seconds) between RIPng routing updates.	30 seconds.
Timeout	Amount of time (in seconds) after which a route is considered unreachable.	180 seconds.
Hold-down	Amount of time (in seconds) during which information about other paths is ignored.	180 seconds.
Garbage-collection	Amount of time (in seconds) after which a route is removed from the routing table.	120 seconds.

You can adjust these timers for RIPng. Before doing so, keep the following caveats in mind:

- If you adjust these RIPng timers, it is strongly recommended to set the same timer values for all routers and access servers in the network.
- Setting the update timer to a shorter interval can cause the Brocade device to spend excessive time updating the IPv6 route table.
- It is recommended to set the timeout timer value to at least three times the value of the update timer.
- It is recommended that a shorter hold-down timer interval, because a longer interval can cause delays in RIPng convergence.

The following example sets updates to be broadcast every 45 seconds. If a route is not heard from in 135 seconds, the route is declared unusable. Further information is suppressed for an additional 10 seconds. Assuming no updates, the route is flushed from the routing table 20 seconds after the end of the hold-down period.

```
Brocade(config)# ipv6 router rip
Brocade(config-ripng-router)# timers 45 135 10 20
```

Syntax: [no] timers *update-timer timeout-timer hold-down-timer garbage-collection-timer*

Possible values for the timers are as follows:

- **Update timer:** 3 – 65535 seconds.
- **Timeout timer:** 9 – 65535 seconds.
- **Hold-down timer:** 9 – 65535 seconds.

- **Garbage-collection timer:** 9 – 65535 seconds.

NOTE

You must enter a value for each timer, even if you want to retain the current setting of a particular timer.

To return to the default values of the RIPng timers, use the **no** form of this command.

Configuring route learning and advertising parameters

You can configure the following learning and advertising parameters:

- Learning and advertising of RIPng default routes.
- Advertising of IPv6 address summaries.
- Metric of routes learned and advertised on a Brocade device interface.

Configuring default route learning and advertising

By default, the device does not learn IPv6 default routes (::/0). You can originate default routes into RIPng, which causes individual Brocade device interfaces to include the default routes in their updates. When configuring the origination of the default routes, you can also do the following:

- Suppress all other routes from the updates.
- Include all other routes in the updates.

For example, to originate default routes in RIPng and suppress all other routes in updates sent from Ethernet interface 3/1, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 rip default-information only
```

To originate IPv6 default routes and include all other routes in updates sent from Ethernet interface 3/1, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 rip default-information originate
```

Syntax: [no] **ipv6 rip default-information only | originate**

The **only** keyword originates the default routes and suppresses all other routes from the updates.

The **originate** keyword originates the default routes and includes all other routes in the updates.

To remove the explicit default routes from RIPng and suppress advertisement of these routes, use the **no** form of this command.

Advertising IPv6 address summaries

You can configure RIPng to advertise a summary of IPv6 addresses from a Brocade device interface and to specify an IPv6 prefix that summarizes the routes.

If a route's prefix length matches the value specified in the **ipv6 rip summary-address** command, RIPng advertises the prefix specified in the **ipv6 rip summary-address** command instead of the original route.

For example, to advertise the summarized prefix 2001:db8::/36 instead of the IPv6 address 2001:db8:0:adff:8935:e838:78:e0ff with a prefix length of 64 bits from Ethernet interface 3/1, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 address 2001:db8:0:adff:8935:e838:78:
e0ff /64
Brocade(config-if-e100-3/1)# ipv6 rip summary-address 2001:db8::/36
```

Syntax: [no] ipv6 rip summary-address *ipv6-prefix/prefix-length*

You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

To stop the advertising of the summarized IPv6 prefix, use the **no** form of this command.

Changing the metric of routes learned and advertised on an interface

A Brocade device interface increases the metric of an incoming RIPng route it learns by an offset (the default is one). The device then places the route in the route table. When the device sends an update, it advertises the route with the metric plus the default offset of zero in an outgoing update message.

You can change the metric offset an individual interface adds to a route learned by the interface or advertised by the interface. For example, to change the metric offset for incoming routes learned by Ethernet interface 3/1 to one and the metric offset for outgoing routes advertised by the interface to three, enter the following commands.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e100-3/1)# ipv6 rip metric-offset 1
Brocade(config-if-e100-3/1)# ipv6 rip metric-offset out 3
```

In this example, if Ethernet interface 3/1 learns about an incoming route, it will increase the incoming metric by two (the default offset of 1 and the additional offset of 1 as specified in this example). If Ethernet interface 3/1 advertises an outgoing route, it will increase the metric by 3 as specified in this example.

Syntax: [no] ipv6 rip metric-offset [out] 1 – 16

To return the metric offset to its default value, use the **no** form of this command.

Redistributing routes into RIPng

You can configure the device to redistribute routes from the following sources into RIPng:

- IPv6 static routes.
- Directly connected IPv6 networks.
- BGP4+.
- IPv6 IS-IS.
- OSPFv3.

When you redistribute a route from BGP4+, IPv6 IS-IS, or OSPFv3 into RIPng, the device can use RIPng to advertise the route to its RIPng neighbors.

When configuring the device to redistribute routes, such as BGP4+ routes, you can optionally specify a metric for the redistributed routes. If you do not explicitly configure a metric, the default metric value of one is used.

For example, to redistribute OSPFv3 routes into RIPng, enter the following command.

```
Brocade(config)# ipv6 router rip
Brocade(config-ripng-router)# redistribute ospf
```

Syntax: [no] redistribute bgp | connected | isis | ospf | static [metric *number*]

For the metric, specify a numerical value that is consistent with RIPng.

Controlling distribution of routes through RIPng

You can create a prefix list and then apply it to RIPng routing updates that are received or sent on a Brocade device interface. Performing this task allows you to control the distribution of routes through RIPng.

For example, to permit the inclusion of routes with the prefix 2001:db8::/32 in RIPng routing updates sent from Ethernet interface 3/1, enter the following commands.

```
Brocade(config)# ipv6 prefix-list routesfor2001 permit 2001:db8::/32
Brocade(config)# ipv6 router rip
Brocade(config-ripng-router)# distribute-list prefix-list routesfor2001 out
```

To deny prefix lengths greater than 64 bits in routes that have the prefix 2001:db8::/64 and allow all other routes received on tunnel interface 3/1, enter the following commands.

```
Brocade(config)# ipv6 prefix-list 2001routes deny 2001:db8::/64 le 128
Brocade(config)# ipv6 prefix-list 2001routes permit ::/0 ge 0 le 128
Brocade(config)# ipv6 router rip
Brocade(config-ripng-router)# distribute-list prefix-list 2001routes in
```

Syntax: [no] distribute-list prefix-list *name* in | out

The *name* parameter indicates the name of the prefix list generated using the **ipv6 prefix-list** command.

The **in** keyword indicates that the prefix list is applied to incoming routing updates on the specified interface.

The **out** keyword indicates that the prefix list is applied to outgoing routing updates on the specified interface.

For the *interface* parameter, you can specify the **ethernet**, **loopback**, **ve**, or **tunnel** keywords. If you specify an Ethernet interface, also specify the port number associated with the interface. If you specify a VE or tunnel interface, also specify the VE or tunnel number.

To remove the distribution list, use the **no** form of this command.

Configuring poison reverse parameters

By default, poison reverse is disabled on a RIPng Brocade device. If poison reverse is enabled, RIPng advertises routes it learns from a particular interface over that same interface with a metric of 16, which means that the route is unreachable.

If poison reverse is enabled on the RIPng Brocade device, it takes precedence over split horizon (if it is also enabled).

To enable poison reverse on the Brocade device, enter the following commands.

```
Brocade(config)# ipv6 router rip
Brocade(config-ripng-router)# poison-reverse
```

Syntax: [no] poison-reverse

To disable poison-reverse, use the **no** version of this command.

By default, if a RIPng interface goes down, the device does not send a triggered update for the interface's IPv6 networks.

To better handle this situation, you can configure a RIPng Brocade device to send a triggered update containing the local routes of the disabled interface with an unreachable metric of 16 to the other RIPng routers in the routing domain. You can enable the sending of a triggered update by entering the following commands.

```
Brocade(config)# ipv6 router rip
Brocade(config-ripng-router)# poison-local-routes
```

Syntax: [no] poison-local-routes

To disable the sending of a triggered update, use the **no** version of this command.

Clearing RIPng routes from IPv6 route table

To clear all RIPng routes from the RIPng route table and the IPv6 main route table and reset the routes, enter the following command at the Privileged EXEC level or any of the Config levels of the CLI.

```
Brocade# clear ipv6 rip routes
```

Syntax: clear ipv6 rip routes

Clearing RIPng for a VRF instance

To clear all the RIPng routes for a specific VRF, enter the following command:

```
Brocade(config)# clear ipv6 rip vrf red route
```

Syntax: clear ipv6 rip vrf *vrf-name* route

vrf-name is the specified VRF name for the RIPng. If the *vrf-name* is not specified, the command clears all the IPv6 RIP routes in default-vrf.

Displaying RIPng information

You can display the following RIPng information:

- RIPng configuration.
- RIPng routing table.

Displaying RIPng configuration

To display RIPng configuration information, enter the following command at any CLI level.

Displaying RIPng information

```
Brocade# show ipv6 rip
IPv6 rip enabled, port 521
  Administrative distance is 120
  Updates every 30 seconds, expire after 180
  Holddown lasts 180 seconds, garbage collect after 120
  Split horizon is on; poison reverse is off
  Default routes are not generated
  Periodic updates 0, trigger updates 0
  Distribute List, Inbound : Not set
  Distribute List, Outbound : Not set
  Redistribute: CONNECTED
```

Syntax: show ipv6 rip

This display shows the following information.

TABLE 164 RIPng configuration fields

This field...	Displays...
IPv6 RIP status or port	The status of RIPng on the device. Possible status is “enabled” or “disabled.” The UDP port number over which RIPng is enabled.
Administrative distance	The setting of the administrative distance for RIPng.
Updates or expiration	The settings of the RIPng update and timeout timers.
Holddown or garbage collection	The settings of the RIPng hold-down and garbage-collection timers.
Split horizon or poison reverse	The status of the RIPng split horizon and poison reverse features. Possible status is “on” or “off.”
Default routes	The status of RIPng default routes.
Periodic updates or trigger updates	The number of periodic updates and triggered updates sent by the RIPng Brocade device.
Distribution lists	The inbound and outbound distribution lists applied to RIPng.
Redistribution	The types of IPv6 routes redistributed into RIPng. The types can include the following: <ul style="list-style-type: none">• STATIC – IPv6 static routes are redistributed into RIPng.• CONNECTED – Directly connected IPv6 networks are redistributed into RIPng.• BGP – BGP4+ routes are redistributed into RIPng.• IS-IS – IPv6 IS-IS routes are redistributed into RIPng.• OSPF – OSPFv3 routes are redistributed into RIPng.

Displaying RIPng configuration for a VRF instance

To display the RIPng configuration information for a VRF instance, enter the following command:

```
Brocade# show ipv6 rip vrf red
IPv6 rip enabled, port 521
  Administrative distance is 120
  Updates every 30 seconds, expire after 180
  Holddown lasts 180 seconds, garbage collect after 120
  Split horizon is on; poison reverse is off
  Default originate routes are not generated
  Periodic updates 1137, trigger updates 6
  Distribute List, Inbound : Not set
  Distribute List, Outbound : Not set
  Redistribute: BGP
```

Syntax: `show ipv6 rip vrf vrf-name`

Displaying RIPng routing table

To display the RIPng routing table, enter the following command at any CLI level.

```
Brocade# show ipv6 rip route
IPv6 RIP Routing Table - 4 entries:
  2001:db8::/64, from ::, null (0)
    CONNECTED, metric 1, tag 0, timers: none
  2001:db8:46a::/64, from ::, null (1)
    CONNECTED, metric 1, tag 0, timers: none
  2001:db8::1/128, from ::, null (2)
    CONNECTED, metric 1, tag 0, timers: none
  2001:db8:2::/64, from ::, null (3)
    CONNECTED, metric 1, tag 0, timers: none
```

Syntax: `show ipv6 rip route [ipv6-prefix/prefix-length | ipv6-address]`

The *ipv6-prefix/prefix-length* parameters restrict the display to the entries for the specified IPv6 prefix. You must specify the *ipv6-prefix* parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373. You must specify the *prefix-length* parameter as a decimal value. A slash mark (/) must follow the *ipv6-prefix* parameter and precede the *prefix-length* parameter.

The *ipv6-address* parameter restricts the display to the entries for the specified IPv6 address. You must specify this parameter in hexadecimal using 16-bit values between colons as documented in RFC 2373.

This display shows the following information.

TABLE 165 RIPng routing table fields

This field...	Displays...
RIPng Routing Table entries	The total number of entries in the RIPng routing table.
<i>ipv6-prefix/prefix-length</i>	The IPv6 prefix and prefix length.
<i>ipv6-address</i>	The IPv6 address.
Next-hop router	The next-hop router for this device. If :: appears, the route is originated locally.
Interface	The interface name. If "null" appears, the interface is originated locally.

TABLE 165 RIPng routing table fields

This field...	Displays...
Source of route	The source of the route information. The source can be one of the following: <ul style="list-style-type: none"> • RIP – routes learned by RIPng. • CONNECTED – IPv6 routes redistributed from directly connected networks. • STATIC – IPv6 static routes are redistributed into RIPng. • BGP – BGP4+ routes are redistributed into RIPng. • IS-IS – IPv6 IS-IS routes are redistributed into RIPng. • OSPF – OSPFv3 routes are redistributed into RIPng.
Metric <i>number</i>	The cost of the route. The <i>number</i> parameter indicates the number of hops to the destination.
Tag <i>number</i>	The tag value of the route.
Timers:	Indicates if the hold-down timer or the garbage-collection timer is set.

Displaying RIPng routing table for a VRF instance

To display the RIPng route information for a specified VRF, enter the following command at any CLI level.

```
Brocade# show ipv6 vrf red route
IPv6 RIP Routing Table - 4 entries:
2001:db8::/64, from ::, null (0)
    CONNECTED, metric 1, tag 0, timers: none
2001:db8:46a::/64, from ::, null (1)
    CONNECTED, metric 1, tag 0, timers: none
2001:db8::1/128, from ::, null (2)
    CONNECTED, metric 1, tag 0, timers: none
2001:db8:2::/64, from ::, null (3)
CONNECTED, metric 1, tag 0, timers: none
```

Syntax: `show ipv6 rip [vrf vrf-name] route [ipv6-prefix/prefix-length | ipv6-address]`

Policy-Based Routing (IPv6)

Table 166 displays the individual Brocade devices and the IPv6 Policy-Based Routing features they support.

TABLE 166 Supported Brocade IPv6 Policy-Based Routing features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
IPv6 Policy-Based Routing (PBR)	Yes	Yes	No	Yes	Yes	Yes	Yes
Policy-Based Routing (PBR) with Preserve VLAN option	Yes	Yes	No	No	No	No	No
Policy-based routing support for preserve VLAN	Yes	Yes	No	No	No	No	No

IPv6 Policy-Based Routing (IPv6 PBR) allows you to manually configure how IPv6 packets that match certain criteria can be forwarded instead of following the IPv6 Routing Table Manager (RTM) routes. ACLs and route maps are used to selectively modify and route IP packets in hardware. The ACLs classify the traffic. Route maps that match on the ACLs set routing attributes for the traffic.

An IPv6 PBR policy specifies the next hop for traffic that matches the policy. With IPv6 ACLs, you can route IPv6 packets based on all of the match criteria in the IPv6 ACL.

You can configure the Brocade device to perform the following types of PBR:

- Select the next hop gateway.
- Send the packet to the null interface (Null0).

When an IPv6 PBR policy has multiple next hops to a destination, PBR selects the first live next hop specified in the policy that is up. If none of the policy's next hops is available, the packets are forwarded as per the routing table.

Configuration considerations

The configuration considerations are as follows:

- IPv6 PBR cannot be applied globally. IPv6 PBR can only be applied at the interface level.
- IPv6 PBR only supports default VRF. Multi-VRF is not supported.
- IPv6 PBR currently does not support the changing IPv4/IPv6 MTU.

Configuration considerations

- IPv6 PBR policies are not supported on Layer 3 VPNs.
- IPv6 PBR is applied to routed traffic only by default, except when the flood VLAN option is enabled.
- IPv6 PBR can only be configured on physical ports, Link Aggregation Groups (LAG) ports, and Virtual Ethernet (VEs).
- If IPv6 PBR is applied on a VE, it works only when the VE is enabled. When the VE is disabled, IPv6 PBR will not work and normal routing or switching takes place for the traffic received on the VE.
- The following combinations of IPv6 PBR and IPv4 PBR and IPv6 ACL and IPv4 ACL are allowed:
 - IPv6 PBR and IPv4 PBR can be applied to the same interface at the same time.
 - IPv6 PBR and IPv4 ACL can be applied to the same interface at the same time.
 - IPv4 PBR and IPv6 ACL can be applied to the same interface at the same time.
- IPv6 ACL-based rate limiting is not supported on Brocade MLX Series and Brocade NetIron XMR devices.
- You cannot apply IPv6 PBR on a port if that port already has inbound IPv6 ACLs.
- IPv6 PBR only supports IPv6 as the next hop and IPv6 PBR to VLAN flooding.
- IPv6 PBR does not support IPv6 PBR to GRE and IPv6 PBR to MPLS.
- The number of route maps that can be defined is limited by the system memory. When a route map is used in an IPv6 PBR policy, the IPv6 PBR policy uses up to 64 instances of a route map, up to 5 ACLs in a matching policy of each route map instance.

The following two conditions can cause more than 64 route map instances to be used.

1. If one or more of the first 64 instances has a deny clause.
 2. If the access list used in the first 64 instances is not configured.
- ACLs with the **log** option configured should not be used for IPv6 PBR purposes.
 - IPv6 PBR ignores implicit **deny ip any any** ACL entries to ensure that traffic is compared to all the ACLs for route maps that use multiple ACLs. However, if an explicit **deny ip any any** entry is configured, traffic matching this clause will be routed normally using Layer 3 paths and will not be compared to any ACL clauses that follow this clause.
 - IPv6 PBR always selects the first next hop from the next hop list that is up. If an IPv6 PBR policy's next hop goes down, the policy uses another next hop if available. If no next hops are available, the device routes the traffic in the normal way. No IPv6 ECMP is supported.
 - Any changes to route map definitions will be effective immediately for the interfaces where the IPv6 PBR route map is applied, without rebinding. However, rebinding is required for an ACL definition change to take effect.
 - PBR policies are not supported on Layer-3 VPNs.
 - In a PBR route-map definition, if even one route-map instance contains a “set next-hop-flood-vlan” statement, all instances of that route-map will apply to both routed and switched traffic.
 - Flooding traffic to a POS interface is not allowed. It can only be flooded to Ethernet ports on the VLAN, including the default VLAN.
 - When an incoming port is POS then the SA of the outgoing flooded packets will be 0.

Considerations specific to Brocade NetIron CES and Brocade NetIron CER

- IPv6 PBR only supports routed traffic. Switched traffic is not supported.
- IPv6 PBR on transit MPLS uplinks is not supported. IPv6 PBR on an Egress MPLS interface is supported. For example, an IPv6 PBR policy is applied on an MPLS interface.
 - In a transit router, if a 6PE packet is received on an MPLS interface, after the MPLS Label is swapped/pushed, the underlying IPv6 packet will not be subjected to PBR and will be switched based on the MPLS Label.
 - In an egress PE router, if a 6PE packet is received on an MPLS interface, after the MPLS Labels are removed, the underlying IPv6 packet will be subjected to PBR and will be forwarded based on PBR next hop.
- IPv6 PBR to flood VLAN is not supported for switched traffic for the Brocade NetIron CES and Brocade NetIron CER.

Configuring an IPv6 PBR policy

To configure IPv6 PBR, first define the policies using IP ACLs and route maps, and then enable IPv6 on individual interfaces. The device programs the ACLs into the Layer 4 CAM on the interfaces and forwards traffic that matches the ACLs according to the instructions in the route maps.

To configure an IPv6 PBR policy:

- Configure IPv6 ACLs that specify all the conditions required to match the desired packets.
- Configure a route map that matches on the IPv6 ACLs and sets the route information.
- Apply the route map to a specific IPv6 interface to enable IPv6 PBR.

Configuring the route map

After configuring the ACLs, you can configure an IPv6 PBR route map that matches based on the ACLs and sets routing information in the IP traffic.

NOTE

The **match** and **set** statements described in this section are the only route map statements supported for IPv6 PBR. Other route map statements described in the documentation apply only to the protocols with which they are described.

NOTE

If none of the clauses of an IPv6 PBR route map definition contain both **match** and **set** statements together, PBR will not work and normal routing takes place.

To configure an IPv6 PBR route map, enter commands such as the following.

```
Brocade(config-ipv6-access-list v6acl)#route-map v6pbr permit 10
Brocade(config-routemap v6pbr)#match ipv6 address v6acl
Brocade(config-routemap v6pbr)#set ipv6 next-hop 2001:db8::1
```

The commands in this example configure an entry in a route map named “ipv6_pbr_map”. The **match** statement matches on IP information in ACL v6acl. The **set** statement changes the next hop IPv6 address for packets that match ACL v6acl to 2001:db8::1.

Syntax: `[no] route-map map-name permit | deny num`

The *map-name* variable is a string of characters that names the map. Map names can be up to 80 characters in length. You can define an unlimited number of route maps on the Brocade device, as long as system memory is available.

The **permit | deny** parameter specifies the action the Brocade device will take if a route matches a match statement:

- If you specify a **deny** route map instance, it is ignored and not programmed in Layer 4 CAM.
- If you specify **permit**, the Brocade device applies the match and set statements associated with this route map instance.

The *num* parameter specifies the instance of the route map you are defining. Routes are compared to the instances in ascending numerical order. For example, a route is compared to instance 1, then instance 2, and so on.

IPv6 PBR uses up to 64 route map instances for comparison and ignores the rest.

Syntax: `[no] match ipv6 address [ipv6_access_list_name]`

The *ipv6_access_list_name* parameter specifies a IPv6 ACL name. Up to five ACL names can be configured in one match statement.

To add IPv6 ACLs to the existing **match** command, enter the entire command line, including the old IPv6 ACL names. For example, if you want to add *v6_acl2*, to the previous example, you need to enter the complete command line, as follows:

```
Brocade(config-routemap v6pbr)# match ipv6 address v6_acl1 v6_acl2
```

Setting the next hop

Traffic that matches a match statement in the route map is forwarded as defined by **set** commands. Multiple **set** commands can be configured and when a match condition is met, the device works sequentially through the list of **set** commands until it finds the first next hop that is operational and uses it. If that next hop goes down, the next hop as defined in a **set** command is chosen and if all next hop interfaces in the list are down, the packet is routed as determined in the IP Route Table. If a next hop interface that was down comes back up, the next hop selection process begins again and restarts its selection process from the top of the list.

Options for setting the next hop are described in the following sections:

- [“Setting the next hop to an IPv6 address”](#) on page 762
- [“Setting the next hop to a Null0 interface”](#) on page 763
- [“Setting next hop VLAN flooding”](#) on page 763

Setting the next hop to an IPv6 address

You can set the next hop to an IPv6 address as shown in the following example.

```
Brocade(config)#route-map v6pbr permit 10
Brocade(config-routemap v6pbr)#match ipv6 address v6acl
Brocade(config-routemap v6pbr)#set ipv6 next-hop 2001:db8::1
```

Syntax: `[no] set ipv6 next-hop ipv6-address`

The *ipv6-address* variable specifies the IPv6 address to which the packets will be sent.

NOTE

Do not use the IPv6 link-local address, unique local address, or the IPv6 address of the router as the IPv6 next hop address.

Setting the next hop to a Null0 interface

Sending traffic to a Null0 interface drops the traffic. You can set the next hop to a Null0 interface as shown in the following example.

```
Brocade(config)#route-map v6pbr permit 10
Brocade(config-route-map v6pbr)#match ipv6 address v6acl
Brocade(config-route-map v6pbr)#set interface null0
```

Syntax: [no] set interface null0

Setting next hop VLAN flooding

Using the **set next-hop-flood-vlan** command, matched traffic can be flooded on all ports of the VLAN except the incoming physical port. Any IPv6 PBR policy that contains the **set next-hop-flood-vlan** command applies to both routed and switched traffic. If any instance in an IPv6 PBR route map contains the **set next-hop-flood-vlan** command, all instances of that route map will be applied to both routed and switched traffic.

The following example floods all traffic matched from ACL 101 on all ports of VLAN 10 except the incoming physical port.

```
Brocade(config)# access-list for_pbr_match_src permit ipv6 any any
Brocade(config)# route-map calea permit 10
Brocade(config-route-map calea)# match ipv6 address for_pbr_match_src
Brocade(config-route-map calea)# set next-hop-flood-vlan 10
Brocade(config-route-map calea)# exit
```

Syntax: [no] set next-hop-flood-vlan *vlan-id* [**outgoing-da** *mac-address*]

If the VLAN specified by the *vlan-id* variable is not configured, the IPv6 PBR route map set statement will fall through to the next configured set statement. If no valid next hop is available, the packet is forwarded as per the Layer 2 or Layer 3 forwarding decision. If the VLAN specified by the *vlan-id* variable has no valid outgoing ports (such as when all ports in the VLAN are down or when the VLAN is empty), matching packets will be dropped.

The **outgoing-da** option directs the device to send packets flooded to the ports on the VLAN to carry the destination MAC address specified in the *mac-address* variable.

If the destination MAC address is not set using the **outgoing-da** option, the destination address is set as described in [Table 167](#).

TABLE 167 Destination address on VLAN flooded packets

Incoming port	Outgoing port	Routed traffic	Switched traffic
Ethernet	Ethernet	Replaced Destination Address	Original Destination Address from Incoming Packet
POS	Ethernet	Replaced Destination Address	N/A

The Brocade NetIron CES and Brocade NetIron CER exhibit different behavior which is described in [Table 168](#).

The **no set next-hop-flood-vlan *vlan-id* outgoing-da *mac-address*** command deletes only the **outgoing-da** option from the set statement. It does not delete the set statement itself. To delete the set statement, specify the **no set next-hop-flood-vlan *vlan-id*** command.

Configuring an IPv6 PBR policy

In the case of traffic incoming on the MPLS uplink, IPv6 PBR to VLAN flooding is only supported for IPv6 traffic, and not for MPLS traffic.

There is no Layer 3 header processing. For example, in the case of an IPv6 packet header, the hop-limit will not be decremented.

Table 168 describes the difference in behavior between different Brocade products.

TABLE 168 VLAN flooding behavior differences

Scenario	Brocade Netron CER and Brocade Netron CES	Brocade MLX Series and Brocade Netron XMR
Support for Switched Traffic	Not Supported (due to hardware limitation)	Supported
If the outgoing-da option is not set.	CES/CER: Packet floods with original SA/DA	XMR/MLX: Switched traffic: Packet floods with original SA/DA Routed traffic (L3 CAM miss): Packet floods with original SA/DA Routed traffic (L3 CAM hit): Packet floods with original SA and DA as next-hop MAC
If the outgoing-da option is set.	DA: Configured outgoing-da SA: outgoing port MAC	DA: Configured outgoing-da SA: Original SA
In Set next-hop-flood-vlan, if the VLAN-ID is configured but no ports are added or all ports are down.	Go to next set statement.	DROP matching packets.
Ingress VLAN and PBR Flood VLAN are the same.	Packets are flooded back to source port.	Packets are not flooded back to source port.

Enabling IPv6 PBR

After you configure the ACLs and route map entries, you can enable IPv6 PBR on individual interfaces. To enable IPv6 PBR, you apply a route map you have configured for IPv6 PBR locally.

Enabling IPv6 PBR locally

To enable IPv6 PBR locally, enter the following commands:

```
Brocade(config)# interface ve 1
Brocade(config-vif-1)# ipv6 policy route-map test-route
```

The commands in this example change the CLI to the Interface level for virtual interface 1, and then applies the “test-route” route map to the interface. You can apply an IPv6 PBR route map to Ethernet ports or virtual interfaces.

Syntax: `[no] ipv6 policy route-map map-name`

Enter the name of the route map you want to use for the route map *map-name* parameter.

LAG formation

When a LAG is formed, all ports must have the same PBR configuration before deployment. During deployment, the configuration on the primary port is replicated to all ports. On undeployment, each port inherits the same PBR configuration.

Configuration examples

This section presents configuration examples for:

- “Basic example” on page 766
- “Combined example” on page 766
- “Selectively applying normal routing to packets” on page 766

Basic example

The following commands configure and apply an IPv6 PBR policy that routes HTTP traffic received on a virtual routing interface.

```
Brocade(config)# route-map v6pbr permit 10
Brocade(config-route-map v6pbr)#match ipv6 address v6acl
Brocade(config-route-map v6pbr)#set ipv6 next-hop 2001:db8::1
```

Combined example

If both IPv4 and IPv6 configurations exist in a route map, the IPv4 portions of the route map will be ignored when the route map is used for IPv6 PBR, and the IPv6 portions of the route map will be ignored when the route map is used for IPv4 PBR.

In the following example the IPv4 traffic that matches the route map will be sent to 10.1.1.1 and IPv6 traffic that matches the route map will be sent to 2001:db8::1.

```
Brocade(config)# interface ethernet 1/2
Brocade(config-route-map)# ip address 10.1.1.1/24
Brocade(config-route-map)# ip policy route-map ipv6_pbr_map
Brocade(config-route-map)# ipv6 address 2001:db8::1/64
Brocade(config-route-map)# ipv6 policy route-map ipv6_pbr_map
```

Selectively applying normal routing to packets

Certain situations demand selected traffic to undergo normal routing based on IPv6 RTM while other traffic is to be forwarded based on PBR. One such situation is provided in the following scenario. The example provides a recommended solution.

To communicate with a direct connected host, the IPv6 address has to be resolved. To resolve the IPv6 address, an ICMPv6 Neighbor Solicitation (NS) will be sent and an ICMPv6 Neighbor Advertisement (NA) is expected as a reply. If the match ACL rules matches the IPv6 address of ICMPv6 NA, as per the PBR route map, it will be redirected to the first reachable next hop and the IPv6 address is not resolved. This results in packets being dropped. To avoid this situation, use the **deny** ACL clause to selectively allow ICMP traffic and define it as a permit route map entry, as shown in the following example.

```
Brocade(config)#
Brocade(config)#ipv6 access-list v6acl
Brocade(config-ipv6-access-list v6acl)#deny icmp 2001:db8::/64 any
Brocade(config-ipv6-access-list v6acl)#permit ipv6 2001:db8::/64 any
Brocade(config-ipv6-access-list v6acl)#
Brocade(config-ipv6-access-list v6acl)#route-map v6pbr permit 10
Brocade(config-route-map v6pbr)#match ipv6 address v6acl
```

```

Brocade(config-routemap v6pbr)#set next-hop-flood-vlan 200 outgoing-da
0000.0022.3333
Brocade(config-routemap v6pbr)#
Brocade(config-routemap v6pbr)#interface ethernet 2/2
Brocade(config-if-e10000-2/2)#ipv6 address 2001:db8::1/64
Brocade(config-if-e10000-2/2)#ipv6 enable
Brocade(config-if-e10000-2/2)#ipv6 policy route-map v6pbr

```

To allow normal routing for certain traffic, a corresponding deny ACL filter can be added before any permit ACL filter.

Displaying IPv6 PBR information

The following sections describe the commands used to display the IPv6 ACL accounting information and the route map information used in the IPv6 PBR configuration.

Displaying IPv6 accounting information

IPv6 PBR accounting is supported through the use of IPv6 ACL accounting in Brocade NetIron XMR and Brocade MLX Series devices. ACL counters need to be enabled to view accounting data.

```
Brocade(config)#enable-acl-counter
```

```
Brocade# sh ipv6 access-list accounting brief policy-based-routing
```

```

IPv6 Policy Based Routing Accounting Summary: (ac = accumulated since
accounting started)

```

Int	In ACL	Total	In Hit	Out ACL	Total	Out Hit
2/6v6ACL1-udp			0 (1s)			
			0 (1m)			
			0 (5m)			
			0 (ac)			
			0 (1s)			
2/6v6ACL1-tcp			0 (1s)			
			0 (1m)			
			0 (5m)			
			0 (ac)			
			0 (1s)			
2/6ipv6-src-d			0 (1s)			
			0 (1m)			
			0 (5m)			
			0 (ac)			
			0 (1s)			
VE 40v6ACL1-udp		11659	(1s)			
		700150	(1m)			
		3500549	(5m)			
		160277093	(ac)			
		127319	(1s)			
VE 40v6ACL1-tcp		7645985	(1m)			
		38227679	(5m)			
		1750303054	(ac)			

Syntax: show ipv6 access-list accounting [brief | eth s/p | ve id] policy-based-routing

The **brief** option provides a brief display of the statistics. The **eth s/p** option provides Ethernet statistics for the specified port. The **ve id** option provides VE statistics for the specified ID.

Displaying IPv6 PBR route map information

Use the commands listed in the following sections to display the route map information used in the IPv6 PBR configuration.

Displaying IPv6 route map information

To view the route map information, use the **show route-map** command.

```
Brocade# show route-map ipv6_pbr_map
route-map ipv6_pbr_map permit 10
  match ipv6 address for_pbr_match_src
  set ipv6 next-hop 2001:db8::1
```

Syntax: **show route-map** *map-name*

The *map-name* variable is the name of the PBR route map you want to view.

To view the route map binding information, use the **show route-map binding** command.

```
Brocade# show route-map binding ipv6_pbr_map
IPv6 Bindings of ipv6_pbr_map :
  1/1
```

Syntax: **show route-map binding** [*map-name*]

The *map-name* variable is the name of the route map binding you want to view.

Displaying IPv6 ACL and route map information on the Brocade NetIron CES and Brocade NetIron CER

Displaying IPv6 ACL output

To view the IPv6 ACL output on the Brocade NetIron CES and Brocade NetIron CER use the **show ipv6 access-list** command.

```
Brocade# show ipv6 access-list ipv6acl
ipv6 access-list ipv6acl: 3 entries
  10: permit enable-accounting ipv6 2001:db8:3::/64 2001:db8:4::/64
  20: permit ipv6 2001:db8:3::/64 any
  30: permit ipv6 any 2001:db8:4::/64
```

Syntax: **show ipv6 access-list** *ACL list name*

The *ACL list name* variable is the name of the ACL you want to view.

Displaying IPv6 route map output

To view the route map output on the Brocade NetIron CES and Brocade NetIron CER use the **show route-map** command.

```
Brocade# show route-map pbr-1
route-map pbr-1 permit 5
match ipv6 address ipv6acl
  set ipv6 next-hop 2001:db8:5::2
  set ipv6 next-hop 2001:db8:5::3
  set ipv6 next-hop 2001:db8:4::2
```

Syntax: `show route-map [map-name]`

The *map-name* variable is the name of the route map you want to view.

Displaying IPv6 PBR selected next hop information

To view the PBR selected next hop information on the Brocade NetIron CES and Brocade NetIron CER use the **show pbr inte ve** command.

```
Brocade# show pbr int ve 20
Interface VE 20
No PBR routemap
IPv6 PBR Routemap pbr-1
PPCR 1:1: Routemap instance 5
Valid 1 ACL ipv6acl First table index 10
Metro Specific information in PPCR: 1:1

Instance No: 5

SET information
Next-Hop To NH value PumaNextStage SW NextStage id HW NextStage id Resolved
IPv6 address 2001:db8:5::2 IPv6 NEXT HOP 0x02000020 32 Y
IPv6 address 2001:db8:5::3 IPv6 NEXT HOP 0xFFFFFFFF -1 N
IPv6 address 2001:db8:4::2 IPv6 NEXT HOP 0x02000021 33 Y
```

The SET information table provides the hop status list. The ACL uses the first resolved next hop.

Syntax: `show pbr int ve id`

Policy based routing with the preserve VLAN option

When an IP packet matches the PBR policy with the **preserve-vlan** option, the Layer 2 and Layer 3 information is retained (for example, the VLAN information and the MAC address are retained). The hop limit is not decremented. A packet is sent to the configured next hop. IP packets not matching the PBR policy with **preserve-vlan** will be dropped. If none of the policy's direct routes or next hops are available, the packets are forwarded as per the routing table.

Configuring a physical interface to accept all VLAN packets for PBR

The **allow-all-vlan pbr** command configures a physical interface to accept all VLAN packets for the purpose of PBR. This command reduces configuration complexity since the physical interface does not have to be configured individually in multiple VLAN interfaces.

Syntax: `allow-all-vlan pbr`

NOTE

The **allow-all-vlan pbr** command cannot be applied to a VE.

Configuration considerations

- The command **allow-all-vlan pbr** cannot be configured when the physical port is configured with an IPv6 address, MPLS, VPLS, VLL, ICL, Layer 3 VPN; or when the port is part of other VLAN.
- The route map with **preserve-vlan** set policies cannot be configured globally.
- A route map used for PBR with a preserve VLAN policy must have the **preserve-vlan** keyword configured for each set policy.

Configuring policy based routing with the preserve VLAN option

The interface, on which PBR with **preserve-vlan** is configured, should be part of the VLANs through which packets are expected. A route map policy with set policies to preserve VLAN can be applied on a physical port or on a VE port.

Preserve VLAN option as part of a set policy

In a route map set policy configuration, the **preserve-vlan** keyword is used to preserve the packet.

Syntax: **set ipv6 next-hop IPv6-address preserve-vlan**

Syntax: **set next-hop-flood-vlan vlan-id preserve-vlan**

Configuration examples

This section presents the following configuration examples:

- [“Preserve VLAN IDs and forwarding to specific egress port”](#) on page 770
- [“Preserve VLAN IDs and forwarding to multiple ports within a VLAN”](#) on page 771
- [“Applying IPv6 PBR next hop VLAN flooding”](#) on page 771

Preserve VLAN IDs and forwarding to specific egress port

1. Configure the access list for IPv6.

```
Brocade(config)# ipv6 access-list v6-acl
Brocade(config-ipv6-access-list v6-acl)# permit ipv6 2001:db8::/64 any
Brocade(config-ipv6-access-list v6-acl)# exit
```

2. Configure the route map with a set policy to preserve VLAN for IPv6 traffic.

```
Brocade(config)# route-map map6 permit 1
Brocade(config-routemap map4ve)# match ipv6 address v6-acl
Brocade(config-routemap map4ve)# set ipv6 next-hop 2001:db8::1 preserve-vlan
Brocade(config-routemap map4ve)# exit
```

3. Apply route map to physical/VE interface.

```
Brocade(config)# interface e1/2
Brocade(config-if-e1000-1/2)# allow-all-vlan pbr
Brocade(config-if-e1000-1/2)# ipv6 policy route-map map6
Brocade(config-if-e1000-1/2)# exit
```

```
Brocade(config)# int ve 40
Brocade(config-vif-40)# ipv6 policy route-map map6
```

Preserve VLAN IDs and forwarding to multiple ports within a VLAN

1. Configure the route map with set policies to preserve VLAN for IPv4/v6 traffic.

```
Brocade(config)# route-map test permit 100
Brocade(config-routemap test)# match ipv6 address v6-acl
Brocade(config-routemap test)# set next-hop-flood-vlan 200 preserve-vlan
Brocade(config-routemap test)# exit
```

2. Apply the route map to physical or VE interface.

```
Brocade(config)# interface ethernet 3/1
Brocade(config-if-e1000-3/1)# allow-all-vlan pbr
Brocade(config-if-e1000-3/1)# ipv6 policy route-map test
Brocade(config-if-e1000-3/1)# exit
Brocade(config-)# int ve 10
Brocade(config-vif-10)# ipv6 policy route-map test
```

Applying IPv6 PBR next hop VLAN flooding

This example demonstrates how to configure matched traffic to be flooded on all ports of the VLAN except the incoming physical port.

ACL configuration

```
Brocade(config)#ipv6 access-list ipv6acl-3
Brocade(config-ipv6-access-list ipv6acl-3)#permit ipv6 2001:db8:3::/64
2001:db8:6::/64
Brocade(config-ipv6-access-list ipv6acl-3)#deny ipv6 any 2001:db8:6::/64
Brocade(config-ipv6-access-list ipv6acl-3)#exit
```

Route-map configuration

```
Brocade(config)#route-map pbr-2 permit 1
Brocade(config-routemap pbr-2)#match ipv6 address ipv6acl-3
Brocade(config-routemap pbr-2)#set next-hop-flood-vlan 30
Brocade(config-routemap pbr-2)#set next-hop-flood-vlan 40 outgoing-da
0000.0034.5678
Brocade(config-routemap pbr-2)#set next-hop-flood-vlan 20
Brocade(config-routemap pbr-2)#set ipv6 next-hop 2001:db8:5::2
```

Apply route-map

```
Brocade(config)#interface ethernet 1/3
Brocade(config-if-e1000-1/3)#ipv6 policy route-map pbr-2
Brocade(config)#interface ve 10
Brocade(config-vif-10)#ipv6 policy route-map pbr-2
```

Policy-based routing support for preserve VLAN

NOTE

Policy-based routing support for preserve VLAN is supported only on Brocade NetIron XMR and Brocade MLX Series routers. This feature is now supported on the BR-MLX-10GX24 module.

Previously, PBR transparent VLAN flooding (TVF) replaced the ingress traffic's VLAN ID with the egress TVF VLAN ID, while flooding the egress TVF VLAN. Policy-based routing support for preserve VLAN allows the ingress packet VLAN header (VLAN ID and priority) to be preserved, while simultaneously flooding the PBR TVF VLAN.

The PBR TVF VLAN egress ports can be in strict tagged VLAN mode or dual VLAN mode. When PBR TVF VLAN egress ports are in strict tagged VLAN mode, the ingress tagged packets flood as "tagged" with the original VLAN ID and priority preserved. The ingress untagged packets flood as "tagged" with the default VLAN ID. When the PBR TVF VLAN egress ports are in dual VLAN mode, the ingress tagged packets flood as "tagged" with the original VLAN ID and priority preserved. The ingress untagged packets flood as "untagged".

Configuration considerations

Consider the following when policy-based routing is supported for preserve VLAN:

- To preserve the ingress VLAN priority value, the ingress VLAN and the port QoS feature should not be configured at the same time.
- IPv4 and IPv6 ACL VLAN ID matches are supported for both ingress and egress ACLs.
- An egress ACL is supported to filter traffic.
- Policy-based routing support for the preserve VLAN option does not affect the feature implementation of policy-based routing support for the preserve VLAN.

VRRP and VRRP-E

Table 169 displays the individual Brocade devices and the VRRP and VRRP-E features they support.

TABLE 169 Supported Brocade VRRP and VRRP-E features

Features supported	Brocade Netron XMR Series	Brocade MLX Series	Brocade Netron CES 2000 Series BASE package	Brocade Netron CES 2000 Series ME_PREM package	Brocade Netron CES 2000 Series L3_PREM package	Brocade Netron CER 2000 Series Base package	Brocade Netron CER 2000 Series Advanced Services package
Standard VRRP	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP Extended (VRRP-E)	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP v2 Authentication	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP v3 for IPv4 and IPv6	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP-E v6	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP-E MD5 Authentication	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP-E and VRRP password display	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP alongside RIP	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP alongside OSPF	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP alongside BGP4	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP Track Port	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP Track Priority	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP Backup Preempt	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP Master Router Abdication and Reinstatement	Yes	Yes	Yes	Yes	Yes	Yes	Yes

TABLE 169 Supported Brocade VRRP and VRRP-E features (Continued)

Features supported	Brocade NetIron XMR Series	Brocade MLX Series	Brocade NetIron CES 2000 Series BASE package	Brocade NetIron CES 2000 Series ME_PREM package	Brocade NetIron CES 2000 Series L3_PREM package	Brocade NetIron CER 2000 Series Base package	Brocade NetIron CER 2000 Series Advanced Services package
VRRP-Extended Slow Start	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP-Extended Scale Timer	Yes	Yes	Yes	Yes	Yes	Yes	Yes
VRRP-E Extension for Server Virtualization	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Virtual MAC address per VRID	Yes	Yes	Yes	Yes	Yes	Yes	Yes

This chapter describes how to configure the following router redundancy protocols:

- Virtual Router Redundancy Protocol (VRRP) – The standard router redundancy protocol. There are two versions of the protocol. VRRP v2 supports the IPv4 environment and VRRP v3 supports the IPv4 and IPv6 environments.
- VRRP Extended (VRRP-E) – A proprietary version of VRRP that overcomes limitations in the standard protocol. This protocol works only with Brocade IP devices. The devices support VRRP-E version 2 and VRRP-E version 3. VRRP-E v2 supports the IPv4 environment and VRRP-E v3 supports the IPv6 environment.

NOTE

The maximum number of configured VRRP and VRRP-E instances on a Brocade NetIron XMR or Brocade MLX series device is 2000. However, only 255 instances of VRRP v3 are supported with a sub-second hello interval, and VRRP-E is supported with the scale timer.


The maximum number of configured VRRP and VRRP-E instances on Brocade NetIron CES and Brocade NetIron CER devices is 255.

Overview of VRRP

This section presents the standard VRRP options and the options that were added in its implementation of VRRP.

Standard VRRP


VRRP is an election protocol that provides redundancy to routers within a LAN. VRRP allows you to provide alternate router paths for a host without changing the IP address or MAC address by which the host knows its gateway. Consider the situation shown in [Figure 39](#).

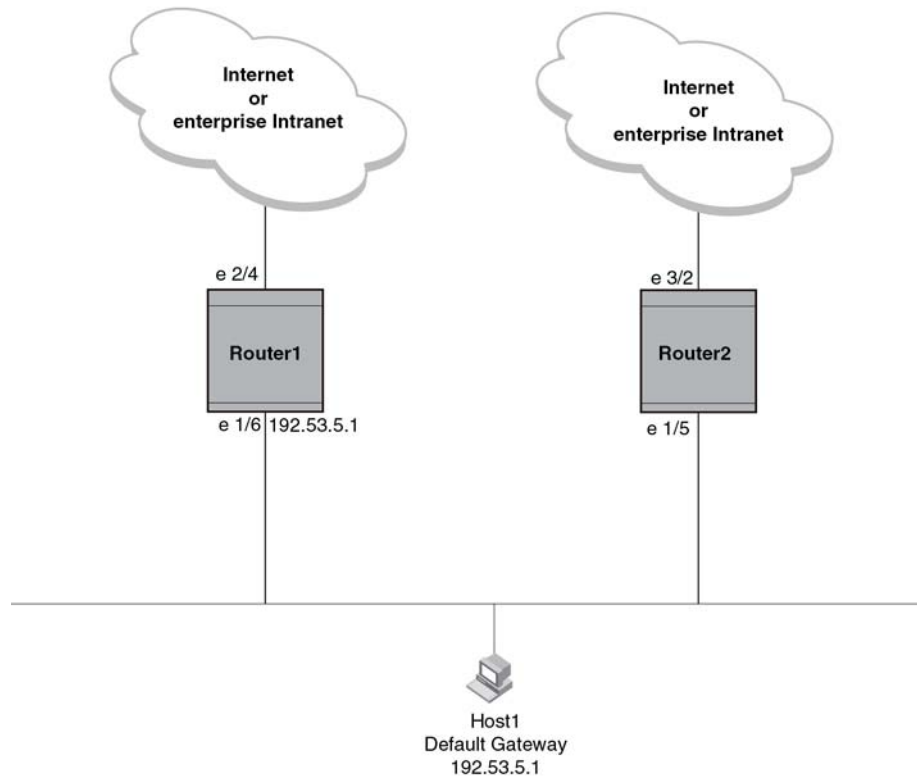FIGURE 39 Router1 is Host1's default gateway but is a single point of failure

As shown in this example, Host1 uses 192.53.5.1 on Router1 as the host's default gateway out of the subnet. If this interface goes down, Host1 is cut off from the rest of the network. Router1 is thus a single point of failure for Host1's access to other networks.

If Router1 fails, you could configure Host1 to use Router2. Configuring one host with a different default gateway might not require too much extra administration. However, consider a more realistic network with dozens or even hundreds of hosts per subnet; reconfiguring the default gateways for all the hosts is impractical. It is much simpler to configure a VRRP virtual router on Router1 and Router2 to provide a redundant path for the hosts. If VRRP is enabled as in [Figure 40](#), Router2 provides the default gateway out of the subnet if Router1 fails.

FIGURE 40 Router1 and Router2 configured as VRRP virtual routers for redundant network access for Host1

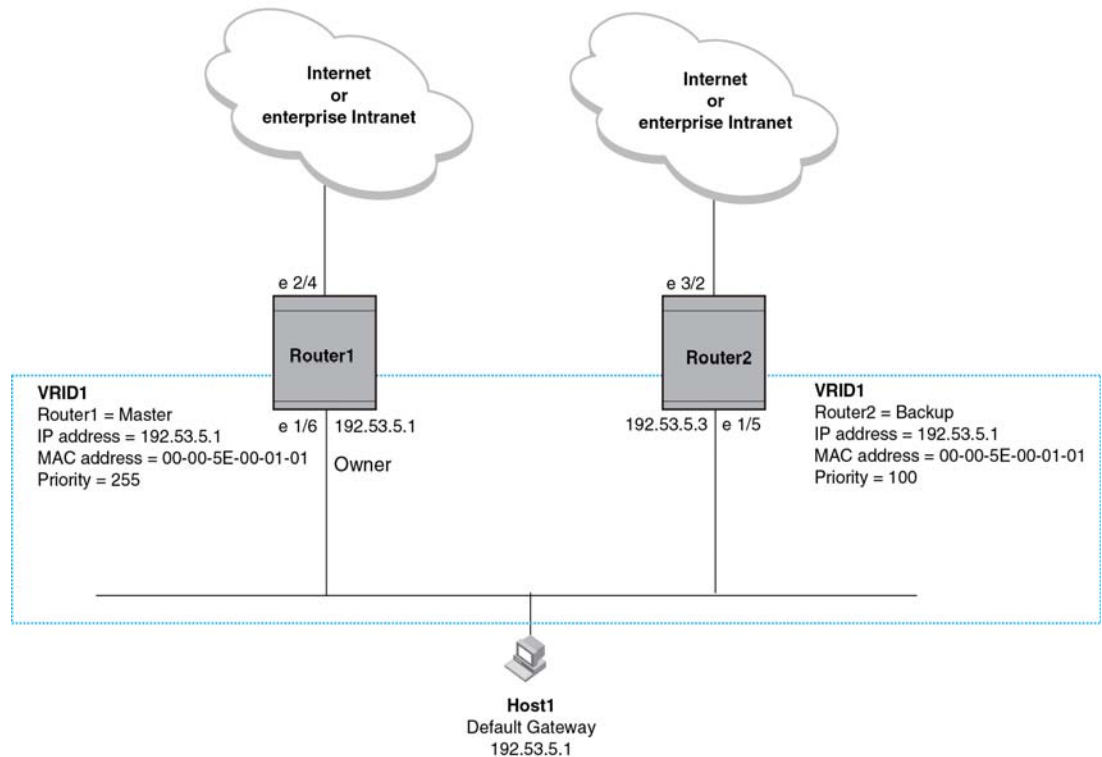

With VRRP, you configure virtual routers that span across the physical routers. A virtual router acts as a default router for hosts on a shared LAN. For example, Figure 40 has one virtual router configured (identified as VRID1). This virtual router ID (VRID) is associated with Router1 and Router2.

Because there is more than one IP address configured on Router1 and Router2, one of the physical addresses is assigned to the virtual router. For example, in Figure 40, IP address 192.53.5.1, the IP address assigned to Router1’s interface 1/6, is assigned as the IP address of virtual router VRID1. Router1 becomes the “Owner” of the virtual router VRID1 and is the router that responds to packets addressed to any of the IP addresses in virtual router VRID1.

One router in the virtual router is elected as the Master router. Other routers act as backups. The Master router is the one that forwards packets sent to the IP addresses in the virtual router and answers ARP requests for these IP addresses. The Backup router takes over for the Master router if the Master router fails.

NOTE

You can provide more redundancy by also configuring a second VRID with Router2 as the Owner and Router1 as the Backup. This type of configuration is sometimes called *Multigroup VRRP*.

Master router election

Virtual routers use the VRRP priority values associated with each VRRP router to determine which router becomes the Master. When you configure an Owner router, the VRRP priority is automatically set to 255, the highest VRRP priority. The router in the virtual router with the highest priority becomes the Master. Other routers become the Backup routers and can be assigned priorities from 3 through 254. The default priority value is 100.

Virtual routers use VRID Hello messages to determine if a Master router is available. They send Hello messages to IP Multicast address 224.0.0.18 at a specified frequency. The Backup routers wait for a duration of time for a Hello message from the Master. This duration is called the dead interval. If a Backup router does not receive a Hello message by the time the dead interval expires, the Backup router assumes that the Master router is dead. The Backup router with the highest priority becomes the Master router. Once the Owner router becomes available again, it becomes the Master router and the current Master router returns to being a Backup router.

Pre-emption

If the pre-emption feature is enabled, a Backup router that is acting as the Master can be pre-empted by another Backup router that has a higher priority. This can occur if you add a new Backup while the Owner is still available and the new Backup router has a higher priority than the Backup router that is acting as the Master router.

Virtual router MAC address

When you configure a VRID, the software automatically uses the MAC address as the MAC address of the virtual router. The first five octets of the address are the standard MAC prefix for VRRP packets. The last octet is the VRID. For example, the MAC address for VRID is 000.5e00.0101.

When the virtual router becomes the Master router, it broadcasts a gratuitous ARP request containing the virtual router's MAC address for each IP address associated with the virtual router. In [Figure 40](#), Router1 sends a gratuitous ARP request with MAC address 00-00-00-00-01-01 and IP address 192.53.5.1. Hosts use the virtual router's MAC address in routed traffic they send to their default IP gateway (in this example, 192.53.5.1).

Enhancements to VRRP

Brocade has enhanced VRRP by adding the following options:

- [“Configuring unique virtual MAC addresses per VRID”](#) on page 777
- [“Track ports and track priority”](#) on page 780
- [“Suppression of RIP advertisements for backed-up interfaces”](#) on page 781
- [“Authentication”](#) on page 781
- [“VRRP alongside RIP, OSPF, and BGP4”](#) on page 781

Configuring unique virtual MAC addresses per VRID

In addition to system-configured standards-based virtual MAC addresses, you can manually configure a unique virtual MAC address for each IPv4 and IPv6 VRRP instance per VRID. For Brocade NetIron XMR and Brocade MLX series platforms, you can configure a maximum of 2000 virtual MAC addresses.

If there is no manually configured virtual MAC address for a VRRP instance, the system automatically assigns one.

For Brocade NetIron CES and Brocade NetIron CER platforms, you can configure a maximum of 255 virtual MAC addresses.

This feature is subject to the following limitations:

- This feature does not support configurable VRRP virtual MAC addresses over MCT.
- This feature has no impact on short-path forwarding for VRRP-E.

NOTE

System-assigned virtual MAC addresses and manually configured virtual MAC addresses can exist at the same time on the device under the same VRID, however the configured value takes precedence. When the configured value is deleted, the assigned value again applies.

To configure a unique VRRP or VRRP-E virtual MAC address for a VRID, complete the following steps.

1. To configure an IPv4 virtual MAC address for VRID 1 (for example), enter the following command at the configure VRID level of the CLI:

```
Brocade(config-if-e1000-1/110-vrid-1)virtual-mac aaaa.bbbb.cccc
```

Syntax: [no] **virtual-mac** *mac-address*

Use the **no** version of this command to remove the configured address.

2. To configure an IPv6 virtual MAC address for VRID 1 (for example), enter the following command at the configure VRID level of the CLI:

```
Brocade(config-if-e1000-1/110-ipv6-vrid-1)virtual-mac aaaa.bbbb.cccc
```

Syntax: [no] **virtual-mac** *ipv6 mac-address*

Use the **no** version of this command to remove the configured address.

3. To display IPv4 VRRP virtual MAC address configuration information about VRID 1 (for example), enter the following command:

```
Brocade#show ip vrrp vrid 1
```

```
Interface 1/1
-----
auth-type no authentication

VRID 1 (index 1)
  interface 1/1
  state master
  administrative-status enabled
  version v2
  mode owner
  virtual mac aaaa.bbbb.cccc (configured)
  priority 255
  current priority 255
  track-priority 2
  hello-interval 1 sec
  backup hello-interval 60 sec
  ip-address 10.20.1.100
```

4. To display IPv4 VRRP-E virtual MAC address configuration information about VRID 1 (for example), enter the following command:

```

Brocade#show ip vrrp-extended vrid 1

Interface 1/1
-----
auth-type md5-authentication

VRID 1 (index 1)
  interface 1/1
  state master
  administrative-status disabled
  mode non-owner(backup)
  virtual mac aaaa.bbbb.cccc (configured)
  priority 100
  current priority 100
  track-priority 5
  hello-interval 1 sec
  backup hello-interval 60 sec
  slow-start timer (configured) 30 sec
  advertise backup disabled
  dead-interval 0 ms
  preempt-mode true
  virtual ip address 10.20.1.100
  short-path-forwarding disabled

```

5. To display IPv6 VRRP virtual MAC address configuration information for VRID 1 (for example), enter the following command:

```

Brocade#show ipv6 vrrp vrid 1

Interface 1/1
-----
auth-type no authentication

VRID 1 (index 1)
  interface 1/1
  state master
  administrative-status enabled
  version v3
  mode non-owner(backup)
  virtual mac dddd.eeee.ffff (configured)
  priority 100
  current priority 100
  track-priority 1
  hello-interval 1000 ms
  backup hello-interval 60000 ms
  advertise backup disabled
  dead-interval 3600 ms
  preempt-mode true
  ipv6 address 10:20:1::100
  next hello sent in 400 ms

```

6. To display IPv6 VRRP-E virtual MAC address configuration information for VRID 1 (for example), enter the following command:

```

Brocade#show ipv6 vrrp-extended vrid 1

Interface 1/1
-----
auth-type md5-authentication

VRID 1 (index 1)

```

```

interface 1/1
state master
administrative-status enabled
mode non-owner(backup)
virtual mac dddd.eeee.ffff (configured)
priority 100
current priority 100
track-priority 5
hello-interval 1 sec
backup hello-interval 60 sec
advertise backup disabled
dead-interval 0 ms
preempt-mode true
virtual ipv6 address 10:20:1::100
    
```

You can also identify configured virtual MAC addresses by entering the **show running-config** command, as shown in the following example.

```

Brocade# show running-config interface ethernet 1/11
interface ethernet 1/11
enable
ip ospf area 0
ip address 1.1.1.15/24
    
```

Syntax: `show running-config interface slot/port`

Track ports and track priority

Brocade enhanced VRRP by giving a VRRP router the capability to monitor the state of the interfaces on the other end of the route path through the router. For example, in [Figure 40](#) on page 776, interface e1/6 on Router1 owns the IP address to which Host1 directs route traffic on its default gateway. The exit path for this traffic is through Router1's e2/4 interface.

Suppose interface e2/4 goes down. Even if interface e1/6 is still up, Host1 is cut off from other networks. In conventional VRRP, Router1 would continue to be the Master router despite the unavailability of the exit interface for the path the router is supporting. However, if you configure interface e1/6 to track the state of interface e2/4, if e2/4 goes down, interface e1/6 responds by changing Router1's VRRP priority to the value of the track priority. In the configuration shown in [Figure 40](#) on page 776, Router1's priority changes from 255 to 20. One of the parameters contained in the Hello messages the Master router sends to its Backup routers is the Master router's priority. If the track port feature results in a change in the Master router's priority, the Backup routers quickly become aware of the change and initiate a negotiation for Master router.

In [Figure 40](#) on page 776, the track priority results in Router1's VRRP priority becoming lower than Router2's VRRP priority. As a result, when Router2 learns that it now has a higher priority than Router1, Router2 initiates negotiation for Master router and becomes the new Master router, thus providing an open path for Host1's traffic. To take advantage of the track port feature, make sure the track priorities are always lower than the VRRP priorities. The default track priority for the router that owns the VRID IP addresses is 2. The default track priority for Backup routers is 1. If you change the track port priorities, make sure you assign a higher track priority to the Owner of the IP addresses than the track priority you assign on the Backup routers.

Suppression of RIP advertisements for backed-up interfaces

The Brocade implementation also enhances VRRP by allowing you to configure the protocol to suppress RIP advertisements for the backed-up paths from Backup routers. Normally, a VRRP Backup router includes route information for the interface it is backing up in RIP advertisements. As a result, other routers receive multiple paths for the interface and might sometimes unsuccessfully use the path to the Backup router rather than the path to the Master router. If you enable the Brocade implementation of VRRP to suppress the VRRP Backup routers from advertising the backed-up interface in RIP, other routers learn only the path to the Master router for the backed-up interface.

Authentication

For backward compatibility, VRRP can use simple passwords to authenticate VRRP packets. The VRRP authentication type is not a parameter specific to the VRID. Instead, VRRP uses the authentication type associated with the interfaces on which you define the VRID. For example, if you configure your router interfaces to use a simple password to authenticate traffic, VRRP uses the same simple password, and VRRP packets that do not contain the password are dropped. If your interfaces do not use authentication, neither does VRRP.

NOTE

The MD5 authentication type is not supported by VRRP.

NOTE

Authentication is not supported by VRRP v3.

Forcing a Master router to abdicate to a standby router

You can force a VRRP Master router to abdicate (give away control) of a virtual router to a Backup router by temporarily changing the Master router's priority to a value of the Backup router. When you change the priority of a VRRP Owner, the change takes effect only for the current power cycle. The change is not saved to the startup configuration file when you save the configuration and is not retained across a reload or reboot. Following a reload or reboot, the VRRP Owner again has priority 255.


VRRP alongside RIP, OSPF, and BGP4

VRRP operation is independent of the RIP, OSPF, and BGP4 protocols. Their operation is unaffected when VRRP is enabled on a RIP, OSPF, or BGP4 interface.

Overview of VRRP-E

VRRP-E is proprietary version of VRRP that overcomes limitations in the standard protocol. [Figure 41](#) shows an example of a VRRP-E configuration.

FIGURE 41 Router1 and Router2 are configured to provide dual redundant network access for the host

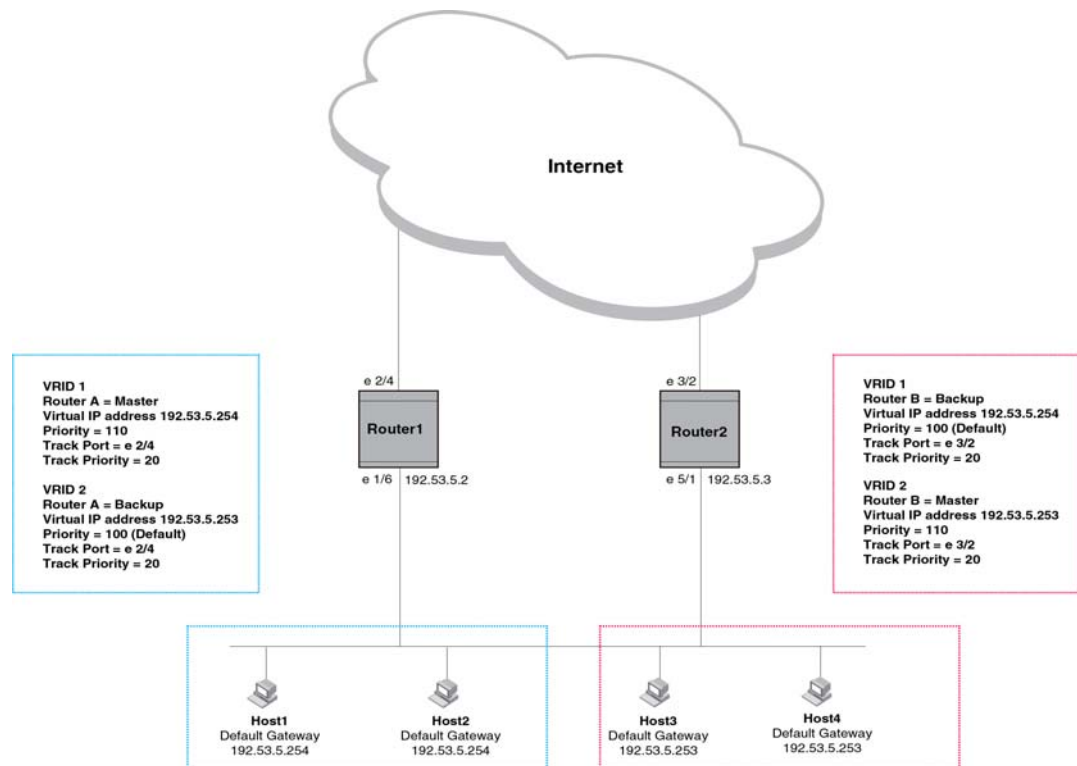

In this example, Router1 and Router2 use VRRP-E to load share as well as provide redundancy to the hosts. The load sharing is accomplished by creating two VRRP-E groups. Each group has its own virtual IP addresses. Half of the clients point to VRID 1's virtual IP address as their default gateway and the other half point to VRID 2's virtual IP address as their default gateway. This will enable some of the outbound Internet traffic to go through Router1 and the rest to go through Router2.

Router1 is the master for VRID 1 (backup priority = 110) and Router2 is the backup for VRID 1 (backup priority = 100). Router1 and Router2 both track the uplinks to the Internet. If an uplink failure occurs on Router1, its backup priority is decremented by 20 (track priority = 20), so that all traffic destined to the Internet is sent through Router2 instead.

Similarly, Router2 is the master for VRID 2 (backup priority = 110) and Router1 is the backup for VRID 2 (backup priority = 100). Router1 and Router2 are both tracking the uplinks to the Internet. If an uplink failure occurs on Router2, its backup priority is decremented by 20 (track priority = 20), so that all traffic destined to the internet is sent through Router1 instead.

The Brocade device configured for VRRP-E can interoperate only with other Brocade devices.

ARP behavior with VRRP-E

In the VRRP-E implementation, the source MAC address of the gratuitous ARP sent by the VRRP-E master router will be the VRRP-E virtual MAC address. When the router (either master or backup router) sends an ARP request or reply packet, the sender's MAC address will be the MAC address of the interface on the router. When an ARP request packet for the virtual router IP address is received by the backup router, it will be forwarded to the master router to resolve the ARP. Only master router will answer the ARP request for the virtual router IP address.

Comparison of VRRP and VRRP-E

VRRP-E is similar to VRRP, but differs in the following respects:

- **Owners and Backups:**
 - VRRP has an Owner and one or more Backups for each virtual router. The Owner is the router that has the IP address used for the virtual router. All the other routers supporting the virtual router are Backups.
 - VRRP-E does not use Owners. All routers are Backups for a given virtual router. The router with the highest priority becomes the Master. If there is a tie for highest priority, the router with the highest IP address becomes the Master. The elected Master owns the virtual IP address and answers ping and ARP requests and so on.
- **Master and Backups:**
 - **VRRP** – The “Owner” of the IP address of the VRID is the default Master and has the highest priority (255). The precedence of the Backups is determined by their priorities. The default Master is always the Owner of the IP address of the VRID.
 - **VRRP-E** – The Master and Backups are selected based on their priority. You can configure any of the Brocade devices to be the Master by giving it the highest priority. There is no Owner.
- **Virtual Router’s IP address:**
 - VRRP requires that the virtual router has an IP address that is configured on the Owner router.
 - VRRP-E requires only that the virtual router’s IP address be in the same subnet as an interface configured on the VRID’s interface. In fact, VRRP-E does not allow you to specify an IP address configured on the interface as the VRID IP address.
- **VRID’s MAC Address:**
 - VRRP uses the interfaces’s actual MAC address as the source MAC address. The virtual MAC address for IPv4 VRRP is 00-00-00-00-01-*<vrid>* and for IPv6 VRRP is 00-00-00-00-02-*<vrid>*.The *<vrid>* is the ID of the virtual router. The Master owns the Virtual MAC address.
 - VRRP-E uses the interface’s actual MAC address as the source MAC address. The virtual MAC address for IPv4 VRRP-E and IPv6 VRRP-E is 02-E0-52-*<hash-value>*-*<vrid>*, where *<hash-value>* is a two-octet hashed value for the IP address and *<vrid>* is the virtual router ID.

NOTE

You cannot reuse the same VRID across IPv4 VRRP-E and IPv6 VRRP-E, if they are in the same broadcast domain.

- **Hello packets:**
 - VRRP sends Hello messages to IP Multicast address 224.0.0.18.
 - VRRP-E uses UDP to send Hello messages in IP multicast messages. The Hello packets use the interface's actual MAC address and IP address as the source addresses. The destination MAC address is 00-00-00-00-00-02, and the destination IP address is 224.0.0.2 (the well-known IP multicast address for "all routers"). Both the source and destination UDP port number is 8888. VRRP messages are encapsulated in the data portion of the packet.
- **Track ports and track priority:**
 - VRRP changes the priority of the VRID to the track priority, which typically is lower than the VRID priority and lower than the VRID's priorities configured on the Backups. For example, if the VRRP interface's priority is 100 and a tracked interface with track priority 20 goes down, the software changes the VRRP interface's priority to 20.
 - VRRP-E reduces the priority of a VRRP-E interface by the amount of a tracked interface's priority if the tracked interface's link goes down. For example, if the VRRP-E interface's priority is 200 and a tracked interface with track priority 20 goes down, the software changes the VRRP-E interface's priority to 180. If another tracked interface goes down, the software reduces the VRID's priority again, by the amount of the tracked interface's track priority.

The most important difference is that all VRRP-E routers are Backups. There is no Owner router. VRRP-E overcomes the limitations in standard VRRP by removing the Owner.

VRRP and VRRP-E parameters

Table 170 lists the VRRP and VRRP-E parameters. Most of the parameters and default values are the same for both protocols. Any exceptions are noted in the table.

TABLE 170 VRRP and VRRP-E parameters

Parameter	Description	Default	Refer page...
Protocol	Virtual Router Redundancy Protocol (VRRP) or VRRP-Extended, Brocade's enhanced implementation of VRRP	Disabled NOTE: Only one of the protocols can be enabled at a time.	page 787 page 790
VRRP or VRRP-E router	The Brocade device's active participation as a VRRP or VRRP-E router. Enabling the protocol does not activate the Brocade device for VRRP or VRRP-E. You must activate the Brocade device as a VRRP or VRRP-E router after you configure the VRRP or VRRP-E parameters.	Inactive	page 787 page 790
Virtual Router ID (VRID)	The ID of the virtual router you are creating by configuring multiple routers to back up an IP interface. You must configure the same VRID on each router that you want to use to back up the address. No default.	None	page 787 page 790

TABLE 170 VRRP and VRRP-E parameters (Continued)

Parameter	Description	Default	Refer page...
Virtual Router IP address	<p>This is the address you are backing up.</p> <p>No default.</p> <ul style="list-style-type: none"> VRRP – The virtual router IP address must be a real IP address configured on the VRID interface on one of the VRRP routers. This router is the IP address Owner and is the default Master. VRRP-E – The virtual router IP address must be in the same subnet as a real IP address configured on the VRRP-E interface, but cannot be the same as a real IP address configured on the interface. 	None	page 787 page 790
VRID MAC address	<p>The source MAC address in VRRP or VRRP-E packets sent from the VRID interface, and the destination for packets sent to the VRID.</p> <ul style="list-style-type: none"> VRRP – A virtual MAC address defined as 00-00-00-00-01-<i><vrid></i> for IPv4 VRRP and 00-00-00-00-02-<i><vrid></i> for IPv6 VRRP. The Master owns the Virtual MAC address. VRRP-E – A virtual MAC address defined as 02-E0-52-<i><hash-value></i>-<i><vrid></i> for IPv4 VRRP-E and IPv6 VRRP-E, where <i><hash-value></i> is a two-octet hashed value for the IP address and <i><vrid></i> is the ID of the virtual router. 	Not configurable	page 777
Authentication type	<p>The type of authentication the VRRP or VRRP-E routers use to validate VRRP or VRRP-E packets. The authentication type must match the authentication type the VRID's port uses with other routing protocols such as OSPF:</p> <ul style="list-style-type: none"> No authentication – The interfaces do not use authentication. This is the VRRP default. Simple – The interface uses a simple text-string as a password in packets sent on the interface. If the interface uses simple password authentication, the VRID configured on the interface must use the same authentication type and the same password. MD5 – This method of authentication ensures the packet is authentic and cannot be modified in transit. <p>NOTE: MD5 is not supported by VRRP. Authentication is not supported by VRRP v3.</p>	No authentication	page 781 page 793
Router type	<p>Whether the router is an Owner or a Backup:</p> <ul style="list-style-type: none"> Owner (VRRP only) – The router on which the real IP address used by the VRID is configured. Backup – Routers that can provide routing services for the VRID but do not have a real IP address matching the VRID. 	<p>VRRP – The Owner is always the router that has the real IP address used by the VRID. All other routers for the VRID are Backups.</p> <p>VRRP-E – All routers for the VRID are Backups.</p>	page 787 page 790

TABLE 170 VRRP and VRRP-E parameters (Continued)

Parameter	Description	Default	Refer page...
Backup priority	<p>A numeric value that determines a Backup's preferability for becoming the Master for the VRID. During negotiation, the router with the highest priority becomes the Master:</p> <ul style="list-style-type: none"> • VRRP – The Owner has the highest priority (255); other routers can have a priority from 8 through 255. • VRRP-E – All routers are Backups and have the same priority by default. <p>If two or more Backups are tied with the highest priority, the Backup interface with the highest IP address becomes the Master for the VRID.</p>	<p>VRRP – 255 for the Owner; 100 for each Backup</p> <p>VRRP-E – 100 for all Backups</p>	<p>page 787</p> <p>page 790</p>
Suppression of RIP advertisements	<p>A router that is running RIP normally advertises routes to a backed up VRID even when the router is not currently the active router for the VRID. Suppression of these advertisements helps ensure that other routers do not receive invalid route paths for the VRID.</p>	Disabled	page 794
Hello interval	<p>The number of seconds or milliseconds between Hello messages from the Master to the Backups for a given VRID. The interval can be from 1 through 84 seconds for VRRP v2 and VRRP-E v2. The interval can be from 100 milliseconds through 84000 milliseconds for VRRP v3 and VRRP-E v3.</p>	<p>One second (VRRP v2 and VRRP-E v2)</p> <p>1000 milliseconds (VRRP v3 and VRRP-E v3)</p>	page 795
Dead interval	<p>The number of seconds or milliseconds a Backup waits for a Hello message from the Master for the VRID before determining that the Master is no longer active.</p> <p>If the Master does not send a Hello message before the dead interval expires, the Backups negotiate (compare priorities) to select a new Master for the VRID.</p>	<p>Internally derived from Hello Interval. It is approximately 3.5 times of the Hello Interval.</p>	page 795
Backup Hello interval	<p>The number of seconds between Hello messages from a Backup to the Master.</p> <p>The message interval can be from 60 through 3600 seconds.</p> <p>You must enable the Backup to send the messages. The messages are disabled by default on Backups. The current Master (whether the VRRP Owner or a Backup) sends Hello messages by default.</p>	<p>Disabled</p> <p>60 seconds when enabled</p>	page 796
Track port	<p>Another Brocade port or virtual interface whose link status is tracked by the VRID's interface.</p> <p>If the link for a tracked interface goes down, the VRRP or VRRP-E priority of the VRID interface is changed, causing the devices to renegotiate for Master.</p>	None	<p>page 780</p> <p>page 796</p>
Track priority	<p>A VRRP or VRRP-E priority value assigned to the tracked ports. If a tracked port's link goes down, the VRID port's VRRP or VRRP-E priority changes:</p> <ul style="list-style-type: none"> • VRRP – The priority changes to the value of the tracked port's priority. • VRRP-E – The VRID port's priority is reduced by the amount of the tracked port's priority. 	<p>VRRP – 2</p> <p>VRRP-E – 5</p>	<p>page 780</p> <p>page 797</p>

TABLE 170 VRRP and VRRP-E parameters (Continued)

Parameter	Description	Default	Refer page...
Backup preempt mode	Prevents a Backup with a higher VRRP priority from taking control of the VRID from another Backup that has a lower priority but has already assumed control of the VRID.	Enabled	page 797
Slow Start	Causes a specified amount of time to elapse between the time the original Master router is restored and when it takes over from the Backup router. For VRRP-E only.	Disabled	page 798
Scale Timer	Allows you to increase timing sensitivity across all configured or default VRRP-Extended timers. For VRRP-E only.	Disabled	page 799
Short-Path-Forwarding	Enables VRRP-E Extension for Server Virtualization. If enabled, the traffic that is destined to the clients will travel through the short-path forwarding path (dashed line) to reach the client (as shown in Figure 24.4 on page 24-30). Any packets coming from the local subnet of the virtual IP address will be routed to the VRRP-E master router. For example, with VRRP-E Extension for Server Virtualization enabled, the traceroute output will show one extra hop that display the Backup router's interface IP address	Disabled	page 816

Configuring parameters specific to VRRP

VRRP is configured at the interface level. This section describes how to implement a simple VRRP configuration using all the default values.

NOTE

When you use the command **router vrrp** to enter the VRRP configuration mode, the command prompt does not change and results in the general configuration command prompt as shown in the following:

```
Brocade(config)#
```

This differs from entering the VRRP extended mode where entering the **router vrrp-extended** command results in a command prompt such as the following:

```
Brocade(config-vrrpe-router)#
```

Configuring the VRRP version

You can specify the version for the VRRP instance. For example, use the following command to configure the instance of VRRP to use VRRP v3.

```
Brocade(config-if-e100-1/3-vrid-13)# version v3
```

Syntax: [no] version v2 / v3

- VRRP v2 supports IPv4 environment
- VRRP v3 supports IPv4 and IPv6 environment

The default configuration is VRRP v2.

NOTE

Mixed mode VRRP v2 and VRRP v3 is not supported in the same VRRP group.

Configuring the Owner for IPv4

To configure the VRRP Owner router for IPv4, enter the following commands on the router.

```
Brocade1(config)# router vrrp
Brocade1(config)# interface ethernet 1/6
Brocade1(config-if-e10000-1/6)# ip address 10.53.5.1/24
Brocade1(config-if-e10000-1/6)# ip vrrp vrid 1
Brocade1(config-if-e10000-1/6-vrid-1)# owner
Brocade1(config-if-e10000-1/6-vrid-1)# ip-address 10.53.5.1
Brocade1(config-if-e10000-1/6-vrid-1)# activate
```

Syntax: [no] router vrrp

Syntax: [no] ip vrrp vrid *num*

Syntax: [no] owner [track-priority *value*]

Syntax: [no] activate

The *num* parameter specifies the virtual router ID.

The **track-priority** *value* parameter changes the track-port priority for this interface and VRID from the default (2) to a value from 1 through maximum VRID supported by the device.

Syntax: [no] ip-address *ip-addr*

The *ip-addr* parameter specifies the IPv4 address of the Owner router.

The IP address you assign to the Owner must be an IP address configured on an interface that belongs to the virtual router.

Refer to [“Configuration rules and feature limitations for VRRP”](#) on page 790 for additional requirements.

Configuring the Owner for IPv6

To configure the VRRP Owner router for IPv6, enter the following commands on the router.

```
Brocade1(config)# ipv6 router vrrp
Brocade1(config)# interface ethernet 1/6
Brocade1(config-if-e10000-1/6)# ipv6 address 3013::1/64
Brocade1(config-if-e10000-1/6)# ipv6 vrrp vrid 1
Brocade1(config-if-e10000-1/6-ipv6-vrid-1)# owner
Brocade1(config-if-e10000-1/6-ipv6-vrid-1)# ipv6-address 3013::1
Brocade1(config-if-e10000-1/6-ipv6-vrid-1)# activate
```

Syntax: [no] ipv6 router vrrp

Syntax: [no] ipv6 vrrp vrid *num*

Syntax: [no] ipv6-address *ipv6-addr*

The *num* parameter specifies the virtual router ID.

The *ipv6-addr* parameter specifies the IPv6 address of the Owner router.

The IP address you assign to the Owner must be an IP address configured on an interface that belongs to the virtual router.

Refer to [“Configuration rules and feature limitations for VRRP”](#) on page 790 for additional requirements.

Configuring a Backup for IPv4

To configure the VRRP Backup router for IPv4, enter the following commands.

```
Brocade2(config)# router vrrp
Brocade2(config)# interface ethernet 1/5
Brocade2(config-if-e10000-1/5)# ip address 10.53.5.3/24
Brocade2(config-if-e10000-1/5)# ip vrrp vrid 1
Brocade2(config-if-e10000-1/5-vrid-1)# backup
Brocade2(config-if-1/5-vrid-1)# advertise backup
Brocade2(config-if-e10000-1/5-vrid-1)# ip-address 10.53.5.1
Brocade2(config-if-e10000-1/5-vrid-1)# activate
```

When you configure a Backup router, the router interface on which you are configuring the VRID must have a real IP address that is in the same subnet as the address associated with the VRID by the Owner. However, the address cannot be the same.

Syntax: `[no] router vrrp`

Syntax: `[no] ip vrrp vrid num`

Syntax: `[no] backup [priority value] [track-priority value]`

The *num* parameter specifies the virtual router ID.

The **priority value** parameter specifies the VRRP priority for this virtual router. You can specify a value from 3 through 254. The default is 100.

Enter a value from 3 through 254 for the **track-priority value** parameter if you want VRRP to monitor the state of the interface. The default is 100.

Syntax: `[no] ip-address ip-addr`

Refer to [“Configuration rules and feature limitations for VRRP”](#) on page 790 for additional requirements.

Configuring a Backup for IPv6

To configure the VRRP Backup router for IPv6, enter the following commands.

```
Brocade2(config)# ipv6 router vrrp
Brocade2(config)# interface ethernet 1/5
Brocade2(config-if-e10000-1/5)# ipv6 address 3013::3/64
Brocade2(config-if-e10000-1/5)# ipv6 vrrp vrid 1
Brocade2(config-if-e10000-1/5-vrid-1)# backup
Brocade2(config-if-1/5-vrid-1)# advertise backup
Brocade2(config-if-e10000-1/5-vrid-1)# ipv6-address 3013::1
Brocade2(config-if-e10000-1/5-vrid-1)# activate
```

When you configure a Backup router, the router interface on which you are configuring the VRID must have a real IP address that is in the same subnet as the address associated with the VRID by the Owner. However, the address cannot be the same.

Syntax: `[no] ipv6 router vrrp`

Syntax: `[no] ipv6-address ipv6-addr`

The *num* parameter specifies the virtual router ID.

The *ipv6-addr* parameter specifies the IPv6 address of the Backup router.

Refer to [“Configuration rules and feature limitations for VRRP”](#) on page 790 for additional requirements.

Configuration rules and feature limitations for VRRP

Consider the following rules when configuring VRRP:

- The interfaces of all routers in a virtual router must be in the same IP subnet:
- The IP addresses associated with the virtual router must already be configured on the router that will be the Owner router.
- The IP address for the virtual router must be on only one router.
- The Hello interval must be set to the same value on both the Owner and Backups for the virtual router.
- The Dead interval must be set to the same value on both the Owner and Backups for the virtual router.
- The track priority on a router must be lower than the router’s VRRP priority. Also, the track priority on the Owner must be higher than the track priority on the Backups.
- The tracking-port configuration for IPv6 VRRP v3 is not allowed if the router is configured as the VRRP Owner.
- The priority configuration for IPv6 VRRP v3 is not allowed for Owner router. The Owner router's priority is always 255.
- Hitless switchover is not supported.
- The ping command is not supported for VRRP virtual IPv4 and IPv6 addresses.
- Mixed mode VRRP v2 and VRRP v3 is not supported in the same VRRP group.
- With VRRP or VRRP-E the maximum numbers of VRIDs per logical interface is 12.

Configuring parameters specific to VRRP-E

The following sections describe the configuration of the parameters specific to IPv4 and IPv6 VRRP-E.

Configuring IPv4 VRRP-E

VRRP-E is configured at the interface level. To implement a simple IPv4 VRRP-E configuration using all the default values, enter the following commands.

```

Brocade(config)# router vrrp-extended
Brocade(config)# interface ethernet 1/5
Brocade(config-if-e10000-1/5)# ip address 10.53.5.3/24
Brocade(config-if-e10000-1/5)# ip vrrp-extended vrid 1
Brocade(config-if-e10000-1/5-vrid-1)# backup priority 50 track-priority 10
Brocade(config-if-e10000-1/5-vrid-1)# ip-address 10.53.5.254
Brocade(config-if-e10000-1/5-vrid-1)# activate

```

Syntax: [no] ip vrrp-extended vrid *vrid*

NOTE

If VRRP is not configured globally, then you will see the response “Invalid input...” when you try to create a VRRP instance.

Syntax: [no] backup [priority *value*] [track-priority *value*]

Syntax: [no] ip-address *ip-addr*

The *vrid* parameter specifies the virtual router ID.

The *ip-addr* parameter specifies the IPv4 address of the router.

Refer to the section [“Authentication type”](#) on page 793 for information on the **auth-type no-auth** | **simple-text-auth** *auth-data* parameters.

Also, refer to [“Configuration rules and feature limitations for VRRP-E”](#) on page 792 additional information on how to configure VRRP-E.

You must identify a VRRP-E router as a Backup before you can activate the virtual router on a Brocade device. However, after you configure the virtual router, you can use the **backup** command to change its priority or track priority.

You also can use the **enable** command to activate the configuration. The **enable** command does the same thing as the **activate** command.

Configuring IPv6 VRRP-E

To implement a IPv6 VRRP-E configuration using all the default values, enter the following commands.

```

Brocade(config)# ipv6 router vrrp-extended
Brocade(config-ipv6-VRRP-E-router)# interface ethernet 1/5
Brocade(config-if-e10000-1/5)# ipv6 address 3013::2/64
Brocade(config-if-e10000-1/5)# ipv6 vrrp-extended vrid 1
Brocade(config-if-e10000-1/5-vrid-1)# backup priority 50 track-priority 10
Brocade(config-if-e10000-1/5-vrid-1)# ipv6-address fe80::768e:f8ff:fe2a:0099
Brocade(config-if-e10000-1/5-vrid-1)# ipv6-address 3013::99
Brocade(config-if-e10000-1/5-vrid-1)# activate

```

Syntax: ipv6 router vrrp-extended

Syntax: ipv6 vrrp-extended vrid *vrid*

Syntax: [no] ipv6-address *ipv6-addr*

The *vrid* parameter specifies the virtual router ID.

NOTE

If VRRP is not configured globally, then you will see the response “Invalid input...” when you try to create a VRRP instance.

The `ipv6-addr` parameter specifies the IPv6 address of the router.

Configuration rules and feature limitations for VRRP-E

Consider the following rules when configuring VRRP-E:

- The interfaces of all routers in a virtual router must be in the same IP subnet.
- The IP address assigned to the virtual router cannot be configured on any of the Brocade devices.
- The Hello interval must be set to the same value on all the Brocade devices.
- The Dead interval must be set to the same value on all the Brocade devices.
- The track priority for a virtual router must be lower than the VRRP-E priority.
- The same VRID must not be used across IPv6 VRRP-E and IPv4 VRRP-E if they are in the same broadcast domain.
- Hitless switchover is not supported.

NOTE

If you disable VRRP-E, the Brocade device removes all the configuration information for the disabled protocol from the running configuration. Moreover, when you save the configuration to the startup configuration after disabling the protocol, all configuration information for the disabled protocol is removed from the startup configuration.

Configuring additional VRRP and VRRP-E parameters

You can modify the following VRRP and VRRP-E parameters on each individual virtual router. These parameters apply to both protocols:

- Authentication type (if the interfaces on which you configure the virtual router use authentication)
- Backup priority
- Suppression of RIP advertisements on Backup routes for the backed up interface
- Hello interval
- Dead interval
- Backup Hello messages and message timer (Backup advertisement)
- Track port
- Track priority
- Backup preempt mode
- Master Router Abdication and Reinstatement
- VRRP-Extended Slow Start
- VRRP-Extended Scale Timer
- Enable password display

Refer to [“VRRP and VRRP-E parameters”](#) on page 784 for a summary of the parameters and their defaults.

Authentication type

If the interfaces on which you configure the virtual router use authentication, the VRRP or VRRP-E packets on those interfaces also must use the same authentication. Brocade's implementation of VRRP and VRRP-E supports the following authentication types:

- **No authentication** – The interfaces do not use authentication. This is the default for VRRP and VRRP-E.
- **Simple** – The interface use a simple text-string as a password in packets sent on the interface. If the interfaces use simple password authentication, the virtual router configured on the interfaces must use the same authentication type and the same password.
- **MD5** - This method of authentication ensures the packet is authentic and cannot be modified in transit. MD5 authentication configuration for a VRRP-E router is unique on a per-interface basis. The MD5 authentication configuration on an interface takes effect for all the VRRP-E routers configured on a particular interface.

Simple Authentication

To configure the interface on Router1 for simple-password authentication using the password “ourpword”, enter the following commands:

Configuring router 1

```
Brocade(config)# interface ethernet 1/6
Brocade(config-if-e10000-1/6)# ip vrrp auth-type simple-text-auth ourpword
```

Configuring router 2

```
Brocade(config)# interface ethernet 1/5
Brocade(config-if-e10000-1/5)# ip vrrp auth-type simple-text-auth ourpword
```

Syntax: [no] ip vrrp auth-type no-auth | simple-text-auth *auth-data* | md5-auth *auth-data*

The **auth-type no-auth** parameter indicates that the virtual router and the interface it is configured on do not use authentication.

The **auth-type simple-text-auth *auth-data*** parameter indicates that the virtual router and the interface it is configured on use a simple text password for authentication. The *auth-data* parameter is the password. If you use this parameter, make sure all interfaces on all the routers supporting this virtual router are configured for simple password authentication and use the same password.

NOTE

Authentication is not supported by VRRP v3.

MD5 Authentication

To configure MD5 authentication on an interface, the CLI commands should be entered at the interface level.

To configure MD5 Authentication on VRRP-E IPv4, enter the following commands at the interface level:

```
Brocade(config)#ip vrrp-extended auth-type md5-auth ourpword
```

Configuring additional VRRP and VRRP-E parameters

To configure MD5 Authentication on VRRP-E IPv6, enter the following commands at the interface level:

```
Brocade(config)#ipv6 vrrp-extended auth-type md5-auth ourpword
```

Syntax: ip | ipv6 vrrp-extended auth-type [md5-auth *string*]

The *string* variable specifies a text string that is used as an authentication password key. The maximum length of the key string is limited to 64 characters.

SYSLOG and SNMP traps are generated in the event of a packet being dropped due to MD5 authentication failure.

When MD5 authentication is configured on an interface, the following syslog message is displayed:

```
Aug 10 18:17:39 VRRP6: Configuration VRRP_CONFIG_MD5_AUTHENTICATION request received
Aug 10 18:17:39 VRRP6: Port 2/6, VRID 2 - send advertisement
  Ver:3 Type:1 Vrid:2 Pri:240 #IP:1 AuthType:2 Adv:1 Chksum:0x0000
      HMAC-MD5 CODE:[000000000000000000400010]
  IpAddr: 2001:DB8::40:10
```

When MD5 authentication is valid on with it is VRRP-E peer, the following syslog message is displayed:

```
Aug 10 18:48:51 VRRP6: Port 2/6, VRID 2 - rcvd advertisement from 200:160::40:1
  Ver:3 Type:1 Vrid:2 Pri:255 #IP:1 AuthType:2 Adv:1 Chksum:0x0000
      HMAC-MD5 CODE:[000000000000000000400010]
  IpAddr: 200:160::40:10
```

NOTE

Using md5-authentication implies that the software need not run checksum verification on the receiving router, and can rely on the authentication code (message digest 5 algorithm) to verify the integrity of the VRRP-E message header.

Suppressing RIP advertisements on backup routers for the backup up interface

Normally, a VRRP or VRRP-E backup includes route information for the virtual IP address in RIP advertisements. As a result, other routers receive multiple paths for the backup router and might sometimes unsuccessfully use the path to the backup router rather than the path to the Master.

You can prevent the backup routers from advertising route information for the interface on which they are defined by enabling suppression of the advertisements.

To suppress RIP advertisements for interface on which a backup router is defined in Router2, enter the following commands.

```
Brocade(config)# router rip
Brocade(config-rip-router)# use-vrrp-path
```

Syntax: [no] use-vrrp-path

The syntax is the same for VRRP and VRRP-E.

Hello interval

The Master periodically sends Hello messages to the Backups. The Backups use the Hello messages as verification that the Master is still on-line. If the Backup routers stop receiving the Hello messages for the period of time specified by the Dead interval, the Backup routers determine that the Master router is dead. At this point, the Backup router with the highest priority becomes the new Master router.

The Dead interval is internally derived from Hello Interval, by default. It is approximately 3.5 times of the Hello Interval. Generally, if you change the Hello interval, you also should change the Dead interval on the Backup routers. To change the Hello interval on the Master to 10 seconds for VRRP v2 and VRRP-E v2, enter the following commands.

```
Brocade(config)# interface ethernet 1/6
Brocade(config-if-e10000-1/6)# ip vrrp vrid 1
Brocade(config-if-e10000-1/6-vrid-1)# hello-interval 10
```

Syntax: [no] hello-interval *value*

The Hello interval can be from 1 through 84 seconds. The default is 1 second.

To change the Hello interval on the Master to 200 milliseconds for VRRP v3, enter the following commands.

```
Brocade(config)# interface ethernet 1/6
Brocade(config-if-e10000-1/6)# ip vrrp vrid 1
Brocade(config-if-e10000-1/6-vrid-1)# hello-interval msec 200
```

Syntax: [no] hello-interval [msec] *value*

The Hello interval can be from 100 through 84000 milliseconds. The default is 1000 milliseconds.

The syntax is the same for VRRP and VRRP-E.

NOTE

VRRP-E does not support the Hello interval timer if it is set to milliseconds.

Dead interval

The Dead interval is the number of seconds a Backup waits for a Hello message from the Master before determining that the Master is dead. When Backups determine that the Master is dead, the Backup with the highest priority becomes the new Master. The Dead interval can be from 1 – 84 seconds. The default is internally derived by software. It is approximately 3.5 times of the Hello interval.

To change the Dead interval on a Backup to 30 seconds for VRRP v2 and VRRP-E v2, enter the following commands.

```
Brocade(config)# interface ethernet 1/5
Brocade(config-if-e10000-1/5)# ip vrrp vrid 1
Brocade(config-if-e10000-1/5-vrid-1)# dead-interval 30
```

Syntax: [no] dead-interval *value*

The Dead interval can be from 1 through 84 seconds. The default is 3.5 seconds.

To change the Dead interval on a Backup to 600 milliseconds for VRRP v3, enter the following commands.

```
Brocade(config)# interface ethernet 1/5
```

```
Brocade(config-if-e10000-1/5)# ip vrrp vrid 1
Brocade(config-if-e10000-1/5-vrid-1)# dead-interval msec 600
```

Syntax: [no] dead-interval [msec] *value*

The Dead interval can be from 100 through 84000 milliseconds. The default is 3500 milliseconds.

The syntax is the same for VRRP and VRRP-E.

NOTE

VRRP-E does not support the Dead interval timer if it is set to milliseconds.

Backup hello message state and interval

By default, Backup do not send Hello messages to advertise themselves to the Master. You can enable these messages if desired and also change the message interval.

To enable a Backup to send Hello messages to the Master, enter the following commands.

```
Brocade(config)# router vrrp
Brocade(config)# interface ethernet 1/6
Brocade(config-if-e10000-1/6)# ip vrrp vrid 1
Brocade(config-if-e10000-1/6-vrid-1)# advertise backup
```

Syntax: [no] advertise backup

When you enable a Backup to send Hello messages, the Backup sends a Hello messages to the Master every 60 seconds by default. You can change the interval to be up to 3600 seconds. To do so, enter the following commands.

```
Brocade(config)# router vrrp
Brocade(config)# interface ethernet 1/6
Brocade(config-if-e10000-1/6)# ip vrrp vrid 1
Brocade(config-if-e10000-1/6-vrid-1)# backup-hello-interval 180
```

Syntax: [no] backup-hello-interval *num*

The *num* parameter specifies the message interval and can be from 60 through 3600 seconds. The default is 60 seconds.

The syntax is the same for VRRP and VRRP-E.

Track port

You can configure the virtual router to track the link state of interfaces on the Brocade device. This capability is quite useful for tracking the state of the exit interface for the path for which the virtual router is providing redundancy. Refer to [“Track ports and track priority”](#) on page 780.

To configure 1/6 on Router1 to track interface 2/4, enter the following commands.

```
Brocade(config)# interface ethernet 1/6
Brocade(config-if-e10000-1/6)# ip vrrp vrid 1
Brocade(config-if-e10000-1/6-vrid-1)# track-port ethernet 2/4
```

Syntax: [no] track-port ethernet *slot/portnum* | **ve** *num* [**priority** *num*]

The syntax is the same for VRRP and VRRP-E.

Track priority

If you configure a virtual router to track the link state of interfaces and one of the tracked interface goes down, the software changes the VRRP or VRRP-E priority of the virtual router:

- For VRRP, the software changes the priority of the virtual router to a track priority that is lower than that of the virtual router priority and lower than the priorities configured on the Backups. For example, if the virtual router priority is 100 and a tracked interface with track priority 60 goes down, the software changes the virtual router priority to 60.
- For VRRP-E, the software reduces the virtual router priority by the amount of the priority of the tracked interface that went down. For example, if the VRRP-E interface's priority is 100 and a tracked interface with track priority 60 goes down, the software changes the VRRP-E interface's priority to 40. If another tracked interface goes down, the software reduces the virtual router's priority again, by the amount of the tracked interface's track priority.

The default track priority for a VRRP Owner is 2. The default track priority for Backups is 1.

You enter the track priority as a parameter with the **owner** or **backup** command. Refer to “[Track port](#)” on page 796.

Syntax: [no] owner [track-priority value]

Syntax: [no] backup [priority value] [track-priority value]

The syntax is the same for VRRP and VRRP-E.

Backup preempt

By default, a Backup that has a higher priority than another Backup that has become the Master can preempt the Master, and take over the role of Master. If you want to prevent this behavior, disable preemption.

Preemption applies only to Backups and takes effect only when the Master has failed and a Backup has assumed ownership of the virtual router. The feature prevents a Backup with a higher priority from taking over as Master from another Backup that has a lower priority but has already become the Master of the virtual router.

Preemption is especially useful for preventing flapping in situations where there are multiple Backups and a Backup with a lower priority than another Backup has assumed ownership, since the Backup with the higher priority was unavailable when ownership changed.

If you enable the non-preempt mode (thus disabling the preemption feature) on all the Backups, the Backup that becomes the Master following the disappearance of the Master continues to be the Master. The new Master is not preempted.

NOTE

In VRRP, regardless of the setting for the preempt parameter, the Owner always returns to be the Master when it comes back online.

To disable preemption on a Backup, enter the following commands.

```
Brocade(config)# interface ethernet 1/6
Brocade(config-if-e10000-1/6)# ip vrrp vrid 1
Brocade(config-if-e10000-1/6-vrid-1)# non-preempt-mode
```

Syntax: [no] non-preempt-mode

The syntax is the same for VRRP and VRRP-E.

Master router abdication and reinstatement

To change the Master's priority, enter the following commands.

```
Brocade(config)# interface ethernet 1/6
Brocade(config-if-e10000-1/6)# ip vrrp vrid 1
Brocade(config-if-e10000-1/6-vrid-1)# owner priority 99
```

Syntax: [no] owner priority | track-priority *num*

The *num* parameter specifies the new priority and can be a number from 1 through 254.

When you press Enter, the software changes the priority of the Master to the specified priority. If the new priority is lower than at least one Backup's priority for the same virtual router, the Backup takes over and becomes the new Master until the next software reload or system reset.

To verify the change, enter the following command from any level of the CLI.

```
Brocade(config-if-e10000-1/6-vrid-1)# show ip vrrp
Total number of VRRP routers defined: 1
Interface ethernet 1/6
auth-type no authentication
VRID 1
state backup
administrative-status enabled
mode owner
priority 99
current priority 99
hello-interval 1 sec
ip-address 10.53.5.1
backup routers 10.53.5.2
```

This example shows that even though this Brocade device is the Owner of the virtual router ("mode owner"), the Brocade device's priority for the virtual router is only 99 and the state is now "backup" instead of "active". In addition, the administrative status is "enabled".

To change the Master's priority back to the default Owner priority 255, enter "no" followed by the command you entered to change the priority. For example, to change the priority of a VRRP Owner back to 255 from 99, enter the following command.

```
Brocade(config-if-e10000-1/6-vrid-1)# no owner priority 99
```

You cannot set the priority to 255 using the **owner priority** command.

VRRP-extended slow start

In a VRRP-E configuration, if a Master router goes down, the Backup router with the highest priority takes over after expiration of the dead interval. When the original Master router comes back up again, it takes over from the Backup router (which became the Master router when the original Master router went down). By default, this transition from Backup router back to Master router takes place after expiration of the dead interval.

You can configure the VRRP-E slow start timer feature, which causes a specified amount of time to elapse between the time the original Master router is restored and when it takes over from the Backup router (This range is currently set to between 1-57600 seconds). This interval allows time for OSPF convergence when the Master is restored.

You can use the `use-track-port` and `restart` options to implement the slow start timer upon track port state changes. The `use-track-port` option implements a slow start timer for the first track port “up” state change, in addition to the VRRP-E initialization state. The `restart` option restarts the slow-start timer for subsequent track port “up” state changes.

To set the VRRP-E slow start timer to 30 seconds, enter the following command.

```
Brocade(config)# router vrrp-extended
Brocade(config-vrrpe-router)# slow-start 30
```

Syntax: `[no] slow-start seconds [use-track-port [restart]]`

When the VRRP-E slow start timer is enabled, if the Master router goes down, the Backup router takes over after expiration of the dead interval. If the original Master router subsequently comes back up again, the amount of time specified by the VRRP-E slow start timer elapses (in this example, 30 seconds) before the original Master router takes over from the Backup router (which became the Master router when the original Master router went down).

In the event that no other routers are currently Master, the router will immediately (after the dead-interval) become Master.

Without the `use-track-port` option, the slow start timer will be started only for the VRRP-E router initialization, not for the track port state change.

NOTE

If you change backup priority of VRRP-e Backup router to be higher than Master router, the slow start timer will not work. The original Master router will take over from the Backup router immediately.

VRRP-extended scale timer

This feature allows you to increase timing sensitivity across all configured or default VRRP-Extended timers. When this command is used, all configured or default VRRP-Extended timers are divided by the value set in the command. For example: a value of 10 divides the timers by a factor of 10. Configuring a value of 10 in a network with all VRRP-Extended values set to their defaults would cause VRRP-Extended instances to send packets every 100ms (instead of every 1 second) and the backup advertisement interval of 60 seconds would be modified to 6 seconds. All other timers would be divided likewise. This would allow VRRP-Extended instances to converge within a second in the event of a VRRP-Extended master failure (this is since the default dead timer would be 300 ms).

To scale all VRRP-Extended timers by 10, use the following command.

```
Brocade(config)# scale-timer vrrp-extended 10
```

Syntax: `[no] scale-timer vrrp-extended scale-factor`

The *scale-factor* variable is the number that all VRRP-Extended timers values are divided by. Values can be set from 1 through 10.

NOTE

Increased timing sensitivity as a result of using this command could cause protocol flaps during times of network congestion.

NOTE

This command is not supported in VRRP v2 and VRRP v3.

Enable and Disable password display

By default, the MD5 authentication password key is displayed as dots (...) for in the **show running-configuration** and **show startup-configuration** commands.

For example:

```
Brocade# show running-config
interface ethernet 1/1
...
ipv6 vrrp-extended auth-type md5-auth *****
...
```

Use the **enable password-display** command to display the key password in original form, either encrypted or decrypted.

For example:

```
Brocade# enable password-display
Brocade# show running-config
interface ethernet 1/1
...
ipv6 vrrp-extended auth-type md5-auth 2 $bkciYg==
...
```

Use the **disable password-display** command to display the key password as dots.

Displaying VRRP and VRRP-E information for IPv4

You can display the following information for IPv4 VRRP or VRRP-E:

- [“Displaying summary information”](#)
- [“Displaying detailed information”](#)
- [“Displaying statistics”](#)
- [“Displaying configuration information for VRRP and VRRP-E”](#)

Displaying summary information

To display summary information for IPv4 VRRP or VRRP-E, enter the following command at any level of the CLI.

```
Brocade(config)# show ip vrrp brief
Total number of VRRP routers defined: 2
Flags Codes - P:Preempt 2:V2 3:V3 S:Short-Path-Fwd
```

Inte- rface	VRID	Current Priority	Flags	State	Master IP Address	Backup IP Address	Virtual IP Address
1/1	10	255	P2-	Master	Local	Unknown	10.30.30.2
1/3	13	100	P2-	Master	Local	Unknown	10.13.13.3

Syntax: `show ip vrrp [brief | ethernet slot/portnum | statistics | ve num | vrid id]`

Syntax: `show ip vrrp-extended [brief | ethernet slot/portnum | statistics | ve num | vrid id]`

The **brief** parameter displays the summary information. If you do not use this parameter, detailed information is displayed instead. Refer to “[Displaying detailed information](#)” on page 802.

The **ethernet slot/portnum** parameter specifies an Ethernet port. If you use this parameter, the command displays IPv4 VRRP or VRRP-E information only for the specified port.

The **ve num** parameter specifies a virtual interface. If you use this parameter, the command displays IPv4 VRRP or VRRP-E information only for the specified virtual interface.

The **vrid id** parameter specifies a virtual router ID. If you use this parameter, the command displays IPv4 VRRP or VRRP-E information only for the specified virtual router.

The **statistics** parameter displays statistics. Refer to “[Displaying statistics](#)” on page 805.

This display shows the following information.

TABLE 171 CLI display of VRRP or VRRP-E summary information

This field...	Displays...
Total number of VRRP (or VRRP-Extended) routers defined	The total number of virtual routers configured on this Brocade device. NOTE: The total applies only to the protocol the Brocade device is running. For example, if the Brocade device is running VRRP-E, the total applies only to VRRP-E routers.
Interface	The interface on which VRRP or VRRP-E is configured. If VRRP or VRRP-E is configured on multiple interfaces, information for each interface is listed separately.
VRID	The ID of the virtual router configured on this interface. If multiple virtual routers are configured on the interface, information for each virtual router is listed in a separate row.
Current Priority	The current VRRP or VRRP-E priority of this Brocade device for the virtual router.
Flags	Whether the backup preempt mode is enabled. If the backup preempt mode is enabled, this field contains a “P”. If the mode is disabled, this field is blank. P:Preempt 2:V2 3:V3 2: implies VRRP Version2 3: implies VRRP Version3.
Short-Path-Fwd	Displays information about whether VRRP-E Extension for Server Virtualization is enabled or disabled.
State	This Brocade device’s VRRP or VRRP-E state for the virtual router. The state can be one of the following: <ul style="list-style-type: none"> Init – The virtual router is not enabled (activated). If the state remains Init after you activate the virtual router, make sure that the virtual router is also configured on the other routers and that the routers can communicate with each other. NOTE: If the state is Init and the mode is incomplete, make sure you have specified the IP address for the virtual router. <ul style="list-style-type: none"> Backup – This Brocade device is a Backup for the virtual router. Master – This Brocade device is the Master for the virtual router.
Master addr	The IP address of the router interface that is currently the Master for the virtual router.

TABLE 171 CLI display of VRRP or VRRP-E summary information (Continued)

This field...	Displays...
Backup addr	The IP addresses of the router interfaces that are currently Backups for the virtual router.
VIP	The virtual IP address that is being backed up by the virtual router.

Displaying detailed information

To display detailed information for IPv4 VRRP or VRRP-E, enter the following command at any level of the CLI.

```
Brocade(config)# show ip vrrp-extended
Total number of vrrp-extended routers defined: 1
Interface v10
-----
auth-type no authentication
  VRID 10 (index 1)
  interface v10
  state backup
  administrative-status enabled
  mode non-owner(backup)
  virtual mac 02e0.52a0.c00a
  priority 50
  current priority 50
  track-priority 5
  hello-interval 1 sec
  backup hello-interval 60 sec
  slow-start timer (configured) 30 sec
  advertise backup disabled
  dead-interval 3600 ms
  preempt-mode true
  virtual ip address 10.10.10.254
  next hello sent in 1000ms
  track-port 1/1 (up)
master router 10.10.10.4 expires in 3.1 sec
short-path-forwarding enabled
```

Syntax: show ip vrrp

Syntax: show ip vrrp-extended

This display shows the following information.

TABLE 172 CLI display of VRRP or VRRP-E detailed information

This field...	Displays...
Total number of VRRP (or VRRP-Extended) routers defined	The total number of virtual routers configured on this Brocade device. NOTE: The total applies only to the protocol the Brocade device is running. For example, if the Brocade device is running VRRP-E, the total applies only to VRRP-E routers.
Interface parameters	
Interface	The interface on which VRRP or VRRP-E is configured. If VRRP or VRRP-E is configured on multiple interfaces, information for each interface is listed separately.
auth-type	The authentication type enabled on the interface.

TABLE 172 CLI display of VRRP or VRRP-E detailed information (Continued)

This field...	Displays...
Virtual Router parameters	
VRID	The virtual router configured on this interface. If multiple virtual routers are configured on the interface, information for each virtual router is listed separately.
state	<p>This Brocade device's VRRP or VRRP-E state for the virtual router. The state can be one of the following:</p> <ul style="list-style-type: none"> • initialize – The virtual router is not enabled (activated). If the state remains “initialize” after you activate the virtual router, make sure that the virtual router is also configured on the other routers and that the routers can communicate with each other. <p>NOTE: If the state is “initialize” and the mode is incomplete, make sure you have specified the IP address for the virtual router.</p> <ul style="list-style-type: none"> • backup – This Brocade device is a Backup for the virtual router. • master – This Brocade device is the Master for the virtual router.
administrative-status	<p>The administrative status of the virtual router. The administrative status can be one of the following:</p> <ul style="list-style-type: none"> • disabled – The virtual router is configured on the interface but VRRP or VRRP-E has not been activated on the interface. • enabled – VRRP or VRRP-E has been activated on the interface.
mode	<p>Indicates whether the Brocade device is the Owner or a Backup for the virtual router.</p> <p>NOTE: If “incomplete” appears after the mode, configuration for this virtual router is incomplete. For example, you might not have configured the virtual IP address that is being backup up by the virtual router.</p> <p>This field applies only to VRRP. All Brocade devices configured for VRRP-E are Backups.</p>
virtual MAC	The virtual IP MAC address that this virtual router is backing up.
priority	<p>The device's preferability for becoming the Master for the virtual router. During negotiation, the router with the highest priority becomes the Master.</p> <p>If two or more devices are tied with the highest priority, the Backup interface with the highest IP address becomes the active router for the virtual router.</p>
current priority	<p>The current VRRP or VRRP-E priority of this Brocade device for the virtual router. The current priority can differ from the configured priority (refer the previous row) for the following reasons:</p> <ul style="list-style-type: none"> • The virtual router is still in the initialization stage and has not become a Master or Backup yet. In this case, the current priority is 0. • The virtual router is configured with track ports and the link on a tracked interface has gone down. Refer to “Track ports and track priority” on page 780.
track priority	VRRP-E priority value assigned to the tracked port.
hello-interval	The number of seconds between Hello messages from the Master to the Backups for a given virtual router.
backup hello-interval	The number of seconds between Hello messages from a Backup to the Master.

TABLE 172 CLI display of VRRP or VRRP-E detailed information (Continued)

This field...	Displays...
advertise backup	<p>The IP addresses of Backups that have advertised themselves to this Brocade device by sending Hello messages.</p> <p>NOTE: Hello messages from Backups are disabled by default. You must enable the Hello messages on the Backup for the Backup to advertise itself to the current Master. Refer to “Hello interval” on page 795.</p>
dead-interval	<p>The current value of the dead interval. This is the value actually in use by this interface for the virtual router.</p> <p>NOTE: This field does not apply to VRRP Owners.</p>
preempt-mode	<p>Whether the backup preempt mode is enabled.</p> <p>NOTE: This field does not apply to VRRP Owners.</p>
virtual ip address	<p>The virtual IP addresses that this virtual router is backing up.</p>
backup router <i>ip-addr</i> expires in <i>time</i>	<p>The IP addresses of Backups that have advertised themselves to this Master by sending Hello messages.</p> <p>The <i>time</i> value indicates how long before the Backup expires. A Backup expires if you disable the advertise backup option on the Backup or the Backup becomes unavailable. Otherwise, the Backup’s next Hello message arrives before the Backup expires. The Hello message resets the expiration timer.</p> <p>An expired Backup does not necessarily affect the Master. However, if you have not disabled the advertise backup option on the Backup, then the expiration may indicate a problem with the Backup.</p> <p>NOTE: This field applies only when Hello messages are enabled on the Backups (using the advertise backup option).</p>
next hello sent in <i>time</i>	<p>How long until the Backup sends its next Hello message.</p> <p>NOTE: This field applies only when this Brocade device is the Master and the Backup is configured to send Hello messages (the advertise backup option is enabled).</p>
master router <i>ip-addr</i> expires in <i>time</i>	<p>The IP address of the Master and the amount of time until the Master’s dead interval expires. If the Backup does not receive a Hello message from the Master by the time the interval expires, either the IP address listed for the Master will change to the IP address of the new Master, or this Brocade device itself will become the Master.</p> <p>NOTE: This field applies only when this Brocade device is a Backup.</p>
track port	<p>The interfaces that the virtual router’s interface is tracking. If the link for a tracked interface goes down, the VRRP or VRRP-E priority of the virtual router interface is changed, causing the devices to renegotiate for Master.</p> <p>NOTE: This field is displayed only if track interfaces are configured for this virtual router.</p>
short-path-forwarding	<p>Displays information about whether VRRP-E Extension for Server Virtualization is enabled or disabled.</p>

Displaying statistics

To display IPv4 VRRP or VRRP-E statistics, enter the following command.

```
Brocade# show ip vrrp-extended statistics
```

```
Global VRRP-Extended statistics
-----
- received vrrp-extended packets with checksum errors = 0
- received vrrp-extended packets with invalid version number = 0
- received vrrp-extended packets with unknown or inactive vrid = 1480

Interface v10
-----
VRID 1
- number of transitions to backup state = 1
- number of transitions to master state = 1
- total number of vrrp-extended packets received = 0
  . received backup advertisements = 0
  . received packets with zero priority = 0
  . received packets with invalid type = 0
  . received packets with invalid authentication type = 0
  . received packets with authentication type mismatch = 0
  . received packets with authentication failures = 0
  . received packets dropped by owner = 0
  . received packets with ip ttl errors = 0
  . received packets with ip address mismatch = 0
  . received packets with advertisement interval mismatch = 0
  . received packets with invalid length = 0
- total number of vrrp-extended packets sent = 2004
  . sent backup advertisements = 0
  . sent packets with zero priority = 0
- received arp packets dropped = 0
- received proxy arp packets dropped = 0
- received ip packets dropped = 0
```

Syntax: `show ip vrrp statistics`

Syntax: `show ip vrrp-extended statistics`

The **statistics** parameter displays the following information.

The *received vrrp packets with checksum errors* shows the number of packets that is contained in checksum errors.

The *received vrrp packets with invalid version number* shows the number of packets with invalid versions.

The *received vrrp packets with unknown or inactive vrid* shows the number of packets that contain virtual routers that are not configured on the device or its interface

Displaying VRRP and VRRP-E information for IPv6

You can display the following information for IPv6 VRRP or VRRP-E:

- [“Displaying summary information”](#) on page 806
- [“Displaying detailed information”](#) on page 807
- [“Displaying statistics”](#) on page 807
- [“Displaying configuration information for VRRP and VRRP-E”](#) on page 808

Displaying summary information

To display summary information for IPv6 VRRP or VRRP-E, enter the following command at any level of the CLI.

```
Brocade(config)# show ipv6 vrrp-extended brief
Total number of VRRP routers defined: 1
Flags Codes - P:Preempt 2:V2 3:V3 S:Short-Path-Fwd

Intf   VRID  CurrPrio  Flags  State  Master-IPv6  Backup-IPv6  Virtual-IPv6
      -Address  -Address  -Address
-----
1/3    23    100      P3-    Master  Local        3013::2      3013::99
```

Syntax: `show ipv6 vrrp [brief | ethernet slot/portnum | statistics | ve num | vrid id]`

Syntax: `show ipv6 vrrp-extended [brief | ethernet slot/portnum | statistics | ve num | vrid id]`

The **brief** parameter displays the summary information. If you do not use this parameter, detailed information is displayed instead. Refer to [“Displaying detailed information”](#) on page 802.

The **ethernet slot/portnum** parameter specifies an Ethernet port. If you use this parameter, the command displays IPv6 VRRP or VRRP-E information only for the specified port.

The **ve num** parameter specifies a virtual interface. If you use this parameter, the command displays IPv6 VRRP or VRRP-E information only for the specified virtual interface.

The **vrid id** parameter specifies a virtual router ID. If you use this parameter, the command displays IPv6 VRRP or VRRP-E information only for the specified virtual router.

The **statistics** parameter displays statistics. Refer to [“Displaying statistics”](#) on page 805.

Displaying detailed information

To display detailed information for IPv6 VRRP or VRRP-E, enter the following command at any level of the CLI

```
Brocade(config)# show ipv6 vrrp

Total number of VRRP routers defined: 1

Interface 1/3
-----
auth-type no authentication

VRID 13 (index 2)
 interface 1/3
  state master
  administrative-status enabled
  version v3
  mode non-owner(backup)
  virtual mac 0000.5e00.0217
  priority 100
  current priority 100
  track-priority 1
  hello-interval 1000 ms
  backup hello-interval 60000 ms
  advertise backup disabled
  dead-interval 3000 ms
  preempt-mode true
  ipv6-address 3013::1
  next hello sent in 700 ms
  short-path-forwarding disabled
```

Syntax: show ipv6 vrrp

Syntax: show ipv6 vrrp-extended

Displaying statistics

To display IPv6 VRRP or VRRP-E statistics, enter the following command.

```
Brocade# show ipv6 vrrp statistics

Global IPv6 VRRP statistics
-----
- received vrrp packets with checksum errors = 0
- received vrrp packets with invalid version number = 0
- received vrrp packets with unknown or inactive vrid = 0
Interface 1/3
-----
VRID 13
- number of transitions to backup state = 1
- number of transitions to master state = 1
- total number of vrrp packets received = 0
. received backup advertisements = 19
. received packets with zero priority = 0
. received packets with invalid type = 0
. received packets with invalid authentication type = 0
. received packets with authentication type mismatch = 0
. received packets with authentication failures = 0
```

Displaying configuration information for VRRP and VRRP-E

```
. received packets dropped by owner = 0
. received packets with ttl errors = 0
. received packets with ipv6 address mismatch = 0
. received packets with advertisement interval mismatch = 0
. received packets with invalid length = 0
- total number of vrrp packets sent = 1175
. sent backup advertisements = 0
. sent packets with zero priority = 0
- received neighbor solicitation packets dropped = 0
- received proxy neighbor solicitation packets dropped = 0
- received ipv6 packets dropped = 0
```

Syntax: show ipv6 vrrp statistics

Syntax: show ipv6 vrrp-extended statistics

Displaying configuration information for VRRP and VRRP-E

To display the current configuration information for IPv4 VRRP or VRRP-E and IPv6 VRRP or VRRP-E, enter the following command at any level of the CLI.

```
Brocade(config-if-e10000-1/3)# show run
...
router vrrp
...
interface ethernet 1/1
  port-name Port111
  enable
  ip address 10.30.30.2/28
  ip vrrp vrid 10
  owner
  ip-address 10.30.30.2
  activate
!
...
interface ethernet 1/3
  enable
  ip address 10.13.13.2/24
  ip vrrp vrid 13
  version v3
  backup
  ip-address 10.13.13.3
  activate
...
```

Syntax: show run

Clearing VRRP or VRRP-E statistics

To clear IPv4 VRRP or VRRP-E statistics, enter the following command at the Privileged EXEC level or any configuration level of the CLI.

```
Brocade(config)# clear ip vrrp statistics
```

Syntax: clear ip vrrp statistics

Syntax: clear ip vrrp-extended statistics

To clear IPv6 VRRP or VRRP-E statistics, enter the following command at the Privileged EXEC level or any configuration level of the CLI.

```
Brocade(config)# clear ipv6 vrrp statistics
```

Syntax: clear ipv6 vrrp statistics

Syntax: clear ipv6 vrrp-extended statistics

Configuration examples

The following sections contain the CLI commands options for implementing the VRRP and VRRP-E configurations shown in [Figure 40](#) on page 776 and [Figure 41](#) on page 782.

VRRP example for IPv4

To implement the IPv4 VRRP configuration shown in [Figure 40](#) on page 776, enter the following commands.

Configuring router1

To configure VRRP Router1, enter the following commands.

```
Brocade(config)# router vrrp
Brocade(config)# interface ethernet 1/6
Brocade(config-if-e10000-1/6)# ip address 10.53.5.1
Brocade(config-if-e10000-1/6)# ip vrrp vrid 1
Brocade(config-if-e10000-1/6-vrid-1)# owner track-priority 20
Brocade(config-if-e10000-1/6-vrid-1)# track-port ethernet 2/4
Brocade(config-if-e10000-1/6-vrid-1)# ip-address 10.53.5.1
Brocade(config-if-e10000-1/6-vrid-1)# activate
```

NOTE

When you configure the Master (Owner), the address you enter with the **ip-address** command must already be configured on the interface.

The **ip vrrp owner** command specifies that this router owns the IP address you are associating with the virtual router. Since this router owns the IP address, this router is the default Master router and its VRRP priority is thus 255.

NOTE

If VRRP is not configured globally, then you will see the response “Invalid input...” when you try to create a VRRP instance.

Configuring router2

To configure Router2 in [Figure 40](#) on page 776 after enabling VRRP, enter the following commands.

```
Brocade(config)# router vrrp
Brocade(config)# interface ethernet 1/5
Brocade(config-if-e10000-1/5)# ip address 10.53.5.3
Brocade(config-if-e10000-1/5)# ip vrrp vrid 1
Brocade(config-if-e10000-1/5-vrid-1)# backup priority 100 track-priority 19
Brocade(config-if-e10000-1/5-vrid-1)# track-port ethernet 3/2
Brocade(config-if-e10000-1/5-vrid-1)# ip-address 10.53.5.1
Brocade(config-if-e10000-1/5-vrid-1)# activate
```

The **backup** command specifies that this router is a VRRP Backup for virtual router VRID1. The IP address entered with the **ip-address** command is the same IP address as the one entered when configuring Router1. In this case, the IP address cannot also exist on Router2, but the interface on which you are configuring the virtual router Backup must have an IP address in the same subnet. By entering the same IP address as the one associated with this virtual router on the Owner, you are configuring the Backup to back up the address, but you are not duplicating the address.

NOTE

When you configure a Backup router, the router interface on which you are configuring the virtual router must have a real IP address that is in the same subnet as the address associated with the virtual router by the Owner. However, the address cannot be the same.

The **priority** parameter establishes the router's VRRP priority in relation to the other VRRP routers in this virtual router. The **track-priority** parameter specifies the new VRRP priority that the router receives for this virtual router if the interface goes down. Refer to ["Track ports and track priority"](#) on page 780.

The **activate** command activates the virtual router configuration on this interface. The interface does not provide backup service for the virtual IP address until you activate the VRRP configuration.

Syntax: `router vrrp`

Syntax: `ip vrrp vrid vrid`

Syntax: `owner [track-priority value]`

Syntax: `backup [priority value] [track-priority value]`

Syntax: `track-port ethernet slot/portnum ve num`

Syntax: `ip-address ip-addr`

Syntax: `activate`

VRRP example for IPv6

To implement the VRRP configuration for IPv6, enter the following commands.

Configuring router1

To configure VRRP Router1, enter the following commands.

```

Brocade(config)# ipv6 router vrrp
Brocade(config)# interface ethernet 1/6
Brocade(config-if-e10000-1/6)# ipv6 address 1414:1414:1414::1/64
Brocade(config-if-e10000-1/6)# ipv6 vrrp vrid 1
Brocade(config-if-e10000-1/6-vrid-1)# owner track-priority 20
Brocade(config-if-e10000-1/6-vrid-1)# track-port ethernet 2/4
Brocade(config-if-e10000-1/6-vrid-1)# ipv6-address 1414:1414:1414::1/64
Brocade(config-if-e10000-1/6-vrid-1)# activate

```

NOTE

When you configure the Master (Owner), the address you enter with the **ipv6-address** command must already be configured on the interface.

The **ipv6 vrrp owner** command specifies that this router owns the IP address you are associating with the virtual router. Since this router owns the IP address, this router is the default Master router and its VRRP priority is thus 255.

Configuring router2

To configure VRRP Router2, enter the following commands.

```

Brocade(config)# ipv6 router vrrp
Brocade(config)# interface ethernet 1/5
Brocade(config-if-e10000-1/5)# ipv6 address 1414:1414:1414::2/64
Brocade(config-if-e10000-1/5)# ipv6 vrrp vrid 1
Brocade(config-if-e10000-1/5-vrid-1)# backup priority 100 track-priority 19
Brocade(config-if-e10000-1/5-vrid-1)# track-port ethernet 3/2
Brocade(config-if-e10000-1/5-vrid-1)# ipv6-address 1414:1414:1414::1/64
Brocade(config-if-e10000-1/5-vrid-1)# activate

```

The **backup** command specifies that this router is a VRRP Backup for virtual router VRID1. The IP address entered with the **ipv6-address** command is the same IP address as the one entered when configuring Router1. In this case, the IP address cannot also exist on Router2, but the interface on which you are configuring the virtual router Backup must have an IP address in the same subnet. By entering the same IP address as the one associated with this virtual router on the Owner, you are configuring the Backup to back up the address, but you are not duplicating the address.

NOTE

When you configure a Backup router, the router interface on which you are configuring the virtual router must have a real IP address that is in the same subnet as the address associated with the virtual router by the Owner. However, the address cannot be the same.

The **priority** parameter establishes the router's VRRP priority in relation to the other VRRP routers in this virtual router. The **track-priority** parameter specifies the new VRRP priority that the router receives for this virtual router if the interface goes down.

The **activate** command activates the virtual router configuration on this interface. The interface does not provide backup service for the virtual IP address until you activate the VRRP configuration.

Syntax: **ipv6 router vrrp**

Syntax: **ipv6 vrrp vrid vrid**

Syntax: **owner [track-priority value]**

Syntax: `backup [priority value] [track-priority value]`

Syntax: `track-port ethernet slot/portnum ve num`

Syntax: `ipv6-address ip-addr`

Syntax: `activate`

VRRP-E example for IPv4

To implement the IPv4 VRRP-E configuration shown in [Figure 41](#) on page 782, configure the VRRP Routers as shown in the following sections.

Configuring router1

To configure VRRP Router1 in [Figure 41](#) on page 782, enter the following commands.

```
Brocade(config)# router vrrp-extended
Brocade(config)# interface ethernet 1/6
Brocade(config-if-e10000-1/6)# ip address 10.53.5.2/24
Brocade(config-if-e10000-1/6)# ip vrrp-extended vrid 1
Brocade(config-if-e10000-1/6-vrid-1)# backup priority 110 track-priority 20
Brocade(config-if-e10000-1/6-vrid-1)# track-port ethernet 2/4
Brocade(config-if-e10000-1/6-vrid-1)# ip-address 10.53.5.254
Brocade(config-if-e10000-1/6-vrid-1)# activate
VRRP router 1 for this interface is activating
Brocade(config-if-e10000-1/6-vrid-1)# exit
Brocade(config)# interface ethernet 1/6
Brocade(config-if-e10000-1/6)# ip vrrp-extended vrid 2
Brocade(config-if-e10000-1/6-vrid-1)# backup priority 100 track-priority 20
Brocade(config-if-e10000-1/6-vrid-1)# track-port ethernet 2/4
Brocade(config-if-e10000-1/6-vrid-1)# ip-address 10.53.5.253
Brocade(config-if-e10000-1/6-vrid-1)# activate
VRRP router 2 for this interface is activating
```

NOTE

The address you enter with the `ip-address` command cannot be the same as a real IP address configured on the interface.

NOTE

If VRRP is not configured globally, then you will see the response “Invalid input...” when you try to create a VRRP instance.

Configuring router2

To configure Router2, enter the following commands.

```
Brocade(config)# router vrrp-extended
Brocade(config)# interface ethernet 5/1
Brocade(config-if-e10000-5/1)# ip address 10.53.5.3/24
Brocade(config-if-e10000-5/1)# ip vrrp-extended vrid 1
Brocade(config-if-e10000-5/1-vrid-1)# backup priority 100 track-priority 20
Brocade(config-if-e10000-5/1-vrid-1)# track-port ethernet 3/2
Brocade(config-if-e10000-5/1-vrid-1)# ip-address 10.53.5.254
Brocade(config-if-e10000-5/1-vrid-1)# activate
```



```

Brocade(config-if-e10000-5/1-vrid-1)# exit
Brocade(config)# interface ethernet 5/1
Brocade(config-if-e10000-5/1)# ip vrrp-extended vrid 2
Brocade(config-if-e10000-5/1-vrid-1)# backup priority 110 track-priority 20
Brocade(config-if-e10000-5/1-vrid-1)# track-port ethernet 2/4
Brocade(config-if-e10000-5/1-vrid-1)# ip-address 10.53.5.253
Brocade(config-if-e10000-5/1-vrid-1)# activate

```

The **backup** command specifies that this router is a VRRP-E Backup for virtual router VRID1. The IP address entered with the **ip-address** VRRP-E command is the same IP address as the one entered when configuring Router1. In this case, the IP address cannot also exist on Router2, but the interface on which you are configuring the virtual router Backup must have an IP address in the same subnet. By entering the same IP address as the one associated with this virtual router on the Owner, you are configuring the Backup to back up the address, but you are not duplicating the address.

NOTE

When you configure a Backup router, the router interface on which you are configuring the virtual router must have a real IP address that is in the same subnet as the address associated with the virtual router by the Owner. However, the address cannot be the same.

The **priority** parameter establishes the router's VRRP-E priority in relation to the other VRRP-E routers in this virtual router. The **track-priority** parameter specifies the new VRRP-E priority that the router receives for this virtual router if the interface goes down. Refer to [“Track ports and track priority”](#) on page 780.

The **activate** command activates the virtual router configuration on this interface. The interface does not provide backup service for the virtual IP address until you activate the VRRP-E configuration. Alternatively, you can use the **enable** command. The **activate** and **enable** commands do the same thing.

Syntax: [no] router vrrp-extended

Syntax: [no] ip vrrp-extended vrid *vrid*

Syntax: [no] backup [priority *value*] [track-priority *value*]

Syntax: [no] track-port ethernet *slot/portnum ve num*

Syntax: [no] ip-address *ip-addr*

Syntax: [no] activate

VRRP-E example for IPv6

To implement the IPv6 VRRP-E configuration, configure the VRRP routers as shown in the following sections.

Configuring router1

To configure VRRP Router1, enter the following commands.

```

Brocade(config)# ipv6 router vrrp-extended
Brocade(config)# interface ethernet 1/6
Brocade(config-if-e10000-1/6)# ipv6 address 1414:1414:1414::3/64
Brocade(config-if-e10000-1/6)# ipv6 vrrp-extended vrid 1
Brocade(config-if-e10000-1/6-vrid-1)# ipv6-address 1414:1414:1414::45
Brocade(config-if-e10000-1/6-vrid-1)# activate

```

Configuration examples

```
VRRP router 1 for this interface is activating
Brocade(config-if-e10000-1/6-vrid-1)# exit
Brocade(config)# interface ethernet 1/6
Brocade(config-if-e10000-1/6)# ipv6 vrrp-extended vrid 2
Brocade(config-if-e10000-1/6-vrid-1)# ipv6-address 1414:1414:1414::44
Brocade(config-if-e10000-1/6-vrid-1)# activate
VRRP router 2 for this interface is activating
```

NOTE

The address you enter with the **ipv6-address** command cannot be the same as a real IP address configured on the interface.

NOTE

If VRRP is not configured globally, then you will see the response “Invalid input...” when you try to create a VRRP instance.

Configuring router2

To configure Router2, enter the following commands.

```
Brocade(config)# ipv6 router vrrp-extended
Brocade(config)# interface ethernet 5/1
Brocade(config-if-e10000-5/1)# ipv6 address 1414:1414:1414::4/64
Brocade(config-if-e10000-5/1)# ipv6 vrrp-extended vrid 1
Brocade(config-if-e10000-5/1-vrid-1)# ipv6-address 1414:1414:1414::45
Brocade(config-if-e10000-5/1-vrid-1)# activate
Brocade(config-if-e10000-5/1-vrid-1)# exit
Brocade(config)# interface ethernet 5/1
Brocade(config-if-e10000-5/1)# ipv6 vrrp-extended vrid 2
Brocade(config-if-e10000-5/1-vrid-1)# ipv6-address 1414:1414:1414::44
Brocade(config-if-e10000-5/1-vrid-1)# activate
```

The **backup** command specifies that this router is a VRRP-E Backup for virtual router VRID1. The IP address entered with the **ipv6-address** VRRP-E command is the same IP address as the one entered when configuring Router1. In this case, the IP address cannot also exist on Router2, but the interface on which you are configuring the virtual router Backup must have an IP address in the same subnet. By entering the same IP address as the one associated with this virtual router on the Owner, you are configuring the Backup to back up the address, but you are not duplicating the address.

NOTE

When you configure a Backup router, the router interface on which you are configuring the virtual router must have a real IP address that is in the same subnet as the address associated with the virtual router by the Owner. However, the address cannot be the same.

The **priority** parameter establishes the router’s VRRP-E priority in relation to the other VRRP-E routers in this virtual router.

The **activate** command activates the virtual router configuration on this interface. The interface does not provide backup service for the virtual IP address until you activate the VRRP-E configuration. Alternatively, you can use the **enable** command. The **activate** and **enable** commands do the same thing.

Syntax: [no] ipv6 router vrrp-extended

Syntax: [no] ipv6 vrrp-extended vrid vrid

Syntax: [no] backup [priority *value*] [track-priority *value*]


Syntax: [no] ipv6-address *ip-addr*

Syntax: [no] activate

VRRP-E Extension for Server Virtualization

VRRP-E is enhanced with the VRRP-E extension for Server Virtualization feature so that the Brocade device attempts to bypass the VRRP-E master router and directly forward packets to their destination through interfaces on the Backup router.

[Figure 42](#) shows an example of VRRP-E Extension for Server Virtualization. As shown, the virtual servers are dynamically moved between Host Server 1 and Host Server 2. Each time the virtual server is activated, it can be on a different Host Server, and sometimes the traffic crosses the WAN two times before it reaches the client. For example, in the VRRP-E implementation (without VRRP-E Extension for Server Virtualization), traffic from virtual server 1 to the client at 10.0.0.X was switched to the VRRP-E master router, then routed back to VRRP-E Backup router, and then routed to the client (the normal forwarding path, dotted lines).

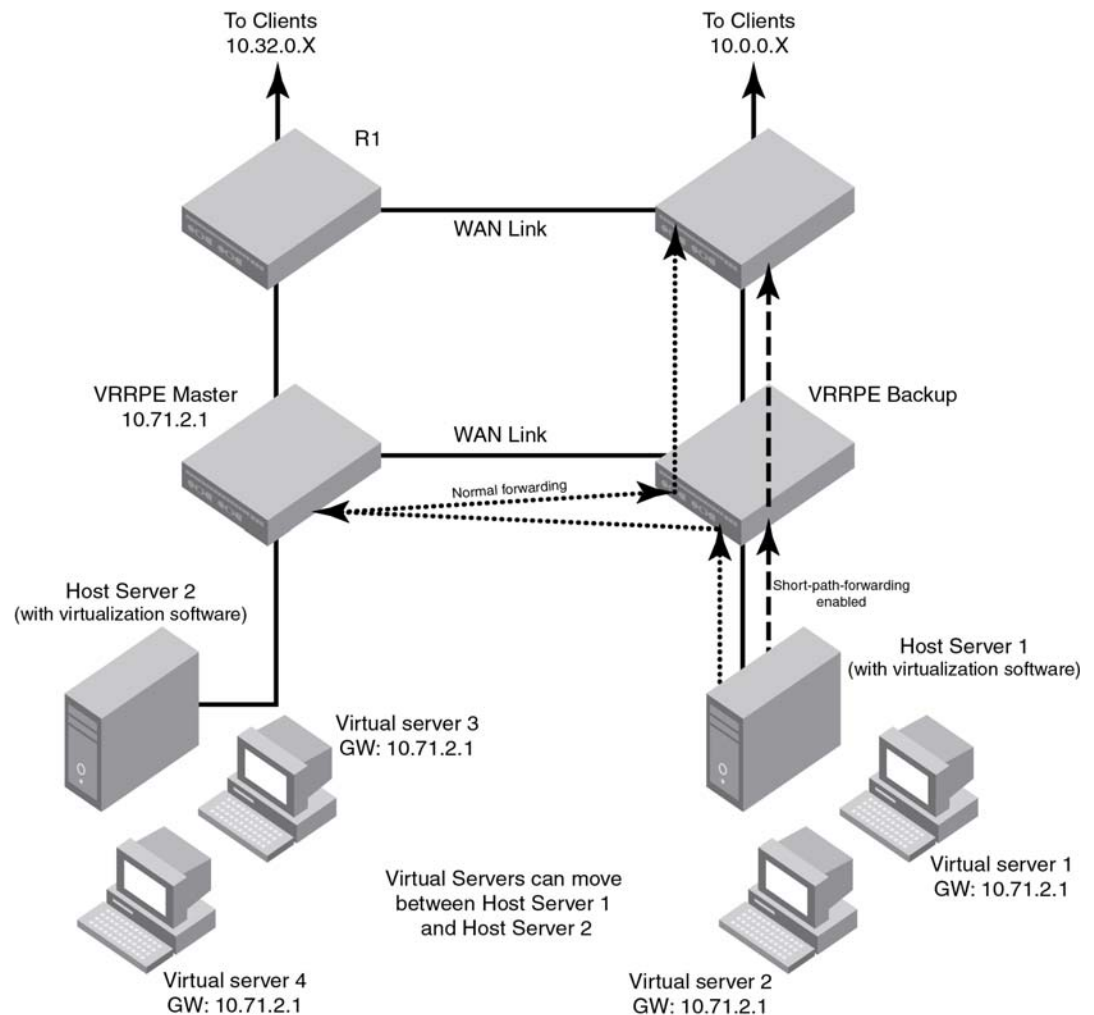FIGURE 42 Short path forwarding

VRRP-E Extension for server virtualization configuration example

Under the VRRP-E VRID configuration level, there is an option to enable short-path-forwarding.

To enable **short-path-forwarding**, enter the following commands.

```
Brocade(config)# router vrrp-extended
Brocade(config)# interface ve 10
Brocade(config-vif-10)# ip address 10.10.10.25/24
Brocade(config-vif-10)# ip vrrp-extended vrid 10
Brocade(config-vif-10-vrid-10)# backup priority 50
Brocade(config-vif-10-vrid-10)# ip-address 10.10.10.254
Brocade(config-vif-10-vrid-10)# short-path-forwarding
Brocade(config-vif-10-vrid-10)# activate
```

Syntax: [no] short-path-forwarding

Packets from the local subnet of the virtual IP address

If VRRP-E Extension for Server Virtualization is enabled, any packets coming from the local subnet of the virtual IP address will be routed to the VRRP-E master router. This is for the routes whose next-hop gateway is the master router at the Backup router. These routes are routed to the WAN instead of switching them to the master router. The new behavior includes all the packets sent to the virtual IP address that were intended for the master router, such as Telnet, ping and traceroute packets. With VRRP-E Extension for Server Virtualization enabled these packets are now routed instead of switched. Traceroute output will show one extra hop for the source IP subnet that displays the Backup router interface IP address.

The following is an example of the traceroute command output with VRRP-E Extension for Server Virtualization enabled.

```
C:\ >tracert 10.10.10.254
Tracing route to 10.10.10.254 over a maximum of 30 hops
  0  <1 ms  <1 ms  <1 ms  10.10.10.25
  1  <1 ms  <1 ms  <1 ms  10.10.10.254
Trace complete.
```

The following is an example of the traceroute command output without VRRP-E Extension for Server Virtualization enabled:

```
C:\ >tracert 10.10.10.254
Tracing route to 10.10.10.254 over a maximum of 30 hops
  0  8 ms  8 ms  8 ms  10.10.10.254
Trace complete.
```

IPv4 VRF support

VRRP-E Extension for Server Virtualization supports IPv4 VRF forwarding.

Configuration considerations

Since the VRRP-E Extension for Server Virtualization enabled port will route all the traffic sent to the VRRP-E MAC, ACL and PBR features configured on the port will be applied to this traffic.

VRRP-E Extension for Server Virtualization can be dynamically enabled or disabled before or after VRRP-E is activated. No system reload is required.

Although it is not required, it is recommended that interfaces on different routers with the same VRID have the same short-path-forwarding configuration. This will ensure that the short-path forwarding behavior is still retained after the failover. Different VRIDs can be configured differently.

Review the SYSLOG to prevent issues such as the following.

When the VRRP master is being reconfigured from VRRP-e to VRRP, the ve interface IPv6 address is removed and then re-added, at the time of re-adding the address. This happens to be the virtual IPv6 address of the VRRP-e, and it will trigger a fault due to the failed duplicate address detection since the VRRP Backup still running VRRP-e. The error is shown on SYSLOG although the "ipv6 address ..." command is not completely rejected. This results in a VRRP operation error. Watch for a "duplucate address error" in SYSLOG and make the necessary configuration adjustment as required.

