

# Installing the Avaya Virtual Services Platform 7200 Series

© 2015, Avaya Inc. All Rights Reserved.

#### Notice

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

#### **Documentation disclaimer**

"Documentation" means information published by Avaya in varying mediums which may include product information, operating instructions and performance specifications that Avaya may generally make available to users of its products and Hosted Services. Documentation does not include marketing materials. Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of documentation unless such modifications, additions, or deletions were performed by Avaya. End User agrees to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

#### Link disclaimer

Avaya is not responsible for the contents or reliability of any linked websites referenced within this site or documentation provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

#### Warranty

Avaya provides a limited warranty on Avaya hardware and software. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this product while under warranty is available to Avaya customers and other parties through the Avaya Support website: <a href="http://support.avaya.com">http://support.avaya.com</a> or such successor site as designated by Avaya. Please note that if You acquired the product(s) from an authorized Avaya Channel Partner outside of the United States and Canada, the warranty is provided to You by said Avaya Channel Partner and not by Avaya.

#### Licenses

THE SOFTWARE LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE, HTTP://SUPPORT.AVAYA.COM/LICENSEINFO OR SUCH SUCCESSOR SITE AS DESIGNATED BY AVAYA, ARE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS AVAYA SOFTWARE, PURCHASED FROM AVAYA INC. ANY AVAYA AFFILIATE, OR AN AVAYA CHANNEL PARTNER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH AVAYA OR AN AVAYA CHANNEL PARTNER. UNLESS OTHERWISE AGREED TO BY AVAYA IN WRITING, AVAYA DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN AVAYA, AN AVAYA AFFILIATE OR AN AVAYA CHANNEL PARTNER; AVAYA RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND AVAYA INC. OR THE APPLICABLE AVAYA AFFILIATE ("AVAYA").

Avaya grants You a license within the scope of the license types described below, with the exception of Heritage Nortel Software, for which the scope of the license is detailed below. Where the order documentation does not expressly identify a license type, the applicable license will be a Designated System License. The

applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the documentation or other materials available to You. "Software" means computer programs in object code, provided by Avaya or an Avaya Channel Partner, whether as stand-alone products, pre-installed on hardware products, and any upgrades, updates, patches, bug fixes, or modified versions thereto. "Designated Processor" means a single stand-alone computing device. "Server" means a Designated Processor that hosts a software application to be accessed by multiple users. "Instance" means a single copy of the Software executing at a particular time: (i) on one physical machine; or (ii) on one deployed software virtual machine ("VM") or similar deployment.

#### Licence types

Designated System(s) License (DS). End User may install and use each copy or an Instance of the Software only on a number of Designated Processors up to the number indicated in the order. Avaya may require the Designated Processor(s) to be identified in the order by type, serial number, feature key, Instance, location or other specific designation, or to be provided by End User to Avaya through electronic means established by Avaya specifically for this purpose.

#### **Heritage Nortel Software**

"Heritage Nortel Software" means the software that was acquired by Avaya as part of its purchase of the Nortel Enterprise Solutions Business in December 2009. The Heritage Nortel Software currently available for license from Avaya is the software contained within the list of Heritage Nortel Products located at <a href="http://support.avaya.com/LicenseInfo">http://support.avaya.com/LicenseInfo</a> under the link "Heritage Nortel Products" or such successor site as designated by Avaya. For Heritage Nortel Software, Avaya grants You a license to use Heritage Nortel Software provided hereunder solely to the extent of the authorized activation or authorized usage level, solely for the purpose specified in the Documentation, and solely as embedded in, for execution on, or for communication with Avaya equipment. Charges for Heritage Nortel Software may be based on extent of activation or use authorized as specified in an order or invoice.

#### Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation, Software, Hosted Service, or hardware provided by Avaya. All content on this site, the documentation, Hosted Service, and the product provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software unless expressly authorized by Avaya. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Avaya can be a criminal, as well as a civil offense under the applicable law.

#### **Third Party Components**

"Third Party Components" mean certain software programs or portions thereof included in the Software or Hosted Service may contain software (including open source software) distributed under third party agreements ("Third Party Components"), which contain terms regarding the rights to use certain portions of the Software ("Third Party Terms"). As required, information regarding distributed Linux OS source code (for those products that have distributed Linux OS source code) and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply is available in the products, Documentation or on Avaya's website at: <a href="http://support.avaya.com/Copyright">http://support.avaya.com/Copyright</a> or such successor site as designated by Avaya. You agree to the Third Party Terms for any such Third Party Components.

#### **Preventing Toll Fraud**

"Toll Fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of Toll Fraud associated with your system and that, if Toll Fraud occurs, it can

result in substantial additional charges for your telecommunications services

#### Avaya Toll Fraud intervention

If You suspect that You are being victimized by Toll Fraud and You need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1-800-643-2353 for the United States and Canada. For additional support telephone numbers, see the Avaya Support website: <a href="http://support.avaya.com">http://support.avaya.com</a> or such successor site as designated by Avaya. Suspected security vulnerabilities with Avaya products should be reported to Avaya by sending mail to: securityalerts@avaya.com.

#### **Downloading Documentation**

For the most current versions of Documentation, see the Avaya Support website: <a href="http://support.avaya.com">http://support.avaya.com</a>, or such successor site as designated by Avaya.

#### **Contact Avaya Support**

See the Avaya Support website: <a href="http://support.avaya.com">http://support.avaya.com</a> for product or Hosted Service notices and articles, or to report a problem with your Avaya product or Hosted Service. For a list of support telephone numbers and contact addresses, go to the Avaya Support website: <a href="http://support.avaya.com">http://support.avaya.com</a> (or such successor site as designated by Avaya), scroll to the bottom of the page, and select Contact Avaya Support.

#### **Trademarks**

The trademarks, logos and service marks ("Marks") displayed in this site, the Documentation, Hosted Service(s), and product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the Documentation, Hosted Service(s) and product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party.

Avaya is a registered trademark of Avaya Inc.

All non-Avaya trademarks are the property of their respective owners.  $Linux^{\otimes}$  is the registered trademark of Linus Torvalds in the U.S. and other countries.

## **Contents**

Chapter 1: Introduction	5
Purpose	5
Related resources	5
Documentation	5
Training	5
Subscribing to e-notifications	6
Support	8
Searching a documentation collection	8
Chapter 2: New in this release	10
Chapter 3: Hardware models	11
Hardware models for VSP 7200 Series	
Chapter 4: Preinstallation checklist	16
Preinstallation checklist	
Chapter 5: Installing the Avaya Virtual Services Platform 7200 Series	18
Installation checklist	
Installation fundamentals	
Electrostatic discharge	
Technical specifications	
Package contents	
Installing a power supply	
Installing an AC power supply	
Installing a DC power supply	
Removing a power supply	34
Installing a fan module	34
LED state definitions	36
Switch LEDs	36
100 Mbps/1 Gbps/10 Gbps RJ-45 port LED state indicators	37
SFP and SFP+ port LED state indicators	38
QSFP+ port LED state indicators	38
Management port LED state indicators	39
Enterprise Device Manager (EDM) representation of physical LED status	
Installing the switch in an equipment rack	40
Using the optional slide rack mount kit	41
Using the supplied brackets	55
Cable requirements for the VSP 7200	57
Installation and removal of transceivers	
Console port pin assignments	
40GBASE-QSFP+ ports	59
Chapter 6: Translations of safety messages	60

## **Chapter 1: Introduction**

## **Purpose**

This guide provides information and instructions to install an Avaya Virtual Services Platform 7200 Series (VSP 7200 Series) switch.

## **Related resources**

## **Documentation**

See the *Documentation Reference for Avaya Virtual Services Platform 7200 Series and 8000 Series*, NN47227-100 for a list of the documentation for this product.

## **Training**

Ongoing product training is available. For more information or to register, you can access the Web site at <a href="http://avaya-learning.com/">http://avaya-learning.com/</a>.

## **Viewing Avaya Mentor videos**

Avaya Mentor videos provide technical content on how to install, configure, and troubleshoot Avaya products.

#### About this task

Videos are available on the Avaya Support website, listed under the video document type, and on the Avaya-run channel on YouTube.

#### **Procedure**

- To find videos on the Avaya Support website, go to <a href="http://support.avaya.com">http://support.avaya.com</a> and perform one of the following actions:
  - In Search, type Avaya Mentor Videos to see a list of the available videos.

- In Search, type the product name. On the Search Results page, select Video in the Content Type column on the left.
- To find the Avaya Mentor videos on YouTube, go to www.youtube.com/AvayaMentor and perform one of the following actions:
  - Enter a key word or key words in the Search Channel to search for a specific product or topic.
  - Scroll down Playlists, and click the name of a topic to see the available list of videos posted on the website.



#### Note:

Videos are not available for all products.

## Subscribing to e-notifications


Subscribe to e-notifications to receive an email notification when documents are added to or changed on the Avaya Support website.

#### About this task

You can subscribe to different types of general notifications, for example, Product Correction Notices (PCN), which apply to any product or a specific product. You can also subscribe to specific types of documentation for a specific product, for example, Application & Technical Notes for Virtual Services Platform 7000.

#### **Procedure**


- 1. In an Internet browser, go to <a href="https://support.avaya.com">https://support.avaya.com</a>.
- 2. Type your username and password, and then click **Login**.
- 3. Under My Information, select SSO login Profile.
- 4. Click E-NOTIFICATIONS.
- 5. In the GENERAL NOTIFICATIONS area, select the required documentation types, and then click **UPDATE**.

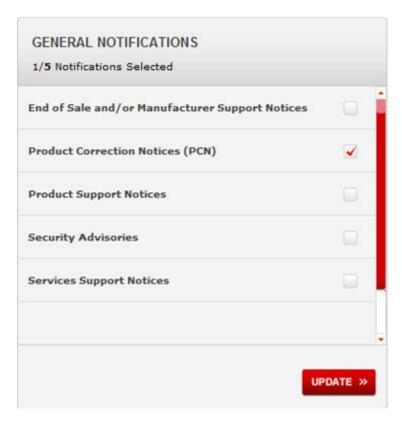

- 6. Click OK.
- 7. In the PRODUCT NOTIFICATIONS area, click Add More Products.



- 8. Scroll through the list, and then select the product name.
- 9. Select a release version.
- 10. Select the check box next to the required documentation types.

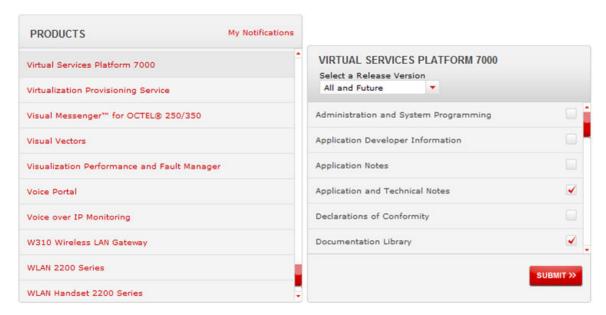

11. Click Submit.

## **Support**

Go to the Avaya Support website at <a href="http://support.avaya.com">http://support.avaya.com</a> for the most up-to-date documentation, product notices, and knowledge articles. You can also search for release notes, downloads, and resolutions to issues. Use the online service request system to create a service request. Chat with live agents to get answers to questions, or request an agent to connect you to a support team if an issue requires additional expertise.

## Searching a documentation collection

On the Avaya Support website, you can download the documentation library for a specific product and software release to perform searches across an entire document collection. For example, you can perform a single, simultaneous search across the collection to quickly find all occurrences of a particular feature. Use this procedure to perform an index search of your documentation collection.

## Before you begin

- Download the documentation collection zip file to your local computer.
- You must have Adobe Acrobat or Adobe Reader installed on your computer.

#### **Procedure**

- 1. Extract the document collection zip file into a folder.
- 2. Navigate to the folder that contains the extracted files and open the file named product\_name\_release.pdx.

- 4. Enter a search word or phrase.
- 5. Select any of the following to narrow your search:
  - Whole Words Only
  - Case-Sensitive
  - · Include Bookmarks
  - Include Comments
- 6. Click Search.

The search results show the number of documents and instances found. You can sort the search results by Relevance Ranking, Date Modified, Filename, or Location. The default is Relevance Ranking.

# **Chapter 2: New in this release**

The Avaya Virtual Services Platform 7200 Series is new for VOSS 4.2.1 release, so all the content in this document is new in this release. See *Release Notes for VSP Operating System Software*, NN47227-401 for a full list of VOSS 4.2.1 release features.

# **Chapter 3: Hardware models**

## Hardware models for VSP 7200 Series

This section lists the VSP 7200 Series hardware.

## VSP 7200 hardware

Table 1: VSP 7200 Hardware

VSP 7200 Series	Description	Part numbers
VSP 7200 AC models		
VSP 7254XSQ - fiber switch	48 1/10 GbE SFP/SFP+ ports	EC7200x1B-E6 and
Model EC7200x1B-E6 ships	• six 40 GbE QSFP+ ports	EC7200x1F-E6
with <b>back-to-front</b> fan modules and one <b>back-to-front</b> 460 W AC PSU.	one 10/100/1000 BASE-T Out-Of-Band Management Port	Note:  Replace the "x" with
Model EC7200x1F-E6 ships with	one RJ-45 Console Port	a country-specific power cord code.
front-to-back fan modules and	one USB port	See the footnote for
one <b>front-to-back</b> 460 W AC PSU.	Base Software License	details.
1 00.	three field-replaceable fan modules	
VSP 7254XTQ - copper switch	Includes all of the above components except	EC7200x2B-E6 and
Model EC7200x2B-E6 ships	the SFP+ ports are replaced with forty eight 100 Mbps/1 GbE/10 GbE RJ-45 ports.	EC7200x2F-E6
with <b>back-to-front</b> fan modules and one <b>back-to-front</b> 800 W	100 Misps/1 CBE/10 CBE 110-40 ports.	Note:
AC PSU.		Replace the "x" with
Model EC7200x2F-E6 ships with		a country-specific power cord code.
front-to-back fan modules and		See the footnote for
one <b>front-to-back</b> 800 W AC PSU.		details.
VSP 7200 DC models		I
VSP 7254XSQ - fiber switch	• 48 1/10 GbE SFP/SFP+ ports	EC720001F-E6
Model EC720001F-E6 ships	• six 40 GbE QSFP+ ports	
with one <b>front-to-back</b> 800 W DC PSU.	one 10/100/1000 BASE-T Out-Of-Band Management Port	
	one RJ-45 Console Port	

Table continues...

one USB port     Base Software License     three field-replaceable fan modules  Includes all of the above components except the SFP+ ports are replaced with forty eight 100 Mbps/1 GbE/10 GbE RJ-45 ports.  tion of your power supplies and fan modules manual components.	EC720002F-E6
three field-replaceable fan modules  Includes all of the above components except the SFP+ ports are replaced with forty eight 100 Mbps/1 GbE/10 GbE RJ-45 ports.  Output  Description:	EC720002F-E6
Includes all of the above components except the SFP+ ports are replaced with forty eight 100 Mbps/1 GbE/10 GbE RJ-45 ports.	EC720002F-E6
the SFP+ ports are replaced with forty eight 100 Mbps/1 GbE/10 GbE RJ-45 ports.	EC720002F-E6
100 Mbps/1 GbE/10 GbE RJ-45 ports.	
tion of your <b>power supplies</b> and <b>fan modules</b> ma	
tion of your <b>power supplies</b> and <b>fan modules</b> ma	
tion of your <b>power supplies</b> and <b>fan modules</b> ma	
-to-front).	atch the same direction
The VSP 7254XSQ comes with one 460 W AC PSU that is either back-to-front or front- to-back.	• EC7205x1B-E6 (back to-front)
For full power redundancy, you can install a second 460 W AC PSU.	• EC7205x1F-E6 (front to-back)
	Note:
	Replace the "x" with a country-specific power cord code. See the footnote fo details.
The VSP 7254XTQ comes with one 800 W AC PSU that is either back-to-front or front-	EC7205x0B-E6 (back- to-front)
For full power redundancy, you can install a	EC7205x0F-E6 (front-to-back)
second 800 W AC PSU.	× Note:
	Replace the "x" with a country-specific power cord code. See the footnote fo details.
The VSP 7254XSQ and VSP 7254XTQ comes with one 800 W DC PSU.	EC8005001-E6 (front-to-back)
For full power redundancy, you can install a second 800 W DC PSU.	Note:  Avaya does not support a (back-to
	<ul> <li>The VSP 7254XSQ comes with one 460 W AC PSU that is either back-to-front or front-to-back.</li> <li>For full power redundancy, you can install a second 460 W AC PSU.</li> <li>The VSP 7254XTQ comes with one 800 W AC PSU that is either back-to-front or front-to-back.</li> <li>For full power redundancy, you can install a second 800 W AC PSU.</li> <li>The VSP 7254XSQ and VSP 7254XTQ comes with one 800 W DC PSU.</li> <li>For full power redundancy, you can install a</li> </ul>

Table continues...

front) DC power

supply.

#### VSP 7200 Series Description Part numbers

\*Note: The character (x) in the order number indicates the power cord code. Replace the "x" with the proper letter to indicate desired product nationalization. See the following for details:

"A": No power cord included.

"B": Includes European "Schuko" power cord common in Austria, Belgium, Finland, France, Germany, The Netherlands, Norway, and Sweden.

"C": Includes power cord commonly used in the United Kingdom and Ireland.

"D": Includes power cord commonly used in Japan.

"E": Includes North American power cord.

"F": Includes Australian power cord.

#### Redundant fan modules



#### Important:

Make sure the air flow direction of your **power supplies** and **fan modules** match the same direction (either front-to-back or back-to-front).

12 volt redundant fan module	The VSP 7200 comes with three 12–V fan modules for either front-to-back or back-to-front air flow switch cooling.	EC7200BTF-E6 — back-to-front fan modules (includes three fan module kits)
		EC7200FTB-E6 — front- to-back fan modules (includes three fan module kits)
Universal Slide Rack Mount Kit	(300mm-900mm)	
Slide Rack Mount Kit (300mm-900mm)	The optional rack mount kit allows a switch to be installed in a four post rack with depths between 300mm and 900mm. It is designed for use on the VSP 7200, VSP 8200 and VSP 8400.	EC8011002-E6



#### Note:

The universal slide rack mount kit is optional and must be ordered separately. VSP 7200, VSP 8200 and VSP 8400 ship with rack mount brackets. When using rack mount brackets on VSP 8200 and VSP 8400. Avaya recommends the use of a shelf to provide additional support.

## Compatible transceivers



#### Important:

Avaya recommends using Avaya-branded SFP, SFP+, and QSFP+ transceivers as they have been through extensive qualification and testing. Avaya will not be responsible for issues related to non-Avaya branded transceivers.

 The VSP 7200 Series operates in forgiving mode for SFP transceivers, which means that the switch will bring up the port operationally when using non-Avaya SFP transceivers. Avaya does not provide support for operational issues related to these SFPs, but they will operate and the port link will come up. The switch logs the device as an unsupported or unknown device.

- The VSP 7200 Series operates in strict mode for SFP+ and QSFP+ transceivers, which
  means that the switch will not bring the port up operationally when using non-Avaya SFP+
  or QSFP+ transceivers.
- The VSP 7200 Series operates in forgiving mode for SFP+ and QSFP+ direct attached cables, which means that the switch will bring up the port operationally when using Non-Avaya direct attached cables. Avaya does not provide support for operational issues related to these DACs, but they will operate and the port link will come up.

For more information about compatible transceivers, see *Installing Transceivers and Optical Components on Avaya Virtual Services Platform 7200 Series and 8000 Series*, NN47227-301.

#### **VSP 7200 operational notes**

- The VSP 7254XSQ has a PHYless design, which is typical for Data Center Top of Rack switches. The benefits of a PHYless design are lower power consumption and lower latency. However, due to the PHYless design, the following transceivers are not supported:
  - AA1403017-E6: 1-port 10GBASE-LRM SFP+
  - AA1403016-E6: 1-port 10GBase-ZR/ZW SFP+

The AA1403165 10GBASE-ZR CWDM DDI SFP+ transceiver can be substituted for AA1403016-E6 10GBASE-ZR/ZW SFP+.

- Software partitions the switch into 2 logical slots: Slot 1 and Slot 2.
  - Slot 1: 10 Gbps Ports: 1 48
  - Slot 2: 40 Gbps Ports: 1 6
- Channelization is supported on the 40 Gbps QSFP+ ports.
- · Macsec support:
  - MACsec is only supported on the VSP 7254XTQ 10 Gbps ports
  - MACsec is not supported on VSP 7254XSQ 10 Gbps ports.
  - MACsec is not supported on VSP 7254XTQ and VSP 7254XSQ 40 Gbps ports whether channelization is enabled or not.
- 1000BASE-T SFP (AA1419043-E6) will only operate at 1 Gbps speeds when used on a VSP 7254XSQ.
- When you use 1 Gigabit Ethernet SFP transceivers on VSP 7254XSQ, the software disables auto-negotiation on the port:
  - If you use 1 Gbps fiber SFP transceivers, the remote end must also have auto-negotiation disabled.
  - If you use 1 Gbps copper SFP transceivers, the remote end must have auto-negotiation enabled. If not, the link will not be established.
- When a port on VSP 7254XSQ is disabled/enabled or a cable replaced or the switch rebooted, the remote link may flap twice.

- Avaya recommends enabling auto-negotiation to ensure proper operation at 100M speeds on VSP 7254XTQ:
  - Link instability will be seen if both ends are set to 100M auto-negotiation disabled and a straight through cable is used.
  - If Link instability is seen when using a cross-over cable, a port disable or enable can fix the issue.

For more information, see *Installing Transceivers and Optical Components on Avaya Virtual Services Platform 7200 Series and 8000 Series*, NN47227-301

# **Chapter 4: Preinstallation checklist**

## **Preinstallation checklist**

Before you install the Avaya Virtual Services Platform 7200 Series, make sure that you complete the tasks in the preinstallation checklist.

## **!** Important:

Make sure the air flow direction of your **power supplies** and **fan modules** match the same direction (either front-to-back or back-to-front).

No.	Task	Description	~
1.	Review the technical specification for the switch. Make sure that the area where you install the switch and where it will operate meet the requirements.	For the physical, electrical, and environmental specifications, see <u>Technical specifications</u> on page 21.	
2.	Verify the power supply unit (PSU) specifications. Optionally order a redundant PSU to provide redundancy and load sharing.	See AC power supply specification on page 26 or DC power supply specifications on page 33.  To order redundant PSUs, see Hardware models for VSP 7200 Series on page 11 for part numbers.	
3.	Verify that the fan module air flow is going in the same direction as the power supplies (either front-to-back or back-to-front). Optionally order redundant fan modules.	To order redundant fan modules, see  Hardware models for VSP 7200 Series on page 11 for part numbers.	
4.	Make sure that you have the following tools and cables:  • Phillips #2 screwdriver  • RJ-45 console port cable  • ESD cable	See <u>Cable requirements for the VSP 7200</u> <u>Series</u> on page 57.	
5.	Unpack the equipment.	Observe ESD precautions when you unpack the equipment. See Electrostatic discharge on page 20.	

Table continues...

No.	Task	Description	~
6.	Verify the contents of the shipped package.	See <u>Package contents</u> on page 23 for a description of the components that are provided with the switch. If any components are missing, contact Avaya support at <a href="http://support.avaya.com/">http://support.avaya.com/</a> .	
7.	Make sure that the power cord has the correct country-specific termination.		
8.	Prepare the rack.	Ensure that there is enough rack space to accommodate a 1RU switch (4.45 cm).	
		Ensure that the rack is bolted to the floor and braced if necessary.	
		Ensure that the rack is grounded to the same grounding electrode used by the power service in the area. The ground path must be permanent and must not exceed 1 Ohm of resistance from the rack to the grounding electrode.	

# Chapter 5: Installing the Avaya Virtual Services Platform 7200 Series

This section provides the information and procedures to install the Avaya Virtual Services Platform 7200 Series.

## Installation checklist

Use this checklist to install the Avaya Virtual Services Platform 7200 Series.

No.	Task	Description	~
1.	Mount the Avaya Virtual Services Platform 7200 Series in the equipment rack.	See Installing the switch in an equipment rack on page 40.  You have two options for installing the switch in an equipment rack:  • Using the optional slide rack mount kit on page 41  • Using the supplied bracket on page 55	
2.	Install the primary or redundant power supply.  Important:  Avaya does not support a combination of AC-input and DC-input power supplies in the same chassis.	If you have an AC power supply, see <u>Installing</u> an AC power supply on page 24.  If you have a DC power supply, see <u>Installing a DC power supply</u> on page 29.	
3.	Install the fan modules.	See Installing a fan module on page 34.	
4.	Check the LEDs to verify the installation.	For a description of the LEDs, see <u>LED state</u> <u>definitions</u> on page 36.	

## Installation fundamentals

The VSP 7200 Series has two models: VSP 7254XSQ (fiber) and VSP 7254XTQ (copper). The VSP 7254XSQ consists of forty eight 1/10 GbE SFP/SFP+ ports. The VSP 7254XTQ consists of forty eight 100 Mbps/1 GbE/10 GbE RJ-45 ports.

Both models include the following features:

- six 40 GbE QSFP+ ports
- · one USB port
- · Base Software License
- one field-replaceable power supply (either AC or DC)
- · three field-replaceable 12 volt fan modules

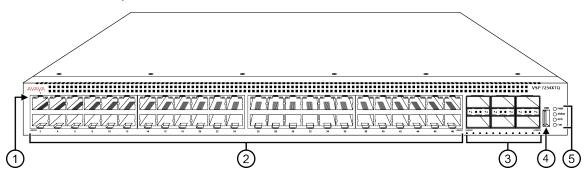


Figure 1: VSP 7200 — Front view

- 1. LEDs indicating port activity are above the RJ-45 and SFP+ port. The up arrow on the left indicates the top port; the down arrow on the right indicates the bottom port. For a description of what the LEDs mean, see RJ-45 copper port LEDs on page 37 or SFP port LEDs on page 38.
- 2. 48 ports The VSP 7254XSQ has 48 SFP/SFP+ fiber ports. The VSP 7254XTQ has 48 RJ-45 copper ports.
- 3. Six QSFP+ ports The LEDs are below each port. There are four LEDs per port to support channelization. The up arrows refer to the port above. For a description of what the LEDs mean, see <a href="QSFP+">QSFP+</a> port LEDs on page 38.
- 4. USB port
- 5. LEDs for system power (PWR), switch status (Status), redundant power supply (RPS), and fan modules (Fan). For more information, see <a href="Switch LEDs">Switch LEDs</a> on page 36.

The following figure shows the rear of the chassis with three fan modules and one power supply installed. The fan modules are numbered 1–3 from left to right, and the power supplies are numbered PSU 1 on the left and PSU 2 on the right.

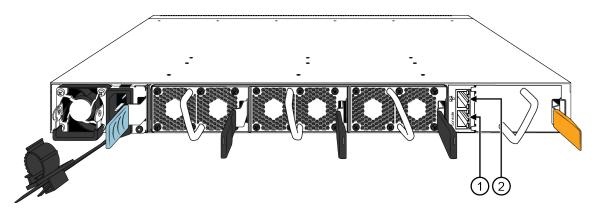


Figure 2: VSP 7200 — Rear view

- 1. Console port
- 2. Management port The LEDs are on the bottom of the port. For more information, see Management port LEDs on page 39.

## Electrostatic discharge

This section provides information and procedures to prevent electrostatic discharge during installation.

## Preventing electrostatic discharge damage

Electrostatic discharge (ESD) is a discharge of stored static electricity that can damage equipment and impair electrical circuitry. Electrostatic voltages can result from friction including, pulling cabling through conduits, walking across carpeted areas, and building static charge in clothing. When you improperly handle electronic components, ESD damage occurs and can result in complete or intermittent failures. While networking equipment is commonly designed and tested to withstand common mode ESD events, voltage can sometimes discharge to some connector pins, which can potentially damage the networking equipment.



#### Caution:

To protect the switch against ESD damage, take the following measures before you connect data cables to the device:

- Always use antistatic wrist straps. Make sure you adjust the strap to provide good skin contact.
- Ensure that you properly ground work surfaces and equipment racks for protection against electrostatic discharge. You must connect the common point to the building ground wire. In a properly wired building, the nearest reliable ground is typically at the electrical outlet.

- Avoid contact between equipment and clothing. The wrist or ankle strap protects only the equipment from ESD voltages on the body; ESD voltages on clothing can still cause damage.
- Avoid touching any connector pins.
- Do not remove the wrist or ankle strap until the installation is complete.

## Preventing electrostatic damage in new cable installations

With new cable installations, Avaya recommends that you use an ESD discharge cable to reduce the potential for damage from static, that can build up in cables. The following figure illustrates an ESD cable.

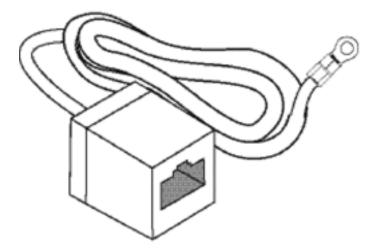


Figure 3: Job aid

To install the ESD discharge cable, perform this procedure.

- 1. Connect the ground lug on the ESD discharge cable to a safe and suitable earth ground.
- 2. Connect all RJ-45 cable connectors to the female RJ-45 connector of the ESD discharge cable for at least 5 seconds, and then connect each RJ-45 cable connector to the switch.
- 3. Leave cables connected to the networking equipment. After you connect cables to networking equipment, the cables do not build up charge.

## **Technical specifications**

The following table provides the technical specifications for the individual switches in this series. Ensure that the area where you install the switch and where it operates meets these requirements.



## **Marning:**

To avoid bodily injury from hazardous electrical shock and current, never remove the top of the device. No user-serviceable components are inside.

**Table 2: Physical Specifications** 

Height	1.75 in. (4.4 cm) - 1U
Width	17.5 in. (444.5 mm) - 19" rack mountable
Depth	17.2 in. (43.6 cm)
Weight of VSP 7254XSQ	16 lb (7.25 kg)
Weight of VSP 7254XTQ	18.85 lb (8.55 kg)
Weight of 460W AC power supply unit	1.95 lb (.88 kg)
(EC7205x1B-E6 or EC7205x1F-E6)	
Weight of 800W AC power supply unit (EC8005x01-E6)	1.9 lb (0.862 kg)
Weight of 800W DC power supply unit (EC8005001-E6)	1.76 lb (0.8 kg)
Weight of Fan Module Kit (includes 3 fan modules)	1.05 lb (0.47 kg)
(EC7200BTF-E6 or EC7200FTB-E6)	
MTBF rating for the VSP 7254XSQ	296,402 hours (33.8 years)
MTBF rating for the VSP 7254XTQ	267,126 hours (30.5 years)

**Table 3: Environmental specifications** 

Operating Temperature	0°C to 50°C (32°F to 122°F)
Storage Temperature	-40°C to 85°C (-40°F to 185°F)
Operating Humidity	0 to 95 percent noncondensing
Storage Humidity	0 to 95 percent noncondensing
Maximum Operating Altitude	3,048m (10 000 feet) above sea level
Storage Altitude	0 to 12,192m (0 to 40,000ft) above sea level
Acoustic Noise	VSP 7254XSQ F2B is 49.6 db min, 65.4 db max
	VSP 7254XSQ B2F is 50.7 db min, 63.7 db max
	• VSP 7254XTQ F2B is 53.7 db min, 67.1 db max
	• VSP 7254XTQ B2F is 50.7 db min, 65.9 db max
Miscellaneous Operating Considerations	No heat sources such as hot air vents or direct sunlight near the switch.
	No sources of severe electromagnetic interference near the switch.
	No excessive dust in the environment.

Table continues...

<ul> <li>An adequate power source is within 6 feet (1.83 meters) of the switch.</li> <li>One 15-amp circuit is required for each power supply.</li> </ul>
<ul> <li>At least 2 inches (5.08 centimeters) of clearance on the front and back of the switch for ventilation.</li> </ul>
Cables should be dressed to prevent blocking air flow.

## **Package contents**

The following describes the components that are provided with each switch. If any components are missing, contact the switch vendor.

- 1. Avaya Virtual Services Platform 7200 (either a VSP 7254XSQ or VSP 7254XTQ
- 2. Rack-mounting hardware that includes:
  - · Rack-mount brackets
  - Screws to attach brackets to the switch
  - Screws to secure the switch to the equipment rack
- 3. The VSP 7200 supports two field-replaceable power supplies (either front-to-back or back-to-front). One power supply ships with the unit.
- 4. Power cord
  - The VSP 7200 "A" models (EC7200A1B-E, EC7200A1F-E6, EC7200A2B-E6, and EC7200A2F-E6) do not include a power cord for the AC power supply. All other models include a country-specific power cord.
  - The VSP 7200 DC models (EC720001F-E6 and EC720002F-E6) ships with a DC power supply wiring assembly for the DC power supply.
- 5. Three field-replaceable fan modules (either front-to-back or back-to-front)
- 6. Documentation

## Note:

A 300mm-900mm slide rack mounting kit is available as an option.

## Installing a power supply

The VSP 7254XSQ and the VSP 7254XTQ ship with a power supply, but it is not installed in the chassis. Refer to the following procedures to install either an AC or a DC power supply.

There are two power supply slots (PSU1 on the left side and PSU2 on the right).

• If you only have one power supply, you can install it in either PSU1 or PSU2.

• If you install a second power supply, neither one acts as a primary power supply. The two power supplies load share equally.

## Important:

Avaya does not support installing a combination of AC-input and DC-input power supplies in the same chassis.

To install an AC power supply, see Installing an AC power supply on page 24.

To install a DC power supply, see Installing a DC power supply on page 29.

## Installing an AC power supply

The VSP 7200 Series supports two field-replaceable power supplies. One comes with the switch and you can install a second power supply to provide redundancy and load sharing.

## Important:

Refer to the following part numbers to ensure that you install the correct power supplies in the VSP 7254XSQ (fiber switch):

- EC7205A1B-E6 460W AC POWER SUPPLY BACK2FRONT COOLING (NO PC)
- EC7205A1F-E6 460W AC POWER SUPPLY FRONT2BACK COOLING (NO PC)
- EC7205B1B-E6 460W AC POWER SUPPLY BACK2FRONT COOLING (EU PC)
- EC7205B1F-E6 460W AC POWER SUPPLY FRONT2BACK COOLING (EU PC)
- EC7205C1B-E6 460W AC POWER SUPPLY BACK2FRONT COOLING (UK PC)
- EC7205C1F-E6 460W AC POWER SUPPLY FRONT2BACK COOLING (UK PC)
- EC7205D1B-E6 460W AC POWER SUPPLY BACK2FRONT COOLING (JP PC)
- EC7205D1F-E6 460W AC POWER SUPPLY FRONT2BACK COOLING (JP PC)
- EC7205E1B-E6 460W AC POWER SUPPLY BACK2FRONT COOLING (NA PC)
- EC7205E1F-E6 460W AC POWER SUPPLY FRONT2BACK COOLING (NA PC)
- EC7205F1B-E6 460W AC POWER SUPPLY BACK2FRONT COOLING (ANZ PC)
- EC7205F1F-E6 460W AC POWER SUPPLY FRONT2BACK COOLING (ANZ PC)

Refer to the following part numbers to ensure that you install the correct power supplies in the VSP 7254XTQ (copper switch):

- EC7205A0B-E6 800W AC POWER SUPPLY BACK2FRONT COOLING (NO PC)
- EC7205A0F-E6 800W AC POWER SUPPLY FRONT2BACK COOLING (NO PC)
- EC7205B0B-E6 800W AC POWER SUPPLY BACK2FRONT COOLING (EU PC)
- EC7205B0F-E6 800W AC POWER SUPPLY FRONT2BACK COOLING (EU PC)
- EC7205C0B-E6 800W AC POWER SUPPLY BACK2FRONT COOLING (UK PC)

- EC7205C0F-E6 800W AC POWER SUPPLY FRONT2BACK COOLING (UK PC)
- EC7205D0B-E6 800W AC POWER SUPPLY BACK2FRONT COOLING (JP PC)
- EC7205D0F-E6 800W AC POWER SUPPLY FRONT2BACK COOLING (JP PC)
- EC7205E0B-E6 800W AC POWER SUPPLY BACK2FRONT COOLING (NA PC)
- EC7205E0F-E6 800W AC POWER SUPPLY FRONT2BACK COOLING (NA PC)
- EC7205F0B-E6 800W AC POWER SUPPLY BACK2FRONT COOLING (ANZ PC)
- EC7205F0F-E6 800W AC POWER SUPPLY FRONT2BACK COOLING (ANZ PC)

## Before you begin


Remove the power cord before installing or removing the power supply.



The design of the latch mechanism that secures the power supply enforces this safety practice.

#### **Procedure**


1. If there is a power supply cover, remove it and save for possible future use. To remove the cover, push the tab on the spring latch to the left and pull on the extraction handle.

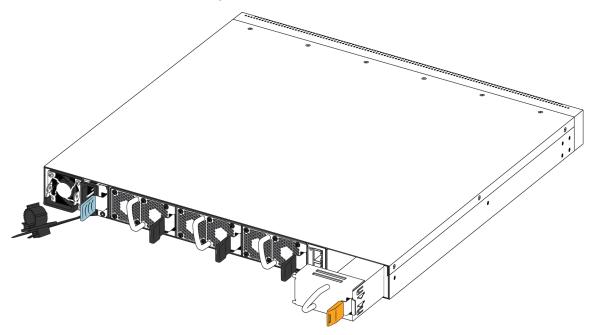

## Important:

If you only have one power supply installed, the other slot must be covered to ensure proper ventilation. If a power supply fails, replace it as soon as you can but leave it in place until you do. Leaving a power supply slot unpopulated impairs the ability of the fans to cool the chassis.

2. Slide the power supply into the slot.

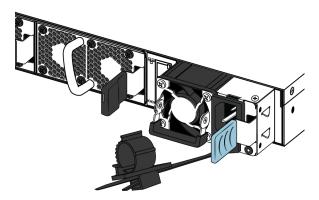

3. Verify that the power supply is fully seated in the slot. The spring latch should engage and return to its original position.



#### Note:

The chassis design prevents an incorrect installation of a power supply. If you insert a power supply upside down, it will not fully insert.

4. Once you install a power supply, you can connect the AC power cord to the power supply on the back of the switch, and then connect the cord to an AC power outlet.

## Important:

The VSP 7200 Series does not have an AC power switch. When you connect the power cord to a power supply and connect the cord to an AC power outlet, the switch powers up immediately.

## 🛕 Warning:

Disconnecting the AC power cord is the only way to turn off AC power to the VSP 7200 Series. Allow at least 30 seconds for the VSP 7200 Series to fully power down before restoring power. Otherwise, the VSP 7200 Series might produce a core file during the reset leading to an extra delay during boot time. Always connect the AC power cord in a location that is quickly and safely accessible in case of an emergency.

5. Check the LED on the bottom right side of the power supply. Solid green indicates that power is operating normally. If it's off, check the connections.

## Important:

You can hot swap power supplies while the switch is operational. One power supply is required for continued switch operation.

## AC power supply specifications

The VSP 7254XSQ comes with an 460 W AC power supply and you can install a secondary power supply for redundancy.

The VSP 7254XTQ comes with an 800 W AC power supply and you can install a secondary power supply for redundancy.



## **Important:**

You must have either a power supply or a power supply cover in each bay to ensure proper ventilation. Leaving a power supply bay unpopulated or uncovered impairs the ability of the fans to cool the chassis.



Figure 4: AC power supply

The AC power supplies use an IEC 60320 C16 AC power cord connector. The AC power cord is in close proximity to the hot air exhaust, and supports high operating temperatures.



Figure 5: IEC 60320 C16 connector

The following table describes the regulatory AC power specifications for the VSP 7200 Series switches. Note that regulatory power specifications are based on the maximum rated capacity of the power supplies and are not based on typical power consumption, which is typically lower.

Table 4: 460 W AC power specifications

	7254XSQ
Input Current:	460 W/90 or 460/180 @88%,
	5.8 A maximum at low input voltage
	2.9 A maximum at high input voltage
Input Voltage (rms):	100–127 V or 200–240 V, 47–63 Hz (50–60 Hz nominal)
Power Consumption:	460 W maximum
Thermal Rating:	1570 BTU/Hr maximum

Table continues...

	7254XSQ
Inrush Current:	55 A maximum
Turn on Condition:	5–400 ms delay after application of AC power
Important:	
The output rise time, from 10 to 90 percent, is 70 ms maximum and monotonic under all defined input and output conditions.	
Efficiency:	85 percent minimum

Table 5: 800 W AC power specifications

	7254XTQ
Input Current:	9.9–4.79 A
Input Voltage (rms):	100–240 V, 47–63 Hz
Power Consumption:	800 W maximum
Thermal Rating:	2730 BTU/Hr maximum
Inrush Current:	40 A maximum
Turn on Condition:	1 second maximum after application of AC power
Important:	
The output rise time, from 10 to 90 percent, is 50 and output conditions.	) ms maximum and monotonic under all defined input
Efficiency:	70 percent minimum

## **AC** power cord specifications

To connect AC power to the switch, you need an appropriate AC power cord as described in the following table, also see the following table for plug specifications.

Table 6: International power cord specifications

Country and Plug Specification	Specifications	Typical Plug
Continental Europe:	• 220 or 230VAC	
CEE7 standard VII male plug	• 50 Hz	
<ul> <li>Harmonized cord (HAR marking on the outside of the cord jacket to comply with the CENELEC Harmonized Document HD-21)</li> </ul>	Single phase	22904
United States of America, Canada, and Japan:	• 100 or 120VAC	
NEMA5-15P male plug	• 50–60 Hz	5
UL-recognized (UL stamped on cord jacket)	Single phase	III III A
CSA-certified (CSA label secured to the cord)		22104

Table continues...

Country and Plug Specification	Specifications	Typical Plug
United Kingdom:	• 240VAC	22507A
BS1363 male plug with fuse	• 50 Hz	
Harmonized cord	Single phase	
Australia:	• 240VAC	
AS3112-1981 male plug	• 50 Hz	
	Single phase	25004



## 🛕 Danger:

#### Using power cords with a proper grounding path

Use only power cords that have a grounding path. Without a proper ground, a person who touches the switch is in danger of receiving an electrical shock. Lack of a grounding path to the switch can result in excessive emissions.

## Installing a DC power supply

## **Important:**

Avaya does not support installing a combination of AC-input and DC-input power supplies in the same chassis.

The VSP 7200 Series Series supports two field-replaceable 800 W DC power supplies. One comes with the switch and you can install a second power supply to provide redundancy and load sharing. Both the VSP 7254XSQ (fiber switch) and the VSP 7254XTQ (copper switch) use the same DC power supply model: EC8005001-E6 (front-to-back cooling).

There are two power supply slots (PSU1 on the left side and PSU2 on the right).

- If you only have one power supply, you can install it in either PSU1 or PSU2.
- If you install a second power supply, neither one acts as a primary power supply. The two power supplies load share equally.

#### Before you begin


Remove the power cord before installing or removing the power supply.



The design of the latch mechanism that secures the power supply enforces this safety practice.

#### **Procedure**


1. If there is a power supply cover, remove it and save for possible future use. To remove the cover, push the tab on the spring latch to the left and pull on the extraction handle.

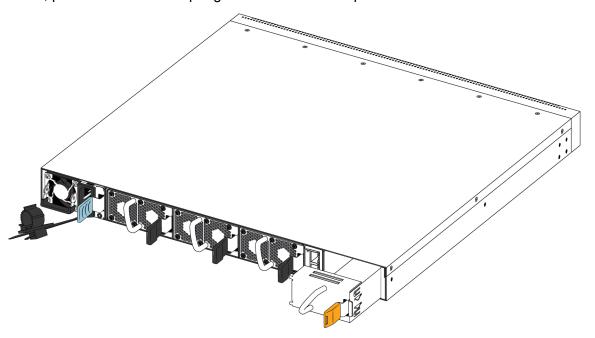

## **Important:**

If you only have one power supply installed, the other slot must be covered to ensure proper ventilation. If a power supply fails, replace it as soon as you can but leave it in place until you do. Leaving a power supply slot unpopulated impairs the ability of the fans to cool the chassis.

2. Slide the power supply into the slot.

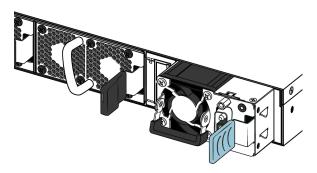

3. Verify that the power supply is fully seated in the slot. The spring latch should engage and return to its original position.

### Note:

The chassis design prevents an incorrect installation of a power supply. If you insert a power supply upside down, it will not fully insert.


## Important:

The VSP 7200 Series does not have a power switch. When you connect the DC power source to the DC power supply wiring assembly and then plug the DC power supply wiring assembly into the DC power supply, the switch powers up immediately.

#### Warning:

Disconnecting the DC power supply wiring assembly from the power supply is the only way to turn off DC power to the VSP 7200 Series. Allow at least 30 seconds for the VSP 7200 Series to fully power down before restoring power. Otherwise, the VSP 7200 Series might produce a core file during the reset leading to an extra delay during boot time.

- 4. Once you install a power supply, use the following steps to connect the DC power supply wiring assembly:
  - a. Avaya supplies a DC power supply wiring assembly to connect the DC power supply to the DC input power source.

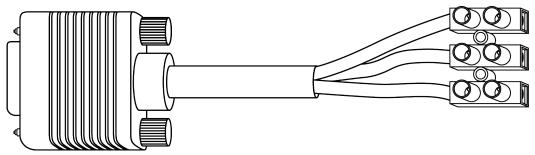


b. Refer to the tag attached to the DC power supply wiring assembly to insert the cables into their appropriate connectors.

## 🛕 Voltage:

Ensure that the positive and negative power inputs are connected to the correct connectors and that the switch is properly grounded before connecting it to a power source.

c. Use a screwdriver to terminate the cables to the DC power supply wiring assembly.

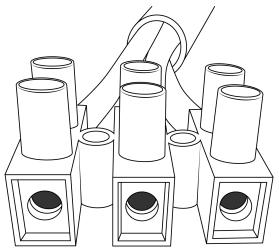

- d. Connect the DC power supply wiring assembly to the DC power supply and screw it in to secure the connection.
- 5. Check the LED on the top right side of the power supply. If it is off, the power supply is not operating. If it is green, the power supply is operating normally. The following table describes all the LED states.

Table 7: DC power supply LED states

Color and Status	Description	
Off	There is no DC power to either power supply.	
Green (steady)	There is output and the power supply is operating normally.	
Green (blinking)	The power supply is present, but its output is standby voltage (12VSB).	
Amber (steady)	SHUTDOWN: The power supply is not supplying power to the switch because the power cord is unplugged or the power supply shutdown for faults such as a fan failure or exceeding limits for Over Current Protection (OCP) or Over Voltage Protection (OVP).	
Amber (blinking)	WARNING: The power supply continues to operate, but there are one or more warning events such as high temp, high power, high current, or a slow fan.	

## Important:

You can hot swap power supplies while the switch is operational. One power supply is required for continued switch operation.

## DC power supply specifications

The VSP 7200 Series comes with one 800 W DC power supply and you can install a secondary power supply for redundancy.

## Important:

You must have either a power supply or a power supply cover in each bay to ensure proper ventilation. Leaving a power supply bay unpopulated or uncovered impairs the ability of the fans to cool the chassis.

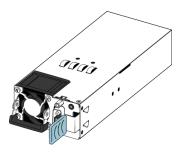


Figure 6: DC power supply

The 800 W DC power supply uses a DC power supply wiring assembly to connect the power supply to the DC power source.

The following table describes the regulatory DC power specifications for the VSP 7200 Series switch. Note that regulatory power specifications are based on the maximum rated capacity of the power supplies and are not based on typical power consumption, which is typically lower.

**Table 8: DC power specifications** 

	VSP 7254XSQ or 7254XTQ
Input Current:	24–16 A
Input Voltage (rms):	40.5 to 60 VDC
Power Consumption:	800 W maximum
Temperature:	Operating range: 0 to 50 °C
	Non-operating range: -40 to 70 °C
Inrush Current:	50 A maximum
Turn on Condition:	500 ms maximum after application of DC power
Important:	
12 V output rise time, from 10 to 90 percent, mus defined input and output conditions.	st be the maximum of 70 ms and monotonic under all
Efficiency:	88% minimum at 100% load level
	92% minimum at 50% load level
	88% minimum at 20% load level
	80% minimum at 10% load level

## Removing a power supply

You can hot swap power supplies while the switch is operational.

#### **Procedure**

- 1. Disconnect the power cord from the power supply.
- 2. Lift up the power supply handle so you can grasp it.
- 3. Push the spring latch to the left and use the power supply handle to pull the power supply out of the chassis.
- 4. If you are replacing the power supply, see <u>Installing an AC power supply</u> on page 24 or <u>Installing a DC power supply</u> on page 29. If not, re-install the filler panel.

## Installing a fan module

The VSP 7200 Series comes with three 12–V fan modules for either front-to-back or back-to-front air flow switch cooling.

## Important:

Make sure the air flow direction of your power supplies matches the same direction for your fan modules.

Refer to the following part numbers to ensure that you install the correct fan modules in your switch. Both the VSP 7254XSQ (fiber switch) and the VSP 7254XTQ (copper switch) use the same fan module models:

- EC7200BTF-E6 12 V BACK2FRONT SPARE FAN MODULES (INC 3 FAN MODULE KITS)
- EC7200FTB-E6 12 V FRONT2BACK SPARE FAN MODULES (INC 3 FAN MODULE KITS)

There are sensors inside the chassis that monitor the temperature. These sensors send information to a controller that automatically regulates the fan speed to maintain the proper temperature. If any sensor exceeds its threshold, an alarm is sent. When the temperature cools by 2° below the threshold, the alarm clears.

Use this procedure if a fan fails and you have to replace it.

## Important:

All three fan modules must be installed at all times to ensure proper ventilation. If a fan fails, replace it as soon as you can but leave it in place until you do. Leaving a fan bay unpopulated impairs the ability of the remaining fans to cool the chassis.


#### **Procedure**

- 1. Check the Fan LED on the front of the chassis. Solid green indicates that all fan modules are operating normally. Blinking amber indicates that a fan module failed.
- 2. Enter the following command to determine which fan module failed.

```
show sys-info fan
```

This command shows the status of each fan module: up, down, or Not Present when a fan is removed.

3. Remove the fan module that failed by pushing the tab on the spring latch to the left and pulling on the fan's extraction handle.

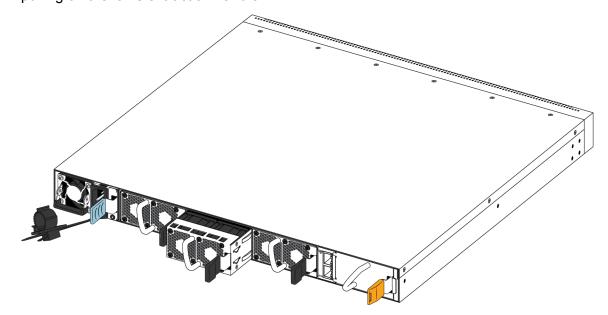

4. Insert the new fan module into the chassis.

#### Important:

You can hot swap fan modules while the switch is operational.

- 5. Verify that the fan module is fully seated in the chassis. The spring latch should engage and return to its original position.
- 6. Enter the following command to check the temperature sensors inside the switch.

```
show sys-info temperature
```

#### **Example**

Check the status of the fan modules.



#### Note:

There are three fan modules in the VSP 7200 Series and each fan module has two fans for a total of six fans. Each fan has its own ID and the show sys-info fan command reports its status.

The Fan IDs are assigned from left to right as you face the back of the chassis. For the first fan module on the far left, the Fan IDs are 1 and 2, the next fan module has Fan IDs 3 and 4, and the fan module on the far right has Fan IDs 5 and 6.

Fan Id	Fan Status	Fan Type	FanFlowType
 1	up	regularSpeed	front-back
2	up	regularSpeed	front-back
3	up	regularSpeed	front-back
4	up	regularSpeed	front-back
5	up	regularSpeed	front-back
6	ир	regularSpeed	front-back

Check the internal temperature of the switch.



#### Note:

The output of this command is different between the VSP 7254XSQ and the VSP 7254XTQ. An example of both is shown below.

```
VSP-7254XSQ:1>show sys-info temperature
Temperature Info :
                                   MAC2 Temperature
   CPU Temperature MAC Temperature
            34
       25
                                        29
VSP-7254XTQ:1>show sys-info temperature
Temperature Info :
   CPU Temperature
                 MAC Temperature
                                   PHY1 Temperature
                                                   PHY2 Temperature
      28
             38
                                  32
                                                        30
```

## LED state definitions

The figures and tables in the following sections describe the LEDs on the Avaya Virtual Services Platform 7200 switch. The tables describe LED operation for a switch that finishes the power-on self-test.



#### Warning:

Fiber optic equipment can emit laser or infrared light that can injure your eyes. Never look into an optical fiber or connector port. Always assume that fiber-optic cables are connected to a light source.

## Switch LEDs

The following table describes the main switch LED state indications provided by LED color and fluctuation cues.

### Important:

In addition to the fan modules, each power supply also has a fan. The power supply stops working if a power supply fan fails, but there is no LED or software warning that indicates this failure. Try to recover the power supply fan by resetting the switch. If the fan does not recover, then replace the faulty power supply.

**Table 9: Switch LED state indicators** 

Label	Color and Status	Description
PWR	Off	The switch is not receiving power and not operating.
	Green (steady)	The switch is receiving power from either one of the power supplies (if two power supplies are installed).
	Green (blinking)	The switch is resetting.
Status	Off	The switch is non-operational.
	Amber (steady)	The switch encountered an error when running the diagnostic software.
	Amber (blinking)	The switch is booting and running diagnostic software. This is normal activity during the boot process.
	Green (steady)	The switch loaded the agent software code and is operating normally.
	Green (blinking)	The switch is loading the agent software code.
RPS	Off	A second power supply is not present in either PSU1 or PSU2.
	Amber (steady)	The second power supply, which was operating in either PSU1 or PSU2, was removed from the chassis.
	Amber (blinking)	The second power supply in either PSU1 or PSU2 is present, but not supplying power to the switch.
	Green (steady)	The second power supply (in either PSU1 or PSU2) is present and operating normally as a redundant power supply (RPS).
Fan	Amber (steady)	A fan module has been removed.
	Amber (blinking)	A fan module has failed.
	Green (steady)	All fan modules are operating normally.

# 100 Mbps/1 Gbps/10 Gbps RJ-45 port LED state indicators

This section describes the RJ-45 copper port LED state indicators by color and fluctuation cues. The up arrow on the left indicates the top port; the down arrow on the right indicates the bottom port.

Table 10: 100 Mbps/1 Gbps/10 Gbps port LED state indicators

Label	Color and Status	Description
Link/Act	Off	There is no transceiver present and the port is administratively enabled.
	Amber (steady)	The port has a link in 100 Mbps mode.
	Amber (blinking)	The port has a link and data activity in 100 Mbps mode.
	Green (steady)	The port has a link in 1 Gbps mode.
	Green (blinking)	The port has a link and data activity in 1 Gbps mode.
	Green (slow blinking)	The port is administratively disabled.
	Blue (steady)	The port has a link in 10 Gbps mode.
	Blue (blinking)	The port has a link and data activity in 10 Gbps mode.

# SFP and SFP+ port LED state indicators

This section describes the transceiver port LED state indicators by color and fluctuation cues. These ports use the LED on the left side of the port (**Link/Act**) to indicate whether or not the link is established and if a transceiver is present and active.

The LED on the right side of the port (**In Use**) indicates the operating speed of the transceiver.

Table 11: SFP/SFP+ port LED state indicators

Label	Color and Status	Description
Link/Act	Off	There is no transceiver present and the port is administratively enabled.
	Amber (steady)	The port is actively transmitting, but there is no link. This indicates a local fault.
	Amber (blinking)	The port received a remote fault indicator (RFI).
	Green (steady)	The port has established a link.
	Green (blinking)	The port has established a link and there is data activity.
	Green (slow blinking)	The port is administratively disabled.
In Use	Off	Operating at low speed (10 Mbps if SFP, 100 Mbps if SFP+)
	Green (steady)	Operating at mid speed (100 Mbps if SFP, 1 Gbps if SFP+)
	Green (blinking)	Operating at high speed (1 Gbps if SFP, 10 Gbps if SFP+)

## **QSFP+ port LED state indicators**

This section describes the transceiver port LED state indicators by color and fluctuation cues. The **Link/Act**) indicates whether or not the link is established and if a transceiver is present and active.

Each 40 Gb QSFP+ port can be channelized into  $4 \times 10$  Gb ports. To support channelization, each QSFP+ port has four status LEDs under the port. When the QSFP+ port is not channelized, only the LED on the left side of the port is used.

Table 12: SFP/SFP+ port LED state indicators

Label	Color and Status	Description
Link/Act	Off	There is no transceiver present and the port is administratively enabled.
	Amber (steady)	The port is actively transmitting, but there is no link. This indicates a local fault.
	Amber (blinking)	The port received a remote fault indicator (RFI).
	Green (steady)	The port has established a link.
	Green (blinking)	The port has established a link and there is data activity.
	Green (slow blinking)	The port is administratively disabled.

## Management port LED state indicators

The management port is on the rear of the chassis between the fans and the right-hand power supply (PSU2). The management port is the RJ–45 jack above the console port.

The management port provides 10/100/1000 BaseT Ethernet connectivity and uses two bi-colored LEDs to indicate the activity and speed of the link.

- The LED on the top of the port (**Speed**) indicates the current speed of the port.
- The LED on the bottom of the port (**Link/Act**) indicates the status of the link and whether or not it's active.

Table 13: Management port LED state indicators

Label	Color and Status	Description
Speed	Off	The port is operating at the low speed.
	Amber (steady)	The port is operating at mid speed.
	Green (steady)	The port is operating at high speed.
Link/Act	Off	The port has no data activity.
	Amber (steady)	The port has a fault.
	Amber (blinking)	The port is enabled, but it has not established a link.
	Green (steady)	The port has established a link, but there is no data activity.
	Green (blinking)	The port has established a link and there is data activity.
	Green (slow blinking)	The port is administratively disabled.

# **Enterprise Device Manager (EDM) representation of physical LED** status

EDM displays the same LEDs that you see on the physical device.



#### Note:

LED blinking in EDM is representative of, but not identical to, the actual LED blinking rates on the switch.

For more information about the LEDs and a description of the blinking rates, see the preceding LED sections.

# Installing the switch in an equipment rack

There are two ways to install the switch in an equipment rack. Refer to one of the following sections:

- Slide Rack Mount Kit-This is a separately ordered option that you can use to install your switch in an equipment racks that range from 300mm to 900mm deep. For installation instructions, see Using the optional slide rack mount kit on page 41.
- Brackets-The switch comes with brackets that you can install on the chassis.

For installation instructions, see Using the supplied bracket on page 55.

#### Before you begin

- Ensure that you have a space of 1.75 inches (4.45 centimeters) in height for each switch in an EIA or IEC-standard 19-inch (48.2-centimeter) equipment rack.
- The rack is bolted to the floor and braced if necessary.
- The rack is grounded to the same grounding electrode used by the power service in the area. The ground path must be permanent and must not exceed 1 Ohm of resistance from the rack to the grounding electrode.

#### About this task



#### Caution:

When you mount the device in a rack, do not stack units directly on top of one another. You must secure each unit to the rack with the appropriate mounting brackets. Mounting brackets cannot support multiple units. For a translation of this statement, see Translations of safety messages on page 60.

## Using the optional slide rack mount kit

The Universal Slide Rack Mount Kit is adjustable so that you can install your switch in equipment racks of different sizes. Use the following procedures to install your switch in equipment racks with a depth from 300mm to 900mm.

This kit is a separately ordered item (Part # EC8011002).



### Note:

The illustrations show the VSP 7200 as an example, but the instructions apply to any switch in the Avaya Virtual Services Platform 7200 Series and Avaya Virtual Services Platform 8000 Series.

#### For instructions see:

- Installing slides in a 300mm-600mm equipment rack on page 41
- Installing slides in a 600mm-900mm equipment rack on page 49
- Important notice about rack safety on page 54
- Removing the switch from an equipment rack on page 54



#### **Marning:**

If you pull the switch all the way out on the slide rails, there is a danger of the rack tipping over. For more information and guidelines, see Important notice about rack safety on page 54.


### Installing slides in a 300mm-600mm equipment rack

Use the following procedure to install your switch in an equipment rack with a depth between 300mm and 600mm.


#### **Procedure**

1. Disconnect the power cord from the switch.


- 2. Use the following steps to detach the chassis rail from the slide's rack rail:
  - a. Pull the inner chassis rail and slide it out as far as you can.

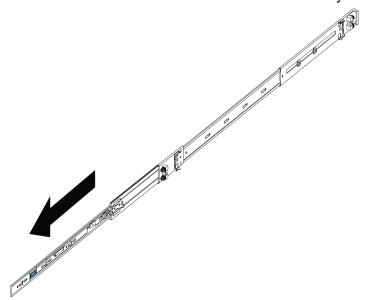


b. Slide the white release lock in the direction of the arrow stamped on the lock.

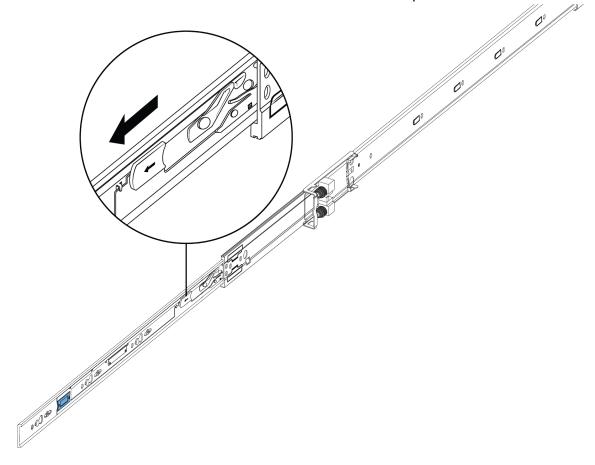


3. Lift the locking mechanism on the rack rail to slide the outer section back into the main

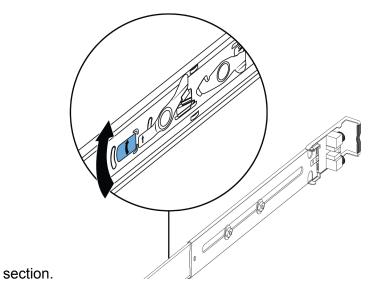


- 4. Use the following steps to attach the chassis rail to the chassis:
  - a. Orient the chassis rail with the blue release lock towards the front and position the rail over the standoffs on the chassis.

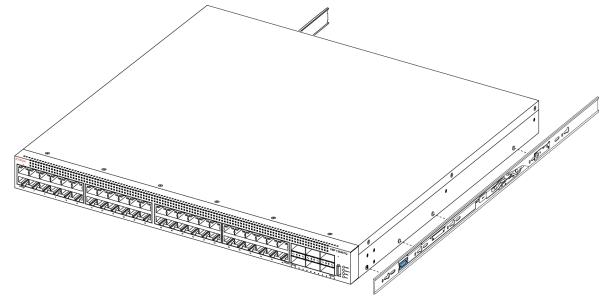

b. Slide the chassis rail to the rear until the rail locks into the standoffs.

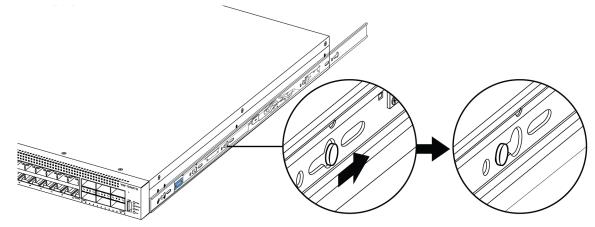


c. Make sure the safety tab locks into place.

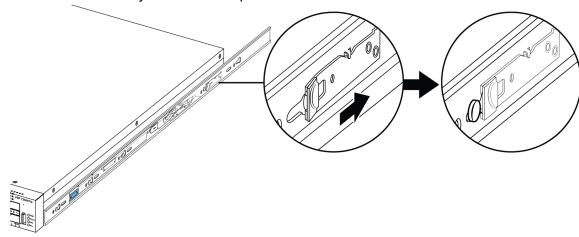


- 5. Use the following steps to secure the rack rails to the frame:
  - a. Orient the rack rail so that the end with the black latch is facing front.


b. Adjust the length of the rack rail so it fits the rack depth by loosening the two screws on the rack rail, adjusting the length, and then tightening the screws.

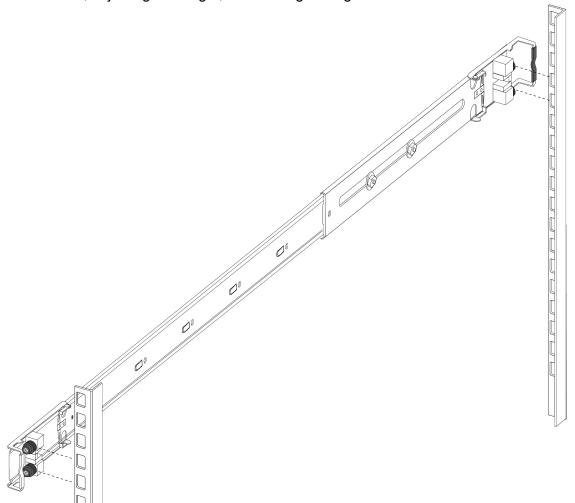



c. Push the end of the front bracket assembly so it opens up.

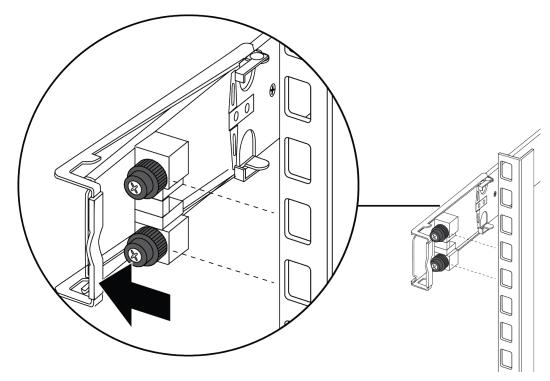

d. Insert the bracket pins into the desired holes in the frame.

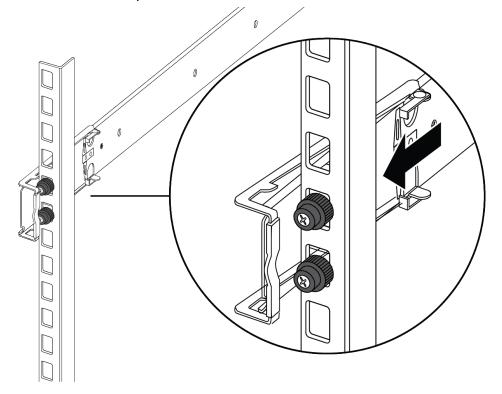




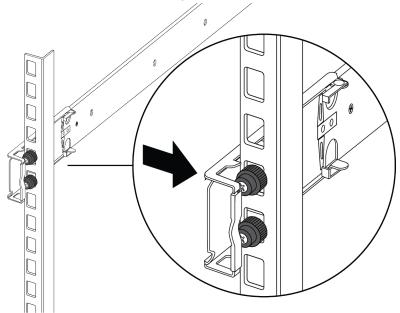


- f. Repeat the above steps on the rear bracket.
- g. Repeat these steps for the rack rail on the other side of the frame.

- 6. Use the following steps to install the switch in the equipment rack to complete the installation:
  - a. Insert the chassis rails on the switch into the rack rails on the frame.

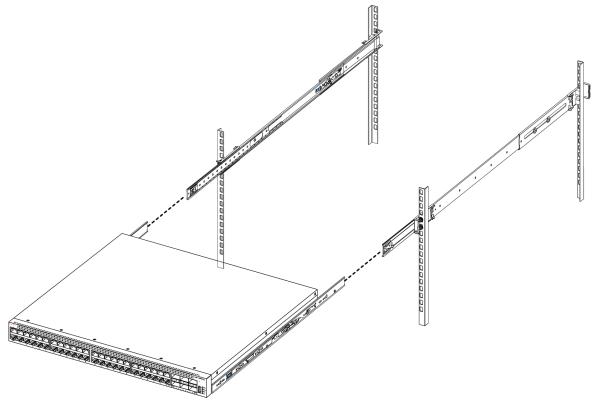


b. Pull the blue locks on the chassis rails towards the front and slide the switch into the frame.

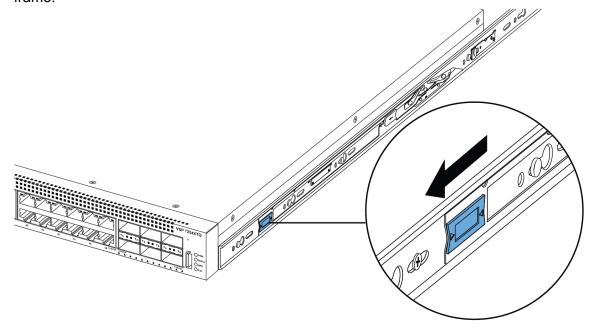

#### Note:

After you install the switch in a rack, slide it out until the lock (shown above) engages.

To slide the switch back into the rack, push the blue locks on the chassis rails towards the back and slide the switch into the frame.

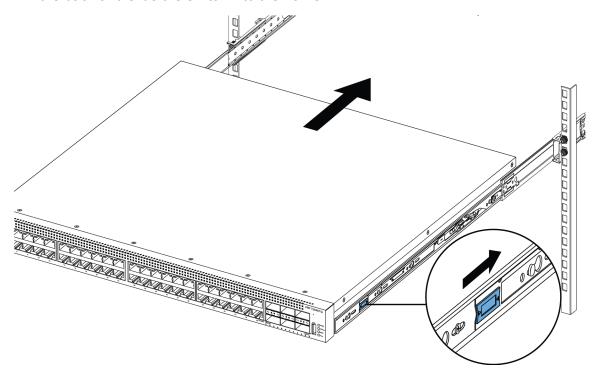


7. Connect power and network connections to the switch.

# Installing slides in a 600mm-900mm equipment rack


Use the following procedure to install your switch in an equipment rack with a depth between 600mm and 900mm.

#### **Procedure**


- 1. Disconnect the power cord from the switch.
- 2. Detach the chassis rail from the slide's rack rail. (See Step 2 of <u>Installing slides in a 300mm-600mm equipment rack</u> on page 41.)
- 3. Lift the locking mechanism on the rack rail to slide the outer section back into the main section. (See Step 3 of the 300mm-600mm instructions.)
- 4. Attach the chassis rail to the chassis. (See Step 4 of the 300mm-600mm instructions.)
- 5. Remove the two screws and nuts securing the short rear bracket to the rack rail. This bracket is for 300mm-600mm equipment racks only and is not used in this installation. Save the bracket for possible future use.

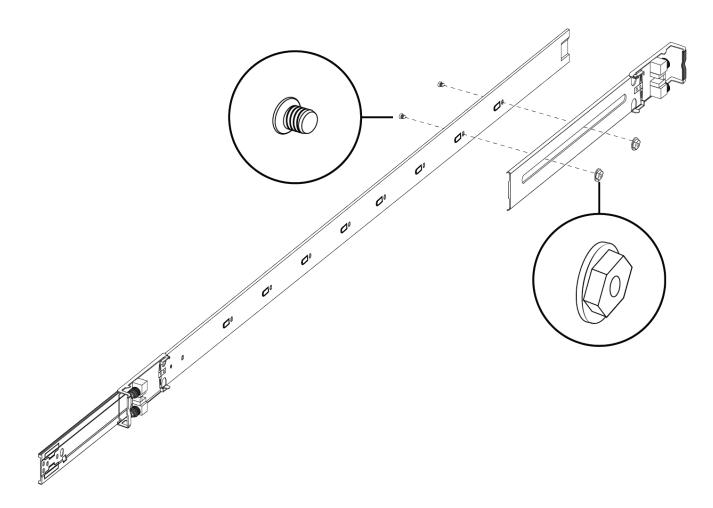

- 6. Use the bag with 10 countersink screws and following steps to attach the supporting plates to the rack rails:
  - a. Push the release lock up and slide the middle rail out as far as possible.

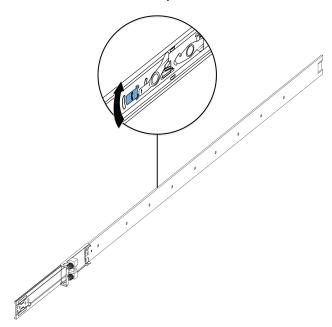


- b. Orient the supporting plate over the holes in the rack rail.
- c. Install the first two screws on one end.
- d. Lift the locking mechanism and slowly slide the rail back into the main assembly. This exposes a "window" over the screw holes so you can install the remaining three screws one at a time.

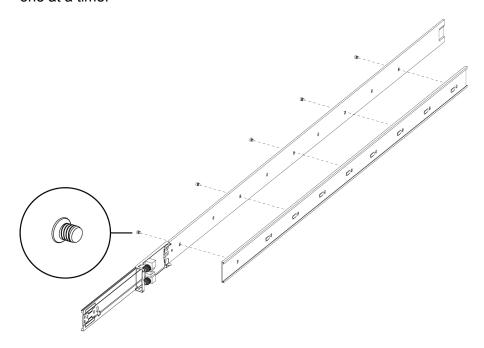

7. Insert the long rack rail bracket into the supporting plate.



- 8. Use the following steps to secure the rack rails to the frame:
  - a. Orient the rack rail so that the end with the black latch is facing front.
  - b. Push the end of the front bracket assembly so it opens up.
  - c. Insert the bracket pins into the desired holes in the frame.

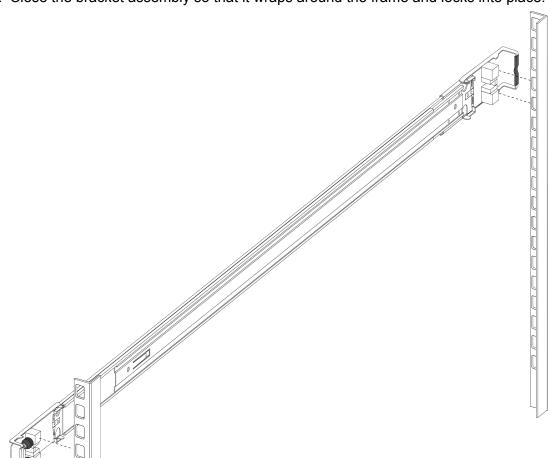

d. Close the bracket assembly so that it wraps around the frame and locks into place.

- e. Repeat the above steps on the rear bracket.
- f. Repeat these steps for the rack rail on the other side of the frame.
- 9. Install the switch in the equipment rack to complete the installation. (See Step 6 of the 300mm-600mm instructions.)
  - a. Insert the chassis rails on the switch into the rack rails on the frame.
  - b. Pull the blue locks on the chassis rails towards the front and slide the switch into the frame.

### Note:

After you install the switch in a rack, slide it out until the lock (shown above) engages.

To slide the switch back into the rack, push the blue locks on the chassis rails towards the back and slide the switch into the frame.

10. Connect power and network connections to the switch.

### Important notice about rack safety

One prerequisite to installing the switch in an equipment rack is to bolt the equipment rack to the floor.



### **Marning:**

If you pull the chassis all the way out on the slide rails, there is a danger of the rack tipping over. This can happen if there are no other devices installed in your equipment rack and the rack is not bolted to the floor.

### Removing the switch from an equipment rack

Follow these steps if you have to remove the switch from an equipment rack.




#### **Important:**


This procedure requires two people.

#### **Procedure**

- 1. Disconnect the power cord from the switch.
- 2. Slide the switch out until the lock engages.

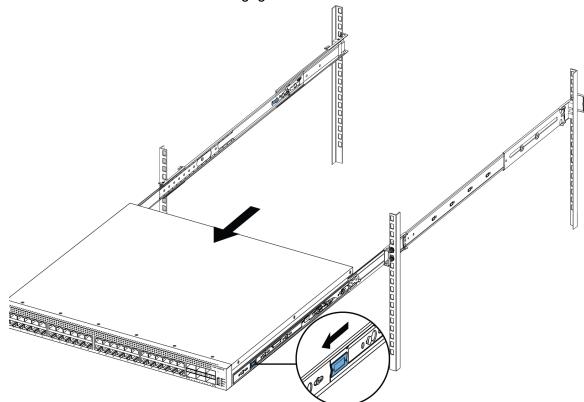

3. While the person standing in back of the chassis slides both of the white release locks (one on each side of the chassis) towards the front, the person standing in front of the chassis

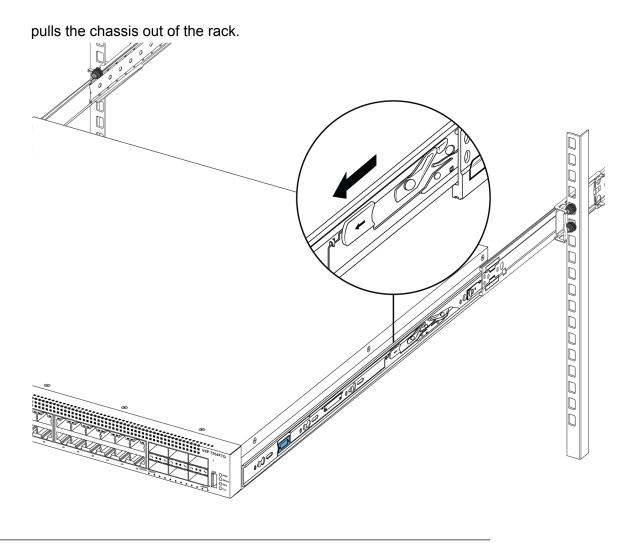

# Using the supplied brackets

This procedure describes how to install the switch in an equipment rack using the supplied brackets. The brackets that come with the chassis are for mounting the unit in a standard 19-inch rack. Avaya recommends that you mount a tray into the rack and set the chassis upon the tray. The brackets secure the chassis and prevent it from sliding off the tray during vibration or when inserting or extracting transceivers.




#### Caution:

Do not mount the chassis in a rack without using a customer-supplied tray under the chassis. The chassis weight will cause damage to a rack, especially in an environment with vibration or in an earthquake prone area.


#### **Procedure**

1. Disconnect the power cord from the switch.

2. Attach a bracket to each side of the switch using a #2 Phillips screwdriver as illustrated below.

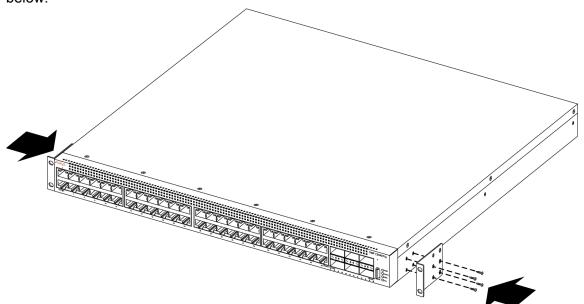

- 3. Slide the switch onto a shelf or tray in the rack.
- 4. Insert and tighten the rack-mount screws.

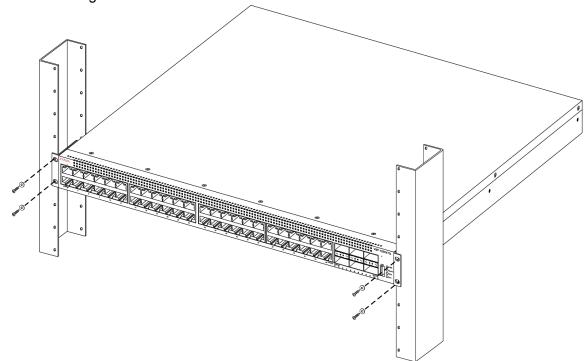

- 5. Verify that the switch is securely fastened to the rack.
- 6. Connect power and network connections to the switch.

# Cable requirements for the VSP 7200

The following table describes the cables required for an Avaya Virtual Services Platform 7200 Seriesswitch.

**Table 14: Switch cable requirements** 

Required Cable	Description
10/100/1000Base TX Ports	The interconnect cabling must conform to the Cat5e, Cat6, or Cat6e specification of the Commercial Building Telecommunications Cabling Standard, ANSI/TIA/EIA 568-B fitted with an RJ-45 Module jack.
Console Port	Varies depending on the user device. The VSP 7200 has an RJ-45 female connector so a serial cable with an RJ-45 connector on one end and an RJ-45 on the other is appropriate. The maximum length for the console port cable is 25 feet (8.3 meters).
SFP+ and QSFP+ Transceiver Ports	Varies with the installed transceiver. See the documentation shipped with the transceiver for specifications.

## Installation and removal of transceivers

The following sections describe how to install and remove transceivers in the Avaya Virtual Services Platform 7200 Series switch. In this context, the term *transceiver* refers to Small Form Factor Pluggable (SFP), SFP+, and Quad 4-channel SFP (QSFP+).

For more information about transceiver use and designation, see *Installing Transceivers and Optical Components on Avaya Virtual Services Platform 7200 Series and 8000 Series*, NN47227-301.

### Installing transceivers


Install transceivers by performing this procedure.

- Remove the transceiver from the protective packaging.
- 2. Verify that the transceiver is the correct model for the network configuration.
- 3. Grasp the transceiver between your thumb and forefinger.
- 4. Insert the transceiver into the proper slot on the switch. Apply a light pressure to the transceiver until it clicks and locks into position.
- 5. Remove the dust cover from the transceiver optical bores.

# Removing transceivers

Remove transceivers by performing this procedure.

- 1. Disconnect the network fiber cable from the transceiver.
- 2. Use the locking mechanism on the transceiver to release it. The locking mechanism varies from model to model as illustrated below.

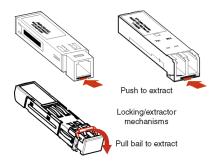

- 3. Slide the transceiver from the port.
- 4. If the transceiver does not slide easily from the port, use a gentle side-to-side rocking motion while firmly pulling the transceiver from the port.
- 5. Attach a dust cover over the fiber-optic bores and store the transceiver in a safe place until you need it.
  - Important:

Discard transceivers in accordance with the proper laws and regulations.

# Console port pin assignments

The following section describes the console pin assignments for the RJ-45 connectors in the Avaya Virtual Services Platform 7200 Series.

Table 15: Console port pin assignments

Connector	Pin Number	Signal
	1	Ready to send (RTS) — optional
	2	Data terminal ready (DTR) — optional, can swap or link with pin 8
87654321	3	Transmit data (TXD) — mandatory
	4	Carrier detect (DCD) — optional
	5	Ground (GND) — mandatory

Table continues...

Connector	Pin Number	Signal
	6	Receive data (RXD) — mandatory
	7	Data set ready (DSR) — optional
	8	Clear to send (CTS) — optional, can swap or link with pin 1

# **40GBASE-QSFP+ ports**

When a 40 Gigabit port is channelized, only use break out cables (DAC or Fiber) in it. Otherwise, the link behavior can be unpredictable because it can result in mismatched link status between link partners, which can further lead to network issues.

Also avoid the use of break out cables in non-channelized 40 Gigabit ports because this can result in mismatched link status between link partners, which can lead to network issues.

# Chapter 6: Translations of safety messages

#### Caution:

When you mount this device in a rack, do not stack units directly on top of one another. You must secure each unit to the rack with appropriate mounting brackets. Mounting brackets cannot support multiple units.

### Important:

#### Achtung:

Wenn diese Einheit in einem Rack montiert wird, muß ein gewisser Abstand zur nächsten Einheit gelassen werden. Jede Einheit muß mit geeignetem Befestigungsmaterial gesichert werden. Das Befestigungsmaterial ist nicht für die gleichzeitige Befestigung mehrerer Einheiten geeignet.

### **!** Important:

Si vous installez le module dans une baie, ne l'empilez pas directement sur un autre. Chaque module doit être fixé à sa propre baie à l'aide des supports de montage appropriés. Ces supports ne sont pas conçus pour résister à plusieurs modules.

### Important:

#### Precautión:

Cuando monte este dispositivo en un bastidor, no apile las unidades directamente una encima de otra. Cada unidad debe fijarse en el bastidor con las abrazaderas de montaje adecuadas. Las abrazaderas de montaje no están diseñadas para sostener varias unidades.

### **Important:**

Se il dispositivo viene installato in un rack, non impilare le unità direttamente una sull'altra. Ogni unità deve essere fissata al rack con le staffe di montaggio appropriate. Le staffe di montaggio non sono state progettate per supportare più unità.



**警告**: 在机架中安装此设备时,请勿将多个部件叠放在机架中。必须用合适的 安装托架将各个部件固定在机架中。安装托架无法支撑多个部件。



注意:この装置をラックに設置する場合は、ラック内のコニットを直接積み重 ねないようにしてください。各ユニットは専用の取り付けブラケットでラック に固定する必要があります。取り付けプラケットは複数のユニットを支えるよ うには設計されていません。

注意:在機箱中掛載此裝置時,請不要直接在機箱中的另一個裝置上直接堆放裝置。 每一装置都必須使用適當的掛載托架以固定在機架中。掛載托架不能用來支撑多個 装置・

#### Caution:

If you are not installing a module in the slot, be sure to keep the metal cover plate in place over the slot. Removing the cover plate impedes airflow and proper cooling of the unit.

### Important:

#### Achtung:

Wenn Sie kein Modul im Schacht verwenden, muß die Metallabdeckung über dem Schacht montiert sein. Eine Entfernung der Abdeckung führt zu einer Verschlechterung der Luftzirkulation und damit zu einer nicht ausreichenden Kühlung der Einheit.

### **!** Important:

Si vous n'installez pas le module dans une baie, veillez à laisser la plaque métallique sur la baie. Si vous la retirez, l'aération du module ne peut pas s'effectuer correctement.

### Important:

#### Precaution:

Si no instala ningún módulo en la ranura, asegúrese de mantener la placa de la cubierta de metal en la misma. Si la retira, impedirá que el aire circule y la unidad se refrigere adecuadamente.

### Important:

#### Attenzione:

Se nello slot non vengono installati moduli, assicurarsi di mantenere la piastra di copertura metallica in sede sopra lo slot. La rimozione della piastra impedisce la ventilazione e il corretto raffreddamento dell'unità.



注意:この装置をラックに設置する場合は、ラック内のユニットを直接積み重 ねないようにしてください。各ユニットは専用の取り付けブラケットでラック に固定する必要があります。取り付けブラケットは複数のユニットを支えるよ うには設計されていません。



注意: スロットにモジュールを取り付けない場合は、スロットにある金属製の カバープレートが外れないように注意してください。カバープレートを動かす と気流が妨げられ、適切なユニット冷却が行われなくなります。



注意:如果您未在插槽中安裝模組,請確定金屬殼板正確地蓋在插槽上。移除殼板 會阻礙空氣流通以及裝置的適當冷卻度。



**警告**:如果您不打算在该插槽中安装任何模块,请务必使金属盖板正确地盖住 该插槽。如果取下盖板,将妨碍通风及部件散热。



**警告**:この装置の電源は、電源コードを抜かない限り切断できません。緊急の 場合にすばやく安全に切断できる場所に電源コードを接続してください。



警告:若要關閉此裝置的電源,拔掉插頭是唯一的方法。 為了因應緊急狀況,請將 電源線連接到可以快速插拔的地方。



#### Marning:

Disconnecting the AC power cord is the only way to turn off AC power to this device. Allow at least 30 seconds for the this device to fully power down before restoring power. Otherwise, this device might produce a core file during the reset leading to an extra delay during boot time. Always connect the AC power cord in a quickly and safely accessible location in case of an emergency.

### **Important:**

#### Warnung:

Das Gerät kann nur durch Ziehen des Netzsteckers ausgeschaltet werden. Schließen Sie das Netzkabel an einer Steckdose an, die in Notfällen schnell und sicher zugänglich ist.

### **Important:**

#### **Avertissement:**

Pour mettre le module hors tension, vous devez impérativement déconnecter le cordon d'alimentation. En outre, vous devez dégager un espace minimal dans la zone de câblage pour pouvoir y accéder facilement en cas d'urgence.



**警告:** 断开交流电源线是切断本设备的交流电源的唯一方法。交流电源线一定要 连接到在紧急时刻可以快速安全地接触到的位置。

### Important:

#### Advertencia:

Para apagar el dispositivo debe desenchufar el cable. Conecte siempre el cable de alimentación a una toma segura y de fácil acceso por si se produjera alguna situación de emergencia.

### Important:

#### Avviso:

L'unico modo per disattivare questo dispositivo consiste nello scollegare il cavo di alimentazione. Collegare sempre il cavo di alimentazione ad una presa che sia facilmente e rapidamente accessibile in caso di emergenza.

#### 🛕 Danger:

Use only power cords that have a grounding path. Without a proper ground, a person who touches the switch is in danger of receiving an electrical shock. Lack of a grounding path to the switch can result in excessive emissions.

### **Important:**

#### Vorsicht:

Verwenden Sie nur Netzkabel mit Schutzerdung. Ohne ordnungsgemäße Schutzerdung besteht für Personen, die den Switch berühren, die Gefahr eines elektrischen Schlages, Eine nichtvorhandene Schutzerdung kann zu sehr starken Abstrahlungen führen.

### A Danger:

N'utilisez que des cordons d'alimentation équipés de trajet de mise à la terre. Sans mise à la terre adaptée, vous risquez de recevoir une décharge électrique en touchant le commutateur. Par ailleurs, l'absence de trajet de mise à la terre peut générer des émissions excessives.

### **Important:**

#### Peligro:

Utilice únicamente cables de alimentación con toma de tierra. De lo contrario, al tocar el interruptor puede recibir una descarga eléctrica. Si no hay un circuito de toma de tierra en el enchufe, puede producirse un exceso de emisiones.

### **Important:**

#### Pericolo:

Utilizzare esclusivamente cavi di alimentazione dotati di un percorso per la messa a terra. Senza un'adeguata messa a terra, chiunque tocchi lo switch corre il rischio di ricevere una scossa elettrica. L'assenza di un percorso per la messa a terra verso lo switch può comportare un eccesso di emissioni.



危険:接地経路を持つ電源コードを必ず使用するようにしてください。適切な 接地がない状態でスイッチに触ると、感電する危険性があります。また、ス イッチへの接地経路がないと、過度な放電を引き起こす可能性があります。



危险:请仅使用接地的电源线。如果电源线不接地或接地不当,接触交换机 的人员可能会受到电击。如果交换机不接地,则可能导致放电过量。

#### Marning:

The lithium battery is not field replaceable. It should be removed and replaced by authorized personnel only. Contact Avaya Technical Support for assistance if the battery requires replacement.