



Upgrades and Patches — Software Release 3.1 Avaya Virtual Services Platform 9000

3.1
NN46250-400, 02.02
March 2012

Notice

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

Documentation disclaimer

“Documentation” means information published by Avaya in varying mediums which may include product information, operating instructions and performance specifications that Avaya generally makes available to users of its products. Documentation does not include marketing materials. Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of documentation unless such modifications, additions, or deletions were performed by Avaya. End User agrees to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

Link disclaimer

Avaya is not responsible for the contents or reliability of any linked Web sites referenced within this site or documentation provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warranty

Avaya provides a limited warranty on its Hardware and Software (“Product(s)”). Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya’s standard warranty language, as well as information regarding support for this Product while under warranty is available to Avaya customers and other parties through the Avaya Support Web site: <http://support.avaya.com>. Please note that if you acquired the Product(s) from an authorized Avaya reseller outside of the United States and Canada, the warranty is provided to you by said Avaya reseller and not by Avaya.

Licenses

THE SOFTWARE LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE, [HTTP://SUPPORT.AVAYA.COM/LICENSEINFO/](http://support.avaya.com/licenseinfo/) ARE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS AVAYA SOFTWARE, PURCHASED FROM AVAYA INC., ANY AVAYA AFFILIATE, OR AN AUTHORIZED AVAYA RESELLER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH AVAYA OR AN AUTHORIZED AVAYA RESELLER. UNLESS OTHERWISE AGREED TO BY AVAYA IN WRITING, AVAYA DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN AVAYA, AN AVAYA AFFILIATE OR AN AVAYA AUTHORIZED RESELLER; AVAYA RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS “YOU” AND “END USER”), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND AVAYA INC. OR THE APPLICABLE AVAYA AFFILIATE (“AVAYA”).

Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation, Software, or Hardware provided by Avaya. All content on this site, the documentation and the Product provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software unless expressly authorized by Avaya. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Avaya can be a criminal, as well as a civil offense under the applicable law.

Third-party components

Certain software programs or portions thereof included in the Product may contain software distributed under third party agreements (“Third Party Components”), which may contain terms that expand or limit rights to use certain portions of the Product (“Third Party Terms”). Information regarding distributed Linux OS source code (for those Products that have distributed the Linux OS source code), and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply to them is available on the Avaya Support Web site: <http://support.avaya.com/Copyright>.

Trademarks

The trademarks, logos and service marks (“Marks”) displayed in this site, the Documentation and Product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the Documentation and Product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party.

Avaya is a registered trademark of Avaya Inc.

All non-Avaya trademarks are the property of their respective owners, and “Linux” is a registered trademark of Linus Torvalds.

Downloading Documentation

For the most current versions of Documentation, see the Avaya Support Web site: <http://support.avaya.com>.

Contact Avaya Support

Avaya provides a telephone number for you to use to report problems or to ask questions about your Product. The support telephone number is 1-800-242-2121 in the United States. For additional support telephone numbers, see the Avaya Web site: <http://support.avaya.com>.

Contents

Chapter 1: New in this release	5
Features.....	5
Other changes.....	5
Chapter 2: Introduction	7
Chapter 3: Upgrade, patching, and encryption fundamentals	9
Image naming conventions.....	9
Consistent image management design.....	10
Image upgrade fundamentals.....	11
Patching fundamentals.....	12
Commit fundamentals.....	12
Encryption modules fundamentals.....	13
Interfaces.....	14
File storage options.....	14
Boot and configuration file sources.....	15
Behavior during boot cycle and redundant configuration files.....	16
New software files.....	17
Checksums.....	17
Downgrade considerations.....	18
Chapter 4: Software upgrade	19
Upgrading the software.....	19
Verifying the upgrade.....	21
Committing an upgrade.....	21
Downgrading the software.....	22
Chapter 5: Software patch	25
Patching the software.....	27
Verifying the patch.....	29
Committing a patch.....	29
Removing a patch.....	30
Aborting a patch.....	32
Chapter 6: Encryption module installation	33
Adding an encryption module.....	33
Chapter 7: Common procedures	35
Downloading the software.....	35
Chapter 8: Common procedures using the CLI	37
Backing up configuration files.....	37
Backing up and restoring the compact flash to USB.....	38
Configuring auto-commit.....	39
Disabling auto-commit.....	40
Copying files.....	41
Determining available storage space.....	43
Enabling FTP and TFTP.....	44
Configuring configuration file sources.....	45
Chapter 9: Translations of Safety Messages	47
Chapter 10: Customer service	49

Getting technical documentation.....	49
Getting product training.....	49
Getting help from a distributor or reseller.....	49
Getting technical support from the Avaya Web site.....	50
Index.....	51

Chapter 1: New in this release

The following sections detail what's new in Avaya Virtual Services Platform 9000 Upgrades and Patches (NN46250–400) for Release 3.1:

- [Features](#) on page 5
- [Other changes](#) on page 5

Features

See the following section for information about feature-related changes:

Auto-commit and commit timers

[Configuring auto-commit](#) on page 39 and [Disabling auto-commit](#) on page 40 are added to the document.

Backup and restore compact flash

Release 3.1 adds the ability to backup and restore the contents of compact flash to a USB flash device. For more information, see [Backing up and restoring the compact flash to USB](#) on page 38.

Other changes

See the following sections for information about changes that are not feature-related.

Downloading the software

[Downloading the software](#) on page 35 is updated.

Software release name

The software release name in the activate command example in [Upgrading the software](#) on page 19 is corrected.

Reorganized sections

[Image naming conventions](#) on page 9 and [Consistent image management design](#) on page 10 are moved to [Upgrade, patching, and encryption fundamentals](#) on page 9.

New in this release

Variable definitions

Variable definitions are moved to follow the steps in a procedure.

Chapter 2: Introduction

This document provides useful information to upgrade the software image, install patches, and add encryption modules to the Avaya Virtual Service Platform 9000.

For information about how to install or transfer licenses, see *Avaya Virtual Services Platform 9000 Administration* (NN46250-600).

- [Upgrade, patching, and encryption fundamentals](#) on page 9
- [Software upgrade](#) on page 19
- [Software patch](#) on page 25
- [Encryption module installation](#) on page 33
- [Common procedures](#) on page 35
- [Common procedures using the ACLI](#) on page 37

Chapter 3: Upgrade, patching, and encryption fundamentals

This chapter covers useful information for upgrading the software image, installing patches and adding encryption modules to the Avaya Virtual Service Platform 9000. Review the concepts in this section before performing all upgrade, patch, or add module procedures.

For the complete list and sizes of files that you require to upgrade, patch, or add modules, and last-minute procedure changes, see the Release Notes or ReadMe files which accompany the software release. You can download these documents from the Avaya Technical Support Web site: www.avaya.com/support.

- [Image naming conventions](#) on page 9
- [Consistent image management design](#) on page 10
- [Image upgrade fundamentals](#) on page 11
- [Patching fundamentals](#) on page 12
- [Encryption modules fundamentals](#) on page 13
- [Interfaces](#) on page 14
- [File storage options](#) on page 14
- [Boot and configuration file sources](#) on page 15
- [Behavior during boot cycle and redundant configuration files](#) on page 16
- [New software files](#) on page 17
- [Checksums](#) on page 17
- [Downgrade considerations](#) on page 18

Image naming conventions

VSP 9000 software and patch images use a standardized dot notation format. This standardized format is as follows:

- **Software images**

Software images use the following format:

Product Name.Major Release.Minor Release.Maintenance Release.Maintenance Release Update.tgz

The image file name **VSP9K.3.0.0.0.tgz** denotes a software image for the VSP9K product with a major release version of 3, a minor release version of 0, a maintenance release version of 0 and a maintenance release update version of 0. **TGZ** is the file extension.

The image file name **VSP9K.3.1.0.0.tgz** denotes a software image for the VSP9K product with a major release version of 3, a minor release version of 1, a maintenance release version of 0 and a maintenance release update version of 0. **TGZ** is the file extension.

• **Software patch images**

Software patch images follow a similar naming format to software images. The only difference is the addition of a patch ID at the end of the of the file name. The patch ID begins with a **T** to indicate hitless patches and a **R** to indicate reset patches.

To illustrate the naming convention, consider the following example filename: **VSP9K.3.0.0.0–T02099198A.tgz** This filename indicates a hitless software patch that applies to Release 3.0.0.0. The patch ID is T02099198A.

Consistent image management design

The software upgrade and patching features have been designed for consistent behavior and functionality. The CLI provides commands that affect some features simultaneously and other commands that only affect a single feature at a time. The following chart provides a high level view of this consistent behavior. Image management, image upgrades, and image patching provide a consistent, four step process regardless of the action to be taken.

Hitless patching	Reset patching	Image upgrades
<ol style="list-style-type: none"> 1. Transfer patch to internal flash or other storage medium. 2. software patch add WORD<1-255> Unzips patch file and places it on the internal flash. 3. software patch apply patch-ids WORD<1-255> Applies the patch. 4. software patch commit Commits the software patch application request started in step 3. Auto-commit will be triggered if it is enabled 	<ol style="list-style-type: none"> 1. Transfer patch to internal flash or other storage medium. 2. software patch add WORD<1-255> Unzips patch file and places it on the internal flash. 3. software patch apply patch-ids WORD<1-255> Applies the patch. 4. software patch commit Commits the software patch application request started in step 3. Auto-commit will be triggered if it is enabled 	<ol style="list-style-type: none"> 1. Transfer image to internal flash or other storage medium. 2. software add WORD<1-99> Unzips image file and places it on the internal flash. 3. software activate WORD<1-99> Installs the image into the boot flash. 4. software commit Commits the new running image to Gold status. Auto-commit will be triggered if it is enabled and this

Hitless patching	Reset patching	Image upgrades
and this command is not executed.	and this command is not executed.	command is not executed.

The software or patch image comes in the form of a TGZ zipped file. Unzip the image using the `software add` or `software patch add` command. After you unzip and apply or activate the image, you can either commit the new image or rollback to the old image.

Image upgrade fundamentals

This section details what you must know to upgrade the Virtual Services Platform 9000.

- [Upgrades](#) on page 11
- [Upgrade time requirements](#) on page 11
- [Upgrade considerations](#) on page 11
- [Before you upgrade the software image](#) on page 11

Upgrades

Install new software upgrades to add functionality to the Virtual Services Platform 9000. Major and minor upgrades are released depending on how many features the upgrade adds or modifies.

Upgrade time requirements

Image upgrades take less than 30 minutes to complete. The Virtual Services Platform 9000 continues to operate during the image download process. A service interruption occurs during the installation and subsequent reset of the device. The system returns to an operational state after a successful installation of the new software and device reset.

Upgrade considerations

The Virtual Services Platform 9000 does not support different software versions running at the same time. For example, Releases 3.1 on the primary Central Processor (CP) module and 3.0 on the secondary CP module.

Before you upgrade the software image

Before you upgrade the Virtual Services Platform 9000, ensure that you read the entire upgrading procedures.

You must keep a copy of the previous configuration file (`config.cfg`), in case you need to return to the previous version. The upgrade process automatically converts, but does not save, the existing configuration file to a format that is compatible with the new software release. The new configuration file may not be backward compatible.

Patching fundamentals

A patch is a small piece of software designed to fix and correct a problem in software code, its supporting data, or update a feature. The VSP 9000 platform software is the first ADS product to implement true patching. Avaya uses patching to deliver bug fixes and feature enhancements in a faster and simpler fashion than a full software upgrade. Avaya also uses patching to deliver debug code to gather debugging information at customer sites. Virtual Services Platform 9000 supports two types of patching:

- hitless patch

The essence of hitless patching is that the target software is patched without disruption to running system processes. As a general rule, hitless patches will be the primary mode of patch creation. Other patching options will be considered only if all options to create a hitless patch have been exhausted.

- reset patch

Reset patches are provided as an alternative form of patching when a hitless patch cannot be created as a fix for a problem. After you apply reset patches to the target software, you must reset the system for the patches to take effect. There will be a service outage and disruption of traffic when the system is reset.

Before you apply a patch to a running system, ensure that you read the README file that came with the patch as well as this patching document.

The following table lists patch states as they are applied or reverted.

Table 1: Patch states

State	Description
Available (av)	After you add the file using the software patch add command if the patch does not match the current software version.
Candidate (ca)	After you add the file using the software patch add command if the patch matches the current software version.
Applied (ap)	After you activate the patch using the software patch apply command.

Commit fundamentals

This section contains information on the commit function of the VSP 9000.

Commit

The commit function of the Virtual Services Platform 9000 protects the system in case of an upgrade or patch failure. The VSP 9000 software incorporates a unified approach to committing software changes. The underlying architecture for software updates is shared between upgrades and patches. This includes the commit timer, auto-commit functionality, and enabling of software changes. While some syntactical ACLI differences exist between committing software upgrades (`software commit` command) and committing software patches (`software patch commit` command), these are enacted for ease of use and ACLI organizational purposes.

Software upgrade commit

The commit function for software upgrades allows maximum time set by the commit timer (the default is 10 minutes) to ensure that the upgrade is successful. If you enable the auto-commit option, the system automatically commits to the new software version after the commit timer expires. If you disable the auto-commit option, you must issue the software commit command before the commit timer expires to commit the new software version, otherwise the system restarts automatically to the previous (committed) version.

Software patch commit

The software patch commit function for software patches allows maximum time set by the commit timer (the default 10 minutes) to ensure that the patch applied is successful.

Hitless Patch: After you apply a hitless patch, if the auto-commit option is enabled, the system automatically commits the hitless patch after the commit timer expires. If auto-commit option is not enabled, you must issue the software patch commit command before the commit timer expires to commit the hitless patch, otherwise the system automatically reverts the hitless patch.

Reset Patch: After you apply a reset patch and reset the system for the patch to take-effect, if the auto-commit option is enabled, the system will automatically commit the reset patch after the commit timer expires. If auto-commit option is not enabled, you must issue the software patch commit command before the commit timer expires to commit the reset patch otherwise the system automatically restarts to revert the reset patch.

Encryption modules fundamentals

This section details what you must know to add encryption modules to the Virtual Services Platform 9000.

Encryption modules

You can add encryption modules to the Virtual Services Platform 9000 to encrypt secure information, such as passwords, before the system sends the information to another device on the network. You must download and install the encryption modules for your software release, which are available in a separate archive.

You can add the following encryption modules to a Virtual Services Platform 9000 software release:

- Triple Data Encryption Standard (3DES)
- Advanced Encryption Standard (AES), which also includes Secure Shell encryption

Before you add an encryption module to the Virtual Services Platform 9000 software, ensure that you read the entire procedure.

Interfaces

You can apply patches and upgrades, and add encryption modules to the Virtual Services Platform 9000 using the Avaya Command Line Interface (ACLI).

For more information about ACLI, see *Avaya Virtual Services Platform 9000 User Interface Fundamentals* (NN46250-103).

File storage options

This section details what you must know about the internal boot and system flash memory, Universal Serial Bus (USB) mass-storage device, and external flash, which you can use to store the files that start and operate the Virtual Services Platform 9000.

The Virtual Services Platform 9000 file system uses long file names.

Internal flash

The Virtual Services Platform 9000 has two internal flash memory devices: the boot flash memory and the system flash memory. The system flash memory size is 2 gigabytes (GB).

Boot flash memory is split into two banks that each contain a different copy of the boot image files. Only the Image Management feature can make changes to the boot flash.

The system flash memory stores configuration files, runtime images, the system log, and other files. You can access files on the internal flash through the `/intflash/` folder. Storage of the system log on the internal flash memory raises an alarm because the external flash is the preferred location. Ensure that external compact flash memory is properly installed so that the system log is stored there.

External flash and USB device

The VSP 9000 uses an external compact flash card and USB device for additional storage of configuration files, release images, and other files. The USB device provides a convenient, removable mechanism for moving files between VSP 9000 systems. In cases where network connectivity has not yet been established or network file transfer is not feasible, you can use the USB device to update the configuration and image files on a number of VSP 9000 systems.

Access files stored on the external flash through the `/extflash/` folder. Access files stored on the USB device through the `/usb/` folder.

Avaya recommends that you use a USB device or FTP server for file transfer.

File Transfer Protocol

You can use File Transfer Protocol (FTP) to load the software directly to the Virtual Services Platform 9000, or to download the software to the internal flash memory, external flash, or USB device.

The Virtual Services Platform 9000 can act as an FTP server. If you enable the FTP daemon (`ftpd`), you can use a standards-based FTP client to connect to the Control Processor (CP) module by using the ACLI log on parameters. Copy the files from the client to either the internal flash memory or external flash.

Storage option considerations

Each storage choice has advantages and disadvantages. Consider the following when you make a storage decision:

- Internal compact flash is best suited for the storage of software and patch images, core files, and configuration files.
- External compact flash is best suited for the storage of log files.
- USB devices are best suited for moving files between VSP 9000s although ultimately FTP is the best solution for file transfer. USB devices provide the convenience of downloading software to one device to update many chassis, especially in instances where network connectivity precludes the use of an FTP server.

The upgrade procedures in this document assume that you copy the new software from a FTP server to the internal flash memory. However, you can use other storage options if you use the correct file names and paths during the procedures.

Boot and configuration file sources

The Virtual Services Platform 9000 stores the software images on the internal boot flash by default. You can use the `boot config choice` command to configure the system to load the configuration file from either the internal flash memory, the external flash, or a USB device.

The `config.cfg` file, which is the default configuration file, stores the configuration options of the Virtual Services Platform 9000 and of all the modules. You can use the `boot config choice` command to assign primary configuration and backup locations of the configuration files on your system. You can put the configuration files on the internal flash, external flash, or USB device.

For more information about boot sources, see *Avaya Virtual Services Platform 9000 Administration* (NN46250-600).

Behavior during boot cycle and redundant configuration files

Avaya recommends that you take special care when you provide the boot options for the Virtual Services Platform 9000. You can configure a primary configuration file, as well as a backup configuration file.

In normal operation, Avaya recommends that you save the primary configuration file on the internal flash, and that you store the primary backup configuration file on the external compact flash to ensure that the Virtual Services Platform 9000 can start from an alternative file or drive in case the primary file or drive is unavailable. After you make changes to the configuration files, Avaya further recommends that you save the last known good configuration as the backup configuration file. For more information about how to configure primary and backup configuration files, see [Configuring configuration file sources](#) on page 45.

 **Caution:**

Risk of network outage

If the Avaya Virtual Services Platform 9000 cannot access a valid configuration file, it loads a default configuration, which can cause a network outage.

Ensure a valid configuration file is always available.

The following table shows how the Virtual Services Platform 9000 behaves in different boot situations. The system action column describes the expected behavior.

Table 2: System behavior during boot cycle

Parameters	System action
A configuration file is not specified. The config.cfg file is present on the flash drive.	The Virtual Services Platform 9000 starts using config.cfg.
The primary configuration file is specified. The configuration file is present on the flash drive.	The Virtual Services Platform 9000 starts using the specified configuration file.
The primary configuration file is specified. The configuration file is not present on the flash drive.	The Virtual Services Platform 9000 starts using factory defaults (if boot config flags <code>verify-config</code> is true , and a backup configuration is not specified).
The primary configuration file is specified. The configuration file on the flash drive has a bad command.	The Virtual Services Platform 9000 starts using factory defaults (if boot config flags <code>verify-config</code>

Parameters	System action
	is true , and a backup configuration is not specified).
The primary configuration file is specified. The configuration file on the flash drive has a bad command. The backup configuration file is specified, but it has a bad command.	The Virtual Services Platform 9000 fails the first configuration file, and starts ignoring the bad command.
The system is configured to start with factory defaults.	The Virtual Services Platform 9000 starts using factory defaults.

New software files

From the Avaya Technical Support Web Site, you can download all files simultaneously using the .tgz file.

The following table details the Virtual Services Platform 9000 software files for this release.

Table 3: Software files

Module or file type	Description	File name	Size in bytes
Software tgz file	Tar file of all software deliverables (includes images)	VSP9K.3.1.0.0.tgz	93 MB
Encryption modules tgz file	Tar file of the AES and 3DES encryption modules.	VSP9K.3.1.0.0_modules.tgz	33 KB

Checksums

The system performs internal checksums to ensure the integrity of the software.

Downgrade considerations

If you downgrade from a release, you need the previously saved configuration file (config.cfg) for the release to which you want to downgrade.

The Virtual Services Platform 9000 does not support different software versions running at the same time. For example, you cannot run Release 3.1 on the primary CP module and Release 3.0 on the secondary CP module.

If you disable the auto-commit feature and you do not commit an upgrade to gold within the specified commit time, the system automatically resets to the previous version. For more information about how commit to gold works, see [Commit fundamentals](#) on page 12.

Chapter 4: Software upgrade

Before you begin

- For more information about upgrade times, see [Upgrade time requirements](#) on page 11. If necessary, schedule a time for the Virtual Services Platform 9000 to be nonoperational.

Caution:

Risk of service interruption

If the Virtual Services Platform 9000 routes a high rate of traffic during the upgrade process, you can notice some performance impact during the upgrade. Try to perform upgrades during off-peak periods.

Important:

All upgrade procedures assume that you use default file names. Use caution while performing a procedure if you use nondefault file names. Ensure that all parameters associated with file names take into consideration the use of the nondefault values.

About this task

Upgrade the Avaya Virtual Services Platform 9000 to add functionality.

The following task list shows you the sequence of procedures you perform to upgrade the Virtual Services Platform 9000 using the ACLI.

- [Downloading the software](#) on page 35
- [Backing up configuration files](#) on page 37
- [Upgrading the software](#) on page 19
- [Verifying the upgrade](#) on page 21
- [Committing an upgrade](#) on page 21
- [Downgrading the software](#) on page 22

Upgrading the software

Before you begin

- Back up the configuration files.
- Download the upgrade file to the Virtual Services Platform 9000.
- You must log on to at least the Privileged EXEC mode in ACLI.

About this task

Perform this procedure to upgrade the software on the Avaya Virtual Services Platform 9000. This procedure shows how to upgrade the software using the internal flash memory as the file storage location; you can use other storage locations.

Procedure

1. Extract the release distribution files to the `/intflash/release/` directory:

```
software add WORD<1-99>
```

2. Install the image:

```
software activate WORD<1-99>
```

3. Restart the Virtual Services Platform 9000:

```
reset
```

! Important:

After you restart the system, you have the amount of time configured for the commit timer to verify the upgrade and commit the software to gold. If you do not commit the software to gold and auto-commit is not enabled, the system restarts with the last known working version after the commit timer has expired. This feature ensures you can regain control of the system if an upgrade fails.

4. Confirm the software is upgraded:

```
show software
```

Example

```
VSP-9012:1#software add VSP9K.3.1.0.0.tgz
```

```
VSP-9012:1#show software
software releases in /intflash/release/
3.0.0.0.GA (Primary Release)
3.1.0.0.GA (Backup Release)
```

```
Auto Commit      : enabled
Commit Timeout   : 10 minutes
```

```
VSP-9012:1#software activate 3.1.0.0.GA
```

Variable definitions

Use the data in the following table to use the `software` command.

Table 4: Variable definitions

Variable	Value
activate <i>WORD<1-99></i>	Specifies the name of the software release image.

Variable	Value
add <i>WORD</i> <1-99>	Specifies the path and version of the compressed software release archive file.
remove <i>WORD</i> <1-99>	Specifies the path and version of the compressed software release archive file.

Verifying the upgrade

About this task

Verify your upgrade to ensure proper Avaya Virtual Services Platform 9000 operation.

Procedure

1. Check for alarms or unexpected errors:

```
show logging file tail
```
 2. Verify all modules and slots are online:

```
show sys-info
```
-

Committing an upgrade

Before you begin

- You must log on to at least the Privileged EXEC mode in ACLI.

About this task

Perform the following procedure to commit an upgrade.

The commit function for software upgrades allows maximum time set by the commit timer (the default is 10 minutes) to ensure that the upgrade is successful. If you enable the auto-commit option, the system automatically commits to the new software version after the commit timer expires. If you disable the auto-commit option, you must issue the software commit command before the commit timer expires to commit the new software version, otherwise the system restarts automatically to the previous (committed) version.

Procedure

```
Commit an upgrade:
software commit
```

Downgrading the software

Before you begin

- Ensure that you have a previous version installed.
- You must log on to at least the Privileged EXEC mode in ACLI.

About this task

Perform this procedure to downgrade the Avaya Virtual Services Platform 9000 from the current trusted version to a previous release.

Procedure

1. Activate a prior version of the software:

```
software activate WORD<1-99>
```

2. Restart the Virtual Services Platform 9000:

```
reset
```

! Important:

After you restart the system, you have the amount of time configured for the commit timer to verify the software change and commit the software to gold. If you do not commit the software to gold and auto-commit is not enabled, the system restarts with the last known working version after the commit timer expires. This feature ensures you can regain control of the system if an upgrade fails.

3. Commit the software change:

```
software commit
```

! Important:

If you do not enable the auto-commit functionality, you must commit the software change before the commit timer expires. This is an optional step otherwise.

4. Verify the downgrade:

- Check for alarms or unexpected errors using the `show logging file tail` command.
- Verify all modules and slots are online using the `show sys-info` command.

5. (Optional) Remove unused software:

```
software remove WORD<1-99>
```

Variable definitions

Use the data in the following table to use the `software` command.

Table 5: Variable definitions

Variable	Value
activate <i>WORD</i> <1-99>	Specifies the name of the software release image.
add <i>WORD</i> <1-99>	Specifies the path and version of the compressed software release archive file.
remove <i>WORD</i> <1-99>	Specifies the path and version of the compressed software release archive file.

Chapter 5: Software patch

Before you begin

- Review the readme file for the patch.

Important:

All patching procedures assume that you use default file names. Use caution while performing a procedure if you use nondefault file names. Ensure that all parameters associated with file names take into consideration the use of the nondefault values.

About this task

The following task list shows the process to patch the VSP 9000 software using ACLI commands.

- [Downloading the software](#) on page 35
- [Backing up configuration files](#) on page 37
- [Patching the software](#) on page 27
- [Verifying the patch](#) on page 29
- [Aborting a patch](#) on page 32
- [Committing a patch](#) on page 29
- [Removing a patch](#) on page 30

The following task flow shows the patch application and patch removal process.

Software patch

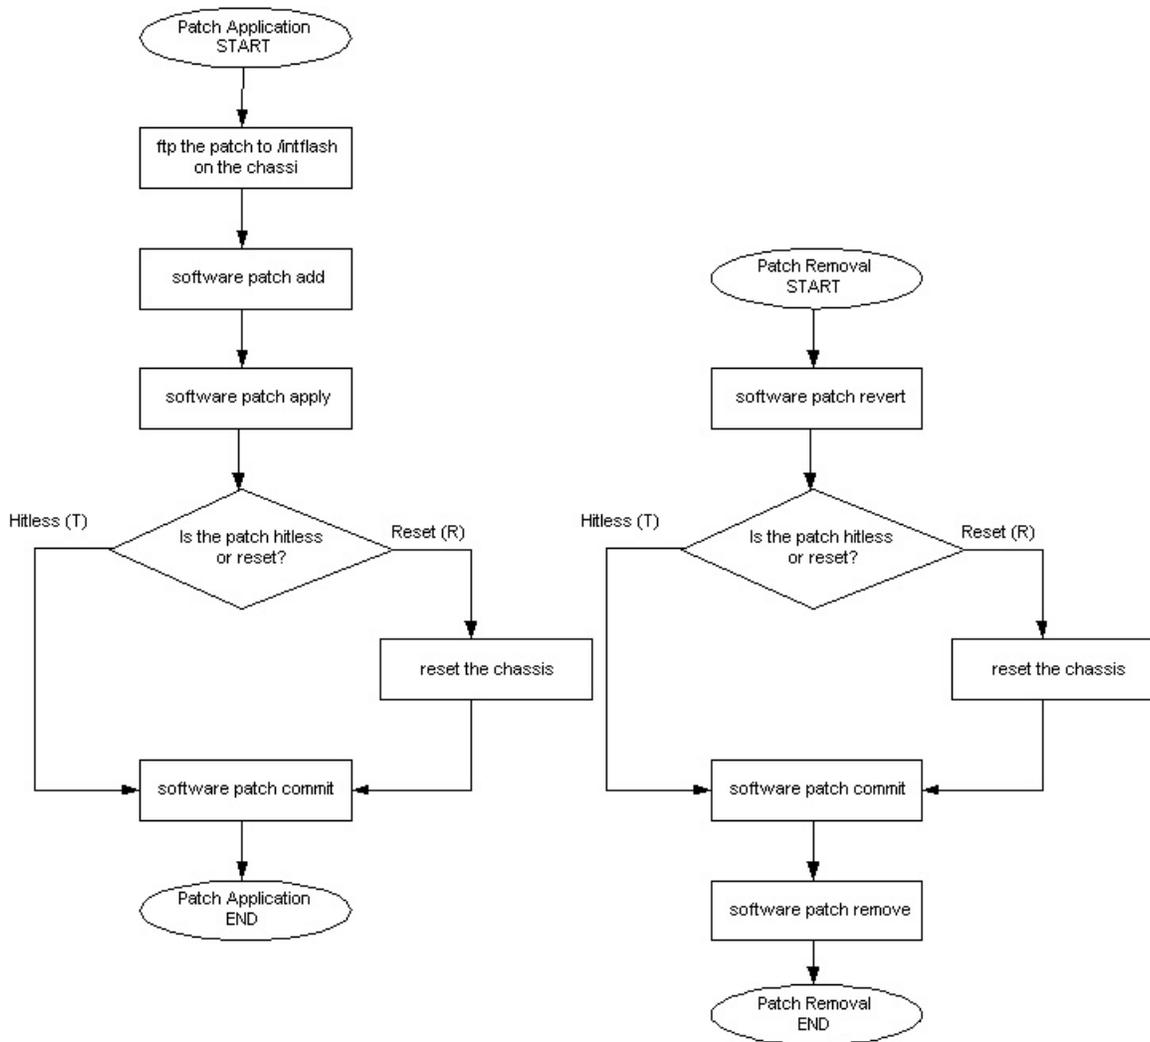


Figure 1: Patch application and removal

The following task flow demonstrates the steps involved in committing a software patch.

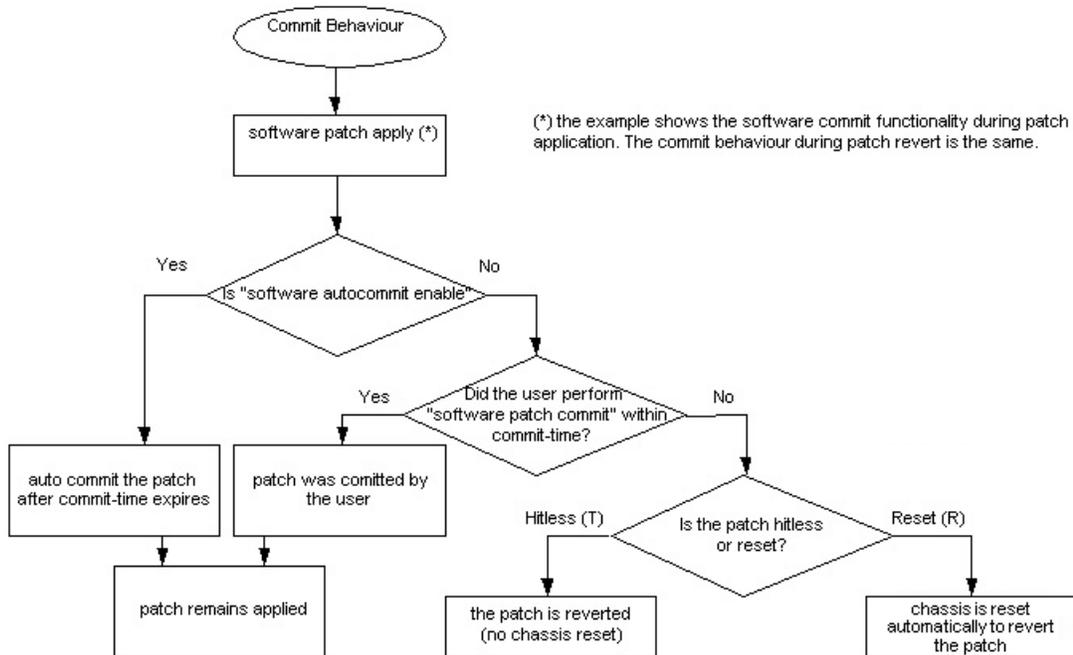


Figure 2: Committing a software patch

Patching the software

Before you begin

- Download the patch file in binary format to the Virtual Services Platform 9000.
- Ensure you are familiar with the commit and auto-commit features. For more information about commit, see [Commit fundamentals](#) on page 12.

About this task

Patch the software to fix and correct a problem in software code, its supporting data, or update a feature. The VSP 9000 platform software is the first ADS product to implement true patching. If you enable the auto-commit feature, the system commits the patch automatically after the commit timer expires. If you disable the auto-commit feature, you must commit the patch manually before the commit timer expires.

Procedure

1. Uncompress the patch and add it to the patch database:

```
software patch add WORD<1-255>
```
2. Activate the patch functionality:

```
software patch apply patch-ids WORD<1-255> [WORD<1-255>]
```

! Important:

After you apply the patch, the system begins the commit timer. Use that time to verify the patch before you commit the patch.

! Important:

After you apply a reset patch, you must restart the system to allow the patch functionality to take effect.

Example

1. Uncompress the patch and add it to the patch database:

```
VSP-9012:1# software patch add VSP9K.3.0.0.0-T00734412A.tgz
```

```
Unpacking patch T00734412A for software version VSP9K.3.0.0.0
to /intflash/release/VSP9K.3.0.0.0/patches/T00734412A Unpacking of
T00734412A software version VSP9K.3.0.0.0 to /intflash/release/
VSP9K.3.0.0.0/patches/T00734412A
is successful. Setting permission on /intflash/release/VSP9K.3.0.0.0/
patches/T00734412A
is successful.
```

2. Activate the patch functionality:

```
VSP-9012:1# software patch apply patch-ids T00734412A
```

```
Checking relationships and calculating order of application.
The following patches will be applied in the order listed:  Identifier
Status      Title
T00734412A  candidate  VSP9000:EDM-saveRuntimeConfigToSlave Causes
Error on Slave Requesting permission to proceed from Software Control
Applying patch T00734412A PA on slot 4  Applying patch T00734412A
PA on slot 1  Applied patches with the following results:  Identifier
Result      Cause
T00734412A  success    patch applied
Patch activation will automatically be committed in 10 minutes
unless a rollback is requested.  Success
```

3. Commit the software patch:

```
VSP-9012:1# software patch commit
```

```
Committing patch activation with Software Control  Patch
request committed - rollback will not occur.  Success
```

Variable definitions

Use the data in the following table to use the `software patch` command.

Table 6: Variable definitions

Variable	Value
add <i>WORD</i> <1-255>	Specifies the path and version of the compressed software patch archive file.

Variable	Value
<pre>apply {all hitless patch-ids WORD<1-255> [WORD<1-255>] reset}</pre>	<p>Activates the patch functionality.</p> <ul style="list-style-type: none"> • all activates patch functionality of patches in the Candidate (ca) state. • hitless activates all hitless patches in the Candidate (ca) state. • patch-ids WORD<1-255> [WORD<1-255>] installs specific patches. You can specify up to 8 patches at a time. The ID is the same as the patch file name without the -version.tgz extension. • reset activates all reset patches in the Candidate (ca) state.

Verifying the patch

About this task

Verify the patch to ensure your Avaya Virtual Services Platform 9000 operates properly after the patch installation and that the patch did not cause a service impact.

Procedure

1. Verify that the patch installation is complete:

```
show software patch
```

2. Check for alarms or unexpected errors:

```
show logging file tail
```

Committing a patch

About this task

If you disabled the auto-commit feature, you must manually commit the patch after you verify that a patch does not cause a service impact. After the commit timer expires, the system removes any patch which you did not commit manually.

If you applied a reset patch, you must commit the patch after the system restarts. After the commit timer expires, the system removes any patch which you did not commit and restarts.

⚠ Warning:

Deficiency when using Telnet to commit or remove a patch on an HA CPU (WI00511642 to be resolved in a future release).

The HA sync can take 2 minutes depending upon the level of configuration present. When you use the console to commit or remove a patch a message like *Syncing release directory on backup CP card in slot 2* appears on the console and the console prompt holds until the process is complete, at which time a message like *Syncing release directory on backup CP card in slot 2 completed* appears and the prompt returns. The message only appears on the console screen. No message appears on the Telnet session, which can cause the user to think there is something wrong because the session seems to hang until the CPUs have synchronized. Also, while the two CPU are synchronizing, the user can not issue commands in the current Telnet session until the synchronize action is complete.

Procedure

Commit the patch:

```
software patch commit
```

Removing a patch

Remove a patch from the Avaya Virtual Services Platform 9000 if the patch causes problems.

About this task**⚠ Warning:**

Deficiency when using telnet to commit or remove a patch on an HA CPU (WI00511642 to be resolved in the next release).

The HA sync can take 2 minutes depending upon the level of configuration present. When you use the console to commit or remove a patch a message like *Syncing release directory on backup CP card in slot 2* appears on the console and the console prompt holds until the process is complete at which time a message like *Syncing release directory on backup CP card in slot 2 completed* appears and the prompt returns. The message only appears on the console screen. No message appears on the Telnet session, which can cause the user to think there is something wrong because the session seems to hang until the CPUs have synchronized. Also, while the two CPU are synchronizing, the user can not issue commands in the current Telnet session until the synchronize action is complete.

Procedure

1. Revert the patch:

```
software patch revert patch-ids WORD<1-255>
```

2. Commit the software patch revert action

```
software patch commit
```

3. Remove the patch from the system.

```
software patch remove version WORD<1-255> patch-id
WORD<1-255>
```

Example

1. Revert the patch:

```
VSP-9012:1# software patch revert patch-ids T00734412A
```

```
Checking relationships and calculating order of application.
The following patches will be removed in the order listed:
  Identifier      Status      Title
T00734412A      applied    VSP9000:EDM-saveRuntimeConfigToSlave Causes
Error on Slave Requesting permission to proceed from Software Control
Removing patch T00734412A PA on slot 4
Removing patch T00734412A PA on slot 1
Removed patches with the following results:
Identifier      Result      Cause
T00734412A      success     patch removed
Patch activation will automatically be committed in 10 minutes
unless a rollback is requested.
Success
```

2. Commit the software patch revert action.

```
VSP-9012:1# software patch commit
```

3. Remove the patch from the /intflash/release/<version>/patches/
<patch-id> directory and from the patch database:

```
VSP-9012:1# software patch remove version VSP9K.3.0.0.0
patch-id T00734412A
```

```
Patch T00734412A for swVersion VSP9K.3.0.0.0 is removed successfully.
```

Variable definitions

Use the data in the following table to use the `software patch` command.

Table 7: Variable definitions

Variable	Value
<code>revert {all hitless patch-ids WORD<1-255> [WORD<1-255> reset] [version <software_version>]}</code>	Deactivates the specified patch.
<code>remove version WORD<1-255> patch-id WORD<1-255></code>	Removes the patch from the system.

Aborting a patch

About this task

If adding or reverting a patch causes a service impact, and the commit timer has not yet expired; you can abort the addition or reversion process.

! Important:

Aborting a reset patch causes the system to restart.

Procedure

Abort a patch:

```
software patch abort
```

! Important:

You can only abort a reset patch after the system restarts.

Chapter 6: Encryption module installation

Before you begin

! Important:

The following procedures assume that you use default file names. Use caution while performing a procedure if you use nondefault file names. Ensure that all parameters associated with file names take into consideration the use of the nondefault values.

About this task

Add encryption modules to the Avaya Virtual Services Platform 9000 software to use the encryption features.

The following task list shows you the sequence of procedures you perform to add encryption modules to the Virtual Services Platform 9000 software using the ACLI.

- [Downloading the software](#) on page 35
- [Adding an encryption module](#) on page 33

Adding an encryption module

Before you begin

- Download the module file to the Avaya Virtual Services Platform 9000.
- You must log on to at least the Privileged EXEC mode in ACLI.

About this task

You can add encryption modules to a software release to use encryption features.

Procedure

1. Add an encryption module to a release version:
`software add-modules WORD<1-99> WORD<1-99>`
2. Log on to the Global Configuration mode:
`config t`
3. Load the encryption module:

```
load-encryption-module {3DES|AES|DES}
```

Example

Add the Advanced Encryption Standard (AES) module to the Release 3.1:

```
VSP-9012:1#software add-modules VSP9K.3.1.0.0
VSP9K.3.1.0.0_modules.tgz
```

Log on to Global Configuration mode:

```
VSP-9012:1#config t
```

Load the AES encryption module:

```
VSP-9012:1(config)#load-encryption-module AES
```

Variable definitions

Use the data in the following table to use the `software add-modules` command.

Table 8: Variable definitions

Variable	Value
The first <i>WORD</i> <1-99>.	Specifies the release version to which you want to add modules to.
The second <i>WORD</i> <1-99>.	Specifies the module archive you want to add.

Use the data in the following table to use the `load-encryption-module` command.

Table 9: Variable definitions

Variable	Value
<3DES AES DES>	Specifies the encryption module to load.

Chapter 7: Common procedures

About this task

The following section describes common procedures that you use while upgrading, patching, or adding encryption modules to the Avaya Virtual Services Platform 9000. You can use these procedures to download patches and upgrades, or as part of normal system operations.

- [Downloading the software](#) on page 35

Downloading the software

Before you begin

- You must have access to the new software from the Avaya support site: www.avaya.com/support. You need a valid user or site ID and password.

About this task

Download the new software to upgrade the Avaya Virtual Services Platform 9000.

Procedure

1. From an Internet browser, browse to www.avaya.com/support.
 2. Click **Products**.
 3. Enter **Virtual Services Platform 9000**, and then select the link that appears.
 4. Click **Downloads**.
 5. Click the release name.
 6. Click the **Downloads** tab.
 7. Download the required software release.
 8. Use an FTP client in binary mode to transfer the file to the Virtual Services Platform 9000, or transfer it using an external USB device.
-

Chapter 8: Common procedures using the CLI

About this task

The following sections describe common procedures, which use the Avaya Command Line Interface (CLI), that you use while upgrading, patching, or adding encryption modules to the Avaya Virtual Services Platform 9000.

- [Backing up configuration files](#) on page 37
- [Backing up and restoring the compact flash to USB](#) on page 38
- [Configuring auto-commit](#) on page 39
- [Disabling auto-commit](#) on page 40
- [Copying files](#) on page 41
- [Determining available storage space](#) on page 43
- [Enabling FTP and TFTP](#) on page 44
- [Configuring configuration file sources](#) on page 45

Backing up configuration files

Before you begin

- If you use File Transfer Protocol (FTP) or Trivial File Transfer Protocol (TFTP), ensure that you enabled the FTP or TFTP server.
- You must log on to at least the Privileged EXEC mode in CLI.

About this task

Before and after you upgrade your Avaya Virtual Services Platform 9000 software, make copies of the configuration files. If an error occurs, use backup configuration files to return the Virtual Services Platform 9000 to a previous state.

Avaya recommends that you keep several copies of backup files.

Procedure

1. Determine the configuration file names:
`show boot config choice`
2. Save the configuration files. Assuming the files use the default file names, enter:

```
save config
```

3. Save the configuration file to the secondary CP module if the SaveToStandby flag is false:

```
save config standby config.cfg
```

4. Copy the files to a safe place:

```
copy /intflash/config.cfg /extflash/config_backup.cfg
```

Backing up and restoring the compact flash to USB

Before you begin

- You must log on to at least the Privileged EXEC mode in ACLI.

About this task

Perform this procedure to back up and restore the contents of the internal or external compact flash to a USB flash device without entering multiple `copy` commands. This procedure is useful if you want to copy the complete compact flash contents to another chassis or want to replace the existing compact flash card or CP module without losing the data.

The system verifies that the USB flash device has enough available space to perform the backup operation. If the USB flash device does not have enough available space, an error message appears. The backup command uses the following filepath on the USB flash device: `/usb/intflash/intflashbackup_yyyymmddhhmmss.tgz` and `/usb/extflash/extflashbackup_yyyymmddhhmmss.tgz`.

Logging is automatically disabled on the compact flash during backup.

The backup action can take up to 10 minutes.

Procedure

1. Backup the internal flash to USB:

```
backup intflash
```
2. Backup the external flash to USB:

```
backup extflash
```
3. Restore the data to the internal flash:

```
restore intflash
```
4. Restore the data to the external flash:

```
restore extflash
```

5. Ensure that logging is enabled for the external compact flash.

Example

```
VSP-9012:1#backup intflash
```

```
Warning: Internal flash is being used for logging right now.
Backup/Restore intflash is not allowed. Please use the
following CLI command in the global configuration mode
to disable the logging to intflash, then try again.

Case 1: If extflash is not present, disable the global logging.
Command: no boot config flags logging

Case 2: If extflash is present, enable logging to extflash.
Command: logging logToExtFlash

Execute Command: logging logToExtFlash

LoggingToPcmcia 1 LoggingToIntflash 0

Warning: Command will backup all data from /intflash to /usb/intflash.
It will take a few minutes and may cause high CPU utilization.

Are you sure you want to continue? (y/n) ? y

For file system /intflash:
1934917632 total bytes on the filesystem
643297280 used bytes on the filesystem
1291620352 free bytes on the filesystem

For file system /usb:
3990487040 total bytes on the filesystem
499318784 used bytes on the filesystem
3491168256 free bytes on the filesystem

cd /intflash ; /bin/tar -czvf /usb/intflash/intflashbackup_20110420212218.tgz * ; /
bin/sync

Info: Backup /intflash to filename /usb/intflash/intflashbackup_20110420212218.tgz
is complete!

Do you want to stop the usb? (y/n) ? n

Logging to Intflash stopped

Logging to Extflash started
```

Configuring auto-commit

Before you begin

- You must log on to the Global configuration mode in ACLI.

About this task

Use the auto-commit feature to let the system commit the software automatically after you install an upgrade or a patch, and after the commit timer expires. Configure the timer to give

you enough time to verify the upgrade or patch does not cause a service impact. By default, the auto-commit feature is enabled with a timer of 10 minutes.

Procedure

1. Enable auto-commit:

```
sys software auto-commit enable
```
 2. Configure the commit timer:

```
sys software commit-time <10-60>
```
-

Variable definitions

Use the data in the following table to use the `sys software` command.

Table 10: Variable definitions

Variable	Value
auto-commit enable	Enables the auto-commit feature. The default is enabled. Use the no operator to disable auto-commit: <code>no sys software auto-commit enable</code> .
commit-time <10-60>	Configures the commit timer. The value is in minutes, between 10 and 60, with a default value of 10 minutes.

Disabling auto-commit

Before you begin

- You must log on to the Global configuration mode in ACLI.

About this task

Disable the auto-commit feature to commit the upgrade or patch manually. Configure the timer to give you enough time to verify the upgrade or patch does not cause a service impact. By default, the auto-commit feature is enabled with a timer of 10 minutes. After the timer expires, the system verifies if you committed the upgrade or patch. If you did not commit the software or patch, the system reverts to the previous version. This feature protects the system from installing an upgrade or patch that causes service impact.

Procedure

1. Disable auto-commit:


```
no sys software auto-commit enable
```
 2. Configure the commit timer:


```
sys software commit-time <10-60>
```
-

Variable definitions

Use the data in the following table to use the `sys software` command.

Table 11: Variable definitions

Variable	Value
auto-commit enable	Enables the auto-commit feature. The default is enabled. Use the <code>no</code> operator to disable auto-commit: <code>no sys software auto-commit enable</code> .
commit-time <10-60>	Configures the commit timer. The value is in minutes, between 10 and 60, with a default value of 10 minutes.

Copying files

Before you begin

- You must log on to at least the Privileged EXEC mode in ACLI.
- Using the `dir` command, ensure the required storage device has enough capacity before you copy a file to it.

Important:

If a failure occurs while you copy a file using FTP or TFTP (for example, if a TFTP server is not available), the destination file is deleted.

About this task

Copy files to back up files or to create a copy in another location.

You can rename files while copying them. All procedures in this document use the default file names. You must use the right file names to ensure the upgrade is successful.

Procedure

Copy a file:

```
copy WORD<1-255> WORD<1-255>
```

Example

Copy config.cfg from the internal flash to the external flash on the CP module to which you are connected:

```
VSP-9012:1#copy /intflash/config.cfg /extflash/config_backup.cfg
```

Copy an image or configuration file from the FTP server to the internal flash on the CP module to which you are connected:

```
VSP-9012:1#copy 111.111.1.11:config.cfg /intflash/config.cfg
```

Copy config.cfg from the internal flash on the CP module to which you are connected to the external flash on the CP module to which you are not connected:

```
VSP-9012:1#copy /intflash/config.cfg /mnt/extflash/config_backup.cfg
```

Variable definitions

Use the data in the following table to help you use the `copy` command.

Table 12: Variable definitions

Variable	Value
<code>WORD<1-255></code>	<p>The first instance specifies the source path and name of the file the system will copy from.</p> <p>The second instance specifies the destination path and name of the copy the system will create.</p> <p>The correct syntax can be one of the following:</p> <ul style="list-style-type: none"> • <code>a.b.c.d: <file></code> • <code>/intflash/<file></code> Use this option for the internal flash of the CP module to which you are connected. • <code>/extflash/<file></code> Use this option for the external flash of the CP module to which you are connected. • <code>/usb/<file></code> • <code>/mnt/intflash/<file></code>

Variable	Value
	<p>Use this option for the internal flash of the CP module to which you are not connected.</p> <ul style="list-style-type: none"> • /mnt/extflash/<file> <p>Use this option for the external flash of the CP module to which you are not connected.</p>

Determining available storage space

Before you begin

- You must log on to at least the Privileged EXEC mode in ACLI.

! Important:

You need the older configuration files if the upgrade is unsuccessful. Ensure you back up these files to a safe place before you remove them.

About this task

Determine whether the Avaya Virtual Services Platform 9000 has enough storage space to store the new software.

Procedure

1. View the free space and files in the internal flash memory:

```
dir
```

The bottom of the table shows available space, for example:

```
total: 2971209728 used: 2441273344 free: 529936384 bytes
```

2. If you must remove files to make space, use the **remove** command:

```
remove WORD<1-99> [-y]
```

Variable definitions

Use the data in the following table to help you use the `remove` command.

Table 13: Variable definitions

Variable	Value
<i>WORD</i> <1-99>	Specifies the file to remove.
-y	Skips the confirm question.

Enabling FTP and TFTP

Before you begin

- You must log on to the Global Configuration mode in ACLI.

About this task

Enable File Transfer Protocol (FTP) and Trivial File Transfer Protocol (TFTP) to use these protocols to transfer files on the Avaya Virtual Services Platform 9000 to transfer files.

Procedure

1. Enable the FTP server:

```
boot config flags ftpd
```

OR

Enable the TFTP server:

```
boot config flags tftpd
```
 2. Save the configuration file:

```
save config
```
 3. Save the configuration file to the secondary CP module if the SaveToStandby flag is false:

```
save config standby config.cfg
```
 4. Restart the Virtual Services Platform 9000 with the FTP or TFTP server active:

```
boot
```
-

Configuring configuration file sources

Before you begin

- You must log on to the Global Configuration mode in ACLI.

About this task

Perform this procedure to configure the names and locations of the primary and backup configuration files.

Procedure

Set the primary and backup configuration files:

```
boot config choice primary {config-file WORD<0-255>|backup-
config-file WORD<0-255>}
```

Example

Assign the primary configuration file:

```
VSP-9012:1(config)#boot config choice primary config-file /intflash/
primaryconfig.cfg
```

Assign the backup configuration file:

```
VSP-9012:1(config)#boot config choice primary backup-config-file /
extflash/primarybackupconfig.cfg
```

Variable definitions

Use the data in the following table to use the `boot config choice primary` command.

Table 14: Variable definitions

Variable	Value
backup-config-file WORD<0-255>	Specifies the backup boot configuration file; <i>WORD<0-255></i> is the path and file name, up to 255 characters.
config-file WORD<0-255>	Specifies the boot configuration file; <i>WORD<0-255></i> is the path and file name, up to 255 characters.

Chapter 9: Translations of Safety Messages

This section contains translations of caution, warning, and danger messages that appear in this document.

Electromagnetic interference caution statement

 **Caution:**

This device is a Class A product. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users are required to take appropriate measures necessary to correct the interference at their own expense.

 **Caution:**

ATTENTION

Le périphérique est un produit de Classe A. Le fonctionnement de cet équipement dans une zone résidentielle risque de causer des interférences nuisibles, auquel cas l'utilisateur devra y remédier à ses propres frais.

 **Caution:**

ACHTUNG

Dies ist ein Gerät der Klasse A. Bei Einsatz des Geräts in Wohngebieten kann es Störungen des Radio- und Fernsehempfangs verursachen. In diesem Fall muss der Benutzer alle notwendigen Maßnahmen ergreifen, die möglicherweise nötig sind, um die Störungen auf eigene Rechnung zu beheben.

 **Caution:**

PRECAUCIÓN

Este es un producto clase A. El uso de este equipo en áreas residenciales puede causar interferencias nocivas, en cuyo caso, se requerirá que los usuarios tomen cualquier medida necesaria para corregir la interferencia por cuenta propia.

 **Caution:**

CUIDADO

Este dispositivo é um produto Classe A. Operar este equipamento em uma área residencial provavelmente causará interferência prejudicial; neste caso, espera-se que os usuários tomem as medidas necessárias para corrigir a interferência por sua própria conta.

 **Caution:**

ATTENZIONE

Questo dispositivo è un prodotto di Classe A. Il funzionamento di questo apparecchio in aree residenziali potrebbe causare interferenze dannose, nel cui caso agli utenti verrà richiesto di adottare tutte le misure necessarie per porre rimedio alle interferenze a proprie spese.

Electrostatic discharge caution statement

This section translates the electrostatic discharge caution message.

 **Electrostatic alert:**

Risk of equipment damage

To prevent damage from electrostatic discharge, always wear an antistatic wrist strap connected to an ESD jack.

 **Electrostatic alert:**

ATTENTION

Risque d'endommagement de l'équipement

To prevent damage from electrostatic discharge, always wear an antistatic wrist strap connected to an ESD jack.

 **Electrostatic alert:**

ACHTUNG

Risiko eines Geräteschadens

Um Schäden durch elektrostatische Entladung zu verhindern, tragen Sie bei der Instandhaltung dieses Produkts immer ein antistatisches Band am Handgelenk, welches mit einer ESD-Buchse verbunden ist.

 **Electrostatic alert:**

PRECAUCIÓN

Riesgo de daño del equipo

Para prevenir el daño producido por una descarga electrostática, use siempre una pulsera antiestática conectada a un enchufe ESD.

 **Electrostatic alert:**

CUIDADO

Risco de danos ao equipamento

Para evitar danos com descarga eletrostática, sempre use uma pulseira antiestática que esteja conectada a uma tomada ESD.

 **Electrostatic alert:**

ATTENZIONE

Rischio di danni all'apparecchiatura

Per evitare danni derivanti da scariche elettrostatiche, indossare sempre un polsino antistatico collegato a una presa ESD.

Chapter 10: Customer service

Visit the Avaya Web site to access the complete range of services and support that Avaya provides. Go to www.avaya.com or go to one of the pages listed in the following sections.

Navigation

- [Getting technical documentation](#) on page 49
- [Getting product training](#) on page 49
- [Getting help from a distributor or reseller](#) on page 49
- [Getting technical support from the Avaya Web site](#) on page 50

Getting technical documentation

To download and print selected technical publications and release notes directly from the Internet, go to www.avaya.com/support.

Getting product training

Ongoing product training is available. For more information or to register, you can access the Web site at www.avaya.com/support. From this Web site, you can locate the Training contacts link on the left-hand navigation pane.

Getting help from a distributor or reseller

If you purchased a service contract for your Avaya product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller for assistance.

Getting technical support from the Avaya Web site

The easiest and most effective way to get technical support for Avaya products is from the Avaya Technical Support Web site at www.avaya.com/support.

Index

A

ACLI[14](#)
alarms[21](#), [29](#)
and configuration files[16](#)
Avaya Command Line Interface[14](#)

B

boot cycle[16](#)
boot flash memory[14](#)
boot source[15](#)
boot source order[45](#)
 configuring using the ACLI[45](#)
bootconfig flags[21](#)
 viewing using the ACLI[21](#)

C

Checksums[17](#)
configuration files[16](#), [37](#)
 and boot cycle[16](#)
 backing up using the ACLI[37](#)
customer service[49](#)

D

distributor[49](#)
documentation[49](#)
downgrade[22](#)
 using the ACLI[22](#)
downgrade considerations[18](#)
downloading software[35](#)

E

EDM[14](#)
encryption modules[13](#), [33](#)
 fundamentals[13](#)
 using ACLI[33](#)
Enterprise Device Manager[14](#)
external flash[14](#)
external flash, available memory[43](#)
 determining using the ACLI[43](#)

F

file system[14](#)

files[41](#)
 copying using the ACLI[41](#)
flash memory[15](#)
FTP[44](#)
 enabling using the ACLI[44](#)
FTP server[14](#)

I

interfaces[14](#)
 ACLI[14](#)
 EDM[14](#)
internal flash[14](#)
internal flash, available memory[43](#)
 determining using the ACLI[43](#)

P

patch[12](#), [27](#), [29](#)
 before you patch[12](#)
 fundamentals[12](#)
 using the ACLI[27](#)
 verifying using ACLI[29](#)

R

reseller[49](#)

S

software download[17](#)
storage options[14](#)
system flash memory[14](#)

T

TFTP[44](#)
 enabling using the ACLI[44](#)
TFTP server[14](#)
training[49](#)

U

upgrade[11](#), [19](#), [21](#)

before you upgrade	11	upgrade considerations	11
fundamentals	11	upgrade task flow	19
using the ACLI	19	using the ACLI	19
verifying using the ACLI	21	USB device	14