

Monitor ExtremeControl Health in ExtremeCloud IQ - Site Engine

The following sections provide detailed information on how to use specific ExtremeCloud IQ - Site Engine reports and NAC Manager features to monitor ExtremeControl health. These reports provide you with the information you need to monitor, analyze, and troubleshoot ExtremeControl problems.

- [Monitor ExtremeControl Engine Performance](#)
- [Monitor ExtremeControl Engine Memory Use](#)
- [View ExtremeControl Engine Historical Data](#)
- [Monitor ExtremeControl Critical Events](#)
- [Monitor ExtremeControl Engine Load](#)
- [Monitor ExtremeControl End-System Health](#)
- [Create Alerts with ExtremeControl Notifications](#)
- [ExtremeCloud IQ - Site Engine Custom Reports](#)

Monitor ExtremeControl Engine Performance


The ExtremeControl engine Device Availability report provides a historical overview of the engine status. The report shows at-a-glance when an engine is offline, or whether an engine is consistently on and offline over time. The report lets you quickly determine the specific date when an engine is unavailable without having to review log data to determine the date.

For a backup engine, the report can provide a good indication of possible engine or network issues that can go otherwise undetected until the moment when the engine is needed.

If the report indicates a problem, review the ExtremeControl engine logs for the dates in question (see [ExtremeControl Engine Log Locations](#)), to gain additional insight into the possible root cause of the problem.


Access the Device Availability report from the **Network** tab. Right-click on an ExtremeControl engine and select View Device Details > System > Device Availability, as shown here.

Accessing the Device Availability Report

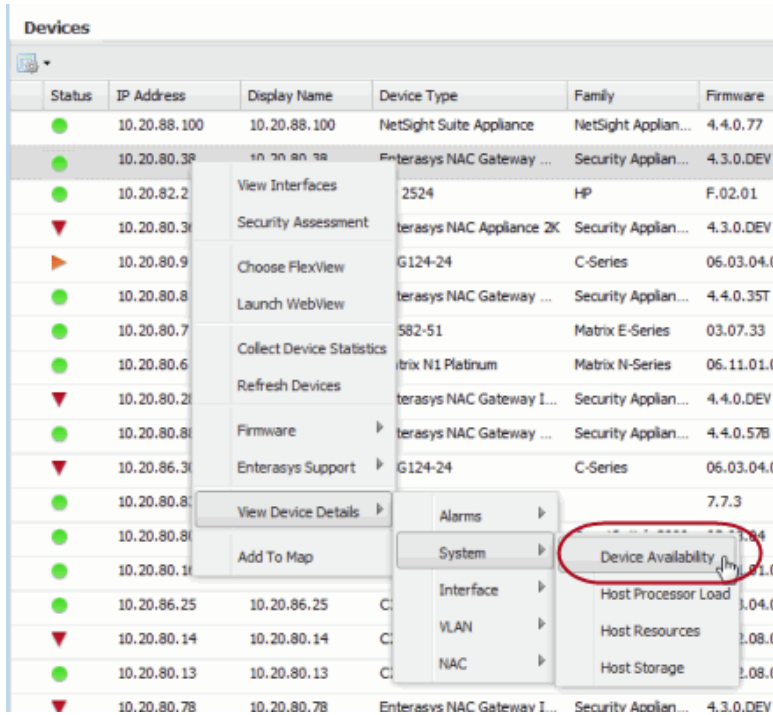

The ExtremeControl engine Device Availability report is displayed in a new tab, as shown below.

Device Availability Report

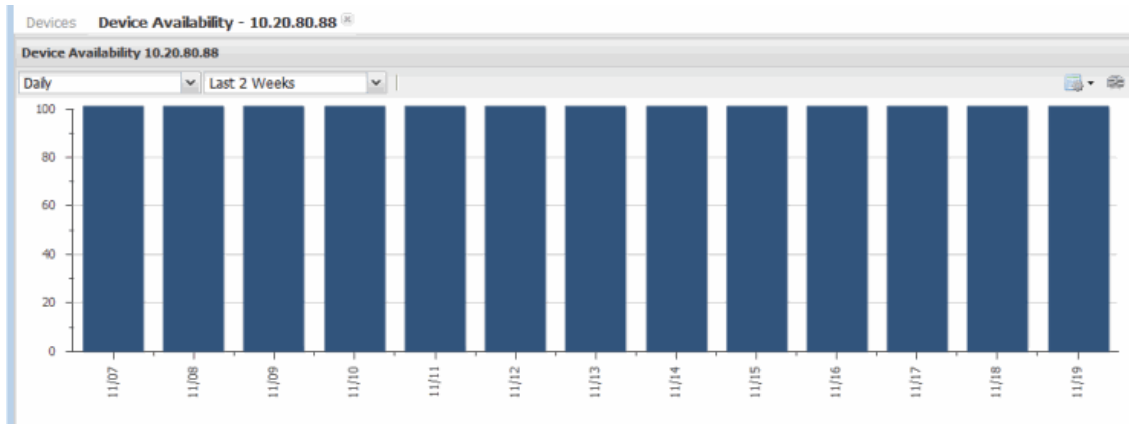

Monitor ExtremeControl Engine Memory Use


The ExtremeCloud IQ - Site Engine Host Resources report lets you monitor physical, virtual, and swap memory usage on an ExtremeControl engine.

As you monitor an engine's physical and virtual memory, keep in mind that it is common for Linux-based systems (such as the ExtremeControl engine) to show high memory utilization. When a process consumes memory, the memory remains allocated to the process under the assumption it can be required in the future. If a different process calls for that memory, and it is not in use, it is made available.


It is also important to monitor swap memory statistics for your ExtremeControl engines. When an engine starts using swap memory, it indicates a potential issue, and more active monitoring of the engine can be required. Running commands such as the "top" command provides more accurate and up-to-date information on whether swap memory is actively being used, and which processes are consuming the highest memory and CPU.

Use the **Network** tab to access the Host Resources report for an ExtremeControl engine. Right-click on an ExtremeControl engine and select View Device Details > System > Host Resources, as shown here.

Accessing the Host Resources Report

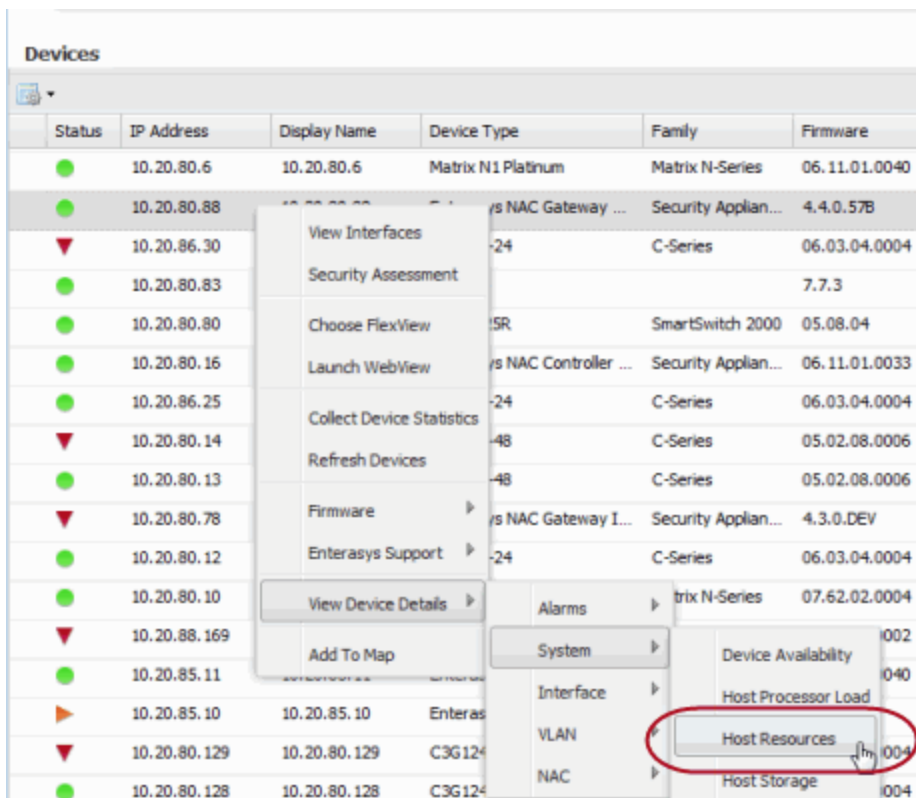

A Host Resources report for the ExtremeControl engine is displayed in a new tab, as shown below.

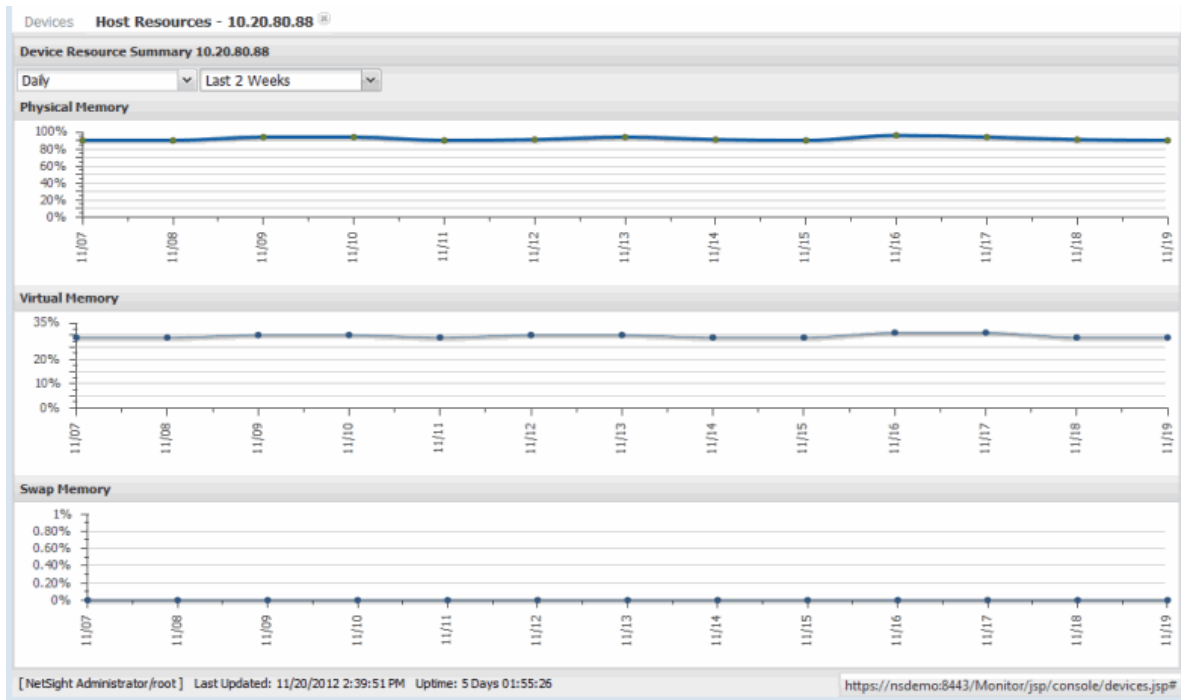
Host Resources Report

View ExtremeControl Engine Historical Data

The NAC History report provides a detailed view of the overall ExtremeControl engine load based on critical ExtremeControl functions including authentication requests, captive portal statistics, and connected agents. The report displays the latest load data as well as minimum, maximum, and average statistics for an overview of activity by function. This provides a historical view for each individual engine and is similar to the [ExtremeControl Engine Load report](#), which presents current load data for all engines.


In ExtremeCloud IQ - Site Engine, select the **Network** tab. Right-click on an ExtremeControl engine and select View Device Details > NAC > NAC History, as shown here.

Accessing the NAC History Report

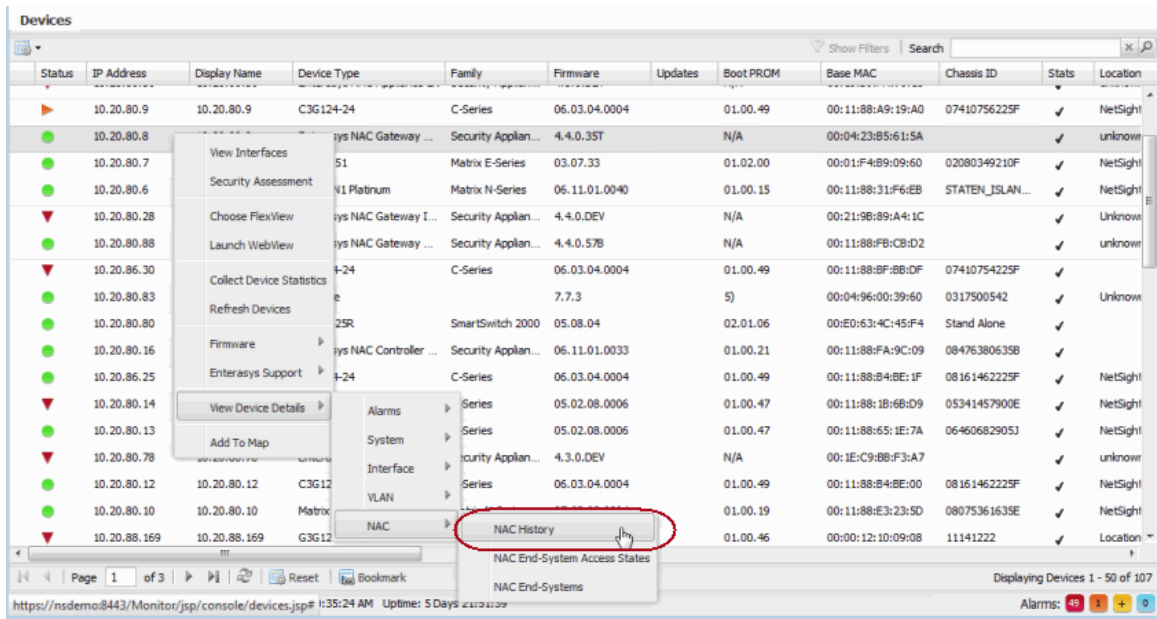

The NAC History report is displayed in a new tab, as shown below. Look at the NAC Appliance Summary report for engine load data.

NAC History Report

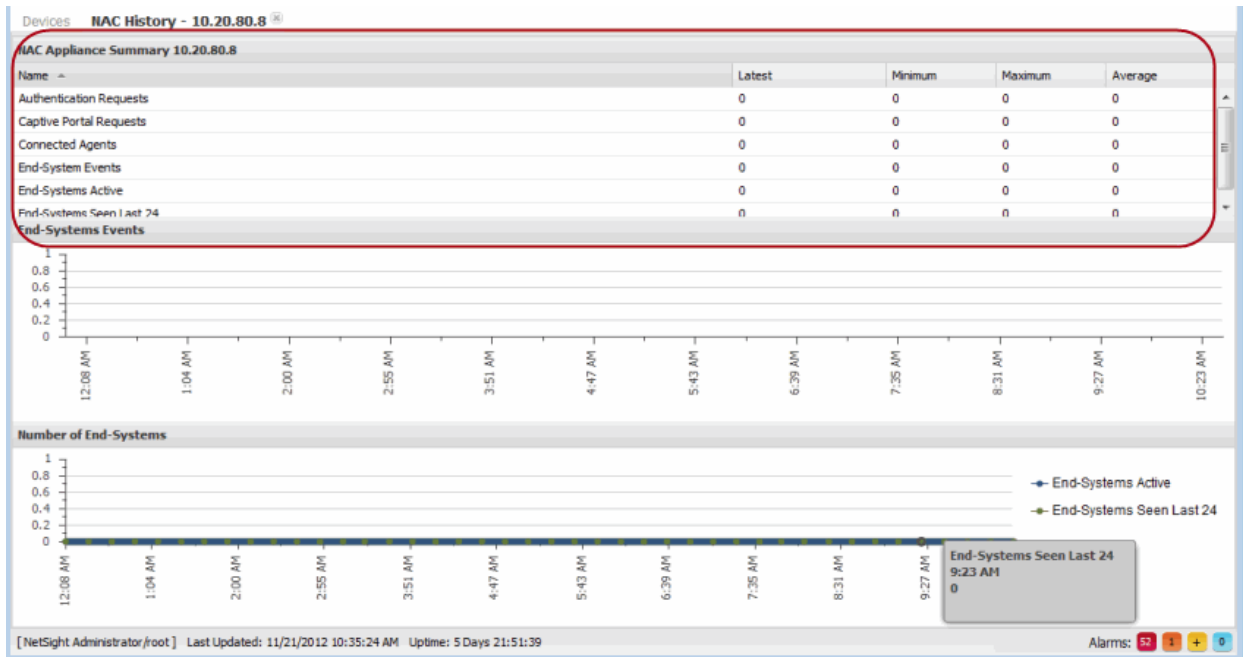


Monitor ExtremeControl Critical Events

The ExtremeControl report on Most Severe ExtremeControl Events displays the 10 most severe ExtremeControl events. If the most recent events indicate a current issue, further in-depth review of the events can be required. A good place to start would be the server.log on the ExtremeCloud IQ - Site Engine server (see [Accessing the Server Log File](#) in the ExtremeCloud IQ - Site Engine Troubleshooting section of the ExtremeCloud IQ - Site Engine Technical Reference) and the tag.log on the ExtremeControl engine (see [ExtremeControl engine Log Locations](#)). Depending on the error, additional debug options can be required to obtain more in-depth log data. For more information, see [ExtremeControl Troubleshooting](#).

In ExtremeCloud IQ - Site Engine, select the **Reports** tab. Expand the Identity and Access - Health folder and select the report.

Most Severe NAC Events Report

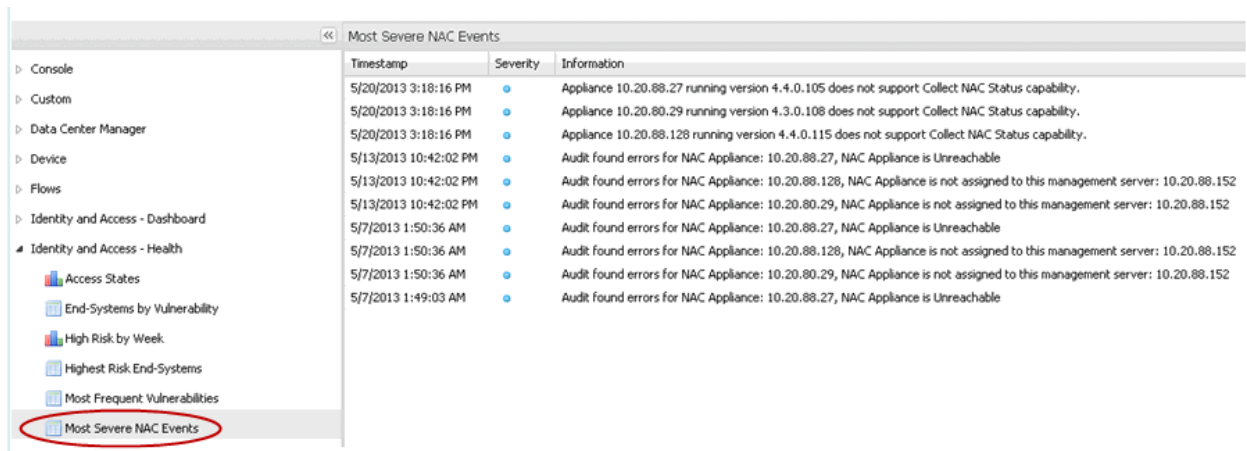


Timestamp	Severity	Information
5/20/2013 3:18:16 PM	●	Appliance 10.20.88.27 running version 4.4.0.105 does not support Collect NAC Status capability.
5/20/2013 3:18:16 PM	●	Appliance 10.20.80.29 running version 4.3.0.108 does not support Collect NAC Status capability.
5/20/2013 3:18:16 PM	●	Appliance 10.20.88.128 running version 4.4.0.115 does not support Collect NAC Status capability.
5/13/2013 10:42:02 PM	●	Audit found errors for NAC Appliance: 10.20.88.27, NAC Appliance is Unreachable
5/13/2013 10:42:02 PM	●	Audit found errors for NAC Appliance: 10.20.88.128, NAC Appliance is not assigned to this management server: 10.20.88.152
5/13/2013 10:42:02 PM	●	Audit found errors for NAC Appliance: 10.20.80.29, NAC Appliance is not assigned to this management server: 10.20.88.152
5/7/2013 1:50:36 AM	●	Audit found errors for NAC Appliance: 10.20.88.27, NAC Appliance is Unreachable
5/7/2013 1:50:36 AM	●	Audit found errors for NAC Appliance: 10.20.88.128, NAC Appliance is not assigned to this management server: 10.20.88.152
5/7/2013 1:50:36 AM	●	Audit found errors for NAC Appliance: 10.20.80.29, NAC Appliance is not assigned to this management server: 10.20.88.152
5/7/2013 1:49:03 AM	●	Audit found errors for NAC Appliance: 10.20.88.27, NAC Appliance is Unreachable

Monitor ExtremeControl Appliance Load

The ExtremeControl Appliance Load report provides a summary of end-system usage for each ExtremeControl engine on the network, including the number of active end-systems on the engine, and the number of authentication and captive portal requests per minute.

This report is useful for determining whether action is required in order to more evenly distribute the client load among available ExtremeControl engines. The report shows which engine has too many end-systems authenticating against it and which engine is underutilized and available to handle additional end-system requests. The report also provides helpful information for capacity planning and determining future needs for additional ExtremeControl hardware.

In ExtremeCloud IQ - Site Engine, select the **Control** tab. Select **System** to view the Appliance Load report.

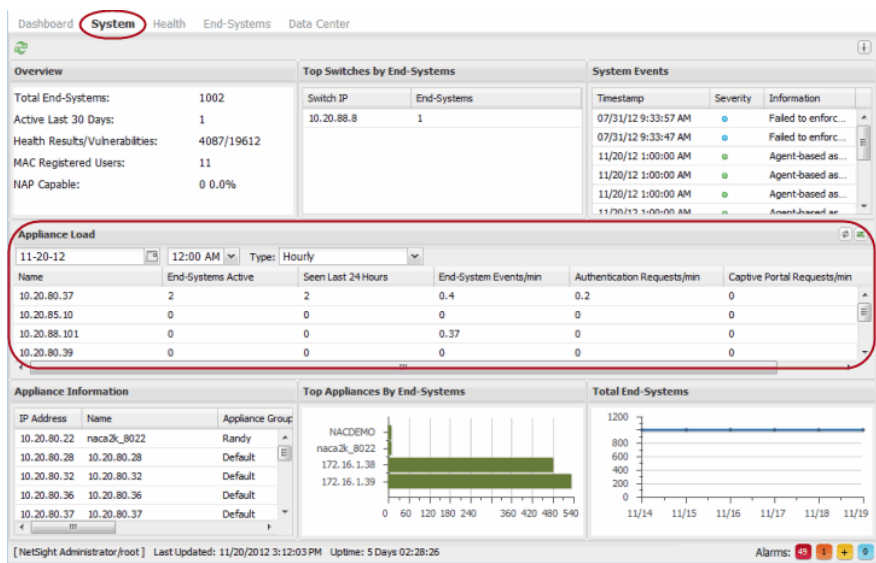


Monitor ExtremeControl End-System Health

The ExtremeControl Health reports provide information on overall end-system health.

The Risk Level report helps you quickly determine the overall status of threats and vulnerabilities to the entire ExtremeControl environment. Select a specific section of the chart to launch a report of all end-systems that meet that criteria. Select the "High" portion of the chart to display a report of all end-systems that have a high-risk vulnerability.

The Most Frequent Vulnerabilities report lists the top vulnerabilities detected and the number of end-systems reporting that vulnerability. This report is useful in identifying specific areas of the user environment that needs immediate attention, or in determining the scale of a specific vulnerability.

In ExtremeCloud IQ - Site Engine, select the **Control** tab. Select **Health** to view the end-system reports.

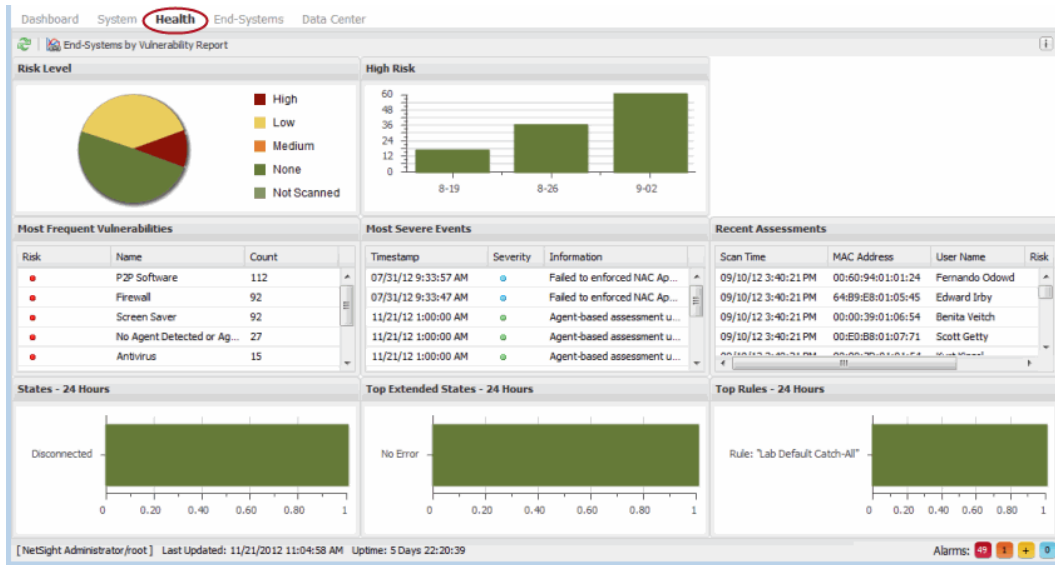

Create Alerts with ExtremeControl Notifications

ExtremeCloud IQ - Site Engine lets you create alerts for when specific events or triggers take place in ExtremeControl. Each notification can be defined for a specific type and trigger. The notification type defines the source of the event that activates the notification, such as end-system, end-system group, user group, or health result. The trigger determines when a notification action is performed, based on filtering for a specific event. For example, if you select end-system group as your type, the trigger can be when entries in the group are added or removed.

Notifications can be further defined by specific conditions that, in addition to the trigger, determine when actions are performed. For example, you can configure a condition that filters notifications based on selected engines, user groups, and device groups, as well as ExtremeControl profile, time, and location.

Notifications can have a variety of actions configured such as sending an email, generating a syslog message, sending an SNMP trap, or launching a custom program or script. Email notifications can be customized so that only certain groups are notified for specific events based on the selected mailing list.

Use the [Alarms & Events tab](#) to configure ExtremeControl notifications.


ExtremeCloud IQ - Site Engine Custom Reports

ExtremeCloud IQ - Site Engine Custom Reports let you create specialized reports for monitoring ExtremeControl engine performance. Create reports on a variety of

ExtremeControl engine statistics including CPU load, disk usage, memory usage, and device availability. Individual reports of interest can be bookmarked for ease of use in accessing the desired information.

On the **Reports** tab, expand the Custom folder and select Custom Report. Use the Options panel to configure your custom report by selecting a report target (such as ExtremeControl), the statistic to monitor (such as CPU utilization), and the time period and date range to display. Select the **Submit** button to generate the report. An example report on ExtremeControl engine CPU utilization is shown below.

TIP: CPU usage can be monitored more closely in real-time using diagnostic tools such as the Linux "top" command.

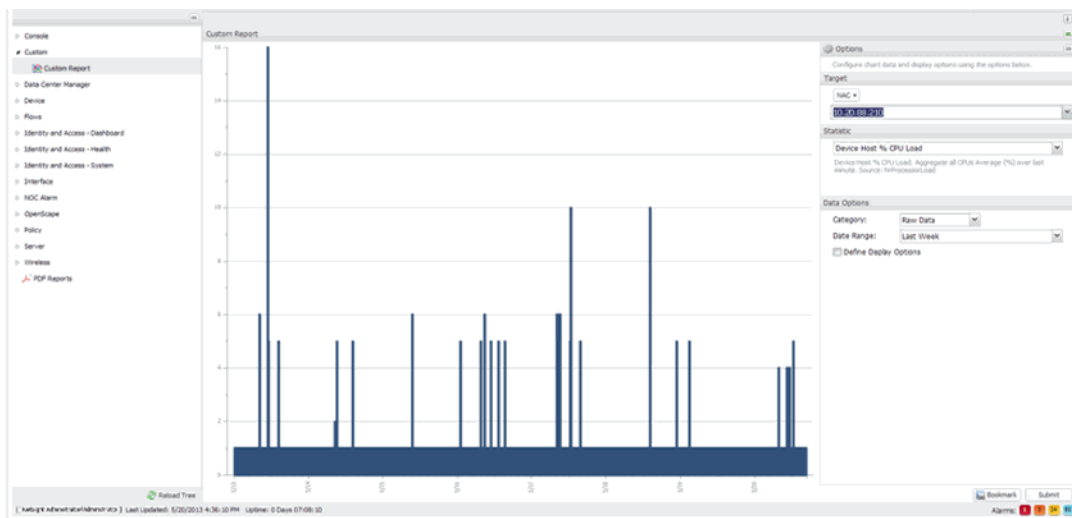

10/2021
 21.09.10
 Contents Subject to Change Without Notice

PN: 9037218-00

Configure RADIUS Clients to Monitor ExtremeControl Engines in ExtremeCloud IQ - Site Engine

This Help topic tells you how to configure RADIUS monitoring tools to monitor ExtremeControl engine performance and availability.

Use the following steps to create a list of RADIUS monitoring clients and configure a special authentication mapping for your AAA configuration used to authenticate the clients.

If you have multiple engine groups, you can use the same tools to monitor different engine groups, but each engine group is configured separately.

1. Access the Control > Access Control tab in ExtremeCloud IQ - Site Engine.
2. Select Engines in the left panel.
3. Select the engine group or single engine for which you are configuring RADIUS monitoring tools in the Engine Groups or All Engines list, respectively.
4. In the right-panel **Details** tab, select the **Edit RADIUS Monitor Clients** button.
5. The **Configure RADIUS Monitor Clients** window opens.
6. Use this window to create a list of the monitoring tools (clients) used, and specify the shared secret to be used for all of them.
 - a. Select the **Add** button. Enter the IP address for the first client and select **OK**. Repeat for each client that you want to add.
 - b. Enter the **Server Shared Secret**. This is a string of characters used to encrypt and decrypt communications between the RADIUS Monitor clients and the engines. This string must match the shared secret configured on the client. Without the shared secret, the engines and clients will be unable to communicate. The shared secret must be at least 6 characters long; 16 characters is recommended. Dashes are allowed in the string, but spaces are not.
 - c. Re-enter the shared secret to verify it.
 - d. Select **OK**.
7. Select the **Configuration** tab in the left panel to expand it.
8. Select **AAA** in the left panel.

-
9. Select an Advanced AAA Configuration.
 10. In the right-panel Authentication Rules table, select the **Add** button to add a new mapping. (You must be using an advanced AAA Configuration in order to see the mapping table. If you are not, right-click on the AAA Configuration in the left panel and select **Make Advanced**.)
 11. The Add User to Authentication Mapping window opens.
 - a. Set the **Authentication Type** to **RADIUS Monitor**.
 - b. Set the **Authentication Method** to **Local Authentication** and select the **Password for all Authentications** checkbox. Enter the desired password that is used for all client authentications.
 - c. Select **OK**.
 12. The new mapping is listed in the mapping table. You can use the arrows to adjust the position of the new mapping in the table. In the screen below you can see that the RADIUS Monitor rule has been moved to the first row in the table because it is more granular. Select **Save** to save your changes.
 13. Select the Enforce button beneath the left-panel menu to enforce the new configuration to your engine groups.

Any authentication request coming from an IP address that matches the list of RADIUS monitor clients will be authenticated using the password you provided in the AAA mapping. In these cases, the username does not matter. The password configured will not be able to be used for authentication from any other part of the network. The ExtremeControl engine responds back with a basic accept to any RADIUS monitor client's RADIUS request.

Related Information

- [Details \(ExtremeControlEngine Groups\)](#)

ExtremeControl Performance Tuning in ExtremeCloud IQ - Site Engine

The following sections provide detailed information on how to use specific ExtremeControl tools and features to monitor and improve ExtremeControl performance.

- [Monitoring Active End-Systems](#)
- [Tuning Data Persistence](#)
- [Tuning ExtremeControl Capacity](#)
- [Using ExtremeControl Distributed Cache](#)

Monitoring Active End-Systems

Monitoring the total number of active end-systems on the network, as well as the number per engine, is useful in determining whether authentication load is distributed evenly between available ExtremeControl engines. Some engines can be at or near capacity, while others can be underutilized and available to handle additional end-systems. Use this information to review your primary and secondary ExtremeControl engines and the switches that authenticate against each engine, to determine whether you need to make adjustments to more evenly distribute the load. The goal is to evenly distribute the authentication and captive portal load across all available ExtremeControl engines as much as possible.

Engine capacity information also provides data points you can use for capacity planning and determining future hardware needs based on current load and expected growth, as well as targeting areas for design improvements such as implementing additional redundancy and disaster recovery.

As you study the capacity information, keep in mind that an engine failure for any reason means that end-systems authenticating against that engine now authenticates against the designated backup engine. In an environment where there are two ExtremeControl engines each responsible for authenticating 2,500 end-systems, a single engine outage can mean that all 5,000 end-systems might possibly authenticate against the one remaining engine. Depending on a variety of factors, oversubscribing an engine could lead to scenarios such as failed or intermittent authentication responses, poor end-user experience, or restricted access to the network.

NOTE: Any authentications previously performed by the unavailable primary engine remain authenticated until the session is removed or times out. At that point, subsequent authentication requests are sent to the backup engine. Whether authentication requests automatically revert to the primary engine when it is deemed available is a function of individual switch RADIUS operation.

Locating the End-System and Capacity Information

The **Configuration** tab in NAC Manager displays authenticated end-system and capacity information for each ExtremeControl engine. To view this information, select an ExtremeControl engine in the NAC Manager tree and then select the **Configuration** tab. The Current Capacity field indicates the number of end-systems that have authenticated to the ExtremeControl engine within the last 24 hours out of the total supported authentication capacity for the ExtremeControl engine. For example, a current capacity value of 1365/3000 indicates that 1,365 end-systems have authenticated against this ExtremeControl engine within the last 24 hours, and this specific engine is rated to handle 3,000 authentications. The total number of supported authentications can vary depending on enginetype.

Configuration Tab - Current Capacity

The screenshot shows the configuration page for an appliance with IP address 10.20.88.128. The 'End-System Capacity' field is highlighted with a red circle, indicating that 1,365 end-systems are currently authenticated out of a total capacity of 3,000, which is 46% utilization.

To view capacity information for all ExtremeControl engines in one place, select the All NAC Appliances folder in the tree and select the **NAC Appliances** tab. The authenticated user counts and engine capacity are displayed under the Capacity column.

NAC Appliances Tab - Capacity

Name	IP Address	Appliance Type	Primary Count	Secondary Count	Model	Version	CPU Load (0-100%)	Memory Used	Memory Available	Connected Agents	Capacity
NAC-88128	10.20.88.128	NAC Gateway	1	0	NETSIGHTVEAL	4.4.0.115	0	431.48 MB	11.22 GB	0	744/3000 (25%)
NAC-88211	10.20.88.211	NAC Gateway	2	1	NETSIGHTVEAL	5.0.0.160B	0	8.82 GB	2.91 GB	0	1365/3000 (46%)
NAC-88210	10.20.88.210	NAC Gateway	0	2	NETSIGHTVEAL	5.0.0.153B	0	563.85 MB	10.99 GB	0	78/3000 (3%)

Engine load reporting is also available within ExtremeCloud IQ - Site Engine. The [NAC Appliance Load report](#) provides a summary of end-system usage for each

ExtremeControl engine on the network, including the number of active end-systems on the engine, and the number of authentication and captive portal requests per minute.

Tuning Data Persistence

ExtremeControl Data Persistence options provide granular control for defining how long end-system and end-system related information is retained and stored. These options let you customize the aging of stale end-systems, as well as the length of time to retain end-system events and end-system assessment health results.

Access Administration > Options > Access Control > Data Persistence to open the Data Persistence options tab. The options included in the three sections of the window are described below.

Access Control > Data Persistence

Daily Persistence
Run Data Persistence Checks Each Day At: 2:00 AM

Age End-Systems
Age End-Systems Older Than: 90 day(s)
Remove Associated MAC Locks and Occurrences in Groups:
Remove Associated Registration Data:

End-System Events
Age End-System Events Older Than: 90 day(s)
Persist Non-Critical End-System Events:

Transient End-Systems
Delete Rejected End-Systems:
Delete Transient End-Systems Older Than: 1 day(s)

End-System Information Events
Generate Access Control Events When End-System Information is Modified:

Health Results
Only Persist Health Result Details for Quarantined End-Systems (with the exception of agent-based results):
Persist Duplicate Health Result Summary and Details:
Save a Health Result Summary for the Last N Health Results per End-System: 30
Save the Details for the Last N Health Results per End-System: 5

Wireless End-System Events
Process and Include Wireless End-System Events in End-System Event Logs:

Restore Defaults Reset Auto Save

Age End-Systems

Retaining large amounts of stale end-system data can lead to ExtremeCloud IQ - Site Engine client performance issues as well as server performance degradation in larger networks or on ExtremeCloud IQ - Site Engine servers that do not have optimal hardware. Reducing unnecessary stale data in the database leads to improved performance, smaller (and faster) backup files, as well as reduced disk utilization on the server. (Performance differences vary between individual ExtremeControl deployments.)

By default, stale end-systems are aged out after 90 days of inactivity. In high volume networks with frequent short-term users (for example, an environment with a lot of visitors

or contractors), you can change the number of days to a lower amount. Aging stale end-systems removes inactive and potentially one-time end-systems from the database and NAC Manager tables, making it easier to monitor and locate active end-systems on the network.

The option to remove associated MAC locks and occurrences in groups is disabled by default. For networks with a large volume of short-term authentications, as well as users who connect to the network infrequently but on a recurring basis, this ensures these end users retain any assigned end-system group membership and are authorized against the proper ExtremeControl rule the next time they authenticate to the network, should their end-system age out. If this is not a concern, consider selecting this option to remove group membership. Excessively large end-system groups can have an impact on both the server and engine. This varies by deployment, but generally, networks containing end-system groups with 30,000 to 35,000 end-systems should have this option selected to ensure stale data is properly handled.

By default, end-system registration data associated with stale end-systems is also removed when an end-system ages out. Even though registrations have an independent expiration timer and removal option, this removes registrations associated with stale end-systems prior to the defined registration expiration, maintaining active end-system registrations in the database and keeping end-system and registration information in sync.

End-System Event Persistence

End-system events track authentication and ExtremeControl related activity such as IP and OS resolution, state changes, and assessment information. These events are maintained in memory and are archived in log files on the ExtremeCloud IQ - Site Engine server. Due to the high volume of event activity, the option to persist non-critical events is disabled by default, and certain non-critical end-system events are not retained.

(Examples of non-critical events include duplicate or unchanging events, such as events tied to reauthentication where an end-system's state hasn't changed.) Removing events that are redundant or show no change leaves more space to retain those events that do indicate active changes, maintaining end-system event efficiency.

However, networks with fewer end-systems, or those not utilizing ExtremeControl features that create additional events such as registration and assessment, could choose to enable the option to persist non-critical events, since they can display events maintained in memory for a longer period than those in a more dynamic environment.

End-system events are stored in log files on the ExtremeCloud IQ - Site Engine server. These logs are available in the <install directory>/Extreme_Networks/NetSight/appdata/logs directory and are identified by the filename convention:

nacESE.date_version.log (for example, nacESE.2012_12_31_01.log, nacESE.2012_12_31_02.log). Events are continuously saved in the nacESE files with each individual file growing to about 5 MB before it is archived and a new log file is started for that day. Each day, when the Data Persistence check runs, it removes all log files that are older than the number of days specified (90 days by default). The length of time to retain the log files depends on your security policy (how long records need to be kept), system hardware limitations (disk availability), and the overall amount and type of activity logged.

The number of end-systems and activity on the network directly impacts the number of nacESE event log files generated on a daily basis. Monitoring the number of files generated for a period of time provides a baseline of the amount of space being consumed by these events and helps determine whether additional action is required to manage them.

Health Result Persistence

By default, a health result summary is saved for the last 30 assessments per end-system. A full, detailed health result report is retained for the last five assessments for each individual end-system. The number of summaries and detailed reports to save depends on your company's security policy, and how long summary and detailed assessment data is required.

For example, in an environment where end-systems are managed and generally compliant, retaining extended detailed assessment results is not necessary. Whereas, in some environments, end-system monitoring is much more stringent and specific guidelines specify the length of time this type of data must be retained. Other factors to consider when reviewing these settings are the frequency, level (heavy versus light), and type of scans (agent-less or agent-based) being performed.

If you select the option to only save health result details for quarantined end-systems, all health result details resulting in an Accept State are discarded. This applies only to agent-less assessment, as agent-based health result details are always saved for all end-systems, regardless of whether the result indicates an Accept or Quarantine state. (The number of health result details saved is determined by the option described above.)

You can select an option to save duplicate health result summaries and details, if desired. By default, duplicate health results are not saved. For example, if an end-system is scanned five times during the week with identical assessment results each time, the duplicate health results are not saved (with the exception of administrative scan requests such as Force Reauth and Scan, which are always saved). This reduces the number of health results saved to the database.

Tuning ExtremeControl Capacity


The NAC Capacity option in NAC Manager controls the configuration of internal ExtremeCloud IQ - Site Engine resources (server processing queues, timing, etc.) allocated to ExtremeControl services. These resources are specifically targeted towards the processing of incoming end-systems, end-system events, and health result data sent from ExtremeControl engines to the server. The greater the number of end-systems and engines in your ExtremeControl deployment, the more resources ExtremeControl services require for processing the incoming information updates sent by each ExtremeControl engine.

Indications that capacity settings are insufficient can surface in the form of slower processing of end-system information or possibly missing updates. Modifying the capacity level upwards, incrementally allocates additional server resources dedicated to the processing of this data. Each level provides increased queue sizes to handle the greater volume of incoming data. In addition, changes are made in the frequency in which data is saved, as well as the amount of data saved in each operation. The changes enable ExtremeCloud IQ - Site Engine to more efficiently process the larger amount of data.

If insufficient resources is not the actual problem, the allocation of additional resources can ultimately have little or no effect on performance. Because of this, it is important to first verify that the ExtremeCloud IQ - Site Engine server is installed on a system with appropriate resources in terms of both hardware and role (a dedicated management server versus one performing multiple roles) and that the resources are commensurate with the size of the ExtremeControl deployment.

Insufficient server hardware could appear as an ExtremeCloud IQ - Site Engine performance issue, where in reality, the server hardware resources are not adequate for the deployment.

To adjust ExtremeControl Capacity, access the NAC Manager options. From the NAC Manager menu bar, select Tools > Options to open the Options window. Expand the NAC Manager Options folder and select Advanced Settings.

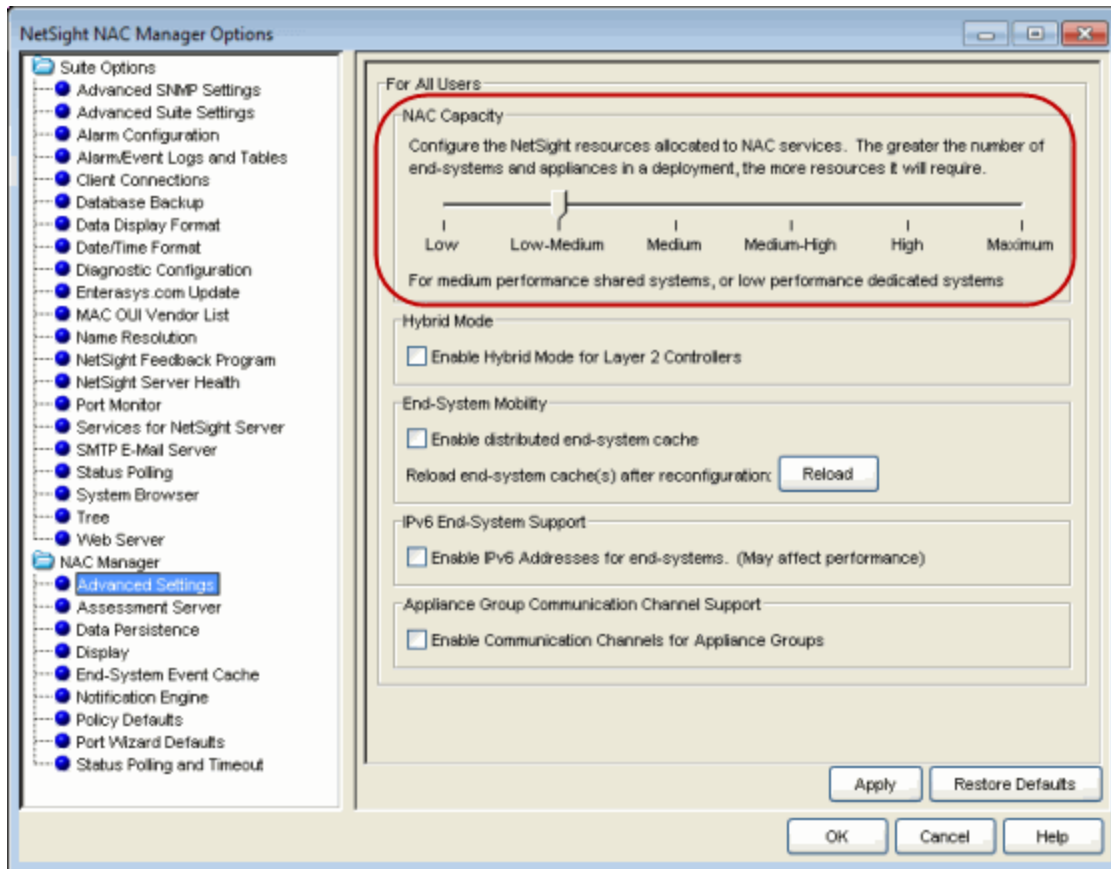Advanced Settings Options - NAC Capacity

Using ExtremeControl Distributed Cache

The ExtremeControl distributed end-system cache is an optimization recommended for large enterprise environments as engine a way to improve response times when handling end-system mobility. Enabling this option improves ExtremeControl performance when discovering new end-systems as they connect, or when end-systems move (and authenticate) from one location to another in the network.

Use of the distributed end-system cache feature requires that it is activated on both the ExtremeCloud IQ - Site Engine server and on all ExtremeControl engines in order to take advantage of the optimized communications. (See the instructions below.)

NOTE: The Distributed end-system cache functionality must be enabled in environments using the ExtremeControl DNS Proxy to redirect clients to the captive portal.

When this feature is enabled, end-system information similar to that in the end-systems table is stored in memory on the ExtremeCloud IQ - Site Engine server and

ExtremeControl engine. Each cache contains the same up-to-date information, enabling the engine to perform lookups for end-system information in its local memory cache instead of having to query the server for updated information. Any changes to end-system information are propagated from each to the ExtremeCloud IQ - Site Engine server, which then replicates updates to each ExtremeControl engine so all have a synchronized copy of real time end-system information.

Implementation of this feature is **not** recommended unless there is sufficient network bandwidth available to handle the additional overhead in communicating updates, as well as a fast connection between the ExtremeCloud IQ - Site Engine server and the ExtremeControl engine. Take additional consideration prior to implementing this functionality on engines that reside in a location where the data path traverses a WAN link.

To enable on the ExtremeCloud IQ - Site Engine server:

Select the **Enable Distributed End-System Cache** option on the Administration > Options > Access Control > **Advanced** tab. Enabling this option requires an enforce of the engine.

To enable on the ExtremeControl engine:

From the NAC Manager menu bar, select Tools > Options to open the Options window. Expand the NAC Manager Options folder and select Advanced Settings. The option is in the End-System Mobility section. When you enable or disable this option, you must select the **Reload** button to reload the cache configuration on the ExtremeCloud IQ - Site Engine server.

NAC Manager and ExtremeControl Troubleshooting in ExtremeCloud IQ - Site Engine


The following sections provide information on tools used when troubleshooting NAC Manager and ExtremeControl engine issues.

- [NAC Manager Event Logging](#)
- [ExtremeControl Engine Real-time Status](#)
- [End-System Troubleshooting](#)

NAC Manager Event Logging

The Event View at the bottom of the NAC Manager main window displays error and informational messages about NAC Manager operations and provides information on end-systems attempting to connect to the network through an ExtremeControl engine.

NAC Manager Event View

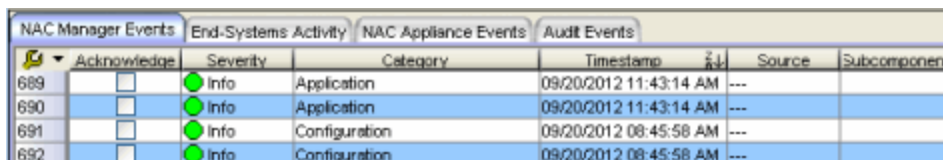

NAC Manager Events		End-Systems Activity		NAC Appliance Events		Audit Events	
▼	Acknowledge	Severity	Category	Timestamp	Source	Subcomponent	
689	<input type="checkbox"/>	Info	Application	09/20/2012 11:43:14 AM	---		
690	<input type="checkbox"/>	Info	Application	09/20/2012 11:43:14 AM	---		
691	<input type="checkbox"/>	Info	Configuration	09/20/2012 08:45:58 AM	---		
692	<input type="checkbox"/>	Info	Configuration	09/20/2012 08:45:58 AM	---		

There are four tabs:

- **NAC Manager Events** - This tab displays error and informational messages about NAC Manager system operations, including configuration changes and enforce operations.

Use this tab when trying to locate forensic information such as when and who made changes to the ExtremeControl configuration, and when and for how long communication with an ExtremeControl engine was lost. This event log also captures NAC Manager functional and security-related warnings that the system issues when auditing its own configuration, as well as events tied to [data persistence](#) checks, including which end-systems were removed and when.

Important system notification messages are also logged here, including when new

agent-less assessment updates are available and when certain system default credentials should be changed.

- **End-Systems Activity** - This tab provides information on all the end-systems that have attempted to connect to the network. It displays all end-system activity since the client was launched.
- **NAC Appliance Events** - This tab provides information on ExtremeControl engine system events including RADIUS configuration success or failure, completed reauthentications, and management logins (such as Telnet or SSH configured for external authentication). The event log displays engine activity since the NAC Manager client was launched and like NAC Manager Events, is an excellent source for historical information when performing a forensic investigation of a recent event.
- **Audit Events** - This tab provides information on ExtremeControl Registration events such as when a device or user is added during the registration process, or an end-system is added, removed, or updated via the registration administration web page. It displays all registration activity since the client was launched.

ExtremeControl Engine Real-time Status

Use the following tools to monitor ExtremeControl engine real-time statistics, as well as view diagnostic information in the ExtremeControl engine Administration Web Page (WebView), and ExtremeControl information in the ExtremeCloud IQ - Site Engine Administration tab.

NAC Appliances Tab

The **NAC Appliances** tab provides CPU and memory utilization statistics for all your ExtremeControl engines. The CPU Load column shows the percentage of the engine's CPU that is currently being used. This value gives you an indication of how busy the engine is and helps you determine if your network needs additional engines, or if you need to change your network configuration so that the load is more evenly distributed among your existing engines.

NAC Appliances Tab

Name	IP Address	Appliance Type	Version	CPU Load (0-100%)	Memory Used	Memory Available	Capacity
10.20.80.39	10.20.80.39	NAC Gateway	4.2.0.DEV	0	0.0 B	0.0 B	0/1500 (0%)
10.20.80.38	10.20.80.38	NAC Gateway	4.4.0.DEV	0	0.0 B	0.0 B	0/3000 (0%)
10.20.80.37	10.20.80.37	NAC Gateway	4.4.0.DEV	0	496.39 MB	11.39 GB	0/3000 (0%)
172.16.1.39	172.16.1.39	NAC Gateway	NAC-V v4.3.0 demo	0	0.0 B	0.0 B	

In addition to the information in the table, you can launch two FlexViews with CPU, memory, and disk utilization information from the right-click menu off one or more engine in the **NAC Appliances** tab.

Launch the CPU Utilization View (Host Processor Load FlexView).

Host Processor Load FlexView

The screenshot shows a window titled "Host Processor Load" with a toolbar and a table. The table has columns for IP Address, Device Index, Description, and 1 Minute Processor Load. The data rows are as follows:

IP Address	Device Index	Description	1 Minute Processor Load
10.20.80.28	768	GenuineIntel: Intel(R) Xeon(R) CPU E5410 @ 2.33GHz	1
10.20.80.28	769	GenuineIntel: Intel(R) Xeon(R) CPU E5410 @ 2.33GHz	1
10.20.80.28	770	GenuineIntel: Intel(R) Xeon(R) CPU E5410 @ 2.33GHz	1
10.20.80.28	771	GenuineIntel: Intel(R) Xeon(R) CPU E5410 @ 2.33GHz	1
10.20.80.30	768	GenuineIntel: Intel(R) Pentium(R) D CPU 3.20GHz	1
10.20.80.30	769	GenuineIntel: Intel(R) Pentium(R) D CPU 3.20GHz	1

At the bottom of the window, it displays "2 Devices Queried, 2 Completed, 6 Rows Retrieved" and a progress bar at 100%.

Launch the Memory and Diskspace Utilization View (Host Storage FlexView).

Host Storage FlexView

IP Address	Type	Description	Percent Used	Total Memory	Memory Used
10.20.80.28	hrStorageRam	Physical memory	37.85%	8.5 GB	3.22 GB
10.20.80.28	hrStorageVirtualMemory	Virtual memory	15.04%	21.39 GB	3.22 GB
10.20.80.28	hrStorageOther	Memory buffers	3.73%	8.5 GB	317.27 MB
10.20.80.28	hrStorageOther	Cached memory	100%	2.34 GB	2.34 GB
10.20.80.28	hrStorageVirtualMemory	Swap space	0%	12.89 GB	0 B
10.20.80.28	hrStorageFixedDisk	/	2.51%	50.4 GB	1.27 GB
10.20.80.28	hrStorageFixedDisk	/opt	1.27%	167.77 GB	2.13 GB
10.20.80.30	hrStorageRam	Physical memory	95.02%	1.05 GB	1 GB
10.20.80.30	hrStorageVirtualMemory	Virtual memory	31.11%	3.22 GB	1 GB
10.20.80.30	hrStorageOther	Memory buffers	-	289.73 MB	-
10.20.80.30	hrStorageOther	Cached memory	-	432.89 MB	-
10.20.80.30	hrStorageOther	Shared memory	-	0 B	-
10.20.80.30	hrStorageVirtualMemory	Swap space	0%	2.16 GB	40.95 KB
10.20.80.30	hrStorageFixedDisk	/	6.1%	16.14 GB	983.52 MB
10.20.80.30	hrStorageFixedDisk	/opt	3.85%	41.27 GB	1.59 GB


2 Devices Queried, 2 Completed, 15 Rows Retrieved 100%

ExtremeControl Engine Administration Web Page (WebView)

To access status and diagnostic information for an individual ExtremeControl engine, launch WebView by right-clicking on an ExtremeControl engine in the left-panel tree, as shown below. (You can also access the administration web page using the following URL: <https://<ExtremeControlEngineIP>:8444/Admin>.)

The default user name and password for access to this web page is "admin/Extreme@pp." The username and password can be changed in NAC Manager using the Advanced Configuration window (available from the Tools menu > Manage Advanced Configurations) and selecting the Engine Settings > Miscellaneous Tab > Web Service Credentials field.

Launch WebView

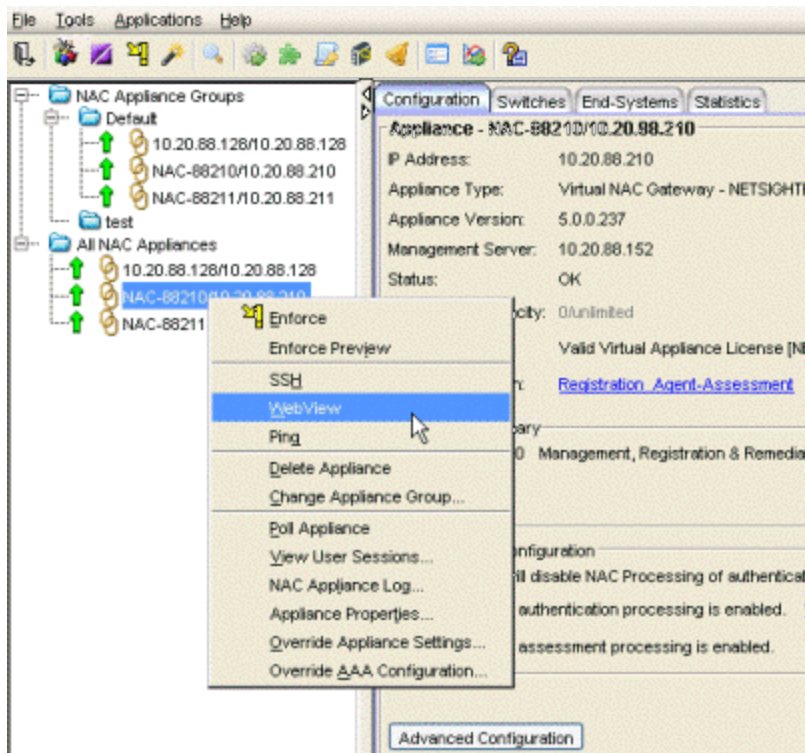

The Home web page provides resource details such as current CPU and memory usage. Status details provide a Current and Maximum counter for many critical functions. Excessive authentication requests or failures are easily identified, including when the Max Reached value occurred. This helps to identify the severity of a current problem or match information with prior events when performing a forensic review.

NOTES: Memory usage is normally close to 100% to enable better performance.

Engine Administration Web Page

The screenshot displays the 'Configuration Details' section of the ExtremeControl Engine Administration Web Page. On the left is a navigation menu with options: Home, Status, Diagnostics, Log Files, Downloads, and Utilities. The main content area is divided into three sections:

- Configuration Details:** A table showing system information:

NAC Engine Information	NAC Gateway - NETSIGHTEVAL v.5.0.0.237
License Status	Valid License [NETSIGHTEVAL]
NAC Engine IP	10.20.88.210
NetSight Server IP Address	10.20.88.152
NAC Server Status	up, ready since Thu Sep 05 15:13:23 EDT 2013
NAC Up Time (HH:MM:SS.mmmm)	250:23:03.356
- Resource Details:** A table showing system resource usage:

CPU Usage	User=0.12% System=0.01% Niced=0.00% Idle=99.87% Total=0.13%
Memory Usage	Used=13.79% Free=86.21% Total=11.64 GB
Swap Space	Used=0.00% Free=100.00% Total=11.64 GB
NAC Process	Heap=68.33% Non-Heap=31.67% Total=139.58 MB
- Status Details:** A table with columns: Statistic, Current, Maximum, Total, and Max Reached.

Statistic	Current	Maximum	Total	Max Reached
Authentication Requests	0/min	195/min	34	Thu Sep 05 15:14:32 EDT 2013
Authentication Successes	0/min	2/min	0	Thu Sep 05 15:14:32 EDT 2013
Authentication Failures	0/min	3/min	0	Thu Sep 12 15:24:05 EDT 2013
Radius Challenges	0/min	9/min	0	Mon Sep 09 18:43:52 EDT 2013
Invalid Authentication Requests	0/min	4/min	34	Thu Sep 12 17:31:05 EDT 2013
Duplicate Authentication Requests	0/min	0/min	0	Not Available
Malformed Authentication Requests	0/min	1/min	0	Thu Sep 05 15:14:32 EDT 2013
Bad Authentication Requests	0/min	0/min	0	Not Available
Dropped Radius Packets	0/min	193/min	0	Thu Sep 05 15:15:32 EDT 2013
Unknown Radius Types	0/min	0/min	0	Not Available
Assessment Requests	0/min	2/min	24	Sat Sep 07 13:39:41 EDT 2013
Captive Portal Requests	0/min	2/min	8	Mon Sep 09 12:31:51 EDT 2013
Contact Lost Switches	0/min	0/min	0	Not Available
IP Resolution Failures	0/min	0/min	0	Not Available

For more information, see the ExtremeControl Engine Administration Web Page section of the ExtremeControl Deployment Guide, which is in the NAC Manager user guide.

ExtremeControl Switches and Routers

When troubleshooting issues involving authentication, IP resolution, and reauthentication (etc.), the Switches & Routers page within WebView provides a variety of useful real-time data.

At the top, current and historical information is displayed on a per-switch basis. This provides insight into problems such as a single switch flooding the network with authentication requests, as well as comparative data that can be used to spot abnormalities such as a switch with a limited number of active end-systems showing an excessive number of authentications over the last month.

The Switch Configuration section is an overview of all switches assigned to the ExtremeControl engine, the RADIUS response attributes they are configured for, and the SNMP credential the ExtremeControl engine is using to communicate with the switch.

This information can be used to identify whether the ExtremeControl engine is using the current SNMP credentials to contact the switch. This can be confirmed under the Switch Dynamic Information where SNMP Contact will show as Contact Lost.

More critical information here, although perhaps more useful for support technicians, are the various workers assigned to each switch. These are dictated through the switch discovery process and detail how the ExtremeControl engine performs various functions such as using RFC 3576 or Toggle Link for reauthentication of an end-system. The SNMP Contact is from the perspective of the ExtremeControl engine to the switch, which can be different than from ExtremeCloud IQ - Site Engine Console to the switch.

Engine Administration Web Page

Switch RADIUS Request Information (7)

Switch IP	Total	Minute: Current (Min/Max)	Hour: Current (Min/Max)	Day: Current (Min/Max)	Last 31 Days
10.20.00.125	77	0 (0 / 3)	0 (0 / 21)	0 (0 / 68)	77
10.20.00.126	0	0 (0 / 0)	0 (0 / 0)	0 (0 / 0)	0
10.20.02.3	1003	0 (0 / 13)	14 (18 / 103)	306 (266 / 298)	1003
10.20.00.196	0	0 (0 / 0)	0 (0 / 0)	0 (0 / 0)	0
10.20.00.210	0	0 (0 / 0)	0 (0 / 0)	0 (0 / 0)	0
10.20.00.220	0	0 (0 / 0)	0 (0 / 0)	0 (0 / 0)	0
10.20.00.221	0	0 (0 / 0)	0 (0 / 0)	0 (0 / 0)	0

Switch Configuration Information (7)

Switch IP	Type	Primary RADIUS	Secondary RADIUS	RADIUS Response Attributes	SNMP Credentials	Device Lock	SNMP Lock
10.20.00.125	Layer 2 Out-Of-Band	10.20.00.211	N/A	Enterasys Policy	Dev_AuthPriv	Not Locked	SNMP Semaphore, permits: 10, queued requests: 0
10.20.00.126	Layer 2 Out-Of-Band	10.20.00.211	N/A	RFC 3580 - VLAN ID & Enterasys (HPath) Wireless	Dev_AuthPriv	Not Locked	SNMP Semaphore, permits: 5, queued requests: 0
10.20.02.3	Layer 2 Out-Of-Band	10.20.00.211	N/A	RFC 3580 - VLAN ID	Dev-v1	Not Locked	SNMP Semaphore, permits: 5, queued requests: 0
10.20.00.196	Layer 2 Out-Of-Band	10.20.00.211	N/A	Enterasys (HPath) Wireless	Dev-v1_priv	Not Locked	SNMP Semaphore, permits: 10, queued requests: 0
10.20.00.210	Layer 2 Out-Of-Band	10.20.00.211	N/A	Enterasys Policy	Dev_AuthPriv	Not Locked	SNMP Semaphore, permits: 5, queued requests: 0
10.20.00.220	Layer 2 Out-Of-Band	10.20.00.211	10.20.00.210	Enterasys Policy	public_v1	Not Locked	SNMP Semaphore, permits: 5, queued requests: 0
10.20.00.221	Layer 2 Out-Of-Band	10.20.00.211	N/A	RFC 3580 - VLAN ID	Cisco3750_AuthPriv	Not Locked	SNMP Semaphore, permits: 5, queued requests: 0

Switch Dynamic Information (7)

Switch IP	Cached Data	Current SNMP Contact	SNMP Failures	SysObjectID	Firmware Version	Base MAC	RADIUS Worker	Re-authentication Worker
10.20.00.125	Clear	Established	0	1.3.6.1.4.1.5624.2.1.129	0.11.2.2	00-1F-45-FC-CE-00	Enterasys Unencrypted RADIUS MIB	Enterasys MultiAuth MIBs (79)
10.20.00.126	Clear	Established	0	1.3.6.1.4.1.5624.2.1.96	6.61.0.13	00-11-00-04-0E-40	Enterasys Unencrypted RADIUS MIB	Enterasys MultiAuth MIBs (0)
10.20.02.3	Clear	Established	0	1.3.6.1.4.1.9.1.516	12.2	00-14-F2-DC-8B-C2	N/A	Cisco Authentication Framework(802.1x & MAC A
10.20.00.196	Clear	Established	0	1.3.6.1.4.1.4329.15.1.1.13	0.31.2.5	00-0C-29-50-C4-7F	Enterasys HPath RADIUS MIB	RFC 3576/5176 - Enterasys (HPath) Wireless (2)
10.20.00.210	Clear	Established	0	1.3.6.1.4.1.5624.2.1.153	5.0.0.237	00-0C-29-08-5A-9C	N/A	Toggle Link #AdminStatus MIB (0)
10.20.00.220	Clear	Established	0	1.3.6.1.4.1.9.1.516	12.2	00-21-07-80-3D-C1	N/A	Cisco dot1xPaePort & Toggle Link (0)
10.20.00.221	Clear	Established	0	1.3.6.1.4.1.9.1.516	12.2	00-21-1C-CD-E5-41	N/A	Cisco dot1xPaePort & Toggle Link (0)

ExtremeCloud IQ - Site Engine Administration - Identity and Access

The **Administration** tab in ExtremeCloud IQ - Site Engine has an Identity and Access section that provides detailed diagnostic and statistical information pertaining to advanced ExtremeControl functions. Information on web service calls, events, and distributed cache can be reviewed for signs of unexpected or failing processes.

Most of the information is useful to Engineering and Support technicians. More information is available under System-Wide ExtremeCloud IQ - Site Engine Server Diagnostics in the ExtremeCloud IQ - Site Engine Troubleshooting section of the ExtremeCloud IQ - Site Engine Technical Reference.

Administration Tab

Diagnostics Scheduler Logout

Level: Diagnostic ▾ Diagnostic Actions ▾ NAC Engine Status

Refresh

NAC Engine Statistics
 Named List Updates : 24
 Named List Saves : 17
 Named List Resyncs : 27
 Total Registrations Aged : 1
 Total End-Systems Aged : 0
 Total Health Results Aged : 0
 Named List Write Count/Requests : 22 / 27
 Named List Avg Write Time : 00:00:00.005
 Named List Longest Write Time : 00:00:00.022
 Named List Time of Longest Write : Fri Sep 13 11:30:31 EDT 2013

Appliance 10.20.88.128
 Appliance Updater Queue Size : 0
 Appliance Updater Queue Peak : 1
 Appliance Updater Queue Peak Time : Fri Sep 13 12:09:52 EDT 2013
 Appliance Named List Resyncs : 10
 Web Service Call Failures : 0
 Last Web Service Failure Time :
 Last Web Service Failure Message :

Appliance 10.20.88.210
 Appliance Updater Queue Size : 0
 Appliance Updater Queue Peak : 1
 Appliance Updater Queue Peak Time : Fri Sep 13 12:09:52 EDT 2013
 Appliance Named List Resyncs : 10
 Web Service Call Failures : 0
 Last Web Service Failure Time :
 Last Web Service Failure Message :

Appliance 10.20.88.211
 Appliance Updater Queue Size : 0
 Appliance Updater Queue Peak : 1
 Appliance Updater Queue Peak Time : Fri Sep 13 12:09:52 EDT 2013
 Appliance Named List Resyncs : 7
 Web Service Call Failures : 0
 Last Web Service Failure Time :
 Last Web Service Failure Message :

ExtremeControl Status

The NAC Status option (previously available from the **NAC Appliances** tab) has been updated and replaced by the ExtremeCloud IQ - Site Engine Show Support functionality described in the ExtremeCloud IQ - Site Engine Troubleshooting section of the ExtremeCloud IQ - Site Engine Technical Reference.

The `nacstatus` command is still available from the ExtremeControl engine CLI and can be executed to provide detailed data regarding the ExtremeControl engine. However, the Show Support function is the recommended data collection vehicle, as it provides a comprehensive look into both the operation of the server as well as all active ExtremeControl engines.

End-System Troubleshooting

Use the following tools to monitor and trouble-shoot end-system issues in NAC Manager.

End-System Events in NAC Manager

Troubleshooting specific end-system issues starts with end-system events. Events provide time-stamped logs of when specific events occurred. It is helpful to correlate

these events with diagnostic log data.

NAC Manager End-Systems Tab

The screenshot shows the NAC Manager interface. The top section is titled "End-Systems" and contains a table with the following columns: MAC Address, MAC OUI Vendor, IP Address, Switch IP, and Switch Port. The table lists several end-systems, with the 7th entry, "HTC CORPORATION", selected. To the right of the table is an "Actions" panel with buttons for "Force Reauth", "Force Reauth and Scan", "Add to Group...", "Lock MAC...", "Port Monitor", and "Summary".


Below the "End-Systems" section is the "End-System Events" section, which shows a table of events for the selected end-system. The table has the following columns: Time Stamp, IP Address, Switch IP, Switch Port, State, and User. The table contains one event:

Time Stamp	IP Address	Switch IP	Switch Port	State	User
09/10/2012 03:40:25 PM			maand-1n-ap1 (00-1F-45-6E-57-60):Prod Guest	Accept	Kenya Coppir

Engine End-System Diagnostics

To access end-system diagnostic information for a specific ExtremeControl engine, launch the ExtremeControl engine administration web page by right-clicking on an ExtremeControl engine in the left-panel tree and selecting WebView, as shown below. (You can also access the administration web page using the following URL: <https://<ExtremeControlengineIP>:8444/Admin>.)

The default user name and password for access to this web page is "admin/Extreme@pp." The username and password can be changed in NAC Manager using the Advanced Configuration window (available from the Tools menu > Manage Advanced Configurations) and selecting the Engine Settings > Miscellaneous Tab > Web Service Credentials field.

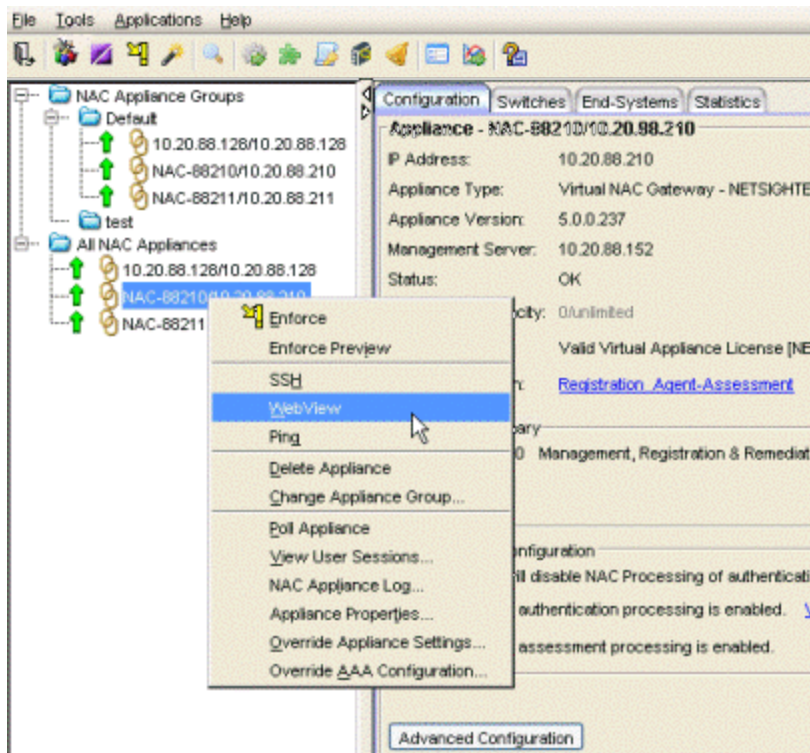Launch WebView

Expand the Diagnostics folder and select End System Diagnostics. Enable diagnostics for both MAC and IP address.


Targeting diagnostics for a specific end-system enables a majority of the debug diagnostics available on a global level, but only for the specific end-system. Therefore, diagnostics can be enabled for an extended period of time without the concern of generating the excessive log files that are possible when global diagnostics are enabled.

The log data is saved to the same location as the global diagnostics, in the /var/log/tag.log file of the ExtremeControl engine. A log entry is made in the tag.log helping to locate the portion of the log from which to start a review.

```
2013-09-13 14:51:20,783 INFO [ESD] Enabling verbose diagnostics for MAC: 00-18-8B-D6-E6-0C
```


```
2013-09-13 14:51:38,195 INFO [ESD] Enabling verbose diagnostics for IP: 10.20.87.100
```


Engine End-System Diagnostics

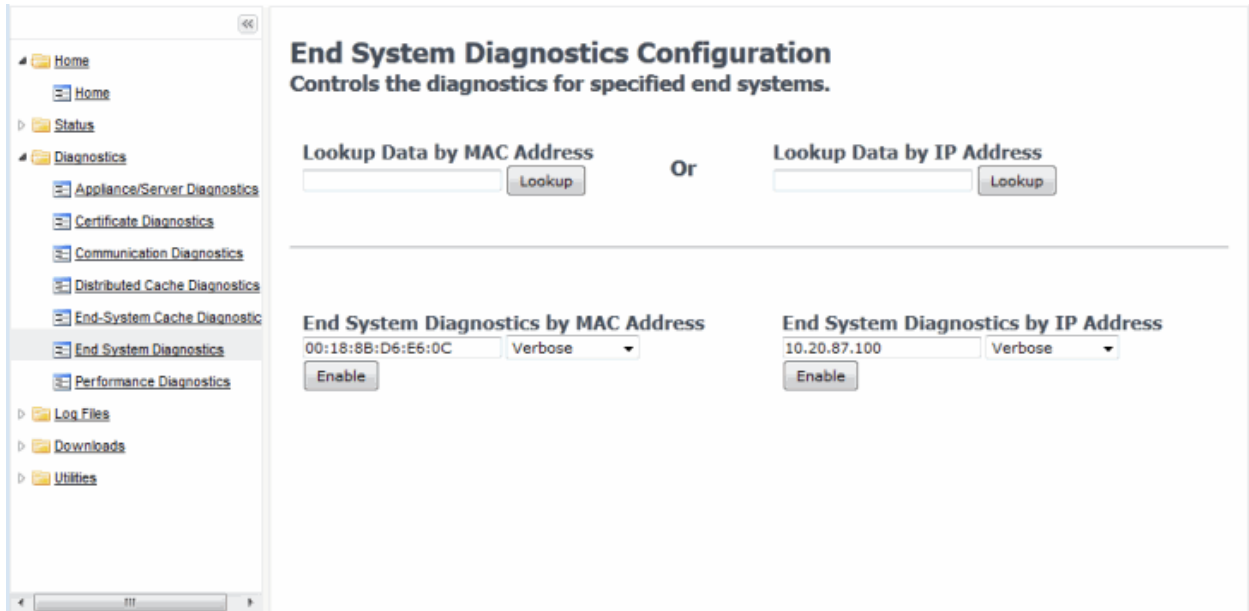

End-System Diagnostic Information

There are a variety of end-system troubleshooting tools available in NAC Manager by right-clicking on an end-system.

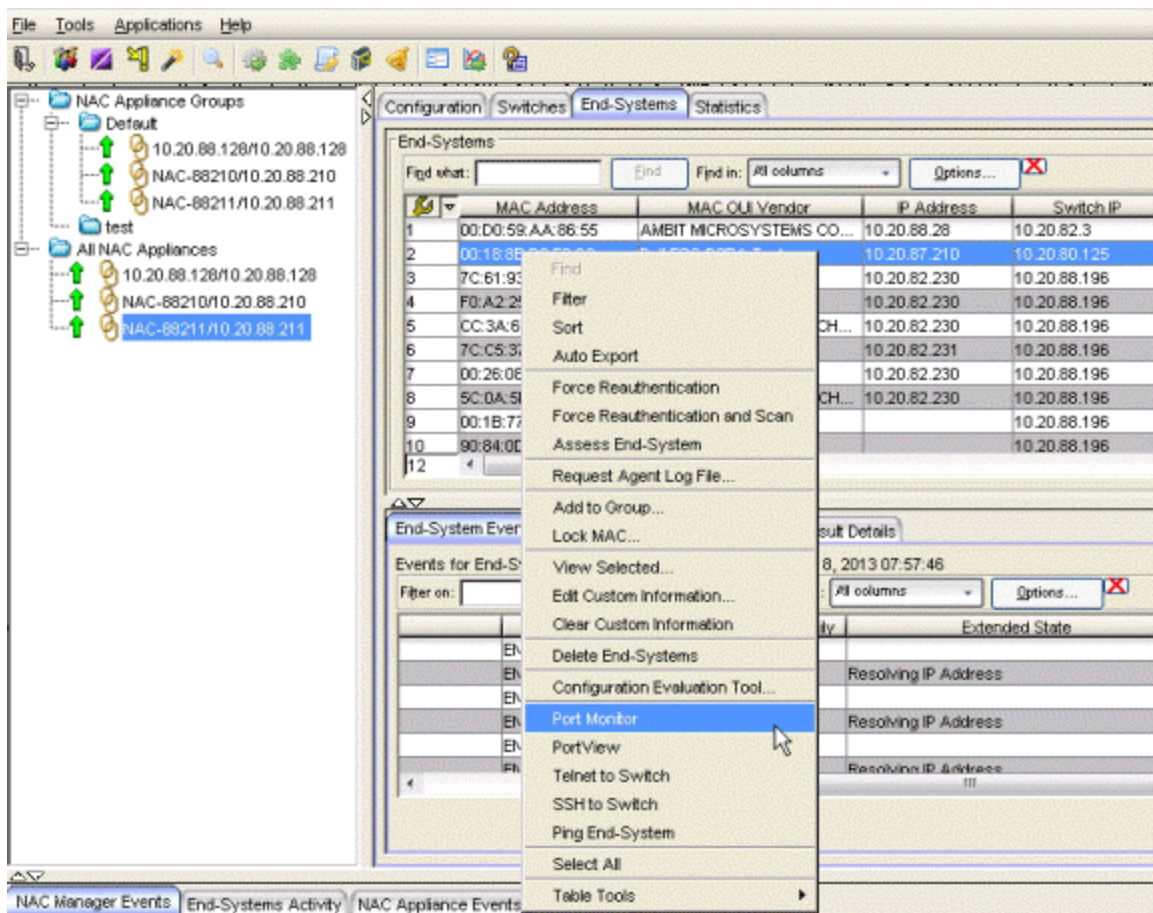Launch End-System Diagnostic Tools

- **Configuration Evaluation Tool** - Test the rules defined in your ExtremeControl Configuration in order to determine what behavior an end-system will encounter when it is authenticated on an ExtremeControl engine.
- **Port Monitor** - View detailed port and switch status information for the selected end-system including: information from interface statistics, CoS and authentication information, the Reauth Interval and Quiet Period, the interface PVID, and errors on the port.
- **PortView** - View a variety of detailed port information and statistics presented in a network topology view. PortView displays the end-system in a graphical view based on how it connects to the network. From here, tabs are available that provide interface statistics, switch resource data, detailed ExtremeControl end-system information, as well as flow data, if enabled. A right-click on the switch opens menu options to drill into more specific switch-related data. For wireless end-systems, a Real Capture can be launched from this view providing real-time packet capture of end-system communications.

- **Telnet to Switch** - Launches a Telnet session to the switch the end-system is connected to.
- **SSH to Switch** - Launches a Secure Shell (SSH) session to the switch the end-system is connected to.
- **Ping End-System** - Open a window where you can ping the end-system to determine if it can be contacted. You can view the results of the ping in the log in the window. You can also select Clear to enter another IP address or host name, if you wish.

10/2021

21.09.10 Revision -00

Contents Subject to Change Without Notice