



Advanced Gateway 2330 Secure Router 4134/2330

Software Release 10.3.1 Release Notes

1. Release Summary

Release Date: July 28, 2011

Purpose: Software maintenance release to address customer found software issues.

2. Notes for Upgrade

Release 10.2.2 was the initial release of the Advanced Gateway 2330 product. The Advanced Gateway 2330 interoperates with Avaya Aura and Avaya 9600 Series IP Desktop phones – as well as other Avaya and 3rd party call servers and phones. The product contains a suite of SIP gateway features, PSTN interface options, global signaling protocols and resiliency support. The Advanced Gateway 2330 supports 2 and 4 port FXS and FXO modules, ISDN BRI, and T1/E1 PRI module. This functionality is also in the Secure Router 2330 Product.

2.1 General Upgrade Information

Please see the technical documentation for the Secure Router 4134 and 2330 version 10.3 available at: <http://www.avaya.com/support> for details on how to upgrade your Secure Router unit.

File Names for This Release

Description	File Size	Version	File Name
Secure Router 4134 Application Image	29 425 137	10.3.1	SR4134.Z
Secure Router 4134 MIBs File	566 479	10.3.1	SR4134_R10.3.1MIBs.zip
Secure Router 2330 Application Image	30 480 750	10.3.1	SR2330.Z
Secure Router 2330 MIBs File	566 478	10.3.1	SR230_R10.3.1MIBs.zip
Advanced Gateway 2330 Application Image	30 480 750	10.3.1	AG2330.Z
Advanced Gateway 2330 MIBs File	395 381	10.3.1	AG230_R10.3.1MIBs.zip

2.2 SNMP Server

WARNING

After the upgrade to 10.3.1, the SNMP Server will not interoperate with the SNMP clients without updating the stored configuration. Two SNMP commands do not exist that were in previous releases which are “trap-host” and “trap-version” which are replace with the “target-address” command.

The SNMP Server with this new release supports SNMP version 3. There are two parts of the SNMP Server configuration that must be changed to restore the full functionality of SNMP Server. The first part is enabling SNMP clients to access the SNMP Server and the second part is setting up the SNMP trap host.

The following sections showing the upgrade procedures for SNMP Server are using the following SNMP stored configuration generated under 10.3 Release.

```
snmp-server
community public rw
chassis-id SR
enable traps
  exit traps
trap-host 10.1.1.1 public
snmp-enable
exit snmp-server
```

Updated SNMP Server section after following the upgrade procedures:

```
snmp-server
engine-id
  local 0000000c000000007f000001
  exit engine-id
community public public-sec
chassis-id SR
enable traps
  exit traps
group public-group public-sec v1
access-group public-group v1 noAuth read-view mgmt notify-view all-mibs
target-address v1addr 10.1.1.1 group-params group-tag timeout 1500 retry-count 3 remote-port 162
target-params group-params public-sec v1 noAuth
target-params group-params public-sec v1 noAuth
notify group-tag group-tag trap
notify-filter group-profile 1.3 included
notify-profile group-params group-profile
view mgmt 1.3.6.1 included
view all-mibs 1 included
snmp-enable
exit snmp-server
```

2.2.1 Configuring SNMP for version 1 access to the SNMP Server

The SNMP community command has changed under this new release and requires a series of commands to enable an equivalent access for SNMP client to access SNMP Server.

Procedure Steps**Step Action**

- 1 To enter the configuration mode, enter:
 `conf i g u r e t e r m i n a l`
- 2 To enter the SNMP Server configuration, enter:
 `s n m p - s e r v e r`
- 3 Delete the previous community command, enter:
 `n o c o m m u n i t y p u b l i c r w`
- 4 Specify the community string with security level, enter:
 `c o m m u n i t y p u b l i c p u b l i c - s e c`
- 5 Specify the group with the same security level and version 1, enter:
 `g r o u p p u b l i c - g r o u p p u b l i c - s e c v 1`
- 6 Specify the access to the group, enter:
 `a c c e s s - g r o u p p u b l i c - g r o u p v 1 n o A u t h r e a d m g m t n o t i f y a l l - m i b s`
- 7 To specify the read access, enter:
 `v i e w m g m t 1 . 3 . 6 . 1 i n c l u d e d`
- 8 To specify the notify access, enter:
 `v i e w a l l - m i b s 1 i n c l u d e d`
- 9 To exit the SNMP Server configuration mode, enter:
 `e x i t`

2.2.2 SNMP Server Configuration changes needed to support SNMP Trap Host**Procedure Steps****Step Action**

- 1 To enter the configuration mode, enter:
 `conf i g u r e t e r m i n a l`
- 2 To enter the SNMP Server configuration, enter:
 `s n m p - s e r v e r`
- 3 Specify target parameters security, enter:
 `t a r g e t - p a r a m s g r o u p - p a r a m s p u b l i c - s e c v 1 n o A u t h`
- 4 Specify the trap host address, enter:
 `t a r g e t - a d d r e s s v l a d d r 1 0 . 1 . 1 . 1 g r o u p - p a r a m s g r o u p - t a g`
- 5 Specify the trap notification, enter:
 `n o t i f y g r o u p - t a g g r o u p - t a g t r a p`
- 6 Specify the notify profile, enter:
 `n o t i f y - p r o f i l e g r o u p - p a r a m s g r o u p - p r o f i l e`
- 7 To specify the notify filter, enter:
 `n o t i f y - f i l t e r g r o u p - p r o f i l e 1 . 3 i n c l u d e d`
- 8 To exit the SNMP Server configuration mode, enter:
 `e x i t`

2.3 SIP Survivability (SSM) for upgrading from releases prior to 10.3

WARNING

SSM in this release requires that the current running SSM database must be removed prior to loading this release. Save your current SSM settings and then execute the following procedure prior to upgrading the router.

Procedure Steps

Step	Action
1	Check if SSM is running, enter: show ssm sip-server status
2	If SSM is enable, enter following commands: configure terminal service voip ssm no enable pop exit
3	Remove the SSM database, enter: clear ssm database
4	Router can now be upgraded to this release

2.4 Converting between Advanced Gateway and Secure Router

Both the Secure Router 2330 and Advanced Gateway 2330 hardware support the Secure Router and Advanced Gateway Product with the appropriate licensing and software support.

The "file version" command now shows both the version of the image and whether the image is for the Secure Router 2330 or Advanced Gateway 2330 product. The output of the command looks as follows:

```
host# file version
```

WARNING :

Do not remove the Compact Flash during this process
Do not reboot this device during this process

Versions of files in /cf0/:

```
Filename:      Version:
-----
found compressed file - skipping file body checksum
SR2330.Z      10.3.1   Image Type = Secure Router
found compressed file - skipping file body checksum
AG2330.Z      10.3.1   Image Type = Advance Gateway
```

The show system licenses display in /cf0/:

2.4.1 Converting an Advanced Gateway to Secure Router

Converting the Advanced Gateway to Secure Router involves the following steps:

- Acquire an Advanced Gateway Upgrade License for Secure Router through Avaya Customer Support
- Install the Secure Router Software (SR2330.Z) on the 2330
- Set Boot Image to SR2330.Z
- Verify Boot Image with "file version" command
- configure system license to Secure Router
- system reboots as a Secure Router 2300

For acquiring the Advanced Gateway license to convert to the Secure Router product you will need the serial number of the Advanced Gateway. This is the Serial Number of slot 0 not the Chassis Serial Number. To determine the serial number of slot 0 use the **show chassis** command. The following page shows the output of the command and the actual serial number of slot 0 of this Advanced Gateway is highlighted:

```
host# show chassis
Chassis Model: AG2330
Chassis Operational Status: NORMAL
```

```
Chassis Serial number: LBNNTMJX9600GP
Chassis Rev: 11
```

Slot/SubSlot	Card-Type	Status	Serial#
0	MPU_A	NORMAL	LBNNTMJX960080 ← Serial Number Needed for Licenses
INT	SCIM_A	NORMAL	LBNNTMJX97001H
INT	PVIM_A	NORMAL	LBNNTMJX98001P
0/7	SFP	Present	---
0/8	SFP	Present	---

INT - Mainboard internal module.

After acquiring the conversion license number for your Advanced Gateway you will need to download the Secure Router Application Image (SR2330.Z) and Secure Router MIB file (SR2330_10.2.2MIBs.zip) from: <http://www.avaya.com/support>. Install SR2330.Z file on either /cf0 or cf1. For the conversion process described in these release notes it will be showing the install related to /cf0. Also install the Secure Router MIB files to management console which is being used to monitor the Advanced Gateway.

Below shows the sequence of converting to the Secure Router product:

```
HOST# show version
Runtime: 10.2.2.0
Created: Jun 18 2010, 18:44:48
Type : AG Image ← current Active Product – Advanced Gateway
  Boot: 0.0.0.42 (NORMAL Boot)
NorBoot: 0.0.0.40
GolBoot: 0.0.0.42
```

Slot/SubSlot	Card-Type	Status	CPLD-Exp	CPLD-Main
0/-	MPU_A	NORMAL	---	0x16

```
host# show system licenses
Licensed for advance gateway
Licensed PVIM channels = 8
```

Licensed SSM user capacity = 25

host# **file ls**

CONTENTS OF /cf0:

size	date	time	name
30480750	JUN-22-2010	16:51:28	SR2330.Z
1427	JUN-23-2010	17:51:34	system.cfg
30480750	JUN-22-2010	17:32:36	AG2330.Z

Total bytes: 90188426

Bytes Free on /cf0: 36118528

host# **file version**

WARNING :

Do not remove the Compact Flash during this process

Do not reboot this device during this process

Versions of files in /cf0/:

Filename: Version:

```

-----
found compressed file - skipping file body checksum
SR2330.Z           10.3.1.0       Image Type = Secure Router ← Secure Router Image Type
found compressed file - skipping file body checksum
AG2330.Z           10.3.1.0       Image Type = Advance Gateway ← Advanced Gateway Image Type
HOST#

```

host# **configure term**

host/configure# **boot_params**

Boot dev [ftp,cf0,cf1] : cf0

Boot Ethernet Port [1-8] : 0

Boot file name : AG2330.Z SR2330.Z ← **Changing Boot Image to Secure Router**

Server name : host

Server IP address : 192.168.24.1

My IP address : 192.168.24.10

My subnet mask : 255.255.0.0

Gateway IP address :

User name : demo

Password :

Checksum enable [0:Disable,1:Enable]: 1

Show header enable [0:Disable,1:Enable]: 0

Save bootrom image [0:AutoUpdate,1:NormalBTupd,2:GoldenBTupd,3:NoUpd]: 0

display mode [0:minimum 1:maximum]: 0

BOOT PARAMETERS HAVE BEEN SAVED.

DO YOU WANT TO REBOOT: (Y/N) ? **n** ← **Do NOT reboot at this point**

host/configure# system licenses convertToRouter

Warning: Prior to converting the system to the Advance Gateway functionality.

Warning: Do the following steps

Warning: Download the Secure Router Image SR2330.Z to the boot device, either /cf0 or /cf1

Warning: Set the boot device and boot file name under the boot_params command to SR2330.Z

Warning: If you proceed, system reboots upon successful conversion

Continue with conversion ? (y/n) : **y**

Enter License key: xxxxxx ← **Enter your license key**
Completed...
Conversion Completed...
system reboots in 5 seconds
Warning: If Boot failed, you need reprogram boot menu under boot process

<Mini-Twister Micro POST>
BTS: NORMAL
DDR2: READ MEM 1GB
I2C: PASS
<Mini-Twister Micro POST Completed>
<Mini-Twister Micro POST>
BTS: GOLDEN
DDR2: READ MEM 1GB
I2C: PASS
** Boot stage: M
<Mini-Twister Micro POST Completed>

VxWorks System Boot

Copyright (c) 2010 Avaya

PROCESSOR : MPC8347 TBG
SYSTEM MEMORY : 1G
VxWorks : VxWorks5.5.1
BSP version : 1.1/0
Boot version : 0.0.0.42 (GOLDEN Boot)
Creation date : May 26 2010, 11:34:27
NORMAL Bt ver : 0.0.0.52
GOLDEN Bt ver : 0.0.0.52
Baseline ver : 0.0.0.52 (Internal version for checking)
System name : SR 2330

Press any key to stop auto-boot...
Compact Flash Device: CF0, Filename: /cf0/SR2330.Z
MODEL: SR -- allow SR image
MODEL: SR -- allow SR image
[SYSTEM] Runtime image loading done
[SYSTEM] Bootrom image loading done
[SYSTEM] Runtime image uncompressing
[SYSTEM] Preparing to transfer control (loader)...

Starting runtime image...

Chassis Model: SR2330
Chassis Operational Status: BOOT

Chassis Serial number: LBNNTMJX9600GP
Chassis Rev: 11

Slot/SubSlot	Card-Type	Status	Serial#
0	MPU_A	NORMAL	LBNNTMJX960080
INT	SCIM_A	NORMAL	LBNNTMJX97001H
INT	PVIM_A	NORMAL	LBNNTMJX98001P
0/7	SFP	Present	---
0/8	SFP	Present	---

Safenet VPN option installed.
PVDM Link set at 100M/FD

Avaya, Inc. and its Licensors
Copyright 1998-2011 All rights reserved
AVAYA (Secure Router SR2330)
Version: 10.3.1.0
Built: Jul 27 2011, 10:51:46 PST

login: admin
password:

admin logged in on Thu Jun 24 18:17:50 2010 from CONSOLE
In system.cfg, Total commands executed: 44, Total errors: 0

host# show version
Runtime: 10.3.1.0
Created: Jul 27 2011, 10:51:46
Type : SR Image ← **current Active Product – Secure Router**
Boot: 0.0.0.42 (NORMAL Boot)
NorBoot: 0.0.0.40
GolBoot: 0.0.0.42

Slot/SubSlot	Card-Type	Status	CPLD-Exp	CPLD-Main
0/-	MPU_A	NORMAL	---	0x16
1/-	ADSL_ANX_A	NORMAL	---	0x3

host# **show system licenses**
Licensed for router
Licensed PVIM channels = 8
Licensed SSM user capacity = 25
HOST#

The conversion to Secure Router is complete

2.4.2 Converting Secure Router to Advanced Gateway

WARNING

All the Advanced Gateway functionality already exists in the Secure Router Product. Converting a Secure Router to the Advanced Gateway product does not require a license but to restore it back to a Secure Router after converting it to an Advanced Gateway will require a license.

Converting the Secure Router to Advanced Gateway involves the following steps:

- Install the Advance Gateway Software (AG2330.Z) on the 2330
- Set Boot Image to AG2330.Z

- Verify Boot Image with “file version” command
- Configure system license to Advanced Gateway
- System reboots as an Advanced Gateway 2330

Below shows the sequence of converting to the Advanced Gateway product:

```
host# show version
Runtime: 10.3.1.0
Created: Jun 10 2011, 11:09:20
Type : SR Image ← current Active Product – Secure Router
  Boot: 0.0.0.42 (NORMAL Boot)
NorBoot: 0.0.0.40
GolBoot: 0.0.0.42
```

```
Slot/SubSlot Card-Type Status CPLD-Exp CPLD-Main
-----
0/-   MPU_A   NORMAL --- 0x16
1/-   ADSL_ANX_A NORMAL --- 0x3
```

```
host# configure term
host/configure# boot_params
```

```
WARNING : Configuration changeBoot dev [ftp,cf0,cf1] : cf0
Boot Ethernet Port [1-8] : 0
Boot file name      : SR2330.Z AG2330.Z ← Changing Boot Image to Advanced Gateway
Server name        : host
Server IP address   : 192.168.24.1
My IP address       : 192.168.24.10
My subnet mask      : 255.255.0.0
Gateway IP address  :
User name           : demo
Password           :
Checksum enable     [0:Disable,1:Enable]: 1
Show header enable [0:Disable,1:Enable]: 0
Save bootrom image [0:AutoUpdate,1:NormalBTupd,2:GoldenBTupd,3:NoUpd]: 0
display mode [0:minimum 1:maximum]: 1 0
```

BOOT PARAMETERS HAVE BEEN SAVED.

DO YOU WANT TO REBOOT: (Y/N) ? **n** ← **Do NOT reboot at this point**

```
HOST/configure# system licenses convertToGateway
```

Warning: Prior to converting the system to the Advance Gateway functionality.

Warning: Do the following steps

Warning: Download the Advance Gateway Image AG2330.Z to the boot device, either /cf0 or /cf1

Warning: Set the boot device and boot file name under the boot_params command to AG2330.Z

Warning: If you proceed, system reboots upon successful conversion

Continue with conversion ? (y/n) : **y**

Completed...

Conversion Completed...

system reboots in 5 seconds

Warning: If Boot failed, you need reprogram boot menu under boot process

<Mini-Twister Micro POST>
BTS: NORMAL
DDR2: READ MEM 1GB
I2C: PASS
<Mini-Twister Micro POST Completed>

<Mini-Twister Micro POST>
BTS: GOLDEN
DDR2: READ MEM 1GB
I2C: PASS
** Boot stage: Three
<Mini-Twister Micro POST Completed>

VxWorks System Boot

Copyright (c) 2010 Avaya

PROCESSOR : MPC8347 TBG
SYSTEM MEMORY : 1G
VxWorks : VxWorks5.5.1
BSP version : 1.1/0
Boot version : 0.0.0.42 (GOLDEN Boot)
Creation date : Jun 10 2011, 11:09:20
NORMAL Bt ver : 0.0.0.52
GOLDEN Bt ver : 0.0.0.52
Baseline ver : 0.0.0.52 (Internal version for checking)
System name : AG 2330

Press any key to stop auto-boot...
Compact Flash Device: CF0, Filename: /cf0/AG2330.Z
MODEL: AG -- allow AG image
MODEL: AG -- allow AG image
[SYSTEM] Runtime image loading done
[SYSTEM] Bootrom image loading done
[SYSTEM] Runtime image uncompressing
[SYSTEM] Preparing to transfer control (loader)...

Starting runtime image...

Chassis Model: AG2330
Chassis Operational Status: BOOT

Chassis Serial number: LBNNTMJX9600GP
Chassis Rev: 11

Slot/SubSlot	Card-Type	Status	Serial#
0	MPU_A	NORMAL	LBNNTMJX960080
INT	SCIM_A	NORMAL	LBNNTMJX97001H
INT	PVIM_A	NORMAL	LBNNTMJX98001P
0/7	SFP	Present	---
0/8	SFP	Present	---

Avaya, Inc. and its Licensors
Copyright 1998-2010 All rights reserved

AVAYA (Advanced Gateway AG2330)
Version: 10.3.1.0
Built: Jul 27 2011, 10:51:46 PST

login:
In system.cfg, Total commands executed: 44, Total errors: 0
admin
password:

admin logged in on Wed Jul 27 21:27:32 2011 from CONSOLE
host# **show system licenses**
Licensed for advance gateway
Licensed PVIM channels = 8
Licensed SSM user capacity = 25

host## **show version**
Runtime: 10.3.1.0
Created: Jul 27 2011, 10:51:46
Type : AG Image ← **current Active Product – Advanced Gateway**
Boot: 0.0.0.52 (NORMAL Boot)
NorBoot: 0.0.0.50
GolBoot: 0.0.0.52

Slot/SubSlot	Card-Type	Status	CPLD-Exp	CPLD-Main
0/-	MPU_A	NORMAL	---	0x16

host#

The conversion to Advanced Gateway is complete.

3. Version of Previous Release

Software Version 10.3

4. Compatibility

N/A

5. New Features in the 10.3.1 Release

5.1 Tunnel support using dynamically acquired IP Address

WARNING

This feature only works with tunnel protection and can support only one remote dynamic IP address peer per tunnel. Only one tunnel can be setup to accept an unknown IP Address as its destination IP Address.

This feature enables a tunnel between the branch router and head office where the branch office acquires its IP Address through the provider by DHCP. This tunnel can be setup as either an IPIP or GRE Tunnel with tunnel protection. The head office can have multiple VPN Site to Site and GRE/IPIP tunnels along with this new feature.

To show how to setup this feature on the Secure Router this section will give the procedure to update both the branch and head office as shown in Figure 1 to use a GRE tunnel with tunnel protection and OSPF to synchronize the routing between the head and branch office.

5.1.1 Configuring Tunnel for Branch Office using DHCP acquired IP Address

In this example the branch office is using SR 2330 with Ethernet 0/5 as its public DHCP acquired IP address and Ethernet 0/6 as its trusted side. The default route will be provided by DHCP and OSPF will be configured over the tunnel and redistributing static routes.

The tunnel source is set to the Ethernet name that is acquiring the DHCP address. The tunnel destination is set to the head office IP Address.

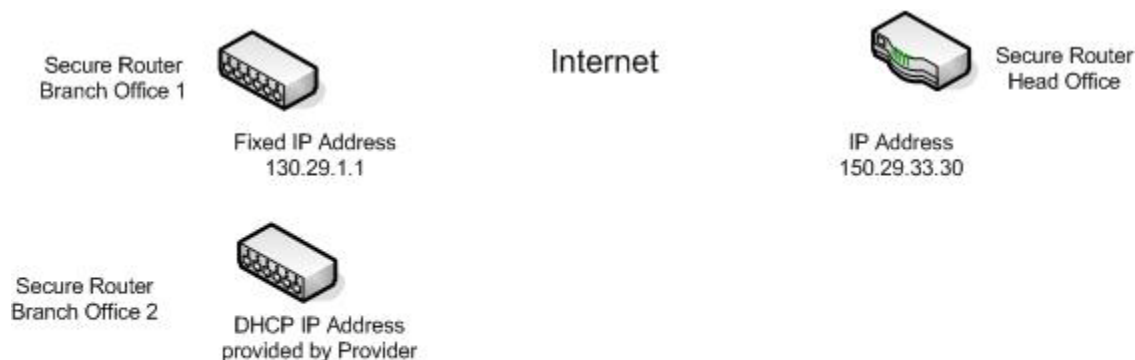


Figure 1 Network Topology with each Branch Office using a IPSec Protected Tunnel to the Head Office

Procedure Steps

Step	Action
1	To enter the configuration mode, enter: <code>conf i gure t er mi na l</code>
2	Configure the Ethernet for DHCP, enter: <code>i nterface e t her net 0/5</code>
3	Specify to request default route, enter: <code>dhc p-clie nt reque st-defaul t-rout er</code>
4	Specify to enable dhcp, enter: <code>dhc p-clie nt e nabl e</code>
5	To exit the Ethernet configuration, enter: <code>e xit</code>
6	Specify tunnel configuration, enter: <code>i nterface t unnel ma in</code>
7	Specify the tunnel IP Address , enter: <code>i p a ddr e ss 20.1.1.2 24</code>
8	Specify tunnel source address, enter: <code>t unnel s ourc e e t her net 0/5</code>
9	Specify tunnel destination address, enter: <code>t unnel d e st i nati on 150.29.30.30</code>
10	Specify tunnel type as GRE, enter: <code>t unnel m ode gre</code>
11	Specify tunnel protection, enter: <code>t unnel p rot ection ma in key123</code>
12	Specify tunnel as untrusted firewall interface, enter: <code>cr ypt o untrus t e d</code>
13	To exit the tunnel configuration, enter: <code>e xit</code>
14	Configure firewall internet zone, enter: <code>fi rewal l i nte rnet</code>
15	Specify Ethernet 0/ 5 on the untrusted side, enter: <code>i nterface e t her net 0/5</code>
16	Specify tunnel on the untrusted side, enter: <code>i nterface ma in</code>
17	Specify policy to allow icmp, enter: <code>p olic y 10 i n p ermit p rotocol i c mp s e lf</code>
18	To exit the policy, enter: <code>e xit</code>
19	Specify policy to allow ike, enter: <code>p olic y 11 i n p ermit s ervice i ke s e lf</code>
20	To exit the policy, enter: <code>e xit</code>
21	To exit the firewall internet, enter: <code>e xit</code>
22	Configure firewall corp zone, enter: <code>fi rewal l cor p</code>
23	Specify Ethernet 0/ 6 on the trusted side, enter: <code>i nterface e t her net 0/6</code>
24	To exit the firewall corp, enter: <code>e xit</code>
25	Specify router-id for ospf, enter: <code>rout er-i d 2.2.2.2</code>

- 26 Specify OSPF configuration, enter:
`router ospf 1`
- 27 Specify the tunnel network, enter:
`network 20.1.1.0 0.0.0.255 area 0`
- 28 Specify redistribute static, enter:
`redistribute static`
- 29 To exit the OSPF configuration, enter:
`exit`
- 30 To exit the configuration mode, enter:
`exit`

5.1.2 Configuring Tunnel for Head Office

In this example the head office is using SR 4134 with Ethernet 0/1 as its untrusted interface that the tunnel is configured on and Ethernet 0/2 is the interface that OSPF interfaces with the head office OSPF network. The default route is 150.29.30.1 which is over Ethernet 0/1.

The tunnel destination is set 0.0.0.0 (allow any to connect) and the tunnel source is set to the IP Address of Ethernet 0/1.

Procedure Steps

Step	Action
1	To enter the configuration mode, enter: <code>configure terminal</code>
2	Configure the untrusted Ethernet, enter: <code>interface ethernet 0/1</code>
3	Specify to request default route, enter: <code>ip address 150.29.30.30 29</code>
4	To exit the Ethernet configuration, enter: <code>exit</code>
5	Configure the trusted Ethernet, enter: <code>interface ethernet 0/2</code>
6	Specify to request default route, enter: <code>ip address 130.20.1.1 24</code>
7	To exit the Ethernet configuration, enter: <code>exit</code>
8	Specify the default static route, enter: <code>ip route 0.0.0.0/0 150.29.30.1</code>
9	Specify tunnel configuration, enter: <code>interface tunnel branch2</code>
10	Specify the tunnel IP Address , enter: <code>ip address 20.1.1.1 24</code>
11	Specify tunnel source address, enter: <code>tunnel source 150.29.30.31</code>
12	Specify tunnel destination address, enter: <code>tunnel destination 0.0.0.0</code>
13	Specify tunnel type as GRE, enter: <code>tunnel mode gre</code>
14	Specify tunnel protection, enter: <code>tunnel protection branch2 key123</code>
15	Specify tunnel as untrusted firewall interface, enter:

```

        crypto untrusted
16    To exit the tunnel configuration, enter:
        exit
17    Configure firewall internet zone, enter:
        firewall internet
18    Specify Ethernet 0/1 on the untrusted side, enter:
        interface ethernet0/1
19    Specify tunnel on the untrusted side, enter:
        interface branch2
20    Specify policy to allow icmp, enter:
        policy 10 in permit protocol icmp self
21    To exit the policy, enter:
        exit
22    Specify policy to allow ike, enter:
        policy 11 in permit service ike self
23    To exit the policy, enter:
        exit
24    To exit the firewall internet, enter:
        exit
25    Configure firewall internet zone, enter:
        firewall corp
26    Specify Ethernet 0/ 2 on the trusted side, enter:
        interface ethernet0/2
27    To exit the firewall corp, enter:
        exit
28    Specify router-id for ospf, enter:
        router-id 1.1.1.1
29    Specify OSPF configuration, enter:
        router ospf 1
30    Specify the tunnel network, enter:
        network 20.1.1.0 0.0.0.255 area 0
31    Specify the corp network, enter:
        network 130.20.1.0 0.0.0.255 area 0
32    To exit the OSPF configuration, enter:
        exit
33    To exit the configuration mode, enter:
        exit

```

5.2 OSPF Inbound Filtering using Route Maps with Distribution List

OSPF supports route maps to filter outgoing routes that are sent by the redistribute command under the ospf section in the prior releases. This release enables the administrator to filter incoming OSPF routes received and block them from being added into the routing table. The new command distribution-list under the ospf section accepts a route map to specify what routes to accept. Both commands accept route-map which consists of access list entries of routes to permit and deny.

In this example the head office is using SR 4134 with Ethernet 0/1 as its untrusted interface that has a number of site to site VPN tunnels are configured. Ethernet 0/2 is the interface that OSPF interfaces with the head office OSPF network. The remote networks on the VPN site to site tunnels need to be blocked so that the VPN site to site tunnels work.

Procedure Steps

Step	Action
1	To enter the configuration mode, enter: <code>conf i gur e t er mi na l</code>
2	Configure the untrusted Ethernet, enter: <code>i n t e r f a c e e t h e r n e t 0 / 1</code>
3	Specify to request default route, enter: <code>i p a d d r e s s 1 5 0 . 2 9 . 3 0 . 3 0 2 9</code>
4	To exit the Ethernet configuration, enter: <code>e x i t</code>
5	Configure the trusted Ethernet, enter: <code>i n t e r f a c e e t h e r n e t 0 / 2</code>
6	Specify to request default route, enter: <code>i p a d d r e s s 1 3 0 . 2 0 . 1 . 1 2 4</code>
7	To exit the Ethernet configuration, enter: <code>e x i t</code>
8	Specify the default static route, enter: <code>i p r o u t e 0 . 0 . 0 . 0 / 0 1 5 0 . 2 9 . 3 0 . 1</code>
9	Specify a network to block in the access list, enter: <code>a c c e s s - l i s t o s p f - l i s t - i n d e n y 1 3 3 . 2 2 . 1 . 0 / 2 4</code>
10	Specify a different network to block in the access list, enter: <code>a c c e s s - l i s t o s p f - l i s t - i n d e n y 1 3 3 . 2 3 . 1 . 0 / 2 4</code>
11	Specify a different network to block in the access list, enter: <code>a c c e s s - l i s t o s p f - l i s t - i n d e n y 1 3 3 . 2 4 . 1 . 0 / 2 4</code>
12	Specify allowing the rest through in the access list, enter: <code>a c c e s s - l i s t o s p f - l i s t - i n p e r m i t a n y</code>
13	Specify the route map, enter: <code>r o u t e - m a p o s p f - f i l t e r - i n p e r m i t 1</code>
14	Specify the access list to match against, enter: <code>m a t c h i p a d d r e s s o s p f - l i s t - i n</code>
15	To exit the route map configuration, enter: <code>e x i t</code>
16	Specify router-id for ospf, enter: <code>r o u t e r - i d 1 . 1 . 1 . 1</code>
17	Specify OSPF configuration, enter: <code>r o u t e r o s p f 1</code>
18	Specify the corp network, enter: <code>n e t w o r k 1 3 0 . 2 0 . 1 . 0 0 . 0 . 0 . 2 5 5 a r e a 0</code>
19	Specify the routes to block, enter: <code>d i s t r i b u t i o n - l i s t r o u t e - m a p o s p f - f i l t e r - i n i n</code>
20	To exit the OSPF configuration, enter: <code>e x i t</code>
21	To exit the configuration mode, enter: <code>e x i t</code>

5.3 Secure FTP client (SFTP)

A Secure FTP client is accessed under the new command sftp. There is support for only one SFTP client at a time and it does not support ipv6 addresses. The sftp command is at the root of the command tree. The syntax is as follows:

```
sftp hostname <cipher> <mac> <port>
```

Keyword Parameter	Value	Type	Default Value
hostname	IP Address or username@IP Address If only IP Address is specified assumes logged in username.	Required	none
cipher	none des blowfish blowfish-cbc 3des-cbc aes128-cbc aes192-cbc aes256-cbc	Optional	aes128-cbc
mac	hmac-sha1 hmac-sha1-96 hmac-md5 hmac-md5-96 hmac-ripemd160	Optional	hmac-sha1
port	1 - 65535	Optional	22

5.4 SNMP Version 3

The SNMP Version 3 has the following restrictions:

- To configure SNMP Server requires the administrator to be Level -1 User.
- SNMP sets are not supported
- ACLv6 views are not supported
- The maximum recommend number of SNMP communities, users, groups, target addresses, and views are:
 1. Community 16
 2. Users 16
 3. Groups 32
 4. Target Addresses 10
 5. Views 512

Under SNMP version 3 the SNMP user accounts can be setup with different security and authentication methods. The SNMP user information is not part of the CLI stored configuration but

is stored in a separate SNMP user database. If the same stored configuration is installed on another router then the administrator needs to configure the SNMP users on that router. The following type of users can be setup:

- User with noAuth
- User with sha1authNoPriv
- User with md5authNoPriv
- User with sha1authdesPriv
- User with md5authdesPriv
- User with sha1auth3desPriv
- User with md5auth3desPriv
- User with sha1authaes128Priv
- User with md5authaes128Priv

Below show sample configuration for a SNMP user setup for each of these modes:

User with noAuth:

```
-----
user user1
group guser1 user1 v3
access-group guser1 v3 noAuth read two write-view two notify-view two
target-params user1params user1 v3 noAuth
target-address user1addr 47.152.227.120 user1params user1tag timeout 1500 retry-count 3
notify user1tag user1tag traps
notify-profile user1params user1profile
notify-filter user1profile 1.3.6.1 included
view two 1.3 in
enable traps enable-all
```

User with sha1authNoPriv:

```
-----
user usersha1 auth-type sha1 auth-password shapassword
group gusersha1 usersha1 v3
access-group gusersha1 v3 authNoPriv read two write-view two notify-view two
target-params usersha1params usersha1 v3 authNoPriv
target-address usersha1addr 47.152.227.120 usersha1params usersha1tag timeout 1500 retry-count 3
notify usersha1tag usersha1tag traps
notify-profile usersha1params usersha1profile
notify-filter usersha1profile 1.3.6.1 included
enable traps enable-all
```

User with md5authNoPriv:

```
-----
user usermd5 auth-type md5 auth-password md5password
group gusermd5 usermd5 v3
access-group gusermd5 v3 authNoPriv read two write-view two notify-view two
target-params usermd5params usermd5 v3 authNoPriv
target-address usermd5addr 47.152.227.120 usermd5params usermd5tag timeout 1500 retry-count 3
notify usermd5tag usermd5tag traps
notify-profile usermd5params usermd5profile
notify-filter usermd5profile 1.3.6.1 included
enable traps enable-all
```

User with sha1authdesPriv:

```
-----
user usersha1des auth-type sha1 auth-password shapassword encrypt-type des encrypt-password despassword
group gusersha1des usersha1des v3
access-group gusersha1des v3 authPriv read two write-view two notify-view two
target-params usersha1desparams usersha1des v3 authPriv
target-address usersha1desaddr 47.152.227.120 usersha1desparams usersha1destag timeout 1500 retry-count 3
notify usersha1destag usersha1destag traps
notify-profile usersha1desparams usersha1desprofile
```

```
notify-filter usersha1desprofile 1.3.6.1 included
enable traps enable-all
```

User with md5authdesPriv:

```
-----
user usermd5des auth-type md5 auth-password md5password encrypt-type des encrypt-password despassword
group gusermd5des usermd5des v3
access-group gusermd5des v3 authPriv read two write-view two notify-view two
target-params usermd5desparams usermd5des v3 authPriv
target-address usermd5desaddr 47.152.227.120 usermd5desparams usermd5destag timeout 1500 retry-count 3
notify usermd5destag usermd5destag traps
notify-profile usermd5desparams usermd5desprofile
notify-filter usermd5desprofile 1.3.6.1 included
enable traps enable-all
```

User with shalauth3desPriv:

```
-----
user usersha13des auth-type sha1 auth-password shapassword encrypt-type 3des encrypt-password 3despassword
group gusersha13des usersha13des v3
access-group gusersha13des v3 authPriv read two write-view two notify-view two
target-params usersha13desparams usersha13des v3 authPriv
target-address usersha13desaddr 47.152.227.120 usersha13desparams usersha13destag timeout 1500 retry-count 3
notify usersha13destag usersha13destag traps
notify-profile usersha13desparams usersha13desprofile
notify-filter usersha13desprofile 1.3.6.1 included
enable traps enable-all
```

User with md5auth3desPriv:

```
-----
user usermd53des auth-type md5 auth-password md5password encrypt-type 3des encrypt-password 3despassword
group gusermd53des usermd53des v3
access-group gusermd53des v3 authPriv read two write-view two notify-view two
target-params usermd53desparams usermd53des v3 authPriv
target-address usermd53desaddr 47.152.227.120 usermd53desparams usermd53destag timeout 1500 retry-count 3
notify usermd53destag usermd53destag traps
notify-profile usermd53desparams usermd53desprofile
notify-filter usermd53desprofile 1.3.6.1 included
enable traps enable-all
```

User with shalauthaes128Priv:

```
-----
user usersha1aes128 auth-type sha1 auth-password shapassword encrypt-type aes128 encrypt-password aes128password
group gusersha1aes128 usersha1aes128 v3
access-group gusersha1aes128 v3 authPriv read two write-view two notify-view two
target-params usersha1aes128params usersha1aes128 v3 authPriv
target-address usersha1aes128addr 47.152.227.120 usersha1aes128params usersha1aes128tag timeout 1500 retry-count 3
notify usersha1aes128tag usersha1aes128tag traps
notify-profile usersha1aes128params usersha1aes128profile
notify-filter usersha1aes128profile 1.3.6.1 included
enable traps enable-all
```

User with md5authaes128Priv:

```
-----
user usermd5aes128 auth-type md5 auth-password md5password encrypt-type aes128 encrypt-password aes128password
group gusermd5aes128 usermd5aes128 v3
access-group gusermd5aes128 v3 authPriv read two write-view two notify-view two
target-params usermd5aes128params usermd5aes128 v3 authPriv
target-address usermd5aes128addr 47.152.227.120 usermd5aes128params usermd5aes128tag timeout 1500 retry-count 3
notify usermd5aes128tag usermd5aes128tag traps
notify-profile usermd5aes128params usermd5aes128profile
notify-filter usermd5aes128profile 1.3.6.1 included
enable traps enable-all
```

5.4.1 New CLI SNMP Configuration Commands

5.4.1.1 community

This command configures a v1/v2 community string and aligns it to a security name

Syntax

[no] community [community-name] [security- name]

Keyword Parameter	Value	Type	Default Value
community-name	String max 32 characters	Required	none
security-name	String max 32 characters	Required	none

Example:

host/configure/snmp-server#community public publicsec-name

5.4.1.2 engine-id

This command configures a local or a remote engine id

Syntax

[no] engine-id [local [id]] | [remote [id] [remote host ipAddr]]

Keyword Parameter	Value	Type	Default Value
Type	Local remote	Required	none
id	String min 5 octets max 32 octets	Required	none
Ip Addresss	Ip address in dot format (a.b.c.d)	Required for remote type	none
remote-port	min 1024 max 65535	Optional for remote type	162

Example:

host/configure/snmp-server#engine-id local 000c0a0a0ac8

host/configure/snmp-server#engine-id remote 000c0a0a0a2f 10.4.4.3

5.4.1.3 user

Add a v3 user

Syntax:

[no] user [user name] <auth-type {md5 | sha1} [auth-pass] [password] < encrypt-type {aes128 | des | 3des} [encrypt-pass] [password]> <engineid [remote id]>

Keyword Parameter	Value	Type	Default Value
username	String max 32 characters	Required	none
auth-type	md5 sha1	Optional	none
auth-password	String max 32 characters	Optional	none Requires auth-type to be specified if used
encrypt-type	des 3des aes128	Optional	none
encrypt-password	String max 32 characters	Optional	none Requires encrypt-type to be specified if used
engineid	String max 32 octets	Optional	none

Example:

```
host/configure/snmp-server#user bill
host/configure/snmp-server#user nancy auth-type md5 auth-pass 456pass1
host/configure/snmp-server#user tasman engineid 000c0a0a0a98
```

5.4.1.4 group

Assign a v1/v2 security name or a v3 user to a group

Syntax:

[no] group [group name] [security name | user name] [version]

Keyword Parameter	Value	Type	Default Value
groupname	String max 32 characters	Required	none
username	String Max 32 characters	Required	none
snmp version	v1 v2c v3	Required	none

Example:

```
host/configure/snmp-server#group v1group publicsec-name v1
host/configure/snmp-server#group v3group v3
```

5.4.1.5 access-group

Define access level to a group

Syntax:

```
[no] access-group [group name] [version] [security-level] <read-view [viewname] > <write-view [viewname]> <notify-view [viewname]> <acl-view [IP rule set name]>
```

Keyword Parameter	Value	Type	Default Value
groupname	String max 32 characters	Required	none
snmp version	v1 v2c v3	Required	none
security level	noAuth authNoPriv authPriv	Required	none
read-view	String max 32 characters	Optional	none
write-view	String max 32 characters	Optional	none
notify-view	String max 32 characters	Optional	none
acl-view	String max 20 characters	Optional	none

Example:

```
host/configure/snmp-server#access-group v1group v1 noAuth read-view test notify-view testnotify
host/configure/snmp-server#access-group v3group v3 authNoPriv read-view v3view notify-view
v3view acl-view ipv4acl
```

5.4.1.6 view

Configure a view subtree

Syntax:

```
[no] view [view-name] [OID or the sub-tree] [option]
```

Keyword Parameter	Value	Type	Default Value
viewname	String max 32 characters	Required	none
sub-tree	OID or SNMP sub-tree	Required	none
action	excluded included	Required	none

Example:

```
SR/configure/snmp-server#view test iso included
SR/configure/snmp-server#view test ipAddrTable excluded
SR/configure/snmp-server#view test system excluded
SR/configure/snmp-server#view test 1.3.6.1.2.1.1.0 included
```

5.4.1.7 target-address

Configure target address attributes for traps/notifications and informs

Syntax:

```
[no] target-address [target addr name] [NMS ip] [target params name] [target tag name] <retry-count>
<timeout> <NMS port>
```

Keyword Parameter	Value	Type	Default Value
groupname	String max 32 characters	Required	none
Address-name	String Max 32 characters	Required	none
IP Addresss	IP address in dot format (a.b.c.d)	Required	none
param-name	String max 32 characters	Required	none
tag-list	String max 32 characters	Required	none
timeout	Integer	Optional	1500
retry-count	Integer	Optional	3
remote-port	min 1024 max 65535	Optional	162

Example:

```
host/configure/snmp-server#target-address Addr1 10.1.1.1 Param1 BranchDevice
```

5.4.1.8 target-params

Configure target parameters

Syntax:

[no] target-params [target params name] [v1/v2 security name / v3 username] [version] [security-level]

Keyword Parameter	Value	Type	Default Value
param-name	String max 32 characters	Required	none
security-name	String max 32 characters	Required	none
snmp version	v1 v2c v3	Required	none
security-level	noAuth authNoPriv authPriv	Required	none

Example:

host/configure/snmp-server#target-params Param1 nortel v3 authNoPriv

5.4.1.9 notify

Define notify parameters

Syntax:

[no] notify [notify name] [target tag] [traps | informs]

Keyword Parameter	Value	Type	Default Value
notify-name	String max 32 characters	Required	none
notify-tag	String max 32 characters	Required	none
type-value	traps inform	Required	none

Example:

host/configure/snmp-server#notify Notification BranchDevice traps

5.4.1.10 notify-profile

Define profiles for a notify

Syntax:

[no] notify-profile [target params name] [profile name]

Keyword Parameter	Value	Type	Default Value
params-name	String max 32 characters	Required	none
profile-name	String max 32 characters	Required	none

Example:

```
host/configure/snmp-server#notify-profile Param1 Profile1
```

5.4.1.11 notify-filter

Filter rules for notify

Syntax:

```
[no] notify-filter [profile name] [OID / subtree] [option]
```

Keyword Parameter	Value	Type	Default Value
Profile-name	String max 32 characters	Required	none
sub-tree	OID or SNMP sub-tree	Required	none
action	excluded included	Required	none

Example:

```
host/configure/snmp-server#notify-filter Profile1 1.3.6.1 included
```

5.4.2 CLI Display Commands

show snmp communities	Displays the communities and associated security name
show snmp target-address	Displays the Target address attributes
show snmp views	Displays all the views configured
show snmp view [view name]	Displays the specified view configured
show snmp target-params	Displays info about the target parameters
show snmp users	Displays the information of all users configured with type of authentication / encryption if any.
show snmp access-group	Displays access-privilege of groups configured
show snmp user-groups	Display the association between groups and v1/v2 communities or v3 usernames.

show snmp engine-id	Display the identification of the local SNMP engine and all remote engines that have been configured on the router.
show snmp notify	List of notify tables
show snmp notify-filter	Notify table filters configured
show snmp notify-profile	Profiles of notify table

6. Problems Resolved in the 10.3.1 Release

Bug Reference	Subsystem	Description
wi00837799	Firewall	NAT Addresses not working if not within directly attached subnets
wi00843434	VPN	Unable to add more than 8 remote VPN users
wi00843438	VPN	Nortel VPN Client (Contivity) not working after upgrade to 10.3 code
wi00846081	VPN	2 Nortel VPN clients connect to Secure Router at the same time causes the first client to be disconnected
wi00846610	NAT	NAT misdetection occurs when contivity client connects to Secure Router
wi00846620	VPN	VPN Client that is remotely doing NAT fails when it initiates in Phase 1 but is the responder in Phase 2. Secure Router sends to the wrong port in Phase 2.
wi00851785	VPN	Dynmanic IPSEC SAs with data not coming up for when one side of IPsec Tunnel is rebooted
wi00852027	Routing	Routes lost when the Ethernet interface bounced
wi00853732	VPN	Dynamic IPSEC SAs are rekeyed too early
wi00858819	VPN	Unable to establish VPN Tunnel when secure router acts as an Initiator with NVR behind NAT
wi00863593	GRE	GRE Tunnel Keepalives are counted twice on the receive side of the GRE tunnel
wi00866871	GRE	Encrypted GRE Tunnels Keepalive packets not marked high priority causing tunnels to flap
wi00869019	VPN	IP Phones drop during IPSEC rekey
wi00872642	PPPOE	The PPPoE client's virtual access interface does not come up after a reboot
wi00873426	OSPF	Tunnel flaps when tunnel destination learned through OSPF
wi00874433	VPN	Phase-2(Quick Mode) fails when initiated by SR to VPN Router in IPIP tunnel with protection
wi00877716	OSPF	OSPF improperly removed routes
wi00883876	OSPF	OSPF control packets that are unicast are not being sent over the tunnel interface
wi00885428	VPN	Remote access in CA authentication mode doesn't work with more than one remote-id
wi00889228	Firewall	BGP-MD5 fails when using tcp-seq-number-predict and tcp-seq-number-range under dos protect in the firewall
wi00892075	SIP	Blind & Attendant transfer from Avaya-12xx phones failed
wi00894755	SIP	Secure Router Gateway to Avaya Aura calls failing due to session timeout values

7. Outstanding Issues

7.1 NAT address that is not an interface address requires a published ARP entry

The following example shows how to setup NAT where Ethernet 0/2 is the untrusted interface (64.129.11.38) that is using a NAT address 64.129.11.39 that is in the same network for doing reverse NAT to DMZ address of 192.168.110.2. Below is sample of what the configuration file would look like:

```
interface ethernet 0/2
 ip address 64.129.11.38 255.255.255.0
 crypto untrusted
 exit ethernet
interface ethernet 0/3
 ip address 192.168.111.1 255.255.255.0
 crypto trusted
 exit ethernet
interface ethernet 0/4
 ip address 192.168.110.1 255.255.255.0
 crypto trusted
 exit ethernet
arp 64.129.11.39 80:17:7d:ef:fe:02 published
ip route 0.0.0.0/0 64.129.11.1
firewall global
 exit firewall
firewall internet
 interface ethernet0/2
  policy 1000 in permit service ike self
  exit policy
 exit firewall
firewall corp
 interface ethernet0/3
  policy 1000 in deny address 192.168.110.0 24 192.168.111.0 24
  exit policy
  policy 1001 out deny address 192.168.111.0 24 192.168.110.0 24
  exit policy
  policy 1024 out permit address 192.168.110.0 24 any any nat-ip 64.129.11.38
  exit policy
 exit firewall
firewall dmz
 interface ethernet0/4
  policy 1000 in deny address 192.168.111.0 24 192.168.110.0 24
  exit policy
  policy 1001 out deny address 192.168.110.0 24 192.168.111.0 24
  exit policy
  policy 1003 in permit address any any 64.129.11.39 32 nat-ip 192.168.110.2
  exit policy
  policy 1024 out permit address 192.168.110.0 24 any any nat-ip 64.129.11.39
  exit policy
 exit firewall
crypto
 exit crypto
```

The first step is to show the Ethernet interface 0/2 where the NAT Address belongs to find what the Mac address needed for the static arp entry.

```

show int Ethernet 0/2
interface ethernet0/2
ipaddr 64.129.11.38
netmask 255.255.255.0
description none
status up
configured auto
  speed 100
  mode full_duplex
  mtu 1500
TCP MSS disabled

ethernet0/2
Interface Index : 3
Type : ETHERNET (802.3)
Flags : 0x2878243 UP, RUNNING, ATTACHED, BROADCAST, MULTICAST-ROUTE
Internet Address : 10.22.42.1
Internet Netmask : 255.255.255.0
Internet Broadcast : 10.22.42.255
ICMP redirects will be sent
ICMP unreachable will be sent
Directed broadcasts will be forwarded
Interface RED is disabled
Maximum Transfer Unit : 1500 bytes
Mac Address: 80:17:7d:ef:fe:02← MAC Address needed for static arp

```

NOTE: If the NAT address belongs to a VLAN then use the CLI command “show ip interfaces” and note the MAC Address under VLAN interface.

Procedure Steps

Step	Action
------	--------

- | | |
|---|---|
| 1 | Show the Ethernet interface, enter:
show int Ethernet 0/2 |
| 2 | To enter the configuration mode, enter:
configure terminal |
| 3 | Add the static arp entry specifying both the IP and MAC address, enter:
arp 64.129.11.38 80:17:7d:ef:fe:02 published |

8. Known Limitations

- Refer to the previous Release Notes

9. Documentation Corrections

- Document Name: Troubleshooting Avaya Secure Router 2330/4134 10.3
Document Number: NN47263-700_04_01
Document Release: 10.3

On page 88 it states "Link Aggregation is supported on the non-CPU Ethernet ports only." However, LACP is supported on all Ethernet ports.

- Document Name: Nortel Secure Router 4134 Configuration—Layer 2 Ethernet
Document Number: NN47263-501 01.01 Standard
Page 118

Missing Information

Caution:

Entering the “spanning-tree” command under an interface, will remove all IP information from the interface including its bound IP address.

10. Notes

- A new cli command “tcp-seq-except-bgp-self-port” under the dos-protect section of the firewall global settings allows BPG to use MD5 signatures through when tcp-seq-number-predict and tcp-seq-number-range command are set under the dos protect section. It allows for any TCP connection with the BGP destination port of 179 not to have the tcp connection resequenced which causes the MD5 digest to fail.
- ISDN BRI voice bundle with default TE1 mode value of Point to Multipoint will not come up until the bundle is manually changed to point-to point.
- DSA key sizes 2048, 3072 and 4096 not supported but CLI shows an option to configure.

```
host/configure/crypto/ca/trustpoint ca1# keypair key1 dsa ?
```

512	size of the key modulus is 512
1024	size of the key modulus is 1024
2048	size of the key modulus is 2048
3072	size of the key modulus is 3072
4096	size of the key modulus is 4096

- PFS group group16 is not supported but CLI shows an option to configure.

```
host/configure/crypto/ipsec/policy test 20.20.20.20# pfs-group ?
```

group1	768-bit. RFC 2409
group2	1024-bit. RFC 2409
group5	1536-bit. RFC 2409
group14	2048-bit. RFC 2409
group15	3072-bit. RFC 2409
group16	4096-bit. RFC 2409

- Syntax of rule under “voice translation-rule” was allowing “\+”. The backslash (\) was used as an escape character to support “+”. Since “+” can be used without the support of “\”, use of backslash in the translation rules is redundant and no longer required. Hence backslash (\) is removed from the syntax of rule.

© 2010 Avaya Inc.
All Rights Reserved.

Notice

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

Documentation disclaimer

Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of this documentation unless such modifications, additions, or deletions were performed by Avaya. End User agree to indemnify and hold harmless Avaya, Avaya’s agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

Link disclaimer

Avaya is not responsible for the contents or reliability of any linked Web sites referenced within this site or documentation(s) provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warranty

Avaya provides a limited warranty on this product. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this product, while under warranty, is available to Avaya customers and other parties through the Avaya Support Web site: <http://www.avaya.com/support>

Please note that if you acquired the product from an authorized reseller, the warranty is provided to you by said reseller and not by Avaya.

Licenses

THE SOFTWARE LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE, <HTTP://SUPPORT.AVAYA.COM/LICENSEINFO/> ARE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS AVAYA SOFTWARE, PURCHASED FROM AVAYA INC., ANY AVAYA AFFILIATE, OR AN AUTHORIZED AVAYA RESELLER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH AVAYA OR AN AUTHORIZED AVAYA RESELLER. UNLESS OTHERWISE AGREED TO BY AVAYA IN WRITING, AVAYA DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN AVAYA, AN AVAYA AFFILIATE OR AN AVAYA AUTHORIZED RESELLER, AND AVAYA RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND AVAYA INC. OR THE APPLICABLE AVAYA AFFILIATE ("AVAYA").

Copyright

Except where expressly stated otherwise, no use should be made of the Documentation(s) and Product(s) provided by Avaya. All content in this documentation(s) and the product(s) provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Avaya can be a criminal, as well as a civil offense under the applicable law.

Third Party Components

Certain software programs or portions thereof included in the Product may contain software distributed under third party agreements ("Third Party Components"), which may contain terms that expand or limit rights to use certain portions of the Product ("Third Party Terms"). Information regarding distributed Linux OS source code (for those Products that have distributed the Linux OS source code), and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply to them is available on the Avaya Support Web site: <http://support.avaya.com/Copyright>