



Extreme<sup>®</sup>  
networks

# Extreme 9920 Software Command Reference, 21.1.0.0

Supporting Extreme 9920

9037099-00 Rev AA  
June 2021



Copyright © 2021 Extreme Networks, Inc. All rights reserved.

### **Legal Notice**

Extreme Networks, Inc. reserves the right to make changes in specifications and other information contained in this document and its website without prior notice. The reader should in all cases consult representatives of Extreme Networks to determine whether any such changes have been made.

The hardware, firmware, software or any specifications described or referred to in this document are subject to change without notice.

### **Trademarks**

Extreme Networks and the Extreme Networks logo are trademarks or registered trademarks of Extreme Networks, Inc. in the United States and/or other countries.

All other names (including any product names) mentioned in this document are the property of their respective owners and may be trademarks or registered trademarks of their respective companies/owners.

For additional information on Extreme Networks trademarks, see: [www.extremenetworks.com/company/legal/trademarks](https://www.extremenetworks.com/company/legal/trademarks)

### **Open Source Declarations**

Some software files have been licensed under certain open source or third-party licenses. End-user license agreements and open source declarations can be found at: <https://www.extremenetworks.com/support/policies/open-source-declaration/>



# Table of Contents


---

<b>Preface.....</b>	<b>7</b>
Text Conventions.....	7
Documentation and Training.....	8
Getting Help.....	9
Subscribe to Product Announcements.....	9
Providing Feedback.....	9
<b>What's New in this Document.....</b>	<b>11</b>
<b>Using the NPB Application CLI.....</b>	<b>12</b>
User Accounts.....	12
Default Account Credentials.....	12
Predefined Accounts and Roles.....	13
Accessing the CLI.....	13
Command Modes.....	14
Exec Mode.....	14
Config Mode.....	14
do Command.....	14
CLI Commands and Command Syntax.....	14
Completing CLI commands.....	15
CLI keyboard shortcuts.....	16
CLI Command Output Modifiers.....	16
Unsupported Input Characters.....	17
Debug and System Diagnostic Commands.....	17
<b>NPB Application Commands.....</b>	<b>18</b>
aaa accounting.....	22
aaa authentication.....	24
breakout.....	25
capture.....	27
channel-group.....	29
clear counters access-list all.....	31
clear counters egress.....	32
clear counters egress-group.....	33
clear counters encaps.....	34
clear counters ingress-group.....	36
clear counters interface.....	37
clock set.....	39
clock timezone.....	40
connector.....	41
copy.....	42
crypto import.....	45
crypto import-pkcs.....	47

decap.....	49
delete.....	51
deny ipv4-dest.....	53
description.....	55
destination-ipv4-addr.....	57
destination-mac-addr.....	59
dir.....	61
egress.....	63
egress-group.....	65
encap.....	67
encap-type.....	69
fec.....	70
forward-action.....	72
hardware.....	73
ingress-group.....	74
interface ethernet.....	76
interface port-channel.....	77
ip access-list.....	78
ip address.....	80
ip dns.....	82
ip gateway.....	84
ipv6 access-list.....	85
ipv6 address.....	87
ipv6 gateway.....	89
link-fault-signaling.....	90
listener-policy.....	91
load-balance.....	93
mac access-list.....	94
match ip access-list.....	96
match ipv6 access-list.....	97
match mac access-list.....	98
mtu.....	99
new-scope.....	101
ntp.....	102
ping.....	104
precedence.....	106
route-map.....	107
seq (ip access-list rules).....	109
seq (ipv6 access-list rules).....	113
seq (mac access-list rules).....	117
set egress.....	120
set egress-group.....	122
set encaps.....	124
set ingress-group.....	125
set listener-policy.....	127
set route-map.....	129
show capture packet config.....	131
show capture packet interface.....	132
show capture packet pcapfile-info.....	134

show inventory.....	135
show chassis .....	137
show clock.....	138
show counters egress .....	139
show counters egress-group.....	140
show counters encaps.....	141
show counters ingress-group.....	142
show counters interface ethernet.....	143
show counters interface management.....	145
show counters transport-tunnel.....	146
show crypto ca certificates.....	147
show egress.....	148
show egress-group.....	149
show encaps.....	150
show firmware.....	151
show firmware history.....	152
show grpc-server gnmi capabilities.....	153
show grpc-server gnmi statistics.....	155
show ingress-group.....	156
show interface brief.....	157
show interface ethernet.....	158
show interface management.....	160
show interface port-channel.....	161
show inventory.....	163
show ip access-list.....	165
show ip dns.....	167
show ipv6 access-list.....	168
show link-fault-signaling.....	170
show listener-policy.....	171
show logging.....	172
show mac access-list.....	174
show media.....	176
show ntp association.....	178
show ntp status.....	179
show role.....	180
show route-map.....	181
show running-config.....	182
show running-config aaa accounting.....	184
show running-config access-list.....	185
show running-config egress.....	186
show running-config egress-group.....	187
show running-config ingress.....	188
show running-config ip dns.....	189
show running-config listener-policy.....	190
show running-config route-map.....	191
show running-config snmp-server.....	192
show running-config system logging host.....	193
show running-config system logging service.....	194
show running-config tacacs-server.....	195

show running-config username.....	196
show snmp server.....	197
show sysinfo all.....	198
show sysinfo fan.....	201
show sysinfo led.....	202
show sysinfo power-supply.....	203
show sysinfo sensor.....	204
show sysinfo slots.....	208
show system logging host.....	209
show system internal.....	210
show system logging service.....	212
show system service.....	213
show transport-tunnel.....	214
show version.....	215
shutdown.....	216
snmp-server community.....	217
snmp-server host.....	218
source-ipv4-addr.....	219
source-mac-addr.....	220
speed (ethernet interfaces).....	222
speed (management interfaces).....	224
strip.....	225
system firmware commit.....	227
system firmware rollback.....	228
system firmware update.....	229
system logging host.....	232
system logging service severity.....	234
system service rollback.....	235
system service update.....	237
tacacs-server.....	239
traceroute.....	241
traffic-type.....	243
transport-tunnel.....	245
truncate.....	247
tunnel-type.....	248
username.....	250
vlan.....	252
vlan-id.....	254
vlan-pcp.....	255

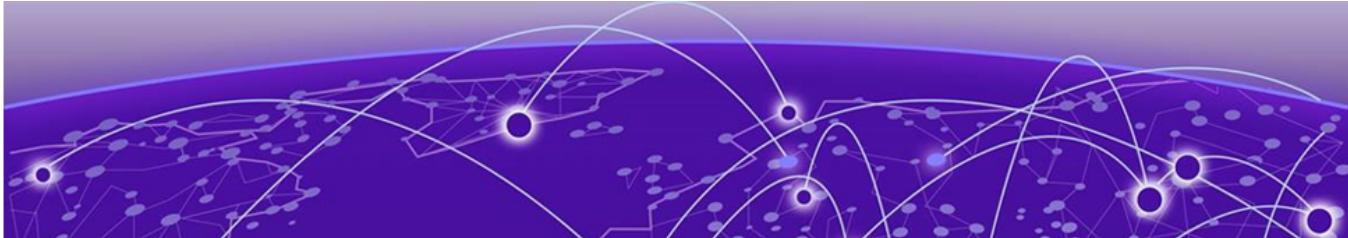

# Preface

Read the following topics to learn about:

- The meanings of text formats used in this document.
- Where you can find additional information and help.
- How to reach us with questions and comments.

## Text Conventions

Unless otherwise noted, information in this document applies to all supported environments for the products in question. Exceptions, like command keywords associated with a specific software version, are identified in the text.

When a feature, function, or operation pertains to a specific hardware product, the product name is used. When features, functions, and operations are the same across an entire product family, such as ExtremeSwitching switches or SLX routers, the product is referred to as *the switch* or *the router*.

**Table 1: Notes and warnings**

Icon	Notice type	Alerts you to...
	Tip	Helpful tips and notices for using the product
	Note	Useful information or instructions
	Important	Important features or instructions
	Caution	Risk of personal injury, system damage, or loss of data
	Warning	Risk of severe personal injury

**Table 2: Text**

Convention	Description
screen displays	This typeface indicates command syntax, or represents information as it is displayed on the screen.
The words <i>enter</i> and <i>type</i>	When you see the word <i>enter</i> in this guide, you must type something, and then press the Return or Enter key. Do not press the Return or Enter key when an instruction simply says <i>type</i> .
<b>Key</b> names	Key names are written in boldface, for example <b>Ctrl</b> or <b>Esc</b> . If you must press two or more keys simultaneously, the key names are linked with a plus sign (+). Example: Press <b>Ctrl+Alt+Del</b>
<i>Words in italicized type</i>	Italics emphasize a point or denote new terms at the place where they are defined in the text. Italics are also used when referring to publication titles.
<b>NEW!</b>	New information. In a PDF, this is searchable text.

**Table 3: Command syntax**

Convention	Description
<b>bold</b> text	Bold text indicates command names, keywords, and command options.
<i>italic</i> text	Italic text indicates variable content.
[ ]	Syntax components displayed within square brackets are optional. Default responses to system prompts are enclosed in square brackets.
{ <b>x</b>   <b>y</b>   <b>z</b> }	A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options.
<b>x</b>   <b>y</b>	A vertical bar separates mutually exclusive elements.
< >	Nonprinting characters, such as passwords, are enclosed in angle brackets.
...	Repeat the previous element, for example, <i>member</i> [ <i>member</i> ...].
\	In command examples, the backslash indicates a “soft” line break. When a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash.

## Documentation and Training

Find Extreme Networks product information at the following locations:

[Current Product Documentation](#)

[Release Notes](#)

[Hardware and software compatibility](#) for Extreme Networks products

[Extreme Optics Compatibility](#)

[Other resources](#) such as white papers, data sheets, and case studies

Extreme Networks offers product training courses, both online and in person, as well as specialized certifications. For details, visit [www.extremenetworks.com/education/](http://www.extremenetworks.com/education/).

## Getting Help

---

If you require assistance, contact Extreme Networks using one of the following methods:

### [Extreme Portal](#)

Search the GTAC (Global Technical Assistance Center) knowledge base; manage support cases and service contracts; download software; and obtain product licensing, training, and certifications.

### [The Hub](#)

A forum for Extreme Networks customers to connect with one another, answer questions, and share ideas and feedback. This community is monitored by Extreme Networks employees, but is not intended to replace specific guidance from GTAC.

### [Call GTAC](#)

For immediate support: (800) 998 2408 (toll-free in U.S. and Canada) or 1(408) 579 2826. For the support phone number in your country, visit: [www.extremenetworks.com/support/contact](http://www.extremenetworks.com/support/contact)

Before contacting Extreme Networks for technical support, have the following information ready:

- Your Extreme Networks service contract number, or serial numbers for all involved Extreme Networks products
- A description of the failure
- A description of any actions already taken to resolve the problem
- A description of your network environment (such as layout, cable type, other relevant environmental information)
- Network load at the time of trouble (if known)
- The device history (for example, if you have returned the device before, or if this is a recurring problem)
- Any related RMA (Return Material Authorization) numbers

## Subscribe to Product Announcements

You can subscribe to email notifications for product and software release announcements, Field Notices, and Vulnerability Notices.

1. Go to [The Hub](#).
2. In the list of categories, expand the **Product Announcements** list.
3. Select a product for which you would like to receive notifications.
4. Select **Subscribe**.
5. To select additional products, return to the **Product Announcements** list and repeat steps 3 and 4.

You can modify your product selections or unsubscribe at any time.

## Providing Feedback

---

The Information Development team at Extreme Networks has made every effort to ensure the accuracy and completeness of this document. We are always striving to improve our documentation and help you work better, so we want to hear from you. We welcome all feedback, but we especially want to know about:


- Content errors, or confusing or conflicting information.

- Improvements that would help you find relevant information in the document.
- Broken links or usability issues.

If you would like to provide feedback, you can do so in three ways:

- In a web browser, select the feedback icon and complete the online feedback form.
- Access the feedback form at <https://www.extremenetworks.com/documentation-feedback/>.
- Email us at [documentation@extremenetworks.com](mailto:documentation@extremenetworks.com).

Provide the publication title, part number, and as much detail as possible, including the topic heading and page number if applicable, as well as your suggestions for improvement.

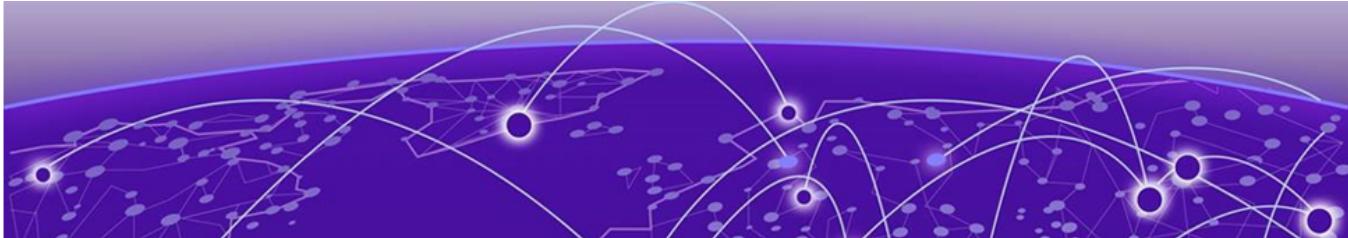


## What's New in this Document

---

This document is new for the release of the Extreme 9920 software with the NPB application.

For more information about this release, see the [\*Extreme 9920 Software Release Notes, 21.1.0.0\*](#).

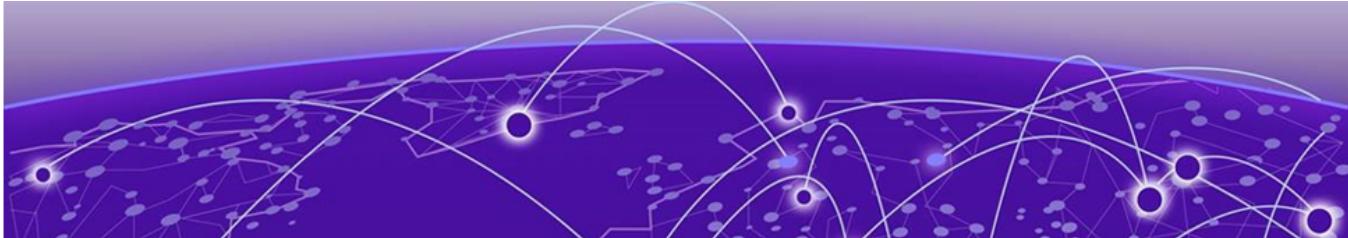

# Using the NPB Application CLI

---

- [User Accounts on page 12](#)
- [Default Account Credentials on page 12](#)
- [Predefined Accounts and Roles on page 13](#)
- [Accessing the CLI on page 13](#)
- [Command Modes on page 14](#)
- [CLI Commands and Command Syntax on page 14](#)
- [Completing CLI commands on page 15](#)
- [CLI keyboard shortcuts on page 16](#)
- [CLI Command Output Modifiers on page 16](#)
- [Unsupported Input Characters on page 17](#)
- [Debug and System Diagnostic Commands on page 17](#)

The command line provides a powerful means for configuring, managing, and monitoring packet traffic through the Extreme 9920 device.

The following topics describe accessing and using the NPB application command-line interface (CLI), including syntax, command completion, shortcuts, and other helpful subjects.

## User Accounts

---

A user account specifies that user's level of access to the device CLI.

The NPB application uses role-based access control (RBAC) as the authorization mechanism. A *role* is a container for rules, which specify which commands can be executed and with which permissions. When you create a user account you need to specify a role for that account. In general, *user* (as opposed to *user-level*) refers to any account to which an admin or user role can be assigned.

For more information about user accounts and roles, see [Extreme 9920 Software Security Configuration Guide, 21.1.0.0](#).

## Default Account Credentials

---

The NPB application ships with two default user accounts.

When you install the NPB application on Extreme 9920, two default user accounts are provided—**admin** and **user**—with the following case-sensitive default passwords:

- admin account password: **rocks**
- user account password: **password**

As a best practice, log on as the administrator and change the default passwords immediately after the NPB application is installed.

## Predefined Accounts and Roles

Learn about predefined accounts and roles for the NPB application

The NPB application ships with two predefined accounts—admin and user. The maximum number of user accounts that you can configure is 64, including the predefined accounts.

- **admin**—Accounts with admin role access can execute all commands supported on the device.
- **user**—Accounts with user-level access have read-only permissions. User-level accounts can run the following operational CLI commands.

**Table 4: User-level operational commands**

Command	Action
<b>dir</b>	List flash files
<b>end</b>	End current mode and change to enable mode
<b>exit</b>	Exit current mode and revert to previous mode
<b>list</b>	Print command list
<b>ping</b>	Ping
<b>quit</b>	Exit current mode and revert to previous mode
<b>show</b>	Show values
<b>terminal</b>	Set terminal timeout parameters
<b>traceroute</b>	Run traceroute

## Accessing the CLI

After an IP address is assigned to the device, you can access the CLI through a serial console connection to the Ethernet management port or SSH session using the device management IP address.

For information on a session connection, see the *Extreme 9920 Software Configuration Guide, 21.1.0.0*.

The procedure to access the CLI is same for both console interface and SSH session. The following example shows the admin role logging into the device:

```
device login: admin
Password: *****
device#
```



### Note

Multiple users can open sessions on the device and issue commands. The device supports a maximum of 32 CLI sessions.

## Command Modes

---

The the application CLI uses an industry-standard hierarchical shell familiar to networking administrators.

### Exec Mode

Log into the device to access Exec mode. Exec mode supports all clear, show, and debug commands. In addition, some configuration commands that do not make changes to the system configuration are also supported. The following example shows the command prompt in Exec mode:

```
device#
```

Use the `disable`, `exit`, or `logout` command to exit Exec mode

### Config Mode

Config mode supports commands that change the device configuration. All NPB application configurations are auto-persistent. Config mode provides access to sub-configuration modes for individual interfaces and other configuration areas. The following example shows how to access Config mode from Exec mode and the command prompt in Config mode:

```
device# configure terminal  
device(config)#
```

### do Command

You can use the `do` command as a shortcut to save time when you are working in any configuration mode and you want to run a command in Exec mode.

For example, if you are configuring an Ethernet interface and you want to run an Exec mode command, such as the `dir` command, you first have to exit the Interface configuration mode. By using the `do` command with the `dir` command, you can ignore the need to change configuration modes, as shown in the following example:

```
device(config-if-eth-1/2)# do dir  
total 32  
drwxrwxr-x 3 21487 1011 4096 Mar 26 17:58 .  
drwxrwxr-x 3 21487 1011 4096 Mar 13 06:45 ..  
-rw-r--r-- 1 root sys 495 Mar 16 15:41 defaultconfig.cluster  
-rw-r--r-- 1 root sys 210 Mar 16 15:41 defaultconfig.standalone  
drwxrwxr-x 5 root sys 4096 Mar 26 17:57 flex-cli  
-rw-r--r-- 1 root root 11093 Mar 26 18:04 startup-config  
  
16908197888 bytes total (8438681600 bytes free)
```

## CLI Commands and Command Syntax

---

You can display commands and syntax information in any mode and from any point in the command hierarchy.

Enter a question mark (?) in any command mode to display the list of commands available in that mode.

```
device# ?
```

To display a list of commands that start with the same characters, type the characters followed by a question mark (?).

```
device# e?
Possible completions:
event-handler    Event Handler Commands
execute-script   Run user-level BASH scripts
exit             Exit the management session
```

To display the keywords and arguments associated with a command, enter the keyword followed by a space a then a question mark (?).

```
device# terminal ?
Possible completions:
length      Sets Terminal Length for this session
monitor     Enables terminal monitoring for this session
no          Sets Terminal Length for this session to default :24.
timeout     Sets the interval that the EXEC command interpreter wait for user input.
```

If the question mark (?) is typed within an incomplete keyword, but the keyword matches several keywords, the CLI displays help for all the matching keywords.

```
device# show d?
Possible completions:
debug       Display the udld debug configuration
defaults    Display default configuration
dot1x      Show dot1x
```

If the device does not recognize a command after you press **Enter**, an error message displays.

```
device# hookup
           ^
syntax error: unknown argument.
```

If you enter an incomplete command, an error message displays.

```
device# show
           ^
syntax error: unknown argument.
```

## Completing CLI commands

To complete the spelling of commands or keywords automatically, begin typing the command or keyword and then press **Tab**. For example, at the CLI command prompt, type `te` and press **Tab**:

```
device# te
```

The CLI displays the following command.

```
device# terminal
```

If there is more than one command or keyword associated with the characters typed, the CLI displays all choices. For example, at the CLI command prompt, type `show 1` and press **Tab**.

```
device# show 1
```

## CLI keyboard shortcuts

The following table lists CLI keyboard shortcuts.

**Table 5: CLI keyboard shortcuts**

Keystroke	Description
<b>Ctrl+A</b>	Moves the cursor to the beginning of the command line.
<b>Ctrl+B</b> (or the left arrow key)	Moves the cursor back one character.
<b>Ctrl+C</b>	Escapes and terminates command prompts and ongoing tasks (such as lengthy displays), and displays a fresh command prompt.
<b>Ctrl+E</b>	Moves the cursor to the end of the command line.
<b>Ctrl+F</b> (or the right arrow key)	Moves the cursor forward one character.
<b>Ctrl+N</b> (or the down arrow key)	Displays commands in the history buffer with the most recent command displayed last.
<b>Ctrl+P</b> (or the up arrow key)	Displays commands in the history buffer with the most recent command displayed first.
<b>Ctrl+U</b>	Deletes all characters from the cursor to the beginning of the command line.
<b>Ctrl+W</b>	Deletes the last word you typed.
<b>Ctrl+Z</b>	Returns to privileged EXEC mode. Using Ctrl+Z in privileged EXEC mode executes partial commands.
<b>Esc B</b>	Moves the cursor back one word.
<b>Esc F</b>	Moves the cursor forward one word.

## CLI Command Output Modifiers

You can filter the output of the CLI **show** commands by using the output modifiers described below.

**Table 6: CLI command output modifiers**

Output Modifier	Description
<b>append</b>	Appends the output to a file.
<b>redirect filename</b>	Redirects the command output to the specified file.
<b>include string or expression</b>	Displays the command output that includes the specified expression.
<b>exclude string or expression</b>	Displays the command output that excludes the specified expression.
<b>begin string or expression</b>	Displays the command output that begins with the specified expression.

**Table 6: CLI command output modifiers (continued)**

Output Modifier	Description
<b>last</b>	Displays only the last few lines of the command output.
<b>tee filename</b>	Redirects the command output to the specified file. Notice that this modifier also displays the command output.
<b>until string</b>	Ends the output when the output text matches the string.
<b>count</b>	Counts the number of lines in the output.
<b>linnum</b>	Enumerates the lines in the output.
<b>more</b>	Paginates the output.
<b>nomore</b>	Suppresses the pagination of the output.
<b>FLASH</b>	Redirects the output to flash memory.

## Unsupported Input Characters

If unsupported input characters are used for user-defined objects, an error message is displayed.

However, characters dependent on combinations of the **AltGr** key and another key are not supported.



### Note

The **AltGr** key is the **Alt** key to the right of the space bar.

## Debug and System Diagnostic Commands


Debug and system diagnostic commands, such as "debug" and "show system internal" commands, are developed and intended for specialized troubleshooting.

Extreme Networks recommends that you work closely with Extreme technical support in executing such commands and interpreting their results.



### Note

Not all diagnostic commands are documented.

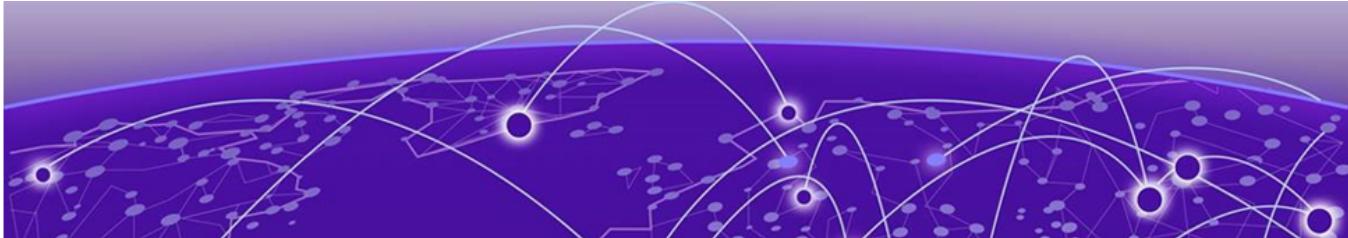

# NPB Application Commands

---

[aaa accounting](#) on page 22  
[aaa authentication](#) on page 24  
[breakout](#) on page 25  
[capture](#) on page 27  
[channel-group](#) on page 29  
[clear counters access-list all](#) on page 31  
[clear counters egress](#) on page 32  
[clear counters egress-group](#) on page 33  
[clear counters encapsulation](#) on page 34  
[clear counters ingress-group](#) on page 36  
[clear counters interface](#) on page 37  
[clock set](#) on page 39  
[clock timezone](#) on page 40  
[connector](#) on page 41  
[copy](#) on page 42  
[crypto import](#) on page 45  
[crypto import-pkcs](#) on page 47  
[decap](#) on page 49  
[delete](#) on page 51  
[deny ipv4-dest](#) on page 53  
[description](#) on page 55  
[destination-ipv4-addr](#) on page 57  
[destination-mac-addr](#) on page 59  
[dir](#) on page 61  
[egress](#) on page 63  
[egress-group](#) on page 65  
[encap](#) on page 67  
[encap-type](#) on page 69  
[fec](#) on page 70  
[forward-action](#) on page 72  
[hardware](#) on page 73  
[ingress-group](#) on page 74  
[interface ethernet](#) on page 76  
[interface port-channel](#) on page 77

[\*\*ip access-list\*\*](#) on page 78  
[\*\*ip address\*\*](#) on page 80  
[\*\*ip dns\*\*](#) on page 82  
[\*\*ip gateway\*\*](#) on page 84  
[\*\*ipv6 access-list\*\*](#) on page 85  
[\*\*ipv6 address\*\*](#) on page 87  
[\*\*ipv6 gateway\*\*](#) on page 89  
[\*\*link-fault-signaling\*\*](#) on page 90  
[\*\*listener-policy\*\*](#) on page 91  
[\*\*load-balance\*\*](#) on page 93  
[\*\*mac access-list\*\*](#) on page 94  
[\*\*match ip access-list\*\*](#) on page 96  
[\*\*match ipv6 access-list\*\*](#) on page 97  
[\*\*match mac access-list\*\*](#) on page 98  
[\*\*mtu\*\*](#) on page 99  
[\*\*new-scope\*\*](#) on page 101  
[\*\*ntp\*\*](#) on page 102  
[\*\*ping\*\*](#) on page 104  
[\*\*precedence\*\*](#) on page 106  
[\*\*route-map\*\*](#) on page 107  
[\*\*seq \(ip access-list rules\)\*\*](#) on page 109  
[\*\*seq \(ipv6 access-list rules\)\*\*](#) on page 113  
[\*\*seq \(mac access-list rules\)\*\*](#) on page 117  
[\*\*set egress\*\*](#) on page 120  
[\*\*set egress-group\*\*](#) on page 122  
[\*\*set encapsulation\*\*](#) on page 124  
[\*\*set ingress-group\*\*](#) on page 125  
[\*\*set listener-policy\*\*](#) on page 127  
[\*\*set route-map\*\*](#) on page 129  
[\*\*show capture packet config\*\*](#) on page 131  
[\*\*show capture packet interface\*\*](#) on page 132  
[\*\*show capture packet pcapfile-info\*\*](#) on page 134  
[\*\*show inventory\*\*](#) on page 135  
[\*\*show chassis\*\*](#) on page 137  
[\*\*show clock\*\*](#) on page 138  
[\*\*show counters egress\*\*](#) on page 139  
[\*\*show counters egress-group\*\*](#) on page 140  
[\*\*show counters encapsulation\*\*](#) on page 141  
[\*\*show counters ingress-group\*\*](#) on page 142  
[\*\*show counters interface ethernet\*\*](#) on page 143  
[\*\*show counters interface management\*\*](#) on page 145  
[\*\*show counters transport-tunnel\*\*](#) on page 146

[show crypto ca certificates](#) on page 147  
[show egress](#) on page 148  
[show egress-group](#) on page 149  
[show encapsulation](#) on page 150  
[show firmware](#) on page 151  
[show firmware history](#) on page 152  
[show grpc-server gnmi capabilities](#) on page 153  
[show grpc-server gnmi statistics](#) on page 155  
[show ingress-group](#) on page 156  
[show interface brief](#) on page 157  
[show interface ethernet](#) on page 158  
[show interface management](#) on page 160  
[show interface port-channel](#) on page 161  
[show inventory](#) on page 163  
[show ip access-list](#) on page 165  
[show ip dns](#) on page 167  
[show ipv6 access-list](#) on page 168  
[show link-fault-signaling](#) on page 170  
[show listener-policy](#) on page 171  
[show logging](#) on page 172  
[show mac access-list](#) on page 174  
[show media](#) on page 176  
[show ntp association](#) on page 178  
[show ntp status](#) on page 179  
[show role](#) on page 180  
[show route-map](#) on page 181  
[show running-config](#) on page 182  
[show running-config aaa accounting](#) on page 184  
[show running-config access-list](#) on page 185  
[show running-config egress](#) on page 186  
[show running-config egress-group](#) on page 187  
[show running-config ingress](#) on page 188  
[show running-config ip dns](#) on page 189  
[show running-config listener-policy](#) on page 190  
[show running-config route-map](#) on page 191  
[show running-config snmp-server](#) on page 192  
[show running-config system logging host](#) on page 193  
[show running-config system logging service](#) on page 194  
[show running-config tacacs-server](#) on page 195  
[show running-config username](#) on page 196  
[show snmp server](#) on page 197  
[show sysinfo all](#) on page 198

[show sysinfo fan](#) on page 201  
[show sysinfo led](#) on page 202  
[show sysinfo power-supply](#) on page 203  
[show sysinfo sensor](#) on page 204  
[show sysinfo slots](#) on page 208  
[show system logging host](#) on page 209  
[show system internal](#) on page 210  
[show system logging service](#) on page 212  
[show system service](#) on page 213  
[show transport-tunnel](#) on page 214  
[show version](#) on page 215  
[shutdown](#) on page 216  
[snmp-server community](#) on page 217  
[snmp-server host](#) on page 218  
[source-ipv4-addr](#) on page 219  
[source-mac-addr](#) on page 220  
[speed \(ethernet interfaces\)](#) on page 222  
[speed \(management interfaces\)](#) on page 224  
[strip](#) on page 225  
[system firmware commit](#) on page 227  
[system firmware rollback](#) on page 228  
[system firmware update](#) on page 229  
[system logging host](#) on page 232  
[system logging service severity](#) on page 234  
[system service rollback](#) on page 235  
[system service update](#) on page 237  
[tacacs-server](#) on page 239  
[traceroute](#) on page 241  
[traffic-type](#) on page 243  
[transport-tunnel](#) on page 245  
[truncate](#) on page 247  
[tunnel-type](#) on page 248  
[username](#) on page 250  
[vlan](#) on page 252  
[vlan-id](#) on page 254  
[vlan-pcp](#) on page 255

The follow topics describe all commands that can be run at the CLI prompt and include details about parameters and usage.

## aaa accounting

Enables or disables sending accounting logs for commands or login information to the TACACS+ server.

### Syntax

```
aaa accounting commands default start-stop{ tacacs+ | none }  
no aaa accounting commands default start-stop{ tacacs+ | none }
```

### Command Default

Accounting is disabled.

### Parameters

#### **commands**

Enables command accounting.

#### **default**

Enables sending of logged information to the default server.

#### **start-stop**

Enables the sending of a "start" accounting notice at the beginning of a process and a "stop" accounting notice at the end of a process. The "start" accounting record is sent in the background. The requested user process begins regardless of whether the "start" accounting notice was received by the accounting server.

#### **tacacs+**

Specifies using the TACACS+ server for accounting.

#### **none**

Disables accounting services.

### Modes

Config mode

### Usage Guidelines

This command is allowed in Config mode only.

You must have an admin role to use this command.

You can modify or enable only one accounting configuration.

## Examples

The following example configures command accounting, with the CLI information being forwarded to the TACACS+ server.

```
device# configure terminal  
device(config)# aaa accounting commands default start-stop tacacs+
```

The following example disables login accounting by using the no aaa accounting command; command accounting (when also configured) remains active.

```
device(config)# no aaa accounting default start-stop
```

## aaa authentication

Configures the Authentication, Accounting, and Authorization (AAA) login sequence with TACACS+ primary and local auth secondary.

### Syntax

```
aaa authentication login tacacs+ local-auth-fallback  
no aaa authentication login tacacs+ local-authfallback
```

### Command Default

Authenticates with the local database if this command is not run.

### Parameters

#### **login**

Specifies the order of login authentication sources for login

#### **tacacs+**

Specifies the use of TACACS+ servers

#### **local-auth-fallback**

Specifies the use of a local switch database if authentication methods are not active or authentication fails.

### Modes

Config mode

### Usage Guidelines

This command is allowed only in configuration mode.

You must have the admin role to use this command.

### Examples

The following example configures the authentication sequence to first use a TACACS+ server, then to use the fallback database if TACACS+ authentication is not active or fails.

```
device# configure terminal  
device(config)# aaa authentication login tacacs+ local-auth-fallback
```

The following example removes the authentication sequence from the TACACS+ server and defaults to local database authentication.

```
device(config)# no aaa authentication login tacacs+ local-authfallback
```

## breakout

Configures breakout mode on the supported connectors.

### Syntax

```
breakout [ 4x10g | 4x25g ]
no breakout
```

### Parameters

*4x10g*

Configures the 4 x 10 G breakout mode.

*4x25g*

Configures the 4 x 25 G breakout mode.

### Modes

Connector config mode

### Usage Guidelines

This command is available only to users with admin role.

This command is supported only on even numbered ports. Example: 1/2

The port must not be part of a port channel.

The port must be in shutdown state.

The current and the previous port are deleted and four new ports with the breakout speed are created.

**Table 7: Error messages**

Port <i>slot/port</i> does not support breakout config. Only even numbered ports are supported.	Only even numbered ports are supported. Reconfigure the port.
Port is already in breakout mode.	Verify that the specified port is the one that was intended.
Port is not in breakout mode.	Port must be in breakout mode to successfully remove it from breakout mode.
Operation not allowed on connector <i>slot/port</i> . Interfaces <i>slot/oddNumPort</i> , <i>slot/port</i> can't be in port channel group.	Port should not be part of a port-channel group.
Operation not allowed on connector <i>slot/port</i> . Interfaces <i>slot/port</i> , <i>slot/port</i> should be in shutdown state.	Port must be in a shutdown state to configure <b>breakout</b> .

## Examples

The following examples shows configuration of a breakout and the confirmation that it was successful.

```
device(config-connector-1/2)# breakout 4x10g
WARN: Enabling breakout on an interface is a disruptive action and will result in ports
1/1 and 1/2 to be unavailable for use.
```

```
device(config-connector-1/2)# breakout 4x10g
Port is already in breakout mode
```

## capture

Configures onboard packet capture on the interface.

### Syntax

```
capture packet interface ethernet IFNAME { direction [ both | rx | tx ]  
[packet-count number ] }  
capture start  
capture stop  
no capture packet interface ethernet IFNAME
```

### Parameters

**interface ethernet IFNAME**

Specifies the front panel port in slot/port format.

**direction**

Specifies the type of packet capture.

**both**

Specifies both ingress and egress packet capture.

**rx**

Specifies ingress packet capture.

**tx**

Specifies egress packet capture.

**packet-count number**

Specifies the number of packets to be captured on the interface. Valid packet capture values range from 1 to 8000.

**start**

Starts packet capture.

**stop**

Stops packet capture.

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

Only one mirror session is allowed per port.

Maximum 10 mirror sessions per device are allowed.

Packet capture is not allowed if maximum PCAP files are already created.

When packet-count parameter is specified, the packet capture automatically stops on the interface after the specified number of packets are captured.

The maximum number of existing PCAP files cannot exceed 25.

After packet capture is configured on the required ports, use the `capture start` command to start capturing packets in the active running PCAP file.

The `capture stop` command stops writing the packet to PCAP file and moves the active file to next available inactive PCAP file.

Start and stop options do not clear hardware entries.

Onboard packet capture is not persistent across reboot.

**Table 8: Error messages**

Message	Reason
Max Session Per Port Exceeded	Only one port can be mentioned in the command.
Max Session Exceeded	Only one mirror session is allowed on one port. A maximum of 10 mirror sessions is allowed on a device.
Interface does not exist	Interface must be configured before packet capture can be configured.
Maximum limit of pcap files already created. Remove old pcap files to continue	The number of existing PCAP files cannot exceed 25.
Interface range is not supported	Range or list of ports are not supported.

## Examples

The following example configures both ingress and egress packet capture, up to 100, on ethernet interface 1/1.

```
device# capture packet interface ethernet 1/1 direction both packet-count 100
```

The following example removes packet capture configuration on the specified ethernet slot/port.

```
device# no capture packet interface ethernet 1/1
```

The following example starts, verifies, and stops packet capture.

```
device# capture start
device# show capture packet config
capture start
device# capture stop
```

## channel-group

Configures a physical interface to an EtherChannel.

### Syntax

```
channel-group number mode on  

no channel-group
```

### Parameters

*number*

Number of the channel group. Valid range is from 1 to 255.

**mode**

Specifies the EtherChannel mode of the interface.

**on**

This is the default. Specifies that all EtherChannels that are not running LACP remain in this mode.

### Modes

Interface config mode

### Usage Guidelines

An EtherChannel in the **on** channel mode is a pure EtherChannel (static-lag) and can aggregate a maximum of 64 ports.

Only one port can be mapped with one channel-group.

This command requires that a group is already present.

MTU must not be configured.

The speed of member-ports should be same as that of the current port.

When the last physical interface is deleted from an EtherChannel, the EtherChannel is not removed. To remove the interface from the channel group, use the **no interface port-channel** command.

Message	Reason
Error: Invalid configuration, port-channel 2 not present.	Trying to configure the channel-group without creating the port-channel
Error: already mapped to port-channel 1.	Trying to configure the channel-group which is already mapped to the port-channel

Message	Reason
Error: MTU needs to be unconfigured before adding an interface to port-channel.	Trying to add interfaces to the port-channel without removing MTU configuration
Error: speed configuration not allowed when interface is already member of a port-channel.	Trying to configure speed when the interface is already a port-channel member

## Examples

The following example configures the physical interface from the Ether Channel.

```
device# configure terminal
device(config)# interface ethernet 1/1
device(config-if-eth-1/1)# channel-group 1 mode on
device(config-if-eth-1/1)# no shutdown
device(config-if-eth-1/1)# end

device# show running-configuration
interface ethernet 1/1
channel-group 1 mode on
no shutdown
```

## **clear counters access-list all**

Clears counters of all configured access lists: MAC, IPv4, and IPv6

### Syntax

```
clear counters access-list all
```

### Modes

Exec mode

**Table 9: Error messages**

Message	Reason
Error: messaging failure(Init) while clearing acl counters	Internal error
Error: messaging failure(Clear) while clearing acl counters	Internal error

### Examples

The following example displays all ip access-lists and their counters.

```
device# show ip access-list all
ip access-list grp_a_deny_1
    seq 10 deny ip 2.2.4.0 255.255.255.0 1.1.1.3 255.255.255.255 ( 5000000 Packets,
1940000000 Bytes, 0 Packets/sec, 0 Bits/sec )
    seq 20 deny ip 2.2.5.0 255.255.255.0 1.1.1.4 255.255.255.255 ( 5000000 Packets,
1940000000 Bytes, 0 Packets/sec, 0 Bits/sec )
ip access-list grp_a_deny_2
    seq 10 deny ip 2.2.6.0 255.255.255.0 1.1.1.5 255.255.255.255 ( 5000000 Packets,
1940000000 Bytes, 0 Packets/sec, 0 Bits/sec )
    seq 20 deny ip 2.2.7.0 255.255.255.0 1.1.1.6 255.255.255.255 ( 5000000 Packets,
1940000000 Bytes, 0 Packets/sec, 0 Bits/sec )
```

The following example clears counters for all access-lists.

```
device# clear counters access-list all
```

The following example verifies that all access-list counters were cleared.

```
device# show ip access-list all
ip access-list grp_a_deny_0
    seq 10 deny ip 2.2.2.0 255.255.255.0 1.1.1.1 255.255.255.255 ( 0 Packets, 0 Bytes, 0
Bytes/sec, 0 Bits/sec )
    seq 20 deny ip 2.2.3.0 255.255.255.0 1.1.1.2 255.255.255.255 ( 0 Packets, 0 Bytes, 0
Bytes/sec, 0 Bits/sec )
ip access-list grp_a_deny_1
    seq 10 deny ip 2.2.4.0 255.255.255.0 1.1.1.3 255.255.255.255 ( 0 Packets, 0 Bytes, 0
Bytes/sec, 0 Bits/sec )
    seq 20 deny ip 2.2.5.0 255.255.255.0 1.1.1.4 255.255.255.255 ( 0 Packets, 0 Bytes, 0
Bytes/sec, 0 Bits/sec )
```

## clear counters egress

---

Clears all egress counters.

### Syntax

```
clear counters egress all
```

### Parameters

**all**

Specifies deletion of all counters for configured egresses.

### Modes

Exec mode

### Usage Guidelines

This command is ignored silently if an entry is not present.

### Examples

The following example clears counters for all egresses.

```
device# clear counters egress all
```

## **clear counters egress-group**

Clears counters for all egress-groups.

### Syntax

```
clear counters egress-group all
```

### Parameters

**all**

Specifies deletion of counters for all egress groups.

### Modes

Exec mode

### Usage Guidelines

This command is ignored silently if an entry is not present.

### Examples

The following example clears counters for all egress groups.

```
device# clear counters egress-group all
```

## clear counters encaps

Clears current statistics available on encaps.

### Syntax

```
clear counters encaps { name | all }
```

### Parameters

*name*

Specifies the encapsulation counter name.

**all**

Specifies all encapsulation counters.

### Modes

Encap config mode

### Usage Guidelines

Valid encapsulation name must be provided.

**Table 10: Error messages**

Message	Reason
Error: encaps <encap-name> not found	Valid encapsulation name must be provided.

### Examples

The following example clears encaps\_1 counters.

```
device(config-encap)# clear counters encaps encaps_1

Show running:
device# show encaps counters encaps_1

Tunnel Encapsulation Statistics(GRE)
  Egress port : ethernet 1/2
    RX Frames : 0
    RX Bytes : 0
```

The following example clears all encaps counters.

```
device# clear counters encaps all
```

The following example shows encaps counters

```
device# show counters encaps encaps_1

Tunnel Encapsulation Statistics(GRE)
  Egress port : ethernet 10/2
```

```
RX Frames : 0  
RX Bytes : 0  
mac access-list L2
```

## clear counters ingress-group

Clears ingress-group counters information.

### Syntax

```
clear counters ingress-group { name | all }
```

### Parameters

**name**

Specifies the name of the ingress-group counters.

**all**

Specifies all ingress-group counters names.

### Modes

Exec mode

### Usage Guidelines

If the ingress group has only the associated ports, the **clear ingress-group counters** command does not clear statistics as it fetches the interface statistics. Interface clear clears the statistics for the ingress group as well.

### Examples

The following example clears ig1 ingress-group counters.

```
device# clear counters ingress-group ig1
```

The following example displays all ingress-group counters information.

```
# show counters ingress-group all
Number of ingress-groups: 2
Ingress-group Packet Statistics (Vxlan Tunnel)
    Name : IgVxlanVni100
    RX Frames : 0
    RX Bytes : 0
```

The following example clears counters on all ingress groups and verifies it with the show command.

```
device# clear counters ingress-group all

device# show counters ingress-group all
Number of ingress-groups: 2
    Name : ig_01
    No ingress-group stats found

    Name : ig_02
    No ingress-group stats found
```

## clear counters interface

Clears counters of the specified interface.

### Syntax

```
clear counters interface ethernet [ IFNAME | all ]  
clear counters interface management 0  
clear counters interface port-channel number
```

### Parameters

#### **ethernet**

Specifies the counters of ethernet interface.

#### **IFNAME**

Specifies the ethernet interface name in slot/port format. Example: 1/1 Range: 1/1-3, 5, 7-9.

#### **all**

Clears all ethernet interface statistics.

#### **Management 0**

Specifies the management interface.

#### **port-channel number**

Specifies the port-channel interface. Valid values are 1 through 255.

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

**Table 11: Error messages**

Message	Reason
Error: Command supported on active interfaces only	The specified interface must be active.

### Examples

The following example clears counters of the ethernet interface on slot/port 1/1.

```
device# clear counters interface ethernet 1/1  
device#
```

The following example clears counters on management interface 0.

```
device# clear counters interface management 0  
device#
```

The following example clears port-channel 1 counters.

```
device# clear counters interface port-channel 1  
device#
```

The following example clears counters for all ethernet interfaces.

```
device# clear counters interface ethernet all  
device#
```

## **clock set**

Sets the clock date and time.

### Syntax

```
clock set date - time
```

### Parameters

```
set date - time
```

Sets the clock date and time.

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

### Examples

The following example configures clock date and time.

```
device# clock set  
TIME dateTime (CCYY-MM-DDTHH:MM:SS)  
  
device# clock set 23423423-23-21T23:00:00  
Failed to parse time specification: 23423423-23-21 23:00:00
```

## clock timezone

Configures the system timezone.

### Syntax

```
clock timezone region / city
no clock timezone region / city
```

### Parameters

**timezone** *region / city*

Specifies the supported timezone.

### Modes

Config mode

### Usage Guidelines

This command is available only to users with admin role.

The **no clock timezone** resets the system clock to default UTC.

### Examples

The following example configures timezone.

```
device(config)# clock timezone America/Los_Angeles
device(config)# clock time dog/dog
Wrong timezone value entered : dog/dog
```

## connector

Configures the connector.

### Syntax

```
connector slot/port
```

### Parameters

*slot/port*

Specifies the name of the connector in slot/port format.

### Modes

Hardware configuration mode

### Examples

The following example shows how to configure the connector.

```
device(config)# hardware
device(config-hardware)# connector 1/2
device(config-connector-1/2)
```

## copy

Copies a configuration file to the specified location using flash or SCP to replace current running configuration.

### Syntax

```
copy {default-config | flash:// config-file/filename | scp://  
      username:password@{ hostname}[:port] {/filepath }running-config
```

### Parameters

#### copy

Specifies the copy function.

#### default-config

Specifies default configuration.

#### flash://

Specifies the flash device on which the file is stored.

#### config-file

Specifies the file is a configuration file.

#### *filename*

Specifies the name of the configuration file stored on the flash device.

Flash file command format: flash://config-file <filename>

```
flash-type [ config-file | core-dumps | pcap-file | ms_images |  
chassis-ms | ifmgr-ms | lacp-ms | lldp-ms | mgmt-cli | mgmt-svc-  
api-gw | mgmt-snmp-agent ]
```

Specifies the configuration file type.

#### scp://

Specifies use of the Session Control Protocol (SCP).

#### *username*

Account name of the authorized user.

#### *password*

Password of the authorized user.

#### *hostname*

Specifies the server by name or by IP address.

#### *port*

Specifies the port number, which must be preceded by a colon. If the port is not included, the default port is assumed.

#### *filepath*

Specifies the location from which to transfer the file using SCP.

SCP command format: scp://<username>:<password>@ [hostname] /<filepath>

#### running-config

Specifies current running configuration.

**default-config** *running-config*

Clears the running configuration and replaces it with the default configuration.

**running-config** *filepath*

Copies running-config to a flash file or remote location using SCP.

Flash-file command format: `flash://config-file/<filepath>`

SCP command format: `scp://<username><password>@[hostname] /<filepath>`

## Modes

Exec mode

## Usage Guidelines

This command is available only to users with admin role.

After the `copy default-config running-config` command completes, the system reboots with only the management interface configuration.

**Table 12: Error Messages**

Message	Reason
Error: Input file does not exist	File named in the command is either misspelled or it doesn't exist at the location specified.
Error: Invalid user credentials.	Username, password or both were entered incorrectly or the user does not have sufficient permissions to perform the operation.
Error: Host IP not reachable	Host is either offline or specified incorrectly.
Error: Target file does not exist	Self-explanatory. Verify file- and path are correct as entered.

## Examples

The following example replaces the running configuration with the default configuration.

```
device# copy default-config running-config

This operation will modify your running configuration.
WARN: system will be rebooted to have configuration changes to take effect!

Do you want to continue? [y/n]:
Reloading.... please wait
```

The following examples are some valid **copy** commands.

```
device# copy flash://config-file/testfile running-config

device#scp://test:test@1.1.1.1:22/home/test/config-file/testfile running-config

device# copy default-config running-config
```

```
device# copy running-config flash://config-file/testfile
```

## crypto import

Imports the authentication certificate for security configuration

### Syntax

```
crypto import type { https | syslogca } host ip address protocol { scp |  
    sftp } certificate certfile key key-file user remote user password  
    remote user password  
  
no crypto import
```



#### Note

When you use the no form of the command with type **https**, a new certificate/key pair is regenerated and used with the ingress controller.

### Parameters

#### type

**https**

Specifies an https certificate.

**syslogca**

Specifies a syslogca certificate

**host ip address**

Defines the remote host name or IP address of the certificate server.

#### protocol

**scp**

Specifies use of SCP for accessing the certificate file.

**sftp**

Specifies use of SFTP for accessing the certificate file.

**certificate file-name**

Defines the name of the certificate file.

**key key-file**

Specifies the key file to retrieve.

**username**

Specifies the name of the remote user that has access to the file.

**password user-password**

Defines the password for the user name on the host server.



#### Note

As a best practice, do not list the password in the command line for security purposes. The user will be prompted for the password.

## Modes

Exec mode

## Usage Guidelines

- This command is allowed only in configuration mode.
- You must have the admin role to use this command.
- Use the no form of the command to remove the authentication certificate.

**Table 13: Error messages**

Message	Reason
SCP/SFTP validation failed	Importing certificate failed. Please verify certificate location and user credentials/parameters.
Invalid credentials or server not accessible	Importing certificate failed. Please verify certificate location and user credentials/parameters.
Certificate validation failed	Error: Importing certificate failed due to invalid file format or validation failed.
Username validation failed	Error: Importing certificates failed. Username length should be between 1 and 64 characters.
IP address validation failed	Importing certificates failed. Only valid IPv4 unicast address is supported.
Cert/key file name validation failed	Importing certificates failed. File name length should be between 1 and 512

## Examples

The following example imports the certificate key pair using SCP.

```
device# crypto import type https protocol scp host 10.23.17.115
  ↵certificate cert.pem key key.pem user jsalanga password password123

Installing https certificate will result in a momentary delay
  ↵and may affect active CLI connections - please be patient.

Successfully imported file: cert.pem
Successfully imported file: key.pem
```

The following example deletes an HTTPS certificate.

```
device# no crypto import type https

Deleting https certificate!
Installing https certificate will result in a
momentary delay and may affect active CLI
connections - please be patient.
Successfully imported file: cert.pem
Successfully imported file: key.pem
```

## crypto import-pkcs

Imports a TLS server certificate and a private key in PKCS12 format

### Syntax

```
crypto import-pkcs protocol { scp | sftp } type https host host-address
    user user-name password remote-user-password file file-name
    pkcspassphrase passphrase

no crypto import-pkcs
```

### Command Default

### Parameters

#### protocol

**scp**

Specifies use of SCP for accessing the certificate file.

**sftp**

Specifies use of SFTP for accessing the certificate file.

#### type https

Indicates that the certificate is used for HTTPS server authentication.

#### host host-address

Defines the remote host name or IP address of the certificate server.

#### user user-name

Defines the user name for the host server.

#### password user-password

Defines the password for the user name on the host server.



#### Note

As a best practice, do not list the password in the command line for security purposes. The user will be prompted for the password.

#### file file-name

Defines the file name of the certificate file in .pfx or .p12 format.

#### pkcspassphrase passphrase

Defines the password used at the creation of the .pfx or .p12 certificate file.

### Modes

Exec mode

## Usage Guidelines

Use this command to import a TLS server certificate and private key (in PKCS12 format) to device and establish a secure connection.

Use the no form of the command to remove PKCS-format files.

Or use the command **no crypto import type https** to remove installed PKCS-format files.

**Table 14: Error messages**

Message	Reason
SCP/SFTP validation failed	Importing certificate failed. Please verify certificate location and user credentials/parameters.
Invalid credentials or server not accessible	Importing certificate failed. Please verify certificate location and user credentials/parameters.
Certificate validation failed	Error: Importing certificate failed due to invalid file format or validation failed.
Username validation failed	Error: Importing certificates failed. Username length should be between 1 and 64 characters.
IP address validation failed	Importing certificates failed. Only valid IPv4 unicast address is supported.
Cert/key file name validation failed	Importing certificates failed. File name length should be between 1 and 512

## Examples

The following example specifies HTTPS authentication and SCP for the certificate file ngnpb.pkcs.

```
device# crypto import-pkcs protocol scp type https host 10.24.12.111
  ↪user testuser password password file ngnpb.pkcs pkcspassphrase passphrase

HTTPS server certificate imported.

Installing https certificate will result in a
momentary delay and may affect active CLI
connections - please be patient.
Successfully imported file: ngnpb.pkcs
```

The following example removes the installed PKCS-format files.

```
device# no crypto import-pkcs type https
```



### Note

**no crypto import type https** also removes the installed PKCS-format files.

## decap

Decapsulates the current tunnel of the received packet.

### Syntax

**decap**

**no decap**

### Parameters

**decap**

Sets decapsulation action for the route map or listener policy.

### Modes

Route-map config mode

Listener-policy config mode

### Usage Guidelines

**Enabled in route-map mode:** Decapsulates a particular encapsulation header in the packet and process remaining packet in further processing blocks. The scope of the headers is shifted to inner headers automatically.

**Enabled in listener-policy mode:** Terminates the incoming tunneled packets and strips the tunneled header. Payload of the tunneled packet is forwarded to the egress.

The **no decap** command removes decapsulation action from the route map.

**Table 15: Error Messages**

Error	Reason
Error: New scope is enabled on <i>routeMapName</i> , terminate can't enable	<b>new-scope</b> and <b>decap</b> are mutually exclusive.

### Examples

The following example enables the decap function in route-map configuration mode and then uses the show command to verify the setting.

```
device# configure terminal
device(config)# route-map rmap1 10
device(config-route-map)# decap

device# show route-map all
route-map rmap1 10
forward-action deny
decap
```

```
Policy matches: 0 packets, 0 bytes, 0 Packets/secRate, 0 Bits/sec
```

The following example enables the decap function in listener-policy configuration mode.

```
device# configure terminal
device(config)# listener-policy lp1 100
device(config-listener-policy)# decap
```

The following example removes the decap funtion from route-map for rmap1 10.

```
device# configure terminal
device(config)# route-map rmap1 10
device(config-route-map)# no decap
```

## **delete**

Deletes a file from the flash device.

### Syntax

```
delete flash:///flash-type /filename
```

### Parameters

**flash-type** { config-file | core dumps | pcap-file | ms\_images | chassis-ms | ifmgr-ms | lacp-ms | lldp-ms | mgmt-cli | mgmtsvc-apigw | mgmt-snmp-agent }

Specifies the file type.

**filename**

Specifies the name of the file to be deleted from the flash device.

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

The active PCAP file cannot be deleted.

**Table 16: Error messages**

Message	Reason
Error: File flash://mgmt-cli/ filename not found	Specified file does not exist. Example: <b>delete flash://mgmt-cli test123</b>
% Unknown command.	Poorly formed command. Example: <b>delete flash://mgmt-cli123 test123</b>
% Command incomplete.	Example: <b>delete flash://mgmt-cli</b>
% Unknown command.	Insufficient privileges, even though command is formed correctly. Example: <b>delete flash:// mgmt-cli test</b>

### Examples

The following example deletes a configuration file.

```
device# delete flash://config-file test.txt
Warning: File flash://config-file/test.txt will be deleted (from flash).
Do you want to continue? [y/n]:
```

The following example deletes a PCAP file.

```
device# delete flash://pcap-file/test.pcap
```

The following example attempt to delete a system-created file

```
device# delete flash://config-file ../config_file
Warning: File flash://config-file/..config_file will be deleted (from flash).
Do you want to continue? [y/n]: y
Error : while removing the file flash://config-file/..config_file
```

## deny ipv4-dest

Denies further processing to packets received with matching IPv4 address.

### Syntax

```
deny ipv4-dest address mask
no deny ipv4-dest address mask
```

### Parameters

#### **deny ipv4-dest**

Specifies IPv4 address to be denied. Valid ranges is 1 through 254.

#### *address mask*

Specifies the IPv4 address and mask, which must be configured in dotted decimal notation, such as 196.168.0.1.

### Modes

Transport tunnel config mode

### Usage Guidelines

You must have an admin role to perform this task.

If another destination IP value is already configured, it must be removed before configuring a new destination IP.

If the same command is executed more than once, the second and subsequent executions are ignored and no error is reported.

**Table 17: Error messages**

Message	Reason
Error: Deny IP address mask is already configured	Duplicate IPv4 addresses are not allowed.
Error: Invalid destination IP address	IPv4 address is set to 0.0.0.0 or 255.255.255.255.
Error: Destination IP address conflicts with transport-tunnel <i>tunnelName</i>	IPv4 address conflicts with another transport tunnel.
% Value 'ipv4-dest' not in range <1-254>.	Example:device(config-transport-tunnel)# deny ipv4-dest asdf asdf

## Examples

The following example configures the IPv4 address and mask to match and deny further packet processing for transport tunnel tt1 and verifies the configuration with the show command.

```
device(config)# transport-tunnel tt1
device(config-transport-tunnel)# deny ipv4-dest 192.168.4.20 255.255.255.0

device# show running-config transport-tunnel tt1
transport-tunnel tt1
    deny ipv4-dest 192.168.4.20 255.255.255.0
```

## **description**

Sets the description for a route map, listener policy, or interface.

### Syntax

```
description description-string
no description description-string
```

### Parameters

**description** *description-string*

Specifies the description of the route map, listener policy, or interface. Maximum length of the description is 63 characters.

### Modes

Route-map config mode

Listener-policy config mode

Interface config mode

### Usage Guidelines

This command is available only to users with admin role.

The **no description** command removes the user configured interface description.

**Table 18: Error messages**

Message	Reason
Error: Length cannot be greater than 63 chars	Description provided was more than 63 characters.

### Examples

The following examples show how to configure description for an interface.

```
device# configure terminal
device(config)# route
device(config-if-eth 1/10)# description Ethernet Interface 1/10 (100G)

device# show running interface ethernet 1/10
interface ethernet 1/10
description Ethernet Interface 1/10 (100G)
shutdown

device(config-if-eth-1/1)#description
Description123456789012345678901234567890123456789012345678901234567890
Error: Length cannot be greater than 63 chars
```

The following examples show how to configure description for a listener policy.

```
device# configure terminal
device(config)# listener-policy lp-12
device(config-listener-policy)# description listener policy 12

device# show listener-policy lp-12
interface ethernet 1/10
description listener-policy 12
shutdown
```

The following examples show how to configure description for a route map.

```
device# configure terminal
device(config)# route-map rmap10
device(config-route-map)# description rmap10 configured Jan 23, 1951

device# show route-map rmap10
interface ethernet 1/10
description rmap10 configured Jan 23, 2013
no shutdown
```

## **destination-ipv4-addr**

Configures destination IP address for encapsulation of outgoing packets.

### Syntax

```
destination-ipv4-addr ip-addr
no destination-ipv4-addr ip-addr
```

### Parameters

**destination-ipv4-addr** *ip-addr*

Specifies the IP address to be configured as destination IP.

### Modes

Encap config mode

### Usage Guidelines

Validations for the command are as follows:

- Valid IP address must be provided. The following addresses are considered invalid IP addresses:
  - Unspecified IP address (0.0.0.0)
  - Broadcast IP address (255.255.255.255)
  - Multicast IP addresses (224.x.x.x to 240.x.x.x)
- One IP address per encapsulation is allowed. Already configured IP address must be removed before configuring a new IP address.
- If the same command is executed more than once, the second and subsequent executions are ignored and no error is reported.
- If the [no] form of the command is run without the configuration, the command is ignored and no error is reported.

**Table 19: Error messages**

Message	Reason
Error: Invalid IP address as source address	The following addresses are considered invalid IP addresses: <ul style="list-style-type: none"> <li>• Unspecified IP address (0.0.0.0)</li> <li>• Broadcast IP address (255.255.255.255)</li> <li>• Multicast IP addresses (224.x.x.x to 240.x.x.x)</li> </ul>
% Value 'source-ipv4-addr' not in range <1-254>.	IPv4 Address should be configured in dotted decimal notation in a valid subnet range. Example: 196.168.0.1.

## Examples

The following example configures the destination ip address.

```
device(config-encap-1) # destination-ipv4-addr 20.20.20.1
device(config-encap-1) #

Show running:
device# show running-configuration

encap encap-1
destination-ipv4-addr 20.20.20.1
```

## **destination-mac-addr**

Configures destination MAC address for encapsulation of outgoing packets.

### Syntax

```
destination-mac-addr mac-addr
no destination-mac-addr mac-addr
```

### Parameters

**destination-mac-addr** *mac-addr*

Specifies the MAC address to be configured as destination MAC.

### Modes

Encap config mode

### Usage Guidelines

Validations for the command are as follows:

- Valid MAC address must be provided.
- One MAC address per encapsulation is allowed. Already configured MAC address must be removed before configuring a new MAC address.
- If the same command is executed more than once, the second and subsequent executions are ignored and no error is reported.
- If the [no] form of the command is run without the configuration, the command is ignored and no error is reported.

**Table 20: Error messages**

Error: Invalid address as Destination MAC address	Valid address must be in colon-separated one-byte hexadecimal format. Example: XX:XX:XX:XX:XX:X . Zero padding may be needed to make one-byte data into 2-digit value.
Error: Destination MAC address is already configured	Destination MAC address cannot be duplicated in an encapsulation rule.
Error: Source and Destination MAC addresses cannot be same	Destination and source MAC address cannot be self-referential.

### Examples

The following example configures the destination MAC address.

```
device(config-encap-1)# destination-mac-addr 00:01:02:03:04:05
device(config-encap-1)#

```

Show running:

```
device# show running-configuration  
encap encap-1  
destination-mac-addr 00:01:02:03:04:05
```

## dir

Lists flash directory information.

### Syntax

```
dir [{ flash://{ chassis-ms | config-file | coredumps | ifmgr-ms | lacp-
ms | lldp-ms | mgmt-cli | mgmt-snmp-agent | mgmtsvc-apigw | ms_images
| pcap-file } }]
```

### Parameters

#### **dir**

Lists flash directory information.

#### **flash://chassis-ms**

Lists chassis flash file details.

#### **flash://config-file**

Lists configuration flash file details.

#### **flash://coredumps**

Lists coredump flash file details.

#### **flash://ifmgr-ms**

Lists ifmgr flash file details.

#### **flash://lacp-ms**

Lists LACP flash file details.

#### **flash://lldp-ms**

Lists LLDP flash file details.

#### **flash://mgmt-cli**

Lists mgmt-cli flash file details.

#### **flash://mgmt-snmp-agent**

Specifies list SNMP flash file details.

#### **flash://mgmtsvc-apigw**

Lists mgmtsvc-apigw flash file details.

#### **flash://ms\_images**

Lists ms images flash file details.

#### **flash://pcap-file**

Lists PCAP flash file details.

### Modes

Exec mode

## Examples

The following example lists flash directory information.

```
device# dir
config-file :
-rw-r--r--    1053      2021-05-24 06:08:30      test
pcap-file :
-rw-r--r--    0         2021-04-30 07:44:00      README.md
tech-support :
firmware :
ms_images :
drwxr-xr-x   4096      2021-05-06 10:10:57      agent-pdb-ms
drwxr-xr-x   4096      2021-05-06 10:10:57      agent-pipeline-ms
drwxr-xr-x   4096      2021-05-06 10:10:57      agent-sp-intf-ms
drwxr-xr-x   4096      2021-05-06 10:10:57      agent-sp-nhop-ms
drwxr-xr-x   4096      2021-05-06 10:10:57      agent-sp-target-proxy-ms
drwxr-xr-x   4096      2021-05-06 10:10:57      agent-svcplane-ms
drwxr-xr-x   4096      2021-05-06 10:10:57      chassis-ms
drwxr-xr-x   4096      2021-05-06 10:10:57      ifmgr-ms
drwxr-xr-x   4096      2021-05-06 10:10:57      lacp-ms
drwxr-xr-x   4096      2021-05-06 10:10:57      lldp-ms
drwxr-xr-x   4096      2021-05-06 10:10:57      mgmt-cdb
drwxr-xr-x   4096      2021-05-06 10:10:57      mgmt-cli
drwxr-xr-x   4096      2021-05-06 10:10:57      mgmt-msgbus
drwxr-xr-x   4096      2021-05-06 10:10:57      mgmt-psdb
drwxr-xr-x   4096      2021-05-06 10:10:57      mgmt-sdb
drwxr-xr-x   4096      2021-05-06 10:10:57      mgmt-security
drwxr-xr-x   4096      2021-05-06 10:10:57      mgmt-snmp-agent
drwxr-xr-x   4096      2021-05-06 10:10:57      mgmtsvc-apigw
drwxr-xr-x   4096      2021-05-06 10:10:57      onboard-pcap-ms
drwxr-xr-x   4096      2021-05-06 10:10:57      pktmgr-ms
drwxr-xr-x   4096      2021-05-06 10:10:57      stratum-bf-angel-eyes
drwxr-xr-x   4096      2021-05-06 10:10:57      stratum-bf-tofino-model
chassis-ms :
ifmgr-ms :
lacp-ms :
lldp-ms :
mgmt-cli :
mgmtsvc-apigw :
mgmt-snmp-agent :
coredumps :
```

The following examples list details for the specified service or file type.

```
device# dir flash://chassis-ms chassis-ms : device# device# dir flash://config-file config-file : device#
device# dir flash://coredumps coredumps : device#
```

## egress

Creates or deletes an egress.

### Syntax

```
egress name
no egress name
```

### Parameters

*name*

Specifies the name of the configured egress object.

Supports 1-32 characters. Characters allowed are alpha-numeric, underscore and dot.  
Underscore is not allowed as the first character.

### Modes

Config mode

Egress config mode

### Usage Guidelines

A valid egress name must be provided. The reserved name, `a11` cannot be used for configuration.

An egress name must be unique. An error is thrown if you try to use the same name for an egress as for an egress group.

The following reserved keywords cannot be used as name identifiers: `a11`, `ingress-group`, `egress`, `egress-group`, `match`, `list`, `access-list`, `route-map`, and `listener-policy`.

The `no egress name` command clears all objects of the given type.

**Table 21: Error messages**

Message	Reason
Error: egress name identifier must start with an alphabetic character or an underscore.	Egress name begins with non-alphabetic character or does not begin with an underscore.
Error: egress name identifier cannot exceed 64 characters	Egress name is longer than 64 characters.
Error: egress name identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens or dots.	Egress name contains invalid characters.

**Table 21: Error messages (continued)**

Message	Reason
Error: egress name identifier must not be reserved keyword "egress".	Egress name includes the reserved word <b>egress</b>
Error: Egress and egress-group cannot use same name. An egress-group with same name already exists	Egress name cannot be same as egress-group.

## Examples

The following example creates egress-123.

```
device(config)# egress egress-100
device(config-egress)# precedence 10 interface ethernet 1/10
device(config-egress)# set encapsulation-100
device(config-egress)# set listener-policy lp-100

device# show running-config egress
Egress egress-100
Precedence 10 interface ethernet 1/10
encap-100
lp-100
```

## **egress-group**

Creates or removes egress-group and defines how traffic is forwarded to end devices.

### Syntax

```
egress-group name
no egress-group name
```

### Parameters

*name*

Specifies the name of the configured egress group. Supports 1-32 characters.

Characters allowed are alpha-numeric, underscore, and dot. Underscore is not allowed as the first character.

### Modes

Config mode

### Usage Guidelines

A maximum of 64 egress objects can be added to an egress-group.

A valid <egress-name> must be provided. `all` is a reserved name and cannot be used for configuration.

An egress-group name must be unique. An error is thrown if you try to use the same name for an egress group as for an egress.

The following reserved keywords cannot be used as name identifiers: `all`, `ingress-group`, `egress`, `egress-group`, `match`, `list`, `access-list`, `route-map`, and `listener-policy`.

The **no egress-group name** command clears all objects of the specified egress group.

**Table 22: Error messages**

Message	Reason
Error: egress-group name identifier must start with an alphabetic character or an underscore.	Egress-group name begins with non-alphabetic character or does not begin with an underscore.
Error: egress-group name identifier cannot exceed 64 characters	Egress-group name is longer than 64 characters.
Error: egress-group name identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens or dots.	Egress-group name contains invalid characters.

**Table 22: Error messages (continued)**

Message	Reason
Error: egress-group name identifier must not be reserved keyword "egress-group".	Egress-group name includes the reserved word <b>egress-group</b>
Error: egress Group is bounded to route map.	Deletion of an egress-group is not allowed if it is mapped in a route-map.
Error: Egress-group and egress cannot use same name. An egress object with same name already exists	Egress-group name cannot be same as egress.

## Examples

The following example configures the egress group.

```
device# configure terminal
device(config)# egress-group egg123
(config-egress-group)# set egress egress-one
(config-egress-group)#

device# show running-config egress-group
egress-group egg123
egress-one
```

## encap

---

Configures encapsulation parameters for the outgoing packets.

### Syntax

```
encap name  
no encap name
```

### Parameters

**encap name**

Specifies the name of the encap object. The name is restricted to 32 characters. Characters allowed are alpha-numeric, underscore, and dot. Underscore is not allowed as the first character.

The encap name "all" is reserved and cannot be used.

### Modes

Config mode

Encap config mode

### Usage Guidelines

Validations for the command are as follows:

- If the same command is executed more than once, the second and subsequent executions are ignored and no error is reported.
- If the [no] form of the command is run without the configuration, the command is ignored and no error is reported.
- If the [no] form of the command is executed with the configuration, all sub-mode configurations are removed along with the encap object.
- The following reserved keywords cannot be used as name identifiers: `all`, `ingress-group`, `egress`, `egress-group`, `match`, `list`, `access-list`, `route-map`, and `listener-policy`.

**Table 23: Error messages**

Message	Reason
Error: encap name identifier must start with an alphabetic character or an underscore.	Encap name begins with non-alphabetic character or does not begin with an underscore.
Error: encap name identifier cannot exceed 64 characters	Encap name is longer than 64 characters.

**Table 23: Error messages (continued)**

Message	Reason
Error: encapsulation identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens or dots.	Encap name contains invalid characters.
Error: encapsulation identifier must not be reserved keyword "encap".	Encap name includes the reserved word <b>encap</b> .

## Examples

The following example configures encapsulation parameters for encap-1.

```
device(config)# encapsulation encap-1
device(config-encap-1)#
Show running:
device# show running-configuration
encap encap-1
```

## encap-type

Configures encapsulation type for outgoing packets.

### Syntax

```
encap-type gre  
no encap-type gre
```

### Parameters

**gre**

Sets encapsulation type to GRE.

### Modes

Encap config mode

### Usage Guidelines

Validations for the command are as follows:

- The `encap-type` cannot be modified or deleted when the encapsulation is associated with the egress object.
- If the same command is executed more than once, the second and subsequent executions are ignored and no error is reported.
- If the [no] form of the command is run without the configuration, the command is ignored and no error is reported.

### Examples

The following examples show GRE encapsulation.

```
device# configure terminal  
device(config)# encapsulation encaps-1  
device(config-encap)# encap-type gre  
  
Show running:  
device# show running-config encaps  
encaps encaps-1  
encap-type gre
```

## fec

Configures the FEC mode.

### Syntax

```
fec [ fc-fec | rs-fec | auto-negotiation | disabled ]
```

### Parameters

#### **fc-fec**

Configures FC-FEC in manual mode.

#### **rs-fec**

Configures RS-FEC in manual mode.

#### **auto-negotiation**

Configures FEC auto negotiation.

#### **disabled**

Disable FEC.

### Modes

Interface config mode

### Usage Guidelines

This command is available only to users with admin role.

This command is supported only on ports with 100G or 25G speed.

Interface cannot be a part of the port-channel.

**Table 24: Error messages**

Message	Reason
Error: FEC configuration is not allowed. Disable interface before changing the FEC configuration.	Interface must be disabled (admin shutdown) before changing FEC configuration.
Error: Speed configuration not allowed when FEC is configured	Port speed cannot be changed if FEC is configured

### Examples

The following examples show FEC configuration.

```
device(config)# int e 4/16
device(config-if-eth-4/16)# fec fc-fec
device(config-if-eth-4/16)# fec fc-fec
Error: FEC configuration is not allowed. Disable interface before changing the FEC
```

```
configuration.

device(config)# int e 4/16
device(config-if-eth-4/16)# channel-group 111 mode on
device(config-if-eth-4/16)# fec rs-fec
Error: FEC configuration is not allowed on interface that is part of a port-channel

device(config-if-eth-4/16)# speed 40000
Error: Speed configuration not allowed when FEC is configured
device(config-if-eth-4/16)#

device# show int e 4/16
ethernet 4/16 Admin state DOWN      Operational state DOWN
  Interface index is 268435744 (0x10000120)
    MTU 0 bytes
    Hardware is Ethernet mac address 40:88:2f:c1:02:43
    Current Speed 100G
    FEC Mode: RS-FEC

  Statistics
    Carrier Transitions: 0
      LastClear: 0s
  Input:
    Broadcast Pkts: 0
    Discard Pkts: 0
    Errors Pkts: 0
    FCS Errors: 0
    MCast Pkts: 0
      Octets: 0
    UCast Pkts: 0
    Unknown Protocols: 0
  Out:
    Broadcast Pkts: 0
    Discard Pkts: 0
    Errors Pkts: 0
    MCast Pkts: 0
      Octets: 0
    UCast Pkts: 0
```

## forward-action

Determines actions performed on packet for the current route map or listener-policy.

### Syntax

```
forward-action { permit | deny }
```

### Command Default

Default is **permit**.

### Parameters

#### permit

Modifies outgoing packets according to specified matching actions. Otherwise, it tries to match the condition in the next instance of the same listener-policy. If a match is not found, the packet is forwarded without applying any actions.

#### deny

Skips the matching listener policy instance and drops traffic.

### Modes

Route-map config mode

Listener-policy config mode

### Examples

The following example allows packet forwarding action based on the ACL for the current route map.

```
device# configure terminal
device# config-route-map
device(config-route-map)# forward-action permit
```

The following example allows packet forwarding action based on the ACL for the current listener policy.

```
device# configure terminal
device(config)# listener-policy lp1 <sId>
device(config-listener-policy)# forward-action permit

device show listener-policy rt 45
forward-action permit
```

The following example blocks packet forwarding action and drops packets for the current route map.

```
device# config-route-map
device(config-route-map)# forward-action deny
```

## **hardware**

---

Enters the hardware mode.

### Syntax

**hardware**

### Parameters

**hardware**

Allows hardware configuration.

### Modes

Config mode

### Examples

The following example shows how to enter the hardware mode.

```
device(config)# hardware  
device(config-hardware)#[/pre]
```

## ingress-group

Configures or removes ingress group for classifying the packets received on the interface.

### Syntax

```
ingress-group name
no ingress-group {name | all }
```

### Parameters

*name*

Specifies the name of the ingress group to be used for packets received on the interface.

**all**

Deletes all configured ingress groups. Use of this parameter deletes interface binding also.

### Modes

Config mode

### Usage Guidelines

The no form of the command deletes a specified ingress group or all configured ingress groups.

Removal of an ingress-group fails silently if the group is not present.

**Table 25: Error messages**

Message	Reason
Error: ingress-group name identifier cannot exceed 64 characters	Ingress-group name is longer than 64 characters.
Error: ingress-group name identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens or dots.	Ingress-group name contains invalid characters.
Error: ingress-group name identifier must start with an alphabetic character or an underscore	Ingress-group name begins with non-alphabetic character or does not begin with an underscore.
Error: ingress-group name identifier must not be reserved keyword "ingress-group"	Ingress-group name includes the reserved word ingress-group.

**Table 25: Error messages (continued)**

Message	Reason
Error: Unbind ingress group from ports before deleting ingress group.	Ingress-group cannot be deleted if it is bound to an interface
Error: Unbind route map from ingress group before deleting ingress group.	Ingress-group cannot be deleted if it is bound to a route-map.

## Examples

The following example configures the ingress group and uses the set command to bind route-map rm1 to this ingress group, then verifies the configuration with the show command.

```
device# configure terminal
device(config)# ingress-group group-1
device(config-ingress-group)# set route-map rm1

device# show running-config ingress-group
ingress-group ingress-group-1
  set route-map rm1
```

## interface ethernet

Changes the configuration mode to interface or range of interfaces.

### Syntax

**Interface ethernet IFNAME**

### Parameters

**IFNAME**

Specifies the interface name in slot/port format. Example: 1/1.

### Modes

Config mode

### Usage Guidelines

This command is available only to users with admin role.

### Examples

The following examples change the config mode to interface configuration mode.

```
device# configure terminal
device(config)# interface ethernet 1/10-14
device(config-if-eth 1/10-14)#

device(config)# int e 1/1-16,2/1-16
device(config-if-eth-1/1-16,2/1-16)#

device(config-hardware)# int e 1/2:1-4,2/1-16
device(config-if-eth-1/2:1-4,2/1-16)#

device(config)# int ethernet abcd
Error: IFNAME must be in slot/port format:
Example: 1/1 Range Example: 1/1-3,5,2/7-9

device(config)# int e 1/222
Error: IFNAME must be in slot/port format:
Example: 1/1 Range Example: 1/1-3,5,2/7-9
```

## interface port-channel

Adds or removes a Link Aggregation Group (LAG) or port-channel from the ingress or egress group.

### Syntax

```
interface port-channel channel-number  
no interface port-channel channel-number
```

### Parameters

#### channel-number

Specifies the channel number assigned to the Ether Channel logical interface. The range is 1-255.

### Modes

Config mode

### Usage Guidelines

This command is available only to users with admin role.

The packets are load balanced on member port-channel ports when a port-channel is added as part of the egress-group.

The **no interface port-channel channel-number** command deletes the LAG group.

### Examples

The following example configures the link aggregation group.

```
device# configure terminal  
device(config)# interface port-channel 1  
device(config-if-po-1)# no shutdown  
  
Show running:  
device# show running-configuration  
interface port-channel 1  
  
device(config)# no interface port-channel 1  
Error: first delete member ports from port-channel 1
```

The following example adds a port-channel to the specified ingress-group.

```
device# configure terminal  
device(config)# ingress-group ingress1  
device(config-ingress-group)# interface port-channel 2
```

The following example adds a port-channel to the specified egress-group.

```
device# configure terminal  
device(config)# egress-group egress1  
device(config-egress-group)# interface port-channel 2
```

## ip access-list

Creates an IP access list (ACL). ACLs contain rules that permit or deny traffic based on packet fields belonging to the IPv4 family of protocols.

### Syntax

```
ip access-list name  
no ip access-list name
```

### Parameters

*name*

Specifies the name of the IP access list. Names cannot exceed 64 characters and must start with an alphabetic character or an underscore, followed by alphabetic or numeric characters or dots. Reserved keywords cannot be used, such as `all` or `egress`

### Modes

Config mode

### Usage Guidelines

Command-line mode changes from `(config)` to `(config-ip-acl)` after new IP ACL is created.

The following reserved keywords cannot be used as name identifiers: `all`, `ingress-group`, `egress`, `egress-group`, `match`, `list`, `access-list`, `route-map`, and `listener-policy`.

**Table 26: Error messages**

Message	Reason
Error: ipv4-acl name identifier cannot exceed 64 characters.	ACL name is longer than 64 characters.
Error: ipv4-acl name identifier must start with an alphabetic character or an underscore	ACL name begins with non-alphabetic character or does not begin with an underscore.
Error: ipv4-acl name identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens, or dots.	ACL name contains invalid characters.
Error: ipv4-acl name identifier must not be reserved keyword "access-list".	ACL name includes the reserved word <code>access-list</code>

## Examples

The following example creates an ACL named P4. On successful creation the mode changes to config-ip-acl.

```
device# configure terminal  
device(config)# ip access-list P4  
device(config-ip-acl)#[/pre]
```

The following example deletes the ACL named P4.

```
device# configure terminal  
device(config)# no ip access-list P4
```

## ip address

Configures the IPv4 address for the interfaces.

### Syntax

```
ip address A.B.C.D/M  
ip address dhcp  
no ip address A.B.C.D/M  
no ip address dhcp
```

### Parameters

*A.B.C.D/M*

Specifies the IPv4 unicast address. Only valid IPv4 unicast address is supported.

*dhcp*

Specifies the DHCP IPv4 address.

### Modes

Interface config mode

### Usage Guidelines

This command is available only to users with admin role.

This command is supported on management interfaces.

The **no ip address** removes the IP address configured on the interface.

The **no ip address dhcp** removes the IP address dhcp configured on the interface.

### Examples

The following example configures the ipv4 address.

```
device# configure terminal  
device(config)# interface management 0  
device(config-if-mgmt-0)# ip address 192.168.122.10/24  
  
device# show running interface management 0  
interface management 0  
no ip address dhcp  
ip address 192.168.122.10/24  
shutdown  
  
device(config-if-mgmt-0)# ip address 0.0.0.0/24  
Error: Not a unicast IP address  
device(config-if-mgmt-0)# ip address 255.255.255.255/24  
Error: Not a unicast IP address
```

```
device(config-if-mgmt-0)# ip address 234.0.0.1/24  
Error: Not a unicast IP address
```

The following example configures the DHCP ipv4 address.

```
device# configure terminal  
device(config)# interface management 0  
device(config-if-mgmt-0)# ip address dhcp  
  
device# show running interface management 0  
interface management 0  
ip address dhcp  
shutdown  
  
device(config-if-mgmt-0)# ip address dhcp  
Error: IPv4 Address already configured.
```

## ip dns

Configures DNS IP address.

### Syntax

```
ip dns domain-name NAME  
ip dns name-server [ A.B.C.D | XX:XX::XX ]  
no ip dns domain-name NAME  
no ip dns name-server [ A.B.C.D | XX:XX::XX ]
```

### Parameters

**domain-name** NAME

Specifies the DNS domain name.

**name-server** A.B.C.D | XX:XX::XX

Specifies the IP address (V4/V6) of the DNS name server.

### Modes

Config mode

### Usage Guidelines

This command is available only to users with admin role.

A maximum of 6 DNS domain names is supported.

A maximum of 3 DNS name servers is supported.

The **no ip dns domain-name** command removes the specified DNS domain name.

The **no ip dns name-server** command removes the specified DNS name server.

### Examples

The following example configures IP DNS domain name.

```
device(config)# ip dns domain-name extreme.com  
  
device(config)# ip dns domain-name corp.extreme.com  
  
device(config)# do sh running-config ip dns  
ip dns domain-name corp.extremenetworks.com  
ip dns domain-name extremenetworks.com  
ip dns name-server 10.6.16.32  
ip dns name-server 10.6.24.30  
ip dns name-server 1111:2222::1
```

```
device(config)# ip dns domain-name test7  
Reached max number of domain names (6)
```

The following example configures IP DNS name server.

```
device(config)# ip dns name-server 10.6.16.32  
  
device(config)# ip dns name-server 1111:2222::1  
  
device# sh running-config ip dns  
ip dns name-server 10.6.16.32  
ip dns name-server 1111:2222::1  
  
device(config)# ip dns name-server 0.0.0.0  
Not a unicast IP address  
  
device(config)# ip dns name-server 255.255.255.255  
Not a unicast IP address  
  
device(config)# ip dns name-server ff00::00  
Not a unicast IP address  
  
device(config)# ip dns name-server 4.4.4.4  
Reached max number of name servers(3)
```

## ip gateway

Configures IPv4 gateway for the interfaces.

### Syntax

```
ip gateway A.B.C.D  
no ip gateway A.B.C.D
```

### Parameters

A.B.C.D

Specifies the IPv4 gateway configuration.

### Modes

Interface config mode

### Usage Guidelines

This command is available only to users with admin role.

This command is supported on management interfaces.

Only unicast IP address is supported, multicast IP address is not supported.

The **no ip gateway** command removes the IP gateway configured on the interface.

### Examples

The following example configures ipv4 gateway.

```
device# configure terminal  
device(config)# interface management 0  
device(config-if-mgmt-0)# ip gateway 192.168.122.1  
  
device# show running interface management 0  
interface management 0  
no ip address dhcp  
ip address 192.168.122.10/24  
ip gateway 192.168.122.1  
shutdown  
  
device(config-if-mgmt-0)# ip gateway 0.0.0.0  
Error: Invalid IP Address  
device(config-if-mgmt-0)# ip gateway 255.255.255.255  
Error: Invalid IP Address  
device(config-if-mgmt-0)# ip gateway 234.0.0.1  
Error: Invalid IP Address
```

## ipv6 access-list

Creates an IPv6 access list that contains rules that permit or deny traffic based on packet fields of the IPv6 family of protocols.

### Syntax

```
ipv6 access-list name
no ipv6 access-list name
```

### Parameters

*name*

Specifies the name of the IPv6 access list. Names cannot exceed 64 characters and must start with an alphabetic character or an underscore, followed by alphabetic or numeric characters or dots. Reserved keywords cannot be used, such as `all` or `egress`.

### Modes

Config mode

### Usage Guidelines

On successful completion CLI mode changes from `config` to `ipv6-acl`.

The following reserved keywords cannot be used as name identifiers: `all`, `ingress-group`, `egress`, `egress-group`, `match`, `list`, `access-list`, `route-map`, and `listener-policy`.

**Table 27: Error messages**

Message	Reason
Error: ipv6-acl name identifier cannot exceed 64 characters.	ACL name is longer than 64 characters.
Error: ipv6-acl name identifier must start with an alphabetic character or an underscore	ACL name begins with non-alphabetic character or does not begin with an underscore.
Error: ipv6-acl name identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens, or dots.	ACL name contains invalid characters.
Error: ipv6-acl name identifier must not be reserved keyword "access-list".	ACL name includes the reserved word <code>access-list</code>

## Examples

The following example creates an IPv6 access list, P6.

```
device# configure terminal
device(config)#ipv6 access-list P6
device(config-ipv6-acl) #
```

## ipv6 address

Configures the IPv6 address for the interfaces..

### Syntax

```
 ipv6 address A:B::C:D/M  
 no ipv6 address A:B::C:D/M  
 ipv6 address dhcp  
 no ipv6 address dhcp
```

### Parameters

*A:B::C:D/M*

Specifies the IPv6 address configuration.

*dhcp*

Specifies the DHCP IPv6 address.

### Modes

Interface config mode

### Usage Guidelines

This command is available only to users with admin role.

This command is supported on management interfaces.

Only unicast IP address is supported, multicast IP address is not supported.

The command `no ipv6 address` removes the IPv6 address configured on the interface.

The command `no ipv6 address dhcp` removes the DHCP IPv6 address configured on the interface.

### Examples

The following example configures the IPv6 address.

```
device# configure terminal  
device(config)# interface management 0  
device(config-if-mgmt-0)# ipv6 address 2001:db8:fe::100/120  
  
device# show running interface management 0  
interface management 0  
  ipv6 address 2001:db8:fe::100/120  
  shutdown  
  
device(config-if-mgmt-0)# ipv6 address ff00:0:0:0:0:0:0:0/8  
Error: Not a unicast IP address
```

The following example configures the DHCP IPv6 address.

```
device# configure terminal
device(config)# interface management 0
device(config-if-mgmt-0)# ipv6 address dhcp

device# show running interface management 0
interface management 0
  ipv6 address dhcp
  shutdown

device(config-if-mgmt-0)# ipv6 address dhcp
Error: IPv6 Address already configured.
```

## ipv6 gateway

Configures IPv6 gateway for the interfaces.

### Syntax

```
ipv6 gateway A::B::C:D  
no ipv6 gateway A::B::C:D
```

### Parameters

A::B::C:D

Specifies the ipv6 gateway configuration.

### Modes

Interface config mode

### Usage Guidelines

This command is available only to users with admin role.

This command is supported on management interfaces.

Only unicast IP address is supported, multicast IP address is not supported.

The **no ipv6 gateway** command removes the IP gateway configured on the interface.

**Table 28: Error messages**

Invalid IP Address	Ill-formed or invalid IPv6 address.
--------------------	-------------------------------------

### Examples

The following example configures ipv6 gateway.

```
device# configure terminal  
device(config)# interface management 0  
device(config-if-mgmt-0)# ipv6 gateway 2001:db8:fe::2  
  
device# show running interface management 0  
interface management 0  
ipv6 gateway 2001:db8:fe::2  
shutdown  
  
device(config-if-mgmt-0)# ipv6 gateway ff00:0:0:0:0:0:0:0  
Error: Invalid IP Address
```

## link-fault-signaling

Enables or disables link-fault-signaling.

### Syntax

```
link-fault-signaling  
no link-fault-signaling
```

### Modes

Interface config mode

### Usage Guidelines

This command is available only to users with admin role.

This command is not allowed on management interface.

The **no link-fault-signaling** command disables link-fault-signaling.

### Examples

The following example enables link-fault-signaling.

```
device(config-if-eth-1/1)# link-fault-signaling
```

The following example disables link-fault-signaling.

```
device(config-if-eth-1/1)# no link-fault-signaling
```

## **listener-policy**

Creates or removes a listener policy.

### Syntax

```
listener-policy { name sequence-id }

no listener-policy { [ name sequence-id ] | sequence-id | all }
```

### Parameters

#### *name*

Specifies the listener policy name. Supports 1-64 characters. Characters allowed are alpha-numeric, underscore, and dot.

Underscore is not allowed as the first character.

#### *sequence-id*

Specifies the sequence id. The range is 1-65535.

#### **all**

Specifies that all listener policies are to be deleted with the **no** form of the command.

### Modes

Config mode

### Usage Guidelines

Valid listener policy name must be provided.

The following reserved keywords cannot be used as name identifiers: **all**, **ingress-group**, **egress**, **egress-group**, **match**, **list**, **access-list**, **route-map**, and **listener-policy**.

Attempts to remove any listener policy that is not configured are ignored.

**Table 29: Error messages**

Message	Reason
Error: listener-policy name identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens or dots	Name begins with non-alphabetic character, contains invalid characters, or does not begin with an underscore.
Error: listener-policy name identifier must start with an alphabetic character or an underscore	Name begins with non-alphabetic character or does not begin with an underscore.

**Table 29: Error messages (continued)**

Message	Reason
Error: listener-policy name identifier cannot exceed 64 characters	Name is longer than 64 characters.
Error: listener-policy name identifier must not be reserved keyword	Name includes the reserved word indicated.

## Examples

The following examples show how to configure a listener policy.

```
device# configure terminal
device(config)# listener-policy lp1 4 13

device(config)# listener-policy lp2 5

device(config)# no listener-policy lp1 4 13
device(config)# no listener-policy lp2 5
```

The following example removes the configured listener policy.

```
device# configure terminal
device(config)# no listener-policy lp1 4 243
```

The following examples show error messages for the listener policy command.

```
device(config)# listener-policy #abc1 100
Error: listener-policy name identifier must start with an alphabetic character or an underscore

device(config-listener-policy)# listener-policy
abcdefghijklmnopqrstuvwxyz_abcdefghijklmnopqrstuvwxyz_abcdefghijklmnopqrstuvwxyz_
Error: listener-policy name identifier cannot exceed 64 characters

device(config-listener-policy)# listener-policy egress 10 23
Error: listener-policy name identifier must not be reserved keyword "egress"
```

## load-balance

Enables or disables masking of tunnel ID while computing hashing for per LAG basis.

### Syntax

```
load-balance [ src-dst-ip-l4port-tid | src-dst-ip-l4port ]  
no load-balance
```

### Parameters

#### **src-dst-ip-l4port-tid**

Specifies source IP, destination IP, I4 port, protocol, and specific GTP tunnel ID-based load-balancing.

#### **src-dst-ip-l4port**

Specifies source IP, destination IP, I4port, and protocol based load balancing (default) method.

### Modes

Port-channel config mode

### Usage Guidelines

This command is available only to users with admin role.

The port-channel must be created first.

The **no load-balance** command sets the default value to LAG hash.

### Examples

The following example enables the **src-dst-ip-l4port-tid** load balancing method.

```
device# configure terminal  
device#(config)# interface port-channel 1  
device(config-if-po-1)# load-balance src-dst-ip-l4port-tid  
  
Show running:  
device# show running-configuration  
interface port-channel 1  
load-balance method src-dst-ip-l4port-tid  
  
device(config-if-po-1)# load-balance src-dst-ip-l4port-t  
% Unknown command.
```

## mac access-list

Creates a MAC access control list that contains rules that permit or deny traffic based on packet fields of the L2 OSI layer.

### Syntax

```
mac access-list name  
no mac access-list name
```

### Parameters

*name*

Specifies the name of the MAC ACL. Names cannot exceed 64 characters and must start with an alphabetic character or an underscore, followed by alphabetic or numeric characters or dots. Reserved keywords cannot be used, such as `all` or `egress`.

### Modes

Config mode

**Table 30: Error messages**

Message	Reason
Error: 12-acl name identifier cannot exceed 64 characters.	Name is longer than 64 characters.
Error: 12-acl name identifier must start with an alphabetic character or an underscore.	Name begins with non-alphabetic character or does not begin with an underscore.
Error: 12-acl name identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens, or dots.	Name contains invalid characters.
Error: 12-acl name identifier must not be reserved keyword	Name includes the reserved word identified.
Error: keypath contains key value with unsupported character (@, \$, #, '[, ]').	Name contains invalid characters.

### Usage Guidelines

Command-line mode changes from `config` to `config-mac-acl` after new MAC ACL is created.

## Examples

The following example creates a MAC ACL named L2 and on successful creation, the mode changes to config-mac acl.

```
device# configure terminal  
device(config)# mac access-list L2  
device(config-mac-acl)#[/pre]
```

The following example deletes the MAC ACL named L2.

```
device# configure terminal  
device(config)# no mac access-list L2
```

## match ip access-list

Configures or deletes IPv4 access list (ACL) match criteria assigned to a route-map or listener-policy instance.

### Syntax

```
match ip access-list name
no match ip access-list name
```

### Parameters

*name*

Specifies the name of the IPv4 ACL to be matched and assigned to the current route map.

### Modes

Route-map config mode

Listener-policy config mode

### Usage Guidelines

If match criteria succeed, the next action is decided by the permit | deny clause of route map:

- If permitted, packet-forwarding behavior is based on the match and set actions.
- If denied, packets are dropped.

If match criteria fail, this command is not applied and packets are evaluated by other route-map clauses.

### Examples

The following example configures IPv4 ACL matching criteria for `ipv4-1` for the route-map instance.

```
device(conf-route-map)# match ip access-list ipv4-1
```

The following example deletes the IPv4 ACL named `ipv4-1` from the current route map.

```
device(conf-route-map)# no match ip access-list ipv4-1
```

## **match ipv6 access-list**

Configures or deletes IPv6 ACL match criteria assigned to a route-map or listener-policy instance.

### Syntax

```
match ipv6 access-list aclname
no match ipv6 access-list aclname
```

### Parameters

*aclname*

Specifies the name of the IPv6 ACL to be matched and assigned to the current route map.

### Modes

Route-map config mode

Listener-policy config mode

### Usage Guidelines

If match criteria succeed, the next action is decided by the permit | deny clause of route map:

- If permitted, packet-forwarding behavior is based on the match and set actions.
- If denied, packets are dropped.

If match criteria fail, this command is not applied and packets are evaluated by other route-map clauses.

### Examples

The following example configures the IPv6 ACL named *ipv6-1* to be matched for the current route map.

```
device(conf-route-map)# match ip access-list ipv6-1
```

The following example deletes the IPv6 ACL named *ipv6-1* from the current route map.

```
conf-route-map#
(conf-route-map)# no match ip access-list ipv6-1
```

## match mac access-list

Configures or deletes L2/MAC access list (ACL) match criteria for the current route-map or listener-policy instance.

### Syntax

```
match mac access-list aclname  
no match mac access-list aclname
```

### Parameters

*aclname*

Specifies the name of the L2/MAC ACL to be matched and assigned to the current route map.

### Modes

Route-map config mode

Listener-policy config mode

### Usage Guidelines

If match criteria succeed, the next action is decided by the permit | deny clause of route map:

- If permitted, packet-forwarding behavior is based on the match and set actions.
- If denied, packets are dropped.

If match criteria fail, this command is not applied and packets are evaluated by other route-map clauses.

### Examples

The following example configures the L2/MAC ACL named to be matched for the current route map.

```
device(conf-route-map)# match mac access-list mac-1
```

The following example deletes the L2/MAC ACL named from the current route map.

```
device(conf-route-map)# no match mac access-list mac-1
```

## mtu

Configures the global or interface MTU value.

### Syntax

```
mtu value  
no mtu value
```

### Parameters

```
mtu value
```

Specifies MTU value of an interface. Valid range is 1024-9216. Default MTU value is 9216.

### Modes

Interface config mode

### Usage Guidelines

The MTU configured in the specified interface overrides the global MTU.

The **no mtu value** command sets the MTU to the default value, 9216.

This command is available only to users with admin role.

Running this command causes changes that trigger port flap. As a best practice, run this command during a maintenance window to avoid service disruptions.

**Table 31: Error messages**

Error message	Reason
% Unknown command.	Throws an error if MTU value is outside valid range, as shown in the following example: <code>device(config-if-eth-1/1) # mtu 100</code>

### Examples

The following examples show how to configure global and interface MTU value.

```
device# configure terminal  
device(config)# mtu 4000  
  
device# configure terminal  
device(config)# interface ethernet 1/10  
device(config-if-eth 1/10) # mtu 4000  
device(config-if-eth-1/1) # mtu 100  
% Unknown command.  
  
device# show running interface ethernet 1/10  
interface ethernet 1/10
```

```
mtu 4000  
shutdown
```

## **new-scope**

Configures scope shift for the current tunnel of the received packet.

### Syntax

```
new-scope  
no new-scope
```

### Parameters

**new-scope**

Enables scope shift for the route-map.

### Modes

Route-map config mode

### Usage Guidelines

The **no new-scope** command disables scope shift for the route-map.

When **new-scope** is enabled, the packet headers are not decapsulated. The scope of the header is shifted to inner headers in the packet. Further blocks in the packet processing pipeline start using inner headers of the packet.

### Examples

The following example configures scope shift for the route-map.

```
device(conf)# route-map rmap1 10  
  
device(conf-route-map)# new-scope  
device(config-route-map)# do show route-map all  
route-map rmap1 10  
forward-action deny  
decap  
new-scope  
Policy matches: 0 packets, 0 bytes, 0 Packets/sec, 0 Bits/sec  
  
device(config)# route-map rt 1  
device(config-route-map)# decap  
device(config-route-map)# new-scope  
Error: Terminate is enabled on route-map rt, scapeshift can't enable  
  
device(config-route-map)# no new-scope  
Error: scapeshift not configured in this route map rt
```

## ntp

Configures NTP services for IPv4.

### Syntax

```
ntp enable  
ntp server ipv4 address  
ntp peer ipv4 address  
no ntp enable  
no ntp server ipv4 address  
no ntp peer ipv4 address
```

### Command Default

NTP is disabled by default.

### Parameters

#### **enable**

Enables NTP feature.

#### **server**

Configures NTP server ipv4 address.

#### **peer**

Configures NTP peer ipv4 address.

### Modes

Config mode

### Usage Guidelines

Only IPv4 addresses are supported.

This command is available only to users with admin role.

NTP is disabled by default. You must enable it explicitly when configuring NTP servers and peers

The **no ntp enable** command disables NTP feature.

The **no ntp server ipv4 address** command deletes NTP server ipv4 address.

The **no ntp peer ipv4 address** command disables NTP peer ipv4 address.

**Table 32: Error messages**

Error message	Reason
Invalid address	Throws an error if address is poorly formed, outside valid range, has been removed, or is not configured.

## Examples

The following example disables NTP.

```
device# configure terminal  
device(config)# no ntp enable
```

The following example deletes the NTP server IP from the system.

```
device# configure terminal  
device(config)# no ntp server 1.1.1.1  
  
device(config)# ntp server 1.1.1.1  
Error: Invalid address
```

The following example deletes the NTP peer IP from the system.

```
device# configure terminal  
device(config)# no ntp peer 1.1.1.1  
  
device(config)# ntp peer 1.1.1.1  
Error: Invalid address
```

## ping

Sends ICMP echo requests to the specified IP or host.

### Syntax

```
ping [ IPADDR | NAME ] [ count 1-1000 | datagram-size 18-9000 | quiet |  
      timeout 1-60 ]
```

### Parameters

#### **IPADDR**

Specifies the destination IPV4/IPV6 address.

#### **NAME**

Specifies the destination host name.

#### **count** 1-1000

Specifies the number of attempts to ping the host. The range is 1-1000, default is 5.

#### **datagram-size** 18-9000

Specifies the size of ping frame. The range is 18-9000, default is 64 bytes.

#### **quiet**

Specifies that there is no output except the start-up and finishing line.

#### **timeout**

Specifies the timeout value in seconds. The range is 1-60, default is 5 seconds.

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

**Table 33: Error messages**

Error	Reason
Broadcast address not allowed	Address entered in multicast format; for example, 255.255.255.255
Host resolution failed	Host address entered incorrectly or host does not exist.

### Examples

The following example shows how to use the ping command.

```
device# ping 10.20.73.129 count 3 datagram-size 1000 timeout 2  
PING 10.20.73.129 (10.20.73.129) 1000(1028) bytes of data.
```

```
1008 bytes from 10.20.73.129: icmp_seq=1 ttl=63 time=1.91 ms
1008 bytes from 10.20.73.129: icmp_seq=2 ttl=63 time=0.684 ms
1008 bytes from 10.20.73.129: icmp_seq=3 ttl=63 time=0.592 ms

--- 10.20.73.129 ping statistics ---
3 packets transmitted, 3 received, 0% packet loss, time 2013ms
rtt min/avg/max/mdev = 0.592/1.064/1.916/0.603 ms

device# ping www.google.com
PING www.google.com (172.217.165.132) 64(92) bytes of data.
72 bytes from 172.217.165.132 (172.217.165.132): icmp_seq=1 ttl=107 time=66.4 ms
72 bytes from 172.217.165.132 (172.217.165.132): icmp_seq=2 ttl=107 time=66.4 ms
72 bytes from 172.217.165.132 (172.217.165.132): icmp_seq=3 ttl=107 time=66.4 ms
72 bytes from 172.217.165.132 (172.217.165.132): icmp_seq=4 ttl=107 time=66.4 ms
72 bytes from 172.217.165.132 (172.217.165.132): icmp_seq=5 ttl=107 time=66.5 ms

--- www.google.com ping statistics ---
5 packets transmitted, 5 received, 0% packet loss, time 4005ms
rtt min/avg/max/mdev = 66.469/66.488/66.502/0.010 ms

device# ping 255.255.255.255
Error: Broadcast address not allowed

device# ping abcd
Error: Host resolution failed
```

## precedence

Configures or deletes interface from the egress object at the precedence.

### Syntax

```
precedence num |interface ethernet if-name  
no precedence num |interface ethernet if-name
```

### Parameters

**precedence** *num*

Specifies the precedence value. Valid range is 1-65535.

**interface ethernet** *if-name*

Specifies the interface name.

### Modes

Egress config mode

### Usage Guidelines

A valid interface for the platform must be provided.

The **no precedence <num> interface ethernet <if-name>** command deletes interface from the egress instance.

### Examples

The following example configures the egress object, egress-123 at precedence 10 and 20.

```
# conf (conf)# egress egress-123  
(conf-egress)# precedence 10 interface ethernet 2/10  
  
Show running:  
Egress egress-123  
Precedence 10 interface ethernet 2/10
```

## **route-map**

Configures a route-map instance that dictates the packet forwarding behavior based on the match and set actions for ingress ACLs.

### Syntax

```
route-map name sequence_number
no route-map { name sequence_number } | all
```

### Parameters

#### *name*

Specifies the name of the route-map to be used for packet forwarding as part of this ingress group. Range is 1-64.

Name identifier must start with an alphabetic character or an underscore followed by an arbitrary sequence of alphabetic or numeric characters, underscores, hyphens, or dots.

#### *sequence\_number*

Assigns sequence number to the route-map instance. This defines the order of route-map instances within a route-map. Range is 1-65535.

#### **all**

Specifies all route-maps when using the no form of this command.

### Modes

Config mode

### Usage Guidelines

Two route-map instances cannot have the same sequence-number.

Any attempts to remove an unconfigured route-map are ignored.

The **no route-map name** command deletes a route-map and **no route-map [name] [sequence-number]** command deletes the route-map with the specified sequence number.

**Table 34: Error messages**

Message	Reason
Error: route-map name identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens or dots	Name begins with non-alphabetic character, contains invalid characters, or does not begin with an underscore.
Error: route-map name identifier must start with an alphabetic character or an underscore	Name begins with non-alphabetic character or does not begin with an underscore.

**Table 34: Error messages (continued)**

Message	Reason
Error: route-map name identifier cannot exceed 64 characters	Name is longer than 64 characters.
Error: route-map name identifier must not be reserved keyword	Name includes the reserved word indicated.

The following examples show how to configure a route-map named rmap1 with the sequence number 10.

```
device# configure terminal
device(config)# route-map rmap1 10
device(config-route-map)# match mac access-list mac_acl1
device(config-route-map)# match ip access-list ipv4_acl1
device(config-route-map)# match ipv6 access-list ipv6_acl1
device(config-route-map)# set egress-group eg200

device# show route-map all
route-map rml 1
forward-action permit
match ip access-list acl4 (active)
match mac access-list acl2 (pending)
egress-group egl
Policy matches: 0 packets, 0 bytes, 0 Packet/sec, 0 Bits/sec
```

The following examples delete a route map and a route map with a sequence number.

```
device# configure terminal
device(config)# no route-map rml

device(config)# no route-map rmap1 10
```

The following examples show error messages for the route-map command.

```
device# configure terminal
device(config)# route-map ab#c1 100
Error: keypath:/routemaps/routemap[name=ab#c1]/name contains one or more unsupported character ('@', '$', '#', '[', ']') for key:name

device(config)# route-map ^abc1 100
Error: route-map name identifier must be an arbitrary sequence of alphabets, numerals,
underscores, hyphens or dots.

device(config)# route-map
abcabcabcabcabcabcabcabcabcabcabcabcabcabcabcabcabcabcabcabcabcabcabcabcabc 100
Error: route-map name identifier cannot exceed 64 characters

device(config-listener-policy)# route-map egress 10
Error: route-map name identifier must not be reserved keyword "egress"

device(config)# route-map a]dff 20
Error: invalid keypath:/name error:path /name, contains invalid token name

device(config)# route-map a^abc1 100
Error: route-map name identifier must be an arbitrary sequence of alphabets, numerals,
underscores, hyphens or dots.
```

## seq (ip access-list rules)

Inserts filtering rules in IP access lists (ACLs).

### Syntax

```
seq id [permit |deny] { { tcp |udp | icmp |igmp | ip | esp | number} | { vxlan |nvgre | gre | ipip | gtpc | gtpu } {src-ip | src-mask | dst-ip | dst-mask} {sport} {dport} {sport-end} {dport-end} {dscp} {length | length-end} {push |sync | ack |fin |urg |cwr | ece} {reset} {morefragment | dontfragment} {vlan} {count} {log} }
```

**no** **seq** *id*

### Parameters

**seq** *id*

Specifies the sequence ID for the rule. This parameter is optional. Valid values range from 1 through 65535 and value must be unique within the selected IP ACL. If the value is not specified, a non-assigned value starting from 10 with an increment of 10 is assigned.

**permit** |**deny**

Specifies the Forwarding Action for the matching traffic.

**tcp** |**udp** | **icmp** |**igmp** | **ip** | **esp** | *number*

Specifies the protocol type of the traffic for non-tunneled packets.

*number*

Specifies Custom Protocol Number to be matched. Valid values range from 1 through 254.

**push** |**sync** | **ack** |**fin** |**urg** |**cwr** | **ece**

Specifies the TCP protocol configuration. (Valid for only the TCP protocol.)

**vxlan** |**nvgre** | **gre** | **ipip** | **gtpc** | **gtpu**

Specifies the tunnel types supported for tunneled traffic. For tunnel types IP address and masks are mapped to the outer header. Valid values range from 1 through 4294967295.

- vxlan/nvgre tunnels allow vnid/vsid values in range of 1-16777215.
- gtpu/gtpc tunnels allow tunnel id values in range of 1-4294967295.
- 

*src-ip* | *src-mask* | *dst-ip* | *dst-mask*

Specifies the source IP, source mask, destination IP, and destination mask of the traffic. These IP address and mask are displayed in dot separated decimal format.

**length** |**length-end**

Specifies the length of the IPv4 packets. The valid value range is 64 to 9000. To match based on length range, length and length-end parameters (valid range is 65 to 9000) are provided. When specifying range, length value is mandatory; specifying length-end alone is not valid. Length must be less than the length-end.

**sport** | **sport-end**

Specifies the sport source port value. The valid value range is 1 through 65535. To match based on sport range, sport and sport-end parameters are provided. When specifying range, sport value is mandatory; specifying sport-end alone is not valid. The source port value must be less than the sport-end.

**dport | dport-end**

Specifies the destination port. Valid value range is 1 through 65535. To match based on dport range, dport and dport-end parameters are provided. When specifying range, dport value is mandatory; specifying dport-end alone is not valid. The destination port value must be less than dport-end.

**count**

Enables counters for the rule.

**log**

Enables syslog for the rule.

**dscp**

Specifies the type of service field for IPv4 protocol. The valid value range is 1 to 63.

**vlan vlan-id**

Specifies the vlan-id. The valid value range is 0 to 4095.

**morefragment | dontfragment**

Specifies the fragment parameters.

## Modes

IP ACL config mode

## Usage Guidelines

GRE tunnel-type:

- Version-1 packets are not filtered with this setting.
- Version-0 packets are filtered successfully with this setting when Checksum, Key, or Sequence number are not configured.

GTPU tunnel type:

- Packets with outer IP and UDP port settings (ACL configured with *ip address* and sport/dport combination) are not forwarded to the egress.

The IPv4 Address and mask must be configured in dotted decimal notation.

The following specified length limitation applies to the `sport-end` and `dport-end` range length configuration.



### Important

If you configure an IPv4 or IPv6 ACL rule to match a specific IP length and also configure an IPv4 or IPv6 ACL with an overlapping IP length range, then the rule with specific length will not work.

**IPn** rules configured with specified lengths that overlap **IPn** length-range configurations fail silently.

Example 1. The IPv6 ACL rule in this example will not work because the rule with a specific length (**bold font**) overlaps the configured IP ACL range from 100 through 200. The rule with the overlapping specified length fails silently.

```
ip access-list v4acl
  seq 10 permit ip any 1.0.0.1 255.255.255.0 length 100 length-end 200

ipv6 access-list v6acl
seq 10 permit ipv6 any bbbb::bbbb ffff::ffff length 150
```

Example 2. The IPv6 ACL rule (**bold font**) in this example will not work because the rule with a specific length overlaps the range from 100 through 200. The rule with the overlapping specified length fails silently.

```
ipv6 access-list v6acl
  seq 10 permit ipv6 any aaaa::aaaa ffff::ffff length 100 length-end 200
seq 20 permit ipv6 any bbbb::bbbb ffff::ffff length 150
```

Example 3. This IPv6 ACL rule example will not work because in this configuration, because the rule with a specific length (**bold font**) overlaps the range from 100 through 200. The rule with the overlapping specified length fails silently.

```
ipv6 access-list v6acl-1
  seq 10 permit ipv6 any aaaa::aaaa ffff::ffff length 100 length-end 200

ipv6 access-list v6acl-2
seq 10 permit ipv6 any bbbb::bbbb ffff::ffff length 150
```

**Table 35: Error messages**

Message	Reason
Error: seqid 10 already exist ip1.	Sequence id is repeated within IP ACL named ip1.
Error: source ip address must be in dotted-decimal format, each decimal number to be in range of 0-255. Example: 196.168.0.1	Incorrect IPv4 address format for values src/dest address, src/dest mask values.
% Value '0' not in range <1-65535>.	Example: Sequence-id range error.
% Value 'ip' not in range <1-254>	Example: IP address outside valid range error.
% Value '4294967296' not in range <1-4294967295>.	Example: Tunnel-id range error.
% Value '65536' not in range <1-65535>.	Example: Source port range error.
% Value '65536' not in range <1-65535>.	Example: Destination port range error.

**Table 35: Error messages (continued)**

Message	Reason
% Value '63' not in range <64-9000>.	Example: Packet length error.
% Value '65' not in range <0-63>.	Example: DSCP range error.
% Value '4096' not in range <0-4095>.	Example: VLAN range error.

## Examples

The following example configures seq 1 for IP access list P4.

```
device# configure terminal
device(config)#ip access-list P4
device(config-ip-acl)# seq 1 permit udp 1.1.1.1 255.0.0.0 2.2.2.2 255.0.0.0
dontfragmentdevice(config-ip-acl)#

```

The following example deletes seq 1.

```
device(config-mac-acl)# no seq 1

```

## seq (ipv6 access-list rules)

Inserts filtering rules in IPv6 access lists (ACLs).

### Syntax

```
seq id [ permit | deny ] {{ tcp | udp | icmpv6 | igmpv6 | ipv6 | esp |  

    number } | {{vxlan | nvgre | gre | ipip | gtpc | gtpu } } { src-ip |  

    src-mask | dst-ip | dst-mask } {sport } {dport } {sport-end } {dport-  

end} { dscp } {length |length-end } {push } {sync } {ack } {cwr }  

    {ece } {reset } {fin } {urg } {vlan vlan-id } {count } {log } }
```

**no** **seq** *id*

### Parameters

#### **seq** *id*

Specifies the sequence ID for the rule. This parameter is mandatory. Valid values range from 1 through 65535 and value must be unique within the selected IP ACL. If the value is not specified, a non-assigned value starting from 10 with an increment of 10 is assigned.

#### **permit** | **deny**

Specifies the Forwarding Action for the matching traffic.

#### **tcp** | **udp** | **icmpv6** | **igmpv6** | **ipv6** | **esp** | *number*

Specifies the protocol type of the traffic for non-tunneled packets.

#### *number*

Valid values range from 1 through 254.

#### **vxlan** | **nvgre** | **gre** | **ipip** | **gtpc** | **gtpu**

Specifies the tunnel types supported for tunneled traffic. For tunnel types IP address and masks are mapped to the outer header. VNI and TEID are configured for the VXLAN and GTPU tunnels, respectively. Valid values range from 1 through 4294967295.

- vxlan/nvgre tunnels allow vnid/vsid values in range of 1-16777215.
- gtpu/gtpc tunnels allow tunnel id values in range of 1-4294967295.

#### **src-ip** | **src-mask** | **dst-ip** | **dst-mask**

Specifies the source IP, source mask, destination IP, and destination mask of the traffic. IP address and mask are displayed in hexadecimal format.

#### **sport** | **sport-end**

Specifies the sport source port value. The valid value range is 1 through 65535. To match based on sport range, sport and sport-end parameters are provided. When specifying range, sport value is mandatory; specifying sport-end alone is not valid. The source port value must be less than the sport-end.

#### **dport** | **dport-end**

Specifies the destination port. Valid value range is 1 to 65535. To match based on dport range, dport and dport-end parameters are provided. The destination port value must be less than dport-end.

**dscp**

Specifies the type of service field for IPv6 protocol. The valid value range is 1 to 63.

**length | length-end**

Specifies the length of the IPv6 packets. The valid value range is 64 to 9000. To match based on length range, length and length-end parameters (valid range is 65 to 9000) are provided. When specifying range, length value is mandatory; specifying length-end alone is not valid. Length must be less than the length-end. Length must be less than the length-end.

**push | sync | ack | cwr | ece | reset | fin | urg**

Specifies the TCP protocol configuration. (Valid for only the TCP protocol.)

**vlan vlan-id**

Specifies the vlan-id. The valid value range is 0 to 4095.

**morefragment | dontfragment**

Specifies the fragment parameters.

**count**

Enables counters for the rule.

**log**

Enables syslog for the rule.

## Modes

IP ACL config mode

## Usage Guidelines

GRE tunnel-type:

- Version-1 packets are not filtered with this setting.
- Version-0 packets are filtered successfully with this setting.

The following specified length limitation applies to the `sport-end` and `dport-end` range length configuration.



### Important

If you configure an IPv4 or IPv6 ACL rule to match a specific IP length and also configure an IPv4 or IPv6 ACL with an overlapping IP length range, then the rule with specific length will not work.

**IPvn** rules configured with specified lengths that overlap **IPvn** length-range configurations fail silently.

Example 1. The IPv6 ACL rule in this example will not work because the rule with a specific length (**bold font**) overlaps the configured IP ACL range from 100 through 200. The rule with the overlapping specified length fails silently.

```
ip access-list v4acl
  seq 10 permit ip any 1.0.0.1 255.255.255.0 length 100 length-end 200

ipv6 access-list v6acl
seq 10 permit ipv6 any bbbb::bbbb ffff::ffff length 150
```

Example 2. The IPv6 ACL rule (**bold font**) in this example will not work because the rule with a specific length overlaps the range from 100 through 200. The rule with the overlapping specified length fails silently.

```
ipv6 access-list v6acl
  seq 10 permit ipv6 any aaaa::aaaa ffff::ffff length 100 length-end 200
seq 20 permit ipv6 any bbbb::bbbb ffff::ffff length 150
```

Example 3. This IPv6 ACL rule example will not work because in this configuration, because the rule with a specific length (**bold font**) overlaps the range from 100 through 200. The rule with the overlapping specified length fails silently.

```
ipv6 access-list v6acl-1
  seq 10 permit ipv6 any aaaa::aaaa ffff::ffff length 100 length-end 200

ipv6 access-list v6acl-2
seq 10 permit ipv6 any bbbb::bbbb ffff::ffff length 150
```

**Table 36: Error messages**

Message	Reason
Error: seqid 10 already exist ip1.	Sequence ID is repeated within IP ACL named ip1.
Error: valid range for VNID is 1-16777215.	VNID range exceeds for VxLAN protocol.
Error: valid range for VSID is 1-16777215.	VSID range exceeds for NVGRE protocol.
Error: source ip address must be in X:X:X:X:X:X:X or X:X::X:X format. Each X can be up to 4 hexa-decimal digits. Example: 2001:0:0:0:0:0:1 or 2001::1	IPv6 format must be used..
% Value '65536' not in range <1-65535>.	Example: Sequence-id range error.
% Value '255' not in range <0-254>.	Example: Custom Protocol Number range error.

**Table 36: Error messages (continued)**

Message	Reason
% Value '4294967296' not in range <1-4294967295>.	Example: Tunnel-id range error (ngvre, gtpu, vxlan).
% Value '65536' not in range <1-65535>.	Example: Source port range error.
% Value '9001' not in range <64-9000>.	Example: Length errors.

## Examples

The following example configures IPv6 ACL, P6 and verification with the `show running-config` command.

```
device# configure terminal
device(config)#ipv6 access-list P6
device(config-ipv6-acl)# seq 1 permit 2000::1 FFFF::1 any any count log
device(config-ipv6-acl)#

device# show running-config access-list
ipv6 access-list ip6-acl
    seq 10 permit ipv6 2001::1 2001::0 2002::2 2002::0
```

**seq (mac access-list rules)**

Inserts filtering rules in Layer 2 (MAC) access control lists to permit or deny traffic based on matching Layer 2 protocols fields.

**Syntax**

```
seq id [ permit | deny ] {vxlan | gre | nvgre | gtpu | ipip} { src-mac | src-mask | dst-mac | dst-mask } { vlan | etype | pcp | count | log }
```

no **seq** *id*

**Parameters****seq** *id*

Specifies the sequence ID for the rule. This parameter is mandatory. Valid values range from 1 through 65535. If the value is not specified, a non-assigned value starting from 10 with an increment of 10 is assigned.

**permit** | **deny**

Specifies the Forwarding Action for the matching traffic.

**vxlan** | **gre** | **nvgre** | **gtpu** | **ipip**

Specifies the optional parameters provided to support different tunnel types. For **vxlan** or **gtpu** tunnel types, VNI or TEID can be configured. The tunnel-id parameter can be supplied for only vxlan, gtpu, gtpc protocols and there is no CLI token for this parameter.

- Valid range for vxlan : 1-16777215
- Valid range for gtpu: 1-4294967295
- Valid range for gtpc: 1-429496729

**src-mac**

Specifies the source mac address. There is no explicit keyword. MAC addresses are represented by colon-separated one-byte hexa-decimal format. Zero padding must be used to make one-byte data into 2-digit value. For example, mac address 2:2:2:2:2:2 should be supplied as 02:02:02:02:02:02.

**src-mask**

Specifies the mask for the configured **src-mac**. To opt out of **src-mask**, use **any** instead of **src-mac**. There is no explicit keyword. MAC addresses are represented by colon-separated one-byte hexa-decimal format. Zero padding must be used to make one-byte data into 2-digit value. For example, mac address 2:2:2:2:2:2 should be supplied as 02:02:02:02:02:02.

**dst-mac**

Specifies the destination mac address. There is no explicit keyword. MAC addresses are represented by colon-separated one-byte hexa-decimal format. Zero padding must be used to make one-byte data into 2-digit value. For example, mac address 2:2:2:2:2:2 should be supplied as 02:02:02:02:02:02.

**dst-mask**

Specifies the mask for the configured dst-mac. To opt out dst-mac and dst-mask, use any instead of dst-mac. There is no explicit keyword. MAC addresses are represented by colon-separated one-byte hexa-decimal format. Zero padding must be used to make one-byte data into 2-digit value. For example, mac address 2:2:2:2:2:2 should be supplied as 02:02:02:02:02:02.

**vlan-tag**

Specifies the value of VLAN tag. Valid values range from 1 to 4095. This is an optional parameter.

**etype**

Specifies the value of ether type given in hexa decimal format. Valid values range from 0x01 to 0xFFFF, excluding 0x8100. Alternatively, one the following protocol names, arp/ipv4/ipv6, can be selected. This is an optional parameter.

**pcp**

Specifies the traffic class mapped to the outgoing PCP value when a packet egresses the switch. Valid values range from 0 through 7.

**count**

Enables counter for the current rule.

**log**

Enables logging for the current rule.

## Modes

IP ACL config mode

## Usage Guidelines

GRE tunnel-type:

- Version-1 packets are not filtered with this setting.
- Version-0 packets are filtered successfully with this setting.

GTPU tunnel type:

- Packets with outer IP and UDP port settings (ACL configured with *ip address* and sport/dport combination) are not forwarded to the egress.

This command configures rules to permit or drop traffic based on MAC address source and destination.

The order of the rules in an ACL is critical. The first matching rule stops further processing. When creating rules, specifying sequence values determines the order of rule processing. If the sequence value is not specified, the rule is added to the end of the list.

To delete a rule from an ACL:

- If you know the rule number, enter no seq *seq-value*.

- If you do not know the rule number, type no and then enter the full syntax without seq-value.

**Table 37: Error messages**

Message	Reason
Error: seqid 10 already exist mac1.	Sequence ID is repeated within MAC ACL named mac1.
Error: source mac address must be in colon-separated 1 byte hexa-decimal format with zero padding if needed. Example-00:04:96:22:33:44	Zero padding must be added for src-mac, src-mask, dst-mac, dst-mask.
Error: valid range for VNID is 1-16777215.	VNID is outside valid range for VxLAN protocol.
Error: invalid Ethernet Type. Valid range 0x600-0xFFFF	Ethernet type is outside valid range format is incorrect.
% Value '65536' not in range <1-65535>.	Example: Sequence-id range error.
% Value '4096' not in range <0-4095>.	Example: vlan range error.
% Value '8' not in range <0-7>.	Example: pcp range error.

## Examples

The following example configures MAC ACL L2.

```
device# configure terminal
device(config)# mac access-list L2
device(config-mac-acl)# seq 1 permit 01:23:45:67:89:ab FF:FF.FF:FF.FF:FF
01:23:41:67:89:ac FF:FF.FF:FF.FF:00
```

The following example verifies that the MAC ACL was configured.

```
device(config-mac-acl)# show running-config access-list
mac access-list L2
    seq 10 permit 02:02:02:02:02:02 02:02:02:02:02:02 02:02:02:02:02:03 02:02:02:02:02:03
```

## set egress

Sets the egress to be used by an egress group.

### Syntax

```
set egress name  
no set egress name
```

### Parameters

*name*

Specifies the name of the configured egress. Name must not exceed 64 characters and must start with an alphabetic character or an underscore followed by an arbitrary sequence of alphabetic or numeric characters, underscores, hyphens, or dots.

### Modes

#### Modes

Egress-group config mode

### Usage Guidelines

You must have the admin role to perform this task.

The following reserved keywords cannot be used as name identifiers: all, ingress-group, egress, egress-group, match, list, access-list, route-map, and listener-policy.

**Table 38: Error messages**

Message	Reason
Error: egress name identifier must start with an alphabetic character or an underscore.	Egress name begins with non-alphabetic character or does not begin with an underscore.
Error: egress name identifier cannot exceed 64 characters	Egress name is longer than 64 characters.
Error: egress name identifier must start with an alphabetic character or an underscore	Egress name begins with non-alphabetic character or does not begin with an underscore.
Error: egress name identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens or dots.	Egress name contains invalid characters.
Error: egress name identifier must not be reserved keyword "egress".	Egres name includes the reserved word egress

## Examples

The following example binds an egress to an egress group.

```
device# configure terminal
device(config)# egress-group eg1
device(config-egress-group)# set egress egress_1

device# show running-config egress-group
egress-group eg1
    set egress egress_1
```

The following example unbinds an egress from an egress group.

```
device# configure terminal
device(config)# egress-group eg1
device(config-egress-group)# no set egress egress_1
```

## set egress-group

Sets the egress group to be used by the route map for forwarding matched packets.

### Syntax

```
set egress-group name  
no set egress-group name
```

### Parameters

*name*

Specifies the configured egress group to be bound to the route map and used for packet forwarding. Name must not exceed 64 characters and must start with an alphabetic character or an underscore followed by an arbitrary sequence of alphabetic or numeric characters, underscores, hyphens, or dots.

### Modes

Route-map config mode

### Usage Guidelines

You must have the admin role to perform this task.

The following reserved keywords cannot be used as name identifiers: all, ingress-group, egress, egress-group, match, list, access-list, route-map, and listener-policy.

**Table 39: Error messages**

Message	Reason
Error: egress-group name identifier must start with an alphabetic character or an underscore.	Egress-group name begins with non-alphabetic character or does not begin with an underscore.
Error: egress-group name identifier cannot exceed 64 characters	Egress-group name is longer than 64 characters.
Error: egress-group name identifier must start with an alphabetic character or an underscore	Egress-group name begins with non-alphabetic character or does not begin with an underscore.
Error: egress-group name identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens or dots.	Egress-group name contains invalid characters.
Error: egress-group name identifier must not be reserved keyword "egress-group".	Egress-group name includes the reserved word egress-group

## Examples

The following example configures egress-group egr1 to be used by the route map for forwarding matched packets.

```
device# configure terminal
device(config)# route-map rmap1 10
device(config-route-map)# set egress-group egr1
device(config-route-map)# end

device# show route-map all
route-map R1 10
forward-action permit
match ip access-list test_1 (active)
egress-group eg_1
Policy matches: 0 packets, 0 bytes, 0 PacketRate, 0 BitRate
```

The following example sets the egress for the egress-group and uses the show running-config command to verify the setting.

```
device# configure terminal
device(conf)# egress-group eg-100
device(conf-egress-group)#set egress egress-100

device# show running-config egress-group
egress-group eg-100
    set egress egress-100
```

The following example unbinds the egress-group egr1 from the route map.

```
device# configure terminal
device(config)# route-map rmap1 10
device(config-egress-group)# no set egress-group egr1
```

## set encap

Sets tunnel encapsulation for an egress.

### Syntax

```
set encap name
no set encap name
```

### Parameters

*name*

Specifies the configured encap to be bound to the egress ro tunnel termination.

### Modes

Config mode

### Usage Guidelines

Tunnel encap must be configured before binding an encap with an egress.

### Examples

The following example configures encap en1 to be used by egress\_1 for encapsulation and uses the show command to verify the setting.

```
device# configure terminal
device(config)# egress egress_1
device(config-egress)# set encap en1
device(config-egress)# end

device# show egress all
egress egress_1
  set encap en1
```

The following example unbinds the encap en1 from egress\_1.

```
device# configure terminal
device(config)# egress egress_1
device(config-egress)# no set encap en1
```

## **set ingress-group**

Sets the ingress group to be used by the an interface or transport tunnel for forwarding matched packets.

### Syntax

```
set ingress-group name
no set ingress-group name
```

### Parameters

*name*

Specifies the configured ingress group to be bound to an interface or transport tunnel and used for packet forwarding. Name must not exceed 64 characters and must start with an alphabetic character or an underscore followed by an arbitrary sequence of alphabetic or numeric characters, underscores, hyphens, or dots.

### Modes

Interface config mode

Transport tunnel config mode

### Usage Guidelines

You must have the admin role to perform this task.

The following reserved keywords cannot be used as name identifiers: all, ingress-group, egress, egress-group, match, list, access-list, route-map, and listener-policy.

**Table 40: Error messages**

Message	Reason
Error: ingress-group name identifier must start with an alphabetic character or an underscore.	Name begins with non-alphabetic character or does not begin with an underscore.
Error: ingress-group name identifier cannot exceed 64 characters	Name is longer than 64 characters.
Error: ingress-group name identifier must start with an alphabetic character or an underscore	Name begins with non-alphabetic character or does not begin with an underscore.
Error: ingress-group name identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens or dots.	Name contains invalid characters.

**Table 40: Error messages (continued)**

Message	Reason
Error: ingress-group name identifier must not be reserved keyword "ingress-group".	Name includes the reserved word ingress-group.
Error: ethernet <i>slot/number</i> is a member of port-channel <i>number</i> cannot bind to ingress-group	Ingress-group binding is not allowed in port-channel member ports.

## Examples

The following example configures ingress-group ig1 to be used by interface ethernet 1/1 for forwarding matched packets.

```
device# configure terminal
device(config)# interface ethernet 1/1
device(config-if-eth-1/1)# set ingress-group ig1
```

The following example configures ingress-group ig1 to be used by transport tunnel tt1 for forwarding matched packets.

```
device# configure terminal
device(config)# transport-tunnel tt1
device(config-transport-tunnel)# set ingress-group ig1
```

The following example shows the configuration configures ingress-group ig1 to be used by port-channel 1 for forwarding matched packets.

```
device# show running-config interface ethernet 1/1
interface port-channel 1
  set ingress-group ig1
interface ethernet 1/1
  set ingress-group ig1
transport-tunnel tt1
  set ingress-group ig1
```

The following example unbinds ingress-group ig1 from the lp100 from transport tunnel tt1.

```
device# configure terminal
device(config)# transport-tunnel tt1
device(config-transport-tunnel)# no set ingress-group ig1
```

## **set listener-policy**

Sets the listener policy to be used at egress for forwarding matched packets.

### Syntax

```
set listener-policy name
no set listener-policy name
```

### Parameters

*name*

Specifies the configured listener policy to be applied to matching packets at egress for packet forwarding. Name must not exceed 64 characters and must start with an alphabetic character or an underscore followed by an arbitrary sequence of alphabetic or numeric characters, underscores, hyphens, or dots.

### Modes

Config mode

### Usage Guidelines

You must have the admin role to perform this task.

The following reserved keywords cannot be used as name identifiers: all, ingress-group, egress, egress-group, match, list, access-list, route-map, and listener-policy.

**Table 41: Error messages**

Message	Reason
Error: listener-policy name must start with an alphabetic character or an underscore.	Name begins with non-alphabetic character or does not begin with an underscore.
Error: listener-policy name identifier cannot exceed 64 characters	Name is longer than 64 characters.
Error: listener-policy name identifier must start with an alphabetic character or an underscore	Name begins with non-alphabetic character or does not begin with an underscore.
Error: listener-policy name identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens or dots.	Name contains invalid characters.
Error: listener-policy name identifier must not be reserved keyword "listener-policy".	Name includes the reserved word listener-policy

## Examples

The following example configures listener-policy lp100 to be used by egress\_1 for packet forwarding.

```
device# configure terminal
device(config)# egress egress_1
device(config-egress)# set listener-policy lp100
device(config-egress)# end
device#
```

The following example verifies the configuration for egress\_1.

```
device# show running-config egress egress_1
egress egress_1
    set listener-policy lp100
```

The following example unbinds the listener-policy lp100 from egress\_1.

```
device# configure terminal
device(config)# egress egress_1
device(config-egress)# no set listener-policy lp100
```

## set route-map

Sets the route map to be used by an ingress group for forwarding matched packets.

### Syntax

```
set route-map name
no set route-map name
```

### Parameters

*name*

Specifies the configured route map to be applied to matching packets for an ingress group for packet forwarding. Name must not exceed 64 characters and must start with an alphabetic character or an underscore followed by an arbitrary sequence of alphabetic or numeric characters, underscores, hyphens, or dots.

### Modes

Ingress-group config mode

### Usage Guidelines

The following reserved keywords cannot be used as name identifiers: all, ingress-group, egress, egress-group, match, list, access-list, route-map, and listener-policy.

**Table 42: Error messages**

Message	Reason
Error: route-map name must start with an alphabetic character or an underscore.	Name begins with non-alphabetic character or does not begin with an underscore.
Error: route-map name identifier cannot exceed 64 characters	Name is longer than 64 characters.
Error: route-map name identifier must start with an alphabetic character or an underscore	Name begins with non-alphabetic character or does not begin with an underscore.
Error: route-map name identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens or dots.	Name contains invalid characters.
Error: route-map name identifier must not be reserved keyword "route-map".	Name includes the reserved word route-map

## Examples

The following example configures route map rm1 to be used by ingress group ig1 for packet forwarding.

```
device# configure terminal
device(config)# ingress-group ig1
device(config-ingress-group)# set route-map rm1
device(config-ingress-group)# end
```

The following example uses the show command to verify the configuration for ingress group ig1.

```
device# show running-config ingress-group ig1
ingress-group ig1
  set route-map rm1
```

The following example unbinds route map rm1 from ingress group ig1.

```
device# configure terminal
device(config)# ingress-group ig1
device(config-ingress-group)# no set route-map rm1
```

## show capture packet config

Displays all packet capture configurations on Ethernet ports.

### Syntax

```
show capture packet config
```

### Modes

Exec mode

### Examples

The following example shows all packet capture configurations on Ethernet interfaces.

```
NPB# show capture packet config
All protocol RX capture is enabled on interface Eth 1/2
All protocol RX capture is enabled on interface Eth 1/3
All protocol RX capture is enabled on interface Eth 1/1
All protocol TX capture is enabled on interface Eth 1/1
```

## show capture packet interface

Displays content of the active or latest PCAP file.

### Syntax

```
show capture packet interface [all | ethernet IFNAME ]
```

### Parameters

**all**

Specifies interfaces on which packet capture is enabled.

**ethernet IFNAME**

Specifies interface type ethernet front panel port <slot/port>.

### Modes

Exec mode

### Usage Guidelines

The active PCAP file is updated at an interval of 10 seconds.

This command can decode and display packets with the following headers: Ethernet, Dot1Q, IPv4, TCP, UDP, ARP, ICMP, EAPOL, LLC, LLDP, LACP, Ipv6, ICMPv6, and GTP

### Examples

The following example shows content of the active PCAP file.

```
device# show capture packet interface all
-----
Frames Logged on interface = All
-----

-----
Pkt Capture Metadata: #1 of 1 Packets
-----
Frame Received Time : Fri, 04 Dec 2020 20:25:02 UTC
Packet Length(bytes) : 64
Packet Direction : RX
Packet Filter : All
Front Panel Port : 1/1
-----
ETHERNET HEADER :
-----
SrcMAC : 00:00:11:da:4d:72
DstMAC : 00:00:00:f0:c9:b9
EtherType : IPv4 (0x800)
-----
IPv4 HEADER :
-----
Src IP Address : 1.0.10.2
Dst IP Address : 1.0.10.1
```

```
Type of service      : 0
Total Length        : 28 Bytes
Identification      : 0x0
Fragmentation       : 0
TTL                 : 64
Protocol            : ICMPv4(1)
IP Checksum         : 0x24df
-----
ICMP DETAILS        :
-----
ICMP Hdr Type      : EchoRequest
ICMP Hdr Code       : 0x0
ICMP Hdr Checksum   : 0xf7f7
ICMP ID             : 0x0
ICMP Sequence No    : 0x8
-----
--More--
```

## show capture packet pcapfile-info

Displays metadata of all packet capture files.

### Syntax

```
show capture packet pcapfile-info
```

### Parameters

**pcapfile-info**

Shows metadata of all packet capture files.

### Modes

Exec mode

### Examples

The following example shows metadata of all packet capture files.

```
NPB# show capture packet pcapfile-info
-----
PCAP File(s)  Details:
-----
Pcap  File Name : pktcapture_1.pcapng
Last Modified   : Fri Dec  4 11:54:08 2020 (UTC +0000)
PcapFile Size   : 0.48 KB
Packet Count    : 2

Pcap  File Name : pktcapture_2.pcapng
Last Modified   : Fri Dec  4 17:16:37 2020 (UTC +0000)
PcapFile Size   : 2.4 KB
Packet Count    : 10
-----
```

## show inventory

Displays the inventory detail for slot cards, power supply units, or both that are currently in use and whose status is UP.

### Syntax

```
show inventory { slot | power-supply | all }
```

### Parameters

#### slot

Specifies show inventory detail for slot cards.

#### power-supply

Specifies show inventory detail for power-supply units.

#### all

Specifies show inventory detail for all slot and power-supply units.

### Modes

Exec mode

### Examples

The following example displays inventory details for all slot cards.

```
device# show inventory slot
      Module      : Slot-1
      Model       : 9920-16C
      PartNo     : 801112-00-04
      SerialNo   : AE022102Y-10036
      Version    : 4
      Manufacturer : Extreme Networks Inc.
      Mfg Date   : Fri Jan 15 09:30:00 2021
      ECVersion  : 15

      Module      : Slot-2
      Model       : 9920-16C
      PartNo     : 801112-00-04
      SerialNo   : AE022102Y-10035
      Version    : 4
      Manufacturer : Extreme Networks Inc.
      Mfg Date   : Fri Jan 15 09:30:00 2021
      ECVersion  : 15

      Module      : Slot-3
      Model       : 9920-16C
      PartNo     : 801112-00-04
      SerialNo   : AE022102Y-10034
      Version    : 4
      Manufacturer : Extreme Networks Inc.
      Mfg Date   : Fri Jan 15 09:30:00 2021
      ECVersion  : 15
```

The following example shows all inventory detail for power supply units.

```
device# show inventory power-supply
  Module      : PSU-0
    Model     : 9920-ACPWR-1600W-F
  SystemNo   : 801115-00-01
  SerialNo  : AE042050B-40007
  Version    : SOF

  Module      : PSU-1
    Model     : 9920-ACPWR-1600W-F
  SystemNo   : 801115-00-01
  SerialNo  : AE042050B-40014
  Version    : SOF
```

The following example shows inventory detail for all cards and power supplies.

```
device# show inventory all
  Module      : Slot-1
    Model     : 9920-16C
    PartNo    : 801112-00-04
  SerialNo   : AE022102Y-10036
  Version    : 4
Manufacturer : Extreme Networks Inc.
  Mfg Date  : Fri Jan 15 09:30:00 2021
  ECVersion  : 15

  Module      : Slot-2
    Model     : 9920-16C
    PartNo    : 801112-00-04
  SerialNo   : AE022102Y-10035
  Version    : 4
Manufacturer : Extreme Networks Inc.
  Mfg Date  : Fri Jan 15 09:30:00 2021
  ECVersion  : 15

  Module      : Slot-3
    Model     : 9920-16C
    PartNo    : 801112-00-04
  SerialNo   : AE022102Y-10034
  Version    : 4
Manufacturer : Extreme Networks Inc.
  Mfg Date  : Fri Jan 15 09:30:00 2021
  ECVersion  : 15

  Module      : PSU-0
    Model     : 9920-ACPWR-1600W-F
  SystemNo   : 801115-00-01
  SerialNo  : AE042050B-40007
  Version    : SOF

  Module      : PSU-1
    Model     : 9920-ACPWR-1600W-F
  SystemNo   : 801115-00-01
  SerialNo  : AE042050B-40014
  Version    : SOF
```

## show chassis

Displays the status for components in the device.

### Syntax

```
show chassis
```

### Modes

Exec mode

### Examples

The following example displays chassis information on an SLX 9920.

```
NPB# show chassis
    PlatformName: x86_64-extremenetworks-chassis-9920
    Product Name: Extreme 9920-NPB-8
    FPGA Version: v2.12
    Hardware Rev: Beta
    ManufactureDate: 01/12/2021 00:30:00
        Manufacturer: Extreme Networks, Inc.
        PartNumber: 801103-00-04
        SerialNumber: AE012102Y-10006
            Vendor: Extreme Networks Inc.
            description: Extreme 9920-NPB-8, 4.14.49-OpenNetworkLinux, Version
NGNPB_v0.6.0-20210302_150946_UTC
        Status: Online
        Reboot Reason: None
        System Contact: jnixon@extremenetworks.com
        System Location: SJ_HQ2:EK20:U27
        System Uptime: 15m34s
            Mac: 40:88:2f:c1:18:00
            MacRange: 1024
            LC Slots: 8
            Fan Count: 5
            Led Count: 4
            PSU Count: 4
            Sensor Count: 27
```

## show clock

Displays the current time.

### Syntax

```
show clock
```

### Parameters

**clock**

Specifies the system clock.

### Modes

Exec mode

### Examples

The following example shows current time.

```
device# show clock  
2020-11-18 10:24:01 UTC +0000
```

## **show counters egress**

Displays egress counters information for the specified egress.

### Syntax

```
show counters egress name
```

### Parameters

*name*

Specifies the name of the egress for counter show. The egress name supports 1-32 characters. Characters allowed are alpha-numeric, underscore, and dot. Underscore is not allowed as the first character.

### Modes

Exec mode

### Usage Guidelines

Valid egress-name must be provided.

The `clear counters egress` command can be used to clear egress counters.

### Examples

The following example shows egress statistics for egr1.

```
device# show egress counters egr1
Egress-group Packet Statistics
    TX Frames : 10
    TX Bytes : 1430
```

The following example shows egress statistics for all egresses.

```
device# show counters egress all
Egress Packet Statistics : ep_eg01_01
    TX Frames : 250000000
    TX Bytes : 1300000000000

Egress Packet Statistics : ep_eg01_02
    TX Frames : 250000000
    TX Bytes : 1300000000000
```

## show counters egress-group

Displays the egress group counters for the specified egress group.

### Syntax

```
show counters egress-group {name | all}
```

### Parameters

**name**

Specifies show counters for the the named egress group.

The egress-group-name supports 1-32 characters. Characters allowed are alpha-numeric, underscore, and dot. Underscore is not allowed as the first character.

**all**

Specifies show counters for all configured egress groups.

### Modes

Exec mode

### Usage Guidelines

Valid egress group name must be provided.

### Examples

The following example shows egress group counters information.

```
device# show counters egress-group eg1
Egress-group Packet Statistics : eg_01

    TX Frames : 500000000
    TX Bytes : 260000000000

Egress-group Packet Statistics : eg_02

    TX Frames : 500000000
    TX Bytes : 260000000000
```

## show counters encaps

Displays encapsulation counters statistic for the specified or all encaps objects.

### Syntax

```
show counters encaps { all | name }
```

### Parameters

#### all

Specifies all encapsulation counters.

#### name

Specifies the encapsulation name.

### Modes

Exec mode

### Usage Guidelines

Valid encapsulation name must be provided.

### Examples

The following example shows information about encapsulation counter encaps\_1.

```
device# show counters encaps encaps_1
Tunnel Encapsulation Statistics(GRE)
  Egress port : ethernet 1/2
    RX Frames : 0
    RX Bytes : 0
```

The following example shows information about all encapsulation counters.

```
device# show counters encaps all
```

## show counters ingress-group

Displays ingress-group counters information.

### Syntax

```
show counters ingress-group [ name | all ]
```

### Parameters

*name*

Specifies the name of an ingress group.

**all**

Specifies counters information for all ingress groups.

### Modes

Exec mode

### Usage Guidelines

The traffic type must be configured for the ingress group.

Counters for non-transport tunnel type ingress groups is not supported.

### Examples

The following example displays all ingress group counters information.

```
device# show counters ingress-group all
Number of ingress-groups: 2
Ingress-group Packet Statistics (Vxlan Tunnel)
    Name : IgVxlanVni100
    RX Frames : 0
    RX Bytes : 0
```

## show counters interface ethernet

---

Displays the counters of Ethernet interface.

### Syntax

```
show counters interface ethernet [ IFNAME | port-channel number| brief ]
```

### Parameters

#### **IFNAME**

Specifies the interface name in slot/port format. Examples: 1/1, 1/1-3, 5, 2/7-9

#### **port-channel number**

Specifies interface statistics for specified port channel number.

#### **brief**

Specifies brief interface stats

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

### Examples

The following example shows counters of Ethernet interface.

```
device# Interface Statistics: ethernet 1/1
Carrier Transitions: 0
LastClear: 1h51m53.558433595s
Input:
    Total pkts: 20000000
    Broadcast pkts: 0
    Discard pkts: 0
    Errors pkts: 0
    FCS Errors: 0
    MCast pkts: 0
    Octets: 7760000000
    UCast pkts: 20000000
    Runt pkts: 0
    CRC Errors: 0
Input Distribution:
    64 byte pkts: 0
    65-127 byte pkts: 0
    128-255 byte pkts: 0
    256-511 byte pkts: 10000000
    512-1023 byte pkts: 10000000
    1024-1518 byte pkts: 0
    Jumbo pkts: 0
Out:
    Total pkts: 0
```

```
    Broadcast pkts: 0
    Discard pkts: 0
    Errors pkts: 0
    MCast pkts: 0
        Octets: 0
    UCast pkts: 0
Rate Info:
    Input: 0.000000 Mbits/sec, 0 pkts/sec 0.00% of line-rate
    Output: 0.000000 Mbits/sec, 0 pkts/sec 0.00% of line-rate
```

The following example shows statistics for port channel 3.

```
device# show counters interface port-channel 3
Interface Statistics: port-channel 3
Carrier Transitions: 3
    LastClear: 1m58.104973563s
Input:
    Total pkts: 0
    Broadcast pkts: 0
    Discard pkts: 0
    Errors pkts: 0
    FCS Errors: 0
    MCast pkts: 0
        Octets: 0
    UCast pkts: 0
Out:
    Total pkts: 0
    Broadcast pkts: 0
    Discard pkts: 0
    Errors pkts: 0
    MCast pkts: 0
        Octets: 130000000000
    UCast pkts: 250000000
```

The following example shows brief stats output for the ethernet interface.

```
device# show counters interface ethernet brief
      Packets      Error      Discards      CRC
Interface rx tx rx tx rx tx rx
=====
Eth 1/1   0   0   0   0   0   0   0
Eth 1/2   0   0   0   0   0   0   0
Eth 1/3   0   0   0   0   0   0   0
Eth 1/4   0   0   0   0   0   0   0
Eth 1/5   0  144   0   0   0   0   0
```

## **show counters interface management**

Displays counter information for specified management interface.

### Syntax

```
show counters interface management number
```

### Parameters

*number*

Specifies the management interface by number.

### Modes

Exec mode

### Examples

The following example shows counters information for management interface 0.

```
device# sh counters interface management 0
Statistics
  Carrier Transitions: 0
    LastClear: 0s
Input:
  Total pkts: 36892
  Broadcast pkts: 2833
  Discard pkts: 0
  Errors pkts: 0
  CRC Errors: 0
  MCast pkts: 32459
  Octets: 3016973

Out:
  Total pkts: 1793
  Broadcast pkts: 379
  Discard pkts: 0
  Errors pkts: 0
  MCast pkts: 44
  Octets: 480103

Rate Info:
  Input: 0.014576 Mbits/sec, 15 pkts/sec 0.00% of line-rate
  Output: 0.004194 Mbits/sec, 3 pkts/sec 0.00% of line-rate
```

## show counters transport-tunnel

Displays transport tunnel counters information for the specified transport tunnel.

### Syntax

```
show counters transport-tunnel name|all
```

### Parameters

*name*

Specifies the tunnel name for displaying transport tunnel counters information.

**all**

Specifies all transport-tunnel counters.

### Modes

Exec mode

### Examples

The following example shows transport tunnel counters information for tunnel-1.

```
# show counters transport-tunnel tunnel-1

ERSPAN Terminated Packet Statistics

RX Frames : 0

RX Bytes : 0

ERSPAN Dropped Packet Statistics

Dropped Frames : 0

Dropped Bytes : 0
```

## show crypto ca certificates

Displays CA certificates used by the switch.

### Syntax

```
show crypto ca certificates
```

### Modes

Exec mode

### Usage Guidelines

Available to all users

Output includes effective date and certificate identifiers.

### Examples

The following example shows installed CA certificate information for the current switch.

```
device# show crypto ca certificates
SHA256

Fingerprint=7F:87:87:28:C1:E3:0B:EF:BB:08:3F:8F:E3:0D:FE:15:D7:79:EA:5C:1E:9A:67:15:C5:E6:
44:32:7B:B4:C2:A8

Subject: CN=ngnpb.extremenetworks.com

Issuer: CN=NGNPB Intermediate CA,OU=Extreme
Networks NextGenNPB,O=Extreme Networks,ST=CA,C=US

Not Before: Sep 14 17:31:15 2020 UTC
Not After : Sep 14 17:31:15 2021 UTC
```

## show egress

Displays egress operational information for the specified egress or all egresses.

### Syntax

```
show egress [ name | all ]
```

### Parameters

*name*

Specifies the name of the egress for show egress. The egress name supports 1-32 characters. Characters allowed are alpha-numeric, underscore, and dot. Underscore is not allowed as the first character.

**all**

Specifies all egresses for show egress.

### Modes

Exec mode

### Usage Guidelines

A valid egress name must be provided.

You can run this command without specifying a name to display configuration information for all.

### Examples

The following example shows operational egress information for ep1.

```
device# show egress ep1
      Name : ep1
      Description : egress_obj_1
      Encap : encaps_gre
      Listener Policy : lpl
      Precedence : 10
      Interface : ethernet 1/2
```

The following example show operational information for all configured egresses.

```
device# show egress all
      Name : e1
      Description : egress_obj_1
      Encap : encaps_gre
      Listener Policy : v4
      Precedence : 12
      Interface : ethernet 1/9
```

## show egress-group

Displays egress group configuration for the specified egress group or all egress-groups.

### Syntax

```
show egress-group [ egress-group-name | all ]
```

### Modes

Exec mode

### Parameters

*all*

Specifies all egress groups.

*egress-group-name*

Specifies the egress group name for config show.

Supports 1-32 characters. Characters allowed are alpha-numeric, underscore, and dot.  
Underscore is not allowed as the first character.

### Usage Guidelines

Valid egress-group-name must be provided.

### Examples

```
NPB# show egress-group egl
      Name : egl
      Description : -
      egress : e1

NPB# show egress-group all
Number of egress-groups: 1

      Name : egl
      Description : -
      egress : e1
```

## show encaps

Displays encapsulation information for all or specified encaps.

### Syntax

```
show encaps [ all | encaps-name ]
```

### Parameters

#### all

Displays all encaps.

#### encaps-name

Specifies the name of the encaps.

### Modes

Exec mode

### Usage Guidelines

Valid encapsulation name must be provided.

### Examples

The following example shows encapsulation information for encaps-1.

```
device# show encaps encaps-1
encap encaps-1
encap-type      : erspan
encap-id        : 123456
source-ipv4-addr : 10.10.10.1
destination-ipv4-addr : 20.20.20.1
destination-mac-addr : 00:01:02:03:04:05
vlan-id         : 1234
vlan-pcp        : 6
```

## show firmware

Displays the current firmware version and rollback firmware version of the system along with BMC firmware version on hardware.

### Syntax

```
show firmware
```

### Modes

Exec mode

### Examples

The following example displays the firmware version information.

```
device# show firmware
Current Firmware Version: TierraOS-21.1.0.0-NPB-20210608_133912_UTC
Rollback Firmware Version: TierraOS-21.1.0.0-NPB-20210604_013911_UTC
BMC Firmware Version: 1.21
```

## show firmware history

Displays firmware version history.

### Syntax

```
show firmware history
```

### Modes

Exec mode

### Examples

The following example shows the last 5 firmware versions on the switch.

```
device# show firmware history

Firmware Version           Install Date
-----
device_v21.0.7.0-20210408_012657_UTC    Mon, 12 Apr 2021 14:07:38 UTC
device_v21.0.7.0-20210412_050245_UTC    Mon, 12 Apr 2021 13:58:46 UTC
device_v21.0.7.0-20210408_012657_UTC    Fri, 09 Apr 2021 18:17:22 UTC
device_v21.0.7.0-20210409_012648_UTC    Fri, 09 Apr 2021 18:13:26 UTC
device_v21.0.7.0-20210408_012657_UTC    Fri, 09 Apr 2021 17:56:30 UTC
```

## **show grpc-server gnmi capabilities**

Provides capability information

### Syntax

```
show grpc-server gnmi capabilities
```

### Parameters

#### **capabilities**

Display gNMI service version, the versioned data models it supports, and the supported data encoding.

### Modes

Exec mode

### Usage Guidelines

This information is used in subsequent RPC messages from the client to indicate the set of models that the client can use (GET, SUBSCRIBE, SET) and the encoding to be used for the data.

### Examples

The following example shows detail for gNMI capabilities.

```
device# show grpc-server gnmi capabilities
gNMI version: 0.7.0
Supported YANG modules:
Module Name          Organization      Version
-----
extreme-acl-ext      Extreme Networks, Inc.    1.0.0
extreme-acl-ipv4-ext  Extreme Networks, Inc.    1.0.0
extreme-acl-ipv6-ext  Extreme Networks, Inc.    1.0.0
extreme-acl-mac-ext   Extreme Networks, Inc.    1.0.0
extreme-common-types  Extreme Networks, Inc.    1.0.0
extreme-egress-group  Extreme Networks, Inc.    1.0.0
extreme-egress         Extreme Networks, Inc.    1.0.0
extreme-eth-ext       Extreme Networks, Inc.    1.0.0
extreme-ingress-group Extreme Networks, Inc.    1.0.0
extreme-lag-ext       Extreme Networks, Inc.    1.0.0
extreme-listener-policy Extreme Networks, Inc.    1.0.0
extreme-lldp-ext     Extreme Networks, Inc.    1.0.0
extreme-pcap          Extreme Networks, Inc.    1.0.0
extreme-policy-statistics Extreme Networks, Inc.    1.0.0
extreme-routemap      Extreme Networks, Inc.    1.0.0
extreme-saps          Extreme Networks, Inc.    1.0.0
extreme-sfcs          Extreme Networks, Inc.    1.0.0
extreme-sfs           Extreme Networks, Inc.    1.0.0
extreme-snmp          Extreme Networks, Inc.    1.0.0
extreme-system-logging-ext Extreme Networks, Inc.    1.0.0
extreme-transport-tunnel Extreme Networks, Inc.    1.0.0
extreme-tunnel-encap   Extreme Networks, Inc.    1.0.0
openconfig-acl        OpenConfig working group  1.0.1
```

openconfig-interfaces	OpenConfig working group	2.4.3
openconfig-platform	OpenConfig working group	0.11.0
openconfig-system	OpenConfig working group	0.5.0
openconfig-network-instance	OpenConfig working group	0.10.2
<hr/>		
Supported Encoding:		
PROTO		

## **show grpc-server gnmi statistics**

---

Displays gNMI subscription detail.

### Syntax

```
show grpc-server gnmi statistics
```

### Parameters

**statistics**

Display detail of active gNMI stream subscriptions.

### Modes

Exec mode

### Usage Guidelines

gNMI stream details include the number of active stream subscriptions and subscription details for client, mode, number of subscribed keypaths, keypath details, and subscription interval.

### Examples

## show ingress-group

Displays ingress group configuration for the given ingress group or all ingress groups.

### Syntax

```
show ingress-group [ ingress-group-name | all ]
```

### Parameters

*ingress-group-name*

Specifies the name of the ingress group.

*all*

Specifies all ingress groups.

### Modes

Exec mode

### Usage Guidelines

Valid ingress-group-name must be provided.

### Examples

```
NPB# show ingress-group ig1
      Name : ig1
      Route-Map : rml
      Description : -
      Traffic-Type : GTPU
      Tunnel-Id : any
      Mode : decap
      Interfaces : ethernet 1/1

NPB# show ingress-group all
Number of ingress-groups: 1

      Name : ig1
      Route-Map : rml
      Description : -
      Traffic-Type : GTPU
      Tunnel-Id : any
      Mode : decap
      Interfaces : ethernet 1/1

NPB# show ingress-group ING1
Error: no ingress-groups found
```

## show interface brief

Displays brief information about interfaces in the system.

### Syntax

```
show interface brief
```

### Parameters

```
interface brief
```

Displays abbreviated version of interface information.

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

### Examples

The following example shows brief interface information.

```
device# show interface brief

Number of interfaces 20
Name      Mtu      Admin-State   Oper-State   Speed Ifindex
Description

-----
Eth 1/1    9216     DOWN        DOWN       0x10000008  100G ethernet port
Eth 1/2    9216     DOWN        DOWN       0x10000009  100G ethernet port
Eth 1/3    9216     DOWN        DOWN       0x1000000a  100G ethernet port
Eth 1/4    9216     DOWN        DOWN       0x1000000b  100G ethernet port
Eth 1/5    9216     DOWN        DOWN       0x1000000c  100G ethernet port
Eth 1/6    9216     DOWN        DOWN       0x1000000d  100G ethernet port
Eth 1/7    9216     DOWN        DOWN       0x1000000e  100G ethernet port
Eth 1/8    9216     DOWN        DOWN       0x1000000f  100G ethernet port
Eth 1/9    9216     DOWN        DOWN       0x10000010  100G ethernet port
Eth 1/10   9216     DOWN        DOWN       0x10000011  100G ethernet port
Eth 1/11   9216     DOWN        DOWN       0x10000012  100G ethernet port
Eth 1/12   9216     DOWN        DOWN       0x10000013  100G ethernet port
Eth 1/13   9216     DOWN        DOWN       0x10000014  100G ethernet port
Eth 1/14   9216     DOWN        DOWN       0x10000015  100G ethernet port
Eth 1/15   9216     DOWN        DOWN       0x10000016  100G ethernet port
Eth 1/16   9216     DOWN        DOWN       0x10000017  100G ethernet port
Eth 1/17   9216     DOWN        DOWN       0x10000018  100G ethernet port
Eth 1/18   9216     DOWN        DOWN       0x10000019  100G ethernet port
Eth 1/19   9216     DOWN        DOWN       0x1000001a  100G ethernet port
Mgmt 0    1514     UP          UP         1G 0x60000010 Management
```

## show interface ethernet

Displays the details of Ethernet interface or range of interfaces.

### Syntax

```
show interface ethernet [ IFNAME | all ]
```

### Parameters

#### IFNAME

Specifies the Ethernet interface or range of interfaces for the show command. For example, 1/1-2,2/1-2,3/2:1-4.

#### all

Specifies all Ethernet interfaces for the show command.

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

### Examples

The following example displays information pertaining to an Ethernet interface.

```
NPB# show int e 1/2
ethernet 1/2 Admin state UP      Operational state UP
Interface index is 268435868 (0x1000019c)
MTU 9000 bytes
Hardware is Ethernet  mac address
Current Speed 100G

Statistics
Carrier Transitions: 0
LastClear: 0s
Input:
      Total Pkts: 570850
      Broadcast Pkts: 3
      Discard Pkts: 0
      Errors Pkts: 0
      FCS Errors: 0
      MCast Pkts: 18
          Octets: 381845280
      UCast Pkts: 44478
      Runt pkts: 0
      CRC Errors: 0

Input Distribution:
      64 byte pkts: 0
      65-127 byte pkts: 21
      128-255 byte pkts: 0
```

```
    256-511 byte pkts: 0
    512-1023 byte pkts: 0
    1024-1518 byte pkts: 0
        Jumbo pkts: 44478

Out:
    Total Pkts: 0
    Broadcast Pkts: 0
    Discard Pkts: 0
    Errors Pkts: 0
    MCast Pkts: 0
        Octets: 0
    UCast Pkts: 0

Rate Info:
    Input: 1680.724704 Mbits/sec, 24426 pkts/sec 1.68% of line-rate
    Output: 0.000000 Mbits/sec, 0 pkts/sec 0.00% of line-rate
```

## show interface management

Displays the details of management interface and the IP address configured on the interface.

### Syntax

```
show interface management interface-number
```

### Parameters

```
management interface-number
```

Specifies the management interface number.

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

### Examples

The following example shows the details of the specified management interface.

```
device# show interface management 0
management 0 Admin state UP      Operational state UP
MTU 1514 bytes
Hardware is Ethernet  mac address d8:84:66:f9:3c:03
Current Speed 1G
DHCPv4 Disabled
IPv4 address 192.168.122.160/24
IPv4 gateway 192.168.122.1
DHCPv6 Disabled
IPv6 address 2001::100/120
IPv6 gateway 2001::1
Statistics
Carrier Transitions: 0
Input:
    Total pkts: 424129
    Broadcast pkts: 22621
    Discard pkts: 0
    Errors pkts: 0
    CRC Errors: 0
    MCast pkts: 248183
    Octets: 227726675
Out:
    Total pkts: 45587
    Broadcast pkts: 2858
    Discard pkts: 0
    Errors pkts: 0
    MCast pkts: 247
    Octets: 3974088
Rate Info:
    Input: 0.017180 Mbits/sec, 17 pkts/sec 0.00% of line-rate
    Output: 0.007562 Mbits/sec, 5 pkts/sec 0.00% of line-rate
```

## show interface port-channel

Displays the port-channel information.

### Syntax

```
show interface port-channel [ channel-number | brief
```

### Parameters

**port-channel** *channel-number*

Specifies the port channel number. The range is 1-255.

**brief**

Displays brief information of the port channel interface.

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

### Examples

The following example shows interface port channel information.

```
device# show interface port-channel 1
port-channel 1 is up
    MTU 9216 Bytes
    IfIndex 0x40000201
    Port mode is Full Duplex, 100 Gb/s
    LagType is Static
    MinLinks is 1
    Load balance method uses Src/Dst IP, Src/Dst L4 port and
        protocol
    Active Members in this channel: Eth 1/1
    Members in this channel: Eth 1/1

    Statistics
        Carrier Transitions: 3
            LastClear: 37m48.716951005s
    Input:
        Broadcast Pkts: 0
        Discard Pkts: 0
        Errors Pkts: 0
        FCS Errors: 0
        MCast Pkts: 0
        Octets: 0
        UCast Pkts: 0
        Unknown Protocols: 0
    Out:
        Broadcast Pkts: 0
        Discard Pkts: 0
```

```
Errors Pkts: 0
  MCast Pkts: 0
    Octets: 0
  UCast Pkts: 0
```

The following example shows brief of the port channel interface.

```
NPB# show interface port-channel brief

Number of interfaces 24
Port      Mtu     Admin-State   Oper-State   Ifindex       Description
-----
Po1       9216    UP           DOWN         0x40000200   Port-Channel Interface
Po10      9216    UP           DOWN         0x40000209   Port-Channel Interface
Po200     9216    DOWN        DOWN         0x400002c7   Port-Channel Interface
Po255     9216    UP           UP          0x400002fe   Port-Channel Interface
```

## show inventory

Displays the inventory detail for slot cards, power supply units, or both that are currently in use and whose status is UP.

### Syntax

```
show inventory { slot | power-supply | all }
```

### Parameters

#### slot

Specifies show inventory detail for slot cards.

#### power-supply

Specifies show inventory detail for power-supply units.

#### all

Specifies show inventory detail for all slot and power-supply units.

### Modes

Exec mode

### Examples

The following example displays inventory details for all slot cards.

```
device# show inventory slot
      Module      : Slot-1
      Model       : 9920-16C
      PartNo     : 801112-00-04
      SerialNo   : AE022102Y-10036
      Version    : 4
      Manufacturer : Extreme Networks Inc.
      Mfg Date   : Fri Jan 15 09:30:00 2021
      ECVersion  : 15

      Module      : Slot-2
      Model       : 9920-16C
      PartNo     : 801112-00-04
      SerialNo   : AE022102Y-10035
      Version    : 4
      Manufacturer : Extreme Networks Inc.
      Mfg Date   : Fri Jan 15 09:30:00 2021
      ECVersion  : 15

      Module      : Slot-3
      Model       : 9920-16C
      PartNo     : 801112-00-04
      SerialNo   : AE022102Y-10034
      Version    : 4
      Manufacturer : Extreme Networks Inc.
      Mfg Date   : Fri Jan 15 09:30:00 2021
      ECVersion  : 15
```

The following example shows all inventory detail for power supply units.

```
device# show inventory power-supply
  Module      : PSU-0
    Model     : 9920-ACPWR-1600W-F
  SystemNo   : 801115-00-01
  SerialNo  : AE042050B-40007
  Version    : SOF

  Module      : PSU-1
    Model     : 9920-ACPWR-1600W-F
  SystemNo   : 801115-00-01
  SerialNo  : AE042050B-40014
  Version    : SOF
```

The following example shows inventory detail for all cards and power supplies.

```
device# show inventory all
  Module      : Slot-1
    Model     : 9920-16C
    PartNo    : 801112-00-04
  SerialNo   : AE022102Y-10036
  Version    : 4
Manufacturer : Extreme Networks Inc.
  Mfg Date  : Fri Jan 15 09:30:00 2021
  ECVersion  : 15

  Module      : Slot-2
    Model     : 9920-16C
    PartNo    : 801112-00-04
  SerialNo   : AE022102Y-10035
  Version    : 4
Manufacturer : Extreme Networks Inc.
  Mfg Date  : Fri Jan 15 09:30:00 2021
  ECVersion  : 15

  Module      : Slot-3
    Model     : 9920-16C
    PartNo    : 801112-00-04
  SerialNo   : AE022102Y-10034
  Version    : 4
Manufacturer : Extreme Networks Inc.
  Mfg Date  : Fri Jan 15 09:30:00 2021
  ECVersion  : 15

  Module      : PSU-0
    Model     : 9920-ACPWR-1600W-F
  SystemNo   : 801115-00-01
  SerialNo  : AE042050B-40007
  Version    : SOF

  Module      : PSU-1
    Model     : 9920-ACPWR-1600W-F
  SystemNo   : 801115-00-01
  SerialNo  : AE042050B-40014
  Version    : SOF
```

## show ip access-list

Displays specific IPv4 access control list (ACL), all configured IPv4 access lists, or IPv4 ACLs bound to a route map or listener policy.

### Syntax

```
show ip access-list {name | all}
show ip access-list all route-map
show ip access-list all listener-policy
```

### Parameters

**name**

Shows information for the named IPv4 ACL.

**all**

Shows all configured IPv4 ACLs.

**route-map**

Shows all IPv4 ACLs bound to a route map.

**listener-policy**

Shows all IPv4 ACLs bound to a listener policy.

### Modes

Exec mode

### Usage Guidelines

To display all IPv4 ACLs bound to a route map or listener policy, the **route-map** and **listener policy** optional parameters are available.

### Examples

The following example shows the configured ACL named IPv4-1.

```
device# show ip access-list IPv4-1
ip access-list IPv4-1
    seq 66 permit tcp any any (0 Packets, 0 Bytes, 0 Packets/sec, 0 Bits/sec )
    seq 65 permit udp any any (0 Packets, 0 Bytes, 0 Packets/sec, 0 Bits/sec )
```

The following example shows all configured ACLs and all ACLs bound to a route map or listener policy options..

```
device# show ip access-list all
ip access-list IPv4-1
    seq 66 permit tcp any any ( 0 Packets, 0 Bytes, 0 Packets/sec, 0 Bits/sec )

device# show ip access-list all route-map
```

```
Route map: rml
  ip access-list v4
    seq 10 permit ip any any ( 0 Packets, 0 Bytes, 0 Packets/sec, 0 Bits/sec )
  ip access-list ip-3
    seq 70 permit udp any any dport 20000 dport-end 20010 sport 10000 sport-end 10010
      - ( 0 Packets, 0 Bytes, 0 Packets/sec, 0 Bits/sec )

device# show ip access-list all listener-policy
Listener policy: LP1
  ip access-list ip-eg-acl
    seq 10 permit ip any any ( 0 Packets, 0 Bytes, 0 Packets/sec, 0 Bits/sec )
```

## show ip dns

Displays the details of IP DNS configuration information.

### Syntax

```
show ip dns
```

### Parameters

**ip dns**

Specifies the DNS IP address.

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

### Examples

The following example show IP DNS information.

```
device# sh ip dns
ip dns domain name
corp.extremenetworks.com
extremenetworks.com
ip dns name-server
10.6.16.32
10.6.24.30
1111:2222::1
```

## show ipv6 access-list

Displays all or specific configured IPv6 access control list (ACL) or IPv6 ACLs bound to a route map or listener policy.

### Syntax

```
show ipv6 access-list { name | all }
show ipv6 access-list all route-map
show ipv6 access-list all listener-policy
```

### Parameters

**name**

Specifies the name of IPv6 ACL.

**all**

Specifies all configured IPv6 ACLs.

**route-map**

Specifies the name of the route-map.

**listener-policy**

Specifies the name of the listener-policy.

### Modes

Exec mode

### Examples

The following example shows settings for the IPv6 access list, IPV6-1.

```
device# show ipv6 access-list IPV6-1
seq 66 permit tcp any any ( 0 Packets, 0 Bytes, 0 Packets/sec, 0 Bits/sec )
```

The following example shows all IPv6 access lists.

```
device# sshow ipv6 access-list all
ipv6 access-list ip6-2
    seq 10 permit gtpu any any ( 0 Packets, 0 Bytes, 0 Packets/sec, 0 Bits/sec )
    seq 20 permit ipv6 2001::1 2001:0::1 any ( 0 Packets, 0 Bytes, 0 Packets/sec, 0 Bits/sec )
ip6 access-list ip6-3
    seq 40 permit ipv6 2002::2 2002:: 2003::3 2003::0 ( 0 Packets, 0 Bytes, 0 Packets/sec, 0 Bits/sec )
```

The following example shows all configured IPv6 access lists bound to a route map.

```
device# show ipv6 access-list all route-map
Route map: rml
    ipv6 access-list ip6-3
```

```
    seq 40 permit ipv6 2002::2 2002:: 2003::3 2003::0 ( 0 Packets, 0 Bytes, 0 Packets/
sec, 0 Bits/sec )
```

The following example shows all IPv6 access lists bound to a listener policy.

```
device# show ipv6 access-list all listener-policy
Listener policy: LP1
  ipv6 access-list ip6-2
    seq 10 permit gtpu any any ( 0 Packets, 0 Bytes, 0 Packets/sec, 0 Bits/sec )
    seq 20 permit ipv6 2001::1 2001:0::0:1 any ( 0 Packets, 0 Bytes, 0 Packets/sec, 0
Bits/sec )
```

## show link-fault-signaling

Displays link-fault-signaling information.

### Syntax

```
show link-fault-signaling
```

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

This command is not allowed on management interface.

### Examples

#### Examples

The following example shows how to configure link-fault-signaling on a device.

```
device(config)# int e 1/1-16,2/1-16
device(config-if-eth-1/1-16,2/1-16)# no link-fault-signaling
device(device(config-if-eth-1/1-16,2/1-16) #
```

The following example shows link-fault-signaling information.

```
device# show link-fault-signaling
Port      Link-Fault
===== =====
Eth 1/1    OFF
Eth 1/2    ON
Eth 1/3    ON
Eth 1/4    ON
Eth 1/5    ON
Eth 1/6    ON
Eth 1/7    ON

Gnmi set on management port -
```

## show listener-policy

Displays a list of all or specified listener policies on the device.

### Syntax

```
show listener-policy { name | all }
```

### Parameters

*name*

Specifies the name of the configured listener policy.

**all**

Displays all configured listener policies on the device.

### Modes

Exec mode

### Examples

The following example shows configuration parameters for the listener policy IPV6.

```
device# show listener-policy IPV6
listener-policy IPV6 65
match ipv6 access-list IPv6-1
truncate 1280 description policy v6 is applied
Policy matches: 11 packets, 1573 bytes
```

The following example shows all listener policies.

```
device# show listener-policy all
listener-policy IPV6
Policy-1
Policy matches: 11 packets, 1573 bytes
```

## show logging

Displays logging information.

### Syntax

```
show logging audit [ config | firmware | security ]  
show logging file  
show logging id 1-60000
```

### Parameters

#### **audit**

Displays audit logging entries.

#### **config**

Displays configuration related log information.

#### **firmware**

Displays firmware related log information.

#### **security**

Displays security related log information.

#### **file**

Selects file for general log entries.

#### **id 1-60000**

Selects log ID to see the description.

### Modes

Exec mode

### Examples

The following example shows audit logging firmware information.

```
device# show logging audit firmware  
Wed 28 Apr 2021 23:07:27.971 UTC +0000 LogID:5021 Info Msg: Firmware change successful.  
Current Firmware Version is NGNPB_v21.0.7.0-20210427_045749.UTC
```

The following example shows logging information for ID 5001.

```
device# NPB# show logging id 5001  
Log ID: 5001  
Level : Fatal  
Message : Unable to connect to Operational Database  
Probable cause: Database is down  
Remedy : Check Database status  
Impact : Service not operational
```

The following example shows audit logging file information.

```
show logging file
2021-04-22 12:17:01.2425 liblogging-stdlog: [origin software="rsyslogd"
swVersion="8.24.0" x-pid="17744" x-info="http://www.rsyslog.com"] rsyslogd was HUPed
2021-04-22 17:17:02.8468 liblogging-stdlog: [origin software="rsyslogd"
swVersion="8.24.0" x-pid="17744" x-info="http://www.rsyslog.com"] rsyslogd was HUPed
2021-04-22 21:17:02.3471 liblogging-stdlog: [origin software="rsyslogd"
swVersion="8.24.0" x-pid="17744" x-info="http://www.rsyslog.com"] rsyslogd was HUPed
--More--
```

The following example shows audit logging configuration information.

```
show logging audit config
Sat 16 Jan 2021 17:02:05.512 UTC +0000 LogID:8001 Info Msg: nouser/norole/none/ssh/cli,
Status:100 Command:'operational assigned to groups: admin'
Mon 25 Jan 2021 22:52:24.557 UTC +0000 LogID:8001 Info Msg: nouser/norole/none/ssh/cli,
Status:100 Command:'operational assigned to groups: admin'
Mon 25 Jan 2021 22:57:38.538 UTC +0000 LogID:8001 Info Msg: admin/admin sudo docker/
none/ssh/cli, Status:100 Command:'operational assigned to groups: admin'
Mon 25 Jan 2021 22:57:42.089 UTC +0000 LogID:8001 Info Msg: admin/admin sudo docker/
none/ssh/cli, Status:0 Command:'operational conf t'
Mon 25 Jan 2021 22:59:34.316 UTC +0000 LogID:8001 Info Msg: admin/admin sudo docker/
none/ssh/cli, Status:0 Command:'configure (config) exit'
Mon 25 Jan 2021 23:18:12.456 UTC +0000 LogID:8001 Info Msg: admin/admin sudo docker/
none/ssh/cli, Status:100 Command:'operational assigned to groups: admin'
Fri 29 Jan 2021 14:51:42.566 UTC +0000 LogID:8001 Info Msg: nouser/norole/none/ssh/cli,
Status:100 Command:'operational assigned to groups: admin'

--More--
```

## show mac access-list

Displays all or specific MAC ACLs.

### Syntax

```
show mac access-list { name | all }
show mac access-list all route-map
show mac access-list all listener-policy
```

### Parameters

#### *name*

Specifies the name of the MAC ACL or all MAC ACLs and displays a list of MAC ACL rule entries configured for the specified ACL.

#### **all**

Displays all MAC ACLS with aggregated stats.

#### **route-map**

Displays all MAC ACLS mapped to a route map.

#### **listener-policy**

Displays MAC ACLs mapped to a listener policy.

### Modes

Exec mode

### Examples

The following example shows all MAC ACLs.

```
device# show mac access-list all
mac access-list mac2
  seq 10 permit aa:aa:aa:aa:aa:aa FF:FF:FF:FF:FF:FF any ( 0 Packets,
  ➔ 0 Bytes, 0 Packets/sec, 0 Bits/sec )

mac access-list mac3
  seq 90 permit gtpu 4294967295 02:02:02:02:02:02 02:02:02:02:02:02 any
  ➔ ( 0 Packets, 0 Bytes, 0 Packets/sec, 0 Bits/sec )
```

The following example shows all ACLs bound to a route map.

```
device# show mac access-list all route-map
Route map: rml
  mac access-list mac3
    seq 90 permit gtpu 4294967295 02:02:02:02:02:02 02:02:02:02:02:02 any
    ➔ ( 0 Packets, 0 Bytes, 0 Packets/sec, 0 Bits/sec )
```

The following example shows all listener policies bound to a route map.

```
device# show mac access-list all listener-policy
Listener policy: LP1
```

```
mac access-list mac2
  seq 10 permit aa:aa:aa:aa:aa:aa FF:FF:FF:FF:FF any
    ➔( 0 Packets, 0 Bytes, 0 Packets/sec, 0 Bits/sec )
```

## show media

Displays detail information about media on the specified interface.

### Syntax

```
show media [ detected | interface IFNAME | supported ]
```

### Parameters

**media**

**detected**

Displays media detected in chassis.

**interface IFNAME**

Displays media information associated with the specified physical interface.

**supported**

Displays supported media information.

### Modes

Exec mode

### Examples

The following example shows media detected in the chassis.

```
device# show media detected
S/C   Qual   Optical Type      PartNum          Serial Num   Vendor        Description
-----
-- 
1/1    No     QSFP28          AA1405031-E6    16CN10300147  Volex Inc.    Volex QSFP media
1/2    No     QSFP28          AA1405031-E6    16CN10300147  Volex Inc.    Volex QSFP media
1/3    No     QSFP28          AA1405031-E6    16CN10300147  Volex Inc.    Volex QSFP media
1/4    No     QSFP28          AA1405031-E6    16CN10300147  Volex Inc.    Volex QSFP media
2/16   No     SFP28           BBA1405031-E6   18CN10300147  Molex Inc.    Molex QSFP media
```

The following example shows detail for ethernet 1/1.

```
device# show media interface ethernet 1/1
          Cage: 1
          Slot: 1
          Qual: Yes
          Optical: yes
          State: Inserted
          Module Type: QSFP28
          Part Number: 57-1000326-01
          Serial Number: YTA1202200001K5
          Vendor: BROCADE
          Description: 100G SR4 QSFP28
          Channels: 4
          Datecode: 200531
          Voltage: 3.22
          Temperature: 32.900000
          RxPower: 0.270000
```

```
TxBias: 7.49  
TxPower: -0.07
```

The following command lists supported media.

device# show media supported			
Type	PartNum	Vendor	Description
qsfp	57-1000129-01	BROCADE	40GBase-SR4 QSFP
qsfp	57-1000263-01	BROCADE	40G QSFP+LR4 10KM
qsfp	58-0000033-01	BROCADE	40G-QSFP-QSFP 1m cable passive
qsfp	58-0000034-01	BROCADE	40G-QSFP-QSFP 3m cable passive
qsfp	58-0000035-01	BROCADE	40G-QSFP-QSFP 5m cable passive
qsfp	58-0000041-01	BROCADE	40G-QSFP-QSFP 1m Active Copper
qsfp	58-0000042-01	BROCADE	40G-QSFP-QSFP 3m Active Copper
qsfp	58-0000043-01	BROCADE	40G-QSFP-QSFP 5m Active Copper
qsfp	57-1000325-01	BROCADE	40G-QSFP+ LM4
qsfp	57-1000306-01	BROCADE	40G QSFP to QSFP cable 10m AOC
qsfp	57-1000339-01	BROCADE	40G QSFP BIDI Optic
qsfp	AFBR-79EBPZ	AVAGO	40G QSFP BIDI Optic
qsfp	AFBR-79EBRZ	AVAGO	40G QSFP BIDI Receiver Optic
qsfp	58-0000053-01	BROCADE	4x10G QSFP 5m Active Copper Cable

## show ntp association

Displays NTP association information.

### Syntax

```
show ntp association detail
```

### Parameters

```
association detail
```

Displays NTP association information in detail.

### Modes

Exec mode

### Examples

The following example shows NTP association information.

```
device# show ntp association

remote          refid      st t when poll reach    delay    offset    jitter
=====
*10.24.12.107  10.6.24.32    2 u 356 512 377    0.731    0.915    0.137

* synced, # selected, + candidate, - outlayer, x falseticker, ~ configured

device# show ntp as d
[detail] display ntp association in detail

device# show ntp association detail

ind assid status conf reach auth condition last_event cnt
=====
1 41294 8011 yes no none reject mobilize 1
2 41295 8011 yes no none reject mobilize 1
3 41296 8011 yes no none reject mobilize 1
4 41297 8011 yes no none reject mobilize 1
```

## show ntp status

Displays the NTP status information.

### Syntax

```
show ntp status
```

### Parameters

**status**

Displays NTP information.

### Modes

Exec mode

### Examples

The following example shows NTP status information.

```
device# show ntp status

Clock is synchronized, stratum 3, reference clock is 10.24.12.107,
precision is -16,
reference time is e35f7b06.7cc6df3e Wed, Nov 18 2020 10:50:46.487,
clock offset is 0.534396, root delay is 85.256,
root dispersion is 79.806, peer dispersion is 4504,
NTP client mode is enabled

device# show ntp status
Clock is unsynchronized, no reference clock
NTP client mode is disabled
```

## show role

Displays all role information for the system.

### Syntax

```
show role
```

### Modes

Exec mode

### Usage Guidelines

### Output

The **show role** command displays the following information:

Output field	Description
Role:	Displays the name of the role.
Type:	Displays the role type; for example, a role can be system-defined
Description:	Displays additional information about the role and the permissions associated with that role.

### Examples

The following example shows the defined roles available in the system.

```
device# show role
Role: admin
Type: SYSTEM_DEFINED
Description: Predefined admin role has access to all commands

Role: user
Type: SYSTEM_DEFINED
Description: Predefined user role has access to Show
commands and selected Exec commands
```

## show route-map

Displays operational information a configured route map.

### Syntax

```
show route-map [ name | all ]
```

### Parameters

*name*

Specifies the name of the route map.

**all**

Specifies all configured route maps.

### Modes

Exec mode

### Output

The **show route-map** command displays match access-list status information, shown in the following examples.

Output field	Description
match ip access-list acl4 (active)	(active) status indicates that the bound match ACL has been created configured.
match mac access-list acl2 (pending)	(pending) status indicates that the bound match ACL has not been created or configured.

### Examples

The following example shows the route map, rmap1.

```
# show route-map rmap1
route-map rmap1 1
forward-action permit
match ip access-list acl4 (active)
match mac access-list acl2 (pending)
egress-group eg1

Policy matches: 0 packets, 0 bytes, 0 Packets/sec, 0 Bits/sec
```

## show running-config

---

Displays the current running configuration.

### Syntax

```
show running-config
```

### Parameters

#### **interface**

Displays the running-configuration section.

##### **ethernet slot/port**

Displays the specified ethernet port.

##### **loopback num**

Displays the loopback port.

##### **pos slot/port**

Displays the specified POS port.

##### **tunnel num**

Displays the specified tunnel port.

##### **ve num**

Displays the specified Virtual Ethernet (VE) port.

#### **lag**

Displays the LAG running-configuration section.

##### **detailed**

Displays the LAG running-configuration information in detail.

##### **id lag\_id**

Displays the specified LAG running-configuration.

##### **name lag\_name**

Displays the specified LAG running-configuration name.

#### **vlan**

Displays the VLAN running-configuration section.

### Modes

User EXEC mode

### Usage Guidelines

Use this command with filtering for the specific command for which you want to review the current configuration on the device. Most commands are available in this format using either the begin or the include options. See the Example section for examples of each option.

## Examples

The following example displays the **show running-config** command. Notice that the interface bandwidth command is displayed as part of the interface configuration.

```
device#show running-config interface tunnel 2
interface tunnel 2
  tunnel mode gre ip
  tunnel source 169.70.15.2
  tunnel destination 169.70.15.1
  ip address 199.0.0.2/24
  bandwidth 2000
```

The following example displays the **show running-config** command executed on an Ethernet interface.

```
device#show running-config interface ethernet 8/1
interface e 8/1
rate-limit input vlan-id 2 broadcast multicast 97728 10000 include-control
rate-limit input broadcast multicast 97728 10000 include-control
rate-limit input access-group name ipv4_acl 100000 10000 include-control
```

The following example displays partial output when 802.1BR header stripping is enabled on all PPCRs.

```
device# show running-config
packet-enap-processing
  strip-802-1br all
(output
  truncated)
```

## show running-config aaa accounting

---

Displays the Authentication, Accounting, and Authorization (AAA) server accounting configuration.

### Syntax

```
show running-config aaa accounting
```

### Modes

Exec mode

### Usage Guidelines

Refer to the `aaa authentication` command for a description of the displayed attributes.

### Examples

The following example shows the authentication mode.

```
device# show running-config aaa accounting
aaa accounting exec default start-stop tacacs+
aaa accounting commands default start-stop tacacs+
```

## show running-config access-list

### Syntax

```
show running-config access-list [ name ]
```

### Parameters

*name*

Specifies the name of an access-list.

### Modes

Exec mode

### Usage Guidelines

You can run this command without specifying a name to display configuration information for all.

### Examples

The following example shows configuration information for all configured ACLs.

```
device# show running-config access-list
ipv6 access-list ip6-acl
    seq 10 permit ipv6 2001::1 2001::0 2002::2 2002::0

ip access-list ip-acl
    seq 20 permit ip 10.0.0.1 255.0.0.0 20.0.0.2 255.0.0.0

mac access-list L2
```

The following example shows configuration for ip6-acl.

```
device# show running-config access-list ip6-acl
ipv6 access-list ip6-acl
    seq 10 permit ipv6 2001::1 2001::0 2002::2 2002::0
```

## show running-config egress

Displays configuration information for configured egress.

### Syntax

```
show running-config egress name
```

### Parameters

*name*

Specifies the name of the egress.

### Modes

Exec mode

### Usage Guidelines

You can run this command without specifying a name to display configuration information for all.

### Examples

The following example shows egress configuration information for ep1.

```
device# show egress ep1
      Name : ep1
      Description : egress_obj_1

      Encap : encaps_gre
      Listener Policy : lpl1
      Precedence : 10
      Interface : ethernet 1/2
```

The following example show configuration information for all configured egresses.

```
device# show egress all
      Name : e1
      Description : egress_obj_1
      Encap : encaps_gre
      Listener Policy : v4
      Precedence : 12
      Interface : ethernet 1/9
```

## show running-config egress-group

Displays configuration detail for egress groups.

### Syntax

```
show running-config egress-group [ name ]
```

### Parameters

*name*

Specifies the egress group name.

### Modes

Exec mode

### Usage Guidelines

You can run this command without specifying a name to display configuration information for all.

### Examples

The following example shows configuration information for all configured egress groups.

```
device# show running-config egress-group
egress-group eg_1
    description egress-group_1
    set egress e2
egress-group eg_2
    description egress-group_2
```

## show running-config ingress

Displays ingress configuration information.

### Syntax

```
show running-config ingress [ name ]
```

### Parameters

*name*

Specifies an ingress.

### Modes

Exec mode

### Usage Guidelines

You can run this command without specifying a name to display configuration information for all.

### Examples

The following example shows configuration for ingress ig2.

```
show running-config ingress ig2
ingress-group ig2
ingress-group TAP_TRAFFIC
ingress-group TAP_TRAFFIC2
description To_Tool
```

The following example shows configuration for all configured ingresses.

```
show running-config ingress
ingress-group ig2
ingress-group TAP_TRAFFIC
ingress-group TAP_TRAFFIC2
description To_Tool
```

## **show running-config ip dns**

Displays configuration detail for IP DNS configurations.

### Syntax

```
show running-config ip dns
```

### Modes

Exec mode

### Examples

The following example shows configuration detail for all IP domain name servers.

```
device# show running-config ip dns
ip dns domain-name corp.extremenetworks.com
ip dns domain-name extremenetworks.com
ip dns name-server 10.6.16.32
ip dns name-server 10.6.24.30
ip dns name-server 1111:2222::1
```

## show running-config listener-policy

Displays configuration detail of a listener policy for an egress.

### Syntax

```
show running-config listener-policy [ name ]
```

### Parameters

*name*

Specifies the name of the listener policy.

### Modes

Exec mode

### Usage Guidelines

You can run this command without specifying a name to display configuration information for all.

### Examples

The following example shows the IPv6 listener policy configuration.

```
device# listener-policy ipv6
  Policy-1 65  match ip access-list
  ipv4-1  match ipv6 access-list
  ipv6-1
  truncate 1280
  strip br-tag
  description policy v6 is applied
```

## show running-config route-map

Displays route-map configuration information for the current system.

### Syntax

```
show running-config route-map name
```

### Parameters

*name*

Specifies the name of the route map.

### Modes

Exec mode

### Usage Guidelines

You can run this command without specifying a name to display configuration information for all.

### Examples

The following example shows configuration information for rmap1.

```
device# show running-config route-map rmap1
route-map rmap1 10
    forward-action permit
```

The following example shows configuration information for all route maps.

```
device# show running-config route-map
route-map R1 10
    forward-action permit
    match ip access-list test_1
    set egress-group eg_1
route-map R1 12
    forward-action permit
    match ip access-list test_2
route-map rmap1 10
    forward-action permit
```

## show running-config snmp-server

---

Displays running SNMP configurations on the device.

### Syntax

```
show running-config snmp-server
```

### Modes

Exec mode

### Examples

The following example shows all SNMP configurations tried on the device.

```
device# show running-config snmp-server
snmp-server location loc1
snmp-server contact cont1
snmp-server sys-descr desc
snmp-server community test123
```

## show running-config system logging host

Displays logging host configuration details.

### Syntax

```
show running-config system logging host [ name ]
```

### Parameters

*name*

Specifies hostname or label.

### Modes

Exec mode

### Usage Guidelines

You can run this command without specifying a name to display configuration information for all.

### Examples

The following example shows configuration for all logging hosts on the device.

```
device# show running-config system logging host
system logging host H1
    address 1.1.1.1

system logging host logger
    address 192.168.1.1
    port 514
    transport TCP
    secure-forwarding TLS

system logging host myServer
    address 10.20.30.40
    port 515
device#
```

The following example shows configuration information for the logging host **logger**.

```
device# show running-config system logging host logger
system logging host logger
    address 192.168.1.1
    port 514
    transport TCP
    secure-forwarding TLS
```

## show running-config system logging service

Displays configured logging severity levels for microservices.

### Syntax

```
show running-config system logging service [chassis-ms | ifmgr-ms | mgmt-security | mgmt-snmp-agent | mgmtsvc-apigw | pktmgr-ms ] ]
```

### Parameters

#### **chassis-ms**

Specifies chassis service.

#### **ifmgr-ms**

Specifies interface manager service.

#### **mgmt-security**

Specifies security service.

#### **mgmt-snmp-agent**

Specifies SNMP agent service.

#### **mgmtsvc-apigw**

Specifies API gateway service.

#### **pktmgr-ms**

Specifies packet manager service.

### Modes

### Usage Guidelines

You can run this command without specifying a name to display configuration information for all.

### Examples

The following example shows the configuration for the Chassis service.

```
device# show running-config system logging service chassis-ms
```

## **show running-config tacacs-server**

Display the TACACS+ server configuration.

### Syntax

```
show running-config tacacs-server
```

### Modes

Exec mode

### Examples

The following example shows the TACACS+ server configuration.

```
device# show running-config tacacs-server
tacacs-server host 10.24.65.6
    encrypted-key "jahasjikjdoaskjuiuhiaoljsiaknkaiua="
```

## show running-config username

Displays all usernames and role, password, and encryption level for each.

### Syntax

```
show running-config username
```

### Modes

Exec mode

### Examples

The following example shows username, role, password, and encryption level for each.

```
device# show running-config username

username testuser1 role admin password $6$salt$cevuzTZ
↳ /QbjzuZG0/ebEeedmcTnhyM8ITUu8K032Cp2XvIibq7voqYagm18bwpLBqrg
↳ /1/l6YxTmKKibJz5r10 encryption-level 10

username testuser2 role user password $6$salt$cevuzTZ
↳ /QbjzuZG0/ebEeedmcTnhyM8ITUu8K032Cp2XvIibq7voqYagm18bwpLBqrg
↳ /1/l6YxTmKKibJz5r10 encryption-level 10
```

## **show snmp server**

Displays all SNMP-related information on the device.

### Syntax

```
show snmp server
```

### Modes

Exec mode

### Examples

The following example shows SNMP-related information for the device.

```
device# show snmp server
snmp-server community comm1
snmp-server community comm3
snmp-server community comm4
snmp-server community comm5
snmp-server host 10.23.17.128 public 162 version 2c
```

## show sysinfo all

Displays all system HW component information such as FAN, PSU, sensors, slots, and LEDs.

### Syntax

```
show sysinfo all
```

### Parameters

**all**

Displays all hardware information.

### Modes

Exec mode

### Examples

The following example shows all hardware information.

```
device# show sysinfo all
Fan Information
Id      Status     RPM    Percentage SpeedLevel      Direction
-----
1       Up        7300   41      MEDIUM          FAN_DIR_F2B
2       Up        7300   41      MEDIUM          FAN_DIR_F2B
3       Up        7300   41      MEDIUM          FAN_DIR_F2B
4       Up        7300   41      MEDIUM          FAN_DIR_F2B
5       Up        7300   41      MEDIUM          FAN_DIR_F2B

FAN_DIR_F2B - Fan Airflow Direction is FrontToBack

FanSpeedLevel - <40%[LOW],40-70%[MEDIUM],>70%[HIGH]

Led Information
Id      State     Color     Description
-----
led-0  Solid     GREEN    Power Supply Unit
led-1  Solid     GREEN    Fan
led-2  Solid     GREEN    System Status

PSU Information
Id      Status     Type     C[in]    C[out]    P[in]    P[out]    V[in]    V[out]
-----
1       Up        AC       3         53        684      632      206      11
2       Up        AC       3         51        660      612      206      11

**C - Current in Amps ,**P - Power in Watts ,**V - Voltage in Volts
Total power budget for chassis = 3200 Watts
Total power used by LC and system core = 2040 Watts
Total power available = 1160 Watts
Power Board CpldVersion = 00 09
Sensor Information
Id           Name           Current(°C/Volt)    Warning(°C/Volt)    Critical(°C/Volt)
Shutdown(°C/Volt)
```

-----			
1	CPU Core	37	85
90.00	0.00		
2	TF2 MAC	42.00	75
80	95.00		
3	TF2 Serdes1	56.00	80.00
85.00	95		
4	TF2 Serdes2	50.00	80.00
85	95		
5	TF2 Serdes3	54	80.00
85	95.00		
6	TF2 Serdes4	53	80.00
85.00	95		
7	LC1 PHY MAX	70.00	115
120.00	125.00		
8	LC1 QSFP MAX	38	63.00
68.00	73.00		
9	LC2 PHY MAX	67	115.00
120	125.00		
10	LC2 QSFP MAX	38.00	63
68.00	73.00		
11	LC3 PHY MAX	66	115.00
120	125		
12	LC3 QSFP MAX	41.00	63.00
68	73.00		
13	LC4 PHY MAX	67	115.00
120.00	125.00		
14	LC4 QSFP MAX	40	63.00
68	73		
15	LC5 PHY MAX	67	115.00
120.00	125		
16	LC5 QSFP MAX	36	63
68	73.00		
17	LC6 PHY MAX	59.00	115.00
120.00	125.00		
18	LC6 QSFP MAX	28.00	63.00
68.00	73.00		
19	LC7 PHY MAX	57.00	115.00
120.00	125		
20	LC7 QSFP MAX	0.00	63
68.00	73		
21	LC8 PHY MAX	64.00	115.00
120.00	125.00		
22	LC8 QSFP MAX	44.00	63
68.00	73		
23	DIMM1	36	80
85.00	0		
24	DIMM2	32	80
85.00	0		
25	DIMM3	35	80
85.00	0.00		
26	DIMM4	33.00	80
85.00	0.00		
27	SSD	39.00	75.00
80.00	0.00		
28	BMC-12V	12.00	0
12	12.00		
29	BMC-3_3V	3	0.00
3.00	3		
30	SWB-075V	0	0
0	0.00		
31	SWB-3_3V	3.00	0.00
3	3.00		
32	SWB-2_5V	2.00	0.00

2.00		2.00	
33	SWB-1_8V	1	0.00
1.00			
34	SWB-1_5V	1.00	0.00
1.00			
35	SWB-1_2V	1.00	0
1		1.00	

## Slot Information

Slot	State	FRU-Id	FRU-Type	Description
<hr/>				
1	Online	1	LC16x100G	16x100G QSFP28 Line Card
2	Online	1	LC16x100G	16x100G QSFP28 Line Card
3	Online	1	LC16x100G	16x100G QSFP28 Line Card
4	Online	1	LC16x100G	16x100G QSFP28 Line Card
5	Online	1	LC16x100G	16x100G QSFP28 Line Card
6	Online	1	LC16x100G	16x100G QSFP28 Line Card
7	Online	1	LC16x100G	16x100G QSFP28 Line Card
8	Online	1	LC16x100G	16x100G QSFP28 Line Card

## show sysinfo fan

Displays all 5 FAN HW component information.

### Syntax

```
show sysinfo fan
```

### Parameters

**fan**

Displays fan hardware information.

### Modes

Exec mode

### Examples

#### Usage Guidelines

The Airflow direction is by default FrontToBack.

The following example shows all hardware information.

```
device# show sysinfo fan

Fan Information
Id      Status     RPM    Percentage  SpeedLevel   Direction
-----
1       UP         4300    24          LOW          FAN_DIR_F2B
2       UP         4100    23          LOW          FAN_DIR_F2B
3       UP         4300    24          LOW          FAN_DIR_F2B
4       UP         4300    24          LOW          FAN_DIR_F2B
5       UP         4300    24          LOW          FAN_DIR_F2B

FAN_DIR_F2B - Fan Airflow Direction is FrontToBack
FanSpeedLevel - <40%[LOW], 40-70%[MEDIUM], >70%[HIGH]
```

## show sysinfo led

Displays the front panel system LED values.

### Syntax

```
show sysinfo led
```

### Parameters

**led**

Displays system LED status.

### Modes

Exec mode

### Usage Guidelines

The steady Green LEDs indicate that there are no issues and the steady or blinking Amber LEDs indicate a warning.

### Examples

The following example shows system LED status.

```
device# show sysinfo led

Led Information
Id      State     Color      Description
-----
led-0   Solid     GREEN     Power Supply Unit
led-1   Solid     GREEN     Fan
led-2   Solid     GREEN     System Status
```

## show sysinfo power-supply

Displays the hardware power supply information.

### Syntax

```
show sysinfo power-supply
```

### Parameters

**power-supply**

Displays power supply status.

### Modes

Exec mode

### Examples

The following example configures the vxlan traffic type.

```
device# show sysinfo power-supply

PSU Information
Id      Status     Type    C[in]   C[out]   P[in]   P[out]   V[in]   V[out]
-----
1       UP         AC      2        33       408     130      210      11
2       UP         AC      2        32       424     143      210      11
3       Unplugged  Empty   0        0        0       0        0        0
4       Unplugged  Empty   0        0        0       0        0        0

Total power budget for chassis = 3200 Watts
Total power used by LC and system core = 2040 Watts
Total power available = 1160 Watts
```

## show sysinfo sensor

Displays sensor data.

### Syntax

```
show sysinfo sensor [ all | cpu | lc | mem_mod | voltage ]
```

### Parameters

#### all

Displays information for all sensors.

#### cpu

Displays CPU information.

#### lc

Displays line card (slot) information.

#### mem\_mod

Displays memory module information.

#### voltage

Displays voltage information.

### Modes

Exec mode

### Examples

The following example shows information for all sensors.

```
device# show sysinfo sensor all
Sensor Information
Id      Name          Current(°C/Volt)    Warning(°C/Volt)    Critical(°C/Volt)
Shutdown(°C/Volt)

-----
1       CPU Core      33                  85
90.00   0
2       TF2 MAC       41                  75
80      95.00
3       TF2 Serdes1   56                  80.00
85.00   95
4       TF2 Serdes2   50.00               80.00
85      95
5       TF2 Serdes3   54.00               80.00
85.00   95
6       TF2 Serdes4   53.00               80
85.00   95.00
7       LC1 PHY MAX  70                  115
120     125
8       LC1 QSFP MAX 38                  63.00
68.00   73
9       LC2 PHY MAX  67.00               115.00
120.00  125.00
```

10	LC2 QSFP MAX	38.00	63.00
68.00	73		
11	LC3 PHY MAX	66.00	115.00
120.00	125.00		
12	LC3 QSFP MAX	41.00	63.00
68.00	73.00		
13	LC4 PHY MAX	67.00	115.00
120.00	125.00		
14	LC4 QSFP MAX	40	63
68	73		
15	LC5 PHY MAX	67	115
120.00	125.00		
16	LC5 QSFP MAX	36	63.00
68.00	73		
17	LC6 PHY MAX	59	115.00
120.00	125.00		
18	LC6 QSFP MAX	28.00	63.00
68	73.00		
19	LC7 PHY MAX	57	115
120.00	125		
20	LC7 QSFP MAX	0.00	63.00
68.00	73.00		
21	LC8 PHY MAX	64	115
120.00	125		
22	LC8 QSFP MAX	44.00	63
68.00	73		
23	DIMM1	36	80.00
85.00	0.00		
24	DIMM2	32	80.00
85	0.00		
25	DIMM3	35.00	80.00
85	0		
26	DIMM4	33.00	80
85.00	0.00		
27	SSD	39	75
80	0		
28	BMC-12V	12	0
12.00	12		
29	BMC-3_3V	3.00	0
3.00	3		
30	SWB-075V	0	0.00
0.00	0.00		
31	SWB-3_3V	3.00	0
3	3		
32	SWB-2_5V	2	0
2.00	2.00		
33	SWB-1_8V	1.00	0
1	1.00		
34	SWB-1_5V	1	0.00
1	1		
35	SWB-1_2V	1	0
1.00	1.00		

The following example shows CPU information.

```
device# show sysinfo sensor cpu

Sensor Information
Id          Name           Current(°C/Volt)    Warning(°C/Volt)   Critical(°C/Volt)
Shutdown(°C/Volt)

-----
1          CPU Core        33                  85.00
90.00          0
2          TF2 MAC         41                  75.00
```

80		95	
3	TF2 Serdes1	56.00	80.00
85.00		95	
4	TF2 Serdes2	50.00	80
85.00		95.00	
5	TF2 Serdes3	54.00	80
85		95	
6	TF2 Serdes4	53.00	80.00
85		95	

The following module show line card (slot) information.

Sensor Information				
Id	Name	Current(°C/Volt)	Warning(°C/Volt)	Critical(°C/Volt)
	Shutdown(°C/Volt)			
7	LC1 PHY MAX	70	115.00	
120		125.00		
8	LC1 QSFP MAX	38.00	63.00	
68		73.00		
9	LC2 PHY MAX	67	115.00	
120		125.00		
10	LC2 QSFP MAX	38.00	63	
68.00		73		
11	LC3 PHY MAX	66	115	
120.00		125		
12	LC3 QSFP MAX	41.00	63.00	
68		73.00		
13	LC4 PHY MAX	67	115	
120		125		
14	LC4 QSFP MAX	40.00	63.00	
68		73		
15	LC5 PHY MAX	67	115	
120		125		
16	LC5 QSFP MAX	36.00	63	
68		73		
17	LC6 PHY MAX	59.00	115.00	
120.00		125		
18	LC6 QSFP MAX	28.00	63	
68		73.00		
19	LC7 PHY MAX	57.00	115.00	
120.00		125		
20	LC7 QSFP MAX	0.00	63.00	
68		73.00		
21	LC8 PHY MAX	64	115.00	
120.00		125.00		
22	LC8 QSFP MAX	44	63.00	
68.00		73		

The following example shows memory module information.

Sensor Information				
Id	Name	Current(°C/Volt)	Warning(°C/Volt)	Critical(°C/Volt)
	Shutdown(°C/Volt)			
23	DIMM1	36	80	
85		0		
24	DIMM2	32	80.00	
85.00		0.00		
25	DIMM3	35	80.00	

85.00		0.00		
26	DIMM4		33	80.00
85.00		0		
27	SSD		39.00	75

The following example shows voltage information.

```
device# show sysinfo sensor voltage

Sensor Information
Id          Name           Current(°C/Volt)   Warning(°C/Volt)   Critical(°C/Volt)
Shutdown(°C/Volt)

-----
28          BMC-12V        12.00             0
12.00       12.00
29          BMC-3_3V       3.00              0
3.00        3.00
30          SWB-075V      0.00              0.00
0           0
31          SWB-3_3V       3.00              0.00
3.00        3.00
32          SWB-2_5V       2.00              0.00
2           2.00
33          SWB-1_8V       1                 0.00
1.00        1
34          SWB-1_5V       1.00              0.00
1           1.00
35          SWB-1_2V       1.00              0
1.00        1.00
36          SWB-1V         1                 0
1           1
37          SWB-VCORE      0                 0
0           0
```

## show sysinfo slots

Displays the line card or slot status.

### Syntax

```
show sysinfo slots
```

### Parameters

**slots**

Displays the slot part type and status information.

### Modes

Exec mode

### Examples

The following example displays the line card or slot status information.

```
device# show sysinfo slots
Slot Information
Slot State      FRU-Id  FRU-Type   Description
-----
1  Initializing  1       LC16x100G  16x100G QSFP28 Line Card
2  Initializing  1       LC16x100G  16x100G QSFP28 Line Card
3  Initializing  1       LC16x100G  16x100G QSFP28 Line Card
4  Initializing  1       LC16x100G  16x100G QSFP28 Line Card
5  Initializing  1       LC16x100G  16x100G QSFP28 Line Card
6  Initializing  1       LC16x100G  16x100G QSFP28 Line Card
7  Initializing  1       LC16x100G  16x100G QSFP28 Line Card
8  Initializing  1       LC16x100G  16x100G QSFP28 Line Card

Slot Information
Slot State      FRU-Id  FRU-Type   Description
-----
1  Online        1       LC16x100G  16x100G QSFP28 Line Card
2  Online        1       LC16x100G  16x100G QSFP28 Line Card
3  Online        1       LC16x100G  16x100G QSFP28 Line Card
4  Online        1       LC16x100G  16x100G QSFP28 Line Card
5  Online        1       LC16x100G  16x100G QSFP28 Line Card
6  Online        1       LC16x100G  16x100G QSFP28 Line Card
7  Online        1       LC16x100G  16x100G QSFP28 Line Card
8  Online        1       LC16x100G  16x100G QSFP28 Line Card
```

## **show system logging host**

Displays successfully applied logging host details.

### Syntax

```
show system logging host [name ]
```

### Parameters

*name*

Specifies the hostname or label.

### Modes

Exec mode

### Usage Guidelines

No information displays if the specified host is not found.

### Examples

The following example shows logging information for all system logging hosts.

```
device# show system logging host
System Logging Hosts: System Logging Hosts:

HOSTNAME      ADDRESS        PORT      TRANSPORT    SECURE-FORWARDING
-----
H1            1.1.1.1        514       UDP          NONE
logger        192.168.1.1    514       TCP          TLS
myServer      10.20.30.40   515       UDP          NONE
NPB#
```

The following example shows logging information for system host `logger`.

```
device# show system logging host logger
System Logging Hosts:
HOSTNAME      ADDRESS        PORT      TRANSPORT    SECURE-FORWARDING
-----
logger        192.168.1.1    514       TCP          TLS
```

## show system internal

Shows data stored in the specified database in JSON format.

### Syntax

```
show system internal {{ cdb | sdb| psdb } keypath }
```

### Parameters

#### cdb

Specifies data in the config database.

#### sdb

Specifies data in the state database.

#### psdb

Specifies data in the persistent state database.

#### keypath

Specifies a YANG-compliant path.

### Modes

### Usage Guidelines

Depending on selected Database type and provided keypath, configured data will be showed in JSON format.

If the command is run with a keypath where data is not present in database, a “No Data” message is displayed.

### Examples

The following example shows internal config database information for route maps.

```
NPB# show system internal cdb /routemaps
key /routemaps
{
    "routemap": [
        {
            "name": "rm1",
            "routemap-instances": {
                "routemap-instance": [
                    {

```

```
    "config": {  
        "egress-group": "est",  
        "ipv4-acl": "acl1",  
        "permit-deny": true  
    },  
    "sequence-id": 10  
}  
]  
}  
}
```

## show system logging service

Displays severity level for a specified or all services.

### Syntax

```
show system logging service [chassis-ms | ifmgr-ms | mgmt-security |  
mgmt-snmp-agent | mgmtsvc-apigw | pktmgr-ms ] ]
```

### Parameters

#### **chassis-ms**

Specifies chassis service.

#### **ifmgr-ms**

Specifies interface manager service.

#### **mgmt-security**

Specifies security service.

#### **mgmt-snmp-agent**

Specifies SNMP agent service.

#### **mgmtsvc-apigw**

Specifies API gateway service.

#### **pktmgr-ms**

Specifies packet manager service.

### Modes

Exec mode

### Usage Guidelines

You can run this command without specifying a name to display configuration information for all.

### Examples

The following example shows the configured logging severity for all services.

```
device(config)#show system logging service  
Service          Severity  
===== =====  
chassis-ms        ERROR  
ifmgr-ms          DEBUG  
mgmt-security     DEBUG  
mgmt-snmp-agent   DEBUG  
mgmtsvc-apigw    DEBUG  
pktmgr-ms         DEBUG
```

## show system service

Displays all services and corresponding versions.

### Syntax

```
show system service
```

### Modes

Exec mode

### Examples

The following example shows all system services.

DEVICE#	SHOW SYSTEM SERVICE	SERVICE	CURRENT VERSION	ROLLBACK VERSION	READY	STATE	RESTARTS
		agent-pbd-ms	0.1.0	None	true	Running	0
		agent-pipeline-ms	0.1.0	None	true	Running	0
		agent-sp-intf-ms	0.1.0	None	true	Running	0
		agent-sp-nhop-ms	0.1.0	None	true	Running	0
		agent-sp-sfcs-ms	0.1.0	None	true	Running	0
		agent-sp-target-proxy-ms	0.1.0	None	true	Running	0
		agent-svcplane-ms	0.1.0	None	true	Running	0
		chassis-ms	0.1.0	None	true	Running	0
		ifmgr-ms	0.1.0	None	true	Running	0
		lacp-ms	0.0.1	None	true	Running	0
		lldp-ms	0.0.1	None	true	Running	0
		mgmt-cdb	0.0.1	None	true	Running	0
		mgmt-cli	0.0.1	None	true	Running	0
		mgmt-msgbus	0.0.1	None	true	Running	0
		mgmt-psdb	0.0.1	None	true	Running	0
		mgmt-sdb	0.0.1	None	true	Running	0
		mgmt-security	0.0.1	None	true	Running	0
		mgmt-snmp-agent	0.0.1	None	true	Running	0
		mgmtsvc-apigw	0.0.1	None	true	Running	1
		onboard-pcap-ms	0.1.0	None	true	Running	0
		pktmgr-ms	0.1.0	None	true	Running	0
		stratum-bf-tofino-model	0.3.5	None	true	Running	0

## show transport-tunnel

Displays configuration of all or specified transport tunnels.

### Syntax

```
show transport-tunnel [ all | tunnel-name ]
```

### Parameters

#### all

Displays configurations for all configured transport tunnels.

#### tunnel-name

Specifies the name of the tunnel.

### Modes

Exec mode

### Usage Guidelines

Valid transport tunnel name must be provided.

### Examples

The following example shows configured transport tunnel information for tunnel-1.

```
# show transport-tunnel tunnel-1
name          : tunnel-1
tunnel-type   : erspan
tunnel-id     : 12345
source IP     : 10.10.10.0
source IP mask: 255.255.255.0
dest IP       : 20.20.20.0
dest IP mask  : 255.0.0.0
ingress-group : ig1
```

## show version

Displays version information for firmware and services.

### Syntax

```
show version
```

### Modes

User EXEC mode

### Examples

```
NPB# show version

NGNPB Operating System Software
Copyright (c) 2020 Extreme Networks Inc.

Firmware Info:
Current Firmware Version: NGNPB_v21.0.7.0-20210430_082447_UTC
Rollback Firmware Version: None
BMC Firmware Version: None
Kernel: 4.14.49-OpenNetworkLinux

System Uptime: 0 day(s), 06:41:35

MicroService Info:
SERVICE          CURRENT      ROLLBACK      READY      STATE
RESTARTS          VERSION       VERSION
-----
-----
agent-pbd-ms     0.1.0        None         true       Running
    0
agent-pipeline-ms 0.1.0        None         true       Running
    0
agent-sp-intf-ms 0.1.0        None         true       Running
--More--
```

## shutdown

Enables (no shutdown) or disables (shutdown) an interface.

### Syntax

```
shutdown  
no shutdown
```

### Modes

Interface config mode

### Usage Guidelines

The **no shutdown** command enables the interface.

This command is available only to users with admin role.

### Examples

The following example disables the interface.

```
device# configure terminal  
device(config)# interface ethernet 1/10  
device(config-if-eth 1/10)# shutdown  
  
device(config)# interface ethernet 1/1-5  
device(config-if-eth 1/1-5)# shutdown  
  
device# show running interface ethernet 1/10  
Interface ethernet 1/10  
Shutdown
```

## **snmp-server community**

Configures the SNMP community.

### Syntax

```
snmp-server community name
no snmp-server community name
```

### Parameters

*name*

Name of community to support. Valid name string must be 2-64 characters.

### Modes

Config mode

### Usage Guidelines

You must have admin privileges to perform this task.

No more than 256 community strings can be configured.

All configured communities have READ-only permissions.

### Examples

The following example configures the extremero community for the SNMP server and confirms the configuration with the show command.

```
device# configure terminal
device(config)# snmp-server community extremero
device(config)# end

device# show snmp-server
snmp-server community extremero
snmp-server host 10.23.17.128 public 162 version 2c
```

The following example removes the extremero SNMP community .

```
device# configure terminal
device(config)# no snmp-server community extremero
```

## snmp-server host

Configures the agent with the SNMP trap destination information with the community attached to it.

### Syntax

```
snmp-server host ip-address community-string { udp-port version[1,2c] }  
no snmp-server host ip-address community-string { udp-port version[1,2c] }
```

### Parameters

*ip-address*

SNMP trap receiver IP address in the format of a valid IPv4 address.

*community-string*

Community string associated with SNMP traps. Valid length is 2 through 16 characters.

**udp-port**

Port on which the receiver is listening for SNMP traps. Default port is 162.

**version**

SNMP version to be used to send SNMP traps. Valid version is version 1 or version 2c, Default is version 2c.

### Modes

Config mode

### Usage Guidelines

You must have the admin role to perform this task.

This command combines a host and community string.

For a given host/community combination, you can enable either v1 or v2 SNMP traps.

### Examples

The following example configures the SNMP server with the community string using version 2c.

```
device# configure terminal  
device(config)# snmp-server host 10.23.17.128 public 162 version 2c
```

The following example removes the configured host and community string.

```
device# configure terminal  
device(config)# no snmp-server host 10.23.17.128 public
```

## source-ipv4-addr

Configures the source IP address for encapsulation of outgoing packets.

### Syntax

```
source-ipv4-addr ip-addr  
no source-ipv4-addr ip-addr
```

### Parameters

**source-ipv4-addr ip-addr**  
Specifies the IP address to be configured as source IP.

### Modes

Encap config mode

### Usage Guidelines

Validations for the command are as follows:

- Valid IP address must be provided.
- One IP address per encapsulation is allowed. Already configured IP address must be removed before configuring a new IP address.
- If the same command is executed more than once, the second and subsequent executions are ignored and no error is reported.
- If the [no] form of the command is run without the configuration, the command is ignored and no error is reported.

### Examples

The following example configures the source ipv4 address.

```
device(config-encap-1) # source-ipv4-addr 10.10.10.1  
device(config-encap-1) #  
  
Show running:  
device# show running-configuration  
  
encap encap-1  
source-ipv4-addr 10.10.10.1
```

## source-mac-addr

Configures the source MAC address for encapsulation of outgoing packets.

### Syntax

```
source-mac-addr mac-addr
no source-mac-addr mac-addr
```

### Parameters

**source-mac-addr** *mac-addr*

Specifies the MAC address to be configured as source MAC.

### Modes

Encap config mode

### Usage Guidelines

Validations for the command are as follows:

- Valid MAC address must be provided.
- One MAC address per encapsulation is allowed. Already configured MAC address must be removed before configuring a new MAC address.
- If the same command is executed more than once, the second and subsequent executions are ignored and no error is reported.
- If the [no] form of the command is run without the configuration, the command is ignored and no error is reported.

**Table 43: Error messages**

Error: Invalid address as Source MAC address	MAC address format should be XX:XX:XX:XX:XX:XX
Error: Source MAC address is already configured	Single destination MAC address per encapsulation is allowed
Error: Source and Destination MAC addresses cannot be same	Source and destination addresses must be different MAC addresses.
Error: invalid format	MAC address format should be XX:XX:XX:XX:XX:XX

### Examples

The following example configures the source MAC address.

```
device(config-encap) # source-MAC-addr 00:01:02:03:04:05
device(config-encap) #
```

```
Show running:  
device# show running-configuration  
  
encap encap-1  
destination-mac-addr 00:01:02:03:04:05
```

## speed (ethernet interfaces)

Configures the port speed on ethernet interfaces.

### Syntax

```
speed [ 40000 | 100000 | auto ]
```

### Parameters

**40000**

Specifies 40 Gbps port speed.

**100000**

Specifies 100 Gbps port speed.

**auto**

Specifies auto detection. This is the default port speed.

### Modes

Interface config mode

### Usage Guidelines

This command is available only to users with admin role.

This command is supported on Ethernet interfaces.

Speed 40G can be configured only on even numbered interfaces. When speed is configured on even interface, previous odd interface is not be deleted, but will not be available for use.

**Table 44: Error messages**

Error message	Reason
Invalid Speed	Valid speed values are 40000, 100000, or auto.
Port 2/15 does not support this config. Only on even numbered ports speed 40 Gbps is supported.	Attempt to configure 40Gbps on odd-numbered port.
Speed configuration not allowed on interface 2/16 when FEC is configured	FEC is already configured on this interface.

### Examples

The following example configures the port speed on Ethernet interfaces.

```
device# configure terminal
device(config)# interface ethernet 1/1
device(config-if-mgmt-0)# speed 40000
```

```
device# show running-config interface e 1/1
interface ethernet 1/1
  speed 40000
  shutdown

device# configure terminal
device(config-if-eth-2/16)# speed 40000
WARN: Configuring 40G on interface is a disruptive action and will result ports 2/15 to
be unavailable for use.

device(config-if-eth-1/2)# speed 10000
Invalid Speed

device(config-if-eth-2/15)# speed 40000
Port 2/15 does not support this config. Only on even numbered ports speed 40G is
supported.

device(config-if-eth-2/16)# speed 40000
Error: Speed configuration not allowed on interface 2/16 when FEC is configured.
```

## speed (management interfaces)

Configures the port speed on management interfaces.

### Syntax

```
speed [ 40000 | 100000 | auto ]
```

### Parameters

**40000**

Specifies 40 Gbps port speed.

**100**

Specifies 100 Gbps port speed.

**auto**

Specifies auto-detection. This is the default port speed.

### Modes

Interface config mode

### Usage Guidelines

This command is available only to users with admin role.

This command is supported on management interfaces.

You can configure 40G speed setting on even numbered interfaces only.

### Examples

The following example configures the port speed on management interfaces.

```
device# configure terminal
device(config)# interface management 2/16
device(config--if-eth-2/16)# speed 40000

device# show running-config interface management 2/16
interface management 2/16
  speed 40000
  no shutdown
```

## strip

Removes the specified headers from incoming packets (802.1BR, VN, or VLAN).

### Syntax

```
strip [ br-tag | vlan-tag | vn-tag ]
no strip [ br-tag | vlan-tag | vn-tag ]
```

### Parameters

#### **br-tag**

Strips 802.1BR tag from the packet header.

#### **vlan-tag**

Strips vlan tag from the packet header.

#### **vn-tag**

Strips VN tag from the packet header.

### Modes

Listener-policy config mode

### Usage Guidelines

vn-tag cannot be enabled if br-tag is already enabled.

The **no strip** command removes the strip configuration.

**Table 45: Error messages**

Message	Reason
Error: VN tag strip already enabled for listener policy <i>name</i> when strip br-tag is configured already	You must configure VN and BR tag-stripping in separate listener policies.
Error: BR tag strip already enabled for listener policy <i>name</i> when strip vn-tag is configured already	

### Examples

The following example removes the specified headers.

```
device#configure terminal
device(config)# listener-policy lp1 <sId>
device(config-listener-policy)# strip br-tag
device(config-listener-policy)# strip vlan-tag

listener-policy rt 45
    strip br-tag
```

```
    strip vlan-tag

NPB(config-listener-policy)# strip vn-tag
device(config-listener-policy)# strip vn-tag
Error: BR Tag Strip already enabled for listener policy abc

device(config-listener-policy)# strip br-tag
Error: VN Tag Strip already enabled for listener policy abc
```

## **system firmware commit**

Commits the firmware version that is currently running.

### Syntax

```
system firmware commit
```

### Modes

Exec mode

### Usage Guidelines

You must have the admin role to run this command.

You cannot commit a previously committed version.

There is no auto-commit after firmware update.

- If you are satisfied with the new update, run this command when the system reboots to commit the new firmware version.
- If the new firmware does not come up properly, you must run the **system firmware rollback** and remove the new image from the device.



#### Note

It is not necessary to run **system firmware commit** after you run **system firmware rollback**.

### Examples

The following example runs the command to accept the running software version.

```
device# system firmware commit
```

## system firmware rollback

Rolls back the firmware version to the previous running version.

### Syntax

```
system firmware rollback
```

### Parameters

**rollback**

Rolls back the firmware version to the previous running version.

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

### Examples

The following example rolls back the firmware version to the previous running version.

```
device# system firmware rollback
```

The following example shows error message for system firmware rollback.

```
device# system firmware rollback
Firmware Rollback is in progress...
Rollback failed with error: Activation failed - Firmware Rollback image not present
```

## system firmware update

Updates system firmware.

### Syntax

```
system firmware update {{scp:// | sftp://} username:password@  
    hostname[:port]/filepath } | {{ http:// | https:// }  
    username:password@ hostname[:port]/filepath } ]
```

### Parameters

#### scp://

Specifies use of the Session Control Protocol (SCP).

#### sftp://

Specifies use of Secure File Transfer Protocol (SFTP).

#### http

Specifies use of HTTP.

#### https

Specifies use of HTTP secure.

#### username

Account name of the authorized user.

#### password

Password of the authorized user.



#### Note

As a best practice, do not list the password in the command line for security purposes. The user will be prompted for the password.

#### hostname

Specifies the server by name or by IPv4 address. IPv6 is not supported.

Hostname usage requires that DNS resolution is configured on the device.

#### port

Specifies the port number, which must be preceded by a colon. If the port is not included, the default port is assumed.

#### filepath

Specifies the path to the file.

### Modes

Exec mode

## Usage Guidelines

This command is available only to users with admin role.

Host IP must be in the format of a valid IPv4 address.

Versioning format is YearBorn.Major.Minor.Patch. If there are no errors during install, the system reboots and the firmware update is active.

There is no auto-commit after firmware update.

- If you are satisfied with the new update, run the **system firmware commit** command when the system reboots to commit the new firmware version.
- If the new firmware does not come up properly, you must run the **system firmware rollback** and remove the new image from the device.

**Table 46: Error Messages**

Error	Reason
Error: <i>filename.bin</i> is not a valid URL format	URL in command is poorly formed or missing.
Error: No such host <i>test.example.com</i>	DNS resolution is not configured on the device or the address is poorly formed.
Error: Host IP not reachable	Host is down or IPv4 address entered incorrectly.
Error: Invalid user credentials	User does not have permissions or credentials were typed incorrectly.
Error: File <i>abc.txt</i> is not the correct format for service images	Valid file format is binary.
Activate failed with error: Activation failed - Checksum mismatch for /var/data/firmware/TierraOS-xx.x.x.x-NPB.bin	Checksum does not match.

## Examples

The following examples update system firmware.

```
device# system firmware update http://1.1.1.1:8000/path/TierraOS-21.1.0.0-NPB.bin
device# system firmware update scp://test:pass@1.1.1.1/path/TierraOS-21.1.0.0-NPB.bin
device# system firmware update sftp://test:pass@1.1.1.1/path/TierraOS-21.1.0.0-NPB.bin
```

The following examples show error messages for system firmware update.

Invalid URL format:

```
device# system firmware update temp.bin
temp.bin is not a valid URL format

Usage:
scp://user:pass@host[:port]/filepath/filename
sftp://user:pass@host[:port]/filepath/filename
```

```
http://[user:pass@]domain[:port]/filepath/filename  
https://[user:pass@]domain[:port]/filepath/filename
```

Image cannot be downloaded:

```
device# system firmware update http://test.example.com:9000/path/filename.bin  
Error: Input File does not exist
```

Firmware version is already running:

```
device# NPB# system firmware update http://1.1.1.1:8000/path/TierraOS-21.1.0.0-NPB.bin  
Activate failed with error: Activation failed - version TierraOS-21.1.0.0-NPB is already  
running
```

Checksum of the image does not match:

```
device# NPB# system firmware update http://1.1.1.1:8000/path/TierraOS-21.1.0.0-NPB.bin  
Activate failed with error: Activation failed - Checksum mismatch for /var/data/  
firmware/ TierraOS-21.1.0.0-NPB.bin
```

## system logging host

Enters into a sub-configuration mode for logging host parameter configuration.

### Syntax

```
system logging host hostname address ip-address port port-number
    transport { udp | tcp } secure-forwarding { tls | none }

no system logging host hostname
```

### Command Default

Default transport protocol: UDP

Default secure-forwarding encryption (host): none

### Parameters

*hostname*

Specifies the name or label of the host. Valid length is 1 though 64 characters.

*ip-address*

Specifies the IP address for the host. Valid format is IPv4 dotted-decimal notation.

*port-number*

Specifies the number of the port number of the remote syslog server. Valid port-number range is 514 through 530.

**udp**

Sends syslogs to remote server using UDP protocol. This is the default protocol.

**tcp**

Sends syslogs to remote server using TCP protocol.

**tls**

Sends Syslogs to remote server using TLS encryption. Syslog CA certificates must be installed before configuring TLS encryption.

**none**

Sends Syslogs in plain text. This is the default configuration for the host.

### Modes

Exec mode

### Usage Guidelines

You can configure a maximum of 10 logging hosts.

If the no version of the command is without the *hostname* option, all hosts are removed.

Syslog CA certificates must be installed before configuring TLS encryption.

Syslog CA certificates can be imported using the **crypto import** command.

**Table 47: Error messages**

Message	Reason
Host name is too long! Max limit is 64 characters	Hostname cannot be longer than 64 characters. Example: device(config)# system logging host 12g3e2783etg82713eg823ge8723ge2b23bge32gbdg23ed3hilnxriu2n13ir32rbxjewbfjbfjbfxbqefxbqwkefnwefw
% Command incomplete.	Hostname must be specified. Example: device(config)# system logging host
Error(-5): Syslog CA certificate not found! Please use crypto command to import CA certificate	You must import the before attempting to configure TLS encryption.

## Examples

The following example configures the host H1 as the system logging host and uses the show command to confirm the configuration.

```
device# configure terminal
device(config)# system logging host sysLogHost1
device(config-logging-host-sysLogHost1)# address 10.25.125.5
device(config-logging-host-sysLogHost1)# port 6154
device(config-logging-host-sysLogHost1)# transport TCP
device(config-logging-host-sysLogHost1)# secure-forwarding TLS

device# do show running-config system logging host
system logging host sysLogHost1
  address 10.25.125.5
  port 6514
  transport TCP
  secure-forwarding TLS
```

The following example configures transport TCP.

```
device(config-logging-host-H1)# transport TCP
Warning: Existing Host configuration changed

device(config-logging-host-h1)# transport xyz
Error(-1): Invalid parameter

device(config-logging-host-h1)# transport TCPU
Error(-1): Invalid parameter
```

The following example removes all system logging hosts.

```
device# configure terminal
device(config)# no system logging host
```

## system logging service severity

Sets the logging level of a microservice.

### Syntax

```
system logging service service-name{ chassis-ms | ifmgr-ms | mgmt-
    security | mgmt-snmp-agent | mgmtsvc-apigw | pktngr-ms } severity
    { alert | critical | emergency | error | warning | notice | info |
    debug | trace }

no system logging service service-name
```

### Command Default

Default log level is DEBUG.

### Parameters

*service-name*

Specifies that name of the service on which to set a logging level.

**level**

Specifies the logging level for the specified service

### Modes

Config mode

### Usage Guidelines

Service name must be valid.

### Examples

The following example configures severity logging level for chassis-ms and for ifmgr-ms.

```
device# configure terminal
device(config)# system logging service chassis-ms severity error
device(config)# system logging service ifmgr-ms severity trace
```

## system service rollback

Restores the specified system service to the previous running version.

### Syntax

```
system service rollback service-name
```

### Command Default

### Parameters

*service-name*

Specifies the name of the service to restore.

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

**Table 48: Error messages**

Error message	Reason
Rollback for temp failed. Current version: 0.0.0, Error: Invalid Microservice Name	Service name is incorrect.
Rollback for chassis-ms failed. Current version: 0.1.0, Error: No Rollback versions present for chassis-ms	No rollback version is available.

### Examples

The following example restores the previous running version of the chassis-ms service.

```
device# system service rollback chassis-ms
```

The following examples show error messages for system service rollback.

Invalid service name:

```
device# system service rollback temp
Service Rollback is in progress...
Rollback for temp failed. Current version: 0.0.0, Error: Invalid Microservice Name
```

Missing rollback version:

```
device# system service rollback chassis-ms
Service Rollback is in progress...
Rollback for chassis-ms failed. Current version: 0.1.0, Error: No Rollback versions
present for chassis-ms
```

## system service update

Updates the service to a different version with minimal downtime.

### Syntax

```
system service update {{scp:// | sftp:// } username:password@  
hostname[:port]/filepath } | {{ http:// | https:// }  
username:password@ hostname[:port]/filepath }
```

### Parameters

**scp://**

Specifies use of the Session Control Protocol (SCP).

**sftp://**

Specifies use of Secure File Transfer Protocol (SFTP).

**http**

Specifies use of HTTP.

**https**

Specifies use of HTTP secure.

**username**

Account name of the authorized user.

**password**

Password of the authorized user.



#### Note

As a best practice, do not list the password in the command line for security purposes. The user will be prompted for the password.

**hostname**

Specifies the server by name or by IPv4 address. IPv6 is not supported.

Hostname usage requires that DNS resolution is configured on the device.

**port**

Specifies the port number, which must be preceded by a colon. If the port is not included, the default port is assumed.

**filepath**

Specifies the path to the file.

### Modes

Exec mode

## Usage Guidelines

Services release versions follow a three-part version number format: *major version.minor version.patch*.

- *major version.minor version* numbers must be identical for service update to be successful, which means that only the patch-version number can be different.
- For example, this mean you cannot update version 1.0.0 with 1.1.n but you can update version 1.0.0 with 1.0.1.

**Table 49: Error Messages**

Error	Reason
Error: No such host <i>test.example.com</i>	DNS resolution is not configured on the device or the address is poorly formed.
Error: Host IP not reachable	Host is down or IPv4 address entered incorrectly.
Error: Invalid user credentials	User does not have permissions or credentials were typed incorrectly.
Error: File <i>abc.txt</i> is not the correct format for service images	Valid file format is tar.gz.
Service update failed. Current Version: 1.0.0, Error: Current version is already running	The version you are attempting to upgrade to is already installed and running.
Service update failed. Major/Minor version mismatch. Current version: 1.0.0, New version: 1.1.0	Version numbers in the first two places of the three-part version format must be the same as the installed version. Only the last number can be different for the update to succeed.

## Examples

The following example updates system service via HTTP.

```
device# system service update http://1.1.1.1:8000/path/pktmgr-ms.tar.gz
```

The following examples show error messages for system service update.

Invalid URL format:

```
device# system service update temp.tar.gz
temp.tar.gz is not a valid URL format
```

Image cannot be downloaded:

```
device# system service update http://engartifacts1.extremenetworks.com:8081/artifactory/
tierra-local-snapshots/NGNPB/NGNPB_Feature/MS-Images/chassis.tar.gz
Failed to retrieve file: engartifacts1.extremenetworks.com:8081/artifactory/tierra-local-
snapshots/NGNPB/NGNPB_Feature/MS-Images/chassis.tar.gz err: 404 Not Found
```

Service version is already running:

```
device# system service update flash://ms_images/chassis-ms.tar.gz
Activating Microservice...
Service update failed. Current version: 0.1.0, Error: Current version is already running
```

## tacacs-server

Configures a Terminal Access Controller Access-Control System plus (TACACS+) server.

### Syntax

```
tacacs-server host ip address { plain-key | encrypted-key }  
no tacacs-server host ip address no key
```

### Parameters

#### **host**

Specifies the IP address of the TACACS+ server. Must be in the format of a valid IPv4 unicast address.

#### *plain-key*

Specifies a secret string shared with the TACACS+ server in plain-text format. Valid key length is 1 through 40 characters.

#### *encrypted-key*

Specifies a secret string shared with the TACACS+ server in encrypted format. Valid key must less than 128 characters.

### Modes

Config mode

### Usage Guidelines

No more than 5 TACACS servers can be configured.

The following list shows non-configurable default settings:

```
DefaultPort = 49  
DefaultTimeout = 5  
DefaultRetries = 3  
Protocol = "CHAP"
```

Use the no form of the command to remove the configuration.

**Table 50: Error messages**

Message	Reason
Error: Only valid ipv4 unicast address	IP address is ill-formed or not a valid IPv4 unicast address.
Error: Plain-key length restriction: if entered in plain text between 1 and 40	Plainkey length must be 1 through 40 characters.
Error: Encrypted-key length restriction : if length is < 128 throws error	Encrypted key length must be less than 128 characters.

## Examples

The following example configures a TACACS+ server with an encrypted key.

```
device# configure terminal
device(config)# tacacs-server host 10.24.15.201
device(config-tacacs-config)# encrypted-key QjQkJLQUF3ncI1ooQCOaoEsBn5epVI3GsQwFD6i_BW
device# show running-config tacacs-server
tacacs-server host 10.2.3.5
    key zgR4B-sop6rYJdrp5zmg3zDKx_N-LKQF8ubf4OWuYGo
```

```
device# configure terminal
device(config)# tacacs-server host 10.24.15.201
device(config-tacacs-config)# plain-key testKey
```

The following example shows information about configured TACAC+ servers.

```
device# show running tacacs-server
tacacs-server host 1.2.3.4
    encrypted-key JMeYDVdBN4Vb-wx35d7HnXIE8BL9KLUcEcePFwMNGoo
tacacs-server host 10.20.73.134
    encrypted-key QjQkJLQUF3ncI1ooQCOaoEsBn5epVI3GsQwFD6i_BWw
tacacs-server host 10.24.15.200
    encrypted-key aimBmdAKcaduyaPNfE68IiWGEYOMywtFxVv8Ftu5bqc
```

The following example removes the encrypted key from the server.

```
device(config)# tacacs-server host 10.24.15.201
device(config-tacacs-config)# no encrypted-key
```

## traceroute

Sends ICMP echo requests with increasing TTL value to the specified IP.

### Syntax

```
traceroute IPADDR [ max-ttl 1-255 | min-ttl 1-255 | timeout 1-60 ]  
traceroute NAME [ max-ttl 1-255 | min-ttl 1-255 | timeout 1-60 ]
```

### Parameters

#### **IPADDR**

Specifies the destination IPV4 or IPV6 address.

#### **NAME**

Specifies the destination host name.

#### **max-ttl** 1-255

Specifies the maximum TTL value. The range is 1-255, default is 30.

#### **min-ttl** 1-255

Specifies the minimum TTL value. The range is 1-255, default is 1.

#### **timeout** 1-60

Specifies the timeout value. The range 1-60, default is 5 seconds.

### Modes

Exec mode

### Usage Guidelines

This command is available only to users with admin role.

### Examples

The following example sends ICMP echo requests.

```
device# traceroute 172.217.165.132  
  
traceroute to 172.217.165.132 (172.217.165.132), 30 hops max, 60 byte packets  
  
1 host.internal (10.42.0.1) 0.053 ms 0.020 ms 0.018 ms  
2 10.20.73.129 (10.20.73.129) 0.330 ms 0.458 ms 0.478 ms  
3 10.22.3.6 (10.22.3.6) 0.897 ms 1.675 ms 1.751 ms  
4 10.22.3.17 (10.22.3.17) 0.950 ms 1.752 ms 1.746 ms  
5 10.22.3.13 (10.22.3.13) 8.126 ms 8.143 ms 8.199 ms  
6 10.254.127.58 (10.254.127.58) 3.409 ms 0.499 ms 0.578 ms  
7 134.141.55.25 (134.141.55.25) 0.497 ms 0.552 ms 0.542 ms  
8 208.185.247.161.IPYX-150368-ZYO.zip.zayo.com (208.185.247.161) 1.078 ms 1.228 ms  
1.009 ms  
9 100.ge-11-3-4.mpr3.sjc7.us.zip.zayo.com.zip.zayo.com (208.185.247.73) 0.673 ms 0.663 ms  
0.656 ms
```

```
10 ae16.cr1.sjc2.us.zip.zayo.com (64.125.31.12) 4.104 ms 4.126 ms 4.237 ms
11 ae27.cs1.sjc2.us.eth.zayo.com (64.125.30.230) 3.512 ms 3.487 ms 5.108 ms
12 * * *
13 142.250.160.46 (142.250.160.46) 2.449 ms 2.440 ms 2.451 ms
14 209.85.243.50 (209.85.243.50) 2.209 ms 2.188 ms 2.180 ms
15 108.170.242.83 (108.170.242.83) 2.827 ms 2.846 ms 2.935 ms
16 142.250.234.137 (142.250.234.137) 2.722 ms 2.865 ms 2.858 ms
17 142.250.237.172 (142.250.237.172) 9.852 ms 9.826 ms 9.870 ms
18 * 142.250.235.172 (142.250.235.172) 51.634 ms *
19 * * *
20 216.239.57.137 (216.239.57.137) 68.178 ms * *
21 108.170.226.122 (108.170.226.122) 67.973 ms 66.627 ms 66.614 ms
22 108.170.248.1 (108.170.248.1) 67.274 ms 67.365 ms 67.498 ms
23 142.250.224.245 (142.250.224.245) 67.081 ms 67.077 ms 67.100 ms
24 172.217.165.132 (172.217.165.132) 67.678 ms 66.427 ms 66.502 ms

device# traceroute 255.255.255.255
Error: Broadcast address not allowed

device# traceroute abcd
Error: Host resolution failed
```

## traffic-type

Configures or removes the specific header type to be matched for traffic classification.

### Syntax

```
traffic-type gre { mode [ new-scope | decap ] }
traffic-type gtpu teid teid-value { mode [ new-scope | decap ] }
traffic-type ipip { mode [ new-scope | decap ] }
traffic-type nvgre vsid vsid-value { mode [ new-scope | decap ] }
traffic-type vxlan vnid vnid-value { mode [ new-scope | decap ] }
no traffic-type gre { mode [ new-scope | decap ] }
no traffic-type gtpu teid teid-value { mode [ new-scope | decap ] }
no traffic-type ipip { mode [ new-scope | decap ] }
no traffic-type nvgre vsid vsid-value { mode [ new-scope | decap ] }
no traffic-type vxlan vnid vnid-value { mode [ new-scope | decap ] }
```

### Parameters

[ **gre** | **gtpu teid** *teid-value* | **ipip** | **nvgre vsid** *vsid-value* | **vxlan vnid** *vnid-value* ]

Specifies the header to be matched for classifying the packet.

#### mode

Specifies the actions for matching packets.

#### decap

Removes the encapsulated header.

#### new-scope

Shifts the scope of headers to inner headers for further processing.

### Modes

Ingress-group config mode

### Usage Guidelines

Validations for the command are as follows:

- Valid decapsulation type and corresponding ID must be provided.
- Only one traffic type per ingress group is allowed.
- The configured traffic type must be removed before configuring a new traffic type.
- Existing traffic type cannot be configured again with a different scope.

- The mode of the existing traffic type cannot be modified or deleted. The existing traffic type must be removed and reconfigured with or without the mode as required.
- If the same command is executed more than once, the second and subsequent executions are ignored and no error is reported.
- The [no] form of the command removes both traffic type and mode even if the mode is not specified.
- If the [no] form of the command is run without the configuration, the command is ignored and no error is reported.

## Examples

The following examples configure traffic types gre and ipip with decap and new-scope modes.

```
device(config)# ingress-group ing-1
device(config-ingress-group)# traffic-type gre mode decap
device(config-ingress-group)# end

device# show running-config ingress-group ing-1
ingress-group ing-1
traffic-type gre mode decap

device(config-ingress-group)# traffic-type ipip mode new-scope

Show running:
device# show running-configuration ingress-group ing-1
ingress-group ing-1
traffic-type ipip mode new-scope
```

The following example configures gtpu traffic type with decap mode.

```
device(config-ingress-group)# traffic-type gtpu teid 2000 mode decap
device(config-ingress-group)# end

device# show running-config ingress-group ing1
ingress-group ing1
traffic-type gtpu teid 2000 mode decap
```

The following example configures nvgre traffic type with new-scope mode.

```
device(config-ingress-group)# traffic-type nvgre vsid 1000 mode new-scope
device(config-ingress-group)# end
device# show running-config ingress-group ing1
ingress-group ing1
traffic-type nvgre vsid 1000 mode new-scope
```

The following example configures the vxlan traffic type with decap mode.

```
device(config-ingress-group)# traffic-type vxlan vni 2000 mode decap
device(config-ingress-group)# end
device# show running-config ingress-group ing-1
ingress-group ing-1
traffic-type vxlan vni 2000 mode decap
```

## transport-tunnel

Creates or deletes a new transport tunnel in which various other configurations related to transport tunnel termination can be done.

### Syntax

```
transport-tunnel tunnel-name
no transport-tunnel tunnel-name
```

### Parameters

*tunnel-name*

Specifies the name of the transport tunnel. Supports 64 characters.

Tunnel name must start with an alphabet or an underscore followed by an arbitrary sequence of alphabets, numeric characters, underscores, hyphens, or dots.

### Modes

Config mode

### Usage Guidelines

This command is available only to users with admin role.

The following reserved keywords cannot be used as name identifiers: all, ingress-group, egress, egress-group, match, list, access-list, route-map, and listener-policy. Reserved keywords cannot be used as NAME.

The transport tunnel name cannot be same as the ingress group that will be associated with this transport tunnel.

If the [no] form of the command is run without the configuration, the command is ignored and no error is reported.

**Table 51: Error messages**

Message	Reason
Error: transport-tunnel name identifier must start with an alphabetic character or an underscore.	Name identifier must start with an alphabetic character or an underscore.
Error: transport-tunnel name identifier must be an arbitrary sequence of alphabets, numerals, underscores, hyphens or dots.	Name identifier must start with an alphabetic character or an underscore followed by an arbitrary sequence of alphabetic or numeric characters, underscores, hyphens, or dots. Name cannot exceed 64 characters.

**Table 51: Error messages (continued)**

Message	Reason
Error: transport-tunnel name identifier must not be reserved keyword like all, egress... etc	Reserved keyword cannot be used as name.
Error: An ingress group with a route map attached should be a member of at least one interface or lag or transport tunnel.	Attached route map is not a member of at least one interface or lag or transport tunnel. Either remove the route map from ingress group or attach the ingress group to another interface or lag or transport tunnel before removing it from this tunnel.
Error: keypath:/transport-tunnels/transport-tunnel[name=<invalidname>]/name contains one or more unsupported character('@', '\$', '#', '[', ']') for key:name	Invalid characters used in name.

## Examples

The following example configures transport tunnel.

```
device(config)# transport-tunnel tt1
device(config-transport-tunnel)#
Show running:
device# show running-config transport-tunnel tt1
transport-tunnel tt1
```

## truncate

Truncates received packets to the configured length for the current route map or listener policy.

### Syntax

```
truncate length  
no truncate
```

### Parameters

*length*

Configures the truncated length of received packets. The valid range is 64 to 9000.

### Modes

Route-map config mode

Listener-policy config mode

Route-map config mode

### Usage Guidelines

### Examples

The following example configures received packets to a length of 100 for the current route map and uses the show command to verify configuration.

```
device# configure terminal  
device(config)# route-map mall2  
device(config-route-map)# truncate 100  
device(config-route-map)# end  
  
device# show route-map mall2  
route-map mall2 45  
forward-action permit  
truncate 100  
Policy matches: 0 packets, 0 bytes, 0 Packets/secRate, 0 Bits/secRate
```

The following example configures received packets to a length of 63 for the listener policy.

```
device# configure terminal  
device(config)# listener-policy lp1 <sId>  
device(config-listener-policy)# truncate 63
```

The following example deletes configured truncation for received packets for the current route map.

```
device(config)# route-map mall2  
device(config-route-map)# no truncate
```

## tunnel-type

Configures the source IP (with mask), tunnel-type and tunnel-ID for the packets to be terminated.

### Syntax

```
tunnel-type [ gre | erspan ] [ src-ip ipaddr | mask mask ] [ tunnel-id value ]  
no tunnel-type [ gre | erspan ] [ src-ip ipaddr | mask mask ] [ tunnel-id value ]
```

### Parameters

**gre** | **erspan**

Specifies the type of tunnel to be terminated.

**src-ip** *ipaddr*

Specifies the Source IP to be matched.

**mask** *mask*

Specifies the IP address mask.

**tunnel-id** *value*

Specifies the tunnel ID of the tunnel.

### Modes

Transport tunnel config mode

### Usage Guidelines

If all parameters match along with destination MAC in chassis MAC range, packets are terminated and relevant SAP ID is attached to the packets.

Validations for the command are as follows:

- Valid tunnel type is provided.
- Valid IP address and mask are provided.
- Tunnel ID value is within allowed range.
- Only one traffic type per ingress group is allowed.
- The configured traffic type must be removed before configuring a new traffic type.

- If the same command is executed more than once, the second and subsequent executions are ignored and no error is reported.
- If the [no] form of the command is run without the configuration, the command is ignored and no error is reported.

**Table 52: Error messages**

Message	Reason
Error: Tunnel type is already configured	Only one of each tunnel type can be configured per ingress group. Valid types are GRE or ERSPAN.
Error: Source IP address mask is already configured	
Error: Deny IP address is already configured	
Error: Source IP address conflicts with transport-tunnel <i>name</i> Error: Destination IP address conflicts with transport-tunnel <i>name</i>	Source or destination transport-tunnels IP cannot overlap.
Error: Invalid destination IP address Error: Invalid source IP address	Reserved or poorly formed IP address entered.
Error: Cannot add/modify source IP address of existing tunnel type	Attempt to add source IP address and mask to existing tunnel type.

## Examples

The following example configures the transport tunnel, tunnel-1.

```
Device(config)# transport-tunnel tunnel-1
device(config-trs-tnl-tunnel-1)# tunnel-type erspan src-ip 10.10.10.0 mask 255.255.255.0
tunnel-id 12345

Show running:
device# show running-configuration

transport-tunnel tunnel-1
tunnel-type erspan src-ip 10.10.10.0 mask 255.255.255.0 tunnel-id 12345
```

## username

Configures user along with role for local authentication.

### Syntax

```
username username role role password password [ encryption-level 0 | 10 ]  
no username username
```

### Parameters

#### **username**

Specifies the user name. The username supports 1-40 characters. Characters allowed are alpha-numeric, underscore and dot. Underscore is not allowed as the first character.

#### **role**

Specifies the pre-defined role to be assigned to the user. The supported roles are admin and user.

The role supports 4-32 characters. Characters allowed are alpha-numeric, underscore and dot. Underscore is not allowed as the first character.

#### **password**

Specifies the password of the user. Supported length of the plain text password is 8-40 and 8-128 for hashed passwords.

#### **encryption-level** **0** | **10**

Specifies whether the password input is encrypted. The values 0 and 10 indicate clear-text and encryption. The default value is 0.

### Modes

Config mode

### Usage Guidelines

This command is available only to users with admin role.

**Table 53: Error messages**

Error message	Reason
Username validation error	Username length should be between 1 and 40 characters. Username should contain only alpha-numeric, underscore and period. Username first letter is neither alpha-numeric nor an underscore.
Role validation error	Role does not exist.
Password validation error	Password has a bad length/size.

## Examples

The following example configures users with admin and user roles.

```
NPB# configure terminal
NPB(config)# username testuser1 role admin password password123 encryption-level 0
NPB(config)# username testuser2 role user password $6$salt$cevuzTZ/QBjzuZG0/
ebEeedmcTnhyM8ITUu8K032Cp2XvIibq7voqYagm18bwpLBqrg/1/16YxTmKKibJz5r10 encryption-level 10

NPB# show running-config username
username testuser1 role admin password $6$salt$cevuzTZ/QBjzuZG0/
ebEeedmcTnhyM8ITUu8K032Cp2XvIibq7voqYagm18bwpLBqrg/1/16YxTmKKibJz5r10 encryption-level 10
username testuser2 role user password $6$salt$cevuzTZ/QBjzuZG0/
ebEeedmcTnhyM8ITUu8K032Cp2XvIibq7voqYagm18bwpLBqrg/1/16YxTmKKibJz5r10 encryption-level 10
```

## vlan

Configures forwarding actions by VLAN ID to be performed on outgoing packets.

### Syntax

```
vlan vlan-id  
no vlan vlan-id
```

### Parameters

*vlan-id*

Specifies the VLAN ID to be configured. Valid range is 1 through 4095.

### Modes

Listener-policy config mode

### Usage Guidelines

Action is determined by forward-action setting in the listener policy.

- If forward-action is set to deny, packets are dropped.
- If forward-action is set to permit, the VLAN ID is changed to the configured value for permitted packets.
- Valid VLAN ID must be provided.
- VLAN ID must be unique per listener policy.

### Examples

The following example configures the VLAN ID for listener policy, and then uses the show command to verify the configuration.

```
device# configure terminal  
device(config)# listener-policy lp1 12  
device(config-listener-policy)# vlan 500  
device(config-listener-policy)# end  
device#  
  
device# show listener-policy lp1 12  
forward-action permit  
match ip access-list test_2 (active)  
truncate 512  
strip vn-tag  
vlan 500  
Policy matches: 0 packets, 0 bytes, 0 Packets/sec, 0 Bits/sec
```

The following example removes the VLAN ID configuration from the listener policy, and then uses the show command to verify the VLAN ID is removed from the configuration.

```
device# configure terminal  
device(config)# listener-policy lp1 12  
device(config-listener-policy)# no vlan
```

```
device(config-listener-policy)# end
device#

device# show listener-policy lpl 12
forward-action permit
match ip access-list test_2 (active)
truncate 512
strip vn-tag
Policy matches: 0  packets, 0  bytes, 0 Packets/sec, 0 Bits/sec
```

## vlan-id

Configures VLAN ID for encapsulation of outgoing packets.

### Syntax

```
vlan-id vlan-id-value
no vlan-id vlan-id-value
```

### Parameters

*vlan-id*

Specifies the VLAN ID to be configured.

### Modes

Encap configuration mode

### Usage Guidelines

Validations for the command are as follows:

- Valid VLAN ID must be provided.
- Single VLAN ID per encapsulation is allowed. Already configured VLAN ID must be removed before configuring a new VLAN ID.
- If the same command is executed more than once, the second and subsequent executions are ignored and no error is reported.
- If the [no] form of the command is run without the configuration, the command is ignored and no error is reported.

### Examples

The following example configures the vlan-id.

```
device(config-encap-1)# vlan-id 1234
device(config-encap-1)#
Show running:
device# show running-configuration

encap encap-1
vlan-id 1234
```

The following example shows errors thrown for ID out-of-range and pre-existing vlan-id.

```
device(config-encap)# vlan-id 5000
% Value '5000' not in range <1-4095>.

device(config-encap)# vlan-id 4095
Error: Vlan Tag is already configured
```

## vlan-pcp

Configures VLAN priority (PCP) value for encapsulation of outgoing packets.

### Syntax

```
vlan-pcp vlan-pcp-value
no vlan-pcp vlan-pcp-value
```

### Parameters

```
vlan-pcp vlan-pcp-value
```

Specifies the VLAN PCP value. Valid values are 0 through 7.

### Modes

Encap configuration mode

### Usage Guidelines

Validations for the command are as follows:

- This command is optional.
- When this parameter is not configured, the outgoing packet does not contain a VLAN header.
- If this command is enabled without configuring *vlan-id*, the outgoing packet will not contain the VLAN header
- Valid VLAN PCP value must be provided.
- If another VLAN PCP is already configured, it must be removed before configuring a new VLAN PCP.
- If the same command is executed more than once, the second and subsequent executions are ignored and no error is reported.
- If the [no] form of the command is run without the configuration, the command is ignored and no error is reported.

### Examples

The following example configures *vlan-pcp* and verifies the configuration with the *show* command.

```
device# configure terminal
device(config)# encapsulation encap-1
device(config-encap)# vlan-id 4000
device(config-encap)# vlan-pcp 2

device(config-encap)# end

device# show running-config encapsulation encap-1
encapsulation encap-1
  vlan-id 4000
  vlan-pcp 2
```

The following example shows the error that is thrown when the vlan-pcp value is outside the valid range.

```
device(config-encap)# vlan-pcp 100  
% Value '100' not in range <0-7>.
```