



ExtremeCloud™ Orchestrator v3.6.0 GUI Administration Guide

User Interface Management and Configuration

9038969-00 Rev AA
August 2024



Copyright © 2024 Extreme Networks, Inc. All rights reserved.

Legal Notice

Extreme Networks, Inc. reserves the right to make changes in specifications and other information contained in this document and its website without prior notice. The reader should in all cases consult representatives of Extreme Networks to determine whether any such changes have been made.

The hardware, firmware, software or any specifications described or referred to in this document are subject to change without notice.

Trademarks

Extreme Networks and the Extreme Networks logo are trademarks or registered trademarks of Extreme Networks, Inc. in the United States and/or other countries.

All other names (including any product names) mentioned in this document are the property of their respective owners and may be trademarks or registered trademarks of their respective companies/owners.

For additional information on Extreme Networks trademarks, see: <https://www.extremenetworks.com/about-extreme-networks/company/legal/trademarks>

Open Source Declarations

Some software files have been licensed under certain open source or third-party licenses.

End-user license agreements and open source declarations can be found at: <https://www.extremenetworks.com/support/policies/open-source-declaration/>



Table of Contents

Preface.....	7
Text Conventions.....	7
Documentation and Training.....	9
Open Source Declarations.....	9
Training.....	9
Help and Support.....	9
Subscribe to Product Announcements.....	10
Send Feedback.....	10
What's New in this Document.....	11
Welcome to ExtremeCloud Orchestrator.....	12
Fabric Automation and Orchestration (Fabric Skill).....	12
Visibility Solution (Visibility Skill).....	13
Packet Broker Functions.....	14
XCO Limitations.....	15
XCO Deployment.....	16
Navigate the User Interface.....	17
Log in to XCO.....	17
User Interface.....	18
Refresh Page View.....	19
Pagination.....	20
Search, Group, and Filter.....	20
Dashboard.....	21
System Widget.....	21
Fabrics Widget (Fabric Mode).....	22
Tenants Widget (Fabric Mode).....	22
Locations Widget.....	23
Devices Widget.....	23
Users Widget.....	24
Help & Support Widget.....	24
Support Save.....	24
Register Remote Server.....	25
Generate Support Save.....	26
Download Support Save.....	27
Fabrics (Fabric Mode).....	28
Create a Non-Clos Fabric.....	29
Create a 3 Stage Clos Fabric.....	35
Create a 5 Stage Fabric.....	41
Edit Fabric.....	46
Download Fabric Inventory.....	47

Delete Fabric.....	48
Download Health Report.....	48
View Fabric Topology.....	48
Edit Fabric Topology.....	49
View Firmware History.....	52
View Operational History.....	52
Network Essentials.....	53
Configure Network Essentials.....	53
Firmware Upgrade.....	54
Clone a Fabric.....	59
Reboot a Device.....	59
Tenants (Fabric Mode).....	61
Create Tenant.....	62
Edit Tenant.....	66
Delete Tenant.....	67
Overview.....	68
Port Channels (LAGs).....	68
Virtual Routing and Forwarding (VRF).....	72
Border Gateway Protocol (BGP).....	81
Locations.....	85
Add Location.....	86
Edit Location.....	87
Download Location Definition File.....	87
Delete Location.....	87
Display Location-Specific Device List.....	87
Display Locations Map View.....	88
Device Inventory.....	89
Device Credentials.....	90
Add Devices	90
Create a Device Definition File.....	93
Download Bulk Device Inventory.....	93
Device Settings (Fabric Mode).....	94
Delete Device.....	95
Overview (Packet Broker Mode).....	95
Device Statistics.....	95
View Statistics in a Device Dashboard.....	96
Edit Extreme 9920 Device Slot Settings (Packet Broker Mode).....	98
Device Actions (Packet Broker Mode).....	99
Save the Running Configuration of SLX and MLX Devices.....	99
Refresh Configuration.....	99
Export Configuration.....	100
Packet Capture.....	102
Clear Counters.....	109
View Logs.....	110
Delete a Device from the Device Overview Page.....	111
Policies and Configuration (Packet Broker Mode).....	111
Policies.....	111
Policy Rule Matches.....	116

UDA Profiles.....	120
Ingress Groups.....	122
Egress-Group.....	125
Egress.....	127
Mirrors.....	128
Tunnels.....	130
Quality of Service.....	133
Port Channels.....	134
Ports.....	138
Truncation Profile.....	142
TACACS+ Authentication.....	143
Slots.....	143
Parts Details (Packet Broker Mode).....	144
SLX Optical Statistics.....	144
View Device Inventory.....	144
Download Device Inventory.....	145
Monitor/Troubleshoot (Packet Broker Mode).....	145
Troubleshoot Configuration.....	146
Upgrade Firmware.....	148
Register Firmware Host.....	148
View Registered Firmware Hosts.....	149
Change a Firmware Host.....	149
Delete a Firmware Host.....	149
Upgrade Firmware (Device Level)	150
Rollback Upgrade (Packet Broker Mode).....	153
Users.....	154
Role Based Access Control.....	155
User Roles.....	155
Authentication Tokens.....	156
Local.....	156
Add User.....	156
Edit User.....	157
Block User.....	157
Unblock User.....	158
Request Reset Password.....	158
Change Password on First Login.....	158
Delete User.....	159
Host.....	159
Change Host User Role.....	159
User Settings.....	160
Authentication Settings.....	160
LDAP Settings.....	161
TACACS+ Settings.....	166
Change a Server Configuration.....	168
Delete a Server Configuration.....	169
Change Password.....	169
Logout.....	169
Logs.....	170

System Logs.....	170
User Logs.....	171
Library (Packet Broker Mode).....	173
Matches.....	173
Create a Policy Rule Match in the Library.....	174
Change a Policy Rule Match in the Library.....	176
Export a Policy Rule Match from the Library.....	177
Clone a Policy Rule Match.....	177
Delete a Policy Rule Match from the Library.....	177
Policies.....	178
Create a Policy in the Library.....	178
Change a Policy in the Library.....	178
Export a Policy.....	179
Clone a Policy.....	179
Delete a Policy in the Library.....	179
UDA.....	180
Create an MLX UDA Profile in the Library.....	180
Create an SLX UDA Profile in the Library.....	181
Change a UDA Profile in the Library.....	181
Delete a UDA Profile in the Library.....	182
Export a UDA Profile.....	182
FAQs.....	183
Where are Visibility skill logs located?.....	183
Where are the Inventory Service logs located?.....	183
Where are the Installer logs located?.....	183
What are some common reasons for installation failures?.....	183
Why does the web user interface not load on the browser?.....	183
What are some common reasons for XCO log-in failures?.....	183
Where are authentication failures captured?.....	184
What are possible reasons for device registration failures?.....	184
Why is there a delay in loading the dashboard or statistics in the web UI?.....	184
Why is the device configuration blocked from the web UI?.....	184
What are possible reasons for configuration failures?.....	184
How do I check that all services are up and running?.....	184
Why are the device syslogs not visible?.....	185
How to collect the SupportSave data for troubleshooting?.....	185



Preface

This GUI Administration Guide ExtremeCloud™ Orchestrator version 3.6.0 provides comprehensive instructions for administering the ExtremeCloud Orchestrator (XCO) application. It details the orchestration capabilities for managing Extreme Networks solutions through a graphical user interface (GUI) and application programming interfaces (APIs). The guide covers the integration of Extreme Fabric Automation (EFA) and Extreme Visibility Manager (XVM) into XCO, supporting lifecycle management and visibility across network devices. Key sections include configuring IP fabric networks, deploying and managing fabrics, and tenant management. The guide also addresses the configuration of non-Clos, 3 Stage Clos, and 5 Stage fabric topologies, port channels, VRFs, BGP configurations, and device reboot procedures. Additional chapters focus on network essentials, firmware upgrades, and monitoring with packet broker functions. The user interface, roles, and authentication methods are explained in detail, providing guidance for both system and fabric administrators.

Read the following topics to learn about:

- The meanings of text formats used in this document.
- Where you can find additional information and help.
- How to reach us with questions and comments.

Text Conventions

Unless otherwise noted, information in this document applies to all supported environments for the products in question. Exceptions, like command keywords associated with a specific software version, are identified in the text.

When a feature, function, or operation pertains to a specific hardware product, the product name is used. When features, functions, and operations are the same across an entire product family, such as Extreme Networks switches or SLX routers, the product is referred to as *the switch* or *the router*.

Table 1: Notes and warnings



Icon	Notice type	Alerts you to...
	Tip	Helpful tips and notices for using the product
	Note	Useful information or instructions

Table 1: Notes and warnings (continued)




Icon	Notice type	Alerts you to...
	Important	Important features or instructions
	Caution	Risk of personal injury, system damage, or loss of data
	Warning	Risk of severe personal injury

Table 2: Text

Convention	Description
screen displays	This typeface indicates command syntax, or represents information as it is displayed on the screen.
The words <i>enter</i> and <i>type</i>	When you see the word <i>enter</i> in this guide, you must type something, and then press the Return or Enter key. Do not press the Return or Enter key when an instruction simply says <i>type</i> .
Key names	Key names are written in boldface, for example Ctrl or Esc . If you must press two or more keys simultaneously, the key names are linked with a plus sign (+). Example: Press Ctrl+Alt+Del
<i>Words in italicized type</i>	Italics emphasize a point or denote new terms at the place where they are defined in the text. Italics are also used when referring to publication titles.
NEW!	New information. In a PDF, this is searchable text.

Table 3: Command syntax

Convention	Description
bold text	Bold text indicates command names, keywords, and command options.
<i>italic text</i>	Italic text indicates variable content.
[]	Syntax components displayed within square brackets are optional. Default responses to system prompts are enclosed in square brackets.
{ x y z }	A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options.
x y	A vertical bar separates mutually exclusive elements.

Table 3: Command syntax (continued)

Convention	Description
< >	Nonprinting characters, such as passwords, are enclosed in angle brackets.
...	Repeat the previous element, for example, <i>member [member . . .]</i> .
\	In command examples, the backslash indicates a “soft” line break. When a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash.

Documentation and Training

Find Extreme Networks product information at the following locations:

[Current Product Documentation](#)

[Release Notes](#)

[Hardware and Software Compatibility](#) for Extreme Networks products

[Extreme Optics Compatibility](#)

[Other Resources](#) such as articles, white papers, and case studies

Open Source Declarations

Some software files have been licensed under certain open source licenses. Information is available on the [Open Source Declaration](#) page.

Training

Extreme Networks offers product training courses, both online and in person, as well as specialized certifications. For details, visit the [Extreme Networks Training](#) page.

Help and Support

If you require assistance, contact Extreme Networks using one of the following methods:

[Extreme Portal](#)

Search the GTAC (Global Technical Assistance Center) knowledge base; manage support cases and service contracts; download software; and obtain product licensing, training, and certifications.

[The Hub](#)

A forum for Extreme Networks customers to connect with one another, answer questions, and share ideas and feedback. This community is monitored by Extreme Networks employees, but is not intended to replace specific guidance from GTAC.

[Call GTAC](#)

For immediate support: (800) 998 2408 (toll-free in U.S. and Canada) or 1 (408) 579 2800. For the support phone number in your country, visit www.extremenetworks.com/support/contact.

Before contacting Extreme Networks for technical support, have the following information ready:

- Your Extreme Networks service contract number, or serial numbers for all involved Extreme Networks products
- A description of the failure
- A description of any actions already taken to resolve the problem
- A description of your network environment (such as layout, cable type, other relevant environmental information)
- Network load at the time of trouble (if known)
- The device history (for example, if you have returned the device before, or if this is a recurring problem)
- Any related RMA (Return Material Authorization) numbers

Subscribe to Product Announcements

You can subscribe to email notifications for product and software release announcements, Field Notices, and Vulnerability Notices.

1. Go to [The Hub](#).
2. In the list of categories, expand the **Product Announcements** list.
3. Select a product for which you would like to receive notifications.
4. Select **Subscribe**.
5. To select additional products, return to the **Product Announcements** list and repeat steps 3 and 4.

You can modify your product selections or unsubscribe at any time.

Send Feedback

The User Enablement team at Extreme Networks has made every effort to ensure that this document is accurate, complete, and easy to use. We strive to improve our documentation to help you in your work, so we want to hear from you. We welcome all feedback, but we especially want to know about:

- Content errors, or confusing or conflicting information.
- Improvements that would help you find relevant information.
- Broken links or usability issues.

To send feedback, email us at documentation@extremenetworks.com.

Provide as much detail as possible including the publication title, topic heading, and page number (if applicable), along with your comments and suggestions for improvement.



What's New in this Document

The following table describes changes to this guide for the ExtremeCloud Orchestrator 3.6.0 release.

Table 4: Summary of changes

Feature	Description	Link
LAG Hash Masking	LAG hash masking options are supported for port channel load balancing on 9920 devices.	<ul style="list-style-type: none">• XCO Limitations on page 15• Create a Port Channel on page 135

For more information about this release, see the [ExtremeCloud Orchestrator Release Notes, 3.6.0](#).



Welcome to ExtremeCloud Orchestrator

[Fabric Automation and Orchestration \(Fabric Skill\)](#) on page 12

[Visibility Solution \(Visibility Skill\)](#) on page 13

[XCO Limitations](#) on page 15

[XCO Deployment](#) on page 16

ExtremeCloud™ Orchestrator (XCO) is an orchestration application that provides a unified and holistic graphical user interface (GUI) and application programming interface (APIs) for visibility management (visibility skill) and fabric-wide life cycle management (fabric skill) with highly scalable and flexible deployment model for Extreme solutions.

XCO integrates Extreme Fabric Automation (EFA) and Extreme Visibility Manager (XVM) solutions into a single orchestration solution. XCO provides common infrastructure and consistent installation and upgrade strategies for MLX, SLX, Extreme 8000 series, and 9920 devices with a focus on scalability and performance.

XCO provides an industry leading user interface with a comprehensive, microservices-based solution to tailor the network to the changing user behavior. The user interface enables IP fabric life-cycle management of SLX, and Extreme 8000 series devices and visibility and policy management of MLX, SLX, and 9920 devices.

For information about evolution of EFA and XVM into XCO, see the [ExtremeCloud Orchestrator CLI Administration Guide, 3.6.0](#).



Note

All procedures in this document are performed through GUI.

Fabric Automation and Orchestration (Fabric Skill)

XCO automates and orchestrates SLX IP fabric networks through CLI and UI.

For more information about fabric skill, see:

- [ExtremeCloud Orchestrator CLI Administration Guide, 3.6.0](#)
- [ExtremeCloud Orchestrator Command Reference, 3.6.0](#)
- [ExtremeCloud Orchestrator Deployment Guide, 3.6.0](#)
- [ExtremeCloud Orchestrator Security Guide, 3.6.0](#)

- [ExtremeCloud Orchestrator Hyper-V Integration Guide, 3.6.0](#)
- [ExtremeCloud Orchestrator VMware vCenter Integration Guide, 3.6.0](#)

Visibility Solution (Visibility Skill)

XCO supports several network packet broker devices as part of the visibility solution to provide centralized device and policy management.

Although devices have different functionality and different configuration methods, XCO seamlessly interacts with all supported devices for simplified management.

XCO managed objects work together to accomplish packet broker functions. You can configure these objects from the user interface. For more information, see [Packet Broker Functions](#) on page 14.

Table 5: Managed objects

Object	Description
Ports and port channels	The interfaces on which traffic enters and exits a device. You can associate ports and port channels with ingress groups and egress. For more information, see Ports on page 138 and Port Channels on page 134.
Egress	A port or port channel that you associate with an egress policy, which identifies the actions to take on egress traffic. For more information, see Create an Egress for Devices on page 127.
Egress group	A set of interfaces and ports on which traffic is forwarded after a policy is applied. For more information, see Create an Egress Group on page 125.
Ingress group	A collection of ports, port channels, and tunnels on which monitored traffic is received. You can select several actions to perform on the incoming traffic and you can associate the ingress group with an ingress policy. For more information, see Ingress Groups on page 122.
Policy rule matches	The parts of a packet header that a rule targets, such as the source port or the payload length. One or more rules constitute a match. You associate matches with ingress or egress policies. For more information, see Policy Rule Matches on page 116.

Table 5: Managed objects (continued)

Object	Description
Ingress policy (or route map)	The actions to apply to inbound packets. You can associate policy rule matches and egress groups, and select other actions such as packet slicing and scope shift. For more information, see Create an Ingress Policy for a Device on page 113.
Egress policy (or listener policy)	The actions to apply to outbound packets. You can associate policy rule matches and select other actions such as packet slicing and header stripping. For more information, see Create an Egress Policy for a Device on page 112. Note: Applies to 9920 devices only.
User-defined access list (UDA)	The UDA profiles for SLX and MLX devices. For more information, see UDA Profiles on page 120.
Transport tunnel termination and encapsulation	The GRE or ERSPAN tunnels to associate with ingress groups or egress. For more information, see Tunnels on page 130. Note: Applies to 9920 devices only.
Quality of Service (QoS)	The QoS configuration is used on 9920 devices to manage traffic delivery. For more information, see Quality of Service on page 133.
Mirrors	A copy of the egress port traffic on 9920 is forwarded to the configured mirror destination port. For more information, see Mirrors on page 128.

Packet Broker Functions

A network packet broker aggregates network traffic from multiple ports for forwarding to analysis applications.

When a packet broker is attached to networking devices, a copy of the traffic that passes through the devices is sent to the packet broker. Based on your configuration, the packet broker filters the copied traffic for the data that you want to analyze. The packet broker then sends the filtered traffic to an analysis application.

In general, packet brokers can perform the following types of actions on copied network traffic.

Table 6: Packet broker functions

Function	Description
ACL filtering	Directs network traffic based on Layer 2 to Layer 4 protocol headers
Aggregation	Combines traffic that from multiple ports and directs it to one port or port channel
Decapsulation	Removes the outer tunnel headers from a packet
Header stripping	Removes header tags that are not supported by some visibility applications, including 802.1BR, VN (virtual NIC), VLAN, VXLAN, GTPU, GRE, and IPIP headers
Load balancing	Distributes network traffic among ports in a port channel
Packet slicing	Truncates packets to a specific size across ports.
Replication	Copies network traffic to multiple ports and port channels.
Route map forwarding	Redirects Layer 2 and Layer 3 packets to the selected physical or port channel interface
Transport tunnel termination	<ul style="list-style-type: none"> • GRE (Generic Routing Encapsulation). Creates a tunnel that encapsulates (or wraps) packets that use one type of protocol inside packets that use a different protocol. • ERSPAN (Encapsulated Remote Switched Port Analyzer): Creates a tunnel that mirrors traffic from source ports for delivery to destination ports on a different device.
Transport tunnel encapsulation	GRE only

XCO Limitations

XCO has the following limitations:

- Hostname or DNS name based device discovery is not supported.
- Device location cannot be modified after discovery.
- CLI support is not available for visibility skill.
- Only live statistics data streaming is supported.
- Secured Syslog configuration is not supported for MLX devices.

- User-defined access list (UDA) configuration is not migrated while configuration migration from an SLX or MLX to 9920.
- Listener policy byte count is incorrect for 9920 when truncation is enabled.
- Special characters such as %, { }, \, and = are not supported in Name fields.
- If a device configured with both IPv4 and IPv6 addresses is discovered, only one entry is added to XCO. The first discovered IP address is used for communicating with that device.
- Device discovery failure is not listed on the Device log page for non-packet broker devices in the packet broker mode.
- All configurations are reverted when a port channel deployment fails. However, a LAG is created and deleted immediately, and the events are captured in the device logs.
- XCO 3.6.0 supports LAG hash masking options for port-channel load balancing on packet broker devices from Extreme 9920 Software release 21.2.2.0.
- Firmware upgrade requires an absolute path to the image location.

XCO Deployment

XCO supports the following deployment modes:

- Fabric Mode (Fabric skill)
- Packet Broker Mode (Visibility skill)

XCO user interface is not supported on TPVM deployments.

For information about deploying XCO, see the [ExtremeCloud Orchestrator Deployment Guide, 3.6.0](#).



Navigate the User Interface


[Log in to XCO](#) on page 17
[User Interface](#) on page 18

You can access XCO using the latest two versions of Google Chrome or Microsoft Edge web browsers.

Log in to XCO

Procedure

1. In a web browser, open `http://xx.xx.xx.xx/login`, where `xx.xx.xx.xx` is the IP address of the control plane node.
2. Complete the **Username** and **Password** fields.
3. Select **Login**.

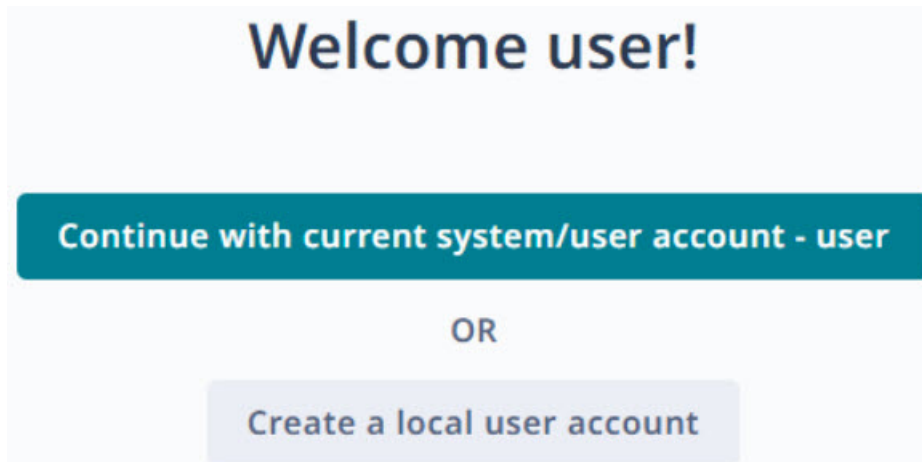

If this is your first login as a host user, you are prompted to either continue with the current host user account or create a new local user account. Otherwise, the user interface opens to the **Dashboard** page.

Follow the instructions in [Add User](#) on page 156 to create new user accounts.

Local users are prompted to reset the password on first login.

Related Topics

[Add Location](#) on page 86
[Add Devices](#) on page 90

User Interface

The XCO interface provides access to all system functions. The interface pages vary depending on the deployment mode and the logged-in user role. For more information about user roles, see [User Roles](#) on page 155.

[Table 7](#) describes the numbered elements in this diagram.

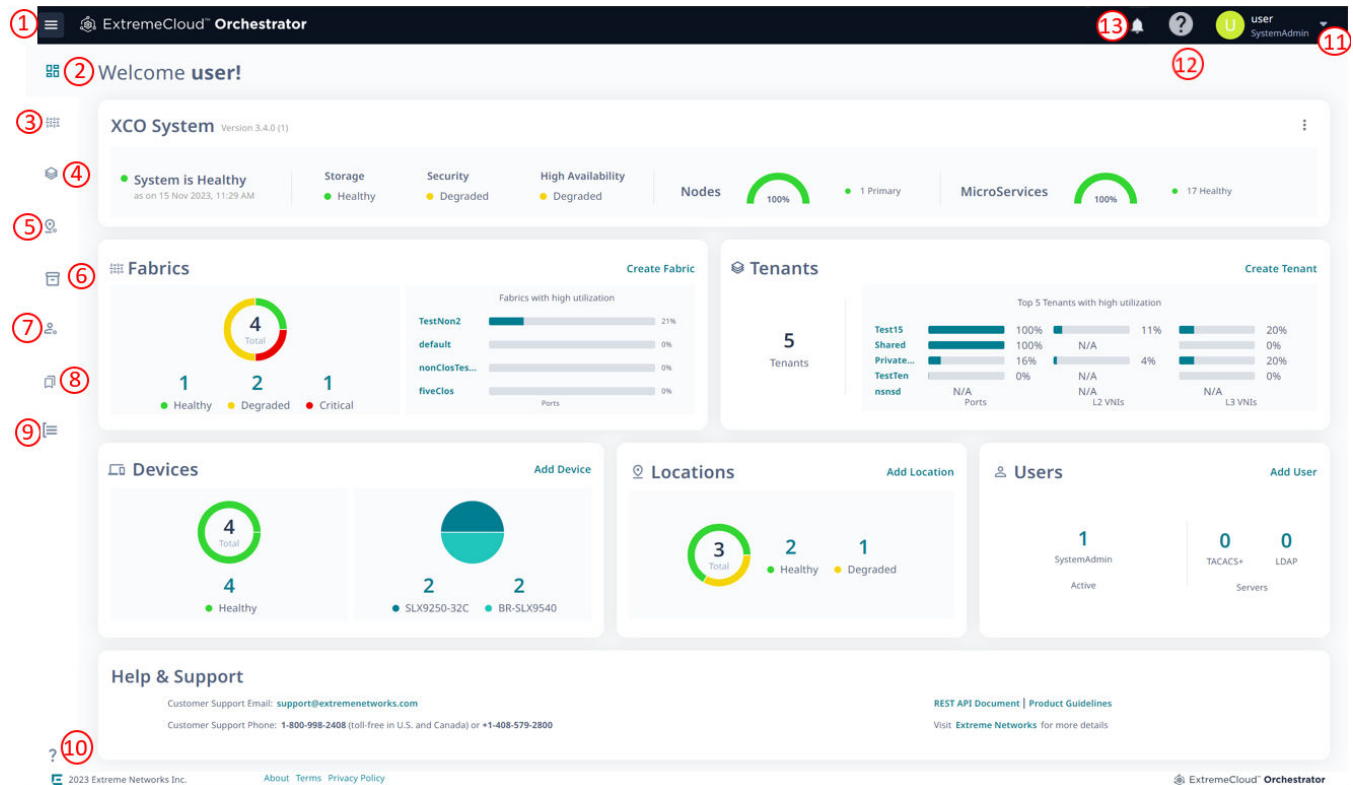




Figure 1: XCO user interface

Table 7: User interface descriptions

Legend	Interface Area	Description
1	Navigation menu	Provides access to all pages of the interface.
2	Dashboard	Provides an overview of system health and quick access to locations, devices, fabrics, and users configuration pages. See Dashboard on page 21.
3	Fabrics (Fabric Mode only)	Provides access to the fabrics management page. See Fabrics (Fabric Mode) on page 28.
4	Tenants (Fabric Mode only)	Provides access to the tenant management page. See Tenants (Fabric Mode) on page 61.


Table 7: User interface descriptions (continued)

Legend	Interface Area	Description
5	Locations	Provides access to the location management page. See Locations on page 85.
6	Device Inventory	Provides physical details and access to all configuration settings of the selected device. Details vary by device type. See Device Inventory on page 89.
7	Users	Provides access to settings for users, profile, and authentication. See Users on page 154.
8	Logs	Provides access to the logs page. See Logs on page 170.
9	Library (Packet Broker Mode only)	Provides access to configured matches, policies, and UDA (user-defined ACL) profiles. See Library (Packet Broker Mode) on page 173.
10	Help & Support	Provides access to the help and support information.
11	User Profile	Displays the username and role of the logged-in user. From here, you can perform the following tasks: <ul style="list-style-type: none"> • Change own password • Log out
12	Online Help	Displays context-sensitive help for the active screen.
13	Notifications	Provides access to the notifications page. The notifications are user specific and do not persist.  The  icon indicates new notifications.

Related Topics

- [Refresh Page View](#) on page 19
- [Pagination](#) on page 20
- [Search, Group, and Filter](#) on page 20

Refresh Page View

When you add a new entry or modify an existing entry in a table in the XCO user interface, you are prompted to refresh () the page to view the latest changes.

Pagination

About This Task

XCO supports pagination in all pages that show detailed data, such as locally configured users, devices, device configurations, policies, authentication servers, and locations.

Procedure

Select the required **Page Size (5, 10, 20, 50, 100)** to specify the number of entries in a table.

- The default page size is 10.
- Use the **Previous** (<) and **Next** (>) icons to scroll through the list.

Limitation:

The user interface displays incorrect data on the previous page when you scroll through list pages after applying filters.

Search, Group, and Filter



About This Task


You can search for an item and organize lists in the XCO user interface.

You can group records based on the pre-defined criteria that vary for different windows.

Use the **Previous** (<) and **Next** (>) icons to scroll through the lists.

Procedure

1. To search for a record in a page, enter a search attribute such as object name, IP address, location in the **Search** field and click **Search** ().
To clear the search, click **X** in the **Search** field.
2. To group records in a page, select **Group By** and choose an attribute.
To clear the grouping, select the **Clear** option.
The list is organized by the grouping attribute you selected. The headings are collapsible.
3. To filter records in a page, select **Filter** () and choose the filter attribute.
To clear an individual filter, click **x** for the appropriate filter. To clear all the filters, click **Clear All Filters**.
The list is organized by the filtering attribute you selected.

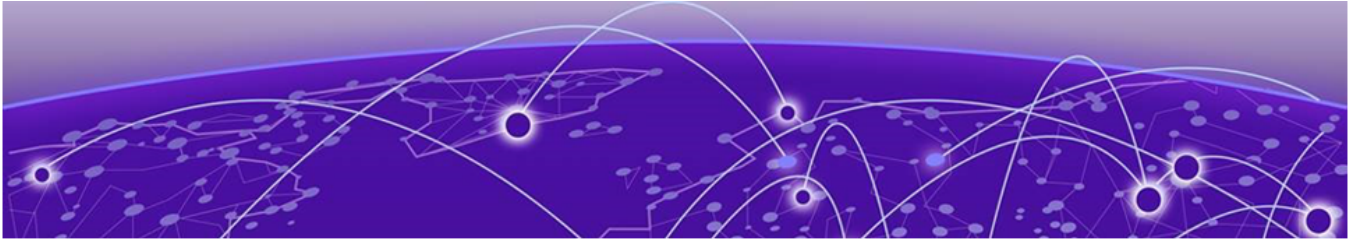

Dashboard

- [System Widget](#) on page 21
- [Fabrics Widget \(Fabric Mode\)](#) on page 22
- [Tenants Widget \(Fabric Mode\)](#) on page 22
- [Locations Widget](#) on page 23
- [Devices Widget](#) on page 23
- [Users Widget](#) on page 24
- [Help & Support Widget](#) on page 24
- [Support Save](#) on page 24

The XCO's **Welcome user!** dashboard screen or the landing page provides an overview of system health and provides quick access to various pages such as Fabrics, Locations, Devices, and Users. The critical errors in the system are marked in red.

The dashboard varies depending on the logged-in user role. For more information about user roles, see [User Roles](#) on page 155.

System Widget

The system widget on the dashboard displays information about nodes and microservices running in the system, health status of storage, security, and high availability. It also provides access to the **Support Save** menu.

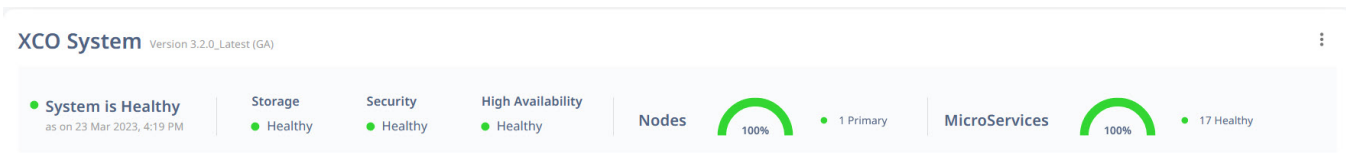


Table 8: System widget components

Component	Description
Storage	Indicates the storage status.
Security	Indicates the security status.
High Availability	Indicates the high availability status.

Table 8: System widget components (continued)


Component	Description
Nodes	Indicates the count of primary and standby nodes.
Microservices	Indicates the count of healthy, degraded, and critical state of microservices.

Related Topics

[Support Save](#) on page 24


Fabrics Widget (Fabric Mode)

The **Fabrics** widget on the dashboard displays an overview of fabrics health and the five most heavily used fabrics with high utilization. Use the Fabrics widget to access the `Fabrics` management page.

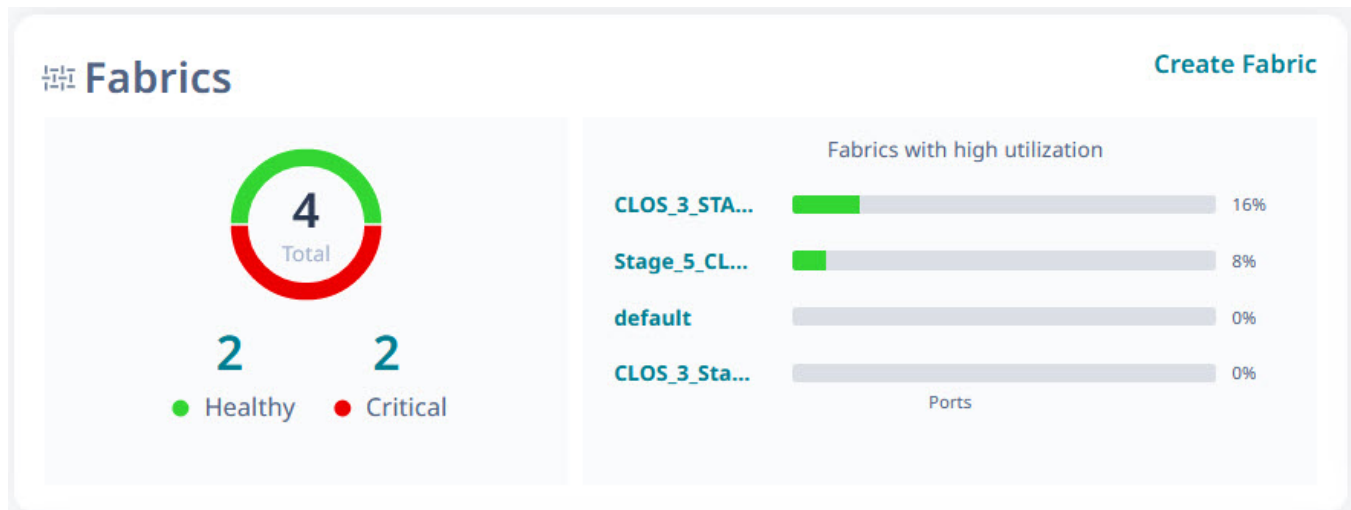

Tenants Widget (Fabric Mode)

The **Tenants** widget on the dashboard displays an overview of tenants health and the top five tenants in terms of utilization. Use the Tenants widget to access the `Tenants` management page.

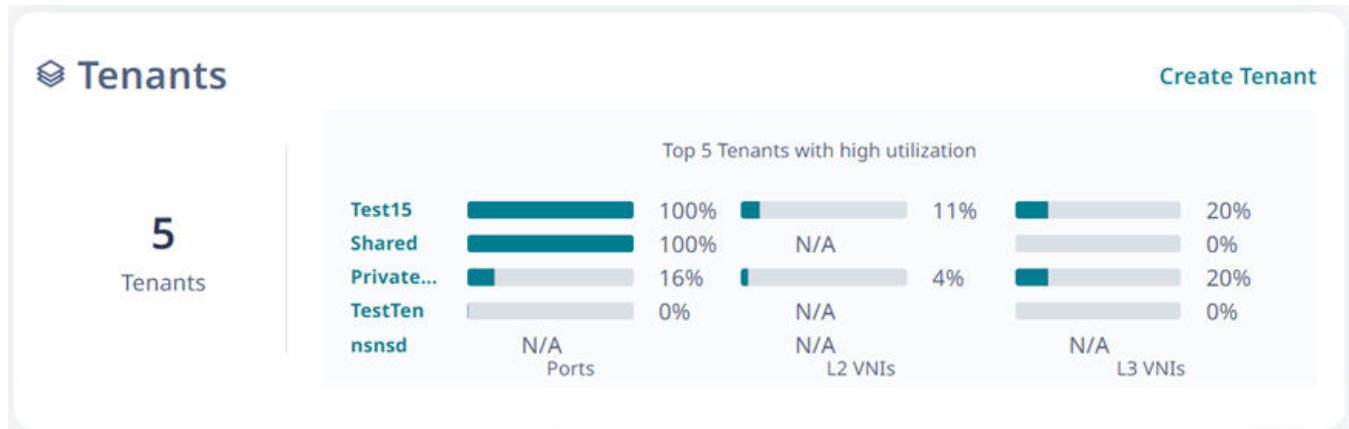

Locations Widget

The **Locations** widget on the dashboard displays the total number of locations and their health status. Use the locations widget to access the `Locations` management page.




Devices Widget

The **Devices** widget on the dashboard displays the total number of discovered devices and their health status along with type specific device health status. Use the devices widget to access the `Devices` management page.



Users Widget

The **Users** widget on the dashboard displays the number of active users, active users by type, TACACS+ servers, and LDAP servers information. Use the users widget to access the `Users` management page.

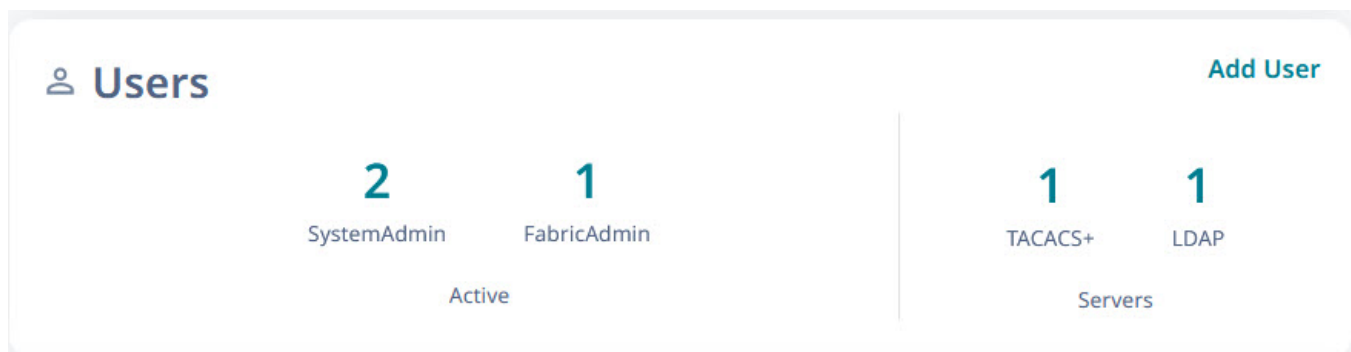

Help & Support Widget

The **Help & Support** widget displays customer support contact information.

Support Save

XCO supports Support Save logs collection for troubleshooting.

You can generate and download Support Save logs as follows:

1. Generate system Support Save logs
2. Configure remote server for copying Support Save logs
3. Download Support Save logs

Related Topics

[Register Remote Server](#) on page 25

[Generate Support Save](#) on page 26


[Download Support Save](#) on page 27

Register Remote Server

About This Task

You can configure a remoter server to copy the generated Support Save logs.


Procedure

1. In the Navigation menu, select **Dashboard**.
2. Select  in the System Health widget.
3. Select **Support Save**.
4. Select **Register**.

Support Save ? ×


All fields marked with an asterisk (*****) are required.

Remote Server

 No Remote Server is registered
Register


Support Save Files Generate Support Save

Showing **0 - 0** of **0** results



Page Size

10 ▾

Latest as
on
11:14:12
AM 

Name	Time	Status	Actions
No Support Saves found			

< >

Cancel

Ok


5. In the **IP Address** field, add the IP address of the remote server.
6. In the **Username** and **Password** fields, add the device credentials.
7. In the **Directory** field, provide the remote server path.
8. In the **Protocol** field, select the protocol.
 - **FTP**
 - **SCP**
9. In the **Max Support File Save Limit**, select a value to configure the number of support save files.

When the configured support save file limit is reached, the oldest support save file is deleted when a new support save request is triggered.

 - The number of save files defaults to five and a maximum of 20 files are supported.
 - A minimum of two support files are required.
10. Select **Register**.

Generate Support Save

Procedure

1. In the Navigation menu, select **Dashboard**.
2. Select  in the System Health widget.
3. Select **Support Save**.
4. Select **Generate Support Save**.
The new support save file is added to the list of support save files.


Support Save Files





Generate Support Save


Showing 1 - 4 of 4 results

Page Size


10

Latest as
on
12:17:58
PM
 

Name	Time	Status	Actions
efa_2023-03-02T12-21-29.336.logs.zip	2023-03-02	● Completed	
efa_2023-03-02T12-21-01.625.logs.zip	2023-03-02	● Completed	
efa_2023-03-02T12-20-55.129.logs.zip	2023-03-02	● Completed	
efa_2023-03-02T11-32-49.508.logs.zip	2023-03-02	● Completed	



1



When the configured support save file limit is reached, the oldest support save file is deleted when a new support save request is triggered.

- The number of save files defaults to five and a maximum of 20 files are supported.
- A minimum of two support files are required.



For information on configuring the support save file limit, see [Register Remote Server](#) on page 25.

5. Select **OK**.

A notification is displayed when the Support Save file is generated.

Download Support Save

Procedure

1. In the Navigation menu, select **Dashboard**.
2. Select  in the System Health widget.
3. Select **Support Save**.
4. Select **Download** () for the required support save logs file.
The selected support save file is downloaded to your device.



Fabrics (Fabric Mode)

- [Create a Non-Clos Fabric](#) on page 29
- [Create a 3 Stage Clos Fabric](#) on page 35
- [Create a 5 Stage Fabric](#) on page 41
- [Edit Fabric](#) on page 46
- [Download Fabric Inventory](#) on page 47
- [Delete Fabric](#) on page 48
- [Download Health Report](#) on page 48
- [View Fabric Topology](#) on page 48
- [Edit Fabric Topology](#) on page 49
- [View Firmware History](#) on page 52
- [View Operational History](#) on page 52
- [Network Essentials](#) on page 53
- [Firmware Upgrade](#) on page 54
- [Clone a Fabric](#) on page 59
- [Reboot a Device](#) on page 59

A fabric denotes a collection of interconnected devices in a topology on which underlay and overlay networks are configured.

XCO 3.2.0 and later releases support building and managing small data center (non-Clos) fabrics and 3-Stage and 5-Stage IP Clos fabrics based on a BGP underlay with a BGP or EVPN overlay.

- Non-Clos topology involves one to four interconnected racks. Each rack consists of a pair of leaf nodes or border leaf nodes.
- 3-Stage Clos topology involves a spine layer and leaf or border leaf layer. The border leaf can be single-homed or dual-homed.
- 5-Stage Clos topology involves a super spine layer, spine layer, and leaf or border leaf layer. The leaf or border leaf can be single-homed or dual-homed.

For more information on IP fabric topologies, see [ExtremeCloud Orchestrator CLI Administration Guide, 3.6.0](#).

Tenant Network onboarding services are supported on both 3-stage and 5-stage Clos topologies, allowing connectivity for devices connected to the fabric, such as compute (servers), storage, and external routers or gateways. For information on configuring and managing tenants, see [Tenants \(Fabric Mode\)](#) on page 61.

You can use the **Fabrics** page to configure and manage IP fabrics.

Showing 1 - 4 of 4 results Group By None Page Size 10 Latest as on 10:18:33 AM 🔄 ⌵

Name	Health	Type	Stage	Status	Leafs	Border Leafs	Spines	Super Spines	Actions
fiveClos	Degraded	Clos	5 Stage	Created	0	0	0	1	⋮
TestNon2	Critical	Non Clos	n/a	Configure-success	2	0	n/a	n/a	⋮
nonClosTest	Healthy	Non Clos	n/a	Created	0	0	n/a	n/a	⋮
default	Degraded	Clos	3 Stage	Created	0	0	1	n/a	⋮

2023 Extreme Networks Inc. [About](#) [Terms](#) [Privacy Policy](#) ExtremeCloud Orchestrator

For information on the ExtremeCloud Orchestrator user interface and common operations in the interface, see:

- [User Interface](#) on page 18
- [Refresh Page View](#) on page 19
- [Pagination](#) on page 20
- [Search, Group, and Filter](#) on page 20

Create a Non-Clos Fabric

Before You Begin

- A non-clos topology supports a maximum of four racks with two devices each.
- The devices must be registered with the inventory before adding them to the fabric.

Procedure

1. In the Navigation menu, select **Fabrics**.
2. In the Fabrics page, select **Create Fabric**.
3. In the **Fabric Name** field, enter a name for the fabric.
4. (Optional) In the **Fabric Description** field, enter a description for the fabric.


5. Select **Non Clos** topology.

1 Non Clos 2 Properties 3 Topology Validation


Add Fabric Name and Select Type

Fabric Name *


Fabric Description (Optional)

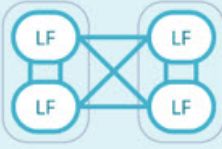

Non Clos
Non CLOS topology involves n (1 to 4) number of racks interconnected to each other. Rack consists of a pair of leaf or a pair of border leaf

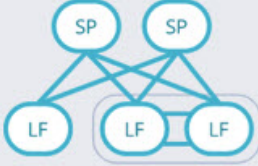

3 Stage Clos
3-Stage CLOS topology involves Spine Layer and Leaf/Border Leaf Layer. Leaf/Border Leaf can be single-homed or dual-homed.

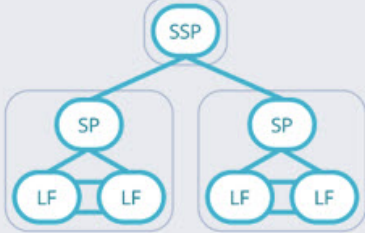


5 Stage Clos
5-Stage CLOS topology involves Super Spine Layer, Spine Layer and Leaf/Border Leaf Layer. Leaf/Border Leaf can be single-homed or dual-homed.

Next

6. Select **Next**.

- In the **Fabric Properties** page, complete the fields as required or select the **Auto Config Mode** check box to use the default fabric settings.

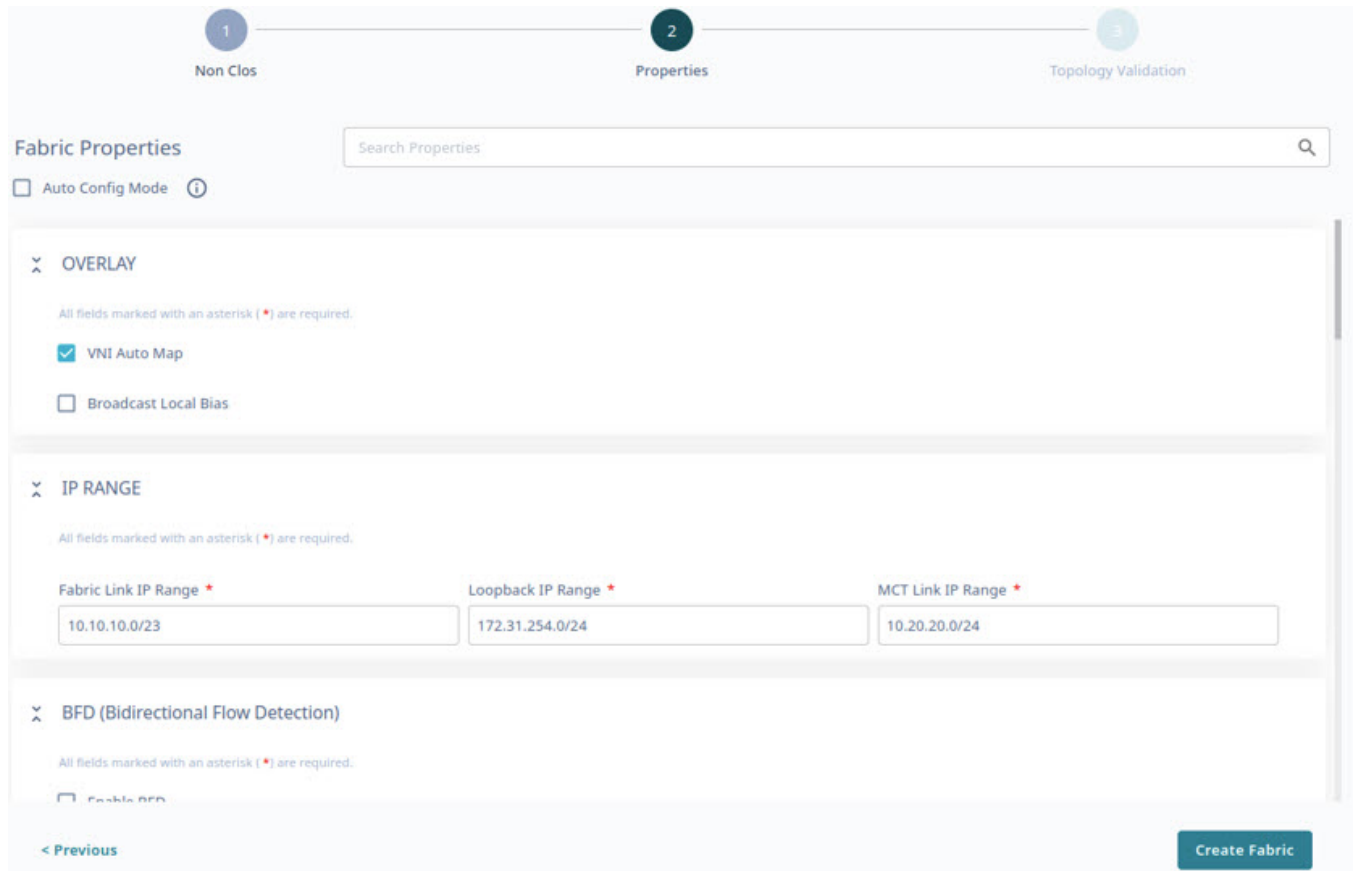

- To create a multi-rack Non-Clos fabric, clear the **Single Rack Deployment** check box.
- Select **Create Fabric**.
- In the **Physical Topology** page, add racks as required.

Use **Topology View** (🏠) and **List view** (☰) to switch the view between topology and list.

- Select **+** or **-** to add or remove a rack.



Alternatively, you can do the following:

- In the Devices panel, select **+ Add Rack** to add a new rack.
- From the rack menu (⋮), select **Remove** or select **Delete** (🗑️) in the devices panel to remove a rack.

- b. (Optional) From the rack menu (⋮), select **Convert to Border Rack** or **Convert to Leaf Rack** to change the rack type.

Physical Topology

10.20.246.6 added to the fabric successfully

Unassigned Devices

Name	Model	IP	Firmware	LastRef
SLX	3001	10.20.246.18	18s.1.03	10 minutes
SLX	3001	10.20.246.24	18s.1.03	3 minutes
Freedom-07	3001	10.20.246.23	18s.1.03	3 minutes
SLX	3001	10.20.246.17	18s.1.01c	3 minutes
NHF-Leaf1	3009	10.20.246.5	20.4.3sksos20.4.3a_230218_1918	10 minutes

Showing 6 - 10 of 12 results


Assigned Devices 3/4

Name	Model	Type	Ip	Ports	Firmware
Rack1					
NH-1	3012	Leaf	10.20.246.1	-	20.4.3sksos20.4.3a_230218_1918
NH-2	3012	Leaf	10.20.246.2	-	20.4.3sksos20.4.3a_230218_1918

11. Drag and drop the required devices from the Devices panel to the rack.
- Select **Add Device** to add a device to the inventory. For more information, see [Add Devices](#) on page 90.
 - The devices available in the rack are displayed in the **Assigned Devices** list.
 - The inventory devices that are not part of the fabric are displayed in the **Unassigned Devices** list.
 - You can select devices in the rack to access and update device specific configurations such as ASN, VTEP Loopback ID, and Loopback ID. The attributes in the **Device Information** window vary by device role.
 - You can select and edit device and fabric configurations directly from the **Physical Topology** or **Devices** panel as required.
 - In the **Device Information** window, select **Device Actions** > **Network Essentials** to modify network essential configurations of the required device ports. For more information, see [Network Essentials](#) on page 53.

Device Information ✕

All fields marked with an asterisk (*) are required.



- Device Actions
- Delete
- Firmware Upgrade
- Network Essentials
- Reboot

Fabric Device Attributes Links

Device IP *

Hostname (Optional)

Role *

Dual-Homed

Local ASN (Optional)

Loopback ID (Optional)

VTEP Loopback ID (Optional)

MCT Peer


Hostname	Node IP	Dual-Homed
● BRL1	10.20.50.59	Yes

12. Select **Discover Topology** to validate the topology.


The discovered topology is displayed.

The ports or links that are down are marked in red in the topology. To turn a port or link up:

- a. Select the link that is down.
- b. In the **Physical Connection** dialog box, configure the ports.
- c. Select **+** or **-** to add or delete ports.
- d. Select **Apply**.

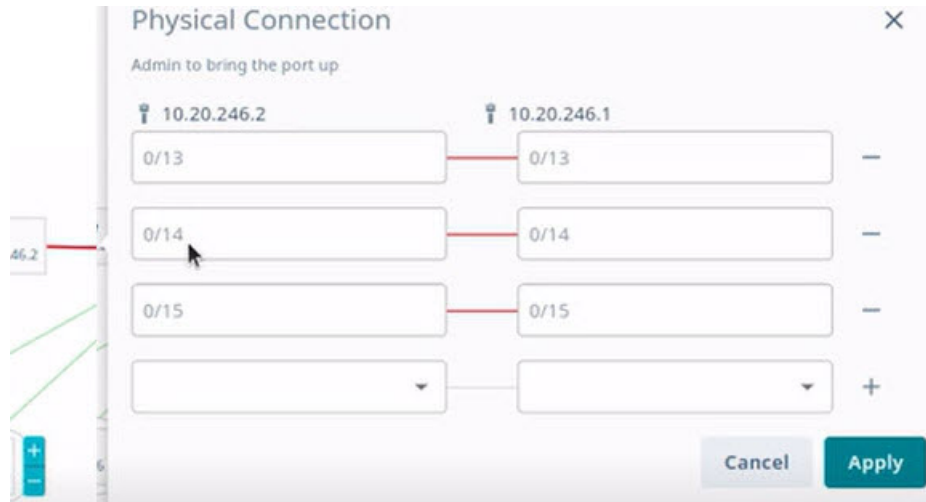


e. Select **Discover Topology** to validate the topology.

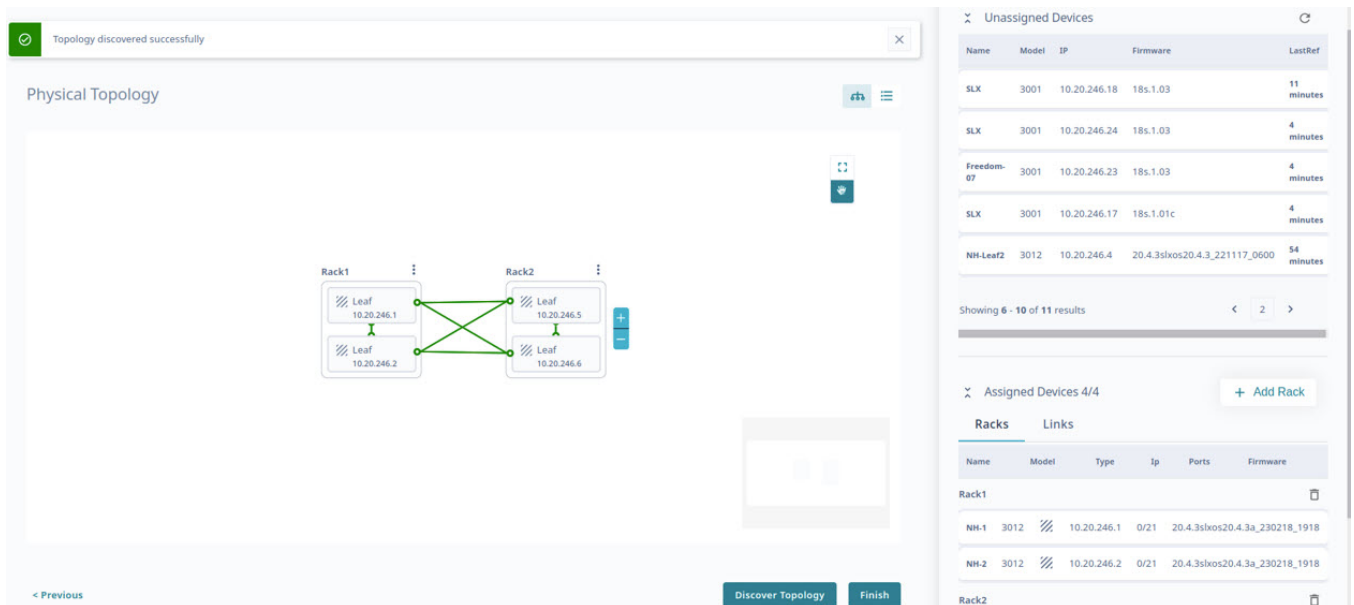

13. To enlarge the topology to the width of the interface, select **Expand** ().

14. To zoom in and out on the topology screen, use the **Zoom** ( ) icons.

15. To scroll through the topology screen, use the **Scroll** () icon.
16. Select **Finish** to configure the topology.

The non-Clos fabric topology is configured.

What to Do Next

Select **View Fabric** or **Proceed to Dashboard** to return to the **Fabrics** page.

Related Topics

- [Create a 3 Stage Clos Fabric](#) on page 35
- [Create a 5 Stage Fabric](#) on page 41
- [Edit Fabric](#) on page 46
- [Download Fabric Inventory](#) on page 47
- [Delete Fabric](#) on page 48
- [Download Health Report](#) on page 48
- [View Fabric Topology](#) on page 48
- [Edit Fabric Topology](#) on page 49
- [Configure Network Essentials](#) on page 53
- [Firmware Upgrade](#) on page 54
- [Clone a Fabric](#) on page 59
- [Reboot a Device](#) on page 59

Create a 3 Stage Clos Fabric

Procedure

1. In the Navigation menu, select **Fabrics**.
2. In the Fabrics page, select **Create Fabric**.
3. In the **Fabric Name** field, enter a name for the fabric.
4. (Optional) In the **Fabric Description** field, enter a description for the fabric.


5. Select **3 Stage Clos** topology.

1 3 Stage Clos 2 Properties 3 Select Devices 4 Topology Validation


Add Fabric Name and Select Type

Fabric Name *


Fabric Description (Optional)

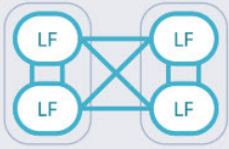

Non Clos
Non CLOS topology involves n (1 to 4) number of racks interconnected to each other. Rack consists of a pair of leaf or a pair of border leaf

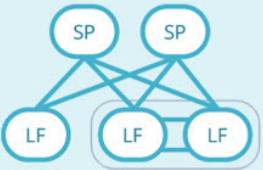

3 Stage Clos
3-Stage CLOS topology involves Spine Layer and Leaf/Border Leaf Layer. Leaf/Border Leaf can be single-homed or dual-homed.

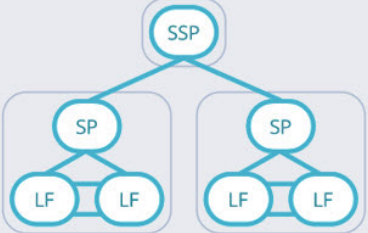


5 Stage Clos
5-Stage CLOS topology involves Super Spine Layer, Spine Layer and Leaf/Border Leaf Layer. Leaf/Border Leaf can be single-homed or dual-homed.

[Next](#)

6. Select **Next**.


7. In the **Fabric Properties** page, complete the fields as required or select the **Auto Config Mode** check box to use the default fabric settings.

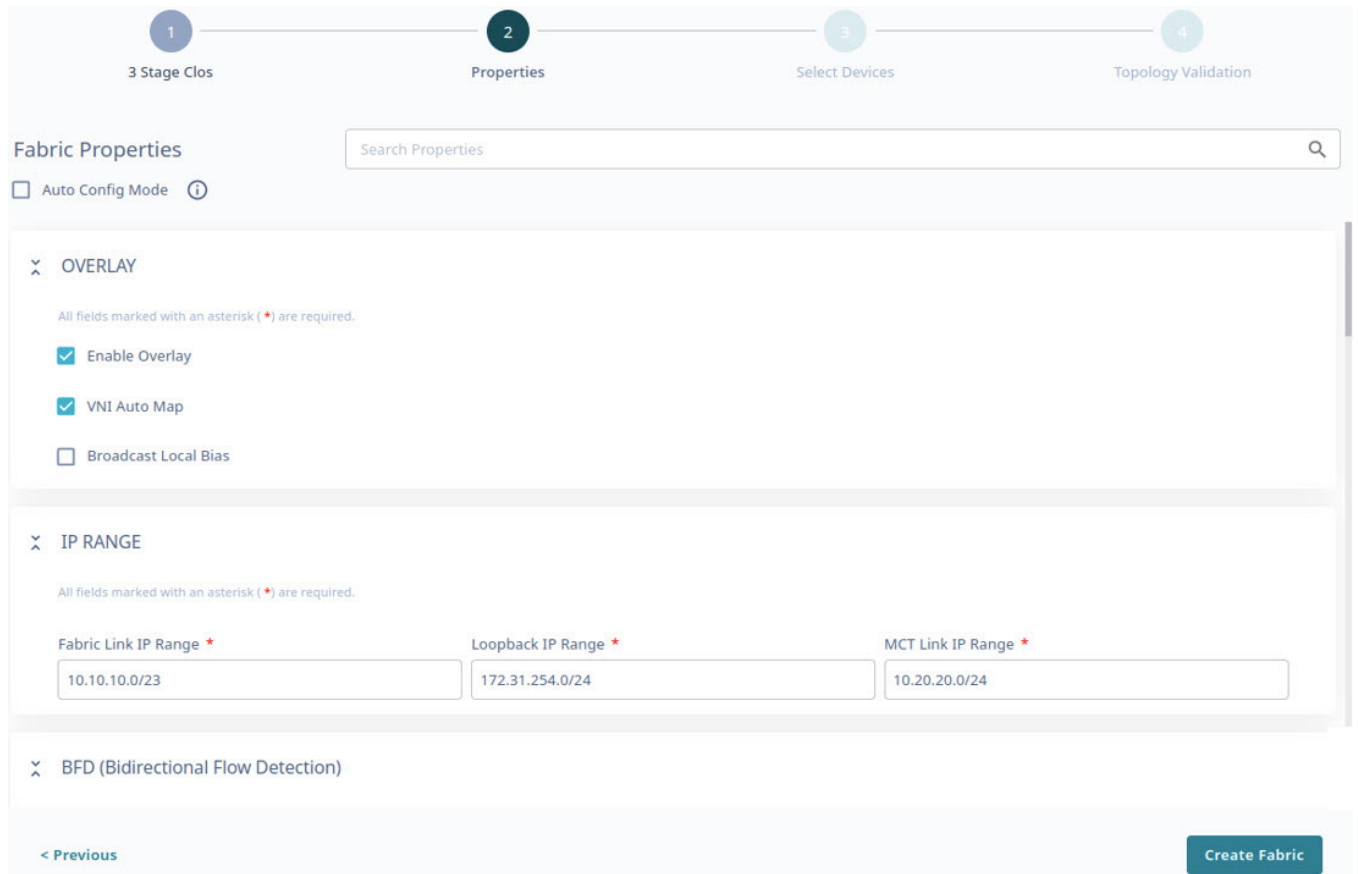

8. Select **Create Fabric**.

9. Select the check boxes of the required leaf devices from the following tabs:

- **Spines**
- **Border Leafs**
- **Leafs**

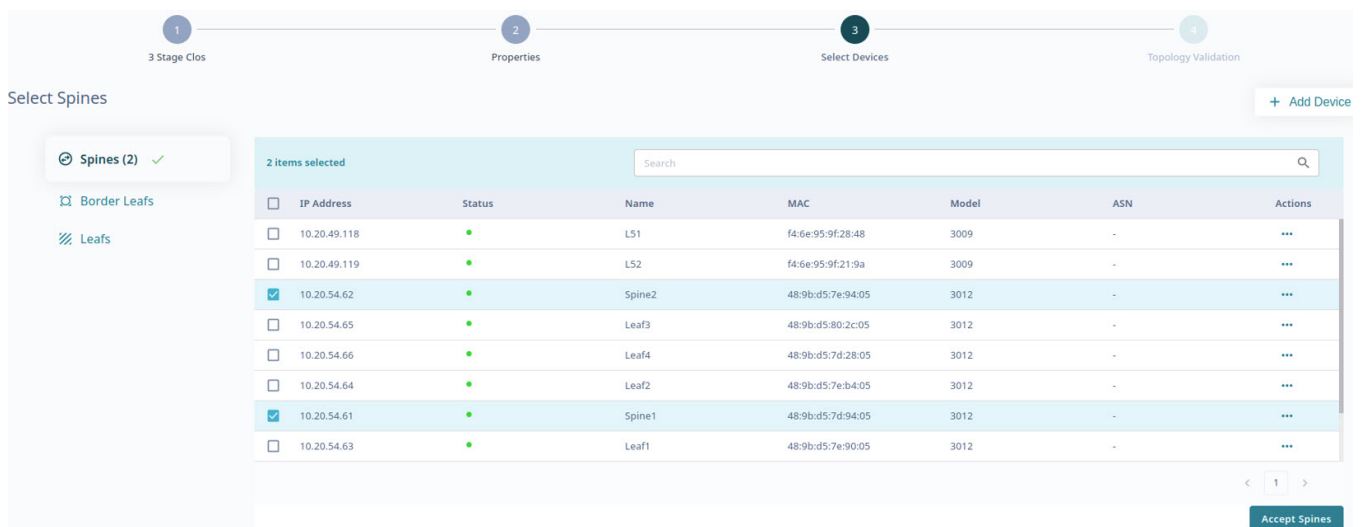


The border leaf devices are optional. Select **Skip Border Leafs** to skip border leaf devices.

Select **+ Add Device** to add new devices to the inventory. For more information, see [Add Devices](#) on page 90.

You can select any device row and update device specific configurations such as ASN, VTEP Loopback ID, and Loopback ID. The attributes in the **Device Information** window vary by device role.

10. Select **Accept Spine Leafs**, **Accept Border Leafs**, or **Accept Leafs** as applicable.

11. Select **Accept All** to add all devices to the topology.

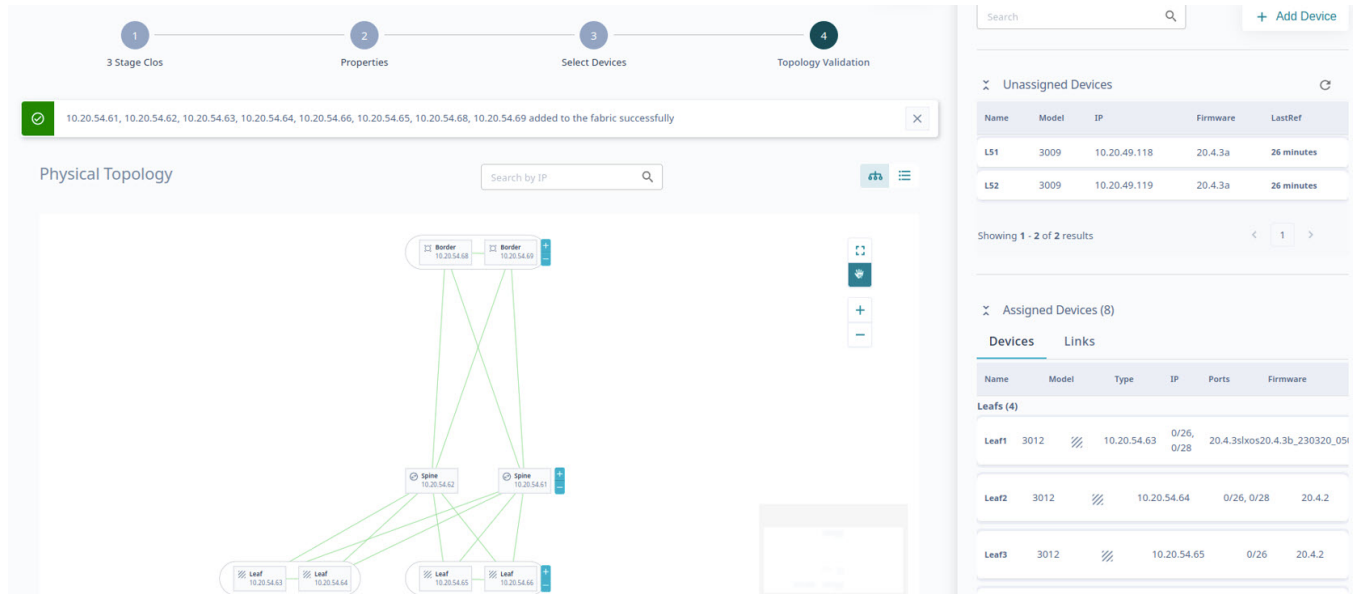

The screenshot shows the GUI interface for fabric configuration. At the top, there are four steps: 1. 3 Stage Clos, 2. Properties, 3. Select Devices, and 4. Topology Validation. A notification bar indicates that 10.20.54.61, 10.20.54.62, 10.20.54.63, 10.20.54.64, 10.20.54.66, 10.20.54.65, 10.20.54.68, and 10.20.54.69 have been added to the fabric successfully.

The **Physical Topology** panel shows a network diagram with the following components:

- Two **Border** devices (10.20.54.68 and 10.20.54.69).
- Two **Spine** devices (10.20.54.62 and 10.20.54.61).
- Four **Leaf** devices (10.20.54.63, 10.20.54.64, 10.20.54.65, and 10.20.54.66).

The **Device Information** panel on the right shows a table of devices:


Unassigned Devices				
Name	Model	IP	Firmware	LastRef
L51	3009	10.20.49.118	20.4.3a	26 minutes
L52	3009	10.20.49.119	20.4.3a	26 minutes

Assigned Devices (8)					
Devices		Links			
Name	Model	Type	IP	Ports	Firmware
Leafs (4)					
Leaf1	3012		10.20.54.63	0/26, 0/28	20.4.3sfxos20.4.3b_230320_05
Leaf2	3012		10.20.54.64	0/26, 0/28	20.4.2
Leaf3	3012		10.20.54.65	0/26	20.4.2

- The discovered topology is displayed. You can select and edit device and fabric configurations directly from the **Physical Topology** or **View Devices** panel as required.
- In the **Device Information** window, select **Device Actions > Network Essentials** to modify network essential configurations of the required device ports. For more information, see [Network Essentials](#) on page 53.

Device Information ✕

All fields marked with an asterisk (*) are required.



- Device Actions
- Delete
- Firmware Upgrade
- Network Essentials
- Reboot

Fabric Device Attributes Links

Device IP *

Hostname (Optional)

Role *

Dual-Homed

Local ASN (Optional)

Loopback ID (Optional)

VTEP Loopback ID (Optional)

MCT Peer


Hostname	Node IP	Dual-Homed
● BRL1	10.20.50.59	Yes

12. Select **Discover Topology** to validate the topology.

The discovered topology is displayed.

The ports or links that are down are marked in red in the topology. To turn a port or link up:

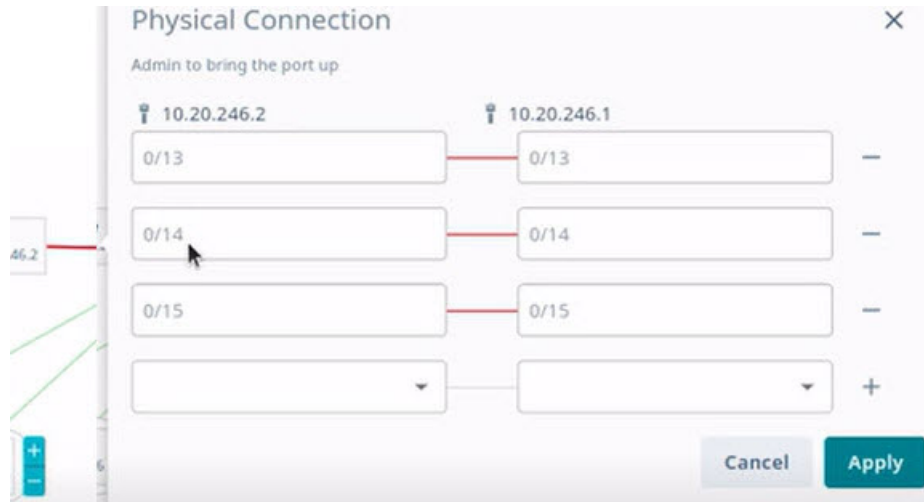

- Select the link that is down.
- In the **Physical Connection** dialog box, configure the ports.
- Select **+** or **-** to add or delete ports.
- Select **Apply**.



- Select **Discover Topology** to validate the topology.

Select **Topology View** () and **List view** () to switch the view between topology and list.

13. To enlarge the topology to the width of the interface, select **Expand** ().

14. To zoom in and out on the topology screen, use the **Zoom** ( ) icons.

15. To scroll through the topology screen, use the **Scroll** () icon.

16. Select **Finish** to configure the topology.

The 3 stage Clos fabric topology is configured.

What to Do Next

Select **View Fabric** or **Proceed to Dashboard** to return to the **Fabrics** page.

Related Topics

- [Create a Non-Clos Fabric](#) on page 29
- [Create a 5 Stage Fabric](#) on page 41
- [Edit Fabric](#) on page 46
- [Download Fabric Inventory](#) on page 47
- [Delete Fabric](#) on page 48
- [Download Health Report](#) on page 48

- [View Fabric Topology](#) on page 48
- [Edit Fabric Topology](#) on page 49
- [Configure Network Essentials](#) on page 53
- [Firmware Upgrade](#) on page 54
- [Clone a Fabric](#) on page 59
- [Reboot a Device](#) on page 59

Create a 5 Stage Fabric

Procedure

1. In the Navigation menu, select **Fabrics**.
2. In the Fabrics page, select **Create Fabric**.
3. In the **Fabric Name** field, enter a name for the fabric.
4. (Optional) In the **Fabric Description** field, enter the description for the fabric.
5. Select the **5 Stage Clos** topology.

1
5 Stage Clos

2
Properties

3
Select Pods


4
Select Devices

5
Topology Validation

Add Fabric Name and Select Type


Fabric Name *

Fabric Description (Optional)

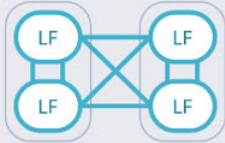


Non Clos

Non CLOS topology involves n (1 to 4) number of racks interconnected to each other. Rack consists of a pair of leaf or a pair of border leaf

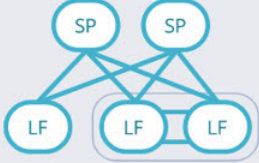

3 Stage Clos

3-Stage CLOS topology involves Spine Layer and Leaf/Border Leaf Layer. Leaf/Border Leaf can be single-homed or dual-homed.

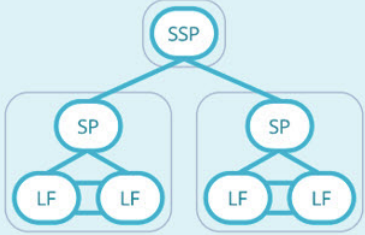

5 Stage Clos

5-Stage CLOS topology involves Super Spine Layer, Spine Layer and Leaf/Border Leaf Layer. Leaf/Border Leaf can be single-homed or dual-homed.

Next

6. Select **Next**.

7. In the **Fabric Properties** page, complete the fields as required or select the **Auto Config Mode** check box to use the default fabric settings.

1 2 3 4 5
5 Stage Clos Properties Select Pods Select Devices Topology Validation

Fabric Properties

Auto Config Mode ⓘ

✕ OVERLAY

All fields marked with an asterisk (*) are required.

Enable Overlay

VNI Auto Map

Broadcast Local Bias

✕ IP RANGE

All fields marked with an asterisk (*) are required.

Fabric Link IP Range *

Loopback IP Range *


MCT Link IP Range *

✕ BFD (Bidirectional Flow Detection)

< Previous Create Fabric

8. Select **Create Fabric**.

9. In the **Build 5 Stage Clos Fabric Pods** page, select **+** or **-** to add new 3 stage or border leaf pods.

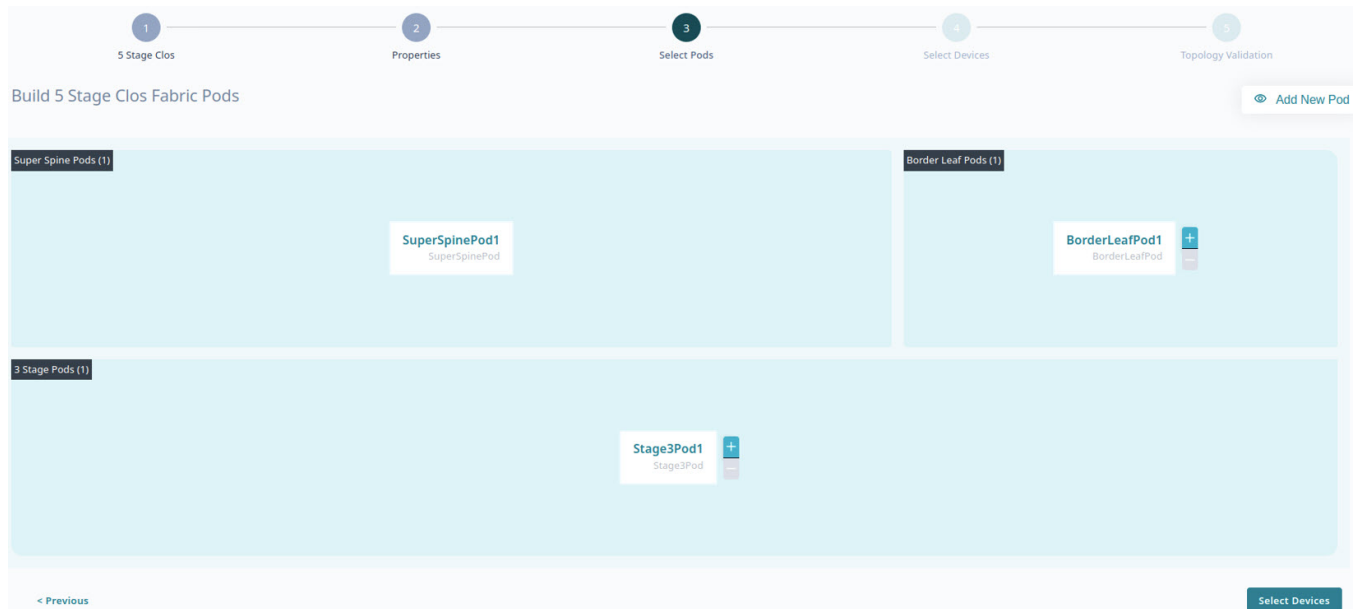


- Alternatively, you can select **Add New Pod**.
- One pod of each type is available in the UI by default and the pod names are auto-generated. For example: SuperSpinePod1, Stage3Pod1, and BorderLeafPod1.

10. Select **Select Devices** to add new devices.

11. Select the check boxes of the required devices from the following tabs:

- **SuperSpinePod1**
- **Stage3Pod1**
- **BorderLeafPod1**

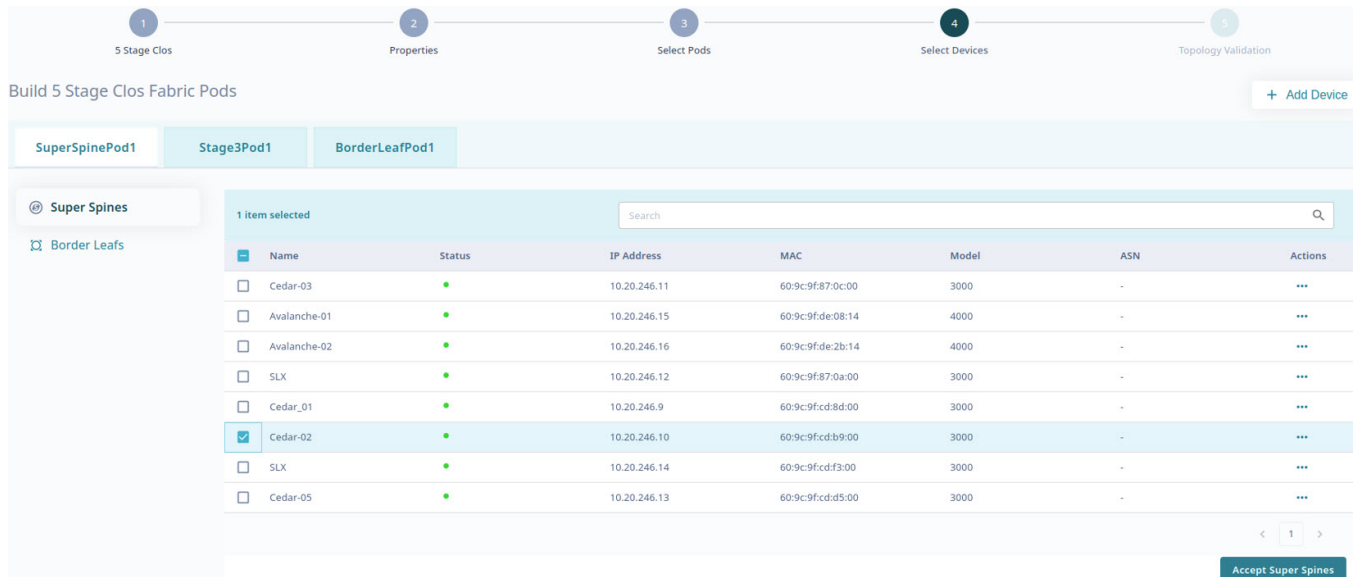

12. Select **Accept Super Spine Pods**, **Accept Spines**, or **Accept Border Leaf Pods** as applicable.

13. Select **Accept All the Pods** to add all devices to the topology.

Physical Topology

Search IP Address of the Node

+ Add New Pod

Unassigned Devices

Name	Model	IP	Firmware	LastRef
Cedar_01	3000	10.20.246.9	18s.1.03	43 minutes
Freedom-03	3001	10.20.246.19	18s.1.03	0
Freedom-05	3001	10.20.246.21	18s.1.01a	43 minutes
Freedom_06	3001	10.20.246.22	18s.1.01a	43 minutes
Freedom-04	3001	10.20.246.20	18s.1.03	13 minutes

Showing 1 - 5 of 14 results

Assigned Devices (7)


Devices Links

Name	Model	Type	IP	Ports	Firmware
SuperSpinePod1 (1)					
Cedar-02	3000		10.20.246.10	-	18s.1.03
BorderLeafPod1 (2)					
SLX	3000		10.20.246.14	-	18s.1.01a
Cedar-05	3000		10.20.246.13	-	18s.1.01a

- The discovered topology is displayed. You can select and edit the device configuration directly from the **Physical Topology** or **View Devices** panel as required.
- You can select devices in the rack to access and update device specific configurations such as ASN, VTEP Loopback ID, and Loopback ID. The attributes in the **Device Information** window vary by device role.
- In the **Device Information** window, select **Device Actions > Network Essentials** to modify network essential configurations of the required device ports. For more information, see [Network Essentials](#) on page 53.

Device Information ✕

All fields marked with an asterisk (*) are required.



Device Actions

- Delete
- Firmware Upgrade
- Network Essentials
- Reboot

Fabric Device Attributes **Links**

Device IP *

Hostname (Optional)

Role *

Dual-Homed

Local ASN (Optional)

Loopback ID (Optional)

VTEP Loopback ID (Optional)

MCT Peer

Hostname	Node IP	Dual-Homed
● BRL1	10.20.50.59	Yes

Select **Topology View** () and **List view** () to switch the view between topology and list.

14. To enlarge the topology to the width of the interface, select **Expand** ()

15. To zoom in and out on the topology screen, use the **Zoom** ( ) icons.

16. To scroll through the topology screen, use the **Scroll** () icon.

17. Select **Finish** to configure the topology.

The 5 stage Clos fabric topology is configured.

What to Do Next

Select **View Fabric** or **Proceed to Dashboard** to return to the Fabrics page.

Related Topics

- [Create a Non-Clos Fabric](#) on page 29
- [Create a 3 Stage Clos Fabric](#) on page 35
- [Edit Fabric](#) on page 46
- [Download Fabric Inventory](#) on page 47
- [Delete Fabric](#) on page 48
- [Download Health Report](#) on page 48
- [View Fabric Topology](#) on page 48
- [Edit Fabric Topology](#) on page 49
- [Configure Network Essentials](#) on page 53
- [Firmware Upgrade](#) on page 54
- [Clone a Fabric](#) on page 59
- [Reboot a Device](#) on page 59

Edit Fabric

Procedure

1. In the Navigation menu, select **Fabrics**.
2. In the **Fabrics** page, click anywhere in the required fabric row except the Actions column () to proceed to the fabric Topology page.
3. Select **Settings**.
Alternatively, you can select **Edit Settings** from the Actions column for the required fabric.

4. In the **Fabric Properties** page, modify the fields as required.

Fabric Properties

🔍
?
✕

✕
OVERLAY

All fields marked with an asterisk (*****) are required.

Enable Overlay

VNI Auto Map

Broadcast Local Bias

✕
IP RANGE

All fields marked with an asterisk (*****) are required.

Fabric Link IP Range *****

MCT Link IP Range *****

Loopback Scheme *****

Loopback IP Range *****

✕
BFD (Bidirectional Flow Detection)

All fields marked with an asterisk (*****) are required.

Enable BFD

BFD TX Interval *****

BFD RX Interval *****

BFD Multiplier *****

Edit Properties

5. Select **Edit Properties**.

Download Fabric Inventory


Procedure

1. In the Navigation menu, select **Fabrics**.

2. Select  **Download**.
A file in .csv format is downloaded to your device.

Delete Fabric

Procedure

1. In the Navigation menu, select **Fabrics**.
2. In the **Fabrics** page, select **Delete** () from the Actions column (**⋮**) for the fabric you want to delete.
3. Select **Confirm** when prompted.

Download Health Report


Procedure



1. In the Navigation menu, select **Fabrics**.
2. In the **Fabrics** page, select **Download Health Report** from the Actions column (**⋮**) for the required fabric.
The fabric health report is downloaded to your device.

View Fabric Topology

Procedure

1. In the Navigation menu, select **Fabrics**.
2. In the **Fabrics** page, click anywhere in the required fabric row except the Actions column (**⋮**) to proceed to the fabric Topology page.
3. Select the required topology tab.
 - **Physical**: Represents physical connections of the fabric devices
 - **Underlay**: Represents BGP sessions between the fabric devices
 - **Overlay**: Represents the overlay (VXLAN) tunnel state between leaf or border-leaf devices

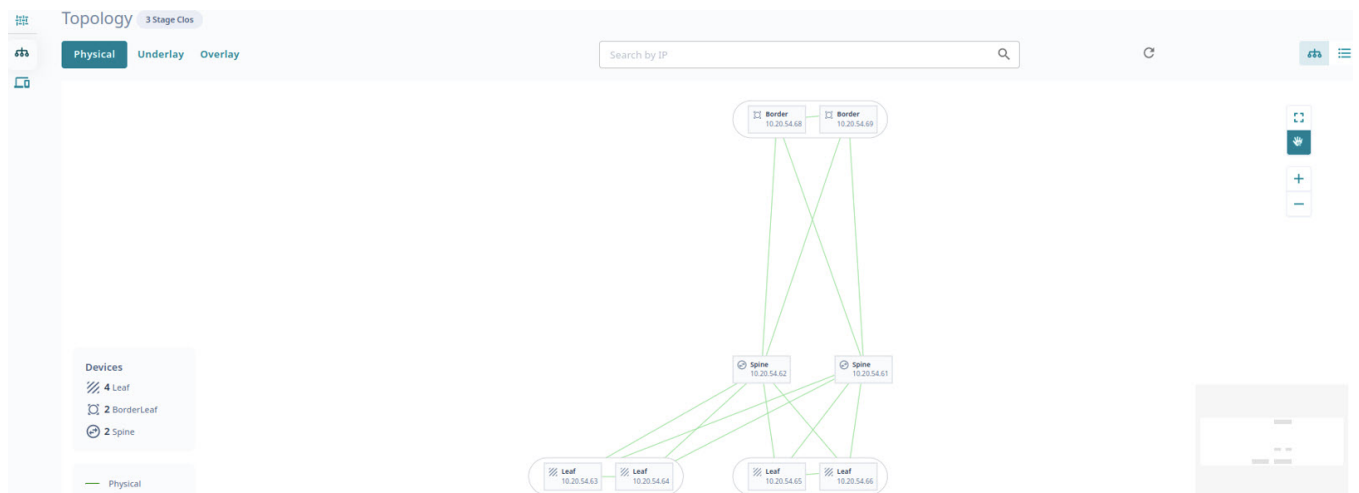

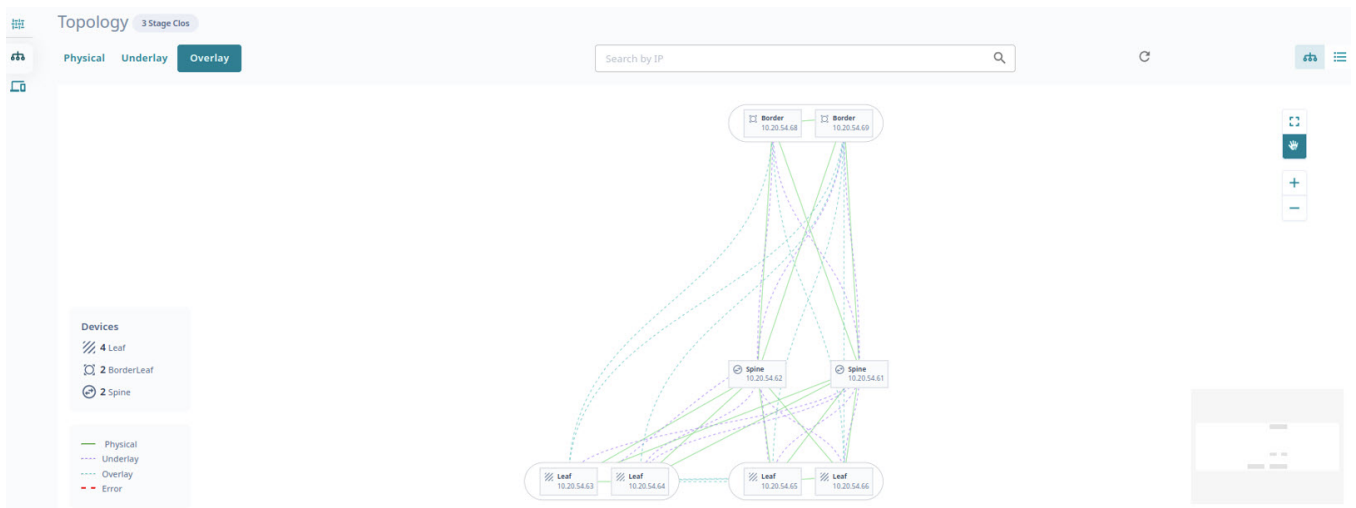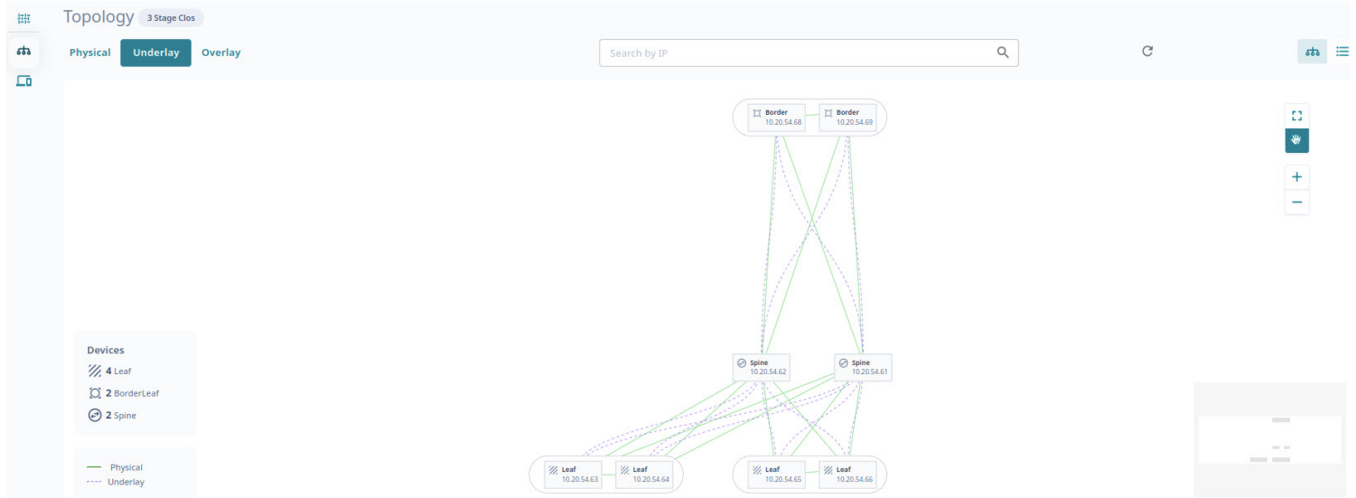

Select **Topology View** (🔗) and **List view** (☰) to switch the view between topology and list.

Encap Type	Tunnel Type	Source Leaf IP	Destination Leaf IP	Source VTEP IP	Destination VTEP IP	Admin State	OPER State
10.20.54.64,10.20.54.63							
vxlan	unicast	10.20.54.64,10.20.54.63	10.20.54.65,10.20.54.66	172.31.254.146	172.31.254.97	up	up
vxlan	unicast	10.20.54.64,10.20.54.63	10.20.54.68,10.20.54.69	172.31.254.146	172.31.254.3	up	up
10.20.54.65,10.20.54.66							
vxlan	unicast	10.20.54.65,10.20.54.66	10.20.54.64,10.20.54.63	172.31.254.97	172.31.254.146	up	up
vxlan	unicast	10.20.54.65,10.20.54.66	10.20.54.68,10.20.54.69	172.31.254.97	172.31.254.3	up	up

Edit Fabric Topology

Procedure

1. In the Navigation menu, select **Fabrics**.

2. In the **Fabrics** page, click anywhere in the required fabric row except the Actions column (•••) to proceed to the fabric Topology page.
 - The fabric topology is displayed.
 - Alternatively, you can select **Edit** from the Actions column for the required fabric.
3. In the **Topology** page, select **Edit**.
 - Select **Devices** to add or remove devices in the topology.

Editing Stage3_CLOS Close

Topology Stage Clos

EDIT MODE

Settings

Devices

- /// 2 Leaf
- 2 BorderLeaf
- ⊙ 2 Spine

Links

Discover Topology

Update Fabric

Devices Close

Search + Add Device

Unassigned Devices Refresh

Name	Model	IP	Firmware	LastRef
Cedar_01	3000	10.20.246.9	18s.1.03	58 minutes
Freedom-03	3001	10.20.246.19	18s.1.03	19 minutes
Freedom-05	3001	10.20.246.21	18s.1.01a	58 minutes
Freedom_06	3001	10.20.246.22	18s.1.01a	19 minutes
Freedom-04	3001	10.20.246.20	18s.1.03	18 minutes

Showing 1 - 5 of 9 results < 1 >

Assigned Devices (6)


Devices Links

Name	Model	Type	IP	Ports	Firmware
------	-------	------	----	-------	----------

- Alternatively, you can select a device directly from the topology to access **Device Information** and edit **Fabric Device Attributes** as required.

Device Information ✕

All fields marked with an asterisk (*****) are required.



- Device Actions ▲
- Delete
- Firmware Upgrade
- Network Essentials
- Reboot

Fabric Device Attributes Links

Device IP *****

Hostname (Optional)

Role *****

Dual-Homed

Local ASN (Optional)

Loopback ID (Optional)

VTEP Loopback ID (Optional)

MCT Peer

Hostname	Node IP	Dual-Homed
● BRL1	10.20.50.59	Yes

- In the **Device Information** window, select **Device Actions > Network Essentials** to modify network essential configurations of the required device ports. For more information, see [Network Essentials](#) on page 53.
4. Select **Discover Topology** to verify the links in the topology.
 5. Select **Update Fabric** to update the fabric.

Refresh the page to view the updated list.

View Firmware History

About This Task

You can access **Firmware History** from both **Device Inventory** and **Fabrics** pages.

Procedure


1. In the Navigation menu, select **Fabrics**.
2. In the **Fabrics** page, click anywhere in the required fabric row except the Actions column (⋮) to proceed to the fabric Topology page.
The fabric topology is displayed.
3. In the upper right corner of the **Topology** page, select  to access the **More** menu.
4. Select **Firmware History**.


Alternatively, you can do one of the following:

- a. Select **Device Management** () to view the devices in the fabric.
- b. Select **Firmware History** from the Actions column for the required device.

In the **Device Inventory** page, select **Firmware History** from the Actions column for the required device.

The firmware history is displayed.

5. To view firmware history of multiple devices, select the check boxes of the required devices and select **Firmware History** from the Devices table menu .

Alternatively, in the **Device Inventory** page, select the check boxes of the required devices and select **Firmware History** from the Devices table menu .


The firmware history is displayed.


Related Topics

[View Operational History](#) on page 52

View Operational History

Procedure

1. In the **Firmware History** page, select  to view Operational History of the required firmware.

2. To view operational history of multiple firmware updates, select the check boxes of the required firmware history and select **Operational History** from the Firmware History table menu .
The operational history is displayed.

Related Topics

[View Firmware History](#) on page 52




Network Essentials

XCO 3.2.0 and later releases support the following network essential configurations that are required for creating and configuring fabric networks:

- Admin State (up/down)
- MTU (L2/Ipv4/Ipv6)
- Speed
- Breakout
- FEC (Forward Error Correction)
- Link Error
- RME (Redundant Management Ethernet)

Configure Network Essentials

Procedure

1. In the Navigation menu, select **Fabrics**.
2. In the **Fabrics** page, click anywhere in the required fabric row except the Actions column () to proceed to the fabric Topology page.
3. Select **Device Management** ()
4. Select **Network Essentials** from the Actions column () for the required device.
 - Network essential configuration of all ports in the selected device is displayed.
 - You can access **Network Essentials** configurations from both **Device Inventory** and **Fabrics** pages.

5. Edit the required ports.

Host Name: Device 1
IP Address: 192.168.1.11
Model: SLX 9250

Ports

0/3 X

Search

<input type="checkbox"/>	Name	Admin State	Speed	Breakout	L2MTU	IPv4MTU	IPv6MTU	FEC	Dampening	Damp. Toggle Threshold	Damp. Sampling Time	Damp. Wait Time	RME
<input type="checkbox"/>	0 / 1	Down	100Gbps	None	1500	1500	1500	rs-fec	True	1000	1222	300	True
<input type="checkbox"/>	0 / 2	Down	100Gbps	None	1500	1500	1500	rs-fec	True	1000	1222	300	True
<input checked="" type="checkbox"/>	0 / 3	Down	100Gbps	None	1500	1500	1500	rs-fec	<input checked="" type="checkbox"/>	1000	1222	300	<input checked="" type="checkbox"/>
<input type="checkbox"/>	0 / 4	Down	100Gbps	None	1500	1500	1500	rs-fec	True	1000	1222	300	True

Showing 1 - 13 of 46 results

Reset Apply Network Essentials

6. Select **Apply Network Essentials**.

Firmware Upgrade

Before You Begin

- Register firmware host. For more information, see [Register Firmware Host](#) on page 148.
- You can use the **Device Inventory** or **Fabrics** page in the user interface to perform firmware upgrade. You can check the firmware download status on both the pages.
- The **Fabrics** page initializes firmware download process with default strategy to determine the grouping of devices for firmware download to achieve least traffic disruption when upgrading a fabric with active traffic.
- You can select single or multiple devices in the fabric for firmware upgrade.
- The **Device Inventory** page supports parallel firmware download requests for any set of devices. However, the parallel firmware download processes on the **Device Inventory** page might lead to traffic loss. Use caution when you select devices on the **Device Inventory** page for firmware download.

About This Task

XCO supports firmware download and upgrade across all devices of the fabric.



Note

- As a best practice, do not change the target firmware version file name and the directory name.
- After downloading the firmware on a set of devices, attempt **Activation** and **Commit** from the same page. Switching between the **Device Inventory** page and **Fabrics** page is not supported for an ongoing upgrade cycle.
- If a set of devices that are part of a fabric is undergoing firmware upgrade process from the **Device Inventory** page, you cannot initiate a new firmware upgrade process for another set of devices from the same fabric from the **Fabrics** page.
- If you are upgrading firmware of selected devices from the **Fabrics** page, complete the **Download** and **Activation** process before initiating a new firmware download request on a new set of devices.


Procedure

1. In the Navigation menu, select **Fabrics**.
2. In the **Fabrics** page, click anywhere in the required fabric row except the Actions column (⋮) to proceed to the fabric Topology page.

Name	Health	Type	Stage	Status	Leafs	Border Leafs	Spines	Super Spines	Actions
Stage3_CLOS	Healthy	Clos	3 Stage	Configure-success	2	2	2	n/a	⋮
Stage5_CLOS	Critical	Clos	5 Stage	Configure-success	2	2	2	1	⋮
default	Healthy	Clos	3 Stage	Created	0	0	0	n/a	⋮


3. (Optional) To upgrade firmware of the selected devices in the fabric, do the following:
 - a. In the **Topology** page, go to **Device Management** (🖥️) to select the check boxes of the required devices.
 - b. Select **Firmware Upgrade** from the Actions column (⋮) for the device you want to upgrade.

To upgrade firmware of multiple devices in the fabric, select **Firmware Upgrade** from the Devices table menu (⋮).

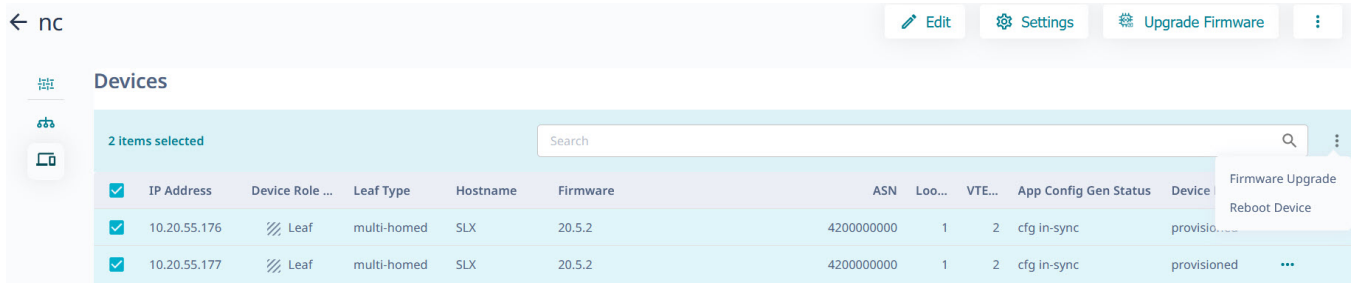



Skip this step to upgrade all devices in the fabric.

4. Select **Upgrade Firmware** to upgrade all devices in the fabric.

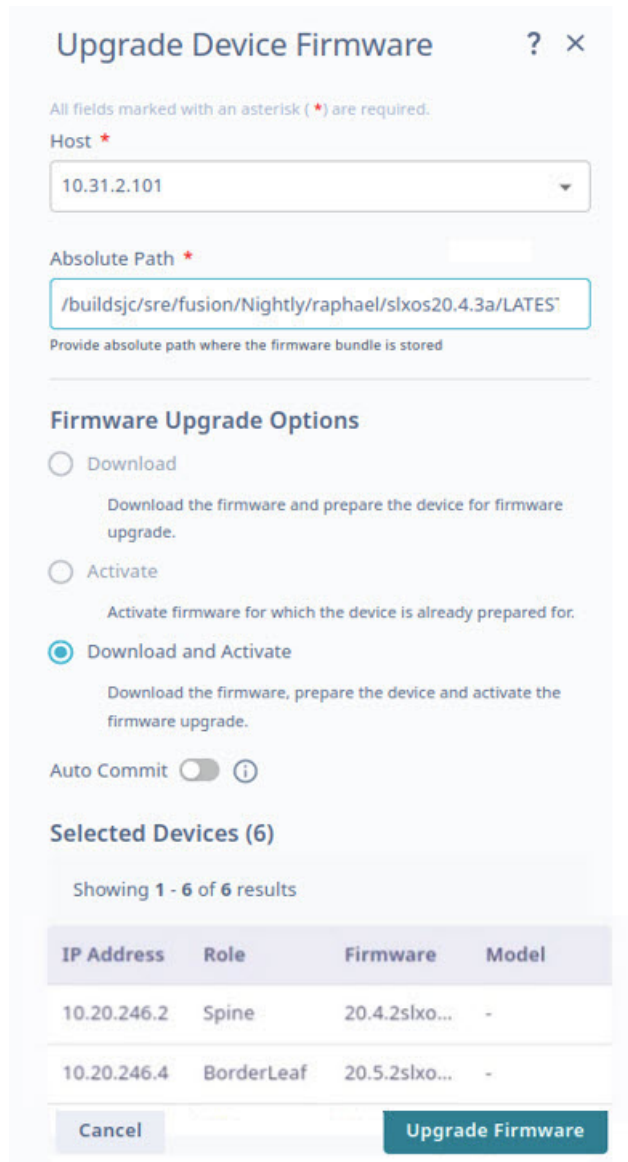

5. In the **Host** field, provide the IPv4 or IPv6 address of the firmware host server.
6. In the **Absolute Path** field, provide the firmware file path.
7. Select **Download and Activate**.

8. (Optional) Activate or deactivate **Auto Commit** as required.
 If Auto Commit is disabled, select **Commit Upgrade** or **Restore Upgrade** from the top of the fabric page to commit the pending devices.
9. Select **Upgrade Firmware**.
 - The list of devices in the fabric is displayed.
 - The LLDP links of the devices in the fabric might go down during firmware download as devices reload and will be in the maintenance mode. This is reflected in the fabric topology view as "No physical links discovered".
 - You are prompted to review the system generated upgrade strategy to minimize traffic disruption to the active fabric.
10. Select **View and Confirm Upgrade Strategy** to review and approve the device upgrade sequence.

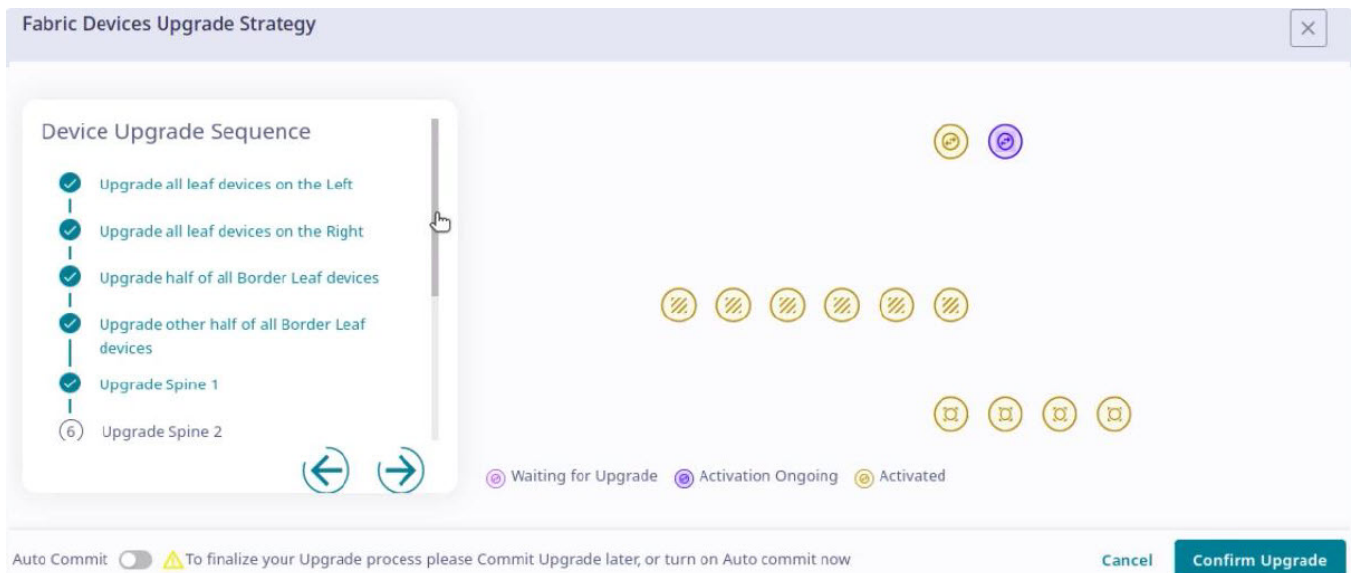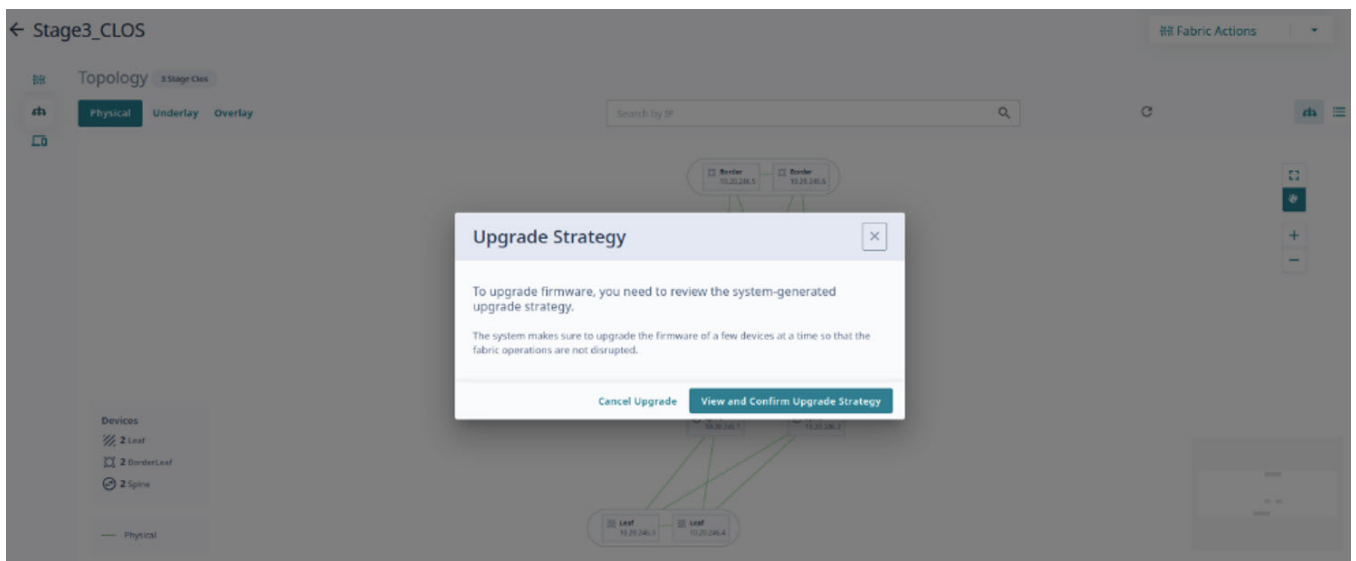

11. Select **Confirm Upgrade**.
 - The list of devices in the fabric along with upgrade status is displayed.


Devices

2 Devices Activating | 1 Queued

Showing 1 - 5 of 5 results

IP Address	Device R...	Leaf Type	Hostname	Firmware	ASN	Lo...	VT...	App Config Gen...	Device P...	Actions
10.20.24...	Spine		NH-2	20.4.2slxos20.4.2c_230704_	64512	1	NA	cfg in-sync	provision...	...
10.20.24...	Border	multi-homed	NH-Leaf2	Maintenance Mode Enable	66000	1	2	cfg in-sync	provision...	...
10.20.24...	Leaf	multi-homed	NHF-Leaf1	20.5.2slxos20.5.2_230505_1	65000	1	2	cfg in-sync	provision...	...
10.20.24...	Leaf	multi-homed	NHF-Leaf2	Maintenance Mode Enable	65000	1	2	cfg in-sync	provision...	...
10.20.24...	Border	multi-homed	NH-leaf1	Maintenance Mode Enable Started	66000	1	2	cfg in-sync	provision...	...

- The device upgrade status indicates various stages such as download, active, and commit. The user interface also provides updates such as the number of devices undergoing upgrade, waiting for upgrade, activation and commit pending, commit upgrade, restore upgrade, and upgrade success.
- To change maintenance mode settings of a device, see [Device Settings \(Fabric Mode\)](#) on page 94.

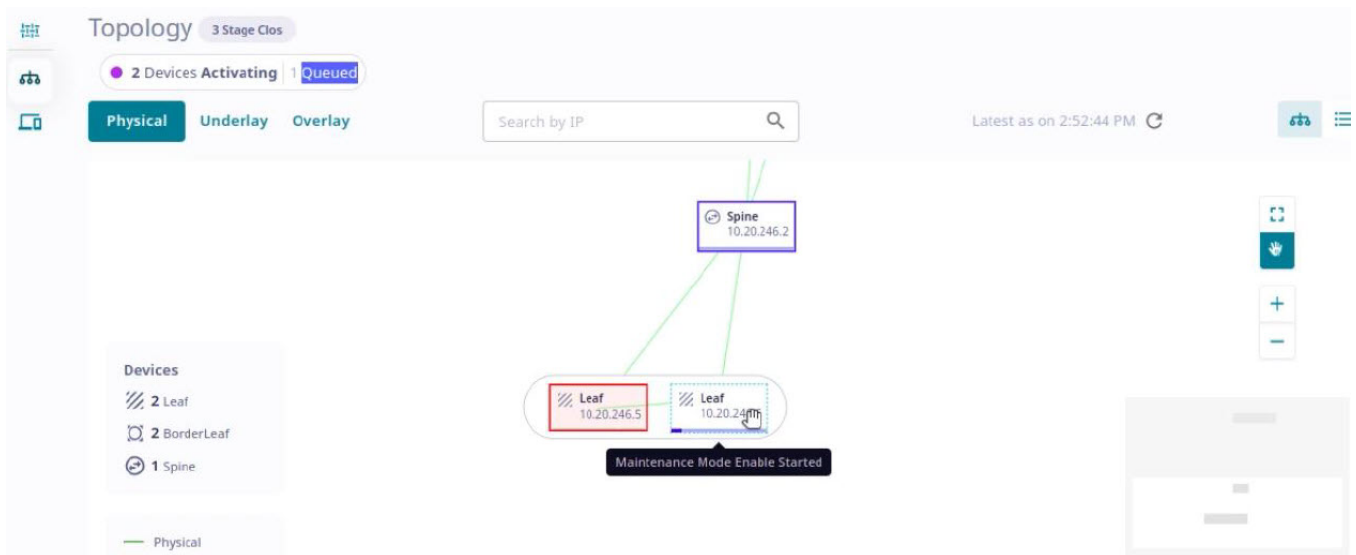

12. Select **Commit Upgrade** to commit pending devices.

The screenshot shows the 'Devices' page with the following data:

IP Address	Device Role	Leaf Type	Hostname	Firmware	ASN	Lo...	VT...	App Config Gen...	Device P...	Actions
10.20.24...	Spine		NH-2	20.5.2slxos20.5.2_230720_c	64512	1	NA	cfg in-sync	provision...	...
10.20.24...	Border	multi-homed	NH-Leaf2	Firmware Not Committed	66000	1	2	cfg in-sync	provision...	...
10.20.24...	Leaf	multi-homed	NHF-Leaf1	20.5.2slxos20.5.2_230505_1	65000	1	2	cfg in-sync	provision...	...
10.20.24...	Leaf	multi-homed	NHF-Leaf2	Firmware Not Committed	65000	1	2	cfg in-sync	provision...	...
10.20.24...	Border	multi-homed	NH-leaf1	20.5.2slxos20.5.2_230719_2	66000	1	2	cfg in-sync	provision...	...

The devices are upgraded to the downloaded firmware version. Refresh the page to view the updated list.

Related Topics

- [Register Firmware Host](#) on page 148
- [Upgrade Firmware \(Device Level\)](#) on page 150
- [View Registered Firmware Hosts](#) on page 149
- [Change a Firmware Host](#) on page 149
- [Delete a Firmware Host](#) on page 149
- [View Firmware History](#) on page 52
- [View Operational History](#) on page 52

Clone a Fabric

About This Task

You can clone (copy) a fabric to create a new fabric with the same or similar topology.

Procedure


- In the Navigation menu, select **Fabrics**.
- In the **Fabrics** page, click anywhere in the required fabric row except the Actions column (⋮) to proceed to the fabric Topology page.
- Select **Clone** (📄) from the fabric menu (⋮).
- Enter a name for the new fabric.
- Select **Clone**.

Reboot a Device

About This Task

You can reboot devices from both **Device Inventory** and **Fabrics** pages.

Procedure

1. In the Navigation menu, select **Fabrics**.
2. In the **Fabrics** page, click anywhere in the required fabric row except the Actions column (⋮) to proceed to the fabric Topology page.
3. Select **Device Management** ()
4. Select **Reboot Device** from the Actions column (⋮) for the device you want to reboot.
 - The device is rebooted.
 - To reboot multiple devices, select the check boxes of the required devices and select **Reboot Device** from the Devices table menu (⋮).
5. Select **Confirm** when prompted to reboot the device.



Tenants (Fabric Mode)

[Create Tenant](#) on page 62

[Edit Tenant](#) on page 66

[Delete Tenant](#) on page 67

[Overview](#) on page 68

XCO 3.4.0 and later releases support tenant management. The XCO user interface allows provisioning of tenants, tenant port-channels, tenant VRFs, tenant BGP peer-groups, and tenant BGP peers. The Tenants overview page varies depending on the logged-in user role.

The **Tenants** page displays the list of tenants the logged-in FabricAdmin or TenantAdmin is authorized to view. For more information about user roles, see [User Roles](#) on page 155.

Tenant network configuration includes VLAN, Bridge Domain (BD), Virtual Ethernet (VE), Ethernet VPN (EVPN), VXLAN Tunnel Endpoint (VTEP), Virtual Routing and Forwarding (VRF), and router BGP configuration on fabric devices to provide Layer 2 extension, Layer 3 extension across the fabric.

ExtremeCloud Orchestrator

← Tenants Create Tenant

5 Tenants | 4 Private | 1 Shared

Fabrics, Devices & Ports

Fabrics: 1 | Devices: 2

Data Ports: 22 | Mirror - Destination Ports: 2

Top 5 Tenants with high utilization

Tenant Name	Type	Fabric	Devices	Ports	Bridge Dom...	VLAN Range	L2 VNI Range	VRFs	L3 VNI Range	Actions
Shared	shared	TestNon2	1	2	Disabled	-	-	12	-	...
Private Tenant	private	TestNon2	1	4	Disabled	20-40	-	10	-	...
nsnsd	private	-	-	0	Disabled	-	-	-	-	...
Test15	private	TestNon2	2	12	Disabled	0,12-19	-	10	-	...
TestTen	private	TestNon2	2	4	Disabled	-	-	10	-	...

Showing 1 - 5 of 5 results | Search | Group By: None | Page Size: 10 | Latest as on 10:18:58 AM

2023 Extreme Networks Inc. | About | Terms | Privacy Policy | ExtremeCloud Orchestrator

Create Tenant

Before You Begin

Users with SystemAdmin and FabricAdmin roles can create, edit, and delete tenants.

About This Task

You can create both Shared and Private tenants.

Procedure

1. In the Navigation menu, select **Tenants**.
2. In the Tenants page, select **Create Tenant**.
3. Enter the **Tenant Details**:
 - In the **Name** field, enter a name for the tenant.
 - In the **Type** field, select the tenant type, **Shared** or **Tenant**.
 - Configure **L2 Service** properties:
 - Activate or deactivate **Bridge Domain**.
 - Enter the **VLAN Range**.
 - Enter the **L2 VNI Range**.
 - Configure **L3 Service** properties:
 - Enter the **VRF Count**.

- Enter the **L3 VNI Range**

**Note**

L2 VNI Range and **L3 VNI Range** are required only for **Map VNI Auto** disabled fabrics.

Tenant Creation

[× Exit](#)

1 — 2 — 3 — 4

Tenant Details & Properties Select Device(s) Allocate Port(s) Summary

Tenant Details

Name *

Type *
 Private
 Shared

Description (Optional)

Tenant Properties

L2 Service

Bridge Domain
Enable Bridge Domain feature.

VLAN Range (Optional) L2 VNI Range (Optional)

Provide values between 2 to 4090

L3 Service

VRF Count (Optional) L3 VNI Range (Optional)

[Next - Device & Ports](#)

4. Select **Next - Device & Ports**.

5. In the **Select Devices** page, do the following:

Select Device(s) Click on the checkbox to select the devices

Select Fabric (Optional) fs







Fabric Details

Fabric Type Non Clos Total Devices 2 Total Ports 118 Allocated Ports 44

Showing 1 - 2 of 2 results Search

<input type="checkbox"/>	Device Name	IP Address	Device Type	Allocated Ports
<input type="checkbox"/>	NHF-1	10.20.246.5	Leaf	24 of 62
<input type="checkbox"/>	NHF-2	10.20.246.6	Leaf	20 of 56

< Previous Allocate Port(s)

- a. (Optional) Select the required fabric from the **Select Fabric** drop-down menu.
 - b. Select the check boxes of the required devices in the fabric to span the tenant.
- Use **Topology View** () and **List view** () to switch the view between topology and list.
 - To enlarge the topology to the width of the interface, select **Expand** ().
 - To zoom in and out on the topology screen, use the **Zoom** ( ) icons.
 - To scroll through the topology screen, use the **Scroll** () icon.

6. Select **Allocate Port(s)**.


The screenshot displays the 'Allocate Port(s)' configuration page. At the top, a progress bar indicates the current step is 3, 'Allocate Port(s)'. Below this, a search bar is labeled 'Search by IP'. A toggle switch for 'Enable Port Selection Rule' is turned on. The 'Port Selection Rule' section shows 'Data Port(s)' set to 2 and 'Mirror Destination Port(s)' set to 1, both 'per device'. A 'Reset' button and an 'Apply to all devices' button are present. A tip box states: 'Click on the ports to allocate and convert port to Data, Mirror Destination or Breakout ones.' Below the tip, it says 'Showing 1 - 1 of 1 results'. A table lists the device 'NHF-1' with IP address '10.20.246.5'. The main area shows a port selection interface for an Extreme 3009 switch. Ports 1, 3, and 5 are selected as Data Ports (purple), and port 2 is selected as a Mirror Destination Port (yellow). A legend at the bottom identifies port types: Data Port(s), Mirror Destination Port(s), Unavailable Port(s), Fabric Port(s), Available Port(s), Breakout Port(s), and Fabric port used as Data port. Navigation buttons include '< Previous' and 'Next - Summary'.

7. (Optional) Activate **Enable Port Selection Rule** to auto select the available ports based on the port selection rule.

You can create port selection rule to select uniform number of ports across all devices. Proceed to the next step to create a port selection rule. Else, go to step 9.

8. (Optional) In the **Port Selection Rule** section, configure the ports allocation for each device.
 - a. Select the required number of **Data Port(s)** for auto allocation.
 - b. Select the required number of **Mirror Destination Port(s)**.
 - c. Select **Apply to all Devices**.

If the available ports do not meet the requirement input in the **Port Selection Rule**, an error message is displayed. Correct the port selection rule to proceed to the next step.




9. Select the required port in the rack to allocate and change the port type: **Data Port**, **Mirror Destination Port**, or **Breakout Port**.
 - You can manually update the ports allocated using the **Port Selection Rule**, if required.
 - XCO supports breakout ports. The breakout ports are indicated as four sub-ports within a single port. The breakout ports are suffixed with :1-4.
 - The ports that are allocated to other tenants or fabrics are marked as **Unavailable Ports**.
10. Select **Next - Summary** to verify tenant details.
11. In the **Tenant Summary** page, select  to modify tenant details as required.

Tenant Summary

Tenant Details		L2 Service Properties		L3 Service Properties	
Name	example-1	Bridge Domain	Disabled	VRF Count	8
Type	Private	VLAN Range	20-25	L3 VNI Range	700-800
Description		L2 VNI Range	500-600		

Devices & Ports

Showing 1 - 1 of 1 results

Device Name	IP Address	Device Type	Allocated Ports	Actions
SLX	10.20.246.3	Leaf	 2  1 of 30	

< Previous Next - Summary >

12. Select **Create Tenant**.
The tenant is created.

Related Topics

- [Edit Tenant](#) on page 66
- [Delete Tenant](#) on page 67

Edit Tenant



Before You Begin

Users with SystemAdmin and FabricAdmin roles can create, edit, and delete tenants.

Procedure


1. In the Navigation menu, select **Tenants**.
2. In the **Tenants** page, click anywhere in the required tenant row except the Actions column (⋮) to proceed to the tenant Overview page.

3. Select **Edit**.

Alternatively, In the **Tenants** page, you can select **Edit** () from the Actions column () for the tenant you want to edit.

4. Update the tenant settings as required.

You can add or remove devices and update ports.

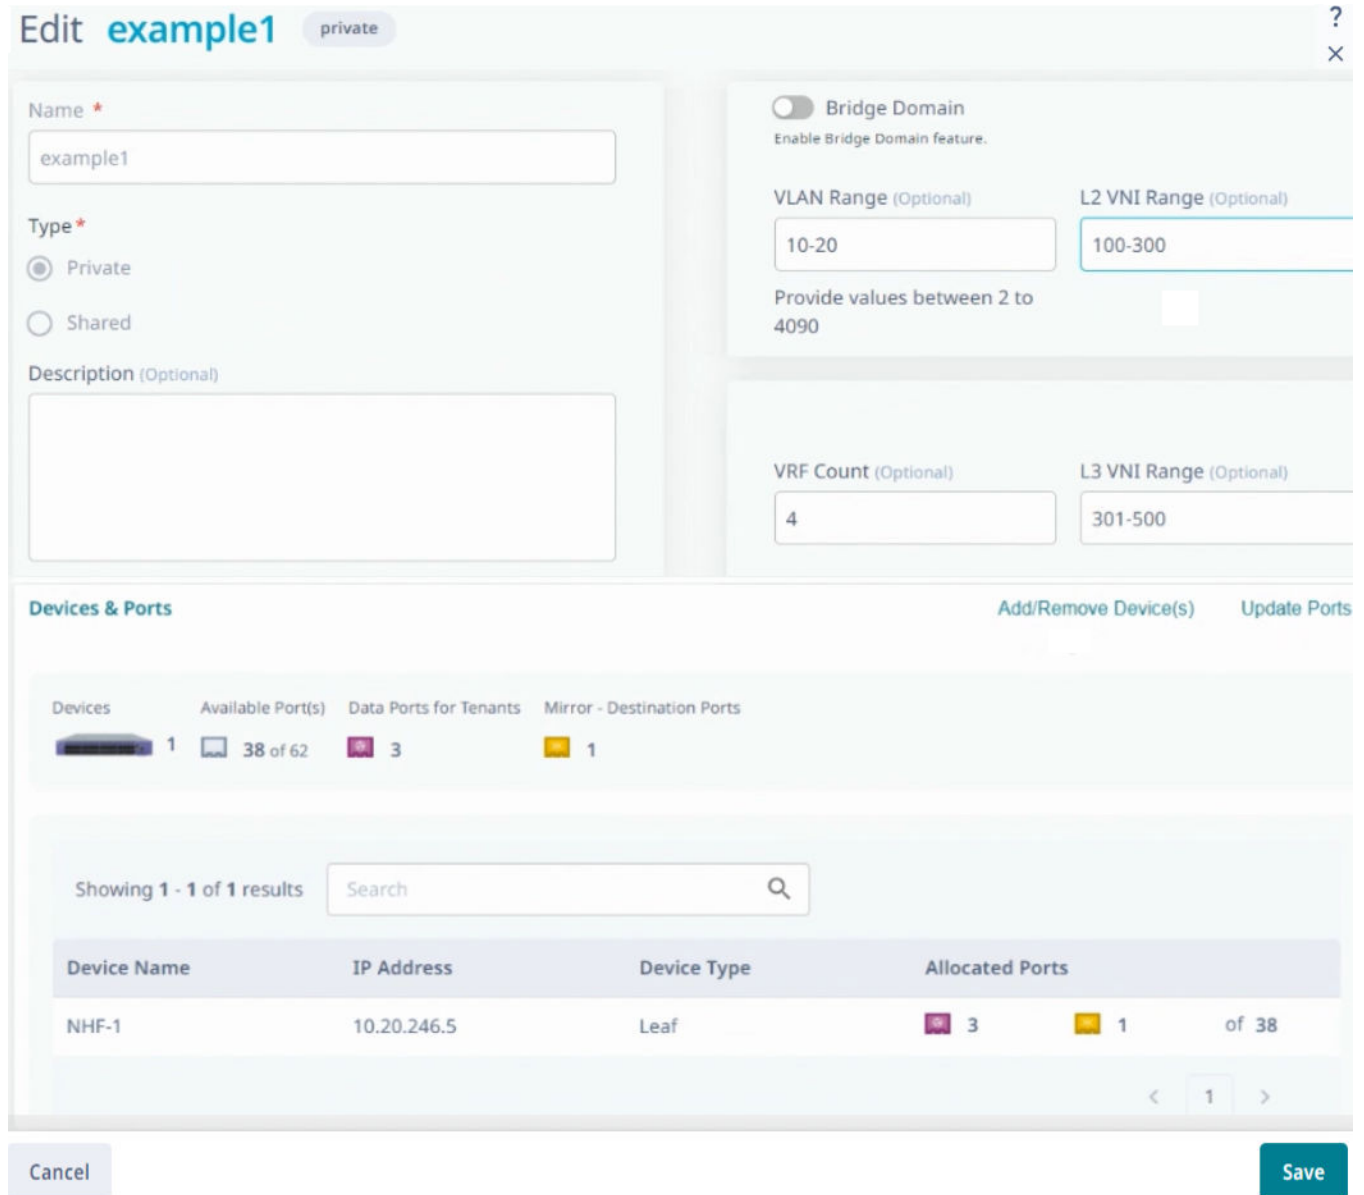

Edit example1 private ? X

Name *
example1

Type *
 Private
 Shared

Description (Optional)

Bridge Domain
Enable Bridge Domain feature.





VLAN Range (Optional) 10-20
Provide values between 2 to 4090


L2 VNI Range (Optional) 100-300



VRF Count (Optional) 4

L3 VNI Range (Optional) 301-500

Devices & Ports Add/Remove Device(s) Update Ports

Devices Available Port(s) Data Ports for Tenants Mirror - Destination Ports
 1  38 of 62  3  1

Showing 1 - 1 of 1 results 

Device Name	IP Address	Device Type	Allocated Ports
NHF-1	10.20.246.5	Leaf	 3  1 of 38

Cancel Save

5. Select **Save**.

Delete Tenant

Before You Begin

Users with SystemAdmin and FabricAdmin roles can create, edit, and delete tenants.

Procedure

1. In the Navigation menu, select **Tenants**.
2. In the **Tenants** page, click anywhere in the required tenant row except the Actions column (⋮) to proceed to the tenant Overview page.
3. Select **Delete**.

Alternatively, in the **Tenants** page, select **Delete** (🗑️) from the Actions column (⋮) for the tenant you want to delete.

4. Select **Confirm** when prompted.

Overview

The **Tenant Overview** (📊) page shows resources and entities associated with the tenant. Use **Tenant Options** (⌵) to expand or collapse the tenant navigation menu.

The screenshot shows the 'Tenant Overview' page for 'example-1' in Private mode. The page includes a navigation menu on the left and several summary cards:

- Tenant Capacity:** Bridge Domain (Disabled), L2 VLAN Range (20-25), L2 VNI Range (N/A), L3 VNI Range (N/A), VRF Capacity (8).
- Tenant Utilization:** Ports (0 of 3), L2 VNIs (0 of 6), L3 VNIs (0 of 16), VRF (0 of 8).
- Fabrics, Devices & Ports:** Fabrics (1), Devices (1), LAGs (0), Data Ports (2), Mirror Dest. Ports (1).
- L3 Configurations:** VRFs (N/A), BGP Peer Groups (N/A), BGP Peers (N/A).
- Services:** L2 / L3 Services (N/A).

Below the summary cards is a 'Devices' section with a search bar and a table of devices:

Device Name	IP Address	Device Type	Allocated Ports	Actions
SLX	10.20.246.3	Leaf	2 Data Ports, 1 Mirror - Destination Ports	🔗

The table also shows port utilization: 0/1 | NA (red), 0/5 | NA (green), 0/7 | NA (yellow). A legend at the bottom indicates Data Ports (purple) and Mirror - Destination Ports (yellow).

Port Channels (LAGs)

A port channel, also known as a Link Aggregation Group (LAG), allows you to combine multiple full-duplex Ethernet links into a single logical link. Network devices treat the aggregation as a single link, which increases fault tolerance and provides load sharing.

Tenants / t1 / Port Channels Private

Port Channels (LAGs) Create Port Channel (LAG)


Showing 1 - 2 of 2 results Group By None Page Size 10 Latest as on 5:39:34 PM 🔄 🔍 ☰

Name	ID	Speed (...)	MTU (B...	Negoti...	Min Lin...	LACP TI...	Type	Ports	Actions
po1	1	10Gbps	-	active	1	long	Single Homed	10.20.246.5 ↑ 0/25 NA ↑ 0/26 NA	...
po2	2	10Gbps	-	active	1	short	Dual Homed	10.20.246.5 ↑ 0/21 NA 10.20.246.6 ↑ 0/21 NA	...

< 1 >

Create Port Channel or LAG

Procedure

1. In the Navigation menu, select **Tenants**.
2. In the **Tenants** page, click anywhere in the required tenant row except the Actions column (**...**) to proceed to the tenant Overview page.
3. In the Tenant Navigation menu, select **Port Channels (LAG)** (.
4. Select **Create Port Channel (LAG)**.

Create Port Channel (LAG) ? ×

All fields marked with an asterisk (*) are required.

Name * Speed * 10Gbps Negotiation * active

✕ Additional Parameters

All fields marked with an asterisk (*) are required.

ID (Optional) Min Link Count (Optional) MTU (Bytes) (Optional) 1500-9216 LACP Timeout (Optional) short

Description (Optional)

5. In the **Name** field, enter a unique name for the port channel.
6. In the **Speed** field, select the required speed for the ports.
 - **100Mbps**
 - **1Gbps**
 - **10Gbps**
 - **25Gbps**
 - **40Gbps**
 - **100 Gbps**

7. In the **Negotiation** field, select the negotiation value.
 - **active**
 - **passive**
 - **static**
8. (Optional) Enter the **Additional Parameters** as required.
 - **ID**: Unique numeric ID for the port channel
 - **Min Link Count**: Minimum number of interfaces that the port channel requires to be active
 - **MTU (Bytes)**: Maximum transmission unit for packets that pass through the ports in the channel
 - **LACP Timeout**: Timeout value in seconds
 - **Description**: Port channel description
9. (Optional) In the **Description** field, provide a description for the port channel.
10. In the Fabric section, select the port channel **Type**:
 - **Single Homed**: Port channel members are from to a single homed device or a single device of the dual homed MCT pair.
 - **Dual Homed**: Port channel members are from both the devices of the dual homed MCT pair.

Fabric Name: fs Non Clos | Select Type: Dual Homed | Select Device Pair: [10.20.246.5] - [10.20.246.6]

10.20.246.5 NHF-1 ⓘ Click on the ports to add them to port channel (LAG)

0/21 | unknown ✕

Clear Selection

10.20.246.6 NHF-2 ⓘ Click on the ports to add them to port channel (LAG)

0/21 | unknown ✕

Clear Selection

Cancel Create Port Channel / LAG

11. Select the **Device** (Single homed) or **Device Pair** (Dual homed) for the port channel.
The port layout of the selected device is displayed.
12. Select member ports for the port channel.
All ports owned by the tenant (including shared tenants) and the ports that are not associated with any of the port channels or services (EPGs) will be available for member port selection.
13. Select **Create Port Channel (LAG)**.

Related Topics

- [Edit Port Channel](#) on page 71
- [Delete Port Channel](#) on page 72

Edit Port Channel

Procedure

1. In the Navigation menu, select **Tenants**.

2. In the **Tenants** page, click anywhere in the required tenant row except the Actions column (⋮) to proceed to the tenant Overview page.
3. In the Tenant Navigation menu, select **Port Channels (LAG)** (🔗).
4. In the **Port Channels (LAGs)** page, select **Edit** (✎) from the Actions column (⋮) for the port channel you want to edit.
5. Follow the instructions in [Create Port Channel or LAG](#) on page 69 to update port channel properties and port channel member ports.
6. Select **Update Port Channel**.


Delete Port Channel

Procedure

1. In the Navigation menu, select **Tenants**.
2. In the **Tenants** page, click anywhere in the required tenant row except the Actions column (⋮) to proceed to the tenant Overview page.
3. In the Tenant Navigation menu, select **Port Channels (LAG)** (🔗).
4. In the **Port Channels (LAGs)** page, select **Delete** (🗑) from the Actions column (⋮) for the port channel you want to delete.
5. Select **Confirm** when prompted.

Virtual Routing and Forwarding (VRF)

Virtual Routing and Forwarding (VRF) is a technology that controls information flow within a network, isolating the traffic by partitioning the network into different logical VRF domains.

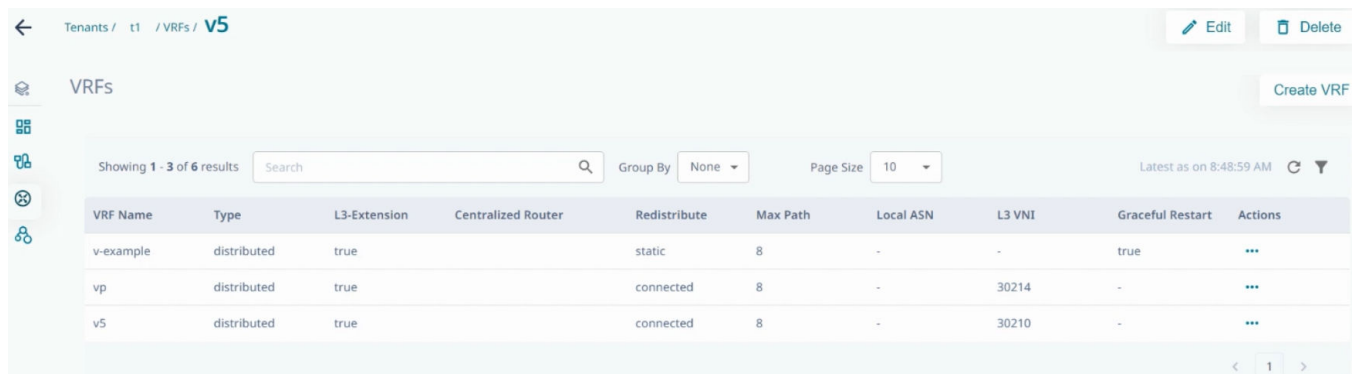

VRF Name	Type	L3-Extension	Centralized Router	Redistribute	Max Path	Local ASN	L3 VNI	Graceful Restart	Actions
v-example	distributed	true		static	8	-	-	true	⋮
vp	distributed	true		connected	8	-	30214	-	⋮
v5	distributed	true		connected	8	-	30210	-	⋮

Create VRF

Procedure

1. In the Navigation menu, select **Tenants**.
2. In the **Tenants** page, click anywhere in the required tenant row except the Actions column (⋮) to proceed to the tenant Overview page.

3. In the Tenant Navigation menu, select **VRF** (🔗).
4. Select **Create VRF**.

5. In the **VRF Name** field, enter a unique name for the VRF.
6. In the **Routing Type** field, select the type: **Distributed** or **Centralized**.
If you selected centralized routing type, proceed to the next step to select a centralized router. Else skip the next step.
7. In the **Centralized Routers** field, select the required router.
8. Activate or deactivate **Layer3 Extension**.
9. Activate **Enable Resilient Hashing ECMP**.
 - a. Select the required value from the **Resilient Maximum Path** drop-down menu.
10. (Optional) In the **Router Configuration** section, activate the route configurations as required:
 - **Configure Route Targets**
 - **Configure Static Routes**
 - **Configure Static Routes BFD**

The selected router configuration tabs are added to the **Create VRF** window. To configure the route settings, perform step 12 through 14.

11. (Optional) In the **Router BGP Configuration** page, configure the following as required:
 - a. (Optional) In the **Local ASN** field, enter the required value.
 - b. (Optional) In the **Maximum Path** field, enter the route load-sharing max path.
 - c. Select the required **Redistribute** option: **Static** or **Connected**.
The default value is **Connected**.
 - d. Activate **Enable Graceful Restart**.
 - e. Activate **Enable Next Hop Recursion**
 - f. (Optional) Activate the **Additional Router BGP Configuration** options:
 - **Advertise Networks**
 - **Advertise Static Networks**
 - **Advertise Aggregate Addresses**



The selected router BGP configuration tabs are added to the **Create VRF** window. To configure the additional BGP settings, perform step 15 through 17.

12. Select the **Route Targets** tab to configure the parameters.
 - a. Configure the **Route Targets** parameters.

- b. Select **+ Add Route Target**.

The screenshot shows the 'Create VRF' dialog box with the 'Route Targets' tab active. The 'Route Target' field is populated with the placeholder '<asn>:<number>' and the 'Route Target Type' field is empty. A '+ Add Route Target' button is located to the right of the 'Route Target Type' field. Below the form, a table displays one entry with the value '5:10' and 'import' as the 'Route Target Type'. The 'Create VRF' button at the bottom right is highlighted in teal.

The route target is created.

Use the **Edit** () and **Delete** () options to edit and delete the configured route targets.

13. Select the **Static Routes** tab to configure the parameters.

- a. Configure the **Static Route** parameters.
- b. Select **+ Add Static Route**.

The static route is created.

- c. To add multiple static routes, use **Select File** and import the static routes.csv file. Download the sample CSV file to create the static routes.csv file.

Create VRF ? X

General **Static Routes** Static Routes BFC >

All fields marked with an asterisk (*) are required.

Import Static Routes

Select File

Please use .CSV file format [Download Sample CSV](#)

Device IP * Dest. Network * Next Hop *



IP Version * Distance (Optional) Metric (Optional)

+ Add Static Route

Showing 1 entries out of 1

10.20.246.5	Dest. Network 10.20.10.0/24	Next Hop 10.20.10.10		
-------------	-----------------------------	----------------------	--	--

Cancel **Create VRF**



Use the **Edit** () and **Delete** () options to edit and delete the configured static routes.

14. Select the **Static Routes BFD** tab to configure the parameters.

- Configure the **Static Routes BFD** parameters.
- Select **+ Add Static Route BFD**.

The static route BFD is created.

- c. To add multiple static routes, use **Select File** and import the static routes.csv file.

Use the **Edit** () and **Delete** () options to edit and delete the configured static routes.

Create VRF ? X

< al **Route Targets** **Static Routes** **Static Routes BFD** >

All fields marked with an asterisk (*) are required.

Device IP * **IP Version ***

Source IP * **Destination IP ***

Interval (ms) (Optional) **Min. Rx. (ms) (Optional)** **Multiplier (Optional)**

[+ Add Static Route BFD](#)

Showing 1 entries out of 1

<input type="checkbox"/>	10.20.246.5	Source IP	10.20.10.11	Dest. IP	10.20.10.12	<input type="text"/>	<input type="text"/>
--------------------------	-------------	-----------	-------------	----------	-------------	----------------------	----------------------

|< < 1 > >|

15. Select the **Advertise Networks** tab to configure the parameters.
 - a. Configure the **Advertise Networks** parameters.

- b. Select **+ Add Advertise Network**.

Device IP * IP Version *

Network * Weight (Optional)

e.g. 10.100.100.1/20 0-65535

Enable backdoor

+ Add Advertise Network

Showing 1 entries out of 1

IP	Network	Weight	Actions
10.20.246.5	10.30.10.0/24		

Cancel Create VRF

The advertise network is created.

Use the **Edit** () and **Delete** () options to edit and delete the configured static routes.

16. Select the **Advertise Static Networks** tab to configure the parameters.
- a. Configure the **Advertise Static Networks** parameters.

- b. Select **+ Add Advertise Static Network**.

Device IP *

IP Version *

Static Network *

Distance (Optional)

+ Add Advertise Static Network

Showing 1 entries out of 1

10.20.246.5	Static Network	10.30.10.0/24	Distance		
-------------	----------------	---------------	----------	--	--



Cancel Create VRF

The advertise static network is created.

Use the **Edit** () and **Delete** () options to edit and delete the configured static routes.

17. Select the **Advertise Aggregate Addresses** tab to configure the parameters.
- Configure the **Advertise Aggregate Addresses** parameters.
 - Select **+ Add Advertise Aggregate Address**.

The advertise aggregate address is created.

Use the **Edit** () and **Delete** () options to edit and delete the configured static routes.

18. Select **Create VRF**.

The VRF is created.



Related Topics

[Edit VRF](#) on page 80



[Delete VRF](#) on page 81

Edit VRF

Procedure

1. In the Navigation menu, select **Tenants**.
2. In the **Tenants** page, click anywhere in the required tenant row except the Actions column () to proceed to the tenant Overview page.
3. In the Tenant Navigation menu, select **VRF** ()



4. Select **Edit** ().

Alternatively, you can select **Edit** () from the Actions column () for the VRF you want to edit.

5. Follow the instructions in [Create VRF](#) on page 72 to update the VRF.
6. Select **Update VRF**.

Delete VRF

Procedure

1. In the Navigation menu, select **Tenants**.
2. In the **Tenants** page, click anywhere in the required tenant row except the Actions column () to proceed to the tenant Overview page.
3. In the Tenant Navigation menu, select **VRF** ().
4. Select **Delete**.

Alternatively, you can select **Delete** () from the Actions column () for the VRF you want to delete.

5. Select **Confirm** when prompted.

Border Gateway Protocol (BGP)



Border Gateway Protocol (BGP) is a routing protocol, which establishes routing between ISPs. ISPs use BGP to exchange routing information between Autonomous Systems (ASs) on the Internet.

BGP peers (also referred to as neighbors) are BGP enabled devices that are directly connected through an established TCP connection. The BGP dynamic neighbors allow peering to a group of remote neighbors defined by a listen range. BGP neighbors can be created without statically configuring them.

A BGP peer group groups the BGP neighbors sharing the same outbound policies together. A peer group allows you to group the policies which can be applied to individual peers thus making efficient update calculation along with simplified configuration.

Create BGP Peer Group

Procedure

1. In the Navigation menu, select **Tenants**.
2. In the **Tenants** page, click anywhere in the required tenant row except the Actions column () to proceed to the tenant Overview page.
3. In the Tenant Navigation menu, select **BGP** ().
4. Select the **BGP Peer Groups** tab.
5. In the **BGP Peer Groups** tab, select **Create BGP Peer Group**.
6. In the **Group Name**, enter a name for the BGP peer group.

7. In the **Device(s)** drop-down menu, select the required devices.
8. Enter a value for **Remote As**.
9. Enable **BFD** and configure the BFD parameters as required.
10. Complete the fields as required.
11. Enable **Remote Private AS**.
12. (Optional) Select a value from the **Send Community** drop-down menu.
13. Select **Create BGP Peer Group**



Related Topics

[Edit BGP Peer Group](#) on page 82

[Delete BGP Peer Group](#) on page 82



Edit BGP Peer Group

Procedure

1. In the Navigation menu, select **Tenants**.
2. In the **Tenants** page, click anywhere in the required tenant row except the Actions column (⋮) to proceed to the tenant Overview page.
3. In the Tenant Navigation menu, select **BGP** ()
4. Select the **BGP Peer Groups** tab.
5. In the **BGP Peer Groups** page, select **Edit** () from the Actions column (⋮) for the group you want to edit.
6. Follow the instructions in [Create BGP Peer Group](#) on page 81 to update the VRF.
7. Select **Save BGP Peer Group**.

Delete BGP Peer Group


Procedure

1. In the Navigation menu, select **Tenants**.
2. In the **Tenants** page, click anywhere in the required tenant row except the Actions column (⋮) to proceed to the tenant Overview page.
3. In the Tenant Navigation menu, select **BGP** ()
4. Select the **BGP Peer Groups** tab.
5. In the **BGP Peer Groups** page, select **Delete** () from the Actions column (⋮) for the group you want to delete.
6. Select **Confirm** when prompted.

Create BGP Peer

Procedure

1. In the Navigation menu, select **Tenants**.
2. In the **Tenants** page, click anywhere in the required tenant row except the Actions column (⋮) to proceed to the tenant Overview page.

3. In the Tenant Navigation menu, select **BGP** ()
4. Select the **BGP Peers** tab.
5. Select **Create BGP Peer**.
6. In the **Name** field, enter a name for the BGP peer.
7. In the **Device(s)** drop-down menu, select the required devices.
8. Select the required **VRF**.
9. Select the BGP peer **Type**:
 - **Static**: Go to step 10 to create a Static BGP Peer.
 - **Dynamic**: Go to step 11 to create a Dynamic BGP Peer.

The options vary by the BGP peer type.

10. Configure the required **Static** BGP peer parameters.
 - a. Enter the **Neighbor IP** address.





XCO 3.4.0 and later releases support only one **Neighbor IP** configuration.
 - b. Select the required **Remote As** value.
 - c. Configure the required **Detailed Configuration** parameters.
 - d. Configure the required **Additional Path** parameters.
 - e. Configure the required **Multi Protocol Capability** parameters.
 - f. Select **Create BGP Peer**.
11. Configure the required **Dynamic** BGP peer parameters.
 - a. Enter the **Listen IP Address Range**.
 - b. Select the required peer group from the **Peer Group Name** drop-down menu.
 - c. Select **Create BGP Peer**.

Related Topics

- [Edit BGP Peer](#) on page 83
- [Delete BGP Peer](#) on page 84

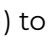

Edit BGP Peer

Procedure

1. In the Navigation menu, select **Tenants**.
2. In the **Tenants** page, click anywhere in the required tenant row except the Actions column () to proceed to the tenant Overview page.
3. In the Tenant Navigation menu, select **BGP** ()
4. Select the **BGP Peers** tab.
5. In the **BGP Peers** page, select **Edit** () from the Actions column () for the BGP peer you want to edit.
6. Follow the instructions in [Create BGP Peer](#) on page 82 to update the BGP peer.
7. Select **Save BGP Peer**.

Delete BGP Peer

Procedure

1. In the Navigation menu, select **Tenants**.
2. In the **Tenants** page, click anywhere in the required tenant row except the Actions column (⋮) to proceed to the tenant Overview page.
3. In the Tenant Navigation menu, select **BGP** ()
4. Select the **BGP Peers** tab.
5. In the **BGP Peer** page, select **Delete** () from the Actions column (⋮) for the BGP peer you want to delete.
6. Select **Confirm** when prompted.

Locations

- [Add Location](#) on page 86
- [Edit Location](#) on page 87
- [Download Location Definition File](#) on page 87
- [Delete Location](#) on page 87
- [Display Location-Specific Device List](#) on page 87
- [Display Locations Map View](#) on page 88

The **Location Management** page allows you to view and manage devices from different geographical locations. A default location is created during the XCO boot up which can be used for small deployments.

XCO manages the region, site, or location information for categorizing the devices by their physical location.

ExtremeCloud™ Orchestrator

← Location Management

Showing 1 - 7 of 7 results

Name	Address	City	Zipcode	Country	Type	Region	Actions
Toronto, Ontario	Toronto, Ontario	Toronto, Ontario	03079	US	Engineering,Testing,Lab	North America	
Salem, NH	Salem, NH	Salem, NH	03079	US	Engineering,Testing,Lab,Campi	North America	
San Jose	San Jose	San Jose	95119	US	Data center,Campus,Lab,Engin	North America	
Mumbai	Mumbai	Mumbai	400099	IN	Data center	Asia	
Bengaluru	Bengaluru	Bengaluru	560068	IN	Data center,Campus,Lab,Engin	Asia	
Pune	Pune	Pune	411028	IN	Engineering,Testing	Asia	
default	-	-	-	-	-	-	



Note

- The default location cannot be modified or deleted.
- When an existing location is deleted, all its devices are moved to the default location.
- The device location cannot be modified after discovery.

Add Location

About This Task

The Location Definition file (in CSV format) identifies geographical locations.

After XCO is installed, you can upload the CSV file to the interface. For information about deploying XCO, see the *ExtremeCloud Orchestrator Deployment Guide, 3.6.0*.

Procedure

1. In the Navigation menu, select **Locations**.

The **Location Management** window opens.

2. Select **Add Location**.

The **Add New Location** window opens.

3. To add new locations manually, take the following steps:

- a. Select **Add Address** and type the following information:

- Name
- Type
- Region
- Street Address
- Country
- State
- City
- Zipcode
- Latitude
- Longitude



Note

All the above mentioned fields are mandatory to add a new location.

- b. Select **Add**.

4. To import the `locations.csv` file, do the following:

- a. Select **Import Location**.

- b. Click **Select File**.

Use the sample .CSV file provided to create a .CSV file with all the location details.

- c. Upload the .CSV file.

- d. Select **Add**.

Related Topics

[Edit Location](#) on page 87

[Download Location Definition File](#) on page 87

[Delete Location](#) on page 87

[Display Location-Specific Device List](#) on page 87


[Display Locations Map View](#) on page 88

Edit Location

About This Task

When an existing location is deleted, all associated devices are updated and moved to the default location.

Procedure


1. In the Navigation menu, select **Locations**.
2. In the **Location Management** page, select **Edit** () from the Actions column (**...**) for the location you want to modify.
3. Follow the instructions in [Add Location](#) on page 86 to change the location details.
4. Select **Add**.

Download Location Definition File

About This Task

The Location Definition file (in CSV format) identifies regions and their associated zones and managed locations.

Procedure


1. In the Navigation menu, select **Locations**.
2. Select  **Download**.
A file in .csv format is downloaded to your device.

Delete Location

About This Task

When an existing location is deleted, all associated devices are updated and moved to the default location.

Procedure

1. In the Navigation menu, select **Locations**.
2. In the **Location Management** page, select **Delete** () from the Actions column (**...**) for the location you want to delete.


Display Location-Specific Device List

Procedure


1. In the Navigation menu, select **Locations**.
2. In the **Location Management** page, click anywhere in the location row except the Actions column (**...**) to display the list of devices associated with the location.
To configure and manage devices, see [Device Inventory](#) on page 89.

Display Locations Map View

Procedure

1. In the Navigation menu, select **Locations**.
2. In the upper right corner of the **Location Management** page, select  to display the map view.

The default map view is the list view.

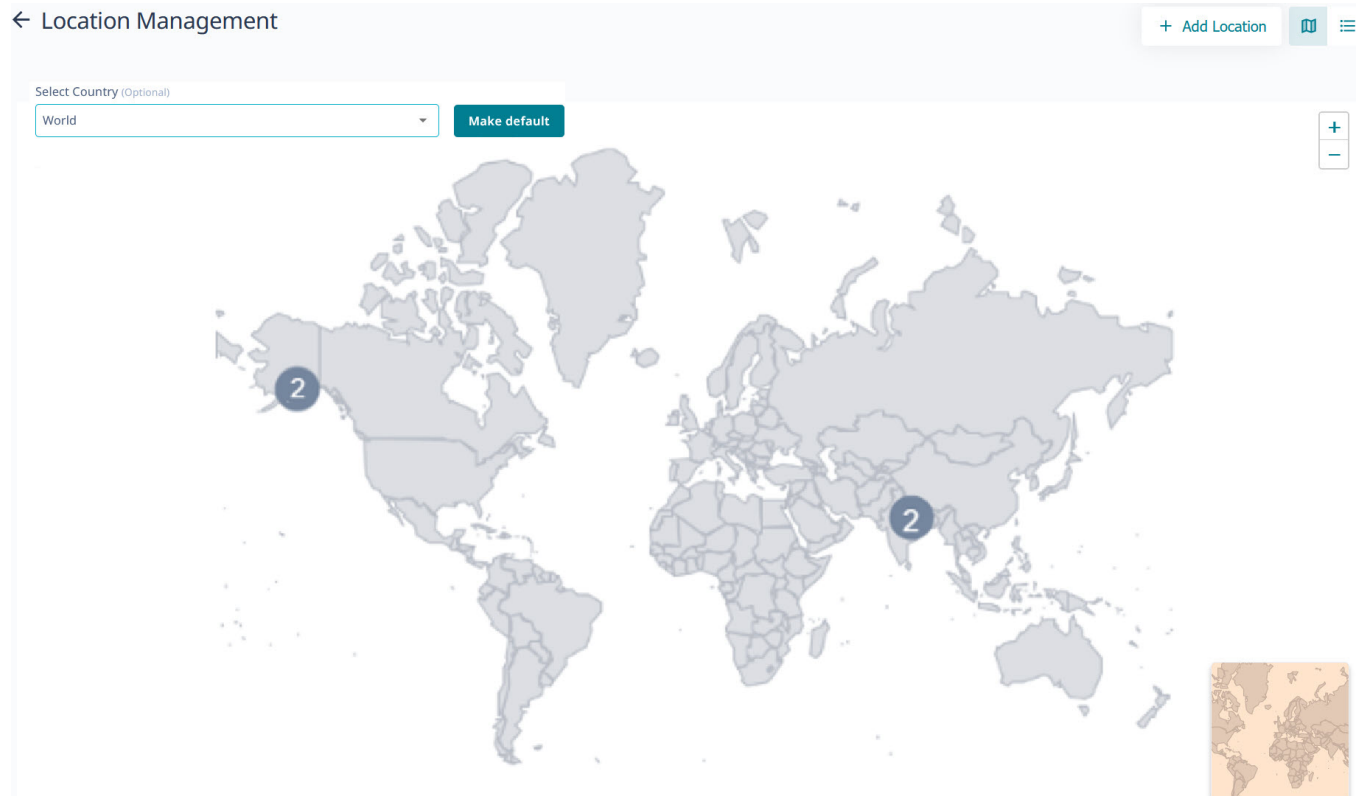

3. Select a country from the drop-down menu to view the country specific location information.
4. (Optional) Select **Make Default** to make the selected country view as the default map view.

Device Inventory

- [Device Credentials](#) on page 90
- [Add Devices](#) on page 90
- [Create a Device Definition File](#) on page 93
- [Download Bulk Device Inventory](#) on page 93
- [Device Settings \(Fabric Mode\)](#) on page 94
- [Delete Device](#) on page 95
- [Overview \(Packet Broker Mode\)](#) on page 95
- [Device Actions \(Packet Broker Mode\)](#) on page 99
- [Policies and Configuration \(Packet Broker Mode\)](#) on page 111
- [Parts Details \(Packet Broker Mode\)](#) on page 144
- [Monitor/Troubleshoot \(Packet Broker Mode\)](#) on page 145
- [Upgrade Firmware](#) on page 148

ExtremeCloud Orchestrator supports device discovery based on IP address, user credentials, and location information.

The **Devices** page allows you to view and manage devices.

Showing 1 - 4 of 4 results

<input type="checkbox"/>	IP Address	Status	Name	Model	Type	MAC Address	Location	Firmware Version	Added on	Fabric	Actions
<input type="checkbox"/>	10.20.246.15	Healthy	AV-1	BR-SLX9540	FABRIC	60:9c:9f:de:0...	default	20.5.2a	Nov 28, 2023 10:	TestNon2	...
<input type="checkbox"/>	10.20.246.16	Healthy	AV-2	BR-SLX9540	FABRIC	60:9c:9f:de:2...	default	20.5.2slxos20.5.2a_230826_0429	Nov 28, 2023 9:5	TestNon2	...
<input type="checkbox"/>	10.37.7.143	Healthy	borderleaf1	SLX9250-32C	FABRIC	00:00:00:9E:...	default	20.4.3slxos20.4.3_sdk6526_int_221	Nov 28, 2023 10:	fiveClos	...
<input type="checkbox"/>	10.37.7.138	Healthy	spine1	SLX9250-32C	FABRIC	00:00:00:9E:...	default	20.4.3slxos20.4.3_sdk6526_int_221	Nov 28, 2023 10:	default	...

Device discovery limitations are as follows:

- Hostname or DNS name based device discovery is not supported.
- Device location cannot be modified after discovery.
- If a device configured with both IPv4 and IPv6 addresses is discovered, only one entry is added to ExtremeCloud Orchestrator. The first discovered IP address is used for communicating with that device.

Device Credentials

The device credentials are stored in the Inventory Service database. All other microservices retrieve device credentials from the Inventory Service.

Add Devices

Before You Begin

- To be able to add multiple devices in bulk, create a Device Definition File, a CSV file that specifies the devices that you want to add. For more information, see [Create a Device Definition File](#) on page 93.
- The MLX devices must be configured for SSH as they are not AAA enabled and do not have the default user name and password.

About This Task

When a device is discovered, the device state is updated as `In Progress`. If the device connection is not successful, the appropriate error message is added to the notifications page.



Note

XCO deployed in packet broker mode supports device discovery notifications only for packet broker devices.

Procedure

1. In the Navigation menu, select **Device Inventory > Add Devices**.

Add New Device(s) ? ×

All fields marked with an asterisk (*) are required.

Manually Import

Add List of IP(s) *

You can add a single IP, List of IPs as xx.xx.xx.xx-xx

Location *

Username *

Password *

LACP System Priority (Optional)

Applicable only for 9900

Cancel Add

2. Proceed to step 3 to add devices manually. Else, go to step 4 on page 92 to add multiple devices in bulk.

3. Select **Manually** and complete the following fields to add devices manually:
 - a. In the **Add List of IP(s)** field, enter the IPv4 or IPv6 address of the devices.
You can add a single IP address or a list of IP addresses enclosed in double quotes as shown in the following examples:


```
1.1.1.1
"1.1.1.1, 2.2.2.2"
```
 - b. In the **Location** field, select the location where the device resides.
 - ExtremeCloud Orchestrator 3.2.0 deployed in IP fabric mode supports only the **default** location.
 - XCO creates periodic system backup at scheduled intervals and all services are locked during system backup. For more information, see the [ExtremeCloud Orchestrator CLI Administration Guide, 3.6.0](#).

The location drop-down list will not be available during system backup. This is reflected in the user interface as “Service is Locked with reason backup”.
 - c. Enter the **Username** and **Password** information.
 - d. (9920 only) In the **LACP System Priority** field, select a value to set the LACP system priority.
4. Select **Import** > **Select File** to browse to the CSV file.

A sample CSV file template is available for download to create device definition files.

5. Select **Add**.

Create a Device Definition File

A Device Definition file (in CSV format) identifies devices by data such as IP address, location, and credentials.

About This Task

You use a Device Definition file to add multiple devices in bulk. Each row in the CSV file has a variation of the following format.

```
IP_ADDRESS, USER_NAME, PASSWORD, LOCATION, LACP_SYSTEM_PRIORITY
```

Table 9: Field descriptions

Field Number	Field	Description
1	IP_ADDRESS	One or more IPv4 or IPv6 addresses, separated by commas.
2	USER_NAME	Credentials for accessing the device, and not necessarily the credentials of the default user.
3	PASSWORD	Credentials for accessing the device, and not necessarily the credentials of the default user.
4	LOCATION	Specifies the name of a location.
5	LACP_SYSTEM_PRIORITY	Specifies LACP system priority (9920 only) .

Procedure

1. Create a CSV file with a file name of your choosing.
Use the **Sample CSV** file available at **Device Inventory > + Add Devices > Import** to create the .CSV file.
2. Add content to the .CSV file.
3. Save the CSV file to a location that is accessible from the XCO user interface.

Example



```
IP_ADDRESS,USER_NAME,PASSWORD,LOCATION,LACP_SYSTEM_PRIORITY
2620:100:c:fe08::110,admin,password,Site1,
2620:100:c:fe08::111,admin,password,Site1,
10.37.128.70,admin,password,Site1,
```

Download Bulk Device Inventory

You can download multiple or bulk device inventory information.

Procedure

1. In the Navigation menu, select **Device Inventory**.

2. In the **Devices** page, select **Download** ()
A zip file containing individual CSV files for each device type is downloaded.
3. To download the inventory of selected devices, do the following:
 - a. Select the check boxes for the devices you want to download.
 - b. Select **Download** ().

2 Items selected										
Search										
<input checked="" type="checkbox"/>	IP Address	Status	Name	Model	Type	MAC Address	Location	Firmware Version	Added on	Actions
<input type="checkbox"/>	10.32.82.135	Healthy	9920	Extreme 9920-N...	NPB	40:88:2f:c1:0c:00	default	21.1.2.6	Jan 1, 1 5:53:28 AM	...
<input type="checkbox"/>	10.32.88.136	Healthy	-	Extreme Extrem...	NPB	d8:84:66:f9:3c:00	default	21.1.2.0	Jan 1, 1 5:53:28 AM	...
<input checked="" type="checkbox"/>	10.32.93.21	Healthy	MLXe_247_QA	MLXe8-slotChas...	NPB	cc:4e:24:92:7c:00	default	6.3.00bd	Jan 1, 1 5:53:28 AM	...
<input checked="" type="checkbox"/>	10.32.89.124	Healthy	SLX	BR-SLX9140	NPB	fc:0a:81:f8:3f:00	default	18s.1.03g_230801_0132	Jan 1, 1 5:53:28 AM	...

- Alternatively, you can select **Download Inventory** from the Actions column () for the required device.
- A zip file containing individual CSV files for each device type is downloaded.

Device Settings (Fabric Mode)

About This Task

You can use the **Device Settings** option in the XCO user interface to activate maintenance mode on the SLX devices.

XCO supports drift and reconcile (DRC) of a configuration at device level. A single device configuration is compared with XCO and if there is a drift in the configuration, it is reconciled.

By default, XCO performs drift and reconcile actions on the SLX devices that enter into maintenance mode after reboot, taking those devices out of maintenance mode after successfully reconciling the configuration on them.


Drift and reconcile operations are run in parallel across all devices in a fabric. It ensures that the multiple DRC operations that take place during fabric-wide firmware download or reboot of multiple devices together, run in parallel, and hence, reduce the overall maintenance window.

Perform this procedure to change maintenance mode settings of a device.

Procedure

1. In the Navigation menu, select **Device Inventory**.

2. In the Devices page, select **Device Settings** from the Actions column (⋮) for the device you want to update.

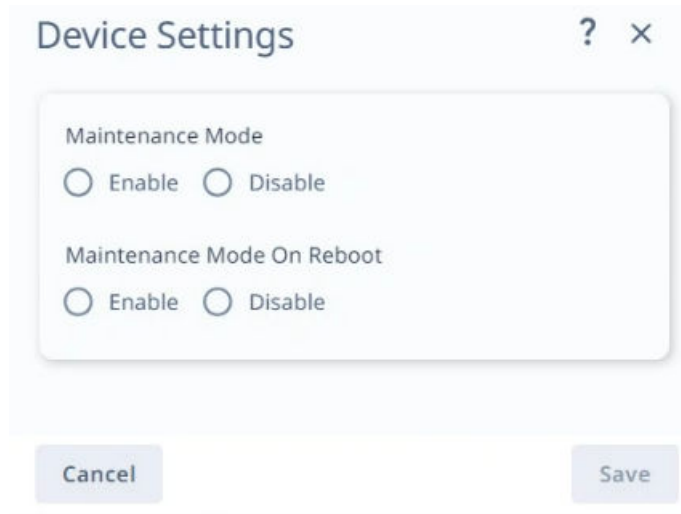

The screenshot shows a 'Device Settings' dialog box. It has a title bar with a question mark and a close button. The main content area contains two sections: 'Maintenance Mode' and 'Maintenance Mode On Reboot'. Each section has two radio buttons: 'Enable' and 'Disable'. At the bottom of the dialog are two buttons: 'Cancel' and 'Save'.

3. Configure **Device Settings**:
 - Activate or deactivate **Maintenance Mode**
 - Activate or deactivate **Maintenance Mode on Reboot**.
4. Select **Save**.

Delete Device

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the Devices page, select **Delete Device** from the Actions column (⋮) for the device you want to delete.
3. Select **Confirm** when prompted.

Overview (Packet Broker Mode)

You can view real-time device and health statistics in the device-specific dashboard.

Device Statistics

Device Statistics

The statistics are obtained from supported devices in the following ways.

- **Extreme 9920 devices:** When a 9920 device is discovered, XCO uses gNMI to subscribe to the required statistic types. The collected statistics are processed and displayed in dashboards.
- **SLX devices:** When an SLX device is discovered, XCO is configured as a telemetry collector for streaming statistics. Streamed statistics are processed and displayed in dashboards.

- **MLX devices:** XCO runs CLI commands periodically to collect statistics, which are processed and displayed in dashboards.

Table 10: Statistics collection interval by device type

Statistic	Interval (seconds)		
	9920	SLX	MLX
System	10	60	180
Interface	10	10	180
Interface summary	10	10	180
Ingress policy	10	60	180
Egress policy	10	NA	NA
Ingress group	10	NA	NA
Egress group	10	NA	NA
Transport tunnel	10	NA	NA
Tunnel encap	10	NA	NA

Table 11: Supported statistics by device type

Statistic	9920	SLX	MLX
System	Yes	Yes	Yes
Interface	Yes	Yes	Yes
Interface summary	Yes	Yes	Yes
Ingress policy	Yes	Yes	Yes
Egress policy	Yes	No	No
Ingress group	Yes	No	No
Egress group	Yes	No	No
Transport tunnel	Yes	No	No
Tunnel encap	Yes	No	No

View Statistics in a Device Dashboard

The reports on the device dashboard provide real-time, per-device statistics.


Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.

The **Overview** tab displays several device-specific default reports.

- To view a different statistic in a report, select the statistic from the list in the upper right corner of the report.

Figure 2: Statistics list

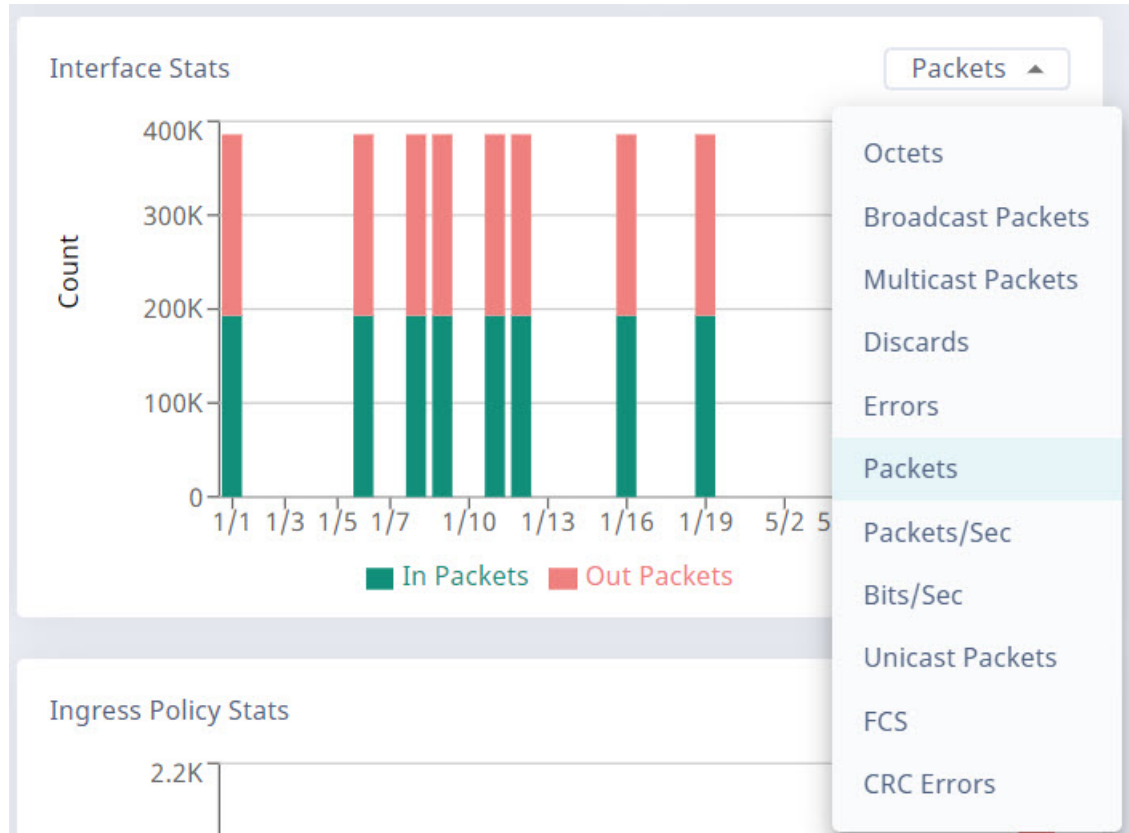

- To view statistics details, hover your cursor over an item in a report.

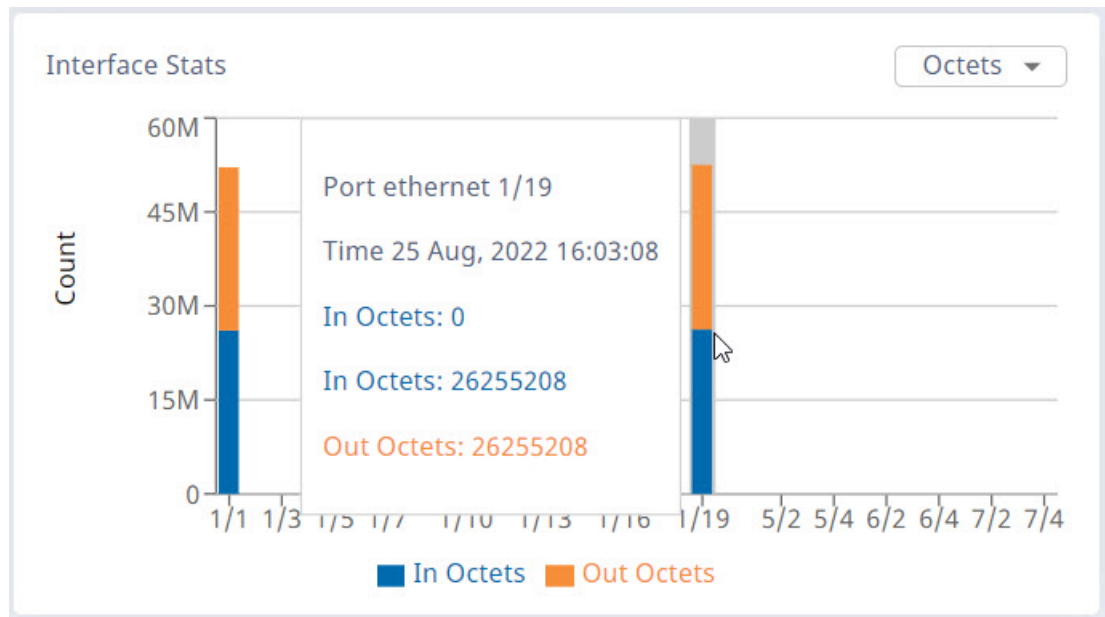


Figure 3: Statistics details

Edit Extreme 9920 Device Slot Settings (Packet Broker Mode)

About This Task

XCO 3.5.0 and later releases support discovery and configuration of Extreme 9920 devices with 400G interface line cards.



Note

- This procedure applies only to Extreme 9920 devices.
- XCO shows the slot state as **Online** for all states such as **Faulty**, **Present**, and **Initializing**, except the line card removal state, **Empty**.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.

The **Overview** tab displays several device-specific default reports and the front panel view of the device.



3. In the device front panel view, select **Settings** (⚙️) for the required slot.
4. Edit the **Slot Type**:
 - **9920-16C: 16*100/40G Line Card**
 - **9920-4D: 4*400G Line Card**
 - **Empty**If the slot type is **Empty**, the associated slot configuration is cleared.
5. Select **Save**.

Device Actions (Packet Broker Mode)

You can perform the following tasks from the **Device Actions** menu on the Device **Overview** page.

- Save Running Configuration
- Refresh Configuration
- Export Configuration
- Capture Packets
- Clear Counters
- View Logs
- Upgrade Firmware
- Delete

Save the Running Configuration of SLX and MLX Devices

You can save the running configuration of SLX and MLX devices as start-up configuration for devices.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. Select **Save Running Configuration** from the Device Actions menu.

A message is displayed indicating saving configuration. The running configuration is saved to the `startup config` file.

Refresh Configuration

You can use the refresh function to retrieve the latest configuration from a device. If there are any failures, the Notification page is updated.

About This Task

Perform this procedure to sync the configuration of a device with XCO.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, select the check boxes of the devices for bulk configuration refresh.
3. Select **Refresh Configuration** from the Devices table menu (⋮).

Alternatively, you can refresh configuration from the device Overview page.

- a. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.

- b. In the Device Actions menu, select **Refresh Configuration**.
4. Select **Confirm** when prompted.

**Note**

The XCO user interface does not support hostname updates. If you update device hostnames directly on the device, remove and re-add those devices in the user interface to view the updates.

A message is displayed that the device is in the **in_progress** mode and to wait until the device becomes **healthy**.

Export Configuration

You can export the configuration of an SLX or MLX device to an Extreme 9920 device.

About This Task

In general, the following configuration is exported:

- Policy rule matches (IPv4, IPv6, and L2 only)
- Policies
- Ingress group
- Egress
- Egress group

The following configuration items are not exported. These items appear in red text on the Export Configuration page.

- Special characters such as %, {, }, \, and = are not supported on the Extreme 9920 device. Policies and rule matches are not exported if the names of those items contain these special characters.
- User-defined access lists (UDA) are not supported on the Extreme 9920 device and are not exported.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.

3. In the Device Actions menu, select **Export Configuration**.

Export Configuration ? ×

All fields marked with an asterisk (*) are required.

From Device *

To Device (Optional)

Select a configuration

Configuration	
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> ▼ Policies ✓ </div>	✓
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> ▼ Policy Rule Matches ✓ </div>	✓
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> ▼ Ingress Groups ⓘ ✓ </div>	✓
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> ▼ Egress Groups ✓ </div>	✓
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> ^ Egress ⓘ ✓ </div>	✓
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> egress_tvf_9_e_1_13 Please select Ports/PortChannels ✓ </div>	✓
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> egress_tvf_19_e_4_17 Please select Ports/PortChannels ✓ </div>	✓
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> egress_tvf_17_e_2_9 Please select Ports/PortChannels ✓ </div>	✓
<div style="display: flex; justify-content: space-between; align-items: flex-start;"> egress_tvf_109_e_1_1 Please select Ports/PortChannels ✓ </div>	✓

Cancel
Save

4. In the **To Device** field, select the device to which you want to export the configuration.
 - The configuration of the source device is displayed.
 - Items in red text under each Configuration drop-down menu are not exported.
 - Items flagged with an "i" symbol require the selection of one or more ports before you can export the items.
5. Select all required ports.
6. Select **Save**.
The configuration is exported to the destination device.

Packet Capture

XCO supports Packet Capture (PCAP) on 9920 and SLX devices.

PCAP captures packet data from the traffic that enters and leaves a device. The captured packets are stored in one or more PCAP files. After capturing the configured number of packets, packet capturing process automatically stops for the selected interface.

Ingress packets are captured before processing and egress packets are captured after processing, including header alterations.

You can use the data in PCAP files to monitor and analyze network traffic for information such as bandwidth usage, DNS resolution, network intrusion, and debugging.

- The packets received from data-path are written to the active PCAP file, `pktcapture_running.pcapng`.
- The active PCAP file is renamed and saved as `pktcapture_N.pcapng`, where N is 1-25.
- A maximum of 25 PCAP files with a file size of 100 MB each is supported for 9920. Packet capture automatically stops when 25 PCAP files are available. The existing PCAP files have to be removed to restart packet capture.
- The capture writes to the active PCAP file until file size reaches 100 MB. The PCAP file is then renamed and saved.
- Every SLX packet capture overwrites the previous PCAP file.
- If the capture is manually stopped, irrespective of the current file size, the active PCAP file is renamed and saved.
- (9920 only) XCO supports 10 simultaneous packet captures.

Start a PCAP on SLX Devices

PCAP information from an SLX device is captured in a file that you can download.

Before You Begin

Because PCAP for SLX devices is supported on only one port at a time, you must stop an existing PCAP before you can begin a new one. For more information, see [Stop a PCAP](#) on page 105.


About This Task

Every SLX packet capture overwrites the previous PCAP file.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. Select **Capture Packets** from the Device Actions menu.

4. Select **Configure Port Capture** or **+ (Enable PCAP)** as appropriate to start a new packet capture.

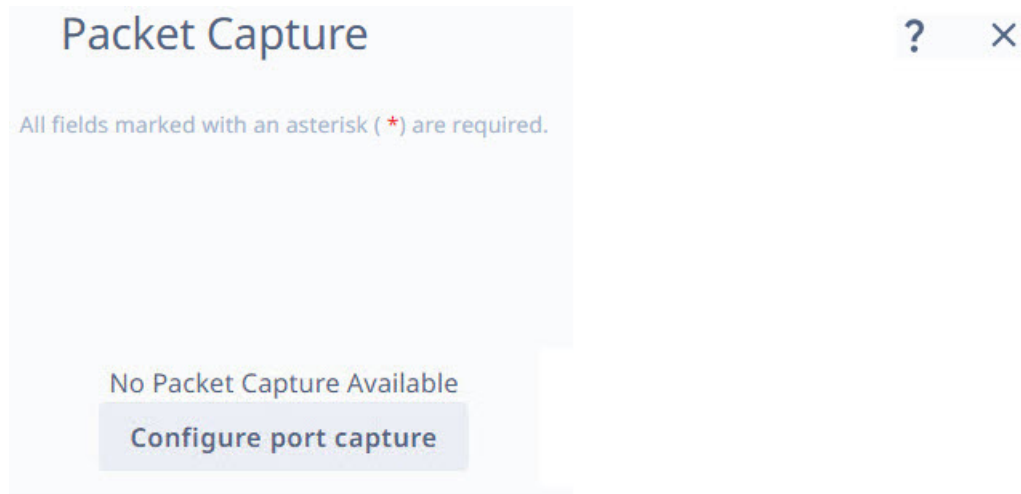

5. From the Packet Capture actions, select **Start**.
6. In the **Port** field, select a port on which to capture packets.
7. In the **Direction** field, select the packet type:
 - **Ingress (RX)**
 - **Egress (TX)**

Packet Capture Config ? ×

All fields marked with an asterisk (*) are required.

Packet Capture Start Stop

Port (Optional) No Capture configs available, Add one

Direction

Ingress (RX) Egress (TX)

Packet Count *

2048

Clear Add

Cancel
Save

8. In the **Packet Count** field, select the number of packets that you want to capture, from 1 to 8,000.

Packet capture stops when the selected number of packets has been captured.

9. Select **Add**.

The capture configuration is displayed on the right.

10. Select **Save**.

The PCAP file is added to the Packet Capture page.

Start a PCAP on Extreme 9920 Devices

PCAP information from a 9920 device is displayed in the XCO interface.

About This Task

A maximum of 25 PCAP files are supported for 9920.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. Select **Capture Packets** from the Device Actions menu.
4. Select **Configure Port Capture** or **+ (Enable PCAP)** as appropriate to start a new packet capture.
5. From the Packet Capture actions, select **Start**.
6. In the **Port** field, select a port on which to capture packets.
7. In the **Direction** field, select the packet type:
 - **Ingress (RX)**
 - **Egress (TX)**
 - **Both**

Packet Capture Config ? ×

All fields marked with an asterisk (*****) are required.

Packet Capture Start Stop

Port (Optional)

Direction

Ingress (RX)
 Egress (TX)
 Both

Packet Count (Optional)

2048

Clear
Add

No Capture configs available, Add one

Cancel
Save

8. In the **Packet Count** field, select the number of packets that you want to capture, from 1 to 8,000.
 Packet capture stops when the selected number of packets has been captured.
9. Select **Add**.
 The capture configuration for the selected port is displayed on the right.
10. Repeat [step 5](#) through [step 9](#) as needed to configure PCAPs for more ports.
 PCAP configuration is supported for a maximum of 10 ports for the selected device.
11. Select **Save**.
 The Packet Capture page displays running PCAPs and PCAP results.

Stop a PCAP

For SLX devices, you must stop the current uncompleted PCAP before you can begin a new one. 9920 devices support up to 10 running PCAPs before you need to stop one, although you do not need to reach the limit of 10 before stopping a PCAP.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. Select **Capture Packets** from the Device Actions menu.

4. Select **Configure Port Capture** or **+ (Enable PCAP)** as appropriate.
5. From the Packet Capture actions, select **Stop**.

Packet Capture Config ? ×

All fields marked with an asterisk (*****) are required.

Packet Capture Start Stop

Port (Optional)


Direction

Ingress (RX) Egress (TX)

Packet Count *****

2048

Clear
Add

6. Select **Delete** () for the packet capture you wish to stop.
The packet is removed from the list.

Download a PCAP File

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (**...**) to proceed to the device Overview page.
3. Select **Capture Packets** from the Device Actions menu.


- In the **Packet Capture** page, select **Download PCAP File** () for the PCAP file you want to download.





Packet Capture

All fields marked with an asterisk (*****) are required.

PCAP

+


 Delete

<input type="checkbox"/>	Name	FILE SIZE	PACKET COUNT	LAST MODIFIED	
<input type="checkbox"/>	pktcapture_5.pcapng	0.39 KB	1	08 Mar, 2023 01:38	 
<input type="checkbox"/>	pktcapture_4.pcapng	0.39 KB	1	06 Mar, 2023 01:22	 

- In the **File Name** field, provide a name for the file.
This step allows you to provide a user-friendly file name.
- In the **Host IP** field, enter the IP address of a device that is accessible from the SLX device.
- In the **User Name** and **Password** fields, provide the device credentials.
- In the **Path** field, provide the download file path.
- Select **Save**.
The PCAP file is downloaded to the specified destination.

Delete a PCAP File

Procedure

- In the Navigation menu, select **Device Inventory**.
- In the **Devices** page, click anywhere in the required device row except the Actions column () to proceed to the device Overview page.
- Select **Capture Packets** from the Device Actions menu.
- To delete multiple PCAP files, do the following:
 - Select the check boxes for the PCAP files you want to delete.

b. Select **Delete**.

Packet Capture

All fields marked with an asterisk (*****) are required.

🔍 Search PCAP

PCAP + 🔄 Delete

<input type="checkbox"/>	Name	FILE SIZE	PACKET COUNT	LAST MODIFIED		
<input type="checkbox"/>	pktcapture_5.pcapng	0.39 KB	1	08 Mar, 2023 01:38	↓	🗑️
<input type="checkbox"/>	pktcapture_4.pcapng	0.39 KB	1	06 Mar, 2023 01:22	↓	🗑️

The selected PCAP files are deleted.

5. To delete a PCAP file, select **Delete PCAP File** () for the PCAP file you want to delete.

The selected PCAP file is deleted.

Clear Counters

You can clear counters for Extreme 9920, MLX, and SLX devices.

About This Task

Counters track the number packets. Counters increase over time and you can clear them as needed. For some devices, XCO supports specific object level counter clear and for some devices supports all object clear counter.

Table 12: Support for clearing counters

	9920	SLX	MLX
Clear all counters	<ul style="list-style-type: none"> • Interface • Match • Egress group • Ingress group • Egress • Ingress policy • Egress policy • Transport tunnel • Tunnel encapsulation 	<ul style="list-style-type: none"> • Interface • Match 	<ul style="list-style-type: none"> • Interface • Match
Clear specific counters	<ul style="list-style-type: none"> • Interface • Match • Egress group • Ingress group • Egress • Ingress policy • Egress policy • Transport tunnel • Tunnel encapsulation 	<ul style="list-style-type: none"> • Interface • Match 	<ul style="list-style-type: none"> • Interface

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. Select **Clear Counters** from the Device Actions menu.

- To clear all counters of one object, select the check box for that type.

Selected

All Interfaces x

▼ Matches

▼ Interfaces

- To clear specific counters of one type, expand the type and select the check boxes for the counters.

Selected

3 Interfaces x

▼ Matches

▲ Interfaces

🔍 Search Interfaces

Ethernet 0/1

Ethernet 0/2

Ethernet 0/3

Ethernet 0/4

- Select **Clear**.

Reports in the dashboards are updated to reflect your selections.

View Logs

Procedure

- In the Navigation menu, select **Device Inventory**.
- In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.

3. In the Device Actions menu, select **View Logs** to view the device specific logs.

Hostname	Ip Address	Message	Severity	Date
MLXe_247_QA	10.32.93.21	ssh terminated by admin from src...	INFO	2023-08-22 12:09:29
MLXe_247_QA	10.32.93.21	CMD: "show interfaces " by admin...	INFO	2023-08-22 12:09:19
MLXe_247_QA	10.32.93.21	CMD: "terminal length 0" by admi...	INFO	2023-08-22 12:09:19
MLXe_247_QA	10.32.93.21	ssh login by admin from src IP 10...	INFO	2023-08-22 12:09:18

The list of logs is displayed.

Delete a Device from the Device Overview Page

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (☰) to proceed to the device Overview page.
3. In the Device Actions menu, select **Delete**.
4. Select **Confirm** when prompted to delete the device.

Policies and Configuration (Packet Broker Mode)

The **Policy Configuration** page in the user interface allows you to view, configure, or update existing device configurations. You can select the existing ingress groups, ingress policies, and egress-groups or create new objects and link them to create a complete service chain.

Policies

A policy represents the route-map or listener policy on the device. A policy consists of matches and actions to be applied on packets.

XCO supports the following policy types:

- Ingress Policy (route-map)
- Egress Policy (9920 only)

Ingress Policy

An ingress policy specifies the actions to be taken at ingress on packets entering the devices.

Egress Policy

An egress policy optionally specifies the actions to be applied on selected packets exiting the 9920 devices. You must configure a match ACL at a minimum.

Create an Egress Policy for a Device

An egress policy (or listener policy) defines the actions to apply to outbound packets.

Before You Begin

- Create a policy rule match to associate with the policy. For more information, see [Change a Policy Rule Match for a Device](#) on page 119.
- An ACL bound to an egress policy can be modified.
- An egress policy bound to an egress can be modified.

About This Task

Take the following steps to define the criteria for a policy. Each set of criteria is a rule. A policy can contain multiple rules.



Note

This procedure applies only to Extreme 9920 devices.

Listener policy byte count is incorrect when truncation is enabled. The byte count for truncated packets is the actual byte count seen by the egress ACL before truncation.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Policies > Add Policy**.
4. In the **Name** field, enter a unique name for the policy.
An egress policy cannot have the same name as another egress policy or the reserved keyword `all`.
5. In the **Policy Type** field, select **Egress Policy**.
6. Select the **Sequence** in which to apply the rule.
7. In the **Matches** field, select a policy rule match.
 - If you did not create a policy rule match, select **Create Match** to create the match now.
 - For a policy, you can select three rule matches of different types: 1 v4, 1 v6, and 1 I2.
 - You cannot use the same policy rule match multiple times in a policy.
8. In the **Packet Slicing** field, enter a value to represent the maximum packet size after slicing.
The final packet size will be less than or equal to this value.
9. In the **Header Stripping** field, select one or more tags to strip: 802.1BR, VLAN, or VN (Virtual NIC).
The 802.1BR and VN tags cannot coexist in the same policy rule action.

10. In the **VLAN** field, select the VLAN ID to change the VLAN tag in the egress packet.
11. To remove the outermost tunnel headers from the packet, select the **Decap** check box.
12. To prevent the rule from being used in the policy, select the **Deny** check box.

**Tip**

This option prevents the rule from being used, but does not delete the configuration of the rule. The rule is skipped and is not used to drop a packet. You can reinstate the rule later without having to reconfigure it.

13. Select **Add Rule**.

The rule parameters appear in the pane on the right.

14. Repeat step 7 through step 13 until you have added all the rules you need.
15. Select **Create**.

Create an Ingress Policy for a Device

An ingress policy (or route map) defines the actions to apply to inbound packets.

Before You Begin

Create a policy rule match to associate with the policy. For more information, see [Change a Policy Rule Match for a Device](#) on page 119.

Create an egress group to associate with the policy. For more information, see [Create an Egress Group](#) on page 125.

About This Task

Take the following steps to define the criteria for a policy. Each set of criteria is a rule. A policy can contain multiple rules.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Policies > Add Policy**.
4. In the **Name** field, enter a unique name for the policy.
An ingress policy cannot have the same name as another ingress policy or the reserved keyword `all`.
5. In the **Policy Type** field, select **Ingress Policy**.
6. Select the **Sequence** in which to apply the rule.

7. In the **Matches** field, select a policy rule.



Note

- For a policy, you can select three rule matches of different types: 1 v4, 1 v6, and 1 L2.
- If you did not create a policy rule match, select **Create Match** to create the match now.
- You cannot use the same policy rule match multiple times in a policy.
- For SLX devices, you can select only one rule match type (v4, v6, L2, or UDA) per rule.
- For MLX devices, you cannot select L2 and UDA match in the same rule.
- (MLX only) Do not apply an L2 rule match and a UDA rule match in the same policy. Doing so causes the related ingress group to fail.
- (MLX only) If you add a UDA rule match to a policy that is associated with an ingress group, ensure that you first apply the associated UDA profile to that group. For more information, see [Create an Ingress Group for an SLX or MLX Device](#) on page 122.

8. (9920 only) In the **QoS** field, select the required QoS.

For more information, see [Quality of Service](#) on page 133.

9. In the **Egress Group** field, select the group to associate with the policy.

If you did not create an Egress Group, select **Create Egress Group**. For more information, see [Create an Egress Group](#) on page 125.

10. (MLX and 9920 only) In the **Packet Slicing** field, enter a value to represent the maximum packet size after slicing.

The final packet size will be less than or equal to this value.

11. (SLX only) In the **Truncation Profile** field, select a profile that you created for a port or a port channel.

For more information, see [Create a Truncation Profile for an SLX Device](#) on page 142.

12. (9920 only) In the Advance Scope section, select one of the following:

Decap to remove the outermost tunnel headers from the packet

Scope Shift to move the ACL scope for matching from the outer headers to the inner headers of a tunneled packet

None to perform neither action

13. (9920 only) To prevent the rule from being used in the policy, select the **Deny** check box.



Tip

This option prevents the rule from being used, but does not delete the configuration of the rule. The rule is skipped and is not used to drop a packet. You can reinstate the rule later without having to reconfigure it.

14. Select **Add Rule**.

The rule parameters appear in the pane on the right.

15. Repeat step 7 through step 14 until you have added all the rules you need.

16. Select **Create**.

Change a Policy for a Device

You can add, change, or delete one or more rules or actions in a policy.

About This Task

You can change a policy for a specific device or change a policy in the library. To change a policy in the library, see [Change a Policy in the Library](#) on page 178.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Policies**.
The list of policies is displayed.
4. Select the policy that you want to change.
5. Follow the instructions in [Create an Ingress Policy for a Device](#) on page 113 or [Create an Egress Policy for a Device](#) on page 112 to add, change, or remove rules or actions in the policy.



Tip

(9920 only) To reinstate a rule that is not included in the policy (the **Deny** field is selected), clear the **Deny** field.

View the Policy Configuration

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. Select **Policies and Configuration**.

← SLX Device Actions ▾

Overview
Policies and Configuration ▾
 Policies
 Policy Rule Matches
 UDA Profiles
 Ingress Groups
 Egress Groups

Policy Configuration + Add New Policy

Showing 1 - 3 of 3 results Page Size 10 Latest as on 5:40:00 PM

Ingress Group	Ingress Policy	Egress Group
yg_ig	y9 v8 v4	69 - tvf
backuppolicy_ig	backuppolicy v4	69 - tvf
Trafficv4_ig	Trafficv4 v4	18 - tvf

< 1 >


The Policy Configuration page displays the existing Ingress Group, Ingress Policy, and Egress Group information for the device.

Delete a Policy from a Device

About This Task

You can delete a policy from a device or from the library. To delete a policy from the library, see [Delete a Policy in the Library](#) on page 179.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Policies**.
4. Select **Delete Policy** () for the policy that you want to delete.
5. Remove the policy from any associated ingress group. For more information, see [Change an Ingress Group](#) on page 125.

Policy Rule Matches

A policy rule match represents IPv4, IPv6, L2, or UDA configuration on the device.

Create a Policy Rule Match for a Device

About This Task

When you create a policy rule match, you select all parts of a packet header that you want to target and then select the action to perform on the targeted items. These selections are the rules in your match. The match can then be associated with ingress or egress policies. A policy rule match can contain one or more rules.



Note

A policy rule match is a device-specific feature. If you have UDAs configured for a device, UDA-related fields are displayed in the Create Match page. These fields are not described in this procedure.

XCO supports a maximum of 6000 IPv4, 2000 IPv6, and 1500 L2/MAC matches for 9920.

To create a policy rule match in the library, see [Create a Policy Rule Match in the Library](#) on page 174.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Policy Rule Matches > Add Policy Rule Match**.
4. In the **Name** field, enter a unique name for the match.
 - Alphanumeric characters, dashes, and underscores are allowed in the **Name** field.
 - The name, `all` is a reserved keyword on 9920 and cannot be used.

5. In the **Type** field, select whether the match applies to IPv4, IPv6, L2, or UDA.
If you selected UDA on an SLX device, proceed to the next step. Else, go to step 7.
6. In the **UDA** field, select a profile.
7. (SLX only) In the **Sub Type** field, select the appropriate match.
 - **Standard**: Matches the source address information
 - **Extended**: Matches the source and destination address information
8. In the Match section, complete the applicable fields to identify the packets of interest.

**Note**

All fields are not mandatory. You can leave the fields blank unless noted.

The items in this section vary by your selection in the **Protocol** field. The following list describes all possible selections.

- **Protocol**: The protocol that you want to target. If the protocol you want is not in the list, select **None** and provide the ID of the protocol you want in the **Protocol ID** field. Every protocol has a numeric value that is defined by the IETF.
- **Sequence**: The order in which this rule is performed in the match.
- **Protocol ID**: The ID of a protocol that you want to target. Use only when the protocol you want is not available in the **Protocol** field.
- **Source IP**: The IPv4 or IPv6 address of the device that sends the packets.
- **Source Mask**: The mask for the source IP address, in the following format: 255.255.255.255 or ffff:ffff:ffff:ffff:ffff:ffff:ffff:ffff.
- **Destination IP**: The IPv4 or IPv6 address of the device that is to receive the packets.
- **Destination Mask**: The mask for the destination IP address, in the following format: 255.255.255.255 or ffff:ffff:ffff:ffff:ffff:ffff:ffff:ffff.
- **Source Mac**: The MAC address of the device that sends the packets, in the following format: 1111.1111.1111 or 11:11:11:11:11:11. Any alpha characters in the address must be lowercase.
- **Source Mac Mask**: The mask for the source MAC address, in the following format: ffff.ffff.ffff or ff:ff:ff:ff:ff:ff. Any alpha characters in the mask must be lowercase.
- **Destination Mac**: The MAC address of the device that is to receive the packets, in the following format: 1111.1111.1111 or 11:11:11:11:11:11. Any alpha characters in the address must be lowercase.
- **Destination Mac Mask**: The mask for the destination MAC address, in the following format: ffff.ffff.ffff or ff:ff:ff:ff:ff:ff. Any alpha characters in the mask must be lowercase.
- **Source Port**: The port through which packets enter the device.
- **Source Port End**: The last port in the range of ports through which packets enter the device.
- **Destination Port**: The port through which packets leave the device. Valid values range from 1 through 65535.
- **Destination Port End**: The last port in the range of ports through which packets leave the device. Valid values range from 1 through 65535.

- **IP Payload Length:** The length of the IP packets that you want to target, or the size of the IP payload. Valid values range from 64 through 9000.
- **IP Payload Length End:** The last acceptable value of the IP payload. Valid values range from 65 through 9000.
- **DSCP:** The value of the Differentiated Services Code Point in the Type of Service field in the header. Valid values range from 0 through 63.
- **VLAN:** The VLAN ID. The valid value ranges are as follows:
 - 9920: 0 through 4095
 - SLX and MLX: 0 through 4091
- **EtherType:** Identifies the protocol that is encapsulated in the payload. For example, the EtherType value for IPv4 is 0x0800. Valid values range from 1536 through 65536 (numerical), or 0x0600 through 0xffff (hexadecimal), or are one of the following: ARP, IPv4, or IPv6.
- **PCP:** The Priority Code Point, a 3-bit field in a VLAN header. Valid values range from 0 through 7.
- **Tunnel ID:** The ID number of the tunnel. Valid values range from 1 through 16777215.
- **MATCH0, MATCH1, MATCH2, MATCH3:** Specifies the UDA Hexadecimal. SLX presents these as specific header fields such as `NEXT_HEADER`.



Note

- MLX UDA requires a match and mask for all fields.
- Use a mask of all zeros to make the any value for a field.

- **MASK0, MASK1, MASK2, MASK3:** Specifies the UDA Hexadecimal value used to mask the MATCH values. Use 0 bits for any value. A bit value of 1 must be matched.

9. In the Fragmentation sub-section, select one of the following.

The items in this section vary by your selection in the **Type**, **Sub Type** and **Protocol** fields. The following list describes all possible selections.

- **Fragmented:** Targets target fragmented packets.
- **Non Fragmented:** Targets non-fragmented packets.
- **None:** Targets packets in which the DF (Don't Fragment) flag is set in the IP header.

10. In the Options sub-section, select one or more of the following:

The items in this section vary by your selection in the **Type**, **Sub Type** and **Protocol** fields, in particular selection of a Layer4 protocol such as UDP, TCP, or STCP. The following list describes all possible selections.

- **Acknowledgment:** Targets packets in which the ACK flag is set in the TCP header.
- **Congestion:** Targets packets in which the CWR flag is set in the TCP header.
- **ECN-Echo:** Targets packets in which the ECE flag is set in the TCP header.
- **Last Packet:** Targets packets in which the FIN flag is set in the TCP header.
- **Push:** Targets packets in which the PSH flag is set in the TCP header.

- **Reset:** Targets packets in which the RST flag is set in the TCP header.
 - **Synchronize:** Targets packets in which the SYN flag is set in the TCP header.
 - **Urgent:** Targets packets in which the URG flag is set in the TCP header.
11. In the Action section, select one or more actions to perform on the targeted items.
 - **Drop** to deny packets.
 - **Count** to keep track of the number of packets that match the policy rule.
 - **Log** to add the transaction to the XCO log.
 - **Hard Drop** to discard packets.
 - **Bi Directional** to cover traffic in both directions (source to destination and destination to source) in a single rule.
 12. Select **Add**.

The match parameters (the new rule) appear in the pane on the right.
 13. Repeat steps 8 through 12 until you have added all the rules you need.
 14. Select **Save**.

Change a Policy Rule Match for a Device

You can add, change, or delete one or more rules in a policy rule match.

About This Task

You can change a policy rule match for a specific device or change a match in the library. To change a match in the library, see [Change a Policy Rule Match in the Library](#) on page 176.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (☰) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Policy Rule Matches**.
The list of policy rule matches is displayed.
4. Select **Edit** (✎) from the Actions column (☰) for the policy rule match that you want to change.
5. Follow the instructions in [Create a Policy Rule Match for a Device](#) on page 116 to add, change, or remove rules in the match.
6. Select **Update** to save the configuration changes.

Delete a Policy Rule Match from a Device

You can delete a policy rule match from a device.

Before You Begin

You cannot delete a policy rule that is attached to a device.

About This Task

To delete a policy rule match from the library, see [Delete a Policy Rule Match from the Library](#) on page 177.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (☰) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Policy Rule Matches**. The list of policy rule matches is displayed.
4. Select **Delete** (🗑) from the Actions column (☰) for the match you want to delete.

UDA Profiles

The UDA profile consists of offset values. The UDA profile must be attached to the ingress group to apply it to all interfaces.

- A maximum of four parameters per profile are supported.
- Only multiples of four are supported as offset values for MLX devices.
- For SLX devices, the profiles are updated in the UDA match.

Create an MLX UDA Profile for a Device

About This Task

To create an MLX UDA profile in the library, see [Create an MLX UDA Profile in the Library](#) on page 180.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (☰) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > UDA Profiles > Add UDA Profile**.
4. In the **Name** field, enter a unique name for the UDA profile.
5. In the four **Offset** fields, select the appropriate offset values.
An offset indicates the index of the received packet. For example, an offset of 0 indicates the first byte of the received packet.
6. Select **Save**.

Create an SLX UDA Profile for a Device

A UDA profile can be associated with a UDA match.

About This Task

To create an SLX UDA profile in the library, see [Create an SLX UDA Profile in the Library](#) on page 181.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (☰) to proceed to the device Overview page.

3. In the Device Config menu, select **Policies and Configuration > UDA Profiles > Add UDA Profile**.
4. In the **Name** field, enter a unique name for the UDA profile.
5. Define the header fields that are required for a match.

The header fields you select constitute the header stack. As you select header types and header fields, additional header selections become available. The additional selections vary based on your header choices.

- a. In the **Header 0 Ethernet - Ethernet** row, select the field that is required for a match and then click **+** to add your selection.
- b. In the **Header 1** row, select the type and field that are required for a match and then click **+** to add your selection.

Your selections determine whether a Header 2 row is displayed.

- c. Make selections in the Header 2 row and in all subsequent rows until no more rows are available or until your header stack is complete.

A maximum of 4 Headers are supported in a UDA profile.

6. Select **Save**.


Change a UDA Profile for a Device

You can change the parameters of a user-defined access list (UDA) profile.

About This Task

To change a UDA profile in the library, see [Change a UDA Profile in the Library](#) on page 181.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (**...**) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > UDA Profiles**.
The list of UDA profiles is displayed.
4. In the UDA Profiles page, select **Edit** () from the Actions column (**...**) for the UDA that you want to change.
5. To change a UDA Profile for a device, take the following steps.
6. Follow the instructions for the type of UDA you are changing.
 - [Create an SLX UDA Profile for a Device](#) on page 120
 - [Create an MLX UDA Profile for a Device](#) on page 120
7. Select **Save**.

Delete a UDA Profile from a Device

You can delete a user-defined access list (UDA) profile from the library or device inventory page.


About This Task

To delete a UDA profile in the library, see [Delete a UDA Profile in the Library](#) on page 182.

Before You Begin

You cannot delete a UDA profile that is attached to any ingress-group.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > UDA Profiles**.
The list of UDA profiles is displayed.
4. In the UDA Profile page, select **Delete** () from the Actions column (•••) for the UDA profile you want to delete.

Ingress Groups

Ingress policies are used to perform actions on packets at ingress. Ingress groups classify the packets received on devices.

Create an Ingress Group for an SLX or MLX Device

An ingress group is a set of ports and port channels on which monitored traffic is received.

Before You Begin

If necessary, create the port channel to associate with the ingress group. For more information, see [Create a Port Channel](#) on page 135.

If necessary, create the ingress policy to associate with the ingress group. For more information, see [Create an Ingress Policy for a Device](#) on page 113.

If necessary, create a UDA profile to associate with the ingress group. For more information, see [Create an MLX UDA Profile in the Library](#) on page 180.

About This Task

Ingress groups classify and apply policies on monitored traffic. After you create an ingress group, the group can be associated with an ingress policy.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Ingress Groups > Add Ingress Group**.
4. In the **Name** field, enter a name for the group.
5. In the **Ports/Port Channels** field, select at least one port or port channel for the group.
6. In the **Policy Name** field, select the ingress policy to associate with the group.

7. In the **UDA Profile** field, select a UDA profile to associate with the group.
You must select a profile if the policy (in the **Policy Name** field) contains a UDA match. If you do not select a profile, your ingress group configuration will fail.
8. Select **Create**.

Create an Ingress Group for a 9920 Device

An ingress group is a set of ports, port channels, and tunnels on which monitored traffic is received.

Before You Begin

If necessary, create the port channel to associate with the ingress group. For more information, see [Create a Port Channel](#) on page 135.

If necessary, create the ingress policy to associate with the ingress group. For more information, see [Create an Ingress Policy for a Device](#) on page 113.

If necessary, create a mirror for the outer tunnel. For more information, see [Configure a Traffic Mirror for 9920 Devices](#) on page 129.

About This Task

Ingress groups classify and apply policies on monitored traffic. After you create an ingress group, the group can be associated with an ingress policy.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Ingress Groups > Add Ingress Group**.
4. In the **Name** field, enter a name for the group.
5. In the **Ports/Port Channels** field, select at least one port or port channel for the group.
6. (Optional) For single tunnel encapsulation, do the following to configure the Inner Tunnel:
 - a. Expand the **Inner Tunnel** section.
 - b. In the **Tunnel Type** field, select the type of tunnel for the incoming traffic.
 - **GRE**
 - **GTPU**
 - **VXLAN**
 - **NVGRE**
 - **IPIP**
 - c. (Optional) In the **Tunnel ID** field, select or enter a value that represents the tunnel ID.

This field is not applicable for GRE and IPIP tunnels.

- d. (Optional) Complete the applicable processing and filter options for the selected protocol.
 - **Destination IP:** Specifies the destination IP address
 - **Destination Prefix:** Specifies the destination prefix
 - **Source IP:** Specifies the source IP address
 - **Source Prefix:** Specifies the source prefix
- e. In the Advance Scope section, select one of the following actions to apply to the incoming traffic.
 - **Decap** to remove the outer tunnel headers from the packet
 - **Scope Shift** to move the ACL scope for matching from the outer headers to the inner headers of a tunneled packet
 - **None** to perform neither action
7. (Optional) For packets with two sets of tunnel headers before the innermost packet, for example, a VXLAN tunnel wrapped around a GTPu tunneled packet, do the following to configure the Outer Tunnel.
 - a. Expand the **Outer Tunnel** section.
 - b. In the **Outer Tunnel Type** field, select the type of tunnel for the incoming traffic.
 - **None**
 - **VXLAN**
 - **MPLS**

A maximum of five MPLS header removal is supported. The packets with more than five MPLS headers are dropped.

- c. Complete the applicable filter options for the outer tunnel headers for the selected protocol.
 - **Label:** Filters on the last MPLS label present in a five label stack.
 - **Traffic Class:** Filters on the Traffic Class field of the last MPLS label present in a five label stack.
 - **Time To Live (TTL):** Filters on the Time To Live field in the last MPLS label present in a five label stack.
 - **Outer Tunnel ID:** Filters on the VXLAN tunnel ID field.
 - **Outer Destination IP:** Specifies the destination IPv4 address or network..
 - **Outer Destination Prefix:** Specifies the destination prefix if filtering on a range of hosts.
 - **Outer Source IP:** Specifies the source IPv4 address or network.
 - **Outer Source Prefix:** Specifies the source prefix if filtering on a range of hosts.

The packets that do not match the selected filter options are dropped.

- d. (Optional) In the **Mirror** field, select the mirror action to forward a copy of the entire packet to the configured mirrored port.


For more information, see [Configure a Traffic Mirror for 9920 Devices](#) on page 129.

8. In the **Policy Name** field, select the ingress policy to associate with the group.
9. Select **Create**.

Change an Ingress Group

You can add, change, or delete the parameters of an ingress group.


Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Ingress Groups**.
The list of ingress groups is displayed.
4. Select **Edit** () from the Actions column for the ingress group you want to change.
5. Follow the instructions in [Create an Ingress Group for an SLX or MLX Device](#) on page 122 and [Create an Ingress Group for a 9920 Device](#) on page 123 to add, change, or delete the parameters in the group.

Delete an Ingress Group

You can delete an ingress group from a device.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Ingress Groups**.
The list of ingress group is displayed.
4. In the Actions column, select **Delete** () for the group that you want to delete.

Egress-Group

An egress-group represents one or more interfaces for replicating the traffic for the given policy.

An egress-group connects an ingress-policy and the egress to define how traffic is forwarded to end devices.

Create an Egress Group

An egress group is a set of egresses (9920) or a set of interfaces or port-channels (SLX/MLX).

Before You Begin

Create the egress (9920) or port-channels (SLX/MLX) to associate with the egress group. For more information, see [Create an Egress for Devices](#) on page 127 and [Create a Port Channel](#) on page 135.

About This Task

When you create an egress group, you assign a name and associate at least one egress (9920) or port/port channel (SLX/MLX). An egress associates an egress port (or port channel) with an egress policy for 9920.


Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Egress Groups > Add Egress Group**.
4. To create an egress group for SLX and MLX devices, take the following steps.
 - a. In the **nHop Type** field, select the next hop domain type: **TVF** (transparent VLAN flooding) or **VLAN** (MLX only).
 - b. In the **nHop Value** field, provide the VLAN ID (MLX only) or TVF ID.
The valid value ranges for VLAN and TVF are as follows:
 - MLX: VLAN is 1-4090 and TVF is 1-2016
 - SLX: TVF is 1-4095
 - c. Select the required **Ports/PortChannels**.
 - d. Select **Create**.
5. To create an egress group for 9920 devices, take the following steps.
 - a. In the **Name** field, enter a name for the group.
An egress group cannot have the same name as an egress.
 - b. In the **Egress List** field, select at least one egress to associate with the group.
 - c. (Optional) Select **Create Egress** to create an egress to associate with the egress group, if required.
For more information, see [Create an Egress for Devices](#) on page 127.
 - d. Select **Create**.

Change an Egress Group

You can add or delete egress in an egress group.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Egress Groups**.
The list of egress groups is displayed.
4. In the Actions column, select **Edit** () for the egress group that you want to change.
5. In the **Egress List** (9920) or **Interface/Port Channel** (SLX/MLX) field, select (or delete) at least one item.
For more information, see [Create an Egress Group](#) on page 125.

6. Select **Save**.

Delete an Egress Group

You can delete an egress group from a device.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Egress Groups**.
The list of egress groups is displayed.
4. In the Actions column, select **Delete** (🗑) for the group that you want to delete.

Egress

An egress defines an interface or a list of interfaces to be used for tool ports.

You can create an egress and combine it with various policies to perform additional processing actions to packets leaving the egress interfaces.

For MLX and SLX devices, the egresses are created internally when the egress group is created, and the egress group lists the ports or port-channels along with TVF or VLAN.

Create an Egress for Devices

Egress is a combination of ports, port channels, precedence, and an associated egress policy.

Before You Begin

If necessary, create a port channel. For more information, see [Change a Port Channel](#) on page 138.

(9920 only) If necessary, create an egress policy. For more information, see [Create an Egress Policy for a Device](#) on page 112.

About This Task



Note

For MLX and SLX devices, the egresses are created internally when the egress group is created, and the egress group lists the ports or port-channels along with TVF or VLAN.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.

3. In the Device Config menu, select **Policies and Configuration > Egresses > Add Egress**.
4. In the **Name** field, enter a name.
The egress cannot have the same name as an egress group.
5. In the **Port/Port Channel** field, select an egress port or port channel.
6. In the **Precedence** field, select the order of precedence for the port or port channel.
The precedence indicates the priority given to the port or port channel. The lower the number, the higher the priority.
7. Select **Add Port/Precedence (+)** to add your selections.
8. (9920 only) In the **Egress Policy** field, select the policy to associate with the egress.
9. Select **Save**.

Change an Egress Configuration

You can change the parameters of the egress configuration for a 9920 device.

Before You Begin

The egress configuration is view-only for SLX and MLX devices.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. Select **Policies and Configuration > Egresses**.
The list of egresses is displayed.
4. Select **Edit** (✎) from the **Actions** column for the item that you want to change.
5. Complete the fields as described in [Create an Egress for Devices](#) on page 127.

Delete an Egress Configuration

You can delete the egress configuration from a 9920 device.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Egresses**.
The list of egresses is displayed.
4. In the Actions column, select **Delete** (🗑) for the item that you want to delete.

Mirrors

XCO supports packet mirroring only for the 9920 devices.

Packet mirroring mirrors the whole frame to another egress port. For a frame without the outer tag, the header is terminated and the frame is subjected to further processing, based on ingress and egress configuration.

When mirroring is enabled, one copy of the whole frame is subjected to normal processing where the header is terminated and subjected to regular ingress or egress processing.

Another copy of the frame is mirrored with egress port without any header termination.

The filters for frame that are configured using ingress-group can be applied per port. If the frame does not match the filter, it is dropped.



Note

- Only one mirror destination port is supported.
- You can use the ingress-group to enable mirroring for outer MPLS-SR and outer VXLAN termination. MPLS-SR packets that match the filters are sent to the egress port based on the configured mirror.

Configure a Traffic Mirror for 9920 Devices

You can mirror traffic to a mirror port interface.

About This Task

The mirror is used in the outer tunnel configuration for an ingress group. This process ensures that the designated mirroring destination receives the same traffic as the egress port.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Mirrors > Add Mirror**.
4. In the **Name** field, enter a name for the mirror.
5. In the **Description** field, enter the description for the mirror.
6. In the **Port** field, select the mirroring destination port.
7. Select **Save**.

Change a Mirror Configuration

You can change the parameters of the configuration.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. Select **Policies and Configuration > Mirror**.
The list of mirrors is displayed.
4. Select **Edit** (✎) from the **Actions** column for the item that you want to change.
5. Complete the fields as described in [Configure a Traffic Mirror for 9920 Devices](#) on page 129.

Delete a Mirror Configuration

You can delete the configuration from a device.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Mirror**.
The list of mirrors is displayed.
4. In the Actions column, select **Delete** for the item that you want to delete.

Tunnels

XCO supports GRE tunnel encapsulation and termination on 9920 devices for forwarding selected traffic from a local 9920 device to a remote 9920 device through a routed network. These packets are sent to the specified interface on 9920 compared to other tunneled traffic that is mirrored or copied, but not addressed explicitly to the 9920.



Note

- XCO supports tunnel configuration only for the 9920 devices.
- As a best practice, configure static ARP entries on the routers for the connected 9920 device.

Encapsulation

Generic Routing Encapsulation (GRE) headers provide a private secure path for transporting packets.

The following information is required for tunnel creation or encapsulation:

- Source MAC address
- Source IPv4 address
- Destination MAC address
- VLAN ID
- Destination IPv4 address

The destination IP address must be in the network of the remote router.

Tunnel Termination

XCO decapsulates packets based on the configured parameters. The following information is required for tunnel termination:

- Source IPv4 address
- Source Prefix
- Destination IP address
- Destination Prefix

Tunnel Termination Flow

Tunnel termination can be configured for received L2 or L3 packets.

You can configure settings to apply tunnel termination to received packets, either tunneled (both L2 and L3) or non-tunneled. Tunnel termination is performed at either ingress or egress depending on the policy configuration.

L2 tunnel termination flow is as follows:

1. The outer tunnel of L2 tunneled packets is removed.
2. The current position is shifted to the start of the inner L2 header.

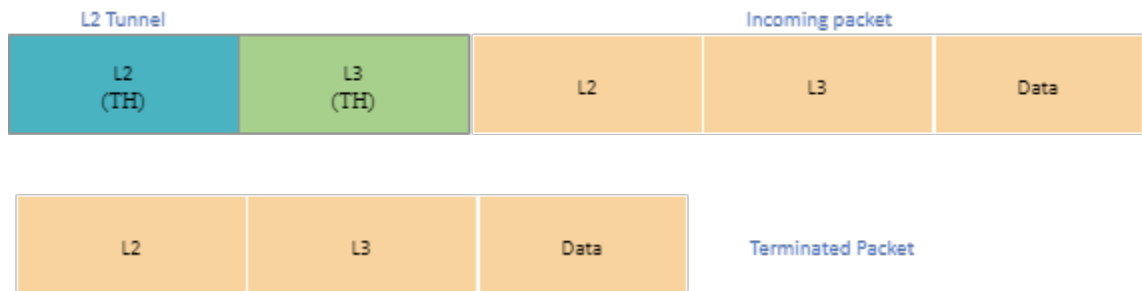


Figure 4: L2 tunnel termination

L3 tunnel termination flow is as follows:

1. The L2 header is retrieved from the L2 outer header because L3 tunneled-packet inner headers do not have the L2 header.
2. The L3 outer header is stripped.

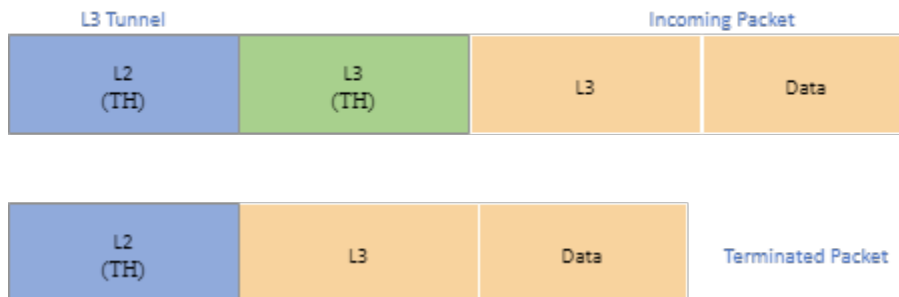


Figure 5: L3 tunnel termination

Create a Tunnel

You can configure transport tunnel termination and encapsulation for a device.

About This Task

You can associate transport tunnel termination with an ingress group and then associate that group with an ingress policy.



Note

This feature applies to Extreme 9920 devices only.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Tunnels > Add Tunnel**.
4. In the **Name** field, enter a name for the tunnel.
5. In the **Type** field, select **Termination** or **Encapsulation**.
6. In the **Tunnel Type** field, select one of the following.

The options vary by the type you selected in step 5.

GRE (Generic Routing Encapsulation). This type of tunnel encapsulates (or wraps) packets that use a certain protocol inside packets that use a different protocol.

ERSPAN (Encapsulated Remote Switched Port Analyzer): This type of tunnel mirrors traffic from source ports for delivery to destination ports on a different device.

7. In the **Source IP** field, enter the IPv4 or IPv6 address of the device that sends the packets.
8. In the **Destination IP** field, enter the IPv4 or IPv6 address of the device that is to receive the packets.
9. Complete the following fields.

The fields vary by the type you selected in step 5.

Source MAC. The MAC address of the device that sends the packets.

Destination MAC. The MAC address of the gateway router.

VLAN Tag. A numeric string that identifies which VLAN a packet belongs to.

VLAN PCP. The Priority Code Point, a 3-bit field in the VLAN header.

Egress. The egress to associate with the tunnel.

Source Prefix. The prefix of the IP address of the device that sends the packets, in CIDR notation format.

Destination Prefix. The prefix of the IP address of the device that receives the packets, in CIDR notation format.

Ingress Groups. The ingress group to associate with the tunnel.

10. Select **Save**.

Change a Tunnel

You can change the tunnel configuration for a device.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Tunnels**.
The list of tunnels is displayed.
4. Select **Edit** (✎) from the **Actions** column for the tunnel that you want to change.
5. Follow the steps in [Create a Tunnel](#) on page 132 to change the tunnel configuration.

Delete a Tunnel

You can delete tunnel configuration from a device.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Tunnels**.
The list of tunnels is displayed.
4. Select **Delete** (🗑) from the **Actions** column for the tunnel that you want to delete.

Quality of Service

XCO supports Quality of Service (QoS) configuration on 9920 devices.

QoS provides preferential treatment to specific traffic that is received on multiple ingress interfaces or Test Access Points (TAPs). QoS enables a networking device to prioritize critical traffic streams and provides dedicated bandwidth for effective delivery.

QoS aggregates, filters, and forwards traffic to a monitoring tool on an egress interface or egress group. The forwarding decision is based on the access control lists (ACLs) and route maps applied on the aggregated logical interface or port channel.

QoS can selectively drop the low priority traffic streams to allow high priority traffic to pass through. QoS manages traffic delivery using queues, buffers, and schedulers for maximum throughput.

QoS supports eight queues per egress port on a device. The highest queue priority is q7 and q0 is the lowest queue priority.

The configured QoS can be used in policy configuration and rule matches. For more information, see [Create an Ingress Policy for a Device](#) on page 113.

Add a QoS

Procedure

1. In the navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > QoS > Add QoS**.
4. In the **Name** field, enter a name.
5. In the **Description** field, enter the description.
6. In the **Queue** field, select the queue priority.
The highest queue priority is q7 and q0 is the lowest queue priority.
7. Select **Save**.

Change a QoS

Procedure

1. In the navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > QoS**.
4. In the QoS page, select **Edit** (✎) from the Actions column (⋮) for the QoS you want to change.
5. Follow the instructions in [Add a QoS](#) on page 134 to change the QoS parameters.
6. Select **Save**.

Delete a QoS

Procedure

1. In the navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > QoS**.
4. In the QoS page, select **Delete** (🗑) from the Actions column (⋮) for the QoS you want to delete.

Port Channels

Port channels, also called Link Aggregation Groups (LAGs), are used for load balancing traffic among ports.

Link Aggregation

Link Aggregation (LAG) bundles multiple physical Ethernet links into a single high-bandwidth port-channel for enhanced performance and redundancy.

LAG provides load balancing across physical interfaces and improves reliability. The port-channel stays operational as long as at least one physical interface within the port-channel is operational.

Link Aggregation Control Protocol

Link Aggregation Control Protocol (LACP) is an IEEE standards-based protocol that allows two partner systems to dynamically negotiate attributes of physical links between them to form logical links.

LACP enables devices to send Link Aggregation Control Protocol Data Units (LACPDU) to each other and establish link aggregation connections.

Static LAG

In static link aggregation, you can create a port-channel interface or LAG and add member interfaces manually.

In static link aggregation, Link Aggregation Control Protocol (LACP) packets are not exchanged between the partner systems. Aggregation and load-balancing of frames on static links is determined by the operational status and administrative state of the link.

Minimum Links

Minimum links define the operational state of a LAG interface. If the number of operationally up Ethernet ports are less than configured minimum links value, the LAG interface is considered operationally down. By default, minimum links value is set to 1. At least one member port must be up, for a LAG interface to be operationally up.

Create a Port Channel

Before You Begin

The MTU and egress configuration must be same on all ports prior to configuring a LAG. If the Egress configuration is different, take the following steps:

1. Remove the desired ports from the Egress they are associated with.
2. Create the LAG and add the LAG back into the appropriate Egress.

About This Task

After you create a port channel, it is available for selection when you create ingress group and egress.



Note

- The fields that are available for creating a port channel vary by the device type you are configuring.
- LACP LAG is supported for 9920.
- For SLX devices, static LAG type is selected by default.
- All configurations are reverted when a port channel deployment fails. However, a LAG is created and deleted immediately, and the events are captured in the device logs.
- (SLX only) If port channel creation fails, perform [Refresh Configuration](#) on page 99 as there is no auto-rollback support.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Port Channels**.
4. Select **Add Port Channel**.
5. (MLX only) In the **Port Channel Name** field, enter a unique name for the port channel.
6. (9920 and SLX) In the **Port Channel ID** field, enter a unique numeric ID.
No two port channels can have the same ID.
7. In the **Lag Speed** field, select the required speed for the ports that you will select in step 9.
 - **10G**
 - **25G**
 - **40G**
 - **50G**
 - **100G**
 - **400G** (only for 9920 devices in packet broker mode)

In the packet broker mode, XCO supports the discovery and configuration of 9920 devices with 400G interface line cards.

8. In the **Description** field, provide enough information to help you identify the port channel.
9. In the **Ports** field, select at least one port from the list.

The ports in the list will be of the speed that you selected in step 7. A port can be a member of only one port channel. Ports that are not in the list are either already added to another port channel or are operating at a speed that is different from the selection in step 7.

10. (SLX and 9920 only) In the **MTU** field, enter the maximum transmission unit for packets that pass through the ports in the channel.
(SLX prior to 18s.0.1g) If the Port Speed is configured as auto, but not connected, the Port Speed must be updated manually to refresh the list of ports.
11. (MLX only) In the **Primary Port** field, select one of the member ports.
12. In the **Minimum Link** field, select or enter the minimum number of interfaces that the port channel requires to be active.
13. (9920 only) In the **Load Balance Algorithm** field, select a load-balancing method or select **None**.
 - **src-dst-ip-l4-port** (5 tuple): The source and destination IP Layer 4 ports method is the default load-balancing method.
 - **src-dst-ip-l4-port-tid** (6 tuple): The source and destination IP Layer 4 ports method with tunnel ID.

Proceed to the next step to select LAG hash masking options as required. Else, go to Step 15.

14. (9920 only) Select the required **Masking Options**:
 - **Source IP**
 - **Destination IP**
 - **Source Port**
 - **Destination Port**
 - **IP Protocol**
 - **Tunnel ID (src-dst-ip-l4-port-tid only)**



Note

- Selecting all masking options results in an invalid configuration.
- If all masking options are selected, the device applies the default load balancing algorithm, **src-dst-ip-l4-port**.
- You can select a maximum of four masking options for **src-dst-ip-l4-port** and a maximum of five masking options for **src-dst-ip-l4-port-tid**.

15. Select **Enable** to change the port channel admin status to Up.

When you select this field, you initiate the **no shutdown** command on the device, which changes the admin and operating status. When the field is not selected, the **shutdown** command runs on the port channel and the admin status changes to Down.

16. Select the **Lag Type**.

- **STATIC**
- **LACP**

17. (MLX and SLX only) Select **Loopback** to configure the port channel as a loopback interface.

A loopback is a virtual interface that a device uses to communicate with itself. A loopback interface cannot be used as an egress interface.

18. Select **Save**.

Change a Port Channel

You can change the parameters of a port channel.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Port Channels**.
The list of port channels is displayed.
4. Select **Edit** (✎) from the **Actions** column for the object you want to change.
5. Follow the steps in [Create a Port Channel](#) on page 135 to change the channel parameters.
Few of the parameters are read-only and cannot be changed.

Delete a Port Channel

You can delete a port channel from a device.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (⋮) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Port Channels**.
The list of port channels is displayed.
4. Select **Delete** (🗑) from the **Actions** column for the for the object that you want to delete.

Ports

XCO supports port or port-channel configurations.

Edit Port Properties

You can change several port properties, including description, port speed, MTU, Forward Error Correction (FEC), port breakout, header stripping, Link Fault Signaling (LFS), admin state.

About This Task

To edit multiple ports, see [Bulk Edit Ports](#) on page 140.



Note

(SLX only) If the port you are configuring is part of a port channel, do not change the **MTU** or the **Port Speed** values from the ExtremeCloud Orchestrator interface.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Ports**.
The list of ports is displayed.
4. In the Actions column, select **Edit** for the port you want to configure.
5. In the **Description** field, provide new information.
6. In the **Port Speed** field, select a different speed.

- **10G**
- **25G**
- **40G**
- **50G**
- **100G**
- **400G** (only for 9920 devices in packet broker mode)



Note

Port speed change is not supported for 400G ports.

- In the packet broker mode, XCO supports the discovery and configuration of 9920 devices with 400G interface line cards.
- (SLX only) To enable the **Breakout** option for SLX devices, proceed to the next step. Else, go to step 9.

Breakout is not supported for 400G ports.

7. Select **Save**.
The updated list of ports is displayed.
8. In the Actions column, select **Edit** for the updated port.
9. In the **MTU** field, enter the maximum transmission unit for packets that pass through the port.
10. (MLX and SLX only) In the **Headers** field, select one or more types of header to strip.
(SLX only) Dynamic update of VNTAG to BR802 is not supported in a single request from XCO.
11. In the **Breakout** field, select one of the following:
 - **4x10G**: Configures four 10G breakout interfaces on the port.
 - **4x25G**: Configures four 25G breakout interfaces on the port.
 - **None**



Note

(SLX prior to 18s.0.1g) Ports with auto speed configured and not connected, cannot have speed reconciled. Without the speed reconciliation, ports are not listed in the port-channel and are not allowed to breakout or un-breakout.

12. (SLX and 9920 only) In the **Forward Error Correction** (FEC) field, select one of the following:

- **Auto-negotiation:** Selects the appropriate algorithm automatically.
- **FC-FEC:** An algorithm that corrects errors in a block of data, with lower latency than RS-FEC.
- **RS-FEC:** An algorithm that corrects errors in a block of data, with better error correction than FC-FEC.
- **Disabled:** Disables the FEC feature.

FEC corrects errors in data without the need for retransmission of the data. Port speed determines which FEC configuration is supported.

- For 100G ports, RS-FEC, Auto-negotiation, and Disabled are supported.
- For 25G ports, RS-FEC, FC-FEC, Auto-negotiation, and Disabled are supported.
- For 40G and 10G ports, only Disabled is supported.



Note

FEC can be updated only when the port is in shutdown state.

13. (9920 only) To enable communication between two Ethernet devices, select **Link Fault Signaling** (LFS).

Link Fault Signaling is a physical layer protocol that enables a port to report fault conditions on inbound and outbound ports.

14. Select **Enable** to change the port admin status to Up.

When you select this field, you initiate the **no shutdown** command on the device, which changes the admin status to Up. When the field is not selected, the **shutdown** command runs on the port and the admin status changes to Down.

15. (MLX only) Select the required **Port Type**.

- **INGRESS**
- **EGRESS**
- **SERVICE**

16. (MLX and SLX only) Select **Loopback** to configure the port as a loopback interface.

A loopback is a virtual interface that a device uses to communicate with itself. A loopback interface cannot be used as an egress interface.

17. Select **Save**.

Bulk Edit Ports

Before You Begin

During bulk port operations, change the [Pagination](#) on page 20 to cover more ports on the page as only the ports listed on the current page are updated.

About This Task

XCO 3.5.0 and later releases support multiple or bulk port edits.

Procedure

1. In the Navigation menu, select **Device Inventory**.

2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Ports**.
The list of ports is displayed.
4. Select the check boxes for the ports you want to edit.
5. Select **Edit** from the ports table menu (⋮).
6. Take the following steps to edit the selected ports configuration.
 - a. (SLX and 9920 only) In the **Forward Error Correction (FEC)** field, select one of the following:
 - **Auto-negotiation**: Selects the appropriate algorithm automatically.
 - **FC-FEC**: An algorithm that corrects errors in a block of data, with lower latency than RS-FEC.
 - **RS-FEC**: An algorithm that corrects errors in a block of data, with better error correction than FC-FEC.
 - **Disabled**: Disables the FEC feature.

FEC corrects errors in data without the need for retransmission of the data. Port speed determines which FEC configuration is supported.

- For 100G ports, RS-FEC, Auto-negotiation, and Disabled are supported.
- For 25G ports, RS-FEC, FC-FEC, Auto-negotiation, and Disabled are supported.
- For 40G and 10G ports, only Disabled is supported.
- (9920 only) Though you can select an FEC value for 400G during bulk port edit, it fails eventually as FEC value change is not supported for 400G.

**Note**

FEC can be updated only when the port is in shutdown state.

- b. (9920 only) To enable communication between two Ethernet devices, select **Link Fault Signaling (LFS)**.
Link Fault Signaling is a physical layer protocol that enables a port to report fault conditions on inbound and outbound ports.
 - c. Select **Enable** to change the port admin status to Up.
When you select this field, you initiate the **no shutdown** command on the device, which changes the admin status to Up. When the field is not selected, the **shutdown** command runs on the port and the admin status changes to Down.
7. Select **Save**.
A notification is displayed to show the status of the edited ports.

Truncation Profile

A truncation profile is used for packet slicing in SLX devices. A maximum of four truncation profiles are supported for a device.

Create a Truncation Profile for an SLX Device

About This Task



Note

When a port is configured for truncation, it becomes a loopback port. When the truncation profile is deleted, the loopback mode is removed.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (☰) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Truncation Profile > Add Truncation Profile**.
4. In the **Profile Name** field, enter a name for the truncation profile.
5. In the **Frame Size** field, enter a value to represent the maximum packet size after truncation.
The frame size must be a multiple of 16 and valid range is 64 to 9216.
6. In the **Ethernet Interface** field, select the interface or in the **Port Channels** field, select the port-channel as appropriate.
7. Select **Save**.

Change a Truncation Profile


Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (☰) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Truncation Profile**.
The list of truncation profiles is displayed.
4. Select **Edit** (✎) from the **Actions** column for the truncation profile that you want to change.
5. Complete the fields as described in [Create a Truncation Profile for an SLX Device](#) on page 142.
6. Save your changes.

Delete a Truncation Profile

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (☰) to proceed to the device Overview page.

3. In the Device Config menu, select **Policies and Configuration > Truncation Profile**. The list of truncation profiles is displayed.
4. Select **Delete** () from the **Actions** column for the truncation profile you want to delete.

TACACS+ Authentication

Terminal Access Controller Access-Control System Plus (TACACS+) is an external authentication server used for verifying user credentials. For more information, see [TACACS+ Settings](#) on page 166.


Configure TACACS+ Authentication for Device Access

For support of the TACACS+ servers you have configured, you must enable TACACS+ authentication.

About This Task

The default authentication value for Extreme 9920, SLX, and MLX devices is always local, so you explicitly change the authentication to TACACS+ when you add a TACACS+ server.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column () to proceed to the device Overview page.
3. In the Devices Config menu, select **Policies and Configuration > Authentication**.
4. To change authentication from local to TACACS+ on the device, take the following steps.
 - a. In the Actions column, select **Edit**.
 - b. In the **Authentication Type** field, select **TACACS+**.
 - c. Select **Save**.
5. To change authentication from TACACS+ to local, take the following steps.
 - a. In the Actions column, select **Edit**.
 - b. In the **Authentication Type** field, select **Local**.
 - c. Select **Save**.

Slots


You can view and update the configuration of the slots for a selected MLX device.

Change MLX Slot Configuration

About This Task

All available slots are displayed in the XCO user interface in the **Policies and Configuration** page of the device detail view. For a selected packet processor of the selected slot, you can change the configuration for header stripping, packet slicing, and packet length match.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. In the Device Config menu, select **Policies and Configuration > Slots**.
4. Select **Edit** () from the Actions column (•••) for the slot you want to update. The right side of the page displays the current configuration for each processor in the device. You can add, edit, or delete one or more actions for each processor.

Parts Details (Packet Broker Mode)

You can view and download the device inventory.

SLX Optical Statistics

XCO supports optical statistics for SLX devices.

XCO collects the device inventory and channel media information during device discovery and stores it in the database. The device inventory information is refreshed every 15 minutes. XCO uses the `show media` and `show interface status` commands to construct the media optical information.

Related Topics

[View Device Inventory](#) on page 144

View Device Inventory

About This Task

Device details are displayed in cards by information type, which varies by the device you select. Different devices provide different information. Device details can include some or all of the following:

- Chassis, including type and serial number
- Line card, including name and up time
- Health, including system up-time and BIOS version
- Thermal, including sensor name and current temperature
- Fan, including status and speed
- PSU, including name and status
- LED, including name and state
- Media/optical levels, including TX Power and RX Power
- Port, including slot number and admin status

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.

3. Select the **Parts Details** tab.

The lists of details vary by device. The following is an example.

← MLXe_247_QA Device Actions

- Overview
- Policies and Configuration
- Parts Details**
- Monitor/Troubleshoot

Chassis Information	
Name	MLXe 8-slot
Last Updated	25 Aug, 2022 16:28
Type	MLXe 8-slot
Serial Number	BGB2522L005
Part Number	40-1000362-04
Firmware Revision	6.3.00bd

Line Card Information	
^ Linecard-1	
Name	Linecard-1
Last Updated	25 Aug, 2022 16:28
Type	BR-MLX-10Gx20 20-port 1/10GbE
Status	CARD_STATE_UP
Serial Number	-
Part Number	-

Fan Information	
^ Fan Unit-A-1	
Name	Fan Unit-A-1
Last Updated	25 Aug, 2022 16:28
Status	OK
Speed	LOW (50%)
v Fan Unit-A-2	
v Fan Unit-B-1	

PSU Information	
^ PS Unit-1	
Name	PS Unit-1
Last Updated	25 Aug, 2022 16:28
Type	-
Status	not present
v PS Unit-2	
v PS Unit-3	

Port Information	
------------------	--

© 2022 Extreme Networks Inc. [About](#) [Terms](#) [Privacy Policy](#) ExtremeCloud™ Orchestrator


Download Device Inventory

You can download the channel media information along with device inventory to a spreadsheet.

About This Task

To download multiple or bulk device inventory, see [Download Bulk Device Inventory](#) on page 93.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. Select the **Parts Details** tab.
4. In the upper left corner of the page, select  **Download Inventory**.
A file in .xlsx format is downloaded to your device.

Monitor/Troubleshoot (Packet Broker Mode)

Capturing Support Save logs is key to successful troubleshooting.

For more information, see [Support Save](#) on page 24.

Troubleshoot Configuration

Use the **Monitor/Troubleshoot** page to select a device configuration and view the statistics in the service chain.

About This Task


For any selected device, you can view the members of the related ingress and egress groups. You can also view the configuration of the related ingress policy, such as the protocol, the source IP address, and the Ethernet type.

Real-time statistics, such as packet flow and bit rate, can help you troubleshoot device issues. These statistics are available when you drill down to the Troubleshoot Configuration by Ingress Group page.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the **Devices** page, click anywhere in the required device row except the Actions column (•••) to proceed to the device Overview page.
3. Select the **Monitor/Troubleshoot** tab.


The Troubleshoot Configuration by Ingress Group page displays a list of ingress groups and their related ingress policies and egress groups.

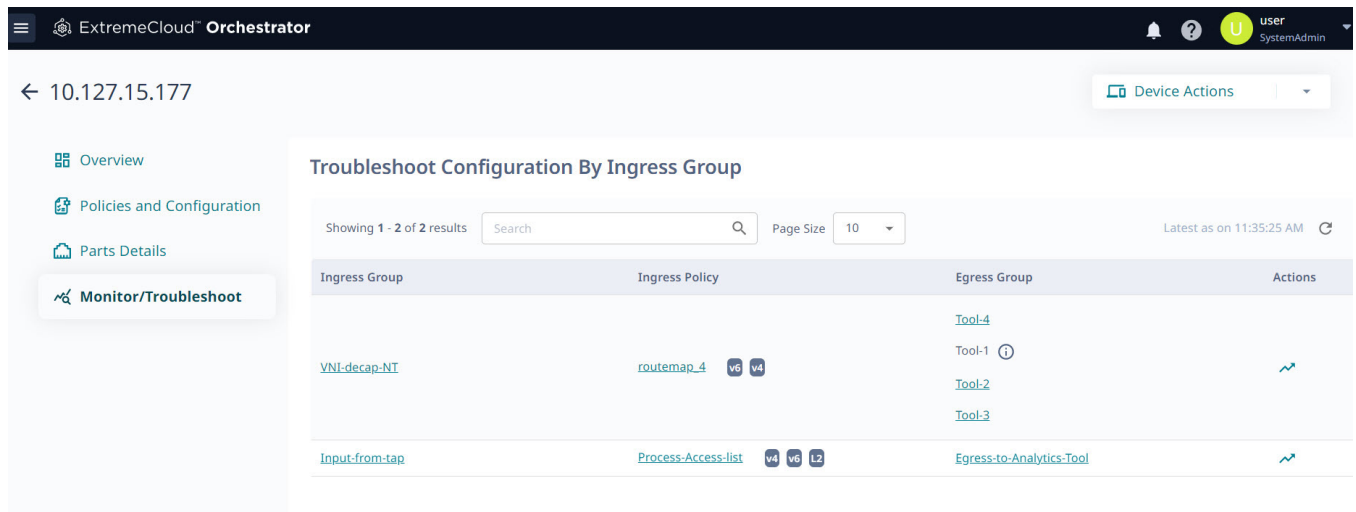


The list of ingress policies shows the related protocol and layer.

4. To view details of an ingress group, such as its members, select the name of the group.

The Details pane is displayed at the bottom of the page.

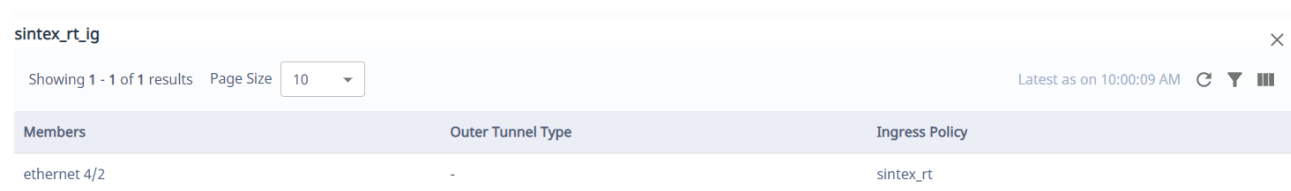


You can refresh the pane, filter for specific content, and add or remove columns. Use the filtering functions at the upper right of the pane. 

- To view details of a policy, such as its sequence number, select the name of the policy.

Use the filtering functions at the upper right of the Details pane to change the contents of the pane.

sintex_rt.ig > sintex_rt


Showing 1 - 3 of 3 results Page Size 10 Latest as on 10:01:10 AM 

Seq.#	IPv4 Match	IPv6 Match	L2 Match	UDA Match	Deny	Egress Group
56	-	-	sintex_l2	-	-	101 - vlan
57	-	sintex_v6	-	-	true	101 - vlan
65535	sintex_v4	-	-	-	-	101 - vlan



- To view the details of a egress group, such as its egresses, select the name of the group.

Use the filtering functions at the upper right of the Details pane to change the contents of the pane.





sintex_rt.ig > sintex_rt > 101 - vlan

Showing 1 - 2 of 2 results Page Size 10 Latest as on 10:01:46 AM 

Egresses	Members	Egress Policy
egress_vlan_101_e_2_4	ethernet 2/4	-
egress_vlan_101_e_4_5	ethernet 4/5	-

- To view the configuration of an ingress group, select the Troubleshoot () icon for the group from the Actions column ().

The Troubleshoot Configuration by Ingress Group page opens.

-  Overview
-  Policies and Configuration
-  Parts Details
-  Monitor/Troubleshoot

← Troubleshoot Configuration By Ingress Group

Ingress Interfaces:

ethernet 1/6:1


Policy Matches:


1_forward-any: #1 1_decide-filter-forward: #1

1_fwd-any: #1

Egress Interfaces:

7_Output-to-Tool1: #ethernet 2/2:3

 View Statistics

 Clear Stats

Ingress Group

▲ Input-from-tap 1 Ports/Port Channels

Members

ethernet 1/6:1

Ingress Policy

▲ Process-Access-list 1 ipv4 | 1 ipv6 | 1 I2

▲ 1 1 ipv4 | 1 ipv6 | 1 I2

The page displays expandable lists of ingress groups, ingress policies, and egress groups.

- a. To display configuration details, select one or more items in the expandable lists

The details are displayed at the top of the page. In the image, you can see selected interfaces and a matching policy.

- b. To view real-time statistics, select one or more configuration items and then select **View Statistics**.

A new page opens to display 3 panels of statistics, the contents of which vary depending on the configuration items you chose.

The screenshot shows a window titled "Troubleshoot Configuration By Ingress Group" with three main panels, each with a "Reset Counters" button and a table of statistics.

Ingress Group (PolicyUDA_Jg):

Name	Octets	Broadca...	Multicas...	Packets
1/5	0/0	0/0	0/0	0/0
1/6	55651640/51	0/0	412237/412	412237/412

Ingress Policy (PolicyUDA):

Match	Type	Bits Rate	Packets ...
xyz	uda	-	-
xyz	uda	2160	2

Egress Group (Egress Group - 10):

Name	Octets	Broadca...	Multicas...	Packets
1/20	0/0	0/0	0/0	0/0

You can select **Reset Counters** to refresh the statistics.

You can add or remove columns and you can switch to a chart format. Use the functions at the upper right of each panel.

- c. To clear statistics selections, select **Clear Stats**.

Upgrade Firmware

You can download and upgrade the firmware on multiple devices.

For information about deploying XCO, see the [ExtremeCloud Orchestrator Deployment Guide, 3.6.0](#).

Register Firmware Host

Procedure

1. In the Navigation menu, select **Device Inventory**.
The **Devices** window opens.
2. Select **Settings > Firmware Hosts > Register Host**.
The **Register Host** window opens.
3. In the **Host IP address** field, provide the IPv4 or IPv6 address of the firmware host sever.
If a firmware host server has both IPv4 and IPv6 addresses, each IP address is treated as an independent entry.

4. In the **Protocol** field, select one or more options from the available protocols.
 - Packet Broker Mode:
 - SCP
 - TFTP
 - Fabric Mode:
 - FTP
 - SFTP
 - SCP
5. In the **Username** field, provide a name.
6. In the **Password** field, provide the password.
7. Select **Register Host**.



View Registered Firmware Hosts

Procedure

1. On the Navigation menu, select **Device Inventory**.
The **Devices** window opens.
2. Select **Settings > Firmware Hosts**.
The list of registered hosts opens.



Change a Firmware Host

Procedure

1. In the Navigation menu, select **Device Inventory > Settings > Firmware Hosts**.
The list of registered firmware hosts opens.
2. Select **Edit** () from the **Actions** column () for the firmware host IP address you want to edit.
3. Complete the fields as described in [Register Firmware Host](#) on page 148.

Delete a Firmware Host

Procedure

1. In the Navigation menu, select **Device Inventory > Settings > Firmware Hosts**.
The list of registered firmware hosts is displayed.
2. Select **Delete** () from the Actions column () for the host IP address you want to delete.

Upgrade Firmware (Device Level)

Before You Begin

- Register firmware host. For more information, see [Register Firmware Host](#) on page 148.
- When you upgrade to a new firmware image on SLX and Extreme 9920 products, the previous image is moved to the secondary location, and the previous secondary image is moved to the temporary location until the new image is committed.

Extreme 9920 devices overwrite the firmware in the specified location and may not have a secondary image available.

- If Extreme 9920 microservices do not come up within 25 minutes after the firmware upgrade, the image rollbacks automatically.
- If any of the Extreme 9920 microservices do not come up after image rollback, the device is set to **Degraded** state.
- The **Device Inventory** page supports parallel firmware download requests for any set of devices. However, the parallel firmware download processes on the **Device Inventory** page might lead to traffic loss. Use caution when you select devices on the **Device Inventory** page for firmware download.

About This Task

For SLX devices, XCO extracts the target firmware version file name from the directory name.

Example:

```
/root/slxos18s.1.03/slxos18s.1.03a  
Target firmware version: 18s.1.03a
```

Example:

Absolute path to the binary file for Extreme 9920 devices:

```
/root/NPB-21.1.2.0-NPB.bin
```

For MLX devices, the target firmware version file name is extracted from the manifest file name.

Example:

```
XMR-MLX/MLX06300bc_Manifest.txt
Target firmware version 6.3.00bc
```



Note

- As a best practice, do not change the target firmware version file name and the directory name.

Table 13: Supported protocol

Device Type	Protocol
Extreme 9920	SCP
SLX Network Packet Broker (NPB)	SCP
SLX fabric	SCP, SFTP, FTP
MLX	TFTP

Procedure

1. In the Navigation menu, select **Device Inventory**.

The screenshot shows the 'Devices' page in the interface. At the top left is a back arrow and the text 'Devices'. On the top right are buttons for '+ Add Devices' and 'Settings'. Below these are two summary cards: 'Devices by Health' showing 21 total devices, all healthy; and 'Devices by Types' showing a pie chart with 8 BR-SLX9140, 6 BR-SLX9240, 2 BR-SLX9540, and 5 Others. Below the cards is a table with columns: IP Address, Status, Name, Model, Type, MAC Address, Location, Firmware Version, Added on, and Actions. The table shows two devices: 10.20.246.30 (SLX, FABRIC) and 10.20.246.2 (NH-2, FABRIC). At the bottom right of the table are icons for refresh, download, and filter.

2. In the Devices page, select **Upgrade Firmware** from the Actions column (⋮) for the device you want to upgrade.

Alternatively, click anywhere in the device row except the Actions column to proceed to the Device Overview page and select **Upgrade Firmware** from the Device Actions menu.

Upgrade Device Firmware ? ×

All fields marked with an asterisk (*) are required.

Host *

10.31.2.101

Absolute Path *

/buildsjc/sre/fusion/Nightly/raphael/slxos20.4.3a/LATES

Provide absolute path where the firmware bundle is stored

Firmware Upgrade Options

Download

Download the firmware and prepare the device for firmware upgrade.

Activate

Activate firmware for which the device is already prepared for.

Download and Activate

Download the firmware, prepare the device and activate the firmware upgrade.

Auto Commit ⓘ

Selected Devices (6)

Showing 1 - 6 of 6 results

IP Address	Role	Firmware	Model
10.20.246.2	Spine	20.4.2slxo...	-
10.20.246.4	BorderLeaf	20.5.2slxo...	-

Cancel
Upgrade Firmware

3. In the **Host** field, provide the IPv4 or IPv6 address of the firmware host server.
4. In the **Absolute Path** field, provide the firmware file path.
5. Select **Download and Activate**.
6. Select **Upgrade Firmware**.

7. Select **Confirm** when prompted to confirm firmware upgrade of the selected devices.

The screenshot displays the 'Devices' page in the GUI. At the top, there are navigation links for '← Devices', '+ Add Devices', and 'Settings'. Below this, there are two summary cards: 'Devices by Health' showing 21 Total and 21 Healthy devices, and 'Devices by Types' showing a pie chart with 8 BR-SLX9140, 6 BR-SLX9240, 2 BR-SLX9540, and 5 Others. Below the cards is a search bar and filters for 'Group By' (None) and 'Page Size' (10). The main table lists devices with columns for IP Address, Status, Name, Model, Type, MAC Address, Location, Firmware Version, Added on, and Actions. Two devices are visible in the table.

IP Address	Status	Name	Model	Type	MAC Address	Location	Firmware Version	Added on	Actions
10.20.246.30	Healthy	SLX	SLX9740-80C	FABRIC	00:04:96:b8:49:91	default		Mar 23, 2023 5:50:4	...
10.20.246.2	Healthy	NH-2	SLX9250-32C	FABRIC	f4:6e:95:a0:c8:05	default	20.4.3slxos20.4.3a_230218_1918	Mar 23, 2023 6:15:!	...

To change maintenance mode settings of a device, see [Device Settings \(Fabric Mode\)](#) on page 94.

The devices are upgraded to the downloaded firmware version. Refresh the page to view the updated list.

Related Topics

- [Register Firmware Host](#) on page 148
- [View Registered Firmware Hosts](#) on page 149
- [Change a Firmware Host](#) on page 149
- [Delete a Firmware Host](#) on page 149
- [Rollback Upgrade \(Packet Broker Mode\)](#) on page 153

Rollback Upgrade (Packet Broker Mode)

About This Task

XCO does not support firmware rollback for SLX and MLX devices.

Procedure

1. In the Navigation menu, select **Device Inventory**.
2. In the Devices page, select **Rollback Upgrade** from the **Actions** column (⋮) for the device you want to roll back to the previous version.



Users

[Role Based Access Control](#) on page 155

[User Roles](#) on page 155

[Authentication Tokens](#) on page 156

[Local](#) on page 156

[Host](#) on page 159

[User Settings](#) on page 160

[Change Password](#) on page 169

[Logout](#) on page 169

The **Users** page allows you to configure the preferred authentication method for validating users.

The screenshot displays the 'User Management' page in the ExtremeCloud Orchestrator GUI. The top navigation bar shows 'ExtremeCloud Orchestrator' and a user profile for 'SystemAdmin'. Below the navigation bar, the 'User Management' section is active, with tabs for 'LOCAL', 'HOST', 'LDAP', and 'TACACS+'. The 'LOCAL' tab is selected. The main content area shows a list of users with the following details:

Role	Username	Full Name
private1	Test15Admin	Test15Admin
shared	SharedAdmin	SharedAdmin
private	Private TenantAdmin	Private TenantAdmin

The interface also includes a search bar, a 'Group By' dropdown set to 'None', a 'Page Size' dropdown set to '10', and a 'Latest as on 10:19:54 AM' timestamp. The footer contains copyright information for 2023 Extreme Networks Inc. and the ExtremeCloud Orchestrator logo.

XCO supports the following methods to manage and authenticate users:

- External LDAP server
- External TACACS+ server
- Local DB user
- Unix authentication on the host where XCO is installed

XCO supports predefined role management for LDAP and TACACS+. You can map the LDAP and TACACS+ specific roles with the predefined XCO roles.

For more information, see:

- [LDAP Settings](#) on page 161
- [TACACS+ Settings](#) on page 166

Role Based Access Control

XCO supports Role Based Access Control (RBAC). RBAC defines the capabilities that a user account has based on the assigned role. A role defines the access privileges of the user accounts.

XCO validates user privileges based on the assigned role:

- Custom roles are not supported. For information on supported roles, see [User Roles](#) on page 155.
- User-defined role management is supported for LDAP and TACACS+. For more information, see [LDAP Settings](#) on page 161 and [TACACS+ Settings](#) on page 166.

User Roles

A user is associated with one role. The user name and role of the logged-in user are displayed in the title bar.

Table 14: User role definitions

Role	Functions
SystemAdmin	Users with this role have complete privileges to perform all operations in the system. Note: The default host user who installs the XCO application has this role. You cannot edit or delete the host user.
NetworkOperator	Local users with this role have read-only privileges to all operations in the system. These users can change their own account password.
Fabric Mode Only:	
FabricAdmin	Users with this role have privileges to perform fabric management, device management, and location management operations.
TenantAdmin	Users with this role have read-only privileges to all operations in the system.
SecurityAdmin	Users with this role have privileges to perform user management operations.
SystemDebugger	Users with this role have privileges to perform system debug operations.

Authentication Tokens

Authentication tokens that are generated when a user logs in to XCO are stored in memory and validated for token authentication and authorization.

The token is cleared under the following conditions:

- User role modification
- User deletion
- User blocking
- User logout
- Session expiration
- Token expiration

If a user token is cleared during an active user session, the user is prompted to log in again.

Local

You can use the **Local** page to create and manage local users.

Add User

Only a user with the SystemAdmin role can add a local user.

About This Task

When the first local user is added, XCO automatically adds the **LOCAL Auth** type to the authentication preference settings in the following situations:

- **LOCAL auth** preference does not exist
- Authentication preference settings limit of five entries is not exceeded

Procedure

1. In the Navigation menu, select **Users**.
2. Select **+ Add User**.
3. In the **User Name** field, enter the user's user name.
4. In the **User Role** field, select the required user roles.
 - **NetworkOperator**
 - **SystemAdmin**
 - Fabric mode only:
 - **FabricAdmin**
 - **SecurityAdmin**
 - **SystemDebugger**
 - **TenantAdmin** (created dynamically per tenant)

XCO supports multiple role mapping for all users. For more information, see [User Roles](#) on page 155.

5. In the **New Password** and **Confirm New Password** fields, enter the new password for the user.
6. In the **Email-id** field, enter the user's email address.
Special characters specified by RFC-5322 are supported in the email field.
7. (Optional) Complete the other fields as required.
8. Select **Add**.
The new user is added to the **LOCAL** users page. Refresh the page to view the updated list.

Related Topics

- [Edit User](#) on page 157
- [Block User](#) on page 157
- [Unblock User](#) on page 158
- [Request Reset Password](#) on page 158
- [Change Password on First Login](#) on page 158
- [Delete User](#) on page 159

Edit User


Before You Begin

Only a user with the role of SystemAdmin can change the role of another local user.

About This Task

To change the role of an LDAP or TACACS+ user, change the role on the remote server using the appropriate method.

Procedure

1. In the Navigation menu, select **Users > LOCAL**.
2. Select  for the relevant user.
3. Select **Edit User**.
4. In the **User Type** field, select **NetworkOperator** or **SystemAdmin**.
For more information, see [User Roles](#) on page 155.
5. Save your changes.


Block User

Before You Begin

Only a user with the SystemAdmin role can block or unblock a local user.

Procedure

1. In the Navigation menu, select **Users**.
2. Select the **Local** tab.


3. Select  for the relevant user.
4. Select **Block User** to block the user.

Unblock User

Before You Begin

Only a user with the SystemAdmin role can block or unblock a local user.

Procedure


1. In the Navigation menu, select **Users**.
2. Select the **Local** tab.
3. Select  for the blocked user.
4. Select **Unblock User** to unblock the user.

Request Reset Password

Before You Begin

- Only a user with the SystemAdmin role can reset the password of local users.
- Automated mail service for sharing the user password is not available.
- Password complexity check is not available.
- Local user passwords do not expire.

Procedure

1. In the Navigation menu, select **Users**.
 2. Select  for the relevant user.
 3. Select **Reset Password**.
- The **Password Reset** window opens.
4. Enter the new password for the user.
 5. Confirm the password.
 6. Select **Save**.

The user is prompted to change the password on first login after password reset.

Change Password on First Login

About This Task

You are prompted to change the password on first login.

Procedure

1. In the **New Password** field, enter the password.
2. In the **Confirm Password** field, enter the password again.
3. Select **Change Password**.

The password is changed and you are logged out of the user interface.

What to Do Next


Log in to the user interface using the new password.

Delete User

About This Task

Only a user with the role of SystemAdmin can delete a local user.

Procedure

1. In the Navigation menu, select **Users > LOCAL**.
2. Select  for the relevant user.
3. Select **Delete User**.

Host

When XCO is deployed, the user who installs the application is configured as SystemAdmin with complete access and permissions.

Host user authentication is configured as the default authentication method.

Change Host User Role

The default host user who installs ExtremeCloud Orchestrator is automatically added to the host users role mapping page. You cannot edit or delete the default host user.

Procedure

1. In the Navigation menu, select **Users**.
2. Select **+ Add Host**.
3. From the **User Name** drop-down menu, select the required host user.
4. In the **User Type** drop-down menu, select the required user type:
 - **NetworkOperator**
 - **SystemAdmin**
 - Fabric mode only:
 - **FabricAdmin**
 - **SecurityAdmin**
 - **SystemDebugger**
 - **TenantAdmin** (created dynamically per tenant)
5. Select **Save**.

User Settings

The **User Settings** page in the XCO user interface allows you to configure the LDAP and TACACS+ authentication settings and change the authentication level priority for the available authentication methods.

In the Navigation menu, select **Users > Settings** to access the **User Settings** page. You can access **User Settings** from all pages on User Management.

For more information, see [Authentication Settings](#) on page 160.

Authentication Settings

You can change the user authentication level priority among TACACS+, LDAP, Local, and HOST servers.

About This Task


XCO supports a maximum of five authentication settings. Host is the default authentication setting.

If a configured authentication level priority server is unreachable, failover to the next server occurs. If all servers decline to authenticate the user, the other configured authentication methods are attempted in the authentication order, and eventually the user is denied.

Procedure

1. In the Navigation menu, select **Users > Settings**.

- In the **Authentication Settings** page, drag and drop the required server settings to reorder the authentication level priority.

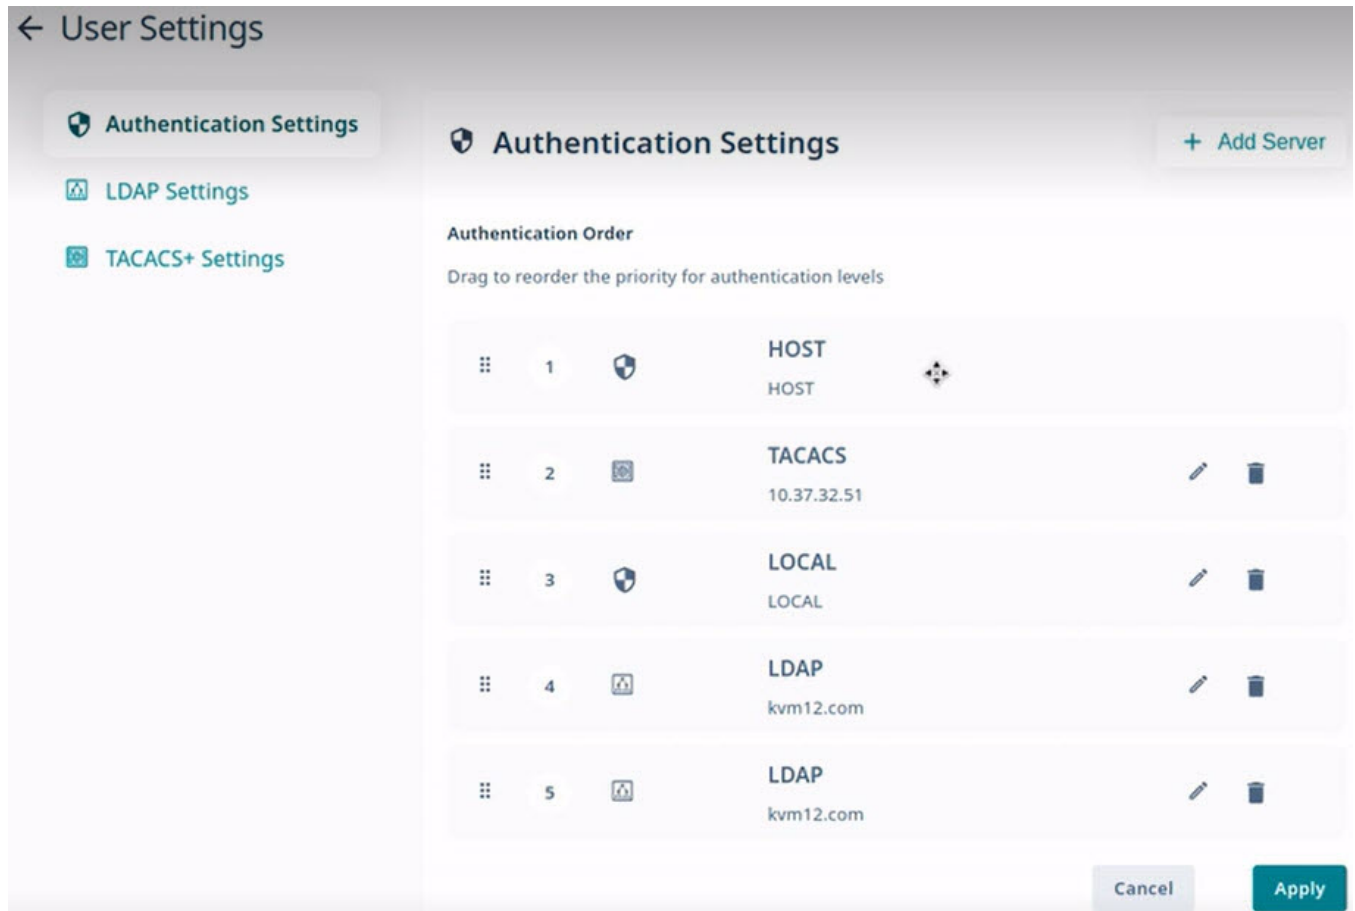

- Select **Apply** to save the changes.
- To add a server to the existing authentication settings, select **Add Server**.
- Select an authentication level and then select **Apply**.

LDAP Settings

XCO supports Lightweight Directory Access Protocol (LDAP). The **Settings** page in the user interface allows viewing and managing of LDAP server configurations.

LDAP is an open-source protocol used for centralized authentication through directory service. If the configured LDAP servers decline to authorize the user, the other authentication methods are attempted in the order they are configured.

Active Directory (AD) is a directory service that supports a number of standardized protocols such as LDAP, Kerberos authentication, and Domain Name Server (DNS), to provide various network services. AD uses a structured data store as the basis for a logical, hierarchical organization of directory information. AD includes user profiles and groups as part of directory information, so it can be used as a centralized database for authenticating third-party resources.

XCO supports the following LDAP methods to authenticate users:

- The user role is included directly as an attribute in the user definition entry.
- The user has the `memberOf` entry or any appropriate group definition attribute to identify the groups assigned.
- The user entries are present in the LDAP group definition.
- If the user entry is not present or not mapped to the correct predefined role in XCO, the user login fails. For more information, see [Map an LDAP User Role](#) on page 165.



Note

If LDAP group definition methods are used for user authentication, the corresponding LDAP group must be mapped to an user role in XCO.

- XCO supports up to five auth preferences and LDAP servers can be added accordingly. If any LDAP server addition fails due to auth preference limit, delete the unnecessary auth preference and add a new LDAP config.
- The LDAP configuration name must be unique for configuring the authentication policy.

Add LDAP Server

You can add LDAP connection details so that LDAP users can sign in to the XCO user interface.

About This Task

When a new LDAP server is added, XCO automatically adds it to the authentication preference settings if the authentication preference limit of five entries is not exceeded.

Procedure

1. In the Navigation menu, select **Users**.

3. In the **Name** field, enter a name for the LDAP server.
The name can contain up to 32 alphanumeric characters without spaces.
4. (Optional) If multiple LDAP servers are available, proceed to the next step. Else, go to step 6.
5. In the **Host** field, enter the host name, IPv4, or IPv6 address of the LDAP server.
6. (Optional) In the **Port** field, enter the TCP port used for authentication.
7. (Optional) In the **CA Certificate** field, enter the CA certificate location.
Select the CA certificate to use when validating the server certificate that the LDAP server sends. The CA certificate must be issued by the same CA that issued and signed the server certificate for the LDAP server.
8. In the **Timeout(Secs)** field, enter the timeout value in seconds.
The default timeout value is 5 seconds.
9. (Optional) In the **Bind User Name** field, enter the LDAP server user name.
The Bind User Name is used for authenticating the LDAP server when initiating a connection.
10. (Optional) In the **Bind User Password** field, enter the password for the LDAP server.
The Bind User Password is used for authenticating the LDAP server when initiating a connection.
11. In the Advanced section, complete the following fields as required:
 - **User Search Base:** Specifies the name of the node from which to start searching for users.
 - (Optional) **User Object Class:** Specifies the name of the user object class. The default value is `inetOrgPerson`.
 - (Optional) **User Login Attribute:** Specifies the login username attribute. The default value is `uid`.
 - (Optional) **User Role Attribute:** Specifies the user role attribute.
 - (Optional) **User Role Attribute Key:** Specifies key to the user role attribute.
 - (Optional) **User Member Attribute:** Specifies the member attribute of the user.
 - (Optional) **Group Search Base:** Specifies the name of the node from which to start searching for groups.
 - (Optional) **Group Object Class:** Specifies the name of the group object class. The default value is `groupOfNames`.
 - (Optional) **Group Attribute:** Specifies the group attribute. The default value is `cn`.
 - (Optional) **Group Member User Attribute:** Specifies the group member user attribute. The default value is `entrydn`.
 - (Optional) **Group Member Mapping Attribute:** Specifies the group member mapping attribute. The default value is `member`.
 - (Optional) **TLS check box:** Enables LDAP over SSL/TLS
 - (Optional) **Insecure-TLS check box:** Enables LDAP without certificate verification
12. Select **Test Connection and Save** to save your selections.
The **Authentication Settings** page displays the new configuration.

What to Do Next

[Map an LDAP User Role](#) on page 165

Map an LDAP User Role

You can map a local LDAP role to one of the pre-defined XCO roles.

About This Task

The LDAP server name is used as `auth-identifier` for mapping a LDAP user role.

Procedure

1. In the Navigation menu, select **Users**.
2. Select **Settings > LDAP Settings**.
3. Select an LDAP server.
4. Select **Map User Roles**.

Create/Update LDAP Server ? ×

Settings **Map User Roles**

Select the appropriate user roles to map XCO and LDAP + Add Role

LDAP User Roles			XCO User Roles	
GROUP ▾	cn=viewer,dc=e...	↔	NetworkOperator	🗑️
USER ▾	IdapAdmin	↔	SystemAdmin ▾	🗑️
GROUP ▾	cn=viewer,1dc=...	↔	SystemAdmin ▾	🗑️

Cancel Apply

5. Select the required **LDAP User Roles**.
 - **GROUP**
 - **USER**
6. Select the required **XCO User Roles** to map the local LDAP role.
7. Select **Apply**.

The LDAP server page displays the new mapping.

TACACS+ Settings

Terminal Access Controller Access-Control System Plus (TACACS+) is an external authentication server used for verifying user credentials.

The TACACS+ protocols support environments that are configured for authentication, authorization, and accounting (AAA) services. When TACACS+ is configured through the XCO interface, TACACS+ users can log in to the XCO interface.

XCO supports TACACS+ authentication in the following ways.

- XCO supports up to five auth preferences and TACACS+ servers can be added accordingly. If any TACACS+ server addition fails due to auth preference limit, delete the unnecessary auth preference and add a new TACACS+ config.
- The user roles specified in the TACACS+ server configuration can be one of the following.
 - One of the supported XCO roles: NetworkOperator and SystemAdmin. For more information, see [User Roles](#) on page 155.
 - A local TACACS+ role that you can map to XCO. For more information, see [Map a TACACS+ User Role](#) on page 168.
 - The `xco-role` attribute must be included in the TACACS+ configuration file.
 - If the `xco-role` attribute is not present or not mapped to the correct predefined role in ExtremeCloud Orchestrator, the user login fails.
- TACACS+ authentication must be enabled. If TACACS+ authentication is not enabled, only local authentication is used.
- If remote authentication fails, XCO attempts to use local authentication, which is successful only if the user is in the XCO database.
- The secret key configured for XCO must be the same as the secret key from the TACACS+ server configuration file. Authentication fails if the two values do not match.
- XCO supports two TACACS+ authentication protocols.
 - **CHAP**: Challenge Handshake Authentication Protocol
 - **PAP**: Password Authentication Protocol

Add TACACS+ Server

You can add TACACS+ connection details so that TACACS+ users can sign in to the XCO interface.

About This Task

When a new TACACS+ server is added, XCO automatically adds it to the authentication preference settings if the authentication preference limit of five entries is not exceeded.

Procedure

1. In the Navigation menu, select **Users**.

2. Select **Settings > TACACS+ Settings > Add TACACS+ Server**.

Alternatively, you can select **TACACS+ > Connect TACACS+** to configure the first TACACS+ server.

Create/Update TACACS+ Server ? X

Settings Map User Roles

All fields marked with an asterisk (*) are required.

Host *

10.37.32.51

Port (Optional)

49

Secret Key *

.....

Protocol (Optional)

CHAP

Cancel Test Connection & Save

3. In the **Host** field, enter the IPv4 or IPv6 address of the TACACS+ server, in CIDR format.
4. In the **Port** field, enter the TCP port used for authentication.
The default authentication port is 49.
5. In the **Secret Key** field, enter the shared secret that enables messages between the client and the TACACS+ server.
The value you enter must match the shared secret in the TACACS+ server configuration file.
6. In the **Protocol** field, select one of the following authentication protocols.
 - **CHAP**: Challenge Handshake Authentication Protocol
 - **PAP**: Password Authentication Protocol
7. Select **Test Connection and Save** to save your selections.
The Settings page displays the new configuration.

What to Do Next

[Map a TACACS+ User Role](#) on page 168

Map a TACACS+ User Role

You can map a local TACACS+ role to one of the pre-defined XCO roles.

About This Task

The TACACS+ server `host` is used as `auth-identifier` for mapping a TACACS+ user role.

Procedure

1. In the Navigation menu, select **Users**.
2. Select **Settings > TACACS+ Settings**.
3. Select a TACACS+ server.
4. Select **Map User Roles**.

The screenshot shows a dialog box titled "Create/Update TACACS+ Server" with a "Map User Roles" tab selected. The dialog contains a table for mapping TACACS+ User Roles to XCO User Roles. The table has two columns: "TACACS+ User Roles" and "XCO User Roles". The first row shows "tacuser66" mapped to "NetworkOperator". The second row shows "tacAdmin" mapped to "SystemAdmin". There are "Add Role" and "Cancel" buttons, and an "Apply" button at the bottom right.

TACACS+ User Roles	XCO User Roles
tacuser66	NetworkOperator
tacAdmin	SystemAdmin

5. Select the required **TACACS+ User Roles**.
6. Select the required **XCO User Roles** to map the local TACACS+ role.
7. Select **Apply**.

The TACACS+ server page displays the new mapping.

Change a Server Configuration

You can change the configuration of a LDAP or TACACS+ server for accessing the XCO interface.

Procedure

1. In the Navigation menu, select **Users**.

2. Select **Settings > LDAP Settings** or **Settings > TACACS+ Settings** as required.
Alternatively, you can select **LDAP** or **TACACS+** tab.
3. Select **Edit** for the server configuration that you want to change.
4. Update the server configuration as required.
5. Save your selections.
6. Select **Apply**.

The Authentication Settings page displays the changed configuration.

Delete a Server Configuration

You can delete the configured LDAP and TACACS+ host servers.

Procedure

1. In the Navigation menu, select **Users**.
2. Select the **TACACS+** or **LDAP** tab.
3. Select **Delete** for the server configuration that you want to delete.
Alternatively, you can delete the LDAP and TACACS+ server configurations from **Users > Settings > Authentication Settings** .

Change Password

Logged-in users can change their own passwords.

Procedure

1. From the User Profile menu, select **Change Password**.
2. Update the password.

Logout

Procedure

From the User Profile menu, select **Logout**.



Logs

[System Logs](#) on page 170

[User Logs](#) on page 171

The XCO user interface enables viewing of System logs and User logs. The System logs persist for two hours, and User logs persist for a week.

Exporting System logs and User logs is not supported in XCO.

System Logs

System logs describe the status of monitored devices.

About This Task

System logs are based on RASLog notifications. The system logs are stored for a duration of two hours.

Procedure

1. In the Navigation menu, select **Logs > System**.

The system logs provide the following information:

- Hostname
- IP address
- Severity
- Message
- Date

← Logs

System




User

System Logs

Showing 1 - 10 of 10100 results Latest as on 7:50:05 PM

Hostname	Ip Address	Severity	Message	Date
NH-2	10.20.246.2	INFO	logout desc=Event Nameadmin desc=User	2023-03-30 19:43:59
NH-2	10.20.246.2	INFO	logout desc=Event Nameadmin desc=User	2023-03-30 19:43:59
NH-2	10.20.246.2	INFO	logout desc=Event Nameadmin desc=User	2023-03-30 19:43:59
NH-2	10.20.246.2	INFO	logout desc=Event Nameadmin desc=User	2023-03-30 19:43:59

2. Use the **Search** bar to look up a system log.

3. Use the refresh icon  to reload the system logs.
4. Use the filter option  to view the system logs by **Severity** or **Message**.
 - a. In the **System Logs** widget, select .
 - b. Select a system log value between **Severity** or **Message**, and then enter the filter value.
 - c. Select **Add Filter** to include more filter options, or **Apply Filter** to view the system logs based on your previous selection.

User Logs

You can view user logs to understand the transactions that a user has performed.

About This Task

XCO offers several types of logs related to user transactions: Device, Device Config, and User Login. These logs provide the following information.

Procedure

1. In the Navigation menu, select **Logs > User**.
2. To view user transactions on devices, select **Device**.

The device logs provide the following information:

Table 15: User device logs

Log Type	Description
Device	Device add or delete transactions: <ul style="list-style-type: none"> • User name • Action, such as delete or discover a device • IP address • Location • Status, such as success or failed • Error message to explain a failure • Date

3. To view user transactions related to configuration, select **Device Config**.

The device config logs provide the following information:

Table 16: User device config logs

Log Type	Description
Device Config	Device configuration transactions: <ul style="list-style-type: none"> • User name • Action, such as add, update, clearing counters, packet capture, or delete a configuration • IP address • Location • Status, such as success or failed • Error message to explain a failure • Date

4. To view user transactions related to logging in, select **User Login**.

The user login logs provide the following information:

Table 17: User login logs

Log Type	Description
User Login	User login and logout transactions: <ul style="list-style-type: none"> • User name • Action, such as log in or log out • User role • Log in time • Whether the action was successful

← Logs

System

User

Device Device Config **User Login**

Showing 1 - 10 of 173 results Search Latest as on 7:50:15 PM

User	Action	Role	Status	Date
root	UserLogin	SystemAdmin	Success	Mar 30, 2023 2:34:17 PM
root	UserLogout	SystemAdmin	Success	Mar 30, 2023 2:16:25 PM
root	UserLogin	SystemAdmin	Success	Mar 30, 2023 11:12:55 AM
root	UserLogin	SystemAdmin	Success	Mar 30, 2023 10:51:43 AM

Library (Packet Broker Mode)

[Matches](#) on page 173

[Policies](#) on page 178

[UDA](#) on page 180

The **Library** provides access to policy rule matches, policies, and user-defined ACL (UDA) profiles (for SLX and MLX devices only).

Use the **Library** page to create, edit, export, clone, or delete policy rule matches, policies, and UDA profiles.

The screenshot shows the ExtremeCloud Orchestrator interface. The top navigation bar includes the logo, 'ExtremeCloud™ Orchestrator', and user information 'user SystemAdmin'. The left sidebar has a 'Library' header and three menu items: 'Matches' (selected), 'Policies', and 'UDA'. The main content area is titled 'Matches' and features a '+ Add Match' and 'Delete Match' button. Below this is a search bar and filters for 'Group By' (set to 'None') and 'Page Size' (set to '10'). The table displays 10 matches with columns for Match Name, Device Type, Rule Type, Rules, Devices, and Actions. A watermark 'MUI X Missing license key' is visible over the table.

<input type="checkbox"/>	Match Name	Device Type	Rule Type	Rules	Devices	Actions
<input type="checkbox"/>	ipv6_acl	SLX	ipv6	1	1	
<input type="checkbox"/>	ipv4_acl	SLX	ipv4	1	1	
<input type="checkbox"/>	I2_acl	SLX	I2	1	1	
<input type="checkbox"/>	v6_upf_p01_bi_n3	SLX	ipv6	2	1	
<input type="checkbox"/>	mac_Base-Func-IT-8	9900	I2	12	1	
<input type="checkbox"/>	test_allow_ip_all	9900	ipv4	1	1	
<input type="checkbox"/>	burst_ipv4_acl	9900	ipv4	3	1	
<input type="checkbox"/>	ipv6_Base-Func-IT-1	9900	ipv6	13	1	
<input type="checkbox"/>	ip_Base-Func-IT-4	9900	ipv4	2	1	
<input type="checkbox"/>	mac_Base-Func-IT-4	9900	I2	11	1	

Matches

A policy rule match identifies the parts of a packet header that a rule targets, such as the source port or the payload length. On the Matches page, you can see matches and their associated device type, rule type, and number of rules. The page provides access to creating, exporting, cloning, editing, and deleting match-related functions.

Create a Policy Rule Match in the Library

Policy rule matches in the library can be imported to a device.

About This Task

To create a policy rule match for a specific device, see [Create a Policy Rule Match for a Device](#) on page 116.

Procedure

1. In the Navigation menu, select **Library > Matches > Add Match**.
2. In the **Name** field, enter a unique name for the match.
 - Alphanumeric characters, dashes, and underscores are allowed in the **Name** field.
 - The name, `all` is a reserved keyword on 9920 and cannot be used.
3. In the **Device Type** field, select the required device type.
 - **9900**
 - **MLX**
 - **SLX**
4. In the **Type** field, select whether the match applies to IPv4, IPv6, L2, or UDA.
If you selected UDA on an SLX device, proceed to the next step. Else, go to step 7.
5. In the **Sub Type** field, select the appropriate match.
 - **Standard**: Matches the source address information
 - **Extended**: Matches the source and destination address information
6. In the **UDA** field, select a profile.
7. In the Match section, complete the following fields to identify the packets of interest.



Note

All fields are not mandatory. You can leave the fields blank unless noted.

The items that you can select vary by your selection in the **Protocol** field. The following describes all possible selections.

- **Protocol**: The protocol that you want to target. If the protocol you want is not in the list, select **None** and provide the ID of the protocol you want in the **Protocol ID** field. Every protocol has a numeric value that is defined by IETF.
- **Sequence**: The order in which this rule is performed in the match.
- **Protocol ID**: The ID of a protocol that you want to target. Use only when the protocol you want is not available in the **Protocol** field.
- **Source IP**: The IPv4 or IPv6 address of the device that sends the packets.
- **Source Mask**: The mask for the source IP address, in the following format: 255.255.255.255.
- **Destination IP**: The IPv4 or IPv6 address of the device that is to receive the packets.
- **Destination Mask**: The mask for the destination IP address, in the following format: 255.255.255.255.

- **Source Mac:** The MAC address of the device that sends the packets, in the following format: 1111.1111.1111 or 11:11:11:11:11:11. Any alpha characters in the address must be lowercase.
- **Source Mac Mask:** The mask for the source MAC address, in the following format: ffff.ffff.ffff or ff:ff:ff:ff:ff:ff. Any alpha characters in the mask must be lowercase.
- **Destination Mac:** The MAC address of the device that is to receive the packets, in the following format: 1111.1111.1111 or 11:11:11:11:11:11. Any alpha characters in the address must be lowercase.
- **Destination Mac Mask:** The mask for the destination MAC address, in the following format: ffff.ffff.ffff or ff:ff:ff:ff:ff:ff. Any alpha characters in the mask must be lowercase.
- **Source Port:** The port through which packets enter the device.
- **Source Port End:** The last port in the range of ports through which packets enter the device.
- **Destination Port:** The port through which packets leave the device. Valid values range from 1 through 65535.
- **Destination Port End:** The last port in the range of ports through which packets leave the device. Valid values range from 1 through 65535.
- **IP Payload Length:** The length of the IP packets that you want to target, or the size of the IP payload. Valid values range from 64 through 9000.
- **IP Payload Length End:** The last acceptable value of the IP payload. Valid values range from 65 through 9000.
- **DSCP:** The value of the Differentiated Services Code Point in the Type of Service field in the header. Valid values range from 0 through 63.
- **VLAN:** The VLAN ID. Valid values range from 0 through 4095.
- **EtherType:** Identifies the protocol that is encapsulated in the payload. For example, the EtherType value for IPv4 is 0x0800. Valid values range from 1536 through 65536 (numerical), or 0x0600 through 0xffff (hexadecimal), or are one of the following: ARP, IPv4, or IPv6.
- **PCP:** The Priority Code Point, a 3-bit field in a VLAN header. Valid values range from 0 through 7.
- **Tunnel ID:** The ID number of the tunnel. Valid values range from 1 through 16777215.
- **MATCH0, MATCH1, MATCH2, MATCH3:** Specifies the UDA Hexadecimal. SLX presents these as specific header fields such as NEXT_HEADER.



Note

- MLX UDA requires a match and mask for all fields.
 - Use a mask of all zeros to make the any value for a field.
- **MASK0, MASK1, MASK2, MASK3:** Specifies the UDA Hexadecimal value used to mask the MATCH values. Use 0 bits for any value. A bit value of 1 must be matched.

8. In the Fragmentation section, select one or more of the following.
The items in this section vary by your selection in the **Type**, **Sub Type** and **Protocol** fields. The following list describes all possible selections.
 - **Fragmented**: Targets target fragmented packets.
 - **Non Fragmented**: Targets non-fragmented packets.
 - **None**: Targets packets in which the DF (Don't Fragment) flag is set in the IP header.
9. In the Options sub-section, select one or more of the following:
The items in this section vary by your selection in the **Type**, **Sub Type** and **Protocol** fields, in particular selection of a Layer4 protocol such as UDP, TCP, or STCP. The following list describes all possible selections.
 - **Acknowledgment**: Targets packets in which the ACK flag is set in the TCP header.
 - **Congestion**: Targets packets in which the CWR flag is set in the TCP header.
 - **ECN-Echo**: Targets packets in which the ECE flag is set in the TCP header.
 - **Last Packet**: Targets packets in which the FIN flag is set in the TCP header.
 - **Push**: Targets packets in which the PSH flag is set in the TCP header.
 - **Reset**: Targets packets in which the RST flag is set in the TCP header.
 - **Synchronize**: Targets packets in which the SYN flag is set in the TCP header.
 - **Urgent**: Targets packets in which the URG flag is set in the TCP header.
10. In the Action section, select one or more actions to perform on the targeted items.
The items in this section vary by your selection in the **Protocol** field. The following list describes all possible selections.
 - **Drop** to deny packets.
 - **Count** to keep track of the number of packets that match the policy rule
 - **Log** to add the transaction to the log.
 - **Hard Drop** to drop packets.
 - **Bi Directional** to cover traffic in both directions (source to destination and destination to source) in a single rule.
11. Select **Add**.
The match parameters (the new rule) appear in the pane on the right.
12. Repeat steps 7 through 11 until you have added all the rules you need.
13. Select **Save**.

Change a Policy Rule Match in the Library



You can add, change, or delete one or more rules in a policy rule match.

About This Task

To change a policy rule match for a specific device, see [Create a Policy Rule Match for a Device](#) on page 116.

Procedure

1. In the Navigation menu, select **Library > Matches**.

2. Select **Edit** () from the Actions column () for the policy rule match that you want to change.
3. Follow the instructions in [Create a Policy Rule Match in the Library](#) on page 174 to add, change, or remove rules from the match.
A new match is created with the updated configuration.

Export a Policy Rule Match from the Library

From the library, you can export a policy rule match to selected devices.

About This Task


You can export a rule match created either in the library or reconciled from another device to a set of devices.



Note

The rule matches can be exported to devices of the matching device type only.
For example: 9920 to 9920 or SLX to SLX.


Procedure

1. In the Navigation menu, select **Library > Matches**.
2. In the Matches page, select match that you want to export.
3. In the Actions column, select **Export** ().
4. Select the devices to which you want to export the selected match.
5. Select **Export**.

Clone a Policy Rule Match

From the library, you can clone (copy) a policy rule match to create a new match with the same or similar configuration.

Procedure

1. In the Navigation menu, select **Library > Matches**.
2. In the Actions column, select **Clone** () for the match that you want to copy.
3. In the **Name** field, provide a new name for the cloned match.
4. Select **Save**.

Delete a Policy Rule Match from the Library

You can delete a policy rule match from the library.



Before You Begin

You cannot delete a match that is attached to any device.

About This Task

To delete a policy rule match from a specific device, see [Delete a Policy Rule Match from a Device](#) on page 119.

Procedure

1. In the Navigation menu, select **Library > Matches**.
2. Select one or more matches to delete.
3. Select **Delete** () from the Actions column () for the match you want to delete.

Policies

Ingress and egress policies define the actions to apply to inbound and outbound packets. On the Policies page, you can see policies and their associated device type, policy type, and number of rules. The page provides access to policy-related functions such as creating, exporting, cloning and deleting. For more information, see [Policies](#) on page 111.

Create a Policy in the Library

About This Task

Policies in the library can be exported to one or more devices. For more information, see [Export a Policy](#) on page 179.

Procedure

1. In the Navigation menu, select **Library > Policies > Add Policy**.
2. Follow the instructions in [Create an Egress Policy for a Device](#) on page 112 or [Create an Ingress Policy for a Device](#) on page 113.


Change a Policy in the Library

You can add, change, or delete one or more rules or actions in a policy.

About This Task

You can change a policy for a specific device or change a policy in the library.

Procedure

1. In the Navigation menu, select **Library > Policies**.
2. In the Policies page, select the policy that you want to change.
3. In the Actions column, select **Edit** ().
4. Follow the instructions in [Create an Ingress Policy for a Device](#) on page 113 or [Create an Egress Policy for a Device](#) on page 112 to add, change, or remove rules or actions in the policy.



Tip

To reinstate a rule that is not included in the policy (the **Deny** field is selected), clear the **Deny** field.

Export a Policy

From the library, you can export a policy to selected devices.

About This Task


You can export a policy created either in the library or reconciled from another device to a set of devices.



Note

The policies can be exported to same device type devices only. For example: 9920 to 9920 or SLX to SLX.

Procedure

1. In the Navigation menu, select **Library > Policies**.
2. In the Policies page, select the policy that you want to export.
3. In the Actions column, select **Export** ().
4. Select the devices to which you want to export the selected policy.
5. Select **Export**.


Clone a Policy

From the library, you can clone (copy) a policy to create a new policy with the same or similar configuration.

About This Task

After cloning a policy, the policy can be exported to the same device type devices only. For more information, see [Export a Policy](#) on page 179.

Procedure

1. In the Navigation menu, select **Library > Policies**.
2. In the Library menu, select the policy that you want to copy.
3. In the Actions column, select **Clone** ().
4. In the **Name** field, provide a new name for the cloned policy.
5. Follow the instructions in [Create an Ingress Policy for a Device](#) on page 113 or [Create an Egress Policy for a Device](#) on page 112 to add, change, or remove rules from the policy.
6. Save your selections.

Delete a Policy in the Library



You can delete a policy from a device or from a library.

Before You Begin

- If a policy is associated with a device, it cannot be deleted from the library. Follow the instructions in [Delete a Policy from a Device](#) on page 116 to delete the policy from any associated device.

- Remove the policy from any associated ingress group. For more information, see [Change an Ingress Group](#) on page 125.

Procedure

1. In the Navigation menu, select **Library > Policies**.
2. In the Actions column, select **Delete** () for the policy you want to delete.
3. To delete multiple policies, select the check boxes of the policies you want to delete.
4. Select **Delete Policy** ().

UDA

UDA is a set of rules defined to filter the network traffic. Packets are forwarded or dropped based on criteria specified in UDA.

XCO supports the following UDA configurations:

- UDA Match
- UDA Profile

A complete MLX or SLX UDA consists of a UDA profile and a UDA match.

In Extreme 9920, packets that regular ACLs cannot filter, require filtering based on deep packet inspection or a combination of MAC and IP fields. UDAs, also known as Flex ACLs provide deeper and flexible filtering.

Create an MLX UDA Profile in the Library

For MLX devices, you can create a UDA profile in the library or device inventory.

About This Task

To create an MLX UDA profile for a specific device, see [Create an MLX UDA Profile for a Device](#) on page 120.

Procedure

1. In the Navigation menu, select **Library > UDA > Add UDA Profile**.
2. In the **Name** field, enter a unique name for the UDA profile.
3. In the **Device Type** field, select **MLX**.
4. In the four **Offset** fields, select the appropriate offset values.
 - The offset value must be a multiple of 4 between 0 and 124.
 - An offset indicates the index of the received packet. For example, an offset of 0 indicates the first byte of the received packet.
5. Save your selections.

Create an SLX UDA Profile in the Library

A UDA profile can be associated with a UDA match.

About This Task

To create an SLX UDA profile for a specific device, see [Create an SLX UDA Profile for a Device](#) on page 120.

Procedure

1. In the Navigation menu, select **Library > UDA > Add UDA Profile**.
2. In the **Name** field, enter a unique name for the UDA profile.
3. In the **Device Type** field, select **SLX**.
4. Define the header fields that are required for a match.

The header fields you select constitute the header stack. As you select header types and header fields, additional header selections become available. The additional selections vary based on your header choices.

- a. In the **Header 0 Ethernet - Ethernet** row, select the field that is required for a match and then click **+** to add your selection.
 - b. In the **Header 1** row, select the type and field that are required for a match and then click **+** to add your selection.
Your selections determine whether a Header 2 row is displayed.
 - c. Make selections in the Header 2 row and in all subsequent rows until no more rows are available or until your header stack is complete.
A maximum of 4 Headers are supported in a UDA profile.
5. Save your selections.


Change a UDA Profile in the Library

You can change the parameters of UDA profile.

About This Task

To change a UDA profile for a specific device, see [Change a UDA Profile for a Device](#) on page 121.

Procedure

1. In the Navigation menu, select **Library > UDA**.
2. In the UDA Profile page, select **Edit** () from the Actions column (**⋮**) for the UDA Profile that you want to change.
3. Follow the instructions for the type of UDA you are changing.
 - [Create an MLX UDA Profile in the Library](#) on page 180
 - [Create an SLX UDA Profile in the Library](#) on page 181

Delete a UDA Profile in the Library

You can delete a user-defined access list (UDA) profile from the library or device inventory page.



About This Task

To delete UDA profile from a specific device, see [Delete a UDA Profile from a Device](#) on page 121.

Before You Begin

You cannot delete a UDA profile that is attached to any device, match, or ingress-group.



Procedure

1. In the Navigation menu, select **Library > UDA**.
2. In the Actions column, select **Delete** () for the UDA profile you want to delete.
3. To delete multiple UDA profiles, select the check boxes of the UDA profiles you want to delete.
4. Select **Delete Profile** ().

Export a UDA Profile

You can clone (copy) a user-defined access list (UDA) profile to create a new profile with the same or similar configuration.

Procedure

1. In the Navigation menu, select **Library > UDA**.
2. In the UDA Profiles page, select **Export** () from the Actions column () for the profile that you want to export.
3. In the Devices list, select the devices to which you want to export the configuration.
4. Select **Export**.

The configuration is exported to the destination devices.



FAQs

Where are Visibility skill logs located?

Debug logs: `/var/log/efa/evm/evm-server.log`

Error logs (with panic trace): `/var/log/efa/evm/evm-server_err.log`

Where are the Inventory Service logs located?

Debug logs: `/var/log/efa/inventory/inventory-server.log`

Error logs (with panic trace): `/var/log/efa/inventory/inventory-server_err.log`

Where are the Installer logs located?

`/var/log/efa/installer/<installer_.....log>`

All installation failures are reported in this log.

What are some common reasons for installation failures?

- The operating system version is incorrect.
- The amount of available hard disk space is insufficient. At least 50 GB should be available.
- In a multi-node installation, the operating system and clock do not match. Or, both nodes have the same host name.

Why does the web user interface not load on the browser?

The most probable reason is that TCP port 443 is blocked through a firewall. Unblocking this port should enable the UI to be loaded.

What are some common reasons for XCO log-in failures?

- The user credentials are entered incorrectly.
- TACACS+ or LDAP is not reachable or not configured correctly for the `xco-role`.
- The `xco-role` in TACACS+ or LDAP is not mapped to a predefined role such as NetworkOperator or SystemAdmin.

Where are authentication failures captured?

Debug logs: `/var/log/efa/auth/auth-server.log`

Error logs (with panic trace): `/var/log/efa/auth/auth-server_err.log`

What are possible reasons for device registration failures?

- The device is not reachable from ExtremeCloud Orchestrator.
- The device credentials are incorrect.
- The HTTPS, SSH, NETCONF, or GNMI ports are blocked.
- The device versions are not supported.
- The device has exceeded the maximum limit on SSH connections. Free up some existing connections that are used by other tools and try to register again.

Why is there a delay in loading the dashboard or statistics in the web UI?

It can take from 20 seconds to 1 minute to load live statistics from a device.

Why is the device configuration blocked from the web UI?

The device can have missed a heartbeat and subsequently transitioned to a degraded state. The device should be accessible when connectivity is restored.

What are possible reasons for configuration failures?

- The XCO user does not have permission to make changes to the device.
- The web UI reports validation errors or errors received from the device.
- The credentials used for device registration do not have permission to make changes to the device.

How do I check that all services are up and running?

Run the following command on the XCO device:

```
k3s kubectl get pods -n efa
```

The following is sample output.

NAME	READY	STATUS	RESTARTS	AGE
efa-api-docs-84cwl	1/1	Running	0	20d
ui-service-54dbbb47fd-vzfrw	1/1	Running	0	20d
gosystem-service-dw4vj	1/1	Running	0	20d
rabbitmq-4tgsv	1/1	Running	0	20d
gorbac-service-j6lp8	1/1	Running	0	20d
goevm-service-sjckq	1/1	Running	0	20d
gonotification-service-grvx9	1/1	Running	0	20d
gofaultmanager-service-nstwf	1/1	Running	0	20d
goauth-service-qffvs	1/1	Running	0	20d
goraslog-service-s7mwt	1/1	Running	0	20d
goinventory-service-q5sdl	1/1	Running	0	20d

Why are the device syslogs not visible?

Other tools that are registered with the device could have exceeded the maximum limit for syslogs. Free up any stale syslog entries on the device and then re-register the device.

How to collect the SupportSave data for troubleshooting?

Run the following command on the XCO device:

```
efa system supportsave
```

The following is a sample output.

```
SupportSave File Location: /var/log/efa/efa_2022-11-17T18-40-41.008.logs.zip  
--- Time Elapsed: 21.584259642s ---
```

To collect the SupportSave data using the XCO GUI, see [Support Save](#) on page 24.