



# ExtremeCloud™ IQ Site Engine v25.11.10 Installation Guide:

**Deployment, System Requirements, and Data Migration**

11/2025  
25.11.10  
PN: 9039517-00 Rev AA  
Subject to Change Without Notice



## Abstract

The ExtremeCloud IQ Site Engine version 25.11.10 Installation Guide provides detailed technical procedures for deploying and upgrading ExtremeCloud IQ Site Engine. This installation guide outlines system requirements for server and client components, focusing on configurations for Red Hat Enterprise Linux (RHEL) and VMware virtual environments. Key tasks include configuring server, client, and network settings, and upgrading ExtremeControl and ExtremeAnalytics engines. Critical upgrade considerations such as disk space allocation, license management for both connected and air gap deployment modes, and advanced troubleshooting for post-upgrade issues are addressed. Additionally, instructions cover system backup, firewall configuration, and enabling key services such as SNMP and TFTP.

## Legal Notices

Extreme Networks, Inc., on behalf of or through its wholly-owned subsidiary, Enterasys Networks, Inc., reserves the right to make changes in specifications and other information contained in this document and its website without prior notice. The reader should in all cases consult representatives of Extreme Networks to determine whether any such changes have been made.

The hardware, firmware, software or any specifications described or referred to in this document are subject to change without notice.

## Trademarks

Extreme Networks and the Extreme Networks logo are trademarks or registered trademarks of Extreme Networks, Inc. in the United States and/or other countries.

All other names (including any product names) mentioned in this document are the property of their respective owners and may be trademarks or registered trademarks of their respective companies/owners.

For additional information on Extreme Networks trademarks, please see:

[www.extremenetworks.com/company/legal/trademarks/](http://www.extremenetworks.com/company/legal/trademarks/)

## Contact

If you require assistance, contact Extreme Networks using one of the following methods.

- [Global Technical Assistance Center \(GTAC\) for Immediate Support](#)
  - **Phone:** 1-800-998-2408 (toll-free in U.S. and Canada) or 1-603-952-5000. For the Extreme Networks support phone number in your country, visit: [www.extremenetworks.com/support/contact](http://www.extremenetworks.com/support/contact)
  - **Email:** [support@extremenetworks.com](mailto:support@extremenetworks.com). To expedite your message, enter the product name or model number in the subject line.
- [GTAC Knowledge](#) — Get on-demand and tested resolutions from the GTAC Knowledgebase, or create a help case if you need more guidance.
- [The Hub](#) — A forum for Extreme customers to connect with one another, get questions answered, share ideas and feedback, and get problems solved. This community is monitored by Extreme Networks employees, but is not intended to replace specific guidance from GTAC.
- [Support Portal](#) — Manage cases, downloads, service contracts, product licensing, and training and certifications.



## Extreme Networks® Software License Agreement

This Extreme Networks Software License Agreement is an agreement ("Agreement") between You, the end user, and Extreme Networks, Inc. ("Extreme"), on behalf of itself and its Affiliates (as hereinafter defined and including its wholly owned subsidiary, Enterasys Networks, Inc. as well as its other subsidiaries). This Agreement sets forth Your rights and obligations with respect to the Licensed Software and Licensed Materials. BY INSTALLING THE LICENSE KEY FOR THE SOFTWARE ("License Key"), COPYING, OR OTHERWISE USING THE LICENSED SOFTWARE, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS AGREEMENT, WHICH INCLUDES THE LICENSE AND THE LIMITATION OF WARRANTY AND DISCLAIMER OF LIABILITY. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, RETURN THE LICENSE KEY TO EXTREME OR YOUR DEALER, IF ANY, OR DO NOT USE THE LICENSED SOFTWARE AND CONTACT EXTREME OR YOUR DEALER WITHIN TEN (10) DAYS FOLLOWING THE DATE OF RECEIPT FOR A REFUND. IF YOU HAVE ANY QUESTIONS ABOUT THIS AGREEMENT, CONTACT EXTREME, Attn: LegalTeam@extremenetworks.com.

1. **DEFINITIONS.** "Affiliates" means any person, partnership, corporation, limited liability company, or other form of enterprise that directly or indirectly through one or more intermediaries, controls, or is controlled by, or is under common control with the party specified. "Server Application" shall refer to the License Key for software installed on one or more of Your servers. "Client Application" shall refer to the application to access the Server Application. "Licensed Materials" shall collectively refer to the licensed software (including the Server Application and Client Application), Firmware, media embodying the software, and the documentation. "Concurrent User" shall refer to any of Your individual employees who You provide access to the Server Application at any one time. "Firmware" refers to any software program or code imbedded in chips or other media. "Licensed Software" refers to the Software and Firmware collectively.
2. **TERM.** This Agreement is effective from the date on which You install the License Key, use the Licensed Software, or a Concurrent User accesses the Server Application. You may terminate the Agreement at any time by destroying the Licensed Materials, together with all copies, modifications and merged portions in any form. The Agreement and Your license to use the Licensed Materials will also terminate if You fail to comply with any term of condition herein.
3. **GRANT OF SOFTWARE LICENSE.** Extreme will grant You a non-transferable, non-exclusive license to use the machine-readable form of the Licensed Software and the accompanying documentation if You agree to the terms and conditions of this Agreement. You may install and use the Licensed Software as permitted by the license type purchased as described below in License Types. The license type purchased is specified on the invoice issued to You by Extreme or Your dealer, if any. YOU MAY NOT USE, COPY, OR MODIFY THE LICENSED MATERIALS, IN WHOLE OR IN PART, EXCEPT AS EXPRESSLY PROVIDED IN THIS AGREEMENT.
4. **LICENSE TYPES.**
  - *Single User, Single Computer.* Under the terms of the Single User, Single Computer license, the license granted to You by Extreme when You install the License Key authorizes You to use the Licensed Software on any one, single computer only, or any replacement for that computer, for internal use only. A separate license, under a separate Software License Agreement, is required for any other computer on which You or another individual or employee intend to use the Licensed Software. A

separate license under a separate Software License Agreement is also required if You wish to use a Client license (as described below).

- *Client.* Under the terms of the Client license, the license granted to You by Extreme will authorize You to install the License Key for the Licensed Software on your server and allow the specific number of Concurrent Users shown on the relevant invoice issued to You for each Concurrent User that You order from Extreme or Your dealer, if any, to access the Server Application. A separate license is required for each additional Concurrent User.

5. AUDIT RIGHTS. You agree that Extreme may audit Your use of the Licensed Materials for compliance with these terms and Your License Type at any time, upon reasonable notice. In the event that such audit reveals any use of the Licensed Materials by You other than in full compliance with the license granted and the terms of this Agreement, You shall reimburse Extreme for all reasonable expenses related to such audit in addition to any other liabilities You may incur as a result of such non-compliance, including but not limited to additional fees for Concurrent Users over and above those specifically granted to You. From time to time, the Licensed Software will upload information about the Licensed Software and the associated devices to Extreme. This is to verify the Licensed Software is being used with a valid license. By using the Licensed Software, you consent to the transmission of this information. Under no circumstances, however, would Extreme employ any such measure to interfere with your normal and permitted operation of the Products, even in the event of a contractual dispute.

6. RESTRICTION AGAINST COPYING OR MODIFYING LICENSED MATERIALS. Except as expressly permitted in this Agreement, You may not copy or otherwise reproduce the Licensed Materials. In no event does the limited copying or reproduction permitted under this Agreement include the right to decompile, disassemble, electronically transfer, or reverse engineer the Licensed Software, or to translate the Licensed Software into another computer language.

The media embodying the Licensed Software may be copied by You, in whole or in part, into printed or machine readable form, in sufficient numbers only for backup or archival purposes, or to replace a worn or defective copy. However, You agree not to have more than two (2) copies of the Licensed Software in whole or in part, including the original media, in your possession for said purposes without Extreme's prior written consent, and in no event shall You operate more copies of the Licensed Software than the specific licenses granted to You. You may not copy or reproduce the documentation. You agree to maintain appropriate records of the location of the original media and all copies of the Licensed Software, in whole or in part, made by You. You may modify the machine-readable form of the Licensed Software for (1) your own internal use or (2) to merge the Licensed Software into other program material to form a modular work for your own use, provided that such work remains modular, but on termination of this Agreement, You are required to completely remove the Licensed Software from any such modular work. Any portion of the Licensed Software included in any such modular work shall be used only on a single computer for internal purposes and shall remain subject to all the terms and conditions of this Agreement. You agree to include any copyright or other proprietary notice set forth on the label of the media embodying the Licensed Software on any copy of the Licensed Software in any form, in whole or in part, or on any modification of the Licensed Software or any such modular work containing the Licensed Software or any part thereof.

7. TITLE AND PROPRIETARY RIGHTS

- a. The Licensed Materials are copyrighted works and are the sole and exclusive property of Extreme, any company or a division thereof which Extreme controls or is controlled by, or which may result from the merger or consolidation with Extreme (its "Affiliates"), and/or their suppliers. This Agreement conveys a limited right to operate the Licensed Materials and shall not be construed to convey title to the Licensed Materials to You. There are no implied rights. You shall not sell, lease, transfer, sublicense, dispose of, or otherwise make available the Licensed Materials or any portion thereof, to any other party.
- b. You further acknowledge that in the event of a breach of this Agreement, Extreme shall suffer severe and irreparable damages for which monetary compensation alone will be inadequate. You therefore agree that in the event of a breach of this Agreement, Extreme shall be entitled to monetary damages and its reasonable attorney's fees and costs in enforcing this Agreement, as well as injunctive relief to restrain such breach, in addition to any other remedies available to Extreme.

8. PROTECTION AND SECURITY. In the performance of this Agreement or in contemplation thereof, You and your employees and agents may have access to private or confidential information owned or controlled by Extreme relating to the Licensed Materials supplied hereunder including, but not limited to, product specifications and schematics, and such information may contain proprietary details and disclosures. All information and data so acquired by You or your employees or agents under this Agreement or in contemplation hereof shall be and shall remain Extreme's exclusive property, and You shall use your best efforts (which in any event shall not be less than the efforts You take to ensure the confidentiality of your own proprietary and other confidential information) to keep, and have your employees and agents keep, any and all such information and data confidential, and shall not copy, publish, or disclose it to others, without Extreme's prior written approval, and shall return such information and data to Extreme at its request. Nothing herein shall limit your use or dissemination of information not actually derived from Extreme or of information which has been or subsequently is made public by Extreme, or a third party having authority to do so.
- You agree not to deliver or otherwise make available the Licensed Materials or any part thereof, including without limitation the object or source code (if provided) of the Licensed Software, to any party other than Extreme or its employees, except for purposes specifically related to your use of the Licensed Software on a single computer as expressly provided in this Agreement, without the prior written consent of Extreme. You agree to use your best efforts and take all reasonable steps to safeguard the Licensed Materials to ensure that no unauthorized personnel shall have access thereto and that no unauthorized copy, publication, disclosure, or distribution, in whole or in part, in any form shall be made, and You agree to notify Extreme of any unauthorized use thereof. You acknowledge that the Licensed Materials contain valuable confidential information and trade secrets, and that unauthorized use, copying and/or disclosure thereof are harmful to Extreme or its Affiliates and/or its/their software suppliers.
9. MAINTENANCE AND UPDATES. Updates and certain maintenance and support services, if any, shall be provided to You pursuant to the terms of an Extreme Service and Maintenance Agreement, if Extreme and You enter into such an agreement. Except as specifically set forth in such agreement, Extreme shall not be under any obligation to provide Software Updates, modifications, or enhancements, or Software maintenance and support services to You.
10. DEFAULT AND TERMINATION. In the event that You shall fail to keep, observe, or perform any obligation under this Agreement, including a failure to pay any sums due to Extreme, or in the event that you become insolvent or seek protection, voluntarily or involuntarily, under any bankruptcy law, Extreme may, in addition to any other remedies it may have under law, terminate the License and any other agreements between Extreme and You.
- a. Immediately after any termination of the Agreement or if You have for any reason discontinued use of Software, You shall return to Extreme the original and any copies of the Licensed Materials and remove the Licensed Software from any modular works made pursuant to Section 3, and certify in writing that through your best efforts and to the best of your knowledge the original and all copies of the terminated or discontinued Licensed Materials have been returned to Extreme.
  - b. Sections 1, 7, 8, 10, 11, 12, 13, 14 and 15 shall survive termination of this Agreement for any reason.
11. EXPORT REQUIREMENTS. You are advised that the Software is of United States origin and subject to United States Export Administration Regulations; diversion contrary to United States law and regulation is prohibited. You agree not to directly or indirectly export, import or transmit the Software to any country, end user or for any Use that is prohibited by applicable United States regulation or statute (including but not limited to those countries embargoed from time to time by the United States government); or contrary to the laws or regulations of any other governmental entity that has jurisdiction over such export, import, transmission or Use.
12. UNITED STATES GOVERNMENT RESTRICTED RIGHTS. The Licensed Materials (i) were developed solely at private expense; (ii) contain "restricted computer software" submitted with restricted rights in accordance with section 52.227-19 (a) through (d) of the Commercial Computer Software-Restricted Rights Clause and its successors, and (iii) in all respects is proprietary data belonging to Extreme and/or its suppliers. For Department of Defense units, the Licensed Materials are considered commercial computer software in accordance with DFARS section 227.7202-3 and its successors, and use, duplication, or disclosure by the U.S. Government is subject to restrictions set forth herein.

13. LIMITED WARRANTY AND LIMITATION OF LIABILITY. The only warranty that Extreme makes to You in connection with this license of the Licensed Materials is that if the media on which the Licensed Software is recorded is defective, it will be replaced without charge, if Extreme in good faith determines that the media and proof of payment of the license fee are returned to Extreme or the dealer from whom it was obtained within ninety (90) days of the date of payment of the license fee. NEITHER EXTREME NOR ITS AFFILIATES MAKE ANY OTHER WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, WITH RESPECT TO THE LICENSED MATERIALS, WHICH ARE LICENSED "AS IS". THE LIMITED WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE EXPRESSLY DISCLAIMED, AND STATEMENTS OR REPRESENTATIONS MADE BY ANY OTHER PERSON OR FIRM ARE VOID. ONLY TO THE EXTENT SUCH EXCLUSION OF ANY IMPLIED WARRANTY IS NOT PERMITTED BY LAW, THE DURATION OF SUCH IMPLIED WARRANTY IS LIMITED TO THE DURATION OF THE LIMITED WARRANTY SET FORTH ABOVE. YOU ASSUME ALL RISK AS TO THE QUALITY, FUNCTION AND PERFORMANCE OF THE LICENSED MATERIALS. IN NO EVENT WILL EXTREME OR ANY OTHER PARTY WHO HAS BEEN INVOLVED IN THE CREATION, PRODUCTION OR DELIVERY OF THE LICENSED MATERIALS BE LIABLE FOR SPECIAL, DIRECT, INDIRECT, RELIANCE, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING LOSS OF DATA OR PROFITS OR FOR INABILITY TO USE THE LICENSED MATERIALS, TO ANY PARTY EVEN IF EXTREME OR SUCH OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL EXTREME OR SUCH OTHER PARTY'S LIABILITY FOR ANY DAMAGES OR LOSS TO YOU OR ANY OTHER PARTY EXCEED THE LICENSE FEE YOU PAID FOR THE LICENSED MATERIALS.
- Some states do not allow limitations on how long an implied warranty lasts and some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to You. This limited warranty gives You specific legal rights, and You may also have other rights which vary from state to state.
14. JURISDICTION. The rights and obligations of the parties to this Agreement shall be governed and construed in accordance with the laws and in the State and Federal courts of the State of California, without regard to its rules with respect to choice of law. You waive any objections to the personal jurisdiction and venue of such courts. None of the 1980 United Nations Convention on the Limitation Period in the International Sale of Goods, and the Uniform Computer Information Transactions Act shall apply to this Agreement.
15. GENERAL.
- a. This Agreement is the entire agreement between Extreme and You regarding the Licensed Materials, and all prior agreements, representations, statements, and undertakings, oral or written, are hereby expressly superseded and canceled.
  - b. This Agreement may not be changed or amended except in writing signed by both parties hereto.
  - c. You represent that You have full right and/or authorization to enter into this Agreement.
  - d. This Agreement shall not be assignable by You without the express written consent of Extreme. The rights of Extreme and Your obligations under this Agreement shall inure to the benefit of Extreme's assignees, licensors, and licensees.
  - e. Section headings are for convenience only and shall not be considered in the interpretation of this Agreement.
  - f. The provisions of the Agreement are severable and if any one or more of the provisions hereof are judicially determined to be illegal or otherwise unenforceable, in whole or in part, the remaining provisions of this Agreement shall nevertheless be binding on and enforceable by and between the parties hereto.
  - g. Extreme's waiver of any right shall not constitute waiver of that right in future. This Agreement constitutes the entire understanding between the parties with respect to the subject matter hereof, and all prior agreements, representations, statements and undertakings, oral or written, are hereby expressly superseded and canceled. No purchase order shall supersede this Agreement.
  - h. Should You have any questions regarding this Agreement, You may contact Extreme at the address set forth below. Any notice or other communication to be sent to Extreme must be mailed by certified mail to the following address:

Extreme Networks, Inc.

145 Rio Robles  
San Jose, CA 95134 United States  
ATTN: General Counsel

---

# Table of Contents

|                                                                           |    |
|---------------------------------------------------------------------------|----|
| ExtremeCloud™ IQ Site Engine v25.11.10 Installation Guide: .....          | 1  |
| Deployment, System Requirements, and Data Migration .....                 | 1  |
| Abstract .....                                                            | 2  |
| Extreme Networks® Software License Agreement .....                        | 4  |
| Table of Contents .....                                                   | 9  |
| ExtremeCloud IQ Site Engine Suite Installation .....                      | 12 |
| General Information .....                                                 | 12 |
| Operating System Requirements .....                                       | 12 |
| ExtremeCloud IQ Site Engine Server Requirements .....                     | 12 |
| ExtremeCloud IQ Site Engine Client Requirements .....                     | 13 |
| ExtremeCloud IQ Site Engine Server and Client Hardware Requirements ..... | 13 |
| ExtremeCloud IQ Site Engine Server .....                                  | 13 |
| ExtremeCloud IQ Site Engine Client .....                                  | 14 |
| ExtremeControl Engine Version Requirements .....                          | 14 |
| Screen Resolution .....                                                   | 14 |
| ExtremeCloud IQ Site Engine Services .....                                | 14 |
| Important Upgrade Information .....                                       | 15 |
| Important Upgrade Considerations .....                                    | 17 |
| License Renewal .....                                                     | 17 |
| Free Space Consideration .....                                            | 17 |
| Site Discover Consideration .....                                         | 18 |
| ExtremeAnalytics Upgrade Information .....                                | 18 |
| ExtremeControl Version 8.0 and later .....                                | 18 |
| Other Upgrade Information .....                                           | 18 |
| Upgrading ExtremeControl Engine to Version 25.11.10 .....                 | 19 |
| General Upgrade Information .....                                         | 19 |
| LDAPS servers with FQDN .....                                             | 19 |
| Upgrading to Policy Manager 25.11.10 .....                                | 20 |
| Pre-Installation Checklist .....                                          | 20 |

---

|                                                                                |           |
|--------------------------------------------------------------------------------|-----------|
| ExtremeCloud IQ Site Engine Installation .....                                 | 20        |
| Installing ExtremeCloud IQ Site Engine .....                                   | 20        |
| Preparing for CD Installation .....                                            | 21        |
| Installation on Red Hat Enterprise Linux (RHEL) .....                          | 21        |
| Installing RHEL Operating System .....                                         | 22        |
| Register Subscription with Red Hat .....                                       | 22        |
| Configuring RHEL for ExtremeCloud IQ Site Engine .....                         | 22        |
| Installing ExtremeCloud IQ Site Engine on RHEL .....                           | 24        |
| Upgrading ExtremeCloud IQ Site Engine on RHEL .....                            | 24        |
| Known Limitations of ExtremeCloud IQ Site Engine on RHEL .....                 | 24        |
| Performing a Silent Install .....                                              | 25        |
| Select the deployment mode and licensing for ExtremeCloud IQ Site Engine ..... | 25        |
| Restoring a Database from a Windows Server to a Linux Server .....             | 25        |
| Console .....                                                                  | 26        |
| Syslog .....                                                                   | 26        |
| Traps .....                                                                    | 26        |
| Inventory Manager .....                                                        | 26        |
| Systems with Multiple NICs .....                                               | 26        |
| Binding to One Interface .....                                                 | 27        |
| Uninstalling ExtremeCloud IQ Site Engine .....                                 | 27        |
| Extreme Networks Support .....                                                 | 27        |
| <b>ExtremeCloud IQ Site Engine Licensing .....</b>                             | <b>28</b> |
| ExtremeCloud IQ Pilot Twin Subscription Provides Backwards Compatibility ..... | 30        |
| Licensing for Devices in Connected Mode .....                                  | 30        |
| Licensing for Devices in Air Gap Mode .....                                    | 32        |
| Revoke Air Gap License .....                                                   | 34        |
| License Limits and Violations .....                                            | 35        |
| Devices Marked as Unmanaged .....                                              | 36        |
| Licensing for ExtremeControl (Network Access Control) .....                    | 36        |
| After Upgrading from Extreme Management Center .....                           | 37        |
| Upon Initial Installation .....                                                | 37        |
| <b>Logging into ExtremeCloud IQ Site Engine .....</b>                          | <b>38</b> |

---

|                                                                                                    |           |
|----------------------------------------------------------------------------------------------------|-----------|
| Post upgrade from Extreme Management Center Version 8.5.5 or newer .....                           | 38        |
| Initial installation of ExtremeCloud IQ Site Engine or upgrading from Extreme Management Center .. | 38        |
| Onboarding Devices (Connected mode only) .....                                                     | 42        |
| XIQ Onboarded Status for Devices (Connected mode only) .....                                       | 42        |
| <b>Convert from Connected to Air Gap deployment .....</b>                                          | <b>45</b> |
| <b>Convert from Air Gap to Connected deployment .....</b>                                          | <b>47</b> |
| <b>MySQL to PostgreSQL Data Migration (For Upgrades from ExtremeCloud IQ Site Engine</b>           |           |
| <b>24.2 to 24.7 or up to 25.8) .....</b>                                                           | <b>49</b> |
| Migration Steps .....                                                                              | 49        |
| Notes: .....                                                                                       | 53        |
| Post-Migration Known Issues .....                                                                  | 54        |
| Migration for Hardware Appliances .....                                                            | 55        |
| Option 1 - Migrate to a Temporary ExtremeCloud IQ Site Engine then Move .....                      | 55        |
| Option 2 - Move to a Temporary ExtremeCloud IQ Site Engine then Migrate .....                      | 56        |
| <b>Data Migration to Rehost a Matched Version Instance of ExtremeCloud IQ Site Engine .....</b>    | <b>57</b> |
| Migration Steps: .....                                                                             | 57        |

# ExtremeCloud IQ Site Engine Suite Installation

A special [MySQL to PostgreSQL Data Migration \(For Upgrades from ExtremeCloud IQ Site Engine 24.2 to 24.7 or up to 25.8\)](#) is required to upgrade ExtremeCloud IQ Site Engine from versions earlier than 24.7 due to a MySQL to PostgreSQL database change. The minimum version to upgrade Analytics Engines and Access Control Engines is 24.2.13.

**IMPORTANT:** Backup the database prior to performing the upgrade and save it to a safe location. Use the **Administration > Backup/Restore** tab.

## General Information

Before you install ExtremeCloud IQ Site Engine, read the *ExtremeCloud IQ Site Engine Release Notes*. The most recent version of the release notes can be found at the [ExtremeCloud IQ Site Engine Documentation site](#). Select **Release Notes** at the top of the page.

For instructions to deploy a ExtremeCloud IQ Site Engine, ExtremeControl, or ExtremeAnalytics virtual engine on a VMware® ESXi server, a Microsoft® Hyper-V server, or a Nutanix server, see the *ExtremeCloud™ IQ Site Engine, ExtremeControl<sup>®</sup>, and ExtremeAnalytics<sup>®</sup> Virtual Engine Installation Guide*. The most recent version of the document can be found at the [ExtremeCloud IQ Site Engine Documentation site](#). Select **Installation Guide > Virtual Engine Installation Guide** at the top of the page.

**NOTE:** The terms engine, gateway, and appliance are used interchangeably throughout ExtremeCloud IQ Site Engine documentation.

## Operating System Requirements

### ExtremeCloud IQ Site Engine Server Requirements

These are the operating system requirements for the ExtremeCloud IQ Site Engine server.

| Manufacturer                                                                | Operating System                                                                                                                                              |
|-----------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Linux                                                                       | Red Hat Enterprise Linux 9.4                                                                                                                                  |
| VMware <sup>®</sup> (ExtremeCloud IQ Site Engine Virtual Engine)            | VMware ESXi™ 6.0 server<br>VMware ESXi™ 6.5 server<br>VMware ESXi™ 6.7 server<br>VMware ESXi™ 7.0 server<br>VMware ESXi™ 8.0 server<br>vSphere (client only)™ |
| Microsoft <sup>®</sup> Hyper-V (ExtremeCloud IQ Site Engine Virtual Engine) | Windows <sup>®</sup> Server 2019<br>Windows <sup>®</sup> Server 2022                                                                                          |

| Manufacturer                                         | Operating System                                            |
|------------------------------------------------------|-------------------------------------------------------------|
| Nutanix (ExtremeCloud IQ Site Engine Virtual Engine) | AHV: 20230302.101026<br>AOS: 6.8.1<br>Prism Central: 2024.2 |
| Extreme Networks                                     | Universal Compute Platform 2130C version 5.09.01            |

## ExtremeCloud IQ Site Engine Client Requirements

These are the operating system requirements for remote ExtremeCloud IQ Site Engine client machines.

| Manufacturer                                                        | Operating System             |
|---------------------------------------------------------------------|------------------------------|
| Windows (qualified on the English version of the operating systems) | Windows® 10 and 11           |
| Linux                                                               | Red Hat Enterprise Linux 9.4 |
| Mac OS X*                                                           | Monterey, Sonoma             |

## ExtremeCloud IQ Site Engine Server and Client Hardware Requirements

These are the hardware requirements for the ExtremeCloud IQ Site Engine server and ExtremeCloud IQ Site Engine client machines:

### ExtremeCloud IQ Site Engine Server

|                 | Small  | Medium | Enterprise | Large Enterprise |
|-----------------|--------|--------|------------|------------------|
| Total CPUs      | 1      | 2      | 2          | 2                |
| Total CPU Cores | 8      | 16     | 24         | 24               |
| Memory          | 16 GB  | 32 GB  | 64 GB      | 64 GB            |
| Disk Size       | 240 GB | 480 GB | 960 GB     | 1.92 TB          |
| IOPS            | 200    | 200    | 10,000     | 10,000           |

Recommended scale based on server configuration:

|                                        |       |        |                                   |                                   |
|----------------------------------------|-------|--------|-----------------------------------|-----------------------------------|
| Maximum APs                            | 250   | 2,500  | 25,000                            | 25,000                            |
| Maximum Wireless MUs                   | 2,500 | 25,000 | 100,000                           | 100,000                           |
| Maximum Managed Devices                | 100   | 1,000  | 10,000 air gap<br>8,000 connected | 10,000 air gap<br>8,000 connected |
| Maximum Concurrent Management Sessions | 5     | 15     | 50                                | 50                                |
| ExtremeControl End-Systems             | N/A   | 50,000 | 200,000                           | 200,000                           |
| Statistics Retention (Days)            | 90    | 180    | 180                               | 360                               |
| ExtremeAnalytics                       | No    | Yes    | Yes                               | Yes                               |
| MU Events                              | No    | Yes    | Yes                               | Yes                               |

---

**NOTE:** The Extreme Networks UCP 2130C provides up to Enterprise scaling capacity for an ExtremeCloud IQ Site Engine Virtual Engine deployment.

---

## ExtremeCloud IQ Site Engine Client

| Requirements                                         |                                                                |
|------------------------------------------------------|----------------------------------------------------------------|
| CPU Speed                                            | Dual Core Processor                                            |
| Memory                                               | 8 GB                                                           |
| Disk Size                                            | 300 MB (User's home directory requires 50 MB for file storage) |
| Java Runtime Environment (JRE) (Oracle Java only)    | Version 8 (for FlexView Editor / MIB Tools)                    |
| Browser <sup>1</sup> (Enable JavaScript and Cookies) | Microsoft Edge<br>Mozilla Firefox<br>Google Chrome             |

<sup>1</sup>Browsers set to a zoom ratio of less than 100% might not display ExtremeCloud IQ Site Engine properly (for example, missing borders around windows). Setting your browser to a zoom ratio of 100% corrects this issue.

## ExtremeControl Engine Version Requirements

For complete information on ExtremeControl engine version requirements, see [Important Upgrade Information](#).

## Screen Resolution

For optimum display of ExtremeCloud IQ Site Engine windows and tables, the recommended minimum screen resolution setting for ExtremeCloud IQ Site Engine clients is 1024 by 768 pixels. For optimum display of graphs and tables, the recommended minimum screen resolution setting is 1280 by 1024 pixels.

## ExtremeCloud IQ Site Engine Services

During the ExtremeCloud IQ Site Engine installation, you can enable the ExtremeCloud IQ Site Engine Services, allowing it to run in the background on the ExtremeCloud IQ Site Engine server. The service starts automatically by default, and if you shut down and restart the machine, the service is restarted automatically.

You can also restart the services manually or disable a service so it does not start automatically when you restart the server.

- **SNMPTrap Service** - Enables SNMP trap messages to be received and logged when problems or irregularities are detected on network devices. Only one trap service may be running at a time on a server. If you are also running a network management system on the server, you may wish to use the network management trap service.
- **TFTP** - Enables you to upload and download configuration files, and download firmware to devices. Only one TFTP service may be running at a time on a machine.

---

**NOTE:** The ExtremeCloud IQ Site Engine TFTP Service does not support IPv6.

Typically, the TFTP service that exists in Linux is disabled; however, if it is enabled, you may wish to disable it and enable the ExtremeCloud IQ Site Engine version of TFTP which provides additional features for ExtremeCloud IQ Site Engine. If you elect to enable the ExtremeCloud IQ Site Engine version on the Linux platform, you must first disable the Linux TFTP service and perform some configuration as follows:

1. Using a text editor, edit the file `/etc/xinetd.d/tftp`
2. Set `disable = yes`  
Sample file:  

```
service tftp
{
    flags = REUSE
    socket_type = stream
    wait = no
    user = root
    server = /usr/sbin/in.tftp
    disable = yes
}
```
3. Then run: `/etc/rc3.d/S56xinetd restart`

## Important Upgrade Information

A special [Data Migration Procedure](#) is required to upgrade ExtremeCloud IQ Site Engine from versions older than 24.07. The minimum version to upgrade Analytics Engines and Access Control Engines is 24.02.13.

**NOTE:**

ExtremeCloud IQ Site Engine Version 25.11.10 contains an OS upgrade. Internet connectivity is required to download custom packages.

The installer prompts "Do you want to use the Internet to perform the OS upgrade?". The offline upgrade path is supported when no custom packages are installed (answer N). The online upgrade is required when custom packages are manually installed (answer Y). An online upgrade is recommended when an online upgrade was used previously, however there is a risk of session timeout due to 15 minutes of screen inactivity.

To upgrade Access Control Engines and Application Analytics Engines you can use the directive `--keepalive` to decrease the chance of a session expiry timeout from 15 minutes of no screen activity.

---

| From Version (currently running)                                        | To Version (next step in upgrade path) |
|-------------------------------------------------------------------------|----------------------------------------|
| ExtremeCloud IQ Site Engine 24.07.x, 24.10.x, 25.02.x, 25.05.x, 25.08.x | ExtremeCloud IQ Site Engine 25.11      |

| From Version (currently running)                                         | To Version (next step in upgrade path)                                                                                 |
|--------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| ExtremeCloud IQ Site Engine <b>24.02.x</b>                               | Fresh installation of ExtremeCloud IQ Site Engine <b>25.08</b> and follow the <a href="#">Data Migration Procedure</a> |
| Application Analytics Engine, Access Control Engine <b>24.02.15</b>      | Application Analytics Engine, Access Control Engine <b>25.08</b>                                                       |
| ExtremeCloud IQ Site Engine <b>23.04.12, 23.07.x, 23.11.x, 24.02.x</b>   | ExtremeCloud IQ Site Engine <b>24.02.15</b>                                                                            |
| ExtremeCloud IQ Site Engine <b>21.x, 22.x, 23.2.x 23.04.10, 23.04.11</b> | ExtremeCloud IQ Site Engine <b>23.04.12</b>                                                                            |
| Extreme Management Center version <b>8.5.7</b>                           | ExtremeCloud IQ Site Engine <b>24.02.15</b>                                                                            |
| Extreme Management Center version <b>8.2.x to 8.5.6</b>                  | Extreme Management Center <b>8.5.7</b>                                                                                 |
| Extreme Management Center version <b>8.0.x to 8.1.x</b>                  | Extreme Management Center <b>8.3.3.11</b>                                                                              |
| NetSight version <b>7.1.4.1</b>                                          | Extreme Management Center <b>8.3.3.11</b>                                                                              |
| NetSight version <b>7.x</b>                                              | NetSight <b>7.1.4.1</b>                                                                                                |
| NetSight version <b>6.3.0.186</b>                                        | NetSight <b>7.1.4.1</b>                                                                                                |
| NetSight version <b>6.x</b>                                              | NetSight <b>6.3.0.186</b>                                                                                              |

**IMPORTANT:**

A backup (**Administration > [Backup/Restore](#)**) of the database must be performed prior to the upgrade and saved to a safe location.

If you use LDAPS with a Fully Qualified Domain Name (FQDN) in the URL to authorize a user to the OneView, then ExtremeCloud IQ Site Engine presents the Server Certificate (located in **Administration > Certificates > Server Certificate Information**) to the LDAPS server. If the

LDAPS server presents a certificate that does not match the LDAPS URL, then the certificate is rejected with the error “Certificate Unknown”.

The best practice is to use a trusted certificate if the LDAPS URL is defined with FQDN, otherwise the LDAPS server might not accept the LDAPS connection. The alternative option is to use an IP address in the LDAPS URL instead of FQDN.

## Important Upgrade Considerations

- If your network is using ExtremeAnalytics or ExtremeControl engines, or another add-on feature, you must first perform the ExtremeCloud IQ Site Engine upgrade to version 25.11.10 and then upgrade the feature.
- To upgrade Traffic Sensor from version 21.x, a fresh installation is recommended. If the fresh installation cannot be used, then please check [Knowledge Base](#) for a special procedure.
- If the online upgrade fails due to an Internet connectivity issue, fix the connectivity issue and rerun the upgrade.

---

**IMPORTANT:**

When performing an upgrade, be sure to back up the database prior to performing the upgrade, and save it to a safe location. Use the **Administration** > [Backup/Restore](#) tab to perform the backup.

---

- When upgrading the ExtremeCloud IQ Site Engine server, ExtremeAnalyticsengine, or ExtremeControlengine to version 25.11.10, ensure the DNS server IP address is correctly configured.
- When upgrading to ExtremeCloud IQ Site Engine version 25.11.10, if you adjusted the ExtremeCloud IQ Site Engine memory settings and want them to be saved on upgrade, a flag (`-DcustomMemory`) needs to be added to the `/usr/local/Extreme_Networks/NetSight/services/nserver.cfg` file.

For example:

```
-Xms12g -Xmx24g -XX:HeapDumpPath=../..nsdump.hprof -  
XX:+HeapDumpOnOutOfMemoryError -XX:MetaspaceSize=128m -DcustomMemory
```

## License Renewal

Upgrading to ExtremeCloud IQ Site Engine version 25.11.10 requires you to transition from perpetual to subscription-based license model. Existing NMS licenses do not provide access to ExtremeCloud IQ Site Engine. If your perpetual licenses were not transitioned to subscription-based licenses, contact your Extreme Networks Representative for assistance.

## Free Space Consideration

When upgrading to ExtremeCloud IQ Site Engine version 25.11.10, a minimum of 15 GB of free disk space is required on the ExtremeCloud IQ Site Engine server

To increase the amount of free disk space on the ExtremeCloud IQ Site Engine server, perform the following:

- Decrease the number of ExtremeCloud IQ Site Engine backups (by default, saved in the `/usr/local/Extreme_Networks/NetSight/backup` directory).
- Decrease the Data Persistence settings (**Administration > Options > Access Control > Data Persistence**).
- Remove unnecessary archives (**Network > Archives**).
- Delete the files in the `<installation_directory>/NetSight/.installer` directory.

## Site Discover Consideration

Discovering devices via the **Site** tab using a **Range**, **Subnet**, or **Seed** discover might not successfully add all expected devices. To correct the issue, increase the **Length of SNMP Timeout** value on the **Administration > Options > Site** tab in the Discover First SNMP Request section.

## ExtremeAnalytics Upgrade Information

Enabling or disabling the disk flow export feature might cause enforce operations to time out. Enforcing again resolves the issue.

When you delete an ExtremeXOS/Switch Engine device that is configured as a flow source via the Flow Sources table of the **Analytics > Configuration > Engines > Configuration** tab from the Devices list on the **Network > Devices** tab, an error message is generated in the `server.log`. The message does not warn you that the device is in use as a flow source. Adding the device back in the Devices list on the **Network > Devices** tab or removing the device from the Flow Source table fixes the issue.

The Flow Sources table on the **Analytics > Configuration > engine > Configuration** tab may take a few minutes to load.

## ExtremeControl Version 8.0 and later

Beginning in version 8.0, ExtremeControl may fail to join Active Directory when accessing as a **Standard Domain User with Descendant Computer Objects ("Reset password" permissions only)** group member.

To allow this functionality, add the following permissions:

- Reset Password
- Validated write to DNS host name
- Validated write to service principal
- Read and write account restrictions
- Read and write DNS host name attributes
- Write servicePrincipalName

## Other Upgrade Information

Immediately after you install version 25.11.10 on the ExtremeControlengine, the date and time does not properly synchronize and the following error message displays:

**WARNING:** Unable to synchronize to a NTP server. The time might not be correctly set on this device.

Ignore the error message and the date and time automatically synchronize after a short delay.

Additionally, the following message might display during the ExtremeControl upgrade to version 25.11.10:

#### **No domain specified**

To stop domain-specific winbindd process, run `/etc/init.d/winbindd stop {example-domain.com}`

## **Upgrading ExtremeControl Engine to Version 25.11.10**

### General Upgrade Information

The EAP-TLS Certificates with SHA1 are considered weak and are not accepted anymore. The radius server fails to start with the SHA1 certificate. You can use a more secure certificate, such as SHA256.

You are not required to upgrade your ExtremeControl engine version to 25.11.10 when upgrading to ExtremeCloud IQ Site Engine version 25.11.10. However, both ExtremeCloud IQ Site Engine and ExtremeControl engine must be at version 25.11.10 in order to take advantage of the new ExtremeControl version 25.11.10 features. ExtremeCloud IQ Site Engine version 25.11.10 supports managing ExtremeControl engine versions 23.x and up to 25.11.10.

In addition, if your ExtremeControl solution utilizes a Nessus assessment server, you should also upgrade your assessment agent adapter to version 25.11.10 if you upgrade to ExtremeControl version 25.11.10.

You can download the latest ExtremeControl engine version at the [Extreme Portal](#).

### LDAPS servers with FQDN

If the LDAPS server URL uses a Fully Qualified Domain Name (FQDN), then the LDAPS client of Access Control Engine presents the internal Communication Certificate to the LDAPS server. If the LDAPS server URL uses a FQDN then the LDAPS client of ExtremeCloud IQ Site Engine presents the Server Certificate (located in Administration > Certificates > Server Certificate Information) to the LDAPS server. If the LDAPS server presents a certificate that does not match the LDAPS URL, then the certificate is rejected with the error "Certificate Unknown"

The best practice is to use trusted certificates if the LDAPS URL is defined with FQDN, otherwise the LDAPS server might not accept the LDAPS connection. If the LDAPS server URL uses an IP address then the LDAPS client (of both Access Control Engine and ExtremeCloud IQ Site Engine) does not present the Certificate to the LDAPS server.

## Upgrading to Policy Manager 25.11.10

- Policy Manager 25.11.10 only supports ExtremeWireless Controller version 8.01.03 and higher. If you upgrade to ExtremeCloud IQ Site Engine 25.11.10 prior to upgrading your controllers, then Policy Manager does not allow you to open a domain where the controllers already exist or add them to a domain. A dialog is displayed indicating your controllers do not meet minimum version requirements and that they must be upgraded before they can be in a domain.
- Following an upgrade to Wireless Controller version 8.31 and higher, a Policy Manager enforce fails if it includes changes to the default access control or any rules that are set to contain. To allow Policy Manager to modify the default access control or set rules to contain, you must disable the **"Allow" action in policy rules contains to the VLAN assigned by the role** checkbox accessed from the Wireless Controller's web interface on the Roles > Policy Rules tab. This will allow the enforce operation to succeed.

## Pre-Installation Checklist

Please review the following checklist prior to performing an ExtremeCloud IQ Site Engine software installation or upgrade.

**Backup database.** If performing an upgrade, be sure to backup the ExtremeCloud IQ Site Engine database prior to performing the upgrade. Use the **Backup/Restore** tab to perform the backup (**Administration > Backup/Restore** tab).

If you are an existing Extreme Management Center customer, contact your representative to have your Extreme Management Center license migrated to an ExtremeCloud IQ Site Engine license. The ExtremeCloud IQ Site Engine license also includes licensing for ExtremeAnalytics.

---

**IMPORTANT:**

- For upgrade and installation requirements, as well as configuration considerations, see [ExtremeCloud IQ Site Engine Configuration and Requirements](#).
  - ExtremeCloud IQ Site Engine version 25.11.10 receives the licenses from ExtremeCloud IQ. ExtremeCloud IQ Site Engine is a subscription-based -only licensing model. Existing NMS licenses do not provide access to ExtremeCloud IQ Site Engine. You can view the status of your license by accessing [Administration > Licenses](#).
- 

## ExtremeCloud IQ Site Engine Installation

If you are an existing Extreme Management Center customer, contact your representative to have your Extreme Management Center license migrated to an ExtremeCloud IQ Site Engine license. The ExtremeCloud IQ Site Engine license also includes licensing for ExtremeAnalytics.

## Installing ExtremeCloud IQ Site Engine

Use the following instructions to install ExtremeCloud IQ Site Engine. Please read through the following items before beginning the installation.

- The user performing the installation must be the root user. During the installation process you can specify another user to launch and run the server, if desired.
- If you are installing ExtremeCloud IQ Site Engine on a Linux system not provided by Extreme Networks, see [Performing a Silent Install](#) for information on installing ExtremeCloud IQ Site Engine without using its GUI Installation wizard.
- If you are installing ExtremeCloud IQ Site Engine on a Linux system that requires an operating system upgrade, you [are prompted](#) to upgrade using either an internet connection or locally if no additional Ubuntu packages need to be installed.
- Prior to beginning installation, verify that your /etc/hosts file has the local host name specified. It should have an entry that looks like:  

```
127.0.0.1 localhost
```

## Preparing for CD Installation

Perform the following steps if you will be installing the ExtremeCloud IQ Site Engine software from a CD. The following procedures assume that the CD drive from which you are installing is physically attached to the system where ExtremeCloud IQ Site Engine is being installed.

1. Insert the ExtremeCloud IQ Site Engine CD into the CD drive.
2. Use an xterm where you are logged in as root.
3. Using the cd command, cd to the /mnt/cdrom directory.
4. Using the ls command, check to see if the CD drive is mounted. If no files are listed, issue the following commands:  

```
mount /mnt/cdrom
```

## Installation on Red Hat Enterprise Linux (RHEL)

ExtremeCloud IQ Site Engine only requires standard basic OS support, the GUI for RHEL is not required. The following services must be installed with the RHEL OS:

- Syslog
- Time
- VMware tools (if running on VMware)
- IPv4
- IPv6 (if IPv6 will be used)
- DNS

The following services are included in ExtremeCloud IQ Site Engine, do not install with the RHEL OS:

- PSQL
- TFTP

## Installing RHEL Operating System

1. Run the RHEL installation wizard, select **Software Selection > Minimal Install > Standard** environment.
2. Configure your system networking including the hostname in **Network & Host Name**
3. Configure your localization time and date with timezone in **Time & Date**.

The best practice is to use a non-root user account for the ExtremeCloud IQ Site Engine application to run. The RHEL OS installation wizard allows the creation of a user account. Running the ExtremeCloud IQ Site Engine application on root account will function but is not recommended.

---

**NOTE:** The following installation and upgrade procedure commands use the user account "netsight".

---

## Register Subscription with Red Hat

To download RPM packages a Red Hat subscription is required. See Red Hat documentation for more details about subscriptions and how to register [Red Hat Subscriptions](#).

## Configuring RHEL for ExtremeCloud IQ Site Engine

1. Install the following additional packages:  

```
sudo yum install net-snmp-utils  
sudo yum install net-snmp
```
2. Enable and configure SNMPd:  

```
systemctl enable snmpd  
sudo nano /etc/snmp/snmpd.conf
```

  - a. Edit the snmpd.conf file by adding the following line:  

```
sysobjectid .1.3.6.1.4.1.1916.2.417
```

---

**NOTE:** The DES protocol is deprecated by Red Hat, the local SNMPd will not accept the SNMPv3 communication with DES encryption.

---

3. Start SNMPd:  

```
systemctl start snmpd
```
4. Install initscripts:  

```
sudo yum install initscripts
```
5. Enable syslog service to receive messages by editing the config file:  

```
sudo nano /etc/rsyslog.conf
```

- a. Comment out the following line:

```
#module(load="builtin:omfile" Template="RSYSLOG_
TraditionalFileFormat")
```

- b. Add the following two lines at the same section:

```
$template mcdefault,"<%syslogpriority%>%timegenerated% %HOSTNAME%
%fromhost-ip% %syslogtag%%msg%\n"
module(load="builtin:omfile" Template="mcdefault")
```

- c. Uncomment the following lines:

```
module(load="imudp")
input(type="imudp" port="514")
module(load="imtcp")
input(type="imtcp" port="514")
```

6. Restart the service:

```
sudo systemctl restart rsyslog
```

7. Modify the firewall settings:

```
sudo firewall-cmd --zone=public --add-port=8080/tcp
sudo firewall-cmd --zone=public --permanent --add-port=8080/tcp
sudo firewall-cmd --zone=public --add-port=8443/tcp
sudo firewall-cmd --zone=public --permanent --add-port=8443/tcp
sudo firewall-cmd --zone=public --add-port=162/udp
sudo firewall-cmd --zone=public --permanent --add-port=162/udp
sudo firewall-cmd --zone=public --add-port=514/udp
sudo firewall-cmd --zone=public --permanent --add-port=514/udp
sudo firewall-cmd --zone=public --add-port=514/tcp
sudo firewall-cmd --zone=public --permanent --add-port=514/tcp
sudo firewall-cmd --zone=public --add-service=tftp
sudo firewall-cmd --zone=public --add-service=tftp --permanent
```

8. Configure the IP address resolution to resolve the IPv4 address from the hostname.

```
sudo nano /etc/hosts
```

9. Verify the IP address resolution by the following command and check if the IP is resolved.

```
ping `hostname`
```

10. Disable the SELinux feature by editing the config file:

```
sudo nano /etc/selinux/config
```

- a. Change the line SELINUX=enforcing to SELINUX=disabled

11. Verify the SELinux status (a reboot might be required to disable):

```
sestatus
SELinux status: disabled
```

12. Install the following packages for generating PDF reports:

```
sudo yum install libpng15
sudo yum install xorg-x11-fonts-Type1
sudo yum install xorg-x11-fonts-75dpi
wget https://github.com/wkhtmltopdf/packaging/releases/download/0.12.6.1-2/wkhtmltox-0.12.6.1-2.almalinux9.x86_64.rpm
sudo rpm -ivh wkhtmltox-0.12.6.1-2.almalinux9.x86_64.rpm
```

13. Install the following packages for the migration process:

```
sudo yum install python3-pip
sudo pip3 install paramiko
sudo pip3 install scp
```

## Installing ExtremeCloud IQ Site Engine on RHEL

1. Change the attributes of the install file:

```
chmod 700 ExtremeCloudIQSiteEngine_<version>_64bit_install.bin
```

2. Run the install file without GUI support (use --user to define an existing user for the main process):

```
sudo ./ExtremeCloudIQSiteEngine_<version>_install.bin --cli --user netsight
```

3. Monitor the installation progress, and answer any questions that might occur during the installation.

The install process finishes, and a prompt returns with the following messages:

```
WARN BaseInstallUninstall.java:337 - Exiting. Process completed normally.
WARN BaseInstallUninstall.java:347 - Finished in 7 minutes.
```

## Upgrading ExtremeCloud IQ Site Engine on RHEL

1. Stop the nsserver and nsdatabase:

```
sudo /usr/local/Extreme_Networks/NetSight/scripts/stopserver.sh
```

2. Change the attributes of the install file:

```
chmod 700 ExtremeCloudIQSiteEngine_<version>_64bit_install.bin
```

3. Run the install file without GUI support:

```
sudo ./ExtremeCloudIQSiteEngine_<version>_install.bin --cli --user netsight
```

## Known Limitations of ExtremeCloud IQ Site Engine on RHEL

- SNMPv3 traps and informs with MD5 and DES encryption are not decrypted, displaying an error message: "Authentication failed".

- DES protocol is deprecated by current Red Hat versions, the SNMPd running on Red Hat does not accept the SNMPv3 communication with DES encryption.
- The option to Manage SSH configuration in Administration > Users > is disabled.

For more information on RHEL limitations with SNMPv3, see the following Red Hat article:

[Considerations in Adopting RHEL 9](#).

For more information on memory settings, see the following knowledge base article: [Customize Memory Allocation](#).

## Performing a Silent Install

If you are installing ExtremeCloud IQ Site Engine on a Linux system that doesn't support a GUI, you must add the cli flag (--cli) to the install command, in order to allow the ExtremeCloud IQ Site Engine installer to prompt for any required input.

Start the installation with the following command:

```
./ExtremeCloudIQSiteEngine_<version>_64bit_install.bin --cli
```

If you are installing as a user other than root, you must use the --user command to specify the different user. The user must already be configured on the machine before you install. For example:

```
./ExtremeCloudIQSiteEngine_<version>_64bit_install.bin --cli --user  
<username>
```

To perform the install and create a new local "netsight" user (where netsight is the user name), use the --password command to set the password for the new "netsight" user. For example:

```
./ExtremeCloudIQSiteEngine_<version>_64bit_install.bin --cli --password  
<password>
```

## Select the deployment mode and licensing for ExtremeCloud IQ Site Engine

After installing or upgrading to ExtremeCloud IQ Site Engine, you need to select your deployment mode and licensing for ExtremeCloud IQ Site Engine. Refer to [First log in to ExtremeCloud IQ - Site Engine](#) for the procedure.

## Restoring a Database from a Windows Server to a Linux Server

This section describes several ExtremeCloud IQ Site Engine configuration changes required if you are moving your ExtremeCloud IQ Site Engine installation from a Windows platform system to a Linux platform system. The steps are performed after restoring your database to the new server.

In addition, there are two changes that must be made in the legacy Console java application and one change in the legacy Inventory Manager application.

## Console

Use the following instructions to change the location of syslog and trap information to the new location on the Linux system.

### Syslog

Change the Syslog Log Manager to point to the new location on the Linux system. This allows the display of syslog information in the **Syslog Event View** tab.

1. From the Console menu bar, select **Tools > Alarm/Event > Event View Manager**.
2. Select the Syslog entry under Available Log Managers, and select the **Edit** button. The Log Manager Parameters window opens.
3. Change the path in the Log Directory field to `/var/log/syslog`.
4. Change the Pattern to Red Hat LINUX Syslog Pattern.
5. Select **OK**.

### Traps

Change the Traps Log Manager to point to the new location on the Linux system. This allows the display of trap information in the **Traps Event View** tab.

1. From the Console menu bar, select **Tools > Alarm/Event > Event View Manager**.
2. Select the Traps entry under Available Log Managers, and select the **Edit** button. The Log Manager Parameters window opens.
3. Change the path in the Log Directory field to `%logdir%/traps`.
4. Select **OK**.

## Inventory Manager

If you are using Inventory Manager, you need to change the Data Storage Directory path to point to the new location on the Linux system. The Data Storage directory is where all Inventory Manager data is stored, including capacity planning reports, configuration templates, archived configurations, and property files.

1. From the Inventory Manager menu bar, select **Tools > Options**. Expand the Inventory Manager options folder and select **Data Storage Directory Path**.
2. Change the path to the correct new location. On a default Linux install, the path would be: `<user's home directory>/appdata/InventoryMgr`
3. Select **OK**.

## Systems with Multiple NICs

This section provides instructions for configuring ExtremeCloud IQ Site Engine servers with multiple NICs (Network Interface Cards). During the startup process, the ExtremeCloud IQ Site Engine server automatically binds to the first available NIC, which may not be the correct

interface for the server to use. In addition, changes on the network can cause the server to bind to an incorrect interface, should the server restart during a change.

If the system has multiple NICs installed, it is a good practice to either:

- configure the server to bind to a preferred IP address, if using only one interface for connections or
- configure multiple network interfaces, if using more than one interface for connections.

This ensures that local and remote clients, as well as ExtremeControl engines, are able to connect to the ExtremeCloud IQ Site Engine server.

## Binding to One Interface

If the ExtremeCloud IQ Site Engine server has multiple NICs installed but only one interface is used to access ExtremeCloud IQ Site Engine, use the following instructions to configure the preferred interface for the ExtremeCloud IQ Site Engine server.

Configure the ExtremeCloud IQ Site Engine server to bind to the correct IP address.

1. Open the `/var/Extreme_Networks/.netsight` file. Edit the line `JBOSS_HOSTNAME=<server IP>` to add the correct NIC IP address.
2. Restart the ExtremeCloud IQ Site Engine server.

---

**NOTE:** User preferences and application data (such as FlexViews and MIBs) for remote clients are stored in the following local directory on the client machine: `C:\Documents and Settings\<username>\Application Data\NetSight`.

---

## Uninstalling ExtremeCloud IQ Site Engine

Use the procedures below to uninstall your ExtremeCloud IQ Site Engine Suite of products. The uninstall removes all ExtremeCloud IQ Site Engine data from the database. Be sure to backup your database prior to uninstalling.

Navigate to the `<install directory>/uninstaller` directory and start the Uninstaller by issuing the command:

```
./uninstall.sh
```

## Extreme Networks Support

If you require assistance, contact Extreme Networks Global Technical Assistance Center using one of the following methods.

|       |                                                                                                                                                                                                                                             |
|-------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Web   | <a href="http://www.extremenetworks.com/support/">www.extremenetworks.com/support/</a>                                                                                                                                                      |
| Phone | 1-800-872-8440 (toll-free in U.S. and Canada) or 1-603-952-5000<br>For the Extreme Networks Support phone number in your country:<br><a href="http://www.extremenetworks.com/support/contact/">www.extremenetworks.com/support/contact/</a> |
| Email | <a href="mailto:support@extremenetworks.com">support@extremenetworks.com</a>                                                                                                                                                                |

---

## ExtremeCloud IQ Site Engine Licensing

---

ExtremeCloud IQ Site Engine includes all the features and functionality of Extreme Management Center. If you are an existing Extreme Management Center customer, contact your representative to have your Extreme Management Center license migrated to an ExtremeCloud IQ Site Engine license. The ExtremeCloud IQ Site Engine license also includes licensing for ExtremeAnalytics.

---

**NOTES:**

- ExtremeCloud IQ Site Engine is a subscription-based -only licensing model.
  - ExtremeCloud IQ Site Engine is not compatible with ExtremeCloud IQ Connect level account. The Pilot level is mandatory.
  - ExtremeCloud IQ Site Engine in Connected mode is fully compatible with the Extreme Platform ONE licensing model starting in version 25.02.10
- 

You can view ExtremeCloud IQ and ExtremeCloud IQ Site Engine license information by accessing [Administration > Licenses](#).

This Help topic includes information on the following:

- [ExtremeCloud IQ Pilot Twin Subscription Provides Backwards Compatibility](#)
- [Licensing for Devices in Connected Mode](#)
- [Licensing for Devices in Air Gap Mode](#)
- [Revoke Air Gap License](#)
- [License Limits and Violations](#)
- [Licensing for ExtremeControl](#)

There are tiers of licenses for ExtremeCloud IQ Site Engine and devices:

- No License - Status-Only devices
- Navigator - 3rd party devices, Extreme Campus Controller, ExtremeCloud IQ Controller, WiNG wireless devices, and devices not natively supported by ExtremeCloud IQ Site Engine
- Extreme Platform ONE Tier A - Natively supported Extreme devices of tier A
- Extreme Platform ONE Tier B - Natively supported Extreme devices of tier B
- Extreme Platform ONE Tier C - Natively supported Extreme devices of tier C
- Extreme Platform ONE Tier D - Natively supported Extreme devices of tier D
- Pilot - Natively supported Extreme devices of any tier

- If the license of the appropriate tier is not available then you can use a higher license tier instead.
- The license tier hierarchy from lowest to highest is: No License > Navigator > Tier A > Tier B > Tier C > Tier D > Pilot.

**NOTE:**

- In Air Gap deployment, the **Administration > Licenses > Realign License Assignment** button triggers the process of automatic realignment of licenses to devices. The device is assigned the best-fit available Tier. In Connected mode deployment, use Unmanage/Manage in Extreme Platform ONE or ExtremeCloud IQ to realign licenses.

ExtremeCloud IQ Site Engine can be deployed in two ways, using Connected mode or Air Gap mode:

- Connected mode:
  - ExtremeCloud IQ - Site Engine uses ExtremeCloud IQ to determine if you meet or exceed the [license limits](#) for each license type.
  - All ExtremeCloud IQ - Site Engines connected to the same customer account share a pool of licenses, one serial number consumes one license entitlement, regardless of the number of monitoring entities.
  - ExtremeCloud IQ - Site Engine shares information with ExtremeCloud IQ.
  - ExtremeCloud IQ can cooperate with ExtremeCloud IQ - Site Engine.
- Air Gap mode:
  - ExtremeCloud IQ - Site Engine does not require internet access.
  - ExtremeCloud IQ - Site Engine uses a license file to determine if you meet or exceed the [license limits](#) for each license type.
  - ExtremeCloud IQ - Site Engines can not share licenses.

Devices that do not have serial numbers or MAC addresses in Extreme Management Center must be Rediscovered after you upgrade to ExtremeCloud IQ Site Engine in Connected mode before they can be onboarded to ExtremeCloud IQ.

**NOTE:**

If your number of devices exceeds your licenses available, ExtremeCloud IQ Site Engine transitions to a license violation state and your access to ExtremeCloud IQ Site Engine features and functionality is degraded. To resolve the license shortage you need to access the Extreme Networks License Portal or ExtremeCloud IQ to evaluate the quantities of available Pilot, Navigator, and NAC licenses versus the number of licenses required by ExtremeCloud IQ Site Engine.

## ExtremeCloud IQ Pilot Twin Subscription Provides Backwards Compatibility

Some versions of ExtremeCloud IQ Site Engine and ExtremeCloud IQ Controller do not support Extreme Platform ONE subscriptions. To provide you with the necessary time to upgrade to later versions, Extreme Networks provides every Extreme Platform ONE standard subscription with an ExtremeCloud IQ Pilot Twin subscription with the same start date, end date, and licensed quantity.

- The Extreme Portal shows both Extreme Platform ONE Standard and ExtremeCloud IQ Pilot Twin subscriptions
- ExtremeCloud IQ does not show ExtremeCloud IQ Pilot Twin subscriptions
- Extreme Platform ONE does not show ExtremeCloud IQ Pilot Twin subscriptions
- ExtremeCloud IQ Site Engine version 25.2 and earlier supports ExtremeCloud IQ Pilot and ExtremeCloud IQ Pilot Twin subscriptions
- ExtremeCloud IQ Site Engine version 25.5 and later supports ExtremeCloud IQ Pilot and Extreme Platform ONE subscriptions
- ExtremeCloud IQ Controller versions support ExtremeCloud IQ Pilot and ExtremeCloud IQ Pilot Twin subscriptions

---

**NOTE:**

If you purchased an Extreme Platform ONE subscription and are running management application versions which are not compatible with Extreme Platform ONE subscriptions, you can use the provided ExtremeCloud IQ Pilot Twin subscription.

---

## Licensing for Devices in Connected Mode

When ExtremeCloud IQ Site Engine has been [onboarded](#), it starts sending requests to add the devices from its database to ExtremeCloud IQ.

As devices are added and discovered in ExtremeCloud IQ Site Engine, they are onboarded to ExtremeCloud IQ, with a request for a license of the appropriate tier (Navigator, Pilot or No License) that each device will require. ExtremeCloud IQ assigns a license of the appropriate tier (A/B/C/D/Pilot/Navigator/No License).

Devices may be marked as [Unmanaged](#) in ExtremeCloud IQ, which means they are not using a license and available features are very limited.

The following grid details the type of license required by each device and engine type:

| Device Type                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | License Tier Type | Number of Licenses Per Device |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-------------------------------|
| Extreme-supported Device Tier D (Includes: Universal Platform Fabric Engine 5720, Universal Platform Switch Engine 5720, Universal Platform Fabric Engine 7520, Universal Platform Switch Engine 7520, Universal Platform Fabric Engine 7720, Universal Platform Switch Engine 7720, Universal Platform Fabric Engine 7830, Universal Platform Switch Engine 7830, Summit Series X670, Summit Series X670V, Summit Series X670-G2, Summit Series X690, Summit Series X695, Summit Series X770, Summit Series X870) | Tier D            | 1 for each unit               |
| Extreme-supported Device Tier D (Includes: VSP series 7200, VSP series 7400, VSP series 8000, VSP series 8600)                                                                                                                                                                                                                                                                                                                                                                                                     | Tier D            | 1                             |
| Extreme-supported Device Tier C (Includes: Universal Platform Fabric Engine 5520, Universal Platform Switch Engine 5520, Summit Series X460-G2, Summit Series X465, Summit Series X590, Summit Series X620, ERS Series 5900)                                                                                                                                                                                                                                                                                       | Tier C            | 1 for each unit               |
| Extreme-supported Device Tier C (Includes: VSP series 4000, VSP series 4900)                                                                                                                                                                                                                                                                                                                                                                                                                                       | Tier C            | 1                             |
| Extreme-supported Device Tier B (Includes: Universal Platform Fabric Engine 5420, Universal Platform Switch Engine 5420, Summit Series X450-G2, ERS Series 4800, ERS Series 4900)                                                                                                                                                                                                                                                                                                                                  | Tier B            | 1 for each unit               |
| Extreme-supported Device Tier A (Includes: Universal Platform Fabric Engine 5320, Universal Platform Switch Engine 5320, Universal Platform Fabric Engine 5120, Universal Platform Switch Engine 5120, Universal Platform Fabric Engine 4220, Universal Platform Switch Engine 4220, Universal Platform Switch Engine 4120, Summit Series X440-G2)                                                                                                                                                                 | Tier A            | 1 for each unit               |
| Extreme-supported Devices (Includes: SLX, Extreme Access Series, Fabric Manager, ICX Series, Security Appliances, MLXe Series, VDX Series, Summit Series X435, Summit Series X620)                                                                                                                                                                                                                                                                                                                                 | Tier A            | 1                             |
| Extreme-supported Legacy Devices (includes: A Series, B Series, C Series, 7100 Series, 200 Series, SSA Series)                                                                                                                                                                                                                                                                                                                                                                                                     | Tier A            | 1 for each unit               |

| Device Type                                                                                                                                                | License Tier Type         | Number of Licenses Per Device |
|------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|-------------------------------|
| Extreme-supported Chassis (Includes S series, K series, N series, E series, Black Diamond, Black Diamond X, X series, MLXe series, VDX series, SLX series) | Tier A                    | 1 for each chassis            |
| ExtremeControl Engine, ExtremeAnalytics Engine, vSensor                                                                                                    | Tier A                    | 1                             |
| ExtremeCloud IQ Site Engine*                                                                                                                               | Tier A                    | 1                             |
| All Other Devices (Includes Non-Extreme Device)                                                                                                            | <a href="#">Navigator</a> | 1                             |
| Devices with Ping-Only profile                                                                                                                             | No License                | 0                             |

\*There is one license required for the ExtremeCloud IQ Site Engine itself. Each ExtremeCloud IQ Site Engine consumes only one license even if there are multiple ExtremeCloud IQ Site Engine devices in the device list.

---

**NOTE:** For HiveOS APs (IQE) and Dell N-Series, a Tier A license is required, but currently not enforced in ExtremeCloud IQ Site Engine. These are not onboarded to ExtremeCloud IQ through ExtremeCloud IQ Site Engine.

---

## Licensing for Devices in Air Gap Mode

ExtremeCloud IQ Site Engine [uses licenses](#) stored locally in a license file. This ensures ExtremeCloud IQ Site Engine does not require an internet connection to verify licenses are available as you add devices.

---

**NOTE:** Licenses in one installation of ExtremeCloud IQ Site Engine in Air Gap mode cannot be shared with other installations of ExtremeCloud IQ Site Engine.

---

As devices are added and discovered in ExtremeCloud IQ Site Engine, they consume a license of the appropriate tier (A/B/C/D/Pilot/Navigator/No License) that each device requires against the total listed in the license file.

Devices may be marked as [Unmanaged](#), which means they are not using a license and available features are very limited.

The following grid details the type of license required by each device and engine type:

| Device Type                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | License Tier Type | Number of Licenses Per Device |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-------------------------------|
| Extreme-supported Device Tier D (Includes: Universal Platform Fabric Engine 5720, Universal Platform Switch Engine 5720, Universal Platform Fabric Engine 7520, Universal Platform Switch Engine 7520, Universal Platform Fabric Engine 7720, Universal Platform Switch Engine 7720, Universal Platform Fabric Engine 7830, Universal Platform Switch Engine 7830, Summit Series X670, Summit Series X670V, Summit Series X670-G2, Summit Series X690, Summit Series X695, Summit Series X770, Summit Series X870) | Tier D            | 1 for each unit               |
| Extreme-supported Device Tier D (Includes: VSP series 7200, VSP series 7400, VSP series 8000, VSP series 8600)                                                                                                                                                                                                                                                                                                                                                                                                     | Tier D            | 1                             |
| Extreme-supported Device Tier C (Includes: Universal Platform Fabric Engine 5520, Universal Platform Switch Engine 5520, Summit Series X460-G2, Summit Series X465, Summit Series X590, Summit Series X620, ERS Series 5900)                                                                                                                                                                                                                                                                                       | Tier C            | 1 for each unit               |
| Extreme-supported Device Tier C (Includes: VSP series 4000, VSP series 4900)                                                                                                                                                                                                                                                                                                                                                                                                                                       | Tier C            | 1                             |
| Extreme-supported Device Tier B (Includes: Universal Platform Fabric Engine 5420, Universal Platform Switch Engine 5420, Summit Series X450-G2, ERS Series 4800, ERS Series 4900)                                                                                                                                                                                                                                                                                                                                  | Tier B            | 1 for each unit               |
| Extreme-supported Device Tier A (Includes: Universal Platform Fabric Engine 5320, Universal Platform Switch Engine 5320, Universal Platform Fabric Engine 5120, Universal Platform Switch Engine 5120, Universal Platform Fabric Engine 4220, Universal Platform Switch Engine 4220, Universal Platform Switch Engine 4120, Summit Series X440-G2)                                                                                                                                                                 | Tier A            | 1 for each unit               |
| Extreme-supported Devices (Includes: SLX, Extreme Access Series, Fabric Manager, ICX Series, Security Appliances, MLXe Series, VDX Series, Summit Series X435, Summit Series X620, HiveOS (IQE), Dell N-Series)                                                                                                                                                                                                                                                                                                    | Tier A            | 1                             |

| Device Type                                                                                                                                                | License Tier Type         | Number of Licenses Per Device |
|------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|-------------------------------|
| Extreme-supported Legacy Devices (includes: A Series, B Series, C Series, 7100 Series, 200 Series, SSA Series, Port Extenders V300, Port Extenders V400)   | Tier A                    | 1 for each unit               |
| Extreme-supported Chassis (Includes S series, K series, N series, E series, Black Diamond, Black Diamond X, X series, MLXe series, VDX series, SLX series) | Tier A                    | 1 for each chassis            |
| ExtremeControlEngine, ExtremeAnalyticsEngine, vSensor                                                                                                      | Tier A                    | 1                             |
| ExtremeCloud IQ Site Engine*                                                                                                                               | Tier A                    | 1                             |
| All Other Devices (Includes Non-Extreme Device)                                                                                                            | <a href="#">Navigator</a> | 1                             |
| Devices with Ping-Only profile                                                                                                                             | No License                | 0                             |

\*There is one license required for the ExtremeCloud IQ Site Engine itself. Each ExtremeCloud IQ Site Engine consumes only one license even if there are multiple ExtremeCloud IQ Site Engine devices are in the device list.

## Revoke Air Gap License

---


**NOTE:** A maximum of 10 Air Gap licenses can be revoked in one revocation file.

---


Follow this procedure to revoke your Air Gap license.

1. Open **Administration > Licenses** or enter this URL.  
<https://<Server>:8443/xiqLicenseSetup.jsp?setupMode=Airgap>
2. Select either the Pilot, Navigator, or NAC license to revoke.  
 ExtremeCloud IQ Site Engine generates a revocation file.
3. Download the file to your computer.
4. Log into the Extreme Portal (<https://extreme-networks.my.site.com/ExtrCloudLicenseLanding>).

5. Select **Assets > Cloud Licenses Home > Revoke License**.

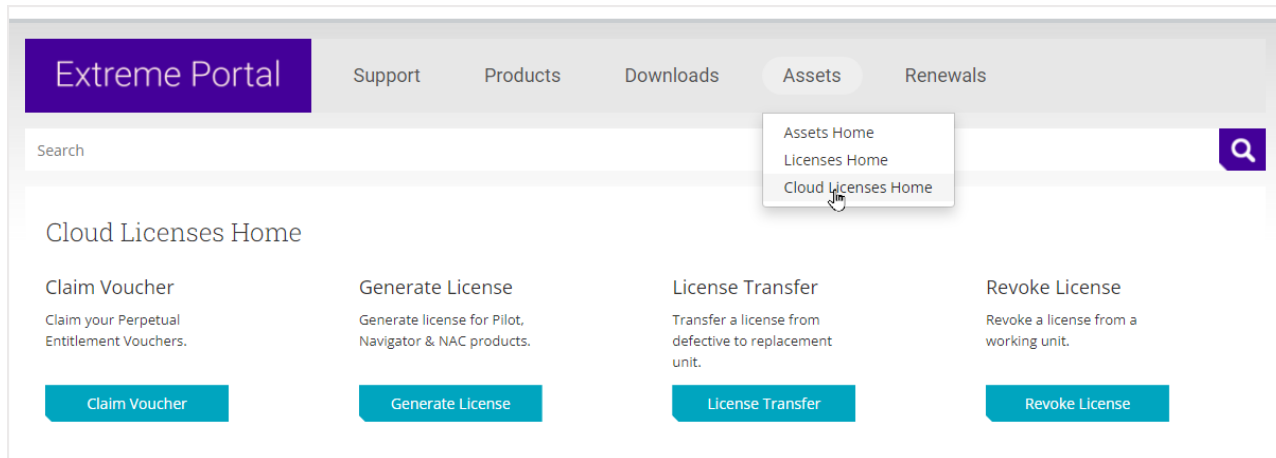

6. Upload the revocation file and select **Submit**.

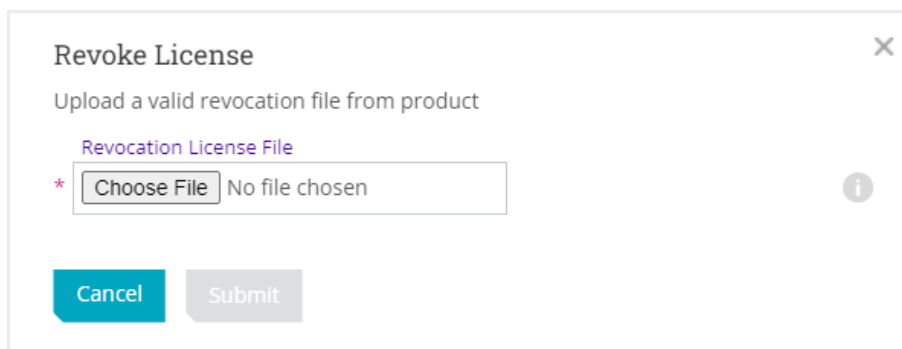

The revoked licenses are returned to the license pool. Contact [support](#) if you encounter an error. You will need to provide the revocation file (.rvk) and the error message.

## License Limits and Violations

For each request to add a device to ExtremeCloud IQ Site Engine:

- **In Connected mode:** ExtremeCloud IQ determines if there are enough licenses of that type available.
- **In Air Gap mode:** ExtremeCloud IQ Site Engine uses the license file to determine if there are enough licenses of that type available.

As a result for both modes, one of the following actions happens:

- If there are enough licenses, device onboarding is successful.
- If there are not enough Navigator licenses, a Pilot license is used instead.
- If there are not enough Pilot licenses, the request is considered a license violation.

---

**NOTE:** When an evaluation license is used for ExtremeCloud IQ Site Engine, all devices are managed with Pilot licenses.

---


To correct a license limit violation:

- **In Connected mode:** You must acquire more licenses (and, when the updated licenses are available in ExtremeCloud IQ, they are used by ExtremeCloud IQ Site Engine).
- **In Air Gap mode:** You must acquire more licenses by generating a new licensing file from the licensing portal, then install the licensing file in ExtremeCloud IQ Site Engine.

## Devices Marked as Unmanaged

When devices are marked as Unmanaged in ExtremeCloud IQ, they are also Unmanaged in ExtremeCloud IQ Site Engine.

Onboarded Unmanaged devices are indicated in the [XIQ Onboarded column](#) of the **Network > Site > Device** table by a red X.

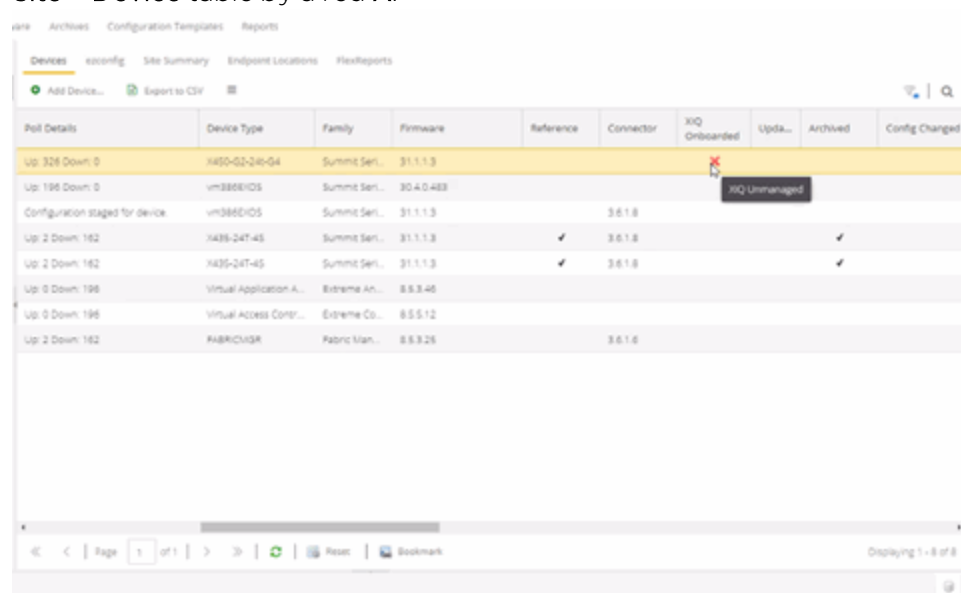

The screenshot shows the 'Devices' table in the ExtremeCloud IQ interface. The table has columns: Poll Details, Device Type, Family, Firmware, Reference, Connector, XIQ Onboarded, Upda..., Archived, and Config Changed. A tooltip 'XIQ Unmanaged' is visible over a red 'X' in the 'XIQ Onboarded' column for the first device.

| Poll Details                    | Device Type              | Family        | Firmware   | Reference | Connector | XIQ Onboarded | Upda... | Archived | Config Changed |
|---------------------------------|--------------------------|---------------|------------|-----------|-----------|---------------|---------|----------|----------------|
| Up: 328 Down: 0                 | H450-G2-240-G4           | Summit Ser... | 31.1.1.3   |           |           | X             |         |          |                |
| Up: 198 Down: 0                 | vm388EIOS                | Summit Ser... | 30.4.0.483 |           |           |               |         |          |                |
| Configuration staged for device |                          |               |            |           |           |               |         |          |                |
| Up: 2 Down: 162                 | H486-24T-4S              | Summit Ser... | 31.1.1.3   |           | 3.6.1.8   |               |         |          |                |
| Up: 2 Down: 162                 | H486-24T-4S              | Summit Ser... | 31.1.1.3   |           | 3.6.1.8   |               |         |          |                |
| Up: 0 Down: 196                 | Virtual Application A... | Extreme An... | 8.5.3.46   |           |           |               |         |          |                |
| Up: 0 Down: 196                 | Virtual Access Contr...  | Extreme Co... | 8.5.5.12   |           |           |               |         |          |                |
| Up: 2 Down: 162                 | R48RCHSR                 | R48rnc Man... | 8.5.3.26   |           | 3.6.1.6   |               |         |          |                |

For more details on the **Network > Site > Device** table, visit [Onboarding Unmanaged Devices](#).

## Licensing for ExtremeControl (Network Access Control)

If the ExtremeCloud IQ Site Engine was [onboarded](#) to ExtremeCloud IQ, ExtremeCloud IQ provides the Network Access Control (NAC) entitlements to ExtremeCloud IQ Site Engine. There is an option to allocate a portion of the available license pool in ExtremeCloud IQ. The full 100% NAC entitlements should be allocated automatically to the first ExtremeCloud IQ Site Engine. If there are more Site Engines, for example, a lab instance and a production instance, then the NAC entitlements allocation can be changed in the ExtremeCloud IQ GUI. It is recommended to check the NAC entitlements allocation in ExtremeCloud IQ.

If the ExtremeCloud IQ Site Engine is operated in Air Gap deployment mode, the licensed quantity for ExtremeControl is provided through a license file. The license file is generated in Extreme Portal. The licensed quantity for ExtremeControl varies depending on whether

ExtremeCloud IQ Site Engine is initially installed or it was upgraded from the Extreme Management Center.

## After Upgrading from Extreme Management Center

If you are upgrading from Extreme Management Center to ExtremeCloud IQ Site Engine, the licensing and capabilities of ExtremeControl do not change. The following are included in the licenses:

- NMS-ADV License includes 500 Access Control End-Systems.
- NMS-xx License includes 250 Access Control End-Systems.

---

**NOTE:** If your version of ExtremeControl contains NMS or NMS-ADV licenses described above and licenses are used through ExtremeCloud IQ (in Connected mode) or in a locally stored license file (in Air Gap mode), ExtremeControl will sum those licensed quantities.

---

## Upon Initial Installation

If you are completing an initial install of ExtremeCloud IQ Site Engine, there is no end-system license included. The evaluation license can be generated on the Extreme Portal which includes unlimited end-systems.

## Logging into ExtremeCloud IQ Site Engine

In connected mode, ExtremeCloud IQ Site Engine gets licenses through ExtremeCloud IQ. ExtremeCloud IQ acts as a license proxy between ExtremeCloud IQ Site Engine and Extreme Portal. Therefore, your ExtremeCloud IQ needs to be linked to your license entitlements in the Extreme Portal before your ExtremeCloud IQ Site Engine can be onboarded to ExtremeCloud IQ and consumes licenses via ExtremeCloud IQ. In Air Gap deployment mode, ExtremeCloud IQ Site Engine utilizes these licenses based on a license file.


### Post upgrade from Extreme Management Center Version 8.5.5 or newer

When the Extreme Management Center is onboarded to ExtremeCloud IQ using the soft launch feature, you need to remove Extreme Management Center from ExtremeCloud IQ before onboarding ExtremeCloud IQ Site Engine.

### Initial installation of ExtremeCloud IQ Site Engine or upgrading from Extreme Management Center

Follow these steps to launch ExtremeCloud IQ Site Engine:

1. Enter this `https://<IP Address>:8443` in your browser.

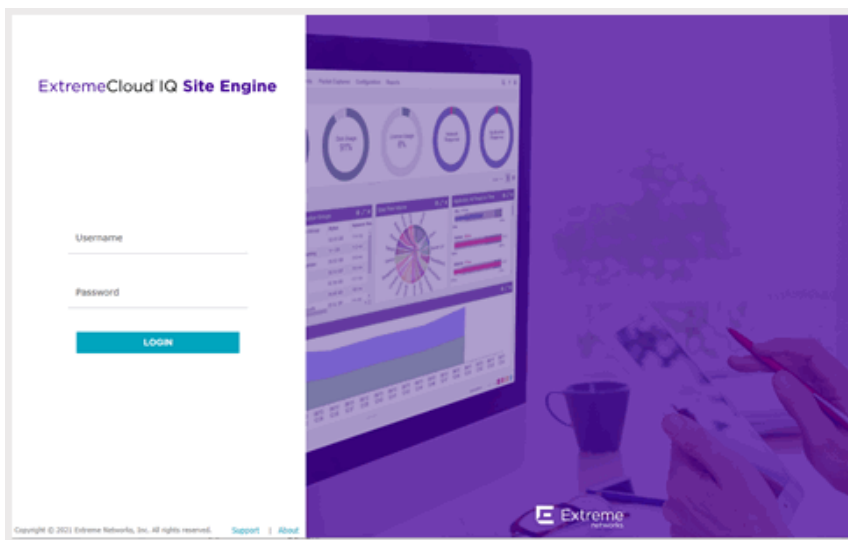

2. Enter your ExtremeCloud IQ Site Engine login credentials and select **Login**. These are the credentials you configured during the installation

3. Accept the License Agreement and select **Next**.

## Welcome to ExtremeCloud IQ - Site Engine

### License Agreement

PLEASE READ ALL OF THE FOLLOWING TERMS AND CONDITIONS OF THIS END USER LICENSE AGREEMENT.

This End User License Agreement ("Agreement") is a legal agreement between You and/or the entity You represent and Extreme Networks, Inc., on behalf of itself and its affiliates, including, but not limited to, Extreme Network Ireland Ops Limited (collectively, "Extreme") for the Software (defined below) licensed by Extreme or its licensors.

By downloading, installing, copying, accessing, or using the Software, or activating a Software license key, or by clicking an "I Agree" or similar button, or by opening the Software media, You agree to the terms and conditions of this Agreement as a condition of Your use of, and right to use, the Software.

If You do not agree to all the terms and conditions in this Agreement, do not download, install or use the Software. If the Software was delivered to You embedded in an Extreme Hardware Product, do not install or use that Extreme Hardware Product.

Extreme may make changes to this Agreement at any time and will provide written notice of such changes to You and give You an opportunity to accept those changes. Your continued use of the Software after such changes have been posted will signify your assent to acceptance of the revised terms.

If You and Extreme have signed a separate written agreement covering Your rights and duties with respect to the Software, then that written agreement take precedence over any conflicting terms in this Agreement.

Your privacy is important to Extreme. Extreme's Privacy Policy is located at <https://www.extremenetworks.com/company/legal/privacy/>. Please read our Privacy Policy for information related to Extreme's collection, use and disclosure of Your personal information. By agreeing to the terms of this Agreement, You are also accepting the terms of Extreme's Privacy Policy.

1. DEFINITIONS. Capitalized terms used in this Agreement are defined in Section 18 below.

☒ I accept the License Agreement

Next

4. Select your deployment mode. Refer to the [XIQ-SE Activation](#) document for licensing information.
- Connected mode - **Onboard to ExtremeCloud IQ Site Engine** - In connected deployment mode, ExtremeCloud IQ Site Engine utilizes these licenses through connection to ExtremeCloud IQ. It is required to link your Extreme Portal to ExtremeCloud IQ. Once those are linked together, you can use the licenses you purchased in both ExtremeCloud IQ and ExtremeCloud IQ Site Engine.
  - Air Gap mode - **Enter entitlement(s) for air gapped ExtremeCloud IQ Site Engine** - In air gap deployment mode, ExtremeCloud IQ Site Engine utilizes these licenses based on a license file. During the generation of the license file, the licenses are assigned to the locking ID of ExtremeCloud IQ Site Engine.

## Welcome to ExtremeCloud IQ - Site Engine

Select the deployment model that meets the requirements of your ExtremeCloud IQ - Site Engine.

☒ **Onboard to ExtremeCloud IQ**  
(Start here if you have internet connectivity)

☐ **Enter entitlement(s) for air gapped ExtremeCloud IQ - Site Engine**  
(Start here if you do not have internet connectivity)

Need to restore a backup? [Follow this](#)

**Next**

---

**NOTE:** The Welcome screen provides a link to the procedure for [restoring](#) ExtremeCloud IQ Site Engine from backup.

---

5. Click **Next**.
6. Depending on the deployment mode you selected, you will do one of the following:
  - For Connected mode onboarding of ExtremeCloud IQ Site Engine to ExtremeCloud IQ, enter the ExtremeCloud IQ email address and password and select **Onboard**. If your environment requires HTTP Proxy or other advanced settings, select the **Advanced** link. If you do not have an ExtremeCloud IQ account, select the **Register Here** link.

## Welcome to ExtremeCloud IQ - Site Engine

[Back](#)

### Onboard to ExtremeCloud IQ

Please enter your ExtremeCloud IQ credentials to onboard the ExtremeCloud IQ - Site Engine.

Email

Password

Don't have an account? [Register here](#)

[Advanced](#)

**Onboard**

- For Air Gap deployment, drag and drop your entitlements to this screen.

## Welcome to ExtremeCloud IQ - Site Engine

[Back](#)

### Air Gap License Entitlements

Enter the entitlement(s) for your air gapped ExtremeCloud IQ - Site Engine.  
After adding entitlements to the table below, click the Continue button to log in to ExtremeCloud IQ - Site Engine.

ExtremeCloud IQ - Site Engine serial number (Locking ID, UUID): **XIQSE-4464725328CD4130B8D425187D41000**

Don't have a license file? [Generate here](#)

Entitlements

Drag and drop a license entitlement file into this zone or click here to paste license entitlements.

| Feature         | License Name | Type         | Quantity  | Start Date             | End Date               | Description                                    |  |
|-----------------|--------------|--------------|-----------|------------------------|------------------------|------------------------------------------------|--|
| PRD-XIQ-NAV-S-C | XIQ-NAV-S-C  | Subscription | 20        | 11/14/2021 07:00:00 PM | 11/15/2022 06:59:00 PM | ExtremeCloud IQ - Site Engine - Navigator      |  |
| PRD-XIQ-PIL-S-C | XIQ-PIL-S-C  | Subscription | Unlimited | 11/14/2021 07:00:00 PM | 11/15/2022 06:59:00 PM | ExtremeCloud IQ - Site Engine - Pilot          |  |
| PRD-XIQ-NAC-S   | XIQ-NAC-S    | Subscription | 100,000   | 11/14/2021 07:00:00 PM | 11/15/2022 06:59:00 PM | ExtremeCloud IQ - Site Engine - Access Control |  |

Displaying 3 rows

**Continue**

7. Click **Onboard** (Connected mode) or **Continue** (Air Gap mode). ExtremeCloud IQ Site Engine is ready to use.

You can now access ExtremeCloud IQ Site Engine.

---

**NOTE:** If you need to convert your deployment between Connected or Air Gap mode, see [Convert from Connected to Air Gap deployment](#) or [Convert from Air Gap to Connected deployment](#).

---

## Onboarding Devices (Connected mode only)

When ExtremeCloud IQ Site Engine is onboarded, it starts sending requests to add the devices from its database to ExtremeCloud IQ. Cloud Configuration Groups are created in ExtremeCloud IQ that match User Device Groups in ExtremeCloud IQ Site Engine.

---

**NOTE:** Devices with IPv6 addresses in ExtremeCloud IQ Site Engine will not be onboarded as locally-managed devices in ExtremeCloud IQ. Only devices with IPv4 addresses qualify.

---

As devices are added and discovered in ExtremeCloud IQ Site Engine, they are onboarded to ExtremeCloud IQ, with a request for a [license](#) of the appropriate tier (Navigator, Pilot or No License) that each device will require.

If devices that are onboarded are included in User Device Groups in ExtremeCloud IQ Site Engine, they are also included in Cloud Configuration Groups in ExtremeCloud IQ that match the devices' assigned User Device Groups in ExtremeCloud IQ Site Engine.

Cloud Configuration Groups are updated when devices are added to User Device Groups (either by user action or by API call). Cloud Configuration Groups are also updated when devices are removed from a User Device Group or deleted from ExtremeCloud IQ Site Engine.

---

**NOTE:** Cloud Configuration Group names include User Device Group parent names (other than "My Network") and are prefixed with "XIQSE-". The Cloud Configuration Group names will be shortened to fit the limit of 128 characters.

---

View the [ExtremeCloud IQ Site Engine and ExtremeCloud IQ Onboarding Flowchart](#) for a detailed chart on how devices are onboarded to ExtremeCloud IQ and managed by ExtremeCloud IQ Site Engine.

## XIQ Onboarded Status for Devices (Connected mode only)

After an attempt is made to onboard a device, the [XIQ Onboarded](#) column in the table **Network > Site > Device**) indicates the status of the onboarding attempt.

| Poll Details                    | Device Type              | Family        | Firmware   | Reference | Connector | XIQ Onboarded | Upda... | Archived | Config Changed |
|---------------------------------|--------------------------|---------------|------------|-----------|-----------|---------------|---------|----------|----------------|
| Up: 328 Down: 0                 | X450-52-240-G4           | Summit Ser... | 31.1.1.3   |           |           |               |         |          |                |
| Up: 196 Down: 0                 | vm386E105                | Summit Ser... | 30.4.0.483 |           |           |               |         |          |                |
| Configuration staged for device | vm386E105                | Summit Ser... | 31.1.1.3   |           | 3.6.1.8   |               |         |          |                |
| Up: 2 Down: 162                 | X435-247-45              | Summit Ser... | 31.1.1.3   |           | 3.6.1.8   |               |         |          |                |
| Up: 0 Down: 162                 | X435-247-45              | Summit Ser... | 31.1.1.3   |           | 3.6.1.8   |               |         |          |                |
| Up: 0 Down: 196                 | Virtual Application A... | Extreme An... | 8.8.3.46   |           |           |               |         |          |                |
| Up: 0 Down: 196                 | Virtual Access Contr...  | Extreme Co... | 8.5.5.12   |           |           |               |         |          |                |
| Up: 2 Down: 162                 | R430C13R                 | R430C13R...   | 8.8.3.26   |           | 3.6.1.6   |               |         |          |                |

- Black check mark - Indicates that the device is onboarded to ExtremeCloud IQ.
- Red X - Indicates the device is onboarded but Unmanaged, which means it is not using a license, it has read-only device-level support, and available features in ExtremeCloud IQ Site Engine are limited. Other functionality, including Status Polling, Historical Device + Port Statistics Collection, Existing Scheduled Tasks, and Archives, are supported for devices with Unmanaged status, but these devices cannot be configured for new tasks or new archives.

#### NOTE:

In ExtremeCloud IQ Site Engine version 25.11.10, only use ExtremeCloud IQ to set an ExtremeCloud IQ Site Engine onboarded device to Unmanaged as a temporary measure while you obtain more licenses.

If you mark a device as Unmanaged so it does not trigger a [license limit violation](#), you can then access ExtremeCloud IQ Site Engine and delete the device before the license violation occurs.

You can perform an enforce for an ExtremeControl engine with an Unmanaged status; however, if the device has an Unmanaged status, then the enforce does not reconfigure the device and changes are not written to the device.

When devices are marked as Unmanaged in ExtremeCloud IQ, they are also Unmanaged in ExtremeCloud IQ Site Engine.

In addition, existing ExtremeAnalytics functionality for devices with an Unmanaged status is still supported, but only with existing configuration.

- Blank - Indicates the device is not successfully onboarded to ExtremeCloud IQ from the ExtremeCloud IQ Site Engine because either it is already onboarded to ExtremeCloud IQ (either from another ExtremeCloud IQ Site Engine or by using the IQ Agent to connect directly), or because ExtremeCloud IQ

Site Engine lost its connection to ExtremeCloud IQ.

---

**NOTE:** If a device's status is Blank, it has limited features available in ExtremeCloud IQ Site Engine because management of the device is owned by ExtremeCloud IQ.

---

- N/A - Indicates the device is not eligible to be onboarded to ExtremeCloud IQ because it does not have a valid serial number or MAC address, or Extreme does not yet offer onboarding support for the device.

---


**NOTE:** If ExtremeCloud IQ Site Engine does not recognize a device's serial number or MAC address, right-click on the device and select Rediscover to attempt to discover the device's serial number or MAC address. When the device's serial number or MAC address is discovered, it can be onboarded to ExtremeCloud IQ during the next onboarding cycle.

---

## Convert from Connected to Air Gap deployment

Follow this procedure if you need to convert from Connected mode to Air Gap mode.

1. Delete ExtremeCloud IQ Site Engine from ExtremeCloud IQ

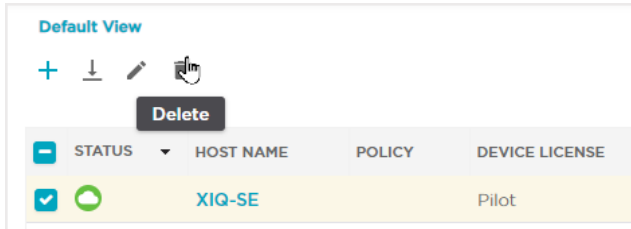

2. In the next 48 hours, all subscriptions will be deactivated automatically. During this time period:
  - The ExtremeCloud IQ Site Engine will report Connection Lost with ExtremeCloud IQ
  - New devices cannot be added to ExtremeCloud IQ Site Engine
3. Log in to ExtremeCloud IQ Site Engine
4. Go to **Air Gap License Entitlements** using  
[HTTPS://<SiteEngineIP>:8443/xiqLicenseSetup.jsp?setupMode=Airgap](https://<SiteEngineIP>:8443/xiqLicenseSetup.jsp?setupMode=Airgap)

Welcome to ExtremeCloud IQ - Site Engine

**Air Gap License Entitlements**

Enter the entitlement(s) for your air gapped ExtremeCloud IQ - Site Engine.  
 After adding entitlements to the table below, click the Continue button to log in to ExtremeCloud IQ - Site Engine.  
 ExtremeCloud IQ - Site Engine serial number (Locking ID, UUID): **XIQSE-4464725328CD4130B8D425187D41000**

Don't have a license file? [Generate here](#)

Entitlements

Drag and drop a license entitlement file into this zone or click here to paste license entitlements.

| Feature         | License Name | Type         | Quantity  | Start Date             | End Date               | Description                                    |  |
|-----------------|--------------|--------------|-----------|------------------------|------------------------|------------------------------------------------|--|
| PRD-XIQ-NAV-S-C | XIQ-NAV-S-C  | Subscription | 20        | 11/14/2021 07:00:00 PM | 11/15/2022 06:59:00 PM | ExtremeCloud IQ - Site Engine - Navigator      |  |
| PRD-XIQ-PIL-S-C | XIQ-PIL-S-C  | Subscription | Unlimited | 11/14/2021 07:00:00 PM | 11/15/2022 06:59:00 PM | ExtremeCloud IQ - Site Engine - Pilot          |  |
| PRD-XIQ-NAC-S   | XIQ-NAC-S    | Subscription | 100,000   | 11/14/2021 07:00:00 PM | 11/15/2022 06:59:00 PM | ExtremeCloud IQ - Site Engine - Access Control |  |

Displaying 3 rows

**Continue**

5. Copy the ExtremeCloud IQ Site Engine serial number (Locking ID, UUID) from the entitlements screen


6. Generate a license file. Follow the license generation procedure in section *Air gap deployment mode: Generate and Install the License File* found in the [Activation Instructions](#) guide
7. Drag and drop the license file in the **Entitlements** section of the **Air Gap License Entitlements** screen (see [step 4](#)).
8. Click **Continue**
9. Restart your ExtremeCloud IQ Site Engine server.

After the restart, your Site Engine is ready to use.

## Convert from Air Gap to Connected deployment

Follow this procedure if you need to convert from Air Gap mode to Connected mode.

1. Check the connectivity from ExtremeCloud IQ Site Engine to ExtremeCloud IQ. If there is a connectivity issue, fix it before continuing.
2. Make all of the devices managed or delete all unmanaged devices from ExtremeCloud IQ Site Engine.

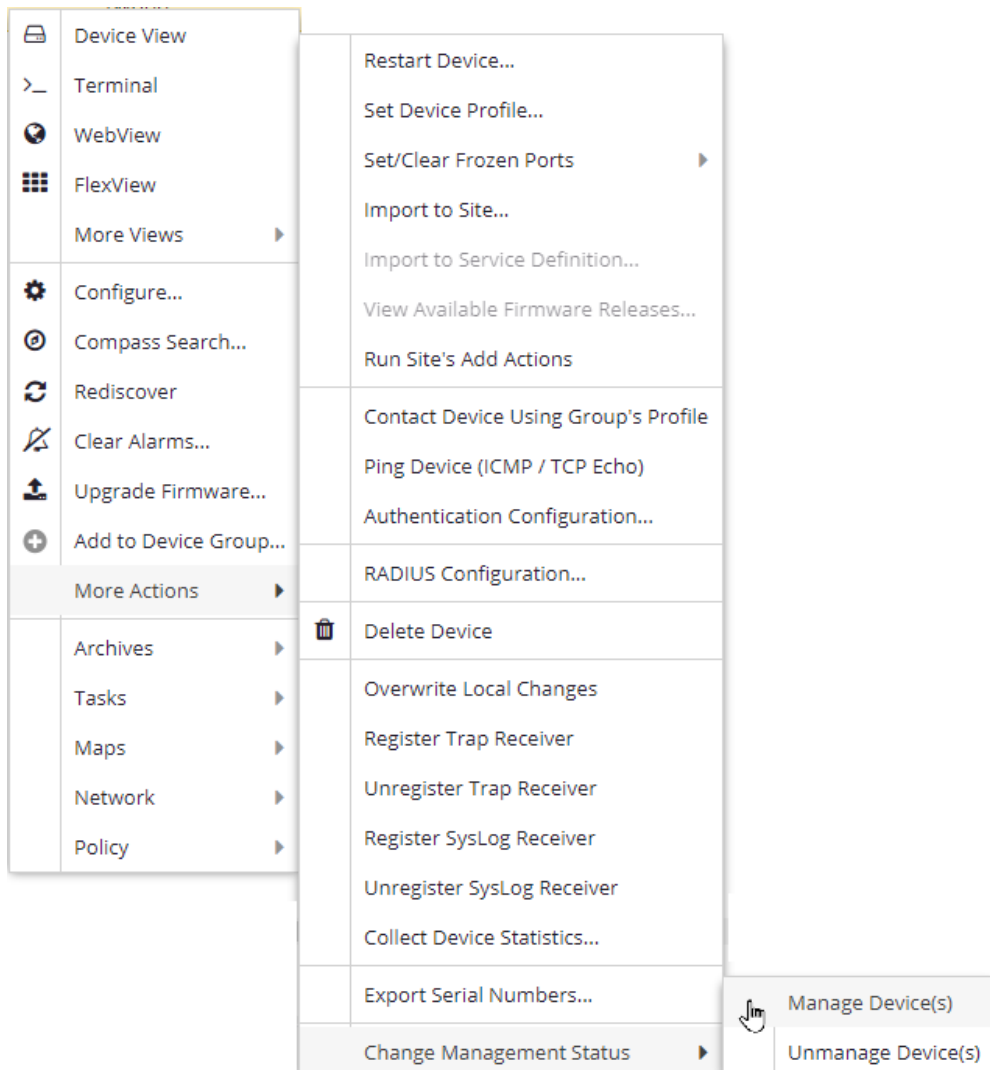

3. Revoke all Air Gap licenses. For information on how to revoke the licenses, see [Revoke Air Gap License](#).
4. Go to `HTTPS://<SiteEngineIP>:8443/xiqLicenseSetup.jsp?setupMode=Auto`
5. If you do not have an ExtremeCloud IQ account, then you need to create one.

6. If your ExtremeCloud IQ account is not linked to your Extreme Portal account, follow the procedure in the [Activation Instructions](#).
7. Onboard ExtremeCloud IQ Site Engine to ExtremeCloud IQ. For more information on how to onboard Site Engine, see [Logging into ExtremeCloud IQ - Site Engine](#).
8. Restart your ExtremeCloud IQ Site Engine server.

After the restart, your Site Engine is ready to use.

## MySQL to PostgreSQL Data Migration (For Upgrades from ExtremeCloud IQ Site Engine 24.2 to 24.7 or up to 25.8)

The following data migration procedure is required for ExtremeCloud IQ Site Engine upgrades from version 24.2 to version 24.7 (or up to 25.8) due to a database engine change from MySQL to PostgreSQL. You can upgrade the Application Analytics Engine, Access Control Engine, and Traffic Sensor the standard way, by either using the firmware upgrade feature or by running the upgrade binary manually.

If you need to migrate data across the same versions of ExtremeCloud IQ Site Engine 24.7 or later, see [Data Migration to Rehost a Matched Version Instance of ExtremeCloud IQ Site Engine](#).

---

Backups from ExtremeCloud IQ Site Engine version 24.2 and earlier (MySQL) are not compatible with ExtremeCloud IQ Site Engine version 24.7 and later (PostgreSQL).


**IMPORTANT:** To migrate a 24.2 backup, you must restore the 24.2 backup to an active running configuration of ExtremeCloud IQ Site Engine version 24.2, and then perform the following MySQL to PostgreSQL data migration procedure.

**The following data migration procedure is not supported in version 25.11 and later. You must migrate your data from 24.2 to 24.7 (or up to 25.8) before installing 25.11 and later.**

---

### Migration Steps

1. Ensure the source server for the migration is currently running ExtremeCloud IQ Site Engine version 24.2.
  - If the source server is not running ExtremeCloud IQ Site Engine version 24.2, then check [Important Upgrade Information](#) for more information about the intermediate steps.
  - The following flowchart shows the supported upgrade paths for a data migration to ExtremeCloud IQ Site Engine version 24.7:

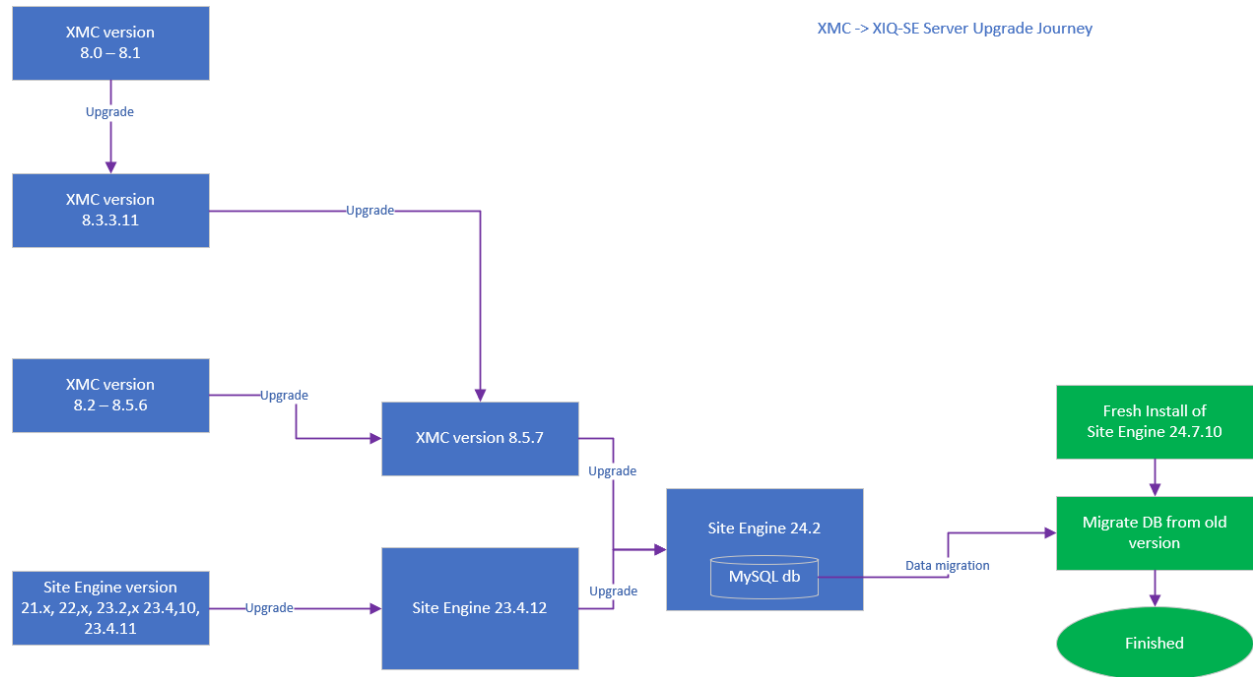

2. Ensure you have a backup of the ExtremeCloud IQ Site Engine version 24.2 configuration with **Administration > Backup/Restore**.
3. Ensure TCP ports 22 and 4589 are open without any firewall or ACLs blocking the ports for communication. The migration script connects to the source server on those ports.
4. Deploy and start a new installation of ExtremeCloud IQ Site Engine version 24.7 (or up to 25.8), connect to the console, and login.
5. Follow the installation wizard. All parameters the wizard prompts for are the final desired state, except for the IP settings. **IMPORTANT:** You must provide a temporary IP address for the new installation until the data is migrated from the source server.
  - The current or original settings of your MySQL based ExtremeCloud IQ Site Engine can be found in `/usr/postinstall/dnetconfig.properties`.
6. After providing all required information to the installation wizard, wait for the installation to complete with the following output:

```

=====
Extreme Networks, Inc. - ExtremeCloud IQ - Site Engine - Setup Complete
=====
Setup of the ExtremeCloud IQ - Site Engine is now complete. The appliance is
now operational and ready to accept remote connections. Details of
the installation are located in the /var/log/install directory.
=====

To access the GUI, navigate your browser to "https://          :8443" and continue
there. To migrate from existing ExtremeCloud IQ - Site Engine version 24.2 continue
by executing /usr/local/Extreme_Networks/NetSight/scripts/migrateFromVersion24_2.sh
and follow the instructions.
=====
root@xiqseappliance:~#

```

7. The installation wizard might have configured one account for SCP and SFTP already. If the Inventory Manager is configured to use different SCP and SFTP accounts, create the accounts in the Operating System before the migration. You can use the command `sudo adduser mySCPuser`.
8. Run the following commands in the ExtremeCloud IQ Site Engine version 24.2 (source of the migration).

```

cd /usr/local/Extreme_Networks/NetSight/scripts
sudo ./permitSQLAccessForMigration.sh

```

The version 24.2 source server stops and remote access to MySQL is granted:

```

**** Extreme Networks ****

This is the ExtremeCloud IQ - Site Engine 24.2.10.90. Alter files with caution.

WWW Site:      http://www.extremenetworks.com
Support Email: support@extremenetworks.com
Phone:         +1 800-998-2408

*****

root@Mysql-xiqse:~# cd /usr/local/Extreme_Networks/NetSight/scripts/
root@Mysql-xiqse:/usr/local/Extreme_Networks/NetSight/scripts# sudo ./permitSQLAccessForMigration.sh

mysql: [Warning] Using a password on the command line interface can be insecure.
The server is now stopped. Remote access to MySQL is now enabled.
If any firewall is used then adjust firewall rules before the migration.
The access can be revoked by executing the script denySQLAccessForMigration.sh.
root@Mysql-xiqse:/usr/local/Extreme_Networks/NetSight/scripts#

```

9. Start the data migration by running the following command in the new installation of ExtremeCloud IQ Site Engine (destination of the migration):

```

sudo /usr/local/Extreme_Networks/NetSight/scripts/migrateFromVersion24_
2.sh -s <IP-of-the-source> -u <username-for-OS-access>

```

Optional additional command syntax parameters are:

- **--noAnalytics** to skip migration of Analytics data
  - **--noNACHistory** to skip migration of NAC end-system history
  - **--noStats** to skip migration of device and port statistics
  - **--timeout** to change the timeout value in seconds for the data transfer from the MySQL server (default timeout is 120 seconds)
10. Provide the password to access the Operating System by SSH/SCP when prompted.
  11. The data migration is in process. Wait until the migration process finishes and the following prompt is returned:

```

root@psql-SiteEngine:~# sudo /usr/local/Extreme_Networks/NetSight/scripts/migrateFromVersion24_2.sh
-s 10.10.10.10 -u root
Ensure the permitSQLAccessForMigration.sh was executed on the source server.
Enter ssh password for root@10.10.10.10:
Remote server version 24.2 validated.
Please wait, stopping the nsserver process on this machine before the data migration starts.
Initializing new database.
Migrating database from 24.2.
Progress: |████████████████████████████████████████████████████████████████████████████████| 100.00% Complete
Successfully migrated database from 24.2.
Partitioning reporting data.
Progress: |████████████████████████████████████████████████████████████████████████████████| 100.00% Complete
Successfully repartitioned reporting data.
Partitioning endpoint data.
Progress: |████████████████████████████████████████████████████████████████████████████████| 100.00% Complete
Successfully repartitioned endpoint data.
Final schema adjustments.
Final schema adjustments successful.
Migrating files from 24.2.
Progress: |████████████████████████████████████████████████████████████████████████████████| 100.00% Complete
Done migrating files from 24.2.
Migrating database files from 24.2.
Progress: |████████████████████████████████████████████████████████████████████████████████| 100.00% Complete
Done migrating database and server files from version 24.2.

Here are the recommended next steps:
1. Wait for the nsserver process to be started on this machine again
2. Log in to the OneView on this machine and check you have all the data you expected
3. Shutdown the source server running version 24.2
4. Execute dnetconfig from the console and reconfigure the IP address of this server to use the same
   IP as the source server was using
5. Continue with the upgrade of Engines you may have (Access Control Engines, Analytics Engines)

Check more details in the documentation:
https://emc.extremenetworks.com/content/oneview/install/migration_from_24_2.htm
root@psql-SiteEngine:~#

```

The nsserver process automatically starts with the migrated data

12. Log in to the new installation of ExtremeCloud IQ Site Engine and check you have all the data you expected to be migrated from version 24.2.
13. Change the IP address of the source server running ExtremeCloud IQ Site Engine version 24.2 to some unused available IP by running `sudo /usr/postinstall/dnetconfig`. Change the IP address so that If you need to start this machine again, you will not have a duplicate IP address scenario.
14. Shutdown the source server running ExtremeCloud IQ Site Engine version 24.2

15. Run `sudo /usr/postinstall/dnetconfig` from the console and reconfigure the IP address of the new installation of ExtremeCloud IQ Site Engine to use the IP address previously configured to the shut down ExtremeCloud IQ Site Engine version 24.2.
16. Use the reconfigured IP address to re-connect to the new installation ExtremeCloud IQ Site Engine GUI.
17. Continue with a traditional upgrade of other Engines you might have (Access Control Engines, Analytics Engines, Traffic Sensor, etc), the minimum version is 24.2.13.
18. Navigate to **Administration > Backup/Restore > Backup**, and create a new backup of the new installation ExtremeCloud IQ Site Engine configuration.

## Notes:

- Migration takes data from the MySQL database, not from the backup. Backups are not migrated.
- After changing the IP address, be aware that the new system has a new MAC address (the MAC is not cloned), if static ARPs are used, update your arp cache on your router.
- Historical Syslog events are not migrated
- Backups from ExtremeCloud IQ Site Engine based on MySQL (version 24.2 and earlier) are not compatible with ExtremeCloud IQ Site Engine based on PostgreSQL (version 24.7 and later). To migrate a 24.2 backup you first need to restore to an active configuration of ExtremeCloud IQ Site Engine running version 24.2 and run the migration procedure.
- Custom reports (`/usr/local/Extreme_Networks/NetSight/appdata/OneView/MyReports`) are not migrated. If you use custom reports using SQL commands they need to be adjusted.
- If SCP is used for inventory manager, it might be beneficial to copy ssh keys and settings by:  
`sudo scp -r root@<IP-of-the-source>:/etc/ssh /etc/`
- Local user accounts created in the operating system manually are not automatically migrated. It might be necessary to create local users again in the new system.
- The following features are transferred during the migration:
  - Vendor Profile definition  
 (`~/NetSight/appdata/VendorProfiles/Stage/MyVendorProfile`)
  - Custom Mibs (`~/NetSight/appdata/System/mibs/MyMibs`)
  - Custom FlexViews (`~/NetSight/appdata/System/FlexViews/My FlexViews`)
  - Archives (the path is defined in Administration > Options > Inventory Manager > Data Storage)
  - Configuration templates (the path is defined in Administration > Options > Inventory Manager > Data Storage)

- TFTP Firmware files (path is defined in Administration > Options > Inventory Manager > File Transfer)
  - FTP Firmware files (path is defined in Administration > Options > Inventory Manager > File Transfer)
  - SCP Firmware files (path is defined in Administration > Options > Inventory Manager > File Transfer)
  - SFTP Firmware files (path is defined in Administration > Options > Inventory Manager > File Transfer)
  - Connect module configuration  
(~/NetSight/wildfly/standalone/configuration/connect/)
  - Custom Analytics Fingerprints (~/NetSight/appdata/Purview/MyFingerprints/)
  - Licenses (~/NetSight/appdata/license)
  - Events/logs (the path is in Alarms & Events > Event Configuration > Event Logs)
  - TFTPd settings (~/NetSight/services/nstftpd.cfg)
  - SNMPtrapd settings (~/NetSight/appdata/snmptrapd.conf)
  - NAT config settings (~/NetSight/appdata/nat\_config.txt)
  - Private certificate  
(~/NetSight/wildfly/standalone/configuration/nsserver.keystore)
  - Custom scripts (~/NetSight/appdata/scripting/overrides)
  - Custom CLI scripts (~/NetSight/appdata/CommandScriptTool/overrides)
  - PolicyMgr port templates (~/NetSight/appdata/PolicyMgr/authTemplates)
- If there are other customizations like custom scripts in the file system then you must move those customizations manually

## Post-Migration Known Issues

### Known Issue 1:

Access Control "Enforce Preview" may show a line similar to the following:

```
Removed engine property: MGT_SVR_JMS_USERNAME MGMT_IP_AT_PREVIOUS_ENFORCE
MGT_SVR_JMS_PASSWORD VERSION_AT_PREVIOUS_ENFORCE FAILED_SWITCH_
CONFIG_LIST DB_ENCRYPTED_MGT_SVR_JMS_PASSWORD VERSION_AT_PREVIOUS_
SWITCH_CONFIGURATION
```

**Resolution:** You can safely ignore this line, the engine(s) enforced without issue.

### Known Issue 2:

Access Control "Enforce Preview" may show a line similar to the following:

AAA Configuration TEAP Chaining Mode mode: DEF\_TEAP\_MSCHAP\_MSCHAP, changing to: null

**Cause:** If AAA configurations were not saved on the original server prior to migration, this line appears on the new server in Enforce Preview.

**Resolution:** In each AAA configuration in Access Control (Configuration > AAA), save the configuration. If the "Save" button is not available, undo and redo a change in the configuration to activate the button, then Save. The line should no longer appear in the Enforce Preview.

### Known Issue 3:

Access Control "Enforce Preview" may show a line similar to the following:

Removed Assessment Server Pools: Local Global

Removed Assessment Servers: Agent-based Assessment Agent-less Assessment

**Resolution:** You can safely ignore this line, the engine(s) enforced without issue.

## Migration for Hardware Appliances

You have two procedure options for migrating a ExtremeCloud IQ Site Engine hardware appliance, in each option a temporary VM or hardware appliance is required:

### Option 1 - Migrate to a Temporary ExtremeCloud IQ Site Engine then Move

1. Acquire a secondary hardware appliance or deploy a virtual machine to host a temporary instance of ExtremeCloud IQ Site Engine 24.7 (or up to 25.8).
2. Perform the [Migration Steps](#) procedure to migrate from the original hardware appliance to the temporary instance of ExtremeCloud IQ Site Engine 24.7 (or up to 25.8), then return here.
3. Manually offload all the customized features and files as noted from the source server; optionally restore the offloaded customized features and files to the temporary ExtremeCloud IQ Site Engine instance.
4. Verify the temporary ExtremeCloud IQ Site Engine instance is operating as expected after shutting down the original hardware appliance.

**NOTE:** If you deployed a new hardware appliance intended to directly replace the original hardware appliance, then the migration is complete and you can skip the following steps.

**IMPORTANT:** After performing the following step, the system data is erased from the original source server. Ensure all data, manual files, etc are transferred off the source server original hardware appliance before performing the next steps.

5. Re-image the original hardware appliance using the ExtremeCloud IQ Site Engine 24.7 (or up to 25.8) USB / ISO image.
6. Perform a database backup on the temporary ExtremeCloud IQ Site Engine.
7. Offload the database backup from the temporary ExtremeCloud IQ Site Engine and restore the backup to the re-imaged original hardware appliance.
8. Restore all the customized features and files to the re-imaged original hardware appliance.
9. Confirm the re-imaged hardware appliance is operating as expected with migrated and restored data on ExtremeCloud IQ Site Engine 24.7 (or up to 25.8).

## Option 2 - Move to a Temporary ExtremeCloud IQ Site Engine then Migrate

1. Deploy a temporary ExtremeCloud IQ Site Engine 24.2.15 virtual machine.
2. Perform a database backup on the original ExtremeCloud IQ Site Engine 24.2.15 hardware appliance.
3. Offload the database backup from the original hardware appliance and restore to the temporary ExtremeCloud IQ Site Engine 24.2.15 virtual machine.
4. Manually offload all the customized features and files as noted; Optionally (recommended) restore the customized features and files to the temporary ExtremeCloud IQ Site Engine 24.2.15 virtual machine.
5. Verify the temporary ExtremeCloud IQ Site Engine 24.2.15 virtual machine instance is operating as expected after shutting down the original hardware appliance.

**IMPORTANT:** After performing the following step, the system data is erased from the original source server. Ensure all data, manual files, etc are transferred off the source server original hardware appliance before performing the next steps.

6. Re-image the hardware appliance using the ExtremeCloud IQ Site Engine 24.7 (or up to 25.8) USB / ISO image.
7. Perform the [Migration Steps](#) procedure and migrate from the temporary ExtremeCloud IQ Site Engine 24.2.15 virtual machine to the re-imaged hardware appliance, then return here.
8. Restore all the customized features and files to the re-imaged original hardware appliance.
9. Confirm the re-imaged hardware appliance is operating as expected with migrated and restored data on ExtremeCloud IQ Site Engine 24.7 (or up to 25.8).

## Data Migration to Rehost a Matched Version Instance of ExtremeCloud IQ Site Engine

You can migrate data across the same version of ExtremeCloud IQ Site Engine to a new instance running on a new host. Use this procedure if you need to migrate your data across the matched version of ExtremeCloud IQ Site Engine 24.7 or later. Use this procedure for scenarios such as migrating from VM to physical, from physical to virtual, for a host OS change, or to migrate to a new host on a different network environment or location.

If you need to migrate data from an old version to a new version of ExtremeCloud IQ Site Engine for an upgrade, go see [MySQL to PostgreSQL Data Migration \(For Upgrades from ExtremeCloud IQ Site Engine 24.2 to 24.7 or up to 25.8\)](#)

### Migration Steps:

1. Ensure you have a backup of the ExtremeCloud IQ Site Engine configuration with **Administration > Backup/Restore**.
2. Install a new ExtremeCloud IQ Site Engine, use the [ExtremeCloud IQ Site Engine Suite Installation](#) procedure.
3. Complete the installation wizard. If you need original values then check these files in your migration source:  
`/usr/postinstall/dnetconfig.properties`  
`/usr/postinstall/snmpconfig.properties`
4. Copy the backup to the new installation.
5. Restore the backup onto the new system through CLI, see [Restoring the Database Using the CLI](#).
6. As necessary, re-create local accounts in the Operating System of the new installation. The local accounts defined in the Operating System are not part of the backup. For reference, the `/etc/passwd` file contains local accounts known to the operating system.
7. If SCP is used for inventory manager, copy the SSH keys and settings with the command:  
`sudo scp -r root@<IP-of-the-source>:/etc/ssh /etc/`
8. Copy additional files from the source instance that are not part of the backup:
  - Custom Mibs (`~/NetSight/appdata/System/mibs/MyMibs`)
  - TFTP Firmware files (path is defined in Administration > Options > Inventory Manager > File Transfer)
  - FTP Firmware files (path is defined in Administration > Options > Inventory Manager > File Transfer)

- SCP Firmware files (path is defined in Administration > Options > Inventory Manager > File Transfer)
  - SFTP Firmware files (path is defined in Administration > Options > Inventory Manager > File Transfer)
  - Licenses (~/.NetSight/appdata/license)
  - Events/logs (the path is in Alarms & Events > Event Configuration > Event Logs)
  - TFTPd settings (~/.NetSight/services/nstftpd.cfg)
  - SNMPtrapd settings (~/.NetSight/appdata/snmptrapd.conf)
  - NAT config settings (~/.NetSight/appdata/nat\_config.txt)
  - Custom CLI scripts (~/.NetSight/appdata/CommandScriptTool/overrides)
  - Custom FlexViews not part of the VendorProfiles (~/.NetSight/appdata/System/FlexViews/My FlexViews)
  - Logs (~/.NetSight/appdata/logs and all subdirectories)
9. Check and transfer any custom modifications you might have in:
    - NSJBoss.properties (~/.NetSight/appdata/NSJBoss.properties)
    - snmptrapd.conf (~/.NetSight/appdata/snmptrapd.conf)
    - If you customized the file ~/.NetSight/services/nstftpd.cfg. Verify it matches the Firmware Directory Path specified in the TFTP Transfer Settings option in Inventory Manager (Tools > Options > Inventory Manager > File Transfer Settings > TFTP Transfer Settings).
  10. Check for and transfer over any other customizations, such as custom scripts in the file system.
  11. Configure the server certificate trust mode on the ExtremeCloud IQ Site Engine to handle the certificates it receives from other servers. Required if you have Access Control Engines or Application Analytics Engines or connect to LDAP servers, and you want the server certificate trust mode to be "Locked." For more information, see the section of the ExtremeCloud IQ Site Engine and ExtremeControl Secure Communication Help topic.
    - a. Configure the ExtremeCloud IQ Site Engine with the Server Certificate Trust Mode set to "Trust All" (the default). Trust All avoids certificate trust problems while the server is being configured.
    - b. Once the server is configured and communicating with other servers and engines as necessary, you can transition the Server Certificate Trust Mode to "Trust And Record" where the server learns the certificates it expects to receive, and then transition to "Locked" when the certificate learning is completed.