


# SLX 9150 Switches Quick Reference

Follow these steps to get your switch ready for use.

For complete installation instructions see the *ExtremeSwitching SLX 9150 Hardware Installation Guide* at [www.extremenetworks.com/documentation](http://www.extremenetworks.com/documentation)

## Necessary Tools

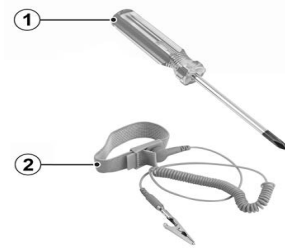


- 1 #2 Phillips screwdriver (magnetic screwdriver recommended)
- 2 ESD-protective wrist strap

## 1 Prepare the Site


The installation site must meet the following requirements:

- Appropriately grounded power receptacles located within 1.8 m (6 ft.)
- A readily accessible device for disconnecting power, such as a breaker or master switch
- Network cabling within reach
- Clearance of at least of 7.6 cm (3.0 in.) on all sides, for proper ventilation
- Temperature between 0°C (32°F) and 40°C (104°F) -- or as noted in "Operating Temperature:" -- with fluctuations of less than 10°C (18°F) per hour

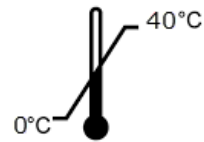


## 2 Unpack the Box

Remove the packing material, and then verify that all of the following components are included:

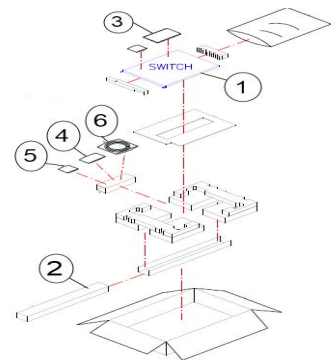

- 1 Switch
- 2 4-post Rack Mount Kit
- 3 Slider assembly
- 4 Mounting ears
- 5 Mounting ear screws
- 6 Console cable

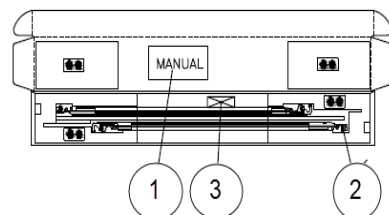

- 1 Rack Mount Kit Quick Reference
- 2 Slide assemblies
- 3 Screw sack

If the switch appears to be damaged, contact Extreme Networks. See "Getting Help" for more information.

Extreme Networks does not include power input cords with this product. To purchase the correct power cord for your country, refer to [www.extremenetworks.com/product/powercords/](http://www.extremenetworks.com/product/powercords/).

## 3 Install the Switch


You can install any SLX 9150 Switch in a standard 19-inch equipment rack.

Mount your SLX 9150 Switch in a standard equipment rack, in either of the following ways:

- Four-post mount, using the mounting kit provided.
- Two-post mount, using mounting brackets (not provided) to attach the front or the middle of the switch to the posts.

### Four-Post Mount

- 1 On the sides of the switch, locate and remove the 2 black screws next to the data ports of the switch. Repeat as needed for the opposite side.
- 2 Using the provided mounting ear screws, attach each of the mounting ears using the holes exposed in the previous step. The mounting ears should be flush with the faceplate of the switch.
- 3 Extend the slider assemblies to their fullest extent. Locate the small white release tab on the mounting bracket and push it toward the blue release tab, allowing the mounting bracket to slide the rest of the way off the slider assembly. Repeat this step for the other assembly.
- 4 Attach a mounting bracket to each side of the switch housing, using the screws provided. The blue tab should be close to the mounting ear and away from the switch.
- 5 Attach the slider assemblies to the front and rear rack posts, clicking into place at each end.
- 6 Locate the intermediate rail inside each slider assembly and pull it out to its fullest extent. (It remains attached to the slider assembly.)
- 7 Push the switch in until both mounting brackets engage with the sliding rails.
- 8 Release the tabs on both slider assemblies, and carefully push the switch back until it is firmly in place.

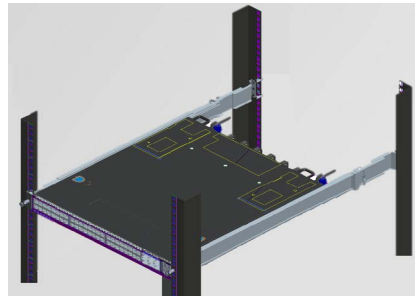


- 9 Screw the mounting ear thumbscrews into the rack rails to hand tightness.

### Two-Post Mount

Note: The following diagram shows a mid-mounted configuration. The brackets also support a front-mounted configuration.

- 1 Attach a mounting bracket to each side of the switch. You can attach the brackets at the middle of the switch, as shown, or at the front

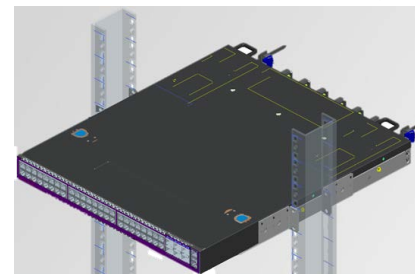

- 2 Secure the brackets to the rack posts, using rack-mounting screws that are appropriate for the rack (not provided).
- 3 Attach a mounting bracket to one side of the switch, so that its flange (ear) aligns with the rack post. Then secure it to the rack post.
- 4 Attach a mounting bracket to the other side of the switch and then to the rack post.

## 4 Install Transceivers

(Optional) Transceivers can send and receive data over optical fiber rather than through electrical wires. This installation procedure applies to all transceivers.

**Note:** Transceivers are Class 1 or Class 1M laser devices.

- 1 Attach the ESD wrist strap to your wrist and connect the metal end to an appropriate ground point on the rack.
- 2 Remove the transceiver from its packaging.
- 3 If applicable, remove the protective dust cover from the connector.
- 4 Hold the transceiver so that the connector will seat properly.
- 5 Carefully align the transceiver with the port slot.
- 6 Push the transceiver into the port slot until it clicks into place.

## 5 Connect Power

SLX 9150 Switches can run on AC or DC power. Connect the switch to a primary power source.



**Note:** Installing the system as described in this guide meets the protective earth grounding requirements of the National Electrical Code (NEC) UL 60950 and IEC 60950 standards. However, in some cases, it may be necessary to use an alternative grounding method. In these cases, a 14 AWG wire can be connected between the grounding lug on the chassis and a nearby building ground point.

### Connecting to the Primary Power Source

To attach your SLX 9150 Switch to a power source, do the following:

- 1 Connect the AC power cord to the AC power input socket on the power supply and an AC power outlet.
- 2 For DC powered supplies, verify that the DC circuit is de-energized and then do the following:
  - a Identify the grounding stud on the DC power supply. The grounding stud is next to the DC input connector, identified by the international symbol for earth ground.
  - b Using the nut and washer provided, connect the ring terminal end of the ground wire to the grounding stud on the DC power supply. Use green and yellow stranded copper wire, sized at least 14 AWG.
  - c Connect the other end of the ground wire to a reliable earth ground.
  - d Connect the DC power input cables to the DC input connector. Use copper wires rated for at least 60°C and sized between 14 AWG and 8 AWG.
  - e Energize the circuit.
- 3 When power is connected, verify that the switch's PWR LED turns green. If the PWR LED does not turn green, refer to the *Hardware Installation Guide* for troubleshooting information.

## 6 Configure the Switch

To connect the switch to the network and configure it for use, follow the steps in the *Hardware Installation Guide* for this release, found under an SLX heading at [www.extremenetworks.com/documentation/product-type/hardware/](http://www.extremenetworks.com/documentation/product-type/hardware/).

### Safety Notices



**Caution! Shock hazard!**  
Disconnect all power inputs before servicing.



**Electrical Hazard:** Only qualified instructed or skilled personnel should perform installation, repair, or disassembly procedures.  
**Risques d'électrocution:** Seul un personnel qualifié ou qualifié doit effectuer les procédures d'installation, de réparation ou de démontage.



**Warning:** Extreme Networks power supplies do not have switches for turning the unit on and off. Before servicing, disconnect all power cords to remove power from the device. Make sure that these connections are easily accessible.  
**Avvertimento:** Extreme Networks alimentazioni non sono dei interruttori per allumer l'appareil et en dehors. Avant l'entretien, débranchez tous les cordons d'alimentation pour couper l'alimentation de l'appareil. Assurez-vous que ces connexions sont facilement accessibles.



**Warning:** This equipment is designed for installation in restricted access locations and suitable for installation in Information Technology Rooms in accordance with Article 645 of the National Electrical Code and NFPA 75, not suitable for use in locations where children are likely to be present.  
**Avvertimento:** Cet équipement est conçu pour être installé dans des endroits à accès restreint et peut être installé dans des salles informatiques conformément à l'article 645 du Code national de l'électricité et à la norme NFPA 75, ne pouvant être utilisé dans des endroits où des enfants sont susceptibles d'être présents.



**Warning:** A dedicated Listed circuit breaker rated at 15A is to be used for each power supply connection.  
**Avvertimento:** Un disjoncteur cotée dédiée évalué à 15A doit être utilisée pour chaque connexion d'alimentation.



**Caution:** Before mounting the device, ensure that the rack can support it without compromising stability. Otherwise, personal injury or equipment damage may result.



**Caution:** Follow appropriate ESD procedures when unpacking and handling the switch. These include unpacking the switch in an ESD-safe environment and wearing appropriate ESD protective gear, such as ESD-safe footwear and ESD wrist straps where appropriate.



**Caution:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.




**Warning:** Do not use optical instruments to view the laser output. The use of optical instruments to view laser output increases eye hazard. Use only UL/CSA, IEC/EN60825-1/-2 recognized pluggable modules.

**Avvertimento:** Ne pas utiliser d'instruments optiques pour voir la sortie du laser. L'utilisation de instruments optiques pour afficher la sortie laser augmente les risques oculaires. Utilisez uniquement UL/CSA, IEC/EN60825-1/-2 reconnu modules enfichables.


## Hardware Components

Figure 1 SLX 9150 Switch: Front Panel

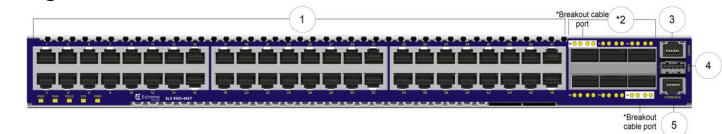

- 1 1/10GBase-T RJ-45 ports
- 2 40/100Gbps QSFP28 ports
- 3 Management port
- 4 USB port
- 5 Console port

Figure 2 SLX 9150 Switch: Rear Panel

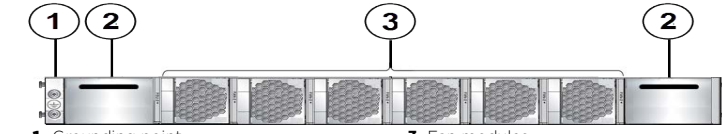

- 1 Grounding point
- 2 Power supply slots
- 3 Fan modules

For component details, see the *Hardware Installation Guide*.

## Operating Conditions

### Operating Temperature:

Front-to-back:  
0°C (32°F) to 50°C (122°F) up to 1800 m (6000 ft)  
0°C (32°F) to 45°C (113°F) above 1800 m (6000 ft), up to 3000m (10,000 ft)  
Back-to-front:  
0°C (32°F) to 45°C (113°F) up to 1800 m (6000 ft)  
0°C (32°F) to 40°C (104°F) above 1800 m (6000 ft), up to 3000m (10,000 ft)

### Storage Temperature:

-40°C to 70°C (-40°F to 158°F)

### Operating Relative Humidity:

5% to 95% (non-condensing)

## Interfaces

Each SLX 9150 Switch has a management port, a console port, and a USB port. A four-post mounting kit (part no. XN-4P-RKMT298) is provided with each switch.

The following table lists the specific interfaces for each switch.

SLX9150-48XT-6C (SLX 9150-48XT base)	48 1/10GBase-T RJ-45 ports, 6 40/100Gbps QSFP28 ports, octal core CPU, 16GB RAM, 128GB SSD, 2 unpopulated power supply slots, 6 unpopulated fan slots.
SLX9150-48XT-6C-AC-F (SLX 9150-48XT front-to-back airflow)	48 1/10GBase-T RJ-45 ports, 6 40/100Gbps QSFP28 ports, octal core CPU, 16GB RAM, 128GB SSD, dual 750W AC power supply units, 6 fan units, front-to-back airflow.
SLX9150-48XT-6C-AC-R (SLX 9150-48XT back-to-front airflow)	48 1/10GBase-T RJ-45 ports, 6 40/100Gbps QSFP28 ports, octal core CPU, 16GB RAM, 128GB SSD, dual 750W AC power supply units, 6 fan units, back-to-front airflow.
SLX9150-48XT-DC-R (SLX 9150-48XT back-to-front airflow)	48 1/10GBase-T RJ-45 ports, 6 40/100Gbps QSFP28 ports, octal core CPU, 16GB RAM, 128GB SSD, dual 750W DC power supply units, 6 fan units, back-to-front airflow.

## Power Specifications

All models	AC Input: 100-120/200-240Vac, 50-60Hz, 3.5/1.8 A Max. for each PSU DC Input -48 to -60Vdc, 7.5A Max. for each PSU
------------	----------------------------------------------------------------------------------------------------------------------

## Power Supply and Fan Options

XN-ACPWR-750W-F	750W AC power supply, Front-to-Back airflow
XN-ACPWR-750W-R	750W AC power supply, Back-to-Front airflow
XN-DCPWR-750W-F	750W DC power supply, Front-to-Back airflow
XN-DCPWR-750W-R	750W DC power supply, Back-to-Front airflow
XN-FAN-001-F	Fan unit, Front-to-Back airflow
XN-FAN-001-R	Fan unit, Back-to-Front airflow

## Available Rack-Mount Kit

XN-2P-RKMT299	Two-post NEBS kit for SLX9150
---------------	-------------------------------

## Getting Help

For additional support related to SLX 9150 Switches or this document, contact Extreme Networks using one of the following methods:

<b>Product Documentation</b>	<a href="https://www.extremenetworks.com/documentation/">https://www.extremenetworks.com/documentation/</a>
<b>Global Technical Assistance Center (GTAC)</b>	Phone: 1-800-998-2408 (toll-free in U.S. and Canada) or +1-408-579-2826. For the support phone number in your country, visit: <a href="http://www.extremenetworks.com/support/contact/">http://www.extremenetworks.com/support/contact/</a>
<b>GTAC Knowledge</b>	Get on-demand and tested resolutions from the GTAC Knowledgebase, or create a help case if you need more guidance. Visit: <a href="https://gtacknowledge.extremenetworks.com/">https://gtacknowledge.extremenetworks.com/</a>
<b>The Hub</b>	A forum for Extreme customers to connect with one another, get questions answered, share ideas and feedback, and get problems solved. The community is monitored by Extreme Networks employees, but is not intended to replace specific guidance from GTAC. Visit: <a href="https://community.extremenetworks.com">https://community.extremenetworks.com</a>
<b>Support Portal</b>	Manage cases, downloads, service contracts, product licensing, and training and certifications. Visit: <a href="http://support.extremenetworks.com/">http://support.extremenetworks.com/</a>

## Notice

Copyright © 2020 Extreme Networks, Inc. All Rights Reserved.

### Legal Notices

Extreme Networks, Inc. reserves the right to make changes in specifications and other information contained in this document and its website without prior notice. The reader should in all cases consult representatives of Extreme Networks to determine whether any such changes have been made.

The hardware, firmware, software or any specifications described or referred to in this document are subject to change without notice.

### Trademarks

Extreme Networks and the Extreme Networks logo are trademarks or registered trademarks of Extreme Networks, Inc. in the United States and/or other countries.

All other names (including any product names) mentioned in this document are the property of their respective owners and may be trademarks or registered trademarks of their respective companies/owners.

For additional information on Extreme Networks trademarks, please see:

[www.extremenetworks.com/company/legal/trademarks/](http://www.extremenetworks.com/company/legal/trademarks/)

## Warranty

Warranty information for SLX 9150 Switches is located online at:

[www.extremenetworks.com/support/policies/](http://www.extremenetworks.com/support/policies/)

## Regulatory and Compliance Information

### Federal Communications Commission (FCC) Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment uses, generates, and can radiate radio frequency energy and if not installed in accordance with the operator's manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause interference in which case the user will be required to correct the interference at his own expense.

**WARNING:** Changes or modifications made to this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Industry Canada Notice CAN ICES-3 (A)/NMB-3(A)

This digital apparatus does not exceed the class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

### Class A ITE Notice

**WARNING:** This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

### Product Safety

This product complies with the following international safety standards:

- UL 62368-1 2nd Edition, 2014-12-01
- UL 60950-1, 2nd Edition, 2014-10-14
- CAN/CSA C22.2 No. 62368-1-14 2nd Edition
- CAN/CSA C22.2 No. 60950-1-07, 2nd Edition, 2014-10
- IEC 62368-1:2014 (Second Edition)
- IEC 60950-1:2005 (Second Edition) + Am 1:2009 + Am 2:2013
- EN 62368-1:2014/A11:2017
- EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 + A2:2013
- 2014/35/EU
- CNS 14336-1
- GB 4943.1-2011

### Optical Module Compliance

Extreme Networks pluggable optical modules and direct-attach cables meet the following regulatory requirements:

- UL and/or CSA registered component for North America
- Class 1 or Class 1M Laser Product
- FCC 21 CFR Chapter 1, Sub-chapter J in accordance with FDA & CDRH requirements
- IEC/EN 60825-1:2007, IEC/EN 60825-2:2004+A1+A2 or later, European Standard

### Korea EMC Statement

이 기기는 업무용 환경에서 사용할 목적으로 적  
합성평가를 받은 기기로서 가정용 환경에서 사  
용하는 경우 전파간섭의 우려가 있습니다.

### Australia (RCM)


**WARNING:** This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

### Electromagnetic Compatibility (EMC)

This product complies with the following: FCC 47 CFR Part 15 Subpart B Class A (US), ICES-003 (Canada), EN 55032 (ITE Emissions), EN 55024 (ITE Immunity), EN 61000-3-2 (Harmonics), EN 61000-3-3 (Flicker), 2014/30/EU (EMC Directive), EN 300 386 (Telecom), EN 55011 (ISM), EN 61000-6-2 (Ind. Immunity), EN 61000-6-4 (Ind. Emissions), RCM (Australia), VCCI (Japan), MSIP KCC (Korea), BSMI (Taiwan), ANATEL (Brazil), CCC (China), and SABS (South Africa)

### VCCI Notice

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

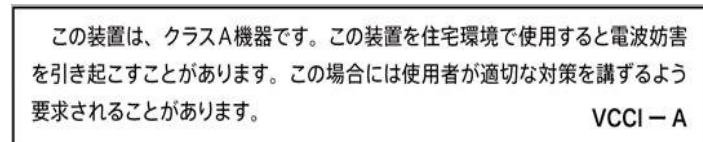

### BSMI EMC Statement – Taiwan

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

### Taiwan BSMI 報關義務人

申請人: 香港商極進網路有限公司台灣分公司

地址: 臺北市松山區復勢里南京東路 4 段 126 號 5 樓

警告使用者：

此為甲類資訊技術設備，於居住環境中使用時，可能會造成射頻擾動，在此種情況下，使用者會被要求採取某些適當的對策。

此为A级产品，在生活环境中，该产品可能会造成无线电干扰。

在这种情况下，可能需要用户对干扰采取切实可行的措施。

### Battery Warning – Taiwan

警告

如果更換不正確之電池型式會有爆炸的風險，

請依製造商說明書處理用過之電池。



**Battery Notice**  
**Warning:** This product contains a battery used to maintain product information. If the battery should need replacement it must be replaced by Service Personnel. Please contact Technical Support for assistance.

Risk of explosion if battery is replaced by an incorrect type. Dispose of expended battery in accordance with local disposal regulations.  
**Avertissement:** Ce produit renferme une pile servant à conserver les renseignements sur le produit. Le cas échéant, faites remplacer la pile par le personnel du service de réparation. Veuillez communiquer avec l'assistance technique pour du soutien. Il y a risque d'explosion si la pile est remplacée par un type de pile incorrect. Éliminez les piles usées en conformité aux règlements locaux d'élimination des piles.

### Hazardous Substances- China and Taiwan BSMI RoHS

Guidance concerning the China and Taiwan BSMI RoHS (Restriction of Hazardous Substances) directive for this Extreme Networks® product can be found on the following web page:

[www.extremenetworks.com/support/documentation/restriction-hazardous-substances/](http://www.extremenetworks.com/support/documentation/restriction-hazardous-substances/)

The page contains tables detailing the presence of 10 substances defined by the RoHS directive.

### Hazardous Substances - EU

This product complies with the requirements of Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

### European Waste Electrical and Electronic Equipment (WEEE) Notice



In accordance with Directive 2012/19/EU of the European Parliament on waste electrical and electronic equipment (WEEE):

- 1 The symbol above indicates that separate collection of electrical and electronic equipment is required.
- 2 When this product has reached the end of its serviceable life, it cannot be disposed of as unsorted municipal waste. It must be collected and treated separately.
- 3 It has been determined by the European Parliament that there are potential negative effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment.
- 4 It is the users' responsibility to utilize the available collection system to ensure WEEE is properly treated.

For information about the available collection system, please contact Extreme Customer Support at +353 61 705500 (Ireland).

